

PERPETUAL
TROUBLE SHOOTER'S MANUAL

Reg. U.S. Pat. Off.

VOLUME XI

by

JOHN F. RIDER



JOHN F. RIDER PUBLISHER, INC.

404 Fourth Avenue

New York 16, N. Y.

Compliments of www.nucow.com

Other Books
by
JOHN F. RIDER

CATHODE-RAY TUBE AT WORK

SERVICING SUPERHETERODYNES

**SERVICING RECEIVERS BY MEANS OF RESISTANCE
MEASUREMENT**

PERPETUAL TROUBLE SHOOTER'S MANUAL

VOLUMES I TO V ABRIDGED (ONE VOLUME)

VOLUME VI

VOLUME VII

VOLUME VIII

VOLUME IX

VOLUME X

VOLUME XI

VOLUME XII

VOLUME XIII

VOLUME XIV

AUTOMATIC RECORD CHANGERS AND RECORDERS

INSIDE THE VACUUM TUBE

ALIGNING PHILCO RECEIVERS, VOLUMES I AND II

AUTOMATIC FREQUENCY CONTROL SYSTEMS

FREQUENCY MODULATION

SERVICING BY SIGNAL TRACING

THE OSCILLATOR AT WORK

THE METER AT WORK

VACUUM TUBE VOLTMETERS

AN HOUR A DAY WITH RIDER

ON

RESONANCE AND ALIGNMENT

AUTOMATIC VOLUME CONTROL

ALTERNATING CURRENTS IN

RADIO RECEIVERS

D-C. VOLTAGE DISTRIBUTION IN

RADIO RECEIVERS

+

A-C. CALCULATION CHARTS

BY

R. LORENZEN



The servicing data appearing on Philco, RCA and other pages carrying individual copyright notices, are copyrighted by the respective companies and are reproduced herein with their permission.

Entire contents copyrighted 1940 by John F. Rider.

Printed in U. S. A.

AIR KING PRODUCTS CORP.







MODEL 914
MODEL 920
Schematics

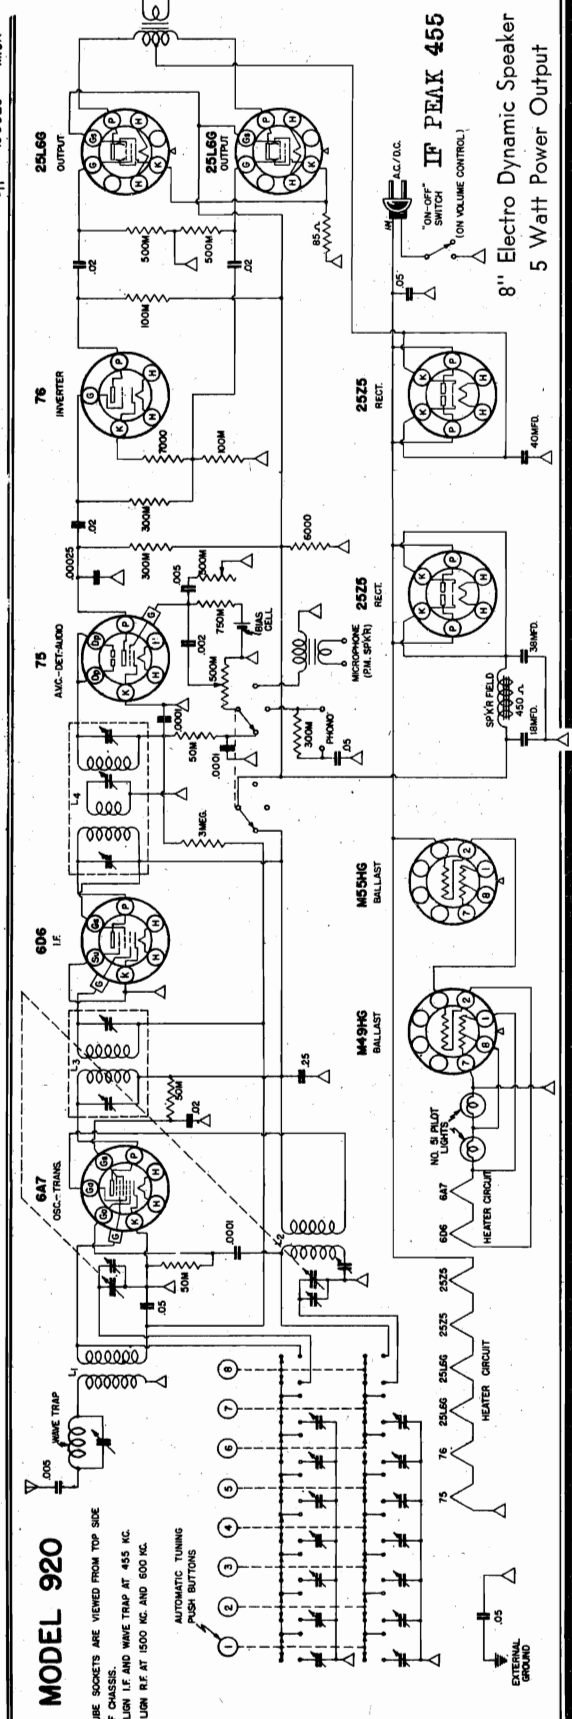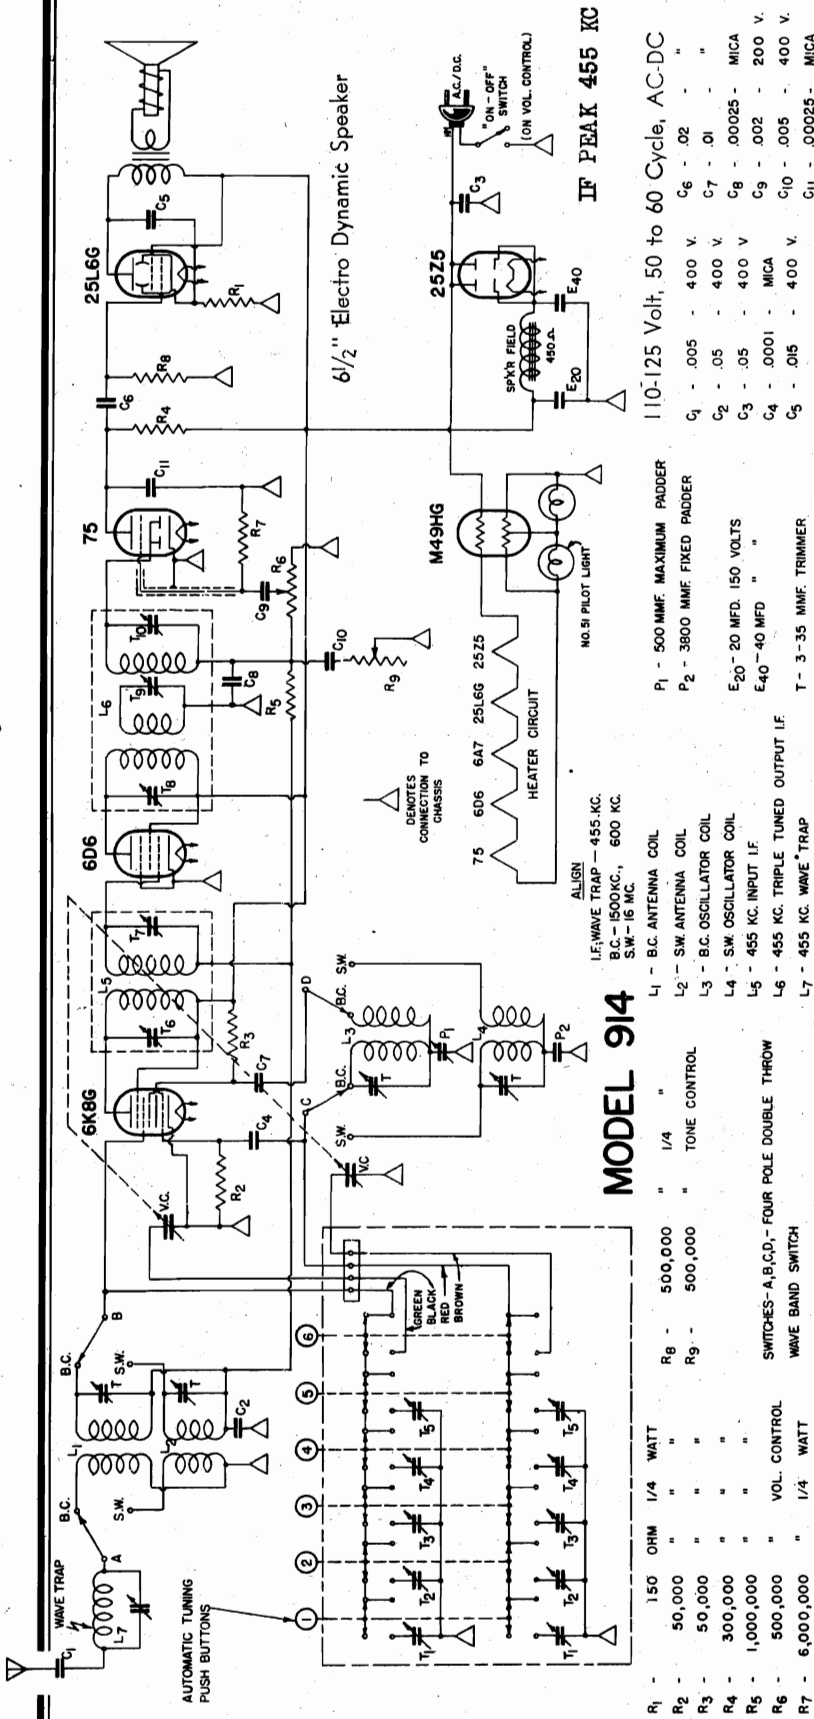

MODEL 3907
MODEL 4000

AIR KING PRODUCTS CORP.

MODEL 4000A
Schematics, Socket

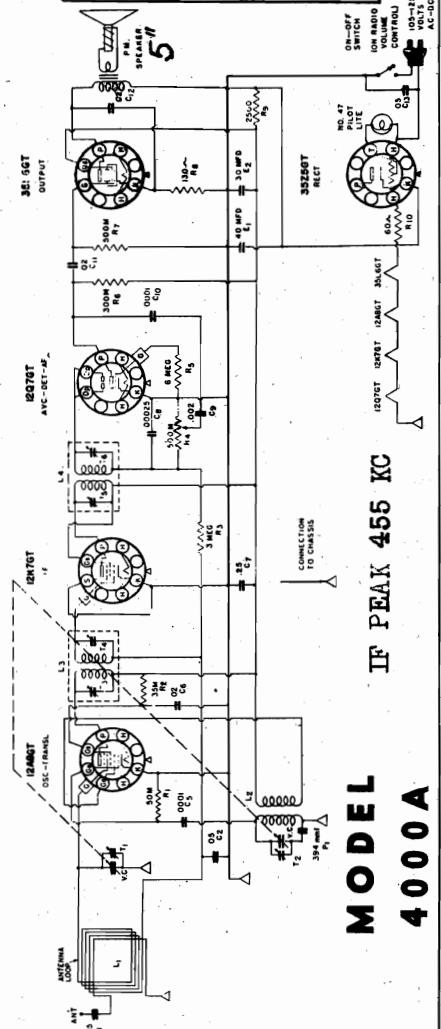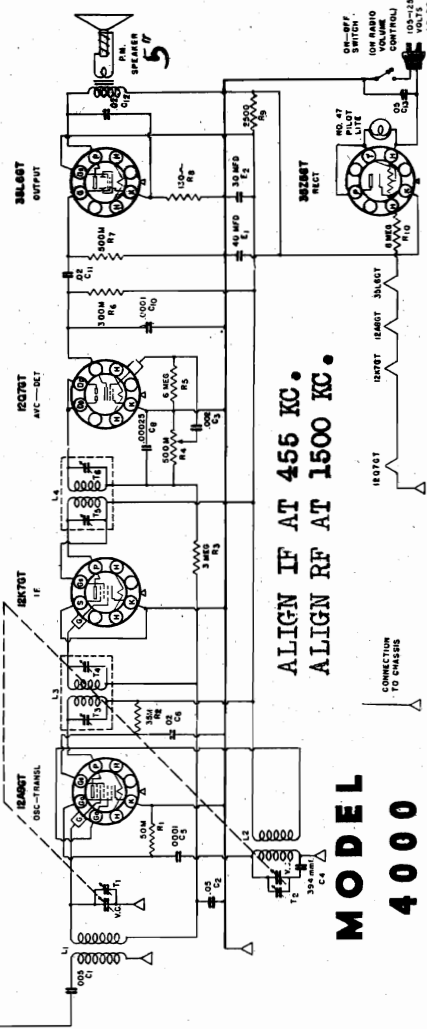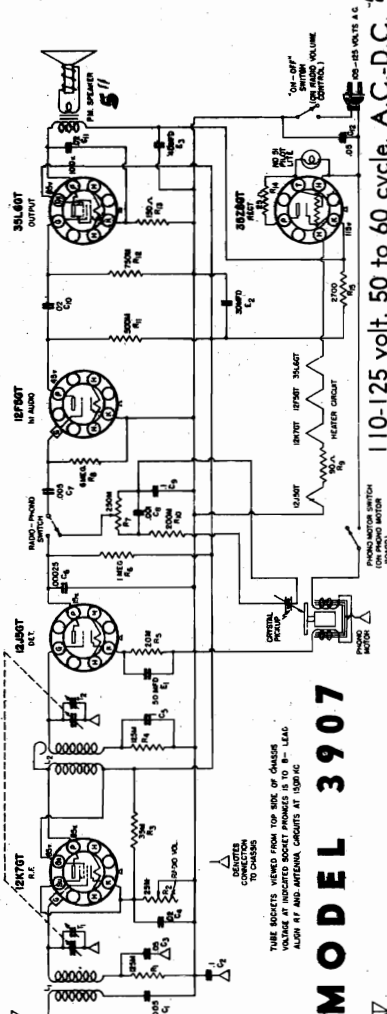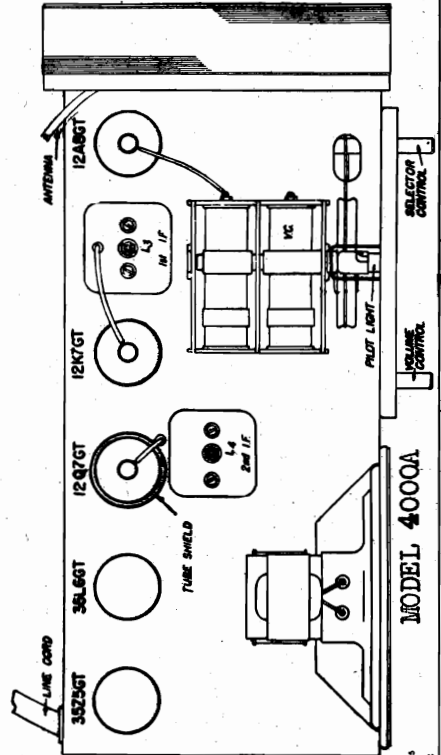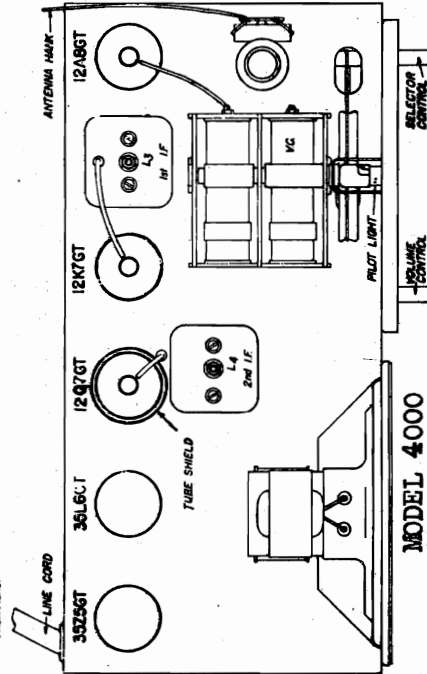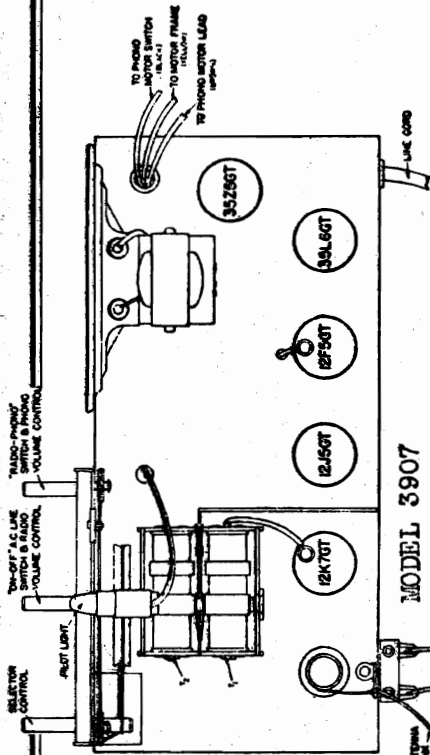


MODEL 3907

MODEL 4000



MODEL 4000A

AIR KING PRODUCTS CORP.

MODELS 3912, 3916
Schematic, Socket
Voltage

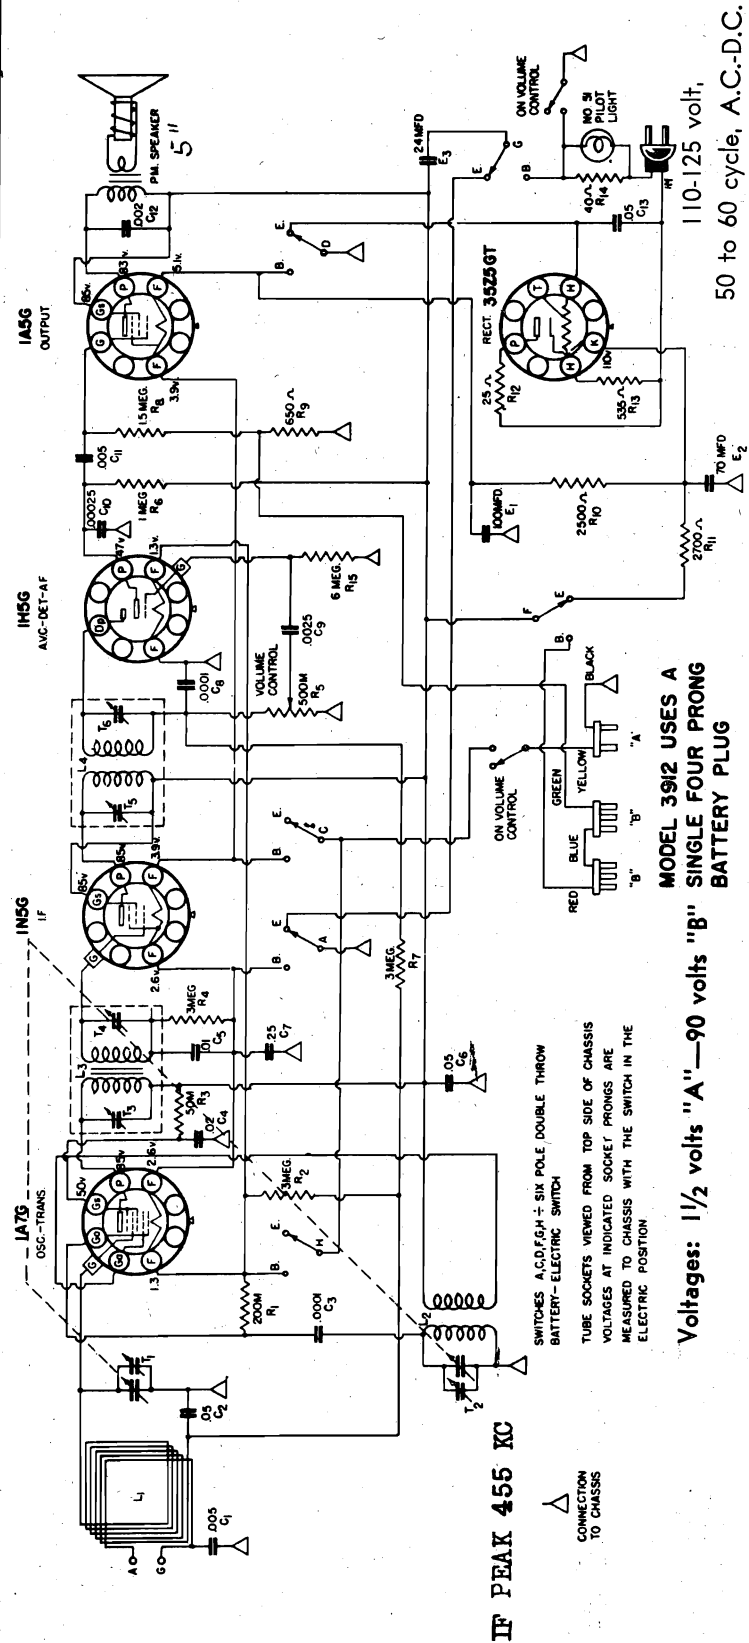



LOCATION OF TUBES & BATTERIES

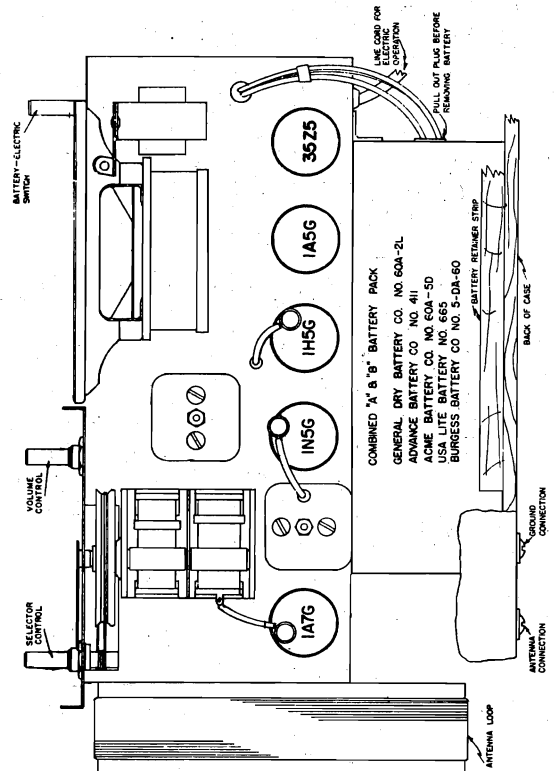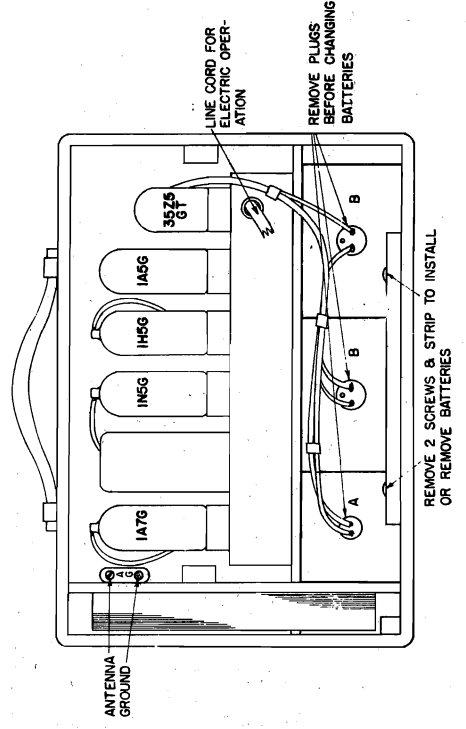

MODEL 3950
Schematic, Alignment


AIR KING PRODUCTS CORP.

MODEL 4001
Schematic, Socket Alignment

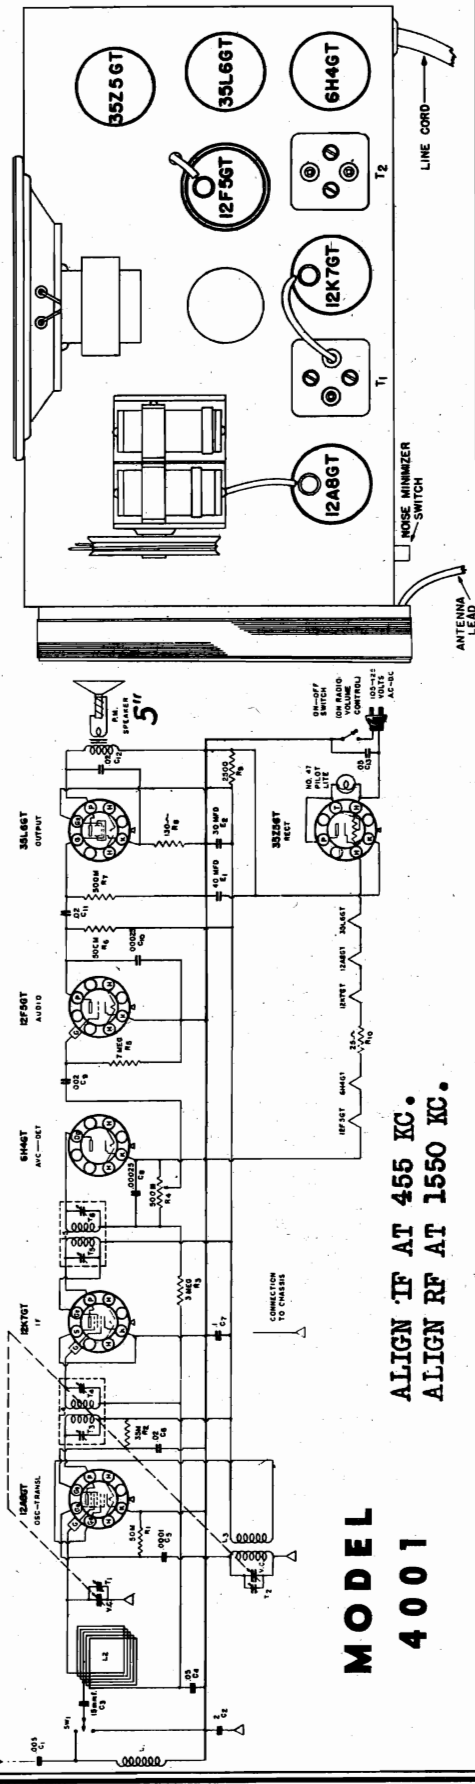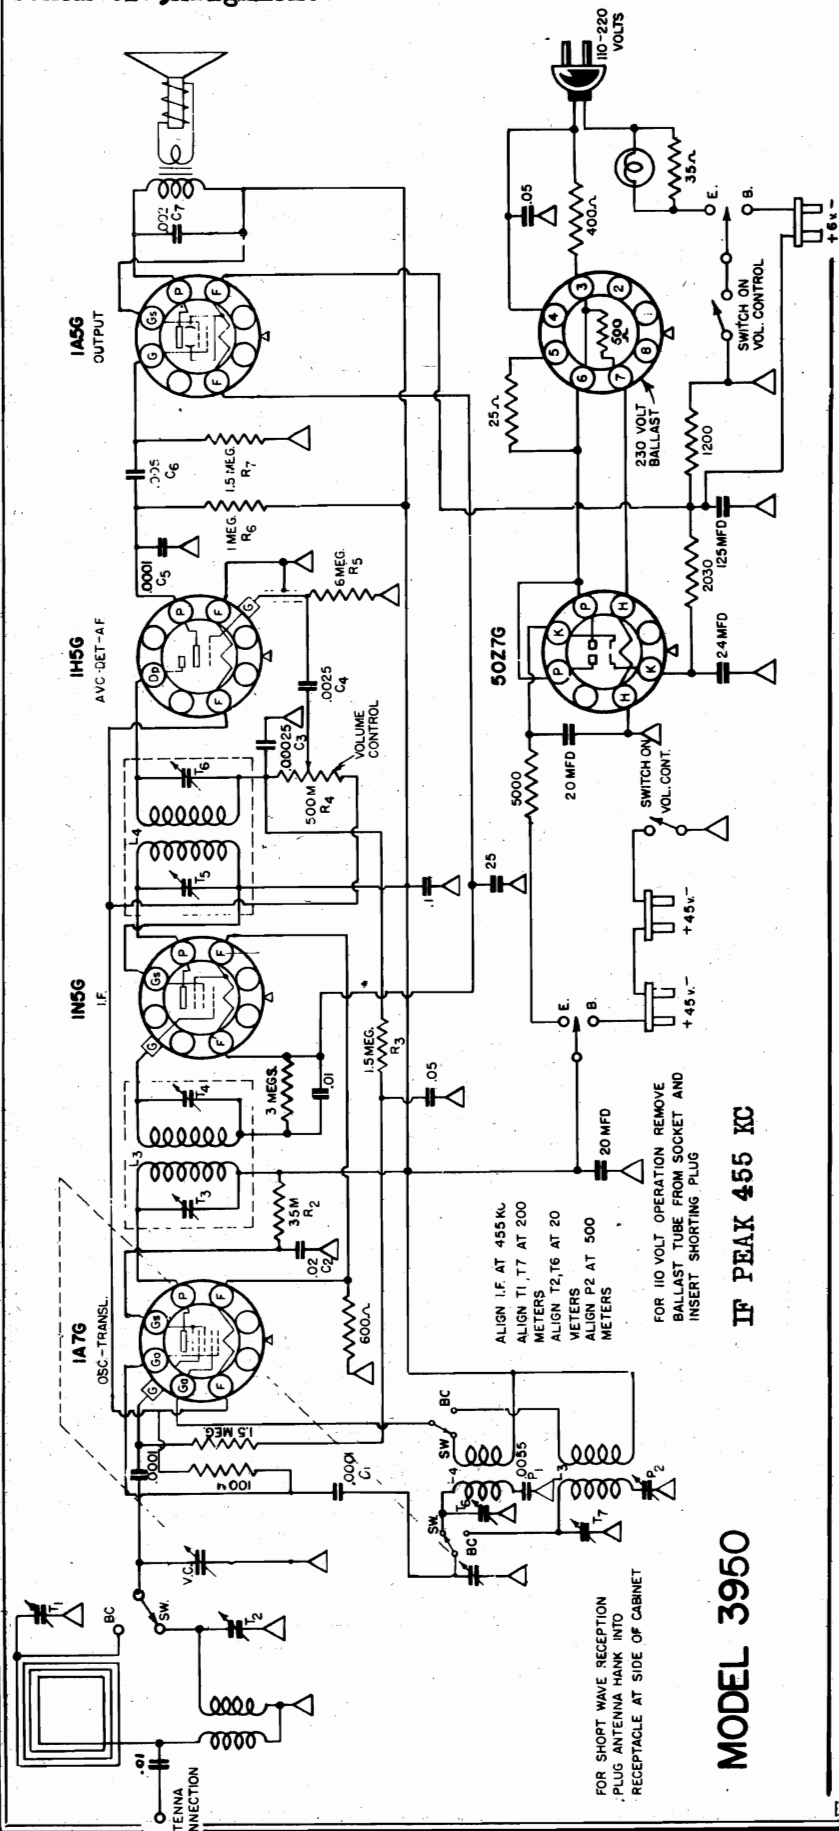



AIR KING PRODUCTS CORP.

MODEL 4002
MODEL 4007
MODEL 4100
Schematics, Socket

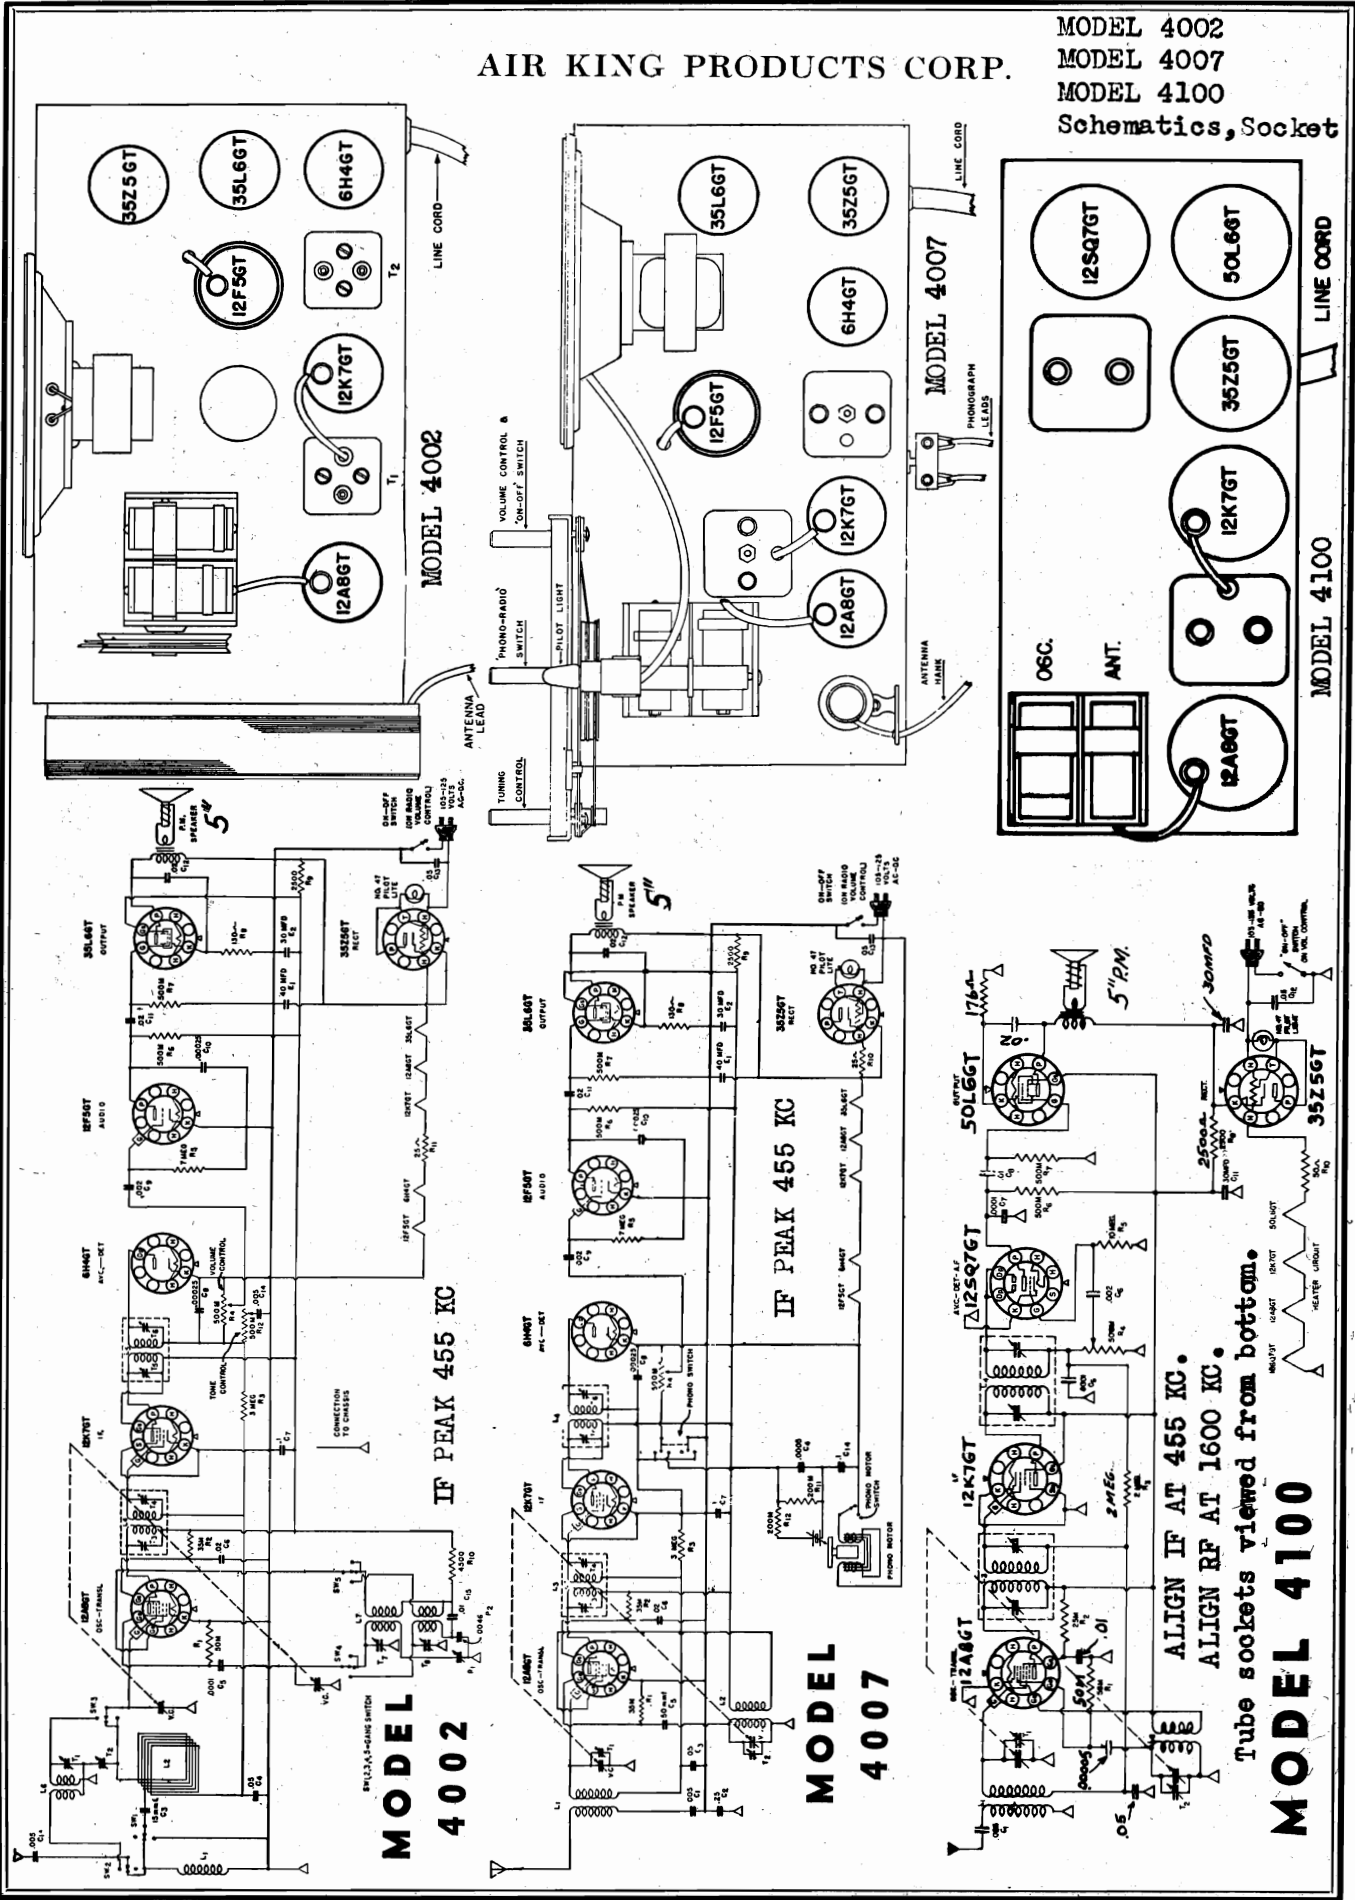

MODEL 4012
MODEL 4200
Schematics, Socket



AIR KING PRODUCTS CORP.

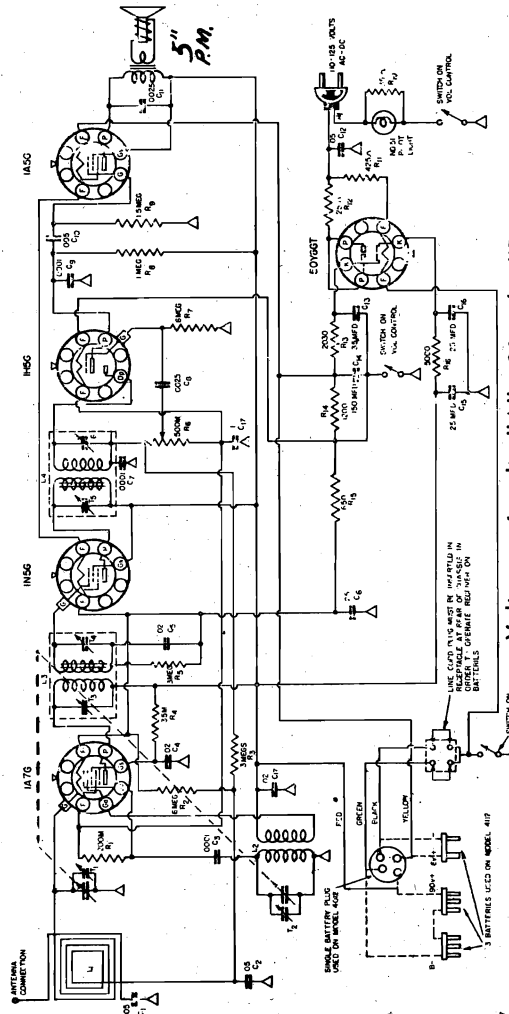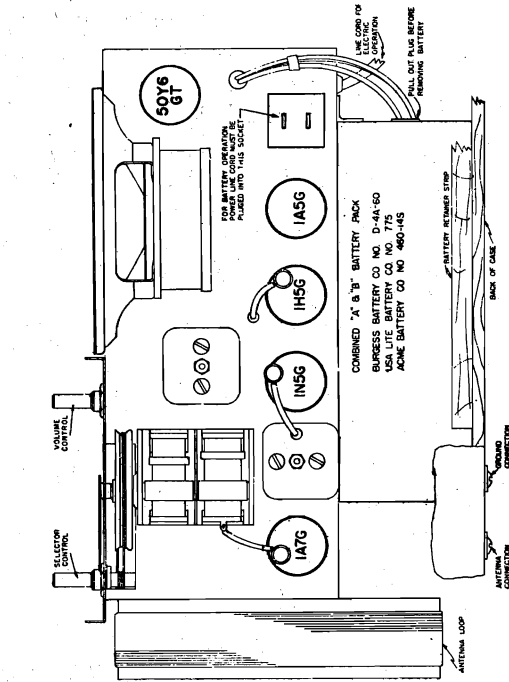

Voltages: 6 volts "A"—90 volts "B"

MODEL 4012

IF PEAK 455 KC

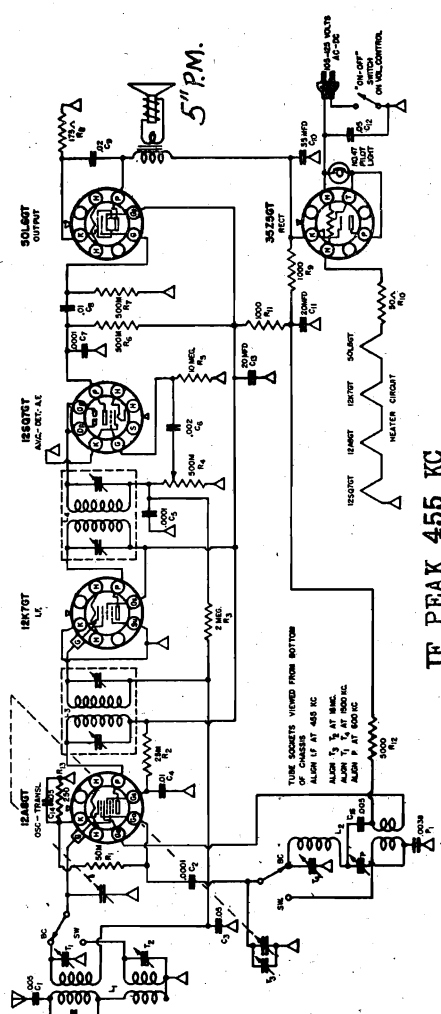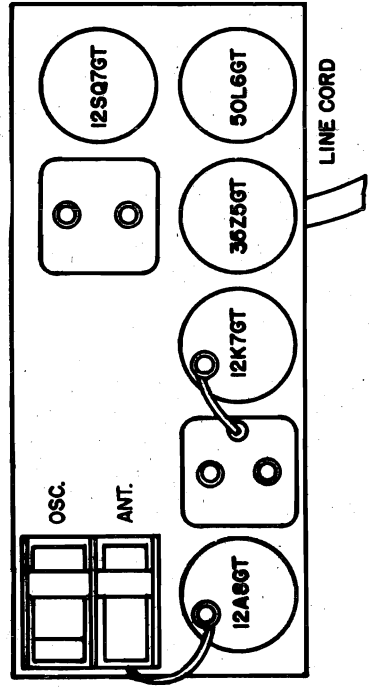


MODEL 4200

IF PEAK 455 KC

Socket, Trimmers
Recording Data

AIR KING PRODUCTS CORP.


MODEL 5000
Schematic, Voltage

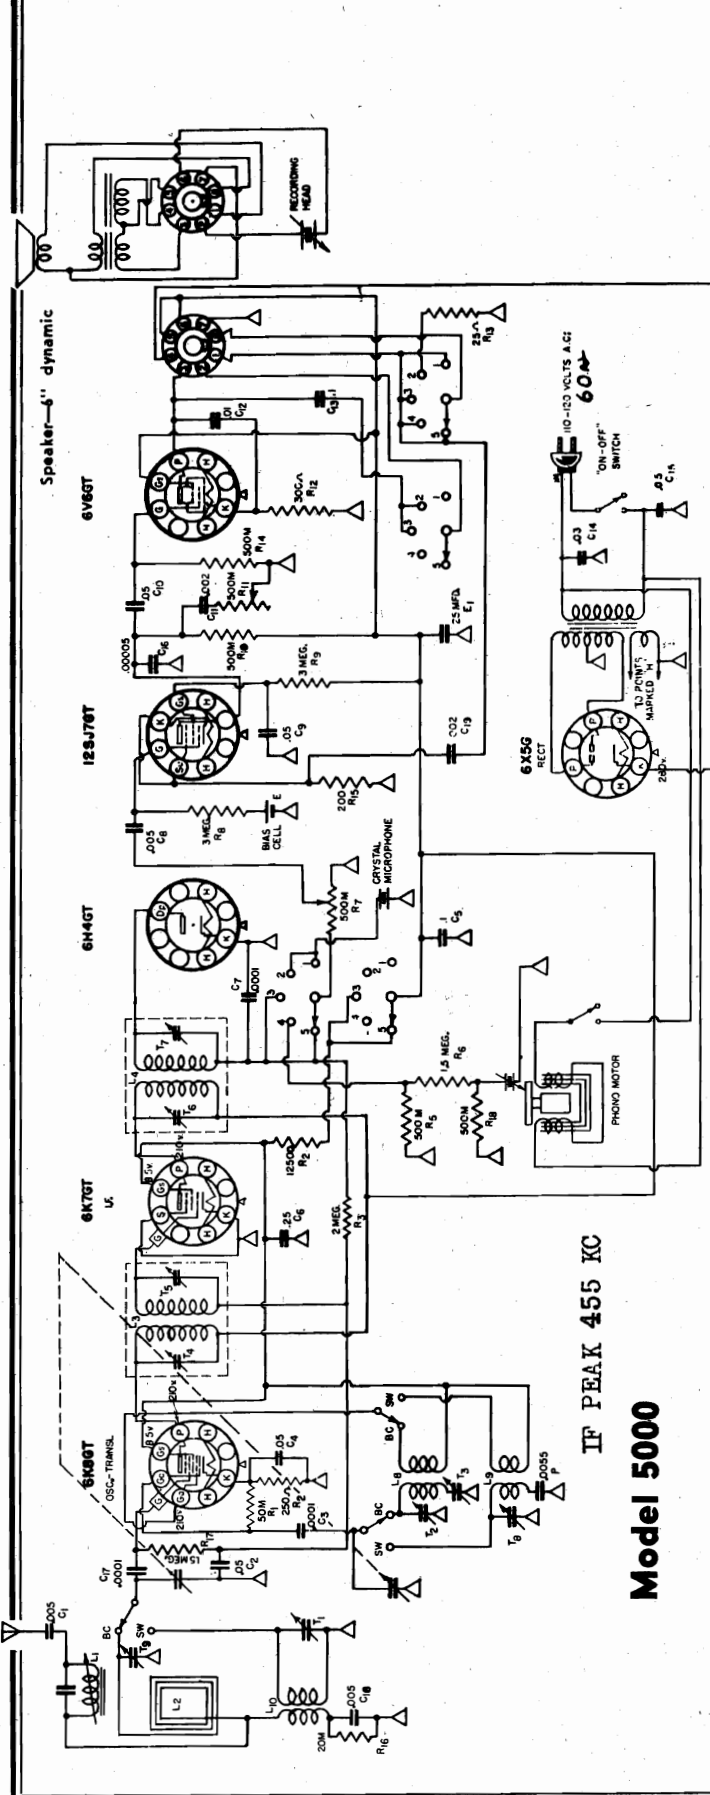

Model 5000

IF PEAK 455 KC

TUBE SOCKET LOCATIONS

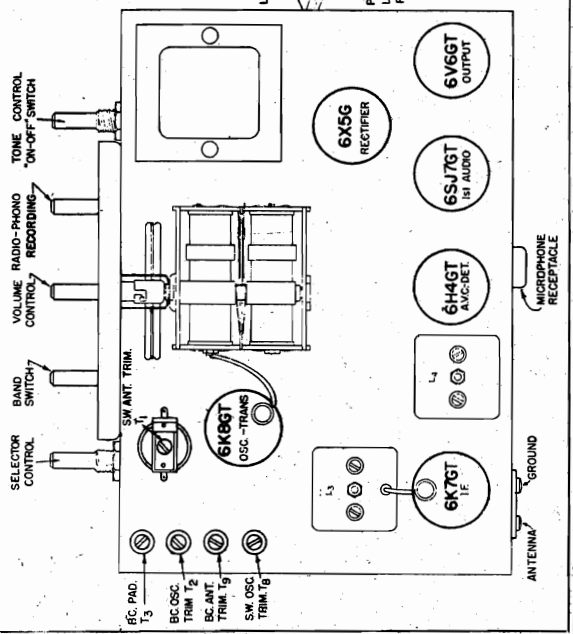


RADIO
To record radio programs set "PhonoRadio Switch" so that number "5" is opposite brass marker above the knob. Set volume control for loud and clear reception. Then set switch so that number "3" is opposite the marker and record the program. Do not allow needle to cut disc when it reaches the inner label. Do not allow the fine threads which form to collect under the needle, brush lightly with a soft cloth or brush towards the center of the disc.

MICROPHONE
For microphone recording set switch so that number 1 is opposite marker and test for operation. Then turn switch so that number "2" is opposite the marker. Turn volume control fully to the right. In speaking use normal voice with microphones at least six inches from the mouth.


NOTE:-Be sure needle is firmly in place and that the flat side points towards the rear of the cabinet. Check that the small pin projects through one of the three holes on the blank to prevent the disc from slipping.

ALLIED RADIO CORP.

MODEL B10501
MODEL B10508
Schematics

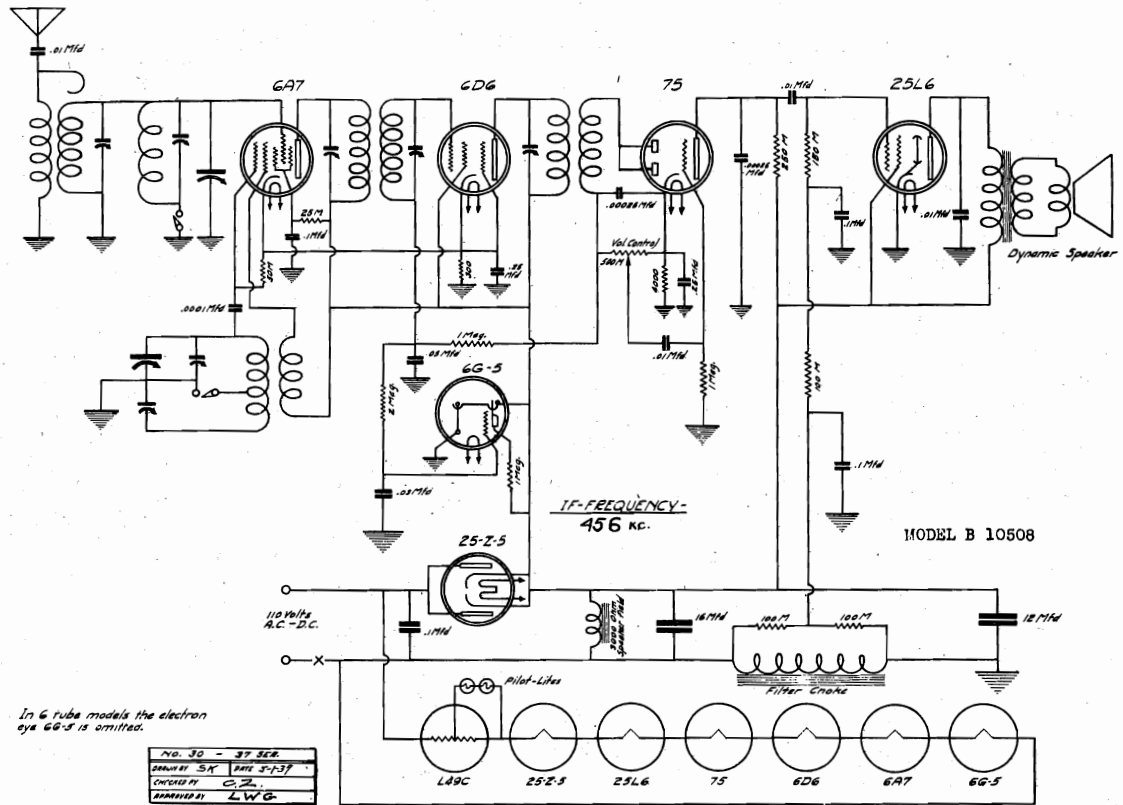


In 6 tube models the electron eye 6G-5 is omitted.

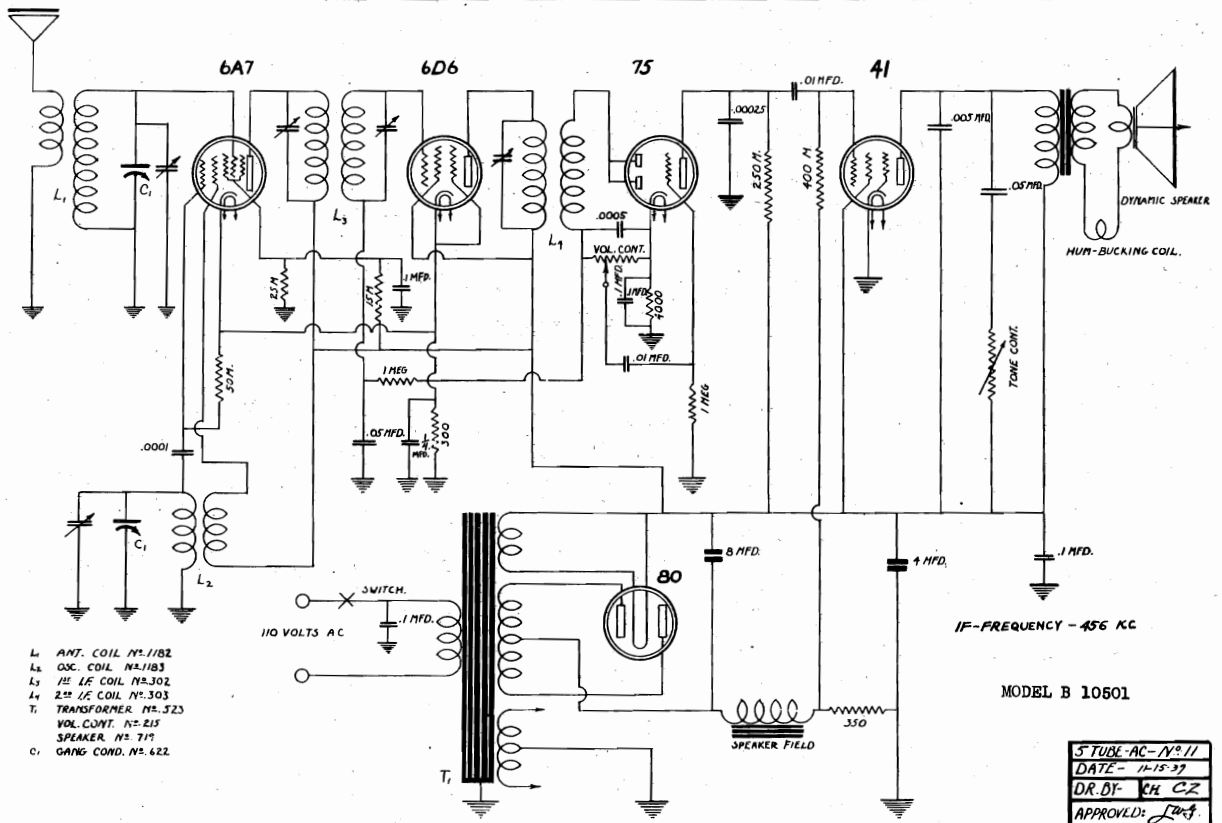


ALLIED RADIO CORP.

MODELS B10515 to B10518,
B10525 to B10527
MODELS B10520, B10521
Schematics

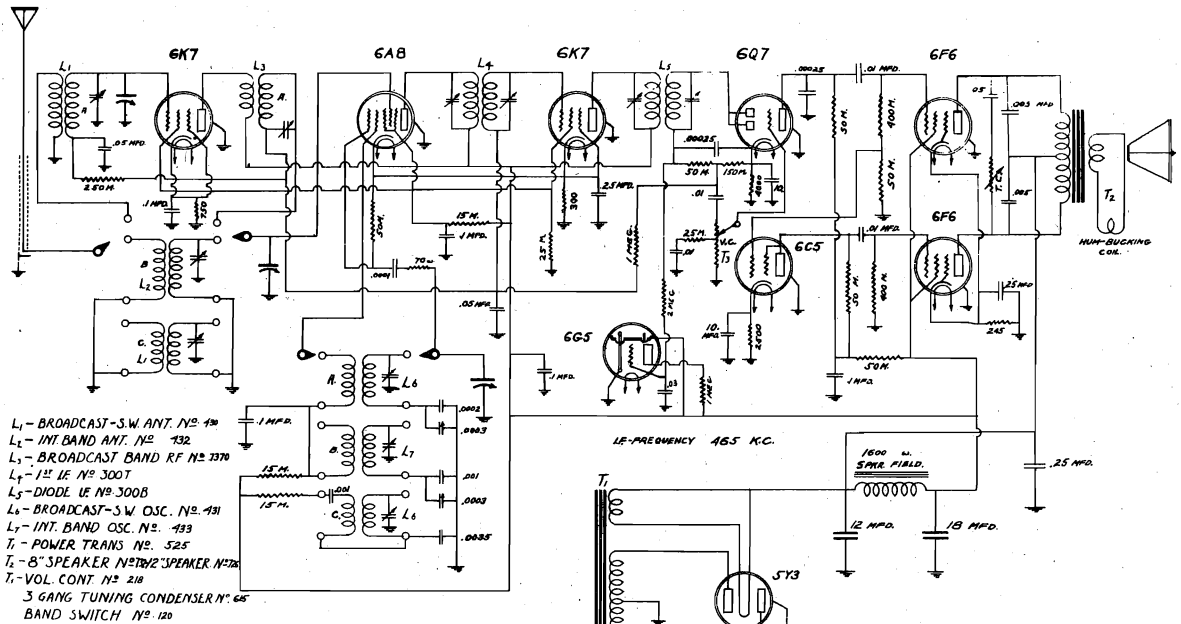


MODELS B10515, B10516, B10517, B10518
B10525, B10526, B10527

9 TUBE - AC-30	1/5
DATE	APR 1945
APPROVED	C. J.
DRAWN BY	C. J.

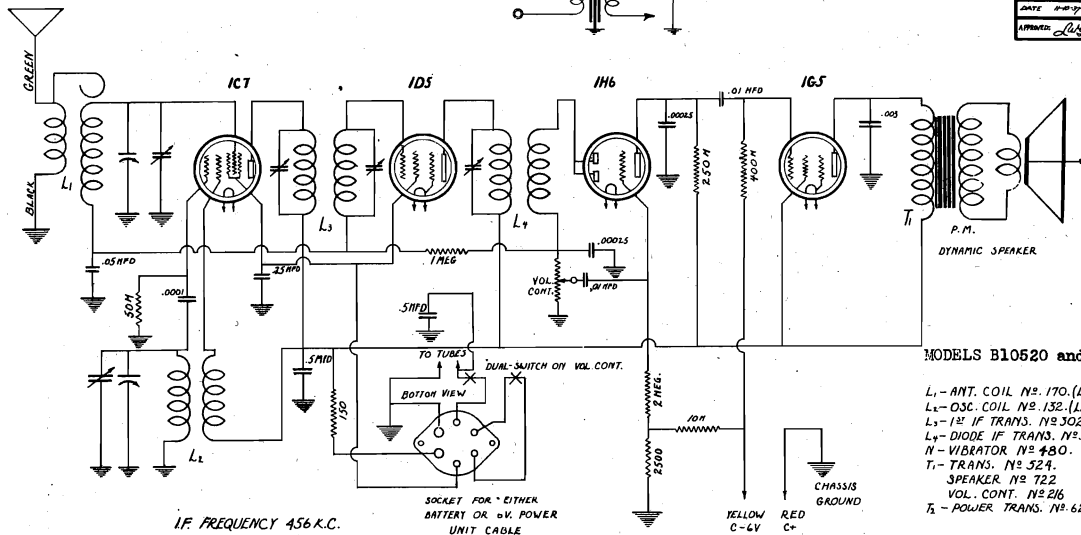

MODELS B10520 and B10521

L₁ - ANT. COIL N^o 170. (LATER MODEL-11B2)
 L₂ - OSC. COIL N^o 132. (LATER MODEL-11B3)
 L₃ - 1st IF TRANS. N^o 302.
 L₄ - DIODE IF TRANS. N^o 303.
 N - VIBRATOR N^o 480.
 T₁ - TRANS. N^o 524.
 T₂ - SPEAKER N^o 722.
 VOL. CONT. N^o 218.
 T₃ - POWER TRANS. N^o 626

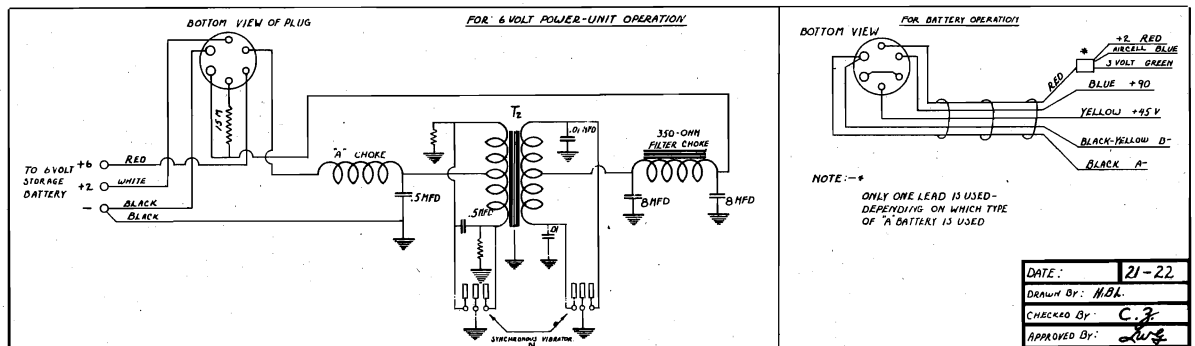


DATE:	21-22
DRAWN BY:	M.B.L.
CHECKED BY:	C. J.
APPROVED BY:	C. J.

MODELS B10545 to B10549,
B10553

ALLIED RADIO CORP.


Schematic, Socket, Trimmers
Alignment

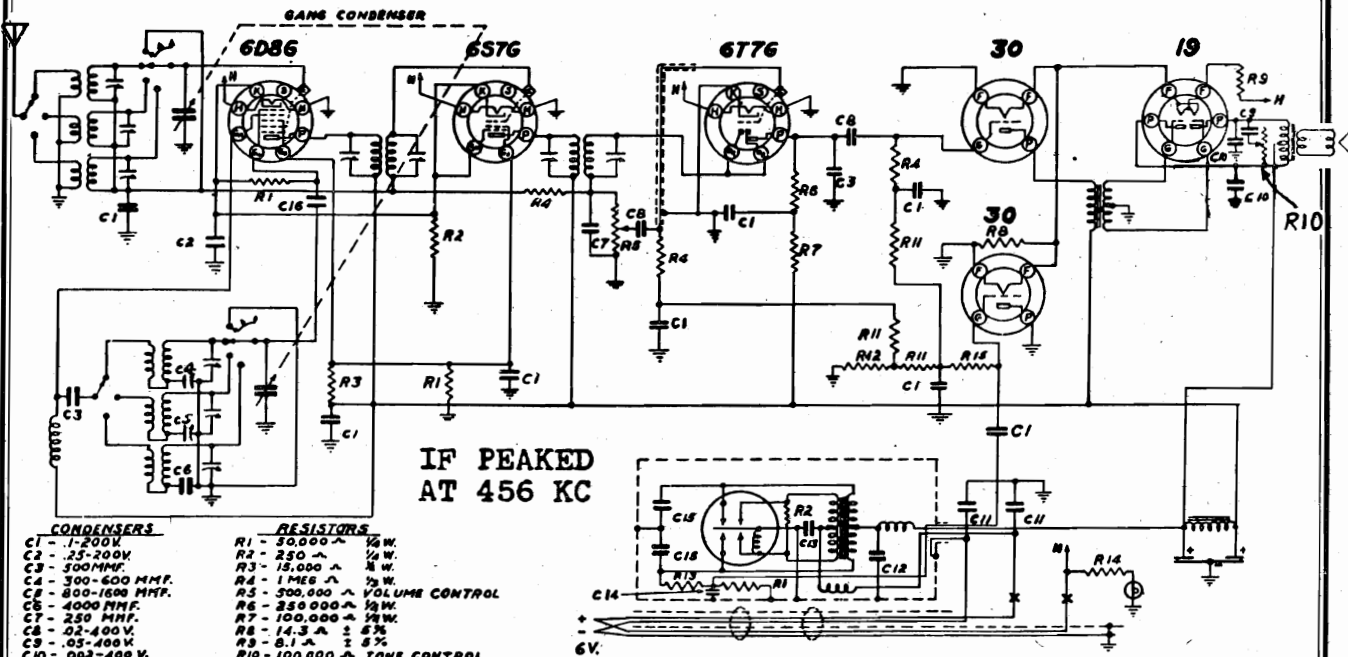

IF PEAKED
AT 456 KC


- CONDENSERS**
- C1 - .1-200K
 - C2 - .25-200V
 - C3 - 300MMF.
 - C4 - 300-600 MMF.
 - C5 - 800-1600 MMF.
 - C6 - 4000 MMF.
 - C7 - 250 MMF.
 - C8 - .02-400V
 - C9 - .05-400V
 - C10 - .002-400 V.
 - C11 - .005-400 V.
 - C12 - .01-600 V.
 - C13 - .5-10 V.
 - C14 - .05-200 V.
 - C15 - .01-1000 V.
 - C16 - 100 MMF.

- RESISTORS**
- R1 - 50,000 Ω 1/2 W.
 - R2 - 250 Ω 1/2 W.
 - R3 - 15,000 Ω 1/2 W.
 - R4 - 1 MEG Ω 1/2 W.
 - R5 - 500,000 Ω VOLUME CONTROL
 - R6 - 250,000 Ω 1/2 W.
 - R7 - 100,000 Ω 1/2 W.
 - R8 - 14.3 Ω 1/2 W.
 - R9 - 8.1 Ω 1/2 W.
 - R10 - 100,000 Ω TONE CONTROL
 - R11 - 500,000 Ω 1/2 W.
 - R12 - 70,000 Ω 1/2 W.
 - R13 - 200,000 Ω 1/2 W.
 - R14 - 70 Ω 1/2 W.
 - R15 - 600,000 Ω 1/2 W.

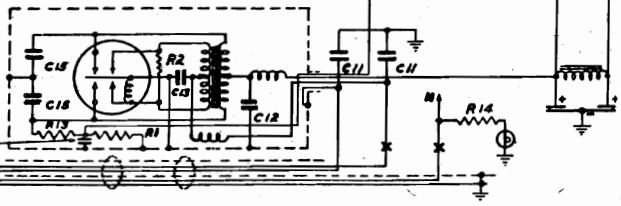

SWITCHES IN BROADCAST POSITION

FREQUENCY RANGE-
550 to 1700 KC
1700 to 5400 KC
5600 to 18100 KC

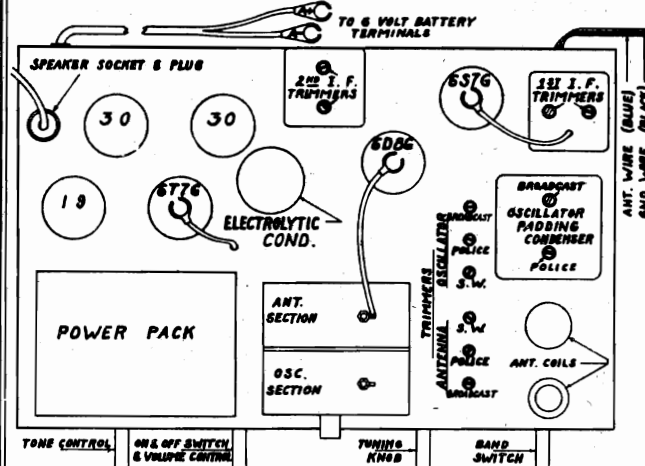

same time, continuously tuning back and forth across the signal with the receiver until the maximum reading is obtained on the output meter. This adjustment may seem a little complicated but is the easiest way to adjust the oscillator to the antenna. Return to 1400 KC and again go over the adjustments of this frequency to be certain that they were not put slightly out of alignment when adjustment was made at 600 KC.

POLICE BAND ALIGNMENT

The police band is adjusted by first replacing the .0002 dummy with a 400 ohm resistor and setting the generator to 5600 KC. With the gang set at minimum, adjust the "police oscillator trimmer" to receive this signal, then set the signal generator to 4000 KC and adjust "police antenna trimmer" to give maximum output. Next, set the oscillator to 1800 KC and "pad" the circuit at this frequency as described in the instructions for padding the broadcast circuits.

SHORT WAVE BAND ALIGNMENT

The short wave band is adjusted by setting the generator to 18,100 KC and with the gang at minimum, adjust the "short wave oscillator trimmer" to receive the signal. Set the generator at 16,000 KC and adjust the "short wave antenna" to give maximum output. As there is no variable low frequency padding condenser on this band, the sensitivity of the receiver should be checked at 6000 KC to determine whether the circuits are in line at this frequency. Should the receiver lack sensitivity at 6000 KC, the antenna and oscillator coils, as well as the .004 mica padding condenser, should be tested for defects as sometimes these components become subject to mechanical or electrical injuries, despite their rugged construction and liberal ratings.

I.F. ALIGNMENT

With the wave switch in the broadcast band and the gang condenser set at minimum, adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (6D8G) through a .05 or .1 mfd. condenser. The ground on the test oscillator can be connected to the chassis ground. Align all four I.F. trimmers to peak or maximum reading on the output meter.

BROADCAST BAND ALIGNMENT


Connect the output of the signal generator to the antenna lead (blue) through a .0002 mfd. mica condenser. Set the gang condenser to minimum and the oscillator to 1730 KC and adjust the "oscillator trimmer" to receive this signal. Make no other adjustments at this frequency. Then set the generator to 1400 KC and tune in this signal by rotating the gang to 1400 on the dial. Adjust the "antenna" trimmer to maximum signal. Set the signal generator to 600 KC and tune in the signal on the receiver. **Note:** Approximately the same sensitivity should be noted at this point as was at 1400 KC. The signal strength may sometimes be improved by padding the circuits. This is done by slowly increasing or decreasing the oscillator padding condenser and, at the

SERVICE DATA FOR ALL BANDS


If it is suspected that the oscillator has stopped but is doubtful due to the presence of the usual amount of noise level, it is suggested that the oscillator plate voltage be checked. To ascertain whether the tube is oscillating, ground the oscillator grid of the 6D8G (short stator and rotor plates of oscillator section on gang condenser). If oscillating properly, grounding the grid will cause an appreciable drop in oscillator voltage.

MODELS B10565 to B10568

Trimmers, Alignment, Chassis ALLIED RADIO CORP.

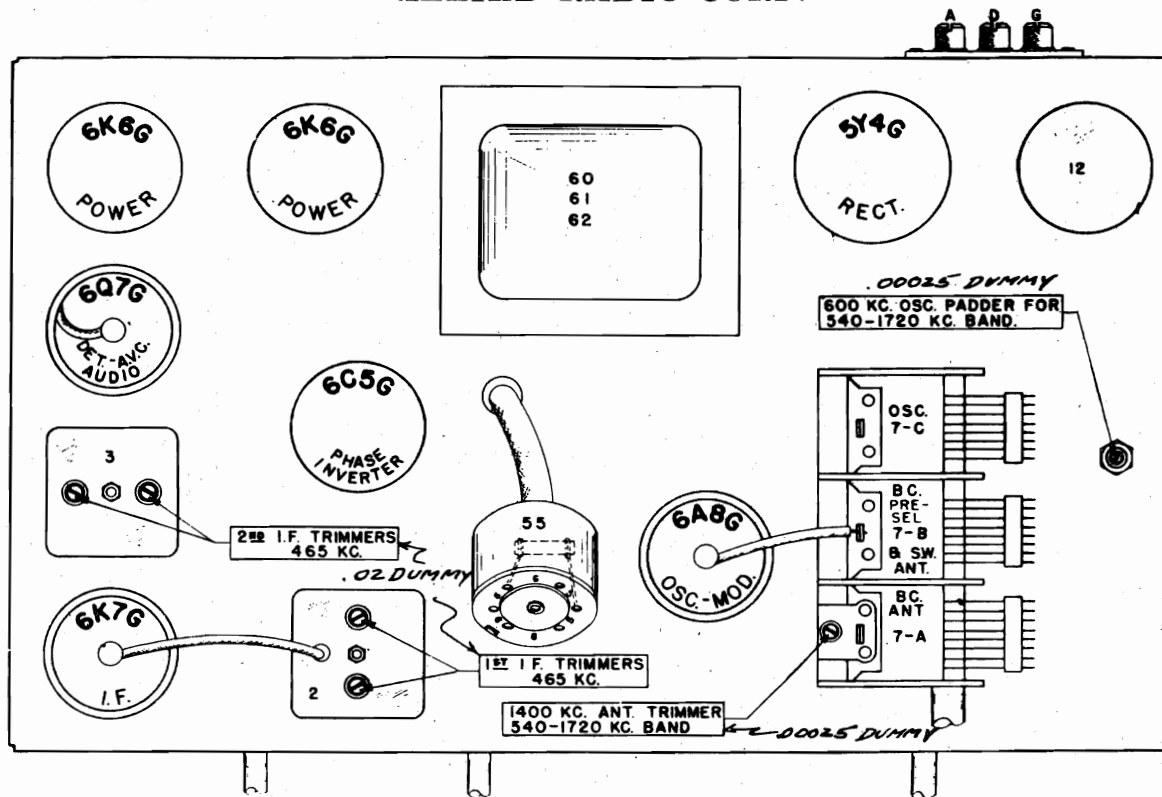


CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOL. VIII.

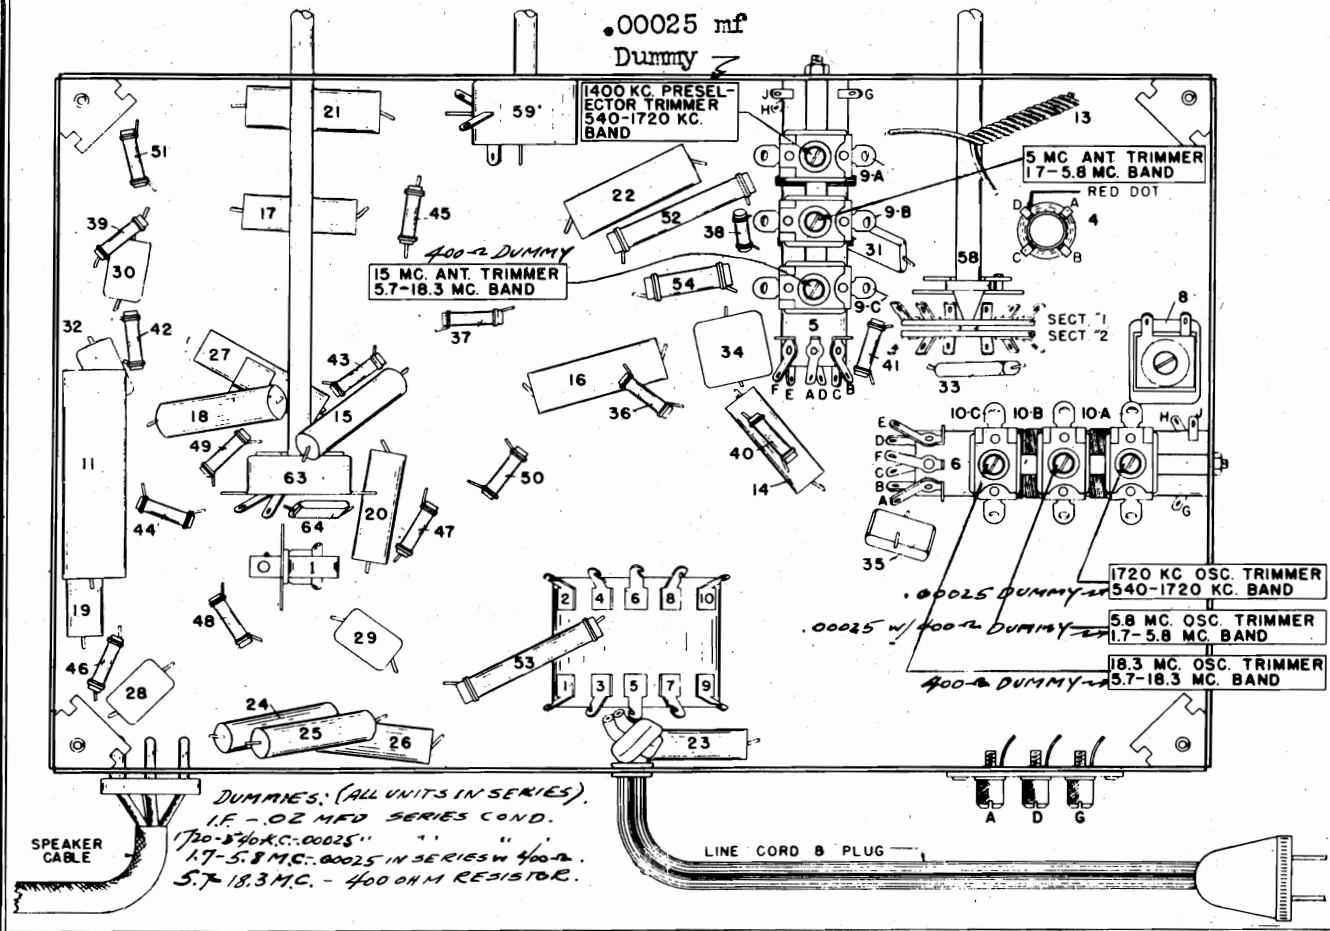

MODELS B10577, B10578
Chassis, Trimmers
Alignment

ALLIED RADIO CORP.

- (c) Set receiver dial and test oscillator frequency to EXACTLY 1720 kilocycles.
- (d) Bring in 1720 KC test oscillator signal to maximum output by adjusting the trimmer condenser mounted on top of the oscillator section of the gang condenser. Looking at the front of the receiver the rear section of the gang condenser is the oscillator section.
- (e) Tune receiver dial and set test oscillator frequency to EXACTLY 1400 kilocycles.
- (f) Adjust trimmer on top of the front section gang condenser (antenna section) for maximum 1400 kilocycle test signal response.

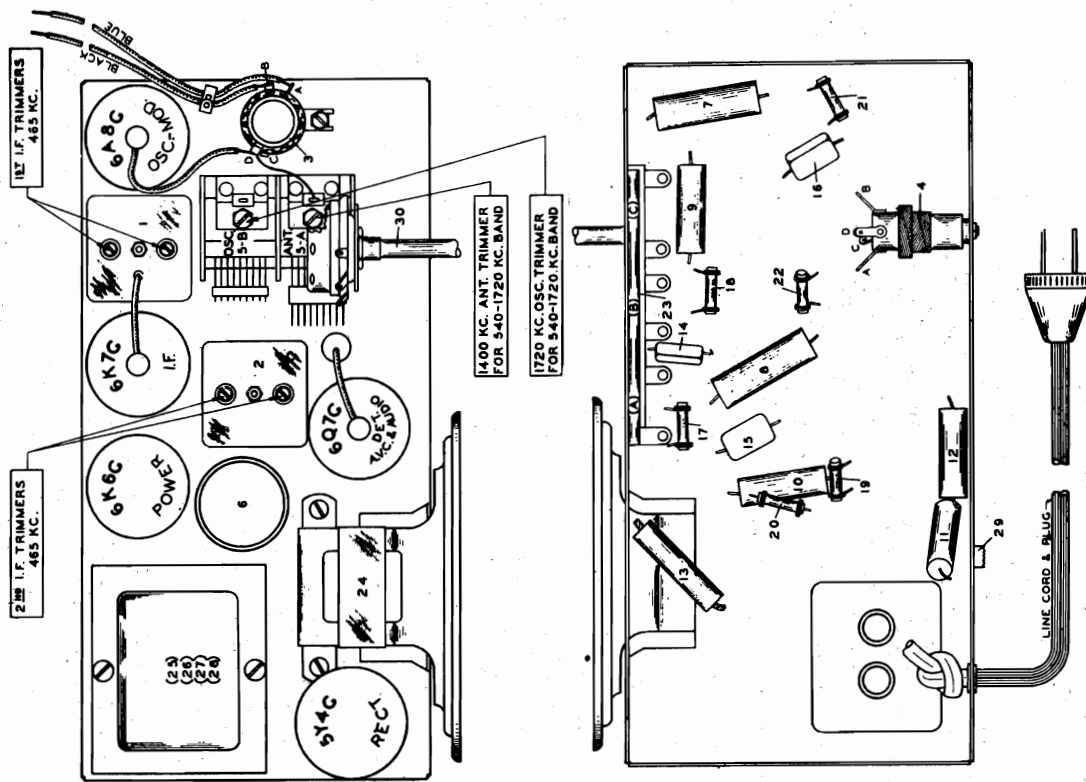

THIS RADIO IS DESIGNED SO THAT IT MAY BE PLACED IN A HORIZONTAL OR UPRIGHT POSITION. AS THE OPERATION AND PERFORMANCE OF THE RECEIVER IS THE SAME IN EITHER POSITION, IT IS A MATTER OF PERSONAL PREFERENCE AS TO WHICH POSITION TO USE.

The approximate position on the dial that any nine stations will be tuned in may be quickly determined—by pressing a paper tab having the station call letters into the round depressions on the front of the cabinet.

THE STATIONS SELECTED MUST OPERATE ON A FREQUENCY 40 KILOCYCLES OR MORE APART. OTHERWISE IT WILL BE IMPOSSIBLE TO PLACE THE CALL LETTER TABS IN THEIR PROPER POSITION IN CABINET DEPRESSIONS.

While it will be found that only the approximate location will be indicated, the station call tabs properly located will be an extremely helpful tuning aid.

To set the proper station call letter tabs into the cabinet depressions proceed as follows:

- (a) Determine which nine stations call letters you wish to have on the cabinet—press call letter tabs out of the call letter sheets provided.
- (b) Carefully tune in the selected station that broadcasts on the lowest frequency—the least number of kilocycles.
- (c) Place a little muckilage or celluloid on back of paper tab. Press the paper call letter tab—so that the printed call letters of the station tuned in are at the same angle as the printing on the dial—into the round depression on the cabinet front that is nearest to the dial pointer. By placing call letter tab on angle the call letter can easily be read with cabinet in either a horizontal or upright position.
- (d) Tune in the next selected station having the next lowest station frequency, pressing the call letter for this station into the round cabinet depression nearest to the dial pointer needle—continuing on in this way until station call letters have been placed into all nine cabinet depressions.

After the station call letters are set it will be a simple matter to determine the approximate dial position of any of these stations—just rotate tuning knob until dial pointer needle points to station call letter of desired station. It must be remembered that only the approximate tuning location will be indicated by the dial pointer needle—each station must be correctly tuned in by ROTATING THE TUNING CONTROL KNOB UNTIL A STATION IS TUNED IN WITH GREATEST CLARITY.

ALIGNMENT PROCEDURE.

NOTE: BE SURE TO FOLLOW PROCEDURE CAREFULLY WHEN ALIGNING. OTHERWISE THE RECEIVER WILL BE INSENSITIVE AND THE DIAL CALIBRATION WILL BE INCORRECT. THE TRIMMERS AND PADDING CONDENSERS WILL BE REFERRED TO BY THEIR FUNCTION AS INDICATED ON THE PARTS DIAGRAM.

IT IS ABSOLUTELY NECESSARY THAT AN ACCURATELY CALIBRATED TEST OSCILLATOR WITH SOME TYPE OF OUTPUT MEASURING DEVICE BE USED WHEN ALIGNING THE RECEIVER.

ALIGNING I.F. STAGE AT 465 KILOCYCLES.

- (a) Connect the ground lead of the test oscillator to the chassis or set ground lead. Connect the other lead of the test oscillator to the grid cap of the 6A8G tube through a .02 Mfd. series condenser. DO NOT REMOVE GRID CLIP.
- (b) Set test oscillator to EXACTLY 465 kilocycles and turn receiver volume control on full.
- (c) Peak each of the second I.F. transformer trimmers.
- (d) Peak each of the first I.F. transformer trimmers.


To assure most accurate trimmer setting repeat above adjustment several times always using lowest possible test oscillator output consistent with readable output meter scale deflection.

ALIGNING 1720-540 KILOCYCLE BAND.

- (a) Remove test oscillator lead from grid of 6A8G tube and attach it to the receiver antenna lead through a .00025 Mfd. series condenser.
- (b) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh), at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If the dial needle does not point exactly to the last line move needle to correct position.


ALLIED RADIO CORP.

MODEL B10579
Schematic, Voltage
Socket

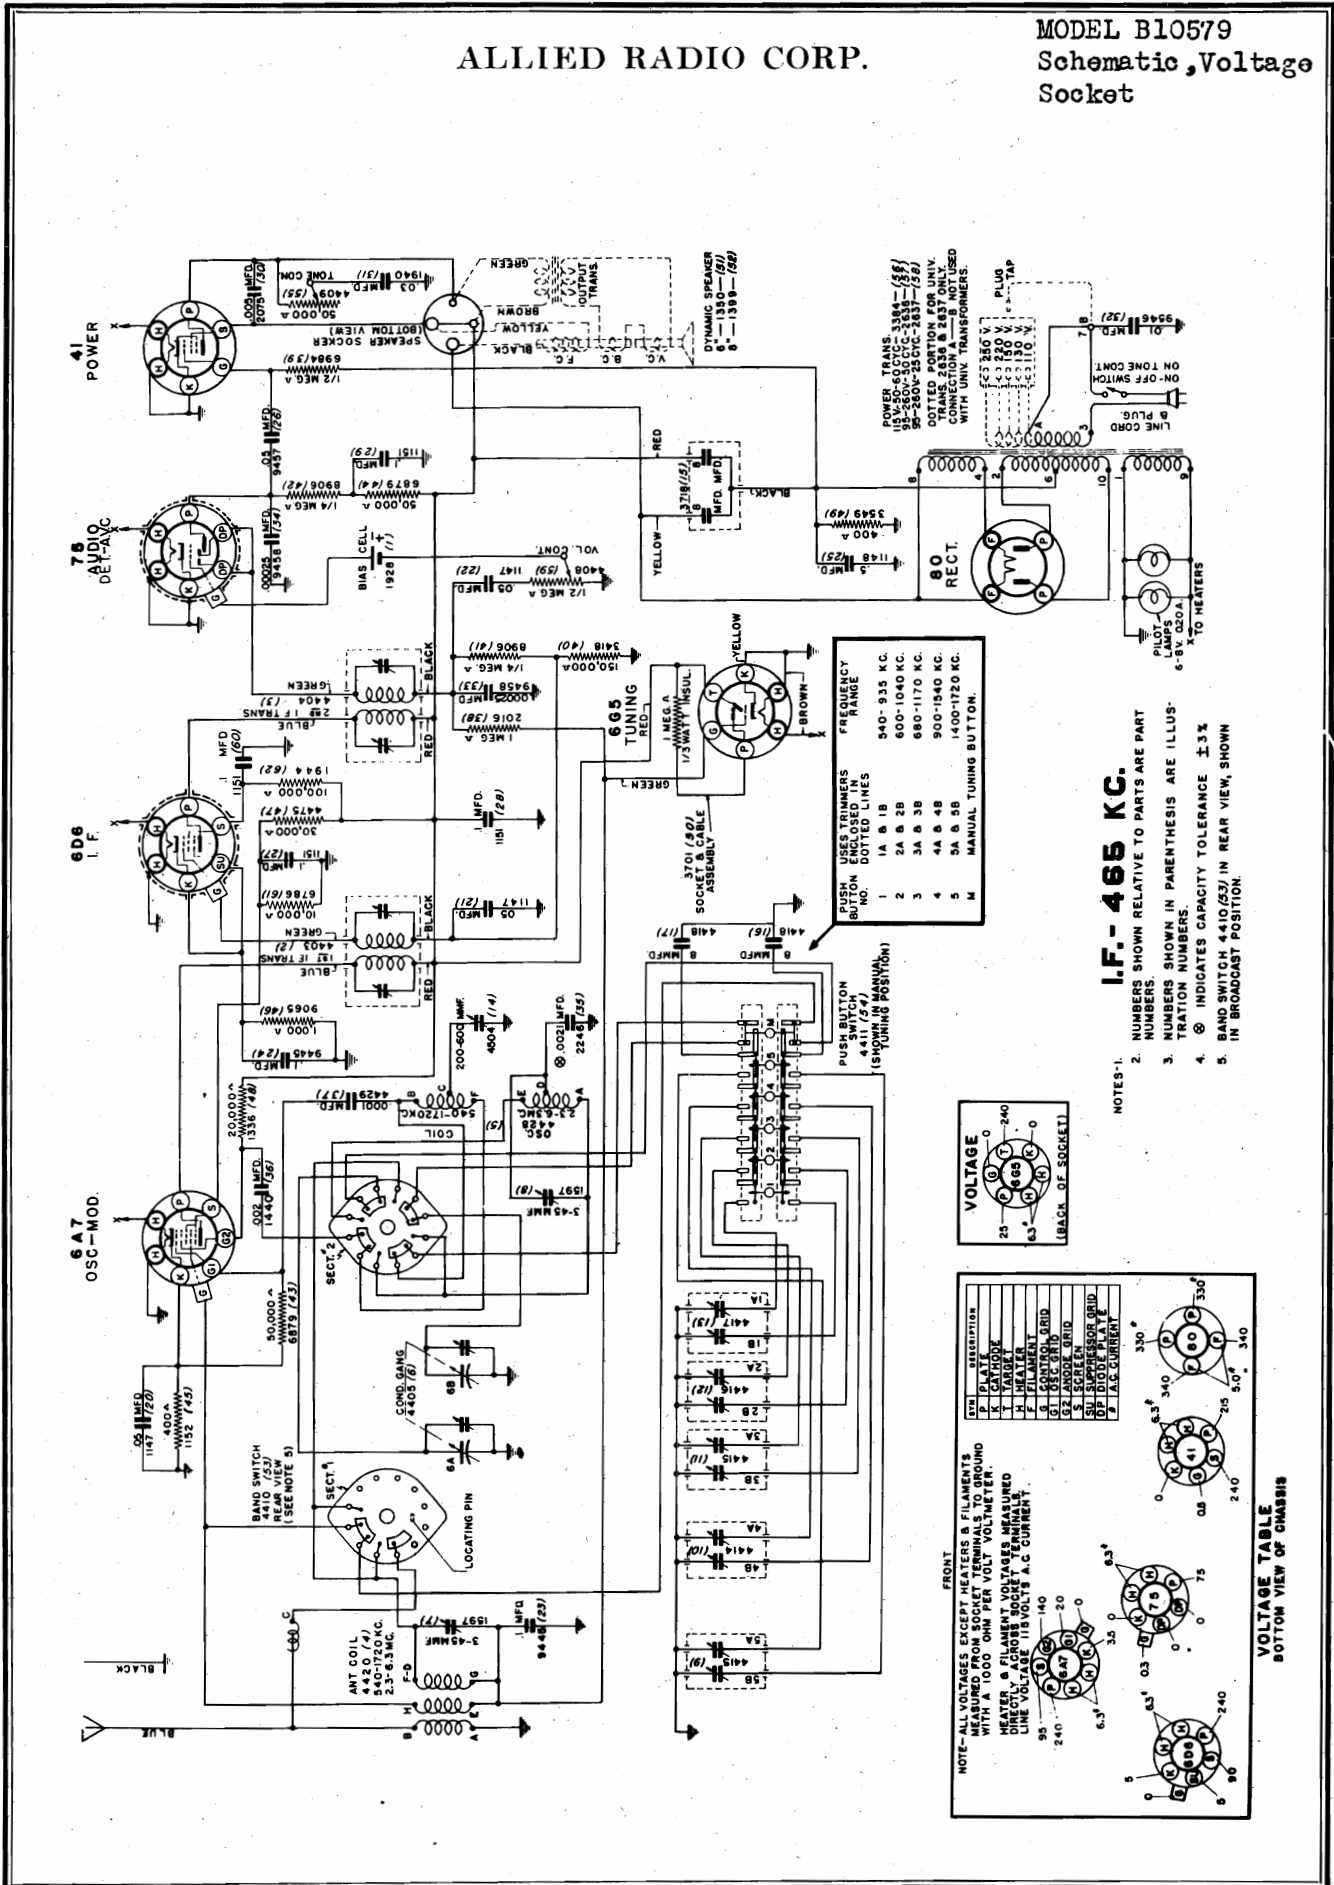



I.F. - 465 KC.

NOTES -
 1. NUMBERS SHOWN IN PARENTHESIS ARE PART NUMBERS
 2. NUMBERS SHOWN IN PARENTHESIS ARE ILLUS-TRATION NUMBERS
 3. NUMBERS SHOWN IN PARENTHESIS ARE ILLUS-TRATION NUMBERS
 4. & INDICATES CAPACITY TOLERANCE ± 3%
 5. BAND SWITCH 4410/231 IN REAR VIEW, SHOWN IN BROADCAST POSITION.

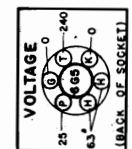

MODEL B10579
Chassis, Trimmers
Alignment

ALLIED RADIO CORP.

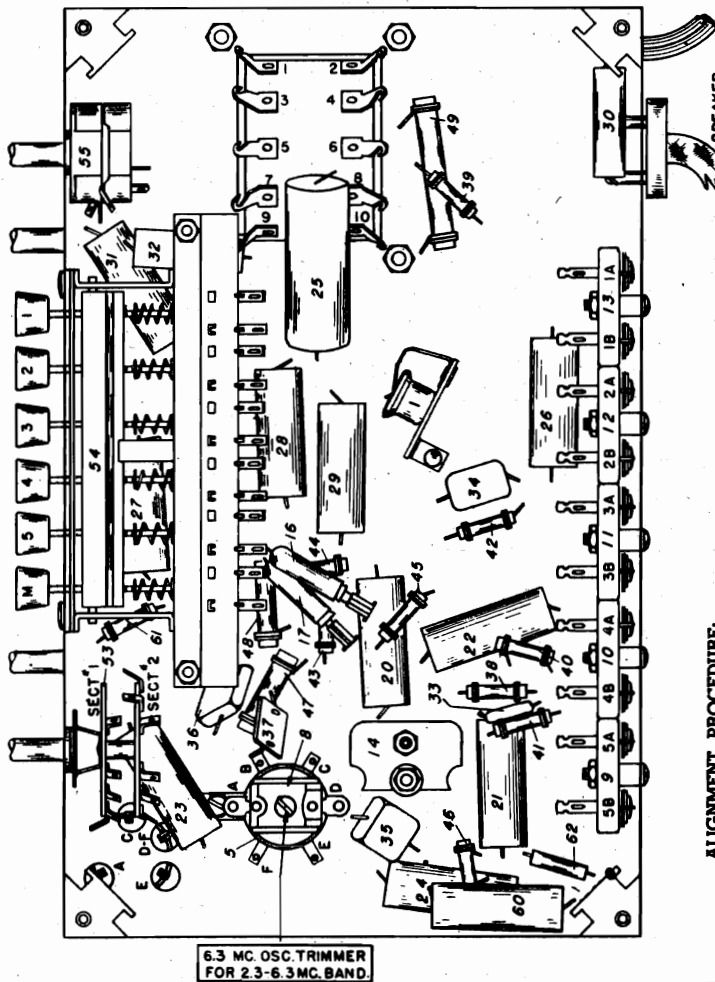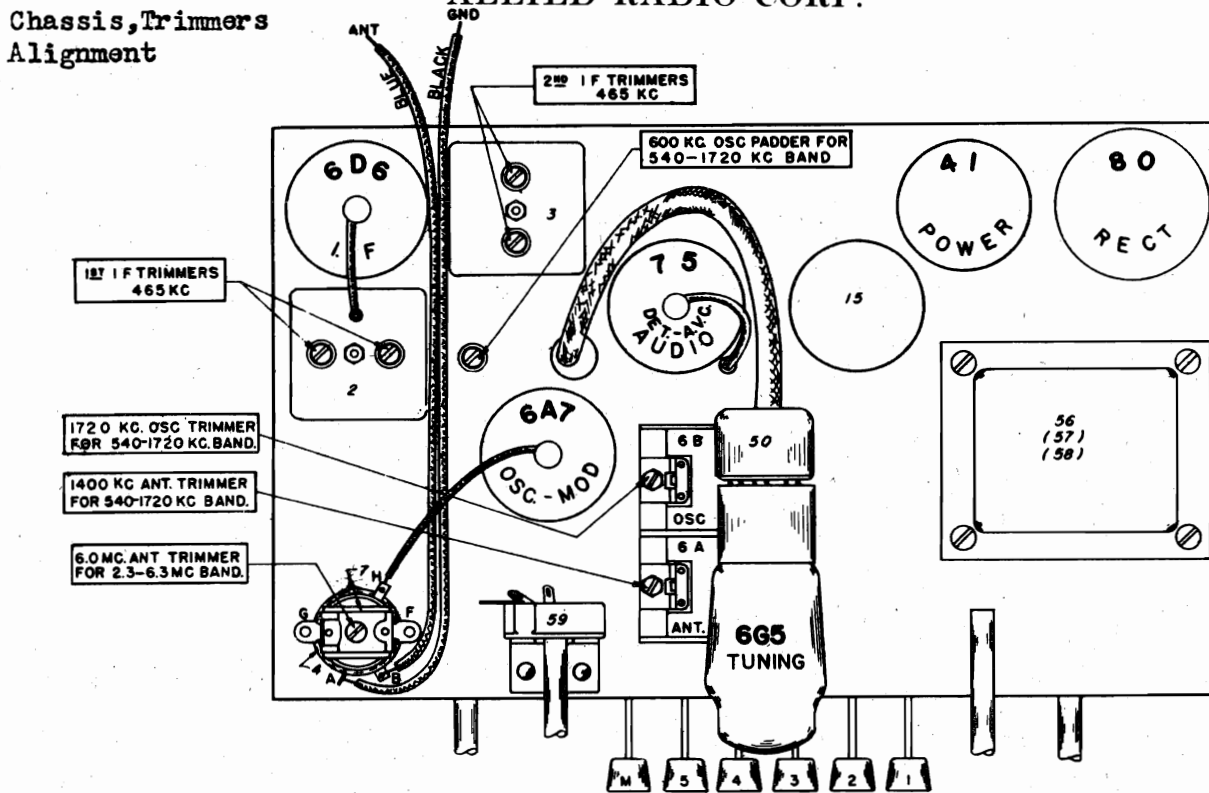


- ALIGNMENT PROCEDURE:**
- ALIGNING I.F. STAGE AT 465 KILOCYCLES:**
- Connect the ground lead of the test oscillator to the chassis or set ground lead. Connect the other lead of the test oscillator to the grid cap of the 6A7 tube through a .02 Mfd. series condenser. DO NOT REMOVE GRID CLIP.
 - Set test oscillator to EXACTLY 465 kilocycles and turn receiver volume control on full.
 - Peak each of the second I.F. transformer trimmers.
 - Peek each of the first I.F. transformer trimmers.
 - To assure most accurate trimmer setting repeat above adjustment several times always using lowest possible test oscillator output consistent with readable output meter scale deflection.
- ALIGNING 1720-540 KILOCYCLE BAND:**
- Remove test oscillator lead from grid of the 6A7 tube and attach it to the receiver antenna lead through a 600-ohm Mid. series condenser. By turning gang condenser until plates touch maximum capacity stop (completely in right) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If the dial needle does not point exactly to the last line move needle to correct position.
 - PLACE BAND SELECTOR SWITCH FOR 1720-540 K.C. OPERATION. PRESS IN MANUAL PUSH-BUTTON AND set receiver dial and test oscillator frequency to EXACTLY 1720 kilocycles.
 - Bring in 1720 KC test oscillator signal to maximum output by adjusting the trimmer condenser mounted on top of the oscillator section of the gang condenser. Looking at the front of the receiver the rear section of the gang condenser is the oscillator section.
 - Tune receiver dial and set test oscillator frequency to EXACTLY 1400 kilocycles.
 - Adjust trimmer on top of the front section gang condenser (antenna section) for maximum 1400 kilocycle test signal response.
 - Tune receiver dial and set test oscillator frequency to approximately 600 kilocycles.
 - While rocking the tuning condenser back and forth adjust 600 KC oscillator padder condenser which is accessible through the hole in the top of chassis adjacent to the gang condenser for maximum 600 kilocycle signal response.
- ALIGNING 2.3-6.3 MEGACYCLE BAND:**
- Replace 00025 Mid. test oscillator antenna lead series condenser with a 400 ohm resistor.
 - Adjust band selector switch for 2.3-6.3 megacycle band operation, tune receiver dial and set test oscillator frequency to EXACTLY 6.3 megacycles.
 - Bring in 6.3 megacycle test oscillator signal to maximum output by adjusting 6.3 M.C. oscillator trimmer.
 - Tune receiver dial and test oscillator frequency to EXACTLY 6 megacycles, and adjust 6 M.C. antenna trimmer for maximum sensitivity.

MODEL B10579
 ALLIED RADIO CORP. MODELS B10750, B10760, B10761,
 B10762, B10770, B10771
 Tuner Data

SETTING UP SELECTOR MECHANISM

MODELE B10750, B10770, B10771,
 B10760, B10761, B10762.

- Using the manual selector knob, tune in station No. 1, the station near the left hand end of the dial—the 170 K.C. end. Make certain that the station is properly tuned in.
- From the back of the receiver loosen thumb screw No. 1 (See Figure 2) just enough to allow it to slide freely in the groove.
- Now adjust the thumb screw until the contact is resting directly on the fibre dead spot.
- Tighten thumb screw securely, making sure that in tightening you do not move the contact off the fibre dead spot.
- Check the above operation by pressing button No. 1 and note if there is any pointer movement. If there is no pointer movement, the contact is properly set. If the pointer moves, the contact was not set directly on fibre dead spot. In this case, the station should be re-tuned manually, and procedure No. 3 should be repeated.
- Using the same procedure, set up the remaining five stations, in each case using the station of the next highest frequency and the thumb screw having the same number as the corresponding button. Never skip buttons, always set up in numerical order from button 1 to 6 from left to right.
- After all the stations have been set up, insert the proper station call tabs (found with the instructions) into the recesses of their respective buttons.
- To receive any of the six stations set up as described above turn receiver "ON" by rotating the left hand knob to the right until the switch clicks. Allow the tubes to heat up, press the buttons designated by the call letter of the station desired and hold the button in until the pointer stops moving and the station comes in. Adjust tone and volume. **IMPORTANT:** Be sure the band switch is in the position for Standard Broadcast Reception.

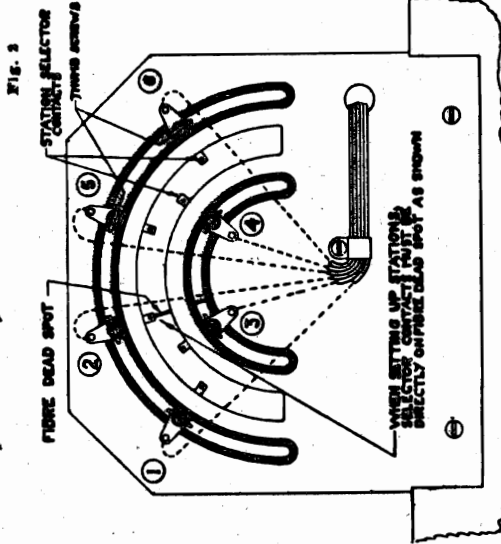

- BE SURE TO OPERATE THE SET AT LEAST ONE-HALF HOUR BEFORE ADJUSTING TRIMMERS. If set is not properly warmed up, trimmers are adjusted, the trimmers may shift, and the station may be tuning in poor tone, weak signal, and excessive background noise. FOR BEST RESULTS SET PUSH-BUTTONS FOR LOCAL OR STRONG, NEARBY STATIONS ONLY. Obtain the transmitter frequency—number of kilocycles—and call letters of the station whose transmitter frequency is between 540-985 kilocycles band.
- Place band selector switch for operation on 1720-540 kilocycle band.
- Press in "MANUAL" tuning button—see diagram.
- It is advisable that if a station is selected whose transmitter frequency is between 540-985 kilocycles that the two trimmers marked "540-985 K.C." on paper label attached to back of chassis be adjusted first.
- Using "MANUAL" tuning knob carefully tune in selected station whose transmitter frequency is between 540-985 kilocycles in push-button marked "540-985 K.C."—see diagram.
- NOTE: STATION SIGNAL WILL DISAPPEAR OR MAY BE DISTORTED, AND IN SOME INSTANCES ANOTHER STATION MAY BE HEARD.
- With a small screw driver carefully tune in the selected 540-985 kilocycle station, by slowly adjusting trimmer 1A, then trimmer 1B, until the station signal is heard. WATCH TUNING EYE AND ADJUST TRIMMERS SO THAT THE TWO OPEN ENDS OF THE GREEN INVERT-ED "V" ON THE TUNING EYE ARE CLOSEST TOGETHER. GREATLY POINT UP THE SIGNAL WHEN BE HEARD WITH GREEN INVERT-ED "V".
- Adjust trimmer 1A and 1B until the station signal is heard. Motion trimmer back of selected 540-985 KC station paper tab and press into round depression in 540-985 KC push-button.
- After trimmers 1A and 1B have been properly set for the selected station operating between 540-985 kilocycles, adjust other trimmers in the same manner and in the following order.
- Set trimmers 2A and 2B for selected station operating between 600-1040 kilocycles.
- Adjust trimmers 3A and 3B for the selected station operating between 680-1170 kilocycles.
- Set trimmers 4A and 4B for selected station operating between 900-1540 kilocycles.
- Adjust trimmers 5A and 5B for selected station operating between 1400-1720 kilocycles.


MODEL B10579

INSTRUCTIONS FOR INSTALLING AND OPERATING "AUTOMATIC" PUSH BUTTON"

Five stations operating in the 1720-540 kilocycle broadcast band may be received by using the "AUTOMATIC" PUSH-BUTTON tuned by properly setting the ten trimmer screws accessible through holes in the back of the chassis.

AS THE PUSH-BUTTONS ARE NOT PRE-SET AT THE FACTORY FOR ANY DEFINITE STATION BE SURE TO SET (a) It is important to have the aerial which will be used with the set, attached to the radio when adjusting the trimmers.

AS THE TRIMMERS SHOULD NEVER BE TOO LOOSELY OR TOO TIGHTLY ADJUSTED IT IS IMPORTANT THAT THE PROPER TRIMMERS BE USED.
 In some instances it may be necessary after the set is operated for a period of time to reset the trimmers as they may drift due to heat, humidity, etc.

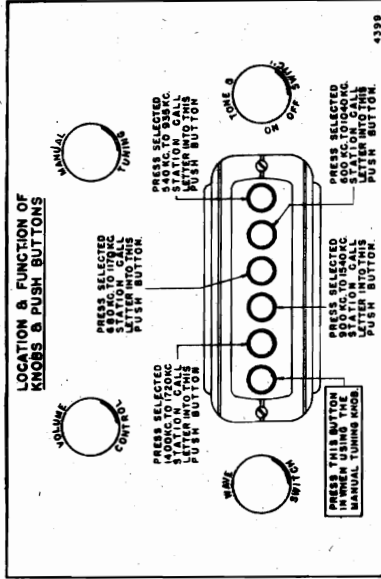


USE FOR STATION BETWEEN 540 TO 985 KC	USE FOR STATION BETWEEN 600 TO 1040 KC	USE FOR STATION BETWEEN 680 TO 1170 KC	USE FOR STATION BETWEEN 900 TO 1540 KC	USE FOR STATION BETWEEN 1400 TO 1720 KC
1A 1B	2A 2B	3A 3B	4A 4B	5A 5B

This diagram, which is similar to the one attached to the back of chassis over trimmer holes, shows the minimum-maximum range of the five groups of trimmers.


MODELS B10702, B10706,
B10707

ALLIED RADIO CORP. Schematic, Socket, Trimmers
Alignment

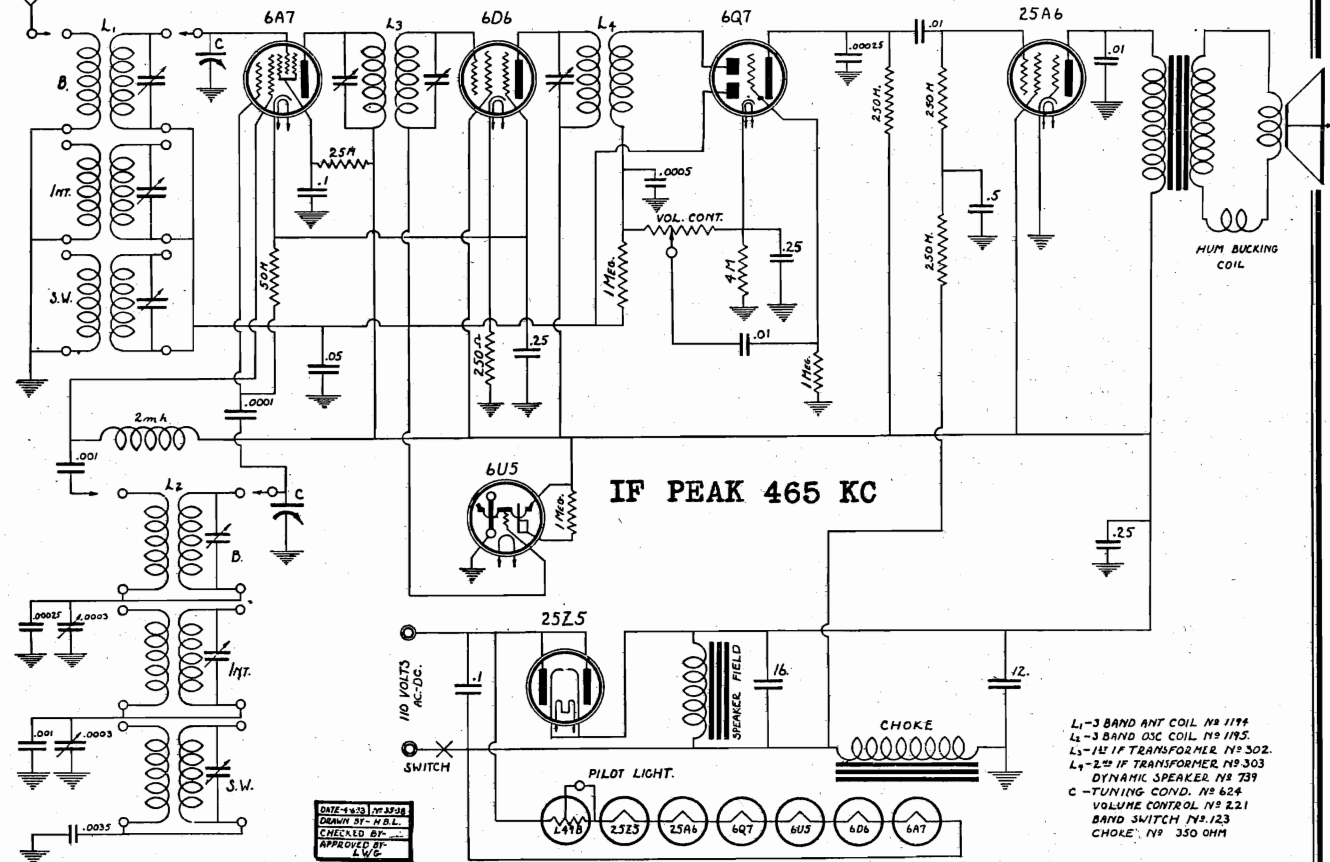

- L1-3 BAND ANT COIL N° 1194
- L2-3 BAND OSC COIL N° 1195
- L3-11 1/2 TRANSFORMER N° 302
- L4-2nd IF TRANSFORMER N° 303
- DYNAMIC SPEAKER N° 739
- C-TUNING COND. N° 624
- VOLUME CONTROL N° 221
- BAND SWITCH N° 123
- CHOKE N° 350 OHM

DATE 4-1-33 102338
DRAWN BY N.B.L.
CHECKED BY
APPROVED BY L.V.E.

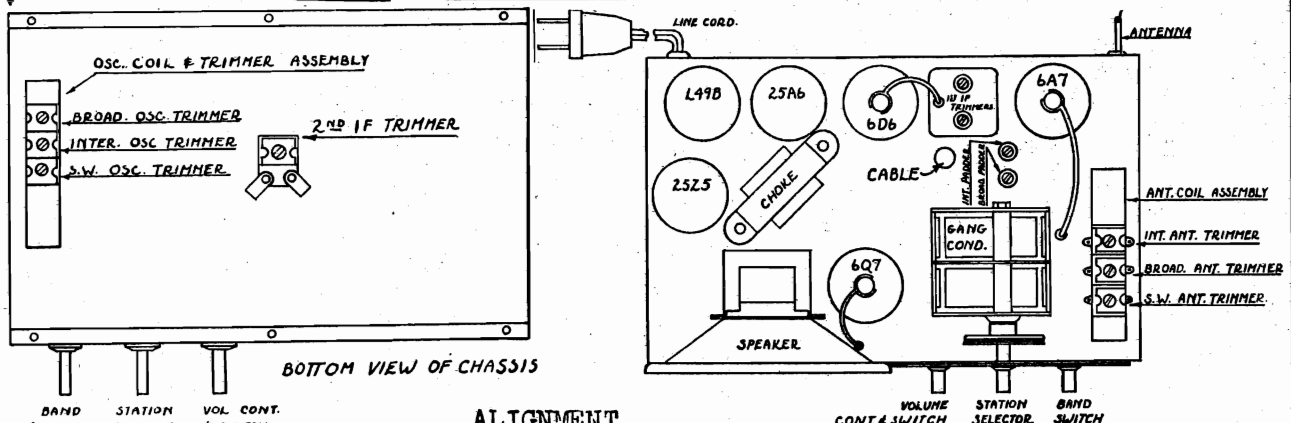

ALIGNMENT

- I.F. Set oscillator at 465 KC. Feed signal to grid of the 6A7 tube. Adjust trimmers on the intermediate frequency transformers for peak readings.
 - B.C. Turn switch to B.C. position. Set oscillator and receiver dial to 1400 KC. Use a .0002 mfd. condenser in the signal lead. Set volume control at maximum. Adjust B.C. OSC trimmer to maximum. Reset dial and oscillator to 600 KC and adjust B.C. Pad. Recheck at 1400 KC.
 - INT. Turn switch to INT. position. Use .0002 mfd. condenser with 400 ohm series resistor as dummy antenna. Set dial and oscillator at 5100 KC, Adjust antenna and oscillator trimmers to maximum. Reset dial and oscillator to 1800 KC and adjust padder. Recheck alignment at 5100 KC.
 - S.W. With switch in S.W. position, using a 400 ohm resistor as a dummy with oscillator and dial set to 15 MC., adjust S.W. antenna and oscillator trimmers to maximum
- Check sensitivity at 6000 KC. If receiver lacks sensitivity check the .0035 mica condenser for short circuit.

MODELS B10580, B10581,
B10582
Alignment, Tuner

ALLIED RADIO CORP.

CARE INCORRECT ADJUSTMENT AND THE DISCRIMINATOR TRIMMER SHOULD BE SET TO ABOUT 1/2 CAPACITY AND THE ADJUSTMENT OF THE DISCRIMINATOR TRIMMER MADE ALL OVER AGAIN.

ALIGNING 1.88-5.8 MEGACYCLE BAND:

- (a) Replace .00025 Mfd. test oscillator antenna lead series condenser with a 400 ohm resistor.
- (b) Adjust band selector switch to 1.88-5.8 megacycles, tune receiver dial and set test oscillator frequency to EXACTLY 5.6 megacycles. Bring in 5.6 megacycle test signal to maximum output by adjusting 5.6 M.C. oscillator trimmer.
- (c) Tune receiver dial and test oscillator frequency to EXACTLY 5 Megacycles and adjust 5 M.C. antenna trimmer for maximum sensitivity.

ALIGNING 5.85-18.5 MEGACYCLE BAND:

- (a) Leave 400 ohm resistor in series with test oscillator lead and place band selector switch for operation on 5.85-18.5 megacycle band, tune receiver dial and set test oscillator frequency to EXACTLY 18.5 megacycles.
- (b) Adjust 18.5 M.C. oscillator trimmer to bring in 18.5 megacycle test signal to maximum output.

NOTE: When adjusting this trimmer two peaks, the fundamental and the image peak will be noticed. CARE MUST BE TAKEN THAT THE FUNDAMENTAL PEAK AND NOT THE IMAGE PEAK IS USED FOR ALIGNING THE RECEIVER AT 18.5 MEGACYCLES. Always back off the trimmer to minimum capacity, then screw down the trimmer (add capacity) until the FIRST peak which is the fundamental and the proper one to use is tuned in. If the trimmer is received down beyond the point where the first peak is received the incorrect image peak will be tuned in. After completing adjustment of the oscillator trimmer at 18.5 megacycles, always check to see if the proper frequency has been used. To do this leave test oscillator frequency at 18.5 megacycles, increase the output of the test oscillator and tune receiver dial to approximately 17.5 megacycles. Then vary the receiver dial slightly to the right and left of 17.5 megacycles, and if the fundamental peak was used in aligning at 18.5 megacycles the test oscillator signal will be heard at approximately 17.5 megacycles on the receiver dial.

- (c) Tune receiver dial and set test oscillator frequency to EXACTLY 15 megacycles.
- (c) Rock gang condenser slightly to right and left and adjust 15 M.C. antenna trimmer for maximum 15 megacycle test signal response.


To assure more accurate trimmer setting, repeat all above adjustments several times always using lowest possible test oscillator output consistent with readable output meter scale deflection.

PROCEDURE FOR REMOVING RECEIVER FROM CABINET.


1. Unscrew the two knurled head screws mounted on front of the glass frame and then holding onto the screws pull dial glass away from the cabinet.
2. Swing 'rapid tuning' lever to center position as shown, loosen (do not remove) screw thru hole in bottom center, and remove lever knob.
3. Loosen set screws on all five tuning knobs, and remove knobs from shafts. (Not shown in sketch).
4. Remove four bolts at bottom side of chassis mtg. shelf (not shown in sketch).
5. Remove wood screws on the pressure brackets at rear of chassis (not shown in sketch) and then slide receiver out of cabinet.
6. When replacing receiver in cabinet, reverse entire procedure given above.

- (d) Place band selector switch for operation on 1720-540 K.C. broadcast band—and set receiver dial somewhere near 1000 kilocycles at a point where no station is heard.
- (e) Rotate A.F.C. switch knob from A.F.C. "on" to A.F.C. "off" position and note whether the milliammeter reading changes as the position of the A.F.C. switch is changed. No change in reading indicates probable proper discriminator trimmer adjustment, while a noticeable change indicates improper discriminator trimmer adjustment.
- (f) **IMPORTANT: DO NOT ADJUST DISCRIMINATOR TRIMMER UNLESS IT IS ABSOLUTELY NECESSARY.** Place A.F.C. switch in A.F.C. "off" position and note milliammeter reading, then place A.F.C. switch in A.F.C. "on" position and CAREFULLY ADJUST DISCRIMINATOR TRIMMER UNTIL MILLIAMMETER READING IS EXACTLY THE SAME AS IT WAS WITH THE A.F.C. SWITCH IN THE "OFF" POSITION.

NOTE: As the discriminator trimmer screw is screwed in (increasing capacity) the milliammeter reading should decrease and as the discriminator trimmer is unscrewed (decreasing capacity) the milliammeter reading should increase. IF WHEN ADJUSTING THE DISCRIMINATOR TRIMMER THE MILLIAMMETER READING DOES NOT SHARPLY INCREASE OR DECREASE AS THE TRIMMER IS ADJUSTED EVEN AFTER SEVERAL TURNS OF THE TRIMMER SCREW, THIS DOES NOT INDICATE PROPER BALANCING BUT DOES INDI-

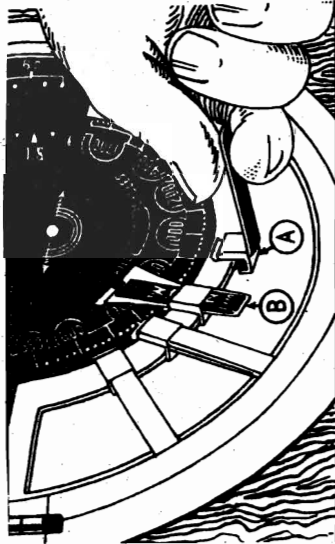

Above Diagram shows method of inserting and setting tabs.

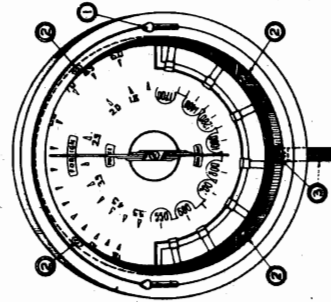

ALIGNING I.F. STAGE AT 485 KILOCYCLES:

- (a) Place automatic frequency control in the maximum left hand A.F.C. "off" position.
- (b) Attach the ground lead of the test oscillator to the chassis. Connect the other lead to the grid cap of the 6A8 tube through a .02 Mfd. series condenser. DO NOT REMOVE GRID CLIP.
- (c) Set test oscillator to EXACTLY 485 kilocycles and turn volume control on full.
- (d) Remove shields held in position by snap fasteners over A.F.C. test jack and over trimmer screw holes in the first and second I.F. transformer shield cans.
- (e) Peak second I.F. transformer trimmers for maximum 485 kilocycle output by adjusting the two trimmers accessible through the two top holes in the second I.F. transformer shield can. DO NOT TOUCH DISCRIMINATOR (BOTTOM) SCREW.
- (f) Peak each of the first I.F. transformer trimmers for maximum 485 kilocycle signal output.

ALIGNING 1720-540 KILOCYCLE BAND:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh), at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If the dial needle does not point exactly to the last line, move needle to correct position.
- (b) Remove test oscillator lead from grid of 6A8 tube and connect to receiver "A" antenna post through a .00025 Mfd. condenser.
- (c) Adjust A.F.C. control to maximum left hand A.F.C. "off" position and band selector switch for operation on the 1720-540 kilocycle band.
- (d) Set test oscillator frequency and receiver dial to EXACTLY 1720 kilocycles and BEING IN 1720 KILOCYCLE TEST OSCILLATOR SIGNAL TO MAXIMUM OUTPUT BY ADJUSTING 1720 KILOCYCLE OSCILLATOR TRIMMER.
- (e) Tune receiver dial and set test oscillator frequency to EXACTLY 1400 kilocycles. Adjust 1400 K.C. R.F. and antenna trimmers for maximum sensitivity.
- (f) Set test oscillator frequency and receiver dial to approximately 600 kilocycles. Then while rocking gang condenser slightly to right and left, adjust 600 K.C. oscillator padder for maximum signal response.


ALIGNING DISCRIMINATOR CIRCUIT:

- (a) After completing 1720-540 kilocycle adjustment, set test oscillator to EXACTLY 465 KILOCYCLES and connect to grid of 6A8 tube through a .02 Mfd. Condenser—insert lead of double scale 0 to 1 and 0 to 5 milliammeter into A.F.C. test jack located on top of chassis adjacent to the 6L7 tube. To avoid possibility of damaging the meter should one of the milliammeter leads short to the metal chassis, ALWAYS TURN OFF RECEIVER WHEN INSERTING OR REMOVING MILLIAMMETER LEADS FROM A.F.C. TEST JACK.
- (b) Short out A.F.C. mute switch by grounding the second from the left (looking at the front of the chassis) of the four lugs mounted on top of the dial assembly. The proper lug to ground is indicated in the "Note X" on chassis top parts view.
- (c) Turn receiver on, place A.F.C. switch knob in A.F.C. "off" position and if meter needle jumps off scale adjust output of test oscillator until an approximate 2 M.A. deflection is obtained on the 0 to 5 milliammeter scale.


MODELS B10588, B10589
 MODELS B10590 to B10593,
 B10595, B10596
 Chassis, Trimmers, Socket

ALLIED RADIO CORP.


MODELS B10590, B10591, B10592
 B10593, B10595, B10596.

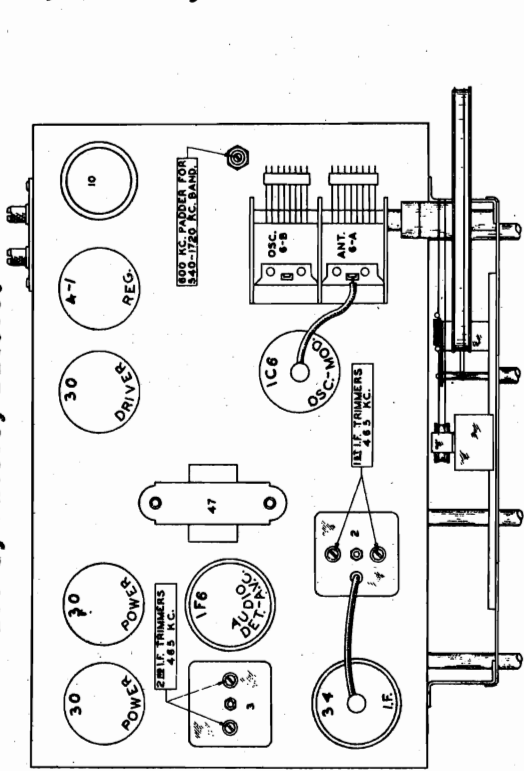


DUMMY ANTENNAS.— I.F.—0.2 MFD, 1720—
 540KC.—0.0025MFD, 17-58 MC.—0.0025MF.
 SEE SPECIAL SECTION VOL. VIII. WITH 400-A IN SERIES, 5.7-18.3 MC.—400-A.

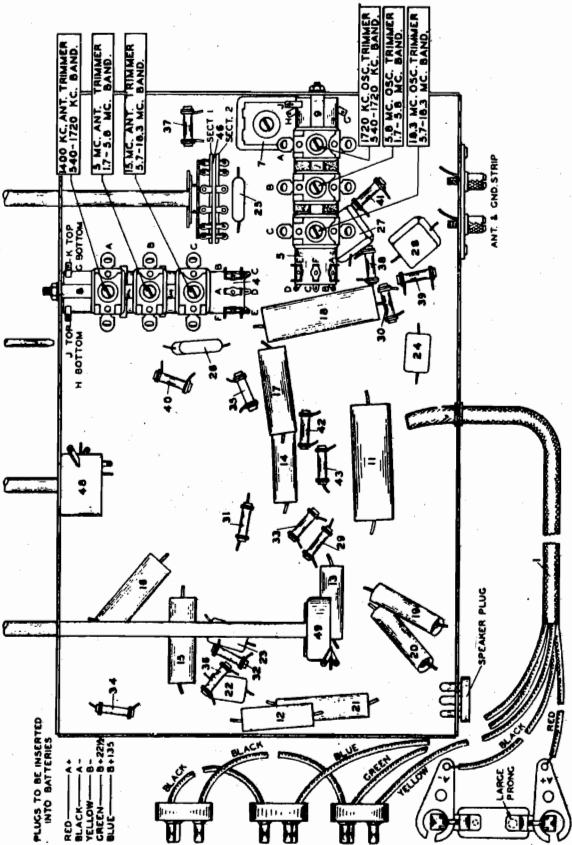


MODELS B10588 and B10589.

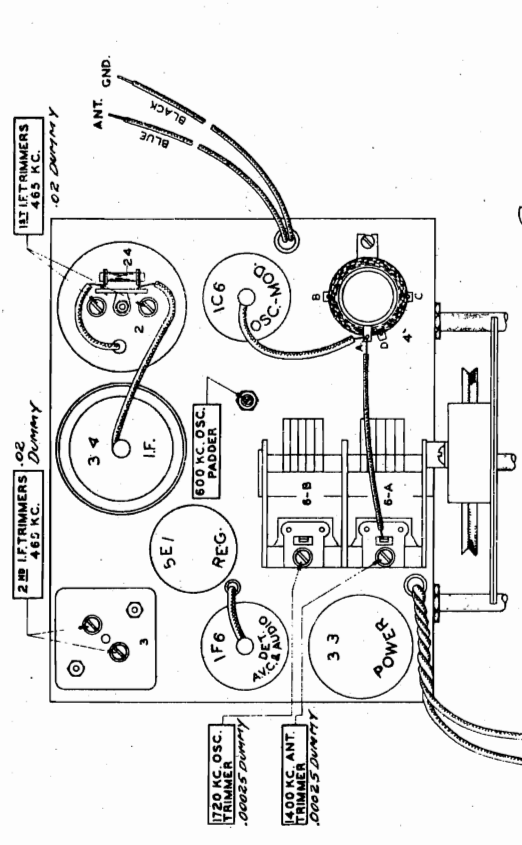

CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION VOL. VIII.

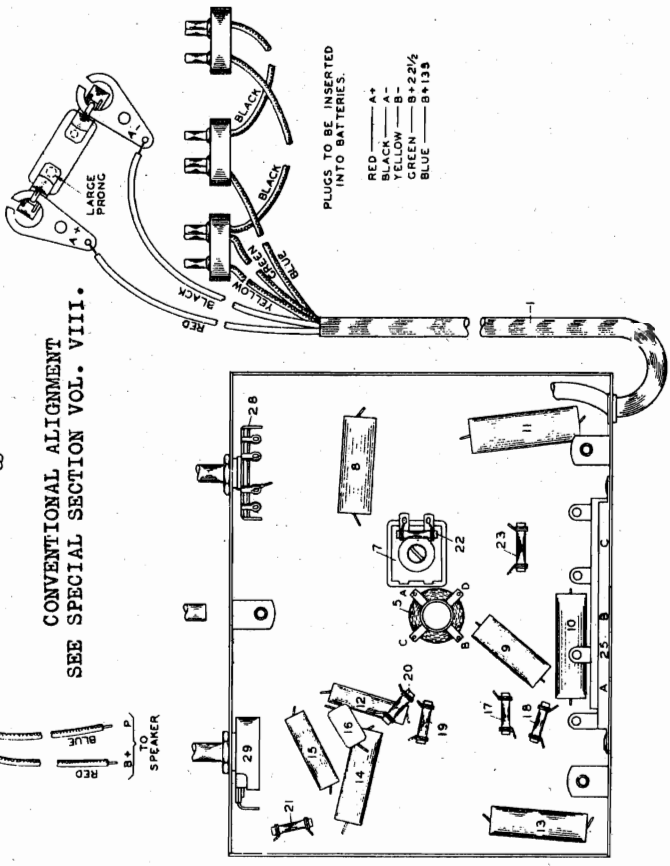

MODELS B10750, B10760, B10761,
 B10762, B10770, B10771
 Schematic, Trimmers, Socket
 Alignment ALLIED RADIO CORP.

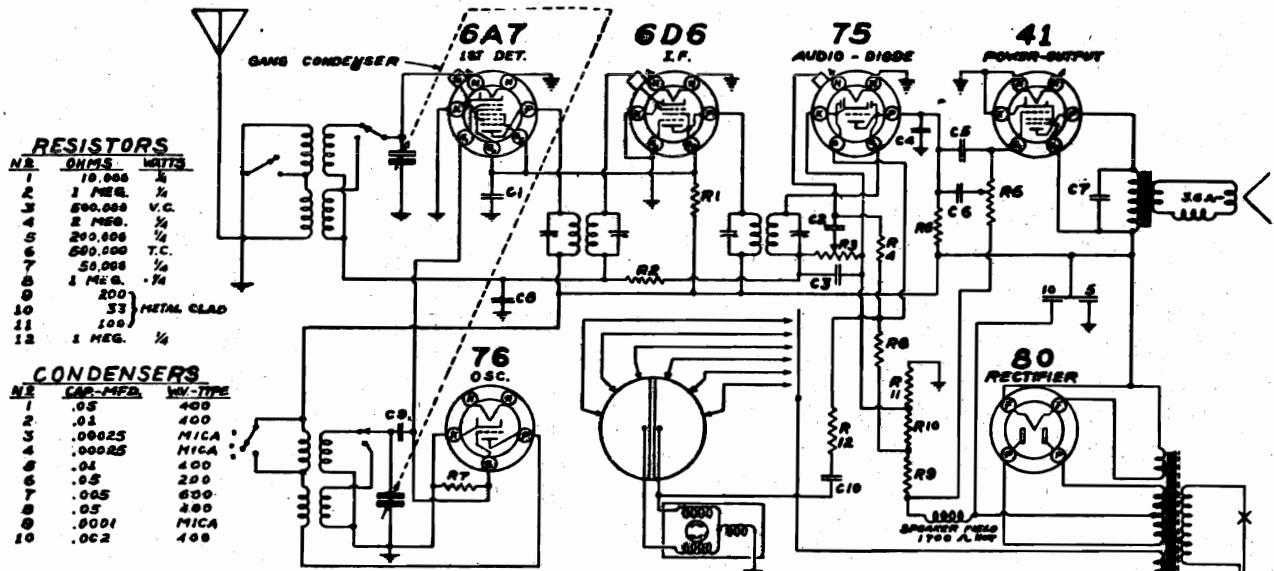

RESISTORS

NO.	OHMS	VALUES
1	10,000	1/4
2	1 MEG.	1/4
3	500,000	V.C.
4	200,000	1/4
5	50,000	T.C.
6	50,000	1/4
7	1 MEG.	1/4
8	200	
9	53	METAL GLAD
10	200	
11	200	
12	1 MEG.	1/4


CONDENSERS

NO.	CAP. MFDS.	VAL. TYPE
1	.05	400
2	.01	400
3	.00025	MICA
4	.00025	MICA
5	.01	400
6	.05	200
7	.005	600
8	.05	400
9	.0001	MICA
10	.002	400

CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION VOL. VIII

535 to 1730 Kilocycles
 5650 to 18,100 Kilocycles

IF PEAK 456 KC
 BAND SWITCH IN BROADCAST POSITION
 I.F. - 456 K.C.
 V.C. - VOLUME CONTROL
 T.C. - TONE CONTROL

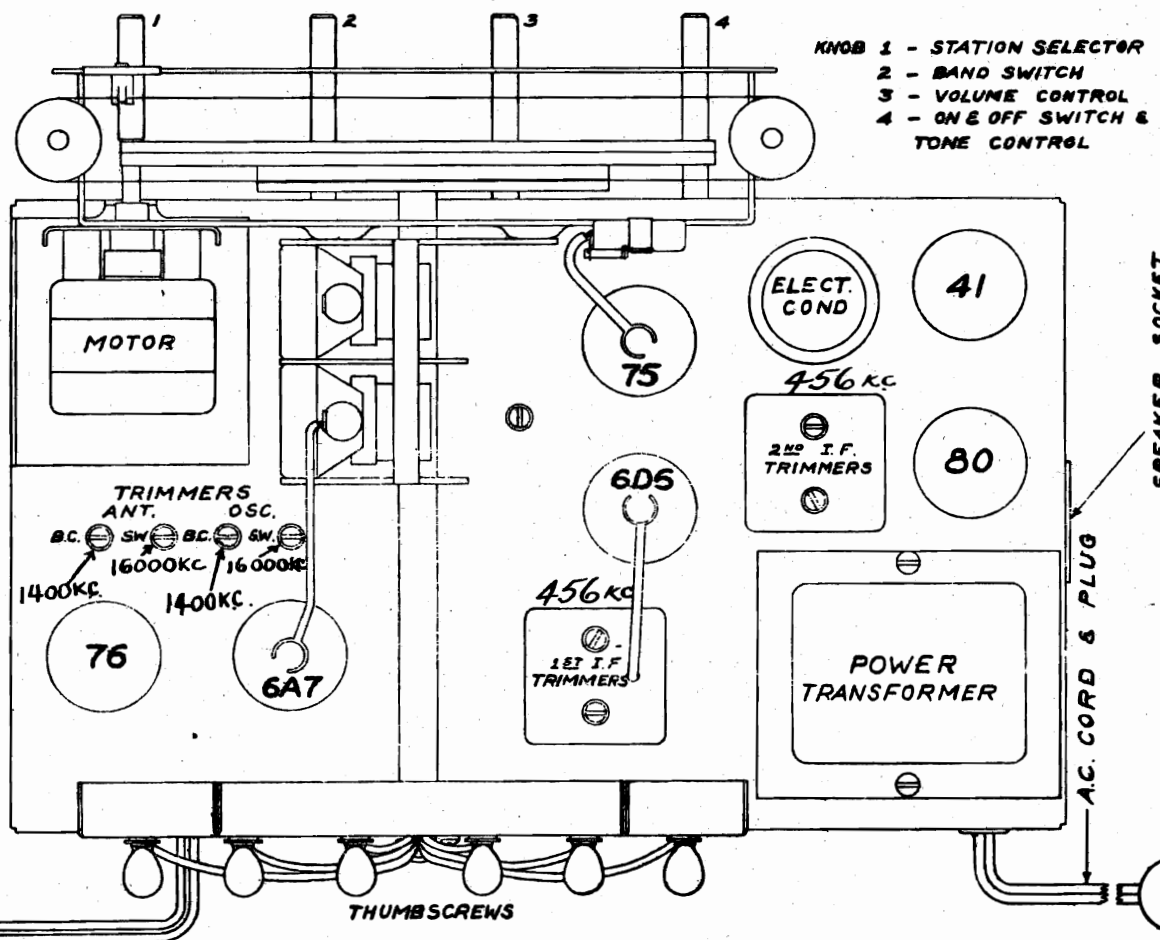


- KNOB 1 - STATION SELECTOR
- 2 - BAND SWITCH
- 3 - VOLUME CONTROL
- 4 - ON & OFF SWITCH & TONE CONTROL

ANT. WIRE - BLUE
 GND. WIRE - BLACK

ALLIED RADIO CORP.

MODELS B10782, B10784
B10786

Schematic, Socket, Trimmers
Alignment

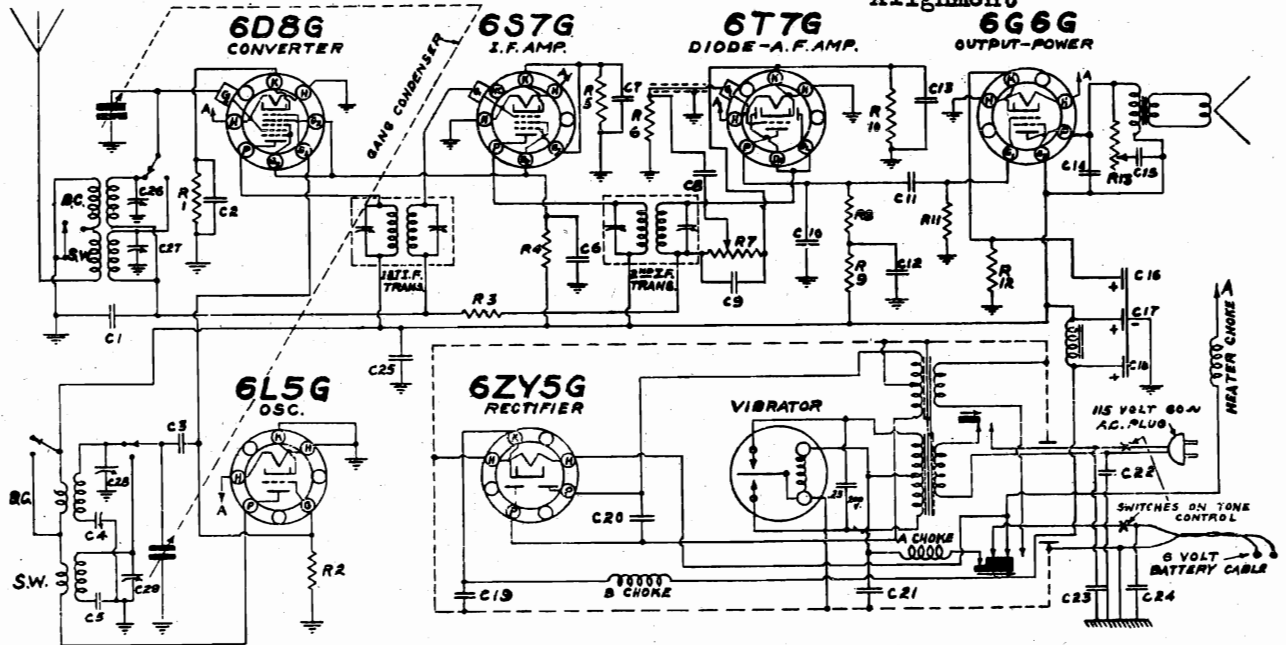


CONDENSERS				RESISTORS			
NO.	CAPACITY	TYPE	NO.	OHMS	WATTS	SPL. TOL.	
1	.05 Mfd.	200V.	13	1500	1/4	± 10%	
2	.05 Mfd.	200V.	14	50,000	1/4		
3	.05 Mfd.	200V.	15	1,000,000	1/4		
4	100 μmf.	MICA	16	30,000	1/4		
5	300-500 μmf.	"	17	25V.	1/4	± 10%	
6	4000 μmf.	M. 25%	18	200V.	1/4		
7	.1 Mfd.	200V.	19	500,000	1/4	(VOL. CONT.)	
8	.05 "	200V.	20	500,000	1/4		
9	.01 "	400V.	21	200,000	1/4		
10	250 μmf.	MICA	22	10V.	1/4	± 10%	
11	250 "	"	23	400V.	1/4		
12	.01 Mfd.	400V.	24	10V.	1/4	± 10%	
	.1 "	200V.	25	100,000	1/4	(TONE CONT.)	

IF PEAK 456 KC


BAND SWITCH IN BROADCAST POSITION.
POWER SWITCH IN BATTERY POSITION.
I. F. - 456 K. C.
C26 TO C29 - 2 TO 20 μmf. TRIMMERS

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOL. VIII

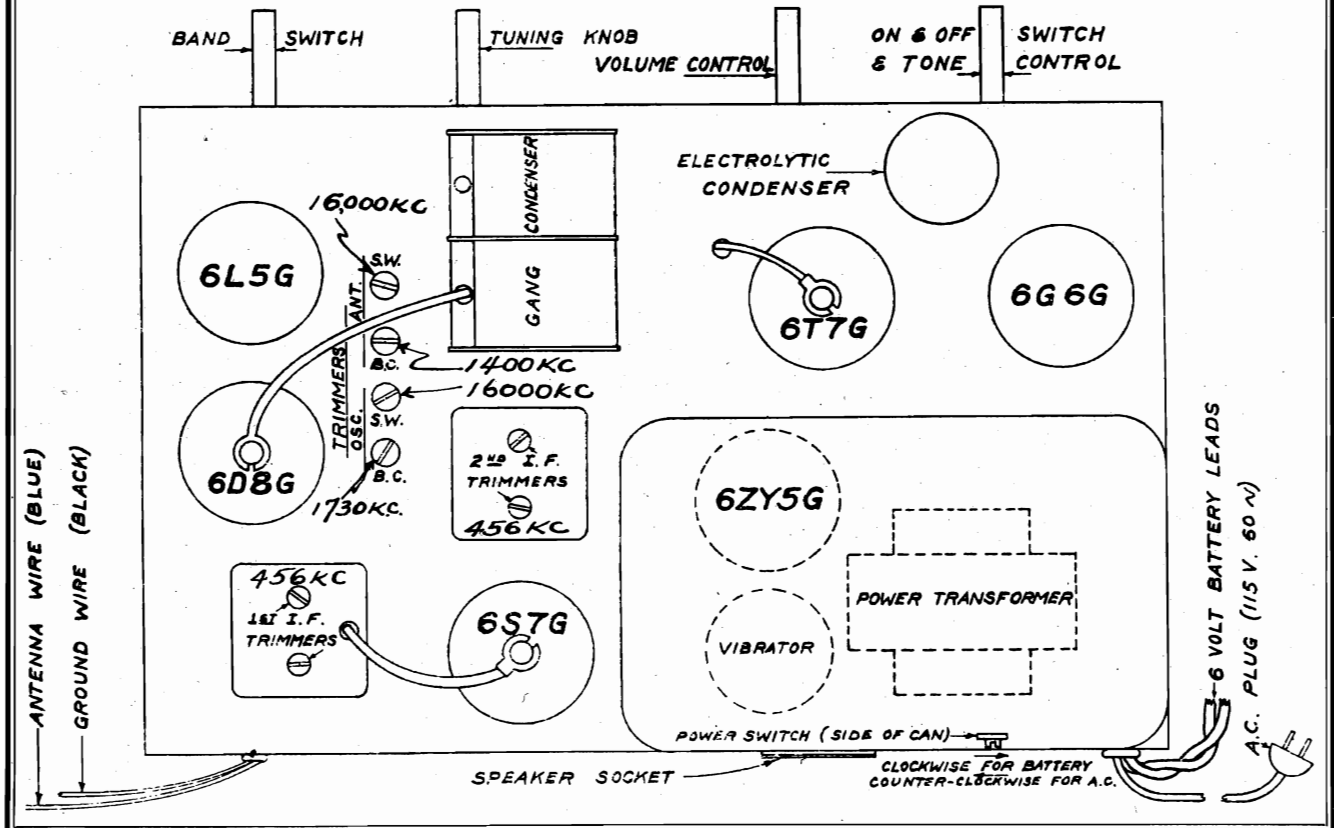

MODELS B10790, E10890
Schematic, Alignment
Socket, Trimmers

ALLIED RADIO CORP.


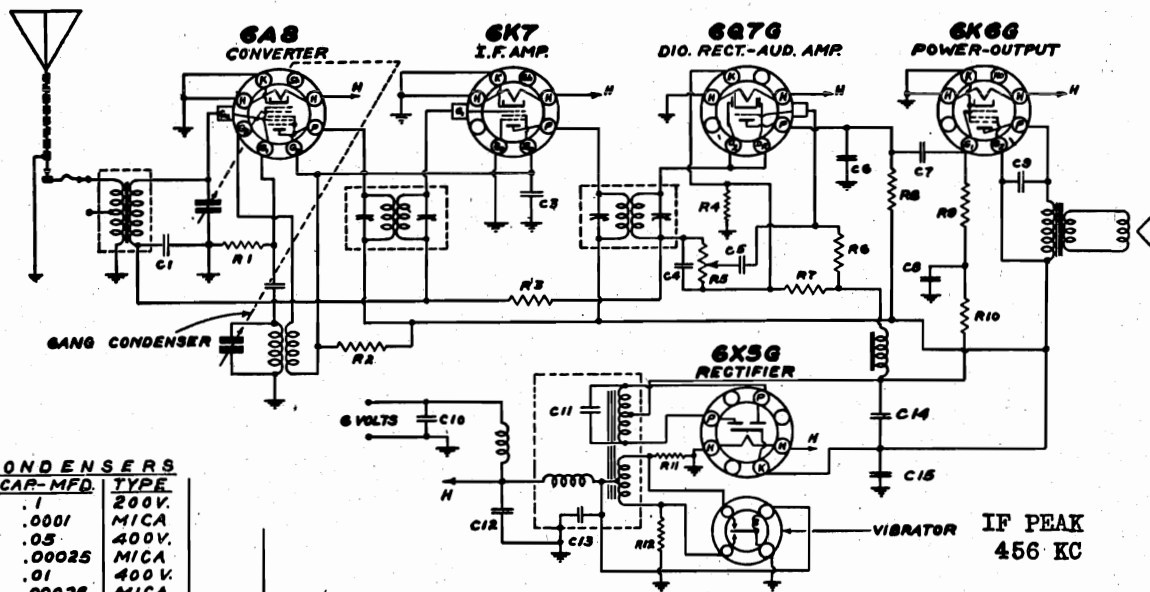


CONDENSERS

N ^o	CAP.-MFD.	TYPE
1	.1	200V.
2	.0001	MICA
3	.05	400V.
4	.00025	MICA
5	.01	400V.
6	.00025	MICA
7	.01	400V.
8	.1	200V.
9	.01	400V.
10	.25	120V.
11	.005	1500V.
12	.5	120V.
13	.5	120V.
14	8.	400
15	8.	W.V.

RESISTORS

N ^o	OHMS	WATTS	N ^o	OHMS	WATTS
1	50,000	1/4	7	(W.W.) 40	1/2
2	15,000	1	8	200,000	1/4
3	1,000,000	1/2	9	500,000	1/4
4	(W.W.) 60	1/2	10	100,000	1/4
5	500,000	V.C.	11	100	100
6	2,000,000	1/4	12	100	1/2

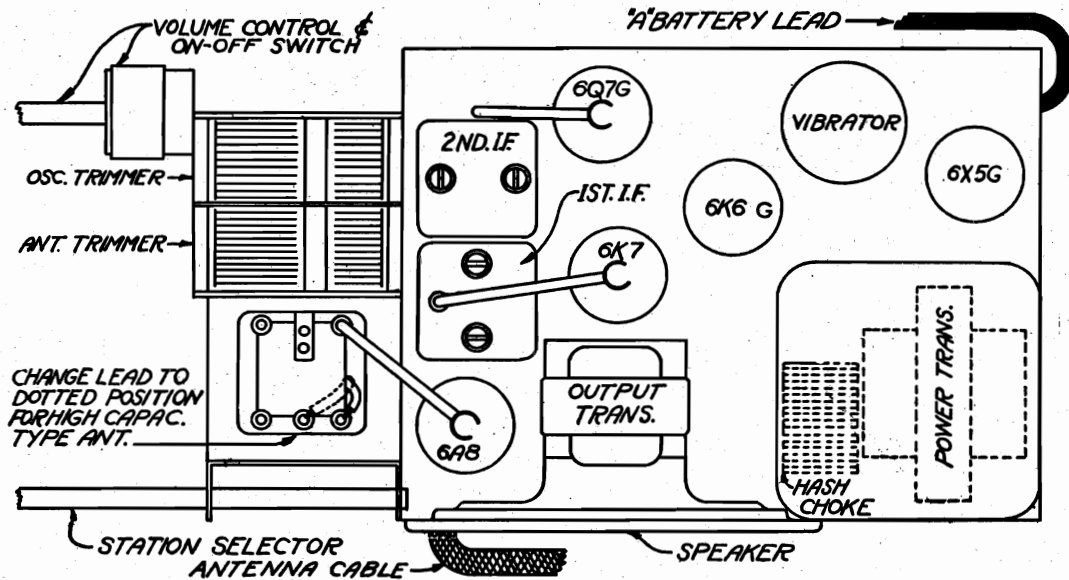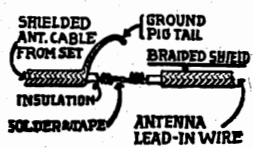


IF. ALIGNMENT. Adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tubes (6A8) through a .05 or .1 mfd. condenser. The ground on the test oscillator can be connected to the chassis ground. Align all four I.F. trimmers to peak or maximum reading on the output meter.

BROADCAST BAND ALIGNMENT. Connect the output of the oscillator to the antenna lead of the receiver through a 50 mmfd. condenser. This antenna

lead should be a two foot length of standard low capacity shielded loom fitted with the proper bayonet type plug to accommodate the antenna input receptacle on the receiver. Set the oscillator to 1550 KC and with the gang condenser at minimum, adjust the oscillator trimmer to receive this signal. Then set the oscillator to 1400 KC and adjust the antenna trimmer to give maximum output.

ALLIED RADIO CORP.

MODELS B10791, E10891
Schematic, Alignment
Socket, Trimmers

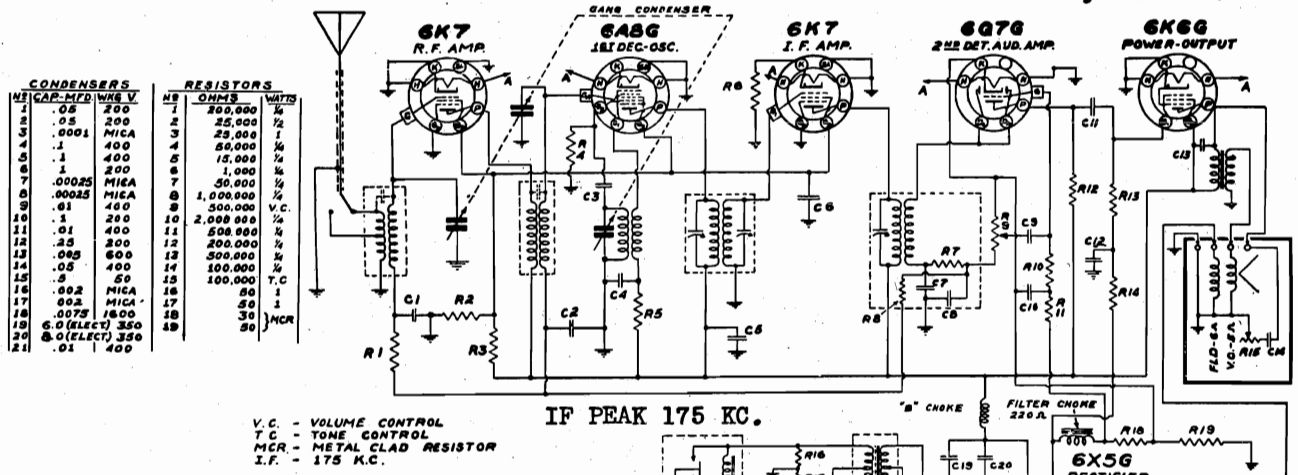


6 Tube Automobile Radio ALIGNMENT DATA

GENERAL DATA. The alignment of this receiver requires the use of a test oscillator that will cover the frequencies of 175, 600, 1400 and 1550 K.C., and an output meter to be connected across the primary or secondary of the output transformer. If possible, all alignment should be made with the volume control on maximum and the test oscillator output as low as possible to prevent the A.V.C. from operating and giving false readings.

CORRECT ALIGNMENT PROCEDURE. The intermediate frequency (I.F.) transformers should be aligned properly as the first step.

I.F. ALIGNMENT. Adjust the test oscillator to 175 K.C. and connect the output to the grid of the first detector tube, 6A8G, through a .1 mfd. condenser. The ground on the test oscillator can be connected to the chassis ground. Align the trimmers of the first and second I.F. transformers to peak or maximum reading on the output meter.


R.F. ALIGNMENT. Adjust the test oscillator to 1550 K.C. and connect the output to the antenna through a .00005 mfd. mica condenser to give the equivalent of a low capacity average auto antenna. When this adjustment is made, the signal must be introduced into the receiver through the shielded lead supplied with the receiver. The plug should be inserted to conform with the "Low Capacity" position. (See Figure 18). Set the gang condenser to minimum and adjust the oscillator trimmer to peak. (Center section of gang condenser). The next step is to set the test oscillator and receiver to 1400 K.C. and adjust the front and rear trimmers of the gang condenser to peak. The rear section of the gang condenser tunes the antenna amplifier stage (6K7 tube), and the front condenser section tunes the detector grid coil of the 6A8G tube.

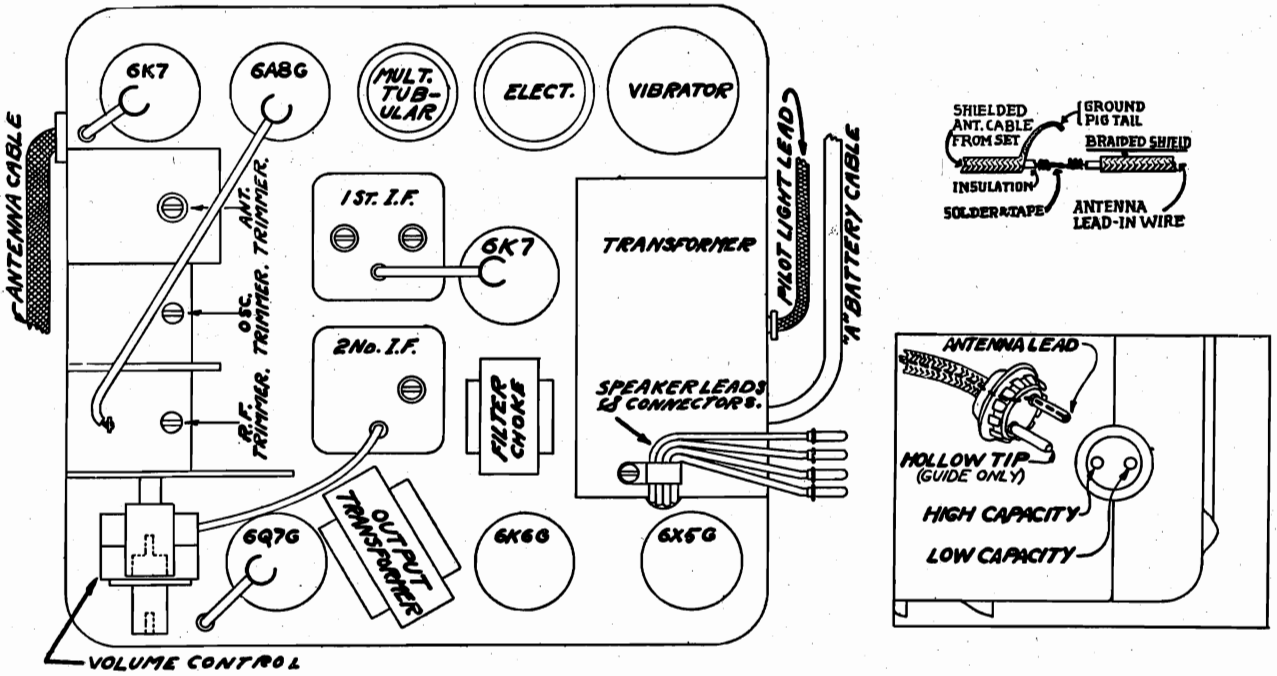



MODEL E10855
MODEL E10865

ALLIED RADIO CORP.

Schematics, Socket Alignment, Trimmers

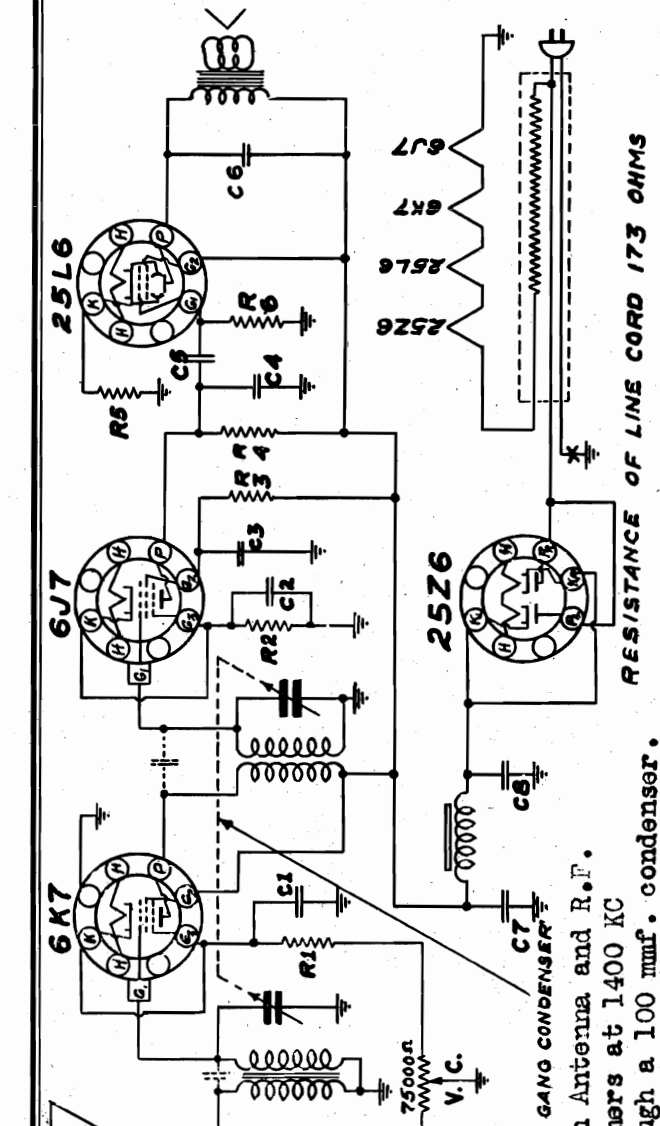

MODEL E10865

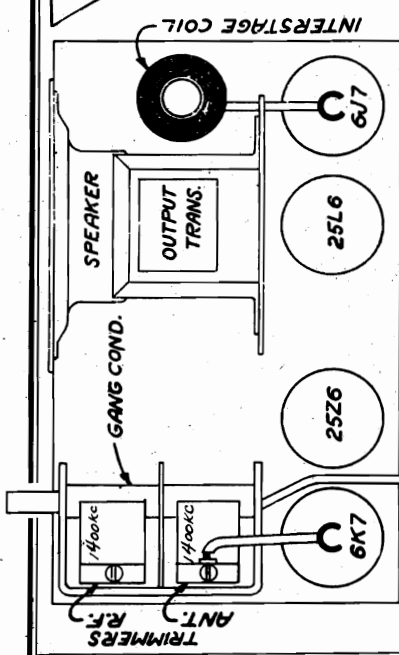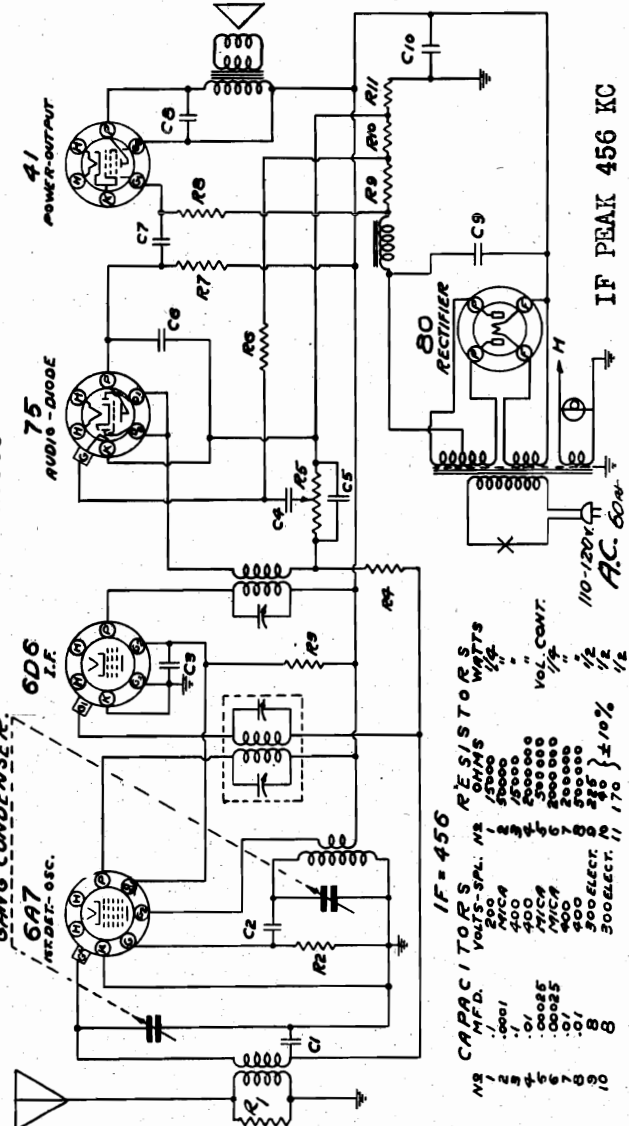


MODEL E10855

RESISTORS		CAPACITORS	
N ^o	OHMS	N ^o	MFD.
R1	250	C1	.1
R2	25,000	C2	.25
R3	2,000,000	C3	.1
R4	500,000	C4	.00025
R5	110	C5	.01
R6	500,000	C6	.02
		C7	10.0
		C8	300

WATTS: R4 1/4, R5 1/4, R6 1/4
TYPE: C7 MICA, C8 300 ELECT.

I.F. Align at 456 KC through .05 mfd. condenser. B.C.Osc, trimmer at 1730 KC using .0002 mfd. condenser. B.C. Ant. trimmer at 1400 KC.

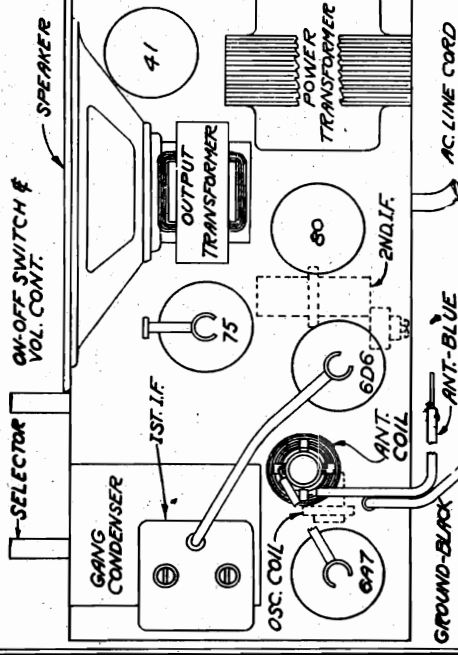











IF = 456

N ^o	MFD.	VOLTS-SPL.	N ^o	OHMS	RESISTORS
1	.0001	AVC4	1	50000	WATTS
2	.01	400	2	15000	1/4
3	.0005	AVC9	3	20000	1/2
4	.00025	400	4	20000	1/2
5	.01	AVC9	5	20000	1/2
6	.01	400	6	20000	1/2
7	.0005	400	7	20000	1/2
8	.01	500 ELECT.	8	20000	1/2
9	.01	500 ELECT.	9	20000	1/2
10	.01	500 ELECT.	10	20000	1/2




RESISTORS: 1/170 ±10%
VOL. CONT. 1/2, 1/2, 1/2
AC 60W 110-120V

ANDREA RADIO CORP.

MODELS 2F-12, 3F-12
Video Chassis VF-12
Schematic, Trimmers, Coils

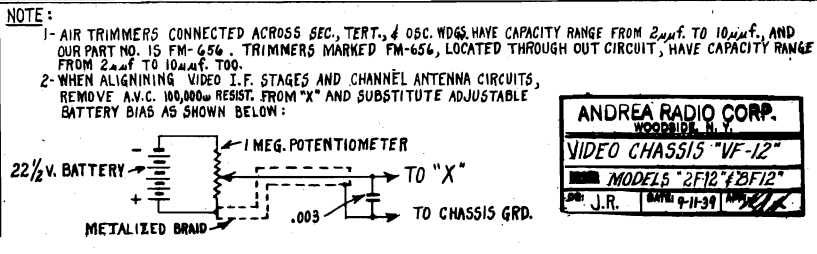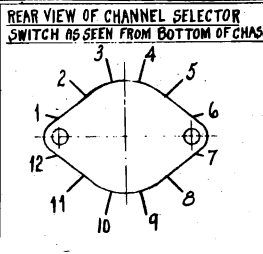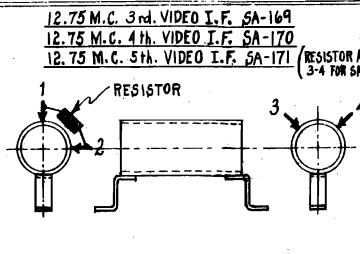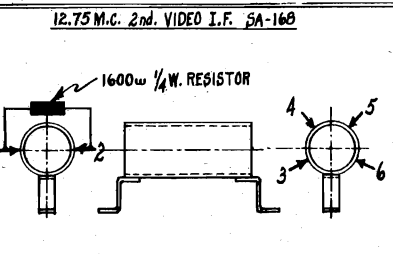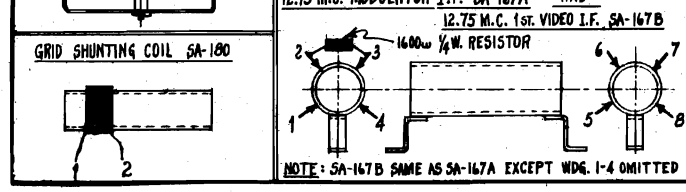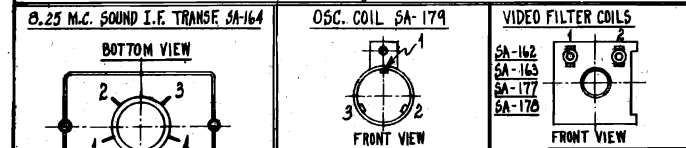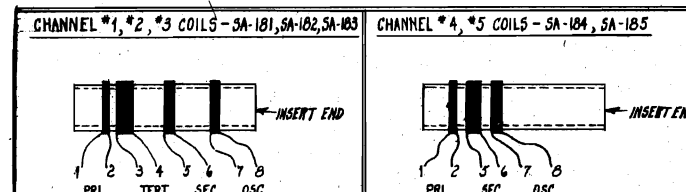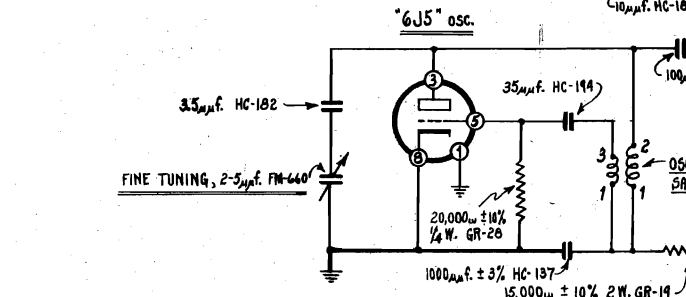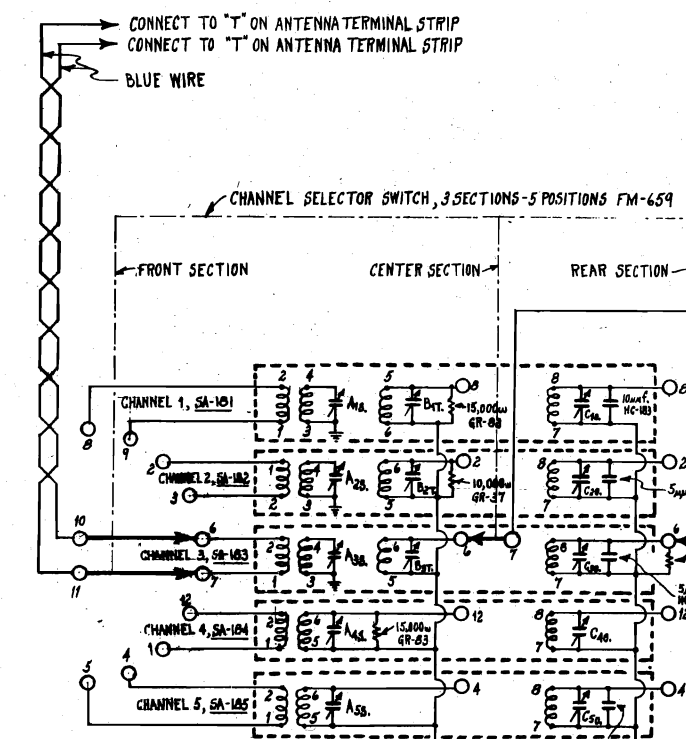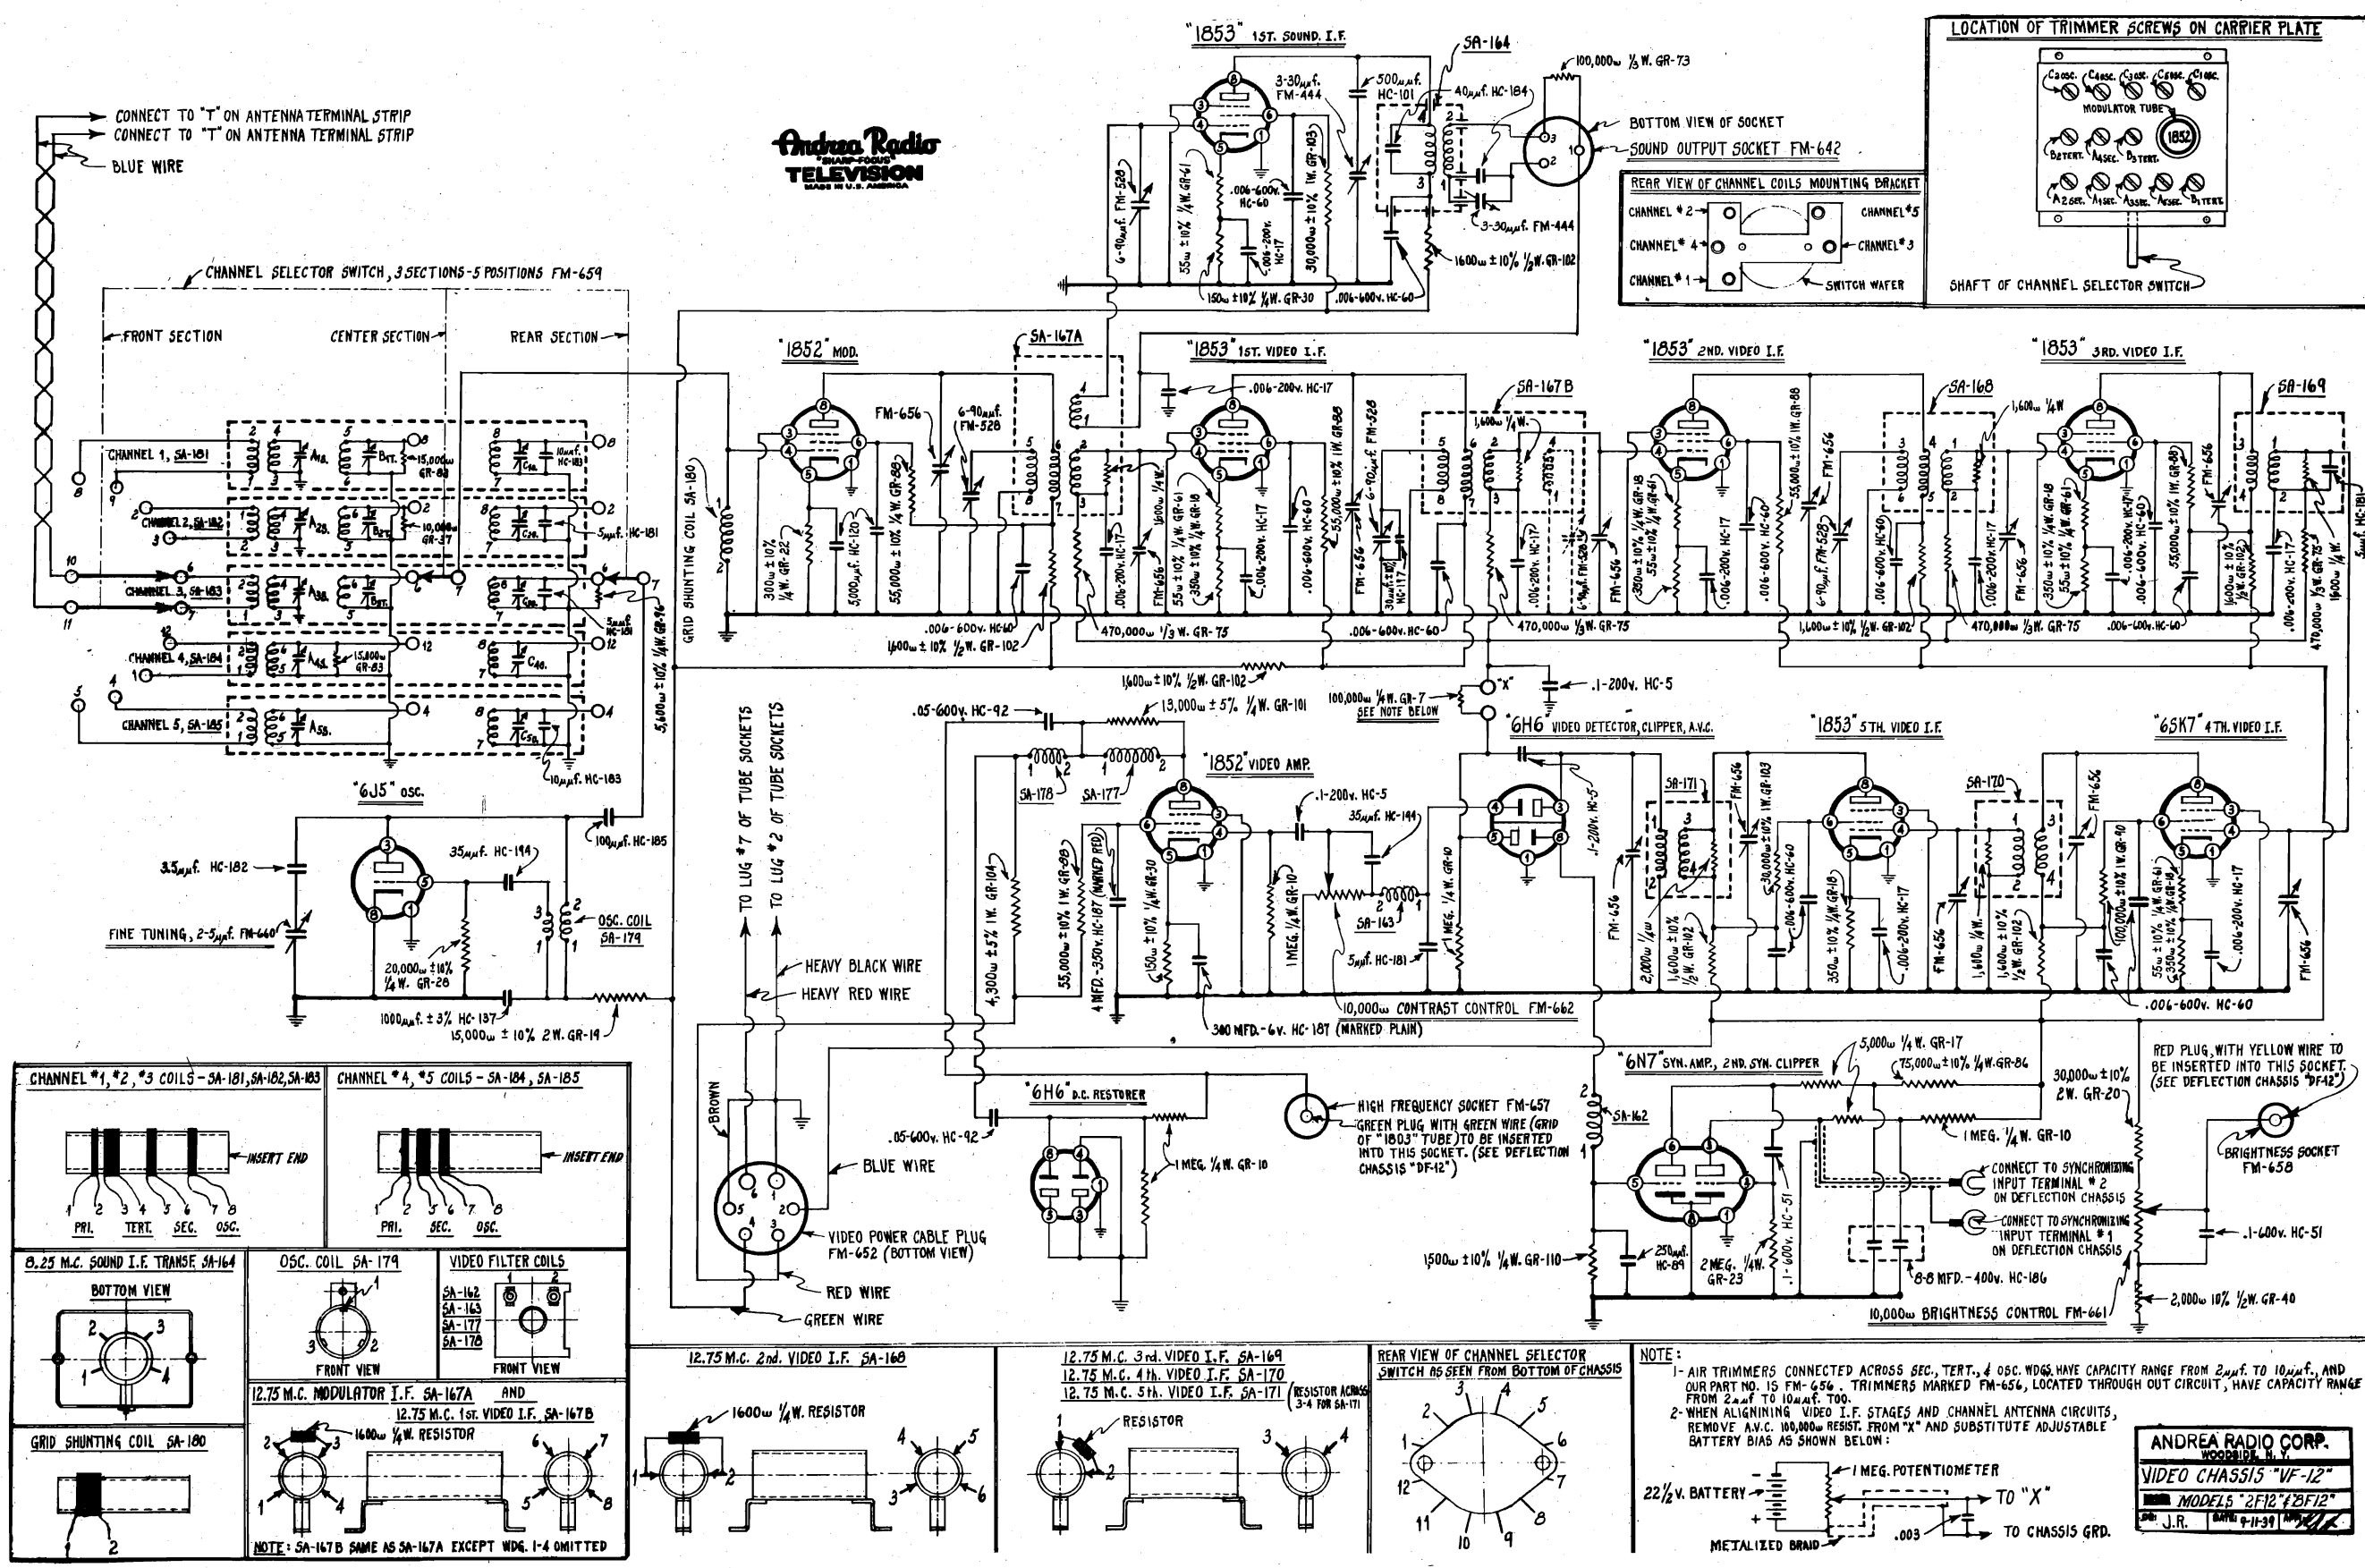


NOTE:
 1- AIR TRIMMERS CONNECTED ACROSS SEC., TERT., & OSC. WDGs. HAVE CAPACITY RANGE FROM 2μf. TO 10μf., AND OUR PART NO. IS FM-656. TRIMMERS MARKED FM-656, LOCATED THROUGH OUT CIRCUIT, HAVE CAPACITY RANGE FROM 2μf. TO 10μf. TOO.
 2- WHEN ALIGNING VIDEO I.F. STAGES AND CHANNEL ANTENNA CIRCUITS, REMOVE A.V.C. 100,000Ω RESIST. FROM "X" AND SUBSTITUTE ADJUSTABLE BATTERY BIAS AS SHOWN BELOW:

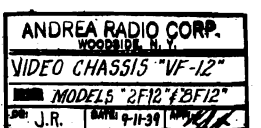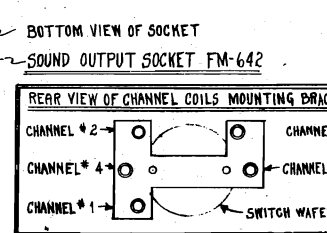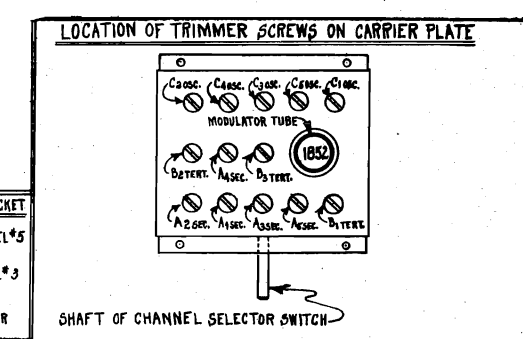

MODELS 2F12, 8F12
Radio Chassis RF-12
Schematic, Coils

ANDREA RADIO CORP.

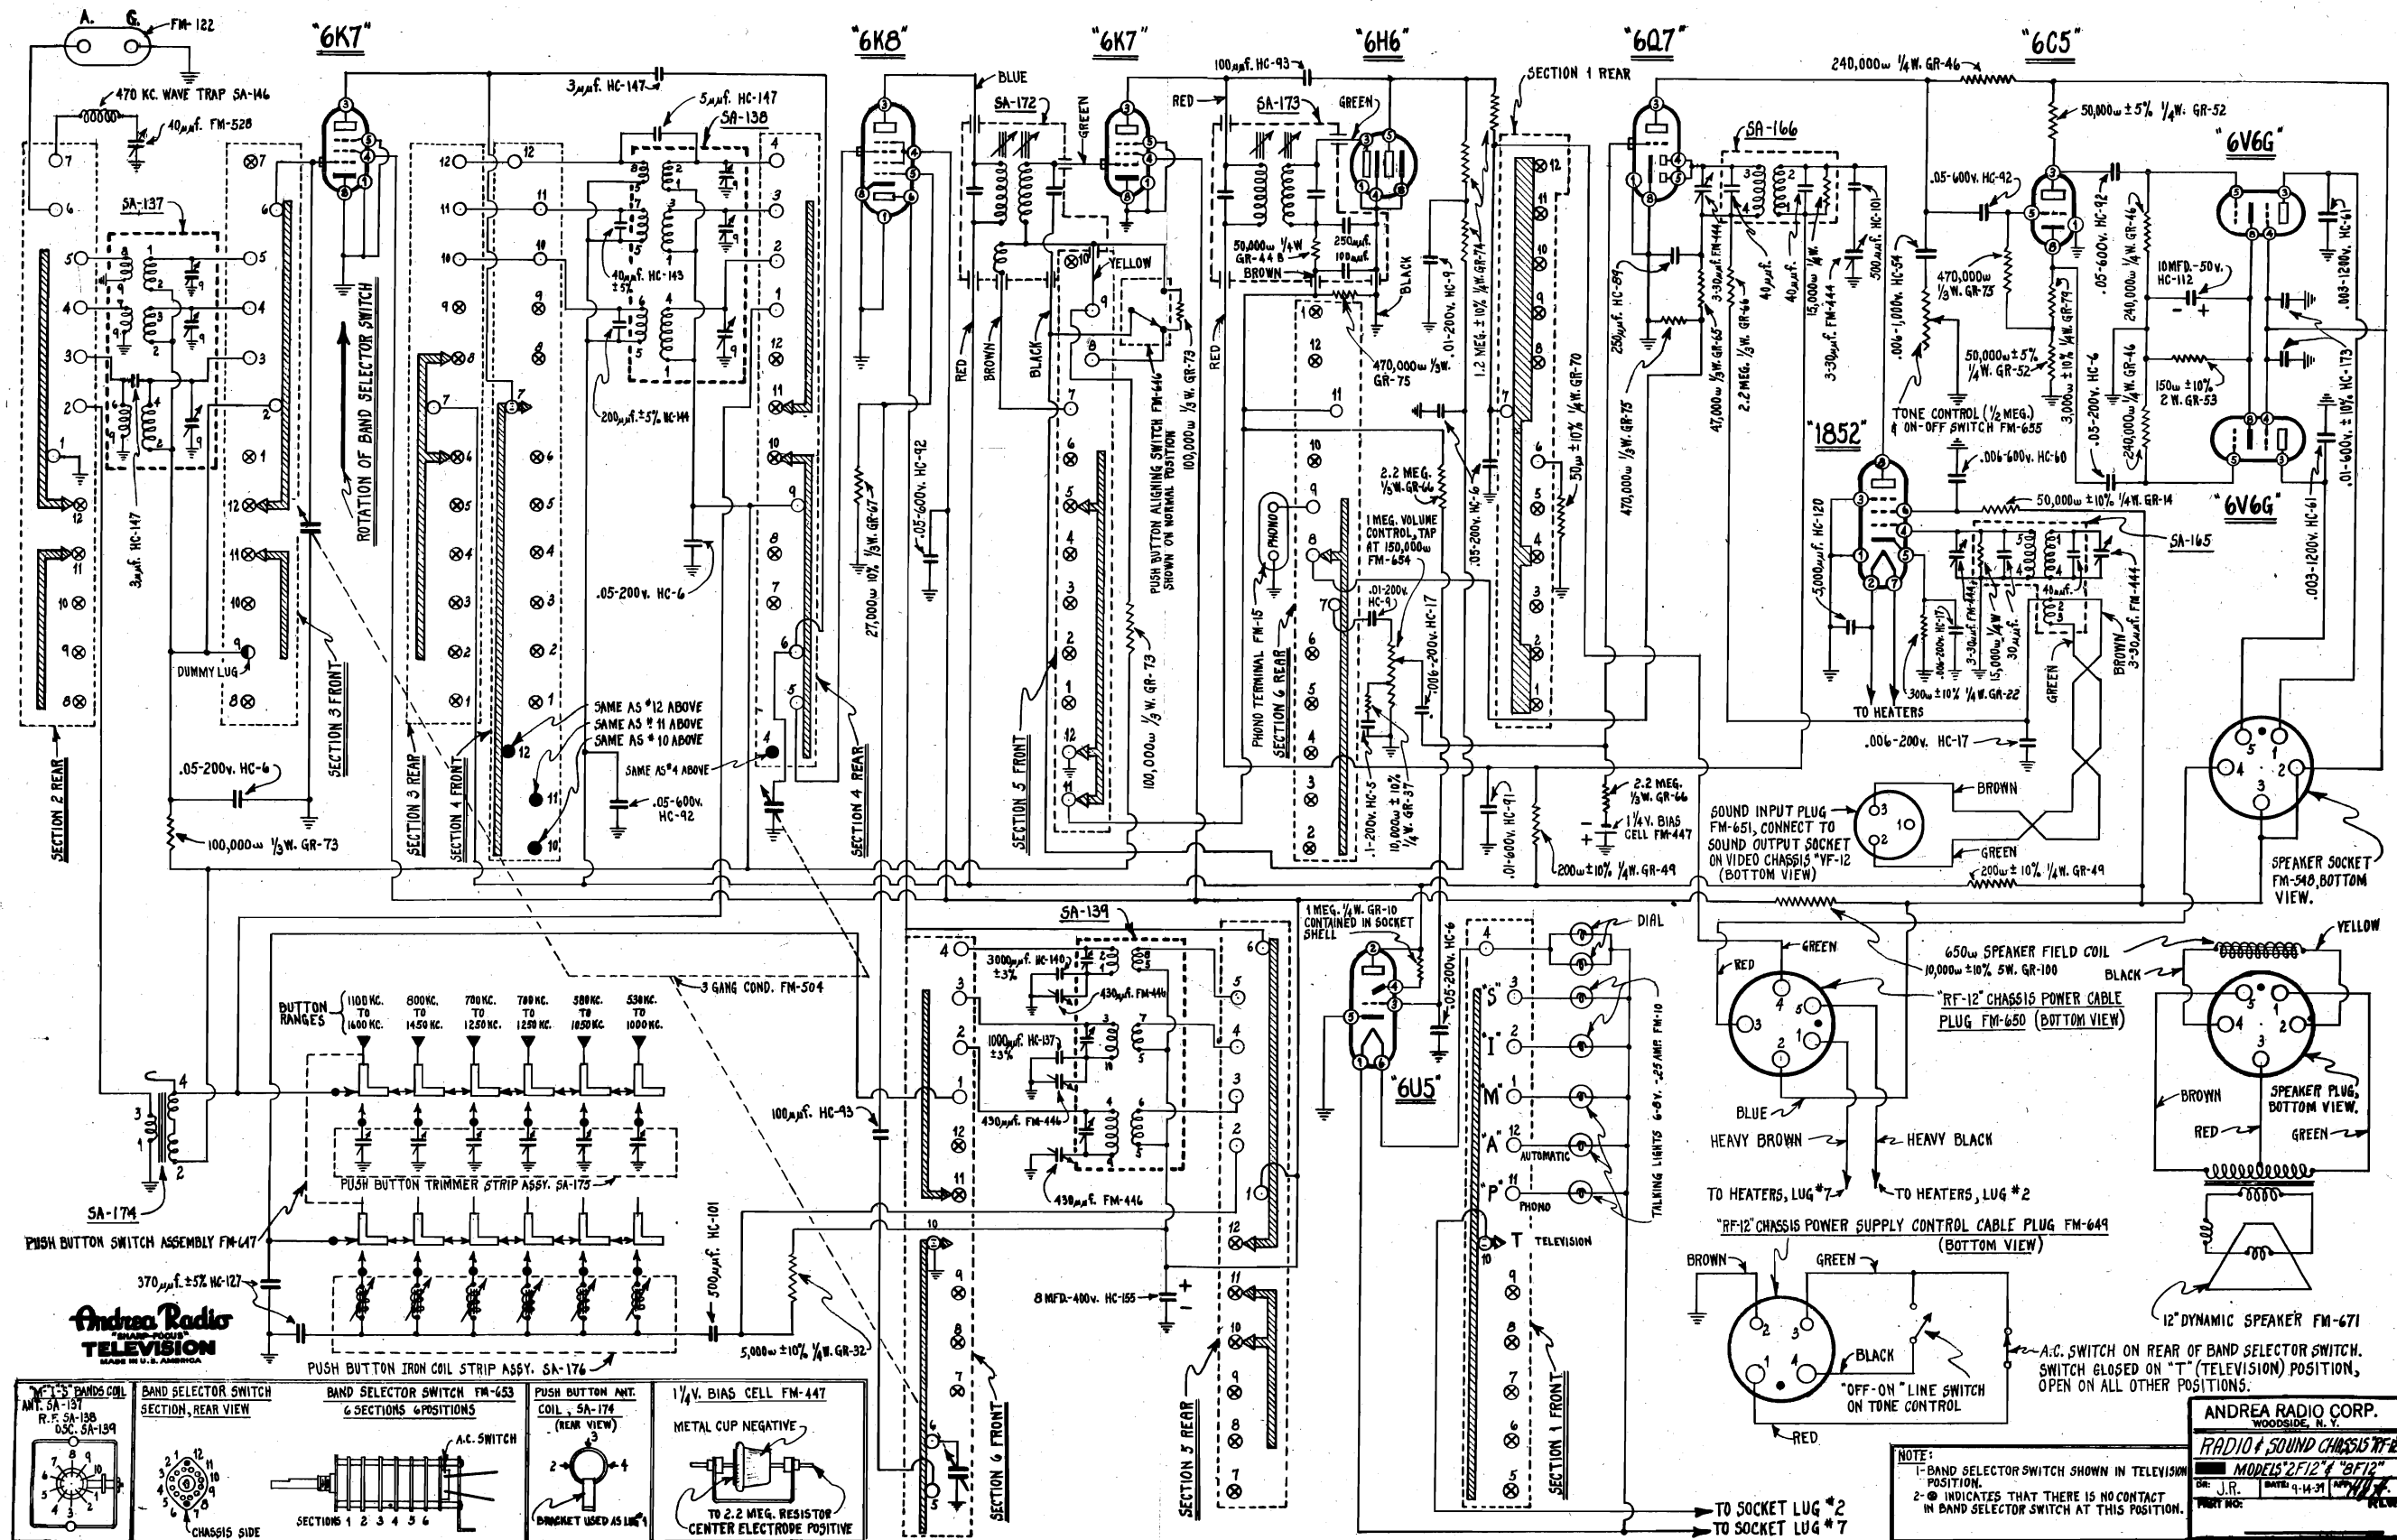

ANDREA RADIO CORP.

MODELS 2F12, 8F12
Controls, Assembly
Chassis Wiring

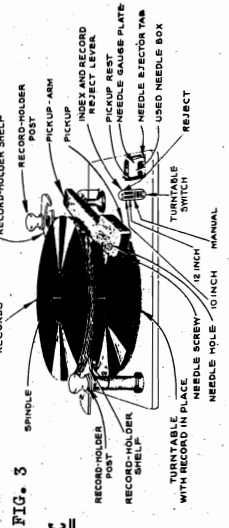
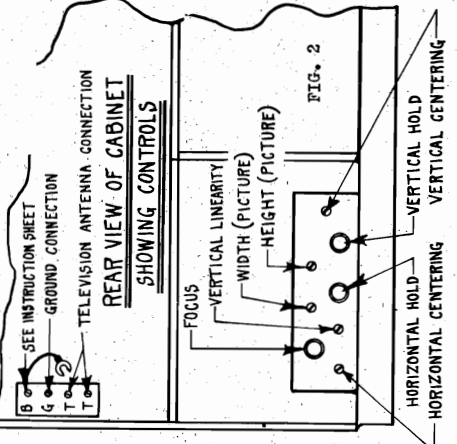
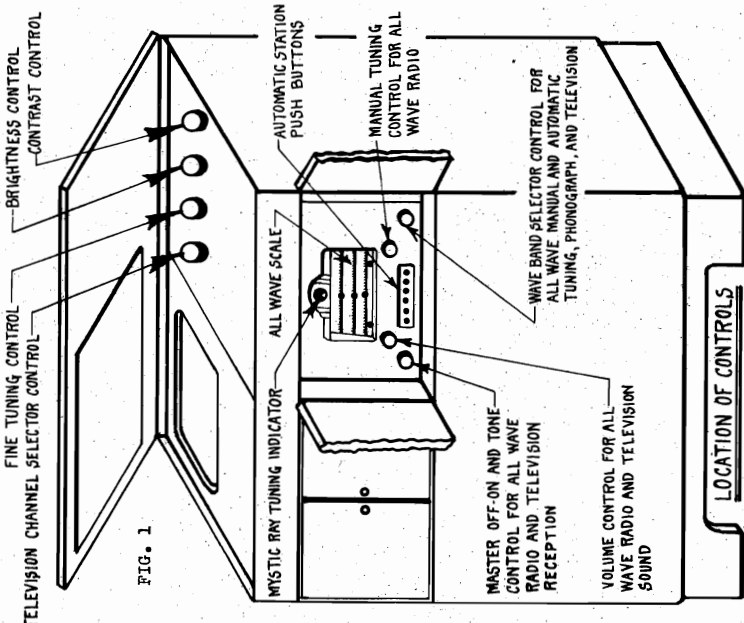
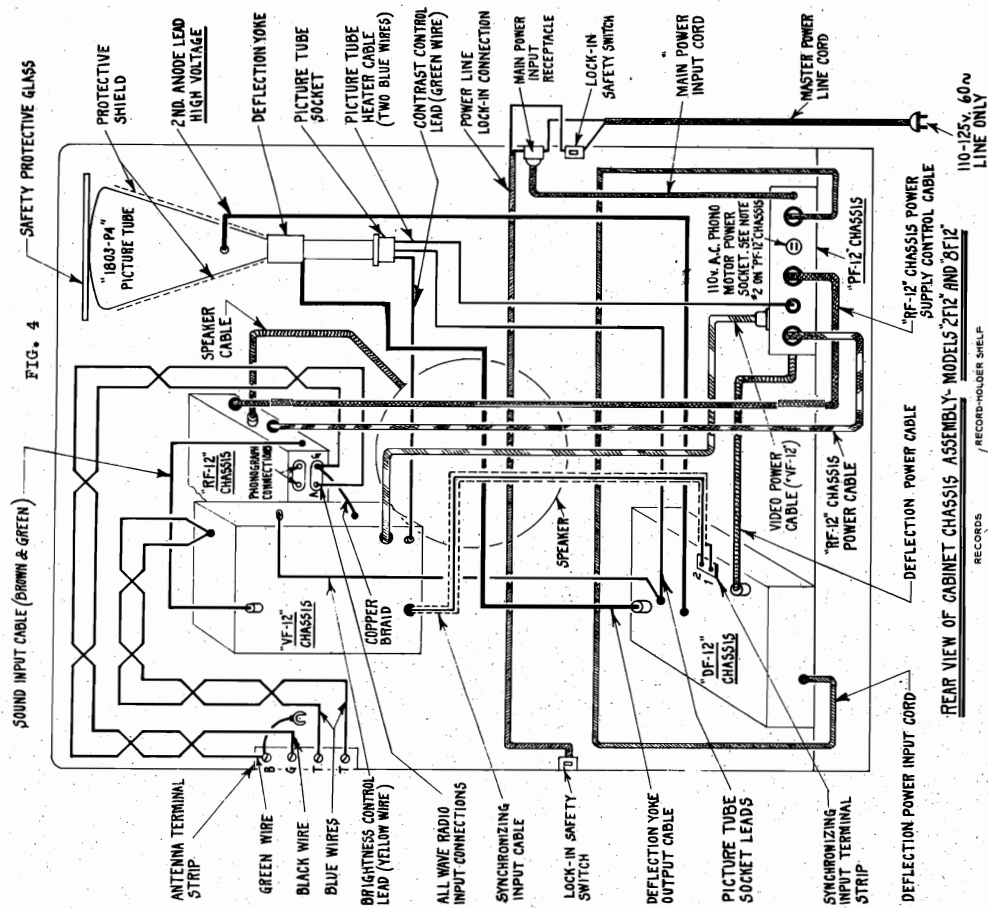


FIG. 4


FIG. 3

FIG. 1

FIG. 2


MODELS 2F12, 8F12
Socket Layouts
Deflection Chassis DF-12
Notes, Layout, Controls

ANDREA RADIO CORP.

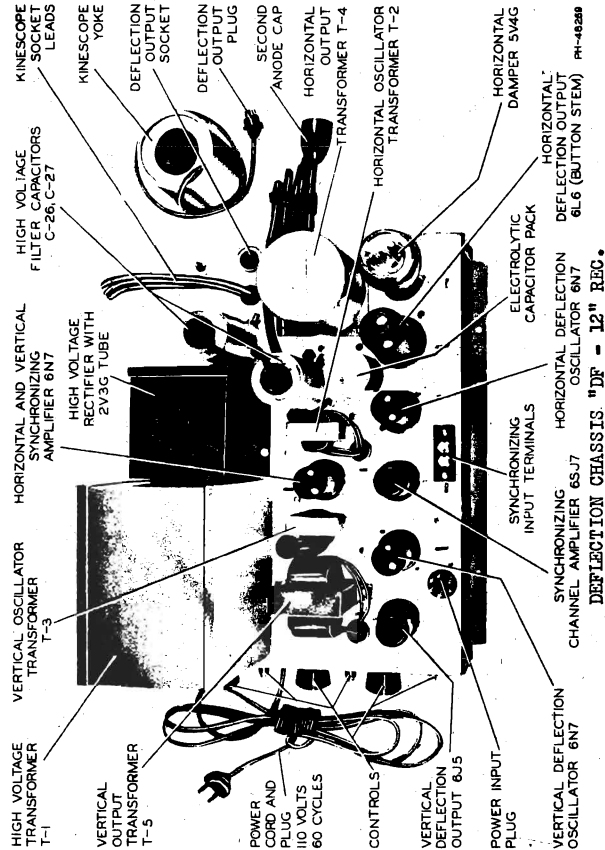

DEFLECTION CHASSIS - "DF-12"

CONTROLS - There are eight controls on the end of the Deflection Chassis. Three of these are knobs and five are screwdriver adjustments.

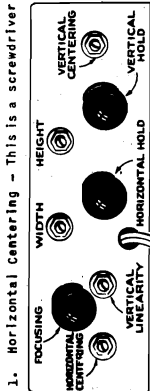

1. **Horizontal Centering** - This is a screwdriver adjustment on the extreme left of the control panel. It serves to center the picture horizontally on the kinescope screen and is made at the time of installation of the complete receiver. It will require resetting due primarily to the earth's magnetic field whenever the receiver location is changed, the cabinet turned around, or the kinescope replaced.

2. **Focusing Control** - The next control is a knob for adjustment of the first anode voltage to properly focus the picture. Make this adjustment carefully when the receiver is first placed in operation and it should then remain permanent but may be occasionally checked to insure continuous best focusing. 110 VOLTS 60 CYCLES

3. **Vertical Linearity** - This is controlled by means of a screwdriver adjustment. It is operated in conjunction with the Height Control to give the correct vertical proportions to the picture. It may require readjustment if the Vertical Centering Control is reset.

4. **Width** - This screwdriver control determines the width of the picture and should be adjusted when the receiver is installed. Further adjustment will occasionally be necessary in order to compensate for the gradual reduction in horizontal deflection with tube life.



5. **Horizontal Hold** - This is a knob which controls the free running speed of the horizontal oscillator. It is adjusted to a point approximately at the center of the range in which the picture sticks horizontally. Synchronizing voltage, when properly applied, will hold the horizontal oscillator in step, and then correct setting will be indicated by the horizontal stability of the picture.

6. **Height** - This screwdriver control determines the height of the picture and should be adjusted in conjunction with vertical linearity when the receiver is installed. Further adjustment will occasionally be necessary in order to compensate for the gradual reduction in vertical deflection with tube life.

7. **Vertical Hold** - This is a knob which controls the free running speed of the vertical oscillator. It is adjusted to a point approximately in the center of the range in which the picture "locks in" vertically. Synchronizing voltage, when properly applied, will hold the vertical oscillator interlocked in step and the correct setting will be indicated by the vertical stability of the picture.



8. **Vertical Centering** - This is a screwdriver adjustment on the extreme right of the control panel. It serves to center the picture vertically on the kinescope screen and is made at the time of installation of the complete receiver. It will require resetting whenever the receiver location is changed, the cabinet turned around or the kinescope replaced. Some readjustment of linearity may be required if the centering is shifted appreciably.

CAUTION - THE POWER SUPPLY TO THE DEFLECTION CHASSIS SHOULD NEVER BE CUT OFF WHILE THE HIGH VOLTAGE CIRCUIT IS OPERATING. A BURNED SPOT MAY APPEAR ON THE KINESCOPE SCREEN. IF THIS OCCURS, THE POWER SHOULD BE IMMEDIATELY CUT OFF. THE BURNED SPOT WILL DISAPPEAR IF THE KINESCOPE YOKE IS REMOVED. THE YOKE PLUG PULLED OUT, OR BOTH DEFLECTION CIRCUITS RENDERED INACTIVE BY TUBE REMOVAL OR OTHER MEANS.

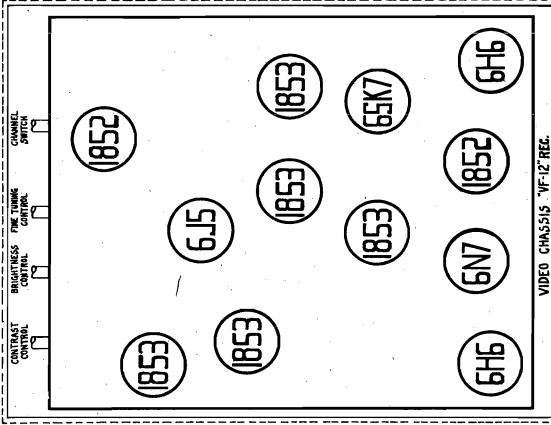

CONTROLS

DEFLECTION CHASSIS

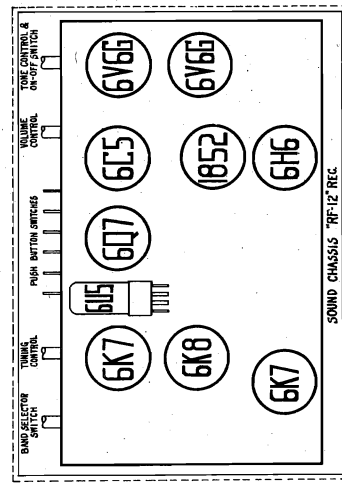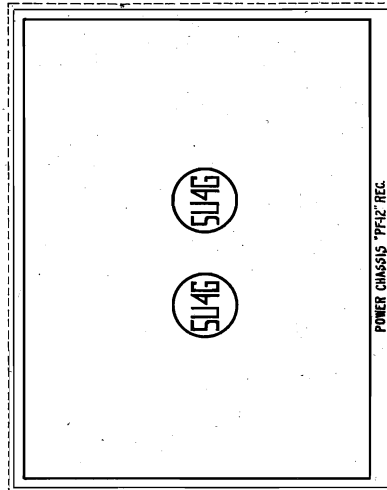


MODELS 2F12, 8F12
Power Chassis PF-12

ANDREA RADIO CORP.

Schematic Notes


LOCATION OF RECEPTACLES ON "PF-12" CHASSIS

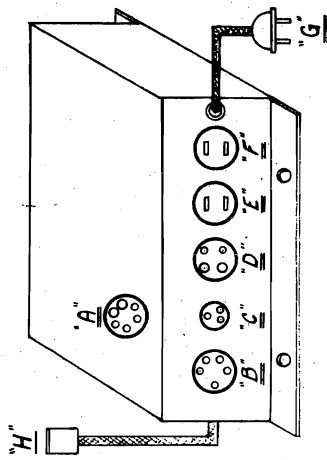

- "A" - RECEPTACLE FOR VIDEO POWER CABLE PLUG FROM "VF-12" CHASSIS.
- "B" - RECEPTACLE FOR "1803-P4" HEATER CABLE PLUG FROM "RF-12" CHASSIS.
- "C" - RECEPTACLE FOR "1803-P4" HEATER CABLE PLUG FROM SOCKET ASSY. CABLE FOR "1803-P4" TUBE ON "DF-12" CHASSIS.
- "D" - RECEPTACLE FOR "RF-12" CHASSIS POWER SUPPLY CONTROL CABLE PLUG FROM "RF-12" CHASSIS.
- "E" - RECEPTACLE FOR PHONO MOTOR POWER PLUG FROM MOTOR OF RECORD CHANGER. SEE NOTE 2 BELOW.
- "F" - RECEPTACLE FOR DEFLECTION LINE POWER PLUG FROM "DF-12" CHASSIS. SEE NOTE 1 BELOW.
- "G" - PLUG TO BE INSERTED INTO MAIN POWER INPUT RECEPTACLE LOCATED ON SIDE OF CABINET.
- "H" - DEFLECTION POWER CABLE SOCKET TO BE INSERTED INTO DEFLECTION POWER INPUT PLUG ON "DF-12" CHASSIS.

IMPORTANT:
1- POWER PLUG FROM "DF-12" CHASSIS MUST ONLY BE INSERTED INTO RECEPTACLE "F". IF INSERTED IN RECEPTACLE "E", THE POWER OF "DF-12" CHASSIS WILL NOT BE CONTROLLED.
2- RECEPTACLE "E" TO BE USED ONLY FOR 110V. A.C. PHONO MOTOR POWER.

ANDREA RADIO CORP.
WOODSIDE, N. Y.
POWER CHASSIS PF-12/22
MODELS 2F12, 8F12
DR. J. R. PATENT 1-1631

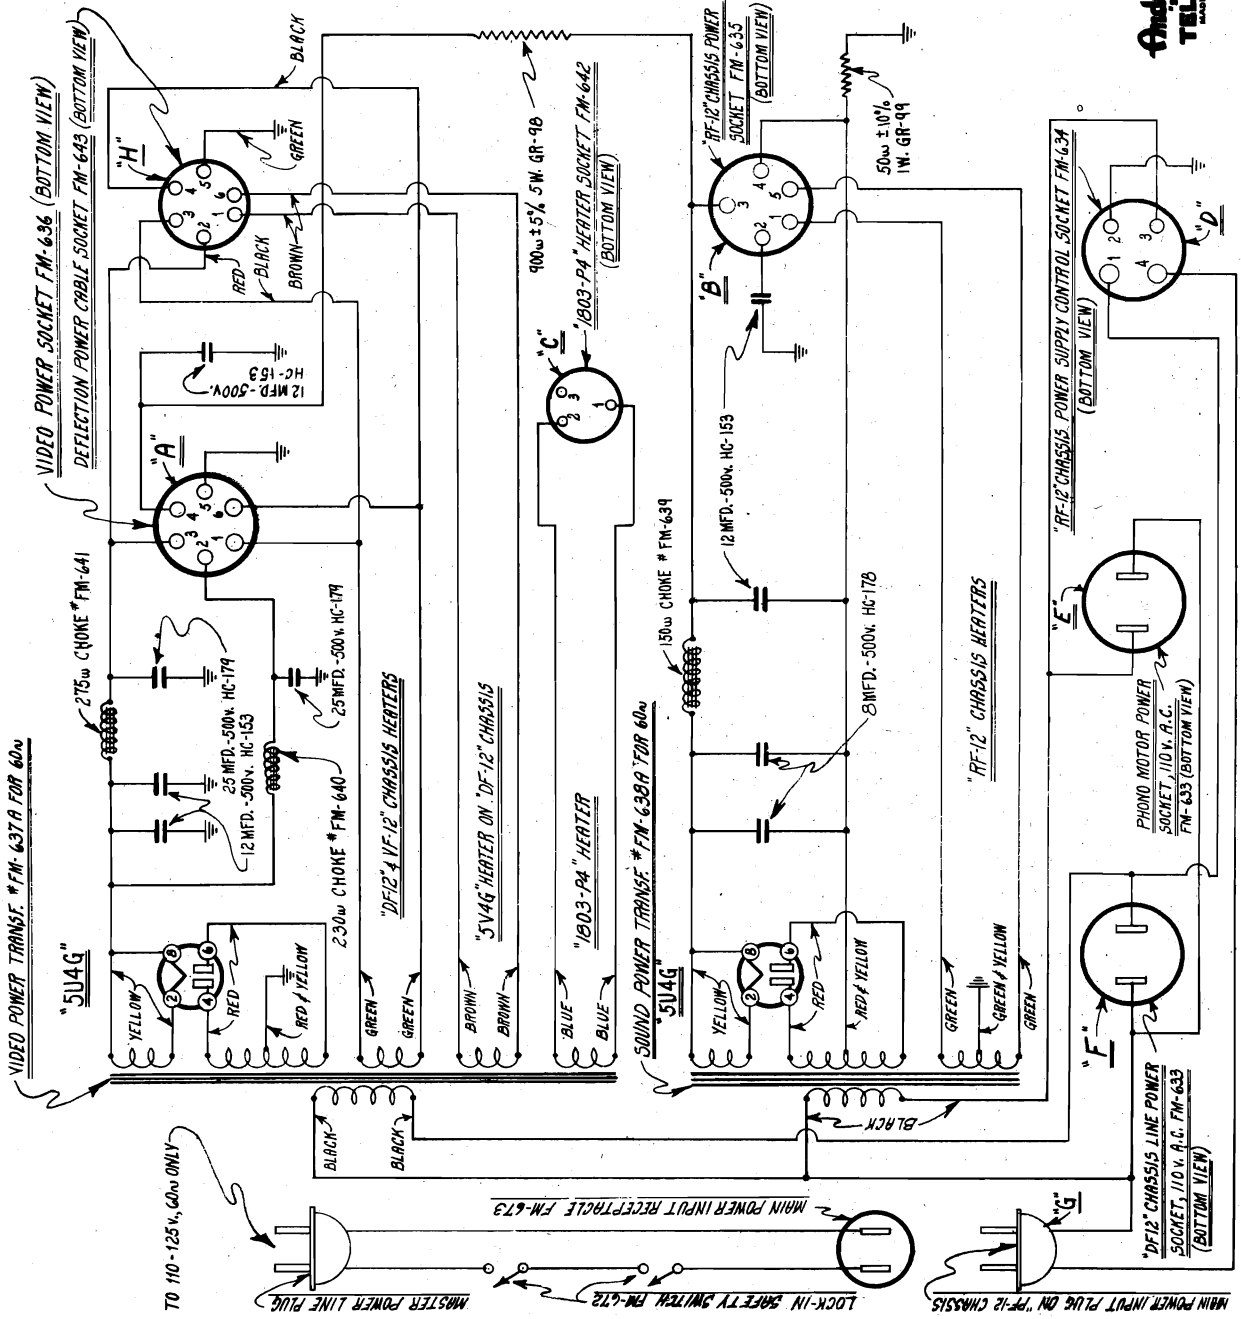

ANDREA RADIO CORP.

MODELS 2F12, 8F12
Operating Notes

POWER RATING The ANDREA 2F12 and 8F12 receivers operate only on 110 to 125 volt, 60 cycle AC current. Make sure your current supply is correct for the instrument before you plug it into the house outlet or socket.

This receiver is equipped with two safety lock-in switch devices and when the back is removed, power is cut off from all apparatus. The two switches are on the inside of the two side panels. No danger is possible from the high voltage television apparatus unless these two switches are simultaneously pushed in. Under no circumstances should these switches be tampered with.

ANTENNA A television receiving antenna and its installation must conform to much higher standards than an antenna for reception of international short wave and standard broadcast signals because:

1. At the ultra short wave lengths employed in television, intervening obstacles have a pronounced shielding effect, causing low intensity signals, and often severe trouble with multi-path transmissions. These produce blurring and multi-image pictures. See picture chart - figure 20 - for effect.

2. The picture signal is comprised of a very wide band or range of frequencies, all of which must be received with good efficiency.

3. The discernment of the eye is much more critical than that of the ear.

The receiver antenna should preferably be at a good height, without interruption in direct "line of sight" of the correct type, and correctly installed. Buildings and other structures may obstruct and reflect the television waves. Automobile ignition systems, distasteful apparatus in hospitals and airplanes flying low may all have an adverse effect.

Television pictures may be compared in certain ways with motion pictures. The illumination in the room should be dimmed - no light close to or falling on the screen. During the day it will usually suffice to draw the curtains.

The special ANDREA Teleceptor - picture and sound antenna - Model 66 - is available.

TELEVISION OPERATION

Before the receiver is turned on at any time, turn wave band Selector control knob (Fig.1) to either the S, I, M, A or P position, and rotate counter-clockwise contrast and brightness controls (Fig.1) all the way.

Turn master Off-on Tone Control knob clockwise (Fig.1) to switch power "on". Further rotation varies the tone of the television sound - full tone reproduction being with the knob turned fully counter-clockwise. This knob is the master control knob for turning the entire instrument "off" or "on". After about 30 seconds, turn the Wave Band Selector knob (Fig.1) to position "M". This turns the television section of the instrument "on" and automatically removes the dial illumination. Allow sufficient time for the tubes to heat before proceeding further.

HOW TO CONTROL TELEVISION SOUND VOLUME Turning Volume Control knob (Fig.1) clockwise increases the television sound volume; counter-clockwise decreases volume.

TELEVISION CHANNEL SELECTOR CONTROL SWITCH The television Channel Selector Control (Fig.1) selects automatically the desired station and accompanying sound from which it is desired to receive television programs. This knob is marked 1,2,3,4,5 - representing the first, second, third, etc. television channel:

CHANNEL 1	44-50 MC	4	76-84 MC
"	50-56 MC	5	84-90 MC
"	66-72 MC		

Set the knob to the channel corresponding to the television station desired.

FINE TUNING CONTROL This control is used to obtain best picture reception by eliminating possible distortion from interfering signals which show a more "rippled" picture. In most cases this control should be adjusted for each television channel by listening to the accompanying sound until maximum volume is obtained using a medium or low level and noting that the picture is not distorted at this setting. See picture chart (Fig.5) illustrates the test chart picture when all controls are correctly adjusted. (Fig.5) shows the effect on the picture of extraneous interference that in some cases can be eliminated by a slight readjustment of the fine tuning control. (Fig.10) shows what also may occur when the fine tuning control is incorrectly set.

CONTRAST CONTROL The contrast knob, located in the top panel (Fig.1), regulates the

contrast level of the picture. Turning this control slowly clockwise increases the picture contrast from grays to black and white. Excessive contrast gives blurred or feathered outlines to the images which lack half tones, while too little contrast results in extremely flat images without highlights or depth. The correct adjustment is the evenly distributed brightness when the objects appear as black objects against the evenly dark gray picture chart (Fig.5) show the correct contrast. The picture chart with the controls set correctly. (Fig.6) illustrates the picture with the contrast advanced too far.

BRIGHTNESS CONTROL For controlling brightness level of picture, observe the difference between operating this control and the Contrast control. Both controls should be operated together. For example, if the contrast is adjusted correctly and the picture illumination is too low or too bright, and the Brightness control readjusted for more or less illumination, the picture contrast will change. Hence, the Contrast control must be readjusted, therefore, whenever the Contrast control is turned clockwise, the Brightness control must be turned counter-clockwise. (See picture chart - (Fig.7 and Fig.8).

NOTE FIG.8 If the Brightness control is operated too high and the Contrast control too low, the white diagonal lines will be seen across the picture, which indicates that the Brightness control must be reduced. In some cases, if the antenna picture is insufficient, the same results will occur. Always remember to turn the Brightness and Contrast controls completely counter-clockwise when viewing is over. (Fig.7) indicates what occurs to the picture when the Brightness control is advanced too far. The picture is thin and lacks blacks.

HOW TO RECEIVE Before turning the receiver on, proceed as follows:

THE PICTURE

1. Turn Brightness and Contrast controls (Fig.1) completely counter-clockwise.
2. Open doors of radio panels (Fig.1). Turn wave band Selector knob marked S-I-M-A-P-T to any position but "M".
3. Turn Master Off-ON Control (Fig.1) clockwise until click is heard.
4. Turn Volume Control (Fig.1) 1/4 turn clockwise.
5. Turn Wave Band Selector knob S-I-M-A-P-T to position "M".
6. Turn Television Selector switch to correct position.
7. Turn Contrast control fully counter-clockwise and then turn Brightness Control clockwise slowly until a slight illumination appears on the screen. Then turn counter-clockwise until illumination just disappears.
8. Advance the Contrast Control until the picture appears at its best. Then, advance Brightness Control clockwise slowly, if necessary, and readjust both controls for most suitable picture. A little practice of these adjustments will enable you to easily obtain the correct setting. Incorrect control settings give similar results to under or over exposed photograph prints.
9. If an interfering ripple is observed in the picture, adjustment of the fine tuning knob (Fig.1) may reduce or eliminate the trouble.
10. Readjust the sound volume and tone controls (Fig.1) to your liking.
11. Always turn wave band Selector knob (Fig.1) to any position but that marked "M" before turning receiver "off".

RADIO OPERATION

THE DIAL AND CONTROLS In Fig.1 is shown the cabinet front, incorporating the controls necessary for correct operation. Turn Master Power Off-ON Tone Control clockwise to apply power to receiver. Should tuning scale fail to light, then the Wave Band Selector knob is in position "M". Turning to another position will light the scale. The Wave Range Selector controls the type of service. The knob is marked S-I-M-A-P-T.

- "S" position - short wave reception.
- "I" position - intermediate short wave reception.
- "M" position - manual tuning of standard broadcast.
- "A" position - automatic push-button tuning of your six favorite Standard Broadcast stations.
- "P" position - phonograph operation.
- "T" position - television and accompanying sound.

PHONOGRAPH Model 8F12 contains an Automatic Record Changer which plays either eight 10" records or seven 12" records automatically. In Figure 3 is illustrated the method of operation.

Model 2F12 can be used with an external phonograph pickup of 4000 ohms or more by plugging into the phone jacks provided on the rear of the radio chassis.

EXTERNAL INTERCONNECTING OF COMPONENTS Figure 4 illustrates the interconnecting of the parts in the cabinet chassis assembly.

MODELS 2F12, 8F12
Operating Notes, Cont'd.
Tuner Data

ANDREA RADIO CORP.

SERVICE NOTES

ANTENNA-GROUND Connect the ANDREA Teleceptor transmission cable to the terminals marked "T" - "W".
Attach well-grounded insulated wire to terminal marked "G". Note that a wire from the rear of terminal marked "P" is connected to one side of screw terminal "T". This connection utilizes the Teleceptor antenna for all-wave radio reception.
Should a separate all-wave noise reducing antenna, such as the ANDREA No. 50, be used for broadcast reception, remove above wire connection from terminal "T" and connect to terminal "P". Connect all-wave coupler to terminal "P" and "G".

HORIZONTAL CENTERING The horizontal centering control is a screw driven adjustment located as shown in Fig. 2 and made at the time of installation. It serves to center the picture horizontally on the picture screen. It may require slight resetting. If the receiver location is changed, tubes replaced or power line conditions varied. See picture chart - Figure 11, indicates what occurs when this control is incorrectly set. Figure 5 is the correct position.

VERTICAL CENTERING The Vertical Centering control is a screw driven adjustment shown in Fig. 2 and is used to center the picture vertically with respect to the screen opening. Resetting may be necessary for the same conditions outlined under "Horizontal Centering". See picture chart - Figure 12 indicates what occurs when this control is incorrectly adjusted. Figure 5 is the correct position.

PICTURE HEIGHT This control varies the height of the picture and is a screw driver adjustment made when the receiver is installed. See picture chart - Figure 13 shows what occurs when this control is incorrectly adjusted. Figure 5 is the correct position.

PICTURE WIDTH This control increases or decreases the width of the picture and is a screw driver adjustment made at the time of installation. See picture chart - Figure 14 shows what occurs when this control is incorrectly set. Figure 5 is the correct picture.

FOCUS CONTROL Located as shown in Fig. 2, this control is designed to bring the television images into sharp focus or definition. This control, once adjusted, should not be tampered with. When correctly focused the lines of which the picture is composed are sharply defined. A slight rotation one or other direction will indicate defocusing. See picture chart - Figure 15 illustrates what happens when the focus control is incorrectly set. Figure 5 when correctly set. At times during a given program, scenes may be out of focus while others are sharp. This condition arises at the transmitter and cannot be corrected at the receiver.

HORIZONTAL HOLD CONTROL The purpose of this control is to reconstruct the receiver picture lines in exact synchronization with the transmitter. If they are not, the scan will be affected as follows:
(a) Distortion in shape.
(b) Several images will be seen.
(c) Numerous black dashes over screen.

A slight adjustment of this control in the one or the other direction will eliminate the above effects. See picture chart - Figures 16 and 17 shows what the picture looks like when this control is incorrectly set. Figure 5 shows the correct setting.

VERTICAL HOLD CONTROL This control synchronizes the pictures at the receiver vertically with the transmitter. When out of adjustment, the picture may slip or revolve upwards or downwards at either a slow or fast rate. Turn the control in one direction. If the revolving motion is faster, then turn in other direction until the picture "locks in" as a single complete scene. See picture chart - Figure 18 illustrates the effects on the picture when this control is incorrectly set. Figure 5 shows the correct picture setting.

VERTICAL LINEARITY This is controlled by means of a screw driver adjustment. The adjustment must be correct and in conjunction with the Height control to give the correct vertical proportions to the picture. It may require readjustment if the Vertical Centering control is reset. See picture chart - Figure 19 indicates the unbalance in vertical height of the picture when this control is incorrectly set. Figure 5 shows the correct setting.

SETTING RADIO STATION BUTTON CONTROLS The simplicity of the ANDREA RADIO push-button controls, requiring only the use of a thin-blade screw driver, makes it easy to set them accurately. This is essential, for unless the controls are set exactly, the tone quality will be destroyed.

CHOOSING YOUR STATIONS Make a list of the desired six stations to operate on the push-button. Set down their call letters and put them in the order of their kilocycle rating, the highest at the left to correspond to station 1 selecting button at the left. The kilocycle tuning ranges of the button controls are as follows:

Extreme Left	Station 1 - 1100 to 1600 KC.
	Station 2 - 800 to 1450 KC.
	Station 3 - 700 to 1250 KC.
	Station 4 - 700 to 1250 KC.
	Station 5 - 580 to 1050 KC.
Extreme Right	Station 6 - 530 to 1000 KC.

It is necessary to choose stations whose kilocycle ratings come within these push-button tuning ranges. The ranges given in the list above are conservative. Consequently, it may be possible to tune in a station which is just outside the range of any particular push-button control. For example, on Station 3, although the range is shown as 700-1250 KC., it may be possible to tune in a station on 660 KC., or one on 1300 KC. Select the proper markers for the stations on your list, insert the markers in the same order as your kilocycle list, starting with Station 1 on the first button on the left. Do not attempt to glue the markers in place. In the event you want to change a marker, you can pry it out with the point of a pin.

ADJUSTING THE HIGH-STATION CONTROLS Remove push-button escutcheon cover plate (Fig. 1). All station adjustment screws and switch are now accessible for station adjustment from the front of the cabinet. Remember to set the push-button adjusting switch. Located in the right hand corner of the push-button opening is a small lever. When adjusting the station controls, and only at that time, the lever should be turned to upper position, designated by red dot. Put wave band Selector switch in the "W" position for dial tuning. Tune in the station manually, using call letters you have put on the first push-button. Then turn the Band switch to position "A". Push in the push-button you are going to adjust, and turn the volume control to maximum. When the set has been turned "ON" for at least 10 minutes so that it has become thoroughly warm, you will be ready to make the push-button adjustment. The adjusting screws can be reached easily. Each push-button has two adjustment controls marked "ANT" and "OSC", in pairs. The pair corresponding to Station 1 on your list at the extreme left. This set is so designed that the tuning indicator operates with the push-buttons as well as with manual tuning. Therefore, you can adjust the controls with absolute accuracy by watching the opening and closing of the indicator. The exact setting for each adjustment is obtained when the Mystic Ray indicator is closed as far as possible.

Use a thin-blade screw driver to adjust the screws: Do not force a thick blade into the slots. First adjust the oscillator screw for Station 1, turning it until you hear the station you tuned in previously on the dial. If the speaker breaks into a howl during this adjustment, turn the Station 1 antenna screw to the right or left until the howl stops. After you have an accurate setting of the oscillator screw, adjust the corresponding antenna screw for maximum volume. The final adjustment should be made by turning the oscillator screw while you watch the opening of the Mystic Ray indicator. Then, in the same way, set a final adjustment for the antenna screw. Repeat the same routine adjustments for Station 2 by tuning the station on the dial first with Wave Selector switch in "W" position, then changing "OSC" screws. Continue this method for each station and button. To check the accuracy of the settings, turn the Wave Band switch to position "M". The station should sound practically the same whether the switch is in the "A" or "M" position. If there is considerable difference, the station is not tuned accurately with the dial, or else the corresponding push-button controls were not set correctly. To change any button to another station, if the station's kilocycle rating is within the range of the corresponding controls, it is only necessary to put in a new button marker, and to reset the controls in accordance with the preceding instructions.

CAUTION This is very important: When all adjustments have been made, it is necessary to touch up each one again, to assure absolute accuracy. After this has been done, turn the push-button adjusting lever down to black dot marked normal operation. Otherwise, loss of efficiency and quality will result. Replace push-button escutcheon cover plate, taking care that the holes in cover align with buttons.

ANDREA RADIO CORP.

MODELS 2F12,8F12
Test Patterns

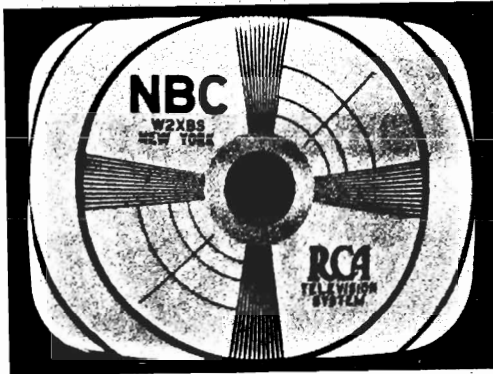


Figure 5—



Figure 6—

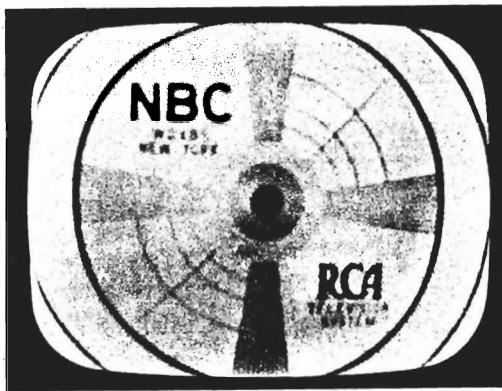


Figure 7—



Figure 8—



Figure 9—

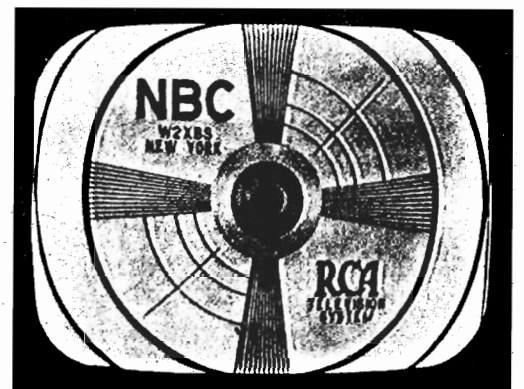


Figure 10—

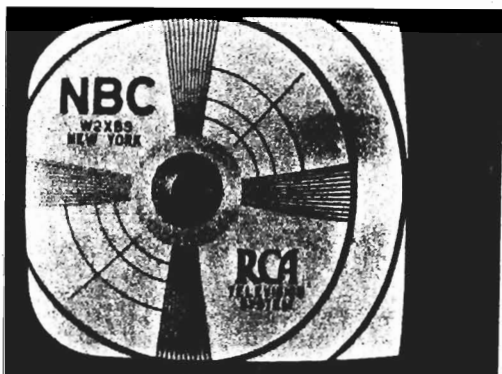


Figure 11—



Figure 12—

MODELS 2F12,8F12
Test Patterns

ANDREA RADIO CORP.

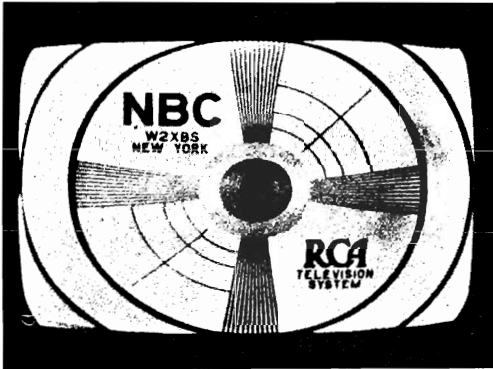


Figure 13—

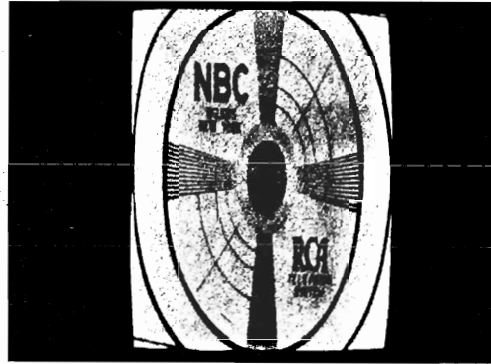


Figure 14—

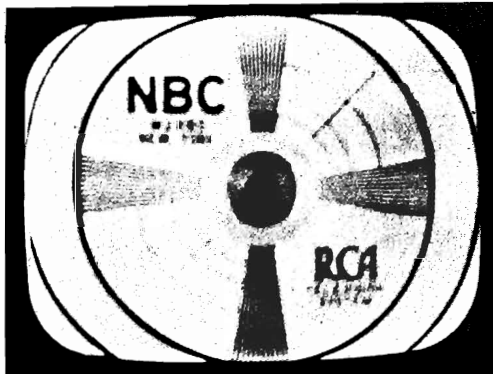


Figure 15—

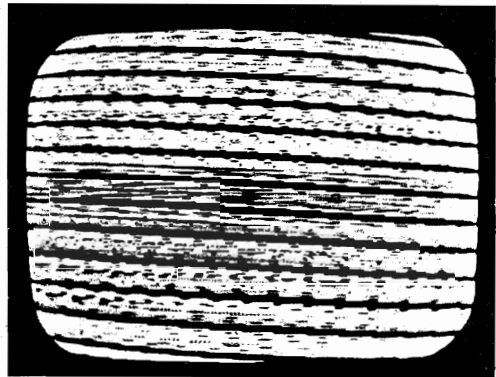


Figure 16—

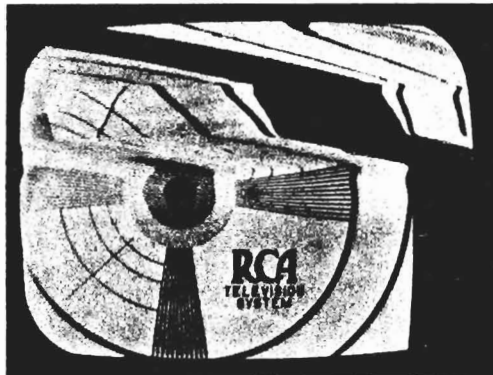


Figure 17—



Figure 18—




Figure 19—



Figure 20—

ANDREA RADIO CORP.

MODEL 12F5
Chassis UF-5
Schematic, Trimmers
Alignment

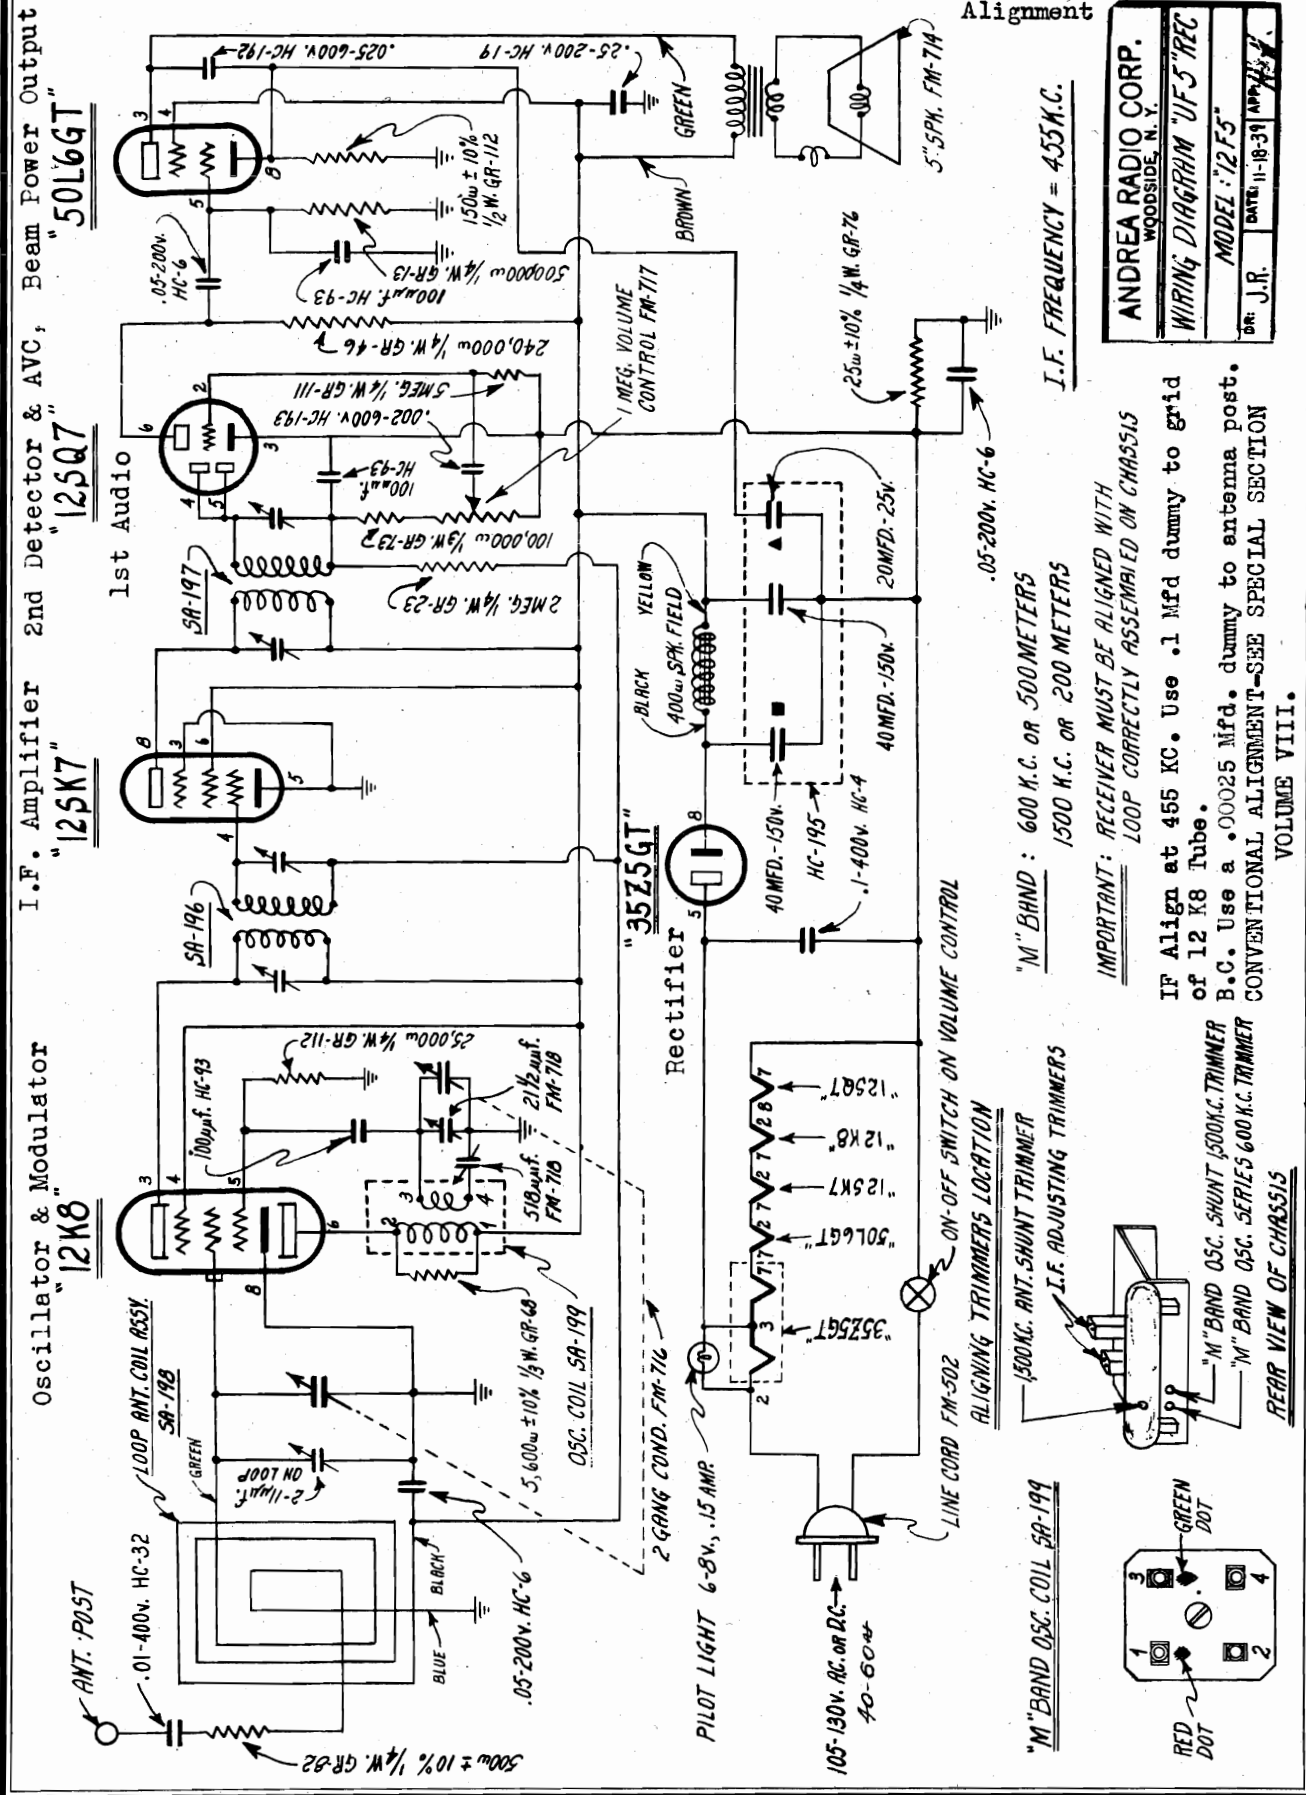

© John F. Rider, Publisher

ANDREA RADIO CORP.
WOODSIDE, N. Y.

WIRING DIAGRAM "UF5" "REC"

MODEL : "12F5"



DATE : 11-19-31

I.F. FREQUENCY = 455K.C.


"M" BAND : 600 K.C. OR 500 METERS
1500 K.C. OR 200 METERS

IMPORTANT: RECEIVER MUST BE ALIGNED WITH LOOP CORRECTLY ASSEMBLED ON CHASSIS

IF ALIGN at 455 KC. Use .1 Mfd dummy to grid of 12 K8 Tube.
B.C. Use a .00025 Mfd. dummy to antenna post.
CONVENTIONAL ALIGNMENT-SEE SPECIAL SECTION VOLUME VIII.



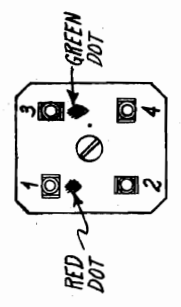
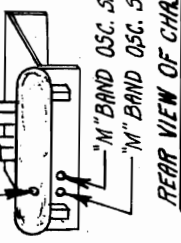


ANDREA RADIO CORP.

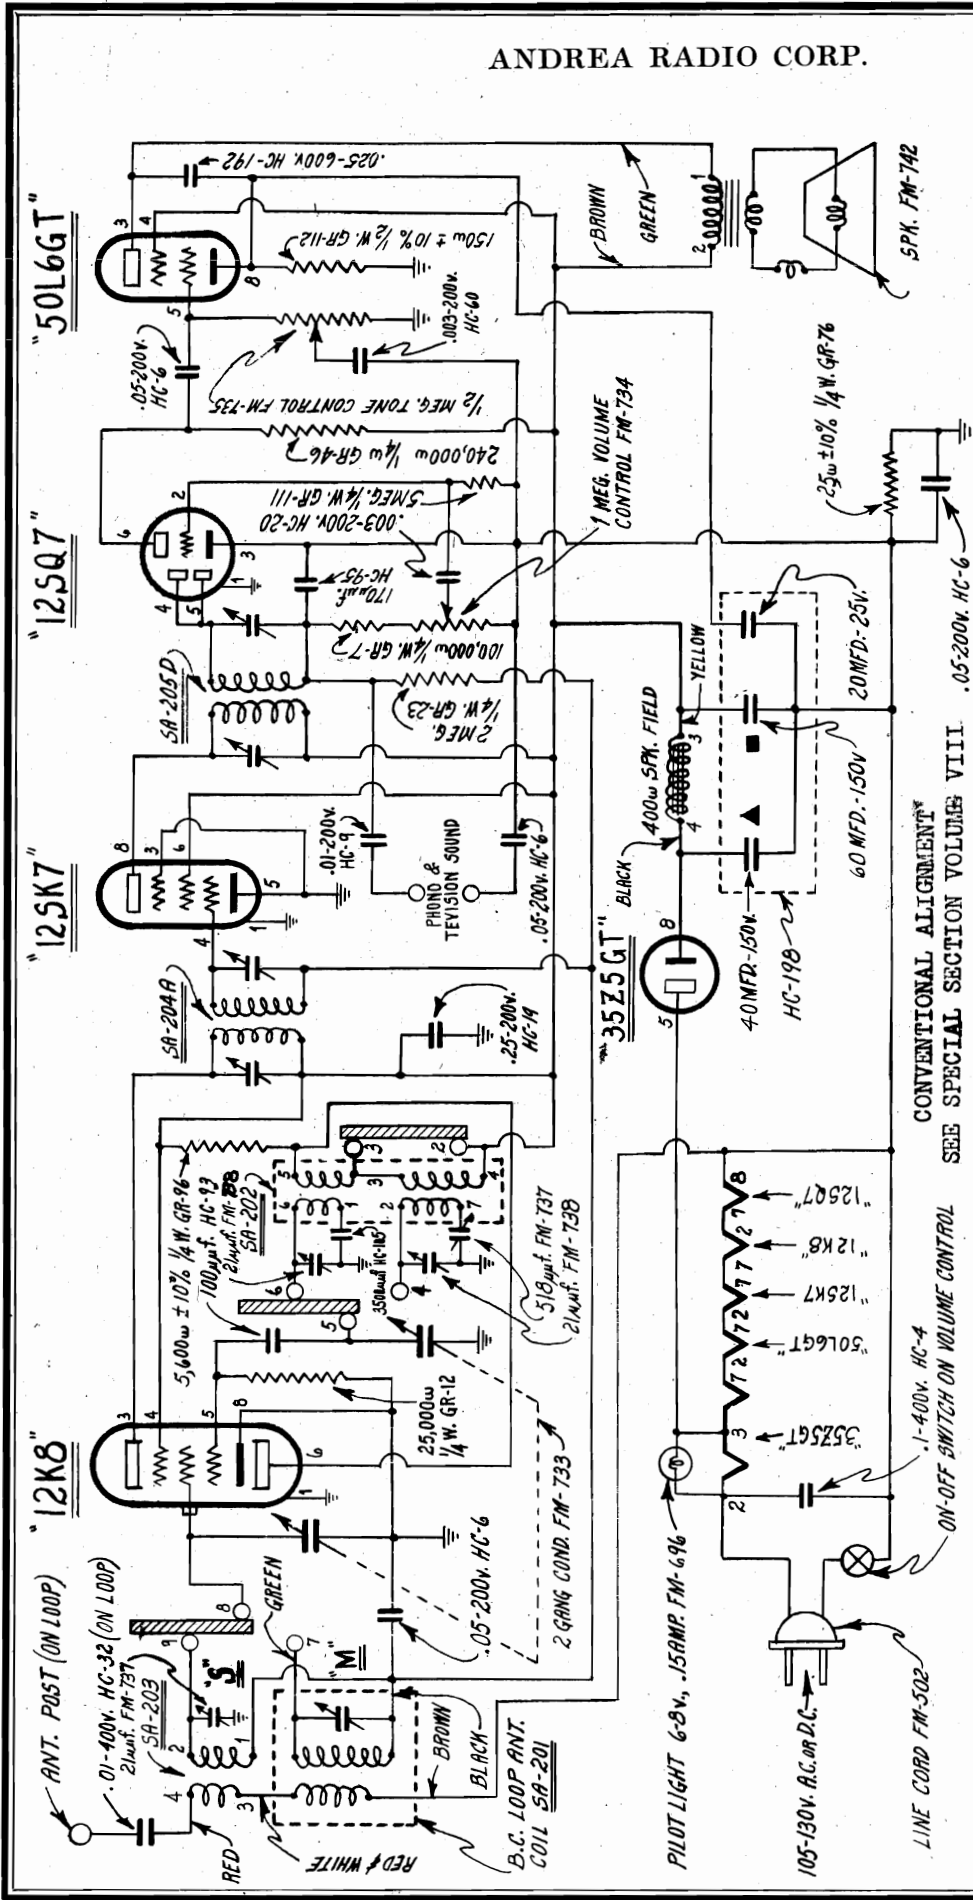

NOTE:
 BRAND SELECTOR SWITCH SHOWN ON "S" BAND POSITION, TO THE EXTREME CLOCKWISE POSITION.
ANDREA RADIO CORP.
 WOODSIDE, N. Y.
WIRING DIAGRAM "UG55" REC.
 MODEL "25G5"
 DR. J.R. DATE: 2-2-40 APP. *[Signature]*
 PART NO.


I.F. FREQUENCY = 455 K.C.
 "M" BAND: 600 K.C. OR 500 METERS
 1,500 K.C. OR 200 METERS
 "S" BAND: 18 M.C. OR 16.67 METERS
IMPORTANT: RECEIVER MUST BE ALIGNED WITH LOOP CORRECTLY ASSEMBLED ON CHASSIS

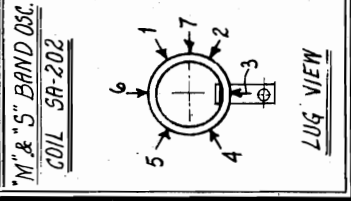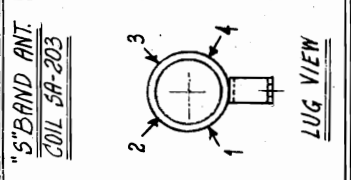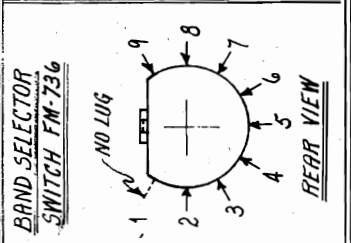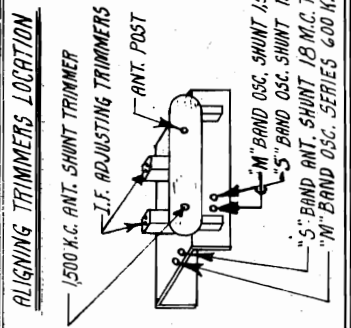

MODEL 33F6
Chassis UF6

ANDREA RADIO CORP.

Schematic, Trimmers
Alignment

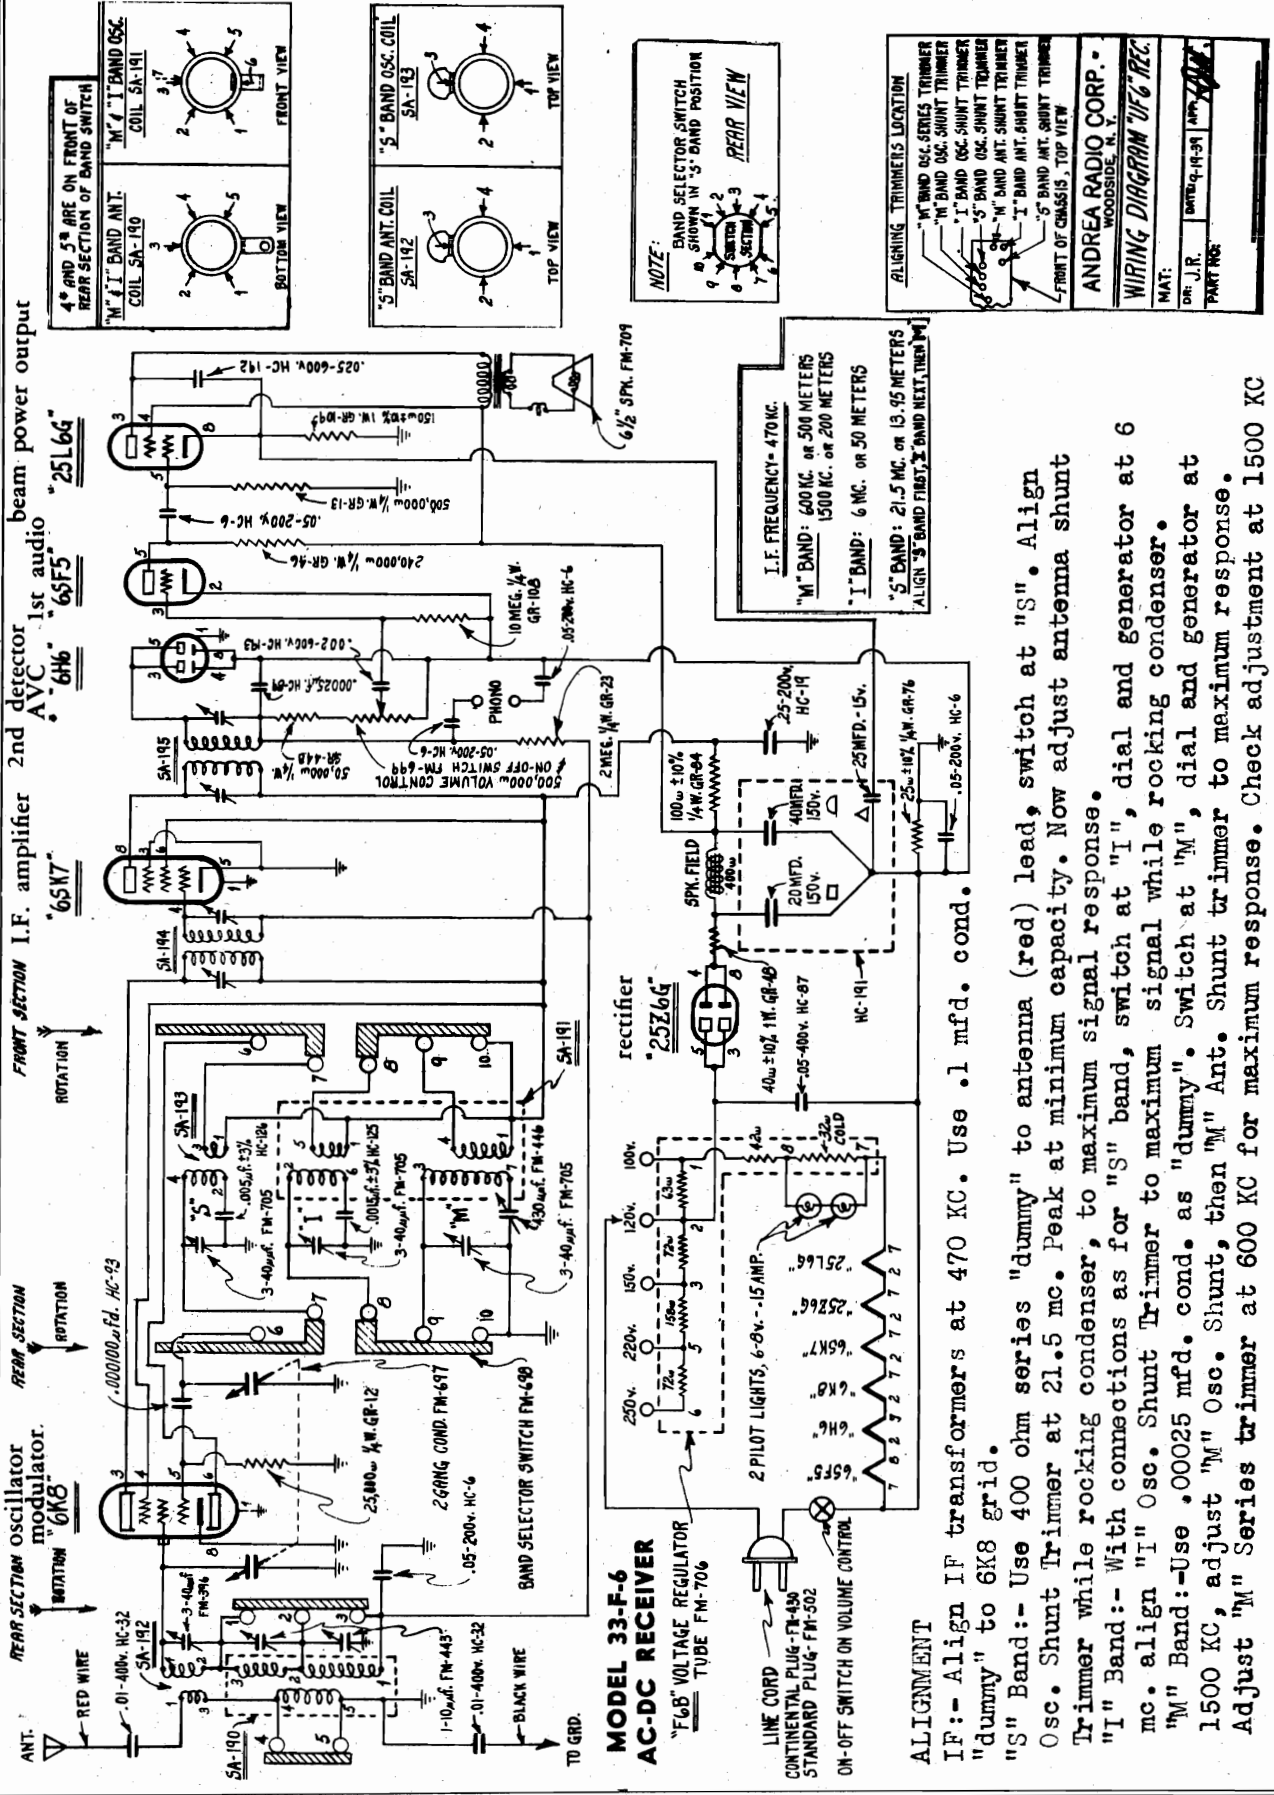

**MODEL 33-F-6
AC-DC RECEIVER**

"F6B" VOLTAGE REGULATOR
TUBE FM-706

rectifier
"25Z6G"

I.F. FREQUENCY - 470 KC.
"M" BAND: 600 KC. or 500 METERS
1500 KC. or 200 METERS
"I" BAND: 6 MC. or 50 METERS
"S" BAND: 21.5 MC. or 13.95 METERS
ALIGN "S" BAND FIRST, "I" BAND NEXT, THEN "M"

ALIGNMENT

IF: - Align IF transformers at 470 KC. Use .1 mfd. cond. "dummy" to 6K8 grid.

"S" Band: - Use 400 ohm series "dummy" to antenna (red) lead, switch at "S". Align Osc. Shunt Trimmer at 21.5 mc. Peak at minimum capacity. Now adjust antenna shunt Trimmer while rocking condenser, to maximum signal response.




"I" Band: - With connections as for "S" band, switch at "I", dial and generator at mc. align "I" Osc. Shunt Trimmer to maximum signal while rocking condenser.

"M" Band: - Use .00025 mfd. cond. as "dummy". Switch at "M", dial and generator at 1500 KC, adjust "M" Osc. Shunt, then "M" Ant. Shunt trimmer to maximum response. Adjust "M" Series trimmer at 600 KC for maximum response. Check adjustment at 1500 KC

PHONOGRAPH RECORDS:

Use a pick-up of 2,000 to 8,000 ohms. Lower resistance requires a matching transformer.

4° AND 5° ARE ON FRONT OF REAR SECTION OF BAND SWITCH

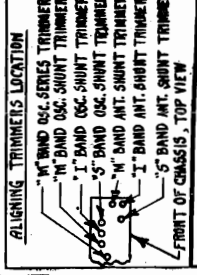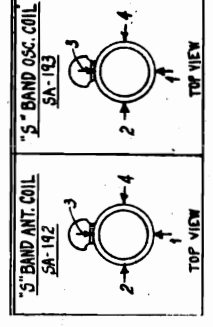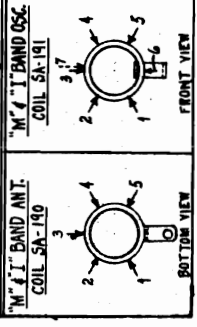

ANDREA RADIO CORP. - WOODSIDE, N. Y.


WIRING DIAGRAM "UF6 REC."

MAT: DR. J. R. DATE: 4-14-31

PART NO:

ANSLEY RADIO CORP.

MODEL Dynatone Schematic

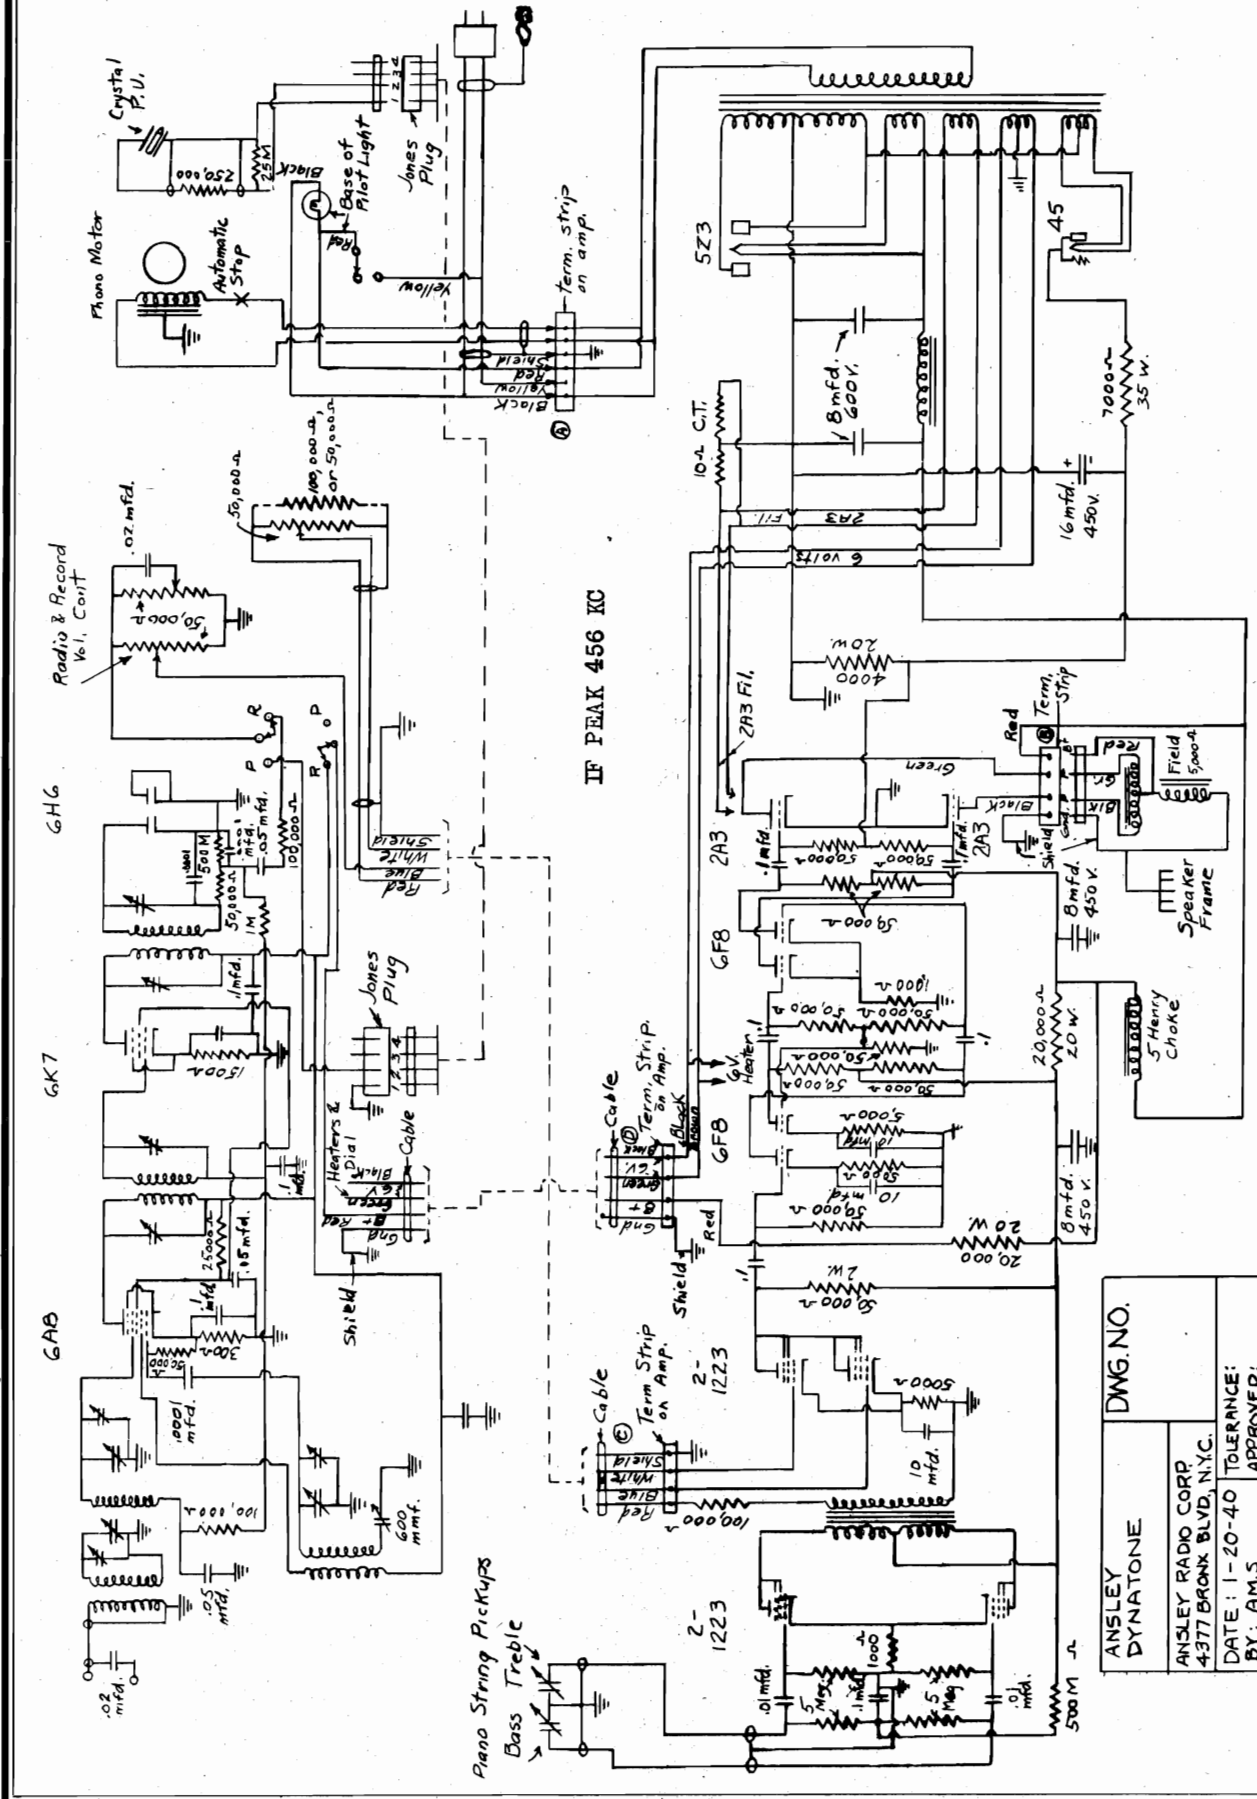



ANSLEY DYNATONE	
ANSLEY RADIO CORP 4377 BRONX BLVD, N.Y.C.	
DATE: 1-20-40	TOLERANCE:
BY: A.M.S	APPROVED:
CHECKED: <i>AC</i>	REVISIONS:

MODEL Dynatone
Socket, Notes

ANSLEY RADIO CORP.

SERVICE: ELECTRICAL SYSTEM. The most common cause of trouble is dirt falling bet. strings and pick-up heads causing noise. To elim. this shut off current, press down sustaining pedal, and bang on keys up and down the keyboard. If not dislodged take off back panel and blow out obstruction with hand bellows. Another source of trouble might be tube with microphonic characteristics, which would show up as high-pitched whistle or singing noise in speaker. If any note is too loud or soft take off back panel, trace strings to lower end, loosen lock nut and turn screw back a bit to soften, or in a bit to louden the note, being careful that pick-up head never touches strings at their extreme of vibration. Tighten lock nut after this operation. Amplifier is located under top cover. For tuning strings remove the 2 large screws holding amplifier brackets to back frame. Amp. can then be tilted back and held in raised pos. by 2 hinged wooden strips designed to hold it up for tuning or service. INSTALLATION (AC only). Ground spring clip. If pilot light does not indicate current flowing, a fuse in cable plug may have blown out. Use a five-ampere fuse - never more than 10-ampere. Connect lead-in wire from aerial to upper binding post marked "ANT" Gnd. conn. in cable usually suffices, but may be improved if cable clip is conn. to plate of wall socket, extra gnd. wire run from lower bind. post to clamp on radiator or pipe. CONTROLS: RADIO DIAL. Covers standard American bc band, 550 to 1,600 kc. TUNING KNOB. Operating pointer on radio dial. TOUR CONTROL KNOB. For records and radio - variable. Turned to left, high freq. reduced, static and needle scratch reduced; to right for high fidelity. VOL. CONTROL KNOB. For records and radio, increasing to right. Should be turned to "off" pos. when neither is in use, or when switching from one to the other. DYNAPHONE TURNTABLE. Motor speed regulator set for correct 78 r.p.m. with pointer in center of scale. MAIN SWITCH & PILOT LIGHT. Pilot light glows if power is on. VOL. CONTROL FOR DYNATONE. Turned to extreme left there is no amplification and harpsichord quality is produced; to right, piano quality; in median pos., to 6-ft. grand piano. Should be turned off when Dynaphone or Radio is in use, unless to accompany a record at the keyboard. SOFT PEDAL, at left. SUSTAINING PEDAL, at right. Keyboard and action are standard in every way. Pedals are regular soft and sustaining or "loud", having usual functions in correct location of the lyre of the grand piano. There is nothing unusual about playing the ANSLEY DYNATONE. The pianist simply has the privilege of altering the general volume level and character of the tone by means of the controls provided; an advantage the earlier or acoustical piano cannot offer.

Below the keyboard at the right, back of the small door, are the customary controls for Dynaphone and Radio. In case of serious trouble with amplifier and power units, it may be necessary to disconnect and return to the factory. All connections to these parts are made with detachable plugs. RADIO-DYNAPHONE SELECTOR KNOB. Turn to the left to play records, to the right for radio.

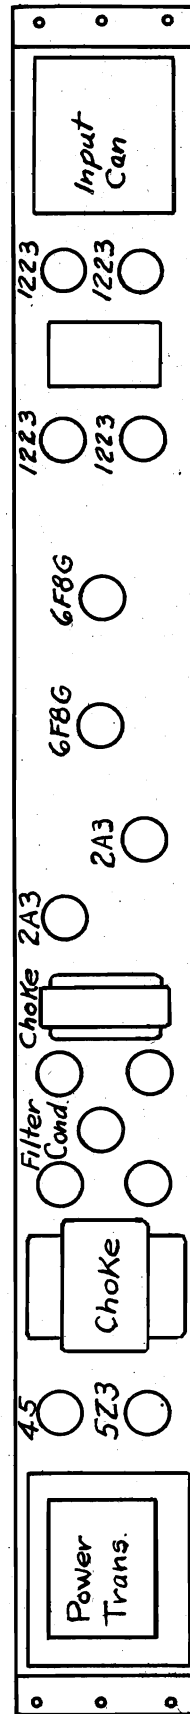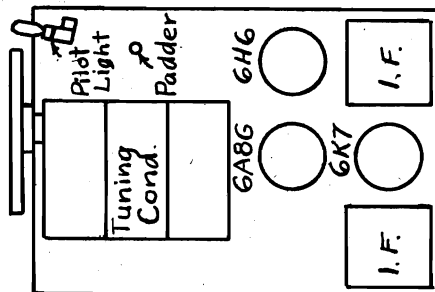

MODELS D-17A, D-18A, D-23A

D29, D30



ANSLEY RADIO CORP.

Parts No. 1.10, 1.11

S.P.U. Schematics


Part 2.21 (Tuner)

Schematic, Socket

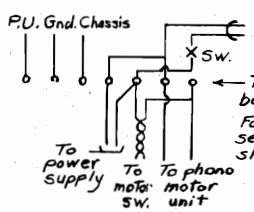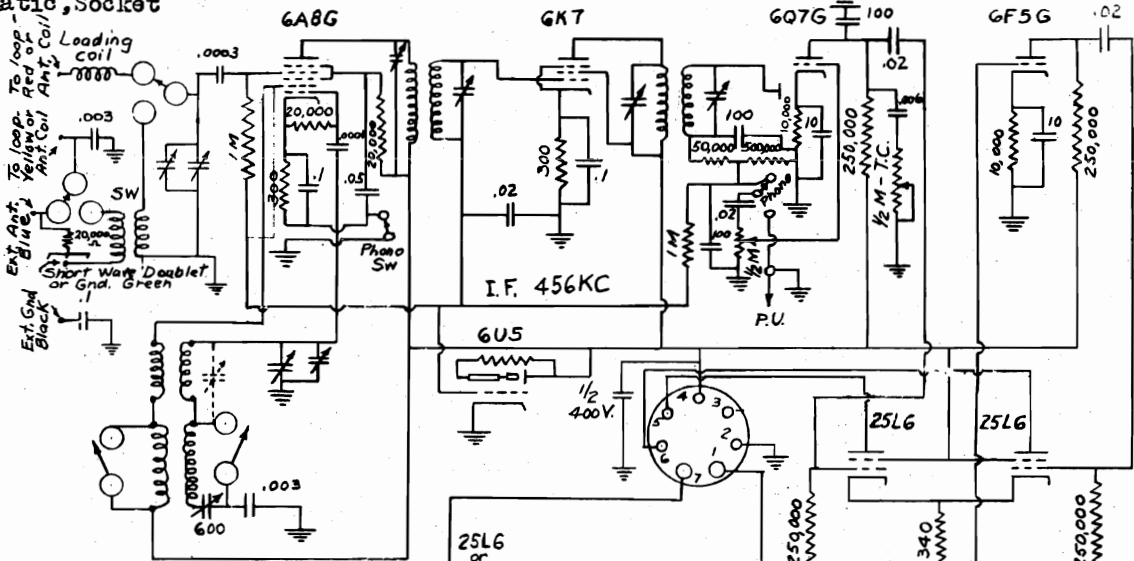


DOUBLET ANTENNA
CONNECT DOUBLET LEADS TO
BLUE AND GREEN LEADS,
BLACK WIRE TO GROUND.

Part No. 2.21
A.C.-D.C. or A.C.
Tuner
Date: 11-10-39
By: A.M.S.
Checked:
Used on Models - D-17-A,
D-18-A, D-23-A, D-29,
D-30.

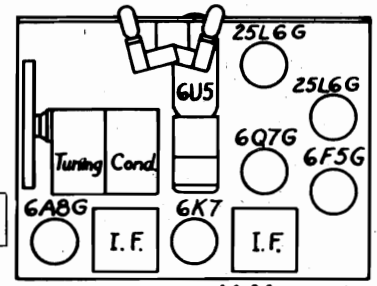


A.C.-D.C. PART 2.21

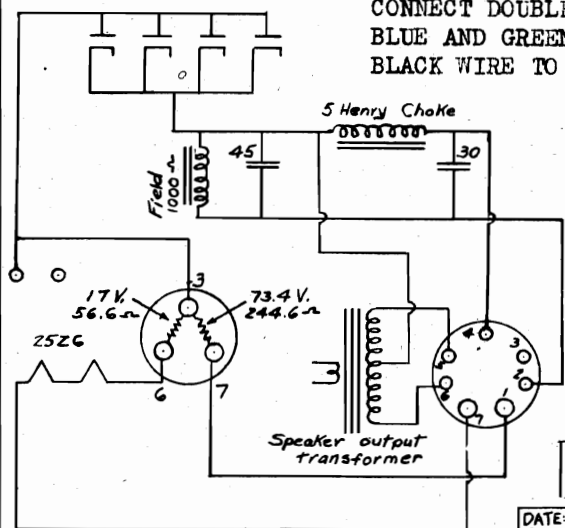

PART No. 1.11 A.C.-D.C. POWER SUPPLY
Used with 2.21 Tuner


POWER SUPPLIES
USED WITH 2.21
TUNER

DATE: 11-10-39
BY: A.M.S.
CHECKED:
TOLERANCE:
APPROVED:
REVISIONS:
USED ON MODELS - D-17-A,
D-18-A, D-23-A, D-29,
D-30.

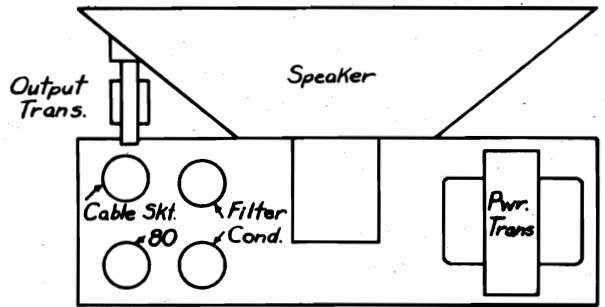


CHASSIS AC POWER SUPPLY

PART 1.10

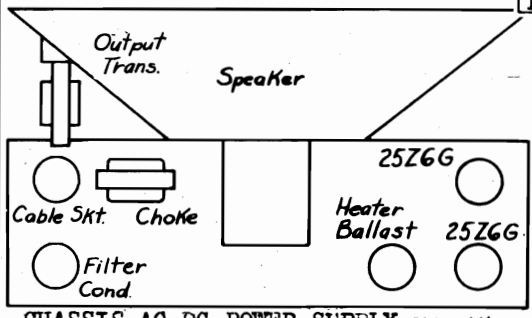

CHASSIS AC-DC POWER SUPPLY PART 1.11



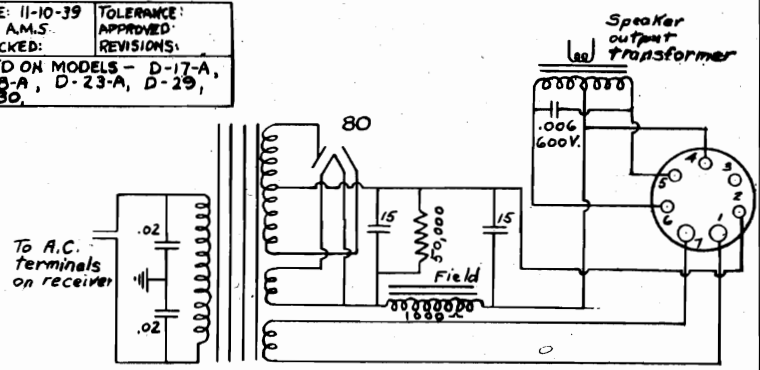


PART No. 1.10 A.C. POWER SUPPLY
Used with 2.21 Tuner

Schematics, Socket, Voltage Trimmers, Alignment

AUTOCRAT RADIO CO.

MODEL 90
MODEL 106

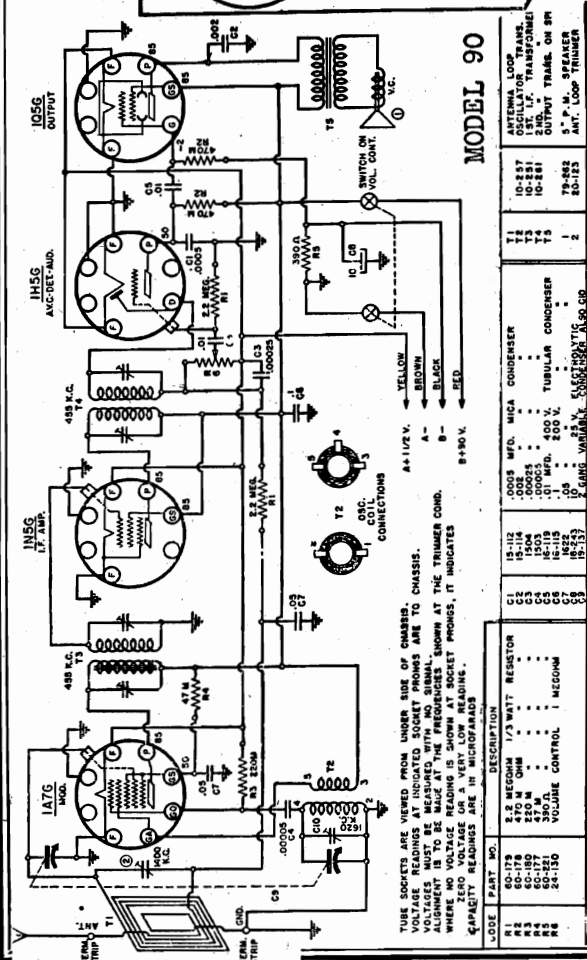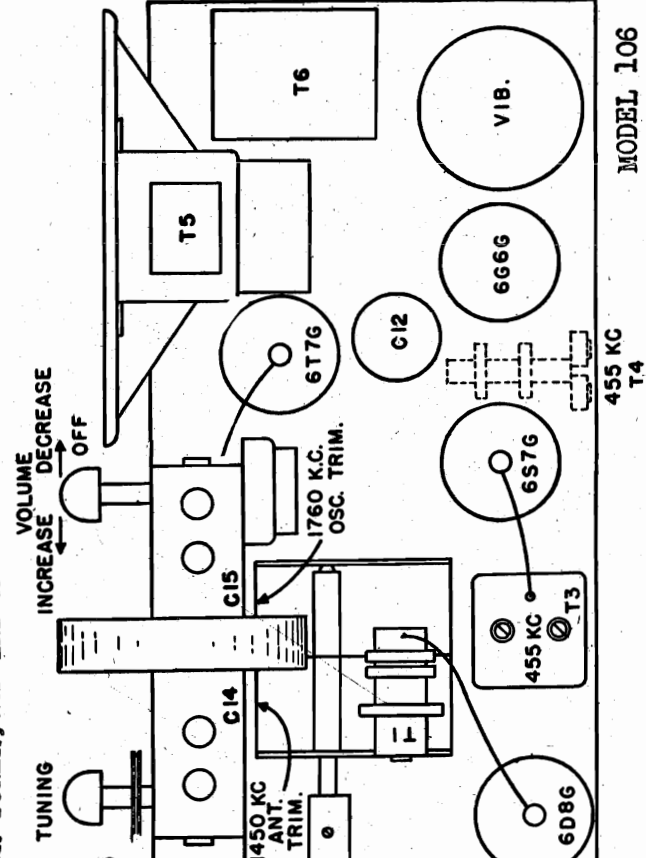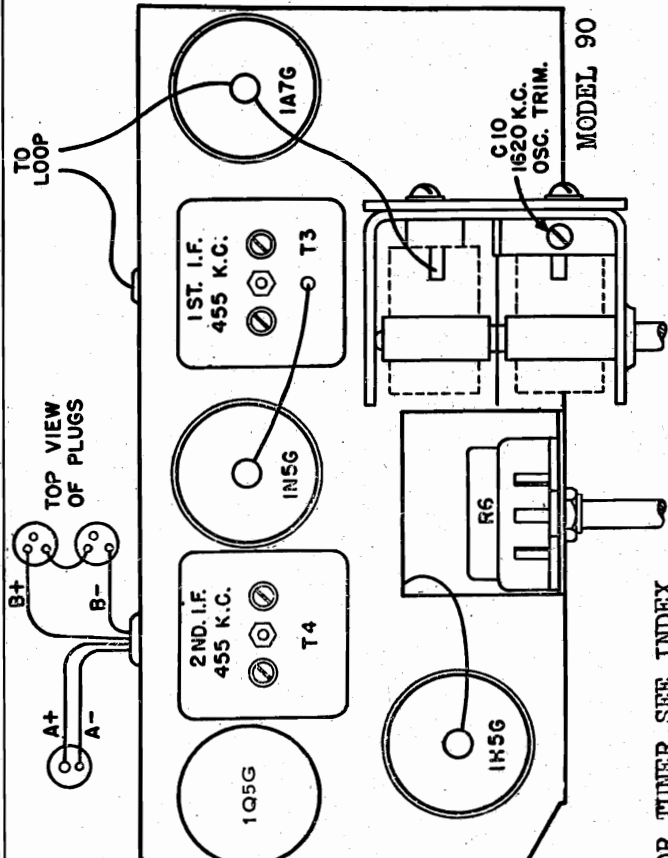

MODEL 106
Tuner Data
MODEL 148
MODEL 148-2

AUTOCRAT RADIO CO.

MODEL 168
Tuner, Alignment, Socket, Trimmers
MODEL 213 Phono-Oscillator
Schematic
MODEL 359 Tuner Data

SETTING PUSH BUTTONS MODELS 106, 148, 148-2, 168, 359

1. By means of the Station Selector Knob tune in WITH THE RIGHT HAND AS ACCURATELY AS POSSIBLE the station having the lowest frequency—that is, your selected station which is tuned in nearest the right-hand side of the dial.

2. After the station has been tuned in accurately with the right hand, continue to hold it in its exact position firmly, and with the left hand loosen the Push-Button to be set up for that station by unscrewing the Push-Button about one turn to the left (counter-clockwise).

3. Continuing to hold the Station Selector Knob in its exact position, PUSH THE PUSH-BUTTON IN ALL THE WAY with the left hand.

4. After the Push-Button has been depressed all the way, tighten it gently toward the right (clockwise). Release Push-Button slowly and when in normal position grip button and tighten firmly.

The Push-Button tuning system is now correctly set up for your first selected station of lowest frequency and the Call Letter Tab for this station should be at the extreme right of the Call Letter Holder.


ALIGNMENT PROCEDURE MODELS 148, 148-2, 168.

All alignments must be made with the volume control turned full on and with the signal input from the generator reduced to as low a value as possible while still giving a sufficient output to be easily read on the output meter.


Connect the output meter, through a .5 M.F. condenser and a resistance of such a value as to make the total meter resistance approximately 7000 ohms, to plate of output tube and B+, or a low voltage A. C. meter may be used connected across speaker voice coil. The output meter remains connected during the entire alignment procedure.

Connect the signal generator to the grid cap of the 6A7 tube through a .1 M.F. condenser. Connect the ground of the generator to the ground lead of the receiver. Set the dial to about 1000 K.C., feed in a 455 K.C. signal: Adjust first and second I.F. trimmers for maximum output. Refer to chassis lay-out for location of trimmers.


Turn the dial to the extreme high frequency end. Feed a 1760 KC signal to the receiver antenna lead through a .00025 MF mica condenser. Adjust the 1760 KC oscillator trimmer until maximum output is shown. Set the generator to 1500 KC and tune in this signal on the receiver. Then adjust the 1500 KC antenna trimmer to the maximum output. Then impress a 600 KC signal into the receiver antenna lead and tune in this signal on the receiver. Adjust oscillator padding condenser to the maximum output. Follow through with this procedure several times in order to obtain the best alignment adjustment possible. This completes the alignment.

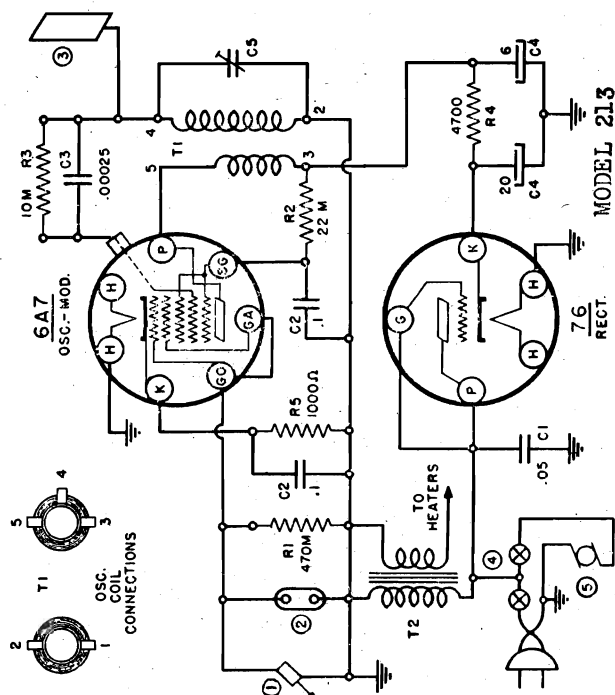

MODEL 213
Two Tube Phono-Oscillator.

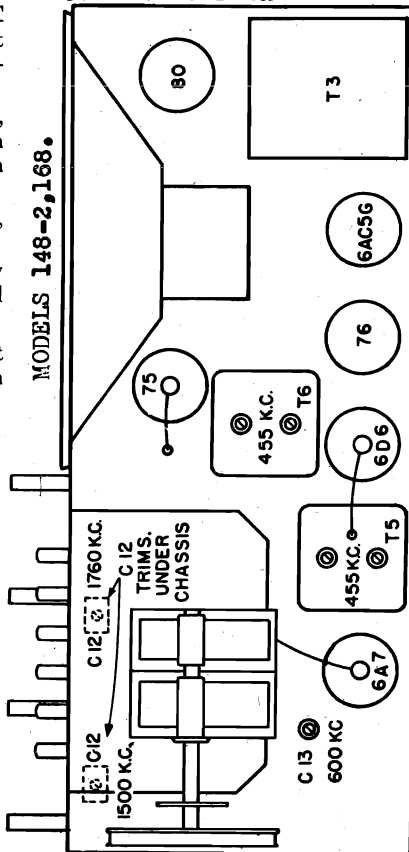

MODELS 148-2, 168.

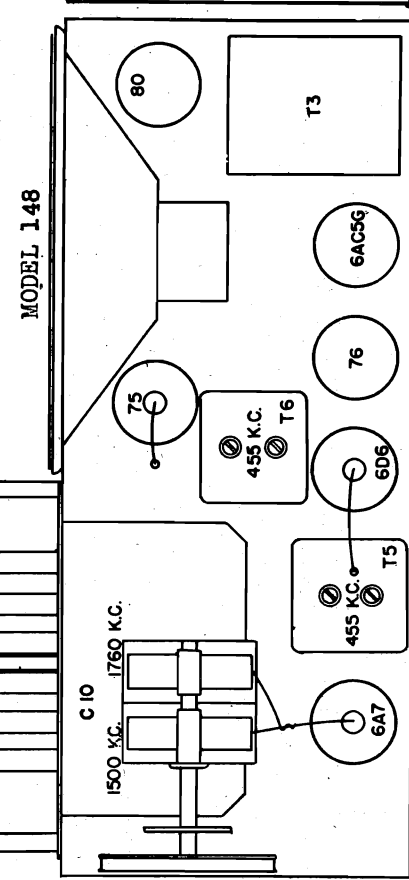


MODEL 148

Schematics, Voltage

AUTOCRAT RADIO CO.


MODEL 91
 MODEL 95
 MODEL 98
 MODELS 101H, 101O, 101W

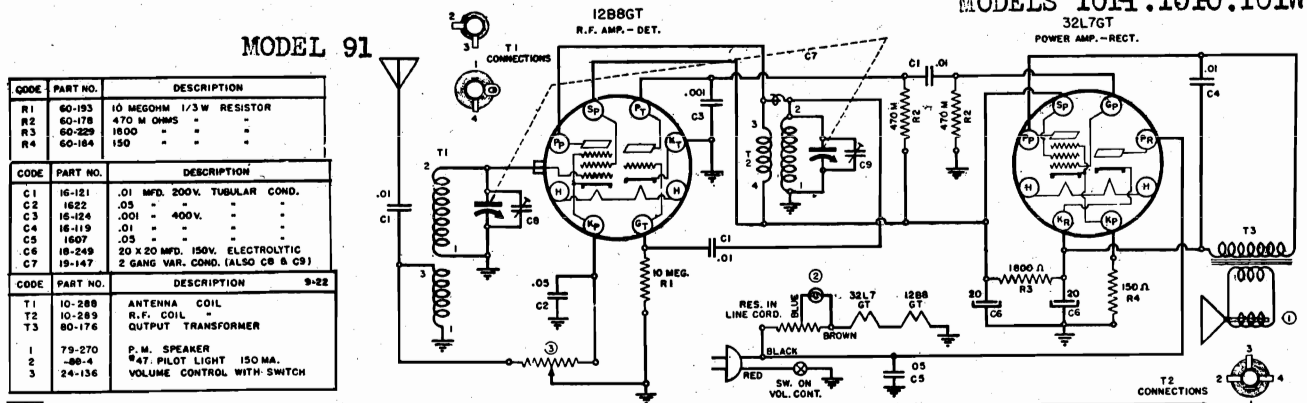

CODE	PART NO.	DESCRIPTION
R1	60-193	10 MEGOHM 1/3 W RESISTOR
R2	60-178	470 M OHMS
R3	60-229	1500
R4	60-184	150

CODE	PART NO.	DESCRIPTION
C1	16-121	.01 MFD. 200V. TUBULAR COND.
C2	1622	.05
C3	16-124	.001 400V.
C4	16-119	.01
C5	1607	.05
C6	18-249	20 X 20 MFD. 150V. ELECTROLYTIC
C7	18-147	2 GANG VAR. COND. (ALSO C8 & C9)


CODE	PART NO.	DESCRIPTION	9-22
T1	10-288	ANTENNA COIL	
T2	10-289	R.F. COIL	
T3	80-176	OUTPUT TRANSFORMER	
1	79-270	P. M. SPEAKER	
2	-86-4	#47 PILOT LIGHT 150 MA.	
3	24-136	VOLUME CONTROL WITH SWITCH	

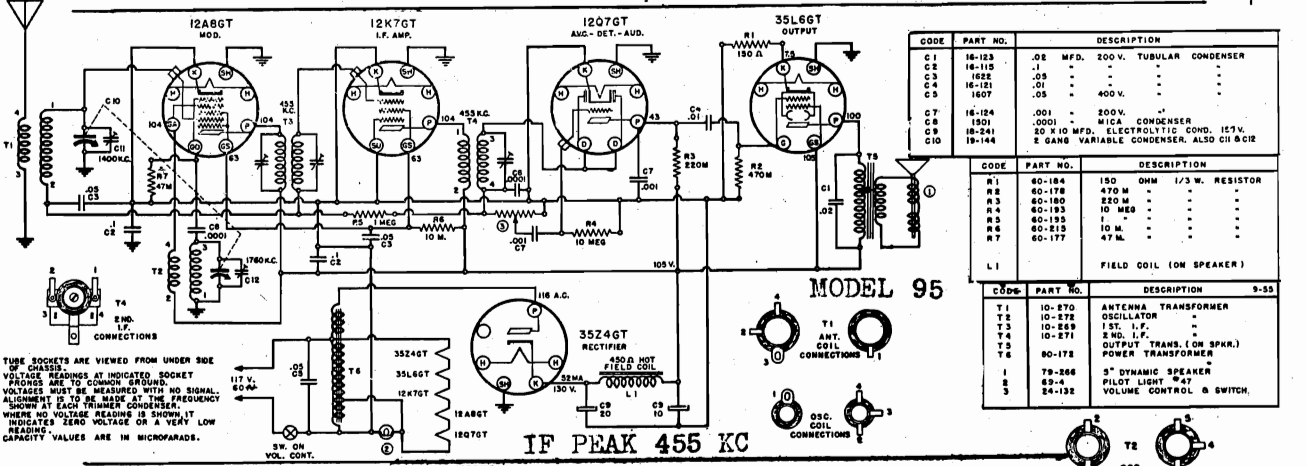

CODE	PART NO.	DESCRIPTION
C1	16-123	.02 MFD. 200V. TUBULAR CONDENSER
C2	16-118	.01
C3	1622	.05
C4	16-121	.001 400V.
C5	1607	.05
C6	16-124	.001 200V.
C7	18-241	20 X 10 MFD. ELECTROLYTIC COND. 125V.
C8	1801	.0001 MICA CONDENSER
C9	18-241	20 X 10 MFD. ELECTROLYTIC COND. 125V.
C10	18-144	2 GANG VARIABLE CONDENSER, ALSO C11 & C12

CODE	PART NO.	DESCRIPTION
R1	60-184	150 OHM 1/3 W. RESISTOR
R2	60-178	470 M
R3	60-180	250 M
R4	60-182	10 MEG
R5	60-193	1
R6	60-215	10 M
R7	60-177	47 M


CODE	PART NO.	DESCRIPTION	9-53
T1	10-270	ANTENNA TRANSFORMER	
T2	10-272	OSCILLATOR	
T3	10-269	1ST. I.F.	
T4	10-271	2 ND. I.F.	
T5	80-176	OUTPUT TRANS. (ON SPKR.)	
T6	80-176	POWER TRANSFORMER	
1	79-268	5" DYNAMIC SPEAKER	
2	82-4	#47 PILOT LIGHT	
3	24-132	VOLUME CONTROL & SWITCH	

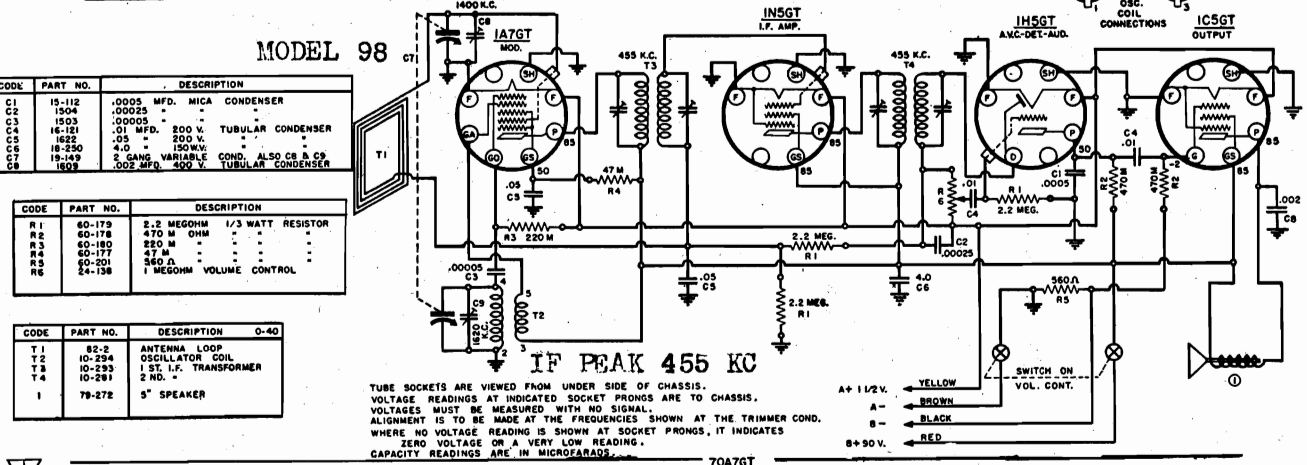

CODE	PART NO.	DESCRIPTION
C1	18-112	.0005 MFD. MICA CONDENSER
C2	1804	.00025
C3	1503	.00005
C4	16-181	.01 MFD. 200 TUBULAR CONDENSER
C5	1622	.05
C6	18-250	4.0 150MV.
C7	18-149	4.0 150MV.
C8	1807	.002 MFD. 400 V. TUBULAR CONDENSER

CODE	PART NO.	DESCRIPTION
R1	60-179	2.2 MEGOHM 1/3 WATT RESISTOR
R2	60-178	470 M OHM
R3	60-180	250 M
R4	60-177	47 M
R5	60-201	360 Ω
R6	24-138	1 MEGOHM VOLUME CONTROL

CODE	PART NO.	DESCRIPTION	9-40
T1	82-2	ANTENNA LOOP	
T2	10-294	OSCILLATOR COIL	
T3	10-293	1ST. I.F. TRANSFORMER	
T4	10-281	2 ND. I.F.	
1	79-272	5" SPEAKER	

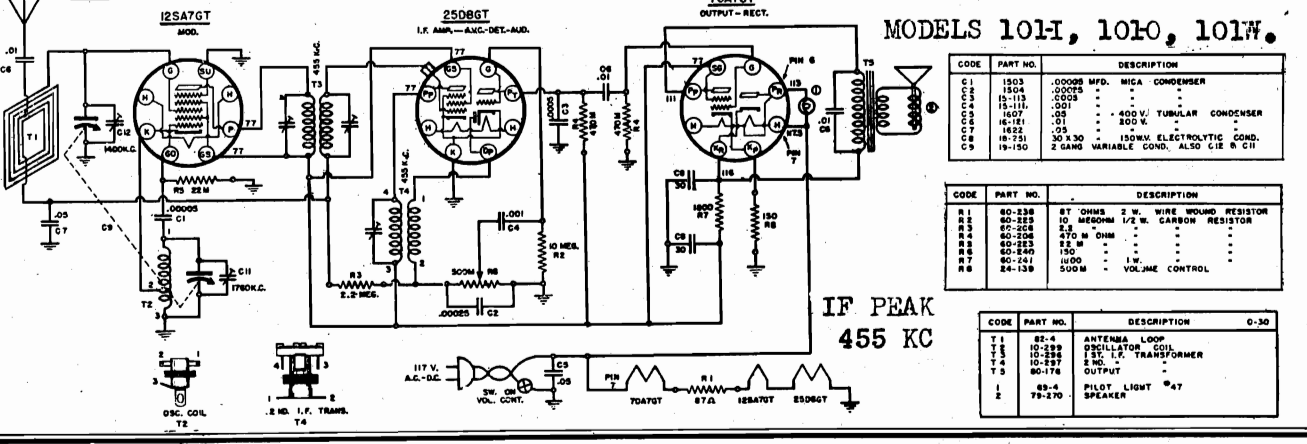

CODE	PART NO.	DESCRIPTION
C1	18-112	.0005 MFD. MICA CONDENSER
C2	1804	.00025
C3	1503	.00005
C4	16-181	.01 MFD. 200 TUBULAR CONDENSER
C5	1622	.05
C6	18-250	4.0 150MV.
C7	18-149	4.0 150MV.
C8	18-231	30 X 30 150MV. ELECTROLYTIC COND.
C9	18-150	2 GANG VARIABLE COND. ALSO C10 & C11



CODE	PART NO.	DESCRIPTION
R1	60-238	87 OHMS 2 W. WIRE WOUND RESISTOR
R2	60-232	10 MEGOHM 1/2 W. CARBON RESISTOR
R3	60-228	470 M OHM
R4	60-208	250 M OHM
R5	60-223	25 M
R6	60-240	50
R7	60-241	150 Ω
R8	24-138	500 M VOLUME CONTROL

CODE	PART NO.	DESCRIPTION	9-30
T1	82-4	ANTENNA LOOP	
T2	10-289	1ST. I.F. TRANSFORMER	
T3	10-281	2ND. I.F. TRANSFORMER	
T4	80-176	OUTPUT	
1	82-4	PILOT LIGHT #47	
2	79-270	SPEAKER	

AUTOCRAT RADIO CO.



MODELS 103I, 103O, 103W
 MODELS 107I, 107W
 MODELS 109, 110
 Socket, Trimmers, Alignment

MODEL 91
 MODEL 95
 MODEL 98
 MODELS 101I, 101O, 101W
 MODELS 102I, 102O, 102W

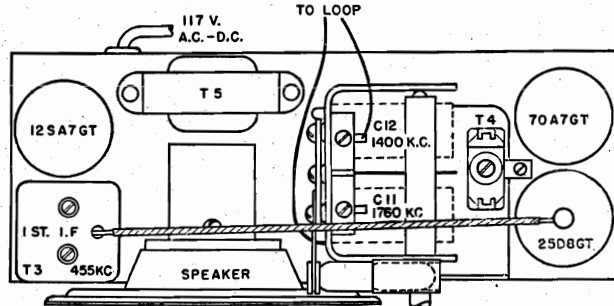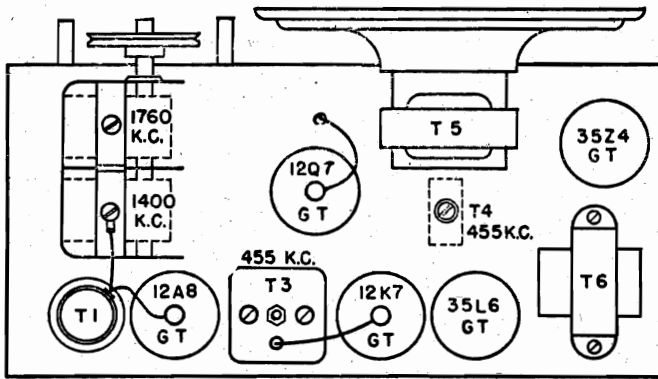


MODELS 101I, 101O, 101W.

MODEL 95

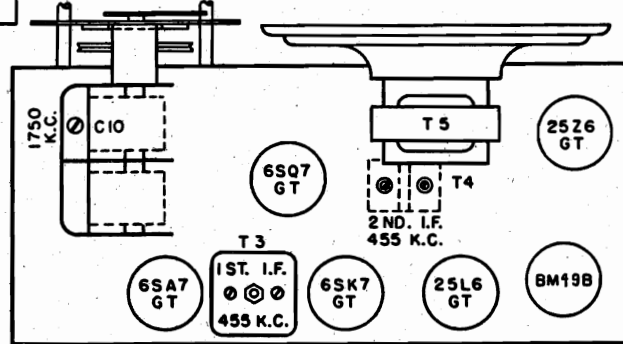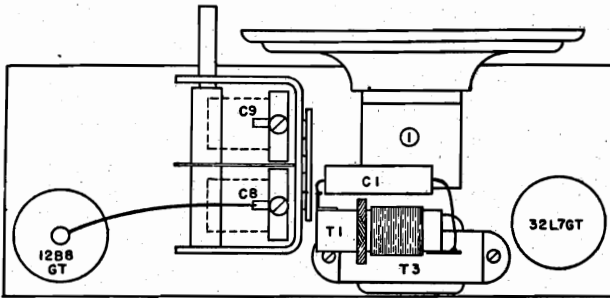


MODELS 103I, 103O, 103W.


MODEL 91

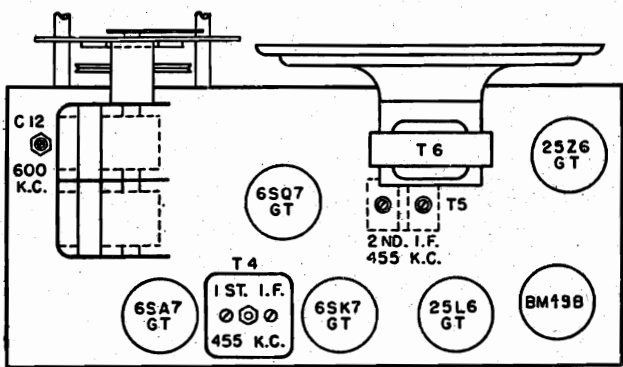


MODELS 102I, 102O, 102W

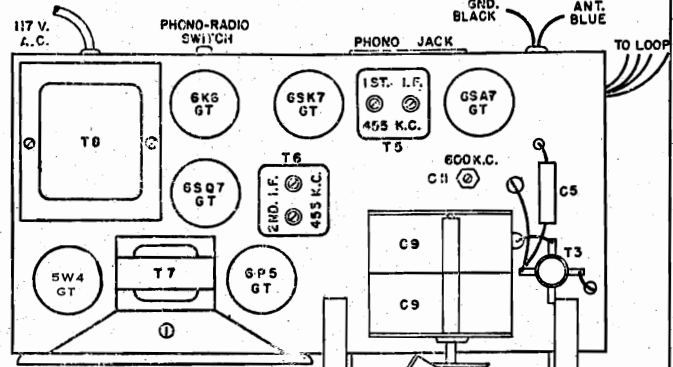

MODELS 109, 110.

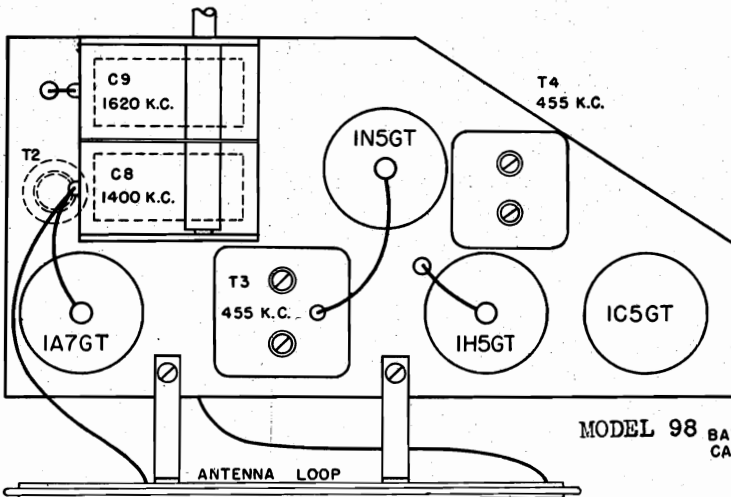

MODEL 98 BATTERY CABLES

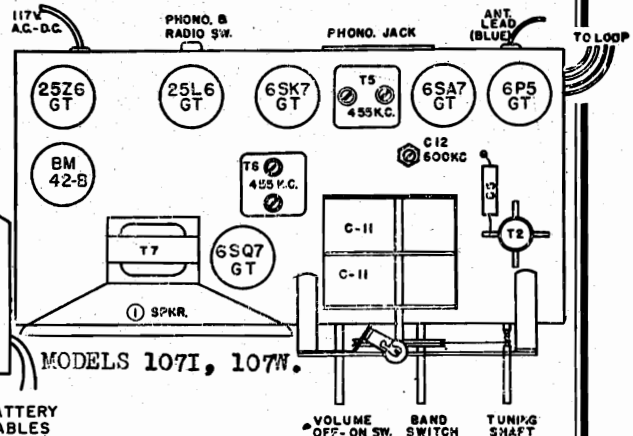


MODELS 107I, 107W.

MODEL 104
Schematic, Socket, Trimmers


AUTOCRAT RADIO CO.

MODEL 92
Schematic, Socket, Trimmers,
Assembly

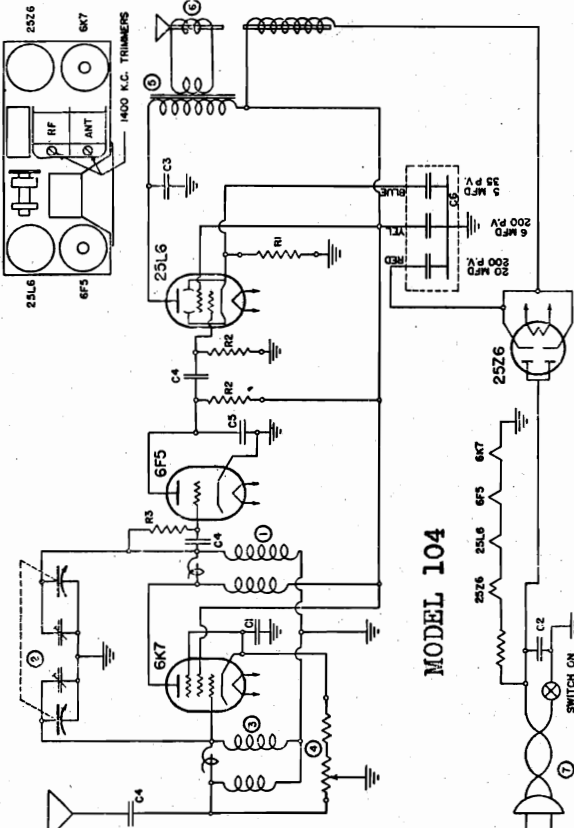


MODEL 104

CODE	PART NO.	DESCRIPTION
10	10-234	R.F. COIL
11	10-235	ANTENNA COIL
12	10-233	VOLUME CONTROL & SWITCH
13	28-117	VOLUME TRANSFORMER
14	79-244	SPEAKER
15	73-117	LINE CORD
16	60-183	5.8 MEGOHM 1/2 WATT
17	16-109	.05 MFD. 500 V. TUBULAR CONDENSER
18	16-107	.05 MFD. 200 V. TUBULAR CONDENSER
19	16-108	.02 MFD. 600 V. TUBULAR CONDENSER
20	1504	150 MFD. 50 V. ELECTROLYTIC COND.
21	18-230	18-230 MFD. MICA CONDENSER
22	18-230	18-230 MFD. MICA CONDENSER
23	18-230	18-230 MFD. MICA CONDENSER
24	18-230	18-230 MFD. MICA CONDENSER
25	18-230	18-230 MFD. MICA CONDENSER

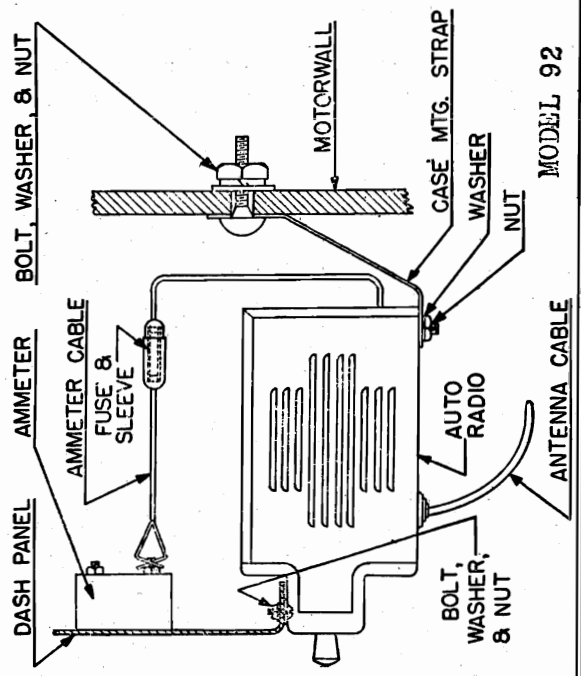


MODEL 92

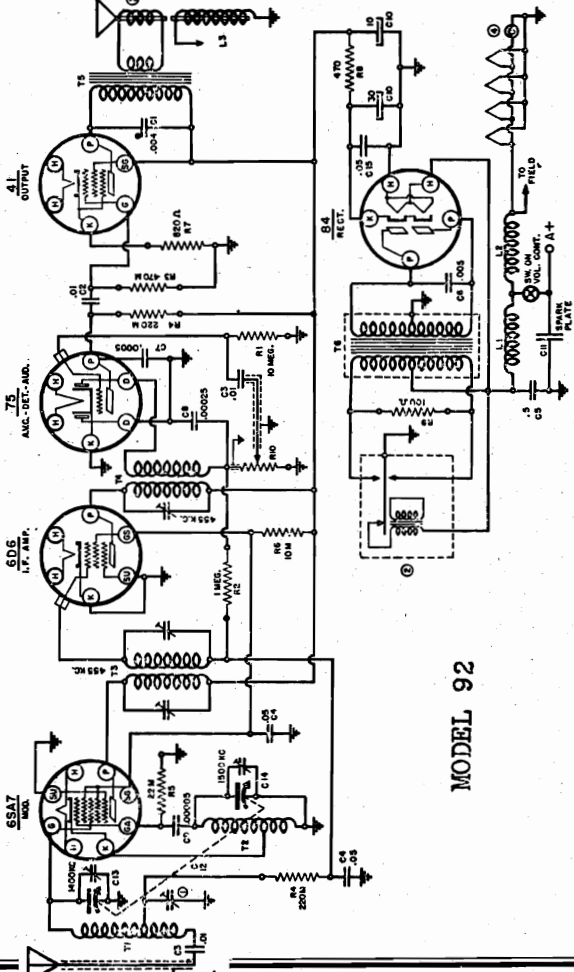

MODEL 92

CODE	PART NO.	DESCRIPTION
10	10-234	R.F. COIL
11	10-235	ANTENNA COIL
12	10-233	VOLUME CONTROL & SWITCH
13	28-117	VOLUME TRANSFORMER
14	79-244	SPEAKER
15	73-117	LINE CORD
16	60-183	5.8 MEGOHM 1/2 WATT
17	16-109	.05 MFD. 500 V. TUBULAR CONDENSER
18	16-107	.05 MFD. 200 V. TUBULAR CONDENSER
19	16-108	.02 MFD. 600 V. TUBULAR CONDENSER
20	1504	150 MFD. 50 V. ELECTROLYTIC COND.
21	18-230	18-230 MFD. MICA CONDENSER
22	18-230	18-230 MFD. MICA CONDENSER
23	18-230	18-230 MFD. MICA CONDENSER
24	18-230	18-230 MFD. MICA CONDENSER
25	18-230	18-230 MFD. MICA CONDENSER
26	18-230	18-230 MFD. MICA CONDENSER
27	18-230	18-230 MFD. MICA CONDENSER
28	18-230	18-230 MFD. MICA CONDENSER
29	18-230	18-230 MFD. MICA CONDENSER
30	18-230	18-230 MFD. MICA CONDENSER
31	18-230	18-230 MFD. MICA CONDENSER
32	18-230	18-230 MFD. MICA CONDENSER
33	18-230	18-230 MFD. MICA CONDENSER
34	18-230	18-230 MFD. MICA CONDENSER
35	18-230	18-230 MFD. MICA CONDENSER
36	18-230	18-230 MFD. MICA CONDENSER
37	18-230	18-230 MFD. MICA CONDENSER
38	18-230	18-230 MFD. MICA CONDENSER
39	18-230	18-230 MFD. MICA CONDENSER
40	18-230	18-230 MFD. MICA CONDENSER
41	18-230	18-230 MFD. MICA CONDENSER
42	18-230	18-230 MFD. MICA CONDENSER
43	18-230	18-230 MFD. MICA CONDENSER
44	18-230	18-230 MFD. MICA CONDENSER
45	18-230	18-230 MFD. MICA CONDENSER
46	18-230	18-230 MFD. MICA CONDENSER
47	18-230	18-230 MFD. MICA CONDENSER
48	18-230	18-230 MFD. MICA CONDENSER
49	18-230	18-230 MFD. MICA CONDENSER
50	18-230	18-230 MFD. MICA CONDENSER
51	18-230	18-230 MFD. MICA CONDENSER
52	18-230	18-230 MFD. MICA CONDENSER
53	18-230	18-230 MFD. MICA CONDENSER
54	18-230	18-230 MFD. MICA CONDENSER
55	18-230	18-230 MFD. MICA CONDENSER
56	18-230	18-230 MFD. MICA CONDENSER
57	18-230	18-230 MFD. MICA CONDENSER
58	18-230	18-230 MFD. MICA CONDENSER
59	18-230	18-230 MFD. MICA CONDENSER
60	18-230	18-230 MFD. MICA CONDENSER
61	18-230	18-230 MFD. MICA CONDENSER
62	18-230	18-230 MFD. MICA CONDENSER
63	18-230	18-230 MFD. MICA CONDENSER
64	18-230	18-230 MFD. MICA CONDENSER
65	18-230	18-230 MFD. MICA CONDENSER
66	18-230	18-230 MFD. MICA CONDENSER
67	18-230	18-230 MFD. MICA CONDENSER
68	18-230	18-230 MFD. MICA CONDENSER
69	18-230	18-230 MFD. MICA CONDENSER
70	18-230	18-230 MFD. MICA CONDENSER
71	18-230	18-230 MFD. MICA CONDENSER
72	18-230	18-230 MFD. MICA CONDENSER
73	18-230	18-230 MFD. MICA CONDENSER
74	18-230	18-230 MFD. MICA CONDENSER
75	18-230	18-230 MFD. MICA CONDENSER
76	18-230	18-230 MFD. MICA CONDENSER
77	18-230	18-230 MFD. MICA CONDENSER
78	18-230	18-230 MFD. MICA CONDENSER
79	18-230	18-230 MFD. MICA CONDENSER
80	18-230	18-230 MFD. MICA CONDENSER
81	18-230	18-230 MFD. MICA CONDENSER
82	18-230	18-230 MFD. MICA CONDENSER
83	18-230	18-230 MFD. MICA CONDENSER
84	18-230	18-230 MFD. MICA CONDENSER
85	18-230	18-230 MFD. MICA CONDENSER
86	18-230	18-230 MFD. MICA CONDENSER
87	18-230	18-230 MFD. MICA CONDENSER
88	18-230	18-230 MFD. MICA CONDENSER
89	18-230	18-230 MFD. MICA CONDENSER
90	18-230	18-230 MFD. MICA CONDENSER
91	18-230	18-230 MFD. MICA CONDENSER
92	18-230	18-230 MFD. MICA CONDENSER
93	18-230	18-230 MFD. MICA CONDENSER
94	18-230	18-230 MFD. MICA CONDENSER
95	18-230	18-230 MFD. MICA CONDENSER
96	18-230	18-230 MFD. MICA CONDENSER
97	18-230	18-230 MFD. MICA CONDENSER
98	18-230	18-230 MFD. MICA CONDENSER
99	18-230	18-230 MFD. MICA CONDENSER
100	18-230	18-230 MFD. MICA CONDENSER

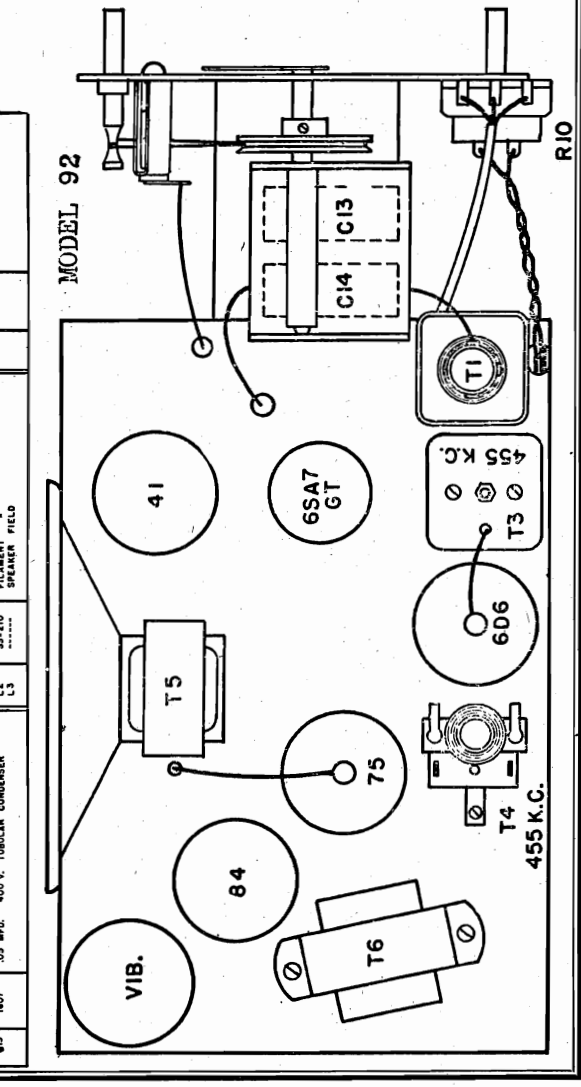


MODEL 92


AUTOCRAT RADIO CO.

Schematics, Socket Trimmers, Alignment

MODEL 93
MODEL 94
MODEL 96

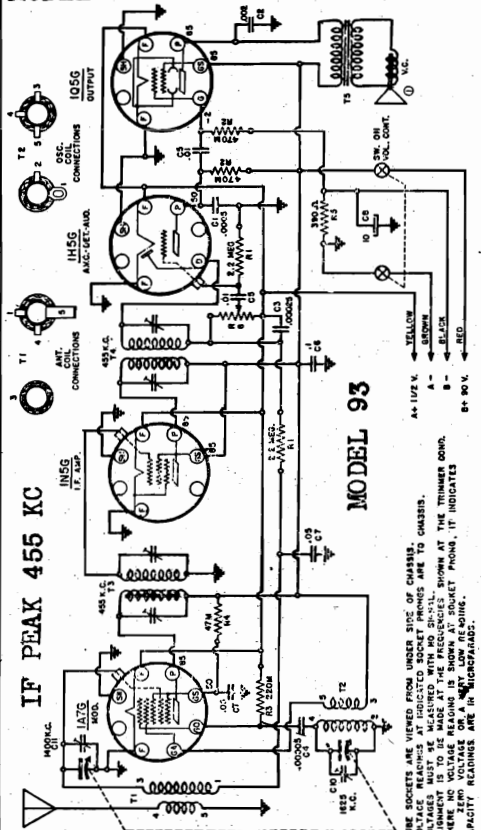

CODE	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
R1	60-179	2.2 M-Ω OHM 1/2 WATT RESISTOR	C1	15-111	ANTENNA COIL
R2	60-178	470 Ω	C2	10-233	OSC. COIL
R3	60-177	47 Ω	C3	10-232	OSC. COIL
R4	60-176	47 Ω	C4	10-231	OSC. COIL
R5	60-175	47 Ω	C5	10-230	OSC. COIL
R6	60-174	47 Ω	C6	10-229	OSC. COIL
R7	60-173	47 Ω	C7	10-228	OSC. COIL
R8	60-172	47 Ω	C8	10-227	OSC. COIL
R9	60-171	47 Ω	C9	10-226	OSC. COIL
R10	60-170	47 Ω	C10	10-225	OSC. COIL
R11	60-169	47 Ω	C11	10-224	OSC. COIL
R12	60-168	47 Ω	C12	10-223	OSC. COIL
R13	60-167	47 Ω	C13	10-222	OSC. COIL
R14	60-166	47 Ω	C14	10-221	OSC. COIL
R15	60-165	47 Ω	C15	10-220	OSC. COIL
R16	60-164	47 Ω	C16	10-219	OSC. COIL
R17	60-163	47 Ω	C17	10-218	OSC. COIL
R18	60-162	47 Ω	C18	10-217	OSC. COIL
R19	60-161	47 Ω	C19	10-216	OSC. COIL
R20	60-160	47 Ω	C20	10-215	OSC. COIL
R21	60-159	47 Ω	C21	10-214	OSC. COIL
R22	60-158	47 Ω	C22	10-213	OSC. COIL
R23	60-157	47 Ω	C23	10-212	OSC. COIL
R24	60-156	47 Ω	C24	10-211	OSC. COIL
R25	60-155	47 Ω	C25	10-210	OSC. COIL
R26	60-154	47 Ω	C26	10-209	OSC. COIL
R27	60-153	47 Ω	C27	10-208	OSC. COIL
R28	60-152	47 Ω	C28	10-207	OSC. COIL
R29	60-151	47 Ω	C29	10-206	OSC. COIL
R30	60-150	47 Ω	C30	10-205	OSC. COIL
R31	60-149	47 Ω	C31	10-204	OSC. COIL
R32	60-148	47 Ω	C32	10-203	OSC. COIL
R33	60-147	47 Ω	C33	10-202	OSC. COIL
R34	60-146	47 Ω	C34	10-201	OSC. COIL
R35	60-145	47 Ω	C35	10-200	OSC. COIL
R36	60-144	47 Ω	C36	10-199	OSC. COIL
R37	60-143	47 Ω	C37	10-198	OSC. COIL
R38	60-142	47 Ω	C38	10-197	OSC. COIL
R39	60-141	47 Ω	C39	10-196	OSC. COIL
R40	60-140	47 Ω	C40	10-195	OSC. COIL
R41	60-139	47 Ω	C41	10-194	OSC. COIL
R42	60-138	47 Ω	C42	10-193	OSC. COIL
R43	60-137	47 Ω	C43	10-192	OSC. COIL
R44	60-136	47 Ω	C44	10-191	OSC. COIL
R45	60-135	47 Ω	C45	10-190	OSC. COIL
R46	60-134	47 Ω	C46	10-189	OSC. COIL
R47	60-133	47 Ω	C47	10-188	OSC. COIL
R48	60-132	47 Ω	C48	10-187	OSC. COIL
R49	60-131	47 Ω	C49	10-186	OSC. COIL
R50	60-130	47 Ω	C50	10-185	OSC. COIL
R51	60-129	47 Ω	C51	10-184	OSC. COIL
R52	60-128	47 Ω	C52	10-183	OSC. COIL
R53	60-127	47 Ω	C53	10-182	OSC. COIL
R54	60-126	47 Ω	C54	10-181	OSC. COIL
R55	60-125	47 Ω	C55	10-180	OSC. COIL
R56	60-124	47 Ω	C56	10-179	OSC. COIL
R57	60-123	47 Ω	C57	10-178	OSC. COIL
R58	60-122	47 Ω	C58	10-177	OSC. COIL
R59	60-121	47 Ω	C59	10-176	OSC. COIL
R60	60-120	47 Ω	C60	10-175	OSC. COIL
R61	60-119	47 Ω	C61	10-174	OSC. COIL
R62	60-118	47 Ω	C62	10-173	OSC. COIL
R63	60-117	47 Ω	C63	10-172	OSC. COIL
R64	60-116	47 Ω	C64	10-171	OSC. COIL
R65	60-115	47 Ω	C65	10-170	OSC. COIL
R66	60-114	47 Ω	C66	10-169	OSC. COIL
R67	60-113	47 Ω	C67	10-168	OSC. COIL
R68	60-112	47 Ω	C68	10-167	OSC. COIL
R69	60-111	47 Ω	C69	10-166	OSC. COIL
R70	60-110	47 Ω	C70	10-165	OSC. COIL
R71	60-109	47 Ω	C71	10-164	OSC. COIL
R72	60-108	47 Ω	C72	10-163	OSC. COIL
R73	60-107	47 Ω	C73	10-162	OSC. COIL
R74	60-106	47 Ω	C74	10-161	OSC. COIL
R75	60-105	47 Ω	C75	10-160	OSC. COIL
R76	60-104	47 Ω	C76	10-159	OSC. COIL
R77	60-103	47 Ω	C77	10-158	OSC. COIL
R78	60-102	47 Ω	C78	10-157	OSC. COIL
R79	60-101	47 Ω	C79	10-156	OSC. COIL
R80	60-100	47 Ω	C80	10-155	OSC. COIL
R81	60-99	47 Ω	C81	10-154	OSC. COIL
R82	60-98	47 Ω	C82	10-153	OSC. COIL
R83	60-97	47 Ω	C83	10-152	OSC. COIL
R84	60-96	47 Ω	C84	10-151	OSC. COIL
R85	60-95	47 Ω	C85	10-150	OSC. COIL
R86	60-94	47 Ω	C86	10-149	OSC. COIL
R87	60-93	47 Ω	C87	10-148	OSC. COIL
R88	60-92	47 Ω	C88	10-147	OSC. COIL
R89	60-91	47 Ω	C89	10-146	OSC. COIL
R90	60-90	47 Ω	C90	10-145	OSC. COIL
R91	60-89	47 Ω	C91	10-144	OSC. COIL
R92	60-88	47 Ω	C92	10-143	OSC. COIL
R93	60-87	47 Ω	C93	10-142	OSC. COIL
R94	60-86	47 Ω	C94	10-141	OSC. COIL
R95	60-85	47 Ω	C95	10-140	OSC. COIL
R96	60-84	47 Ω	C96	10-139	OSC. COIL
R97	60-83	47 Ω	C97	10-138	OSC. COIL
R98	60-82	47 Ω	C98	10-137	OSC. COIL
R99	60-81	47 Ω	C99	10-136	OSC. COIL
R100	60-80	47 Ω	C100	10-135	OSC. COIL

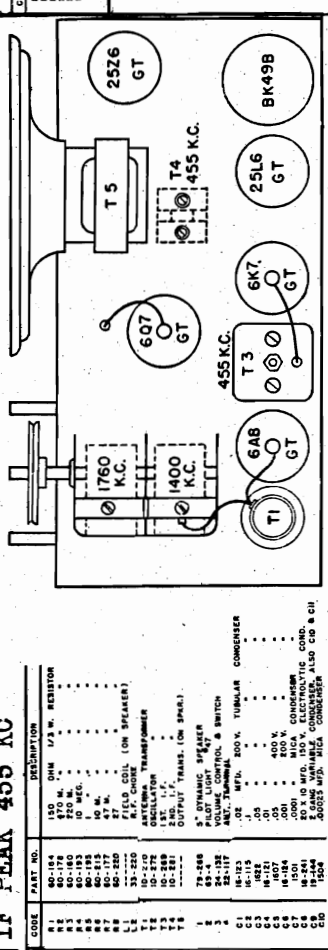


CODE	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
R1	60-179	2.2 M-Ω OHM 1/2 WATT RESISTOR	C1	15-111	ANTENNA COIL
R2	60-178	470 Ω	C2	10-233	OSC. COIL
R3	60-177	47 Ω	C3	10-232	OSC. COIL
R4	60-176	47 Ω	C4	10-231	OSC. COIL
R5	60-175	47 Ω	C5	10-230	OSC. COIL
R6	60-174	47 Ω	C6	10-229	OSC. COIL
R7	60-173	47 Ω	C7	10-228	OSC. COIL
R8	60-172	47 Ω	C8	10-227	OSC. COIL
R9	60-171	47 Ω	C9	10-226	OSC. COIL
R10	60-170	47 Ω	C10	10-225	OSC. COIL
R11	60-169	47 Ω	C11	10-224	OSC. COIL
R12	60-168	47 Ω	C12	10-223	OSC. COIL
R13	60-167	47 Ω	C13	10-222	OSC. COIL
R14	60-166	47 Ω	C14	10-221	OSC. COIL
R15	60-165	47 Ω	C15	10-220	OSC. COIL
R16	60-164	47 Ω	C16	10-219	OSC. COIL
R17	60-163	47 Ω	C17	10-218	OSC. COIL
R18	60-162	47 Ω	C18	10-217	OSC. COIL
R19	60-161	47 Ω	C19	10-216	OSC. COIL
R20	60-160	47 Ω	C20	10-215	OSC. COIL
R21	60-159	47 Ω	C21	10-214	OSC. COIL
R22	60-158	47 Ω	C22	10-213	OSC. COIL
R23	60-157	47 Ω	C23	10-212	OSC. COIL
R24	60-156	47 Ω	C24	10-211	OSC. COIL
R25	60-155	47 Ω	C25	10-210	OSC. COIL
R26	60-154	47 Ω	C26	10-209	OSC. COIL
R27	60-153	47 Ω	C27	10-208	OSC. COIL
R28	60-152	47 Ω	C28	10-207	OSC. COIL
R29	60-151	47 Ω	C29	10-206	OSC. COIL
R30	60-150	47 Ω	C30	10-205	OSC. COIL
R31	60-149	47 Ω	C31	10-204	OSC. COIL
R32	60-148	47 Ω	C32	10-203	OSC. COIL
R33	60-147	47 Ω	C33	10-202	OSC. COIL
R34	60-146	47 Ω	C34	10-201	OSC. COIL
R35	60-145	47 Ω	C35	10-200	OSC. COIL
R36	60-144	47 Ω	C36	10-199	OSC. COIL
R37	60-143	47 Ω	C37	10-198	OSC. COIL
R38	60-142	47 Ω	C38	10-197	OSC. COIL
R39	60-141	47 Ω	C39	10-196	OSC. COIL
R40	60-140	47 Ω	C40	10-195	OSC. COIL
R41	60-139	47 Ω	C41	10-194	OSC. COIL
R42	60-138	47 Ω	C42	10-193	OSC. COIL
R43	60-137	47 Ω	C43	10-192	OSC. COIL
R44	60-136	47 Ω	C44	10-191	OSC. COIL
R45	60-135	47 Ω	C45	10-190	OSC. COIL
R46	60-134	47 Ω	C46	10-189	OSC. COIL
R47	60-133	47 Ω	C47	10-188	OSC. COIL
R48	60-132	47 Ω	C48	10-187	OSC. COIL
R49	60-131	47 Ω	C49	10-186	OSC. COIL
R50	60-130	47 Ω	C50	10-185	OSC. COIL
R51	60-129	47 Ω	C51	10-184	OSC. COIL
R52	60-128	47 Ω	C52	10-183	OSC. COIL
R53	60-127	47 Ω	C53	10-182	OSC. COIL
R54	60-126	47 Ω	C54	10-181	OSC. COIL
R55	60-125	47 Ω	C55	10-180	OSC. COIL
R56	60-124	47 Ω	C56	10-179	OSC. COIL
R57	60-123	47 Ω	C57	10-178	OSC. COIL
R58	60-122	47 Ω	C58	10-177	OSC. COIL
R59	60-121	47 Ω	C59	10-176	OSC. COIL
R60	60-120	47 Ω	C60	10-175	OSC. COIL
R61	60-119	47 Ω	C61	10-174	OSC. COIL
R62	60-118	47 Ω	C62	10-173	OSC. COIL
R63	60-117	47 Ω	C63	10-172	OSC. COIL
R64	60-116	47 Ω	C64	10-171	OSC. COIL
R65	60-115	47 Ω	C65	10-170	OSC. COIL
R66	60-114	47 Ω	C66	10-169	OSC. COIL
R67	60-113	47 Ω	C67	10-168	OSC. COIL
R68	60-112	47 Ω	C68	10-167	OSC. COIL
R69	60-111	47 Ω	C69	10-166	OSC. COIL
R70	60-110	47 Ω	C70	10-165	OSC. COIL
R71	60-109	47 Ω	C71	10-164	OSC. COIL
R72	60-108	47 Ω	C72	10-163	OSC. COIL
R73	60-107	47 Ω	C73	10-162	OSC. COIL
R74	60-106	47 Ω	C74	10-161	OSC. COIL
R75	60-105	47 Ω	C75	10-160	OSC. COIL
R76	60-104	47 Ω	C76	10-159	OSC. COIL
R77	60-103	47 Ω	C77	10-158	OSC. COIL
R78	60-102	47 Ω	C78	10-157	OSC. COIL
R79</					

AUTOCRAT RADIO CO.

MODEL 114
MODEL 116
Schematics, Voltage


MODEL 112
MODEL 113

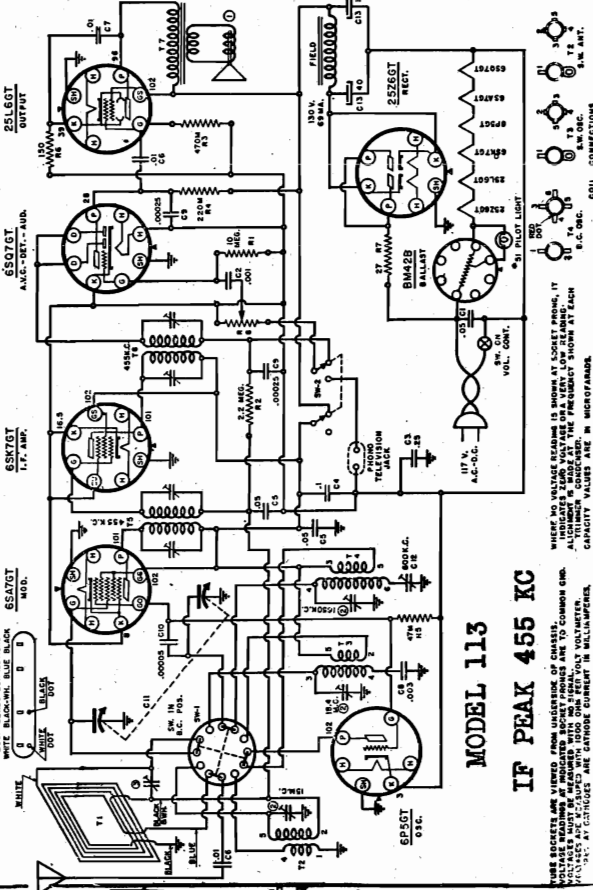

MODEL 113
IF PEAK 455 KC

WHERE NO VOLTAGE READINGS ARE SHOWN AT SOCKET PRONGS, IT INDICATES ZERO VOLTAGE READINGS AT SOCKET PRONGS. IT IS THE SAME FOR ALL VOLTAGE READINGS. CAPACITY VALUES ARE IN MICROFARADS.


CODE	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
C1	10	10 MEGOHM	R1	10	10 MEGOHM
C2	10	10 MEGOHM	R2	10	10 MEGOHM
C3	10	10 MEGOHM	R3	10	10 MEGOHM
C4	10	10 MEGOHM	R4	10	10 MEGOHM
C5	10	10 MEGOHM	R5	10	10 MEGOHM
C6	10	10 MEGOHM	R6	10	10 MEGOHM
C7	10	10 MEGOHM	R7	10	10 MEGOHM
C8	10	10 MEGOHM	R8	10	10 MEGOHM
C9	10	10 MEGOHM	R9	10	10 MEGOHM
C10	10	10 MEGOHM	R10	10	10 MEGOHM
C11	10	10 MEGOHM	R11	10	10 MEGOHM
C12	10	10 MEGOHM	R12	10	10 MEGOHM

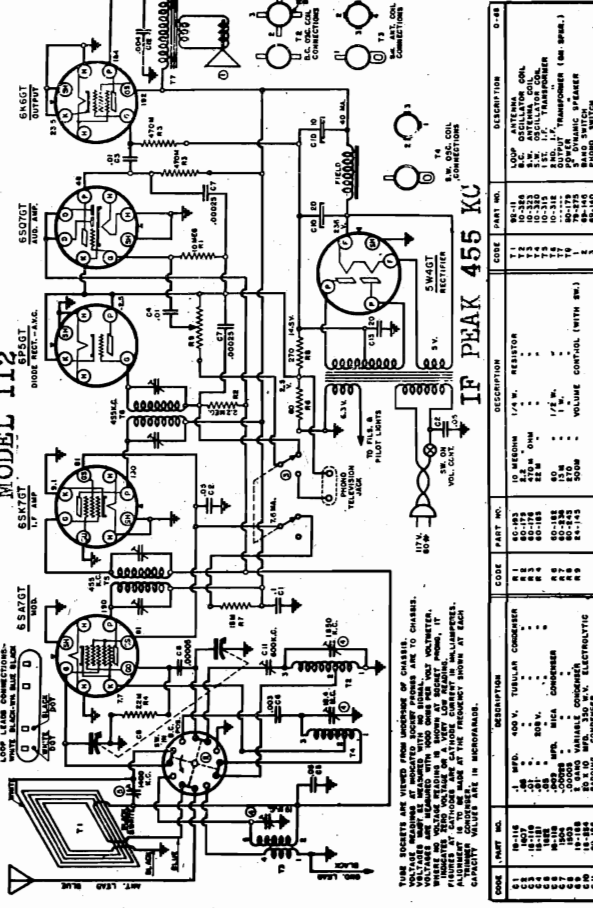

MODEL 112
IF PEAK 455 KC

WHERE NO VOLTAGE READINGS ARE SHOWN AT SOCKET PRONGS, IT INDICATES ZERO VOLTAGE READINGS AT SOCKET PRONGS. IT IS THE SAME FOR ALL VOLTAGE READINGS. CAPACITY VALUES ARE IN MICROFARADS.


CODE	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
C1	10	10 MEGOHM	R1	10	10 MEGOHM
C2	10	10 MEGOHM	R2	10	10 MEGOHM
C3	10	10 MEGOHM	R3	10	10 MEGOHM
C4	10	10 MEGOHM	R4	10	10 MEGOHM
C5	10	10 MEGOHM	R5	10	10 MEGOHM
C6	10	10 MEGOHM	R6	10	10 MEGOHM
C7	10	10 MEGOHM	R7	10	10 MEGOHM
C8	10	10 MEGOHM	R8	10	10 MEGOHM
C9	10	10 MEGOHM	R9	10	10 MEGOHM
C10	10	10 MEGOHM	R10	10	10 MEGOHM
C11	10	10 MEGOHM	R11	10	10 MEGOHM
C12	10	10 MEGOHM	R12	10	10 MEGOHM

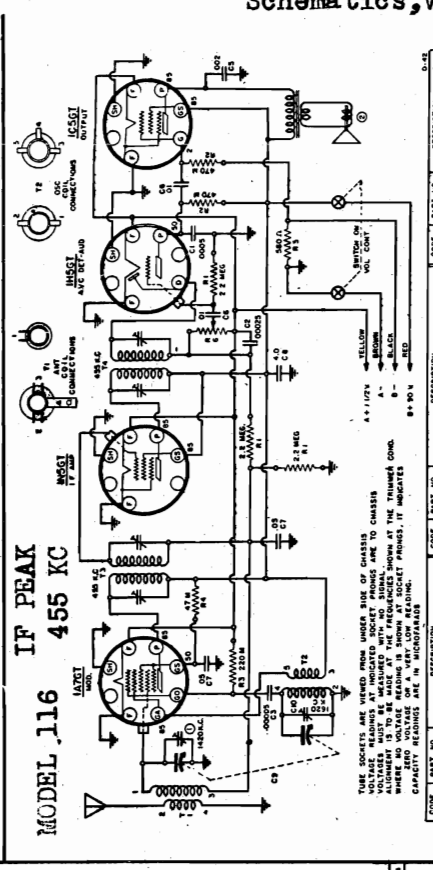

MODEL 116
IF PEAK 455 KC

WHERE NO VOLTAGE READINGS ARE SHOWN AT SOCKET PRONGS, IT INDICATES ZERO VOLTAGE READINGS AT SOCKET PRONGS. IT IS THE SAME FOR ALL VOLTAGE READINGS. CAPACITY VALUES ARE IN MICROFARADS.

CODE	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
C1	10	10 MEGOHM	R1	10	10 MEGOHM
C2	10	10 MEGOHM	R2	10	10 MEGOHM
C3	10	10 MEGOHM	R3	10	10 MEGOHM
C4	10	10 MEGOHM	R4	10	10 MEGOHM
C5	10	10 MEGOHM	R5	10	10 MEGOHM
C6	10	10 MEGOHM	R6	10	10 MEGOHM
C7	10	10 MEGOHM	R7	10	10 MEGOHM
C8	10	10 MEGOHM	R8	10	10 MEGOHM
C9	10	10 MEGOHM	R9	10	10 MEGOHM
C10	10	10 MEGOHM	R10	10	10 MEGOHM
C11	10	10 MEGOHM	R11	10	10 MEGOHM
C12	10	10 MEGOHM	R12	10	10 MEGOHM

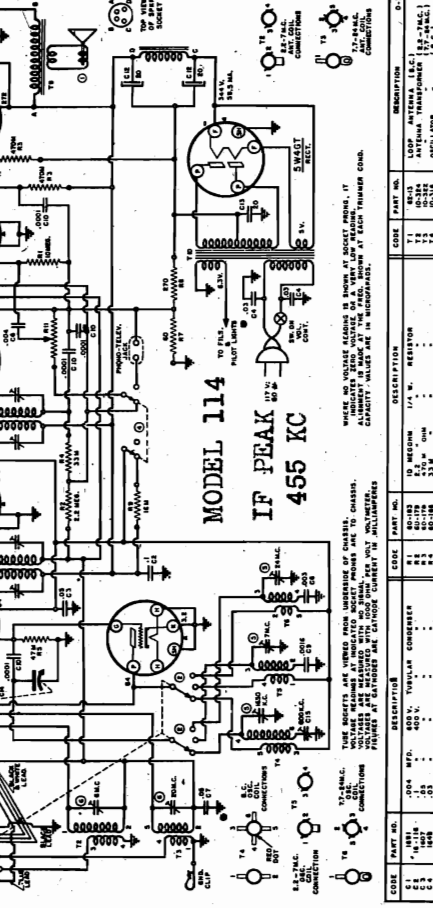

MODEL 114
IF PEAK 455 KC

WHERE NO VOLTAGE READINGS ARE SHOWN AT SOCKET PRONGS, IT INDICATES ZERO VOLTAGE READINGS AT SOCKET PRONGS. IT IS THE SAME FOR ALL VOLTAGE READINGS. CAPACITY VALUES ARE IN MICROFARADS.

CODE	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
C1	10	10 MEGOHM	R1	10	10 MEGOHM
C2	10	10 MEGOHM	R2	10	10 MEGOHM
C3	10	10 MEGOHM	R3	10	10 MEGOHM
C4	10	10 MEGOHM	R4	10	10 MEGOHM
C5	10	10 MEGOHM	R5	10	10 MEGOHM
C6	10	10 MEGOHM	R6	10	10 MEGOHM
C7	10	10 MEGOHM	R7	10	10 MEGOHM
C8	10	10 MEGOHM	R8	10	10 MEGOHM
C9	10	10 MEGOHM	R9	10	10 MEGOHM
C10	10	10 MEGOHM	R10	10	10 MEGOHM
C11	10	10 MEGOHM	R11	10	10 MEGOHM
C12	10	10 MEGOHM	R12	10	10 MEGOHM

Schematics, Socket Trimmers, Voltage Alignment

AUTOCRAT RADIO CO.

MODELS 121, 125
MODEL 123

CODE	PART NO.	DESCRIPTION
61	1M87	.05 WFD. 400V. TUBULAR CONDENSER
62	1M120	.015 WFD. 200 V.
63	1M121	.015 WFD. 200 V.
64	1M122	.015 WFD. 200 V.
65	1M123	.015 WFD. 200 V.
66	1M124	.015 WFD. 200 V.
67	1M125	.015 WFD. 200 V.
68	1M126	.015 WFD. 200 V.
69	1M127	.015 WFD. 200 V.
70	1M128	.015 WFD. 200 V.
71	1M129	.015 WFD. 200 V.
72	1M130	.015 WFD. 200 V.
73	1M131	.015 WFD. 200 V.
74	1M132	.015 WFD. 200 V.
75	1M133	.015 WFD. 200 V.
76	1M134	.015 WFD. 200 V.
77	1M135	.015 WFD. 200 V.
78	1M136	.015 WFD. 200 V.
79	1M137	.015 WFD. 200 V.
80	1M138	.015 WFD. 200 V.
81	1M139	.015 WFD. 200 V.
82	1M140	.015 WFD. 200 V.
83	1M141	.015 WFD. 200 V.
84	1M142	.015 WFD. 200 V.
85	1M143	.015 WFD. 200 V.
86	1M144	.015 WFD. 200 V.
87	1M145	.015 WFD. 200 V.
88	1M146	.015 WFD. 200 V.
89	1M147	.015 WFD. 200 V.
90	1M148	.015 WFD. 200 V.
91	1M149	.015 WFD. 200 V.
92	1M150	.015 WFD. 200 V.
93	1M151	.015 WFD. 200 V.
94	1M152	.015 WFD. 200 V.
95	1M153	.015 WFD. 200 V.
96	1M154	.015 WFD. 200 V.
97	1M155	.015 WFD. 200 V.
98	1M156	.015 WFD. 200 V.
99	1M157	.015 WFD. 200 V.
100	1M158	.015 WFD. 200 V.
101	1M159	.015 WFD. 200 V.
102	1M160	.015 WFD. 200 V.
103	1M161	.015 WFD. 200 V.
104	1M162	.015 WFD. 200 V.
105	1M163	.015 WFD. 200 V.
106	1M164	.015 WFD. 200 V.
107	1M165	.015 WFD. 200 V.
108	1M166	.015 WFD. 200 V.
109	1M167	.015 WFD. 200 V.
110	1M168	.015 WFD. 200 V.
111	1M169	.015 WFD. 200 V.
112	1M170	.015 WFD. 200 V.
113	1M171	.015 WFD. 200 V.
114	1M172	.015 WFD. 200 V.
115	1M173	.015 WFD. 200 V.
116	1M174	.015 WFD. 200 V.
117	1M175	.015 WFD. 200 V.
118	1M176	.015 WFD. 200 V.
119	1M177	.015 WFD. 200 V.
120	1M178	.015 WFD. 200 V.
121	1M179	.015 WFD. 200 V.
122	1M180	.015 WFD. 200 V.
123	1M181	.015 WFD. 200 V.
124	1M182	.015 WFD. 200 V.
125	1M183	.015 WFD. 200 V.
126	1M184	.015 WFD. 200 V.
127	1M185	.015 WFD. 200 V.
128	1M186	.015 WFD. 200 V.
129	1M187	.015 WFD. 200 V.
130	1M188	.015 WFD. 200 V.
131	1M189	.015 WFD. 200 V.
132	1M190	.015 WFD. 200 V.
133	1M191	.015 WFD. 200 V.
134	1M192	.015 WFD. 200 V.
135	1M193	.015 WFD. 200 V.
136	1M194	.015 WFD. 200 V.
137	1M195	.015 WFD. 200 V.
138	1M196	.015 WFD. 200 V.
139	1M197	.015 WFD. 200 V.
140	1M198	.015 WFD. 200 V.
141	1M199	.015 WFD. 200 V.
142	1M200	.015 WFD. 200 V.


CODE	PART NO.	DESCRIPTION
10	65-1175	10 RESISTOR
11	65-1176	11 RESISTOR
12	65-1177	12 RESISTOR
13	65-1178	13 RESISTOR
14	65-1179	14 RESISTOR
15	65-1180	15 RESISTOR
16	65-1181	16 RESISTOR
17	65-1182	17 RESISTOR
18	65-1183	18 RESISTOR
19	65-1184	19 RESISTOR
20	65-1185	20 RESISTOR
21	65-1186	21 RESISTOR
22	65-1187	22 RESISTOR
23	65-1188	23 RESISTOR
24	65-1189	24 RESISTOR
25	65-1190	25 RESISTOR
26	65-1191	26 RESISTOR
27	65-1192	27 RESISTOR
28	65-1193	28 RESISTOR
29	65-1194	29 RESISTOR
30	65-1195	30 RESISTOR
31	65-1196	31 RESISTOR
32	65-1197	32 RESISTOR
33	65-1198	33 RESISTOR
34	65-1199	34 RESISTOR
35	65-1200	35 RESISTOR
36	65-1201	36 RESISTOR
37	65-1202	37 RESISTOR
38	65-1203	38 RESISTOR
39	65-1204	39 RESISTOR
40	65-1205	40 RESISTOR
41	65-1206	41 RESISTOR
42	65-1207	42 RESISTOR
43	65-1208	43 RESISTOR
44	65-1209	44 RESISTOR
45	65-1210	45 RESISTOR
46	65-1211	46 RESISTOR
47	65-1212	47 RESISTOR
48	65-1213	48 RESISTOR
49	65-1214	49 RESISTOR
50	65-1215	50 RESISTOR
51	65-1216	51 RESISTOR
52	65-1217	52 RESISTOR
53	65-1218	53 RESISTOR
54	65-1219	54 RESISTOR
55	65-1220	55 RESISTOR
56	65-1221	56 RESISTOR
57	65-1222	57 RESISTOR
58	65-1223	58 RESISTOR
59	65-1224	59 RESISTOR
60	65-1225	60 RESISTOR
61	65-1226	61 RESISTOR
62	65-1227	62 RESISTOR
63	65-1228	63 RESISTOR
64	65-1229	64 RESISTOR
65	65-1230	65 RESISTOR
66	65-1231	66 RESISTOR
67	65-1232	67 RESISTOR
68	65-1233	68 RESISTOR
69	65-1234	69 RESISTOR
70	65-1235	70 RESISTOR
71	65-1236	71 RESISTOR
72	65-1237	72 RESISTOR
73	65-1238	73 RESISTOR
74	65-1239	74 RESISTOR
75	65-1240	75 RESISTOR
76	65-1241	76 RESISTOR
77	65-1242	77 RESISTOR
78	65-1243	78 RESISTOR
79	65-1244	79 RESISTOR
80	65-1245	80 RESISTOR
81	65-1246	81 RESISTOR
82	65-1247	82 RESISTOR
83	65-1248	83 RESISTOR
84	65-1249	84 RESISTOR
85	65-1250	85 RESISTOR
86	65-1251	86 RESISTOR
87	65-1252	87 RESISTOR
88	65-1253	88 RESISTOR
89	65-1254	89 RESISTOR
90	65-1255	90 RESISTOR
91	65-1256	91 RESISTOR
92	65-1257	92 RESISTOR
93	65-1258	93 RESISTOR
94	65-1259	94 RESISTOR
95	65-1260	95 RESISTOR
96	65-1261	96 RESISTOR
97	65-1262	97 RESISTOR
98	65-1263	98 RESISTOR
99	65-1264	99 RESISTOR
100	65-1265	100 RESISTOR
101	65-1266	101 RESISTOR
102	65-1267	102 RESISTOR
103	65-1268	103 RESISTOR
104	65-1269	104 RESISTOR
105	65-1270	105 RESISTOR
106	65-1271	106 RESISTOR
107	65-1272	107 RESISTOR
108	65-1273	108 RESISTOR
109	65-1274	109 RESISTOR
110	65-1275	110 RESISTOR
111	65-1276	111 RESISTOR
112	65-1277	112 RESISTOR
113	65-1278	113 RESISTOR
114	65-1279	114 RESISTOR
115	65-1280	115 RESISTOR
116	65-1281	116 RESISTOR
117	65-1282	117 RESISTOR
118	65-1283	118 RESISTOR
119	65-1284	119 RESISTOR
120	65-1285	120 RESISTOR
121	65-1286	121 RESISTOR
122	65-1287	122 RESISTOR
123	65-1288	123 RESISTOR
124	65-1289	124 RESISTOR
125	65-1290	125 RESISTOR
126	65-1291	126 RESISTOR
127	65-1292	127 RESISTOR
128	65-1293	128 RESISTOR
129	65-1294	129 RESISTOR
130	65-1295	130 RESISTOR
131	65-1296	131 RESISTOR
132	65-1297	132 RESISTOR
133	65-1298	133 RESISTOR
134	65-1299	134 RESISTOR
135	65-1300	135 RESISTOR
136	65-1301	136 RESISTOR
137	65-1302	137 RESISTOR
138	65-1303	138 RESISTOR
139	65-1304	139 RESISTOR
140	65-1305	140 RESISTOR
141	65-1306	141 RESISTOR
142	65-1307	142 RESISTOR
143	65-1308	143 RESISTOR
144	65-1309	144 RESISTOR
145	65-1310	145 RESISTOR
146	65-1311	146 RESISTOR
147	65-1312	147 RESISTOR
148	65-1313	148 RESISTOR
149	65-1314	149 RESISTOR
150	65-1315	150 RESISTOR
151	65-1316	151 RESISTOR
152	65-1317	152 RESISTOR
153	65-1318	153 RESISTOR
154	65-1319	154 RESISTOR
155	65-1320	155 RESISTOR
156	65-1321	156 RESISTOR
157	65-1322	157 RESISTOR
158	65-1323	158 RESISTOR
159	65-1324	159 RESISTOR
160	65-1325	160 RESISTOR
161	65-1326	161 RESISTOR
162	65-1327	162 RESISTOR
163	65-1328	163 RESISTOR
164	65-1329	164 RESISTOR
165	65-1330	165 RESISTOR
166	65-1331	166 RESISTOR
167	65-1332	167 RESISTOR
168	65-1333	168 RESISTOR
169	65-1334	169 RESISTOR
170	65-1335	170 RESISTOR
171	65-1336	171 RESISTOR
172	65-1337	172 RESISTOR
173	65-1338	173 RESISTOR
174	65-1339	174 RESISTOR
175	65-1340	175 RESISTOR
176	65-1341	176 RESISTOR
177	65-1342	177 RESISTOR
178	65-1343	178 RESISTOR
179	65-1344	179 RESISTOR
180	65-1345	180 RESISTOR
181	65-1346	181 RESISTOR
182	65-1347	182 RESISTOR
183	65-1348	183 RESISTOR
184	65-1349	184 RESISTOR
185	65-1350	185 RESISTOR
186	65-1351	186 RESISTOR
187	65-1352	187 RESISTOR
188	65-1353	188 RESISTOR
189	65-1354	189 RESISTOR
190	65-1355	190 RESISTOR
191	65-1356	191 RESISTOR
192	65-1357	192 RESISTOR
193	65-1358	193 RESISTOR
194	65-1359	194 RESISTOR
195	65-1360	195 RESISTOR
196	65-1361	196 RESISTOR
197	65-1362	197 RESISTOR
198	65-1363	198 RESISTOR
199	65-1364	199 RESISTOR
200	65-1365	200 RESISTOR

CODE	PART NO.	DESCRIPTION
101	65-1366	101 RESISTOR
102	65-1367	102 RESISTOR
103	65-1368	103 RESISTOR
104	65-1369	104 RESISTOR
105	65-1370	105 RESISTOR
106	65-1371	106 RESISTOR
107	65-1372	107 RESISTOR
108	65-1373	108 RESISTOR
109	65-1374	109 RESISTOR
110	65-1375	110 RESISTOR
111	65-1376	111 RESISTOR
112	65-1377	112 RESISTOR
113	65-1378	113 RESISTOR
114	65-1379	114 RESISTOR
115	65-1380	115 RESISTOR
116	65-1381	116 RESISTOR
117	65-1382	117 RESISTOR
118	65-1383	118 RESISTOR
119	65-1384	119 RESISTOR
120	65-1385	120 RESISTOR
121	65-1386	121 RESISTOR
122	65-1387	122 RESISTOR
123	65-1388	123 RESISTOR
124	65-1389	124 RESISTOR
125	65-1390	125 RESISTOR
126	65-1391	126 RESISTOR
127	65-1392	127 RESISTOR
128	65-1393	128 RESISTOR
129	65-1394	129 RESISTOR
130	65-1395	130 RESISTOR
131	65-1396	131 RESISTOR
132	65-1397	132 RESISTOR
133	65-1398	133 RESISTOR
134	65-1399	134 RESISTOR
135	65-1400	135 RESISTOR
136	65-1401	136 RESISTOR
137	65-1402	137 RESISTOR
138	65-1403	138 RESISTOR
139	65-1404	139 RESISTOR
140	65-1405	140 RESISTOR
141	65-1406	141 RESISTOR
142	65-1407	142 RESISTOR
143	65-1408	143 RESISTOR
144	65-1409	144 RESISTOR
145	65-1410	145 RESISTOR
146	65-1411	146 RESISTOR
147	65-1412	147 RESISTOR
148	65-1413	148 RESISTOR
149	65-1414	149 RESISTOR
150	65-1415	150 RESISTOR
151	65-1416	151 RESISTOR
152	65-1417	152 RESISTOR
153	65-1418	153 RESISTOR
154	65-1419	154 RESISTOR
155	65-1420	155 RESISTOR
156	65-1421	156 RESISTOR
157	65-1422	157 RESISTOR
158	65-1423	158 RESISTOR

AUTOCRAT RADIO CO.

MODEL 359

Schematic, Voltage, Socket Trimmers, Alignment, Notes

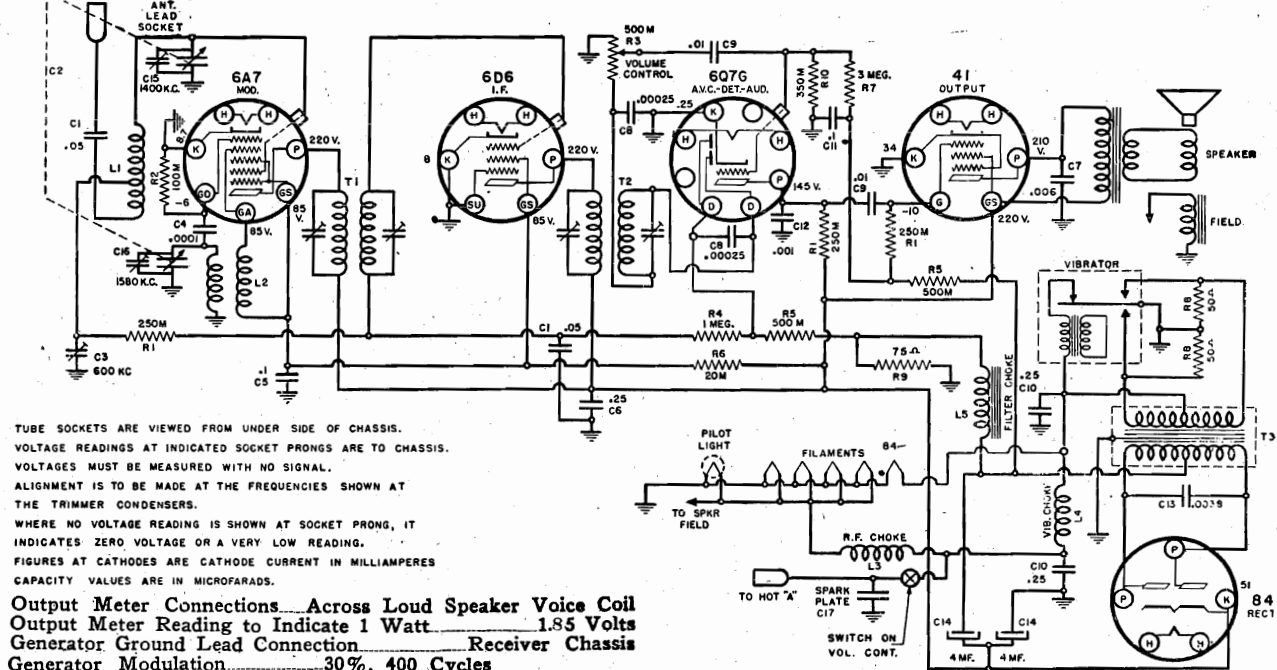


TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS.
 VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS.
 VOLTAGES MUST BE MEASURED WITH NO SIGNAL.
 ALIGNMENT IS TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMER CONDENSERS.
 WHERE NO VOLTAGE READING IS SHOWN AT SOCKET PRONG, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING.
 FIGURES AT CATHODES ARE CATHODE CURRENT IN MILLIAMPERES
 CAPACITY VALUES ARE IN MICROFARADS.

Output Meter Connections Across Loud Speaker Voice Coil
 Output Meter Reading to Indicate 1 Watt 1.85 Volts
 Generator Ground Lead Connection Receiver Chassis
 Generator Modulation 30%, 400 Cycles
 Position of Volume Control Fully On

Position of Variable	Generator Frequency	Dummy Antenna	Generator Connection	Trimmer Adjustments (In Order Shown)	Trimmer Function
Closed	456 KC	.1 mfd.	6A7 Grid	T2, T1	I. F.
Fully Open	1580 KC	.0002 mfd.	Antenna Conn.	C16	Oscillator Trimmer
1400 KC	1400 KC	.0002 mfd.	Antenna Conn.	C15	Antenna Trimmer
600 KC	600 KC	.0002 mfd.	Antenna Conn.	C3	Antenna Padder

The variable condenser should be at 600 k.c. for antenna adjustment.
 The alignment procedure should be repeated in the original order, step by step, to insure greater accuracy. A final adjustment of antenna padder condenser C3 is always made after the receiver is installed in the car, in order to match the car antenna.


Always keep the output power from the generator at its lowest possible value to prevent the A.V.C. of the receiver from interfering with accurate alignment.

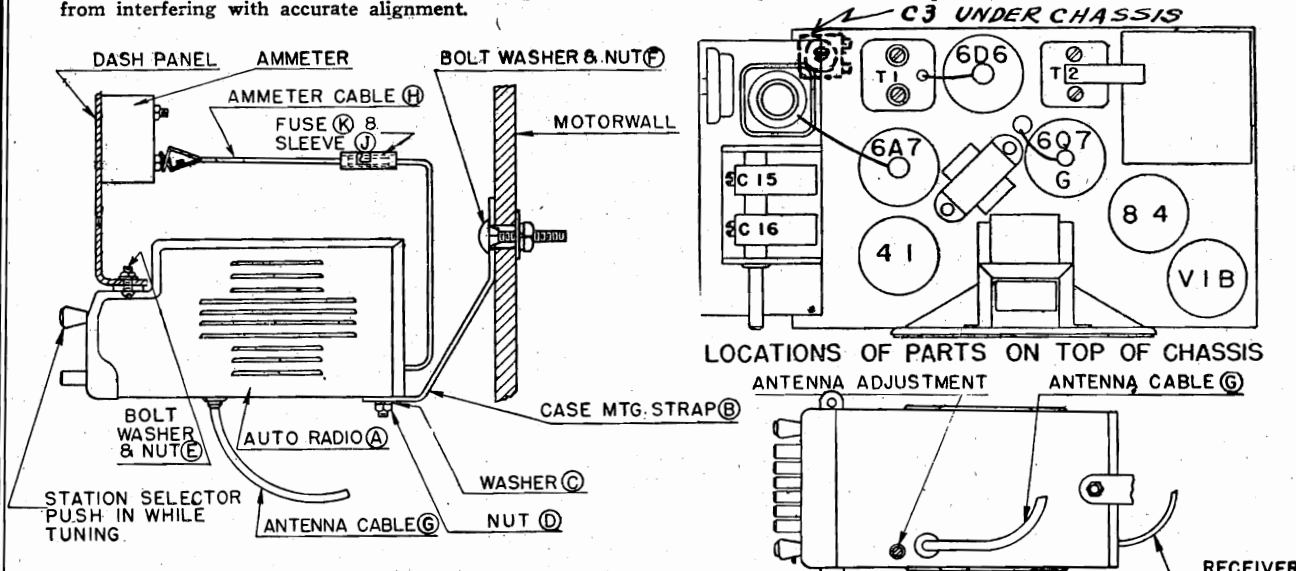

If an antenna was located coming from the corner post of the car, it will probably have an inner wire covered with the metal braid. (If it has a plug at its end, cut off the plug). Scrape clean and solder the white wire of the receiver's antenna lead to the inner wire of the car antenna lead. Be certain these inner wires do not at any time touch the outer shield. (See Fig. 5.)

After the connection is cleaned and connected, cover the joint carefully with tape. (See Fig. 6.)

Connect the pigtail of the receiver's antenna wire to the pigtail braid of the car's antenna lead-in. Wrap pig-tails and solder together using rosin core solder. **IMPORTANT**—Make certain when bolting soldered pigtail ends to car that the section is scraped clean and a good chassis ground. (See Fig. 7.)

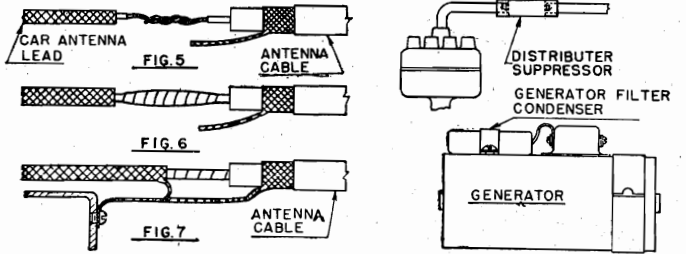




MODELS P43, P45
 MODEL P57
 MODEL P72

AUTOMATIC RADIO MFG. CO., INC.

Socket Layouts

MODELS 402, 403, 404, 405, 406, 408

MODELS 442, 443, 446 Tuner Data

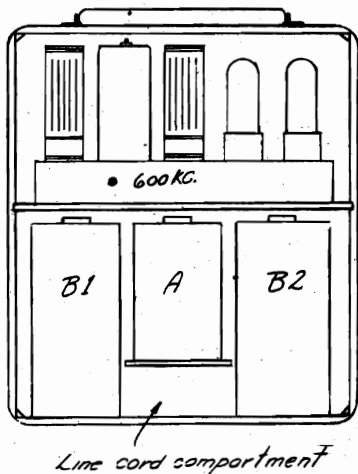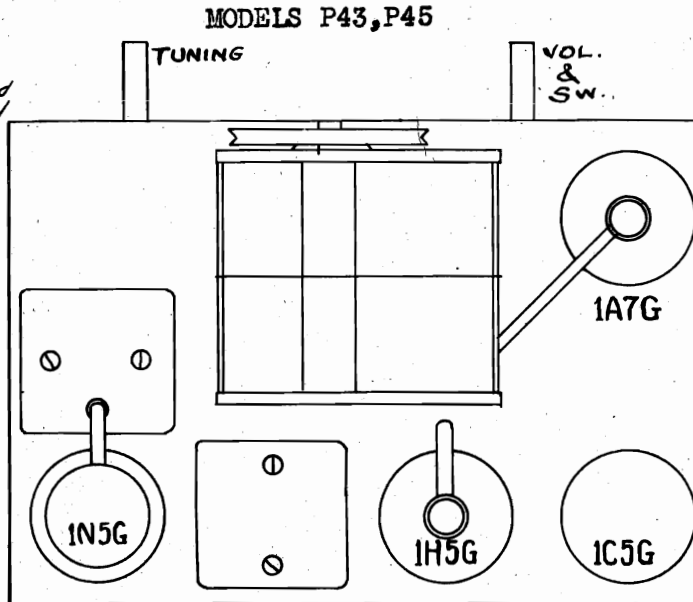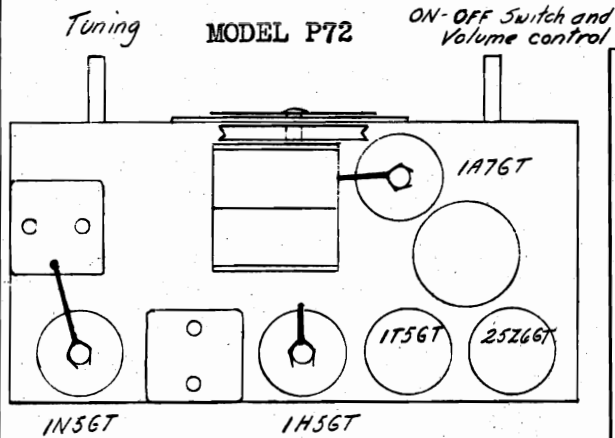


PUSH-BUTTON LINE-UP MODELS 442, 443, 446

To adjust push-buttons to desired stations:

1. Press second button from right and tune in manually the one of the four desired stations having the lowest number of kilocycles (nearest right hand end of tuning dial). Note its program.
2. Press third button from right with volume control set to full volume, insert screwdriver blade into slot of large screw in corresponding hole at rear of set directly behind this button, and rotate one turn or two in either direction until same station is heard at maximum volume, then adjust small screw in same hole until greatest volume and best quality are obtained.
3. Adjust fourth button in the same manner to the desired station with the next higher kilocycle reading (next station to the left on the manual tuning dial).
4. Repeat this procedure for buttons 5 and 6.

In some cases it may be desirable to make a slight final readjustment on all four buttons some time after the original setting, to compensate for changes due to temperature and climatic conditions.

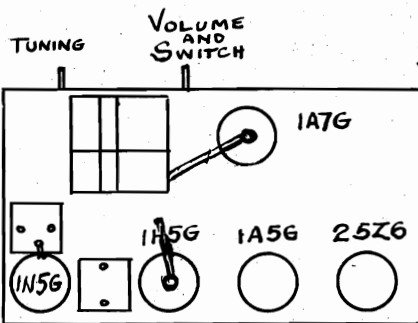

MODEL P57


PUSH-BUTTON DATA MODELS 402, 403, 404, 405, 406, 408

1. Loosen all buttons by turning them counter-clockwise.
2. Locate a desired station by manual tuning.
3. Adjust one button to this station by pushing button in as far as it will go, keeping the station tuned in, then release.
4. When button returns to original position, tighten it by turning clockwise. Station is now tuned in permanently on this button.
5. Repeat operations 2, 3 and 4 on each succeeding button until all have been adjusted to stations desired.

In some cases it may be desirable to make a slight final readjustment on all four buttons some time after the original setting to compensate for changes due to temperature and climatic conditions.

CAUTION: In setting up push buttons, for consistent reception, be sure the adjustments are made to the local station on a network broadcast, and that a weaker, distant station with the same program is not selected.


PUSH-BUTTON DATA MODELS 442, 443, 446

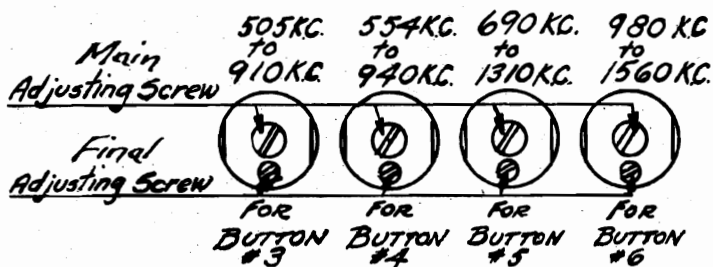

NOTE: To adjust to desired station, press in corresponding button directly in front. Turn main adjusting screw to obtain selected station, then turn final adjusting screw to obtain best clarity and volume. Do not turn volume control on full while making adjustments.


AUTOMATIC RADIO MFG. CO., INC.

MODELS M-66, M-77
 MODELS 939, 949
 MODELS 975, 979, 988
 Schematics

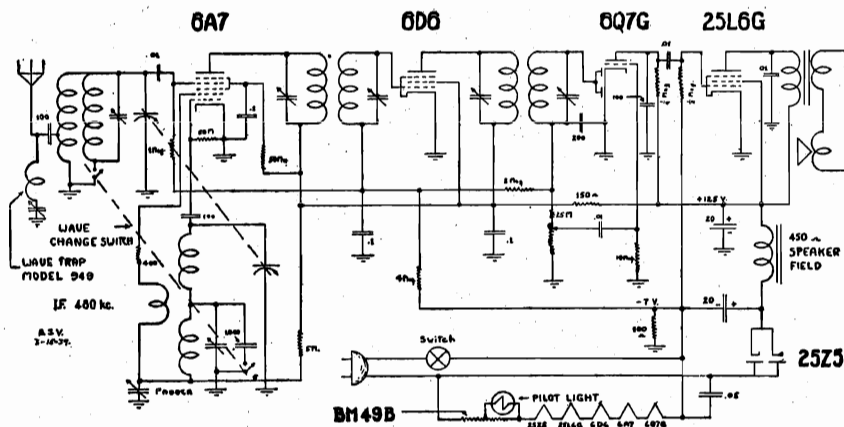


Models
 939 and 949

6A7- Converter
 6D6- I. F.
 6Q7G- 2nd Det-AVC-1st AF
 25L6G- Power
 25Z5- Rect.

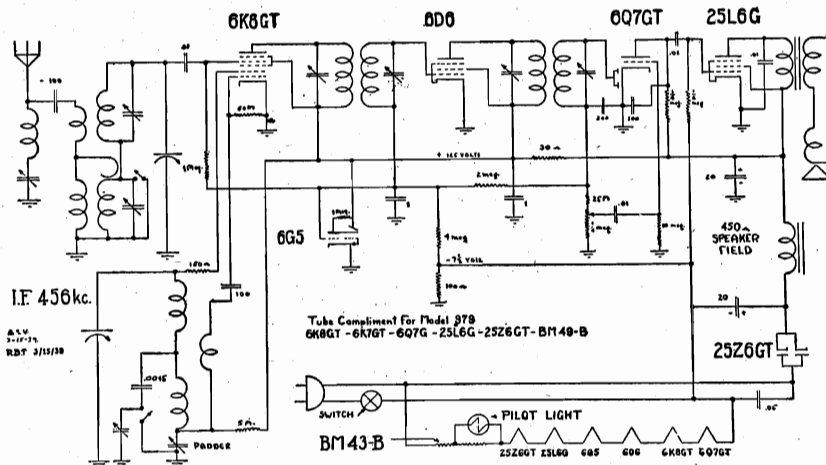

Models
 975
 979
 988

6K8GT- Converter
 6D6- I.F.
 6Q7GT- 2nd Det-AVC-1st AF
 25L6G- Power
 25Z6GT- Rect.

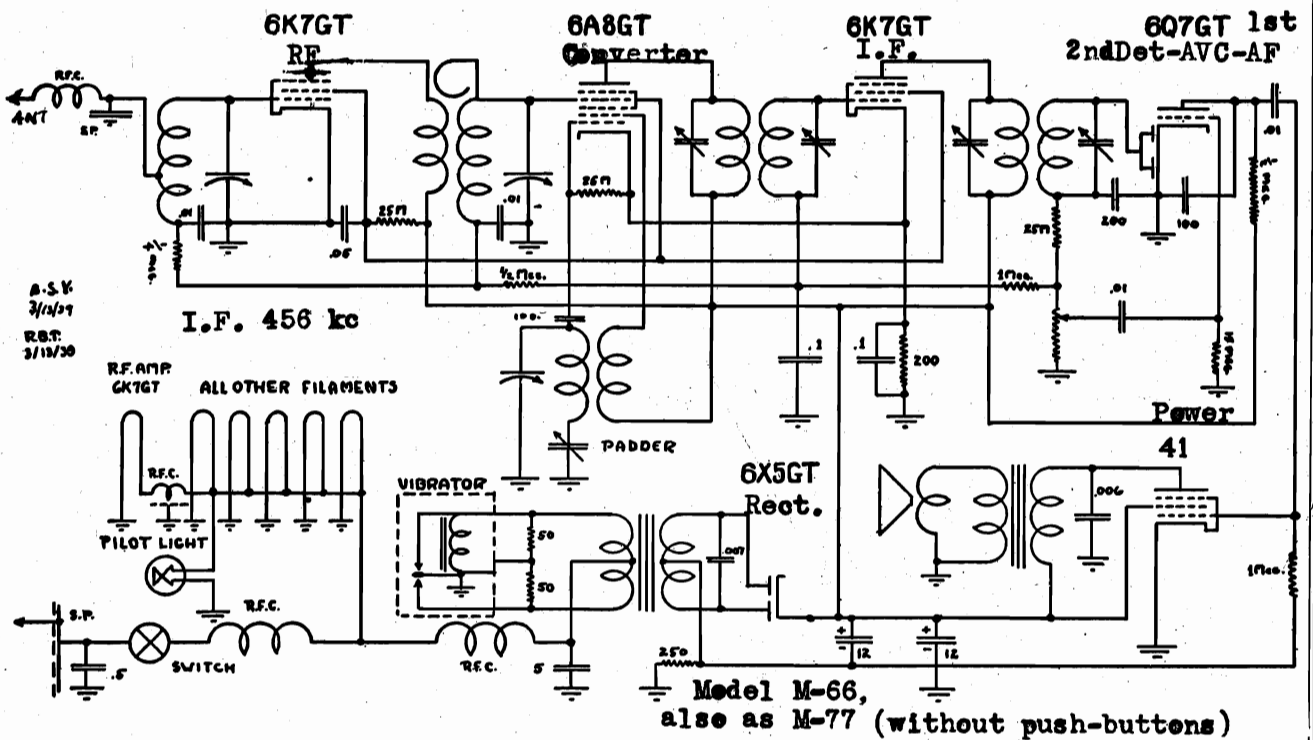

Model M-66,
 also as M-77 (without push-buttons)


MODELS M-66, M-77
 MODELS 400, 401
 MODELS 402, 403, 406
 MODELS 404, 405, 408

AUTOMATIC RADIO MFG. CO., INC.


MODELS 440 to 444, 446
 MODELS 448,
 450, 452, 454
 MODEL 480
 Socket Layouts

TUBE LOCATION CHART —


TUBE LOCATION — MODEL 480

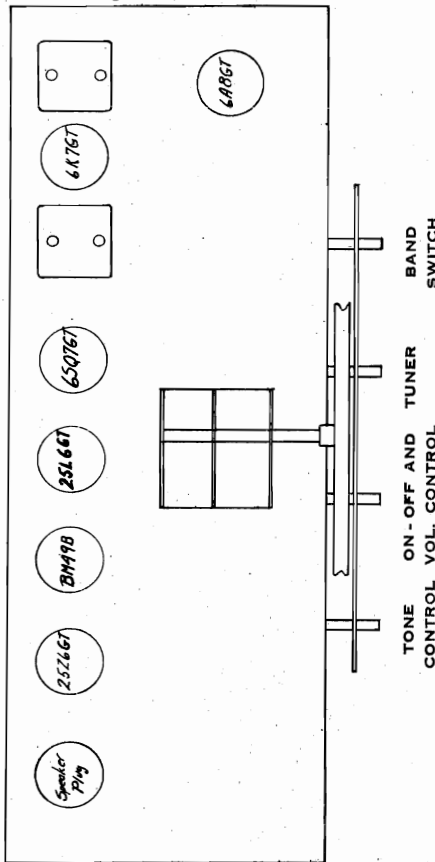


TUBE LOCATION CHART — MODELS 404-405-408

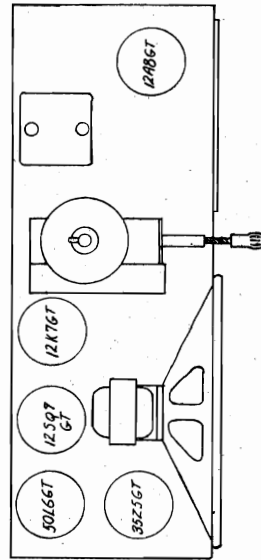


MODELS M66 & M77
 VOLUME PUSHBUTTONS MANUAL

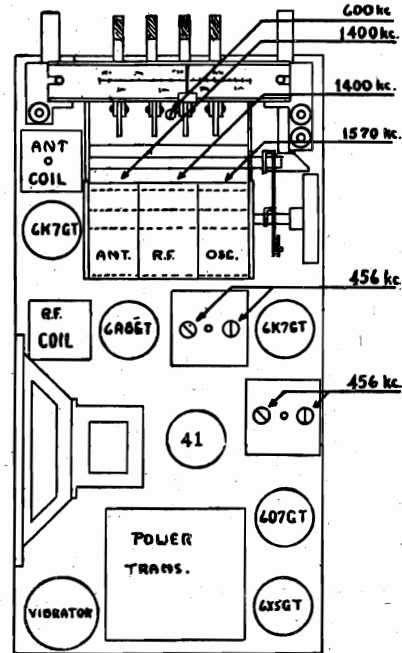


TUBE LOCATION CHART — MODELS 400-401

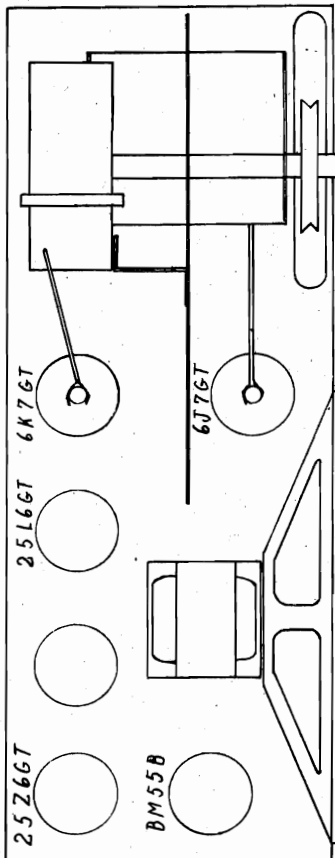

TUBE LOCATION — MODELS 440-441-442-443-444-446

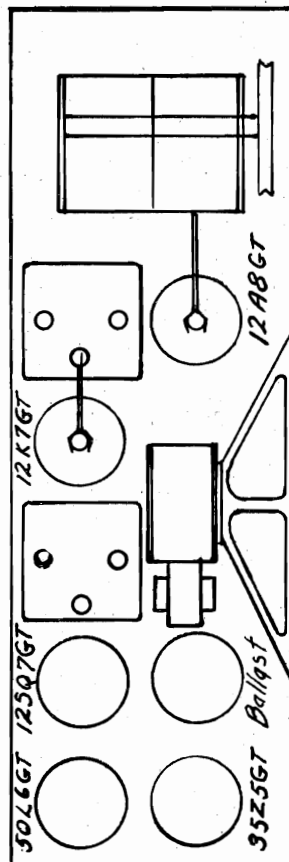

TUBE LOCATION — MODELS 448-450-452-454

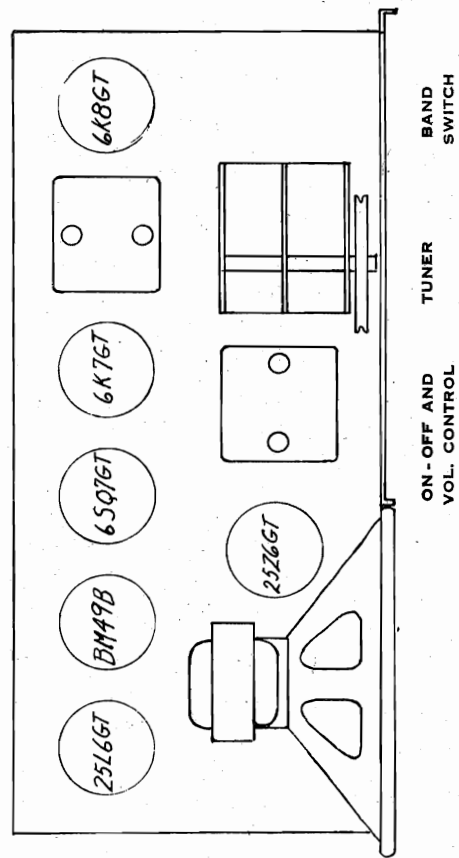

MODELS 402 to 406, 408

MODELS 440, 441, 444 AUTOMATIC RADIO MFG. CO., INC.

MODELS 442, 443, 446



MODEL 480

Schematics

MODELS 402-403-

404-405-406-408


IF PEAK 456 KC

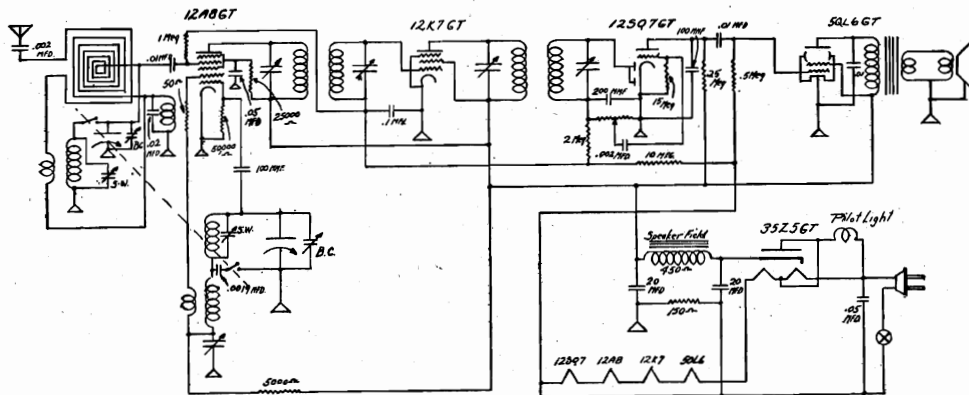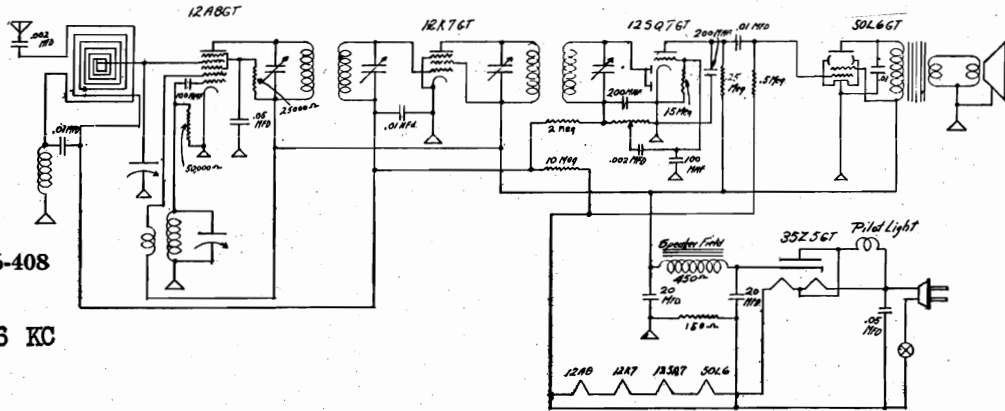

MODELS

440-441-444


IF PEAK 456 KC

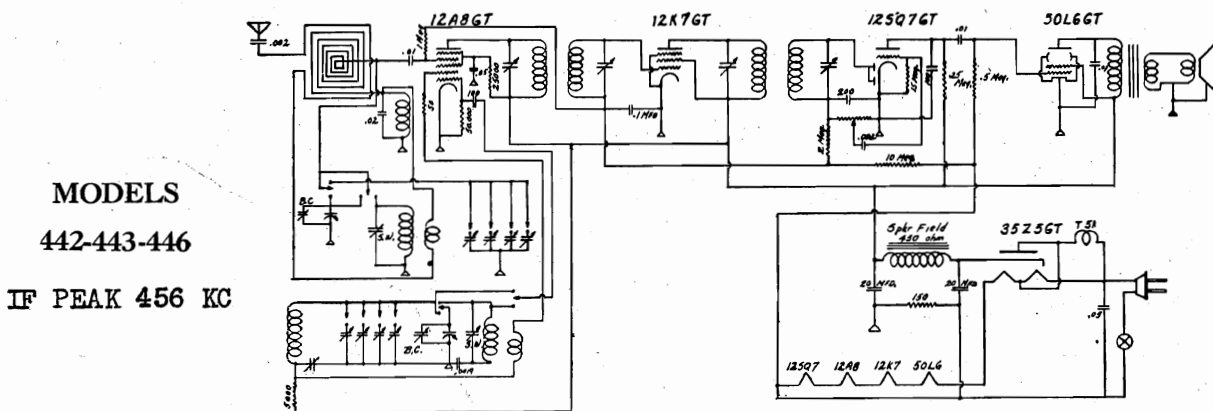

MODELS

442-443-446

IF PEAK 456 KC

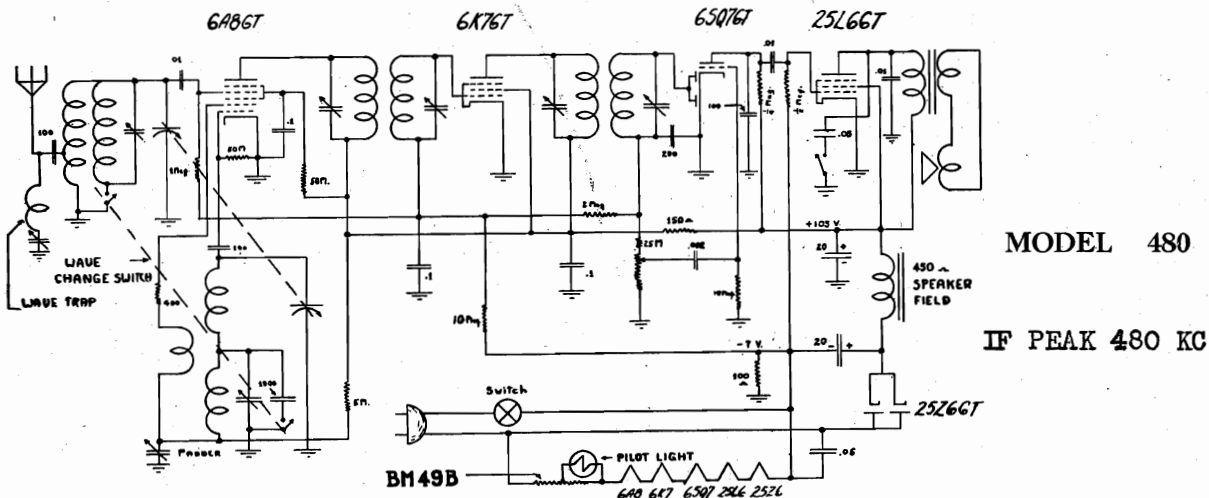








MODEL 480

IF PEAK 480 KC

MODELS 432,434A
MODEL 436
Schematics, Socket


AUTOMATIC RADIO MFG. CO., INC.

MODEL 420
MODEL 430

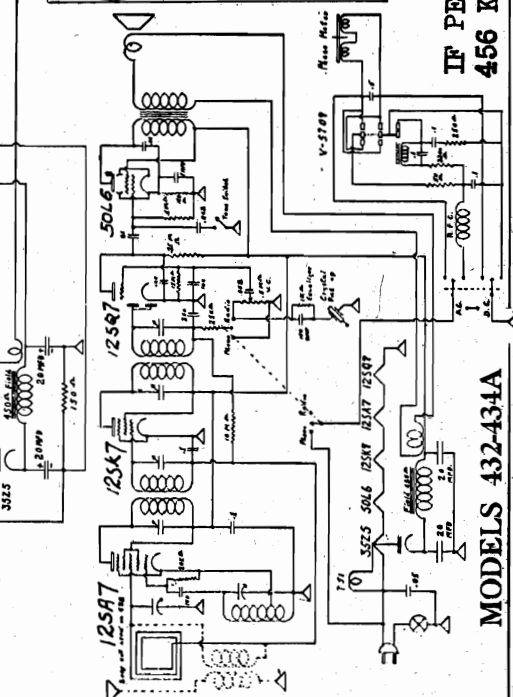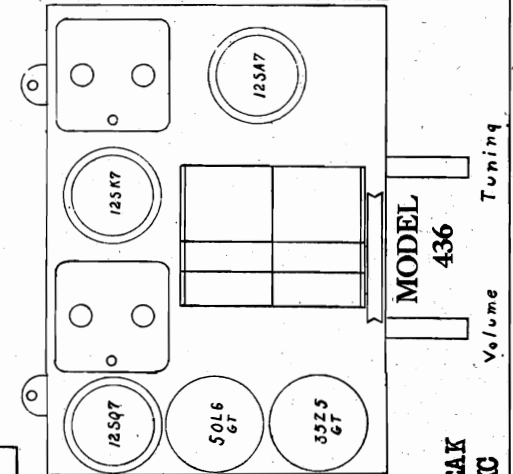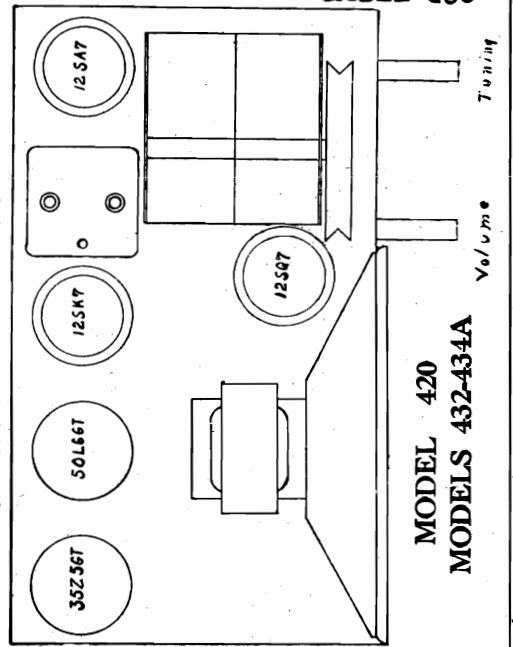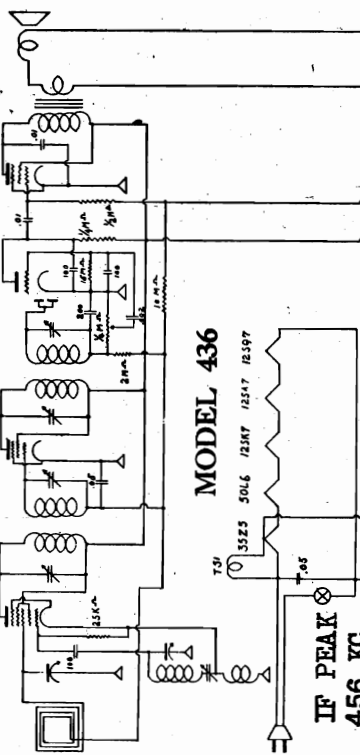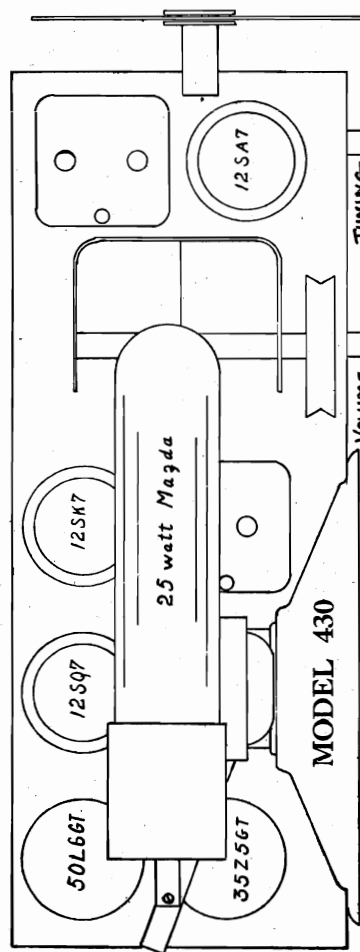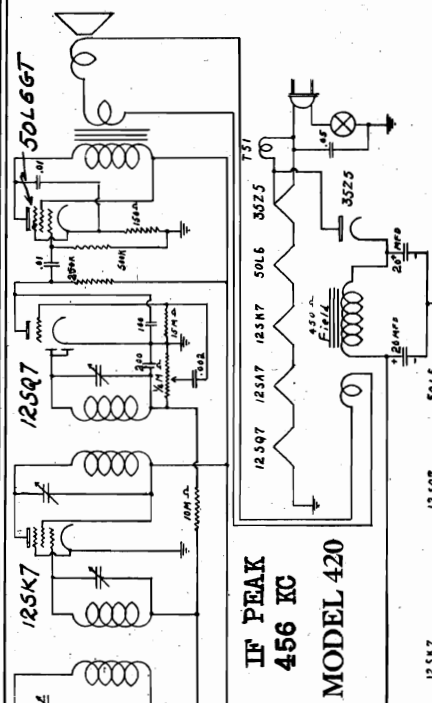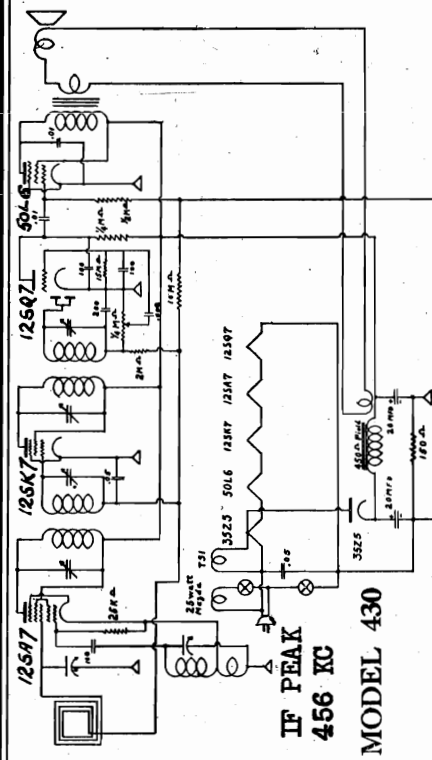

MODEL 911
Schematic, Alignment
Trimmers

AUTOMATIC RADIO MFG. CO., INC.

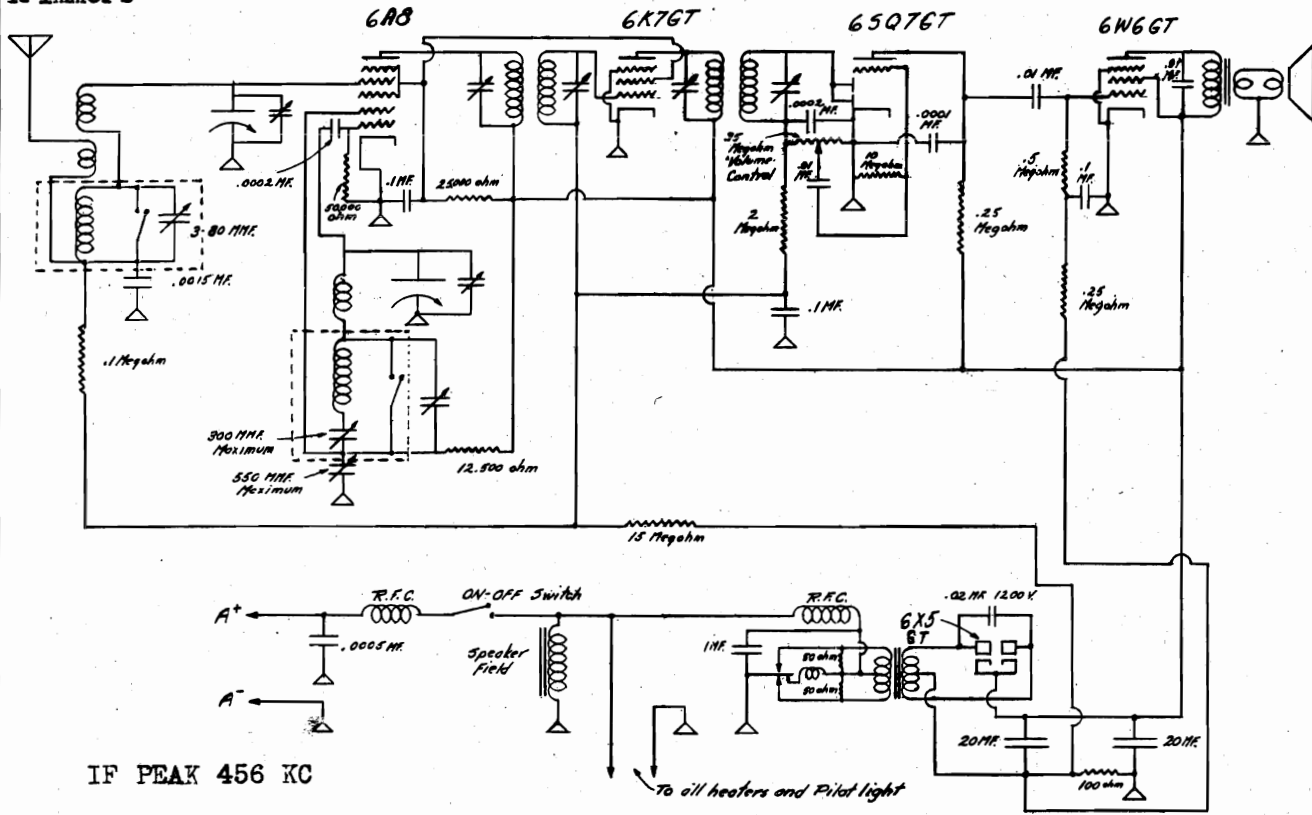

IF PEAK 456 KC

△ = Chassis


ALIGNMENT AND TRIMMER LOCATIONS

IF. Connect signal lead at 456 KC to the 6A8 control grid. Connect output meter across secondary of speaker output transformer. With weakest signal necessary to obtain .5 volt deflection on the output meter, peak the trimmers on the first and second IF transformers.

RF. Align intermediate band first. Follow procedure carefully. Connect a 200 mmf. condenser in series with the signal lead to the antenna terminal of the receiver. Turn the band switch counter-clockwise to the intermediate band position. Adjust oscillator trimmer located at the rear of the variable condenser, to 1560 KC with the variable condenser set at mechanical zero. Pad lower section of the dual padder, located under the composite coil, to 600 KC. Trim antenna section (front) of the variable condenser at 1400 KC.

Turn wave switch to the clockwise or long wave position. Adjust oscillator trimmer mounted on the wave switch to 346 KC with the variable condenser set at mechanical zero. Pad upper section of the dual padder at 149 KC. Adjust antenna trimmer to 300 KC through hole on top of the antenna coil.

When installed in an automobile best results will be had on the long wave band if the trimmer is readjusted. Tune in some station near 900 meters; remove the plug located on the right hand side of the receiver; insert a screwdriver into the trimmer condenser slot; and rotate slowly in either direction until best results are obtained.

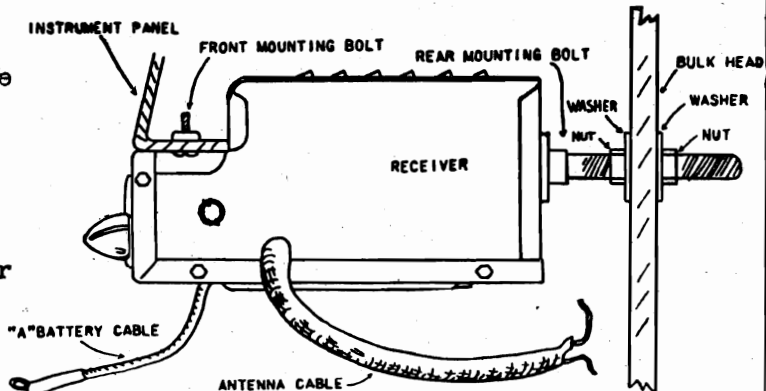



BELMONT RADIO CORP.

MODEL 407
Schematic, Voltage, Socket
Trimmers, Alignment

- RESISTORS**
- R1 1309 200M ohm- $\frac{1}{2}$ w. 20%
 - R2 13018 4M ohm- $\frac{1}{2}$ w. 20%
 - R3 130268 2 megohm- $\frac{1}{2}$ w. 20%
 - R4 13038 100M ohm- $\frac{1}{2}$ w. 20%
 - R5 13020 1 megohm volume control
 - R6 101173 1 megohm- $\frac{1}{2}$ w. 20%
 - R7 13037 750 ohm- $\frac{1}{2}$ w. 20%
 - R8 13037 750 ohm- $\frac{1}{2}$ w. 20%
 - R9 13038 2 megohm- $\frac{1}{2}$ w. 20%
 - R10 13070 500 ohm- $\frac{1}{2}$ w. 10%
- CONDENSERS**
- C 2 gang, variable condenser .05 x 200 v. 25%
 - C1 102108 .05 x 200 v. 25%
 - C2 10022 R. F. Trimmer on Gang
 - C3 12912 Oscillator Trimmer on Gang
 - C4 .0025 mica-20%
 - C5 1009 200 v. 25%
 - C6 1006 25 x 20%
 - C7 12912 .0025 Mica 20%
 - C8 10025 .002 x 600 v. 25%
 - C9 12912 -.00025 Mica 20%
 - C10 10078 .01 x 200 v. 25%
 - C11 11975 10. mfd. x 25 v. lytic
 - C12 10025 .002 x 600 v. 25%



PARTS

- T1 Loop Antenna Complete
- T2 Loop Antenna Coil
- T3 Loop Antenna Coil
- T4 Output I. F. Coil
- T5 Speaker with output transformer
- S1 D.P.S.T. On-off switch on volume control

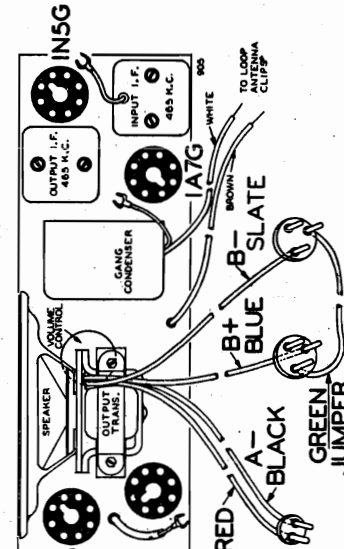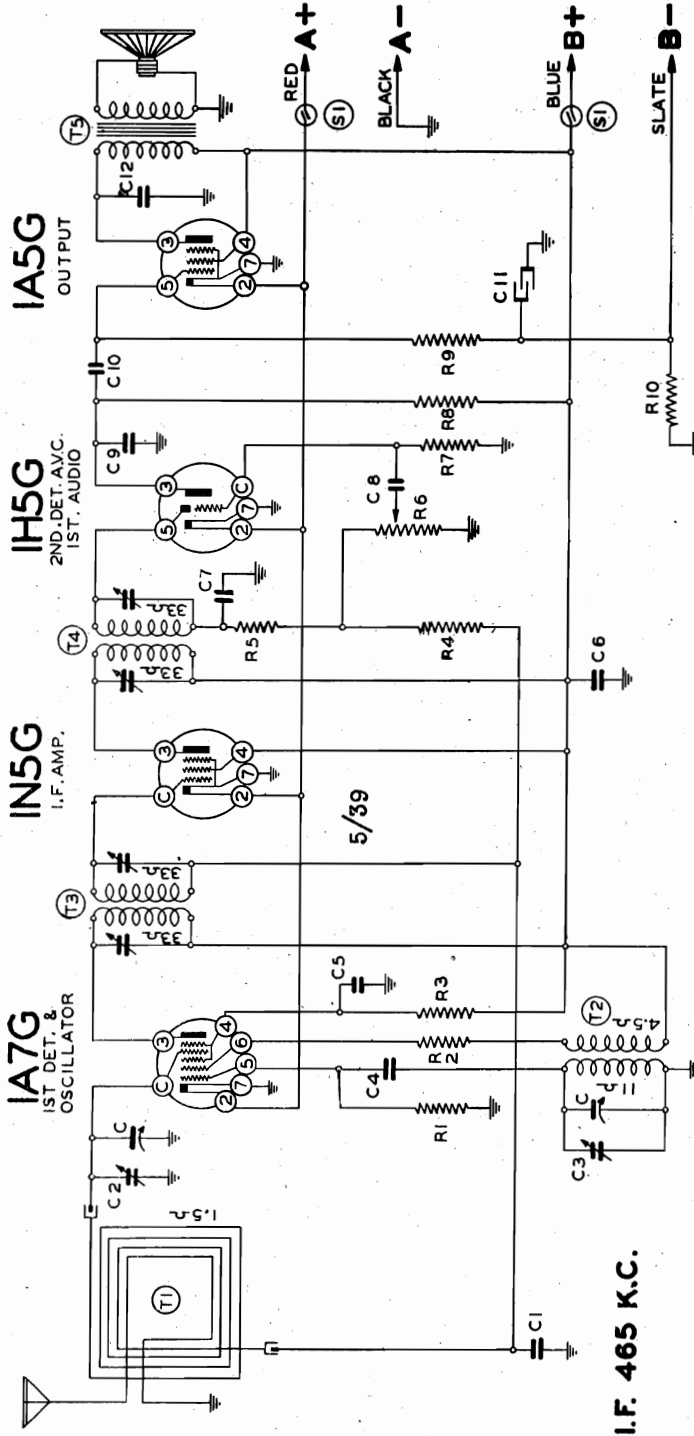

When aligning IF and Osc. - disconnect loop and connect 1 meg. resistor bet. loop osc. at 1650 Kc-chassis. Trim osc. at 1650 Kc. To align loop, reconnect same and remove 1 meg. resistor. Trim at 1400 KC.

At right-
Top View
of
Chassis

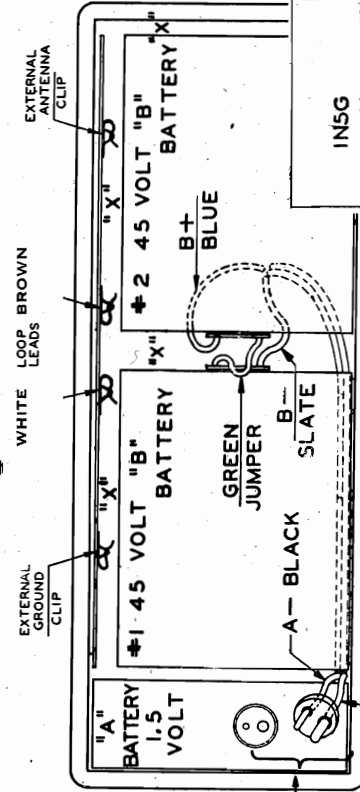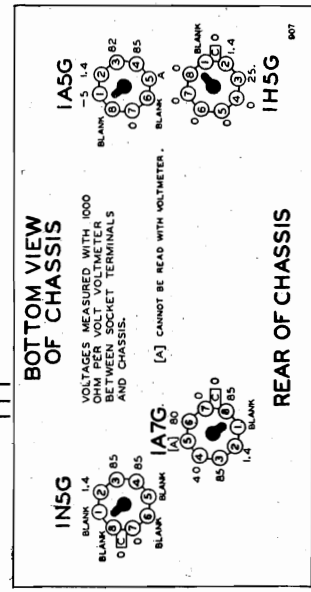

NOTE: The "A" battery should be placed in the cabinet so that the plug-in socket on the top of the battery is nearer to the side of the cabinet which is faced down than to the side of the cabinet which is facing up. Also, the "A" battery should be pushed all the way into the cabinet so that it fits between the left end of the radio chassis and the side of the cabinet.

BELMONT RADIO CORP.


MODEL 411, Series A
Schematic, Voltage
Socket, Trimmers

RESISTORS

R1	1309	200M ohm-1/4 w.-20%
R2	13018	4M ohm-1/4 w.-20%
R3	130208	40M ohm-1/4 w.-20%
R4	13038	2 megohm-1/4 w.-20%
R5	13020	1 megohm-1/4 w.-20%
R6	101173	1 megohm volume control
R7	130257	5 megohm-1/4 w.-25%
R8	13037	750M ohm-1/4 w.-20%
R9	13038	2 megohm-1/4 w.-20%
R10	13070	500 ohm-1/4 w.-10%
R11	130232	25M ohm-1/4 w.-10%

CONDENSERS



C	102109B	2 gang variable condenser
C1	05	x 200 v.-25%
C2	R.F.	Trimmer on Gang
C3		Oscillator Trimmer on Gang
C4	0.0025	mica-20%
C5	0.05	x 200 v.-25%
C6	0.25	x 200 v.-20%
C7	0.0025	mica-20%
C8	0.002	x 600 v.-25%
C9	0.0025	mica-20%
C10	0.01	x 200 v.-25%
C11	10 mfd.	x 25 v. v. lytic
C12	0.002	x 600 v.-25%
C13	0.01	x 200 v.-25%
C14	0.01	x 200 v.-25%
C15	L.W.	Antenna Trimmer
C16	L.W.	Oscillator Trimmer
C17	L.W.	Oscillator Padder

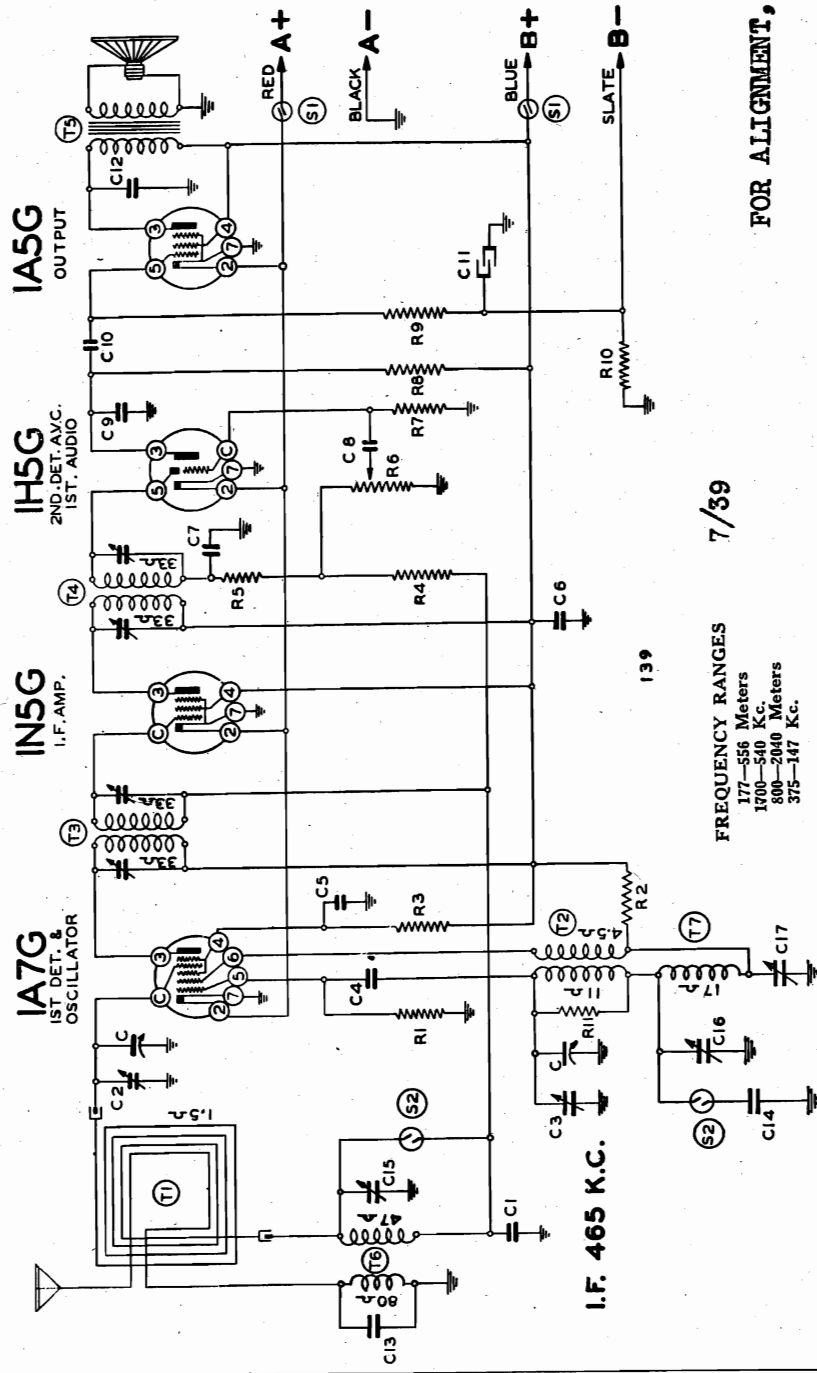

FOR ALIGNMENT, SEE INDEX

PARTS

T1	111141	Loop Antenna Complete
T2	110121	B.C. Oscillator Coil
T3	108151	Input I.F. Coil
T4	108152	Output I.F. Coil
T5	114165	5" Speaker with output transformer
T6	111140	L.W. Antenna Coil
T7	110129	L.W. Oscillator Coil
S1		D.P.S.T. On-off switch on volume control
S2	12570B	Band Switch

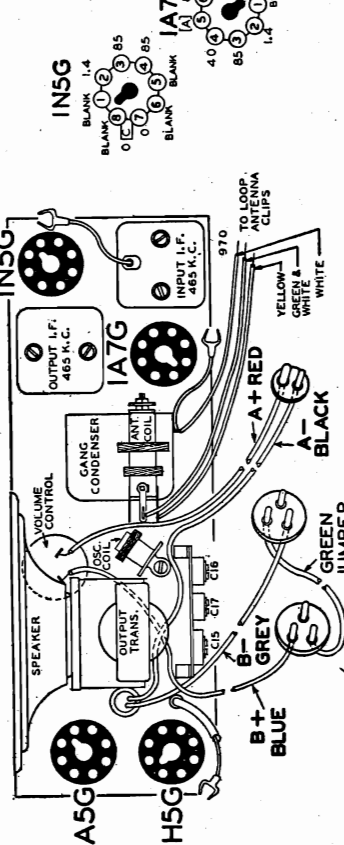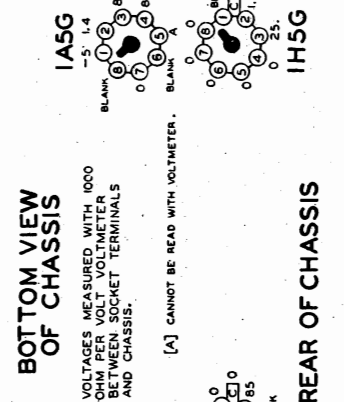

MODEL 411, Series A
MODEL 510, Series A
Alignment

BELMONT RADIO CORP.

The alignment procedures for Belmont Model 411, Series A, and Model 510, Series A, are given below. Note "C" for Model 411 applies also to Models 407, 635, Series A, and 636, Series A and B.

MODEL 411 (Series A)

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Band Switch	Condenser Setting	Variable Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Grid of 1A7G Tube	"M.W."	Rotor full open (Plates out of mesh)	Rotor full open (Plates out of mesh)	Four trimmers on top (See Fig. 1)	Output and input I. F.	(See Note "A") Adjust to maximum output
MEDIUM WAVE BAND	1700 Kc.	.1 MFD.	Grid of 1A7G Tube	"M.W."	Rotor full open (Plates out of mesh)	Rotor full open (Plates out of mesh)	Trimmer (C3) front section of gang (See Fig. 4)	Medium Wave Oscillator	(See Note "A") Adjust to maximum output
	1400 Kc.		See Note "C"	"M.W."	Set dial at 1400 Kc.	Set dial at 1400 Kc.	Trimmer (C2) rear section of gang (See Fig. 4)	Antenna	(See Note "B") Adjust to maximum output
LONG WAVE BAND	375 Kc.		See Note "C"	"L.W."	Rotor full open (Plates out of mesh)	Rotor full open (Plates out of mesh)	Trimmer (C16)	Long Wave Oscillator	Adjust to maximum output
	375 Kc.		See Note "C"	"L.W."	Rotor full open (Plates out of mesh)	Rotor full open (Plates out of mesh)	Trimmer (C15)	Antenna	Adjust to maximum output
	150 Kc.		See Note "C"	"L.W."	Set dial at 150 Kc.	Set dial at 150 Kc.	Trimmer (C17)	Long Wave Osc. Pac.	Adjust to maximum rock dial. (See note "D")

TEST FREQUENCIES USED:

I. F.	Kilocycles
465	645.1
150	2000
375	800
1400	214
1700	177

NOTE "A"—A 1 megohm resistor must be connected between the two loop antenna leads from the chassis when aligning the I. F. transformers and setting the oscillator trimmer, (C3). The loop antenna must be disconnected from the chassis.

NOTE "B"—Remove the 1 megohm resistor from the loop antenna leads; mount the chassis and the loop antenna in the cabinet, connect the loop antenna to the chassis. Adjust trimmer (C2). (See note "C").

NOTE "C"—Lay the output lead from the signal generator in back of the loop antenna. Turn up the output of the generator, picking up the energy in the loop antenna without any electrical connection from the signal generator.

NOTE "D"—Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.

MODEL 510 (Series A)

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Iron Cores (Dial Setting)	Condenser Setting	Variable Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Terminal "P" (See Fig. 4)	All the way out	Iron Cores	Iron Cores	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Terminal "B" (See Fig. 4)	All the way out	Iron Cores	Iron Cores	Two trimmers on top (See Fig. 1)	Input I. F.	Adjust to maximum output
BROAD-CAST BAND	1720 Kc.	.1 MFD.	Terminal "P" (See Fig. 4)	All the way out	Iron Cores	Iron Cores	Trimmer (C6)	Oscillator	Adjust to maximum output
	1720 Kc.	200 MMF.	Terminal "A" (See Fig. 4)	All the way out	Iron Cores	Iron Cores	Trimmer (C3)	Antenna	Adjust to maximum output (See Note "A")
	1400 Kc.	200 MMF.	Terminal "A" (See Fig. 4)	Turn Dial to 1400 Kc.	Turn Dial to 1400 Kc.	Turn Dial to 1400 Kc.	Adjust position of antenna coil up or down (see Fig. 4)	Antenna Coil Adjustment	Adjust to maximum output
	1720 Kc.	200 MMF.	Terminal "A" (See Fig. 4)	Turn Dial to 1720 Kc.	Turn Dial to 1720 Kc.	Turn Dial to 1720 Kc.	Adjust trimmer (C3) (See Fig. 3)	Antenna	Check for tracking (See Note "B")


NOTE "A"—The antenna coil assembly is made so that it is movable up or down. When making the adjustment as given in the alignment procedure move the coil assembly very slowly. It can be moved up or down by rotating one edge of the blade of a screwdriver in the hole and engaging the blade in the gear teeth of the coil form.

NOTE "B"—After the antenna coil has been tracked at 1400 Kc. it is necessary to check the antenna coil (C3) adjustment again at 1720 Kc. If an appreciable change in trimmer adjustment is made the coil is in track. If the trimmer requires considerable change it will be necessary to again adjust the position of the antenna coil at 1400 Kc. These two adjustments should be tried several times until no change of trimmer adjustment is required at 1720 Kc.

Connect -B of radio chassis to ground post of signal generator through .1 mf condenser.

BELMONT RADIO CORP.

MODELS 507, 513, Series A
Serial 211,300 and up
Schematic, Voltage, Trimmers
Socket, Alignment

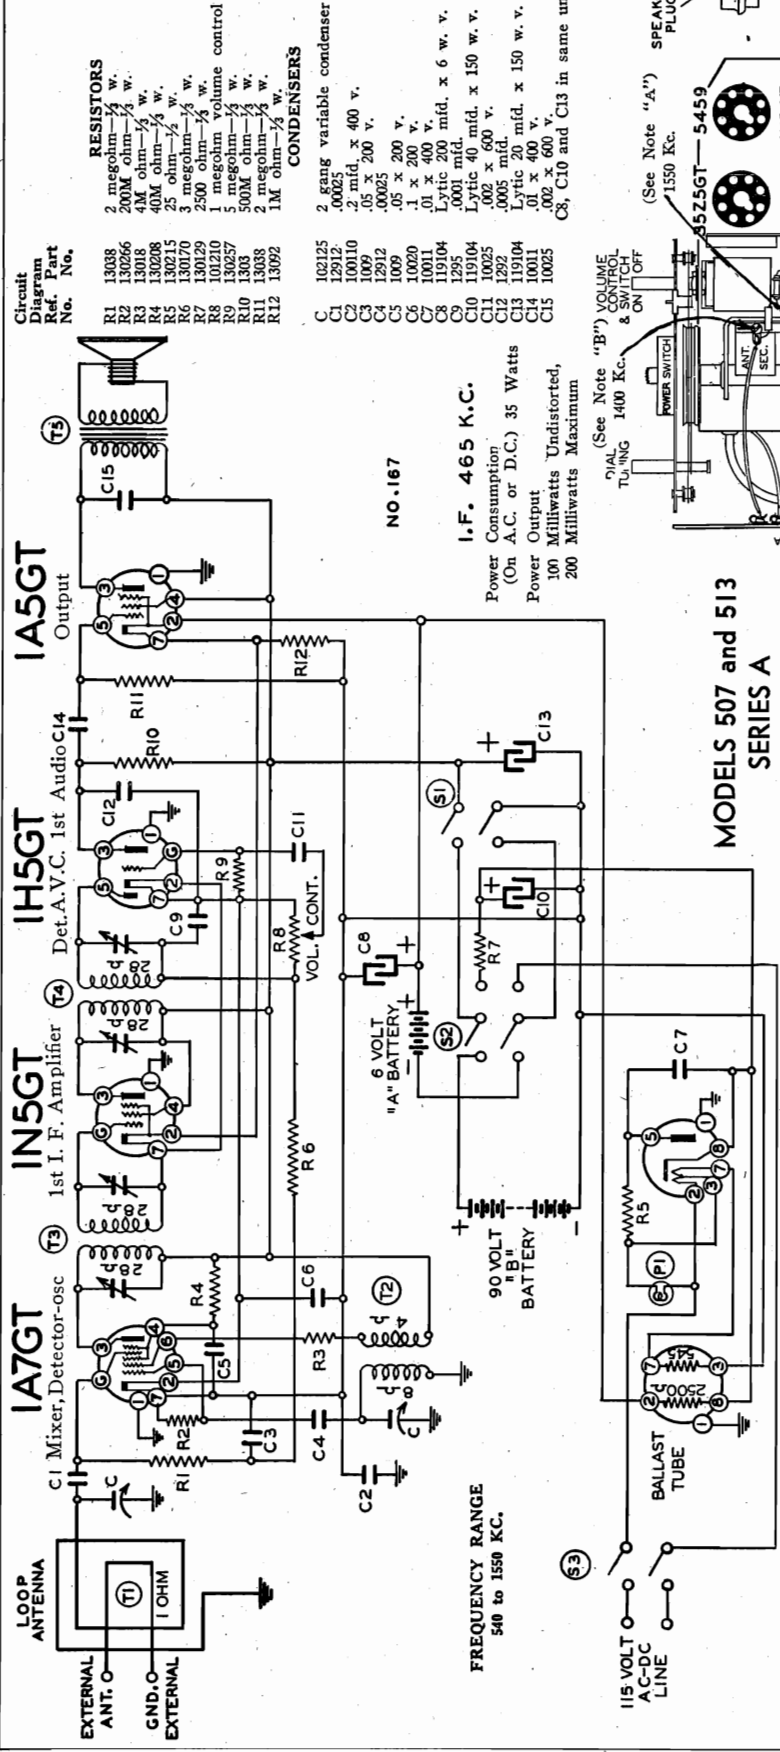

Circuit Diagram Ref. Part No.

R1	13038
R2	130266
R3	13018
R4	130208
R5	130215
R6	130170
R7	130129
R8	101210
R9	130257
R10	1303
R11	13038
R12	13092

RESISTORS

2 megohm	1/2 w.
40M ohm	1/2 w.
40M ohm	1/2 w.
25 ohm	1/2 w.
3 megohm	1/2 w.
2500 ohm	1/2 w.
1 megohm	volume control
5 megohm	1/2 w.
500M ohm	1/2 w.
2 megohm	1/2 w.
1M ohm	1/2 w.


CONDENSERS

2 gang variable condenser
.0025
.5 mid x 400 v.
.0025
.05 x 200 v.
.1 x 400 v.
.01 x 400 v.
.0001 mid. x 6 w. v.
.0001 mid.
.002 x 600 v.
.0005 mid.
.01 x 400 v.
.002 x 600 v.
.01 x 400 v.
.0025
C8, C10 and C13 in same unit

NO. 167

I. F. 465 K.C.

Power Consumption
(On A.C. or D.C.) 35 Watts
Power Output
100 Milliwatts Undistorted,
200 Milliwatts Maximum

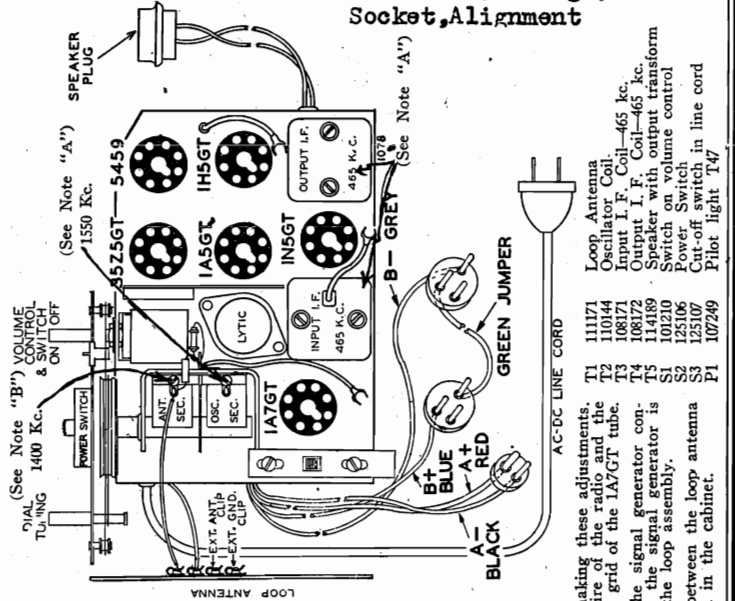

MODELS 507 and 513
SERIES A
(SERIAL No. 211,300 and UP)

Ballast 5459 35Z5GT Rectifier

tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt. All voltages are indicated on the voltage chart.


Resistances of coil windings are indicated in ohms on the schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

The approximate current consumption is as follows:
"A"—50 ma., "B"—8 ma.

ALIGNMENT NOTES

NOTE "A"—The loop antenna need not be connected to the radio when making these adjustments. The ground of the signal generator is connected to the negative "B" wire of the radio and the other lead from the signal generator in series with .1 MFD. dummy to the grid of the IA7GT tube.
NOTE "B"—This adjustment should be made with the ground lead of the signal generator connected to the ground terminal of the loop assembly. The other lead of the signal generator is connected in series with a 200 Mmi. dummy to the antenna terminal of the loop assembly.
It is important when making this adjustment that the same distance between the loop antenna and the chassis be maintained as when the chassis and loop are installed in the cabinet.

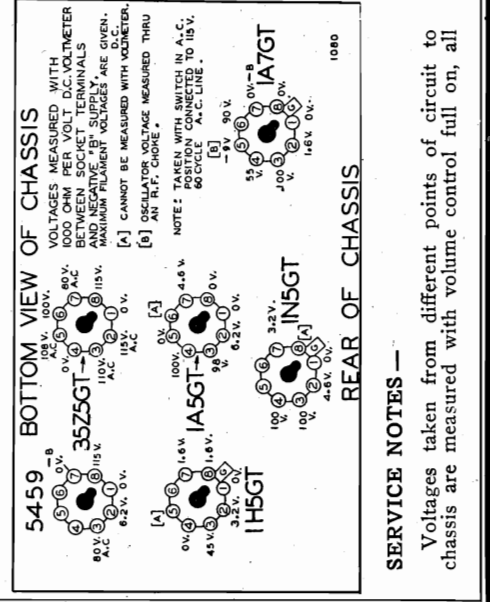

SERVICE NOTES —

Voltages taken from different points of circuit to chassis are measured with volume control full on, all

MODEL 510, Series A
Schematic, Voltage
Socket, Trimmers

BELMONT RADIO CORP.


RESISTORS

R1	130176	20M ohm— $\frac{1}{2}$ w.
R2	130100	150M ohm— $\frac{1}{2}$ w.
R3	130279	1M ohm—1 watt
R4	1304	3 megohm— $\frac{1}{2}$ w.
R5	101196	500M ohm volume control
R6	130293	30 ohm—1 watt
R7	130257	5 megohm— $\frac{1}{2}$ w.
R8	130288	50 ohm—1.5 watt
R9	1302	75M ohm— $\frac{1}{2}$ w.
R10	13011	250M ohm— $\frac{1}{2}$ w.
R11	130166	150 ohm— $\frac{1}{2}$ w.

CONDENSERS

C1	131262	.00001 washer condenser (on Antenna plate)
C2	10022	.05 x 200 v.
C3	124100	Antenna Trimmer
C4	12930	.00005 Mica
C5	10091	.15 x 400 v.
C6	124100	Oscillator Trimmer
C7	10022	.05 x 200 v.
C8	11992	20 mfd. x 150 v. lytic
C9	11992	40 mfd. x 150 v. lytic
C10	10013	.05 x 400 v.
C11	12912	.00025 mica
C12	10025	.002 x 600 v.
C13	1292	.0005 mica
C14	10011	.01 x 400 v.
C15	10011	.01 x 400 v.

C3 and C6 in one unit.
C8 and C9 in one unit.

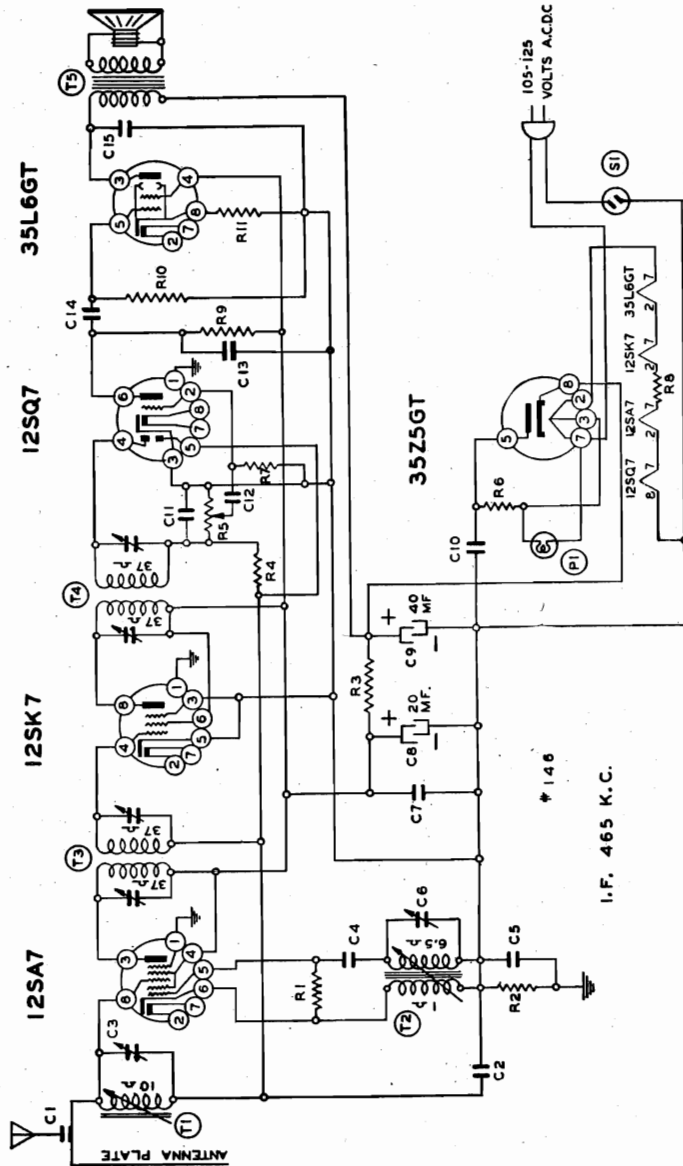

I.F. 465 K.C.

FOR ALIGNMENT, SEE INDEX

PARTS

T1	111136B	Antenna Coil Complete
T2	110126B	Oscillator Coil
T3	108157C	Input I. F. Coil—465 kc.
T4	108157C	Output I. F. Coil—465 kc.
T5	114170	4" P. M. Speaker and Transformer
S1	101196	Off-on switch on volume control
P1	107249	6-8 v. pilot light T-47

BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMETER BETWEEN SOCKET TERMINALS AND B—



A—CANNOT BE READ WITH VOLTMETER
 A—12V. A.C. BETWEEN PINS 2 & 7.
 B—32V. A.C. BETWEEN PINS 2 & 7.
 C—117V. A.C. BETWEEN PINS 2 & 8.
 D—9 VOLTS. OSCILLATOR GRID VOLTAGE SHOULD BE MEASURED WITH AN A.F. CHOKE PLACED IN SERIES WITH THE GRID LEAD DIRECTLY AT PIN 5.



REAR OF CHASSIS

FIG. 3.—BOTTOM VIEW


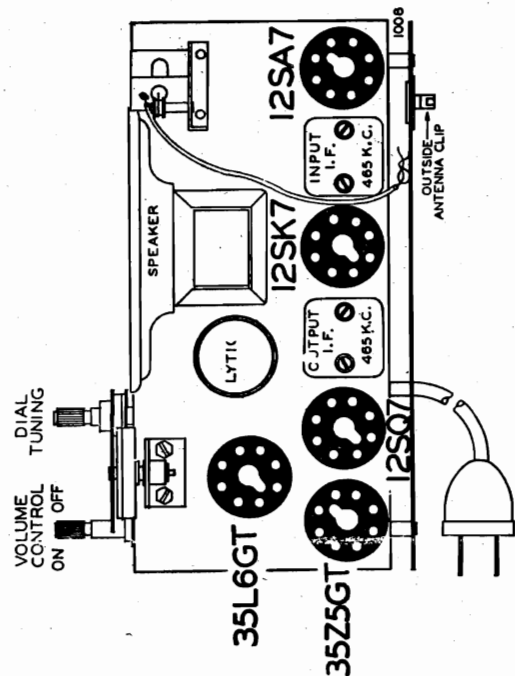



FIG. 1.—TOP VIEW

BELMONT RADIO CORP.


MODEL 511, Series A
Schematic, Voltage
Socket, Alignment

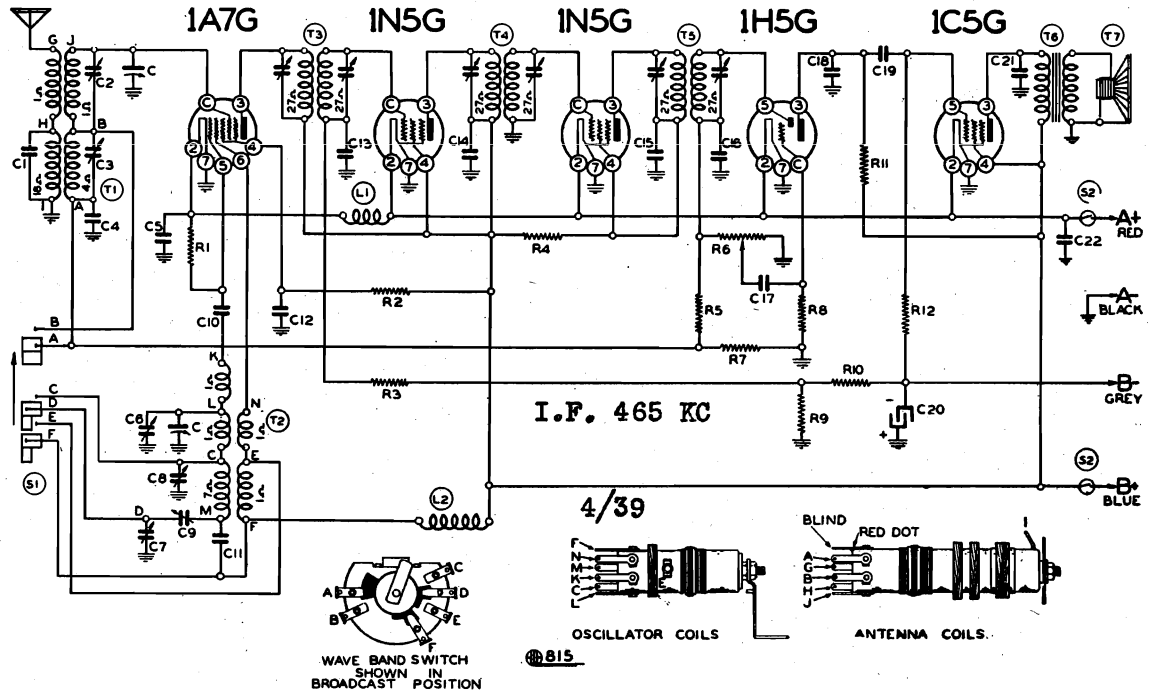

(Conv.) 1A7G BOTTOM VIEW OF CHASSIS



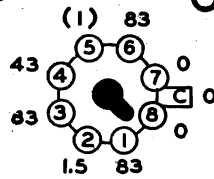


(2nd Det.) 1H5G (AVC-AF)

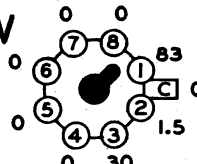

VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMETER BETWEEN SOCKET TERMINALS & CHASSIS.

(1) CANNOT BE READ WITH VOLTMETER.

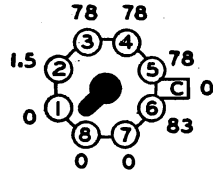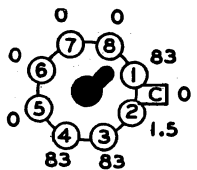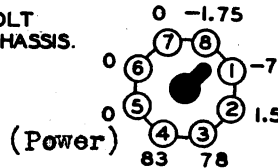

IN5G (I.F.)

IN5G (I.F.)

REAR OF CHASSIS

RESISTORS

- R1 200M ohm-1/2 w.
- R2 50M ohm-1/2 w.
- R3 1 megohm-1/2 w.
- R4 3M ohm-1/2 w
- R5 2 megohm-1/2 w.
- R6 250M ohm-volume control
- R7 4 megohm-1/2 w.
- R8 1 megohm-1/2 w.
- R9 180 ohm-1/2 w.
- R10 450 ohm-1/2 w.
- R11 500M ohm-1/2 w
- R12 1 megohm-1/2 w.

CONDENSERS

- C 2 gang variable condenser
- C1 .0001 mica
- C2 S.W. Antenna Adj. Trimmer
- C3 B.C. Antenna Adj. Trimmer
- C4 .05 x 200 v.
- C5 .25 x 200 v.
- C6 S.W. Osc. Adj. Trimmer on gang
- C7 S.W. Adj. Series pad .003 w. c.
- C8 B.C. Osc. Adj. Trimmer
- C9 B.C. Adj. Series Pad 580 mmf. w. c.
- C10 .0005 mica
- C11 .05 x 200 v.
- C12 .1 x 200 v.
- C13 .05 x 200 v.
- C14 .25 x 200 v
- C15 .1 x 200 v.
- C16 .00025 mica
- C17 .006 x 600 v.
- C18 .0002 mica
- C19 .01 x 400 v.
- C20 20 mid. lytic w. v. 25 v.
- C21 .004 x 600 v.
- C22 .25 x 200 v.

PARTS

- T1 11117 Antenna Coil Complete
- T2 110106 Oscillator Coil Complete
- T3 108133 Input I. F. 465 kc. complete
- T4 108135 Interstage I. F.-465 kc. complete
- T5 108134 Output I.F.-465 kc. complete
- T6 114115 6" P. M. Speaker
- L1 10568 "A" Choke
- L2 1233 R. F. "B" Choke
- S1 12573 Wave Band Switch
- S2 D.P. S.T. Switch on Volume Control
- T7 10569 Output Transformer

ALIGNMENT






- I.F. alignment conventional
- SW- Trim 17 MC; pad 6MC
- BB- Trim osc at 1750 kc
- Trim ant. at 1400 kc
- Pad at 600 kc

MODEL 551B, Series A
Issue B
Schematic, Voltage, Socket
Trimmers, Alignment

BELMONT RADIO CORP.

RESISTORS		CONDENSERS	
13021	20M ohm— $\frac{1}{2}$ w.	2	gang Variable Condens.
R2	100M ohm— $\frac{1}{2}$ w.	.05	x 200 v.—25%
R3	200M ohm— $\frac{1}{2}$ w.	Antenna Section	Trimmer
R4	40M ohm— $\frac{1}{2}$ w.	Oscillator Section	Trimmer
R5	4M ohm— $\frac{1}{2}$ w.	Series Pad	
R6	1 megohm— $\frac{1}{2}$ w.		
R7	1 megohm— $\frac{1}{2}$ w.		
R8	1 megohm— $\frac{1}{2}$ w.		
R9	1 megohm— $\frac{1}{2}$ w.		
R10	1 megohm— $\frac{1}{2}$ w.		
R11	1 megohm— $\frac{1}{2}$ w.		
R12	1 megohm— $\frac{1}{2}$ w.		
R13	1 megohm— $\frac{1}{2}$ w.		
R14	1 megohm— $\frac{1}{2}$ w.		
R15	1 megohm— $\frac{1}{2}$ w.		
R16	1000 ohm— $\frac{1}{2}$ w.		
C1	13021	10289	
C2	13020	1009	
C3	130208	12464	
C4	13071	10070	
C5	13038	10048	
C6	101140	10048	
C7	13038	10048	
C8	13037	10048	
C9	13019	10048	
C10	13022	10048	
C11	13022	10048	
C12	13022	10048	
C13	13022	10048	
C14	13022	10048	
C15	13022	10048	
C16	13022	10048	


ALIGNMENT
I. F. -conventional
 Trim osc at 1735 kc
 Pad osc at 600 kc
 Trim ant. at 1400 kc

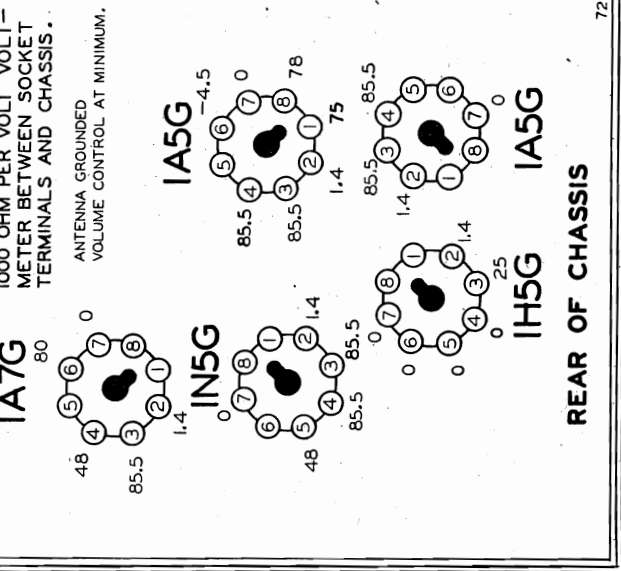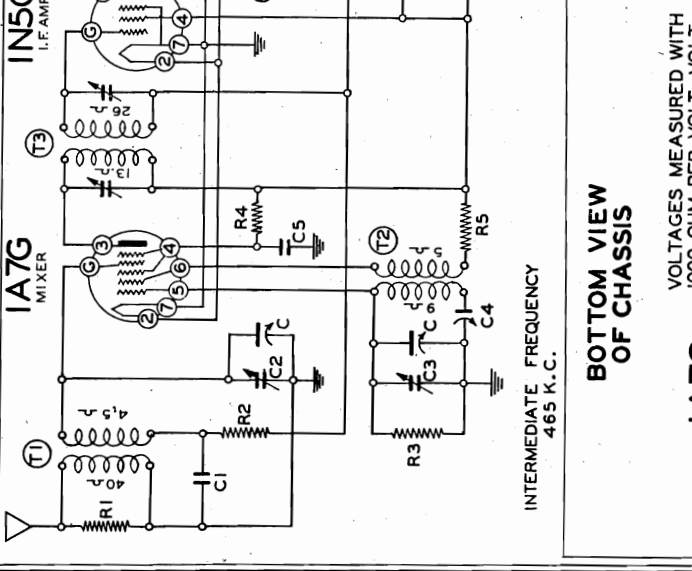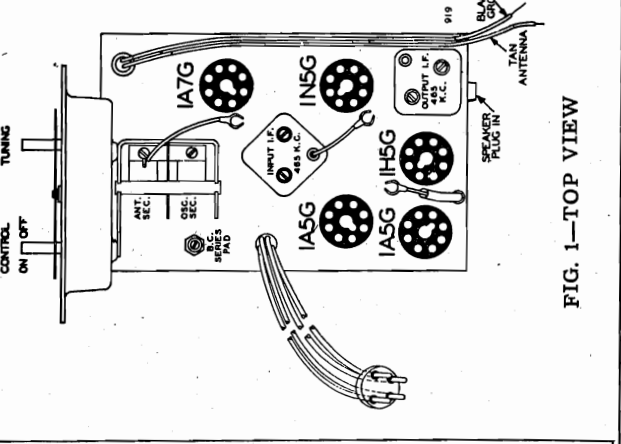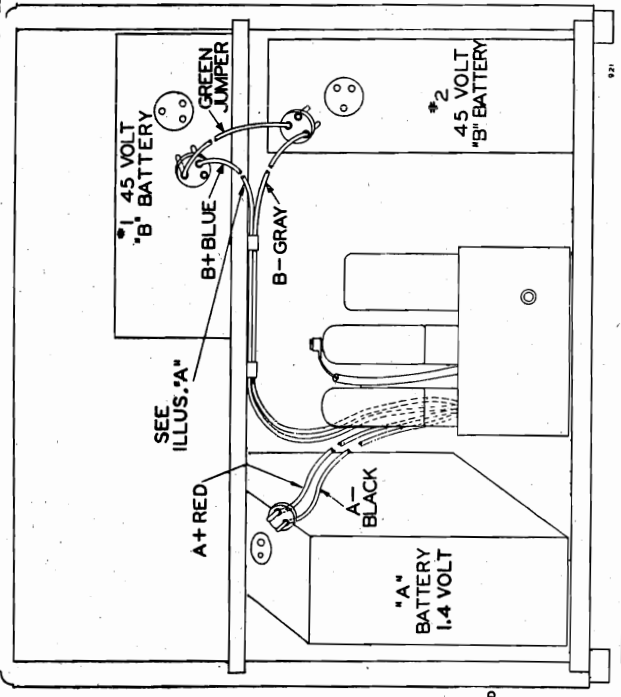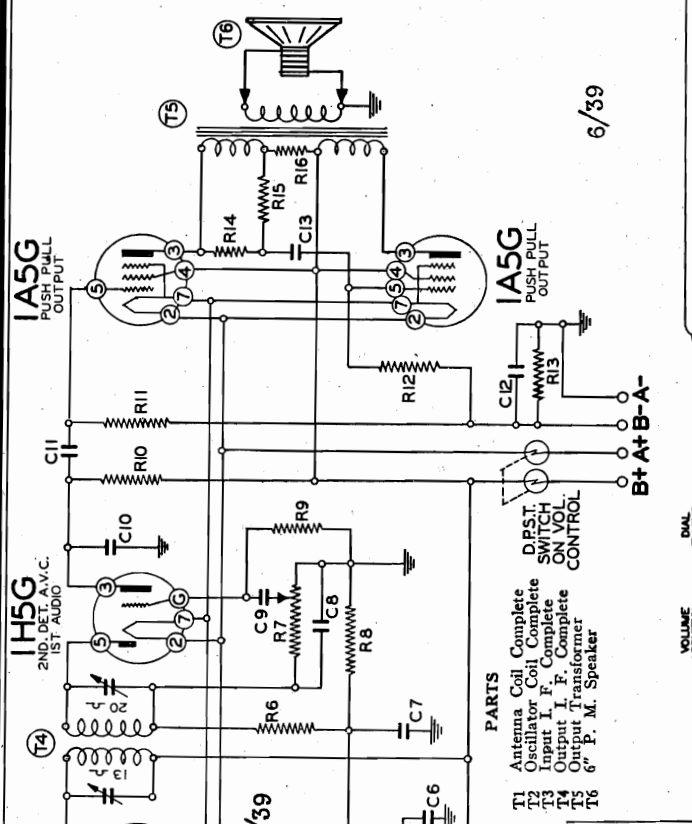

Serial 9M259100 and up
Schematic, Voltage, Socket
Trimmers

BELMONT RADIO CORP MODELS 539-415, etc. (Export)
Chassis 539, Series A

First Detector-Oscillator. I. F. Amplifier. Second Detector, A.V.C.
6SA7 6SK7 6SQ7 6K6G
 First Audio. Output Amplifier

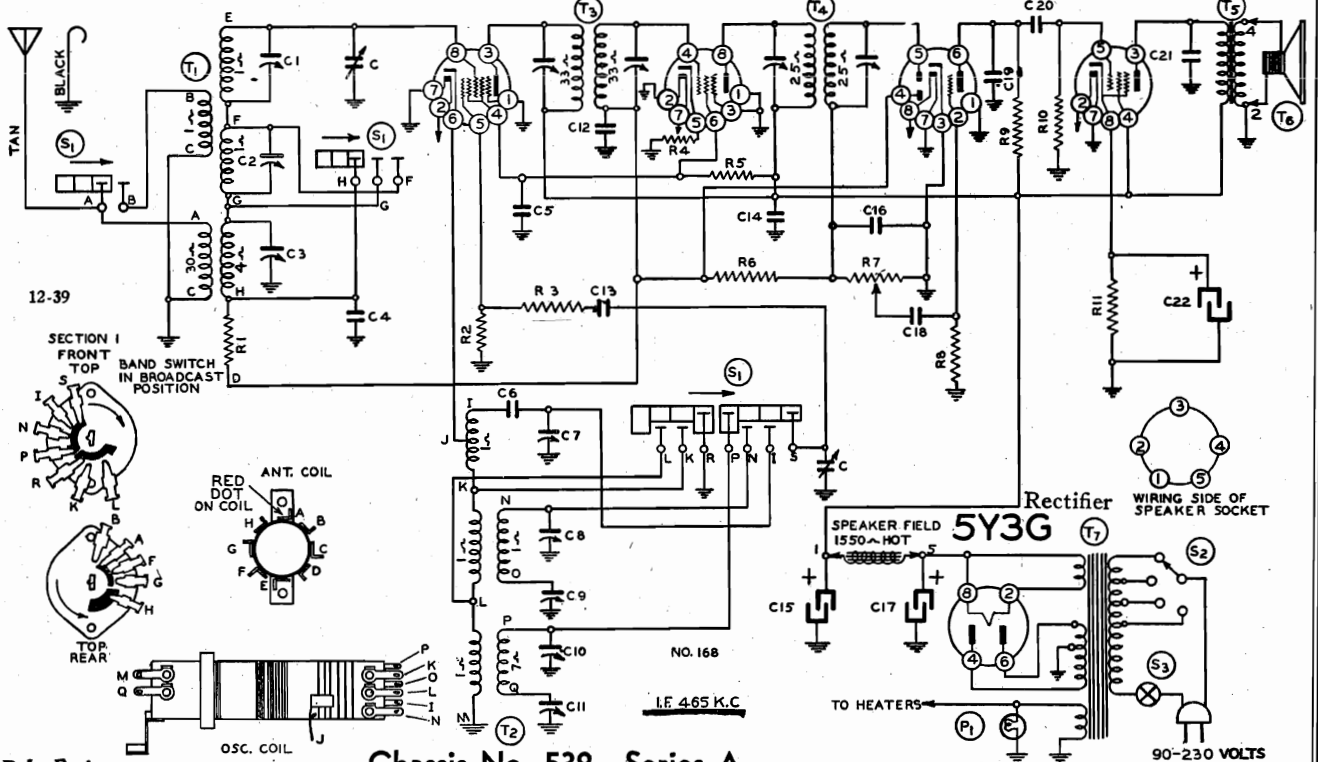

Ref. Part No. Description

RESISTORS

R1 13011 250M ohm—1/2 w.
 R2 130194 35M ohm—1/2 w.
 R3 130299 10 ohm—1/2 w.
 R4 130239 250 ohm—1/2 w.
 R5 130242 12M ohm—1 watt
 R6 1304 3 megohm—1/2 w.
 R7 101208 1 megohm volume control
 R8 130223 10 megohm—1/2 w.
 R9 13011 250M ohm—1/2 w.
 R10 13019 1 megohm—1/2 w.
 R11 13070 500 ohm—1/2 w.

CONDENSERS

C1 102124 Two Gang Variable Condenser
 C2 124124 S. W. Antenna Trimmer
 C3 124124 M. W. Antenna Trimmer
 C4 124124 B. C. Antenna Trimmer
 C5 1009 .05 x 400 v.
 C6 1001 .1 x 400 v.
 C7 129153 .006—S. W. Padder (Set at Factory)
 C8 124123 S. W. Oscillator Trimmer
 C9 129154 .0025 M. W. Padder
 C10 124123 B. C. Oscillator Trimmer
 C11 129155 B. C. Padder
 C12 10026 .02 x 400 v.
 C13 1295 .0001 Mica
 C14 1001 .1 x 400 v.

Chassis No. 539—Series A
(Serial No. 9M259100 and up)
For Models 539-415, Etc.

C15 119103 40 mfd. lytic
 C16 1295 .0001 Mica
 C17 119103 10 mfd. lytic
 C18 10025 .002 x 600 v.
 C19 1292 .0005 Mica
 C20 10026 .02 x 400 v.
 C21 10071 .004 x 600 v.
 C22 119103 20 mfd. lytic x 25 w. v.
 C15, C17 and C22 in same unit

PARTS

T1 111169 Antenna Coil
 T2 110143 Oscillator Coil
 T3 108169B Input I. F.
 T4 108170 Output I. F.
 T5 10575 Output Transformer
 T6 114176 6" Dynamic Speaker (1550 ohm field)
 T7 104193 Power Transformer 40-60 cycles 90-230 volts

S1 125105 Band Switch
 S2 Voltage Switch on Power Transformer
 S3 Volume Control—On-Off switch
 P1 10794 Pilot Light Bulb T-44

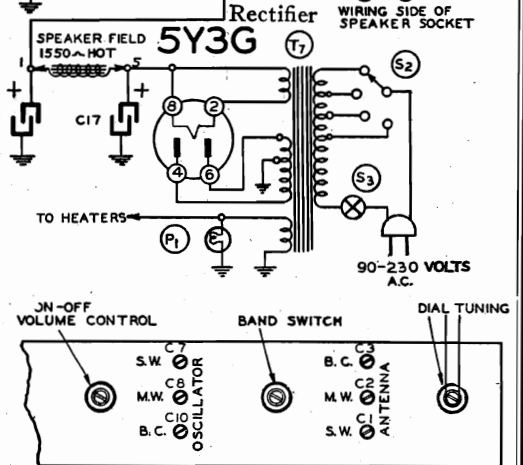


FIG. 3—FRONT OF CHASSIS

FIG. 1—TOP VIEW

FIG. 4—REAR OF CHASSIS

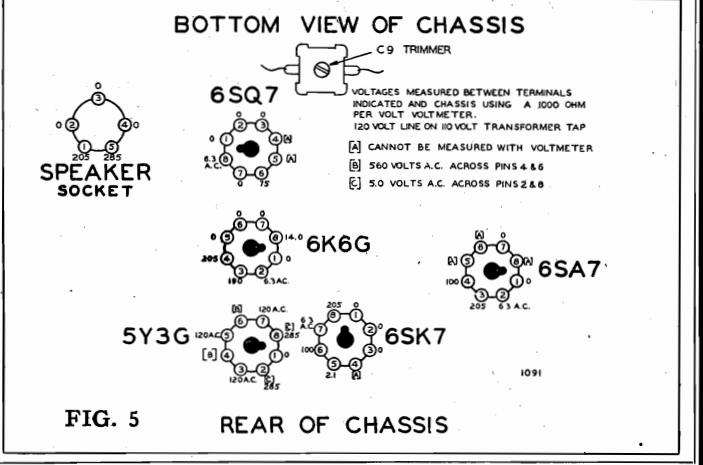
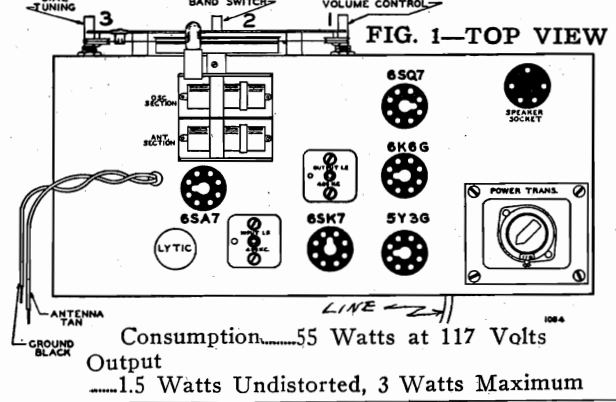


FIG. 5 REAR OF CHASSIS

MODELS 539-415, etc. (Export)
Chassis 539, Series A
Alignment
MODEL 577D
Tuner Data

BELMONT RADIO CORP.

ALIGNMENT PROCEDURE CHASSIS 539. No aligning adjustments should be attempted with the chassis in the cabinet. The following equipment is required for aligning:

- Volume control—Maximum all adjustments.
- Connect radio chassis to ground post of signal generator with a short heavy lead.
- Connect dummy antenna value in series with generator output lead.
- Connect output meter across primary of output transformer.
- Allow chassis and signal generator to "heat up" for several minutes.

The following equipment is required for aligning:

- An all wave signal generator which will provide an accurately calibrated signal at the test frequencies as listed.
- Output indicating meter.
- Non-metallic screwdriver.
- Dummy antennas—1 Mf., 200 Mmf., 400 Ohms.

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Band Switch	Variable Condenser Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Grid of 6SK7 I. F. Tube	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Grid of 6SA7	Broadcast (Extreme Left Rotation)	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Input I. F.	Adjust to maximum output
SHORT WAVE BAND	21 Mc.	400 ohms	Antenna lead	Short Wave (Extreme Right Rotation)	Set Dial at 21 MC	Trimmer (C7) (See Fig. 3)	Short wave oscillator	See Note "A" Adjust to maximum output
	21 Mc.	400 ohms	Antenna lead	Short Wave (Extreme Right Rotation)	Set Dial at 21 MC	Trimmer (C1) (See Fig. 3)	Short wave antenna	Adjust to maximum output
MEDIUM WAVE BAND	6 Mc.	400 ohms	Antenna lead	Medium Wave	Set Dial at 6 MC	Trimmers (C3, C2) (See Fig. 3)	Medium wave oscillator and antenna	Adjust to maximum output
	2.3 Mc.	400 ohms	Antenna lead	Medium Wave	Set Dial at 2.3 MC	Trimmer (C9) (See Fig. 5)	Medium wave osc. series pad	Adjust to maximum rock dial. (See note "B'')
BROAD-CAST BAND	1730 Kc.	200 mmf.	Antenna lead	Broadcast (Extreme Left Rotation)	Rotor full open (Plates out of mesh)	Trimmer (C10) (See Fig. 3)	Broadcast oscillator	Adjust to maximum output
	1500 Kc.	200 mmf.	Antenna lead	Broadcast	Set Dial at 1500 Kc.	Trimmer (C3) (See Fig. 3)	Broadcast antenna	Adjust to maximum output
	600 Kc.	200 mmf.	Antenna lead	Broadcast	Set Dial at 600 Kc.	Trimmer (C11) (See Fig. 4)	Broadcast oscillator series pad	Adjust to maximum rock dial. (See note "B'')

NOTE "A"—It is extremely necessary when making this adjustment that the fundamental oscillator signal be tuned in and not the image frequency which will fall below the fundamental.

NOTE "B"—Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.

Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.
 After each range is completed, repeat the procedure as a final check.

PROCEDURE FOR SETTING THE AUTOMATIC LEVERS MODEL 577D

There are five levers on the dial by means of which five stations may be selected, (See "B" Fig. 2).
 Make a list of local stations you tune in regularly; any number up to and including five.
 Punch out from the set of station call letter tabs supplied, the call letters of the stations you have selected.

On the front of each automatic tuner lever an opening is provided for inserting the call letter tabs, (See "A" Fig. 2).
 Insert the call letter tabs in the rectangular openings of each of the automatic tuner levers. One of the small celluloid tabs supplied should be snapped into place over each of the station call letter tabs.

Press DOWN ALL THE WAY any one of the automatic tuner levers. Holding it down FIRMLY, tune in by means of the tuning knob (No. 1) the station you have assigned to this lever. Turn the tuning knob very slowly back and forth (while still holding lever in downward position) until the signal is clearest. The station will then be accurately tuned in. Release the lever.

Press down another automatic tuner lever. Holding it down FIRMLY, carefully tune in the station assigned to this lever. Release this lever.

Follow this procedure until you have selected all of your favorite stations.
 Now rotate the tuning knob (No. 1) to the right (clockwise) as far as it will turn, and tighten the special locking screw ("C") located on left side of tuner dial assembly (See Fig. 2).

It is VERY IMPORTANT that this locking screw is turned until it is ABSOLUTELY TIGHT.

This screw will lock in place all the stations you have selected on the automatic tuner levers. (Note: Locking screw "C" is loose when radio is shipped from factory).
 If you should desire to change any station you selected to another, loosen the locking screw "C" one or two turns, select the new station as explained. Be sure to retighten the locking screw, otherwise the stations you have selected will not stay adjusted to the levers.

The automatic dial is now set up for quick tuning. Press down on the lever and your favorite station is selected.


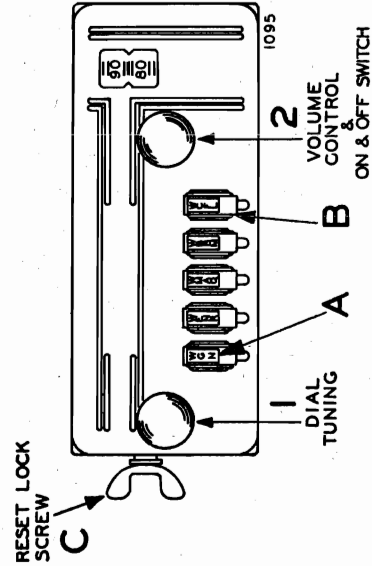



FIG. 2—FRONT VIEW

BELMONT RADIO CORP.

MODEL 571, Series A
Serial 189300 and up
Schematic, Voltage, Socket
Trimmers, Notes

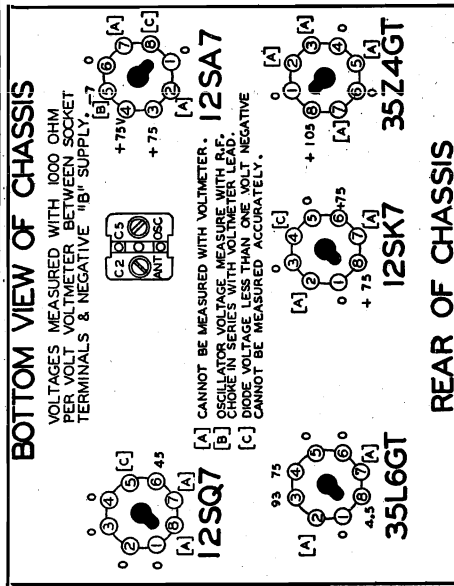

Model 571 Series A (Serial No. 189300 and up) FIG. 3-BOTTOM VIEW

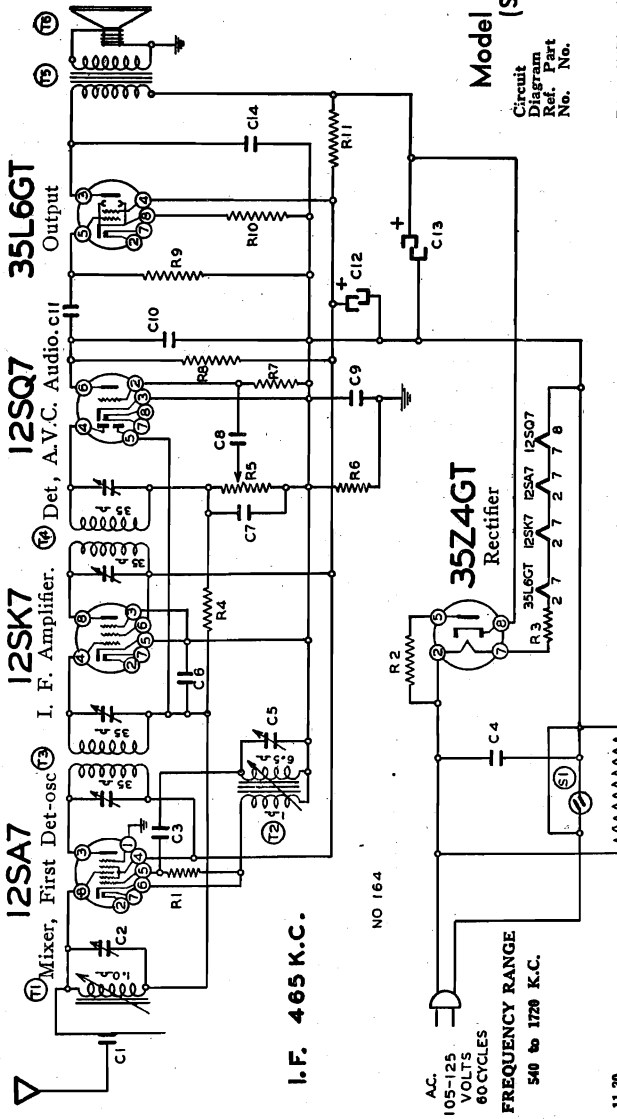

Slight adjustments to the oscillator and antenna circuits can be made without removing the chassis from the cabinet through a hole which is provided on the bottom of the cabinet. (Remove snap-in button.)
The two adjustments on the trimmer assembly can be reached with a long insulated type screwdriver through this hole.

SERVICE NOTES:

Voltages taken from different points of circuit to —B are measured with all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.

All voltages as indicated on the voltage chart are measured with 117 volt A.C. line.

Resistances of coil windings are indicated in ohms on the schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

Excessive hum, stuttering, low volume and a reduction in all D. C. voltages is usually caused by a shorted electrolytic condenser; open by-pass condensers frequently cause oscillation and distorted tone.

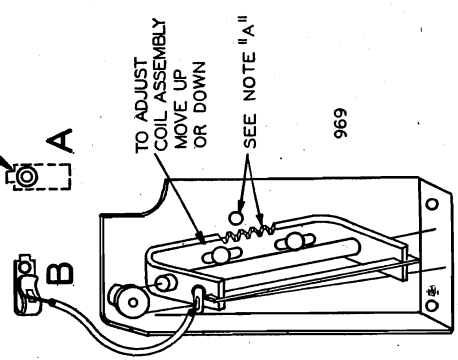



FIG. 4

Circuit Diagram Ref. Part No.	Description
C6	10013 .05 x 400 v.
C7	1295 .0001 Mica
C8	10025 .02 x 600 v.
C9	10091 .15 x 400 v.
C10	1292 .005 Mica
C11	10091 .004 x 600 v.
C12	11892 20 Mfd. Lytic
C13	10040 50 Mfd. Lytic
C14	10011 50 Mfd. Lytic

C2 and C3 in one unit.
C12 and C13 in one unit.

Circuit Diagram Ref. Part No.	Description
T1	111136 Antenna Coil Complete
T2	110126 Oscillator Coil
T3	10817D Input I. F. Coil—465 Kc.
T4	10817E Output I. F. Coil—465 Kc.
T5	104187 4" Speaker
T6	114187 4" Speaker
T7	104188 Electric Clock Complete
S1	On-Off Switch on Volume Control

Power Consumption 35 Watts
Power Output 800 Milliwatts Undistorted, 1.2 Watts Maximum

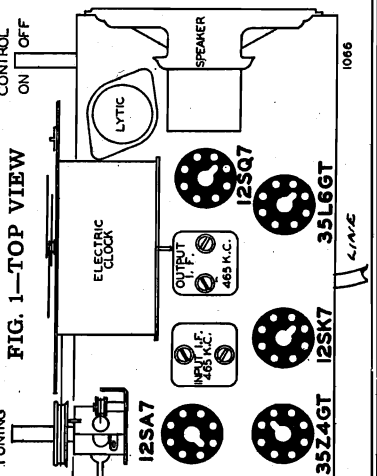

MODEL 571, Series A
MODEL 629, Series A
Alignment

BELMONT RADIO CORP.

ALIGNMENT PROCEDURE

- Volume control—Maximum all adjustments.
 - Connect —B of radio chassis to ground post of signal generator through .1 Mfd. Condenser.
 - Connect dummy antenna value in series with generator output lead.
 - Connect output meter across primary of output transformer.
 - Allow chassis and signal generator to "heat up" for several minutes.
- The following equipment is required for aligning:
- An all wave signal generator which will provide an accurately calibrated signal at the test frequencies as listed.
 - Output indicating meter.
 - Non-metallic screwdriver.

Model 571 Series A (Serial No. 189300 and up)

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Iron Cores (Dial Setting)	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Terminal "B" (See Fig. 4)	Iron Cores All the way out	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Terminal "B" (See Fig. 4)	Iron Cores All the way out	Two trimmers on top (See Fig. 1)	Input I. F.	Adjust to maximum output
BROAD-CAST BAND	1720 Kc.	.1 MFD.	Terminal "B" (See Fig. 4)	Iron Cores All the way out	Trimmer (C5) (See bottom of Radio, Fig. 3)	Oscillator	Adjust to maximum output
	1720 Kc.	200 MMF.	Terminal "A" (See Fig. 4)	Iron Cores All the way out	Trimmer (C2) (See bottom of Radio, Fig. 3)	Antenna	Adjust to maximum output
	1400 Kc.	200 MMF.	Terminal "A" (See Fig. 4)	Turn Dial to 1400 Kc.	Adjust position of antenna coil up or down (see Fig. 4)	Antenna Coil Adjustment	Adjust to maximum output (See Note "A")
	1720 Kc.	200 MMF.	Terminal "A" (See Fig. 4)	Turn Dial to 1720 Kc.	Adjust trimmer (C2) (See Fig. 3)	Antenna	Check for tracking (See Note "B")


NOTE "A"—The antenna coil assembly is made so that it is movable up or down. When making the adjustment as given in the alignment procedure move the coil assembly very slowly. It can be moved by hand or by pivoting one edge of the blade of a screwdriver in the hole and engaging the blade in the gear teeth of the coil form.

NOTE "B"—After the antenna coil has been tracked at 1400 Kc. it is necessary to check the antenna trimmer (C2) adjustment again at 1720 Kc. If no appreciable change in trimmer adjustment is made the coil is in track; if the trimmer requires considerable change, it will be necessary to again adjust the position of the antenna coil at 1400 Kc. These two adjustments should be repeated several times until no change of trimmer adjustment is required at 1720 Kc.

MODEL 629 SERIES A (Serial No. 9L225000 and up)

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Band Switch	Variable Condenser Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Grid of 6SK7	Broadcast (Extreme left rotation)	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Grid of 6SA7	Broadcast (Extreme left rotation)	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Input I. F.	Adjust to maximum output
SHORT WAVE BAND	18.3 Mc.	400 ohms	Antenna lead	Short Wave (Extreme right rotation)	Rotor full open (Plates out of mesh)	Trimmer (C4) (See Fig. 4)	Short Wave oscillator	Adjust to maximum output
	17 Mc.	400 ohms	Antenna lead	Short Wave (Extreme right rotation)	Dial Set at 17 MC.	Trimmer (C5)	Short Wave antenna	Adjust to maximum output
BROAD-CAST BAND	1720 Kc.	200 mmf.	Antenna lead	Broadcast (Extreme left rotation)	Rotor full open (Plates out of mesh)	Trimmer (C8) (See Fig. 4)	Broadcast oscillator	Adjust to maximum output
	1400 Kc.	200 mmf.	Antenna lead	Broadcast (Extreme left rotation)	Set Dial at 1400 Kc.	Trimmer (C6)	Broadcast antenna	Adjust to maximum output
	600 Kc.	200 mmf.	Antenna lead	Broadcast (Extreme left rotation)	Set Dial at 600 Kc.	Trimmer (C7) (See Fig. 5)	Broadcast oscillator series pad (Bottom of chassis)	Adjust to maximum rock dial. (See note "A")


NOTE "A." Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.
Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.
After each band is completed, repeat the procedure as a final check.

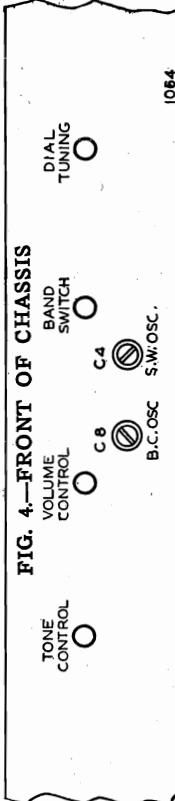

1084

BELMONT RADIO CORP.

MODEL 577D
Serial 214845 up
Schematic, Voltage, Socket
Trimmers, Alignment

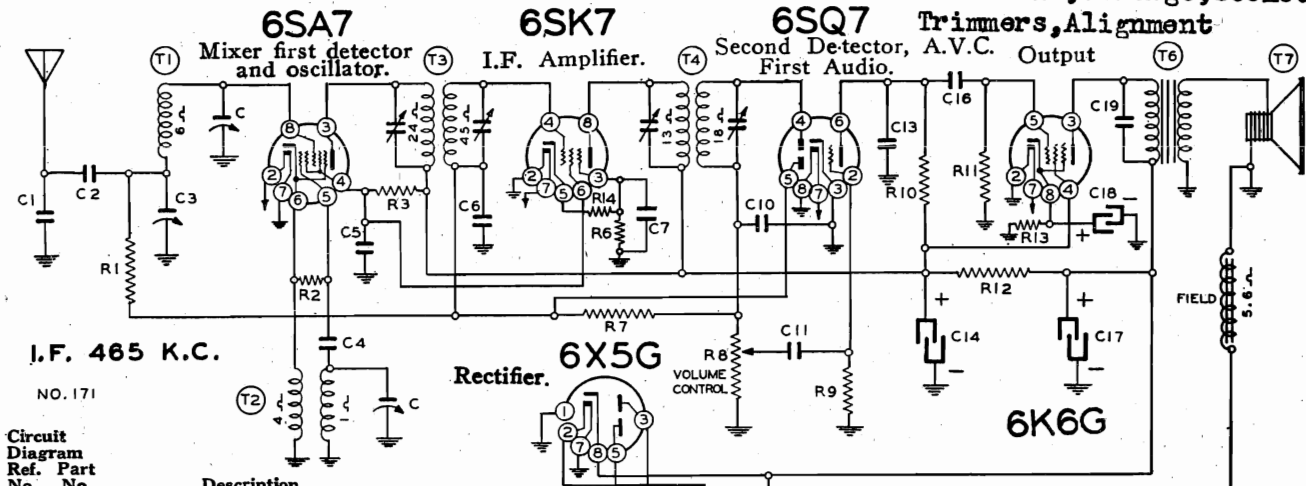

Circuit Diagram Ref. Part No. No.

RESISTORS

R1	13011	250M ohm— $\frac{1}{2}$ w.
R2	130236	30M ohm— $\frac{1}{2}$ w.
R3	130307	15M ohm—1 watt
R4	13060	100 ohm— $\frac{1}{2}$ w.
R5	13060	100 ohm— $\frac{1}{2}$ w.
R6	13070	500 ohm— $\frac{1}{2}$ w.
R7	1304	3 megohm— $\frac{1}{2}$ w.
R8	101110	1 megohm volume control
R9	130257	5 megohm— $\frac{1}{2}$ w.
R10	13011	250M ohm— $\frac{1}{2}$ w.
R11	1303	500M ohm— $\frac{1}{2}$ w.
R12	130199	1500 ohm—1 watt
R13	130308	750 ohm—1 watt
R14	130174	50 ohm— $\frac{1}{2}$ w.

CONDENSERS

C	10269	2 gang variable condenser
C1	1293	.00002 mica
C2	10055	.01 x 400 volts
C3	12434	Adj. Antenna Trimmer
C4	12921	.0002 mica
C5	100115	.05 x 400 v.
C6	1009	.05 x 200 v.
C7	10020	.1 x 200 v.
C8	10034	.005 x 1200 v.
C9	12912	.00025 mica
C10	1295	.0001 mica
C11	10025	.02 x 600 v.

C12	10031	.5 x 120 v.
C13	1292	.0005 mica
C14	119105	15 ufd. lytic x 350 v. v.
C15	10031	.5 x 120 v.
C16	10078	.01 x 200 v.
C17	119105	15 ufd. lytic x 350 v. v.
C18	119105	20 ufd. lytic x 25 v. v.
C19	10087	.01 x 600 v.


C14, C17 and C18 in same unit

PARTS

T1	11195B	Antenna Coil
T2	110146	Oscillator Coil
T3	108139	Input I. F. Coil—465 kc.
T4	108121B	Output I. F. Coil—465 kc.
T5	104131	Power Transformer
T6	10567	Output Transformer
T7	114114-R	5" Dynamic Speaker (5.6 ohm field)
L1	10568	"A" Choke
L2	10566	"A" Choke
S1		Switch on volume control
P1	10797	Pilot light (T51) 6-8 volts
S.P.	11749	(2) Spark Plates


577 ISSUE D
January 1940

Serial No. 214845 Up

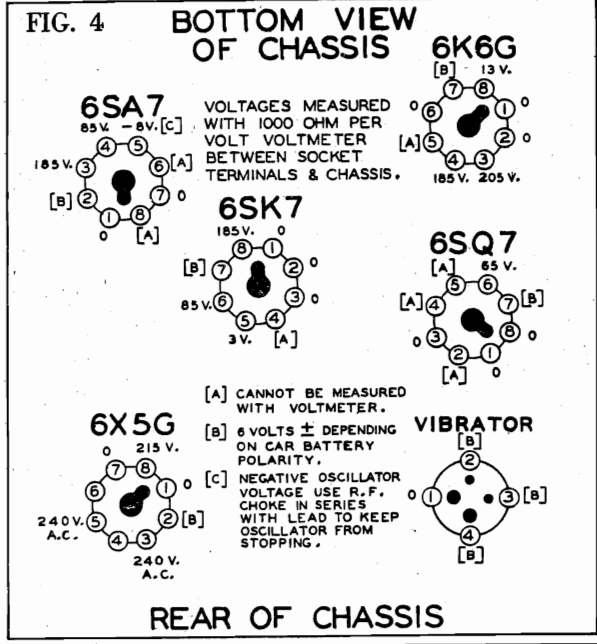

FOR TUNER SEE INDEX


ADJUST ANTENNA TRIMMER FIG. 3—TOP VIEW
Tune in a weak signal at approximately 600 K.C. with volume control about three-fourths on. Adjust trimmer screw "X" until maximum output is obtained.

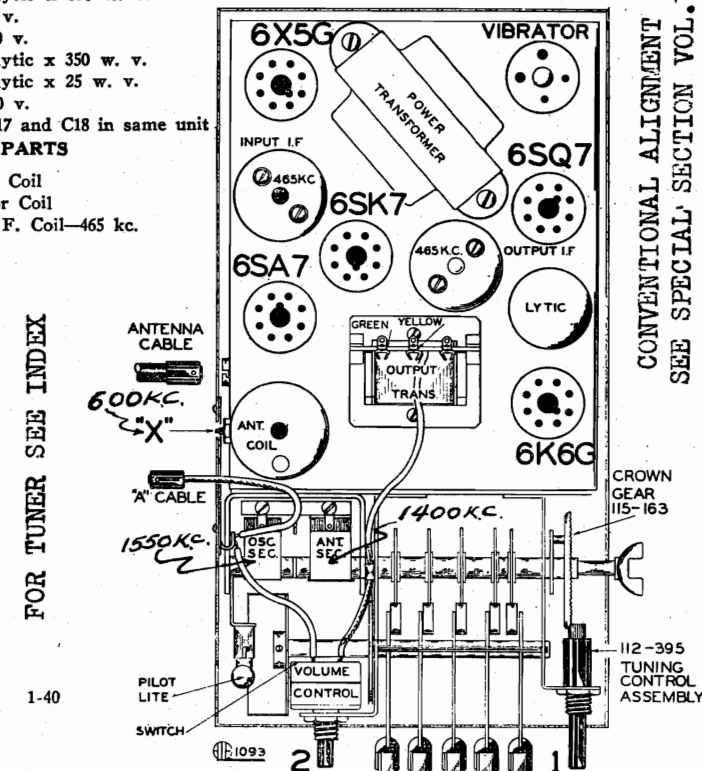

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOL. VIII.

MODEL 629, Series A
Serial 9L225000 up
Schematic, Voltage, Socket

BELMONT RADIO CORP.

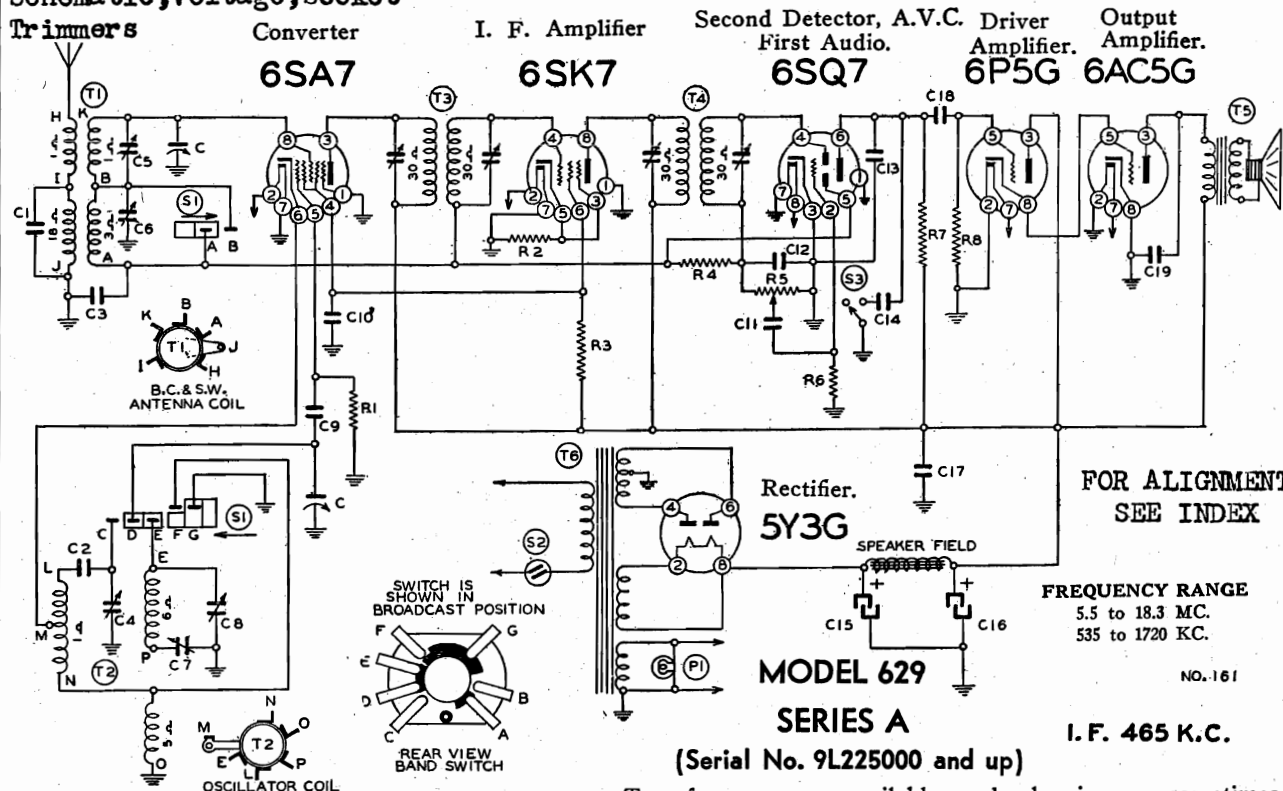

FOR ALIGNMENT
SEE INDEX

FREQUENCY RANGE
5.5 to 18.3 MC.
535 to 1720 KC.

NO. 161

MODEL 629

SERIES A

I.F. 465 K.C.

(Serial No. 9L225000 and up)

Transformers are available and chassis are sometimes equipped with universal transformers for operation on 25, 40 and 60 cycles and with primary taps for 110, 130, and 230 volts.

Power Consumption.....50 Watts (At 115 volts 50-60 cycles)
Power Output.....1.5 Watts Undistorted, 2.4 Watts Maximum

Ref. Part No.	Description
CONDENSERS	
C	102124 2 gang variable condenser
C1	1295 .0001 mica
C2	12964 .00275 mica
C3	10022 .05 x 200 v.
C4	124121 Dual Adjustable Condenser (S.W. Osc.)
C5	124122 Dual Adjustable Condenser (S.W. Ant.)
C6	124122 Dual Adjustable Condenser (Bc. Ant.)
C7	129151 .000468 comp. condenser (Bc. Osc. Pad)
C8	124121 Dual Adjustable Condenser (Bc. Osc.)
C9	12939 .00005 mica
C10	10013 .05 x 400 v.
C11	10071 .004 x 600 v.
C12	1295 .0001 mica
C13	1292 .0005 mica
C14	10012 .003 x 600 v.
C15	119102 10 mfd. lytic condenser
C16	119102 30 mfd. lytic condenser
C17	1001 .1 x 400 v.
C18	10026 .02 x 400 v.
C19	10012 .003 x 600 v.

Ref. Part No.	Description
RESISTORS	
R1	130208 40M ohm-1/2 w.
R2	130168 100 ohm-1/2 w.
R3	130306 7500 ohm-1 watt
R4	1304 3 megohm-1/2 w.
R5	101208 Volume Control and Switch (1 Megohm)
R6	130257 5 megohm-1/2 w.
R7	13011 250M ohm-1/2 w.
R8	13019 1 megohm-1/2 w.

Ref. Part No.	Description
PARTS	
T1	111168 B.C. S.W. Antenna Coil
T2	110142 B.C. S.W. Oscillator Coil
T3	108169 Input I.F. Coil-465 kc.
T4	108106S Output I.F. Coil-465 kc.
T5	114188 6" Dynamic Speaker (1500 Ohm Field)
T6	104189 Power Transformer
S1	125103 Band Switch
S2	On-Off switch on volume control
S3	125104 Tone Control Switch
P1	10794 Pilot light T4

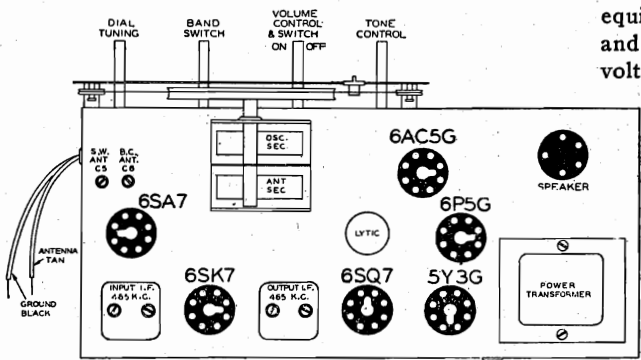


FIG. 1—TOP VIEW

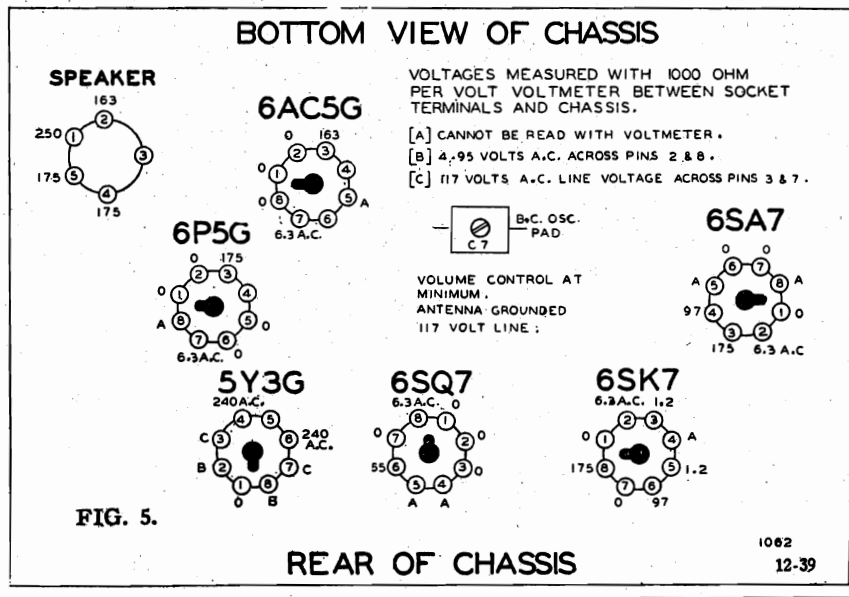


FIG. 5.


REAR OF CHASSIS

1062
12-39

Socket, Trimmers
Alignment

BELMONT RADIO CORP.

MODEL 635, Series A
Schematic, Voltage

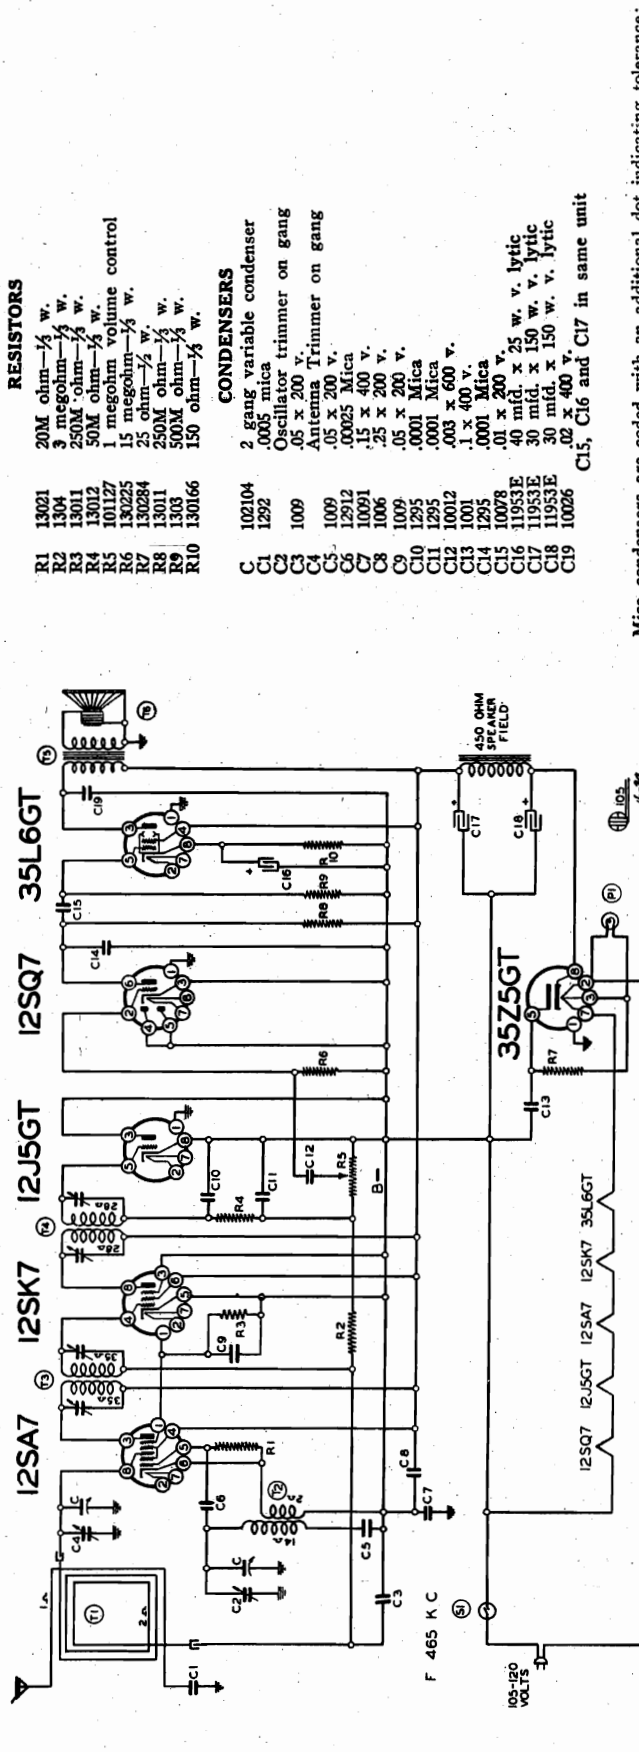

RESISTORS

R1	13021	20M ohm—1/4 W.
R2	13024	3 megohm—1/4 W.
R3	13011	250M ohm—1/4 W.
R4	13012	50M ohm—1/4 W.
R5	101127	1 megohm volume control
R6	130225	15 megohm—1/4 W.
R7	130284	25 ohm—1/4 W.
R8	13011	250M ohm—1/4 W.
R9	1303	500M ohm—1/4 W.
R10	130166	150 ohm—1/4 W.

CONDENSERS

C	102104	2 gang variable condenser
C1	1292	.0005 mica Oscillator trimmer on gang
C2	1009	.05 x 200 V. Antenna Trimmer on gang
C3	1009	.05 x 200 V.
C4	1009	.05 x 200 V.
C5	12912	.00025 Mica
C6	10091	.15 x 400 V.
C7	10091	.15 x 400 V.
C8	1006	.25 x 200 V.
C9	1009	.05 x 200 V.
C10	1295	.0001 Mica
C11	1295	.0001 Mica
C12	10012	.003 x 600 V.
C13	1001	.1 x 400 V.
C14	1295	.0001 Mica
C15	10078	.01 x 200 V.
C16	11953E	40 mfd. x 25 v. v. lytic
C17	11953E	30 mfd. x 150 v. v. lytic
C18	11953E	30 mfd. x 150 v. v. lytic
C19	10026	.02 x 400 V.

C15, C16 and C17 in same unit

Mica condensers are coded with an additional dot indicating tolerance:


Tolerance percent	Color of Dot
2 1/2 %	White
5 %	Green
10 %	Blue
15 %	Yellow
20 %	Red
More Than 20 %	None

ALIGNMENT

- Connect B- of radio chassis to ground post of signal generator through .1 mf condenser.
- I.F. peak 465 kc. I.F. alignment conventional. See Vol. VIII.
- Trim oscillator at 1650 kc.
- Trim antenna at 1400 kc. (Lay signal generator lead near, but not on, loop when adjusting trimmer).

- 1—Type 12SA7 Mixer, First Detector-oscillator.
- 1—Type 12SK7 I. F. Amplifier.
- 1—Type 12J5GT Second Detector, A.V.C.
- 1—Type 12SQ7 First Audio Amplifier.
- 1—Type 35L6GT Beam Output Amplifier.
- 1—Type 35Z5GT High Vacuum Rectifier.

BOTTOM VIEW OF CHASSIS

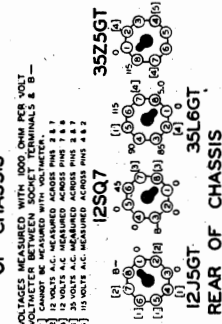

PARTS

T1	120270	Loop Antenna
T2	110114	Oscillator Coil
T3	108140D	Input I. F.
T4	108145B	Output I. F.
T5	10588B	Output Transformer
T6	114116G	5 in. Dynamic Speaker (450 ohm field)
P1	107249	6-8 v. pilot light T47
S1		Off-on switch on volume control

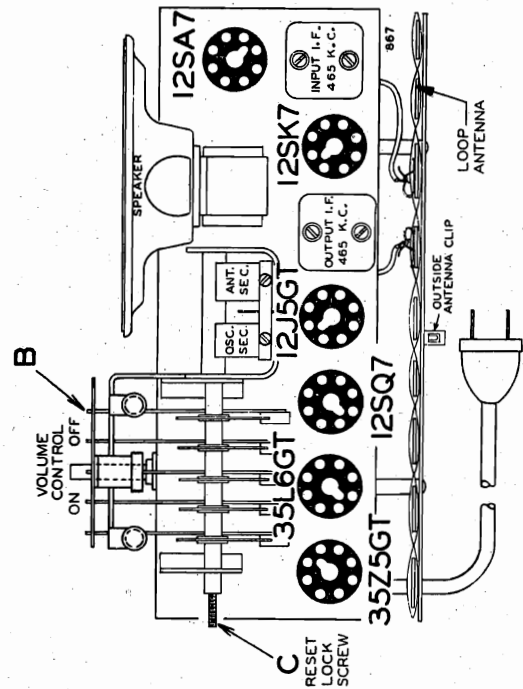


FIG. 1—TOP VIEW

MODEL 636, Series A
Schematic, Voltage
Socket, Trimmers, Alignment

BELMONT RADIO CORP.

RESISTORS

R1	130218	5M ohm-1/4 w.
R2	13020	100M ohm-1/4 w.
R3	130176	20M ohm-1/4 w.
R4	130295	25 ohm-1 watt
R5	130295	25 ohm-1 watt
R6	130100	150M ohm-1/4 w.
R7	130303	40 ohm-1/4 w.
R8	1301	3 megohm-1/4 w.
R9	13012	50M ohm-1/4 w.
R10	101127	1 megohm volume control
R11	130257	5 megohm-1/4 w.
R12	13011	250M ohm-1/4 w.
R13	1303	500M ohm-1/4 w.
R14	130166	150 ohm-1/4 w.

CONDENSERS

C1	102104B	2 gang variable condenser
C2	12951	.000125 Mica
C3	12912	.0025 Mica
C4	10026	.02 x 400 V.
C5		Antenna Trimmer on gang
C6	1001	Oscillator trimmer on gang
C7	1006	.1 x 400 V.
C8	1295	.25 x 200 V.
C9	1295	.0001 Mica
C10	1295	.0001 Mica
C11	1295	.05 x 200 V.
C12	1295	.0001 Mica
C13	10012	.0001 Mica
C14	10010	.005 x 600 V.
C15	10010	.2 x 400 V.
C16	11953E	30 mid. lytic-150 w. v.
C17	11953E	30 mid. lytic-150 w. v.
C18	1295	.0001 Mica
C19	10078	.01 x 200 V.
C20	11953E	40 mid.-25 w. v. lytic
	10026	.02 x 400 V.

C15, C16, and C19 in same unit


I.F. 465 KC

- 1-Type 12SK7 R. F. Amplifier.
- 1-Type 12SA7 Mixer, First Detector-oscillator.
- 1-Type 12SK7 I. F. Amplifier.
- 1-Type 12SQ7 Second Detector, A.V.C. and First Audio.
- 1-Type 35L6GT Beam Output Amplifier.
- 1-Type 35Z5GT High Vacuum Rectifier.

PARTS

T1	111139	Loop Antenna
T2	110128	Oscillator Coil
T3	108140F	Input I. F. Coil
T4	108145B	Output I. F. Coil
T5	10688B	Output Transformer
T6	114116G	5-Dynamic Speaker (450 ohm field)
L1	1237	Antenna Loading Coil
P1	107249	6-8 volt, Pilot light - T-47
S1		Off-on Switch on Volume Control

For alignment procedure, see instructions for Belmont Model 635, Series A.

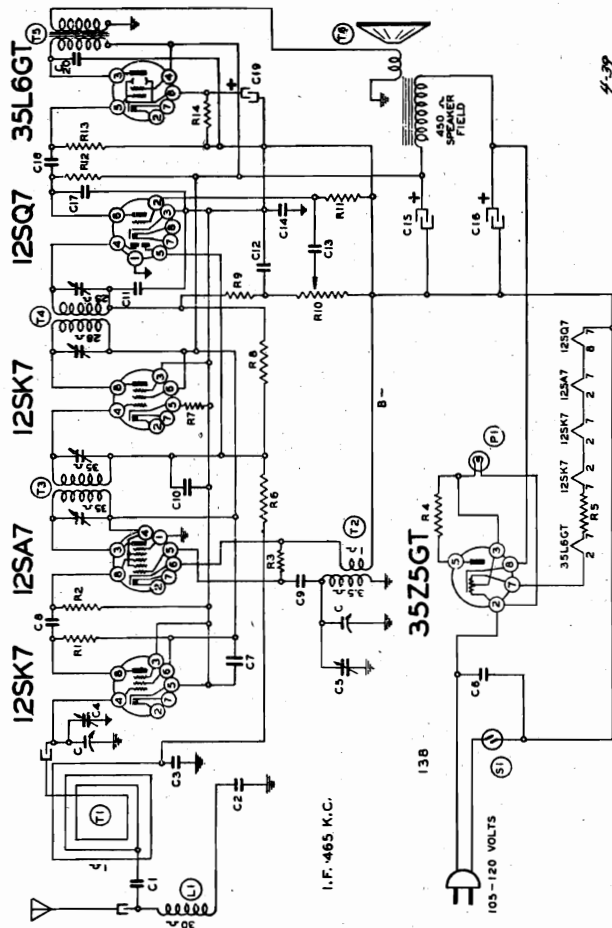

4-39


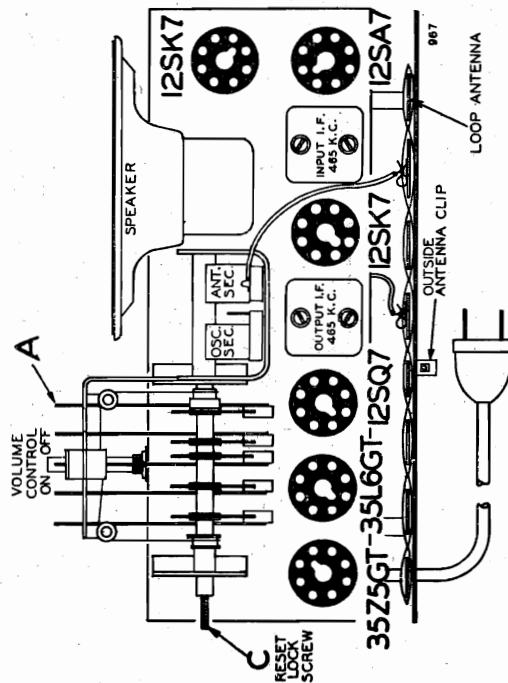


FIG. 1-TOP VIEW

BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMETER BETWEEN SOCKET TERMINALS AND GROUND.
* REGULATOR VOLTAGE SHOULD BE MEASURED WITH M.T. CHORE IN SERIES.

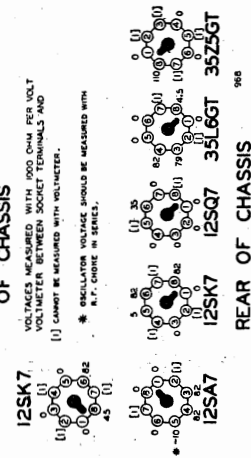

REAR OF CHASSIS

Chassis 706, Series A
Schematic, Socket, Trimmers
MODEL 709 AC S.P.U.

BELMONT RADIO CORP.



MODELS 706-391, 706-398
706-378, etc.

Power Consumption.....
3.8 Amps. at 6.3 Volts

Power Output.....
2 Watts Undistorted,
3 Watts Maximum

I.F. 465 K.C.

Models
706-391, 706-398 and 706-378,
Etc. Chassis No. 706 Series A
(Serial No. 9K16700 and up)

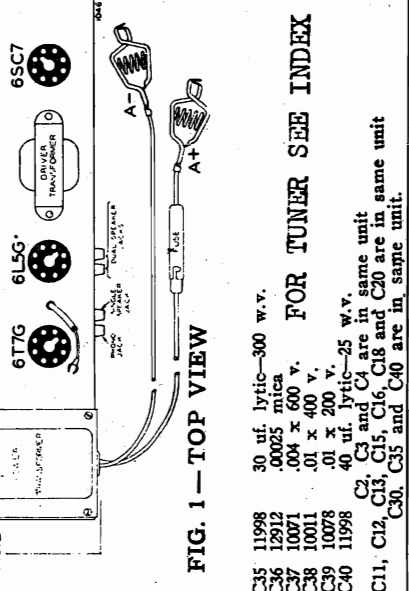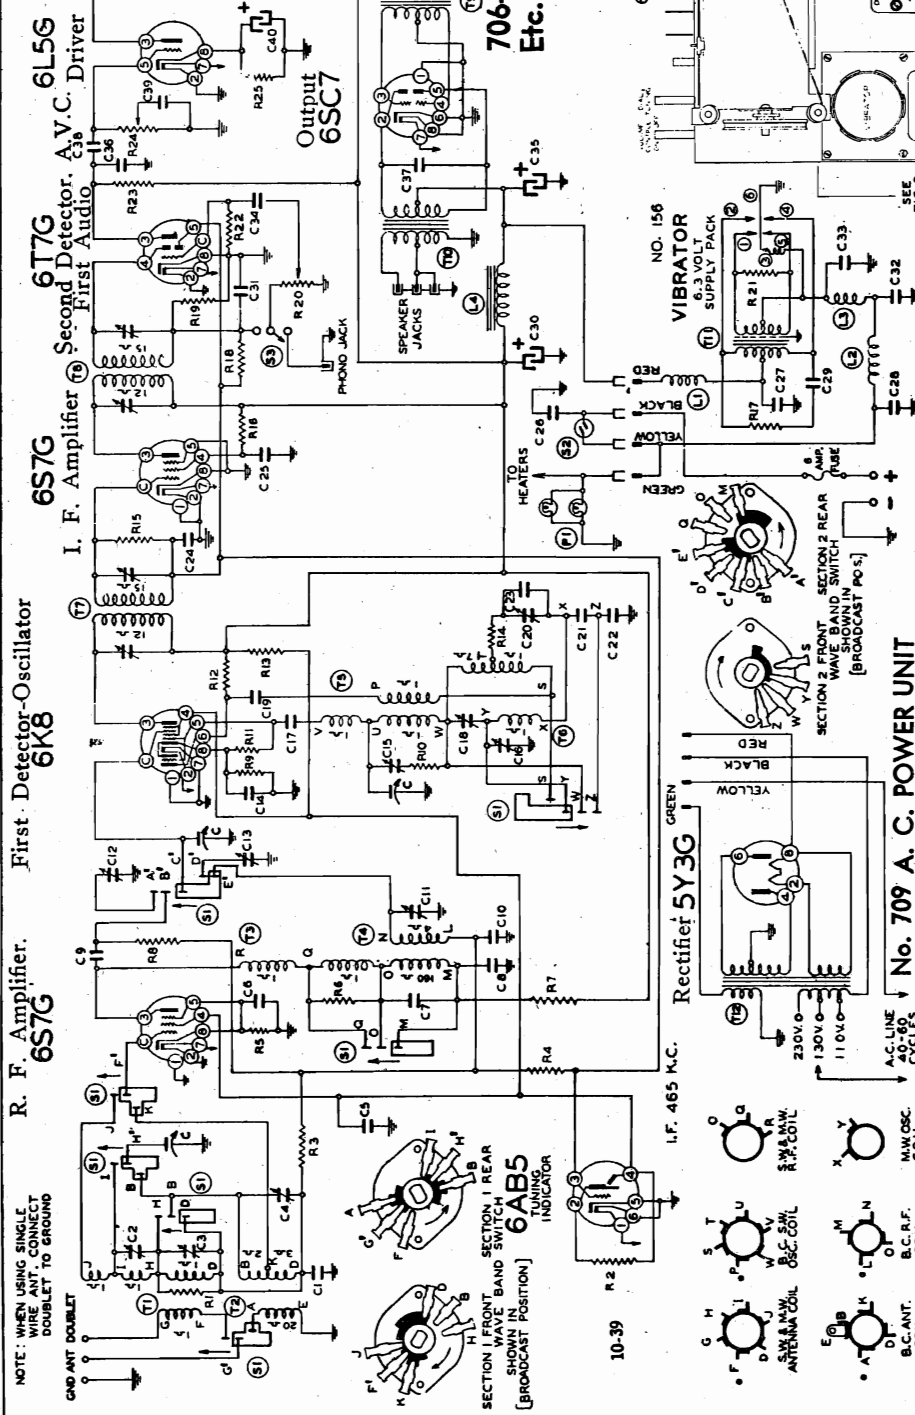

- FOR TUNER SEE INDEX
- C35 11998 30 uf. lytic-300 w.v.
C36 12912 .0025 mica
C37 10071 .01 x 400 v.
C38 10011 .01 x 200 v.
C39 10078 40 uf. lytic-25 w.v.
C40 11998 C1, C2, C3 and C4 are in same unit
C11, C12, C13, C15, C16, C18 and C20 are in same unit.
C21, C22, C23, C24, C25, C26, C27, C28, C29, C30, C31, C32, C33, C34, C35, C36, C37, C38, C39, C40, C41, C42, C43, C44, C45, C46, C47, C48, C49, C50, C51, C52, C53, C54, C55, C56, C57, C58, C59, C60, C61, C62, C63, C64, C65, C66, C67, C68, C69, C70, C71, C72, C73, C74, C75, C76, C77, C78, C79, C80, C81, C82, C83, C84, C85, C86, C87, C88, C89, C90, C91, C92, C93, C94, C95, C96, C97, C98, C99, C100.

- CONDENSERS
- Three Gang Variable Condenser
C1 400 v.
C2 400 v.
C3 400 v.
C4 400 v.
C5 400 v.
C6 400 v.
C7 400 v.
C8 400 v.
C9 400 v.
C10 400 v.
C11 400 v.
- RESISTORS
- 50M ohm-1/2 w.
3 megohm-1/2 w.
100M ohm-1/2 w.
1000 ohm-1/2 w.
1000 ohm-1/2 w.
25M ohm-1/2 w.
1000 ohm-1/2 w.
1 megohm-1/2 w.
300 ohm-1/2 w.
1000 ohm-1/2 w.
50M ohm-1/2 w.
15M ohm-1/2 w.
10M ohm-1 watt
10 ohm-1/2 w.
1 megohm-1/2 w.
50M ohm-1/2 w.
3500 ohm-1/2 w.

- Rectifier 5Y3G
- 130V 0-6
110V 0-6
AC-LINE 20-60 CYCLES
- SECTION 1 FRONT WAVE BAND SWITCH [BROADCAST POSITION]
- SECTION 2 REAR WAVE BAND SWITCH [BROADCAST POS.]
- SECTION 3 FRONT WAVE BAND SWITCH [BROADCAST POS.]
- SECTION 4 REAR WAVE BAND SWITCH [BROADCAST POS.]
- SECTION 5 FRONT WAVE BAND SWITCH [BROADCAST POS.]
- SECTION 6 REAR WAVE BAND SWITCH [BROADCAST POS.]
- SECTION 7 FRONT WAVE BAND SWITCH [BROADCAST POS.]
- SECTION 8 REAR WAVE BAND SWITCH [BROADCAST POS.]
- SECTION 9 FRONT WAVE BAND SWITCH [BROADCAST POS.]
- SECTION 10 REAR WAVE BAND SWITCH [BROADCAST POS.]

CHASSIS 706
CHASSIS 707
CHASSIS 708

BELMONT RADIO CORP.

Alignment, Trimmers

SERVICE NOTES:
Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.

- Tone control—in treble position.
- Volume control—Maximum all adjustments.
- Connect radio chassis to ground post of signal generator with a short heavy lead.
- Connect dummy antenna value in series with generator output lead.
- Connect output meter across primary of output transformer.
- Allow chassis and signal generator to "heat up" for several minutes.

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Band Switch	Variable Condenser Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Grid of 6K7* I. F. Tube	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Grid of 6K8	Broadcast (Extreme Left Rotation)	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Input I. F.	Adjust to maximum output
SHORT WAVE BAND	23 Mc.	400 ohms	Antenna lead	Short Wave (Extreme Right Rotation)	Set Dial at 23 MC	Trimmer (C15) (See Fig. 3)	Short wave oscillator	See Note "A" Adjust to maximum output
	23 Mc.	400 ohms	Antenna lead	Short Wave (Extreme Right Rotation)	Dial Set at 23 MC	Trimmer (C2, C12) (See Fig. 3)	Short wave antenna and R. F.	See Note "B" Adjust to maximum output
MEDIUM WAVE BAND	6.5 Mc.	400 ohms	Antenna lead	Medium Wave	Set Dial at 6.5 MC	Trimmer (C16) (See Fig. 3)	Medium wave oscillator	Adjust to maximum output
	6.5 Mc.	400 ohms	Antenna lead	Medium Wave	Set Dial at 6.5 MC	Trimmer (C3, C13) (See Fig. 3)	Medium wave antenna and R. F.	Adjust to maximum output
BROAD-CAST BAND	2000 Kc.	200 mmf.	Antenna lead	Broadcast (Extreme Left Rotation)	Rotor full open (Plates out of mesh)	Trimmer (C18) (See Fig. 3)	Broadcast oscillator	Adjust to maximum output
	1800 Kc.	200 mmf.	Antenna lead	Broadcast	Set Dial at 1800 Kc.	Trimmer (C4, C11) (See Fig. 3)	Broadcast antenna and R. F.	Adjust to maximum output
	550 Kc.	200 mmf.	Antenna lead	Broadcast	Set Dial at 550 Kc.	Trimmer (C20) (See Fig. 3)	Broadcast oscillator series pad	Adjust to maximum, rock dial. (See note "C")

NOTE "A"—It is extremely necessary when making this adjustment that the fundamental oscillator signal be tuned in and not the image frequency which will fall below the fundamental. As an example of this a fundamental 23 megacycle signal can be tuned in not only at 23 on the dial, but also at approximately 22 megacycles.

NOTE "B"—When adjusting the antenna and R.F. trimmers be sure and "follow" the signal to exact resonance by slight readjustment of the gang condenser as trimmer reaction on oscillator frequency is quite noticeable at high frequencies.

NOTE "C"—Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained. Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.

After each range is completed, repeat the procedure as a final check.

Chassis No. 707—Series A
(Serial No. 9K167300 and up)
BALLAST RESISTOR TUBES:

Use one of the following:

Type No. 5465 for 100 to 125 volt line voltage. Type No. 5463 for 125 to 145 volt line voltage. Type No. 5464 for 145 to 250 volt line voltage.

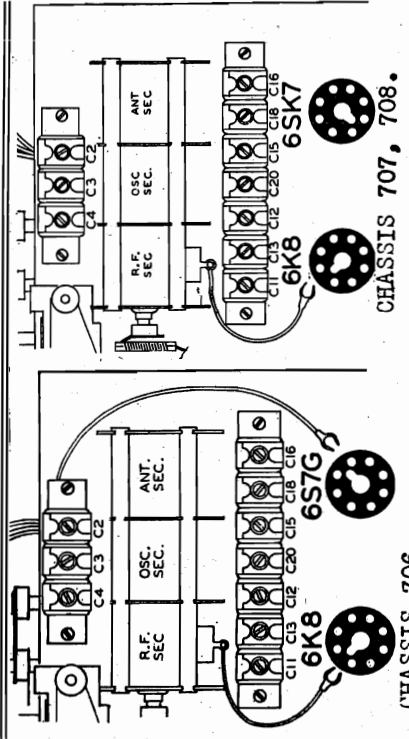


FIG. 3—TOP OF CHASSIS

CHASSIS 707
 CHASSIS 708
 CHASSIS 792
 CHASSIS 793B
 Tuner Data


BELMONT RADIO CORP.

MODEL 709 S.P.U.
 Installation Notes
 CHASSIS 706
 Voltage, Tuner

INSTALLING THE MODEL 709 POWER UNIT
 (For 100-250 Volt 40/60 Cycle A. C. Operation)

In Chassis 706.

1. Remove the chassis from the cabinet, by removing the four chassis mounting bolts from the bottom of the cabinet.
2. Referring to Fig. 1, note that the 6-volt power unit is fastened to the top of the radio chassis with **eight copper head screws**, (six on top of chassis, and two on rear flange of chassis).
3. Remove the eight copper head screws.
4. Disconnect the four flexible leads of the power unit from the chassis connector strip. These leads clip into pin jacks. Note that the color of each flexible lead matches the color dot on the chassis pin jack connector strip.
5. Place the model 709 A.C. power unit (see Fig. 2) on the top of the radio chassis and plug the four flexible leads into the pin jacks on the chassis connector strip.

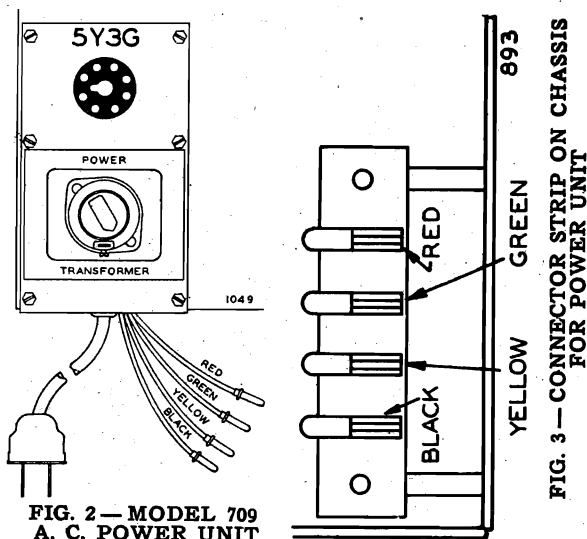


- (a) The red lead should be plugged into the pin jack which is marked with a red dot.
 - (b) The green lead connects to the pin jack which is marked with a green dot.
 - (c) The yellow lead connects to the pin jack which is marked with a yellow dot.
 - (d) The black lead connects to the pin jack which is marked with a black dot.
6. Mount the power unit to the chassis using the eight copper head screws.

IMPORTANT:

After the A.C. power unit has been installed check the connections again to make sure you have followed the instructions correctly. Set the switch on the top of the power transformer to the proper voltage.

VOLTAGE DATA CHASSIS 706.

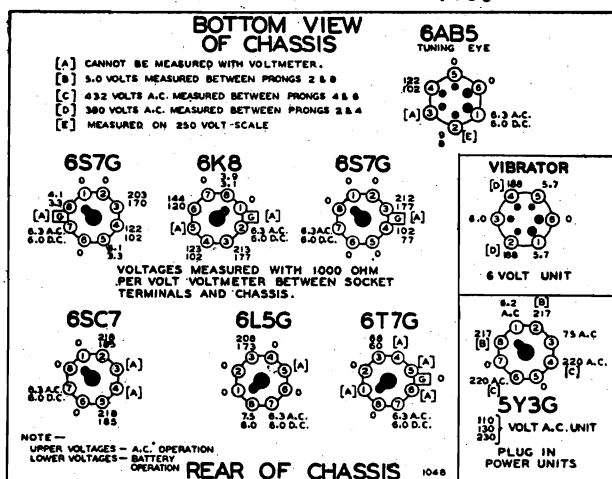

All voltages as indicated on the voltage chart are measured with a fully charged 6 volt storage battery or from 117 volt A. C. line if the Model 709 A. C. power unit is installed in place of the 6 volt power unit.

PROCEDURE FOR SETTING THE AUTOMATIC PUSH BUTTONS

For Chassis 706, 707, 708, 792, and 793B.

1. Pull the "Reset" button all the way out (see control No. 6,), and rotate the button to the left (counter-clockwise) until it cannot be turned any further.

You will note that as the button is rotated it will turn easily until the pointer reaches the end of the dial scale and then a slight amount of force will be required to actually start unlocking the tuner mechanism. Beyond this point the button will turn quite easily again until the tuner mechanism is completely unlocked. At this point do not force the button any further. The tuner mechanism is now unlocked.

(NOTE:—Automatic tuner mechanism is locked tight when radio is shipped from the factory.)

2. Push in all the way any one of the push buttons and at the same time push in firmly on the dial tuning knob. Both the dial tuning knob and the push button should be pushed hard enough to make them stay latched in.

You may find it necessary to rotate the dial tuning knob slightly when pushing it in to make certain that the gears mesh properly.

For Chassis 792 and 793B only.

3. Both the pushbutton and the dial tuning knob are now latched in. Do not hold the pushbutton in by hand while tuning in a station. Tune in by means of the dial tuning knob the station indicated on the station call letter tab on the pushbutton which is latched in. Turn the dial tuning knob very slowly back and forth until the station is clearest. The station will then be accurately tuned in.

For Chassis 706, 707, and 708 only.

3. Press in on the push button which is latched in. Holding it in firmly, tune in by means of the dial tuning knob

the station indicated on the station call letter tab on this push button. Turn the dial tuning knob very slowly back and forth (while still pressing in firmly on the push button).

For all Models

4. Push in all the way another push button, at the same time push the dial tuning knob in so that both the push button and the dial tuning knob are latched in together. Holding the push button in firmly, tune in the station indicated on the call letter tab on this push button.

5. Follow this procedure until you have tuned in all of your favorite stations.

6. Pull the "Reset" button all the way out and rotate the button to the right (clockwise) until it cannot be turned any further. This will lock the automatic tuner mechanism and the stations you have set up for automatic tuning will be locked in place.

CHANGING STATIONS:

If you should desire to change any station you selected to another, pull the "Reset" button all the way out and rotate the button to the left (counter-clockwise) and unlock the tuner mechanism. Select the new station as explained.

(NOTE:—If the dial mechanism works hard when setting up a new station for one of the automatic tuner push buttons, it is due to the tuner mechanism not being unlocked all the way. Pull the "Reset" button out all the way and rotate the button to the left (counter-clockwise) until it will turn no further. The dial mechanism should work freely with the tuner push button pressed in.)

After you have selected the new station, pull the "Reset" button all the way out and rotate the button to the right (clockwise) to lock the tuner mechanism. Be sure the button is turned until it will turn no further.

MODEL 636, Series B
Schematic, Voltage
Socket, Trimmers
Alignment

BELMONT RADIO CORP.

RESISTORS

R1	130218	5M ohm-1/2 w.
R2	13020	100M ohm-1/2 w.
R3	13094	50M ohm-1/2 w.
R4	130235	25 ohm-1 watt
R5	130100	150M ohm-1/2 w.
R6	130100	150M ohm-1/2 w.
R7	130203	40 ohm-1/2 w.
R8	1304	3 megohm-1/2 w.
R9	13012	50M ohm-1/2 w.
R10	101127	1 megohm volume control
R11	130257	5 megohm-1/2 w.
R12	13011	250M ohm-1/2 w.
R13	1303	500M ohm-1/2 w.
R14	130166	150 ohm-1/2 w.
R15	130287	1200 Ohm-1 Watt
R16	130296	200 Ohm-1 Watt

CONDENSERS

C1	102104B	2 gang variable condenser
C2	12951	.00025 Mica
C3	129146	.0006 Mica
C4	10026	70 x 400 V.
C5		Antenna Trimmer on gang
C6		Oscillator trimmer on gang
C7	1001	.1 x 400 V.
C8	1006	.25 x 200 V.
C9	1295	.0001 Mica
C10	1295	.05 x 200 V.
C11	1295	.0001 Mica
C12	1295	.0001 Mica
C13	10012	.003 x 600 V.
C14	100110	2 x 400 V.
C15	11994	20 mfd. lytic-150 w. v.
C16	11994	40 mfd. lytic-150 w. v.
C17	1295	.0001 Mica
C18	10078	.01 x 200 V.
C19	11994	20 mfd.-150 v. lytic
C20	10026	.02 x 400 V.


C15, C16, and C19 in same unit

- I.F. 465 KC
- 1—Type 12SK7 R. F. Amplifier.
 - 1—Type 12SA7 Mixer, First Detector-oscillator.
 - 1—Type 12SK7 I. F. Amplifier.
 - 1—Type 12SQ7 Second Detector, A.V.C. and First Audio.
 - 1—Type 35L6GT Beam Output Amplifier.
 - 1—Type 35Z5GT High Vacuum Rectifier.

PARTS

T1	111139	Loop Antenna
T2	110128	Oscillator Coil
T3	108140F	Input I. F. Coil
T4	108145B	Output I. F. Coil
T5	105104	Output Transformer
T6	114180	5" P.M. Dynamic Speaker
L1	1237	Antenna Loading Coil
P1	107249	6-8 volt, Pilot light - T-47
S1		Off-on Switch on Volume Control

For alignment procedure, see instructions for Belmont Model 635, Series A.

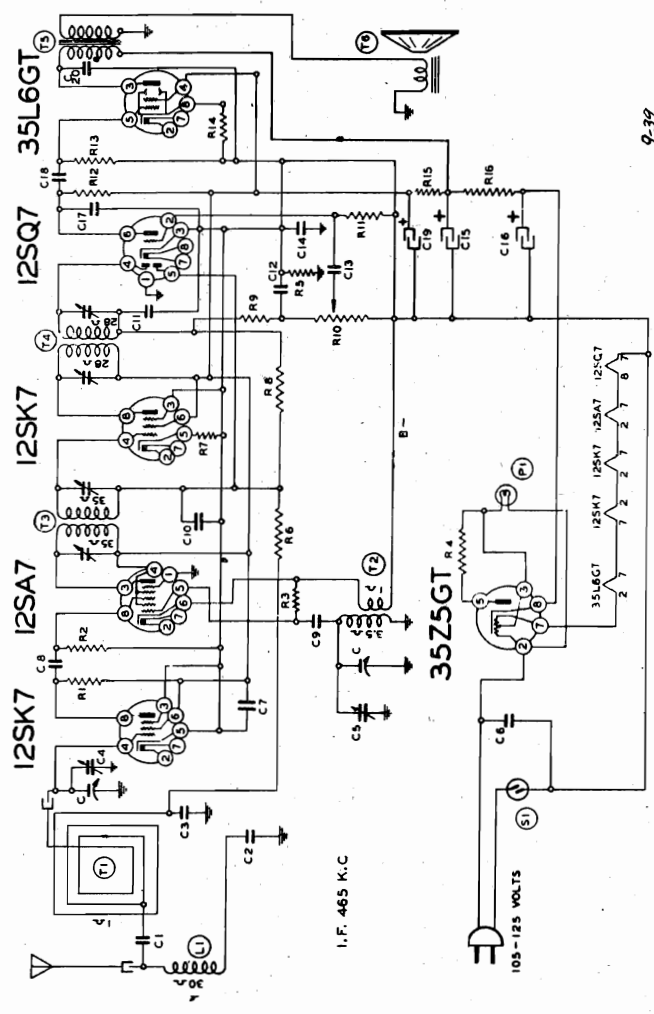

9-39


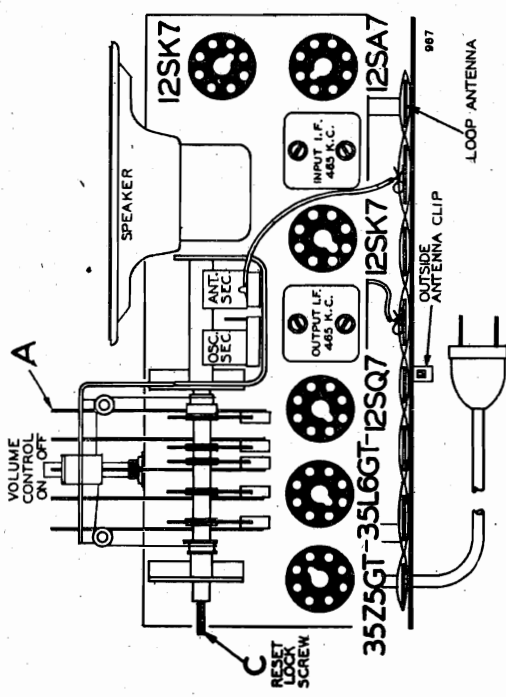


FIG. 1—TOP VIEW

BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED WITH 400 OHM PER VOLT VOLTMETER BETWEEN SOCKET TERMINALS AND B-
(1) CANNOT BE MEASURED WITH VOLTMETER.
* OSCILLATOR VOLTAGE SHOULD BE MEASURED WITH A P. CHOICE IN SERIES.

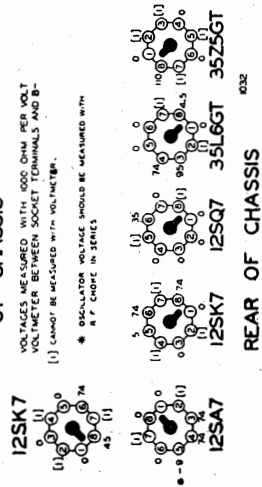

802

MODEL 637
Alignment, Notes

BELMONT RADIO CORP.

TUBES:
The tube complement of this chassis consists of the following octal base glass and metal tubes.

- The type and function of each tube is as follows.
- 1—Type 12SK7 R. F. Amplifier.
 - 1—Type 12SA7 Mixer, First Detector-oscillator.
 - 1—Type 12SK7 I. F. Amplifier.
 - 1—Type 12SQ7 Second Detector, A.V.C. and First Audio.
 - 1—Type 35L6GT Beam Output Amplifier.
 - 1—Type 35Z5GT High Vacuum Rectifier.

SERVICE NOTES:

Volts taken from different points of circuit to chassis are measured with volume control at minimum, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.

All voltages as indicated on the voltage chart are measured with 117 volt A.C. or D.C. line.

Resistances of coil windings are indicated in ohms on the schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

Excessive hum, stuttering, low volume and a reduc-

ALIGNING INSTRUCTIONS:

CAUTION:—No aligning adjustments should be attempted without first thoroughly checking over all other possible causes of trouble, such as poor installations, open or grounded antenna systems, low line voltage, defective tubes, condensers and resistors. In order to properly align this radio, the chassis should be removed from the cabinet. It is important during alignment that the same distance between the loop antenna and the chassis be maintained as when the chassis is installed in the cabinet.

IMPORTANT: SEE ALIGNING INSTRUCTIONS.

- Loop antenna connected to radio.
- Volume control—Maximum all adjustments.
- Connect radio ground to ground post of signal generator with a short heavy lead.
- Connect dummy antenna value in series with generator output lead.
- Connect output meter across primary of output transformer.
- Allow chassis and signal generator to "heat up" for several minutes.

ALIGNMENT PROCEDURE

The following equipment is required for aligning.

- An all wave signal generator which will provide an accurately calibrated signal at the test frequencies as listed.
- Output indicating meter.
- Non-metallic screwdriver.
- Dummy antennas—1 mf., 200 mmf.

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Band Switch	Variable Condenser Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Grid of 12SK7 I. F.	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Grid of 12SA7 Mixer	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Input I. F.	Adjust to maximum output
SHORT WAVE BAND	4050 Kc.	200 mmf.	Antenna Clip	Short Wave	Rotor full open (Plates out of mesh)	Trimmer C7 (See Fig. 3)	Short Wave oscillator	Adjust to maximum output
	3500 Kc.	200 mmf.	Antenna Clip	Short Wave	Set Dial at 3.5 Mc.	Trimmer C3 (See Fig. 3)	Short Wave antenna	Adjust to maximum output
	1650 Kc.	200 mmf.	Antenna Clip	Short Wave	Set Dial at 1.65 Mc.	Trimmer C10 (See Fig. 3)	Short Wave oscillator series pad	Adjust to maximum, rock dial. (See note "A")
BROAD-CAST BAND	1550 Kc.	200 mmf.	Antenna Clip	Broadcast	Rotor full open (Plates out of mesh)	Trimmer C3 (See Fig. 3)	Broadcast oscillator	Adjust to maximum output
	1400 Kc.	200 mmf.	Antenna Clip	Broadcast	Set Dial at 1400 Kc.	Trimmer C4 (See Fig. 3)	Broadcast antenna	Adjust to maximum output
	600 Kc.	200 mmf.	Antenna Clip	Broadcast	Set Dial at 600 Kc.	Trimmer C9 (See Fig. 3)	Broadcast oscillator series pad	Adjust to maximum, rock dial. (See note "B")

NOTE "A"—Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.

NOTE "B"—Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.

Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.

After each band is completed, repeat the procedure as a final check.

BAND SWITCH	BAND	FREQUENCY RANGE
Extreme Right Rotation	Short Wave	1.5 to 4.0 MC.
Extreme Left Rotation	Broadcast	540 to 1550 KC.
Power Consumption		35 Watts
Power Output	1.25 Watts Undistorted, 1.8 Watts Maximum Intermediate Frequency	465 KC.


Serial 9K188300 up
Schematic, Voltage, Socket
Trimmers

BELMONT RADIO CORP.

MODELS 708-391, 708-398
708-378, etc.
Chassis 708, Series A
First Audio Output
6SQ7 6V6G

R. F. Amplifier 6SK7 First Detector-Oscillator 6K8 I. F. Amplifier 6K7

NOTE: WHEN USING SINGLE WIRE ANT. CONNECT DOUBLET TO GROUND.

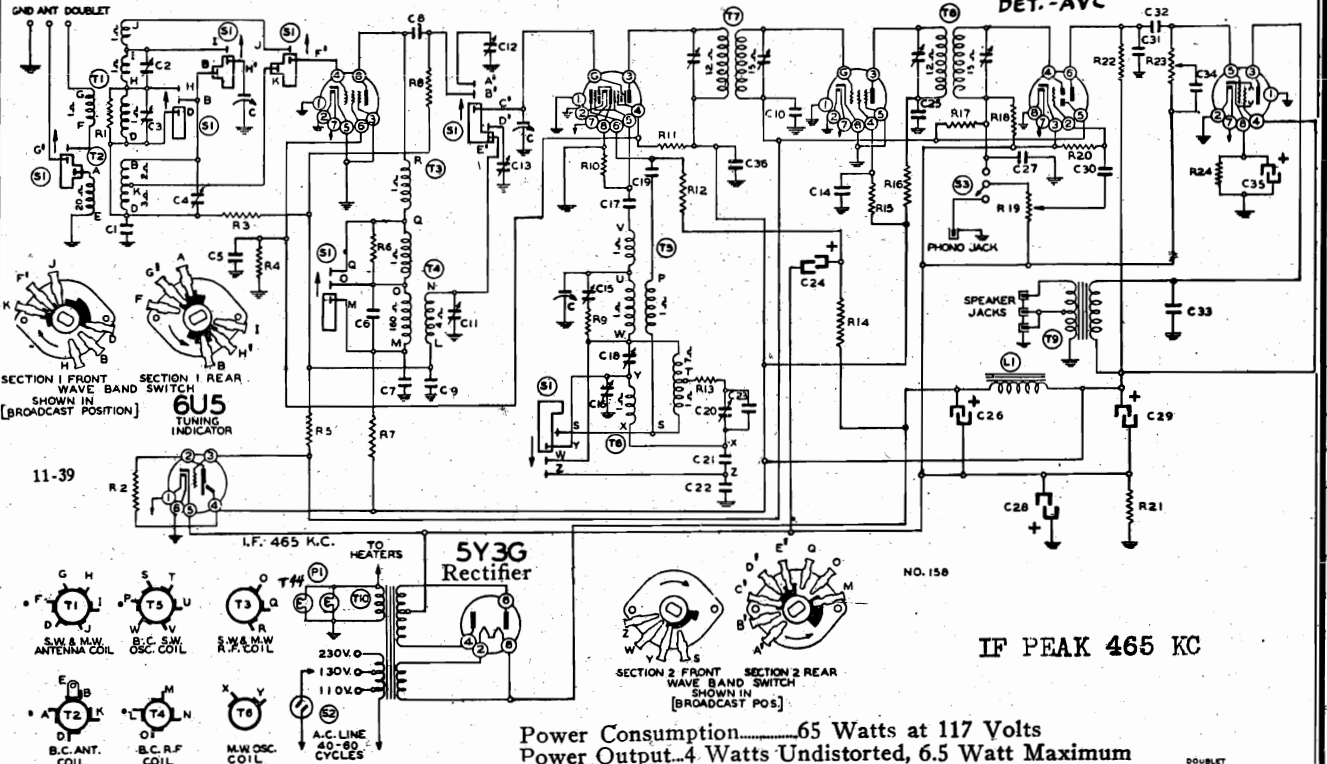

SECTION 1 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POSITION]

SECTION 1 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 2 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 2 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 1 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POSITION]

SECTION 1 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 2 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 2 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 1 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POSITION]

SECTION 1 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 2 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 2 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 1 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POSITION]

SECTION 1 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 2 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 2 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 1 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POSITION]

SECTION 1 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]
















SECTION 2 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 2 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 1 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POSITION]

SECTION 1 REAR WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]

SECTION 2 FRONT WAVE BAND SWITCH SHOWN IN [BROADCAST POS.]



IF PEAK 465 KC

Power Consumption.....65 Watts at 117 Volts
Power Output..4 Watts Undistorted, 6.5 Watt Maximum

Chassis No. 708—Series A
(Serial No. 9K188300 and up)

For Models 708-391,
708-398 and 708-378, Etc.

RESISTORS

R1	13094	50M ohm— $\frac{1}{2}$ w.—10%
R2	1303	500M ohm— $\frac{1}{2}$ w.
R3	13020	100M ohm
R4	13012	50M ohm— $\frac{1}{2}$ w.
R5	13026	1000 ohm— $\frac{1}{2}$ w.
R6	130232	25M ohm— $\frac{1}{2}$ w.
R7	13026	1000 ohm— $\frac{1}{2}$ w.
R8	13019	1 megohm— $\frac{1}{2}$ w.
R9	13097	200 ohm— $\frac{1}{2}$ w.
R10	13012	50M ohm— $\frac{1}{2}$ w.
R11	130304	12M ohm—2 watt
R12	13017	10M ohm— $\frac{1}{2}$ w.
R13	130299	10 ohm— $\frac{1}{2}$ w.
R14	13017	10M ohm— $\frac{1}{2}$ w.
R15	13020	100M ohm— $\frac{1}{2}$ w.
R16	13023	2M ohm— $\frac{1}{2}$ w.
R17	1304	3 megohm— $\frac{1}{2}$ w.
R18	1304	3 megohm— $\frac{1}{2}$ w.
R19	101205	1 megohm volume control
R20	130225	15 megohm— $\frac{1}{2}$ w.
R21	130303	35 ohm— $\frac{1}{2}$ w.
R22	1309	200M ohm— $\frac{1}{2}$ w.
R23	101206	150M ohm tone control
R24	130227	250 ohm—1 watt

CONDENSERS

C	102121	3 gang variable condenser
C1	10090	.02 x 400 v.
C2	124118	S.W. Antenna Trimmer
C3	124118	M.W. Antenna Trimmer
C4	124118	B.C. Antenna Trimmer
C5	10013	.05 x 400 v.
C6	12938	.00005 mica
C7	10090	.02 x 400 v.
C8	10090	.02 x 400 v.
C9	10090	.02 x 400 v.
C10	1009	.05 x 200 v.
C11	124119	B.C. R.F. Trimmer
C12	124119	S.W. R.F. Trimmer
C13	124119	M.W. R.F. Trimmer
C14	10013	.05 x 400 v.
C15	124119	S.W. Oscillator Trimmer
C16	124119	M.W. Oscillator Trimmer
C17	12962	.00003 Mica
C18	124119	B.C. Oscillator Trimmer
C19	10025	.002 x 600 v.
C20	124119	B.C. Padding Condenser
C21	129149	.0028 Compression M.W. Pad
C22	129105	.0035 Compression S.W. Pad
C23	12959	.0003 mica
C24	11981	16 uf. lytic x 400 w. v.
C25	1001	.1 x 400 v.

C26	119100	30 uf. lytic x 450 w. v.
C27	1295	.0001 mica
C28	11991	40 uf. lytic x 25 w. v.
C29	119100	30 uf. lytic x 450 w. v.
C30	10025	.002 x 600 v.
C31	12912	.00025 mica
C32	10013	.05 x 400 v.
C33	10097	.02 x 400 v.
C34	10078	.01 x 200 v.
C35	119100	40 uf. lytic—25 w. v.
C36	10013	.05 x 400 v.

C26, C29, and C35 in same unit.


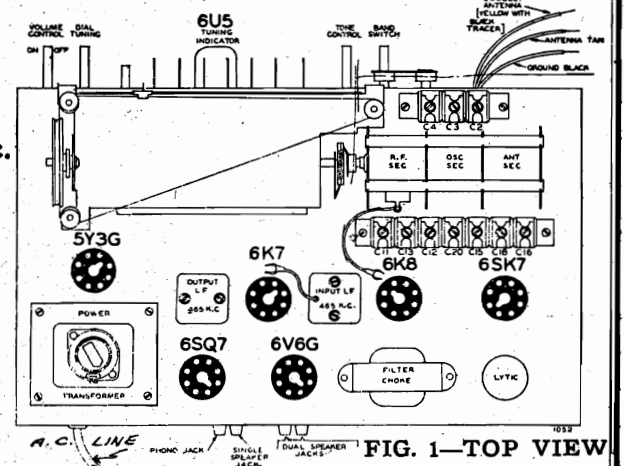


FIG. 1—TOP VIEW

VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMMETER BETWEEN SOCKET TERMINALS AND CHASSIS.

[A] CANNOT BE READ WITH VOLTMETER...
[B] 5 VOLTS A.C. BETWEEN PINS 2 & 8
[C] USING 250 VOLT SCALE ON VOLTMETER.

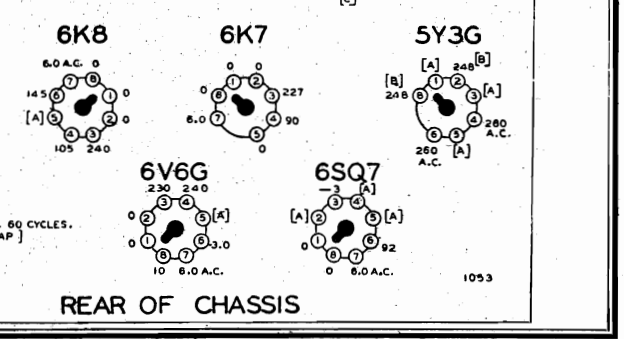

REAR OF CHASSIS

MODEL 791

Schematic, Voltage, Socket.

BELMONT RADIO CORP.

Oct. '39

FOR ALIGNMENT SEE INDEX

The type and function of each tube is as follows:

- 1—Type 12A8GT First Detector-oscillator.
- 1—Type 12SK7 Remote Cut-Off Pentode, I. F. Amplifier (465 K. C.)
- 1—Type 12Q7GT Duplex Diode Triode Second Detector, A.V.C. and First Audio.
- 1—Type 12Q7GT Phase Inverter.
- 2—Type 35L6GT Push-Pull Output Amplifier.
- 1—Type 35Z4GT High Vacuum Rectifier.

Transformers are available and chassis are sometimes equipped with universal transformers for operation on 25, 40 and 60 cycles and with primary taps for 110, 130, and 230 volts, (see parts list).

Circuit Diagram Ref. No. Part No. Description


CONDENSERS

C	102123	2 gang variable condenser
C1	124117	B.C. Adj. Trimmer (Antenna)
C2	124116	S.W. Adj. Trimmer (Antenna)
C3	124112	S.W. Adj. Trimmer (Oscillator)
C4	124112	B.C. Adj. Trimmer (Oscillator)
C5	1292	.0005 mica
C6	100104	.5 x 100 v.
C7	12939	.00005 mica
C8	124113	B.C. Series Pad
C9	1009	.05 x 200 v.
C10	124113	S.W. Series Pad
C11	10020	1 x 200 v.
C12	1009	.05 x 200 v.
C13	1295	.0001 mica
C14	1295	.0001 mica
C15	10025	.002 x 600 v.
C16	1292	.005 mica
C17	10020	1 x 200 v.
C18	19101	20 mid. lyric
C19	19101	40 mid. lyric
C20	19101	40 mid. lyric
C21	10026	.02 x 400 v.
C22	1298	.0006 mica
C23	100112	.001 x 200 v.
C24	10026	.02 x 400 v.
C25	10087	.01 x 600 v.

FREQUENCY RANGE
5.7 to 18.3 MC.
540 to 1550 KC.

PARTS

T1	11157	Loop Antenna (Complete)
T2	11162	Loop Adjusting Coil
T3	11163	S.W. Antenna Coil
T4	10133	B.C. S.W. Oscillator Coil
T5	10163C	Input I.F.—465 kc.
T6	10163D	6" P.M. Speaker
T7	14182	Output Transformer
T8	10596	Power Transformer
T9	104175B	Band Switch
S1	125100	Phono Radio Switch
S2	12570	Tone Switch
S3	12599	Off-on switch on volume control
S4	1233	R.F. Choke
L1	10794	6-8 v. pilot light

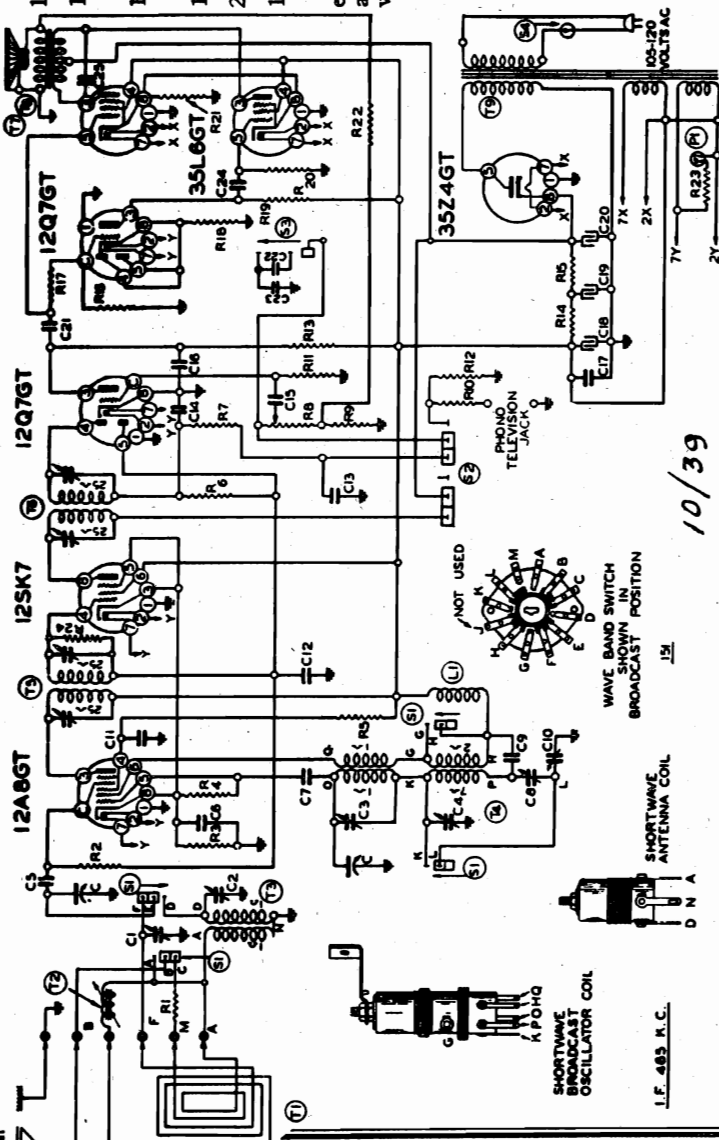


Power Consumption.....55 Watts

Power Output 3 Watts Undistorted, 3.6 Watts Maximum

Diagram Ref. No. Part No. Description

RESISTORS

R1	13079	400 ohm—1/4 w.
R2	13019	1 megohm—1/4 w.
R3	13018	100 ohm—1/4 w.
R4	13012	50M ohm—1/4 w.
R5	130149	15M ohm—1/4 w.
R6	130170	3 megohm—1/4 w.
R7	13012	50M ohm—1/4 w.
R8	10195	1 megohm—volume control
R9	130215	25 ohm—1/4 w.
R10	13038	2 megohm—1/4 w.
R11	130225	15 megohm—1/4 w.
R12	13019	1 megohm—1/4 w.
R13	1909	200M ohm—1/4 w.
R14	130294	1200 ohm—1/4 w.
R15	130294	1200 ohm—1/4 w.
R16	130236	30M ohm—1/4 w.
R17	130102	500M ohm—1/4 w.
R18	13022	5M ohm—1/4 w.
R19	1309	200M ohm—1/4 w.
R20	130102	500M ohm—1/4 w.
R21	13097	200 ohm—1/4 w.
R22	130168	100 ohm—1/4 w.
R23	130301	25 ohm—1/4 w.
R24	13019	1 megohm—1/4 w.

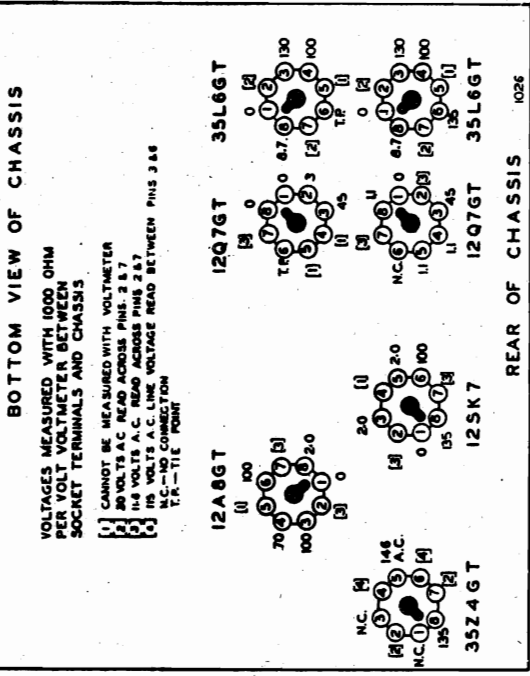


BELMONT RADIO CORP.

MODEL 792, Series A
Schematic, Voltage
Socket

The tube complement of this chassis consists of the following octal base glass and metal tubes:

The type and function of each tube is as follows:

- 1—Type 12A8GT First Detector-oscillator.
- 1—Type 12SK7 Remote Cut-Off Pentode, I. F. Amplifier (465 K. C.).
- 1—Type 12Q7GT Duplex Diode Triode Second Detector, A.V.C. and First Audio.
- 1—Type 12Q7GT Phase Inverter.
- 2—Type 35L6GT Push-Pull Output Amplifier.
- 1—Type 35Z4GT High Vacuum Rectifier.

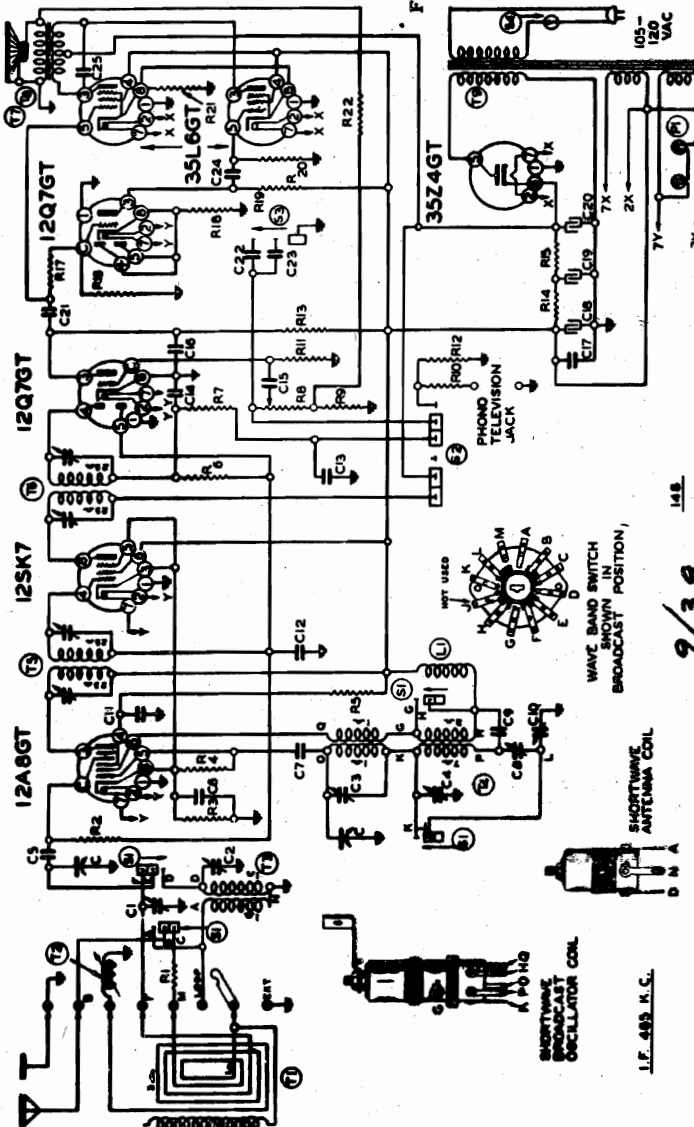

CONDENSERS

- 2 gang variable condenser
- B. C. Adj. Trimmer (Antenna)
- S. W. Adj. Trimmer (Antenna)
- S. W. Adj. Trimmer (Oscillator)
- B. C. Adj. Trimmer (Oscillator)
- .0005 mica
- .3 x 100 v.
- .0008 mica
- .001 mica
- .05 x 200 v.
- B. C. Series Pad
- .05 x 200 v.
- S. W. Series Pad
- .1 x 200 v.
- .05 x 200 v.
- .0001 mica
- .0001 mica
- .002 x 600 v.
- .0005 mica
- .1 x 200 v.
- 20 mfd. electrolytic
- 20 mfd. electrolytic
- 40 mfd. electrolytic
- .02 x 400 v.
- .0006 mica
- .001 x 200 v.
- .02 x 400 v.
- .003 x 600 v.
- C1 and C2 in same unit
- C8 and C10 in same unit
- C18, C19 and C20 in same unit
- C3 and C4 in same unit.

FREQUENCY RANGE

- 5.7 to 18.3 MC.
- 540 to 1550 KC.

RESISTORS

- 400 ohm—1/2 w.
- 1 megohm—1/2 w.
- 100 ohm—1/2 w.
- 50M ohm—1/2 w.
- 15M ohm—1/2 w.
- 3 megohm—1/2 w.
- 50M ohm—1/2 w.
- 1 megohm—volume control
- 25 ohm—1/2 w.
- 2 megohm—1/2 w.
- 15 megohm—1/2 w.
- 1 megohm—1/2 w.
- 200M ohm—1/2 w.
- 1200 ohm—1/2 w.
- 1200 ohm—1/2 w.
- 300M ohm—1/2 w.
- 500M ohm—1/2 w.
- 5M ohm—1/2 w.
- 200M ohm—1/2 w.
- 500M ohm—1/2 w.
- 200 ohm—1/2 w.
- 100 ohm—1/2 w.

POWER CONSUMPTION

- Power Output 3 Watts Undistorted, 3.6 Watts Maximum
- Power Consumption 55 Watts

RESISTORS


- 400 ohm—1/2 w.
- 1 megohm—1/2 w.
- 100 ohm—1/2 w.
- 50M ohm—1/2 w.
- 15M ohm—1/2 w.
- 3 megohm—1/2 w.
- 50M ohm—1/2 w.
- 1 megohm—volume control
- 25 ohm—1/2 w.
- 2 megohm—1/2 w.
- 15 megohm—1/2 w.
- 1 megohm—1/2 w.
- 200M ohm—1/2 w.
- 1200 ohm—1/2 w.
- 1200 ohm—1/2 w.
- 300M ohm—1/2 w.
- 500M ohm—1/2 w.
- 5M ohm—1/2 w.
- 200M ohm—1/2 w.
- 500M ohm—1/2 w.
- 200 ohm—1/2 w.
- 100 ohm—1/2 w.

RESISTORS

- 400 ohm—1/2 w.
- 1 megohm—1/2 w.
- 100 ohm—1/2 w.
- 50M ohm—1/2 w.
- 15M ohm—1/2 w.
- 3 megohm—1/2 w.
- 50M ohm—1/2 w.
- 1 megohm—volume control
- 25 ohm—1/2 w.
- 2 megohm—1/2 w.
- 15 megohm—1/2 w.
- 1 megohm—1/2 w.
- 200M ohm—1/2 w.
- 1200 ohm—1/2 w.
- 1200 ohm—1/2 w.
- 300M ohm—1/2 w.
- 500M ohm—1/2 w.
- 5M ohm—1/2 w.
- 200M ohm—1/2 w.
- 500M ohm—1/2 w.
- 200 ohm—1/2 w.
- 100 ohm—1/2 w.


RESISTORS

- 400 ohm—1/2 w.
- 1 megohm—1/2 w.
- 100 ohm—1/2 w.
- 50M ohm—1/2 w.
- 15M ohm—1/2 w.
- 3 megohm—1/2 w.
- 50M ohm—1/2 w.
- 1 megohm—volume control
- 25 ohm—1/2 w.
- 2 megohm—1/2 w.
- 15 megohm—1/2 w.
- 1 megohm—1/2 w.
- 200M ohm—1/2 w.
- 1200 ohm—1/2 w.
- 1200 ohm—1/2 w.
- 300M ohm—1/2 w.
- 500M ohm—1/2 w.
- 5M ohm—1/2 w.
- 200M ohm—1/2 w.
- 500M ohm—1/2 w.
- 200 ohm—1/2 w.
- 100 ohm—1/2 w.

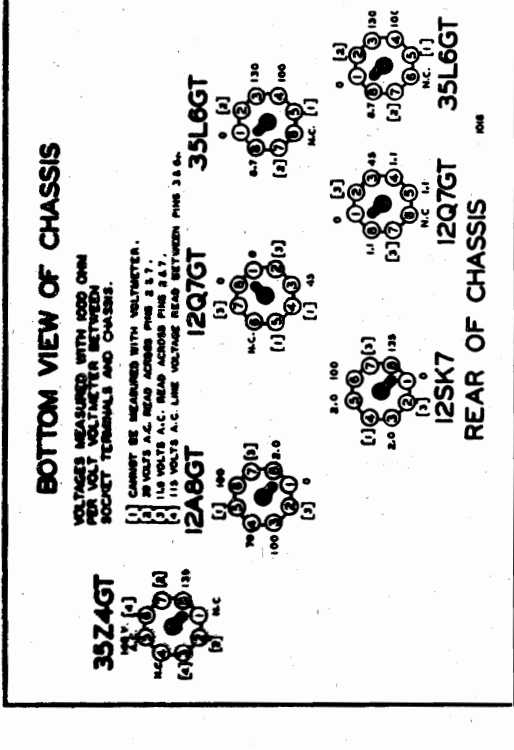

BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED WITH 500 OHM VOLTMETER BETWEEN SOCKET TERMINALS AND CHASSIS.

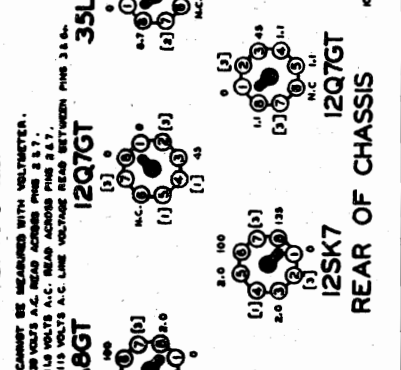

MODEL 791
MODEL 792, Series A
Alignment, Trimmers

BELMONT RADIO CORP.

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Band Switch	Condenser Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Grid of 12SK7	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 2)	Output	Adjust to maximum output
	465 Kc.	.1 MFD.	Grid of 12A8GT Mixer	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 2)	Input	Adjust to maximum output
SHORT WAVE BAND (See Note A)	17 Mc.	400 Ohms	External Antenna and Ground	Short Wave	Set Dial at 17 Mc.	Trimmer C3 (See Fig. 2)	Short Wave oscillator	Adjust to maximum output
	17 Mc.	400 Ohms	External Antenna and Ground	Short Wave	Set Dial at 17 Mc.	Trimmer C2 (See Fig. 4)	Short Wave antenna	Adjust to maximum output
	6 Mc.	400 Ohms	External Antenna and Ground	Short Wave	Set Dial at 6 Mc.	Trimmer C10 (See Fig. 4)	Short Wave oscillator series pad	Adjust to maximum rock dial. (See note "C")
BROADCAST BAND (See Note A)	1550 Kc.	200 mmi.	Grid of 12A8GT	Broadcast	Rotor full open (Plates out of mesh)	Trimmer C4 (See Fig. 2)	Broadcast oscillator	Adjust to maximum output
	540 Kc.	200 mmi.	Grid of 12A8GT	Broadcast	Set Dial at 540 Kc.	Trimmer C3 (See Fig. 4)	Broadcast oscillator series pad	Adjust to maximum output
LOOP ALIGNMENT (See Note B)	1400 Kc.	200 mmi.	External Antenna and Ground	Broadcast	Set Dial at 1400 Kc.	Trimmer C1 (See Fig. 2)	Broadcast antenna	Adjust to maximum output
	600 Kc.	200 mmi.	External Antenna and Ground	Broadcast	Set Dial at 600 Kc.	Trimmer T2 (See Fig. 2)	Iron Core Tracking Coil	Adjust to maximum output

(See Fig. 2) FOR MODEL 792-SERIES A.

NOTE "A"—The signal generator is connected to the "ANT." and "GND." terminals on the rear of the chassis when aligning the Short Wave Band and to the grid of the 12A8GT tube and ground terminal when setting the Broadcast Band oscill or end frequencies, (1550 and 540 K.C.).

The loop antenna need not be connected to the radio when making these adjustments.

NOTE "B"—Loop alignment is made with the chassis mounted in the cabinet and the

loop antenna connected to the terminal board. The signal generator is connected to the "ANT." and "GND." terminals. (See Fig. 1).

NOTE "C"—Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.

Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.

After each band is completed, repeat the procedure as a final check.

NOTE:— FIGURES TO LEFT REFER TO MODEL 791;
 FIGURES TO RIGHT REFER TO MODEL 792 Series A.

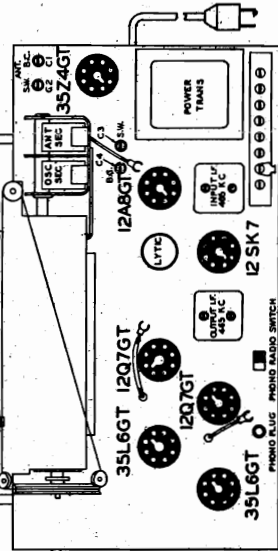
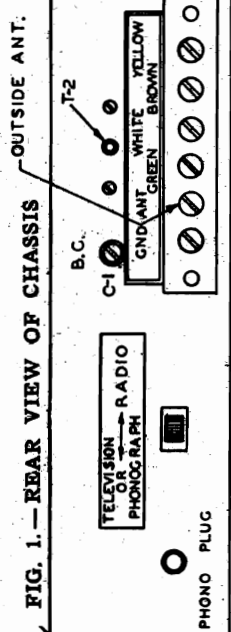
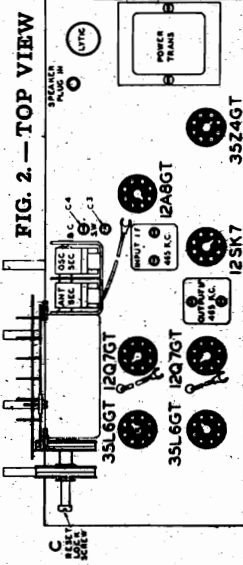
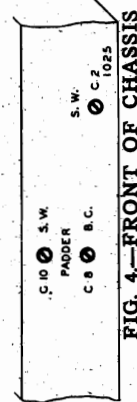


FIG. 2.—TOP VIEW


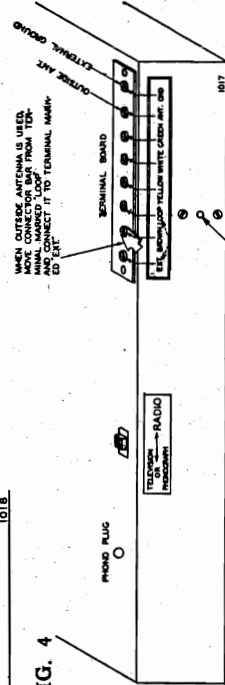


FIG. 1.—REAR VIEW OF CHASSIS

Schematic, Voltage, Socket **BELMONT RADIO CORP.** MODEL 792, Series B
 Trimmers Serial 9L200500 up Phase Inverter

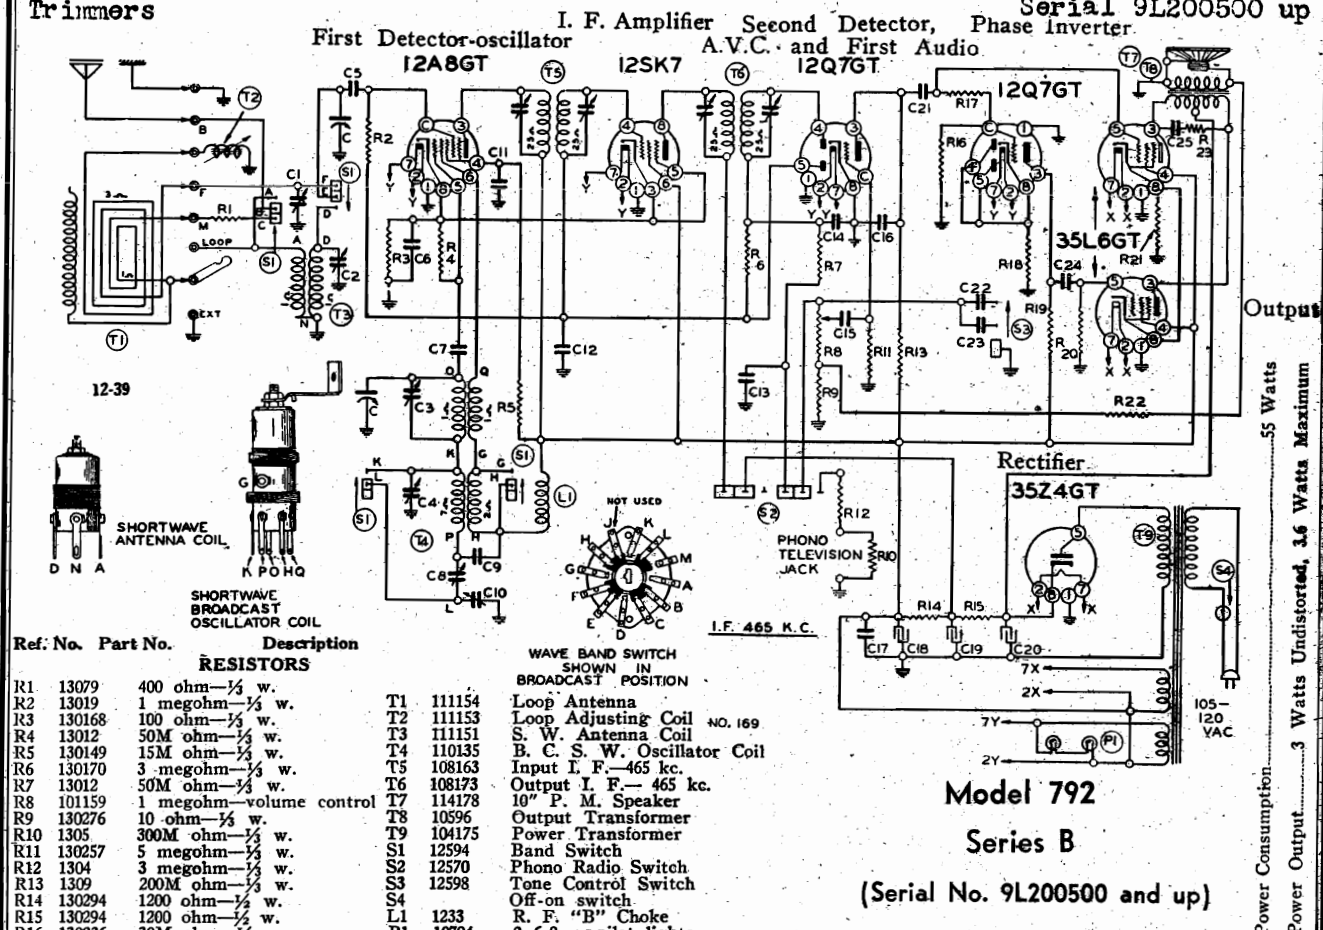

Ref. No. Part No. Description

RESISTORS

R1	13079	400 ohm—1/4 w.
R2	13019	1 megohm—1/4 w.
R3	130168	100 ohm—1/4 w.
R4	13012	50M ohm—1/4 w.
R5	130149	15M ohm—1/4 w.
R6	130170	3 megohm—1/4 w.
R7	13012	50M ohm—1/4 w.
R8	101159	1 megohm—volume control
R9	130276	10 ohm—1/4 w.
R10	1305	300M ohm—1/4 w.
R11	130257	5 megohm—1/4 w.
R12	1304	3 megohm—1/4 w.
R13	1309	200M ohm—1/4 w.
R14	130294	1200 ohm—1/4 w.
R15	130294	1200 ohm—1/4 w.
R16	130236	30M ohm—1/4 w.
R17	130102	500M ohm—1/4 w.
R18	13022	5M ohm—1/4 w.
R19	1309	200M ohm—1/4 w.
R20	130102	500M ohm—1/4 w.
R21	130296	200 ohm—1 w.
R22	130168	100 ohm—1/4 w.
R23	13094	50M ohm—1/4 w.

CONDENSERS




C	102119	2 gang variable condenser
C1	124111	B. C. Adj. Trimmer (Antenna)
C2	124111	S. W. Adj. Trimmer (Antenna)
C3	124112	S. W. Adj. Trimmer (Oscillator)
C4	124112	B. C. Adj. Trimmer (Oscillator)
C5	1292	.0005 mica
C6	100104	.5 x 100 v.
C7	12939	.00005 mica
C8	124113	B. C. Series Pad
C9	1009	.05 x 200 v.
C10	124113	S. W. Series Pad
C11	10020	.1 x 200 v.
C12	1009	.05 x 200 v.
C13	1295	.0001 mica
C14	1295	.0001 mica
C15	10025	.002 x 600 v.
C16	1292	.0005 mica
C17	10020	.1 x 200 v.
C18	119101	20 mfd. lytic
C19	119101	20 mfd. lytic
C20	119101	40 mfd. lytic
C21	10026	.02 x 400 v.
C22	1298	.0006 mica
C23	100112	.001 x 200 v.
C24	10026	.02 x 400 v.
C25	1001	.1 x 400 v.

WAVE BAND SWITCH SHOWN IN BROADCAST POSITION

T1	111154	Loop Antenna
T2	111153	Loop Adjusting Coil
T3	111151	S. W. Antenna Coil
T4	110135	B. C. S. W. Oscillator Coil
T5	108163	Input I. F.—465 kc.
T6	108173	Output I. F.—465 kc.
T7	114178	10" P. M. Speaker
T8	10596	Output Transformer
T9	104175	Power Transformer
S1	12594	Band Switch
S2	12570	Phono Radio Switch
S3	12598	Tone Control Switch
S4		Off-on switch
L1	1233	R. F. "B" Choke
P1	10794	2 6-8 v. pilot lights

Model 792
Series B
 (Serial No. 9L200500 and up)

Power Consumption..... 55 Watts
 Power Output..... 3 Watts Undistorted, 1.6 Watts Maximum

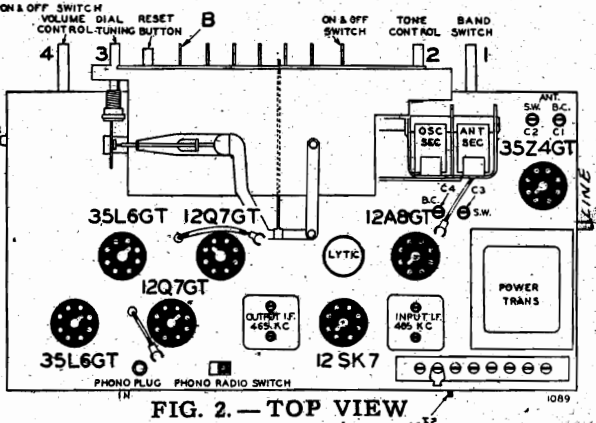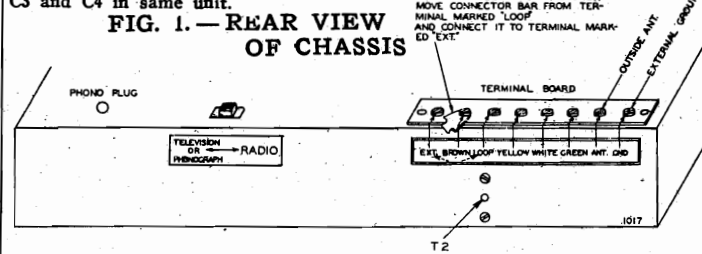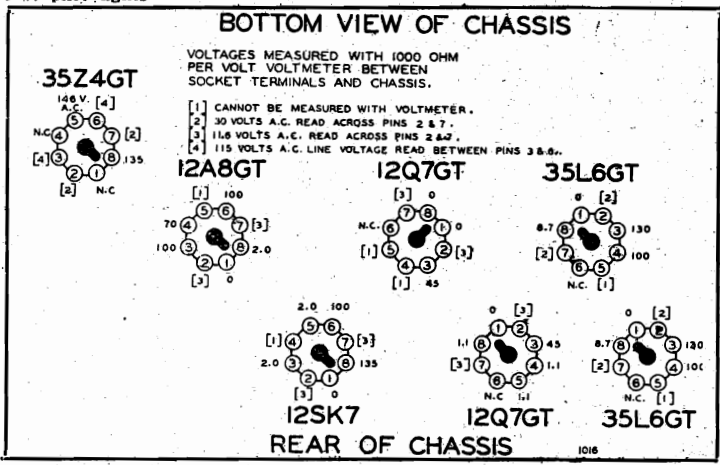

MODEL 792, Series B
MODEL 793, Series B
Alignment, Trimmers

BELMONT RADIO CORP.

CHASSIS 792, 793B. ALIGNMENT PROCEDURE

- Volume control—Maximum all adjustments.
 - Connect radio ground to ground post of signal generator with a short heavy lead.
 - Connect dummy antenna valve in series with generator output lead.
 - Connect output meter across primary of output transformer.
 - Allow chassis and signal generator to "heat up" for several minutes.
- The following equipment is required for aligning.
- An all wave signal generator which will provide an accurately calibrated signal at the test frequencies as listed.
 - Output indicating meter.
 - Non-metallic screwdriver.
 - Dummy antennas—1 mf., 200 mmf., 400 ohms.

SIGNAL GENERATOR

BAND	Frequency Setting	Dummy Antenna	Connection to Radio	Position of Band Switch	Variable Condenser Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Grid of 12SK7 I. F. Mixer	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 2)	Output I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Grid of 12A8GT Mixer	Broadcast	Rotor full (Plates out of mesh)	Two trimmers on top (See Fig. 2)	Input I. F.	Adjust to maximum output
SHORT WAVE BAND (See Note A)	17 Mc.	400 Ohms	External Antenna and Ground	Short Wave	Set Dial at 17 Mc.	Trimmer C3 (See Fig. 5)	Short Wave oscillator	Adjust to maximum output
	17 Mc.	400 Ohms	External Antenna and Ground	Short Wave	Set Dial at 17 Mc.	Trimmer C2 (See Fig. 5)	Short Wave antenna	Adjust to maximum output
	6 Mc.	400 Ohms	External Antenna and Ground	Short Wave	Set Dial at 6 Mc.	Trimmer C10 (See Fig. 4)	Short Wave oscillator series pad	Adjust to maximum rock dial. (See note "C")
BROADCAST BAND (See Note A)	1550 Kc.	200 mmf.	Grid of 12A8GT	Broadcast	Rotor full open (Plates out of mesh)	Trimmer C4 (See Fig. 5)	Broadcast oscillator	Adjust to maximum output
	540 Kc.	200 mmf.	Grid of 12A8GT	Broadcast	Set Dial at 540 Kc.	Trimmer C8 (See Fig. 4)	Broadcast oscillator series pad	Adjust to maximum output
LOOP ALIGNMENT (See Note B)	1400 Kc.	200 mmf.	External Antenna and Ground	Broadcast	Set Dial at 1400 Kc.	Trimmer C1 (See Fig. 5)	Broadcast antenna	Adjust to maximum output
	600 Kc.	200 mmf.	External Antenna and Ground	Broadcast	Set Dial at 600 Kc.	Trimmer T2 (See Fig. 5)	Iron Core Tracking Coil	Adjust to maximum output

It is important during loop alignment that the same distance between the loop antenna and the chassis be maintained as when the chassis is installed in the cabinet.

NOTE "A"—The signal generator is connected to the "ANT." and "GND." terminals on the rear of the chassis when aligning the Short Wave Band and to the grid of the 12A8GT tube and ground terminal when setting the Broadcast Band oscillator end frequencies, (1550 and 540 K.C.).

The loop antenna need not be connected to the radio when making these adjustments.

NOTE "B"—Loop alignment is made with the chassis mounted in the cabinet and the loop antenna connected to the terminal board. The signal generator is connected to the "ANT." and "GND." terminals and the jumper on the terminal board connected to "EXT." terminal (See Fig. 1).

NOTE "C"—Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.

Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.

After each band is completed, repeat the procedure as a final check.


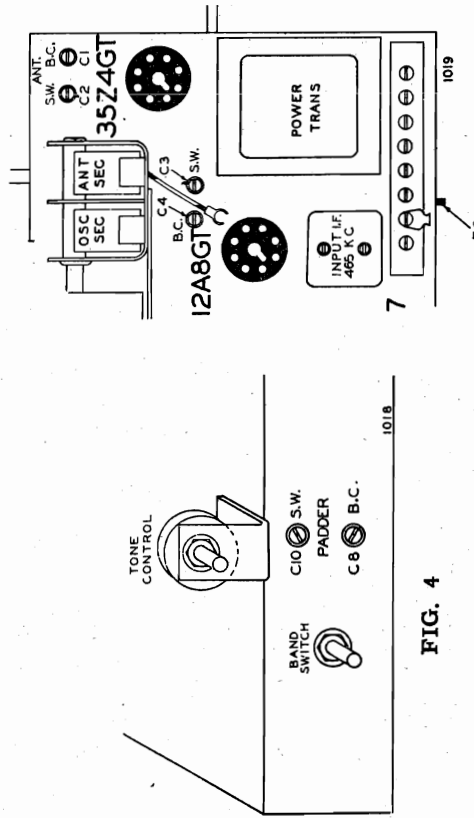


FIG. 4

FIG. 5—TOP VIEW

BELMONT RADIO CORP.

MODEL 793, Series A
Schematic, Voltage
Socket

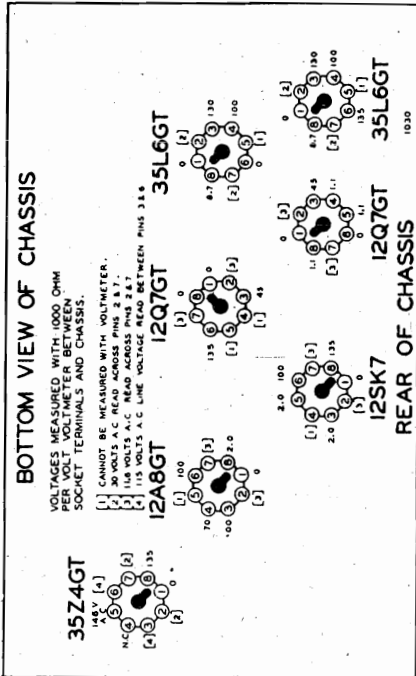

TUBES:


The tube complement of this chassis consists of the following octal base glass and metal tubes:

The type and function of each tube is as follows:

- 1—Type 12A8GT First Detector-oscillator.
- 1—Type 12SK7 Remote Cut-Off Pentode, I. F. Amplifier (465 K. C.).
- 1—Type 12Q7GT Duplex Diode Triode Second Detector, A.V.C. and First Audio.
- 1—Type 12Q7GT Phase Inverter.
- 2—Type 35L6GT Push-Pull Output Amplifier.
- 1—Type 35Z4GT High Vacuum Rectifier.

PARTS

- T1 111154 Loop Antenna
- T2 111153 Loop Adjusting Coil (Iron Core Track.
- T3 111151 S. W. Antenna Coil
- T4 110135 B. C. S. W. Oscillator Coil
- T5 108163 Input I. F. - 465 Kc.
- T6 108163B Output I. F. - 465 Kc.
- T7 114178 10" P. M. Speaker
- T8 10596 Output Transformer
- T9 104174 Power Transformer
- T10 104174 Automatic Record Changer complete
- S1 12594 Band Switch
- S2 125101 Phono. Radio Switch
- S3 12598 Tone Switch
- S4 Off-on switch on volume control
- S5 R. F. "B" Choke
- L1 10794 2.68 v. pilot lights
- P2 107290 Indicator Light

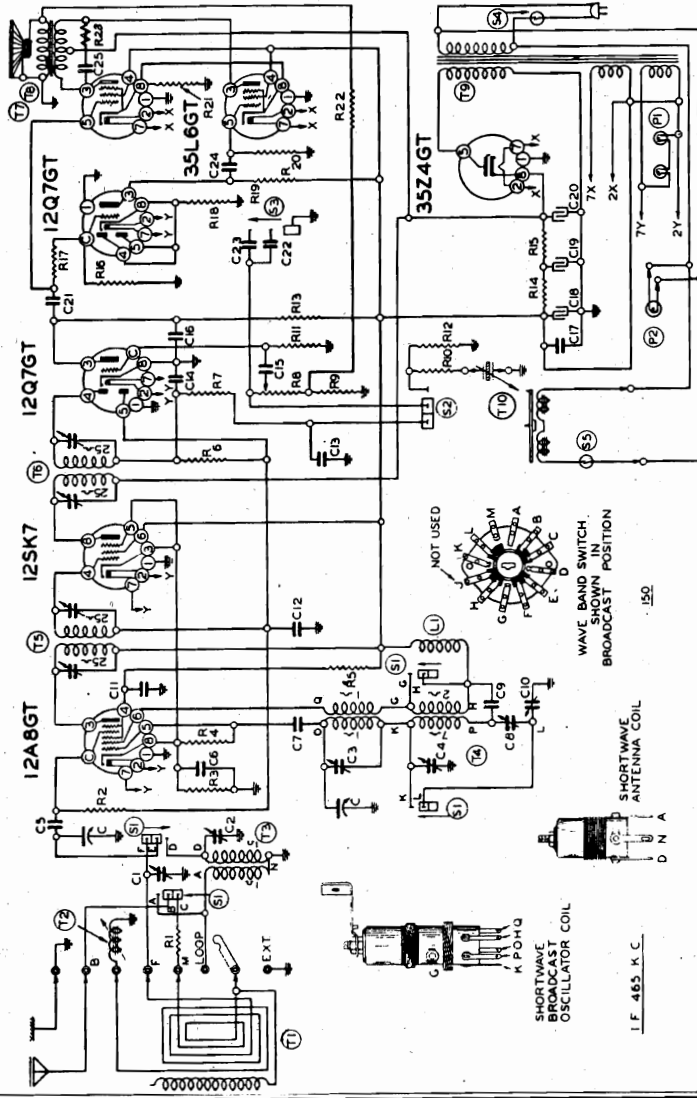

CONDENSERS

- 2 gang variable condenser
- B. C. Adj. Trimmer (Antenna)
- S. W. Adj. Trimmer (Antenna)
- S. W. Adj. Trimmer (Oscillator)
- B. C. Adj. Trimmer (Oscillator)
- .0005 Mica
- .5 x 100 v.
- .0005 Mica
- B. C. Series Pad
- .05 x 200 v.
- S. W. Series Pad
- .1 x 200 v.
- .05 x 200 v.
- .0001 mica
- .0001 mica
- .002 x 600 v.
- .0005 mica
- .1 x 200 v.
- 20 mid. lyric
- 20 mid. lyric
- 40 mid. lyric
- .02 x 400 v.
- .0006 mica
- .001 x 200 v.
- .02 x 400 v.
- .1 x 400 v.

RESISTORS

- | Circuit Diagram Ref. No. | Part No. | Description |
|--------------------------|----------|-------------------------|
| R1 | 13079 | 400 ohm—1/2 w. |
| R2 | 13019 | 1 megohm—1/2 w. |
| R3 | 130168 | 50M ohm—1/2 w. |
| R4 | 13012 | 50M ohm—1/2 w. |
| R5 | 130149 | 15M ohm—1/2 w. |
| R6 | 130170 | 3 megohm—1/2 w. |
| R7 | 13012 | 50M ohm—1/2 w. |
| R8 | 101202 | 1 megohm—volume control |
| R9 | 130276 | 10 ohm—1/2 w. |
| R10 | 13038 | 1 megohm—1/2 w. |
| R11 | 130257 | 2 megohm—1/2 w. |
| R12 | 13019 | 5 megohm—1/2 w. |
| R13 | 1309 | 1 megohm—1/2 w. |
| R14 | 130294 | 200M ohm—1/2 w. |
| R15 | 130294 | 1200 ohm—1/2 w. |
| R16 | 130236 | 30M ohm—1/2 w. |
| R17 | 130102 | 500M ohm—1/2 w. |
| R18 | 13022 | 5M ohm—1/2 w. |
| R19 | 1309 | 200M ohm—1/2 w. |
| R20 | 130296 | 500M ohm—1/2 w. |
| R21 | 130296 | 200 ohm—1/2 w. |
| R22 | 130168 | 100 ohm—1/2 w. |
| R23 | 13094 | 50M ohm—1/2 w. |

MODEL 793, Series A
Alignment, Trimmers
Phono Data

BELMONT RADIO CORP.

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Band Switch	Variable Condenser Setting (Plates out of mesh)	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Grid of 12SK7 I. F.	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 2)	I. F. Input	Adjust to maximum output
	465 Kc.	.1 MFD.	Grid of 12A8GT Mixer	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 2)	I. F. Input	Adjust to maximum output
SHORT WAVE BAND (See Note A)	17 Mc.	400 Ohms	External Antenna and Ground	Short Wave	Set Dial at 17 Mc.	Trimmer C3 (See Fig. 5)	Short Wave oscillator	Adjust to maximum output
	17 Mc.	400 Ohms	External Antenna and Ground	Short Wave	Set Dial at 17 Mc.	Trimmer C2 (See Fig. 5)	Short Wave antenna	Adjust to maximum output
	6 Mc.	400 Ohms	External Antenna and Ground	Short Wave	Set Dial at 6 Mc.	Trimmer C10 (See Fig. 4)	Short Wave oscillator series pad	Adjust to maximum-peak dial. (See note "C.")
BROADCAST BAND (See Note A)	1550 Kc.	200 mmf.	Grid of 12A8GT	Broadcast	Rotor full open (Plates out of mesh)	Trimmer C4 (See Fig. 5)	Broadcast oscillator	Adjust to maximum output
	540 Kc.	200 mmf.	Grid of 12A8GT	Broadcast	Set Dial at 540 Kc.	Trimmer C8 (See Fig. 4)	Broadcast oscillator series pad	Adjust to maximum output
LOOP ALIGNMENT (See Note B)	1400 Kc.	200 mmf.	External Antenna and Ground	Broadcast	Set Dial at 1400 Kc.	Trimmer C1 (See Fig. 5)	Broadcast antenna	Adjust to maximum output
	600 Kc.	200 mmf.	External Antenna and Ground	Broadcast	Set Dial at 600 Kc.	Trimmer T2 (See Fig. 5)	Iron Core Tracking Coil	Adjust to maximum output

NOTE "A"—The signal generator is connected to the "ANT." and "GND." terminals at the rear of the chassis. When aligning the Short Wave Band, connect the 12A8GT tube and ground terminal which setting the Broadcast Band oscillator end frequencies, (1550 and 540 K. C.).

The loop antenna need not be connected to the radio when making these adjustments.

NOTE "B"—Loop alignment is made with the chassis mounted in the cabinet and the loop antenna connected to the terminal board. The signal generator is connected to the "ANT." and "GND." terminals and the jumper on the terminal board connected to "EXT." terminal. (See Fig. 1).

NOTE "C"—Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.

Adjust the signal from the signal generator to prevent the leveling-off action of the AVC.

After each band is completed, repeat the procedure as a final check.

BAND SWITCH	BAND	FREQUENCY RANGE
Extreme Right Rotation	Short Wave	5.7 to 18.3 MC.
Extreme Left Rotation	Broadcast	540 to 1550 KC.
Power Consumption (Radio Chassis only, less Phono Motor)	55 Watts
Power Output	3 Watts Undistorted, 3.6 Watts Maximum
Intermediate Frequency	465 K. C.

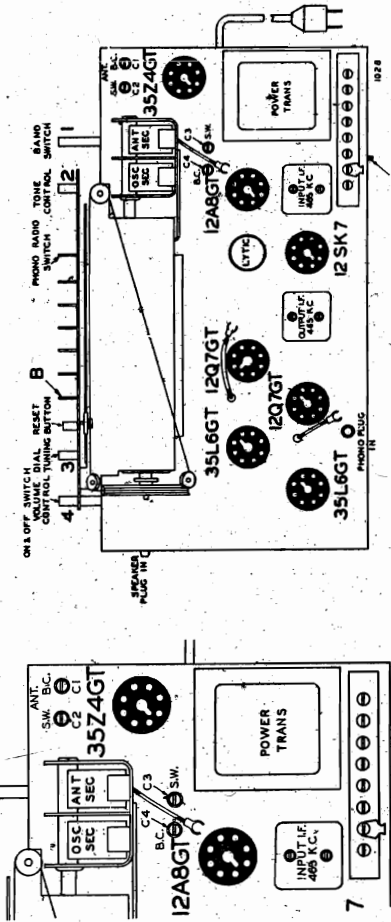


FIG. 2.—TOP VIEW

PHONOGRAPH OPERATION:
 The Phono-Radio switch is of the push button type, (See Button 5, fig. 3).

For Phono operation push Phono push button all the way in. This will disconnect the radio and connect the phonograph pick-up. The volume and tone controls on the front panel of the radio are used for either radio or for phonograph.

To switch back to radio playing position push in on any one of the automatic tuning push buttons or the manual dial tuning control knob.

Included with this manual is a separate instruction manual for the Automatic Record Changer. Before operating the Record Changer familiarize yourself with the controls and the operation of the mechanism.

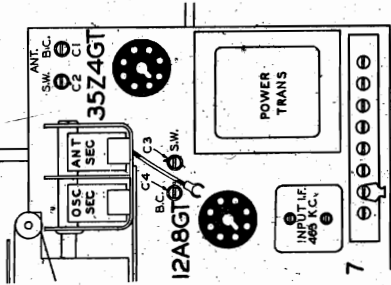


FIG. 5.—TOP VIEW


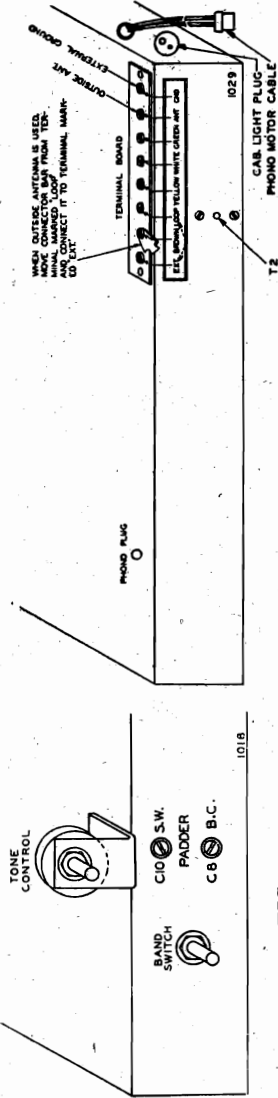


FIG. 1.—REAR VIEW OF CHASSIS

Schematic, Voltage Socket, Trimmers

BELMONT RADIO CORP.

MODEL 793, Series B
Serial 9L199900 up

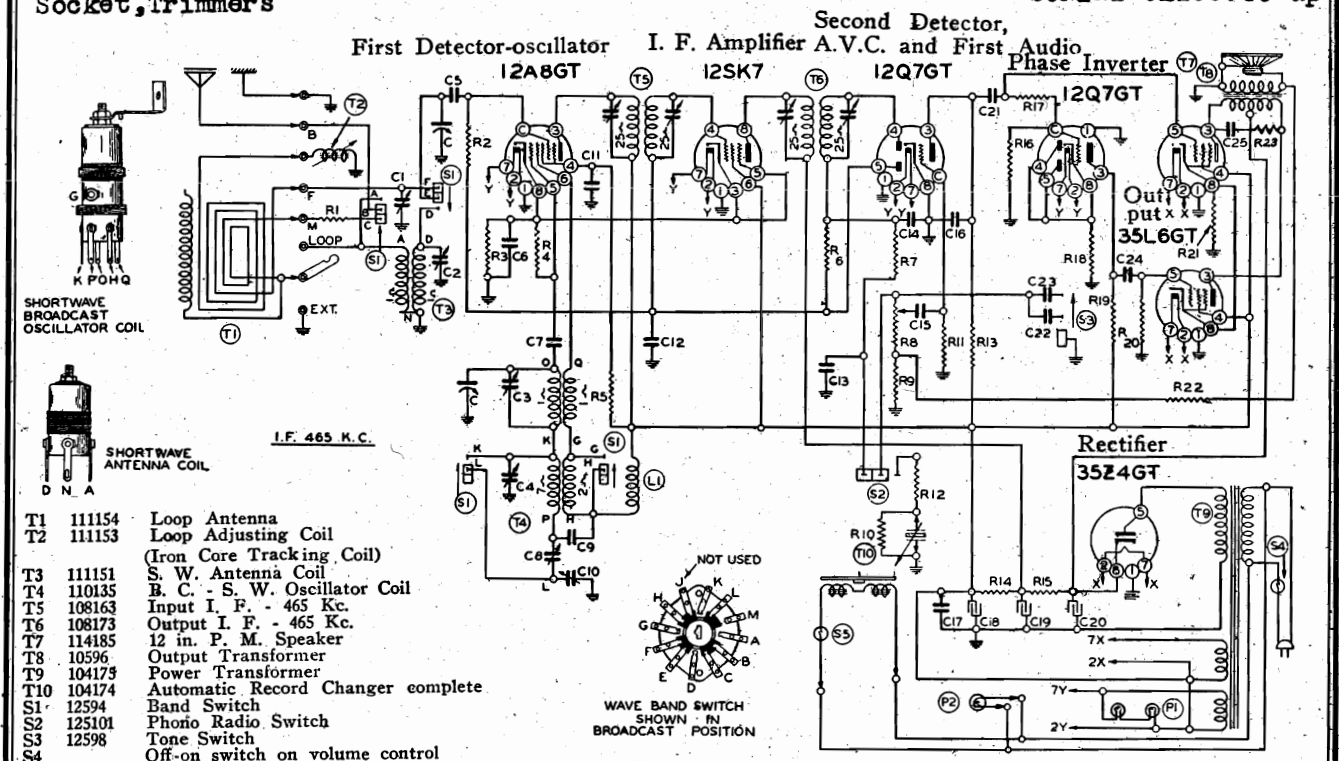

- T1 111154 Loop Antenna
- T2 111153 Loop Adjusting Coil (Iron Core Tracking Coil)
- T3 111151 S. W. Antenna Coil
- T4 110135 B. C. - S. W. Oscillator Coil
- T5 108163 Input I. F. - 465 Kc.
- T6 108173 Output I. F. - 465 Kc.
- T7 114185 12 in. P. M. Speaker
- T8 10596 Output Transformer
- T9 104179 Power Transformer
- T10 104174 Automatic Record Changer complete
- S1 12594 Band Switch
- S2 125101 Phono Radio Switch
- S3 12598 Tone Switch
- S4 Off-on switch on volume control
- S5 Off-on switch on record changer
- L1 1233 R. F. "B" Choke
- P1 10794 2 6-8 v. pilot lights
- P2 107290 Indicator Light

CONDENSERS

- C 102119 2 gang variable condenser
- C1 124111 B. C. Adj. Trimmer (Antenna)
- C2 124111 S. W. Adj. Trimmer (Antenna)
- C3 124112 S. W. Adj. Trimmer (Oscillator)
- C4 124112 B. C. Adj. Trimmer (Oscillator)
- C5 1292 .0005 Mica
- C6 100104 .5 x 100 v.
- C7 12939 .00005 Mica
- C8 124113 B. C. Series Pad
- C9 3009 .05 x 200 v.
- C10 124113 S. W. Series Pad
- C11 10020 .1 x 200 v.
- C12 1009 .05 x 200 v.
- C13 1295 .0001 mica
- C14 1295 .0001 mica
- C15 10025 .002 x 600 v.
- C16 1292 .0005 mica
- C17 10020 .1 x 200 v.
- C18 119101 20 mfd. lytic
- C19 119101 20 mfd. lytic
- C20 119101 40 mfd. lytic
- C21 10026 .02 x 400 v.
- C22 1298 .0006 mica
- C23 100112 .001 x 200 v.
- C24 10026 .02 x 400 v.
- C25 1001 .1 x 400 v.

C1 and C2 in same unit
C8 and C10 in same unit
C18, C19 and C20 in same
C3 and C4 in same unit

RESISTORS


- R1 13079 400 ohm-1/2 w.
- R2 13019 1 megohm-1/2 w.
- R3 130168 100 ohm-1/2 w.
- R4 13012 50M ohm-1/2 w.
- R5 130149 15M ohm-1/2 w.
- R6 130170 3 megohm-1/2 w.
- R7 13012 50M ohm-1/2 w.
- R8 101202 1 megohm- volume control
- R9 130276 10 ohm-1/2 w.
- R10 1305 300M ohm-1/2 w.
- R11 130257 5 megohm-1/2 w.
- R12 1304 3 megohm-1/2 w.
- R13 1309 200M ohm-1/2 w.
- R14 130294 1200 ohm-1/2 w.
- R15 130294 1200 ohm-1/2 w.
- R16 130236 30M ohm-1/2 w.
- R17 130102 500M ohm-1/2 w.
- R18 13022 5M ohm-1/2 w.
- R19 1309 200M ohm-1/2 w.
- R20 130182 500M ohm-1/2 w.
- R21 130296 200 ohm-1/2 w.
- R22 130168 100 ohm-1/2 w.
- R23 13094 50M ohm-1/2 w.

SERVICE NOTES:


Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.

All voltages as indicated on the voltage chart are measured with 115 volts A. C. on the primary of the power transformer.

FIG. 1.—REAR VIEW OF CHASSIS

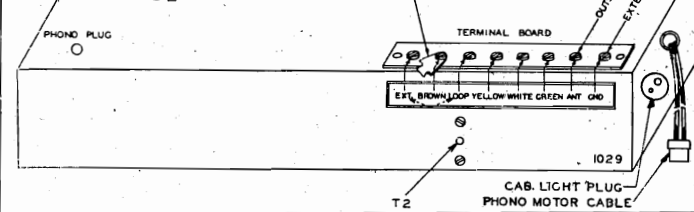

MODEL 793 B DEC-6-39
Model 793 FOR ALIGNMENT
Series B
(Serial No. 9L199900 and up)
SEE INDEX

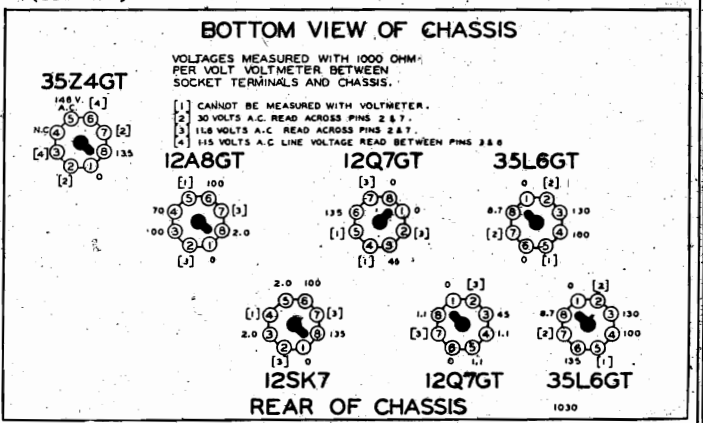

Consumption (Radio Chassis only, less Phono Motor).....55 Watts
Power Output.....3 Watts Undistorted, 3.6 Watts Maximum


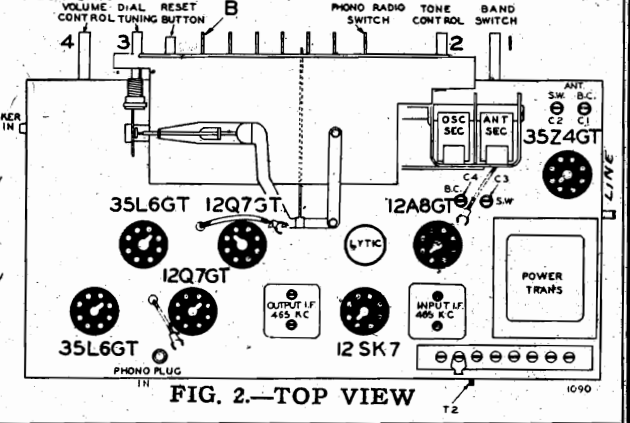



FIG. 2.—TOP VIEW

MODELS 707-391, 707-398
707-378, etc.
Chassis 707, Series A


BELMONT RADIO CORP. Serial 9K167300 up
Schematic, Voltage, Trimmers

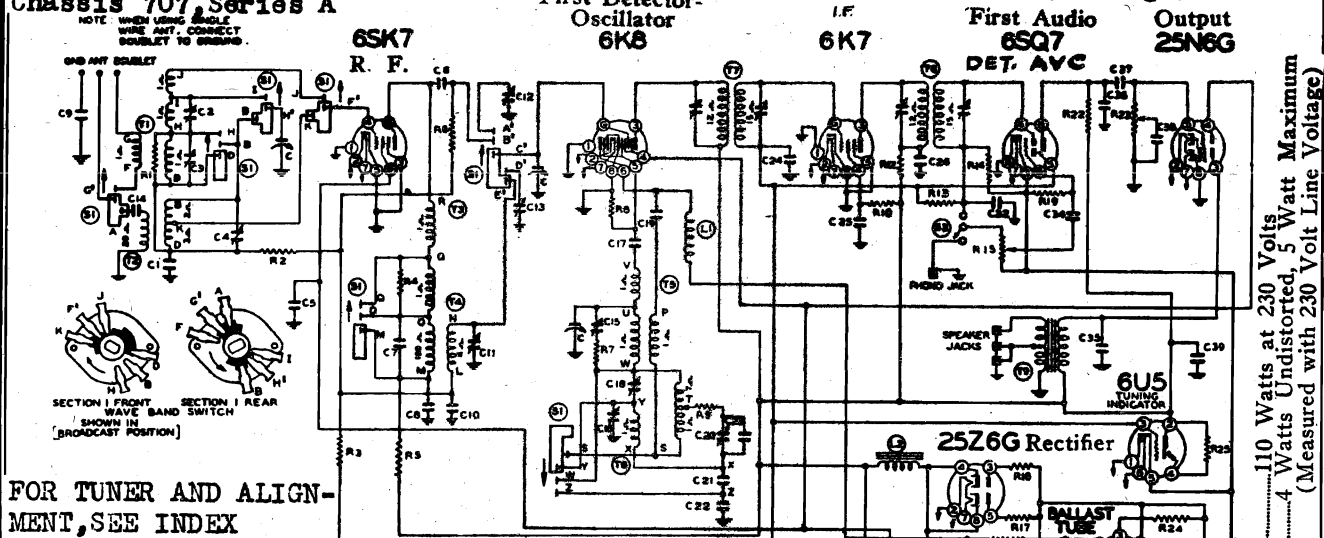

FOR TUNER AND ALIGNMENT, SEE INDEX

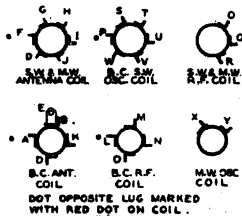

LF. 485 K.C.

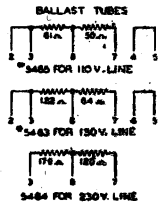

10-39

Chassis No. 707—Series A
(Serial No. 9K167300 and up) For
Models 707-391, 707-398 and 707-378, Etc.

Power Consumption.....110 Watts at 230 Volts
Power Output.....4 Watts Maximum
(Measured with 230 Volt Line Voltage)

Ref. No.	Part No.	Description
RESISTORS		
R1	13094	50M ohm— $\frac{1}{2}$ w.
R2	13020	100M ohm— $\frac{1}{2}$ w.
R3	13026	1000 ohm— $\frac{1}{2}$ w.
R4	130232	25M ohm— $\frac{1}{2}$ w.—10%
R5	13026	1000 ohm— $\frac{1}{2}$ w.
R6	13019	1 megohm— $\frac{1}{2}$ w.
R7	13097	200 ohm— $\frac{1}{2}$ w.—10%
R8	13012	50M ohm— $\frac{1}{2}$ w.
R9	130299	10 ohm— $\frac{1}{2}$ w. 10%
R10	13020	100M ohm— $\frac{1}{2}$ w.
R11	130197	20 ohm— $\frac{1}{2}$ w. 10%
R12	13023	2000 ohm— $\frac{1}{2}$ w.
R13	1304	3 megohm— $\frac{1}{2}$ w.
R14	1304	3 megohm— $\frac{1}{2}$ w.
R15	101205	1 megohm volume control
R16	13022	5000 ohm— $\frac{1}{2}$ w.
R17	130168	100 ohm— $\frac{1}{2}$ w.
R18	130168	100 ohm— $\frac{1}{2}$ w.—10%
R19	130225	15 megohm— $\frac{1}{2}$ w.
R20	130176	20M ohm— $\frac{1}{2}$ w. 10%
R21	130302	9M ohm—1.5 watt—10%
R22	1309	200M ohm— $\frac{1}{2}$ w.
R23	101207	1 megohm tone control
R24	10658	300 ohm—10%—50 watt
R25	13019	1 megohm— $\frac{1}{2}$ w.
CONDENSERS		
C	102121	Three gang variable condenser P1
C1	10090-B	.02 x 400 v.
C2	124118	S. W. Antenna Trimmer
C3	124118	M. W. Antenna Trimmer
C4	124118	B. C. Antenna Trimmer
C5	10013	.05 x 400 v.
C6	10090	.02 x 400 v.
C7	12938	.00005 mica
C8	10090	.02 x 400 v.
C9	10026	.02 x 400 v.
C10	10090	.02 x 400 v.
C11	124119	B.C. R.F. Trimmer
C12	124119	S.W. R.F. Trimmer
C13	124119	M.W. R.F. Trimmer
C14	10026	.02 x 400 v.
C15	124119	S.W. Oscillator Trimmer
C16	124119	M.W. Oscillator Trimmer
C17	12962	.0003 mica
C18	124119	B.C. Oscillator Trimmer
C19	10025	.002 x 600 v.
C20	124119	B.C. Padding condenser
C21	129149	.0028 compression M.W. Pad
C22	129105	.0035 Compression S.W. Pad
C23	12959	.0003 mica
C24	1009	.05 x 200 v.
C25	10013	.05 x 400 v.
C26	1001	.1 x 400 v.
C27	11998	30 uf. lytic—300 w.v.
C28	11998	30 uf. lytic—300 w.v.
C29	11998	40 uf. lytic—25 w.v.

C30	11964	15 uf. lytic—400 w.v.
C31	11964	10 uf. lytic—350 w.v.
C32	1295	.0001 mica
C33	10013	.05 x 400 v.
C34	10025	.002 x 600 v.
C35	10026	.02 x 400 v.
C36	12912	.00025 mica
C37	10013	.05 x 400 v.
C38	10078	.01 x 200 v.
C39	10013	.05 x 400 v.
C2, C3 and C4 are in same unit.		
C11, C12, C13, C15, C16, C18 and C20 in same unit.		
C27, C28 and C29 in same unit.		
C30 and C31 in same unit.		
T1	111156	S.W. M.W. Antenna Coil
T2	111158	B.C. Antenna Coil
T3	10955	S.W. M.W. R.F. Coil
T4	10956	B.C. R.F. Coil
T5	110140	B.C. S.W. Oscillator Coil
T6	110138	M.W. Oscillator Coil
T7	108165	1st I.F. Input Coil
T8	108119	2nd I.F. Output Coil
T9	10598	Output Transformer
	114179	8" P.M. Speaker
	or	
L1	114186	12" P.M. Speaker
L2	1234	R.F. Choke
	10597B	"B" Filter Choke
S1	12595	Wave Band Switch
S2		On and Off Switch on volume control
S3	125101	Radio-Phono Switch
P1	10794	(2) Pilot Lights T-44


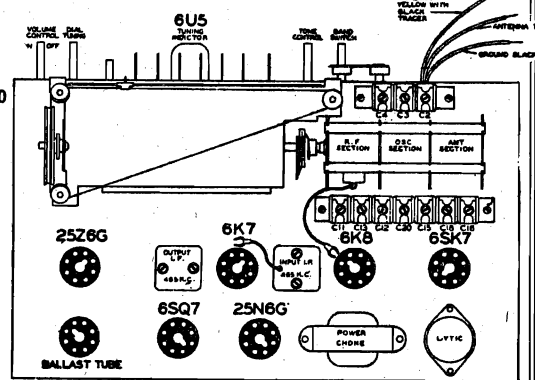


FIG. 1—TOP VIEW

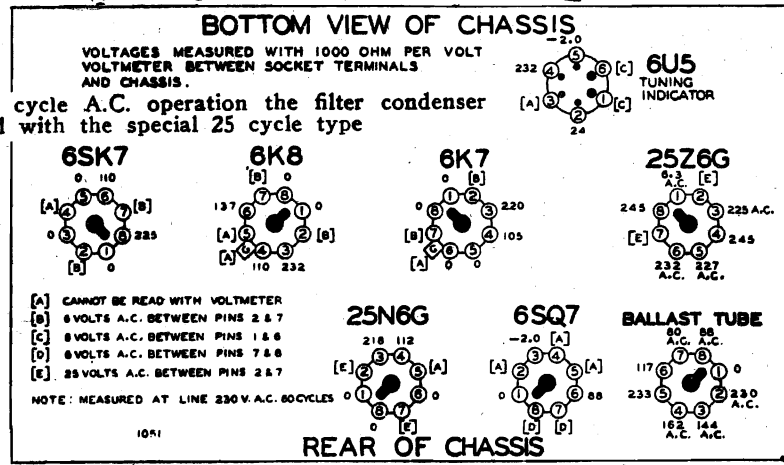



VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLT METER BETWEEN SOCKET TERMINALS AND CHASSIS.
NOTE:—For 25 cycle A.C. operation the filter condenser must be replaced with the special 25 cycle type

[A] CANNOT BE READ WITH VOLT METER
[B] 8 VOLTS A.C. BETWEEN PINS 2 & 7
[C] 8 VOLTS A.C. BETWEEN PINS 1 & 6
[D] 8 VOLTS A.C. BETWEEN PINS 7 & 8
[E] 25 VOLTS A.C. BETWEEN PINS 2 & 7

REAR OF CHASSIS

BRUNSWICK DIV.-MERSMAN BROS.

MODELS A1020, A2020
Schematic, Voltage
Notes

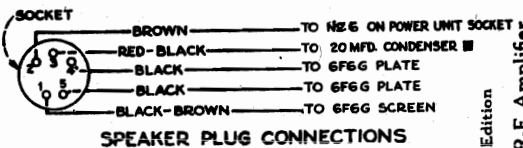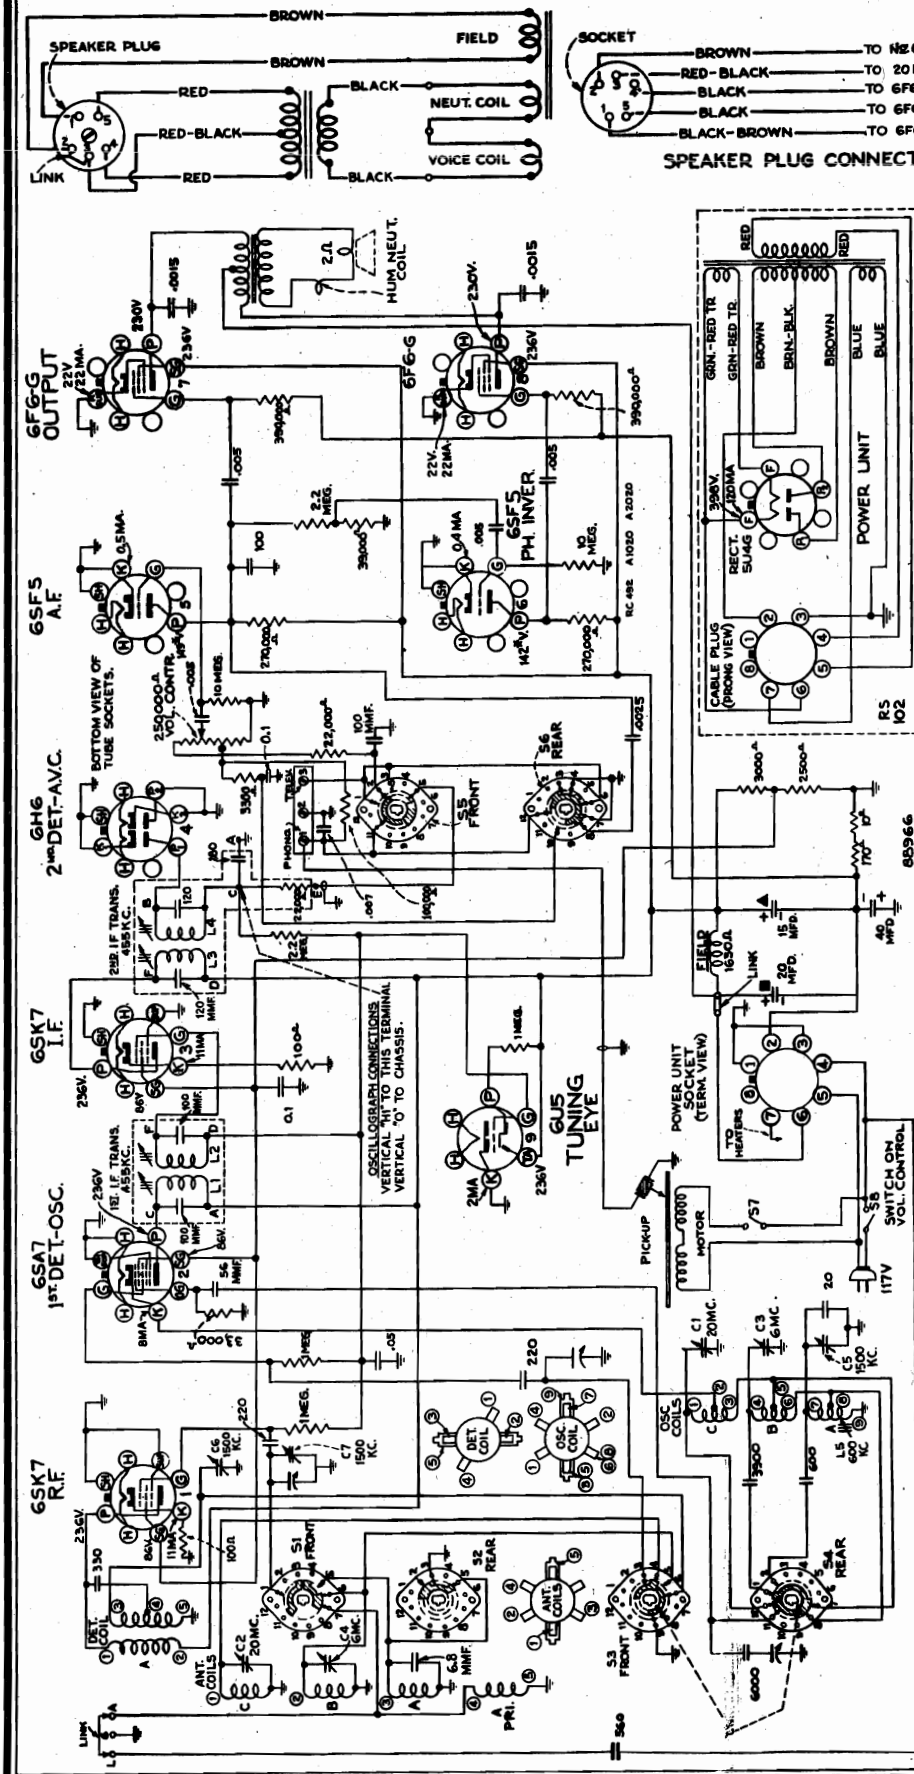

Intermediate Frequency 455 kc

Tube Complement

(1) RCA-6SK7	R-F Amplifier
(2) RCA-6SA7	1st Detector-Oscillator
(3) RCA-6SK7	I-F Amplifier
(4) RCA-6H6	2nd Detector and A.V.C.
(5) RCA-6SF5	A-F Amplifier
(6) RCA-6SF5	Phase Inverter
(7) RCA-6F6G	Power Output
(8) RCA-6F6G	Power Output
(9) RCA-6J5	Tuning Eye
(10) RCA-5U4-G	Full-Wave Rectifier

Dial Lamp Mazda 44, 6.3 volts, 0.25 amp.

hole is located in the motor casting, adjacent to the spindle bearing, and is covered with a screw plug.

Television Attachment.—A terminal board is provided on the rear of the chassis for connecting a Television attachment into the audio-amplifying circuit. The cable from the attachment should be connected to terminals 2 and 3, the shielded or ground lead going to terminal 2.

A Radio-Phono-Television switch is built into the chassis, allowing switching to be accomplished through the "Tone-Radio-Phono-Television" control on the control panel.

Loudspeaker.—To center the loudspeaker voice coil, first remove the front dust cover, then loosen the screws holding the spider assembly. Insert three narrow feelers into the air gap, and tighten the spider screws. Remove the feelers and fasten a dust cover in place with loudspeaker cement.

The crystal pickup is sealed in a metal case as protection against extreme changes of climate. If failure occurs, do not attempt to repair the unit, but install a new crystal unit.

Volts should hold within $\pm 20\%$ with 117 V. A.C. supply.

* Starred Voltages are operating voltages in circuits with high series resistance; the actual measured voltages will be lower, depending on the voltmeter loading.

Models A-1020 and A-2020 Brunswick Panatropes are combination ten-tube, three-band superheterodyne receivers and automatic phonographs.

Power Supply Rating

Rating A..... 105-125 volts, 50-60 cycles, 130 watts

Power Output

Undistorted..... 10 watts

Maximum..... 12 watts

Loudspeaker (RL-70K2)


Type..... 12-inch electrodynamic

V-C Impedance..... 2.2 ohms at 400 cycles


Motor Lubrication.—Apply a few drops of light machine oil to the spindle bearing and oil hole every six months. The oil

MODELS A1020, A2020
MODELS 1680, 2660, 2689, BRUNSWICK DIV.-MERSMAN BROS.
A2600, 3689

Alignment, Trimmers,
Socket, Dial Drive Data

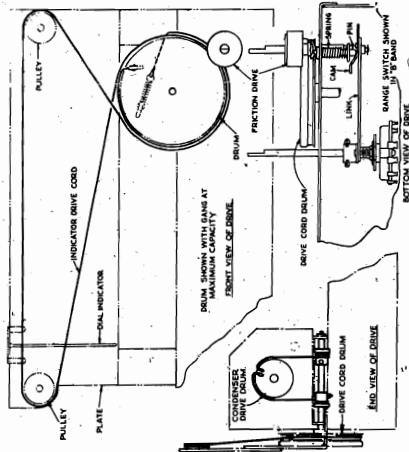

A-1020 & A-2020 Alignment Procedure
Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic drawing.
Output Meter Alignment—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.
Test-Oscillator—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.
Calibration Scale on Indicator-Drive-Cord Drum—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the tuning drum. The setting of the gang condenser is in terms of this scale, which is calibrated in degrees. The frequency is given in the alignment table.
As the first step in r-f alignment, check the position of the drum. The 120° mark on the drum scale must be vertical and directly under the center of the shaft of the tuning drum when the drum is in the correct position. The drum is held to the shaft by means of two set-screws, which should be tightened securely when the drum is in the correct position.
On the inner side of the tuning drum are two projections which serve as stops to prevent extreme rotation of the gang condenser. The tuning drum should be set so that the stop on the condenser is between the two projections. Just as the gang condenser plates are becoming fully charged, thus preventing stress on the gang due to extreme rotation.

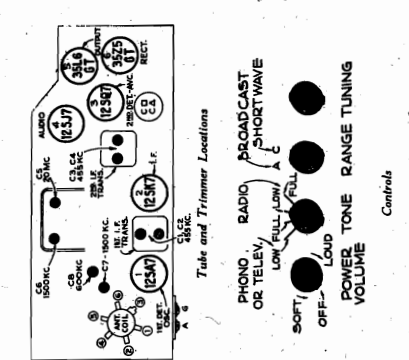


1680, 2660, 2689 & A-2600 Alignment Procedure
Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic drawing.
Output Meter Alignment—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.
Test-Oscillator—For all alignment operations, connect the low side of the test-oscillator to the receiver ground binding post, and keep the output as low as possible to avoid a-v-c action.
Calibration Marks—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment. The drum has 120°, 60°, 30°, 150°, 90°, 150°, 60°, and 120° marks stamped in the plate on the front of the chassis as shown in the accompanying drawing. These marks are used for reference during alignment. With the gang condenser in full mesh, the indicator should point to the 120° mark on the left of the maximum capacity mark on the calibration plate.
Dial Indicator Adjustment—When the chassis is placed in the cabinet and with the gang condenser in full mesh (low frequency) and of the glass dial scale.

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	6SK7 grid in series with .01 mfd.	485 kc	"A" Band Quiet point between 550-750 kc	L3 and L4 (2nd I-F trans.)
2	6SA7 grid in series with .01 mfd.	20 mc	20 mc (204.5°)	L1 and L2 (1st I-F trans.)
3	Ant. terminal in series with 300 ohms	6 mc	6 mc (194°)	C1 (osc.) C2 (ant.)
4	Ant. terminal in series with 200 mfd.	1,500 kc	"B" Band 1,500 kc (189.5°)	C3 (osc.) C4 (ant.) C5 (osc.) C6 (det.) C7 (ant.)
5	Ant. terminal in series with 200 mfd.	600 kc	"A" Band 600 kc (38°)	L5 (osc.)
6				Rock gang
7				Repeat step 5.

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	Antenna terminal	485 kc	"A" Band Quiet point between 550-750 kc	C3 and C4 (2nd I-F trans.)
2	Antenna terminal in series with 300 ohms	20 mc	20 mc calibration mark	C1 and C2 (1st I-F trans.)
3	Antenna terminal in series with 200 mfd.	1,500 kc	"B" Band 1,500 kc calibration mark	C5 (osc.) C7 (osc.) C6 (ant.)
4	Antenna terminal in series with 200 mfd.	600 kc	"A" Band 600 kc calibration mark	C8 (osc.)
5				Rock gang
6				Repeat step 4


* Use minimum peak if two can be obtained. Check to determine that C1 has been adjusted to correct peak by tuning receiver to approximately 19.09 mc where a weaker signal should be received.
** Use minimum capacity peak if two can be obtained. Check to determine that C3 has been adjusted to correct peak by tuning receiver to approximately 5.09 mc where a weaker signal should be received.
Note: Oscillator tracks above signal on all bands.

* Use minimum peak if two can be obtained. Check to determine that C3 has been adjusted properly by tuning receiver to approximately 19.09 mc where a weaker signal should be received.
Note: Oscillator tracks above signal on both bands.

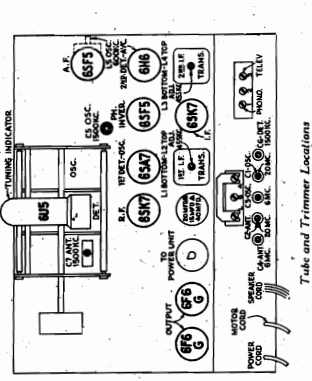

Pointers for Calibration Scale—Improve a pointer for the calibration scale by fastening a piece of wire to the chassis, and insert a pin to the 0° mark on the calibration scale when the plates are fully meshed.
Dial-Indicator Adjustment—After fastening the chassis in the cabinet, adjust the dial indicator so that the indicator at the 90° mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.


Adjustments for Push-Button Tuning
1680, 2660, 2689 & A-2600 A-1020 & A-2020
The push-buttons should be adjusted for six favorite stations after the receiver has been aligned. Each button may be set up to any standard broadcast station. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:
1. Loosen the push-buttons by turning counter-clockwise about one turn from their right position so they turn freely.
2. Check to be sure the Phono-Radio switch is in "Radio" position.
3. Press in push-button No. 1 (left) as far as it will go without undue pressure, hold in, retune station with manual tuning knob, and then tighten the screw. Do not tighten more than 1/4 turn after the screw begins to grip or damage to the mechanism may result.
4. Proceed in a similar manner for the remainder of the push-buttons.
5. Insert the station marker tabs in the recesses above the push-buttons.

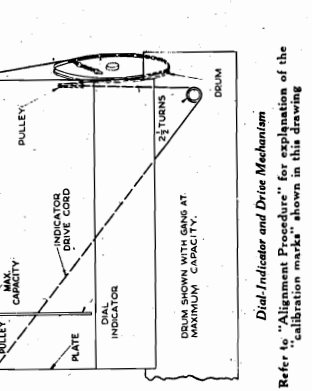

Dial Indicator and Drive Mechanism
Refer to "Alignment Procedure" for explanation of the "calibration marks" shown in this drawing

BRUNSWICK DIV.-MERSMAN BROS. MODELS T1580, T2580, 3580

4580, Chassis RC-482
P5580, Chassis RC-482A
Schematic, Voltage
Alignment, Notes

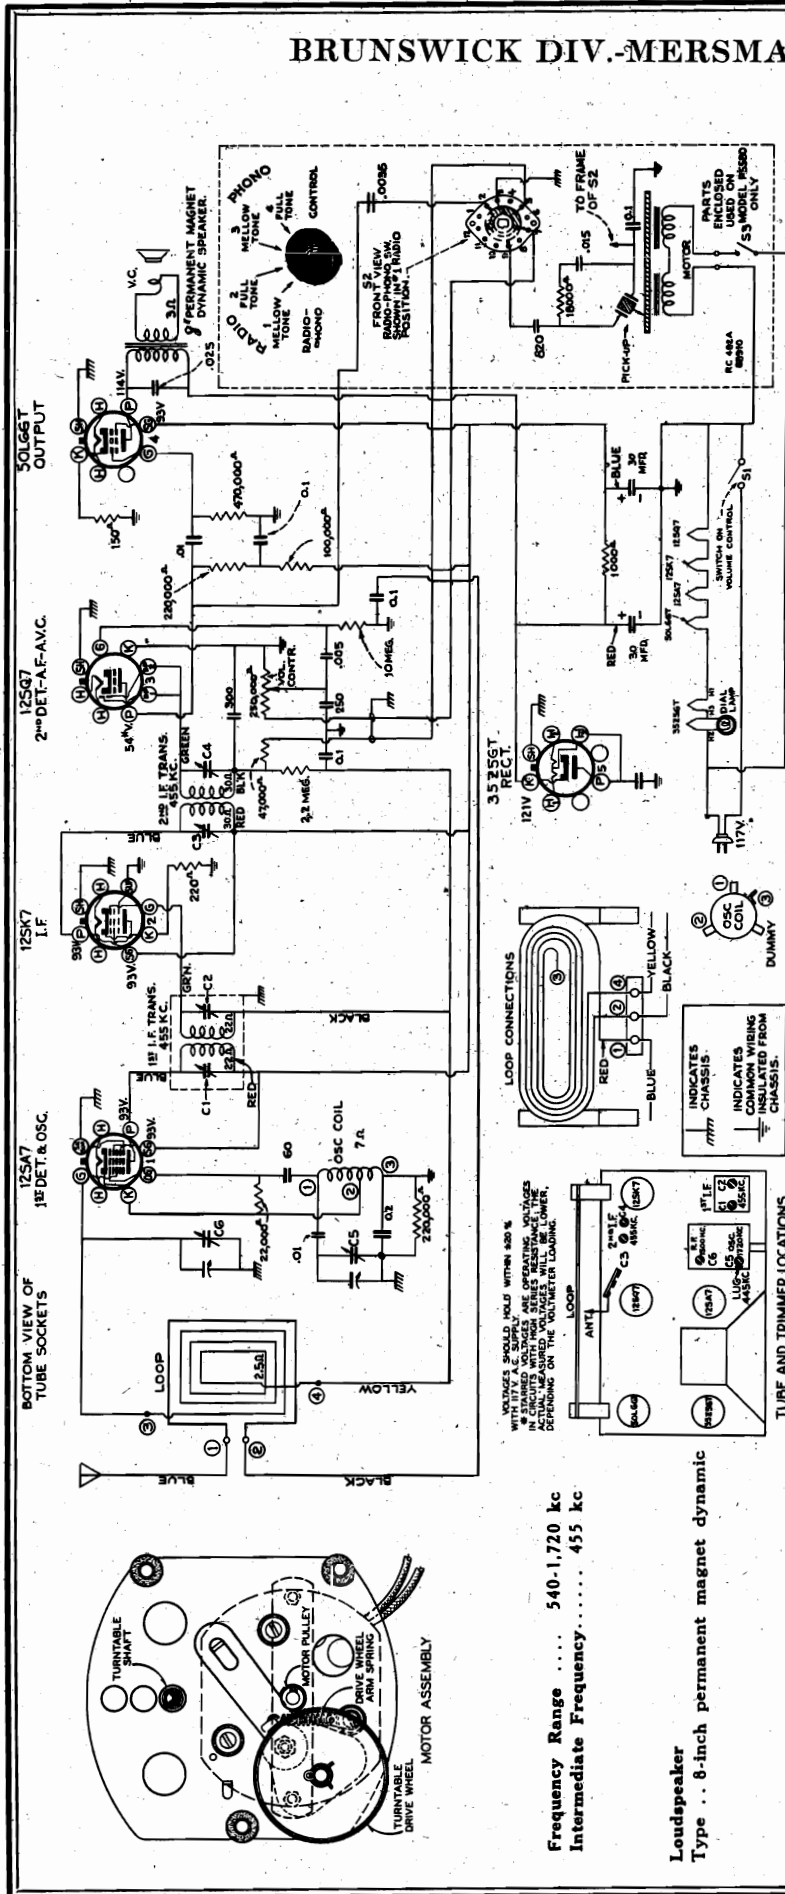

Power Output (125 volts, 60 cycle supply)
Undistorted 0.75 watts
Maximum 1.5 watts
Dial Lamp Mazda 51, 7.5 volts, 0.2 amp.

Power Supply Rating (Models 3580, 4580, T-1580 and T-2580)
A-C Rating 105-125 volts, 50-60 cycles, 30 watts
D-C Rating 105-125 volts, direct current, 30 watts

Model P-5580—Although this model employs an ac-dc chassis it is not suitable for use on dc, as this would damage the motor.

The phonograph motor on Model P5580 is a self-starting, constant-speed induction type. It should be lubricated every six months by applying a few drops of light machine oil to the top and bottom motor spindle bearings, to the turntable spindle and to the turntable drive wheel.

CAUTION: Keep oil away from drive bushing on top of motor spindle and from rubber driving tire on turntable drive wheel.

Power-Supply Polarity.—For operation on d-c (except Model P5580) the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the "ANT" lead on rear of cabinet. It should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.


Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

Pre-setting Dial.—With gang condenser in full mesh, the pointer should be horizontal.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. loop in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,600 kc signal	C6 (antenna)

Frequency Range 540-1,720 kc
Intermediate Frequency 455 kc

Loudspeaker
Type ... 8-inch permanent magnet dynamic

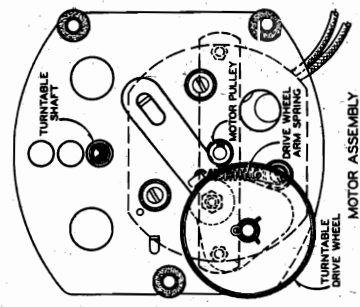

MODELS A1020, A2020

MODELS 1700, A2700, A3720

MODEL A2600

BRUNSWICK DIV.-MERSMAN BROS. Automatic Record Changer

Automatic Record Changer

Notes

Before servicing the automatic record changer, inspect the assembly to see that all levers, parts, gears, springs, etc. are in good order and are correctly assembled.

A bind or jam in the mechanism can usually be relieved by rotating the turntable in the reverse direction.

The changer can be conveniently rotated through its change cycle by pushing the index lever to "Reject" and revolving the turntable

ADJUSTMENTS

A. Main Lever.—This lever is basically important in that it interlinks the various individual mechanisms which control needle landing, tripping, record separation, etc. One adjustment is provided for the main lever. Rotate the turntable until the changer is out-of-cycle; and adjust rubber bumper bracket (A) so that the roller clears the nose of the cam plate by 1/16 inch.

B. Friction Clutch.—

The motion of the tone arm toward the center of the record is transmitted to the trip pawl "22" by the trip lever "7" through a friction clutch "5." If the motion of the pickup is abruptly accelerated or becomes irregular due to swinging in the eccentric groove, the trip finger "7" moves the trip pawl "22" into engagement with the pawl on the main gear, and the change cycle is started. Proper adjustment of the friction clutch "5" occurs when movement of the tone arm causes positive movement of the trip pawl "22" without tendency of the clutch to slip. The friction should be just enough to prevent slippage, and is adjustable by means of screw "B." If adjustment is too tight, the needle will repeat grooves; if too loose, tripping will not occur at the end of the record.

C. Pickup Lift Cable Screw.—During the record change cycle, lever "16" is actuated by the main lever "15" so as to raise the tone arm clear of the record by means of the pickup lift cable. To adjust pickup for proper elevation, stop the changer "in-cycle" at the point where pickup is raised to the maximum height above turntable plate, and has not moved outward; at this point adjust locknuts "C" to obtain 1 inch spacing between needle point and turntable top surface.

D. & E. Needle Landing on Record.—The relation of coupling between the tone arm vertical shaft and lever "20" determines the landing position of the needle on a 10 inch record. Position of eccentric stud "E" governs the landing of the needle on a 12 inch record; this, however, is dependent on the proper 10 inch adjustment.

To adjust for needle landing, place 10 inch record on turntable; push index lever to reject position and return to the 10 inch position; see that pickup locating lever "17" is tilted fully toward turntable; rotate mechanism through cycle until needle is just ready to land on the record; then see that pin "V" on lever "14" is in contact with "Step T" on lever "17." The correct point of landing is 4-11/16 inches from the nearest side of the turntable spindle; loosen the two screws "D", and adjust horizontal position of tone arm to proper dimension, being careful not to disturb levers "14" and "17." Leave approximately 1/32 inch end play between hub of lever "20" and pickup base bearing, and tighten the blunt nose screw "D"; run mechanism through several cycles as a check, then tighten cone pointed screw "D."

After adjusting for needle landing on a 10 inch record, place 12 inch record on turntable; push index lever to reject and return to 12 inch position; rotate mechanism through cycle until needle is just ready to land on the record; the correct point of landing is 5-11/16 inches from nearest side of spindle. If the landing is incorrect, turn stud "E" until the eccentric end adjusts lever "14" to give correct needle landing. The eccentric end of the stud must always be toward the rear of the motor board, otherwise incorrect landing may occur with 10 inch records.

MISCELLANEOUS SERVICE HINTS

Incorrect adjustment of a particular mechanism of the changer is generally exhibited in a specific mode of improper operation. The following relations between effects on operation and the usual misadjustments will enable ready adjustment in most cases.

1. For any irregularity of operation, the adjustment of the main lever "15" should be checked first as in "A."
2. Needle does not land properly on both 10 and 12 inch records—Make complete adjustments "D" and "E."
3. Needle does not land properly on 12 inch record but correct on 10 inch—Effect adjustment "E."
4. Failure to trip at end of record—Increase clutch "5" friction by means of screw "B." Also, see that levers "7" and "12" are free to move without touching each other.
5. Pickup strikes lower record of stack or drags across top record on turntable—Adjust lift cable per adjustment "C."
6. Needle does not track after landing—Friction clutch "5" ad-

by hand. Six turntable revolutions are required for one change cycle.

If the record changer or cabinet is not perfectly level, normal operation is likely to be affected.

The 10 and 12 inch records must be absolutely flat for smooth operation when using a mixture of the two sizes.

A shorting switch, located in the pickup head, operates due to pressure when the pickup is placed on the pickup rest.

F. & G. Record Separating Knife.—The upper plate (knife) "25" on each of the record posts serves to separate the lower record from the stack and to support the remaining records during the change cycle. It is essential that the spacing between the knife and the rotating record shelf "27" be accurately maintained. The spacing for the 10 inch record is nominally .058 inch, and for the 12 inch record is .075 inch.

To adjust, rotate the knife to the point of minimum vertical separation from the record shelf and turn screw and locknut "F" to give .055—.061 inch separation. Screw "G" must not be depressed during this adjustment. After setting screw "F" adjust screw "G" so that when its tip is depressed flush with top of record shelf, the vertical spacing between the knife, in its lowest rotational position, and the shelf, is .072—.078 inch.

H. Record Support Shelf.—The record shelf revolves during the change cycle to allow the lower record to drop onto the turntable. Both posts are rotated simultaneously by a gear and rack coupled to the main lever "15," and it is necessary that adjustment be such that the record is released from both shelves at the same instant. To adjust, place a 12 inch record on the

turntable, rotate mechanism into cycle to the point where tone arm is at maximum distance outward from turntable; lift record upward until it is in contact with both separating knives, then loosen screws "H" and shift record shelves so that the curved inner edges of the shelves are uniformly spaced at least 1/16 inch from record edge. Tighten the blunt nose screw "H," run mechanism through cycle several times to check action, then tighten cone pointed screw "H."

If record shelves or knives are bent, or not perfectly horizontal, improper operation and jamming of mechanism will occur.

J. Tone Arm Rest Support (not shown).—When the changer is out-of-cycle, the front lower edge of the pickup head should be 5/16 inch above surface of motor board. This may be adjusted by bending the tone arm support bracket, which is associated with the tone arm mounting base, in the required direction.

K. Trip Pawl Stop Pin.—The position of the trip pawl stop pin "K" in relation to the main lever "15" governs the point at which the roller enters the cam. By bending the pin support either toward or away from trip pawl bearing stud, the roller can be made to enter the cam later or earlier, respectively. This adjustment should be made so that the roller definitely clears the cam outer guide as well as the nose of the cam plate.

Lubrication.—Petrolatum or petroleum jelly should be applied to cam, main gear, spindle pinion gear, and gears of record posts.


Light machine oil should be used in the tone arm vertical bearing, record post bearings, and all other bearings of various levers on underside of motor board.

Apply a few drops of light machine oil to the motor spindle bearing and oil hole adjacent to the spindle bearing. The oil hole has a screw plug.

Do not allow oil or grease to come in contact with, rubber mounting of tone arm base, rubber bumper, or rubber spindle cap.

justment "B" may be too tight; bind in tone arm vertical bearing; levers "7" and "12" fouled; or pickup output cable twisted.


7. Cycle commences before record is complete—Record is defective, or adjustment "B" of friction clutch "5" is too tight.
8. Wow in record reproduction—Record is defective; or instrument is not being operated at normal room temperature (65° F).
9. Record knives strike edge of records—Records warped; record edges are rough; or knife adjustments "F" and "G" are incorrect.
10. Record not released properly—Adjust record shelf assemblies in respect to shaft by means of adjustment "H."
11. Needle lands in 10 inch position on 12 inch record or misses record when playing both types mixed—Increase tension of pickup locating lever spring "34."

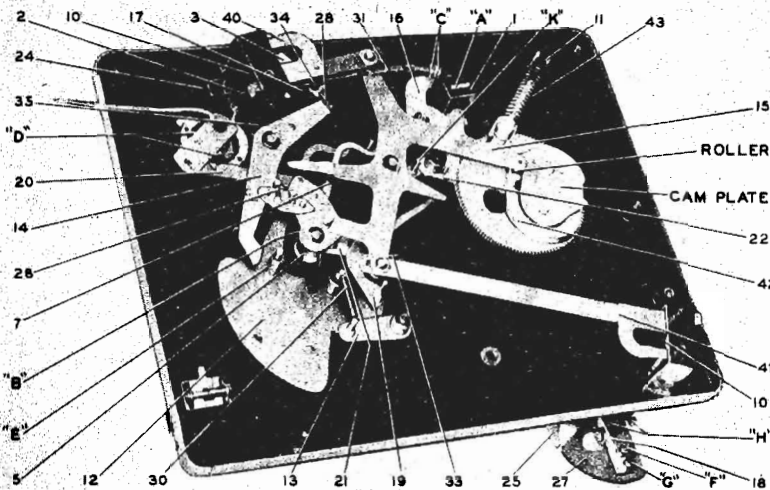

NOTE: Numbers refer to parts—letters refer to adjustments

MODELS 1700, A2700, A3720
Dial Data. Phono Data


BRUNSWICK DIV.-MERSMAN BROS.

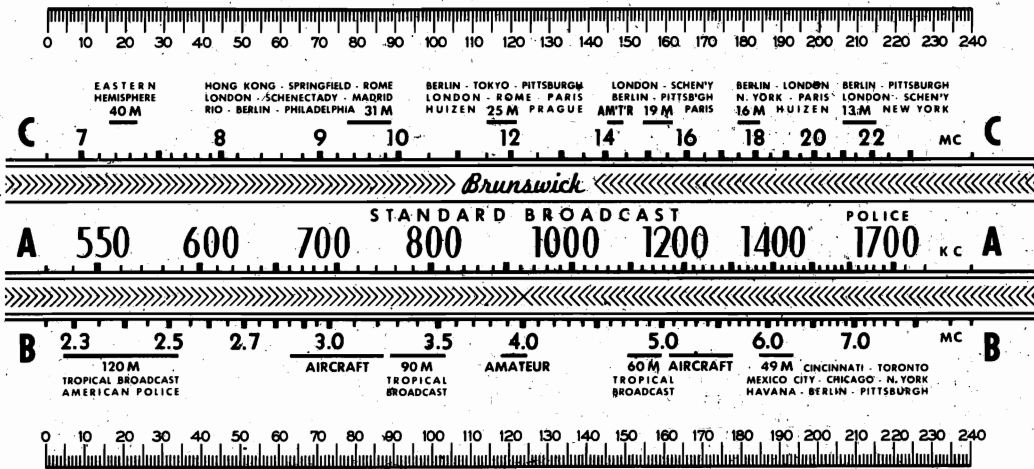




Receiver Dial Scales, and Corresponding 0-240° Calibration Scales

The corresponding position of the dial indicator for any setting of the calibration scale can be determined by drawing a line from this point on the bottom calibration scale to the same point on the top calibration scale. For example, 40° on the calibration scale corresponds to 600 kc on "A" band. Read instructions under "Alignment Procedure."


Note: In the Dial Indicator Drive Cord Assembly drawing at the right the mechanism is shown with the range switch in the "B" band position. In the "A" band position the trip arm on the range shaft must be adjusted so that when the push-buttons are operated, the drive cord drum will turn freely without rubbing or binding against the drive roller.

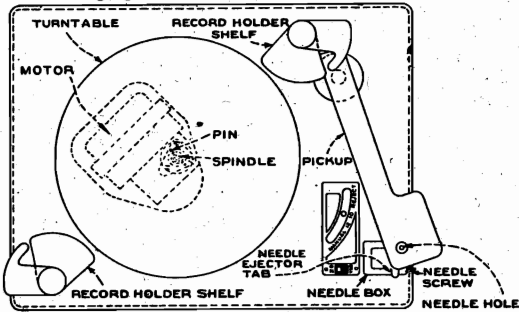

Motorboard and Controls

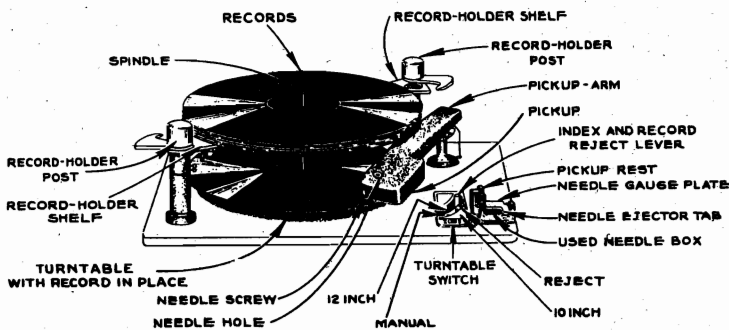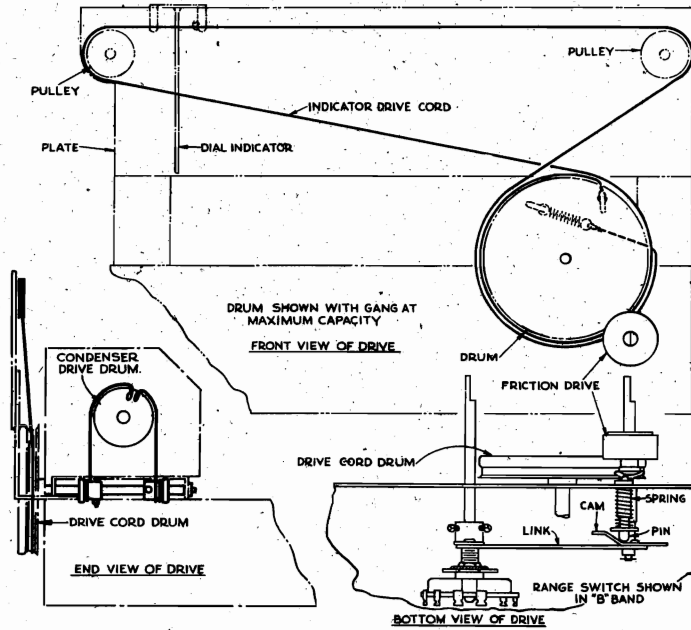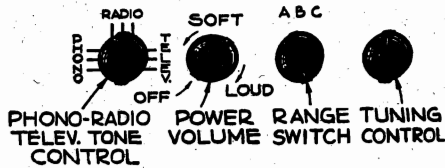

Top View of Automatic Record Changer

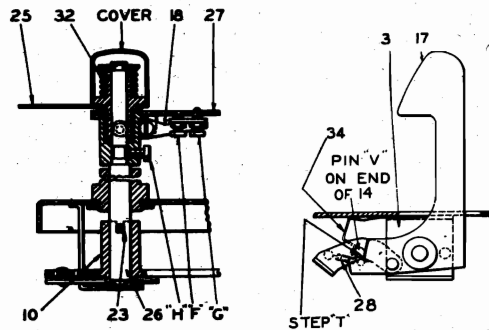

Details of Record Shelf Posts and Locating Lever Assemblies

MODELS 1700, A2700, A3720
Alignment, Trimmers,
Socket, Tuner Data

BRUNSWICK DIV.-MERSMAN BROS.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.


Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the tuning drum. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 120° mark on the drum scale must be vertical and directly under the center of the shaft of the tuning drum when the plates are fully meshed. The drum is held to the shaft by means of two set-screws, which must be tightened securely when the drum is in the correct position.

On the inner side of the tuning drum are two projections which serve as stops to prevent extreme rotation of the gang condenser. The tuning drum should be set so that the stop limiting clockwise movement of the drum takes effect just as the gang condenser plates are becoming fully meshed, thus preventing stress on the gang due to extreme rotation.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the chassis, and bend the wire so that it points to the 0° mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

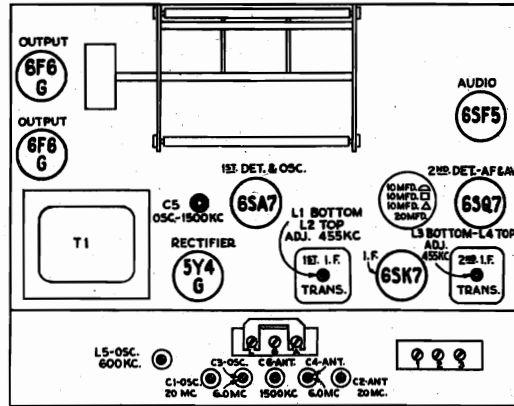

Tube and Trimmer Locations

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	6SK7 grid in series with .01 mfd.	455 kc	"A" band Quiet point between 550-750 kc	L3 and L4 (2nd I-F trans.)
2	6SA7 grid in series with .01 mfd.			L1 and L2 (1st I-F trans.)
3	Ant. terminal in series with 300 ohms	20 mc	20 mc (199°) "C" band	C1 (osc.)* C2 (ant.)
4		6 mc	6 mc (187.2°) "B" band	C3 (osc.)** C4 (ant.)
5	Ant. terminal in series with 200 mmfd.	1,500 kc	1,500 kc (198.2°) "A" band	C5 (osc.) C6 (ant.)
6		600 kc	600 kc (40°) "A" band	L5 (osc.) Rock gang
7	Repeat step 5.			

* Use minimum capacity peak if two can be obtained. Check to determine that C1 has been adjusted to correct peak by tuning receiver to approximately 19.09 mc where a weaker signal should be received.

** Use minimum capacity peak if two can be obtained. Check to determine that C3 has been adjusted to correct peak by tuning receiver to approximately 5.09 mc where a weaker signal should be received.

Note.—Oscillator tracks above signal on all bands.

Adjustments for Push-Button Tuning

The push-buttons should be adjusted for six favorite stations after the receiver has been operating for a brief warm-up period. Each button may be set up to any standard broadcast station. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:

- Loosen the push-buttons by turning counter-clockwise about one turn from their tight position so they turn freely.
- Check to be sure the Phono-Radio switch is in "Radio" position.
- Press in push-button No. 1 (left) as far as it will go without undue pressure, hold in, retune station with manual control if necessary for best reception, and then carefully


tighten up the button. Do not tighten more than 1/4 turn after the screw begins to grip or damage to the mechanism may result.

- Proceed in a similar manner for the remainder of the push-buttons.
- Insert the station marker tabs in the recesses above the push-buttons.

The crystal pickup is sealed in a metal case as protection against extreme changes of climate. If failure occurs, do not attempt to repair the unit, but install a new crystal unit.

CADILLAC DIV.—GEN. MOTORS

MODEL 77
Schematic

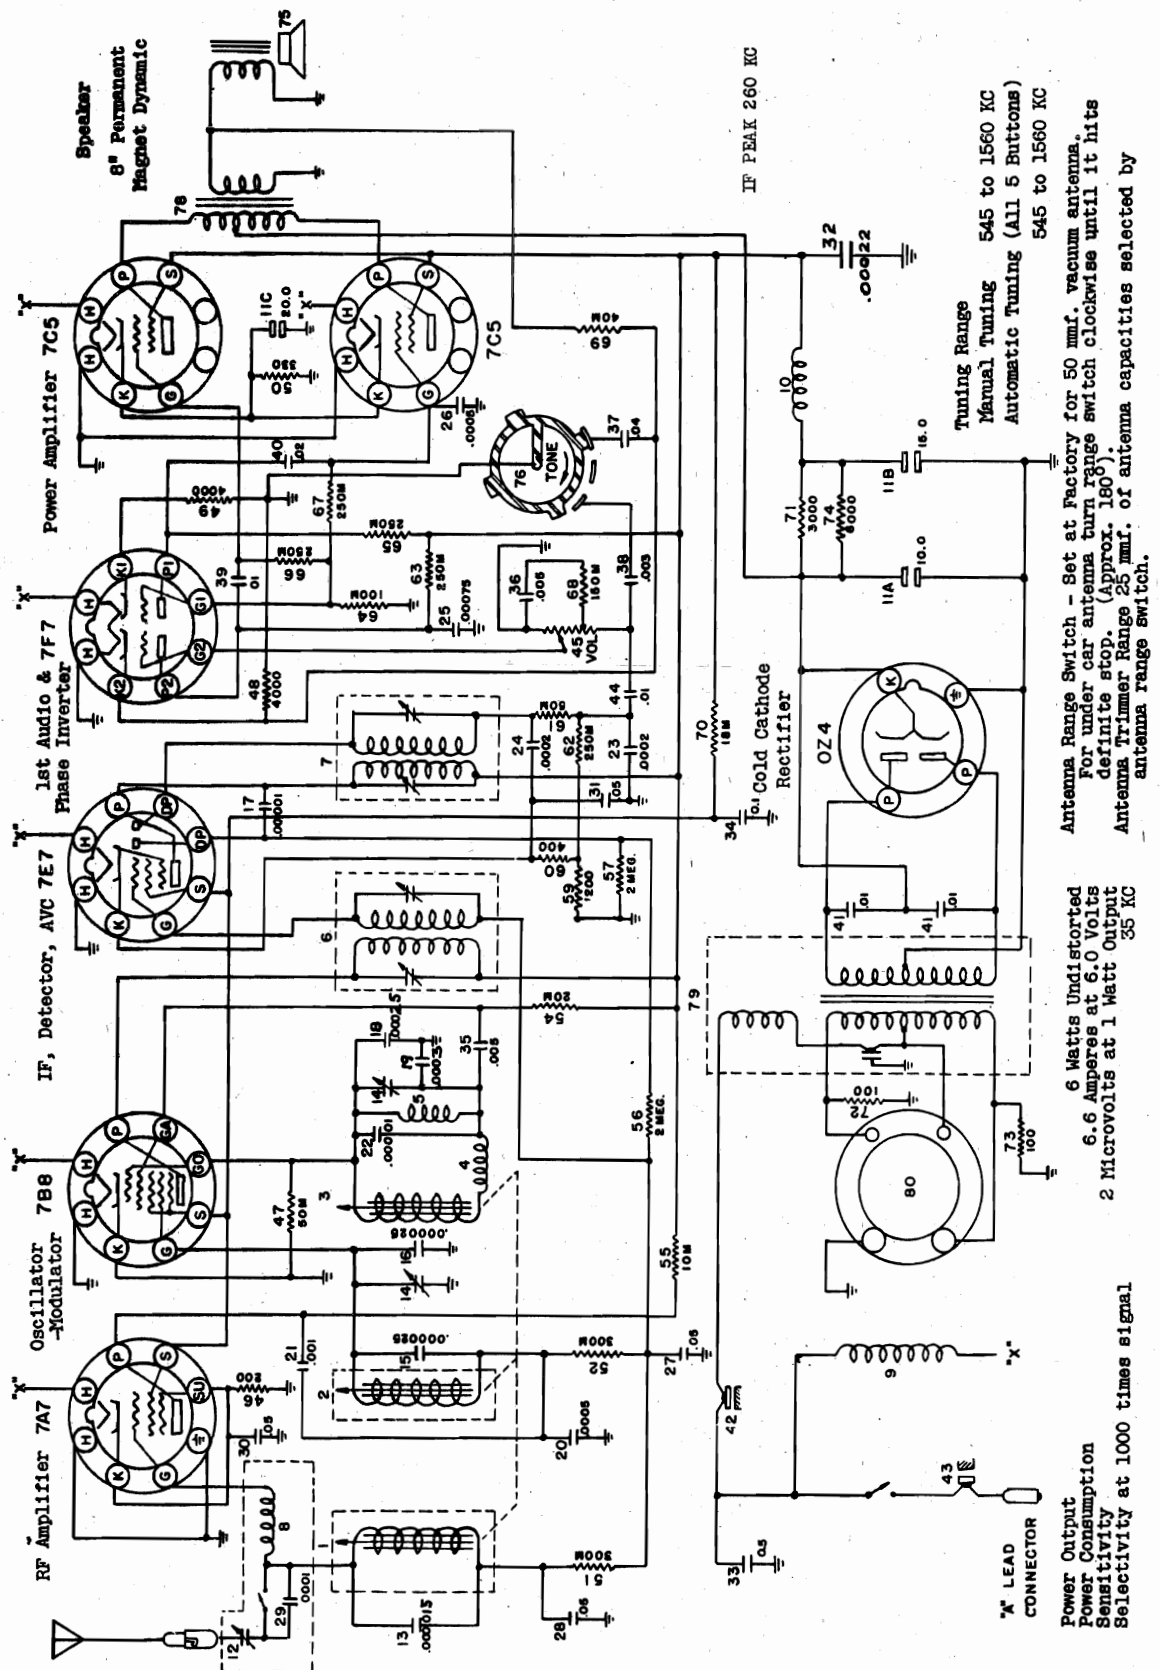

IF PEAK 260 KC

Tuning Range
Manual Tuning 545 to 1560 KC
Automatic Tuning (All 5 Buttons) 545 to 1560 KC

Antenna Range Switch - Set at Factory for 50 mmf. vacuum antenna.
For under car antenna turn range switch clockwise until it hits definite stop. (Approx. 160°).
Antenna Trimmer Range 25 mmf. of antenna capacities selected by antenna range switch.

6 Watts Undistorted
Power Consumption
Sensitivity
Selectivity at 1000 times signal

2 Microvolts at 1 Watt Output
35 KC

"X" LEAD CONNECTOR

MODEL 77

Voltage, Alignment

Socket, Trimmers, Chassis

CADILLAC DIV.—GEN. MOTORS

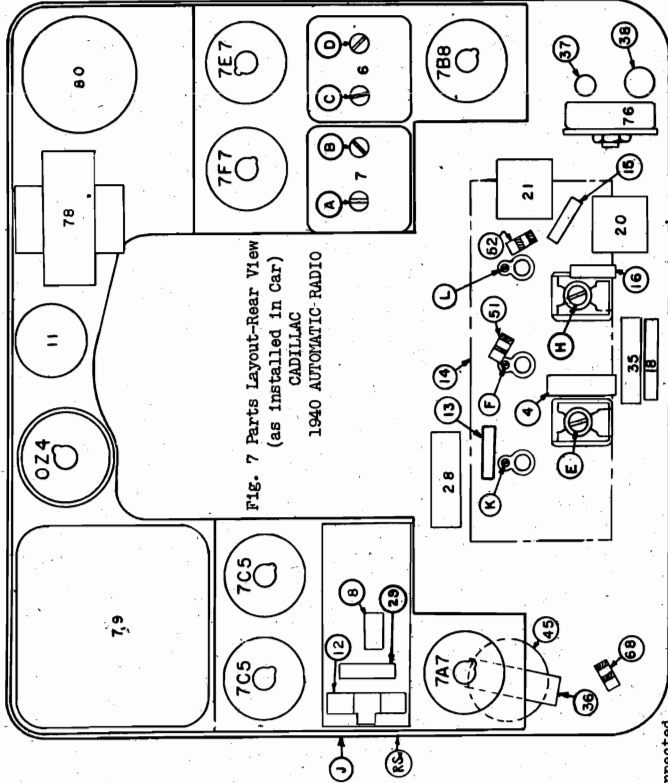


Fig. 7 Parts Layout-Rear View (as Installed in Car) CADILLAC 1940 AUTOMATIC RADIO

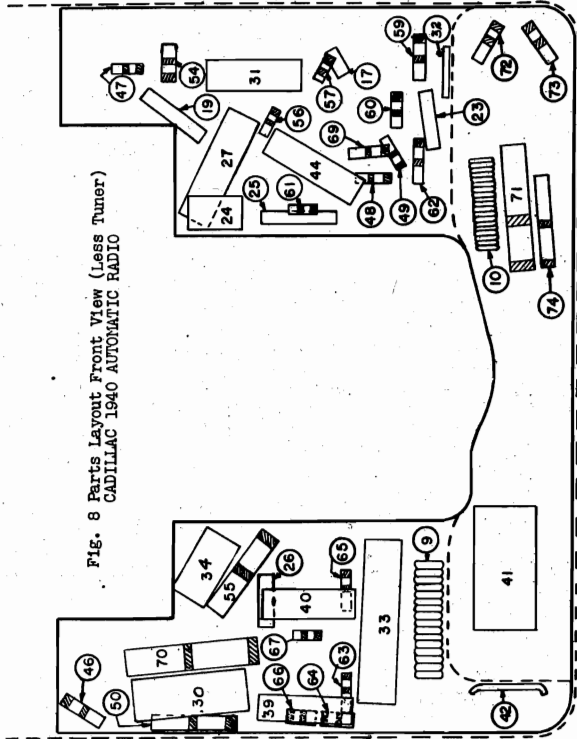


Fig. 8 Parts Layout Front View (Less Tuner) CADILLAC 1940 AUTOMATIC RADIO

ALIGNMENT CHART

Set Volume Control fully on. Connect output meter across voice coil, leaving speaker connected.

Signal Generator Frequency Setting	Connect Output Lead of Signal Generator to	Dummy Antenna	Receiver Dial Setting	Adjust Trimmers to Maximum Output	Remarks
260	Through 725928 IF Alignment Dummy to junction of condensers 15 and 16 at R.F. trimmer. H Fig. 1	.1 mf.	1560	IF Trimmers A & B, C & D Fig. 7	Attenuate signal and recheck
1580	Antenna terminal of set thru 725929 Dummy	50 mmf.	High freq. end	Back out osc. coil adj. screw 1/16" F in Fig. 7	Rotate dial indicator to the high freq. end of dial as far as it will go
1580	"	"	"	Oscillator Trimmer E in Fig. 7	Attenuate signal and repeat
1560	"	"	1560	Screw in oscillator coil adj. screw E in Fig. 7	Adjust screw for maximum output
600	"	"	"	RF and Antenna Trimmers H & J Fig. 7	"
1400	"	"	"	RF and Antenna Coil adj. screws K & L Fig. 7	"
600	"	"	"	Check F & J Fig. 7	"
Set installed in car Connected to car antenna.	Tune to weak station	Car Antenna	Between 600 to 700 KC	Adjust Antenna Trimmer for Maximum Volume.	Vacuum Section of Antenna fully extended, tune to a weak signal.

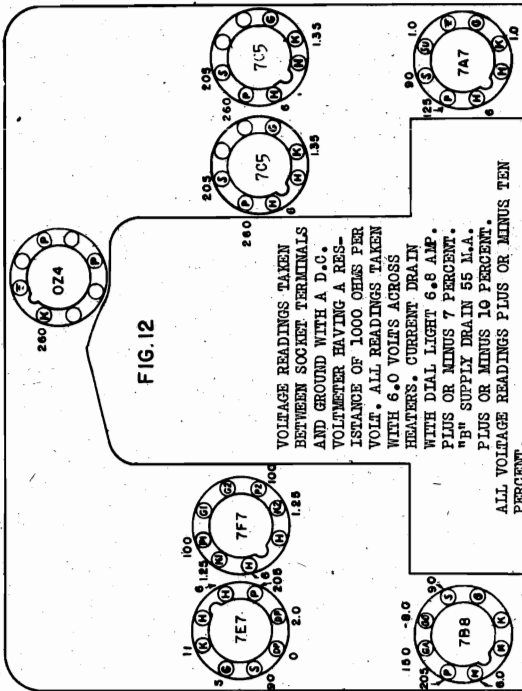


FIG. 12

VOLTAGE READINGS TAKEN BETWEEN SOCKET TERMINALS AND GROUND WITH A D.C. VOLTMETER HAVING A RESISTANCE OF 1000 OHMS PER VOLT. ALL READINGS TAKEN WITH 6.0 VOLTS ACROSS HEATERS. CURRENT DRAIN WITH DIAL LIGHT 6.6 AMP. PLUS OR MINUS 7 PERCENT. 'B' SUPPLY DRAIN 55 M.A. PLUS OR MINUS 10 PERCENT. ALL VOLTAGE READINGS PLUS OR MINUS TEN PERCENT.

CADILLAC DIV.—GEN. MOTORS

MODEL 77
Dial Drive and Tuner
Assembly

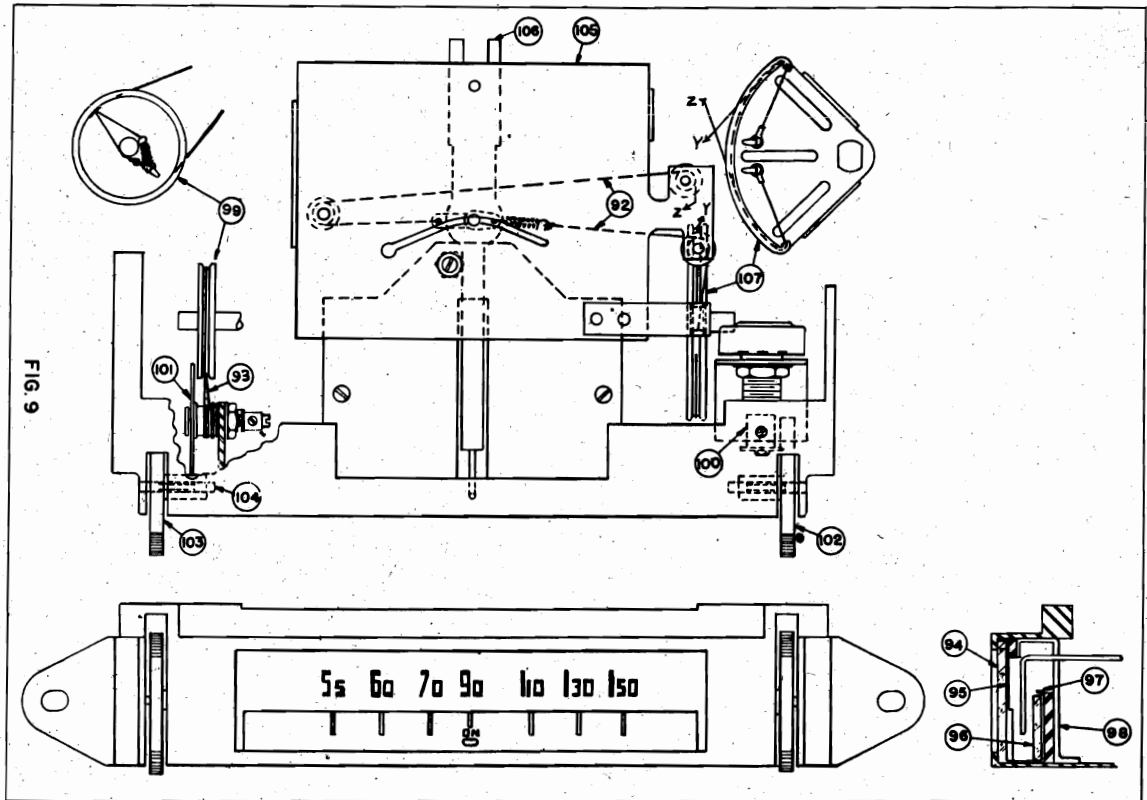


Fig. 9 General Arrangement - Dial & Drive Assembly

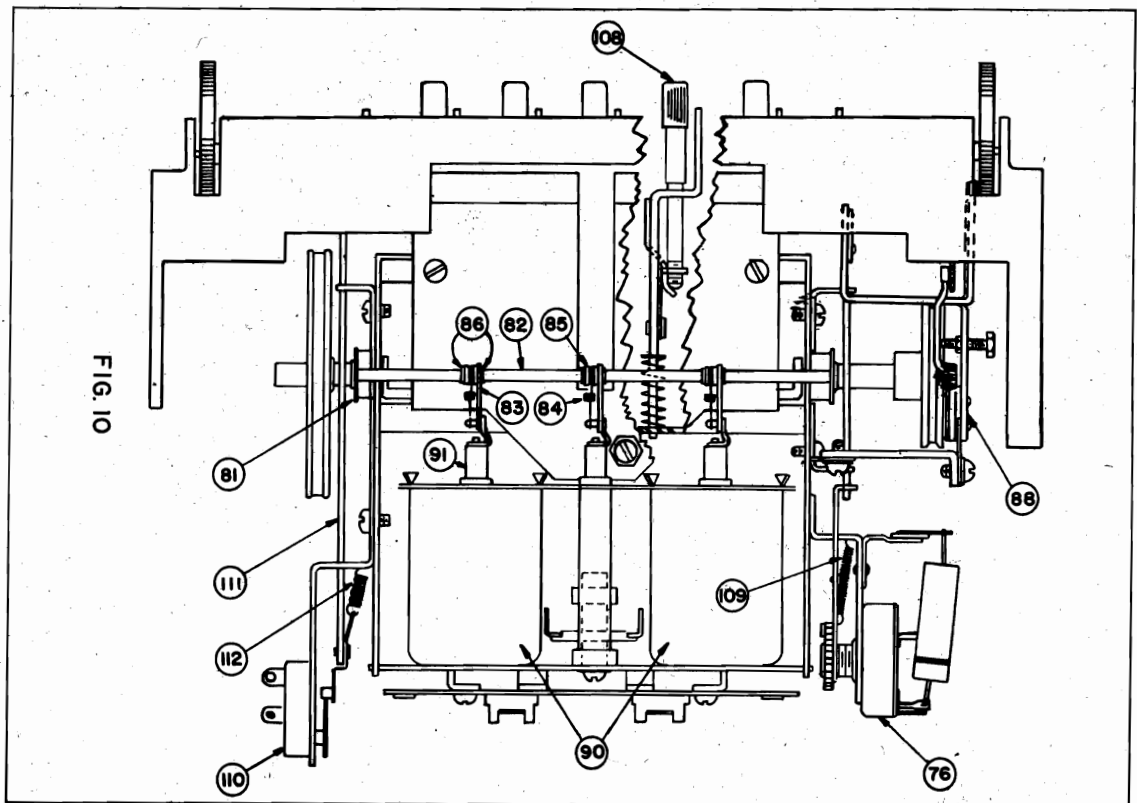


Fig. 10 Parts Layout - Tuner Unit - Bottom View

MODEL 77

Dial Drive Data

CADILLAC DIV.—GEN. MOTORS



Fig. 1 Remove these 8 screws to disassemble



Fig. 2 Removing speaker cover

SERVICE HINTSDisassembling For Parts Replacements

To replace condensers, resistors, coils, etc., remove eight screws as shown in Fig. 1. Raise the bottom edge of the speaker cover, keeping it pushed forward so that the speaker field will clear the power supply shield, as shown in Figs. 2 and 3.

Un solder voice coil lead "A" in Fig. 3 and set the speaker to the left of the set, as shown in Fig. 4. This exposes all of the wiring side of the chassis and component parts.

To replace tubes, vibrator or to realign when required, it is only necessary to remove the back cover.

To replace dial drive cord, remove the speaker and back cover as outlined above and remove eight screws holding the tuner cover, as shown in Fig. 5. Lay the cover back, as shown in Fig. 6, exposing the tuner unit and component parts.

Dial Cord or Pointer Replacement

1. Unhook the cord eyelets from drive pulley. Illustration 99 in Fig. 10.
2. Move pointer by hand toward the 1500 KC end of the dial until the pointer pivot pin drops through the enlarged end of the pointer guide slot.
3. Lift the pointer and pointer cord out of the tuner from the dial side.
4. File off the lower tip of the pointer guide pin, releasing the retaining washer and the cord pivot arms. Fig. 10.
5. With the pointer upside down and pointing away from the operator, put the long cord pivot arm on the left. Cord side up.
6. Place the short pivot arm (spring assembly) on the right. Cord side up.
7. Replace the retaining washer and solder it to the guide pin.
8. Replace the pointer. Place pivot pin in the enlarged end of the guide slot and then slide the rear end of the pointer into the rear support bearing.
9. Place the long cord behind the pointer and over pulleys. (Illustration 92 in Fig. 9 Page 130) Hook the cord eyelet over the drive pulley hook nearest the front of the tuner and push the cord into position around the pulley rim.
10. Put the spring loaded cord over pulleys in between the longer string and the tuner frame before hooking the cord eyelet to the drive pulley.

CADILLAC DIV.—GEN. MOTORS

MODEL 77
Assembly Views

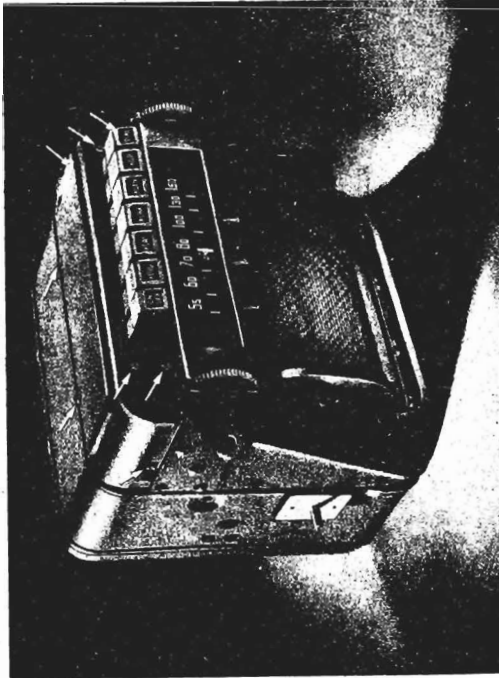


Fig. 5 Remove these 8 Screws to Disassemble tuner cover

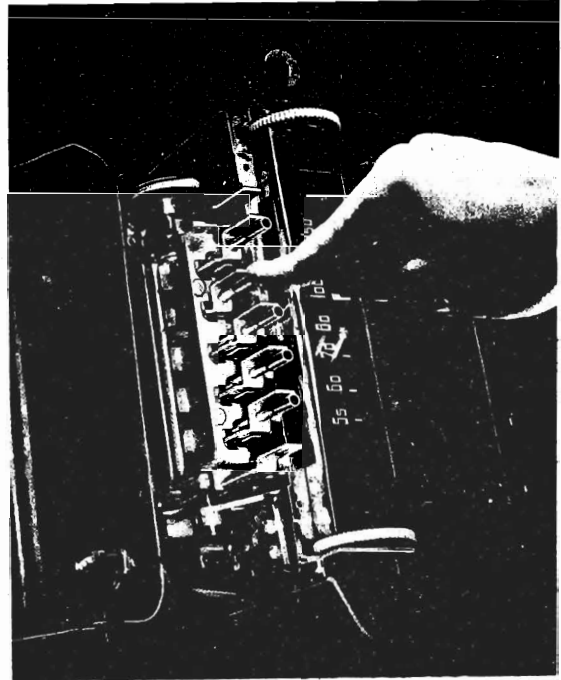


Fig. 6 Tuner accessible for service



Fig. 3 Disconnect Voice Coil Lead before completing removal of cover

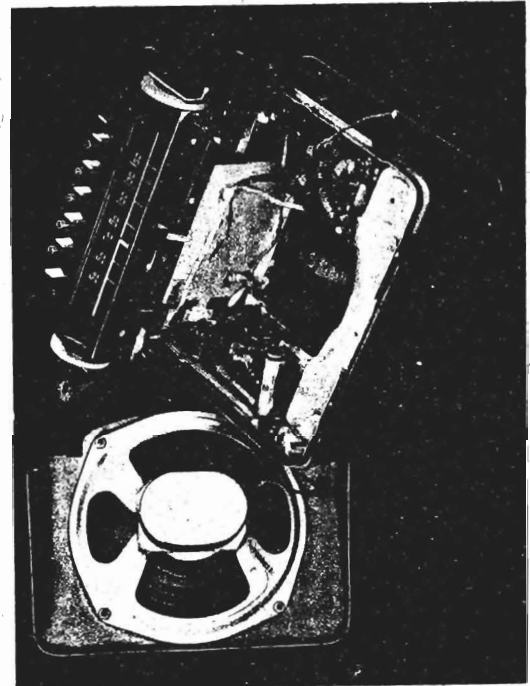


Fig. 4 Disassembled for service

MODEL 7238399
Voltage, Chassis
Socket

CADILLAC DIV.—GEN. MOTORS

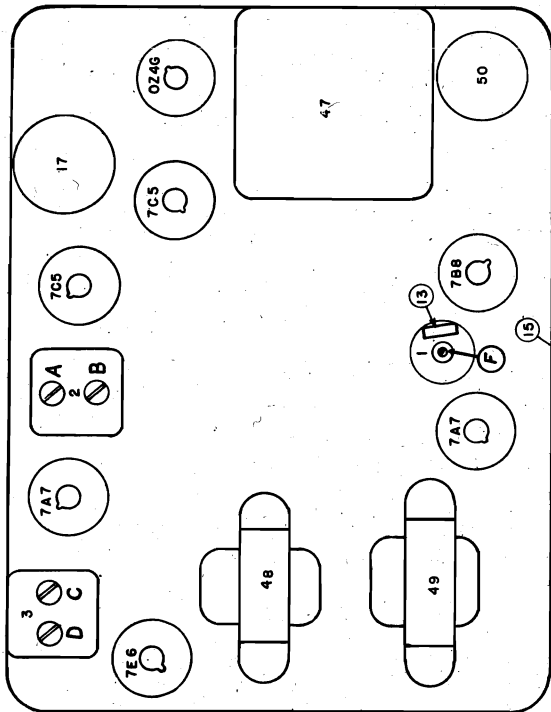


Fig. 5-Parts Layout-Top View-Cadillac 1940 Rear Compartment Radio



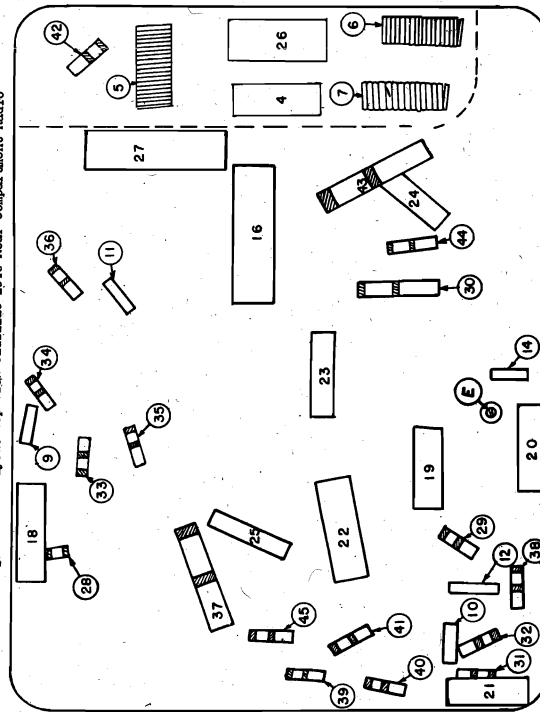


Fig. 6-Parts Layout-Bottom View-Cadillac 1940 Rear Compartment Radio

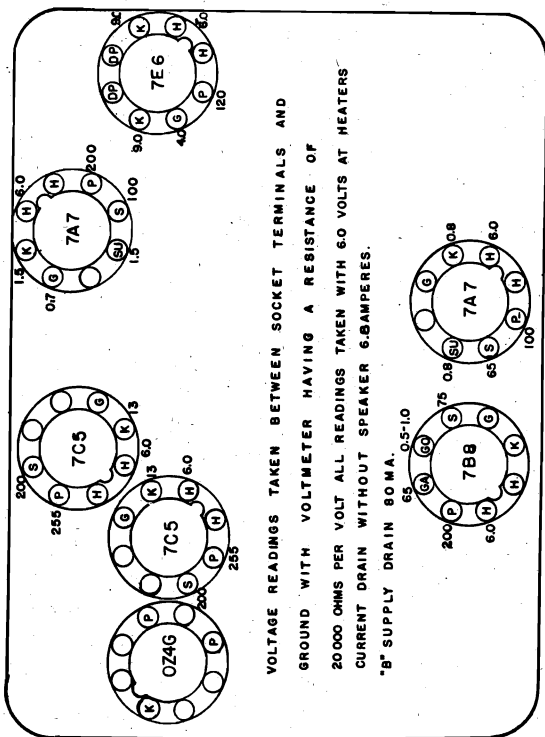

VOLTAGE READINGS TAKEN BETWEEN SOCKET TERMINALS AND GROUND WITH VOLTMETER HAVING A RESISTANCE OF 20000 OHMS PER VOLT ALL READINGS TAKEN WITH 6.0 VOLTS AT HEATERS CURRENT DRAIN WITHOUT SPEAKER 6.8AMPERES. "B" SUPPLY DRAIN 80 MA.

Fig. 8-Voltage Chart-Cadillac 1940 Rear Compartment Radio

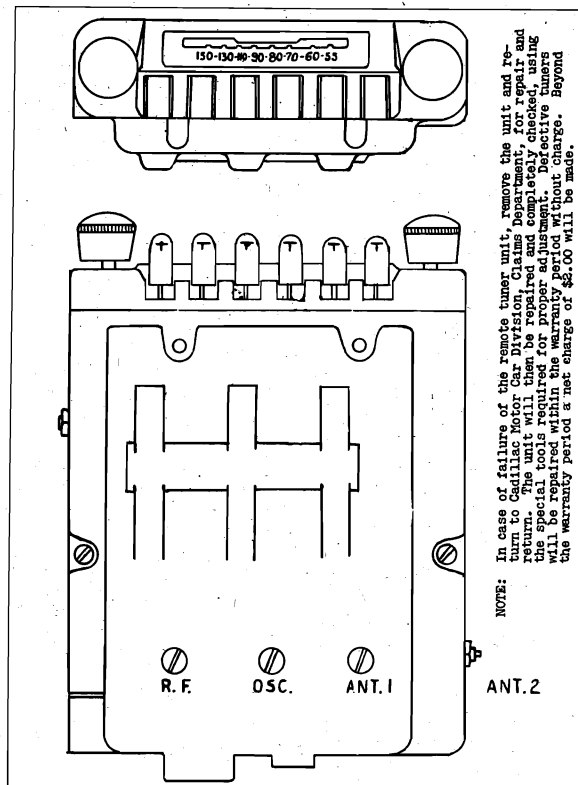


NOTE: In case of failure of the remote tuner unit, remove the unit and return to Cadillac Motor Car Division, Claims Department, for repair and the unit will then be repaired and completely checked, using the special test equipment and procedure. Effective tuners will be repaired within the warranty period without charge. Beyond the warranty period a net charge of \$2.00 will be made.

Fig. 7-Automatic Tuner Outline-Cadillac 1940 Rear Compartment Radio

CADILLAC DIV.—GEN. MOTORS

MODEL 7238399
Schematic

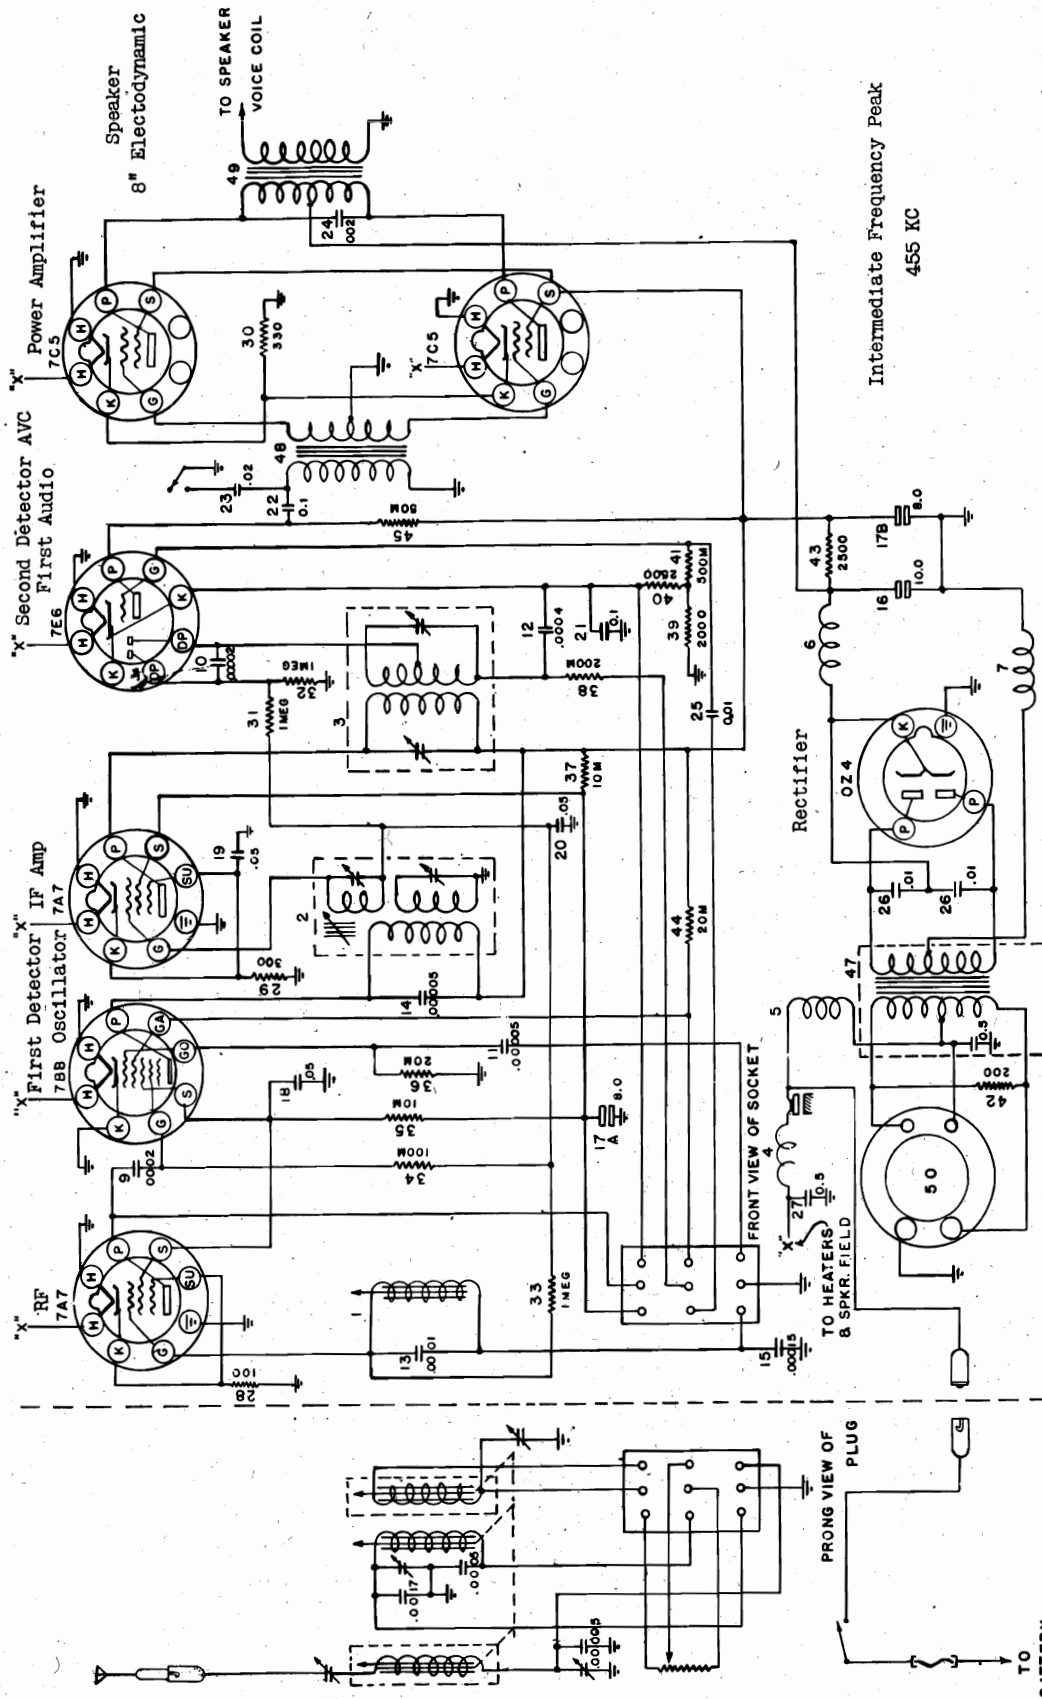

545 to 1560 KC
545 to 1560 KC
545 to 1560 KC

Tuning Range
Manual Tuning
Automatic Tuning (all 6 buttons)
Antenna Trimmer - Set at Factory for 200 mmf. under car antenna

AMPLIFIER UNIT
6 Watts Undistorted
7.5 Amperes at 6 Volts
2 Microvolts at 1 watt output
35 KC

TUNING UNIT
Power Output
Power Consumption
Sensitivity
Selectivity at 1000 times signal

Intermediate Frequency Peak
455 KC

MODEL 7238399
Antenna Data

CADILLAC DIV.—GEN. MOTORS

ANTENNA INSTALLATION INSTRUCTIONS

Three Vacuum Antenna packages released for use on 1940 Cadillac and LaSalle cars are:

Part Number	Series
1436388	40-50
1436389	40-52, 60S, 62, 72
1436590	40-75, 90

These packages are identical except for the insulators and attaching parts, but it is extremely important that the proper assembly be used for the particular car on which the installation is being made, else the bakelite insulators will not properly fit the hood contours.

TO INSTALL VACUUM ANTENNA

- Place the template supplied in the antenna package on the cowl and punch the center of the 1-1/32" hole with a center punch, using the 1/4" pilot drill of Hinkley-Myers J-1272-C tool to drill through the cowl at the angle shown in the top view of Fig. 1. After this hole is drilled raise the drill to a vertical position as shown in the lower view of Fig. 1 and drill through with the 1-1/32" cutter.

If a Hinkley-Myers J-1272-C tool is not available this hole may be cut by drilling around the edge of the outline of the hole on the template with a 5/32" drill and filing off the rough edges. Care should be exercised so that the finished hole will not be too large.

Hinkley-Myers tool J-1272-C may be purchased direct from Hinkley-Myers Co., Jackson, Michigan.

- Remove side panel kick pad.
- Assemble the hoses supplied with the antenna to the control valve as shown in Fig. 2 and install in the far left hole provided in the left end of the lower flange of the instrument panel.

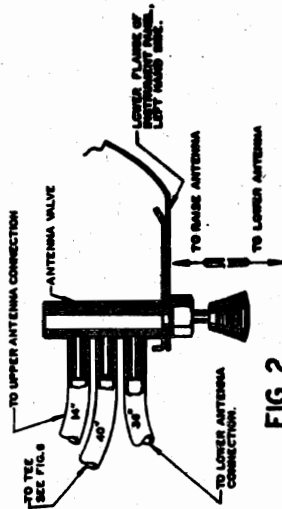


FIG. 2

- Attach the bottom antenna support bracket (L) to the front end body brace on Series 40-50, 52, 62 and 72 with self tapping screw, as shown in Fig. 3. The hole is provided in Series 40-50 but must be drilled in Series 40-52, 62 and 72. On Series 40-60S, 75 and 90 this support is built into the body brace and it is only necessary to insert the rubber grommet through the hole.

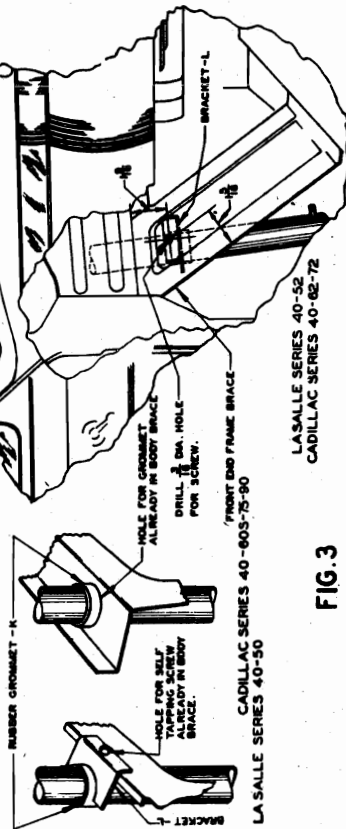


FIG. 3

- Lower the antenna assembly through the hole in the cowl and put on rubber grommet (K) in Fig. 3 and washer (J) and rubber spacer (H) in Fig. 4.

- Assemble lower hose connection to the bottom of the antenna, as shown in Fig. 5.

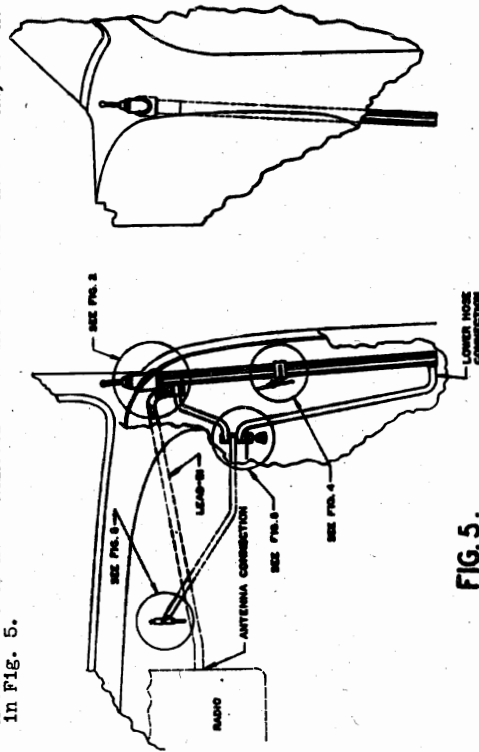


FIG. 5


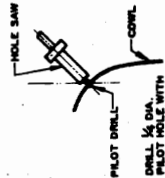


FIG. 1

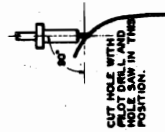


Antenna and Noise Suppression Notes

CADILLAC DIV.—GEN. MOTORS

**MODEL 7238399
Tuner Data**

TO SET UP PUSH BUTTONS

It is important that the buttons be set accurately. This may be accomplished by lowering the vacuum aerial to a point where the signal is just being heard. Setting the stations selected by the push buttons has just been made easy. Pulling of a button reveals a screwdriver slot recessed in a brass tube next to the button plunger arm. This screw, when rotated counterclockwise by means of a screwdriver furnished with the set in the call letter envelope, unlocks the tuner setting for that particular button. The plunger arm is then held in a fully depressed position while the station is tuned in by means of the manual tuning wheels. The plunger arm is then released and the lock-up screw is tightened by rotating in a clockwise direction with the screwdriver provided. Check for accuracy of setting by tuning in from each end of the dial with the button.

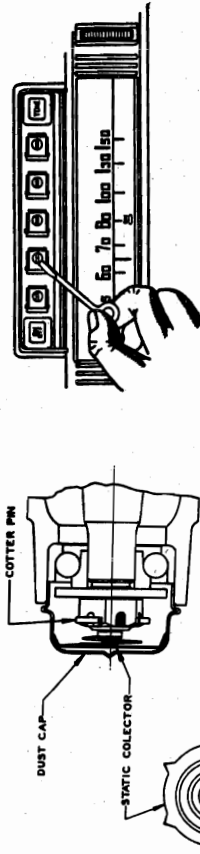

FRONT WHEEL STATIC COLLECTOR INSTALLATION
SERIES 40-50, 55, 60S, 62, 72


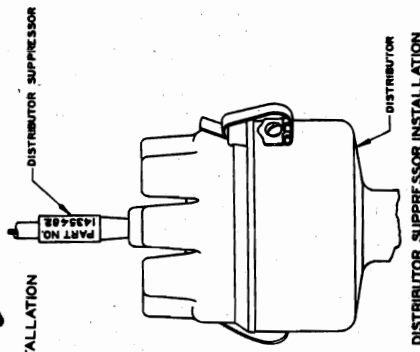


FIGURE -7

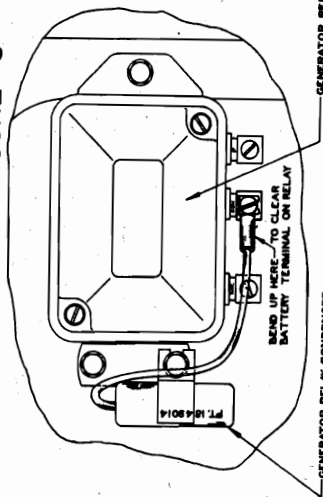

GENERATOR RELAY CONDENSER INSTALLATION
Install generator condenser, Part #1849014, on the generator terminal of the relay box.

Install suppressor, Part #1455482, in the center terminal of the static collector in the front wheels on Series 40-50, 52, 62, 60S, and 72. See Fig. 8. Bend cotter key over the nut as shown, so that it does not interfere with static collector.

On some cars it may be necessary to bend the oil and throttle line to the dash.

Bond motor to the frame at the two front motor supports, using the bond straps supplied in the antenna package.

Bond exhaust system to the frame, using bond straps supplied with the antenna.

Bond transmission mainshaft housing to center or crossmember.

Bond transmission housing to the floorboard, making the bond as short as possible.

Bond both engine blocks to the dash.

IGNITION SUPPRESSION

AND

WHEEL STATIC

SUPPRESSION

7. Assemble antenna lead and upper hose connection with parts in order as shown in Fig. 4.
8. Ground antenna lead shield to upper body brace with self tapping screw. The hole for this screw is provided on Series 40-50, 60S, 75 and 90. On Series 40-52, 62 and 72 it will be necessary to drill a 9/64" hole for this screw.
9. Attach the 14" length of hose securely to the upper antenna connection through cap, as shown in Fig. 4.
10. Attach the 36" length of hose to the lower hose connection on the antenna, as shown in Fig. 5.
11. Raise the antenna through the hole in the cowl and install the rubber pad (G) Bakelite insulator (F) Washer (E) Spring (D) Brass Washer (C) Packing gland (B) and nut (A). Tighten nut (A) until the shoulder and the antenna insulator seats against the top of antenna as shown in Fig. 4. IMPORTANT - When tightening nut (A) do not get it too tight. Turn it down carefully until the stop is reached, then back off slightly.
12. Push grommet (K) into place in bracket (L) or the hole in the support brace, as shown in Fig. 3.
13. Cut windshield wiper hose and insert the tee connection. Attach the 40-inch length of hose to the tee connection, as shown in Fig. 6.
14. Plug the antenna lead into the radio set and check adjustment of the antenna trimmer for proper setting. Radios shipped from the factory are set for use with the vacuum aerial.
15. Start the motor and check the operation of the antenna. Push the control valve up to raise the antenna and pull down and lower the antenna. For best operation occasionally wipe the antenna rod free of dust and other accumulation.

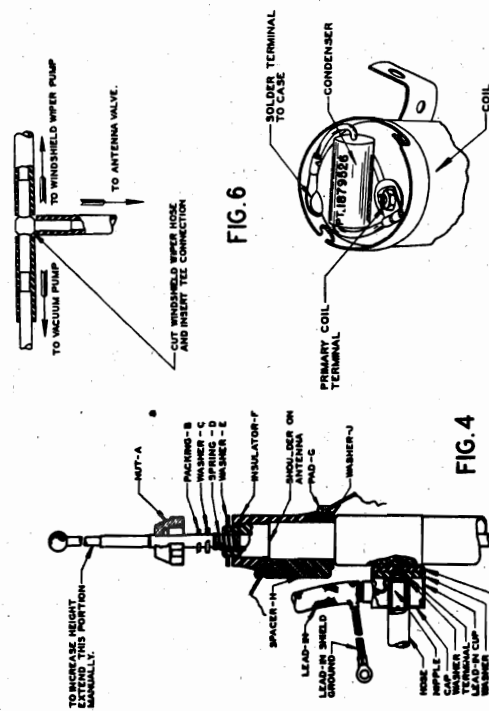


FIG. 6

FIG. 4

COIL CONDENSER INSTALLATION
Install coil condenser, Part #1879526, in the top of the ignition coil, using tool J-726 to remove the cover. Make sure the coil is well grounded to the dash by scraping off the paint on the dash and coil bracket.

MODEL 7238399

Tuner Data, Alignment

CADILLAC DIV.—GEN. MOTORS

CADILLAC 1940 AUTOMATIC RADIO FOR REAR COMPARTMENT INSTALLATION

SETTING UP STATIONS ON PUSH BUTTONS

There are six push buttons on the remote tuner unit by means of which six stations may be set up for automatic tuning. (See B, Fig. 1.)

Select the six stations desired and punch out from the set of station call letter tabs supplied the call letters of the stations selected. On the top of each push button a slot is provided for inserting the call letter tabs (See A, Fig. 1). Insert the tabs, then proceed as follows:

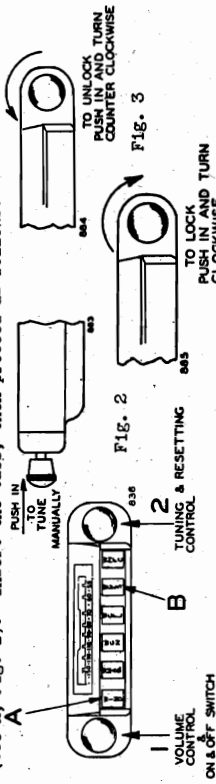


Fig. 1—Front View of Remote Tuner Unit

1. Push on the dial tuning knob hard enough to make it latch in. (See Fig. 2.)
2. Rotate the dial tuning knob to the left (counter-clockwise), until the knob cannot be turned any further without forcing. (See Fig. 3.)

As the knob is rotated it will turn easily until the pointer reaches the end of the dial scale and then a slight amount of force will be required to actually start unlocking the tuner mechanism. Beyond this point the knob will turn quite easily again until the tuner mechanism is completely unlocked. At this point do not force the knob any further. The tuner mechanism is now unlocked.

(NOTE: Automatic tuner mechanism is locked tight when radio is shipped from the factory.)

SETTING PUSH BUTTONS

1. Push in all the way any one of the push buttons and at the same time hold in firmly the dial tuning knob. Both the dial tuning knob and the push button should be pushed hard enough to make them stay latched in. The reason for holding the dial tuning knob in firmly when the push button is pressed in is due to the latching mechanism in the remote tuner unit which is so constructed as to release the dial tuning knob entirely when a push button is pressed in. When setting up stations for automatic tuning, however, it is necessary that both the dial tuning knob and the push button be latched in together.
2. Press in on the push button which is latched in. Holding it in firmly, tune in by means of the manual tuning knob the station indicated on the station call letter tab on this push button. Turn the dial tuning knob very slowly back and forth (while still pressing in firmly on the push button), until the station is accurately tuned in.
3. Push in all the way another push button, at the same time holding the dial tuning knob in so that both the push button and the dial tuning knob are latched in together. Holding the push button in firmly, tune in the station indicated on the call letter tab on this push button.
4. Follow this procedure until you have tuned in all six selected stations.
5. When the last push button has been properly set up it is necessary to release it from the latched-in position before the tuner mechanism can be locked. To release this push button, slightly depress any other push button, this will trip the latching mechanism and all the push buttons will be released to out position.

TO LOCK

(NOTE: All the push buttons must be in out position when locking the tuner mechanism.)

To lock the tuner mechanism push on the dial tuning knob hard enough to make it stay latched in. Rotate the dial tuning knob to the right (clockwise) until the knob cannot be turned any further with forcing it. (See Fig. 4) This will lock the tuner mechanism and all the stations that have been set up on the buttons will be locked in place for automatic tuning.

ANTENNA

An under car antenna must be used with the rear compartment radio. Instructions for installation are supplied with each antenna.

ALIGNMENT PROCEDURE

Two separate alignment procedures are included in these instructions. The first is to be considered the usual alignment procedure and the second to be used only when a tuning coil has been replaced or when some major change has been made in the tuning apparatus.

CAPACITY ALIGNMENT

I.F. Alignment at 455 KC

- (a) Connect an output meter across the voice coil of the speaker leaving speaker connected or connecting a 1.7 ohm load instead of the speaker.
- (b) Connect the ground lead of the signal generator to the set chassis and the signal lead to the "G" prong of the 758 tube through a .1 mfd. condenser.
- (c) With signal generator frequency set at 455 kilocycles adjust the I.F. trimmers A, B, D & E and I.F. core adjustment E in the sequence named until maximum output is obtained. (Fig. 5 & 6.)
- (d) Connect the signal lead of the signal generator to the antenna connection of the set through a 150 mfd. condenser. Adjust the I.F. trap adjustment F for MINIMUM response. (Generator frequency 455 KC) Fig. 5.

Alignment at 1530 KC

- (a) Set frequency of the signal generator to 1530 KC.
- (b) By means of the manual tuning control adjust the tuning control of the set to its highest frequency position against the high frequency stop.
- (c) Adjust the oscillator trimmer ("osc" on tuning unit) for maximum output. See Fig. 7.

Alignment at 600 KC


- (a) Set the signal generator frequency to 600 KC.
- (b) Tune set to this signal and adjust the RF trimmer ("R.F." on tuning unit) for maximum output, while rocking tuning control back and forth through the signal. See Fig. 7.
- (c) Adjust the antenna trimmers ("Ant 1" and "Ant 2") on the tuning unit for maximum output. Fig. 7.

Alignment at 1400 KC

- (a) Set signal generator frequency to 1400 kilocycles and tune set to this signal.
- (b) Using an insulated three cornered prong tool adjust the core positions for maximum output reading.

CHEVROLET DIV.—GEN. MOTORS

MODEL 985536
Schematic

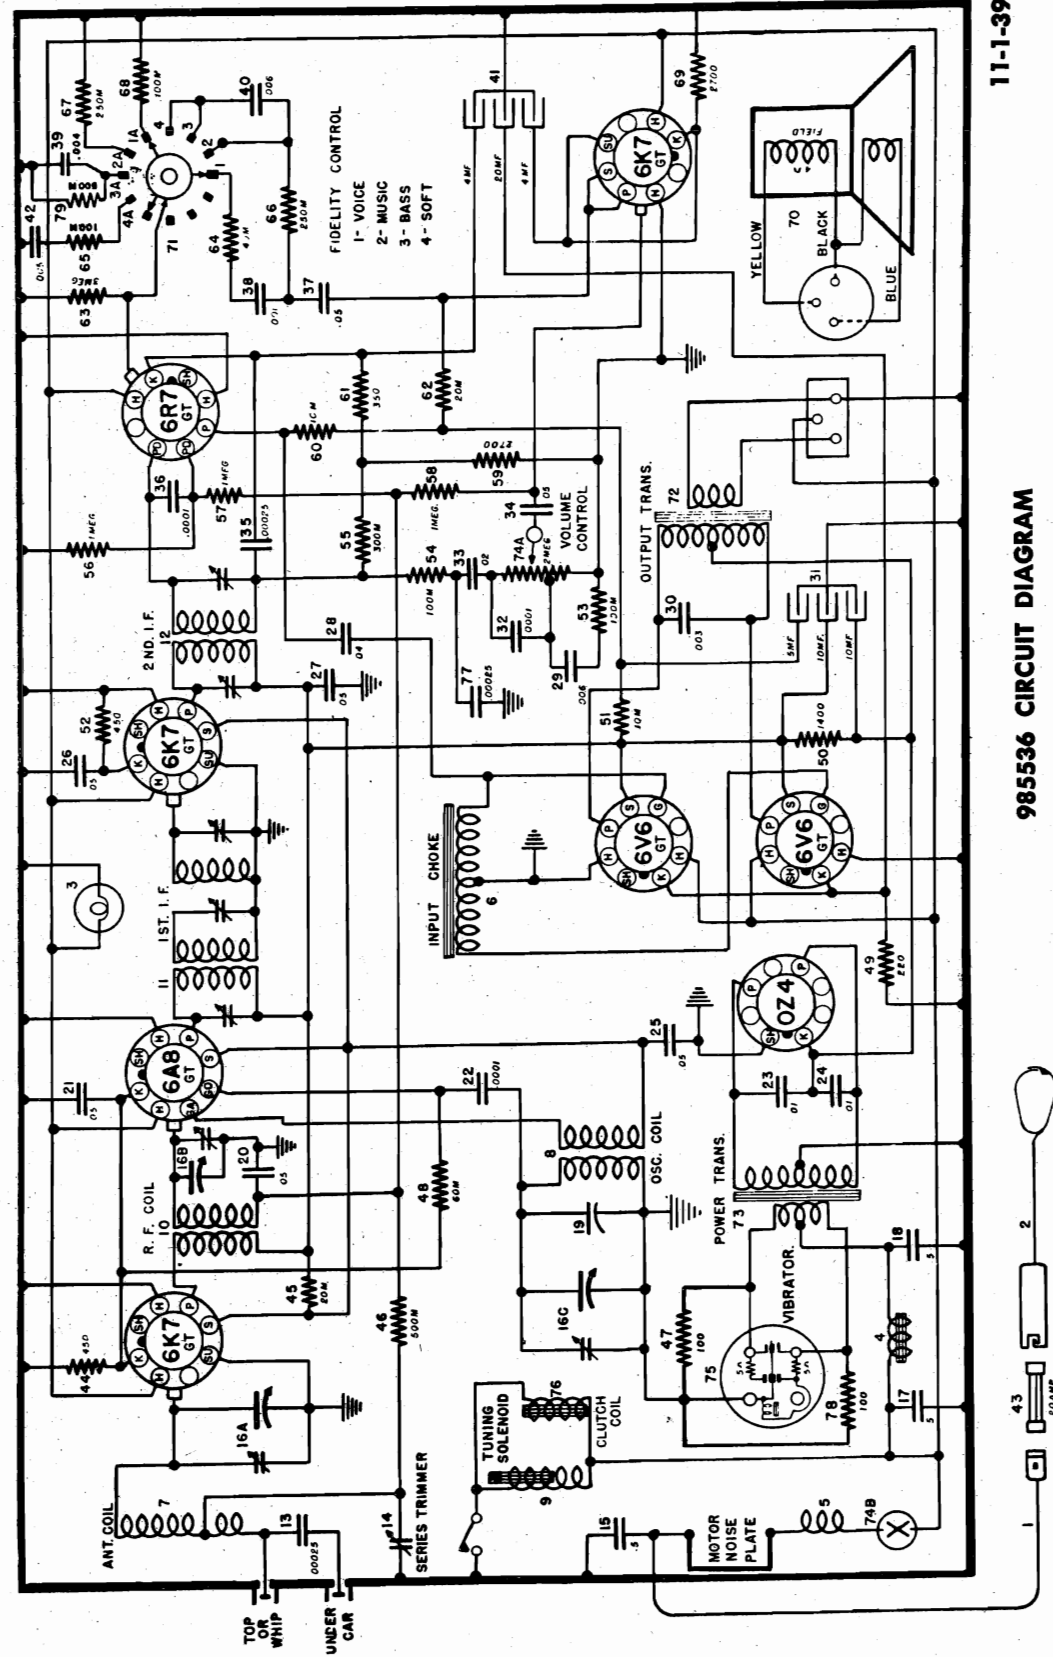

11-1-39

985536 CIRCUIT DIAGRAM



IF PEAK 262.5 KC

Tube Complement




Type	Function	Type	Function
6K7GT	R.F. Amplifier	6K7GT	1st Audio (A.V.C. Controlled)
6A8GT	Oscillator-Modulator	6V6GT	Output
6K7GT	I.F. Amplifier	OZ4	Rectifier
6R7GT	2nd Detector A.V.C. Rectifier		

MODEL 985536
Voltage, Alignment
Chassis, Trimmers
Socket, Data

CHEVROLET DIV.—GEN. MOTORS

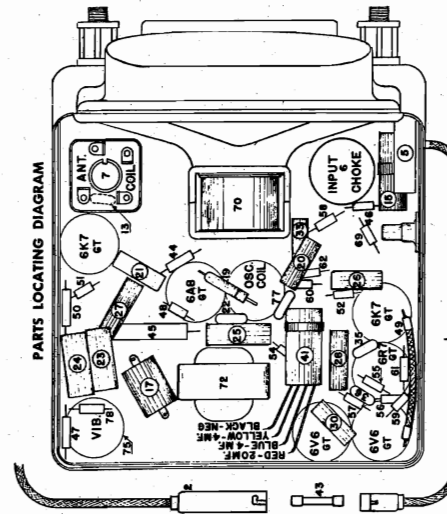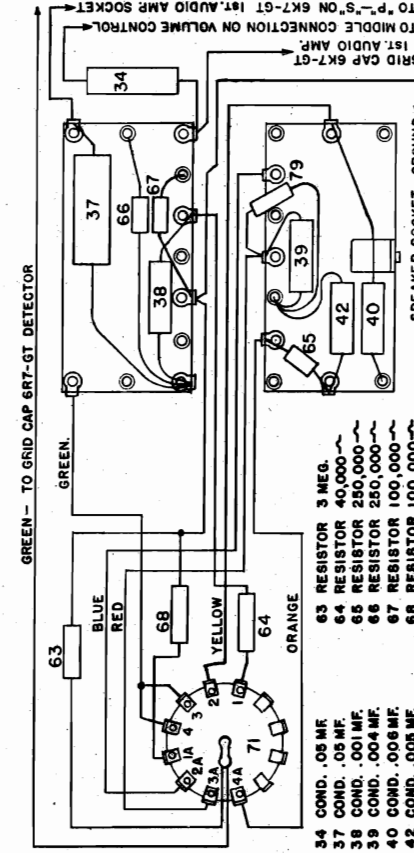

ANTENNA SYSTEM: There are three antennas available for use with this receiver; the under car, the turret-top, or the telescopic cowl. Any one of these antennas will operate very efficiently when used with this Chevrolet radio.

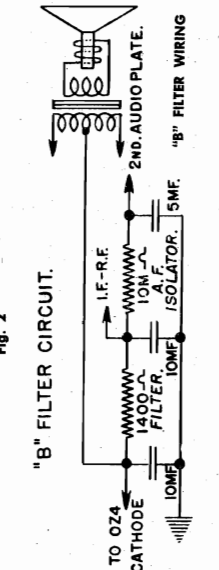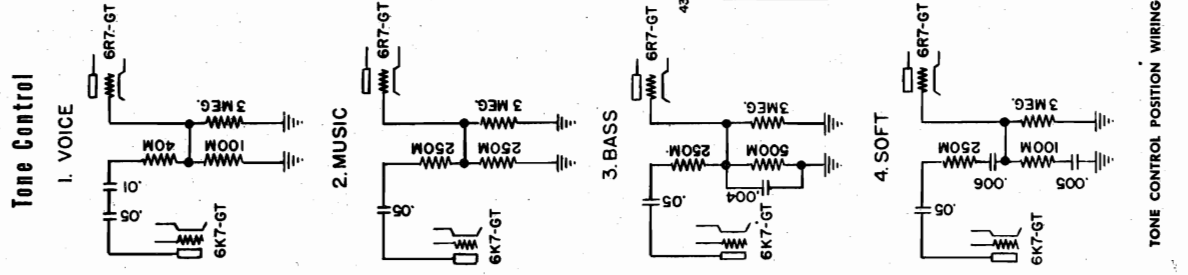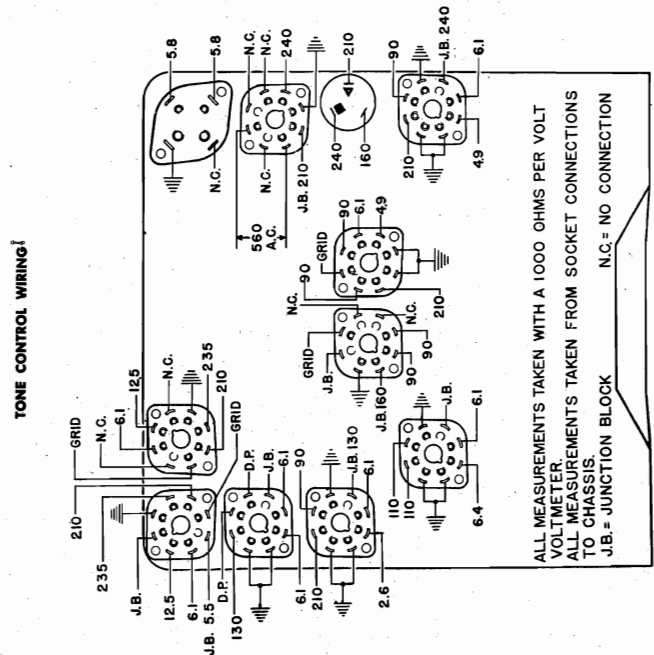

MODEL 985536
Circuit Data, Tuner
Alignment Notes, Parts

CHEVROLET DIV.—GEN. MOTORS

Production Part No.	Service Part No.	Part Name	Description—Function	Illus. No.
1212932		Lead Assy.	"A" Lead—Set to Fuse	1
1212933		Lead Assy.	"A" Lead—Fuse to Ammeter	2
115273		Bulb	Dial Light	3
1213883		Coil	"A" Filter Choke	4
1213884		Coil	Motor Noise Choke	5
1213641		Coil	Audio Input Choke	6
1213645		Coil	Antenna	7
1212893		Coil	Oscillator	8
1213885		Coil	Tuning Solenoid	9
1212979		Coil	R.F.	10
1213646		Coil	1st I.F. Trans. Assy.	11
1213849		Coil	2nd I.F. Trans. Assy.	12
1209055		Condenser	Molded—.00025 mfd. Ant. Coupling	13
1211535		Condenser	Antenna Series Compensating	14
1213648		Condenser	Tubular—.5 mfd. 200 Volt—H.F. Noise Filter	15
1213643		Condenser	Variable—3 Gang Tuning	16
7232390		Condenser	Tubular—.5 mfd. 160 Volt—Filter	17
7232390		Condenser	Tubular—.5 mfd. 160 Volt—Filter	18
7234975		Condenser	Thermal—Temp. Compensating (Osc.)	19
1210295	7230592	Condenser	Tubular—.05 mfd. 200 Volt—R.F. Return	20
1210295	7230592	Condenser	Tubular—.05 mfd. 200 Volt—R.F. Cathode By-Pass	21
1210275		Condenser	Molded—.0001 mfd. Mica—Osc. Coupling	22
1212316	1208600	Condenser	Tubular—.01 mfd. 650 Volt—Vib. Phasing	23
1212316	1208600	Condenser	Tubular—.01 mfd. 650 Volt—Vib. Phasing	24
1209308	7230592	Condenser	Tubular—.05 mfd. 400 Volt—Screen By-Pass	25
1210295	7230592	Condenser	Tubular—.05 mfd. 200 Volt—I.F. Cathode By-Pass	26
1209308		Condenser	Tubular—.05 mfd. 400 Volt—B+, R.F. By-Pass	27
1213651	7230910	Condenser	Tubular—.04 mfd. 400 Volt—2nd A.F. Output	28
1210293	7230593	Condenser	Tubular—.006 mfd. 160 Volt—V.C. Bass Compensating	29
1208942	1207893	Condenser	Tubular—.003 mfd. 400 Volt—Plate By-Pass	30
1213652		Condenser	Electrolytic—3 Section (10-10-5 mfd.) B. Filter	31
1210275		Condenser	Molded—.0001 mfd.—H.F. By-Pass	32
1210257	1207799	Condenser	Tubular—.02 mfd. 160 Volt—A.F. Coupling	33
1210295	7230592	Condenser	Tubular—.05 mfd. 200 Volt—1st A.F. Coupling	34
1209055		Condenser	Molded—.00025 mfd.—Diode Rectifying	35
1210275		Condenser	Molded—.0001 mfd.—Diode Coupling	36
1209308	7230592	Condenser	Tubular—.05 mfd. 400 Volt—A.F. Coupling	37
1213647	1212097	Condenser	Tubular—.001 mfd. 160 Volt—Bass Limiting (F.C.)	38
1213650	7233243	Condenser	Tubular—.004 mfd. 160 Volt—H.F. By-Pass (F.C.)	39
1210293	7230593	Condenser	Tubular—.006 mfd. 160 Volt—Bass Limiting (F.C.)	40
1213653		Condenser	Electrolytic—3 Section (4-20-4 mfd.) Cathode By-Pass	41
1213649	7230912	Condenser	Tubular—.005 mfd. 160 Volt—H.F. By-Pass (F.C.)	42
106653	603156	Fuse	20 Ampere	43
1211701	1208110	Resistor	Flexible—450 ohm, 1/2 Watt—R.F. and Det. Bias	44
1212668		Resistor	Insulated—20,000 ohm, 2 Watt—Screen Dropping	45
1210470		Resistor	Insulated—500,000 ohm, 1/2 Watt—AVC Filter	46
1211703	1209015	Resistor	Flexible—100 ohm, 1/2 Watt—Vib. Damping	47
1210881		Resistor	Insulated—60,000 ohm, 1/2 Watt—Osc. Grid Leak	48
1208321		Resistor	Flexible—220 ohm, 2 1/2 Watt—Output Bias	49
1212981		Resistor	Insulated—1400 ohm, 1 1/2 Watt—Hum Filter	50
1210834		Resistor	Insulated—10,000 ohm, 1/2 Watt—Audio Plate Filter	51
1211701	1208110	Resistor	Flexible—450 ohm, 1/2 Watt—I.F. Bias	52
1209883		Resistor	Insulated—100,000 ohm, 1/2 Watt—Bass Comp.	53
1209883		Resistor	Insulated—100,000 ohm, 1/2 Watt—I.F. Filter	54
1209884		Resistor	Insulated—300,000 ohm, 1/2 Watt—A.F. Diode Load	55
1209885		Resistor	Insulated—1 megohm, 1/2 Watt—AVC Diode Load	56
1209885		Resistor	Insulated—1 megohm, 1/2 Watt—AVC Filter	57
1209885		Resistor	Insulated—1 megohm, 1/2 Watt—AVC Isolating	58
1211049		Resistor	Insulated—2700 ohm, 1/2 Watt—2nd A.F. Bias	59
1210834		Resistor	Insulated—10,000 ohm, 1/2 Watt—2nd A.F. Plate	60
1211704	1208802	Resistor	Flexible—350 ohm, 1/2 Watt—2nd A.F. Bias	61
1210882		Resistor	Insulated—20,000 ohm, 1/2 Watt—1st A.F. Plate	62
1211149		Resistor	Insulated—3 megohm, 1/2 Watt—2nd A.F. Grid Return	63
1211104		Resistor	Insulated—40,000 ohm, 1/2 Watt—Voltage Divider (F.C.)	64
1209883		Resistor	Insulated—100,000 ohm, 1/2 Watt—Voltage Divider (F.C.)	65
1210117		Resistor	Insulated—250,000 ohm, 1/2 Watt—Voltage Divider (F.C.)	66
1210117		Resistor	Insulated—250,000 ohm, 1/2 Watt—Voltage Divider (F.C.)	67
1209883		Resistor	Insulated—100,000 ohm, 1/2 Watt—Voltage Divider (F.C.)	68
1211049		Resistor	Insulated—2700 ohm, 1/2 Watt	69

1213644	Switch	Tone Control—not to be serviced	71	
1213642	Transformer	Output	72	
1213640	Transformer	Power	73	
1213639	Switch	Volume Control and On-Off Switch—2 megohm	74	
7239439	Vibrator		75	
1213886	Coil	Clutch	76	
1209055	Condenser	Molded—.00025 mfd.—I.F. Filter	77	
1211703	1209015	Resistor	Flexible—100 ohm, 1/2 Watt—Vib. Damping	78
1210470	Resistor	Insulated—500,000 ohm, 1/2 Watt—Bass Leveler (F.C.)	79	

Circuit Description

The circuit used in this receiver is the conventional superheterodyne type and does not use any regeneration. The eight tubes employed are an R. F. Amplifier, combination Oscillator-Modulator Tube, 262.5 kilocycle I. F. amplifier the first transformer of which is triple tuned, push-pull output and power supply. The 6R7GT tube supplies A.V.C. voltage to the grids of the 6K7GT R. F. amplifier, the 6A8GT and the 6K7GT first audio amplifier. It also serves as second detector and second audio amplifier driver. The bias for the 6K7GT R. F. amplifier and the 6A8GT tubes is developed across a 450 ohm resistor, item No. 44. The bias for the 6K7GT I. F. amplifier tube is developed across a 450 ohm resistor, item No. 52. Bias for the 6K7GT first audio tube is developed across a 2700 ohm resistance, item No. 69. Bias for the 6R7GT tube is developed across two resistances, item numbers 59-350 ohms and 61-2700 ohms. Bias for the 6V6GT tubes is developed across a 220 ohm resistance, item No. 49. Between the 6K7GT first audio plate and the 6R7GT ground is the fidelity control resistor capacity network. The 6R7GT plate is coupled through a .04 mfd. condenser to one side of the center tapped audio input choke.

Explanation of Tone Control Positions and Automatic Volume Control

Automatic Volume Control

The 6R7GT diode furnishes A.V.C. voltage developed across item 56, 1 megohm load resistor, to the 6A8GT through item 57, 1 megohm filter resistor; from the 1 megohm filter through a 500,000 ohm isolating resistor (item 46) to the R-F 6K7GT grid; likewise from the 1 megohm filter through a 1 megohm isolating resistor (item 58) to the grid of the 6K7GT first audio tube.

Tone Control

The fidelity control and its tone compensating network is between the 1st audio amplifier and driver tube. When the switch is in the VOICE position the signal is fed through a .05 condenser (item 37) then through a .001 condenser (item 38) which limits or acts as a high impedance to low frequencies, limiting the frequencies passed to the middle and high range. From the .001 condenser the signal passes through a 40,000 ohm (item 64) and a 100,000 ohm (item 68) resistor to ground. These two resistors act as a voltage divider and the signal to the 6R7GT driver grid is taken off at the junction of the 40,000 and 100,000 ohm resistors. Likewise there is a 3 megohm resistor (item 63) from the 6R7 grid to ground, while this is shunted across the 100,000 ohm resistor (item 68) its effect on the circuit is negligible and its real purpose is to form a d-c grid return when the fidelity switch is in the SOFT position.

The path of the audio with the fidelity switch in the MUSIC position is as follows: Through .05 condenser (item 37) a 250,000 ohm resistor (item 66) and a 250,000 ohm resistor (item 67) to ground. Items 66 and 67 form divider and 6R7 grid is fed from junction of these two resistors. This position provides normal response which is well rounded with both lows and highs.


For the BASS position, the signal from the 6K7GT plate passes through the .05 condenser (item 37) the 250,000 ohm resistor (item 66) and a 500,000 ohm resistor (item 79) to ground. Item 79, the 500,000 ohm resistor is shunted by a .004 condenser (item 39). This condenser bypasses the highs so that the lows and the middle range predominate. The grid of the 6R7GT is fed from the junction of items 66, 79, and 39.

For the SOFT position the a-f is fed through the coupling condenser (.05 uf. item 37) the 250,000 ohm resistor (item 66) then through a .006 uf. condenser (item 40) to a 100,000 ohm resistor (item 65) through a .005 uf. condenser (item 42) to ground. The 6R7GT grid is fed from the junction of items 40 and 65. The function of Item 40 the .006 uf. condenser, is to pass highs and middle frequencies while the purpose of Item 42, the .005 uf. condenser is to bypass the highs so the resultant output covers the middle range cutting both the highs and lows. Item 63, the 3 megohm resistor from the 6R7GT grid to ground, is the d.c. grid return.

Setting the Push Buttons

The order in which the stations are set up on the push buttons will in no way affect the operation of the tuning unit. To set the push buttons, no tools are required, but an understanding of the operation of the push-button switch is essential. There

are two definite pressures and movements required to actuate the switch. First, a slight touch and a movement of less than one-quarter inch is all that is required to tune the receiver with a push button after the button has been adjusted. Second, a heavier pressure and a movement of a little more than one-quarter inch is required when the push button is to be set to the station selected. To adjust the button, push the button all the way down and hold it in that position while you tune in as accurately as possible with the manual tuning knob the station selected. Release the button and the station is set. Follow the same procedure in setting the remaining buttons.

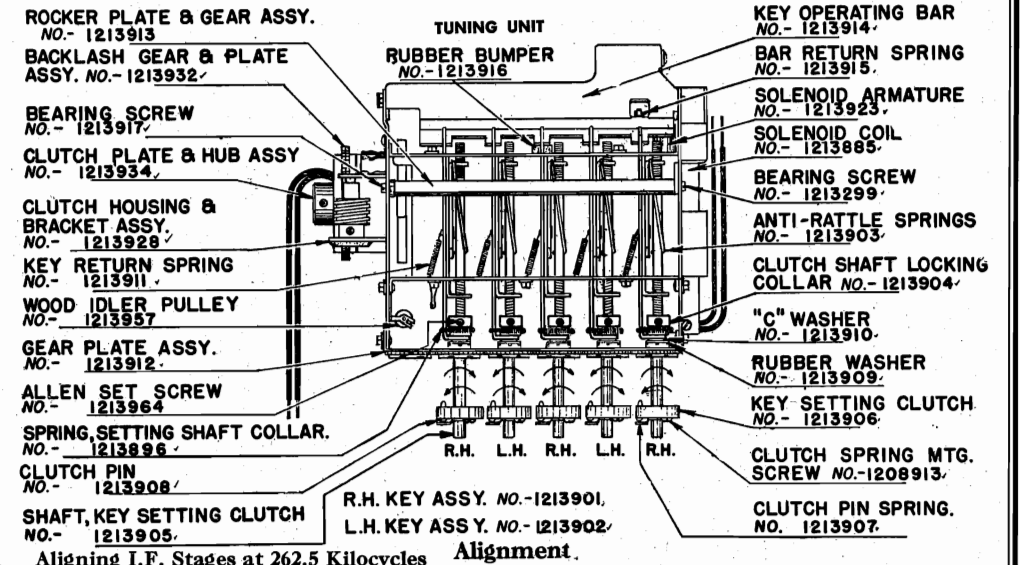

Aligning I.F. Stages at 262.5 Kilocycles Alignment.

USE A .02 MFD. DUMMY TO GRID OF 6K7GT TUBE (LEAVE GRID CAP IN PLACE). SET AUDIO FIDELITY TO "MUSIC" POSITION. AT 262.5 KC ADJUST SECOND IF TRIMMERS. THEN APPLY SIGNAL TO GRID OF 6A8GT TUBE (LEAVE GRID CAP IN PLACE). OPEN MIDDLE TRIMMER OF FIRST IF TRANSFORMER ADJUST TWO OTHER TRIMMERS TO MAXIMUM AND THEN THE MIDDLE TRIMMER FOR MAXIMUM. DO NOT READJUST SECOND IF.

Oscillograph Alignment

- Disconnect the conventional signal generator from the receiver.
- Connect the vertical plates of the oscillograph to the receiver connecting the (HI) terminal through a .02 mfd. condenser to the grid cap of the 6K7GT audio amplifier tube, leaving the tube's grid clip in place. (Condenser is built into most oscillographs.) Connect the ground terminal to the frame of the receiver chassis.
- Connect the output of the R.F. modulated signal generator, also through a .02 mfd. condenser to the grid cap of the 6A8GT tube, leaving the tube's grid clip in place. Connect the ground lead to the frame of the receiver chassis.
- Adjust the signal generator to 262.5 kilocycles.
- With the modulator switch of the signal generator turned off, a horizontal line will appear on the window of the oscillograph by means of the amplitude control on the oscillograph. Adjust the length of the line so that it is equal to the width of the celluloid scale supplied with the oscillograph.
- Turn the frequency modulator switch of the signal generator on.
- Adjust the vertical control of the oscillograph so that the image is just within the top and bottom lines of the oscillograph scale. NOTE: Use the lowest signal generator output that will give a stable image on the oscillograph window. If too much signal input is used, the humps desired on the wave form will not be visible even at perfect alignment.
- Readjust the middle trimmer on the 1st I.F. transformer for maximum symmetry above the vertical resonance line in the center of the celluloid scale. The hump or shoulder appearing on each side of the wave form will be equal distance from the numbers of the curve when maximum symmetry is reached.

Aligning the R.F. Amplifier


USE A .00016 MFD. DUMMY TO ANTENNA LEAD. AT 1400 KC ADJUST OSCILLATOR TRIMMER FOR MAXIMUM. THEN ADJUST RF AND ANTENNA TRIMMER FOR MAXIMUM. READJUST STATION SELECTOR FOR MAXIMUM. DO NOT READJUST OSCILLATOR TRIMMER.

Adjusting Antenna Compensating Condenser

SET SIGNAL AND DIAL AT 600 KC, ADJUST FOR MAXIMUM. ADJUST ALSO AT 1400 KC. WHEN INSTALLED IN CAR TUNE A WEAK STATION BETWEEN 55 AND 65 ON DIAL AND ADJUST FOR MAXIMUM VOLUME IN SPEAKER.

CHEVROLET DIV.—GEN. MOTORS

MODEL 985537
Schematic, Alignment

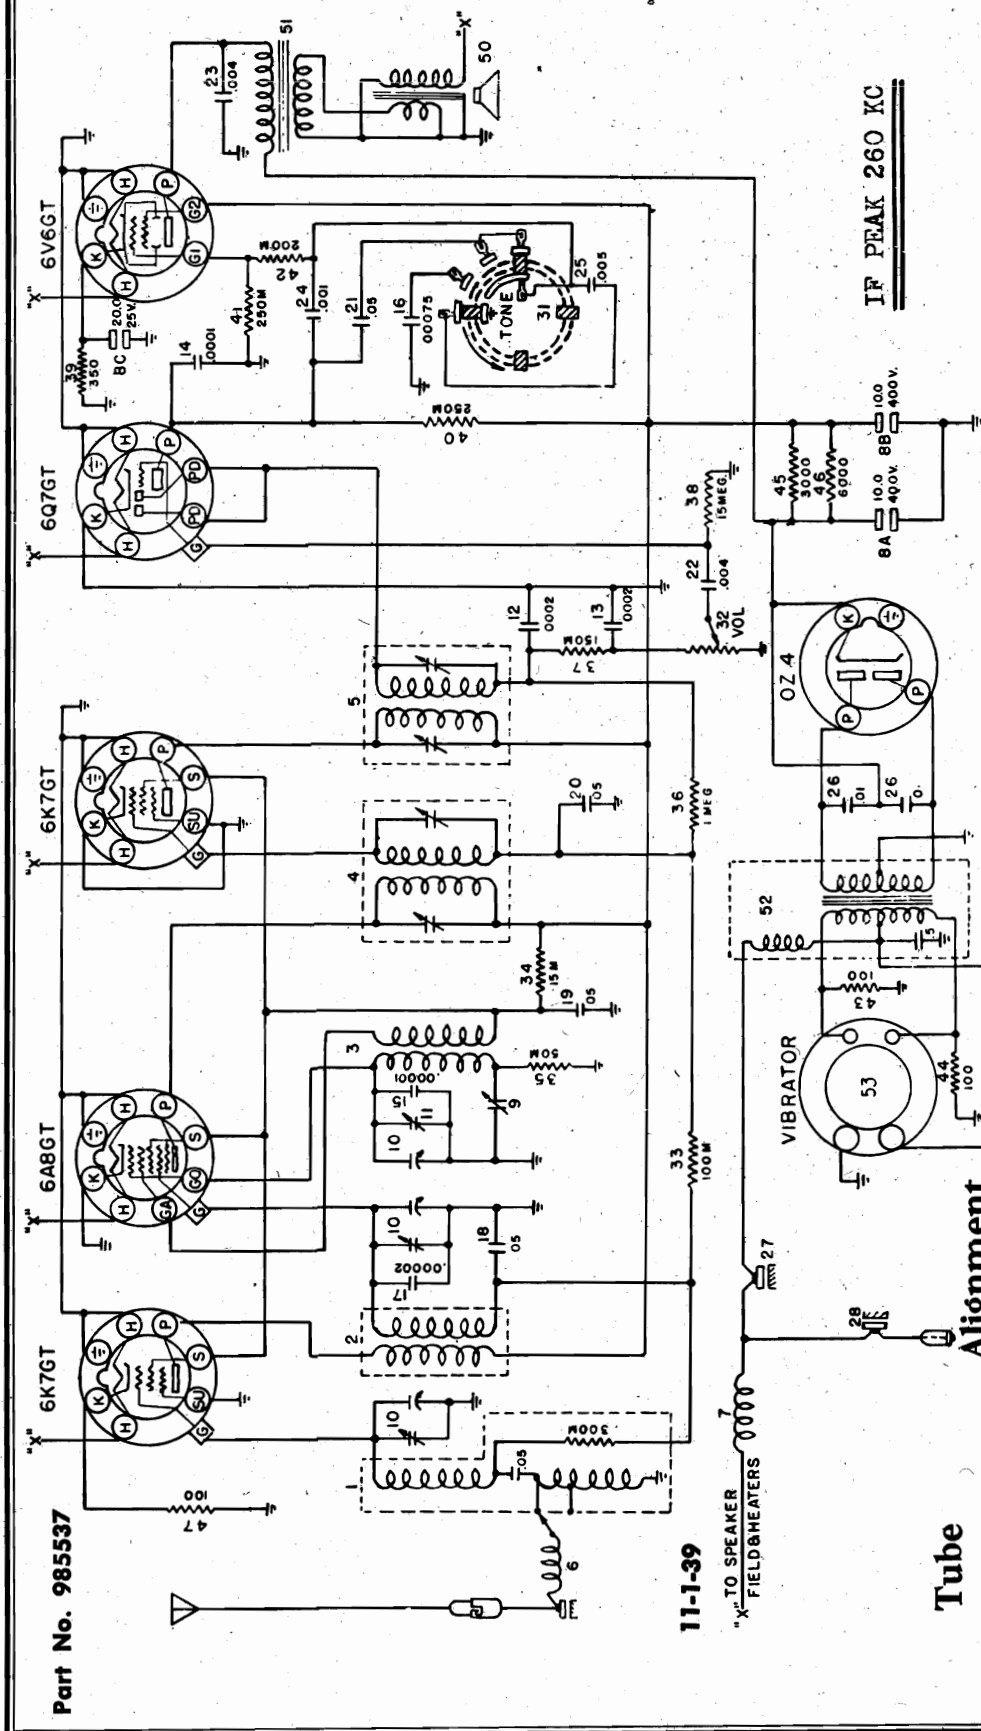

Tube

Complement

Type	Function
6K7GT	R.F. Amplifier
6A8GT	Oscillator-Modulator
6K7GT	I.F. Amplifier
6Q7GT	2nd Detector and A.V.C.
6V6GT	Power Output
OZ4	Rectifier

Alignment

At 260 KC:— Use a .1 mfd. condenser as dummy. Signal to 6A8GT grid (LEAVE GRID CAP IN PLACE). Adjust second and then first IF trimmers.

At 1560 KC:— Use a .00007 mfd. condenser as dummy. Signal to antenna post. Adjust oscillator parallel trimmer (e) for maximum output.

At 1400 KC:— Use a .00007 mfd. condenser as dummy. Connections as for 1560 KC. Adjust antenna RF (f) and (g) trimmers for maximum output.

At 600 KC:— With same connections adjust oscillator pad (h) at 600 KC while rocking condenser, for maximum output. Readjust at 1400 KC. With station selector, tune in 1400 KC signal for maximum output. Readjust trimmer on antenna section of gang condenser for maximum output.


MODEL 985537
Voltage, Chassis
Tuner, Parts

CHEVROLET DIV.—GEN. MOTORS

The circuit used in this receiver is the conventional superheterodyne type and does not use any regeneration. A special tone control circuit is employed to give the desired tone with no distortion.

POWER SUPPLY: The power supply uses an OZ4 rectifier tube in conjunction with a full wave primary type vibrator.



Production Part No.	Service Part No.	Part Name	Description—Function	Illustr. No.
7239170		Coil	Antenna Coil Assembly	1
7238665		Coil	R.F. Coil Assembly	2
7238676		Coil	Oscillator Coil Assembly	3
7239165		Coil	1st I.F. Assembly	4
7239164		Coil	2nd I.F. Assembly	5
7236560		Coil	Antenna Series Choke—Spark Noise Filter	6
7238679		Coil	Filament Choke—Motor Noise Filter	7
7239053		Condenser	Electrolytic	8
			Section A—10.0 mfd. 400V—"B" Input Filter	
			Section B—15.0 mfd. 400V—"B" Output Filter	
			Section C—20.0 mfd. 25V—Output Tube Cathode By-Pass	
7238678		Condenser	Oscillator Trimmer—Oscillator Padding	9
7238550		Condenser	Variable Gang Tuning Plus Plungers	10
7239191		Condenser	Air Trimmer—Oscillator Shunt Trimmer	11
7231178		Condenser	Molded Mica .0002 mfd.—Diode Load By-Pass	12
7231178		Condenser	Molded Mica .0002 mfd.—Diode Load By-Pass	13
7239184		Condenser	Molded Mica .0001 mfd.—Audio Plate By-Pass	14
7239335	1210275	Condenser	Ceramic .00010 mfd.—Temp. Compensating	15
7238578		Condenser	Molded Mica .0007 mfd.—Tone Control (Music)	16
7238580		Condenser	Molded Mica .000020 mfd.—R.F. Stage Padding	17
7236842	7230592	Condenser	Tubular .05 mfd. 200V—A.V.C. By-Pass	18
7236842	7230592	Condenser	Tubular .05 mfd. 200V—Screen By-Pass	19
7236841	7230592	Condenser	Tubular .05 mfd. 400V—A.V.C. By-Pass	20
7239185	7230592	Condenser	Tubular .06 mfd. 400V—Tone Control (Voice)	21
7239186	7233243	Condenser	Tubular .04 mfd. 200V—Audio Coupling	22
7233243		Condenser	Tubular .04 mfd. 800V—Output Pad	23
7239188	1212097	Condenser	Tubular .001 mfd. 400 V—Audio Coupling	24
7232956	7230912	Condenser	Tubular .005 mfd. 200V—Tone Control (Bass)	25
7238669		Condenser	Dual .01 x .01 1200 V—Buffer	26
7238841		Condenser	Spark Plate on Power Supply Shield—Motor Noise Filter	27
7237181	7238841	Control	Spark Plate—Motor Noise Filter	28
7239020		Control	Tone Control Switch—3 Point Tone Control	31
7239120		Control	Volume Control—With Switch	32
1211118	1209883	Resistor, Ins.	100,000 ohms ½ Watt—A.V.C. Isolator	33
7233653		Resistor, Ins.	15,000 ohm 2 Watt—Screen Dropping	34
1211110	1210116	Resistor, Ins.	50,000 ohm ½ Watt—Oscillator Padder	35
1211139	1209885	Resistor, Ins.	1 megohm ½ Watt—A.V.C. Isolator	36
1211120	1211163	Resistor, Ins.	150,000 ohm ½ Watt—Diode Filter	37
1213343	7235837	Resistor, Ins.	15 megohm ½ Watt—6Q7GT—Grid	38
7234563		Resistor, Ins.	350 ohm 1 Watt—Output Tube Bias	39
1211124	1210117	Resistor, Ins.	250,000 ohm ½ Watt—Plate Dropping	40
1211124	1210117	Resistor, Ins.	250,000 ohm ½ Watt—6V6CT—Grid	41
1211122	1210119	Resistor, Ins.	200,000 ohm ½ Watt—Audio Coupling	42
1211000		Resistor, Ins.	100 ohm ½ Watt—Power Trans. Primary Load	43
1211000		Resistor, Ins.	100 ohm ½ Watt—Power Trans. Primary Load	44
7239306		Resistor, Ins.	3000 ohm 2 Watt—"B" Filter	45
1211071		Resistor, Ins.	6000 ohm 1 Watt—"B" Filter	46
1211000		Resistor, Ins.	100 ohm ½ Watt—6K7GT—Bias	47
7239162		Speaker	Audio Output	50
7239160		Transformer	Vibrator Power	51
7238894		Transformer	Vibrator Power	52
1213881	1212966	Vibrator	Dial Light	53

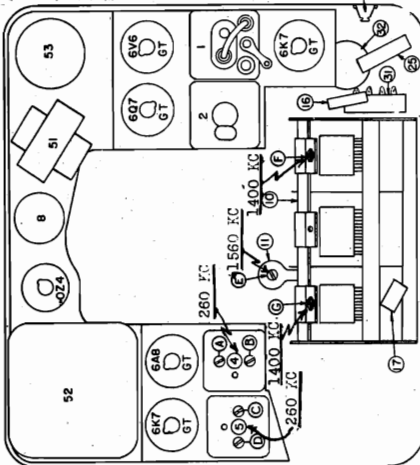

PARTS LOCATING DIAGRAM

ANTENNA SYSTEM: There are three antenna systems available for use with this receiver; the under car, the turret top, or the telescopic cowl antenna. Any one of these antennas will operate very efficiently when used with this Chevrolet radio.

ANTENNA CIRCUIT: The antenna circuit is directly coupled to the antenna. Two plug-in terminals are provided on the antenna coil; one for use with the under car antenna, and the other for use with the turret top or the cowl antenna. The antenna coil is connected at the factory for cowl antenna operation and must be changed to the under car antenna connection if an under car antenna is used.

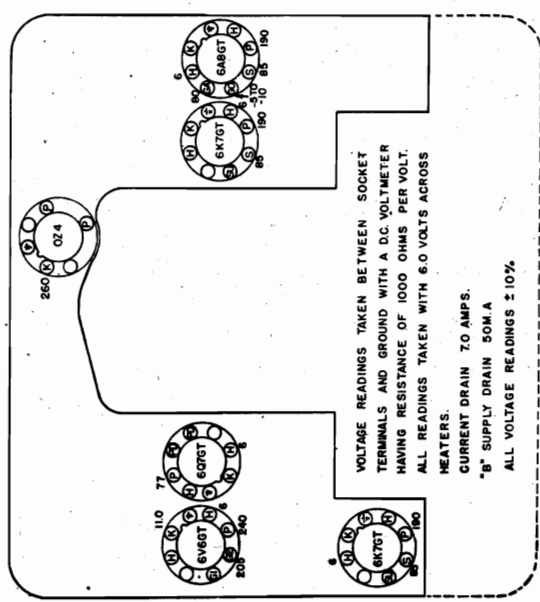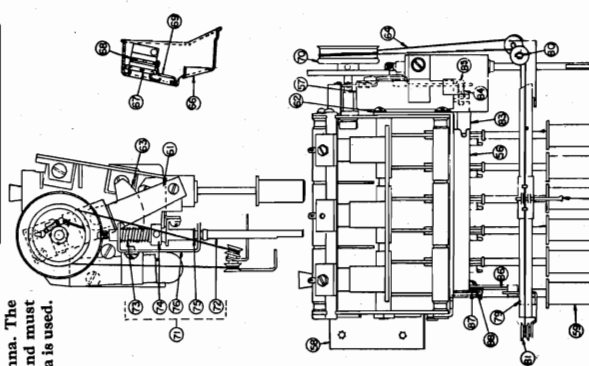

VOLTAGE READINGS TAKEN BETWEEN SOCKET TERMINALS AND GROUND WITH A D.C. VOLTMETER HAVING RESISTANCE OF 1000 OHMS PER VOLT. ALL READINGS TAKEN WITH 6.0 VOLTS ACROSS HEATERS.
CURRENT DRAIN 7.0 AMPS.
"B" SUPPLY DRAIN 50M.A.
ALL VOLTAGE READINGS ± 10%.

SOCKETS AND VOLTAGES

TUNER PARTS LAYOUT

MODEL 985538
Chassis, Trimmers,
Dial Data, Parts

CHEVROLET DIV.—GEN. MOTORS

- 1213881 1212986 Vibrator
- 1207799 Tubular .02 mfd. 500 Volt.
- 1211012 Resistor Insulated 100 ohm, 1 Watt.

GENERAL: This auto radio is a five tube single unit universal receiver with automatic push button tuning. Tuning is accomplished by a mechanical unit of rugged construction assuring accuracy. A special compensating condenser is employed in the oscillator circuit to minimize all receiver drift due to normal variation in car voltages and temperature ranges. The power supply consists of a 6X5GT power rectifier tube used in conjunction with a full wave plug in vibrator. The receiver is designed to mount in 1940 Chevrolet cars, and also in all other cars and trucks.

- 1213881 1212986 Vibrator
- 1207799 Tubular .02 mfd. 500 Volt.
- 1211012 Resistor Insulated 100 ohm, 1 Watt.

GENERAL: This auto radio is a five tube single unit universal receiver with automatic push button tuning. Tuning is accomplished by a mechanical unit of rugged construction assuring accuracy. A special compensating condenser is employed in the oscillator circuit to minimize all receiver drift due to normal variation in car voltages and temperature ranges. The power supply consists of a 6X5GT power rectifier tube used in conjunction with a full wave plug in vibrator. The receiver is designed to mount in 1940 Chevrolet cars, and also in all other cars and trucks.

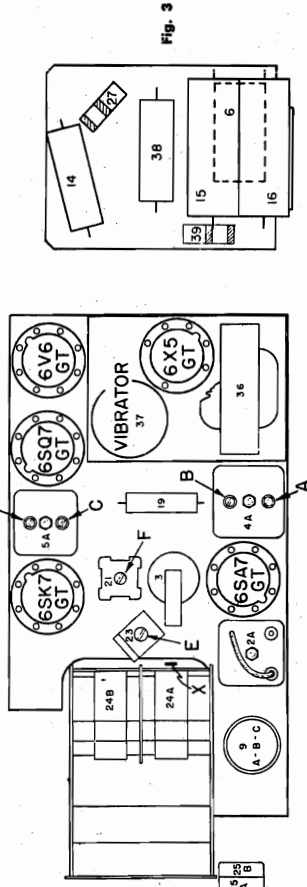


Fig. 3

ALIGNMENT FREQUENCIES

TRIMMER	FREQUENCY
A, B, C, D, E	455 KC
F	1520 KC
F	540 end 600 KC
G	1400 KC

- 1213881 1212986 Vibrator
- 1207799 Tubular .02 mfd. 500 Volt.
- 1211012 Resistor Insulated 100 ohm, 1 Watt.

GENERAL: This auto radio is a five tube single unit universal receiver with automatic push button tuning. Tuning is accomplished by a mechanical unit of rugged construction assuring accuracy. A special compensating condenser is employed in the oscillator circuit to minimize all receiver drift due to normal variation in car voltages and temperature ranges. The power supply consists of a 6X5GT power rectifier tube used in conjunction with a full wave plug in vibrator. The receiver is designed to mount in 1940 Chevrolet cars, and also in all other cars and trucks.

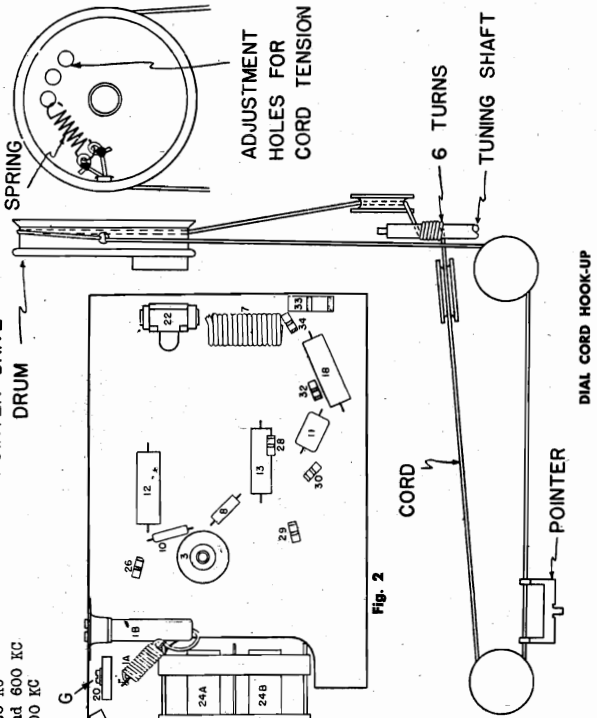


Fig. 2

ALIGNMENT FREQUENCIES

TRIMMER	FREQUENCY
A, B, C, D, E	455 KC
F	1520 KC
F	540 end 600 KC
G	1400 KC

- 1213881 1212986 Vibrator
- 1207799 Tubular .02 mfd. 500 Volt.
- 1211012 Resistor Insulated 100 ohm, 1 Watt.

GENERAL: This auto radio is a five tube single unit universal receiver with automatic push button tuning. Tuning is accomplished by a mechanical unit of rugged construction assuring accuracy. A special compensating condenser is employed in the oscillator circuit to minimize all receiver drift due to normal variation in car voltages and temperature ranges. The power supply consists of a 6X5GT power rectifier tube used in conjunction with a full wave plug in vibrator. The receiver is designed to mount in 1940 Chevrolet cars, and also in all other cars and trucks.

Part No. 985538
Date 11-1-39

MODEL 985651
Alignment, Chassis
Trimmers, Socket

CHEVROLET DIV.—GEN. MOTORS

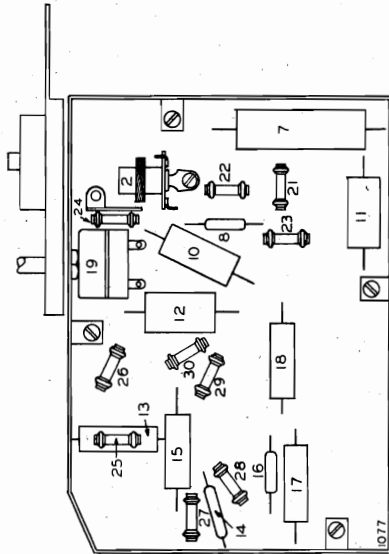


FIG. 3 PARTS LOCATING DIAGRAM PORTABLE RADIO #985651

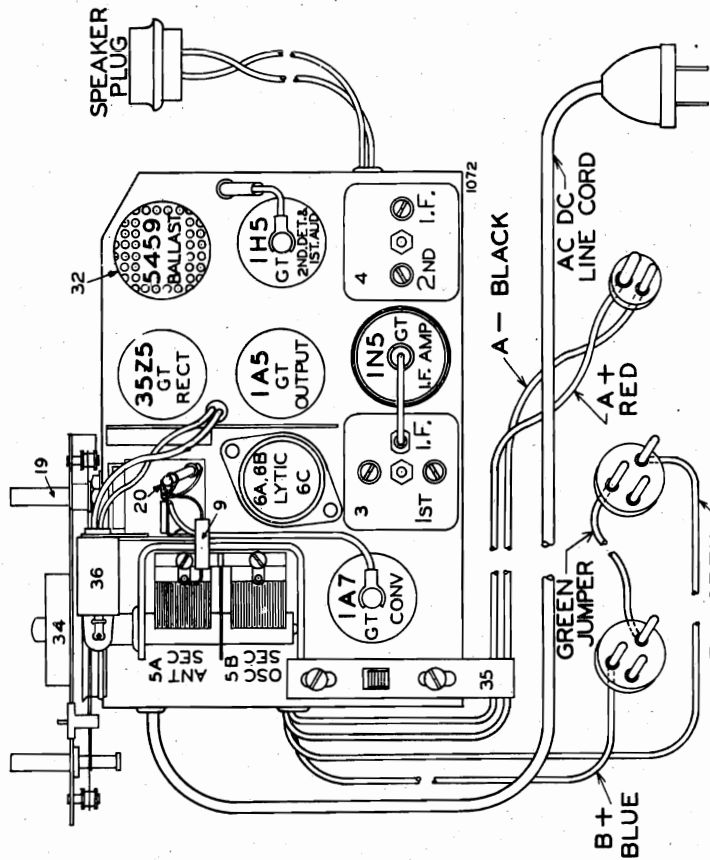


FIG. 1 TUBE LAYOUT PORTABLE RADIO #985651

CIRCUIT ALIGNMENT


IMPORTANT: If maximum sensitivity is to be obtained from this receiver, after re-alignment, it is very important that the following procedure be closely observed:

1. Aligning I.F. stages at 465 kilocycles.
 - a. Connect the signal lead of the test oscillator to the grid of the 1A7GT tube, through a .1 mfd. condenser.
 - b. Connect the ground lead of the test oscillator to the negative "B" lead of the radio (grey wire of the "B" battery lead assembly).
 - c. Connect the output meter across primary winding of the output transformer.
 - d. Set the test oscillator to exactly 465 kilocycles.
 - e. Adjust the trimmers on the 1st and 2nd I.F. transformers (illus. No. 3 and No. 4, Fig. 1) carefully for maximum output.


These adjustments should be repeated several times and during the alignment the test oscillator output should be kept to as low a value as is consistent with obtaining readable indication on the output meter.

2. Aligning at 1550 kilocycles.
 - a. Leave the test oscillator leads connected the same as for aligning the I.F. circuits.
 - b. Turn the rotor plates of the gang condenser all the way out and against the high frequency stop.
 - c. Set the test oscillator to 1550 kilocycles.
 - d. Adjust the trimmer for the oscillator section of the condenser gang (illus. No. 5B, Fig. 1) for maximum output. It is very important that this frequency be set accurately as a slight mis-setting will cause the receiver to be out of track over the entire high frequency end of the dial.
3. Aligning at 1400 kilocycles.
 - a. This adjustment should be made with the loop antenna placed alongside the chassis. It is important that the same distance between the loop antenna and the chassis be maintained as when the chassis and loop are installed in the cabinet.
 - b. Connect the signal lead of the test oscillator to the external antenna terminal on the loop antenna through a 200 mmfd. dummy.
 - c. Connect the ground lead of the test oscillator to the external ground terminal on the loop antenna.
 - d. Set the test oscillator to exactly 1400 K.C.
 - e. Turn the condenser rotor plates until this frequency is tuned in with maximum output.
 - f. Adjust the trimmer on the condenser gang (illus. No. 5A, Fig. 1) for maximum output.

MODEL B1
Schematic, Socket Alignment, Trimmers

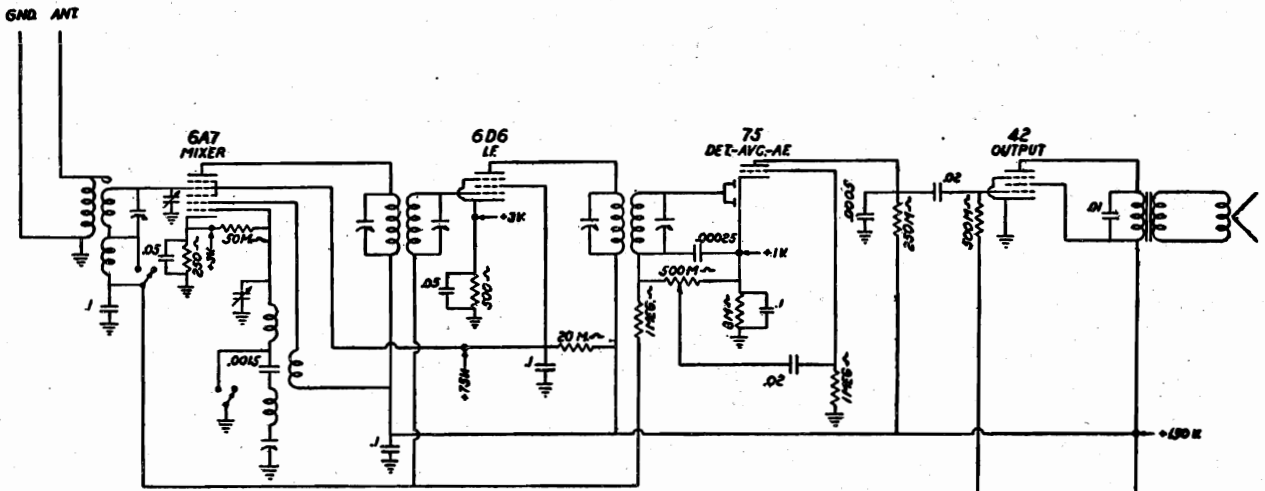


**SCHEMATIC DIAGRAM
B1 CHASSIS**
S TUBE A.C. 2 BAND: B.C.-540 TO 1720 K.C.
S.W.-2000 TO 7000 K.C.
I.F. = 456 K.C.
SWITCH SHOWN IN B.C. POSITION
ALL VOLTAGES SHOWN TO GROUND

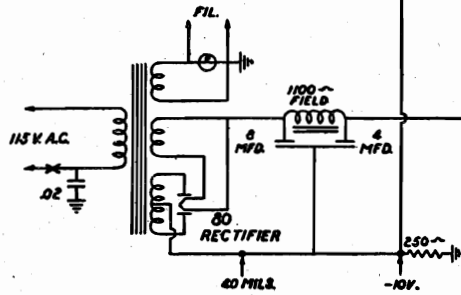

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII.


S.W. ALIGNMENT:

Set the dial pointer to 6000KC (also the test oscillator) and adjust the antenna and antenna trimmer to resonance. The short wave band coils are under the chassis and are located at the right front corner along side of wave band switch.

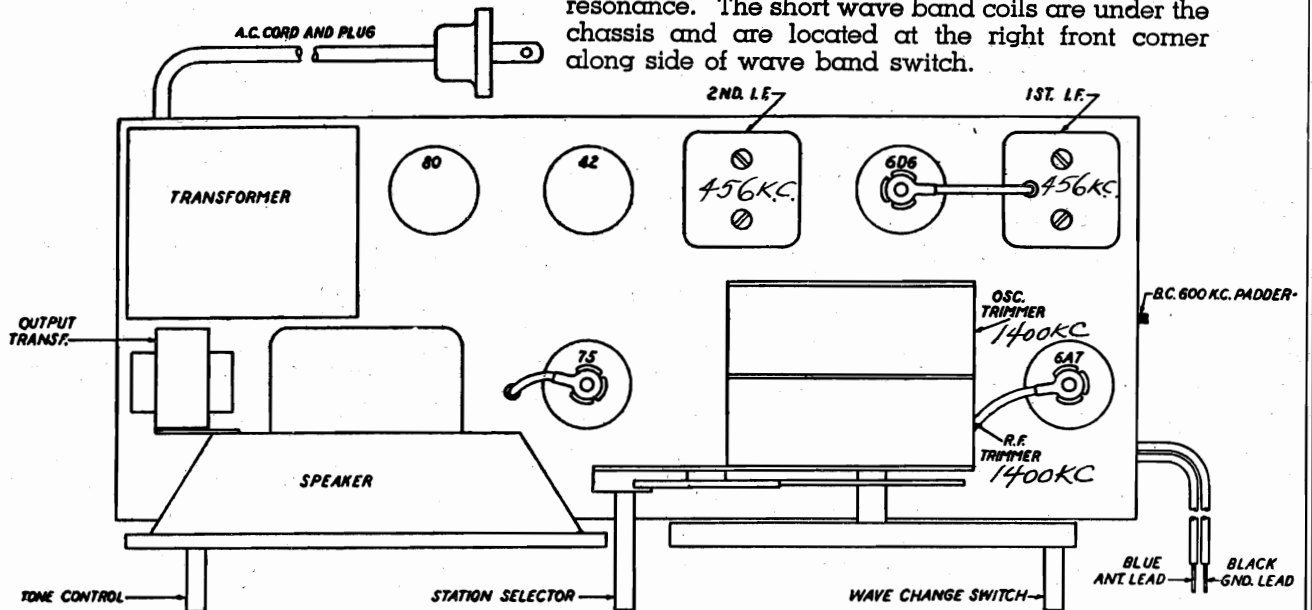

CONTINENTAL RADIO & TELEV. CORP.

MODELS A4,B4
MODELS C5,XC5
Schematics,
Alignment

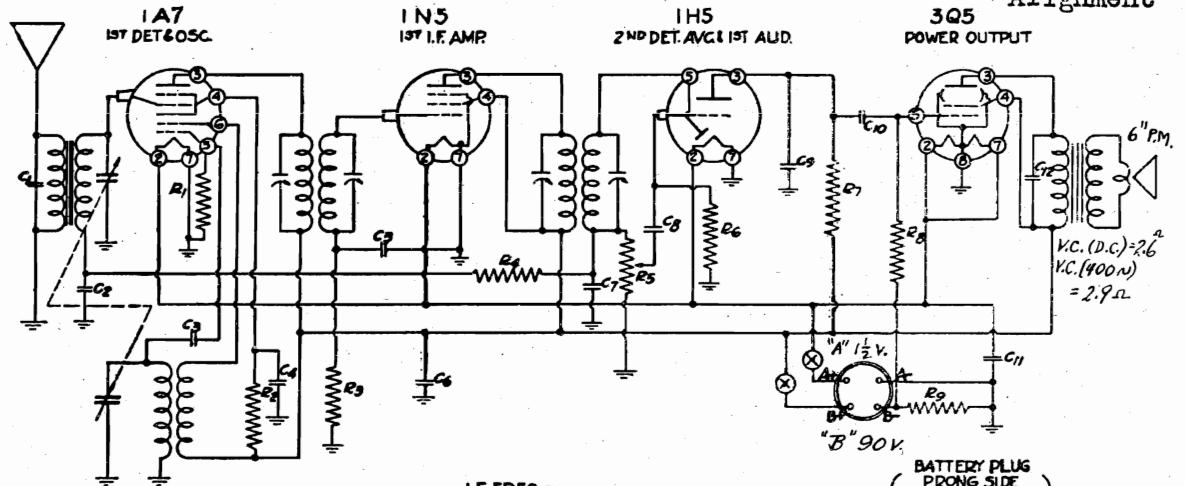

I.F. FREQ. - 455 KC.


RESISTORS			CONDENSERS		
No.	Ohms	Watts	No.	Capacity (Mfd.)	Volts
R1	200,000	1/2	C1	.00005	Mica
R2	70,000	1/2	C2	.05	200
R3	5 Meg.	1/4	C3	.00005	Mica
R4	1 Meg.	1/4	C4	.1	200
R5	500,000	V.C.	C5	.002	400
R6	5 Meg.	1/4	C6	.001	200
R7	250,000	1/4	C7	.00025	Mica
R8	500,000	1/4	C8	.01	400
R9	440 10%	1/4	C9	.00025	Mica
			C10	.01	400
			C11	20 (Elect.)	25
			C12	.005	400

I.F. PEAK - 455 KC
TRIM OSC. - 1730 KC
TRIM ANT. - 1400 KC

ISSUE A
MARCH 1940

A4, B4

For SOCKET LAYOUT
See INDEX

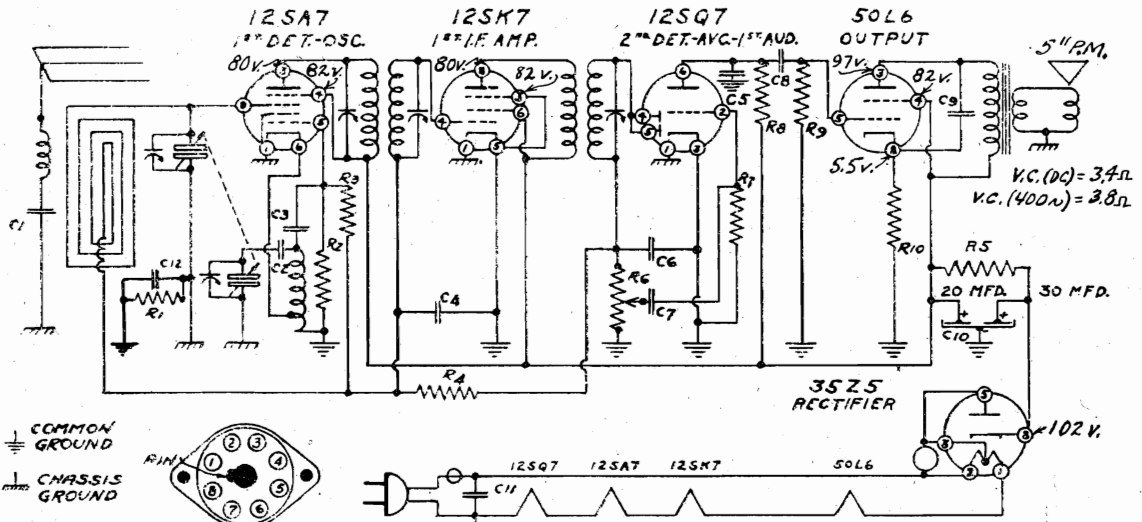

CONDENSERS			RESISTORS		
No.	Capacity	Volts	No.	Ohms	Watts
C1	.001	600	R1	150,000	1/2
C2	.02	400	R2	20,000	1/2
C3	.00005	Mica	R3	15,000,000	1/2
C4	.05	200	R4	2,000,000	1/2
C5	.0005	Mica	R5	1,000	1
C6	.00025	Mica	R6	500,000	Vol. Cont.
C7	.01	400	R7	5,000,000	1/2
C8	.002	600	R8	250,000	1/2
C9	.01	400	R9	500,000	1/2
C10	20.0	150	R10	150	10%
C11	.05	400			
C12	.25	200			

C5 & XC5

ISSUE A
MARCH 1940

C2, C12 and R1 are used in Model XC5 only. In C5 Model only, all common grounds are connected to chassis ground.

I.F. PEAK - 455 KC
TRIM OSC. - 1730 KC
TRIM ANT. - 1400 KC


VOLTAGES: Line 115 v. AC. Power consumption, 30 watts.
Volume control maximum. Meter 1000 ohms per volt. Read from point indicated to common ground.

For SOCKET LAYOUT
See INDEX

MODEL 4C
MODEL 4J

CONTINENTAL RADIO & TELEV. CORP.

Schematics, Alignment

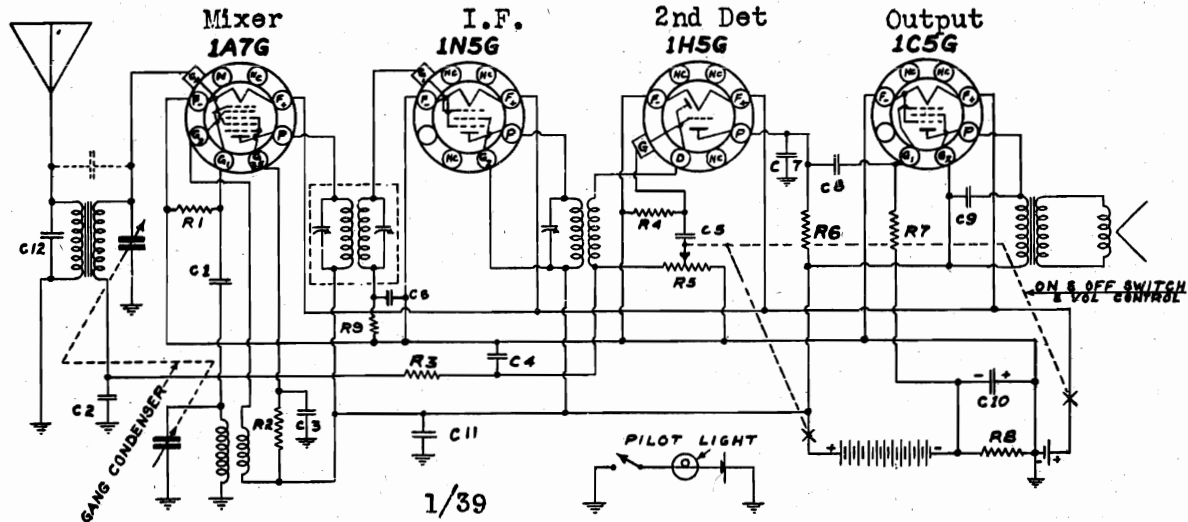

1/39


CAPACITORS			RESISTORS		
NO	CAP.-MFDS.	TYPE	NO	OHMS	WATTS
C1	.00025	MICA	R1	200,000	1/4
C2	.05	200V. MICA	R2	70,000	1/4
C3	.1	200V. MICA	R3	1 MEG.	1/4
C4	.00025	MICA	R4	2 MEG.	1/4
C5	.01	400V. MICA	R5	500,000	1/4
C6	.002	400V. MICA	R6	250,000	1/4
C7	.01	400V. MICA	R7	500,000	1/4
C8	.01	400V. MICA	R8	600	1/4
C9	.005	400V. MICA	R9	2 MEG.	1/4
C10	20. (ELECT)	25V. MICA			
C11	.1	200V. MICA			
C12	.00008	MICA			

NO	OHMS	WATTS	NO	OHMS	WATTS
R1	200,000	1/4	R6	250,000	1/4
R2	70,000	1/4	R7	500,000	1/4
R3	1 MEG.	1/4	R8	600	1/4
R4	2 MEG.	1/4	R9	2 MEG.	1/4
R5	500,000	1/4			

I.F. 456 KC
TRIM OSC- 1730 KC
TRIM ANT- 1400 KC

FOR SOCKET LAYOUT SEE INDEX

MODEL 4C

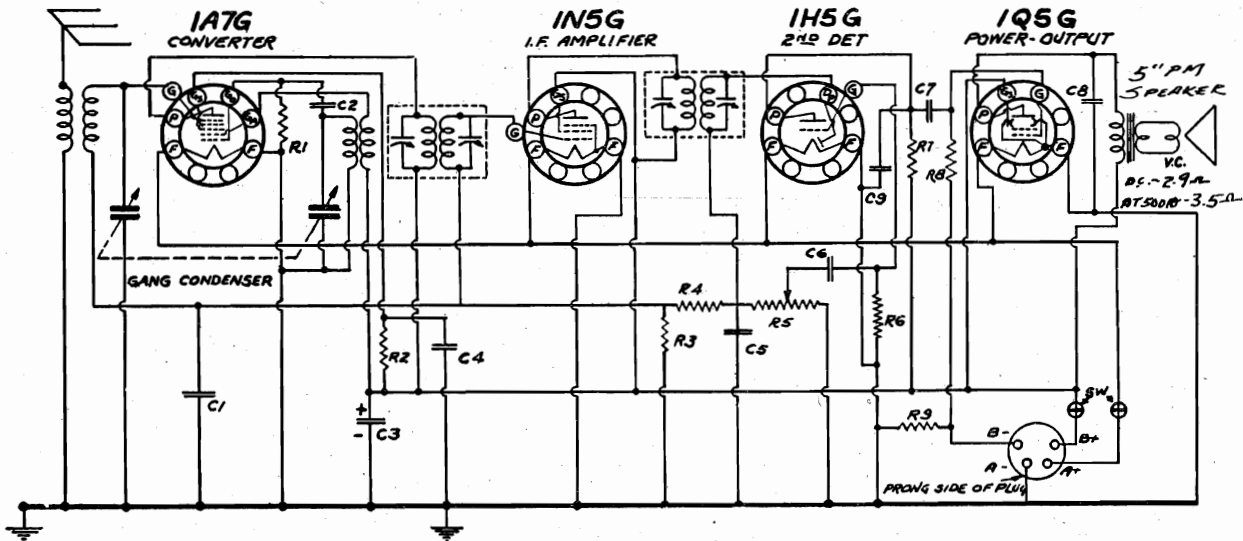

8/39

CAPACITORS			RESISTORS		
NO.	MFDS	VOLTS	NO.	OHMS	WATTS
C1	.05	200	R1	200,000	1/2
C2	.00008	MICA	R2	70,000	1/2
C3	4.0 (ELECT)	150	R3	2,000,000	1/2
C4	.05	200	R4	2,000,000	1/2
C5	.00025	MICA	R5	300,000	V.C.
C6	.01	400	R6	2,000,000	1/2
C7	.01	400	R7	300,000	1/2
C8	.002	400	R8	1,000,000	1/2
C9	.00025	MICA	R9	440	1/2

NO.	MFDS	VOLTS	NO.	OHMS	WATTS
C1	.05	200	R1	200,000	1/2
C2	.00008	MICA	R2	70,000	1/2
C3	4.0 (ELECT)	150	R3	2,000,000	1/2
C4	.05	200	R4	2,000,000	1/2
C5	.00025	MICA	R5	300,000	V.C.
C6	.01	400	R6	2,000,000	1/2
C7	.01	400	R7	300,000	1/2
C8	.002	400	R8	1,000,000	1/2
C9	.00025	MICA	R9	440	1/2







I.F. 455 KC
TRIM OSC-1730 KC
TRIM ANT-1400 KC

FOR SOCKET LAYOUT SEE INDEX

MODEL 4J

CONTINENTAL RADIO & TELEV. CORP.


MODELS A4, B4
 MODELS B5, XB5
 MODELS C5, XC5
 MODELS F5, XF5
 MODELS G6, XG6
 MODELS A6, XA6
 Socket, Trimmers

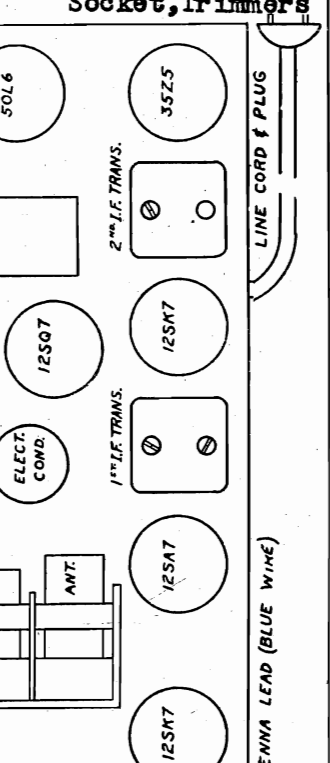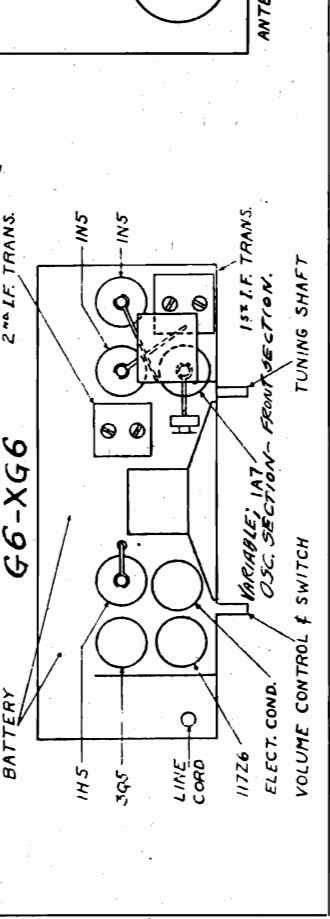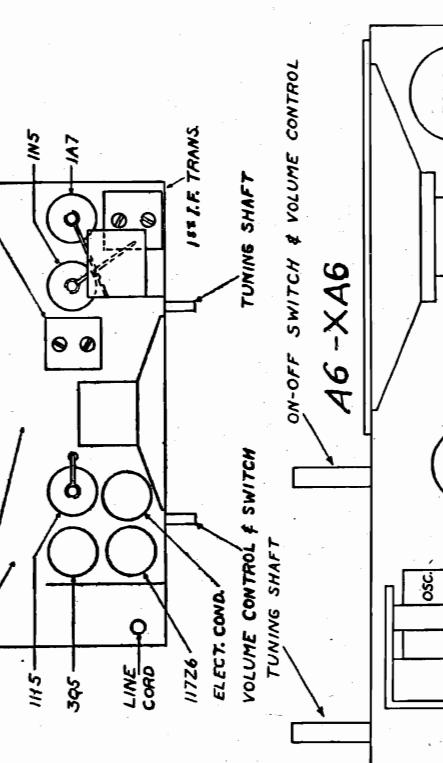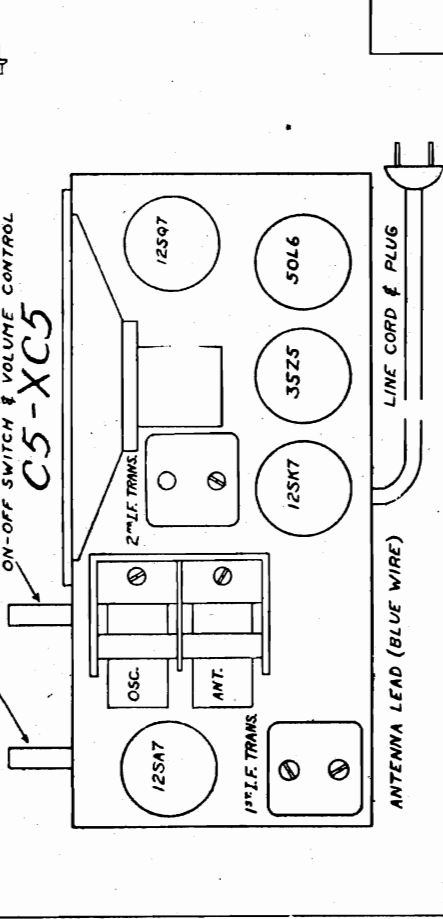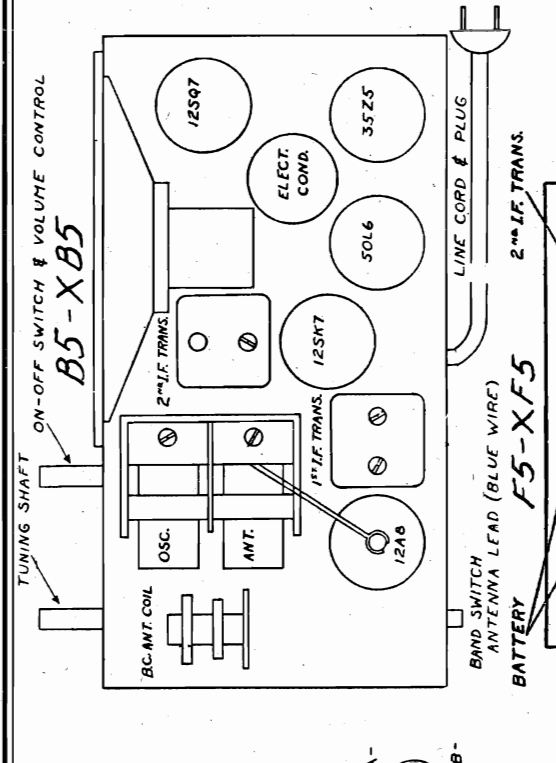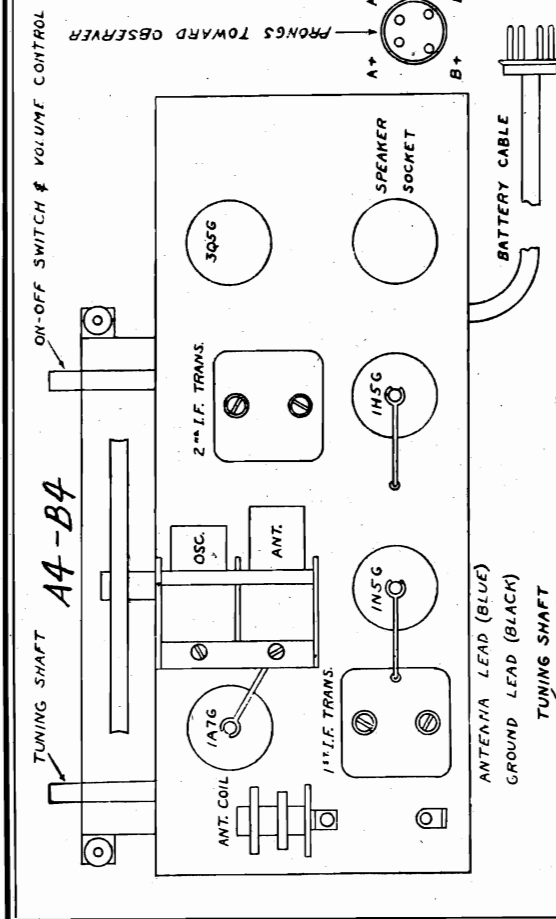






MODEL 4C
 MODELS 4F, 4J
 MODELS 5R, 5RL, 5Q, 5QL
 MODELS 6J, 6JL
 MODELS 6M, 6ML

CONTINENTAL RADIO & TELEV. CORP.



MODEL 382-7H-PH
 MODELS 7C, 7C-PH
 MODELS 7H, 7H-PH
 Socket, Trimmers

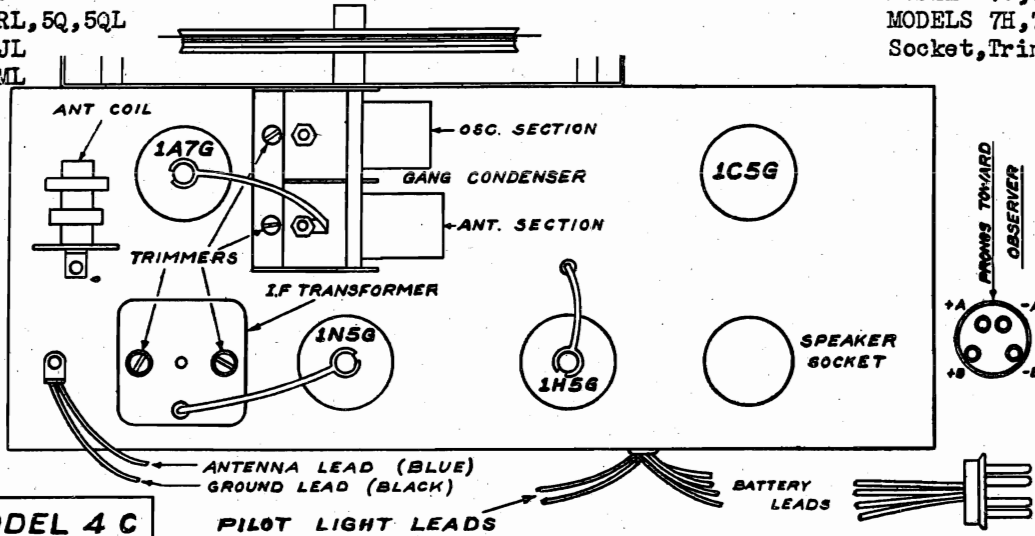

MODEL 4 C

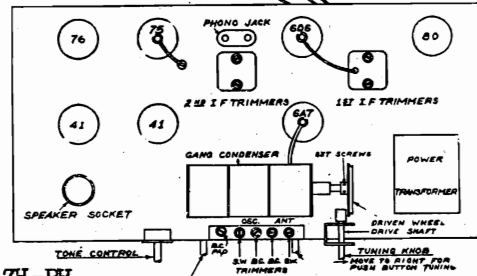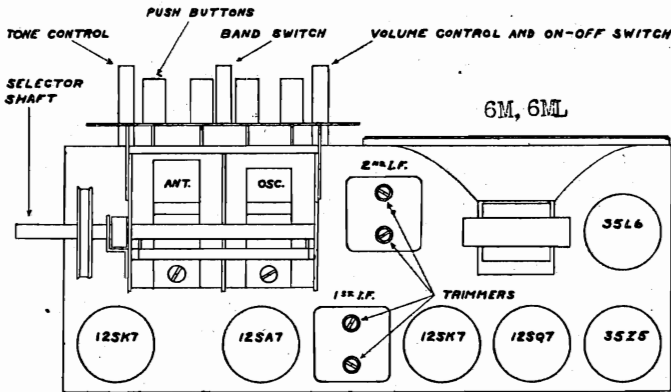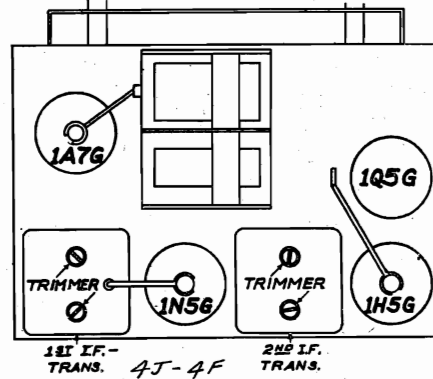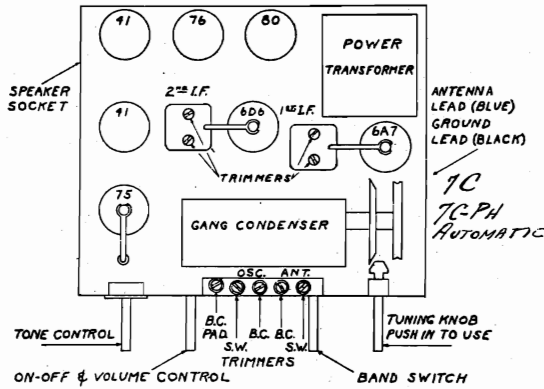


7H, 7H-PH,
 7H-PH AUTOMATIC.
 382-7H-PH

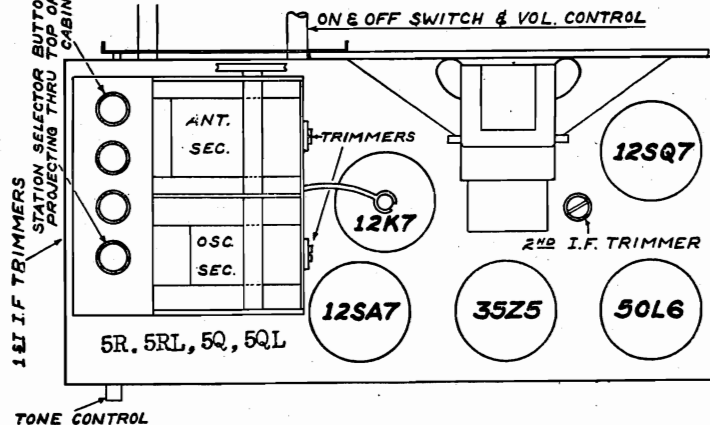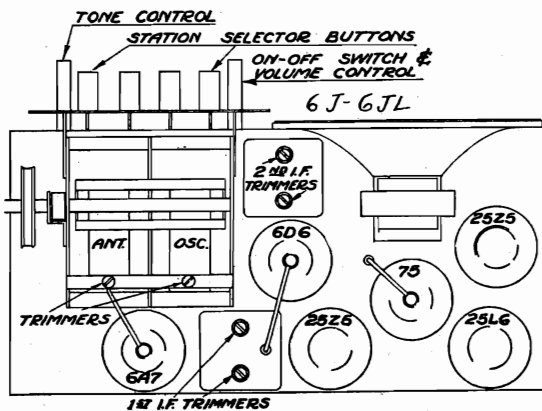

CONTINENTAL RADIO & TELEV. CORP.

MODEL 4F
MODELS 5Q, 5QL
Schematics, Alignment

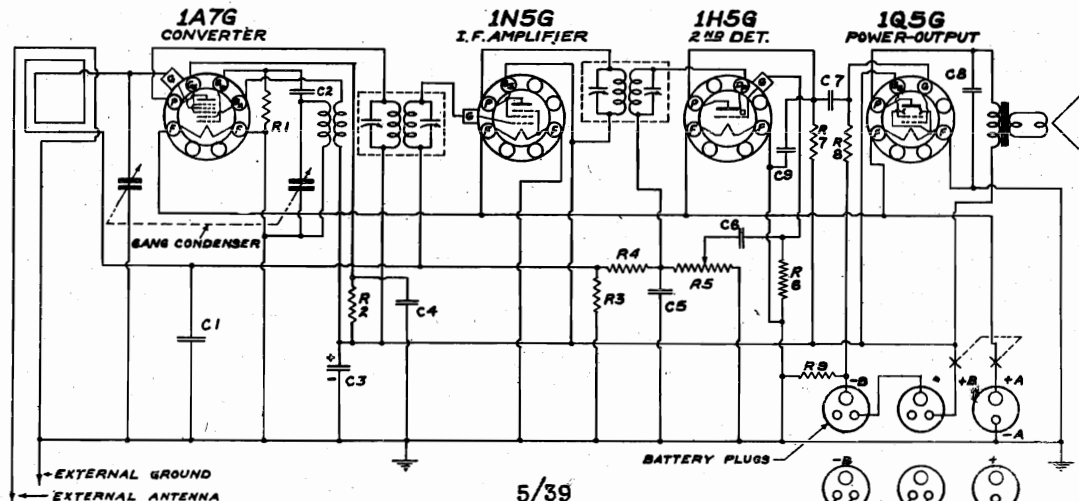


CAPACITORS

NO	MFDS.	VOLTS	NO	MFDS.	VOLTS
C1	.05	200	C7	.01	400
C2	.00008	MICA	C8	.002	400
C3	4.0 (ELECT)	150	C9	.00025	MICA
C4	.05	200			
C5	.00025	MICA			

RESISTORS

NO	OHMS	WATTS	NO	OHMS	WATTS
R1	200,000	1/2	R6	2,000,000	1/2
R2	70,000	1/2	R7	500,000	1/2
R3	2,000,000	1/2	R8	1,000,000	1/2
R4	2,000,000	1/2	R9	440	1/2
R5	500,000	1/2			

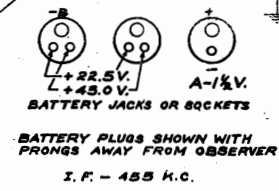


5/39

I.F. 455 KC

TRIM OSC- 1610 KC
TRIM ANT* 1400 KC

MODEL 4F

I.F. ALIGNMENT CONVENTIONAL
FOR SOCKET LAYOUT SEE INDEX

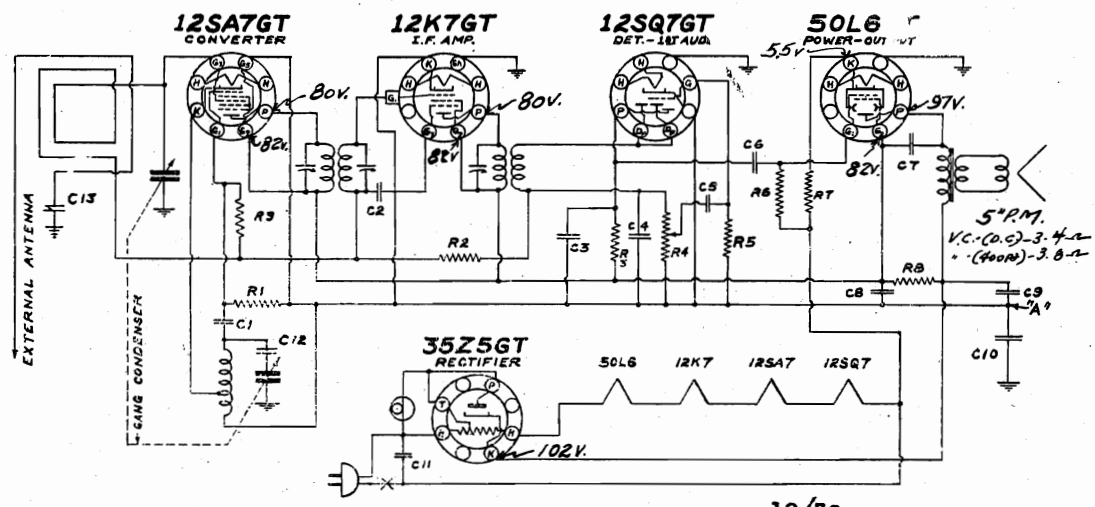

RESISTORS

NO	OHMS	WATTS	NO	OHMS	WATTS
R1	20,000	1/2	R6	500,000	1/2
R2	2 MEG.	1/2	R7	150 ± 10%	1/2
R3	250,000	1/2	R8	1,000	1
R4	500,000	1/2	R9	15 MEG.	1/2
R5	5 MEG.	1/2			

CAPACITORS

NO	MFDS.	VOLTS	NO	MFDS.	VOLTS
C1	.0001	MICA	C7	.01	400
C2	.02	400	C8	20.0	150
C3	.0005	MICA	C9	30.0	150
C4	.00025	MICA	C10	.25	200
C5	.01	400	C11	.05	400
C6	.002	400	C12	.02	400
			C13	.001	600

10/39


I.F. 455 K.C.
TUBES SHOW BOTTOM VIEW

C10 and C12 used in model 5QL only. On model 5Q point "A" is connected to chassis.
VOLTAGES:- LINE 115V. A.C. - POWER CONSUMPTION 30WATTS;- VOL. CONTR-MAX;-
ANTENNA SHORTED TO GROUND;- METER 1000-Ω PER VOLT, 150VOLT SCALE;-
TAKEN FROM POINT INDICATED TO POINT "A".


TRIM OSC-1730 KC
TRIM ANT-1400 KC

MODELS 5Q, 5QL

I.F. 455 KC
I.F. ALIGNMENT CONVENTIONAL
FOR SOCKET LAYOUT SEE INDEX

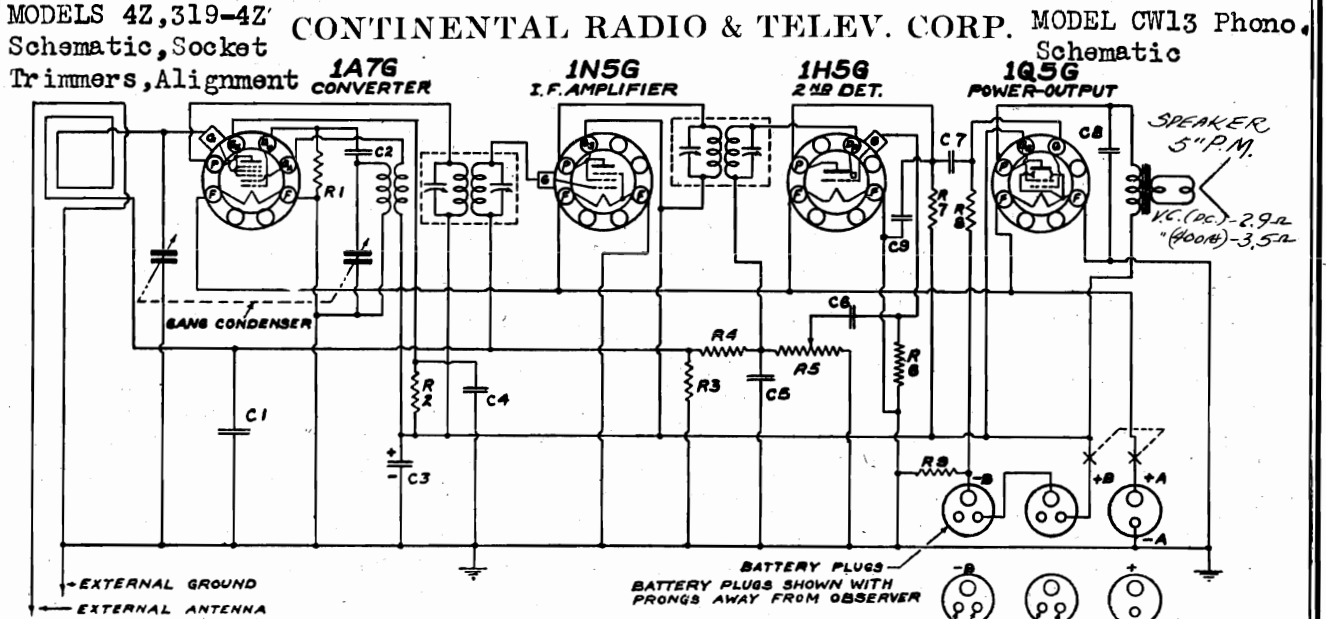

MODELS 4Z and 319-4Z

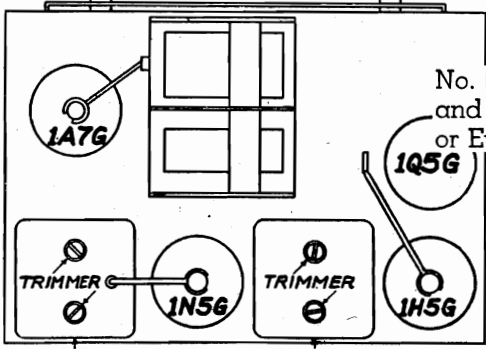

POWER SUPPLY

The power supply of this portable radio uses one Ray-O-Vac No. P96A, General No. 6-F-1, Burgess No. 6FP1 or Eveready No. 743. Portable "A" battery and two Ray-O-Vac No. 5303, General No. V-30-B, Burgess No. B30P1 or Eveready No. 762 Portable "B" batteries.

ALIGNMENT BROADCAST BAND


Trim Ant.- 1400 kc
" Osc.- 1610 kc
I.F.- 455 kc

I.F. ALIGNMENT

Remove the chassis from the cabinet and connect one end of a 100,000 ohm resistor to the grid of the 1A7 tube and the other end to the A.V.C. fahnestock clip (See "antenna and ground" for location of this clip). Adjust the signal generator to 455 KC and connect the output to the grid of the first detector tube (1A7) thru a .05 or .1 mfd. condenser. The ground of the signal generator should be connected to the chassis ground. Align all I.F. trimmers to peak or maximum reading on the output meter.

CAPACITORS					
NO.	MFDs.	VOLTS	NO.	MFDs.	VOLTS
C1	.05	200	C8	.01	400
C2	.00005	MICA	C7	.01	400
C3	4.0 (ELFOT)	155	C6	.002	400
C4	.05	200	C9	.00025	MICA
C5	.00025	MICA			

RESISTORS					
NO.	OHMS	WATTS	NO.	OHMS	WATTS
R1	200,000	1/2	R6	2,000,000	1/2
R2	70,000	1/2	R7	500,000	1/2
R3	2,000,000	1/2	R8	1,000,000	1/2
R4	2,000,000	1/2	R9	440	1/2
R5	500,000	V.C.			

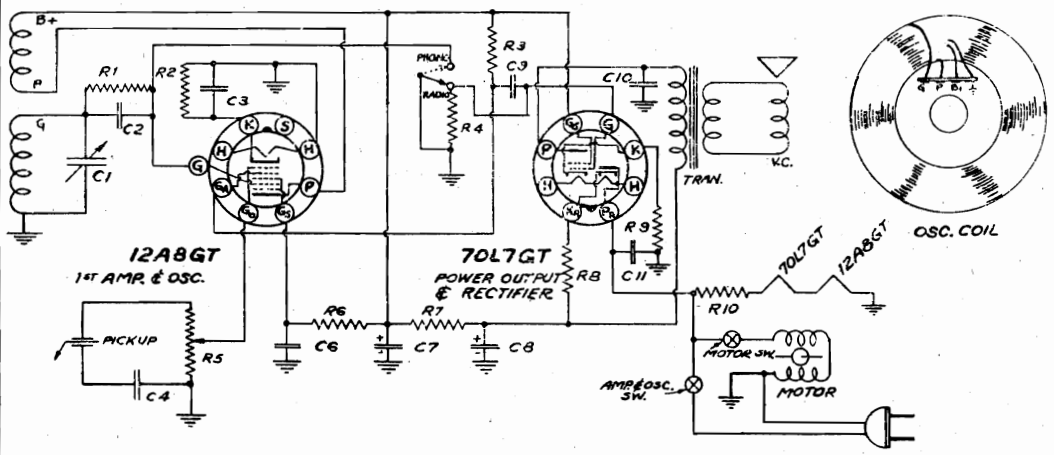

RESISTORS		
R1	50,000.Ω	1/2w
R2	1,000.Ω	1/2w
R3	50,000.Ω	1/2w
R4	500,000.Ω	1/2w
R5	1,000,000.Ω	VOL.
R6	100,000.Ω	1/2w
R7	3,000.Ω	1/2w
R8	30.Ω	1/2w
R9	250.Ω ±10%	1/2w
R10	232.Ω	5w

CONDENSERS		
C1	400-600µf	PAD
C2	100µf	MICA
C3	20µf	25V.
C4	.05µf	200V.
C6	.05µf	200V.
C7	20µf	150V.
C8	40µf	150V.
C9	.01µf	400V.
C10	.02µf	400V.
C11	.05µf	400V.

PHONO AMPLIFIER & OSCILLATOR
SCHEMATIC DIAGRAM MODEL CW-13
SET AT 1575 KC
8/39

MODELS B5, XB5


MODELS F5, XF5

CONTINENTAL RADIO & TELEV. CORP.

Schematics, Alignment

FOR LAYOUT
SEE INDEX

Voltage

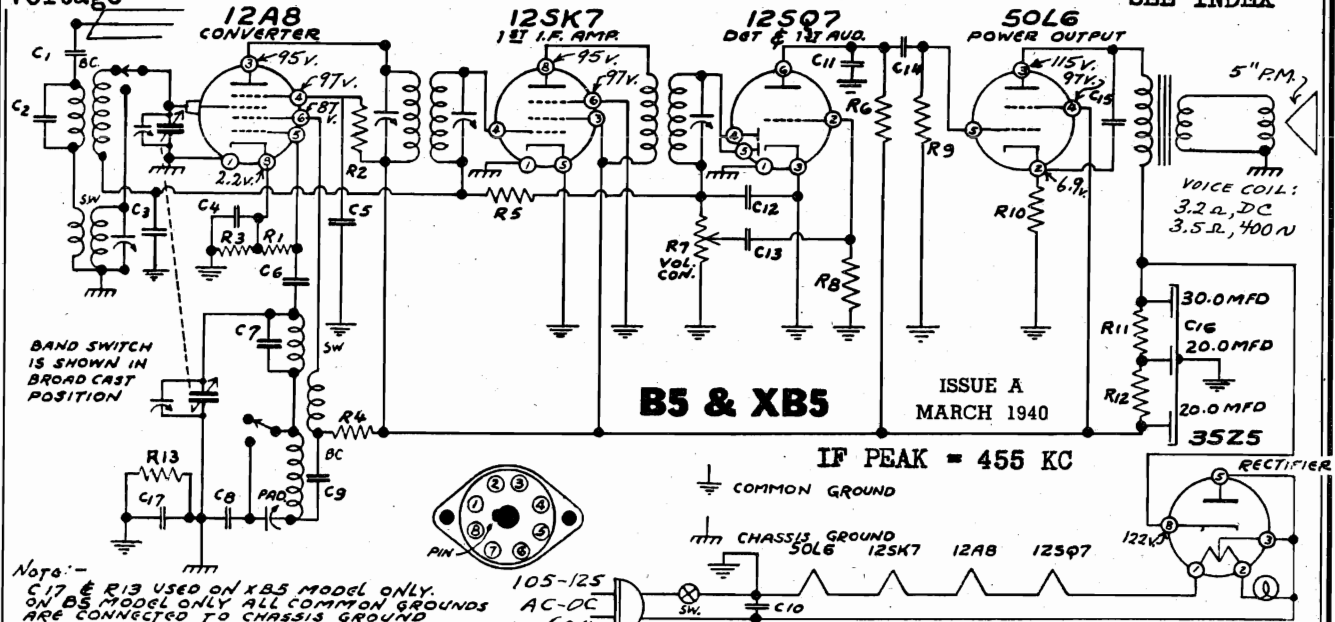

B5 & XB5

ISSUE A
MARCH 1940

IF PEAK = 455 KC

COMMON GROUND


CHASSIS GROUND 50L6 12SK7 12AB 12SQ7

Note:-

C17 & R13 USED ON XB5 MODEL ONLY.
ON B5 MODEL ONLY ALL COMMON GROUNDS
ARE CONNECTED TO CHASSIS GROUND

No.	Ohms	Watt	No.	Ohms	Watt	C8	Capacity	Volts
R1	50,000	1/2	R12	500	1/2	C9	.0035% Mica	600
R2	20,000	1/2	R13	150,000	1/2	C10	.005	400
R3	440	1/2				C11	.0005	Mica
R4	3,000	1/2				C12	.00025	Mica
R5	2,000,000	1/2				C13	.01	400
R6	250,000	1/2				C14	.002	400
R7	500,000	Vol. Cont.				C15	.01	400
R8	5,000,000	1/2				C16	30.0	150
R9	500,000	1/2				C16	20.0	150
R10	200	1/2				C16	20.0	150
R11	500	1/2				C17	.25	200

VOLTAGES: Line=117v. AC; Power=30W. Volume
Cont'l=Max. Meter=1000 ohms/volt (150 v.
scale). Measure with respect to common gnd
ALIGNMENT PROCEDURE (See 7C-PH Automatic):
Trim OSC. at 1730 KC (Broadcast)
Pad OSC. at 600 KC (Broadcast)
Trim ANT. at 1400 KC (Broadcast)
Trim ANT at 15000 KC (Short Wave)

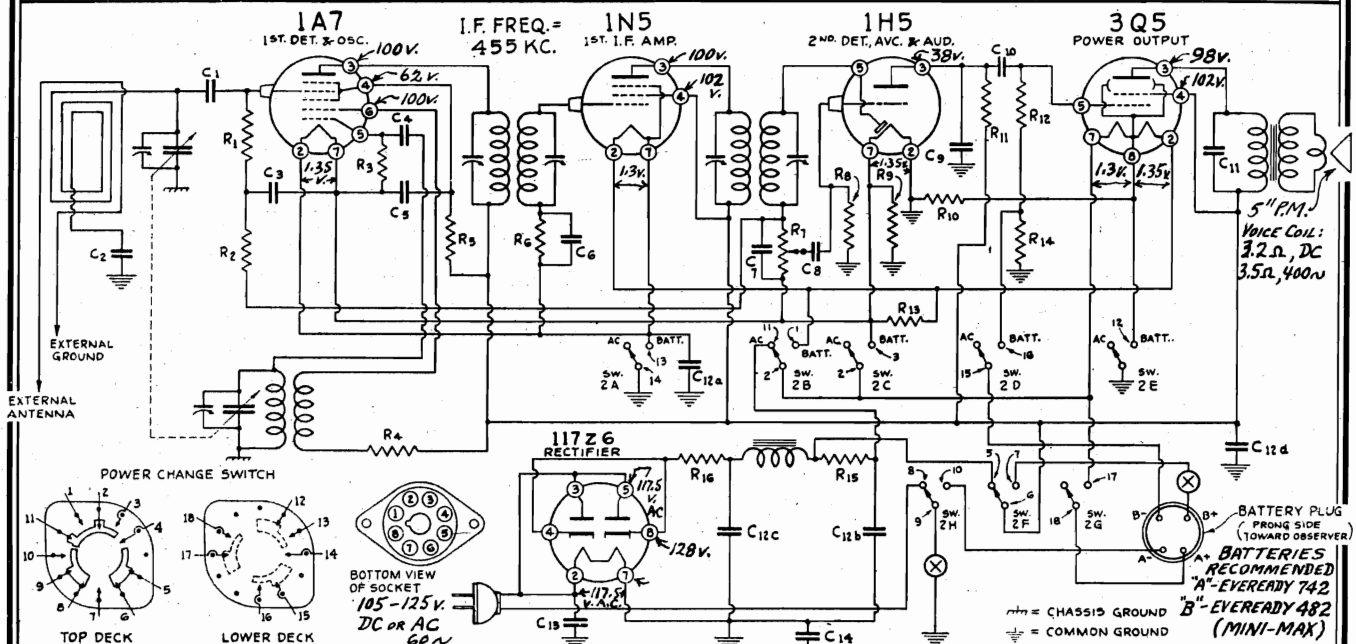

No.	Ohms	Watts	No.	Ohms	Watts	C1	Capacity (Mfd.)	Volts
R1	1,000,000	1/2	R9	110		C1	.00025	Mica
R2	1,000,000	1/2	R10	750-10%		C2	.1	200
R3	200,000	1/2	R11	250,000		C3	.01	200
R4	500	1/2	R12	1,000,000		C4	.0005	Mica
R5	30,000	1/2	R13	400		C5	.05	200
R6	5,000,000	1/2	R14	400-10%		C6	.01	200
R7	1,000,000	V.C.	R15	2,100		C7	.00025	Mica
R8	5,000,000	1/2	R16	30		C8	.01	400
						C9	.00025	Mica

VOLTAGES: Line=117.5v. AC; Power=25 W.
Vol. Cont'l=Max. Meter=1000 ohms/volt
Measure with respect to common gnd.
ALIGNMENT (use common gnd): IF=455KC
Trim OSC. at 1550 KC, Ant. at 1400KC
TRIM USING EXTERNAL GND.

In Model F5 switch points 4, 15, 16, 17 and 18 are not used. Switch point 4 is also not used on Model XF5.
Power change switch 2A thru 2H and the pictorial view shown in the "AC-DC" position.


F5 & XF5 FEB. 1940

CONTINENTAL RADIO & TELEV. CORP. Schematic, Socket Alignment, Trimmers


NO	MFDS	VOLTS	NO	MFDS	VOLTS
C1	.0015	MICA	C11	.0007	MICA
C2	.05	200	C12	.0017±5%	600
C3	.05	200	C13	.005	150
C4	.05	MICA	C14	25.0	150
C5	.00025	MICA	C15	25.0	400
C6	.01	400	C16	.05	400
C7	.00025	MICA	C17	.00069	400
C8	.01	400			
C9	.005	600			

NO	OHMS	WATTS	NO	OHMS	WATTS
R1	50,000	1/2	R10	70,000	1/2
R2	30,000	1/2			
R3	1 MEG	1/2			
R4	1/2 MEG VOL. CONT.				
R5	5 MEG.	1/2			
R6	250,000	1/2			
R7	1/50 MEG	1/2			
R8	1/50	1/2			
R9	10,000	1/2			

NO	USE	RANGE
T1	SW. OSC.	1.6 TO 2.0
T2	SW. OSC.	
T3	B.C. ANT.	1.6 TO 2.0
T4	B.C. ANT.	

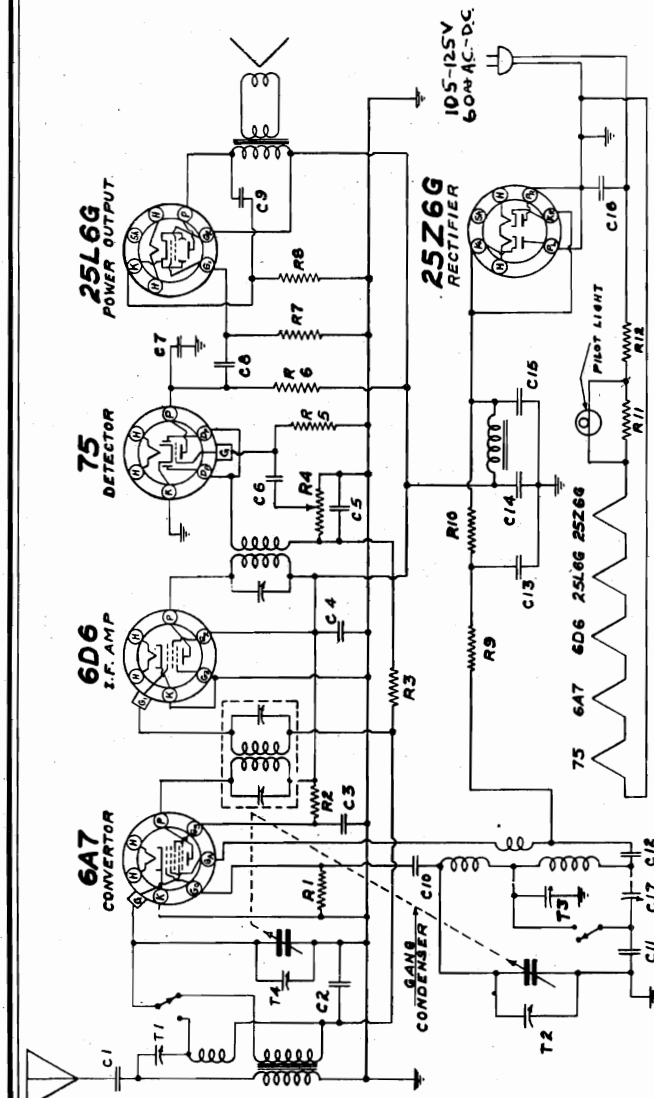

SCHEMATIC DIAGRAM MODEL 5LS

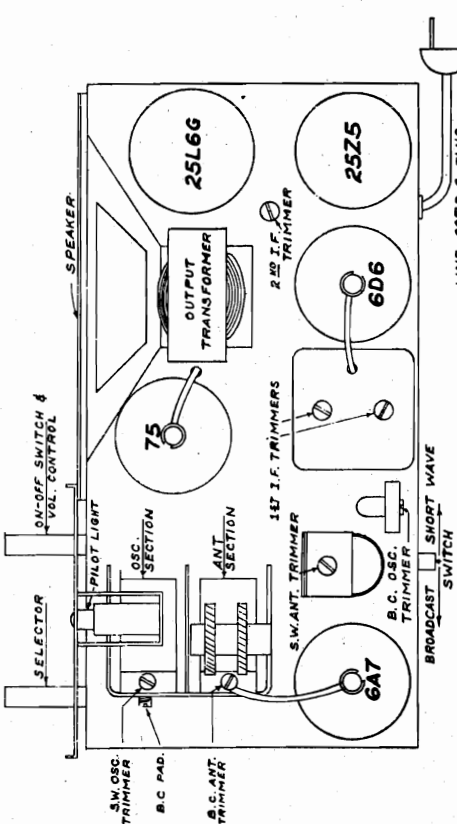


BROADCAST BAND ALIGNMENT
 The broadcast band may now be aligned using a .0002 dummy antenna, set the generator to 1730 kilocycles. With the gang condenser at minimum capacity, adjust the broadcast oscillator trimmer to receive this signal. Then set the generator to 1400 kilocycles and adjust the broadcast antenna trimmer to peak. The generator is now set to 600 kilocycles and the broadcast padding condenser adjusted.

I.F. ALIGNMENT
 Adjust the test oscillator to 456 KC and with the band switch in B.C. position connect the output to the grid of the first detector tube (6A7) through a .05 or .1 mfd. condenser. Connect ground of test oscillator to chassis ground through a .1 mfd. condenser. Align all three I.F. trimmers to peak or maximum reading on the output meter.


SHORTWAVE ALIGNMENT
 Adjust the oscillator to 18,100 KC and connect the output to the antenna lead, through a 400 ohm resistance. Set the gang condenser to minimum capacity and adjust the gang condenser trimmer (short wave oscillator) to receive this signal. After this has been carefully done, the next step is to set the generator to 16000 K.C. and after tuning in the signal adjust the shortwave antenna trimmer to peak.

The receiver should now be tuned to the 6 megacycle signal from the generator and the sensitivity checked. No adjustment is required at this point.

MODEL M5
Schematic, Socket
Trimmers, Alignment
CONTINENTAL RADIO & TELEV. CORP.

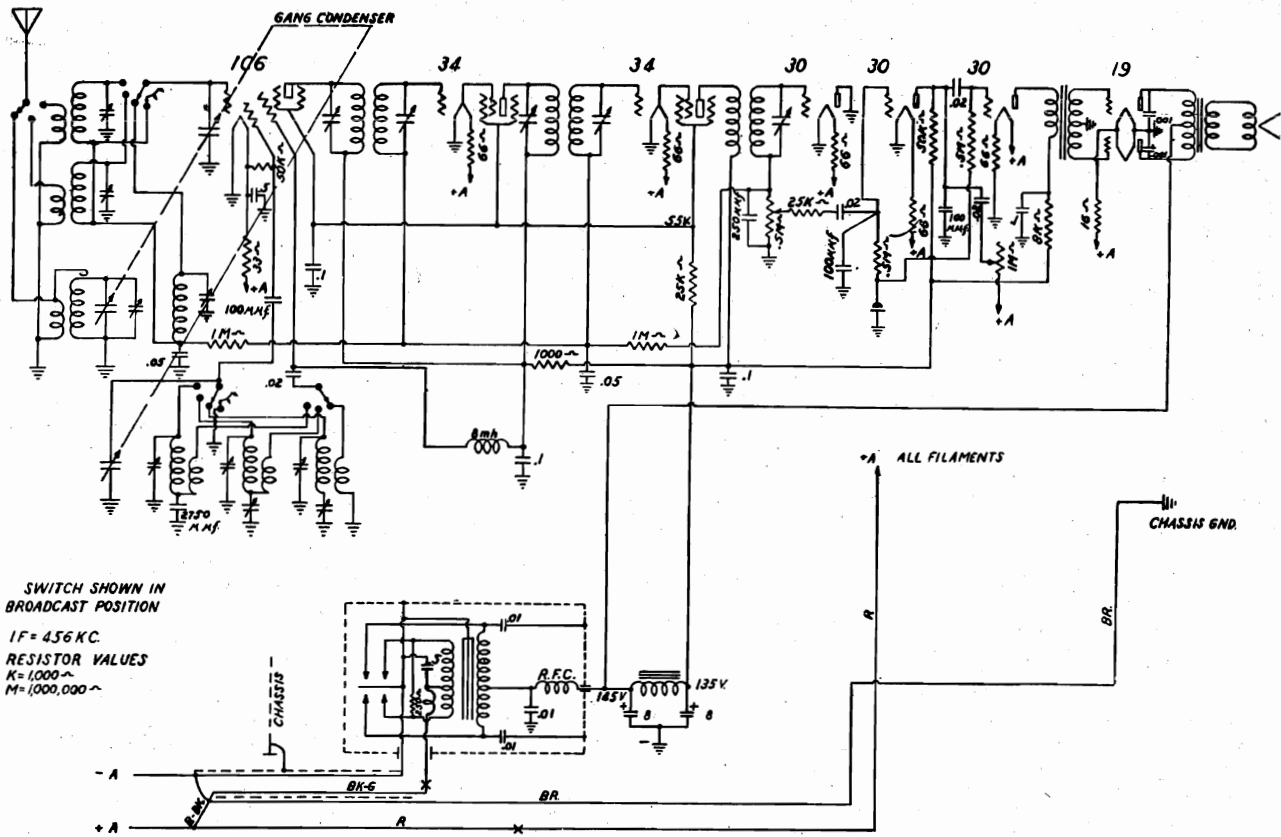

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII.

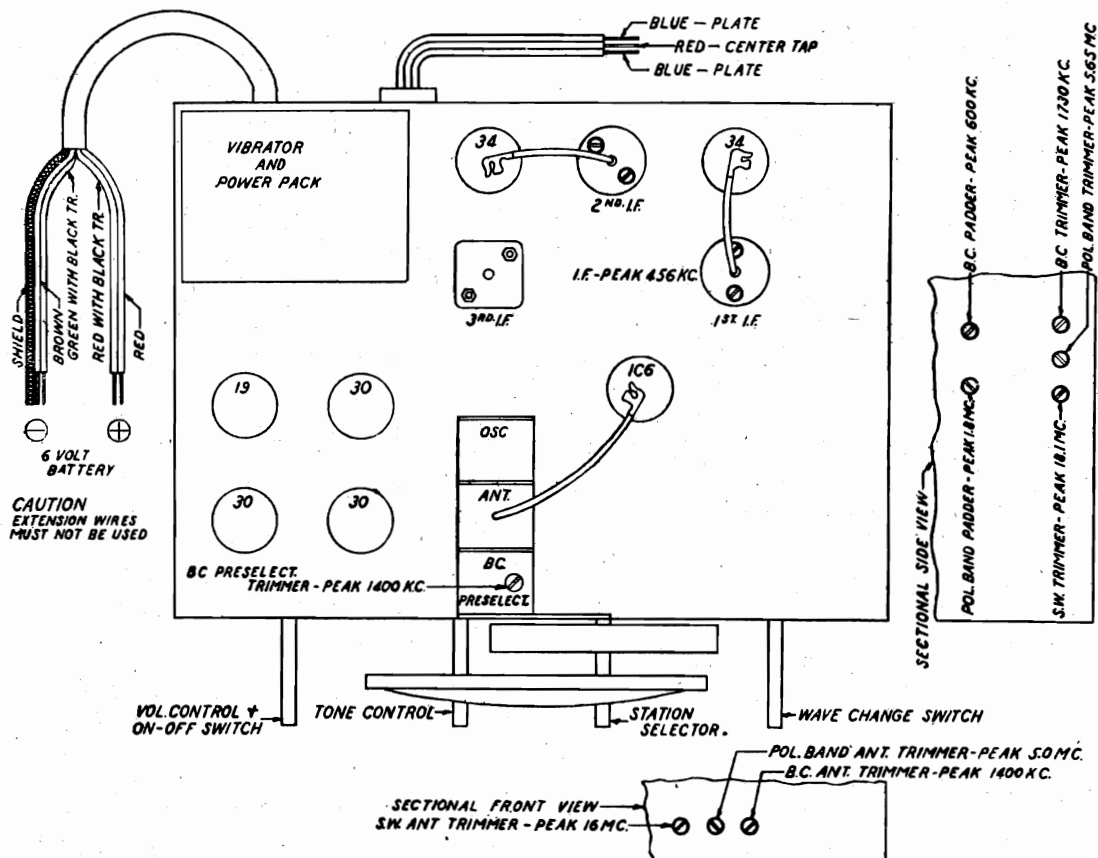

1936


CONTINENTAL RADIO & TELEV. CORP. MODELS 5N, 5NL
Schematic, Socket
Alignment, Trimmers

CONDENSERS

C1 -	.002	mfd.	600 volt
C2 -	.05	mfd.	400 volt
C3 -	.00005	mfd.	mica
C4 -	.05	mfd.	400 volt
C5 -	.002	mfd.	600 volt
C6 & C17 -	40-40	mfd.	25 volt elect.
C7 -	.25	mfd.	200 volt (used in 5NL only)
C8 -	.00025	mfd.	mica
C9 -	.01	mfd.	400 volt
C10 -	.00025	mica	
C11 -	.01	mfd.	400 volt
C12 -	.002	mfd.	600 volt
C13 -	.01	mfd.	400 volt
C14 -	.05	mfd.	400 volt
C15	20-30	mfd.	150 volt elect.
C16 -	.1	mfd.	200 volt

RESISTORS

R1 -	2,000,000	ohm	½ watt
R2 -	2,000,000	ohm	½ watt
R3 -	200,000	ohm	½ watt
R4 -	25,000	ohm	½ watt
R5 -	5,000,000	ohm	½ watt
R6 -	1,000,000	ohm	Volume Control & Switch
R7 -	5,000,000	ohm	½ watt
R8 -	250,000	ohm	½ watt
R9 -	500,000	ohm	½ watt
R10 -	1,000	ohm	½ watt 10%
R11 -	30	ohm	½ watt 10%
R12 -	750	ohm	½ watt
R13 -	335	ohm	10 watt
R14 -	100,000	ohm	½ watt

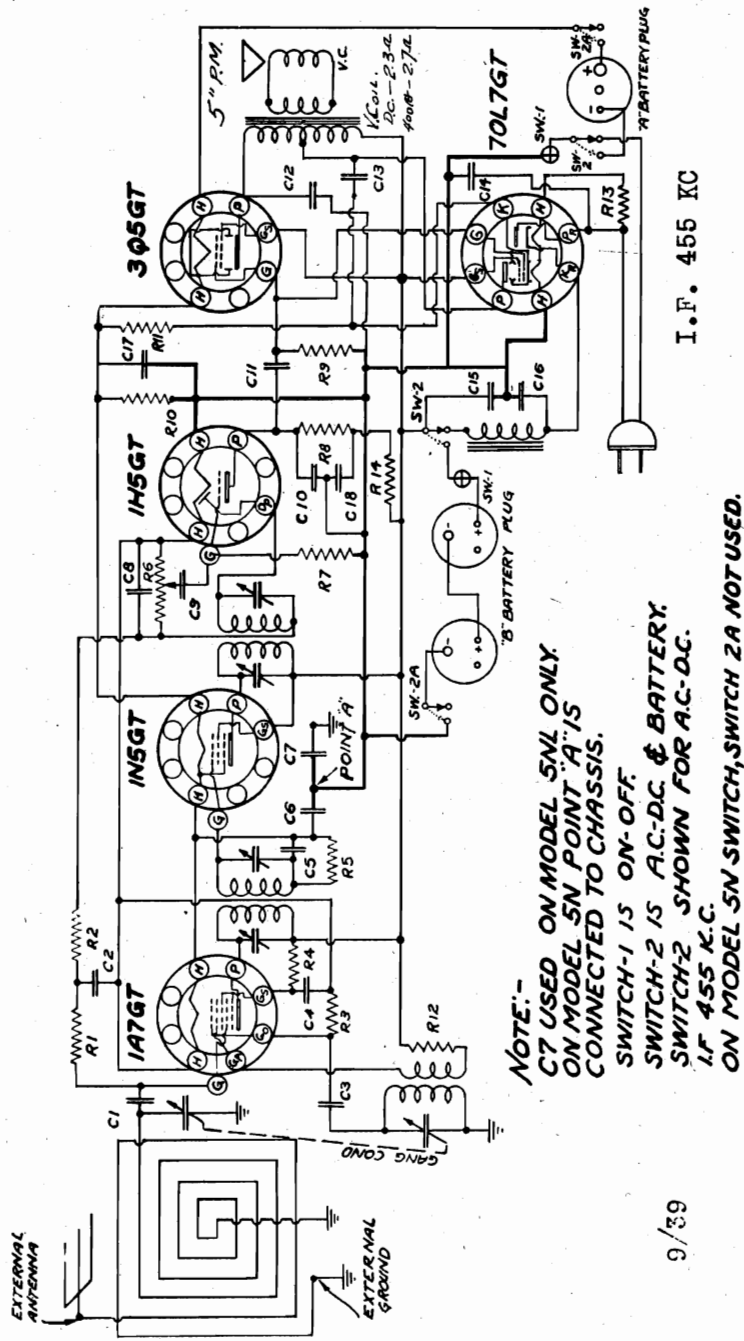

SCHEMATIC DIAGRAM MODEL 5N & 5NL

TUBE FUNCTIONS
1A7GT- MIXER-OSCILLATOR
1N5GT- I.F. AMPLIFIER
1H5GT- 2ND DET-AVC-1ST A.F.
3Q5GT- OUTPUT
70L7GT-RECTIFIER

FOR CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOL. VIII.
TRIM OSC- 1550 KC, TRIM ANT- 1400 KC
PAD- 600 KC


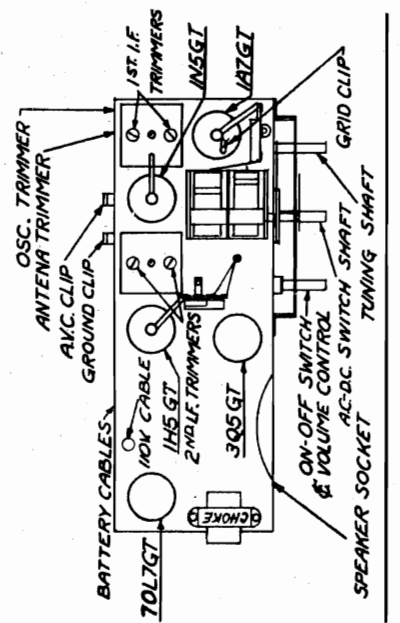


Fig. 1—Top View

MODELS 5R, 5RL
 MODELS 5S, 5SL
 Schematics, Voltage
 Alignment
 CONTINENTAL RADIO & TELEV. CORP.

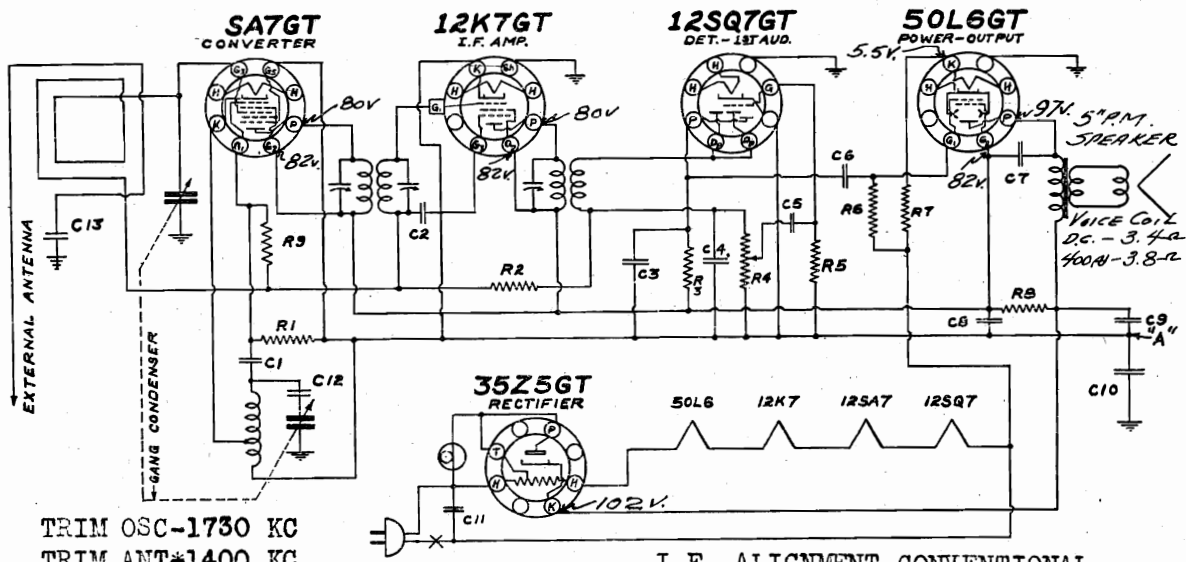


TRIM OSC-1730 KC
 TRIM ANT-1400 KC

I.F. ALIGNMENT CONVENTIONAL

RESISTORS				CAPACITORS			
N ^o	OHMS	WATTS		N ^o	MFD.	VOLTS	
R1	20,000	1/2	R6	500,000	1/2	C7	.01 400
R2	2 MEG.	1/2	R7	150 ± 10%	1/2	C8	20.0 150
R3	250,000	1/2	R8	1,000	1	C9	30.0 150
R4	500,000	V.C.	R9	15 MEG.	1/2	C10	.25 200
R5	5 MEG.	1/2				C11	.05 400
						C12	.02 400
						C13	.001 600

I.F. 455KC
 MODELS 5R, 5RL

C10 and C14 used in model 5RL only. On model 5R point "A" is connected to ground.
 Voltages:-From point indicated to "A", Line 115 V. A.C. Power consumption 30 watts, Meter 1000 ohms per volt. 150 volt scale.
 FOR SOCKET LAYOUT SEE INDEX

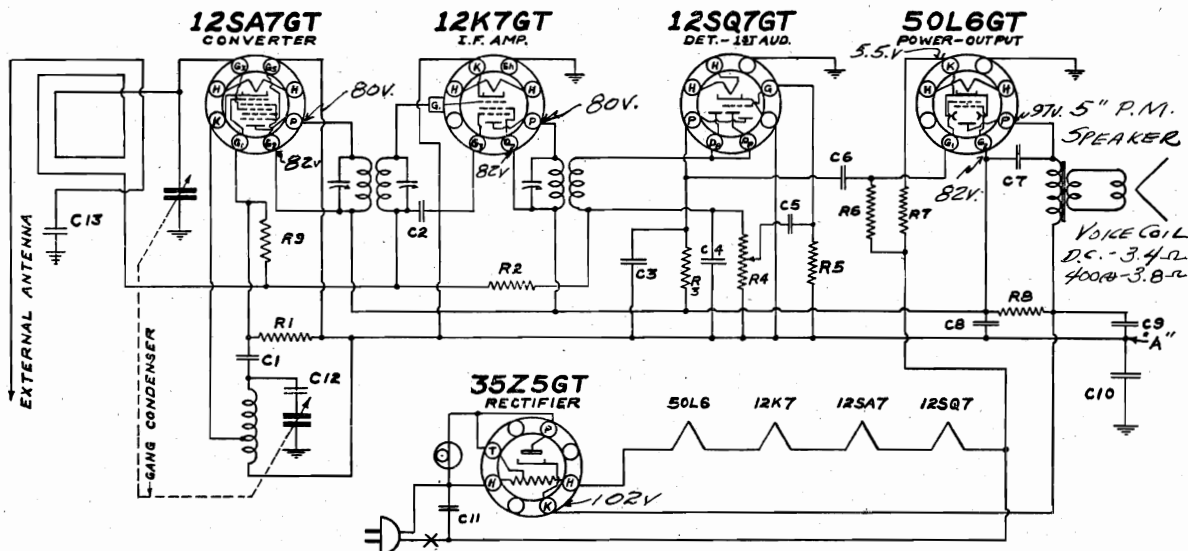

ALIGNMENT SAME AS MODEL 5R ABOVE

RESISTORS				CAPACITORS			
N ^o	OHMS	WATTS		N ^o	MFD.	VOLTS	
R1	20,000	1/2	R6	500,000	1/2	C7	.01 400
R2	2 MEG.	1/2	R7	150 ± 10%	1/2	C8	20.0 150
R3	250,000	1/2	R8	1,000	1	C9	30.0 150
R4	500,000	V.C.	R9	15 MEG.	1/2	C10	.25 200
R5	5 MEG.	1/2				C11	.05 400
						C12	.02 400
						C13	.001 600


I.F. 455KC
 MODELS 5S, 5SL

C10 and C12 used in model 5SL only. On model 5S point "A" is connected to chassis.
 Voltages:- (See note Model 5R above).

Schematics, Voltage Alignment

CONTINENTAL RADIO & TELEV. CORP.

MODELS A6, XA6
MODELS G6, XG6

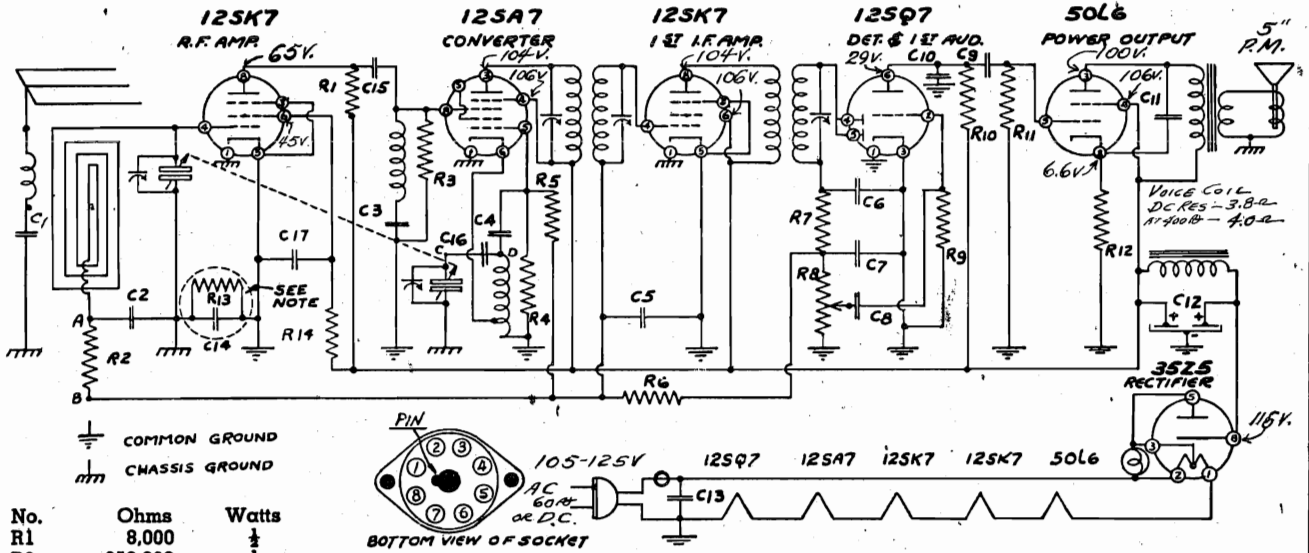

No.	Ohms	Watts
R1	8,000	1/2
R2	250,000	1/2
R3	250,000	1/2
R4	20,000	1/2
R5	15,000,000	1/2
R6	2,000,000	1/2
R7	50,000	1/2
R8	500,000	1/2
R9	5,000,000	1/2
R10	250,000	1/2
R11	500,000	1/2
R12	200-10%	1/2
R13	150,000	1/2
R14	40,000	1/2

No.	Capacity	Voltage
C1	.001	600
C2	.05	200
C3	.000060-5%	Mica
C4	.00005	Mica
C5	.05	200
C6	.0001	Mica
C7	.00025	Mica
C8	.005	400
C9	.005	400
C10	.00025	Mica
C11	.01	400


A6 & XA6

ISSUE A
JAN. 1940

VOLTAGES: TAKEN FROM POINT INDICATED TO GROUND; LINE-115V. A.C.-VOL. CONTROL AT MAX.-METER-1000-Ω PER VOLT;-PWR CONSUMPTION 35W.

ALIGNMENT FREQ:-
I.F. - 455KC
B.C. - 1730KC-OSCILLATOR
1400KC-ANTENNA
(A6-CHASSIS END-XA6 COMMON GND USE I.M.F.D. GND)

In model A6 all common grounds become chassis grounds; C2, C14, C16, R2 and R13 are omitted and point A is connected to point B and point C is connected to point D.

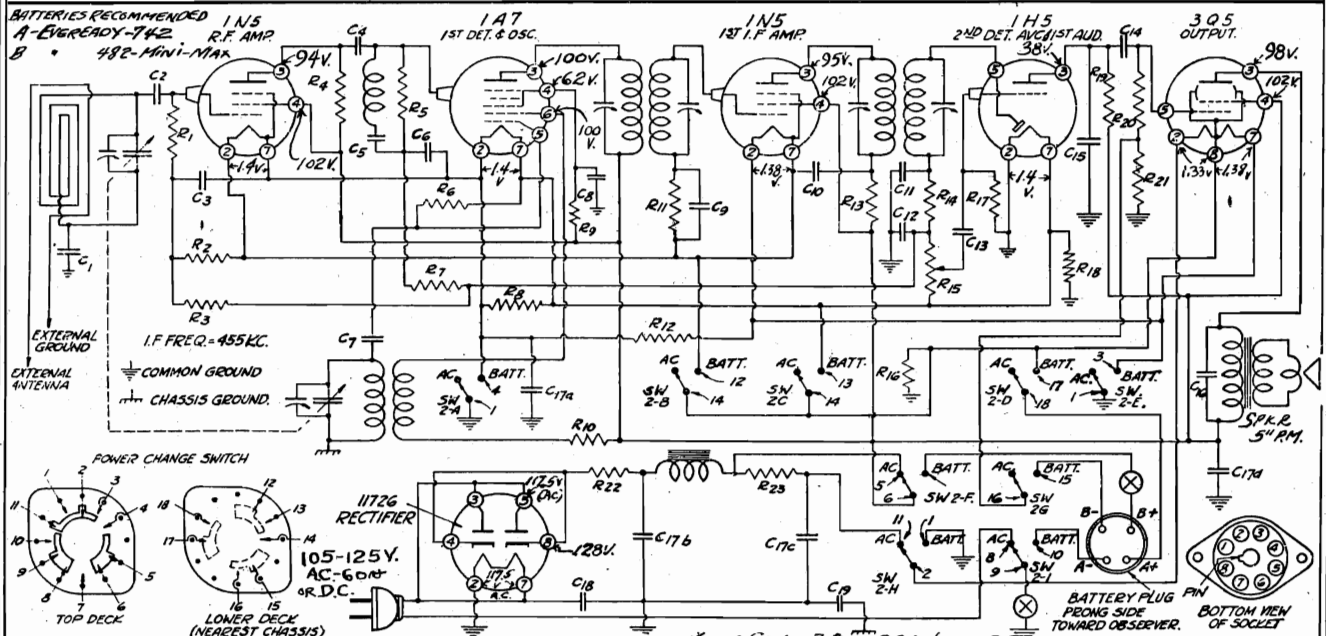

No.	Ohms	Watts
R1	1,000,000	1/2
R2	5,000,000	1/2
R3	5,000,000	1/2
R4	10,000	1/2
R5	250,000	1/2
R6	200,000	1/2
R7	1,000,000	1/2
R8	300	1/2
R9	30,000	1/2
R10	500	1/2
R11	5,000,000	1/2
R12	700	1/2

No.	Capacity	Voltage
C1	.1	200
C2	.00025	Mica
C3	.01	200
C4	.00005	Mica
C5	.00006	Mica
C6	.01	200
C7	.00005	Mica
C8	.01	400
C9	.01	200
C10	.05	200
C11	.00005	Mica

No.	Capacity	Voltage
C12	.00005	Mica
C13	.01	400
C14	.01	400
C15	.00025	Mica
C16	.002	400
C17a	.40	25
C17b	.30	150
C17c	.40	25
C17d	.30	150
C18	.05	400
C19	.25	200

VOLTAGES: LINE AT 117.5V. (A.C.), VOL. CONTR.-MAX., METER 1000-Ω PER VOLT. P.C.-25 WATTS; FROM END TO POINT IND. ALIGNMENT FREQ:- (USE COMMON GROUND) I.F. - 455KC B.C. - 1550KC-OSCILLATOR. -1400KC-ANTENNA.


G6 & XG6

ISSUE A
FEB. 1940

In Model G6 switch points 15, 16, 17 and 18 are not used. Power change switch 2A thru 2I and the pictorial view shown in the "AC-DC" position.

MODELS 6J,6JL
MODELS 6M,6ML
Schematics,Alignment

CONTINENTAL RADIO & TELEV. CORP.

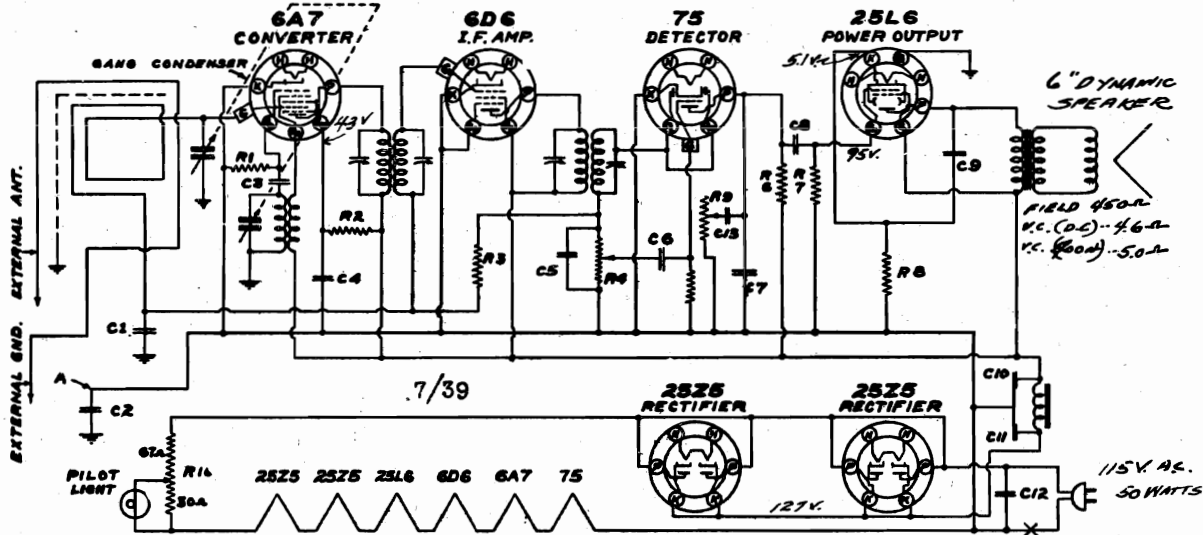

RESISTORS			CONDENSERS		
Nº	OHMS	WATTS	Nº	MFD.	VOLTS
R1	50,000	½	C1	.02	200
R2	30,000	½	C2	.25	200
R3	1,000,000	½	C3	.0005	MICA
R4	500,000	VOL. CONT.	C4	.05	200
R5	5,000,000	½	C5	.0025	MICA
R6	250,000	½	C6	.01	400
R7	500,000	½	C7	.0025	MICA
R8	150 ± 10%	½	C8	.01	400
R9	200,000	TONE CONT.	C9	.02	400
R10	67 ± 30	¼			


NOTE: - C2 USED ON MODEL 6JL ONLY ON MODEL 6J POINT "A" IS CONNECTED TO CHASSIS.

I.F. 455 K.C.
+ INDICATES CHASSIS GROUND
VOLTAGES: WITH METER 100Ω/VOLT TO GROUND; ANT. SHARDED TO GROUND.

SCHEMATIC DIAGRAM
MODEL 6JL
MODEL 6J

I.F. ALIGNMENT CONVENTIONAL (SEE VOL. VIII).
BROADCAST BAND
TRIM OSC 1630 KC
TRIM ANT 1400 KC

(See Index for tube layout)

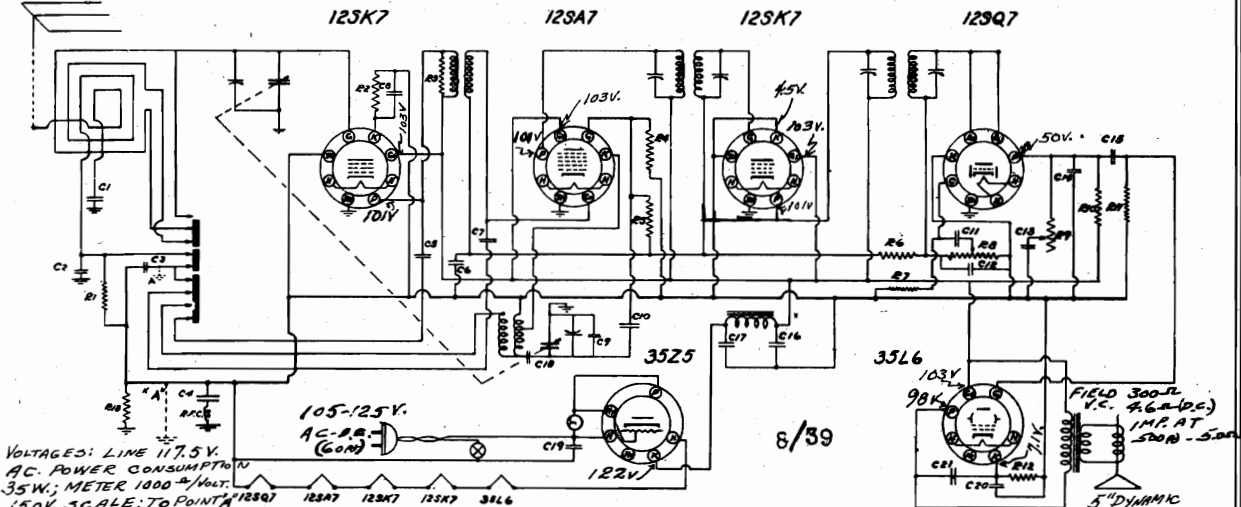

VOLTAGES: LINE 117.5V.
AC POWER CONSUMPTION
35W.; METER 1000Ω/VOLT
150V. SCALE; TO POINT "A" (125Q7)

RESISTORS.				CAPACITORS.			
Nº	OHMS	WATTS	Nº	MFD.	VOLTS	Nº	MFD.
R1	150K ± 10%	½	C1	.001	600	C8	.05
R2	600 ± 10%	½	R8	500K ± 5%	½	C9	.000010
R3	5K ± 10%	½	R9	500K ± 5%	½	C10	.00005
R4	15Meg.	½	R10	150K	½	C11	.01
R5	25K	½	R11	250K	½	C12	.00025
R6	2Meg	½	R12	200 ± 10%	½	C13	.005
R7	5Meg	½	R13	150K	½	C14	.0005
						C15	.01
						C16	20
						C17	20
						C18	.02
						C19	.05
						C20	20
						C21	.02

I.F. 455 K.C.


In model 6M only C3, C4, C18, R13 and the R.F. choke (RFC) are not used and points "A" are connected to chassis.

I.F. ALIGNMENT CONVENTIONAL (SEE VOL. VIII).
BROADCAST BAND
TRIM OSC 1630 KC
TRIM ANT 1400 KC

MODELS 6M, 6ML
(See Index for tube layout)

CONTINENTAL RADIO & TELEV. CORP.

MODEL 7C
MODEL 7H
Schematics, Alignment

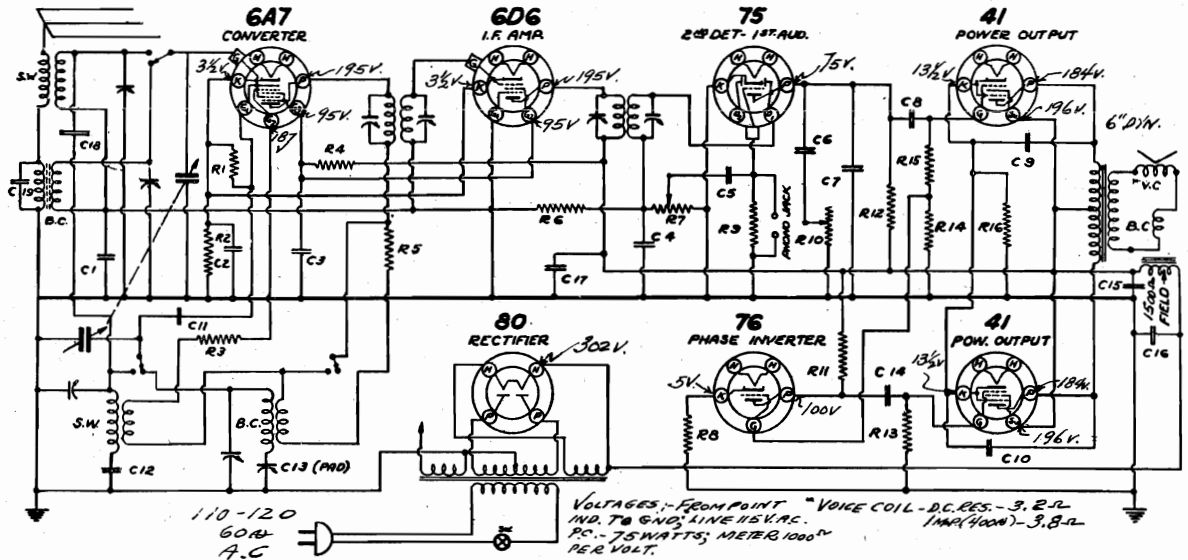

CAPACITORS				RESISTORS			
No.	MEG'S	VOLTS	TYPE	No.	OHMS	WATTS	TYPE
C1	.05	200	.0001 MICA	R1	50,000	1/2	50,000
C2	.25	200	.004-5% MICA	R2	250	1/2	250,000
C3	.05	400	300-600µMFD	R3	250	1/2	500,000
C4	.00025	MICA	PADDER	R4	20,000	1/2	100,000
C5	.01	400	.01	R5	1,000	1/2	400,000
C6	.005	600	10.0	R6	2 MEG	1/2	300
C7	.00025	MICA	C17	R7	500,000 VOL. CON.		
C8	.01	400	.05	R8	3,000	1/2	
C9	.005	600	GIMMICK	R9	5 MEG	1/2	
C10	.005	600	.0001 MICA	R10	500,000 TONE CON.		
C11	.0001	400					
C12	.0001	400					
C13	.0001	400					
C14	.0001	400					
C15	.0001	400					
C16	.0001	400					

I.F. 455 KC


BAND SWITCHES SHOWN IN BROADCAST POSITION
BOTTOM VIEW OF TUBE SOCKETS SHOWN
GANG CONDENSER CAPACITY 443µMFD.

- TRIM OSC- 1730 KC (BB)
- TRIM OSC- 18100 KC (SW)
- PAD OSC- 600 KC (BB)
- TRIM ANT- 1400 KC (BB)
- TRIM ANT- 16000 (SW)

MODEL 7C

FOR ALIGNMENT PROCEDURE
SEE MODEL 7C-PH AUTOMATIC

FOR SOCKET LAYOUT SEE INDEX

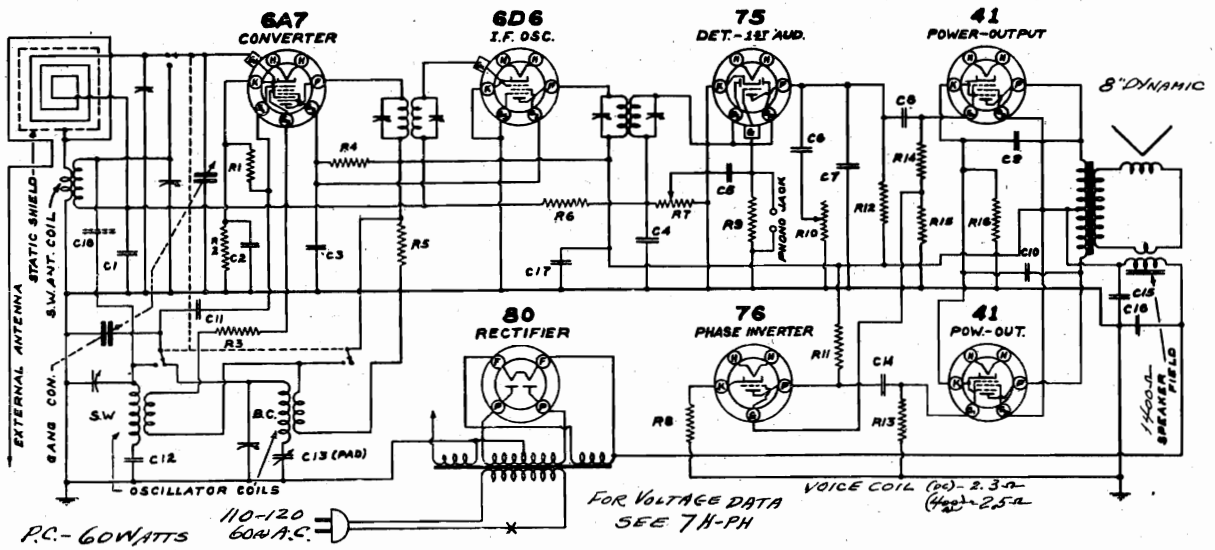

CAPACITORS				RESISTORS			
No.	MEG'S	VOLTS	TYPE	No.	OHMS	WATTS	TYPE
C1	.05	200	.0001 MICA	R1	50,000	1/2	50,000
C2	.25	200	.0001 MICA	R2	300	1/2	50,000
C3	.05	400	.004-5% MICA	R3	250	1/2	250,000
C4	.00025	MICA	PADDER	R4	20,000	1/2	500,000
C5	.01	400	.01	R5	1,000	1/2	100,000
C6	.005	600	10.0	R6	2 MEG	1/2	400,000
C7	.00025	MICA	C17	R7	500,000 VOL. CON.		
C8	.01	400	.05	R8	3,000	1/2	100,000
C9	.005	600	GIMMICK	R9	5 MEG	1/2	300
C10	.0001	400					
C11	.0001	400					
C12	.0001	400					
C13	.0001	400					
C14	.0001	400					
C15	.0001	400					
C16	.0001	400					

I.F. 455 KC


SWITCHES SHOWN IN BROADCAST POSITION
BOTTOM VIEW OF SOCKETS SHOWN.
GANG CONDENSER CAPACITY 443µMFD.

- TRIM OSC-1550 KC (BB)
- OTHER ALIGNMENT DATA SAME AS MODEL 7C

MODEL 7H

FOR SOCKET LAYOUT SEE INDEX

MODEL 7C-PH Automatic
Schematic, Voltage ALIGNMENT
CONTINENTAL RADIO & TELEV. CORP.

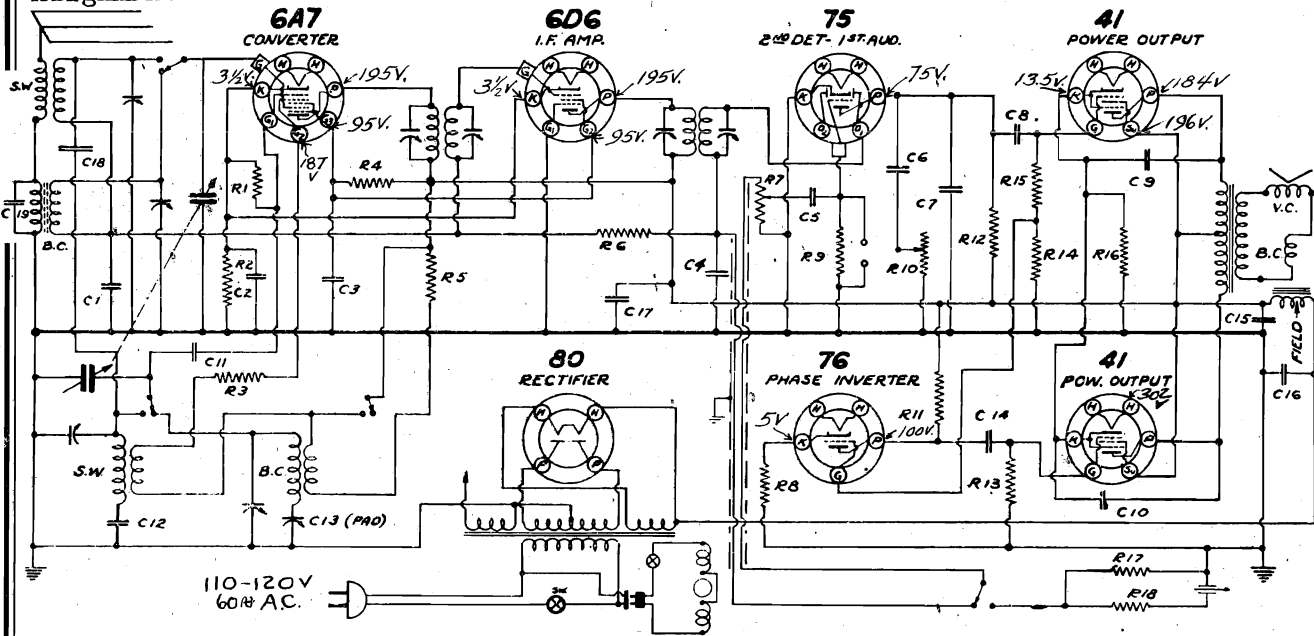

CAPACITORS				RESISTORS							
No.	MFD.S.	VOLTS	NO.	MFD.S.	VOLTS	No.	OHMS	WATTS	No.	OHMS	WATTS
C1	.05	200	C11	.0001	MICA	R1	50,000	1/2	R11	50,000	1/2
C2	.25	200	C12	.004-5%	MICA	R2	200	1/2	R12	250,000	1/2
C3	.05	400	C13	300-600mfd.	PAPER	R3	250	1/2	R13	500,000	1/2
C4	.00025	MICA	C14	.01	400	R4	20,000	1/2	R14	100,000	1/2
C5	.01	400	C15	10.0	350	R5	1,000	1/2	R15	400,000	1/2
C6	.005	600	C16	10.0	350	R6	2 MEG.	1/2	R16	300	1/2
C7	.00025	MICA	C17	.05	400	R7	800,000	VOL. CON.	R17	250,000	1/2
C8	.01	400	C18	GIMMICK		R8	3,000	1/2	R18	500,000	1/2
C9	.005	600	C19	.0001	MICA	R9	5 MEG.	1/2			
C10	.005	600				R10	500,000	TONE CON.			

I.F. - 455 K.C.
BAND SWITCHES SHOWN IN BROADCAST POSITION
BOTTOM VIEW OF TUBE SOCKETS SHOWN
GANG CONDENSER CAPACITY 443mfd.s.

SCHEMATIC DIAGRAM MODEL 7C-PH

I.F. ALIGNMENT

Adjust the signal generator to 455 KC and connect the output to the grid of the first detector tube (6A7) through a .05 or .1 mfd. condenser. Align all I.F. trimmers to peak or maximum reading on the output meter.

BROADCAST BAND ALIGNMENT

Adjust the signal generator to 1730 KC and connect the output to the antenna lead (blue) through a .0002 mfd. mica condenser. Set the gang condenser to minimum capacity and adjust the oscillator trimmer to receive this signal. The oscillator and antenna trimmers may be reached by removing the dial escutcheon. (See Fig. 3 for trimmer locations.) The next step is to set the signal generator to 1400 KC and after tuning in the signal adjust the antenna trimmer to peak. Next, re-set the dial pointer on the receiver and the signal generator to 600 KC. Slowly increase or decrease the oscillator padding condenser and at the same time continuously tune back and forth across the signal with the receiver until the maximum reading is obtained on the output meter.

Return to 1400 KC and again go over the adjustments of this frequency to be certain that they were not put slightly out of alignment when adjustment was made at 600 KC.

SPEAKER (Part No. P3390) 12" Dynamic

Field resistance1500 ohms
D.C. voice coil resistance..... 1.9 ohms
Voice coil impedance at 400 cycles.... 2.2 ohms

Voltages—Line 115 volts A.C. Power consumption 90 watts. Volume control maximum. Meter 1000 ohms per volt. (VOLTAGES ARE FROM POINT INDICATED TO GROUND).

FOR TUNER SEE INDEX

SHORT WAVE BAND ALIGNMENT


The short wave band is adjusted by setting the signal generator to 18100 KC and connecting the output to the antenna lead through a 400 ohm resistor. Set the gang at minimum and adjust the "short wave oscillator trimmer" to receive the signal. Set the generator at 16,000 KC, tune in the signal and adjust the "short wave antenna" trimmer to give maximum output. As there is no variable low frequency padding condenser on this band, the sensitivity of the receiver should be checked at 6000 KC to determine whether the circuits are in line at this frequency. Should the receiver lack sensitivity at 6000 KC, the antenna and oscillator coils, as well as the mica padding condenser, should be tested.

MODEL 7C-PH
Tuner Data
MODEL 7H
Tuner, Voltage
8" Dynamic

CONTINENTAL RADIO & TELEV. CORP. 382-7H-PH

MODELS 7H-PH, 7H-PH Automatic

Schematic, Voltage, Tuner Alignment

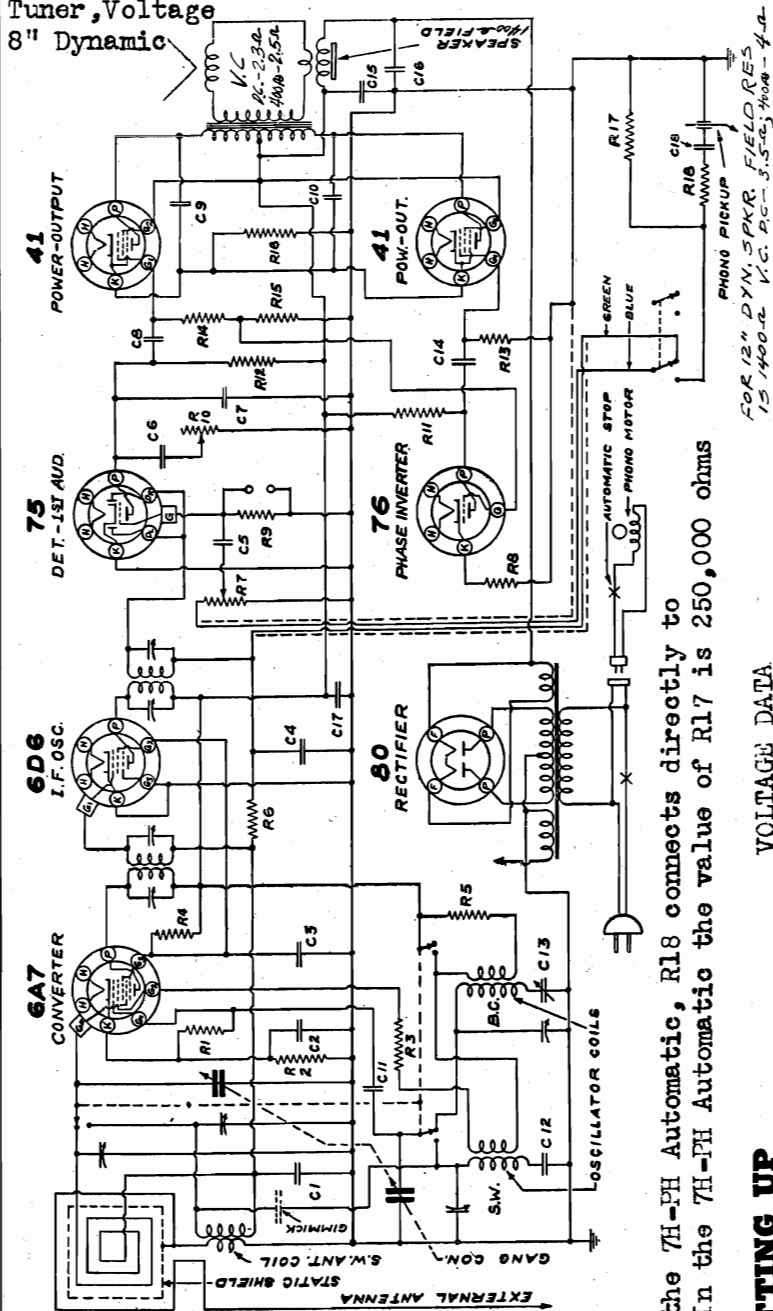

FOR 12" DYN. SPKR. FIELD RES. 15 1400 L.V.C. P.C. 3.5-5.5 7000-4-4.

VOLTAGES TAKEN AT 115 V.A.C. VOL. CONT. AT MAX. P.C. 60 WATTS. 1.75 WATTS PH. MODELS 382-7H-PH

CAPACITORS	
NO.	VALUES
C1	.01
C2	.05
C3	.00025
C4	.01
C5	.01
C6	.00025
C7	.01
C8	.005
C9	.005
C10	.005
C11	.0001 MICA
C12	.0045 MICA
C13	300-600 μ .M.F.D.
C14	.01
C15	10.0
C16	.05
C17	.005
C18	.005

RESISTORS	
NO.	VALUES
R1	500,000
R2	500,000
R3	250
R4	20,000
R5	1,000
R6	2 MEG.
R7	500,000 VOL. CON.
R8	3,000
R9	5 MEG.
R10	500,000
R11	50,000
R12	250,000
R13	250,000
R14	500,000
R15	100,000
R16	100,000
R17	100,000
R18	500,000

I.F. - 455 KC. SWITCHES SHOWN IN BROADCAST POSITION BOTTOM VIEW OF SOCKETS SHOWN

NOTE: C18 is not used on the 7H-PH Automatic, R18 connects directly to the Phono Pickup. In the 7H-PH Automatic the value of R17 is 250,000 ohms 1/2 watt.

PROCEDURE FOR SETTING UP PUSH BUTTONS

Loosen one of the push buttons by turning the push button knob counter clockwise a turn or less and push it in; while holding the button in, tune in a desired station by means of the station selector knob. Turn the selector very slowly back and forth until the signal is clearest. Now while holding the push button in, tighten it by turning clockwise. Release the push button and turn the station selector to one end of the dial; push the tuning knob to the right and then check the button by pushing it in and if the station is tuned to the center of the area on the dial covered by the station the adjustment is correct. Release the push button and loosen another push button and repeat the above procedure, doing this for the remaining buttons.

VOLTAGE DATA


Tube	Terminal	Value
6A7 tube	Plate (P) to ground	190 volts
	Screen grid (G3) to ground	94 volts
	Anode grid (G2) to ground	183 volts
	Cathode (K) to ground	3 volts
6D6 tube	Plate (P) to ground	190 volts
	Screen grid (G2) to ground	94 volts
75 tube	Plate (P) to ground	85 volts
	Plate (P) to ground	103 volts
76 tube	Plate (P) to ground	5 volts
	Cathode (K) to ground	181 volts
41 tube	Plate (P) to ground	190 volts
	Screen grid (G2) to ground	12 volts
	Cathode (K) to ground	260 volts
80 tube	Plate (P) to ground	181 volts
	Filament (F) to ground	260 volts

IF PEAK 455 KC
CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII.
ALIGNMENT FREQUENCIES
BROADCAST BAND
TRIM OSC. ---1550 KC
TRIM ANT. ---1400 KC
PAD --- 600 KC
SHORT WAVE BAND
TRIM OSC. ---18100 KC
TRIM ANT. ---16000 KC
FOR TRIMMER LOCATIONS
SEE SOCKET LAYOUT.

MODEL AM7
Schematic, Socket
Trimmers, Alignment

CONTINENTAL RADIO & TELEV. CORP.

MODEL AM8
Socket, Trimmers

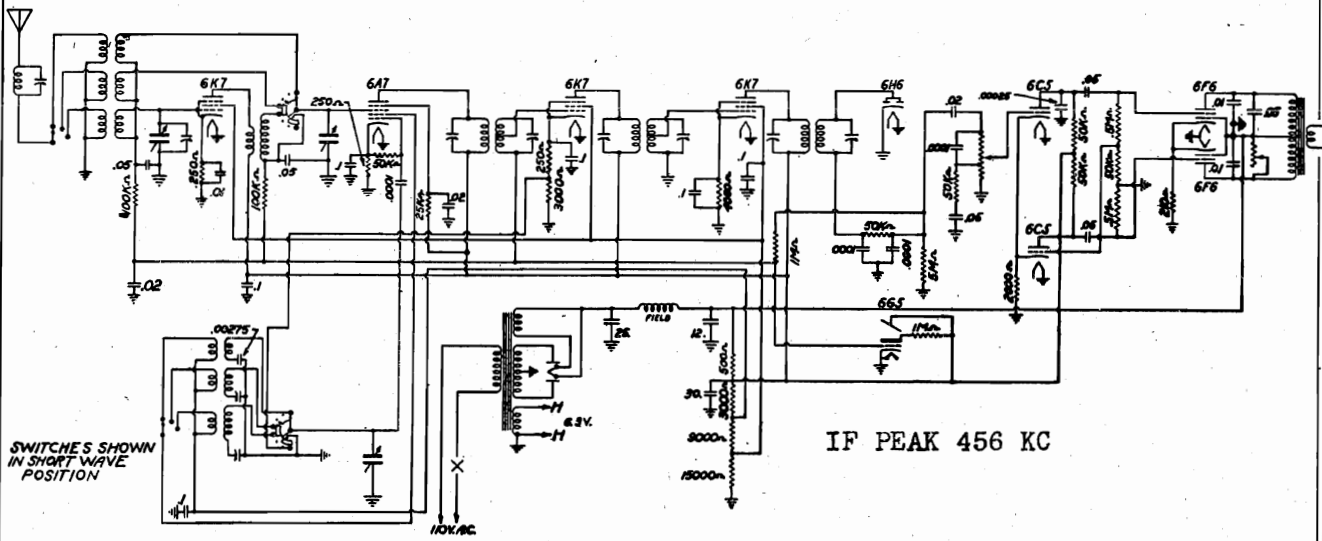


CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII.

WAVE TRAP ADJUSTMENT

At the rear of the chassis is an adjustment screw connected to a trap circuit for elimination of code interference when operating on the broadcast band. If code interference

is encountered adjustment of this screw will filter it out. It is to be used only if such interference is experienced in broadcast reception. Its use prevents code transmitters operating on a frequency around 456 K. C. from being received by the I. F. amplifier which is tuned to 456 K. C.

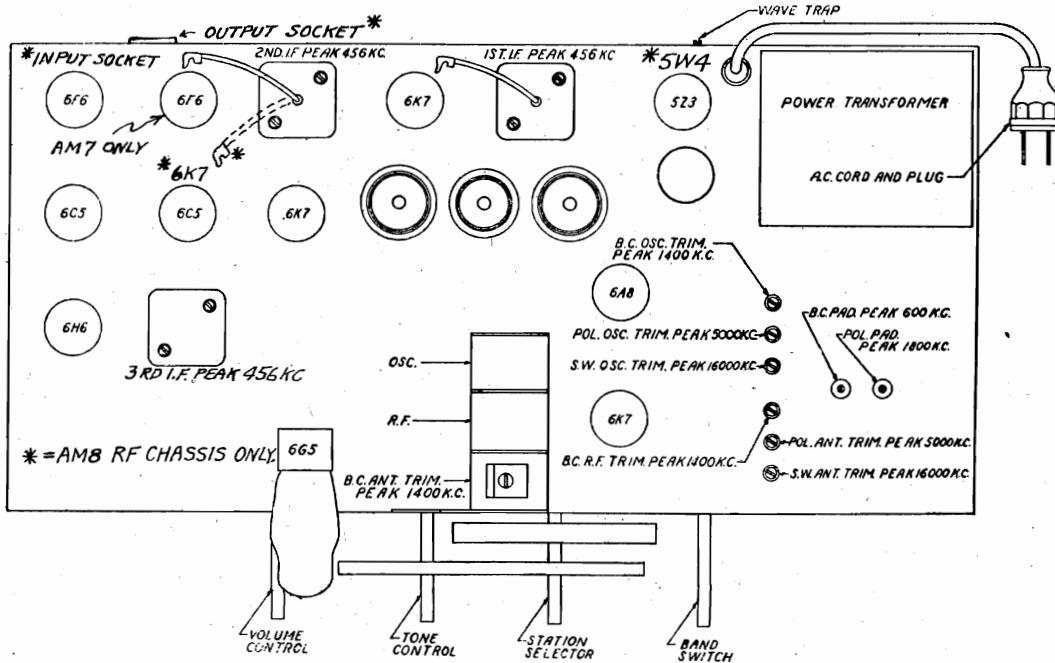

SERVICE DATA FOR ALL BANDS

If it is suspected that the oscillator has stopped but is doubtful due to the presence of the usual amount of noise level, it is suggested that the oscillator plate voltage be checked. To ascertain whether the tube is oscillating, ground the oscillator grid of the 6A8 (short stator and rotor plates of oscillator section on gang condenser). If oscillating properly, grounding the grid will cause an appreciable drop in oscillator voltage. Grounding or shorting the stator and grid

components should be accomplished by grounding the stator mounting nut to the frame of the condenser with a screw-driver or any metallic conductor.

Do not wedge a screw-driver between the plates for this is liable to permanently warp the plates and thus prevent the oscillator section of the gang condenser from tracking

CONTINENTAL RADIO & TELEV. CORP

MODEL 7C-PH
MODEL 7H-PH
MODEL 11B-PH
Record Changer Data

AUTOMATIC RECORD CHANGER

This Record Changer will automatically play a series of eight 10" or seven 12" records of the standard 78 R.P.M. type. Records of the last few years with the standard eccentric or spiral stopping groove on the inside and an eccentric on the outside will operate the automatic mechanism. However, records of any size up to 12" may be played manually.

OPERATION

Before operating the phonograph, either automatically or manually, be sure that the pickup is down and can be moved by hand. If not, a "cycle" must be completed to bring it down. To do this throw Turntable Switch "On". The turntable will begin to revolve and the cycle of motion on the pickup arm will be resumed. When the pickup arm comes down, turn off the Turntable Switch.

CAUTIONS

1. Never use force to start or stop the motor or any part of the record-changing mechanism or pickup arm.
2. The use of records which have become warped or damaged through improper care, may cause the mechanism to jam and damage the instrument. Records which have become warped, will slide on one another when playing, resulting in unsatisfactory reproduction.

3. This instrument is not recommended for playing 10" and 12" records in mixed sequence. If this service is desired, all records must be perfectly flat and free from warp. The index and record reject lever must be set at "10" and after playing the last selection, the pickup will come down in position for a 10" record and repeat the playing of the record on a 10" diameter unless the turntable switch is turned off. Any jamming of the mechanism under

CONTROLS AND MECHANISM

INDEX AND RECORD REJECT LEVER

This lever is located near the right front corner of the motorboard with its index plate marked for four positions—"Manual", "12", "10", and "Reject". When it is desired to change record selections manually, this lever should be set in the "Manual" position. With the lever in the "12" position, the mechanism is set to play a series of 12" records automatically. To play either a series of 10" records or 10" and 12" records mixed, the lever should be set at the "10" position. To reject a record being played, or to start the record changing cycle in case the record just played does not have the standard eccentric or spiral stopping groove, simply push the lever to the "reject" position and the next record will drop down. Upon releasing the lever, it will automatically return to the "10" position. If a series of 12" records is to be played, the lever should be returned to the "12" position after rejecting a record. Keep the lever in its "Manual" position when not actually playing records automatically.

TURNTABLE SWITCH

The Slide Switch located just in front of the Index and Record Reject Lever controls the current to the turntable motor. To start the turntable, push the switch to the "On" position. To stop the turntable, push the switch to the "Off" position.

NEEDLES

The use of high grade long playing needles is absolutely essential for the proper operation of this instrument, as the regular needles are only good for one or at the most two records. If any needle is used too long, distortion and poor quality will be obtained and also the records will be damaged.

PICKUP AND TOP-LOADING NEEDLE SOCKET

The pickup is the new crystal type, with a hole in the top for insertion of needles. When not playing records, the pickup arm should be moved out to the right beyond the turntable and placed at rest on the support with the edge of the pickup arm in the groove and the pickup over the needle gauge plates. The pickup must be in this position to change needles.

To insert a needle initially, loosen the needle screw on the front of the pickup, place needle in hole at top so that it drops down against the needle plate and then tighten the needle screw.

NEEDLE EJECTOR

The extending tab on the needle gauge plate of the needle box operates the needle ejector. To change a needle, place pickup in rest position,

loosen needle screw and press the extending tab on the needle gauge plate to drop the used needle into the box below. Release tab allowing the needle gauge plate to swing back, and then insert a new needle in the pickup as described above.

RECORD HOLDER SHELVES

To place a record on the turntable or to remove records, raise the record holder shelves by lifting with the fingers under the shell, and swing clear of the outer edge of record. Also push back vertical lever adjacent to the rear record holder post. The turntable is now accessible. Before loading the magazine for automatic operation, swing the record holder shelves back into position.

AUTOMATIC OPERATION

1. See that the pickup is over the needle gauge plate with the needle properly in place. If not, complete a "cycle" as explained in the first paragraph under "Operation".
 2. With the Index and Record Reject Lever at "Manual", place the first of the series of records on the turntable and the remainder of the series (up to seven 10" or six 12" records) on the record holder posts (as shown in Fig. 2). The records should be arranged in the desired order with the desired selection face up and the last selection on top.
 3. Set the Index and Record Reject Lever to the proper position. (See Controls: Index and Record Reject Lever.)
 4. Push the turntable switch to the left—"On" turntable should commence to revolve.
 5. When the turntable has attained speed, lift pickup and lower gently on to the record so that the needle point enters the outside groove.
 6. Adjust volume control to the desired intensity and tone control to the preferred setting.
 7. Close the lid of the cabinet to eliminate mechanical reproduction of sound by the needle.
- The whole series of records will now play without further attention, and the last record will repeat until the Turntable Switch is turned off. Allow the record-changing mechanism to complete its cycle before the turntable is stopped. Then lift the pickup, swing the arm to the right beyond the edge of the record and lower it onto the pickup rest with the pickup over the needle gauge plate. The record player is then ready for reloading, or for manual operation.



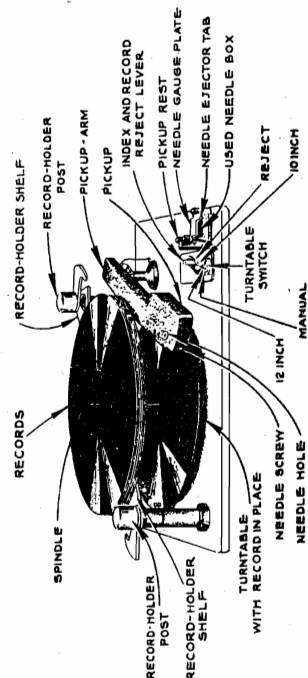



Fig. 2—Top View of Automatic Record Changer

MODEL AM8
Schematic
Amplifier Layout



CONTINENTAL RADIO & TELEV. CORP.

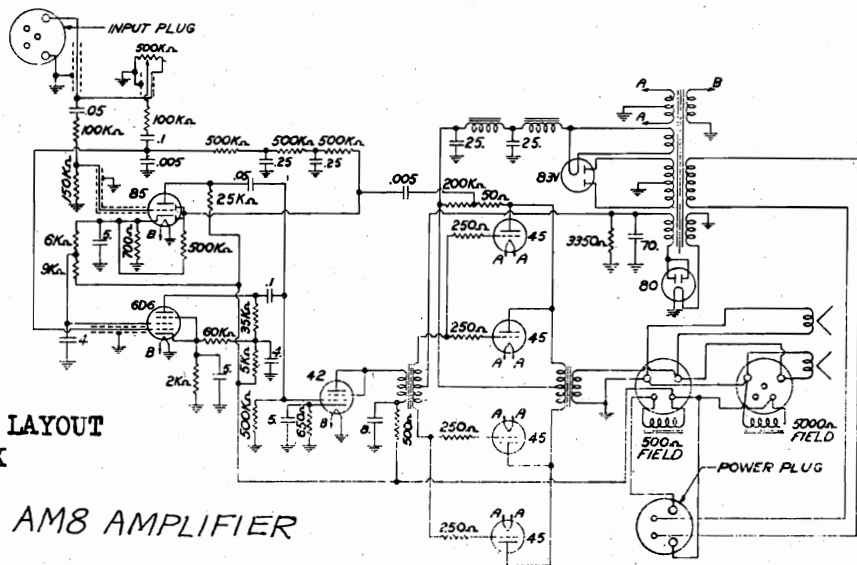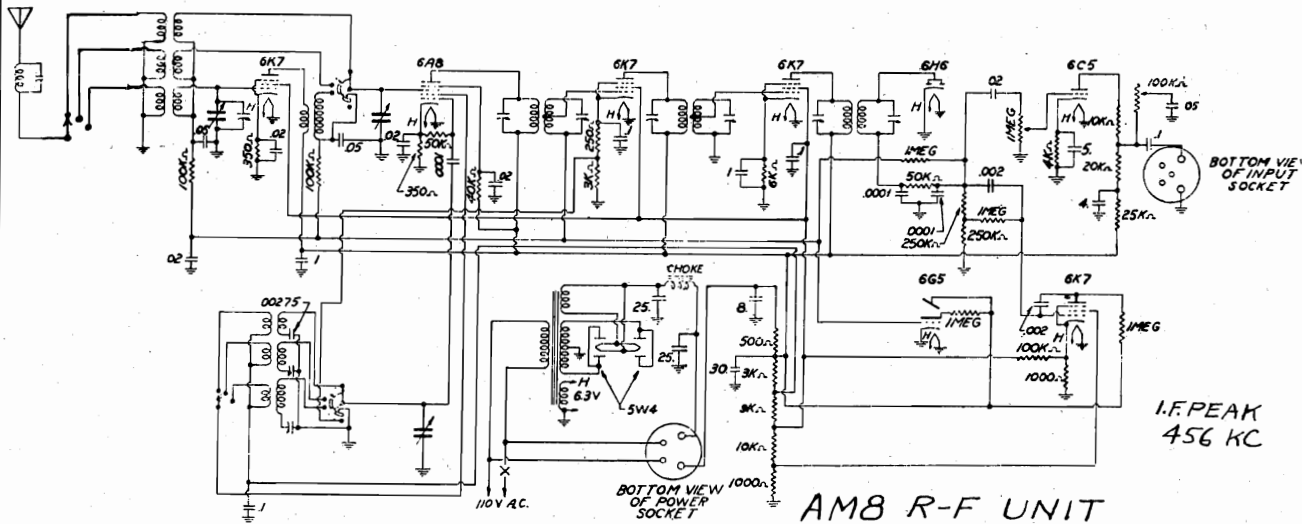

AM8 AMPLIFIER CHASSIS

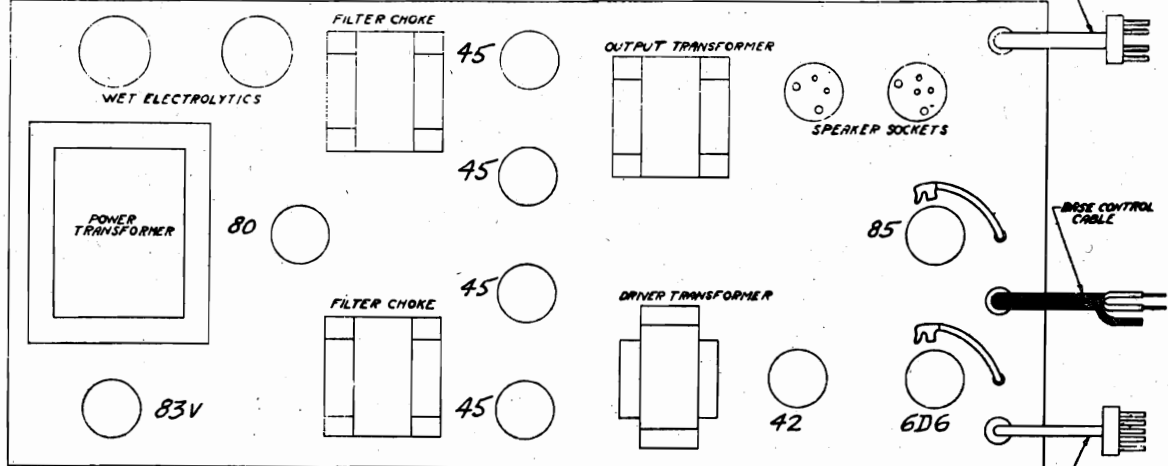

CONTINENTAL RADIO & TELEV. CORP. MODEL 8C
Schematic, Socket Trimmers, Voltage Tuner, Alignment

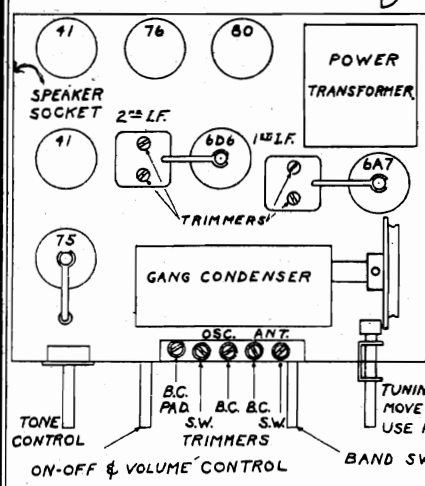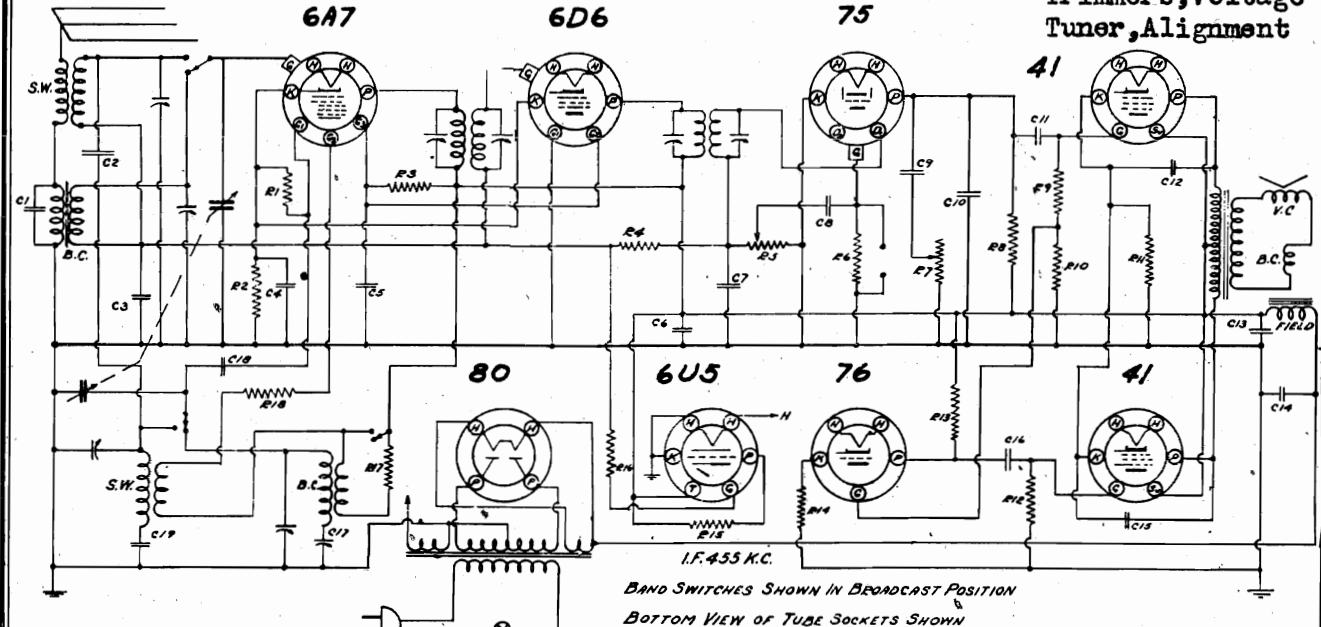

RESISTORS						CAPACITORS					
No.	OHMS	WATTS	No.	OHMS	WATTS	No.	MFDS.	VOLTS	No.	MFDS.	VOLTS
R1	50,000	1/2	R11	300	1/2	C1	.0001	400	C11	.01	400
R2	200	1/2	R12	1/2 Mc	1/2	C2	GIFFHICK	600	C12	.005	350
R3	20,000	1/2	R13	50,000	1/2	C3	.05	200	C13	10.0	350
R4	2 Mc.	1/2	R14	3,000	1/2	C4	.25	200	C14	10.0	350
R5	1/2	1/2	R15	1 Mc	1/2	C5	.05	400	C15	.005	400
R6	1/2	1/2	R16	1	1/2	C6	.05	400	C16	.01	400
R7	1/2	1/2	R17	100	1/2	C7	.0025	400	C17	.0005-.0006	400
R8	1/2	1/2	R18	250	1/2	C8	.01	400	C18	.0001	400
R9	400,000	1/2				C9	.005	600	C19	.004 ± 5%	400
R10	100,000	1/2				C10	.0025	400			

IF PEAK 455 KC FOR CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION OF VOLUME VIII.
ALIGNMENT

BROADCAST BAND

- TRIM B.C. OSC. AT 1730 KC
- TRIM B.C. ANT. AT 1400 KC
- PAD B.C. PAD AT 600 KC

SHORT WAVE BAND

- TRIM S.W. OSC. AT 18100 KC
- TRIM S.W. ANT. AT 16000 KC

- SPEAKER** (Part No. P3499) 6" Dynamic
 - Field resistance1500 ohms
 - D.C. voice coil resistance..... 3.2 ohms
 - Voice coil impedance at 400 cycles.... 3.8 ohms
- Voltages—Line 115 volts A.C. Power consumption 75 watts. Volume control maximum. Meter 1000 ohms per volt.
- 6A7 tube**
 - Plate (P) to ground.....195 volts
 - Screen grid (G3) to ground..... 95 volts
 - Anode grid (G2) to ground.....187 volts
 - Cathode (K) to ground..... 3 1/2 volts
- 6D6 tube**
 - Plate (P) to ground.....195 volts
 - Screen grid (G2) to ground..... 95 volts
 - Cathode (K) to ground..... 3 1/2 volts
- 75 tube**
 - Plate (P) to ground..... 75 volts
- 76 tube**
 - Plate (P) to ground.....100 volts
 - Cathode (K) to ground..... 5 volts

- 41 tube**
 - Plate (P) to ground.....184 volts
 - Screen grid (G2) to ground.....196 volts
 - Cathode (K) to ground..... 13.5 volts
- 80 tube**
 - Filament (F) to ground.....302 volts

PROCEDURE FOR SETTING UP PUSH BUTTONS

Loosen one of the push buttons by turning the push button knob counter clockwise a turn or less and push it in; while holding the button in, tune in a desired station by means of the station selector knob. Turn the selector very slowly back and forth until the signal is clearest. Now while holding the push button in, tighten it by turning clockwise. Release the push button and turn the station selector to one end of the dial; push the tuning knob to the right and then check the button by pushing it in and if the station is tuned to the center of the area on the dial covered by the station the adjustment is correct.

MODELS 11B, 11B-PH
Schematic, Socket, CONTINENTAL RADIO & TELEV. CORP.
Trimmers, Voltage Alignment


- CONDENSERS**
- C 1—.001 mfd. mica
 - C 2—.05 mid. 400 volt tubular
 - C 3—.25 mid. 200 volt tubular
 - C 4—.25 mid. 200 volt tubular
 - C 5—.05 mid. 200 volt tubular
 - C 6—.0001 mfd. mica
 - C 7—.0001 mfd. mica
 - C 8—.05 mid. 400 volt tubular
 - C 9—.25 mid. 200 volt tubular
 - C 10—.00005 mfd. mica
 - C 11—.05 mid. 400 volt tubular
 - C 12—.1 mfd. 400 volt tubular
 - C 13—.1 mfd. 400 volt tubular
 - C 14—.15 mid. 400 volt tubular
 - C 15—.15 mid. 400 volt tubular
 - C 16—.002 mfd. 600 volt tubular
 - C 17—.002 mfd. 600 volt tubular
 - C 18—.02 mid. 400 volt tubular
 - C 19—.25 mfd. 475 volt wet electrolytic
 - C 20—.20 mfd. 450 volt dry electrolytic
 - C 21—.15 mfd. 450 volt dry electrolytic
 - C 22—300—600 mmfd., B. C. pad
 - C 23—.004 mfd. mica, 5% S.W. pad
 - C 24—.05 mid. 200 volt tubular
 - C 25—.05 mid. 400 volt tubular
 - C 26—.00025 mfd. mica
 - C 27—.25 mid. 200 volt tubular
 - C 28—.01 mfd. 400 volt tubular

ALIGNMENT

BROADCAST BAND

- Pad-600 kc
 - Trim osc-1550 kc
 - " ant-1400 kc
- SHORTWAVE BAND**
- Trim osc- 18,100 kc
 - " ant- 16,000 kc

- RESISTORS**
- R 1—250,000 ohm 1/2 watt
 - R 2—170 ohm 1/3 watt 10%
 - R 3—50,000 ohm 1/2 watt
 - R 4—1,000 ohm 1/2 watt
 - R 5—10,000 ohm 1/2 watt
 - R 6—3,000 ohm 1/2 watt
 - R 7—30,000 ohm 2 watt
 - R 8—30,000 ohm 1/2 watt
 - R 9—3,000 ohm 1/2 watt
 - R 10—500 ohm 1/2 watt
 - R 11—1,000,000 ohm 1/2 watt
 - R 12—20,000 ohm 1/2 watt
 - R 13—10,000 ohm 1/2 watt
 - R 14—5,000 ohm 1/2 watt
 - R 15—500,000 ohm vol. control
 - R 16—10,000 ohm 1/2 watt

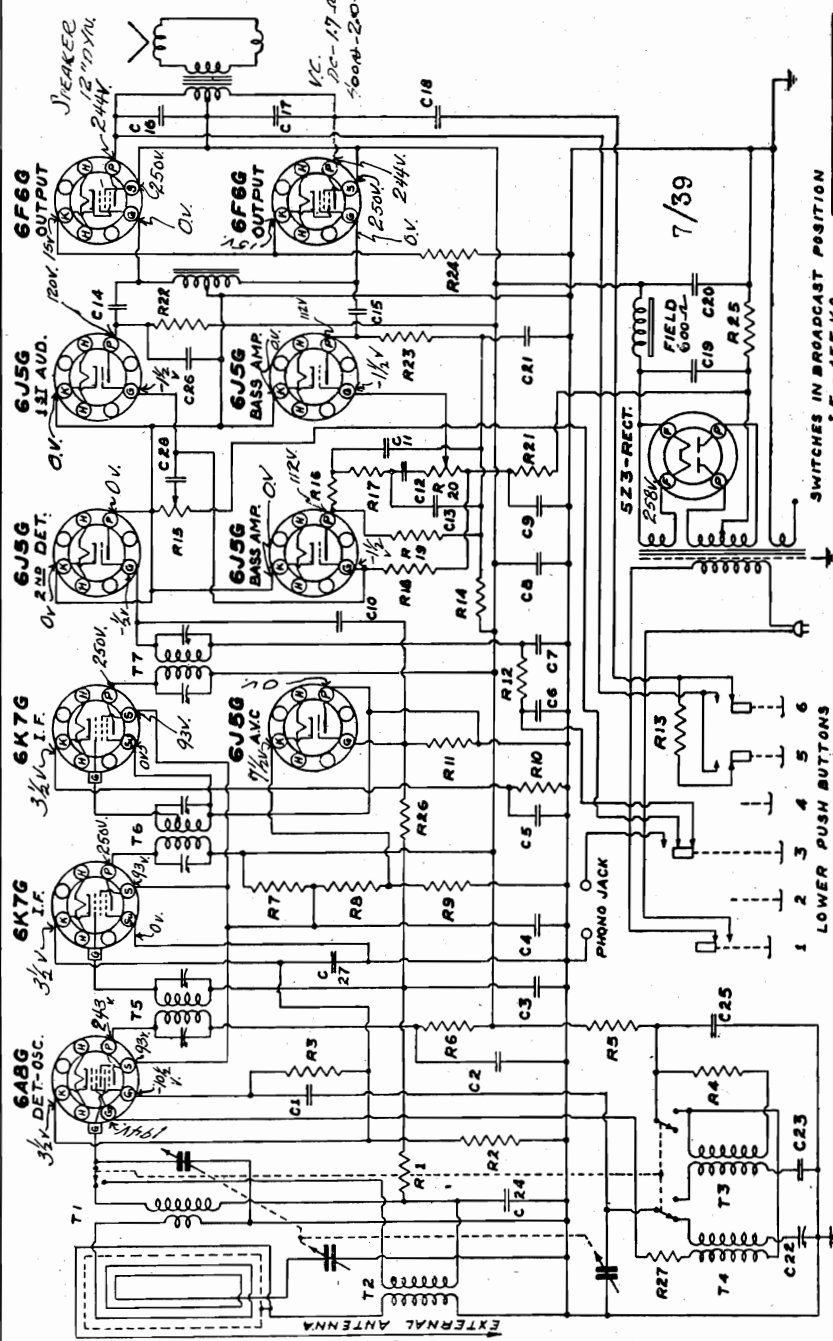


MODEL 11B

SWITCHES IN BROADCAST POSITION
I.F. - 455 KC.

- RESISTORS**
- R 1—250,000 ohm 1/2 watt
 - R 2—170 ohm 1/3 watt 10%
 - R 3—50,000 ohm 1/2 watt
 - R 4—1,000 ohm 1/2 watt
 - R 5—10,000 ohm 1/2 watt
 - R 6—3,000 ohm 1/2 watt
 - R 7—30,000 ohm 2 watt
 - R 8—30,000 ohm 1/2 watt
 - R 9—3,000 ohm 1/2 watt
 - R 10—500 ohm 1/2 watt
 - R 11—1,000,000 ohm 1/2 watt
 - R 12—20,000 ohm 1/2 watt
 - R 13—10,000 ohm 1/2 watt
 - R 14—5,000 ohm 1/2 watt
 - R 15—500,000 ohm vol. control
 - R 16—10,000 ohm 1/2 watt


I.F. 455 KC
FOR CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION OF VOL. VIII

AT LEFT
TOP VIEW OF CHASSIS
VOLTAGES: - FROM POINT INDICATED TO GROUND. LINE 115V AC. P.C. 125W.

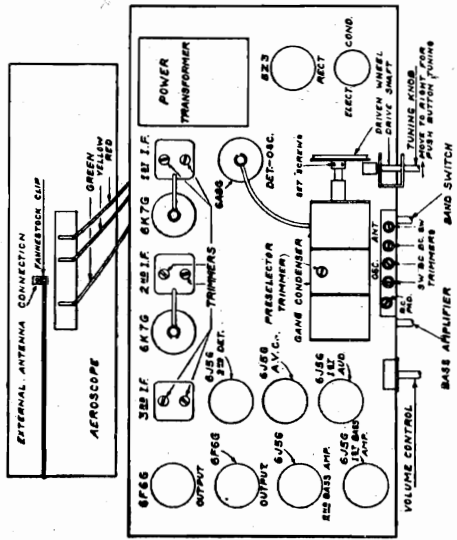

THE CROSLLEY CORP.

MODEL A169
Schematic, Socket
Voltage, Notes

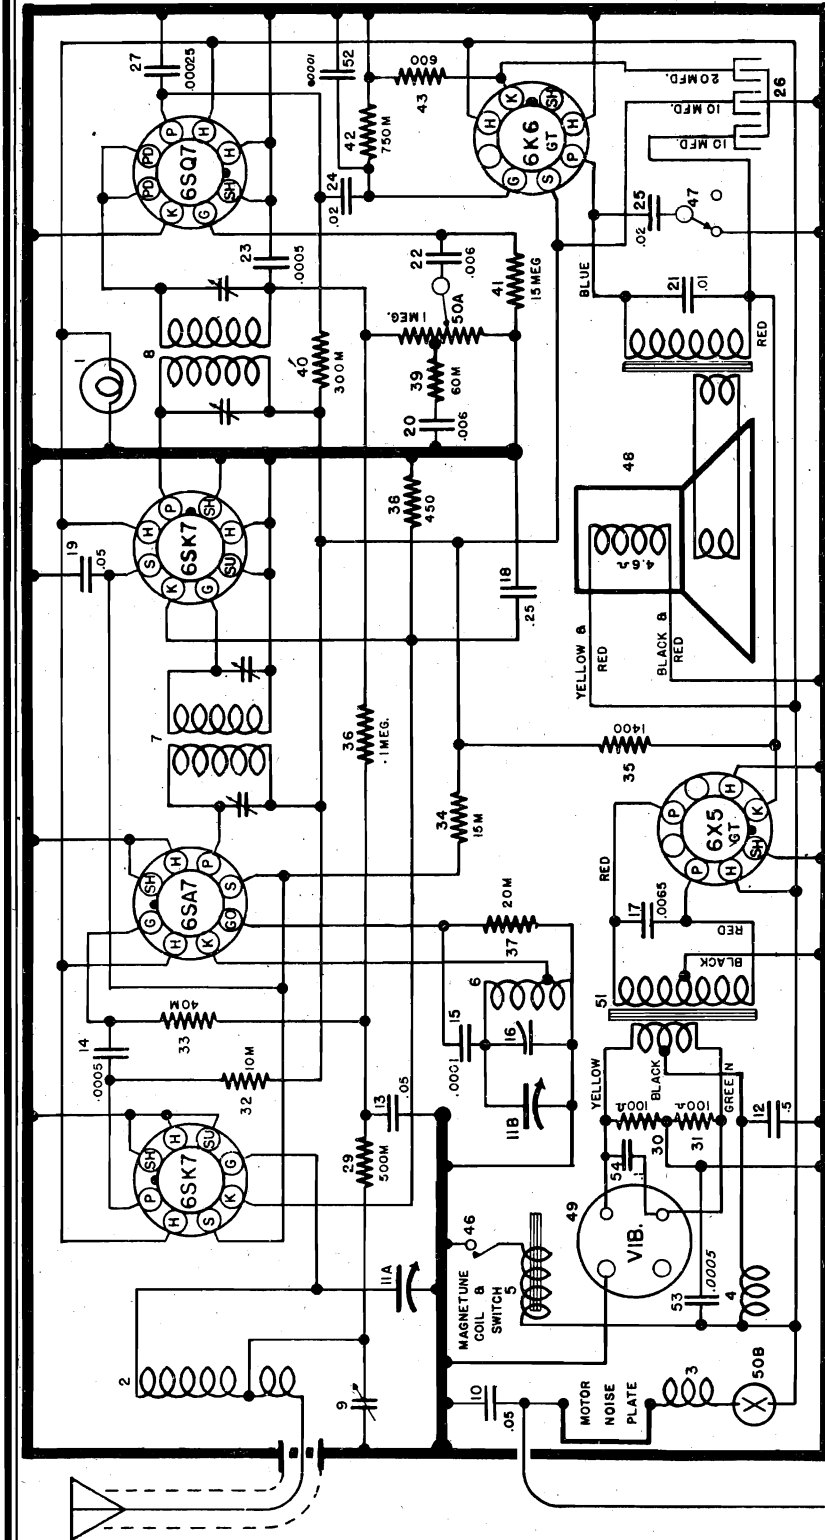


IF PEAK 455 KC

TUBE	FUNCTION	PIN
6SQ7	DET. A.V.C. I.F. A.F.	1 2 3 4 5 6 7 8
6SK7	I.F. AMP.	GRND. GRID. GRND. PLATE 90 5.8 GRND.
6X5GT	OUTPUT	GRND. GRID. GRID. 3.5 80 5.8 215
6SA7	O.S.C. MOD.	J.B. 5.8 235 215 GRID J.B. GRND. 15.5
6K6GT	RECTIFIER	A.O. A.C.
6X5GT	RECTIFIER	GRND. GRID. 265 J.B. 285. N.C. 5.8 260
6SK7	O.S.C. MOD.	GRND. GRID. 215 90 GRID. CATH. 6.8 GRID
6SK7	R.F. AMP.	GRND. GRID. GRND. GRID 3.5 80 5.8 215

Battery drain at 6 volts = 7 amps
VOLTAGES MEASURED WITH 1000-Ω PER VOLT
VOLTMETER FROM CHASSIS TO TUBE PHONO
AND MAY VARY PLUS OR MINUS 10% OF
VALUES GIVEN

N.C. -- NO CONNECTION

FOR ALIGNMENT AND TUNER
DATA, SEE INDEX

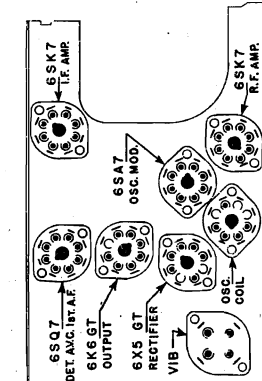

OSC. COIL
N.C. CATH. J.B. GRID J.B. N.O. GRID N.C.

J.B. --- JUNCTION BLOCK

JANUARY, 1940

**MODEL A169
MODEL A259
Alignment, Trimmers
Tuner**

THE CROSLEY CORP.

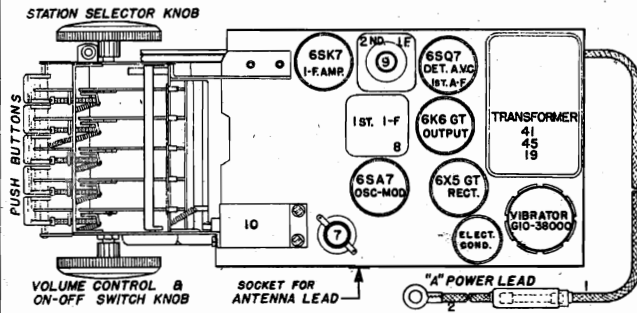


Fig. 2-A—Top View A-259

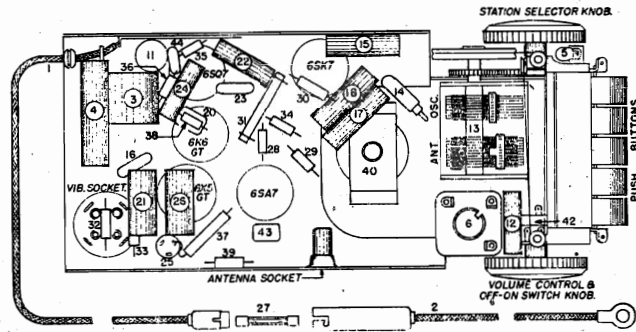


Fig. 3-A—Bottom View A-259

ALIGNMENT PROCEDURE

All the circuits in this receiver are very accurately adjusted at the factory and normally should need no further adjustment. However, if it is definitely known that an adjustment is necessary, such as when an I-F assembly has been changed and etc., the circuit can best be properly aligned with the use of a MODULATED SIGNAL GENERATOR and an output meter.

CONNECTING OUTPUT METER

Connect the output meter to the plate and screen of the 6K6GT output tube. Be sure the meter is protected from D.C. by connecting a condenser (0.1 mf. or larger—*not* electrolytic) in series with one of the meter leads.

1. Aligning the I-F to 455 Kilocycles

- (a) Connect the ground lead from the signal generator to the chassis frame. Connect the high side of generator through an .02 mf. condenser to the grid (pin No. 8) of the 6SA7 oscillator-modulator. Care should be exercised to keep signal generator leads as far as possible from the other grid leads.
- (b) Open gang condenser all the way (minimum) turn volume control to maximum and then set signal generator to 455 kilocycles.
- (c) Adjust both 2nd I-F trimmers for maximum output. Trimmers are accessible from bottom of the chassis between the 6SQ7 and 6SK7 sockets.
- (d) Adjust both 1st I-F trimmers for maximum output. Trimmers accessible from bottom of the chassis.
- (e) Repeat (c) and (d) with as low an output as gives a reasonable indication on output meter for more accurate adjustment.

2. Aligning the R-F

- (a) If the receiver is to be used with a whip or streamlined antenna, the output lead from the signal generator should be connected through a .0001 mf. condenser to the "ANT" connection of the receiver. If a large antenna such as a running board type or built-in top antenna is to be used, a .0002 mf. condenser should be used in place of the .0001 mf. condenser.
- (b) Set the signal generator to 1400 kilocycles.
- (c) Adjust the station selector to 140 on the dial.
- (d) Adjust the trimmer on the "OSC" section of the tuning condenser for maximum output.
- (e) Adjust the trimmer on the "ANT" section of the tuning condenser for maximum output.
- (f) Readjust the station selector for maximum output.
- (g) Repeat operation (e) for more accurate adjustment.

3. Adjusting Antenna Compensating Condenser on Model A-169 only.

- (a) Set the signal generator to 600 kilocycles.

- (b) Tune in the 600 kilocycle signal with the station selector for maximum output.
- (c) Adjust the antenna compensating condenser, located near antenna receptacle, for maximum output.
- (d) Repeat operations (b) and (c) alternately until no further improvement can be obtained.
- (e) Set the signal generator to 1400 kilocycles again.
- (f) Tune in the 1400 kilocycle signal with the station selector for maximum output.
- (g) Readjust the trimmer on the "ANT" section of the tuning condenser for maximum output.

It will be necessary to adjust the antenna compensating condenser to the car antenna after the receiver has been installed in the car.

(a) After the installation is complete, tune in a WEAK station between 55 and 65 on the dial.

(b) Adjust the antenna compensating condenser for maximum volume in the speaker.

4. Setting the Push Buttons

The push buttons are easily and accurately set from the front of the case without removing any panels, etc.

To set push buttons, lift up on push button and the setting screw is easily accessible. Loosen the screws of the buttons to be set, two or three turns to the left. It is not necessary that all the buttons be set at the same time.

Determine the five favorite stations whose call letters are to be placed in the call letter holder (holder enclosed in the instruction envelope). Place the call letters in the order of their frequency (kilocycles), that is, the station that is tuned-in nearest the 150 marking on the dial, should be placed in the right-hand opening, etc.—After call letters have been placed in the holder, break off the celluloid strip five pieces to insert in front of the call letters to protect and hold them in place.

With the special screws provided (two, enclosed in the instruction envelope) mount the call letter holder in place above the push buttons.


By means of the manual tuning knob tune-in AS ACCURATELY AS POSSIBLE, the station whose call letter has been placed in the right-hand opening. REMEMBER: the accuracy of the push buttons depends upon how accurate YOU tune-in the station when setting them.

Lift up the right-hand push button and with a small screw driver push the key all the way down. While holding the key down, securely tighten the setting screw. It is essential that you apply pressure while tightening the setting screw, in order to keep mechanism lined up with station tuned-in.

Remove screw driver and the first button is set, follow through with the same procedure to set the rest of the push buttons.


THE CROSLLEY CORP.

MODEL A259
Schematic, Voltage
Socket, Notes

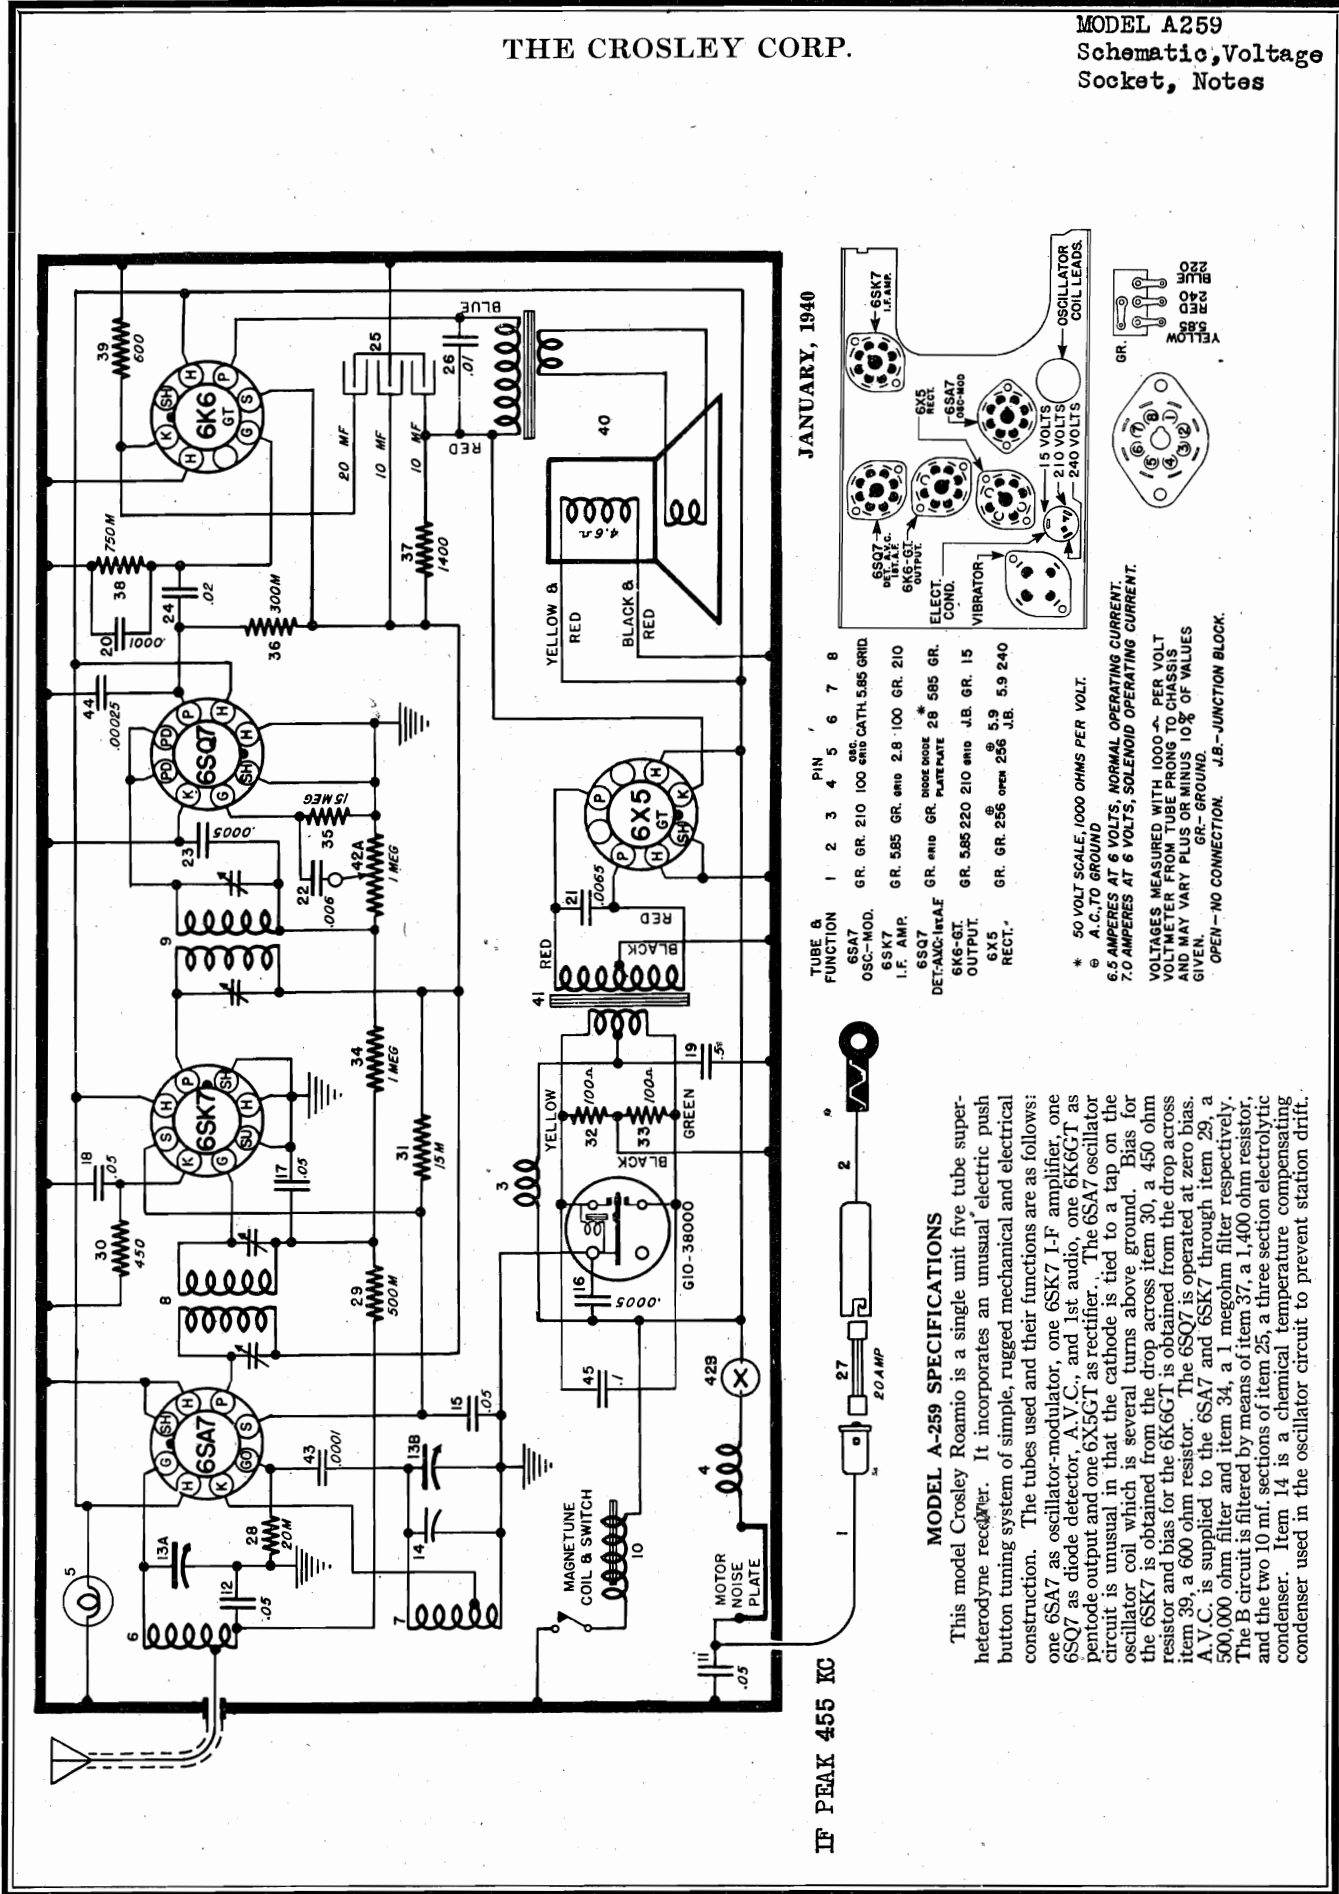

JANUARY, 1940

TUBE & FUNCTION	1	2	3	4	5	6	7	8
6SA7 OSC-MOD.	GR.	GR.	210	100	GR.	CATH.	5.85	GR.
6SK7 I.F. AMP.	GR.	585	GR.	2.8	100	GR.	210	
6X5 DET-AMC-RECT.	GR.	GR.	GR.	GR.	GR.	28	585	GR.
6K6-GT. OUTPUT.	GR.	585	220	210	GR.	15		
6X5 RECT.	GR.	GR.	256	GR.	256	J.B.	5.9	240

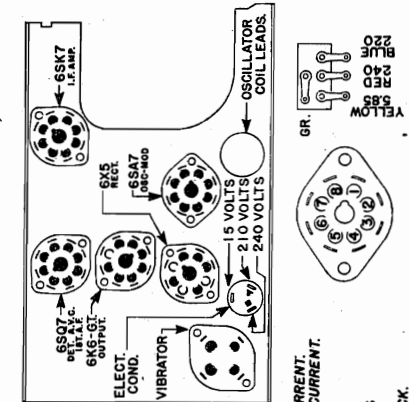


MODEL A-259 SPECIFICATIONS

This model Crosley Roamio is a single unit five tube super-heterodyne receiver. It incorporates an unusual electric push button tuning system of simple, rugged mechanical and electrical construction. The tubes used and their functions are as follows: one 6SA7 as oscillator-modulator, one 6SK7 I-F amplifier, one 6X5 as diode detector, A.V.C., and 1st audio, one 6K6GT as pentode output and one 6X5GT as rectifier. The 6SA7 oscillator circuit is unusual in that the cathode is tied to a tap on the oscillator coil which is several turns above ground. Bias for the 6SK7 is obtained from the drop across item 30, a 450 ohm resistor and bias for the 6K6GT is obtained from the drop across item 39, a 600 ohm resistor. The 6X5 is operated at zero bias. A.V.C. is supplied to the 6SA7 and 6SK7 through item 29, a 500,000 ohm filter and item 34, a 1 megohm filter respectively. The B circuit is filtered by means of item 37, a 1,400 ohm resistor, and the two 10 mf. sections of item 25, a three section electrolytic condenser. Item 14 is a chemical temperature compensating condenser used in the oscillator circuit to prevent station drift.


* 50 VOLT SCALE, 1000 OHMS PER VOLT.
 @ A.C. TO GROUND
 6.5 AMPERES AT 6 VOLTS, NORMAL OPERATING CURRENT.
 7.0 AMPERES AT 6 VOLTS, SOLENOID OPERATING CURRENT.
 VOLTAGES MEASURED WITH 1000 Ω PER VOLT
 VOLTMETER FROM TUBE PRONG TO CHASSIS
 AND MAY VARY PLUS OR MINUS 10% OF VALUES
 GIVEN.
 GR. - GROUND.
 OPEN - NO CONNECTION. J.B. - JUNCTION BLOCK.

THE CROSLY CORP.

MODELS 449,459
Schematic, Socket, Trimmers
Chassis

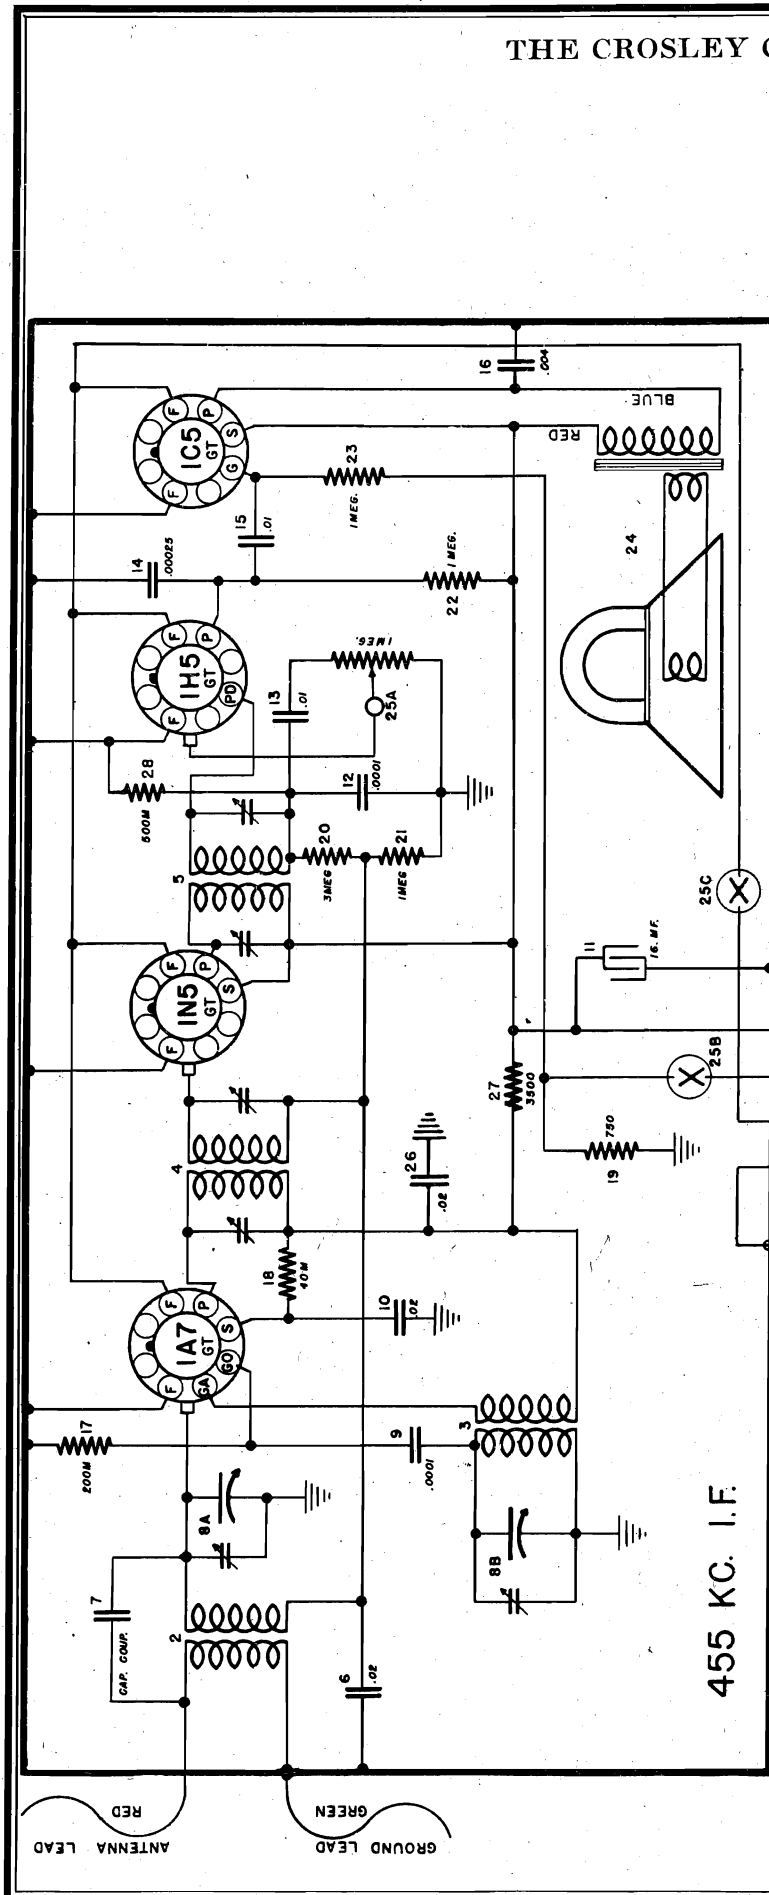

NOVEMBER, 1939

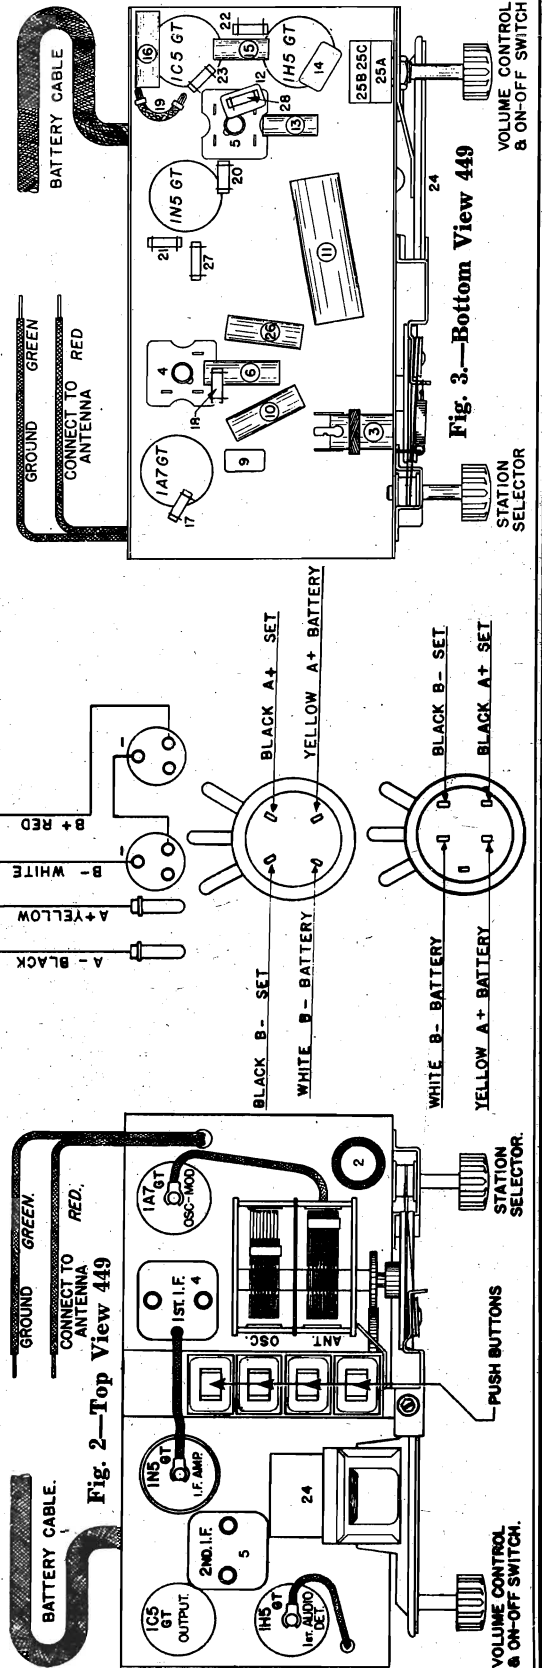

THE CROSLY CORP.

MODEL 468
Alignment, Rear View
MODELS 518, 6518
Voltage, Alignment

CHASSIS MODEL 468

ALIGNMENT PROCEDURE
CONNECTING OUTPUT METER

Connect the output meter across the "P" and "S" terminals of the 1G5G output tube. Be certain that the meter is protected from DC by connecting a condenser (.1 mfd. or larger—not electrolytic) in series with one of the leads.

1. Tuning the I-F Amplifier To 455 Kilocycles.
(a) Connect the output of the signal generator through a .02 mfd. condenser to the top cap of the 1A7C tube, leaving the tube's grid clip in place. Connect the ground lead from the signal generator to the "GNP" terminal of the receiver. **KEEP THE GENERATOR LEADS AS FAR AS POSSIBLE FROM THE GRID LEADS OF THE OTHER SCREEN GRID TUBES.**
(b) Set the station selector so that the tuning condenser plates are completely in mesh and turn the volume control knob to the right (ON).
(c) Set the signal generator to 455 kilocycles.
(d) Adjust both 2nd I-F trimmers (located through rear of chassis flange) for maximum reading on the output meter. (Fig. 3).
(e) Adjust both trimmers located on the 1st I-F transformer (right end) for maximum output. (Fig. 2).
(f) Check operations (d) and (e) for more accurate adjustments.

ALWAYS USE THE LOWEST SIGNAL GENERATOR OUTPUT THAT WILL GIVE A REASONABLE READING ON THE OUTPUT METER.
2. Aligning the R-F Amplifier.
When aligning the R-F amplifier the output lead from the signal generator should be connected through a .0002 mfd. condenser to the "ANT" terminal of the receiver.
(a) Set the signal generator to 1725 kilocycles.
(b) Open the condenser gang all the way.
(c) Adjust the "OSC" trimmer condenser on gang for maximum output.
(d) Set the signal generator to 1400 kilocycles.
(e) Tune the receiver to the generator signal for maximum output (approximately 140 on the dial).
(f) Adjust the "ANT" trimmer condenser on gang for maximum output. **DO NOT READJUST THE "OSC" TRIMMER AT 1400 KILOCYCLES.**
(g) Repeat operations (c) and (f) alternately until no further improvement in output can be obtained.
If any of the circuits have been adjusted it may be necessary to reset the push buttons.

SETTING THE PUSH BUTTONS

With a small screw driver or pen knife remove celluloid cover and the call letters. Insert screw driver in the hole in the front of the button and loosen the set screw a turn or two. With the manual tuning knob tune-in as ACCURATELY AS POSSIBLE the station for which the button is to be set. Then push the button all the way down and while you hold it in that position **SECURELY TIGHTEN** the set screw. Replace the call letter and call letter cover. Use same procedure in resetting or adjusting the rest of the push buttons.


MODELS 518 & 6518

ALIGNMENT PROCEDURE
CONNECTING OUTPUT METER

Connect the output meter to the plate and screen of the 6K6G output tube. Be certain that the meter is protected from D. C. by connecting a condenser (.1 mfd. or larger—not electrolytic) in series with one of the leads.

Tuning the I-F Amplifier To 455 Kilocycles.
(a) Connect the output of the signal generator through a .02 mfd. condenser to the top cap of the 6A8G tube, leaving the tube's grid lead in place. Connect the ground lead from the signal generator to the "GNP" terminal of the receiver. **KEEP THE GENERATOR LEADS AS FAR AS POSSIBLE FROM THE GRID LEADS OF THE OTHER SCREEN GRID TUBES.**
(b) Set the station selector so that the tuning condenser plates are completely out of mesh. Turn the volume control knob to the right (ON).
(c) Turn the band selector switch to the Broadcast Band.
(d) Set the signal generator to 455 kilocycles.
(e) Adjust both trimmers located on top of the 2nd I-F transformer for maximum output. (Item 5, Fig. 2).
(f) Adjust both trimmers located on top of the 1st I-F transformer for maximum output. (Item 4, Fig. 2).
(g) Check operations (e) and (f) for more accurate adjustments.

ALWAYS USE THE LOWEST SIGNAL GENERATOR OUTPUT THAT WILL GIVE A REASONABLE READING ON THE OUTPUT METER.
Aligning the R-F Amplifier.
When aligning the R-F amplifier the output lead from the signal generator is connected to the antenna (A) terminal of the receiver. For both bands a 100 mfd. condenser should be connected in series with the output lead of the signal generator.
(a) With the station selector adjusted so that the tuning condenser plates are completely out of mesh and adjust the "OSC" shunt trimmer so that the MINIMUM CAPACITY SIGNAL (C) is heard (it is not necessary that the receiver tune through this signal).
(b) Adjust the station selector so that the SHUNT ALIGNMENT signal coincides with maximum output. Then adjust the "ANT" shunt trimmer for maximum output. Readjust the station selector slightly so that the generator signal is tuned-in with maximum output and

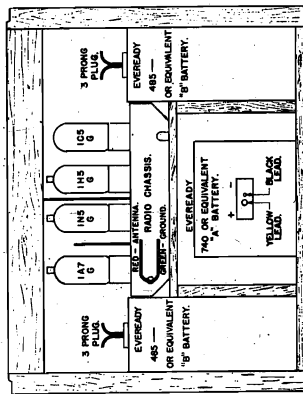

Rear View Model 468

CHASSIS MODELS 518 & 6518 (FOREIGN)

SPECIFICATIONS
These models are five-tube superheterodyne receivers designed for operation on A.C. circuits as specified on the Model Label. The 518 and 6518 chassis are identical electrically but differ slightly in mechanical parts due to various cabinet combinations.

CIRCUIT DESCRIPTION

Five glass (octal) tubes are used and their functions are as follows: one 6A8G as oscillator-modulator, one 6U7C as I-F amplifier, one 6O7C as diode detector, A. V. C., and first audio amplifier, one 6K6G as power output and one 5Y3G as a half-wave rectifier. The bias for the 6K6G is obtained from the drop across item .29 a 375 ohm resistor which is in series with the speaker field (700 ohms) that is in the negative leg of the power supply.

SOCKET VOLTAGES

The tube socket voltages are measured from the tube socket contacts to the chassis with a 1000 ohm per volt, 500-volt D. C. voltmeter (except filaments) with receiver in operating condition and no signal input. The filament voltages should be measured with an accurate low range A. C. voltmeter (approximately 0-10 volts). Readings may vary plus or minus 10% of values given.

check the adjustment of the "ANT" trimmer. **DO NOT READJUST THE OSCILLATOR TRIMMER.**
NOTE: When shunt aligning the Short Wave Band care should be exercised so that the circuits will be aligned on the correct frequency rather than on the image frequency which is approximately 910 kilocycles less than the fundamental. To check on this, increase the output of the signal generator 10 times, or more, and try to tune-in the signal both at the generator frequency as indicated on the station selector dial and at approximately 910 kilocycles less than the correct frequency. If the circuits have been properly aligned the signal can be tuned-in at both positions but much stronger at the correct frequency.

WAVE TRAP

Some chassis of this model are equipped with a wave trap for the purpose of eliminating interference from code stations which operate on a frequency of approximately 455 kilocycles. This assembly is located on the underneath side of the chassis and consists of a coil, a fixed condenser and a trimmer condenser as illustrated by dotted lines in the Wiring Diagram (item 42).

The wave trap should not be adjusted until all other adjustments have been made. To make the adjustment feed a 455 kilocycle signal from the signal generator through a 100 mfd. condenser into the antenna terminal of the receiver. With the band selector switch turned to the Broadcast Band position, the gang condenser open and the volume control full on, adjust the trimmer condenser on the wave trap for MINIMUM output.

Should the interfering station be operating on a frequency of slightly more or less than 455 kilocycles, the exact frequency should be determined with the aid of the signal generator. Then, instead of feeding a 455 kilocycle signal into the receiver the exact frequency of the interfering signal should be used. If it is not possible to determine the exact frequency of the interfering signal the antenna may be attached to the receiver and the receiver tuned to the position where the interfering signal is most noticeable. Then adjust the wave trap for minimum interference.


TUBE SOCKET VOLTAGE READINGS

Tube	Function	H	P	S	K	G	Ca	Co
6A8G	Oscillator-Modulator	6.3	165	95	—	—	165	—
6U7C	I-F Amplifier	6.3	165	95	—	—	—	—
6O7C	Det.—A. V. C. 1st A-F	6.3	72	—	—	—	—	—
6K6G	Power Output	6.3	155	165	—	—	—	—
5Y3G	Rectifier	2.2	—	—	—	-14.5	—	—



Voltage drop across speaker field 25 volts.
Maximum power output approximately 2 watts.
Power consumption at 117.5 volts approximately 37 watts.

MODELS 518, 6518
Schematic, Socket
Trimmers, Chassis
Parts



THE CROSLEY CORP.

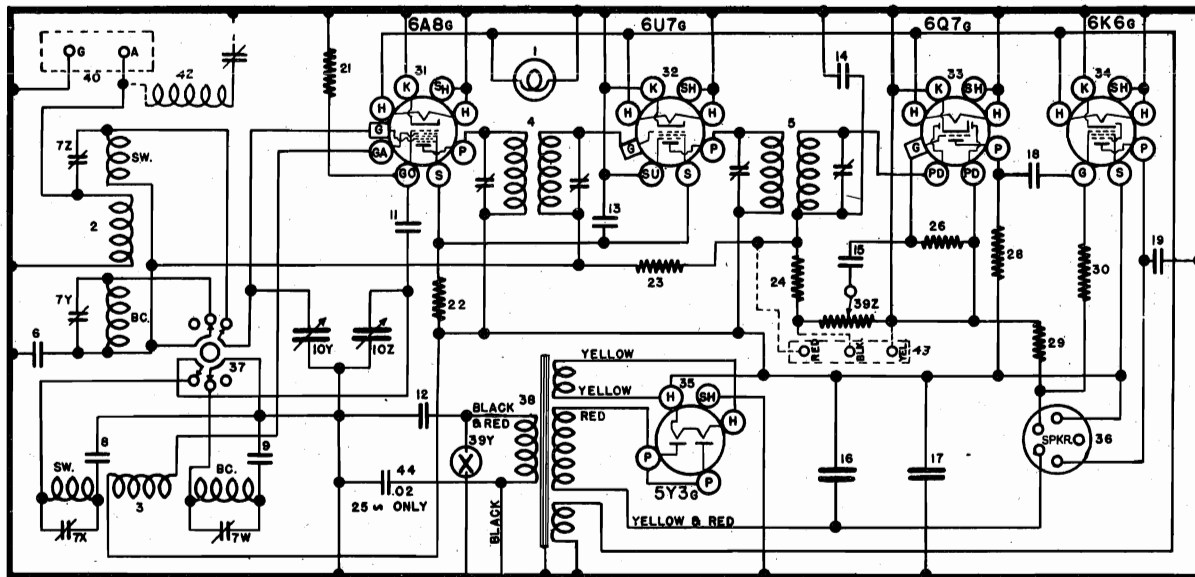

- 1 Dial Light, 6-8 Volt
- 2 Dial Light Socket Assembly
- 3 Antenna Coil, B. C. and S. W.
- 4 Oscillator Coil, B. C. and S. W.
- 5 1st I. F. Transformer
- 6 2nd I. F. Transformer
- 7Z Condenser, .02 Mf. 160 V.
- 7Y } Trimmer Condenser (S. W. Antenna)
- 7X } (B. C. Antenna)
- 7W } (S. W. Osc.)
- 8 Condenser, .0014 Mf. Molded
- 9 Condenser, .0004 Mf. Molded
- 10Y } 2 Section Gang Condenser (Ant.)
- 10Z } (Osc.)
- Dial Glass
- Dial Glass (Polished Metal)
- Dial Glass Clip, L. H.
- Dial Glass Clip, R. H.
- Dial Glass Cushion
- Dial Pointer (White Celluloid)
- Dial Hand Guide
- 37 1/8"-No. 6 x 32 R. H. Screw for Dial Hand Guide
- 38 Felt Strip
- 39Z } (Volume Control) 6518
- 39Y } (On-Off Switch)
- 39Z } (Volume Control, 1 Megohm) 518
- 39Y } (On-Off Switch)
- 40 Terminal Strip, A-G
- 41 Speaker, Spec. S-5274-J-5
- 37 Shaft Bracket
- 38 1/8"-No. 8 P. K. Screws for Drive Shaft Bracket
- 39Z } (Volume Control) 6518
- 39Y } (On-Off Switch)
- 39Z } (Volume Control, 1 Megohm) 518
- 39Y } (On-Off Switch)
- 40 Terminal Strip, A-G
- 41 Speaker, Spec. S-5274-J-5
- 11 Condenser, .00005 Mf. Molded
- 12 Condenser, .01 Mf. 400 V.
- 13 Condenser, .02 Mf. 200 V.
- 14 Condenser, .00025 Mf. Molded
- 15 Condenser, .006 Mf. 200 V.
- 16 Condenser, 16 Mf. 250 V. Elect. (60 Cycle)
- 17 Condenser, 30 Mf. 250 V. Elect. (25 Cycle only)
- 18 Condenser, 16 Mf. 250 V. Elect.
- 19 Condenser, .02 Mf. 200 V.
- 20 Condenser, .006 Mf. 400 V.
- 21 Power Cord
- 22 Resistor, 40,000 Ohms 1/4 W. Ins.
- 23 Resistor, 20,000 Ohms 1/4 W. Carb.
- 24 Resistor, 3 Megohms 1/4 W. Carb.
- 25 Resistor, 100,000 Ohms 1/4 W. Carb.
- 26 Resistor, 60 Ohms 1/2 W. Flex.
- 27 Resistor, 3 Megohms 1/4 W. Carb.
- 28 Resistor, 40 Ohms 3/4 W. Flex.
- 29 Resistor, 300,000 Ohms 1/4 W. Carb.
- 30 Resistor, 275 Ohms 1 W. Flex.
- 31 Resistor, 500,000 Ohms 1/4 W. Carb.
- 32 } 8 Prong Socket
- 33 } (Speaker)
- 34 } Tube, Shield
- 35 } (Speaker)
- 36 } Tube, Shield

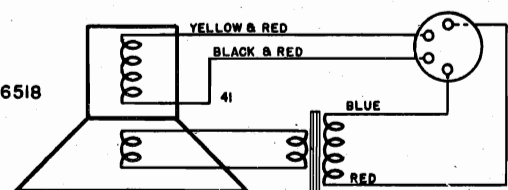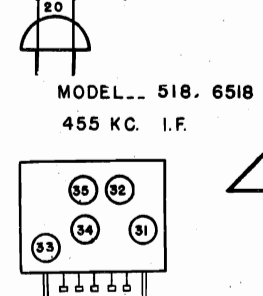

- Band Change Switch
- Power Transformer, 110 V. 25 Cycle
- Power Transformer, 220 V. 25 Cycle
- Power Transformer, Universal
- (Volume Control) 6518
- (On-Off Switch)
- (Volume Control, 1 Megohm) 518
- (On-Off Switch)
- Terminal Strip, A-G
- Speaker, Spec. S-5274-J-5
- Speaker Cone Assy.
- Cardboard Ring
- Output Transformer
- Push Button Assembly
- Key Assembly (6518)
- Key Assembly (518)
- Key Clip
- 1 1/8"-No. 6 x 32 Screw (Clamp)
- Spring (Key Return)
- Adjusting Clip
- 1/8"-No. 8 P. K. Screw (Clip Mtg.)
- Key Plate (Rear Guide)
- Rocker Plate Assembly
- 1/2"-No. 6 x 40 Fil. Hed. Screw (Rocker Plate Bearing)
- Push Button (Black)
- Push Button (Brown)
- Celluloid Cover
- Call Letter Sheet (U. S. A. Stations)
- Knob Tuning (Black)
- Knob Tuning (Brown)
- Knob, Vol. and Switch (Black)
- Knob, Vol. and Switch (Brown)
- 8A Cabinet (Black)
- 8A Cabinet (Brown)
- Wave Trap
- Phono Terminal
- Condenser, .02 Mf. 400 V. (25 Cycle only)
- Speaker Plug Clamp
- Call Letter Sheet (European)
- Escutcheon (6518 only)
- Screw (Escutcheon Mtg.)
- Cabinet (6518)
- Knob (6518 only) (2 Req.)
- Knob (6518) (Band Switch)

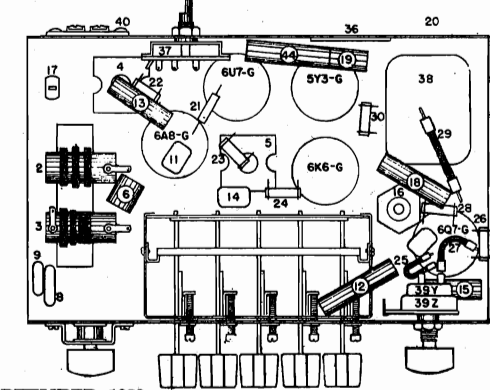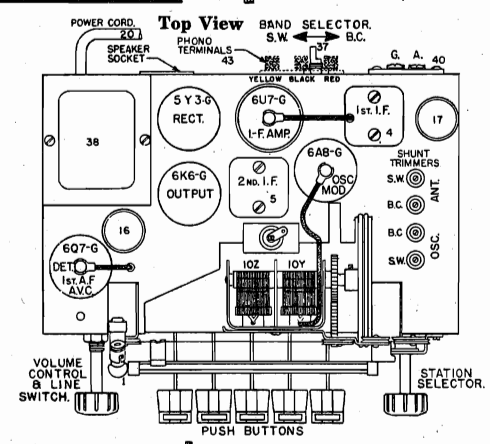

CIRCUIT CHANGES

SEPTEMBER, 1939

Item 22 was a 30,000 ohm resistor. Item 25, a 60 ohm 1/2 watt flexible resistor added from 607 cathode to ground. Item 26 should be 3 megohm resistor not 11 megs. Item 27, a 40 ohm 1/4 watt resistor should connect from the junction of items 26 and 29 at one end to low side of volume control. Item 29, a 275 resistor was a 375 ohm resistor.

Bottom View

MODEL 549

Voltage, Socket

Trimmers, Alignment

THE CROSLEY CORP.

The circuit is a conventional superheterodyne with a tuned loop antenna stage. Four 1.4 volt tubes and one 117Z6GT tube are employed as follows: one 1A7GT as oscillator-modulator, one 1N5GT as 455 kc. I-F amplifier, one 1H5GT as diode detector, A.V.C. and first audio, one 1A5GT as power output and the 117Z6GT as rectifier (used only when plugged into 110 volt power circuits).

The filaments of the 1.4 volt tubes are connected in series and have plate current compensating resistors one, item 36, a 250 ohm resistor across the 1A7GT filament and the other, item 37, a 1,400 ohm resistor from the negative leg of the 1A5GT to chassis.

When used on 110 volt power circuits one half the 117Z6GT supplies the filament voltage and the other half the B voltage. The rectified voltage for the filament string is well filtered by the following, item 35, which is a 7½ watt 110 volt miniature lamp

and does triple duty—, 1, regulates the voltage—2, acts as a filter—3, as an ON-OFF indicator; item 28 a 375 ohm resistor and item 32A, the relay coil which serves as a choke and their associated electrolytic condensers, i.e., item 15, 16 mf.—item 38, 16 mf. and item 16, 125 mf. The above mentioned miniature lamp (item 35) should always be replaced with an exact duplicate should replacement become necessary.

The "b" voltage is filtered by means of item 25, a 2,600 ohm resistor and item 11—a 16 mf. electrolytic and one section of item 15 (twin electrolytic) 16 mf. condenser.

The relay automatically disconnects the batteries from the circuit when the receiver is operated on 110 volt circuits.

VOLTAGE READINGS—WITH CR649 BATTERY PACK

Tube	Tube Socket Function	PIN NUMBER							
		No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 7	No. 8
1A7GT	Oscillator-Modulator	0	1.5	70	40	Neg.	70	0	0
1N5GT	I-F Amplifier	0	4.5	70	70	1.5	—	3	0
1H5GT	Det, AVC, 1st Audio	0	3.0	11	11	—	0	1.5	6
1A5GT	Output	0	6.0	68	70	—	6	4.5	1.5
117Z6GT	Rectifier	0	0	0	68	0	0	0	6.0

Power Output approximately 100 M. W.

"A" Battery Drain 50 M. A.

"B" Battery Drain 5.2 M. A.

VOLTAGE READINGS—@ 117.5 VOLT LINE (A.C.)

Tube	Tube Socket Function	PIN NUMBER							
		No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 7	No. 8
1A7GT	Oscillator-Modulator	0	1.4	102	56	-3	102	0	0
1N5GT	I-F Amplifier	0	4.5	102	102	1.5	—	3.0	0
1H5GT	Det, AVC, 1st Audio	0	3.0	17	17	—	0	1.5	45
1A5GT	Output	0	6.0	98	102	—	28	4.5	1.5
117Z6GT	Rectifier	58 5 A.C.	117.5 A.C.	117.5 A.C.	142	117.5 A.C.	0	0	126

Power Output approximately 200 M. W.

Watts @ 117.5 volts 20 watts.

Above readings will be approximately 10% less when checked on D.C. power circuit.

ALIGNMENT PROCEDURE

The chassis of this receiver is connected to one side of the power supply and for this reason all test equipment should be thoroughly insulated in order that the power supply will not become short circuited while aligning the receiver.

CONNECTING OUTPUT METER

Connect one terminal of the output meter to the plate and the other terminal to the screen of the 1A5GT output tube. Be certain that the meter is protected from D.C. by connecting a condenser (.1 mfd. or larger—not electrolytic) in series with one of the leads.

Tuning the I-F Amplifier to 455 Kilocycles

(a) Connect the output of the signal generator through a .02 mf. condenser to the grid cap of the 1A7GT oscillator-modulator tube leaving the tubes' grid cap in place. Do not use a ground return from the signal generator unless it is found to be absolutely necessary. If it is found to be necessary, a small condenser (approximately .001 mfd.) should be connected in series with the ground terminal of the signal generator and the receiver chassis. KEEP THE GENERATOR LEADS AS FAR AS POSSIBLE FROM THE GRID LEADS OF THE OTHER SCREEN GRID TUBES.

(b) Set the station selector so that the plates of the condenser gang are completely out of mesh and turn the volume control to the right (ON).

(c) Set the signal generator to 455 kilocycles.

(d) Adjust the 2nd I-F trimmer condensers for maximum reading on the output meter.

(e) Adjust the trimmer condensers located on the 1st I-F transformer for maximum output.

(f) Repeat operations (d) and (e) for more accurate adjustments.

ALWAYS USE THE LOWEST SIGNAL GENERATOR OUTPUT THAT WILL GIVE A REASONABLE READING ON THE OUTPUT METER.

Aligning the R-F Amplifier

When aligning the R-F amplifier the output lead from the signal generator should be connected through a .0001 mf. condenser to "A" terminal and the ground lead to the "G" terminal on the back of the cabinet.

It is essential that the following alignment be made with the receiver in the cabinet and the battery and back in position. Trimmer adjustments may be made on the two luggage type carrying cases through the two holes in the top, beneath the carrying handle. On the walnut cabinet model the oscillator will have to be aligned before placing chassis in the cabinet and then adjust the antenna trimmer provided on the back.

Before aligning receiver check the position of the pointer by opening gang all the way, the pointer should then split the 1600 kilocycle calibration point.

(a) Set signal generator to 1400 kilocycles.

(b) Tune gang to 140 on the dial, then adjust oscillator trimmer (rear section of gang) for maximum output.

(c) Adjust antenna trimmer (front section of gang) for maximum output.

RELAY

The receiver, when plugged into 110 volt circuit, will operate on the batteries until rectifier warms up and trips the relay. When relay trips there should be no decrease or dead spot in output as rectifier should be warmed up sufficiently to carry load and give a slight increase in output due to higher plate voltage available.

The relay is insulated from the chassis and care should be exercised when probing so as not to short it.

In earlier models the relays have three sets of contacts and the single side must make contact at all times. The double side must make contact when batteries are used and both contacts (double contact side) must break when operated on 110 volt circuits. Later models the single contact side was omitted and a flexible braid connection used instead.

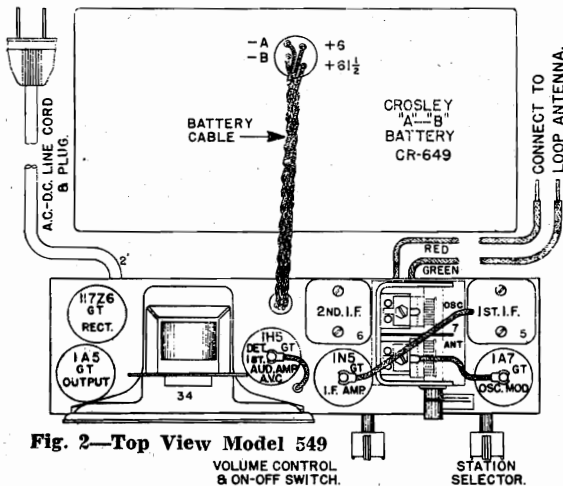



Fig. 2—Top View Model 549

MODEL 599
Schematic, Socket

THE CROSLEY CORP.

Trimmers, Chassis
Alignment, Voltage



Power output approximately 2 watts. Drop across field 28 volts.
Power consumption at 117.5 volts line 45 watts (A.C.).
All readings except filaments will be approximately 10% lower on 117.5 D. C.

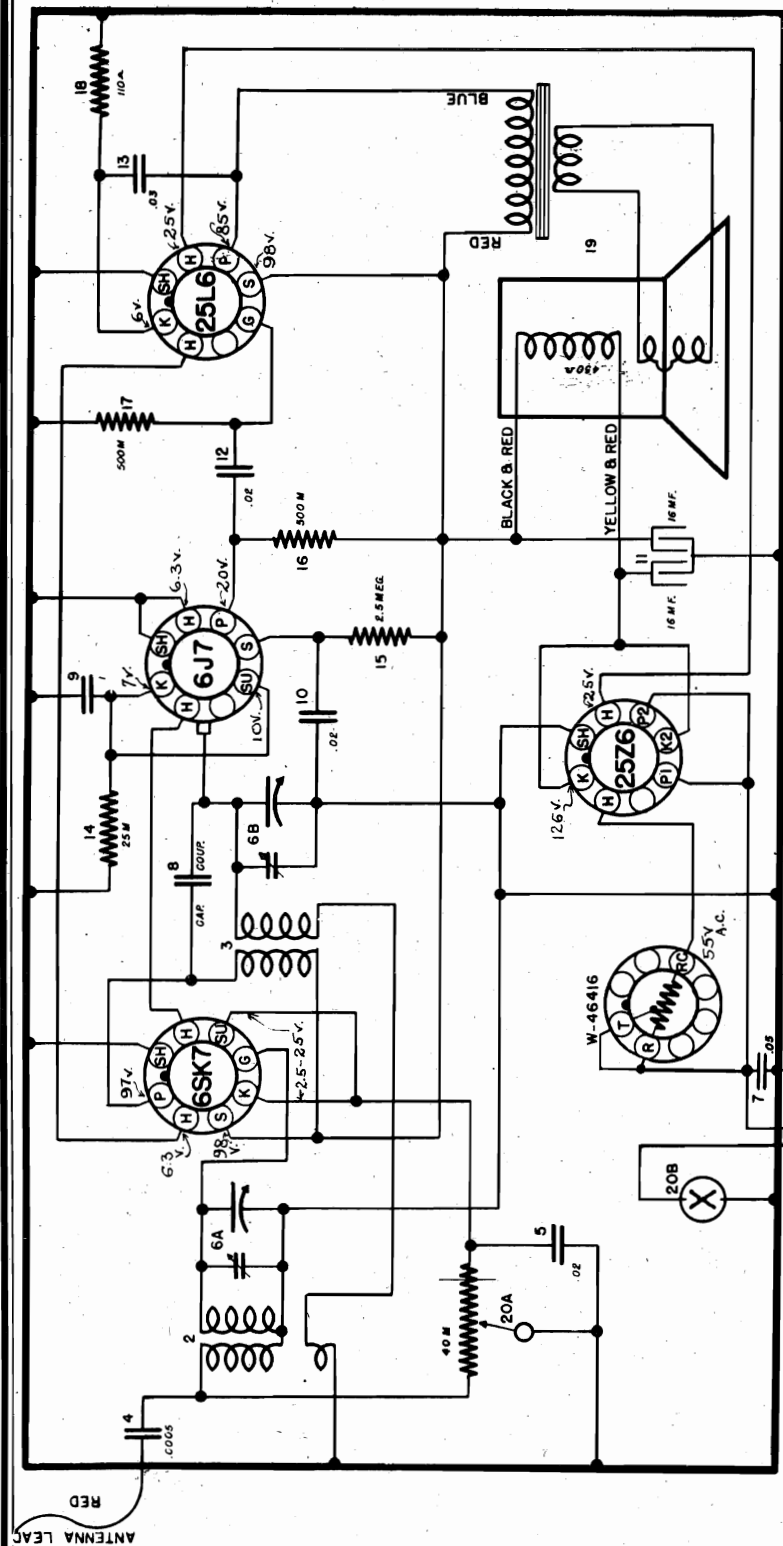

MODEL 599
SEPTEMBER, 1939

ALIGNMENT PROCEDURE

- (a) Connect the output lead of the signal generator through a .0001 mf. condenser to the antenna lead on the receiver. The ground lead of the generator should be connected through a .001 mf. condenser to the chassis.
 - (b) Open the gang condenser all the way.
 - (c) Set the generator to 1725 kilocycles.
 - (d) Adjust the trimmer condensers on the gang until the 1725 kc. signal is heard. The gang does not have to tune through this signal.
 - (e) Set the generator to 1400 kc.
 - (f) Tune the set to the 1400 kc. signal, then alternately adjust the trimmers on the gang until no further improvement can be noticed on the output meter.
- NOTE: Always use the lowest signal generator output that will give a reasonable indication on the output meter.
Keep the two grid leads as far as possible from each other.

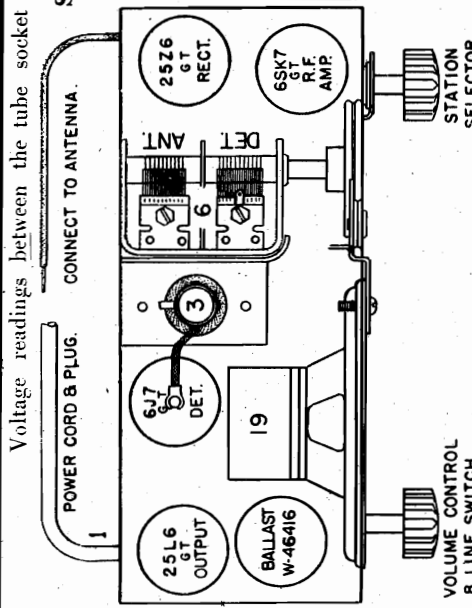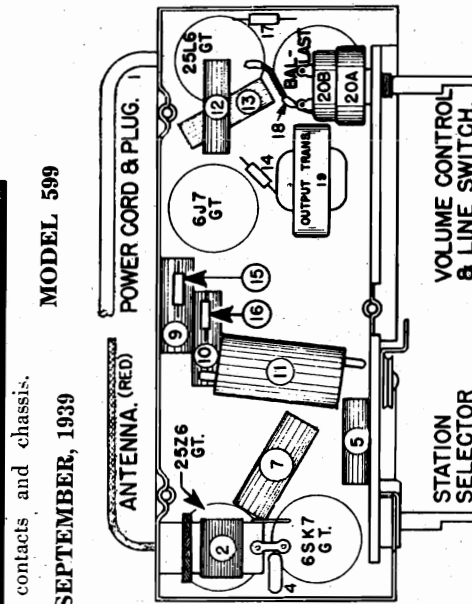

MODEL 639
Socket, Trimmers
Phono Assembly

THE CROSLEY CORP.

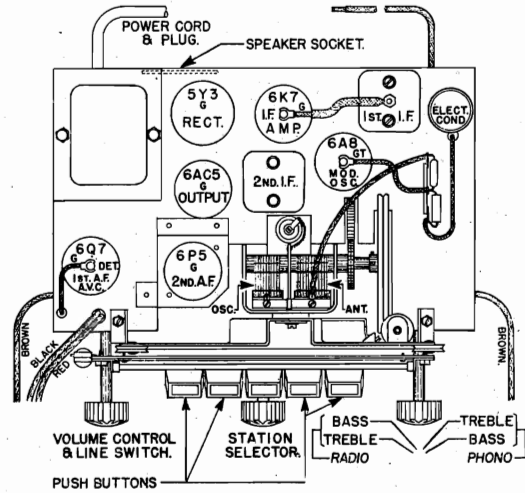
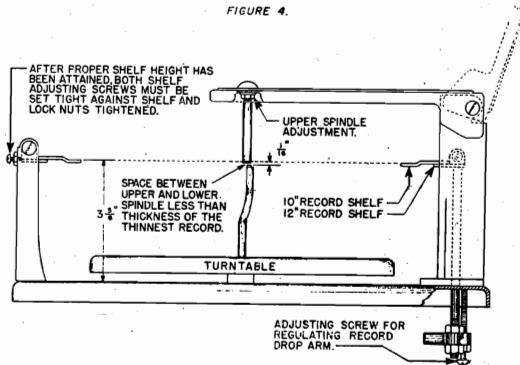
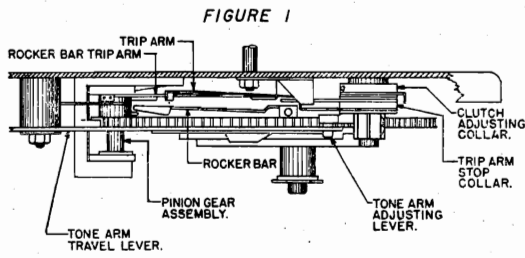


Fig. 2—Top View Model 639

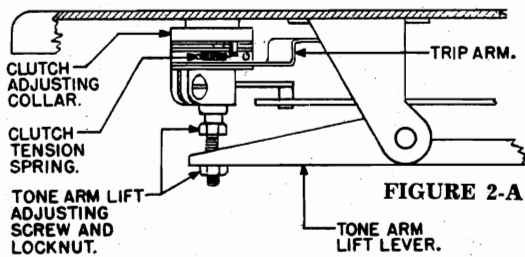
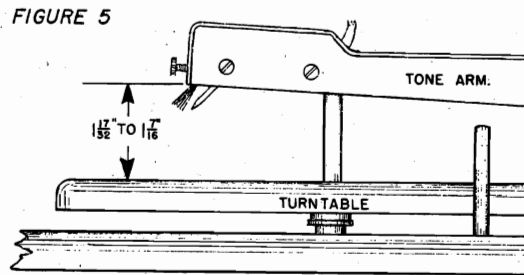


FIGURE 2-A

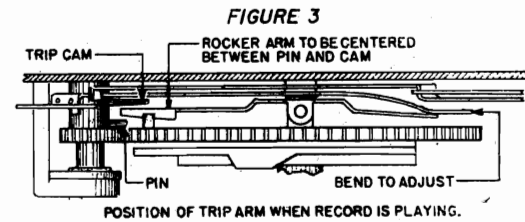


FIGURE 3


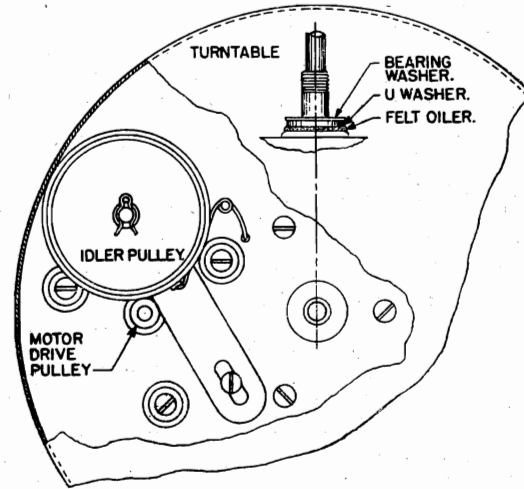


FIGURE 6

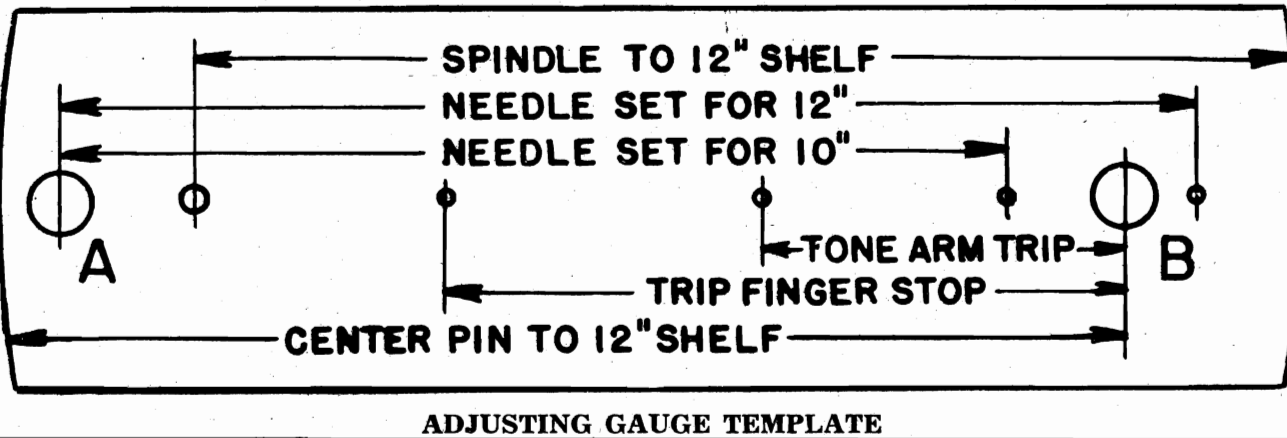

ADJUSTING GAUGE TEMPLATE

THE CROSLY CORP.

MODEL 639 Alignment Record Changer Data

right a fraction of an inch. Tighten set screw. Check operation.

- Records Do Not Drop.
- Record hole tight or record warped.
- Shelf height not correct. To adjust see Fig. 4 for correct height; adjust for 10" records first.
- Spindles may not be in correct relation. See Fig. 5 for correct relation.
- Record drop cam roller out of adjustment. Set correct shelf height (10" shelf) by loosening lock nut and turning screw; tighten locknut.
- Drops More Than One Record.**
 - Warped record.
 - Spindle alignment and etc. Same procedure as listed under 5.
 - Tone Arm Drags On Record.**
 - Too many records on the turntable.
 - Records may be thicker than average or warped.
 - Needle too long or not properly seated.
 - Tone arm lift adjusting screw loose or out of adjustment.

To check the tone arm for correct lift, rotate turntable (to center) and push tone arm down in order to actuate trip. Turn tone arm slowly until reaches maximum height and starts to travel toward tone arm rest, then stop when the arm is approximately one inch from edge of turntable. Check the height of the tone arm from the surface of the turntable as indicated in Figure 5. From the lower edge of the tone arm to the top of the turntable the distance should be 1 1/2 inches. Loosen locknut and adjust the tone arm lift screw (Fig. 2A) loosely. Loosen locknut and adjust screw until arm is within above tolerance, then tighten locknut.

SOCKET VOLTAGES

The tube socket voltages are measured from the tube socket contacts to the chassis with a 1000 ohm per volt, 500-volt D. C. voltmeter (except filaments) with receiver in operating condition and no signal input. The filament voltages should be measured with an accurate low range A. C. voltmeter (approximately 0.10 volts). Readings may vary plus or minus 10% of values given.

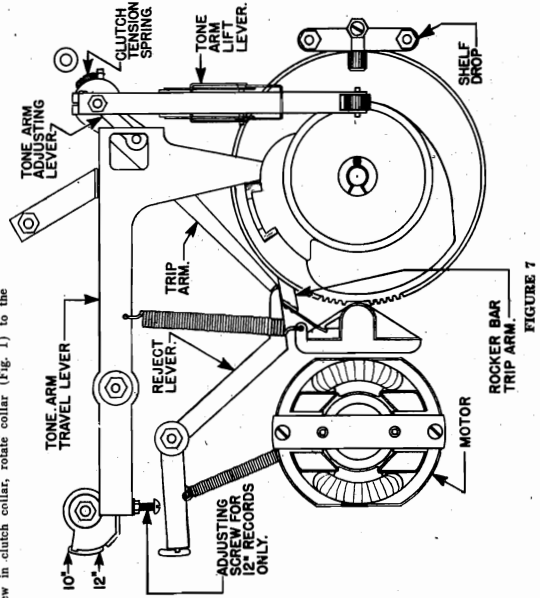


FIGURE 7

the center of the record, sufficient torque is developed to cause the trip arm to drop. The trip arm is held in the up position by a spring. To loosen the special set screw in the collar nearest the base of the changer, see Fig. 1. Loosen set screw and turn collar a fraction of an inch to the left (counter clockwise) to loosen set screw. Check and repeat until record plays to end.

- Does Not Trip After Record Is Finished.**
 - Center groove on record does not have sufficient pitch to develop enough torque to actuate clutch. This may result from improperly cut trip groove in record or loose clutch setting.
 - It may be possible that the trip arm may have jumped to the wrong side of the rocker bar trip arm. See Fig. 7. It should be on the same side as reject arm.
 - To check the trip action adjustment, place the gauge (hole marked B) on the end of the TONE ARM TRIP (1/2" hole) or collar. When in this position the cam on the center pinion shaft should be pointing toward tone arm. With cam as stated, the starting lever should be touching cam when cam and starting lever are in this position. The tone arm tripping lever should be in contact with the starting lever. Likewise the rocker bar (Fig. 3) [bar which engages pinion gear] must be in contact (beneath) the end of the starting lever (Fig. 3). The end of starting lever may be bent sufficiently to make contact. The end of starting lever must not be bent any more than that which is necessary to center the other end of the rocker bar between the cam and the pin on the small pinion gear (Fig. 3) (running position).

After the above has been checked and adjusted the tone arm should be checked and adjusted to center. The distance between the center of the tone arm rest and the center of the spindle is about 3 3/4 inches from the center line of the needle. This may be adjusted by loosening the Bristol set screw in tripping lever stop collar (Fig. 1) and turning collar a fraction of an inch to the left. Check operation after tightening set screw.

- The clutch may be too loose, thereby not developing sufficient torque. To adjust loosen Bristol set screw in clutch collar, rotate collar (Fig. 1) to the

signal the antenna may be attached to the receiver and the receiver tuned to the position where the interfering signal is most noticeable. Then adjust the wave trap for minimum interference.

AUTOMATIC RECORD CHANGER

This record changer is mounted on a heavy metal base which is rubber mounted to the cabinet. The turntable is rim driven and in turn drives the automatic changing mechanism. Each changer is thoroughly tested before it leaves the factory and should not need any further adjustments. It is possible that adjustments in settings may have to be made. Under the following headings are listed effects, possible cause and method of correcting.

1. Make sure that all the packing has been removed around motor, turntable, etc.
2. See that the changer unit does not touch the cabinet, it must float on the four rubber mountings. The four screws which mount base to cabinet should be removed (AFTER RECEIVER IS IN POSITION). ALWAYS USE A GOOD NEEDLE AND SEE THAT IT IS SEATED AND THAT THE NEEDLE SCREW IS TIGHT.
3. ALWAYS USE A GOOD NEEDLE AND SEE THAT IT IS SEATED AND THAT THE NEEDLE SCREW IS TIGHT.

1. Motor Will Not Start.

1. Plug not in receptacle, fuse blown, defective outlet.
2. Defective switch (Phono-Radio), open motor winding or loosened in an overlaid position, i. e., record drop cam and cam roller at point where roller is just about to LOWER shaft. Turn the turntable (clockwise) two or three revolutions by hand.
- NOTE: The turntable screws down on the record spindle. To remove, turn in clockwise direction by hand until the curve on the spindle is toward the load. Then lock small drive pinion in that position. Spindle must NOT turn. Unswear turntable (counter clockwise).
4. Friction drive pulley slack, friction drive pulley not touching turntable rim or bushing on motor shaft not touching friction drive pulley. Oil on friction drive pulley.
5. Center pinion shaft stuck or tight. Free and oil. When replacing be very careful so as not to bend or spring the friction drive pulley which will have to be pushed under the edge while screwing the turntable in position.

2. Tone Arm Does Not Drop in Correct Position.

1. 10 inch or 12 inch lever not in correct position for record being played. Check setting of lever.
 2. Tone arm drop not set correctly to meet record variations. Records may vary as much as 1/2-inch in diameter. Adjust for average conditions.
- To adjust tone arm drop, place gauge on turntable large hole (A) and adjust tone arm rest in tone arm hole marked "NEEDLE SET FOR 10". Throw 10" record lever in correct position. The tone arm adjusting lever, see Fig. 7, must have its stud in contact with the tone arm travel lever, this lever must be in contact with the cast cam and gear. Loosen screw in adjusting arm and adjust lever, then tighten in correct position.
- To adjust for 12-inch records, throw lever to left place tone arm in position marked "NEEDLE SET FOR 12". Loosen lock nut on tone arm travel lever and adjust screw to stop. Tighten lock nut and check. Repeat until needle drops in correct position.
- For the above adjustments use a small center pin instead of a needle. This prevents any scratching or marring of records or turntable.

3. Trips Before Record Is Finished.

This condition invariably is caused by the clutch being too tight. This clutch is the friction type and when the pickup moves at an increased speed toward

ALIGNMENT PROCEDURE

Tuning I-F Amplifier To 455 Kilocycles.

- Connect the output of the signal generator through 100 ohm condenser to the top cap of the 6AC6 tube, leaving the tube's grid lead in place. Connect the ground lead from the signal generator to the ground terminal of the receiver. KEEP THE GENERATOR LEADS AS FAR AS POSSIBLE FROM THE GRID LEADS OF THE OTHER SCREEN GRID TUBES.
- Set the station selector so that the tuning condenser pointer knob is clearly on the right (ON).
- Set the signal trimmers located on top of the 2nd I-F transformer for maximum output. (Item 6, Fig. 2).
- Adjust both trimmers located on top of the 1st I-F transformer for maximum output. (Item 5, Fig. 2).
- Check operations (d) and (e) for more accuracy.

Aligning R. F. Amplifier.

When aligning the R. F. amplifier the output lead from the signal generator is connected to the antenna lead of the receiver, a 100 mmf. condenser should be connected in series with the output lead of the signal generator.

- With the station selector adjusted so that the tuning condenser pointer is completely on the right (ON), adjust the MINIMUM CAPACITY SIGNAL V (C) in heard (it is not necessary that the receiver tune through this signal).
- Adjust the station selector so that the SHUNT ALIGNMENT signal is tuned-in with maximum output. Then adjust the "ANT" shunt trimmer for maximum output. Readjust the station selector slightly so that the generator signal is tuned-in with maximum output. READJUST THE OSCILLATOR TRIMMER. DO NOT adjust the output of the generator. If any of the circuits have been re-adjusted it may be necessary to reset the push buttons.

SETTING THE PUSH BUTTONS

Remove push buttons and with a small screw driver loosen the set screws a turn or two. With the manual knob, tune in as ACCURATELY AS POSSIBLE the station whose call letters were in the button or that station for which the button is to be set. Then push the key all the way down and while you hold it in that position SECURELY TIGHTEN the set screw.

(C) SIGNAL INPUT FREQUENCIES

Minimum Capacity Signal	1725 Kilocycles
I-F Alignment Signal	455 Kilocycles
Shunt Alignment Signal	1,400 Kilocycles

WAVE TRAP


Some chassis of this model are equipped with a wave trap for the purpose of reducing interference from stations which operate on a frequency of approximately 455 kilocycles. This assembly is located on the underside side of the chassis and consists of a coil and a trimmer condenser as illustrated by dotted lines in the Wiring Diagram (Item 31).

The wave trap should not be adjusted until all other adjustments have been made. To adjust, turn the 455 kilocycle trimmer for the signal generator through 100 mmf. condenser on the antenna terminal of the receiver. With the band selector switch turned to the Broadcast Band position, the gang connected to the Broadcast Band position, the gang condenser closed and the volume control full on, adjust the trimmer condenser on the wave trap for MINIMUM output.


Should the interfering station be operating on a frequency of slightly more or less than 455 kilocycles, the wave trap may be adjusted with the aid of the signal generator. Then, instead of feeding a 455 kilocycle signal into the receiver, the exact frequency of the interfering signal should be used. If it is not possible to determine the exact frequency of the interfering

MODEL 668
Schematic, Voltage
Socket, Trimmers
Chassis


THE CROSLLEY CORP

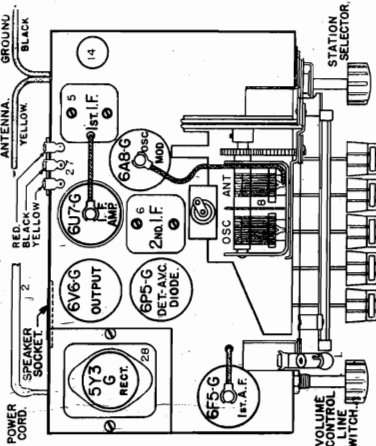

Top View Model 668

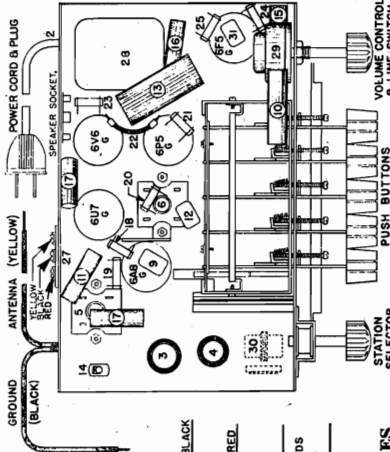

Bottom View Model 668

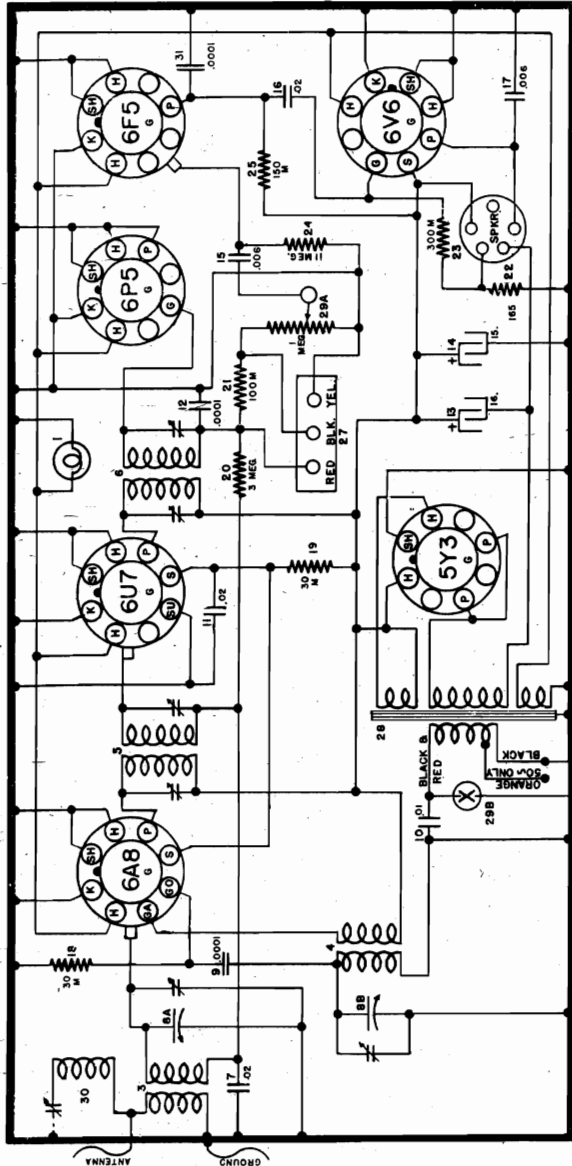

MODEL -- 668
455 K.C. I.F.

ALIGNMENT PROCEDURE
CONNECTING OUTPUT METER

Connect the output meter to the plate and screen of the 6V6G Output tube. Be certain that the meter is protected from D. C. by connecting a condenser (.1 mfd. or larger—not electrolytic) in series with one of the leads.

Tuning the I-F Amplifier To 455 Kilocycles.

(a) Connect the output of the signal generator through a .02 mfd. condenser to the top cap of the 6A8C tube, leaving the tube's grid lead in place. Connect the ground lead from the signal generator to the ground terminal of the receiver. **KEEP THE GENERATOR LEADS AS FAR AS POSSIBLE FROM THE GRID LEADS OF THE OTHER SCREEN GRID TUBES.**

(b) Set the station selector so that the tuning condenser plates are completely out of mesh. Turn the volume control knob to the right (ON).
(c) Set the signal generator to 455 kilocycles.
(d) Adjust both trimmers located on top of the 2nd I-F transformer for maximum output. (Item 6, Fig. 2).
(e) Adjust both trimmers located on top of the 1st I-F transformer for maximum output. (Item 5, Fig. 2).
(f) Check operations (d) and (e) for more accurate adjustment.

ALWAYS USE THE LOWEST SIGNAL GENERA

TOR OUTPUT THAT WILL GIVE A REASONABLE READING ON THE OUTPUT METER.

Aligning the R-F Amplifier.

When aligning the R-F amplifier the output lead from the signal generator is connected to the antenna lead of the receiver, a 100 mmf. condenser should be connected in series with the output lead of the signal generator.

(a) With the station selector adjusted so that the tuning condenser plates are completely out of mesh adjust the "OSC" shunt trimmer so that the **MINIMUM CAPACITY SIGNAL** (C) is heard (it is not necessary that the receiver tune through this signal).

(b) Adjust the station selector so that the **SHUNT ALIGNMENT** signal is tuned-in with maximum output. Then adjust the "ANT" shunt trimmer for maximum output. Readjust the station selector slightly so that the generator signal is tuned-in with maximum output and check the adjustment of the "ANT" trimmer. **DO NOT READJUST THE OSCILLATOR TRIMMER.**

If any of the circuits have been re-adjusted it may be necessary to reset the push buttons.

SOCKET VOLTAGES

The tube socket voltages are measured from the socket contacts to the chassis with a 1000 ohm per volt, 500-volt D. C. voltmeter (except filaments) with receiver in operating condition and no signal input. The filament voltages should be measured with an accurate low range A. C. voltmeter (approximately 0-10 volts). Readings may vary plus or minus 10% of values given.

TUBE SOCKET VOLTAGE READINGS

Tube	Function	H	P	S	K	G	Ga	Co
6A8G	Oscillator-Modulator	6.3	186	70	—	—	186	-15
6U7G	I-F Amplifier	6.3	186	70	—	—	—	—
6F5G	Detector-A. V. C.	6.3	93	—	—	—	—	—
6V6G	St A. Amplifier	6.3	180	186	—	—	—	—
6F6G	Power Output	6.3	—	—	—	—	—	—
5Y3G	Rectifier	—	—	—	—	—	—	-9.5

Voltage drop across speaker field 50 volts, using 396-BP-12 speaker.
Maximum power output approximately 3 watts.
Power consumption at 117.5 volts approximately 63 watts with phono operating.

SEPTEMBER, 1939

MODELS 649, 5648
Voltage, Chassis
Socket, Trimmers
Alignment, Tuner

THE CROSLLEY CORP.

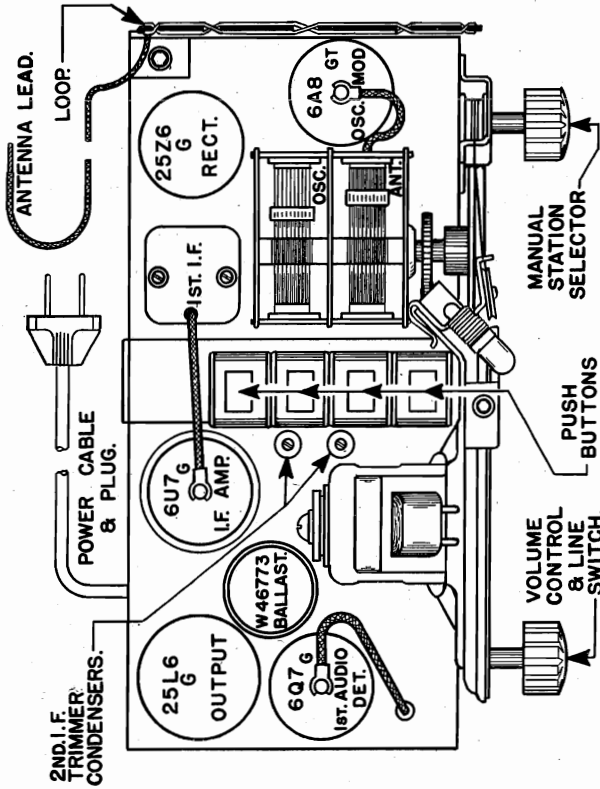


Fig. 2—Top View Model 649

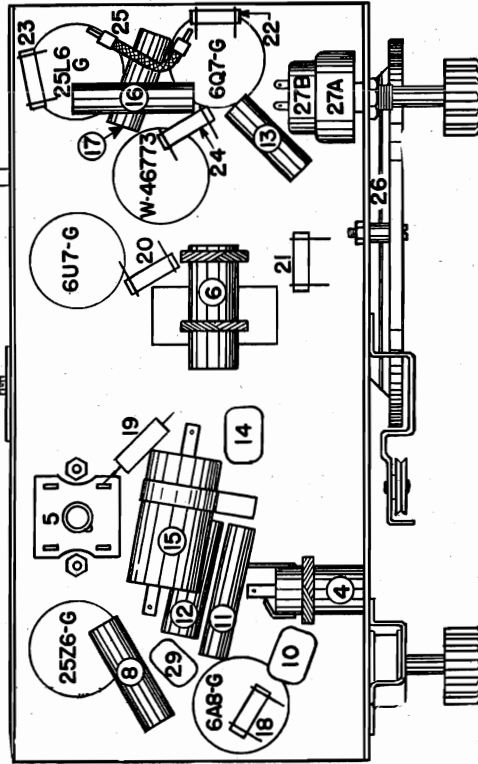


Fig. 3—Bottom View Model 5648-649

detector and 1st A-F amplifier and supplies A.V.C. voltage to the grid of the 6A8-GT and 6U7-G tubes. The bias for the 25L6-G tube is obtained from item 25 a 140 ohm resistor. A Ballast tube is used to provide the proper heater voltage to the tubes. The filaments of the tubes are wired in series. A .05 mfd. condenser, item 11, is connected across the power supply leads to reduce electrical interference from that source.

TUBES AND VOLTAGE LIMITS

The following table gives the functions of the tubes used, together with the voltage readings between the tube socket contacts and the filament. The filament voltage is given in ohms per volt, 250 volt voltages (except filaments) with the volume control full "ON", and no signal input. The filament voltages should be measured with an accurate low range volt-meter. When measured on a 117.5 A.C. line voltage limits may vary plus or minus 10% of the values given.

Tube	P	S	Su	K	Co	Ga
6A8GT	105	70	—	—	-10	105
6U7G	105	70	—	—	—	—
607G	35	—	—	—	—	—
25L6G	100	105	—	6	—	—
2525G	117.5 A.C.	—	—	132	—	—
W-46773	Ballast Tube	—	—	—	—	—

Power output approximately 2 watts.
Power consumption approximately 48 watts.
Voltage drop across speaker field 27 volts.
All voltages except filaments will be approximately 10% lower if measured on 117.5 volts DC power supply.

ALIGNMENT PROCEDURE

The chassis of this receiver is connected to one side of the power supply and for this reason all test equipment should be thoroughly insulated in order that the power supply will not become short circuited while aligning the receiver.

CONNECTING OUTPUT METER

Connect one terminal of the output meter to the plate and the other terminal to the screen of the 25L6-G output tube. Be certain that the meter is provided with a protective condenser (1 mfd. or larger—not electrolytic) in series with one of the leads.

Tuning the I-F Amplifier to 455 Kilocycles

(a) Connect the output of the signal generator through a .02 mfd. condenser to the grid cap of 6A8GT, leaving grid cap in place. Do not use a ground return from the signal generator unless it is found to be absolutely necessary. If it is found to be necessary, connect it in series with the ground terminal of the signal generator and the receiver chassis. KEEP THE GENERATOR LEADS AS FAR AS POSSIBLE FROM THE GRID LEADS OF THE OTHER SCREEN GRID TUBES.

(b) Set the station selector so that the plates of the condenser gang are completely out of mesh and turn the volume control to the right (ON).

(c) Set the signal generator to 455 kilocycles.

(d) Set the 2nd I-F trimmer condensers, Fig. 2, located on chassis between Push Button Assembly and speaker field, for maximum reading on the output meter.

(e) Adjust the 1st I-F trimmer condensers for maximum output.

(f) Repeat operations (d) and (e) for more accurate adjustments.

WAYS TO USE THE LOWEST SIGNAL GENERATOR OUTPUT THAT WILL GIVE A REASONABLE READING ON THE OUTPUT METER.

Aligning the R-F Amplifier Model 5648

Connect output lead of signal generator through a .0001 mfd. condenser to the antenna lead of the receiver.

(a) Set signal generator to 1550 kilocycles.

(b) With the condenser gang open all the way, adjust the "OSC" section of the gang for maximum signal.

(c) Set the signal generator to 1400 kilocycles.

(d) Tune in the 1400 kc. signal with the manual tuning knob.

(e) Adjust the trimmer condenser on the "ANT" section of the gang for maximum signal.

NOTE: Do not readjust the "OSC" section at this time. Repeat (b) and (c) for more accurate adjustments.

Aligning the R-F Amplifier Model 649

Connect output of signal generator through a .0001 mfd. condenser to the antenna lead of receiver.

(a) Set the signal generator to 1725 kilocycles.

(b) With the condenser gang turned to the minimum capacity position, adjust the trimmer condenser on the "OSC" section of the gang so that the 1725 kilocycle signal is heard. It is not necessary to tune in this signal.

(c) Set the generator to 1400 kilocycles.

(d) Tune in the 1400 kilocycle signal in the region of 140 on the dial for maximum output.

(e) Adjust the trimmer condenser located on the "ANT" section of the gang for maximum output.

NOTE: Do not readjust the "OSC" trimmer.

(f) Repeat operations (d) and (e) for more accurate adjustments.

If any of the circuits have been re-aligned, check push buttons to see if they need resetting.

SETTING THE PUSH BUTTONS



The push buttons are easily and accurately set from the top of the receiver. It is not necessary that all the buttons be set at the same time. The push buttons are set by turning the setting button between the forefinger and thumb and pulling straight up. Loosen the set screws on the keys but do not remove them.

Determine the favorite broadcasting stations whose call letters are to be placed in the buttons. By means of the manual tuning knob, tune-in AS ACCURATELY AS POSSIBLE the station having the highest frequency—that is the station that is tuned-in all the 1500 kc. and then push the output meter key. Set the call letters in the "output meter" section of the SET SCREW. TIGHTEN THE SET SCREW. Replace push button on key.

The push button tuning system is now correctly set for the first station. Follow through with this same procedure, setting the other stations in the order of their frequency (kilocycles). Detach the call letters of the favorite stations from the list supplied with your receiver and press them into the openings in the front of the push buttons. The call letters should be supplied in small envelopes, and should be snapped in place over the call letters to protect and hold them in place.

THE CROSLY CORP.

MODEL 689
Schematic, Chassis
Socket, Trimmers

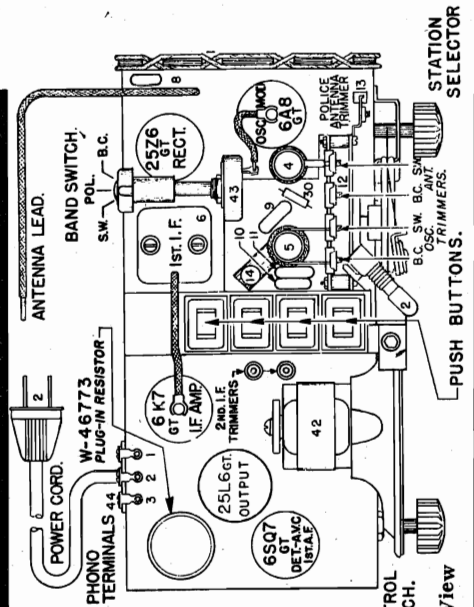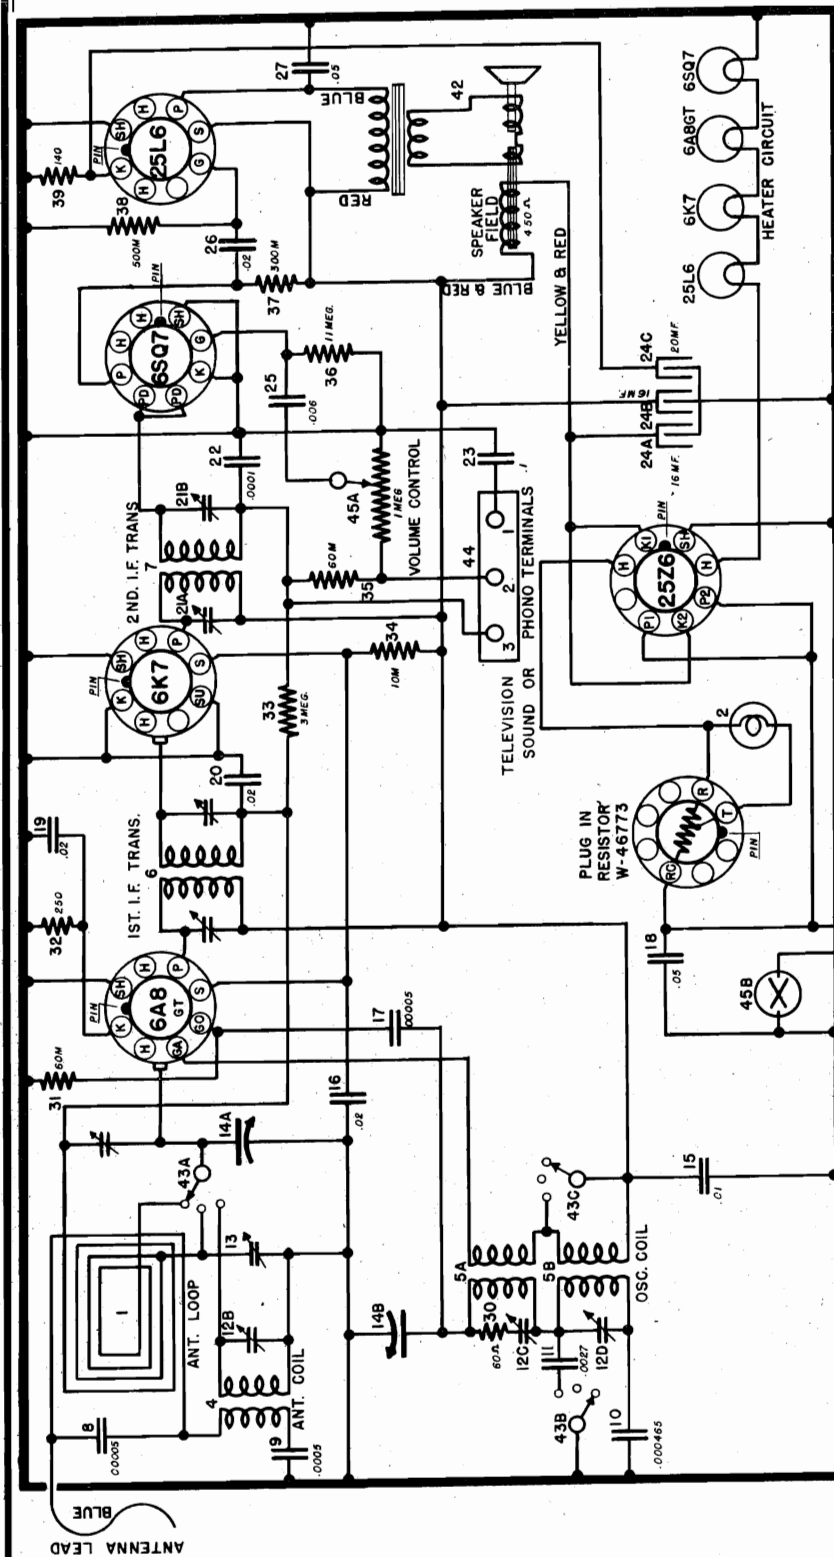

JANUARY, 1940

MODEL -- 689
TUBES MAY BE G OR GT TYPES EXCEPT 6A8
455 K.C. I.F.

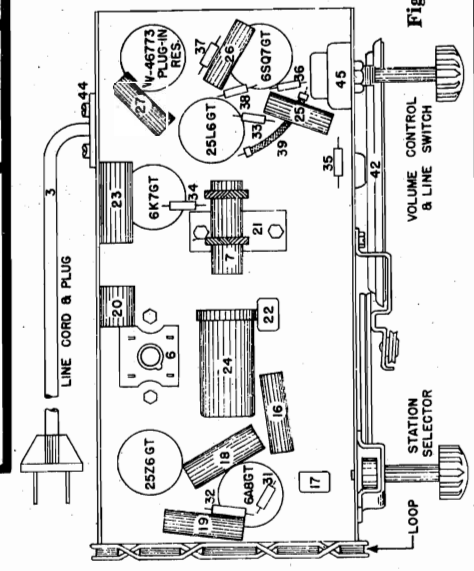


Fig. 3—Bottom View

Fig. 2—Top View

MODEL 689
Voltage, Tuner
Alignment
THE CROSLLEY CORP.
MODEL 689
TUBE SOCKET VOLTAGE READINGS

Tube	Function	H	P	S	Su	K	Go	Ga
6A8GT	Oscillator-Modulator	6.3	105	70	—	—	-10	105
6K7GT	I-F Amplifier	6.3	105	70	—	—	—	—
6SQ7GT	Det. AVC, A-F Amplifier	6.3	35	—	—	—	—	—
25L6GT	Output	25.1	100	105	—	6	—	—
25Z6GT	Rectifier	25.1	117.5 A.C.	—	—	132	—	—
W-46773	Ballast Tube	Approx. 48.4 A.C. Drop						

Power output approximately 2 watts.

Power consumption approximately 48 watts.

Voltage drop across speaker field 27 volts.

All voltages except filaments will be approximately 10% lower if measured on 117.5 volts DC power supply.

ALIGNMENT PROCEDURE

The chassis of this receiver is connected to one side of the power supply and for this reason all test equipment should be thoroughly insulated in order that the power supply will not become short circuited while aligning the receiver.

CONNECTING OUTPUT METER

Connect one terminal of the output meter to the plate and the other terminal to the screen of the 25L6GT output tube. Be certain that the meter is protected from D.C. by connecting a condenser (.1 mfd. or larger—not electrolytic) in series with one of the leads.

Tuning The I-F Amplifier to 455 Kilocycles

(a) Connect the output of the signal generator through a .02 mf. condenser to the grid cap of 6A8GT, leaving grid cap in place. Do not use a ground return from the signal generator unless it is found to be absolutely necessary. If it is found to be necessary, a small condenser (approximately .001 mfd.) should be connected in series with the ground terminal of the signal generator and the receiver chassis. **KEEP THE GENERATOR LEADS AS FAR AS POSSIBLE FROM THE GRID LEADS OF THE OTHER SCREEN GRID TUBES.**

(b) Set the station selector so that the plates of the condenser gang are completely out of mesh, turn the volume control to the right (ON), and turn the band switch to the right (B.C.).

(c) Set the signal generator to 455 kilocycles.

(d) Adjust the 2nd I-F trimmer condensers, Fig. 2, located between Push Button Assembly and speaker field, for maximum reading on the output meter.

(e) Adjust the 1st I-F trimmer condensers for maximum output.

(f) Repeat operations (d) and (e) for more accurate adjustments.

ALWAYS USE THE LOWEST SIGNAL GENERATOR

OUTPUT THAT WILL GIVE A REASONABLE READING ON THE OUTPUT METER.

Aligning the R-F Amplifier

When aligning the R-F amplifier the output lead of the signal generator should be connected, through a dummy antenna, to the BLUE lead extending from the rear of the chassis. For the standard Broadcast Band and special police band use a .0001 mf. condenser and for the short wave band a 250 ohm carbon resistor instead of the condenser.

(a) Set the signal generator to 1725 kilocycles.

(b) With the condenser gang turned to the minimum capacity position and band switch turned to B.C. position, adjust the B.C. "OSC" trimmer condenser of the gang so that the 1725 kilocycle signal is heard. It is not necessary that the receiver tune through this signal.

(c) Set the generator to 1400 kilocycles.

(d) Tune-in the 1400 kilocycle signal in the region of 140 on the dial for maximum output.

(e) Adjust the trimmer condenser B.C. "ANT" for maximum output.

NOTE: Do not readjust the "OSC" trimmer.

(f) Repeat operations (d) and (e) for more accurate adjustments.

(g) Set signal generator to 2.5 megacycles and turn band switch to special police band (middle position).

(h) Tune in 2.5 signal on receiver and then adjust POL. "ANT" trimmer condenser (Fig. 2) for maximum output. There is no "OSC" adjustment for this band.

(i) Set signal generator to 18.3 megacycles, turn band switch to S.W. position (left) and open gang all the way.

(j) Adjust S.W. "OSC" trimmer condenser for maximum

output.

(k) Set signal generator to 18 megacycles.

(l) Tune in 18 mc. signal on receiver, then adjust the S.W. "ANT" trimmer condenser for maximum output.

(m) Repeat (i) to (l) for more accurate adjustments.

NOTE: When shunt aligning the short wave band care should be exercised so that the circuits will be aligned on the correct frequency (fundamental) rather than on the image frequency which is approximately 910 kilocycles more than the fundamental. To check on this, increase the signal generator output approximately 10 times or more, and try to tune in the signal both at the generator frequency as indicated on the station selector dial and at approximately 910 kilocycles less than the correct frequency. (18.0 mc. fundamental 17.09 mc. image). If circuits have been properly aligned the signal can be tuned in at both positions but with a much stronger signal on the fundamental.

A few of the earlier releases of this model used a 6Q7GT in place of the 6SQ7GT. This change was made to improve performance especially on the short wave band.

If any of the circuits have been re-aligned, check push buttons to see if they need resetting.

SETTING THE PUSH BUTTONS

The push buttons are easily and accurately set from the top of the receiver. It is not necessary that all the buttons be set at the same time. Remove the push buttons to be set by grasping the button between the forefinger and thumb and pulling straight up. Loosen the set screws on the keys but do not remove them.

Determine the favorite broadcasting stations whose call letters are to be placed in the buttons. By means of the manual tuning knob, tune-in AS ACCURATELY AS POSSIBLE the station having the highest frequency—that is the station that is tuned-in nearest the 1500 Kc. end of the dial. Then push the front key all the way down, and while you hold it in that position **SECURELY TIGHTEN THE SET SCREW.** Replace push button on key.

The push button tuning system is now correctly set for the first station. Follow through with this same procedure, setting the other stations in the order of their frequency (kilocycles). Detach the call letters of the favorite stations from the list supplied with your receiver and press them into the openings in the front of the push buttons. Thin pieces of clear celluloid are supplied in a small envelope and should be snapped in place over the call letters to protect and hold them in place.

TUBES AND VOLTAGE LIMITS

The following table gives the functions of the tubes used, together with the voltage readings between the tube socket contacts and chassis. Voltage readings should be taken with a 1,000 ohm per volt, 250 volt volt-meter (except filaments) with the volume control full "ON" and no signal input. The filament voltages should be measured with an accurate low range volt-meter. When measured on a 117.5 volt A.C. line voltage limits may vary plus or minus 10% of the values given.

SPECIFICATIONS

This model Crosley receiver is a three band superheterodyne receiver designed for operation on 110 volt A.C. (50-60 cycles) or D.C. power circuits.

The receiver incorporates an improved mechanical push button tuning system, built in loop antenna, A.V.C., terminals for phono or television sound and many improved circuit developments.

THE CROSLY CORP.

MODEL 719 (3 Types)
Schematics

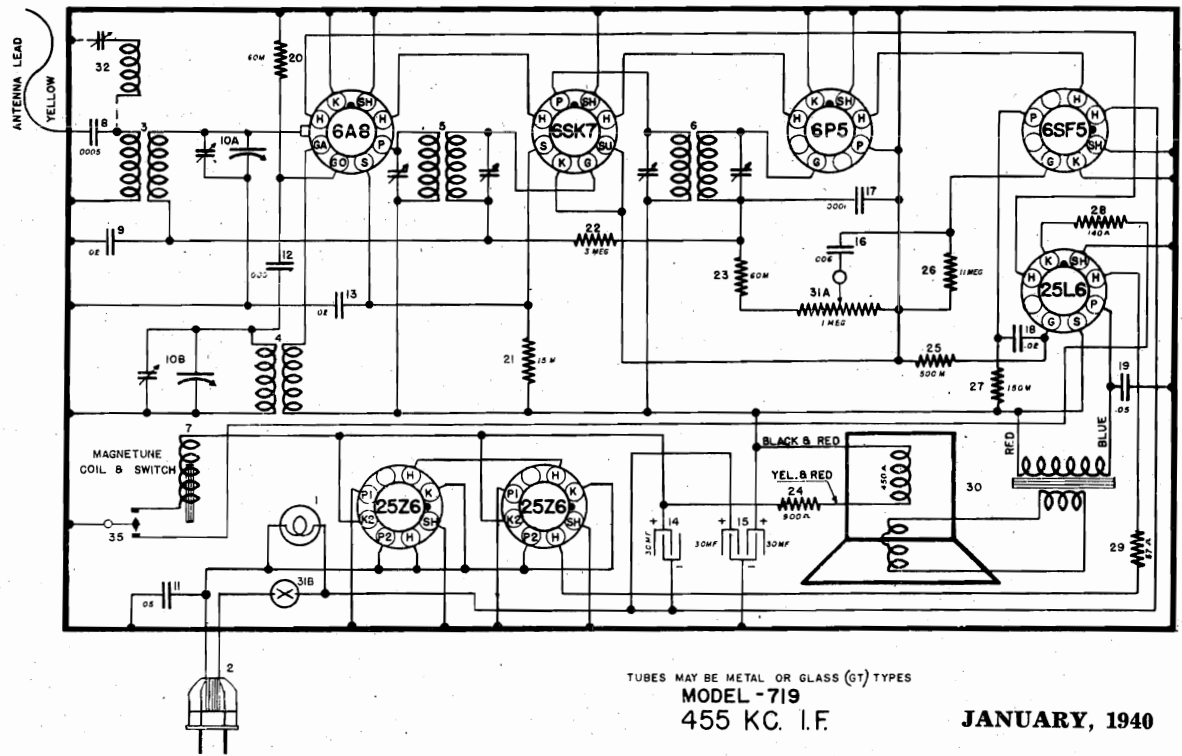


FIG. 1-A—WIRING DIAGRAM—MODEL 719

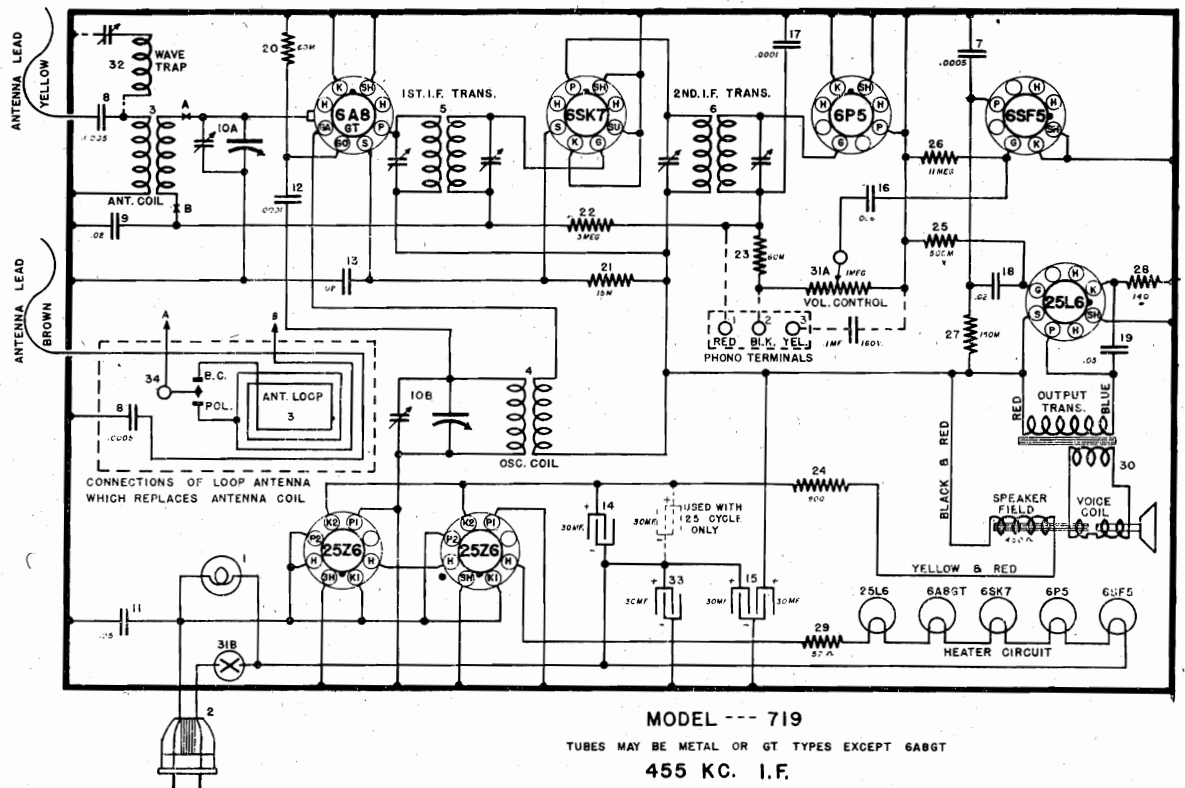


FIG. 1-B—WIRING DIAGRAM—MODEL 719

MODEL 719

Voltage, Circuit Data
Socket, Trimmers, Alignment

THE CROSLLEY CORP.

SPECIFICATIONS

This model Crosley is a seven tube superheterodyne receiver designed for operation on 110 volt—50 or 60 cycle power circuits. It may be adapted for 25 cycle operation by the addition of another filter condenser as indicated in wiring diagram.

CIRCUIT DESCRIPTION

There are three versions of this model in the field namely: one version with an improved mechanical push button tuning system; one version with mechanical push button tuning and loop antenna, and one version has the Magnetune electric push button tuning system.

The circuit is a conventional super with no regeneration. Item 23, a 60,000 ohm resistor in series with the volume control form the A.V.C. load. Item 22, a 3 megohm resistor acts as a filter for the A.V.C. voltage applied to the 6A8GT and the 6SK7. Bias for the 25L6GT is obtained from the voltage drop

across item 28, a 140 ohm resistor. The two 25Z6GT rectifiers are in parallel and connected for voltage doubling.

The B voltage is filtered with the 900 ohm resistor, item 24, the speaker field (450 ohms) item 15, a twin 30 mf. electrolytic, and item 14, a single 30 mf. electrolytic.

The filaments of the tubes are wired in series. A .05 mfd. condenser, item 11, is connected across the power supply leads to reduce electrical interference from that source.

TUBES AND VOLTAGE LIMITS

The following table gives the functions of the tubes used, together with the voltage readings between the tube socket contacts and chassis. Voltage readings should be taken with a 1,000 ohm per volt, 250 volt-volt-meter (except filaments) with the volume control full "ON" and no signal input. The filament voltages should be measured with an accurate low range voltmeter. When measured on a 117.5 volt A.C. line voltage limits may vary plus or minus 10% of the values given.

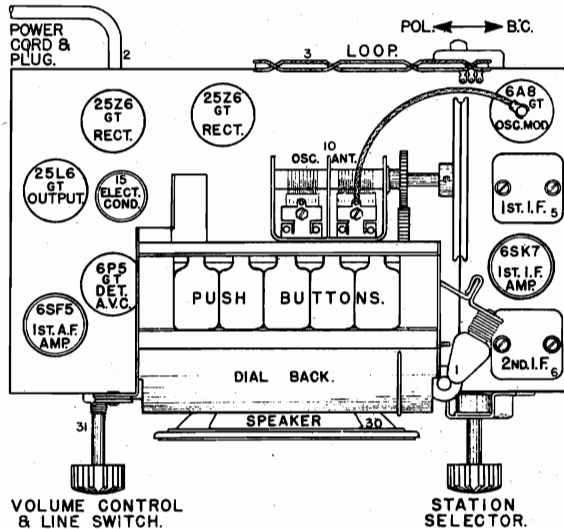


Fig. 2—Top View Model 719

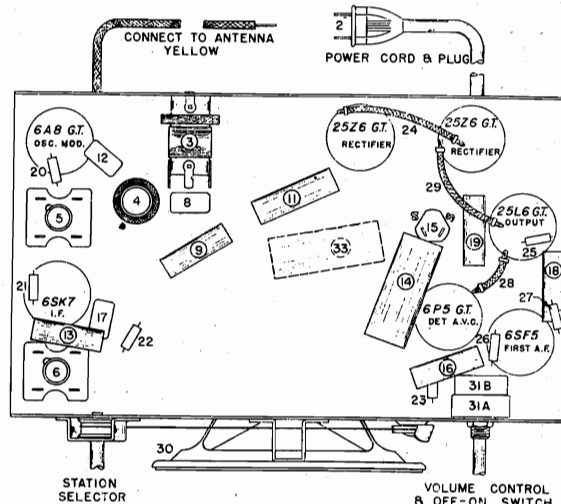


Fig. 3—Bottom View Model 719

TUBE SOCKET VOLTAGE READING

Tube	Function	PIN NUMBER							
		No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 7	No. 8
6A8GT	Oscillator-Modulator	—	H	130	70	-17	130	H	—
6SK7	I-F Amplifier	—	H	—	—	—	70	H	130
6P5	Det. AVC Diode	—	H	—	J.B.	—	J.B.	H	—
6SF5	1st Audio	—	—	—	—	68	—	H	H
25L6	Output	—	H	121	128	—	J.B.	H	6
2-25Z6	Rectifier	—	H	A.C.	232	—	—	H	130

Maximum power output 2.5 watts.

Drop across speaker field 40 volts.

Power consumption @ 117.5 volt line = 65 watts. Those with "Magnetune" coil 40 watts additional.

ALIGNMENT PROCEDURE

The chassis of this receiver is connected to one side of the power supply and for this reason all test equipment should be thoroughly insulated in order that the power supply will not become short circuited while aligning the receiver.

CONNECTING OUTPUT METER

Connect one terminal of the output meter to the plate and the other terminal to the screen of the 25L6GT output tube. Be certain that the meter is protected from D.C. by connecting a condenser (.1 mfd. or larger—not electrolytic) in series with one of the leads.

Tuning The I-F Amplifier to 455 Kilocycles

(a) Connect the output of the signal generator through a 100 mmf. condenser to the antenna lead on the receiver. Do not use a ground return from the signal generator unless it is found to be absolutely necessary. If it is found to be necessary, a small condenser (approximately .001 mfd.) should be connected in series with the ground terminal of the signal generator and the receiver chassis. KEEP THE GENERATOR LEADS AS FAR AS POSSIBLE FROM THE GRID LEADS OF THE OTHER SCREEN GRID TUBES.

(b) Set the station selector so that the plates of the condenser gang are completely out of mesh and turn the volume control to the right (ON).

(c) Set the signal generator to 455 kilocycles.

(d) Adjust the 2nd I-F trimmer condensers, item 6, for maximum reading on the output meter.

(e) Adjust the 1st I-F trimmer condensers, item 5, for

maximum output.

(f) Repeat operations (d) and (e) for more accurate adjustments.

ALWAYS USE THE LOWEST SIGNAL GENERATOR OUTPUT THAT WILL GIVE A REASONABLE READING ON THE OUTPUT METER.

Aligning the R-F Amplifier

(a) Set the signal generator to 1725 kilocycles.

(b) With the condenser gang turned to the minimum capacity position, adjust the trimmer condenser on the "OSC" section of the gang so that the 1725 kilocycle signal is heard. It is not necessary that the receiver tune through this signal.

(c) Set the signal generator to 1400 kilocycles.

(d) Tune-in the 1400 kilocycle signal in the region of 140 on the dial for maximum output.

(e) Adjust the trimmer condenser located on the "ANT" section of the gang for maximum output.

NOTE: Do not readjust the "OSC" trimmer.

(f) Repeat operations (d) and (e) for more accurate adjustments.

The special police band has no provisions for alignment.

WAVE TRAP

Some chassis of this model may be equipped with a wave trap for the purpose of eliminating interference from code stations which operate on a frequency of approximately 455 kilocycles. This assembly is located on the top side of the chassis and consists of a coil and a condenser as illustrated by dotted lines in the Wiring Diagram, Fig. 1A.

THE CROSLY CORP. MODEL 729 (Types 1 and 2)
Schematics

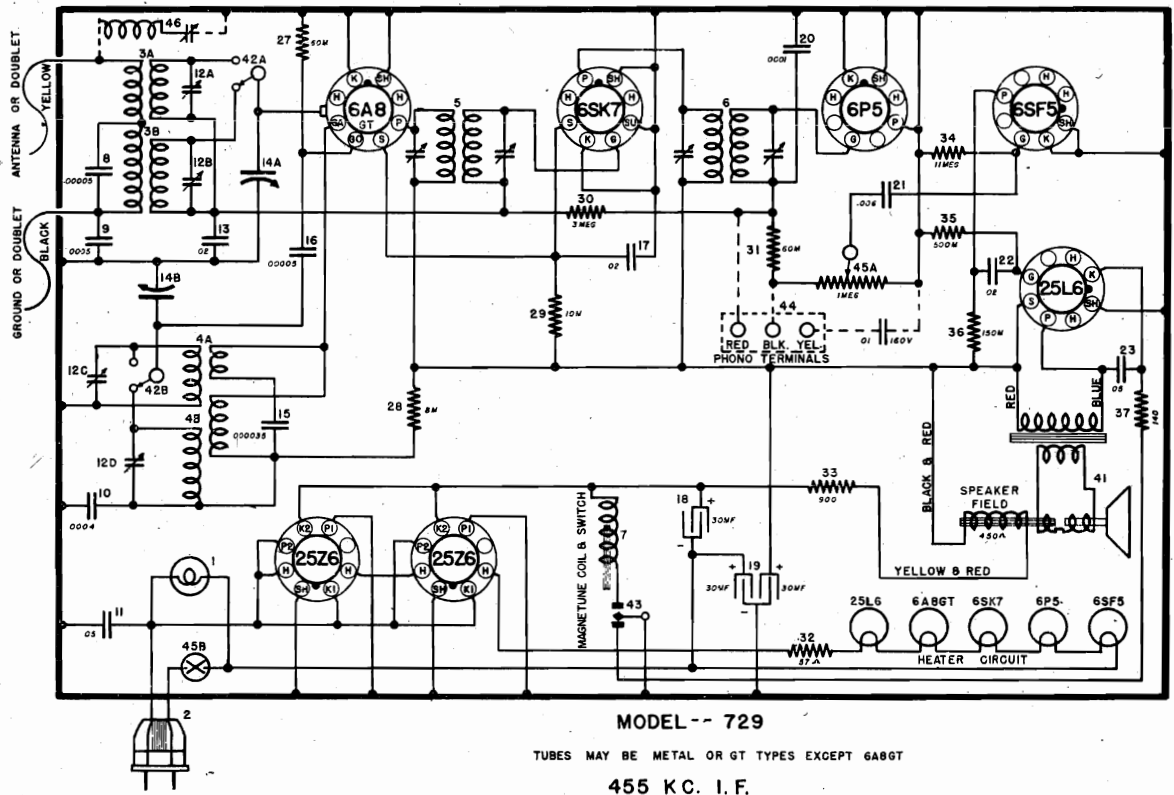


FIG. 1-A—WIRING DIAGRAM—MODEL 729 (MAGNETUNE)

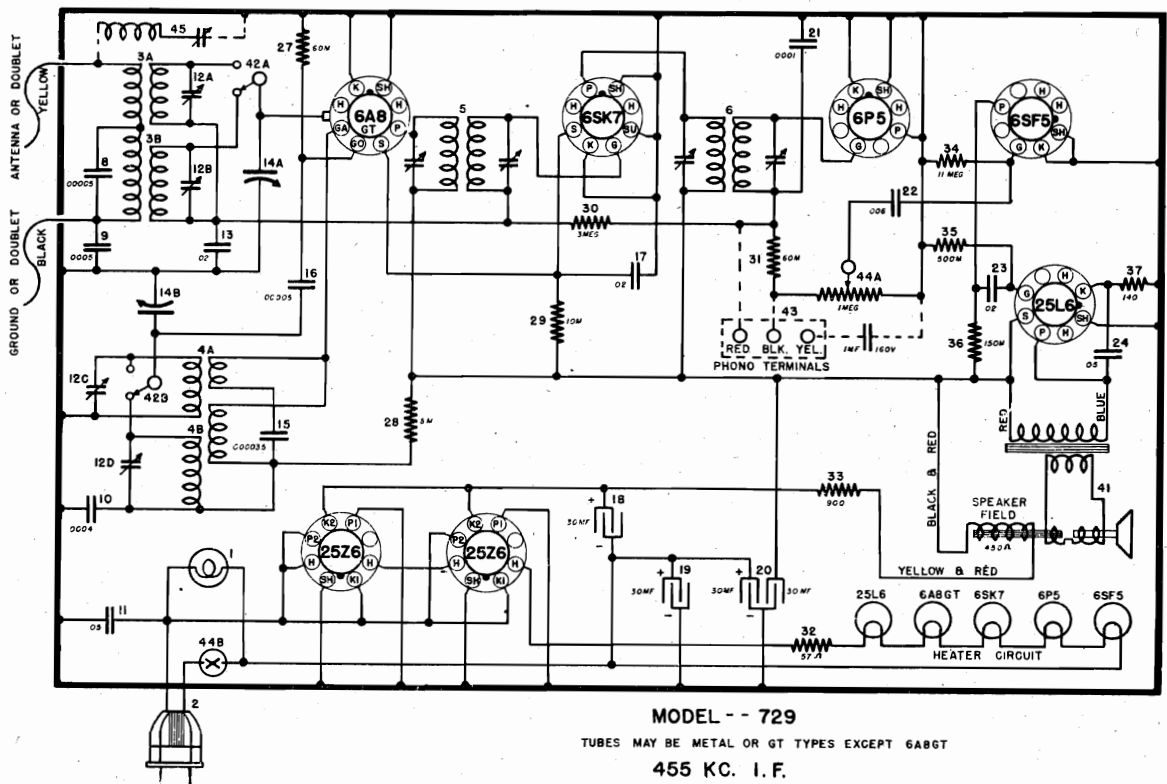


FIG. 1-B—WIRING DIAGRAM—MODEL 729 (MECH. P. B.—TWO BAND)

MODEL 729 (Type 3)
Schematic, Voltage
Socket, Trimmers, Chassis

THE CROSLLEY CORP.

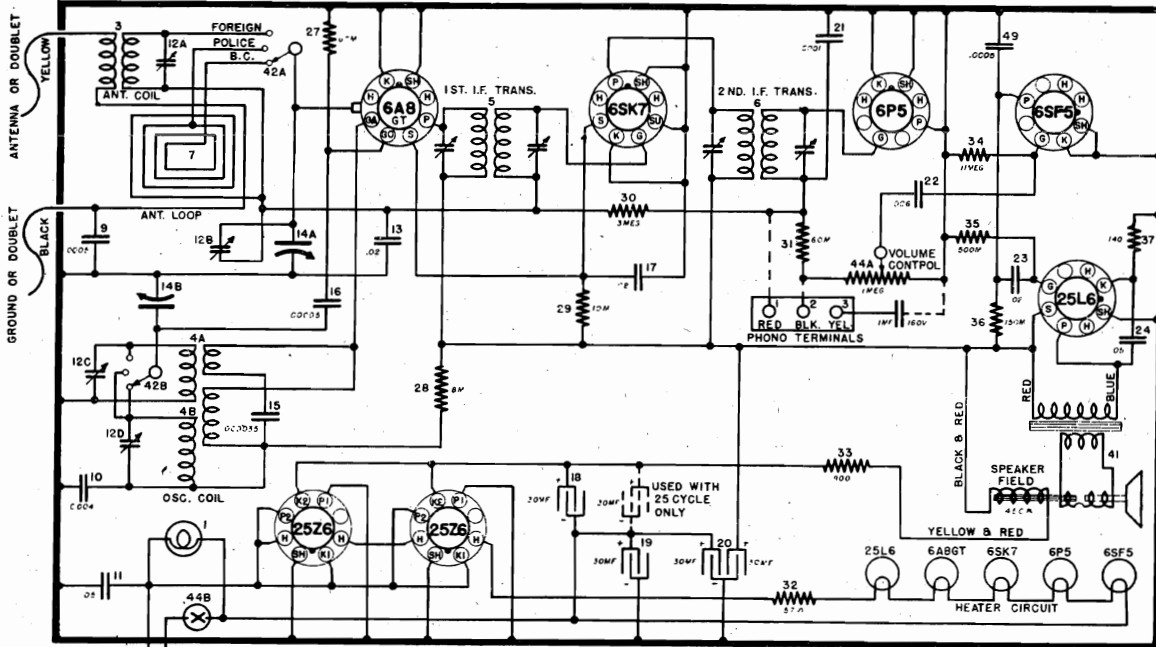


FIG. 1-C—WIRING DIAGRAM—

MODEL --- 729

TUBES MAY BE METAL OR GT TYPES EXCEPT 6A8GT

MODEL 729 (MECH. P. B. LOOP)

455 K.C. I.F.

SOCKET VOLTAGE READINGS AT 117.5 VOLT LINE

Tube	Purpose	PIN NUMBER							
		No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 7	No. 8
6A8GT	Oscillator-Modulator	—	H	125	74	Osc. Grid	130	H	—
6SK7	I-F Amplifier	—	H	—	Grid	—	74	H	125
6P5	Diode	—	H	—	—	Grid	—	H	—
6SF5	1st Audio	—	—	Grid	—	65	—	H	H
25L6	Output	—	H	120	125	Grid	—	H	8
2-25Z6	Rectifier	—	H	117.5 A.C.	232	—	—	H	122

Drop across speaker field 35 volts.
Drop across Item 33 72 volts.
Maximum power output 4.3 watts @ 125 volts line.
Power consumption @ 117.5 volts line—60 watts.
J.B. = junction block

H = heater.

JANUARY, 1940

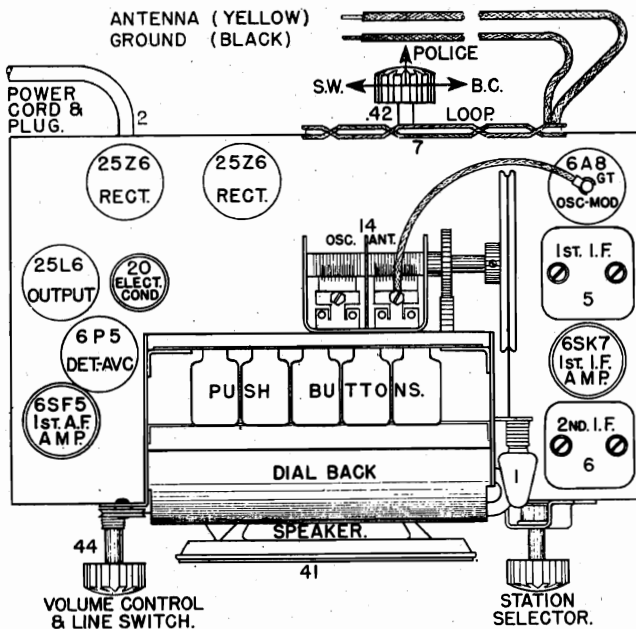


Fig. 1—Top View Model 729

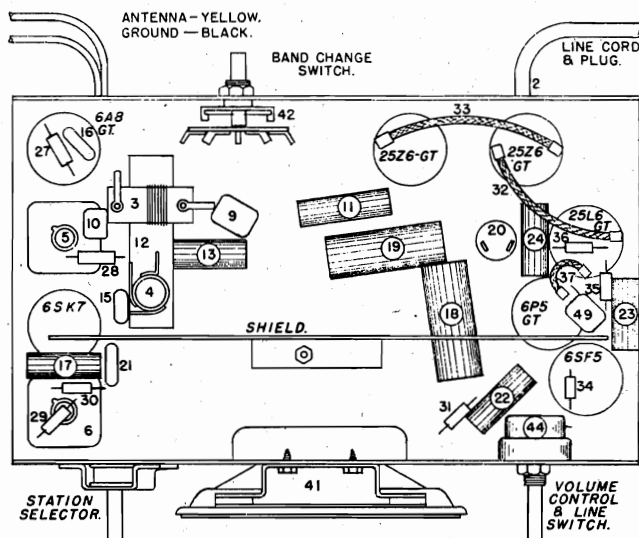


Fig. 3—Bottom View Model 729

THE CROSLLEY CORP.

MODEL 729
Alignment, Parts
Circuit Notes

MODEL NO. 729

This model Crosley receiver is designed for operation on 110 volt, 50 or 60 cycle electric circuits. There are three versions of this model in the field which include; one version which is a two band super with a mechanical push button tuning system; one version which is a two band super with the "Magnetune" electric push button tuning system; one version which is a three band super with a loop antenna and a mechanical push button tuning system.

The circuit is a conventional superheterodyne with the exception of the three band series which is novel in the method in which the special police band is covered. This special band

makes use of the image frequency (2 x I-F frequency more than fundamental) and the tap on the loop which is resonated at 2.4 megacycles.

The 6A8GT, 6SK7, and 6SF5 are operated at zero bias and the 25L6 bias is obtained from voltage drop across item 37, a 140 ohm 1/2 watt resistor. A.V.C. voltage is applied to the 6A8GT and the 6SK7 through filter resistor item 30 (3 megohms). Item 31, a 60,000 ohm resistor and item 45A, a 1 megohm volume control, serve as the A.V.C. load. The two 25Z6 rectifiers are hooked in parallel and connected voltage doubling. The speaker field (450 ohms) and item 33, a 900 ohm 7 watt resistor with condensers items 18 and 19 filter the B supply.

ALIGNMENT PROCEDURE

All circuits have been accurately adjusted at the factory and normally should need no further adjustment. However, if it is definitely known that an adjustment is necessary the circuits can best be properly aligned with the use of a modulated signal generator and an output meter.

NOTE: The circuit of this receiver is such that if the signal generator has one side of the line connected to the case or ground side and the generator and receiver are plugged into the same line, serious damage may result to either or both instruments. ALWAYS ISOLATE SIGNAL GENERATOR GROUND LEAD BY INSERTING A .01 mf. OR SMALLER CONDENSER IN SERIES WITH THE LEAD BEFORE CONNECTING TO THE CHASSIS.

CONNECTING OUTPUT METER

One terminal of the output meter should be connected to the plate (No. 3 pin) and the other terminal to the screen (No. 4 pin) of the 25L6GT output tube. Be sure the meter is protected from D.C. by connecting a .25 mf. condenser in series with one of the leads.

(1) I-F Amplifier Alignment

- (a) Connect the output lead of the signal generator through a .02 mf. condenser to the top (GRID) cap of the 6A8GT tube (leaving the tubes grid connector in place).
- (b) Connect the ground lead of the signal generator through a .01 mf. (or smaller .001 mf.) condenser to the chassis.
- (c) Adjust station selector so that the rotor plates of the gang are completely disengaged, turn band to B.C. position and turn the volume control to maximum.
- (d) Set the signal generator to 455 kc.
- (e) Adjust the trimmer condensers on the 2nd I-F transformer for maximum output.
- (f) Adjust the trimmer condensers on the 1st I-F transformer for maximum output.
- (g) Repeat (e) and (f) for more accurate adjustments. IN ORDER TO PREVENT A.V.C. ACTION, ALWAYS USE THE LOWEST SIGNAL GENERATOR OUTPUT THAT

WILL GIVE A REASONABLE OUTPUT METER READING.

(2) Aligning R-F Amplifier

- (a) Connect the signal generator output lead through a .0001 mf. condenser to the antenna lead (YELLOW) and the generator ground lead to the Black lead of the receiver. Turn band switch to B.C. band, open gang all the way and turn volume control on full.
 - (b) Set signal generator to 1725 kilocycles.
 - (c) Adjust B.C. oscillator trimmer for maximum output (receiver does not have to tune through this signal).
 - (d) Set signal generator to 1400 kilocycles.
 - (e) Tune in generator signal on receiver by means of manual tuning knob.
 - (f) Adjust B.C. antenna trimmer for maximum output. DO NOT readjust oscillator trimmer.
 - (g) Repeat above procedure for more accurate adjustments.
 - (h) Connect the signal generator output lead through a 250 ohm carbon resistor to the antenna lead of the receiver. Turn band switch to S.W. position, open gang condenser all the way, and turn volume on full.
 - (i) Set signal generator to 18.3 megacycles.
 - (j) Adjust S.W. oscillator trimmer for maximum output.
 - (k) Set signal generator to 18 megacycles.
 - (l) Tune in 18 mc. signal with manual control, then adjust the S.W. antenna trimmer condenser for maximum output.
- Check to see that receiver is aligned on the fundamental and not the image frequency. Increase signal generator output approximately 10 times and tune in image frequency (2 x 455 kc. + fundamental) which will be approximately 910 kilocycles less than 18 mc. as indicated by the dial calibrations (17.1 mc.). If correctly aligned, the image will come in as stated but will be much weaker than the fundamental.
- The special police band in some models covering 2.3 to 2.5 mc. has no adjustments but can be checked by using a .0001 mf. condenser in series with the signal generator output lead, turning band switch to POL. position, set signal generator to 2.5 mc. and then tune in generator signal, which should come in with the dial pointer near the end of that band.


PARTS LIST—MODEL 729

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	W -47977	Dial Light Bulb, 110 Volt	20	W -47892	Condenser, 30-30 Ohms 135 Volts Elect.
	W -47946	Dial Light Bracket Assembly	20	G2 -34002	Condenser, .0001 Mf. Molded (Magnetune only)
	W -48169	Dial Light Cover	21	G2 -34002	Condenser, .0001 Mf. Molded
2	B -45769A	Power Cord and Plug	21	W -45810B	Condenser, .006 Mf. 160 Volts Paper (Magnetune only)
3	G214-32000	Antenna Coil, Foreign	22	W -45810B	Condenser, .006 Mf. 160 Volts Paper (Magnetune only)
4A } 4B }	G206-32002	Oscillator Coil { Foreign Broadcast	22	W -45780B	Condenser, .02 Mf. 160 Volts Paper (Magnetune only)
5	G221-32004	1st I-F. Transformer Assembly	23	W -45780B	Condenser, .02 Mf. 160 Volts Paper (Magnetune only)
6	G188-32004	2nd I-F. Transformer Assembly	23	W -45817B	Condenser, .05 Mf. 160 Volts Paper (Magnetune only)
7	G6 -47673	Loop Antenna	24	W -45817B	Condenser, .05 Mf. 160 Volts Paper
8	G2 -47909	Solenoid Coil Assembly	27	W -21237A	Resistor, 60,000 Ohms 1/2 Watt Carb.
9	G3 -34002	Condenser, .0004 Mf. Molded	28	W -37905	Resistor, 8,000 Ohms 1/2 Watt Ins.
10	G18 -34002	Condenser, .0004 Mf. Molded	29	W -36317	Resistor, 10,000 Ohms 1/2 Watt Ins.
11	W -45782B	Condenser, .05 Mf. 120 Volts Paper	30	W -26577	Resistor, 3 Megohms 1/2 Watt Carb.
12A } 12B } 12C } 12D }	W -41247A	Trimmer Condenser { Antenna, Foreign Antenna, B. C. Oscillator, Foreign Oscillator, B. C.	31	W -21237A	Resistor, 60,000 Ohms 1/2 Watt Carb.
13	W -47574	Spacers, (2 Req.) (4 Sect. Trimmer)	32	W -47857	Resistor, 57 Ohms 7 Watt Flex.
14A } 14B }	W -45780	Condenser, .02 Mf. 160 Volts Paper	33	W -47873	Resistor, 900 Ohms 7 Watt Flex.
	G80 -33001	2 Sect. Var. Cond. { Antenna Section Oscillator Section	34	W -46497	Resistor, 11 Megohms 1/2 Watt Carb.
	MG18 -47860	Riveted Mtg. Bracket, R. H.	35	W -23785	Resistor, 500,000 Ohms 1/2 Watt Carb.
	MG18 -47860	Riveted Mtg. Bracket, L. H.	36	W -23403	Resistor, 150,000 Ohms 1/2 Watt Carb.
	MG20 -47860	Idle Support Bracket	37	W -47512	Resistor, 140 Ohms 3/4 Watt Flex.
	W -47875	Dial Back Face	41	281-BL-7-"B"	Speaker, Spec. 55-WA-43
	G8 -48762	Push Button Unit Assembly		47290	V. C. and Cone Assembly
	G12 -43564	Pulley and Hub Assembly		46686	Field Coil, 450 Ohms 60 M. A.
				46687	Output Transformer
15	G13 -34002	Condenser, .0003 Mf. Molded	MG36-47861		Push Button and Hinge Assembly (9GA, 9GC)
16	G5 -34002	Condenser, .0005 Mf. Molded	MG37-47861		Push Button and Hinge Assembly (9GB, 9GE, 9GF, 9GC)
17	W -45780	Condenser, .02 Mf. 160 Volts Paper	MG21-47860		Riveted Hinge Assembly
18	W -47702A	Condenser, 30 Mf. 150 Volts Elect.	W -48730B		Insert (5 Req.) (P. B. and Hinge Assembly)
19	W -47702A	Condenser, 30 Mf. 150 Volts Elect.	W -47947A		Push Button Hinge
19	W -47892	Condenser, 30-30 Ohms 135 Volts Elect. (Magnetune only)	W -48017C		Push Button Hinge Spring

MODEL 739(Loop Type)
Schematic

THE CROSLEY CORP.

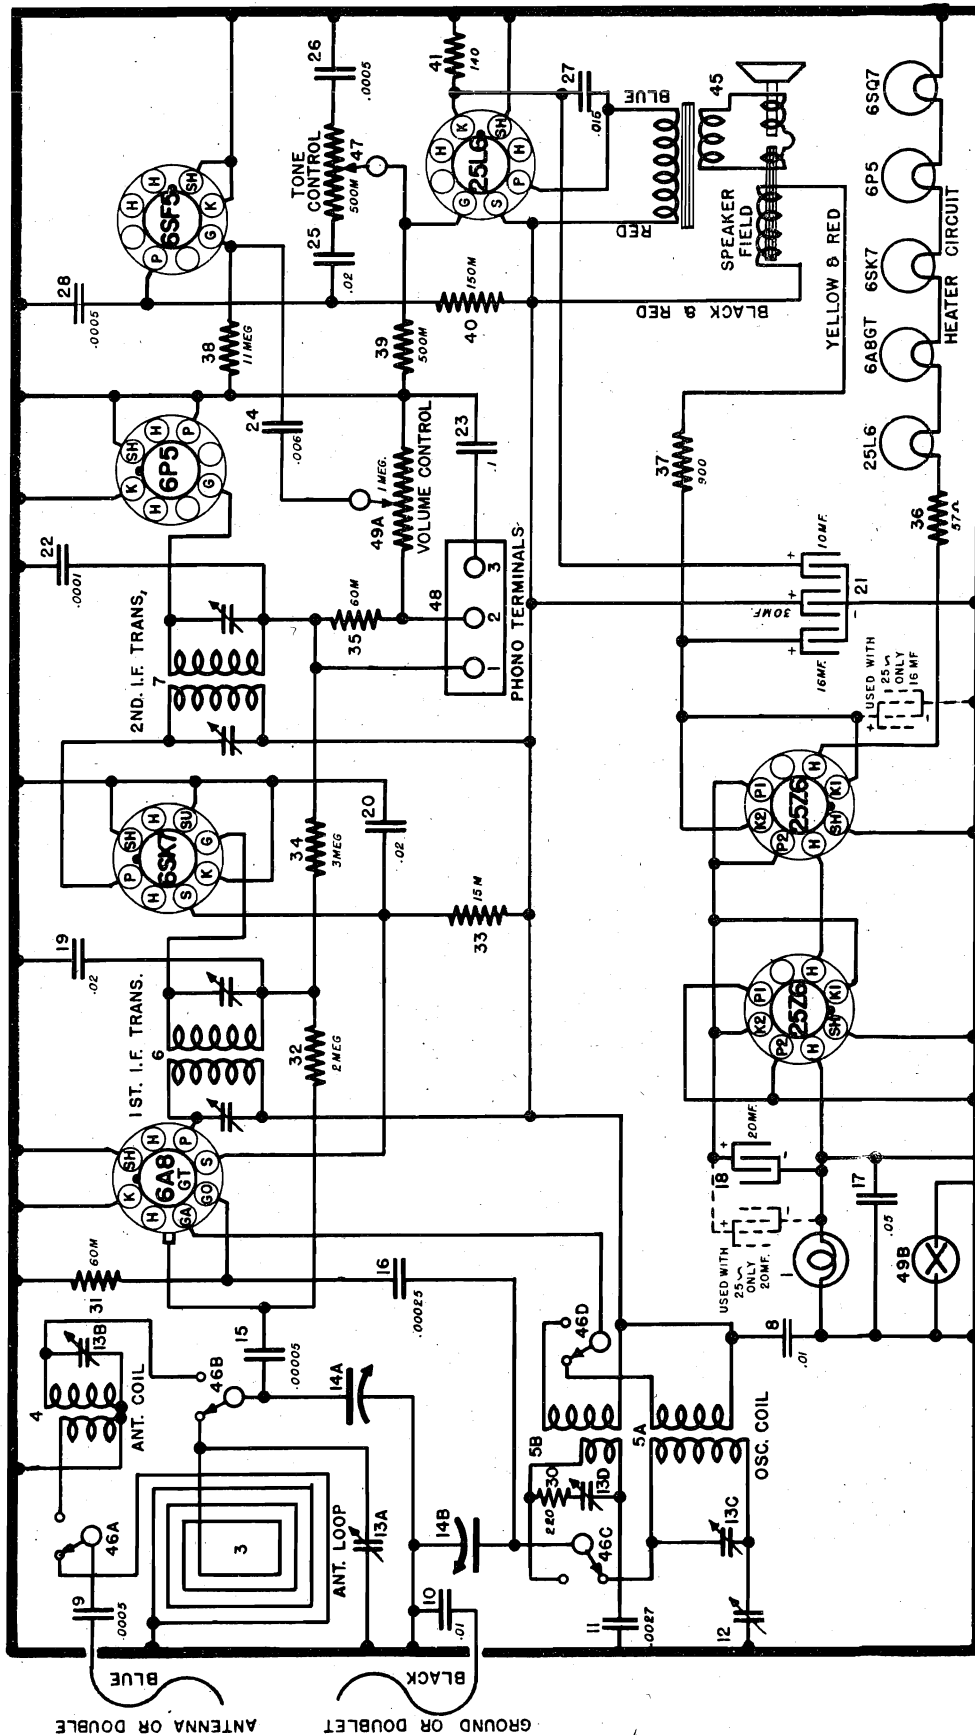





MODEL --- 739

TUBES MAY BE METAL OR GT TYPES EXCEPT 6AB
455 KC. I.F.

FIG. 1-A—MODEL 739 (MECHANICAL P. B. & LOOP)

THE CROSLLEY CORP.

MODELS 739(2 Types),
7739 (2 Types)
Schematics

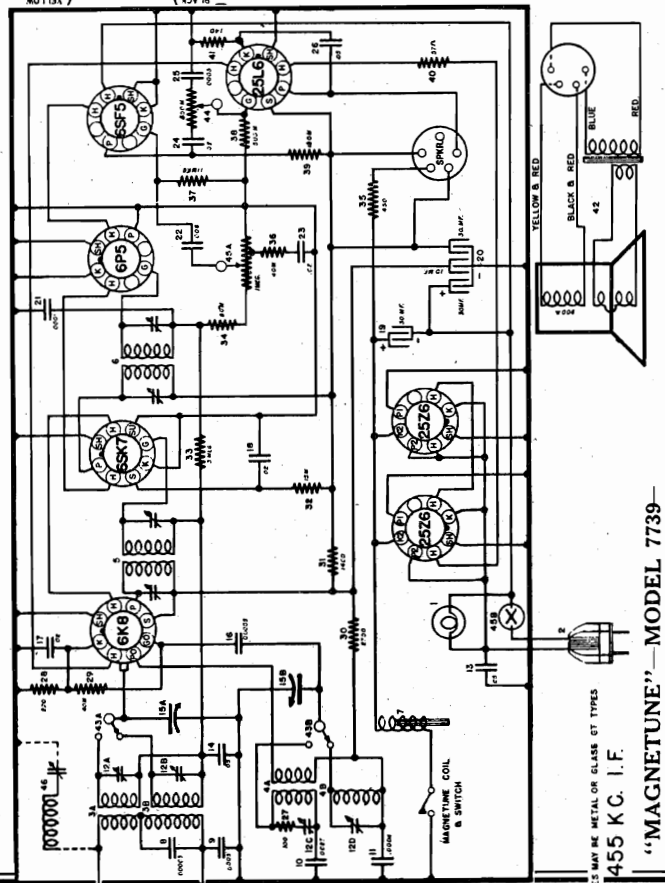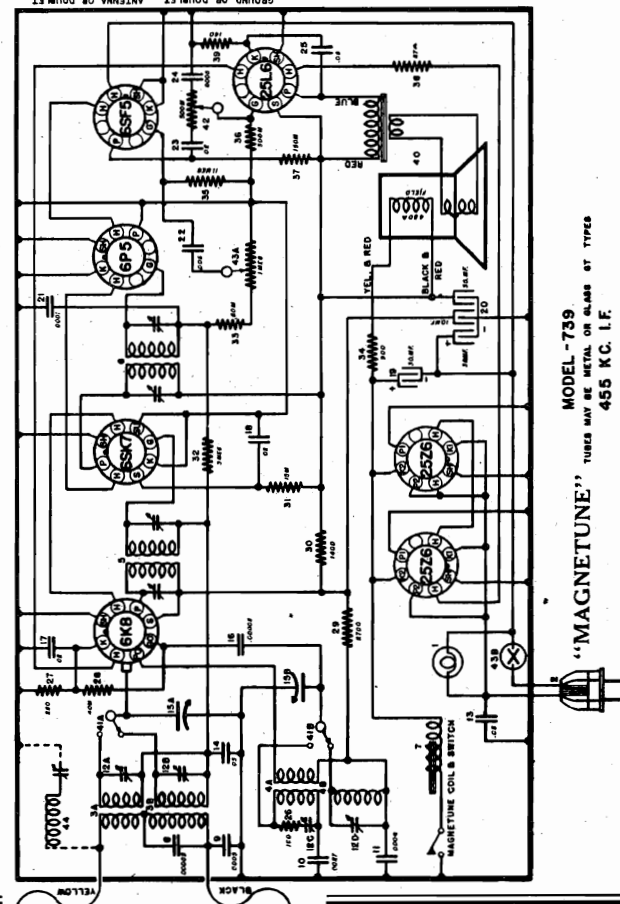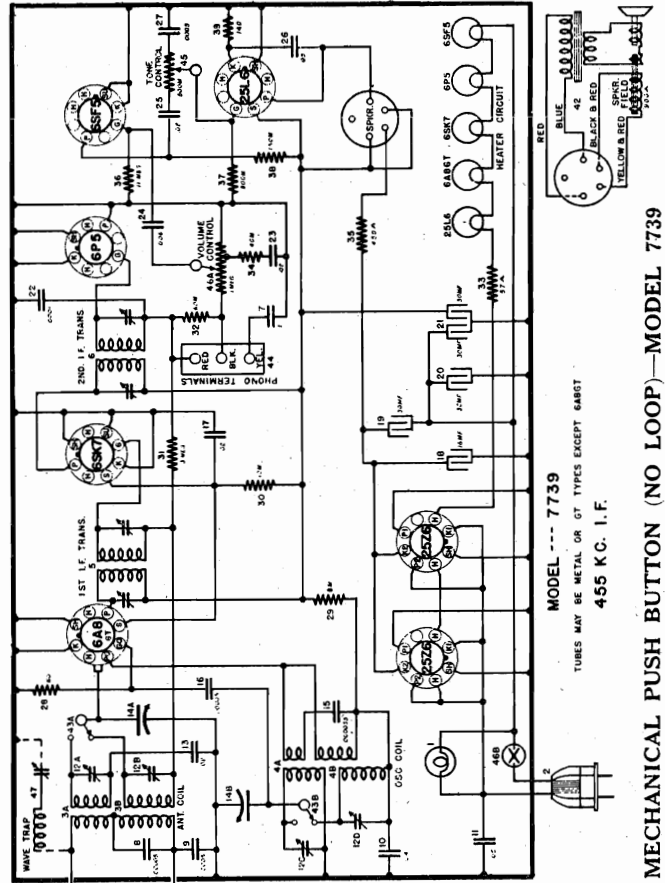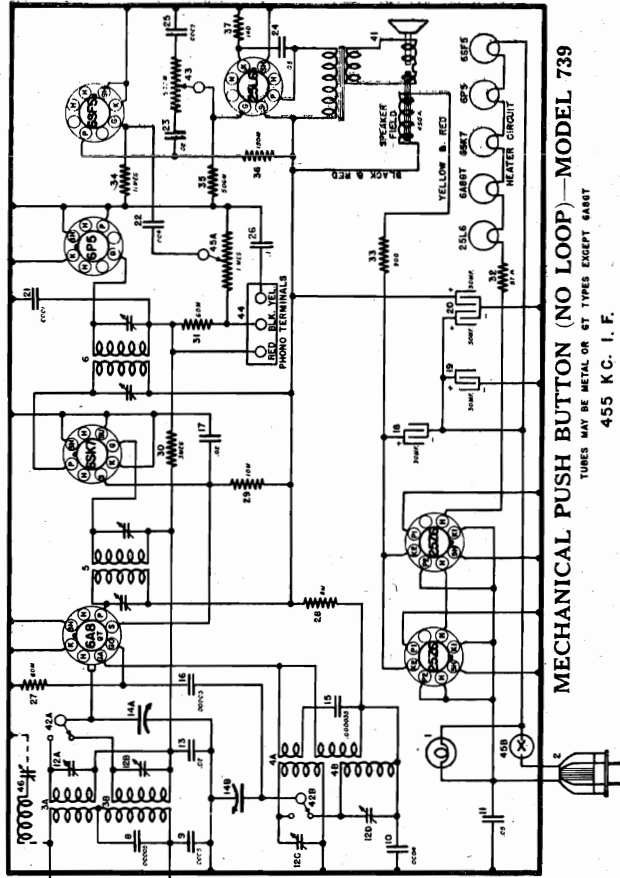

MODELS 739, 7739
Voltage, Alignment

THE CROSLEY CORP.

MODELS 739, 7739
J739, J7739
Voltage, Alignment

MODELS 739, 7739, J-739 AND J-7739

SOCKET VOLTAGE READINGS AT 117.5 VOLT LINE

Tube	Function	PIN NUMBER							
		No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 7	No. 8
6A8GT	Oscillator-Modulator	—	H	123	80	-11	123	H	—
6SK7	I-F. Amplifier	—	H	—	Grid	—	80	H	123
6P5	Diode	—	H	—	—	Grid	—	H	—
6SF5	1st Audio	—	—	Grid	V.C.	68	—	H	H
25L6	Output	—	H	115	123	Grid	—	H	+6
2-25Z6	Rectifier	—	H	117.5 A.C.	220	—	—	H	115

Drop across speaker field 35 volts, 739—65 volts on 7739.

Drop across Item 33—72 volts.

Maximum power output 4.3 watts @ 125 volts line.

Power consumption @ 117.5 volts line—63 watts.

H = heater.

ALIGNMENT PROCEDURE

All circuits have been accurately adjusted at the factory and normally should need no further adjustment. However, if it is definitely known that an adjustment is necessary the circuits can best be properly aligned with the use of a modulated signal generator and an output meter.

NOTE: The circuit of this receiver is such that if the signal generator has one side of the line connected to the case or ground side and the generator and receiver are plugged into the same line, serious damage may result to either or both instruments. ALWAYS ISOLATE SIGNAL GENERATOR GROUND LEAD BY INSERTING A .01 mf. OR SMALLER CONDENSER IN SERIES WITH THE LEAD BEFORE CONNECTING TO THE CHASSIS.

CONNECTING OUTPUT METER

One terminal of the output meter should be connected to the plate (No. 3 pin) and the other terminal to the screen (No. 4 pin) of the 25L6GT output tube. Be sure the meter is protected from D. C. by connecting a .25 mf. condenser in series with one of the leads.

1.—I-F Amplifier Alignment

(a) Connect the output lead of the signal generator through a .02 mf. condenser to the top (GRID) cap of the 6A8GT tube (leaving the tubes grid connector in place) or to the antenna lead.

(b) Connect the ground lead of the signal generator through a .01 mf. (or smaller, .001 mf.) condenser to the chassis.

(c) Adjust station selector so that the rotor plates of the gang are completely disengaged, turn band to B. C. position and turn the volume control to maximum.

(d) Set the signal generator to 455 kc.

(e) Adjust the trimmer condensers on the 2nd I-F transformer for maximum output.

(f) Adjust the trimmer condensers on the 1st I-F transformer for maximum output.

(g) Repeat (e) and (f) for more accurate adjustments. IN ORDER TO PREVENT A. V. C. ACTION, ALWAYS USE THE LOWEST SIGNAL GENERATOR OUTPUT THAT WILL GIVE A REASONABLE OUTPUT METER READING.

2.—Aligning R-F Amplifier

(a) Connect the signal generator output lead through a .0001 mf. condenser to the antenna lead (YELLOW OR BLUE) and the generator ground lead to the Black lead of the receiver. Turn band switch to B. C. band, open gang all the way and turn volume control on full and tone control to treble position.

(b) Set signal generator to 1725 kilocycles. (Generator should be set to 1620 kilocycles for Model 7739).

(c) Adjust B. C. oscillator trimmer for maximum output (receiver does not have to tune through this signal).

(d) Set signal generator to 1400 kilocycles.

(e) Tune in generator signal on receiver by means of manual tuning knob.

(f) Adjust B. C. antenna trimmer for maximum output. DO NOT readjust oscillator trimmer.

(g) Repeat above procedure for more accurate adjustments.

(h) Set signal generator to 600 kilocycles.

(i) Tune in 600 kilocycle signal on receiver. While rocking the gang back and forth adjust the B. C. oscillator series condenser for maximum output.

(j) Repeat operations (d), (e) and (f) to correct any change caused by series alignment.

(k) Connect the signal generator output lead through a 250 ohm carbon resistor to the antenna lead of the receiver. Turn band switch to S. W. position, open gang condenser all the way, and turn volume on full, etc.

(l) Set signal generator to 18.3 megacycles.

(m) Adjust S. W. oscillator trimmer for maximum output.

(n) Set signal generator to 18 megacycles.

(o) Tune in 18 mc. signal with manual control, then adjust the S. W. antenna trimmer condenser for maximum output.

Check to see that receiver is aligned on the fundamental and not the image frequency. Increase signal generator output approximately 10 times and tune in image frequency (2 x 455 kc. + fundamental) which will be approximately 910 kilocycles less than 18 mc. as indicated by the dial calibrations (17.1 mc.). If correctly aligned, the image will come in as stated but will be much weaker than the fundamental.

MODELS 739, 7739
Socket, Trimmers
Chassis, Notes

THE CROSLLEY CORP.

MODELS J739, J7739
Socket, Trimmers

The circuit used is a conventional superheterodyne without regeneration using a 6A8GT as Oscillator-Modulator (biased 6K8GT in some of the earlier models), a 6SK7 as I-F amplifier, a 6P5GT as diode detector, A. V. C., a 6SF5 as first audio amplifier, a 25L6GT as beam power output and two 25Z6GT rectifiers (connected for voltage doubling). A. V. C. is applied to the oscillator-modulator and I-F tubes. All tubes are operated at zero bias except the 25L6GT which obtains its bias from the voltage drop across a 140 ohm resistor between cathode and chassis.

Model 7739 uses a tapped volume control for variable level bass compensation. Models of either chassis in the later series are equipped with terminals for connecting a phonograph attachment.

Models J-739 and J-7739 are the same as models 739 and 7739 except for the following:

Model J-739 differs from Model 739 in that the negative or ground return is isolated from the chassis by a .2 mf.—160 volt condenser. For alignment procedure use same as outlined for Model 739. The voltage readings are the same as given for Model 739 except the MEASUREMENTS SHOULD BE TAKEN BETWEEN SOCKET CONTACTS AND THE LOW SIDE OF THE VOLUME CONTROL.

Model J-7739 is the same as Model 7739 except that Model J-7739 has a 1 to 1 isolating power transformer. For alignment procedure and socket voltages use same as given for the Model 739 etc.

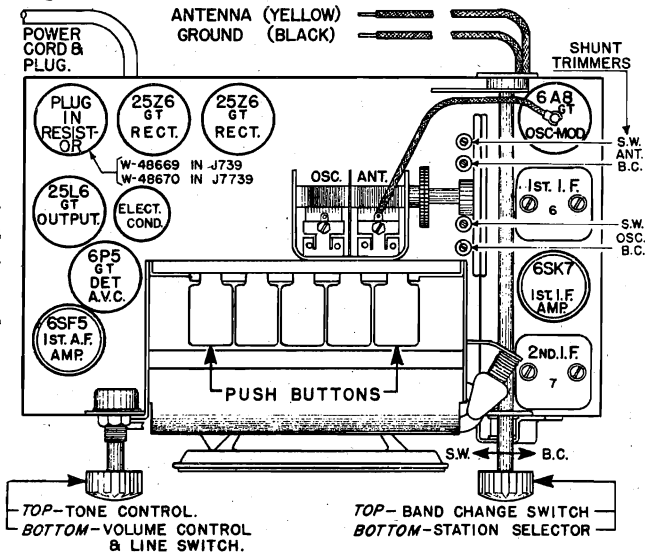


Fig. 2-C—Top View Models J-739, J-7739

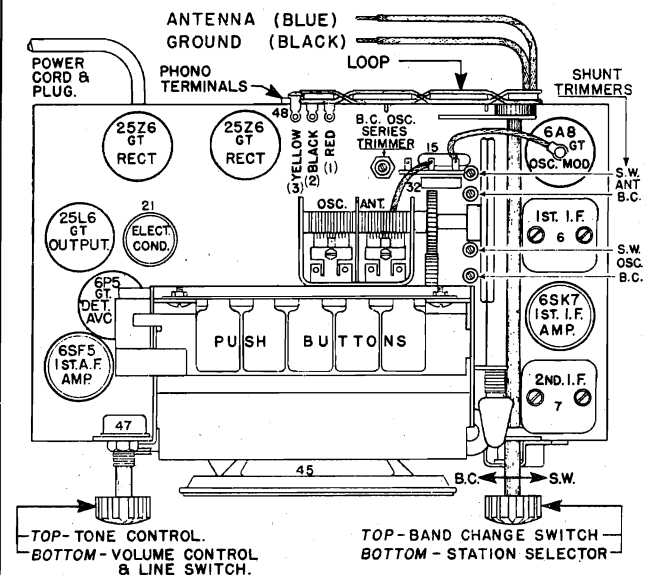


Fig. 2-A—Top View Model 739

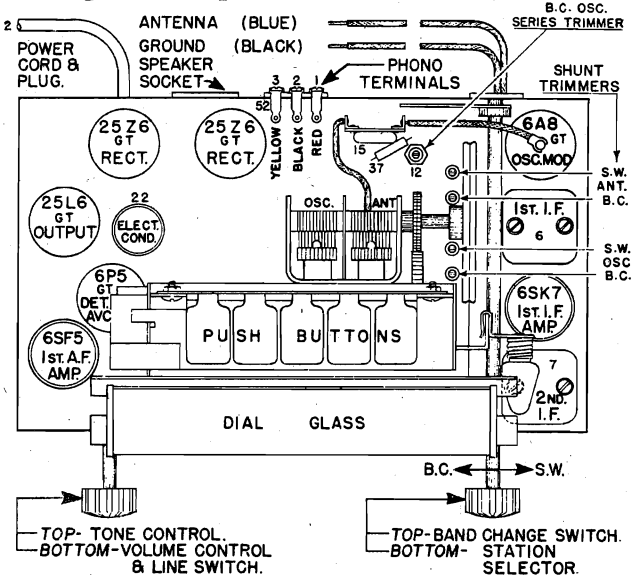


Fig. 2-B—Top View Model 7739

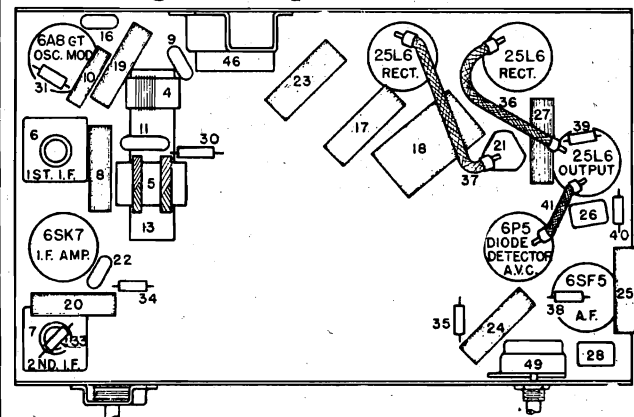


Fig. 3-A—Bottom View Model 739

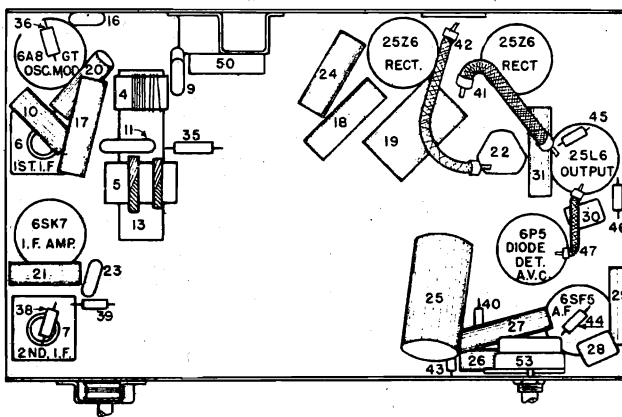


Fig. 3-B—Bottom View Model 7739

MODELS 819 (2 Types),
J819,1019
Parts Lists

THE CROSLLEY CORP.

PARTS LIST—MODEL 819
(Series Using 25Z6 Rectifiers)


Item No.	Part No.	Description	Item No.	Part No.	Description
1	G1	Dial Lamp—110 Volt Socket—Blat Lamp	1	G1	Dial Lamp—110 Volt Socket—Blat Lamp
2	G198	Power Cord and Plug	2	G198	Power Cord and Plug
3	G199	Antenna Coil, H. F.	3	G199	Antenna Coil, H. F.
4	G196	Antenna Coil, Pol.	4	G196	Antenna Coil, Pol.
5	G197	Antenna Coil, H. F.	5	G197	Antenna Coil, H. F.
6	G198	Oscillator Coil, Pol.	6	G198	Oscillator Coil, Pol.
7	G199	Oscillator Coil, H. F.	7	G199	Oscillator Coil, H. F.
8	G4	3 Section Ant. Shunt Trimmer	8	G4	3 Section Ant. Shunt Trimmer
9	G12	Condenser, .05 Mf. 200 V.	9	G12	Condenser, .05 Mf. 200 V.
10	G12	Condenser, .05 Mf. 200 V.	10	G12	Condenser, .05 Mf. 200 V.
11	G228	2nd I.F. Assy.—455 Kc.	11	G228	2nd I.F. Assy.—455 Kc.
12	G3	Condenser, .005 Mf. Mica	12	G3	Condenser, .005 Mf. Mica
13	G3	Condenser, .005 Mf. Mica	13	G3	Condenser, .005 Mf. Mica
14	G4	3 Section Ant. Shunt Trimmer	14	G4	3 Section Ant. Shunt Trimmer
15	G3	Condenser, .005 Mf. Mica	15	G3	Condenser, .005 Mf. Mica
16	G11	Condenser, .00185 Mf. Mica	16	G11	Condenser, .00185 Mf. Mica
17	G14	Condenser, .01 Mf. 400 V.	17	G14	Condenser, .01 Mf. 400 V.
18	G14	Condenser, .01 Mf. 400 V.	18	G14	Condenser, .01 Mf. 400 V.
19	G11	Condenser, .00185 Mf. Mica	19	G11	Condenser, .00185 Mf. Mica
20	G14	Condenser, .01 Mf. 400 V.	20	G14	Condenser, .01 Mf. 400 V.
21	G77	Condenser, .001 Mf. Mica	21	G77	Condenser, .001 Mf. Mica
22	G13	Condenser, .05 Mf. 200 V.	22	G13	Condenser, .05 Mf. 200 V.
23	G13	Condenser, .05 Mf. 200 V.	23	G13	Condenser, .05 Mf. 200 V.
24	G2	Condenser, .01 Mf. 400 V.	24	G2	Condenser, .01 Mf. 400 V.
25	G2	Condenser, .01 Mf. 400 V.	25	G2	Condenser, .01 Mf. 400 V.
26	G2	Condenser, .01 Mf. 400 V.	26	G2	Condenser, .01 Mf. 400 V.
27	G2	Condenser, .01 Mf. 400 V.	27	G2	Condenser, .01 Mf. 400 V.
28	G2	Condenser, .01 Mf. 400 V.	28	G2	Condenser, .01 Mf. 400 V.
29	G2	Condenser, .01 Mf. 400 V.	29	G2	Condenser, .01 Mf. 400 V.
30	G2	Condenser, .01 Mf. 400 V.	30	G2	Condenser, .01 Mf. 400 V.
31	G2	Condenser, .01 Mf. 400 V.	31	G2	Condenser, .01 Mf. 400 V.
32	G2	Condenser, .01 Mf. 400 V.	32	G2	Condenser, .01 Mf. 400 V.
33	G2	Condenser, .01 Mf. 400 V.	33	G2	Condenser, .01 Mf. 400 V.
34	G2	Condenser, .01 Mf. 400 V.	34	G2	Condenser, .01 Mf. 400 V.
35	G2	Condenser, .01 Mf. 400 V.	35	G2	Condenser, .01 Mf. 400 V.
36	G2	Condenser, .01 Mf. 400 V.	36	G2	Condenser, .01 Mf. 400 V.
37	G1	Condenser, .006 Mf. 160 V.	37	G1	Condenser, .006 Mf. 160 V.
38	G1	Condenser, .006 Mf. 160 V.	38	G1	Condenser, .006 Mf. 160 V.
39	G1	Condenser, .006 Mf. 160 V.	39	G1	Condenser, .006 Mf. 160 V.
40	G1	Condenser, .006 Mf. 160 V.	40	G1	Condenser, .006 Mf. 160 V.
41	G1	Condenser, .006 Mf. 160 V.	41	G1	Condenser, .006 Mf. 160 V.
42	G1	Condenser, .006 Mf. 160 V.	42	G1	Condenser, .006 Mf. 160 V.
43	G1	Condenser, .006 Mf. 160 V.	43	G1	Condenser, .006 Mf. 160 V.
44	G1	Condenser, .006 Mf. 160 V.	44	G1	Condenser, .006 Mf. 160 V.
45	G1	Condenser, .006 Mf. 160 V.	45	G1	Condenser, .006 Mf. 160 V.
46	G1	Condenser, .006 Mf. 160 V.	46	G1	Condenser, .006 Mf. 160 V.
47	G1	Condenser, .006 Mf. 160 V.	47	G1	Condenser, .006 Mf. 160 V.
48	G1	Condenser, .006 Mf. 160 V.	48	G1	Condenser, .006 Mf. 160 V.
49	G1	Condenser, .006 Mf. 160 V.	49	G1	Condenser, .006 Mf. 160 V.
50	G1	Condenser, .006 Mf. 160 V.	50	G1	Condenser, .006 Mf. 160 V.
51	G1	Condenser, .006 Mf. 160 V.	51	G1	Condenser, .006 Mf. 160 V.
52	G1	Condenser, .006 Mf. 160 V.	52	G1	Condenser, .006 Mf. 160 V.
53	G1	Condenser, .006 Mf. 160 V.	53	G1	Condenser, .006 Mf. 160 V.
54	G1	Condenser, .006 Mf. 160 V.	54	G1	Condenser, .006 Mf. 160 V.
55	G1	Condenser, .006 Mf. 160 V.	55	G1	Condenser, .006 Mf. 160 V.
56	G1	Condenser, .006 Mf. 160 V.	56	G1	Condenser, .006 Mf. 160 V.
57	G1	Condenser, .006 Mf. 160 V.	57	G1	Condenser, .006 Mf. 160 V.

PARTS LIST — MODELS 819, J-819, 1019
(Model with 5Y3G Rectifiers)



Item No.	Part No.	Description	Item No.	Part No.	Description
62	G31	Power Trans., 110 V.—60 Cycle	62	G31	Power Trans., 110 V.—60 Cycle
63	G31	Power Trans., 110 V.—60 Cycle	63	G31	Power Trans., 110 V.—60 Cycle
64	G31	Power Trans., 220 V.—50-60 Cycle	64	G31	Power Trans., 220 V.—50-60 Cycle
65	G31	Power Trans., 110 V.—60 Cycle—1819	65	G31	Power Trans., 110 V.—60 Cycle—1819
66	G31	Push Button Tuning Unit	66	G31	Push Button Tuning Unit
67	G31	Loop Antenna—B. C.	67	G31	Loop Antenna—B. C.
68	G205	Antenna Coil—S. W.	68	G205	Antenna Coil—S. W.
69	G206	Antenna Coil—S. W.	69	G206	Antenna Coil—S. W.
70	G210	Oscillator Coil—B. C.	70	G210	Oscillator Coil—B. C.
71	G210	Oscillator Coil—Pol.	71	G210	Oscillator Coil—Pol.
72	G210	Oscillator Coil—S. W.	72	G210	Oscillator Coil—S. W.
73	G228	1st I.F. Assy.—455 Kc.	73	G228	1st I.F. Assy.—455 Kc.
74	G228	2nd I.F. Assy.—455 Kc.	74	G228	2nd I.F. Assy.—455 Kc.
75	G3	Condenser, .005 Mf. Mica	75	G3	Condenser, .005 Mf. Mica
76	G3	Condenser, .005 Mf. Mica	76	G3	Condenser, .005 Mf. Mica
77	G3	Condenser, .005 Mf. Mica	77	G3	Condenser, .005 Mf. Mica
78	G3	Condenser, .005 Mf. Mica	78	G3	Condenser, .005 Mf. Mica
79	G3	Condenser, .005 Mf. Mica	79	G3	Condenser, .005 Mf. Mica
80	G3	Condenser, .005 Mf. Mica	80	G3	Condenser, .005 Mf. Mica
81	G3	Condenser, .005 Mf. Mica	81	G3	Condenser, .005 Mf. Mica
82	G3	Condenser, .005 Mf. Mica	82	G3	Condenser, .005 Mf. Mica
83	G3	Condenser, .005 Mf. Mica	83	G3	Condenser, .005 Mf. Mica
84	G3	Condenser, .005 Mf. Mica	84	G3	Condenser, .005 Mf. Mica
85	G3	Condenser, .005 Mf. Mica	85	G3	Condenser, .005 Mf. Mica
86	G3	Condenser, .005 Mf. Mica	86	G3	Condenser, .005 Mf. Mica
87	G3	Condenser, .005 Mf. Mica	87	G3	Condenser, .005 Mf. Mica
88	G3	Condenser, .005 Mf. Mica	88	G3	Condenser, .005 Mf. Mica
89	G3	Condenser, .005 Mf. Mica	89	G3	Condenser, .005 Mf. Mica
90	G3	Condenser, .005 Mf. Mica	90	G3	Condenser, .005 Mf. Mica
91	G3	Condenser, .005 Mf. Mica	91	G3	Condenser, .005 Mf. Mica
92	G3	Condenser, .005 Mf. Mica	92	G3	Condenser, .005 Mf. Mica
93	G3	Condenser, .005 Mf. Mica	93	G3	Condenser, .005 Mf. Mica
94	G3	Condenser, .005 Mf. Mica	94	G3	Condenser, .005 Mf. Mica
95	G3	Condenser, .005 Mf. Mica	95	G3	Condenser, .005 Mf. Mica
96	G3	Condenser, .005 Mf. Mica	96	G3	Condenser, .005 Mf. Mica
97	G3	Condenser, .005 Mf. Mica	97	G3	Condenser, .005 Mf. Mica
98	G3	Condenser, .005 Mf. Mica	98	G3	Condenser, .005 Mf. Mica
99	G3	Condenser, .005 Mf. Mica	99	G3	Condenser, .005 Mf. Mica
100	G3	Condenser, .005 Mf. Mica	100	G3	Condenser, .005 Mf. Mica

MODELS 819, J819
Schematics



THE CROSLLEY CORP.

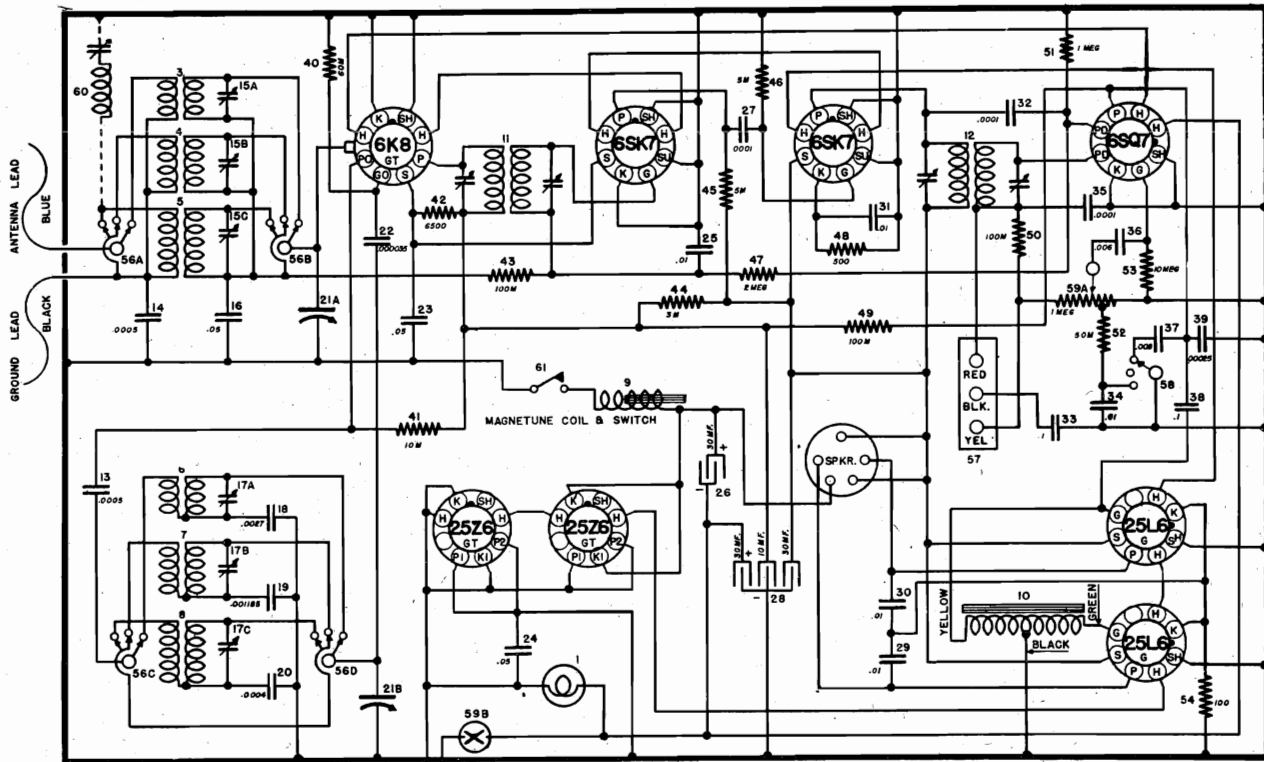

MODEL -- 819
455 KC. I.F.

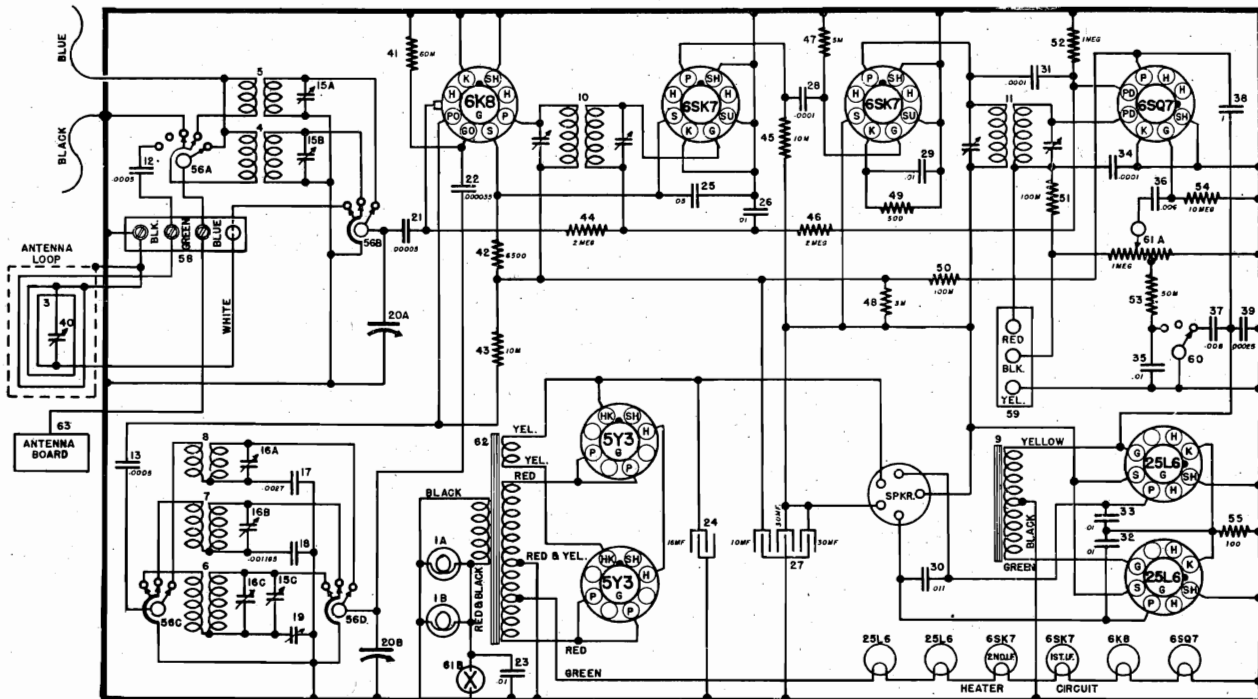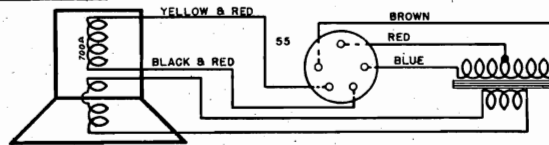

MODEL --- J-819
455 KC. I.F.

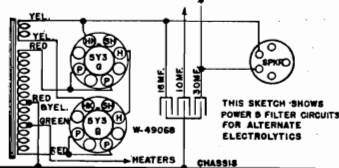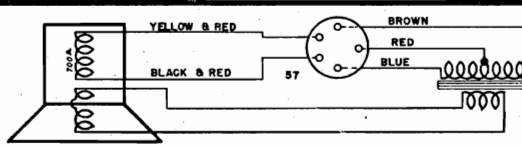

THE CROSLY CORP.

MODELS 819, J819, 1019
Socket, Trimmers, Chassis

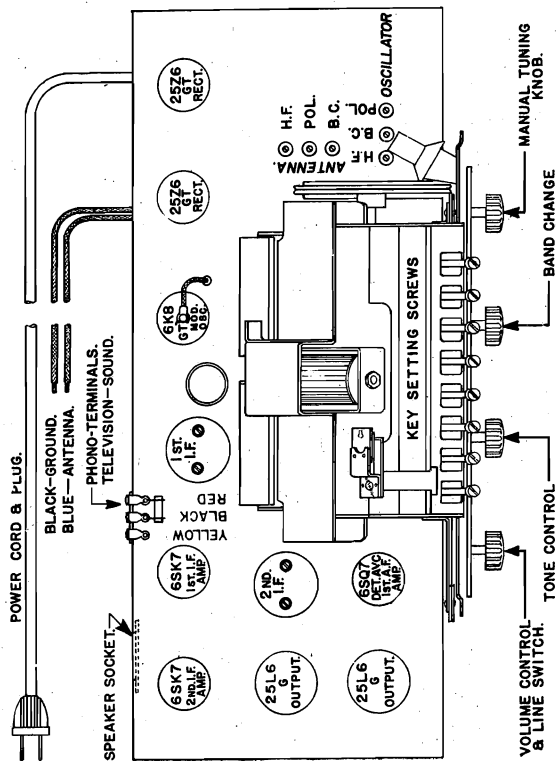


Fig. 3-A—Top View Model 819 (No Loop)

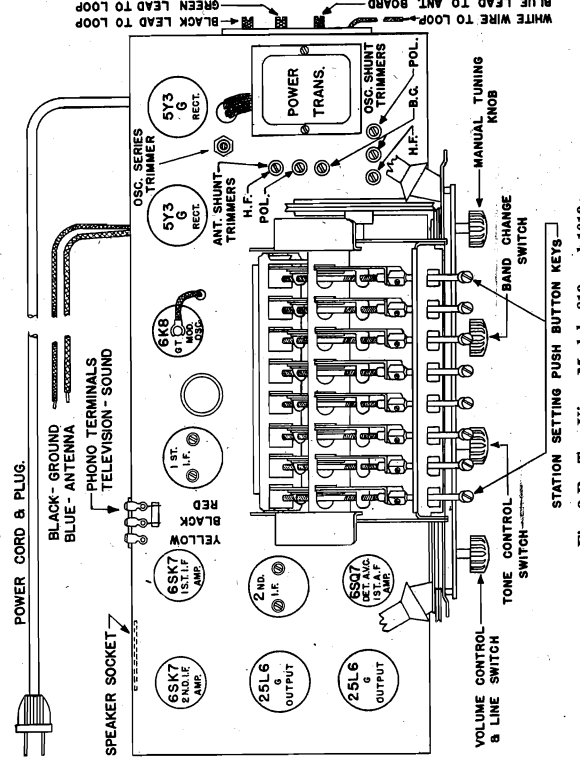


Fig. 2-B—Top View Models 819 and 1019

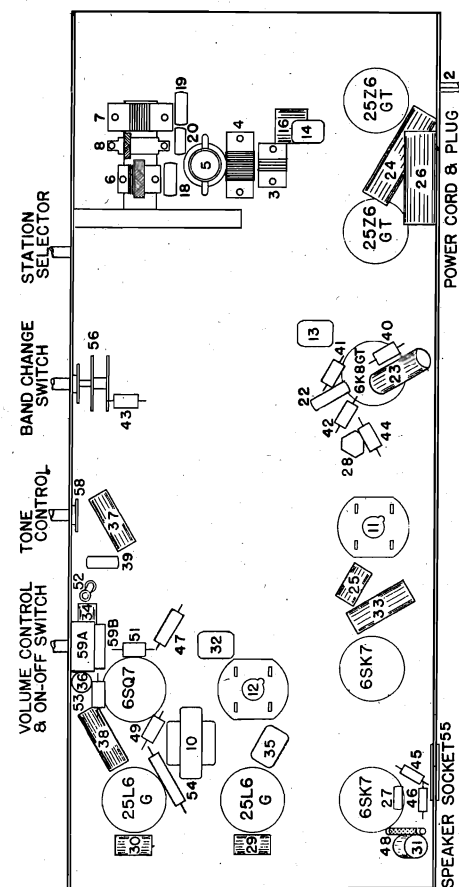


Fig. 3-A—Bottom View Model 819 (No Loop)

The circuit is a conventional superheterodyne with no regeneration, having two stages of LF amplification, the first of which is resistance coupled, variable level bias compensation, a three position tone control and impedance coupled push pull beam power output. No power transformers were used on those chassis which used two 25Z6CT Rectifiers. The power transformer used on the later versions having two 5Y3G Rectifiers is quite different from the regular type power transformer used in Model J-819, and care should be exercised when checking its voltages.

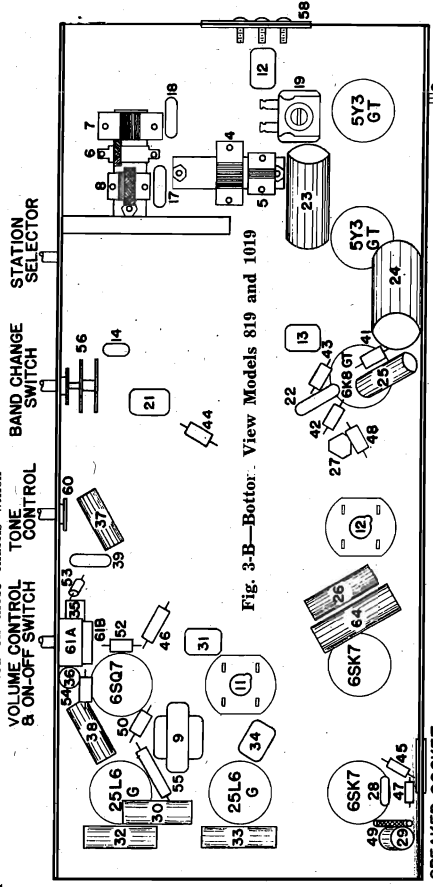


Fig. 3-B—Bottom View Models 819 and 1019

Model 1019 is the same as model 819 except for the later releases had a mechanical push button tuning system, loop antenna, two 5Y3G Rectifier tubes and a power transformer. Models J-819 and 1019 falls in this group.
Model 1019 is the same as model 819 except for the later releases had an electrical (magnatone) push button tuning system and two 25Z6CT Rectifier tubes. The

MODELS 819, J819, 1019
Voltage, Alignment
Drive Cord Data

THE CROSLLEY CORP.

mental and not the image frequency. When correctly aligned the image should be heard approximately 17.4 on the dial but will be comparatively weak compared to the fundamental signal.

(n) Set signal generator to 18.0 megacycles.

(o) Tune in the signal generator signal for maximum output; then adjust the H. F. antenna shunt trimmers for maximum output. When aligning the RF circuits always use the lowest signal input, which will give a reasonable indication on the output meter, to prevent A.V.C. action.

REPLACING DRIVE CORD

- (1) Remove the broken drive cord, saving the small metal cord clamp, the tension spring and pointer.
 - (2) Carefully remove the dial glass.
 - (3) Cut a piece of drive cord about 85 inches long. Fasten the tension spring approximately one inch from one end.
 - (4) Open the condenser gang all the way. The eyelet in the large drive pulley should be near the top with the gang in this position.
 - (5) Hook the loose end of the tension spring on small ear formed in pulley and thread the drive cord through the eyelet in pulley rim from the inside.
 - (6) Bring cord forward over pulley then down to small pulley on manual drive shaft, make one complete turn around small pulley in a clockwise direction.
 - (7) Continue cord from the under side of drive shaft pulley over the lower left hand idler pulley, then making a half turn over left hand idler continue over to the top of pulley on drive shaft.
 - (8) Continue around pulley in a clockwise direction over to lower left hand idler, over lower left hand idler and up to upper left hand idler pulley, continue cord over upper left hand idler to upper right hand idler pulley.
 - (9) Bring cord over right hand idler pulley and down and under and around large drive pulley to eyelet.
 - (10) Insert end through the eyelet. Tie securely to tension spring. The cord should be so tied that the tension spring when hooked on ear formed in pulley, will be stretched to approximately 1 1/4 inches in length.
 - (11) Hook the pointer on drive cord, the solid end pointer to the drive cord between the upper left hand and right hand idler pulleys. The cutout end of pointer is fastened to the top cord between the lower left hand and the pulley on the drive shaft. Replace dial glass.
- Before clamping pointer or cementing it to the drive cord, open gang all the way. The pointer should then split the last graduation on the dial. Check travel from end to end then fasten pointer securely.
- (12) Replace the cord clamp on drive cord inside the large drive pulley. The position of clamp should be no more than 1/16" from inside end of eyelet.

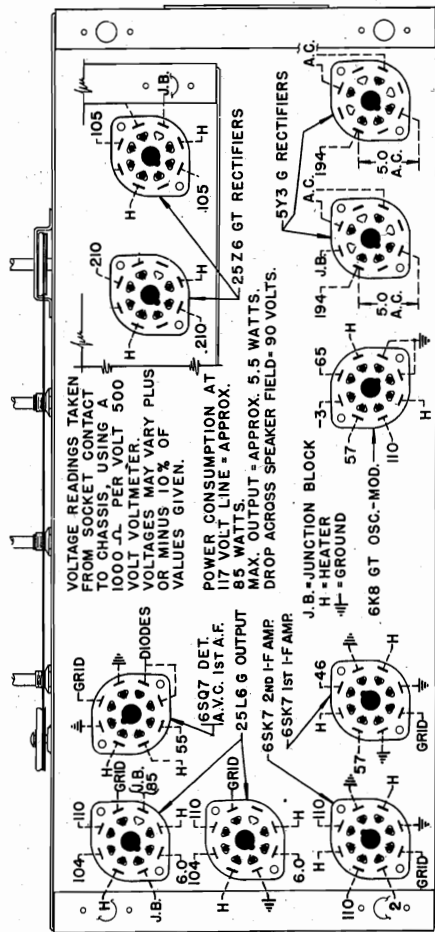


Fig. 4—Socket Voltages Models 819, J-819, 1019

Aligning The I-F Amplifier To 455 Kilocycles.

- (a) Connect the output lead of the signal generator through a .0002 mf. condenser to the receiver antenna lead (Blue). Connect the signal generator ground lead through a .01 mf. or smaller condenser to the receiver ground lead (Black).
- (b) Set the signal generator to 455 kilocycles. Turn the receiver band switch to the Broadcast band (left), the tone control switch to the speech position (left), open the gang condenser all the way then turn the volume control on full (all the way to the right).
- (c) Adjust the two trimmer condensers on the second I-F assembly for maximum output (Fig. 2).
- (d) Adjust the two trimmer condensers on the first I-F assembly for maximum output. (Fig. 2).
- (e) Repeat (c) and (d) for more accurate adjustments.


Aligning The R-F Amplifier.

- (a) For aligning the broadcast band the setup remains the same. Using a .0002 mf. condenser for a dummy antenna and etc.
- (b) For models without loop antenna set the signal generator to 1725 kilocycles. For models with a loop antenna set the signal generator to 1550 kilocycles. Open condenser gang all the way, turn band switch to left (B. C.), tone control to left (speech) and the volume control on full.
- (c) For models without the loop antenna adjust B. C. oscillator shunt trimmer condenser (Fig. 2) for maximum output (gang does not have to tune through this signal). For models with a loop antenna there are two oscillator shunt trimmer condensers as will be noted in figure 2. Close the front oscillator shunt trimmer all the way, then open about 1/2 turn. Proceed to tune in with the other (rear) trimmer the 1550 kilocycle signal for maximum output.

- (d) Set the signal generator to 1400 kilocycles.
 - (e) Tune the receiver to generator signal for maximum output (approximately 140 on the dial).
 - (f) On models without the loop adjust the B. C. antenna shunt trimmer for maximum output, see (Fig. 2). On models with a loop a B. C. antenna shunt trimmer is located on top the loop antenna; adjust for maximum output.
- Models equipped with a loop antenna have provisions for series aligning the oscillator circuit:
- (1) Set signal generator to 600 kilocycles.
 - (2) Tune in generator signal on receiver.
 - (3) While rocking tuning condenser back and forth adjust oscillator series trimmer (Fig. 2) for maximum output. Then repeat (d) and (f) for more accurate alignment.
 - (g) Change dummy antenna from a .0002 mf. condenser to a 250 carbon resistor.
 - (h) For models without loop antenna set the signal generator to 5.8 megacycles. Open gang condenser, turn band switch to center position, T. C. to left (speech) and volume on full. For models with a loop antenna set signal generator to 5.0 megacycles.
 - (i) Adjust "Pol." oscillator shunt trimmer condenser (Fig. 2) for maximum output.
 - (j) For models without loop antenna set signal generator to 5.5 megacycles. For models with a loop antenna set signal generator to 4.0 megacycles.
 - (k) Tune in generator signal with manual control for maximum output (approximately 5.5 or 4.0 megacycles on the dial). Adjust the "Pol." antenna shunt trimmer condenser for maximum output.
 - (l) Set signal generator to 18.3 megacycles.
 - (m) With gang open and band switch turned to the right (H. F.), adjust the H. F. (high frequency) oscillator trimmer (Fig. 2) for maximum output. Care should be taken to align the oscillator on the funda-

THE CROSLY CORP.

MODELS 5519, 5529, 6519
J5519, J5529
Schematics

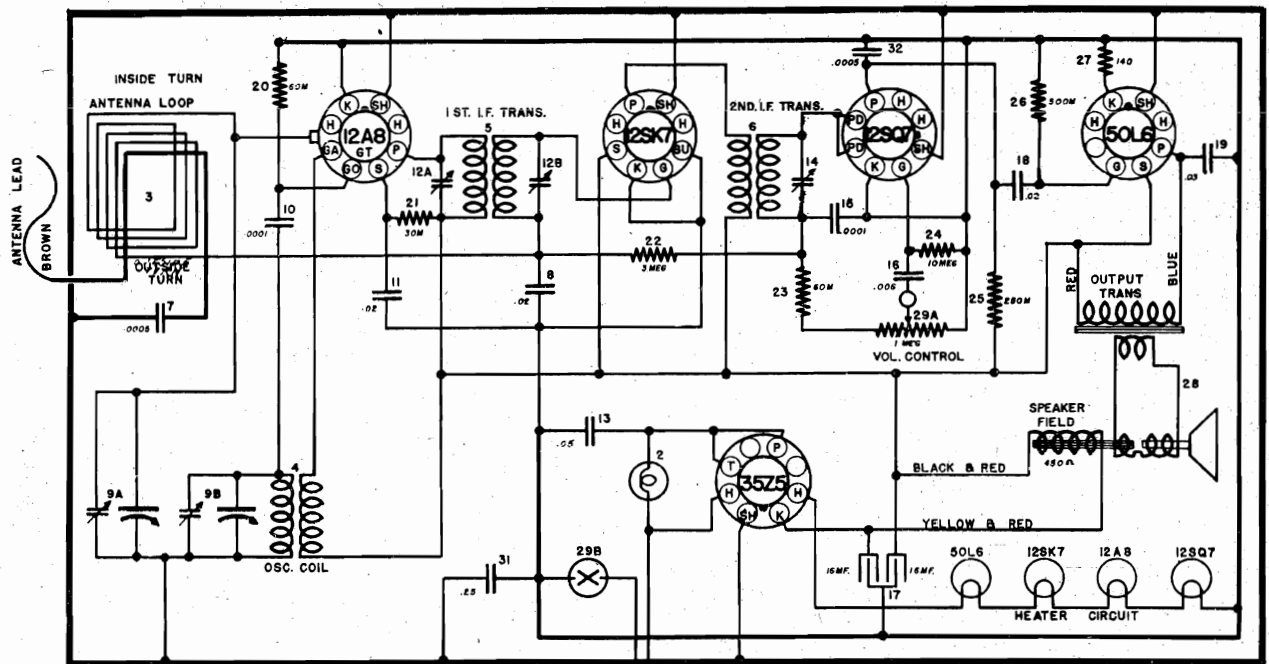

TUBES MAY BE METAL OR GT TYPE EXCEPT 12A8


455 KC. I.F.

MODEL -- J5519 & J5529

FEBRUARY, 1940

MODEL J-5519—Same as model 5519 except the negative "B" circuit or ground return (one side of the

line) is isolated from the chassis by a .25MF. condenser.

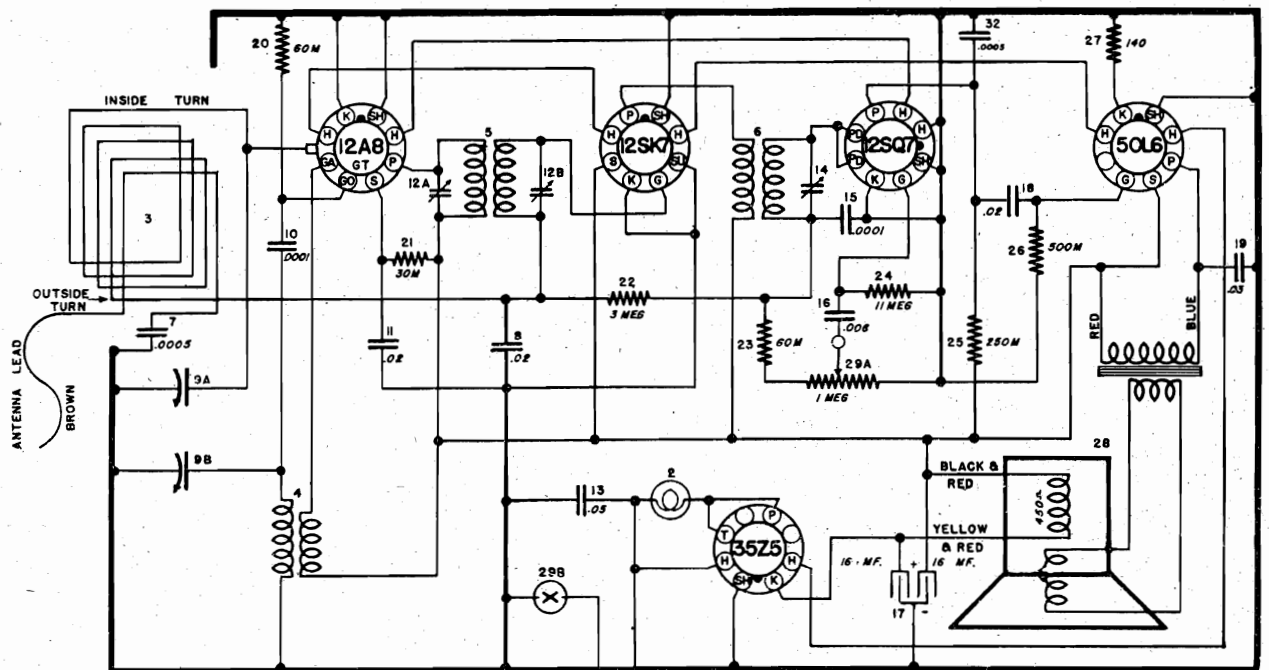

TUBES MAY BE METAL OR GT TYPE EXCEPT 12A8

MODELS --- 5519 & 5529 & 6519

455 KC. I.F.

MODEL J-5529—Same as model 5529 except the negative "B" or ground return circuit (one side of the

line) is isolated from the chassis by a .25 mfd. condenser.



MODELS 5519, 5529, 6519

J5519, J5529

Socket, Trimmers, Chassis

Voltage, Alignment, Notes

THE CROSLLEY CORP.

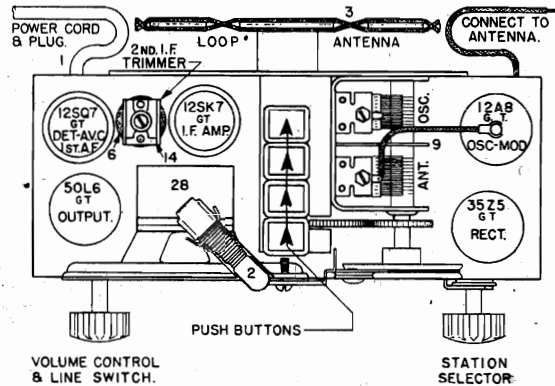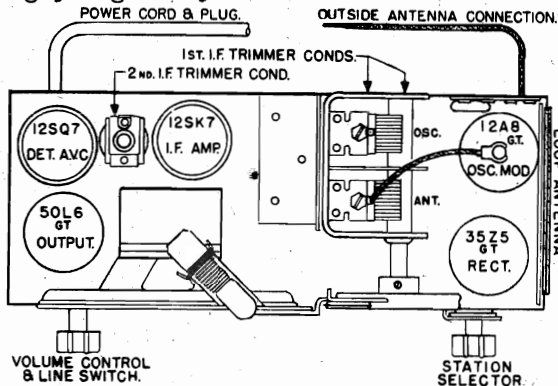

Models 5519, J-5519, 6519 Fig. 2—Top View Models 5529, J-5529

TUBE SOCKET VOLTAGE READINGS

Tube	Function	H	P	S	Su	K	Go	Ca
12A8GT	Oscillator-Modulator	12	90	48	—	3	-4	50
12SK7GT	I-F. Amplifier	12	90	—	—	—	—	—
12SQ7GT	Det. AVC, A-F Amplifier	12	40	—	—	—	—	—
50L6GT	Output	50	84	90	—	6	—	—
35Z5GT	Rectifier	35	117.5	—	—	117	—	—

Power output approximately 2 watts.
 Power consumption approximately 27 watts.
 Voltage drop across speaker field 25 volts.
 All voltages except filaments will be approximately 10% lower if measured on 117.5 volts DC power supply.

ALIGNMENT PROCEDURE

The chassis of this receiver is connected to one side of the power supply and for this reason all test equipment should be thoroughly insulated in order that the power supply will not become short circuited while aligning the receiver. (J Models have a .25 mf. condenser isolating line from chassis).

CONNECTING OUTPUT METER

Connect one terminal of the output meter to the plate and the other terminal to the screen of the 50L6GT output tube. Be certain that the meter is protected from DC by connecting a condenser (.1 mfd. or larger—not electrolytic) in series with one of the leads.

Tuning the I-F Amplifier To 455 Kilocycles.

(a) Connect the output of the signal generator through a 50 mmf. condenser to the antenna connection on the receiver. Do not use a ground return from the signal generator unless it is found to be absolutely necessary. If it is found to be necessary, a small condenser (approximately .001 mfd.) should be connected in series with the ground terminal of the signal generator and the receiver chassis. KEEP THE GENERATOR LEADS AS FAR AS POSSIBLE FROM THE GRID LEADS OF THE OTHER SCREEN GRID TUBES.

(b) Set the station selector so that the plates of the condenser gang are completely out of mesh and turn the volume control to the right (ON).

(c) Set the signal generator to 455 kilocycles.

(d) Adjust the 2nd I-F trimmer condenser, Item 14, located on top of coil (Fig. 2) for maximum reading on the output meter.

(e) Adjust the 1st I-F trimmer condensers located on the rear of chassis for maximum output.

(f) Repeat operations (d) and (e) for more accurate adjustments.

ALWAYS USE THE LOWEST SIGNAL GENERATOR OUTPUT THAT WILL GIVE A REASONABLE READING ON THE OUTPUT METER.

Aligning the R-F Amplifier.

(a) Set the signal generator to 1725 kilocycles.

(b) With the condenser gang turned to the minimum capacity position, adjust the trimmer condenser on the "OSC" section of the gang so that the 1725 kilocycle signal is heard. It is not necessary that the receiver tune through this signal.

(c) Set the signal generator to 1400 kilocycles.

(d) Tune-in the 1400 kilocycle signal in the region of 140 on the dial for maximum output.

(e) Adjust the trimmer condenser located on the "ANT" section of the gang for maximum output.

NOTE: Do not readjust the "OSC" trimmer.

(f) Repeat operations (d) and (e) for more accurate adjustments.

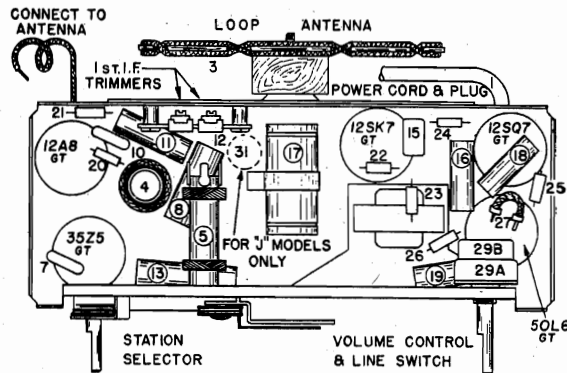


Fig. 3—Bottom View Models 5519, J-5519, 6519, 5529, J-5529


MODEL 6519—Same electrically as model 5519. Has special spider loop mounted to a bracket on right side of chassis and is housed in a wood cabinet.

MODEL 5529—Same electrically as model 5519. Has a four station mechanical push button tuning system. There are two series of this model in the field, one series has a spider form loop antenna mounted on the BACK of the receiver and the other series has the pancake type loop mounted in the cabinet between chassis and right end of the cabinet.

MODEL 5519—Five tube superheterodyne with a pancake type loop antenna mounted between chassis and right side of the cabinet. Has a handle on top for carrying.

DETROLA CORP.

MODEL 297
 MODELS 305, 3051
 Schematics, Socket
 Alignment, Trimmers

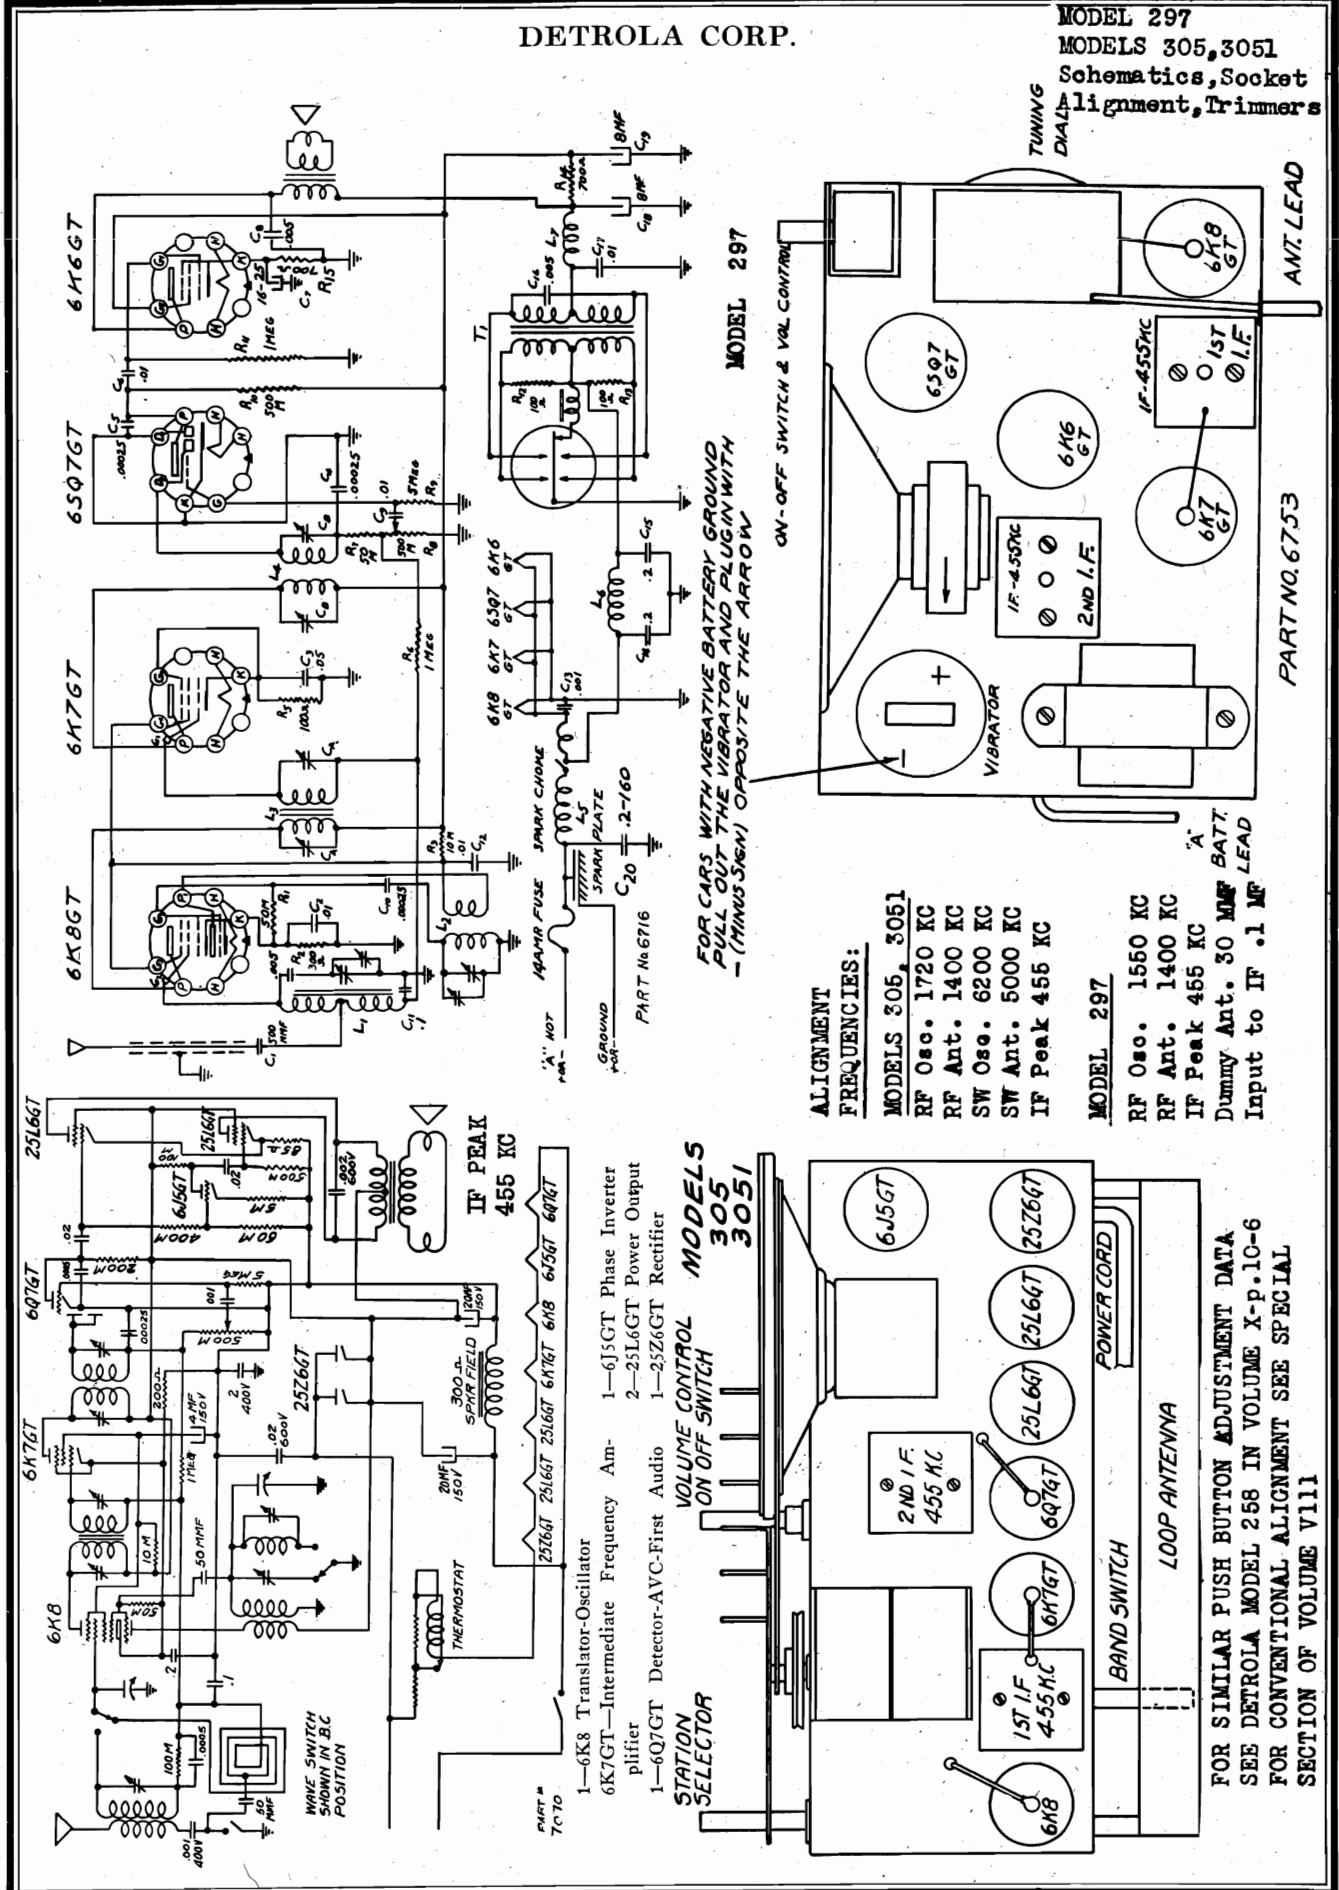

FOR CARS WITH NEGATIVE BATTERY GROUND
 PULL OUT THE VIBRATOR AND PLUG IN WITH
 - (MINUS SIGN) OPPOSITE THE ARROW


ALIGNMENT
 FREQUENCIES:

- MODELS 305, 3051
- RF Osc. 1720 KC
- RF Ant. 1400 KC
- SW Osc. 6200 KC
- SW Ant. 5000 KC
- IF Peak 455 KC

MODEL 297

- RF Osc. 1550 KC
- RF Ant. 1400 KC
- IF Peak 455 KC
- Dummy Ant. 30 MMF BATT.
- Input to IF .1 MF

STATION
 SELECTOR
 VOLUME CONTROL
 ON OFF SWITCH
 MODELS
 305
 3051

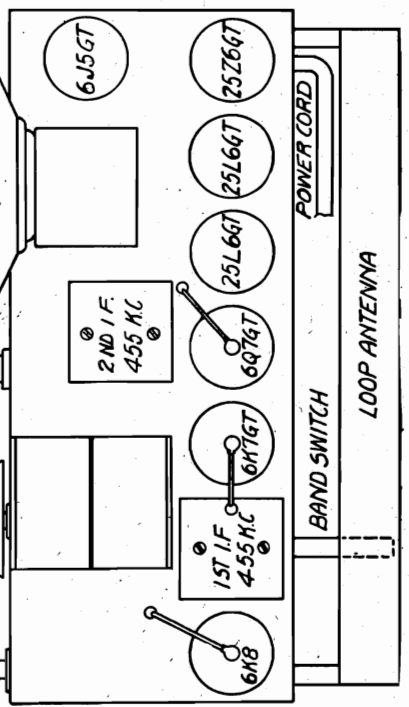


FOR SIMILAR PUSH BUTTON ADJUSTMENT DATA
 SEE DETROLA MODEL 258 IN VOLUME X-p.10-6
 FOR CONVENTIONAL ALIGNMENT SEE SPECIAL
 SECTION OF VOLUME VIII

MODELS 310, 3101
 MODELS 320, 3201, 3202
 Schematics, Socket, Alignment, Trimmers

DETROLA CORP.

MODEL 3281
 Socket, Trimmers

FOR CONVENTIONAL ALIGNMENT SEE
 SPECIAL SECTION OF VOLUME VIII -
 FOR SIMILAR PUSH BUTTON ADJUSTMENTS
 SEE DETROLA MODEL 258 in VOLUME X

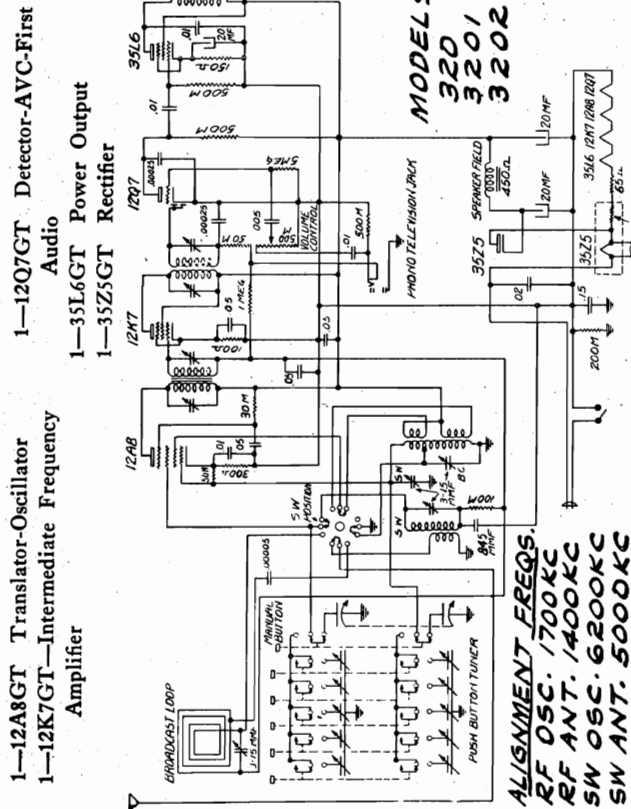

- 1-12A8GT Translator-Oscillator
- 1-12K7GT-Intermediate Frequency Amplifier
- 1-12Q7GT Detector-AVC-First Audio
- 1-35L6GT Power Output
- 1-35Z5GT Rectifier



MODELS
 320
 3201
 3202

ALIGNMENT FREQS.
 RF OSC. 1700 KC
 RF ANT. 1400 KC
 SW OSC. 6200 KC
 SW ANT. 5000 KC

STATION
 SELECTOR

VOLUME CONTROL
 ON-OFF SWITCH

IF PEAK
 455 KC

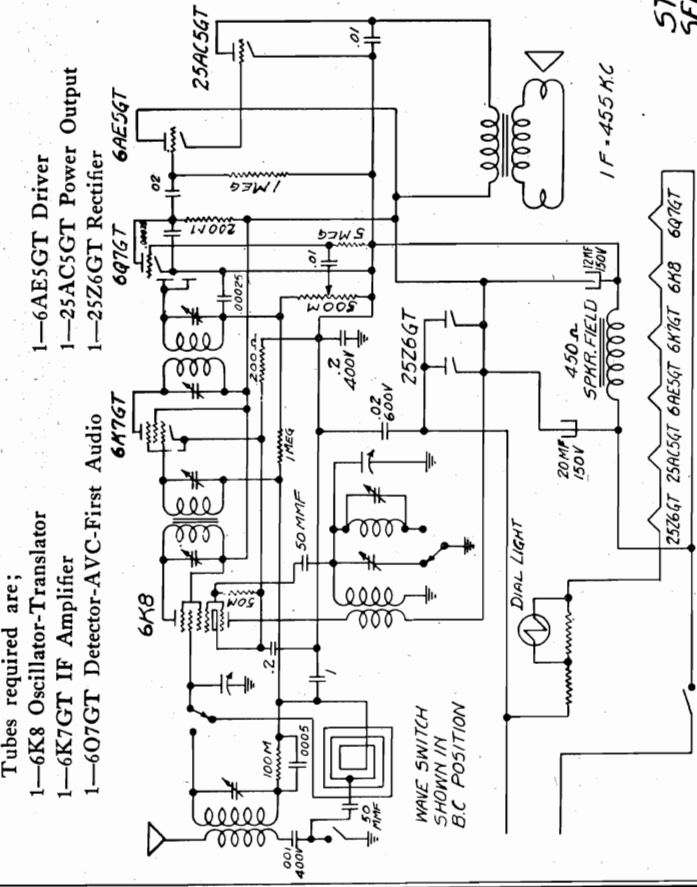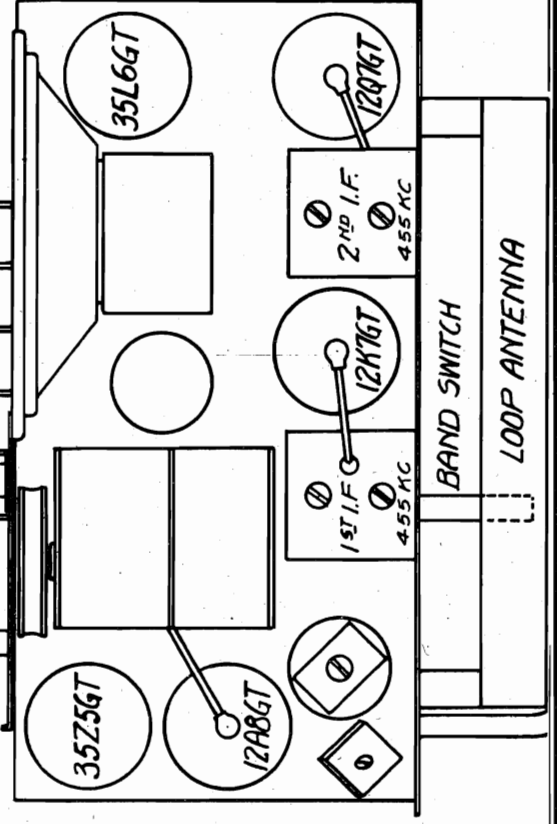


- 1-6AE5GT Driver
- 1-25AC5GT Power Output
- 1-25Z6GT Rectifier
- 1-6K7GT IF Amplifier
- 1-6Q7GT Detector-AVC-First Audio

STATION
 SELECTOR

VOLUME CONTROL
 ON-OFF SWITCH

MODEL 3281 ONLY

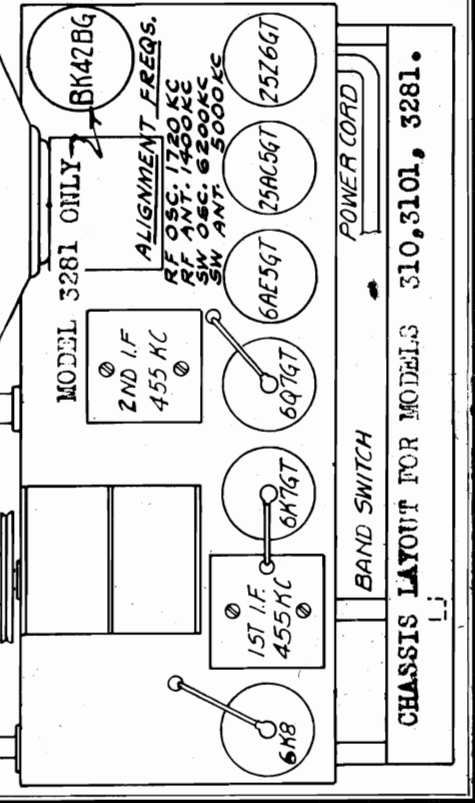


CHASSIS LAYOUT FOR MODELS 310, 3101, 3281.


DETROLA CORP.

MODEL 314
MODEL 318
Schematics, Socket
Alignment, Trimmers

FOR CONVENTIONAL ALIGNMENT SEE SPECIAL
SECTION OF VOLUME VIII
FOR SIMILAR PUSH BUTTON ADJUSTMENTS
SEE DETROLA MODEL 258 VOLUME X p.10-6

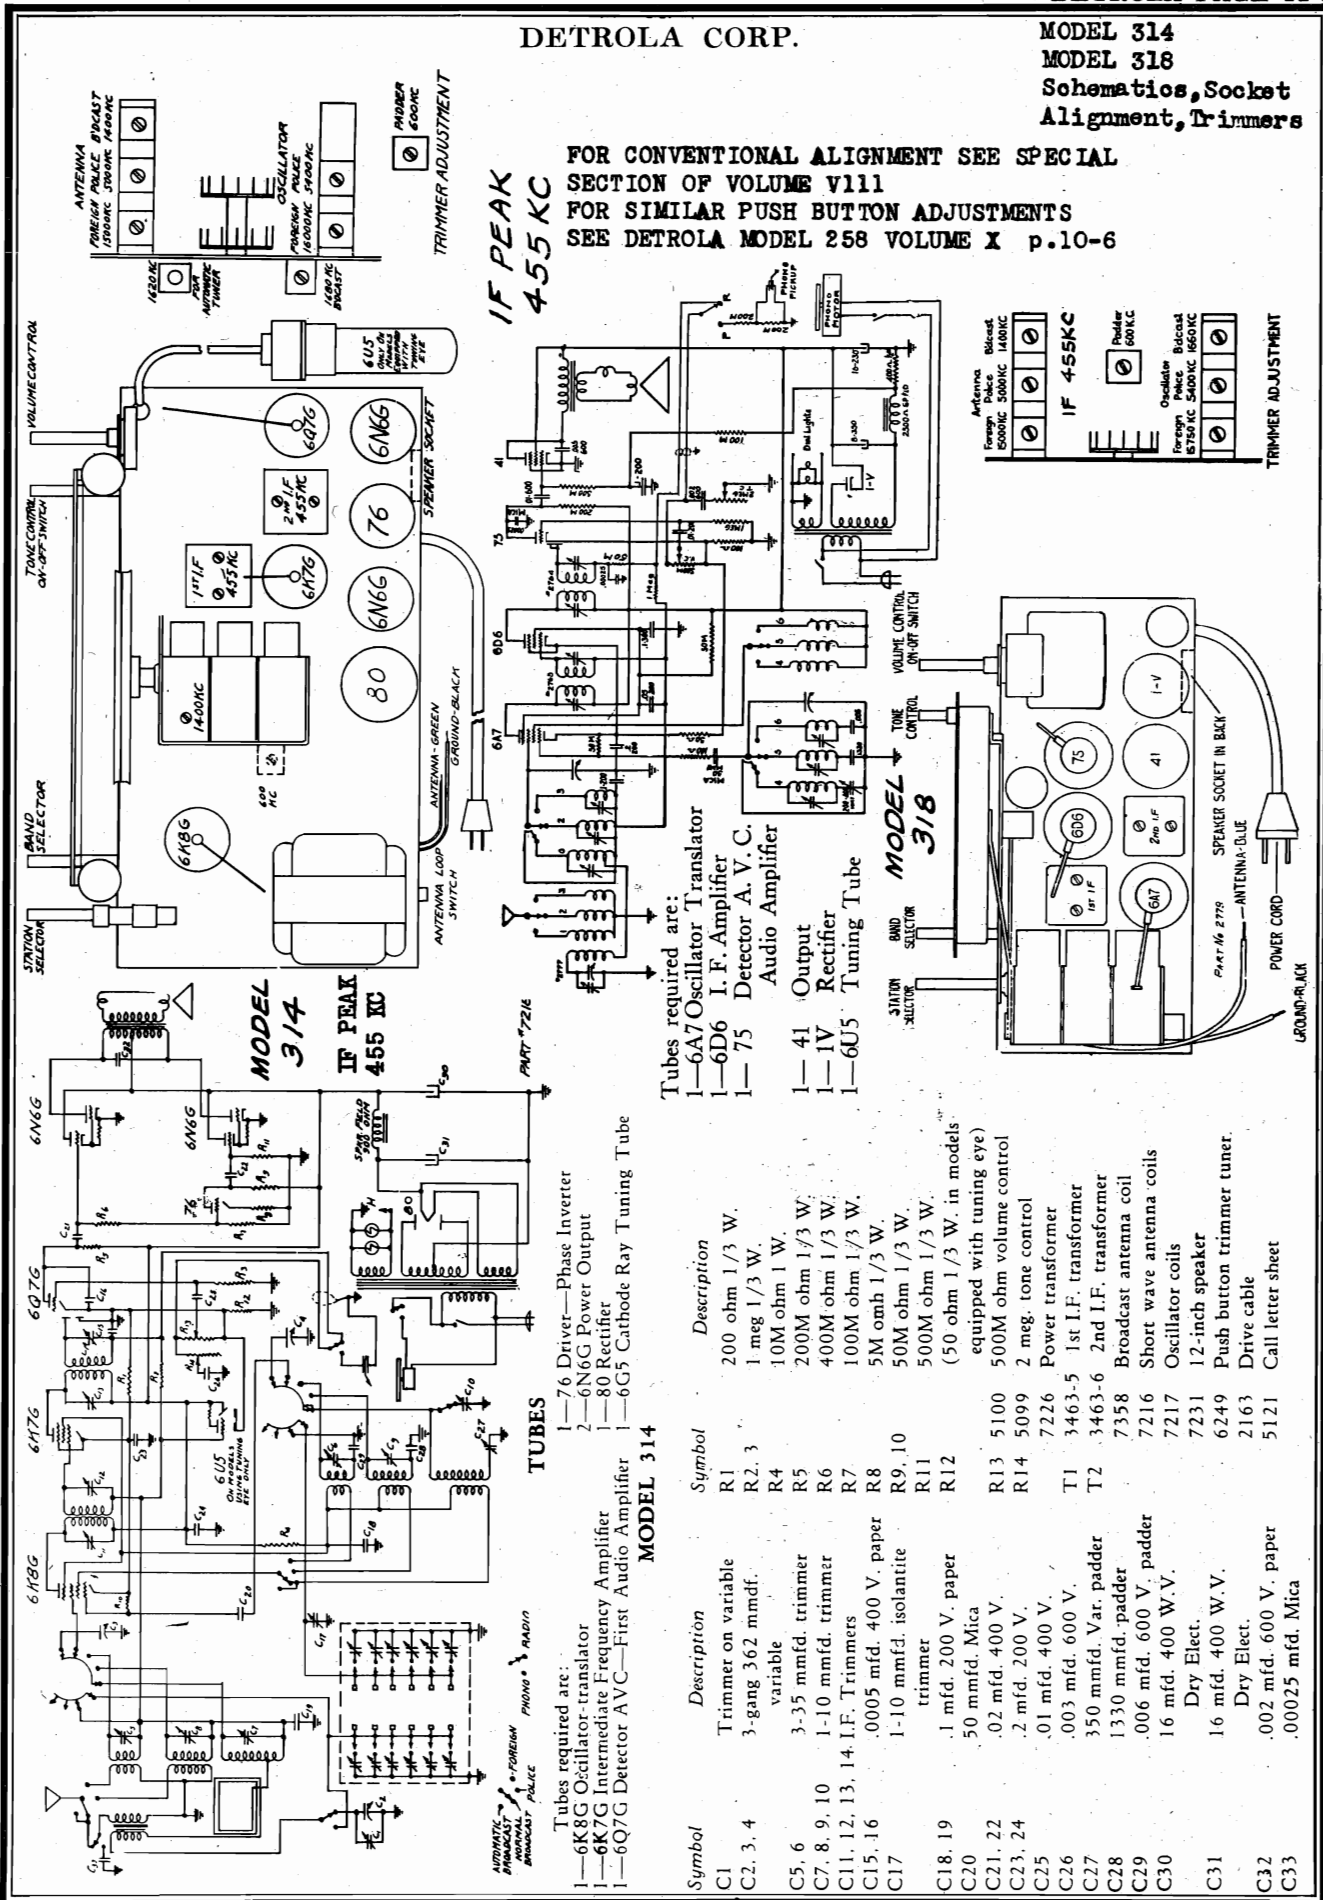

IF PEAK
4-55 KC

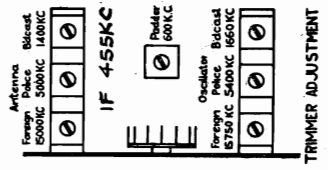

Tubes required are:
1-6A7 Oscillator Translator
1-6D6 I. F. Amplifier
1-75 Detector A. V. C.
1-41 Output
1-IV Rectifier
1-6U5 Tuning Tube

TUBES

- 1-76 Driver-Phase Inverter
- 2-6N6G Power Output
- 1-80 Rectifier
- 1-6G5 Cathode Ray Tuning Tube

MODEL 314

- Tubes required are:
- 1-6K8G Oscillator-translator
 - 1-6K7G Intermediate Frequency Amplifier
 - 1-6Q7G Detector AVC-First Audio Amplifier

Symbol	Description	Symbol	Description
C1	Trimmer on variable	R1	200 ohm 1/3 W.
C2, 3, 4	3-gang 362 mmdf. variable	R2, 3	1 meg 1/3 W.
C5, 6	3-35 mmdf. trimmer	R4	10M ohm 1 W.
C7, 8, 9, 10	1-10 mmdf. trimmer	R5	200M ohm 1/3 W.
C11, 12, 13, 14	I.F. Trimmers	R6	400M ohm 1/3 W.
C15, 16	.0005 mfd. 400 V. paper	R7	100M ohm 1/3 W.
C17	1-10 mmdf. isolantite trimmer	R8	5M ohm 1/3 W.
C18, 19	1 mfd. 200 V. paper	R9, 10	500M ohm 1/3 W.
C20	50 mmdf. Mica	R11	500M ohm 1/3 W.
C21, 22	.02 mfd. 400 V.	R12	(50 ohm 1/3 W. in models equipped with tuning eye)
C23, 24	.2 mfd. 200 V.	R13	5100 500M ohm volume control
C25	.01 mfd. 400 V.	R14	5099 2 meg. tone control
C26	.003 mfd. 600 V.	T1	7226 Power transformer
C27	350 mmdf. Var. padder	T2	3463-5 1st I.F. transformer
C28	1330 mmdf. padder	T3	7358 Broadcast antenna coil
C29	.006 mfd. 600 V. padder	T4	7216 Short wave antenna coils
C30	16 mfd. 400 W.V.	T5	7217 Oscillator coils
C31	Dry Elect.	T6	7231 12-inch speaker
C32	16 mfd. 400 W.V.	T7	6249 Push button trimmer tuner.
C33	.0025 mfd. Mica	T8	2163 Drive cable
		T9	5121 Call letter sheet

MODEL 315

Schematic, Socket, Alignment, Trimmers, Parts


DETROLA CORP.

MODEL 325



Socket, Trimmers

**FOR CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION, VOL. VIII
FOR SIMILAR PUSHBUTTON ADJUSTMENTS SEE DETROLA PAGE 10-6
IN VOL. X FOR MODEL 258.**

Symbol	Part No.	Description
C1		Trimmer on Tuning Condenser
C2, 3, 4	5092	Tuning Condenser
C5, 6	3157	3-35 mmf. Trimmer
C7, 8, 9, 10	5565	1-10 mmf. Trimmer
C11, 12, 13, 14		Trimmers in IF Transformers
C15, 16, 33		250 mmf. Mica
C18, 19		50 mmf. Mica
C21, 22		.02 mf. 400 volt
C23, 24		.2 mf. 200 volt
C25		.01 mf. 400 volt
C26		.003 mf. 600 volt
C27	2560	Oscillator Padding Condenser
C28	2741	1330 mmf. Mica 5%
C29		.006 mf. 600 volt
C30, 31	7113	16 mf. 400 volt electrolytic
C32		.002 mf. 600 volt
R1, 7		200 ohm 1/3 watt
R2, 11		1 meg. 1/3 watt
R4		10M 1 watt
R5		200M 1/3 watt
R6		800M 1/3 watt
R8		5M 1/3 watt
R9, 10		5 meg. 1/3 watt
R3		25M 1/3 watt
R12, 13		5100 500M volume control
R14	5099	2 meg. tone control and switch
R15		3463-5 1st IF Transformer
T1		7241 2nd IF Transformer
T2		7242 Power Transformer
T3		
7358		Antenna Coil
7216		Preselector Coil
7217		Oscillator Coil
7219		Dial Chart
5112		Pointer
4830		Dial Light Socket
6249		Push Button Tuning Unit
2981		Tuning Tube Cable
5129		Push Buttons Cabinet
7181		Shipping Carton
7245		Automatic Record Changer
7247		Escutcheon
7230		Tuning Tube Escutcheon
4732		Tuning Knob
4733		Volume Knob
4735		Tone Knob
4734		Band Switch Knob
3466		Radio-Phono Knob
5241		Phono-Radio Plate
7087		Automatic Record Changer

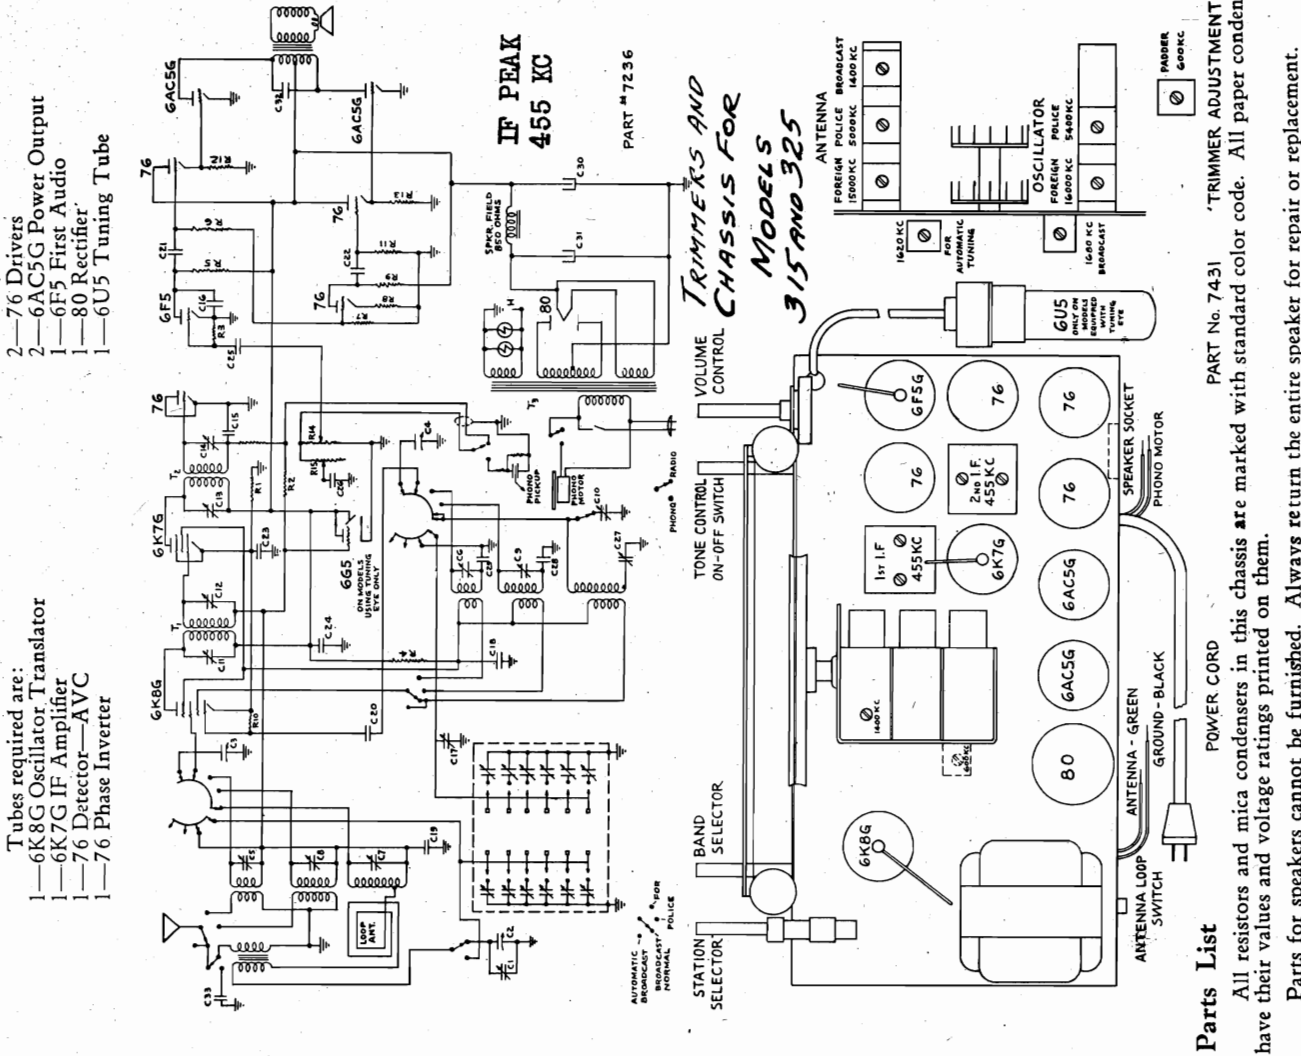

MODEL 326
Schematic, Socket
Trimmers, Parts

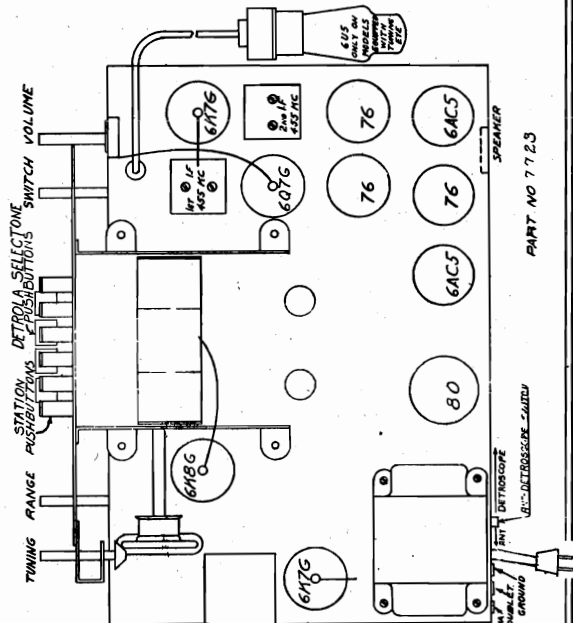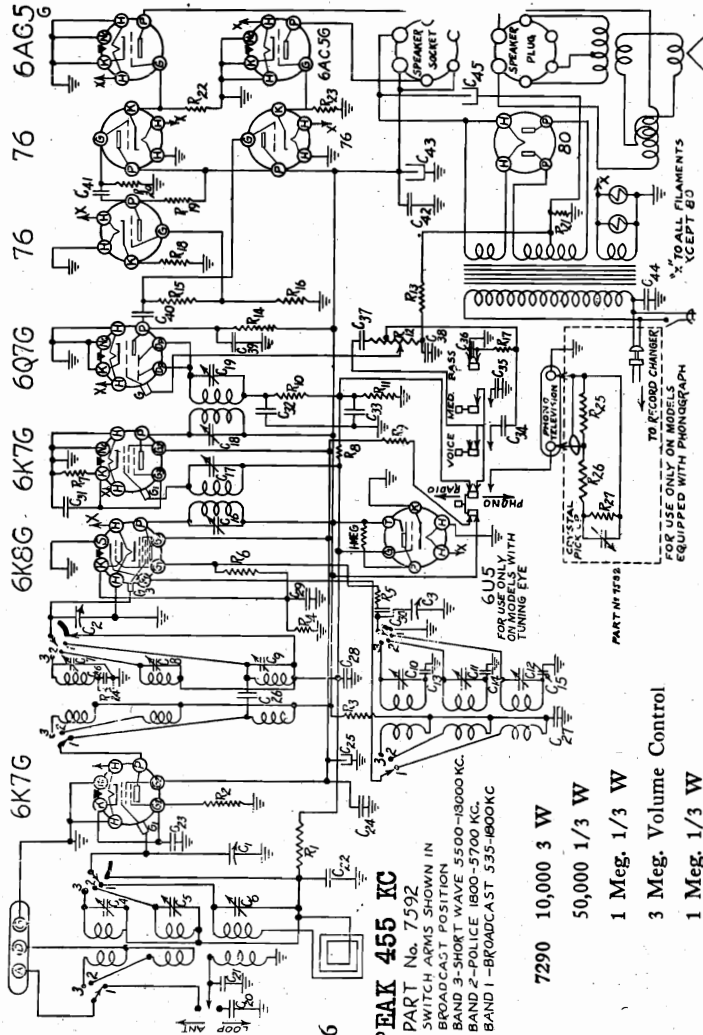

SERIES 326

IF PEAK 455 KC
PART No. 7592
SWITCH ARM POSITION IN
BROADCAST POSITION
BAND 3—SHORT WAVE 5500—18000 KC.
BAND 2—POLICE 1800—5700 KC.
BAND 1—BROADCAST 535—1800KC

R9	7290	10,000	3 W
R10		50,000	1/3 W
R11		1 Meg.	1/3 W
R12		3 Meg.	Volume Control
R13		1 Meg.	1/3 W
R14,17		200,000	1/3 W
R15		400,000	1/3 W
R16		100,000	1/3 W
R18		5000	1/3 W
R20		500,000	1/3 W
R21	2965	20 1/2 Flexohm	
R22,23		25,000	1/3 W
R24		75,000	1/3 W
R25,26		500,000	1/3 W
R27		200,000	1/3 W

ANTENNA-GROUND CONNECTIONS

The antenna and ground leads to the receiver are attached to a terminal strip at the rear of the chassis. The terminals on this strip are marked "A," "D," and "G," which are the abbreviations for "Antenna," "Doublet" and "Ground" respectively.

The receiver is normally shipped from the factory with a wire connecting terminal "D" to terminal "G." In such a condition the receiver is ready for a normal antenna and a ground wire to be attached to the terminals "A" and "G" respectively. If a doublet is used, the wire connecting terminal "D" to terminal "G" should be removed and the two leads from the doublet antenna connected to terminals "A" and "D." For best operation with the doublet, a normal ground lead should be connected to the "G" terminal.

MODEL 326
Tuner Data
MODEL 333
MODEL 3281
Alignment

DETROLA CORP.

MODEL 3231
Socket, Trimmers
Alignment

MODELS 333 - 3281

ALINEMENT PROCEDURE

Turn the band switch to the Broadcast position.

Connect an output meter across the speaker voice coil. The volume control should be set a few degrees from the maximum volume position. Use a weak signal from the generator, strong signals tend to cause improper adjustments.

IF alignment: Connect the signal generator ground to the receiver chassis through a .1 mfd. condenser. Using a .1 mfd. condenser in series with the high side of the generator, apply a 455 kc. signal to the grid of the 6K7GT tube and align the 2nd IF transformer. Connect to the grid of the 6K8 tube and align the 1st IF transformer. (See Tube Layout Diagram for location of these adjustments.) From this position re-check both transformers again.

Broadcast Band Alignment: Turn the band switch to the Broadcast position, turn the tuning condenser all the way to the right, (minimum capacity), apply a 1720 kc. signal to the grid of the 6K8 tube and adjust the broadcast oscillator trimmer. The oscillator coil is under the right hand end of the chassis and this trimmer is the one nearest the front of the chassis. To align the loop antenna, connect a single turn loop across the terminals of the generator, place the receiver about one foot in front of the single turn loop, set the generator at about 1400 kc., tune in the signal and adjust the trimmer on the loop antenna assembly for maximum response.

Short Wave Alignment: Using a 400 ohm resistor between the high side of the generator and the antenna terminal (on the LOOP frame), turn the tuning condenser to minimum capacity, set the generator at 18,500 kc., and adjust the short wave oscillator trimmer. This trimmer is immediately in back of the broadcast oscillator trimmer. Set the generator at about 17,000 kc., tune in the signal and adjust the short wave antenna trimmer for maximum response. This trimmer is mounted on the loop antenna.

NOTE: If considerable hum appears when the generator is connected as described above use smaller condensers between the generator and the receiver. The best way is to use a 1:1 transformer to isolate either the receiver or the generator from the line. The adjustments of this receiver are very stable and no aligning should be attempted unless absolutely necessary.

MODEL 326

PROCEDURE FOR SETTING THE STATION BUTTONS

There are 6 buttons on the automatic tuning dial by means of which 6 stations may be set for quick tuning. Make a list of your favorite stations, those which you tune in regularly.

It is better to list the station with the lowest kilocycle number first, the station with the next higher kilocycle number next and so on.

Any button may be used for any station you can receive, although it will be better to set the stations so that the kilocycle numbers increase from left to right.

SETTING A STATION BUTTON

Pull the button at the extreme left off the shaft. When this is done, the locking screw under the shaft will be exposed.

Loosen this screw with a small screwdriver by turning several turns in a counter-clockwise direction. Continue to press in firmly on the screwdriver, thus holding the station button shaft depressed. Select the first station button shaft depressed. Select the first station from the list you have prepared and carefully tune in this station by means of the manual tuning knob.

Continue to press in firmly on the screwdriver and lock the mechanism by turning the locking screw in a clockwise direction until it is tight. The station is now set on this button.

Proceed in the same manner to set any additional stations on your list on the remaining station buttons. Select the proper station call letter tab from the sheet provided and place it in the recess in the proper push button. Cover the call letter tab with one of the heavy celluloid retainers provided. Replace the button on the shaft.

Follow the same procedure for inserting the station call letters in any other buttons. After the stations are set and the mechanism is locked, tune in each of them by depressing the proper button. If any of them does not appear to be properly tuned in after the button has been depressed, reset the station for that button following the procedure as outlined above. If at any time you wish to change the setting of a button from one station to another, repeat the above procedure. Changing the setting of one button will not affect the setting of the others.

MODEL 3231

ALINEMENT PROCEDURE


Connect a high impedance AC voltmeter across the loudspeaker terminals. Volume control should be set a few degrees back of maximum volume position. Use a weak signal from the generator, strong signals tend to cause improper adjustments.

IF. Connect the generator ground to receiver chassis. Using .1 mfd. condenser in series with high side of the generator, apply 455 kc. signal to the grid of the 6K7G IF amplifier tube and align second IF transformer trimmers. Repeat for first IF transformer, applying signal to grid of the 6K8G tube.

RF. (See diagram for location of trimmers.) Using a 200 mmf. condenser in series with the high side of the generator, turn band selector switch to position "B," tuning condenser to minimum capacity. Feed 1720 kc. signal to antenna terminal and adjust broadcast oscillator trimmer for top frequency. Set generator frequency at some point around 1400-1500 kc., and adjust broadcast antenna and RF trimmers. Set generator for 600 kc., tune receiver to signal and adjust the padder. The tuning condenser should be rocked back and forth through the signal while varying the padder in order to assure perfect alignment.


A 400 ohm resistor must be used in series with the generator as a "dummy" antenna for proper alignment of the two short wave bands. Set the band selector switch in the "p" position, adjust the oscillator top frequency for 5825 kc., then align the antenna trimmer at about 5000 kc. With the band selector in the extreme right position, adjust the top frequency of the high frequency band to 18,125 kc., and align the antenna trimmer at about 15,000 kc. In order to make sure that the top end of the 1st band is set properly, it is best to screw the oscillator trimmer tight, then unscrew to the second peak. The antenna trimmer should be screwed down tight, then unscrewed to the first peak. This procedure must be followed in order that the oscillator and RF circuits will be set in the correct relation to each other, otherwise a "dead" spot at a lower frequency will result, and the dial calibration will not be correct. Usually, it is best to rock the tuning condenser back and forth slightly while making these adjustments at high frequencies.

MODEL 3231

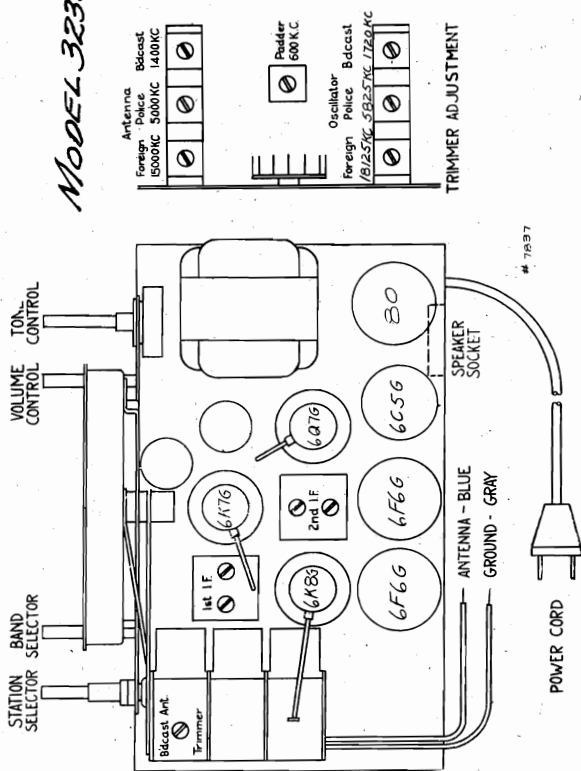

DETROLA CORP.

MODEL 329
 MODEL 333
 MODEL 342
 Schematics, Socket
 Trimmers


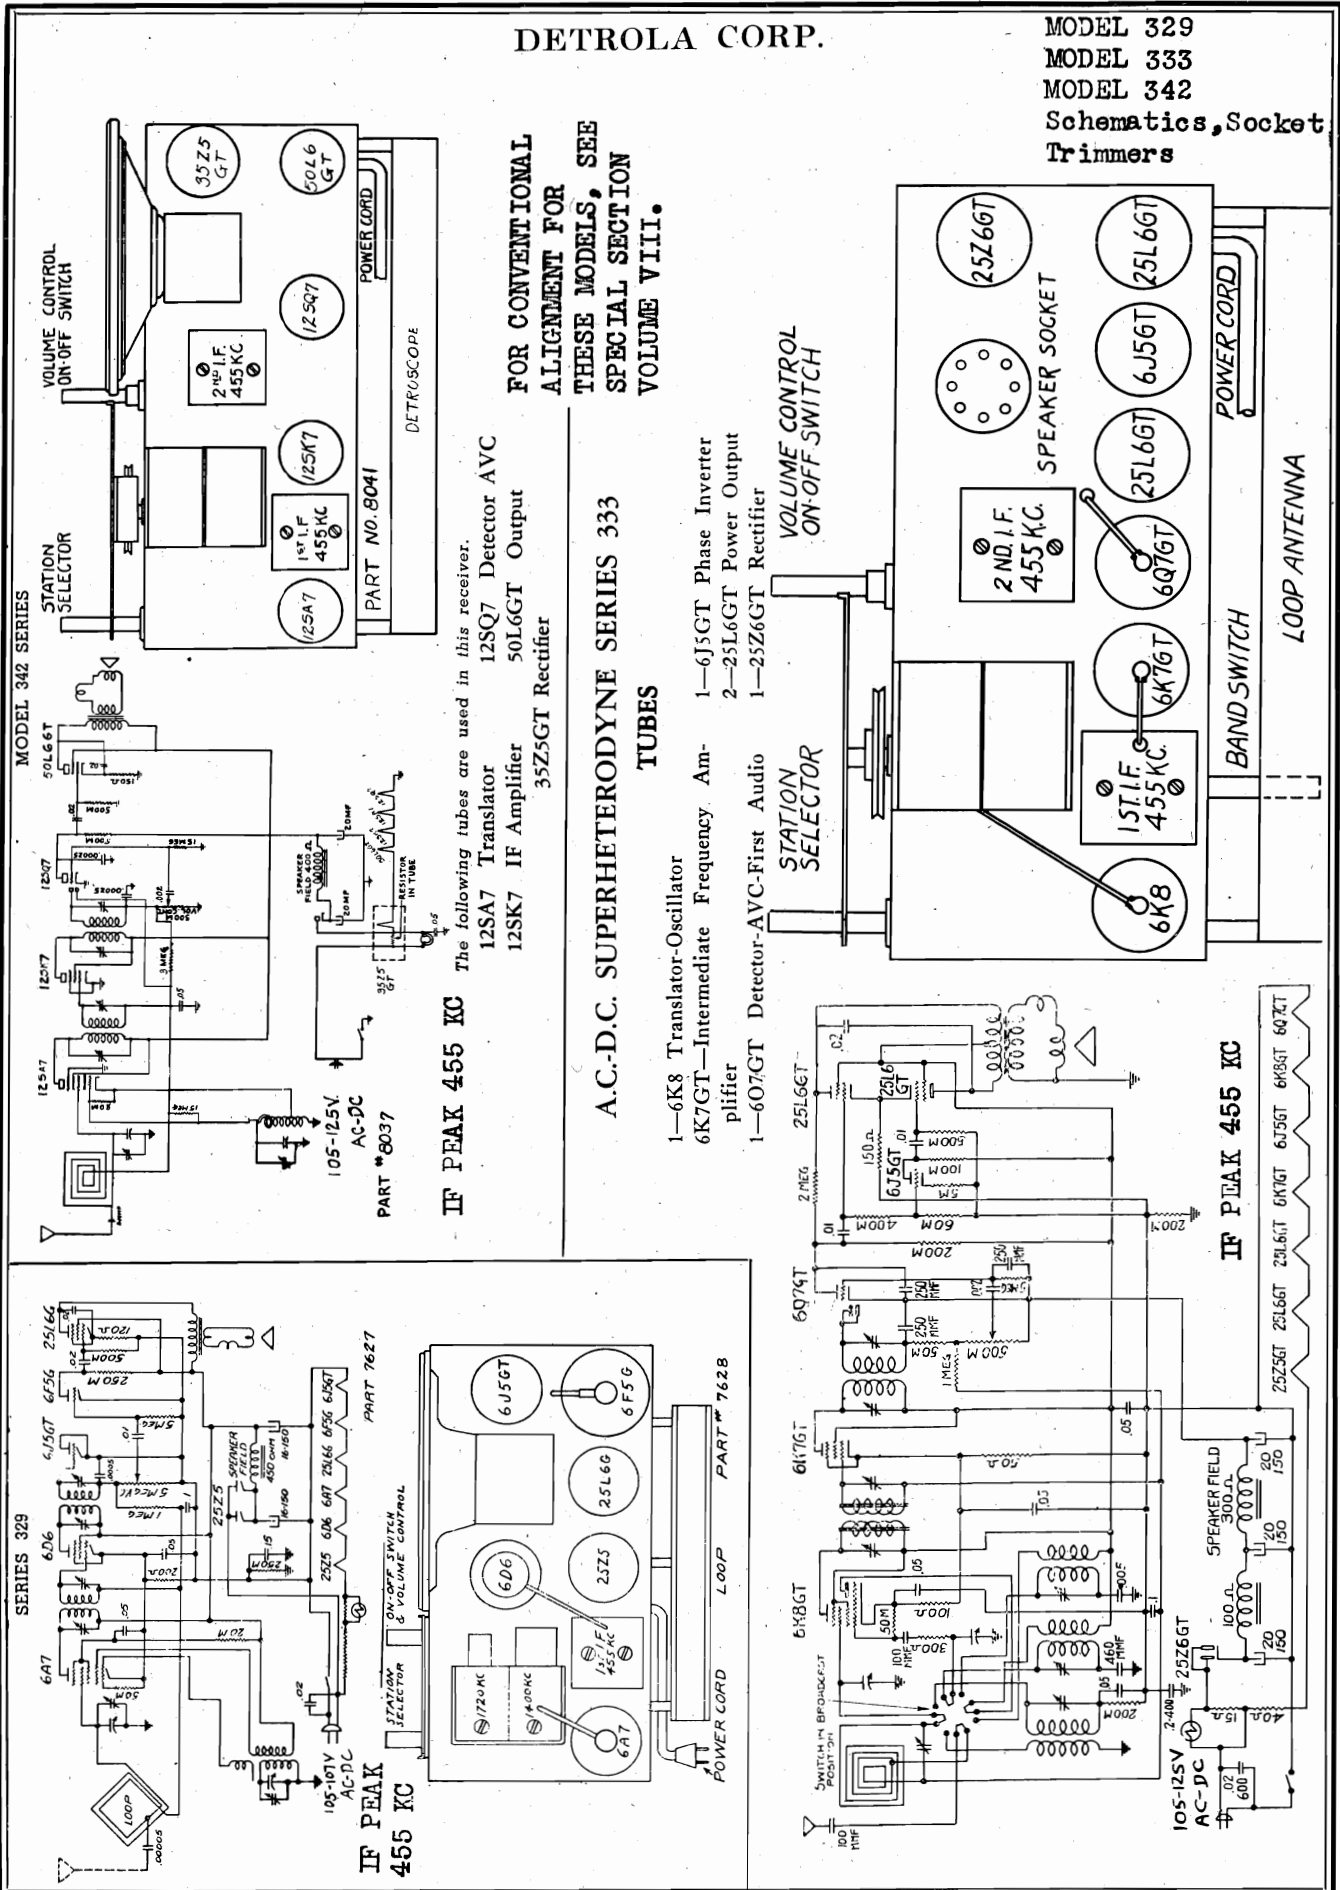


IF PEAK 455 KC The following tubes are used in this receiver.
 12SA7 Translater
 12SK7 IF Amplifier
 35Z5GT Rectifier

A.C.-D.C. SUPERHETERODYNE SERIES 333

TUBES
 1-6K8 Translator-Oscillator
 6K7GT-Intermediate Frequency Amplifier
 1-607GT Detector-AVC-First Audio
 1-6J5GT Phase Inverter
 2-25L6GT Power Output
 1-25Z6GT Rectifier

FOR CONVENTIONAL ALIGNMENT FOR THESE MODELS, SEE SPECIAL SECTION VOLUME VIII.

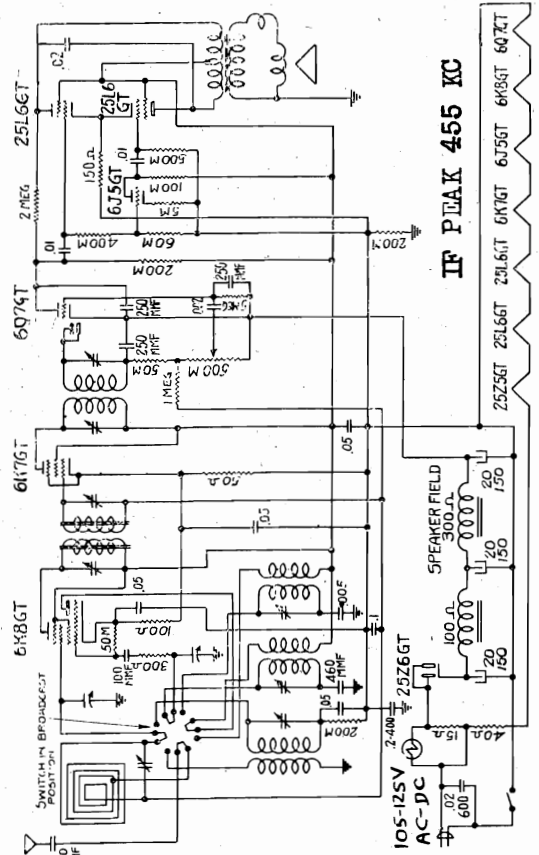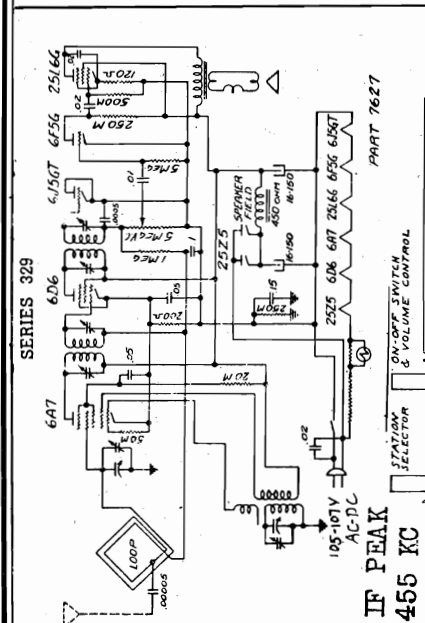



DETROLA CORP.

MODEL 343
Schematic, Socket
Trimmers
MODEL 3231
MODEL 3281
Schematics

FOR LAYOUTS
SEE INDEX

SUPERHETERODYNE SERIES 3231

Symbol	Part No.	Description
C1,a,b,c	7483	Variable Condenser
C1,22		.1 mf 200 volt
C2		.2 mf. 200 volt
C3		50 mmf Mica
C4,5,8	2597	1-10 mmf Trimmer
C6,9	1611	3-35 mmf Trimmer
C7	3157	2-25 mmf Trimmer
C10	2560	200-500 mmf B.C. Osc Padder
C11	2471	1330 mmf 5% Mica
C12	2793	.006 600 volt 10%
C13		.1 mf 400 volt
C14		.2 mf 400 volt
C15,17		250 mmf Mica
C16		.01 mf 200 volt
C18,19		.02 mf 400 volt
C20		.002 mf 600 volt
C21		.005 mf 600 volt
C23,24	7113	16 mf 450 volt Electrolytic
R1,6,13		50 M 1/3 watt
R2,3		100 ohm 1/3 watt
R4		10 M 1/3 watt
R5,16,17		1 Meg 1/3 watt
R7	2726	500 M Volume Control & Switch
R8		200 M 1/3 watt
R9		400 M 1/3 watt
R15		2 Meg Tone Control
R18	2737	20 M 1/3 watt
R19		15 ohm 1/3 watt

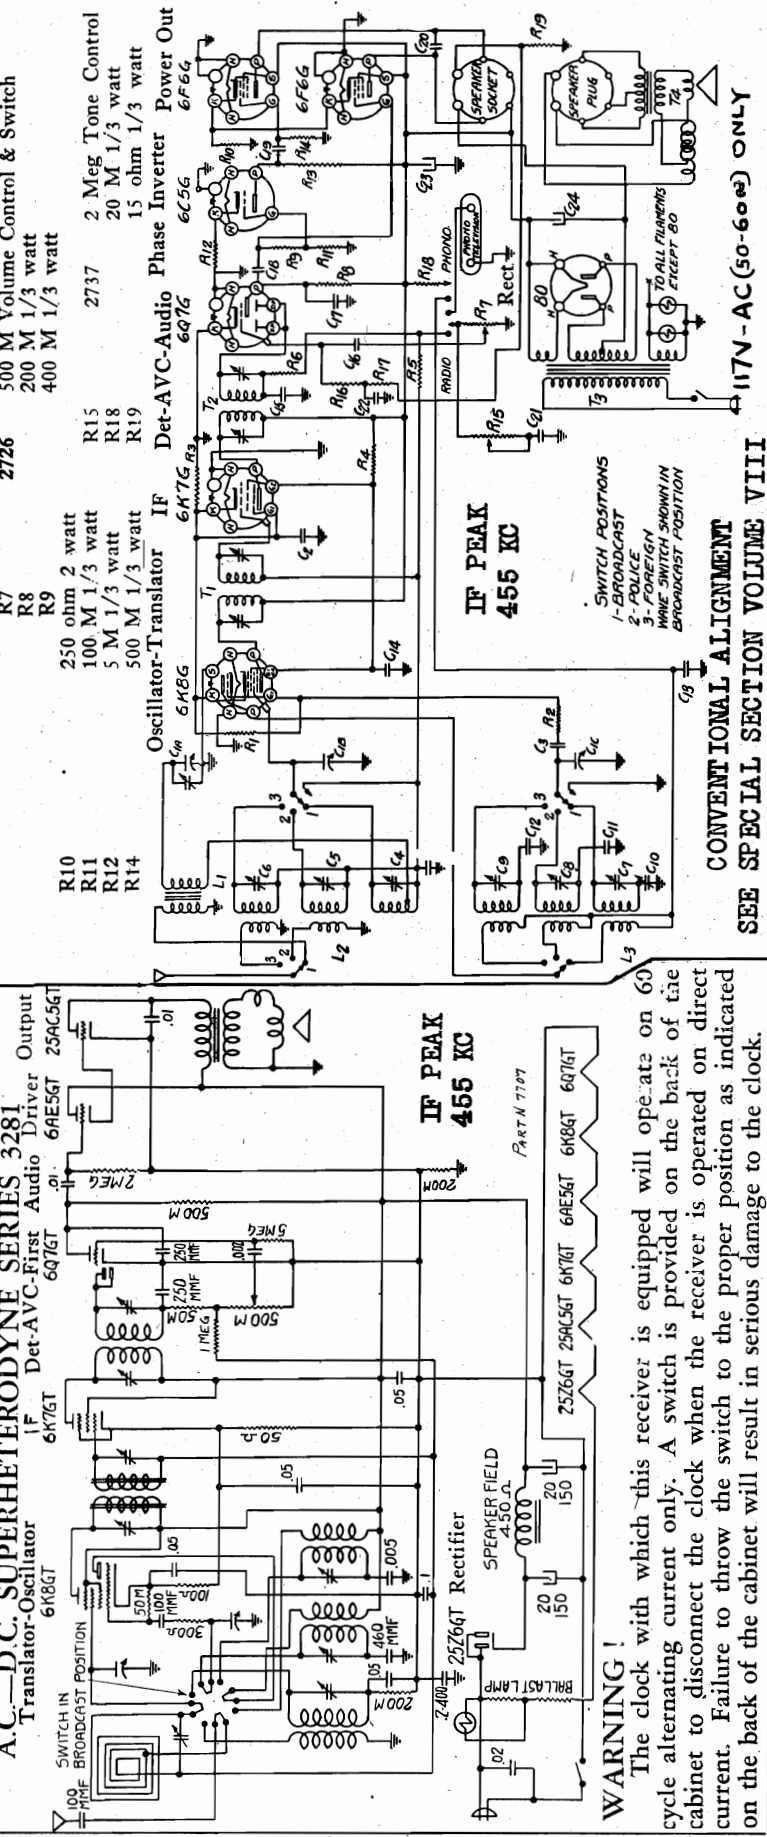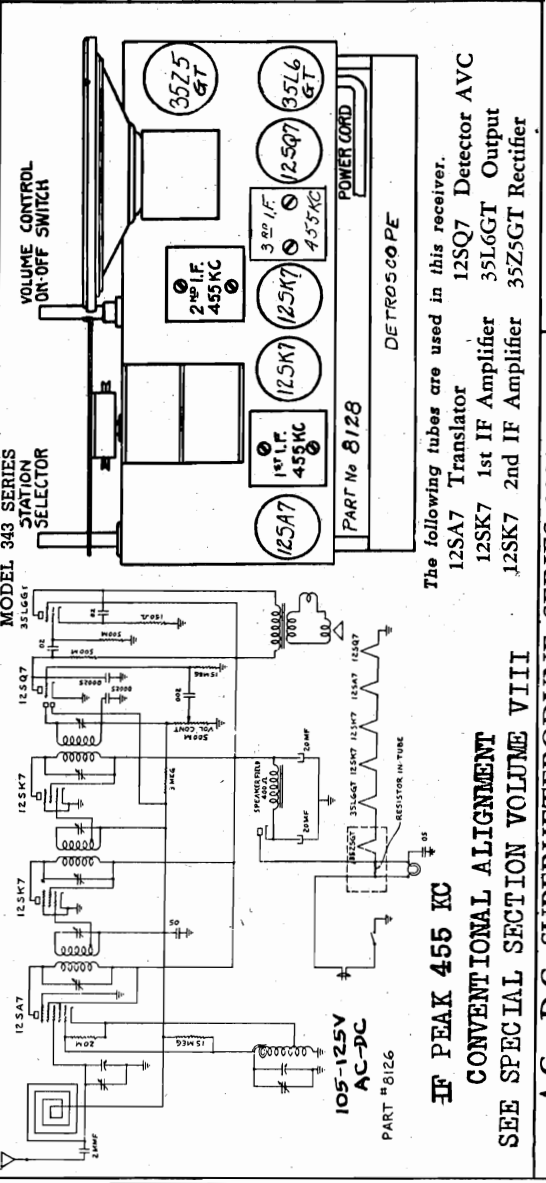



CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII

IF PEAK 455 KC
IF PEAK 455 KC
IF PEAK 455 KC

DEWALD RADIO MFG. CORP.

MODEL 409
 MODELS 658, 658LW, 661
 Schematics, Alignment

This is a battery operated superheterodyne receiver with full automatic volume control. It is designed to function with an "A" supply of 1.5 volts and a "B" supply of 90 volts. The broadcast range coverage is 540-1600 kilocycles.

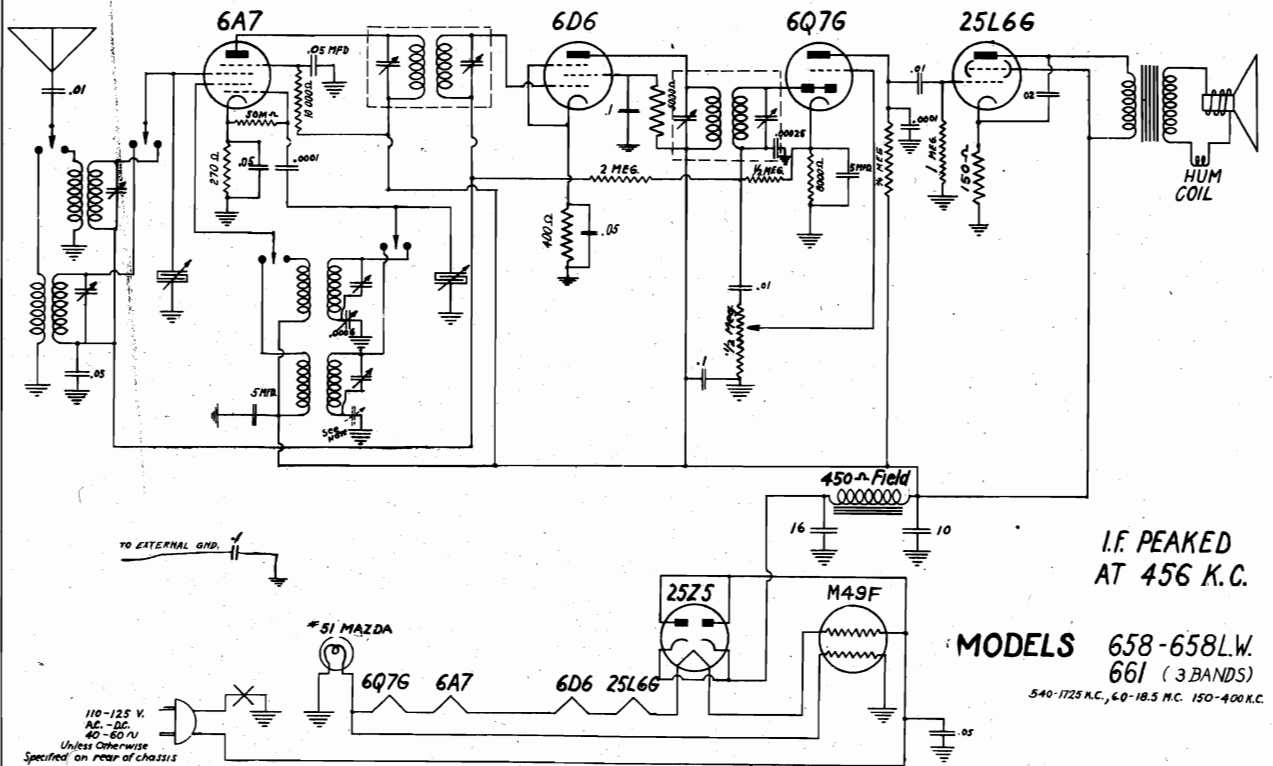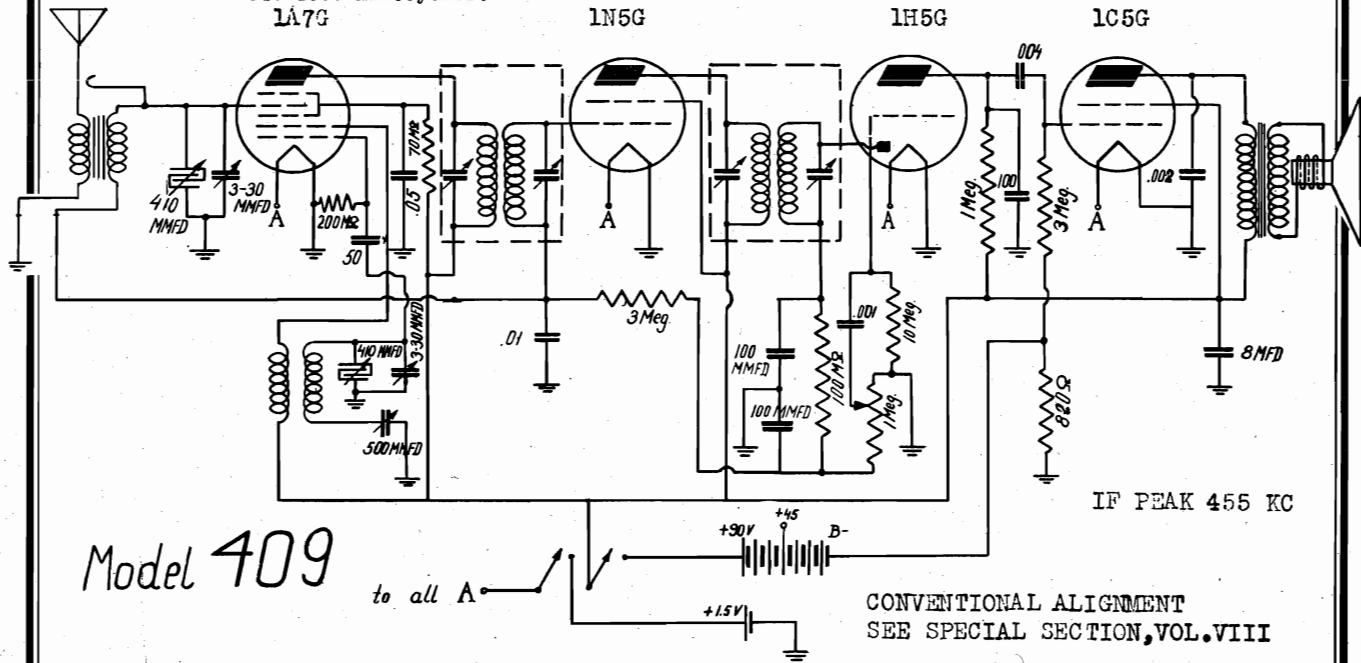

NOTE: On Models 658 L.W. this condenser is .00025

MODEL	RANGE COVERAGE		
658	555-174 meters 540-1725 K.C.	50-16 meters 6.0-18.5 M.C.	
658 L.	555-174 meters 540-1725 K.C.	2000-750 meters 150-400 K.C.	
661	555-174 meters 540-1725 K.C.	50-16 meters 6.0-18.5 M.C.	2000-750 meters 150-4000 K.C.

These models are superheterodyne receivers, with full automatic volume control on all bands. They have been designed to operate on 110-125 volts, 40-60 cycles AC or DC unless otherwise specified. A slide rule instrument type dial which simplifies tuning is featured in these receivers.

TO CALIBRATE RECEIVER

I.F. ALIGNMENT Connect antenna lead of the signal generator to antenna

lead of receiver and ground lead of generator to receiver chassis. Short circuit front section of variable condenser. Adjust generator to 456 K.C. and peak I.F. trimmers for maximum signal.

BROADCAST ALIGNMENT Remove short from variable condenser. Have wave band switch on broadcast position. Adjust generator and receiver to 1500 K.C. Peak trimmers for maximum signal. Adjust generator and receiver to 600 K.C., peak the broadcast padder for maximum signal. The variable condenser should be "rocked" during this operation.

SHORT WAVE ALIGNMENT Turn wave band switch to the short wave band. Adjust generator and receiver to 15.0 M.C. Peak trimmers for maximum signal. The low frequency is automatically adjusted by a fixed calibrated padder.


LONG WAVE ALIGNMENT Turn wave band switch to Long Wave band. Adjust the generator and receiver to 300 K.C. and peak trimmers for maximum signal. Adjust generator and receiver to 175 K.C. and peak Long Wave padder for maximum signal. The variable condenser should be "rocked" during this operation. Recheck 300 K.C.

MODEL 414

MODELS 415, R415


Schematics

DEWALD RADIO MFG. CORP.

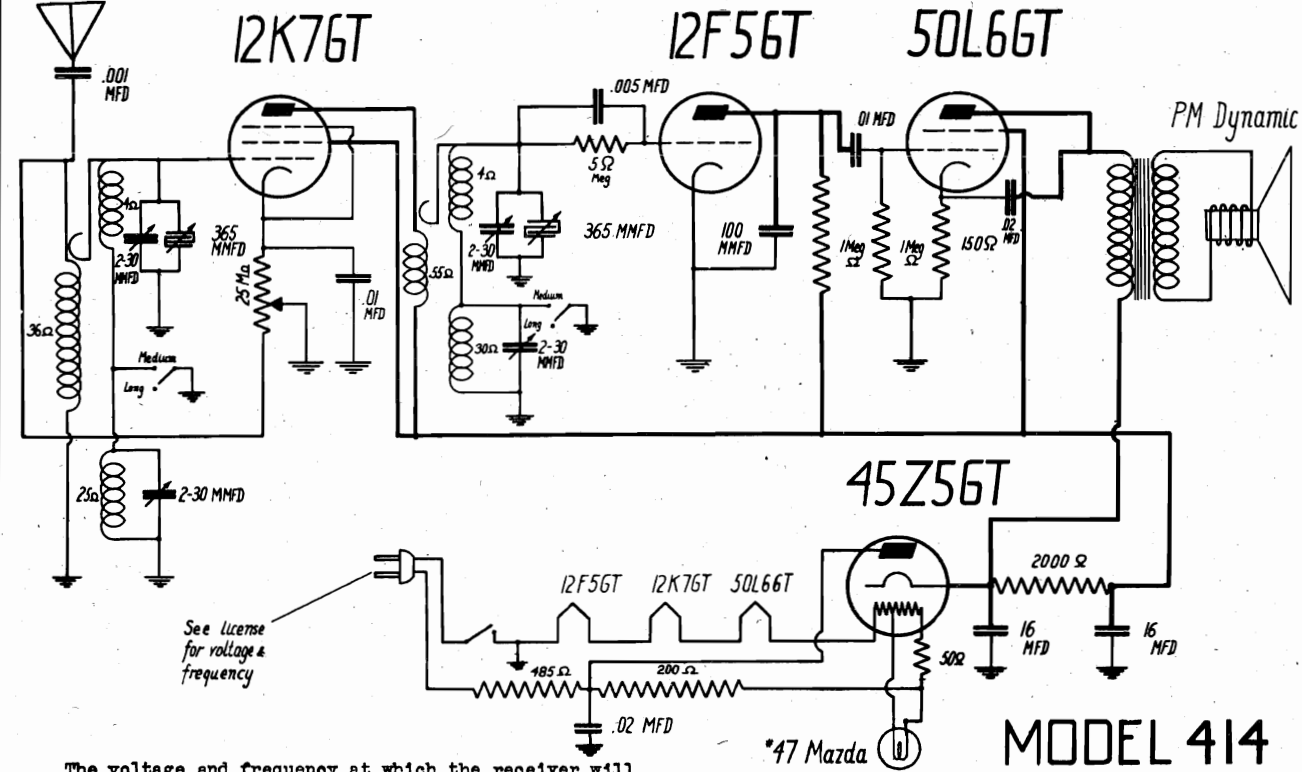


The voltage and frequency at which the receiver will operate is specified on the back of the cabinet. The broadcast range coverage is 180-560 meters. The long wave range coverage is 850-2040 meters.

MODEL 414

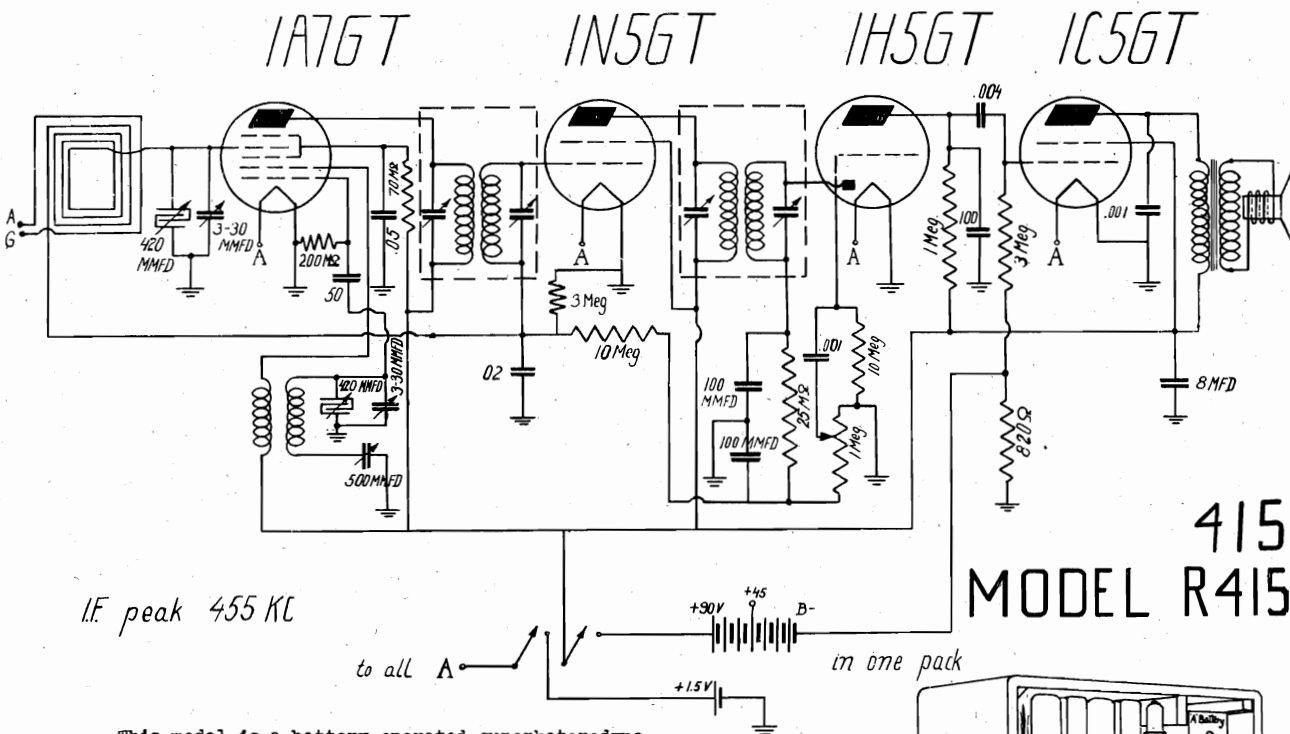

415
MODEL R415



This model is a battery operated superheterodyne receiver with full automatic volume control. A self-contained loop is incorporated which makes the use of an antenna unnecessary. It is designed to operate with an "A" supply of 1.5 volts and a "B" supply of 90 volts. The broadcast range coverage is 540 - 1600 kilocycles. For the "A" supply one Eveready #743, Burgess #6F or the equivalent may be used. For the "B" supply two Eveready #727, Burgess #A30X or the equivalent batteries may be used.

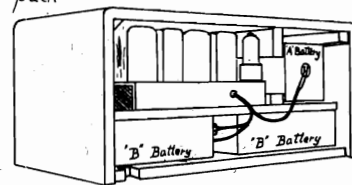

R415 BACKVIEW


DEWALD RADIO MFG. CORP.

MODELS 537, 538, 539
LW and SW
MODELS 663, 666
Schematics

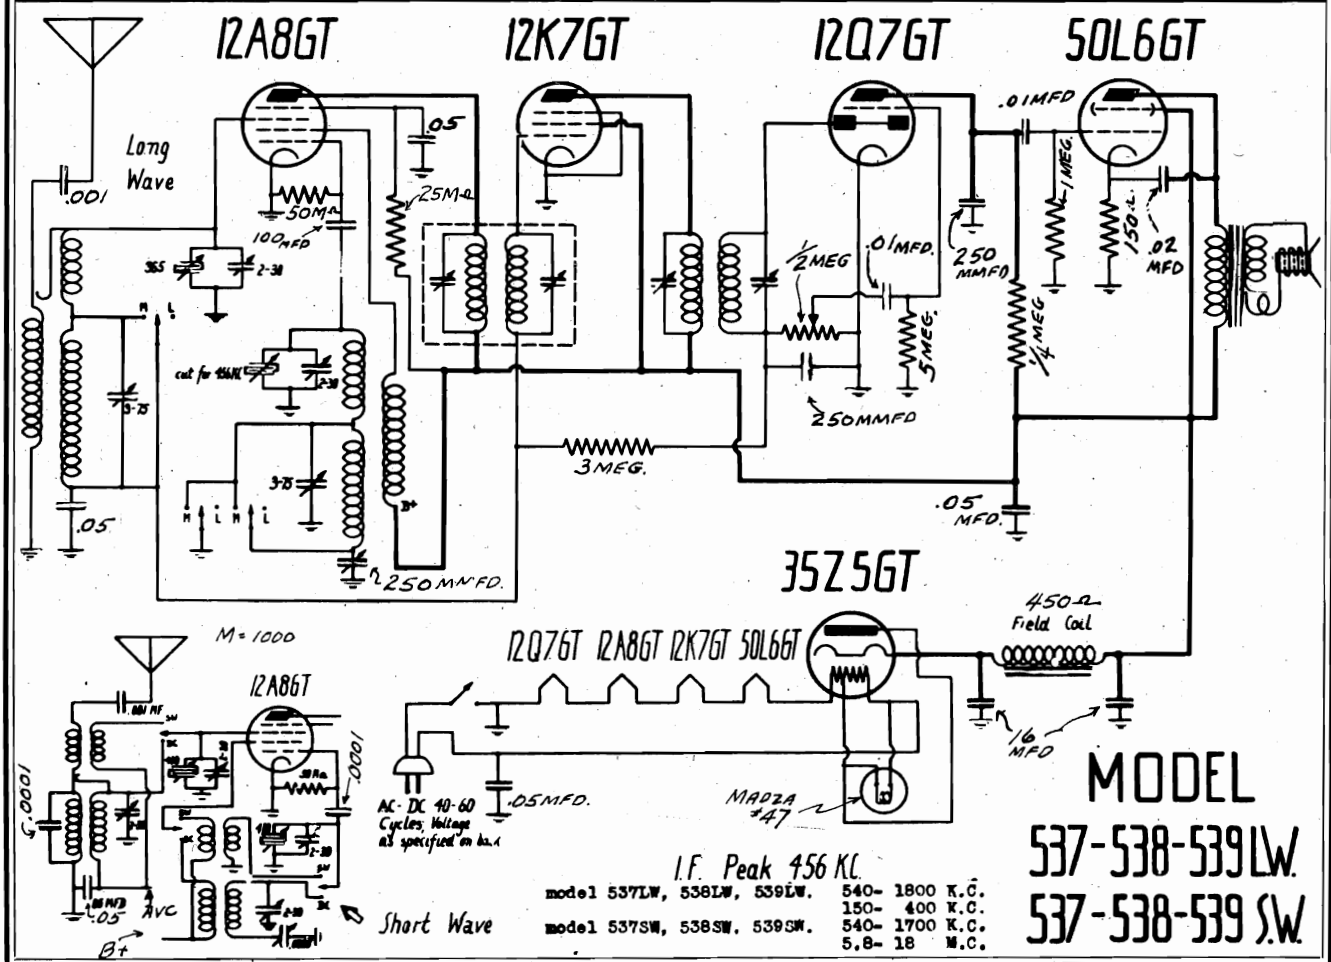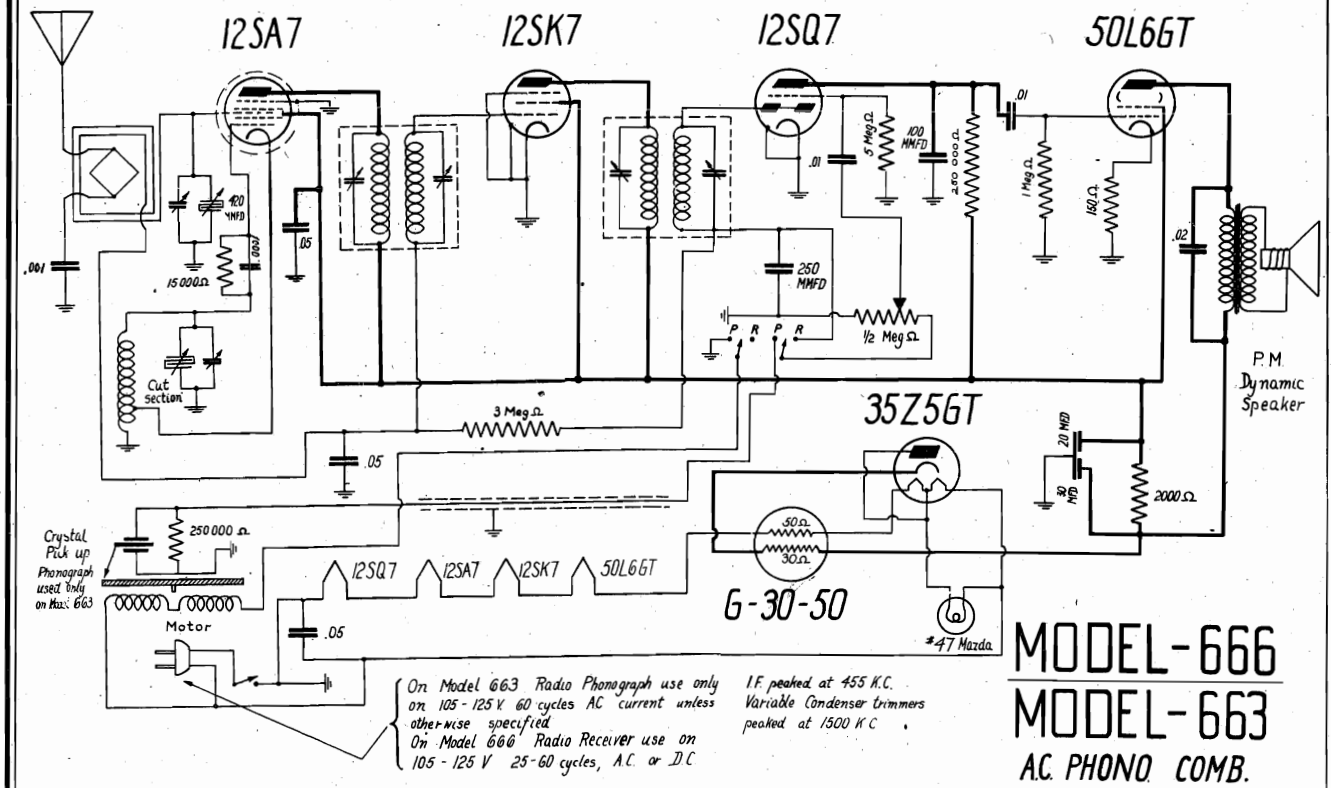

MODELS 542, 542LW
Schematic, Socket
Alignment

DEWALD RADIO MFG. CORP.

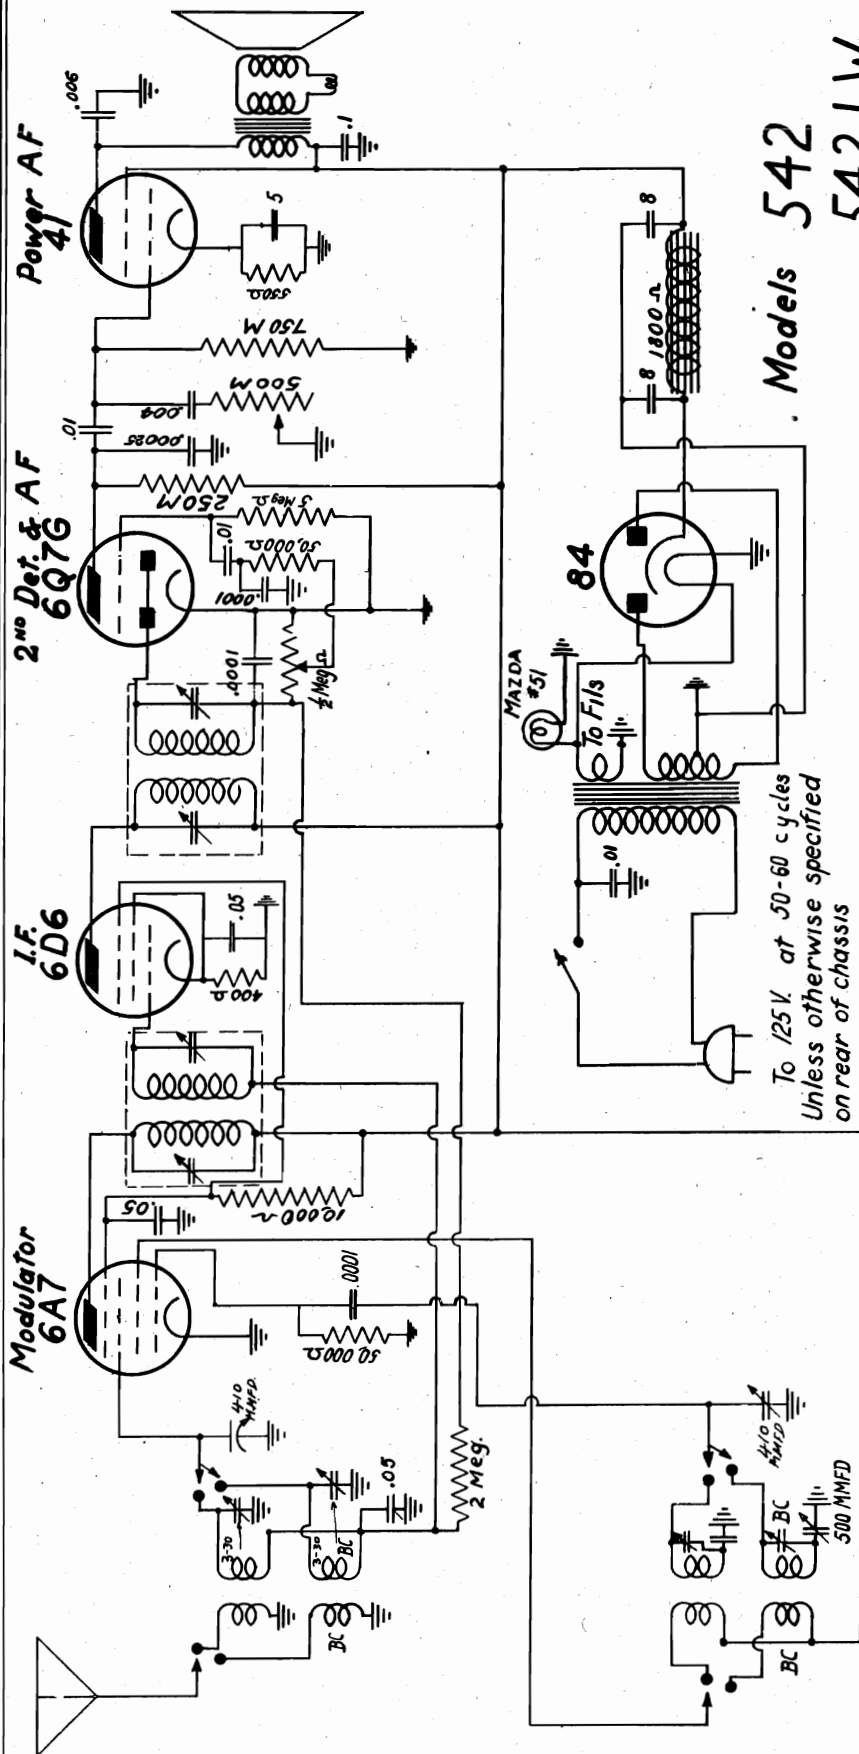

Models 542
542 L.W.


IF PEAK 456 KC

peak the broadcast padder for maximum signal. The variable condenser should be "rocked" during this operation.

For 6.0-18.5 M.C. (Model 542) Turn wave band switch to this band. Adjust the generator and receiver to 16.0 M.C. and peak trimmers for maximum signal. The low frequency is automatically adjusted by a fixed calibrated padder.

(Model 542 L.W.) Turn wave band switch to long wave band. Adjust the generator and receiver to 300 K.C. and peak trimmers for Maximum signal. Adjust Generator and receiver to 175 K.C. and peak Long Wave padder for maximum signal. The variable condenser should be "rocked" during this operation. Recheck 300 K.C.

To 125V. at 50-60 cycles
Unless otherwise specified
on rear of chassis

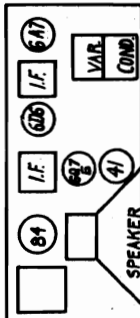

SHORT WAVE ALIGNMENT:

LONG WAVE ALIGNMENT:

- MODEL**
- 542
 - 542L.W.
- RANGE COVERAGE**
- 555-174 meters, 50-16 meters
 - 540-1725 K.C., 6.0-18.5 M.C.
 - 555-174 meters, 2000-750 meters
 - 540-1725 K.C. 150-400 K.C.
- TO CALIBRATE RECEIVER**

Connect antenna lead of the signal generator to antenna lead of receiver and ground lead of generator to receiver chassis. Short circuit front section of variable condenser. Adjust generator to 456 K.C. and peak I.F. trimmers for maximum signal.


Remove short from variable condenser. Have wave band switch on broadcast position. Adjust generator and receiver to 1500 K.C. Peak trimmers for maximum signal. Adjust generator and receiver to 600 K. C.;

I.F. ALIGNMENT:

BROADCAST ALIGNMENT:

DEWALD RADIO MFG. CORP.

MODELS 662, 662L, 665
Schematic, Socket
Alignment, Notes

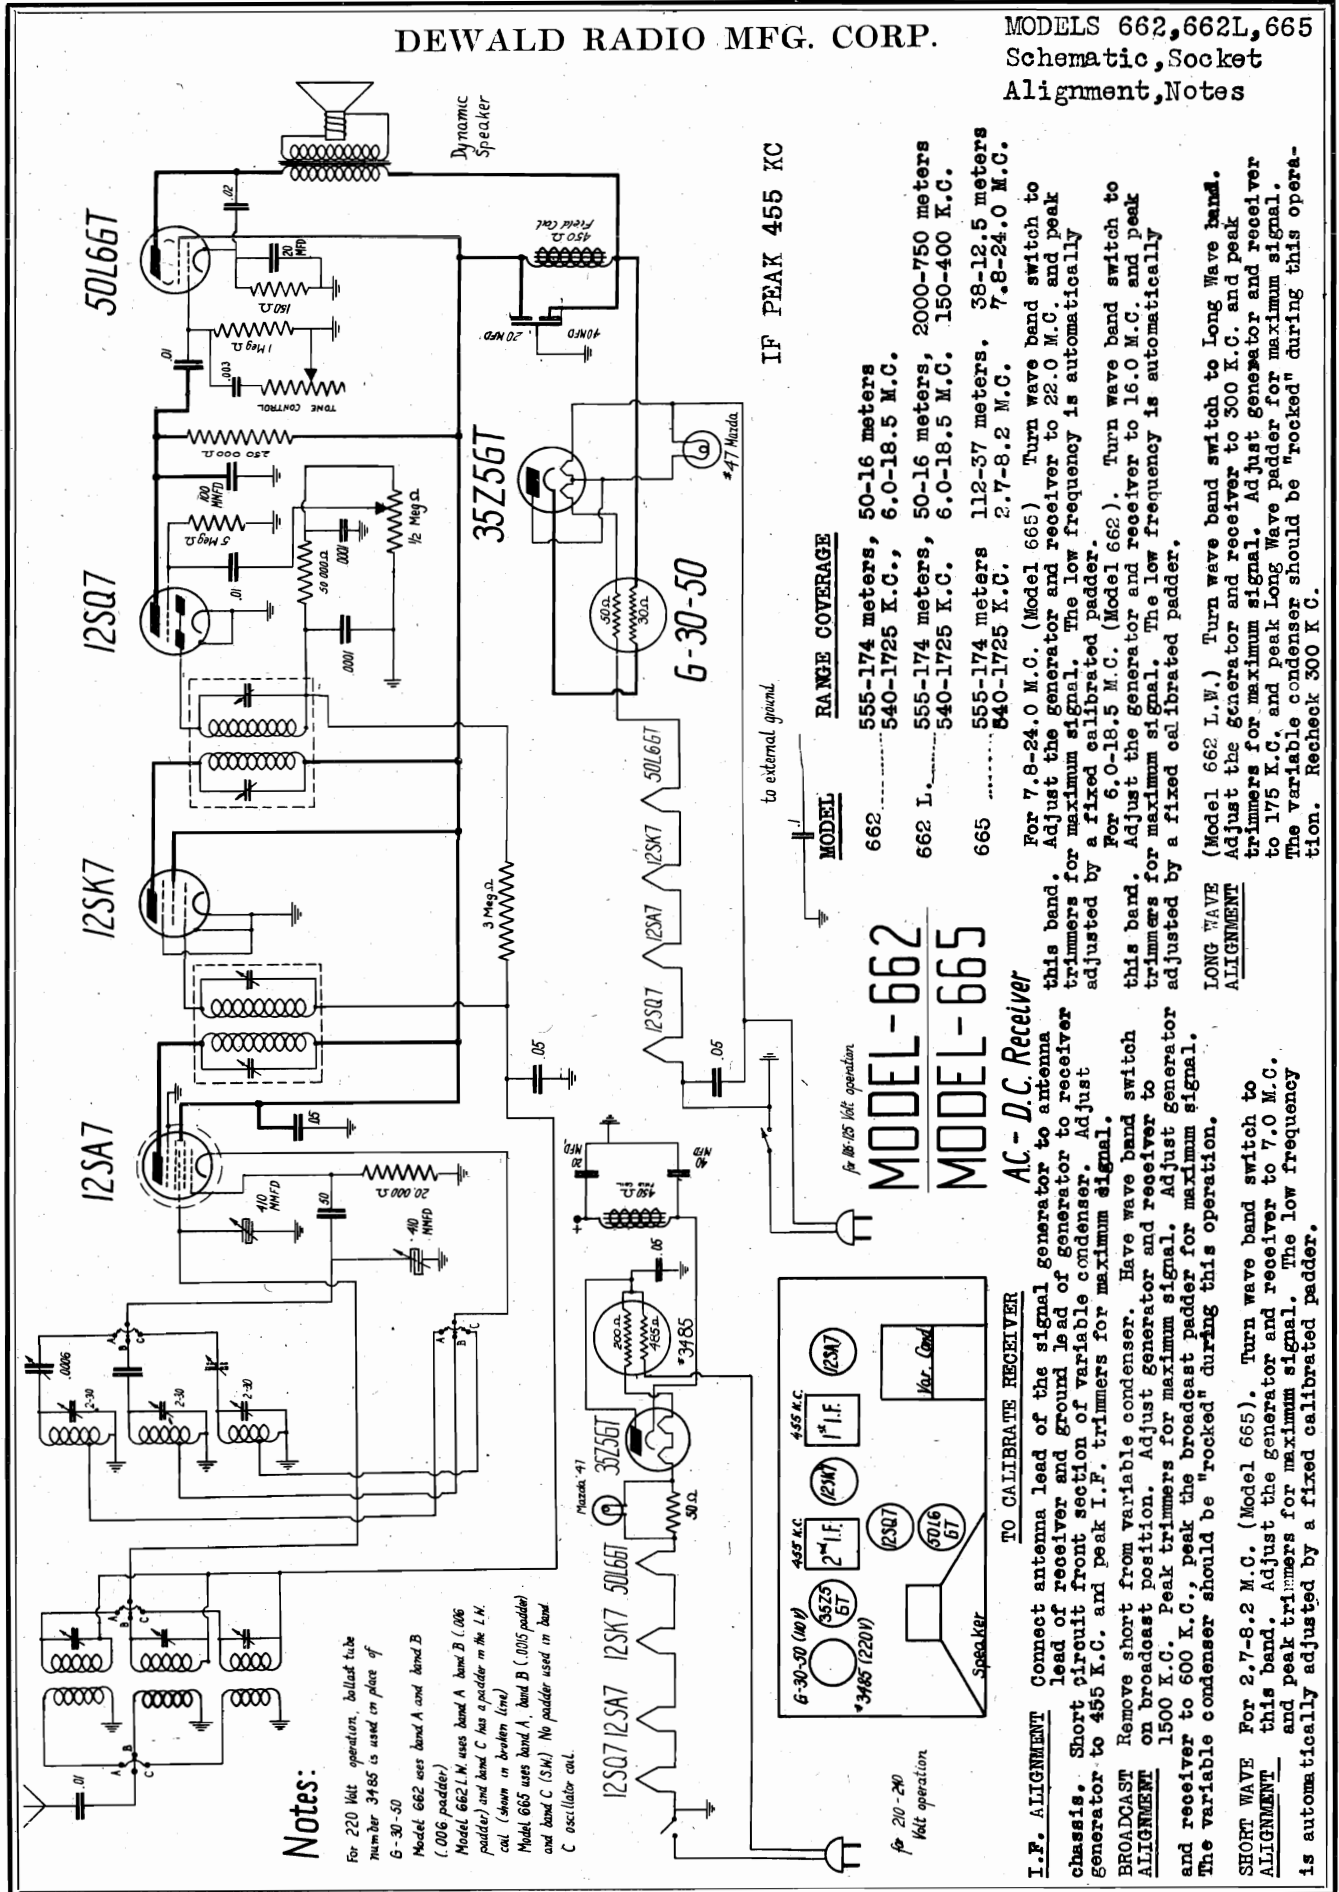

Notes:

For 220 Volt operation, ballast tube number 3485 is used in place of G-30-50
Model 662 uses band A and band B (.0016 padder)
Model 662L uses band A, band B (.006 padder) and band C has a padder in the I.M. coil (shown in broken line)
Model 665 uses band A, band B (.0015 padder) and band C (SW). No padder used in band C oscillator coil.

IF PEAK 455 KC

RANGE COVERAGE

MODEL 662	555-174 meters, 50-16 meters
MODEL 662 L	540-1725 K.C., 6.0-18.5 M.C.
MODEL 665	555-174 meters, 50-16 meters, 2000-750 meters
	540-1725 K.C., 6.0-18.5 M.C., 150-400 K.C.
	555-174 meters, 112-37 meters, 38-12.5 meters
	840-1725 K.C., 2.7-8.2 M.C., 7.8-24.0 M.C.


**MODEL-662
MODEL-665
AC-DC Receiver**

I.F. ALIGNMENT Connect antenna lead of the signal generator to antenna this band. Adjust the generator and receiver to 22.0 M.C. and peak lead of receiver and ground lead of generator to 485 K.C. and peak generator to 485 K.C. and peak I.F. trimmers for maximum signal. Adjust this band. Adjust the generator and receiver to 16.0 M.C. and peak trimmers for maximum signal. The low frequency is automatically adjusted by a fixed calibrated padder.


BROADCAST ALIGNMENT Remove short from variable condenser. Have wave band switch on broadcast position. Adjust generator and receiver to 1500 K.C. Peak trimmers for maximum signal. Adjust generator and receiver to 600 K.C., peak the broadcast padder for maximum signal. The variable condenser should be "rocked" during this operation.

SHORT WAVE ALIGNMENT For 2.7-8.2 M.C. (Model 665). Turn wave band switch to this band. Adjust the generator and receiver to 300 K.C. and peak trimmers for maximum signal. Adjust generator and receiver to 175 K.C. and peak Long Wave padder for maximum signal. The variable condenser should be "rocked" during this operation. Recheck 300 K.C.

TO CALIBRATE RECEIVER

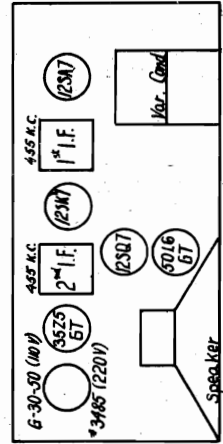


EMERSON RADIO & PHONOGRAPH CORP. MODELS CJ221, CJ232 AC, CJ1-221, CJ1-232 AC-DC Chassis CJ, CJ1, Early, Late Schematics

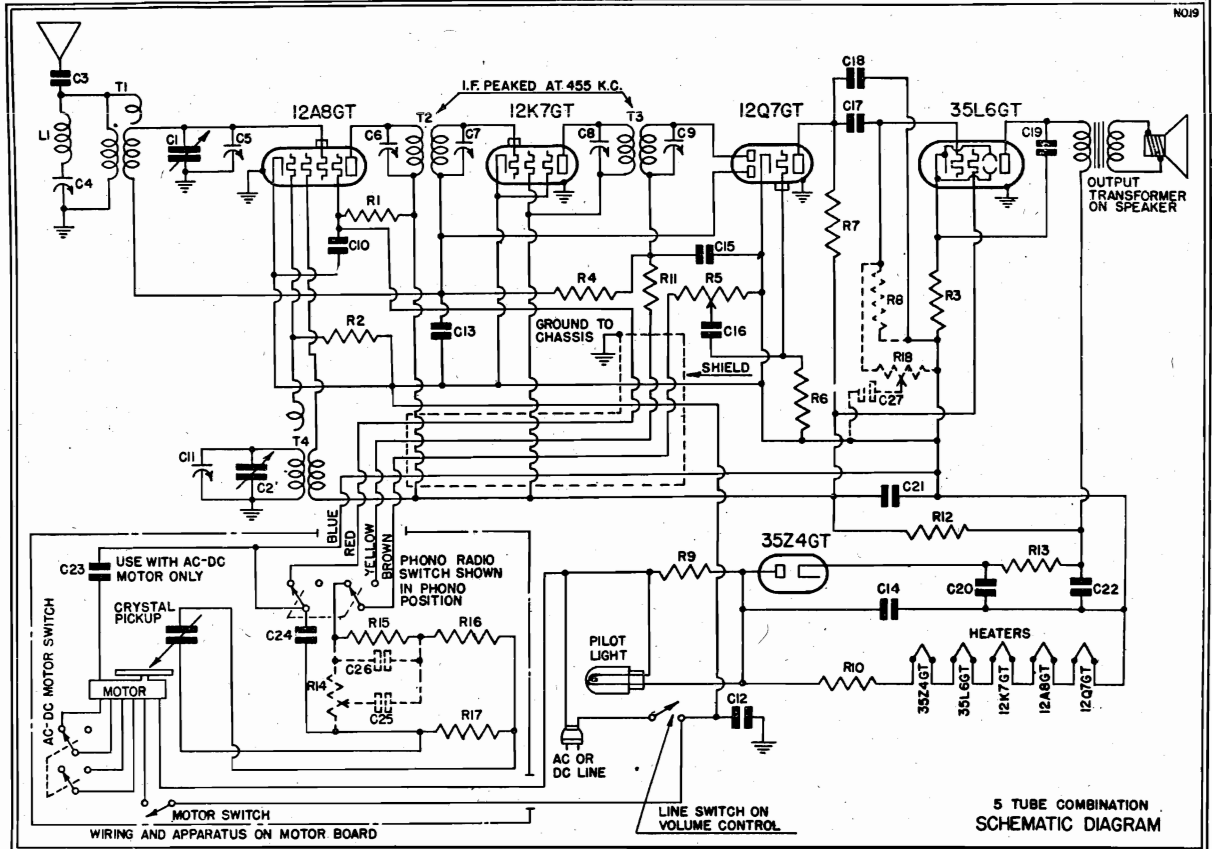

Schematic Diagram for Chassis Bearing Serial Numbers below 2700250

Nov. 1, 1939

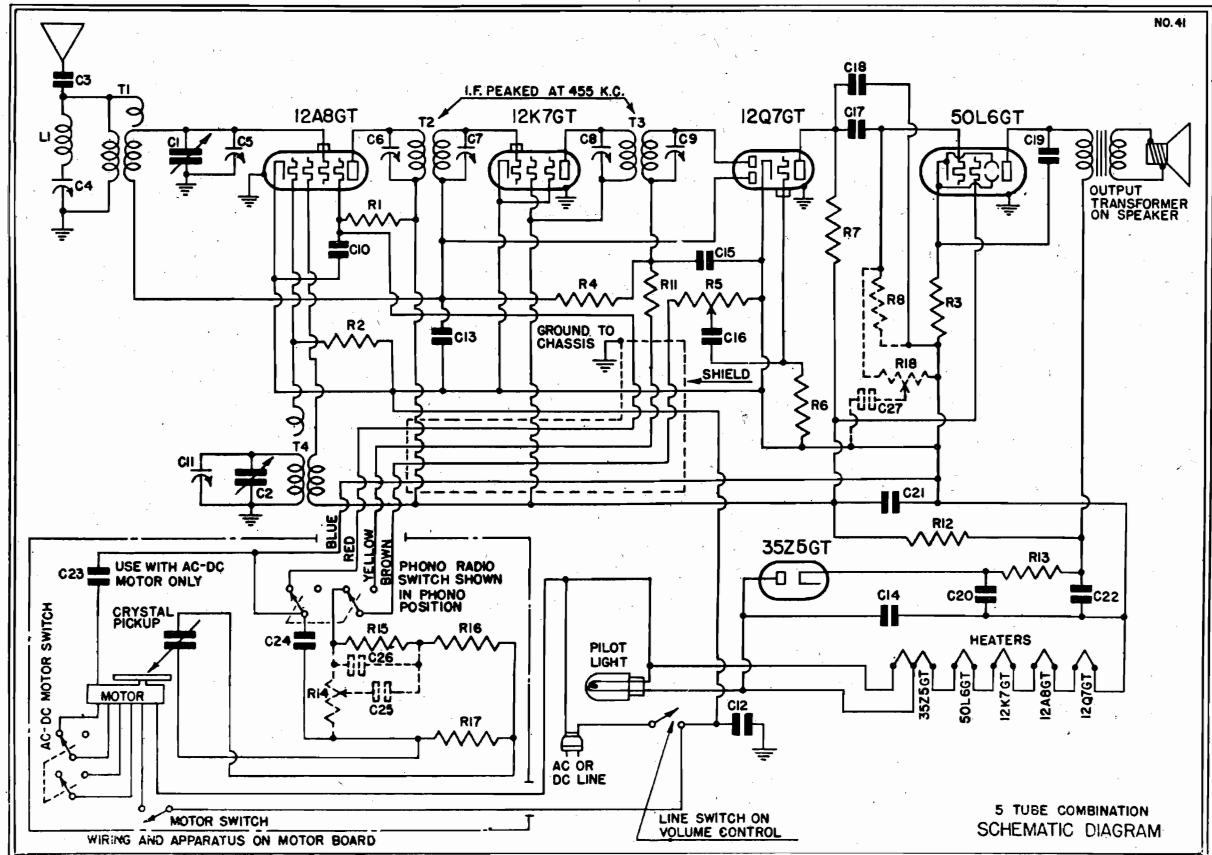

Schematic Diagram for Chassis Bearing Serial Numbers above 2700250

MODELS CJ221, CJ232 AC
CJ1-221, CJ1-232 AC-DC EMERSON RADIO & PHONOGRAPH CORP.
Chassis CJ, CJ1
Voltage, Alignment, Parts
Changes, Coil Data

Tube Data

For serial numbers below 2,700,250:
 1-12A8 or 12A8GT
 1-1207 or 1207GT
 1-31L6 or 31L6GT
 1-31Z4 or 31Z4GT
 1-31Z5 or 31Z5GT

For serial numbers above 2,700,250:
 1-12A8 or 12A8GT
 1-12K7 or 12K7GT
 1-12SQ7 or 12SQ7GT
 1-50L6 or 50L6GT
 1-31Z5 or 31Z5GT

pentagrid oscillator modulator
 first i-f amplifier
 diode detector, a-f amplifier, a.v.c.
 beam power output
 full-wave rectifier

All tubes are replaceable with either metal or equivalent bantam glass tubes. The letters "GT" at the end of the tube number indicate that the tube has a bantam size glass envelope. In all other respects it is the same as the metal tube bearing the same number without the "GT."

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed below are from point indicated to B minus (switch, with the volume control turned on full and no signal. Line voltage for these readings was 117.5 volts, 60 cycles. All readings except heaters and cathodes were taken on 250 volt scale. Measurements made with 117.5 volts d.c. will be lower than those given below.


Tube	Plate	Screen	Cathode	Osc. Plate	fil.
12A8GT	65	40	0	65	12
12K7GT	65	65	0	65	12
12SQ7GT	100	40	0	65	12
50L6GT	100	65	7.7	65	50

Voltage at 31Z5 cathode—110 volts.

Voltage across pilot light—4.5 volts.

† In chassis using 31Z4GT and 31L6GT plate and screen voltage readings will be slightly higher.

CHASSIS MODEL CJ
 Voltage rating — 105-125 volts
 Power consumption: 30 watts for receiver
 20 watts for 221 a.c. or 232 a.c. motor
 30 watts for 221 and 232 a.c.-d.c. motors
 Frequency range — 540-1730 kc.

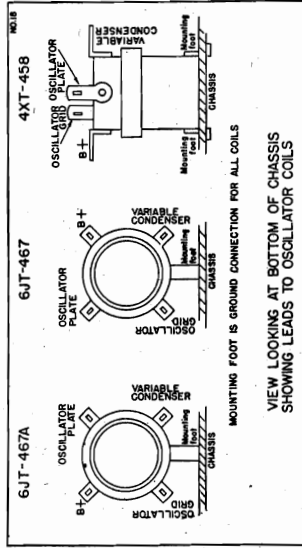

Location of Coils and Trimmer Adjustments

The first i-f transformer is mounted on top of the chassis deck to the left of the variable condenser. The trimmers are accessible through holes in the top of the can.

The second i-f transformer is mounted underneath the chassis beneath the variable condenser. The trimmers are accessible through holes in the top of the chassis directly beneath the variable condenser.

The trimmers for the antenna and oscillator coils are located on the variable condenser. The trimmer on the front section is for the antenna coil.

The 455 kc wave-trap is mounted on the same form as the antenna coil between the 12K7 and 31Z5 tubes. The trimmer for the 455 kc wave-trap is mounted on the coil and is accessible from the rear of the chassis. The oscillator coil is located underneath the chassis, beneath the first i-f transformer.

i-f and Wave-Trap Alignment

Swing the variable condenser to the maximum capacity position. Feed 455 kc to the grid-cap of the 12A8 tube through a .01 mf condenser. Feed 455 kc to the grid-cap of the 455 kc wave-trap through a .0001 mf condenser to the antenna lead and adjust the wave-trap for minimum response. (See General Notes, paragraph No. 4)

R-f Alignment

Set the dial pointer at 140. Feed 1400 kc through a .0001 mf condenser to the antenna lead and adjust first the oscillator trimmer (on rear section of variable condenser) then the antenna trimmer (on front section of variable condenser) for maximum response.

REPLACEMENT PARTS

Item	Part No.	DESCRIPTION	PRICE
L1, T1	4XT-432	Antenna coil with adjustable 455 kc wave-trap	.35
T4	6JT-467A or 6JT-467	Oscillator coil. (See production change no. 2)	.90
T2	6JT-466AU or 6JT-466AU	Oscillator coil. (See production change no. 1)	.90
T3	4XR-437CU	Double-tuned 455 kc first i-f transformer.	1.10
R1	4XR-193	500,000 ohm 1/2 watt carbon resistor.	.85
R2	4XR-193	100,000 ohm 1/2 watt carbon resistor.	.16
R3	4XR-193	140 ohm 1/2 watt wire-wound resistor.	.16
R4	4XR-42	2 megohm 1/4 watt carbon resistor.	.16
R5	4XR-335	Volume control .25 megohm with line switch.	.90
R6	4XR-327	15 megohm 1/4 watt carbon resistor.	.16
R7, R8, R17	4XR-56	500,000 ohm 1/4 watt carbon resistor. (See production change no. 1)	.16
R9, R10	6JR-333	Tapped metal-clad wire-wound resistor. (See production change no. 3)	.25
R11	4XR-54	100,000 ohm 1/2 watt carbon resistor.	.16
R12	4XR-334	2,500 ohm 1/2 watt carbon resistor.	.16
R13	4XR-325	175 ohm 1 watt wire-wound resistor.	.16
C1, C2	4XC-391C	Two-gang variable condenser (for CJ-221)	2.40
C1, C2	4XC-412	Two-gang variable condenser (for CJ-232)	2.75
C3	4XC-401	0.00055 mf mica condenser.	.20

Item	Part No.	DESCRIPTION	PRICE
PC4	C11, C8, C9	Trimmer, part of wave-trap assembly.	.16
PC5	C10, C13, C24	Trimmer, part of i-f transformer.	.20
PC6	AC-6	0.05 mf, 200 volt tubular condenser.	.20
PC7	AC-6	0.1 mf, 200 volt tubular condenser.	.20
C14	4XC-394A	0.05 mf, 400 volt tubular condenser.	.20
C15	3HC-274	0.0022 mf mica condenser.	.20
C16	61C-282A or 61C-282AU	0.024 mf, 400 volt tubular condenser.	.20
C17, C19	4XC-404	Dual 20 mf, 150 volt dry electrolytic condenser.	.90
C20, C21	4XC-404	20 mf, 135 volt dry electrolytic condenser.	.65
C22	4XC-404	0.01 mf, 400 volt tubular condenser (for AC-DC motors only)	.20
C23	61D-104	Pilot light, 6.3 volt, 15 amp, Mazda No. 47	.35
	61D-74	Dial face	.02
	4YZ-772	Drive cord	.05
	31Z-824	Drive cord spring	.05
	4VZ-188B	Dial pointer	.10
	4XM-467	Drive pulley	.10

ADDITIONAL PARTS USED ON CJ-221

R14	4LR-312B	Tone control, 5 megohm with line switch.	1.05
R15	KR-97	1 megohm 1/4 watt carbon resistor.	.20
C25	31M-213	Phonograph needle cup.	.20
	4KPM-20A	117 volt a.c. phonograph motor (for 221 a.c.)	12.00
	3GPM-1	117 volt a.c.-d.c. phonograph motor (for 221 a.c.-d.c.)	43.20
	4XC-418A	Crystal pick up	8.10
	6JS-385	6" permanent magnet dynamic speaker	6.20
	4XE-3A	Phono-radio switch	.65
		Dial crystal	.20

ADDITIONAL PARTS USED ON CJ-232


R15, R16	KR-96	5 megohm 1/4 watt carbon resistor.	.16
R18	4XR-342	Tone control, 5 megohm	.70
C26	4UC-371A	0.0003 mf mica condenser.	.20
C27	HC-84	0.006 mf 600 volt tubular condenser.	66.00
	4KPM-19A	117 volt a.c. phonograph motor (for 232 a.c.-d.c.)	42.60
	4KPM-19	117 volt a.c. phonograph motor (for 232 a.c.)	9.85
	4PS-303A	6" permanent magnet dynamic speaker	6.70
	TTS-111S	Phono-radio switch	.55
	4XE-3	Dial crystal	.20
	4XW-130	Record holder block	.60

When ordering replacement parts specify part number.

- *Item number locates the article on the schematic diagram.
- †Not supplied separately.
- 1. In CJ chassis bearing serial numbers below 2,700,250: R7, the 1207G plate resistor, is 250,000 ohms.
- 2. CJ-221 chassis uses oscillator coil 4XT-458 or 6JT-467. For correct lug connections to any of these coils see illustration.
- 3. R9, R10 is not used on CJ chassis above serial number 2,700,250.
- 4. CJ-232 chassis uses dotted portion R18, C26, and C27.

PRODUCTION CHANGES

MODELS CULW261, CULW262
 CULW265, CULW274 EMERSON RADIO & PHONOGRAPH CORP.
 Chassis CULW
 Schematic, Voltage, Parts
 Alignment

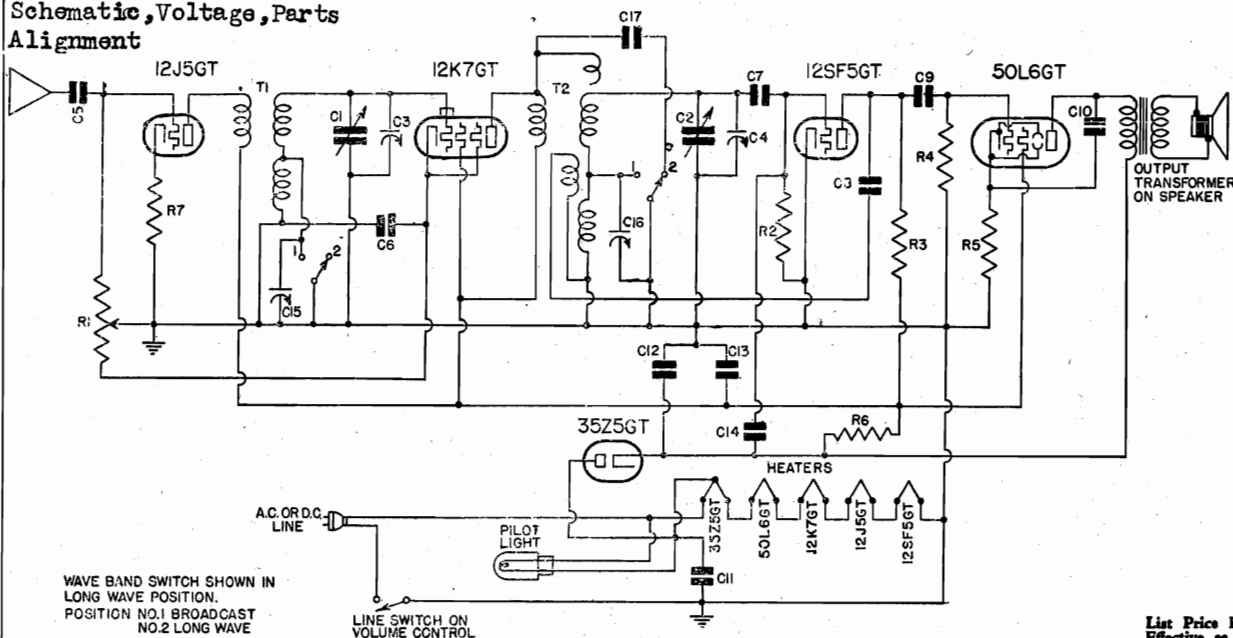

List Price Ea.
 Effective as of
 Oct. 1st, 1939

(Subject to change without notice)

*Item	Part No.	DESCRIPTION	PRICE
T1	6UT-517	Two-band r-f coil.....	\$.65
T2	6UT-518	Two-band detector coil.....	1.10
R1	6UR-360	Volume control 75,000 ohms with 200 ohm bias stop and line switch.....	.85
R2	3RR-275	10 megohm 1/4 watt carbon resistor.....	.16
R3, R4	KR-56	500,000 ohm 1/4 watt carbon resistor.....	.16
R5	3FR-293	140 ohm 1/2 watt wire-wound resistor.....	.16
R6	6FR-348	2,400 ohm 1/2 watt carbon resistor.....	.16
R7	KR-50	500 ohm 1/4 watt carbon resistor.....	.16
C1, C2	6UC-439	Two-gang variable condenser.....	2.30
†C3, C4		Trimmers, part of variable condenser.....	
C5, C8	5AC-384	0.0002 mf, 600 volt tubular or mica condenser.....	.20
C6	BC-12	0.05 mf, 200 volt tubular condenser.....	.20
C7	KC-58	0.01 mf, 400 volt tubular condenser.....	.20
C9	LC-65	0.02 mf, 400 volt tubular condenser.....	.20
C10	5JC-417	0.035 mf, 400 volt tubular condenser.....	.20
C11	LC-64	0.05 mf, 400 volt tubular condenser.....	.20
C12, C13	6UC-447	Multiple 30 and 10 mf, 150 volt dry electrolytic condenser.....	.90
C14	6UC-440A	0.000002 mf mica condenser.....	.20
C15, C16	3AC-278	Trimmer.....	.15
C17	4VC-371A	0.0003 mf mica condenser.....	.20
	6JL-104	Pilot light, 6.3 volt, .15 amp., Mazda No. 47	

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed below are from point indicated to ground (chassis) with volume control turned on full and no signal. The line voltage for these readings was 117.5 volts, 60 cycles, a.c. All readings except cathodes and heaters were taken on 250 volt scale. Readings taken on d.c. will be slightly lower.

Tube	Plate	Screen	Cathode	Heater
12J5GT, first r-f amplifier....	85	—	2.3	12
12K7GT, second r-f amplifier..	85	85	1.6	12
12SF5GT, grid leak detector ..	25	—	0	12
50L6GT, beam power output..	110	85	6	50

Voltage at rectifier cathode—120 volts.

Power consumption 30 watts.

ALIGNMENT PROCEDURE


An oscillator with frequencies of 1500 kc and 350 kc is required.

Use as weak a test signal as possible. An output meter should be used across the voice coil or output transformer for observing maximum response.

Rotate variable condenser to the maximum capacity position and set the pointer at the next calibration mark beyond 550. Rotate band-switch clockwise to broadcast (medium-wave) position. Then rotate the variable condenser until the pointer is at 200 meters, feed 1500 kc to the antenna through a .0001 mf mica condenser and adjust both trimmer condensers on the variable condenser for maximum response.


Turn wave-band switch counter-clockwise to long-wave position. Rotate variable condenser until pointer is at 850 meters and feed 350 kc to antenna. Adjust the two long-wave interstage coil trimmers for maximum output. The first long-wave interstage coil trimmer is located on the speaker frame. The second (detector coil) long-wave trimmer is located beneath the chassis and is reached from the right end of the chassis.

EMERSON RADIO & PHONOGRAPH CORP. MODELS CX263, CX283, CX284, CX285, CX305, CX292
 Chassis CX (3 Types)
 Schematics

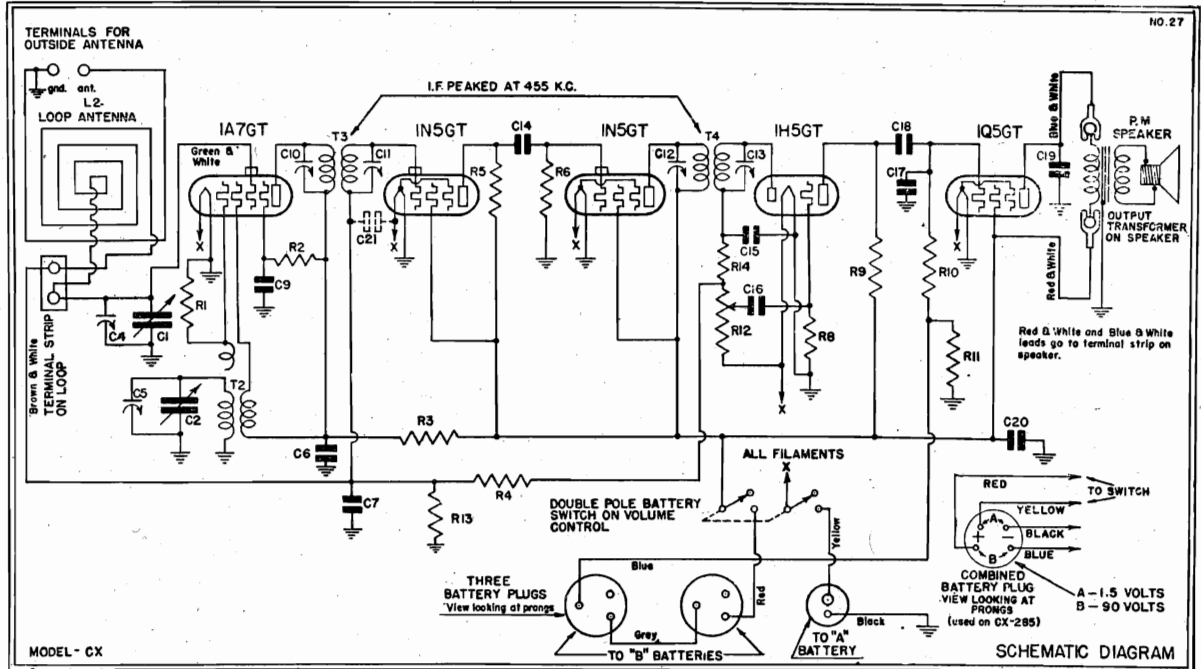


MODELS CX-263, 283, 284 and 305

Current drain "A" battery—0.3 amps.
 "B" battery—0.10 amps. with no signal
 Frequency range . . All Models except CX-285—540 to 1600 kc
 Model CX-285—540 to 1730 kc

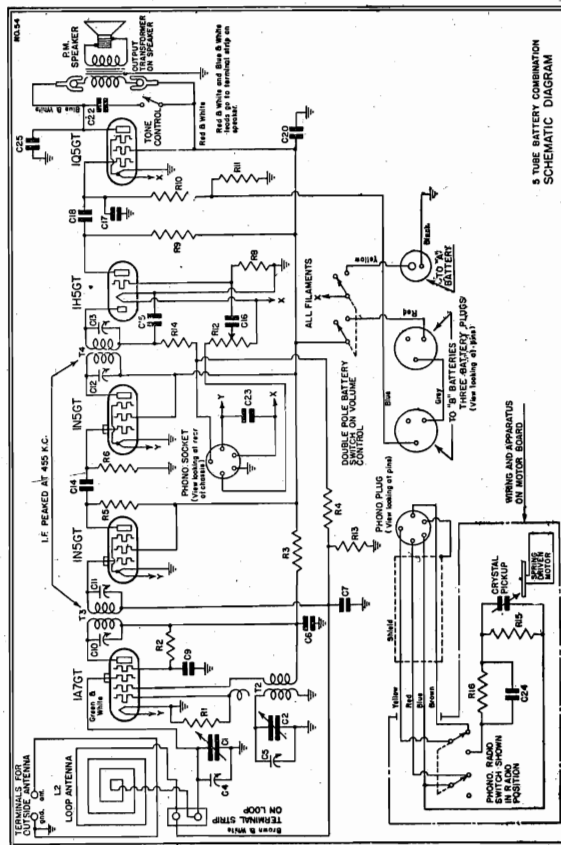

MODEL CX-292



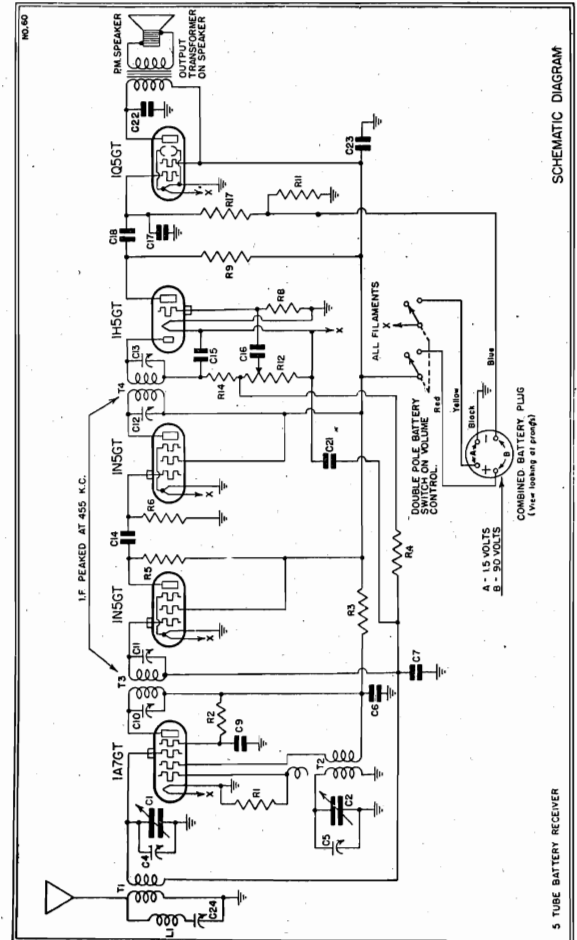


MODEL CX-285

July 15th, 1939

MODELS CX263, CX283, CX284
CX285, CX292, CX305
Voltage, Alignment, Parts
Batt. Data, Changes

EMERSON RADIO & PHONOGRAPH CORP.

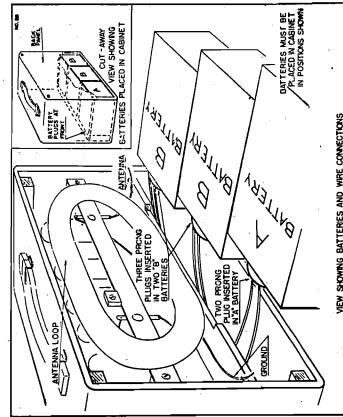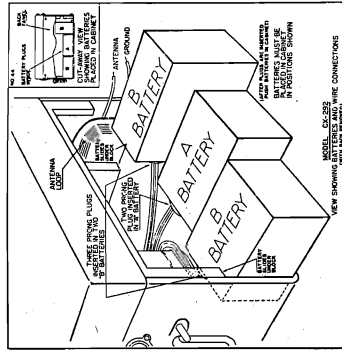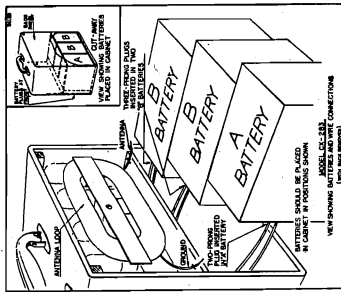

ADDITIONAL PARTS USED ON CX-292

- 0.95 megohm 1/4 watt resistor
- 2 megohm 1/4 watt carbon resistor
- 0.05 mf, 600 volt tubular condenser
- 0.05 mf, 200 volt tubular condenser
- 0.0014 mf mica condenser
- 87C-498A
- 83M-251
- 83PM-48
- Spring-driven phonograph motor
- Phono-radio switch
- Tone control switch

- KR-55
- HR-42
- HC-34
- BC-12
- 87C-498A
- C23
- C24
- C25

* Item number locates the article on the schematic diagram.
† Not supplied separately.

ADJUSTMENTS

An oscillator with frequencies of 455 and 1400 kc is required. An output meter should be used across the voice coil or output transformer for observing maximum response.

Always use as weak a test signal as possible when aligning the receiver.

Location of Coils and Trimmer Adjustments

The oscillator coil is located beneath the chassis. The trimmer for the oscillator is on the rear section of the variable condenser. On Model CX-285 the antenna coil is located between the two i-f transformers. On all other CX Models the loop antenna acts as the antenna coil. The trimmer for the loop C4 is on the loop frame for Models CX-263, 284 and 305. On Models CX-283, 285 and 292, C4 is on the front section of the variable condenser.

The i-f transformers are located in cans mounted on top of the chassis. The first i-f transformer is at the extreme left end of the chassis. The second i-f transformer is at the extreme right end of the chassis. The trimmer condensers for both transformers can be reached through holes in the tops of the cans.

I-f Alignment

Using variable condensers to minimum capacity position. Feed 455 kc to the 147C7 meter and adjust the trimmer. Adjust the four i-f trimmers for maximum response.

R-f Alignment

Set the dial pointer at 140. Feed 1400 kc through a .0001 mf condenser. Adjust the trimmer to adjust the trimmer for maximum response. Adjust the trimmer (on rear section of variable condenser) then the antenna trimmer for maximum response.

If the loop antenna has been replaced it may be necessary to adjust the loop inductance. Align at 140. Set the dial at 60 and feed 600 kc to the antenna lead. A portion of the outside turn of the loop may then be swung to either side of the center to give maximum response. Realign at 140.

Battery Installation for Models CX-263, CX-283, CX-284, CX-292 and CX-305

The portable cabinets contain a shelf under the receiver for housing the batteries. Install and connect the batteries observe the following procedure:

1. Remove the back panel of the cabinet by taking out the wood screws.
2. Locate the battery cable on the bottom shelf of the cabinet.
3. With the batteries out of the cabinet insert the three-prong plug on the battery cable into the two "B" batteries and the single two-prong plug into the "A" battery.
4. Place the batteries in the cabinet as indicated in the illustration. Note that the plug end of the battery is up against the front panel of the cabinet.
5. Replace the back panel of the cabinet and fasten it in place with the wood screws.

Battery Installation for Model CX-285: The cabinet for this model is designed to house completely the combined "A" and "B" pack. Place the battery pack in the cabinet at the rear of the receiver. An insert mounting plug of the battery cable into the socket on the top of the battery.

GENERAL NOTES

1. Batteries: The Model CX is designed to house the complete set of batteries within the cabinet. The battery complement should be as follows:

- FOR MODELS CX-263, CX-283, CX-284, CX-292 AND CX-305
- Eveready Part No. Rayovac Part No.
- 741 P-96A
- (plug-in type) (plug-in type)
- 830-P1 8F
- (plug-in type) (plug-in type)

FOR MODEL CX-285

- 748 AB82
- (plug-in type) (plug-in type)

"A" and "B" Pack

- Grid screen—black
- Grid—blue
- Plate—blue
- B plus—red

2. The color coding of the i-f transformer leads is as follows:

- Yellow—A plus, 1.5 volts
- Black—A minus

3. The color coding of the battery cable is as follows:

- Blue—B minus

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed are from point indicated to chassis with volume control turned on full and no signal. The battery voltages for these readings were: "A" 1.5 volts, "B" 90 volts.

Point	Screen	Oct. Plate	Ft.
1A7GT oscillator-modulator	82	82	1.5
1N5GT 1st i-f amplifier	80	82	1.5
1H5GT 2nd amplifier	82	82	1.5
1H5GT 2nd detector	25	82	1.5
1Q5GT beam power output	77	82	1.5


Bias for the 1Q5GT tube is obtained across the resistor R11. The voltage drop across this resistor should be 7.0 volts.

Part No.	DESCRIPTION
T1, L1	Antenna coil with 455 kc adjustable wave trap (for CX-285 only)
L2	Loop antenna assembly (for CX-292)
L3	Loop antenna assembly (for CX-283)
L4	Loop antenna assembly (for CX-263, 284 and 305)
T2	Oscillator coil
T3	Double-tuned 455 kc first i-f transformer
T4	Double-tuned 455 kc diode i-f transformer
R1, R14	50,000 ohm 1/4 watt carbon resistor
R2	500 ohm 1/4 watt carbon resistor
R3	500 ohm 1/4 watt carbon resistor
R4, R5, R10, R13, R17	100,000 ohm 1/4 watt carbon resistor. (See production change No. 3)
R6	25,000 ohm 1/4 watt carbon resistor
R7	0.5 megohm 1/4 watt carbon resistor
R8	680 ohm 1/4 watt wire-wound resistor
R9	Volume control—500,000 ohms with double pole battery switch
R10	Two-gang variable condenser (for CX-283, 284 and 305)
R11	Trimmers, part of variable condenser. (See production change No. 2)
C1, C2	0.05 mf, 200 volt tubular condenser
C3	0.02 mf, 400 volt tubular condenser
C4	0.00022 mf mica condenser
C5	0.00022 mf mica condenser
C6, C7, C21	0.01 mf, 400 volt tubular condenser (for CX-283, 292 and 305)
C8, C18	0.01 mf, 600 volt tubular condenser (production change No. 1)
C9, C10, C11, C12, C13, C14, C15, C16, C19	8 mf, 100 volt dry electrolytic condenser
C20	4" permanent magnet dynamic speaker (for CX-283)
C21	5" permanent magnet dynamic speaker (for CX-263)
C22	6" permanent magnet dynamic speaker (for CX-263, 284, 285, 292 and 305)
C23	Dial face (for CX-285 only)
C24	Indicator dial
C25	Dial pointer (for CX-263 and 305)
C26	Dial crystal (for CX-263, 283, 284 and 292)
C27	Drive cord spring
C28	Dial drive cord
C29	Battery cable (for CX-285)
C30	Battery cable (for CX-263, 284, 285, 292 and 305)
C31	Dial drive shaft

PRODUCTION CHANGES

1. On CX-263, 284 and 285 condenser C19 is part no. 87C-524, 0.003 mf, 600 volt tubular condenser.
2. On CX-263, 284 and 305 trimmer C4 is mounted on the loop antenna frame.
3. Chassis bearing serial numbers below 2,921,400 use .5 megohm at R10.


EMERSON RADIO & PHONOGRAPH CORP. MODELS CV264, CV280, CV295
 CV298, CV313, CV314, CV316
 Chassis CV (2 Types)
 Schematics

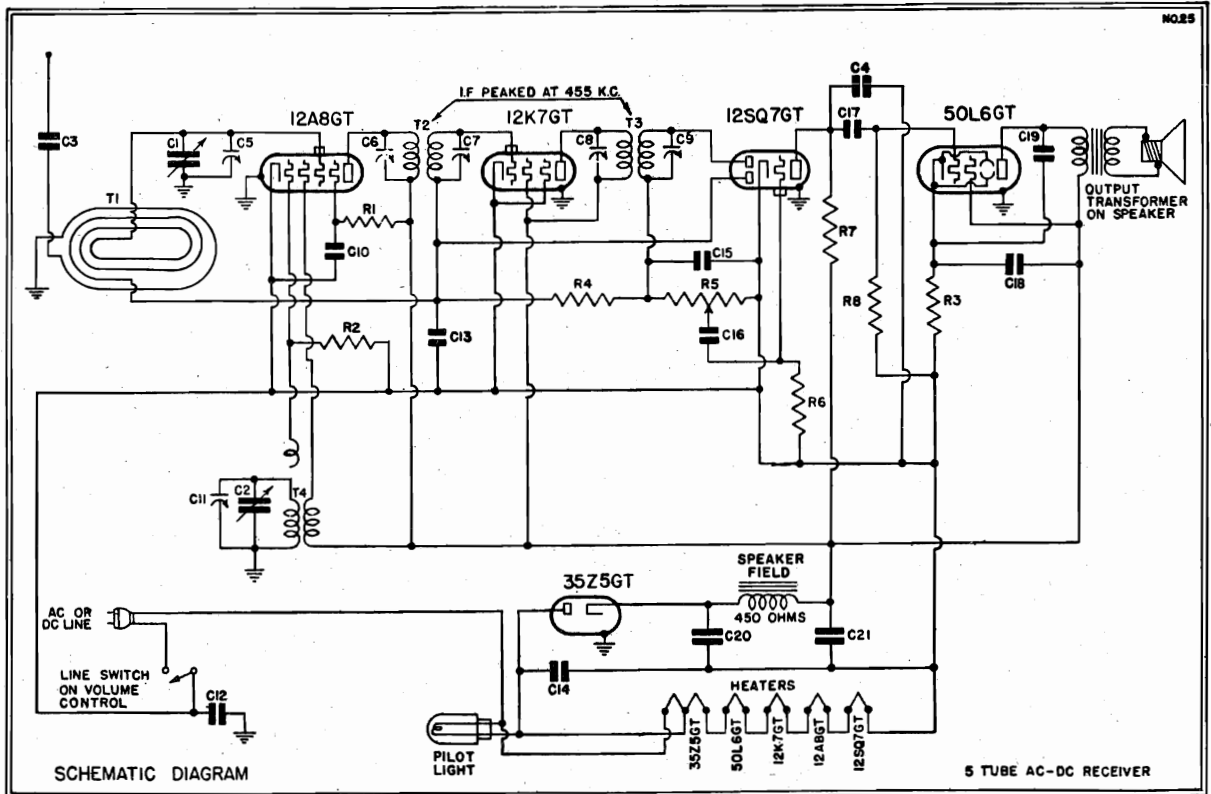

SCHMATIC FOR CHASSIS USING 12A8GT TUBE

Voltage rating105-125 volts, a.c. or d.c.
 Power consumption30 watts.

The color coding of the i-f transformer leads is as follows:
 Grid—green Plate—blue
 Grid return—black B plus—red

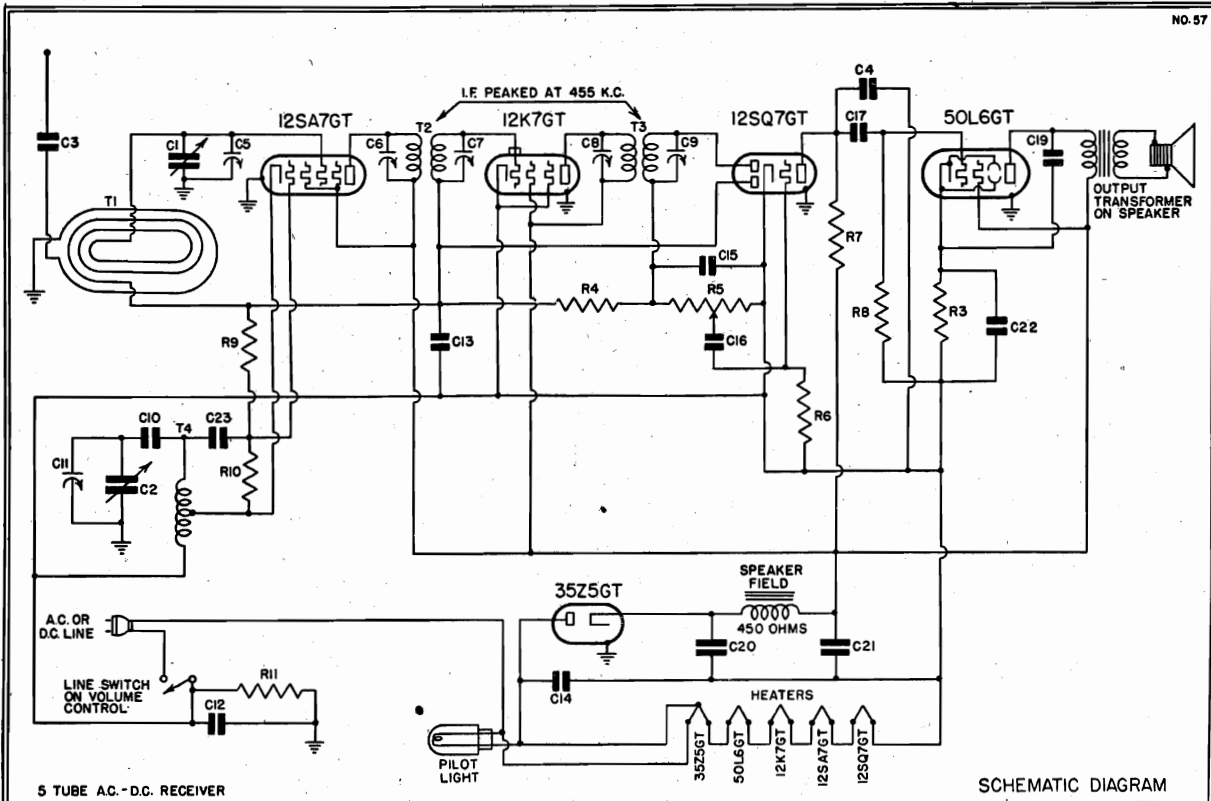

SCHMATIC FOR CHASSIS USING 12SA7GT TUBE

Oct. 15, 1939

MODELS CV264, CV280, CV295
 CV298, CV313, CV314, CV316 EMERSON RADIO & PHONOGRAPH CORP.
 Chassis CV
 Voltage, Parts, Changes
 Alignment, Trimmers

TUBE DATA

THE TUBE COMPLEMENT IS AS FOLLOWS:

- One 12SA7GT—pentagrid oscillator modulator
- One 12K7GT—first i-f amplifier
- One 12SQ7GT—diode detector, a-f amplifier, a.v.c.
- One 50L6GT—beam power output
- One 35Z5GT—half-wave rectifier

(NOTE: Chassis bearing serial numbers below 2920685 use 12A8GT instead of 12SA7GT)

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed below are from point indicated to B minus (switch) with the volume control turned on full and no signal. Line voltage for these readings was 117.5 volts, 60 cycles, a.c. All readings except heaters and cathodes were taken on 250 volt scale. Measurements made with 117.5 volts d.c. will be lower than those given below.

Tube	Plate	Screen	Cathode	Fil.
†12SA7GT	88	88	0	12
12K7GT	88	88	0	12
12SQ7GT	40	—	0	12
50L6GT	82	88	5.7	50

Voltage at 35Z5 cathode—115 volts.
 Voltage across speaker field—27 volts.

Voltage across pilot light—4.5 volts.
 †Chassis using 12A8GT measures 88 volts at oscillator plate and 45 volts at screen.

*Item	Part No.	Description
T1	6VW-172A	Loop antenna assembly (see production change no. 4b)
T4	7BT-486A	Oscillator coil (see production change no. 2)
T2	7BT-488C	Double-tuned 455 kc first i-f transformer (see production change no. 3a)
T3	7FT-513D	Double-tuned 455 kc second i-f transformer (see production change no. 3b)
R1	2CR-193	30,000 ohm 1/2 watt carbon resistor (see production change no. 1a)
R2	KR-53	50,000 ohm 1/4 watt carbon resistor (see production change no. 1a)
R3	3FR-293	140 ohm 1/2 watt wire-wound resistor
R4	NNR-220	3 megohm 1/4 watt carbon resistor.
R5	6VR-364	Volume control .25 megohm with line switch
R6	4XR-327	15 megohm 1/4 watt carbon resistor.
R7, R8	KR-56	500,000 ohm 1/4 watt carbon resistor.
R10	LR-60	20,000 ohm 1/4 watt carbon resistor (see production change no. 1b)
R11	LR-61	200,000 ohm 1/4 watt carbon resistor (see production change no. 1b)
C1, C2	6RC-436	Two-gang variable condenser
C3, C16	3HC-274	0.002 mf, 600 volt tubular condenser
C4, C15, C23	4XC-394A	0.00022 mf mica condenser
†C5, C11		Trimmers, part of variable condenser.
†C6, C7, C8, C9		Trimmers, part of i-f transformers.
C10, C13	BC-12	0.05 mf, 200 volt tubular condenser
C12	3CC-302	0.15 mf, 200 volt tubular condenser
C14	LC-64	0.05 mf, 400 volt tubular condenser
C17	6JC-425	0.024 mf, 400 volt tubular condenser.
C18	6VC-446	20 mf, 150 watt dry electrolytic condenser (see change no. 1a)
C19	LC-65	0.02 mf, 400 volt tubular condenser (see change no. 3c)
C20, C21	6JC-426B	Dual 20 mf, 150 volt dry electrolytic condenser
C22	6ZC-460	20 mf, 25 volt dry electrolytic condenser (see change no. 1b)
	6JS-268U	4" dynamic speaker

DIAL PARTS

- 6JL-104 Pilot light, 6.3 volt, .15 amp., Mazda No. 47
- 6VD-82A Dial face (see production change no. 4a)
- 4YZ-772 Drive cord
- 6JH-24B Drive shaft
- 6RW-162 Drive cord spring
- 6RF-52 Dial pointer
- 6RE-20 Dial crystal

PRODUCTION CHANGES

1. (a) Used only in chassis using 12A8GT.
 (b) Used only in chassis using 12SA7GT.
2. (a) Chassis bearing serial numbers below 2764502 use oscillator coil 6RT-476
 (b) Chassis bearing serial numbers between 2764502 and 2920685 use oscillator coil 7CT-511
3. Chassis bearing serial numbers below 2920685 use
 (a) First i-f transformer 6RT-479A.
 (b) Second i-f transformer 7BT-489A.
 (c) Condenser C19—.03 mf—400 volt.
4. Chassis bearing serial numbers below 2764502 use
 (a) Dial face 6VD-82.
 (b) Loop antenna 6VW-172.

*Item number locates the article on the schematic diagram.

†Not supplied separately.

Location of Coils and Trimmer Adjustments

The first i-f transformer is mounted on top of the chassis deck to the left of the speaker. The trimmers are accessible through holes in the top of the can.

The second i-f transformer is mounted on top of the chassis to the right of the speaker. The trimmers are accessible through holes in the top of the can.

The trimmers for the antenna and oscillator coils are located on the variable condenser. The trimmer on the front section is for the antenna coil (loop). The oscillator coil is located directly beneath the speaker.


Alignment

I.F.—Swing the variable condenser to the minimum capacity position. Feed 455 kc to the grid of the 12SA7GT tube through a .01 mf condenser and adjust the four i-f trimmers for maximum response. The grid of the 12SA7GT tube may be reached by clipping the input lead to the stator loop of the antenna (front) section.

R.F.—Set the dial pointer at 140. Feed 1400 kc from the signal generator into a loop of wire about one foot in diameter. Hold this radiating loop about 12 inches away from and parallel to the receiver loop antenna. Advance the input to the loop until a satisfactory deflection is obtained on the output meter. Adjust first the oscillator trimmer (on rear section of variable condenser) then the antenna trimmer (on front section of variable condenser) for maximum response. If the loop antenna has been replaced it may be necessary to retrack the loop inductance. With the dial set at 60 feed 600 kc to the antenna lead. A portion of the outside may be swung to either side of the center to give maximum response. Repeat the trimmer alignment at 140.

EMERSON RADIO & PHONOGRAPH CORP.

MODEL DH264, Chassis DH
Schematic, Voltage, Parts
Alignment, Trimmers

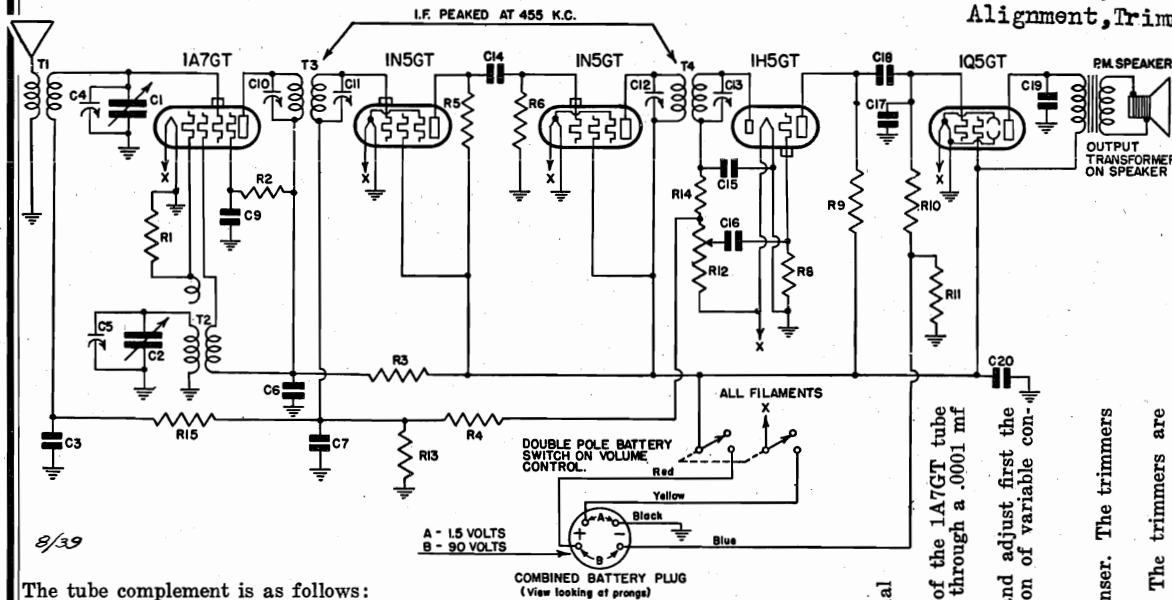

The tube complement is as follows:

- 1—1A7GT oscillator-modulator.
- 1—1N5GT 1st i-f amplifier.
- 1—1N5GT 2nd i-f amplifier.
- 1—1H5GT 2nd detector, a.v.c., a-f amplifier.
- 1—1Q5GT beam power output.

*Item	Part No.	DESCRIPTION
T1	4XT-432A	Antenna coil with 455 kc adjustable wave-trap
T2	6RT-476	Oscillator coil
T3	6RT-479B	Double-tuned 455 kc first i-f transformer
T4	4XT-435D	Double-tuned 455 kc diode i-f transformer
R1, R14	KR-53	50,000 ohm 1/4 watt carbon resistor
R2	ZZR-196	30,000 ohm 1/4 watt carbon resistor
R6, R15	KR-54	100,000 ohm 1/4 watt carbon resistor
R3	KR-50	500 ohm 1/4 watt carbon resistor
R4, R8, R13	HR-42	2 megohm 1/4 watt carbon resistor
R5	LR-65	10,000 ohm 1/4 watt carbon resistor
R9, R10	KR-56	0.5 megohm 1/4 watt carbon resistor
R11	6ER-358	680 ohm 1/2 watt wire-wound resistor
R12	7HR-373	Volume control—500,000 ohms with double pole battery switch
C1, C2	6RC-436	Two-gang variable condenser
C3	AC-6	0.1 mf, 200 volt tubular condenser
†C4, C5		Trimmers, part of variable condenser
C6, C7	BC-12	0.05 mf, 200 volt tubular condenser
C9, C18	LC-65	0.02 mf, 400 volt tubular condenser
†C10, C11, C12, C13		Trimmers, part of i-f transformer
C14	5AC-384	0.0002 mf, 600 volt tubular or mica condenser
C15, C17	4XC-394A	0.00022 mf mica condenser
C16, C19	KC-58	0.01 mf, 400 volt tubular condenser
C20	6EC-432	8 mf, 100 volt dry electrolytic condenser

“A” battery—0.3 amps.
“B” battery—0.010 amps. with no signal
Frequency range 530 to 1730 kc

Alignment

IF—Swing the variable condenser to the maximum capacity position. Feed 455 kc to the grid-cap of the 1A7GT tube through a .01 mf condenser and adjust the four i-f trimmers for maximum response. Feed 455 kc through a .0001 mf condenser to the antenna lead and adjust the wave-trap for minimum response.

RF—Set the dial pointer at 140. Feed 1400 kc through a .0001 mf condenser to the antenna lead and adjust first the oscillator trimmer (on rear section of variable condenser) then the antenna trimmer (on front section of variable condenser) for maximum response.

Location of Coils and Trimmer Adjustments

The first i-f transformer is mounted on top of the chassis deck to the left of the variable condenser. The trimmers are accessible through holes in the top of the can.

The second i-f transformer is mounted underneath the chassis beneath the variable condenser. The trimmers are accessible through holes in the top of the chassis directly beneath the variable condenser.

The trimmers for the antenna and oscillator coils are located on the variable condenser. The trimmer on the front section is for the antenna coil.

The 455 kc wave-trap is mounted on the same form as the antenna coil to the left of the speaker. The trimmer for the 455 kc wave-trap is mounted on the coil and is accessible from the left side of the chassis. The oscillator coil is located underneath the chassis, beneath the antenna coil.

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed are from point indicated to chassis with volume control turned on full and no signal. The battery voltages for these readings were: “A” 1.5 volts, “B” 90 volts.

Tube	Plate	Screen	Osc. Plate	Fil.
1A7GT	82	52	82	1.5
1N5GT 1st i-f	48	82	—	1.5
1N5GT 2nd i-f	82	82	—	1.5
1H5GT	25	—	—	1.5
1Q5GT	77	82	—	1.5

Bias for the 1Q5GT tube is obtained across the resistor R11. The voltage drop across this resistor should be 7.0 volts.


MODEL CU265

Chassis CU

EMERSON RADIO & PHONOGRAPH CORP.

Schematic, Voltage, Parts

Alignment

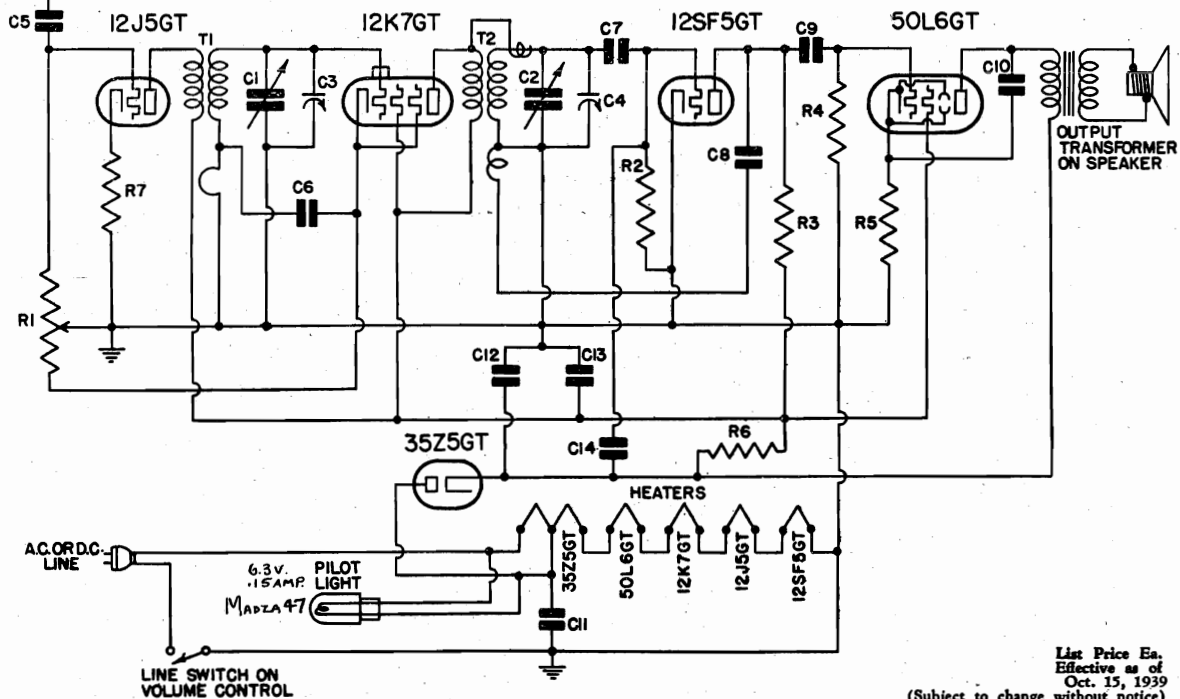

List Price Ea.
Effective as of
Oct. 15, 1939
(Subject to change without notice)

*Item	Part No.	DESCRIPTION	PRICE
T1	6UT-478	Broadcast r-f coil.....	\$.45
T2	6FT-462B	Broadcast detector coil.....	.50
R1	6UR-360	Volume control 75,000 ohms with 200 ohm bias stop and line switch.....	.85
R2	3RR-275	10 megohm 1/4 watt carbon resistor.....	.16
R3, R4	KR-56	500,000 ohm 1/4 watt carbon resistor.....	.16
R5	3FR-293	140 ohm 1/2 watt wire-wound resistor.....	.16
R6	6FR-348	2,400 ohm 1/2 watt carbon resistor.....	.16
R7	PR-79	1000 ohm 1/4 watt carbon resistor.....	.16
C1, C2	6UC-439	Two-gang variable condenser.....	2.30
C3, C4		Trimmers, part of variable condenser.....	
C5, C8	5AC-334	0.0002 mf, 600 volt tubular or mica condenser.....	.20
C6	BC-12	0.05 mf, 200 volt tubular condenser.....	.20
C7	KC-58	0.01 mf, 400 volt tubular condenser.....	.20
C9	LC-65	0.02 mf, 400 volt tubular condenser.....	.20
C10	5JC-417	0.035 mf, 400 volt tubular condenser.....	.20
C11	LC-64	0.05 mf, 400 volt tubular condenser.....	.20
C12, C13	6UC-447	Multiple 30 and 10 mf, 150 volt dry electrolytic condenser.....	.90
C14	6UC-440A	0.000002 mf mica condenser.....	.20

The tube complement is as follows:

- 1—12J5GT, first r-f amplifier
- 1—12K7GT, second r-f amplifier
- 1—12SF5GT, grid leak detector
- 1—50L6GT, beam power output
- 1—35Z5GT, single half-wave rectifier

Voltage rating 105 to 125 volts, a.c. or d.c.

Power consumption 30 watts.

Frequency range 540 to 1730 kc.

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed below are from point indicated to ground (chassis) with volume control turned on full and no signal. The line voltage for these readings was 117.5 volts, 60 cycles, a.c. All readings except cathodes and heaters were taken on 250 volt scale. Readings taken on d.c. will be slightly lower.

Tube	Plate	Screen	Cathode	Heater
12J5GT	85	—	2.3	12
12K7GT	85	85	1.6	12
12SF5GT	25	—	0	12
50L6GT	110	85	6	50

Voltage at rectifier cathode—120 volts.

ALIGNMENT PROCEDURE

Use as weak a test signal as possible. An output meter should be connected across the voice coil or output transformer for observing maximum output.

With the pointer set at 150 fed 1500 kc to the antenna lead through a .0001 mf condenser, and adjust the trimmers, located on the variable condenser, for maximum response.

CHASSIS CG and CY
Alignment, Trimmers EMERSON RADIO & PHONOGRAPH CORP.
Parts, Tuner Data
CHASSIS CQ and CS
Tuner Data

REPLACEMENT PARTS LIST

Part No.	DESCRIPTION	PRICE
6GT-468	Two-band antenna coil with 465 kc wave-trap (CG only)	\$1.10
6GT-483	Two-band oscillator coil (CG only)	.55
6GT-489	Two-band oscillator coil (CY only)	.55
4XT-434DU	465 kc first i-f transformer (CY only)	1.80
4XT-438U	465 kc second i-f transformer	.16
KR-53	50,000 ohm 1/4 watt carbon resistor	.16
FR-79	1000 ohm 1/4 watt carbon resistor	.16
NR-220	5 megohm 1/4 watt carbon resistor	.16
NR-220	500,000 ohms	.16
4XR-327	15 megohm 1/4 watt carbon resistor	.16
4XR-366	500,000 ohm 1/4 watt carbon resistor	.16
3FR-293	140 ohm 1/4 watt wire-wound resistor	.16
L-499G	Plug-in type ballast resistor. Interchangeable with L-49B	.25
6Y-451	Two-gang variable condenser (CG only)	5.45
6Y-451B	Two-gang variable condenser (complete with 4 gang push-button assembly)	3.30
6Y-451C	0.001 mf, 600 volt tubular condenser	.20
6Y-451D	Single adjustable padding condenser (CY only)	.30
6Y-451E	Trimmer, part of wave-trap assembly	.20
6Y-451F	Trimmers, part of first i-f transformer assembly	.20
6Y-451G	Trimmers, part of second i-f transformer assembly	.20
6Y-451H	Dual trimmer assembly	.35
6Y-451I	0.00025 mf mica condenser	.20
6Y-451J	0.0005 mf mica condenser	.20
6Y-451K	0.05 mf, 200 volt tubular condenser	.20
6Y-451L	0.0002 mf, 600 volt tubular or mica condenser	.20
6Y-451M	0.002 mf, 600 volt tubular condenser	.20
6Y-451N	0.02 mf, 400 volt tubular condenser	.20
6Y-451O	0.015 mf, 400 volt tubular condenser	.20
6Y-451P	20 mf, 150 volt dry electrolytic condenser	.90
6Y-451Q	0.15 mf, 200 volt tubular condenser	.20
6Y-451R	0.00083 mf mica condenser	.20
6Y-451S	0.0001 mf mica condenser	.20
6Y-451T	0.0001 mf mica condenser	.20
6Y-451U	Wave-band switch (CG only)	.60
6Y-451V	Wave-band switch (CY only)	.60
6Y-451W	5" dynamic speaker (not used on CY-286 or CY-288)	4.20
6Y-451X	Dial face (CG only)	.45
6Y-451Y	Dial face (CY only)	.45
6Y-451Z	Plug face (CG only)	.20
6Y-451AA	Plug face (CY only)	.20
6Y-451AB	Dial drive shaft (CG only), Meas. No. 44	.05
6Y-451AC	Dial drive shaft (CY only)	.05
6Y-451AD	Dial pointer	.20
6Y-451AE	Drive cord spring (CG only)	.05
6Y-451AF	Drive cord spring (CY only)	.05
6Y-451AG	Drive cord (CG only)	.02
6Y-451AH	Drive cord (CY only)	.02
6Y-451AI	Drive cord (CG only)	.04
6Y-451AJ	Drive cord (CY only)	.04
6Y-451AK	Dial crystal (for CG-268 and CY-269)	.25
6Y-451AL	Dial crystal (not used on CG-268 and CY-269)	.25
6Y-451AM	Standard push-button assembly (CG only)	.20
6Y-451AN	Standard push-button assembly (CY only)	.20
6Y-451AO	175 ohm 1 watt metallized resistor	.16
6Y-451AP	1000 ohm 1 watt carbon resistor	.16
6Y-451AQ	40 mf, 135 volt dry electrolytic condenser	.80
6Y-451AR	permanent magnet dynamic speaker	7.30
6Y-451AS	Speaker cable	.25

If replacements are made or the wiring disturbed in the r-f portion of the circuit, the receiver should be carefully re-aligned.

The filament dropping resistor (L-49B on schematic) is located at the rear of the chassis. This resistor will become quite hot under normal operating conditions. For voltage drop specifications, see below.

When operating the receiver on d.c. it may be necessary to reverse the line plug to obtain the correct polarity.

The first i-f transformer is held to the chassis by snap-on fasteners. To remove it, unsolder all its leads under the chassis, pinch together the prongs of the snap-on fastener and lift the i-f can from the chassis.

The wave-trap has been adjusted for maximum signal rejection at 465 kc. If, however, persistent interference is experienced from some particular telegraphic station, readjust the wave-trap trimmer until the response from the interfering station is at a minimum.

ADJUSTMENTS

An oscillator with frequencies of 465, 600, 1500 kc and 6000 kc is required. It may be used across the voice coil or output transformer for observing maximum response.

Always use as weak a test signal as possible when aligning the receiver.

Location of Coils and Trimmer Adjustments

The first i-f transformer is located on top of the chassis deck. The trimmers are available through holes in the top of the can. The second i-f transformer is located on the rear wall underneath the chassis. The trimmers are available through holes in the rear wall underneath the chassis.

The trimmers for the antenna and oscillator are located on the variable condenser. The trimmer on the front section is for the oscillator. The 465 kc wave-trap is part of the antenna coil assembly directly behind the variable condenser. The trimmer for the 465 kc wave-trap is mounted on the coil and is accessible from the rear of the chassis.

I-f and Wave-trap Alignment

Rotate the wave-band switch to the broadcast (clockwise) position. Set the variable condenser at the minimum capacity position and feed 455 kc through a .002 mf paper condenser to the grid cap of the 6AG tube (do not remove the grid clip from the tube). Adjust the four i-f trimmers for maximum response. Feed 455 kc to the antenna coil and adjust the wave-trap trimmer for maximum response. (See General Note No. 6.)

Short-Wave Alignment

With the wave-band switch in the short-wave position, counter-clockwise, set the dial pointer at 6 mc. and feed 6000 kc through a standard dummy antenna (a .002 mf condenser in series with a 100 ohm resistor) to the antenna coil. Adjust the antenna trimmer (on rear section of variable condenser) then the antenna trimmer (on front section of variable condenser) for maximum response.

MODEL CG: Adjust first the oscillator trimmer (on left-hand section of variable condenser) then the antenna trimmer (on right-hand section of variable condenser) for maximum response.


Broadcast Alignment

MODEL CG: Rotate the wave-band switch clockwise to the broadcast position, set the pointer at 150 and feed 1500 kc through a standard dummy antenna to the antenna lead. Adjust first the broadcast oscillator trimmer (lower of dual trimmer assembly located underneath the variable condenser) and then the antenna trimmer (upper trimmer) for maximum response as outlined above for CG. Then feed 600 kc and adjust the variable padding condenser (reached through hole in rear wall) while rocking the variable condenser for maximum response. Return to 1500 and retrim if necessary.

PREADJUSTMENT OF AUTOMATIC TUNING KEYS


Select four nearby stations desired for automatic tuning. Choose one of these stations and any button to be adjusted for it. Follow the procedure outlined below:

1. Remove the small plug cap in the front of the tuning key by prying at the lower right with a flat thin-edged tool such as a nail file or screw-driver. See Fig. 1 on right.
2. Insert a screw-driver into the hole in the tuning key. The locking screw is accessible through the tuning key hole. Seat the screw-driver in the slot of the locking screw and push in the screw-driver as far as it will go. Loosen the screw about 1 to 1 1/2 turns. It is important to use a screw-driver in which the flat portion is not wider than the hole. A larger screw-driver cannot be inserted.
3. With the screw-driver seated in the screw slot, press the screw in as far as possible and holding it in firmly with one hand, tune in the desired station with the other hand, using the selector knob and tighten screw firmly.
4. Check the adjustment by turning key past the station, using the selector knob, and then pushing down the key. The station should come back in again clearly and with maximum volume.
5. After the adjustment is tested, check to see that the locking screw is tightened firmly.
6. Replace the plug cap in the front of the key. Remove the tab bearing the station name. Call letters from one of the cards supplied in a separate envelope with the receiver. Moisten the tab and place it on the top of the tuning key as indicated in Fig. 4.

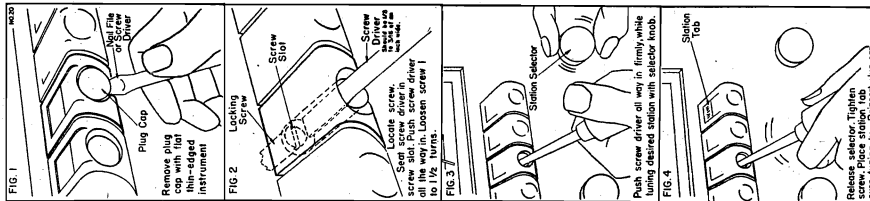

EMERSON RADIO & PHONOGRAPH CORP.

MODELS CQ269, CQ271, CQ273
 CS268, CS270, CS272, CS276
 Chassis CQ, CS
 Schematic, Voltage

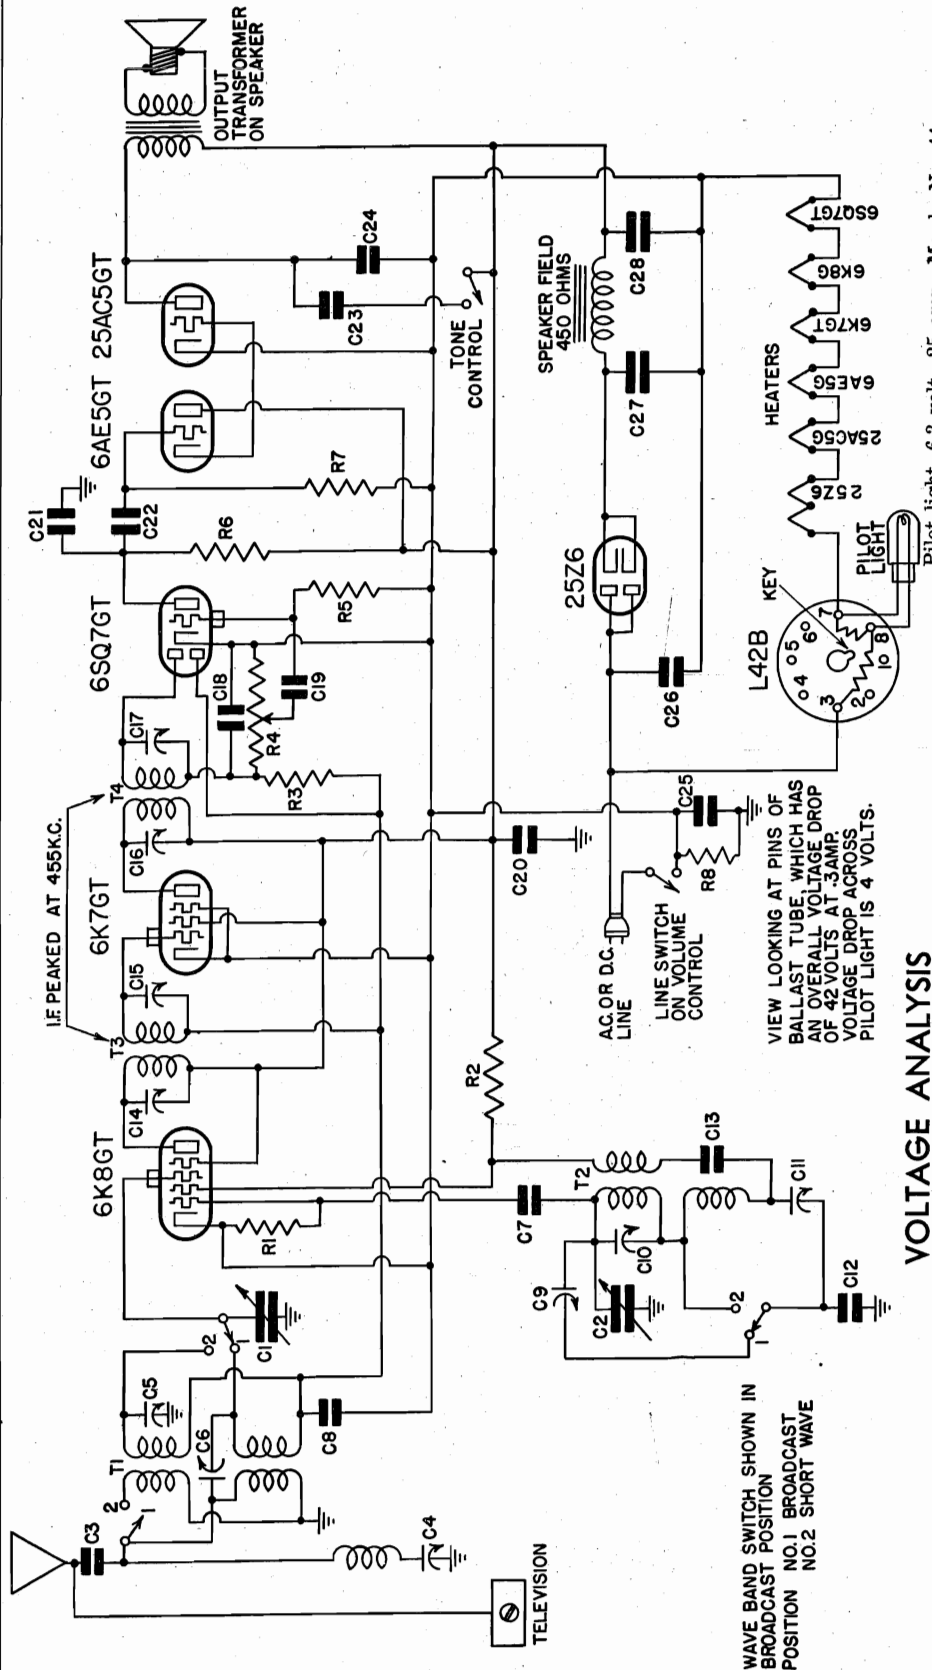

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed below are from point indicated to B minus (switch) with the volume control turned on full and no signal. Line voltage for these readings was 117.5 volts, 60 cycles, a.c. All readings except cathodes and heaters were taken on 250 volt scale. Readings taken on d.c. will be slightly lower.

Tube	Plate	Screen	Cathode	Osc. Plate	Fil.
6K8GT	95	95	0	70	6.3
6K7GT	95	95	0	—	6.3
6S7GT	30	—	0	—	6.3
6AE5GT	95	—	1 $\frac{1}{2}$	—	6.3
25AC5GT	90	—	0	—	25.0

Voltage at 25Z6—128 volts.
 Voltage across speaker field—33 volts.
 Voltage drop across ballast resistor (pins nos. 3, 7)—42 volts.
 Voltage drop across pilot light section of ballast resistor (pins nos. 8 and 7)—4 volts.

Pilot light, 6.3 volt, .25 amp., Mazda No. 44
 Voltage rating 105 to 125 volts, a.c. or d.c.
 Power consumption 48 watts.
 Frequency ranges 540 to 1730 kc and 5.6 to 18 m

Tube Data

- 1—6K8GT pentagrid oscillator-modulator.
- 1—6K7GT first i-f amplifier.
- 1—6S7GT diode detector, a-f amplifier, a.v.c.
- 1—6AE5GT audio amplifier.
- 1—25AC5GT dynamic coupled output.
- 1—25Z6GT dual half-wave rectifier.


Oct. 15, 1939

CHASSIS CQ, CS
Alignment, Trimmers EMERSON RADIO & PHONOGRAPH CORP.
Parts
CHASSIS DA
Alignment, Socket, Trimmers

Six-Tube, A.C., Three-Band Superheterodyne
MODEL DA-287
 CHASSIS MODEL DA

ADJUSTMENTS

An oscillator with frequencies of 455, 600, 1600, 1800, 6000 and 20,000 kc should be used. An output meter should be used across the voice coil or speaker output transformer for observing maximum response. Use a dummy antenna for aligning any of the three bands. A .0002 mf transformer may be used for broadcast band dummy antenna, a .0001 mf condenser for the police band dummy antenna and a 400 ohm non-inductive resistor for the short-wave band dummy antenna. Always use the same test signal as possible during alignment. The frequency of the signals. Always choose the minimum capacity peak on oscillator trimmers and maximum capacity peaks on antenna trimmers. The last motion in adjusting trimmers should always be a tightening one, not a loosening one. Never leave the trimmer with the outside plate so loose that there is no tension on the screw. When adjusting up or down in aligning antenna trimmers on the high-frequency signals there is always a tendency for the oscillator to drift, due to interlocking. To compensate for this always keep tuning the variable condenser as the trimmers are being adjusted.

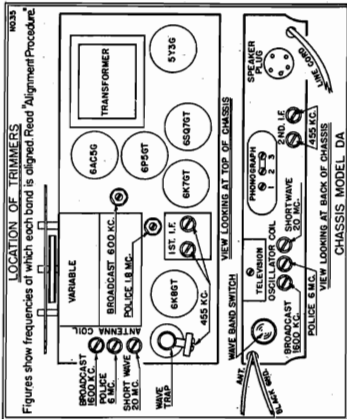

I-f and Wave-Trap Alignment

Rotate the wave-band switch to the broadcast (clockwise) position. Set the variable condenser at the minimum capacity position and feed 455 kc through a .02 mf paper condenser, to the grid cap of the 6X8 tube (do not remove the grid clip from the tube). Adjust the four i-f trimmers for maximum response. Feed 455 kc to the antenna (using a standard dummy antenna) and adjust the 455 kc wave trap for minimum response. (See General Notes No. 6.)

Broadcast Alignment

Set the wave-band switch at the broadcast (clockwise) position, and the pointer at 60. Feed 600 kc to the antenna (using a standard dummy antenna) and adjust the broadcast-band series padder for maximum response. Move the pointer to 1600, feed 1600 kc and adjust the oscillator coil trimmer for maximum response, then adjust the antenna coil trimmer for maximum response. Return to 1600 and check alignment. If readjustment is necessary return to 600 and repeat entire procedure. (The broadcast padder is located beneath the chassis to the left of the variable condenser.)

Police Alignment

Set the wave-band switch at the police-band (central) position and the pointer at 1.8. Feed 1800 kc to the antenna (using a .0001 mf dummy antenna) and adjust the police-band series padder for maximum response. Move the pointer to 6.0, feed 6000 kc and adjust the oscillator trimmer for maximum response. Then adjust the antenna trimmer for maximum response. Return to 6.0 and check alignment. (The police-band series padder is located beneath the chassis behind the variable condenser.)

Short-Wave Alignment

Set the wave-band switch at the short-wave (counter-clockwise) position. Move the pointer to 20 and feed 20,000 kc to the antenna. Adjust the short-wave oscillator trimmer for maximum response. Then adjust the antenna coil trimmer for maximum response. If two peaks are obtained choose the minimum capacity peak. Then adjust the antenna coil trimmer for maximum response.

Item	Part No.	DESCRIPTION	PRICE
T1	{ 6QT-474 or 4RT-418 or 6QT-481	Two-band antenna coil with 455 kc wave-trap.	\$.85
T2	6QT-480	Two-band oscillator coil	1.10
T3	455 kc first i-f transformer	455 kc first i-f transformer	1.30
T4	455 kc second i-f transformer	455 kc second i-f transformer	.30
R1	10,000 ohm 1/4 watt carbon resistor	10,000 ohm 1/4 watt carbon resistor	.16
R2	3 megohm 1/4 watt carbon resistor	3 megohm 1/4 watt carbon resistor	.16
R3	NVR-220	Volume control with line switch—500,000 ohms	.90
R4	6SR-362	15 megohm 1/4 watt carbon resistor	.16
R5	4XR-327	500,000 ohm 1/4 watt carbon resistor	.16
R6	KR-56	200,000 ohm 1/4 watt carbon resistor	.16
R7	LR-61	200,000 ohm 1/4 watt carbon resistor	.16
R8	L-423G	Plug-in type ballast resistor. Interchangeable with L-42B	.55
R9	6QW-482	Two-gang variable condenser. Complete with 4 button tuning unit (CQ only)	6.45
C1, C2	6SC-438	Two-gang variable condenser (CS only)	.20
C3	NAC-189	Trimmer, part of wave-trap assembly	.20
C4, C5	T-1000	Trimmer, part of antenna coil assembly	.20
C6	4XC-398A	0.00006 mf mica condenser	.20
C8, C9, C23	BC-12	0.05 mf, 200 volt tubular condenser	.20
C10, C11	BC-12	0.05 mf, 200 volt tubular condenser	.20
C12	3EC-267	0.0042 mf mica condenser	.20
C13	KC-68	0.01 mf, 400 volt tubular condenser	.20
C14, C15	5AC-384	Trimmers, part of first i-f transformer	.20
C16, C17	5AC-384	Trimmers, part of second i-f transformer	.20
C18, C21	3HC-274	0.002 mf, 600 volt tubular condenser	.20
C19	LC-65	0.015 mf, 400 volt tubular condenser	.20
C22	3XC-381	0.02 mf, 400 volt tubular condenser	.20
C24	AC-6	0.1 mf, 200 volt tubular condenser	.20
C25	AC-6	0.05 mf, 400 volt tubular condenser	.20
C26	6QC-487	Dual dry C27—20 mf; C28—40 mf	1.10

Location of Coils and Trimmer Adjustments

The i-f transformer is located on top of the chassis deck. The trimmers are available through holes in the rear wall underneath the chassis. The trimmers are available through holes in the rear. The trimmers for the antenna coil are mounted on the antenna coil assembly behind and to the right of the variable condenser. The trimmer for the short-wave band is located on the rear wall underneath the chassis. The trimmer farthest from the end is for the broadcast band. The center trimmer is the broadcast series padding condenser, and the trimmer nearest the antenna coil is the antenna coil trimmer. The trimmer for the trap is the uppermost trimmer of the assembly.

I-f and Wave-Trap Alignment

Rotate the wave-band switch to the broadcast (clockwise) position. Set the variable condenser at the minimum capacity position and feed 455 kc through a .02 mf paper condenser to the grid cap of the 6X8 tube (do not remove the grid clip from the tube). Adjust the four i-f trimmers for maximum response. Feed 455 kc to the antenna through a standard dummy antenna (a .0002 mf condenser may be used as a substitute) and adjust the wave-trap trimmer for minimum response. (See General Note No. 6.)

Short-Wave Alignment

With the wave-band switch in the short-wave position, counter-clockwise, set the dial pointer at 16 mc. Feed 20,000 kc to the antenna through a standard dummy antenna and then the antenna trimmer for maximum response.


Broadcast Alignment

Rotate the wave-band switch clockwise and set the pointer at 160. Feed 1600 kc through a standard broadcast dummy antenna to the antenna lead (a .0002 mf condenser may be used as a substitute) and adjust first the broadcast oscillator trimmer and then the antenna trimmer for maximum response.


The color coding of the i-f transformer leads is as follows:
 Grid—green
 B plus—red
 Plate—blue

The wave-trap has been adjusted for maximum signal rejection at 455 kc. If, however, persistent interference is experienced from some particular telegraphic station, readjust the wave-trap trimmer until the response from the interfering station is at a minimum.

MODELS CW279, Chassis CW
 CZ282, Chassis CZ EMERSON RADIO & PHONOGRAPH CORP.
 Schematics

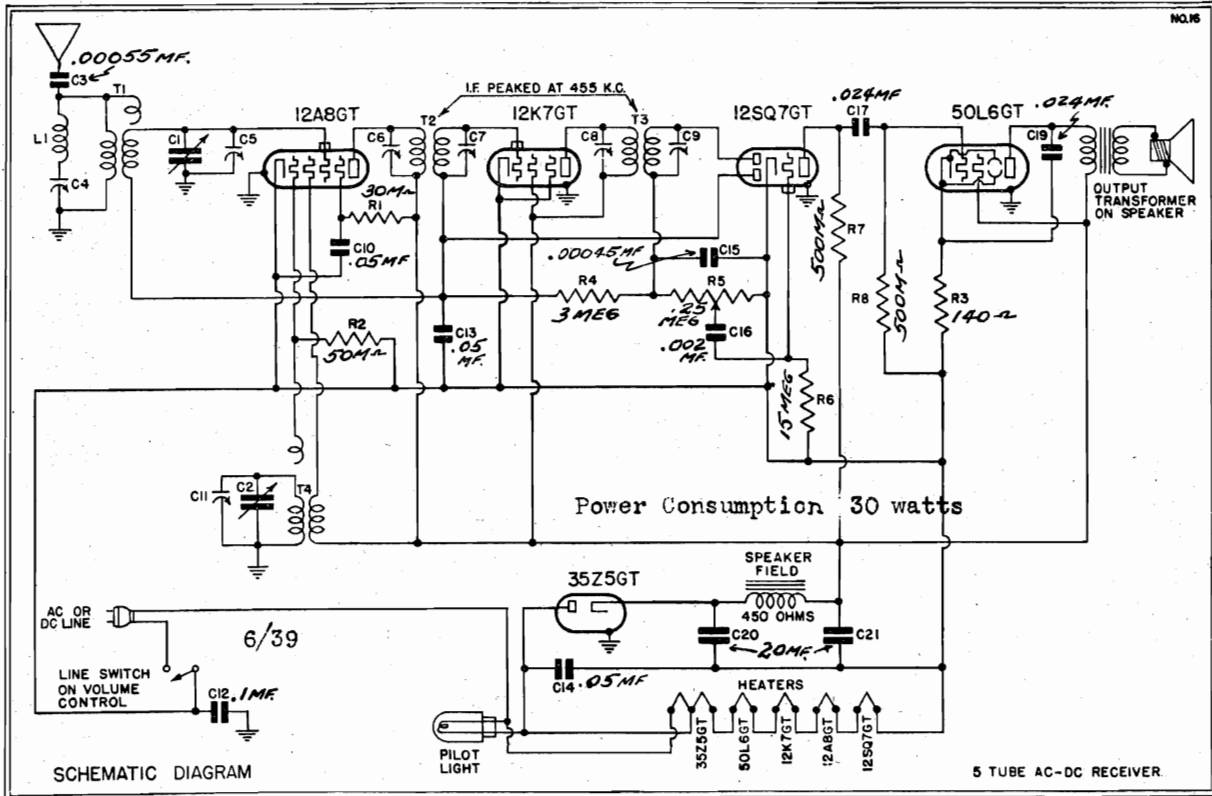


MODEL CW

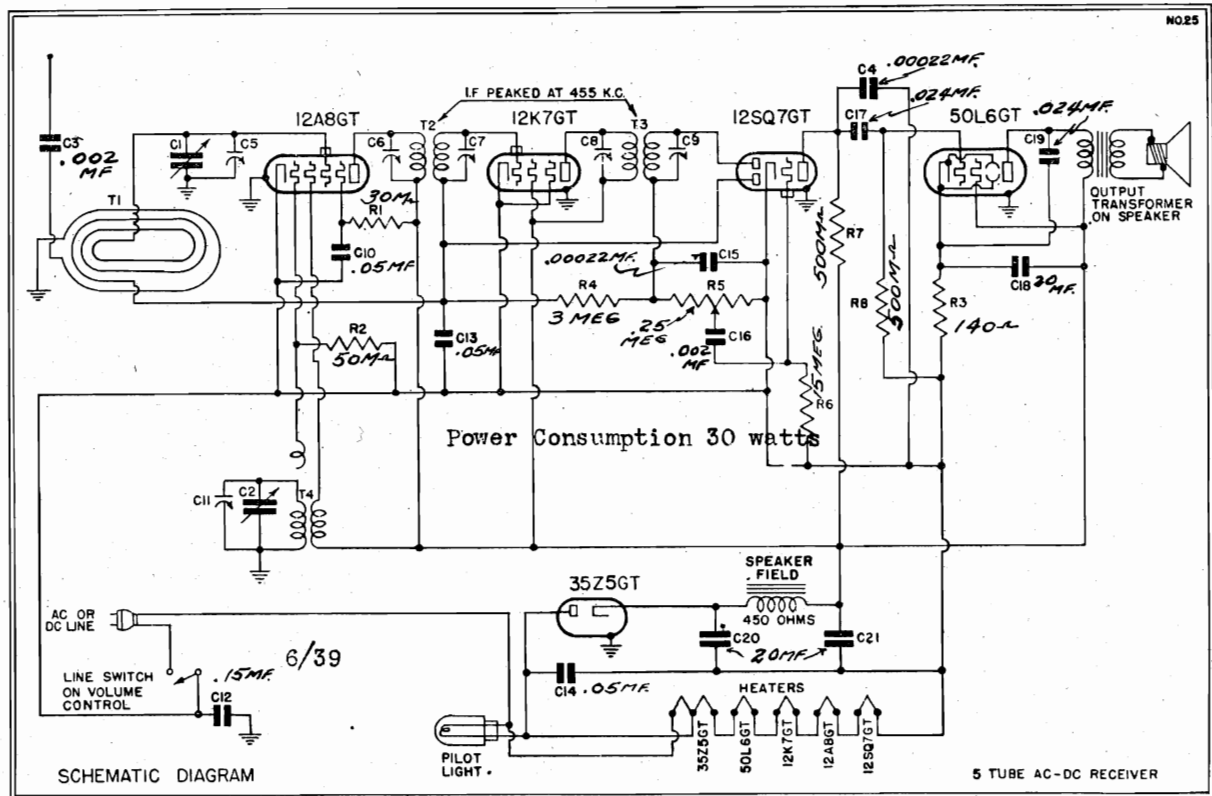


MODEL CZ

EMERSON RADIO & PHONOGRAPH CORP. MODELS CV289, CV290, CV291
CV1-290, CV1-291
Chassis CV, CV1

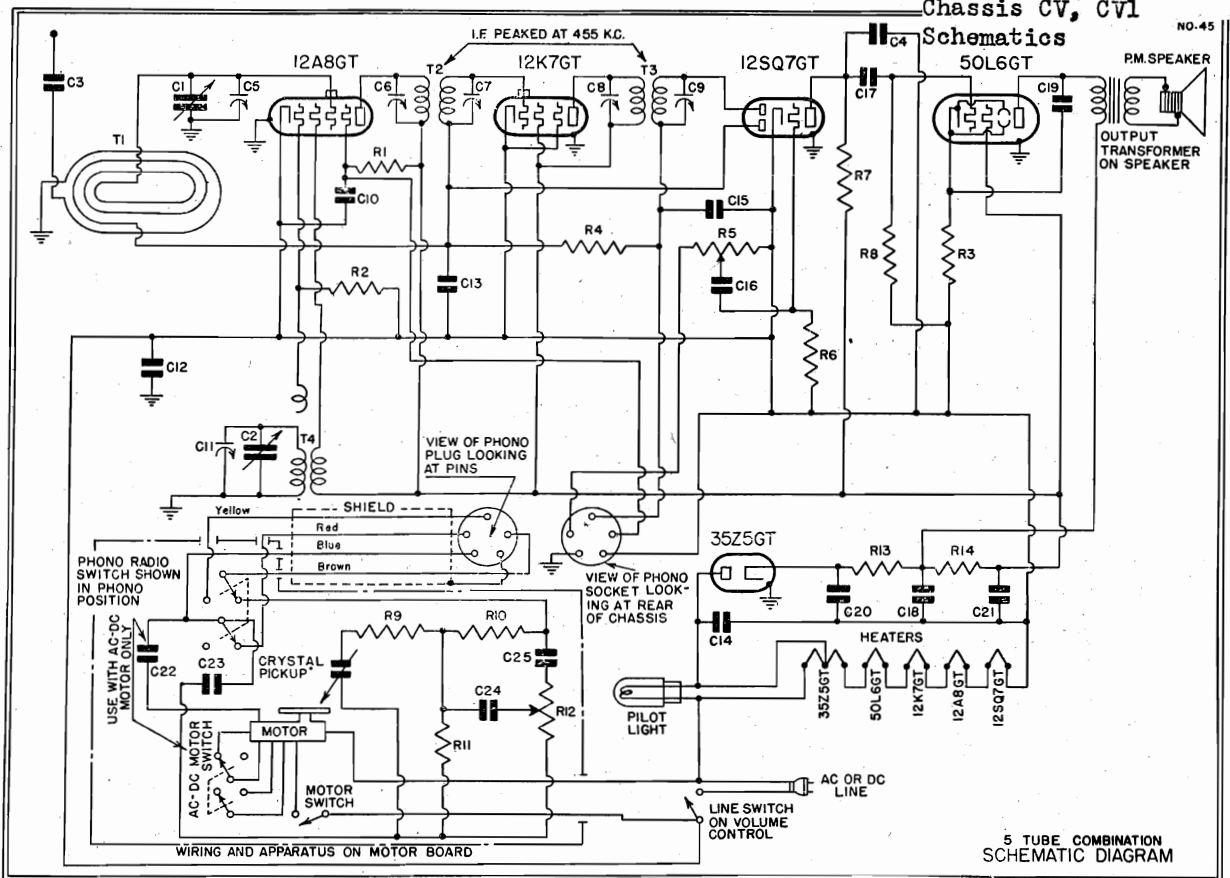

9-39

MODELS CV-291 AND CV1-291

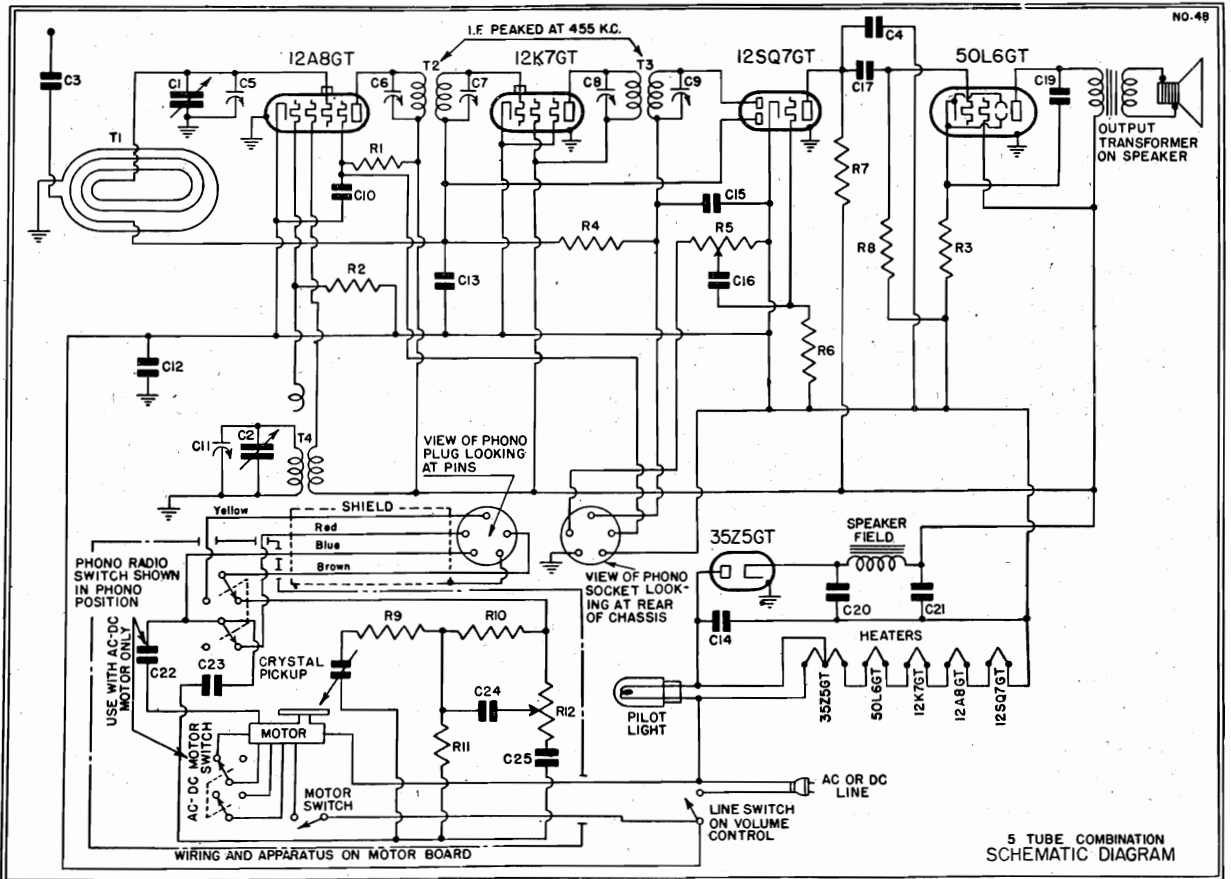

MODELS CV-289, CV-290 AND CV1-290

CHASSIS CV, CV1
Voltage, Alignment
Trimmers, Changes, Parts

EMERSON RADIO & PHONOGRAPH CORP.

PRODUCTION CHANGES

1. On CV-289 resistor R9 is .5 megohm.
2. On CV-291 and CV1-291 resistor R11 is .2 megohm.
3. CV chassis bearing serial numbers below 2,764,502 use:
T4 Oscillator coil 35
Dial face 30
Loop antenna (for CV-289, CV-291 and CV1-291) 90
6VW-171A 90
Loop antenna (for CV-290 and CV1-290) 85
6VW-188

THE TUBE COMPLEMENT IS AS FOLLOWS:

- One 12A8GT—pentagrid oscillator-modulator Voltage rating 105-125 volts
One 12X7GT—first i-f amplifier (30 watts for receiver) 30
One 12X7GT—diode detector, a-f amplifier, a.v.c. Power consumption 30
One 50L6GT—half-wave rectifier (30 watts for A.C. motor) 30
One 8Z56GT—half-wave rectifier Frequency range 540 to 1600 kc

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohm-per-volt meter. Voltages listed below are from point indicated to B minus (switch) with the volume control turned on full and no signal. In the case of these readings was 17.5 volts, 60 cycles, a.c. All readings except heaters and cathodes were taken on 250 volt seat. Measurements made with 117.5 volts d.c. will be lower than those given below.

Tubes	Plate	Screen	Cathode	Os. Plate	Ft.
12A8GT	*88	*45	0	*88	12
12X7GT	*88	*88	0	—	12
12X7GT	*40	—	0	—	12
50L6GT	182	*88	5.7	—	50

Voltage at 8Z56 cathode—115 volts.
Voltage across speaker field—27 volts.
Voltage across pilot light—4.5 volts.

* These readings are approximately 10% lower on CV-291 and CV1-291.
† This reading is approximately 20% higher on CV-291 and CV1-291.

ADJUSTMENTS

An oscillator with frequencies of 465 and 1400 kc is required.
An output meter should be used across the voice coil or output transformer for observing maximum response.
Always use as weak a test signal as possible when aligning the receiver.

Location of Coils and Trimmer Adjustments

The first i-f transformer is located at the extreme left end of the chassis. The trimmers are accessible through holes in the top of the can.
The second i-f transformer is located just to the left of the variable condenser. The trimmers are accessible through holes in the top of the can.
The trimmers for the antenna and oscillator coils are located on the variable condenser. The trimmer on the front section is for the antenna coil (loop). The oscillator coil is located beneath the first i-f transformer.

i-f Alignment

Swing the variable condenser to the minimum capacity position. Feed 465 kc to the grid-cap of the 12A8GT tube through a .01 mf condenser and adjust the four i-f trimmers for maximum response.

R-f Alignment

Set the dial pointer at 140. Feed 1400 kc through a .0001 mf condenser to the antenna lead and adjust first the oscillator trimmer (on rear section of variable condenser) then the antenna trimmer (on front section of variable condenser) for maximum response. The antenna trimmer should be adjusted when the chassis is in place in the cabinet. It can be reached through a hole near the front of the motor board.

If the loop antenna has been replaced it may be necessary to adjust the loop inductance. Align at 140. Set the dial and feed 600 kc to the antenna lead. A portion of the outside turn of the loop may then be swung to either side of the center to give maximum response. Realign at 140.


REPLACEMENT PARTS LIST

LIST PRICE P.A. (SUBJECT TO CHANGE WITHOUT NOTICE)
SEPT. 1, 1939

ITEM	PART NO.	DESCRIPTION	PRICE
T1	6MW-171B	Loop antenna assembly (for CV-289, CV-291 and CV1-291) (see prod. ch. No. 3)	\$.90
T1	6VW-188A	Loop antenna assembly (for CV-280 and CV1-290) (see production change No. 3)	.85
T2	6VW-171A	Oscillator coil (see production change No. 3)	.40
T3	6VW-188	Loop antenna (for CV-290 and CV1-290)	.49
T4	6VW-188A	Loop antenna (for CV-289 and CV1-291)	.49
R1	7FT-513D	Double-tuned 455 kc second i-f transformer	.95
R2	ZOR-198	30,000 ohm 1/2 watt carbon resistor	.16
R3	3VZ-293	140 ohm 1/2 watt carbon resistor	.16
R4	3VZ-293	140 ohm 1/2 watt carbon resistor	.16
R5	NNR-220	3 megohm 1/4 watt carbon resistor	.16
R6	6VW-364	Volume control .5 megohm with line switch	.58
R7	4XR-327	15 megohm 1/4 watt carbon resistor	.16
R8	4XR-327	15 megohm 1/4 watt carbon resistor (see production change No. 2)	.16
R9	4XR-327	15 megohm 1/4 watt carbon resistor (see production change No. 1)	.16
R10	4XR-327	15 megohm 1/4 watt carbon resistor	.16
R11	4XR-327	15 megohm 1/4 watt carbon resistor	.16
R12	6VR-366	Tone control, 75,000 ohm, with motor (line switch)	.56
R13	4XR-325	175 ohm 1 watt metallized resistor	.16
R14	4XR-334	2,500 ohm 1 watt carbon resistor	.16
C1	31C-495	0.0025 microfarad variable capacitor	2.30
C2	31C-495	0.0025 microfarad variable capacitor	2.30
C3	31C-495	0.0025 microfarad variable capacitor	2.30
C4	31C-495	0.0025 microfarad variable capacitor	2.30
C5	31C-495	0.0025 microfarad variable capacitor	2.30
C6	31C-495	0.0025 microfarad variable capacitor	2.30
C7	31C-495	0.0025 microfarad variable capacitor	2.30
C8	31C-495	0.0025 microfarad variable capacitor	2.30
C9	31C-495	0.0025 microfarad variable capacitor	2.30
C10	31C-495	0.0025 microfarad variable capacitor	2.30
C11	31C-495	0.0025 microfarad variable capacitor	2.30
C12	31C-495	0.0025 microfarad variable capacitor	2.30
C13	31C-495	0.0025 microfarad variable capacitor	2.30
C14	31C-495	0.0025 microfarad variable capacitor	2.30
C15	31C-495	0.0025 microfarad variable capacitor	2.30
C16	31C-495	0.0025 microfarad variable capacitor	2.30
C17	31C-495	0.0025 microfarad variable capacitor	2.30
C18	31C-495	0.0025 microfarad variable capacitor	2.30
C19	31C-495	0.0025 microfarad variable capacitor	2.30
C20	31C-495	0.0025 microfarad variable capacitor	2.30
C21	31C-495	0.0025 microfarad variable capacitor	2.30
C22	31C-495	0.0025 microfarad variable capacitor	2.30
C23	31C-495	0.0025 microfarad variable capacitor	2.30
C24	31C-495	0.0025 microfarad variable capacitor	2.30
C25	31C-495	0.0025 microfarad variable capacitor	2.30
C26	31C-495	0.0025 microfarad variable capacitor	2.30
C27	31C-495	0.0025 microfarad variable capacitor	2.30
C28	31C-495	0.0025 microfarad variable capacitor	2.30
C29	31C-495	0.0025 microfarad variable capacitor	2.30
C30	31C-495	0.0025 microfarad variable capacitor	2.30
C31	31C-495	0.0025 microfarad variable capacitor	2.30
C32	31C-495	0.0025 microfarad variable capacitor	2.30
C33	31C-495	0.0025 microfarad variable capacitor	2.30
C34	31C-495	0.0025 microfarad variable capacitor	2.30
C35	31C-495	0.0025 microfarad variable capacitor	2.30
C36	31C-495	0.0025 microfarad variable capacitor	2.30
C37	31C-495	0.0025 microfarad variable capacitor	2.30
C38	31C-495	0.0025 microfarad variable capacitor	2.30
C39	31C-495	0.0025 microfarad variable capacitor	2.30
C40	31C-495	0.0025 microfarad variable capacitor	2.30
C41	31C-495	0.0025 microfarad variable capacitor	2.30
C42	31C-495	0.0025 microfarad variable capacitor	2.30
C43	31C-495	0.0025 microfarad variable capacitor	2.30
C44	31C-495	0.0025 microfarad variable capacitor	2.30
C45	31C-495	0.0025 microfarad variable capacitor	2.30
C46	31C-495	0.0025 microfarad variable capacitor	2.30
C47	31C-495	0.0025 microfarad variable capacitor	2.30
C48	31C-495	0.0025 microfarad variable capacitor	2.30
C49	31C-495	0.0025 microfarad variable capacitor	2.30
C50	31C-495	0.0025 microfarad variable capacitor	2.30
C51	31C-495	0.0025 microfarad variable capacitor	2.30
C52	31C-495	0.0025 microfarad variable capacitor	2.30
C53	31C-495	0.0025 microfarad variable capacitor	2.30
C54	31C-495	0.0025 microfarad variable capacitor	2.30
C55	31C-495	0.0025 microfarad variable capacitor	2.30
C56	31C-495	0.0025 microfarad variable capacitor	2.30
C57	31C-495	0.0025 microfarad variable capacitor	2.30
C58	31C-495	0.0025 microfarad variable capacitor	2.30
C59	31C-495	0.0025 microfarad variable capacitor	2.30
C60	31C-495	0.0025 microfarad variable capacitor	2.30
C61	31C-495	0.0025 microfarad variable capacitor	2.30
C62	31C-495	0.0025 microfarad variable capacitor	2.30
C63	31C-495	0.0025 microfarad variable capacitor	2.30
C64	31C-495	0.0025 microfarad variable capacitor	2.30
C65	31C-495	0.0025 microfarad variable capacitor	2.30
C66	31C-495	0.0025 microfarad variable capacitor	2.30
C67	31C-495	0.0025 microfarad variable capacitor	2.30
C68	31C-495	0.0025 microfarad variable capacitor	2.30
C69	31C-495	0.0025 microfarad variable capacitor	2.30
C70	31C-495	0.0025 microfarad variable capacitor	2.30
C71	31C-495	0.0025 microfarad variable capacitor	2.30
C72	31C-495	0.0025 microfarad variable capacitor	2.30
C73	31C-495	0.0025 microfarad variable capacitor	2.30
C74	31C-495	0.0025 microfarad variable capacitor	2.30
C75	31C-495	0.0025 microfarad variable capacitor	2.30
C76	31C-495	0.0025 microfarad variable capacitor	2.30
C77	31C-495	0.0025 microfarad variable capacitor	2.30
C78	31C-495	0.0025 microfarad variable capacitor	2.30
C79	31C-495	0.0025 microfarad variable capacitor	2.30
C80	31C-495	0.0025 microfarad variable capacitor	2.30
C81	31C-495	0.0025 microfarad variable capacitor	2.30
C82	31C-495	0.0025 microfarad variable capacitor	2.30
C83	31C-495	0.0025 microfarad variable capacitor	2.30
C84	31C-495	0.0025 microfarad variable capacitor	2.30
C85	31C-495	0.0025 microfarad variable capacitor	2.30
C86	31C-495	0.0025 microfarad variable capacitor	2.30
C87	31C-495	0.0025 microfarad variable capacitor	2.30
C88	31C-495	0.0025 microfarad variable capacitor	2.30
C89	31C-495	0.0025 microfarad variable capacitor	2.30
C90	31C-495	0.0025 microfarad variable capacitor	2.30
C91	31C-495	0.0025 microfarad variable capacitor	2.30
C92	31C-495	0.0025 microfarad variable capacitor	2.30
C93	31C-495	0.0025 microfarad variable capacitor	2.30
C94	31C-495	0.0025 microfarad variable capacitor	2.30
C95	31C-495	0.0025 microfarad variable capacitor	2.30
C96	31C-495	0.0025 microfarad variable capacitor	2.30
C97	31C-495	0.0025 microfarad variable capacitor	2.30
C98	31C-495	0.0025 microfarad variable capacitor	2.30
C99	31C-495	0.0025 microfarad variable capacitor	2.30
C100	31C-495	0.0025 microfarad variable capacitor	2.30
C101	31C-495	0.0025 microfarad variable capacitor	2.30
C102	31C-495	0.0025 microfarad variable capacitor	2.30
C103	31C-495	0.0025 microfarad variable capacitor	2.30
C104	31C-495	0.0025 microfarad variable capacitor	2.30
C105	31C-495	0.0025 microfarad variable capacitor	2.30
C106	31C-495	0.0025 microfarad variable capacitor	2.30
C107	31C-495	0.0025 microfarad variable capacitor	2.30
C108	31C-495	0.0025 microfarad variable capacitor	2.30
C109	31C-495	0.0025 microfarad variable capacitor	2.30
C110	31C-495	0.0025 microfarad variable capacitor	2.30
C111	31C-495	0.0025 microfarad variable capacitor	2.30
C112	31C-495	0.0025 microfarad variable capacitor	2.30
C113	31C-495	0.0025 microfarad variable capacitor	2.30
C114	31C-495	0.0025 microfarad variable capacitor	2.30
C115	31C-495	0.0025 microfarad variable capacitor	2.30
C116	31C-495	0.0025 microfarad variable capacitor	2.30
C117	31C-495	0.0025 microfarad variable capacitor	2.30
C118	31C-495	0.0025 microfarad variable capacitor	2.30
C119	31C-495	0.0025 microfarad variable capacitor	2.30
C120	31C-495	0.0025 microfarad variable capacitor	2.30
C121	31C-495	0.0025 microfarad variable capacitor	2.30
C122	31C-495	0.0025 microfarad variable capacitor	2.30
C123	31C-495	0.0025 microfarad variable capacitor	2.30
C124	31C-495	0.0025 microfarad variable capacitor	2.30
C125	31C-495	0.0025 microfarad variable capacitor	2.30
C126	31C-495	0.0025 microfarad variable capacitor	2.30
C127	31C-495	0.0025 microfarad variable capacitor	2.30
C128	31C-495	0.0025 microfarad variable capacitor	2.30
C129	31C-495	0.0025 microfarad variable capacitor	2.30
C130	31C-495	0.0025 microfarad variable capacitor	2.30
C131	31C-495	0.0025 microfarad variable capacitor	2.30
C132	31C-495	0.0025 microfarad variable capacitor	2.30
C133	31C-495	0.0025 microfarad variable capacitor	2.30
C134	31C-495	0.0025 microfarad variable capacitor	2.30
C135	31C-495	0.0025 microfarad variable capacitor	2.30
C136	31C-495	0.0025 microfarad variable capacitor	2.30
C137	31C-495	0.0025 microfarad variable capacitor	2.30
C138	31C-495	0.0025 microfarad variable capacitor	2.30
C139	31C-495	0.0025 microfarad variable capacitor	2.30
C140	31C-495	0.0025 microfarad variable capacitor	2.30
C141	31C-495	0.0025 microfarad variable capacitor	2.30
C142	31C-495	0.0025 microfarad variable capacitor	2.30
C143	31C-495	0.0025 microfarad variable capacitor	2.30
C144	31C-495	0.0025 microfarad variable capacitor	2.30
C145	31C-495	0.0025 microfarad variable capacitor	2.30
C146	31C-495	0.0025 microfarad variable capacitor	2.30
C147	31C-495	0.0025 microfarad variable capacitor	2.30
C148	31C-495	0.0025 microfarad variable capacitor	2.30
C149	31C-495	0.0025 microfarad variable capacitor	2.30
C150	31C-495	0.0025 microfarad variable capacitor	2.30
C151	31C-495	0.0025 microfarad variable capacitor	2.30
C152	31C-495	0.0025 microfarad variable capacitor	2.30
C153	31C-495	0.0025 microfarad variable capacitor	2.30
C154	31C-495	0.0025 microfarad variable capacitor	2.30
C155	31C-495	0.0025 microfarad variable capacitor	2.30
C156	31C-495	0.0025 microfarad variable capacitor	2.30
C157	31C-495	0.0025 microfarad variable capacitor	2.30
C158	31C-495	0.0025 microfarad variable capacitor	2.30
C159	31C-495	0.0025 microfarad variable capacitor	2.30
C160	31C-495	0.0025 microfarad variable capacitor	2.30
C161	31C-495	0.0025 microfarad variable capacitor	2.30
C162	31C-495	0.0025 microfarad variable capacitor	2.30
C163	31C-495	0.0025 microfarad variable capacitor	2.30
C164	31C-495	0.0025 microfarad variable capacitor	2.30

CHASSIS CR, CR1 EMERSON RADIO & PHONOGRAPH CORP.
Record Changer Data

MODELS CG293, CG294, CG1-293
CG1-294, Chassis CG, CG1
Schematic, Record Changer

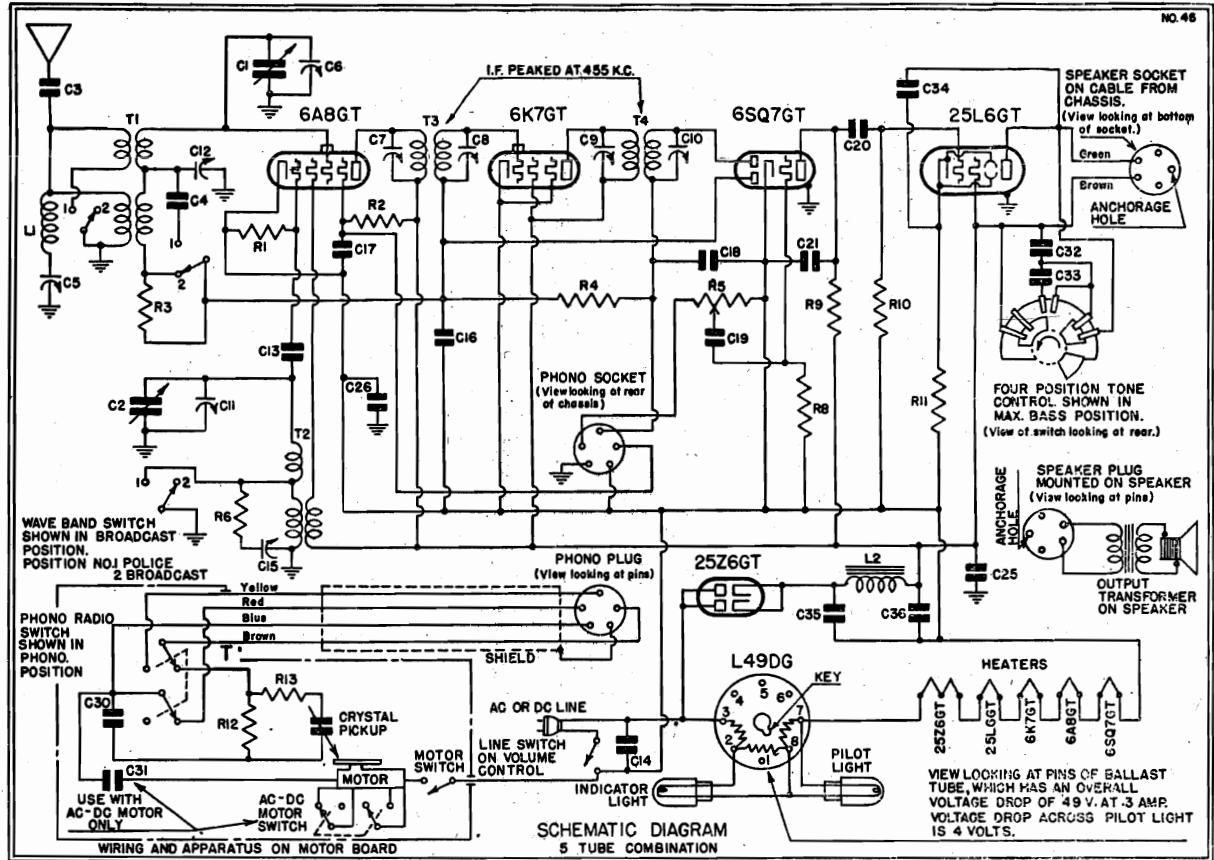

AUTOMATIC RECORD CHANGER

(A)—Record Removing Lever.

A locknut provides adjustment for raising or lowering the record finger to engage the next to last record on the turntable. No adjustment is required unless the motor mounting screws should loosen and allow motor and turntable to shift upward or downward, or should record finger become bent.

Raising the record removing lever to the vertical position will repeat the top record on the turntable, either 10-inch or 12-inch for as long as desired.

(B)—Latch Mechanism.

The latch should engage one-half the depth of the notch. This may be adjusted by turning the eccentric washer.

(C)—Speed Regulator.

The motor speed can be regulated for "fast" or "slow" by moving lever to either side.

(D)—Adjustment for 10-inch and 12-inch Records.

The motor panel is stamped "10" and "12." Set the change lever opposite the size of record to be played.

(G)—Motor Mounting Screws.

(H)—Trip Mechanism.

All records having either the spiral or oscillating type trip groove are handled automatically by this trip mechanism. No adjustment required.

(L)—Record Reject Lever.


Pull the reject lever forward if removal of a record is desired before it is completely played.

(M)—Pick-up and Tone Arm.

Turn screw in or out to place the needle properly on the edge of the record.

(N)—On-off Switch.

On-off switch for motor.

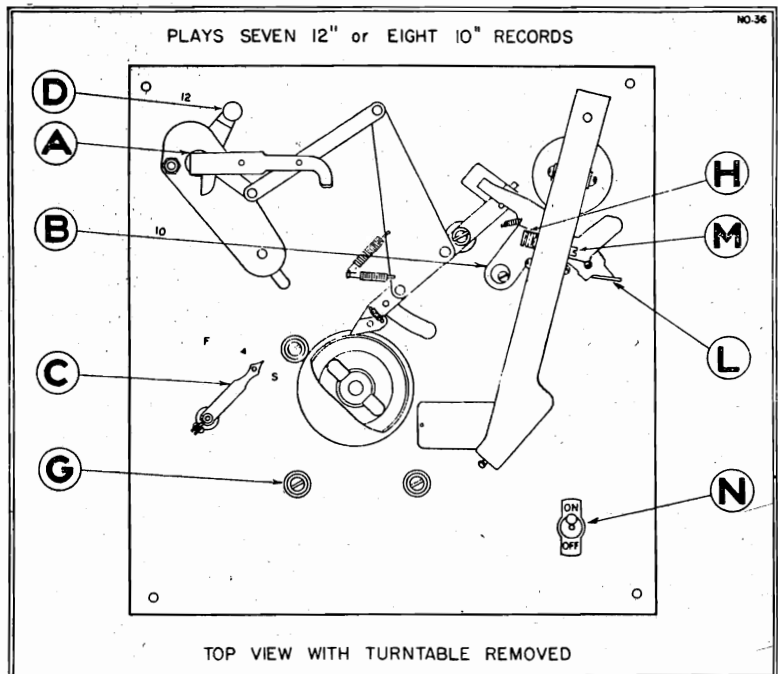

CHASSIS CG,CG1

Voltage, Alignment, Parts EMERSON RADIO & PHONOGRAPH CORP. Trimmers

I-f and Wave-trap Alignment
 Rotate the wave-band switch to the broadcast (clockwise) position. Set the variable condenser at the minimum capacity. Turn the trimmer potentiometer clockwise until the grid clip on the 6AS tube (do not remove the grid clip from the tube). Adjust the four I-f trimmer potentiometers clockwise until the 6AS tube shows a standard dummy antenna (a .0002 mf condenser may be used as a substitute) and adjust the wave-trap trimmer for minimum response. (See General Note No. 6.)

Short-Wave Alignment
 With the wave-band switch in the short-wave position, counter-clockwise, set the dial pointer at 6 mc. and feed 6000 kc through a 400 ohm resistor to the antenna lead. Adjust first the oscillator trimmer (on front section of the variable condenser) then the antenna trimmer (on rear section of variable condenser) for maximum response.

Broadcast Alignment
 Rotate the wave-band switch clockwise to the broadcast position, set the pointer at 150 and feed 1500 kc through a standard dummy antenna (a .0002 mf condenser may be used as a substitute) to the antenna lead. Adjust first the broadcast oscillation trimmer (lower of dual trimmer assembly located underneath the variable condenser) and then the antenna trimmer (upper trimmer of dual assembly) for maximum response.

Voltage rating	105 to 125 volts, a.c. or d.c.
Power consumption	43 watts for radio 30 watts for a.c.-d.c. motor
Frequency ranges	540 to 1700 kc and 2800 to 6000 kc

GENERAL NOTES

1. If replacements are made or the wiring disturbed in the r-f portion of the circuit, the receiver should be carefully re-aligned.
2. The output dropping resistor (L40DG on schematic) is located at the rear of the chassis. This resistor will become quite hot under normal operating conditions. For voltage drop specifications, see below.
3. When operating the receiver on d.c. it may be necessary to reverse the line plug to obtain the correct polarity.
4. The first I-f transformer is held to the chassis by snap-on fasteners. To remove it, unsolder all its leads under the chassis, pinch together the prongs of the snap-on fastener and lift the I-f can from the chassis.
5. The color coding of the I-f transformer leads is as follows:
 Grid—green
 Plate—blue
 B plus—red
6. The wave-trap was adjusted for maximum signal rejection at 455 kc. If, however, persistent interference is experienced from some particular telegraphic station, readjust the wave-trap trimmer until the response from the station has been eliminated.
7. The receivers in these combinations are of the a.c.-d.c. type. The motors, however, used in Models CG-293 and 294 are of the a.c. only type and will be damaged if operated on direct current.
8. Any series of records to be played automatically should be of one size. The changer will not play intermixed sizes. Select seven 12-inch records or eight 10-inch records and place them on the turntable with the selection to be played facing upwards.
9. Adjust the lever "P" for the size of records to be played. (See illustration.) Lower the pick-up carefully so that the needle rides on the smooth surface on the outside edge of the record.
10. On the Model CG1-293 and CG1-294 only, before turning the motor on check the a.c.-d.c. switch underneath the turntable. The switch should be in the "a.c." position. Turn the switch to the "d.c." position. To check this switch simply remove the turntable by pulling it directly upward. If the power supply is d.c. the switch should be thrown to d.c. position and for an a.c. supply to the a.c. position. When replacing the turntable be sure it is seated all the way down over its shaft.

Tube Data

The tube complement is as follows:
 1—6ASGT pentagrid oscillator-modulator.
 1—6K7GT first I-f amplifier.
 1—6SQ7GT diode detector, a-f amplifier, a.v.c. (see note).
 1—25Z6GT beam power output.

Octal-base tubes in this receiver may be replaced with either metal or hontam-type octal-base glass tubes. The letters "GT" at the end of the tube number indicates that the tube has a hantam glass envelope. In all other respects it is the same as the metal tube bearing the same number without the "GT."

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohm-per-volt motor. Voltages listed below are from point indicated to B minus (switch) with the volume control turned on full and no signal. Line voltage for these readings was 117.5 volts, 60 cycles, a.c. All readings except cathodes and heaters were taken on 250 volt scale. Readings taken on d.c. will be slightly lower.

Tube	Plate	Screen	Cathode	Occ. Plate	Fil.
6K7GT	113	113	0	115	6.3
6SQ7GT	113	113	0	—	6.3
25Z6GT	125	113	6.5	—	25.0

Voltage at 25Z6 cathode—125 volts.
 Voltage across filter capacitor—125 volts.
 Voltage across filter ballast resistor (pins nos. 3, 7)—49 volts.
 Voltage drop across pilot light sections of ballast resistor (+pins nos. 8 and 7, 2 and 8)—1-4 volts.

Note: CG chassis bearing serial numbers below 2,616,849 use 6Q7GT.

List Price \$1.99
 Special Price \$1.29
 (Subject to change without notice)

Part No.	DESCRIPTION	PRICE
6GT-488	Two-band antenna coil with 455 kc wave-trap	\$1.10
6GT-489	455 kc first I-f transformer	1.00
4XT-434CU	455 kc second I-f transformer	.80
4XT-485CU	455 kc second I-f transformer	.80
KR-53	50,000 ohm 1/4 watt carbon resistor	.16
FR-79	1,000 ohm 1/4 watt carbon resistor	.16
SR-362	Variable 100,000 ohm potentiometer	.16
SR-362	Variable 250,000 ohm potentiometer	.16
KR-327	15 megohm 1/4 watt carbon resistor	.16
KR-56	500,000 ohm 1/4 watt carbon resistor	.16
3FR-293	140 ohm 1/4 watt wire-wound resistor	.16
KR-57	200,000 ohm 1/4 watt carbon resistor	.16
KR-57	200,000 ohm 1/4 watt carbon resistor	.16
L-40DG	Plug-in type ballast resistor, interchangeable with L-49D	.55
6GC-428	Two-gang variable condenser	2.35
NMC-199	0.001 mf, 500 volt tubular condenser	.20
6GC-429	T-90064 mf mica condenser	.20
6GC-430	0.001 mf, 500 volt tubular condenser	.35
6GC-431	Dual trimmer assembly	.20
6GC-432	Dual trimmer assembly	.20
6GC-433	0.05 mf, 400 volt tubular condenser	.20
6GC-434	0.05 mf, 400 volt tubular condenser	.20
6GC-435	0.05 mf, 400 volt tubular condenser	.20
6GC-436	0.002 mf, 600 volt tubular condenser	.20
6GC-437	0.002 mf, 600 volt tubular condenser	.20
6GC-438	0.02 mf, 400 volt tubular condenser	.20
6GC-439	0.02 mf, 400 volt tubular condenser	.20
6GC-440	0.15 mf, 200 volt tubular condenser	.20
6GC-441	0.01 mf, 400 volt tubular condenser	.20
6GC-442	0.03 mf, 200 volt tubular condenser	.20
6GC-443	0.015 mf, 400 volt tubular condenser	.20
6GC-444	Multiple 20 and 40 mf, 150 volt electrolytic condenser	1.10
6GC-445	Wave-band switch	.60
6GC-446	Dial face	.45
6GC-447	Pilot light, 6.3 volt, 25 amp, Mazda No. 44	.20
6GC-448	100 ohm 1/2 watt resistor	.05
6GC-449	Dial pointer	.20
6GC-450	Drive cord spring	.05
6GC-451	Drive cord	.02
6GC-452	Dial crystal	.25
6GC-453	Needle cup cover	.15
6GC-454	Needle cup	.15
6GC-455	Iron core filter choke	1.80
6GC-456	12" permanent magnet dynamic speaker	12.25
6GC-457	Phono-radio switch	.75
6GC-458	Tone control switch	.20
6GC-459	Wave-band switch	.60
6GC-460	Dial face	.45
6GC-461	Pilot light, 6.3 volt, 25 amp, Mazda No. 44	.20
6GC-462	100 ohm 1/2 watt resistor	.05
6GC-463	Dial pointer	.20
6GC-464	Drive cord spring	.05
6GC-465	Drive cord	.02
6GC-466	Dial crystal	.25
6GC-467	Needle cup cover	.15
6GC-468	Needle cup	.15
6GC-469	Iron core filter choke	1.80
6GC-470	12" permanent magnet dynamic speaker	12.25
6GC-471	Phono-radio switch	.75
6GC-472	Tone control switch	.20

ADDITIONAL PARTS USED IN CG-294 AND CG1-294
 A.C. phonograph motor (for CG-294) \$4.20
 A.C.-D.C. phonograph motor (for CG1-294) 51.00
 Crystal phono pick-up 14.95

ADDITIONAL PARTS USED IN CG-293 AND CG1-293
 117 volt a.c. rim-drive phonograph motor (for CG-293) 9.00
 117 volt a.c. phonograph motor (for CG-293) 12.25

ADDITIONAL PARTS USED IN CG1-293
 117 volt a.c.-d.c. phonograph motor (for CG1-293) 43.20
 Crystal pick-up 8.10
 Automatic stop switch 2.50

ADJUSTMENTS

An oscillator with frequencies of 455, 600, 1500 kc and 6000 kc is required. An output meter should be used across the voice coil or output transformer for observing maximum response. Always use as weak a test signal as possible when aligning the receiver.

Location of Coils and Trimmer Adjustments

The first I-f transformer is located on top of the chassis deck. The trimmers are available through holes in the top of the can. The second I-f transformer is located on the rear wall underneath the chassis. The trimmers are available through holes in the rear. The trimmer for the antenna and oscillator are located on the variable condenser. The trimmer on the front section is for the oscillator. The 455 kc wave-trap is part of the antenna coil assembly directly behind the variable condenser. The trimmer for the 455 kc wave-trap is mounted on the coil and is accessible from the rear of the chassis.

EMERSON RADIO & PHONOGRAPH CORP. MODEL DA 287

Chassis DA

Schematic, Voltage, Parts Notes

REPLACEMENT PARTS LIST

Part No.	DESCRIPTION
4DT-343A	Adjustable 455 kc wave trap
7AT-485	Three-band antenna coil
5RT-447A	Double tuned 455 kc first i-f transformer
7AT-490	Double tuned 455 kc second i-f transformer
4T-491	Power transformer 117 volts, 90 cycles
3BR-247	40,000 ohm 1/4 watt carbon resistor
KR-53	50,000 ohm 1/4 watt carbon resistor
7AR-365	16,000 ohm 1/2 watt carbon resistor
HR-42	2 megohm 1/2 watt carbon resistor
6GR-352	15 megohm 1/4 watt carbon resistor
4XR-327	5 megohm 1/4 watt carbon resistor
KR-56	1 megohm 1/4 watt carbon resistor
KR-57	Two-gang variable condenser
7AC-442	Trimmer, part of wave trap assembly
	Trimmers, part of antenna coil assembly
4XC-393A	0.00006 mf, with condenser
KC-58	0.01 mf, 400 volt tubular condenser
BC-12	0.05 mf, 200 volt tubular condenser
	Trimmers, part of oscillator coil assembly
3EC-287	0.0049 mf mica condenser
2NC-231B	Single adjustable padding condenser: (range 750-1500 mmf.)
2NC-231A	Single adjustable padding condenser: (range 300-600 mmf.)
4HC-395A	0.000028 mf mica condenser
EEC-132	0.1 mf, 400 volt tubular condenser
	Trimmers, part of first i-f transformer
3HC-374	0.002 mf, 600 volt tubular condenser
4XC-394A	0.00022 mf mica condenser
LC-65	0.02 mf, 400 volt tubular condenser
NNC-199	0.001 mf, 600 volt tubular condenser
EC-23	0.03 mf, 400 volt tubular condenser
3XC-331	0.15 mf, 400 volt tubular condenser
3LC-297A	0.01 mf, 400 volt molded condenser
7AC-443	16 mf, 450 volt dry electrolytic condenser
7AC-444	16 mf, 400 volt dry electrolytic condenser

GENERAL NOTES

- The receiver should never be turned on with either the speaker plug or the 6AC5G tube out of their respective sockets, since the rapid rise in rectifier voltage will damage the electrolytic condenser.
- When replacing the chassis in the cabinet take precautions to keep any part of the dial and condenser assembly from touching the cabinet, otherwise microphonism will result.
- The color coding of the i-f transformers is as follows:
Grid—green
B plus—red
Plate—blue
Grid return—black

FOR ALIGNMENT
SEE INDEX


VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms per volt meter. Voltages listed below are from point indicated to ground (chassis) with the volume control turned on full and the A.C. line voltage for the readings was 110 volts, 60 cycles, a.c. All readings except B plus at rectifier, heaters, and cathode voltages were taken on 250 volt scale.

Tube	Plate	Screen	Cathode	Osc. Plate	PIL
6K8G	220	95	0	100	6.3 a.c.
6K7GT	220	95	0	100	6.3 a.c.
6S07GT	65	—	0	—	6.3 a.c.
6P6GT	220	—	12	—	6.3 a.c.
6AC5G	205	—	0	—	6.3 a.c.

Voltage at 5Y3G filament to ground—300 volts.
Voltage across speaker field—80 volts.

Voltage rating 105-125 volts, 60 cycle, a.c. (unless otherwise specified)
Power consumption 540 to 1800 kc, 1800 to 6250 kc
Frequency ranges and 5.8 to 23 megacycles

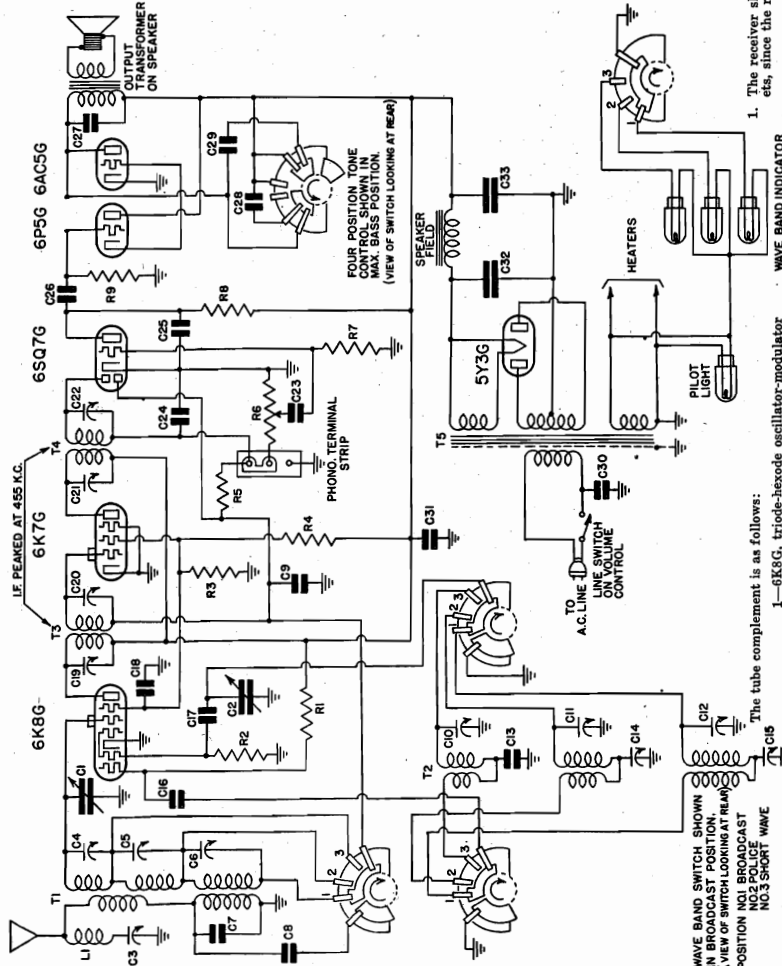

WAVE BAND SWITCH SHOWN IN BROADCAST POSITION. (VIEW OF SWITCH LOOKING AT REAR) NO. 3 SHORT WAVE

10/10

MODELS DB296, DB301, DL330
 Chassis DB, DL EMERSON RADIO & PHONOGRAPH CORP.
 Schematic, Voltage, Trimmers
 Alignment

MODEL DL1-330
 Chassis DL1
 Alignment
 Voltage, Trimmers

Five-Tube A. C. - D. C., Superheterodyne Receiver
MODELS DB-296 and DB-301

CHASSIS MODEL DB
MODEL: DL-330
 CHASSIS MODEL DL

Voltage rating 105-125 volts, a.c. or d.c.
 Power consumption 30 watts.
 Frequency range 540 to 1600 kc.

TUBE DATA

THE TUBE COMPLEMENT IS AS FOLLOWS:

- 1-12SA7 or 12SA7GT pentagrid oscillator modulator
- 1-12K7 or 12K7GT first i-f amplifier
- 1-12SQ7 or 12SQ7GT diode detector, a-f amplifier, a.v.c.
- 1-35Z5 or 35Z5GT beam power output
- 1-3Z5 or 3Z5GT half-wave rectifier

All tubes are replaceable with either metal or equivalent hantam glass tubes. The letters "GT" at the end of the tube number indicate that the tube has a hantam size glass envelope. In all other respects it is the same as the metal tube bearing the same number without the "GT".

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohm-per-volt meter. Voltages listed below are from point indicated to B minus (chassis) with the volume control turned on full and speaker disconnected. Voltages are in dc. except heaters and cathodes where given in ac. All readings except heaters and cathodes were taken on 250 volt scale. Measurements made with 117.5 volts d.c. may be lower than those given below.

Tube	Plate	Screen	Cathode	Fil.
12SA7	88	88	0	12
12K7	88	88	0	12
12SQ7	30	30	0	12
35Z5	82	88	5.6	50

Voltage at 35Z5 cathode—120 volts.
 Voltage across speaker field—32 volts.

Location of Coils and Trimmer Adjustments

The first i-f transformer is mounted on top of the chassis deck to the right of the variable condenser. The trimmers are accessible through holes in the top of the can.

The second i-f transformer is mounted on top of the chassis between the variable condenser and the speaker. The trimmers are accessible through holes in the top of the can.

The trimmers for the antenna and oscillator coils are located on the variable condenser. The trimmer on the front section is for the oscillator coil.

The oscillator coil is located underneath the chassis. The loop antenna acts as the antenna coil.

If replacements are made or the wiring disturbed in the r-f section of the circuit, the receiver should be carefully realigned.


In operating the receiver on d.c. it may be necessary to reverse the line plug for correct polarity.

The color coding of the i-f transformer leads is as follows:

- Grid—green
- Grid return—black
- Plate—blue
- B plus—red

Models DB-296 and 301 have self-contained antennas and do not require additional antenna connections. For permanent home installations of either model, however, it is desired to improve reception of weak stations, an additional outdoor antenna should be used. For this purpose a lead has been brought out of the rear near the line cord.

The self-contained loop antenna operates at maximum efficiency when its position is at right angles to the broadcasting source. It is important, therefore, once the station is tuned in, to rotate the cabinet back and forth through a quarter of a circle (90 degrees), leaving it at the position where the station is received with maximum volume.

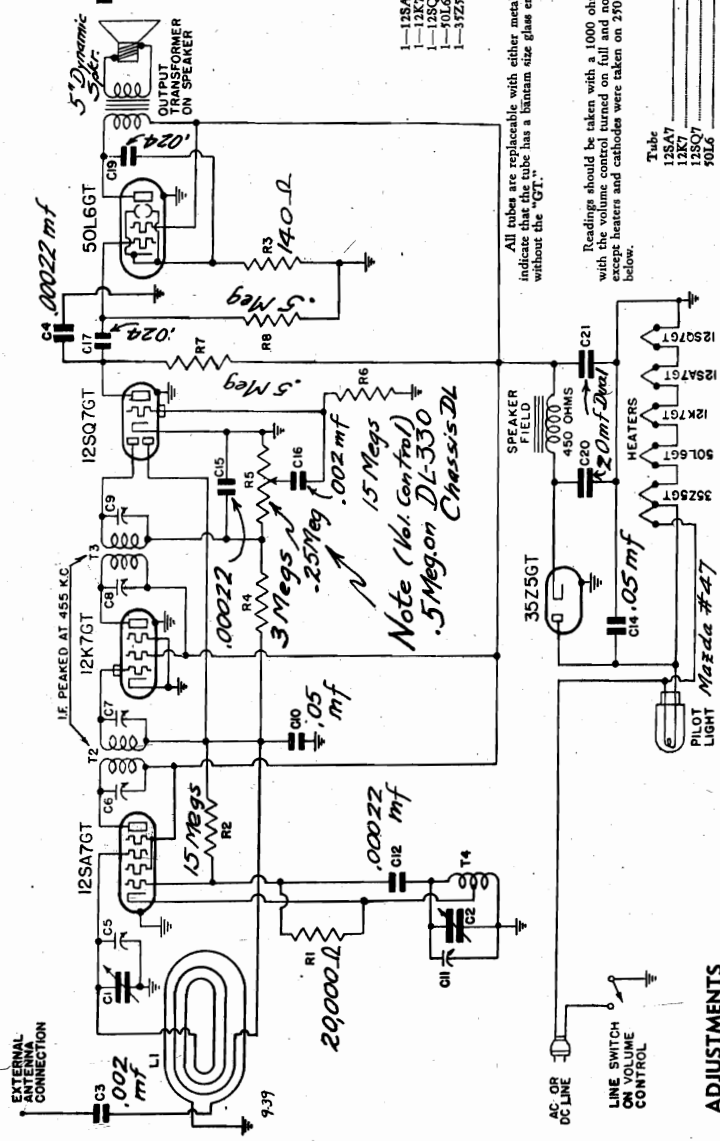

ADJUSTMENTS

An oscillator with frequencies of 455 and 1400 kc is required.
 An output meter should be used across the voice coil or output transformer for observing maximum response.
 Always use as weak a test signal as possible when aligning the receiver.



I-f Alignment

Swing the variable condenser to the minimum capacity position. Feed 455 kc to the grid of the 12SA7 tube through a .01 mf condenser and adjust the four i-f trimmers for maximum response.
 Note: The grid of the 12SA7 tube is connected to the lower stator lug of the rear variable condenser section. Connection may be made with a test clip to the upper stator lug. This lug is easily identified by the connection of the green lead to the loop.

R-f Alignment

Set the dial pointer at 140. Feed 1400 kc through a .0001 mf condenser to the antenna connection and adjust first the oscillator trimmer (on front section of variable condenser) then the antenna trimmer (on rear section of variable condenser) for maximum response.
 If the loop antenna has been replaced it may be necessary to adjust the loop inductance as follows. Align at 140. Set the pointer at 60 and feed 600 kc to the antenna lead. At position of the outside turn of the loop may be swung to either side of the center to give maximum response. Realign at 140.

EMERSON RADIO & PHONOGRAPH CORP. MODELS CR297, CR303, CR1-297
 CR1-303 Chassis CR, CR1
 Schematic, Voltage

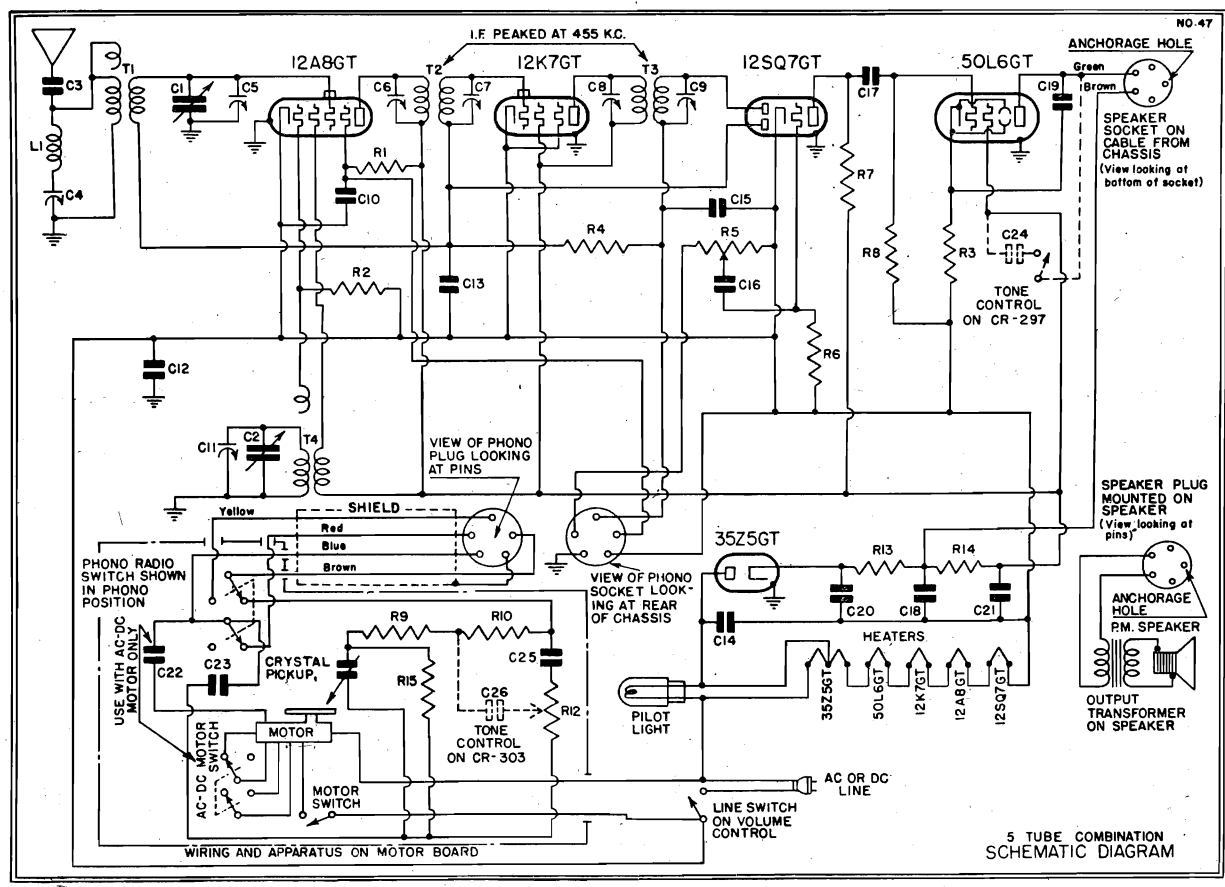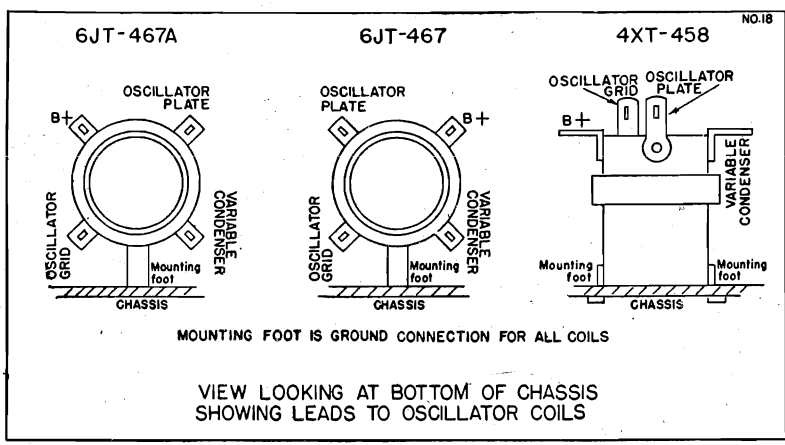

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed below are from point indicated to B minus (switch) with the volume control turned on full and no signal. Line voltage for these readings was 117.5 volts, 60 cycles, a.c. All readings except heaters and cathodes were taken on 250 volt scale. Measurements made with 117.5 volts d.c. will be lower than those given below.

Tube	Plate	Screen	Cathode	Osc. Plate	Fil.
12A8GT	65	40	0	65	12
12K7GT	65	65	0	—	12
12SQ7GT	40	—	0	—	12
50L6GT	100	65	5.7	—	50

Voltage at 35Z5 cathode—110 volts.
 Voltage across pilot light—4.5 volts.

The tube complement is as follows:


- Voltage rating 105-125 volts
- Power consumption { 30 watts for receiver
 { 20 watts for a.c. motor
 { 30 watts for a.c.-d.c. motor
- Frequency range 540 to 1730 kc
- One 12A8GT—pentagrid oscillator modulator
- One 12K7GT—first i-f amplifier
- One 12SQ7GT—diode detector, a-f amplifier, a.v.c.
- One 50L6GT—beam power output
- One 35Z5GT—half-wave rectifier

CHASSIS CR, CRI
Alignment, Changes, Parts EMERSON RADIO & PHONOGRAPH CORP.
CHASSIS CW, CZ
Voltage, Alignment, Tuner
Trimmers

MODEL CR-297 (AC) MODEL CRI-297 (AC-DC)
MODEL CR-303 (AC Portable Automatic Record Changer)
MODEL CRI-303 (AC-DC Portable Automatic Record Changer)
MODEL CW-279 and MODEL CZ-282
CHASSIS MODEL CW CHASSIS MODEL CZ

Location of Coils and Trimmer Adjustments

The first I-f transformer is located between the variable condenser and the speaker. The trimmers are accessible through holes in the top of the can. The second I-f transformer is located on the rear wall underneath the chassis. The trimmers are accessible through holes in the rear of the chassis.
 The antenna coil is located to the left of the speaker and the oscillator coil underneath the chassis below the speaker.
 12A8GT tubes for the antenna and oscillator coils are located on the variable condenser, the trimmer on the section adjacent to the 455 kc wave trap is wound on the same form as the antenna coil and may be adjusted from the left side of the chassis.

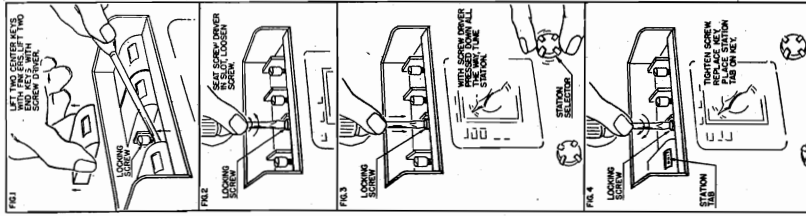

MODEL CZ

The first I-f transformer is located to the left of the speaker and the second I-f transformer to the right of the speaker. Trimmers for both coils are accessible through holes in the tops of the cans.
 The oscillator coil is located directly beneath the speaker. The loop antenna acts as the antenna coil. Trimmers for both oscillator and antenna coils are located on the variable condenser, the trimmer on the section adjacent to the 101.6GT tube being for the oscillator.

I-f and Wave-Trap Alignment

MODEL CW

Rotate the variable condenser to the minimum capacity position. Feed 455 kc to the grid-cap of the 12A8GT tube through a .01 mf condenser and adjust the four I-f trimmers for maximum response. Feed 457 kc through a .0001 mf condenser to the antenna lead and adjust the wave-trap trimmer for minimum response. (See General Notes, paragraph No. 4.)

MODEL CZ

Repeat the same procedure as for Model CW except for trap alignment. Model CZ does not use a wave trap.

R-f Alignment

Set the dial pointer at 140. Feed 1400 kc through a .0001 mf condenser to the antenna lead and adjust first the oscillator trimmer (on section of variable condenser near 70L6) then the antenna trimmer (on section of variable condenser near 12X5) for maximum response.

Preadjustment of Automatic Tuning Keys

Select four nearby stations desired for automatic tuning. Choose one of these stations and any key to be adjusted for it. Follow the procedure outlined below.

1. Remove all four keys. The two center keys should be taken out first. Grasp the key firmly on each side with the fingers and pull directly up. Remove the two end keys by prying them up with a screw-driver; the screw-driver should be inserted in the slot at the side of the key. See Fig. 1.
2. Seat the screw-driver in the slot of the locking screw to be adjusted. Press down the screw-driver firmly and loosen the screw about 1 to 1 1/2 turns. See Fig. 2.
3. With the screw-driver seated in the locking-screw, press it down firmly with the left hand while tuning in the desired station with the right hand, using the station selector. See Fig. 3.
4. Release the station selector knob and tighten the locking screw as much as possible. See Fig. 4.
5. Replace the key on its shaft. The vertical piece of metal alongside the locking screw slides into the slot in the key which contains a flat spring. Remove the tab bearing the station call letters from one of the cards supplied in a separate envelope with the station selector. Insert the tab and place it in the depression provided for it in the key. See Fig. 4.
6. Check the adjustment by turning well past the station, using the selector knob, and then pulling the key. The station should come back in again clearly and with maximum volume.

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohm-per-volt meter. Voltages listed below are from points indicated to B minus (which) with the volume control turned on full and no signal. Line voltage for these readings was 117.5 volts, 60 cycles. All measurements made with 117.5 volts d.c. will be lower than those given except heaters and cathodes were taken on 210 volt scale. Measurements made with 117.5 volts d.c. will be lower than those given below.

Tube	Plate	Screen	Cathode	Fil.
12A8GT	pentagrid oscillator modulator.....	88	0	12
12A6GT	pentode oscillator modulator.....	88	0	12
12X5GT	diode detector, a.f. amplifier, a.v.c.....	40	0	12
70L6GT	beam power output.....	82	88	12
				30

Voltage at 3Z5 cathode—115 volts.
 Voltage across speaker field—27 volts.
 Voltage across pilot light—1.5 volts.

ADDITIONAL PARTS USED ON CR-297 AND CRI-297

Part No.	DESCRIPTION	PRICE
4XT-432A	Antenna coil with 455 kc wave-trap.....	.90
6RT-476	Oscillator coil (see production change no. 1).....	.35
6RT-476	Double-tuned 455 kc first I-f transformer.....	.35
6RT-476	Double-tuned 455 kc second I-f transformer.....	.35
2CR-183	30,000 ohm 1/4 watt carbon resistor.....	.16
KR-53	50,000 ohm 1/4 watt carbon resistor.....	.16
3FR-293	340 ohm 1/2 watt wire-wound resistor.....	.16
6VX-364	Volume control .5 megohm with line switch.....	.55
4XR-327	15 megohm 1/4 watt carbon resistor.....	.16
KR-65	500,000 ohm 1/4 watt carbon resistor.....	.16
4XR-325	175 ohm 1 watt metallized resistor.....	.16
4XR-324	2500 ohm 1 watt carbon resistor.....	.16
6RC-486	Two-gang variable condenser.....	2.30
4XC-401	1000585 microhm wave-trap assembly.....	.20
	Trimmers, part of variable condenser.....	
RC-12	Trimmers, part of I-f transformers.....	
C10, C13, C23	.05 mf, 500 volt tubular condenser.....	.20
C14	.05 mf, 400 volt tubular condenser.....	.20
LC-64	.05 mf, 400 volt tubular condenser.....	.20
6RC-441	.00045 mf mica condenser.....	.20
3HC-274	.002 mf, 600 volt tubular condenser.....	.20
6VX-364	.002 mf, 600 volt tubular condenser.....	.20
LC-65	Dual 20 mf, 150 volt tubular dry electrolytic condenser.....	.20
6C-465B	20 mf, 135 volt dry electrolytic condenser.....	.20
4XC-404	20 mf, 135 volt dry electrolytic condenser.....	.20
4XC-404	20 mf, 135 volt dry electrolytic condenser.....	.20
3HC-274	20 mf, 135 volt dry electrolytic condenser.....	.20
	Additional parts used with a.c.-d.c. motors only.....	
	ADDITIONAL PARTS USED ON CR-297 AND CRI-297.....	
LLR-154	75,000 ohm 1/4 watt carbon resistor.....	.16
RC-12	.05 mf, 500 volt tubular condenser.....	.20
3LM-255	Needle-nose pliers.....	9.00
6FPM-46	117 volt a.c. phonograph motor (rim drive).....	12.25
4XP-20B	117 volt a.c. phonograph motor.....	12.25
3CPM-1	117 volt a.c.-d.c. phonograph motor.....	43.20
4XC-18A	Crystal phono pick-up.....	8.10
6VS-413	Permanent magnet dynamic speaker.....	7.50
4RS-301	Automatic stop switch.....	2.50
3ES-256L	Tone control switch.....	.50
	ADDITIONAL PARTS USED ON CR-303 AND CRI-303.....	
RR-472	Potentiometer for tone control.....	.55
IC-47A	0.0005 mf mica condenser.....	.20
6RPM-52	117 volt a.c. phonograph motor.....	34.20
6RPM-52	117 volt a.c. phonograph motor.....	34.20
6RPM-52	117 volt a.c. phonograph motor.....	34.20
6RPM-52	117 volt a.c. phonograph motor.....	34.20
6RPM-52A	A.C.-D.C. phonograph motor.....	51.00
6VS-413B	Permanent magnet dynamic speaker.....	6.70
6RC-463	Crystal pick-up.....	14.35

Location of Coils and Trimmer Adjustments

The first I-f transformer is mounted on top of the chassis deck to the left of the variable condenser. The trimmers are accessible through holes in the top of the can.
 The second I-f transformer is mounted under the chassis beneath the variable condenser. The trimmers are accessible through holes in the top of the chassis.
 The antenna and oscillator coils are located on the variable condenser. The trimmer on the front section is for the antenna coil.
 The oscillator coil is located underneath the chassis, beneath the speaker and the antenna coil and wave-trap assembly is mounted at the left side of the chassis.

I-f and Wave-Trap Alignment

Swing the variable condenser to the maximum capacity position. Feed 455 kc to the grid-cap of the 12A8GT tube through a .01 mf condenser and adjust the four I-f trimmers for maximum response. Feed 455 kc through a .0001 mf condenser to the antenna lead and adjust the wave-trap for minimum response. (See General Notes, paragraph No. 4.)

R-f Alignment


Set the dial pointer at 140. Feed 1400 kc through a .0001 mf condenser to the antenna connection and adjust first the oscillator trimmer (on rear section of variable condenser) then the antenna trimmer (on front section of variable condenser) for maximum response.

PRODUCTION CHANGES

1. CR chassis also uses oscillator coil 6JRT-467A or 6RT-476. For correct lug connections to either of these coils see illustration on previous page.

EMERSON RADIO & PHONOGRAPH CORP.


MODELS DF302, DF306
Chassis DF (2 Types)
Schematics, Voltage
NO. 43

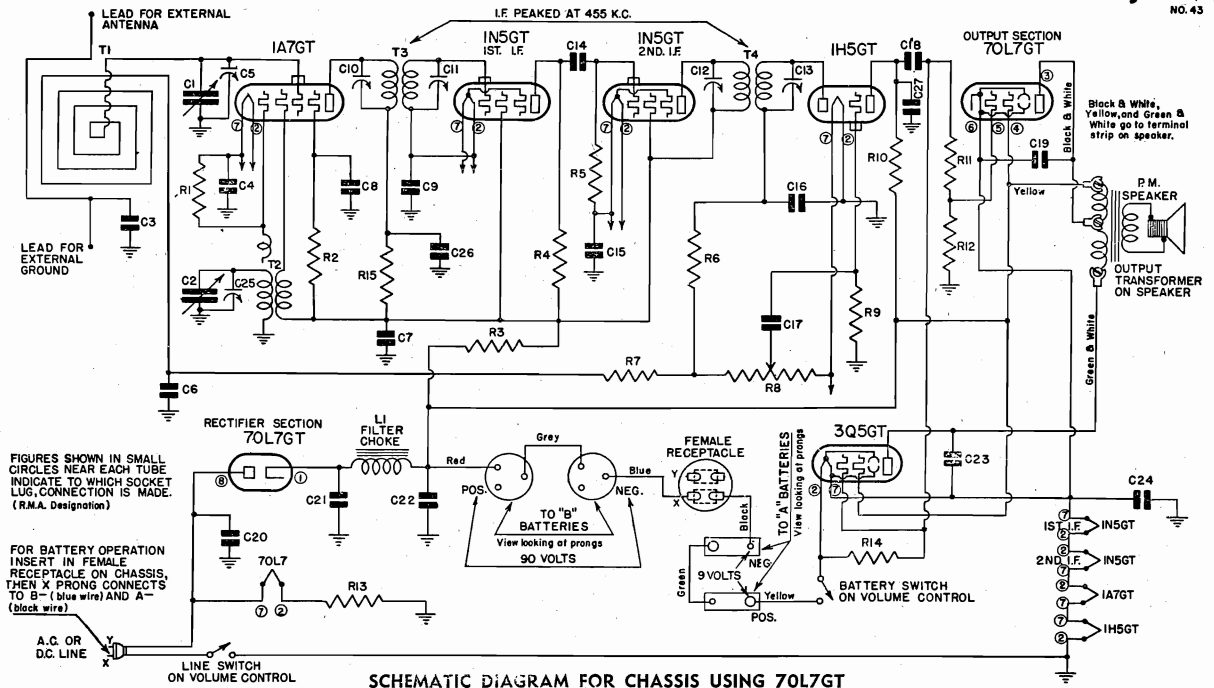

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed are from point indicated to chassis with volume control turned on full and no signal. The battery voltages for these readings were: "A" 9.0 volts, "B" 90 volts.

Tube	Plate	Screen	Osc. Plate	Fil.
1A7GT	88	50	82	1.5
1N5GT 1st i.f.	50	88	—	1.5
1N5GT 2nd i.f.	88	88	—	1.5
1H5GT	27	—	—	1.5
3Q5GT	85	88	—	3.0
70L7GT (line operation only)	86	95	—	70.0
70L7GT rectifier cathode (Pin no. 1) (line operation only)	—	—	—	125 volts.
or 117L7GT (line operation only)	86	95	—	117
117L7GT rectifier cathode (Pin no. 1) (line operation only)	—	—	—	125 volts.

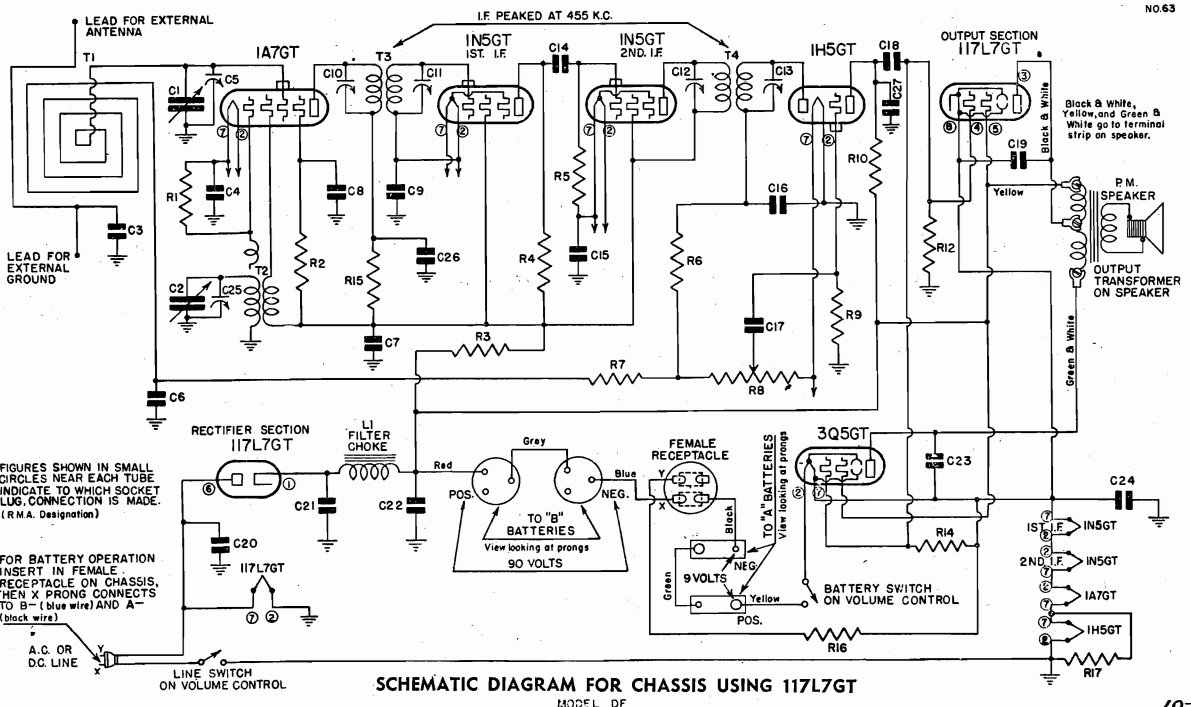

MODELS DF302, DF306

Chassis DF

Alignment, Trimmers
Changes, Parts

EMERSON RADIO & PHONOGRAPH CORP.

Item	Part No.	DESCRIPTION	PRICE (Subject to change without notice)
†Not supplied separately.			
T1	6XW-174	Loop antenna assembly	\$1.15
L1	7FT-512	Iron core filter choke	.90
T2	6RT-476	Oscillator Coil	.95
T3	7BT-488A	Double-tuned 455 kc first i-f transformer	1.00
T4	7FT-513	Double-tuned 455 kc diode i-f transformer	.95
R1, R6	KR-53	50,000 ohm 1/4 watt carbon resistor	.16
R2	ZZR-196	30,000 ohm 1/4 watt carbon resistor	.16
R3	KR-50	500 ohm 1/4 watt carbon resistor	.16
R4	OR-73	25,000 ohm 1/4 watt carbon resistor	.16
R5	KR-54	100,000 ohm 1/4 watt carbon resistor	.16
R7, R14	NNR-220	3 megohm 1/4 watt carbon resistor	.16
R8	3HR-240C	Volume control with line and battery switch	1.05
R9	3RR-274	5 megohm 1/4 watt carbon resistor	.16
R10, R12	KR-56	500,000 ohm 1/4 watt carbon resistor	.16
R11	LR-61	200,000 ohm 1/4 watt carbon resistor	.16
R13	7FR-370	315 ohm metal clad resistor (see Production Change No. 2)	.35
R15, R16	PR-79	1,000 ohm 1/4 watt carbon resistor (see General Note No. 9 and Production Change No. 3)	.16
R17	7JR-376	330 ohm 1/4 watt carbon resistor (see General Note No. 9 and Production Change No. 3)	.16
C1, C2	6RC-436B	Two gang variable condenser	2.35
C3	3HC-274	0.002 mf, 600 volt tubular condenser	.20
C4, C6, C9, C26	BC-12	0.05 mf, 200 volt tubular condenser	.20
†C5		Trimmer part of loop assembly	
C7	BC-13	0.25 mf, 200 volt tubular condenser	.20
C8, C18	LC-65	0.02 mf, 400 volt tubular condenser	.20
†C10, C11, C12, C13		Trimmers, part of i-f transformers	
C14, C27	4XC-394A	0.00022 mf, mica condenser	.20
C15	5AC-388	0.25 mf, 100 volt tubular condenser	.20
C16	5AC-384	0.0002 mf, 600 volt tubular or mica condenser	.20
C17	HC-34	0.006 mf, 600 volt tubular condenser	.20
C19	3VC-324	0.003 mf, 600 volt tubular condenser	.20
C20	LC-64	0.05 mf, 400 volt tubular condenser	.20
C21, C22	6JC-426E	Dual 20 mf, 150 volt dry electrolytic condenser	.85
C23	NNC-199	0.001 mf, 600 volt tubular condenser (see Production Change No. 1)	.20
C24	7FC-451	40 mf, 25 volt dry electrolytic condenser	.80
C25		Trimmer, part of variable condenser	

List Price Ea.
Effective as of
Oct. 1st, 1939

PRODUCTION CHANGES

- Chassis using certain speakers use output condenser C23 part no. KC-58—.01 mf.—400 volt.
- Chassis bearing serial numbers between 3000651 and 3001051 and between 3325600 and 3326599 use 117L7GT in place of 70L7GT and do not use resistor R13.
- The schematic diagram of chassis using 70L7GT does not show resistors R16 and R17. These resistors occupy the same position in this chassis as they are shown in the schematic of chassis using 117L7GT.

Some chassis do not contain resistors R16 and R17. These resistors should be added to increase tube life.

On chassis bearing serial numbers between 2,888,350 and 2,963,000 use only bakelite base tubes when replacing the 1N5GT's.

To permit the use of metal base 1N5GT's in the above chassis, the following change must be made in the chassis:

- Unsolder and remove the three leads from the #1 pin soldering lug of the 1N5GT socket at the rear of the chassis. (Three leads are condenser C26, resistor R15, and one wire.)
- Solder these three leads to the #8 pin soldering lug of the 1A7GT socket. (This lug is a blank.)

The tube complement is as follows:

1—1A7GT oscillator-modulator.	See Note above.	Range	540—1600 kc.
1—1N5GT 1st i-f amplifier.		Voltage Rating (Line Operation)	105-125 volts a.c. or d.c.
1—1N5GT 2nd i-f amplifier.		Power Consumption (Line Operation)	30 watts
1—1H5GT 2nd detector, a.v.c., a-f amplifier.		Current Drain (Battery Operation)	"A" Battery 0.05 amps.
1—3Q5GT beam power output (battery operation only).			"B" Battery 0.01 amps.
1—70L7GT beam power output and half wave rectifier (line operation only).			
1—117L7GT beam power output and half wave rectifier (see Production Change No. 2)			

Location of Coils and Trimmer Adjustments

The oscillator coil is located beneath the chassis. The trimmer for the oscillator is on the rear section of the variable condenser.

The loop antenna acts as the antenna coil. The trimmer for the loop is on the loop frame.

The i-f transformers are located in cans mounted on top of the chassis. The first i-f transformer is the one at the left end of the chassis. The diode i-f transformer is located between the 1N5GT first i-f tube and the variable condenser. The trimming condensers for both transformers can be reached through holes in the tops of the cans.

Alignment


LF—Swing variable condenser to minimum capacity position.

Feed 455 kc to the grid of the 1A7GT tube through a 0.01 mf condenser. Adjust the four i-f trimmers for maximum response.

RF—Set the dial pointer at 140. Feed 1400 kc through a .0001 mf condenser to the antenna connection and adjust first the oscillator trimmer (on rear section of variable condenser) then the antenna trimmer (on loop frame) for maximum response.


If the loop antenna has been replaced it may be necessary to adjust the loop inductance. Align at 140. Set the dial at 60 and feed 600 kc to the antenna lead. A portion of the outside turn of the loop, may then be swung to either side of the center to give maximum response. Realign at 140.

EMERSON RADIO & PHONOGRAPH CORP. MODELS DJ310, DJ311, DJ312
 Chassis DJ (2 Types)
 Schematics, Voltage Changes

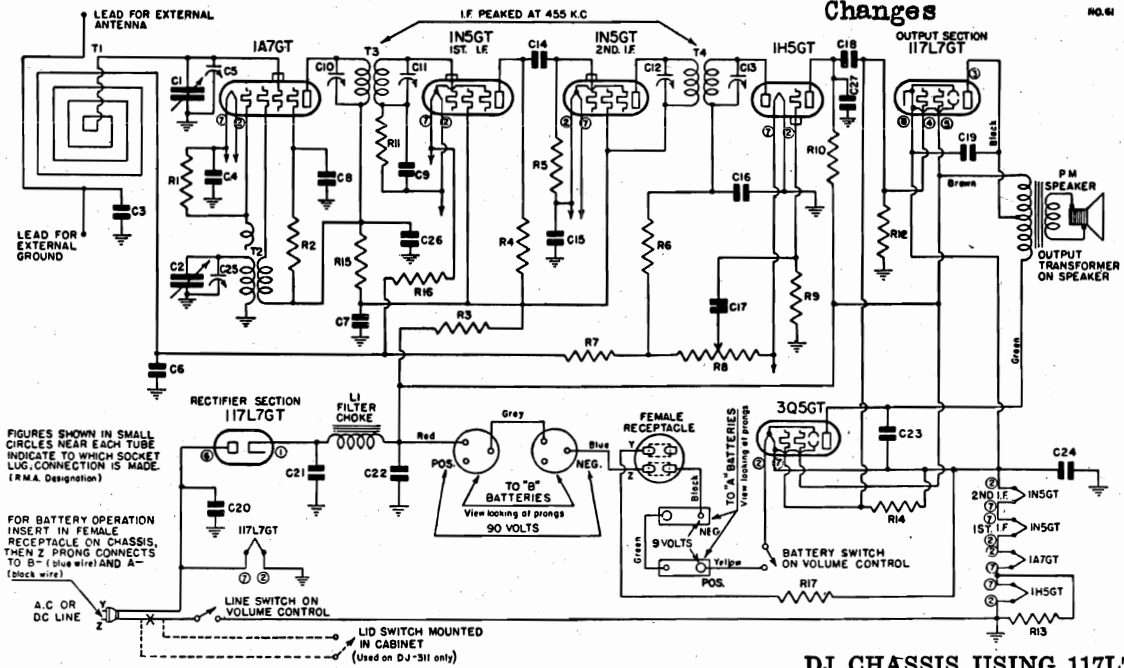

PRODUCTION CHANGES

1. DJ chassis bearing serial numbers below 3,017,129 use 70L7GT rectifier-output tube. See lower schematic.
2. In Model DJ-311 receivers after serial number 3,021,529, the door switch, part No. 7JS-444, has been omitted.

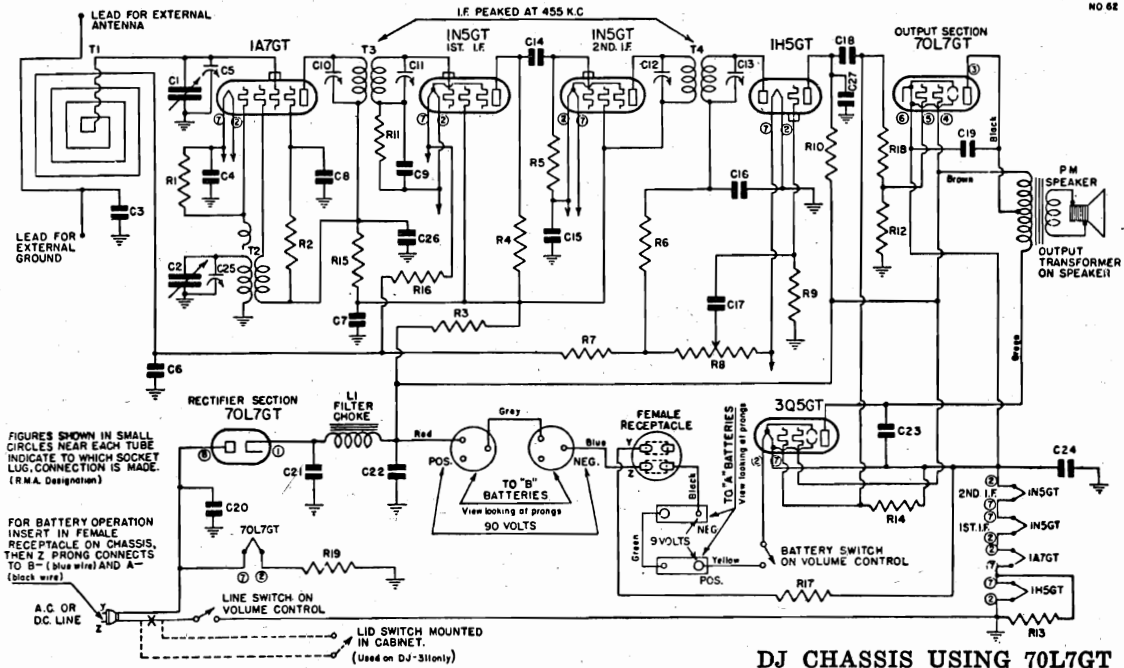

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed are from point indicated to chassis with volume control turned on full and no signal. The battery voltages for these readings were: "A" 9.0 volts, "B" 90 volts.

Tube	Plate	Screen	Osc. Plate	Fil.
1A7GT	88	50	82	1.5
1N5GT 1st i-f	50	88	—	1.5
1N5GT 2nd i-f	88	88	—	1.5
IH5GT	27	—	—	1.5
3Q5GT	85	88	—	3.0
117L7GT (line operation only)	86	95	—	117
117L7GT rectifier cathode (Pin no. 1)	(line operation only)—125 volts. (See production change no. 1.)			

MODELS DJ310, DJ311, DJ312

Chassis DJ

EMERSON RADIO & PHONOGRAPH CORP.

Alignment, Batt. Data, Parts Trimmers

MODELS: DJ-310, DJ-311 and DJ-312

CHASSIS MODEL: DJ

BATTERY COMPLEMENT

The cabinet is designed to house the complete set of batteries. The battery complement should be as follows:

Type Battery	No. Req.	Eveready Part No.	Rayovac Part No.	Burgess Part No.
4½ volt "A"	2	746 (plug-in type)	P83A or EM-83 (plug-in type)	3G (plug-in type)
45 volt "B"	2	482 Minimax (plug-in type)		

The i-f transformers are located in cans mounted on top of the chassis. The first i-f transformer is at the right of the variable condenser and the diode i-f transformer is to the left of the variable condenser. The trimming condensers for both transformers can be reached through holes in the tops of the cans.

I-f Alignment

Swing variable condenser to minimum capacity position. Feed 455 kc to the grid of the 1A7GT tube through a 0.01 mf condenser. Adjust the four i-f trimmers for maximum response.

R-f Alignment

Set the dial pointer at 140. Feed 1400 kc from the signal generator into a loop of wire about one foot in diameter. Hold this radiating loop approximately one foot away from and parallel to the receiver loop antenna and advance the output of the signal generator until a suitable deflection is obtained on the output meter. Adjust first the oscillator trimmer (on front section of variable condenser) then the antenna trimmer (on rear section of variable condenser) for maximum response.

If the loop antenna has been replaced it may be necessary to adjust the loop inductance. Align at 140. Set the dial at 80 and feed 600 kc to the radiating loop. A portion of the outside turn of the loop may then be swung to either side of the center to give maximum response. Re-align at 140.

Battery Installation

To install and connect the batteries in this cabinet observe the following procedure:


1. Remove the back panel of the cabinet by taking out the screws.
2. Locate the battery cable coming from the receiver and identify the plugs on the cable ends.
3. Insert the three-prong plug on the battery cable into the two "B" batteries. Place the two batteries in the bottom of the cabinet with the plug-ends of the batteries facing each other. Push the batteries up against the front of the cabinet. The wood blocks at the rear corners and rear center of the cabinet serve to hold the "B" batteries in place.
4. Insert the two-prong plug on the battery cable into the two "A" batteries. Place the "A" batteries, one at a time, above the "B" batteries in the cabinet. The plug-ends of the "A" batteries should be facing to the left, as indicated in the illustration. Push the "A" batteries to the left, when placing them in the cabinet, in order to clear the small wood block in the front right-hand corner of the cabinet.
5. Replace the back panel of the cabinet and fasten it in place with the screws.

DESCRIPTION

Type: Universal (Battery, A.C.-D.C.) Superheterodyne.
 Frequency Range: 540-1600 kc.
 Power Supply: Battery, A.C. or D.C.
 Voltage Rating: (Line operation) 105-125 volts, a.c.-d.c.
 Power Consumption: (Line operation) 30 watts.
 Current Drain: (Battery operation) "A" battery 0.05 amp. "B" battery 0.01 amp.

GENERAL NOTES

1. The color coding of the i-f transformer leads is as follows:
 Grid—green Plate—blue
 Grid return—black B plus—red
2. The color coding of the battery cable is as follows:
 Red—B plus, 90 volts Yellow—A plus, 9 volts
 Blue—B minus Black—A minus
3. If replacements are made in the r-f section of the circuit, the receiver should be carefully realigned.
4. A.C.-D.C. Operation: Open the small door at the back of the cabinet. It is important that this small door be left open while operating the receiver on either a.c. or d.c. power. Take out the line cord, removing the plug from its receptacle at the rear of the chassis. Insert the plug in the wall outlet. If the power supply is d.c. and the receiver does not operate at first, remove the plug from the wall outlet, turn it half way around and re-insert it in the outlet, thus obtaining the proper polarity.

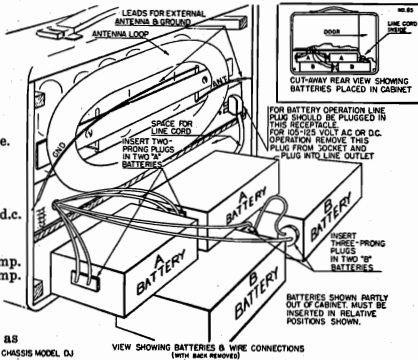

VIEW SHOWING BATTERIES & WIRE CONNECTIONS (WITH BACK REMOVED)

6. The receiver has a self-contained antenna and normally does not require additional antenna or ground connection. For permanent home installations of this model, however, in a location far removed from broadcasting stations, an additional outside antenna should be used. The outside antenna and ground connections should be made to the two leads at the rear of the cabinet. See the illustration.
7. The self-contained loop antenna has directional properties. It is important, therefore, once the station is tuned in, that the cabinet be rotated on its base back and forth through a quarter of a circle (90 degrees), and left at the position where the station is received with maximum volume.

ADJUSTMENTS

Location of Coils and Trimmer Adjustments

5. Battery Operation: Important: Remove the line plug from the electrical outlet. Insert the plug into the receptacle at the rear of the receiver. This is important since the receiver will not operate from batteries with the plug out of the receptacle. The loose portion of the cord can then be coiled and placed in the cabinet underneath the shelf.
 The oscillator coil is located beneath the chassis. The trimmer for the oscillator is on the front section of the variable condenser.
 The loop antenna acts as the antenna coil. The trimmer for the loop is on the rear section of the variable condenser.

*Item	Part No.	DESCRIPTION	PRICE	*Item	Part No.	DESCRIPTION	PRICE
T1	7JW-206	Loop antenna assembly	.95	C8, C18	LC-65	0.02 mf, 400 volt tubular condenser	.20
L1	7JT-524	Iron core filter choke	.85	†C10, C11, C12, C13		Trimmers, part of i-f transformers.	
T2	7CT-511	Oscillator coil	.40	C14, C27	4XC-394A	0.00022 mf, mica condenser	.20
T3	7BT-488E	Double-tuned 455 kc first i-f transformer	.95	C15	5AC-388	0.25 mf, 100 volt tubular condenser	.20
T4	7JT-544A	Double-tuned 455 kc diode i-f transformer	.95	C16	5AC-384	0.0002 mf, 600 volt tubular or mica condenser	.20
R1, R6	KR-53	50,000 ohm ¼ watt carbon resistor	.16	C17	HC-34	0.006 mf, 600 volt tubular condenser	.20
R2	ZZR-196	30,000 ohm ¼ watt carbon resistor	.16	C19	3VC-324	0.003 mf, 600 volt tubular condenser	.20
R3	KR-50	500 ohm ¼ watt carbon resistor	.16	C20	LC-64	0.05 mf, 400 volt tubular condenser	.20
R4	OR-73	25,000 ohm ¼ watt carbon resistor	.16	C21, C22	6JC-426E	Dual 20 mf, 150 volt dry electrolytic condenser	.90
R5	KR-54	100,000 ohm ¼ watt carbon resistor	.16	C23	NNC-199	0.001 mf, 600 volt tubular condenser	.20
R7, R14	NNR-220	3 megohm ¼ watt carbon resistor	.16	C24	7FC-451	40 mf, 25 volt dry electrolytic condenser	.80
R8	3HR-240E	Volume control with line and battery switch (500,000 ohms)	.95	†C25, C5, C29		Trimmer, part of variable condenser.	
R9, R11	3RR-274	5 megohm ¼ watt carbon resistor	.16	AC-6		0.1 mf, 200 volt tubular condenser	.20
R10, R12	KR-56	500,000 ohm ¼ watt carbon resistor	.16	7JS-444		Door switch (for DJ-311)	.50
R18	LR-61	200,000 ohm ¼ watt carbon resistor (see production change no. 1)	.16	7JS-440		5½" permanent magnet dynamic speaker (for DJ-310 and DJ-326)	5.10
R13	7JR-376	380 ohm ¼ watt carbon resistor (see production change no. 1)	.16	7JS-443		6½" permanent magnet dynamic speaker (for DJ-311 and 312)	5.75
R15, R17	PR-79	1,000 ohm ¼ watt carbon resistor	.16			DIAL PARTS	
R16	4XR-327	15 megohm ¼ watt carbon resistor	.16	7JD-98		Dial face	.10
C1, C2	7BC-445	Two-gang variable condenser	2.30	4MZ-588A		Dial pointer	.20
C3	3HC-274	0.002 mf, 600 volt tubular condenser	.20	7BH-40B		Dial drive shaft	.10
C6, C7, C9, C26, C28	BC-12	0.05 mf, 200 volt tubular condenser	.20	6RW-162		Drive cord spring	.02
				7JW-217		Battery cable (DJ)	.60
				7EZ-867A		Dial drive cord	.02
				7JE-30A		Dial crystal (for 310, 311)	.25
				7JE-30		Dial crystal (for 312)	.20


*Item number/locates article on schematic diagram. †Not supplied separately.
 Specify part numbers when ordering—List price each effective as of October 15, 1939. (Subject to change without notice.)

EMERSON RADIO & PHONOGRAPH CORP.

MODEL DC308

Chassis DC

Schematic, Voltage, Changes
Alignment, Trimmers

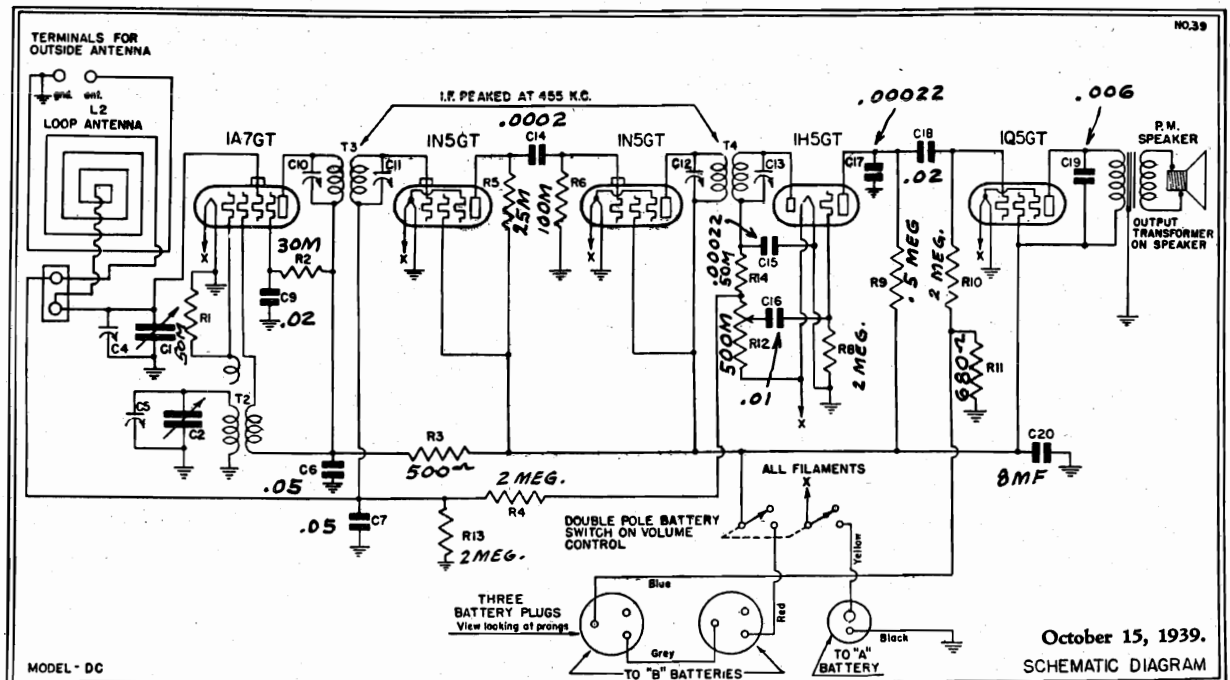

The tube complement is as follows:

- 1—1A7GT oscillator-modulator
- 1—1N5GT 1st i-f amplifier
- 1—1N5GT 2nd i-f amplifier
- 1—1H5GT 2nd detector, a.v.c., a-f amplifier
- 1—1Q5GT pentode output

PRODUCTION CHANGES

1. Chassis bearing serial numbers below 2,936,285 use .5 megohm at R10.
2. Chassis bearing serial numbers below 2,939,151 use diode i-f transformer

Current drain "A" battery—0.3 amps.
 "B" battery—0.010 amps. with no signal
 Frequency range 530 to 1600 kc.

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed are from point indicated to chassis with volume control turned on full and no signal. The battery voltages for these readings were: "A" 1.5 volts, "B" 90 volts.

Tube	Plate	Screen	Osc. Plate	Fil.
1A7GT	82	52	82	1.5
1N5GT 1st i-f.....	70	82	—	1.5
1N5GT 2nd i-f.....	82	82	—	1.5
1H5GT	25	—	—	1.5
1Q5GT	77	82	—	1.5

Bias for the 1Q5GT tube is obtained across the resistor R11. The voltage drop across this resistor should be 6.8 volts.

Location of Coils and Trimmer Adjustments

The first i-f transformer is located to the right of the variable condenser and the diode i-f transformer to the left of the variable condenser. Trimmers for both transformers are accessible through holes in the tops of the cans.

The oscillator coil is located under the chassis, beneath the variable condenser. Trimmer for the oscillator is located on the front section of the variable condenser.

The loop antenna acts as the antenna coil. Trimmer for the loop is located on the rear section of the variable condenser.

I-f Alignment

Swing variable condenser to minimum capacity position.

Feed 455 kc to the grid of the 1A7GT tube through a 0.01 mf condenser. Adjust the four i-f trimmers for maximum response.

R-f Alignment


Set the dial pointer at 140. Feed 1400 kc through a .0001 mf condenser to the antenna connection and adjust first the oscillator trimmer (on front section of variable condenser) then the antenna trimmer (on rear section of variable condenser) for maximum response.

If the loop antenna has been replaced it may be necessary to adjust the loop inductance, align at 140. With the pointer set at 60 feed 600 kc to the antenna lead. A portion of the outside turn of the loop may be swung to either side of the center to give maximum response. Repeat the alignment at 140.

MODEL DL1-330
Chassis DL1
Schematic, Parts

EMERSON RADIO & PHONOGRAPH CORP.

NO.73

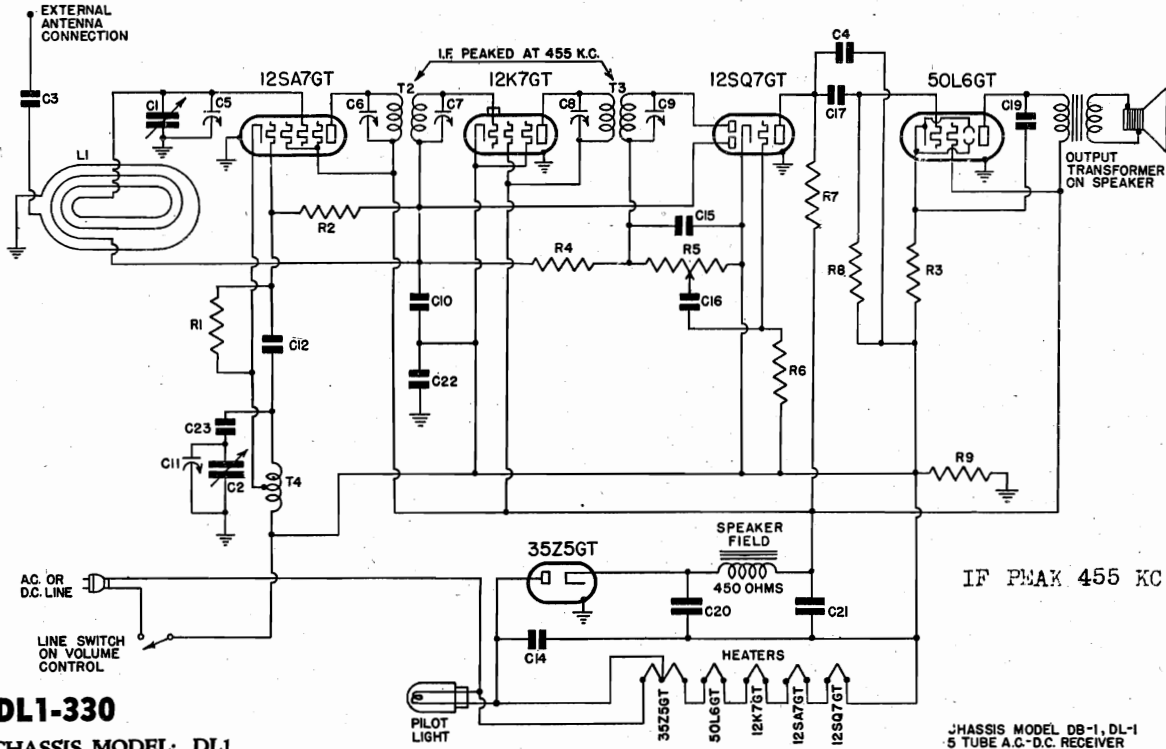

DL1-330

CHASSIS MODEL: DL1

FOR ALIGNMENT, VOLTAGE, AND TRIMMERS SEE DL-330 CHASSIS DL.

When ordering, specify part numbers. List price each, effective as of Jan. 1, 1940. Subject to change without notice.


*Item	Part No.	DESCRIPTION	PRICE
L1	7BW-179	Loop antenna assembly.....	.90
T4	7BT-486	Oscillator coil (DL).....	.40
T4	7BT-486A	Oscillator coil (DL1).....	.40
T2	7BT-488	Double-tuned 455 kc first i-f transformer.....	1.00
T3	7BT-550B	Double-tuned 455 kc second i-f transformer.....	.95
R1	LR-60	20,000 ohm 1/4 watt carbon resistor.....	.16
R3	3FR-293	140 ohm 1/2 watt wire-wound resistor.....	.16
R4	NNR-220	3 megohm 1/4 watt carbon resistor.....	.16
R5	7LR-378	Volume control 0.5 megohm with line switch.....	.85
R6, R2	4XR-327	15 megohm 1/4 watt carbon resistor.....	.16
R7, R8	KR-56	500,000 ohm 1/4 watt carbon resistor.....	.16
R9	LR-61	200,000 ohm 1/4 watt carbon resistor (DL1).....	.16
C1, C2	7BC-445A	Two-gang variable condenser.....	2.25
†C5, C11		Trimmers, part of variable condenser.....	
†C6, C7, C8, C9		Trimmers, part of i-f transformers.....	
C10, C23	BC-12	0.05 mf, 200 volt tubular condenser.....	.20
C14	LC-64	0.05 mf, 400 volt tubular condenser.....	.20
C12, C15, C4	4XC-394A	0.00022 mf mica condenser.....	.20
C16, C3	3HC-274	0.002 mf, 600 volt tubular condenser.....	.20
C17, C19	6JC-425	0.024 mf, 400 volt tubular condenser.....	.20
C20, C21	6JC-426C	Dual 20 mf, 150 volt dry electrolytic condenser.....	.90
C22	3CC-302	0.15 mf, 200 volt tubular condenser (DL1 only).....	.20
	7BS-409	5" dynamic speaker (DL).....	3.80
	7BS-435	5" dynamic speaker (DL1).....	3.85
	6JL-104	Pilot light, 6.3 volt, .15 amp., Mazda No. 47.....	.20
	7BB-77	Pilot light socket.....	.15
	7LD-96	Dial face.....	.25
	7BZ-867A	Drive cord.....	.02
	6RW-162	Drive cord spring.....	.02
	7BH-40C	Drive shaft and pulley.....	.10
	7QD-103	Dial pointer.....	.15
	5FZ-758	Dial crystal (DL).....	.25
	5FZ-758A	Dial crystal (DL1).....	.25

*Item number locates the article on the schematic diagram.

†Not supplied separately.

EMERSON RADIO & PHONOGRAPH CORP. Chassis DM, DM1
Schematic, Voltage
Alignment, Trimmers

NO 71

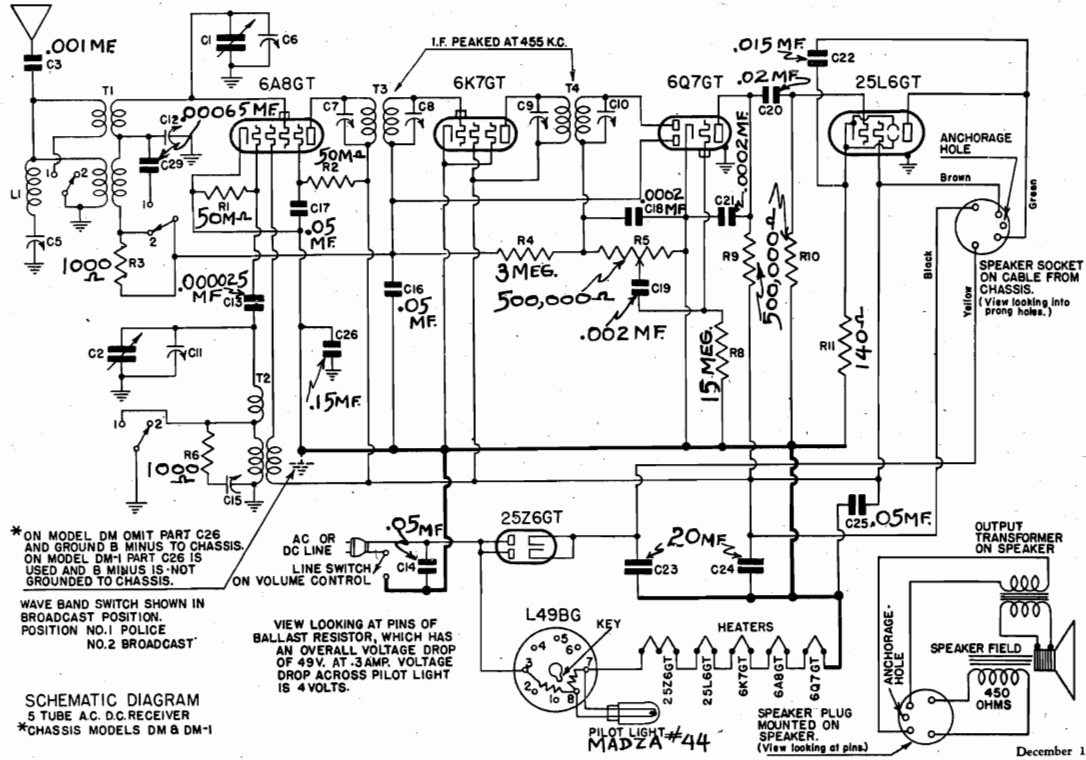

* ON MODEL DM OMIT PART C26 AND GROUND B MINUS TO CHASSIS. ON MODEL DM-1 PART C26 IS USED AND B MINUS IS NOT GROUNDED TO CHASSIS.

WAVE BAND SWITCH SHOWN IN BROADCAST POSITION. POSITION NO.1 POLICE NO.2 BROADCAST

SCHEMATIC DIAGRAM
5 TUBE A.C. D.C. RECEIVER
* CHASSIS MODELS DM & DM-1

VIEW LOOKING AT PINS OF BALLAST RESISTOR, WHICH HAS AN OVERALL VOLTAGE DROP OF 49 V. AT .3 AMP. VOLTAGE DROP ACROSS PILOT LIGHT IS 4 VOLTS.

chassis deck. The trimmers are available through holes in the top of the can. The second i-f transformer is located on the rear wall underneath the chassis. The trimmers are available through holes in the rear.

MODEL: DM-331 MODEL: DM1-331
CHASSIS MODEL: DM CHASSIS MODEL: DM1
DESCRIPTION

Type: Two-band superheterodyne.
Frequency ranges: 540-1700 kc
2300-6600 kc
Number of Tubes: Five.

Type of tubes:
1-6A8GT, pentagrid oscillator-modulator
1-6K7GT, first i-f amplifier
1-6SQ7GT, diode detector, a-f amplifier, a.v.c.
1-25L6GT, beam power output
1-25Z6GT, dual half-wave rectifier.

Octal-base tubes in this receiver may be replaced with either metal or bantam-type octal-base glass tubes. The letters "GT" at the end of the tube number indicates that the tube has a bantam glass envelope. In all other respects it is the same as the metal tube bearing the same number without the "GT."

Power supply: A.C. or D.C.
Voltage rating: 105-125 volts.
Power consumption: 45 watts.

GENERAL NOTES

- If replacements are made or the wiring disturbed in the i-f portion of the circuit, the receiver should be carefully re-aligned.
- The filament dropping resistor (L49BG on schematic) is located at the rear of the chassis. This resistor will become

quite hot under normal operating conditions. For voltage drop specifications, see below.

- When operating the receiver on d.c. it may be necessary to reverse the line plug to obtain the correct polarity.
- The first i-f transformer is held to the chassis by snap-on fasteners. To remove it, unsolder all its leads under the chassis, pinch together the prongs of the snap-on fastener and lift the i-f can from the chassis.
- The color coding of the i-f transformer leads is as follows:
Grid—green
Grid return—black
Plate—blue
B plus—red
- The wave-trap has been adjusted for maximum signal rejection at 455 kc. If, however, persistent interference is experienced from some particular telegraphic station, readjust the wave-trap trimmer until the response from the interfering station is at a minimum.

ADJUSTMENTS

An oscillator with frequencies of 455, 1500 and 6000 kc is required.

An output meter should be used across the voice coil or output transformer for observing maximum response.

Always use as weak a test signal as possible when aligning the receiver.

Location of Coils and Trimmer Adjustments

The first i-f transformer is located on top of the

VOLTAGE ANALYSIS

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed below are from point indicated to B minus (switch) with the volume control turned on full and no signal. Line voltage for these readings was 117.5 volts, 60 cycles, a.c. All readings except cathodes and heaters were taken on 250 volt scale. Readings taken on d.c. will be slightly lower.

Tube	Plate	Screen	Cathode	Osc. Plate	Fil.
6A8GT	95	45	0	95	6.3
6K7GT	95	95	0	—	6.3
†6SQ7GT	38	—	0	—	6.3
‡25L6GT	90	95	6.5	—	25.0

Voltage at 25Z6 cathode—125 volts. Voltage drop across ballast resistor (pins nos. 3, 7)—49 volts.
Voltage across speaker field—28 volts. Voltage drop across pilot light section of ballast resistor (pins nos. 8 and 7)—4 volts.

The trimmers for the short-wave antenna and oscillator are located on the variable condenser. The trimmer on the front section is for the oscillator.

The trimmers for the broadcast oscillator and antenna coil are mounted on a dual assembly just below the variable condenser underneath the chassis.

The 455 kc wave-trap is part of the antenna coil assembly directly behind the variable condenser. The trimmer for the 455 kc wave-trap is mounted on the coil and is accessible from the rear of the chassis.

i-f and Wave-Trap Alignment

Rotate the wave-band switch to the broadcast (clockwise) position. Set the variable condenser at the minimum capacity position and feed 455 kc, through a 0.02 mf paper condenser, to the grid cap of the 6A8 tube (do not remove the grid clip from the tube). Adjust the four i-f trimmers for maximum response. Feed 455 kc to the antenna through a standard dummy antenna (a .0002 mf condenser may be used as a substitute) and adjust the wave-trap trimmer for minimum response. (See General Note No. 6.)

Short-Wave Alignment

(Short-wave alignment should precede broadcast alignment.)

With the wave-band switch in the short-wave position, counter-clockwise, set the dial pointer at 6 mc. and feed 6000 kc through a standard dummy antenna to the antenna lead. If an I.R.E. standard dummy antenna is not available, a 0.0002 mf mica condenser in series with 400 ohm non-inductive resistor may be used as a substitute.

Adjust first the oscillator trimmer (on front section of the variable condenser) then the antenna trimmer (on rear section of variable condenser) for maximum response.

Broadcast Alignment

Rotate the wave-band switch clockwise to the broadcast position, set the pointer at 150 and feed 1500 kc through a standard dummy antenna to the antenna lead. Adjust first the broadcast oscillator trimmer (lower of dual trimmer assembly located underneath the variable condenser) and then the antenna trimmer (upper trimmer of dual assembly) for maximum response.

December 15, 1939.

MODELS DP332, DP1-332
Chassis DP, DP1 EMERSON RADIO & PHONOGRAPH CORP.
Schematic, Voltage
Alignment, Trimmers

Location of Coils and Trimmer Adjustments

The first i-f transformer is located on top of the chassis deck. The trimmers are available through holes in the top of the can. The second i-f transformer is located on the rear wall underneath the chassis. The trimmers are available through holes in the rear.

The trimmers for the antenna coil are mounted on the antenna coil assembly behind and to the right of the variable condenser. The trimmer in the center is for the broadcast band and the trimmer at the bottom for the short-wave band.

The trimmers for the oscillator coil are mounted on the oscillator coil assembly, located on the rear wall underneath the chassis. The trimmer farthest from the end is for the broadcast band. The center trimmer is the broadcast series padding condenser, and the trimmer closest to the end is for the short-wave band.

The 455 kc wave-trap is part of the antenna coil assembly. The trimmer for the trap is the uppermost trimmer of the assembly.

i-f and Wave-Trap Alignment


Rotate the wave-band switch to the broadcast (clockwise) position. Set the variable condenser at the minimum capacity position and feed 455 kc, through a .002 mf paper condenser, to the grid cap of the 6A8 tube (do not remove the grid clip from the tube). Adjust the four i-f trimmers for maximum response. Feed 455 kc to the antenna through a standard dummy antenna (.0002 mf condenser may be used as a substitute) and adjust the wave-trap trimmer for minimum response. (See General Note No. 6.)

Short-Wave Alignment

With the wave-band switch in the short-wave position, counter-clockwise, set the dial pointer at 16 mc. Feed 16,000 kc through a standard short-wave dummy antenna (a 400 ohm resistor may be used as a substitute) to the antenna lead and adjust first the oscillator trimmer, then the antenna trimmer for maximum response.

Broadcast Alignment

Rotate the wave-band switch clockwise and set the pointer at 160. Feed 1600 kc through a standard broadcast dummy antenna to the antenna lead (a .0002 mf condenser may be used as a substitute) and adjust first the broadcast oscillator trimmer and then the antenna trimmer for maximum response. Move pointer to 60, feed 600 kc and adjust series paddler (while rocking the variable) for maximum response.

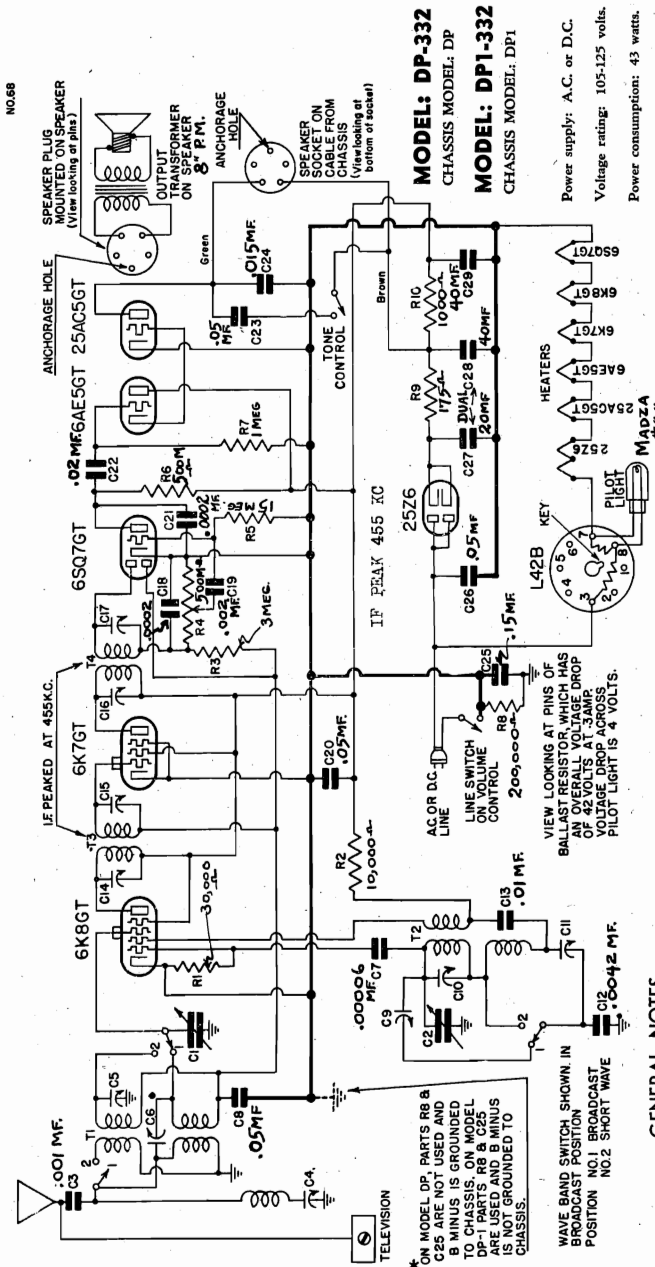

MODEL: DP-332
 CHASSIS MODEL: DP

MODEL: DP1-332
 CHASSIS MODEL: DP1

Power supply: A.C. or D.C.
 Voltage rating: 105-125 volts.
 Power consumption: 43 watts.

* CHASSIS MODELS DP & DP-1
 6 TUBE A.C. D.C. RECEIVER

VOLTAGE ANALYSIS

December 15, 1939.
 Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed below are from point indicated to B minus (switch) with the volume control turned on full and no signal. Line voltage for these readings was 117.5 volts, 60 cycles, a.c. All readings except cathodes and heaters were taken on 250 volt scale. Readings taken on d.c. will be slightly lower.

Tube	Plate	Screen	Cathode	Osc. Plate	Fil.
6K8GT	90	90	0	70	6.3
6SQ7GT	90	90	0	—	6.3
6A8GT	90	—	0	—	6.3
25A5C5GT	110	—	0	—	25.0

Voltage drop across ballast resistor (pins nos. 3, 7)—42 volts.
 Voltage drop across pilot light section of ballast resistor (pins nos. 8 and 7)—4 volts.

ADJUSTMENTS

An oscillator with frequencies of 455, 1600 and 16,000 kc is required.
 An output meter should be used across the voice coil or output transformer for observing maximum response.
 Always use as weak a test signal as possible when aligning the receiver.

DESCRIPTION

Type of tubes:
 1—6K8GT, pentagrid oscillator-modulator
 1—6SQ7GT, first i-f amplifier
 1—6SQ7GT, diode detector, a-f amplifier, a.v.c.
 1—6A8GT, audio amplifier
 1—25A5C5GT, dynamic coupled output
 1—25Z6GT, dual half-wave rectifier.

Type: Two-band superheterodyne.
 Frequency ranges: 540-1730 kc
 5.6-18 mc.
 Number of tubes: Six.





GENERAL NOTES

- If replacements are made or the wiring disturbed in the i-f portion of the circuit, the receiver should be carefully realigned.
- The filament dropping resistor (L42B on schematic) is located at the rear of the chassis. This resistor will become quite hot under normal operating conditions. For voltage drop specifications, see below.
- When operating the receiver on d.c., it may be necessary to reverse the line plug to obtain the correct polarity.
- The first i-f transformer is held to the chassis by snap-on fasteners. To adjust all trimmers, pinch together the prongs of the snap-on fastener and lift the i-f can from the chassis.
- The color coding of the i-f transformer leads is as follows:
 Plate—blue
 Grid—green
 Grid return—black
 B plus—red
- The wave-trap has been adjusted for maximum signal rejection at 455 kc. If, however, persistent interference is experienced from some particular telegraphic station, readjust the wave-trap trimmer until the response from the interfering station is at a minimum.



MODEL LA60
Schematics

FADA RADIO & ELECTRIC CO

MODEL 21
MODEL F25
MODEL L26

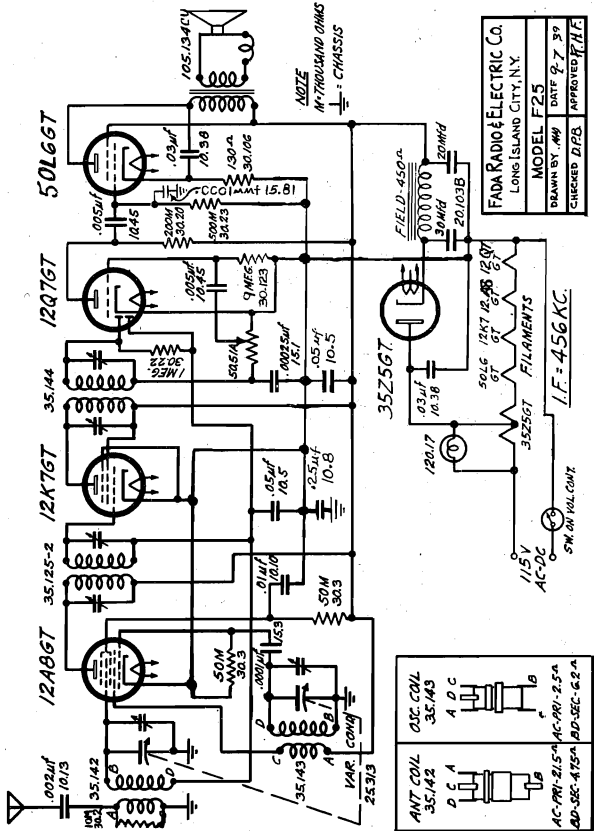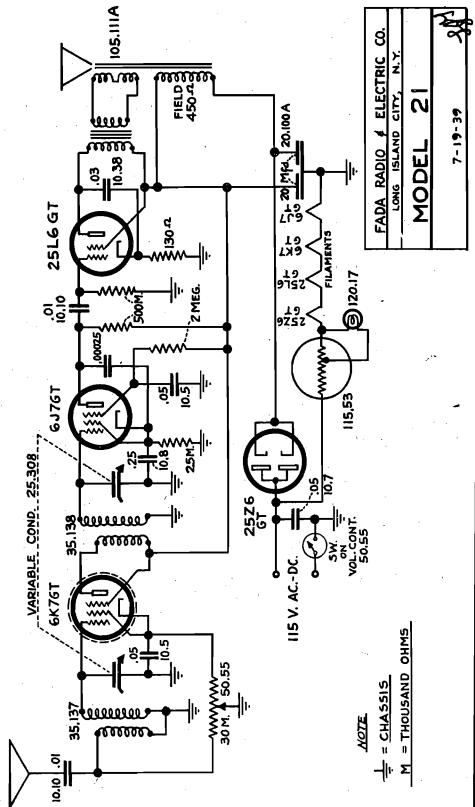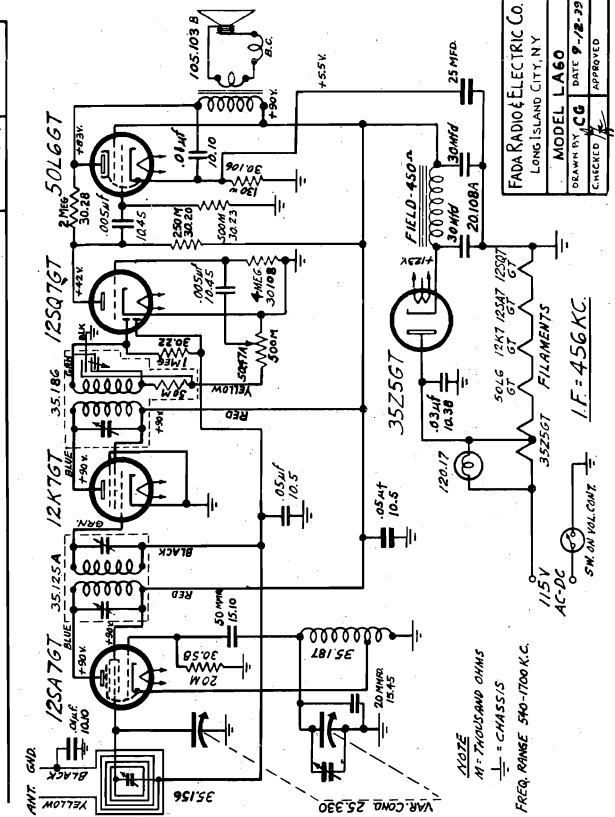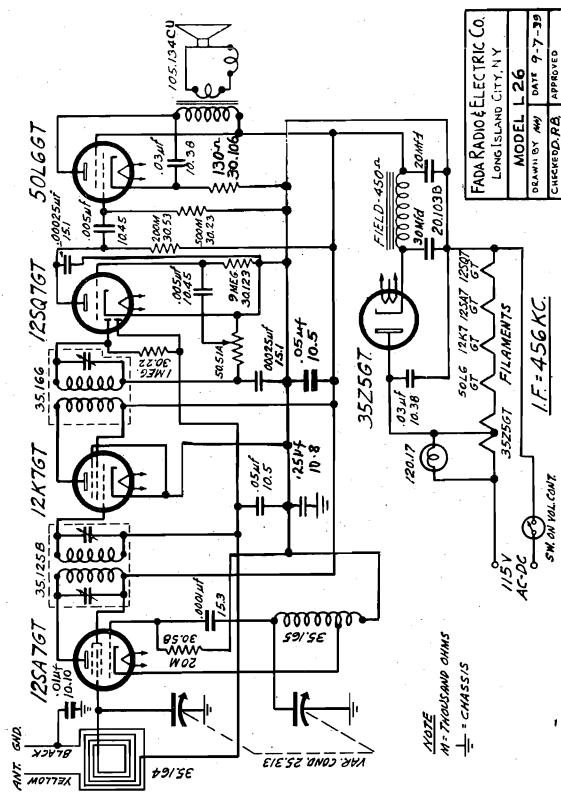





FADA RADIO & ELECTRIC CO. MODELS P49SW, B49SW
MODELS P50, PL50, PUL50
Schematics

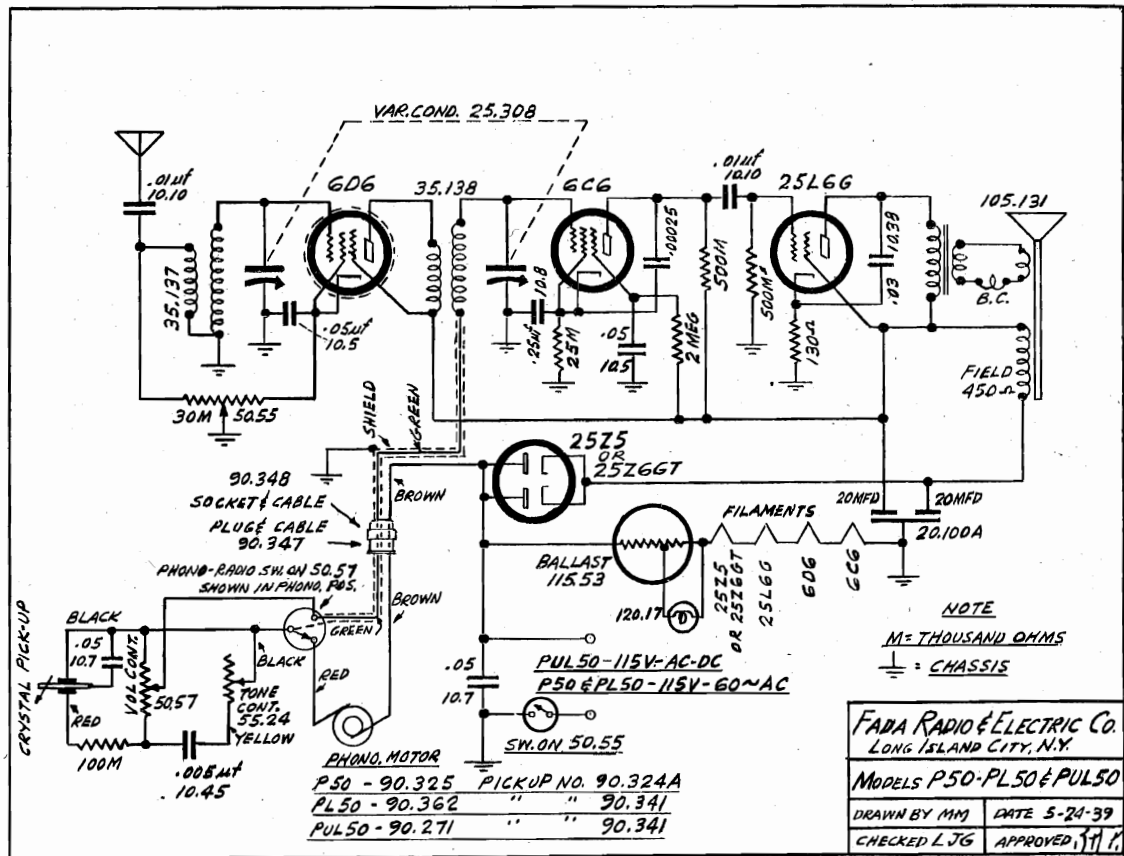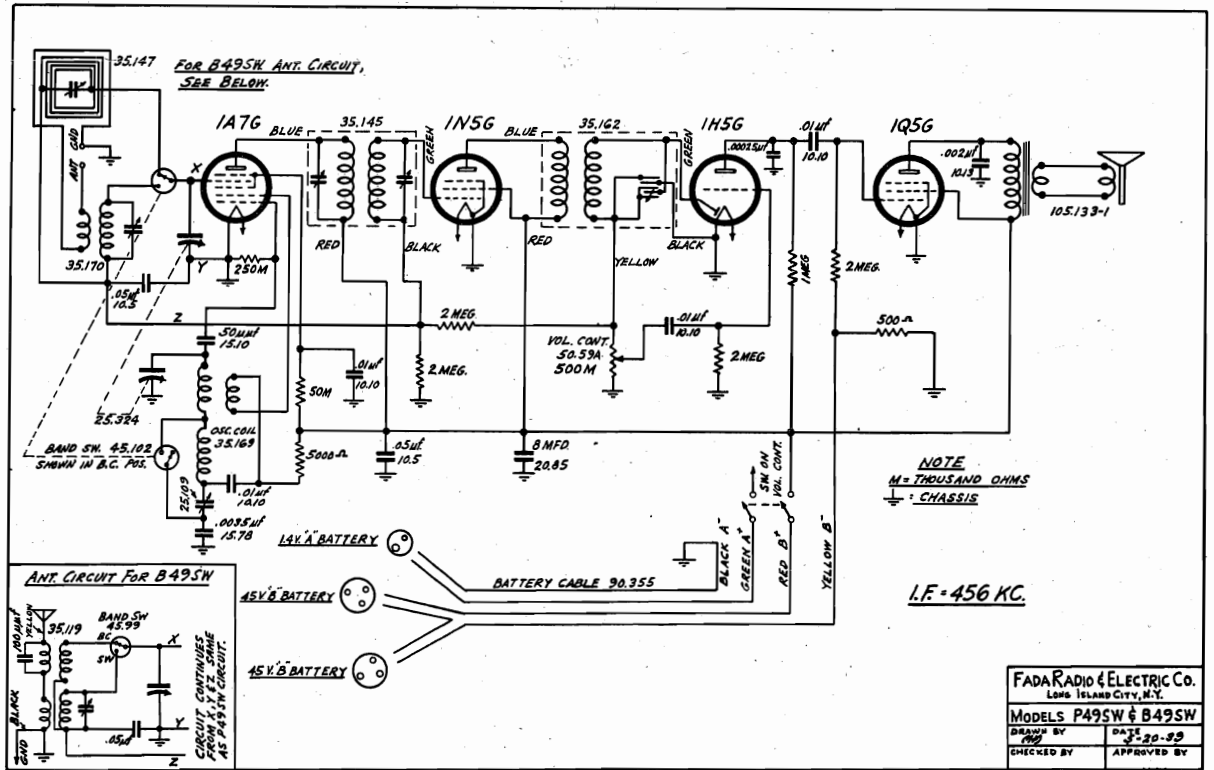

MODELS 52, F52
 MODEL 53
 MODEL F55 Late



FADA RADIO & ELECTRIC CO

MODEL L56
 Schematics

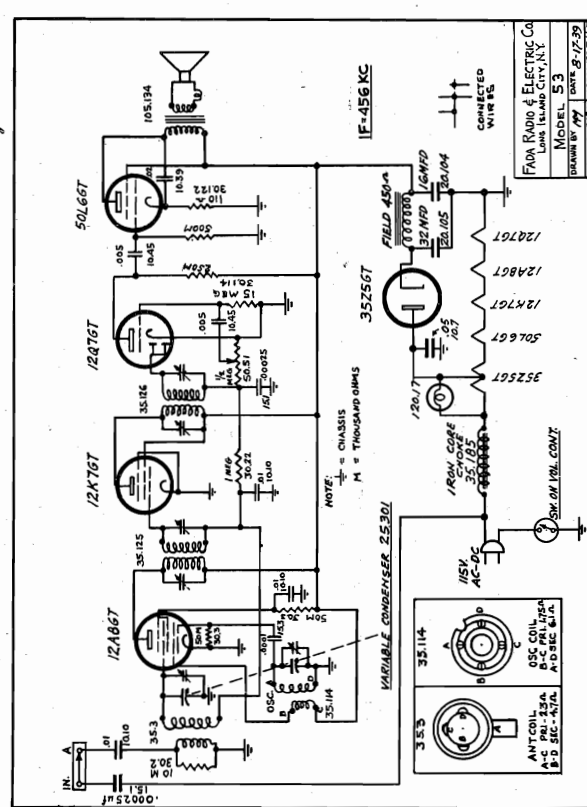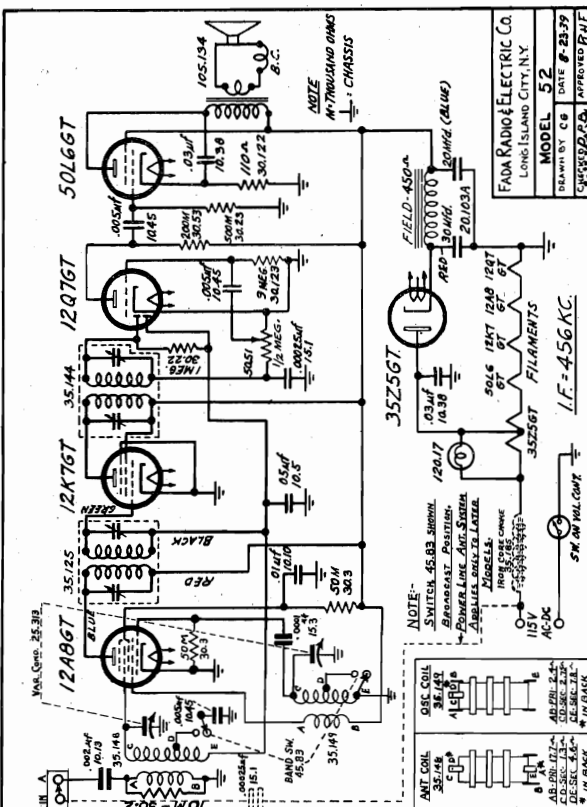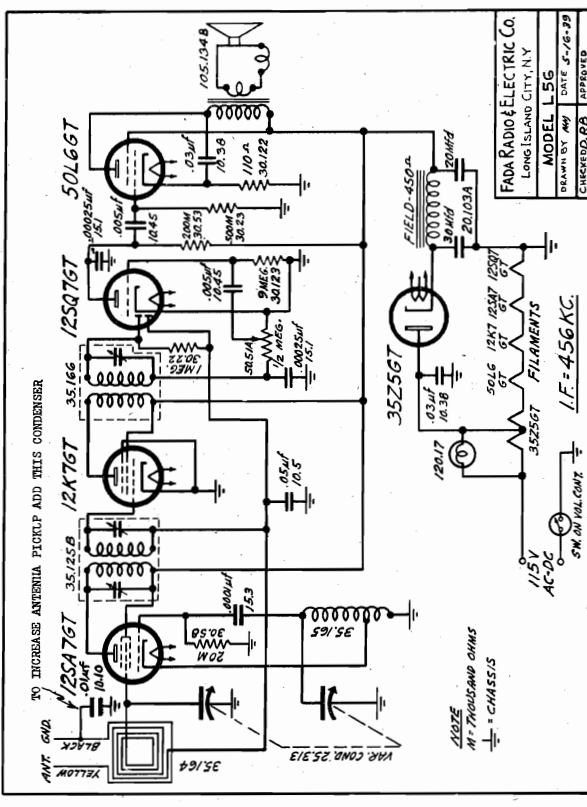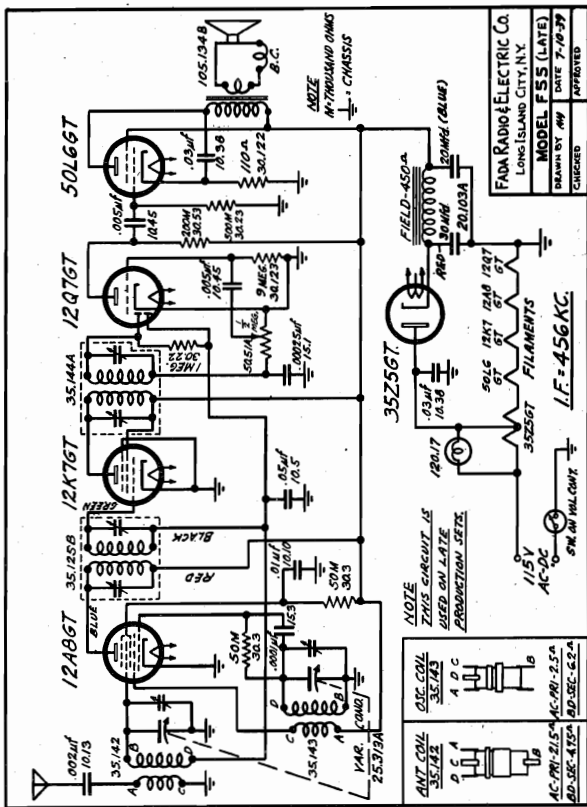



FADA RADIO & ELECTRIC CO

MODEL 57
 MODELS P58, PL58
 Schematics

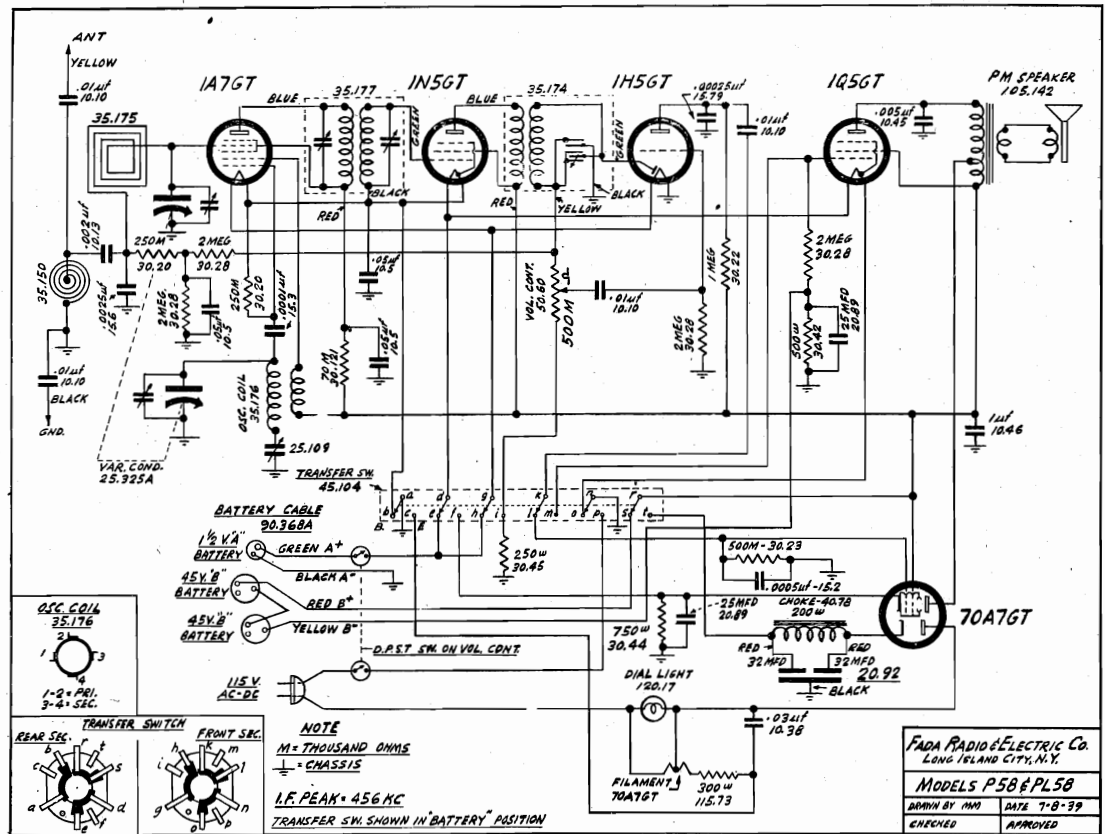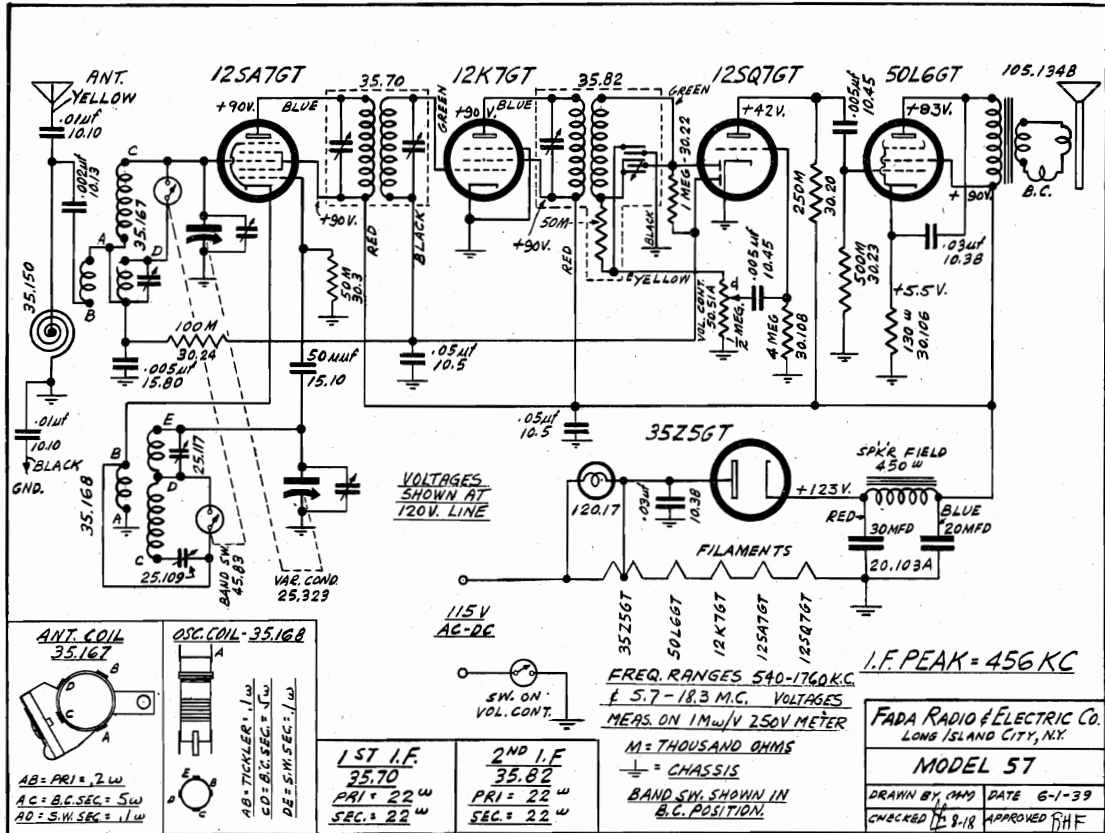


MODEL P60
 MODELS 61,69
 Schematics

FADA RADIO & ELECTRIC CO

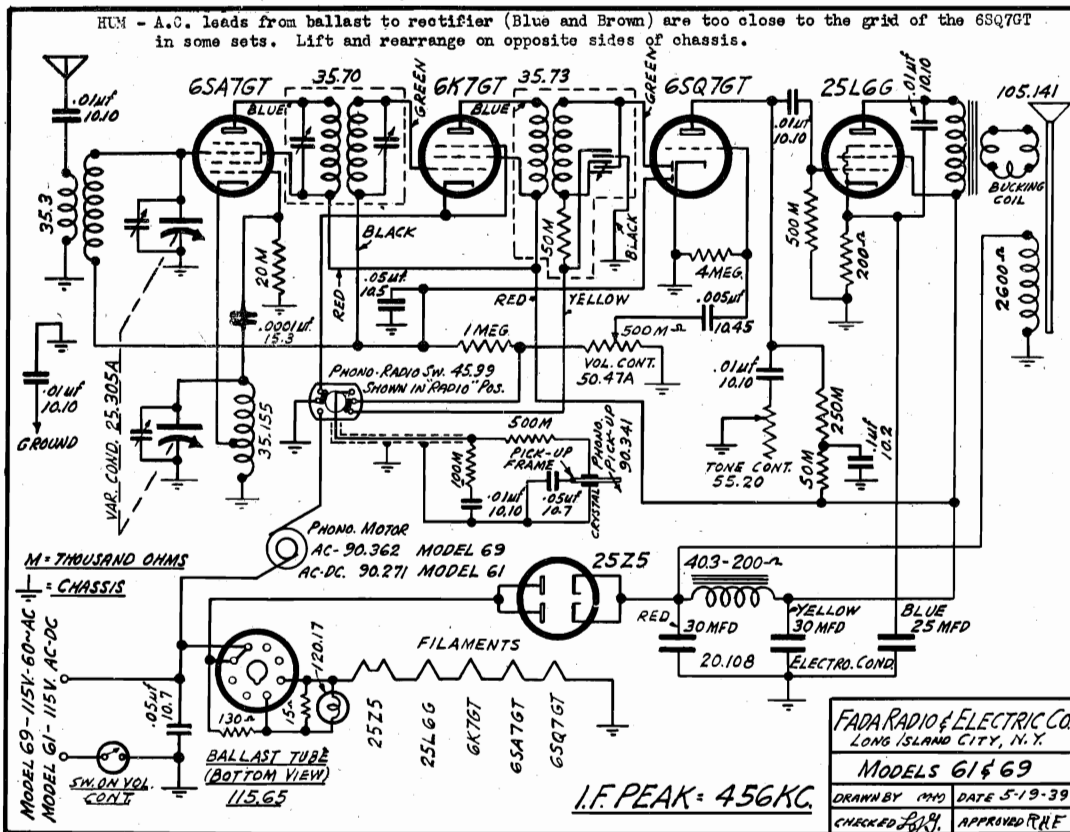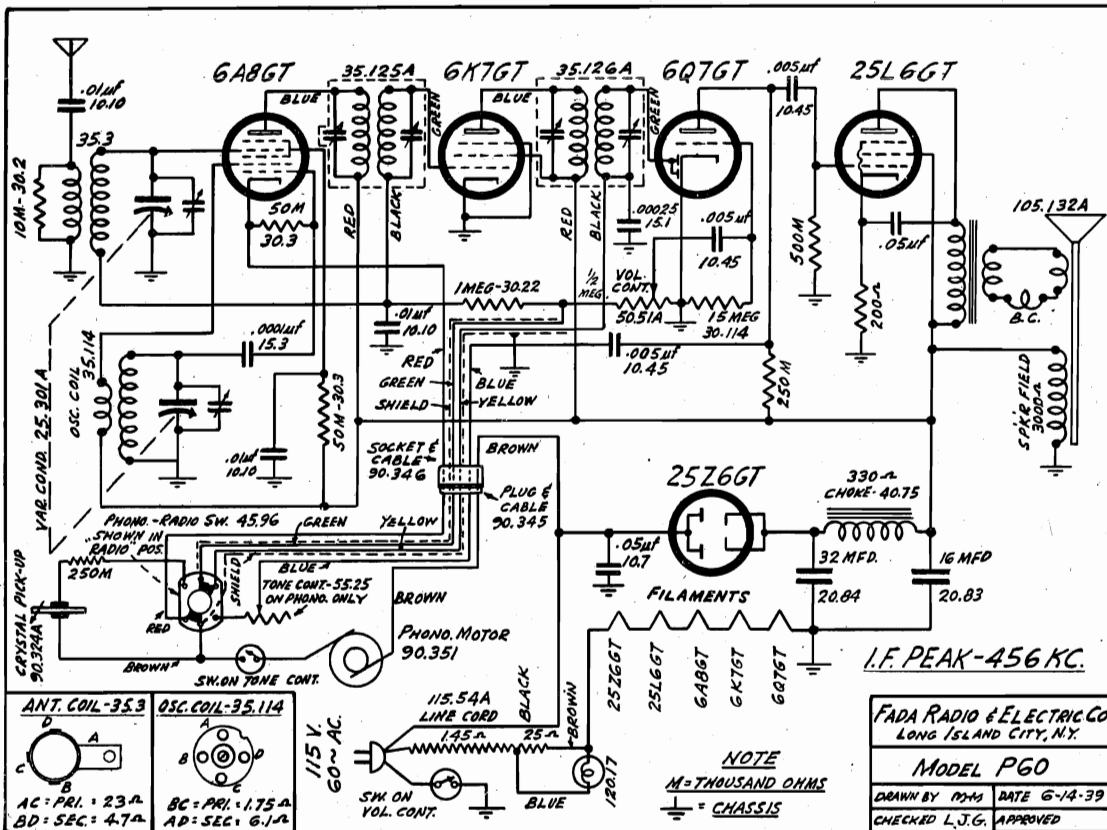

MODEL 63
Schematic
Voltage

FADA RADIO & ELECTRIC CO

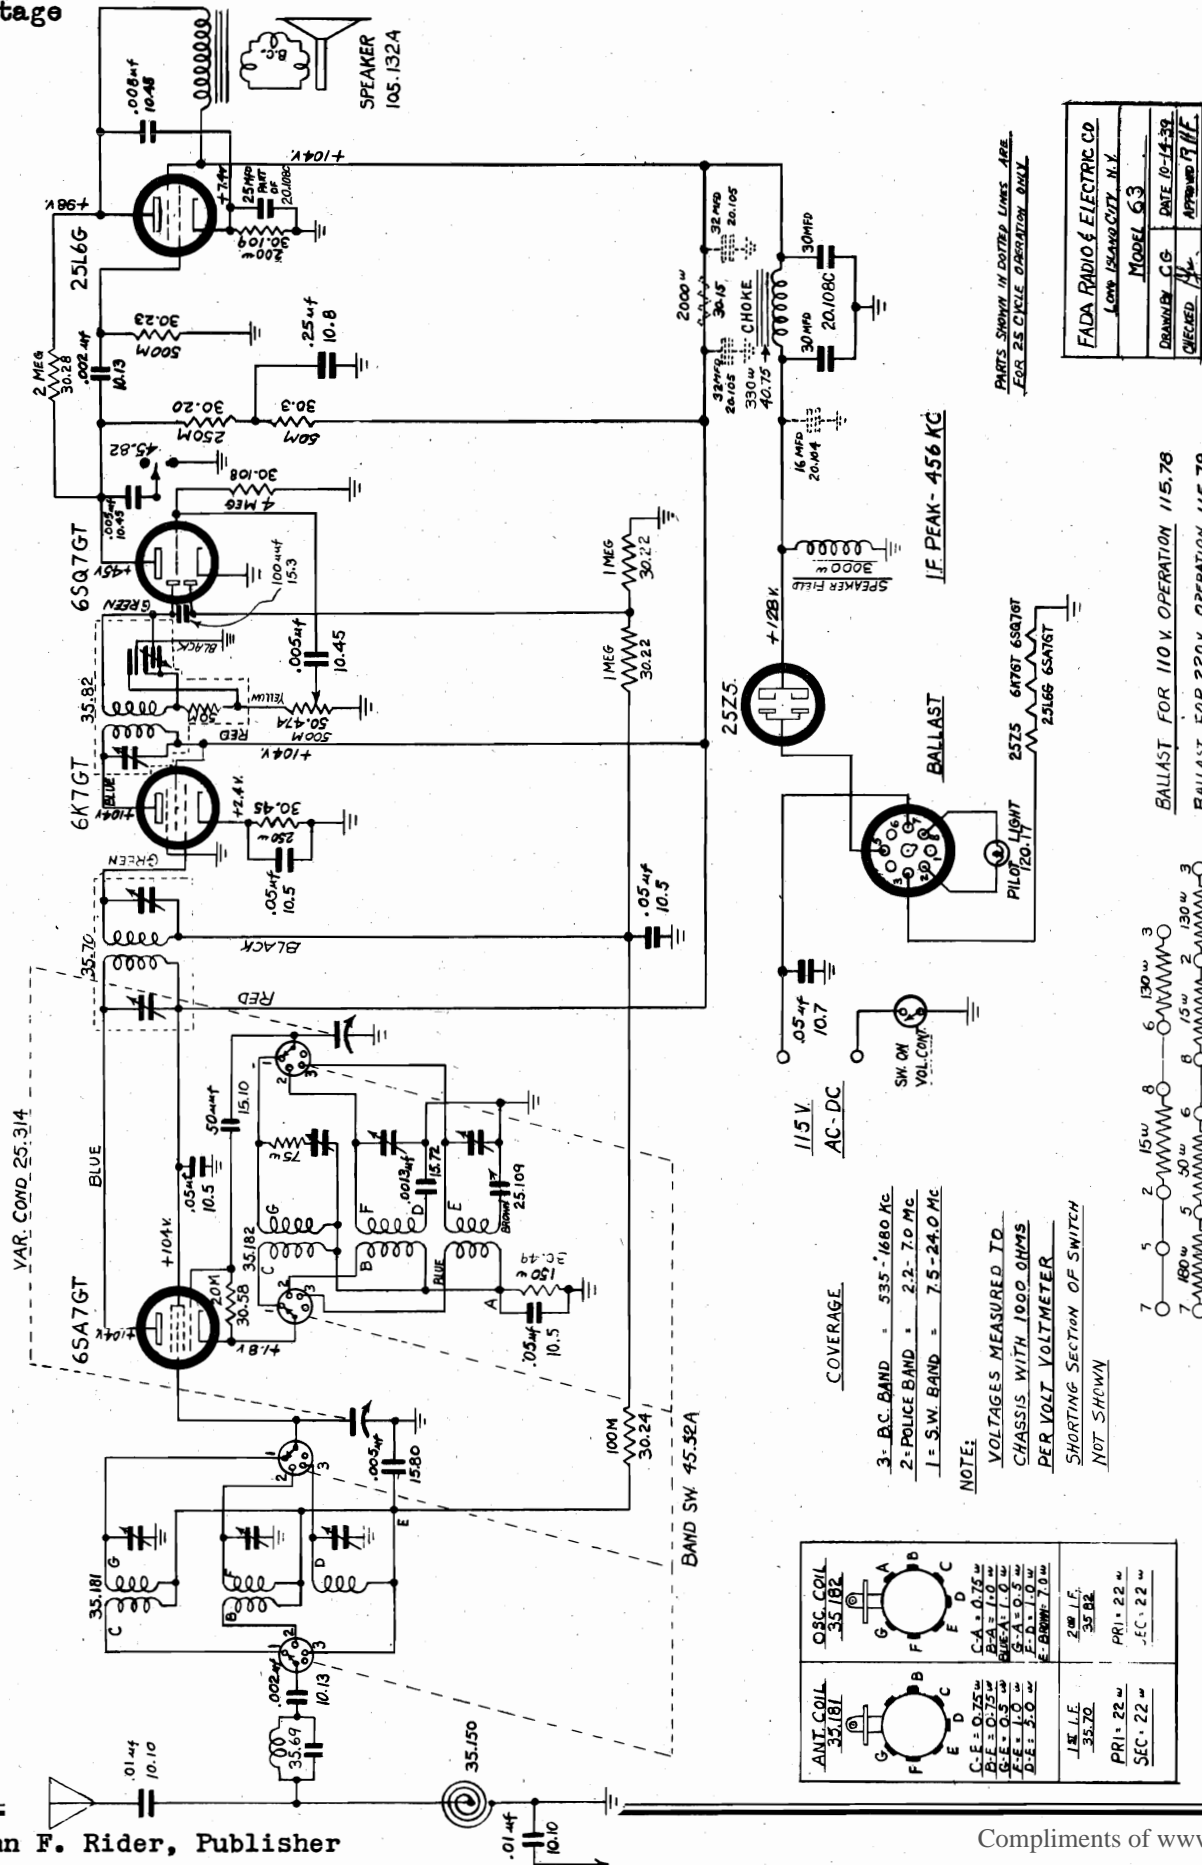

FADA RADIO & ELECTRIC CO
LOW VOLTAGE CUT, N.Y.
MODEL 63
DRAWING C.G. DATE 10-14-39
CHECKED BY APPROVED P.H.E.

PARTS SHOWN IN DOTTED LINES ARE FOR 25 CYCLE OPERATION ONLY

COVERAGE
 3- B.C. BAND = 535-1680 KC
 2- POLICE BAND = 2.2- 7.0 MC
 1- S.W. BAND = 7.5-24.0 MC

NOTE:
 VOLTAGES MEASURED TO CHASSIS WITH 1000 OHMS PER VOLT VOLTMETER
 SHORTING SECTION OF SWITCH NOT SHOWN


ANT. COIL 35.181	OSC. COIL 35.182
A = 0.75W B = 0.75W C = 0.5W D = 1.0W E = 5.0W	A = 0.75W B = 1.0W C = 1.0W D = 0.5W E = 7.0W
100 I.F. 35.70	200 I.F. 35.80
PR. = 22W SEC. = 22W	PR. = 22W SEC. = 22W

BALLAST FOR 110 V. OPERATION 115.78
 BALLAST FOR 220 V. OPERATION 115.79



FADA RADIO & ELECTRIC CO

MODEL 64APC
Schematic
Voltage

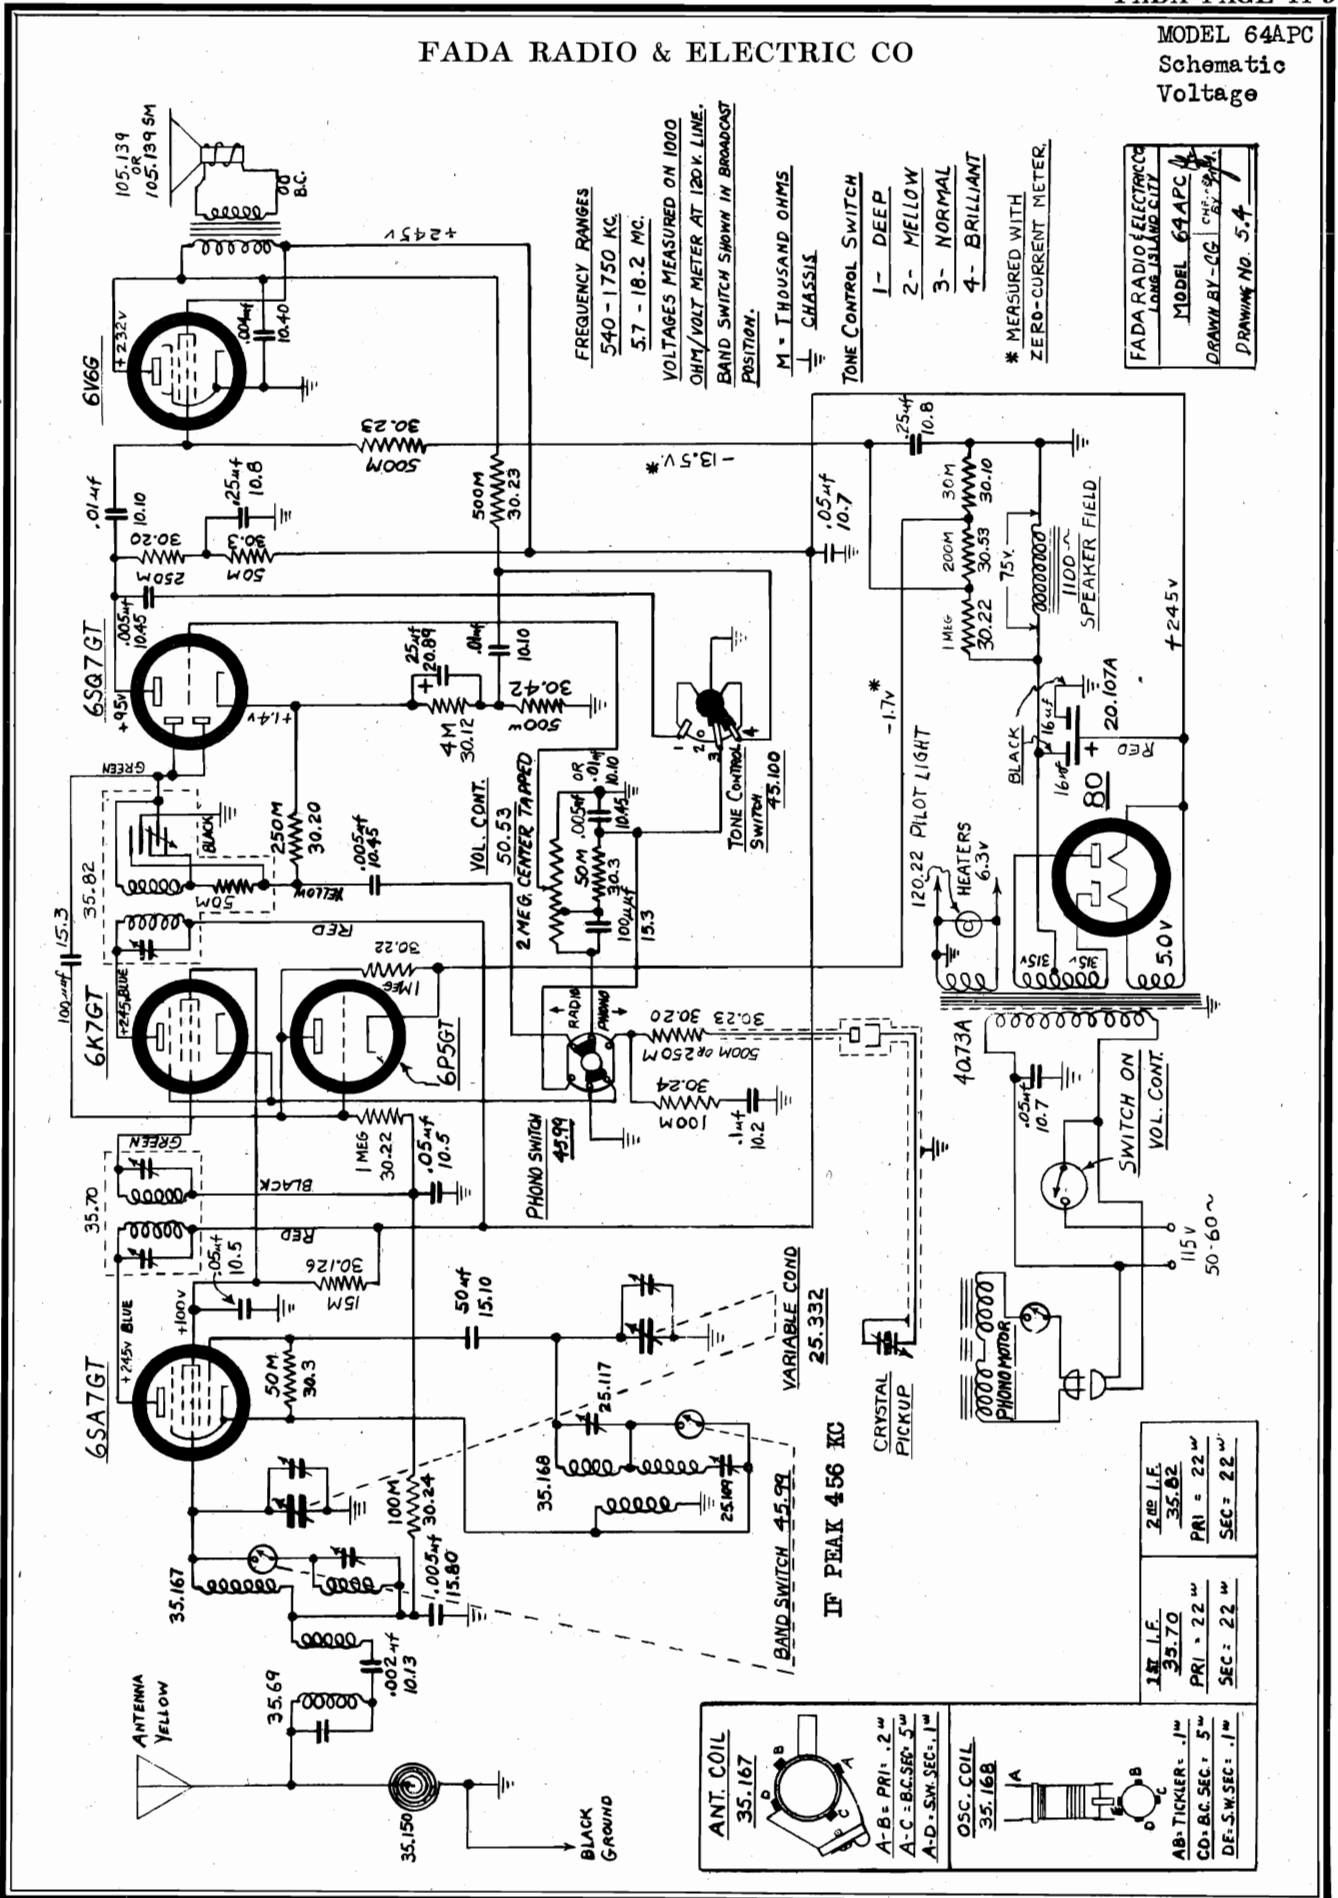

FREQUENCY RANGES
540 - 1750 KC
5.7 - 18.2 MC.

VOLTAGES MEASURED ON 1000
OHM/VOLT METER AT 120V. LINE.
BAND SWITCH SHOWN IN BROADCAST
POSITION.

M = THOUSAND OHMS
⊥ CHASSIS

TONE CONTROL SWITCH
1- DEEP
2- MELLOW
3- NORMAL
4- BRILLIANT

* MEASURED WITH
ZERO-CURRENT METER.

FADA RADIO & ELECTRIC CO LONG ISLAND CITY
MODEL 64APC
DRAWN BY - CG
CHEK. BY - JH
DRAWING NO. 5.4


ANT. COIL 35.167	
A-B = PRI. 2 W	
A-C = B.C. SEC. 5 W	
A-D = SW. SEC. 1 W	

OSC. COIL 35.168	
AB-TICKLER - 1 W	
CO-B.C. SEC. 5 W	
DE-SW. SEC. 1 W	

1ST I.F. 33.70	2ND I.F. 35.02
PRI = 22 W	PRI = 22 W
SEC = 22 W	SEC = 22 W

MODELS L67T, L67C
Schematic, Voltage

FADA RADIO & ELECTRIC CO

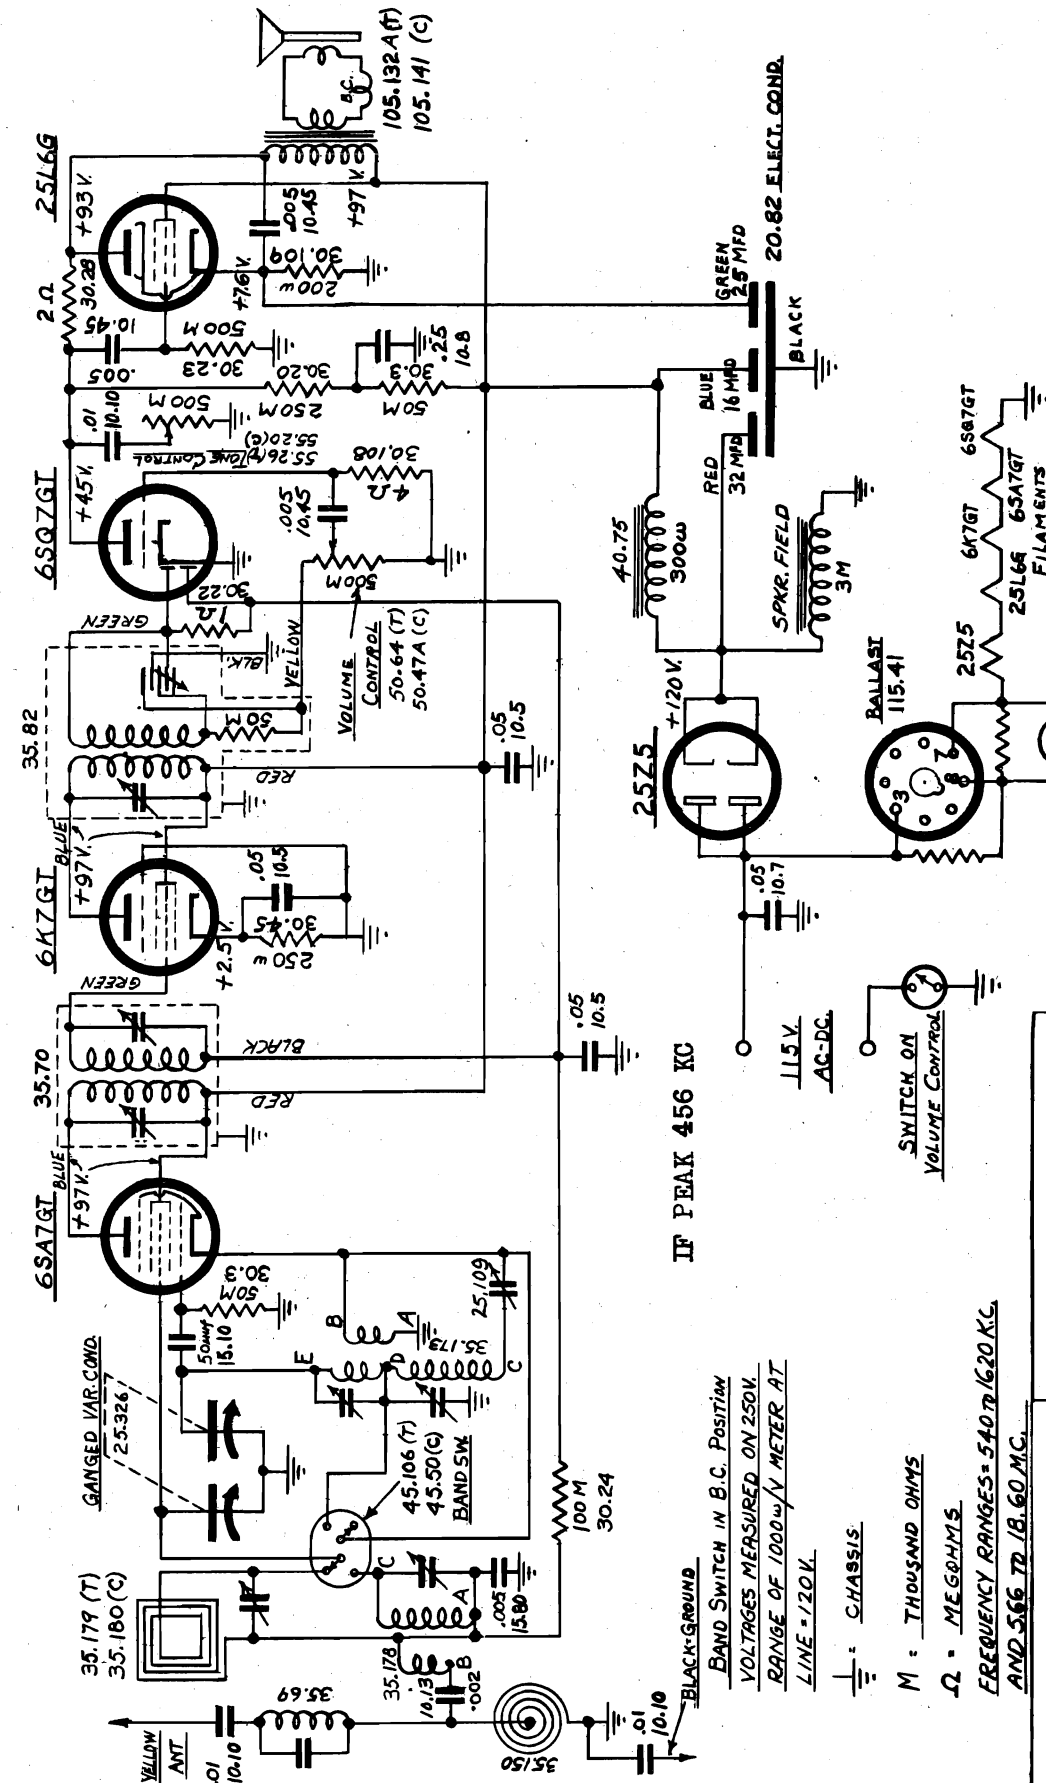

FADA RADIO & ELECTRIC CO
LONG ISLAND CITY, N.Y.
MODEL L67 (T) (C)
DRAWN BY CG DATE 8-18-39
CHECKED BY APPROVED FILE

ANT. COIL 35.178	OSC. COIL 35.173
AB-PRI- AC-SW-SEC	AB-PRI- A C-D-BC-SEC- DE-SW-SEC-
1ST I/F 35.70 PRI- 22w SEC- 22w	2nd I/F 35.82 PRI- 22w SEC- 22w


IF PEAK 456 KC

BAND SWITCH IN B.C. POSITION
VOLTAGES MEASURED ON 250V.
RANGE OF 1000w/V METER AT
LINE = 120V.

⊥ = CHASSIS
M = THOUSAND OHMS
Ω = MEGOHMS
FREQUENCY RANGES = 540 TO 1620 KC.
AND 566 TO 18.60 MC.


FADA RADIO & ELECTRIC CO

MODELS A76T, A76PC
Schematic, Voltage

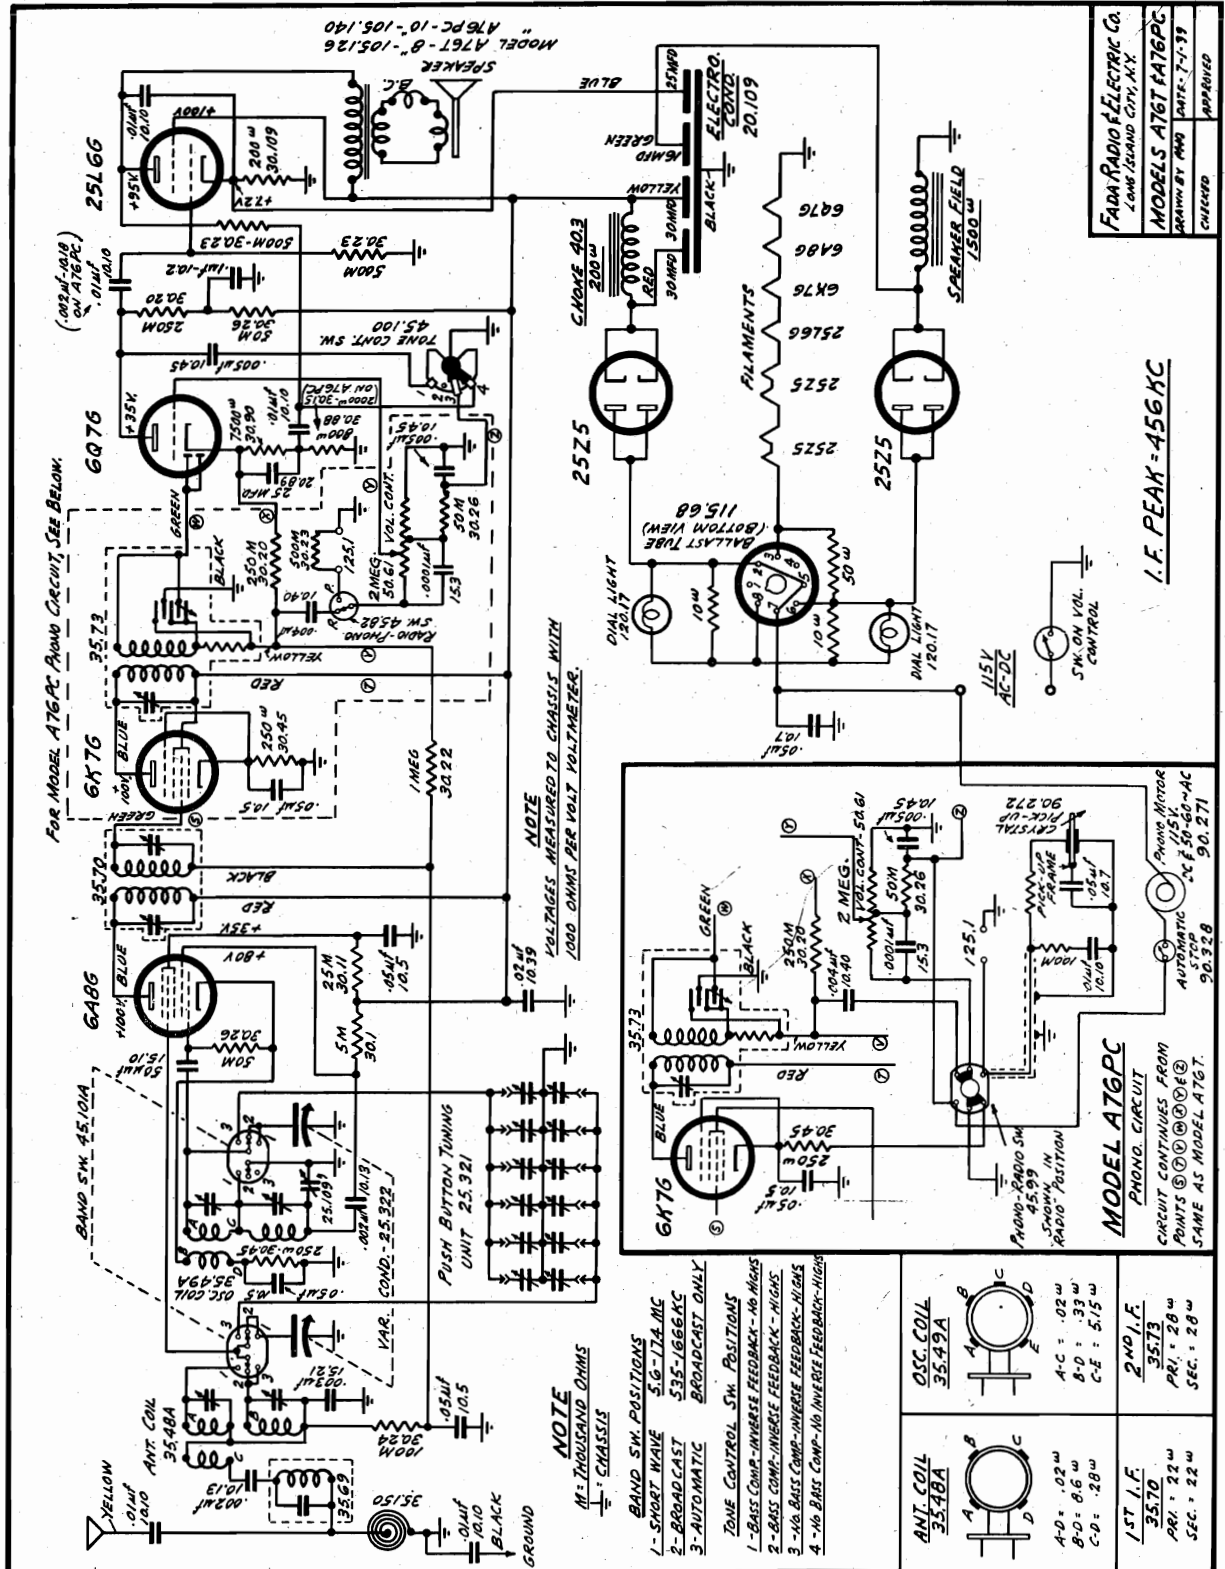

FAIRBANKS, MORSE & CO.

MODEL 9B
Schematic, Trimmers
Socket

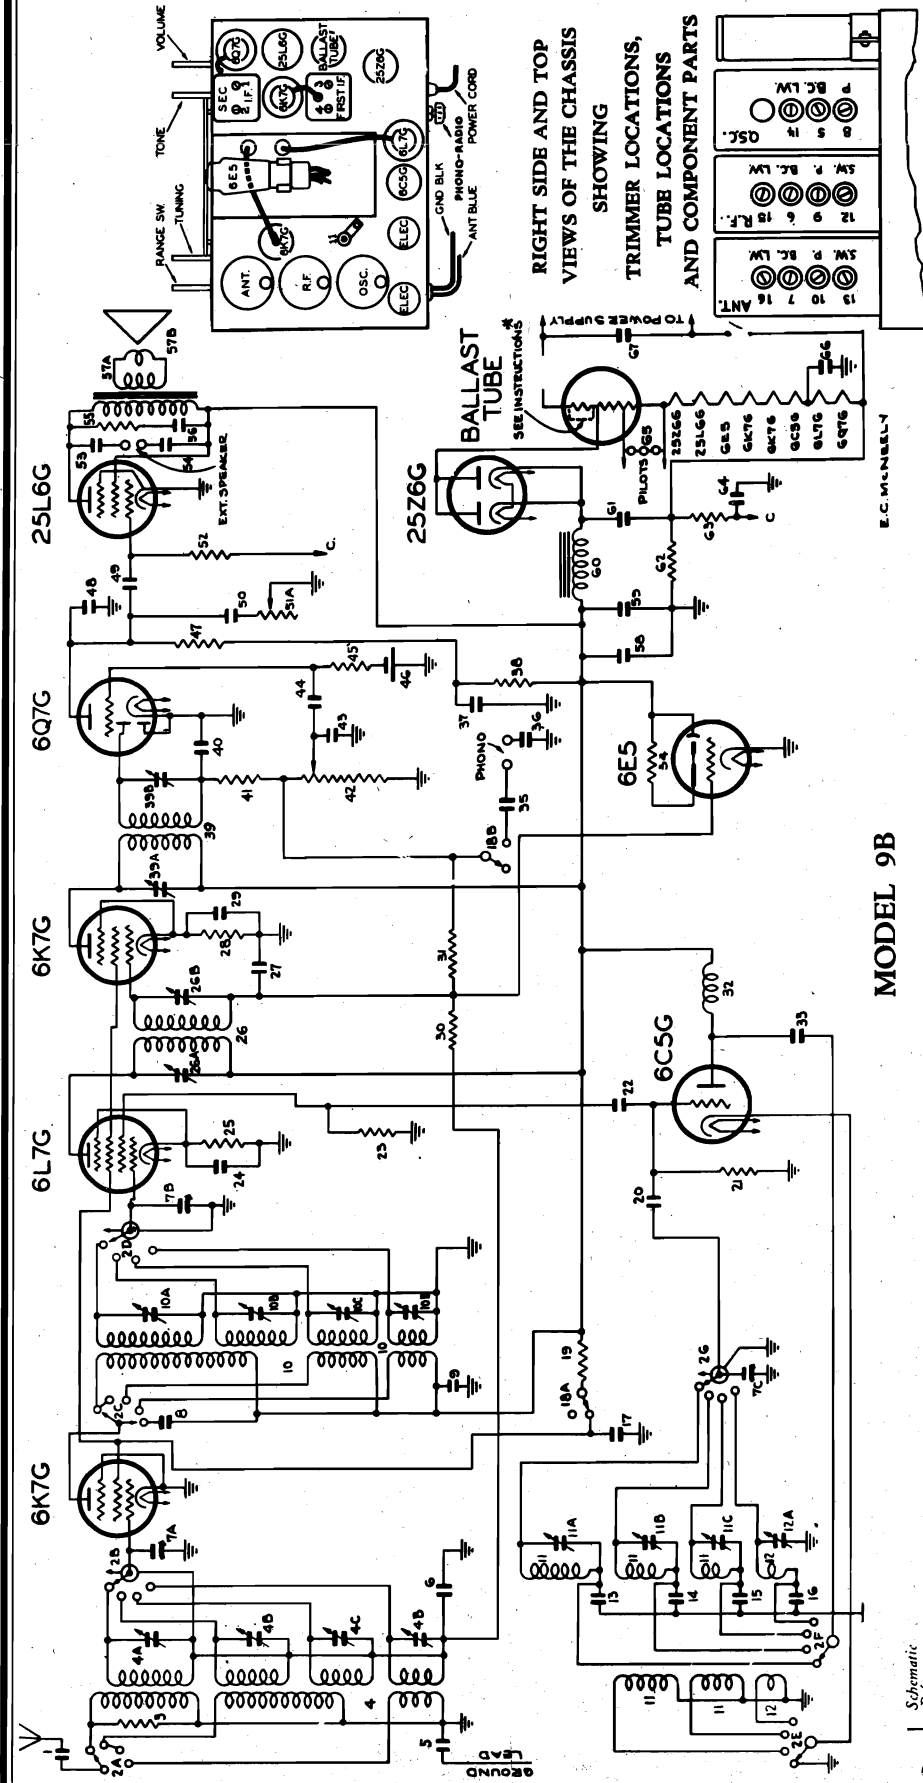

IF PEAK 456 KC

MODEL 9B

ELECTROLYTIC CONDENSER COLOR CODE
(All Other Color Codes Standard R. M. A.)

With the positive (+) or center solder lug toward you, read the colored markings as follows from left to right:

LEFT HAND OR CAPACITY COLOR	SECOND FROM LEFT OR MAXIMUM VOLTAGE COLOR
Black	0 to 99 volts
Brown	99 to 199 volts
Red	199 to 299 volts
Orange	299 to 399 volts
Yellow	399 to 499 volts
Green	499 to 599 volts

If a third (blue) stripe is shown, the condenser is a regulator and should be in the position farthest from the rectifier tube in the filter circuit.

Part Number	Schematic Reference Number	Description
503-8	12	Coil Assembly—HF Oscillator
701-1	12A	Condenser—Tubular Paper .05-200 volt
420-3	61	Condenser—Tubular Paper .1-200 volt
425-4	32	Choke—Oscillator Plate
211-4	61	Condenser—Electrolytic 20 mfd., 150 volt
210-3	59	Condenser—Electrolytic 30 mfd., 150 volt
261-25	16	Condenser—Mica 5700 mmfd., HF Pad
260-5	22	Condenser—Mica 50 mmfd.
260-7	20, 40, 43, 48	Condenser—Mica 100 mmfd.
260-18	8	Condenser—Mica 1000 mmfd.
289-3	15	Condenser—Mica 1000 mmfd. 1535 mmfd.
285-5	17	Condenser—Semi Fixed Padder 503
285-5	17	Condenser—Semi Fixed Padder 296 mmfd.
231-1	64	Condenser—Moulded Paper .01-600 volt
230-15	1	Condenser—Tubular Paper .01-600 volt
230-15	44, 49, 56, 64	Condenser—Tubular Paper .02-600 volt
230-16	50	Condenser—Tubular Paper .03-600 volt
230-39	6, 24, 27,	Condenser—Tubular Paper .05-200 volt
230-21	5, 9, 17, 35,	Condenser—Tubular Paper .1-200 volt
230-27	36, 38, 34	Condenser—Tubular Paper .25-200 volt
203-1	7, B, C	Condenser—Variable Tuning, 3-Gang
340-5	51—A, B	Control—Tone and Power Switch 300,000 ohm

MODEL 9B
Voltage, Alignment
Resistance

FAIRBANKS, MORSE & CO.


OHMS	VOLTS	6K7G R.F.	VOLTS	OHMS	OHMS	VOLTS	6C5G OSCILLATOR	VOLTS	OHMS	OHMS	VOLTS	6L7G	VOLTS	OHMS
4 MEG	85V.DC		0	0	INF	0		-12V.DC	40M	4 MEG	85		-3	43 M
4 MEG	105V.DC		N.C.	N.C.				-12V.DC	40M	4 MEG	105		N.C.	N.C.
102	21V.AC		-.4	1 MEG	4 MEG	105V.DC		21V.AC	101	4 MEG	99		0	6.5
0	0		25V.AC	104	0	17V.AC		0	0	0	0		19AC	100
			0	0				0	0				2.4	330
OHMS	VOLTS	6K7G I.F.	VOLTS	OHMS	OHMS	VOLTS	607G	VOLTS	OHMS	OHMS	VOLTS	25L6G	VOLTS	OHMS
4 MEG	85		1.6	220	0	0		4	1 MEG	4 MEG	110		-7	440M
4 MEG	105		N.C.	N.C.	4 MEG	55		105	4 MEG	4 MEG	105		105	4 MEG
108	23AC		-.6	1 MEG	4 MEG	95		-.6	300000	4 MEG	125		34 AC	117
0	0		29AC	110	0	0		8AC	98	0	0		0	0
			1.6	220				0	0					
OHMS	VOLTS	808-1 BALLAST	VOLTS	OHMS	OHMS	VOLTS	25Z6G	VOLTS	OHMS	OHMS	VOLTS	6E5	VOLTS	OHMS
190	115AC		N.C.	N.C.	4 MEG	125		120AC	190	1 MEG	-.6		110	4 MEG
190	115AC		N.C.	N.C.	189	120AC		110	4 MEG	N.C.	N.C.		0	0
N.C.	N.C.		85AC	137	136	87AC		60AC	121				0	0
N.C.	N.C.		80AC	140	0	0		125	4 MEG	110	34AC		29AC	113

VOLTAGE AND RESISTANCE DATA

No.	Connect Generator To	Signal Generator Setting Freq. Meters	Dummy	Range Switch	Dial Setting Freq. Meters	Stage	Trimmer No.	Peak For	Special Instructions
1	6L7G Grid	456 KC 658	.1 mfd. Condenser	Broadcast	550 KC 550	2nd IF	1	Max.	Note: On all bands—Do not connect low side of signal generator to chassis pan. Connect to black ground lead.
2	6L7G Grid	456 KC 658	.1 mfd. Condenser	Broadcast	550 KC 550	2nd IF	2	Max.	
3	6L7G Grid	456 KC 658	.1 mfd. Condenser	Broadcast	550 KC 550	1st IF	3	Max.	
4	6L7G Grid	456 KC 658	.1 mfd. Condenser	Broadcast	550 KC 550	1st IF	4	Max.	
5	Antenna Lead	350 KC 850	.1 mfd. Condenser	LW-A	350 KC 850	LW Osc.	14	Max. *	*On LW Band—Keep Antenna and speaker leads separated when aligning, to avoid regeneration.
6	Antenna Lead	350 KC 850	.1 mfd. Condenser	LW-A	350 KC 850	LW R.F.	15	Max. *	
7	Antenna Lead	350 KC 850	.1 mfd. Condenser	LW-A	350 KC 850	LW Ant.	16	Max. *	Check Calibration at 175 KC., 1700 Meters.
8	Antenna Lead	1500 KC 200	200 mmfd. Condenser	BC-B	1500 KC 200	BC Osc.	5	Max.	
9	Antenna Lead	1500 KC 200	200 mmfd. Condenser	BC-B	1500 KC 200	BC R.F.	6	Max.	Check Calibration at 600 KC., 500 Meters.
10	Antenna Lead	1500 KC 200	200 mmfd. Condenser	BC-B	1500 KC 200	BC Ant.	7	Max.	
11	Antenna Lead	6.0 MC 50	400 ohm Resistor	Pol.-C	6.0 MC. 50	Police Osc.	8	Max.	**Check for image at 17.1 MC., or 17.5 meters approx. If not received, oscillator is not aligned on fundamental.
12	Antenna Lead	6.0 Mc. 50	400 ohm Resistor	Pol.-C	6.0 MC. 50	Police R.F.	9	Max.	
13	Antenna Lead	6.0 MC. 50	400 ohm Resistor	Pol.-C	6.0 MC. 50	Police Ant.	10	Max.	Check Calibration at 2.5 MC., 120 Meters.
14	Antenna Lead	18 MC 17	400 ohm Resistor	SW-D	18 MC. 17	SW Osc.	11	Max. **	
15	Antenna Lead	18 MC 17	400 ohm Resistor	SW-D	18 MC. 17	SW R.F.	12	Max.	Check Calibration at 7.5 MC., 40 meters.
16	Antenna Lead	18 MC 17	400 ohm Resistor	SW-D	18 MC. 17	SW Ant.	13	Max.	

ALIGNMENT PROCEDURE CHART


MODEL AK-17
 Chassis Cl-3 FARNESWORTH TELEV. & RADIO CORP.
 Schematic, Voltage
 Alignment, Parts
 Resistance

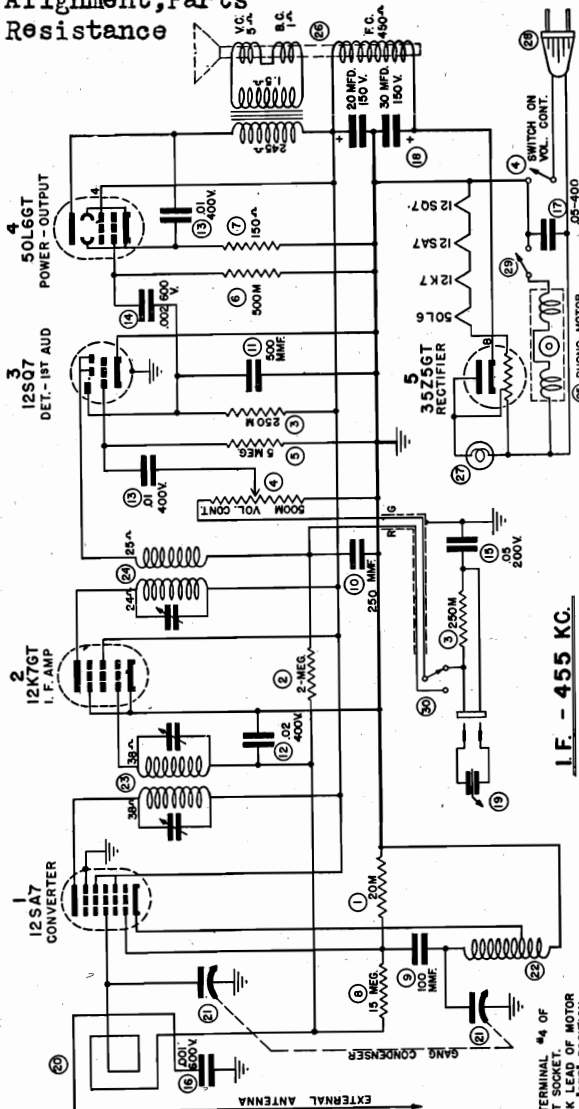

I.F. - 455 KC.
ALIGNMENT
 WATTS 50 VOLTS 105-125 AC
 With the low side of the signal generator connected to the chassis through a .01 mfd. 200 volt condenser, the following procedure should be used when aligning the receiver:

STEPS	Use in Series With Generator	Set Generator at	Set Gang at	Adjust	Located	To obtain
SET VOLUME CONTROL AT MAXIMUM						
1.	.01 mfd. to grid cap of 12K7GT I. F. *	455 Kc.	Minimum	2nd I. F. trimmer (1)	Top of Chassis	MAXIMUM OUTPUT
2.	.01 to high side of loop	1730 Kc.	1400 Kc.	1st I. F. trimmers (2)	End of Chassis	
3.	1000 mmf. to antenna	1400 Kc.	600 Kc.	Oscillator Trimmer	Side of Gang Condenser	
4.		600 Kc.		Antenna Trimmer		
5.				End Plates of Gang		
6.						
7.						

RECHECK ALL ABOVE ADJUSTMENTS
 *Do not remove grid cap.

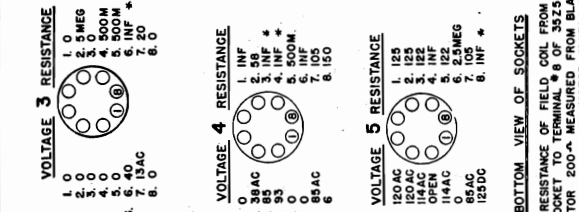


Ref. No.	Part No.	DESCRIPTION
1	773-16	20 M ohm.
2	773-25	2 meg.
3	773-21	250 M ohm
4	782-1	500 M ohm
5	773-27	5 meg.
6	773-23	500 M ohm
7	773-35	150 ohm
8	773-30	15 meg.
9	253-1	100 mmfd. mica
10	253-2	250 mmfd.
11	253-3	500 mmfd.
12	255-3	.02 mfd. 400 V.
13	255-1	.01 mfd. 400 V.
14	254-5	.002 mfd. 600 V.
15	256-1	.05 mfd. 200 V.
16	254-9	.001 mfd. 600 V.
17	255-2	.05 mfd. 400 V.
18	259-1	20 mfd.—30 mfd. 150 V.
19	712-1	Replacement Cartridge
20	388-1	Loop & Shield Assy.
21	266-1	Gang Condenser
22	389-1	Oscillator Coil
23	387-1	1st I. F. Transformer
24	3810-1	2nd I. F. Transformer
25	442-1	Phono Motor
26	8113-1	Speaker Complete
27	421-1	Pilot Lamp
28	2710-1	Line Cord
29	134-2	Automatic Stop Assembly
30	909-1	Phono-radio Switch
	6024-1	Cardboard back
	713-1	Tone Arm
	135-1	Tone Arm Rest
	318-1	Dial Scale
	317-1	Dial Cover
	111-1	Dial Pointer
	595-1	Knob Walnut
	3658-1	Idle Retaining Spring
	1318-1	Phono Idler Pulley
	3657-1	Snap Buttons (for back)
	5658-1	Needle Cup
	3655-1	Needle Screw

FARNESWORTH TELEV. & RADIO CORP.

MODELS AT-20 to AT23


Chassis C5-1
Schematic, Voltage Alignment, Resistance Parts Tuner

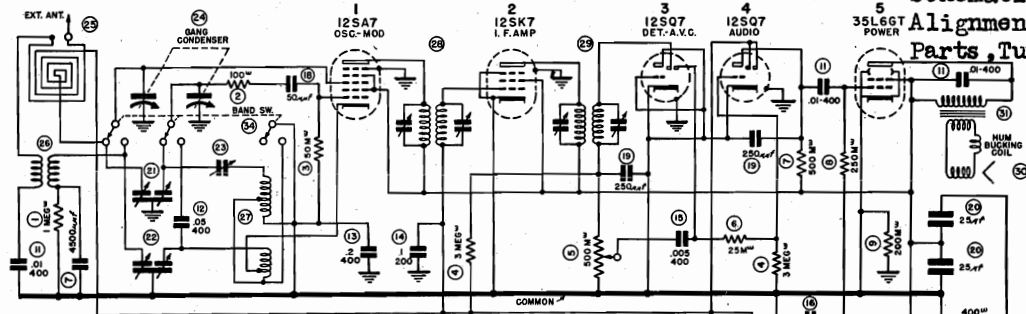

INTERMEDIATE FREQUENCY 455 KC

Ref. No. Part No.

1	771-24	1 meg. ohm	26	3828-1	S.W. Antenna Coil
2	771-34	100 ohm	27	3829-1	Oscillator Coil
3	771-48	50 M ohm	28	3826-1	1st I. F. Transformer
4	771-26	3 meg. ohm	29	3827-1	2nd I. F. Transformer
5	785-1	500 M ohms	30	816-1	Complete Speaker
6	771-16	25 M ohms	32	421-1	Dial Light Mazda No. 47
7	771-23	500 M ohms	34	906-1	Wave Changes Switch
8	771-21	250 M ohms		413-1	Call Letter Kit
9	771-21	200 M ohms		3116-1	Dial Scale
10	771-29	10 meg ohms		921-2	Dial Cord
11	255-1	.01 mfd. 400 V.		1311-1	Dial Pointer
12	255-2	.05 mfd. 400 V.		3117-1	Dial Crystal
13	255-6	.2 mfd. 400 V.		0710-1	Dial Escutcheon
14	256-2	.1 mfd. 200 V.		5647-1	Button Escutcheon
15	255-5	.005 mfd. 400 V.		5914-3	Tuning Knob Beetle W-23
16	256-3	.25 mfd. 200 V.		5914-1	Tuning Knob Red
17	2513-4	4500 mmfd. ± 3%		5914-2	Tuning Knob for Wood Cabinet
18	253-3	50 mmfd.		5915-1	Tuning Button Beetle W-23
19	253-2	250 mmfd.		5915-2	Tuning Button Red
20	2515-1	25 mfd. 200 V.		5916-1	Tuning Button for Wood Cabinet
21	2613-1	Dual Antenna Trimmer		5646-1	Dial Shaft
22	2612-1	Dual Oscillator Trimmer			
23	2614-1	600 Kc. Pac 200—600 mmfd.			
24	2611-1	Gang Condenser			
25	3830-1	Loop Antenna			

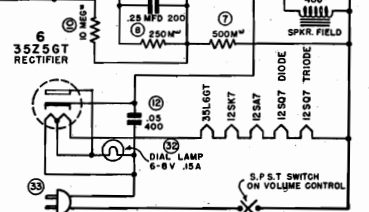

VOLTS 105-125 AC-DC

WATTS 30

VOLTAGE	1	RESISTANCE	VOLTAGE	2	RESISTANCE	VOLTAGE	3	RESISTANCE
1.0	2.38AC	1.200M*	1.0	2.38AC	1.200M*	1.0	1.200M*	1.200M*
2.0	3.100	2.450M*	2.0	3.32	2.450M*	2.0	2.450M*	2.450M*
3.0	4.103	3.1NF*	3.0	4.0	3.1NF*	3.0	3.1NF*	3.1NF*
4.0	5.2	4.50M*	4.0	5.0	4.50M*	4.0	4.50M*	4.50M*
5.0	6.0	5.25MEG*	5.0	6.103	5.25MEG*	5.0	5.25MEG*	5.25MEG*
6.0	7.25AC	6.1NF*	6.0	7.53AC	6.1NF*	6.0	6.1NF*	6.1NF*
7.0	8.0	7.435M*	7.0	8.100	7.435M*	7.0	7.435M*	7.435M*
8.0		8.100	8.0		8.100	8.0	8.100	8.100

VOLTAGE	4	RESISTANCE	VOLTAGE	5	RESISTANCE	VOLTAGE	6	RESISTANCE
1.0	2.0	1.200M*	1.0	2.0	1.200M*	1.0	1.200M*	1.200M*
2.0	3.0	2.450M*	2.0	3.0	2.450M*	2.0	2.450M*	2.450M*
3.0	4.0	3.1NF*	3.0	4.0	3.1NF*	3.0	3.1NF*	3.1NF*
4.0	5.0	4.50M*	4.0	5.0	4.50M*	4.0	4.50M*	4.50M*
5.0	6.35	5.25MEG*	5.0	6.35	5.25MEG*	5.0	5.25MEG*	5.25MEG*
6.0	7.12AC	6.1NF*	6.0	7.12AC	6.1NF*	6.0	6.1NF*	6.1NF*
7.0	8.0	7.435M*	7.0	8.0	7.435M*	7.0	7.435M*	7.435M*
8.0		8.100	8.0		8.100	8.0	8.100	8.100

* - RESISTANCE WILL DEPEND ON CONDITION OF ELECTROLYTIC CONDENSER.
 † - RESISTANCE OF SPEAKER FIELD

BOTTOM VIEW OF SOCKETS

SPEAKER FIELD	VOLTAGE DROP 25V.D.C., RESISTANCE 400"	PRIMARY OF 1ST I.F.	14"
VOICE COIL	125"	SECONDARY - "	14"
HUM BUCKING COIL	4"	PRIMARY - 2ND	14"
	LESS THAN 1"	SECONDARY - "	14"

PUSH BUTTON SET UP

At the right hand end of the top of the cabinet four buttons project. These buttons are set for stations by—

1. Loosen button to be set by unscrewing it about one full turn.
2. Depress button which is to be set up.

3. While holding button down, carefully tune in the station to be set up.

4. Tighten button—detune set and check button by depressing it.

The other three buttons are set up in the same manner.

ALIGNMENT PROCEDURE

To properly align this set an output meter and a signal generator are required. The generator must be calibrated at the following points: 455 Kc., 600 Kc., 1400 Kc., 1600 Kc., 6 Mc., 10 Mc., 15 Mc., and 18.3 Mc.


Always run the output of the signal generator as low as possible and still have accurate readings of the output meter. Connect high side of generator to antenna lead and low side to chassis through .01 condenser.

STEPS	In Series With Antenna	Set Generator at	Set Gang at	Adjust	Located	To obtain
1.	SET VOLUME CONTROL AT MAXIMUM					
2.		455 Kc.		2nd I. F. Trimmers	Front Top of Chassis	MAXIMUM OUTPUT
3.			Minimum	1st I. F. Trimmers	Rear Top of Chassis	
4.	250 mmfd.	1600 Kc.		B. C. Osc. Trimmer	Rear Side	
5.		1400 Kc.	Strongest Sig. & Rock Gang While Adjust. Is Made	B.C. R.F. Trimmer	Osc. is Right hand. R.F. Left Hand Screw	
6.		600 Kc.		B.C. Pad	Top of Chassis	
7.	Recheck	1400 Kc.				
8.		18.3 Mc.	Minimum	S.W. Osc. Trimmer	Bottom of Osc. Coil.	Osc. Trimmer Is Nearest Rear of Chassis
9.	400 ohms No Condenser	15.0 Mc.	Strongest Sig. & Rock Gang	S.W. R.F. Trimmer		
10.	CHECK SIGNAL AT 6 Mc. and 10 Mc.					

MODEL AT-30
Chassis C6-1
Schematic, Voltage

FARNESWORTH TELEV. & RADIO CORP.

Alignment, Parts
Resistance

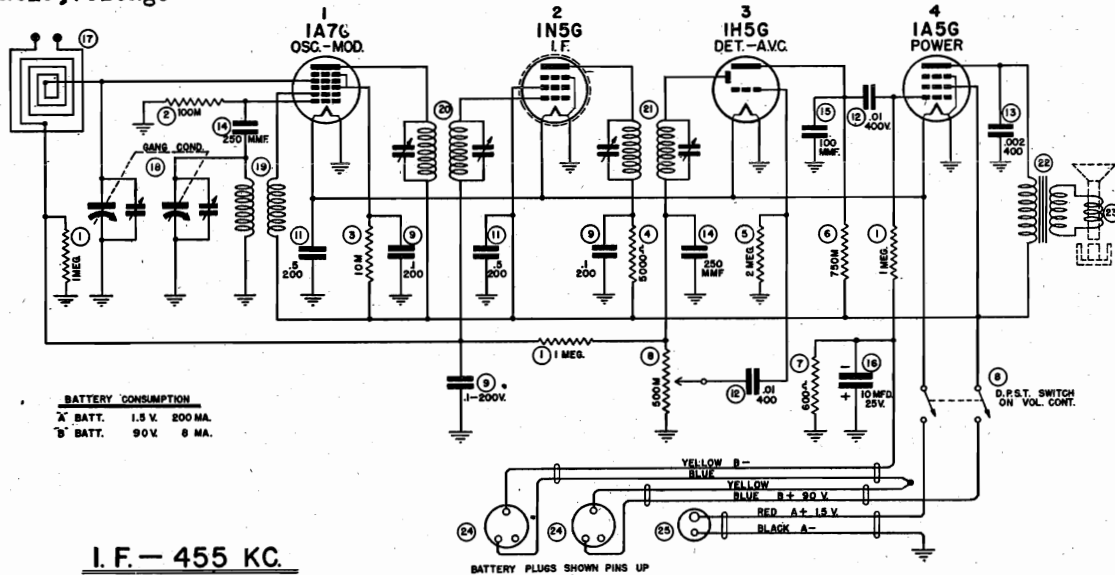

I. F. — 455 KC.

Any combination of one 1½ volt "A" battery and two 45 volt "B" batteries that will fit in the receiver case will be satisfactory. Battery drain is .2 amp., at 1½ volts and 9 ma., at 90 volts.

VOLTAGE	RESISTANCE	VOLTAGE	RESISTANCE	VOLTAGE	RESISTANCE	VOLTAGE	RESISTANCE
1. 0	1. 1 MEG	1. OPEN	1. INF.	1. 0	1. 1 MEG	1. 75	1. INF.
2. 0	2. 0	2. 1.5	2. 1.5^A	2. 1.5	2. 1.5^A	2. 1.5	2. 1.5^A
3. 65	3. INF.	3. 75	3. INF.	3. 25	3. 25	3. 80	3. INF.
4. 65	4. INF.	4. 80	4. INF.	4. OPEN	4. INF.	4. 82	4. INF.
5. 3.7	5. 100M	5. 80	5. INF.	5. 0	5. 500M	5. 82	5. 1 MEG
6. 80	6. INF.	6. OPEN	6. INF.	6. 0	6. INF.	6. 82	6. 500^A
7. 1.5	7. 1.5^A	7. 0	7. 0	7. 0	7. 0	7. 0	7. 0
8. 0	8. 8^A	8. CAP. 0	8. 500^A	8. 0	8. 500M	8. 40	8. 40
CAP. 0	1 MEG		1 MEG			CAP. 0	2 MEG

BOTTOM VIEW OF SOCKETS

*DEPENDS ON SENSITIVITY OF METER.
RESISTANCE MEASUREMENTS MADE WITH BATTERIES DISCONNECTED.
VOLTAGE & RESISTANCE MEASURED TO GROUND WITH A 1000^ PER VOLT VOLTMETER.

Ref. No.	Part No.	Description	Quantity	Part No.	Description	Quantity
		Resistors	16		Electrolytic Condensers	
1	771-24	1 meg	17	2518-1	10 mfd. 25 V.	
2	771-19	100 M	18	3839-1	Miscellaneous	
3	771-44	10 M	19	2617-1	Loop Antenna	
4	771-13	5 M	20	3840-1	Gang Condensers	
5	771-25	2 meg	21	3841-1	Oscillator Coil	
6	771-91	750 M	22	3842-1	1st I. F. Transformer	
7	771-38	600 ohms	23	9412-1	2nd I. F. Transformer	
8	788-1	500 M Volume Control	24	817-1	Output Transformer	
		Tubular Condensers & Switch	25	8016-1	Speaker	
9	256-2	.1 mfd. 200 V.		8019-1	3 Prong Battery Plug	
11	256-5	.5 mfd. 200 V.		3130-1	2 Prong Battery Plug	
12	255-1	.01 mfd. 400 V.		3129-1	Dial Crystal	
13	255-4	.002 mfd. 400 V.		5657-1	Dial Scale	
		Mica Condensers		9210-1	Dial Pointer	
14	253-2	250 mmfd.		5917-2	Dial Drive Cable	
15	253-1	100 mmfd.		5920-1	Knob Marked "Tuning"	
				644-1	Knob Marked "Off-Volume"	
					Dial Cord Spring	

ALIGNMENT

To properly align this receiver, a signal generator calibrated at 455 Kc., 1400 Kc., and 1730 Kc., is required. After aligning the I. F. stages, replace receiver in cabinet and FASTEN LOOP IN NORMAL POSITION before aligning the R. F. end through the openings in the end of the cabinet. These openings are closed by snap fasteners. The oscillator trimmer is nearest the front panel and the loop trimmer is directly behind it.


STEPS	Use in Series With Generator	Set Generator at	Set Gang at	Adjust	Located	To obtain
1.	.02 mfd. to Chassis Connect high side of Generator to grid cap of 1A7G tube.	455 Kc.	Quiet Point	2nd I. F. Trimmers 1st I. F. Trimmers	Top of I. F. Trans.	MAXIMUM OUTPUT
2.	Loop**	1730 Kc.	1730 Kc.	Oscillator Trimmer*	See Note Below	
3.	Loop**	1400 Kc.	1400 Kc. and Rock Gang	Loop Trimmer*		

*See preceding paragraph for location of trimmers.

**Loop to consist of five to ten turns of insulated wire wound on a three to four inch form to be closely coupled to the loop antenna in the receiver.

FARNESWORTH TELEV. & RADIO CORP.

MODEL AT-31
Chassis C7-1
Schematic, Voltage
Alignment, Parts
Resistance

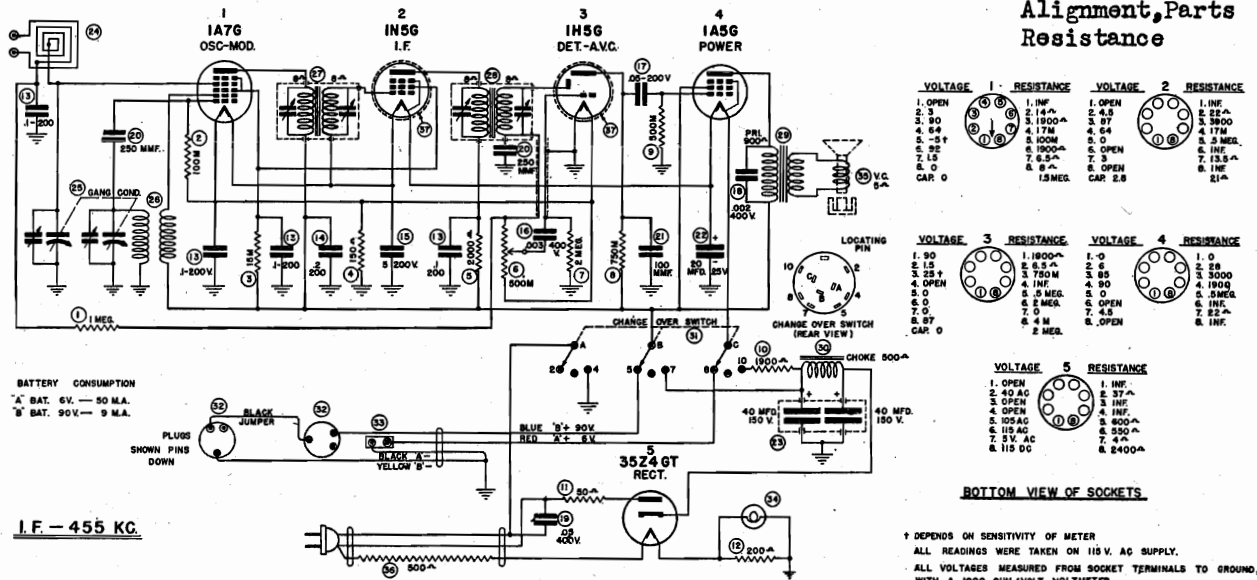

Ref. No.	Part No.	WATTS 30	VOLTS 105-125 AC-DC
1	771-24	1 meg.....	23
2	773-19	100 M ohm.....	24
3	771-45	15 M ohm.....	25
4	771-50	150 ohm.....	26
5	771-41	2 M ohm.....	27
6	786-1	500 M ohm volume control	28
7	771-25	2 meg.....	29
8	771-91	750 M ohm.....	30
9	771-23	500 M ohm.....	31
10	779-1	1900 ohm candohm.....	32
11	771-32	50 ohm.....	33
12	778-1	200 ohm flexible.....	34
13	256-2	.1 200 V.....	35
14	256-4	.2 200 V.....	36
15	256-5	.5 200 V.....	
16	254-3	.003 400.....	
17	256-1	.05 200.....	
18	255-4	.002 400.....	
19	255-2	.05 400.....	
20	253-2	250 mmfd. Mica.....	
21	253-1	100 mmfd. Mica.....	
22	2517-1	20 mfd. 25 V.....	

Ref. No.	Part No.	RESISTANCE
1	OPEN	1. INF
2	3	2. 14K
3	30	3. 80
4	54	4. 17M
5	51	5. 100M
6	32	6. 100K
7	15	7. 5K
8	0	8. 8K
9	0	9. OPEN
10	0	10. OPEN
11	0	11. 1.5MEG
12	0	12. CAR 2.8
13	0	13. 21K

Ref. No.	Part No.	RESISTANCE
1	0	1. 0
2	15	2. 15
3	25	3. 25
4	OPEN	4. OPEN
5	0	5. 0
6	0	6. 0
7	0	7. 0
8	0	8. 0
9	0	9. 0
10	0	10. 0
11	0	11. 0
12	0	12. 0

Ref. No.	Part No.	RESISTANCE
1	OPEN	1. INF
2	40 AC	2. 40 AC
3	OPEN	3. INF
4	OPEN	4. INF
5	105 AC	5. 105 AC
6	110 AC	6. 110 AC
7	5 V. AC	7. 5 V. AC
8	115 DC	8. 115 DC

WHEN INSTALLING BATTERIES

1. Remove corner brackets. These lift out readily.
2. Put "B" battery against left wall of cabinet. Push against front panel, then slide as far to right as possible against wooden block. Insert other "B" battery in space just vacated.
3. If batteries stick, opening bottom door will facilitate installation.

ALIGNMENT

A signal generator calibrated at 455 Kc., 1400 Kc., and 1730 Kc., is necessary to properly align this receiver. After aligning the I. F. stages, replace receiver in cabinet and fasten loop in normal position before aligning the R. F. end through the openings in the end of the cabinet. These openings are closed by snap fasteners. The oscillator trimmer is nearest the front panel and the loop trimmer is directly behind it.


STEPS	Use in Series with Generator	Set Generator at	Set Gang at	Adjust	Located	To obtain
1.	.02MFD in each lead Connect high side of generator to grid cap of 1A7G tube	455 Kc.	Quiet Point	2nd I. F. Trimmers 1st I. F. Trimmers	Top of I. F. Trans.	MAXIMUM OUTPUT
2.	Loop**	1730 Kc.	Minimum	Oscillator Trimmer*	See Note Below	
3.	Loop**	1400 Kc.	1400 Kc. & Rock Gang	Loop Trimmer*		

*See preceding paragraph for location of trimmers.
**Loop to consist of five to ten turns of insulated wire wound on a three to four inch form to be closely coupled to the loop antenna in the receiver.

Schematic, Voltage Resistance

FARNESWORTH TELEVISION & RADIO CORP

MODELS ATL50, -52
Chassis C2-1
ATL51, Chassis C2-2
ATL55, -56, Ch. C2-3
ATL58, -59, Ch. C2-4

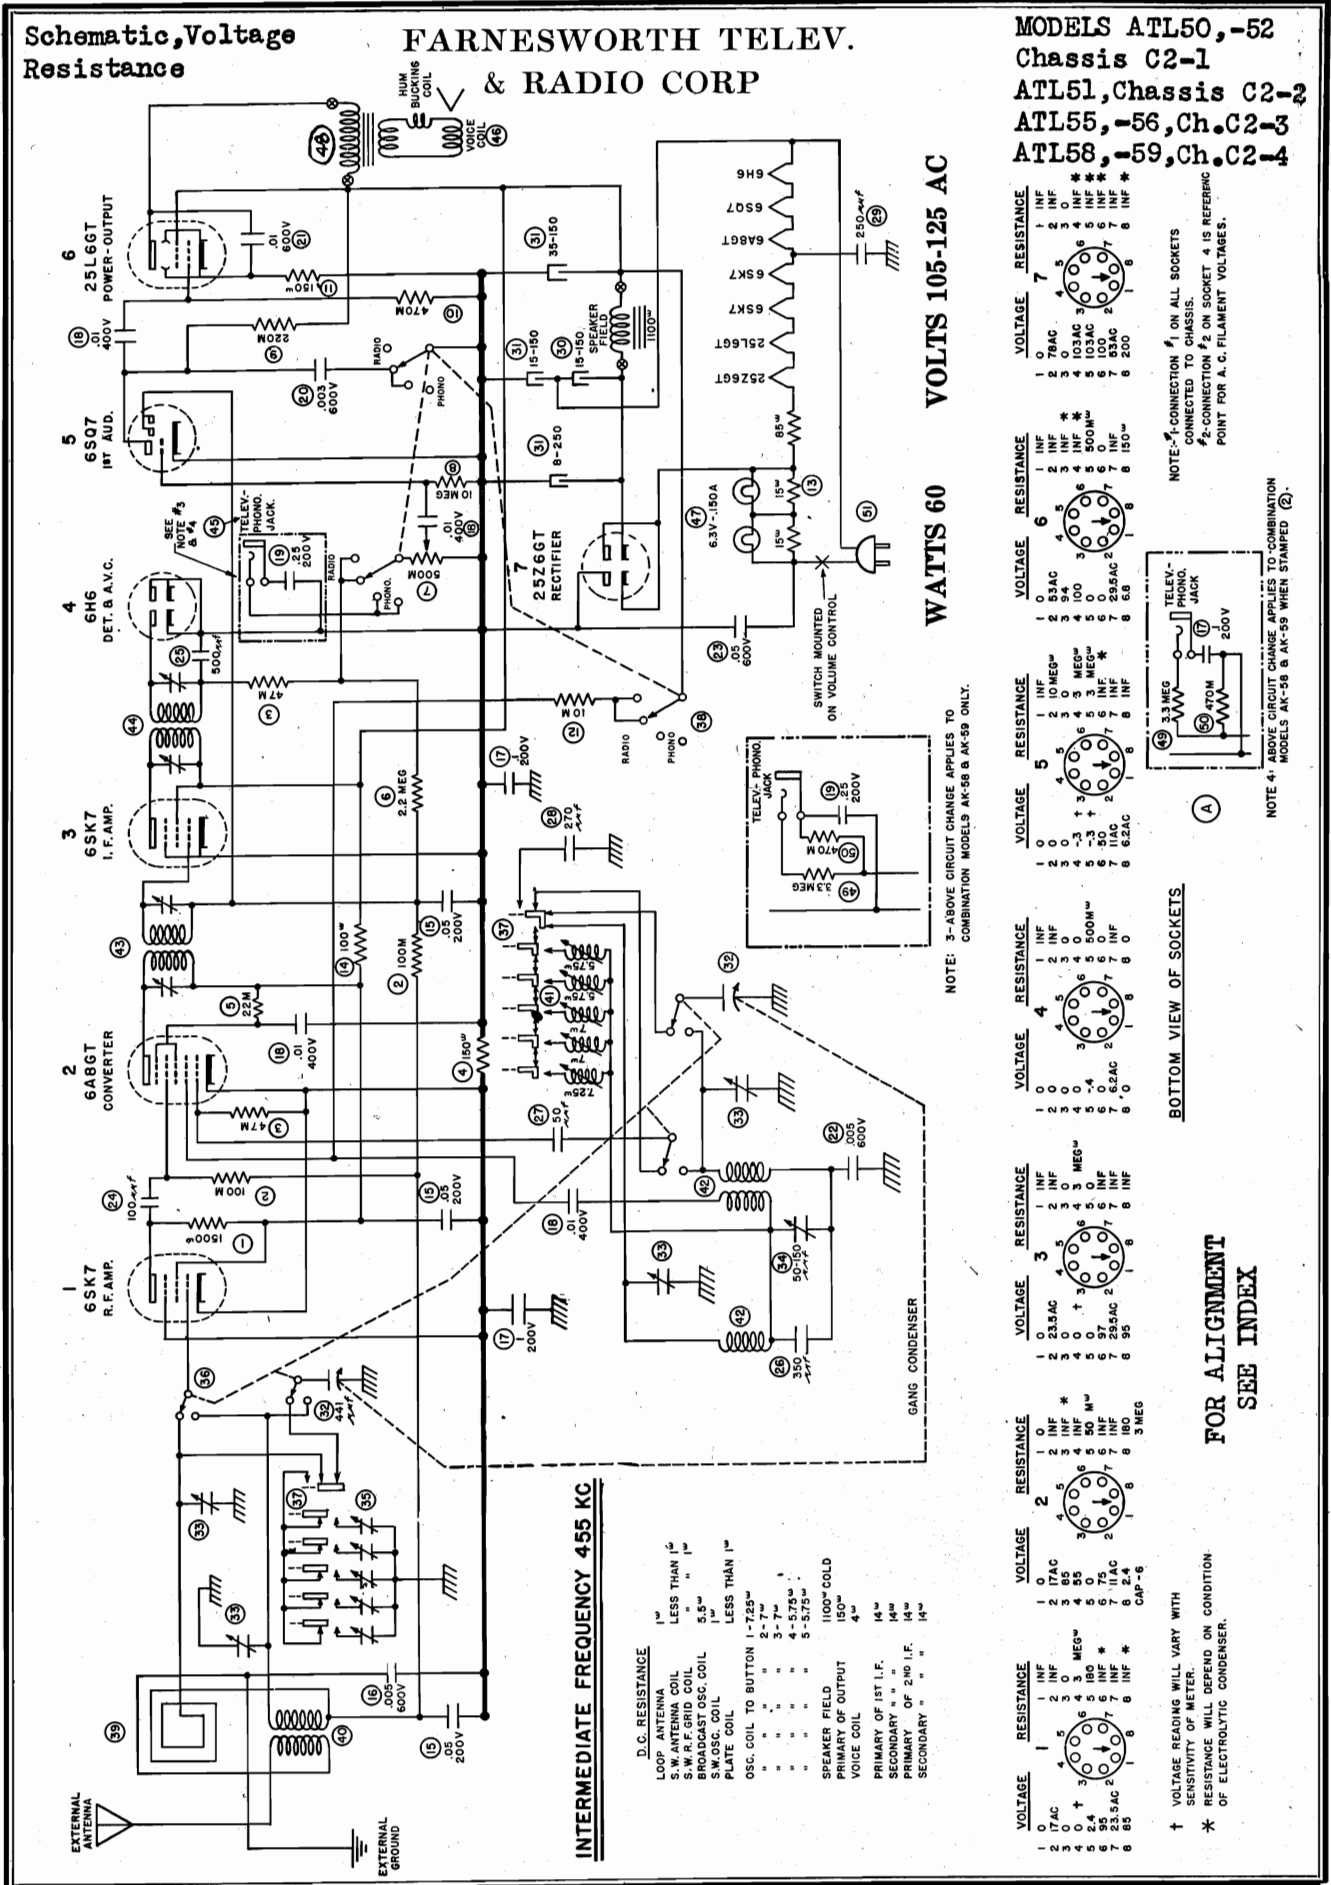


WATTS 60 VOLTS 105-125 AC

INTERMEDIATE FREQUENCY 455 KC

- D.C. RESISTANCE
- 1" LOOP ANTENNA
- 1" S.W. ANTENNA COIL
- 1" S.W. R.F. GRID COIL
- 1" BRIDGEMAN OSC. COIL
- 1" OSC. COIL
- 1" PLATE COIL
- 1" OSC. COIL TO BOTTOM
- 1" SPEAKER FIELD
- 1" PRIMARY OF OUTPUT VOICE COIL
- 1" PRIMARY OF 1ST I.F.
- 1" SECONDARY OF 2ND I.F.
- 1" SECONDARY

VOLTAGE	RESISTANCE	VOLTAGE	RESISTANCE	VOLTAGE	RESISTANCE	VOLTAGE	RESISTANCE	VOLTAGE	RESISTANCE
0	0.4C	0	0.83AC	0	0.33AC	0	0.33AC	0	0.33AC
1	1 INF	1	1 INF	1	1 INF	1	1 INF	1	1 INF
2	2 0	2	2 0	2	2 0	2	2 0	2	2 0
3	3 0	3	3 0	3	3 0	3	3 0	3	3 0
4	4 0	4	4 0	4	4 0	4	4 0	4	4 0
5	5 0	5	5 0	5	5 0	5	5 0	5	5 0
6	6 0	6	6 0	6	6 0	6	6 0	6	6 0
7	7 0	7	7 0	7	7 0	7	7 0	7	7 0
8	8 0	8	8 0	8	8 0	8	8 0	8	8 0
9	9 0	9	9 0	9	9 0	9	9 0	9	9 0
10	10 0	10	10 0	10	10 0	10	10 0	10	10 0
11	11 0	11	11 0	11	11 0	11	11 0	11	11 0
12	12 0	12	12 0	12	12 0	12	12 0	12	12 0
13	13 0	13	13 0	13	13 0	13	13 0	13	13 0
14	14 0	14	14 0	14	14 0	14	14 0	14	14 0
15	15 0	15	15 0	15	15 0	15	15 0	15	15 0
16	16 0	16	16 0	16	16 0	16	16 0	16	16 0
17	17 0	17	17 0	17	17 0	17	17 0	17	17 0
18	18 0	18	18 0	18	18 0	18	18 0	18	18 0
19	19 0	19	19 0	19	19 0	19	19 0	19	19 0
20	20 0	20	20 0	20	20 0	20	20 0	20	20 0
21	21 0	21	21 0	21	21 0	21	21 0	21	21 0
22	22 0	22	22 0	22	22 0	22	22 0	22	22 0
23	23 0	23	23 0	23	23 0	23	23 0	23	23 0
24	24 0	24	24 0	24	24 0	24	24 0	24	24 0
25	25 0	25	25 0	25	25 0	25	25 0	25	25 0
26	26 0	26	26 0	26	26 0	26	26 0	26	26 0
27	27 0	27	27 0	27	27 0	27	27 0	27	27 0
28	28 0	28	28 0	28	28 0	28	28 0	28	28 0
29	29 0	29	29 0	29	29 0	29	29 0	29	29 0
30	30 0	30	30 0	30	30 0	30	30 0	30	30 0
31	31 0	31	31 0	31	31 0	31	31 0	31	31 0
32	32 0	32	32 0	32	32 0	32	32 0	32	32 0
33	33 0	33	33 0	33	33 0	33	33 0	33	33 0
34	34 0	34	34 0	34	34 0	34	34 0	34	34 0
35	35 0	35	35 0	35	35 0	35	35 0	35	35 0
36	36 0	36	36 0	36	36 0	36	36 0	36	36 0
37	37 0	37	37 0	37	37 0	37	37 0	37	37 0
38	38 0	38	38 0	38	38 0	38	38 0	38	38 0
39	39 0	39	39 0	39	39 0	39	39 0	39	39 0
40	40 0	40	40 0	40	40 0	40	40 0	40	40 0
41	41 0	41	41 0	41	41 0	41	41 0	41	41 0
42	42 0	42	42 0	42	42 0	42	42 0	42	42 0
43	43 0	43	43 0	43	43 0	43	43 0	43	43 0
44	44 0	44	44 0	44	44 0	44	44 0	44	44 0
45	45 0	45	45 0	45	45 0	45	45 0	45	45 0
46	46 0	46	46 0	46	46 0	46	46 0	46	46 0
47	47 0	47	47 0	47	47 0	47	47 0	47	47 0
48	48 0	48	48 0	48	48 0	48	48 0	48	48 0
49	49 0	49	49 0	49	49 0	49	49 0	49	49 0
50	50 0	50	50 0	50	50 0	50	50 0	50	50 0
51	51 0	51	51 0	51	51 0	51	51 0	51	51 0
52	52 0	52	52 0	52	52 0	52	52 0	52	52 0
53	53 0	53	53 0	53	53 0	53	53 0	53	53 0
54	54 0	54	54 0	54	54 0	54	54 0	54	54 0
55	55 0	55	55 0	55	55 0	55	55 0	55	55 0
56	56 0	56	56 0	56	56 0	56	56 0	56	56 0
57	57 0	57	57 0	57	57 0	57	57 0	57	57 0
58	58 0	58	58 0	58	58 0	58	58 0	58	58 0
59	59 0	59	59 0	59	59 0	59	59 0	59	59 0
60	60 0	60	60 0	60	60 0	60	60 0	60	60 0
61	61 0	61	61 0	61	61 0	61	61 0	61	61 0
62	62 0	62	62 0	62	62 0	62	62 0	62	62 0
63	63 0	63	63 0	63	63 0	63	63 0	63	63 0
64	64 0	64	64 0	64	64 0	64	64 0	64	64 0
65	65 0	65	65 0	65	65 0	65	65 0	65	65 0
66	66 0	66	66 0	66	66 0	66	66 0	66	66 0
67	67 0	67	67 0	67	67 0	67	67 0	67	67 0
68	68 0	68	68 0	68	68 0	68	68 0	68	68 0
69	69 0	69	69 0	69	69 0	69	69 0	69	69 0
70	70 0	70	70 0	70	70 0	70	70 0	70	70 0
71	71 0	71	71 0	71	71 0	71	71 0	71	71 0
72	72 0	72	72 0	72	72 0	72	72 0	72	72 0
73	73 0	73	73 0	73	73 0	73	73 0	73	73 0
74	74 0	74	74 0	74	74 0	74	74 0	74	74 0
75	75 0	75	75 0	75	75 0	75	75 0	75	75 0
76	76 0	76	76 0	76	76 0	76	76 0	76	76 0
77	77 0	77	77 0	77	77 0	77	77 0	77	77 0
78	78 0	78	78 0	78	78 0	78	78 0	78	78 0
79	79 0	79	79 0	79	79 0	79	79 0	79	79 0
80	80 0	80	80 0	80	80 0	80	80 0	80	80 0
81	81 0	81	81 0	81	81 0	81	81 0	81	81 0
82	82 0	82	82 0	82	82 0	82	82 0	82	82 0
83	83 0	83	83 0	83	83 0	83	83 0	83	83 0
84	84 0	84	84 0	84	84 0	84	84 0	84	84 0
85	85 0	85	85 0	85	85 0	85	85 0	85	85 0
86	86 0	86	86 0	86	86 0	86	86 0	86	86 0
87	87 0	87	87 0	87	87 0	87	87 0	87	87 0
88	88 0	88	88 0	88	88 0	88	88 0	88	88 0
89	89 0	89	89 0	89	89 0	89	89 0	89	89 0
90	90 0	90	90 0	90	90 0	90	90 0	90	90 0
91	91 0	91	91 0	91	91 0	91	91 0	91	91 0
92	92 0	92	92 0	92	92 0	92	92 0	92	92 0
93	93 0	93	93 0	93	93 0	93	93 0	93	93 0
94	94 0	94	94 0	94	94 0	94	94 0	94	94 0
95	95 0	95	95 0	95	95 0	95	95 0	95	95 0
96	96 0	96	96 0	96	96 0	96	96 0	96	96 0
97	97 0	97	97 0	97	97 0	97	97 0	97	97 0
98	98 0	98	98 0	98	98 0	98	98 0	98	98 0
99	99 0	99	99 0	99	99 0	99	99 0	99	99 0
100	100 0	100	100 0	100	100 0	100	100 0	100	100 0

NOTE: 1-CONNECTION #1 ON ALL SOCKETS CONNECTED TO CHASSIS.
2-CONNECTION #2 ON SOCKET 4 IS REFERENCE POINT FOR A.C. FILAMENT VOLTAGES.



BOTTOM VIEW OF SOCKETS

FOR ALIGNMENT
SEE INDEX

† VOLTAGE READING WILL VARY WITH SENSITIVITY OF METER.
* RESISTANCE WILL DEPEND ON CONDITION OF ELECTROLYTIC CONDENSER.

CHASSIS C2-1, C2-2,
C2-3, C2-4
CHASSIS C3-1, C3-2
CHASSIS C4-1, C4-2
Alignment, Tuner

FARNESWORTH TELEV. & RADIO CORP.

MODELS AT-50, AT-52 (Ch. C2-1), AT-51 (Ch. C2-2), AT-55, AT-56 (Ch. C2-3), AT-58, AT-59 (Ch. C2-4),
AK-96 (Ch. C4-2),
AK-95, AC-90, AC-91 (Ch. C4-1), and AK-95, AC-70, AC-71 (Ch. C3-1), AK-76 (Ch. C3-2)

TO REMOVE CHASSIS

Before removing the chassis it is necessary to remove the loop antenna, this is done as follows: First remove the 3 prong plug from top of loop frame. Loosen the bolt which goes through the wooden member at the bottom of the speaker enclosure. This will allow the bottom pivot (wood) to drop—allowing the top pivot of the loop to be removed from its bearing. Caution should be used so that the heavy rubber washer is not lost, also when the loop is removed from the top bearing, a lead which plugs into the top of the loop axis, must be disconnected, if the loop is dropped this lead may break. After the loop is free the set should be manually tuned to 900 Kc. C. and the pointer disconnected from the drive cord by bending the center tab toward the back of the cabinet and releasing the cord.

The loop make sure the lower bearing support has the dowel pointing away from the loud speaker so that an angle of approximately 10° or 15° is made with a line parallel with the front panel. When the loop is installed be sure the label faces the back of the cabinet and that the loop is raised by the lower support so the rubber washer is slightly compressed so the loop will not rotate by itself. Then plug in the three prong plug making certain the leads are dressed so no strain is on them when the loop is rotated.

When replacing chassis adjust signal generator to 900 Kc—then manually tune in the signal, set the pointer so its center line coincides with the center line of the 900 Kc marker, then clamp pointer to drive cord. If set is correctly aligned the calibration will check at 600 Kc and 1500 Kc within the pointer's width.

The chassis bolts may be removed and the chassis lifted out taking care that the two sets of leads to the loop do not catch on the chassis shelf. When replacing the loop after the chassis, jumper on terminal strip is disconnected. Before aligning tighten wave trap-trimmer screw.

PUSH BUTTON SET UP

At the rear of the chassis between the television jack and the antenna and ground leads are five pairs of holes. The lower hole is for the adjustment of the iron cores for the oscillator coils. The upper hole is for the R.F. stage adjustment. It is suggested that a signal generator be used for alignment. Tune in by means of the tuning knob, one of the stations that is to be set up. Select the button in the range covering the station selected, as shown by the label on the back of the chassis and Fig. 1 below. Before pushing the button adjust the signal generator to zero beat with the desired station, then push button. Adjust the oscillator station (lower screw) first, then the R.F. stage for service, first remove the loop antenna in table models. Second—disconnect the pointer from the drive cable by bending tongue toward the rear of the chassis to release drive cord, before loosening chassis hold down bolts. In consoles the loop is mounted below the chassis shelf, so it is not necessary to remove the loop assembly. However, the four leads from the chassis to the four screw type terminals on the loop shield should be removed by loosening the screws. See Fig. 2 for color code, when replacing chassis.

CHASSIS REMOVAL

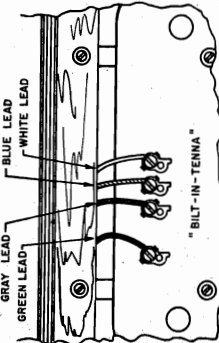


Fig. 2

When removing the chassis from the cabinet for service, first remove the loop antenna in table models. Second—disconnect the pointer from the drive cable by bending tongue toward the rear of the chassis to release drive cord, before loosening chassis hold down bolts. In consoles the loop is mounted below the chassis shelf, so it is not necessary to remove the loop assembly. However, the four leads from the chassis to the four screw type terminals on the loop shield should be removed by loosening the screws. See Fig. 2 for color code, when replacing chassis.

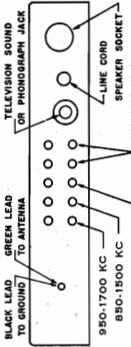


Fig. 1

ALIGNMENT

Before re-aligning the set be sure all adjusting screws for the iron core oscillator coils are flush with or inside the chassis base.


Connect the low side of the signal generator to the black (ground) lead of the set and the high 18Mc. Use the one found at the minimum setting side of the generator to the green (antenna) lead of the oscillator trimmer.

STEPS	Use in series with antenna	Set Generator at	Set Gang at	Adjust	Located	To obtain
SET VOLUME CONTROL AT MAXIMUM						
1.						
2.		455 Kc.	Minimum		2nd I. F. Trimmers Top 2nd I. F. Tran.	Maximum Output
3.		1600 Kc.			1st I. F. Trimmer Top 1st I. F. Tran.	
4.	250 mmfd.	1500 Kc.			R.C. Osc. Trimmer B.C.R.F. Trimmer B.C. Pad	
5.		600 Kc.			Strongest Signal and Rock Gang	
6.		1600 Kc.			S.W. Osc. Trimmer S.W.R.F. Trimmer	
7.		18.1 Mc.			Minimum	
8.	400 Ohms	16 Mc.			Strongest Signal and Rock Gang	
9.		16 Mc.			Check Signal at 6 Mc. and 10 Mc.	
10.		16 Mc.				

*Tighten oscillator trimmer screw for maximum capacity, then unscrew-until second peak is secured.
**Tighten R. F. trimmer screw for maximum capacity, then unscrew until first peak is secured.

MODEL 6V6PK Batt.
Schematic, Alignment


FERGUSON RADIO, INC.

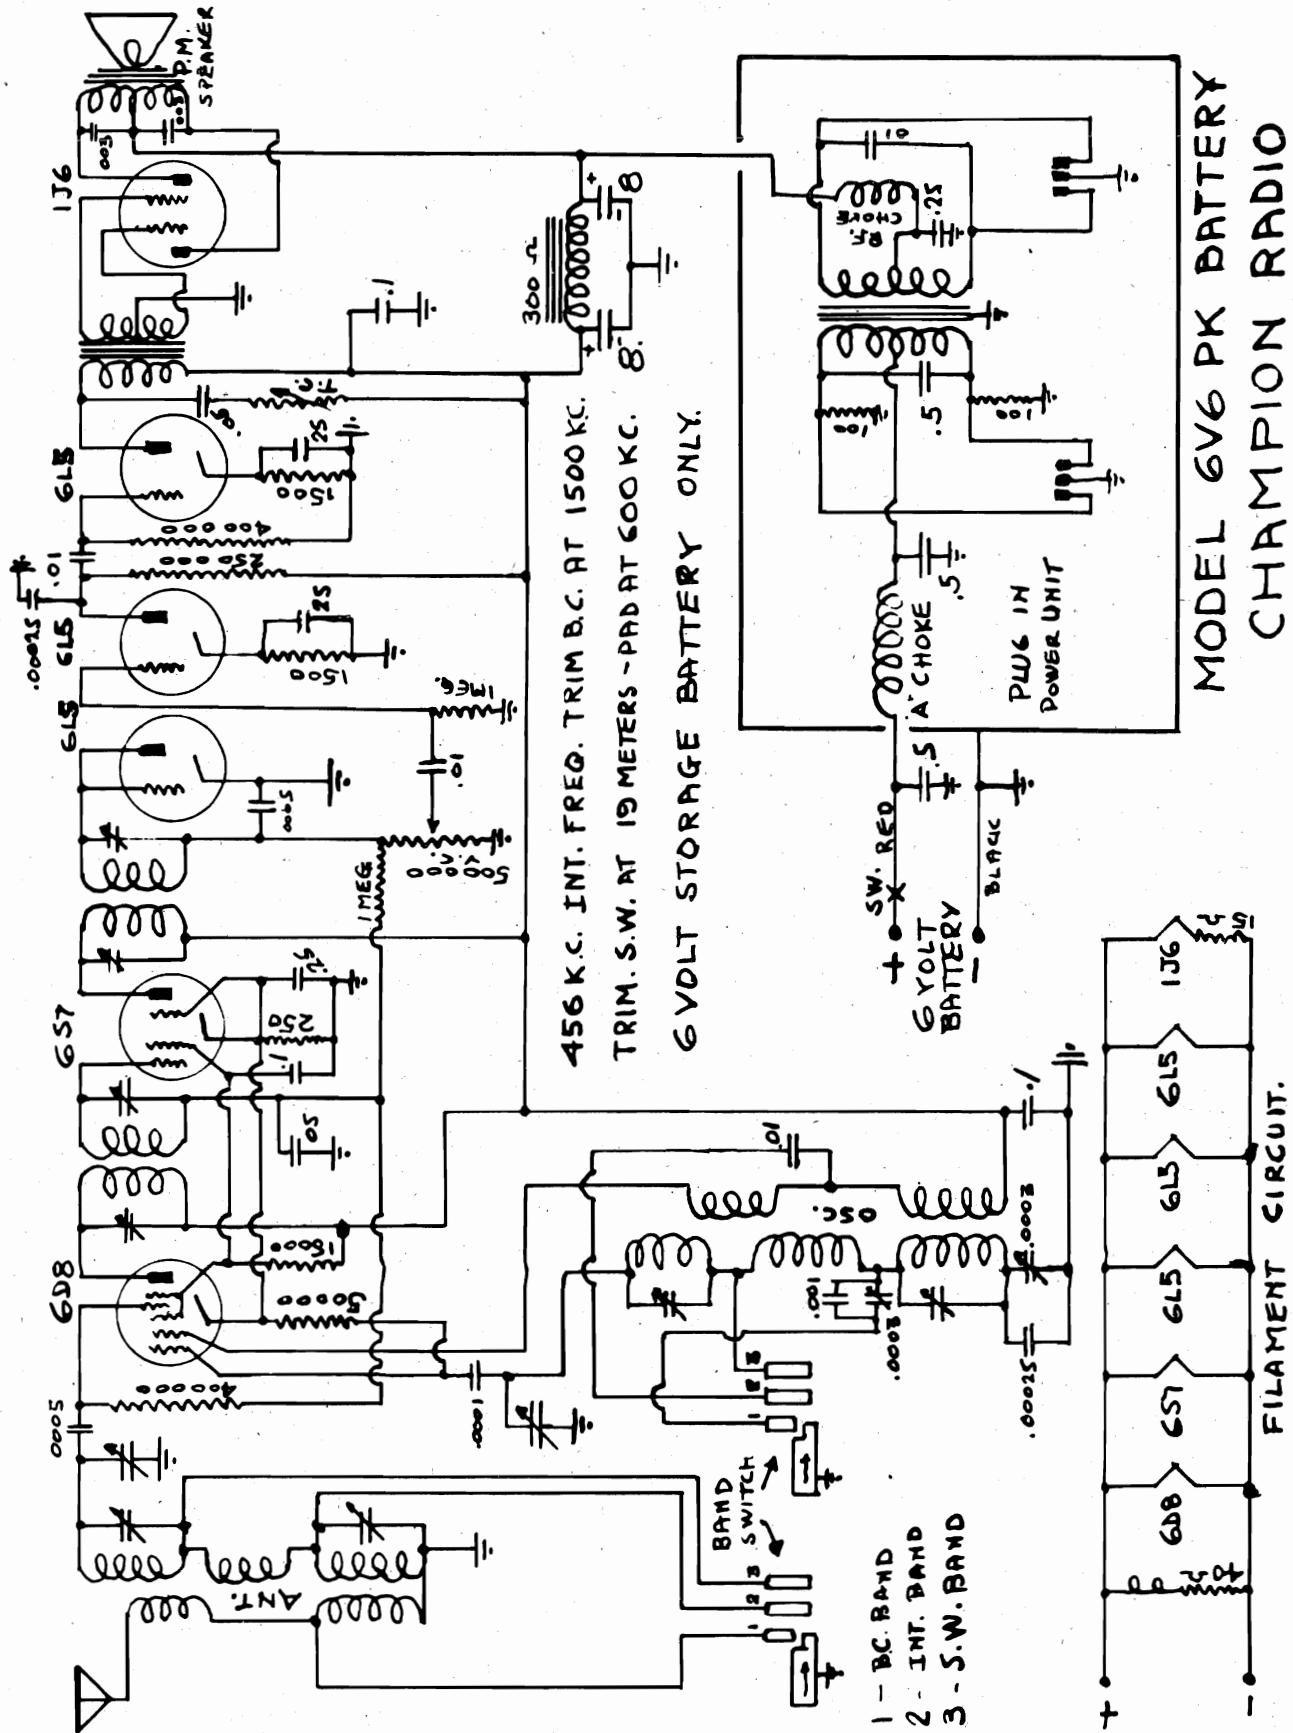

MODEL S7403-3

Schematic, Voltage, Socket Alignment, Trimmers

FIRESTONE TIRE & RUBBER CO.

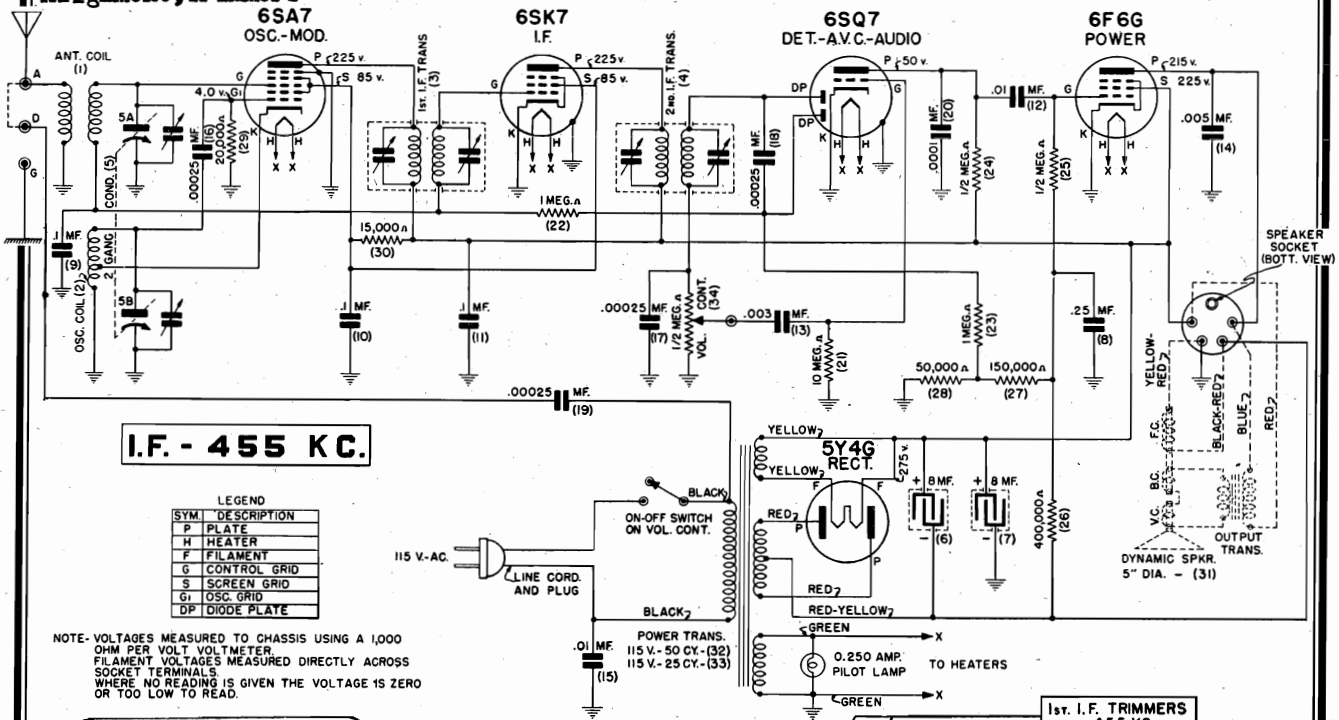

ALIGNMENT

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to the last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.


TEST OSCILLATOR				Refer to parts layout diagram for location of trimmers mentioned below:
Set receiver dial to:	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I.F. Any point where no interfering signal is received	455 K. C.	.02 MFD condenser	High side to grid terminal of 6SA7 tube DO NOT REMOVE CAP.	Adjust each of the second I. F. transformer trimmers for maximum output—then adjust each of the first I. F. trimmers for maximum output. Adjust 1730 K. C. oscillator trimmer for maximum output. While rocking gang condenser adjust 1400 K. C. antenna trimmer for maximum output.
(1) Exactly 1730 K. C.	Exactly 1730 K. C.	.00025 MFD condenser	Receiver "A" antenna post.	
(2) Approx. 1400 K. C.	Exactly 1400 K. C.	.00025 MFD condenser	Receiver "A" antenna post.	

FIRESTONE TIRE & RUBBER CO.

MODEL S7402-3



MODEL S7403-4

Schematics
Voltage
Alignment
Socket, Trimmers

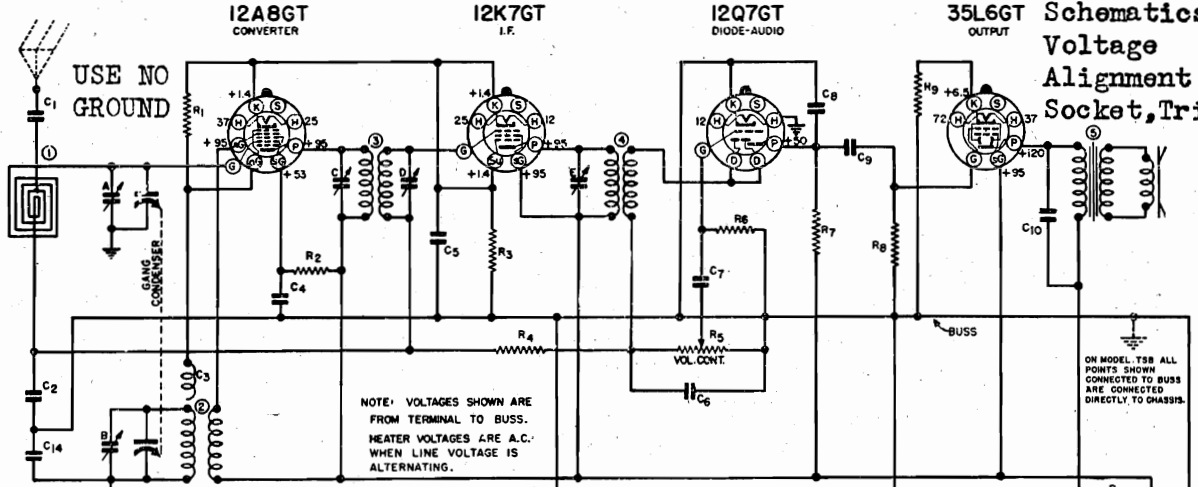


LAMP USED. Show case lamp 120 volt, 25 watts with medium screw base. (Never use a lamp larger than 25 watts.)



DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
R 1	N-1260	50,000 OHM .5W. 20%	C 7	N-1344	.01 MFD. 400V.
R 2	N-1527	20,000 OHM .5W. 20%	C 8	N-1447	.0005 MFD. 400V.
R 3	N-1742	25 OHM .5W. 20%	C 9	N-1344	.01 MFD. 400V.
R 4	N-1262	1 MEGOHM .5W. 20%	C 10	N-1376	.02 MFD. 400V.
R 5	N-1925	.5 MEGOHM VOL. CONT. (TSB)	C 11	N-2959	30 MFD. 150V. ELECTRO.
R 6	N-1925	10 MEGOHM VOL. CONT. (TSBU)	C 12	N-2959	15 MFD. 150V. ELECTRO.
R 7	N-1377	200,000 OHM .5W. 20%	C 13	N-1346	.05 MFD. 400V.
R 8	N-1264	500,000 OHM .5W. 20%	C 14	N-1479	.25 MFD. 400V.
R 9	N-1616	250 OHM .5W. 10%	1	N-2146	ANTENNA COIL LOOP
R 10	N-1617	2500 OHM .5W. 20%	2	N-1452	OSCILLATOR COIL
R 11	N-1614	50 OHM .5W. 20%	N-1558	1ST. I.F. TRANS. (TSB)	
R 12	N-1618	80 OHM 2W. 10%	N-1954	1ST. I.F. TRANS. (TSBU)	
C 1	N-1344	.01 MFD. 400V.	4	N-1536	2ND I.F. TRANSFORMER
C 2	N-1345	.05 MFD. 200V. (TSB)	5	N-2074	4" P.M. SPEAK. B TRANS. (TSB)
C 3	N-1351	1 MFD. 200V. (TSBU)	N-2408	4" P.M. SPEAK. B TRANS. (TSBU)	
C 4	N-1345	.05 MFD. 200V.	E	N-1597	2ND. I.F. TRIMMING COND.
C 5	N-1351	1 MFD. 200V.			
C 6	N-1376	100 MMFD.			
			N-2088	GANG CONDENSER	
			N-2595	BED LAMP	
			N-2094	BED LAMP SWITCH	

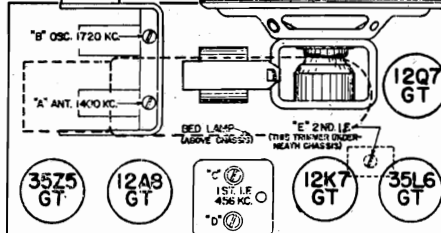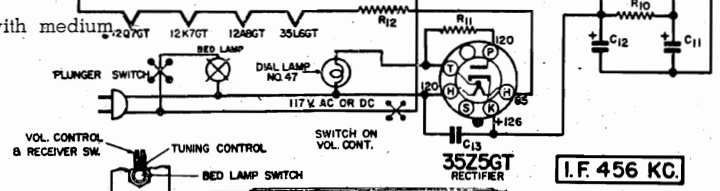

TUNING RANGE
535 to 1720 KC
5 TUBE AC-DC
SUPERMETERODYNE
SINGLE BAND
DRN. H. B. APP. 10/2/39
MODEL S-7402-3

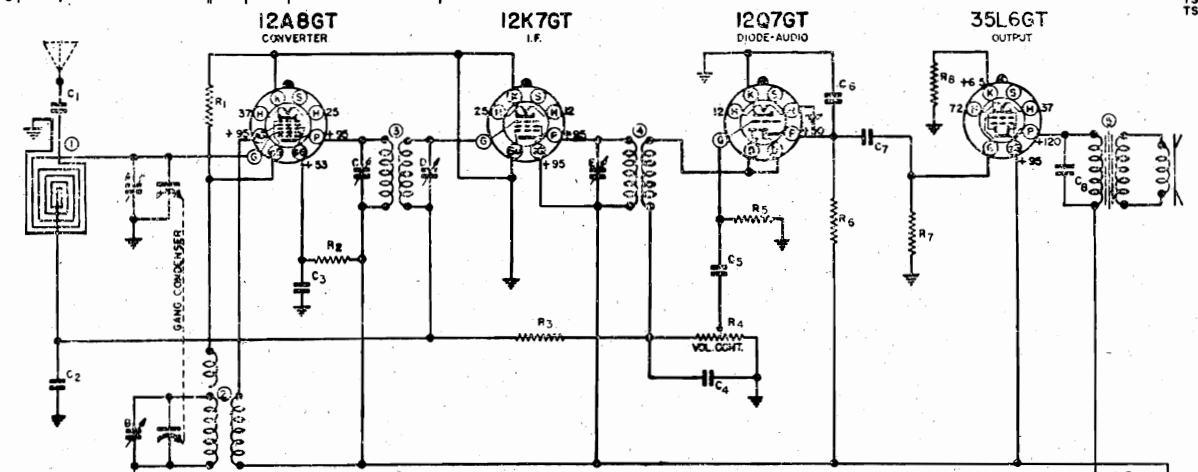

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
R 1	N-1260	50,000 OHM .5W. 20%	1	N-2901	2 GANG CONDENSER
R 2	N-1259	15,000 OHM .5W. 20%	2	N-1452	OSCILLATOR COIL
R 3	N-1262	1 MEGOHM .5W. 20%	3	N-1597	2ND I.F. TRANSFORMER
R 4	N-2886	.5 MEGOHM VOL. CONT.	4	N-2889	4-1/2" SPEAKER B TRANS.
R 5	N-1263	10 MEGOHM .5W. 20%	5	N-2889	4-1/2" SPEAKER B TRANS.
R 6	N-1377	200,000 OHM .5W. 20%			
R 7	N-1264	500,000 OHM .5W. 20%			
R 8	N-1616	250 OHM .5W. 10%			
R 9	N-1257	2,000 OHM .5W. 20%			
R 10	N-1742	25 OHM .5W. 20%			
R 11	N-1618	80 OHM 2W. 10%			
C 1	N-1344	.01 MFD. 400V.			
C 2	N-1345	.05 MFD. 200V.			
C 3	N-1345	.05 MFD. 200V.			
C 4	N-1374	100 MMFD.			
C 5	N-1344	.01 MFD. 400V.			
C 6	N-1447	.0005 MFD. 400V.			
C 7	N-1344	.01 MFD. 400V.			
C 8	N-1376	.02 MFD. 400V.			
C 9	N-1365	30 MFD. 60V. ELECTRO.			
C 10	N-1365	15 MFD. 150V. ELECTRO.			
C 11	N-1346	.03 MFD. 400V.			

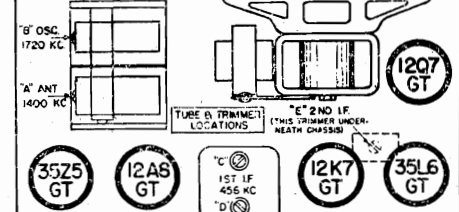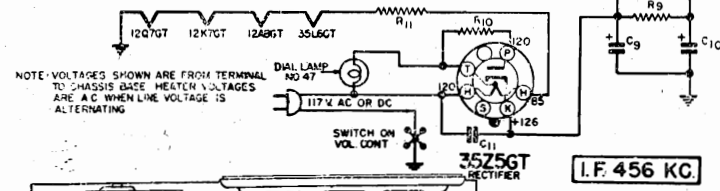

MODEL S-7403-4
5 TUBE AC-DC
SUPERMETERODYNE
SINGLE BAND
DRN. L.T.C. APP. 10/2/39

MODEL S7404-2


FIRESTONE TIRE & RUBBER CO

MODEL S7427-8


Schematics, Voltage

MODELS S-7402-3, S-7403-4

Alignment

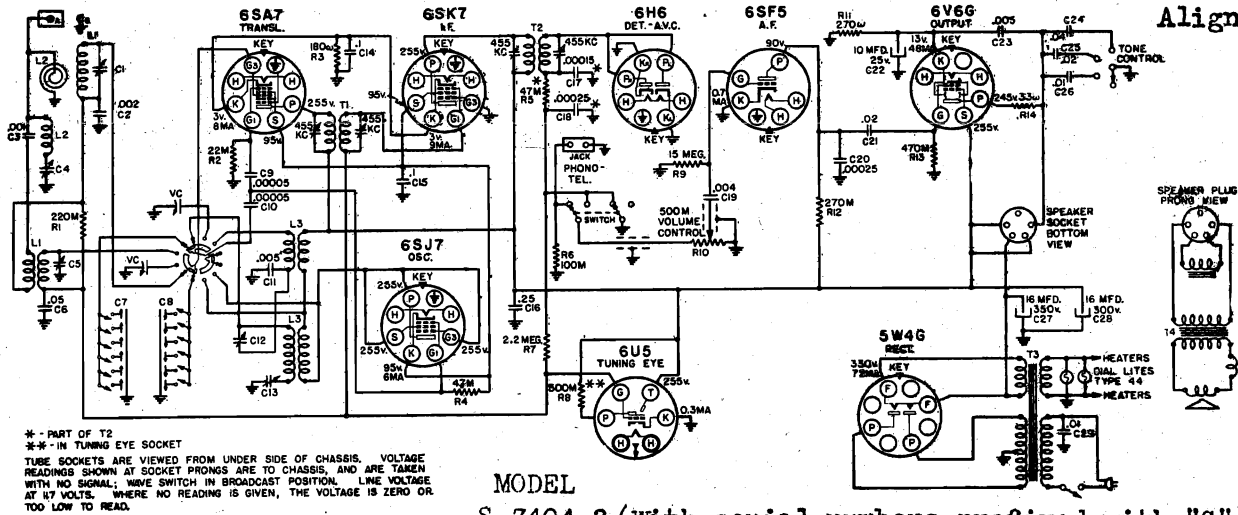

MODEL S-7404-2 (With serial numbers prefixed with "C").

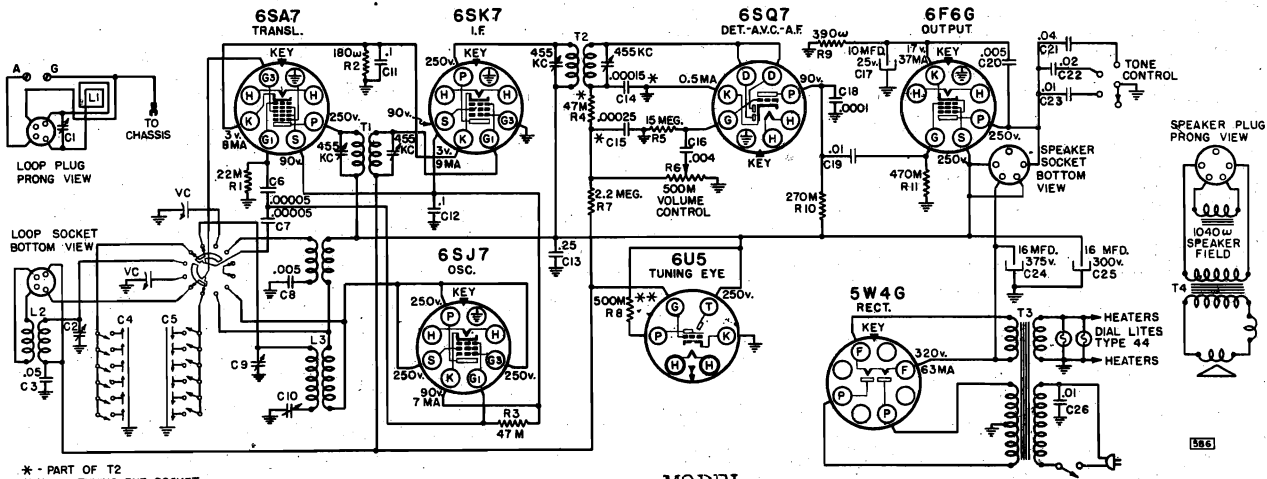

MODEL S-7427-8

ALIGNMENT PROCEDURE

MODEL S-7402-3

MODEL S-7403-4

I. F. ALIGNMENT. With the gang condenser set at minimum, adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (12A8GT) through a .05 or .1 mfd. condenser. The ground on the test oscillator should be connected to the chassis ground. Align all three I.F. trimmers to peak or maximum reading on the output meter.

BROADCAST BAND ALIGNMENT. Remove chassis from cabinet and set it up on the bench. Care should be taken to have no iron or other metal near the loop. Do not make this set-up on a metal bench.

Connect the test oscillator to the antenna of the set through a 200 mmfd. (.0002) condenser. With the gang condenser set at minimum capacity, set the test oscillator at 1720 KC, and adjust the oscillator (or 1720 KC trimmer) on gang condenser. Next—set the test oscillator at 1400 KC, and tune in the signal on the gang condenser. Adjust the antenna trimmer (or 1400 KC trimmer) for maximum signal. Next set the test oscillator at 600 KC, and tune in signal on condenser to check alignment of coils.

I. F. ALIGNMENT. With the gang condenser set at minimum, adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (12A8GT) through a .05 or .1 mfd. condenser. The ground on the test oscillator should be connected to the chassis ground. Align all three I.F. trimmers to peak or maximum reading on the output meter.

BROADCAST BAND ALIGNMENT. Remove chassis, shield, and loop antenna from cabinet and set them up on the bench so that they occupy exactly the same respective positions on the bench as they did in the cabinet. Care should be taken to have no iron or other metal near the loop. Do not make this set up on a metal bench.

Connect the test oscillator to the antenna of the set through a 200 mmfd. (.0002) condenser. With the gang condenser set at minimum capacity, set the test oscillator at 1720 KC, and adjust the oscillator (or 1720 KC trimmer) on gang condenser. Next—set the test oscillator at 1400 KC, and tune in the signal on the gang condenser. Adjust the antenna trimmer (or 1400 KC trimmer) for maximum signal. Next set the test oscillator at 600 KC, and tune in signal on condenser to check alignment of coils.

FIRESTONE TIRE & RUBBER CO.

MODEL S7403-8
Schematic, Voltage

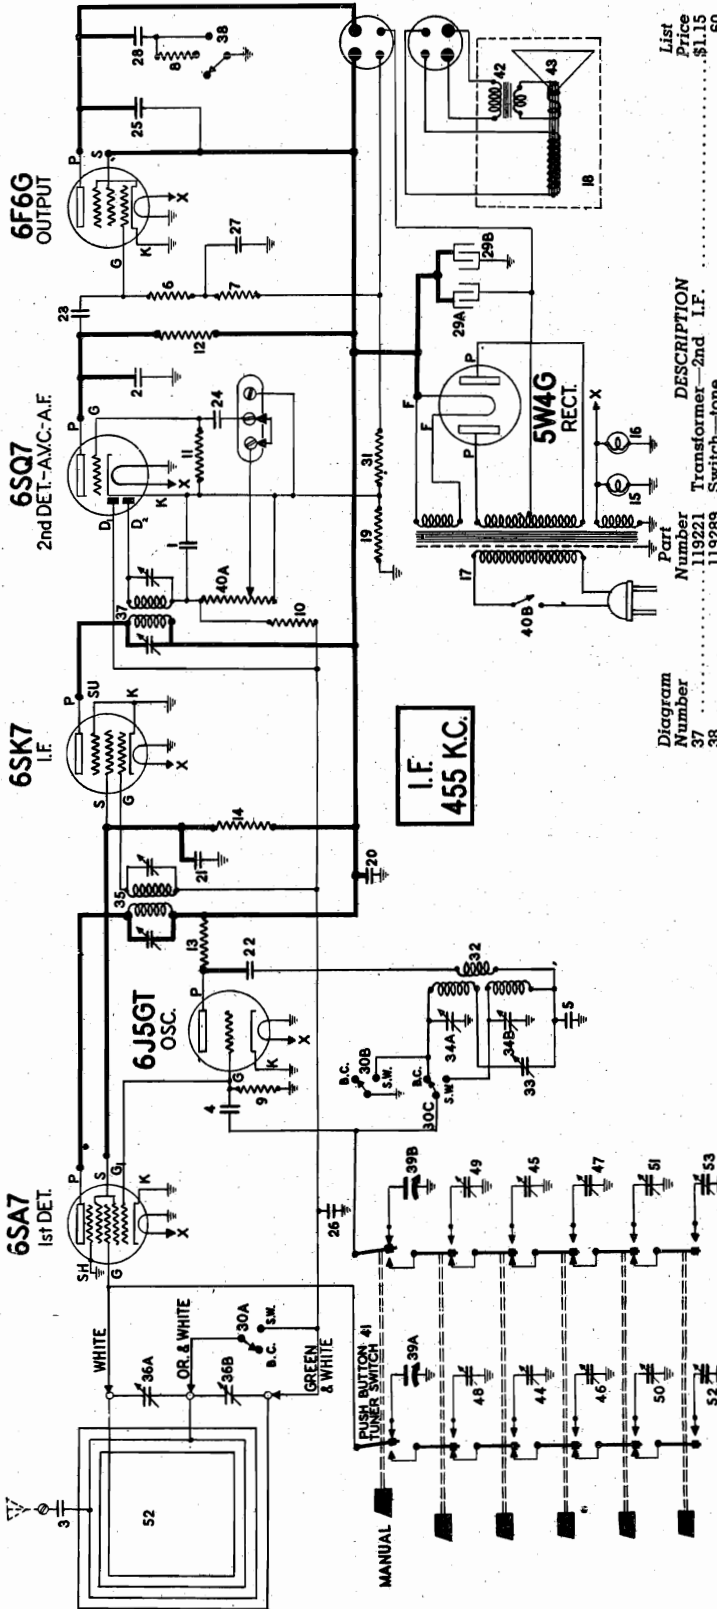


Diagram Number	Part Number	DESCRIPTION	List Price
1-2	83539	Condenser—Mica, 260 mmfd.	\$.20
3	83783	Condenser—Mica, 110 mmfd.	.20
4	85061	Condenser—Mica, 51 mmfd.	.15
5	89275	Condenser—Mica, .002 mfd.	.40
6	110559	Resistor—Carbon 470,000 ohms, 1/2 watt	.12
8	110578	Resistor—Carbon 4,700 ohms, 1/2 watt	.12
9	110578	Resistor—Carbon 68,000 ohms, 1/2 watt	.12
10-11	110580	Resistor—Carbon 3.3 meg, 1/2 watt	.12
12	110591	Resistor—Carbon 890,000 ohms, 1/2 watt	.12
13-14	110592	Resistor—Carbon 22,000 ohms, 1 watt	.12
15-16	110629	Lamp—6.3 volt, .25 amps.	3.50
17	114530	Power transformer, 117 volt—60 cycle	5.20
18	U-115097	Speaker—dynamic 6"	.25
19	116275	Resistor—Carbon 470,000 ohms, 1/2 watt	.12
20-21	116625	Condenser—.1 mfd, 600 volt	.25
22-23	116640	Condenser—.01 mfd, 600 volt	.15
24-25	116647	Condenser—.004 mfd, 600 volt	.15
26	116819	Condenser—.05 mfd, 600 volt	.20
27	110377	Condenser—Electrolytic 10 mfd., 35 volt	.80
28	116984	Condenser—.04 mfd, 600 volts	.20
29A-29B	117034	Condenser—multiple electrolytic 15 mfd.—450 volt	1.45
30A-30B-30C	117532	Range switch	.76
31	116812	Resistor—180 ohms—1 W. WW.	.12
32	118916	Coil—oscillator	.52
33	118919	Condenser—padding	.30
34A-34B	118920	Trimmer condensers (2 section)	.40
35	119042	Transformer—1st I.F.	1.10
36A-36B	119126	Trimmer Condensers (2 section)	.35

Diagram Number	Part Number	DESCRIPTION	List Price
37	119221	Transformer—2nd I.F.	\$.15
38	119289	Switch—tone	.60
39A-39B	119291	Condenser—variable tuning	2.75
40A-40B	119602	Volume control—1 meg. (with switch)	1.25
41	119603	P. B. Switch	2.30
42	U-119646	Transformer—output for U-115097 speaker	1.65
43	U-119647	Cone & Voice coil for U-115097 speaker	1.65
44 to 47	119663	Condenser—P.B. trimmer (750-1375 KC.)	.24
48-49	119664	Condenser—P.B. trimmer (980-1600 KC.)	.24
50 to 53	119753	Condenser—P.B. trimmer (540-1000KC.)	.24
	119732	Loop Antenna and Cabinet back assembly	2.00

SOCKET VOLTAGES—ALL D.C. POTENTIAL MEASURED TO CHASSIS
VOLUME ON FULL WITH NO SIGNAL

TUBE	FUNCTION	H	K	G ₁	G	S	SU	P	D ₁	D ₂
6SA7	1st DET.	6.0 A.C.	O	Note A	—8	90		240		
6J5GT	OSC.	6.0 A.C.	O	—8				145		
6SK7	I.F. AMP.	6.0 A.C.	O	Note A		90	O	240		Note A
6SQ7	2nd DET.-A.V.C.-A.F.	6.0 A.C.	O	—3	Note A			50	Note A	Note A
6F6G	Output	6.0 A.C.	O	Note B		240		220		
5W4G	Rectifier	5.0 A.C.							Plates—340 A.C. to C.T.	

DIAL TUNED TO 540 KC.

NOTE A: The voltage at these elements is —3 volts measured across resistor 19.
NOTE B: The voltage at this grid is —14 volts measured across resistors 19 and 31.
Use a high resistance voltmeter of at least 1000 ohms per volt.

MODEL S7403-8
Alignment, Socket
Trimmers


FIRESTONE TIRE & RUBBER CO.

ALIGNMENT EQUIPMENT & PROCEDURE

ALIGNMENT: An output meter and an accurately calibrated signal generator are required. Connect the output meter across the voice coil or between the plate of the 6F6G output tube and ground in series with a .1 mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.) Connect the ground lead of the signal generator to the chassis. Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure. Be sure the loop is properly connected and in the same relative position it occupies when in the cabinet.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output To Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Rear Lug of Gang Condenser	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	1-2	2nd I. F.	Adjust for maximum output. Then repeat adjustment.
					3-4	1st I. F.	
400 OHM Carbon Resistor	External Antenna Terminal	6 MC	Foreign	6 MC	5	Foreign Oscillator (Shunt)	Adjust for maximum output. Check to see if proper peak was obtained by tuning in image at approx. 5.1 MC. If image does not appear realign at 6 MC. with trimmer screw farther out. Recheck image.
400 OHM Carbon Resistor	External Antenna Terminal	6 MC	Foreign	Tune to 6 MC. Generator Signal.	6*	Foreign Antenna	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.
200 MMFD. Mica Condenser	External Antenna Terminal	1500 KC	Broadcast	1500 KC	7	Broadcast Oscillator (Shunt)	Adjust for maximum output.
200 MMFD. Mica Condenser	External Antenna Terminal	1500 KC	Broadcast	Tune To 1500 KC Generator Signal	8*	Broadcast Antenna	Adjust for maximum output.
200 MMFD. Mica Condenser	External Antenna Terminal	600 KC	Broadcast	Tune To 600 KC Generator Signal	9	Broadcast Oscillator (Series Pad)	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.

*NOTE: Trimmers must be aligned in order shown. After set is in cabinet realign No. 6 at 6MC. Then No. 8 at 1500 KC. on weak signals. Signal generator should be disconnected.

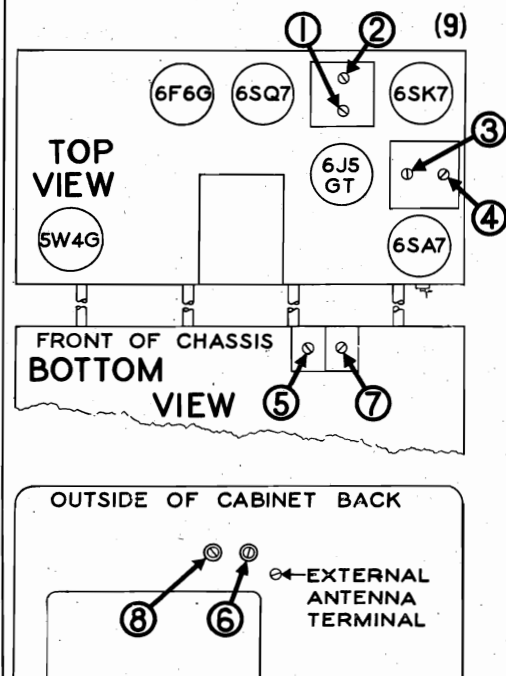



DIAL AND MISCELLANEOUS PARTS

Part Number	Description	List Price
114955	Clamp for dial cord	\$0.01
119559	Clamp—dial scale retaining	.08
112745	Clip—coil mounting	.01
117057	Cord—drive (supplied in 2 foot lengths)	.15
119655	Dial escutcheon	.85
119694	Dial background	.06
119777	Dial scale	.55
117029	Drive drum and bushing	.50
88348	Eyelet for dial cord	Per doz. .05
119644	Knob	.18
119577	Pointer	.12
119654	Push button	.85
81145	Retaining ring—for drive shaft	Per C .50
83624	Screw—self tapping 8x1/4	.01
119218	Screw—Escutcheon mounting	.02
85040	Screw—No. 6 Hex. Hd.	Per C .35
112874	Screw—No. 10x1 1/8 Chassis mtg.	.01
85827	Set Screw—8-32 Square Head	.02
113191	Screw—No. 8-32x1 1/8	.01
110501	Socket—4 prong (for speaker)	.16
116690	Socket—small octal base	.12
117078	Socket—octal with special grounding lug	.12
111090	Spacer—steel mtg.	.02
113177	Spring—dial cord tension	.09
119739	Station call letter tabs	.48
119824	Terminal strip—phono	.05
118606	Tuning shaft	.18
110829	Washer—chassis mounting	.01
111456	Washer—spring washer	Per C .50
116530	Washer—for back of knobs	.005

(Prices Subject to Change without Notice)

FIRESTONE TIRE & RUBBER CO.

MODEL S7404-1
Schematic, Voltage
Socket, Trimmers
Parts

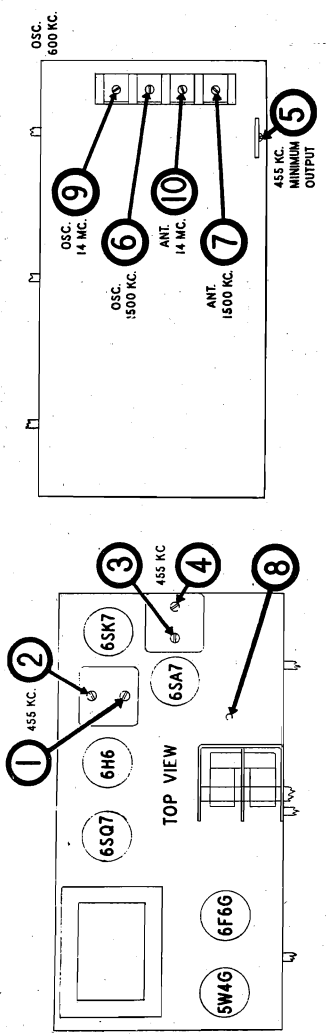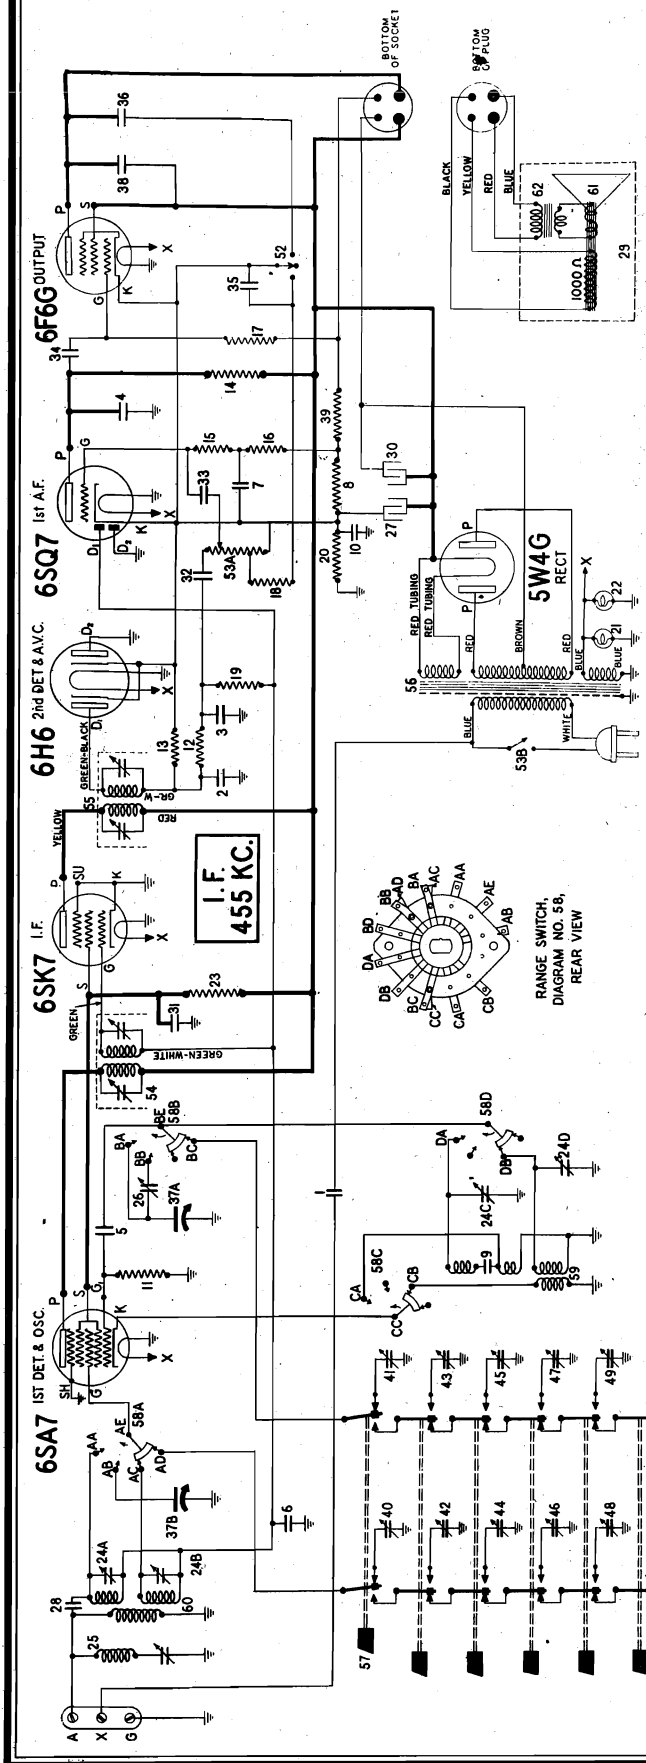

SOCKET VOLTAGES—ALL D.C. POTENTIAL MEASURED TO CHASSIS

ANTENNA GROUNDED

TUBE	FUNCTION	H	K	G	G ₁	S	U	P	D ₁	D ₂
6SA7	1st Det. & Osc.	6.0 A.C.	0	-2.8	-8	85	255			
6SK7	I.F.	6.0 A.C.	0	-2.8		85	0	255		
6H6	2nd Det. & A.V.C.	6.0 A.C.	-3.5*						-2.8	0
6SQ7	1st A.F.	6.0 A.C.	-3.5*	-4.0*					130	-2.8
6F6G	Output	6.0 A.C.	-3.5*	-20*					235	
5W4G	Rectifier	5.0 A.C.								Plates 250 V. A.C.

*Measured at Bias Resistor

Use a high resistance voltmeter of at least 1000 ohms per volt.

Diagram Number	Part Number	Description	Price
1-2-3-4	83539	Condenser—mica, 260 mmd.	\$.20
5	5061	Condenser—mica, 51 mmd.	.15
6	8061	Condenser—paper, .05 mfd., 200 volt.	.25
7	8062	Condenser—paper, .05 mfd., 250 volts.	.35
8	8063	Condenser—mica, .0042 mfd., 250 volts.	.35
9	8064	Condenser—mica, .0042 mfd., 250 volts.	.35
10	110377	Condenser—electrolytic, 10 mfd., 35 volt.	.80
11-12	110552	Resistor—carbon, 47,000 ohms, 1/4 watt.	.12
13-14	110553	Resistor—carbon, 220,000 ohms, 1/4 watt.	.12
15-16	110554	Resistor—carbon, 1 megohm, 1/4 watt.	.12
17	110555	Resistor—carbon, 470,000 ohms, 1/4 watt.	.12
18	110556	Resistor—carbon, 22,000 ohms, 1/4 watt.	.12
19	110557	Resistor—carbon, 3.3 meg., 1/4 watt.	.12
20	110558	Resistor—180 ohm, 1/4 watt.	.12
21	110559	Resistor—180 ohm, 1/4 watt.	.12
22	110560	Resistor—180 ohm, 1/4 watt.	.12
23	110561	Resistor—180 ohm, 1/4 watt.	.12
24	110562	Resistor—180 ohm, 1/4 watt.	.12
24A-24B-24C-24D	112792	Resistor—carbon, 20,000 ohms, 1 watt.	.65
25	112793	Resistor—carbon, 20,000 ohms, 1 watt.	.65
26	112794	Resistor—carbon, 20,000 ohms, 1 watt.	.65
27	112795	Resistor—carbon, 20,000 ohms, 1 watt.	.65
28	112796	Resistor—carbon, 20,000 ohms, 1 watt.	.65
29	114258	Condenser—paper (with trimmer)	.96
30	114259	Condenser—paper (530 to 630 mmd.)	.98
31	M-115064	Condenser—mica, 15 mmd., 450 volts.	1.12
32	116282	Speaker—dynamic, 8 inch.	7.00
33	116283	Condenser—electrolytic, 16 mfd., 450 volts.	.78
34-35-36	116625	Condenser—1 mfd., 600 volt.	.25
37A-37B	116893	Condenser—.02 mfd., 600 volt.	.15
38	116894	Condenser—variable gang	3.30
39	117022	Condenser—.002 mfd., 600 volt.	.15
40-41-42-43-44-45	117032	Resistor—300 ohms, 1 watt.	.15
46-47-48-49-50-51	117081	Push button trimmer gang condenser assembly.	\$.52
52	117209	Switch—tone control	.65
53A-53B	117210	Volume control, 1 meg. with switch.	1.30
54	117211	Transformer—1st I.F.	1.50
55	117212	Transformer—2nd I.F.	1.50
56	117213	Transformer—power	3.00
57	117225	Switch—tone control	1.00
58A-58B-58C-58D	117265	Range switch	1.35
59	117446	Coil—oscillator	1.00
60	117448	Coil—antenna	1.20
61	M-117671	Tone and voice coil for M-115064 speaker.	1.80
62	M-117672	Transformer—output for M-115064 speaker.	2.50

MODEL S7404-1
Alignment, Tuner
MODEL S7404-2
MODEL S7404-3

FIRESTONE TIRE & RUBBER CO.

MODEL S7426-8
MODEL S7427-1, Late
Tuner Data

- FOR ALIGNMENT:** An output meter and an accurately calibrated signal generator are required.
1. Connect the output meter across the voice coil or between the plate of the 6F6G output tube and ground in series with a .1 mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
 2. Connect the ground lead of the signal generator to the "G" terminal or the chassis.
 3. Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure.
 4. Remove the connector from between the "A" and "X" terminals. Check the pointer to see that it is correctly set.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output To Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Front Lug of Gang Condenser	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	1-2	2nd I. F.	Adjust for maximum output. Then repeat adjustment.
					3-4	1st I. F.	
200 MMFD. Mica Condenser	"A" Terminal	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	5	Wave Trap	Adjust for minimum output using a strong generator signal.
200 MMFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	1500 KC	6	Broadcast Oscillator (Shunt)	Adjust for maximum output.
200 MMFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	Tune To 1500 KC Generator Signal	7	Broadcast Antenna	Adjust for maximum output.
200 MMFD. Mica Condenser	"A" Terminal	600 KC	Broadcast	Tune To 600 KC Generator Signal	8	Broadcast Oscillator (Series Pad)	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.
400 OHM Carbon Resistor	"A" Terminal	14 MC	Foreign	14 MC	9	Foreign Oscillator (Shunt)	Adjust for maximum output. Check to see if proper peak was obtained by tuning in image at approx. 13.1 MC. If image does not appear realign at 14 MC. with trimmer screw farther out. Recheck image.
400 OHM Carbon Resistor	"A" Terminal	14 MC	Foreign	14 MC	10	Foreign Antenna	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.

TO SET UP THE BUTTONS FOR AUTOMATIC TUNING:

1. Turn the set on and allow it to operate at least fifteen minutes before attempting to set up the buttons.
2. Make a list of the frequencies of six nearby stations to which you wish to set up the buttons. Be sure to select the most powerful nearby stations, since weak signals will not give as satisfactory results. Also be sure to select stations that fall within the frequency range of the buttons.
3. Be sure the antenna is connected before proceeding further. It will be impossible to set up buttons properly without an antenna.
4. With the range switch in the Broadcast (Manual) position (position B) tune in the station to be set up. Then turn the range switch to Automatic Position (Position A) and push in the button to be set up, being sure to select a button with the proper frequency range (see Fig. 1). ALWAYS TRY TO SELECT THE BUTTON WHICH CAN BE SET UP TO A STATION WHOSE FREQUENCY IS WELL WITHIN THE BUTTON'S OPERATING RANGE.
5. At the back of the chassis will be found 6 holes numbered to correspond to the numbers of the buttons. See Fig. 1. Adjust the large screw with the number corresponding to the number of the button you have pushed in, until the same station is again heard. Tune accurately, adjusting for deepest tone.
6. Now adjust the small screw (located adjacent to the large screw just adjusted) until maximum output is obtained. Make a final adjustment on the large screw, always tuning for deepest tone.
7. The set-up is now complete for this button. The remaining buttons may be set up in the same way.
8. Call letter tabs which may be used to label the buttons are supplied with this radio.

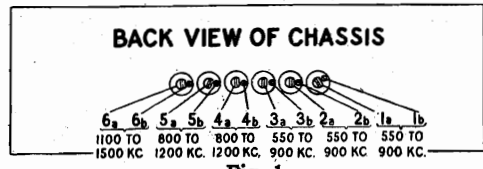


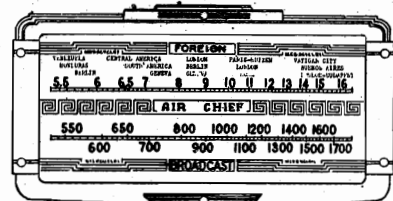


Fig. 1


MODEL S7404-2

(Serials Prefixed with A) FIRESTONE TIRE & RUBBER CO.
Alignment, Socket, Trimmers

FOR ALIGNMENT: An output meter and an accurately calibrated signal generator are required.

1. Connect the output meter across the voice coil or between the plate of the 6V6G output tube and ground in series with a .1 mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the "GND" terminal or the chassis.
3. Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure.
4. Check the pointer to see that it is correctly set.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output To Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Front Lug of Gang Condenser	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	1-2	2nd I. F.	Adjust for maximum output. Then repeat adjustment.
					3-4	1st I. F.	
200 MMFD. Mica Condenser	"Ant." Terminal	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	5	Wave Trap	Adjust for minimum output using a strong generator signal.
200 MMFD. Mica Condenser	"Ant." Terminal	1500 KC	Broadcast	1500 KC	6	Broadcast Oscillator (Shunt)	Adjust for maximum output.
200 MMFD. Mica Condenser	"Ant." Terminal	1500 KC	Broadcast	Tune To 1500 KC Generator Signal	7	Broadcast Antenna	Adjust for maximum output.
200 MMFD. Mica Condenser	"Ant." Terminal	600 KC	Broadcast	Tune To 600 KC Generator Signal	8	Broadcast Oscillator (Series Pad)	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.
400 OHM Carbon Resistor	"Ant." Terminal	16 MC	Foreign	16 MC	9	Foreign Oscillator (Shunt)	Adjust for maximum output. Check to see if proper peak was obtained by tuning in image at approx. 15.1 MC. If image does not appear realign at 16 MC. with trimmer screw farther out. Recheck image.
400 OHM Carbon Resistor	"Ant." Terminal	16 MC	Foreign	16 MC	10	Foreign Antenna	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.

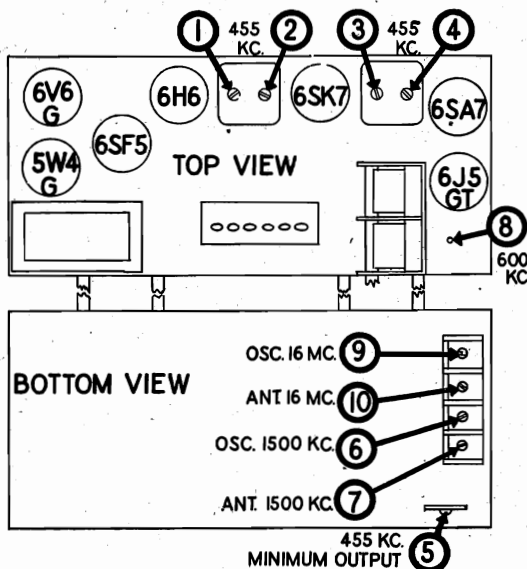

Part Number	Description	List Price
118749	Back—cabinet complete with antenna and terminal	\$1.65
118648	Band indicator	.22
118601	Band indicator lever	.03
113442	Bracket—for tuning eye	.16
114001	Clamp for dial scale retaining	.08
114955	Clamp—for dial cord	.01
110808	Clip—for tuning eye support	.14
112745	Clip—coil mounting	.01
112798	Clip—for mtg. wave trap coil	.01
113178	Cord—dial—for tone indicator (supplied in 4 ft. lengths)	.30
116948	Cord—dial drive (supplied in 6 ft. lengths)	.18
117057	Cord—drive (supplied in 2 ft. lengths)	.15
118663	Dial Gasket	.42
118547	Dial mounting plate & brackets	1.10
118700	Dial Scale	1.00
113402	Drum—dial cord drive	.56
114052	Escutcheon—dial	2.00
113890	Escutcheon—eye	.10
118626	Escutcheon for push buttons	.45
117087	Knob—for tuning or volume	.12
118605	Pointer	.14
118625	Push button	.50
81145	Retaining ring—for drive shaft	Per C
83674	Screw—self tapping 8 x 1/4	Per C
85040	Screw—No. 8 Hex. Hd.	.35
113191	Screw—special No. 8-32 x 1 1/4	.01
114914	Screw—special head for mtg. escutcheon	Per Dz.
85827	Set Screw—8-32 Square Head	.02
111085	Sleeve—felt for tuning eye	.03
85427	Socket—octal base (standard)	.15
110501	Socket—4 prong (for speaker)	.16
113025	Socket—octal base (with special ground)	.15
114117	Socket—dial lamp	.18
111090	Spacer—steel, mechanism mtg. to chassis	.02
113177	Spring—dial cord tension	.09
114046	Spring—for band indicator drive	.05
117315	Tab—station call letters	.55
85785	Terminal strip—antenna—ground	.15
117703	Tuning eye cable and socket	1.00
118606	Tuning shaft	.18
87590	Washer—steel; chassis mtg.	.01
111456	Washer—spring washer	Per C
111972	Washer—extension and tap (for mtg.)	.05
116530	Washer—(paper) for back of knobs	.005


PHONOGRAPH CONNECTIONS: Connect the wires from a phonograph record player to the left hand and middle terminals on the terminal strip nearest the middle of the chassis on the back of the chassis. Push the black sliding button on the back of the chassis to the right for phonograph or television reception. This switch must be pushed to the left for radio reception. Turn the volume knob on the record player to the maximum volume position and control volume by means of the volume control on the radio.

TELEVISION CONNECTIONS: Connect the wires from a television picture receiver to the right hand and middle terminals on the terminal strip. Operation will now be the same as for phonograph operation.


MODEL S7404-4
Schematic, Voltage

FIRESTONE TIRE & RUBBER CO.

Trimmers
Socket
Alignment
Tuner

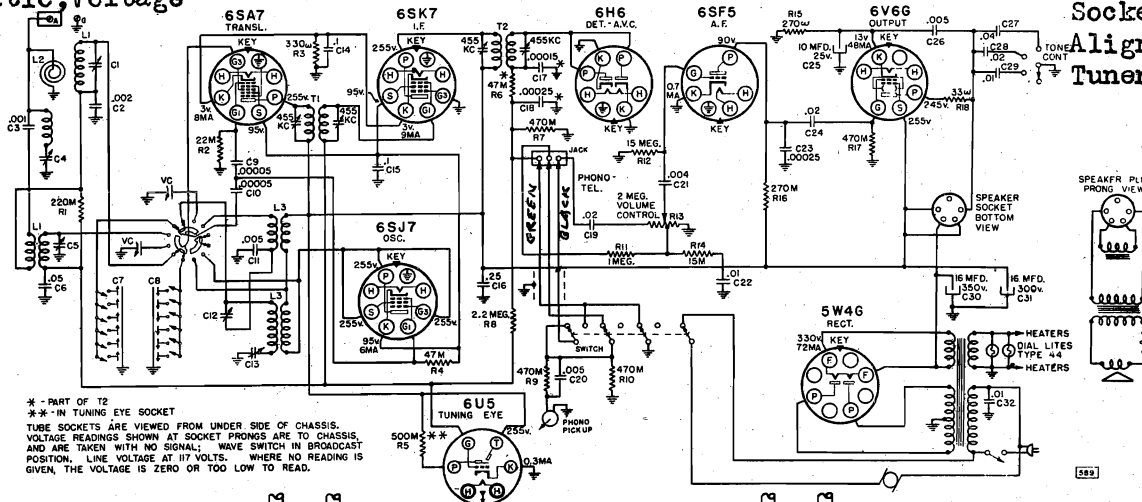

* - PART OF T2
** - IN TUNING EYE SOCKET
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS.
VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS,
AND ARE TAKEN WITH NO SIGNAL. WAVE SWITCH IN BROADCAST
POSITION. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS
GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

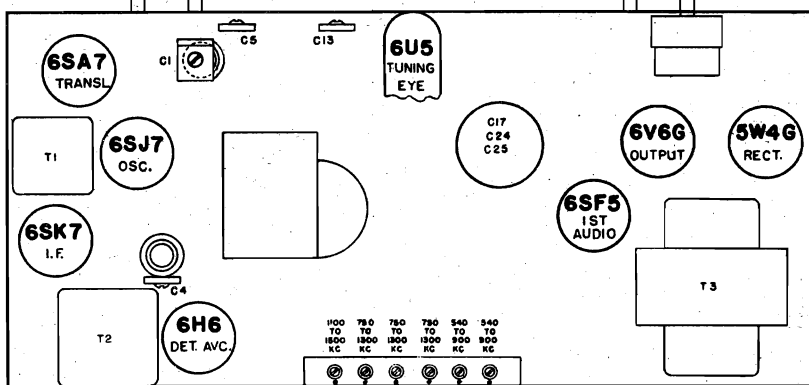

PRELIMINARY:

Output meter connections . . . LOCATIONS OF PARTS ON TOP OF CHASSIS . . . Across loud speaker voice coil
Generator ground lead connection . . . Receiver chassis
Dummy antenna value to be in series with generator output . . . See chart below
Connection of output lead . . . See chart below
Generator modulation . . . 30%, 400 cycles
Position of Volume Control . . . Fully on
Position of Tone Control . . . Brilliant
Position of Dial Pointer with variable fully closed . . . On mark to left of
550 kc calibration mark.

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION
Manual B.C.	Closed	455 kc	.1 mfd.	G3 of 6SA7	T2, T1	IF
Manual B.C.	600 kc	600 kc	.0002 mfd.	Ant. Term.	C4*	Wave Trap
Manual B.C.	Fully open	1730 kc	.0002 mfd.	Ant. Term.	C12**	Oscillator
Manual B.C.	1400 kc	1400 kc	.0002 mfd.	Ant. Term.	C1	Translator
Manual B.C.	600 kc	600 kc	.0003 mfd.	Ant. Term.	C13	Padder
Manual S.W.	15 mc (rock)	15 mc	400 ohms	Ant. Term.	C5	Translator

* The generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading instead of the usual maximum reading. If the frequency of an interfering station around 455 kc is known, the generator should be adjusted to the frequency of that station instead of to 455 kc.
** Mounted under the chassis.
Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.
The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

PUSH BUTTON TUNING

Each of the buttons will be set up in the following manner:
1. Turn the BAND knob to the MANUAL BROADCAST position and tune in the desired station.
2. Turn the BAND knob to PUSH BUTTON. Push in the button that is to be set to the desired station.
3. Turn the large screw of the corresponding adjustment until the station is tuned in; then the small screw for finer tuning. Repeat with the large screw for final adjustment. Use the Tuning Eye to secure exact tuning. The BAND knob can be turned back to MANUAL BROADCAST in order to check if the station is the desired one.
4. Fasten the proper call letters in the escutcheon.
Proceed in the same manner for the remaining buttons.

MODEL S7405-5

Alignment, Trimmers
Socket

FIRESTONE TIRE & RUBBER CO.

ALIGNMENT PROCEDURE

FOR ALIGNMENT an output meter and an accurately calibrated signal generator are required.


Connect the output meter across the voice coil or between the plate of the 1A5G output tube and ground through a 0.1 Mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)

Connect the ground lead of the signal generator to the black ground wire or the chassis.

Turn the volume control to the maximum volume position and keep it in this position while aligning.

With the gang condenser in full mesh, set the dial pointer to the low frequency edge of the dial scale.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output To Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Control Grid of 1A7G	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	1-2	2nd I. F.	Adjust for maximum output. Then repeat adjustment.
					3-4	1st I. F.	
200 MMFD. Mica Condenser	Antenna Lead (Blue Wire)	1500 KC	Broadcast	1500 KC	5	Broadcast Oscillator (Shunt)	Adjust for maximum output.
200 MMFD. Mica Condenser	Antenna Lead (Blue Wire)	1500 KC	Broadcast	Tune To 1500 KC Generator Signal	6	Broadcast Antenna	Adjust for maximum output.
200 MMFD. Mica Condenser	Antenna Lead (Blue Wire)	600 KC	Broadcast	Tune To 600 KC Generator Signal	7	Broadcast Oscillator (Series Pad)	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.
400 OHM Carbon Resistor	Antenna Lead (Blue Wire)	15 MC	Foreign	15 MC	8	Foreign Oscillator (Shunt)	Adjust for maximum output. Check to see if proper peak was obtained by tuning in image at approx. 14.1 MC. If image does not appear realign at 15 MC, with trimmer-screw farther out. Recheck image.
400 OHM Carbon Resistor	Antenna Lead (Blue Wire)	15 MC	Foreign	15 MC	9	Foreign Antenna	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.

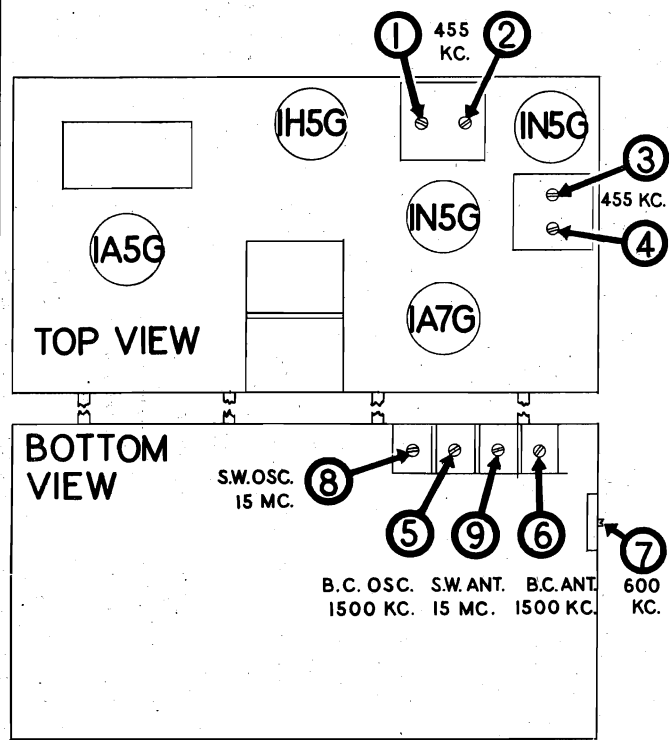


MISCELLANEOUS PARTS

Part Number	Description	List Price
119538	Cabinet Back	.45
114955	Clamp—for dial cord	.01
112745	Clip—coil mounting	.01
117057	Cord—drive (supplied in 2 ft. lengths)	.15
119523	Dial Scale	.40
112265	Escutcheon—with celluloid window	2.10
116411	Indicator lever assembly	.09
119644	Knob—push on	.18
119588	Pointer	.25
81145	Retaining ring—for drive shaft	Per C
83624	Screw—self tapping 8 x 1/4	.01
113191	Screw—special No. 8-32 x 1 1/8	.01
119587	Screw—No. 2 x 3/8 Phillips Round Head	.02
85827	Set Screw—8-32 Square Head	.02
119549	Shaft—extension for volume control	.25
116392	Shield base—tube	.03
116395	Shield—tube	.08
85427	Socket—octal base (standard)	.15
110501	Socket—4 prong (for speaker)	.16
111090	Spacer—steel mounting	.02
113169	Spring—for indicator lever	.01
114968	Spring—dial cord tension	.03
111972	Washer—extension and top (for mounting)	.05
111456	Washer—spring washer	Per C .50


FIRESTONE TIRE & RUBBER CO.

MODEL S7407-6
Schematic, Voltage
Socket, Coils, Parts

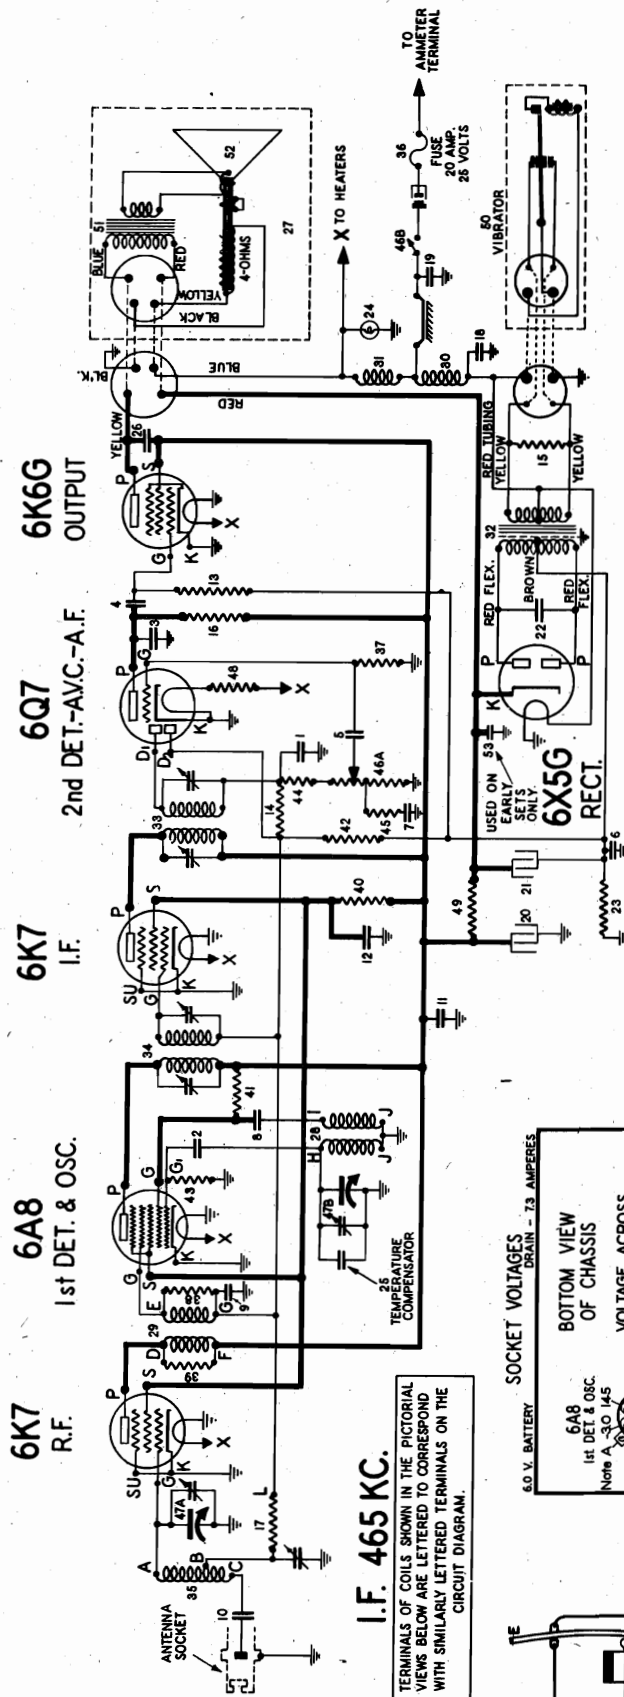


PARTS LIST

DIAGRAM NUMBER	PART NUMBER	DESCRIPTION	LIST PRICE
1	85539	Condenser - mica 260 mmfd.	.20
2	85783	Condenser - mica 110 mmfd. (10%)	.20
3	85754	Condenser - mica .001 mfd.	.25
4	86026	Condenser - paper .02 mfd. 400 V.	.25
5-6	86029	Condenser - paper .004 mfd. 400 V.	.25
7-8-53	86030	Condenser - paper .01 mfd. 400 V.	.25
9	86189	Condenser - paper .05 mfd. 200 V.	.25
10	86205	Condenser - mica 2100 mmfd.	.35
11	86682	Condenser - paper .1 mfd. 400 V.	.25
12	89421	Condenser - paper .1 mfd. 200 V.	.25
13	112971	Resistor - insulated 470,000 ohms 1/4 watt	.15
14	112973	Resistor - insulated 1.5 meg. 1/4 watt	.15
15	112976	Resistor - wire wound 220 ohms 1/2 watt (10%)	.15
16	112987	Resistor - insulated 220,000 ohms 1/4 watt	.15
17	112993	Resistor - carbon 470,000 ohms 1/10 watt	.12
18-19	113561	Condenser - paper .5 mf. 150 volt	.38
20-21	114258	Condenser - elect. 8 mf. 450 volt	.98
22	114277	Condenser - oil filled .01 mfd. 2000 volts	.24
23	114334	Resistor - wire wound 360 ohms 2 watts (10%)	.20
24	114401	Dial Lamp - 6 volt	.18
25	114499	Condenser - temp. comp. for osc.	.48
26	114528	Condenser - paper .005 mfd. 600V.	.15
27	U-115046	Speaker - dynamic 8"	5.95
28	116025	Oscillator coil	1.40
29	116025	R.F. Coil & Shield Assembly	1.40
30	116032	Choke coil in "A" supply (long)	.35
31	116035	Choke coil in "A" supply (short)	.25
32	116038	Transformer - power (6 volt)	3.50
33	116040	Transformer - 2nd I.F.	1.00
34	116042	Transformer - 1st I.F.	1.25
35	116045	Ant. Coil - with shield & brkt.	1.25
36	116049	Fuse - 20 amp. 25 volt.	.05
37	116050	Resistor - insul. 10 meg. 1/4 W.	.12
38	116052	Resistor - carb. 33,000 ohm 1/10W	.12
39	116054	Resistor - carb. 27,000 ohm 1/10W	.12
40	116054	Resistor - carb. 22,000 ohm 1/4 W.	.12
41	116055	Resistor - carb. 22,000 ohm 1/4 W.	.12
42	116057	Resistor - carb. 10 meg. 1/4 W. (10%)	.12
43-44-45	116058	Resistor - carb. 47,000 ohm 1/4 W.	.12
46A	48B-116125	Volume control - 500,000 ohms with off-on switch	1.00
47A	47B-116127	Condenser - variable 5-30 p.f.	2.75
48	116166	Resistor - M.M. 3 ohms 1/2 watt	.15
49	116167	Resistor - M.M. 1,500 ohms 1 watt	.15
50	116202	Vibrator	3.00
51	U-116207	Output transformer for U-115046 speaker	1.70
52	U-116208	Cone & Voice coil assembly for U-115046 speaker	1.50
53	88030	Condenser - paper .01 mfd. 400 V.	.25

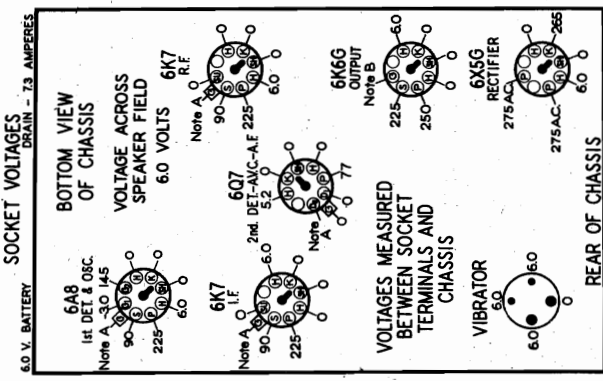

USE A HIGH RESISTANCE VOLTMETER OR A 1000 OHMS PER VOLT.
NOTE A: - THE ACTUAL BIAS ON THESE GRIDS AND DIODE PLATE (D2) IS 3 VOLTS. DUE TO THE HIGH RESISTANCE IN THIS BIAS SUPPLY CIRCUIT IT IS NOT POSSIBLE TO MEASURE THE ACTUAL VOLTAGE UNLESS A VACUUM TUBE VOLTMETER IS AVAILABLE.
NOTE B: - THE BIAS ON THIS GRID IS -10 VOLTS MEASURED ACROSS RESISTOR NO. 25.

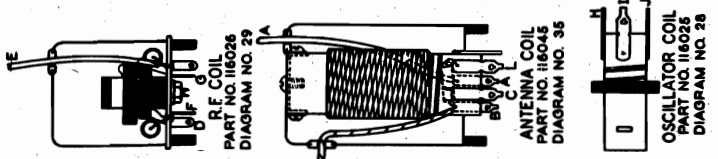

MODEL S7407-6

Alignment, Trimmers
Parts

FIRESTONE TIRE & RUBBER CO.


ALIGNMENT PROCEDURE

FOR ALIGNMENT: An output meter and an accurately calibrated signal generator with a tuning range from 465 KC. to 1400 KC. are required.

- 1- Connect the output meter across the speaker voice coil or between the plate of the 6K6G output tube and ground through a .1 mfd. condenser. The more sensitive type meter should be connected across the voice coil.
- 2- Connect the ground lead of the signal generator to the receiver chassis and leave it connected in this manner throughout the entire alignment procedure.
- 3- Turn the volume control to the maximum volume position.
- 4- With the gang condenser in full mesh, set the pointer to the last division on the low frequency end of the dial scale. This can be done by releasing the clip holding the pointer to the dial cord and slide the pointer to the correct position. Then retighten the pointer clip on the dial cord.

DUMMY ANT. IN SERIES WITH SIGNAL GENERATOR	CONNECTION OF SIG. GEN. OUTPUT TO RECEIVER	SIGNAL GENERATOR FREQUENCY	RECEIVER DIAL SETTING	TRIMMER NUMBER	TRIMMER DESCRIPTION	TYPE OF ADJUSTMENT
.1 MFD. CONDENSER	CONTROL GRID OF 6A8	465 KC.	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	1-2	2ND I. F.	ADJUST FOR MAXIMUM OUTPUT. THEN REPEAT ADJUSTMENT.
				3-4	1ST I. F.	
WHEN ALIGNING TRIMMERS NO. 5, 6 AND 7 CONNECT THE SIGNAL GENERATOR OUTPUT TO THE ANTENNA LEAD-IN PLUG ON THE LEFT SIDE OF THE RECEIVER CASE WITH A 100 MMFD. (APPROX.) MICA CONDENSER IN SERIES WITH GENERATOR OUTPUT.		1400 KC.	TUNE TO 1400 KC GENERATOR SIGNAL	5	OSCILLATOR (Shunt) CONDENSER	ADJUST FOR MAXIMUM OUTPUT.
				6	ANTENNA (Shunt) CONDENSER	ADJUST FOR MAXIMUM OUTPUT.
100 MMFD. TO SIG. GEN. --- --- TO ANT. PLUG		600 KC	TUNE TO 600 KC GENERATOR SIGNAL	7	ANTENNA COMPENSATOR (Series Condenser)	ADJUST FOR MAXIMUM OUTPUT. TRY TO INCREASE OUTPUT BY DETUNING TRIMMER AND RETUNING RECEIVER DIAL UNTIL MAXIMUM OUTPUT IS OBTAINED.
				IMPORTANT: IF THIS CONDENSER IS OMITTED THE ALIGNMENT WILL BE INCORRECT.		

AFTER THE SET IS INSTALLED IN THE CAR. TUNE IN A FAIRLY WEAK STATION NEAR 600 KC. AND ADJUST TRIMMER 7 FOR MAXIMUM OUTPUT.

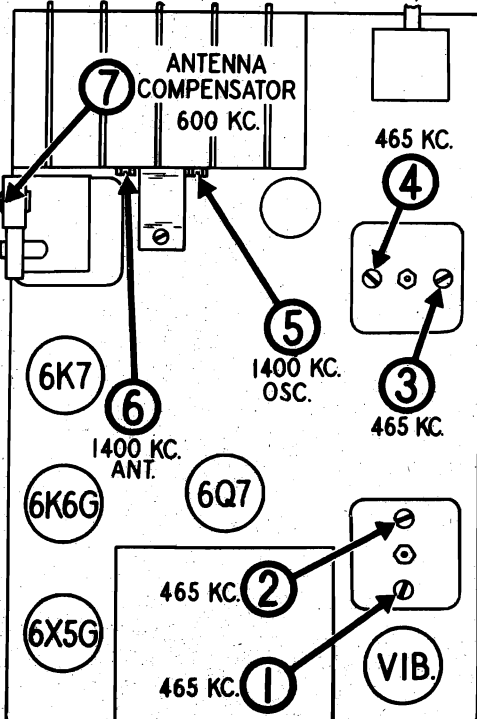

PARTS LIST


PART NUMBER	DESCRIPTION	LIST PRICE	PART NUMBER	DESCRIPTION	LIST PRICE
INSTALLATION PARTS					
116155	"A" Cable with fuse hous.	.30	116217	Screw for mtg. nose esc.	.06
116158	"A" Cable (chassis end)-	.28	116218	Speed Nut - for nose esc.	.01
83319	Fuse insulator tube---	.02	114339	Trunk clamp-upper sect.-	.16
77650	Nut for mtg. back of rec.	.02	114341	Trunk clamp-lower sect.-	.08
61086	Lockwasher-for mtg. front bracket---	.25	DIAL AND MISCELLANEOUS PARTS		
79056	Lockwasher-1/4" for mtg. back of receiver doz.	.08	113170	Adjusting lug-for shafts-	.01
116269	Lockwasher - double edge for rear brkt. mtg.--	.01	110087	Antenna lead receptacle--	.03
116225	Mtg. Bracket - for rear-	.35	116171	Cable & Plug for spkr----	.30
116285	Mtg. Brkt.R.H.for front-	.10	114253	Clamp - for vibrator-----	.12
116286	Mtg. Brkt.L.H. for front-	.10	112745	Clip - coil mounting-----	.01
116264	Mtg. Bolt (1/4-20 X 1 1/2)-	.02	113178	Cord - dial----- (4 ft.)	.30
45569	Nut-#10-32 for front brkt	.01	116148	Dial Drive Drum & Pinion-	1.00
77854	Screw-10-32 for frt.brkt.	.08 dz	116153	Dial Frame & Pulley-----	.50
NOISE SUPPRESSION PARTS					
110236	Anti Rattle Clips-----	.05	116150	Dial Scale - glass-----	.28
110402	Braided Ground Bond (10")	.22	116200	Knob-for tun. or vol.-----	.10
110403	Braided Ground Bond (6")	.18	116346	Mechanical Tuner Assem.---	2.50
110410	Cond.-.5 mfd. 100 volt--	.35	12349	Nut for spkr. mtg.---Per C	.45
88429	Distributor suppressors---	.35	116109	Pointer - for dial-----	.06
88430	Dome light filter-----	1.00	116201	Push button-----	.10
88422	Ford distributor cond.---	.75	116117	Retainer-for dial (large)	.02
88350	Gen.cond.-.5 mfd. 150 V.	.75	116118	Retainer-for dial (small)	.01
CASE SECTIONS AND ASSOCIATED PARTS					
116121	Bottom cover-(spkr.case)	1.50	81145	Retaining ring-----Per C	.50
116214	Escutcheon - for nose---	.65	114327	Spring-push button key---	.04
116169	Grill - for speaker-----	.30	111403	Set Screw - fluted head---	.12
116213	Nose for receiver case---	.60	116243	Shaft - for push buttons---	.08
110430	Nose Mounting screws---	.01	116124	Socket -for dial lamp---	.15
116120	Receiver case - less bottom cover-----	2.00	116168	Speaker plug - male end---	.20
			113177	Spring - for dial cord---	.09
			114356	Tab - cellulod-----Per Dz	.08
			116268	Tabs - call letters-----Set	.50
			110237	Tube shield cap-----	.06
			114611	Tube socket - octal type---	.15
			114612	Tube socket (spec. grd.)---	.15
			116154	Tuning shaft-----	.08
			8F262	Vibrator socket(4 prong)-	.14

FORM NO. 8958 PRINTED IN U.S.A.


MODEL S7407-8
Alignment

FIRESTONE TIRE & RUBBER CO.

MODEL S7407-5, Late
Schematic, Voltage
Socket, Trimmers
Alignment, Assembly

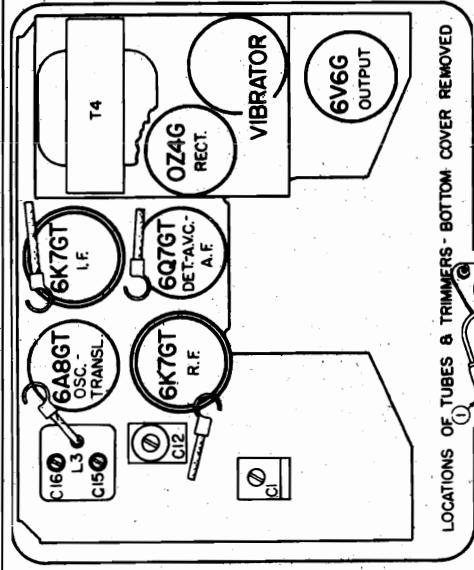


CONNECTING THE RECEIVER

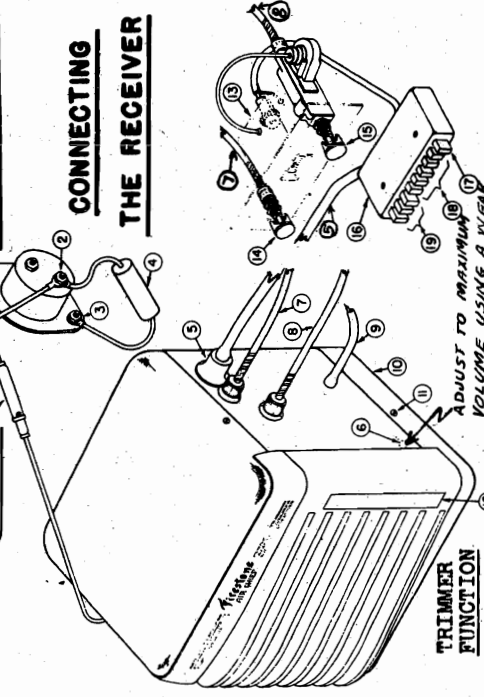

11. Screw Holding Bottom Cover.
13. Cover Over MONOMATIC TUNING Adjustments. (SEE INDEX FOR SETTING TUNER)
13. Manual Tuning Control.
14. On-Off Switch and Volume Control Knob.
15. Station Selector Knob.
16. Push Button Tuning Button.
17. MONOMATIC TUNING Button.
18. Station Call Letter Indicators.
19. TRIMATIC Tone Control Buttons.

1. Fuse Container.
2. Connection of Ammeter.
3. Grounding of Ammeter Condenser.
4. Ammeter Condenser.
5. Push Button and Tone Control cable.
6. Hole for Antenna Matching Adjustment.
7. Volume Control Cable.
8. Station Selector Cable.
9. Antenna Leadin Cable.
10. Bottom Cover, Removable for Tube Re- placement.

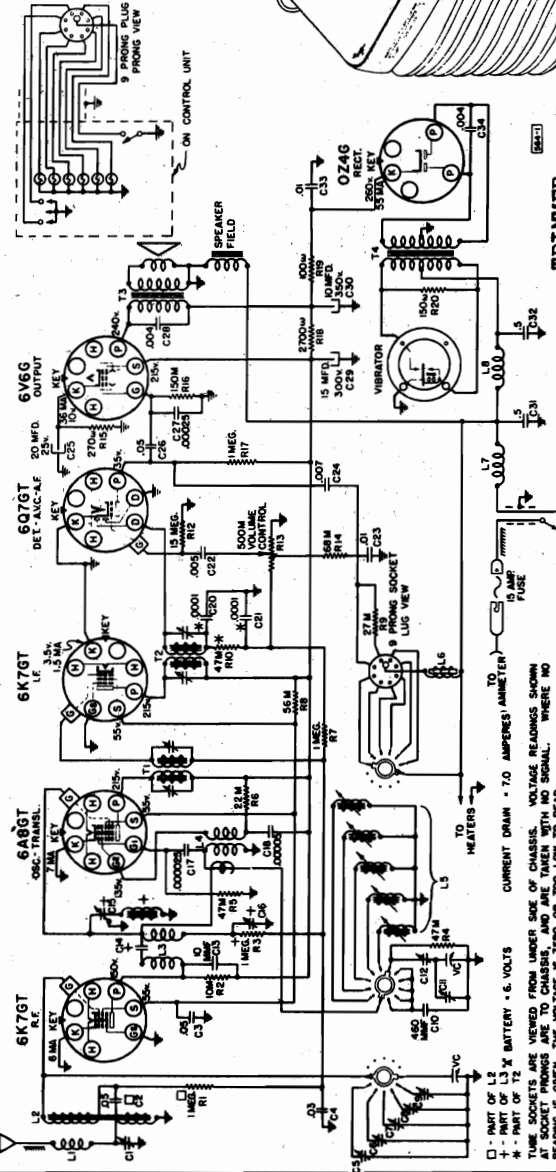

TRIMMER ADJUSTMENTS (IN ORDER SHOWN)

TRIMMER	FUNCTION
T1	IF Wave Trap
T2	Oscillator
C16*	Image Rejector
C11	Padder
C15*	Oscillator
C12	Antenna
C7	Padder
C9	
C1	
C12	

GENERATOR CONNECTION S-7407-5 S-7407-8

GENERATOR CONNECTION	TRIMMER
RF Grid	T2, T1
RF Grid	C16*
Ant. Conn.	C7*
Ant. Conn.	C6*
Ant. Conn.	C9
Ant. Conn.	C7
Ant. Conn.	C1
Ant. Conn.	C9

ALIGNMENT PROCEDURE FOR TUNER SEE PAGE 10-2, VOL. X

DUMMY ANTENNA	GENERATOR FREQUENCY
.1 mfd.	455 kc
.1 mfd.	455 kc
.00008 mfd.	1520 kc
.00008 mfd.	3430 kc
.00008 mfd.	540 kc
.00008 mfd.	1520 kc
.00008 mfd.	1400 kc
.00008 mfd.	600 kc


POSITION OF VARIABLE

Closed	455 kc
Closed	455 kc
Open	1520 kc
Open	3430 kc
Closed	540 kc
Open	1520 kc
Open	1400 kc
600 kc (rock)	600 kc

The receiver must be in its case during alignment.
* The signal generator should be adjusted for high output and the trimmer should be adjusted for minimum response.
The alignment procedure should be repeated in the original order, step by step, to insure greater accuracy.
Always keep the output power from the generator at its lowest possible value to prevent the AVC of the receiver from interfering with accurate alignment, except as noted by (*) above.



MODEL S7407-8
Schematic, Socket, Voltage
Trimmers, Assembly

FIRESTONE TIRE & RUBBER CO.

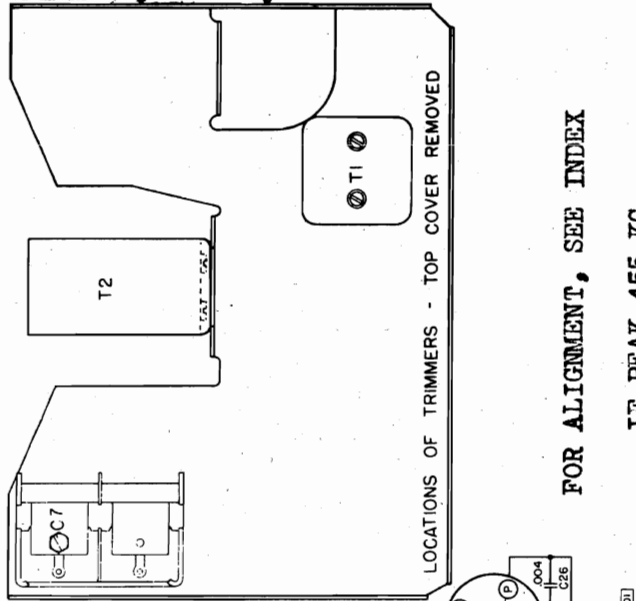


FOR ALIGNMENT, SEE INDEX

IF PEAK 455 KC

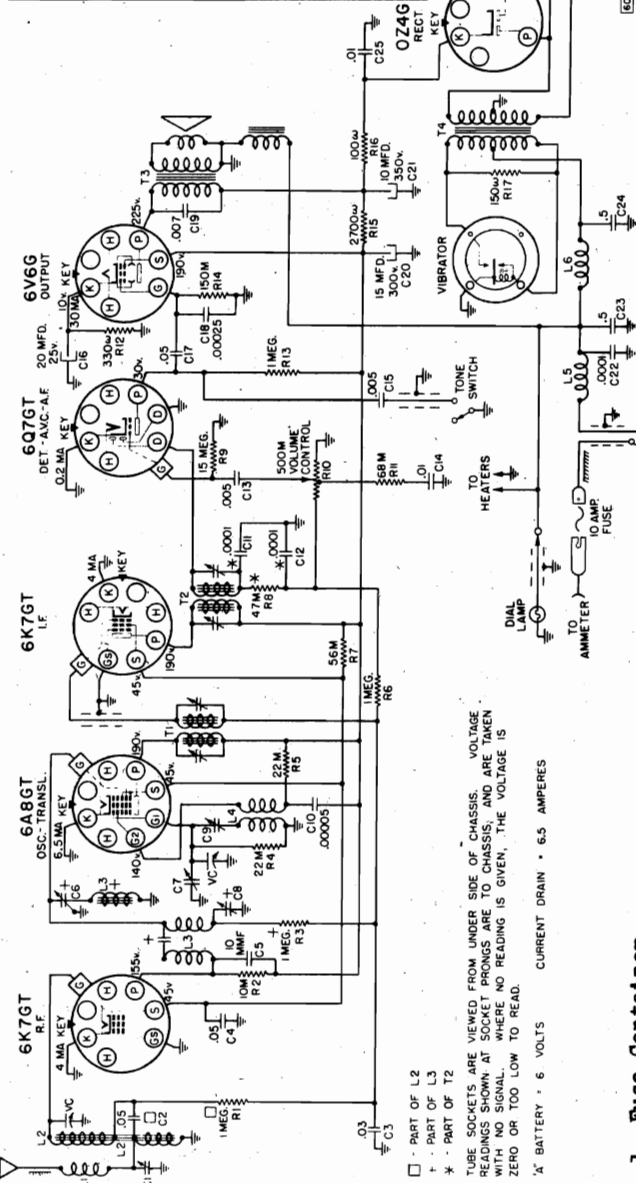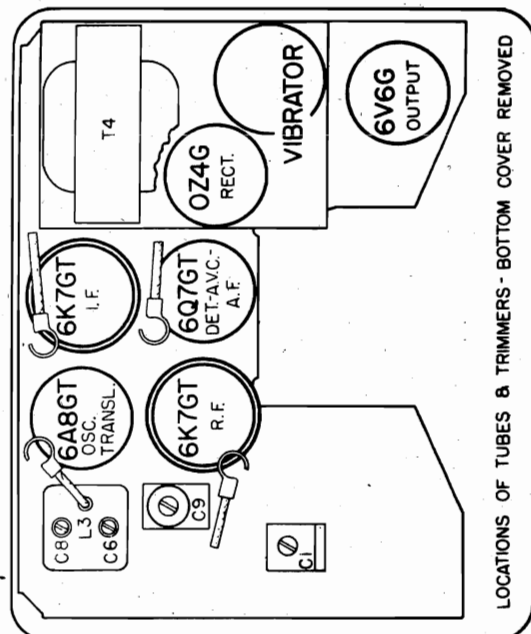

601

1. Fuse Container.
2. Connection to Ammeter.
3. Grounding of Ammeter Condenser.
4. Ammeter Condenser.
5. Dial Light Connection.
6. Volume Control Cable.
7. Station Selector Cable.
8. Tone Control Switch.
9. Hole for Antenna Matching Adjustment.
10. Screw Holding Bottom Cover.
11. Bottom Cover, Removable for Tube Replacement.
12. Antenna Lead-in Cable.
13. On-Off Switch and Volume Control Knob.
14. Tuning Control Unit.
15. Station Selector Knob.

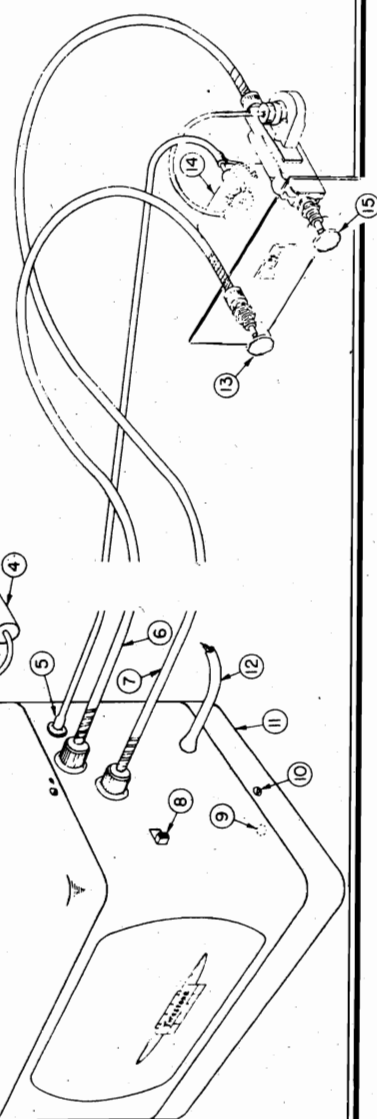

□ - PART OF L2
* - PART OF T2
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.
* BATTERY - 6 VOLTS
CURRENT DRAIN - 6.5 AMPERES

FIRESTONE TIRE & RUBBER CO.

MODEL S7425-3
Schematic, Voltage
Chassis, Socket
Trimmers


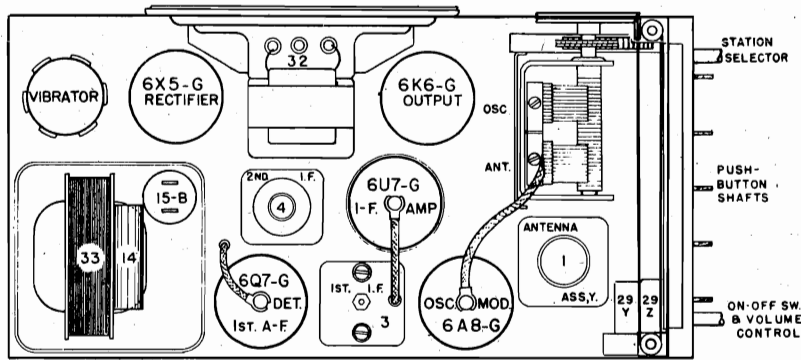


Fig. 2. Top View

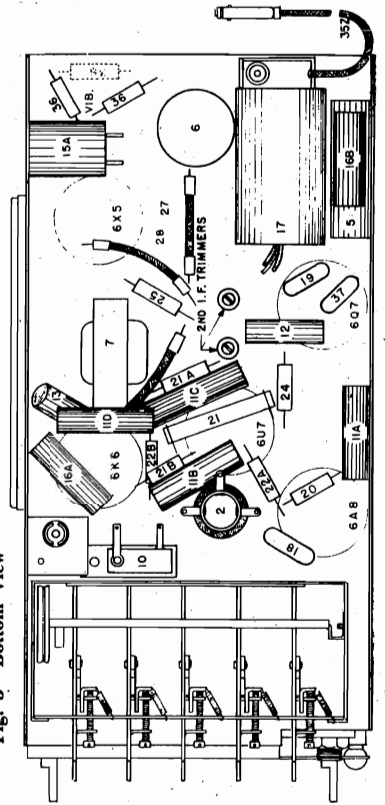

MODEL S7425-3
Alignment, Tuner
Dial Data, Parts

FIRESTONE TIRE & RUBBER CO.

5) Thread the cord through the eyelet in the pulley and extend one side up and over the vertical brass pulley. Loop this lead around the horizontal idler pulley at the left-hand side of the dial and then around the idler pulley at the right-hand side of the dial and then over the top of the large drive pulley. The tension on the spring should be sufficient to stretch it to within approximately 1/2" of the eyelet.

(6) With the gang closed, move the pointer to the extreme right-hand end of the dial. Press the cord into the slots in the back of the pointer and check to see that the pointer travels from one end of the dial to the other as the gang is opened and closed. It may be advisable to place some Aratex or other liquid adhesive on the cord where it fits into the pointer.

REPLACING THE DRIVE CORD

1.—Remove the broken cord and the cord tension in the rocker plate pulley from the inside. Pull the cord through until the tension spring is pulled into the pulley, then hook the free end of the spring over the catch in the pulley in the side opposite the eyelet.

(4) Open the condenser gang all the way.

(5) Pull all but approximately 4 1/2" of the cord around through the eyelet. Loop the 4 1/2" end of the cord around the lower half of the pulley.

(6) Loop the long end of the cord over the top of the pulley and back over the brass idler pulley to the drive shaft. Continue the cord around the drive shaft, threading from the inside and over the top. Wrap four complete turns of the cord around the drive shaft and continue the cord over the top of the rocker plate pulley.

(7) Pull on the short end of the cord until the tension spring in the pulley is stretched to within 1/8" of the eyelet. Maintain this tension and tie a knot in the two ends of the cord over the catch which holds the spring. Loop the cord over the spring catch so that the knot is turned in. (A drop of bees' wax on the knot would be an added protection against coming un-

4.—Take the long end of cord and place on small brass idler pulley on the right side of the dial bracket. Loop around pulley in a clockwise direction and then around idler pulley on the left side of the dial bracket, continue on over the top of the large pulley and down to the drive shaft. From the under side of drive shaft wrap 2 turns around shaft in a counter-clockwise direction, bringing cord up on the left side of large pulley. Be sure the cord is on all the pulleys then tie a knot, pulling with sufficient force to stretch the tension spring to within 1/8" inch of the edge of pulley.

5.—Close gang and place the pointer on the cord at the extreme left end of the dial. Check to see that pointer travels full length of the dial. It may be advisable to place some "ARATEX" or other liquid adhesive on cord where it fits into the pointer.

When referring to manually tuned model disregard all parts listed between items 7 and 11 and all parts listed under the heading Miscellaneous Mechanical Parts.

maximum volume in the speaker.

REPLACING DIAL DRIVE CORDS

Two dial drive cords are used and should the innermost cord break, it will be necessary to remove the outer cord and large pulley before the inner cord can be replaced.

To replace the inner cord:

(1) After removing the broken cord, place the chassis on end with the push buttons "up" and the speaker toward you.

(2) Thread an 18" length of drive cord through the hook on one end of the tension spring which was removed from the pulley on the end of the push button rocker plate.

(3) Insert both ends of this cord through the eyelet in the rocker plate pulley from the inside. Pull the cord through until the tension spring is pulled into the pulley, then hook the free end of the spring over the catch in the pulley in the side opposite the eyelet.

(4) Open the condenser gang all the way.

(5) Pull all but approximately 4 1/2" of the cord around through the eyelet. Loop the 4 1/2" end of the cord around the lower half of the pulley.

(6) Loop the long end of the cord over the top of the pulley and back over the brass idler pulley to the drive shaft. Continue the cord around the drive shaft, threading from the inside and over the top. Wrap four complete turns of the cord around the drive shaft and continue the cord over the top of the rocker plate pulley.

(7) Pull on the short end of the cord until the tension spring in the pulley is stretched to within 1/8" of the eyelet. Maintain this tension and tie a knot in the two ends of the cord over the catch which holds the spring. Loop the cord over the spring catch so that the knot is turned in. (A drop of bees' wax on the knot would be an added protection against coming un-

To replace the outer cord:

(1) Place the chassis in a horizontal position with the push buttons to the left and the speaker toward you.

(2) Close the condenser gang and mount the large drive pulley on the shaft. Place the pulley on the condenser shaft so that the shaft is flush with the outside of the pulley bushing and the eyelet in the pulley is horizontal with the shaft and toward the dial.

(3) Cut a 22" length of drive cord and tie a knot 1/2" from the two ends.

(4) Hook one end of the tension spring over the catch provided in the pulley and hook the other end over the drive cord at the knot.

The following are parts to fill the deletions to complete Parts List

disregard all parts listed between items 7 and 11 and all parts listed under the heading Miscellaneous Mechanical Parts.

Item No.	Part No.	Description
8	C49-33001	2 Section Gang Condenser
	C-50455B	Glass Dial Face
	MC23-50500	Dial Support Bracket (Riveted to chassis)
	W-43549	Retaining Washer (Drive Shaft)
	W-30512	Drive Shaft
	G9-43564	Pulley & Hub assembly
	W-50054B	Drive Cord (30 in.)
	W-50105	Ant. Comp. Condenser
	W-50503B	Felt (Dial window)
	D-50503B	Case (Rear section)
C-50504B	Case (Front section)	
		Knob (2 Required)

The following are parts to fill the deletions to complete Parts List

Item No.	Part No.	Description
9		

The following are parts to fill the deletions to complete Parts List

Item No.	Part No.	Description
16B		

in place. Connect the ground lead from the signal generator to the receiver chassis frame. KEEP THE GENERATOR LEADS AS FAR AS POSSIBLE FROM THE GRID LEADS OF THE OTHER SCREEN GRID TUBES.

(b) Adjust the station selector so that the rotor plates of the tuning condenser are completely disengaged and turn Vol. Cont. to maximum position (RIGHT).

(c) Set the signal generator to 455 kilocycles.

(d) Adjust both 2nd I. F. trimmer condensers for maximum output. Fig. 3.

(e) Transfer generator lead to top of 6A8G Osc. Mod. tube, leaving the tube's grid clip in place.

(f) Adjust both trimmers located on the 1st I.F. transformer for maximum output.

(g) Repeat operations (d) and (f) for more accurate adjustments.

IN ORDER TO PREVENT A. V. C. ACTION ALWAYS USE THE LOWEST SIGNAL GENERATOR OUTPUT THAT WILL GIVE A REASONABLE OUTPUT METER READING.

2. Aligning R-F Amplifier.

To obtain the greatest gain from the R. F. amplifier, the capacity of the dummy antenna should be equal to the capacity of the antenna with which the receiver is to be used. The capacities of auto radio antennas range from 65 mmf. (.000065 mf.) to 250 mmf. (.00025 mf.), depending upon the size and type. If the receiver is adjusted for maximum efficiency when used with an antenna having a high capacity, it will not operate at its maximum efficiency on an antenna having a much lower capacity and vice versa.

(b) If the receiver is to be used with a whip or streamlined antenna, the output lead from the signal generator should be connected through a .0001 mf. condenser to the "Ant" connection of the receiver. If a large antenna such as a running board type or built-in top antenna is to be used, a .0002 mf. condenser should be used in place of the .0001 mf. condenser.

(c) Set the signal generator to 1400 kilocycles.

(d) Adjust the station selector to 140 on the dial.

(e) Adjust the trimmer on the "OSC" section of the tuning condenser for maximum output.

(f) Adjust the trimmer on the "ANT" section of the tuning condenser for maximum output.

(g) Readjust the station selector for maximum output. DO NOT READJUST THE OSC. TRIMMER.

(h) Repeat operation (e) for more accurate adjustment.

3. Adjusting Antenna Compensating Condenser.

(a) Set the signal generator to 600 kilocycles.

(b) Tune in the 600 kilocycle signal with the station selector for maximum output.

(c) Adjust the antenna compensating condenser, located between the control knobs on the front of the chassis, for maximum output.

(d) Repeat operations (b) and (c) alternately until no further improvement can be obtained.

(e) Set the signal generator to 1400 kilocycles again.

(f) Tune in the 1400 kilocycle signal with the station selector for maximum output.

(g) Readjust the trimmer on the "Ant" section of the tuning condenser for maximum output.

It will be necessary to adjust the antenna compensating condenser to the car antenna after the receiver has been installed in the car.

(a) After the installation is complete, tune in a WEAK station between 55 and 65 on the dial.

(b) Adjust the antenna compensating condenser for

SPECIFICATIONS

This model is a single unit five-tube superheterodyne receiver. It incorporates an unusual push button tuning system of rugged mechanical design that is positive, accurate, and easy to adjust and operate. A highly efficient superheterodyne circuit employs five tubes to the utmost advantage as follows: one 6A8G as an oscillator and mixer or modulator, one 6U7C as an intermediate frequency amplifier, one 6Q7C as detector, A. V. C. and 1st A. F. amplifier, one 6K6C as power output amplifier and a 6X5G as a rectifier. A full wave vibrator is used. Bias for the 6A8G and 6U7C tubes is obtained across item 27 (60 ohm resistor), for the 6Q7C tube across item 28 (40 ohm resistor), and for the 6K6C across the "B" Filter choke, item 7, and items 27 and 28.

TUBES AND VOLTAGE LIMITS

The following table gives the functions of the tubes used, together with the voltage readings between the tube, socket contacts and the receiver chassis. Voltage readings taken with a 1000 ohm per volt, 500 volt voltmeter (except filaments) with receiver in operating condition and no signal input. The filament voltages should be measured with an accurate low range D.C. voltmeter (approximately 0 to 10 volts). Voltage limits may vary plus or minus 10% of values given.

SOCKET VOLTAGE LAYOUT

The socket layout in the illustration Fig. 5, shows the voltage readings taken between the tube prongs and receiver chassis. It will be noted that certain unused terminals are used as junction blocks while others are not used at all. All readings are taken with the receiver in operating condition and no signal input.

SETTING PUSH BUTTONS

Should it become necessary to realign the circuits of the receiver, it may also be necessary to reset the push buttons. The push buttons may be quickly and accurately set, either with the receiver in the case or with the case removed.

Insert a small screw driver in the hole through each push button and loosen (do not remove) the set screw in the bottom of the hole. By means of the conventional tuning knob, tune in AS ACCURATELY AS POSSIBLE the favorite station having the highest frequency—that is, the station nearest the left-hand end of the dial. Completely depress and hold the No. 1 push button on the left and tighten the set screw SECURELY.

The push button tuning system is now correctly set for the 1st station. Follow through with this same procedure, setting the other four stations in the order of their frequency (kilocycles).

ALIGNMENT PROCEDURE

All the circuits in this receiver are very accurately adjusted at the factory and normally should need no further adjustment. However, if it is definitely known that an adjustment is necessary the circuits can best be properly aligned with the use of a modulated signal generator and an output meter.

CONNECTING OUTPUT METER

Connect the output meter to P and S of the 6K6G output tube. Be sure the meter is protected from D.C. by connecting a condenser (.1 mfd. or larger—not electrolytic) in series with one of the leads.

1. Tuning I-F Amplifier To 455 Kilocycles.

(a) Connect the output of the signal generator through a .02 mfd. or larger, condenser to the top cap of the 6U7C I. F. tube, leaving the tube's grid clip

FIRESTONE TIRE & RUBBER CO.


MODEL S7425-3
Voltage, Parts
Tuner Assembly

PARTS LIST

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description
1	G167-32000	Ant. Coil
2	G167-32002	Osc. Coil
3	G185-32004	1st I-F Assy., 455 Kc.
4	G186-32004	2nd I-F Assy., 455 Kc.
5	G19-32977	Motor Noise Check
6	G27-28067	"A" Filter Choke
7	G16-29535	"B" Filter Choke
8	G50-33001	2 Section Gang Cond.
9	—50054B	Ant. Compensating Cond.
	C-50623	Glass Dial Face
	W-50545	L. H. Dial Mtg. Clip
	W-50560	R. H. Dial Mtg. Clip
	W-50517B	Dial Mask (Maroon)
	W-50518	Pointer
	B-78	Screw—Dial Clip Mtg.
	MG23-50550	Dial Mtg. Bracket Assy. (Riveted to Chassis)
	MG28-50550	Manual Drive Shaft Brkt. Assy.
	G8-43564	Pulley and Hub Assy.
	W-23877	Set Screw—Hub
	—41582	Drive Cord—40 Inches
	W-50590	Spring—Cord Tension—Large Pulley
	W-43561	Spring—Cord Tension—Small Pulley
	W-50524B	Manual Drive Shaft
10	G3-50369	Temp. Compensating Cond. 30
11A	W-32380	Condenser, .05 Mf. 200 V.
11B	W-32380	Condenser, .05 Mf. 200 V.
11C	W-32380	Condenser, .05 Mf. 200 V.
11D	W-32380	Condenser, .05 Mf. 200 V.
12	W-37226	Condenser, .02 Mf. 160 V.
13	W-23191A	Condenser, .01 Mf. 400 V.
14	W-50203	Condenser, .0065 Mf. 1,000 V.
15A	W-50161	Condenser, .5 Mf. 120 V.
15B	W-50161	Condenser, .5 Mf. 120 V.
16A	W-50105	Condenser, .1 Mf. 160 V.
16B	W-50105	Condenser, .1 Mf. 160 V.
17Z	W-50528	Condenser, 4. Mf. 350 V.
17Y	W-50528	Condenser, 4. Mf. 350 V.
	W-50224	Cond. Clamp
18	G1-34002	Condenser, .00025 Mf. Molded
19	G3-34002	Condenser, .0005 Mf. Molded
20	—35600	Resistor, 100,000 Ohm 1/4 W.
21A	—35601	Resistor, 300,000 Ohm 1/4 W.
21B	—35601	Resistor, 300,000 Ohm 1/4 W.
22A	—36322	Resistor, 500,000 Ohm 1/4 W.
22B	—36322	Resistor, 500,000 Ohm 1/4 W.
23	—23616	Resistor, 15,000 Ohm 1 W.
24	—35602	Resistor, 1. Megohm 1/4 W.
25	—35927	Resistor, 2. Megohm 1/4 W.
26	—50641	Resistor, 750 Ohm 1/2 W.
27	—50643	Resistor, 60 Ohm 1/2 W.
28	—50642	Resistor, 40 Ohm 1/2 W.
		Mounting Parts
	W-38038D	Distributor Suppressor
	W-29754C	Generator Condenser
	—25846	3/4" No. 10 P. K. Screw (Set Mtg.)
	—6213	1/4"-20 Hex. Nut (Brkt. Mtg.)
	—35065	3/4"-20 Screw (Brkt. Mtg.)
	W-38205	1/4" Lock Washer (Brkt. Mtg.)
	—32783	Ant. Cable (Accessory)
	W-50167	Mtg. Bracket (Set)
	W-50395	Ammeter Cond. (Accessory)
	W-38935	Case Ground Clip

Fig. 4 Push Button Assembly

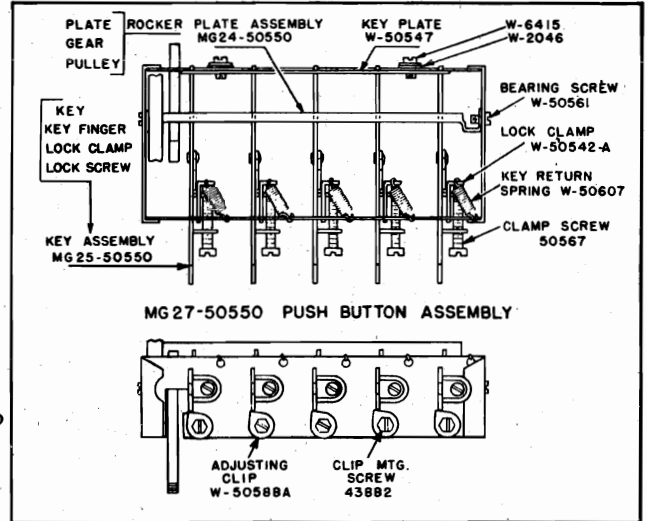

—50526	Volume Control, 1. Meg.
G178-36400	On-Off Switch
W-50176	8 Prong Socket
W-31210	Tube Shield Half (2 Req.)
G105-28807	Tube Shield Ring
W-50123A	Vib. Socket
278-BL-7"U"	Vib. Gnd. Clip
—45889	Speaker, Mfg. Spec. 5B-122
B-50644	Output Trans.
W-50130	Power Trans.
G1-50631	Power Trans. Can
G29-32750	Dial Light Bulb—6-8 V.
G27-32750	"A" Lead—Set to Fuse
—38915	"A" Lead—Fuse to Ammeter
—38915	Resistor, 100 Ohm 1/2 W. W. W.
G2-34002	Resistor, 100 Ohm 1/2 W. W. W.
G10-38000	Condenser, .0001 Mf. Molded
G13-38000	Vibrator, Interchangeable
W-32757	Vibrator
W-32776	Fuse (12 Amp.)
	Fuse Insulator
	Miscellaneous Mechanical Parts
MG27-50550	Push Button Unit Assy.
MG25-50550	Key Assy.
W-50542A	Key Clip (Lock Clamp)
—50567	1/8"-6x32 Screw (Clamp)
W-50607	Spring—(Key Return)
W-50588A	Adjusting Clip (Heart Shaped)
—43882	1/4" No. 8 P. K. Screw (Clip Mtg.)
W-50547	Key Plate (Rear Guide)
MG24-50550	Rocker Plate Assy.
W-50561	1/8"-6x40—Fil. H. Screw (Rocker Plate Bearing)
W-45553B	Push Button
W-50551A	Celluloid Cover
—50549	Call Letter Sheet
D-50503B	Case (Rear Half) FS49
C-50554A	Case (Front Half) FS49
W-50589	Felt (Dial Window)
—50505	Knob (2 Req.)

TUBE SOCKET VOLTAGE READINGS

Tube	Function	H	P	S	Su	K	Ga	Go
6A8-G	Oscillator-Modulator	6.0	190	100	—	0	102	0
6U7-G	I-F Amplifier	6.0	190	100	0	0	—	—
6Q7-G	Diode Detector & A-F Amp.	6.0	85	—	—	-2.3	—	—
6K6-G	Output	6.0	185	200	—	0	—	—
6X5-G	Rectifier	6.0	—	—	—	200	—	—

Power Output approximately 4 Watts.
Battery Drain approximately 5.7 Amperes at 6 Volts.

FIRESTONE TIRE & RUBBER CO.

MODEL S7425-6
 Chassis R-320
 Alignment, Tuner
 Socket, Trimmers
 MODEL S7425-1, Late
 MODEL S7426-1
 Tuner Data

ALIGNMENT EQUIPMENT & PROCEDURE


FOR ALIGNMENT: An output meter and an accurately calibrated signal generator with a tuning range from 465 KC to 1500 KC are required.

- ① Connect the output meter across the voice coil or between the plate of the 25L6-G output tube and ground through a .1 mfd. condenser, depending upon the type of meter. The more sensitive type should be connected across the voice coil.
 - ② Connect the ground lead of the signal generator to the chassis of the receiver through a .25 mfd. condenser and keep it connected in this manner throughout the entire alignment procedure. Failure to do this may have serious results as the signal generator may be connected to one side of the power line, or it may be grounded externally.
 - ③ Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure.
- TO CALIBRATE THE DIAL-** Remove the chassis from the cabinet and set it on a flat surface (insulated from ground). Release the set screw in the collar which connects the gang condenser shaft with the tuning unit. Holding the gang in full mesh turn the dial until the last dial division (just below 55) on the low frequency end is exactly 4 3/8 inch above the table surface. Now retighten the set screw in the coupler collar. The 4 3/8 inch division on the ruler (when measured vertically from table surface) is to be used as the dial indicator for all calibrations and alignment.

DUMMY ANT. IN SERIES WITH SIGNAL GENERATOR	CONNECTION OF SIG. GENERATOR OUTPUT TO RECEIVER	SIGNAL GENERATOR FREQUENCY	RECEIVER DIAL SETTING	TRIMMER NUMBER	TRIMMER DESCRIPTION	TYPE OF ADJUSTMENT
200 MMFD. MICA CONDENSER	CONTROL GRID OF 6A8-G TUBE	465 KC	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	1-2	1ST I. F.	ADJUST FOR MAXIMUM OUTPUT THEN REPEAT ADJUSTMENT
				3-4	2ND I. F.	
200 MMFD. MICA CONDENSER	ANTENNA LEAD (Blue Wire)	1500 KC	1500 KC	5	BROADCAST OSCILLATOR (Shunt)	ADJUST TRIMMER TO BRING IN SIGNAL.
200 MMFD. MICA CONDENSER	ANTENNA LEAD (Blue Wire)	1500 KC	TUNE TO 1500 KC GENERATOR SIGNAL	6	BROADCAST ANTENNA (Shunt)	ADJUST FOR MAXIMUM OUTPUT.


HOW TO SET UP THE PUSH BUTTONS.

1. Be sure that the antenna wire furnished with the set is extended to its full length and placed under the carpet or around the floor molding. In most instances the 20 feet of brown insulated wire included with the radio will make a satisfactory antenna. However, in localities remote from powerful broadcast stations, it may be found necessary to use an outside antenna.
2. Turn the set on and allow it to operate at least one quarter hour before setting up the push buttons.
3. Select the four nearby stations to which you wish to set up the buttons. Be sure to select nearby, powerful stations, since weak signals generally give poor results.

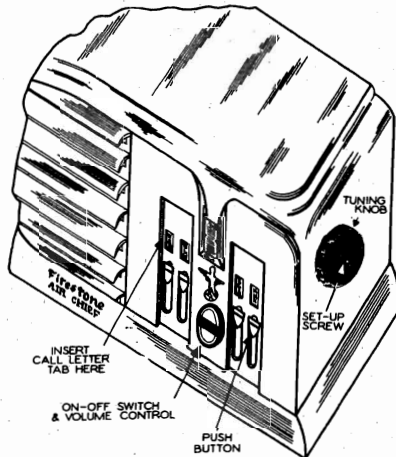

4. The large tuning knob at the side of your set has a set screw located in the center. Grasp this tuning knob firmly and then using a screw driver or a coin, turn the screw counter-clockwise not more than two whole turns.
5. Push down any one of the four buttons and holding it down tune in the desired station using the tuning knob. The push button must be held down firmly while the station is being tuned in otherwise the setting will be incorrect.
6. Release the button that you have just set up. WARNING:- Do not attempt to use any button until you have completed the set-up of all four buttons. Do not retighten the set-up screw until all buttons have been set up.

7. Proceed to set up the next button by pushing down on the button firmly and tuning in the desired station, using the tuning knob. The rest of the buttons should be set-up in a similar manner.
8. After all of the buttons have been set-up YOU MUST RE-TIGHTEN THE SCREW IN THE TUNING KNOB; OTHERWISE ALL SETTINGS OF THE BUTTONS WILL BE DESTROYED. GRASP THE KNOB FIRMLY AND USE A SMALL SCREW DRIVER OR A COIN TO TIGHTEN THE SCREW SECURELY.

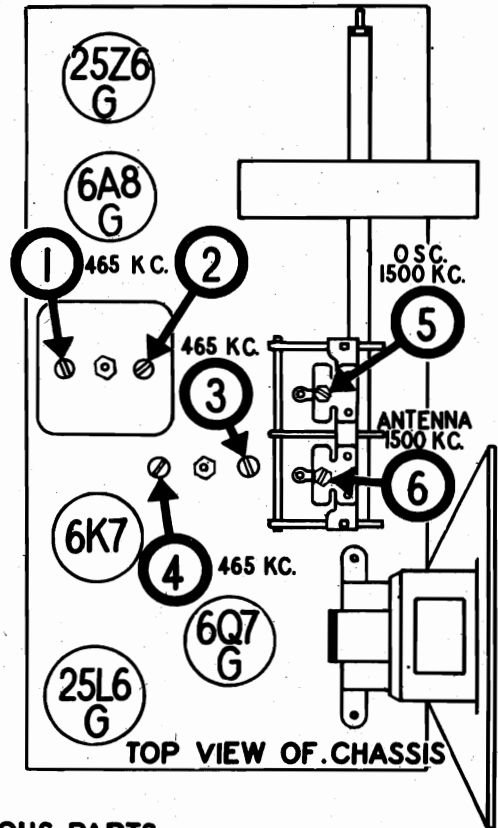


DIAL & MISCELLANEOUS PARTS


PART NUMBER	DESCRIPTION	LIST PRICE	PART NUMBER	DESCRIPTION	LIST PRICE
112745	Clip - coil mounting (osc. & ant.)	.01	113500	Mechanical Tuner Unit - less tenite tips for push buttons	3.90
113558	Clutch Spring - for tuner (on cam shaft)	.04	113538	Screw - #8 X 1" for chassis mtg.	.01
113504	Collar - Coupling (between tuner unit and gang condenser shaft)	.08	85427	Screw - for tuning knob (chrome head)	.14
113560	Dial Scale - celluloid strip	.22	113543	Socket - octal base (standard)	.15
113753	Dial Window - celluloid	.16	113543	Socket - dial lamp	.18
113557	Key - for push button tuner (left hand)	.24	113559	Spring - for key return	.02
113572	Key - for push button tuner (right hand)	.24	113550	Tabs - station call letters	.28
113531	Knob - tuning (ivory)	.30	113529	Tip - for push button (ivory)	.05
113574	Knob - volume (ivory)	.18			

MODELS S7425-6, Late
S7425-9, Loop
Schematic, Voltage
Socket

FIRESTONE TIRE & RUBBER CO.

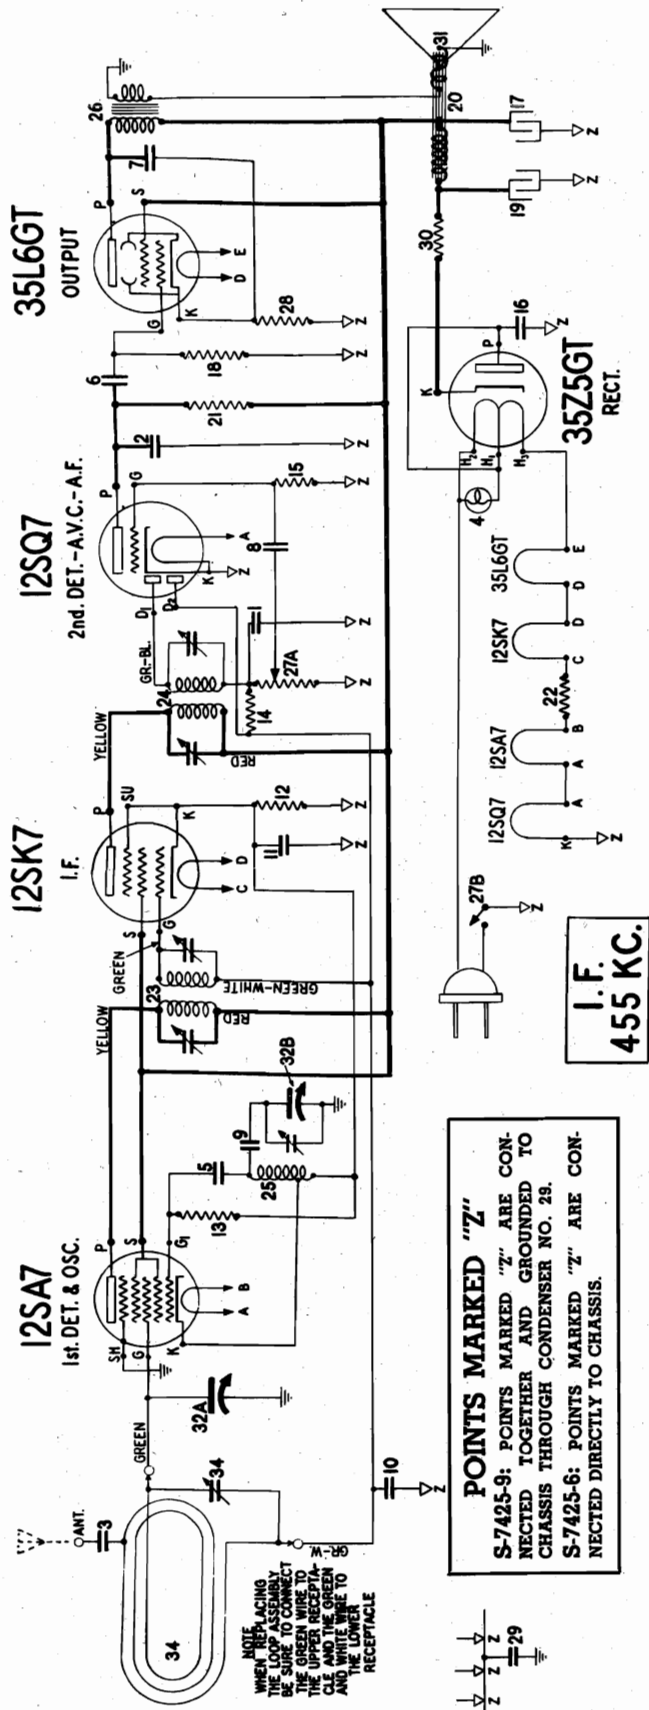

POINTS MARKED "Z"
S-7425-9: POINTS MARKED "Z" ARE CONNECTED TOGETHER AND GROUNDED TO CHASSIS THROUGH CONDENSER NO. 28.
S-7425-6: POINTS MARKED "Z" ARE CONNECTED DIRECTLY TO CHASSIS.

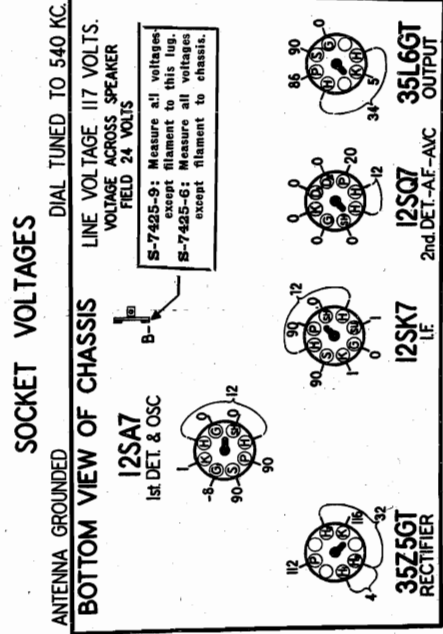

ELECTRICAL PARTS

Diagram Number	Part Number	Description	List Price
1-2	83539	Condenser—mica, 260 mmfd.	\$.20
3	83783	Condenser—mica, 110 mmfd.	.20
4	85296	Lamp—dial, 6 to 8 volt (mazda #51)	.16
5	85394	Condenser—mica, 510 mmfd.	.25
6-7	88026	Condenser—paper, .02 mfd., 400 volt	.25
8	88030	Condenser—paper, .01 mfd., 400 v.	.25
9	88030	Condenser—paper, .01 mfd., 400	.25
10	88189	Condenser—paper, .05 mfd., 200 volt	.25
11	88193	Condenser—paper, .25 mfd., 150 volt	.35
12	110560	Resistor—carbon, 100 ohms, 1/4 watt	.12
13	110565	Resistor—22,000 ohms, 1/4 watt	.12
14-15	110580	Resistor—carbon, 3.3 meg., 1/4 watt	.12
16	111252	Condenser—paper, .05 mfd., 400 volt	.13
17	112898	Condenser—electrolytic, 16 mfd., 150 volt	.50
18	112971	Resistor—insulated 470,000 ohms, 1/4 watt	.15
19	113472	Condenser—electrolytic 40 mfd., 150 volt	.56
20	U-115055	Speaker—electro dynamic.	3.60
21	116067	880,000 ohm, 1/4 watt—20% in-sulated	.12
22	116527	Resistor—100 ohms—10% 3 watt W.W.	.26
23	116667	Transformer—1st I.F.	1.00
24	116672	Transformer—2nd I.F.	1.00
25	116674	Coil—oscillator	.35
26	U-116676	Transformer—output for U-115055 speaker	1.00
27A-27B	116691	Volume control with switch.	1.00
28	116702	Resistor—140 ohms—10% 1/2 watt W.W.	.12
29	116706	Condenser—0.2 mfd., 600 volt (S-7425-9 only)	.35
30	116752	Resistor—33 ohms, 1 watt W.W.	.15
31	U-116727	Cone & Voice Coil Assem. for U-115055 speaker	1.20
32A-32B	116755	Condenser—2 gang.	3.50
33	116775	Loop antenna.	1.00
34	116781	Condenser—trimmer for loop ant. assembly	.22

SOCKET VOLTAGES
ANTENNA GROUNDED
DIAL TUNED TO 540 KC.
BOTTOM VIEW OF CHASSIS
LINE VOLTAGE 117 VOLTS.
VOLTAGE ACROSS SPEAKER FIELD 24 VOLTS


REAR OF CHASSIS
Use a high resistance voltmeter of at least 1000 ohms per volt.

PRICES SUBJECT TO CHANGE WITHOUT NOTICE


Schematics, Socket Trimmers, Coils

FIRESTONE TIRE & RUBBER CO.


MODELS S7425-8UA, S7425-9, Ch. R317
MODEL S7426-1
Chassis R311

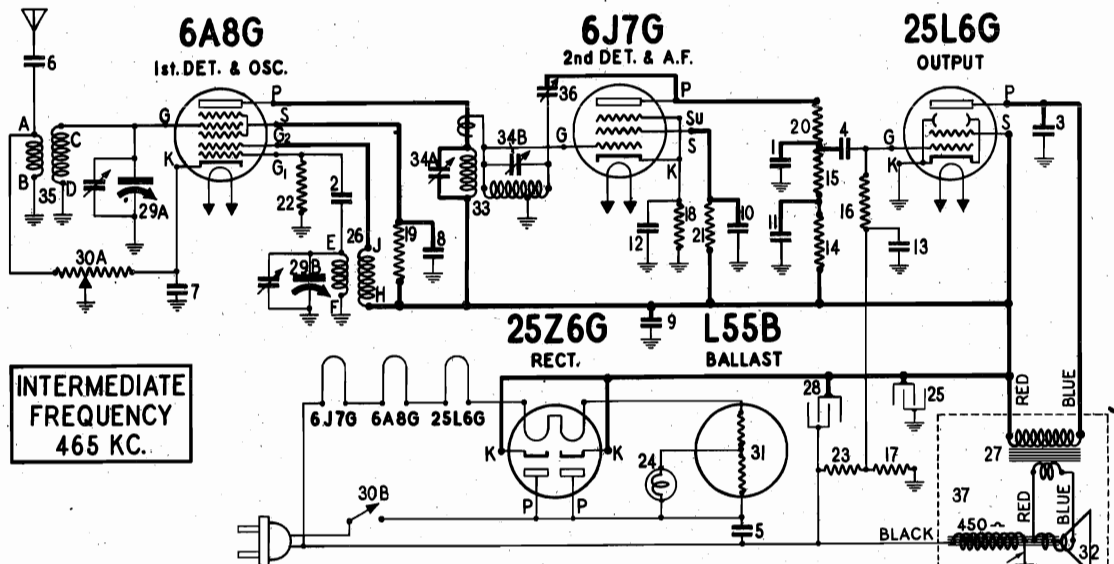

INTERMEDIATE FREQUENCY 465 KC.

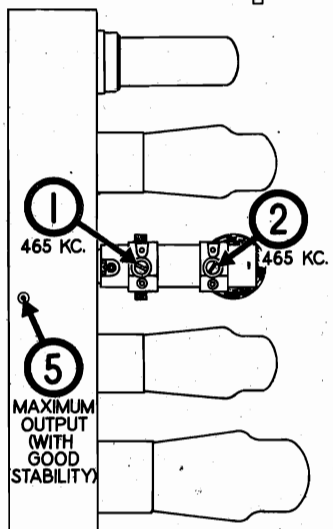

REAR VIEW OF CHASSIS

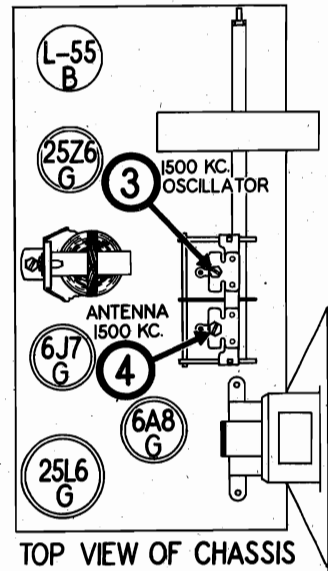

TOP VIEW OF CHASSIS

TERMINALS OF COILS SHOWN IN PICTORIAL VIEWS BELOW ARE LETTERED TO CORRESPOND TO SIMILARLY LETTERED TERMINALS ON THE CIRCUIT DIAGRAM ABOVE. TERMINALS WHICH ARE CONNECTED TOGETHER CARRY THE SAME LETTER.

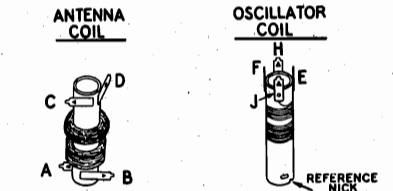



DIAGRAM NO. 35 PART NO. 113744
DIAGRAM NO. 27 PART NO. 113042

ELECTRICAL PARTS

DIAGRAM NUMBER	PART NUMBER	DESCRIPTION	LIST PRICE
1	83539	Condenser - mica 260 mmd.	.20
2	83783	Condenser - mica 110 mmd.	.20
3-4-5	88026	Condenser - paper .02 mfd.	.25
6	88029	400 volt Condenser - paper .004 mfd.	.25
7-8-9	89421	200 volt Condenser - paper .1 mfd.	.25
10-11	89421	200 volt Condenser - paper .1 mfd.	.25
12-13	89532	200 volt Condenser - paper .25 mfd.	.32
14	110553	Resistor - carbon 220,000 ohm 1/4 watt	.12
15-16	110559	Resistor - carbon 470,000 ohm 1/4 watt	.12
17	110564	Resistor - carbon 100,000 ohm 1/4 watt	.12
18	110565	Resistor - carbon 22,000 ohm 1/4 watt	.12
19	110566	Resistor - carbon 33,000 ohm 1/4 watt	.12
20	110569	Resistor - carbon 10,000 ohm 1/4 watt	.12
21	110570	Resistor - carbon 2.2 meg. 1/4 watt	.15
22	110578	Resistor - carbon 68,000 ohm 1/4 watt	.12
23	110584	Resistor - carbon 330,000 ohm 1/4 watt	.12
24	110629	Lamp - 6.3 volt .25 amps.	.15
25	112898	Condenser - electrolytic 16 mfd. 150 volt	.50
26	113042	Coil - oscillator	.45
27	R-113343	Transformer output for R-115013 spkr.	1.00
28	113472	Condenser - electrolytic 40 mfd. 150 volt	.58
29A-29B	113478	Condenser - variable gang	3.20
30A-30B	113501	Volume Control-20,000 ohms with on-off switch	.92
31	113506	Ballast Resistor - L55B	.65
32	R-113737	Cone - voice coil Assem. for R-115025 spkr.	1.90
33	113738	Transformer - I.F. (with trimmer)	1.28
34A-34B	113743	Condenser - trimmer (2 section for I.F.)	.30
35	113744	Coil - antenna	.72
36	113745	Condenser - trimmer (regen control)	.28
37	R-115025	Speaker - dynamic - 5" (sub. R-115013)	4.80

The Firestone Air Chief Stock No. 7425-8UA and 7425-9 (317 chassis) are identical in operation, performance and circuit wiring to the Firestone Air Chief Stock No. 7426-1 (311 chassis) except for the following differences:

The 317 chassis is designed for operation from a 117 volt 60 cycle power supply while the 311 chassis will operate on either 117 volt A.C. or D.C. power system. The only difference between the two models is that a one-to-one power transformer which also has a 25 volt and a 6 volt filament winding, has been substituted for the ballast resistor tube. A partial schematic diagram for the 317 chassis, showing only the power supply wiring, tube filament wiring and associated parts list is shown below. ALL OTHER CIRCUIT WIRING IS IDENTICAL TO THE 311 CHASSIS.

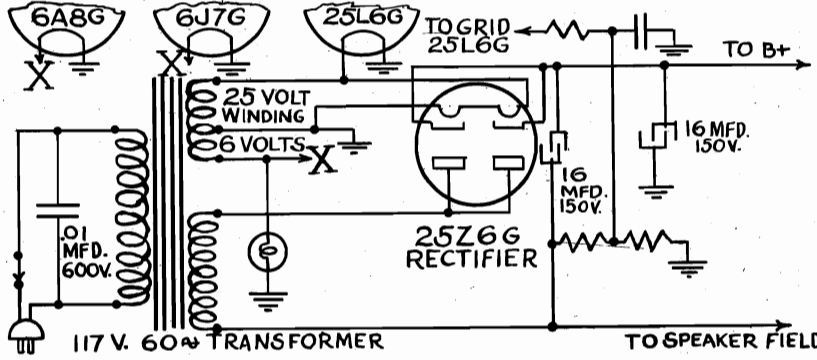

MODELS S7425-8UA
S7425-9, Ch. R317
MODEL S7426-1
Chassis R311

FIRESTONE TIRE & RUBBER CO.

Alignment, Voltage
Circuit Data

comparable to that which is obtained from a set employing an intermediate frequency stage.

When aligning the intermediate frequency transformer the set should be tuned to 465 KC and the 6A8-G tube in the customary manner. The primary and secondary windings are tuned by adjusting Trimmer Screws No. 1 and No. 2 until a maximum deflection is obtained on the output meter. If the set has a tendency to oscillate when adjusting these locations until the oscillation ceases. The signal generator is next coupled to the antenna lead, and Trimmers No. 3 and No. 4 are aligned for maximum output, using a generator frequency of 1500 KC. Now connect the set to the CUSTOMER'S antenna and tune in a station on the broadcast frequency. The volume control is now adjusted to give maximum output of the set, consistent with good stability and tone quality. After changing the setting of Trimmer No. 5 it is necessary to re-adjust Trimmers No. 1 and No. 2, as their setting will be affected. The signal generator is set at 465 KC and is coupled to the grid of the 6A8-G tube through a .1 mfd. condenser and Trimmers No. 1 and No. 2 adjusted, as was done previously.

A-C OPERATION


When the set is used on alternating current, all D-C potentials are supplied by a 25Z6G rectifier tube and its associated filter circuit. The tube is connected for half-wave rectification of the A-C supply.

If any hum is noticed when the set is used on A-C, reversing the power plug in the receptacle will sometimes reduce the hum level. When the set has not been used for some time or the filter capacitors have been replaced, a check should be made to see that the power plug is in the power plug. However, it will probably be eliminated after approximately five minutes operation by which time the anode plates of the electrolytic capacitors in the filter system will have reformed.

D-C OPERATION

If the set fails to operate after allowing time for the tube to reach their normal operating temperatures, reverse the power plug in the receptacle. When the set is used on direct current, the 25Z6G rectifier tube and the filter system remains in the circuit and serve two purposes. First, they protect the set against the possibility of incorrect polarity. The 25Z6G tube protects the filter capacitors from damage. On correct D-C polarity the 25Z6G tube passes the D-C and the filter circuit aids in smoothing the supply voltage, thus minimizing line noise.

ANTENNA GROUNDED

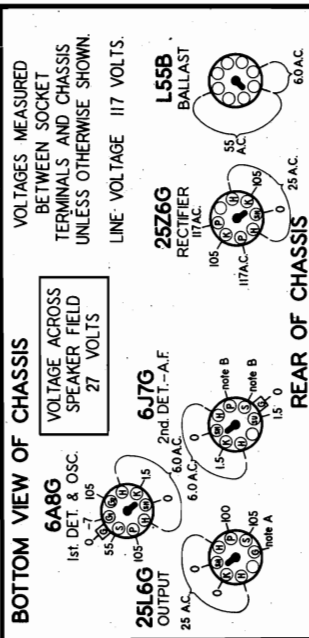

Use a high resistance voltmeter of a least 1000 ohms per volt.

NOTE A: The bias for the control grid of the 25L6G output tube is -6.0 volts due to the high resistance in this grid circuit the voltage measured will be extremely small.

NOTE B: Due to the high resistance in the plate and screen grid circuits, the voltages measured at these terminals will be very small.

Voltage

Chassis Model R-311.....117 volts A.C. or D.C.

This chassis is a 5 tube single band push-button tuning superheterodyne receiver. It is designed for operation on either alternating or direct current, and incorporates an L-55-B ballast resistor tube. The tuning range of the receiver is 540 to 1720 KC.

IMPORTANT: In cases where it is found that the push-button tuner does not tune in stations correctly due to extreme sharpness in tuning it is only necessary to back off (turn clockwise) the regeneration control trimmer (#5) slightly. This will make tuning broader and will result in more accurate tuning when using the push button tuner.

ALIGNMENT EQUIPMENT & PROCEDURE

FOR ALIGNMENT: An output meter and an accurately calibrated signal generator with a tuning range from 465 KC to 1500 KC are required.

- 1 Connect the output meter across the plates of the 25L6G output tube and ground, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
- 2 Connect the control grid of the signal generator to the antenna through a .1 mfd. condenser, and keep it connected to the antenna lead. Failure to do this may have serious results as one side of the power line may be grounded in the signal generator.
- 3 Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure.
- 4 With the gang condenser in full mesh, set the indicator to the last mark on the top end of the dial scale. If the pointer is only slightly above the last mark, the position of the condenser should be adjusted. Then grasp the end of the tuning shaft and turn the dial until the last division of the scale is directly under the indicator. When the gang is in full mesh, then retighten the set-screw.

IMPLY ANT. IN SERIES WITH SIG. GEN.	CONNECTION OF SIGNAL GENERATOR TO RECEIVER	SIGNAL GENERATOR FREQUENCY	RECEIVER DIAL SETTING	TRIMMER NUMBER	TRIMMER DESCRIPTION	TUNE OF ADJUSTMENT
1 MFD. CONDENSER	CONTROL GRID OF 6A8-G TUBE	465 KC	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	1-2	I. F.	ADJUST FOR MAXIMUM OUTPUT. THEN REPEAT ADJUSTMENT. IF OSCILLATION DOES NOT OCCUR, THE REGENERATION CONTROL TRIMMER # 5.
200 MFD. CONDENSER	ANTENNA LEAD (BLUE WIRE)	1500 KC	1500 KC	3	BROADCAST OSCILLATOR (SHUNT)	ADJUST FOR MAXIMUM OUTPUT.
200 MFD. CONDENSER	ANTENNA LEAD (BLUE WIRE)	1500 KC	TUNE TO TONE AND GEN. SIG.	4	BROADCAST ANTENNA (SHUNT)	ADJUST FOR MAXIMUM OUTPUT.
CONNECT RECEIVER TO CUSTOMER'S ANTENNA OR TO A 50 MFD. MICA CONDENSER IN SERIES WITH THE SIGNAL GENERATOR.	CONTROL GRID OF 6A8-G TUBE	465 KC	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	5	REGENERATION CONTROL	ADJUST TRIMMER TO GIVE MAXIMUM OUTPUT. BE CONSISTENT WITH GOOD STABILITY AND TONE QUALITY.
1 MFD. CONDENSER	CONTROL GRID OF 6A8-G TUBE	465 KC	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	1-2	I. F.	ADJUST FOR MAXIMUM OUTPUT. THEN REPEAT ADJUSTMENT.

THIS ADJUSTMENT MUST AGAIN BE MADE AFTER THE REGENERATION CONTROL TRIMMER HAS BEEN SET.


PART NUMBER	DESCRIPTION	LIST PRICE
83624	Screw - Self Tapping 8 X 1/4	-.04
85427	Socket - tube, 8 prong	-.02
85627	Set Screw - 8/32 square head	-.24
86161	Shield Tube - (short section)	-.18
86162	Shield Tube - (long section)	-.01
86164	Shield Cap - tube, grid type	-.01
89911	Shield - Tube, base	-.16
89912	Clip - grounding, for tube base	-.04
112745	Clip - coil mounting (osc. & ant.)	-.02
113500	Mechanical Tuner Unit - less tenite tips for push buttons	3.90
113504	Collar - Coupling (between tuner unit & push button (walnut))	-.08
113510	Tip for push button (walnut)	-.05
113520	Knob - tuning (walnut)	-.25
113527	Screw for tuning knob & set-up	-.18
113543	Socket - dial lamp	-.18
113548	Felt Pad - behind push buttons	-.01
113550	Tab - station call letters	-.28
113557	Key - for push button tuner (left hand)	-.24

I.F. TRANSFORMER & REGENERATION CONTROL

This R-311 chassis employs only one intermediate frequency transformer, the windings of which are capacitively coupled. The two trimmers used to tune the primary winding are associated with the regeneration control of the transformer assembly and are accessible from the rear of the chassis. Also associated with this intermediate frequency transformer is an additional trimmer condenser, which is accessible through a hole in the rear of the chassis. This condenser is used to feed back a portion of the secondary output of the transformer to the plate circuit of the 6J7-G tube. This signal is introduced into the 6J7-G grid circuit through a coupling coil, which is a part of the secondary coil. The regeneration obtained increases the amplification and frequency response of the transformer, and makes the performance of this set

FIRESTONE TIRE & RUBBER CO.

MODEL S7426-2
Schematic, Voltage
Socket, Trimmers
Alignment

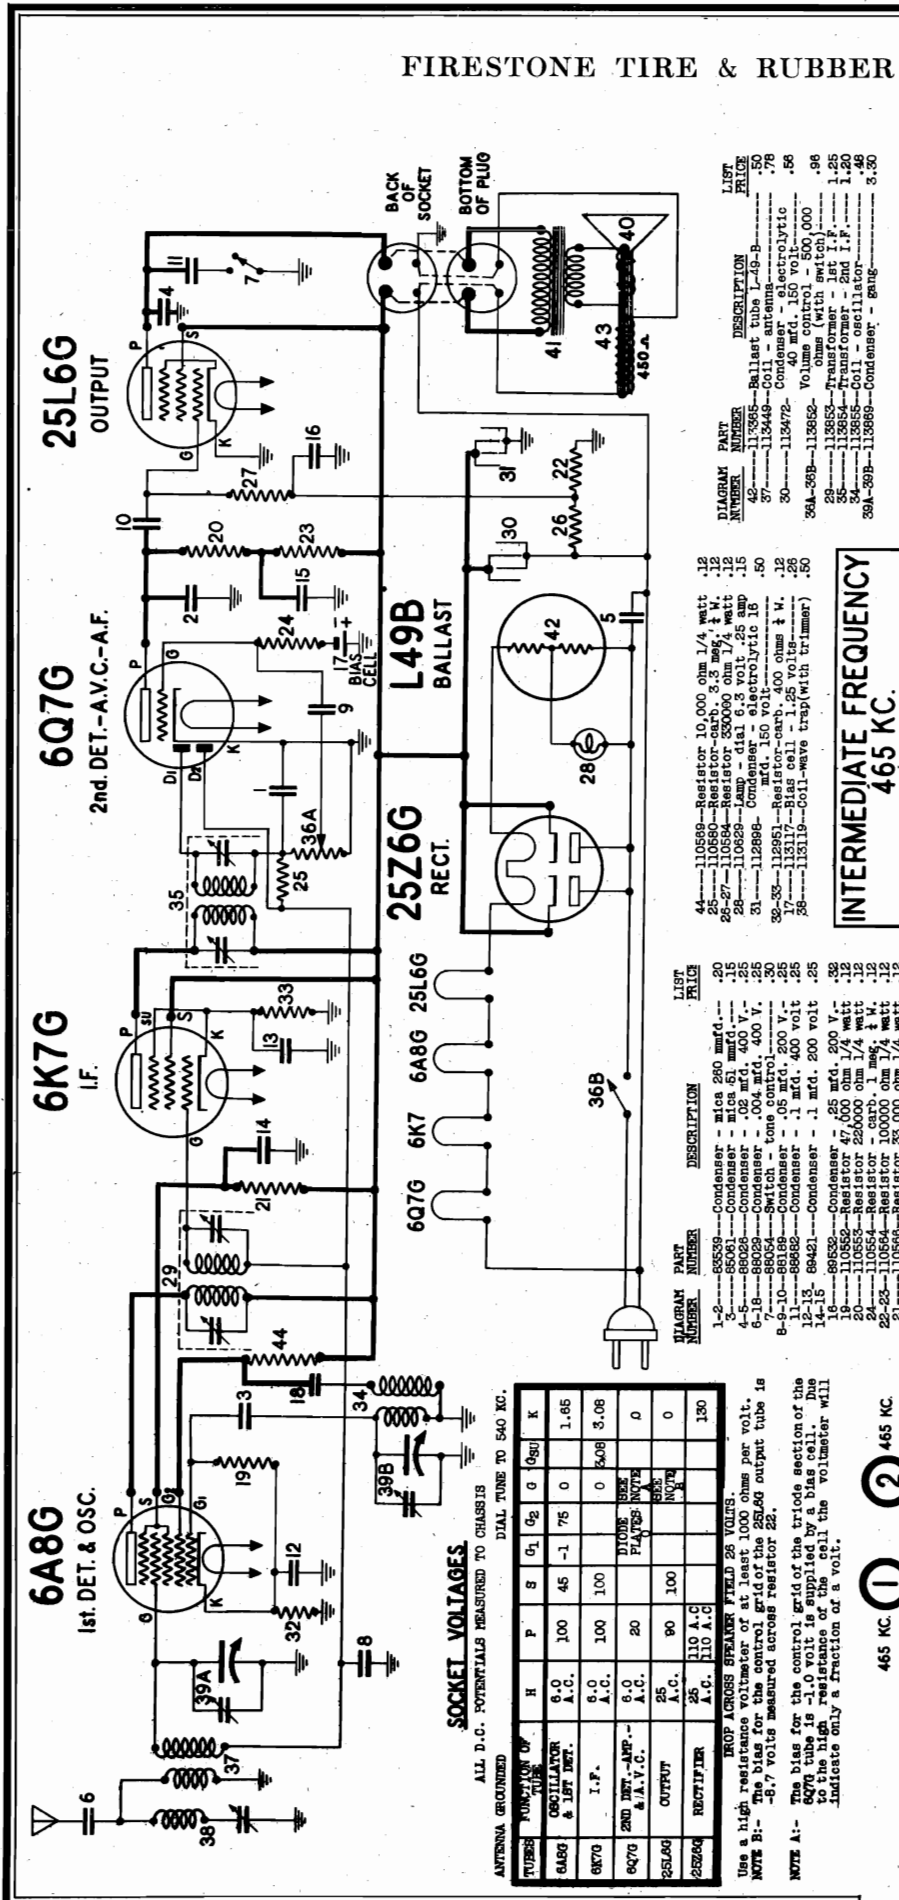

ALL D.C. POTENTIALS MEASURED TO CHASSIS
DIAL TUNE TO 540 KC.

TUBE	FUNCTION OF TUBE	H	P	S	G ₁	G ₂	G	K
6A8G	OSCILLATOR & 1ST DET.	6.0	100	45	-1	75	0	1.85
6K7G	I.F.	6.0	100	100	0	3.08	0	3.08
6Q7G	2ND DET.-AMP. & A.V.C.	6.0	20	PLATE	BIAS	NOTE	0	0
25L6G	OUTPUT	25	90	100	110 A.C.	130	0	130
25Z6G	RECTIFIER	25	110 A.C.	110 A.C.	130	130	0	130


NOTE A: - The bias for the control grid of the triodes section of the 6Q7G tube is -1.0 volt is supplied by a bias cell. Due to the high resistance of the cell, the voltmeter will indicate only a fraction of a volt.

NOTE B: - The bias for the control grid of the 25L6G output tube is -0.7 volts measured across resistor 28.

INTERMEDIATE FREQUENCY
465 KC.

DIAGRAM PART NUMBER	DESCRIPTION	LIST PRICE
1-2	65533-Condenser - mica 280 mfd.	.20
3	65061-Condenser - mica 51 mfd.	.15
4-5	89028-Condenser -.02 mfd. 400 V.	.25
6	89034-Switching tone control	.30
7-8-10	86198-Condenser -.05 mfd. 200 V.	.25
11	86628-Condenser -.1 mfd. 400 volt	.25
12-13	89421-Condenser - .1 mfd. 200 volt	.25
14	89532-Condenser -.25 mfd. 200 V.	.28
16	110552-Resistor 47,000 ohm 1/4 watt	.12
20	110553-Resistor 220,000 ohm 1/4 watt	.12
24	110554-Resistor 1 carb. 1 meg. 1/2 W.	.12
25	110555-Resistor 33,000 ohm 1/4 watt	.12
26	110556-Resistor 33,000 ohm 1/4 watt	.12
27	110557-Resistor 33,000 ohm 1/4 watt	.12
28	110558-Resistor 10,000 ohm 1/4 watt	.12
29	110559-Resistor 330,000 ohm 1/2 watt	.12
30	112968-Condenser - electrolytic 10 mfd. 150 volt	.50
31	112968-Condenser - electrolytic 10 mfd. 150 volt	.50
32-33	112951-Resistor-carb. 400 ohms ± W.	.12
34	113119-Grid cell - 1.25 volts	.26
35	113119-Grid cell - 1.25 volts	.26
36A-36B	112652-Voltage control - 500,000 ohms	.96
37	112652-Voltage control - 500,000 ohms	.96
38	112652-Voltage control - 500,000 ohms	.96
39A-39B	112652-Voltage control - 500,000 ohms	.96
40	112652-Voltage control - 500,000 ohms	.96
41	112652-Voltage control - 500,000 ohms	.96
42	112652-Voltage control - 500,000 ohms	.96
43	112652-Voltage control - 500,000 ohms	.96
44	112652-Voltage control - 500,000 ohms	.96
45	112652-Voltage control - 500,000 ohms	.96
46	112652-Voltage control - 500,000 ohms	.96
47	112652-Voltage control - 500,000 ohms	.96
48	112652-Voltage control - 500,000 ohms	.96
49	112652-Voltage control - 500,000 ohms	.96
50	112652-Voltage control - 500,000 ohms	.96


DIAGRAM PART NUMBER	DESCRIPTION	LIST PRICE
1-2	65533-Condenser - mica 280 mfd.	.20
3	65061-Condenser - mica 51 mfd.	.15
4-5	89028-Condenser -.02 mfd. 400 V.	.25
6	89034-Switching tone control	.30
7-8-10	86198-Condenser -.05 mfd. 200 V.	.25
11	86628-Condenser -.1 mfd. 400 volt	.25
12-13	89421-Condenser - .1 mfd. 200 volt	.25
14	89532-Condenser -.25 mfd. 200 V.	.28
16	110552-Resistor 47,000 ohm 1/4 watt	.12
20	110553-Resistor 220,000 ohm 1/4 watt	.12
24	110554-Resistor 1 carb. 1 meg. 1/2 W.	.12
25	110555-Resistor 33,000 ohm 1/4 watt	.12
26	110556-Resistor 33,000 ohm 1/4 watt	.12
27	110557-Resistor 33,000 ohm 1/4 watt	.12
28	110558-Resistor 10,000 ohm 1/4 watt	.12
29	110559-Resistor 330,000 ohm 1/2 watt	.12
30	112968-Condenser - electrolytic 10 mfd. 150 volt	.50
31	112968-Condenser - electrolytic 10 mfd. 150 volt	.50
32-33	112951-Resistor-carb. 400 ohms ± W.	.12
34	113119-Grid cell - 1.25 volts	.26
35	113119-Grid cell - 1.25 volts	.26
36A-36B	112652-Voltage control - 500,000 ohms	.96
37	112652-Voltage control - 500,000 ohms	.96
38	112652-Voltage control - 500,000 ohms	.96
39A-39B	112652-Voltage control - 500,000 ohms	.96
40	112652-Voltage control - 500,000 ohms	.96
41	112652-Voltage control - 500,000 ohms	.96
42	112652-Voltage control - 500,000 ohms	.96
43	112652-Voltage control - 500,000 ohms	.96
44	112652-Voltage control - 500,000 ohms	.96
45	112652-Voltage control - 500,000 ohms	.96
46	112652-Voltage control - 500,000 ohms	.96
47	112652-Voltage control - 500,000 ohms	.96
48	112652-Voltage control - 500,000 ohms	.96
49	112652-Voltage control - 500,000 ohms	.96
50	112652-Voltage control - 500,000 ohms	.96

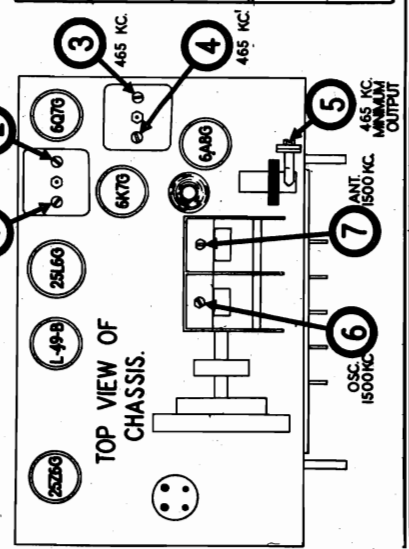

DUMMY ANT. IN SERIES WITH SIG. GEN.	CONNECTION OF SIG. GENERATOR OUTPUT TO RECEIVER	SIGNAL GENERATOR FREQUENCY	RECEIVER DIAL SETTING	TRIMMER DESCRIPTION	TRIMMER NUMBER	TYPE OF ADJUSTMENT
.1 MFD. CONDENSER	CONTROL GRID OF 6A8G TUBE (Do not remove grid clip)	465 KC.	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	2ND I.F.	1-2	ADJUST FOR MAXIMUM OUTPUT. THEN REPEAT ADJUSTMENT.
200 MFD. MICA CONDENSER	ANTENNA LEAD	465 KC.	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	NAVE TRAP	3-4	ADJUST FOR MINIMUM OUTPUT USING STRONG GENERATOR SIGNAL.
200 MFD. MICA CONDENSER	ANTENNA LEAD	1500 KC.	1500 KC.	BROADCAST OSCILLATOR	6	ADJUST FOR MAXIMUM OUTPUT.
200 MFD. MICA CONDENSER	ANTENNA LEAD	1500 KC.	1500 KC.	BROADCAST ANTENNA	7	ADJUST FOR MAXIMUM OUTPUT.

MODELS S7426-3, S7426-4
 Chassis R313
 Schematic, Voltage
 Socket, Trimmers
 Alignment

FIRESTONE TIRE & RUBBER CO.

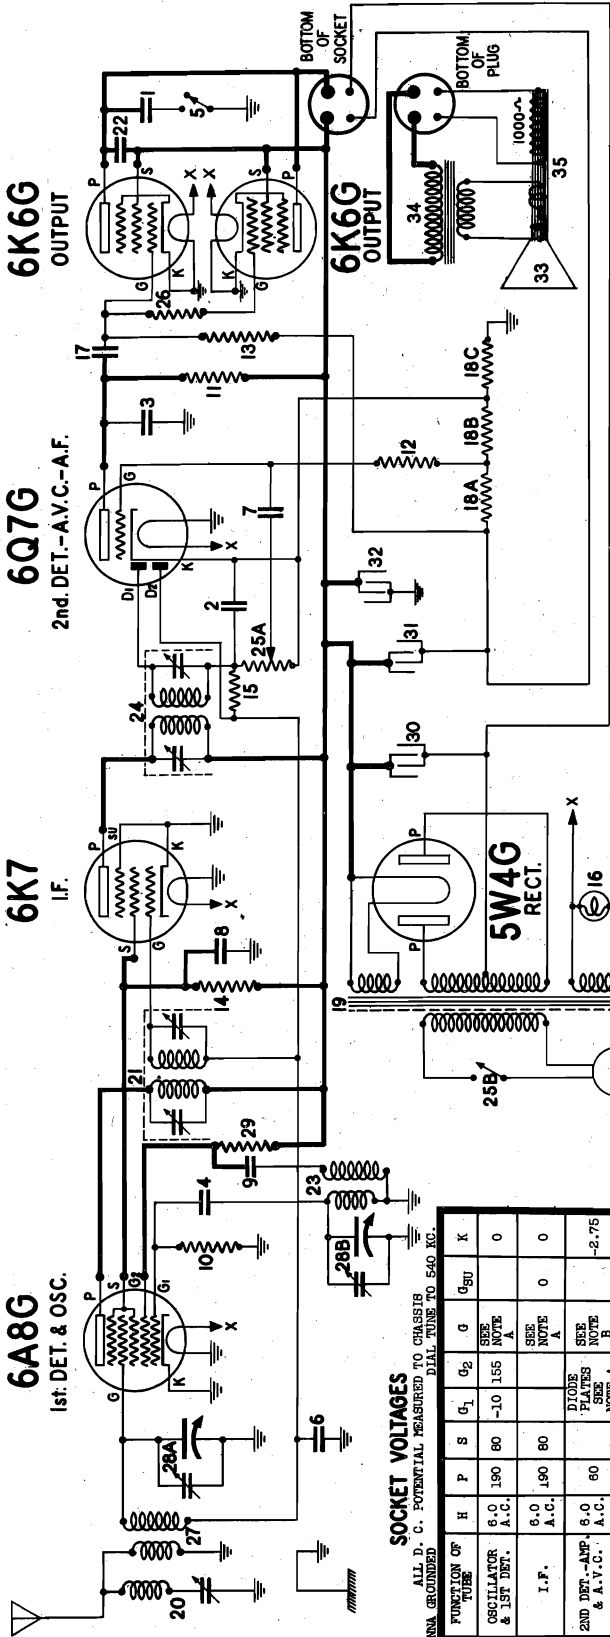

INTERMEDIATE FREQUENCY
 465 KC.

DIAGRAM NUMBER	PART NUMBER	DESCRIPTION	LIST PRICE
15	110560	Resistor - 3.3 meg. 1/4 watt	.12
16	110529	Lamp-dial - 6.3 volt. .25 amp	.15
17	111522	Condenser - .05 mfd. 400 V.	.13
18A to C	113010	Transformer - 117 V. 60 Cy. - 5.00	.40
19	113618	Transformer - 117 V. 60 Cy. - 5.00	.40
20	113618	Transformer - 117 V. 60 Cy. - 5.00	.40
21	113653	Transformer - 1st. I.F. - 1.25	1.25
22	86030	Condenser - .01 mfd. 400 V.	.25
23	110522	Resistor - 47,000 ohms ± W.	.48
24	113654	Transformer - 2nd. I.F. - 1.20	1.20
25A - B	113652	Coil - 10 ohms (with switch) 500	.96
26	110560	Resistor - 100 ohms 1/4 watt	.12


DIAGRAM NUMBER	PART NUMBER	DESCRIPTION	LIST PRICE
1	85217	Condenser - .04 mfd. 600 V.	.26
2	85081	Condenser - mica 250 mmfd.	.20
3	85081	Condenser - mica 250 mmfd.	.20
4	85081	Condenser - mica 250 mmfd.	.20
5	86054	Switch - tone control (Model 313)	.30
6-7	114192	Switch - tone control (Model 313)	.30
8	86169	Condenser - .05 mfd. 200 V.	.25
9	86191	Condenser - .1 mfd. 300 V.	.25
10	86030	Condenser - .01 mfd. 400 V.	.25
11	110522	Resistor - 47,000 ohms ± W.	.48
12	110522	Resistor - 47,000 ohms ± W.	.48
13	110554	Resistor - 250,000 ohms ± W.	.12
14	110554	Resistor - 470,000 ohms ± W.	.12
15	110560	Resistor - 100 ohms 1/4 watt	.12

SOCKET VOLTAGES

ALL D. C. POTENTIAL MEASURED TO CHASSIS
 DIAL TUNE TO 540 KC.

TUBES	FUNCTION OF TUBE	H	P	S	G ₁	G ₂	G	K
6A8G	OSCILLATOR & 1ST DET.	6.0	190	80	-10	155	0	0
6K7G	I.F.	6.0	190	80			0	0
6Q7G	2ND DET.-A.V.C.	6.0					DIODE PLATES	SEE NOTE A
6K6G	OUTPUT	6.0	175	190			0	0
6K6G	OUTPUT	6.0	175	190			0	0
5W4G	RECTIFIER	5.0	335	A.C.			0	0


DROP ACROSS SPEAKER FIELD 55 VOLTS
 USE A high resistance voltmeter or at least 1,000 ohms per volt.
 NOTE A: The control grid bias for the 6Q7G tube is -4.2 volts measured across resistors 18A and 18C.
 NOTE B: The control grid bias for the 6K6G tube is -1.5 volts measured across resistors 18A, 18B and 18C.

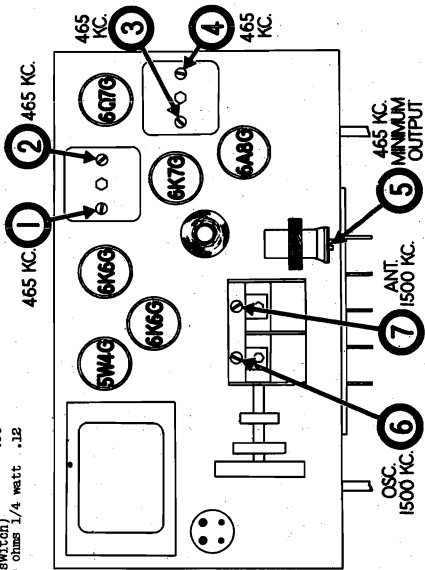

DUMMY ANT. IN SERIES WITH SIG. GEN.	CONNECTION OF SIG. GENERATOR OUTPUT TO RECEIVER	SIGNAL GENERATOR FREQUENCY	RECEIVER DIAL SETTING	TRIMMER NUMBER	TRIMMER DESCRIPTION	TYPE OF ADJUSTMENT
.1 MFD. CONDENSER	CONTROL GRID OF 6A8G TUBE (Do not remove grid clip)	465 KC.	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	1-2	2ND I.F.	ADJUST FOR MAXIMUM OUTPUT. THEN REPEAT ADJUSTMENT.
200 MFD. MICA CONDENSER	ANTENNA LEAD	465 KC.	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	3-4	1ST I.F.	ADJUST FOR MINIMUM OUTPUT USING STRONG GENERATOR SIGNAL.
200 MFD. MICA CONDENSER	ANTENNA LEAD	1500 KC.	1500 KC.	5	WAVE TRAP	ADJUST FOR MAXIMUM OUTPUT.
200 MFD. MICA CONDENSER	ANTENNA LEAD	1500 KC.	1500 KC.	6	BROADCAST OSCILLATOR	ADJUST FOR MAXIMUM OUTPUT.
200 MFD. MICA CONDENSER	ANTENNA LEAD	1500 KC.	1500 KC.	7	BROADCAST ANTENNA	ADJUST FOR MAXIMUM OUTPUT.

FIRESTONE TIRE & RUBBER CO.

MODEL S7426-B
Schematic, Voltage

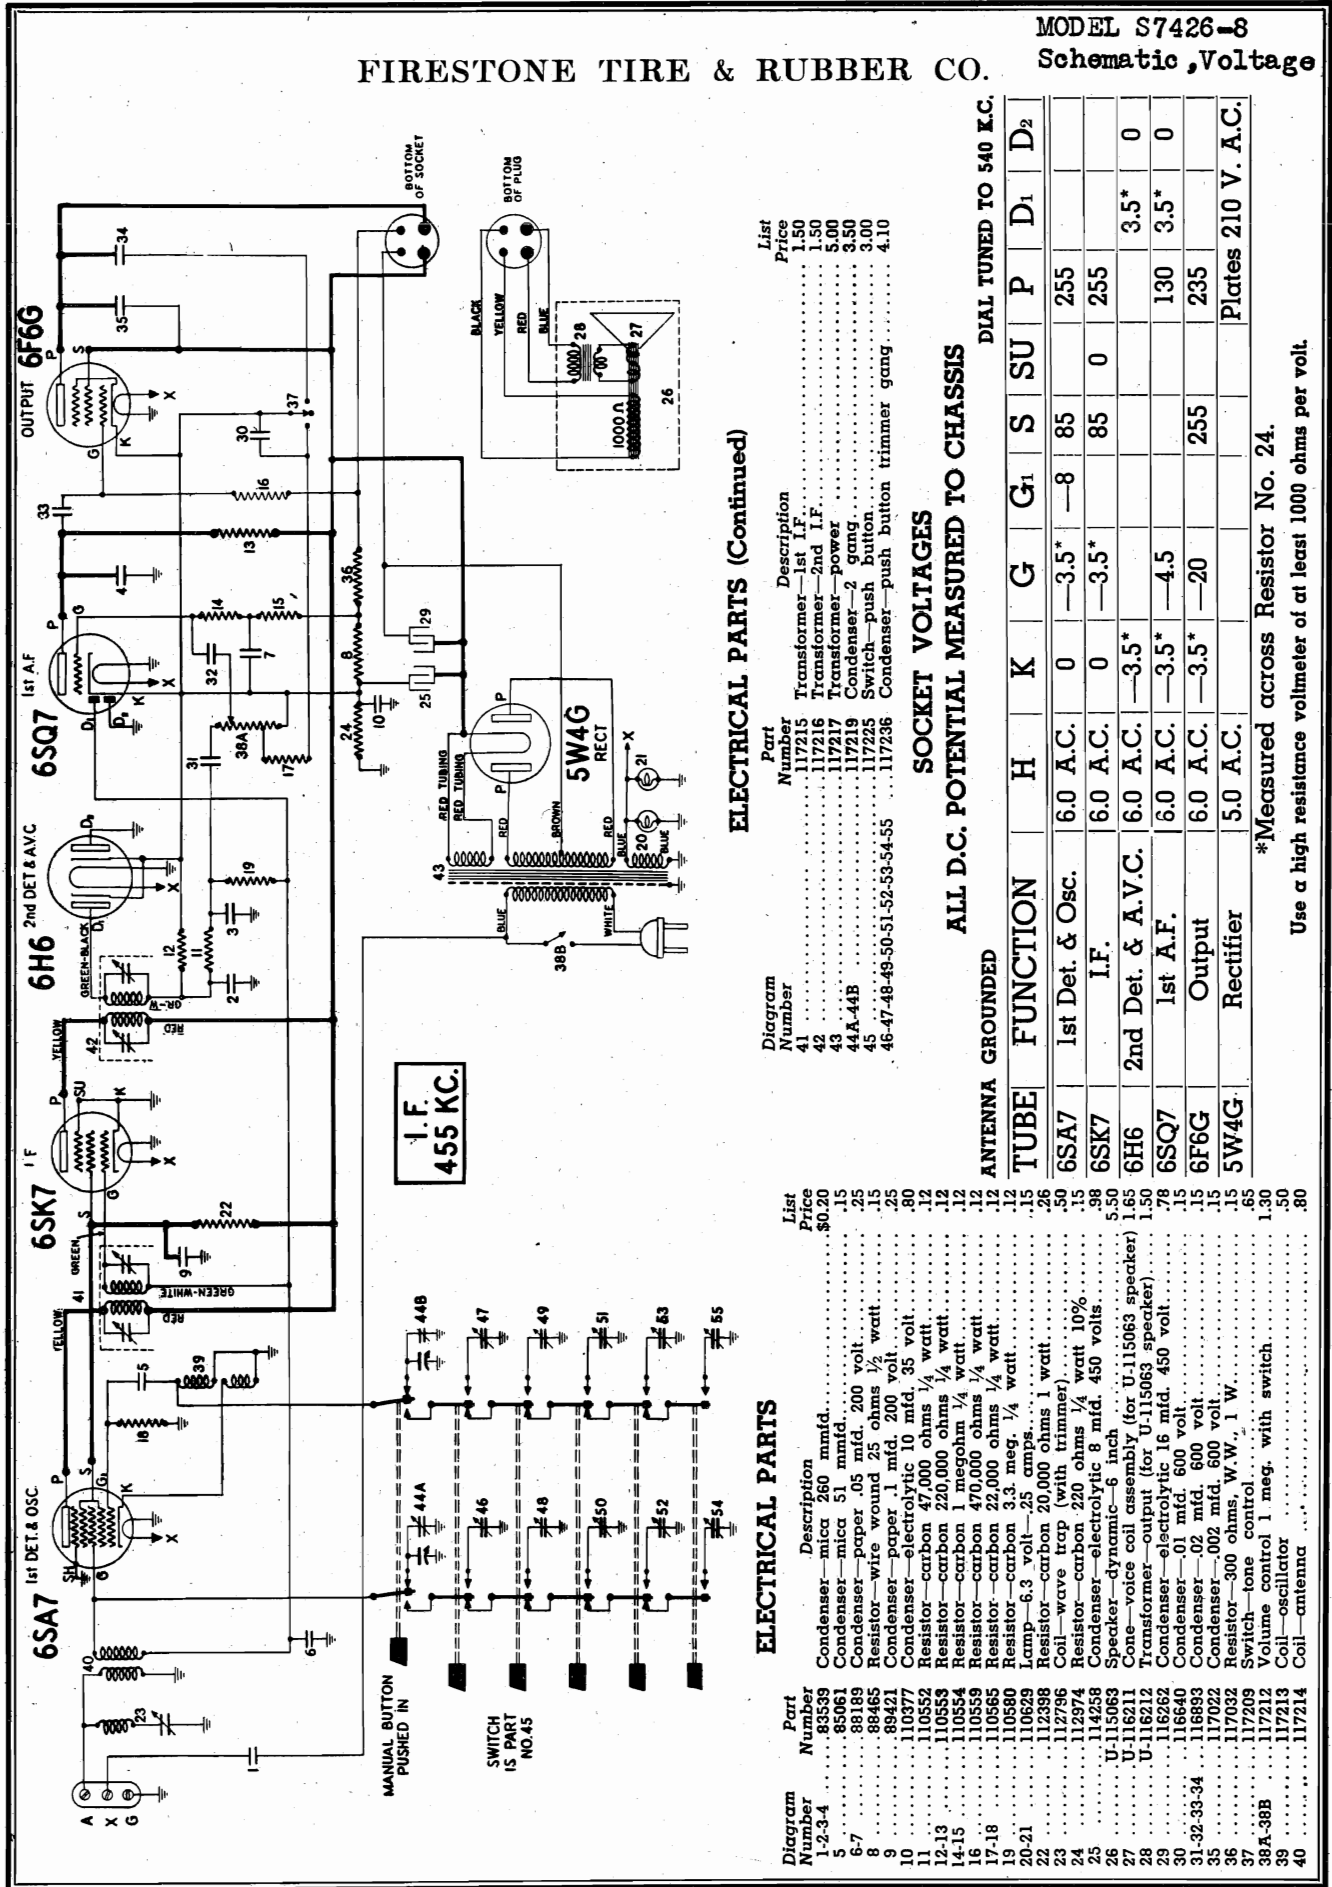

ELECTRICAL PARTS (Continued)

Diagram Number	Part Number	Description	List Price
41	117215	Transformer—1st I.F.	1.50
42	117216	Transformer—2nd I.F.	1.50
43	117217	Transformer—power	5.00
44A-44B	117219	Condenser—2 gang.	3.50
45	117225	Switch—push button	3.00
46-47-48-49-50-51-52-53-54-55	117236	Condenser—push button trimmer gang.	4.10

SOCKET VOLTAGES
ALL D.C. POTENTIAL MEASURED TO CHASSIS

TUBE	FUNCTION	H	K	G	G ₁	S	SU	P	D ₁	D ₂
6SA7	1st Det. & Osc.	6.0 A.C.	0	-3.5*	-8	85	255			
6SK7	I.F.	6.0 A.C.	0	-3.5*		85	0	255		
6H6	2nd Det. & A.V.C.	6.0 A.C.	-3.5*						3.5*	0
6SQ7	1st A.F.	6.0 A.C.	-3.5*	-4.5					130	3.5*
6F6G	Output	6.0 A.C.	-3.5*	-20					255	235
5W4G	Rectifier	5.0 A.C.								Plates 210 V. A.C.

*Measured across Resistor No. 24.

Use a high resistance voltmeter of at least 1000 ohms per volt.

ELECTRICAL PARTS

Diagram Number	Part Number	Description	List Price
1-2-3-4	83539	Condenser—mica 360 mmfd.	\$0.20
5	85061	Condenser—mica 51 mmfd.	.15
6-7	88189	Condenser—paper .05 mfd. 200 volt.	.15
8	88465	Resistor—wire wound 25 ohms 1/2 watt.	.15
9	89421	Condenser—paper 1 mfd. 200 volt.	.25
10	110377	Condenser—electrolytic 10 mfd. 35 volt.	.80
11	110552	Resistor—carbon 47,000 ohms 1/4 watt.	.12
12-13	110553	Resistor—carbon 220,000 ohms 1/4 watt.	.12
14-15	110554	Resistor—carbon 1 megohm 1/4 watt.	.12
16	110559	Resistor—carbon 470,000 ohms 1/4 watt.	.12
17-18	110565	Resistor—carbon 22,000 ohms 1/4 watt.	.12
19	110580	Resistor—carbon 3.3 meg. 1/4 watt.	.12
20-21	110629	Lamp—6.3 volt—25 amps.	.15
22	112398	Resistor—carbon 20,000 ohms 1 watt.	.26
23	112974	Coil—wave trap (with trimmer).	.50
24	114258	Resistor—carbon 220 ohms 1/4 watt 10%.	.15
25	U-115063	Condenser—electrolytic 8 mfd. 450 volts.	.98
26	U-115063	Speaker—dynamic—6 inch	5.50
27	U-115063	Speaker—voice coil assembly (for U-115063 speaker)	1.65
28	U-116212	Transformer—output (for U-115063 speaker)	1.50
29	116262	Condenser—electrolytic 16 mfd. 450 volt.	.78
30	116640	Condenser—.01 mfd. 600 volt.	.15
31-32-33-34	116893	Condenser—.02 mfd. 600 volt.	.15
35	117022	Condenser—.002 mfd. 600 volt.	.15
36	117032	Resistor—300 ohms, W.W., 1 W.	.65
37	117209	Switch—tone control	1.30
38A-38B	117212	Volume control 1 meg. with switch.	1.30
39	117213	Coil—oscillator	.50
40	117214	Coil—antenna	.80

MODEL S7426-8
Alignment, Socket
Trimmers

FIRESTONE TIRE & RUBBER CO.

FOR ALIGNMENT: An output meter and an accurately calibrated signal generator are required.

1. Connect the output meter across the voice coil or between the plate of the 6F6-G output tube and chassis, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the "G" terminal or the chassis.
3. Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure.
4. Remove the connector from between the "A" and "X" terminals.
5. Push in the "MANUAL" button, and keep it depressed during the entire alignment procedure.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD CONDENSER	FRONT LUG ON GANG CONDENSER	455 KC	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	1-2	2nd I.F.	ADJUST FOR MAXIMUM OUTPUT. THEN REPEAT ADJUSTMENT.
				3-4	1st I.F.	
200 MMFD. MICA CONDENSER	"A" TERMINAL	455 KC	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	5	WAVE TRAP	ADJUST FOR MINIMUM OUTPUT USING A STRONG GENERATOR SIGNAL.
200 MMFD. MICA CONDENSER	"A" TERMINAL	1500 KC	1500 KC	6	BROADCAST OSCILLATOR (Shunt)	ADJUST FOR MAXIMUM OUTPUT.
200 MMFD. MICA CONDENSER	"A" TERMINAL	1500 KC	TUNE TO 1500 KC GENERATOR SIGNAL	7	BROADCAST ANTENNA (Shunt)	ADJUST FOR MAXIMUM OUTPUT.

MISCELLANEOUS PARTS

Part Number	Description	List Price
117208	Background for dial	\$.005
83552	Bolt—chassis mtg. (No. 10 x 7/8)	.03
114955	Clamp—for dial cord	.01
112745	Clip—coil mounting	.01
112798	Clip—for mtg. wave trap coil	.01
116009	Clip—for antenna coil mtg.	.01
85321	Connector—for internal antenna	.01
116948	Cord—dial—6 ft. lengths	.18
117057	Cord—drive—3 ft. lengths	.15
117222	Dial scale	.60
117029	Drive drum and bushing	.50
117232	Escutcheon for dial—with glass	.75
117233	Escutcheon for push buttons	.35
117087	Knob for volume	.12
117245	Pin—push buttons	.03
117227	Pointer	.25
117234	Push button	.08
117192	Retainer for dial scale	.01
81145	Retaining ring—for drive shaft	Per C .50
83624	Screw—self tapping 8 x 1/4	.01
85040	Screw—No. 6 Hex. Hd.	Per C .35
85827	Set Screw—8-32 Square Head	.02
114914	Screw—special head for mtg. escutcheon	Per Doz. .15
114117	Socket—dial lamp	.18
110501	Socket—4 prong (for splr.)	.16
116690	Socket—(octal base) (small)	.12
111090	Spacer—steel mechanism mtg. to chassis	.02
113177	Spring—dial cord tension	.09
116536	Terminal strip (G.X.A.)	.15
116530	Washer (paper) for back of knobs	.005
111456	Washer—spring washer	Per C .50

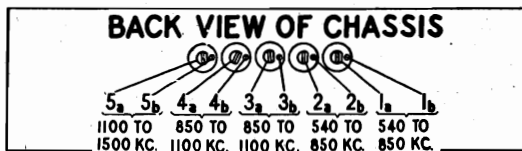
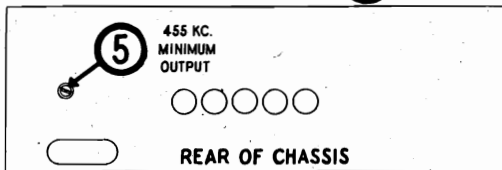
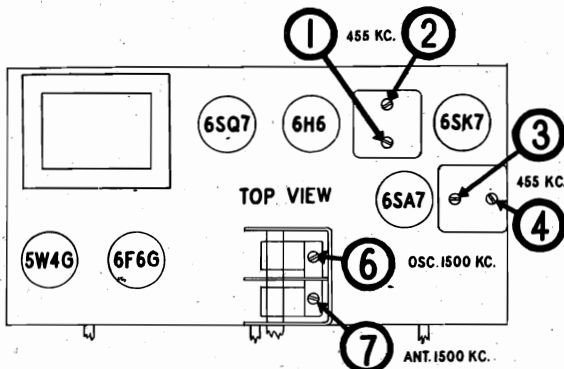


Fig. 1

FOR
SETTING UP PUSH BUTTONS
SEE INDEX

FIRESTONE TIRE & RUBBER CO.

MODEL S7427-1, Early
Chassis R314
Schematic, Voltage

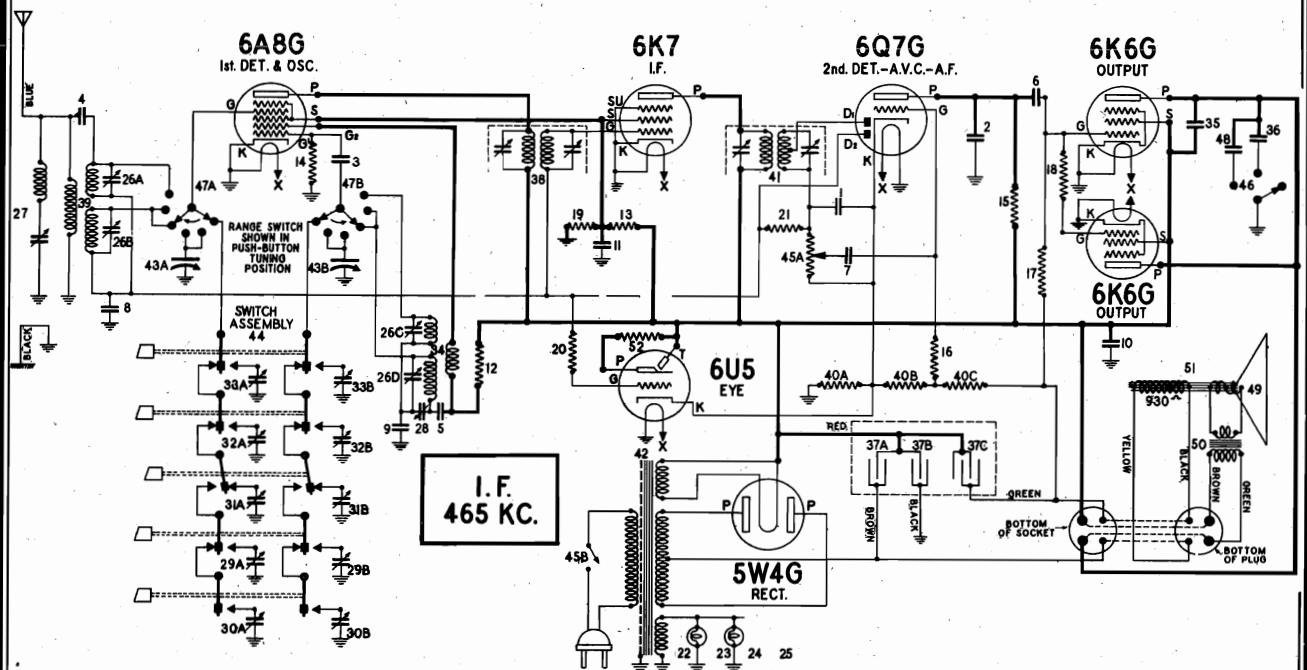


DIAGRAM NUMBER	PART NUMBER	DESCRIPTION	LIST PRICE
1-2	83539	Condenser - mica 260 mmfd.	.20
3	85061	Condenser - mica 51 mmfd.	.15
4	85454	Condenser - mica 11 mmfd.	.15
5-6	88030	Condenser - .01 mfd. 400 V.	.25
7-8	88189	Condenser - .05 mfd. 200 V.	.25
9	88587	Condenser - mica .0042 mfd.	.35
10	88682	Condenser - .1 mfd. 400 volt	.25
11	89421	Condenser - .1 mfd. 200 volt	.25
12	110550	Resistor - 10,000 ohms 1/2 W.	.15
13	110551	Resistor - 15,000 ohms 1/2 W.	.15
14	110552	Resistor - 47,000 ohms 1/2 W.	.12
15	110553	Resistor - 220000 ohms 1/2 W.	.12
16	110554	Resistor - 1 meg. 1/4 watt	.12
17	110559	Resistor - 470000 ohms 1/2 W.	.12
18	110560	Resistor - 100-ohms 1/4 watt	.12
19	110562	Resistor - 22,000 ohms 1/2 W.	.12
20	110570	Resistor - 2.2 meg. 1/4 watt	.15
21	110580	Resistor - 3.3 meg. 1/4 watt	.12
22-23-24	110629	Lamp - 6.3 volt .25 amps	.15
25			
26A to D	112792	Condenser - trimmer (4 sec.)	.60
27	112796	Coil-wave trap(with trimmer)	.50
28	112799	Cond.-padder (530 - 630 mmfd)	.36
29A to B	112942	Condenser - dual push button trimmer (1100 KC-1700 KC)	.36
30A to B			
31A to B	112943	Condenser - dual push button trimmer (770 KC -1350 KC)	.45
32A to B	112944	Condenser - dual push button trimmer (550 KC -1000 KC)	.50
33A to B			
34	113015	Coil Assembly - oscillator	1.00
35	113035	Condenser - ceramic tube .006 mfd. 600 volt	.14
36	113202	Condenser - .02 mfd. 600 V.	.15
		Condenser - electrolytic(dry)	
37A to C	112802	Sect.A-Brown-8 mfd.400 V. Sect.B-Black-4 mfd.400 V. Sect.C-Green-4 mfd.400 V.	1.80
38	112803	Transformer - 1st I.F.	1.20
39	113011	Coil - ant. broadcast & short wave	1.20
40A to C	113974	Resistor - bleeder Section A - 33 ohms Section B - 18 ohms Section C - 133 ohms	.45
41	113975	Transformer - 2nd I.F.	1.20

SOCKET VOLTAGES

ALL D. C. POTENTIAL MEASURED TO CHASSIS
ANTENNA GROUNDED
DIAL TUNE TO 540 KC.

TUBES	FUNCTION OF TUBE	H	P	S	G ₁	G ₂	G	G _{SU}	K
6A8G	OSCILLATOR & 1ST DET.	6.0 A.C.	200	85	-10	150	SEE NOTE A		0
6K7G	I. F.	6.0 A.C.	200	85			SEE NOTE A	0	0
6Q7G	2ND DET.-AMP. & A.V.C.	6.0 A.C.	95				DIODE PLATES SEE NOTE B		-2.8
6K6G	OUTPUT	6.0 A.C.	185	200			SEE NOTE C		0
6K6G	OUTPUT	6.0 A.C.	185	200			SEE NOTE C		0
5W4G	RECTIFIER	5.0 A.C.	340 A.C.	340 A.C.					

DROP ACROSS SPEAKER FIELD 65 VOLTS

Use a high resistance voltmeter of at least 1,000 ohms per volt.
NOTE A: The control grid bias for the 6A8G, 6K7G and the diode plates of the 6Q7G tubes is -2.8 volts measured across resistor 40A.
NOTE B: The control grid bias for the 6Q7G tube is -4.3 volts measured across resistors 40A and 40B.
NOTE C: The control grid bias for the 6K6G tubes is -14.5 volts measured across resistors 40A, 40B and 40C.

42	113978	Transformer - power 117 volt 60 cycle	4.80
43A to B	113979	Condenser - variable gang	3.00
44	113981	Push button switch assembly	2.70
45A to B	113982	Volume control - 500,000 ohms (with switch)	.98
46	113983	Switch for tone control	.42
47A to B	113984	Switch - range	1.05
48	114058	Condenser - .08 mfd. 600 V.	.26
49	R-114134	Cone & Voice coil assembly (for R-115028 speaker)	2.75
50	R-114135	Transformer - output	2.35
51	R-115028	Speaker - dynamic (10 in.)	7.50
52	110554	Resistor - 1 meg. 1/4 watt	.12

MODEL S7427-1, Early
Chassis R314
Alignment, Trimmers
Socket

FIRESTONE TIRE & RUBBER CO.

ALIGNMENT EQUIPMENT & PROCEDURE


For alignment, an output meter and an accurately calibrated signal generator with a tuning range from 465 KC. to 14 MC. are required.

- 1- Connect the output meter across the voice coil or between the plate of either of the 6K6G tubes and ground through a .1 mfd. condenser, (these tubes are connected in parallel, not push-pull). The connection will depend upon the type of meter. (The more sensitive type should be connected across the voice coil.)
- 2- Connect the ground lead of the signal generator to the chassis of the receiver and keep it connected in this manner throughout the entire alignment procedure.
- 3- Turn the volume control to the maximum volume position and leave it in this position throughout the entire alignment procedure.
- 4- With the gang condenser in full mesh, set the pointer to the last mark on the left end of the dial scale. If the pointer is only slightly off calibration, loosen the set screw in the pointer cord drive drum, and with the gang condenser in full mesh turn the drum until the pointer is in the correct position. If the pointer is off calibration several dial divisions, release it from the pointer drive cord by spreading the clip on the pointer. Then slide the pointer along the cord until it is set to the last division on the left end of the dial scale. Hold the pointer in place and check to see if the gang condenser is still fully meshed, then tighten the pointer clip being careful not to cut the cord. Place a drop of household or speaker cement on the cord and pointer clip to prevent the pointer from slipping.

DUMMY ANT. IN SERIES WITH SIG. GEN.	CONNECTION OF SIG. GENERATOR OUTPUT TO RECEIVER	SIGNAL GENERATOR FREQUENCY	BAND SWITCH POSITION	RECEIVER DIAL SETTING	TRIMMER NUMBER	TRIMMER DESCRIPTION	TYPE OF ADJUSTMENT
.1 MFD. CONDENSER	CONTROL GRID OF 6AG6 TUBE	465 KC	AMERICAN (CENTER)	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	1-2 3-4	2ND I.F. 1ST I.F.	ADJUST FOR MAXIMUM OUTPUT. THEN REPEAT ADJUSTMENT.
400 OHM CARBON RESISTOR	ANTENNA LEAD (Blue Wire)	465 KC	AMERICAN (CENTER)	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	5	WAVE TRAP	ADJUST FOR MINIMUM OUTPUT USING A STRONG GENERATOR SIGNAL.
400 OHM CARBON RESISTOR	ANTENNA LEAD (Blue Wire)	1500 KC	AMERICAN (CENTER)	1500 KC	6	AMERICAN OSCILLATOR (Shunt)	ADJUST TRIMMER TO BRING IN SIGNAL.
400 OHM CARBON RESISTOR	ANTENNA LEAD (Blue Wire)	1500 KC	AMERICAN (CENTER)	TUNE TO 1500 KC GENERATOR SIGNAL	7	AMERICAN ANTENNA	ADJUST FOR MAXIMUM OUTPUT
400 OHM CARBON RESISTOR	ANTENNA LEAD (Blue Wire)	600 KC	AMERICAN (CENTER)	TUNE TO 600 KC GENERATOR SIGNAL	8	AMERICAN OSCILLATOR (Series Pad)	ADJUST FOR MAXIMUM OUTPUT. TRY TO INCREASE OUTPUT BY DETUNING TRIMMER AND RETURNING RECEIVER DIAL UNTIL MAXIMUM OUTPUT IS OBTAINED.
400 OHM CARBON RESISTOR	ANTENNA LEAD (Blue Wire)	20 MC	FOREIGN (COUNTER-CLOCKWISE)	14 MC	9	FOREIGN OSCILLATOR (Shunt)	ADJUST TO BRING IN SIGNAL. CHECK TO SEE IF PROPER PEAK WAS OBTAINED BY TUNING IN IMAGE AT APPROX. 13.1 MC. IF IMAGE DOES NOT APPEAR REALIGN AT 14 MC. WITH TRIMMER SCREW FARTHER OUT. RECHECK IMAGE.
400 OHM CARBON RESISTOR	ANTENNA LEAD (Blue Wire)	20 MC	FOREIGN (COUNTER-CLOCKWISE)	14 MC	10	FOREIGN ANTENNA	ADJUST FOR MAXIMUM OUTPUT. TRY TO INCREASE OUTPUT BY DETUNING TRIMMER AND RETURNING RECEIVER DIAL UNTIL MAXIMUM OUTPUT IS OBTAINED.

DIAL & MISCELLANEOUS PARTS


PART NUMBER	DESCRIPTION	LIST PRICE
81145	Retaining Ring-for drive shaft-Per C	.50
85427	Socket - octal base (standard)	.15
85827	Set Screw - 8/32 square head for tone or band indicator	.02
88348	Eyelet - for dial cord-Per dz.	.05
89746	Washer - (paper) for back of knobs	.005
110496	Plug - speaker (4 prong)	.12
110501	Socket - 4 prong (for spkr.)	.16
110829	Washer - chassis mtg.	.01
111085	Sleeve - felt for tuning eye	.03
111302	Cord - dial drive 6 or 50 ft. lengths	.05
111357	Spring - drive cord tension	.03
112745	Clip - coil mtg. (osc. & ant.)	.01
112865	Shield - base, for tubes	.03
112874	Bolt - chassis mtg.	.01
112879	Screw - escutcheon mtg.	.03
113025	Socket-octal base(with special ground)	.15
113077	Shield - tube	.15
113093	Socket - for dial lamp	.18
113442	Bracket - for tuning eye	.18
113710	Washer - ceramic for push button trimmer	.015
113722	Knob - tone and band switch	.04
113723	Knob - tuning and volume	.08
113800	Escutcheon - dial	1.00
113815	Escutcheon - push button	.80
113887	Push button	.04
113890	Escutcheon - eye	.10
113973	Dial drum and bushing assembly	.45
113987	Shaft - tuning	.10
113990	Band indicator & link assembly	.30
113994	Spring - for tone indicator	.015
113995	Tone indicator & link assembly	.30
113996	Cable & plug for tuning eye	.80
114000	Dial scale	.85
114001	Clamp - for dial scale retaining	.08
114002	Pointer - for dial	.12
114007	Dial mtg. plate & bracket	.60
114041	Tabs - station call letters	.35

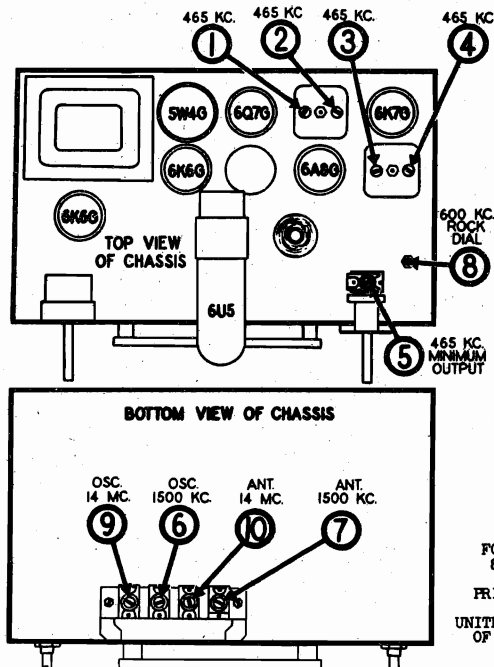

FORM NO. 8815
PRINTED IN UNITED STATES OF AMERICA

FIRESTONE TIRE & RUBBER CO.

MODEL S7427-1, Late Schematic, Voltage

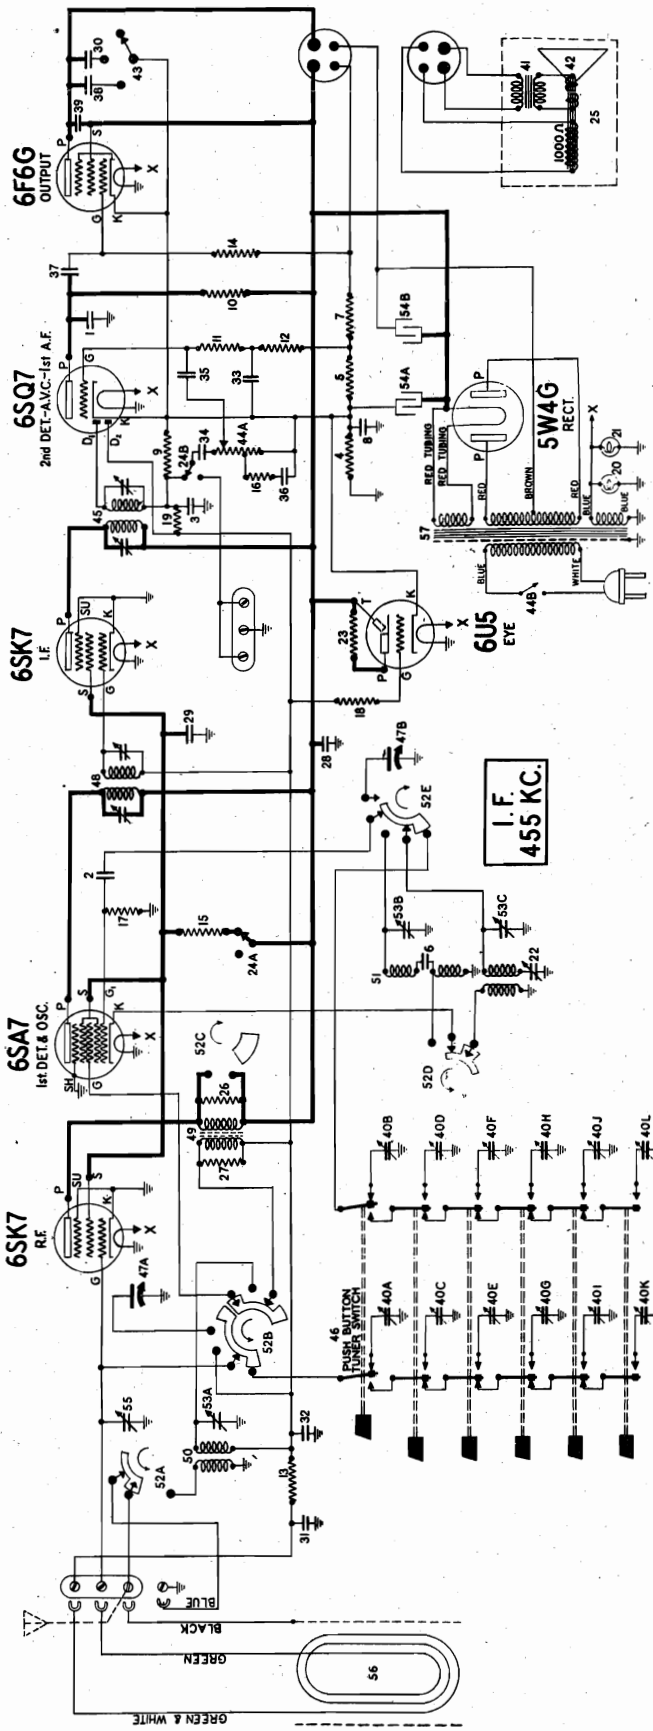

ELECTRICAL PARTS (Continued)

Diagram Number	Part Number	Description	List Price
46	117225	Switch—push button	3.00
47A-47B	117527	Condenser—variable tuning	3.25
48	118337	Transformer—1st I.F.	1.20
49	118338	Transformer—R.F.	1.00
50	118342	Coil—short wave antenna	.80
51	118343	Coil—oscillator	.70
52A to 52E	118414	Range switch	1.50
53A-53B-53C	118417	Condenser—3 section trimmer	.70
54A-54B	118421	Condenser—electrolytic, 10 mid., 450 v.	1.50
55	118431	Condenser—trimmer	.22
56	118482	Loop antenna	1.00
57	118488	Power transformer	3.00

ELECTRICAL PARTS

Diagram Number	Part Number	Description	List Price
1	83539	Condenser—mica, 280 mmfd.	\$0.20
2	85061	Condenser—mica, 510 mmfd.	.15
3	85894	Condenser—mica, 510 mmfd.	.25
4	88461	Resistor—carbon—150 ohms, 1/4 W.	.12
5	88465	Wire wound resistor, 25 ohms, 1/2 watt.	.15
6	88587	Condenser—mica, .0042 mfd.	.35
7	89762	Resistor—220 ohms, wire wound, 1 watt	.16
8	110977	Condenser—electrolytic, 10 mid., 35 volt.	.90
9-10	110553	Resistor—carbon, 250,000 ohms, 1/4 watt.	.12
11-12	110554	Resistor—carbon, 1 megohm, 1/4 watt.	.12
13-14	110555	Resistor—carbon, 15,000 ohms, 1/4 watt.	.12
15	110556	Resistor—carbon, 22,000 ohms, 1/4 watt.	.12
16	110557	Resistor—carbon, 33,000 ohms, 1/4 watt.	.12
17	110558	Resistor—carbon, 3.3 meg., 1/4 watt.	.12
18-19	110580	Lamp—6.3 volt—25 amps.	.15
20-21	112792	Condenser—Paper (530 to 630 mmfd.)	.36
22	112792	Resistor—Insulated—1 megohm—1/4 watt.	.15
23	114141	Switch—D.P.D.T.	.44
24A-24B	M-115059	Speaker—electro dynamic, 10"	7.80
25	116053	Resistor—carbon, 68,000 ohms, 1/10 watt.	.12
26	116096	Resistor—carbon, 68,000 ohms, 1/10 watt.	.10
27	116625	Condenser—1 mfd. 600 volt.	.25
28-29	116640	Condenser—.01 mfd. 600 volt.	.25
30	116819	Condenser—.05 mfd. 600 volt.	.25
31-32-33	116893	Condenser—.02 mfd. 600 volt.	.25
34-35-36-37	117022	Condenser—.0002 mfd. 600 volt.	.20
38	117022	Condenser—.0002 mfd. 600 volt.	.15
40A to 40E	M-117081	Push Button Trimmer Gang Cond. Assembly	5.20
41	M-117081	Transformer—output for M-115059 speaker.	1.50
42	M-117082	Cone and voice coil for M-115059 speaker.	2.20
43	117202	Switch—tone control	.65
44A-44B	117212	Volume control—1 meg., with switch.	1.30
45	117216	Transformer—2nd I.F.	1.50

SOCKET VOLTAGES—ALL D.C. POTENTIAL MEASURED TO CHASSIS
ANTENNA GROUNDED
DIAL TUNED TO 540 K.C.

TUBE	FUNCTION	H	K	G	G ₁	S	SU	P	D ₁	D ₂
6SK7	R.F. Amp.	6.0 A.C.	0	-3.2*		80	0	240		
6SA7	1st Det. & Osc.	6.0 A.C.	0	-3.2*	-8	80	0	240		
6SK7	I.F. Amp.	6.0 A.C.	0	-3.2*		80	0	240		
6SQ7	2nd DET.-A.V.C.-1st A.F.	6.0 A.C.	-3.2	-4.5*				135	-3.2*	
6F6G	Output	6.0 A.C.	-3.2	-19*		240		220		
6U5	Eye	6.0 A.C.	-3.2	-3.2*						
5W4G	Rectifier	5.0 A.C.								

*Measured at Bias Resistor
Use a high resistance voltmeter of at least 1000 ohms per volt.


MODEL S7427-1, Late
Alignment, Trimmers
Socket, Notes

FIRESTONE TIRE & RUBBER CO.

FOR ALIGNMENT: An output meter and an accurately calibrated signal generator are required.

1. Connect the output meter across the voice coil or between the plate of the 6F6G output tube and ground in series with a .1 mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the chassis.
3. Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure.
4. Remove the blue wire from the extreme left hand screw at the rear of the chassis and allow it to float free.

Dummy Ant in Series with Sig. Gen.	Connection of Sig Generator Output To Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Front Lug of Gang Condenser	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	1-2	2nd I. F.	Adjust for maximum output. Then repeat adjustment.
					3-4	1st I. F.	
400 OHM Carbon Resistor	Black Wire on Antenna Terminal Strip	14 MC	Foreign	14 MC	5	Foreign Oscillator (Shunt)	Adjust for maximum output. Check to see if proper peak was obtained by tuning in image at approx. 13.1 MC. If image does not appear realign at 14 MC. with trimmer screw farther out. Recheck image.
400 OHM Carbon Resistor	Black Wire on Antenna Terminal Strip	14 MC	Foreign	14 MC	6	Foreign Antenna	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.
200 MMFD. Mica Condenser	Black Wire on Antenna Terminal Strip	1500 KC	Broadcast	1500 KC	7	Broadcast Oscillator (Shunt)	Adjust for maximum output.
200 MMFD. Mica Condenser	Black Wire on Antenna Terminal Strip	1500 KC	Broadcast	Tune To 1500 KC Generator Signal	8	Broadcast Antenna	Adjust for maximum output.
200 MMFD. Mica Condenser	Black Wire on Antenna Terminal Strip	600 KC	Broadcast	Tune To 600 KC Generator Signal	9	Broadcast Oscillator (Series Pad)	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.

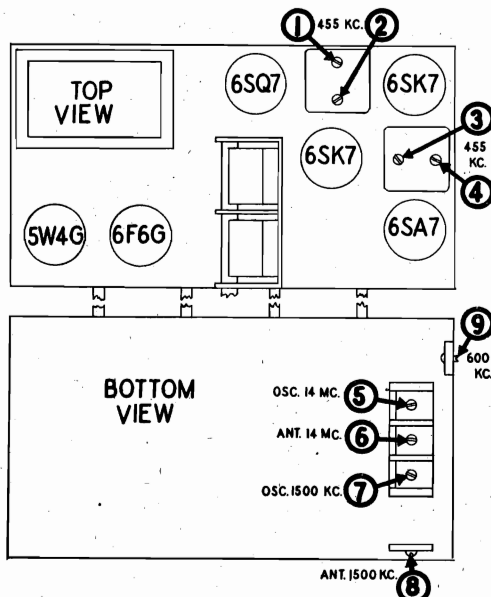

DIAL AND MISCELLANEOUS PARTS

Part Number	Description	List Price
116280	Back-cabinet	\$0.36
83552	Bolt—chassis mounting No. 10 x 7/8	.03
113442	Bracket—for tuning eye	.16
114955	Clamp—for dial cord	.01
114001	Clamp—for dial scale retaining	.08
112745	Clip—coil mounting	.01
116948	Cord—dial drive (supplied in 6 ft. lengths)	.18
117057	Cord—drive	.15
118450	Dial scale	1.00
118480	Disc—for end of loop mounting	.05
117029	Drive drum and bushing	.50
113800	Escutcheon—for dial	1.00
113890	Escutcheon—for tuning eye	.10
117233	Escutcheon—for push buttons	.35
117087	Knob—for tuning or volume	.12
118483	Mounting board for loop antenna	2.50
118484	Mounting block for loop antenna	.60
117245	Pin for push buttons	.03
114002	Pointer—for dial	.12
117234	Push button	.08
81145	Retaining ring—for drive shaft	Per C .50
83624	Screw—self tapping 8 x 1/4	.01
85040	Screw—No. 6 Hex. Hd.	Per C .35
113191	Screw—special No. 8—32 x 1 1/2	.01
114914	Screw—special head for mounting escutcheon	.15
85827	Set screw—8-32 square head	.02
118475	Shield—for loop antenna	1.00
110501	Socket—4 prong (for speaker)	.12
114117	Socket—dial lamp	.18
116690	Socket—small octal base	.12
113177	Spring—dial cord tension	.09
117315	Station call letter tabs	.55
118416	Tuning eye cable and socket	.70
116530	Washer (paper) for back of knobs	.005
111456	Washer—spring washer	Per C .50

PHONOGRAPH & TELEVISION CONNECTIONS



PHONOGRAPH CONNECTIONS: Connect the wires from a phonograph record player to the left hand and middle terminals on the terminal strip nearest the middle of the chassis on the back of the chassis. Push the black sliding button on the back of the chassis to the right ("TELE. PHONO" position) for phonograph or television operation. This switch must be in the "RADIO" position for radio reception.

Turn the volume knob on the record player to the maximum volume position and control volume by means of the volume control on the radio.

TELEVISION CONNECTIONS: Connect the wires from a television attachment unit to the right hand and middle terminals on the terminal strip. Operation will now be the same as for phonograph operation.

FIRESTONE TIRE & RUBBER CO.

MODEL S7427-3, Chassis R316
Schematic, Voltage, Socket

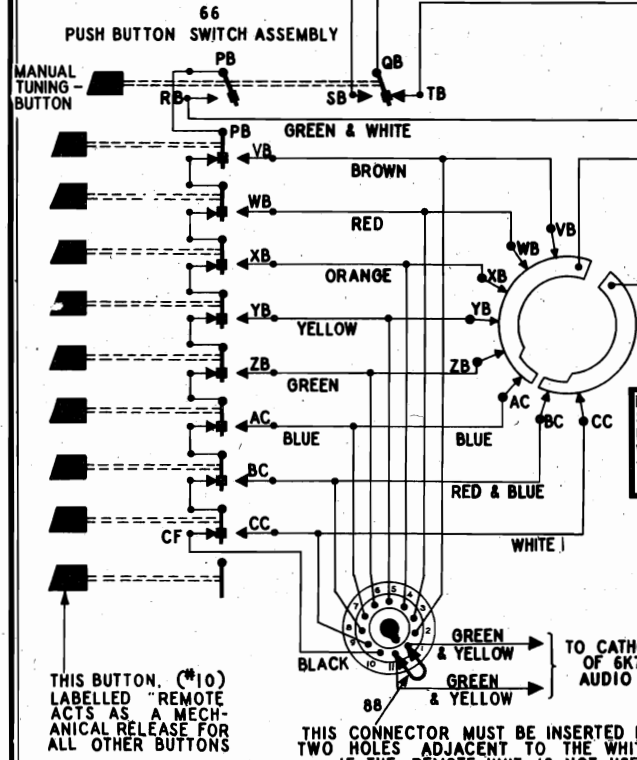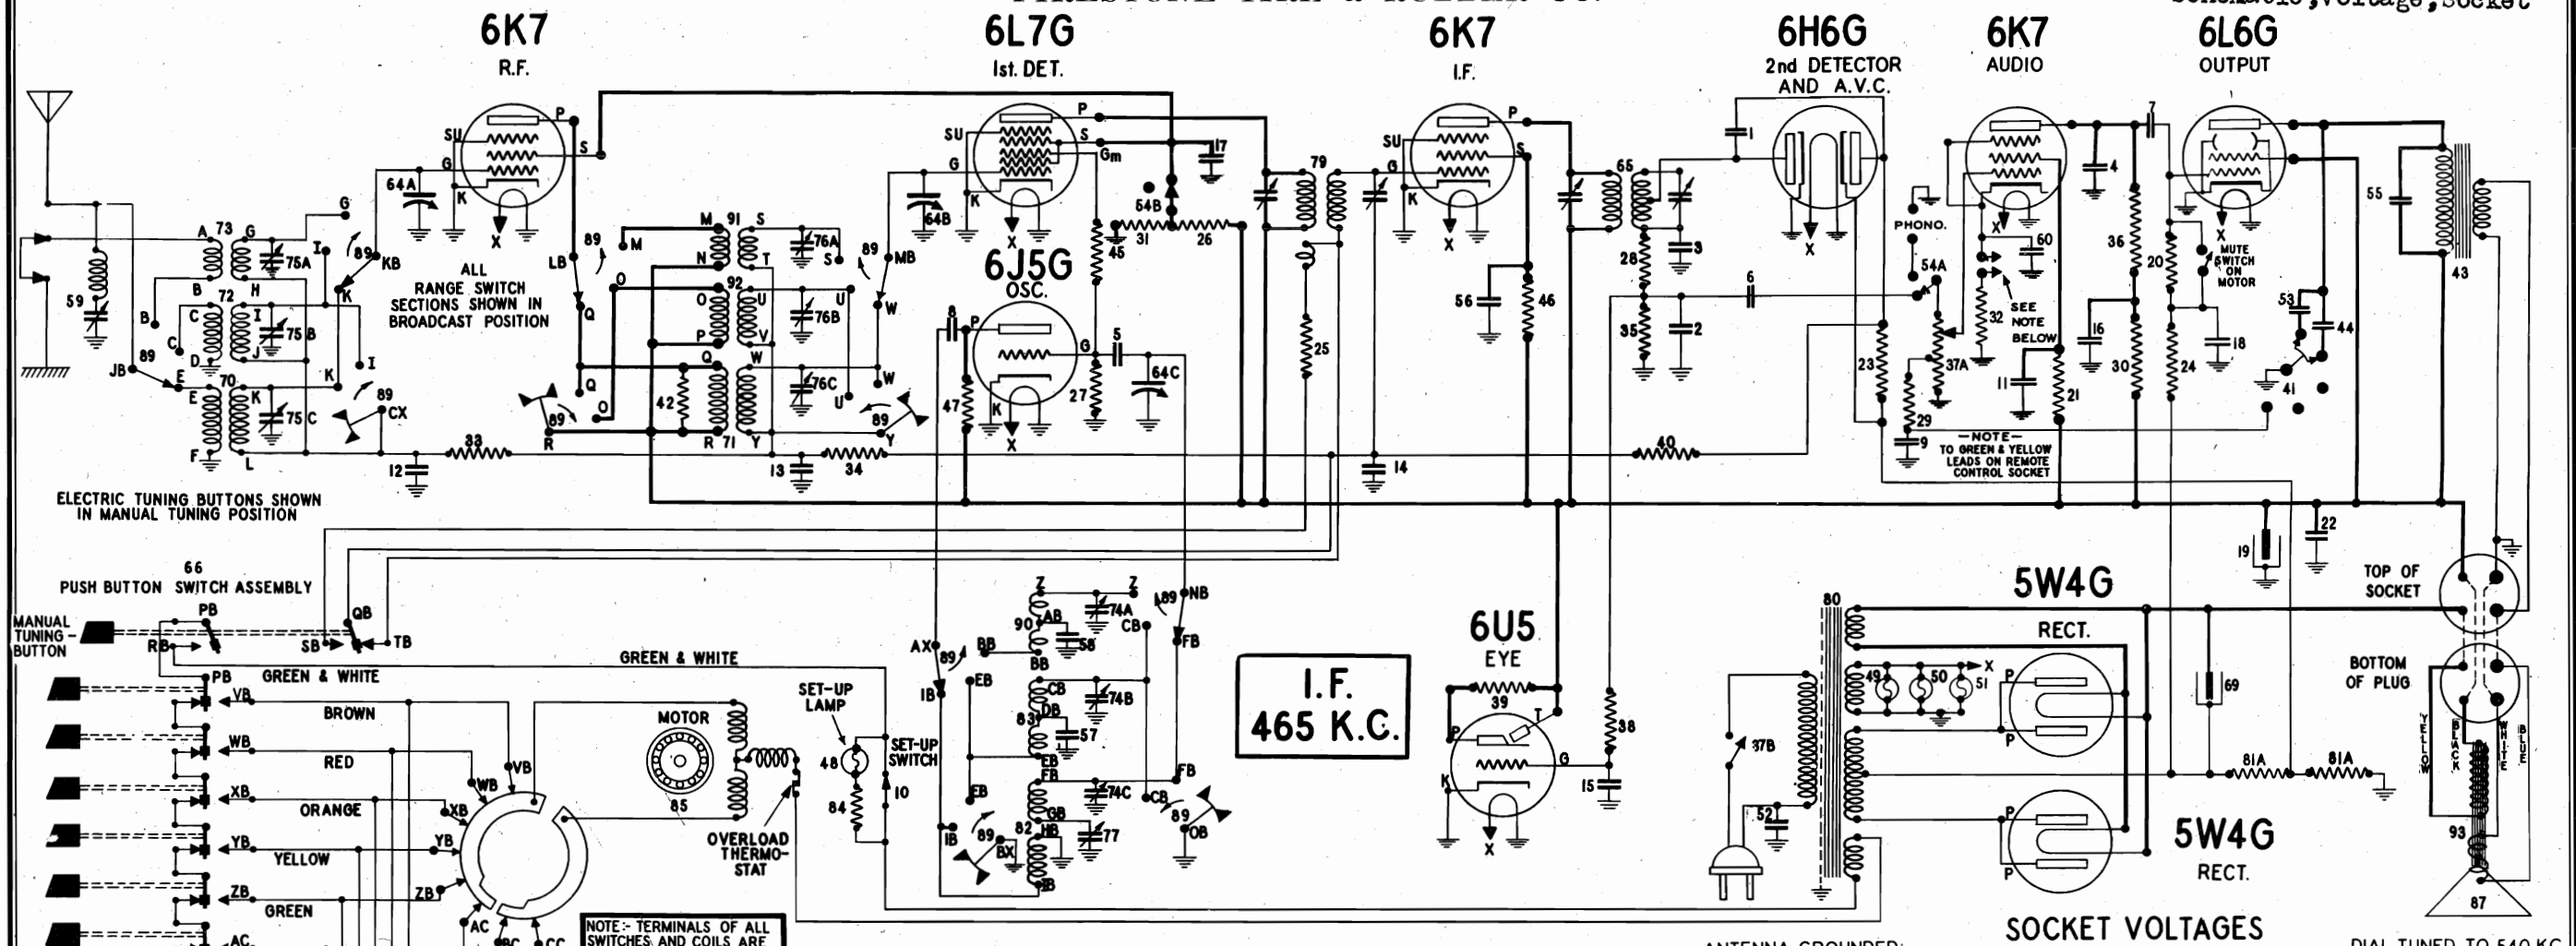

NOTE: TERMINALS OF ALL SWITCHES AND COILS ARE LETTERED TO CORRESPOND WITH PICTORIAL VIEWS OF THESE PARTS ON THE OPPOSITE SIDE OF THIS PAGE.


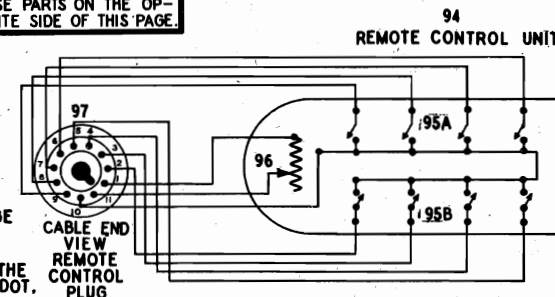


DIAGRAM NUMBER	PART NUMBER	DESCRIPTION	LIST PRICE
1-2-3	83783	Condenser - mica, 110 mmf.	.20
4	85394	Condenser - mica 510 mmf.	.25
5	85061	Condenser - mica 51 mmfd.	.15
6-7	86026	Condenser - .02 mfd. 400 volt	.25
8	88030	Condenser - .01 mfd. 400 volt	.25
9	88030	Condenser - .01 mfd. 400 volt	.25
10	88054	Switch - for set-up	.30
11	88682	Condenser - .1 mfd. 400 volt	.25
12-13	88189	Condenser - .05 mfd. 200 volt	.25
14-15	88682	Condenser - .1 mfd. 400 volt	.25
16	88682	Condenser - .1 mfd. 400 volt	.25
17	89421	Condenser - .1 mfd. 200 volt	.25
18	89532	Condenser - .25 mfd. 200 volt	.32
19	89937	Condenser - elect. 30 mfd. 450 V	1.60
20	110553	Resistor - 220,000 ohms 1/4 watt	.12
21	110554	Resistor - 1 meg. 1/4 watt	.12
22	88682	Condenser - .1 mfd. 400 volt	.25
23	110559	Resistor - 470,000 ohms 1/4 watt	.12
24	110564	Resistor - 100,000 ohms 1/4 watt	.12
25	110975	Resistor - wire 33 ohms 1/2 watt	.12
26	112953	Resistor - 10,000 ohms 3 watts	.25

DIAGRAM NUMBER	PART NUMBER	DESCRIPTION	LIST PRICE
27-28	110552	Resistor - 47,000 ohms 1/4 watt	.12
29-30	112954	Resistor - 10,000 ohms 1 watt	.16
31	112955	Resistor - 1,000 ohm 1/4 W. (10%)	.12
32	110553	Resistor - 220,000 ohms 1/4 watt	.12
33-34-35	112959	Resistor - 120,000 ohms 1/4 W. (10%)	.12
36	112959	Resistor - 120,000 ohms 1/4 W. (10%)	.12
37A-37B	113258	Vol. Cont. - 1000000 ohm (off on sw.)	.95
38-39-40	110554	Resistor - 1 megohm 1/4 watt	.12
41	114095	Tone Control switch	.70
42	110557	Resistor - 4,700 ohms 1/4 watt	.12
43	114097	Transformer - output	2.00
44	114106	Condenser - .02 mfd. 750 volt	.25
45	110560	Resistor - 100 ohms 1/4 watt	.12
46	110564	Resistor - 100,000 ohms 1/4 watt	.12
47	110568	Resistor - 15,000 ohms 1 watt	.15
48-49	110629	Lamp - 6.3 volt - .25 amps	.15
50-51	111214	Condenser - .01 mfd. 600 volt	.24
52	114108	Condenser - .03 mfd. 750 volt	.25
53	114108	Condenser - .03 mfd. 750 volt	.25
54A-54B	114141	Switch - radio-phono (D.P.D.T.)	.44
55	114504	Condenser - .01 mfd. 750 volt	.25
56	111252	Condenser - .05 mfd. 400 volt	.13
57	112426	Condenser - mica 1650 mmfg. (3%)	.30
58	112427	Condenser - mica 4050 mmfg. (3%)	.40
59	112796	Coil - wave trap (with trimmer)	.50
60	110377	Condenser - elect. 10 mfd. 25 V.	.80
64A-64C	113219	Condenser - variable gang	6.80
65	113229	Transformer - 2nd I.F.	1.64
66	113256	Push Button Switch Assembly	3.75
69	113261	Condenser - 30 mfd. 450 volt	1.40
70	113295	Coil - antenna (B.C.)	1.20
71	113296	Coil - R.F. (B.C.)	1.30
72	113298	Coil - antenna (police)	.50
73	113301	Coil - antenna (S.W.)	.52
74A-74C	113319	Condenser - trimmer - 3 section	.54
75A-75C	113320	Condenser - trimmer - 3 section	.54
77	113346	Condenser - padding	.38
79	114103	Transformer - 1st I.F.	1.90
80	114101	Transformer - 117 volt 60 cycle	9.00
81A-81B	114105	Bias Resistor - Section A-23 ohm Section B-90 ohm	.38
82	113411	Coil - oscillator (B.C.)	.50
83	113412	Coil - oscillator (police)	1.20
84	113430	Resistor - candohm 90 ohms	.26
85	114092	Motor - for electric tuner	8.00
87	R-114165	Cone - voice coil assembly	2.40
88	113499	Connector Link - for remote control plug	.01
89	113599	Switch - range	2.10
90	113607	Coil - oscillator (S.W.)	.52
91	113608	Coil - R.F. (S.W.)	.60
92	113609	Coil - R.F. (Police)	.50
93	R-115031	Speaker (dynamic) (12 inch)	9.25
94	114200	Remote control unit	
95A-95B	113644	Switch - two section (in remote control unit)	4.20
96	113646	Volume control (35,000 ohms) on case for remote control unit	.75
	113650	Case for remote control unit	1.20
	113651	Push Button - for remote control unit	.08

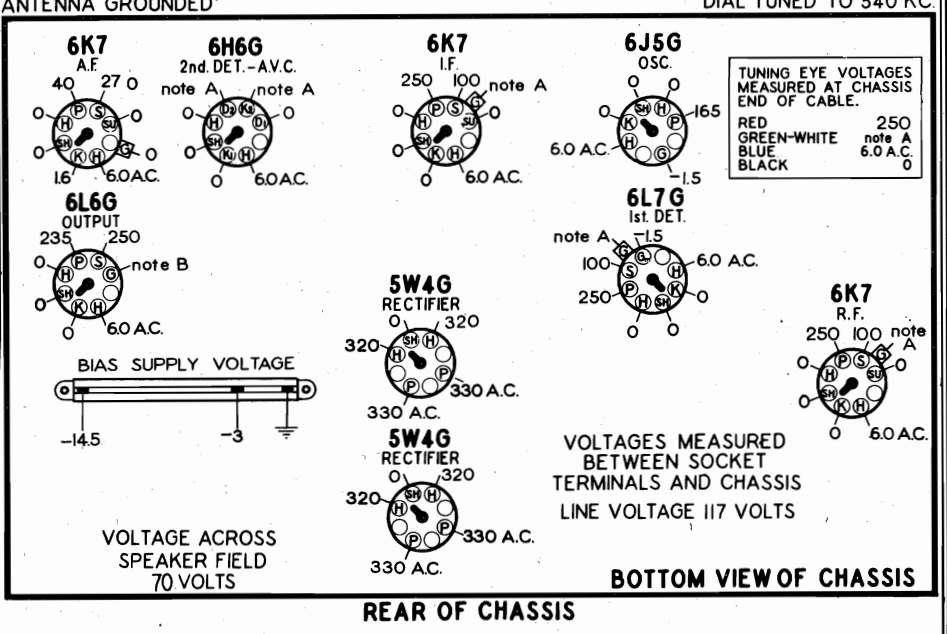

Use a high resistance voltmeter of at least 1000 ohms per volt.

NOTE A: The bias for the control grids of the 6L7-G, 6K7-R.F., 6K7-I.F. and the diode plate (D₂) and cathode (K₂) of the 6H6-G tubes is -3.0 volts measured across resistor 81A.

NOTE B: The bias for the control grid of the 6V6-G output tube is -14.5 volts measured across resistors 81A and 81B.

MODEL S7427-3, Chassis R316
Alignment, Socket, Trimmers
Coils, Tuner, Dial Drive

FIRESTONE TIRE & RUBBER CO.

ALIGNMENT EQUIPMENT & PROCEDURE

FOR ALIGNMENT: An output meter and an accurately calibrated signal generator with a tuning range from 465 KC to 20 MC. are required.

- 1 Connect the output meter across the voice coil or, in series with .1 mfd. condenser, from the plate of the 6L6-G output tube to ground, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
- 2 Connect the ground lead of the signal generator to the "G" post on the antenna terminal strip at the rear of the chassis, or to the metal chassis.
The ground and doublet terminals on the antenna terminal strip must be connected together throughout the alignment procedure.



3 With the gang condenser in full mesh set the pointer to the last mark on the left end of the dial scale. If the pointer is incorrectly set, it is only necessary to loosen the set screw on the dial cord drive drum and push the gang condenser to full mesh with the pointer properly set, then retighten the set screw.

4 Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure. IMPORTANT: If the remote control unit is plugged in, be sure that its volume control is also in the maximum volume position.

- IMPORTANT -


THE FIRST PUSH-BUTTON ON THE LEFT, LABELLED "MANUAL", MUST BE PUSHED IN WHEN ALIGNING. FAILURE TO PUSH IN THIS BUTTON WILL MAKE CORRECT ALIGNMENT IMPOSSIBLE.

DUMMY ANT IN SERIES WITH SIGNAL GENERATOR	CONNECTION OF SIGNAL GENERATOR OUTPUT TO RECEIVER	SIGNAL GENERATOR FREQUENCY	RANGE SWITCH POSITION	RECEIVER DIAL SETTING	TRIMMER NUMBER	TRIMMER DESCRIPTION	TYPE OF ADJUSTMENT
1 MFD. CONDENSER	CONTROL GRID OF 6L7-G TUBE	465 KC.	BROADCAST (CLOCKWISE)	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	1-2	2ND I.F.	ADJUST FOR MAXIMUM OUTPUT. THEN REPEAT ADJUSTMENT.
					3-4	1ST I.F.	
400 OHM CARBON RESISTOR	ANTENNA TERMINAL	465 KC.	BROADCAST (CLOCKWISE)	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	5	WAVE TRAP	ADJUST FOR MINIMUM OUTPUT USING A STRONG GENERATOR SIGNAL.
400 OHM CARBON RESISTOR	ANTENNA TERMINAL	1500 KC.	BROADCAST (CLOCKWISE)	1500 KC.	6	BROADCAST OSCILLATOR (SHUNT)	ADJUST FOR MAXIMUM OUTPUT.
400 OHM CARBON RESISTOR	ANTENNA TERMINAL	1500 KC.	BROADCAST (CLOCKWISE)	TUNE TO 1500 KC. GENERATOR SIGNAL	7	BROADCAST R. F.	ADJUST FOR MAXIMUM OUTPUT.
					8	BROADCAST ANTENNA	
400 OHM CARBON RESISTOR	ANTENNA TERMINAL	600 KC.	BROADCAST (CLOCKWISE)	TUNE TO 600 KC. GENERATOR SIGNAL	9	BROADCAST OSCILLATOR (SERIES PAD)	ADJUST FOR MAXIMUM OUTPUT. TRY TO INCREASE OUTPUT BY DETUNING TRIMMER AND RETURNING RECEIVER DIAL UNTIL MAXIMUM OUTPUT IS OBTAINED.
400 OHM CARBON RESISTOR	ANTENNA TERMINAL	6 MC.	INTERMEDIATE (CENTER)	6 MC.	10	INTERMEDIATE (POLICE) OSCILLATOR (SHUNT)	ADJUST FOR MAXIMUM OUTPUT. CHECK TO SEE IF PROPER PEAK WAS OBTAINED BY TUNING IN IMAGE AT APPROX. 5.1 MC. IF IMAGE DOES NOT APPEAR REALIGN AT 6 MC. WITH TRIMMER SCREW FARTHER OUT. RECHECK IMAGE.
400 OHM CARBON RESISTOR	ANTENNA TERMINAL	6 MC.	INTERMEDIATE (CENTER)	TUNE TO 6 MC. GENERATOR SIGNAL	11	INTERMEDIATE R. F.	ADJUST FOR MAXIMUM OUTPUT
					12	INTERMEDIATE ANTENNA	
400 OHM CARBON RESISTOR	ANTENNA TERMINAL	20 MC.	FOREIGN (COUNTER-CLOCKWISE)	20 MC.	13	FOREIGN OSCILLATOR (SHUNT)	ADJUST FOR MAXIMUM OUTPUT. CHECK TO SEE IF PROPER PEAK WAS OBTAINED BY TUNING IN IMAGE AT APPROX. 19.1 MC. IF IMAGE DOES NOT APPEAR REALIGN AT 20 MC. WITH TRIMMER SCREW FARTHER OUT. RECHECK IMAGE.
400 OHM CARBON RESISTOR	ANTENNA TERMINAL	20 MC.	FOREIGN (COUNTER-CLOCKWISE)	TUNE TO 20 MC. GENERATOR SIGNAL	14	FOREIGN R. F.	ADJUST FOR MAXIMUM OUTPUT. TRY TO INCREASE OUTPUT BY DETUNING TRIMMER AND RETURNING RECEIVER DIAL UNTIL MAXIMUM OUTPUT IS OBTAINED.
					15	FOREIGN ANTENNA	

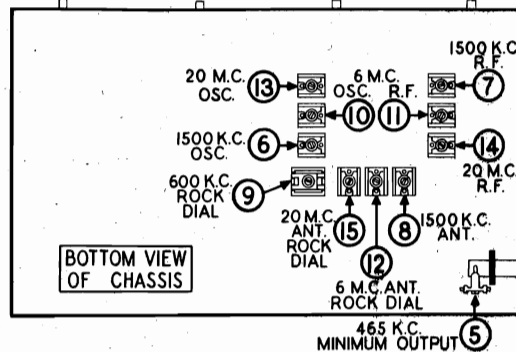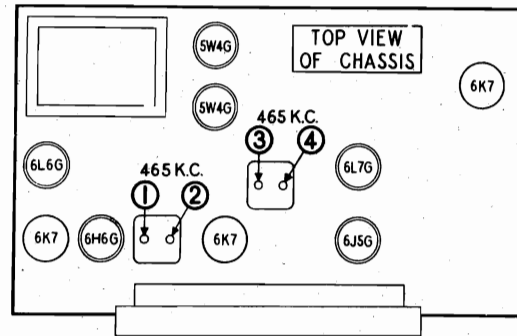

PICTORIAL VIEWS OF COILS AND SWITCHES

ALL TERMINALS ARE LETTERED TO CORRESPOND WITH THE SIMILARLY LETTERED TERMINALS SHOWN ON THE CIRCUIT DIAGRAM. TERMINALS WHICH ARE CONNECTED TOGETHER CARRY THE SAME LETTERS.

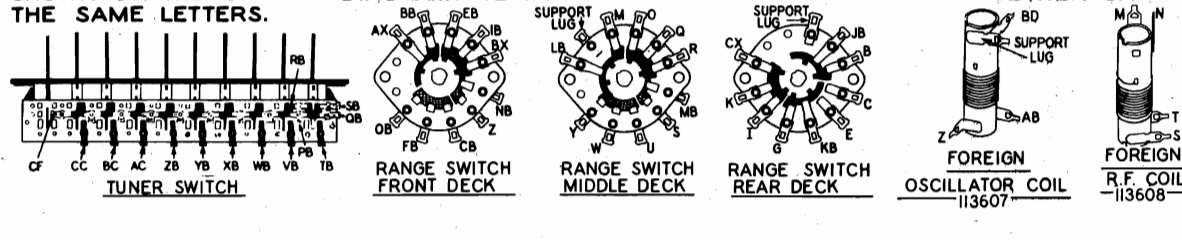

CHASSIS DESCRIPTION

The R-316 chassis is a 10 tube, Electric Push-Button Tuning Superheterodyne receiver. The tuning ranges are 535 to 1730 KC, 2.2 to 7.0 MC, and 3.8 to 22.5 MC.

Incorporated in each chassis is a ruggedly constructed Electric Push-Button Tuner Unit, which was primarily designed to give long-life and consistent accuracy of tuning. Aside from the automatic tuning system this receiver incorporates several features described in the following paragraph which the service man should carefully read as they may aid him in rapidly locating the source of trouble.

CIRCUIT FEATURES

VARIABLE SELECTIVITY: Two degrees of selectivity can be obtained by proper use of the first push-button labelled "Manual". When the button is in the "out" position the tuning will be broad. With this button in the "in" position the tuning will be sharp. Broadening is accomplished by inserting a resistor and coil in series with the secondary of the first I. F. transformer. The series coil is mutually coupled into the primary of the same I.F. transformer thereby causing a flattening of the overall selectivity.


HOW TO SET UP THE PUSH BUTTONS

1. Be sure that your set is first connected to a good antenna system.
2. Turn on the set and allow it to operate at least one-quarter hour before setting up the push buttons.
3. Make a list of eight nearby stations which you wish to tune in with automatic tuning buttons. Be sure to select nearby powerful stations, since weak stations will generally give better results when tuned manually. Arrange the list so that the lowest frequency station appears first, then the next lowest frequency continuing in this manner until the eight stations are arranged in the numerical order of their frequency. The frequency of your local stations may be obtained from your newspaper or radio call magazine.

Only buttons No. 2 to No. 9 are used for automatic tuning. IT IS IMPERATIVE THAT THESE BUTTONS BE SET-UP IN THE FOLLOWING ORDER: Button No. 2 must be set to tune in the station whose frequency is lowest in your list of eight stations. Button No. 3 must be set to tune in the station next higher in frequency. Continue to follow this procedure until Button No. 9 will be set to tune in the station whose frequency is highest in your list. The actual setting up of the buttons is done as follows:

4. Push in the "MANUAL" button and use the tuning knob to tune in the station (lowest frequency on your list) that you have selected for Button No. 2. Be sure to tune in the station correctly using the "Tuning Eye". The correct tuning point is indicated when the two open ends of the inverted "V" shaped shadow in the "Tuning Eye" are closest together.
5. Place the small black "set-up switch" button which appears on the back of the chassis in the right hand position. (See label on back of chassis.) LEAVE THIS SWITCH BUTTON IN THIS POSITION UNTIL ALL BUTTONS HAVE BEEN SET-UP.
6. PUSH IN BUTTON No. 2. The lamp mounted on the back of the chassis just to the right of the selector drum will be illuminated when the button is depressed. (See Fig. 1)

NOTE: If the lamp does not light up when the switch is in this position it indicates that Button No. 2 is already correctly set to the desired station and further adjustment need not be made for this button.

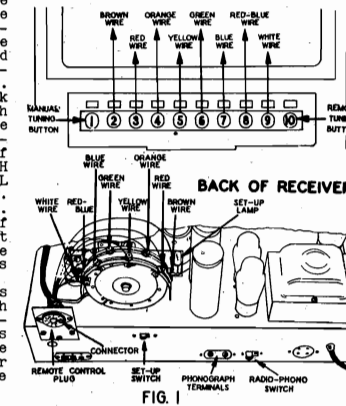


REMOTE CONTROL UNIT

This Air-Chief radio is designed to permit tuning from a remote point such as your armchair or any point within 20 ft. of the receiver cabinet. A special "Remote Tuner Kit" part No. 114200 is available to adapt your receiver for remote control. It can be purchased from any Firestone Store or Dealer. This accessory kit consists of a remote control unit incorporating eight push buttons and a remote volume control. The unit is connected by a flat flexible cable to an eleven prong plug, which fits into a corresponding socket at the left rear of the receiver chassis. Following are the instructions for installation of the remote control unit:

1. Turn off the radio set.
2. Remove the wire connector which joins the two holes adjoining the white dot on the eleven hole socket. IMPORTANT: If at any time you decide to discontinue the use of the remote control unit, remove the plug and reinsert this wire connector in the two holes adjoining the white dot. Failure to replace the connector will make the set inoperative.
3. Insert the remote control plug in its socket and locate the remote control unit at some convenient point within 20 ft. of the set. The connecting cable may be placed beneath the rug, or along the floor.
4. PRESS IN THE "REMOTE" BUTTON (#10) on the Push Button Tuner and the unit is now ready for operation.

REPLACING THE POINTER DRIVE CORD.

1. Tie one end of 53" of special dial cord (part No. 111302) to the spring, which is attached to Lug H.
2. Thread the free end of the cord through hole A in drum C (threading from the inside of the drum out) See Fig. 2.

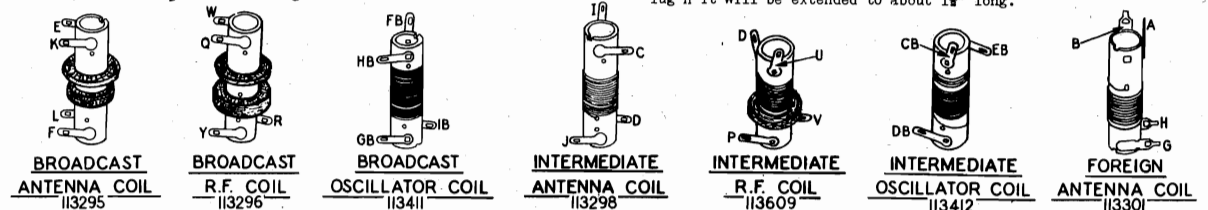

AUDIO SYSTEM: The audio voltage, developed across the diode load resistor is fed to the volume control which in turn couples the desired amount of this audio voltage to the control grid of the 6K7 1st audio tube. The output of this stage is coupled to the 6L6-G output tube. A mute switch connected across the control grid load resistor of the 6L6-G output tube is utilized to silence the receiver while the automatic tuning unit is in operation. This is accomplished by placing the mute switch on the back of the tuner motor. When the motor starts to operate the rotor pulls into the magnetic field of the stator, which causes the end of the motor shaft to push against the mute switch and close its contacts.

TUNER MOTOR

Failure of the Tuner Motor to operate will generally be found due to the following causes:

1. The small black set-up switch on the rear of the tuner must be in the left hand position. If this switch is in the right hand position, the set-up lamp is connected in series with the motor, and the motor cannot operate.
2. The overload thermostat on the motor will open when the temperature of the motor reaches a dangerous value (approximately 95° C.) The thermostat will close automatically when the motor cools down.

7. Locate the contactor corresponding to Button No. 2. This contactor has a BROWN lead attached to it (see Fig. 1 or label on back of chassis for the color of the wire associated with each button), and is the extreme right hand contact on the inner circle of the semi-circular bridge, when viewed from rear of chassis. Loosen the knurled nut on this contactor (not more than one-half turn), THEN SLIDE THIS CONTACTOR ALONG THE BRIDGE TO THE POINT INDICATED BY THE WHITE ARROWHEAD ON THE SIDE OF THE ROUND DRUM. When this point is reached, the lamp will go out. If the contactor is moved farther than the point at which the lamp extinguishes, the lamp will again be illuminated. Move the contactor back and forth between the two points at which the lamp extinguishes, and set the contactor midway between these two points. Then tighten the knurled nut as tightly as possible, with the fingers. The lamp should still be out after tightening the contactor. If it is not, the contactor must be reset.


8. Set up for Button No. 2 is now complete.
9. Set up the remaining seven buttons in a similar manner. The contactors for the remaining buttons can be identified as follows: (See Fig. 1 or label on back of chassis.)

- Button No. 2 - Brown Lead.
- Button No. 3 - Red Lead.
- Button No. 4 - Orange Lead.
- Button No. 5 - Yellow Lead.
- Button No. 6 - Green Lead.
- Button No. 7 - Blue Lead.
- Button No. 8 - Red-Blue Lead.
- Button No. 9 - White Lead.


10. AFTER ALL THE BUTTONS HAVE BEEN SET-UP YOU MUST PLACE THE SMALL BLACK SET-UP SWITCH BUTTON IN THE LEFT HAND POSITION (white dot showing). OTHERWISE THE ELECTRIC TUNER MOTOR WILL NOT OPERATE. (See label on back of chassis just below this switch.) This re-connects the motor and enables you to tune to any of the eight selected stations by pushing the proper button.

11. To use the Push Button Tuner it is only necessary to push the button for the station you desire.
12. The Push Button Tuner buttons may also be used on the Foreign or Intermediate bands. However, on these bands we recommend that rather than setting a button to a station, you set the buttons to some particular location on the dial where "foreign, police, aircraft or amateur stations are frequently received. Attempts to set buttons to short-wave stations are not recommended due to the extreme sharpness of tuning on these bands.
13. Label each button with the call letters of the stations you have selected, using the call letter tabs packed with your receiver. These tabs are to be moistened on their gummed side and inserted in the recesses in the escutcheon, directly above the push buttons.

3. After pulling the cord through hole A, make one half turn around the drum C in a clockwise direction (viewed from the front) using the front groove in the drum.

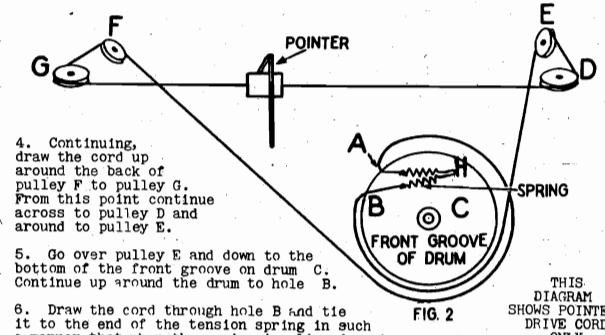

THIS DIAGRAM SHOWS POINTER DRIVE CORD ONLY.

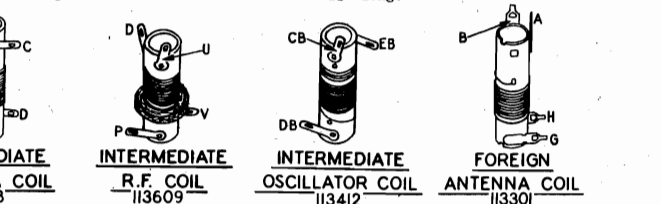

FIRESTONE TIRE & RUBBER CO.

MODEL S7427-7 Schematic, Voltage

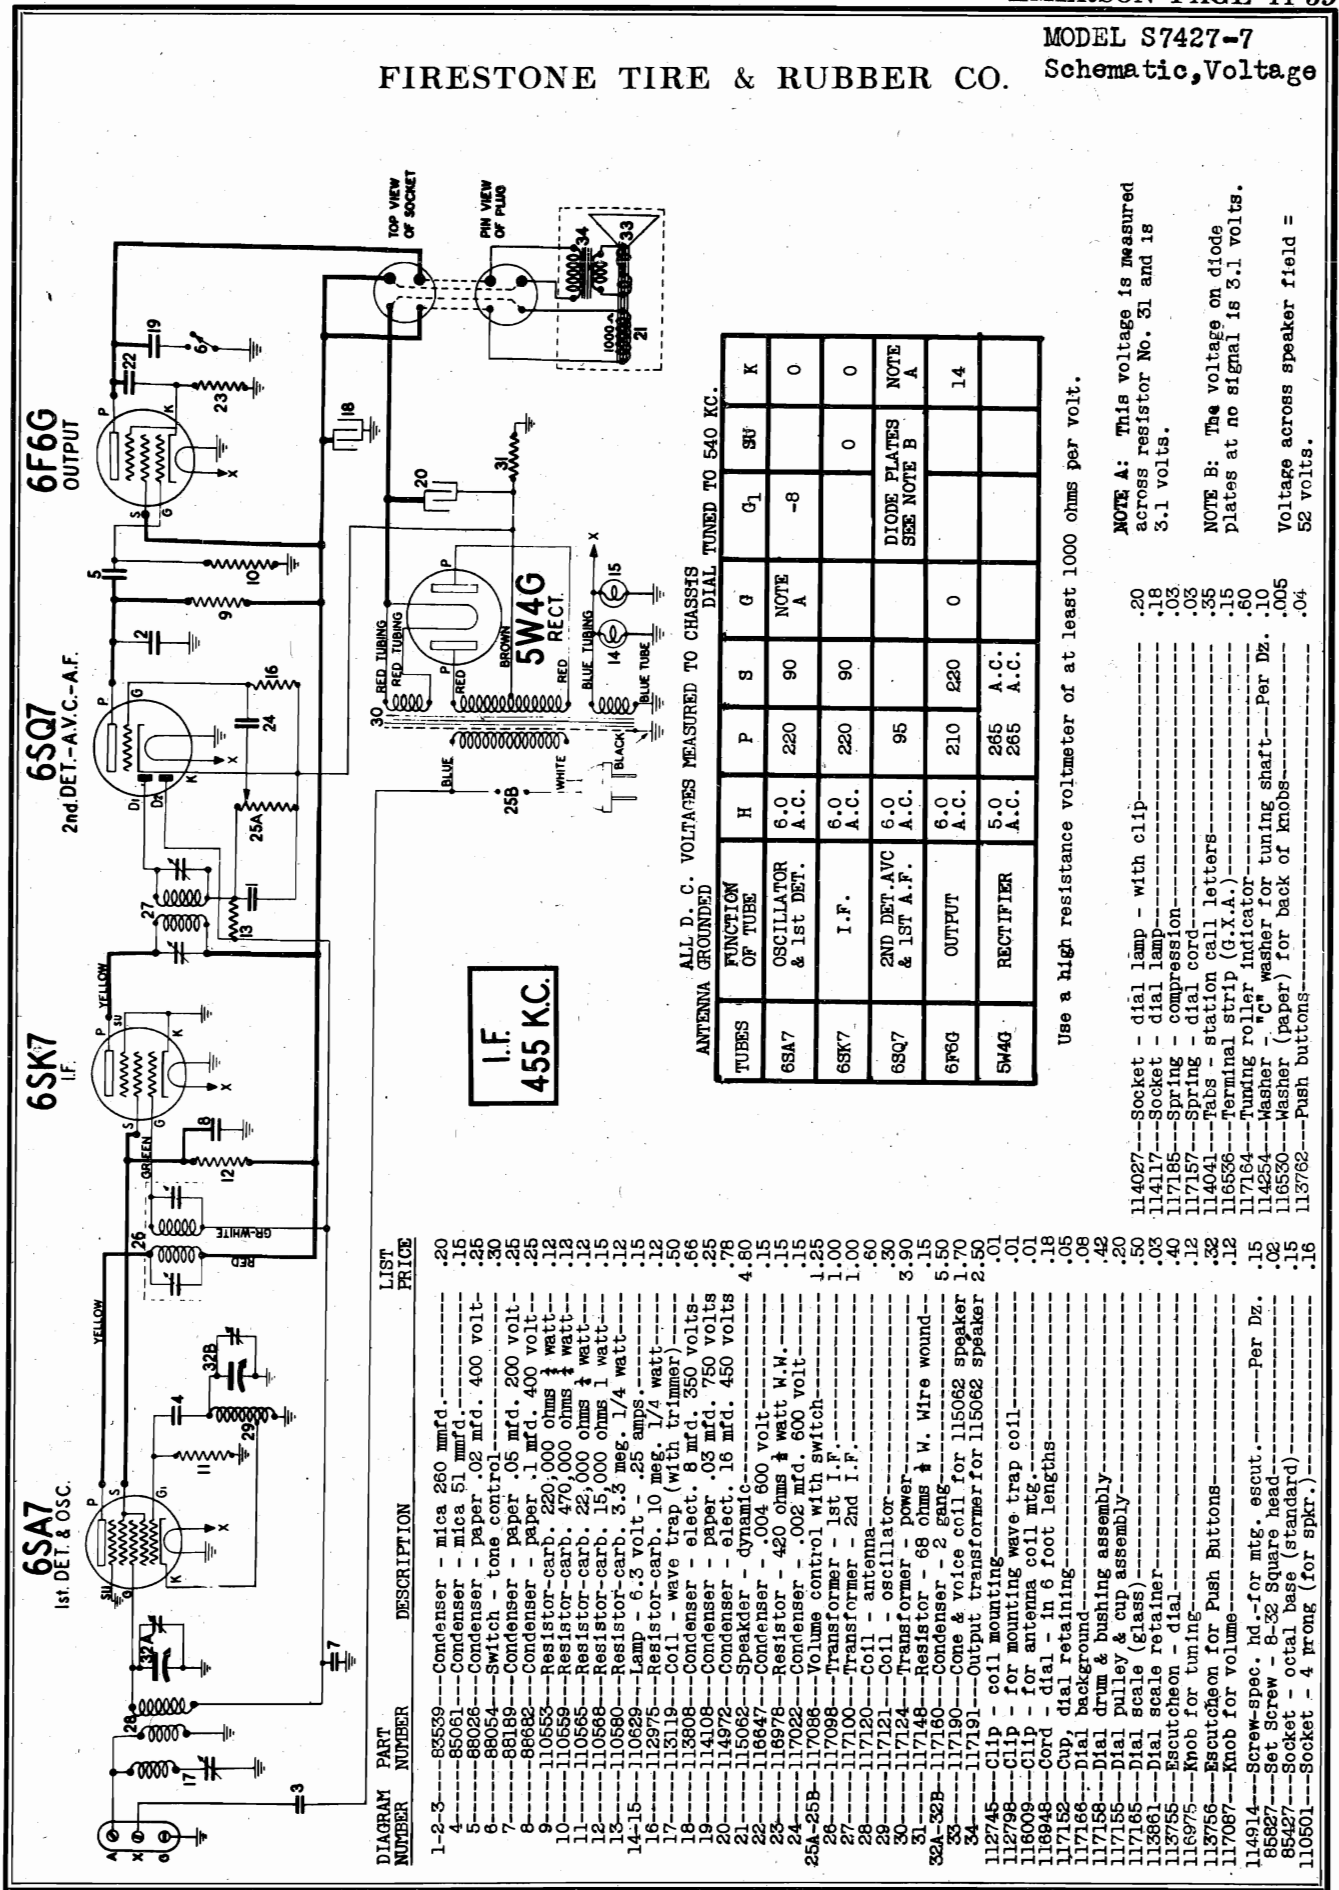


DIAGRAM NUMBER	PART NUMBER	DESCRIPTION	LIST PRICE
1-2-3	85539	Condenser - mica 260 mmfd.	.20
4	85061	Condenser - mica 51 mmfd.	.15
5	88026	Condenser - paper .02 mfd. 400 volt	.25
6	88054	Switch - tone control	.30
7	88189	Condenser - paper .05 mfd. 200 volt	.25
8	88682	Condenser - paper .1 mfd. 400 volt	.25
9	110553	Resistor-carb. 220,000 ohms 1/2 watt	.12
10	110558	Resistor-carb. 470,000 ohms 1/2 watt	.12
11	110568	Resistor-carb. 22,000 ohms 1/2 watt	.12
12	110568	Resistor-carb. 15,000 ohms 1 watt	.15
13	110580	Resistor-carb. 3.3 meg. 1/4 watt	.12
14-15	110629	Lamp - 6.3 volt - .25 amps	.12
16	112975	Resistor-carb. 10 meg. 1/4 watt	.12
17	113119	Coil - wave trap (with trimmer)	.50
18	113808	Condenser - elect. 8 mfd. 350 volts	.66
19	114108	Condenser - paper .05 mfd. 750 volts	.25
20	114972	Condenser - elect. 16 mfd. 450 volts	.78
21	115062	Speaker - dynamic	4.80
22	116647	Condenser - .004 600 volt	.15
23	116978	Resistor - 420 ohms 1/2 watt W.W.	.15
24	117022	Condenser - .002 mfd. 600 volt	.15
25A-25B	117086	Volume control with switch	1.25
26	117098	Transformer - 1st I.F.	1.00
27	117100	Transformer - 2nd I.F.	1.00
28	117120	Coil - antenna	.60
29	117121	Coil - oscillator	.30
30	117124	Transformer - power	3.90
31	117148	Resistor - 68 ohms 1/2 W. Wire wound	.15
32A-32B	117160	Condenser - 2 gang	5.50
33	117190	Cone & voice coil for 115082 speaker	1.70
34	117191	Output transformer for 115082 speaker	2.50
112745	Clip - coil mounting		.01
112798	Clip - for mounting wave trap coil		.01
116008	Clip - for antenna coil mtg.		.01
116948	Cord - dial - in 6 foot lengths		.18
117162	Cup, dial retaining		.05
117166	Dial background		.08
117158	Dial drum & bushing assembly		.42
117155	Dial pulley & cup assembly		.20
117165	Dial scale (glass)		.50
113861	Dial scale retainer		.03
113755	Escutcheon - dial		.40
116975	Knob for tuning		.12
113756	Escutcheon for Push Buttons		.32
117087	Knob for volume		.12
114914	Screw-spec. hd.-for mtg. escut.		.15
88827	Set Screw - 8-32 Square head		.02
85427	Socket - octal base (standard)		.15
110501	Socket - 4 prong (for spkr.)		.16

I.F. 455 K.C.

ALL D. C. VOLTAGES MEASURED TO CHASSIS DIAL TUNED TO 540 KC. ANTENNA GROUND

TUBES	FUNCTION OF TUBE	H	P	S	G	G ₁	K
6SA7	OSCILLATOR & 1st DET.	6.0 A.C.	220	90	NOTE A	-B	0
6SK7	I.F.	6.0 A.C.	220	90			0
6SQ7	2ND DET. AVC & 1ST A.F.	6.0 A.C.	95		DIODE PLATES SEE NOTE B		NOTE A
6F6G	OUTPUT	6.0 A.C.	210	220	0		14
5W4G	RECTIFIER	5.0 A.C.	285	285	A.C.		

Use a high resistance voltmeter of at least 1000 ohms per volt.

NOTE A: This voltage is measured across resistor No. 31 and is 3.1 volts.
 NOTE B: The voltage on diode plates at no signal is 3.1 volts.
 Voltage across speaker field = 52 volts.

CHASSIS R312
 CHASSIS R313
 CHASSIS R315
 Tuner Data
 Drive Cord Data

FIRESTONE TIRE & RUBBER CO.

HOW TO SET UP THE PUSH BUTTON TUNER

1. Be sure that your set is connected to a good antenna system.
2. Turn on the set and allow it to operate at least one-quarter hour before setting up the push buttons.
3. Make a list of the frequencies of six nearby stations to which you wish to set up the buttons. Be sure to select nearby, powerful stations, since weak stations will generally give better results when tuned manually. Also BE SURE TO SELECT STATIONS FALLING WITHIN THE TUNING RANGE OF THE INDIVIDUAL BUTTONS. AS INDICATED IN FIG. 1.
 Each of the buttons on your Push-Button Tuner has a definite range of frequencies to which it can be tuned as shown in Fig. 1. It is imperative that in setting up the buttons, you select stations whose frequency is in the indicated tuning range of that button. FAILURE TO SELECT THE PROPER BUTTON WILL RESULT IN THE INCORRECT SETTING OF THE TRIMMER ADJUSTING SCREW AND WILL ALSO CAUSE "DRIFTING". The correct frequencies of your local stations may be obtained from your newspaper or radio call magazine. For example, suppose you want to set a button to station WLW whose frequency is 700 kilocycles. Refer to Fig. 1 which shows that this frequency falls within the operating range of buttons No. 3 or No. 4, whose range is 500 to 1000 KC. Therefore either button No. 3 or No. 4 can be used for the automatic tuning of WLW.
4. Remove the escutcheon around the push buttons by taking out the six screws holding it to the cabinet. This will expose to view six pairs of adjusting screws, each pair of which is used to tune in a station that you wish to set-up on a particular button.
5. Turn the band switch (Right hand knob) clockwise until the word "BROADCAST" appears in the lower opening in the dial scale. Then using the tuning knob (Center) tune in the station you desire to set to button No. 3. This is done so that you may identify the station by hearing its program.
6. Now turn the band switch knob to the extreme clockwise position (the word "AUTOMATIC" will now appear in the center dial scale opening). You will note when this switch is turned, the station previously tuned in will not be heard.
7. Now push in the third button from the left (No. 3 in Fig. 10). Using a small screw driver, insert it in the second screw from the left (No. 3a in Fig. 1). Rotate the screw SLOWLY until the program that you have previously tuned in manually is again tuned in. If it cannot be heard, advance the volume control. BE SURE THAT YOU ADJUST THIS PARTICULAR SCREW (3a) UNTIL THE INVERTED "V" SHADOW IN THE "TUNING EYE" IS NARROWEST. It is advisable that you turn the screw in and out so that you will tune across the station several times in order that you may be sure that you have located the correct tuning point.
8. Next insert the screw driver in the first screw on the left (No. 3b, Fig. 1) and turn it until the program is received with maximum volume. The correct position is indicated by the ends of the inverted "v" in the "Tuning Eye" being closest together. Now go back to screw No. 3a and see if any improvement in the reception can be made by adjusting it. Also repeat this adjustment for screw No. 3b.

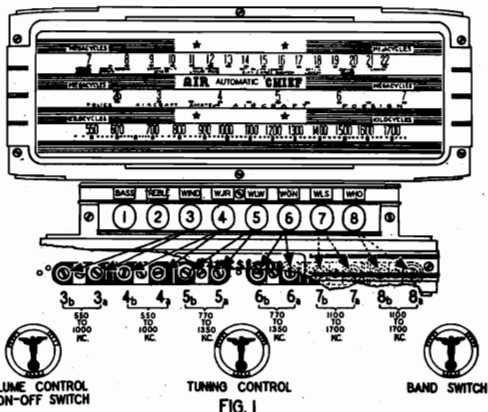


FIG. 1

9. Set up button No. 4 for the selected station in a similar manner, using screws No. 4a and 4b, and proceed to set up the remaining buttons in the same fashion, always tuning in the station initially with the "a" screw for that particular button.
10. Replace the escutcheon with its six retaining screws.
11. Label each button with the call letters of the stations you have selected, using the call letter tabs packed with your receiver. These tabs are to be moistened on their gummed side and inserted in the recesses in the escutcheon, directly above the push buttons.

HOW TO CHANGE THE OPERATING RANGE OF A BUTTON

The operating range of a button may be changed by merely changing the dual trimmer used with that button. Dual trimmers with the ranges indicated below can be obtained from your Firestone Dealer or serviceman under the following part numbers:

Part Number	Tuning Range	List Price
112942	1100 to 1700 KC.	\$0.38
114505	770 to 1350 KC.	.45
112944	550 to 1000 KC.	.50

To make the change proceed as follows:

1. Remove the chassis from the cabinet.
2. By referring to Fig. 1, determine the dual trimmer associated with the button whose range you wish to change.
3. Unsolder the lead from the four terminals on the back of this dual trimmer.
4. Remove the 6/32 machine screw holding the dual trimmer to the front of the chassis.
5. From the above list select a dual trimmer which will cover the desired range.
6. Mount it on the front of the chassis with the 6/32 machine screw, and solder the leads to its four terminals. The button is now ready to be set to any strong station whose frequency is within the range of this new trimmer unit.

REPLACING THE DIAL POINTER DRIVE CORD

1. Tie a large knot in one end of about 51" of special dial cord, part No. 111302.
2. Thread the free end of the cord through hole A in drum C (threading from the inside of the drum out) See Fig. 2.
3. After pulling the cord through hole A, make one half turn around the drum C in a clockwise direction (viewed from the front), using the front groove in the drum.

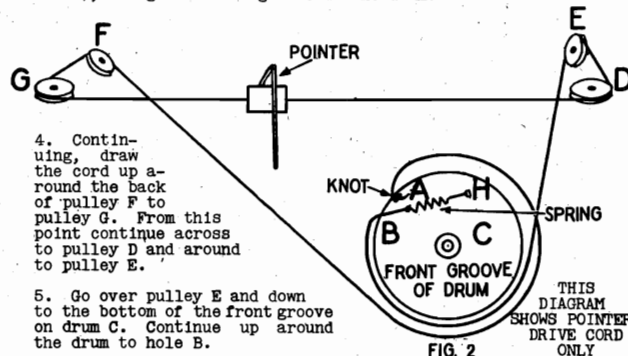


FIG. 2

4. Continuing, draw the cord up around the back of pulley F to pulley G. From this point continue across to pulley D and around to pulley E.
5. Go over pulley E and down to the bottom of the front groove on drum C. Continue up around the drum to hole B.

THIS DIAGRAM SHOWS POINTER DRIVE CORD ONLY

6. Draw the cord through hole B and tie it to the end of the tension spring in such a manner that when the spring is clipped on to lug H it will be extended to about 1 1/2" long.

MODEL 25F
Alignment, Socket
Trimmers, Notes
Dial Assembly

GALVIN MFG. CORP.

ALIGNMENT PROCEDURE


Remove the back cover (D) and place the radio on the service bench. Turn the volume control to maximum and leave it there throughout the alignment, reducing the signal generator output, if necessary.

I. F. ALIGNMENT

1. Connect the signal generator to the control grid. (terminal No. 8) of the 6SA7GT oscillator -- modulator tube and to chassis ground using a .1 MFD. condenser in series with lead. Turn the condenser gang completely out of mesh. Connect an output meter across the speaker voice coil.
2. Set the signal generator at 455 K.C. and carefully adjust the two trimmers in the diode coil can to the point showing the highest reading.
3. Adjust the two trimmers in the I.F. coil can to the point showing the highest output reading.
4. Repeat the I.F. and Diode adjustment several times for maximum accuracy.


R. F. ALIGNMENT

1. If the radio is to be operated on a Motorola Booster Antenna, a special dummy antenna Motorola part No. 1X18018 should be used in series with the lead from the signal generator to the antenna receptacle. Change the signal generator connection to the antenna lead, using the special dummy.
2. Set the signal generator at 1580 K.C. and with the condenser gang still completely out of mesh, adjust the 1580 K.C. trimmer in the oscillator coil can to the point showing the highest output reading.
3. Turn condenser gang to fully meshed position. Set the signal generator at 535 K.C. and adjust the 535 K.C. oscillator pad in the oscillator coil can to point showing highest reading.
4. Set the signal generator at 1400 K.C. and turn the condenser gang to the signal at 1400 K.C. Adjust the 1400 K.C. antenna trimmer in the antenna coil can to point showing highest reading.
5. Set the signal generator at 600 K.C. and turn the condenser gang until the pointer reads 600 K.C. while adjusting the antenna padder to point showing highest output reading. Rock the gang while making this adjustment. Recheck trimmer adjustment at 1400 K.C.

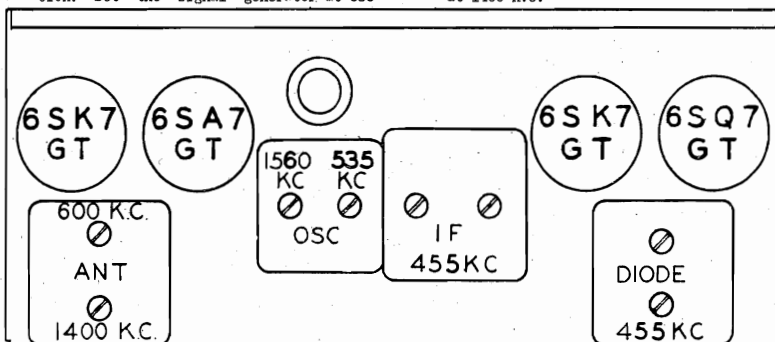

1. Place the radio in an upside down position on the service bench. (See Fig. 4)
2. Disconnect the speaker plug.
3. Remove the speaker mounting bracket (C) from the set housing and speaker support bracket (B). (4 screws)
4. Pull the push-buttons off.
5. Remove the chrome medallion plate (2 screws)
6. Remove the celluloid dial background (2 snap-in plugs)
7. Remove the top cover (A) (13 screws). Lift the dial light assembly off of the front cover.
8. Remove the speaker support bracket (B). (2 screws)
9. Turn radio over in an upright position. Remove 11 screws from the back cover (D).
10. Lay set on side and remove the remaining 3 screws on the back cover - (14 screws).
11. Remove the remaining 8 screws from the housing and unsolder the various leads from the spark plate assembly. (See Fig. 5)

Note: When remounting, the long screw is to be used in position along side the antenna receptacle.

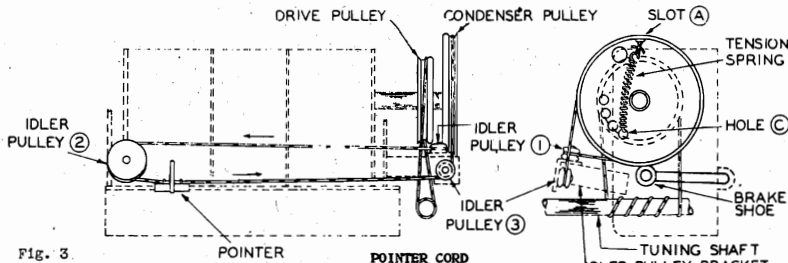


1. Remove the chassis from the housing, and place on service bench.
2. Remove broken string.
3. Set condenser gang to fully closed position.
4. Cut a length of 30 lb. silk fish cord 27 inches long.
5. Thread one end of cord through slot "A" in condenser pulley and with an ordinary paper clip fasten it to the idler pulley bracket to hold in place. (See Fig. 3)
6. In a clock-wise direction run cord around condenser pulley, under brake shoe and over to idler pulley No.1 and around it in a clockwise direction.
7. Route string across chassis to idler pulley No. 2 and around it in a counter-clockwise direction.

8. Route cord back across chassis and up under idler pulley No. 3.

9. Route cord up and around condenser pulley 1/4 turn to slot "A".
10. Remove the paper clip from end of cord and knot the two ends of cord together inside of drive pulley. Fasten one end of the tension spring (41A 11091) to cord and the other end to hole "C" in the condenser pulley.
11. Cut off surplus cord.
12. To set pointer to correct frequency, tune in a station of known frequency and adjust pointer on string.

TUNING CORD

1. Remove the chassis from the housing, and place on service bench.
2. Remove the broken string.
3. Turn the condenser gang to fully meshed position.
4. Cut a length of 30 lb. silk fish cord 25 inches long.
5. Thread one end of cord thru hole (X) in drive pulley and with an ordinary paper clip fasten to tuning control bracket so that cord will stay in place.
6. In a clock-wise direction, wind cord one half turn around drive pulley and down to tuning shaft. (See Fig. 2)
7. Route cord 7 turns around tuning shaft as shown in Fig. 2 and up to drive pulley.
8. Continue in a clock-wise direction, one full turn to hole (X).
9. Knot the two ends of cord together inside of drive pulley and fasten one end of spring (41A14759) to cord and the other end to hole (Y) in drive pulley.
10. Cut off surplus cord.

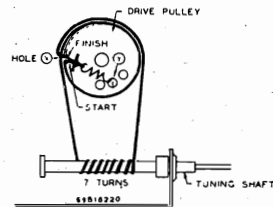

(FIG. 2)

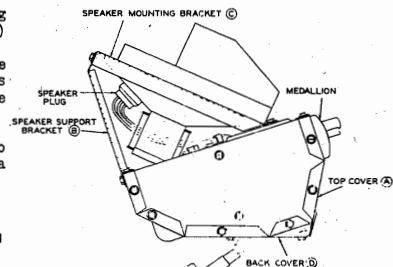


Fig. 4


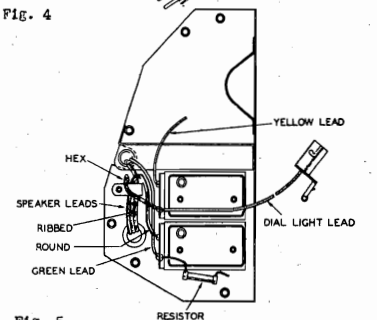


Fig. 5

GALVIN MFG. CORP.

MODEL 26-C
MODEL 26-C7
Chevrolet
Schematics

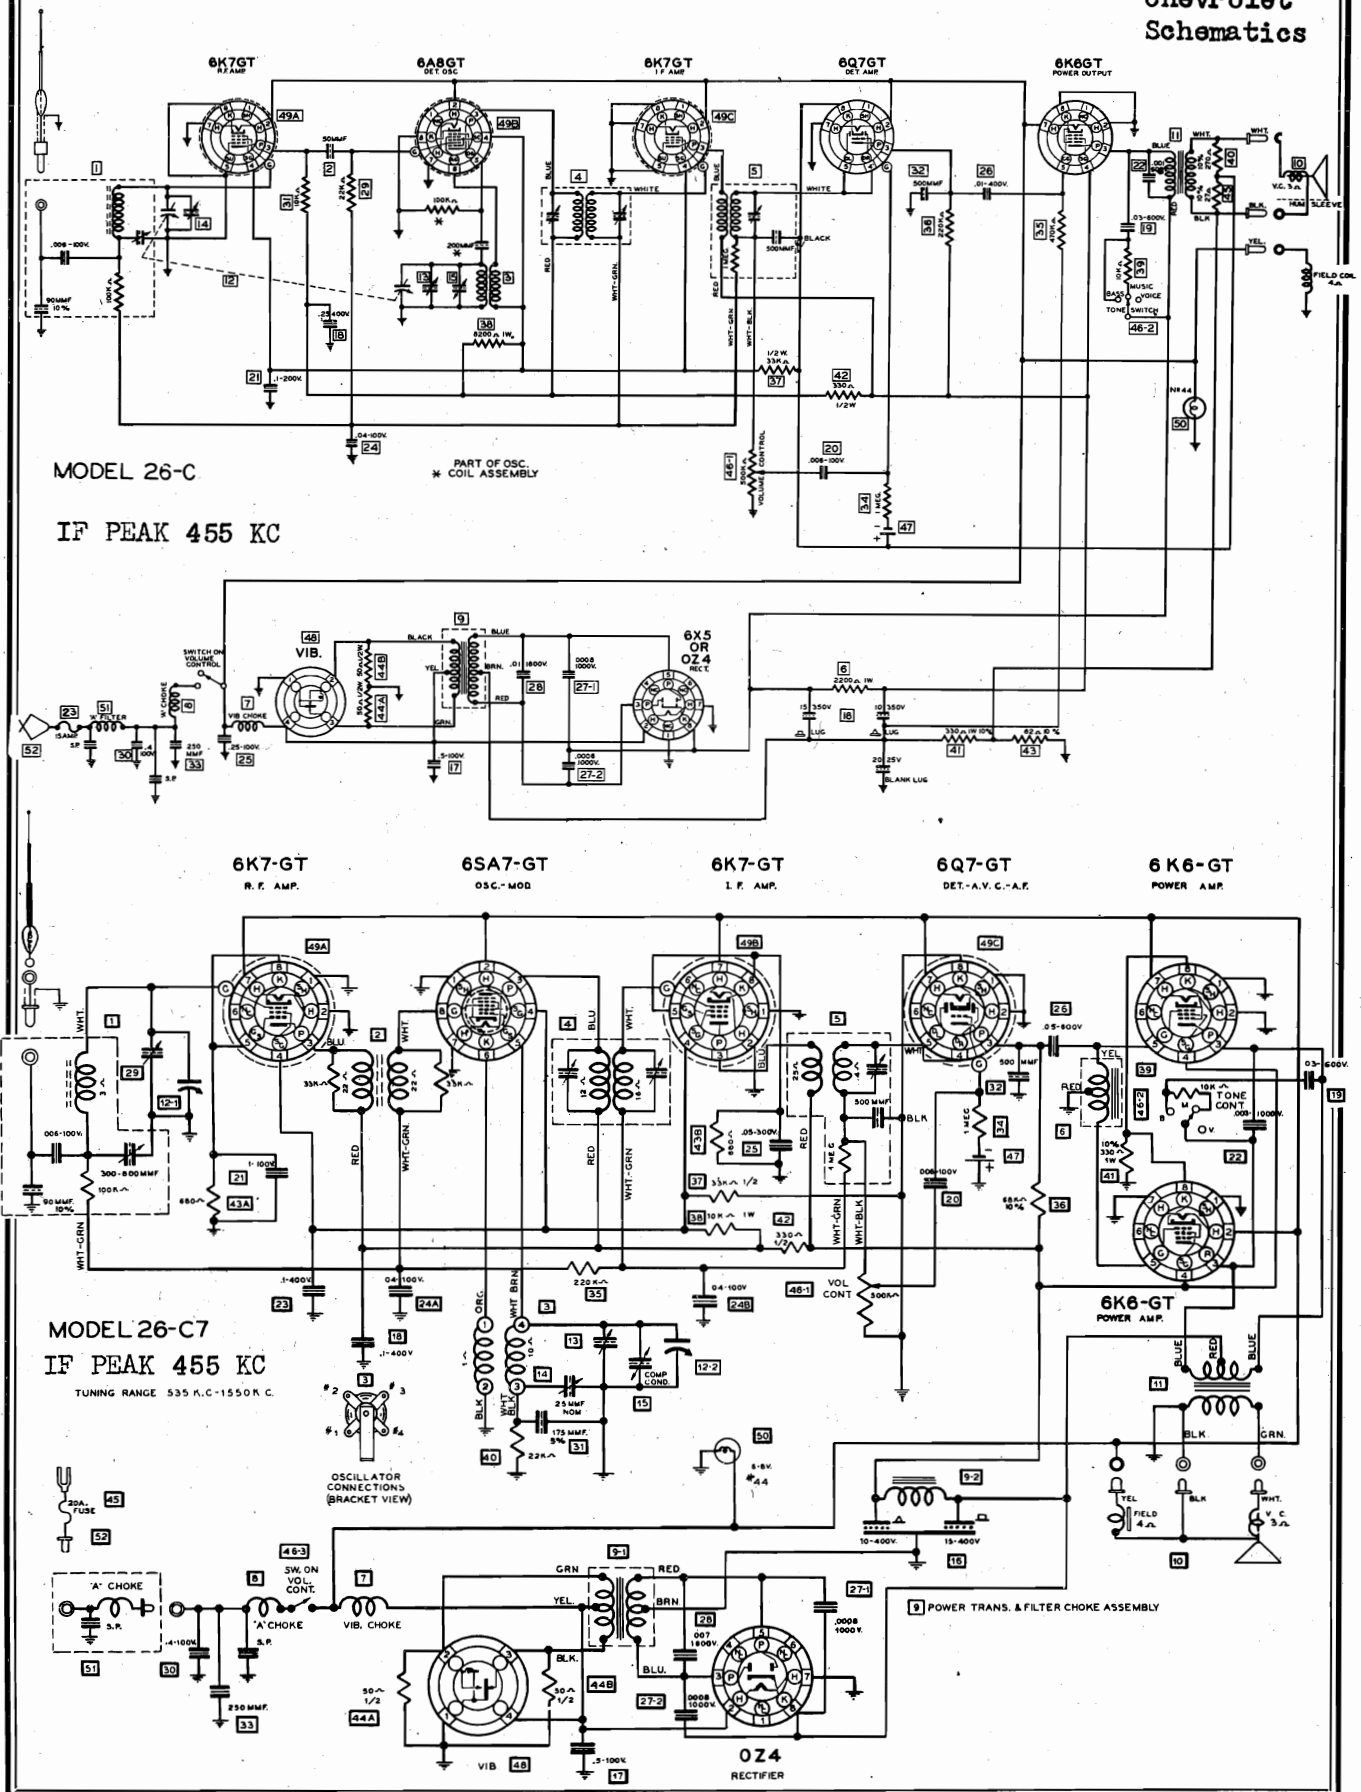

**MODEL 26-C
MODEL 26-C7**

**Alignment, Trimmers
Voltage, Socket, Gain
Sensitivity, Drive Cord Data**

GALVIN MFG. CORP.

**MODELS 28-0,30-P
Dial Cord Data, Notes**

TO REMOVE CHASSIS FROM HOUSING

1. Lay the radio face down on the service bench and remove the back cover by removing the two thumb screws.
2. Remove the rattle clip from the housing which is bonded to the push button assembly, and pull the speaker pin terminals from their receptacles. Also remove the dial light from its mounting bracket.
3. Remove the elimnode assembly (2 screws).
4. Remove the screw along side of the antenna receptacle.
5. Turn the radio over on its back.
6. Pull the push buttons out.
7. Remove the four housing screws located near the medallion plate, but do not remove the four screws that hold the medallion plate to the housing.
8. Remove the 3 screws from each side of the housing (12 screws).
9. Remove the volume control bushing.
10. Turn the set over on its face.
11. Pull the wrap around housing off from the back.
12. Lift the front cover off.

CAUTION: When the front plate is reassembled to the chassis, make sure the tuning shaft does not bind in its bushing, thereby causing the push buttons to work hard.

NOTE: Some screws are longer than others and they must be put back in original positions so that no short circuits will occur.

ALIGNMENT PROCEDURE

Remove the chassis from its housing and place it on the service bench. Turn the volume control to maximum and leave it there throughout the alignment, reducing the signal generator output, if necessary.

I. F. ALIGNMENT

1. Connect the signal generator to the control grid of the oscillator tube and to chassis ground using a .1 Mfd. condenser in series with lead. Turn the condenser gang completely out of mesh. Connect an output meter across the speaker voice coil.
2. Set the signal generator at 455 K.C. and carefully adjust the trimmer in the diode coil can to the point showing the highest reading on the

output meter. (Advance the signal generator attenuator, if necessary, to pick up signal.)

3. Adjust the two trimmers in the I.F. coil can to the point showing the highest output reading.

4. Repeat the I.F. and Diode adjustment several times for maximum accuracy.

R. F. ALIGNMENT

1. If the radio is to be operated on a Motorola Booster Antenna, a special dummy antenna Motorola part No. 1X18018 must be used in series with the lead from the signal generator to the antenna receptacle. Change the signal generator connection to the antenna lead, using the special dummy.

2. Set the signal generator at 1550 K.C. and with the condenser gang still completely out of mesh, adjust the oscillator trimmer to the point showing the highest output reading.

3. Set the signal generator at 1400 K.C. and turn the condenser gang to the signal at 1400 K.C.

Adjust the antenna trimmer on the condenser gang to the point showing the highest output reading.

4. Set the signal generator at 600 K.C. and turn the condenser gang until the dial pointer reads 800 K.C. Adjust the oscillator padder to point giving highest output reading.

5. Adjust the antenna padder located in the copper antenna coil can to the point giving the highest output reading.

NOTE: Step No. 4 is for Model 26-C-7 only. There is no 600 K.C. oscillator padder in the 26-C-2.

SENSITIVITY AND STAGE GAIN MEASUREMENTS

All stage gain measurements must be made with the volume control set for full volume. The shielded lead from the Signal Generator is connected to the grid terminal of the tube through a .1 MF condenser, with a 500 M ohm resistor connected as a leak resistance between the grid of the tube and the grid lead which has been removed.


When measuring overall-sensitivity at the antenna terminal, use a special dummy, part No. 1X18018, in place of the .1 MF. It must be remembered that the figures in the table are average and allowance must be made for variations between two sets of the same type, due to difference of tube characteristics, etc.

26-C Average Microvolt Input	26C-7 Average Microvolt Input	GENERATOR SET AT	GENERATOR FEEDER CONNECTED TO	DUMMY ANTENNA CAPACITY	LEAK RESISTANCE	OUTPUT METER READINGS **
8200	7000	455 K.C.	I.F. Grid	.1	.5 Meg	1.76
145	190	455 K.C.	MOD. Grid	.1	.5 Meg	1.76
160	215	600 K.C.	MOD. Grid	.1	.5 Meg	1.76
42	35	600 K.C.	R.F. Grid	.1	.5 Meg	1.76
5	5	600 K.C.	Ant. Lead	***	None	1.76

* For one watt output.
** Meter connected across voice coil.
1.76 volts equals 1 watt output for 3 ohm voice coil.
*** Use special dummy part No. 1X18018 or M484B Booster Coil No. 17908 in series with a 25 MMF condenser.
NOTE: If set is not used with a Motorola Booster antenna, substitute a 40 MMF condenser for the Special Dummy.


TUNING CORD

1. Remove the chassis from the housing, and place on service bench.
2. Remove the broken string.
3. Turn the condenser gang to fully meshed position.
4. Cut a length of 30 lb. silk fish cord 27 inches long.
5. Thread one end of cord thru Slot B in drive pulley and with an ordinary paper clip fasten to tuning control bracket so that cord will stay in place.
6. In a clock-wise direction, wind cord one full turn around drive pulley and up to tuning shaft. (See Fig. 3.)
7. Route cord 7 turns around tuning shaft as shown in Fig. 3 and down to drive pulley.
8. Continue in a clock-wise direction, three quarter turns to slot "B".
9. Knot the two ends of cord together inside of drive pulley and fasten one end of spring to cord and the other end to hole (c) in condenser pulley.
10. Cut off surplus cord.

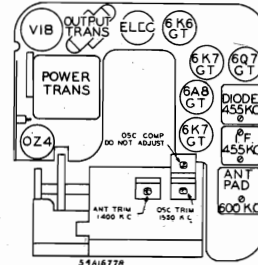

MODEL 26-C

Figure 1

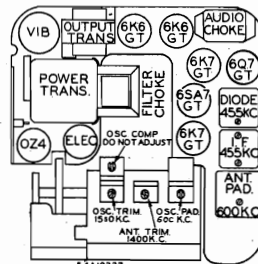

MODEL 26-C7

Figure 2

POINTER CORD

1. Remove the chassis from housing and place on service bench.
2. Remove broken string.
3. Set condenser gang to fully open position.
4. Cut a length of 30 lb. silk fish cord 29 inches long.
5. Thread one end of cord thru slot A in condenser pulley and with an ordinary paper clip fasten it to the tuning shaft bracket to hold in place. (See Fig. 4.)
6. In a clock-wise direction run cord around condenser pulley, under brake shoe and over to idler pulley No. 3 and around it in counter-clockwise direction.
7. Route string across chassis to idler pulley No. 2 and around it in a counter-clockwise direction.
8. Route cord back across chassis and down over idler pulley No. 1.
9. Route cord down and around condenser pulley 1/2 turn to slot "A".
10. Remove the paper clip from end of cord and knot the two ends of cord together inside of drive pulley and fasten one end of spring to cord and the other end to hook in condenser pulley.
11. Cut off surplus cord.
12. To set pointer to correct frequency, tune in a station of known frequency and adjust pointer on string.

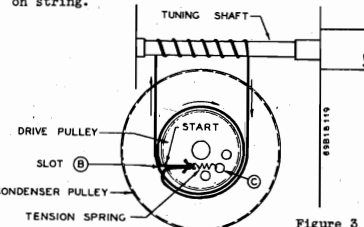


Figure 3

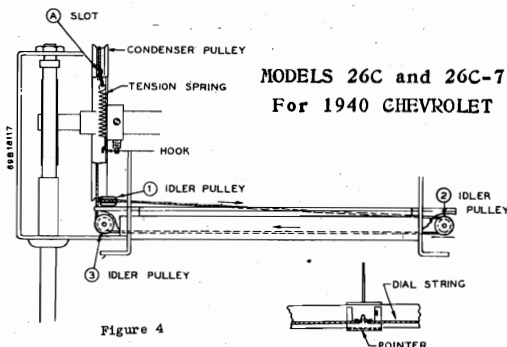


Figure 4

**MODELS 26C and 26C-7
For 1940 CHEVROLET**

TUBE POSITION	26C			26C-7		
	PLATE	SCREEN	CATHODE	PLATE	SCREEN	CATHODE
R.F.	115	95	0	200	80	2.75
Osc. Mod.	180	95	0	200	80	0
I.F.	180	95	0	200	80	2.75
Det. AVC A.F.	60	-	2.3	112	-	0
Output	230	180	.6	210	200	13.5
Output	-	-	-	210	200	13.5
Rect.	A.C.	-	235	A.C.	-	210

Current 6 amps at 6.3 volts. Maximum power output 3.5 watts.

Current 7 amps. at 6.3 volts. Maximum power output 5.5 watts.

All voltages measured from socket terminal to chassis ground using 1000 Ohms per volt meter.

MODEL 27-D

**Alignment, Trimmers
Voltage, Socket, Gain
Sensitivity, Dial Drive**

GALVIN MFG. CORP.


ALIGNMENT PROCEDURE

Remove the chassis from its housing and place it on the service bench.

Turn the volume control to maximum position and leave it there throughout the alignment, reducing the signal generator output if necessary. Fig. 1 shows trimmer locations.

I. F. ALIGNMENT

1. Connect the signal generator to the control grid (terminal No. 8) of the 6SA7GT oscillator-modulator tube thru a .1 MF condenser and to chassis ground. Turn the condenser gang completely out of mesh. Connect an output meter across the speaker voice coil.
2. Set the signal generator at 455 K.C. and carefully adjust the trimmer in the diode coil can to the point showing the highest reading on the output meter. (Advance the signal generator attenuator, if necessary, to pick up signal.)

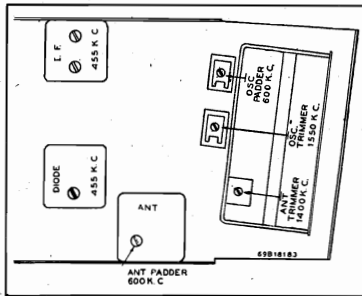

(FIG. 1)

REMOVING CHASSIS FROM HOUSING


1. Lay the radio on the service bench on its right side.
2. Remove the left hand side of the housing by taking off the thumb nut.
3. Leave the radio in this position.
4. Remove the seven screws on the right hand side of the housing, including the two which hold the "A" lead clips.
5. Now remove the six screws from the other side.
6. Turn the radio over so that it is in an upright position.

3. Adjust the two trimmers in the I.F. coil can to the point showing the highest output reading.
4. Repeat the I.F. and diode adjustment several times for maximum accuracy.

R. F. ALIGNMENT

NOTE—A special dummy antenna, Motorola part 1X18018 should be used in series with the lead from the signal generator to the antenna receptacle, if the receiver is to be operated on a Motorola Booster antenna. If the car antenna is not Booster equipped, use a 50 MMF condenser instead. See Fig. 2.


1. Change the signal generator connection to the antenna lead, using the special dummy.
2. Set the signal generator at 1550 K.C. and with the condenser gang still completely out of mesh, adjust the oscillator trimmer to the point showing the highest output reading.
3. Set the signal generator at 1400 K.C. and turn the condenser gang to the signal at 1400 K.C. Adjust the antenna trimmer on the condenser gang to the point showing the highest output reading.
4. Set the signal generator at 600 K.C. and turn the condenser gang until the dial pointer reads 600 K.C. Adjust the oscillator padder to point giving highest output reading. Also adjust the antenna padder located in the copper antenna coil can to the point giving the highest output reading. (DO NOT ROCK GANG FOR EITHER ADJUSTMENT).

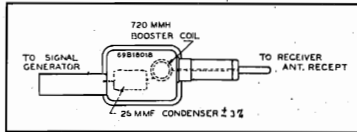

(FIG. 2)


POINTER CORD

1. Remove push buttons and dial light assembly.
2. Cut broken dial cord and remove control head from chassis. (This requires removal of 2 self-tapping screws from right hand side of head and removal of "C" washer from volume control shaft.)
3. Cut 30 inch length of 30# test silk fish cord.
4. Lay control head on service bench and route cord around the three idler pulleys exactly as shown in Fig. 4.
5. Adjust cord so both ends are approximately equal length and clip to control head as shown in Fig. 4.
6. Set dial pointer at approximately 550 K.C. on dial scale and interlace cord in pointer clips.
7. Mount control head assembly back on chassis with 2 self tapping screws. Replace "C" washer on volume control shaft.

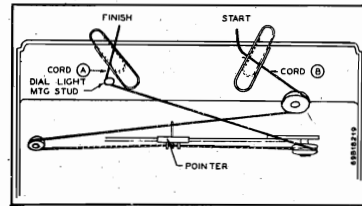

(FIG. 4)

8. Set gang to fully meshed position. This will place hole in condenser pulley at the top.
9. Remove paper clip from cord "A" and fish end of cord under brake shoe and around condenser pulley 1/2 turn to hole "C". Thread end of cord thru hole (C) and clip to control head. (See Fig. 5)
10. Remove paper clip from cord "B" and route cord the short distance from idler pulley No. 1 to hole "C" in condenser pulley.
11. Tie both ends of cord together inside pulley, then tie in tension spring (41A11091). Hook other end of spring in hole (D). Cut off surplus cord.
12. Replace dial light.
13. Tune in station of known frequency and adjust dial pointer to correct dial reading.
14. Reassemble in housing.

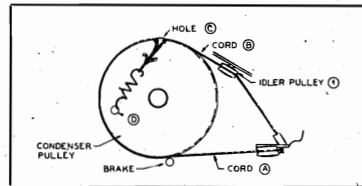

(FIG. 5)

SENSITIVITY AND STAGE GAIN MEASUREMENT

All stage gain measurements must be made with the volume control set for full volume. The shielded lead from the signal generator is connected to the grid terminal of the tube through a .1 MF condenser, with a 500M ohm resistor connected as a leak resistance between the grid of the tube and the grid lead which has been removed.


When measuring over-all sensitivity at the antenna terminal, use a special dummy part #1X18018 in place of the .1 MF.*** It must be remembered that the figures in the table are average and allowance must be made for variations between two sets of the same general type, due to difference of tube characteristics, etc.

AVERAGE MICROVOLT INPUT	GENERATOR SET AT	GENERATOR FEEDER CONNECTED TO	DUMMY ANTENNA CAPACITY	LEAK RESISTANCE	OUTPUT METER READING**
13000	455 K.C.	I.F. Grid	.1 MF	.5 Meg	1.76 Volts
350	455 K.C.	Mod. Grid	.1 MF	.5 Meg	1.76 Volts
400	600 K.C.	Mod. Grid	.1 MF	.5 Meg	1.76 Volts
25	600 K.C.	R.F. Grid	.1 MF	.5 Meg	1.76 Volts
3	600 K.C.	Ant. Lead	***	None	1.76 Volts

*For one watt output
**Meter connected across voice coil
1.76 Volts equals 1 watt output for 3 ohm voice coil
***Use special dummy part No. 1X18018, or M434B booster coil Part No. 17908 in series with 25 MMF cond. (See Fig. 2)

VOLTAGE CHART

POSITION	PLATE	SCREEN	CATHODE
R.F.	180	70	2.3
Osc. Mod.	180	70	0
I.F.	180	70	2.3
Det. AVC A.F.	110	0
Output	220	180	12
Output	220	180	12
Rect.	A.C.	225

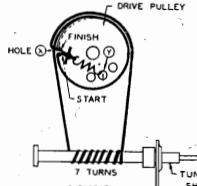

(FIG. 3)

TUNING CORD

1. Remove the chassis from the housing, and place on service bench with the tubes up.
2. Remove the broken string.
3. Turn the condenser gang to fully meshed position.
4. Cut a length of 30# silk fish cord 25 inches long.
5. Thread one end of cord thru hole (x) in drive pulley and with an ordinary paper clip fasten to volume control bracket so that cord will stay in place.
6. In a counter-clockwise direction, wind cord one full turn around drive pulley and down to tuning shaft. (See Fig. 3)
7. Wind cord in clockwise direction 7 turns around tuning shaft and up to drive pulley.
8. Continue in a counter-clockwise direction, three quarter turns to hole (x).
9. Knot the two ends of cord together inside of drive pulley and fasten one end of spring (41A14759) to cord and the other end to hole (Y) in condenser pulley.
10. Cut off surplus cord.

All measurements from chassis ground to socket terminal using 1000 ohms per volt meter.
Current consumption—8 amps. Battery voltage—6.3.
Maximum power output—5 watts.

MODELS 28-0,30-P
Alignment, Trimmers
Sensitivity, Gain

GALVIN MFG. CORP.

MODEL 35-N
Alignment, Trimmers
Dial Cord Data

Model 35-N
SPECIFICALLY DESIGNED TO INSTALL IN 1940 NASH

ALIGNMENT PROCEDURE

Remove the chassis from its housing and place it on the service bench. Turn the volume control to maximum and leave it there throughout the alignment, reducing the signal generator output, if necessary.

I. F. ALIGNMENT

1. Connect the signal generator to the control grid (terminal No. 8) of the 6SA7GT oscillator-modulator tube and to chassis ground using a .1 Mfd. condenser in series with lead. Turn the condenser gang completely out of mesh. Connect an output meter across the speaker voice coil.
2. Set the signal generator at 455 K.C. and carefully adjust the two trimmers in the oscillator-modulator tube and to chassis ground using a .1 Mfd. condenser in series with lead. Turn the condenser gang completely out of mesh. Connect an output meter across the speaker voice coil.
3. Adjust the two trimmers in the I.F. coil can to the point showing the highest output reading.
4. Repeat the I.F. and Diode adjustment several times for maximum accuracy.

R. F. ALIGNMENT

1. If the radio is to be operated on a Motorola Booster Antenna, a special dummy antenna Motorola part No. 1X18018 must be used in series with the lead from the signal generator to the antenna receptacle. Change the signal generator connection to the antenna lead, using the special dummy.
2. Set the signal generator at 1550 K.C. and with the condenser gang still completely out of mesh, adjust the oscillator trimmer to the point showing the highest output reading.
3. Set the signal generator at 1400 K.C. and turn the condenser gang to the signal terminal at 1400 K.C. Adjust the antenna trimmer on the condenser gang to the point showing the highest output reading.
4. Set the signal generator at 600 K.C. and turn the condenser gang until the dial pointer reads 600 K.C. Adjust the antenna trimmer to point giving highest output reading. Also adjust the antenna padder located in the copper antenna coil can to the point giving the highest output reading. (Do not rock gang for either adjustment.)

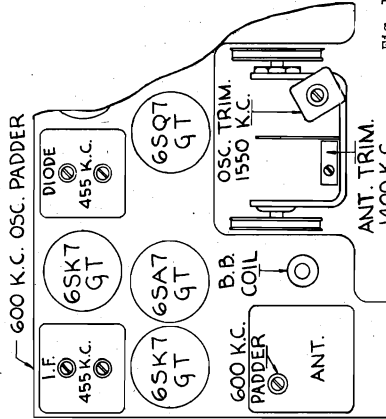


Fig. 1

DIAL CORD INSTRUCTIONS

1. Remove the chassis from the housing.
2. Remove the front cover, after first removing the following items:
 - (a) Dial scale (4 self-tapping screws)
 - (b) Knob
 - (c) Knob, shaft of volume control shaft.
 - (d) Speaker pin terminals.
3. Remove broken cord, position.
4. Cut a 2 1/2 inch length of silk fish cord and thread through hole "A", temporarily clipping the end to the push-button wireboard.
5. Wind cord around condenser pulley and through slot in front of push-button assembly.
6. Run cord around pulley 1, counter-clockwise and across chassis to idler pulley 2. See Fig. 2.
7. Run cord around idler pulley 2, in counter-clockwise direction.
8. Run cord across chassis to idler pulley 3.
9. Wind cord around condenser pulley in counter-clockwise direction and down to slot.
10. Knot the ends of cord together inside of pulley and tie in tension spring.
11. Attach other end of spring to hook and cut off surplus known frequency, and adjust pointer on string to correct frequency.
12. Reassemble in housing.

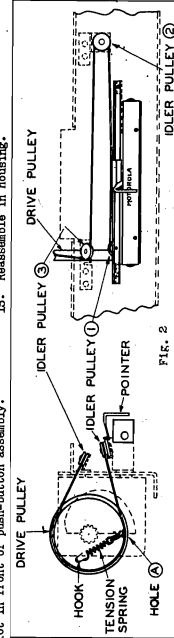


Fig. 2

MODEL 28-0 FOR 1940 OLDSMOBILE
MODEL 30-P FOR 1940 PONTIAC
ALIGNMENT PROCEDURE

Remove the chassis from its housing and place it on the service bench. Turn the volume control to maximum and leave it there throughout the alignment, reducing the signal generator output, if necessary.

I. F. ALIGNMENT

1. Connect the signal generator to the control grid (terminal No. 8) of the 6SA7GT oscillator-modulator tube and to chassis ground using a .1 Mfd. condenser in series with lead. Turn the condenser gang completely out of mesh. Connect an output meter across the speaker voice coil.
2. Set the signal generator at 455 K.C. and carefully adjust the trimmer in the diode coil can to the point showing the highest output reading.
3. Adjust the two trimmers in the I.F. coil can to the point showing the highest output reading.
4. Repeat the I.F. and Diode adjustment several times for maximum accuracy.

R. F. ALIGNMENT

1. If the radio is to be operated on a Motorola Booster Antenna, a special dummy antenna Motorola part No. 1X18018 must be used in series with the lead from the signal generator to the antenna receptacle. See Fig. 2. Change the signal generator connection to the antenna lead, using the special dummy.
2. Set the signal generator at 1500 K.C. and with the condenser gang still completely out of mesh, adjust the oscillator trimmer to the point showing the highest output reading.
3. Set the signal generator at 1400 K.C. and turn the condenser gang to the signal at 1400 K.C. Adjust the antenna trimmer on the condenser gang to the point showing the highest output reading.
4. Set the signal generator at 600 K.C. and turn the condenser gang until the dial pointer reads 600 K.C. Adjust the antenna trimmer to point giving highest output reading. Also adjust the antenna padder located in the copper antenna coil can to the point giving the highest output reading. (Do not rock gang for either adjustment.)

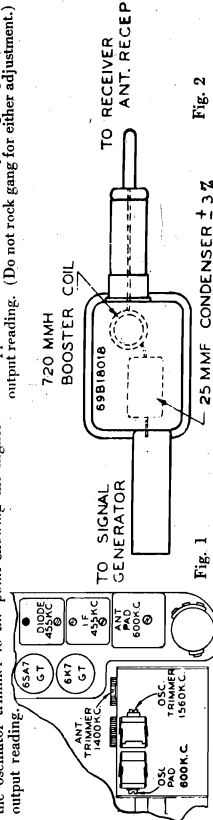


Fig. 1

Fig. 2

SENSITIVITY AND STAGE GAIN MEASUREMENTS

All stage gain measurements must be made with the volume control set for full volume. The shielded lead from the Signal Generator is connected to the grid terminal of the tube through a .1 MF condenser, with a 500M ohm resistor connected as a leak resistance between the grid of the tube and the grid lead which has been removed.

AVERAGE MICROVOLT INPUT	GENERATOR SET AT	GENERATOR FEEDER CONNECTED TO	DUMMY ANTENNA CAPACITY	LEAK RESISTANCE	OUTPUT METER READINGS
7000	455 K.C.	I. F. Grid	.1	.5 Meg	1.76
190	455 K.C.	MOD. Grid	.1	.5 Meg	1.76
215	600 K.C.	MOD. Grid	.1	.5 Meg	1.76
35	600 K.C.	R. F. Grid	.1	.5 Meg	1.76
3	600 K.C.	Ant. Lead	***	None	1.76

* For one watt output.
** Meter constant across voice coil.
*** Use special dummy part No. 1X18018 or M434B Booster Coil No. 17908 in series with a 25 MMF condenser.
NOTE: If set is not used with a Motorola Booster antenna, substitute a 50 MMF condenser for the Special Dummy.

TO REMOVE CHASSIS FROM HOUSING AND DIAL CORD INSTRUCTIONS SEE INDEX (MODEL 26-C).

MODEL 29-B
Alignment, Trimmers
Sensitivity, Gain
Drive Cord Data
Voltage, Notes

GALVIN MFG. CORP.



MODEL 29-B-6
Alignment, Gain
Sensitivity, Drive Cord

1. Lay the radio face down on the service bench and lift the housing off.
2. When remounting, the long screw is to be used in position along side of antenna receptacle.
3. The eliminator assembly is to be mounted last.

POINTER CORD

1. Remove the chassis from housing.
2. Pull out the five push-butcons.
3. Remove the screws which hold the escutcheon and remove same from front cover.
4. Remove broken cord.
5. Rotate condenser gang to fully meshed position.
6. Cut 28 inch length of 30 pound silk fish cord.
7. Thread one end of cord through slot (A). This is the slot nearest the front of chassis when condenser is fully meshed.
8. Run cord up and over rear idler pulley No. 1 in clockwise direction.
9. Run cord back across chassis to idler pulley No. 2 in clockwise direction.
10. Run cord back across chassis to idler pulley No. 3 and around it in clockwise direction.
11. Run cord under brake shoe and around condenser pulley to slot (A).
12. Thread through slot (A).
13. Knot both ends of cord securely inside the slot.
14. Tie in one end of tension spring (41A11091) and hook other end to hook in condenser pulley, through hooks in dial pointer.
15. To set pointer to correct frequency, tune in a station of known frequency and adjust position of pointer on string.
16. Remount escutcheon plate.

Model 29-B
TO INSTALL IN
1940 BUICK

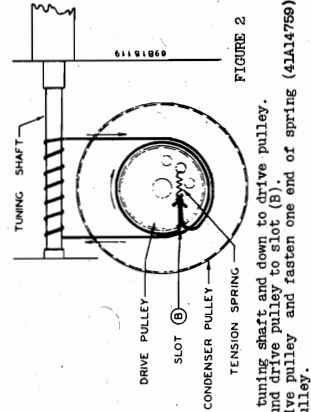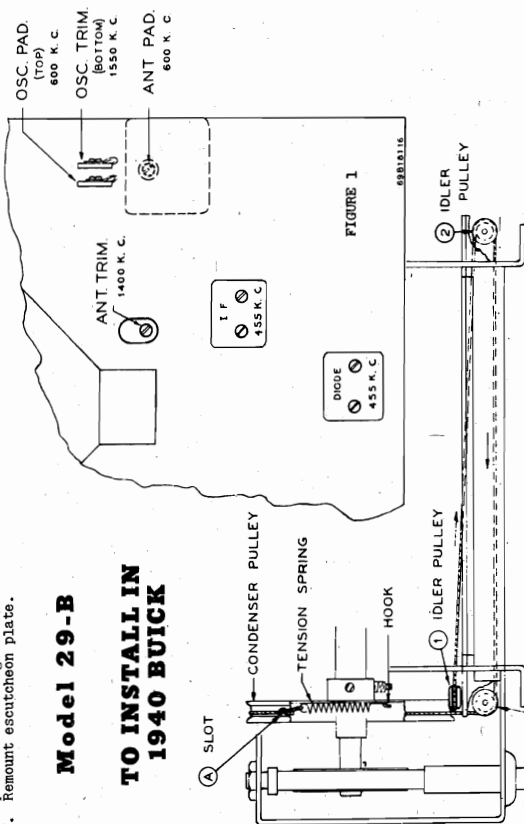

1. Remove the chassis from the housing, and place condenser gang with the tubes up.
2. Remove the broken string.
3. Turn the condenser gang to fully meshed position.
4. Cut a length of 30¢ silk fish cord 28 inches long.
5. Thread one end of cord through slot in drive pulley with the condenser gang up.
6. In a counter clockwise direction wind cord one full turn around drive pulley and up to tuning shaft.
7. Wind cord in clockwise direction 7 turns around tuning shaft and down to drive pulley.
8. Knot the two ends of cord together inside of drive pulley and fasten one end of spring (41A14759) to cord and the other end to hole in condenser pulley.

7. Lay the radio face down on the service bench and lift the housing off.
8. When remounting, the long screw is to be used in position along side of antenna receptacle.
9. The eliminator assembly is to be mounted last.

I. F. ALIGNMENT

1. Connect the signal generator to the control grid (terminal No. 8) of the 6SA7GT oscillator-modulator tube and to chassis ground. Turn the condenser gang completely out of mesh. Connect and output meter across the speaker voice coil. Use .1 MF condenser in signal generator lead.
2. Set the signal generator at 455 K.C. and carefully adjust the two trimmers in the Diode coil can to the point showing the highest reading on the output meter. (Advance the signal generator attenuator, if necessary, to pick up signal.)
3. Adjust the two trimmers in the I.F. coil can to the point showing the highest output reading.
4. Repeat the I.F. and Diode adjustment several times for maximum accuracy.

R. F. ALIGNMENT

1. Change the signal generator connection to the antenna lead, using a 50 MF condenser in series with it.
2. Set the signal generator at 1550 K.C. and with the condenser gang still completely out of mesh, adjust the antenna trimmer to the point showing the highest output reading.
3. Set the signal generator at 1400 K.C. and turn the condenser gang to the point showing the highest output reading.
4. Set the signal generator at 600 K.C. and turn the condenser gang until the dial pointer reads 17.600 K.C. Adjust the oscillator padder to point giving highest output reading. Also adjust the antenna padder located in the copper antenna coil can to the point giving the highest output reading. (DO NOT ROCK GANG FOR EITHER ADJUSTMENT)

SENSITIVITY AND STAGE GAIN MEASUREMENTS

All stage gain measurements must be made with the volume control set for full volume. The shielded lead from the signal generator is connected to the grid terminal of the tube through a .1 MF condenser, with a 500K ohm resistor connected as a leak resistance between the grid of the tube and the grid lead which has been removed.

When measuring over-all sensitivity at the antenna terminal, use a 50 MF condenser in place of .1 MF.

The figures in the table are average and allowance must be made for variations between two sets of the same general type, due to difference of tube characteristics, etc.

AVERAGE PLUG UNIT INPUT *	GENERATOR SET AT	GENERATOR FEEDER CONNECTED TO	DUMMY ANTENNA CAPACITY	LEAK RESISTANCE	OUTPUT ANTENNA READING **
10,000 12,500 ⁰	455 K.C.	6SK7GT Grid (I.F.)	Grid 1 MF	.5 Meg	1.76 Volts
200	455 K.C.	6SA7GT	Mod. Grid 1 MF	.5 Meg	1.76 Volts
100 225	600 K.C.	6SA7GT	Mod. Grid 1 MF	.5 Meg	1.76 Volts
10 16	600 K.C.	6SK7GT	(RF) R.F. Grid 1 MF	.5 Meg	1.76 Volts
3	600 K.C.	Antenna Lead	Ant. Lead 50 MF 40 MF ⁰ *** None	None	1.76 Volts

* For 1 watt output.
 ** Output meter connected across voice coil.
 *** NOTE: If a Motorola Booster antenna is used 1.76 volts equals 1 watt output for 3 ohm voice coil.

VOLTAGE CHART No. 1718018.

TUBE	POSITION	PLATE	SCREEN	CATHODE
* 6SK7GT	R.F.	250	100	4
6SA7GT	Osc. Mod.	250	100	0
6SK7GT	I.F.	250	100	4
6V6GT	Det.-AVC	125	-	4
6X4	Power	225	230	16
6X4 or 6X5	Rect.	235	230	16
				240

1. For 1 watt output.
2. Output meter connected across voice coil.
3. *** NOTE: If a Motorola Booster antenna is used 1.76 volts equals 1 watt output for 3 ohm voice coil.


FOR MODEL 29-B-6

1. Remove the chassis from housing.
2. Remove the eliminator assembly on the right side of chassis. (2 screws)
3. Remove the bottom cover (4 thumb screws) Then pull back.
4. Remove the 9 screws around the top and 2 sides of the front.
5. Remove the 3 remaining screws on the right side of the housing.
6. Remove the 3 screws on the left side of the housing, including the one adjacent to the antenna receptacle.
7. Remove the 3 screws on the back of the housing.


Current 7.1 Amp. at 6.1 Volts
 Maximum power output 10 Watts.

MODELS 41A, 41E
MODEL 41S
Schematics, Alignment

GALVIN MFG. CORP.

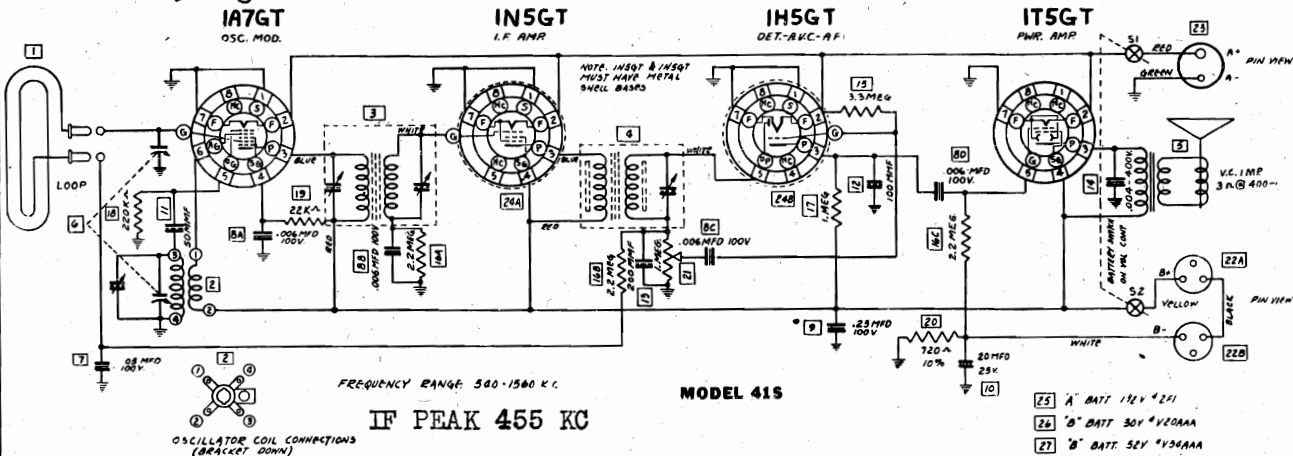

MODEL 41S ALIGNMENT 1. Conn. sig. gen. to grid of first det. tube thru a .05 cond. Do not remove grid cap. Conn. o.p. meter across spkr. voice coil. Turn cond. gang completely out of mesh. Loop must be conn. to chass. at all times. 2. Set sig. gen. at 455 K.C.; carefully adj. the two I.F. trim. and the one DIODE trim. to point showing highest read. on o.p. metr. 3. Turn sig. gen. to 1560 K.C. and with cond. gang completely out of mesh, adj. OSC. trim. until 1560 K.C. sig. is heard. 4. No further adjustments.

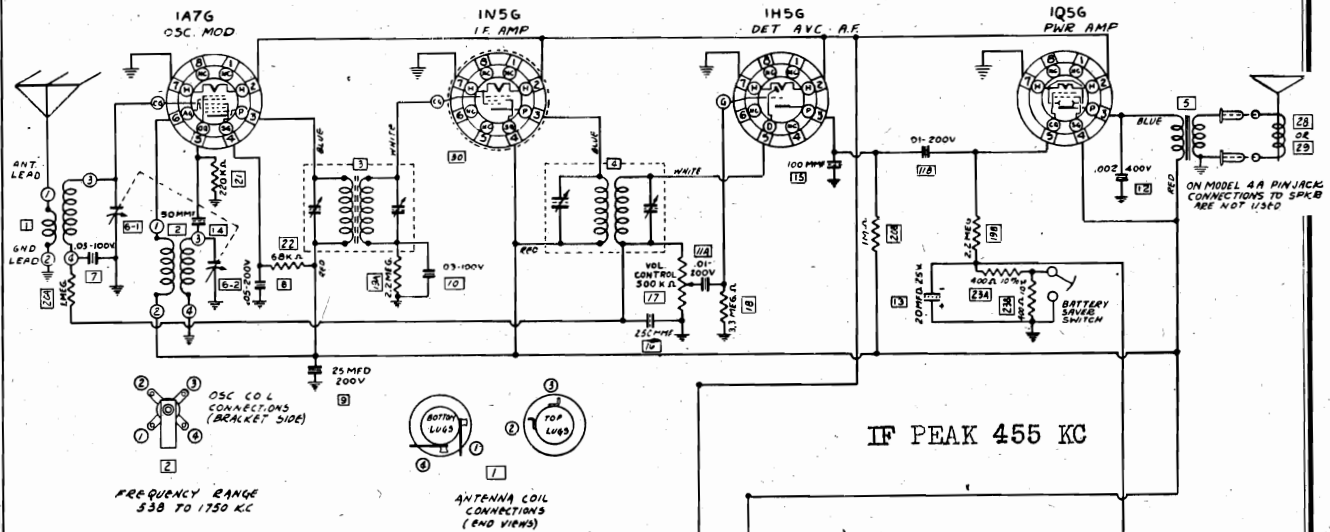


MODELS 41A, 41E ALIGNMENT 1. Conn. sig. gen. to grid of first det. tube and thru a .05 MF cond. and to chass. Do not remove grid cap. Conn. o.p. metr across spkr. voice coil. Turn cond. gang completely out of mesh. 2. Set sig. gen. at 455 KC and carefully adj. the two IF trim. and the two DIODE trim. to point show. highest read. on o.p. metr. 3. Conn. sig. gen. to ant. and gnd. leads using a .0002 MF cond. in ant. lead. 4. Turn sig. gen. to 1750 KC and with cond. gang completely out of mesh adj. OSC. trim. until 1750 KC sig. is heard. 5. Set sig. gen. at 1400 KC and turn cond. gang to the sig. at 1400 KC. Adj. ANT. trim. to point show. highest read. on o.p. metr.

MODELS 41D1, 41D2


MODELS 51D1, 51D2

Schematics, Alignment

GALVIN MFG. CORP.

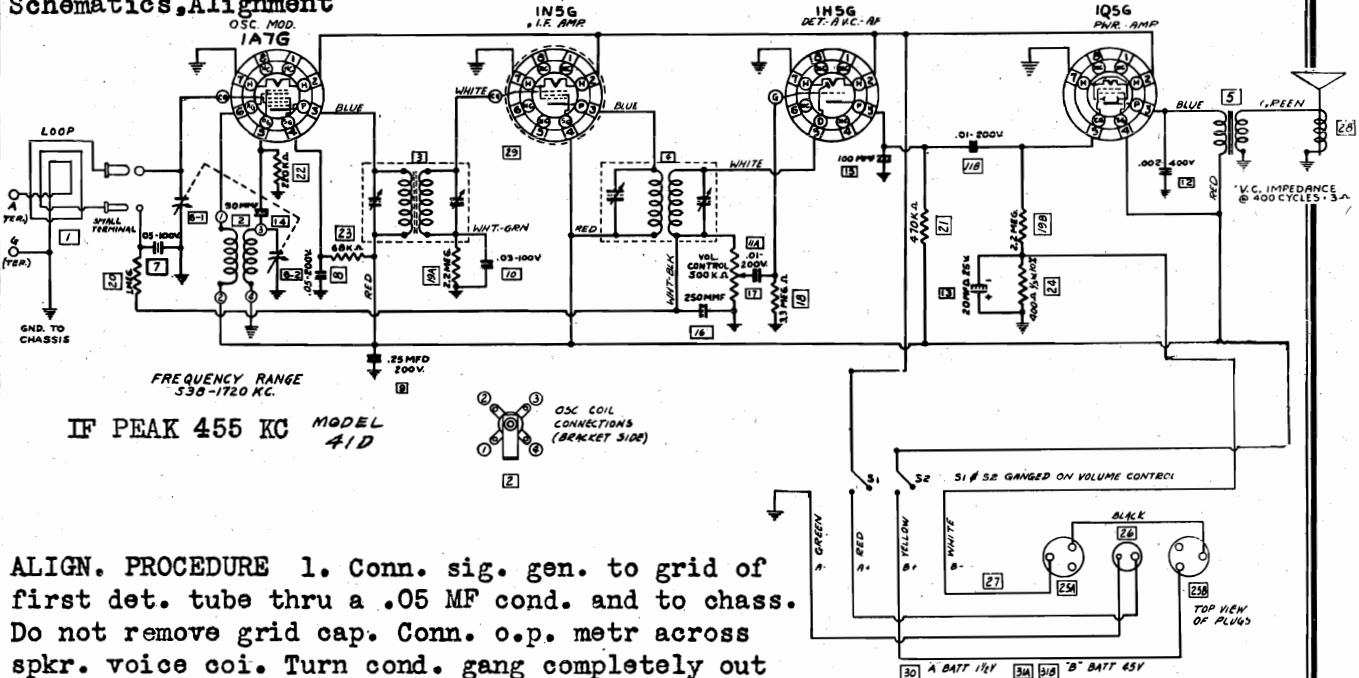


ALIGN. PROCEDURE 1. Conn. sig. gen. to grid of first det. tube thru a .05 MF cond. and to chass. Do not remove grid cap. Conn. o.p. metr across spkr. voice coi. Turn cond. gang completely out of mesh. Loop must be conn. to chass. at all times. 2. Set sig. gen. at 455 KC; carefully adj. the two IF trim. and the two DIODE trim. to point show. highest read. on o.p. meter. 3. Turn sig. gen. to 1720 KC and with cond. gang completely out of mesh adj. OSC. trim until 1720 KC sig. is heard. 4. Place chass. in cab., conn. loop terms. and fasten back on cab. 5. Remove plug butt. from side of cab. to expose ANT. trim.; 6. Tune in a weak station near 1400 or 1500 KC and adj. ANT. trim. thru hole in cab. for max. vol

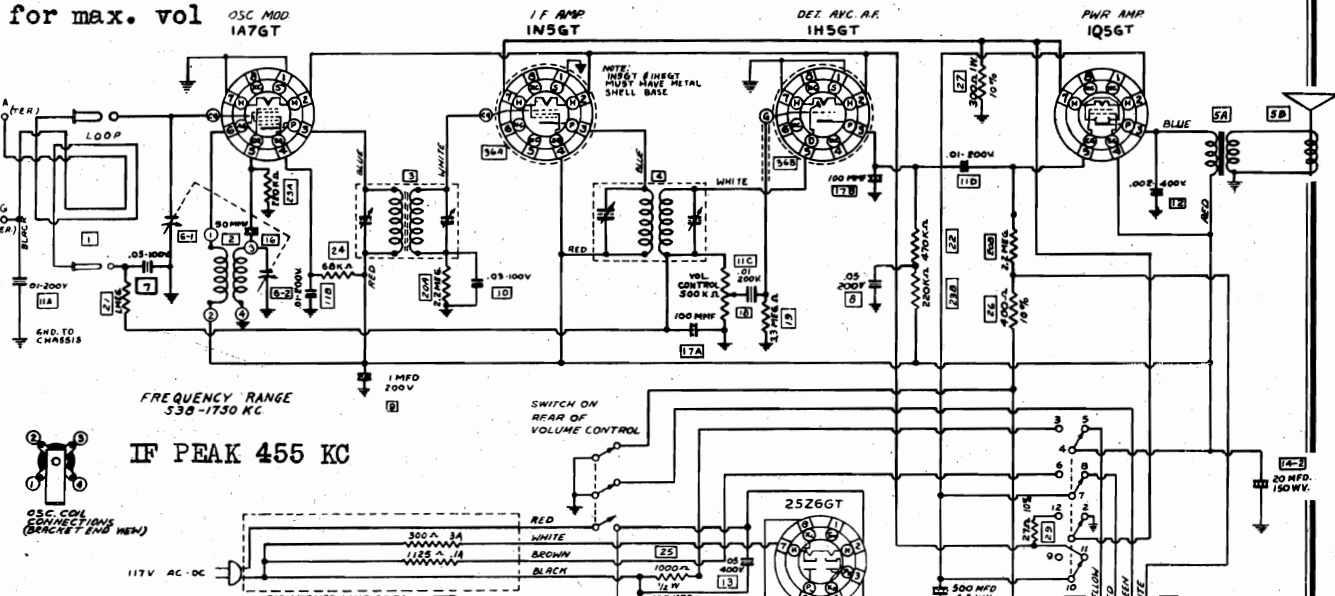


Part No.	Description	Part No.	Description	
1	Loop Antenna Coil (Green Net)	21	404011	Carbon Res. (1/2 watt-1/2-20) N.L.
2	Harmonic Coil (White Net)	22	406011	Carbon Res. (170,000-1/2-20) N.L.
3	1. F. Grid & Screen Assembly	23A	406013	Carbon Res. (220,000-1/2-20) N.L.
4	Plate Coil & Screen Assembly	23B	406015	Carbon Res. (220,000-1/2-20) N.L.
5	50R16-15	24	406017	Carbon Res. (65,000-1/2-20) N.L.
6	1N5282	25	406019	Carbon Res. (100k-1/2-20) N.L.
7	939005	26	406025	Carbon Res. (100k-1/2-10) N.L.
8	939001	27	406031	Carbon Res. (30k-1/2-10) N.L.
9	939006	28	406034	Carbon Res. (50k-1/2-10) N.L.
10	939003	29	406037	Carbon Res. (100k-1/2-10) N.L.
11A	939002	30	406038	Carbon Res. (100k-1/2-10) N.L.
11B	939005	31A	25A12050	Diode Detector Section
11C	939005	31B	25A12050	Diode Detector Section
11D	939005	32	30A12106	Resistor Line Code (1 Conn.)
12	939005	33	30A12106	Resistor Line Code (1 Conn.)
13	939005	34	65A10987	Box (Blue Net) 1/4"
14	939005	35	25A11250	Tube Shield (Antenna)
15	25A11508	36	25A11250	Tube Shield (Antenna)
16	2186505	37	40A12525	"A" Battery (1 1/2 V)
17	2186511	38A	40A12525	"B" Battery (1 1/2 V)
18	18A15113	38B	40A12525	"C" Battery (1 1/2 V)
19	606179	39A	40A12525	"A" Battery (1 1/2 V)
20A	606210	39B	40A12525	"B" Battery (1 1/2 V)
20B	606210			

GALVIN MFG. CORP.

MODELS 51A, 53A, 54A
Chassis 5A, 5AA
Schematics

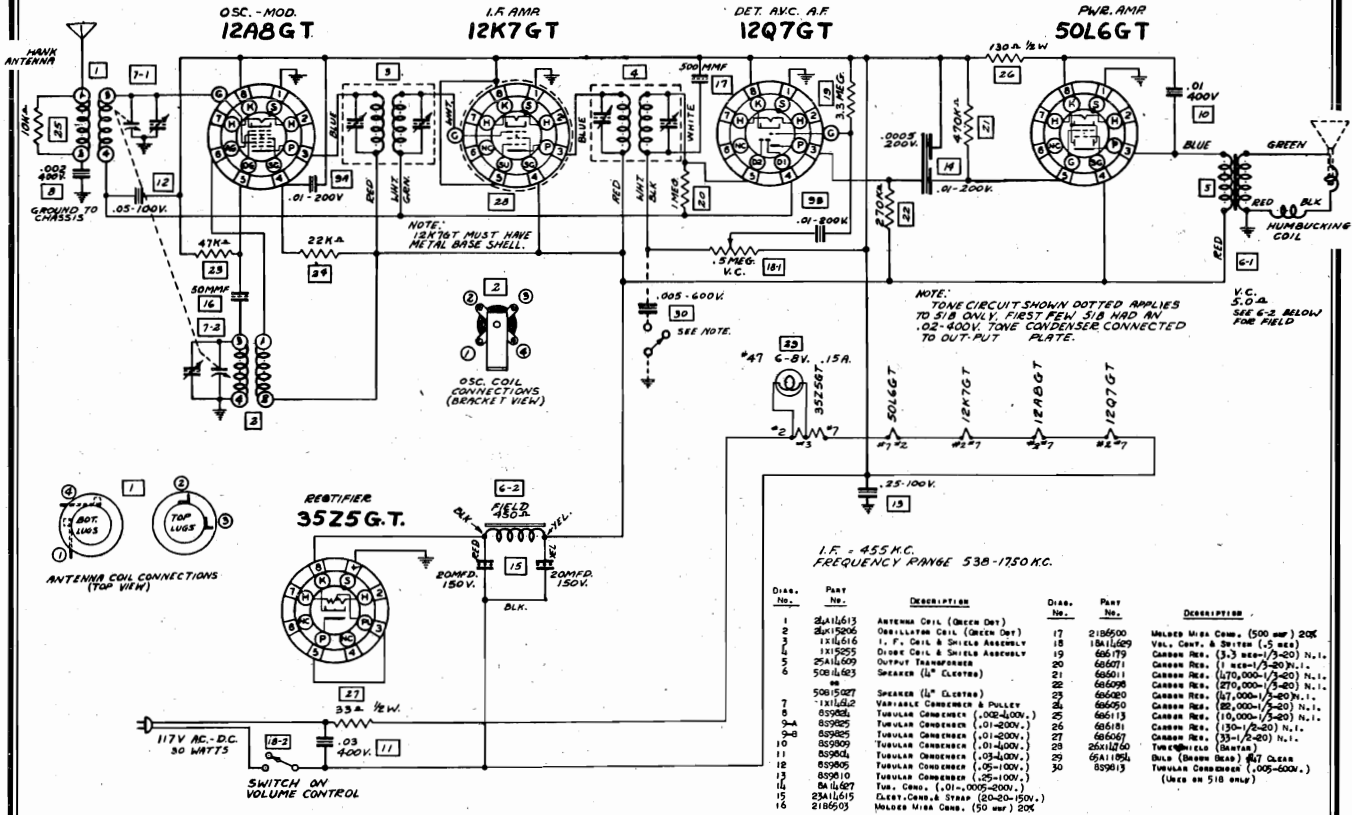

5A Chassis (Models 51A, 53A and 54A)

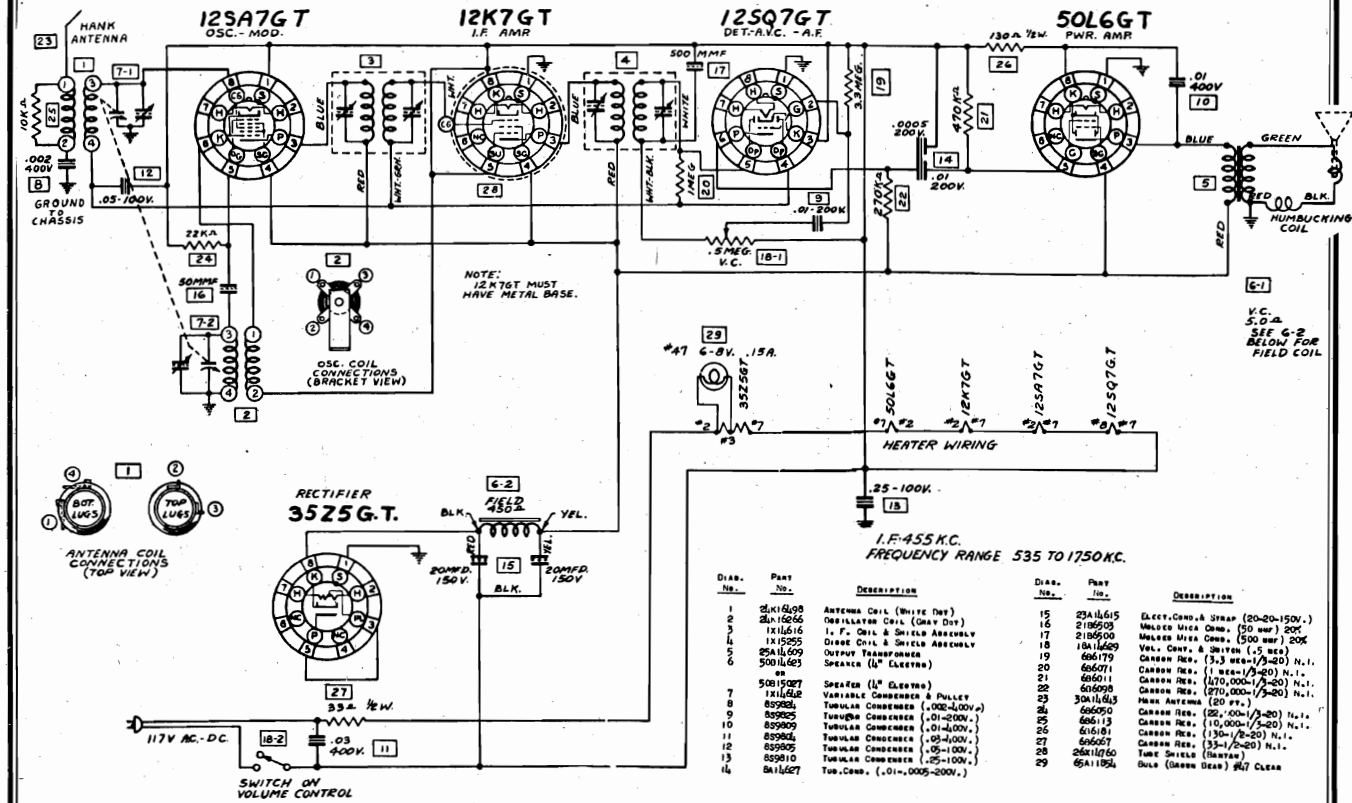

5AA Chassis (Models 51A, 53A and 54A)

CHASSIS 5A, 5AA
 CHASSIS 5C
 CHASSIS 6A, 6B
 CHASSIS 6E

GALVIN MFG. CORP.

Sensitivity, Gain
 Voltage, Dial Drive Data
 Trimmers

TO RESTRING DIAL DRIVE CORD

1. Remove dial crystal, pointer, dial scale and plate.
2. Cut a length of silk fish cord approximately 24 inches long.
3. Thread one end of cord through hole "A" in condenser pulley and clip it to the chassis with a paper clip.
4. Continue other end of cord over idler pulley "B" and down to tuning shaft. Make two turns counter-clockwise around tuning shaft. (See Fig. 3.)
5. Continue cord up to pointer pulley making one turn around it counter-clockwise.
6. Take cord over idler pulley "C" and around condenser pulley to the hole "A".
7. Tie both ends of cord together inside hole "A".
8. Tie in one end of tension spring and hook the free end of the spring in hole "D". Cut off surplus cord.

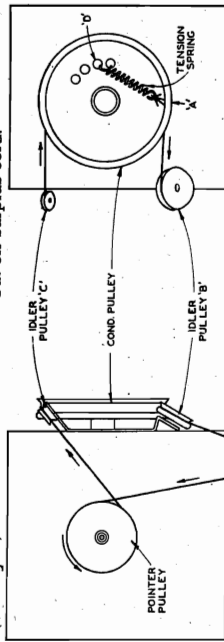


FIG. 3

5 Tube Chassis

TO RESTRING DIAL DRIVE CORD

1. Remove dial crystal, pointer, dial scale, and plate.
2. Cut a length of silk fish cord approximately 12 inches long.
3. Make two turns with cord around tuning shaft. (See Fig. 2.)
4. Continue both ends of cord around condenser pulley in opposite directions until they meet at the hole (A) in the rim of the pulley.
5. Thread both ends through the hole and tie them securely together inside the hole.
6. Tie in the dial cord tension spring and hook the free end of the spring in the hole (B). Cut off surplus cord.

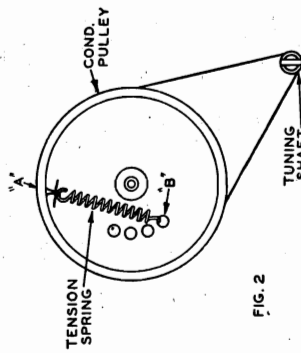


FIG. 2

TUBE	POSITION			SCREEN	OSC. PLATE
	Osc.-Mod.	IF	Det. Avg.		
12ABGT	95	85	95	80	—
12B7GT	95	95	95	0	—
12B7GT	95	95	95	0	105
50L6GT	AC	AC	AC	5	—
3Z5GT	AC	AC	AC	120	—

5A and 5C		5AA		6A, 6B and 6E	
TUBE	POSITION	TUBE	POSITION	TUBE	POSITION
12ABGT	Osc.-Mod.	6A7	Osc.-Mod.	6A7	Osc.-Mod.
12B7GT	IF	6B6	IF	6B6	IF
12B7GT	Det. Avg.	6C*	Det. Avg.	6C*	Det. Avg.
50L6GT	Output Recl.	2X3*	Output Recl.	2X3*	Output Recl.
3Z5GT	Rect.	2X3*	Rect.	2X3*	Rect.

All measurements from B— to socket terminal, using 1000 ohms per volt meter.


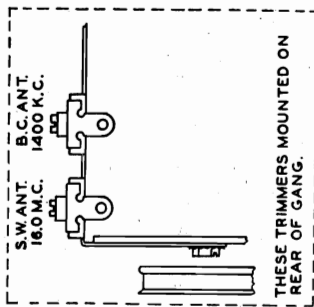


Fig. 1

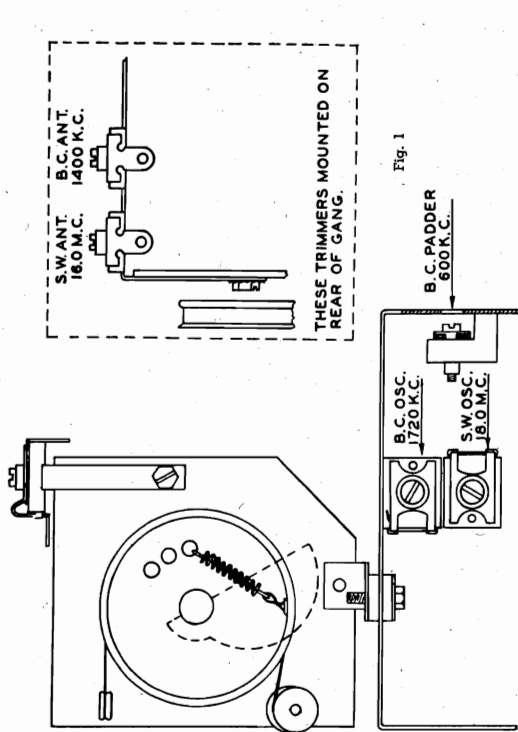

SENSITIVITY AND STAGE GAIN MEASUREMENTS

To measure over-all sensitivity of loop models, connect the signal generator to the coupling turn in the loop, using a 400 ohm dummy. The lead, including the resistor should be thoroughly shielded and the receiver must be at least 3 ft. away from the signal generator. The figures in the table are average and allowance must be made for variations between two sets of the same general type, due to difference of tube characteristics, etc.


Average Microvolt Input	Generator Set at	Generator Feeder Connected to	Dummy Antenna Capacity	Leak Resistance	Output Meter Reading
4500	455 K.C.	IF Grid	.1 MF	.5 Meg	.45 Volts
75	455 K.C.	Mod. Grid	.1 MF	.5 Meg	.45 Volts
85	600 K.C.	Mod. Grid	.1 MF	.5 Meg	.45 Volts
25	600 K.C.	Ant. Lead	200 MMF	None	.45 Volts
4500	455 K.C.	IF Grid	.1 MF	.5 Meg	.45 Volts
75	455 K.C.	Mod. Grid	.1 MF	.5 Meg	.45 Volts
85	600 K.C.	Mod. Grid	.1 MF	.5 Meg	.45 Volts
25	600 K.C.	Ant. Lead	400 Ohms	None	.45 Volts
4500	455 K.C.	IF Grid	.1 MF	.5 Meg	.45 Volts
75	455 K.C.	Mod. Grid	.1 MF	.5 Meg	.45 Volts
85	600 K.C.	Mod. Grid	.1 MF	.5 Meg	.45 Volts
25	600 K.C.	Ant. Lead	200 MMF	None	.45 Volts
4500	455 K.C.	IF Grid	.1 MF	.5 Meg	.45 Volts
75	455 K.C.	Mod. Grid	.1 MF	.5 Meg	.45 Volts
85	600 K.C.	Mod. Grid	.1 MF	.5 Meg	.45 Volts
100	600 K.C.	Ant. Lead	400 Ohms	None	.45 Volts

* For .05 Watt output.
 ** Output meter connected across voice coil.
 V.C. resistance — 8 Ohms.

CHASSIS 5A, 5AA, 6B
Aligning Note

GALVIN MFG. CORP.

MODELS 51C, 52C, 53C
Chassis 5C
Schematic Alignment

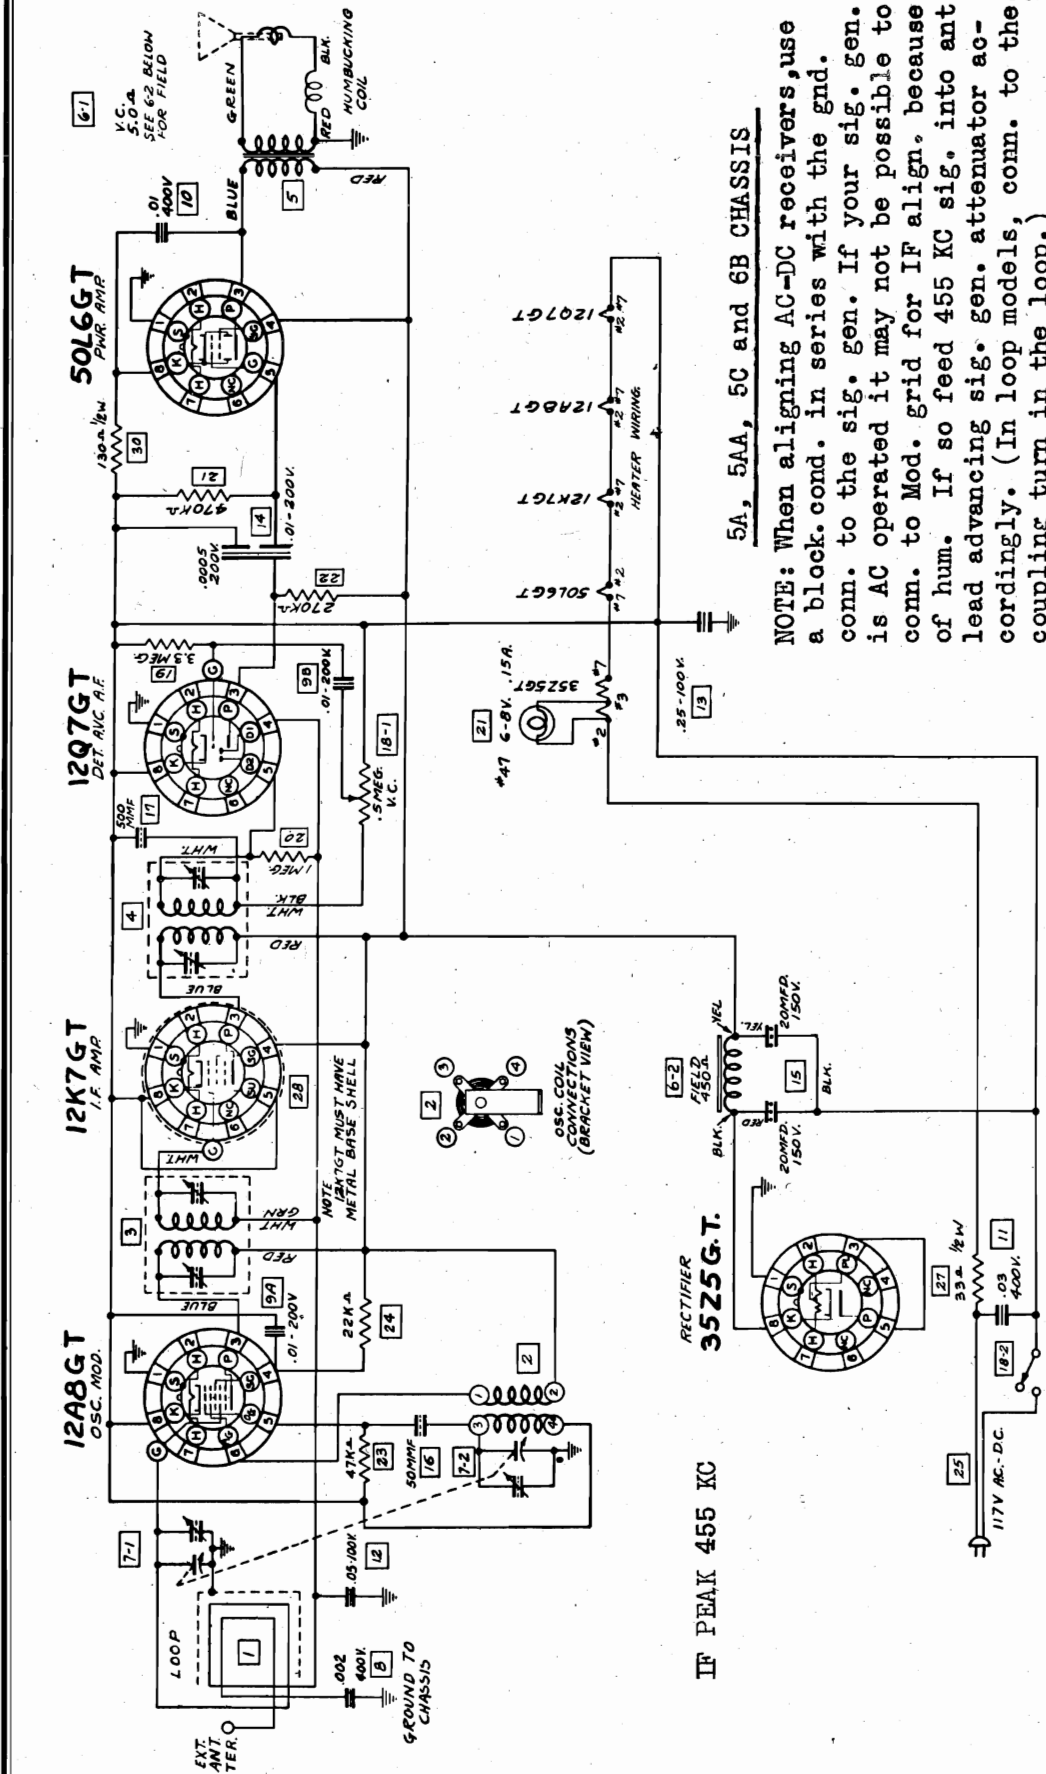

5A, 5AA, 5C and 6B CHASSIS

NOTE: When aligning AC-DC receivers, use a block cond. in series with the gnd. conn. to the sig. gen. If your sig. gen. is AC operated it may not be possible to conn. to Mod. grid for IF align. because of hum. If so feed 455 KC sig. into ant. lead advancing sig. gen. attenuator accordingly. (In loop models, conn. to the coupling turn in the loop.)


5C CHASSIS ALIGNMENT

1. Conn. sig. gen. to grid of first det. tube thru a .05 MF cond., and to chass. Do not remove grid cap. Conn. o.p. meter across spkr. voice coil. Turn cond. gang completely out of mesh. Loop must be conn. to the chass. at all times.
2. Set sig. gen. at 455 KC and carefully adj. the two IF trims. and the two DIODE trims. to point show. highest read. on o.p. meter.
3. Turn sig. gen. to 1720 KC and, with cond. gang completely out of mesh, adj. OSC. trim. until 1720 KC sig. is heard.
4. Disconn. sig. gen. and tune in weak station near 1400 or 1500 KC. Adj. ANT. trim. for max. volume.

MODELS 61A, 62A, 63A
Chassis 6A
Schematic, Alignment

GALVIN MFG. CORP.


CHASSIS 5A, 5AA
Alignment

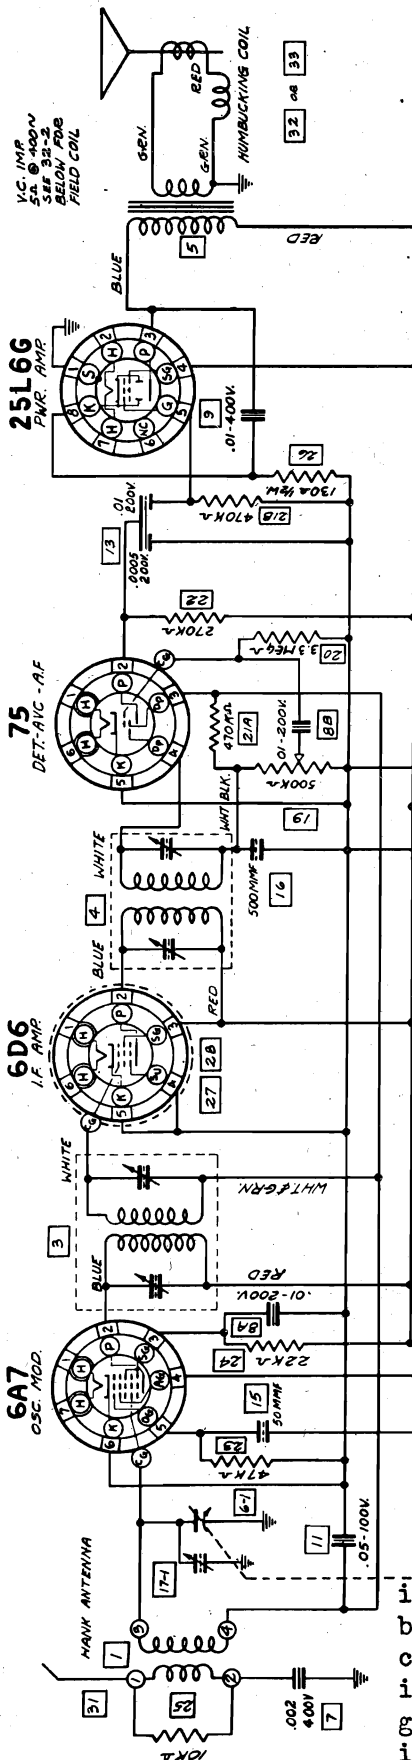

I.F. - 455 K.C.
FREQUENCY RANGE 538-1720 K.C.

6A Chassis (Models 61A, 62A and 63A)

ALIGNMENT 1. Conn. sig. gen. to ant. lead thru 200 MMF cond. and to chass. gnd. Turn cond. gang out of mesh. Conn. o.p. meter across spkr. voice coil. 2. Sig. gen. at 455 KC - carefully adj. 2 I.F. trims. and 2 DIODE trims. to highest read. on o.p. meter. Advance sig. gen. atten. if nec. 3. Turn sig. gen. to 1750 KC and with cond. gang out of mesh adj. OSC. trim. until 1750 KC sig. is heard. 4. Set sig. gen. at 1400 KC and turn cond. gang to sig. at 1400 KC. Adj. ANT. trim. to point showing highest reading on o.p. meter.

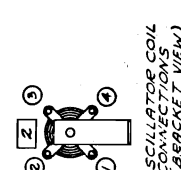


NOTE: PIN OF L49B MUST BE CONNECTED TO SHELL OF TUBE.

NOTE: When align. AC-DC receivers it is advisable to use a block cond. in series with gnd. conn. to sig. gen. If sig. gen. is AC operated it may not be possible to conn. to Mod. grid for IF align. because of hum. If so feed 455 KC sig. into ant. lead advancing sig. gen. attenuator accordingly.


Diag. No.	Part No.	Description	Diag. No.	Part No.	Description
1	2411606	ANTENNA COIL (Blue Dot)	18	18K11651	VOL. CONT. & SWITCH (1/2 sec)
2	2411607	Oscillator Coil (Blue Dot)	19	686117	Carbon Res. (1/2 sec) (1/2 sec)
3	1X11604	1/2 P. Coil & Shield Assembly	20	686118	Carbon Res. (1/2 sec) (1/2 sec)
4	25L1669	Output Transformer	21-A	686111	Carbon Res. (1/2 sec) (1/2 sec)
5	25L1669	Output Transformer	21-B	686112	Carbon Res. (1/2 sec) (1/2 sec)
6	1X11673	Tuning Unit, Gage & Pulley	22	686113	Carbon Res. (1/2 sec) (1/2 sec)
7	686113	Tubular Condenser (.002-400V.)	23	686114	Carbon Res. (1/2 sec) (1/2 sec)
8-A	686113	Tubular Condenser (.01-200V.)	24	686115	Carbon Res. (1/2 sec) (1/2 sec)
8-B	686113	Tubular Condenser (.01-200V.)	25	686116	Carbon Res. (1/2 sec) (1/2 sec)
9	686113	Tubular Condenser (.01-200V.)	26	686117	Carbon Res. (1/2 sec) (1/2 sec)
10	686113	Tubular Condenser (.01-200V.)	27	686118	Carbon Res. (1/2 sec) (1/2 sec)
11	686113	Tubular Condenser (.01-200V.)	28	686119	Carbon Res. (1/2 sec) (1/2 sec)
12	686113	Tubular Condenser (.01-200V.)	29	686120	Carbon Res. (1/2 sec) (1/2 sec)
13	686113	Tubular Condenser (.01-200V.)	30	686121	Carbon Res. (1/2 sec) (1/2 sec)
14	2411615	Elect. Cond. A. Stray (20-20-150V.)	31	30K11641	LINK COIL & PLUG (6 FT.)
15	2186505	Plated Hex. Cond. (50 MMF) 20V.	32	50K11691	SPK. ANTENNA (20 FT.)
16	2186500	Plated Hex. Cond. (50 MMF) 20V.	33	50K11691	SPK. ANTENNA (20 FT.)
17	20M11702	Trimmer & Mounting Spring	34	50K11691	SPK. ANTENNA (20 FT.)
18	20M11647	Compensating Condenser	35	50K11691	SPK. ANTENNA (20 FT.)

GALVIN MFG. CORP.

MODELS 61CA, 61DA
(With Separate Osc)
Schematic, Coils

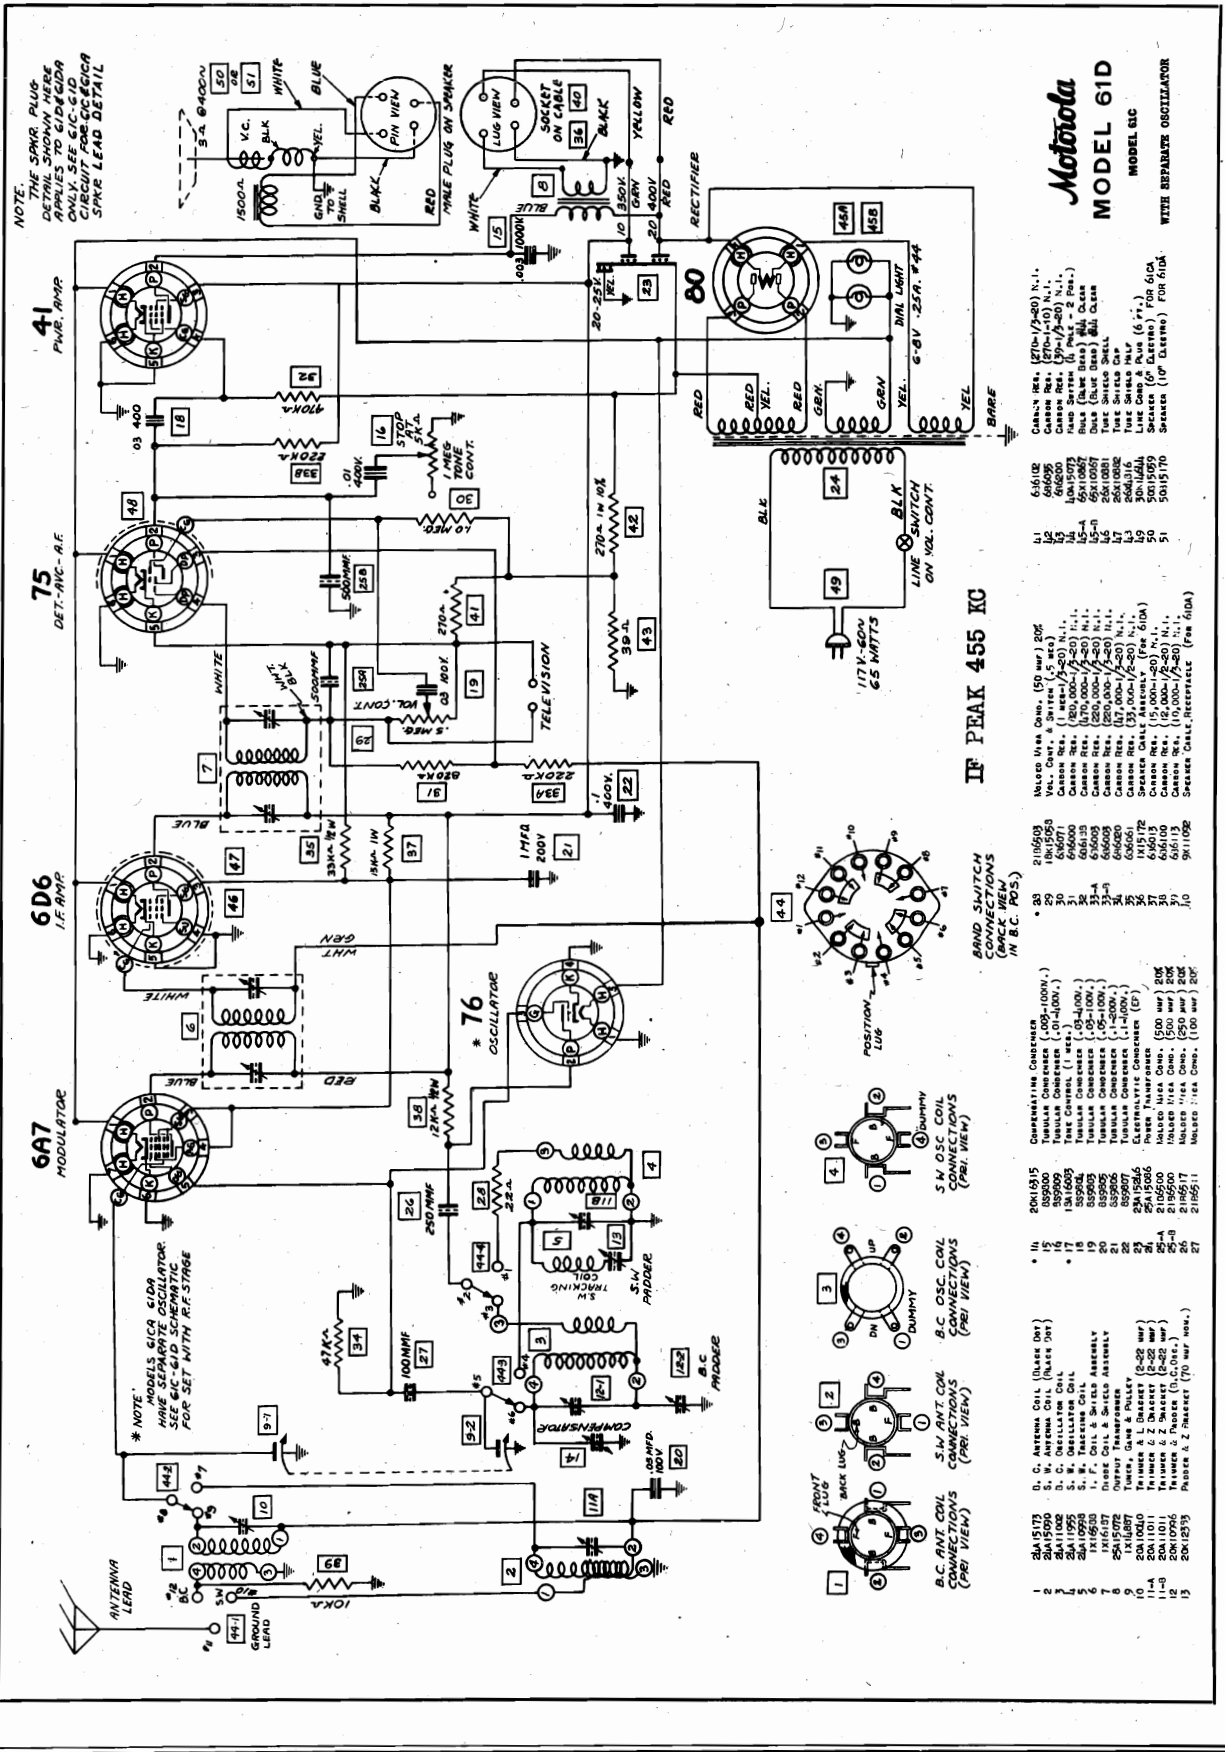





NOTE: THE SPKR. PLUG DETAIL SHOWN HERE IS ONLY FOR 61CA-61DA CIRCUIT FOR 61CA-61DA SPKR LEAD DETAIL



Motorola
MODEL 61C
WITH SEPARATE OSCILLATOR

IF PEAK 455 KG

BAND SWITCH CONNECTIONS IN B.C. POS.

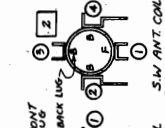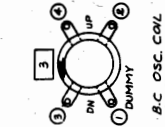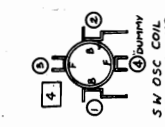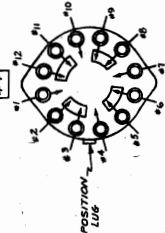

- 1 20A1500
- 2 20A1500
- 3 20A1500
- 4 20A1500
- 5 20A1500
- 6 20A1500
- 7 20A1500
- 8 20A1500
- 9 20A1500
- 10 20A1500
- 11 20A1500
- 12 20A1500
- 13 20A1500
- 14 20A1500
- 15 20A1500
- 16 20A1500
- 17 20A1500
- 18 20A1500
- 19 20A1500
- 20 20A1500
- 21 20A1500
- 22 20A1500
- 23 20A1500
- 24 20A1500
- 25 20A1500
- 26 20A1500
- 27 20A1500
- 28 20A1500
- 29 20A1500
- 30 20A1500
- 31 20A1500
- 32 20A1500
- 33 20A1500
- 34 20A1500
- 35 20A1500
- 36 20A1500
- 37 20A1500
- 38 20A1500
- 39 20A1500
- 40 20A1500
- 41 20A1500
- 42 20A1500
- 43 20A1500
- 44 20A1500
- 45 20A1500
- 46 20A1500
- 47 20A1500
- 48 20A1500
- 49 20A1500
- 50 20A1500
- 51 20A1500

MODELS 61C and 61D (with separate oscillator)

GALVIN MFG. CORP.

MODELS 61C, 61D
MODEL 81C
Socket, Trimmers
Alignment, Voltage
Sensitivity, Gain

ALIGNMENT PROCEDURE
MODELS 61C AND 61D (WITHOUT LOOP ANTENNA)

1. Connect signal generator to control grid of 1st Det. tube (6A7) through a .05 MF. condenser. Do not remove grid cap. Also connect output meter across speaker voice coil. Turn band switch to "Broadcast" position. Turn condenser gang completely out of mesh.
2. Set signal generator at 455 K.C. and carefully adjust the four IF trimmers (located in top of I.F. coil cans) to point showing highest reading on output meter.
3. Leave band switch in "Broadcast" position. Connect signal generator to antenna and ground terminals, using a .0002 MF condenser in antenna lead. (Antenna — blue wire; ground — black wire.)
4. Set signal generator at 1750 K.C. Adjust BC OSC. trimmer until 1750 K.C. signal is heard.
5. Set signal generator at 1400 K.C. and turn condenser gang to signal at 1400 K.C. Adjust BC ANT. trimmer to point showing highest reading on output meter.
6. Set signal generator at 800 K.C. and rock pointer at 600 K.C. position on dial scale, while adjusting BC paddler, until combination is found which gives highest output reading. (NOTE: If there is no noise level at 600 K.C., paddler can be adjusted to maximum noise without rocking gang and without use of signal generator. Use short wire for pick-up if necessary.)
7. Turn band switch to "Short Wave" position. Replace .0002 MF condenser in signal generator lead with a 400 ohm carbon resistor.
8. Set signal generator and receiver dial both at 18.0 MC. Adjust S.W. OSC. trimmer until 18.0 MC signal is heard.

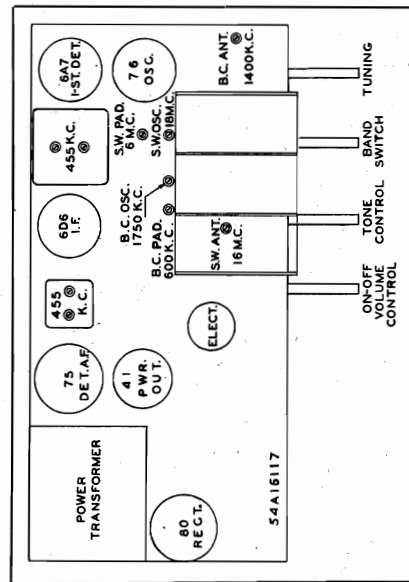


FIG 2 TRIMMERS - 6C and 8C Chassis

SENSITIVITY AND STAGE GAIN MEASUREMENTS

All stage gain measurements must be made with the volume control set for full volume. The shielded lead from the signal generator is connected to the grid terminal of the tube through a .1 MF condenser, with a 500M ohm resistor connected as a leak resistance between the grid of the tube and the grid lead which has been removed.

The figures in the table are average and allowance must be made for variations between two sets of the same general type, due to difference of tube characteristics, etc.

MODELS 61C AND 61D

Average Maximum Input	Generator Set at	Generator Connected to	Dummy Resistor Capacity	Leak Resistance	Output Meter Reading
3000	455 K.C.	IF Grid	.1 MF	5 Meg	.35 Volts
35	455 K.C.	Med. Grid	.1 MF	5 Meg	.35 Volts
45	800 K.C.	Med. Grid	.1 MF	5 Meg	.35 Volts
15	800 K.C.	Ant. Grid	200 MOUF	None	.35 Volts
3000	455 K.C.	IF Grid	.1 MF	5 Meg	.35 Volts
35	455 K.C.	Med. Grid	.1 MF	5 Meg	.35 Volts
45	800 K.C.	Med. Grid	.1 MF	5 Meg	.35 Volts
15	800 K.C.	Ant. Lead	400 Ohms	None	.35 Volts

MODEL 61D (WITH LOOP)

Average Maximum Input	Generator Set at	Generator Connected to	Dummy Resistor Capacity	Leak Resistance	Output Meter Reading
3000	455 K.C.	IF Grid	.1 MF	5 Meg	.35 Volts
35	455 K.C.	Med. Grid	.1 MF	5 Meg	.35 Volts
45	800 K.C.	Med. Grid	.1 MF	5 Meg	.35 Volts
15	800 K.C.	Ant. Lead	400 Ohms	None	.35 Volts

MODEL 81C (SQUARE LOOP)

Average Maximum Input	Generator Set at	Generator Connected to	Dummy Resistor Capacity	Leak Resistance	Output Meter Reading
2500	455 K.C.	IF Grid	.1 MF	5 Meg	.35 Volts
35	455 K.C.	Med. Grid	.1 MF	5 Meg	.35 Volts
40	800 K.C.	Med. Grid	.1 MF	5 Meg	.35 Volts
15	800 K.C.	Ant. Lead	400 Ohms	None	.35 Volts

* For .05 Watt output.
** Output meter connected across voice coil.

1. Loop should be connected to chassis during alignment.
2. Alignment procedure is the same as above except for step 5, which should be omitted, as there is no BC ANT. trimmer in the loop version of this model.

MODEL 81C WITH CYLINDRICAL LOOP

1. When the chassis is aligned on the service bench, the loop may be disconnected if the WHITE and BLUE pin terminals are clipped or wired together. See Fig. 2 for trimmer locations.
2. Alignment procedure is the same as for Model 61C, plus the wave trap adjustment which is as follows:
3. Feed 455 KC signal into antenna lead and adjust wave trap trimmer to minimum reading on output meter.

MODEL 81C WITH SQUARE LOOP

1. Loop should be connected to chassis during alignment.
2. Alignment procedure is the same as for Model 61C, except for Step 5, which should be omitted, as there is no BC ANT. trimmer in this model.
3. There is no wave trap adjustment.

VOLTAGE CHARTS

Tube	Position	Screen	Control	81C Cathode
76	OSC	130	0	0
6A7*	Med	280	95	0
6D6*	LF	280	95	0
60YG**	Det. AVC	85	0	3
60YG**	INV	120	0	3
41	Output	255	280	19
80	Rect.	255	280	19
80	Rect.	AC	0	300

* Bias—3.0 volts measured across resistor 43.
** Bias—1.5 volt measured across resistors 43 and 44.
Measurements from socket terminal to chassis ground using 1000 ohms per volt meter.

61C AND 61D

Tube	Position	Screen	Control	81C Cathode
76	OSC	150	0	0
6A7	Med	250	85	0
6D6	LF	250	85	0
75*	Det. AVC	100	2	2
41**	Output	285	250	0
80	Rect.	A.C.	0	400


* Bias—3.0 volts measured across resistor 43.
** Bias—18.0 volts measured across resistor 43.

MODELS 61E, 62E, 63E

Chassis 6E


Schematic Alignment

GALVIN MFG. CORP.

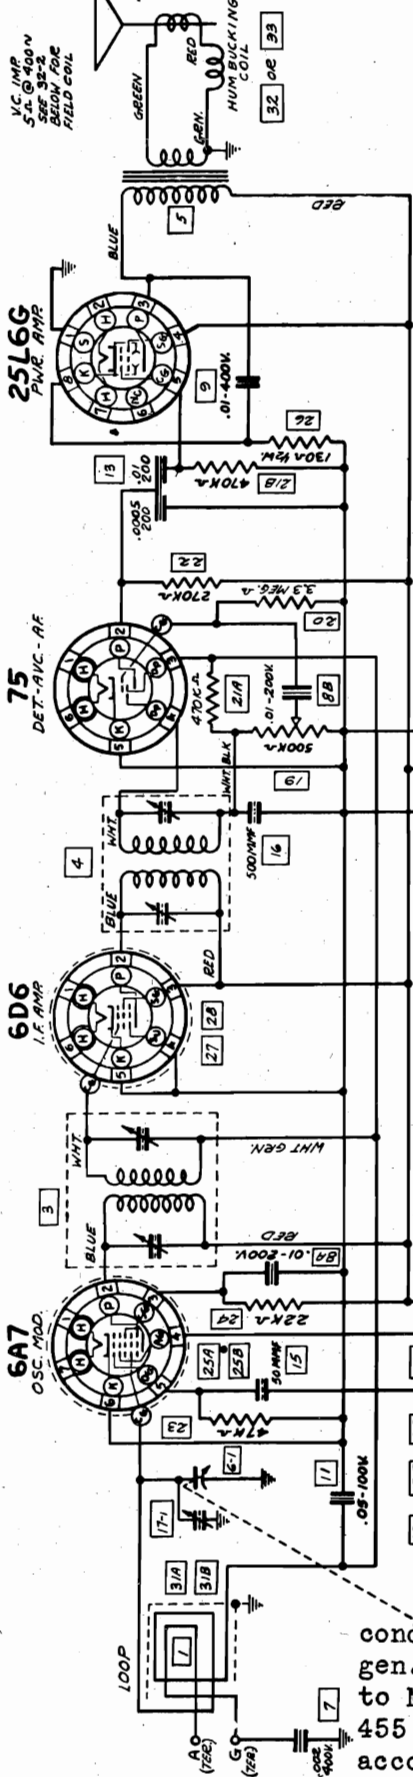


I.F. - 455 KC.
FREQUENCY RANGE 538-1720 KC

ALIGNMENT 1. Connect sig. gen. to control grid of first det. tube thru a .05 MF cond. and to chassis. Do not remove grid cap. Also connect o.p. meter across speaker voice coil. Turn cond. gang completely out of mesh. Loop must be connected to chassis at all times. 2. Set sig. gen. at 455 KC and adj. the 2 IF trims. and 2 DIODE trims. to point showing highest reading on o.p. meter. 3. Turn sig. gen. to 1720 KC and with cond. gang out of mesh adj. OSC. trim. until 1720 KC sig. is heard. 4. Disconnect sig. gen. and tune in weak sta. near 1400 or 1500 KC. Adj. ANT. trim. for max. volume.

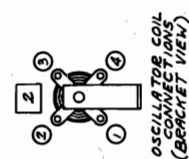

NOTE: #1 PIN OF L49B MUST BE CONNECTED TO ALL OF THESE.

*44 DIRL LIGHT 6-0V .25A.

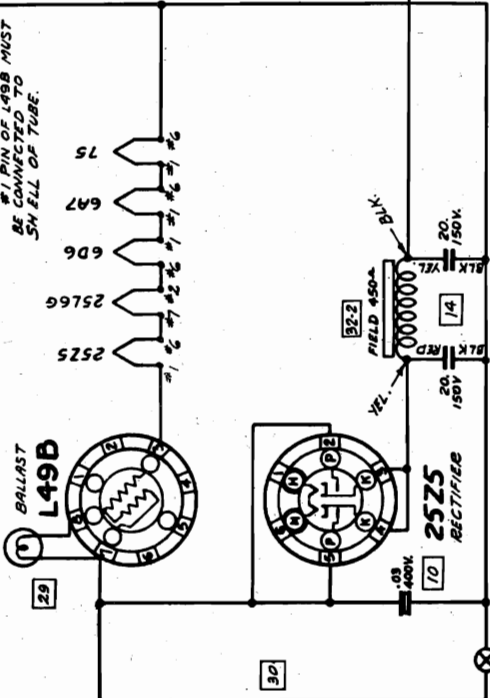


When align. AC-DC receivers it is advisable to use a block cond. in series with gnd. conn. to sig. gen. If sig. gen. is AC operated it may not be possible to conn. to Mod. grid for IF align. because of hum. If so feed 455 KC sig. into ant. lead advancing sig. gen. attenuator accordingly. (In loop models conn. to coup. turn in loop.

No.	Description	No.	Description
1	24K1688	18	20K11047
2	24K1689	19	18K1451
3	1X14716	20	68K179
4	1X16832	21-A	66K011
5	25A16509	21-B	66K011
6	1X19519	22	66K098
7	68K011	23	66K020
8-4	85K825	24-A	66K031
9	85K809	24-B	66K031
10	85K805	25-A	66K181
11	85K810	25-B	66K181
12	68K011	26	26K10882
13	25A16615	27	26K10882
14	2108500	28	65K12028
15	2108500	29	30K14644
16	20K11702	30	66K011
17		31	66K011
		32	66K011
		33	66K011

GALVIN MFG. CORP.

MODEL 82A
Schematic

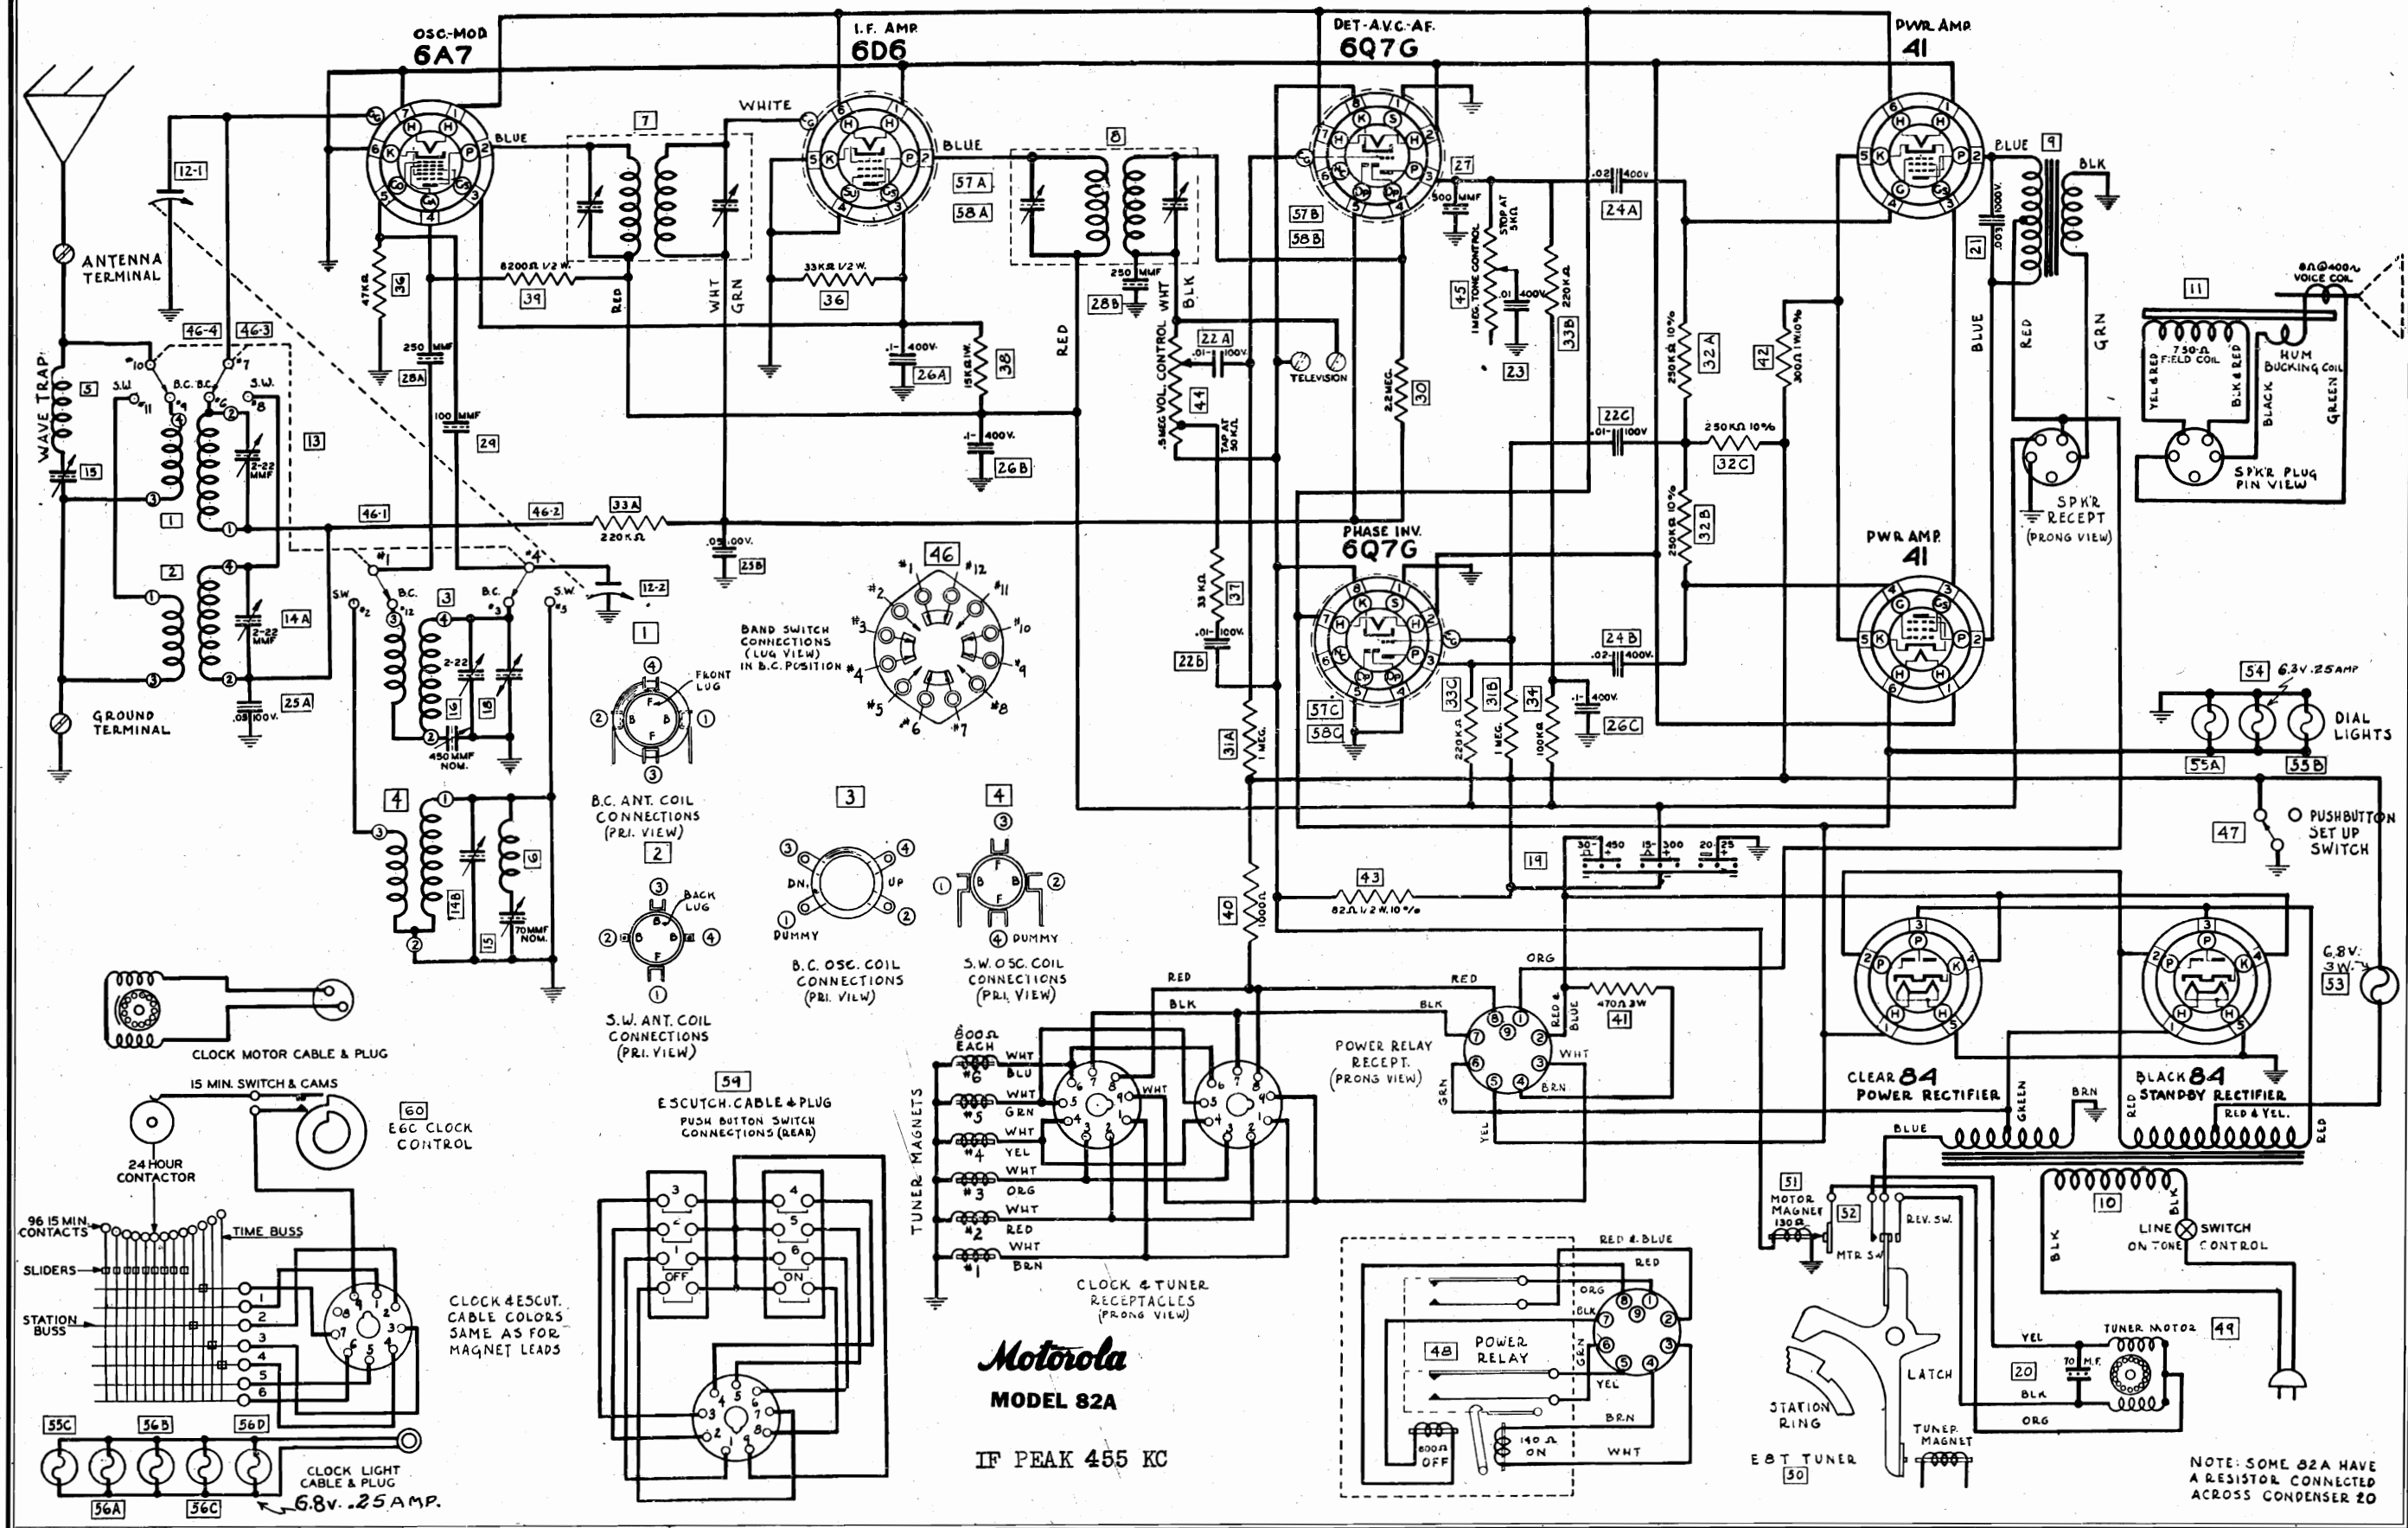

Motorola
MODEL 82A
IF PEAK 455 KC

GALVIN MFG. CORP.

MODEL 82A
Voltage, Sensitivity
Clock Data, Drive Data

VOLTAGE CHART

TUBE	POSITION	SCREEN	CATHODE	OSC. PLATE
6A-7*	Occ. Mod.	120	0	190
6D-6**	I. F.	120	0	—
6G7C**	Det.-A.V.C.	120	-4.5	—
6X4**	Output	240	12	—
41	Output	240	12	—
84	Standby Rect.	240	410***	—
	Rect.	AC	310	—

*Bias - 30V. Output measured across motor magnet.
**Bias - 15V. measured across resistor 43.
***Stand-by voltage without load.
Measurements from socket terminal to chassis ground using 1000 ohms per volt meter.

SENSITIVITY DATA

Microvolt Input	Generator Connected	Dummy Antenna	Look Resistance	Output
2500	606 Grid	1 Mfd	.5 Meg	.65 Volts
30	455 K.C.	1 Mfd	.5 Meg	.65 Volts
40	455 K.C.	.1 Mfd	.5 Meg	.65 Volts
12	600 K.C.	200 Mfd	None	.65 Volts

*Output meter connected across voice coil.

SETTING THE CLOCK

Since that part of the clock which controls the radio operates on a 24-hour basis, it is not sufficient to set the clock to the exact hour. It must also be set for day or night, as the case may be. Directly below the center of the clock dial is a small peep-hole, through which you can look to determine whether the day or night section is in control. White indicates day (6 A.M. to 6 P.M.), black indicates night (6 P.M. to 6 A.M.).

For example: If it is 12:00 o'clock noon when you set the clock, the clock hands should not only point to 12:00 o'clock, but a white surface should be visible through the peep-hole. If a black surface is seen instead, turn the clock ahead 12 hours.

IN SETTING THE CLOCK, ALWAYS TURN IT FORWARD — NEVER BACKWARDS.

Even though your setting of the clock has been fairly accurate, you will probably need to synchronize it with

radio time. To do this, set up a series of programs, following the directions outlined in later paragraphs and watch carefully to see if the clock operates the electric tuner during the short interval in which program changes occur on the radio networks.

If you find that the mechanism operates a few seconds before the change in program should be accomplished, you can slow it by pulling the wall plug of the radio for the exact number of seconds that the clock was fast. If, on the other hand, the change in programs is slow, you should merely set the clock forward a few seconds by means of the time setting knob on the back of the clock. (Fig. 1). Several hours may be required to get the clock exactly synchronized with the change in radio programs. However, once this has been accomplished, it will not need to be done again until such time when you may pull the wall plug, or until your house current falls from some other cause.

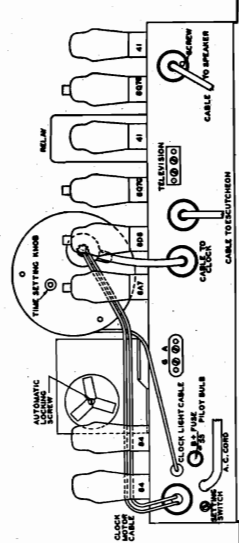


Fig. 1

TO RESTRING DIAL DRIVE CORDS

TUNING CORD

1. Cut a length of 30 lb. test silk fish cord 43 inches long.
2. Turn gang to fully meshed position.
3. Thread end of cord thru slot "A" in condenser pulley.
4. With an ordinary paper clip fasten cord to drive pulley to hold in place.
5. Wind cord in a clock-wise direction one full turn around the condenser pulley and down to the tuning shaft.

6. Wind cord in clock-wise direction three times around the drive shaft, and up to the condenser pulley.
7. Thread end of cord thru slot "A" in condenser pulley.
8. Knot both ends of cord together securely.
9. Hook one end of tension spring to cord.
10. Connect the other end of the spring to the hook "B" on the condenser pulley.

POINTER CORD

1. Cut a length of 30 lb. test silk fish cord 40 inches long and tie a 1/4 inch loop in each end. Finished length should be 37 inches.
2. Place loop over front slab head set screw "C".
3. Run cord under idler pulley, No. 1.
4. Continue cord across front of chassis to idler pulley No. 2.
5. Continue cord clockwise around idler pulley No. 2.
6. Run cord under idler pulley No. 3.
7. Wrap string around rear bushing clock-wise six times.

8. Place loop over rear set screw "D".
9. Loosen front set-screw and turn in counter-clock-wise direction until you have 1/2 to 3/4 turns of cord around the front bushing and all slack has been taken up. Do not pull cord too tight. Watch back lash spring "J".
10. Replace dial pointer.

11. To set pointer to correct frequency, tune in a station of known frequency and adjust position of pointer on string.
12. Secure pointer to string with a drop of shellac or a good grade of household cement.

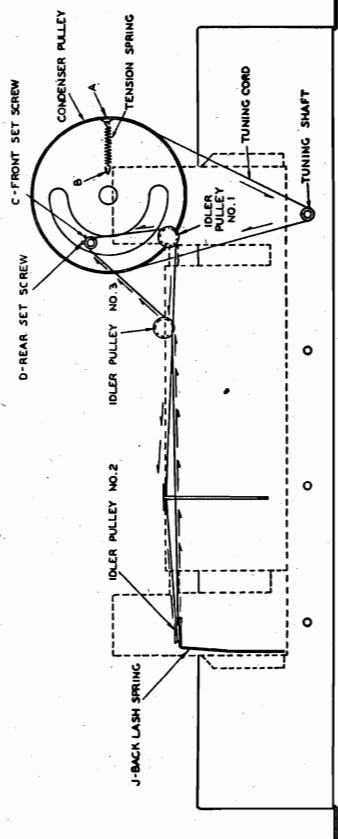


Fig. 6

MODEL 82A
Alignment, Tuner Data

GALVIN MFG. CORP.

ALIGNMENT PROCEDURE

1. Connect signal generator to control grid of Modulator tube (6X7) thru a .05 MF. condenser and to chassis. Do not remove grid cap. Also connect output meter across speaker voice coil. Turn band switch to "Broadcast" position. Turn condenser gang completely out of mesh.
2. Set signal generator at 455 K.C. and carefully adjust the I.F. trimmers (located in top of I.F. coil cans) to point showing highest reading on output meter.
3. Leave band switch in "Broadcast" position. Connect signal generator to antenna, and ground terminals, using a .0002 MF condenser in antenna lead.
4. Set signal generator and receiver dial both at 1700 K.C. Adjust BC OSC. trimmer until 1700 K.C. signal is heard.
5. Set signal generator at 1400 K.C. and turn condenser gang to the signal at 1400 K.C. Adjust BC ANT. and BC RF trimmers to point showing highest reading on output meter.
6. Set signal generator at 600 K.C. and rock pointer at 600 K.C. position on dial scale, while adjusting BC paddler, until combination is found which gives highest output reading. (NOTE: If there is noise level at 600 K.C., paddler can be adjusted to maximum noise without rocking gang and without use of signal generator. Use short wire for pick-up if necessary.)
7. Set signal generator at 455 K.C. and adjust wave trap trimmer for minimum deflection of output meter.

8. Turn band switch to "Short Wave" position, substituting a 400 ohm carbon resistor in the antenna lead to signal generator.
9. Set signal generator and receiver dial both at 18 MC. Adjust SW OSC. trimmer until 18 MC signal is heard.
10. Set signal generator at 16 MC and turn condenser gang to the signal at 16 MC. Adjust SW ANT. trimmer to point giving greatest output reading, while slightly rocking condenser gang.
11. Set signal generator at 6.0 MC and rock pointer at 6.0 MC position on dial scale, while adjusting SW paddler, until combination is found which gives highest output reading. (NOTE: If there is noise level at 6.0 M.C., paddler can be adjusted to maximum noise without rocking gang and without use of signal generator. Use short wire for pick-up if necessary.)

12. Insert your finger in the position of the station you want to hear at that time and turn the dial clockwise until the stop is reached, just as you would if you were dialing a telephone. Remove your finger—the dial will return to its normal position.
13. Turn the red pointer to the time of the next desired program and dial the next station you wish to hear, in the same manner.

14. For those periods throughout the twenty-four hour day when you do not wish to listen to a program, the clock can be made to turn the radio "OFF" by turning the red pointer to the desired quarter hour time, and by dialing the "OFF" position—just the same as you would dial a station position.

Try to think of the clock as doing for you exactly the same thing you do for yourself when you press a button on the front of the radio. Instead of actually pressing the button, the clock closes the same electrical circuit at the proper time, and holds the circuit closed for three seconds—long enough to tune a station or to operate the "ON" or "OFF" relays, after which interval it releases control. It will not take control again until the next quarter hour arrives and will take control then, only if something has been "dialed" for that time.

SETTING THE TIME TUNER

1. Select and list the programs you wish to hear during the next 24-hour period. Note the time they come on the air and the stations on which they will be heard. (If your daily paper lists the radio programs by 15-minute intervals, as most of them do, all you need is to have the radio column before you as you "set up" your selections.)
2. Insert your finger in the "OFF" position of the clock FINGER DIAL, and turn the dial to the LEFT (counter-clockwise) until the stop is reached. Remove your finger and permit the dial to return to its normal position (just like a telephone dial). This operation will clear or cancel any previous setting that may have been made and leave the clock control mechanism in neutral position, ready to receive the new series of programs.
3. By means of the round TIME SELECTING knob at the bottom of the clock, turn the red pointer to the desired quarter hour at which you wish to hear a radio program.

4. With latch bar at rest position adjust screw (front screw) until top motor contact is lifted from center contact by 12 to 15 thousandths of an inch at point "Z". (15 thousandths = .015).
5. Turn rotor until LOW side of ring rests under latch tip. Press any latch bar down and make sure switch contact make sufficiently to lift the top switch leaf slightly from the bakelite spacer.
6. Turn screw "D" (rear screw) until contact armature rests 10 to 15 thousandths of an inch from the magnet net pole. (Too close spacing will cause intermittent muting due to vibration.) (15 thousandths = .015).

Fig. 4

TO SET AUTOMATIC TUNER

1. Turn the motor switch OFF. This opens the motor circuit so the tuner can be set without running the motor, since a more accurate adjustment is possible.
2. Turn the motor switch ON. The dial manually all the way to the high frequency end (1720 K.C.) and then all the way back to the low frequency end (535 K.C.).
3. Still pressing on the button, tune in the station to be set on that button.
4. Press the first button and hold it down. A faint "click" should be heard, indicating that the tuning magnet has attracted the latch bar.
5. Holding the magnet energized, turn the dial manually all the way to the high frequency end (1720 K.C.) and then all the way back to the low frequency end (535 K.C.).
6. Still pressing on the button, tune in the station to be set on that button.
7. Proceed to set the remaining five stations. For each station follow Steps 3, 4, 5, and 6 as outlined above. AT NO TIME IN THE SETTING-UP PROCEDURE SHOULD THE TUNING MOTOR BE PERMITTED TO RUN.
8. Tighten the automatic locking screw very securely. Do not hold the tuning knob while locking the automatic, but allow the mechanism to turn to its natural stop.
9. Turn the motor switch so the motor will run when any tuning button is pressed.

1. Turn the rotor until the HIGH sides of all latch rings rest opposite the latch tips.
2. Turn screw "A" in until all latch bar tips touch HIGH side of ring and then turn the screw back one-half turn. (Spacing between latch tip and high side of ring at point "X" should be 8 to 12 thousandths of an inch.)
3. Hold any latch bar tip down on HIGH side of ring and adjust screw "C" (center screw) until the bakelite insulator on the center switch leaf just barely raises the head of the latch bar at point "Y". (Check adjustment by pressing other latch bars. The depressed latch bar must not lift the center contact even slightly.)

4. With latch bar at rest position adjust screw (front screw) until top motor contact is lifted from center contact by 12 to 15 thousandths of an inch at point "Z". (15 thousandths = .015).
5. Turn rotor until LOW side of ring rests under latch tip. Press any latch bar down and make sure switch contact make sufficiently to lift the top switch leaf slightly from the bakelite spacer.
6. Turn screw "D" (rear screw) until contact armature rests 10 to 15 thousandths of an inch from the magnet net pole. (Too close spacing will cause intermittent muting due to vibration.) (15 thousandths = .015).

7. Turn the motor switch so the motor will run when any tuning button is pressed.
8. Tighten the automatic locking screw very securely. Do not hold the tuning knob while locking the automatic, but allow the mechanism to turn to its natural stop.
9. Turn the motor switch so the motor will run when any tuning button is pressed.

1. Turn the rotor until the HIGH sides of all latch rings rest opposite the latch tips.
2. Turn screw "A" in until all latch bar tips touch HIGH side of ring and then turn the screw back one-half turn. (Spacing between latch tip and high side of ring at point "X" should be 8 to 12 thousandths of an inch.)
3. Hold any latch bar tip down on HIGH side of ring and adjust screw "C" (center screw) until the bakelite insulator on the center switch leaf just barely raises the head of the latch bar at point "Y". (Check adjustment by pressing other latch bars. The depressed latch bar must not lift the center contact even slightly.)

4. With latch bar at rest position adjust screw (front screw) until top motor contact is lifted from center contact by 12 to 15 thousandths of an inch at point "Z". (15 thousandths = .015).
5. Turn rotor until LOW side of ring rests under latch tip. Press any latch bar down and make sure switch contact make sufficiently to lift the top switch leaf slightly from the bakelite spacer.
6. Turn screw "D" (rear screw) until contact armature rests 10 to 15 thousandths of an inch from the magnet net pole. (Too close spacing will cause intermittent muting due to vibration.) (15 thousandths = .015).

7. Turn the motor switch so the motor will run when any tuning button is pressed.
8. Tighten the automatic locking screw very securely. Do not hold the tuning knob while locking the automatic, but allow the mechanism to turn to its natural stop.
9. Turn the motor switch so the motor will run when any tuning button is pressed.

1. Turn the rotor until the HIGH sides of all latch rings rest opposite the latch tips.
2. Turn screw "A" in until all latch bar tips touch HIGH side of ring and then turn the screw back one-half turn. (Spacing between latch tip and high side of ring at point "X" should be 8 to 12 thousandths of an inch.)
3. Hold any latch bar tip down on HIGH side of ring and adjust screw "C" (center screw) until the bakelite insulator on the center switch leaf just barely raises the head of the latch bar at point "Y". (Check adjustment by pressing other latch bars. The depressed latch bar must not lift the center contact even slightly.)

4. With latch bar at rest position adjust screw (front screw) until top motor contact is lifted from center contact by 12 to 15 thousandths of an inch at point "Z". (15 thousandths = .015).
5. Turn rotor until LOW side of ring rests under latch tip. Press any latch bar down and make sure switch contact make sufficiently to lift the top switch leaf slightly from the bakelite spacer.
6. Turn screw "D" (rear screw) until contact armature rests 10 to 15 thousandths of an inch from the magnet net pole. (Too close spacing will cause intermittent muting due to vibration.) (15 thousandths = .015).

7. Turn the motor switch so the motor will run when any tuning button is pressed.
8. Tighten the automatic locking screw very securely. Do not hold the tuning knob while locking the automatic, but allow the mechanism to turn to its natural stop.
9. Turn the motor switch so the motor will run when any tuning button is pressed.

1. Turn the rotor until the HIGH sides of all latch rings rest opposite the latch tips.
2. Turn screw "A" in until all latch bar tips touch HIGH side of ring and then turn the screw back one-half turn. (Spacing between latch tip and high side of ring at point "X" should be 8 to 12 thousandths of an inch.)
3. Hold any latch bar tip down on HIGH side of ring and adjust screw "C" (center screw) until the bakelite insulator on the center switch leaf just barely raises the head of the latch bar at point "Y". (Check adjustment by pressing other latch bars. The depressed latch bar must not lift the center contact even slightly.)

4. With latch bar at rest position adjust screw (front screw) until top motor contact is lifted from center contact by 12 to 15 thousandths of an inch at point "Z". (15 thousandths = .015).
5. Turn rotor until LOW side of ring rests under latch tip. Press any latch bar down and make sure switch contact make sufficiently to lift the top switch leaf slightly from the bakelite spacer.
6. Turn screw "D" (rear screw) until contact armature rests 10 to 15 thousandths of an inch from the magnet net pole. (Too close spacing will cause intermittent muting due to vibration.) (15 thousandths = .015).

Fig. 3

Fig. 2

Fig. 1

Fig. 4

Fig. 3

Fig. 2

Fig. 1

Fig. 4

Fig. 3

Fig. 2

Fig. 1

GALVIN MFG. CORP.

MODEL 82A
Clock Data
Tuner Notes

CHECKING CLOCK CONTINUITY

Although we have sealed the Time Tuning Clock against unauthorized tinkering, and have established a policy of voiding the guarantee if the seal is broken, it is possible to completely check the clock circuit for defects without removing the mechanism from its housing. This can be done by "ear" and by continuity.

The first step in checking a clock is to make sure that the motor runs and that it keeps accurate time. Just plug it into its receptacle on the chassis and check its time-keeping qualities against a known source of accurate time.

If this test indicates that the clock motor is not running, it would be advisable to make certain that the receptacle on the chassis base is "live" and that 110 volts, 60 cycle A.C. is available at that point.

Before attempting to check the clock continuity, it would be helpful to go through a little practice course in listening to the sounds the clock makes. First, remove the clock assembly from its mounting on the control panel of the receiver, and hold it in your hands while you turn the time set knob on the back. While turning the knob, hold the clock up to your ear, listening for the clicks. When the minute hand passes any of the four quarter-hour intervals into which each hour is divided, you will hear two clicks, the second of which falls very closely after the first one. These clicks are caused by the quarter-hour cam switch blades dropping off of the cams.

As you turn the time set knob, you will notice another single click which is a little louder and sounds a trifle more metallic than the double click which you get at the exact quarter-hour intervals. This single click will be heard when the minute hand is passing a point that is approximately half way between the quarter-hour positions. This click is caused by the contact on the twenty-four hour hand as it falls off of one time bar to make contact upon the next time bar.

If you will go through this operation several times, you will soon be able to identify these sounds. Once you are able to recognize them, you will be able to thoroughly check the continuity of the clock control circuit, without the necessity of looking inside the mechanism. Proceed as follows:

1. With the time set knob, turn the clock hands until they read fifteen minutes to twelve on the day cycle. Look through the peep-hole to make sure of this.
2. Slowly turn the time set knob forward until the minute hand indicates approximately two minutes to twelve. In the course of this movement you will hear, unless the clock is defective, a single click which indicates that the twenty-four hour contact has come to rest upon the twelve o'clock noon time bar.
3. Now very slowly continue to turn the time set knob forward until you hear the first click, which indicates that the top blade of the twenty-four hour cam switch has fallen off of the large cam, causing the cam switch circuit to close. As soon as you hear this first click, stop turning the time set knob, for if you turn it far enough to hear the second click, the con-

Following you will find a list of troubles you may experience with the automatic tuning system.

Each possible failure is followed by suggestions which may aid you in quickly solving your service problems with this model.

MOTOR DOES NOT RUN

1. Burned out 84 Tube (Black). This is a standby tube and should burn at all times.
2. **Poor Contact at Push-Button Plug.** Inspect the contacts between the plug and the receptacle on the chassis.
3. **Open Circuit in Motor.** Check all connections to motor and check motor winding for continuity.
4. 70 Mfd. motor starting condenser opened.
5. Motor magnet coil opened. (See Fig. 3.)
6. B plus fuse (No. 55 Pilot bulb) burned out. Accessible from rear of chassis base. (See Fig. 1.)
7. **Magnet Fails To Release.** If the magnet which has previously been energized, fails to release the latch bar for any reason, the motor cannot turn the mechanism.

MECHANISM RUNS SLEIGHLY

1. **Poor Contact Between Push-Button Plug and Receptacle.** This will also result in voltage drop, and lessened motor power.
2. Tension on motor contact armature too great.
3. **Gears Not Properly Meshed.** Check all gears in assembly for binding due to improper meshing.
4. **Defective Motor.**—Replace.

MOTOR FAILS TO REVERSE

1. **Reversing Switch Not Properly Adjusted.** See instructions elsewhere in this book.
2. **Open Circuit in Motor.** If one side of motor circuit is open, motor will run in one direction only.
3. **Open Magnet Winding.** An open magnet will not pull latch down; consequently will not cause motor switch to reverse.
4. **Latch Bar Spring Too Tight.** If the latch bars operate under too much tension the magnet may not be able to pull the latch down.

FAILS TO RETAIN ORIGINAL SETTING

1. **Latch Rings Not Locked Securely.** The locking screw must be pulled down securely, otherwise, the shock of the sudden stopping will tend to slide the rings away from the original setting.
2. **Original Setting Not Accurate.** Resetting of magnets may be necessary after several days' use, during which time the mechanism goes thru a "Shaking down" process.
3. Cable assembly from station magnets touching latch bars. Dress cable.

IMPOSSIBLE TO SET UP STATIONS

1. **Too Much Tension On Locking Levers.** When the automatic locking screw is loose, the station rings should move freely. If the levers still hold

ELECTRIC TUNER SERVICE SUGGESTIONS

the station rings partially locked, the screws which hold the levers in position should be loosened one-quarter to one-half turn.

Latch Rings "Out of Range." If the loosened latch rings slip on the drum until the notch falls out of reach of the latch bar, they can be brought back to position by following exactly the "setting procedure" outlined elsewhere in this book.

FAILS TO STOP AT STATION

1. **Open Magnet Winding.** Check for continuity and replace if necessary. Check latch bar cable assembly. See No. 6 below.
2. **Latch Bar Defective.** Inspect latch bar to make sure that it has not been damaged. Replace latch bar, if required.
3. **Poor Contact at Push-Button Plug.** A poor contact here means a voltage drop which reduces the pulling power of the magnet.
4. **Improper Spacing of Magnet.** Check the spacing between the latch bar armature and the magnet pole. When the tip of the latch bar is seated all the way down in the notch in the latch ring, the armature should not quite touch the magnet pole. A hair line of light should be visible between them.
5. **Latch Rings Not Locked Securely.** If the latch rings are very loose the motor will continue to run.
6. Cable assembly from station magnets, touching latch bars. Dress cable.

LATCH BAR STICKS IN NOTCH


1. **Latch Bar Spring Weak.** Check latch bar tension spring to make sure it is pulling away from the magnet with sufficient force. Spring tension is adjustable.
2. **Armature Rivet Worn.** There is a brass rivet at the tip of the armature, to prevent the armature freezing to the magnet. If this rivet is worn down, permitting the steel armature to actually touch the magnet pole, it may freeze in that position.
3. **Burr On Tip of Latch.** Latch tip should be smooth and shiny.
4. **Binding in Latch Bearings.** Latch must move freely but not sloppy.
5. **Latch Tips Not Centered On Latch Rings.** Latch tips must not rub bakelite guide rings. The latch bar bearing shaft is adjustable.
6. **Friction Clutch Too Tight.** A tension washer between the motor pinion and the brass pinion collar acts as a friction clutch to absorb the shock of stopping the motor quickly when a station is tuned. If the tension is too tight, the torque of the stopped motor will hold the latch bar tip in the notch.

SET DOES NOT TURN ON

1. "B" Fuse burned out (No. 55 Pilot Bulb) See Fig. 1.
2. Standby rectifier (black 84 tube) burned out.
3. Defective relay. See Fig. 1. Return to your Motorola distributor or factory for service. Relay plugs into socket in chassis base.

MODEL 11A
MODEL 21A
Wireless Record Players
Schematics


GALVIN MFG. CORP.

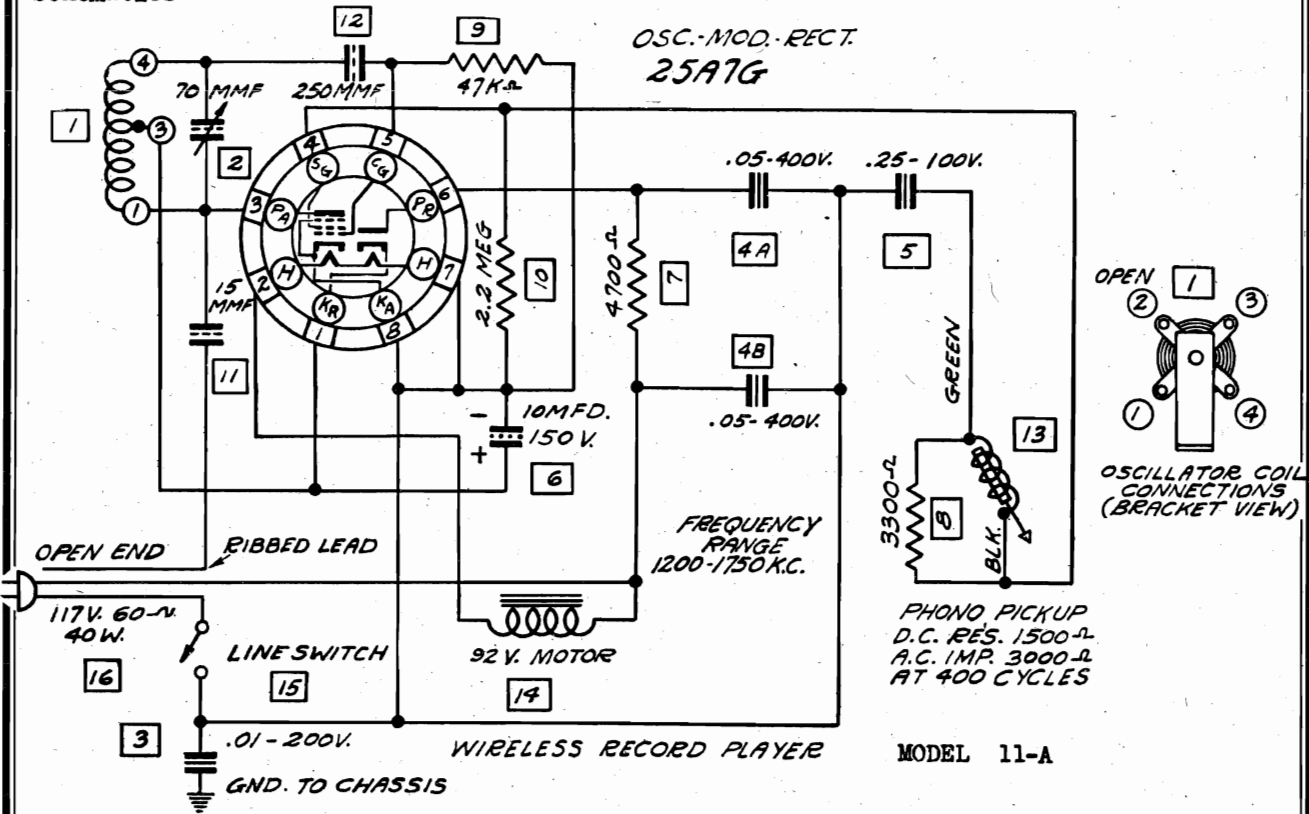

VOLTAGE CHART 21-A


TUBE	POS.	PLATE	SCREEN	OSC. GRID	CATHODE	FILAMENT
6K6GT	Osc. Mod.	85V	-	1 to 3	-	5.5 AC
76	Rect.	90V	-	-	85	5.5 AC

LINE VOLTAGE 110 AC

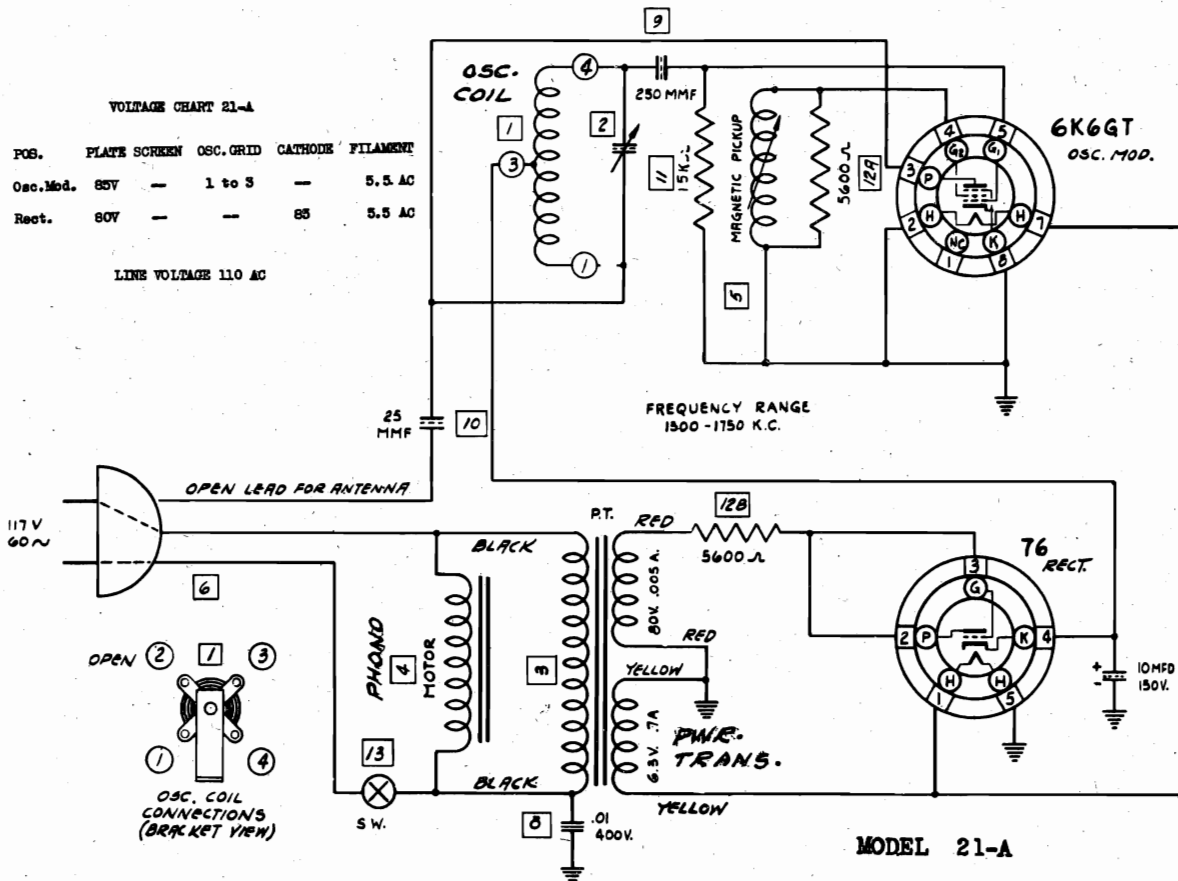


GALVIN MFG. CORP.

MODEL 89K1, Type 2
Schematic

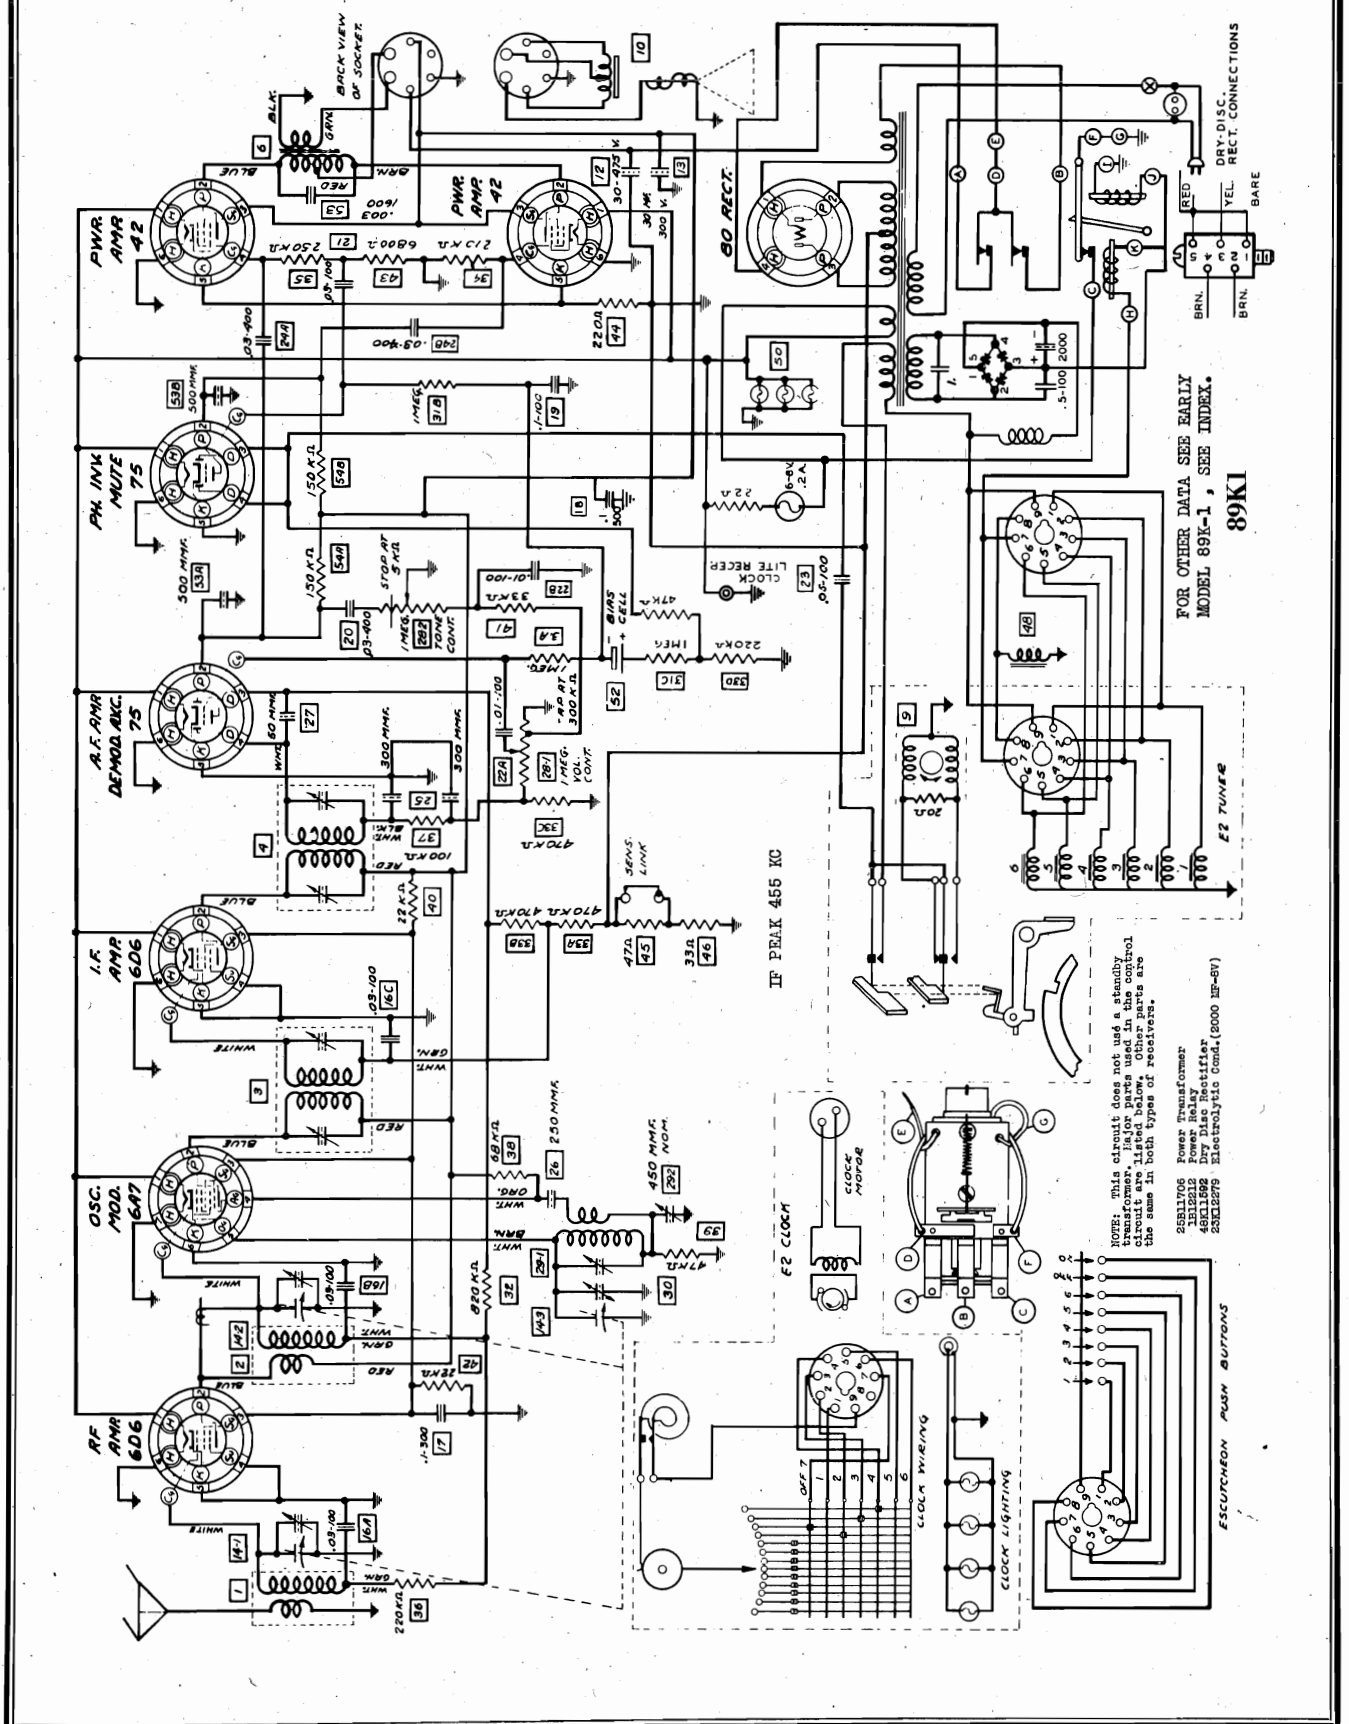

GALVIN MFG. CORP.

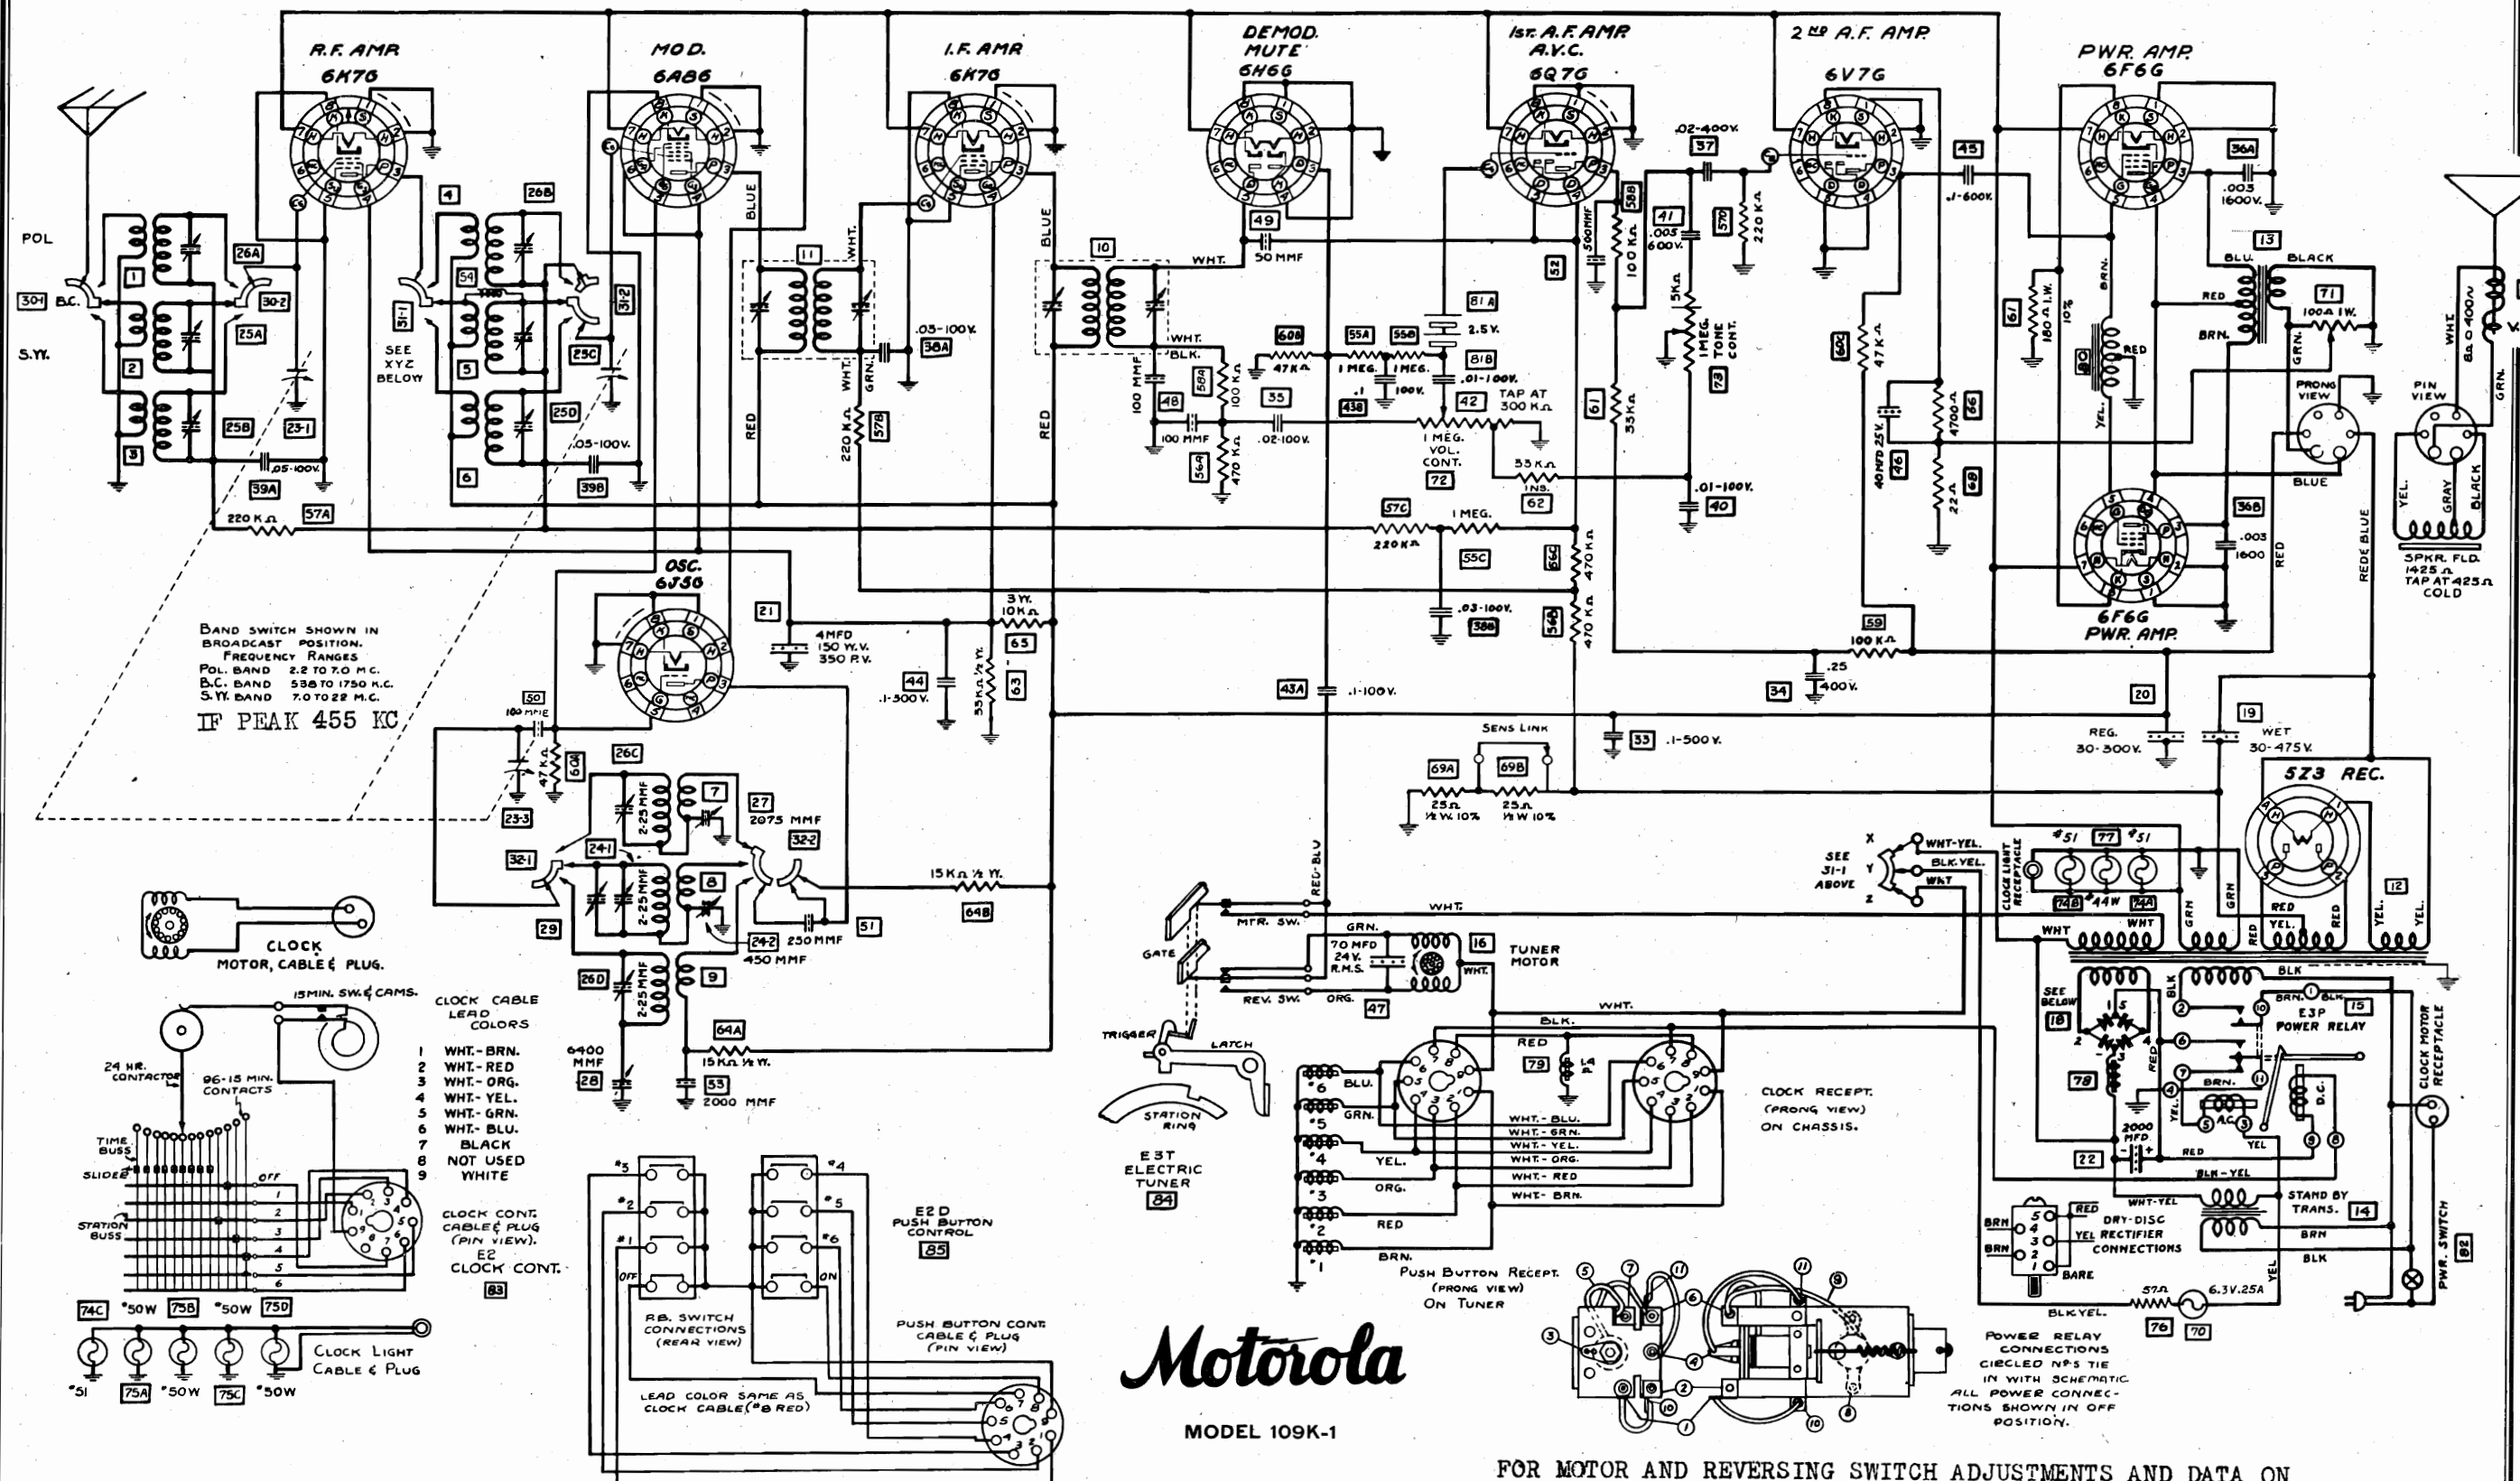

MODEL 109K1, Types 1, 2
 MODEL 109K2, Types 1, 2
 Alignment, Voltage, Sensitivity, Trimmers

MODEL 109K1, Type 2
 Schematic

GALVIN MFG. CORP.

ALIGNMENT PROCEDURE—MODELS 109K1 AND 109K2

1. Connect signal generator to control grid of Modulator tube (6A8G) through a .05 MF. condenser and to chassis. Do not remove grid cap. Also connect output meter across speaker voice coil. Turn band switch to "Broadcast" position. Turn condenser gang completely out of mesh.

2. Set signal generator at 455 K.C. and carefully adjust the I.F. trimmers (located in top of I.F. coil cans) to point showing highest reading on output meter.

3. Leave band Switch in "Broadcast" position. Connect signal generator to antenna and ground terminals, using a .0002 MF condenser in antenna lead.

4. Set signal generator and receiver dial both at 1700 K.C. Adjust BC OSC. trimmer until 1700 K.C. signal is heard.

5. Set signal generator at 1400 K.C. and turn condenser gang to the signal at 1400 K.C. Adjust BC ANT. and BC RF trimmers to point showing highest reading on output meter.

6. Set signal generator at 600 K.C. and rock pointer at 600 K.C. position on dial scale, while adjusting BC paddler, until combination is found which gives highest output reading. (NOTE: If there is noise level at 600 K.C., paddler can be adjusted to maximum noise with-

out rocking gang and without use of signal generator. (Use short wire for pick-up if necessary.)

7. Turn band switch to "Police" position. Replace .0002 MF condenser in signal generator lead with a 400 ohm carbon resistor.

8. Set signal generator and receiver dial both at 7.0 MC. Adjust POLICE OSC. trimmer until 7.0 MC signal is heard.

9. Set signal generator at 6.0 MC and turn condenser gang to signal at 6.0 MC. Adjust POLICE ANT. and POLICE RF trimmers to point giving greatest output reading, while slightly rocking condenser gang.

10. Turn band switch to "Short Wave" position, still using 400 ohm carbon resistor in antenna lead to signal generator.

11. Set signal generator and receiver dial both at 22.0 MC. Adjust SW OSC. trimmer until 22.0 MC signal is heard.

12. Set signal generator at 18 MC and turn condenser gang to the signal at 18 MC. Adjust SW ANT. and SW RF trimmers to point giving greatest output reading, while slightly rocking condenser gang.

13. Padders on "Police" and "Short Wave" bands are fixed. (No adjustment necessary.)

SOCKET VOLTAGES—MODELS 109K1 AND 109K2

Numerals refer to socket terminals as indicated on circuit diagram.

TUBE	POSITION	1	2	3	4	5	6	7	8
6K7G	R.F.	0	6. AC	210	95	0	0	0	0
6J5G	Osc.	0	6. AC	130	0	-25	0	0	0
6A8G	Mod.	0	6. AC	210	95	-25	95	0	0
6K7G	I.F.	0	6. AC	210	95	0	0	0	0
6H6G	Det.-Avc.	0	6. AC	-2	0	0	0	0	0
6Q7G	A.F. Mute	0	6. AC	115	0	0	0	0	0
6V7G	Ph. Inv.	0	0. AC	115	0	0	0	6. AC	10
6F6G	Output	0	6. AC	240	250	0	0	0	10
6F6G	Output	0	6. AC	240	250	0	0	0	10
5Z3	Rect.	310	AC	AC	310				

SENSITIVITY DATA—MODELS 109K1 AND 109K2

Microvolt Input *	Generator Set at	Generator Connected to	Dummy Antenna Capacity	Leak Resistance	Output Meter **
20,000	455 K.C.	6K7G Grid (I.F.)	.1 MF	.5 Meg.	2.82 Volts
300	455 K.C.	6A8G Grid	.1 MF	.5 Meg.	2.82 Volts
350	600 K.C.	6A8G Grid	.1 MF	.5 Meg.	2.82 Volts
15	600 K.C.	6K7G Grid (R.F.)	.1 MF	.5 Meg.	2.82 Volts
2	600 K.C.	Ant. Lead	.0002 MF	None	2.82 Volts

*For 1 Watt output.

**Output meter connected across voice coil.

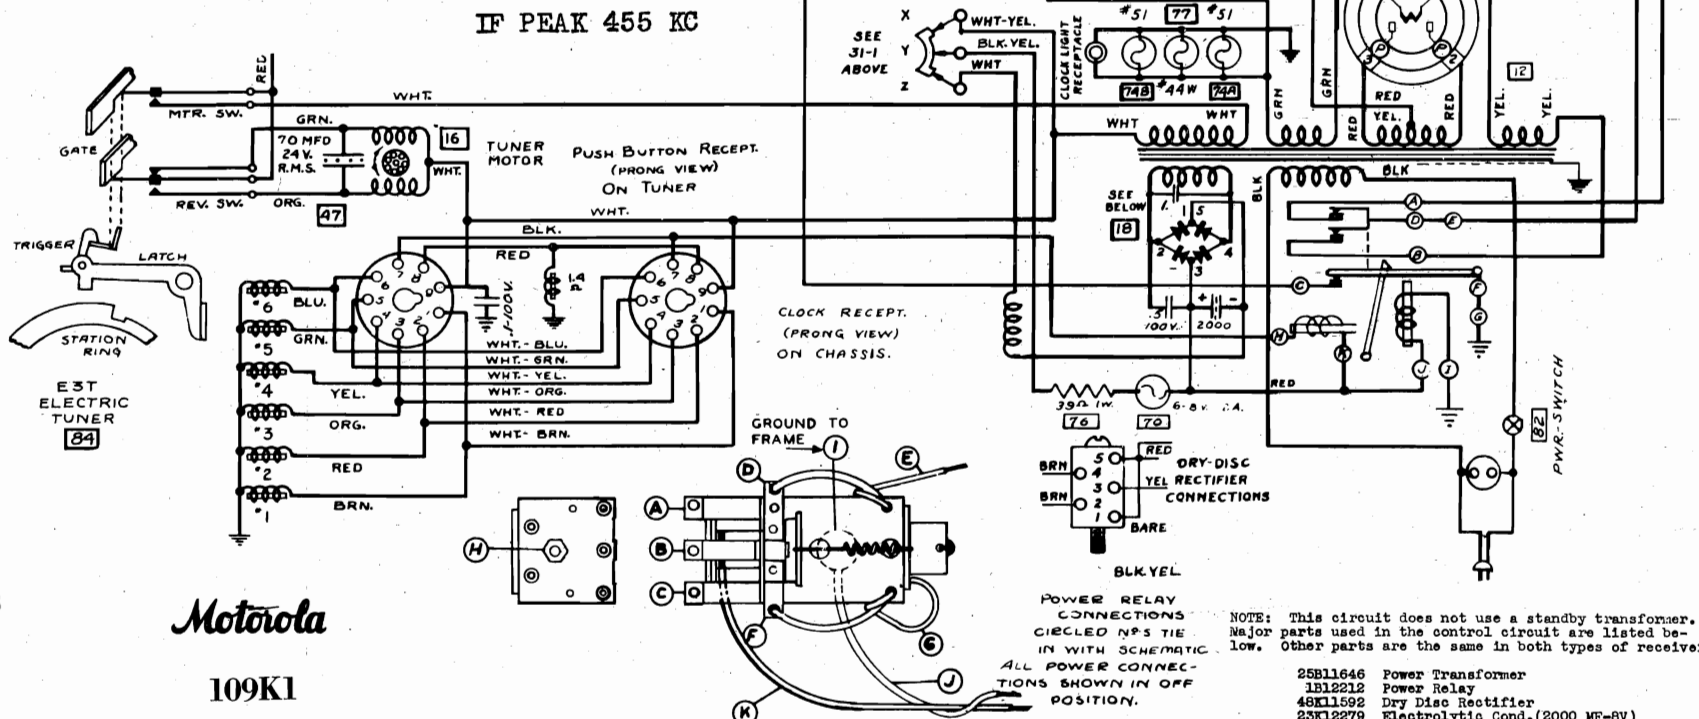
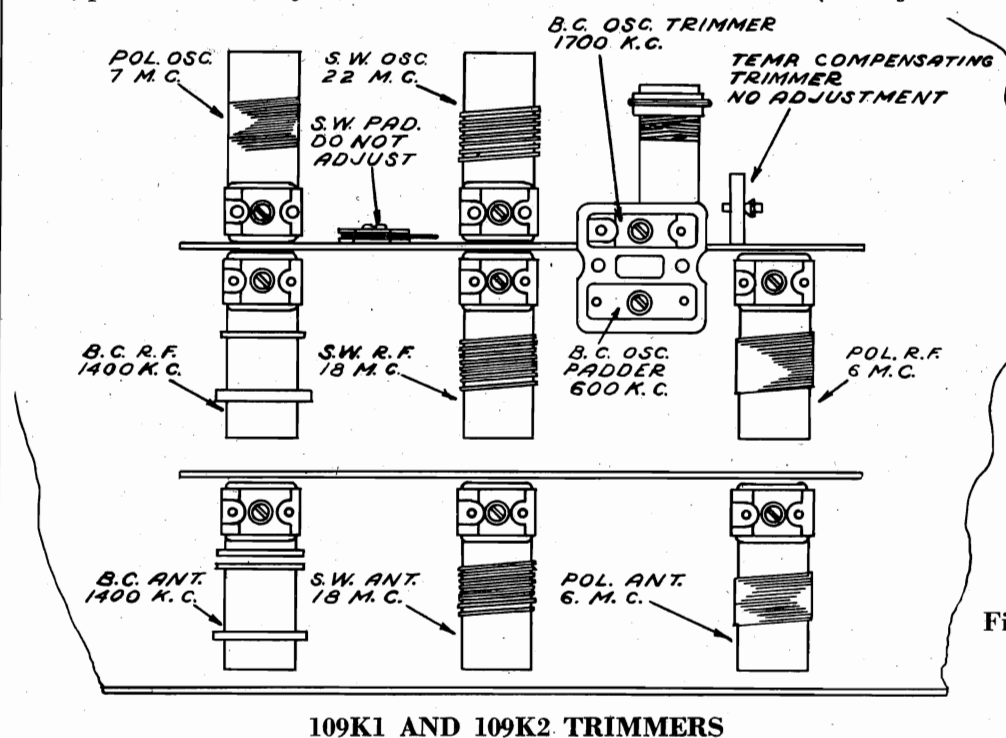


Fig. 3


Motorola
 109K1

NOTE: This circuit does not use a standby transformer. Major parts used in the control circuit are listed below. Other parts are the same in both types of receivers.

25B11646 Power Transformer
 1B12212 Power Relay
 48K11592 Dry Disc Rectifier
 28K12279 Electrolytic Cond. (2000 MF-8V)

GALVIN MFG. CORP.

FOR MOTOR AND REVERSING SWITCH ADJUSTMENTS AND DATA FOR CLOCK, REMOTE CONTROL, AND AUTOMATIC ELECTRIC TUNER, SEE MOTOROLA PAGES 9-33 AND 9-34 (MODELS 89K1, 89K2) VOL. 1X

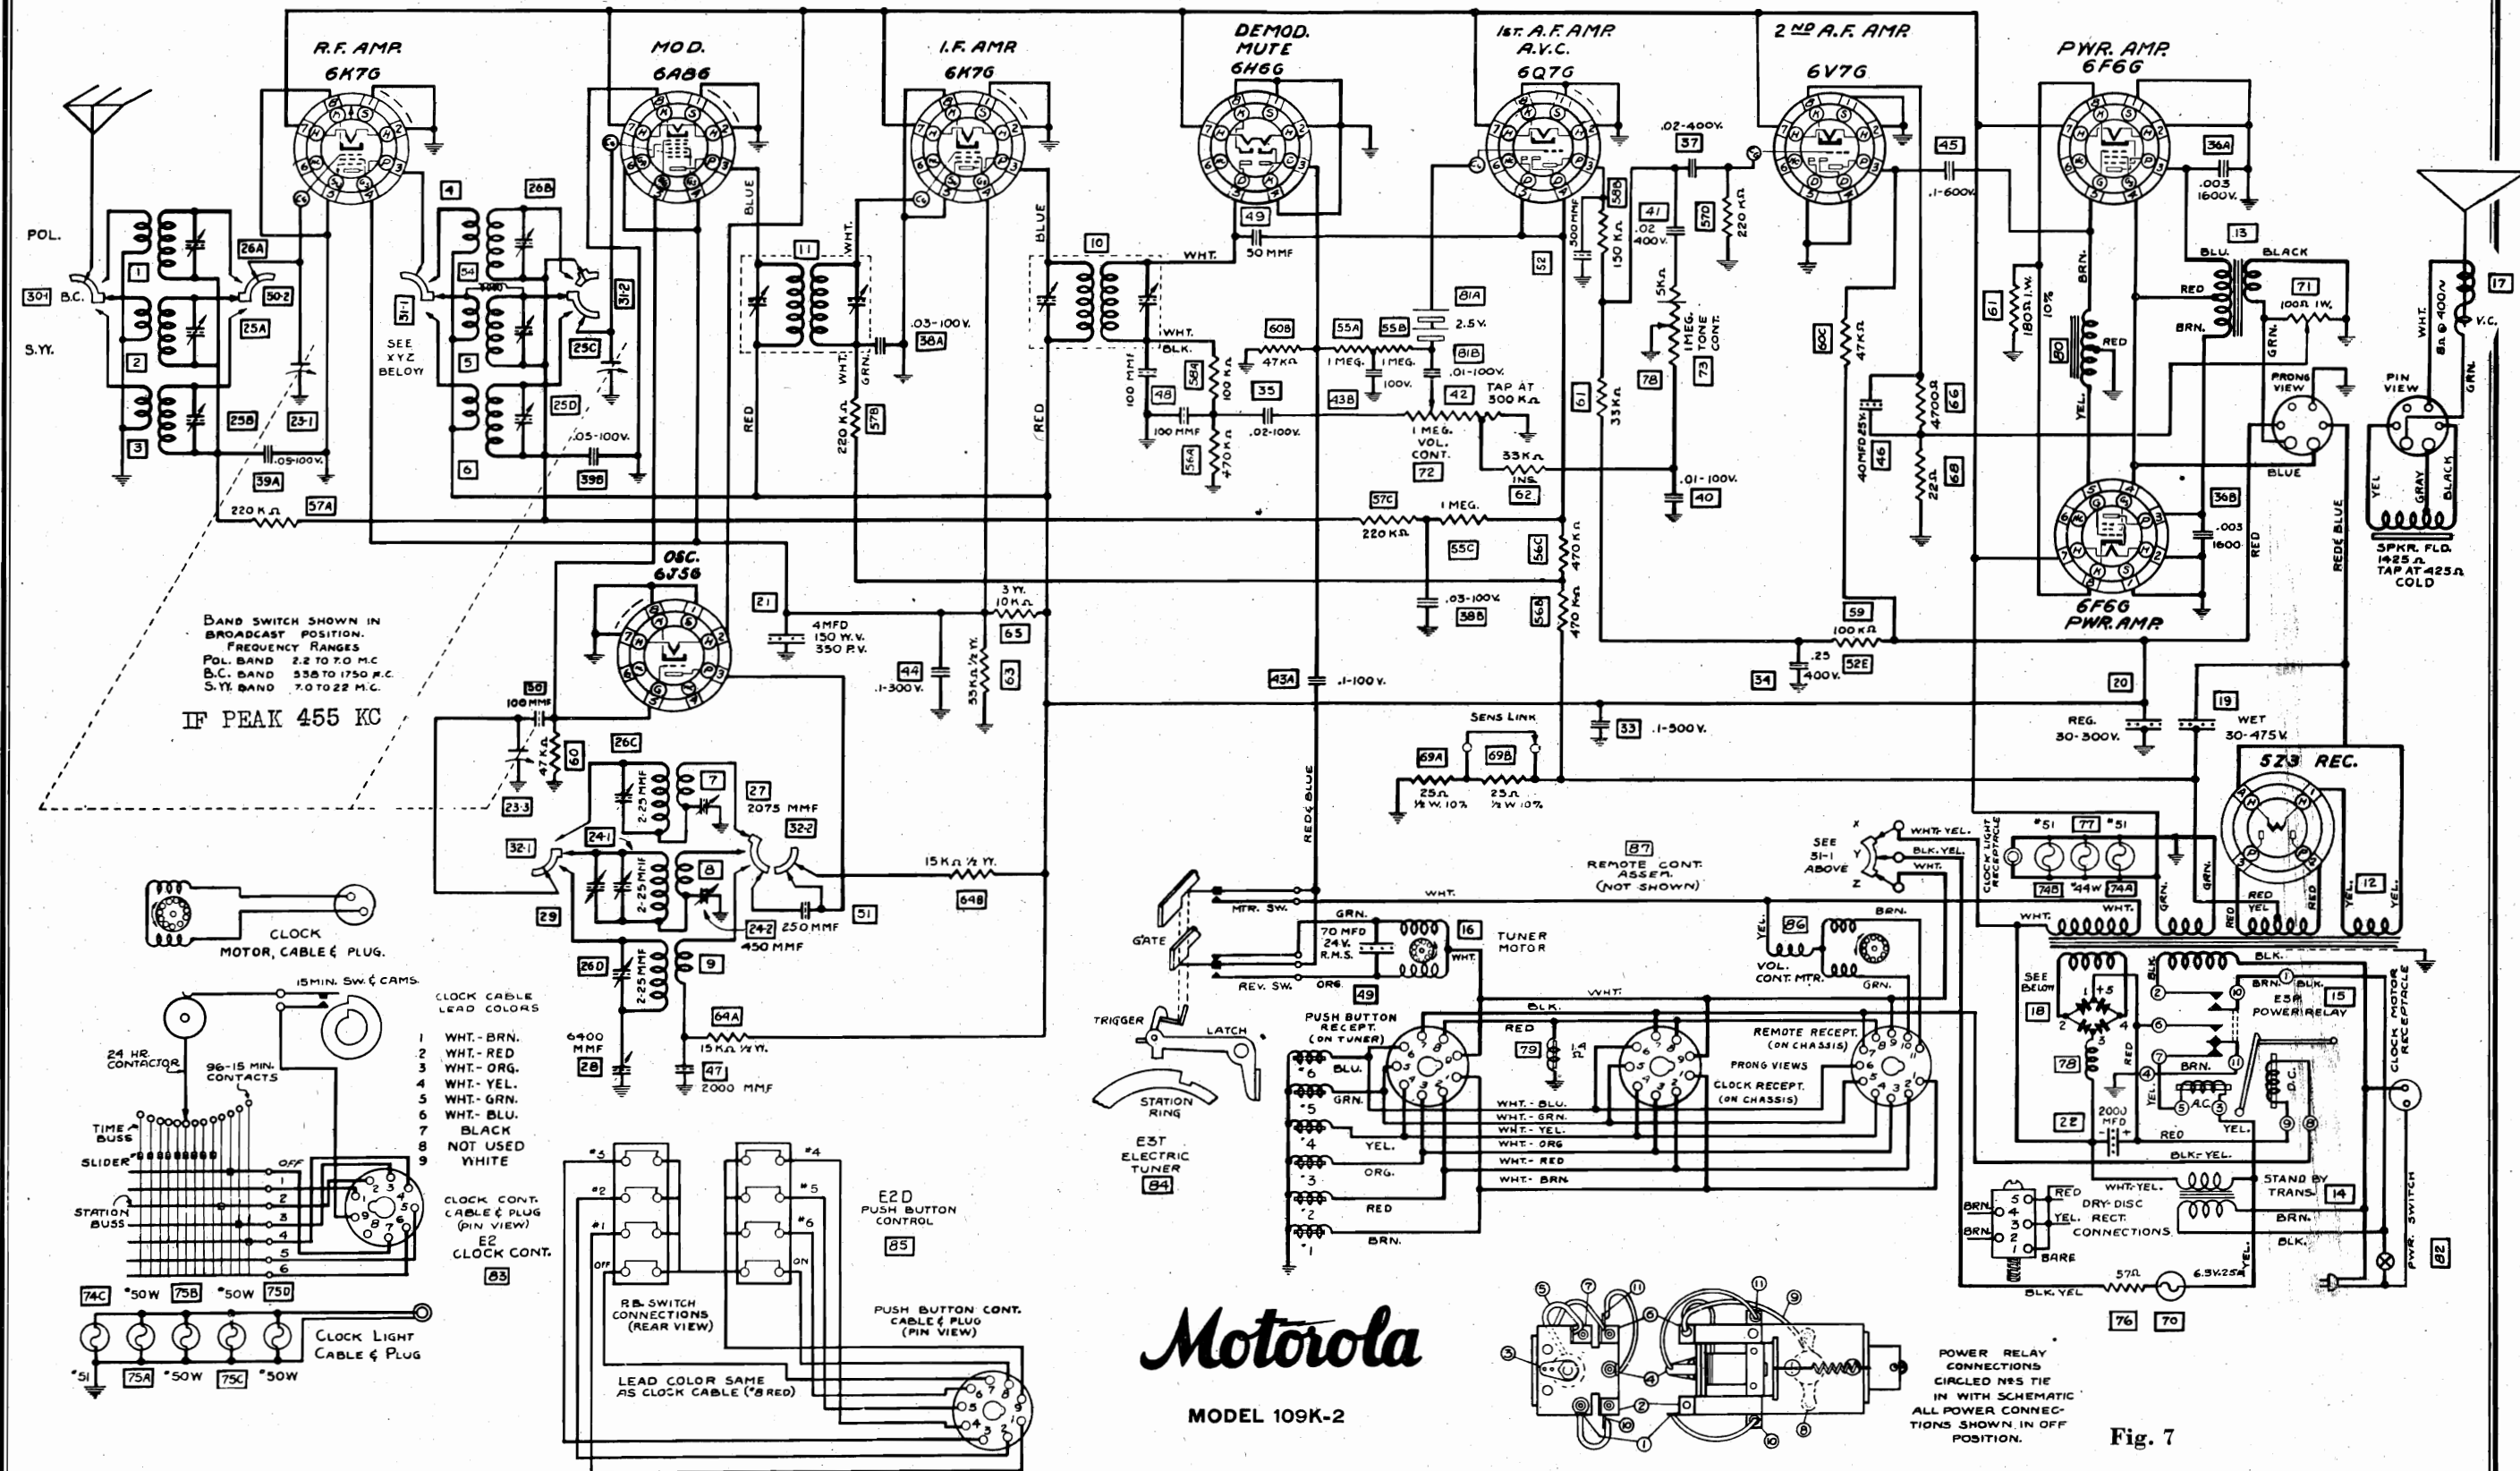

Motorola
MODEL 109K-2

Fig. 7

MODEL 89K3
 Alignment, Trimmers, Voltage
 Sensitivity, Switch Data
MODEL 109K2, Type 2
 Schematic
 Switch
 Data

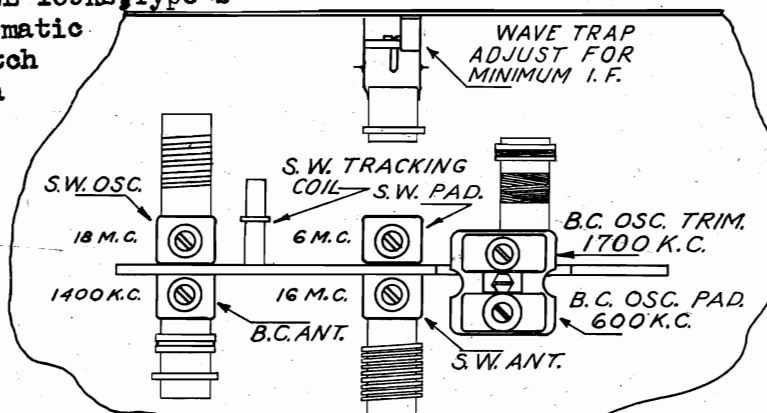


Fig. 9

89K3 TRIMMERS

SENSITIVITY DATA—MODEL 89K3

Microvolt Input *	Generator Set at	Generator Connected to	Dummy Antenna Capacity	Leak Resistance	Output Meter **
2800	455 K.C.	6D6 Grid	.1 MF	.5 Meg.	.65 Volts
20	455 K.C.	6A7 Grid	.1 MF	.5 Meg.	.65 Volts
25	600 K.C.	6A7 Grid	.1 MF	.5 Meg.	.65 Volts
5	600 K.C.	Ant. Lead	.0002 MF	None	.65 Volts

*For .05 Watts output. **Output meter connected across voice coil.

SOCKET VOLTAGES—MODEL 89K3

Numerals refer to socket terminals as indicated on circuit diagram.

TUBE	POSITION	1	2	3	4	5	6	7
6A7	Modulator	6 V.	220	80	80	0	0	0
6D6	I.F. Amp.	6 V.	220	80	0	0	0	0
75	Diode Det. Avc-AF	6 V.	125	0	-5	0	0	0
75	Phase Inv.	6 V.	125	0	0	0	0	0
76	Oscillator	6 V.	155	0	0	0	0	0
42	Pwr. Audio Amp.	6 V.	250	220	0	13.	0	0
42	Pwr. Audio Amp.	0 V.	250	220	0	13.	0	6
80	Rectifier	340	AC	AC	DC			

MODELS 89K3 AND 109K2

MOTOR AND REVERSING SWITCH ADJUSTMENTS

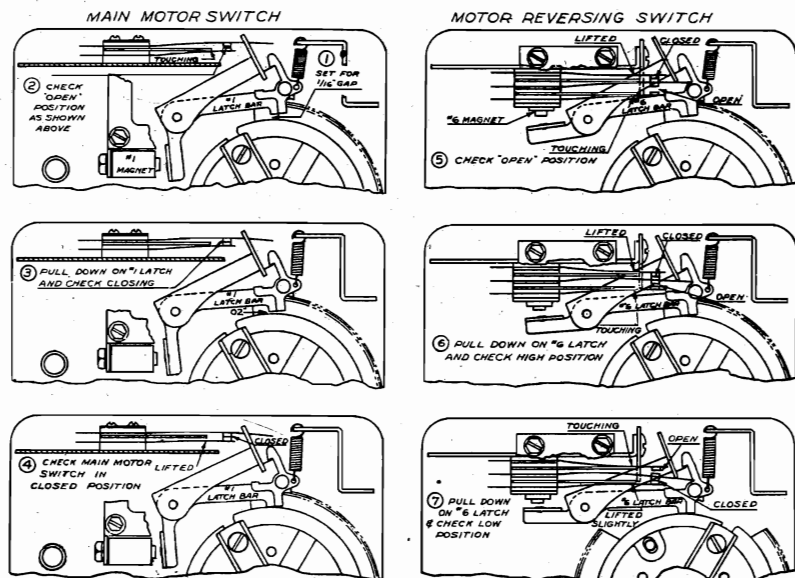



Fig. 1

FOR CLOCK, REMOTE CONTROL, AUTOMATIC ELECTRIC TUNER, MOTOR AND REVERSING SWITCH ADJUSTMENTS AND NOTES SEE MOTOROLA PAGES 9-33 AND 9-34 IN VOLUME 1X

GALVIN MFG. CORP.

ALIGNMENT PROCEDURE—MODEL 89K3

1. Connect signal generator to control grid of Mod. tube (6A7) through a .05 MF. condenser and to chassis. Do not remove grid cap. Also connect output meter across speaker voice coil. Turn band switch to "Broadcast" position. Turn condenser gang completely out of mesh.
2. Set signal generator at 455 K.C. and carefully adjust the four I.F. trimmers (located in top of I.F. coil cans) to point showing highest reading on output meter.
3. Leave band switch in "Broadcast" position. Connect signal generator to antenna and ground terminals, using a .0002 MF condenser in antenna lead.
4. Set signal generator at 455 K.C. and adjust wave trap trimmer for minimum deflection of output meter.
5. Set signal generator and receiver dial both at 1700 K.C. Adjust BC OSC. trimmer until 1700 K.C. signal is heard.
6. Set signal generator at 1400 K.C. and turn condenser gang to the signal at 1400 K.C. Adjust BC ANT. trimmer to point showing highest reading on output meter.
7. Set signal generator at 600 K.C. and rock pointer at 600 K.C. position on dial scale, while adjusting BC padder, until combination is found which gives highest output reading. (NOTE: If there is noise level at 600 K.C., padder can be adjusted to maximum noise without rocking gang and without use of signal generator. Use short wire for pick-up if necessary.)
8. Turn band switch to "Short Wave" position. Replace .0002 MF condenser in signal generator lead with a 400 ohm carbon resistor.
9. Set signal generator and receiver dial both at 18.0 MC. Adjust S.W. OSC. trimmer until 18.0 MC signal is heard.
10. Set signal generator at 16.0 MC and turn condenser gang to signal at 16.0 MC. Adjust S.W. ANT. trimmer to point giving greatest output reading. (Use non-metallic screw driver.)
11. Set signal generator at 6.0 MC and rock pointer at 6.0 MC position on dial scale, while adjusting S.W. padder, until combination is found which gives highest output reading. (NOTE: May also be adjusted to maximum noise.)

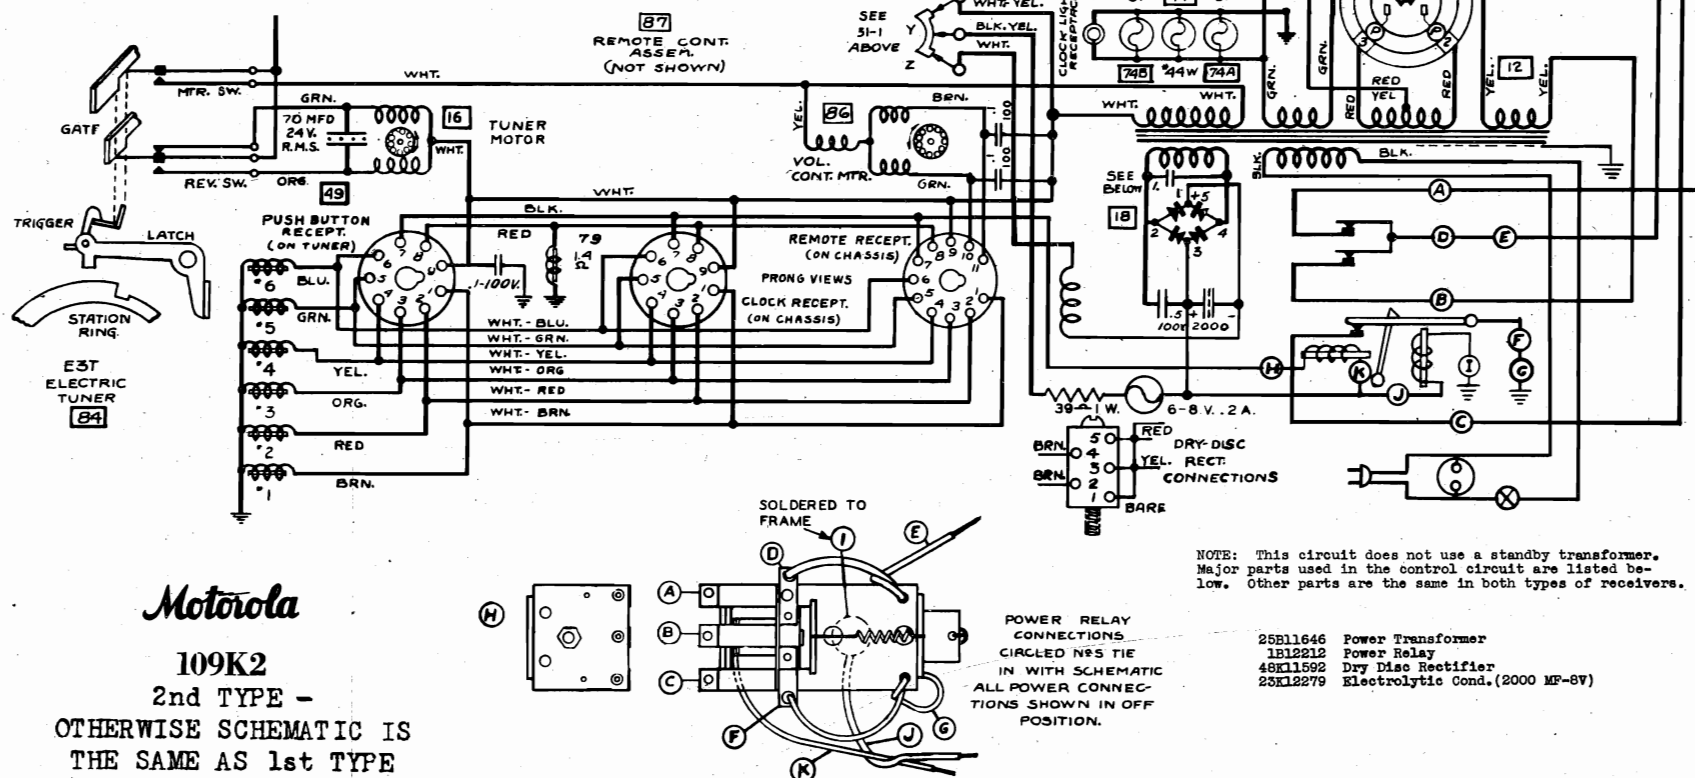


Motorola

109K2
 2nd TYPE -
 OTHERWISE SCHEMATIC IS
 THE SAME AS 1st TYPE

- 25B11646 Power Transformer
- 1B12212 Power Relay
- 48K11592 Dry Disc Rectifier
- 25K12279 Electrolytic Cond. (2000 MF-8V)

GALVIN MFG. CORP.

MODEL 300
Schematic, Voltage
Socket, Trimmers

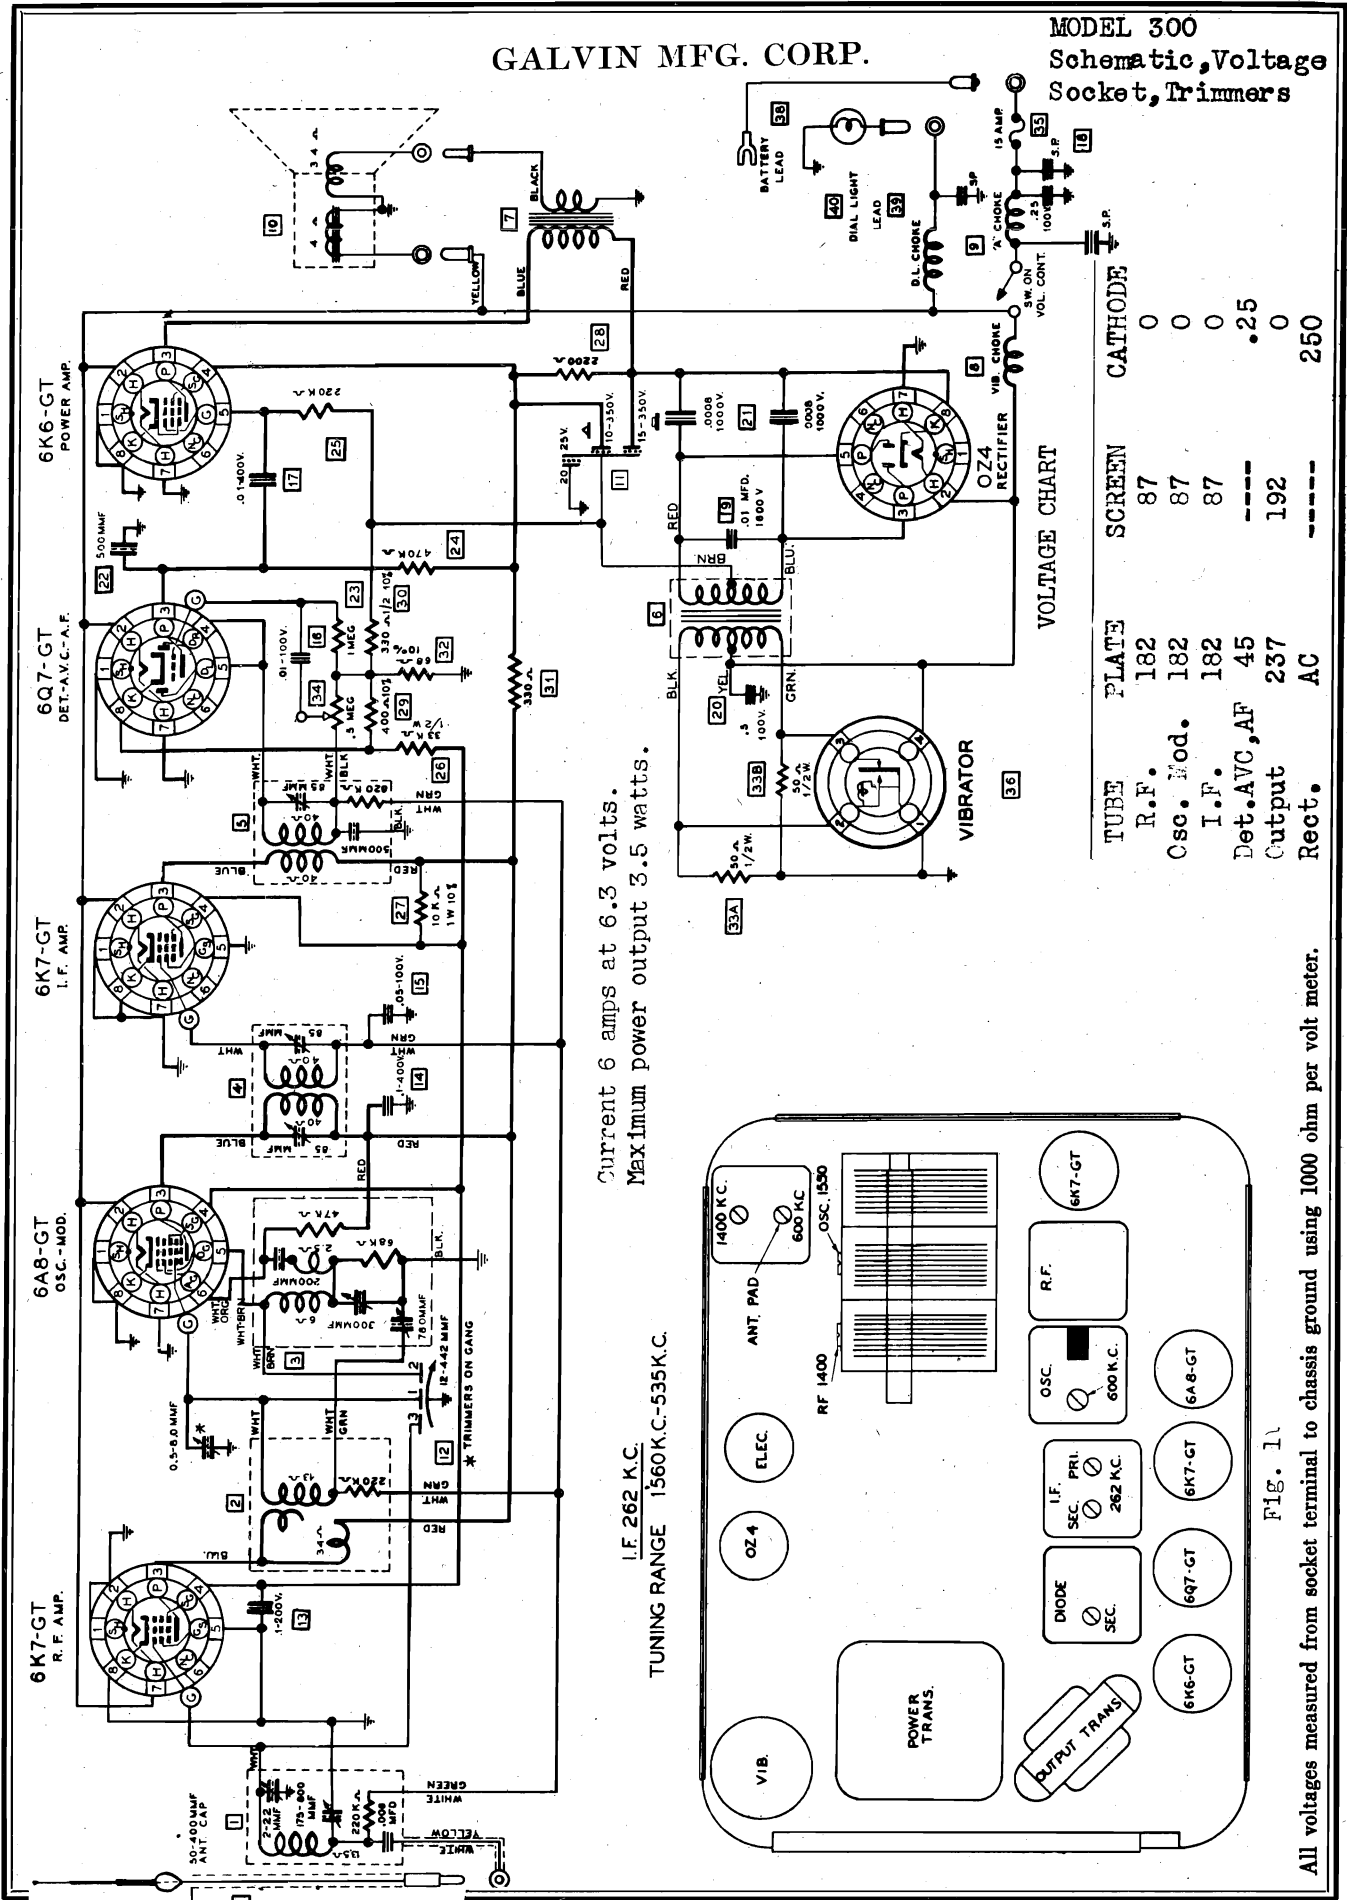

Current 6 amps at 6.3 volts.
Maximum power output 3.5 watts.

I.F. 262 K.C.
TUNING RANGE 1560K.C.-535K.C.

TUBE	PLATE	SCREEN	CATHODE
R.F.	182	87	0
Osc. Mod.	182	87	0
I.F.	182	87	0
Det. A.V.C. AF	45	---	.25
Output	237	192	0
Rect.	AC	---	250


VOLTAGE CHART

FIG. 1

All voltages measured from socket terminal to chassis ground using 1000 ohm per volt meter.


MODEL 350
Schematic, Socket
Trimmers, Voltage

GALVIN MFG. CORP.

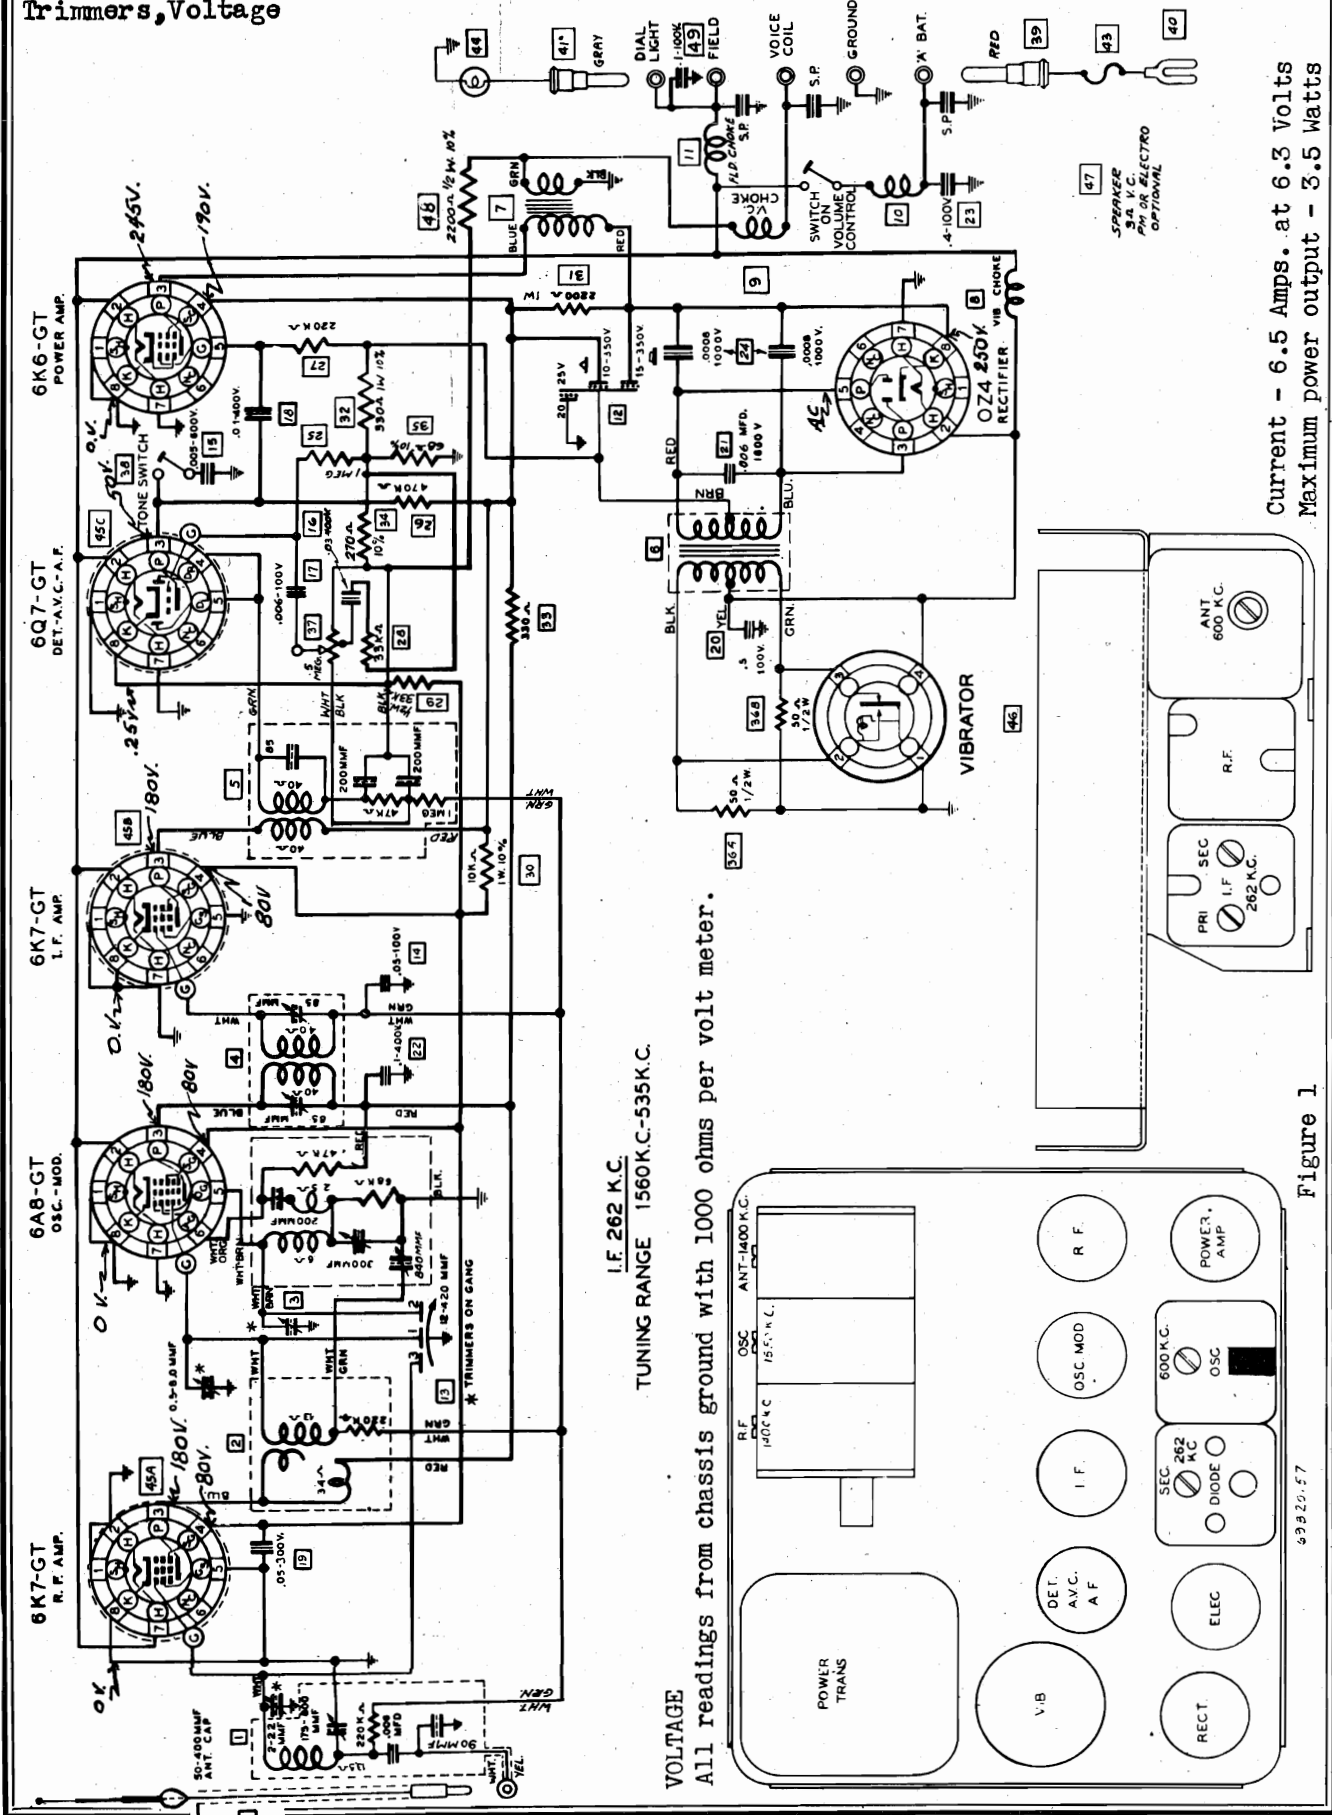

I.F. 262 K.C.
TUNING RANGE 1560 K.C.-535 K.C.

VOLTAGE
All readings from chassis ground with 1000 ohms per volt meter.

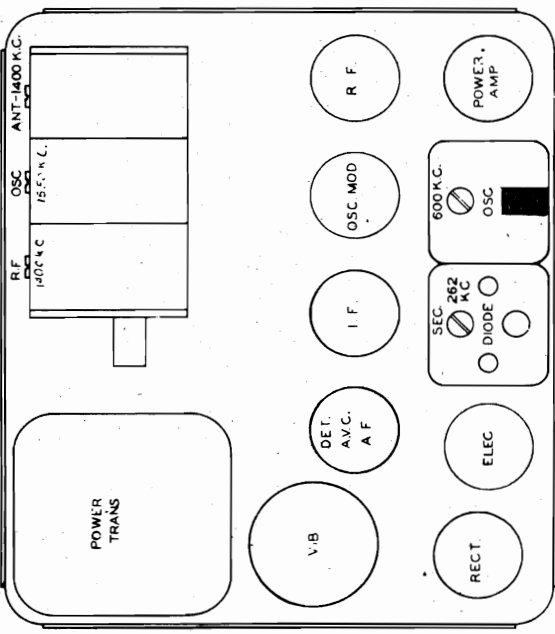

Current - 6.5 Amps. at 6.3 Volts
Maximum power output - 3.5 Watts

Figure 1

939 20-57

GALVIN MFG. CORP.

MODEL 300
MODEL 350
Alignment, Sensitivity

Model 300
ALIGNMENT PROCEDURE

Place the chassis on the service bench with the speaker and battery connected to it. Turn the volume control to maximum position and leave it there throughout the alignment. Turn the signal generator to the alignment point and adjust the trimmer in the Osc. coil can that is covered with Scotch Tape. The original adjustment, made in the factory should not be tampered with. (Fig. 1 below, shows all trimmer locations.)

I. F. ALIGNMENT

1. Connect the signal generator to the control grid of the Osc.-Mod. tube (6AG7) through a .1 MF condenser, having first removed the grid cap from the top of the tube. Connect a 500,000 ohm leak resistor from the grid of the tube to the grid cap just removed from the tube. Turn the condenser gang completely out of mesh. Connect an output meter across speaker voice coil.
2. Set the signal generator at 262 K.C. and carefully adjust the single trimmer in the Diode coil can to the point showing the highest reading on the output meter.
3. Adjust the two trimmers in the I.F. coil can to the point showing the highest output reading.
4. Repeat the I.F. and Diode adjustment several times for maximum accuracy.

SETTING THE RANGE

1. Connect the signal generator to the control grid of the R.F. tube (6K7GT) using

SENSITIVITY AND STAGE GAIN MEASUREMENTS

All stage gain measurements must be made with the volume control set for full volume. The shielded lead from the signal generator is connected to the grid terminal of the tube through a .1 MF condenser, with a 500M ohm resistor connected as a leak resistance between the grid of the tube and the grid lead which has been removed.

When measuring over-all sensitivity at the antenna terminal, use a special dummy part No. 1X18018, in place of the .1 MF. It must be remembered that the figures in the table are average and allowance must be made for variations between two sets of the same general type, due to difference of tube characteristics, etc.

AVERAGE MICROVOLT INPUT *	GENERATOR SET AT	GENERATOR FEEDER CONNECTED TO	DUMMY ANTENNA CAPACITY	LEAK RESISTANCE	OUTPUT METER READINGS **
38,000	262 K.C.	I.F. Grid	.1	.5 Meg	1.76
1,200	262 K.C.	Mod. Grid	.1	.5 Meg	1.76
1,200	600 K.C.	Mod. Grid	.1	.5 Meg	1.76
60	600 K.C.	R.F. Grid	.1	.5 Meg	1.76
11	600 K.C.	Ant. Lead	***	None	1.76

* For one watt output.

** Meter connected across voice coil.

*** Use special dummy part No. 1X18018.

NOTE: If set is not used with a Motorola Booster antenna, substitute a 40 MF condenser for the Special Dummy.

Model 350

Place the chassis on the service bench with the speaker and battery connected to it. Turn the volume control to maximum position and leave it there throughout the alignment, reducing the signal generator output if necessary. NOTE: Do not adjust the trimmer in the Osc. coil can that is covered with Scotch Tape. The original adjustment, made in the factory should not be tampered with. (Fig. 1 below, shows all trimmer locations.)

I. F. ALIGNMENT

1. Connect the signal generator to the control grid of the Osc.-Mod. tube (6AG7) through a .1 MF condenser, having first removed the grid cap from the top of the tube. Connect a 500,000 ohm leak resistor from the grid of the tube to the grid cap just removed from the tube. Turn the condenser gang completely out of mesh. Connect an output meter across speaker voice coil.
2. Set the signal generator at 262 K.C. and carefully adjust the single trimmer in the Diode coil can to the point showing the highest reading on the output meter.
3. Adjust the two trimmers in the I.F. coil can to the point showing the highest output reading.
4. Repeat the I.F. and Diode adjustment several times for maximum accuracy.

SETTING THE RANGE

1. Connect the signal generator to the control grid of the R.F. tube (6K7GT) using the same Motorola Booster Antenna, a special dummy antenna Motorola part No. 1X18018 must be used in series with the antenna receptacle. Change the signal generator connection to the antenna lead, using the special .1 MF condenser.
2. Set the signal generator at 1550 K.C. and turn the condenser gang completely out of mesh and adjust the 1550 K.C. oscillator trimmer to the point showing the highest output reading.
3. Set the signal generator at 555 K.C. Turn the condenser gang completely out of mesh and adjust the 600 K.C. oscillator trimmer for the highest output reading.
4. Repeat the I.F. and Diode adjustment several times for maximum accuracy.

R.F. AND ANTENNA ALIGNMENT

NOTE: If the radio is to be operated on a

SENSITIVITY AND STAGE GAIN MEASUREMENTS

All stage gain measurements must be made with the volume control set for full volume. The shielded lead from the signal generator is connected to the grid terminal of the tube through a .1 MF condenser, with a 500M ohm resistor connected as a leak resistance between the grid of the tube and the grid lead which has been removed.

When measuring over-all sensitivity at the antenna terminal, use a special dummy part No. 1X18018 in place of the .1 MF. It must be remembered that the figures in the table are average and allowance must be made for variations between two sets of the same general type, due to difference of tube characteristics, etc.

AVERAGE MICROVOLT INPUT *	GENERATOR SET AT	GENERATOR FEEDER CONNECTED TO	DUMMY ANTENNA CAPACITY	LEAK RESISTANCE	OUTPUT METER READINGS **
26,000	455 K.C.	I.F. Grid	.1 MF	.5 Meg	1.76 Volts
535	455 K.C.	Mod. Grid	.1 MF	.5 Meg	1.76 Volts
615	600 K.C.	Mod. Grid	.1 MF	.5 Meg	1.76 Volts
30	600 K.C.	R.F. Grid	.1 MF	.5 Meg	1.76 Volts
7	600 K.C.	Ant. Lead	40 MF ***	None	1.76 Volts

* For one watt output

** Meter connected across voice coil

1.76 Volts equals 1 watt output for 3 ohm voice coil

*** Use special dummy part No. 1X18018, or M434B booster coil Part No. 17906 in series with 25 MF cond. if a Motorola Booster antenna is used.

GALVIN MFG. CORP.

MODEL 450
Schematic, Voltage
Socket, Trimmers

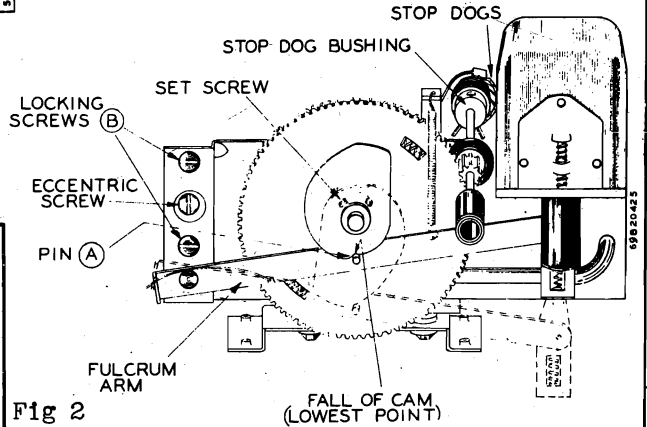
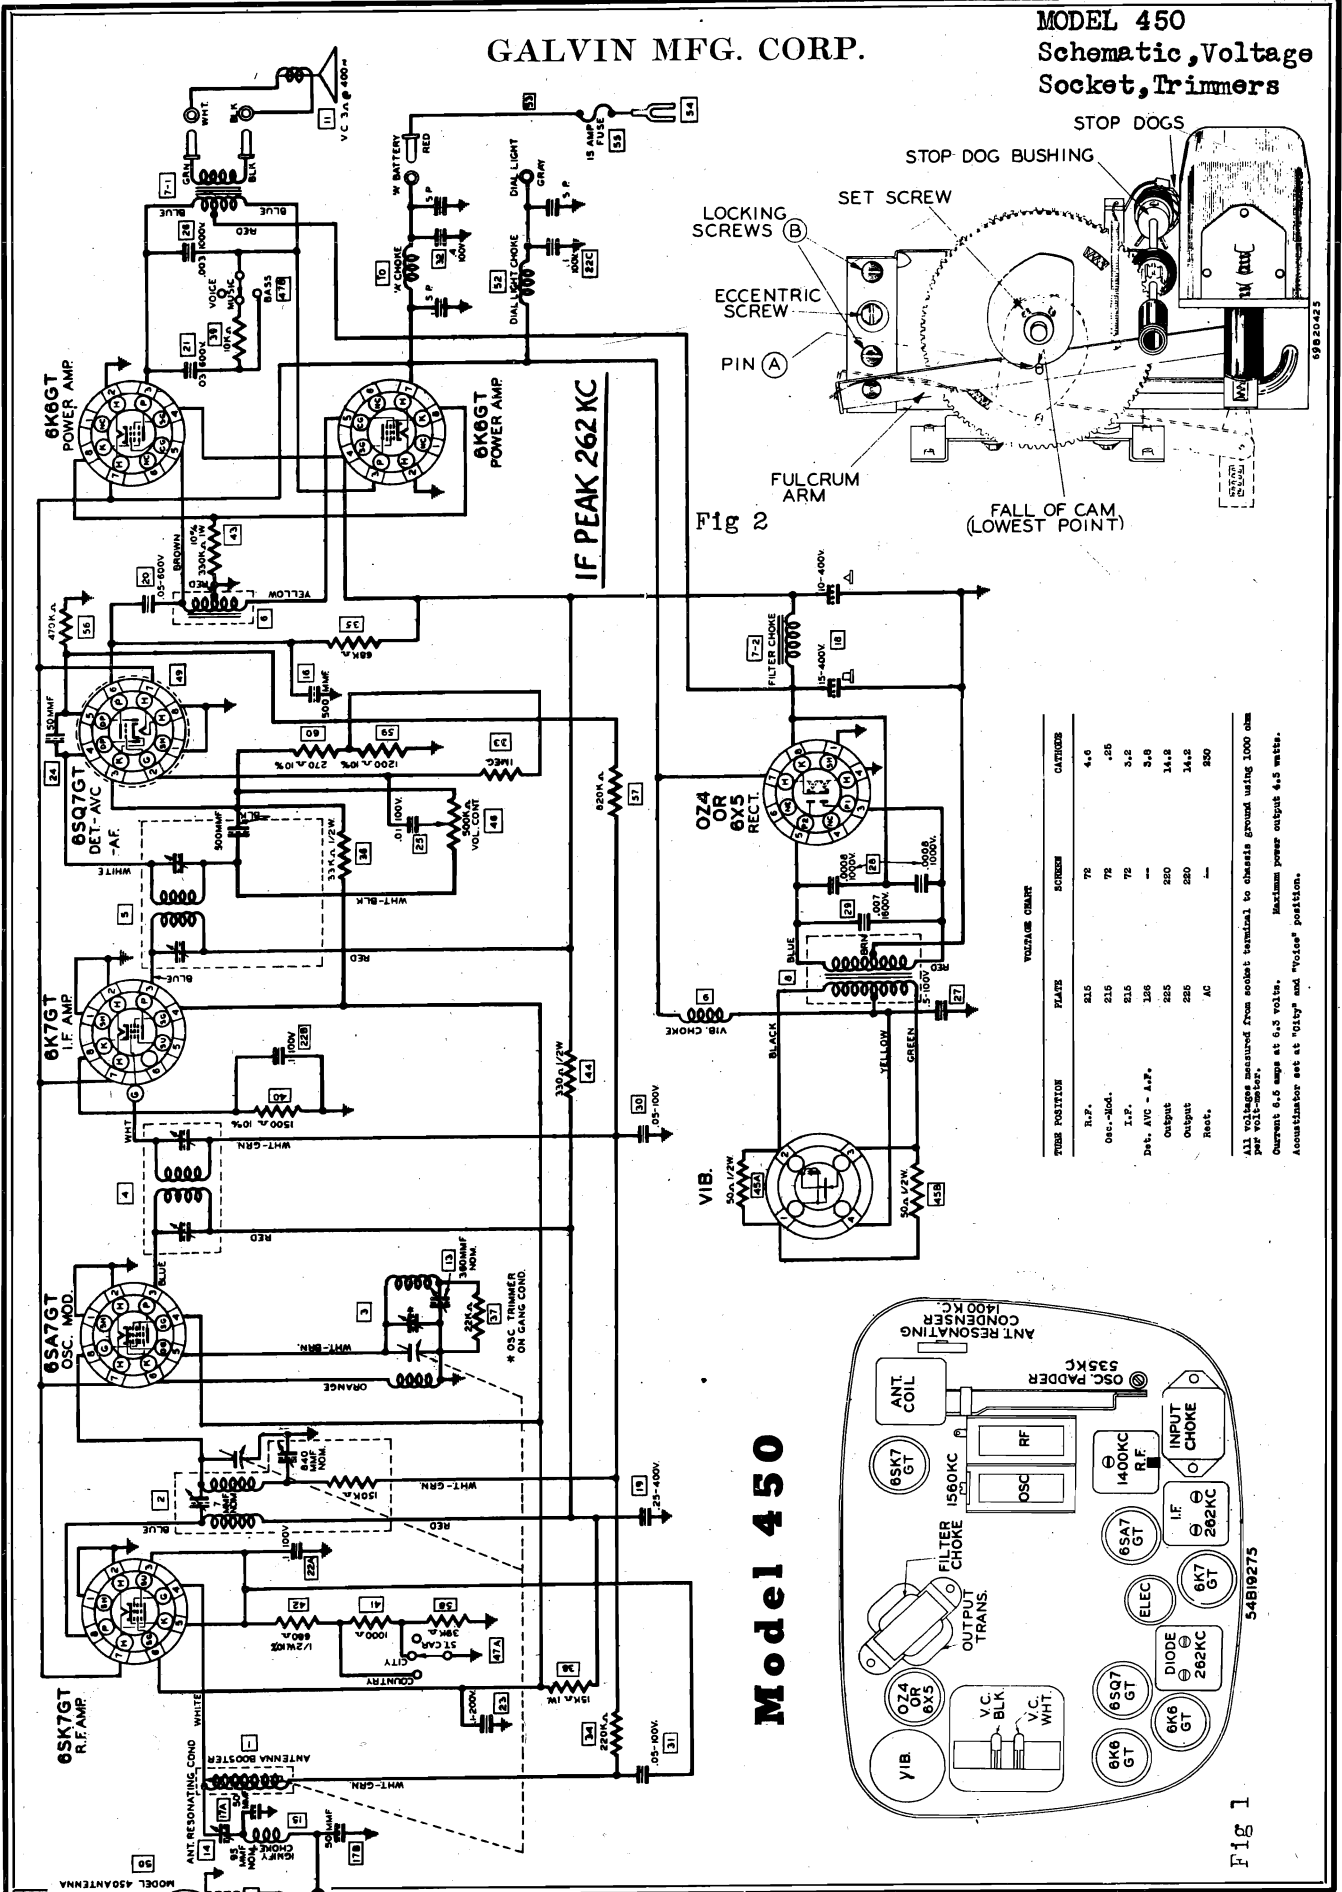


Fig 2

TUBE POSITION	PLATE	SCREEN	CATHODE
R.F.	215	72	4, 6
Osc.-Mod.	215	72	5, 6
I.F.	215	72	5, 6
Det. AVC - A.F.	225	225	14, 8
Output	225	225	14, 8
Rect.	AC	-	8, 6

All voltages measured from socket terminal to chassis ground using 1000 ohm per volt-meter.
Currents 0.5 mps at "city" and "voice" position.
Annotator set at "city" and "voice" position.

Model 450

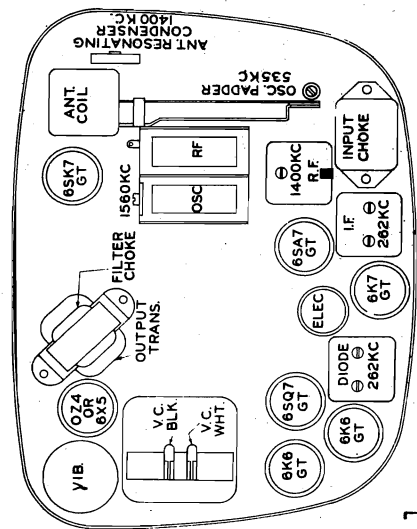


Fig 1

GAMBLE-SKOGMO INC.


MODEL 6B Power Converter
MODEL 540, Late
Schematics

K.R.C. 8-18-36

SPEAKER. This model is equipped with a balanced armature magnetic speaker. Should the armature "strike", causing a rattle or distortion, proceed as follows:

QUAM TYPES (used on early production). Bend bracket holding armature snubber cup up or down until armature centers. This bracket is located on bottom of magnet housing.

WRIGHT DECOSTER TYPE. To center armature: remove small aluminum plate on bottom of magnet housing, loosen one of the small set screws and tighten the other until the armature is floating in the center of poles.

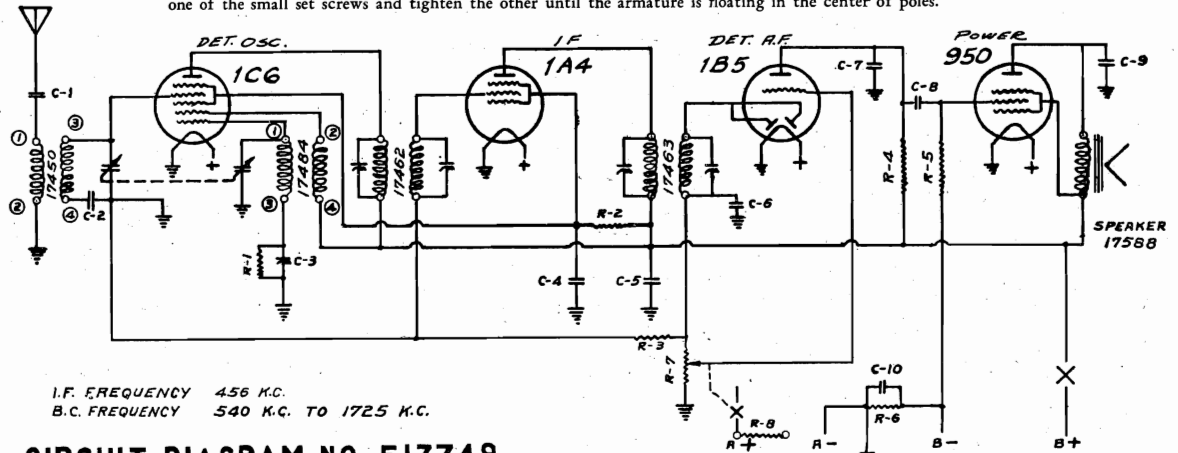


I.F. FREQUENCY 456 K.C.
B.C. FREQUENCY 540 K.C. TO 1725 K.C.


CIRCUIT DIAGRAM NO. E17749

MODEL 540 LATE

- | | |
|-----------------------------|--|
| C-1 .01 200V. | R-1 50000 OHMS |
| C-2 .05 200V. | R-2 15 000 OHMS |
| C-3 500 MMF. PAD | R-3 2000 000 OHMS |
| C-4 .05 200V. | R-4 250 000 OHMS |
| C-5 .25 200V. | R-5 1000000 OHMS |
| C-6 .0005 600V. | R-6 400 OHMS |
| C-7 .0005 600V. | R-7 500 000 OHMS VOL. CONT. #17589 |
| C-8 .01 200V. | R-8 2.5 V. WIRE WOUND USE WHEN SET IS USED |
| C-9 .002 600V. | |
| C-10 10 x 25V. ELECTROLYTIC | |

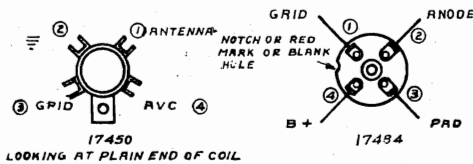

LOOKING AT PLAIN END OF COIL

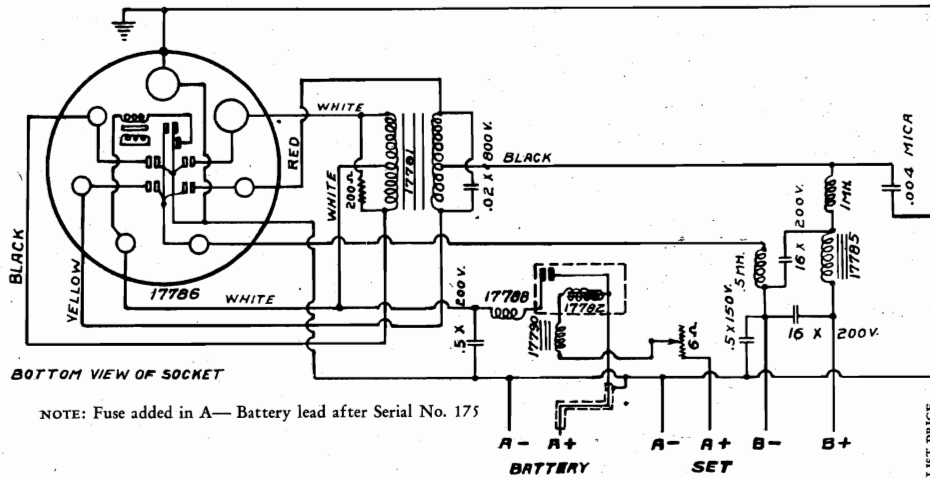

BOTTOM VIEW OF SOCKET

NOTE: Fuse added in A— Battery lead after Serial No. 175

CIRCUIT DIAGRAM 6 VOLT POWER UNIT

Diagnosis of Troubles

6-B POWER CONVERTER

EFFECT	CAUSE
Does not operate	Storage Battery run-down. Battery connections loose. Relay not closing—heavy red or black battery wires may be twisted inside unit and holding relay armature open. "Blown" fuse—check all wiring before inserting new fuse. A defective vibrator will also "blow" the fuse. A good vibrator will have a smooth "hum" when holding your ear close to the unit; a worn vibrator will "sputter".
R. F. "Hash" noise in set, usually a frying-buzzing sound	A good antenna and ground must be used on the set. Power unit should be located away from the set by the length of the cable. On sets having short wave bands, noise may always be noticed on some parts of the band but is usually not objectionable.
High battery drain	The total drain on the six volt battery should be approximately one ampere plus the normal "A" drain of the set. Example: with model 650, 1 amp. plus .5 amp. total 1.5 amps. Excessive drain may be caused by defective transformer, vibrator, or filter condenser in the power unit or defective switch or by pass condenser in the set.

PART NO.	DESCRIPTION	LIST PRICE
17785	Assb.—"A" Choke	2.50
17825	Assb.—Cable & Markers	1.50
17828	Assb.—Wire Battery "A" P's	.70
17829	Assb.—Wire Battery "A" Minus	.50
17790	Choke—Filter "B"	.90
17788	Choke—R. F. "A"	.30
17794	Choke—5 M. H.	.30
17795	Choke—1 M. H.	.30
17806	Clip—Battery "Plus"	.18
17807	Clip—Battery "Minus"	.18
4925	Clip—Fuse	.04
17808	Condenser—Electrolytic 16 x 200 R. H.	.90
17809	Condenser—Electrolytic 16 x 200 L. H.	3.50
17793	Condenser—Mica .004	.30
17811	Condenser—Tubular .02 x 800	.20
17813	Condenser—Tubular (Braid) .5 x 150	.40
17303	Condenser—Tubular .5 x 200	.30
17832	Fuse—Auto 5-Amp. Low Resistance	.06
17796	Knob—Control	.20
17782	Relay	1.60
17787	Resistor—Carbon 1 Watt 200 Ohm	.20
17757	Rheostat	.60
17789	Socket—Plain 7-Prong	.20
17781	Transformer	2.50
17786	Vibrator—Unit	3.50

MODEL 577D

Serial 214845 up
Schematic, Voltage


GAMBLE-SKOGMO INC.

Trimmers, Socket 6SA7

6SK7

6SQ7

6K6G

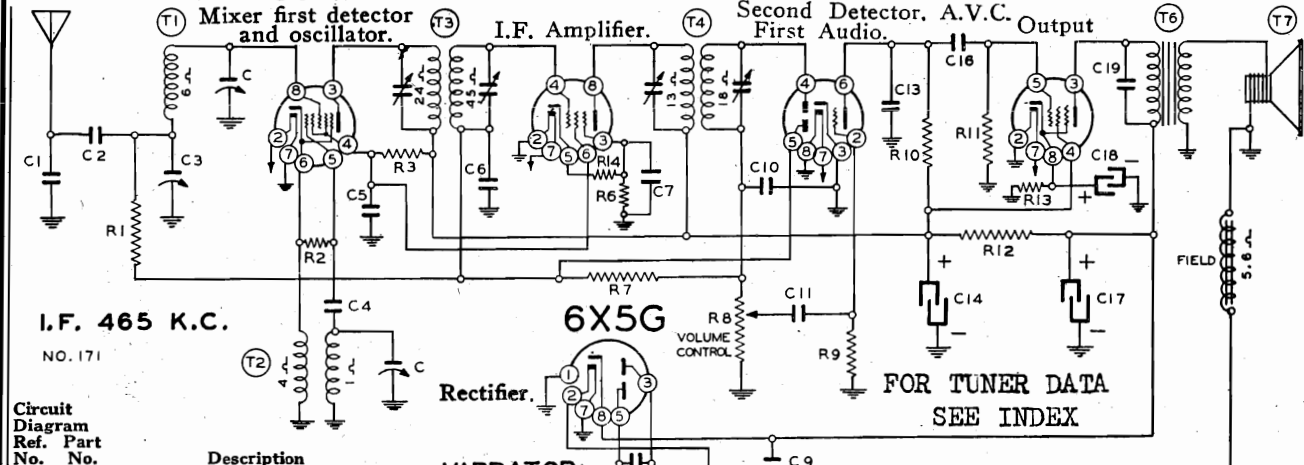

I.F. 465 K.C.
NO. 171

Circuit Diagram Ref. Part No. No.

RESISTORS

R1	13011	250M ohm—1/2 w.
R2	130236	30M ohm—1/2 w.
R3	130307	15M ohm—1 watt
R4	13060	100 ohm—1/2 w.
R5	13060	100 ohm—1/2 w.
R6	13070	500 ohm—1/2 w.
R7	1304	3 megohm—1/2 w.
R8	101110	1 megohm volume control
R9	130257	5 megohm—1/2 w.
R10	13011	250M ohm—1/2 w.
R11	1303	500M ohm—1/2 w.
R12	130199	1500 ohm—1 watt
R13	130308	750 ohm—1 watt
R14	130174	50 ohm—1/2 w.

CONDENSERS

C	10269	2 gang variable condenser
C1	1293	.00002 mica
C2	10055	.01 x 400 volts
C3	12434	Adj. Antenna Trimmer
C4	12921	.0002 mica
C5	100115	.05 x 400 v.
C6	1009	.05 x 200 v.
C7	10020	.1 x 200 v.
C8	10034	.005 x 1200 v.
C9	12912	.00025 mica
C10	1295	.0001 mica
C11	10025	.02 x 600 v.

C12	10031	.5 x 120 v.
C13	1292	.0005 mica
C14	119105	15 ufd. lytic x 350 w. v.
C15	10031	.5 x 120 v.
C16	10078	.01 x 200 v.
C17	119105	15 ufd. lytic x 350 w. v.
C18	119105	20 ufd. lytic x 25 w. v.
C19	10087	.01 x 600 v.


PARTS

T1	11195B	Antenna Coil
T2	110146	Oscillator Coil
T3	108139	Input I. F. Coil—465 kc.


T4	108121B	Output I. F. Coil—465 kc.
T5	104131	Power Transformer
T6	10567	Output Transformer
T7	114114-R	5" Dynamic Speaker (5.6 ohm field)
L1	10568	"A" Choke
L2	10566	"A" Choke
S1		Switch on volume control
P1	10797	Pilot light (T51) 6-8 volts
S.P.	11749	(2) Spark Plates

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII

BOTTOM VIEW OF CHASSIS

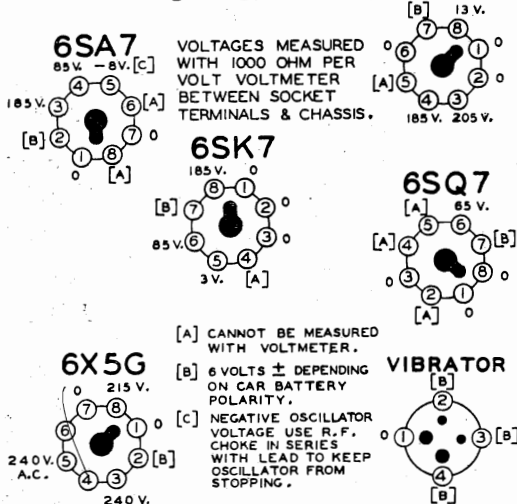

REAR OF CHASSIS

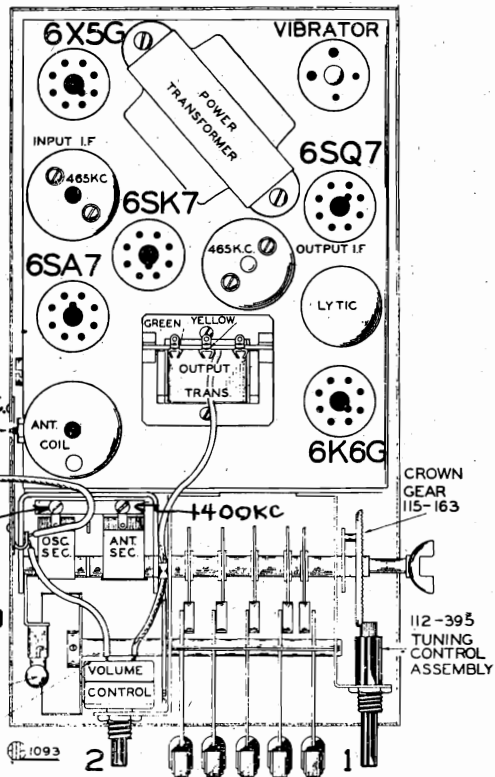

577 ISSUE D
January 1940


Serial No. 214845 Up

ADJUST ANTENNA TRIMMER

Tune in a weak signal at approximately 600 K.C. with volume control about three-fourths on. Adjust trimmer screw "X" until maximum output is obtained.

GAMBLE-SKOGMO INC.

MODEL 571, Series A
Serial 189300 up
Schematic, Voltage
Socket, Trimmers


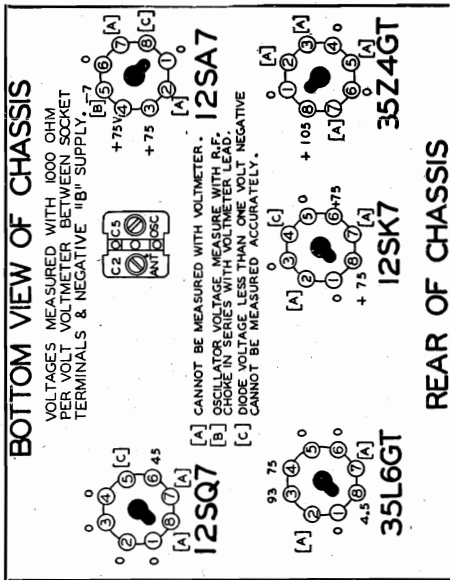


Power Consumption..... 35 Watts
Power Output..... 800 Milliwatts Undistorted, 1.2 Watts Maximum

- RESISTORS**
- C6 10013 .05 x 400 v.
 - C7 1295 .0001 Mica
 - C8 10025 .002 x 600 v.
 - C9 10091 .15 x 400 v.
 - C10 1292 .0005 Mica
 - C11 1291 .004 Mica
 - C12 11992 20 MEG. LYTC.
 - C13 11992 40 MEG. LYTC.
 - C14 10011 .01 x 400 v.
- C2 and C5 in one unit.
C12 and C13 in one unit.

PARTS

- T1 111136 Antenna Coil Complete
T2 10126 Oscillator Coil
T3 10126 Output I. F. Coil—465 Kc.
T4 108157E Output I. F. Coil—465 Kc.
T5 105107 Transformer
T6 114187 4" Speaker—PM
T7 104188 Electric Clock Complete
S1 On-Off Switch on Volume Control

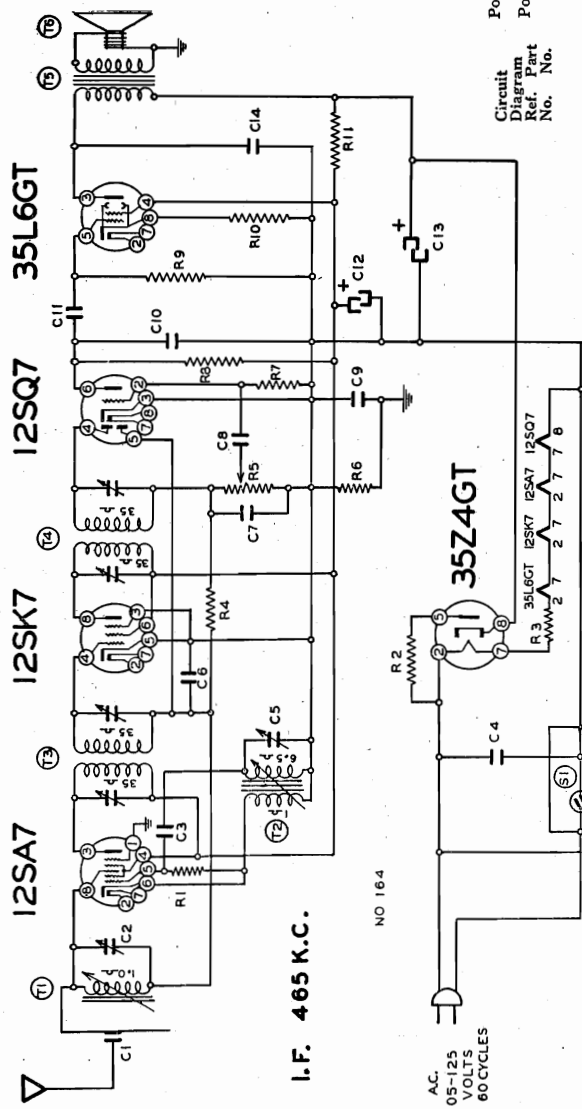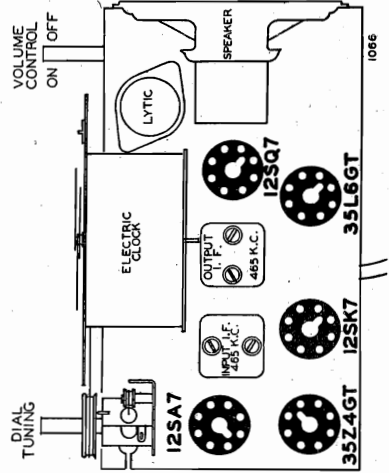

The type and function of each tube is as follows:

- 1—Type 12SA7 Mixer, First Detector-oscillator.
- 1—Type 12SK7 I. F. Amplifier.
- 1—Type 12SQ7 Second Detector, A.V.C. and First Audio.
- 1—Type 35L6GT Beam Output Amplifier.
- 1—Type 35Z4GT Rectifier.

SERVICE NOTES:


Voltages taken from different points of circuit to —B are measured with all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.

All voltages as indicated on the voltage chart are measured with 117 volt A.C. line.

Resistances of coil windings are indicated in ohms on the schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

Excessive hum, stuttering, low volume and a reduction in all D. C. voltages is usually caused by a shorted electrolytic condenser; open by-pass condensers frequently cause oscillation and distorted tone.

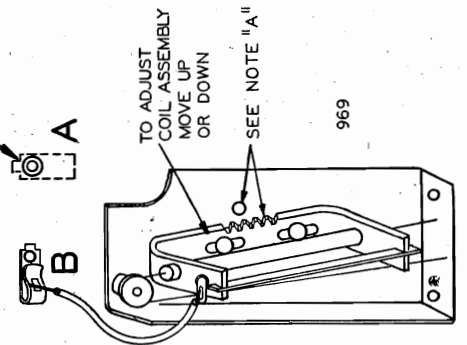

**MODEL 571, Series A
Alignment
MODEL 577D
Tuner Data**

GAMBLE-SKOGMO INC.

PROCEDURE FOR SETTING THE AUTOMATIC LEVERS

There are five levers on the dial by means of which five stations may be selected, (See "B" Fig. 2). Make a list of local stations you tune in regularly; any number up to and including five. Punch out from the set of station call letter tabs supplied, the call letters of the stations you have selected.

On the front of each automatic tuner lever an opening is provided for inserting the call letter tabs, (See "A" Fig. 2). Insert the call letter tabs in the rectangular openings of each of the automatic tuner levers. One of the small celluloid tabs supplied should be snapped into place over each of the station call letter tabs.

Press DOWN ALL THE WAY any one of the automatic tuner levers. Holding it down FIRMLY, tune in by means of the tuning knob (No. 1) the station you have assigned to this lever. Turn the tuning knob very slowly back and forth (while still holding lever in downward position) until the signal is clearest. The station will then be accurately tuned in. Release the lever.

MODEL 577D

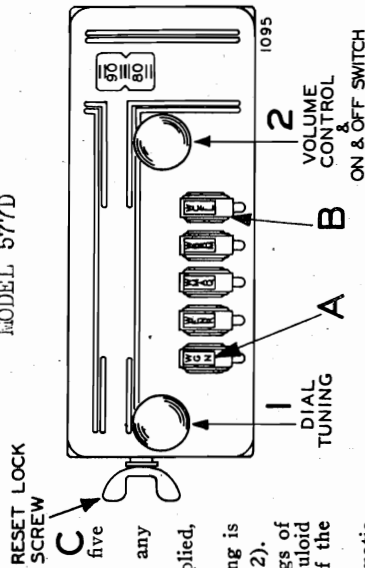


FIG. 2—FRONT VIEW

Press down another automatic tuner lever. Holding it down FIRMLY, carefully tune in the station assigned to this lever. Release this lever.

Follow this procedure until you have selected all of your favorite stations.

Now rotate the tuning knob (No. 1) to the right (clockwise) as far as it will turn, and tighten the special locking screw ("C") located on left side of tuner dial assembly (See Fig. 2).

It is VERY IMPORTANT that this locking screw is turned until it is ABSOLUTELY TIGHT.

This screw will lock in place all the stations you have selected on the automatic tuner levers. (Note: Locking screw "C" is loose when radio is shipped from factory).

If you should desire to change any station you selected to another, loosen the locking screw "C" one or two turns, select the new station as explained. Be sure to retighten the locking screw, otherwise the stations you have selected will not stay adjusted to the levers.

The automatic dial is now set up for quick tuning. Press down on the lever and your favorite station is selected.

MODEL 571

ALIGNMENT PROCEDURE

IMPORTANT: See Aligning Instructions on Page 4.

- Volume control—Maximum all adjustments.
- Connect -B of radio chassis to ground post of signal generator through .1 Mfd. Condenser.
- Connect dummy antenna value in series with generator output lead.
- Connect output meter across primary of output transformer.
- Allow chassis and signal generator to "heat up" for several minutes.

The following equipment is required for aligning:

- An all wave signal generator which will provide an accurately calibrated signal at the test frequencies as listed.
- Output indicating meter.
- Non-metallic screwdriver.
- Dummy antennas—1 mid. and 200 mmf.

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Iron Cores (Dial Setting)	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Connect to Terminal "B" (See Fig. 4)	Iron Cores All the way out	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Connect to Terminal "B" (See Fig. 4)	Iron Cores All the way out	Two trimmers on top (See Fig. 1)	Input I. F.	Adjust to maximum output
BROAD-CAST BAND	1720 Kc.	.1 MFD.	Connect to Terminal "B" (See Fig. 4)	Iron Cores All the way out	Trimmer (C5) (See bottom of Radio, Fig. 3)	Oscillator	Adjust to maximum output
	1720 Kc.	200 MMF.	Connect to Terminal "A" (See Fig. 4)	Iron Cores All the way out	Trimmer (C2) (See bottom of Radio, Fig. 3)	Antenna	Adjust to maximum output
	1400 Kc.	200 MMF.	Connect to Terminal "A" (See Fig. 4)	Turn Dial to 1400 Kc.	Adjust position of antenna coil up or down (See Fig. 4)	Antenna Coil Adjustment	Adjust to maximum output (See Note "A")
	1720 Kc.	200 MMF.	Connect to Terminal "A" (See Fig. 4)	Turn Dial to 1720 Kc.	Adjust trimmer (C2) (See Fig. 3)	Antenna	Check for tracking (See Note "B")

NOTE "A"—The antenna coil assembly is made so that it is movable up or down. When making the adjustment as given in the alignment procedure move the coil assembly very slowly. It can be moved by hand or by using one edge of the blade of a screwdriver in the hole and engaging the blade in the gear teeth of the coil form.

NOTE "B"—After the antenna coil has been tracked at 1400 Kc. it is necessary to check the antenna trimmer (C2) adjustment again at 1720 Kc. If no change in the alignment is required, the coil is in tracking. If the trimmer requires considerable change, it will be necessary to again adjust the position of the antenna coil at 1400 Kc. These two adjustments should be tried several times until no change of trimmer adjustment is required at 1720 Kc.

GAMBLE-SKOGMO INC.

MODEL 577C
Schematic, Voltage
Battery Notes

GENERATOR INTERFERENCE


Remove the generator cutout mounting screw and fasten the condenser (100-81) bracket on the generator cutout mounting lug. Replace the cutout mounting screw and tighten down securely.

Connect the condenser lead to the battery terminal of the cutout. The generator condenser is absolutely necessary as it is used to eliminate a high pitched whining noise which would otherwise be heard as the motor is accelerated

CONNECTIONS TO BATTERY

The battery cable, number 107-82, (red wire with fuse receptacle at one end and terminal lug at other end) must be connected to battery terminal of ammeter. At the same time connect ammeter capacitor, number 100-82, to battery terminal of ammeter, other end of condenser to any convenient grounded screw on back of instrument panel. Make certain that insulating sleeve is slipped over fuse when fuse is placed in receptacle, before connecting to short battery cable from receiver.

When connected properly, the discharge due to current drawn by the receiver should not indicate on the ammeter. This is important, since if improperly connected, as shown by the deflection of ammeter, additional motor interference may be encountered.

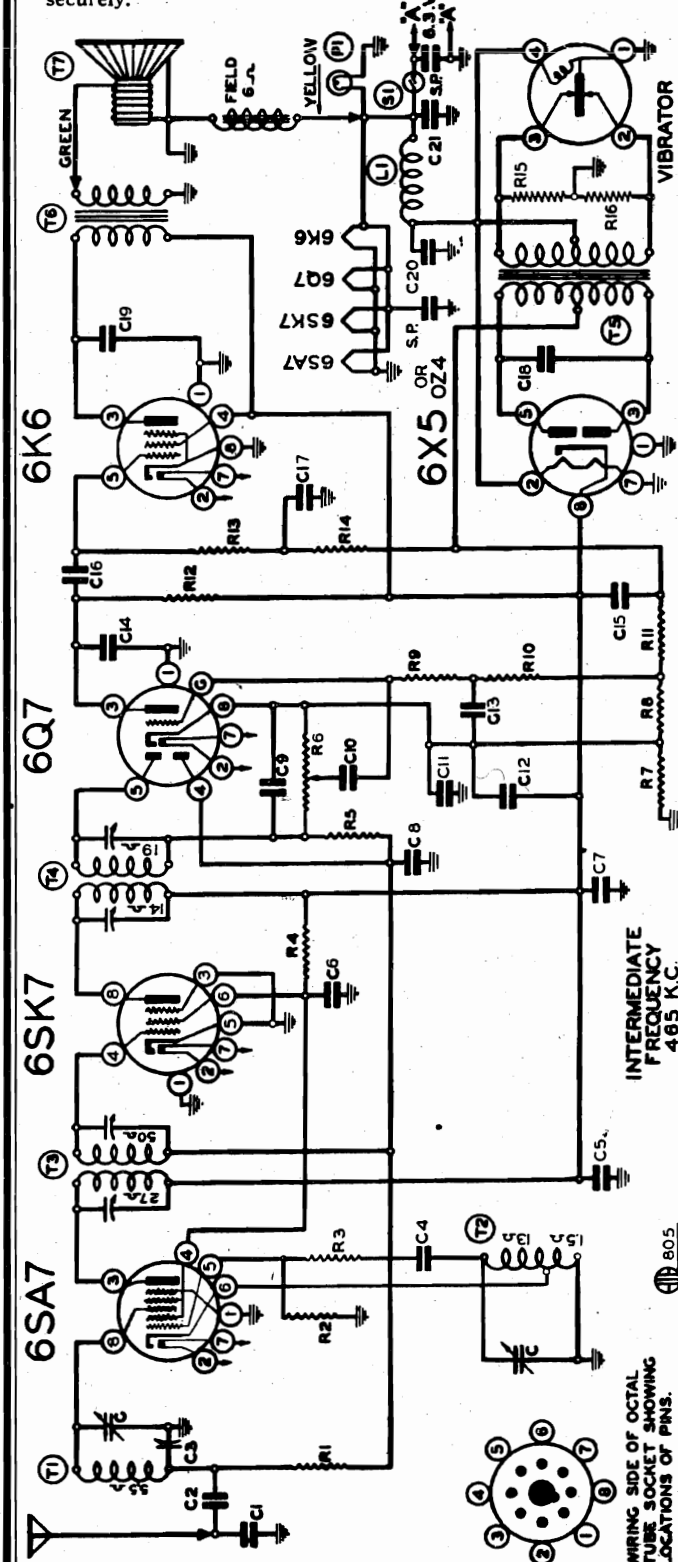

ADJUST ANTENNA TRIMMER

Tune in a weak signal at approximately 600 K.C. with volume control about three-fourths on. Adjust trimmer screw "X" until maximum output is obtained. (See Fig. 1, Adjustment "X" on right side of radio)

Code No.	Part No.	Description
C8	1009	.05 x 200 v. 25%
C9	1295	.0001 Mica 20%
C10	10078	.01 x 200 v. 25%
C11	10020	.1 x 200 v.
C12	11950	8 mid. lyric
C13	10078	.01 x 200 v.
C14	1292	.0005 Mica
C15	11950	8 mid. lyric
C16	10055	.01 x 400 v. 25%
C17	10019	.006 x 600 v.
C18	10034	.005 x 1200 v.
C19	10087	.01 x 600 v.
C20	10031	.5 x 120 v. + 50-10%
C21	10031	.5 x 120 v. + 50-10%
T1	11195B	Antenna coil complete
T2	110107	Oscillator coil complete
T3	108139	Input I. F. 465 kc. - complete
T4	108121	Output I. F. 465 kc. - complete
T5	104131	Power Transformer
T6	10567	Output Transformer
T7	114114	5" Dynamic Speaker
L1	10568	"A" Filter Choke
P1	10797	6.8 v. pilot light
SP		Off-on Switch on Volume Control

Code No.	Part No.	Description
R1	13011	250M ohm - 1/2 w. 20%
R2	130176	20M ohm - 1/2 w. 10%
R3	130272	10 ohm - 1/2 w. 10%
R4	130245	10M ohm - 1 w. 10%
R5	1304	3 megohm - 1/2 w. 20%
R6	101110	1 megohm volume control
R7	130174	50 ohm - 1/2 w. 10%
R8	130211	30 ohm - 1/2 w. 10%
R9	130209	2 megohm - 1/2 w. 20%
R10	130210	1 megohm - 1/2 w. 20%
R11	130212	250 ohm - 1 watt 10%
R12	13011	250M ohm - 1/2 w. 20%
R13	13011	250M ohm - 1/2 w. 20%
R14	13011	250M ohm - 1/2 w. 10%
R15	13060	100 ohm - 1/2 w. 10%
R16	13060	100 ohm - 1/2 w. 10%

Code No.	Part No.	Description
C	10269	2 gang variable condenser
C1	1293	.0002 Mica 20%
C2	10055	.01 x 400 v. 25%
C3	12434	Antenna Trimmer
C4	12912	.00025 Mica 20%
C5	1001	.1 x 400 v. 25%
C6	10020	.1 x 200 v. 25%
C7	1295	.0001 Mica

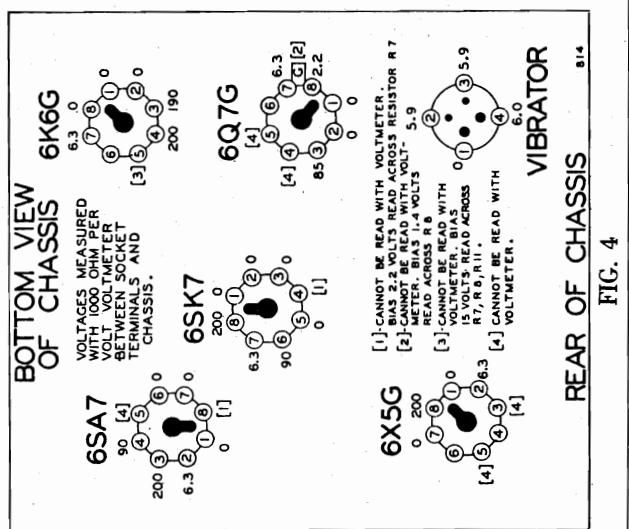


FIG. 4

January 1939
Serial No. 203070 Up

MODEL 577C

Alignment, Trimmers
Socket, Tuner

GAMBLE-SKOGMO INC.

Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt. These voltages are clearly indicated on the bottom view.

In order to prevent signal from acting upon A.V.C. and affecting accuracy of voltage measurements, aerial and ground leads should be short circuited while making measurements.

All voltages are to be measured with 6.3 volts input to receiver. Resistances of coils and transformer windings are indicated in ohms on schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

Failure to operate, noisy or weak reception is usually due to defective tubes, the tubes making poor contact with sockets or grid clips making poor contact with the caps of the tubes. Tubes may be checked very easily by replacing with other tubes which are known to be good. If fuse blows out frequently and insulating sleeve has been properly placed over fuse, the trouble is probably in the vibrator, it should be replaced. Do not attempt to make any adjustments on the vibrators.

ALIGNING INSTRUCTIONS

All of the adjustments have been very carefully set with signal generators at the factory and require no further adjustment, unless it becomes necessary to replace a coil or transformer, or if the adjustments have been tampered with in the field. Under no circumstances attempt any adjustments without first making certain that adjustment is necessary and only after voltages, tubes and condensers have been checked and found to be normal. To properly re-align this receiver, a test oscillator, as well as an output meter, must be used.

DUMMY ANTENNAS

The dummy antennas referred to in the following instructions are:

- "I.F. Dummy" —A .5 mfd. condenser connected in series with the test oscillator output lead.
- "Broadcast Dummy"—A 125 mmfd. condenser connected in series with the output lead of the test oscillator.

RESONANCE INDICATOR

Use as a resonance indicator an output meter connected across the primary of the speaker input transformer, or by means of an adapter between the plate and screen terminals of the type 6K6 output tube. Maximum deflection of the meter indicates resonance. Use only enough signal to get a readily readable output. A low range output meter or the low scale of a multi-range meter should be used.

I.F. ALIGNMENT: (465 K.C.)

1. With variable condenser in its minimum capacity position (plates entirely out of mesh) and with volume control full on, connect test oscillator set at 465 K.C. in series with I.F. dummy antenna, to grid of 6SK7 I.F. tube.
2. Adjust trimmer condensers of output I.F. transformer No. 108121 to resonance with oscillator.
3. Move test oscillator connection to grid of 6SA7 tube and adjust trimmer condensers of input I.F. transformer No. 108139 to resonance with oscillator. There are two adjustments on each and they are accessible from the top of the transformer shield and should be adjusted with an insulated screw driver. (See Fig. 3—top view, page 3.)

BROADCAST ALIGNMENT

1. With variable condenser in its minimum capacity position, connect test oscillator set at 1550 K.C. in series with broadcast dummy to the antenna lead of receiver.
2. Adjust oscillator trimmer of variable condenser to resonance. (This adjustment is the rear section of the two-gang condenser—see top view, Fig. 3).
3. Shift test oscillator to 1400 K.C. and pick up signal by rotating condenser and adjust antenna trimmer (front section of gang condenser) to resonance (see top view, Fig. 3).
4. Re-set test oscillator to 600 K.C. and rotate variable condenser to 600 K.C. Adjust series pad in the antenna cir-

cuit for maximum gain. This pad is mounted on the side of the antenna can, adjustment "X."

5. Go back and check 1400 K.C. If adjustment is made here, check 600 K.C. again.
6. Check for sensitivity at 1000 K.C. by setting test oscillator to this frequency and picking up the signal by rotating variable condenser. Under no circumstances bend plates of variable condenser sections to correct tracking.

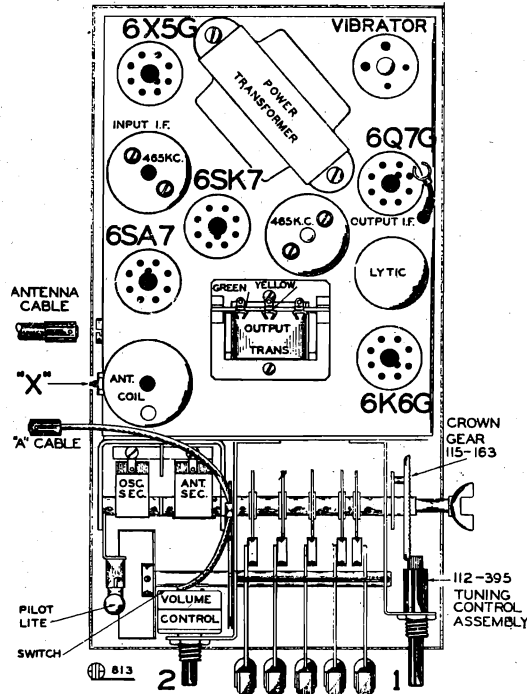


FIG. 3—TOP VIEW

PROCEDURE FOR SETTING THE AUTOMATIC LEVERS

There are five levers on the dial by means of which five stations may be selected, (See "B" Fig. 2).

Make a list of local stations you tune in regularly; any number up to and including five.

Punch out from the set of station call letter tabs supplied, the call letters of the stations you have selected.

On the front of each automatic tuner lever an opening is provided for inserting the call letter tabs, (See "A" Fig. 2).

Insert the call letter tabs in the rectangular openings of each of the automatic tuner levers. One of the small celluloid tabs supplied should be snapped into place over each of the station call letter tabs.

Press DOWN ALL THE WAY any one of the automatic tuner levers. Holding it down FIRMLY, tune in by means of the tuning knob (No. 1) the station you have assigned to this lever. Turn the tuning knob very slowly back and forth (while still holding lever in downward position) until the signal is clearest. The station will then be accurately tuned in. Release the lever.

Press down another automatic tuner lever. Holding it down FIRMLY, carefully tune in the station assigned to this lever. Release this lever.

Follow this procedure until you have selected all of your favorite stations.

Now rotate the tuning knob (No. 1) to the right (clockwise) as far as it will turn, and tighten the special locking screw ("C") located on left side of tuner dial assembly (See Fig. 2).

It is VERY IMPORTANT that this locking screw is turned until it is ABSOLUTELY TIGHT.

This screw will lock in place all the stations you have selected on the automatic tuner levers. (Note: Locking screw "C" is loose when radio is shipped from factory).


If you should desire to change any station you selected to another, loosen the locking screw "C" one or two turns, select the new station as explained. Be sure to retighten the locking screw, otherwise the stations you have selected will not stay adjusted to the levers.

The automatic dial is now set up for quick tuning. Press down on the lever and your favorite station is selected.

GAMBLE-SKOGMO INC.

MODEL 589, Series A, Iss. B

Schematic, Alignment
Socket, Trimmers

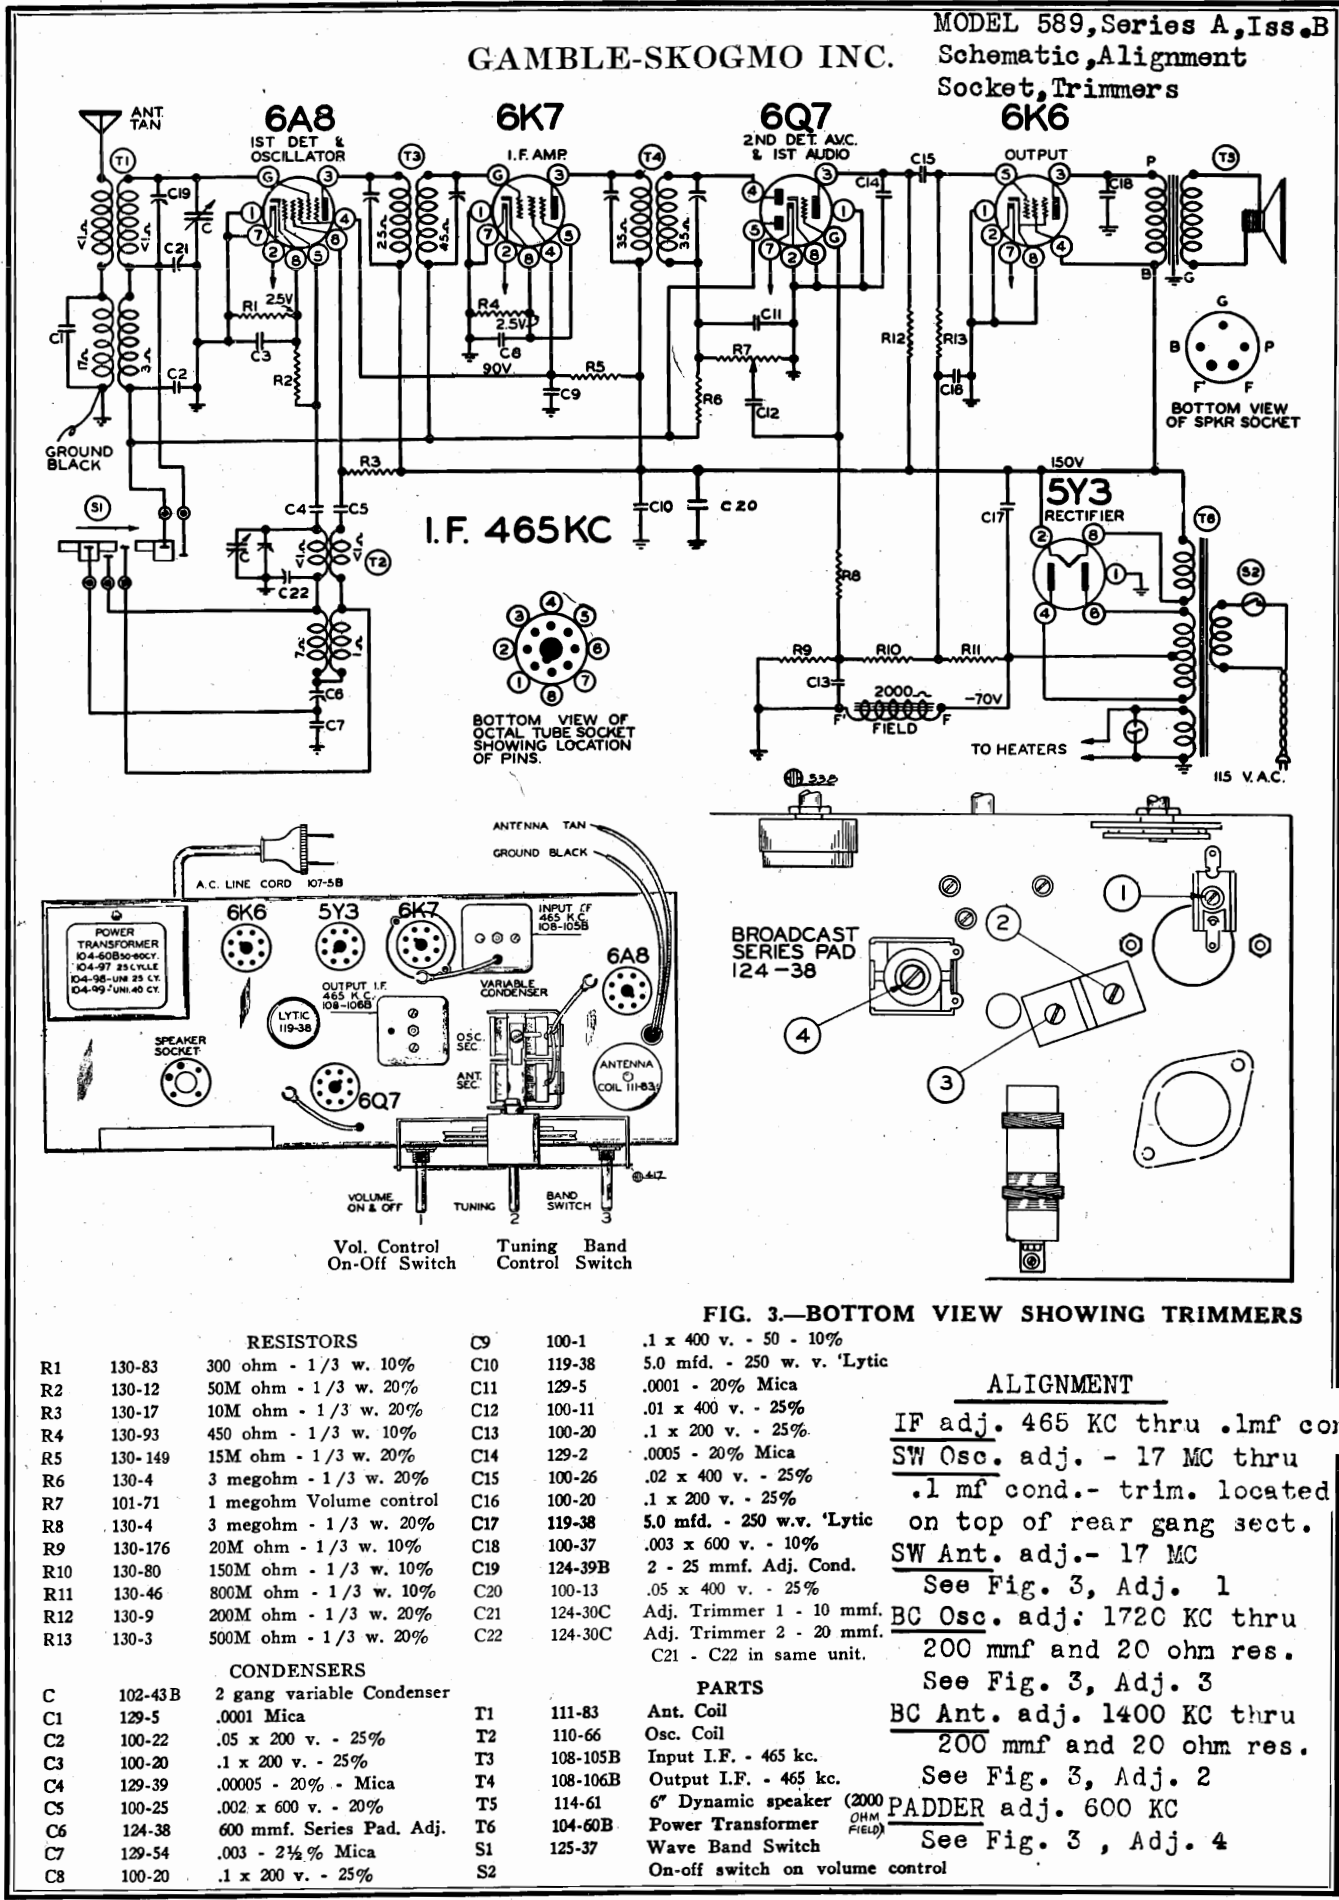

BOTTOM VIEW OF OCTAL TUBE SOCKET SHOWING LOCATION OF PINS.

BOTTOM VIEW OF SPKR SOCKET

BROADCAST SERIES PAD 124-38

FIG. 3.—BOTTOM VIEW SHOWING TRIMMERS

RESISTORS			CONDENSERS		
R1	130-83	300 ohm - 1/3 w. 10%	C9	100-1	.1 x 400 v. - 50 - 10%
R2	130-12	50M ohm - 1/3 w. 20%	C10	119-38	5.0 mfd. - 250 w. v. 'Lytic
R3	130-17	10M ohm - 1/3 w. 20%	C11	129-5	.0001 - 20% Mica
R4	130-93	450 ohm - 1/3 w. 10%	C12	100-11	.01 x 400 v. - 25%
R5	130-149	15M ohm - 1/3 w. 20%	C13	100-20	.1 x 200 v. - 25%
R6	130-4	3 megohm - 1/3 w. 20%	C14	129-2	.0005 - 20% Mica
R7	101-71	1 megohm Volume control	C15	100-26	.02 x 400 v. - 25%
R8	130-4	3 megohm - 1/3 w. 20%	C16	100-20	.1 x 200 v. - 25%
R9	130-176	20M ohm - 1/3 w. 10%	C17	119-38	5.0 mfd. - 250 w.v. 'Lytic
R10	130-80	150M ohm - 1/3 w. 10%	C18	100-37	.003 x 600 v. - 10%
R11	130-46	800M ohm - 1/3 w. 10%	C19	124-39B	2 - 25 mmf. Adj. Cond.
R12	130-9	200M ohm - 1/3 w. 20%	C20	100-13	.05 x 400 v. - 25%
R13	130-3	500M ohm - 1/3 w. 20%	C21	124-30C	Adj. Trimmer 1 - 10 mmf.
C	102-43B	2 gang variable Condenser	C22	124-30C	Adj. Trimmer 2 - 20 mmf.
C1	129-5	.0001 Mica	T1	111-83	Ant. Coil
C2	100-22	.05 x 200 v. - 25%	T2	110-66	Osc. Coil
C3	100-20	.1 x 200 v. - 25%	T3	108-105B	Input I.F. - 465 kc.
C4	129-39	.00005 - 20% - Mica	T4	108-106B	Output I.F. - 465 kc.
C5	100-25	.002 x 600 v. - 20%	T5	114-61	6" Dynamic speaker (2000 OHM FIELD)
C6	124-38	600 mmf. Series Pad. Adj.	T6	104-60B	Power Transformer
C7	129-54	.003 - 2 1/2% Mica	S1	125-37	Wave Band Switch
C8	100-20	.1 x 200 v. - 25%	S2		On-off switch on volume control

ALIGNMENT

IF adj. 465 KC thru .1mf cond.
 SW Osc. adj. - 17 MC thru .1 mf cond.- trim. located on top of rear gang sect.
 SW Ant. adj.- 17 MC
 See Fig. 3, Adj. 1
 BC Osc. adj: 1720 KC thru 200 mmf and 20 ohm res.
 See Fig. 3, Adj. 3
 BC Ant. adj. 1400 KC thru 200 mmf and 20 ohm res.
 See Fig. 3, Adj. 2
 PADDER adj. 600 KC
 See Fig. 3, Adj. 4

MODEL 601, Series A, B, C

Schematic, Voltage Alignment, Trimmers Socket, Notes

GAMBLE-SKOGMO INC.

ALIGNING I.F. TRANSFORMERS: (465 K.C.):

Part No. 108-83 Output I.F. Transformer
Part No. 108-82 Input I.F. Transformer

These I.F. transformers have two adjustments, both of which are accessible from the top of chassis (see top view).

1. With volume control full on (the extreme right of its rotation), and with the variable condenser set to approximately 1400 kilocycles, make the following adjustments

- (a) Connect external oscillator set at 465 kilocycles, in series with .1 mfd. condenser, to the control grid cap of the type 78 tube, and adjust the output I.F. transformer (No. 108-83) to resonance.
- (b) Move oscillator output clip from grid of 78 grid cap to 6A7 and adjust input I.F. transformer (No. 108-82) to resonance.
- (c) With oscillator still connected to 6A7, readjust output I.F. transformer (108-83) if necessary.



R.F. ALIGNMENT: (535-1720 K.C.)

1. Unsolder the antenna wire from its terminal on the antenna coil and with gang condenser in its minimum capacity position, plates entirely out of mesh, connect an external oscillator in series with a 50 mmf. condenser to the antenna terminal on the antenna coil and chassis ground and make the following adjustments:

- (a) With external oscillator set at 1720 kilocycles, adjust oscillator trimmer (rear of gang condenser).
- (b) Re-set external oscillator to 1550 kilocycles, rotate condenser, pick up oscillator signal and adjust antenna trimmer to resonance (front section of gang condenser).
- (c) Check sensitivity at 600 and 1000 kilocycles.

Type 43 Pentode Output Amplifier
Type 25Z5 High Vacuum Rectifier.
Type L49B Ballast Tube.

Type 6A7 Pentagrid Mixer, First Detector-oscillator
Type 78 Remote Cut-Off Pentode, I.F. Amplifier (465 K.C.)
Type 75 Duplex Diode Triode Second Detector, A.V.C. and First Audio.

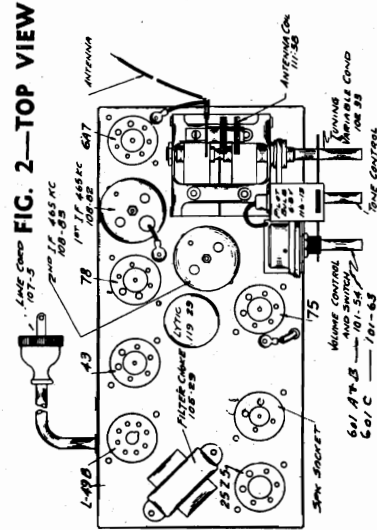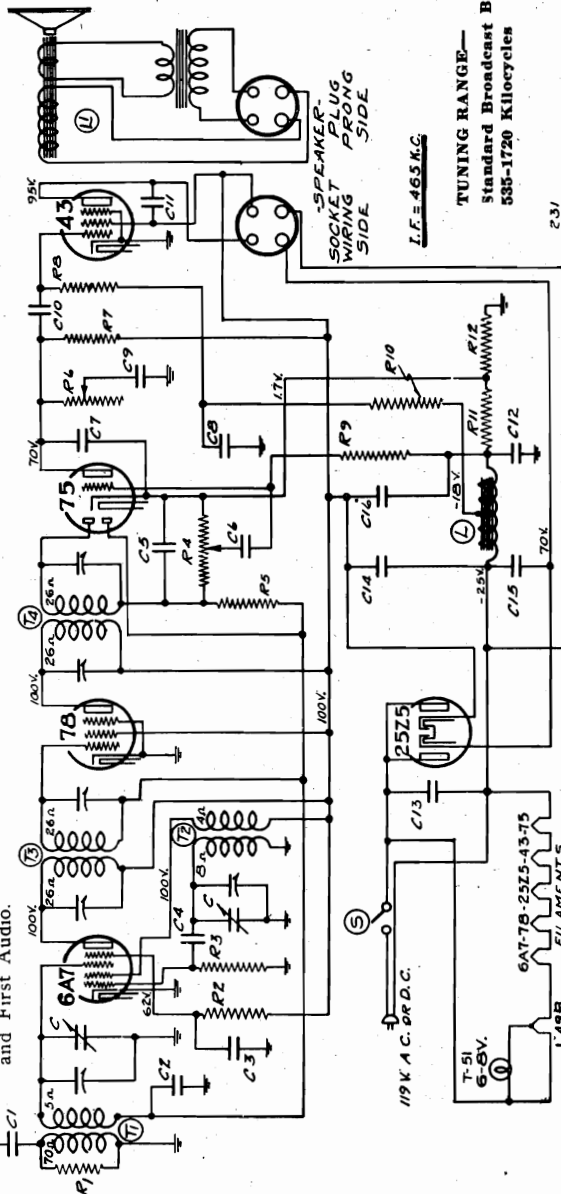

No. Part No.	Description
C1 100-25	.002 x600 Volt-25%
C2 100-22	.05 x200 Volt-25%
C3 100-22	.05 x200 Volt-25%
C4 129-12	.00025 Mica-MT-20%
C5 129-12	.00025 Mica-MT-20%
C6 129-11	.01 x400 Volt-20%
C7 129-2	.0005 x400 Volt-20%
C8 100-20	.1 x200 Volt-25%
C9 100-11	.01 x400 Volt-25%
C10 100-11	.01 x400 Volt-25%
C11 100-25	.002 x600 Volt-25%
C12 100-6	.25 x200 Volt-20%
C13 100-39	.1 x400 Volt-20%
C14 119-25	16 mfd.x100 Volt-Working Voltage
C15 119-25	5 mfd.x100 Volt-Working Voltage
C16 119-25	8 mfd.x100 Volt-Working Voltage
NOTE: C14, C15, and C16 in one unit—No. 119-25	
T4 108-83	Output I.F. Coil-465 Kc.
L 105-29	Filter Choke (Resistance 600 Ohms)
L1 114-43	Five Inch Speaker (Field Resistance 3000 Ohms)
S 101-54	On and off switch on Volume Control

MODEL 601—SERIES A See schematic and parts above.
MODEL 601—SERIES B is the same as Series A, except for the following changes:—
1 - The C15 condenser was eliminated.
2 - The C14 condenser was replaced by a C15 (part #119-29) 30 mfd. capacity, and the C16 was replaced by a C14 (part #119-29) 5 mfd. capacity.
MODEL 601—SERIES C is the same as Series B (see above changes) except for the substitution of the following parts:
R4 101-63 500M Ohm Volume Control
R7 130-102 500M Ohm-1/4W-20%-100V-Carbon
R9 130-102 500M Ohm-1/4W-20%-100V-Carbon
C7 129-5 .0001 Mica-MT-20%
S 101-63 On and off switch on Volume Control

GAMBLE-SKOGMO INC.

MODELS 665, 765, Series A
Schematic, Voltage
Trimmers, Socket

- RESISTORS**
- 800 ohm—1/2 w.
 - 100M ohm—1/4 w.
 - 100K ohm—1/4 w.
 - 10K ohm—1/4 w.
 - 100 ohm—1/4 w.
 - 150 ohm—1/4 w.
 - 20K ohm—1/4 w.
 - 1 megohm—1/4 w.
 - 60 ohm—1/4 w. (volume)
 - 3 megohm—1/4 w.
 - 40 ohm—1/4 w.
 - 200M ohm—1/4 w.
 - 1 megohm—1/4 w.
 - 25M ohm—1/4 w.
 - 1 Megohm (in Tuning Indicator Socket)
- CONDENSERS**
- Adjustable Capacitor
 - Adjustable Capacitor
 - 2 gang variable condenser
 - .000105 Mica
 - .00009 Mica
 - .00004 x 600 v.
 - SW. Antenna Trimmer 2-25 mmfd.
 - BC. Antenna Trimmer 1-10 mmfd.
 - .05 x 400 v.
 - SW. Oscillator Trimmer 2-25 mmfd.
 - BC. Oscillator Trimmer 2-25 mmfd.
 - .00005 Mica
 - .350 mmfd. W. C. B. C. Series Pad
 - .0041 Compression Type
 - .25 x 400 v.
 - .0005 Mica
 - .01 x 400 v.
 - .01 x 400 v.
 - .05 x 400 v.
 - 8 mid.—350 w. v. lyric
 - 12 mid.—350 w. v. lyric
 - .008 x 800 v.

- PARTS**
- SW. B. C. Antenna Coil Complete
 - SW. B. C. Oscillator Coil Complete
 - Input I. F.—465 kc.
 - Output I. F.—465 kc.
 - Power Transformer
 - 6" Speaker Dynamic (1500 ohm field)
 - Band Switch
 - On-on Switch on volume control
 - 6.3 v. Pilot Light T-44
- CONNECTIONS**
- C3 and C8 in same unit.
 - C18 and C19 in same unit.
 - T1, T2, T3, T4, T5, T6, T7, T8, T9, T10, T11, T12, T13, T14, T15, T16, T17, T18, T19, T20, T21, T22, T23, T24, T25, T26, T27, T28, T29, T30, T31, T32, T33, T34, T35, T36, T37, T38, T39, T40, T41, T42, T43, T44, T45, T46, T47, T48, T49, T50, T51, T52, T53, T54, T55, T56, T57, T58, T59, T60, T61, T62, T63, T64, T65, T66, T67, T68, T69, T70, T71, T72, T73, T74, T75, T76, T77, T78, T79, T80, T81, T82, T83, T84, T85, T86, T87, T88, T89, T90, T91, T92, T93, T94, T95, T96, T97, T98, T99, T100, T101, T102, T103, T104, T105, T106, T107, T108, T109, T110, T111, T112, T113, T114, T115, T116, T117, T118, T119, T120, T121, T122, T123, T124, T125, T126, T127, T128, T129, T130, T131, T132, T133, T134, T135, T136, T137, T138, T139, T140, T141, T142, T143, T144, T145, T146, T147, T148, T149, T150, T151, T152, T153, T154, T155, T156, T157, T158, T159, T160, T161, T162, T163, T164, T165, T166, T167, T168, T169, T170, T171, T172, T173, T174, T175, T176, T177, T178, T179, T180, T181, T182, T183, T184, T185, T186, T187, T188, T189, T190, T191, T192, T193, T194, T195, T196, T197, T198, T199, T200, T201, T202, T203, T204, T205, T206, T207, T208, T209, T210, T211, T212, T213, T214, T215, T216, T217, T218, T219, T220, T221, T222, T223, T224, T225, T226, T227, T228, T229, T230, T231, T232, T233, T234, T235, T236, T237, T238, T239, T240, T241, T242, T243, T244, T245, T246, T247, T248, T249, T250, T251, T252, T253, T254, T255, T256, T257, T258, T259, T260, T261, T262, T263, T264, T265, T266, T267, T268, T269, T270, T271, T272, T273, T274, T275, T276, T277, T278, T279, T280, T281, T282, T283, T284, T285, T286, T287, T288, T289, T290, T291, T292, T293, T294, T295, T296, T297, T298, T299, T300, T301, T302, T303, T304, T305, T306, T307, T308, T309, T310, T311, T312, T313, T314, T315, T316, T317, T318, T319, T320, T321, T322, T323, T324, T325, T326, T327, T328, T329, T330, T331, T332, T333, T334, T335, T336, T337, T338, T339, T340, T341, T342, T343, T344, T345, T346, T347, T348, T349, T350, T351, T352, T353, T354, T355, T356, T357, T358, T359, T360, T361, T362, T363, T364, T365, T366, T367, T368, T369, T370, T371, T372, T373, T374, T375, T376, T377, T378, T379, T380, T381, T382, T383, T384, T385, T386, T387, T388, T389, T390, T391, T392, T393, T394, T395, T396, T397, T398, T399, T400, T401, T402, T403, T404, T405, T406, T407, T408, T409, T410, T411, T412, T413, T414, T415, T416, T417, T418, T419, T420, T421, T422, T423, T424, T425, T426, T427, T428, T429, T430, T431, T432, T433, T434, T435, T436, T437, T438, T439, T440, T441, T442, T443, T444, T445, T446, T447, T448, T449, T450, T451, T452, T453, T454, T455, T456, T457, T458, T459, T460, T461, T462, T463, T464, T465, T466, T467, T468, T469, T470, T471, T472, T473, T474, T475, T476, T477, T478, T479, T480, T481, T482, T483, T484, T485, T486, T487, T488, T489, T490, T491, T492, T493, T494, T495, T496, T497, T498, T499, T500, T501, T502, T503, T504, T505, T506, T507, T508, T509, T510, T511, T512, T513, T514, T515, T516, T517, T518, T519, T520, T521, T522, T523, T524, T525, T526, T527, T528, T529, T530, T531, T532, T533, T534, T535, T536, T537, T538, T539, T540, T541, T542, T543, T544, T545, T546, T547, T548, T549, T550, T551, T552, T553, T554, T555, T556, T557, T558, T559, T560, T561, T562, T563, T564, T565, T566, T567, T568, T569, T570, T571, T572, T573, T574, T575, T576, T577, T578, T579, T580, T581, T582, T583, T584, T585, T586, T587, T588, T589, T590, T591, T592, T593, T594, T595, T596, T597, T598, T599, T600, T601, T602, T603, T604, T605, T606, T607, T608, T609, T610, T611, T612, T613, T614, T615, T616, T617, T618, T619, T620, T621, T622, T623, T624, T625, T626, T627, T628, T629, T630, T631, T632, T633, T634, T635, T636, T637, T638, T639, T640, T641, T642, T643, T644, T645, T646, T647, T648, T649, T650, T651, T652, T653, T654, T655, T656, T657, T658, T659, T660, T661, T662, T663, T664, T665, T666, T667, T668, T669, T670, T671, T672, T673, T674, T675, T676, T677, T678, T679, T680, T681, T682, T683, T684, T685, T686, T687, T688, T689, T690, T691, T692, T693, T694, T695, T696, T697, T698, T699, T700, T701, T702, T703, T704, T705, T706, T707, T708, T709, T710, T711, T712, T713, T714, T715, T716, T717, T718, T719, T720, T721, T722, T723, T724, T725, T726, T727, T728, T729, T730, T731, T732, T733, T734, T735, T736, T737, T738, T739, T740, T741, T742, T743, T744, T745, T746, T747, T748, T749, T750, T751, T752, T753, T754, T755, T756, T757, T758, T759, T760, T761, T762, T763, T764, T765, T766, T767, T768, T769, T770, T771, T772, T773, T774, T775, T776, T777, T778, T779, T780, T781, T782, T783, T784, T785, T786, T787, T788, T789, T790, T791, T792, T793, T794, T795, T796, T797, T798, T799, T800, T801, T802, T803, T804, T805, T806, T807, T808, T809, T810, T811, T812, T813, T814, T815, T816, T817, T818, T819, T820, T821, T822, T823, T824, T825, T826, T827, T828, T829, T830, T831, T832, T833, T834, T835, T836, T837, T838, T839, T840, T841, T842, T843, T844, T845, T846, T847, T848, T849, T850, T851, T852, T853, T854, T855, T856, T857, T858, T859, T860, T861, T862, T863, T864, T865, T866, T867, T868, T869, T870, T871, T872, T873, T874, T875, T876, T877, T878, T879, T880, T881, T882, T883, T884, T885, T886, T887, T888, T889, T890, T891, T892, T893, T894, T895, T896, T897, T898, T899, T900, T901, T902, T903, T904, T905, T906, T907, T908, T909, T910, T911, T912, T913, T914, T915, T916, T917, T918, T919, T920, T921, T922, T923, T924, T925, T926, T927, T928, T929, T930, T931, T932, T933, T934, T935, T936, T937, T938, T939, T940, T941, T942, T943, T944, T945, T946, T947, T948, T949, T950, T951, T952, T953, T954, T955, T956, T957, T958, T959, T960, T961, T962, T963, T964, T965, T966, T967, T968, T969, T970, T971, T972, T973, T974, T975, T976, T977, T978, T979, T980, T981, T982, T983, T984, T985, T986, T987, T988, T989, T990, T991, T992, T993, T994, T995, T996, T997, T998, T999, T1000, T1001, T1002, T1003, T1004, T1005, T1006, T1007, T1008, T1009, T1010, T1011, T1012, T1013, T1014, T1015, T1016, T1017, T1018, T1019, T1020, T1021, T1022, T1023, T1024, T1025, T1026, T1027, T1028, T1029, T1030, T1031, T1032, T1033, T1034, T1035, T1036, T1037, T1038, T1039, T1040, T1041, T1042, T1043, T1044, T1045, T1046, T1047, T1048, T1049, T1050, T1051, T1052, T1053, T1054, T1055, T1056, T1057, T1058, T1059, T1060, T1061, T1062, T1063, T1064, T1065, T1066, T1067, T1068, T1069, T1070, T1071, T1072, T1073, T1074, T1075, T1076, T1077, T1078, T1079, T1080, T1081, T1082, T1083, T1084, T1085, T1086, T1087, T1088, T1089, T1090, T1091, T1092, T1093, T1094, T1095, T1096, T1097, T1098, T1099, T1100, T1101, T1102, T1103, T1104, T1105, T1106, T1107, T1108, T1109, T1110, T1111, T1112, T1113, T1114, T1115, T1116, T1117, T1118, T1119, T1120, T1121, T1122, T1123, T1124, T1125, T1126, T1127, T1128, T1129, T1130, T1131, T1132, T1133, T1134, T1135, T1136, T1137, T1138, T1139, T1140, T1141, T1142, T1143, T1144, T1145, T1146, T1147, T1148, T1149, T1150, T1151, T1152, T1153, T1154, T1155, T1156, T1157, T1158, T1159, T1160, T1161, T1162, T1163, T1164, T1165, T1166, T1167, T1168, T1169, T1170, T1171, T1172, T1173, T1174, T1175, T1176, T1177, T1178, T1179, T1180, T1181, T1182, T1183, T1184, T1185, T1186, T1187, T1188, T1189, T1190, T1191, T1192, T1193, T1194, T1195, T1196, T1197, T1198, T1199, T1200, T1201, T1202, T1203, T1204, T1205, T1206, T1207, T1208, T1209, T1210, T1211, T1212, T1213, T1214, T1215, T1216, T1217, T1218, T1219, T1220, T1221, T1222, T1223, T1224, T1225, T1226, T1227, T1228, T1229, T1230, T1231, T1232, T1233, T1234, T1235, T1236, T1237, T1238, T1239, T1240, T1241, T1242, T1243, T1244, T1245, T1246, T1247, T1248, T1249, T1250, T1251, T1252, T1253, T1254, T1255, T1256, T1257, T1258, T1259, T1260, T1261, T1262, T1263, T1264, T1265, T1266, T1267, T1268, T1269, T1270, T1271, T1272, T1273, T1274, T1275, T1276, T1277, T1278, T1279, T1280, T1281, T1282, T1283, T1284, T1285, T1286, T1287, T1288, T1289, T1290, T1291, T1292, T1293, T1294, T1295, T1296, T1297, T1298, T1299, T1300, T1301, T1302, T1303, T1304, T1305, T1306, T1307, T1308, T1309, T1310, T1311, T1312, T1313, T1314, T1315, T1316, T1317, T1318, T1319, T1320, T1321, T1322, T1323, T1324, T1325, T1326, T1327, T1328, T1329, T1330, T1331, T1332, T1333, T1334, T1335, T1336, T1337, T1338, T1339, T1340, T1341, T1342, T1343, T1344, T1345, T1346, T1347, T1348, T1349, T1350, T1351, T1352, T1353, T1354, T1355, T1356, T1357, T1358, T1359, T1360, T1361, T1362, T1363, T1364, T1365, T1366, T1367, T1368, T1369, T1370, T1371, T1372, T1373, T1374, T1375, T1376, T1377, T1378, T1379, T1380, T1381, T1382, T1383, T1384, T1385, T1386, T1387, T1388, T1389, T1390, T1391, T1392, T1393, T1394, T1395, T1396, T1397, T1398, T1399, T1400, T1401, T1402, T1403, T1404, T1405, T1406, T1407, T1408, T1409, T1410, T1411, T1412, T1413, T1414, T1415, T1416, T1417, T1418, T1419, T1420, T1421, T1422, T1423, T1424, T1425, T1426, T1427, T1428, T1429, T1430, T1431, T1432, T1433, T1434, T1435, T1436, T1437, T1438, T1439, T1440, T1441, T1442, T1443, T1444, T1445, T1446, T1447, T1448, T1449, T1450, T1451, T1452, T1453, T1454, T1455, T1456, T1457, T1458, T1459, T1460, T1461, T1462, T1463, T1464, T1465, T1466, T1467, T1468, T1469, T1470, T1471, T1472, T1473, T1474, T1475, T1476, T1477, T1478, T1479, T1480, T1481, T1482, T1483, T1484, T1485, T1486, T1487, T1488, T1489, T1490, T1491, T1492, T1493, T1494, T1495, T1496, T1497, T1498, T1499, T1500, T1501, T1502, T1503, T1504, T1505, T1506, T1507, T1508, T1509, T1510, T1511, T1512, T1513, T1514, T1515, T1516, T1517, T1518, T1519, T1520, T1521, T1522, T1523, T1524, T1525, T1526, T1527, T1528, T1529, T1530, T1531, T1532, T1533, T1534, T1535, T1536, T1537, T1538, T1539, T1540, T1541, T1542, T1543, T1544, T1545, T1546, T1547, T1548, T1549, T1550, T1551, T1552, T1553, T1554, T1555, T1556, T1557, T1558, T1559, T1560, T1561, T1562, T1563, T1564, T1565, T1566, T1567, T1568, T1569, T1570, T1571, T1572, T1573, T1574, T1575, T1576, T1577, T1578, T1579, T1580, T1581, T1582, T1583, T1584, T1585, T1586, T1587, T1588, T1589, T1590, T1591, T1592, T1593, T1594, T1595, T1596, T1597, T1598, T1599, T1600, T1601, T1602, T1603, T1604, T1605, T1606, T1607, T1608, T1609, T1610, T1611, T1612, T1613, T1614, T1615, T1616, T1617, T1618, T1619, T1620, T1621, T1622, T1623, T1624, T1625, T1626, T1627, T1628, T1629, T1630, T1631, T1632, T1633, T1634, T1635, T1636, T1637, T1638, T1639, T1640, T1641, T1642, T1643, T1644, T1645, T1646, T1647, T1648, T1649, T1650, T1651, T1652, T1653, T1654, T1655, T1656, T1657, T1658, T1659, T1660, T1661, T1662, T1663, T1664, T1665, T1666, T1667, T1668, T1669, T1670, T1671, T1672, T1673, T1674, T1675, T1676, T1677, T1678, T1679, T1680, T1681, T1682, T1683, T1684, T1685, T1686, T1687, T1688, T1689, T1690, T1691, T1692, T1693, T1694, T1695, T1696, T1697, T1698, T1699, T1700, T1701, T1702, T1703, T1704, T1705, T1706, T1707, T1708, T1709, T1710, T1711, T1712, T1713, T1714, T1715, T1716, T1717, T1718, T1719, T1720, T1721, T1722, T1723, T1724, T1725, T1726, T1727, T1728, T1729, T1730, T1731, T1732, T1733, T1734, T1735, T1736, T1737, T1738, T1739, T1740, T1741, T1742, T1743, T1744, T1745, T1746, T1747, T1748, T1749, T1750, T1751, T1752, T1753, T1754, T1755, T1756, T1757, T1758, T1759, T1760, T1761, T1762, T1763, T1764, T1765, T1766, T1767, T1768, T1769, T1770, T1771, T1772, T1773, T1774, T1775, T1776, T1777, T1778, T1779, T1780, T1781, T1782, T1783, T1784, T1785, T1786, T1787, T1788, T1789, T1790, T1791, T1792, T1793, T1794, T1795, T1796, T1797, T1798, T1799, T1800, T1801, T1802, T1803, T1804, T1805, T1806, T1807, T1808, T1809, T1810, T1811, T1812, T1813, T1814, T1815, T1816, T1817, T1818, T1819, T1820, T1821, T1822, T1823, T1824, T1825, T1826, T1827, T1828, T1829, T1830, T1831, T1832, T1833, T1834, T1835, T1836, T1837, T1838, T1839, T1840, T1841, T1842, T1843, T1844, T1845, T1846, T1847, T1848, T1849, T1850, T1851, T1852, T1853, T1854, T1855, T1856, T1857, T1858, T1859, T1860, T1861, T1862, T1863, T1864, T1865, T1866, T1867, T1868, T1869, T1870, T1871, T1872, T1873, T1874, T1875, T1876, T1877, T1878, T1879, T1880, T1881, T1882, T1883, T1884, T1885, T1886, T1887, T1888, T1889, T1890, T1891, T1892, T1893, T1894, T1895, T1896, T1897, T1898, T1899, T1900, T1901, T1902, T1903, T1904, T1905, T1906, T1907, T1908, T1909, T1910, T1911, T1912, T1913, T1914, T1915, T1916, T1917, T1918, T1919, T1920, T1921, T1922, T1923, T1924, T1925, T1926, T1927, T1928, T1929, T1930, T1931, T1932, T1933, T1934, T1935, T1936, T1937, T1938, T1939, T1940, T1941, T1942, T1943, T1944, T1945, T1946, T1947, T1948, T1949, T1950, T1951, T1952, T1953, T1954, T1955, T1956, T1957, T1958, T1959, T1960, T1961, T1962, T1963, T1964, T1965, T1966, T1967, T1968, T1969, T1970, T1971, T1972, T1973, T1974, T1975, T1976, T1977, T1978, T1979, T1980, T1981, T1982, T1983, T1984, T1985, T1986, T1987, T1988, T1989, T1990, T1991, T1992, T1993, T1994, T1995, T1996, T1997, T1998, T1999, T2000, T2001, T2002, T2003, T2004, T2005, T2006, T2007, T2008, T2009, T2010, T2011, T2012, T2013, T2014, T2015, T2016, T2017, T2018, T2019, T2020, T2021, T2022, T2023, T2024, T2025, T2026, T2027, T2028, T2029, T2030, T2031, T2032, T2033, T2034, T2035, T2036, T2037, T2038, T2039, T2040, T2041, T2042, T2043, T2044, T2045, T2046, T2047, T2048, T2049, T2050, T2051, T2052, T2053, T2054, T2055, T2056, T2057, T2058, T2059, T2060, T2061, T2062, T2063, T2064, T2065, T2066, T2067, T2068, T2069, T2070, T2071, T2072, T2073, T2074, T2075, T2076, T2077, T2078, T2079, T

MODELS 665, 765, Series A
Alignment

GAMBLE-SKOGMO INC.

MODELS 665 & 765 **SERIES A**

DESCRIPTION

TUBES:
The tube complement of this chassis consists of the following octal base glass and metal tubes:
The type and function of each tube is as follows:
1—Type 6K8G, Triode Hexode, First Detector-oscillator.
1—Type 6K7 Remote Cut-Off Pentode, I. F. Amplifier (465 K. C.)
1—Type 6Q7G Duplex Diode Triode Second Detector, A. V. C. and First Audio.
1—Type 6P5G Driver Stage.
1—Type 6AC5G Positive Grid Triode Output Amplifier.
1—Type 5Y3G High Vacuum Rectifier.
1—Type 6U5 Cathode-Ray Tuning Indicator Tube (for Model 765).
Transformers are available and chassis are sometimes

equipped with universal transformers for operation on 25, 40 and 60 cycles and with primary taps for 110, 130, and 230 volts, (see parts list).

SERVICE NOTES:

Voltage taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.
All voltages as indicated on the voltage chart are measured with 115 volts on the primary of the power transformer.
Resistances of coil windings are indicated in ohms on the schematic circuit diagram.
To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

Excessive hum, stuttering, low volume and a reduction in all D. C. voltages is usually caused by a shorted electrolytic condenser; open by-pass condensers frequently cause oscillation and distorted tone.

ALIGNING INSTRUCTIONS:

CAUTION:—No aligning adjustments should be attempted without first thoroughly checking over all other possible causes of trouble, such as poor installations, open or grounded antenna systems, low line voltage, defective tubes, condensers and resistors. In order to properly align this chassis, an oscillator (generator) is absolutely necessary. No aligning adjustments should be attempted with the chassis in the cabinet.

TO REMOVE CHASSIS FROM THE CABINET:

Remove the four bolts which are used to fasten the chassis to the cabinet shelf; pull the knob off their shafts and pull off the six button lever keys on front of dial.

ALIGNMENT PROCEDURE

- The following equipment is required for aligning:
- An all wave signal generator which will provide an accurately calibrated signal at the test frequencies as listed.
 - Output indicating meter.
 - Non-metallic screwdriver.
 - Dummy antennas—1 ml., 200 mmf., and 400 ohms.

- Volume control—Maximum all adjustments.
- Connect radio chassis to ground post of signal generator with a short heavy lead.
- Connect dummy antenna valve in series with generator output lead.
- Connect output meter across primary of output transformer.
- Allow chassis and signal generator to "heat up" for several minutes.

BAND	Frequency Setting	SIGNAL GENERATOR Dummy Antenna Connection to Radio	Position of Band Switch	Condenser Setting	Variable	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	Grid of 6K7	Broadcast (Extreme left rotation)	Rotor full open (Plates out of mesh)		Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	Grid of 6K8	Broadcast (Extreme left rotation)	Rotor full open (Plates out of mesh)		Two trimmers on top (See Fig. 1)	Input I. F.	Adjust to maximum output
SHORT WAVE BAND	17 Mc.	Antenna lead	Short wave (Extreme right rotation)	Set dial at 17 MC		Trimmer (C7) (See Fig. 3)	Short wave Oscillator	Adjust to maximum output
	17 Mc.	Antenna lead	Short wave (Extreme right rotation)	Dial set at 17 MC		Trimmer (C4) (See Fig. 3)	Short wave Antenna	Adjust to maximum output
BROADCAST BAND	1720 Kc.	Antenna lead	Broadcast (Extreme left rotation)	Rotor full open (Plates out of mesh)		Trimmer (C8) (See Fig. 3)	Broadcast Oscillator	Adjust to maximum output
	1400 Kc.	Antenna lead	Broadcast (Extreme left rotation)	Set dial at 1400 Kc.		Trimmer (C5) (See Fig. 3)	Broadcast Antenna	Adjust to maximum output
	600 Kc.	Antenna lead	Broadcast (Extreme left rotation)	Set dial at 600 Kc.		Trimmer (C11) (See Fig. 3)	Broadcast oscillator series pad	Adjust to maximum, rock dial. (See note "A")
IMAGE REJECTION ADJUSTMENTS	2100 Kc.	Antenna lead	Broadcast (Extreme left rotation)	Pick up signal at 1170 Kc. on dial		Wire capacitor (CB) (See circuit diagram)	Image rejection	Adjust by twisting for minimum output. (See note "B")
	2630 Kc.	Antenna lead	Broadcast (Extreme left rotation)	Pick up signal at 1700 Kc. on dial		Wire capacitor (CA) (See circuit diagram)	Image rejection	Adjust by moving for minimum output. (See note "C")

NOTE "A": Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.
NOTE "B": 2100Kc is the image frequency of 1170 Kc. Adjust wire capacity (CB) by twisting the two wires until a minimum output is obtained.
NOTE "C": 2630Kc is the image frequency of 1700Kc. Adjust wire capacity (CA) by moving the wire either toward or away from the antenna coil winding until a minimum output is obtained on the output meter.
• Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.
• After each band is completed, repeat the procedure as a final check.

GAMBLE-SKOGMO INC.

MODEL 678, Issue A
Schematic, Voltage
Socket, Trimmers

Power Output..... 7 Watts Undistorted, 9 Watts Maximum
Power Consumption..... 7.7 Amperes at 6.3 Volts

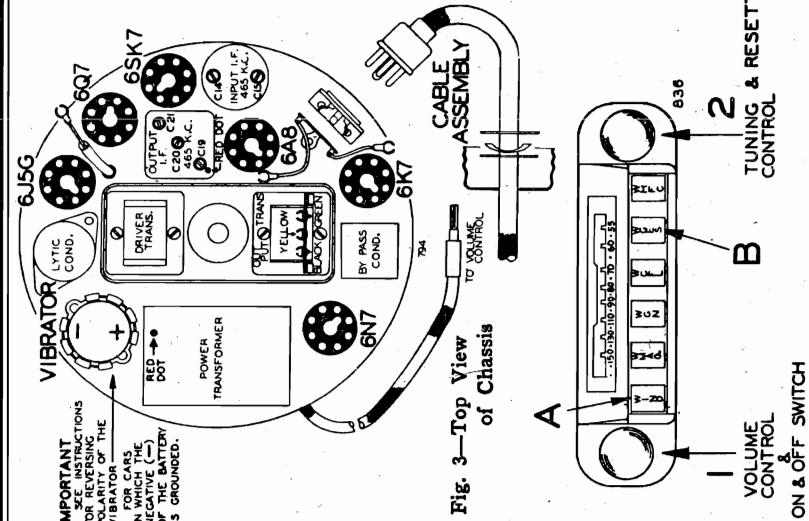


Fig. 3—Top View of Chassis

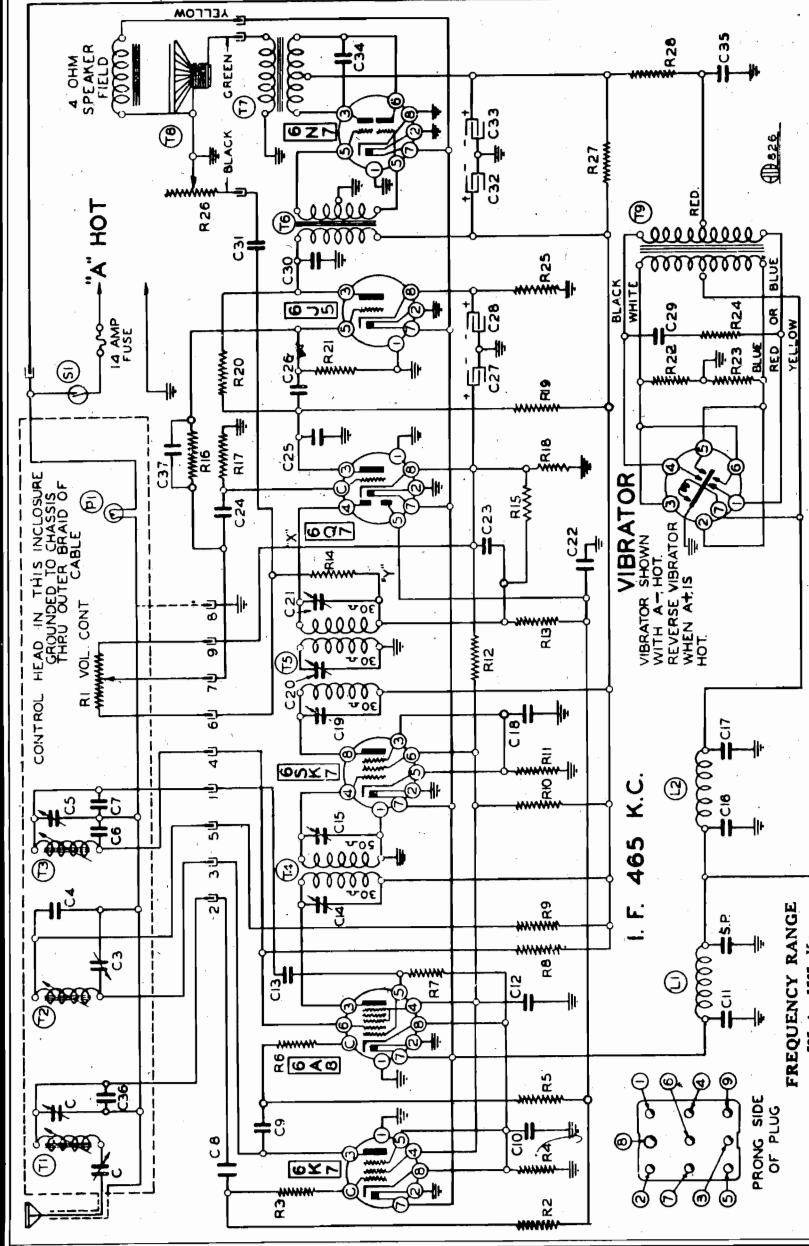


Fig. 2—Front View of Remote Tuner Unit

MODEL 678, Issue A MARCH 1939 Serial No. 50,001 UP

Part No.	Description	Value
C21	10011	.01 x 400 v.
C22	12815	.0001 Mica
C23	12816	.01 x 400 v.
C24	10011	.01 x 400 v.
C25	10011	.01 x 400 v.
C26	10011	.01 x 400 v.
C27	11978	20 mid-25 w. v. lytic
C28	11978	20 mid-25 w. v. lytic
C29	100101	.0055 x 1600
C30	129114	.0003 Mica
C31	10047	.002 x 600 v.
C32	11978	15 mid-150 w. v. lytic
C33	11978	15 mid-150 w. v. lytic
C34	100103	.004 x 800 v.
C35	1001	.1 x 400 volt
C36	12997	.00005 Mica-5%
C37	12967	.00005 Mica
T1	11118	P. B. Antenna Coil Assembly Complete
T2	10949	P. B. R. F. Coil Assembly Complete
T3	108120B	Input I.F. Coil-465 kc.
T4	108115B	Output I.F. Coil-465 kc.
T5	10584	Audio Driver Transformer
T6	10583	Output Transformer
T7	14155	Power Transformer
T8	10438	"A" Choice
T9	10438	"A" Choice
L1	10519	6-8 v. Pilot Light
L2	10519	6-8 v. Pilot Light
L3	10794	Off on Switch
L4	10794	Vibrator (130 cycle synchronous)
S1	1269	

Part No.	Description	Value
R24	13071	4M ohm-1/2 w.
R25	13092	1M ohm-1/2 w.
R26	10162	1 megohm tone control
R27	130199	1500 ohm Resistor-1 watt
R28	130231	75 ohm-1/2 w.
C1	12480	Antenna Shunt Trimmer
C2	12481	R. F. Shunt Trimmer
C3	100102	R. F. Shunt Trimmer
C4	12480	Antenna Shunt Trimmer
C5	12481	R. F. Shunt Trimmer
C6	129136	Oscillator Shunt Trimmer
C7	129137	Oscillator Shunt Trimmer
C8	12997	.00005 Mica
C9	1292	.00005 Mica-5%
C10	11625	.05 x 200 v.
C11	1296	.0025 Mica
C12	12912	.25 x 400 v.
C13	12912	.0025 Mica
C14	10031	Plate Trimmer on Input I.F. Trans.
C15	10031	Grid Trimmer on Output I.F. Trans.
C16	10031	Plate Trimmer on Output I.F. Trans.
C17	1009	Grid Trimmer on Output I.F. Trans.
C18	1009	Plate Trimmer on Output I.F. Trans.
C19	1009	Grid Trimmer on Output I.F. Trans.
C20	11625	.05 x 200 v.
C21	11625	.05 x 200 v.
C22	1295	.0001 Mica
C23	1295	.0001 Mica

Diagram Ref. No.	Part No.	Description	Value
R1	100161	1.2 megohm volume control	
R2	130175	500 ohm-1/2 w.	
R3	130275	400 ohm-1/2 w.	
R4	13079	500 ohm-1/2 w.	
R5	13019	1 megohm-1/2 w.	
R6	130275	500 ohm-1/2 w.	
R7	13012	50M ohm-1/2 w.	
R8	13021	50M ohm-1/2 w.	
R9	13021	30M ohm-1/2 w.	
R10	130196	20M ohm-1 watt	
R11	130235	1500 ohm-1/2 w.	
R12	1307	40M ohm-1/2 w.	
R13	13019	1 megohm-1/2 w.	
R14	13020	100M ohm-1/2 w.	
R15	13018	600M ohm-1/2 w.	
R16	130257	5 megohm-1/2 w.	
R17	13019	1 megohm-1/2 w.	
R18	130101	500 ohm-1/2 w.	
R19	13018	20M ohm-1/2 w.	
R20	13038	500M ohm-1/2 w.	
R21	13038	100 ohm-1/2 w.	
R22	130269	100 ohm-1/2 w.	
R23	130269	100 ohm-1/2 w.	

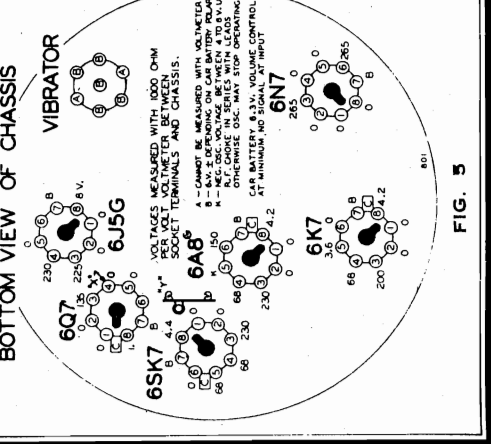


FIG. 5

MODEL 678, Issue A
Tuner Data, Notes

GAMBLE-SKOGMO INC.

3. To release the last pushbutton push in very slightly any one of the other pushbuttons. This will trip the latching mechanism.
4. To lock the tuner mechanism push on the dial tuning knob hard enough to make it stay latched in. Rotate the dial tuning knob to the right (clockwise) until the dial tuning knob is turned in by the tuner without forcing it. (NOTE: All the pushbuttons must be in out position which locks the tuner mechanism.)

RADIO LOCATION AND MOUNTING:

Determine the most satisfactory mounting position. Lift the radio case up and temporarily hold it in the proposed position. The case should be mounted high enough to avoid interference with car controls and the location of the Remote Tuner unit in respect to the radio case should be considered. The Remote Tuner unit should be connected to the antenna cable which connects the Remote Tuner unit to the radio case. (This cable should not be altered in any manner.) Mark location for the mounting bolt, drill one one-half inch (1/2") hole, making certain that the paint around the hole on the engine side of the fire wall is scraped clean to insure a good ground connection between receiver and the frame of the car.

CAUTION: Before fastening the radio unit read very carefully paragraph on the polarities CONNECTIONS TO BATTERY. The polarity of the vibrator unit must be determined and must be thoroughly understood as the radio will not operate unless the polarity of the vibrator unit corresponds with the polarity of the storage battery in the car.

TUNER UNIT MOUNTING:

It may be necessary in some instances to move dash panel light switches or car heater control switches, however, in the majority of cases the Remote Tuner unit will mount very satisfactorily under the dash and the left hand side of the car. Make certain as close to the steering column as possible to allow clearance for the emergency brake which is mounted on the extreme left hand side of some makes of cars.

Details for mounting are shown in Fig. 1A and Fig. 1B. General installation view.

The bracket No. 115325 for mounting the Remote Tuner Unit is made of rows of holes to facilitate the best mounting in all makes of cars.

Use the bracket as a template, marking the lip of the dash for three mounting holes for the bracket and two clearance holes for the Remote Tuner unit mounting bolts. (See Fig. 1A.)

Mount the bracket using either the flat head self-tapping screws or the flat head machine screws, lockwashers and nuts. Insert the two Remote Tuner Unit mounting bolts through the holes in the unit using the two fibre washers to hold the bolts in place while mounting the unit to the bracket (see Fig. 1B). Screw the mounting bolts into the threaded holes in the mounting bracket (eight threaded holes are provided back as desired). Fasten the unit securely.

Connect the battery cable, number 107237 coming from the rear of the Remote Tuner Unit.

Connect the R. F. cable assembly (cable number 107231) by inserting the plug of the cable into the receptacle socket on the side of the radio unit case. Screw the threaded cap of the R. F. cable assembly into the threaded fitting on the radio case securely. (See Fig. 1A.)

Important: This cable should not be altered in any manner.

This unit has been carefully designed to facilitate servicing; the entire case can be removed by loosening three wing head screws, exposing all tubes, vibrator and receiver circuits. All adjustments are accessible being located on a slide which can be removed from the front of the case. (See Fig. 4, a full size illustration of the front of the case.) A full size illustration of the eight inch electro dynamic speaker is used. The output of the receiver is 9 watts.

1. Punch out from the set of station call letter tabs supplied, the call letters of the stations you have selected.
2. On top of each pushbutton a slot is provided for inserting the call letter tabs, (see A, Fig. 2).
3. Insert the call letter tabs.

NOW, PROCEED AS FOLLOWS:-

1. Push the dial tuning knob to the left (counter-clockwise) until the dial tuning knob can not be turned any further without forcing.
2. Rotate the dial tuning knob to the left (counter-clockwise) until the dial tuning knob is held enough to make it latch in.

You will note that as the knob is rotated it will turn easily until the dial tuning knob is held enough to make it latch in, and then a slight amount of force will be required to actually start unlatching the tuner mechanism. Beyond this point the knob will turn quite easily again until the tuner mechanism is completely unlatched. At this point the dial tuning knob will turn in by the tuner without forcing any further. The tuner mechanism is now unlatched.

(NOTE: Automatic tuner mechanism is locked tight when radio is shipped from the factory.)

3. Push in all the way any one of the pushbuttons and hold it down until the dial tuning knob is held enough to make it latch in. The reason for holding the dial tuning knob in firmly when the pushbutton is pressed in is due to the latching mechanism in the Remote Tuner unit which is so connected to the vibrator unit that when a pushbutton is pressed in, it sets up a station for automatic tuning, however, it is necessary that both the dial tuning knob and the pushbutton be latched in together.

4. Press in on the pushbutton which is latched in. Holding it in firmly, tune in by means of the dial tuning knob until the station indicated on the station call letter tab on the dial tuning knob is heard. (NOTE: The station call letter tab on the dial tuning knob is held in by the pushbutton and forth (while still pressing in firmly on the pushbutton), until the station is clearest. The station will then be accurately tuned in.

5. Push in all the way another pushbutton, at the same time holding the dial tuning knob in so that both the pushbutton and the dial tuning knob are latched in together. (NOTE: The pushbutton is held in by the station indicated on the call letter tab on this pushbutton.

6. Follow this procedure until you have tuned in all of your favorite stations.
7. When the last pushbutton has been properly set up, it is now necessary to lock the tuner mechanism. To release the tuner mechanism can be locked. To release the tuner mechanism, press in very slightly any one of the other pushbuttons. This will trip the latching mechanism and all the pushbuttons will be released to out position.

8. Now, Press on the dial tuning knob hard enough to make it latch in. Rotate the dial tuning knob to the right (clockwise) until the knob can not be turned any further. This will lock the tuner mechanism and all the stations that have been set up on the pushbuttons will be locked in place for automatic tuning.

Press in any one of the pushbuttons and—YOUR FAVORITE STATION IS SELECTED.

THE IMPORTANT STEPS TO REMEMBER WHEN SETTING UP STATIONS ON THE PUSHBUTTONS FOR AUTOMATIC TUNING ARE:

1. To unlatch the tuner mechanism press on the dial tuning knob to the left (counter-clockwise) until the dial tuning knob is held enough to make it latch in. The dial tuning knob is held in by the tuner without forcing it.
2. To set a pushbutton, push in all the way and hold in firmly both the pushbutton and the dial tuning knob so that both latch in. Hold in firmly the pushbutton and tune in the station by means of the dial tuning knob. Set all the pushbuttons in the same manner.

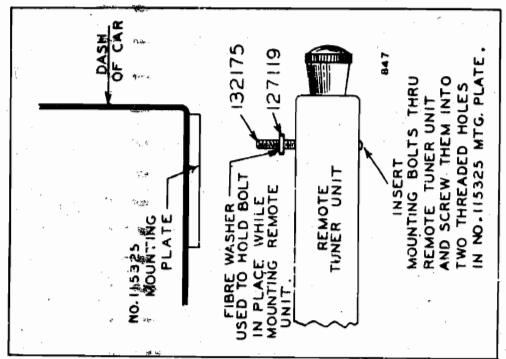


Fig. 1B—Remote Mounting

ANTENNA CONNECTION:
Insert the antenna plug in cable into the back of the remote tuner unit (see Fig. 1A). The wire at the other end of the antenna cable is connected to the lead-in wire from the car wiring as far as possible and the pigtail of the antenna cable shield at the antenna end.

A 36 inch shielded antenna cable is regularly supplied. If a roof or door hinge type antenna is used, this cable will be long enough in practically all cases to reach the corner post of column at which the antenna lead comes down. The antenna cable is picked up into the column as far as possible. The reason for this is to avoid the antenna cable being picked up by any unshielded portion of the antenna cable shielding must be extended to the antenna in all cases. The pigtail on the end of the antenna cable shield must be well grounded at the extreme antenna end. If it is necessary to ground the antenna cable shield, a pigtail is put on the end of the shielded extension and that it is well grounded at the extreme antenna end.

To extend the antenna cable shielding, the antenna lead wire should be covered with heavy insulation, such as loom, to properly separate the shielding from the wire. Then connect the two wires together and connect the two shields to the antenna wire.

Antennas suitable for steel roof and convertible cars can be purchased from your dealer.

The majority of 1937, 1938 and 1939 cars have steel roofs, and the majority of 1936 and 1937 cars have convertible tops. The antenna lead wires on these cars (except Plymouth—but including Chrysler, Dodge and De-Soto) have a steel roof, separated from the body proper, which is used as an antenna.

PROCEDURE FOR SETTING THE AUTOMATIC PUSHBUTTONS:

There are six pushbuttons on the Remote Tuner Unit by means of which six stations may be set up for automatic tuning. (See Fig. 2).

Make a list of local stations you tune in regularly; any

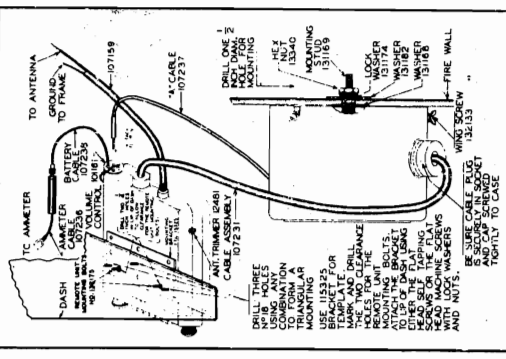


Fig. 1A—General Installation View

CONNECTIONS TO BATTERY:
CAUTION: Before making any battery connections, check the polarity of the vibrator unit (contained in radio unit) to determine whether it corresponds with the polarity of the storage battery in the car.

The radio is shipped from the factory with the vibrator unit in the positive position so that it will operate in cars in which the positive (-) sign on the top of the vibrator is opposite the red dot on the top of the transformer cover; (see Fig. 3, top view of radio chassis).

Check the polarity of the storage battery in car either by checking the current wire connections on the battery or by using a voltmeter.

The ammeter cable, number 107236 (red wire with fuse receptacle at other end), must be connected to battery terminal (big at other end), must be connected to ammeter, number 10062 to battery terminal of ammeter, other end of capacitor to convenient grounded screw on back of instrument dash panel.

Make certain the fuse in the receptacle and the ammeter cable is properly connected to the short cable (number 107238), coming from the Remote Tuner Unit. (See Fig. 1A.)

It is advisable to connect the ammeter cable to the terminal by the radio to indicate on the ammeter, the current drawn by the radio to prevent any additional motor interference may be encountered.

GENERATOR INTERFERENCE:

Remove the generator cutout mounting screw and fasten the condenser (10061) bracket on the generator cutout mounting lug. Replace the cutout mounting screw and tighten down securely.

Connect the condenser lead to the battery terminal of the cutout. The generator condenser is absolutely necessary as it will eliminate a high pitched whining noise which would be heard as the motor is accelerated.

ALIGNMENT PROCEDURE

Failure to operate, noisy or weak reception is usually due to defective tubes, the tubes making poor contact with sockets or grid clips making poor contact with the caps of the tubes. Tubes may be checked very easily by replacing with other tubes which are known to be good. If fuse blows out frequently, the trouble is probably in the vibrator, it should be replaced. Do not attempt to make any adjustments on the vibrators.

ALIGNING INSTRUCTIONS:

All of the adjustments have been very carefully set with signal generators at the factory and require no further adjustment, unless it becomes necessary to replace a coil or transformer, or if the adjustments have been tampered with in the field. Under no circumstances attempt any adjustments without first making certain that adjustment is necessary and only after voltages, tubes and condensers have been checked and found to be normal. To properly re-align this receiver, a test oscillator, as well as an output meter, must be used.

SERVICE NOTES:
 Voltages taken from different points of circuit to chassis are measured with volume control full on, all six tubes in their sockets and speaker connected, with a 6.3 volt meter having a resistance of 1000 ohms per volt. These voltages are clearly indicated on the voltage chart.

In order to prevent signal from acting upon A.V.C. and affecting accuracy of voltage measurements, aerial and ground leads should be short circuited while making measurements.

All voltages are to be measured with 6.3 volts input to receiver. Resistances of coils and transformer windings are indicated in ohms on schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating which is known to be good, until the defective unit is located.

The following equipment is required for aligning:

- An all wave signal generator which will provide an accurately calibrated signal at the test frequencies as listed.
- Output indicating meter.
- Non-metallic screwdriver.
- Dummy antennas—1 mf., 125 mmf.

DESCRIPTION:
 Model 678 is a six tube superheterodyne receiver having a chassis from different points of circuit to chassis are measured with volume control full on, all six tubes in their sockets and speaker connected, with a 6.3 volt meter having a resistance of 1000 ohms per volt. These voltages are clearly indicated on the voltage chart.

The I. F. frequency used is 465 K. C. The output I. F. and affecting accuracy of voltage measurements, aerial and ground leads should be short circuited while making measurements.

All voltages are to be measured with 6.3 volts input to receiver. Resistances of coils and transformer windings are indicated in ohms on schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating which is known to be good, until the defective unit is located.

The following equipment is required for aligning:

- Volume control—Maximum all adjustments.
- Connect radio chassis to ground post of signal generator with a short heavy lead.
- Connect dummy antenna value in series with generator output lead.
- Connect output meter across primary of output transformer.
- Allow chassis and signal generator to "heat up" for several minutes.

BAND	SIGNAL GENERATOR Frequency Setting Dummy Antenna	Connection to Radio	Remote Tuner Dial Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	.1 MFD. 465 Kc.	Grid of 6SK7 I. F. Tube	Set dial at 1400 Kc.	Trimmers C19, C20 (See Fig. 3)	Output I. F.	See note "A" Adjust to maximum output
	.1 MFD. 465 Kc.	Grid of 6SK7	Set dial at 1400 Kc.	Trimmer C21 (See Fig. 3)	Output I. F.	See note "B" Adjust to maximum output
	.1 MFD. 465 Kc.	Grid of 6A8	Set dial at 1400 Kc.	Trimmers C14, C15 (See Fig. 2)	Input I. F.	Adjust to maximum output
BROAD-CAST BAND	125 mmf. 125 mmf. 125 mmf.	Antenna lead Antenna lead Antenna lead	Set dial at 1565 Kc. Set dial at 1400 Kc. Set dial at 600 Kc.	Trimmer C5 (See Fig. 4) Trimmers C1, C3 (See Fig. 4) Trimmer C2 (See Fig. 4)	Oscillator Antenna and R. F. Antenna series adj.	Adjust to maximum output Adjust to maximum output See note "C" ANTENNA SERIES TRIMMER C1, C2, C3, C5

NOTE: "A" IMPORTANT: To align the output I. F. transformer without using a cathode ray oscillograph a 10M ohm resistor must be shunted across the diode tuned circuit. Connect the resistor as indicated by points "X" and "Y" on the circuit diagram and the bottom view of the radio chassis Fig. 5. A red dot on top of output I. F. can designate location of trimmer "C5".

NOTE "B": Before adjusting trimmer C21 disconnect the 10M ohm resistor. Under no circumstances re-adjust trimmers C19 or C20 after the 10M ohm resistor has been removed.

For alignment of the output I. F. transformer using a cathode ray oscillograph the 10M ohm resistor is not used.


NOTE "C": Maximum gain for this adjustment depends on the capacity of the antenna system of the car in which the radio is installed. For the proper alignment of this adjustment: see "Adjusting Antenna Trimmer".

ALIGNMENT OF THE IRON CORES
 The iron cores for the antenna, R. F. and oscillator permeability coils have been very carefully adjusted at the factory and require no further adjustment, unless it becomes necessary to replace a coil, or if the adjustments have been tampered with.

The procedure for aligning the iron cores will be supplied with replacement coils which ordered.

TUBE COMPLEMENT:
 The tube complement of this chassis consists of the following: 1—Type No. 6A8—Pentagrid Converter (composite first detector, A. V. C. and First Audio. 1—Type No. 6SK7—Remote Cut-off Pentode as an I. F. Amplifier. 1—Type No. 6K7 R. F. Amplifier. 1—Type No. 6Q7—Duplex Diode Triode Second Detector, A. V. C. and First Audio. 1—Type No. 615G—Driver Amplifier. 1—Type No. 6N7—Push-Pull Output Amplifier.


Fig. 4.—Bottom View of Remote Tuner

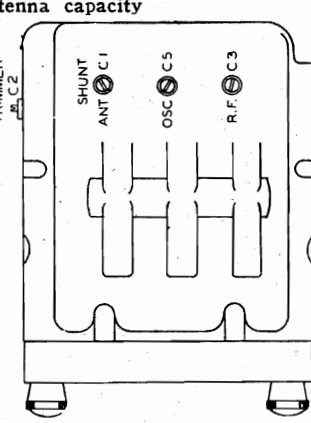

MODEL 636

Schematic, Voltage Socket, Trimmers Alignment

GAMBLE-SKOGMO INC.

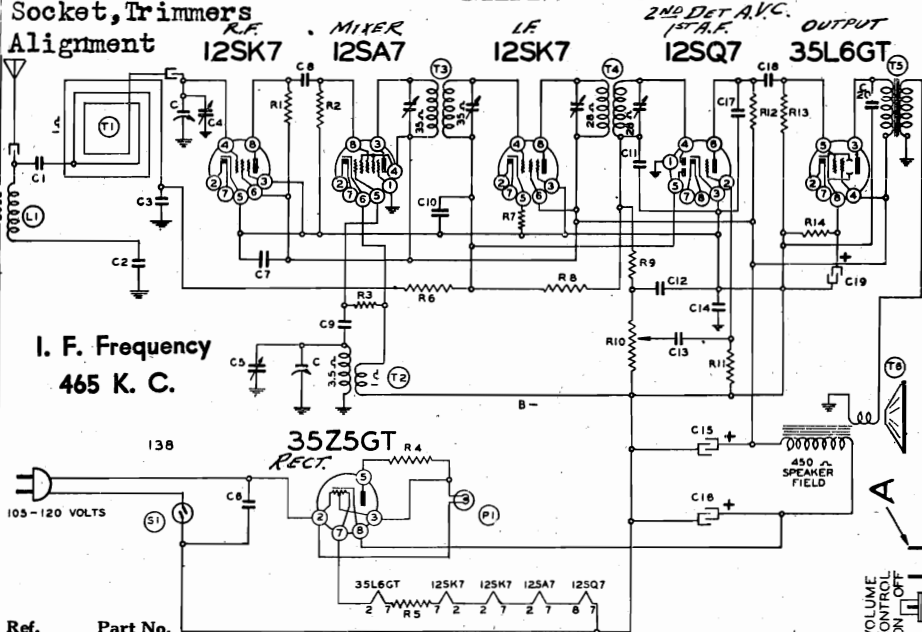


FOR TUNER ADJUSTMENT SEE MODEL 677A VOL. X GAMBLE PAGE 10 - 20.

I. F. Frequency 465 K. C.

Ref.	Part No.	Description
R1	130218	5M ohm—1/4 w.
R2	13020	100M ohm—1/4 w.
R3	130176	20M ohm—1/4 w.
R4	130295	25 ohm—1 watt
R5	130295	25 ohm—1 watt
R6	130100	150M ohm—1/4 w.
R7	130203	40 ohm—1/4 w.
R8	1304	3 megohm—1/4 w.
R9	13012	50M ohm—1/4 w.
R10	101127	1 megohm volume control
R11	130257	5 megohm—1/4 w.
R12	13011	250M ohm—1/4 w.
R13	1303	500M ohm—1/4 w.
R14	130166	150 ohm—1/4 w.
C	102104B	2 gang variable condenser
C1	12951	.000125 Mica
C2	12912	.00025 Mica
C3	10026	.02 x 400 v.
C4		Antenna Trimmer on gang
C5		Oscillator trimmer on gang
C6	1001	.1 x 400 v.
C7	1006	.25 x 200 v.
C8	1295	.0001 Mica
C9	1295	.0001 Mica
C10	1009	.05 x 200 v.
C11	1295	.0001 Mica
C12	1295	.0001 Mica
C13	10012	.003 x 600 v.
C14	100110	.2 x 400 v.
C15	11953E	30 mid. lytic—150 w. v.
C16	11953E	30 mid. lytic—150 w. v.
C17	1295	.0001 Mica
C18	10078	.01 x 200 v.
C19	11953E	40 mid.—25 w. v. lytic
C20	10026	.02 x 400 v.

Ref.	Part No.	Description
T1	111139	Loop Antenna
T2	110128	Oscillator Coil
T3	108140F	Input I. F. Coil
T4	108145B	Output I. F. Coil
T5	10588B	Output Transformer
T6	114116G	5" Dynamic Speaker (450 ohm field)
L1	1237	Antenna Loading Coil
P1	107249	6-8 volt, Pilot light - T-47
S1		Off-on Switch on Volume Control

FIG. 1—TOP VIEW

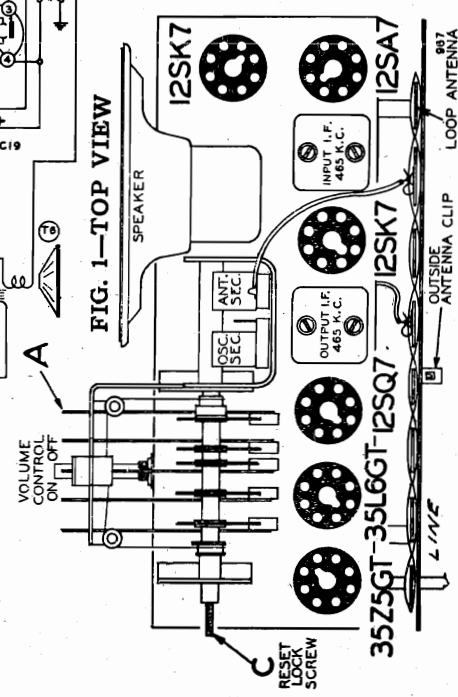

PARTS

Ref.	Part No.	Description
T1	111139	Loop Antenna
T2	110128	Oscillator Coil
T3	108140F	Input I. F. Coil
T4	108145B	Output I. F. Coil
T5	10588B	Output Transformer
T6	114116G	5" Dynamic Speaker (450 ohm field)
L1	1237	Antenna Loading Coil
P1	107249	6-8 volt, Pilot light - T-47
S1		Off-on Switch on Volume Control

BOTTOM VIEW OF CHASSIS

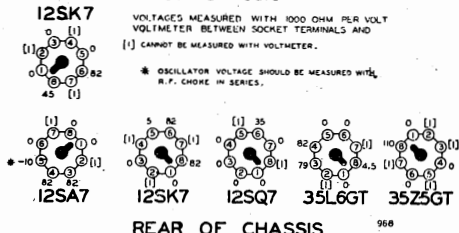


FIG. 3

ALIGNMENT PROCEDURE

- Volume control—Maximum all adjustments.
- Connect B - of radio chassis to ground post of signal generator through .1 Mfd. condenser.
- Connect dummy antenna value in series with generator output lead.
- Connect output meter across primary of output transformer.
- Allow chassis and signal generator to "heat up" for several minutes.

ALIGNING INSTRUCTIONS:

Do not remove the back cover of the radio which contains the loop antenna from the chassis. It is important during alignment that the same distance between the loop antenna and the chassis be maintained as when the chassis is installed in the cabinet.

Slight adjustments to the oscillator and antenna circuits can be made without removing the chassis from the cabinet through two holes which are provided on the bottom of the cabinet.

The two adjustments on the variable gang condenser can be reached with a long insulated type screw driver through these two holes.

The following equipment is required for aligning:

- An all wave signal generator.
- Output indicating meter.
- Non-metallic screwdriver.
- Dummy antennas—1 Mfd.

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Variable Condenser Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Grid of 12SA7	Rotor full open (Plates out of mesh)	Four Trimmers on Top (See Fig. 1)	Output and Input I.F.	Adjust to maximum output
BROAD-CAST BAND	1650 Kc.	.1 MFD.	Grid of 12SA7	Rotor full open (Plates out of mesh)	Trimmer bottom of Front section of gang. (See bottom of radio)	Oscillator	Adjust to maximum output
	1400 Kc.	See Note "A"		Set dial at 1400 Kc.	Trimmer bottom of Rear section of gang. (See bottom of radio)	Antenna	Adjust to maximum output

NOTE "A" Lay the output lead from the generator in back of the loop antenna. Turn up the output of the generator, picking up the energy in the loop antenna without any electrical connection from the generator.

Power Consumption.....	40 Watts	
Power Output.....	800 Milliwatts Undistorted, 1.5 Watts Maximum	7-39
Intermediate Frequency.....	465 K.C.	

GAMBLE-SKOGMO INC.

MODEL 767, Series A
Schematic, Socket
Trimmers

2-Band A. C. Superheterodyne Receiver




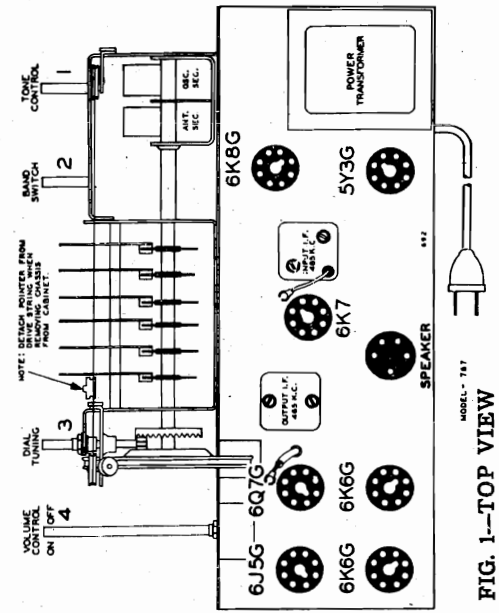


FIG. 1--TOP VIEW

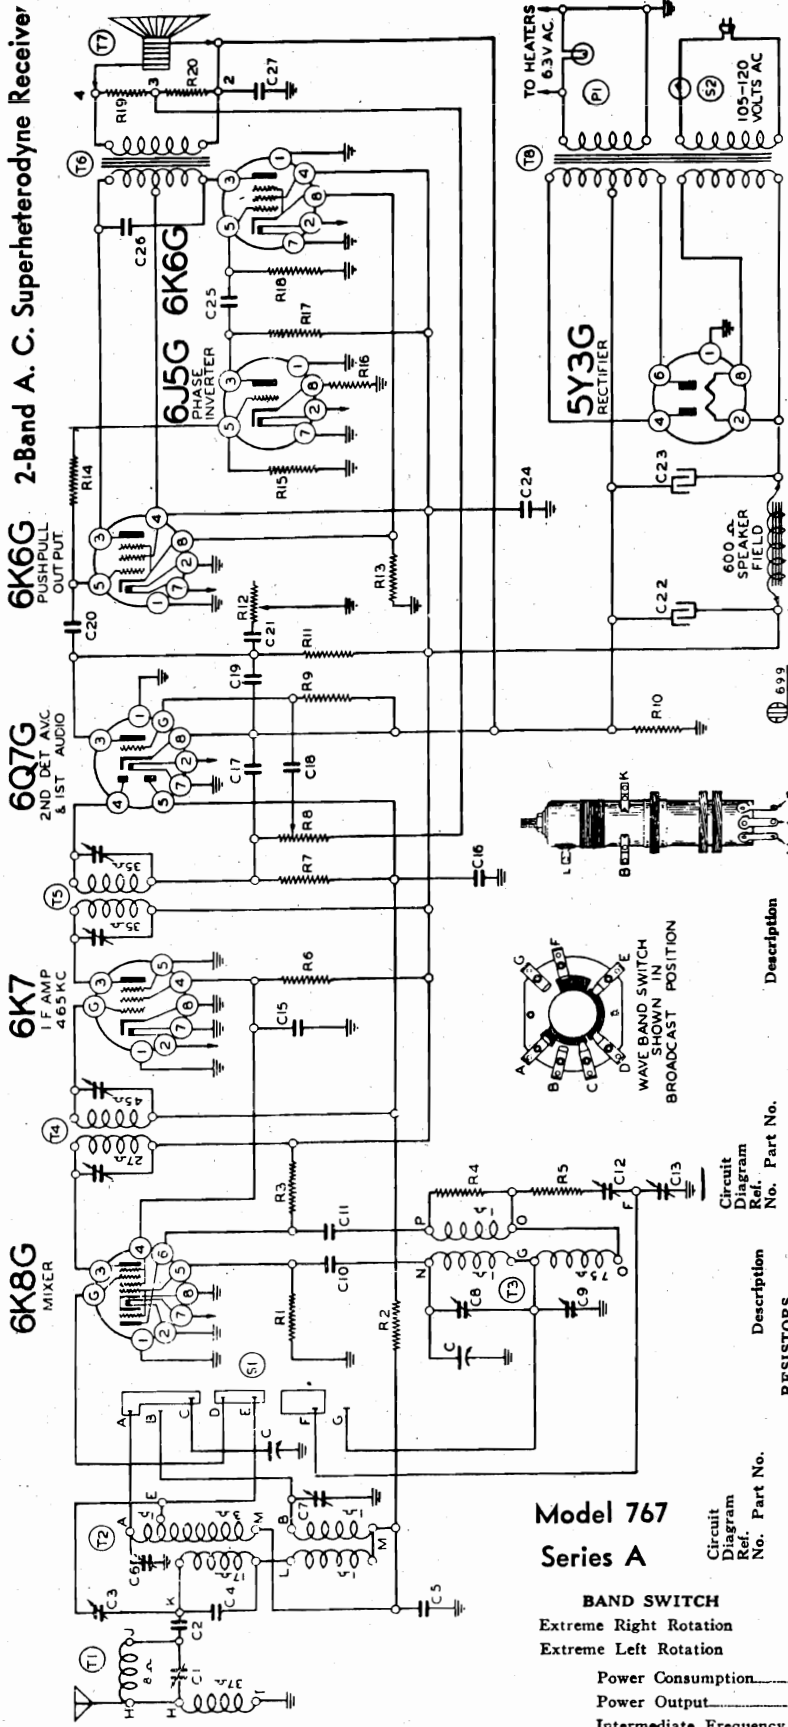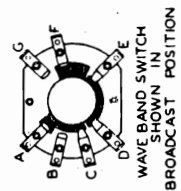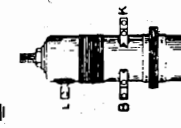

Circuit Diagram Ref. No.	Part No.	Description
C10	12939	.0005 mica
C11	10035	.001 .600 v.
C12	12466	.000422 center type
C13	12466	.001356 B. C. compression type
C15	1001	.1 x 400 v.
C16	1009	.05 x 200 v.
C17	1295	.0001 mica
C18	10019	.006 x 600 v.
C19	1292	.0005 mica
C20	10026	.02 x 400 v.
C21	10013	.05 x 400 v.
C22	11974	10 mid. lyric-350 w. v.
C23	11973	16 mid. lyric-400 w. v.
C24	10026	.02 x 400 v.
C25	10026	.02 x 400 v.
C26	10012	.003 x 600 v.
C27	10020	.1 x 200 v.
T1	108125	Wave Trap
T2	11112	B. C. and S. W. Antenna Coils
T3	11098	B. C. and S. W. Oscillator Coils
T4	108105B	Input I. F. -465 kc.
T5	108106M	Output I. F. -465 kc.
T6	10554B	Output Transformer
T7	114135	8" Dynamic Speaker (600 ohm field)
T8	114134	6" Dynamic Speaker (600 ohm field)
T9	10445B	Power Band Switch
S1	12568	Wave Band Switch
S2	12568	Off-on Switch on Vol. Control
S3	10794	6.8 v. Pilot Light
R1	13094	50M ohm-1/2 w.
R2	13011	250M ohm-1/2 w.
R3	13030	25M ohm-1 watt
R4	13031	1500 ohm-1/2 w.
R5	130231	75 ohm-1/2 w.
R6	13090	25M ohm-1 watt
R7	1304	3 megohm-1/2 w.
R8	101144	15 megohm-1/2 w.
R9	13025	30 megohm-1/2 w.
R10	13023	100M ohm-1/2 w.
R11	13013	100M ohm-1/2 w.
R12	10145	1 megohm-1 watt
R13	130220	300 ohm-1 watt
R14	130163	400M ohm-1/2 w.
R15	130103	100M ohm-1/2 w.
R16	130218	5M ohm-1/2 w.
R17	13094	50M ohm-1/2 w.
R18	130102	500M ohm-1/2 w.
R19	130168	100 ohm-1/2 w.
R20	130215	25 ohm-1/2 w.
C1	10292	2 gang variable condenser
C2	12467	Wave Trap Trimmer
C3	10011	.01 x 400 v.
C4	12468	Image Adj. Trimmer
C5	129132	Image Adj. Trimmer
C6	129131	.000125 mica
C7	129131	.000125 mica
C8	12469	B. C. Antenna Trimmer
C9	12470	S. W. Antenna Trimmer
C10	12470	B. C. Oscillator Trimmer
C11	12470	S. C. Oscillator Trimmer

Model 767
Series A

BAND SWITCH
Extreme Right Rotation
Extreme Left Rotation

BAND
Short Wave
Broadcast

FREQUENCY RANGE
5.6 to 18 MC.
540 to 1730 KC.

Power Consumption.....80 Watts (At 115 volts 50-60 cycles)
Power Output.....5 Watts Undistorted, 7 Watts Maximum
Intermediate Frequency.....465 KC.

MODEL 767, Series A
Tuner Data

GAMBLE-SKOGMO INC.

SERVICE NOTES:

Voltage taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.

IN ORDER TO PREVENT SIGNAL FROM ACTING UPON AVC AND AFFECTING ACCURACY OF VOLTAGE MEASUREMENTS, AERIAL AND GROUND LEADS SHOULD BE SHORT CIRCUITED WHILE MAKING MEASUREMENTS.

All voltages are to be measured with 115 volts A.C. line or a fully charged 6 volt storage battery.

Resistances of coils and transformer windings are indicated in ohms on schematic circuit diagrams.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

Excessive hum, stuttering, low volume and a reduction in all D.C. voltages is usually caused by a shorted electrolytic condenser, open by-pass condensers frequently cause oscillation and distorted tone.

SETTING THE AUTOMATIC TUNER LEVERS:

IMPORTANT—Read carefully before setting the automatic levers.

There are six levers by means of which six stations may be selected. Make a list of local stations or stations you tune in regularly; any number up to and including six.

Punch out from the set of station call letter tabs supplied, the call letters of the stations you have selected.

On the front of each automatic tuner lever button an opening is provided for inserting the call letter tabs.

Insert the call letter tabs in the rectangular openings of each of the automatic tuner buttons. One of the small celluloid tabs supplied should be inserted into place over each of the station call letter tabs.

NOW. PROCEED AS FOLLOWS:—

1. Pull the dial tuning knob all the way out (See Illus. "B," Fig. 3) and rotate the tuning knob to the left (counterclockwise) until it cannot be turned any further (See Illus. "D," Fig. 3). This will unlock the automatic tuner mechanism. (NOTE:—Automatic tuner mechanism is locked tight when radio is shipped from the factory.)

2. Press down all the way any one of the automatic tuner levers. Holding it down firmly, press in on the dial tuning knob No. 3 and tune in the station indicated on the station call letter tab on this lever. You will note that in order to

tune the station, the dial tuning knob will have to be pressed in (See Illus. "E," Fig. 3). Turn the dial tuning knob very slowly back and forth (while still holding the automatic tuner lever in downward position), noting the width of the shadow on the screen of the cathode-ray tuning indicator. Minimum width on the tuning indicator indicates the ideal tuning position (resonance). The station will then be clearest and accurately tuned in.

3. Press down another automatic tuner lever. Holding it down firmly, press in on the dial tuning knob and carefully tune in the station indicated on the call letter tab on this lever.

4. Follow this procedure until you have selected all of your favorite stations.

5. Pull the dial tuning knob all the way out (See Illus. "B," Fig. 3) and rotate the tuning knob to the right (clockwise) until it cannot be turned any further (See Illus. "C," Fig. 3). This will lock the automatic tuner mechanism and the stations you have set up for automatic tuning will be locked in place. After you have locked the tuner mechanism, push the dial tuning knob in.

6. If you should desire to change any station you selected to another, pull the dial tuning knob all the way out and rotate the knob to the left (counterclockwise) and unlock the tuner mechanism. Select the new station as explained.

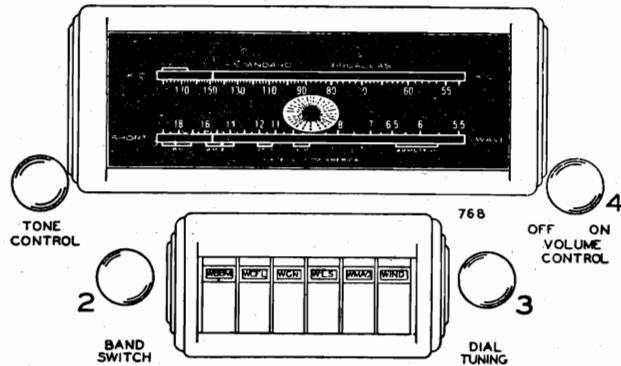


FIG. 2—FRONT VIEW

(NOTE:—If the dial mechanism works hard when setting up a new station for one of the automatic tuner levers, it is due to the tuner mechanism not being unlocked all the way. Pull the dial tuning knob out all the way and rotate the knob to the left (counterclockwise) until it will turn no further. The dial mechanism should work freely with the tuner lever pressed down.)

7. After you have selected the new station, pull the dial tuning knob all the way out and rotate the knob to the right (clockwise) to lock the tuner mechanism. Be sure the knob is turned until it will turn no further, then press the dial tuning knob in.

8. The automatic tuner levers are now set up for quick tuning. Press down the lever key and—YOUR FAVORITE STATION IS SELECTED!

The important steps to remember when setting up stations on the tuner levers for automatic tuning are:

1. To unlock the tuner mechanism pull the dial tuning knob all the way out. You may find it necessary to rotate the knob slightly when pulling it out to make certain that the gears mesh properly. Rotate the dial tuning knob to the left (counterclockwise) as far as it will turn without forcing.

2. To set a lever, press down all the way and hold in this position while tuning in by means of the dial tuning knob the station you want this lever to be tuned to. (NOTE:—you will notice that it will be necessary to keep pressing in on the dial tuning knob while tuning in the station as a spring tends to push the knob out.) Set all the levers in the same manner before locking the mechanism.

3. To lock the tuner mechanism pull the dial tuning knob all the way out. Rotate the dial tuning knob to the right as far as it will turn making certain that it is tight, but it is not necessary to use force.

4. After locking or unlocking the tuner mechanism always return the dial tuning knob to its normal position (pushed in).

KNOB NO.3 (DIAL TUNING)

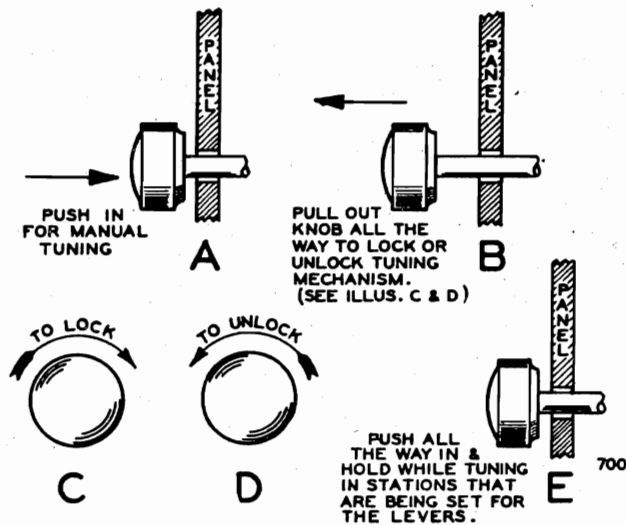


FIG. 3

GAMBLE-SKOGMO INC.

MODEL 767, Series A
Alignment, Voltage
Trimmers

ALIGNMENT PROCEDURE

Model 767 Series A

NOTE "A" Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.

NOTE "B" 1400KC is the image frequency of 2330KC. Adjust Trimmer (C3) until a minimum output is obtained.

- The following equipment is required for aligning:
- An all wave signal generator which will provide an accurately calibrated signal at the test frequencies as listed.
 - Output indicating meter.
 - Non-metallic screwdriver.
 - Dummy antennas—1 mf., 200 mmf. and 400 ohms.

- Volume control—Maximum all adjustments.
- Connect radio chassis to ground post of signal generator with a short heavy lead.
- Connect dummy antenna value in series with generator output lead.
- Connect output meter across primary of output transformer.
- Allow chassis and signal generator to "heat up" for several minutes.

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Band Switch	Variable Condenser Setting	Trimmers Adjusted (In Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	.1 MFD.	Grid of 6K7	Broadcast (Extreme left rotation)	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Grid of 6K8G	Broadcast (Extreme left rotation)	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Input I. F.	Adjust to maximum output
BROAD-CAST BAND	1730 Kc.	200 mmf.	Antenna lead	Broadcast (Extreme left rotation)	Rotor full open (Plates out of mesh)	Trimmer (C9) (See Fig. 4)	Broadcast oscillator	Adjust to maximum output
	1500 Kc.	200 mmf.	Antenna lead	Broadcast (Extreme left rotation)	Set Dial at 1500 Kc.	Trimmer (C6) (See Fig. 4)	Broadcast antenna	Adjust to maximum output
	600 Kc.	200 mmf.	Antenna lead	Broadcast (Extreme left rotation)	Set Dial at 600 Kc.	Trimmer (C12C) (See Fig. 4)	Broadcast oscillator series pad	Adjust to maximum rock dial. (See note "A")
	465 Kc.	200 mmf.	Antenna lead	Broadcast (Extreme left rotation)	Set Dial at 600 Kc.	Trimmer (C1) (See Fig. 4)	L. F. Wave Trap	Adjust for minimum output
IMAGE REJECTION ADJUSTMENTS	2330 Kc.	200 mmf.	Antenna lead	Broadcast (Extreme left rotation)	Pick up signal at 1400 Kc. on dial	Trimmer (C3) (See Fig. 4)	Image rejection	Adjust for minimum output (See note "B")
SHORT WAVE BAND	17 Mc.	400 ohms	Antenna lead	Short Wave (Extreme right rotation)	Set Dial at 17 Mc.	Trimmer (C8) (See Fig. 4)	Short Wave oscillator	Adjust to maximum output
	17 Mc.	400 ohms	Antenna lead	Short Wave (Extreme right rotation)	Dial Set at 17 Mc.	Trimmer (C7) (See Fig. 4)	Short Wave antenna	Adjust to maximum output
	6 Mc.	400 ohms	Antenna lead	Short Wave (Extreme right rotation)	Set Dial at 6 Mc.	Trimmer (C13) (See Fig. 4)	Short Wave oscillator series pad	Adjust to maximum rock dial. (See note "A")



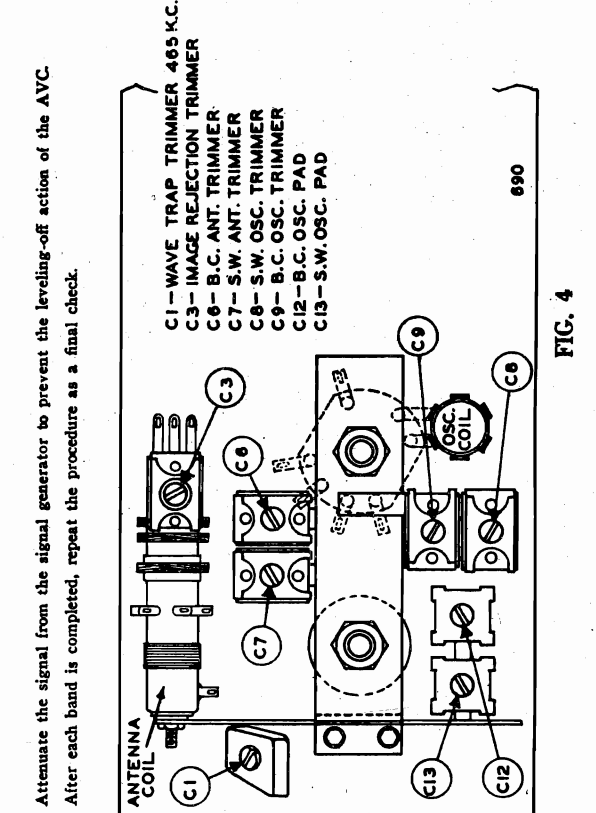


FIG. 4


MODELS 802, 804
Schematic, Voltage
Alignment, Trimmers
Socket

GAMBLE-SKOGMO INC.

DC OPERATION—Filament and ballast tube voltages will be the same as AC (for 117 volt line). The plate, screen and bias voltages will be slightly lower than those shown above. When operated on DC, the rectifier tube acts as a low resistance series resistor with a drop of approximately 6 volts between plate and cathode.

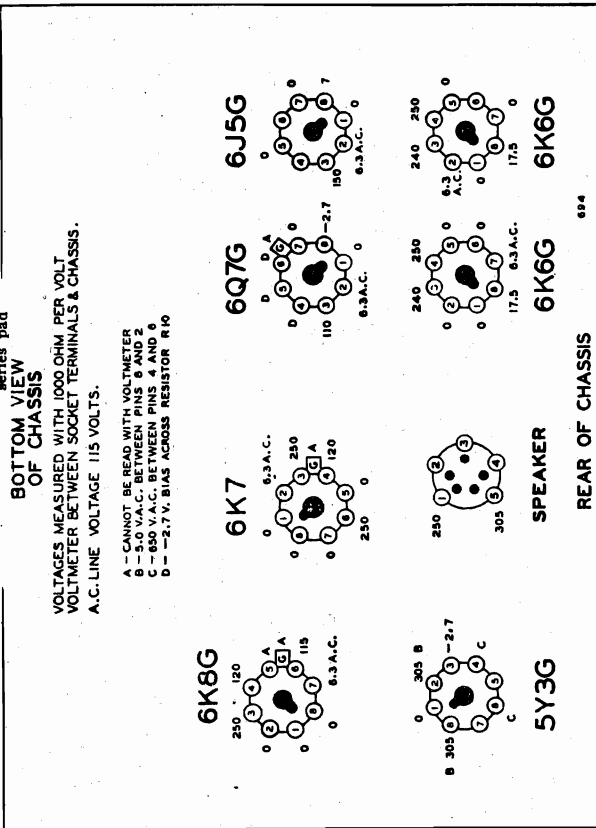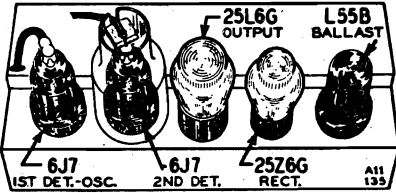

CAUTION—In any service work on the AC-DC chassis, keep it on a wood or other insulated surface to avoid contacts with ground.

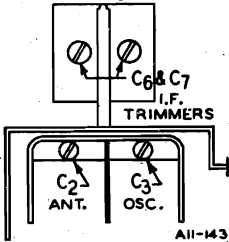

MAY, 1938

Power Consumption - 48 Watts (At 117 volts AC Supply)
Power Output - .8 Watts Undistorted
Selectivity - 30 KC Broad at 100 times Signal.
Tuning Frequency Range - 530 to 1730 KC
Sensitivity - 180 Microvolts Average

ALIGNMENT PROCEDURE

Volume Control—Maximum All Adjustments. Allow Chassis and Signal Generator to "Heat Up" for Several Minutes.

SIGNAL GENERATOR FREQUENCY CONNECTION AT RADIO	DUMMY ANTENNA	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM (See Illustration)
456 KC Grid of 1st Det.	.1 mf.	Turn rotor to full open	I.F. (C6) & (C7)
1730 KC Antenna Lead	200 mmf.	Turn rotor to full open	Oscillator (C3)
1500 KC Antenna Lead	200 mmf.	Turn rotor to max. output	Antenna (C2)


The following equipment is required for aligning: Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed. Output Indicating Meter; Non-Metallic Screwdriver. Dummy Antennas—.1 mf. and 200 mmf.

NOTE—To obtain dial scale calibration, tune in an 800 KC signal. The pointer should be at the 800 KC mark on the dial. If it is not, loosen the pointer screw, set the pointer at the 800 KC mark and retighten the pointer screw.

VOLTAGES AT SOCKETS FOR 117 VOLT AC LINE
See Note Below Regarding Voltages when Operated on DC
Volume Control Maximum—Antenna Lead Grounded—Readings taken with 1000 Ohm-per-volt Meter.


TUBE	FUNCTION	Voltage Between Socket Prong and Ground (Unless Otherwise Indicated)							
		Prong No. 1	Prong No. 2	Prong No. 3	Prong No. 4	Prong No. 5	Prong No. 6	Prong No. 7	Prong No. 8
6J7	1st Det. & Osc.		6.3(1)	98	98			6.3(1)	6.0
6J7	2nd Det.		6.3(1)	10	13			6.3(1)	
25L6G	Output		24(1)	92	98			24(1)	5
25Z6G	Rectifier		24(1)	117(2)	125	117(2)		24(1)	125
L55B	Ballast			56.6(3)				56.6(3)	4.5(4)

(1) AC voltage across terminals 2 and 7. (2) AC voltage to ground. (3) AC voltage across terminals 3 and 7. (4) AC voltage across terminals 7 and 8.

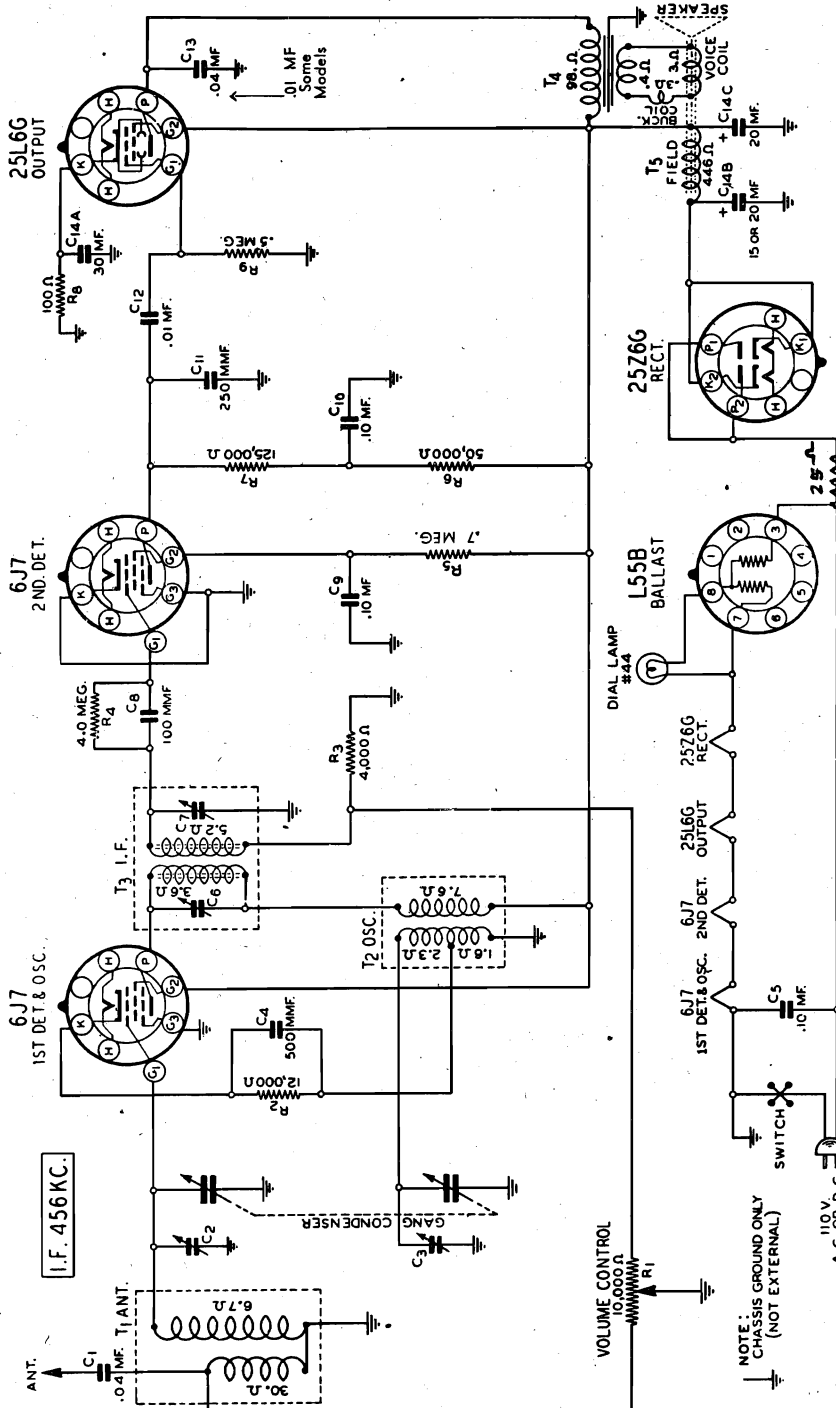

GAMBLE-SKOGMO INC.

MODEL 864
Schematic, Voltage
Socket, Sensitivity




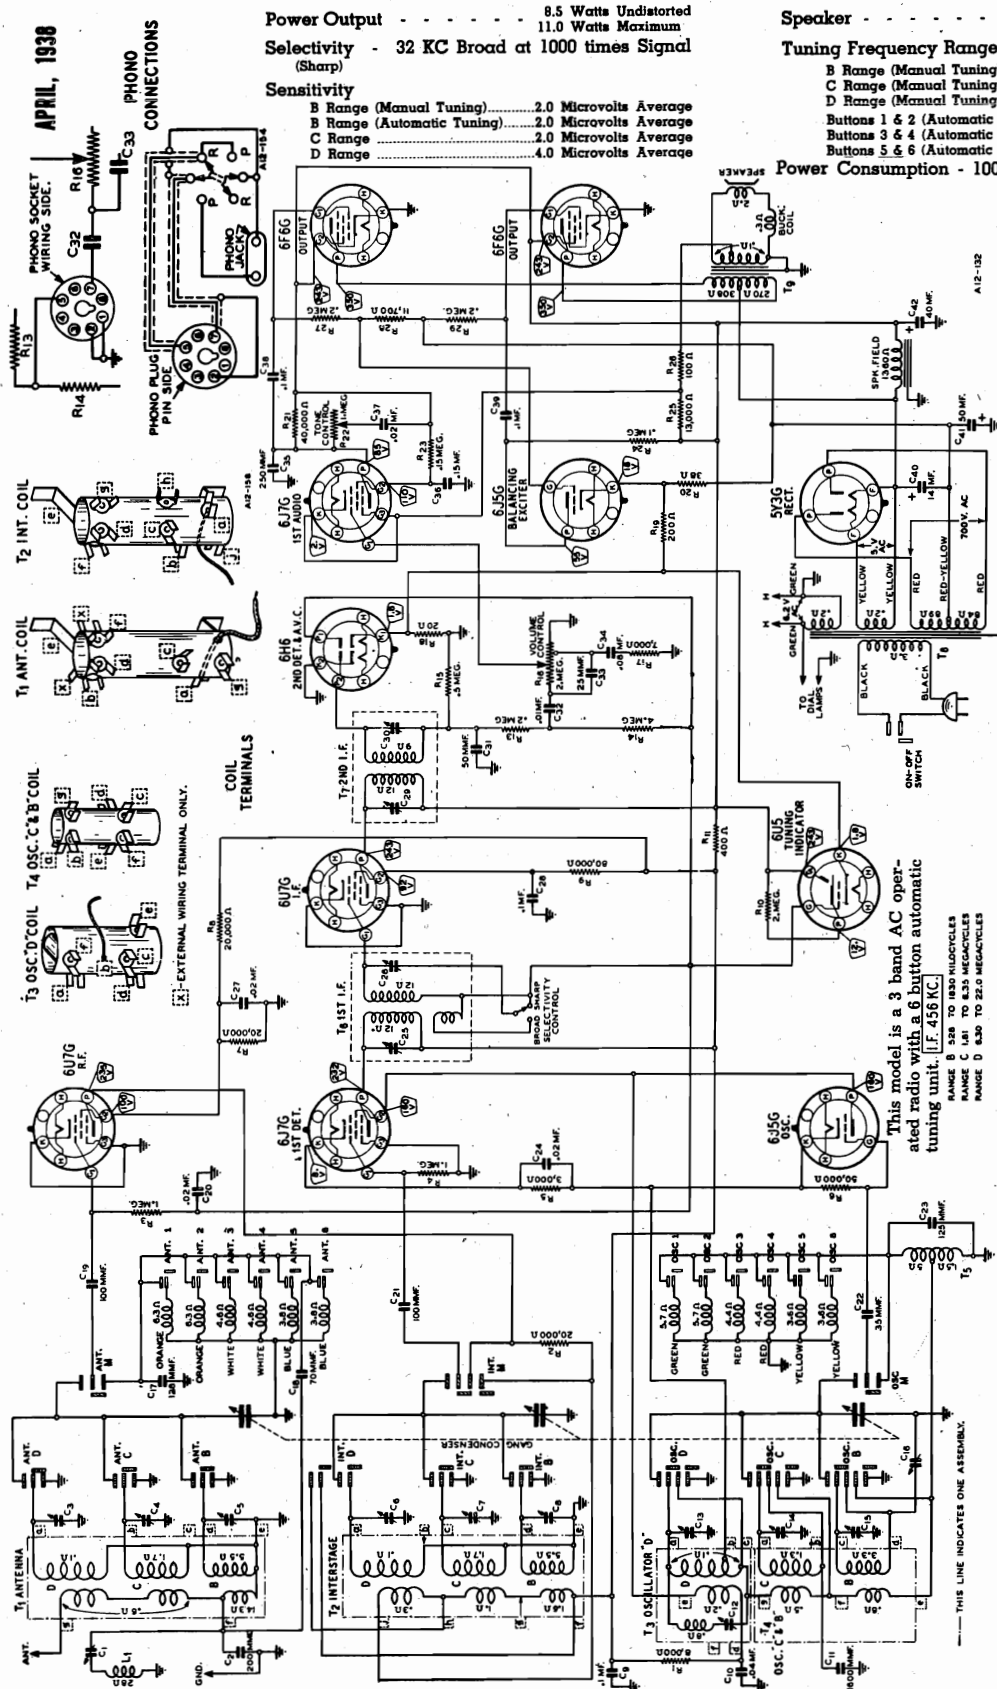


Power Output - - - - - 8.5 Watts Undistorted
11.0 Watts Maximum
Selectivity - 32 KC Broad at 1000 times Signal
(Sharp)
Sensitivity
B Range (Manual Tuning).....2.0 Microvolts Average
B Range (Automatic Tuning).....2.0 Microvolts Average
C Range.....2.0 Microvolts Average
D Range.....4.0 Microvolts Average

Speaker - - - - - 12" Dynamic
Tuning Frequency Range
B Range (Manual Tuning).....528 to 1830 KC
C Range (Manual Tuning).....1810 to 6350 KC
D Range (Manual Tuning).....6300 to 22000 KC
Buttons 1 & 2 (Automatic Tuning).....520 to 980 KC
Buttons 3 & 4 (Automatic Tuning).....650 to 1250 KC
Buttons 5 & 6 (Automatic Tuning).....820 to 1800 KC

Power Consumption - 100 Watts (At 117 volts 50 cycles)

APRIL, 1938




Oscillation on D Band
If oscillation is encountered on the D band, change the oscillator grid resistor to 35,000 ohms.

Readings taken with 1000 ohm-per-volt meter.
The voltage between the control grids of the 6J5G balancing exciter and the 6F6G output tubes and ground is 22. This voltage cannot be read at the socket terminal because of the high resistance circuit, but can be read across resistors R18, 19, and 20.

Voltagages at Sockets
The voltagages at sockets are shown on the schematic circuit diagram. Unless otherwise specified, the voltagage indicated is between the socket terminal and ground.
These voltagages are read under the following conditions:
Line Voltage—117.
Volume Control—Maximum.
Antenna Shorted to Ground.

This model is a 3 band AC operated radio with a 6 button automatic tuning unit. (F. 456 KC.)
RANGE B 528 TO 1830 HERTZ
RANGE C 1810 TO 6350 HERTZ
RANGE D 6300 TO 22000 HERTZ

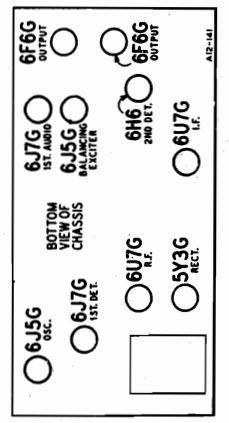

MODEL 864
Alignment, Trimmers
Drive Cord Data

GAMBLE-SKOGMO INC.

PERMEABILITY TUNING UNIT
Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.
After each range is completed, repeat the procedure as a final check.
NOTE A—If the pointer is not at 1500 KC on the dial, loosen the 2 clamps which hold the pointer to the 1500 KC mark, and tighten the clamps.
NOTE B—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.
NOTE C—Leave condenser rotor at the 600 KC setting and adjust the signal generator until maximum output is obtained at or near 485 KC.
NOTE D—At the bottom of the permeability tuning unit can be seen six "W" openings. Insert the end of the tuning needle into the "W" opening at the top of the proper button and adjust the position of the antenna (rear) coil by twisting the pliers or screwdriver until maximum output is obtained.

ALIGNMENT PROCEDURE

The following equipment is required for aligning:
An All Wave Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed.
Output Indicating Meter—Non-Metallic Screwdriver.
Dummy Antennas—1 mf., 200 mmf., and 400 ohms.



SIGNAL GENERATOR FREQUENCY SETTING	DUMMY ANTENNA CONNECTION AT RADIO	BUTTON DEPRESSED	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM (Unless otherwise specified)
I. F.				
454 KC	Grid of I.F. Tube	B Range	Turn Rotor to Full Open	2nd I.F. (C29) & (C30)
454 KC	Grid of 1st Det.	B Range	Turn Rotor to Full Open	1st I.F. (C25) & (C26)
RANGE B				
1500 KC	Antenna Lead	B Range	Turn Rotor to Full Open	Oscillator Range B (C15)
1500 KC	Antenna Lead	B Range	Turn Rotor to Max. Output	Ant. Range B (C5)
600 KC	Antenna Lead	B Range	Set indicator to 1500 KC—See Note A	1st. Range B (C3)
WAVE TRAP				
454 KC	Antenna Lead	B Range	Turn Rotor to Max. Output	600 KC (C16)
RANGE C				
6300 KC	Antenna Lead	C Range	Turn Rotor to Full Open	Wave Trap (C11)
6000 KC	Antenna Lead	C Range	Turn Rotor to Max. Output	Oscillator Range C (C14)
RANGE D				
21,000 KC	Antenna Lead	D Range	Turn Rotor to Full Open	Ant. Range D (C8)
20,000 KC	Antenna Lead	D Range	Turn Rotor to Max. Output	1st. Range D (C4)
7000 KC	Antenna Lead	D Range	Turn Rotor to Max. Output	Oscillator Range D (C13)
PERMEABILITY TUNING UNIT				
700 KC	Antenna Lead	No. 1	Setting Screw No. 1	Antenna Coil No. 1
700 KC	Antenna Lead	No. 2	Setting Screw No. 2	Antenna Coil No. 2
850 KC	Antenna Lead	No. 3	Setting Screw No. 3	Antenna Coil No. 3
850 KC	Antenna Lead	No. 4	Setting Screw No. 4	Antenna Coil No. 4
1100 KC	Antenna Lead	No. 5	Setting Screw No. 5	Antenna Coil No. 5
1100 KC	Antenna Lead	No. 6	Setting Screw No. 6	Antenna Coil No. 6

Phonograph Connections

Phonograph connections are made drilled in the back panel, as shown in the schematic circuit diagram. On the back panel of the early models a phono cable assembly may then be purchased (see parts list). On one chassis base is a round knockout end of this cable is an octal plug 1 1/4 inches in diameter. An octal plug base socket is then mounted in this graph-radio switch and double tip knockout opening. In the case of the early models a 1 1/4 inch hole must be drilled in the back panel.

Drive Cord Replacement
The plungers are replaceable only on the permeability (6 button) tuning unit. In the case of the band switch unit, if any parts require replacing, the entire assembly must be ordered. Two of these assemblies are listed, one using the early short shaft and the other using the later long shaft. The short shaft (early unit) has no point mark on it. The long shaft (late unit) has an orange paint mark on it. A change was also made on the tuning rod assembly (Rod on which 2 iron cores are mounted). The rod used on early models was 3/4 inches long and the back end of the rod rested in a small cup in the end of the compression spring. The rod used on late models is 4/8 inches long, extends through the compression spring and projects beyond the rear bracket of the tuning assembly. Only the later type rod complete with the compression spring and a small washer is being furnished for replacement. This complete assembly is interchangeable with the early type.

ATTACHING DIAL POINTER—Tune in a 1500 KC signal. Move the pointer to the 1500 KC mark on the dial and clamp it tightly over the fabric tubing on the cord.

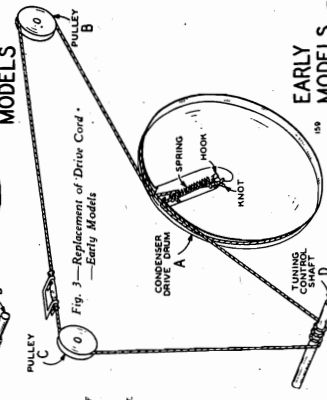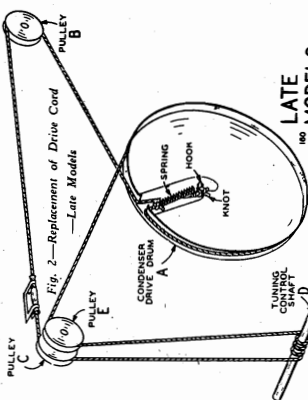

EARLY MODELS—This procedure is the same as for the late models with the following exceptions:
The distance between the knots on the drive cord should be 4 9/16 inches.
Leaving shaft D (Fig. 3), the drive cord is brought directly to the top of drive drum A and then continued as in late models.

Permeability Tuning and Band Switch Assemblies—Differences in Early Models
A few of the first models used a station button plunger 6 1/8 inches long. These models may be identified by a red paint mark on the front bracket of the tuning unit at the upper right corner. On later models, this length was changed to 6 3/8 inches. These models have an orange paint mark in place of the red mark. It is important, therefore, that the length be noted when ordering this part and the correct part number, as shown in the parts list, be specified.

ALL SWITCHES HAVE ONLY TWO POSITIONS. SERVICING SHOULD ADJUST SWITCHES BY NORMAL MEANS. SERVICING SHOULD NOT PUSH SWITCH BUTTONS IN.

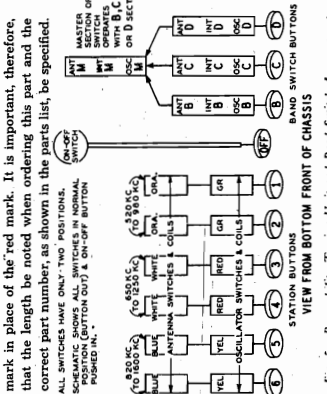


Fig. 5—Permeability Tuning Unit and Band Switch Arrangement.

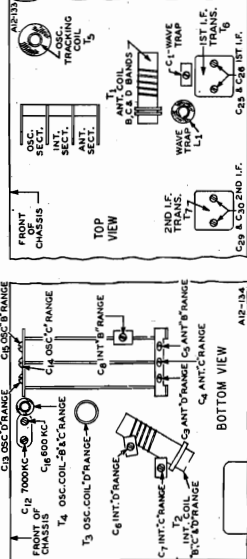



Fig. 1—Location of Trimmers

CAUTION—When aligning the short wave bands, be sure NOT to increase the input signal to hear the image. This can be checked as follows: Let us say the signal generator is set for 5000 KC. The signal will then be heard at 5000 KC on the dial of the radio. The image signal, which is much weaker, will be heard at 5000 less 912 KC, or 4088 KC, on the dial. Increase the input signal to hear the image. This can be checked as follows: Let us say the signal generator is set for 5000 KC. The signal will then be heard at 5000 KC on the dial of the radio. The image signal, which is much weaker, will be heard at 5000 less 912 KC, or 4088 KC, on the dial. Increase the input signal to hear the image.

MODEL 962
MODELS 970B, 970BX
MODELS 980B, 980BX


GAMBLE-SKOGMO INC.

Schematic, Tuner


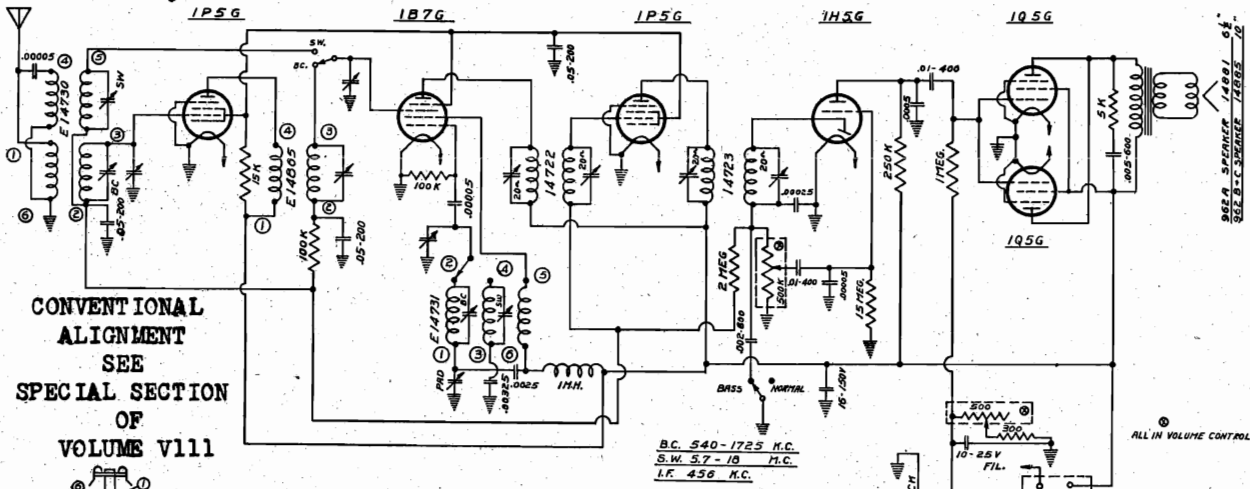


MODEL 962
CIRCUIT DIAGRAM NO.14897







FOR SIMILAR TUNER ADJUSTMENTS SEE
GAMBLE-SKOGMO MODEL 761A, page 10-6

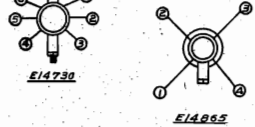

MODEL 970
CIRCUIT DIAGRAM NO.14849

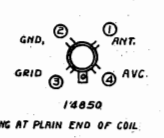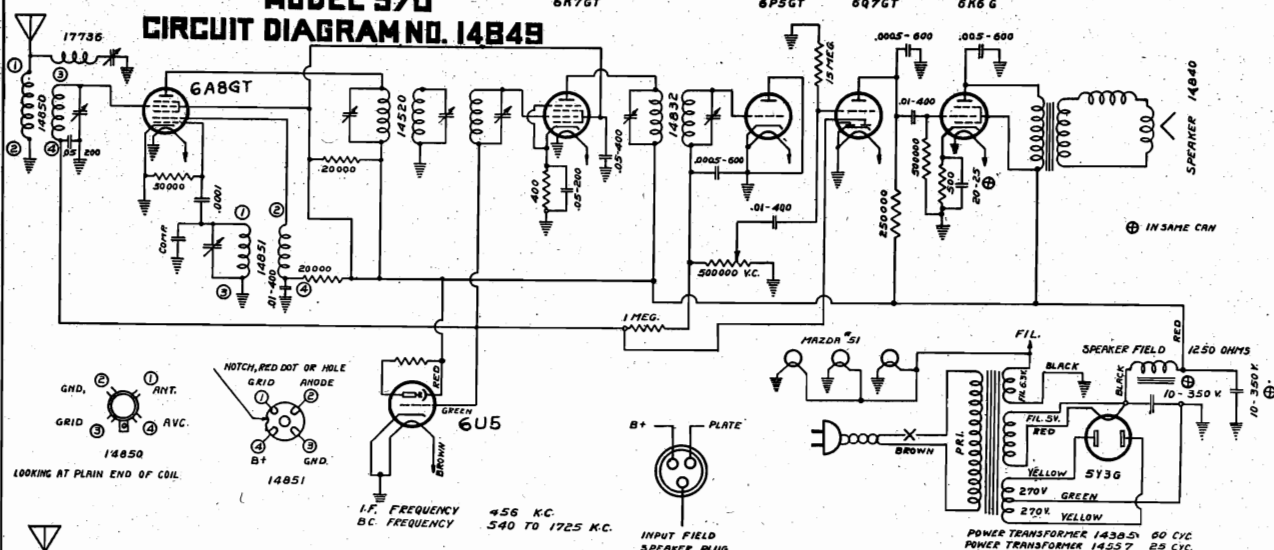


I.F. FREQUENCY 456 K.C.
B.C. FREQUENCY 540 TO 1725 K.C.

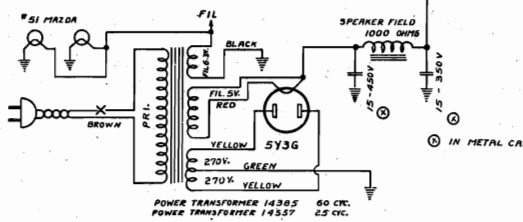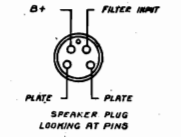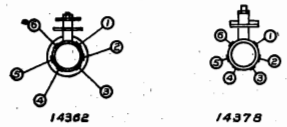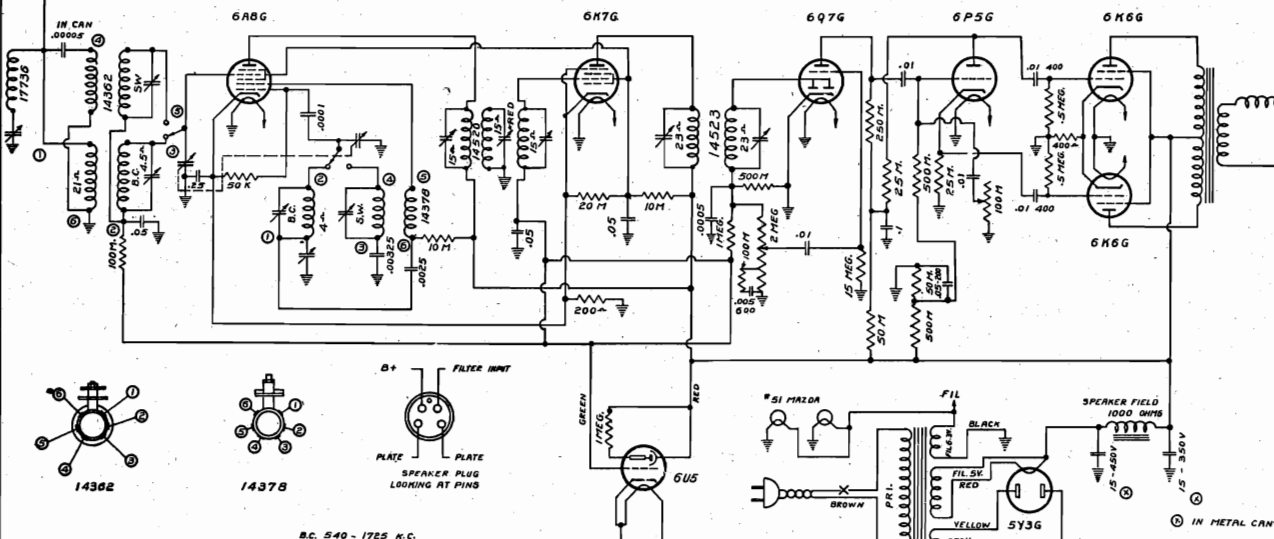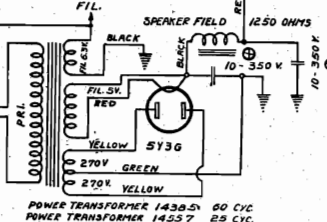

MODEL 980
CIRCUIT DIAGRAM NO.14690


GAMBLE-SKOGMO INC.

MODEL 4954
Schematic, Voltage, Socket
Coils, Notes

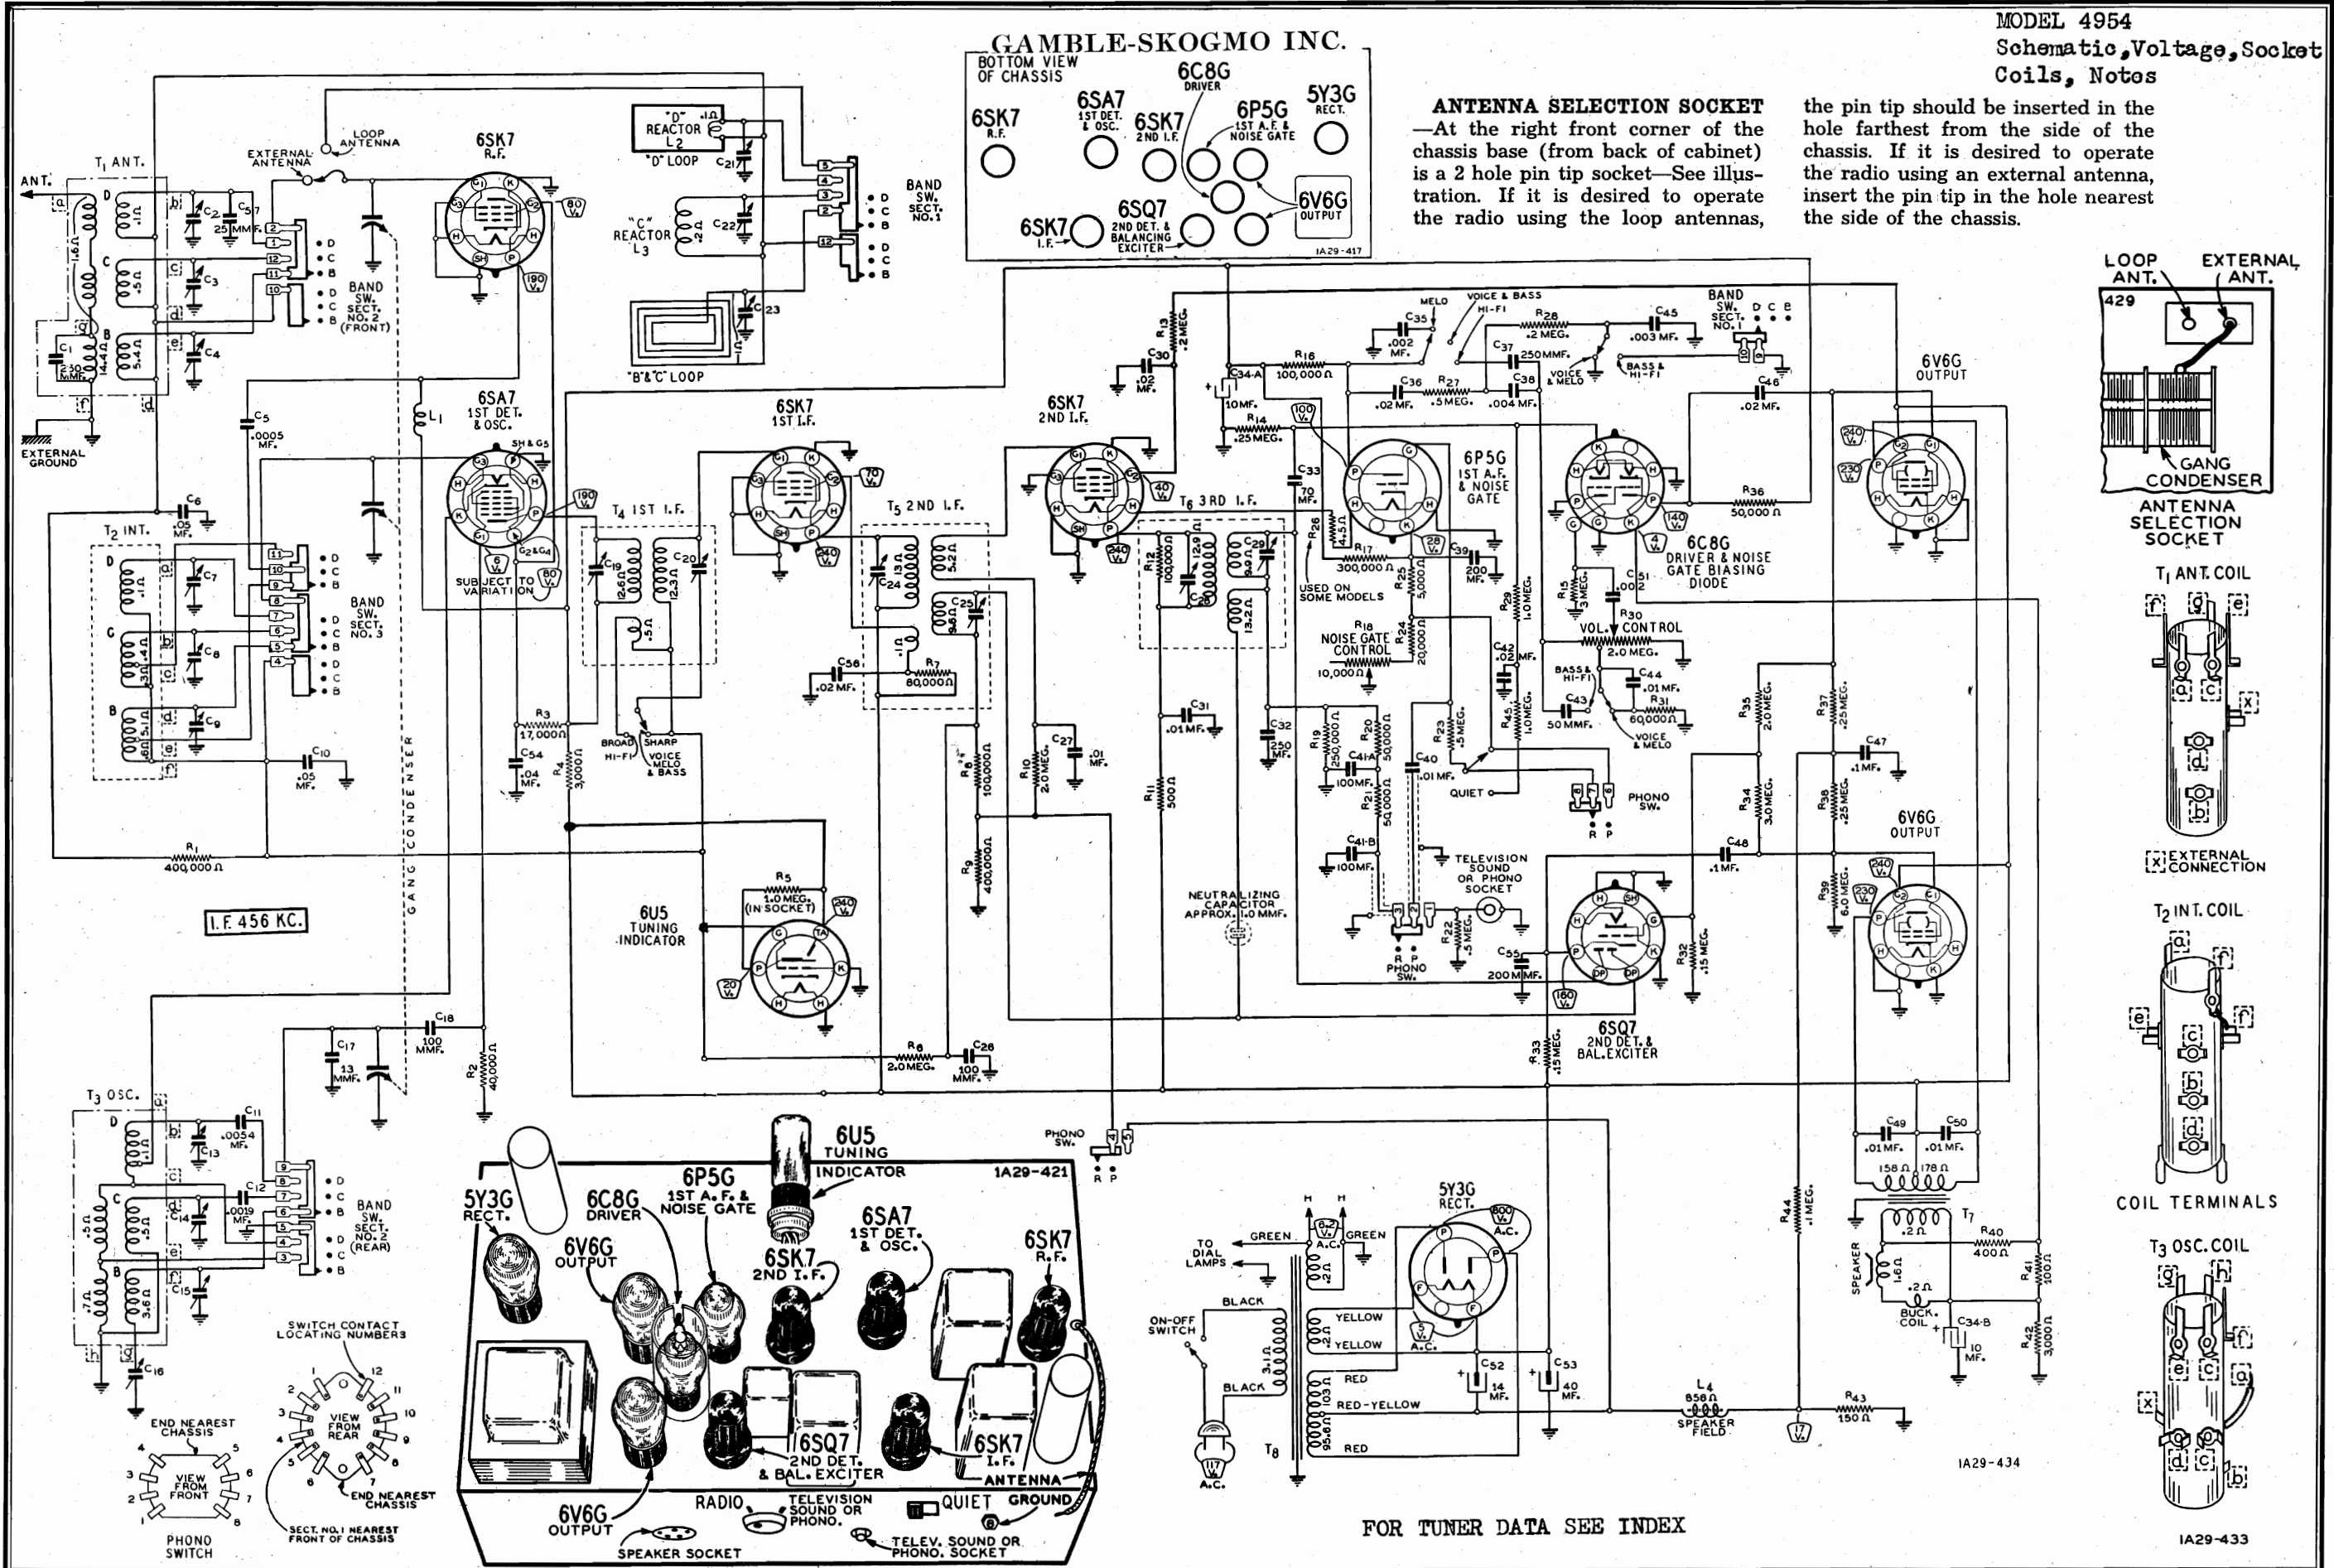


GAROD RADIO CORP.

MODEL 150
MODEL 610
Schematics
Alignment

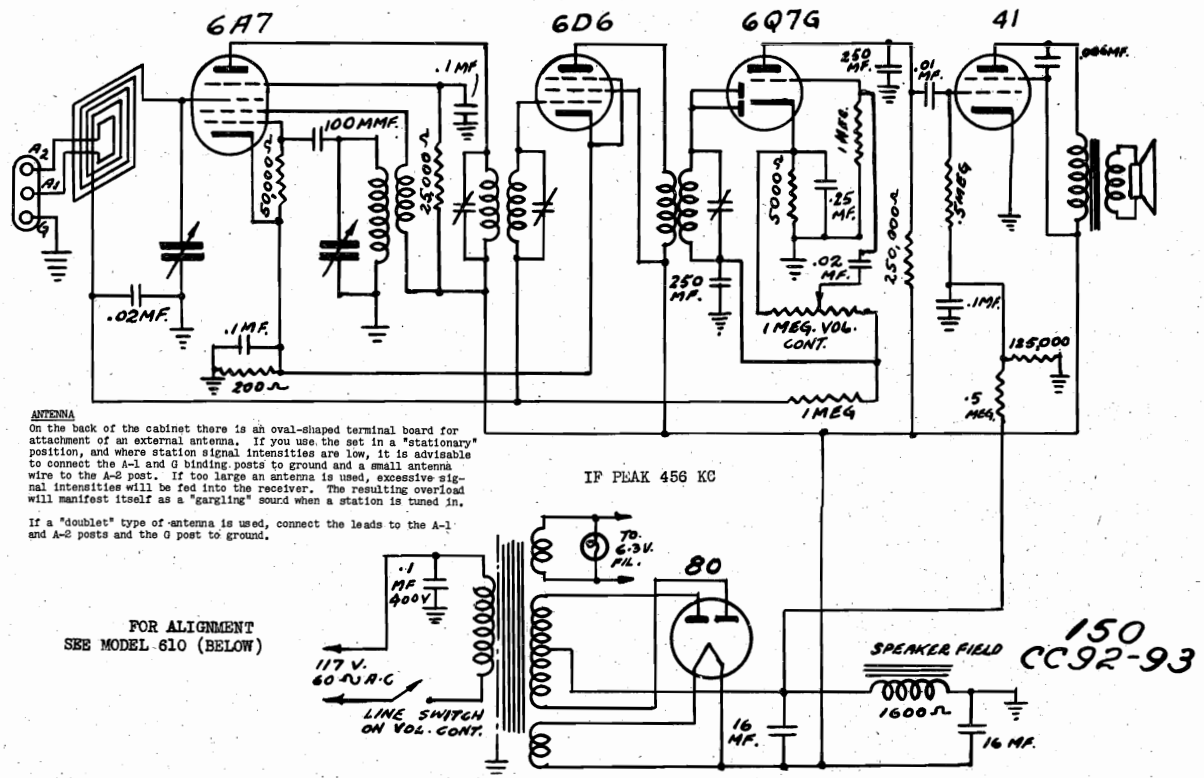

ANTENNA
On the back of the cabinet there is an oval-shaped terminal board for attachment of an external antenna. If you use the set in a "stationary" position, and where station signal intensities are low, it is advisable to connect the A-1 and G binding posts to ground and a small antenna wire to the A-2 post. If too large an antenna is used, excessive signal intensities will be fed into the receiver. The resulting overload will manifest itself as a "gargling" sound when a station is tuned in. If a "doublet" type of antenna is used, connect the leads to the A-1 and A-2 posts and the G post to ground.

FOR ALIGNMENT
SEE MODEL 610 (BELOW)

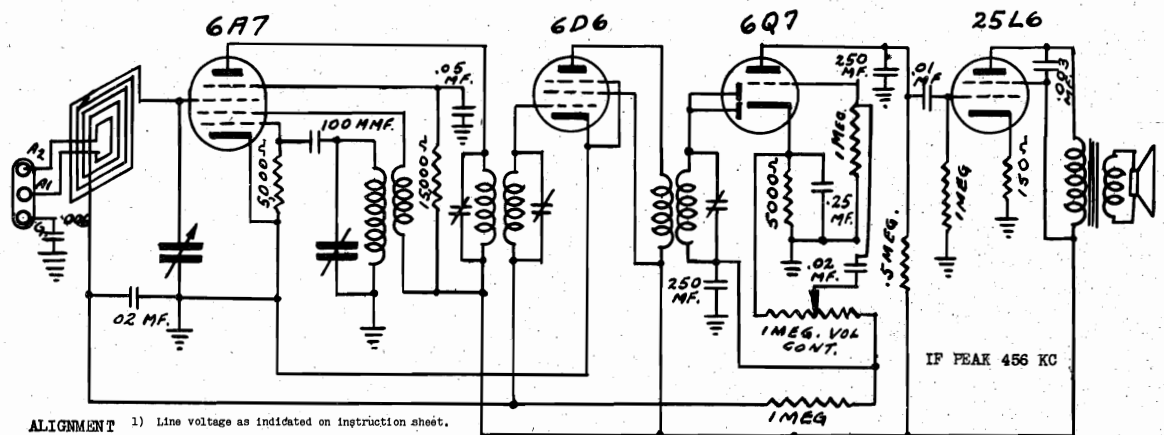

- ALIGNMENT**
- 1) Line voltage as indicated on instruction sheet.
 - 2) Volume and Tone control at maximum volume positions.
 - 3) Minimum Input from signal generator.

MODELS
150
610

I.F. ADJUSTMENT
The signal generator is set at 456KC and is connected to the grid of the converter tube (6A7) through a .5 MFD condenser. Be sure to connect a resistor of approximately 25,000 OHMS between the converter grid and ground so that the grid circuit is at ground potential for D.C.


The Input I.F. transformer trimmers are adjusted for maximum output as indicated by the output meter connected across either the voice coil or the primary coil of the loud speaker.

The Output I.F. transformer trimmer is located underneath the chassis. Adjust the trimmer for maximum output as indicated on the output meter. The Input I.F. should now be re-checked for maximum output.

BROADCAST BAND ALIGNMENT
Connect the output of the signal generator to a loop antenna consisting of about five turns of "bell" wire making a circle a foot in diameter. This loop should be VERY LOOSELY coupled to the receiver loop and should not be less than one foot from the receiver.


Set the signal generator at 1500KC and tune the receiver until a response is indicated on the output meter with signal generator set at 1500KC. Rock the gang condenser while adjusting the oscillator trimmer condenser for maximum output.

The dial pointer should coincide with the 1500KC mark on the dial. If it does not, check other calibration points at both ends of the scale before re-setting the pointer.

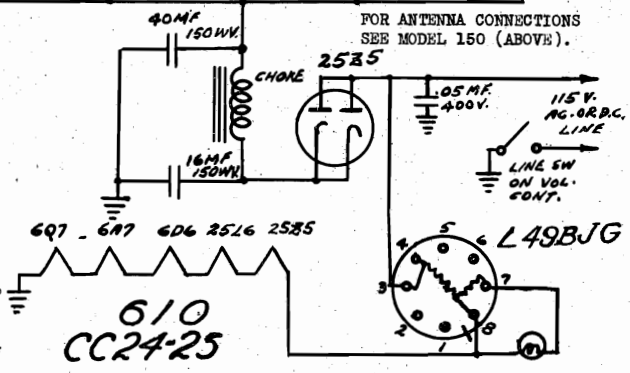

GAROD RADIO CORP.

MODELS 399,4990
Schematic

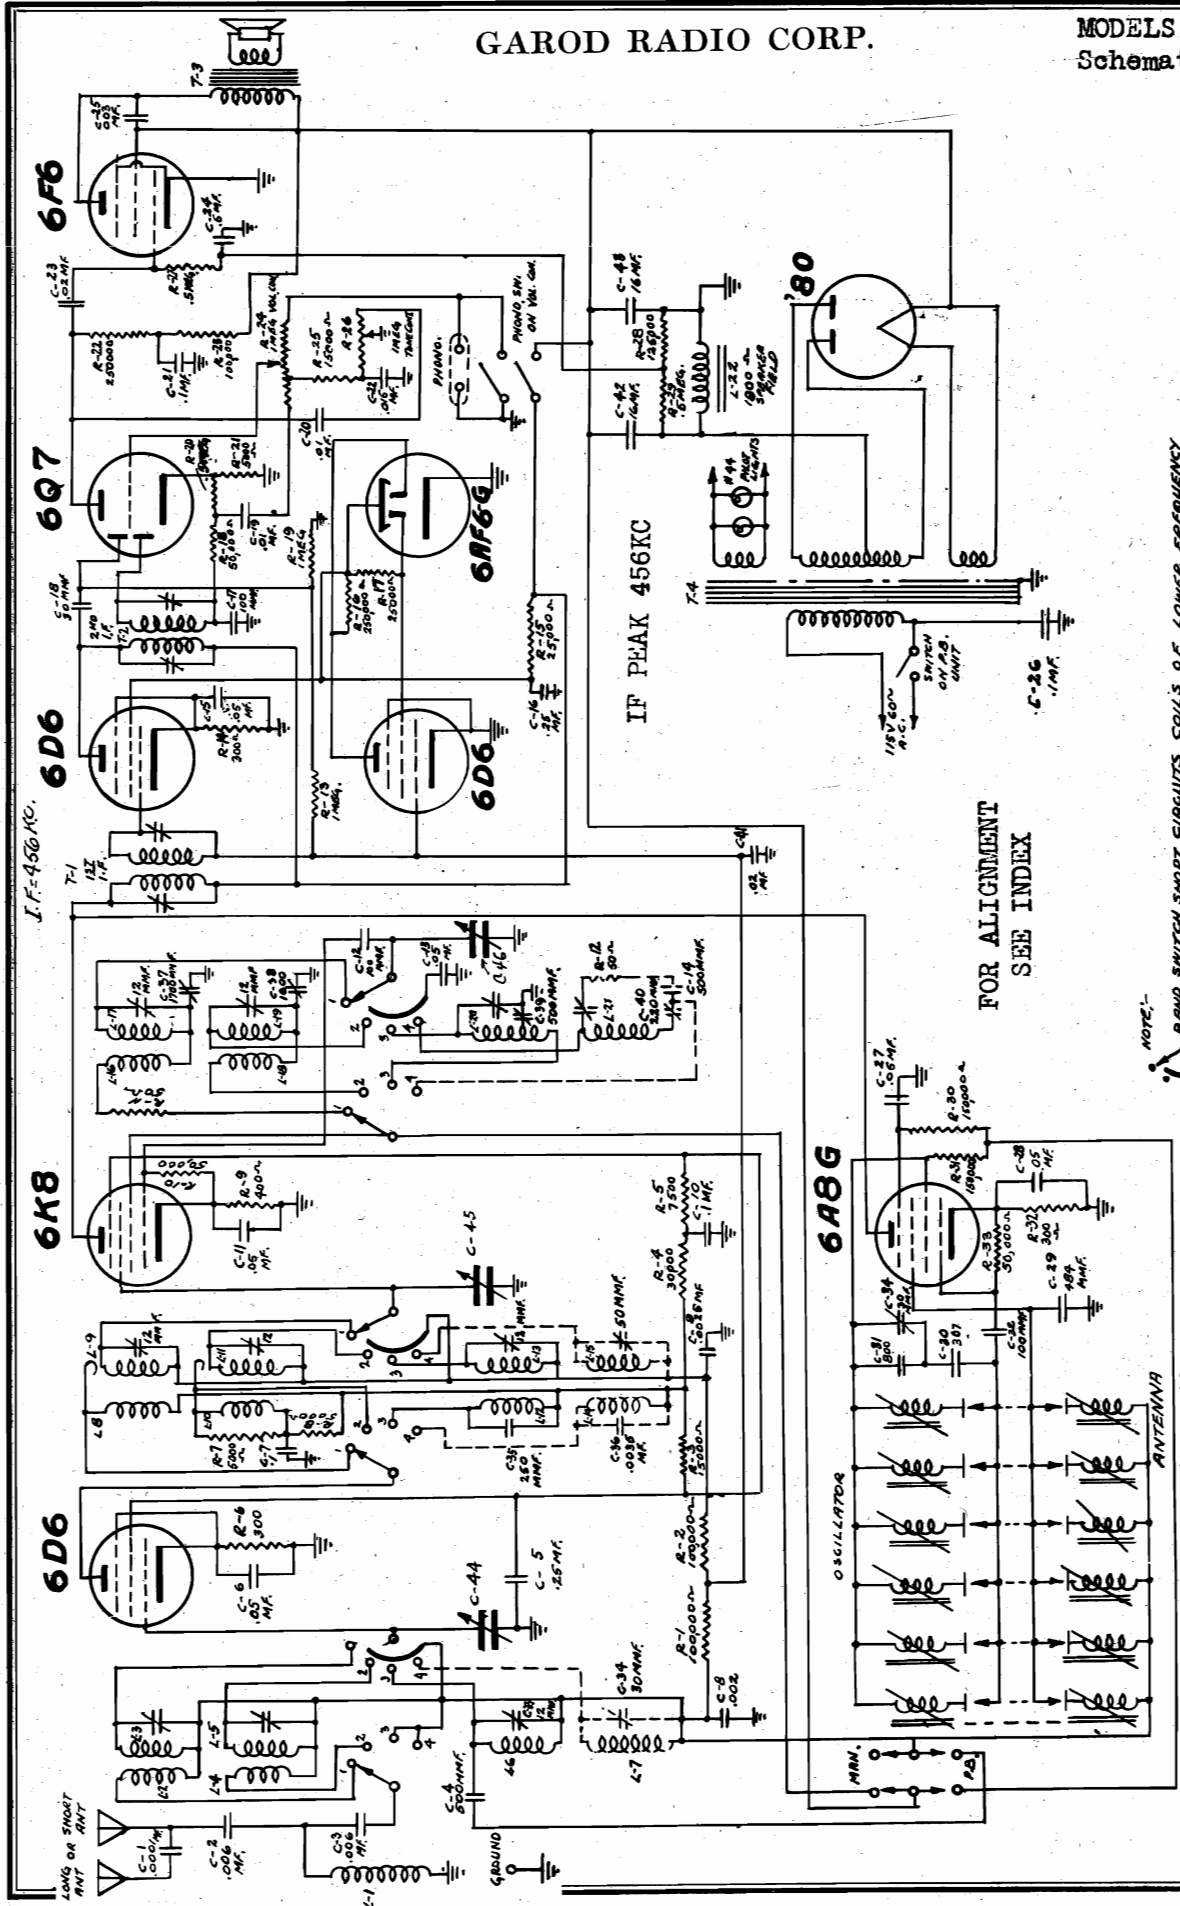

I.F. = 456 KC.

IF PEAK 456KC

FOR ALIGNMENT
SEE INDEX

NOTE:-


BAND SWITCH SHORT CIRCUITS COILS OF LOWER FREQUENCY THAN THE ONE IN USE.

- BAND 1 - 23 MC. TO 7.2 MC. OR 13 METERS TO 41.75 METERS
- BAND 2 - 2.4 MC. TO 2.34 MC. OR 40.5 METERS TO 128.25 METERS
- BAND 3 - 1720 KC. TO 547.5 KC. OR 175 METERS TO 550 METERS
- BAND 4 - 375 KC. TO 187.5 KC. OR 800 METERS TO 2300 METERS - USE ON MODEL #4990 ONLY

9 TUBE A.C. RECEIVER
USED ON -
3 BAND 399-C-31 48 BAND 4990

MODEL 453
Schematic, Socket
Trimmers

GAROD RADIO CORP.

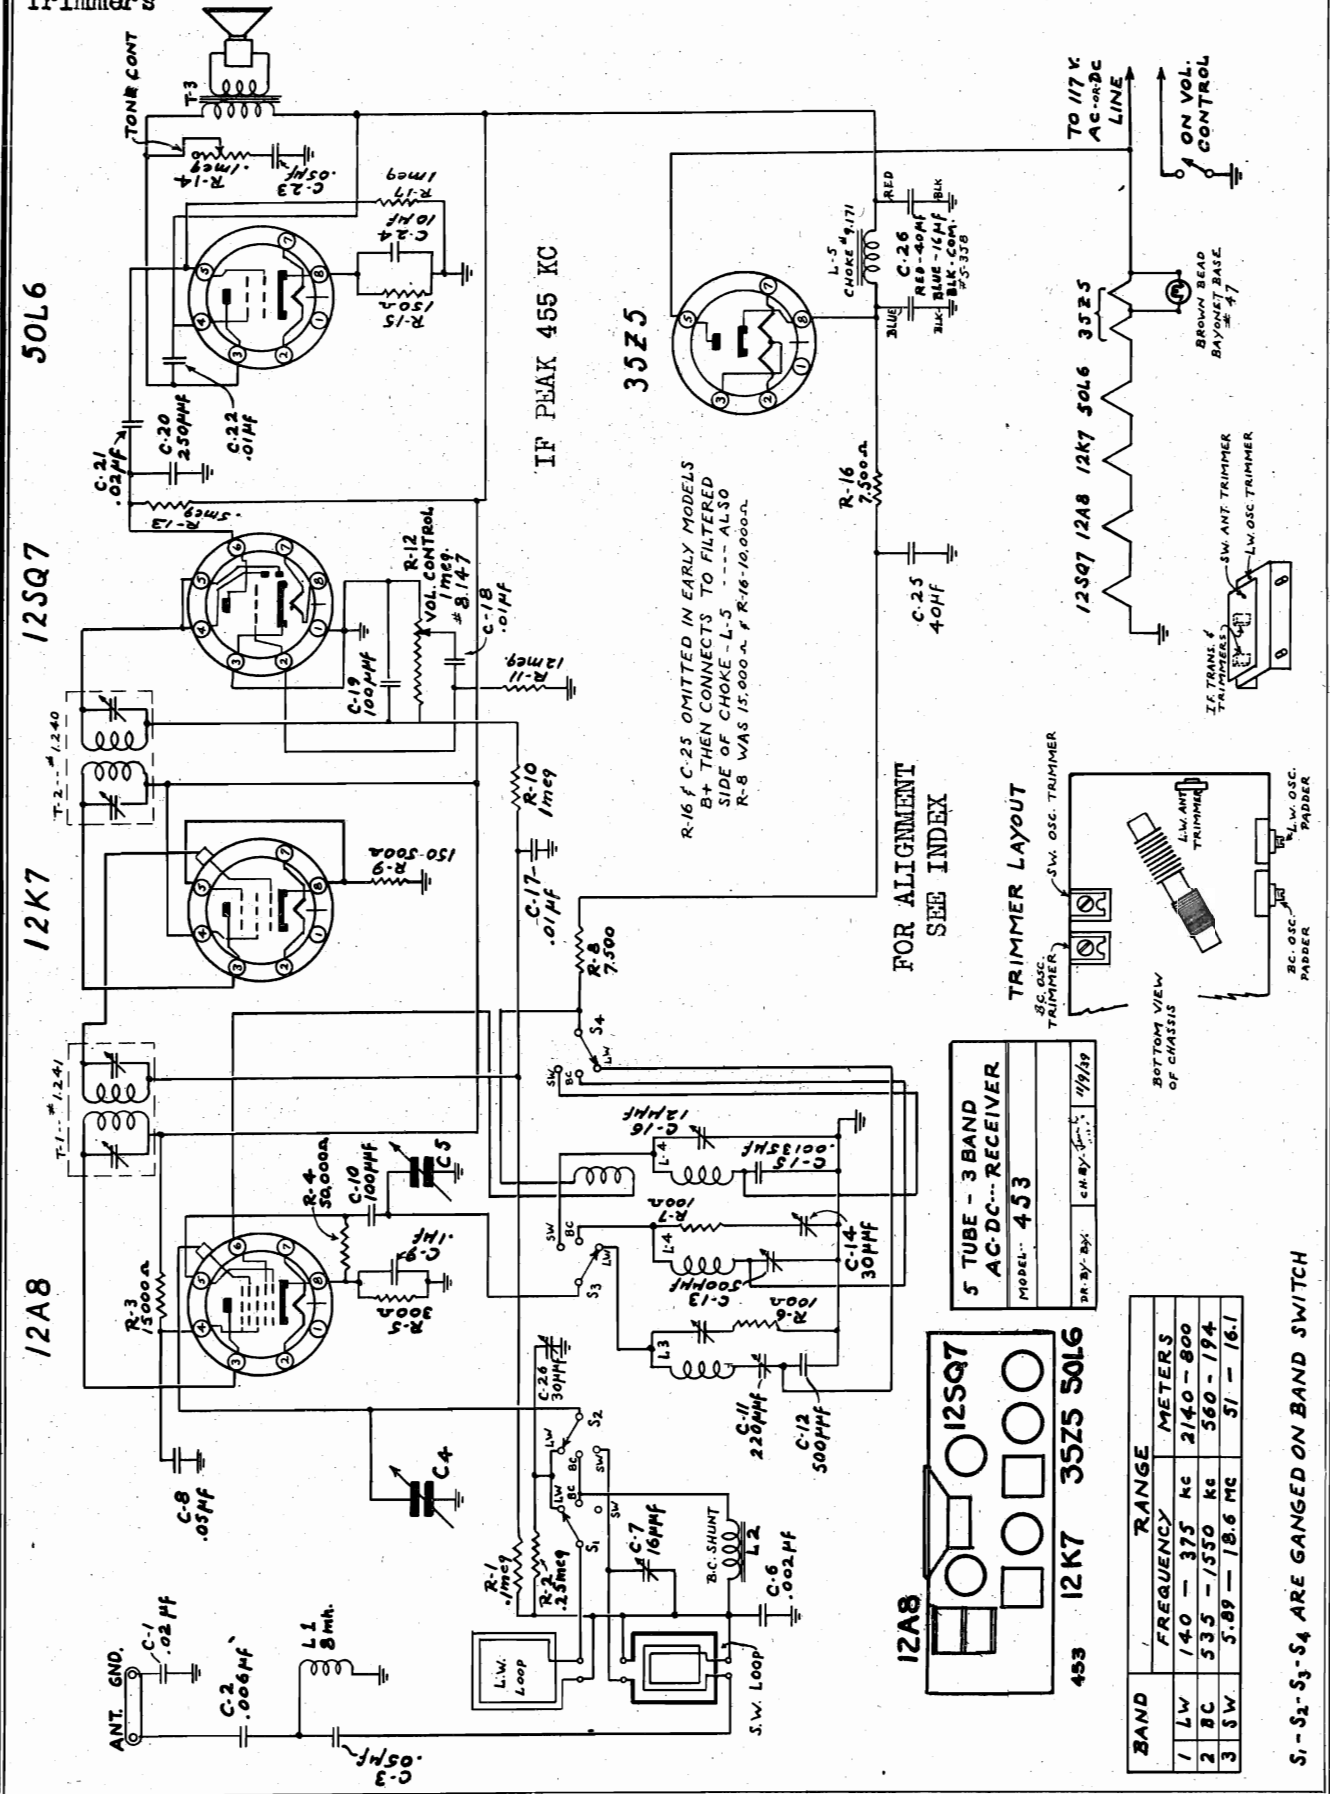


BAND	RANGE	METERS
1 LW	140 - 375 KC	2140 - 800
2 BC	535 - 1550 KC	560 - 194
3 SW	5.89 - 18.6 MC	51 - 16.1

S₁ - S₂ - S₃ - S₄ ARE GANGED ON BAND SWITCH

MODEL 939
Schematic

GAROD RADIO CORP.

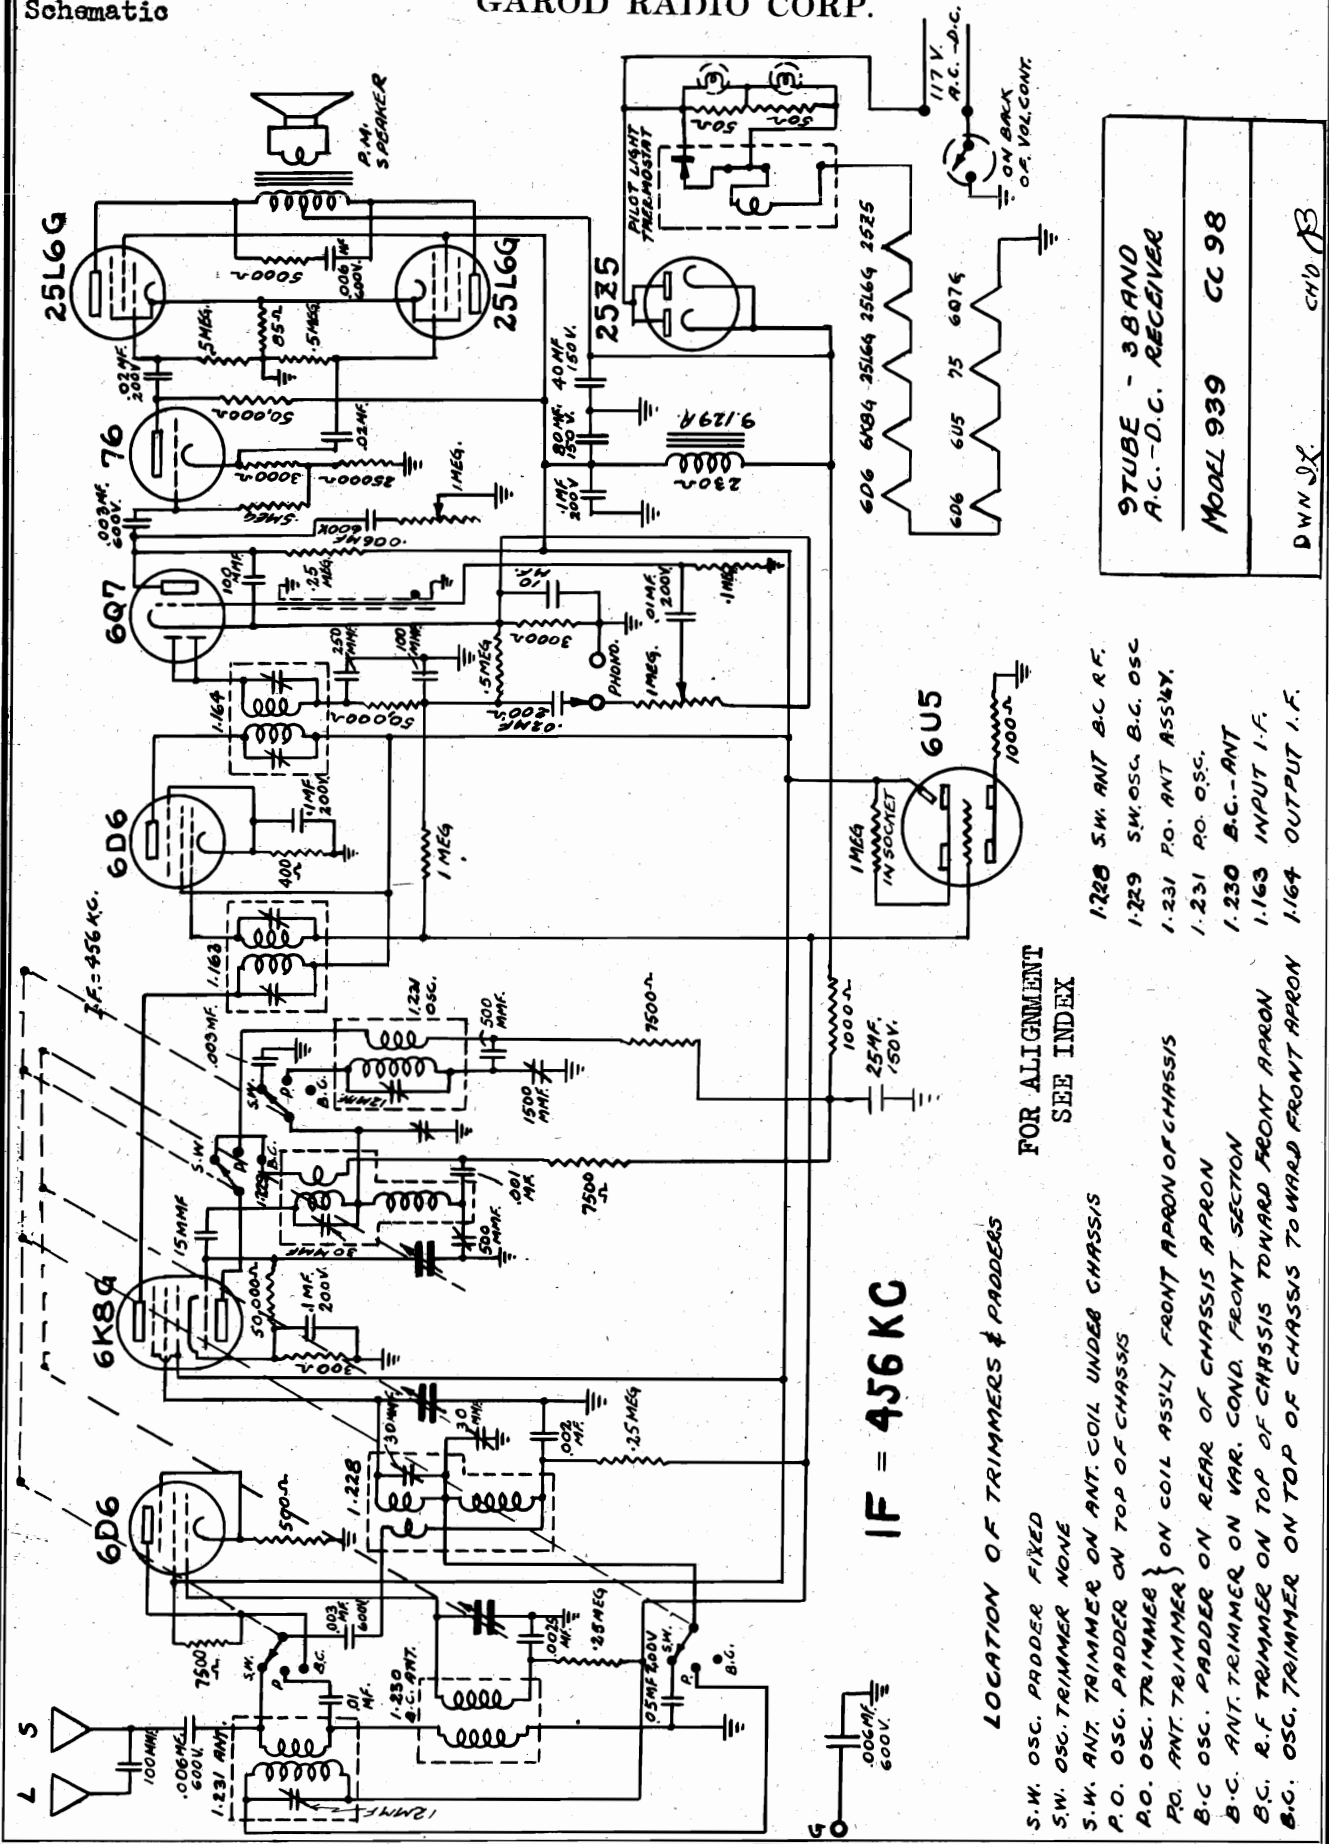

IF = 456 KC

LOCATION OF TRIMMERS & PADDERS

FOR ALIGNMENT
SEE INDEX


- S.W. OSC. PADDER FIXED
- S.W. OSC. TRIMMER NONE
- S.W. ANT. TRIMMER ON ANT. COIL UNDER CHASSIS
- P.O. OSC. PADDER ON TOP OF CHASSIS
- P.O. OSC. TRIMMER } ON COIL ASSLY FRONT APRON OF CHASSIS
- P.O. ANT. TRIMMER } ON COIL ASSLY FRONT APRON OF CHASSIS
- B.C. OSC. PADDER ON REAR OF CHASSIS APRON
- B.C. ANT. TRIMMER ON VAR. COND. FRONT SECTION
- B.C. R.F. TRIMMER ON TOP OF CHASSIS TOWARD FRONT APRON
- B.C. OSC. TRIMMER ON TOP OF CHASSIS TOWARD FRONT APRON
- 1.228 S.W. ANT. B.C. R.F.
- 1.229 S.W. OSC. B.C. OSC.
- 1.231 P.O. ANT. ASSLY.
- 1.231 P.O. OSC.
- 1.230 B.C. - ANT
- 1.163 INPUT I.F.
- 1.164 OUTPUT I.F.

9TUBE - 3B AND A.C. - D.C. RECEIVER
MODEL 939 CC 98
D W N J L CH'D B

MODELS 1039, 1049
Schematic

GAROD RADIO CORP.

10 TUBE A.C. D.C. RECEIVER
3 OR 4 BAND

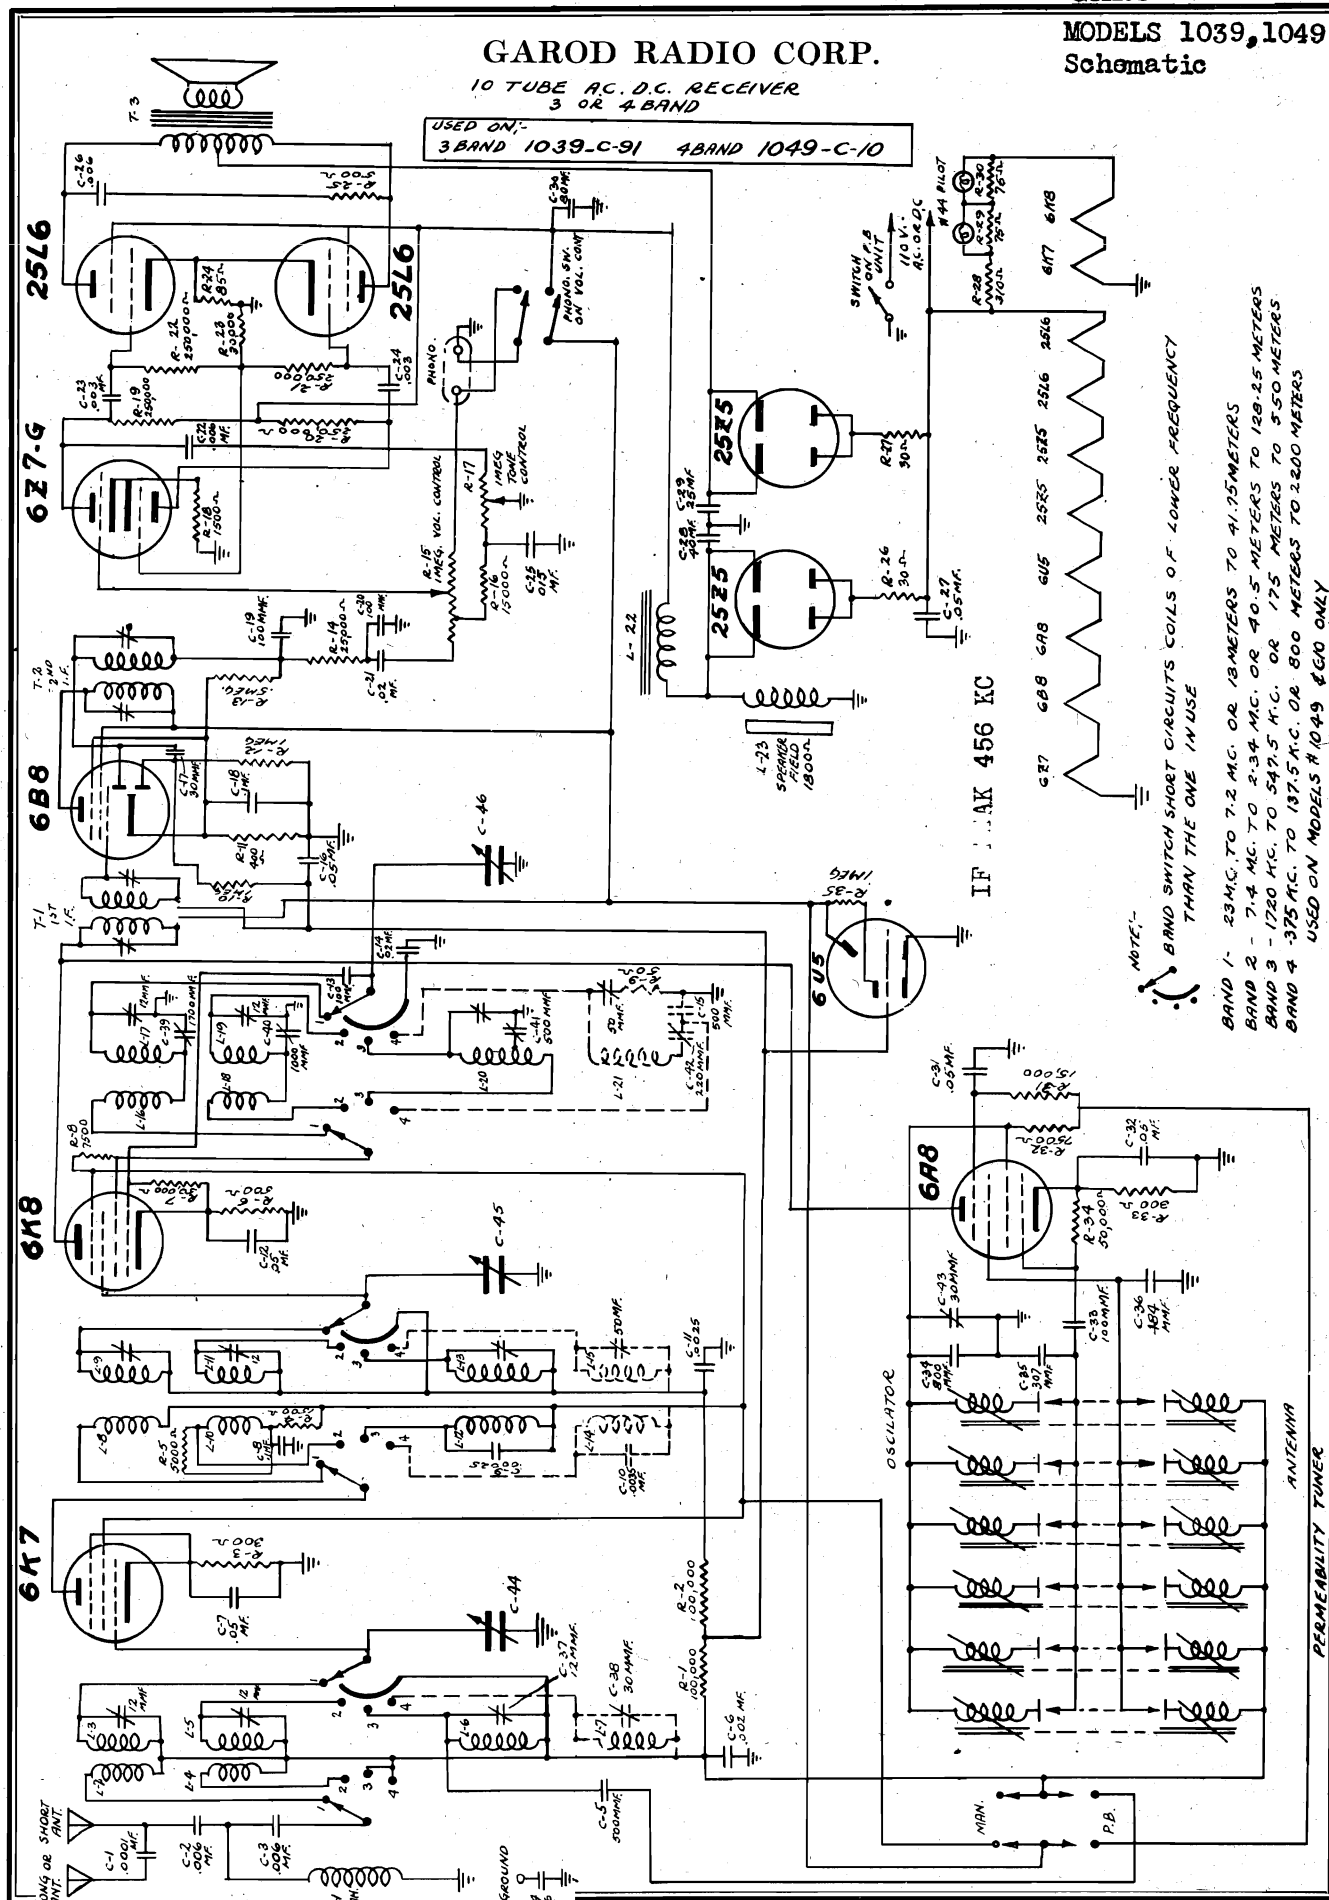

USED ON:-
3 BAND 1039-C-91 4 BAND 1049-C-10


IF TRANSFORMER 456 KC

NOTE:-
BAND SWITCH SHORT CIRCUITS COILS OF LOWER FREQUENCY
THAN THE ONE IN USE

- BAND 1 - 23 MC. TO 7.2 MC. OR 13 METERS TO 41.75 METERS
 - BAND 2 - 7.4 MC. TO 2.34 MC. OR 40.5 METERS TO 129.25 METERS
 - BAND 3 - 1720 MC. TO 547.5 K.C. OR 175 METERS TO 550 METERS
 - BAND 4 - 375 MC. TO 137.5 K.C. OR 800 METERS TO 2200 METERS
- USED ON MODELS #1049 & 600 ONLY

MODEL 1239
Schematic
Trimmers

GAROD RADIO CORP.

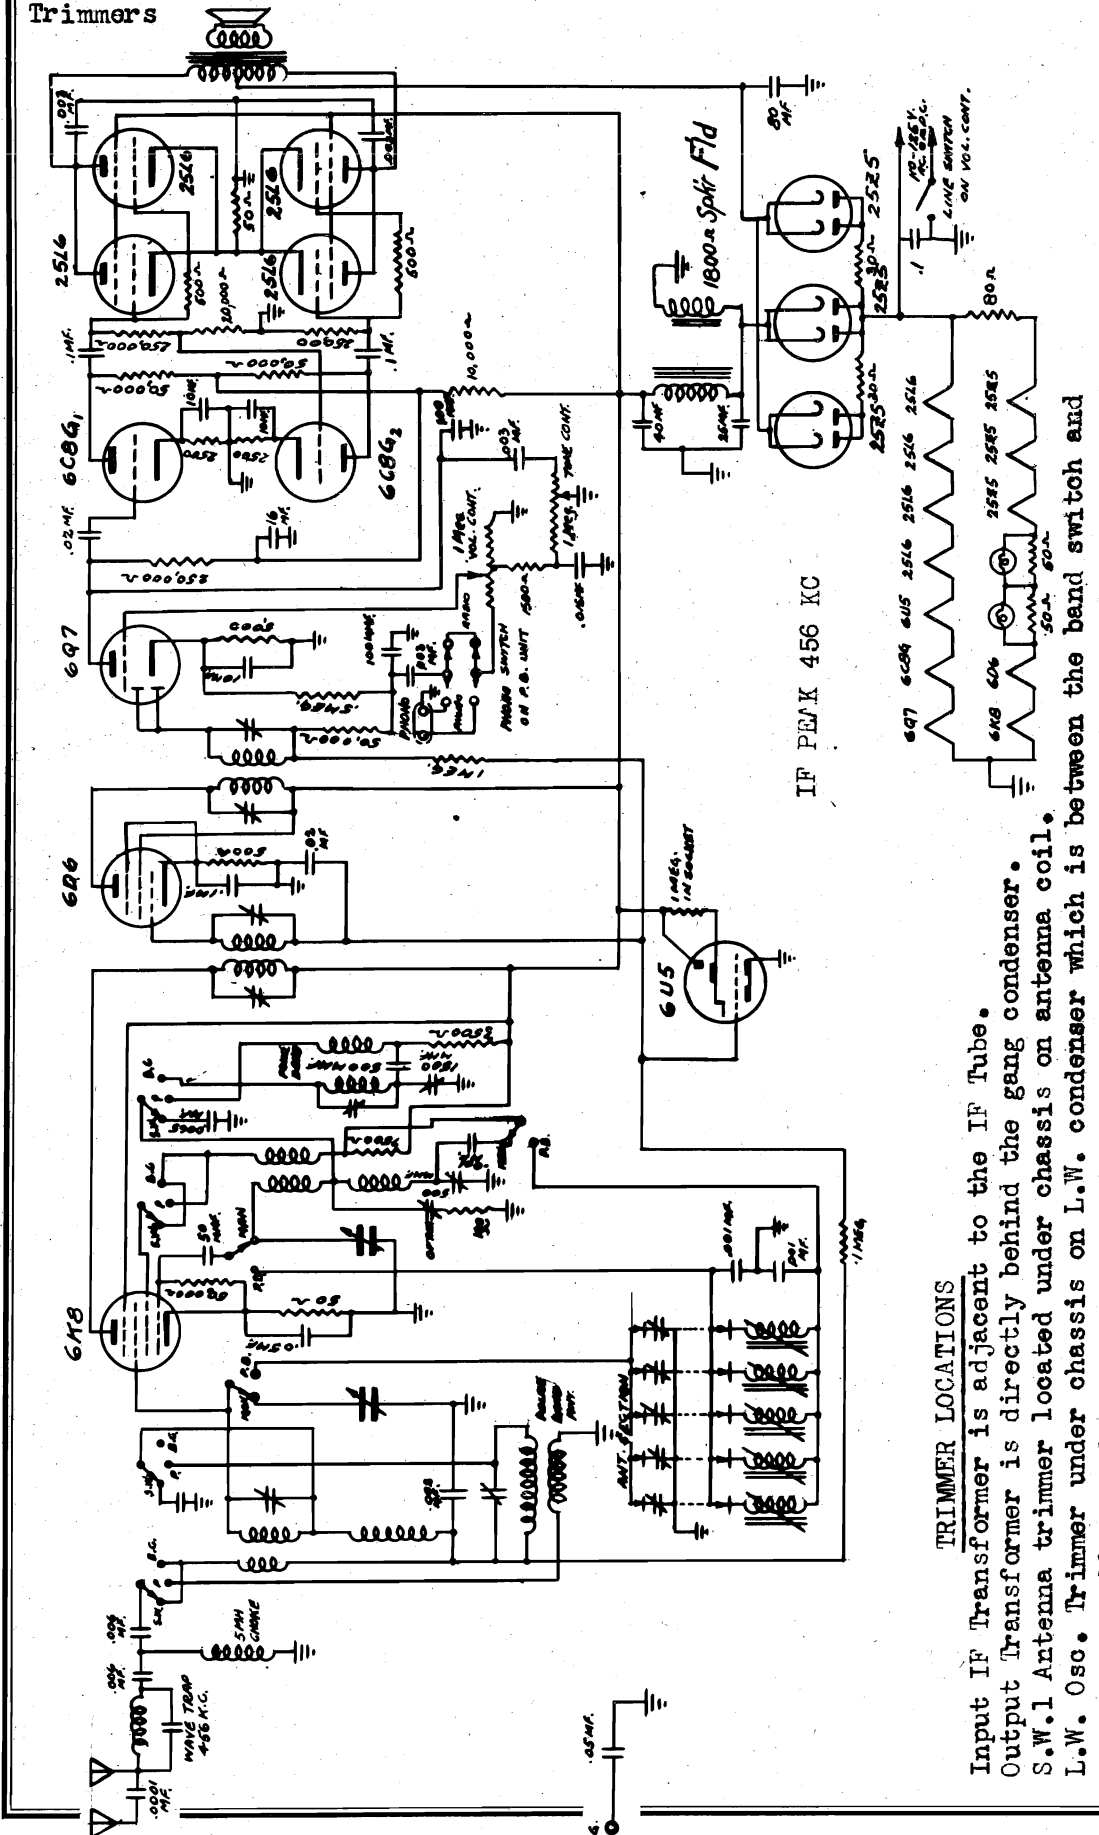

TRIMMER LOCATIONS

- Input IF Transformer is adjacent to the IF Tube.
- Output Transformer is directly behind the gang condenser.
- S.W.1 Antenna trimmer located under chassis on antenna coil.
- L.W. Osc. Trimmer under chassis on L.W. condenser which is between the band switch and padder condenser.
- L.W. Padder under chassis on front apron adjacent to L.W. Oscillator coil.


FOR ALIGNMENT
SEE INDEX

12TUBE 3 BAND
AC-DC RECEIVER
CC-97 1239

MODEL 1739


Schematic, Socket Trimmers

GAROD RADIO CORP.

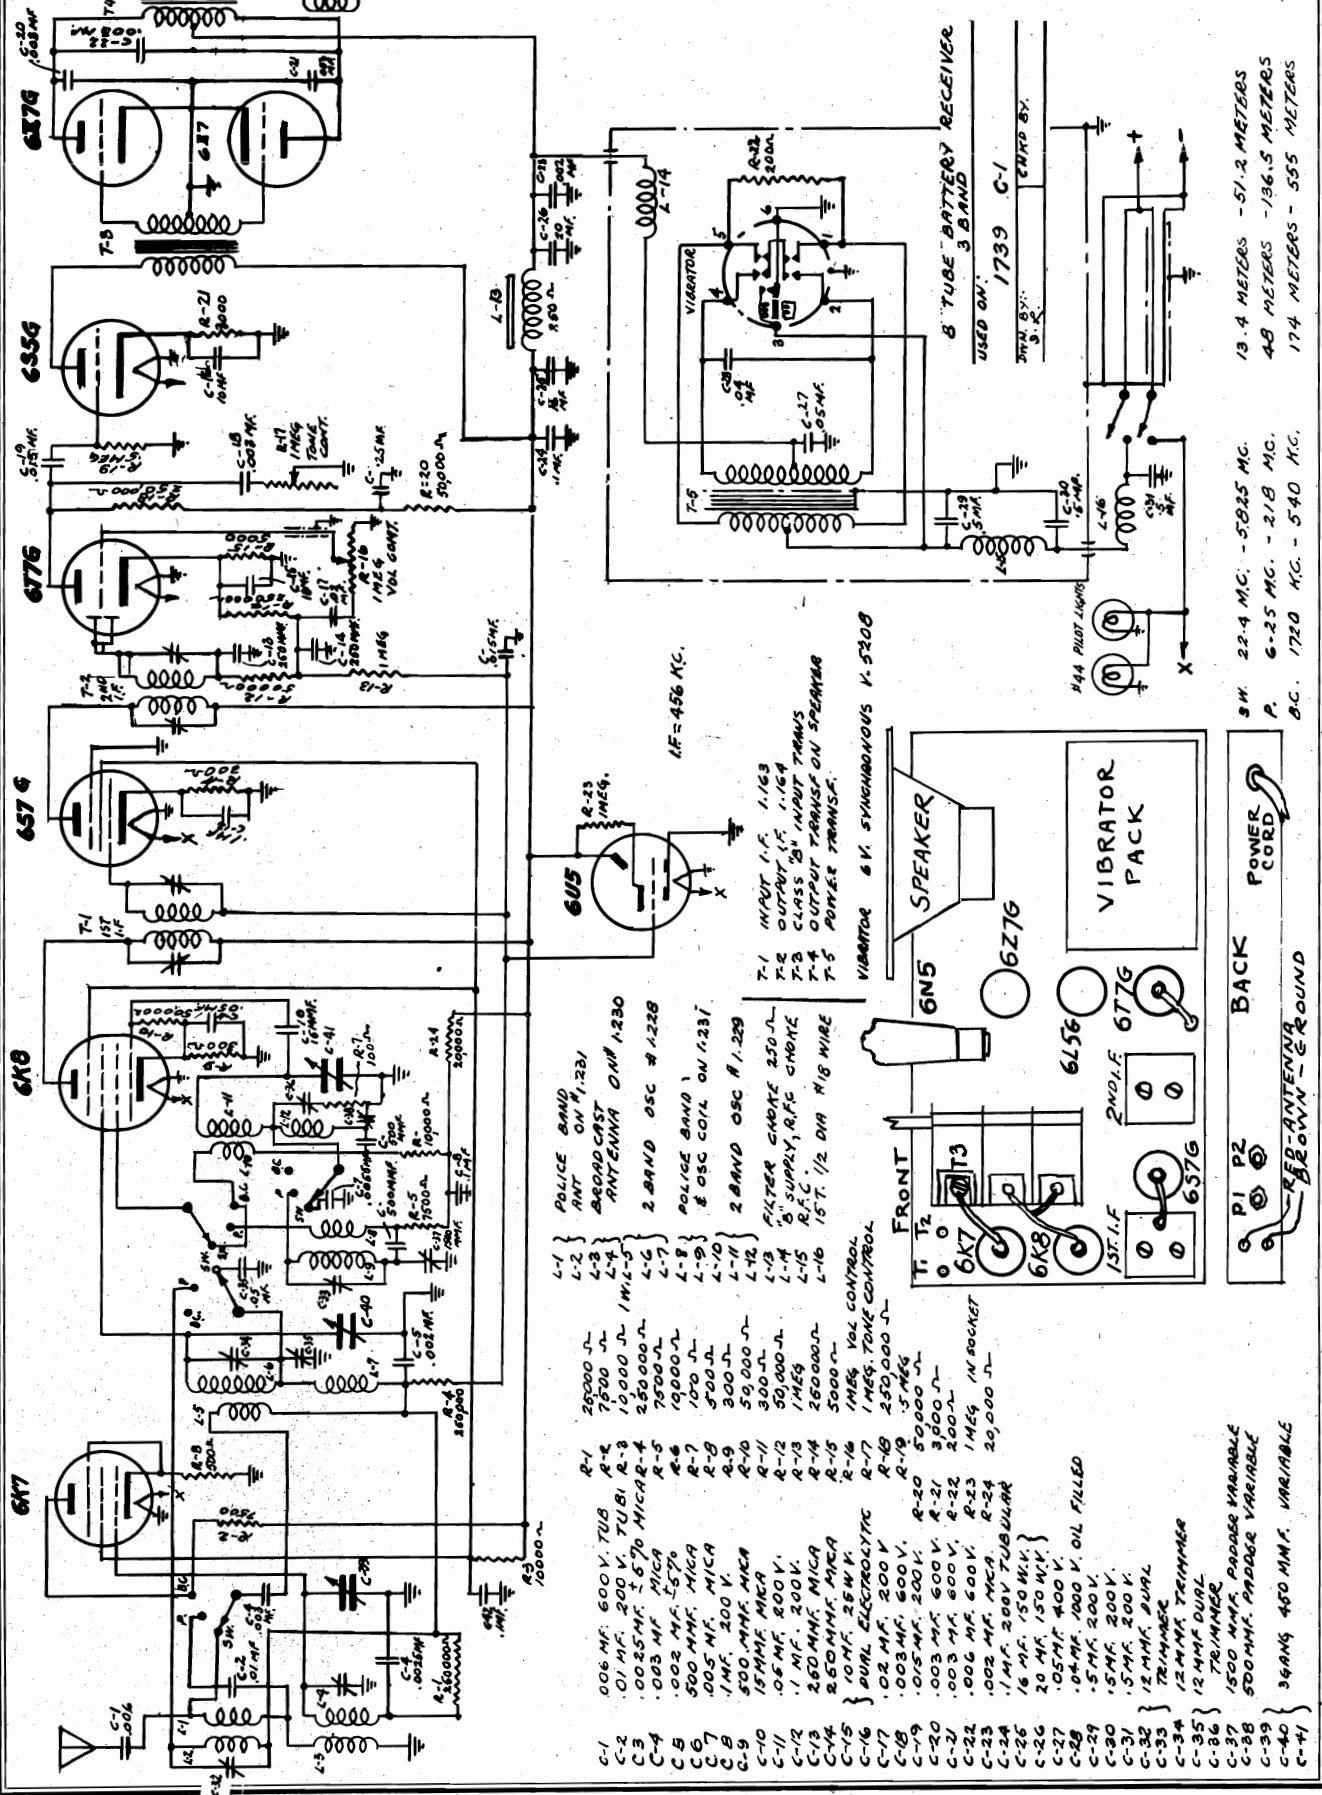

IF=456 KC.
 7-1 INPUT I.F. 1.163
 7-2 OUTPUT I.F. 1.164
 7-3 CLASS 2nd INPUT TRANS.
 7-4 OUTPUT TRANS. ON SPEAKER
 7-5 POWER TRANS.
 VIBRATOR 6 V. SYNCHRONOUS V. 5208

L-1 POLICE BAND ANT ON #1, 231
 L-2 25000 J
 L-3 7500 J
 L-4 10000 J
 L-5 10000 J
 L-6 25000 J
 L-7 7500 J
 L-8 1000 J
 L-9 1000 J
 L-10 300 J
 L-11 300 J
 L-12 50,000 J
 L-13 50,000 J
 L-14 1MEG
 L-15 250000 J
 L-16 5000 J
 L-17 1MEG 1MEG VOL CONTROL
 L-18 250,000 J
 L-19 50000 J
 L-20 50000 J
 L-21 5000 J
 L-22 1000 J
 L-23 1MEG 1MEG IN SOCKET
 L-24 20,000 J
 L-25 20,000 J
 L-26 16 MF. 150 WV.
 L-27 20 MF. 150 WV.
 L-28 04 MF. 100 V.
 L-29 5 MF. 200 V.
 L-30 5 MF. 200 V.
 L-31 5 MF. 200 V.
 L-32 12 MMK. DUAL
 L-33 TRIMMER
 L-34 12 MMK. TRIMMER
 L-35 12 MMK. DUAL
 L-36 TRIMMER
 L-37 1500 MMF. PADDER VARIABLE
 L-38 500 MMF. PADDER VARIABLE
 L-39 360 MMF. PADDER VARIABLE
 L-40 450 MMF. VARIABLE
 L-41

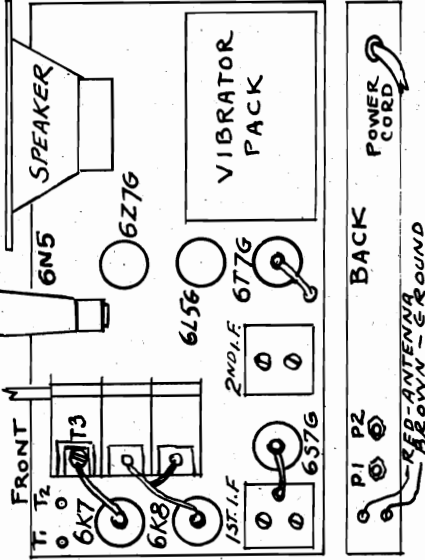

9W. 22.4 MC. - 5825 MC.
 P. 6-25 MC. - 218 MC.
 B.C. 1720 KC. - 540 KC.
 19.4 METERS - 51.2 METERS
 48 METERS - 136.5 METERS
 174 METERS - 595 METERS

MODEL 389
 MODEL 453
 MODEL 493

GAROD RADIO CORP.

MODEL 939
 MODEL 1239
 Alignment

GAROD MODELS 389; 453; 493; 939, 1239.

If this procedure is not adhered to, all adjustments will appear very broad. This is due to the action of the automatic volume control.

I.F. ADJUSTMENT - The signal generator is set at 458⁰KC and is connected to the grid of the converter tube (12A8) through a .5 MFD condenser. Be sure to connect a resistor of approximately 25,000 OHMS between the converter grid and ground so that the grid circuit is at ground potential for D.C.

The Input I.F. Transformer trimmers - are both adjusted for maximum output as indicated by the output meter connected across either the voice coil or the primary coil of the loud speaker.

The Output I.F. Transformer trimmers - are adjusted for maximum output as indicated on the output meter. The Input I.F. should now be re-checked for maximum output.

SHORT-WAVE

BAND #1

MODELS 453, 493, 939 (ONLY) - Set the band switch to the extreme left-hand position which is short-wave band #1. Set the generator at 15.5⁰MC turn the condenser until a response is indicated. The pointer should co-incide with the 15.5MC mark on the dial. Adjust the antenna trimmer for the short-wave band for maximum output while rocking the condenser gang from left to right.

SHORT-WAVE

BAND #1

MODEL 389 (ONLY) - Set the band switch to the extreme right hand position which is short wave band #1. Turn the dial control knob to the extreme high frequency end so that the condenser plates are entirely out of mesh. The signal generator is connected to the "short-antenna" lead through a dummy antenna, consisting of a 250 MMFD condenser and a 400 OHM non-inductive resistor in series. Set the generator at 19MC, turn the condenser until a response is indicated. The pointer should co-incide with the 19MC mark on the dial. Adjust the antenna trimmer for the short-wave band located under the chassis on the antenna coils for maximum output while rocking the condenser gang from left to right.

BROADCAST

BAND

MODEL 1239 (ONLY) The dummy antenna for this band consists of only a 250 MMFD condenser. Set the Band Switch in the middle position and condenser plates completely out of mesh. Set the generator at 1500KC. Turn the variable condenser until a response is indicated. The dial pointer should now co-incide with the 1500KC mark on the dial. Adjust the 1500KC Antenna trimmer (located under the chassis near the band switch) for maximum output. Set the generator at 600KC and turn the variable condenser control until a response is indicated. Adjust the broadcast oscillator padder condenser (located on top of the chassis between the variable condenser and the output I.F. transformer) for maximum response while "rocking" the gang condenser.

BROADCAST

BAND MODELS

389, 453, 493, 939. The dummy antenna for this band consists of only a 250 MMFD condenser. Set the Band Switch in the Broadcast position and condenser plates completely out of mesh. Set the signal generator at 1550KC and adjust the broadcast oscillator trimmer until a response is indicated on the output meter. The generator is now set at 1500KC. Turn the variable condenser until a response is indicated. The dial pointer should now co-incide with the 1500KC mark on the dial. Set the generator at 600KC and turn the variable condenser control until a response is indicated. Adjust the broadcast oscillator padder condenser for maximum response while "rocking" the gang condenser. The high frequency adjustments should now be re-checked.

SHORT-WAVE

BAND #2

MODELS 389, 493, 939. - Set the band switch to the middle position. Turn the dial control knob to the extreme high frequency end so that the condenser plates are entirely out of mesh. The signal generator is left connected as for band #1. The generator is set at 6.25 MC and the Band #2 osc. trimmer is opened until a response is indicated at the lower capacity setting of the trimmer. Set the generator at 6MC and turn the variable condenser until a response is indicated. The pointer should now co-incide with the 6.MC mark on the dial. The antenna trimmer is then adjusted for maximum output while the condenser gang is rocked from right to left. Set the generator at 2.4 MC and turn the variable condenser knob until a response is indicated. The padder for this band is now adjusted for maximum output while rocking the condenser gang from left to right. The high frequency adjustments should then be rechecked.

Long Wave Band: MODELS 453, 1239, The band selector switch is set in position for operation on the long wave band.(extreme right hand position). The receiver and generator are both tuned to 300 kc and the oscillator trimmer is adjusted for maximum response. The antenna and first detector trimmers are adjusted in the order named for maximum output. The signal generator is then set at 150 kc and the signal is tuned in. The long wave padder condenser is adjusted for maximum response while the gang tuning condenser is rocked slightly to the left and right. The 300 kc adjustment should then be re-checked.

- ①. 456 KC FOR MODELS 389, 493, 939, 1239.
- ②. 6K8 TUBE
- ③. 19 MC FOR MODELS 493, 939.
- ④. 1720 KC FOR MODELS 389, 939.
- ⑤. 23 MC 493, 939.
- ⑥. MODEL 389-ADJUST ANTENNA TRIMMER AT 1500 KC for MAXIMUM.

MODELS H73, H77, H78
H79 (Final)
Chassis Wiring, Voltage
Socket, Dial Drive Data

GENERAL ELECTRIC CO.


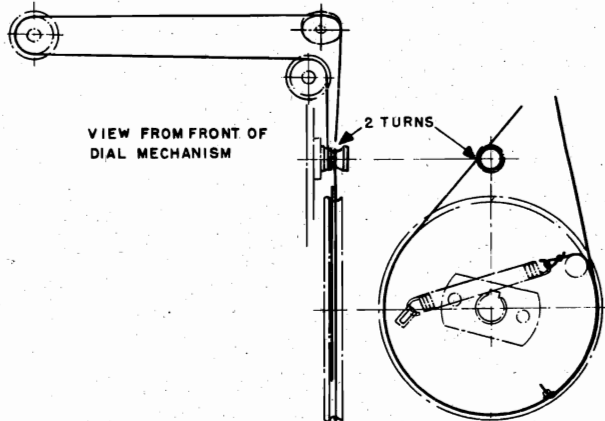


Fig. 6. Dial Drive Stringing Diagram

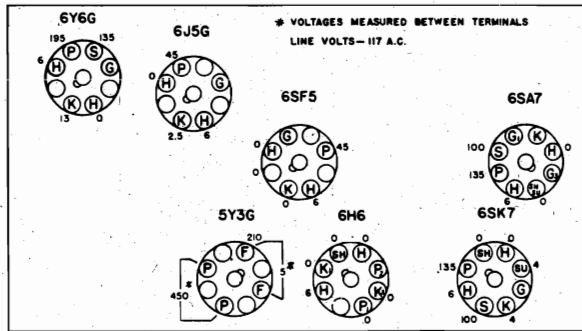

BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED BETWEEN SOCKET TERMINALS AND CHASSIS.

No signal input—Max. Volume—Band "B."

Fig. 5. Socket Voltages

Models H-73, H-77, H-78, and H-79 employ three-band a-c receivers of the superheterodyne type using seven General Electric Pre-tested Tubes. Features of design include the new "Alnico" dynapower speaker, nine Feathertouch Tuning keys, six of which may be set up for favorite stations, a television audio or phonograph key, Visualux dial, iron-core I.F. transformers, iron-core oscillator trimmer coils for station keys and automatic volume control. In addition Model H-73 is equipped with the built-in "Beam-a-Scope" while Models

H-77, H-78, and H-79 are equipped with the built-in "Super Beam-a-scope."

Models H-78 and H-79 each contain a phonograph mechanism for reproducing records. Model H-78 phonograph manually plays 10-inch or 12-inch records. Model H-79 phonograph incorporates an automatic record changer which will play either 10-inch or 12-inch records. Both mechanisms contain high-quality crystal pick-ups and constant speed, self-starting, silent electric motors.

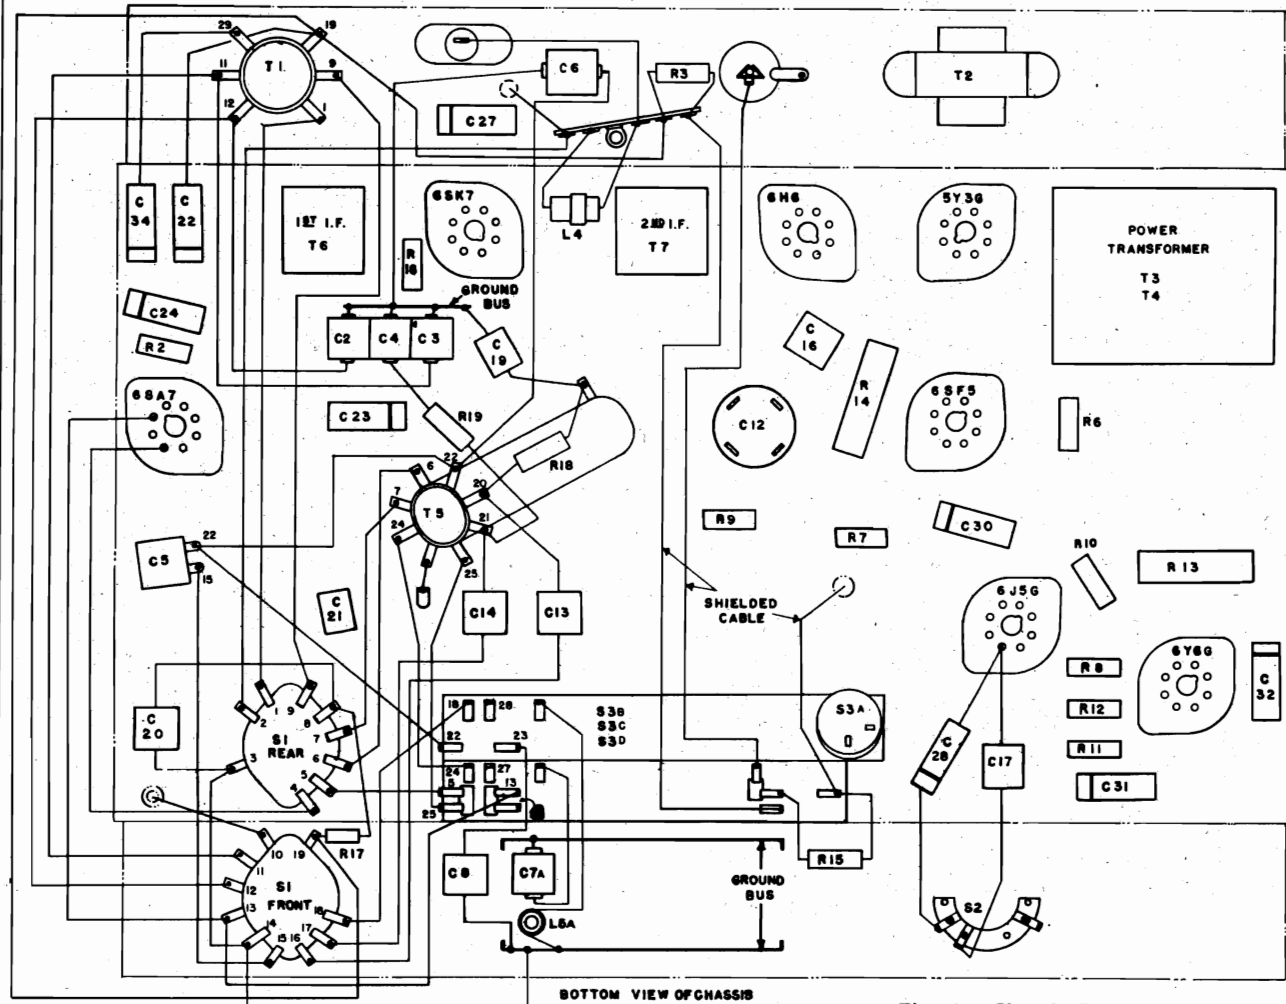


Fig. 4. Chassis Parts Layout

GENERAL ELECTRIC CO.

MODELS H73, H77, H78
H79 (Final)
Trimmers, Coils, Notes
Phono. Data, Gain

GENERAL INFORMATION

Super Beam-a-scope

The Super Beam-a-scope is essentially a tuned coil antenna wound on a frame and shielded by a Faraday screen against electrostatic disturbances. This construction favors the desired signal over a local man-made noise source in three ways. First, since any noise source is composed of two components—electrostatic and electromagnetic fields—the Super Beam-a-scope may be revolved so that a null point is found where no voltage is produced from these two components. Due to the fact that this null point is very sharp, it is very unusual that any desired station will be in a direct line with the rejected noise signal and thereby have its signal strength reduced appreciably. In the second place, the Super Beam-a-scope eliminates local man-made noise sources in much the same way as a shielded antenna lead-in does in an ordinary antenna installation. In the third place the Super Beam-a-scope discriminates against the electrostatic component of an incoming wave in comparison with the electromagnetic component, because of the Faraday shield. Since the electrostatic component of a local noise source is a great deal larger than the electromagnetic component, this rejection property brings about an enormous increase in signal-to-noise ratio.

The above operation is only available on the broadcast band and in this position the Super Beam-a-scope is also the first tuned grid circuit. On the "C" and "D" bands, the Super Beam-a-scope is grounded at the grid end thus preventing absorption spots due to loop resonance.

Loud-speaker

The voice coil is accurately and permanently centered at the factory and should seldom give trouble. In case a voice coil needs recentering it will be necessary to replace the entire cone and voice coil assembly.

NOTE.—In no case should the magnet be removed from the assembled position without remagnetizing before replacing it.

Coil System

L-1 is the Beam-a-Scope. T-1 is the "C" and "D" band antenna transformer while T-5 is the oscillator transformer for all bands. All band switch and coil terminals are numbered in Fig. 3 and Fig. 4 to facilitate in locating common points.

The following table shows the coils in use for the various positions of the band and manual-automatic switch:

Band Switch Position	Antenna Primary	Antenna Secondary	Oscillator Grid	Oscillator Cathode	Remarks
Band "B" Manual Position		L-1	L-6	24 to Gnd. of L-6	C-1 tuning condenser in circuit
Band "B" Automatic Tuning		L-1	L-6	25 to Gnd. of L-6	C-7 and L-5 trimmers and coils in circuit.
Band "C"	L-2	L-2	L-7	6 to Gnd. of L-7	L-1 and L-6 effectively grounded through C-22 and C-5 respectively.
Band "D"	L-3	L-3	L-8	7 to Gnd. of L-8	L-1, L-2 secondary grounded through C-22. L-6, L-7 grounded through C-5 and C-13 respectively.

Phonograph or Television Audio Connections

These models are equipped with a phono-terminal (pin jack) to allow the convenient connection of record players or television audio channels. General Electric plug, Stock No. RP-145, fits the pin jack. Models H-78, and H-79 use the plug connection from phonograph to radio and this plug may be readily removed to allow use of other record players, sound equipment or television sound converters.

NOTE.—A suitable load consisting of a 100,000-ohm resistor in series with .01 mfd. capacitor should be connected across the pick-up leads when using a crystal-type unit.

Alignment Procedure

The alignment procedure is given in table form. Use a standard I.R.E. "dummy" antenna, Fig. 7, in making all R.F. alignments. The relative position of the Beam-a-Scope with respect to the chassis materially affects R.F. alignment on "B" band; therefore, final alignment on "B" band should be made after the chassis and Beam-a-Scope are mounted in the cabinet.

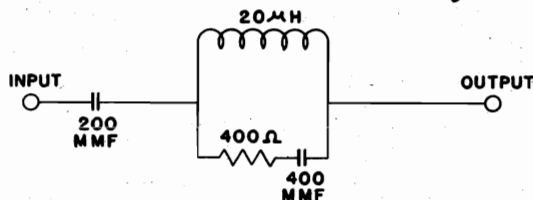


Fig. 7. I. R. E. Dummy Antenna

PHONOGRAPH MECHANISM (H-78)

The phonograph mechanism used in this receiver has been designed to be as simple as possible and give long and trouble-free performance. Under normal operating conditions service difficulties should be negligible. Occasionally, however, certain adjustments may be required.

Trip Mechanism

The trip mechanism is of simple design and consists of a latch bar connected to the motor switch and a trip lever. The latch is held closed by means of a spring between the latch bar and the trip lever. The motor switch is mechanically connected to the latch bar so that when the trip mechanism is released, the motor switch is in the "Off" position. Be sure this latch bar mechanism works freely without binding.

The trip is actuated by an adjustable arm on the trip lever. When the eccentric groove in the record swings the tone arm back and forth, it pushes the latch out of engagement.

Crystal Pick-up

The crystal pick-up employs a crystal element which is coupled to a light needle chuck. The needle movement bends the crystal element thus generating voltage by the piezoelectric effect. The voltage developed is dependent upon the needle movement amplitude and the load resistance.

The crystal cartridge is a factory-sealed unit and no adjustments are provided. The cartridge is held in the tone arm by means of two screws. The pick-up and tone-arm assembly should require very little servicing and if treated with reasonable care should perform its function without attention for long periods of time.

Special Service Information

The following information will be found very useful in servicing receivers if a vacuum tube voltmeter or similar voltage-measuring instrument is available.

- Stage Gains
 - Antenna Post to Converter Grid
 - Band "B"..... 6 to 9
 - Band "C"..... 3 to 4
 - Band "D"..... 1.5 to 3
 - Converter Grid to 6SK7 Grid..... 45 at 455 K.C. †
 - 6SK7 Grid to 6H6 Det. Plate..... 45 at 455 K.C. †
- A 400-cycle signal of .04 volts across the volume control will give ½ watt speaker output. † (Volume control turned to maximum.)
- Average d-c voltage developed across oscillator grid resistor (R-2)
 - Band "B"..... 6 to 8 volts
 - Band "C"..... 5 to 7 volts
 - Band "D"..... 2.5 to 5 volts

† Variations of +10%, -20% permissible.

FOR RECORD CHANGER DATA SEE INDEX

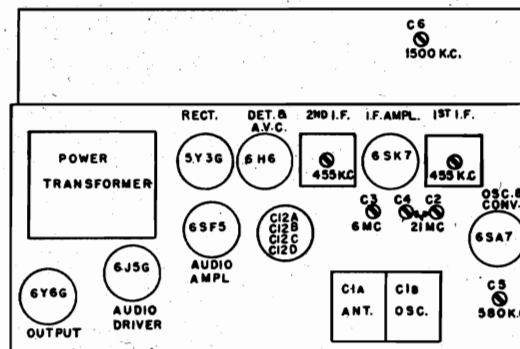


Fig. 2. Trimmer Location

MODELS H73, H77, H78
H79 (Final)
Alignment, Parts

GENERAL ELECTRIC CO.

ALIGNMENT PROCEDURE

I. F. ALIGNMENT WITH OSCILLOSCOPE

Band Switch Setting	Input Freq.	Point of Input	Dummy Antenna	Trimmer	Comments
1. Band "B"	455 K.C. Sweep	I.F. Grid	.05 Mfd. or Larger	2nd I.F. Sec. 2nd I.F. Pri. (T-7)	Gang condenser plates closed—"Manual" key depressed—connect audio input of oscilloscope to chassis and to junction of R-3 and R-15. Adjust trimmers in order mentioned for a single symmetrical curve of maximum amplitude. The resultant curve is shown in Fig. 1.
2. Band "B"	455 K.C. Sweep	Converter Grid	.05 Mfd. or Larger	1st I.F. Sec. 1st I.F. Pri. (T-6)	

I. F. ALIGNMENT WITH OUTPUT METER

1. Band "B"	455 K.C. Sweep	I.F. Grid	.05 Mfd. or Larger	2nd I.F. Sec. 2nd I.F. Pri. (T-7)	Gang condenser plates closed—connect output meter across voice coil—keep input signal low and volume control on as far as possible. Adjust all trimmers for maximum output.
2. Band "B"	455 K.C. Sweep	Converter Grid	.05 Mfd. or Larger	1st I.F. Sec. 1st I.F. Pri. (T-6)	

R. F. ALIGNMENT

1. Band "B"					Close gang plates—adjust pointer to first line at left end of tuning scale. Connect output meter across voice coil—tone control on "Bass" position.
2. Band "D"	21 M.C. with Modulation	Antenna Post	I.R.E.	Osc. (C-4) Ant. (C-2)	The image of any "D" band signal should be heard 910 K.C. below signal input when (C-4) is on proper peak. Example: 18 M.C. image 17.09 M.C. Peak (C-2) while rocking the gang condenser.
3. Band "C"	6 M.C. with Modulation	Antenna Post	I.R.E.	Ant. (C-3)	Peak for maximum output with a low input signal.
4. Band "B"	580 K.C. with Modulation	Antenna Post	I.R.E.	Osc. Padder (C-5)	Set dial pointer to 580 K.C. and tune in signal with (C-5) while rocking gang condenser.
5. Band "B"	1500 K.C. with Modulation	Antenna Post	I.R.E.	Osc. (C-6)	Peak trimmer for maximum output while rocking the gang condenser.
6. Band "B"	580 K.C. with Modulation	Antenna Post	I.R.E.	Osc. Padder (C-5)	Retrim for maximum output with a low input signal, rocking gang condenser.

Stock No.	Description	List Price
	PHONOGRAPH ASSEMBLY (H-78)	
	Tone Arm Assembly	
RA-414	ARM—Tone arm.....	1.20
RC-8152	CORD—Tone arm lamp cord.....	.40
RP-505	PICK-UP—Crystal cartridge.....	5.40
RP-800	PIVOT—Tone arm pivot.....	1.20
RS-272	SOCKET—Lamp socket assembly.....	.50
RS-876	SCREW—Needle clamping screw (Pkg. 10).....	.10
RT-915	TONE ARM—Tone arm assembly (complete).....	\$6.70
RX-069	ASSEMBLY—Pilot light connector assembly.....	.20
	Automatic Stop Assembly	
RA-411	ARM—Trip arm tension washer and screw assembly.....	.25
RS-469	SPRING—Automatic stop locking spring (Pkg. 3).....	.25
RX-064	ASSEMBLY—Automatic stop assembly.....	1.85
	Motor Turntable Assembly	
RB-184	BRACKET—Turntable drive wheel bracket assembly.....	.15
RB-185	BRACKET—Lower motor bearing bracket assembly complete.....	.40
RF-502	FIELD—60-cycle field stator assembly complete.....	3.60
RF-503	FIELD—50-cycle field stator assembly complete.....	3.60
RF-504	FRAME—Upper motor frame assembly.....	.60
RM-127	MOTOR—60-cycle motor assembly complete less turntable.....	5.85
RM-128	MOTOR—50-cycle motor assembly complete less turntable.....	6.40
RN-101	NEEDLE CUP—Needle cup (Model H-78).....	.10
RP-151	PLATE—Motor mounting plate assembly.....	.45
RP-152	PLUG—Phono motor power connector plug.....	.25

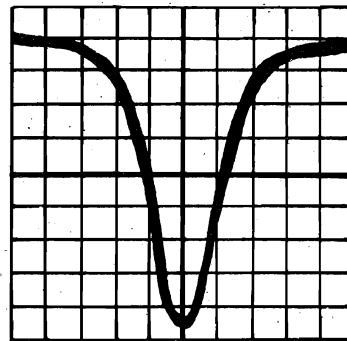


Fig. 1. Over-all I. F. Curve Taken on G-E Oscilloscope OFM-1

RP-311	PULLEY—60-cycle motor pulley and set-screw.....	.20
RP-312	PULLEY—50-cycle motor pulley and set-screw.....	.25
RR-406	ROTOR—Rotor complete.....	1.55
RS-467	SPRING—Turntable drive tension spring.....	.10
RS-875	SETSCREW—Motor pulley setscrew (Pkg. 12).....	.25
RS-932	SPINDLE—Turntable spindle and cotter.....	.30
RT-913	TURNTABLE—10-inch turntable.....	1.20
RW-909	WHEEL—Rubber edged drive wheel.....	.50
RX-065	ASSEMBLY—Turntable drive wheel bracket mounting washer, screw and nut assembly (Pkg. 5).....	.20
RX-066	ASSEMBLY—Lower bearing bracket screw and nut assembly (Pkg. 3).....	.05
RX-067	ASSEMBLY—Motor mounting screw, washer and grommet assembly (Pkg. 3).....	.25
RX-068	ASSEMBLY—Drive wheel oil retainer, cotter and thrust washer assembly (Pkg. 5).....	.10

(Prices Subject to Change without Notice)

GENERAL ELECTRIC CO.

MODELS H73, H77, H78 H79 (Final) Parts List MODELS H622, H623 Dial Drive Data, Parts

REPLACEMENT PARTS LIST MODELS H-73, H-77, H-78 AND H-79

Stock No.	Description	List Price	Stock No.	Description	List Price
CHASSIS ASSEMBLY					
*RB-008	BOARD—Terminal board (2 lug)	\$0.10	*RQ-1365	RESISTOR—15 megohm, 1/4 W. carbon (R-6) (Pkg. 5)	.70
*RB-009	BOARD—Terminal board (1 lug—end mounted)	.10	*RS-236	SOCKET—Pilot lamp socket	.10
*RB-026	BOARD—Antenna terminal board	.10	RS-252	SOCKET—Octal tube socket	.15
*RB-046	BOARD—Terminal board (5 lug)	.15	RS-270	SOCKET—Electrolytic mounting socket	.25
*RB-096	BOARD—Terminal board (3 lug)	.10	RS-423	SOCKET—Phono motor connector socket	.25
*RB-621	BEZEL—Pilot lamp bezel (Model H-79)	.20	RS-464	SPRING—Knob spring (Pkg. 10)	.25
RB-910	BACK COVER—Cabinet back cover (Model H-73)	.30	RS-1805	SHIELD—Beam-Scope electrostatic shield (Models H-78, 79)	1.10
RB-929	BACK COVER—Cabinet back cover (Model H-77)	.45	RS-1808	SHIELD—Beam-Scope electrostatic shield (Model H-77)	1.10
RB-1009	BOARD—Phono terminal board	.45	RS-3022	SWITCH—Touch Tuning switch assembly (S-3)	7.60
RB-1010	BOARD—Beam-A-Scope terminal board (Model H-77)	.10	RS-3023	SWITCH—Tone control switch (S-2)	.50
*RC-009	CAPACITOR—.001 mfd. 600 V. paper (C-35)	.30	RS-3024	SWITCH—Band-change switch (S-1)	\$1.00
*RC-016	CAPACITOR—.002 mfd. 600 V. paper (C-28)	.25	RS-3055	SWITCH—Power switch on key assembly (S-3)	.40
*RC-023	CAPACITOR—.003 mfd. 600 V. paper (C-26, 30)	.25	RT-0520	TRANSFORMER—60 cycle power transformer (T-3)	4.35
*RC-039	CAPACITOR—.01 mfd. 600 V. paper (C-29, 32, 33)	.25	RT-0521	TRANSFORMER—25 cycle power transformer (T-4)	7.90
*RC-047	CAPACITOR—.02 mfd. 600 V. paper (C-31)	.30	RT-513	TRANSFORMER—1st I.F. transformer (T-6)	1.70
*RC-058	CAPACITOR—.0072 mfd. 600 V. paper (C-25)	.30	RT-314	TRANSFORMER—2nd I.F. transformer (T-7)	1.90
*RC-092	CAPACITOR—.05 mfd. 600 V. paper (C-22, 23, 24, 34)	.25	RT-462	TRANSFORMER—Output transformer (T-2)	1.40
*RC-096	CAPACITOR—.01 mfd. 200 V. paper (C-27)	.30	RT-862	TRIMMER STRIP—Ant. Touch Tuning trimmer strip (C-7)	1.20
*RC-206	CAPACITOR—40 mmf. mica (C-21)	.25	RT-863	TRIMMER STRIP—"C" "D" band ant., "D" band osc. trimmers (C-2, 3, 4)	.45
RC-233	CAPACITOR—22 mmf. mica (C-19)	.25	*RT-952	TERMINAL—Beam-Scope pin terminal (Pkg. 10)	.05
RC-235	CAPACITOR—100 mmf. mica (C-15, 16)	.25	RT-954	TERMINAL—Speaker lead terminal (Pkg. 10)	.10
RC-301	CAPACITOR—680 mmf. mica (C-17)	.35	RV-067	VOLUME CONTROL—2 megohm volume control (150,000 ohm tap) (R-1)	.65
RC-307	CAPACITOR—750 mmf. silvered mica (C-8)	.40	*RW-101	WASHERS—Felt washers for knobs (Pkg. 10)	.05
RC-358	CAPACITOR—2000 mmf. mica (C-13)	.40	RW-908	WHEEL—Tuning or volume control wheel	.30
RC-394	CAPACITOR—4700 mmf. mica (C-20)	.40	SPEAKER ASSEMBLY		
RC-399	CAPACITOR—6500 mmf. mica (C-14)	.45	RC-9009	CONE ASSEMBLY—Cone assembly (Models H-77, 78, 79)	.95
RC-875	CARD—Power card	.40	RC-9010	CONE ASSEMBLY—Cone assembly Model H-73	.90
RC-1987	CLAMP—Clamp for osc. or ant. coil (Pkg. 2)	.05	RP-128	PLUG—Speaker plug (Model H-73)	.10
RC-1989	CUSHION—Tuning condenser cushion (Pkg. 5)	.05	RP-129	PLUG—Speaker plug (Model H-77)	.10
RC-5148	CAPACITOR—40 mfd., 250 V., 20 mfd., 250 V.; 20 mfd., 250 V.; 20 mfd., 25 V.	1.75	RS-1011	SPEAKER—12 inch P.M. speaker (Models H-77, 78, 79)	4.80
RC-6509	CAPACITOR—"B" band padder capacitor (C-5)	.35	RS-1012	SPEAKER—6 1/2 inch P.M. speaker (Model H-73)	3.25
RC-6510	CAPACITOR—"B" band osc. trimmer (C-6)	.35	POINTER DRIVE ASSEMBLY		
RC-6526	CAPACITOR—7.65 mmf. trimmer (C-7F)	.20	RB-177	BRACKET—Pulley assembly mounting bracket (L.H.) (Models H-78, 79)	.15
RC-6527	CAPACITOR—20-180 mmf. trimmer (C-7D, 7E)	.35	RB-178	BRACKET—Pulley bracket assembly	.60
RC-6528	CAPACITOR—100-600 mmf. trimmer (C-7A, 7B, 7C)	.35	RB-195	BRACKET—Pulley assembly mounting bracket (L.H.) (Models H-73, 77)	.20
RC-7011	CONDENSER—Tuning condenser (C-1a, 1b)	2.15	RB-196	BRACKET—Pulley assembly mounting bracket (R.H.) (Models H-73, 77)	.30
RC-8500	CARDS—Station letter cards (set)	.50	RB-197	BRACKET—Pulley assembly mounting bracket (R.H.) (Models H-78, 79)	.30
RC-8505	CARDS—"Manual" tabs (Pkg. 10)	.05	RB-625	BUSHING—Tuning control shaft bushing	.10
RC-8506	CARDS—"Phono-Tele" tabs (Pkg. 10)	.05	RC-8125	CORD—Tuning drive cord assembly	.20
RC-8507	CARDS—"Off" tabs (Pkg. 10)	.05	RD-407	DRUM—Condenser tuning drum assembly	.40
RD-108	DIAL—Dial scale	.70	RH-006	HAIRPIN COTTER—Tuning drive shaft hairpin cotter (Pkg. 10)	.10
RE-056	ESCUTCHEON—Dial scale escutcheon	1.25	RM-501	MASK—Reflector mask (Pkg. 10)	.05
RE-057	ESCUTCHEON—Touch Tuning key escutcheon	1.15	RP-127	POINTER—Dial scale pointer (Pkg. 5)	.25
RE-208	ESCUTCHEON ASSEMBLY—Dial scale escutcheon complete	2.25	*RP-303	PULLEY—Tuning drive pulley and pins (Pkg. 2)	.10
RF-017	FOOT—Chassis mounting foot (Pkg. 5)	.10	RS-463	SPRING—Tuning drive cord spring (Pkg. 5)	.10
RK-044	KNOB—Tone control and band-change knob (Pkg. 2)	\$0.40	RS-924	SHAFT—Tuning control shaft	.15
RL-082	COIL—Antenna coil "C", "D" bands (T-1)	.15	*Used on previous receivers.		
RL-287	COIL—Oscillator coil "B", "C", "D" bands (T-5)	.85	(Prices Subject to Change without Notice)		
RL-345	CHOKE—1/2 mhy. antenna choke (L-4)	.30	MODELS H-622 AND H-623		
RL-504	BEAM-A-SCOPE—Beam-A-Scope assembly (Model H-73)	1.80			
RL-505	BEAM-A-SCOPE—Beam-A-Scope assembly (Model H-77)	5.85			
RL-510	BEAM-A-SCOPE—Beam-A-Scope assembly (Model H-78, 79)	6.60			
RL-9510	COIL—Touch Tuning trimmer coil assembly (L-5)	1.80			
RL-9513	COIL—Touch Tuning trimmer coil (Range: 1200-1500 K.C.) (Code—None) (L-5F)	.15			
RL-9514	COIL—Touch Tuning trimmer coil (Range: 850-1400 K.C.) (Code—Red) (L-5D, 5E)	.15			
RL-9515	COIL—Touch Tuning trimmer coil (Range: 540-900 K.C.) (Code—Blue) (L-5A, 5B, 5C)	.15			
RP-133	PLUG—Loop terminal plug (Models H-77, 78, 79)	.05			
*RQ-642	RESISTOR—220 ohm, 2 W. carbon (R-19)	.20			
*RQ-670	RESISTOR—3300 ohm, 2 W. carbon (R-14) (Pkg. 5)	.70			
*RQ-1231	RESISTOR—68 ohm, 1/2 W. carbon (R-19) (Pkg. 5)	.70			
*RQ-1239	RESISTOR—150 ohm, 1/2 W. carbon (R-18) (Pkg. 5)	.70			
*RQ-1251	RESISTOR—470 ohm, 1/2 W. carbon (R-10) (Pkg. 5)	.70			
*RQ-1271	RESISTOR—3300 ohm, 1/2 W. carbon (R-10) (Pkg. 5)	.70			
*RQ-1273	RESISTOR—3900 ohms, 1/2 W. carbon (R-9) (Pkg. 5)	.70			
*RQ-1291	RESISTOR—22,000 ohms, 1/2 W. carbon (R-2) (Pkg. 5)	.70			
*RQ-1299	RESISTOR—7,000 ohms, 1/2 W. carbon (R-15, 17) (Pkg. 5)	.70			
*RQ-1301	RESISTOR—50,000 ohms, 1/2 W. carbon (R-5) (Pkg. 5)	.70			
*RQ-1307	RESISTOR—100,000 ohms, 1/2 W. carbon (R-1, 20) (Pkg. 5)	.70			
*RQ-1315	RESISTOR—220,000 ohms, 1/2 W. carbon (R-7) (Pkg. 5)	.70			
*RQ-1319	RESISTOR—330,000 ohms, 1/2 W. carbon (R-12) (Pkg. 5)	.70			
*RQ-1323	RESISTOR—470,000 ohms, 1/2 W. carbon (R-4) (Pkg. 5)	.70			
*RQ-1331	RESISTOR—1.0 megohm, 1/2 W. carbon (R-8, 21) (Pkg. 5)	.70			
*RQ-1339	RESISTOR—2.2 megohm, 1/2 W. carbon (R-3) (Pkg. 5)	.70			


REPLACEMENT PARTS LIST Models H-622 and H-623

Stock No.	Description	List Price
CHASSIS ASSEMBLY		
RA-315	CONDENSER ASSEMBLY—Tuning condenser and drive unit complete	\$5.75
*RB-023	BOARD—Terminal board (4 lugs)	.10
RB-041	BOARD—Terminal board (2 lugs)	.10
RB-182	BRACKET—Beam-A-Scope bracket	.10
RB-936	BACK COVER—Cardboard cabinet back	.15
RB-1018	BOARD—Antenna terminal board	.10
*RC-011	CAPACITOR—.002 mfd. 600 V. paper (C-14)	.25
*RC-023	CAPACITOR—.005 mfd. 600 V. paper (C-18, 19)	.25
*RC-039	CAPACITOR—.01 mfd. 600 V. paper (C-10, 20, 25)	.25
*RC-048	CAPACITOR—.02 mfd. 600 V. paper (C-16)	.30
*RC-092	CAPACITOR—.05 mfd. 600 V. paper (C-7, 24)	.30
*RC-123	CAPACITOR—.01 mfd. 400 V. paper (C-8, 28)	.35
*RC-216	CAPACITOR—.47 mmf. mica (C-20)	.25
*RC-250	CAPACITOR—.470 mmf. mica (C-13)	.30
*RC-390	CAPACITOR—3900 mmf. mica (C-4)	.35
*RC-645	CAPACITOR—Beam-A-Scope and "B" band osc. trimmers (C-9, 21)	4.15
RC-749	CONDENSER—Tuning condenser (C-1, 2)	2.15
*RC-863	CORD—Power cord	.65
RC-1995	CLAMP—Oscillator coil clamp (Pkg. 5)	.10
RC-5136	CAPACITOR—50 mfd. 600 V. paper (C-15)	1.15
RC-0510	CAPACITOR—dry electrolytic (C-22a, 22b)	1.10
RC-0517	CAPACITOR—"B" band padder (C-3)	.30
RC-0516	CAPACITOR—"D" band ant. and osc. trimmers (C-5, 6)	.30
RC-8130	CABLE—Tuning drive cable assembly	.15
RC-8500	CARD—Station letter card (1 set) (Used on keys of both models)	.20
RC-8517	CARD—Station tab card (1 set) (Model H-623) (Used on escutcheon)	.60
RC-9010	CONE ASSEMBLY—0.5 inch speaker cone assembly	.90
RD-110	DIAL—Dial scale	1.00
RG-302	GROMMET—Tuning shaft drive cord grommet (Pkg. 10)	.10
RK-055	KNOB—Light on control knob (Pkg. 5)	.50
RK-209	KEY—Light on station selector key	.15
RK-217	KEY—Green station selector key (Model H-623)	.15
RL-098	COIL—"D" band antenna coil (Code—Orange) (L-2)	.65
RL-296	COIL—Oscillator coil (L-3)	.70
RL-340	CHOKE—Antenna choke (L-8)	.30
RL-522	BEAM-A-SCOPE—Beam-A-Scope antenna (L-1)	.85
RL-937	LUG—Key pin binding lug (Pkg. 10)	.10
RM-203	MASK—Dial scale mask (Pkg. 10)	.10
RN-500	NAMEPLATE—Dial scale metal nameplate (Model H-622)	.20
RN-201	NAMEPLATE—Dial scale metal nameplate (Model H-623)	.25
RP-134	PIN—Station selector key pin (Pkg. 10)	.05
RP-144	POINTER—Dial scale pointer (Pkg. 5)	\$0.25
RP-307	PULLEY—Condenser drive cord pulley (Pkg. 5)	.25
RP-308	PULLEY—1/2 inch drive cord idler pulley (Pkg. 5)	.10
RP-309	PULLEY—1/2 inch drive cord idler pulley (Pkg. 5)	.10
*RQ-1235	RESISTOR—100 ohms, 1/2 W. carbon (R-16) (Pkg. 5)	.70
*RQ-1239	RESISTOR—150 ohms, 1/2 W. carbon (R-12) (Pkg. 5)	.70
*RQ-1259	RESISTOR—1000 ohms, 1/2 W. carbon (R-13) (Pkg. 5)	.70
*RQ-1271	RESISTOR—3300 ohms, 1/2 W. carbon (R-9) (Pkg. 5)	.70
*RQ-1295	RESISTOR—33,000 ohms, 1/2 W. carbon (R-1) (Pkg. 5)	.70
*RQ-1297	RESISTOR—39,000 ohms, 1/2 W. carbon (R-10) (Pkg. 5)	.70
*RQ-1323	RESISTOR—470,000 ohms, 1/2 W. carbon (R-5, 7, 11, 15) (Pkg. 5)	.70
*RQ-1381	RESISTOR—1.0 megohm, 1/2 W. carbon (R-8) (Pkg. 5)	.70
*RQ-1339	RESISTOR—2.2 megohms, 1/2 W. carbon (R-2) (Pkg. 5)	.70
*RQ-1365	RESISTOR—15 megohms, 1/2 W. carbon (R-6) (Pkg. 5)	.70
RR-772	RESISTOR—BL40D ballast resistor (R-14)	.45
RR-941	REFLECTOR—Dial scale reflector	.75
RS-256	SOCKET—Octal tube socket (Pkg. 5)	.25
RS-261	SOCKET—Electrolytic mounting socket (Pkg. 5)	.25
*RS-326	SOCKET—Pilot lamp socket (Pkg. 5)	.20
RS-511	SPRING—Condenser drive cord spring (Pkg. 5)	.10
RS-510	SPACER—Station key spacer (Pkg. 10)	.15
RS-306	SLEEVE—Condenser bracket spacer sleeve (Pkg. 10)	.15
RS-929	SHAFT—Tuning shaft	.10
RS-1012	SPEAKER—6.5 inch P.M. speaker	3.25
RT-328	SWITCH—Band change switch (L-1)	1.00
RT-329	TRANSFORMER—1st I.F. transformer (L-7)	.60
RT-329	TRANSFORMER—2nd I.F. transformer (L-4)	1.20
RT-469	TRANSFORMER—Output transformer (T-1)	1.25
RT-954	TERMINAL—Speaker lead terminal (Pkg. 10)	.10
RV-072	VOLUME CONTROL—2.0 megohms volume control (R-4)	.80
RW-039	WINDOW—Celluloid station letter window (Pkg. 25)	.10
*RW-101	WASHER—Control shaft felt washer (Pkg. 10)	.05
*RX-035	ASSEMBLY—Condenser mounting foot assembly	.15
RX-061	ASSEMBLY—Chassis mounting assembly	.15
RX-062	ASSEMBLY—Speaker mounting assembly	.10

*Used on previous receivers
(Prices subject to change without notice)

MODEL HM80
Schematic, Socket
Trimmers

GENERAL ELECTRIC CO.

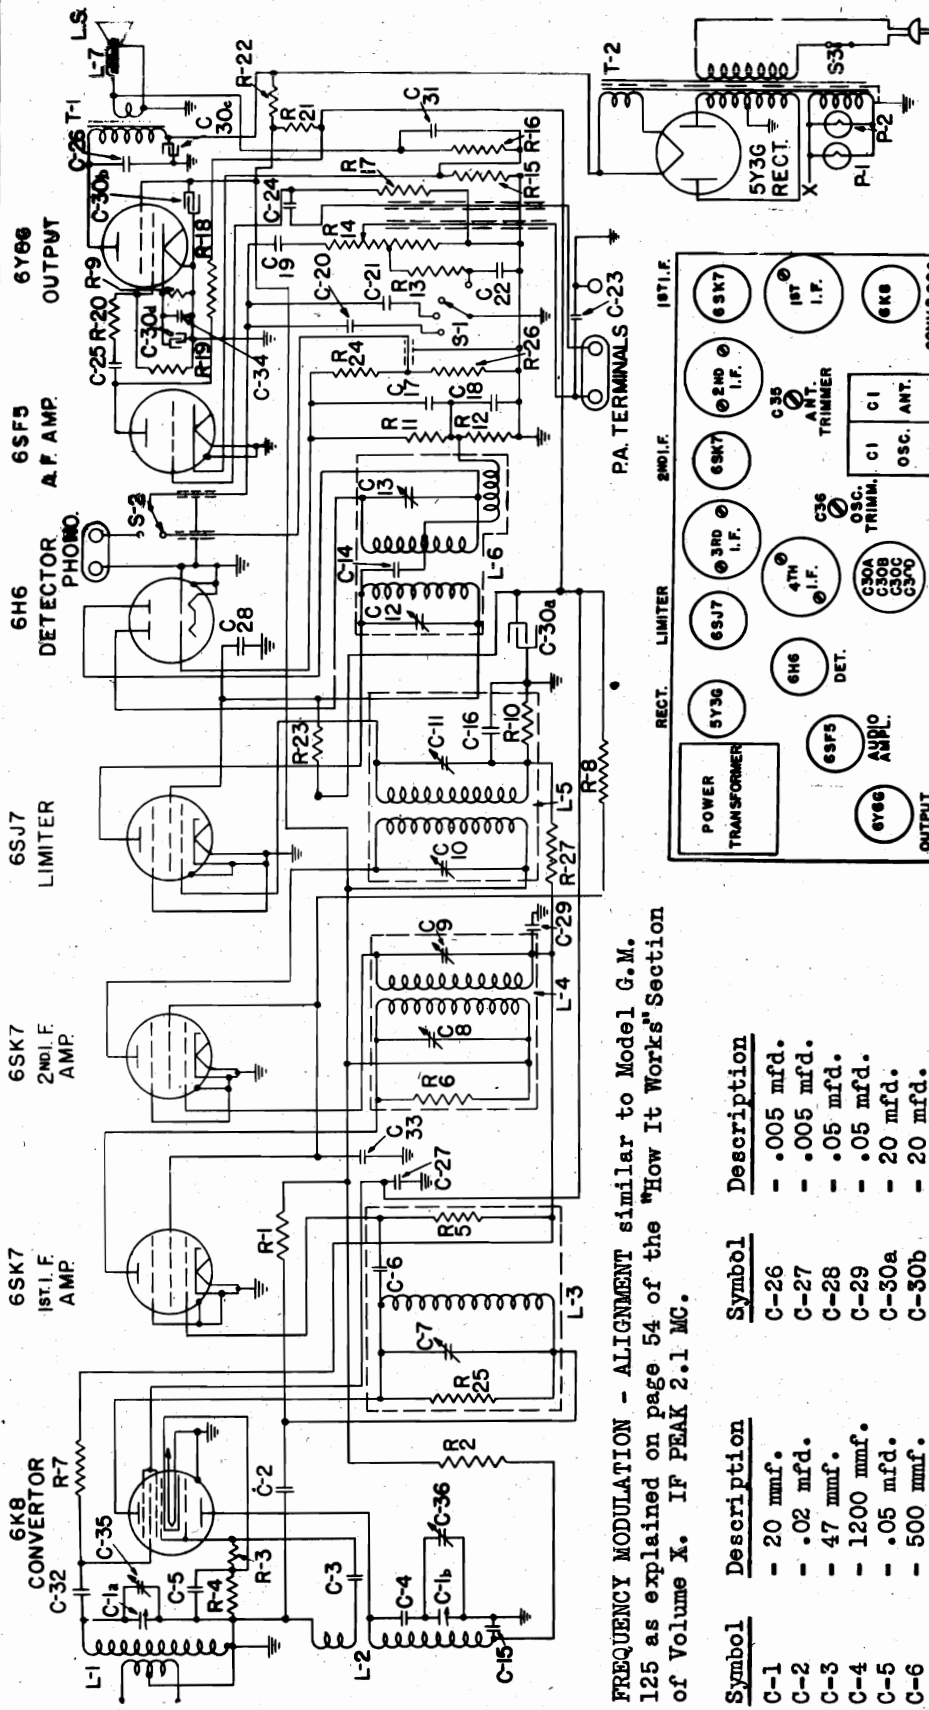


FREQUENCY MODULATION - ALIGNMENT similar to Model G.M. 125 as explained on page 54 of the "How It Works" Section of Volume X. IF PEAK 2.1 MC.

Symbol	Description	Symbol	Description	Symbol	Description
C-1	- 20 mmf.	R-5	- 470 000 ohms	R-15	- 82 ohms
C-2	- .02 mfd.	R-6	- 47 000 ohms	R-16	- 220 ohms
C-3	- 47 mmf.	R-7	- 470 000 ohms	R-17	- 15 megohms
C-4	- 1200 mmf.	R-8	- 4 700 ohms	R-18	- 220 000 ohms
C-5	- .05 mfd.	R-9	- 220 ohms	R-19	- 470 000 ohms
C-6	- 500 mmf.	R-10	- 2-15 mmf.	R-20	- 1500 ohms
C-14	- 47 mmf.	R-11	- 7-23 mmf.	R-21	- 2200 ohms
C-15	- 470 mmf.	R-12	- 2200 ohms	R-22	- 1600 ohms
C-16	- 22 mmf.	R-13	- 6000 ohms	R-23	- 2200 ohms
C-17	- 100 mmf.	R-14	- 47000 ohms	R-24	- 2200 ohms
C-18	- 100 mmf.				
C-19	- .005 mfd.				
C-20	- .002 mfd.				
C-21	- 470 mmf.				
C-22	- .002 mfd.				
C-23	- 220 mmf.				
C-24	- .005 mfd.				
C-25	- .05 mfd.				
C-26	- .005 mfd.				
C-27	- .005 mfd.				
C-28	- .05 mfd.				
C-29	- .05 mfd.				
C-30a	- 20 mfd.				
C-30b	- 20 mfd.				
C-30c	- 40 mfd.				
C-30d	- 20 mfd.				
C-31	- 0.1 mfd.				
C-32	- 470 mmf.				
C-33	- 0.1 mfd.				
C-34	- .05 mfd.				
C-35	- 2-15 mmf.				
C-36	- 7-23 mmf.				
R-1	- 2200 ohms				
R-2	- 6000 ohms				
R-3	- 47000 ohms				
R-4	- 330 ohms				
R-5	- 470 000 ohms				
R-6	- 47 000 ohms				
R-7	- 470 000 ohms				
R-8	- 4 700 ohms				
R-9	- 220 ohms				
R-10	- 2-15 mmf.				
R-11	- 7-23 mmf.				
R-12	- 2200 ohms				
R-13	- 6000 ohms				
R-14	- 47000 ohms				
R-15	- 82 ohms				
R-16	- 220 ohms				
R-17	- 15 megohms				
R-18	- 220 000 ohms				
R-19	- 470 000 ohms				
R-20	- 1500 ohms				
R-21	- 2200 ohms				
R-22	- 1600 ohms				
R-23	- 2200 ohms				
R-24	- 2200 ohms				
R-25	- 33 000 ohms				
R-26	- 220 000 ohms				
R-27	- 2.2 megohms				

IF PEAK 2.1 MC

GENERAL ELECTRIC CO.

MODEL H87
Schematic, Socket
Trimmers

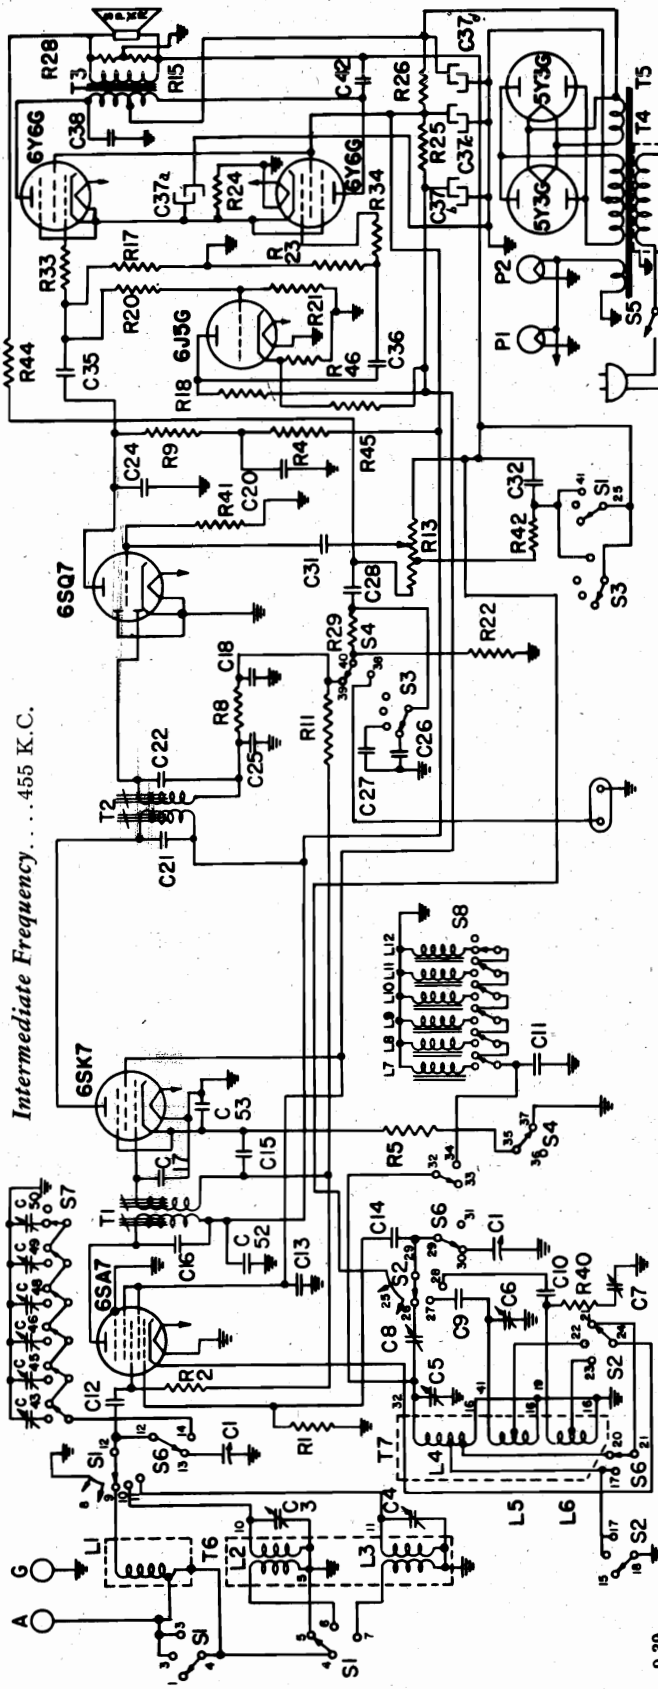

Intermediate Frequency... 455 K.C.

9-39

Symbol	Description	Symbol	Description	Symbol	Description
C-1	Tuning Capacitor	R-20	3.3 megohms, Carbon Resistor	P-1	Pilot Light, MAZDA No. 44
C-2	"C" Band Antenna Trimmer	R-21	270,000 ohms, Carbon Resistor	P-2	Pilot Light, MAZDA No. 44
C-3	"D" Band Antenna Trimmer	R-22	220,000 ohms, Carbon Resistor	S-1	Antenna Band Switch
C-4	"B" Band Oscillator Trimmer	R-23	150,000 ohms, Carbon Resistor	S-2	Oscillator Band Switch
C-5	"C" Band Oscillator Trimmer	R-24	100,000 ohms, Carbon Resistor	S-3	Phono Switch
C-6	"D" Band Oscillator Trimmer	R-25	100,000 ohms, Carbon Resistor	S-4	Power Switch
C-7	"C" Band Oscillator Trimmer	R-26	100,000 ohms, Carbon Resistor	S-5	Manual Switch
C-8	"B" Band Padder	R-27	15,000 ohms, 1-W. Carbon Resistor	S-6	Antenna Section, Touch Tuning
C-9	1600 mmf., Mica Capacitor #5%	R-28	270 ohms, Carbon Resistor	S-7	Switch Section, Touch Tuning
C-10	4300 mmf., Mica Capacitor #5%	R-29	47,000 ohms, Carbon Resistor	S-8	Oscillator Section, Touch Tuning
C-11	750 mmf., Silvered Mica Capacitor #5%	R-30	1000 ohms, Carbon Resistor		
C-12	150 mmf., Mica Capacitor	R-31	33 ohms, Carbon Resistor		
C-13	0.1 mfd., Paper Capacitor	R-32	47 megohms, Carbon Resistor		
C-14	47 mmf., Mica Capacitor	R-33	100,000 ohms, Carbon Resistor		
C-15	0.1 mfd., Paper Capacitor	R-34	4.7 megohms, Carbon Resistor		
C-16	47 mmf., Mica Capacitor	R-35	100,000 ohms, Carbon Resistor		
C-17	47 mmf., Mica Capacitor	R-36	4.7 megohms, Carbon Resistor		
C-18	25 mfd., Paper Capacitor	R-37	15,000 ohms, 1-W. Carbon Resistor		
C-19	100 mmf., Mica Capacitor	R-38	270 ohms, Carbon Resistor		
C-20	47 mmf., Mica Capacitor	R-39	33 ohms, Carbon Resistor		
C-21	47 mmf., Mica Capacitor	R-40	47 megohms, Carbon Resistor		
C-22	.0015 mfd., Paper Capacitor	R-41	33 ohms, Carbon Resistor		
C-23	.01 mfd., Paper Capacitor	R-42	47 megohms, Carbon Resistor		
C-24	.01 mfd., Paper Capacitor	R-43	100,000 ohms, Carbon Resistor		
C-25	.003 mfd., Paper Capacitor	R-44	4.7 megohms, Carbon Resistor		
C-26	.05 mfd., Paper Capacitor	R-45	4.7 megohms, Carbon Resistor		
C-27	.05 mfd., Paper Capacitor	R-46	15,000 ohms, 1-W. Carbon Resistor		
C-28	20 mfd., 25 V. Dry Electrolytic	R-47	270 ohms, Carbon Resistor		
C-29	20 mfd., 250 V. Dry Electrolytic	R-48	330,000 ohms, Carbon Resistor		
C-30	40 mfd., 250 V. Dry Electrolytic	R-49	68,000 ohms, Carbon Resistor		
C-31	.02 mfd., Paper Capacitor	R-50	330,000 ohms, Carbon Resistor		
C-32	Tuning Capacitor	R-51	7-65 mmf., Antenna Trimmer		
C-33	"D" Band Antenna Trimmer	R-52	20-180 mmf., Antenna Trimmer		
C-34	"B" Band Antenna Trimmer	R-53	100-490 mmf., Antenna Trimmer		
C-35	"C" Band Antenna Trimmer	R-54	100-490 mmf., Antenna Trimmer		
C-36	"D" Band Antenna Trimmer	R-55	25 mfd., Paper Capacitor		
C-37	"C" Band Antenna Trimmer	R-56	.08 mfd., Paper Capacitor		
C-38	"B" Band Antenna Trimmer	R-57	Beam-a-Scope		
C-39	1600 mmf., Mica Capacitor #5%	R-58	"C" Band Antenna Coil		
C-40	4300 mmf., Mica Capacitor #5%	R-59	"D" Band Antenna Coil		
C-41	750 mmf., Silvered Mica Capacitor #5%	R-60	"C" Band Oscillator Coil		
C-42	150 mmf., Mica Capacitor	R-61	"D" Band Oscillator Coil		
C-43	0.1 mfd., Paper Capacitor	R-62	Tuning Coil (Code—None)		
C-44	47 mmf., Mica Capacitor	R-63	Tuning Coil (Code—Red)		
C-45	0.1 mfd., Paper Capacitor	R-64	Tuning Coil (Code—Blue)		
C-46	47 mmf., Mica Capacitor	R-65	22,000 ohms, Carbon Resistor		
C-47	47 mmf., Mica Capacitor	R-66	1.0 megohm, Carbon Resistor		
C-48	25 mfd., Paper Capacitor	R-67	47,000 ohms, Carbon Resistor		
C-49	100 mmf., Mica Capacitor	R-68	330 ohms, Carbon Resistor		
C-50	47 mmf., Mica Capacitor	R-69	47,000 ohms, Carbon Resistor		
C-51	47 mmf., Mica Capacitor	R-70	220,000 ohms, Carbon Resistor		
C-52	.0015 mfd., Paper Capacitor	R-71	2.2 megohms, Carbon Resistor		
C-53	.01 mfd., Paper Capacitor	R-72	2 megohms, Volume Control		
C-54	.05 mfd., Paper Capacitor	R-73	15 ohms, Carbon Resistor		
C-55	20 mfd., 25 V. Dry Electrolytic	R-74	330,000 ohms, Carbon Resistor		
C-56	20 mfd., 250 V. Dry Electrolytic	R-75	68,000 ohms, Carbon Resistor		
C-57	40 mfd., 250 V. Dry Electrolytic	R-76	330,000 ohms, Carbon Resistor		
C-58	.02 mfd., Paper Capacitor	R-77	68,000 ohms, Carbon Resistor		
C-59	Tuning Capacitor	R-78	7-65 mmf., Antenna Trimmer		
C-60	"D" Band Antenna Trimmer	R-79	20-180 mmf., Antenna Trimmer		
C-61	"B" Band Antenna Trimmer	R-80	100-490 mmf., Antenna Trimmer		
C-62	"C" Band Antenna Trimmer	R-81	100-490 mmf., Antenna Trimmer		
C-63	"D" Band Antenna Trimmer	R-82	25 mfd., Paper Capacitor		
C-64	"C" Band Antenna Trimmer	R-83	.08 mfd., Paper Capacitor		
C-65	"B" Band Antenna Trimmer	R-84	Beam-a-Scope		
C-66	1600 mmf., Mica Capacitor #5%	R-85	"C" Band Antenna Coil		
C-67	4300 mmf., Mica Capacitor #5%	R-86	"D" Band Antenna Coil		
C-68	750 mmf., Silvered Mica Capacitor #5%	R-87	"C" Band Oscillator Coil		
C-69	150 mmf., Mica Capacitor	R-88	"D" Band Oscillator Coil		
C-70	0.1 mfd., Paper Capacitor	R-89	Tuning Coil (Code—None)		
C-71	47 mmf., Mica Capacitor	R-90	Tuning Coil (Code—Red)		
C-72	0.1 mfd., Paper Capacitor	R-91	Tuning Coil (Code—Blue)		
C-73	.0015 mfd., Paper Capacitor	R-92	22,000 ohms, Carbon Resistor		
C-74	.01 mfd., Paper Capacitor	R-93	1.0 megohm, Carbon Resistor		
C-75	.01 mfd., Paper Capacitor	R-94	47,000 ohms, Carbon Resistor		
C-76	.003 mfd., Paper Capacitor	R-95	330 ohms, Carbon Resistor		
C-77	.05 mfd., Paper Capacitor	R-96	47,000 ohms, Carbon Resistor		
C-78	.05 mfd., Paper Capacitor	R-97	220,000 ohms, Carbon Resistor		
C-79	20 mfd., 25 V. Dry Electrolytic	R-98	2.2 megohms, Carbon Resistor		
C-80	20 mfd., 250 V. Dry Electrolytic	R-99	2 megohms, Volume Control		
C-81	40 mfd., 250 V. Dry Electrolytic	R-100	15 ohms, Carbon Resistor		
C-82	.02 mfd., Paper Capacitor	R-101	330,000 ohms, Carbon Resistor		
C-83	Tuning Capacitor	R-102	68,000 ohms, Carbon Resistor		
C-84	"D" Band Antenna Trimmer	R-103	7-65 mmf., Antenna Trimmer		
C-85	"B" Band Antenna Trimmer	R-104	20-180 mmf., Antenna Trimmer		
C-86	"C" Band Antenna Trimmer	R-105	100-490 mmf., Antenna Trimmer		
C-87	"D" Band Antenna Trimmer	R-106	100-490 mmf., Antenna Trimmer		
C-88	"C" Band Antenna Trimmer	R-107	25 mfd., Paper Capacitor		
C-89	"B" Band Antenna Trimmer	R-108	.08 mfd., Paper Capacitor		
C-90	1600 mmf., Mica Capacitor #5%	R-109	Beam-a-Scope		
C-91	4300 mmf., Mica Capacitor #5%	R-110	"C" Band Antenna Coil		
C-92	750 mmf., Silvered Mica Capacitor #5%	R-111	"D" Band Antenna Coil		
C-93	150 mmf., Mica Capacitor	R-112	"C" Band Oscillator Coil		
C-94	0.1 mfd., Paper Capacitor	R-113	"D" Band Oscillator Coil		
C-95	47 mmf., Mica Capacitor	R-114	Tuning Coil (Code—None)		
C-96	0.1 mfd., Paper Capacitor	R-115	Tuning Coil (Code—Red)		
C-97	47 mmf., Mica Capacitor	R-116	Tuning Coil (Code—Blue)		
C-98	0.1 mfd., Paper Capacitor	R-117	22,000 ohms, Carbon Resistor		
C-99	.0015 mfd., Paper Capacitor	R-118	1.0 megohm, Carbon Resistor		
C-100	.01 mfd., Paper Capacitor	R-119	47,000 ohms, Carbon Resistor		
C-101	.01 mfd., Paper Capacitor	R-120	330 ohms, Carbon Resistor		
C-102	.003 mfd., Paper Capacitor	R-121	47,000 ohms, Carbon Resistor		
C-103	.05 mfd., Paper Capacitor	R-122	220,000 ohms, Carbon Resistor		
C-104	.05 mfd., Paper Capacitor	R-123	2.2 megohms, Carbon Resistor		
C-105	20 mfd., 25 V. Dry Electrolytic	R-124	2 megohms, Volume Control		
C-106	20 mfd., 250 V. Dry Electrolytic	R-125	15 ohms, Carbon Resistor		
C-107	40 mfd., 250 V. Dry Electrolytic	R-126	330,000 ohms, Carbon Resistor		
C-108	.02 mfd., Paper Capacitor	R-127	68,000 ohms, Carbon Resistor		
C-109	Tuning Capacitor	R-128	7-65 mmf., Antenna Trimmer		
C-110	"D" Band Antenna Trimmer	R-129	20-180 mmf., Antenna Trimmer		
C-111	"B" Band Antenna Trimmer	R-130	100-490 mmf., Antenna Trimmer		
C-112	"C" Band Antenna Trimmer	R-131	100-490 mmf., Antenna Trimmer		
C-113	"D" Band Antenna Trimmer	R-132	25 mfd., Paper Capacitor		
C-114	"C" Band Antenna Trimmer	R-133	.08 mfd., Paper Capacitor		
C-115	"B" Band Antenna Trimmer	R-134	Beam-a-Scope		
C-116	1600 mmf., Mica Capacitor #5%	R-135	"C" Band Antenna Coil		
C-117	4300 mmf., Mica Capacitor #5%	R-136	"D" Band Antenna Coil		
C-118	750 mmf., Silvered Mica Capacitor #5%	R-137	"C" Band Oscillator Coil		
C-119	150 mmf., Mica Capacitor	R-138	"D" Band Oscillator Coil		
C-120	0.1 mfd., Paper Capacitor	R-139	Tuning Coil (Code—None)		
C-121	47 mmf., Mica Capacitor	R-140	Tuning Coil (Code—Red)		
C-122	0.1 mfd., Paper Capacitor	R-141	Tuning Coil (Code—Blue)		
C-123	.0015 mfd., Paper Capacitor	R-142	22,000 ohms, Carbon Resistor		
C-124	.01 mfd., Paper Capacitor	R-143	1.0 megohm, Carbon Resistor		
C-125	.01 mfd., Paper Capacitor	R-144	47,000 ohms, Carbon Resistor		
C-126	.003 mfd., Paper Capacitor	R-145	330 ohms, Carbon Resistor		
C-127	.05 mfd., Paper Capacitor	R-146	47,000 ohms, Carbon Resistor		
C-128	.05 mfd., Paper Capacitor	R-147	220,000 ohms, Carbon Resistor		
C-129	20 mfd., 25 V. Dry Electrolytic	R-148	2.2 megohms, Carbon Resistor		
C-130	20 mfd., 250 V. Dry Electrolytic	R-149	2 megohms, Volume Control		
C-131	40 mfd., 250 V. Dry Electrolytic	R-150	15 ohms, Carbon Resistor		
C-132	.02 mfd., Paper Capacitor	R-151	330,000 ohms, Carbon Resistor		
C-133	Tuning Capacitor	R-152	68,000 ohms, Carbon Resistor		
C-134	"D" Band Antenna Trimmer	R-153	7-65 mmf., Antenna Trimmer		
C-135	"B" Band Antenna Trimmer	R-154	20-180 mmf., Antenna Trimmer		
C-136	"C" Band Antenna Trimmer	R-155	100-490 mmf., Antenna Trimmer		
C-137	"D" Band Antenna Trimmer	R-156	100-490 mmf., Antenna Trimmer		
C-138	"C" Band Antenna Trimmer	R-157	25 mfd., Paper Capacitor		
C-139	"B" Band Antenna Trimmer	R-158	.08 mfd., Paper Capacitor		
C-140	1600 mmf., Mica Capacitor #5%	R-159	Beam-a-Scope		
C-141	4300 mmf., Mica Capacitor #5%	R-160	"C" Band Antenna Coil		
C-142	750 mmf., Silvered Mica Capacitor #5%	R-161	"D" Band Antenna Coil		
C-143	150 mmf., Mica Capacitor	R-162	"C" Band Oscillator Coil		
C-144	0.1 mfd., Paper Capacitor	R-163	"D" Band Oscillator Coil		
C-145	47 mmf., Mica Capacitor	R-164	Tuning Coil (Code—None)		
C-146	0.1 mfd., Paper Capacitor	R-165	Tuning Coil (Code—Red)		
C-147	47 mmf., Mica Capacitor	R-166	Tuning Coil (Code—Blue)		
C-148	0.1 mfd., Paper Capacitor	R-167	22,000 ohms, Carbon Resistor		
C-149	.0015 mfd., Paper Capacitor	R-168	1.0 megohm, Carbon Resistor		
C-150	.01 mfd., Paper Capacitor	R-169	47,000 ohms, Carbon Resistor		
C-151	.01 mfd., Paper Capacitor	R-170	330 ohms, Carbon Resistor		
C-152	.003 mfd., Paper Capacitor	R-171	47,000 ohms, Carbon Resistor		
C-153	.05 mfd., Paper Capacitor	R-172	220,000 ohms, Carbon Resistor		
C-154	.05 mfd., Paper Capacitor	R-173	2.2 megohms, Carbon Resistor		
C-155	20 mfd., 25 V. Dry Electrolytic	R-174	2 megohms, Volume Control		
C-156	20 mfd., 250 V. Dry Electrolytic	R-175	15 ohms, Carbon Resistor		
C-157	40 mfd., 250 V. Dry Electrolytic	R-176	330,000 ohms, Carbon Resistor		
C-158	.02 mfd., Paper Capacitor	R-177	68,000 ohms, Carbon Resistor		
C-159	Tuning Capacitor	R-178	7-65 mmf., Antenna Trimmer		
C-160	"D" Band Antenna Trimmer	R-179	20-180 mmf., Antenna Trimmer		
C-161	"B" Band Antenna Trimmer	R-180	100-490 mmf., Antenna Trimmer		
C-162	"C" Band Antenna Trimmer	R-181	100-490 mmf., Antenna Trimmer		
C-163	"D" Band Antenna Trimmer	R-182	25 mfd., Paper Capacitor		
C-164	"C" Band Antenna Trimmer	R-183	.08 mfd., Paper Capacitor		
C-165	"B" Band Antenna Trimmer	R-184	Beam-a-Scope		
C-166	1600 mmf., Mica Capacitor #5%	R-185	"C" Band Antenna Coil		
C-167	4300 mmf., Mica Capacitor #5%	R-186	"D" Band Antenna Coil		
C-168	750 mmf., Silvered Mica Capacitor #5%	R-187	"C" Band Oscillator Coil		
C-169	150 mmf., Mica Capacitor	R-188	"D" Band Oscillator Coil		
C-170	0.1 mfd., Paper Capacitor	R-189	Tuning Coil (Code—None)		
C-171	47 mmf., Mica Capacitor	R-190	Tuning Coil (Code—Red)		
C-172	0.1 mfd., Paper Capacitor	R-191	Tuning Coil (Code—Blue)		
C-173	.0015 mfd., Paper Capacitor	R-192	22,000 ohms, Carbon Resistor		
C-174	.01 mfd., Paper Capacitor	R-193	1.0 megohm, Carbon Resistor		
C-175	.01 mfd., Paper Capacitor	R-194	47,000 ohms, Carbon Resistor		
C-176	.003 mfd., Paper Capacitor	R-195	330 ohms, Carbon Resistor		
C-177	.05 mfd., Paper Capacitor	R-196	47,000 ohms, Carbon Resistor		
C-178	.05 mfd., Paper Capacitor				

MODEL H87
Voltage, Socket

GENERAL ELECTRIC CO.

MODEL H87
MODEL HJ1005
Alignment, Gain
Coils, Dial Drive

ALIGNMENT PROCEDURE
MODEL H-87 I.F. Alignment with Oscilloscope* MODEL HJ-1005

Band-Setting	Input Frequency	Tone Control Position	Point of Input*	Trimmer	Comments
1. Band B	455 K.C. and modulated	Bass	I.F. 6SK7 Grid	2nd I.F. Sec. 2nd I.F. Pri.	Condenser gang at minimum capacity—Manual key depressed—vertical input to ground and junction of R-29, R-11, and R-22. Adjust trimmers in order mentioned for a single curve of maximum amplitude.
2. Band B	455 K.C. and modulated	Bass	Converter 6SA7 Grid	3rd I.F. Sec. 3rd I.F. Pri.	
3. Band B	455 K.C. and modulated	Bass	Converter 6SA7 Grid	All I.F. Trimmers	

I.F. Alignment with Output Meter*

Band-Setting	Input Frequency	Tone Control Position	Point of Input*	Trimmer	Comments
1. Band B	455 K.C. modulated	Bass	I.F. 6SK7 Grid	2nd I.F. Sec. 2nd I.F. Pri.	Condenser gang at minimum capacity—manual key depressed—output meter connected across voice coil—volume control at maximum—input as low as practical. Adjust all trimmers in order listed for maximum output.
2. Band C	580 K.C. modulated	Bass	Antenna Post**	Osc. (C-6) Ant. (C-3) Post**	Set pointer to 9 M.C. mark and align (C-6).
3. Band D	580 K.C. modulated	Bass	Antenna Post**	Osc. (C-6) Ant. (C-3) Post**	Set pointer to 9 M.C. mark and align (C-6).
4. Band B	580 K.C. modulated	Bass	Antenna Post**	Osc. (C-6) Ant. (C-3) Post**	Mechanically adjust dial pointer to first line at left-hand end of dial scale with condenser gang fully meshed. Connect output meter across voice coil.
5. Band B	1500 K.C. modulated	Bass	Antenna Post**	Osc. (C-5)	Adjust C-5 for maximum output in vicinity of 1500 K.C. while adjusting gang condenser.
6. Band B	580 K.C. modulated	Bass	Antenna Post**	Osc. (C-6) Ant. (C-3) Post**	Retrim (C-8).
7. Band B	1500 K.C. modulated	Bass	Antenna Post**	Osc. (C-5)	Repeak (C-8).

R.F. Alignment

Band-Setting	Input Frequency	Tone Control Position	Point of Input	Trimmer	Comments
1. Band B	6 MC modulated	Bass	Antenna Post**	Osc. (C-6) Ant. (C-3) Post**	Mechanically adjust dial pointer to first line at left-hand end of dial scale with condenser gang fully meshed. Connect output meter across voice coil.
2. Band C	6 MC modulated	Bass	Antenna Post**	Osc. (C-6) Ant. (C-3) Post**	Set pointer to 9 M.C. mark and align (C-6).
3. Band D	6 MC modulated	Bass	Antenna Post**	Osc. (C-6) Ant. (C-3) Post**	Set pointer to 9 M.C. mark and align (C-6).
4. Band B	580 K.C. modulated	Bass	Antenna Post**	Osc. (C-6) Ant. (C-3) Post**	Mechanically adjust dial pointer to first line at left-hand end of dial scale with condenser gang fully meshed. Connect output meter across voice coil.
5. Band B	1500 K.C. modulated	Bass	Antenna Post**	Osc. (C-5)	Adjust C-5 for maximum output in vicinity of 1500 K.C. while adjusting gang condenser.
6. Band B	580 K.C. modulated	Bass	Antenna Post**	Osc. (C-6) Ant. (C-3) Post**	Retrim (C-8).
7. Band B	1500 K.C. modulated	Bass	Antenna Post**	Osc. (C-5)	Repeak (C-8).

* Use "dummy" antenna consisting of .05 mfd. capacitor between signal generator and point of input.
** Use a "dummy" antenna consisting of 70 mmf. capacitor between signal generator and point of input with Beam-a-Scope disconnected.
*** Use an I.R.E. "dummy" antenna as shown in Fig. 2 between the signal generator and the point of input.

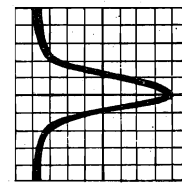


Fig. 3. I.F. Curve taken on G-E Oscilloscope OFM-1

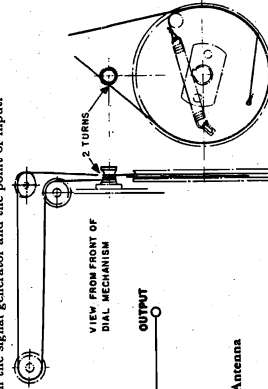


Fig. 2. I.R.E. Dummy Antenna

Fig. 7. Dial Drive Strapping Diagram
Models H-87, HJ1005
(2) A 400-cycle signal of .05 volts across volume control will give 1/2-watt speaker output.† (Volume Control turned to minimum.)
(3) Average DC voltage developed across oscillator grid resistor (R1) with gang closed.
Band "B".....6.5 volts
Band "C".....7 volts
Band "D".....2.8 volts
† Use I.R.E. "dummy" antenna.
** Use 70 mmf. capacitor between signal generator and antenna post with Beam-a-Scope disconnected.
†† Variations of + 10%, -20% permissible.

GENERAL INFORMATION
MODEL H-87

The Model H-87 is a three-band a-c operated receiver employing eight General Electric Pre-tested Tubes in a super-heterodyne circuit. This receiver is equipped with nine Feather-touch Tuning Keys, six of which, may be set up for favorite stations. The three remaining keys allow power control, manual tuning and phonograph or television audio reception. The new Super Beam-a-scope, which is a highly efficient self-contained antenna circuit, is standard equipment on this model. Other features of design include: "Alnico" dynamo speaker, floodlighting station key finder, visual dial, iron core I.F. transformers, automatic tone compensation, automatic volume control and push-pull output.

SUPER BEAM-A-SCOPE
MODEL H-87, HJ1005

The Super Beam-a-scope is essentially a tuned coil antenna wound on a frame and shielded by a Faraday screen against electrostatic disturbances. This construction favors the desired signal over a local man-made noise source in three ways. First, since any noise source is composed of two components—electrostatic and electromagnetic fields—the Super Beam-a-scope may be revolved so that a null point is found where no voltage is produced from these two components. Due to the fact that this null point is very sharp, it is very unusual that any desired station will be in a direct line with the rejected noise signal and thereby have its signal strength reduced appreciably. In the second place the Super Beam-a-scope eliminates the external return path to ground present in the case of an unshielded antenna. This reduces or eliminates local man-made noise sources in much the same way as a shielded antenna lead-in does in an ordinary antenna installation. In the third place the Super Beam-a-scope discriminates against the electrostatic component of an incoming wave in comparison with the electromagnetic component because of the Faraday shield. Since the electrostatic component of a local noise source is a great deal larger than that of an electromagnetic component, this rejection property brings about an enormous increase in signal-to-noise ratio.

The above operation is only available on the broadcast band and in this position the Super Beam-a-scope is also the first tuned grid circuit. On the 'C' and 'D' bands, the Super Beam-a-scope is grounded at the grid end thus preventing absorption spots due to loop resonance.

GENERAL INFORMATION
MODEL H-87

The Model H-87 is a three-band a-c operated receiver employing eight General Electric Pre-tested Tubes in a super-heterodyne circuit. This receiver is equipped with nine Feather-touch Tuning Keys, six of which, may be set up for favorite stations. The three remaining keys allow power control, manual tuning and phonograph or television audio reception. The new Super Beam-a-scope, which is a highly efficient self-contained antenna circuit, is standard equipment on this model. Other features of design include: "Alnico" dynamo speaker, floodlighting station key finder, visual dial, iron core I.F. transformers, automatic tone compensation, automatic volume control and push-pull output.

SPECIAL SERVICE INFORMATION
MODELS H-87, HJ1005

The following information will be found very useful in servicing receivers if a vacuum tube voltmeter or similar voltage measuring instrument is available.
(a) Stage Gains
(b) Antenna Post to Converter Grid
(c) Beam-a-Scope disconnected—3 at 1000 K.C.
(d) Beam-a-Scope disconnected—3 at 4 M.C.
(e) Beam-a-Scope disconnected—3 at 18 M.C.
(f) Converter Grid to 6SK7 Grid.....66 at 455 K.C.
(g) 6SK7 Grid to 6SQ7 Det. Plate.....100 at 455 K.C.


The following table gives the coils in use for the various positions of the band switch.
The following table gives the coils in use for the various positions of the band switch.

Band	Antenna Primary	Antenna Secondary	Oscillator Primary	Oscillator Secondary
Band "B"	Lower portion of L-1	Upper portion of L-1	Lower portion of L-1	Upper portion of L-1
Band "C"	L-2 Primary (L-1 Primary shorted)	L-2 Secondary (L-1 Secondary to ground)	Lower portion of L-2	Upper portion of L-2 (High side of L-4 and L-5)
Band "D"	L-3 Primary (L-2 Primary shorted)	L-3 Secondary (L-2 Secondary to ground)	Lower portion of L-3	Upper portion of L-3 (High side of R-15. Mid to R-16. Mid to L-4 and L-5)


Alignment Procedure Models H-87, HJ1005

The alignment procedure is given in table form on the opposite page. Use the designated "dummy" antenna in making each individual alignment. I.F. alignment may be performed with the chassis removed from the cabinet and the Beam-a-Scope disconnected. R.F. alignment on 'C' and 'D' bands should be performed with the Beam-a-Scope disconnected and a 70 mmf. mica capacitor between the signal generator and the point of input. R.F. alignment on 'B' band should be performed with the chassis and Beam-a-Scope mounted in the cabinet and properly connected.

FRONT VIEW OF CHASSIS

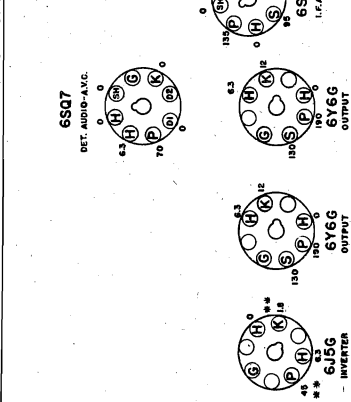

BOTTOM VIEW OF CHASSIS

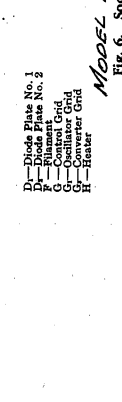

MODEL H87
Parts List
MODELS H500U, H510U
H520U (W and X)
Alignment, Parts

GENERAL ELECTRIC CO.

REPLACEMENT PARTS LIST MODEL H-87

Symbol	Description	Stock No.	Description	List Price
RB-008	BOARD—Terminal board (2 tag)	RB-008	BOARD—Terminal board (2 tag)	.50
RB-013	BOARD—Antenna terminal board	RB-013	BOARD—Antenna terminal board	.10
RB-026	BOARD—Beam-Scope bracket	RB-026	BOARD—Beam-Scope bracket	.10
RB-193	BOARD—Dial lamp socket	RB-193	BOARD—Dial lamp socket	.10
RB-915	BOARD—H-510U (W and X) inc. Model H-520U	RB-1000	BOARD—Phono-terminal board	.10
RB-916	BOARD—H-510U (W and X) inc. Model H-520U	RB-1010	BOARD—Loop terminal board	.10
RB-917	BOARD—H-510U (W and X) inc. Model H-520U	RC-009	CAPACITOR—.0015 mid., 600 V. paper	.30
RB-924	BOARD—H-510U (W and X) inc. Model H-520U	RC-038	CAPACITOR—.01 mid., 600 V. paper	.25
RB-925	BOARD—H-510U (W and X) inc. Model H-520U	RC-042	CAPACITOR—.01 mid., 1000 V. paper	.25
RB-926	BOARD—H-510U (W and X) inc. Model H-520U	RC-051	CAPACITOR—.02 mid., 1500 V. paper	.30
RC-016	CAPACITOR—.05 mid., 600 V. paper	RC-055	CAPACITOR—.03 mid., 600 V. paper	.25
RC-023	CAPACITOR—.05 mid., 600 V. paper	RC-092	CAPACITOR—.05 mid., 600 V. paper	.25
RC-039	CAPACITOR—.01 mid., 600 V. paper	RC-094	CAPACITOR—.08 mid., 400 V. paper	.25
RC-072	CAPACITOR—.05 mid., 200 V. paper	RC-096	CAPACITOR—.01 mid., 200 V. paper	.30
RC-060	CAPACITOR—.03 mid., 600 V. paper	RC-104	CAPACITOR—.01 mid., 600 V. paper	.30
RC-082	CAPACITOR—.05 mid., 600 V. paper	RC-148	CAPACITOR—.25 mid., 600 V. paper	.35
RC-130	CAPACITOR—2 mid., 400 V. paper (C-19)	RC-206	CAPACITOR—47 mmf. mica (C-14)	.15
RC-216	CAPACITOR—47 mmf. mica (C-4)	RC-216	CAPACITOR—47 mmf. mica (C-18, 25)	.25
RC-234	CAPACITOR—20 mmf. mica (C-9)	RC-234	CAPACITOR—20 mmf. mica (C-12)	.25
RC-244	CAPACITOR—20 mmf. mica (C-9)	RC-242	CAPACITOR—70 mmf. mica (C-27)	.30
RC-276	CAPACITOR—B band padder (C-20)	RC-307	CAPACITOR—750 mmf. silvered mica (C-19)	.40
RC-963	CARD—Power cord	RC-337	CAPACITOR—1600 mmf. mica (C-9)	.25
RC-1890	H-800U, 510U (Pg. 5), 150 V., 40 mid.	RC-398	CAPACITOR—800 mmf. mica (C-10)	.40
RC-5135	H-800U, 510U (Pg. 5), 150 V., 40 mid.	RC-399	CAPACITOR—800 mmf. mica (C-11)	.40
RC-7019	CONDENSER—Tuning condenser for Models H-500U (C-2a, 2b)	RC-463	CARD—Voice coil	3.00
RC-7023	CONDENSER—Tuning condenser for Models H-510U (W and X inc.)	RC-492	CUSHION—Tuning condenser cushion (Pg. 5)	.10
RC-8608	CARDS—Station letter cards for Models H-510U, 520U (W and X inc.)	RC-501	CORE—Touch Tuning coil tuning core (Pg. 5)	.10
RC-9013	SEMBLY—for all models—Speaker cone as H-510U, 520U (W and X inc.)	RC-501	CORE—Touch Tuning coil tuning core (Pg. 5)	.10
RD-111	DIAL—Dial scale for Models H-500U, H-510U (W and X inc.)	RC-5148	CAPACITOR—20 mid., 25 V. 20 mid.	.15
RD-140	DRUM—Tuning condenser drive drum (W and X inc.)	RC-6528	CAPACITOR—7-65 mmf. trimmer (C-49)	.35
RD-410	DRUM—Tuning condenser drive drum (W and X inc.)	RC-6527	CAPACITOR—20-180 mmf. trimmer (C-48)	.35
RD-411	DRUM—Tuning condenser drive drum (W and X inc.)	RC-6528	CAPACITOR—100-100 mmf. trimmer (C-47)	.35
RD-414	DRUM—Tuning condenser drive drum (W and X inc.)	RF-015	FOOT—Rubber-mounting foot for chassis (R-48, R-50)	.05
RH-007	H-510U (W and X inc.)	RK-004	KNOB—Control knob (Pg. 5)	.25
RK-048	H-510U (W and X inc.)	RK-205	KNOB—Control knob (Pg. 5)	.25
RK-081	H-510U (W and X inc.)	RL-084	COIL—C and D band antenna coil (L-2, 5)	.75
RK-085	H-510U (W and X inc.)	RL-289	COIL—B, C and D band sec. coil (L-4, 5)	1.10
		RL-307	COIL—Beam-Scope antenna (L-1)	6.00
		RL-310	COIL—Touch Tuning trimmer coil assembly (L-7 to L-12)	1.80
		RL-913	COIL—Touch Tuning trimmer coil (Range 1200-1500 K.C.)	.15
		RL-914	COIL—Touch Tuning trimmer coil (Range 800-1400 K.C.) (Code—Red)	.15
		RL-915	COIL—Touch Tuning trimmer coil (Range 540-900 K.C.) (Code—Blue)	.15
		RP-133	PLUG—Loop terminal plug	.05
		RP-138	RESISTOR—2400 ohms, 2-W. carbon	.20
		RP-139	RESISTOR—15 ohms, 1/4-W. carbon	.70
		RP-140	RESISTOR—35 ohms, 1/4-W. carbon	.70
		RP-141	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-142	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-143	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-144	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-145	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-146	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-147	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-148	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-149	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-150	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-151	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-152	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-153	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-154	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-155	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-156	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-157	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-158	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-159	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-160	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-161	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-162	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-163	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-164	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-165	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-166	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-167	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-168	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-169	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-170	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-171	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-172	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-173	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-174	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-175	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-176	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-177	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-178	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-179	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-180	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-181	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-182	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-183	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-184	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-185	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-186	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-187	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-188	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-189	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-190	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-191	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-192	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-193	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-194	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-195	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-196	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-197	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-198	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-199	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-200	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-201	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-202	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-203	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-204	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-205	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-206	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-207	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-208	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-209	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-210	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-211	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-212	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-213	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-214	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-215	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-216	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-217	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-218	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-219	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-220	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-221	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-222	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-223	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-224	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-225	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-226	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-227	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-228	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-229	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-230	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-231	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-232	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-233	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-234	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-235	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-236	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-237	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-238	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-239	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-240	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-241	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-242	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-243	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-244	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-245	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-246	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-247	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-248	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-249	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-250	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-251	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-252	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-253	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-254	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-255	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-256	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-257	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-258	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-259	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-260	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-261	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-262	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-263	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-264	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-265	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-266	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-267	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-268	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-269	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-270	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-271	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-272	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-273	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-274	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-275	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-276	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-277	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-278	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-279	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-280	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-281	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-282	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-283	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-284	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-285	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-286	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-287	RESISTOR—20 ohms, 1/4-W. carbon	.70
		RP-288	RESISTOR	

GENERAL ELECTRIC CO.

MODELS H116, H118, HJ119 (Final)
Schematic, Socket, Trimmers, Dial Drive

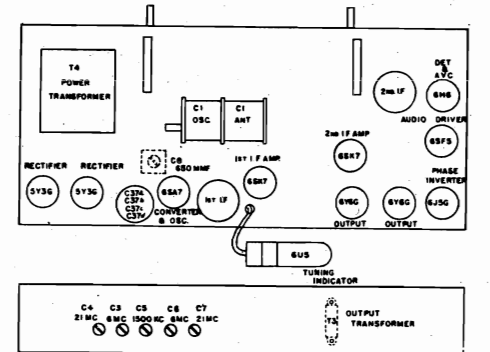
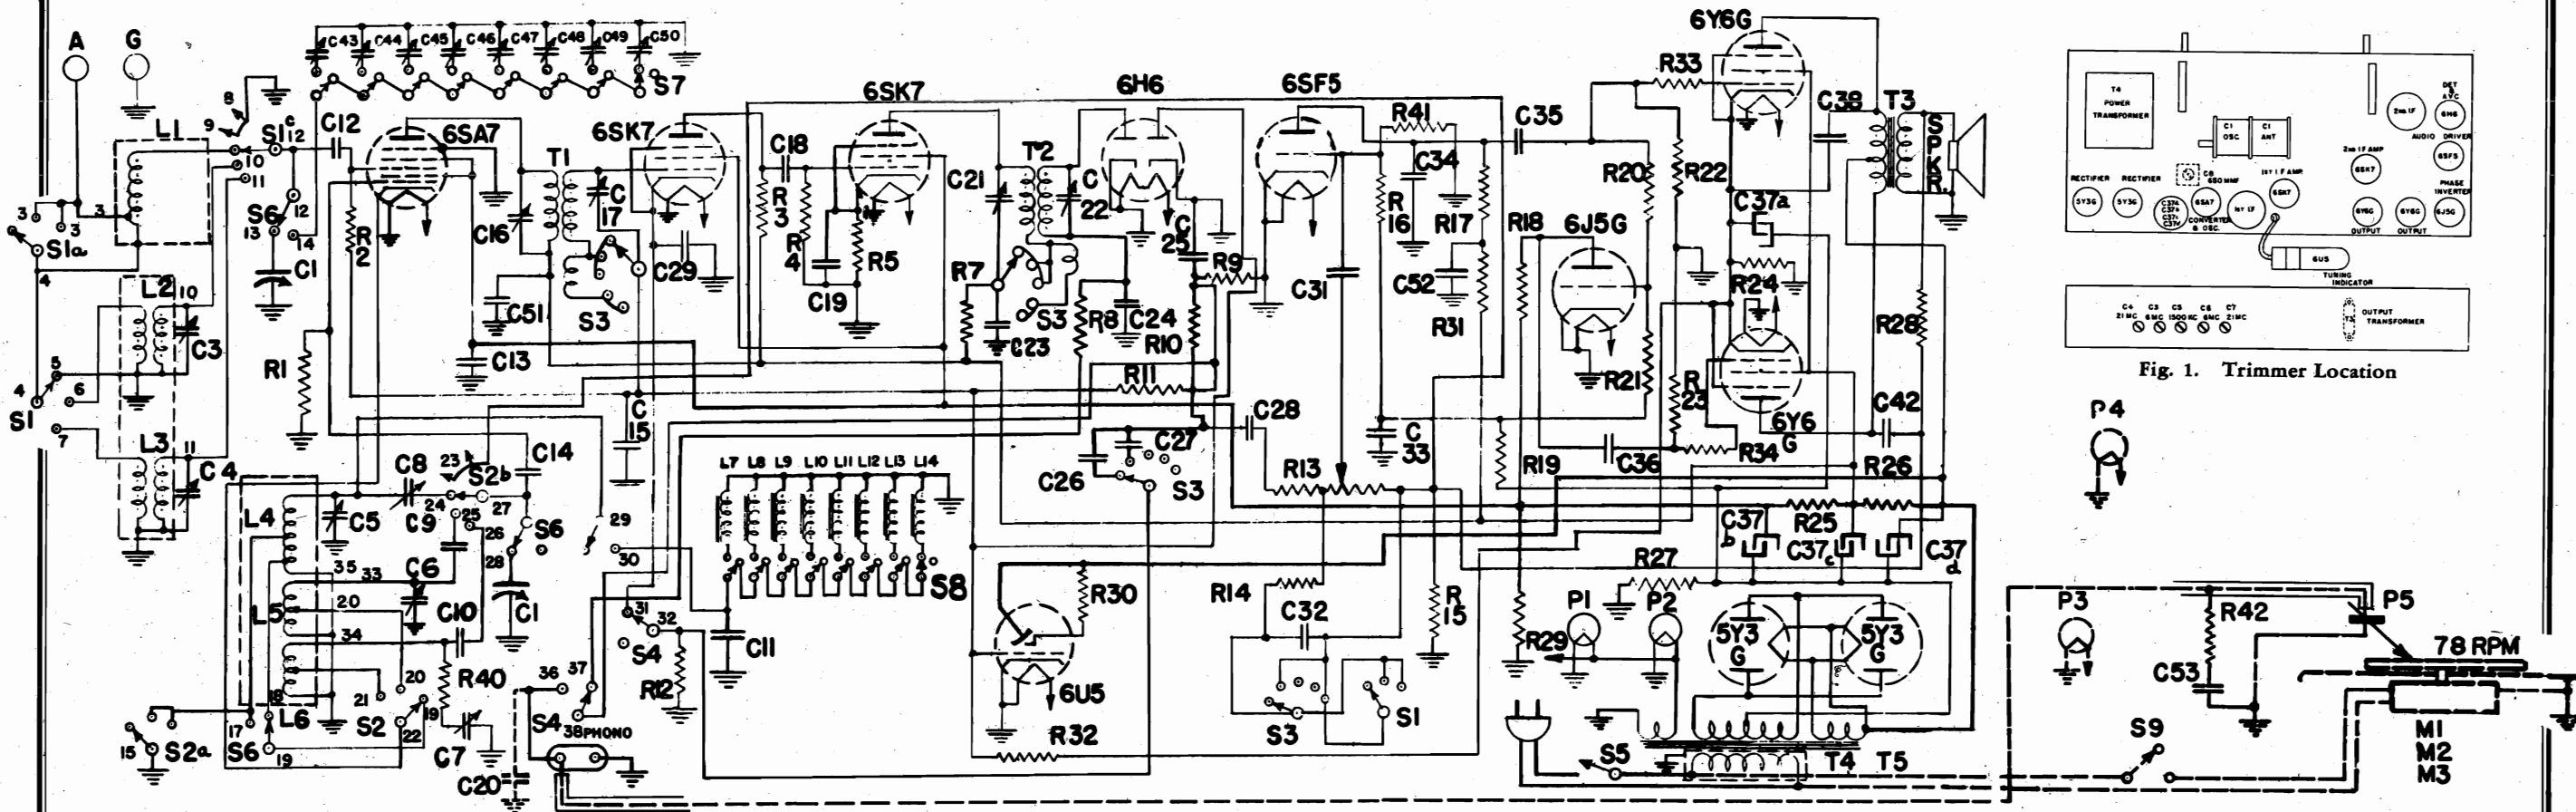


Fig. 1. Trimmer Location

Symbol	Description	Symbol	Description	Symbol	Description	Symbol	Description
C-1	Tuning Capacitor	C-33	0.1 mfd. Paper Capacitor	L-6	"D" Band Oscillator Coil	R-23	220,000 ohms, Carbon Resistor
C-3	"C" Band Antenna Trimmer	C-34	47 mmf. Mica Capacitor	L-7, -8	Tuning Coils (No code)	R-24	100 ohms, 3.4 W. Wire Wound
C-4	"D" Band Antenna Trimmer	C-35	.05 mfd. Paper Capacitor	L-9, -10, -11	Tuning Coils (Code-Red)	R-25	2400 ohms, 2 W. Carbon Resistor
C-5	"B" Band Oscillator Trimmer	C-36	.05 mfd. Paper Capacitor	L-12, -13, -14	Tuning Coils (Code-Blue)	R-26	2200 ohms, 2.6 W. Wire Wound
C-6	"C" Band Oscillator Trimmer	C-37a	20 mfd. 25 V. Dry Electrolytic	R-1	22,000 ohms, Carbon Resistor	R-27	12 ohms, Carbon Resistor
C-7	"D" Band Oscillator Trimmer	C-37b	20 mfd. 300 V. Dry Electrolytic	R-2	1.0 megohm, Carbon Resistor	R-28	68 ohms, Carbon Resistor
C-8	"B" Band Padder	C-37c	20 mfd. 300 V. Dry Electrolytic	R-3	6800 ohms, Carbon Resistor	R-29	47,000 ohms, Carbon Resistor
C-9	1600 mmf. Mica Capacitor ±5%	C-37d	40 mfd. 350 V. Dry Electrolytic	R-4	47,000 ohms, Carbon Resistor	R-30	1.0 megohm, Carbon Resistor
C-10	4300 mmf. Mica Capacitor ±5%	C-38	.02 mfd. Paper Capacitor	R-5	330 ohms, Carbon Resistor	R-31	47,000 ohms, Carbon Resistor
C-11	750 mmf. Silvered Mica Capacitor ±5%	C-42	.01 mfd. Paper Capacitor	R-6	1000 ohms, Carbon Resistor	R-32	5.6 megohms, Carbon Resistor
C-12	150 mmf. Mica Capacitor	C-43	7-65 mmf. Antenna Trimmer	R-7	47,000 ohms, Carbon Resistor	R-33	1000 ohms, Carbon Resistor
C-13	0.1 mfd. Paper Capacitor	C-44	7-65 mmf. Antenna Trimmer	R-8	220,000 ohms, Carbon Resistor	R-34	1000 ohms, Carbon Resistor
C-14	47 mmf. Mica Capacitor	C-45	20-180 mmf. Antenna Trimmer	R-9	47,000 ohms, Carbon Resistor	R-40	33 ohms, Carbon Resistor
C-15	47 mmf. Mica Capacitor	C-46	20-180 mmf. Antenna Trimmer	R-10	47,000 ohms, Carbon Resistor	R-41	4.7 megohms, Carbon Resistor
C-18	47 mmf. Mica Capacitor	C-47	20-180 mmf. Antenna Trimmer	R-11	2.2 megohms, Carbon Resistor	R-42	18,000 ohms, Carbon Resistor
C-19	.05 mfd. Paper Capacitor	C-48	100-490 mmf. Antenna Trimmer	R-12	470 ohms, Carbon Resistor	P-1, -2, -3, -4	Pilot Lights, MAZDA No. 44
C-20	.002 mfd. Paper Capacitor	C-49	100-490 mmf. Antenna Trimmer	R-13	2 megohm Volume Control	S-1	Antenna Band Switch
C-23	.05 mfd. Paper Capacitor	C-50	100-490 mmf. Antenna Trimmer	R-14	150,000 ohms, Carbon Resistor	S-2	Oscillator Band Switch
C-24	100 mmf. Mica Capacitor	C-51	0.1 mfd. Paper Capacitor	R-15	150,000 ohms, Carbon Resistor	S-3	Tone Switch
C-25	47 mmf. Mica Capacitor	C-52	.25 mfd. Paper Capacitor	R-16	4.7 megohms, Carbon Resistor	S-4	Phono Switch
C-26	.001 mfd. Paper Capacitor	C-53	.01 mfd. Paper Capacitor	R-17	150,000 ohms, Carbon Resistor	S-5	Power Switch
C-27	470 mmf. Mica Capacitor	L-1	Beam-a-Scope	R-18	47,000 ohms, Carbon Resistor	S-6	Manual Switch
C-28	.01 mfd. Paper Capacitor	L-2	"C" Band Antenna Coil	R-19	1.0 megohms, Carbon Resistor	S-7	Antenna Section Touch Tuning Switch
C-29	.05 mfd. Paper Capacitor	L-3	"D" Band Antenna Coil	R-20	3.3 megohms, Carbon Resistor	S-8	Oscillator Section Touch Tuning Switch
C-31	.01 mfd. Paper Capacitor	L-4	"B" Band Oscillator Coil	R-21	270,000 ohms, Carbon Resistor	S-9	Phono Motor Power Switch
C-32	.003 mfd. Paper Capacitor	L-5	"C" Band Oscillator Coil	R-22	220,000 ohms, Carbon Resistor		

Electrical Specifications

Model H-116
 Rating "A"—110-125 volts, 50-60 cycles, 130 watts
 Rating "C"—110-125 volts, 25-60 cycles, 130 watts

Model H-118
 Rating "A6"—110-125 volts, 60 cycles, 150 watts
 Rating "A5"—110-125 volts, 50 cycles, 150 watts
 Rating "C2"—110-125 volts, 25 cycles, 150 watts

Tuning Frequency Range
 Band "B"..... 540-1600 KC
 Band "C"..... 2300-7000 KC
 Band "D"..... 7000-22,000 KC

Intermediate Frequency..... 455 KC

Electric Power Output
 Undistorted..... 8.5 watts
 Maximum..... 10 watts

Tone Control..... 5-position

Loud-speaker—"Alnico" Magnetic Dynamic
 Outside Cone Diameter..... 12 inches
 Voice Coil Impedance..... 3.5 ohms

Tubes
 Converter and Oscillator..... GE-6SA7
 1st I.F. Amplifier..... GE-6SK7
 2nd I.F. Amplifier..... GE-6SK7
 Detector and A.V.C..... GE-6H6
 Audio Driver..... GE-6SF5
 Audio Inverter..... GE-6J5G
 Audio Power Amplifier..... (2)GE-6Y6G
 Tuning Indicator..... GE-6U5
 Rectifier..... (2)GE-5Y3G
 Dial-Lamp..... (4)MAZDA No. 44

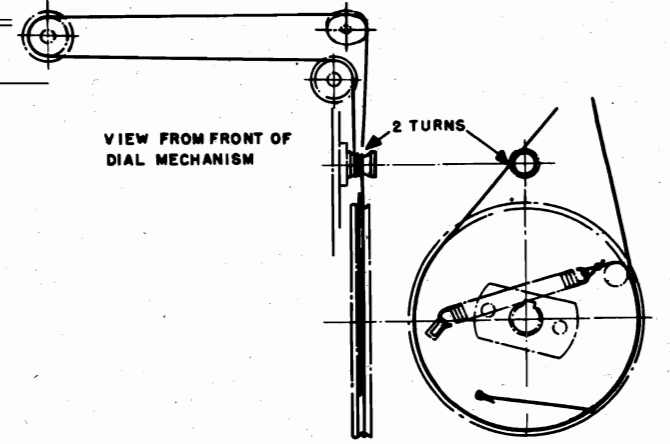


Fig. 6. Dial Drive Stringing Diagram

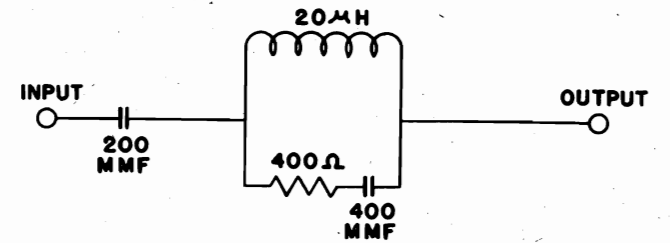


Fig. 7. I.R.E. Dummy Antenna

GENERAL ELECTRIC CO.

MODELS H116, H118, HJ119
MODEL H79

Record Changer Data

- any point, they may be tightened accordingly.
5. CHANGER IS NOISY WHEN IN CYCLE. Check oiling.
6. MOTION OF TONE ARM TOWARD RECORD PIN WILL NOT TRIP CHANGER MECHANISM.
- a. It may be found that, instead of trigger being actuated, there is stretching of Swivel Spring 95 (joining the lugs at ends of Swivel Spreaders 90 and 91), allowing the Spreaders to open. Increase tension of Spring 95, by bending slightly the lug on either Spreader. If this increased tension causes needle to jump across the record, needle may be a little out of vertical, radially—it may "lean" toward center of record. To remedy this, grasp Pickup arm and twist it, very slightly, in a clockwise direction, so that it stands vertical, or even leans a little in outward direction.
- b. If trigger is being properly actuated, probably Cam Lever 39 is binding against Sub-Plate 41. Look for dirt or obstructions; see that rivets are working freely. If the Lever engages Cam Lever Pawl 34, so that Lift 37 forces its roller up into the groove on Cam gear 82, and if setscrews are tight, the change-cycle must operate, as Cam-Gear turns.
7. PRESSING "R" BUTTON DOESN'T TRIP CHANGER MECHANISM.
- a. Check Push-button Switch Unit 75: see whether there is an obstruction or a bent part which prevents "R" button from going clear down to the end of its travel.
- b. Examine Reject Rod 78. If it does not trip, even when properly revolved by complete depressing of "R" button, the rod has probably been bent, and must be restored in same way. Grasp the two ends and twist it slightly.
- c. If Trigger 16 is being properly actuated but without starting a change-cycle, see directions above, Paragraph 6-b.
8. PRESSING "M" BUTTON FAILS TO PUT CHANGER MECHANISM OUT OF ACTION SO AS TO ENABLE MANUAL OPERATION. Check Push-button Switch Unit as in preceding paragraph. First see that button goes clear down; then follow its action through Manual Rod 77.
9. MOTOR STOPS IMMEDIATELY WHEN PHONO SWITCH IS TURNED OFF DURING A CHANGE-CYCLE (instead of continuing to run, as it should, until needle is again upon a record, and then stopping). Or—
10. TURNING PHONO SWITCH OFF FAILS TO STOP CHANGER AT ALL. Either of these two conditions would indicate failure of Cycling Switch 85. Cycling Switch operates normally to short-circuit the manual Changer Switch (which may be located in position shown at 54, or elsewhere) during change-cycle only. Such damage to Cycling Switch (not likely to occur) would necessitate returning the entire Changer to factory.
11. CHANGER FAILS TO REPEAT LAST RECORD. See Paragraph 6, above.
12. NEEDLE LANDS PROPERLY BUT FAILS TO MOVE OVER INTO RECORD GROOVE. Tone arm is normally impelled toward center of records by Lead Spring 97. Should a slight increase in its tension be found necessary, this can be easily obtained by bending the lug, to which it is attached, down against Main Plate. If tendency then appears for needle to jump across record, check angle of needle (see Paragraph 6-a above).
13. RECORDS FALL UNEVENLY UPON TURNABLE. Seldom objectionable, this is due to Record Pin not being correctly centered between Posts. If necessary, it can be corrected as described above; see "Motor Replacement."

table, and loosen slightly the screw or screws nearest the Record Holder to which record appeared closest. This should improve evenness of operation. However, unless the unevenness is very slight, it will be necessary for a permanent repair to insert a shim or two on one or more of the three screws (or change shims from one screw to another). The shims used are shaped like an ordinary washer, cut out at one side (see cut-away view at 52 in Fig. 11 showing a shim in place upon one of the Grommet Sleeves). Shims can readily be cut out with shears and punch from thin metal or cardboard. They should be inserted, around proper screws (when screws have been sufficiently loosened) between Motor Frame and metal Grommet Sleeve. Do not insert shims next to rubber grommet. In wiring up, consult schematic diagram for particular installation. Use only Underwriters' approved wire.

Trouble Shooting

Cases of failure to operate satisfactorily will generally be found due either to neglect of proper lubrication, or to tampering with the mechanism after it leaves the factory, or to injuries accidentally sustained as by external vibration or by impact of some heavy object. In addition there is always the possibility that any kind of spring may "go dead" (cease to operate without any visible breakage) even though the utmost factory precautions are taken against it—or that setscrews may work loose due to some external vibration. Damage from tampering is likely to take the form of bent parts; never bend any part during examination. Be careful, especially, never to push upward from below on Cam Connecting Rod Lift 37 while mechanism is operating; bending may result, and even slight bending here might interfere with correct timing of the cycle operations.

Among the principal trouble symptoms to which such causes may give rise, are the following:

1. MECHANISM IS SLOW IN STARTING, OR STALLS DURING A CHANGE-CYCLE, BUT A SLIGHT FORWARD PUSH WITH THE HAND STARTS IT AGAIN. May be caused by
- Failure to lubricate properly. Oil thoroughly, per instructions above.
 - Loose setscrews.
 - Weakness of drive: line voltage may be abnormally low, or motor windings damaged.
2. MOTOR FAILS TO RUN, EVEN WHEN IT IS ENTIRELY DISCONNECTED FROM OTHER WIRING AND PROPER VOLTAGE IS APPLIED DIRECTLY TO THE TWO ENDS OF ITS WINDINGS. This indicates trouble in Motor windings. Unless the damage is easily seen and repaired, replace Motor, as above described.
3. MOTOR IS SLOW IN STARTING.
- Check oiling, as directed above. It may not have been properly done; old oil may have become gummy.
 - Changer may have been in a very cold place, and may not yet have reached room temperature. Give it a fair chance to get warmed up, before concluding that Motor is defective, and proceeding as in Paragraph 2 above.
4. SQUEAKS OR OTHER NOISES, DURING PLAYING OF RECORDS.
- Check oiling, as directed above. (If squeaks are heard, they will usually be found to come from the records—not from the mechanism.)
 - See that all setscrews are tight.
 - Examine Motor windings; especially the shading coils which encircle a portion of each laminated pole and make the Motor self-starting. If coils have been jarred loose at

Adjustments that can be made. All are correctly made at the factory, and ordinarily need never be altered. Should it become necessary to remake any of these adjustments, due to accident or tampering, proceed as follows:

A. ADJUSTING LANDING POSITION OF NEEDLE ON THE RECORD. (See Fig. 8.) This adjustment is made with a screw-driver from above—does not require removing Record Changer from cabinet. If needle comes down too far from edge of record, playing of records will not start at their beginning. Turn Needle-drop Adjustment Screw very slightly counterclockwise. If needle comes down too close to edge of record, needle may slip off edge of record. Turn the adjusting screw clockwise.

Compare also Paragraph 12 on page 11.

B. ADJUSTING DISTANCE FROM RECORD PIN AT WHICH TRIGGER WILL TRIP AND CHANGE-CYCLE WILL BEGIN. Turn Trip Adjusting Screw 18, toward the trigger for earlier tripping, or away from it for later tripping. This Record Changer does not depend, for automatic tripping, on the records being provided with any special grooves at end; it trips whenever needle comes within a certain distance of Record Pin. The factory adjustment is for 1 1/8 in. from center of Record Pin. This is the most generally satisfactory distance; no modern record will then be cut off before playing is finished, and none will fail to trip at end. For certain records of early manufacture, it may not be possible to find an adjustment that will always trip and never cut off.

C. ADJUSTING HEIGHT TO WHICH TONE ARM RISES. The arm should rise, during the change-cycle, high enough so that it clears by only 1/8 in. the record above it, next to be played. (Be careful, before deciding that adjustment is necessary, to see that the record at bottom of stack is not a warped one.) To make this adjustment, loosen the lock nut on Pickup Sleeve 22 (see Fig. 10) and turn the sleeve to lengthen or shorten Pickup Plunger 21. When correct adjustment is found, tighten lock nut again.

Motor Replacement

The service mechanic may be called upon to adapt the Record Changer to a different power supply. For this purpose, or in case of any service fault within Motor, remove entire Motor (with Record Pin and connecting gear drive) from the Record Changer, and replace it with a suitable new Motor. (In ordering a replacement Motor, specify the power supply.)

When mounting replacement Motor, it is most important to see that Record Pin is centered between the two posts of the Record Changer, that it stands perpendicular to Main Plate 53, and that it has not become bent so as to wobble. Even though the Posts are stout and not easy to bend, it is well to check them also, with a 12-in. combination square laid clear across the concave upper surface of Main Plate. When the new Motor has been attached, with three screws through Grommet Sleeves 51 (spacers) into its frame, and Record Pin is seen to revolve without appreciable wobble (a wobble would indicate that it has been bent in transit from factory) the correct position of Pin midway between the Posts can be accurately checked in this way: Place a single 12-in. record on the Record Holder, press "R" button, and turn turntable forward by hand. Immediately after the Record Holders open and let it fall, turn Turntable slightly backward, and with other hand support the record seen between the Record Holders; it can then be readily seen whether Record Pin is off center. If it is, remove the record and Turn-

MODELS H116, H118, HJ119

MODEL H79

GENERAL ELECTRIC CO.

Record Changer Data, Parts

Stock No.	Description	List Price
AUTOMATIC RECORD-CHANGER ASSEMBLY		
RA-412	ARM—Swivel guide arm assembly (13, 88).	.75
RB-189	BRACKET—Adjusting rod bracket (86).	.10
RB-190	BRACKET—Manual and rejection rod spring bracket (76).	.10
RB-628	BUTTON—Switch push button (Pkg. of 4)	1.00
RC-1999	CLAMP—Crystal cartridge clamp and screws (Pkg. of 2).	.25
RC-2000	COLLAR—Rear changer shaft collar and setscrew.	.60
RC-5003	CRYSTAL—Crystal cartridge assembly.	6.00
RC-8146	CABLE—Pick-up cable and plug.	.85
RG-109	GUIDE—Pick-up lifter guide.	.40
RG-303	GROMMET—Motor mounting grommet (Pkg. of 6).	.15
RG-707	GEAR—Cam gear assembly (11, 82).	2.40
RG-708	GEAR—Drive pinion gear assembly.	.75
RH-113	HINGE—Adjusting rod hinge on switch unit (Pkg. of 3).	.10
RK-069	KNOB—Changer post knob.	\$0.25
RM-130	MOTOR—Motor and record pin assembly with mounting accessories, 115 V., 60 cycles, 78 rpm (55).	13.60
RM-131	MOTOR—Motor and record pin assembly with mounting accessories, 115 V., 50 cycles, 78 rpm (55).	15.20
RM-132	MOTOR—Motor and record pin assembly, 115 V., 25 cycles, 78 rpm (55).	38.00
RP-158	PLATE—Tone arm lift plate.	.20
RP-159	PLATE—Sub-plate and lever assembly (14, 16, 17, 32, 34, 39, 41, 42, 88).	4.40
RG-711	GEAR—Idler gear and shoulder rivet assembly.	.60
RS-886	SCREW—Lift shoulder screw and nut.	.30
RP-160	PLATE—Selector plate Assembly (Record holder and release lever).	3.80
RP-405	PIN—Tone arm hinge pin (Pkg. of 6).	.20
RP-406	POST—Front or rear changer post with mounting washer and nut (71).	.80
RP-407	POST—Swivel post with mounting washer and nut.	.75
RR-932	ROLLER—Rear post spring roller (61).	.40
RR-933	ROD—Manual key rod (77).	.10
RR-934	ROD—Rejection key rod (78).	.15
RR-935	ROD—Cam connecting rod assembly (31, 35, 37, 58, 59).	1.40
RR-936	ROD—Adjusting rod assembly (79, 81, 92, 94).	1.60
RR-937	ROD—Changer connecting rod assembly (57, 72).	2.20
RR-938	REST—Tone arm rest.	.20
RS-473	SPRING—Selector plate spring (Pkg. of 5)	.10
RS-474	SPRING—Release trigger spring (15) (Pkg. of 3).	.25
RS-475	SPRING—Cam connecting rod lift spring (Pkg. of 5).	.25
RS-476	SPRING—Pawl or extension rod spring (38, 79) (Pkg. of 3).	.25

FOR MODEL HJ-119
*Used on previous receivers.

(Prices subject to change without notice)

14. LAST RECORD DROPS ON ONE SIDE ONLY. This suggests a Post bent out of perpendicular to Main Plate. Test with square as directed (see "Motor Replacement"). If Post must be straightened, be careful not to bend other parts.

15. CHANGER CONTINUES CYCLING. Due to failure of Lift 37 to fall back out of engagement with Cam Gear. Check the various rivets at which motion occurs, to find the

54 - Changer Switch

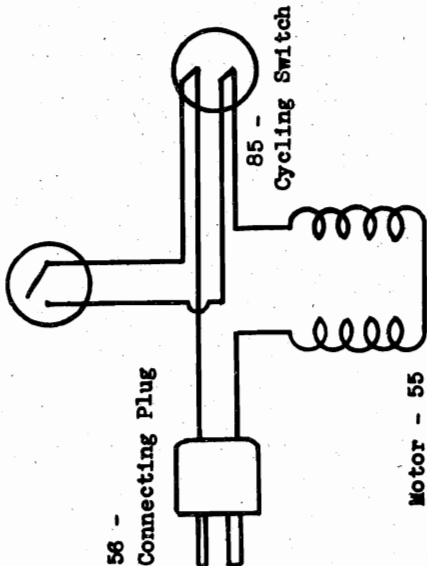


Fig. 12. Record Changer Wiring Diagram

point where friction or binding is interfering with freedom of motion.

16. RECORD IS DRIVEN, BUT NOT HEARD, OR NOT HEARD WITH PROPER VOLUME. See that Pickup cord is plugged in. Check amplifier and speaker and connections to them thoroughly. If then trouble is still suspected in pickup, test its output with a vacuum-tube voltmeter. Playing an average record, output should test 1 to 2.5 volts. If pickup cartridge is found not to deliver proper output, remove it and install another.

17. SELECTOR PLATE FAILS TO SEPARATE BOTTOM RECORD FROM STACK. This is due either to a badly warped condition of the record, or to its being of a thickness very considerably different from those now in standard use. The design of both Release Levers and Record Holders is such as to accommodate a maximum variation in thickness and flatness of records, but certain records may be found which are so far out as to be impracticable for use in automatic changers.

If Necessary to Disassemble the Changer

Before attempting to remove Sub-Plate Assembly, 83, detach Push-button Switch Unit 75 from Main Plate. To do this, start with Switch Unit Truss Bar 80. Then take out the screw which holds left end of Adjusting Rod Lever 94. Next remove Adjusting Rod 92 and Adjusting Rod Extension 79. Take out the screw Spring 73; then the screws holding Push-button Switch Unit 75 to Main Plate. Rods 77 and 78 can then, with due care, be extracted without bending. Free the Cam Connecting Rod 58 by loosening setscrew holding Spreader and Hub Assembly 59. Sub-Plate Assembly can then be detached without bending parts. In reassembling, reverse the procedure.

GENERAL ELECTRIC CO.

MODELS H116, H118, HJ119
MODEL H79
Record Changer Data

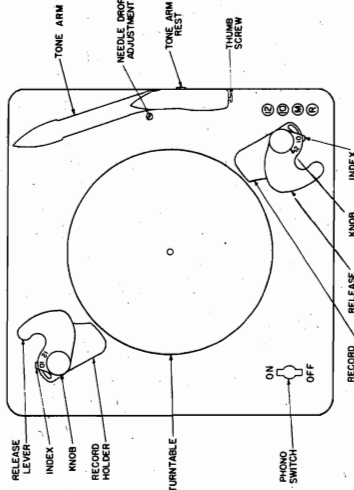


Fig. 8. Phono Compartment

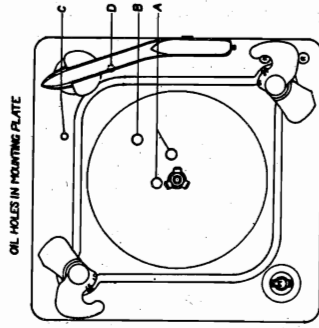


Fig. 9. Oiling Diagram

The Models H-116 and H-118 contain three-band ac-operated receivers employing eleven General Electric Pre-Selected Stations. The receivers are equipped with eleven Feathertouch Tuning keys which may be set up for favorite stations. The three remaining keys allow power control, manual tuning and phonograph or television audio reception. Each model is equipped with a new Super Broadcast scope, a highly efficient self-contained automatic volume control. Other design features include: 'Alnico' dynapower speaker, floodlighted station-key finder, visualux dial, iron-core I.F. transformers, automatic tone compensation, automatic volume control, and push-pull output.

The Model H-118 also incorporates an automatic record changer. The design of the automatic record changer features a mechanism which permits record rejection at any time during the reproduction by merely pressing the reject button. A high-quality crystal pick-up and tone arm assures full tone range and smooth, needle tracking. A constant-speed, full torque, high speed electric motor provides uniform turntable operation.

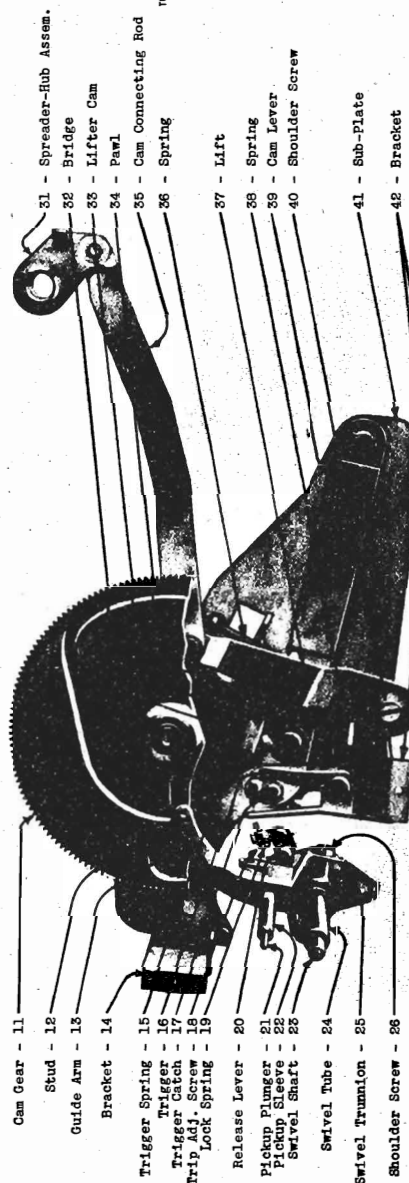


Fig. 10. Sub-Plate Assembly


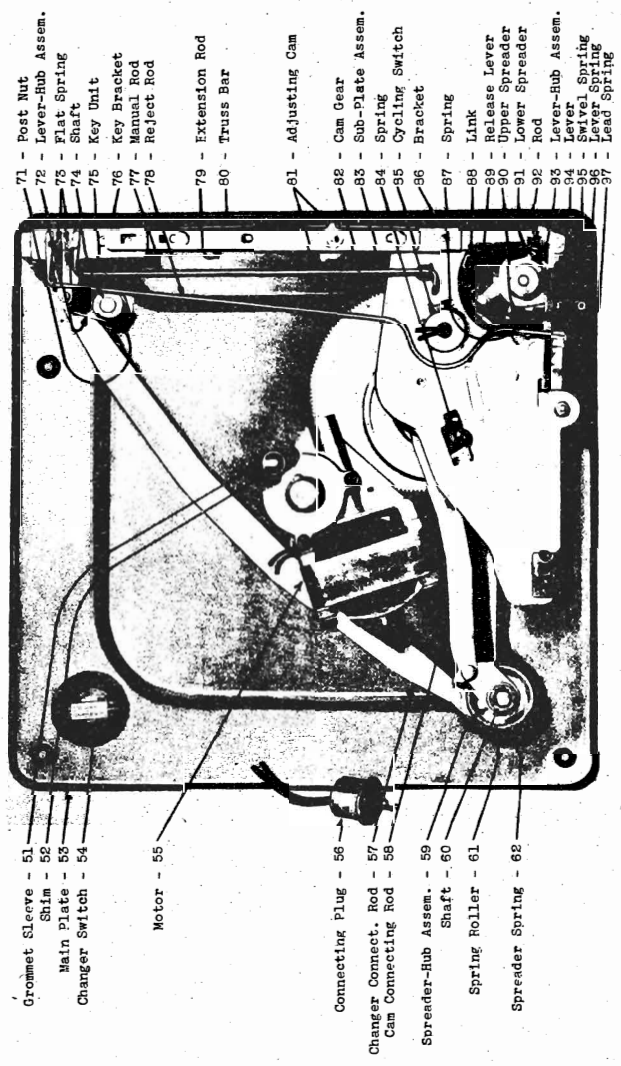


Fig. 11. Bottom View of Record Changer

GENERAL ELECTRIC CO.

MODEL HM136
Schematic Notes

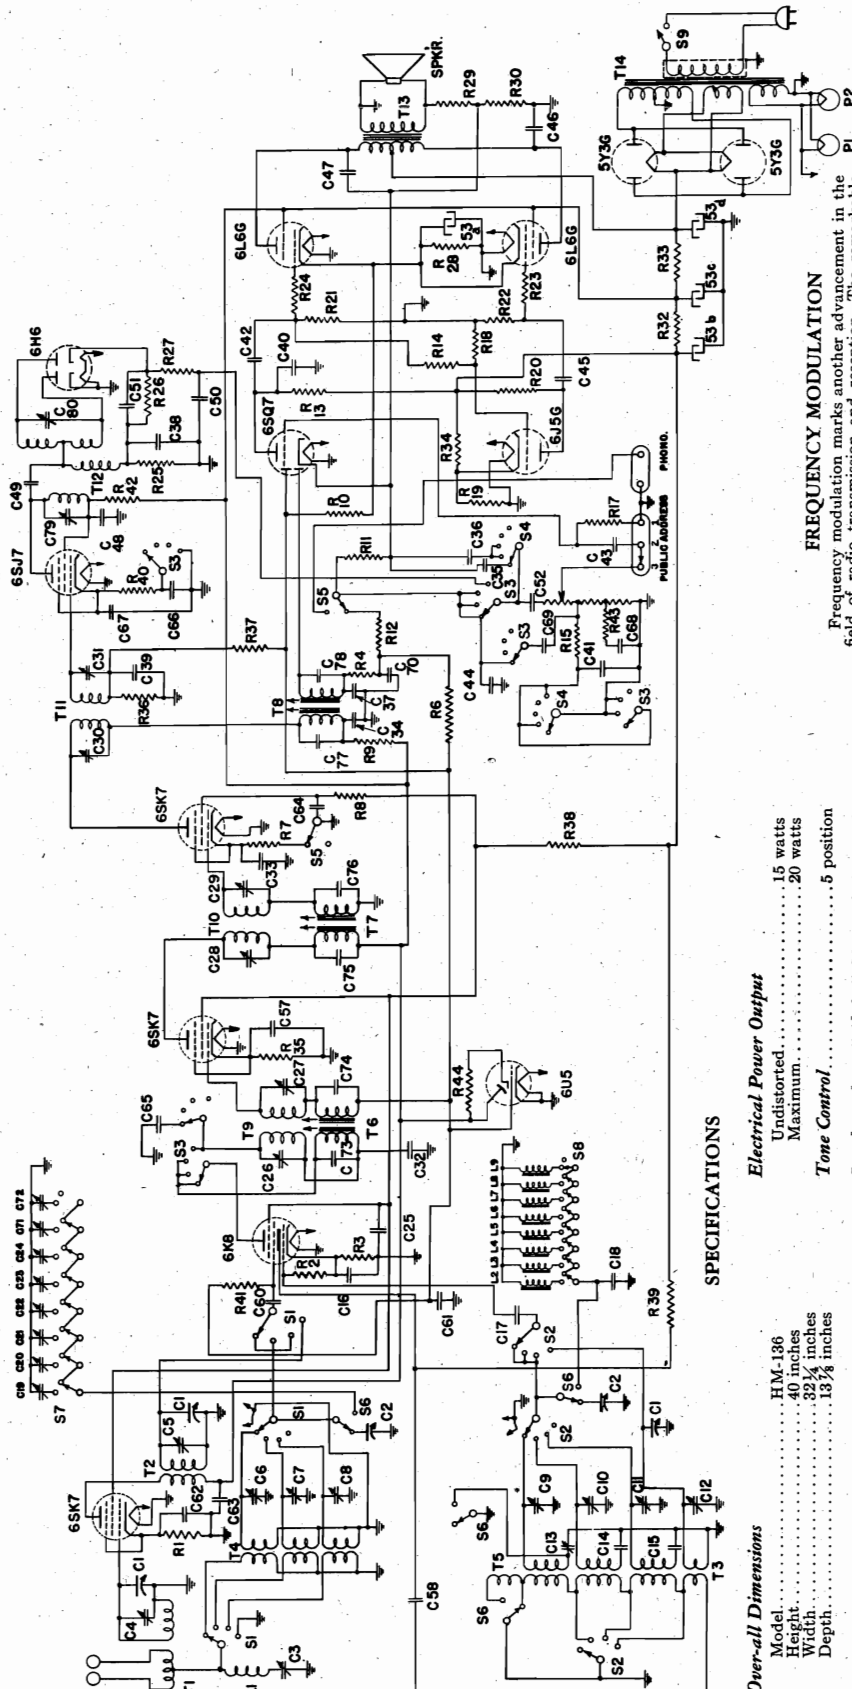

FREQUENCY MODULATION

Frequency modulation marks another advancement in the field of radio transmission and reception. The remarkable realism and lack of noise which can be attained by this form of transmission has created widespread interest. Present-day broadcasting stations superimpose sound programs on the radio frequency carrier signal by varying the carrier amplitude at the sound frequency rate. This is known as amplitude modulation. Frequency modulated signals are obtained by varying the frequency of the carrier signal at the sound frequency rate. The amount the carrier frequency is varied is representative of the strength of the sound. The use of frequency variations as high as 60 or 70 KC positive and negative (120 or 140 over-all) requires the use of specially designed wide-band R.F. and I.F. amplifier stages. Such band widths preclude the use of carrier signals in the neighborhood of the broadcast band where 120 KC would cover a considerable portion of the band. Therefore, transmission frequencies have been established in the short-wave band between 39 and 44 MC.

SPECIFICATIONS

- Over-all Dimensions**
 - Model..... HM-136
 - Height..... 40 inches
 - Width..... 32 1/4 inches
 - Depth..... 13 3/8 inches
- Manual Tuning Drive Ratio**..... 7:1
- Electrical Specifications**
 - 115 Volts AC, 50-60 cycles, 140 watts.
- Tuning Frequency Range**
 - Frequency Modulation..... 39-44 MC
 - Short-wave..... 7500-22,000 KC
 - Police-Amateur..... 2400-7500 KC
 - Standard Broadcast..... 540-1700 KC
- Intermediate Frequency**
 - Frequency Modulation..... 2100 KC
 - "B", "C" and "D" Bands..... 455 KC
- Electrical Power Output**
 - Undistorted..... 15 watts
 - Maximum..... 20 watts
- Tone Control**..... 5 position
- Load-speaker**—"Alnico" *Magnetic Dynamic*
 - Type Cone..... Curvilinear
 - Outside-Cone Diameter..... 10 inches
 - Voice-Coil Impedance (400 cycles)..... 3.5 ohms
- Tubes**
 - R.F. Amplifier..... GE-6SK7
 - Converter-Oscillator..... GE-6K8
 - I.F. Amplifiers..... (2) GE-6SK7
 - Noise Limiter..... GE-6SJ7
 - Discriminator..... GE-6H6
 - Det., Aud., AVC..... GE-6SQT
 - Phase Inverter..... GE-6I5G
 - Power Output..... (2) GE-6L6G
 - Rectifier..... (2) GE-5Y3G
 - Tuning Indicator..... GE-6U5
 - Dial Lamp..... (2) MAZDA No. 44

MODEL HM136
Voltage, Socket, Notes
Chassis Wiring

GENERAL ELECTRIC CO.

FRONT OF CHASSIS

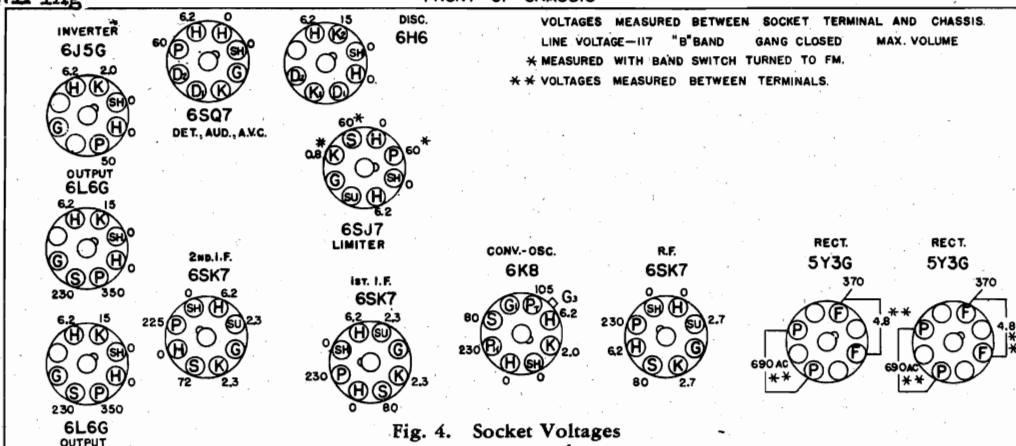


Fig. 4. Socket Voltages

GENERAL INFORMATION

The Model HM-136 is a combination frequency-modulation receiver and three-band radio using thirteen General Electric Pre-tested Tubes. Separate channels working into common tubes are employed for the detection and amplification of the frequency-modulated and amplitude-modulated R.F. and I.F. signals. An R.F. stage is employed in the frequency-modulated channel for increased sensitivity. Double interstage I.F. transformers are used with the frequency-modulated sections capacity-tuned and the amplitude-modulated sections inductively tuned. Other features of design include single-ended tubes in all stages except the converter-oscillator stage which uses a double section tube for increased stability, iron-core tuned oscillator coils for automatic station selection, noise limiter, discriminator, terminal board for conveniently connecting detector outputs to a public address system, "plug-in" type phono terminal,

10-inch curvilinear-type cone Dynapower speaker, and beam-power push-pull output.

ANTENNA

As a result of the high transmission frequencies the use of ordinary antennas for the reception of frequency-modulation signals is not satisfactory. General Electric builds a specially designed dipole antenna Model HT-9 for use with frequency-modulation receivers. For distances up to thirty miles from the transmitter a simple horizontal dipole with an over-all arm length of 10 feet 8 inches should give excellent results. The antenna should be located free of all obstructions and placed as high as is practicable. A noticeable gain in signal strength will be obtained as antenna height is increased. Generally best results will be obtained if the dipole arms are horizontal and at right angles to the direction of the frequency-modulation station. The lead-in transmission line may be of any length up to 100 feet and should consist of low-loss antenna lead-in wire.

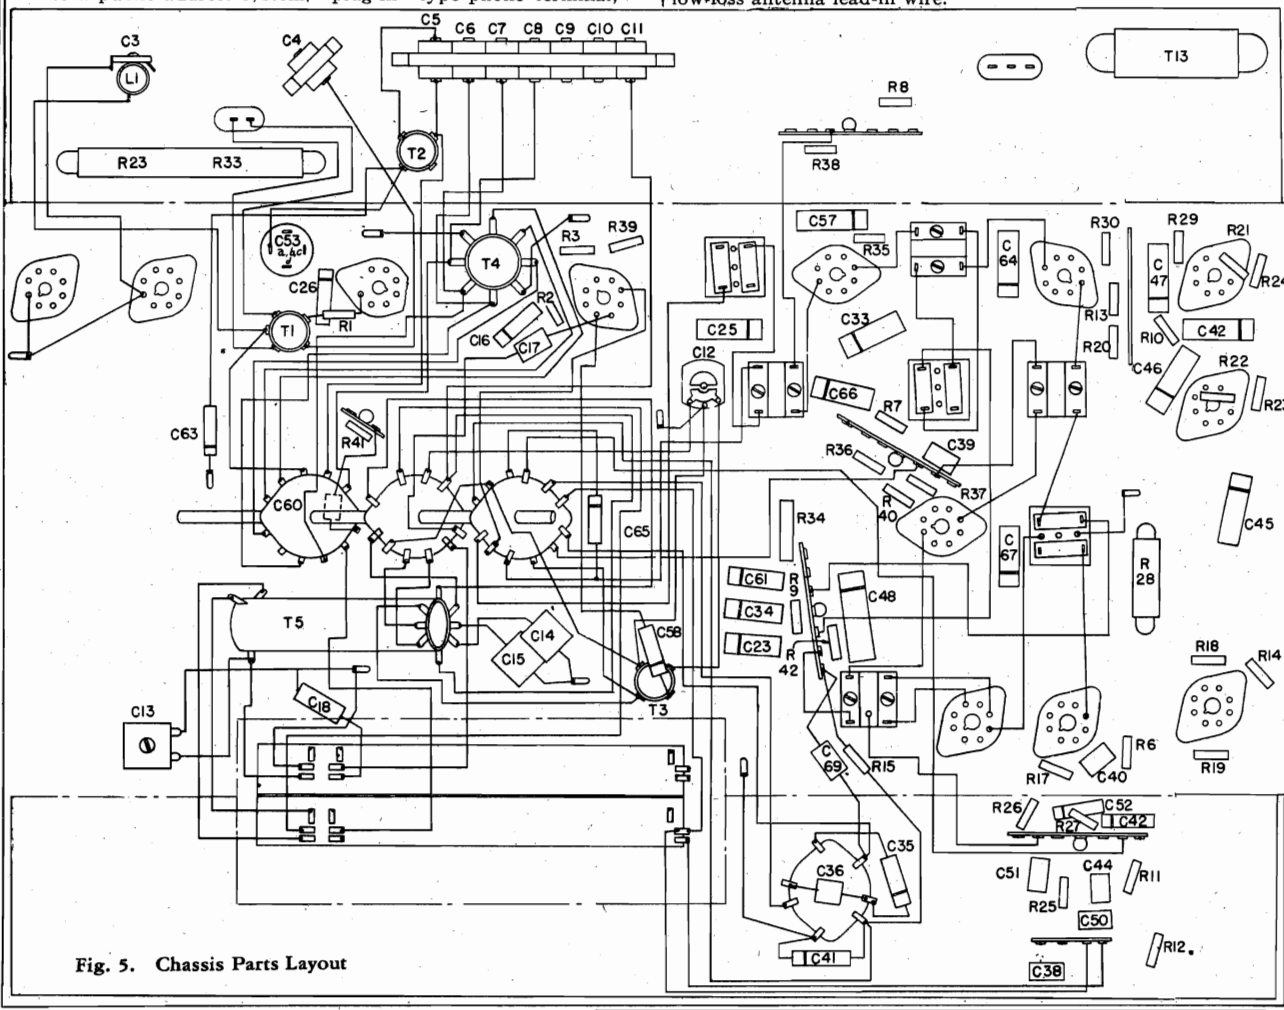


Fig. 5. Chassis Parts Layout

GENERAL ELECTRIC CO.

AMPLITUDE MODULATION

I.F. ALIGNMENT WITH OSCILLOSCOPE

Band-switch Setting	Input Frequency	Tone Control Position	Point of Input*	Iron-core Trimmer	Comments
1. Band B	455 K.C. and 30 K.C. sweep	Bass	2nd I.F. 6SK7 Grid	3rd I.F. Sec. 3rd I.F. Pri.	Condenser gang at minimum capacity—Manual key depressed—vertical input to ground and junction of R-4 and R-12. Adjust iron core trimmers in order mentioned for a single curve of maximum amplitude. Since iron-core trimmers are at top and bottom of shield cans most effective alignment can be obtained by using two non-metallic screwdrivers simultaneously.
2. Band B	455 K.C. and 30 K.C. sweep	Bass	1st I.F. 6SK7 Grid	2nd I.F. Sec. 2nd I.F. Pri.	
3. Band B	455 K.C. and 30 K.C. sweep	Bass	Converter Grid	1st I.F. Sec. 1st I.F. Pri.	
4. Band B	455 K.C. and 30 K.C. sweep	Bass	Converter Grid	All I.F. Trimmers	

I.F. ALIGNMENT WITH OUTPUT METER

1. Band B	455 K.C. modulated	Bass	2nd I.F. 6SK7 Grid	3rd I.F. Sec. 3rd I.F. Pri.	Condenser gang at minimum capacity—Manual key depressed—output meter connected across voice coil—volume control at maximum—input as low as practical. Adjust all trimmers in order listed for maximum output. Since iron-core trimmers are at top and bottom of shield cans most effective alignment can be obtained by using two non-metallic screwdrivers simultaneously.
2. Band B	455 K.C. modulated	Bass	1st I.F. 6SK7 Grid	2nd I.F. Sec. 2nd I.F. Pri.	
3. Band B	455 K.C. modulated	Bass	Converter Grid	1st I.F. Sec. 1st I.F. Pri.	
4. Band B	455 K.C. modulated	Bass	Converter Grid	All I.F. Trimmers	

R. F. ALIGNMENT

1. Band B					Connect output meter across voice coil and depress manual key.
2. Band B	1500 K.C. modulated	Bass	Antenna Post**	Osc. (C-9) Ant. (C-6)	Tune in signal by adjusting C-9. Peak C-6 for maximum meter reading.
3. Band B	580 K.C. modulated	Bass	Antenna Post**	Osc. Padder (C-13)	Set dial pointer to 580 K.C. mark and align C-13 for maximum meter reading while rocking the gang condenser.
4. Band C	6 MC modulated	Bass	Antenna Post**	Osc. (C-10) Ant. (C-7)	Set pointer to 6 M.C. mark and align (C-10). Peak (C-7) for maximum output.
5. Band D	21 M.C. modulated	Bass	Antenna Post**	Osc. (C-11) Ant. (C-8)	Set pointer to 21 M.C. mark and align (C-11). Peak C-8 while rocking the gang condenser. The image of any signal on the D band should be 910 K.C. below input signal. Example: 21 M.C. image 20.09 M.C.

* Use "dummy" antenna consisting of .05 mfd. capacitor between signal generator and point of input.
** Use an I.R.E. "dummy" antenna as shown in Fig. 1 between the signal generator and the point of input.

Stock No.	Description	List Price			
			*RC-092	CAPACITOR—.05 mfd. 600 V. paper (C-34, 42, 45, 64)	.30
			*RC-096	CAPACITOR—.01 mfd. 200 V. paper (C-61, 66, 67)	.30
*RB-008	BOARD—Terminal board (2 lug)	\$0.10	*RC-123	CAPACITOR—.01 mfd. 400 V. paper (C-25, 32)	.35
*RB-049	BOARD—Antenna terminal board	.10	RC-147	CAPACITOR—.25 mfd. 400 V. paper (C-48)	.35
RB-062	BOARD—Terminal board (6 lug)	.10	RC-191	CAPACITOR—.002 mfd. 1500 V. paper (C-46, 47)	.35
*RB-093	BOARD—Terminal board (6 lug)	.10	*RC-206	CAPACITOR—50 mmf. mica (C-17)	.35
RB-094	BOARD—Terminal board (7 lug)	.10	RC-232	CAPACITOR—47 mmf. mica (C-37, 49, 50, 51, 70)	.25
RB-172	BRACKET—Volume control mounting bracket	.05	RC-233	CAPACITOR—22 mmf. mica (C-39)	\$0.25
RB-173	BRACKET—Tuning drum support bracket	.20	*RC-235	CAPACITOR—100 mmf. mica (C-44, 69)	.25
RB-183	BRACKET—Small removable support bracket for mounting tuning condenser	.05	*RC-242	CAPACITOR—150 mmf. mica (C-40, 60)	.25
RB-1009	BOARD—Phono terminal board	.10	RC-249	CAPACITOR—220 mmf. mica (C-38)	.25
RB-1016	BOARD—External amplifier terminal	.15	*RC-293	CAPACITOR—470 mmf. mica (C-36)	.30
*RC-006	CAPACITOR—.0015 mfd. 600 V. paper (C-35)	.25	RC-307	CAPACITOR—750 mmf. mica (C-18) ±5%	.40
*RC-009	CAPACITOR—.001 mfd. 600 V. paper (C-65)	.25	*RC-347	CAPACITOR—1800 mmf. mica (C-14) ±5%	.35
*RC-011	CAPACITOR—.002 mfd. 600 V. paper (C-58)	.25	RC-389	CAPACITOR—4300 mmf. mica (C-15) ±5%	.40
*RC-023	CAPACITOR—.005 mfd. 600 V. paper (C-63)	.25	RC-676	CAPACITOR—B band padding capacitor (C-13)	.35
*RC-039	CAPACITOR—.01 mfd. 600 V. paper (C-43, 52, 68)	.25	*RC-681	CAPACITOR—FM oscillator air trimmer (C-12)	.90
*RC-055	CAPACITOR—.003 mfd. 600 V. paper (C-41)	.25	RC-863	CABLE—Power cable	.65
*RC-072	CAPACITOR—.05 mfd. 200 V. paper (C-16, 33, 57, 62)	.25			

*Used on previous receivers.

(Prices subject to change without notice)

MODEL HM136

Circuit Data

Alignment Procedure

GENERAL ELECTRIC CO.

LOUD-SPEAKER

In order to realize the high fidelity inherent in a frequency-modulated system or present in a well-designed amplitude-modulated system, the audio amplifiers and loud-speaker must be capable of reproducing the signal as received. Conventional conical-type cone loud-speakers because of the sharp break at the cone throat tend to cut off the higher audio frequencies. The use of a curvilinear-type cone loud-speaker in the Model HM-136 eliminates this possible suppression of the higher audio tones and excellent frequency response from 30 to 10,000 cycles per second is obtainable.

To center the voice coil, loosen the two screws which clamp the speaker spider in position. These two screws are accessible from the rear of the speaker. Shift the spider around until the voice coil is centered, then tighten the screws in position.

Phonograph or Television Audio Connections

Each receiver is equipped with a phono terminal (pin jack) to allow the convenient connection of a record player or the detector output of a television converter. General Electric plug, Stock No. RP-145 fits the pin jack. When using a crystal type pick-up, a suitable load consisting of a 100,000 ohm resistor in series with a .01 mfd. capacitor should be connected across the pick-up leads.

Public Address System Connections

A terminal board is located on the back apron of the chassis permitting easy attachment of a public address system. This provision permits feeding programs from either type of transmission into an external amplifier and loud-speaker system. Three terminals are provided and are numbered 1, 2 and 3. To connect an external amplifier to his receiver remove the link connection between terminals No. 2 and No. 3 and reinsert between terminals No. 1 and No. 2. Connect the external amplifier between terminals No. 1 and No. 3, the ground side of the amplifier being connected to terminal No. 1. If the external amplifier input is not a high impedance type, an impedance matching network will have to be used to insure matching to the 2.0 megohm volume control.

Noise Limiter

The frequency-modulation noise limiter circuit which uses a 6SJ7 tube is essentially a fourth I.F. stage. The tube operates at low plate voltage (60 volts DC) so that plate current cut-off occurs with relatively small grid bias. A small cathode bias developed in R-40 establishes the operating point at the center of the linear portion of the grid-voltage plate-current characteristic. Normal signal input will swing the grid voltage considerably above and below the linear portion of the curve. Negative peaks of the signal voltage will be clipped off by tube cutoff. Positive peaks will be clipped off by grid bias limiting.

Since noise creates wiggles (variations) in the peaks of the carrier signal it can be eliminated by cutting off the carrier peaks. This function takes place in the noise limiter as described above providing, of course that the carrier signal is sufficiently strong to cause grid voltage swing above and below the cut-off points.

Discriminator

The discriminator circuit for a frequency-modulated signal input must secure the audio information by operating on frequency variations. Referring to the schematic diagram, Fig. 3, the frequency-modulated (FM) signal, after passing through the 6SJ7 limiter tube, is applied to the primary winding of the detector transformer (T-12). The secondary is a center tapped winding with the outer ends connected to the 6H6 detector plates as shown. Two 100,000 ohm resistors (R-25 and R-26) are connected in series across the 6H6 cathodes and it is across these resistors that the audio signal appears. The detector transformer (T-12) is tuned to the intermediate frequency (2.1 MC). An I.F. signal of 2.1 MC which is not modulated will swing the detector plates positive and negative an equal amount resulting in equal DC voltages appearing across diode resistors R-25 and R-26. Since these voltages are of opposite polarity the resultant voltage measured across the diode resistors will be zero. When the incoming I.F. signal is frequency modulated it will be swinging above and below the intermediate frequency of 2.1 MC by an amount proportional to the degree of modulation. As the modulated signal swings off the resonant frequency of 2.1 MC unequal voltages will be developed across resistors R-25 and R-26. The resultant voltage measured across both resistors will be equal to the differ-

ence between the voltage across R-25 and the voltage across R-26. This resultant voltage will vary in magnitude directly as the degree of modulation. The number of times per second the I.F. signal swings above and below the resonant point produces the audio signal. Hence, the volume of an audio signal is transmitted as the magnitude of the frequency swing of a carrier, and the frequency of an audio signal is transmitted as the rate at which the carrier frequency is swung.

ALIGNMENT PROCEDURE

Frequency Modulation

I.F. Alignment

Due to the good stability of components and the wide-band characteristics of the I.F. circuits, alignment should be unnecessary under normal operating conditions. Should I.F. alignment become necessary, it will require a cathode ray oscilloscope and a 21 megacycle signal generator with a superimposed ≈ 200 KC sweep frequency. Many signal generators and mechanical frequency wobblers are available wherein the above requirements are fulfilled. As for example: GE Model TMV-97-C oscillator used in conjunction with the Frequency Modulator TMV-128-A will give a 200-300 KC sweep when operating on the 1500-3100 KC band of the test oscillator. To obtain the proper test oscillator mid-frequency (2.1 MC) the following procedure may be followed. Set "wobbler" condenser for about mid-capacity. Tune broadcast receiver to 2.1 MC. Adjust test oscillator tuning until signal is heard at maximum strength in the broadcast receiver. Connect the vertical plates of the oscilloscope across resistor R-36. A 100,000 ohm resistor should be connected in series with the high side of the oscilloscope. Using a .05 mfd. capacitor in series with the high side of the test oscillator output, insert the oscillator sweep signal into the receiver circuit first at the control grid of the 2nd I.F. 6SK7 and align transformer trimmers T-11. The resultant curve should be sharp on either side and quite broad and flat at the peak. Change the signal input to the 1st I.F. 6SK7 grid and align transformer trimmers T-10. The resultant curve should appear as the above stage only less broad at the peak. Align transformer trimmers T-9 with the signal input at the converter grid for sharpness and a flat peak. If peak will not flatten retouch the grid trimmer of transformer T-10. Do not retouch any other trimmers.

Leave the input of the oscillator sweep signal at the converter grid and connect the vertical oscilloscope plates across the resistors R-25 and R-26. Align transformer T-12 for an X-shaped crossover curve. Proper alignment of C-80 is indicated when the curve crosses about midway in the vertical plane. Proper alignment of C-79 is indicated when the sides of the curve near crossover are nearest to a straight line.

NOTE:—Keep signal input high enough so that noise limiter is functioning. This point is indicated when an increase in signal input no longer changes the size of the curve.

R.F. Alignment

Make sure the dial pointer coincides with the first division on the low frequency end of the dial scale when the gang condenser is completely closed.

1. Connect a 0-50 or 0-100 microammeter in series with the low end of R-36. A high resistance 0-10 V., D.C. voltmeter may be used instead of the microammeter. Connect the voltmeter across R-36 with a 100,000 ohm resistor in series with the high side.

2. Apply an unmodulated signal in the region of 43 megacycles to one of the antenna terminals using a 50-ohm resistor in series with the high side of the signal generator output.

3. Adjust pointer so it is set to the scale mark of the signal used and peak trimmers C-12, C-5 and C-4 progressively for maximum meter reading.

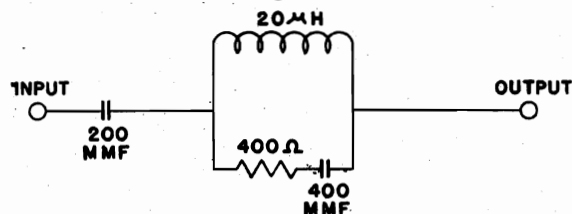


Fig. 1. Standard I.R.E. Dummy Antenna

MODEL H406U
Schematic, Voltage
Alignment, Trimmers

GENERAL ELECTRIC CO.

VOLTAGE CHART

Tube No.	12SK7GT	12SF5GT	50L6GT	45Z5GT
Plate to -B Volts	.10	17*	120	115 AC
Screen to -B Volts	110		120	
Cathode to -B Volts	0	0	7.5	130
Filament Volts	12.6	12.6	50	Entire filament** 45

Volume measured when volume control is set to maximum.
 Line Voltage—115 AC. No signal input. On DC, voltages should read approximately 10 per cent lower.
 *Measured on 250-volt scale—1000 ohms per volt-meter.
 **Measured between socket terminal No. 2 and No. 7.

GENERAL INFORMATION

Model H-406U is a compact four-tube AC-DC tuned radio frequency receiver that tunes the broadcast band of frequencies. This model has the full approval of the Underwriters' Laboratories.

When operating from a DC source of power, it is necessary to insert the power plug with the proper polarity; otherwise, the receiver will fail to function. If any hum is noticed when the receiver is used on AC, reverse the power plug in the receptacle.

ALIGNMENT

Connect the high side of the signal generator through a 250 mmf. condenser to the antenna terminal. The low side of the signal generator output should be connected to the receiver chassis through a .05 mfd. condenser. Connect a suitable output meter across the voice coil leads; then proceed as follows:


1. With gang condenser plates completely closed, the tuning pointer should be over the last mark on the dial.
2. Tune receiver to the 1500 KC point on the dial; then align trimmers on the gang condenser at 1500 KC for a maximum output meter reading.

Electrical Power Output

Undistorted.....0.9 watts
 Maximum.....1.8 watts

Load-speaker—"Alnico" Magnet Dynamic

Outside Cone Diameter.....4 inches
 Voice Coil Impedance (400 cycles).....3.5 ohms

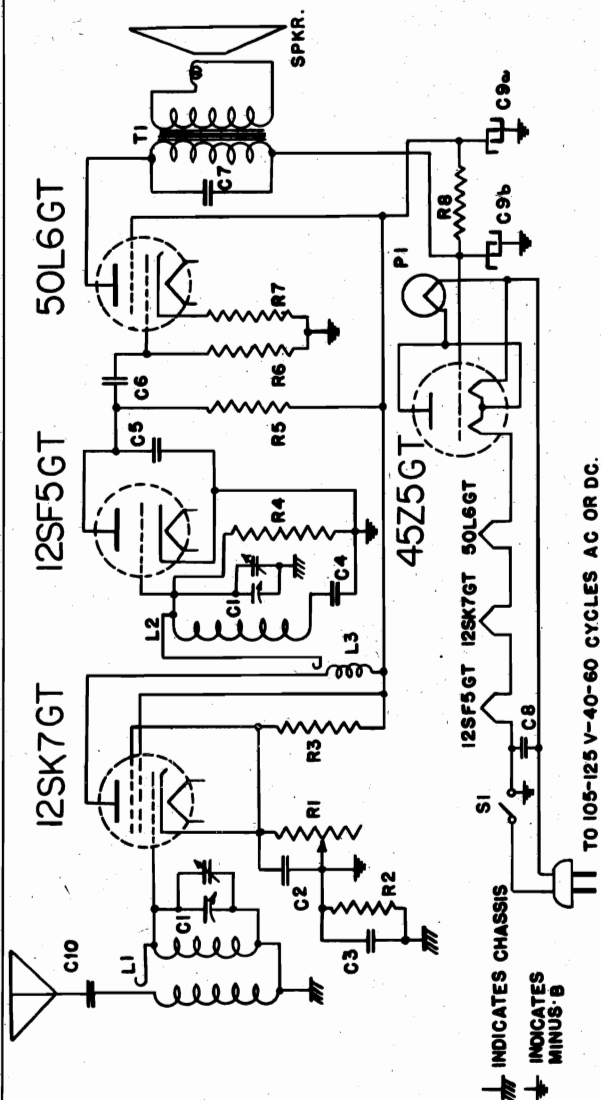

Symbol	Description	Symbol	Description	Symbol	Description
C-1	Tuning condenser	R-3	50,000 ohm carbon resistor		
C-2	.02 mfd. paper capacitor	R-4	5.6 megohms carbon resistor		
C-3	0.1 mfd. paper capacitor	R-5	3.0 megohms carbon resistor		
C-4	.02 mfd. mica capacitor	R-6	1.0 megohms carbon resistor		
C-5	100 mmf. mica capacitor	R-7	150 ohms carbon resistor		
C-6	.01 mfd. paper capacitor	R-8	2000 ohms carbon resistor		
C-7	.02 mfd. paper capacitor				

Fig. 2. Schematic Diagram
Tubes

- R.F. Amplifier.....GE-12SK7GT
- Detector-Audio.....GE-12SF5GT
- Power Output.....GE-50L6GT
- Rectifier.....GE-45Z5GT

Power Supply (Volts)	Frequency (Cycles on AC)	Power Consumption (Watts)
105-125 AC or DC	40-60	30

Tuning Frequency Range

Band "B".....540-1700 KC
 Alignment Frequency.....1500 KC

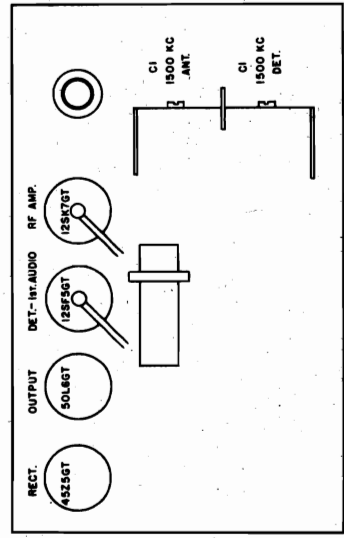


Fig. 1. Trimmer Location

GENERAL ELECTRIC CO.

MODEL HM171
Schematic

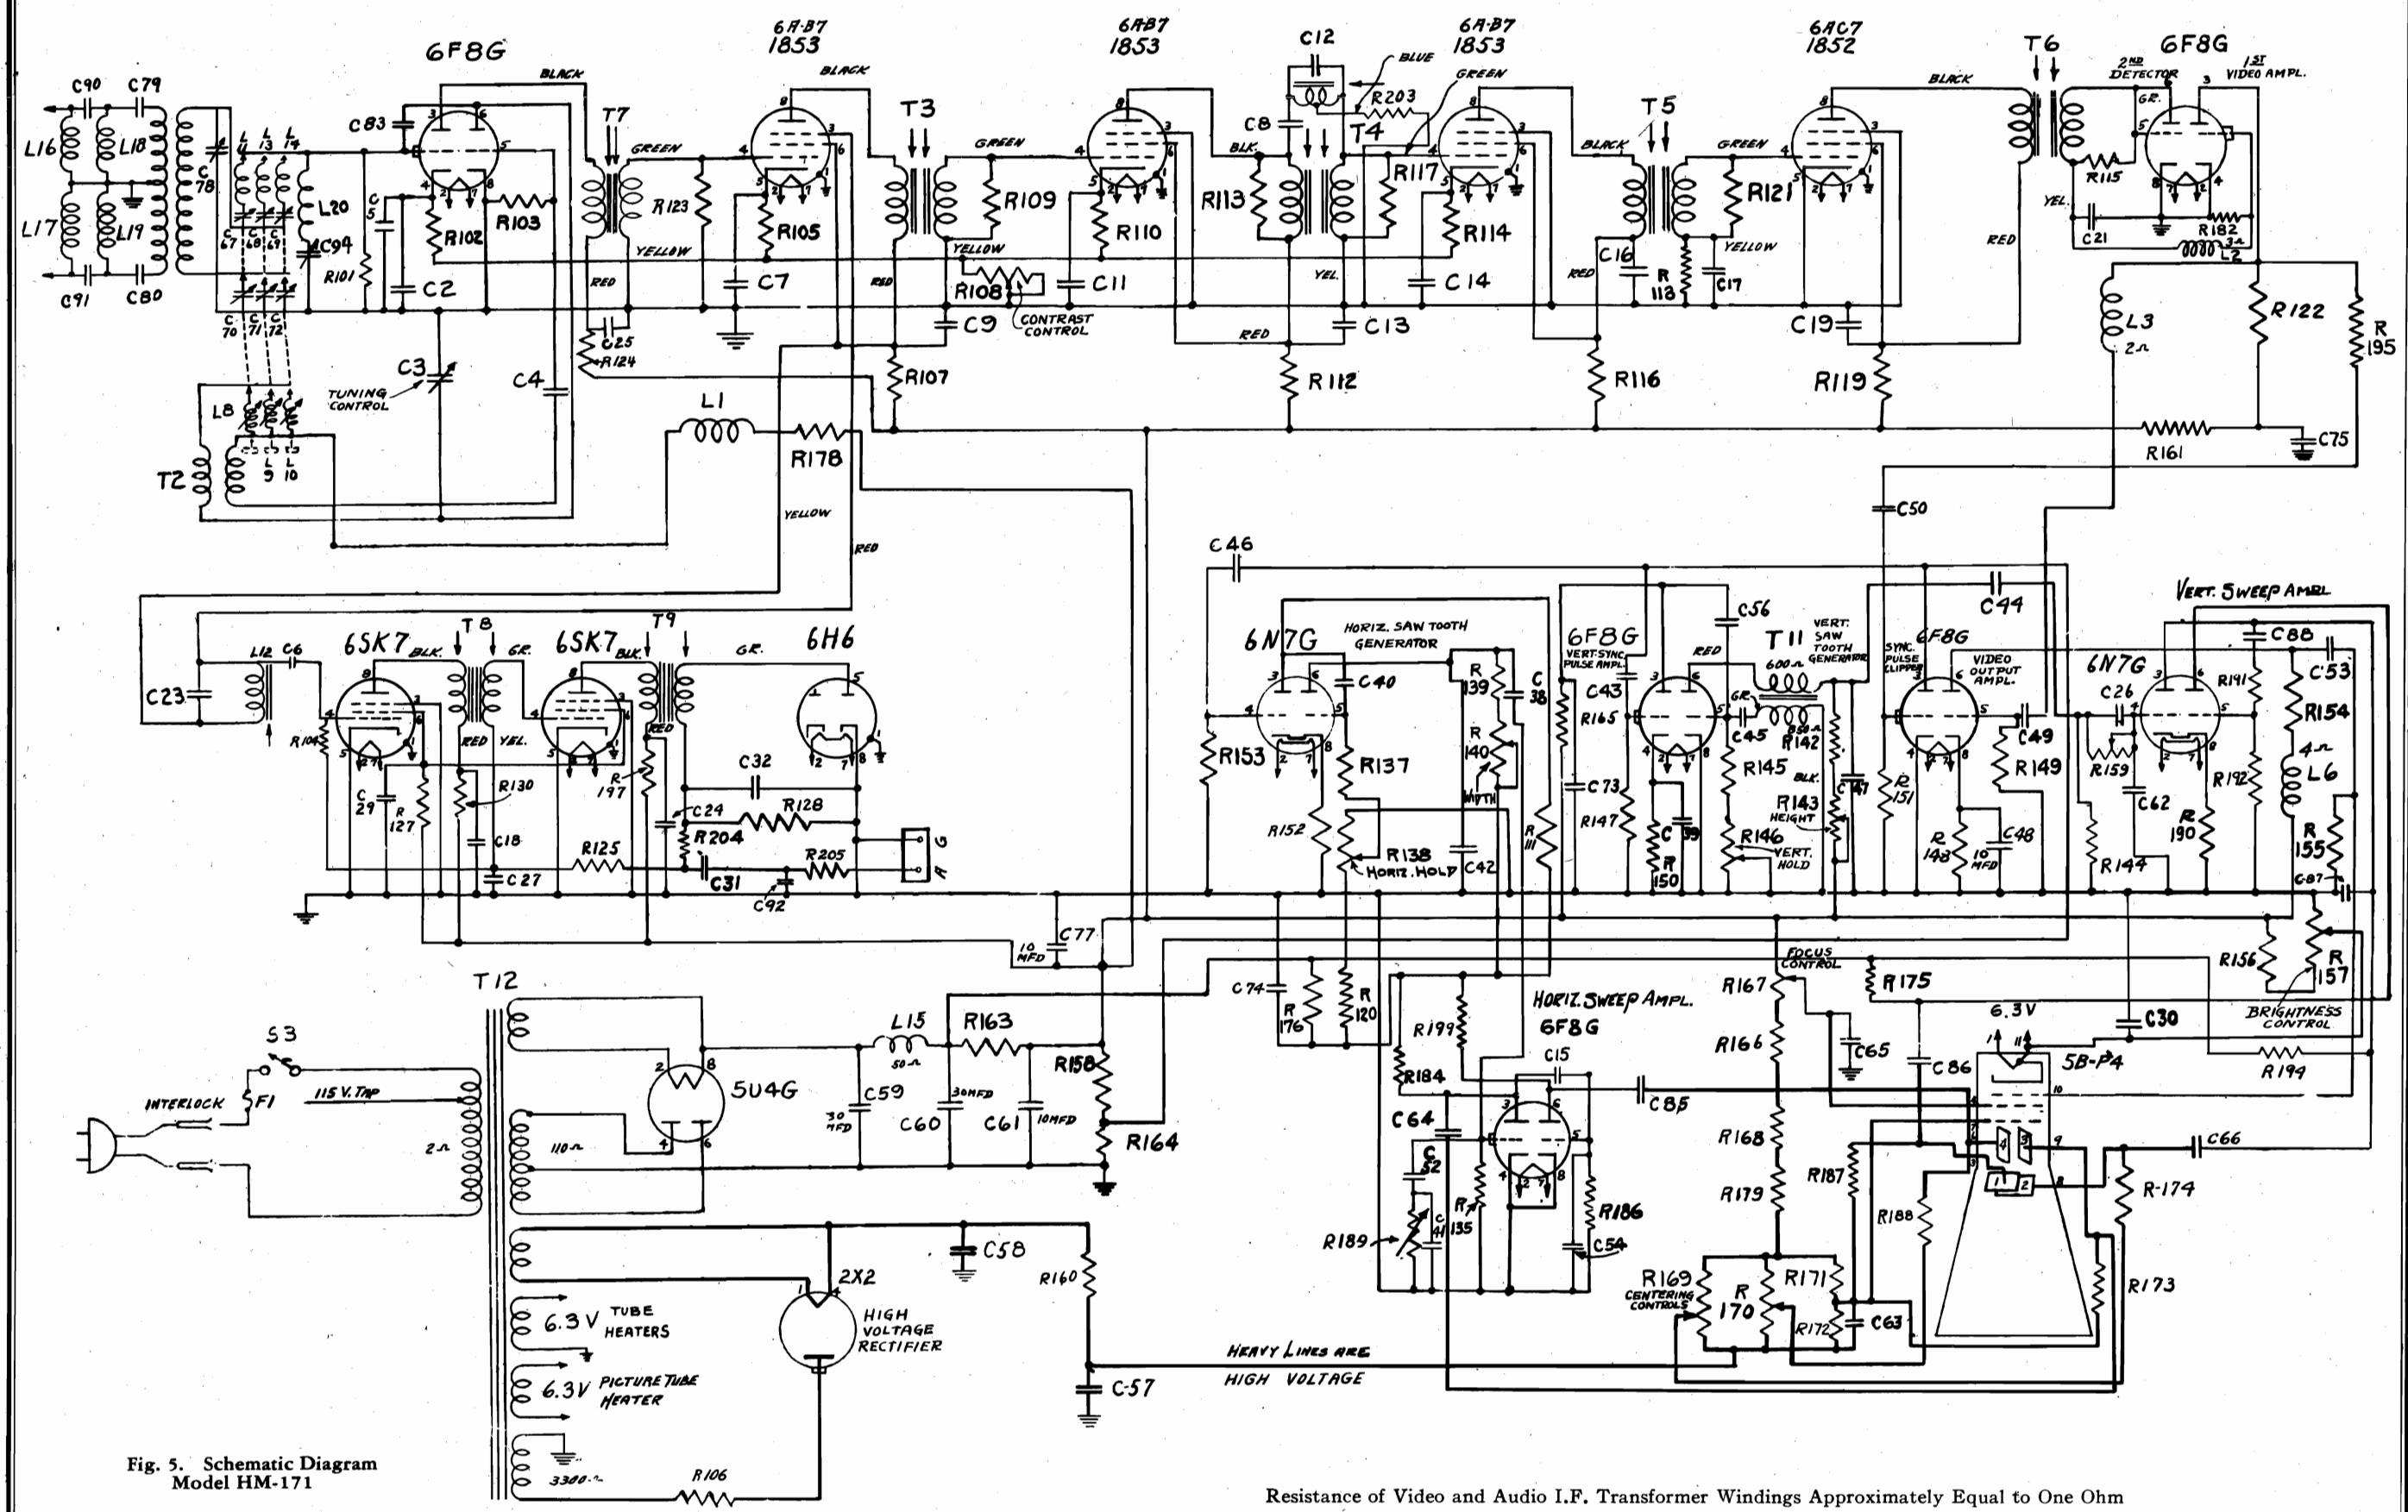


Fig. 5. Schematic Diagram
Model HM-171

Resistance of Video and Audio I.F. Transformer Windings Approximately Equal to One Ohm

MODEL HM171
MODEL HM185
Voltage, Chassis, Notes

GENERAL ELECTRIC CO.

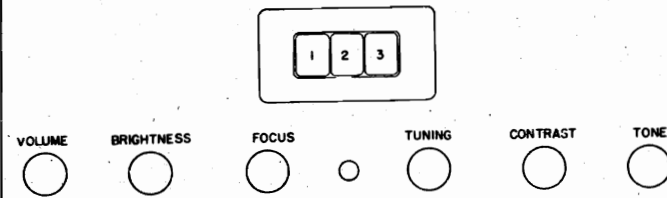


Fig. 2. Front Panel Control Location
Model HM-185

(Note—Model HM-171 Control Location is same as above with Volume and Tone Controls removed.)

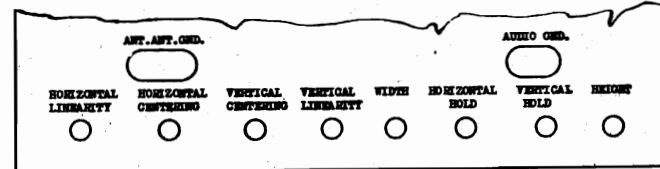


Fig. 3. Rear Cover Control Location
Models HM-171 and HM-185

RECEIVER CIRCUIT DESCRIPTION

R.F. Unit

Starting at the antenna terminal posts, there follows a single-stage high-pass filter in the antenna primary to reduce video I.F. interference, a shunt capacity coupled secondary (C-78), and a video I.F. wave trap (C-95, L-20). The wave trap is broadly tuned at 11.75 MC. Any one of the three tuned circuits for each of the three television transmission

bands can be connected into the secondary circuit by pressing appropriate button. The secondary circuit when properly tuned gives a broad, flat response curve.

Converter-Oscillator and Amplifier

The 6F8G converter employs one half as the oscillator and the other half as the biased first detector. The oscillator is plate-tuned with vernier tuning permitted from the front control panel through trimmer (C-3). The resultant video I.F. signal of 12.75 MC and the audio I.F. signal of 8.25 MC developed in the converter-oscillator tube circuit is coupled through transformer T-7 to the first 1853 amplifier tube.

Audio Unit

The audio I.F. signal is taken off the suppressor of this first 1853 tube. Two stages of 8.25 MC audio I.F. using 6SK7's follow. In the case of the HM-171 the audio I.F. signal is then detected and the resultant audio signal is made available at terminals for insertion into a radio output circuit. In Model HM-185 the 6SK7 stages are followed by a 6SQ7 detector and driver, and a 6F6G output stage.

Video Unit

Four stages of video I.F. follow the converter stage. The third stage incorporates a wave trap for the adjacent audio channel at 14.25 MC. The nominal pass band for these amplifiers is 12.75 to 10.75 MC. The second detector uses one half of a 6F8G connected as a diode. The other half of the 6F8G is used as the first video amplifier. The video output is coupled directly to the picture tube grid.

Sync Pulse Clipper

Sync-pulses are taken off the plate of the clipper section of the clipper and video output tube. The video signals are separate by tube cut-off since the plate voltage is only about 12 volts.

Horizontal Oscillator-output

The clipper feeds the horizontal multivibrator 6N7G directly with needle-point, negative sync pulses. C-46 blocks the flow of vertical sync pulses, into the horizontal multivibrator since they are of a low order of frequency. The horizontal sync pulses which are amplified by the first section of the 6N7G are coupled to the grid of the second section and drive the circuit into violent oscillation. Resulting plate and grid current flow sends the tube to cut-off. The sawtooth wave so generated is applied to the horizontal sweep amplifier one section of which is a phase inverter. This push-pull sweep is coupled to the horizontal deflecting plates of the picture tube. Horizontal hold is controlled by varying the charging rate of the generator circuit, through (R-138). Compensating for high frequency loss adds a means of controlling horizontal linearity which is done through R-189. Width is varied by regulating the magnitude of the charge through R-140.

Vertical Oscillator-output

The sync pulses are also coupled into the vertical oscillator 6F8G where the circuits composed of C-73 and R-165 bypasses the horizontal sync pulses. The vertical sync pulses are coupled into the vertical sweep generator circuit causing violent oscillatory swings which result in sawtooth waves.

The height control (R-146) determines the magnitude of the charge before the next oscillation thus governing the height of the picture. R-146, the horizontal hold control, governs the rate of charging. The vertical linearity control (R-159) accomplishes results similar to the horizontal linearity control. The vertical sweep amplifier produces push-pull output by phase inversion and this output is applied to the vertical deflecting plates of the picture tube.

Low Voltage Rectifier

Low voltage power is obtained from a 5U4G using one stage of choke filtering and the remaining of the resistance filter type.

High Voltage Rectifier

The anode voltage of the picture tube is obtained from a single half-wave rectifier with a protective resistor in series with the transformer plate lead.

Loudspeaker

The voice coil is accurately and permanently centered at the factory and should seldom give trouble. In case a voice coil needs recentering it will be necessary to replace the entire cone and voice coil assembly.

NOTE—In no case should the magnet be removed from the assembled position without remagnetizing after replacing it.

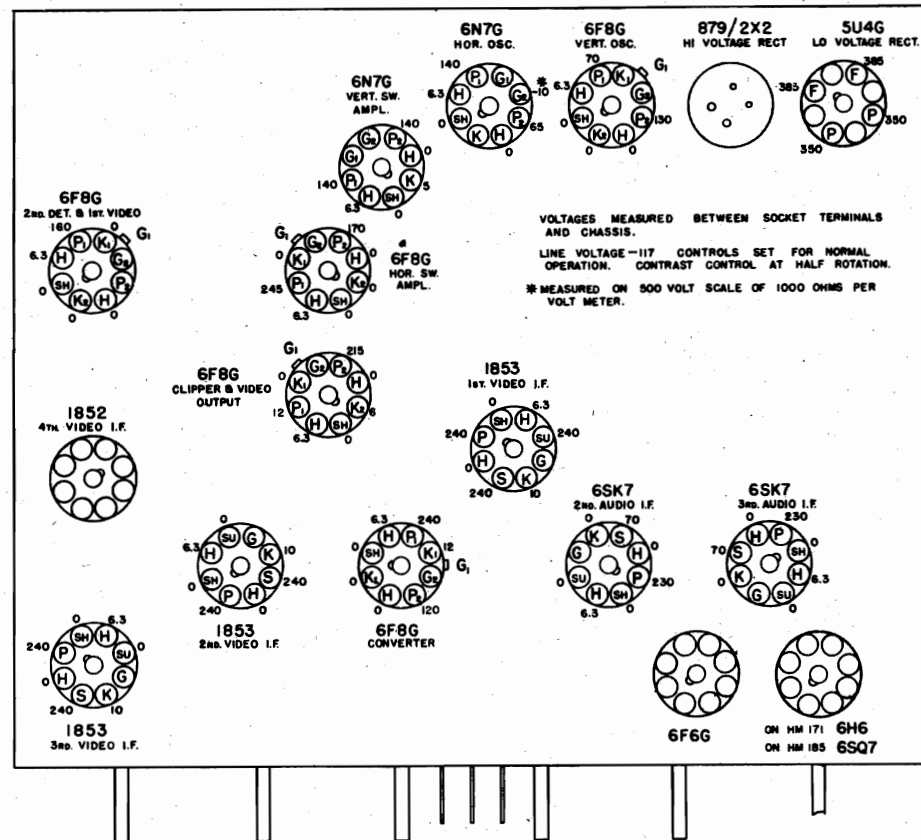


Fig. 9. Socket Voltages
Models HM-171 and HM-185

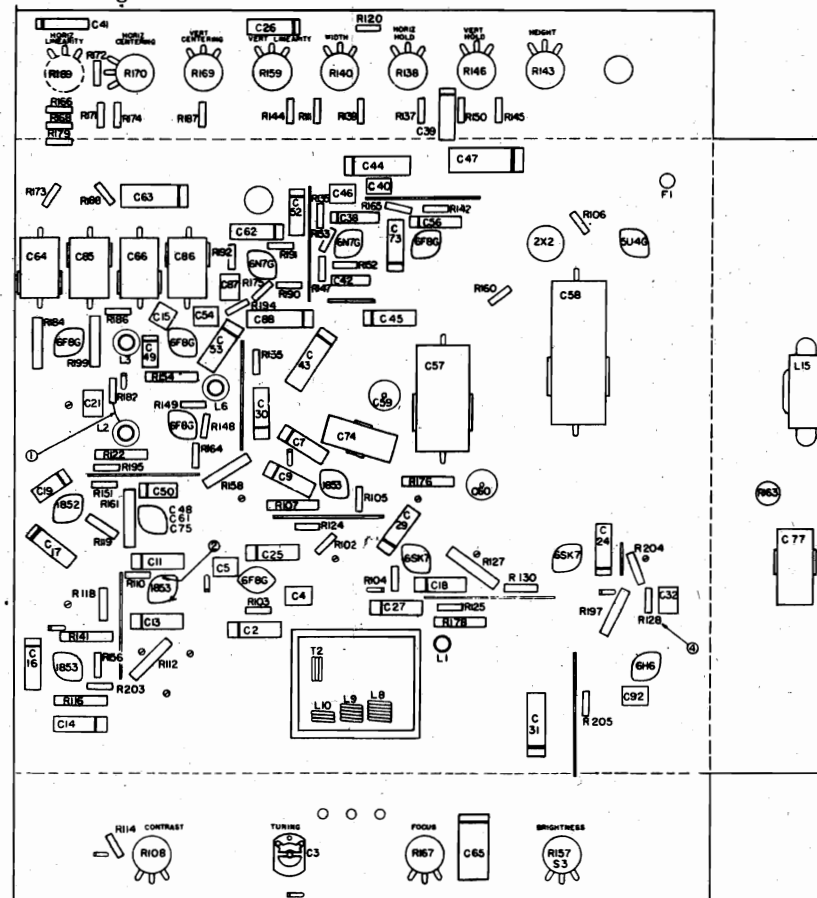


Fig. 1. Chassis Parts Layout
Model HM-171

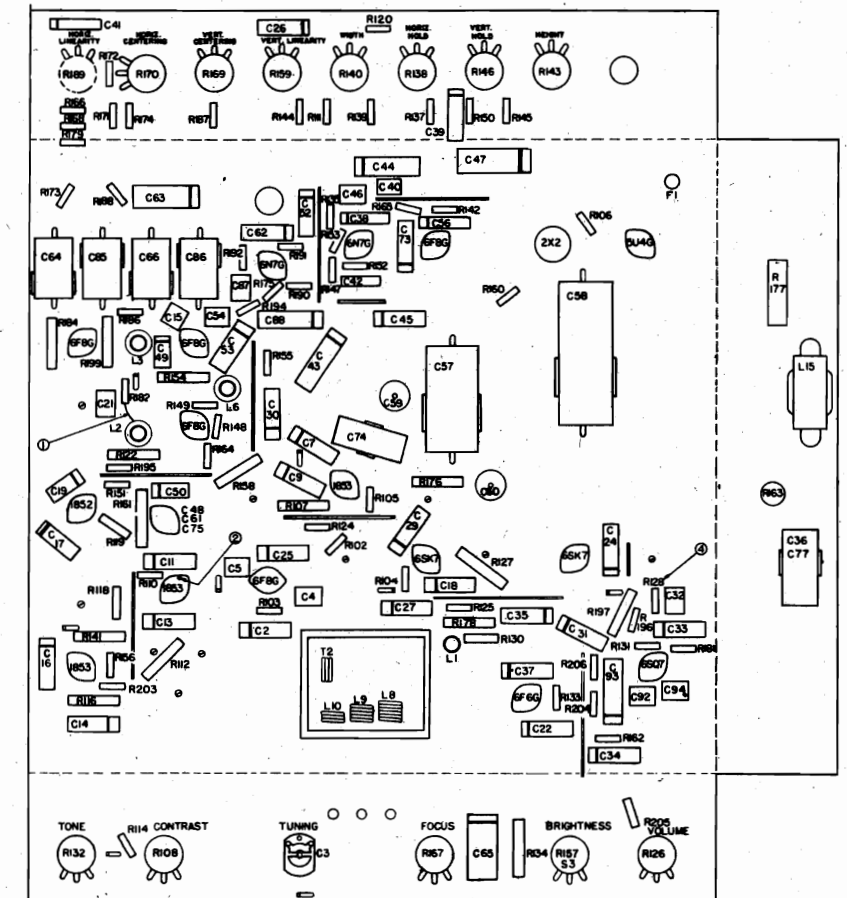


Fig. 4. Chassis Parts Layout
Model HM-185

GENERAL ELECTRIC CO.

MODEL HM185
Schematic

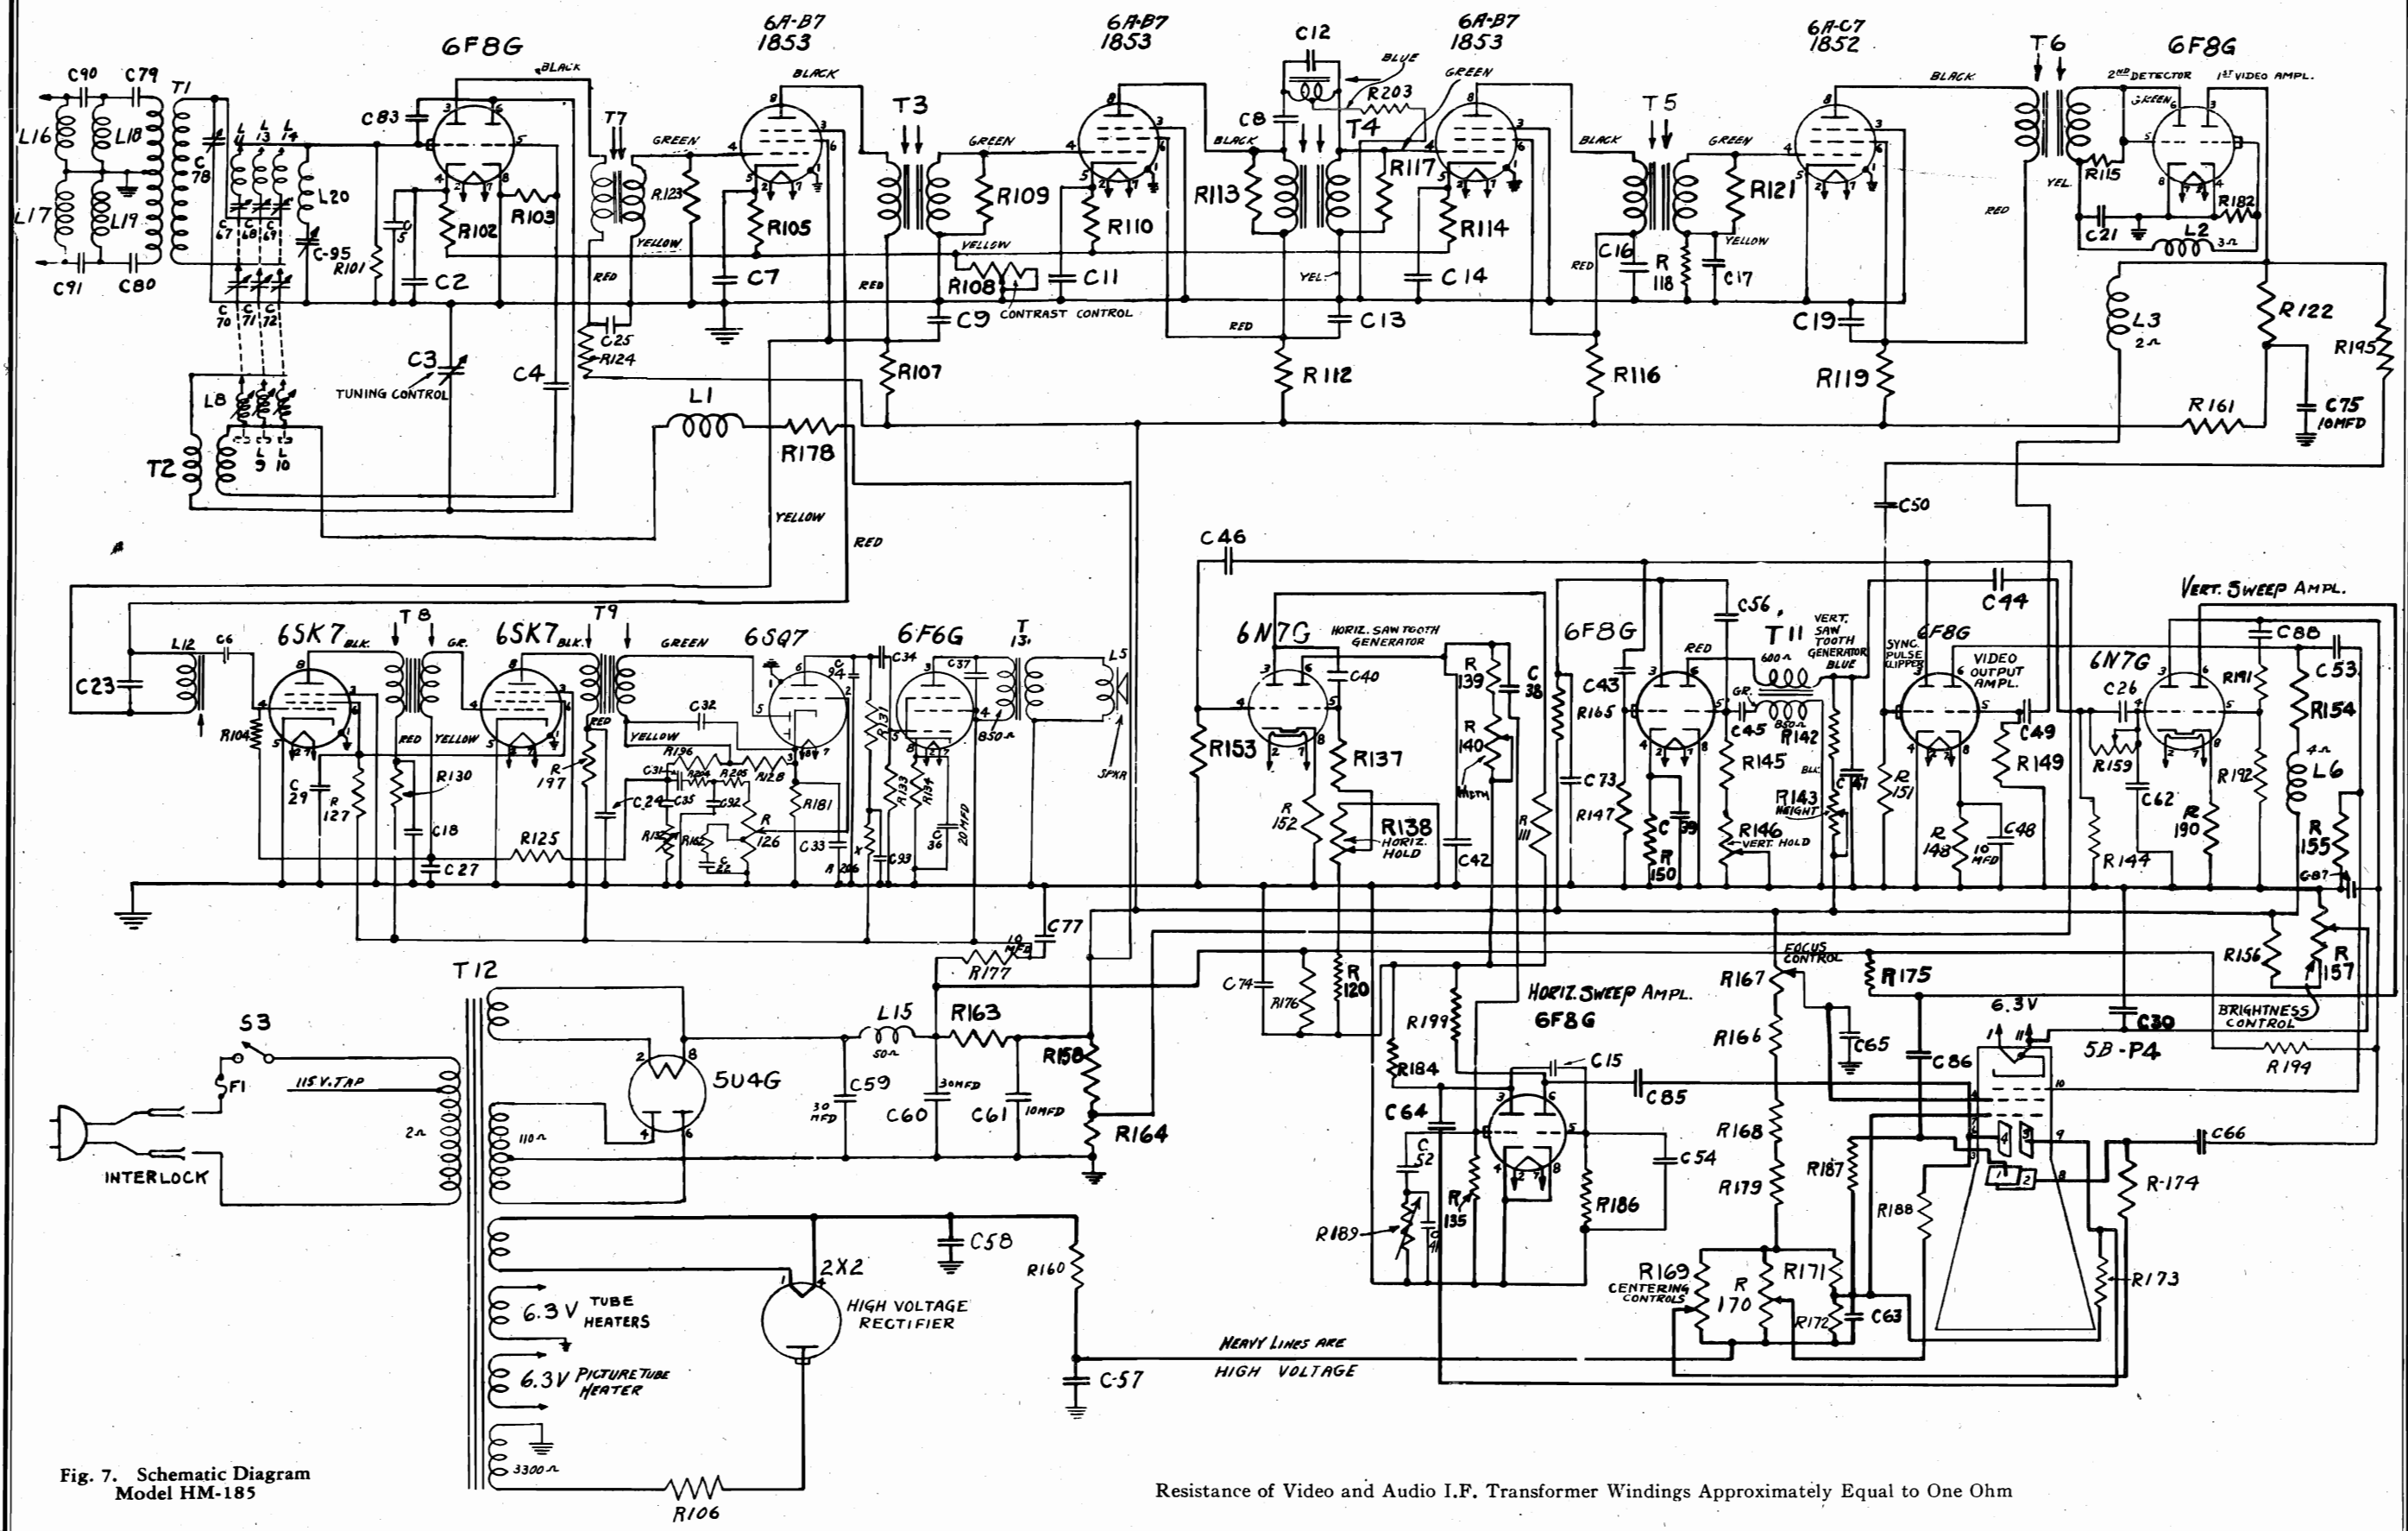


Fig. 7. Schematic Diagram
Model HM-185

Resistance of Video and Audio I.F. Transformer Windings Approximately Equal to One Ohm

GENERAL ELECTRIC CO.

MODEL HM171
MODEL HM185
Alignment

GENERAL INFORMATION

General Electric Picture Receiver and Sound Converter Model HM-171, is a table type, 17-tube, superheterodyne receiver equipped with a 5-inch, electrostatic-deflected, picture tube. The receiver works in conjunction with any radio receiver, which is designed for phonograph reproduction, to reproduce the sound portion of the television broadcast.

General Electric Television Receiver, Model HM-185 is a console type, 18-tube, superheterodyne receiver with a complete sound channel and using a 5-inch, electrostatic-deflected picture tube.

Additional design features include iron-core I.F. tuning, automatic tone compensation, automatic volume control and constant high-gain antenna coupling circuit.

TELEVISION ALIGNMENT PROCEDURE

The problem of aligning the several circuits in a television receiver is much more involved and requires more specialized equipment than the alignment of conventional radio receivers. Fortunately, the use of stable components in carefully engineered circuits of wide-band characteristic reduces to a minimum the necessity for alignment under normal operating conditions. Should alignment become necessary the following equipment will be needed:

- (A) For Video I.F. Alignment
- (1) Cathode ray oscilloscope
 - (2) Wide band sweep oscillator capable of sweeping from 7.5 to 15 MC.
 - (3) Marker system either provided in sweep oscillator or from separate signal generator for locating 12.75 and 10.75 MC points.

- (B) Sound I.F. Alignment
- (1) Cathode ray oscilloscope
 - (2) Wide band sweep oscillator capable of sweeping from 7.75 to 8.75 MC.
- (C) R.F. Alignment
- (1) Cathode ray oscilloscope
 - (2) Wide-band sweep oscillator capable of sweeping the following bands.
 - (a) 44 to 50
 - (b) 50 to 56
 - (c) 66 to 72

Electrical Specifications

Model	Power Supply (Volts)	Frequency (Cycles per Second)	Power Consumption (Watts)
HM-171	115-125	60	170
HM-185	115-125	60	170

Tuning Frequency Range

- Band No. 1.....44-50 MC.
Band No. 2.....50-56 MC.
Band No. 3.....66-72 MC.

Intermediate Frequencies

- Television Video (Picture).....12.75 MC.
Television Audio.....8.25 MC.

VIDEO I.F. ALIGNMENT

Input Freq.	Point of Input	Adjustments	Comments
1.			Connect vertical input cable of cathode ray oscilloscope across resistor R-182 of 6F8G video detector. See Fig. 1 or 4, arrow (1).
2. 7.5-15 MC Sweep	Control grid of 1853 (2nd video I.F.)		Connect output tap of video I.F. Sweep oscillator to control grid of 1853 (2nd video I.F.) See Fig. 1 or 4, arrow (2). Connect ground lead to chassis. Turn contrast control (R-108) to about half of maximum or to a point which gives satisfactory vertical deflection without overloading. Set horizontal centering and gain controls on oscilloscope to give suitable horizontal deflection. Adjust sweep phase to give curve similar to Fig. 6, curve 1.
NOTE: If sweep oscillator has marker points internally supplied, steps 3 and 4 may be omitted.			
3. Same as in No. 2 plus 12.75 MC	Same as in No. 2		Superimpose an accurately calibrated 12.75 MC signal in parallel with sweep signal. Signal will appear on sweep curve in oscilloscope as a wiggle, the center of which is a thin black line. With a pen or crayon mark this point on the screen of the oscilloscope. (NOTE: Hereafter the horizontal controls on the oscilloscope must not be touched.)
4. Same as in No. 2 plus 10.75 MC	Same as in No. 2		Superimpose an accurately calibrated 10.75 MC signal in parallel with sweep signal. Mark screen at point where signal appears on curve as in No. 3 above.
5. 7.5-15 MC Sweep	Same as in No. 2	Iron cores of detector transformer T-6	(Do not touch horizontal controls of oscilloscope. Adjust iron cores of T-6 until curve appears similar to Fig. 6, curve 1, with relatively flat top, 12.75 MC mark at corner of one side and 10.75 MC mark at corner of other side. These conditions plus maximum amplitude insure correct alignment.
6. 7.5-15 MC Sweep	Same as in No. 2	Iron cores of 4th video transformer T-5	Adjust iron cores for maximum gain, flatness and proper centering between markers as described in step No. 5 and illustrated in Fig. 6, curve 1.
7. 7.5-15 MC Sweep	Same as in No. 2	Iron cores of 3rd video transformer T-4	Adjust primary and secondary iron cores for maximum gain, flatness and proper centering. See Fig. 6, curve 1.
8. 7.5-15 MC Sweep	Converter grid, 6F8G	Iron cores of 2nd video transformer T-3	Connect low tap to grid (On top of tube). Adjust primary and secondary iron cores for maximum gain, flatness and proper centering. See Fig. 6, curve 2.
9. 7.5-15 MC Sweep	Converter grid, 6F8G	Iron cores of 1st video transformer T-7	Connect low tap to grid. Adjust iron cores for maximum gain flatness and proper centering.
10. 14.25 MC	Converter grid, 6F8G	Series iron core of 3rd video transformer T-4	Connect low tap to grid. Reduce horizontal gain to minimum. Adjust iron core for minimum line length.

GENERAL ELECTRIC CO.

MODEL HM171
MODEL HM185
Alignment

Maximum Electrical Output

- Model HM-171. (Dependent upon radio receiver output)
Model HM-185.....5 watts

Loudspeaker—"Alnico" Magnetic Dynamic

- Model.....HM-185
Cone Diameter.....12 inches
Voice Coil Impedance (400 cycles).....3.5 ohms

Picture Size

- Height.....3 1/4 inches
Width.....4 1/4 inches

Tubes

- Converter-Oscillator.....GE-6F8G
Audio & Video I.F. Amplifier.....GE-1853/6AB7
2nd and 3rd Audio I.F. Amplifiers... (2)GE-6SK7
Det., Audio, AVC (HM-185).....GE-6SQ7
Det. and AVC (HM-171).....GE-6H6
Audio Output (HM-185).....GE-6F6G
2nd and 3rd Video I.F. Amplifiers... (2)GE-1853/6AB7
4th Video I.F. Amplifier.....GE-1852/6AC7
Video Det. and 1st Video Amplifier...GE-6F8G
Video Output and Sync. Clipper.....GE-6F8G
Vertical Oscillator.....GE-6F8G
Vertical Output.....GE-6N7G
Horizontal Oscillator.....GE-6N7G
Horizontal Output.....GE-6F8G
High Voltage Rectifier.....GE-879/2X2
Low Voltage Rectifier.....GE-5U4G
Picture Tube.....GE-5BP4

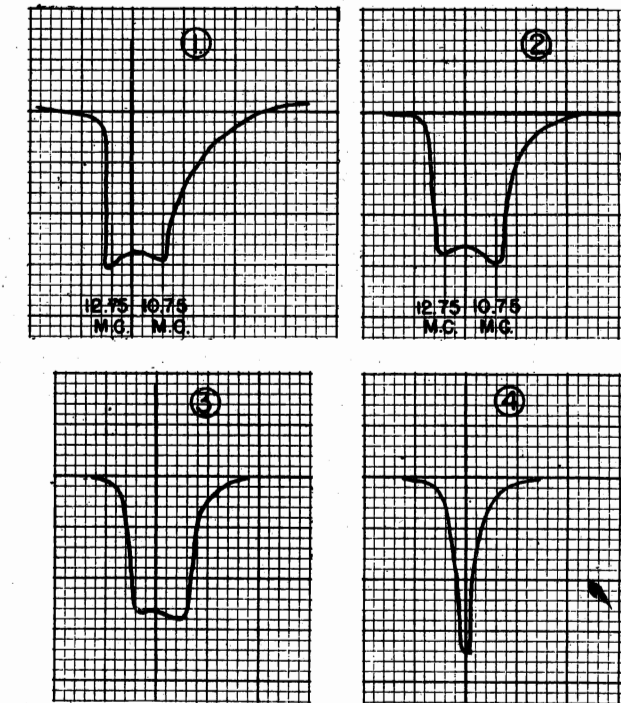


Fig. 6. Television Alignment Curves

R.F. ALIGNMENT

Signal Input	Point of Input	Adjustments	Comments
1.		Band width adjustment coupling condenser	Turn (C-78) in until tight, then open approximately 1/16 of a turn.
2. 44 to 50 MC Sweep	Antenna terminals	(L-8), (C-70), (C-67)	Depress band No. 1 push button. Set tuning control to mid-rotation. Adjust L-8 until curve is centered between maximum horizontal sweep points. Adjust C-70 and C-67 for maximum amplitude. See Fig. 6, curve 3.
3. 50 to 56 MC Sweep	Antenna terminals	(L-9), (C-71), (C-68)	Depress band No. 2 push button. Leave tuning control at mid-rotation point. Adjust L-9 for centering; C-71 and C-68 for maximum amplitude. See Fig. 6, curve 3.
4. 66 to 72 MC Sweep	Antenna terminals	(L-10), (C-72), (C-69)	Depress band No. 3 push button. Adjust L-10 for centering; C-72, C-69 for maximum amplitude. See Fig. 6, curve 3.

WAVE TRAP ALIGNMENT

1. 11.75 MC with 400 cycle modulation	Antenna terminals	Wave trap trimmer, C-95	Adjust for minimum signal response as seen on oscilloscope.
---------------------------------------	-------------------	-------------------------	---

AUDIO I.F. ALIGNMENT

Input Freq.	Point of Input	Adjustments	Comments
1.			Connect vertical input cable of cathode ray oscilloscope across R-128. See Fig. 1 or 4 arrow (4).
2. 7.75 to 8.75 MC Sweep	Converter grid, 6F8G	Iron cores of 4th audio I.F. transformer T-9	Align for maximum amplitude. See Fig. 6, curve 4.
3. 7.75 to 8.75	Converter grid, 6F8G	Iron cores of 3rd audio I.F. transformer T-8	Align for maximum amplitude. See Fig. 6, curve 4.
4. 7.75 to 8.75	Converter grid, 6F8G	Iron cores of 2nd audio I.F. transformer L-12	Align for maximum amplitude. See Fig. 6, curve 4.

MODEL HM171
MODEL HM185
Parts List

GENERAL ELECTRIC CO.

REPLACEMENT PARTS LIST (Continued)

Stock No.	Description	List Price	Stock No.	Description	List Price
*RB-008	BOARD—Terminal board (8 lug)	\$0.10	RTC-5006	CONTROL—500,000 ohm tone control (R-132)	\$0.65
*RB-009	BOARD—Terminal board (1 lug)	.15	RTC-5007	CONTROL—2.0 megohm variable control (R-132)	.75
*RB-010	BOARD—Terminal board (8 lug)	.10	RTC-5008	CONTROL—2.0 megohm volume control (R-132)	.75
*RB-060	BOARD—Terminal board	.10	RTC-5009	CONTROL—0.5 megohm width control (R-140)	.60
*RB-086	BOARD—Terminal board (3 lug)	.10	RTC-5010	CONTROL—3-20 mmf. tuning control (Pg. 10)	.30
*RC-001	CAPACITOR—0.01 mfd. 600 V. paper (C-42)	.25	RTC-6000	CARD—Television station tab No. 1 (Pg. 10)	.05
*RC-009	CAPACITOR—0.01 mfd. 600 V. paper (C-41, 82)	.30	RTC-6001	CARD—Television station tab No. 2 (Pg. 10)	.05
*RC-011	CAPACITOR—0.02 mfd. 600 V. paper (C-50)	.25	RTC-6002	CARD—Television station tab No. 3 (Pg. 10)	.05
*RC-023	CAPACITOR—0.05 mfd. 600 V. paper (C-29)	.25	RTC-7000	CABLE—Power cable with plugs	1.80
*RC-028	CAPACITOR—0.06 mfd. 600 V. paper (C-29)	.25	RTC-7001	CABLE—Picture tube cable and 11 prong clamp	3.00
*RC-039	CAPACITOR—0.1 mfd. 600 V. paper (C-38, 62)	.25	RTC-8000	GLAMP—Picture tube clamp (upper section)	.90
*RC-048	CAPACITOR—0.2 mfd. 600 V. paper (C-9, 13, 16, 18, 19, 24, 25, 29, 31, 34)	.30	RTC-8001	CUSHION—Picture tube face cushion	1.30
*RC-049	CAPACITOR—0.04 mfd. 600 V. paper (C-35)	.35	RTC-100	RESISTOR—100 ohms 1/4 W. carbon	.80
*RC-070	CAPACITOR—0.05 mfd. 200 V. paper (C-2, 7, 11, 14, 17, 27)	.25	RTL-1000	COIL—R.F. coil (Band No. 1) (L-11)	10
*RC-086	CAPACITOR—0.1 mfd. 200 V. paper (C-30, 33)	.30	RTL-1001	COIL—R.F. coil (Band No. 2) (L-13)	35
*RC-123	CAPACITOR—0.1 mfd. 400 V. paper (C-43, 44, 49, 53, 88, 93)	.35	RTL-1002	COIL—R.F. coil (Band No. 3) (L-14)	35
RC-5139	CAPACITOR—10 mfd. 300 V., 10 mfd. 450 V., 10 mfd. 450 V., dry electrolytic (C-46, 61, 76)	\$1.50	RTL-2001	COIL—Convertor plate oscillator coil (L-7-2)	.30
RC-5140	CAPACITOR—10 mfd. 450 V., 10 mfd. 450 V., dry electrolytic (C-46, 61, 76)	\$1.50	RTL-3000	COIL—Oscillator tuning coil (Band No. 1) (L-9)	.30
*RG-014	GRID CLIP—#988 grid clip (Pg. 5)	.85	RTL-3002	COIL—Oscillator tuning coil (Band No. 3) (L-10)	1.00
*RQ-525	RESISTOR—150,000 ohms 1/4 W. carbon (R-184)	.20	RTL-4001	CHOKE—Oscillator Plug B choke (L-1)	3.00
RQ-645	RESISTOR—960 ohms 2 W. carbon (R-184)	.20	RTL-4002	CHOKE—Video output choke (L-2)	.50
*RQ-670	RESISTOR—3300 ohms 2 W. carbon (R-184)	.70	RTL-5000	REACTOR—Plus B reactor (L-15)	1.60
*RQ-695	RESISTOR—39,000 ohms 2 W. carbon (R-184)	.70	RTM-1000	MASK—Picture tube mask	.35
RQ-774	RESISTOR—12,000 ohms 3 W. carbon (R-119)	.25	*RQ-1293	RESISTOR—27,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1243	RESISTOR—220 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1295	RESISTOR—33,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1245	RESISTOR—270 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1297	RESISTOR—39,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1251	RESISTOR—470 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1299	RESISTOR—47,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1259	RESISTOR—500 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1301	RESISTOR—56,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1267	RESISTOR—700 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1303	RESISTOR—66,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1269	RESISTOR—900 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1305	RESISTOR—82,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1271	RESISTOR—1,100 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1307	RESISTOR—100,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1273	RESISTOR—1,500 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1311	RESISTOR—120,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1283	RESISTOR—2,000 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1313	RESISTOR—180,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1285	RESISTOR—2,700 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1315	RESISTOR—220,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
*RQ-1289	RESISTOR—3,300 ohms 1/4 W. carbon (R-120) (Pg. 5)	.70	*RQ-1317	RESISTOR—270,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
			*RQ-1319	RESISTOR—330,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
			*RQ-1321	RESISTOR—400,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
			*RQ-1323	RESISTOR—470,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
			*RQ-1327	RESISTOR—560,000 ohms 1/4 W. carbon (R-165) (Pg. 5)	.70
			*RQ-1331	RESISTOR—1.0 megohm 1/4 W. carbon (R-120, 133, 135, 144, 151, 168, 179) (Pg. 5)	.70

* Used on previous receivers. (Prices subject to change without notice)

REPLACEMENT PARTS LIST
Models HM-171 and HM-185

Stock No.	Description	List Price	Stock No.	Description	List Price
*RC-132	CAPACITOR—0.1 mfd. 2000 V. paper (C-58)	\$1.80	*RC-133	CAPACITOR—0.06 mfd. 2000 V. paper (C-57)	.20
*RC-134	CAPACITOR—0.1 mfd. 1000 V. paper (C-47)	.20	*RC-147	CAPACITOR—25 mfd. 400 V. paper (C-49)	.40
*RC-157	CAPACITOR—0.5 mfd. 200 V. paper (C-44, 66, 85, 86)	1.85	*RC-192	CAPACITOR—12 mfd. mica (C-15)	.25
*RC-213	CAPACITOR—6 mfd. mica (C-83)	.25	*RC-220	CAPACITOR—22 mfd. mica (C-7)	.25
*RC-224	CAPACITOR—22 mfd. mica (C-7)	.25	*RC-225	CAPACITOR—47 mfd. mica (C-32, 95)	.25
*RC-232	CAPACITOR—100 mfd. mica (C-5, 46)	.25	*RC-233	CAPACITOR—68 mfd. mica (C-54)	.25
*RC-242	CAPACITOR—180 mfd. mica (C-23)	.15	*RC-246	CAPACITOR—180 mfd. mica (C-40)	.15
*RC-254	CAPACITOR—300 mfd. mica (C-8, 87)	.25	*RC-257	CAPACITOR—300 mfd. mica (C-92)	.30
*RC-429	CAPACITOR—30 mfd. 500 V. wet electrolytic (C-59, 60)	1.35	*RC-698	CAPACITOR—R.F. padder (C-78)	.40
*RC-698	CAPACITOR—R.F. padder (C-78)	.40	*RC-1995	CLAMP—Ant. coil mounting clamp (Pg. 5)	.10
RC-5138	CAPACITOR—20 mfd. 25 V., 10 mfd. 450 V., dry electrolytic (C-36, 71)	.90	*RQ-1335	RESISTOR—1.5 megohms 1/4 W. carbon (R-191) (Pg. 5)	\$0.70
*RQ-1339	RESISTOR—2.2 megohms 1/4 W. carbon (R-191) (Pg. 5)	.70	*RQ-1341	RESISTOR—4.7 megohms 1/4 W. carbon (R-147) (Pg. 5)	.70
*RQ-1349	RESISTOR—5.6 megohms 1/4 W. carbon (R-173, 174, 177, 188) (Pg. 5)	.70	RQ-1420	RESISTOR—150,000 ohms 1/4 W. carbon (R-122)	.20
RQ-1460	RESISTOR—1200 ohms 1/4 W. carbon (R-122)	.20	*RQ-1461	RESISTOR—1500 ohms 1/4 W. carbon (R-122)	.20
*RQ-1471	RESISTOR—3000 ohms 1/4 W. carbon (R-124)	.20	*RQ-1472	RESISTOR—3300 ohms 1/4 W. carbon (R-107, 112, 116)	.20
*RQ-1475	RESISTOR—4700 ohms 1/4 W. carbon (R-107, 112, 116)	.20	*RQ-1476	RESISTOR—5600 ohms 1/4 W. carbon (R-107, 112, 116)	.20
*RQ-1485	RESISTOR—12,000 ohms 1/4 W. carbon (R-119)	.20	*RQ-1489	RESISTOR—18,000 ohms 1/4 W. carbon (R-184, 189)	.20
*RQ-1489	RESISTOR—18,000 ohms 1/4 W. carbon (R-184, 189)	.20	*RS-179	SHIELD—6F8G tube shield	.15
*RS-222	SOCKET—Otal tube socket	.15	*RS-257	SOCKET—Electrolytic mounting socket	.15
*RS-1011	SPEAKER—1/2 inch permanent magnet	4.80	RT-471	TRANSFORMER—Output transformer (Pg. 10)	1.70
RT-954	TRIMMER—Speaker lead control clip (Pg. 10)	.10	*RW-101	WASHER—Felt washer for control shafts (Pg. 10)	.05
*RQ-1283	RESISTOR—2,000 ohms 1/4 W. carbon (R-164) (Pg. 5)	.70	RW-112	WASHER—Transformer shaft tension (Pg. 10)	.70
*RQ-1285	RESISTOR—2,700 ohms 1/4 W. carbon (R-164) (Pg. 5)	.70	RX-062	ASSEMBLY—Speaker mounting assembly (R-101, 195) (Pg. 5)	.70

* Used on previous receivers. (Prices subject to change without notice)

GENERAL ELECTRIC CO.

MODEL HM225, HM226-7A
Schematic

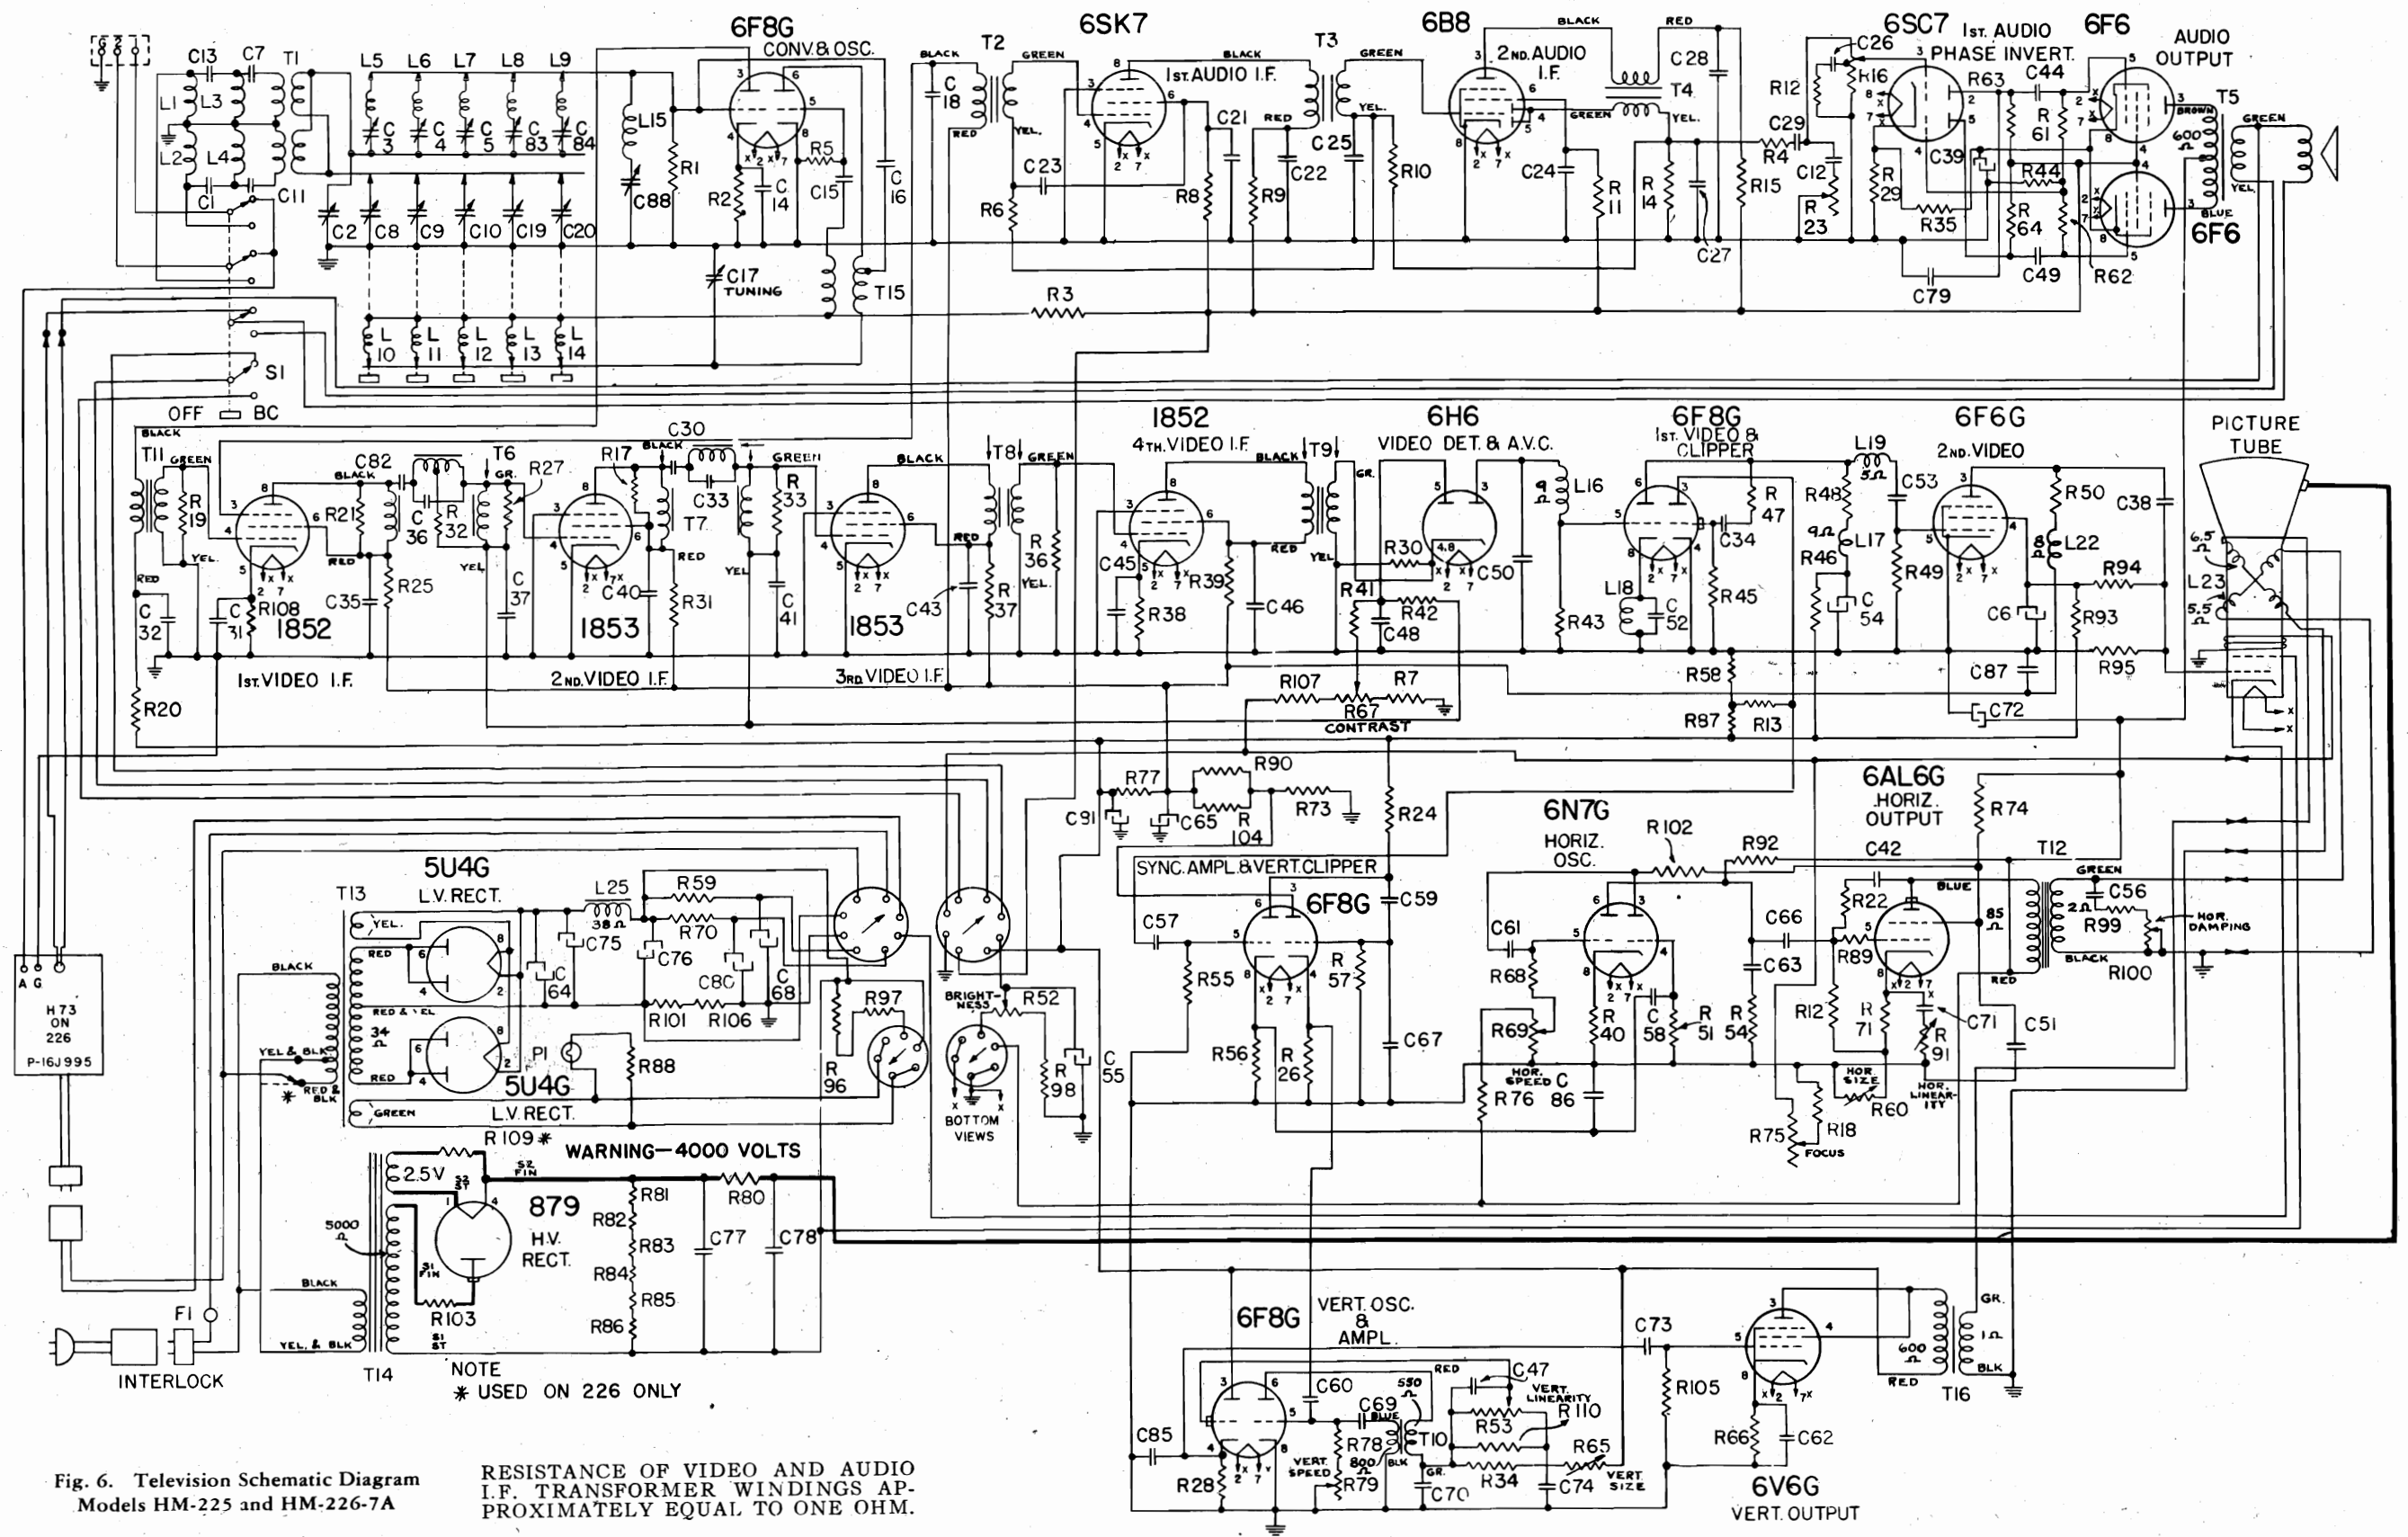


Fig. 6. Television Schematic Diagram
Models HM-225 and HM-226-7A

RESISTANCE OF VIDEO AND AUDIO
I.F. TRANSFORMER WINDINGS AP-
PROXIMATELY EQUAL TO ONE OHM.

MODELS HM225, HM226-7A
Voltage, Trimmers, Socket, Chassis
Controls, Notes

GENERAL ELECTRIC CO.

ANTENNA

In general, the television antenna should be of the dipole type located as high as is practical and in an area where the horizon in the direction of the television transmitter is not obstructed by buildings or structures. A noticeable gain in signal strength will be obtained as antenna height is increased. Since television radiation reacts similarly to light waves, reflection problems arise which often modify otherwise ideal installation locations. Consideration must also be given noise sources within buildings, or ignition noises from vehicles on adjacent streets. It is usually best to locate the dipole antenna on the side of the building away from the street thus allowing the building to shield the antenna from ignition noises.

The dipole should be erected with arms parallel to the ground and at right angles to the direction of the television station. If noise or reflection interference exist it may be better to point the dipole arms in the direction of the interference.

Noise interference and poor signal strength may dictate the use of a reflector. A reflector will increase the signal strength appreciably as well as increase the horizontal directivity.

General Electric Television Receiver, Model HM-225, is a console type, 22-tube, superheterodyne receiver equipped with a full magnetic, short, 9-inch picture tube. The rectifier-power supply is on a separate chassis mounted in the lower cabinet compartment with the speaker.

General Electric Television and Radio Receiver, Model HM-226-7A, is a console type instrument using the same television receiver as the Model HM-225 with minor alterations for use in conjunction with a 7-tube radio receiver. Model HM-226-7A is equipped with a full magnetic, short, 12-inch picture tube.

Additional design features include iron-core I.F. tuning, automatic contrast control, automatic brightness control, automatic tone compensation, automatic volume control and a constant high-gain antenna coupling circuit.

SERVICE DATA

Electrical Specifications

Model	Power Supply (Volts)	Frequency (Cycles per Second)	Power Consumption (Watts)
HM-225	115-125	60	300
HM-226-7A	115-125	60	300 (Television) 75 (Radio)

Tubes

Television

- Converter-Oscillator..... GE-6F8G
- 1st Audio I.F. Amplifier..... GE-6SK7
- 2nd Audio I.F. Amplifier..... GE-6B8
- Audio Amplifier and Phase Inverter..... GE-6SC7
- Audio Output..... (2)GE-6F6
- 1st and 3rd Video I.F. Amplifier..... (2)GE-1852/6AC7
- 2nd and 3rd Video I.F. Amplifier..... (2)GE-1853/6AB7
- Video Detector and AVC..... GE-6H6
- 1st Video Amplifier and Sync. Clipper..... GE-6F8G
- 2nd Video Amplifier..... GE-6F6G
- Sync. Amplifier and Vertical Clipper..... GE-6F8G
- Vertical Oscillator and Amplifier..... GE-6F8G
- Horizontal Oscillator..... GE-6N7G
- Vertical Output..... GE-6V6G
- Horizontal Output..... GE-6AL6G
- Low Voltage Rectifier..... (2)GE-5U4G
- High Voltage Rectifier..... GE-879/2X2
- Picture Tube (HM-225)..... GE-MW-22-2
- Picture Tube (HM-226-7A)..... GE-MW-31-3

Intermediate Frequencies

- Television Video (Picture)..... 12.75 M.C.
- Television Audio..... 8.25 M.C.
- Radio..... 455 K.C.

Maximum Electrical Output

- Television Audio..... 10 Watts
- Radio Audio..... 5 Watts

Tuning Frequency Range

- Television Receiver (used in both models)
- Band No. 1..... 44-50 M.C.
- Band No. 2..... 50-56 M.C.
- Band No. 3..... 66-72 M.C.
- Band No. 4..... 78-84 M.C.
- Band No. 5..... 84-90 M.C.

Tone Control

- Television Audio..... Continuously variable
- Radio Audio..... 4-position

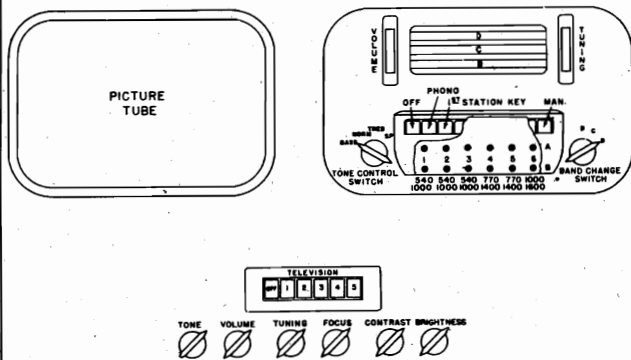


Fig. 2. Front Control Location Model HM-226-7A

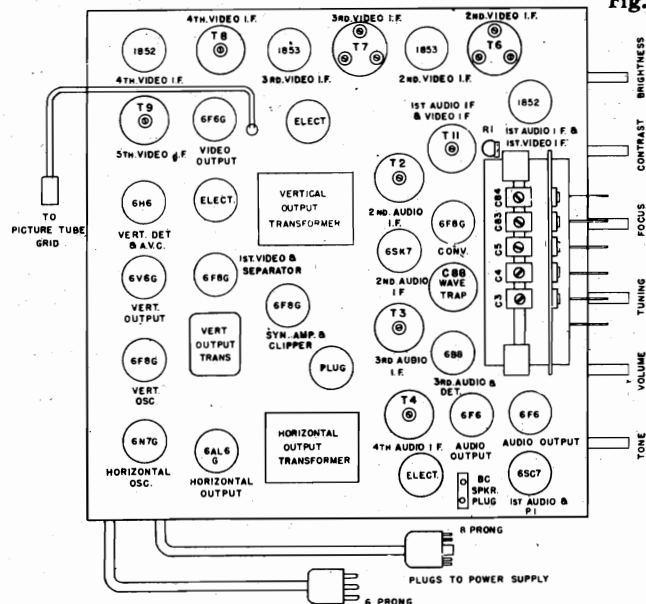


Fig. 7. Television Chassis Trimmer Location Models HM-225 and HM-226-7A

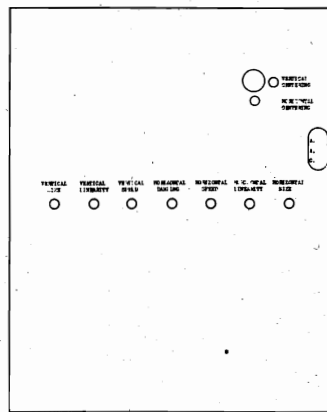


Fig. 4. Rear Control Location Model HM-226-7A

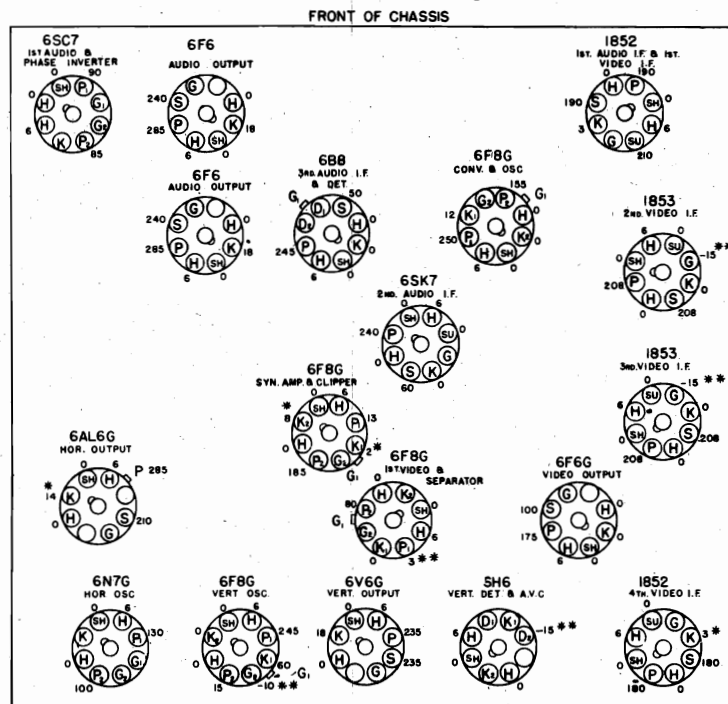


Fig. 9. Television Socket Voltages

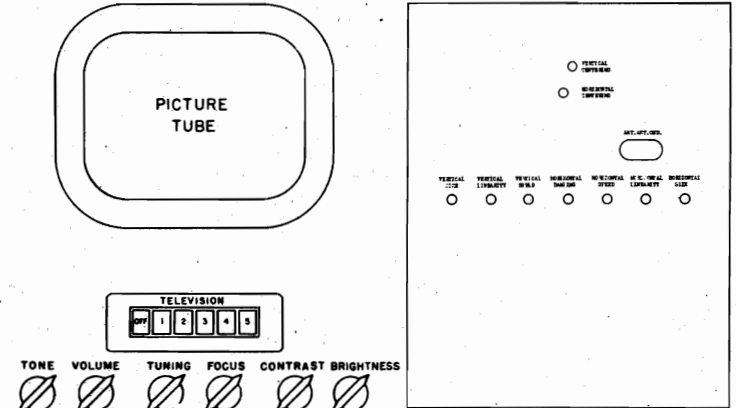


Fig. 3. Rear Control Location Model HM-225

Fig. 1. Front Control Location Model HM-225

Picture Size

Model	HM-225	HM-226-7A
Height	5 3/4 inches	7 1/2 inches
Width	7 3/4 inches	10 inches

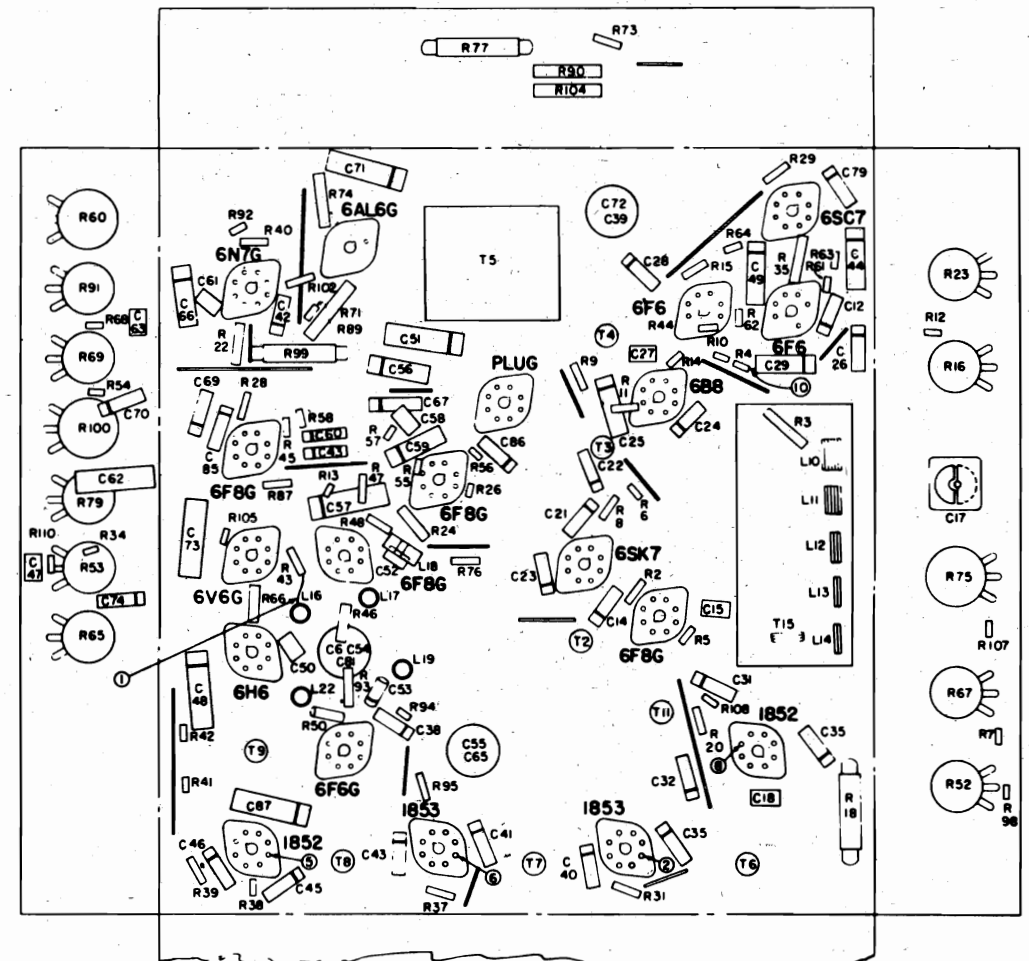


Fig. 5. Television Chassis Parts Layout Models HM-225 and HM-226-7A

GENERAL ELECTRIC CO

MODELS HM225, HM226-7A
Video Alignment

TELEVISION ALIGNMENT PROCEDURE

The problem of aligning the several circuits in a television receiver is much more involved and requires more specialized equipment than the alignment of conventional radio receivers. Fortunately, the use of stable components in carefully engineered circuits of wide-band characteristics reduces to a minimum the necessity for alignment under normal operating conditions. Should alignment become necessary the following equipment will be needed:

(A) For Video I.F. Alignment

- (1) Cathode ray oscilloscope
- (2) Wide-band sweep oscillator capable of sweeping from 7.5 to 15 MC.

- (3) Marker system either provided in sweep oscillator or from separate signal generator for locating 12.75 and 9.75 MC points.

(B) Sound I.F. Alignment

- (1) Cathode ray oscilloscope
- (2) Wide band sweep oscillator capable of sweeping from 7.75 to 8.75 MC.

(C) R.F. Alignment

- (1) Cathode ray oscilloscope.
- (2) Wide-band sweep oscillator capable of sweeping the following bands.
 - (a) 44 to 50
 - (b) 50 to 56
 - (c) 66 to 72
 - (d) 78 to 84
 - (e) 84 to 90

VIDEO I. F. ALIGNMENT

Input Freq.	Point of Input	Adjustments	Comments
1.			Connect vertical input cable of cathode ray oscilloscope across resistor R-43 of 6H6 video detector. See Fig. 5, arrow one.
2. 7.5-15MC Sweep	Control grid of 1853 (2nd video I.F.)		Connect low output tap of video I.F. sweep oscillator to control grid of 1853 (2nd video I.F.). See Fig. 5, arrow two. Connect ground lead to chassis. Turn contrast control (R-67) to about half of maximum or to a point which gives satisfactory vertical deflection without overloading. Set horizontal centering and gain controls on oscilloscope to give suitable horizontal deflection. Adjust sweep phase to give curve similar to Fig. 8, curve 3.

NOTE: If sweep oscillator has marker points internally supplied, steps 3 and 4 may be omitted.

3. Same as in No. 2 plus 12.75 MC	Same as in No. 2		Superimpose an accurately calibrated 12.75 MC signal in parallel with sweep signal. Signal will appear on sweep curve in oscilloscope as a wiggle, the center of which is a thin black line. With a pen or crayon mark this point on the screen of the oscilloscope. (NOTE: Hereafter the horizontal controls on the oscilloscope must not be touched.)
4. Same as in No. 2 plus 9.75 MC	Same as in No. 2		Superimpose an accurately calibrated 9.75 MC signal in parallel with sweep signal. Mark screen at point where signal appears on curve as in No. 3 above.
5. 7.5-15 MC Sweep	Control grid of 1852 (4th video I.F.)	Iron cores of detector transformer T-9	Connect high tap of video I.F. sweep oscillator to control grid of 1852 (4th video I.F.) See Fig. 5, arrow five. (Do not touch horizontal controls of oscilloscope.) Turn sweep phase to give as near a single curve as possible. Adjust iron cores of T-9 until curve appears similar to Fig. 8, curve 1, with relatively flat top, 12.75 MC mark half-way down one side and 9.75 MC mark at corner of other side. These conditions plus maximum amplitude insure correct alignment.
6. 7.5-15 MC Sweep	Control grid of 1853 (3rd video I.F.)	Iron cores of 4th video transformer T-8.	Connect low tap of video I.F. sweep oscillator to control grid of 1853 (3rd video I.F.). See Fig. 5, arrow six. Adjust iron cores for maximum gain, flatness and proper centering between markers as described in step No. 5 and illustrated in Fig. 8, curve 2.
7. 7.5-15 MC Sweep	Control grid of 1853 (2nd video I.F.)	Iron cores of 3rd video transformer T-7.	Connect low tap to grid. See Fig. 5, arrow two. Adjust primary and secondary iron cores for maximum gain, flatness and proper centering. Adjust series iron core for sharp cut-off on 9.75 MC side of curve. See Fig. 8, curve 3.
8. 7.5-15 MC Sweep	Control grid of 1852 (1st video I.F.)	Iron cores of 2nd video transformer T-6	Connect low tap to grid. See Fig. 5, arrow eight. Adjust primary and secondary iron cores for maximum gain, flatness and proper centering. Adjust series iron core for sharp cut-off on 12.75 MC side of curve. See Fig. 8, curve 4.
9. 7.5-15 MC Sweep	Converter Grid, 6F8G	Iron cores of 1st video transformer T-11	Connect low tap to grid. Adjust iron cores for maximum gain flatness and proper centering.
10. 14.25 MC	Converter Grid, 6F8G	Series iron core of 2nd video transformer T-6	To check alignment of 14.25 MC trap proceed as follows: Connect low tap to grid. Reduce horizontal gain of oscilloscope to minimum. Adjust iron core for minimum line length.
11. 8.25 MC	Converter Grid, 6F8G	Series iron core of 3rd video transformer T-7	To check alignment of 8.25 MC trap proceed as follows: Connect low tap to grid. Reduce horizontal gain of oscilloscope to minimum. Adjust iron core for minimum line length.

MODELS HM225, HM226-7A
Alignment

GENERAL ELECTRIC CO.

R. F. ALIGNMENT

Signal Input	Point of Input	Adjustments	Comments
1.		Band width adjustment coupling condenser	Turn (C-2) in until tight, then open approximately $\frac{1}{8}$ of a turn.
2. 44 to 50 MC sweep	Antenna terminals	(L-10), (C-3), (C-8)	Depress band No. 1 push button. Set tuning control to mid-rotation. Adjust L-10 until curve is centered between maximum horizontal sweep points. Adjust C-3 and C-8 for maximum amplitude. See Fig. 8, curve 5.
3. 50 to 56 MC sweep	Antenna terminals	(L-11), (C-4), (C-9)	Depress band No. 2 push button. Leave tuning control at mid-rotation point. Adjust L-11 for centering; C-4 and C-9 for maximum amplitude. See Fig. 8, curve 5.
4. 66 to 72 MC sweep	Antenna terminals	(L-12, (C-5), (C-10)	Depress band No. 3 push button. Adjust L-12 for centering; C-5 and C-10 for maximum amplitude. See Fig. 8, curve 5.
5. 78 to 84 MC sweep	Antenna terminals	(L-13) (C-83), (C-19)	Depress band No. 4 push button. Adjust L-13 for centering; C-83 and C-19 for maximum amplitude. See Fig. 8, curve 5.
6. 84 to 90 MC sweep	Antenna terminals	(L-14), (C-84), (C-20)	Depress band No. 5 push button. Adjust L-14 for centering; C-84 and C-20 for maximum amplitude. See Fig. 8, curve 5.

WAVE TRAP ALIGNMENT

Signal Input	Point of Input	Adjustments	Comments
1. 11.75 MC	Antenna terminals	Wave trap trimmer, C-88	Adjust for maximum dip in oscilloscope curve.

AUDIO I. F. ALIGNMENT

Input Freq.	Point of Input	Adjustments	Comments
1.			Connect vertical input cable of cathode ray oscilloscope between junction of R-4 and C-29 and chassis. See Fig. 5, arrow ten.
2. 7.75 to 8.75 MC sweep	Control grid of 6B8	Iron cores of 4th audio I.F. transformer T-4	Align for maximum amplitude. See Fig. 8, curve 6.
3. 7.75 to 8.75	Control grid of 6SK7	Iron cores of 3rd audio I.F. transformer T-3	Align for maximum amplitude. See Fig. 8, curve 6.
4. 7.75 to 8.75	Converter grid of 6F8G	Iron cores of 2nd audio I.F. transformer T-2	Align for maximum amplitude. See Fig. 8, curve 7.

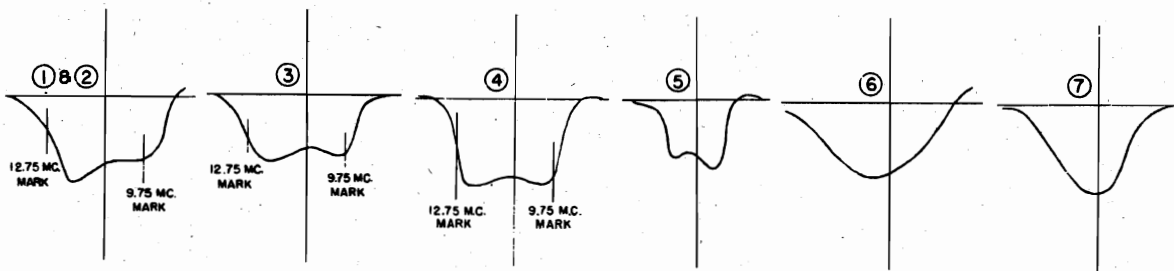


Fig. 8. Television Alignment Curves

GENERAL ELECTRIC CO.

MODELS HM225, HM226-7A
Parts List

Stock No.	Description	List Price	Stock No.	Description	List Price
Television Chassis Parts Common to Radio					
*RB-008	BOARD—Terminal board (2 lug)	\$0.10	*RQ-1259	RESISTOR—1000 ohms 1/2 W. carbon (R-1, 7, 56, 73) (Pkg. 5)	\$0.70
*RB-013	BOARD—Terminal board (2 lug)	.10	*RQ-1263	RESISTOR—1500 ohms 1/2 W. carbon (R-19, 33) (Pkg. 5)	.70
*RB-023	BOARD—Terminal board (4 lug)	.10	*RQ-1267	RESISTOR—2200 ohms 1/2 W. carbon (R-2, 9, 15, 17, 20, 25, 31, 36, 37, 39) (Pkg. 5)	.70
*RB-058	BOARD—Ant. gnd. terminal board	.10	*RQ-1269	RESISTOR—2700 ohms 1/2 W. carbon (R-21, 27) (Pkg. 5)	.70
*RB-060	BOARD—Terminal board (8 lug)	.10	*RQ-1271	RESISTOR—3300 ohms 1/2 W. carbon (R-30, 43) (Pkg. 5)	.70
*RB-096	BOARD—Terminal board (3 lug)	.10	*RQ-1275	RESISTOR—4700 ohms 1/2 W. carbon (R-48) (Pkg. 5)	.70
*RB-621	BEZEL—Pilot light bezel	.20	*RQ-1279	RESISTOR—6800 ohms 1/2 W. carbon (R-32, 96) (Pkg. 5)	.70
RB-4026	BOARD—Terminal board (2 lugs and 2 anchor lugs)	.05	*RQ-1283	RESISTOR—10,000 ohms 1/2 W. carbon (R-26, 42, 47, 58, 98, 107) (Pkg. 5)	.70
RC-007	CAPACITOR—.001 mfd. 1500 V. paper (C-32)	.15	*RQ-1293	RESISTOR—27,000 ohms 1/2 W. carbon (R-5, 41) (Pkg. 5)	.70
*RC-011	CAPACITOR—.002 mfd. 600 V. paper (C-60)	.25	*RQ-1299	RESISTOR—47,000 ohms 1/2 W. carbon (R-4, 12, 28, 54) (Pkg. 5)	.70
*RC-023	CAPACITOR—.005 mfd. 600 V. paper (C-12, 14, 21, 22, 23, 24, 26, 28, 31, 32, 35, 37, 38, 40, 41, 43, 45, 78)	.25	*RQ-1307	RESISTOR—100,000 ohms 1/2 W. carbon (R-8, 14, 102) (Pkg. 5)	.70
*RC-039	CAPACITOR—.01 mfd. 600 V. paper (C-74, 85, 86)	.25	*RQ-1313	RESISTOR—100,000 ohms 1/2 W. carbon (R-13) (Pkg. 5)	.70
*RC-048	CAPACITOR—.02 mfd. 600 V. paper (C-34, 67, 69, 70)	.30	*RQ-1315	RESISTOR—220,000 ohms 1/2 W. carbon (R-11, 44, 61, 62, 63, 64, 68, 78, 87) (Pkg. 5)	.70
RC-090	CAPACITOR—.04 mfd. 600 V. paper (C-56)	.30	*RQ-1323	RESISTOR—470,000 ohms 1/2 W. carbon (R-49, 72, 92, 105) (Pkg. 5)	.70
*RC-092	CAPACITOR—.05 mfd. 600 V. paper (C-29, 44, 49, 53, 59, 66)	.30	*RQ-1331	RESISTOR—1.0 megohm 1/2 W. carbon (R-6, 10, 34, 45, 55) (Pkg. 5)	.70
*RC-096	CAPACITOR—.01 mfd. 200 V. paper (C-25)	.30	*RQ-1339	RESISTOR—2.2 megohms 1/2 W. carbon (R-57, 95) (Pkg. 5)	.70
*RC-123	CAPACITOR—.01 mfd. 400 V. paper (C-51, 57)	.35	*RQ-1355	RESISTOR—10 megohms 1/2 W. carbon (R-94) (Pkg. 5)	.70
*RC-147	CAPACITOR—.25 mfd. 400 V. paper (C-87)	.20	RQ-1457	RESISTOR—820 ohms 1 W. carbon (R-66)	.10
*RC-156	CAPACITOR—.03 mfd. 100 V. paper (C-4, 71, 73)	.45	*RQ-1483	RESISTOR—10,000 ohms 1 W. carbon (R-3, 24, 74)	.10
*RC-202	CAPACITOR—.4 mmf. mica L.P.F. (C-16)	.25	*RQ-1491	RESISTOR—22,000 ohms 1 W. carbon (R-97)	.20
*RC-226	CAPACITOR—10 mmf. mica (C-50)	.25	*RQ-1497	RESISTOR—39,000 ohms 1 W. carbon (R-93)	.20
RC-233	CAPACITOR—22 mmf. mica (C-52)	.25	RQ-1510	RESISTOR—100,000 ohms 1 W. carbon (R-103)	.10
RC-241	CAPACITOR—33 mmf. mica L.P.F. (C-15, 36)	.20	RQ-1530	RESISTOR—2.2 megohms 1 W. carbon (R-22, 81, 82, 83, 84, 85, 86)	.10
*RC-242	CAPACITOR—150 mmf. mica (C-27, 47)	.25	*RS-217	SOCKET—879—2 X 2 tube socket (Pkg. 5)	.50
RC-243	CAPACITOR—150 mmf. mica L.P.F. (C-18, 58)	.15	RS-252	SOCKET—Octal tube socket	.15
RC-251	CAPACITOR—220 mmf. mica L.P.F. (C-63)	.10	RS-257	SOCKET—Electrolytic mounting socket	.05
RC-269	CAPACITOR—330 mmf. mica L.P.F. (C-30, 32)	.20	RS-267	SOCKET—Pilot light socket	.30
RC-293	CAPACITOR—470 mmf. mica (C-61)	.30	RS-1023	SPEAKER—12 inch P.M. Speaker	9.10
RC-314	CAPACITOR—47 mmf. mica L.P.F. (C-1, 13)	.20	RT-954	TERMINAL—Speaker lead contact terminal (Pkg. 10)	.10
RC-316	CAPACITOR—56 mmf. mica L.P.F. (C-33)	.10	*RW-101	WASHER—Felt washer for control knob (Pkg. 10)	.95
RC-318	CAPACITOR—82 mmf. mica L.P.F. (C-7, 11)	.15	RW-112	WASHER—1 1/2 tuning shaft tension washer (Pkg. 10)	.10
*RC-429	CAPACITOR—30 mfd. 450 V. wet electrolytic (C-64, 68, 75, 76, 80)	1.35	*RX-030	ASSEMBLY—Speaker mounting assembly	.10
RC-698	CAPACITOR—Coupling padder (C-2)	.40	RX-063	ASSEMBLY—Electrolytic mounting assembly (washers and pal nuts)	.20
RC-1995	CLAMP—Ant. transformer clamp (Pkg. 5)	.10			
RC-9016	CONV. ASSEMBLY—12 inch P.M. speaker cone assembly	2.20			
*RG-016	GRID CLIP—6F6G control grid clip (Pkg. 5)	.10			
RK-044	KNOB—Control knob and spring assembly (Pkg. 2)	.40			
*RL-359	CHOKE—Filter choke (L-25)	1.50			
RP-129	BOARD—Speaker plug terminal board (Pkg. 2)	.10			
RO-640	RESISTOR—240 ohms 2 W. carbon = 5% (R-71)	.25			
*RO-643	RESISTOR—270 ohms 2 W. carbon (R-35, 106)	.30			
RO-650	RESISTOR—820 ohms 2 W. carbon (R-50)	.15			
*RO-687	RESISTOR—15,000 ohms 2 W. carbon (R-46)	.35			
RO-694	RESISTOR—33,000 ohms 2 W. carbon (R-90, 104)	.15			
*RO-1215	RESISTOR—15 ohms 1/2 W. carbon (R-29) (Pkg. 5)	.70			
*RO-1241	RESISTOR—180 ohms 1/2 W. carbon (R-38, 108) (Pkg. 5)	.70			
*RO-1247	RESISTOR—330 ohms 1/2 W. carbon (R-89) (Pkg. 5)	.70			
*RO-1251	RESISTOR—470 ohms 1/2 W. carbon (R-40) (Pkg. 5)	.70			

Television Chassis Parts Used in Television Only

RTB-500	KEY—Station selector key	\$0.15	RTO-1005	RESISTOR—150 ohms 7.4 W. wire wound (R-18)	.55
RTB-1502	BACK COVER—Cardboard back cover for model HM-225	.85	RTO-1006	RESISTOR—700 ohms 7.4 W. wire wound (R-77, 99)	.55
RTB-1503	BACK COVER—Cardboard back cover for model HM-226-7A	.95	RTO-1007	RESISTOR—1,500 ohms, 6 W.; 150 ohms, 9 W. wire wound (R-55, 101)	.85
RTB-2001	BUSHING—R.F. coil tuning bushing	.10	RTO-2010	RESISTOR—33 ohms 1 W. wire wound (R-88)	.40
RTB-2500	BRACKET—Right R.F. unit support assembly	.30	RTR-001	RING—Picture tube support ring	.30
RTB-2501	BRACKET—Left R.F. unit support assembly	.30	RTS-100	SOCKET—Power chassis power receptacle	1.00
RTC-1002	TRIMMER STRIP—Front station selector trimmer strip (C-8, 9, 10, 19, 20)	.80	RTS-102	SOCKET—Power fuse socket	.10
RTC-1003	TRIMMER STRIP—Top station selector trimmer strip (C-3, 4, 5, 83, 84)	.85	RTS-103	SOCKET—6 prong connector socket	.15
RTC-2000	CAPACITOR—.06 mfd. 4000 V. paper (C-77, 78)	2.80	RTS-301	SHAFT—R.F. coil tuning core shaft	.15
RTC-3000	CAPACITOR—.20 mfd. 25 V. 40 mfd. 450 V. dry electrolytic (C-39, 72)	1.75	RTS-501	SWITCH—Station selector switch	4.65
RTC-3001	CAPACITOR—.40 mfd. 25 V. dry electrolytic (C-62)	.60	RTS-702	STUD—Focus coil adjustment stud	.15
RTC-3002	CAPACITOR—10 mfd. 450 V., 5 mfd. 450 V., 20 mfd. 450 V. dry electrolytic (C-6, 54, 55, 65, 81)	1.80	RTS-703	SLIDE—Picture tube rubber sleeve	.20
RTC-5005	CONTROL—100,000 ohms horizontal speed control (R-69)	.60	RTS-704	SCREW—Thumb screw for mounting picture tube bracket (Pkg. 2)	.10
RTC-5007	CONTROL—2.0 megohms vertical linearity or size control (R-53, 65)	.75	RTC-6000	CARD—Station No. 1 tab card (Pkg. 10)	\$0.05
RTC-5009	CONTROL—500,000 ohms vertical speed control (R-75)	.60	*RTC-6001	CARD—Station No. 2 tab card (Pkg. 10)	.05
RTC-5011	CONTROL—10,000 ohms brightness or contrast control (R-52, 67)	.70	RTC-6002	CARD—Station No. 3 tab card (Pkg. 10)	.05
RTC-5012	CONTROL—200 ohms 2 W. focus control (R-75)	1.00	RTC-6003	CARD—Station No. 4 tab card (Pkg. 10)	.05
RTC-5013	CONTROL—1000 ohms horizontal linearity control (R-91)	.70	RTC-6004	CARD—Station No. 5 tab card (Pkg. 10)	.05
RTC-5014	CONTROL—.05 megohm volume or tone control (R-16, 23)	.60	RTC-6005	CARD—Station "Off" tab card (Pkg. 10)	.05
RTC-5015	CONTROL—Tuning control (C-17)	2.10	RTC-7000	CORD—Power cord assembly	1.80
RTC-5025	CONTROL—1000 ohm horizontal size control (R-60)	.75	RTC-7002	CABLE—Kinescope cable assembly on power chassis	1.25
RTL-1003	COIL—RF coil band No. 1 (L-5)	\$0.30	RTC-7003	CABLE—Interconnecting power cable assembly (first hole from rear on right side of receiver chassis)	1.00
RTL-1004	COIL—RF coil band No. 2 (L-6)	.30	RTC-7004	CABLE—Interconnecting power cable assembly (second hole from rear on right side of receiver chassis)	1.00
RTL-1005	COIL—RF coil band No. 3 (L-7)	.30	RTC-8002	CLAMP—Picture tube clamp	.20
RTL-1006	COIL—RF coil band No. 4 (L-8)	.30	RTC-8003	CLAMP—Deflection yoke clamp	.20
RTL-1007	COIL—RF coil band No. 5 (L-9)	.30	RTC-8004	CLAMP—Dry electrolytic mounting clamp (.06 mfd. 4,000 V.)	.20
RTL-2002	CONV.—Converter-oscillator plate coil (1 1/2 turn) (T-15)	.30	RTC-8005	CUSHION—9 inch picture tube cushion	2.10
RTL-2003	COIL—Converter-oscillator grid coil (1 turn) (T-15)	.30	RTC-8006	CUSHION—12 inch picture tube cushion	2.40
RTL-3003	COIL—Oscillator tuning coil band No. 1 (L-10)	.30	RTE-101	ESCUTCHEON—Television station selector escutcheon	.35
RTL-3004	COIL—Oscillator tuning coil band No. 2 (L-11)	.30	RTG-101	GRID CLIP—6AL6G control grid clip	2.00
RTL-3005	COIL—Oscillator tuning coil band No. 3 (L-12)	.30	RTG-102	GRID CAP—High voltage rectifier grid cap	.05
RTL-3006	COIL—Oscillator tuning coil band No. 4 (L-13)	.30	RTG-202	GROMMET—Receiver chassis grommets (1/4 inch dia. black)	.05
RTL-3007	COIL—Oscillator tuning coil band No. 5 (L-14)	.30	RTG-203	GROMMET—Power chassis grommet (1 inch dia.)	.05
RTL-4004	CHOKE—Video choke (L-19)	.75	RTG-300	GUIDE—Screwdriver guide on focus coil assembly	.05
RTL-4005	CHOKE—Video choke (L-22)	.75	RTI-001	INSULATOR—High voltage rectifier socket mounting board	.90
RTL-4006	CHOKE—Video cathode choke (L-18)	.95	RTI-002	INSULATOR—Television station trimmer strip mounting insulator board	.05
RTL-4007	CHOKE—Video diode choke (L-16, 17)	.75	RTI-003	INSULATOR—Stand off insulator	.05
RTL-5500	COIL—Focusing coil (L-24)	5.10	RTS-705	SHIELD—Back cover tube projection shield for model HM-226-7A	\$0.40
RTL-6000	YOKE—Deflection yoke (L-23)	12.00	RTS-800	SPRING—Picture tube support adjustment spring (Pkg. 5)	.10
RTN-001	NUT—Pal nut for all controls (Pkg. 5)	.10	RTT-0220	TRANSFORMER—High voltage power transformer (T-14)	17.70
RTP-001	PLUG—Female single slot plug on television chassis	.20	RTT-0221	TRANSFORMER—Low voltage power transformer (T-13)	29.95
RTP-002	PLUG—Male plug on deflection yoke and focus cable	.40	RTT-2000	TRANSFORMER—Antenna transformer (T-1)	1.00
RTQ-1003	RESISTOR—400 ohms damping (R-100)	1.00			
RTQ-1004	RESISTOR—400 ohms 17.9 W. wire wound (R-70)	.85			

MODELS HM225, HM226-7A
Circuit Data
GENERAL ELECTRIC CO.
Parts list continued.

RTT-3001	TRANSFORMER—1st video I.F. transformer (T-1)	4.15
RTT-3501	TRANSFORMER—2nd video I.F. transformer (T-6)	6.70
RTT-4001	TRANSFORMER—3rd video I.F. transformer (T-7)	6.70
RTT-4501	TRANSFORMER—4th video I.F. transformer (T-8)	4.15
RTT-5001	TRANSFORMER—5th video I.F. transformer (T-9)	4.15
RTT-6500	TRANSFORMER—Horizontal output transformer (T-12)	15.40
RTT-6750	TRANSFORMER—Vertical output transformer (T-13)	6.00
RTT-7001	TRANSFORMER—1st audio I.F. transformer (T-2)	4.15
RTT-7501	TRANSFORMER—2nd audio I.F. transformer (T-3)	4.15
RTT-8001	TRANSFORMER—3rd audio I.F. transformer (T-4)	4.15
RTT-9000	TRANSFORMER—Vertical oscillator transformer (T-10)	2.80
RTT-9500	TRANSFORMER—Audio output transformer (T-5)	3.25
RTW-501	WINDOW—Station letter window (Pkg. 5)	.05
RTW-503	WINDOW—Safety glass window for Model HM-225	4.30
RTW-504	WINDOW—Safety glass window for Model HM-226-7A	3.50
RTX-1001	ASSEMBLY—Wave trap assembly (L-1, 2, 3, 4, C-1, 7, 11, 13)	.80
RTX-1003	ASSEMBLY—Wave trap assembly (L-15, C-88)	.20
RTX-2000	ASSEMBLY—Chassis mounting assembly	.20

* Used on previous radio receivers.

(Prices Subject to Change without Notice)

CAUTIONARY INSTRUCTIONS

All adjustments not accessible with the back cover in place can be made without energizing the high-voltage circuits.

Servicing of the high-voltage circuits can be satisfactorily performed with the power-cord plug removed from any power supply outlet. A resistance check of the circuit components will indicate any trouble existing. **HIGH VOLTAGES SHOULD NEVER BE MEASURED.**

The "picture tube" is highly evacuated and is consequently subject to a very great air pressure. If it is broken, glass fragments will be violently expelled. Handle with care, using safety goggles and gloves.

The large end of the "picture tube"—particularly that part at the rim of the viewing surface—must not be struck, scratched or subjected to more than moderate pressure. **DO NOT FORCE THE SOCKET ONTO THE TUBE OR STRAIN ANY EXTERNAL CONNECTIONS.** If it fails to slip into place smoothly, investigate and remove the cause of the trouble.

Extremely high voltages (4000 volts or more) are used in the operation of this receiver; therefore, every precaution must be exercised to insure safety to the service engineer and to the customer.

The back cover, while in place, protects the user and should never be removed except by a qualified television service engineer.

The power-cord plug should not be inserted in a power supply outlet until a good, solid ground connection has been properly made to the receiver chassis.

For safety, the following operations must be performed with power plug disconnected before working on the receiver with the back cover removed:

1. Remove 879/2X2 tube from socket.
2. Detach top cap lead of 879/2X2 tube and insulate the contact end of this cap lead.
3. Ground the receiver chassis.

TELEVISION RECEIVER CIRCUITS

The television receiver circuits are divided into the following sections:

1. R.F. Unit
2. Converter-Oscillator and Amplifier
3. Audio Unit
4. Video Unit
5. Sync Pulse Clipper—Amplifier
6. Horizontal Oscillator—Output
7. Vertical Oscillator—Output
8. Low Voltage Rectifier
9. High Voltage Rectifier

R. F. Unit

This unit, comprising all circuits between the antenna terminal posts and the converter grid, consists of a high pass

filter input, a series tuned antenna coil primary, a shunt capacity coupled secondary (C-2) and a video I.F. wave trap (C-88, L-15). The wave trap is broadly tuned at 11.75 M.C. to prevent I.F. interference. Any one of the five tuned circuits for each of the five television transmission bands can be connected into the secondary circuit by pressing the appropriate button. The secondary circuit trimmers when properly tuned give a broad, flat response curve.

Converter-Oscillator and Amplifier

A plate-tuned oscillator is used with vernier tuning permitted from the front control panel through trimmer C-17. The resultant video I.F. signal of 12.75 M.C. and the audio I.F. signal of 8.25 M.C. developed in the converter-oscillator tube circuit is coupled through transformer T-11 to the 1852 amplifier tube.

Audio Unit

The audio unit is a conventional-type superheterodyne sound receiver with the I.F. stages tuned to 8.25 M.C. The audio I.F. signal is taken off through the suppressor of the 1st video I.F. tube.

Video Unit

This unit includes all the video I.F. amplifier stages, the video detector, two stages of video amplification and the picture tube input. Three wave traps are provided in this unit; one at T-6 for rejecting the audio I.F. of the adjacent television band, one at T-7 for rejecting the audio I.F. of the band concerned, and one in the cathode circuit of the 1st video, 6F8G, comprising L-18 and C-52, for removing the 12.75 M.C. video I.F. from the detected signal amplifier stages. A sensitivity control, known as contrast control, (R-67), is provided in the AVC circuits of the 6H6 video detector for varying the grid bias on the 2nd and 3rd video I.F. tubes.

D.C. reinsertion (automatic background control) is accomplished in the 2nd-video 6F6G tube circuit by using part of the varying screen voltage developed across R-93 to control the picture tube grid voltage. A high impedance voltage divider, R-94 and R-95, is used and the coupling condenser, C-38, is made small to prevent low frequency variations in the plate supply from getting to the picture tube grid.

Sync-pulse Clipper—Amplifier

Sync-pulses are taken off the plate of the right section of the 1st video and clipper tube, 6F8G. The video signals are separated by tube cut-off since the plate voltage is only about 10 volts. The sync-pulses are then amplified in the sync amplifier tube and coupled through a high-pass filter to the grid of the horizontal oscillator.

Horizontal Oscillator—Output

The horizontal oscillator is a multi-vibrator with speed controlled by varying the small positive grid voltage through R-69. The horizontal pulses are passed through proper wave shaping and amplifier circuits to the horizontal deflection coils of the picture tube. Horizontal linearity is adjustable by varying R-91. Horizontal sweep size is controlled by R-60 in the cathode circuit of the 6AL6G. The degeneration resistor R-22 and series circuit across the secondary of the 6AL6G output transformer damp the output transient. Damping is adjustable through R-100.

Vertical Oscillator—Output

Vertical sync-pulses are separated from the horizontal pulses in the vertical clipper right section of 6F8G and are fed to the vertical oscillator. This oscillator is of the blocking type, transformer coupled. The generated sawtooth wave across C-70 is shaped by the vertical linearity control, R-53. The speed of the oscillator is controlled by R-79 and the length of sweep (size) is adjustable through R-65. The output is amplified and coupled to the vertical deflection coils of the picture tube.

Low-voltage Rectifier

Two 5U4G rectifiers are necessary to supply plate current which is over 300 ma. A combination of choke and resistance filters is used so that the audio and oscillator plate supplies will be free from video and sweep signals.

High-voltage Rectifier

The high voltage rectifier uses a resistance filter. The bleeder is connected across the filter input to reduce ripple. R-103 is inserted in the plate lead for protection.

GENERAL ELECTRIC CO.

MODEL HM226-7A
Radio Receiver Schematic
Socket, Voltage, Trimmers

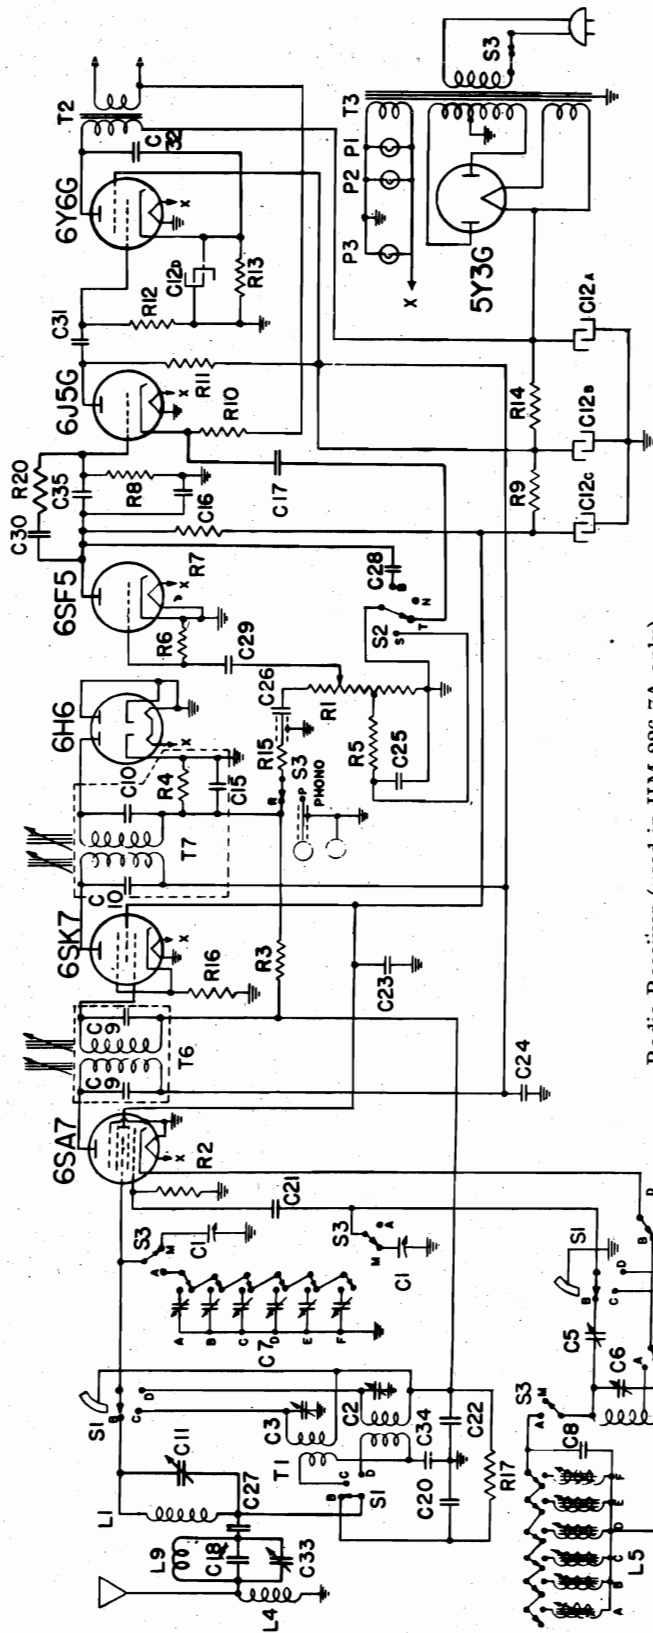


Fig. 12. Radio Schematic Diagram
(Model HM-226-7A only)

Radio Receiver (used in HM-226-7A only)
Band "B".....540-1600 K.C.
Band "C".....2.1-6.5 M.C.
Band "D".....6.25-22.5 M.C.

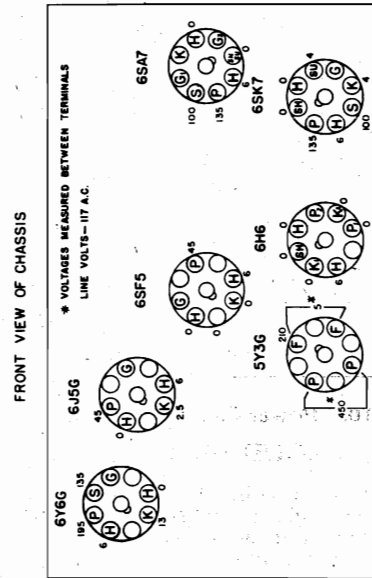


Fig. 13. Radio Chassis Socket Voltages
VOLTAGES MEASURED BETWEEN SOCKET
TERMINALS AND CHASSIS.
Band "B." No signal input. Max. volume.

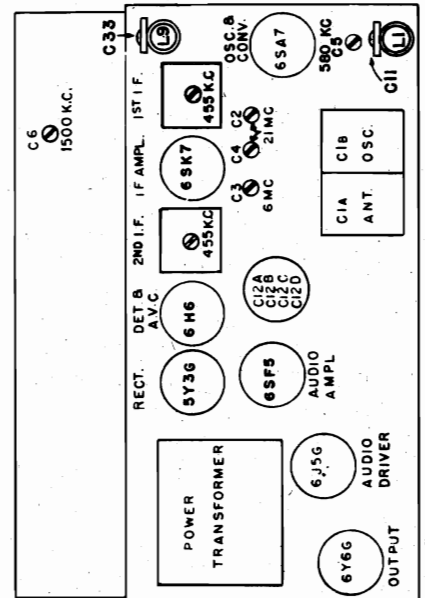


Fig. 11. Radio Chassis Trimmer Location
(Model HM-226-7A)

- Radio (used in HM-226-7A only)..... GE-6SA7
 - Converter-Oscillator..... GE-6SK7
 - I.F. Amplifier..... GE-6H6
 - Detector and AVC..... GE-6SF5
 - 1st Audio Amplifier..... GE-6J5G
 - 2nd Audio Amplifier..... GE-6Y6G
 - Audio Output..... GE-5Y3C
 - Rectifier..... (3) MAZDA No. 44
 - Dial Lamps.....
- Loud-speaker—"Abluco" Magnetic Dynamic**
- Type of Cone..... Curvilinear
 - Cone Diameter..... 12 inches
 - Voice Coil Impedance (400 cycles)..... 3.5 ohms

MODEL HM226-7A
Radio Chassis Wiring
Phono>Data, Power Chassis

GENERAL ELECTRIC CO.

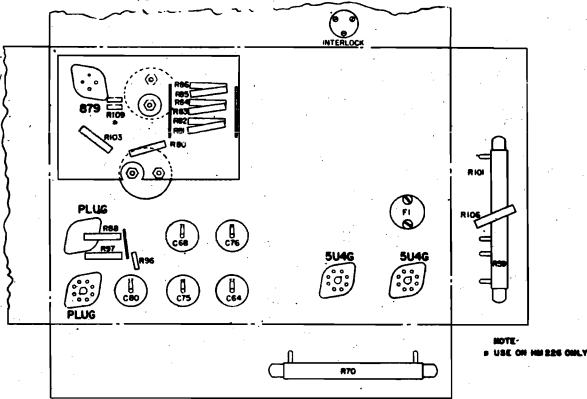


Fig. 10. Power Chassis Parts Layout
LOUD-SPEAKER

To center the voice coil, loosen the two screws which clamp the speaker spider in position. These two screws are available from the rear of the speaker. Shift the spider around until the voice coil is centered, then tighten the screws in position.

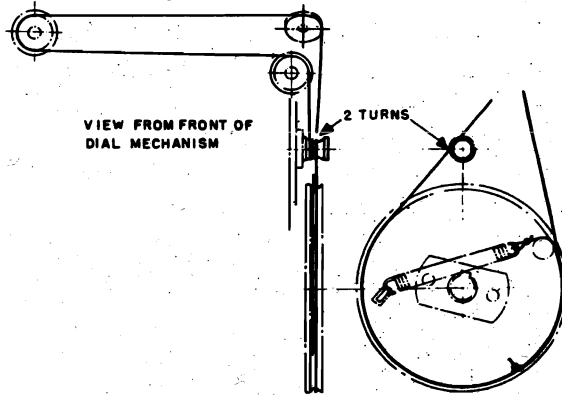


Fig. 14. Dial Drive Stringing Diagram
PHONOGRAPH CONNECTIONS

Model HM-226-7A radio receiver is equipped with a phono-terminal (pin jack) to allow the convenient connection of a record player. General Electric plug, Stock No. RP-145, fits the pin jack.

NOTE—A suitable load consisting of a 100,000 ohm resistor in series with a .01 mfd. capacitor should be connected across the pick-up leads when using a crystal-type unit.

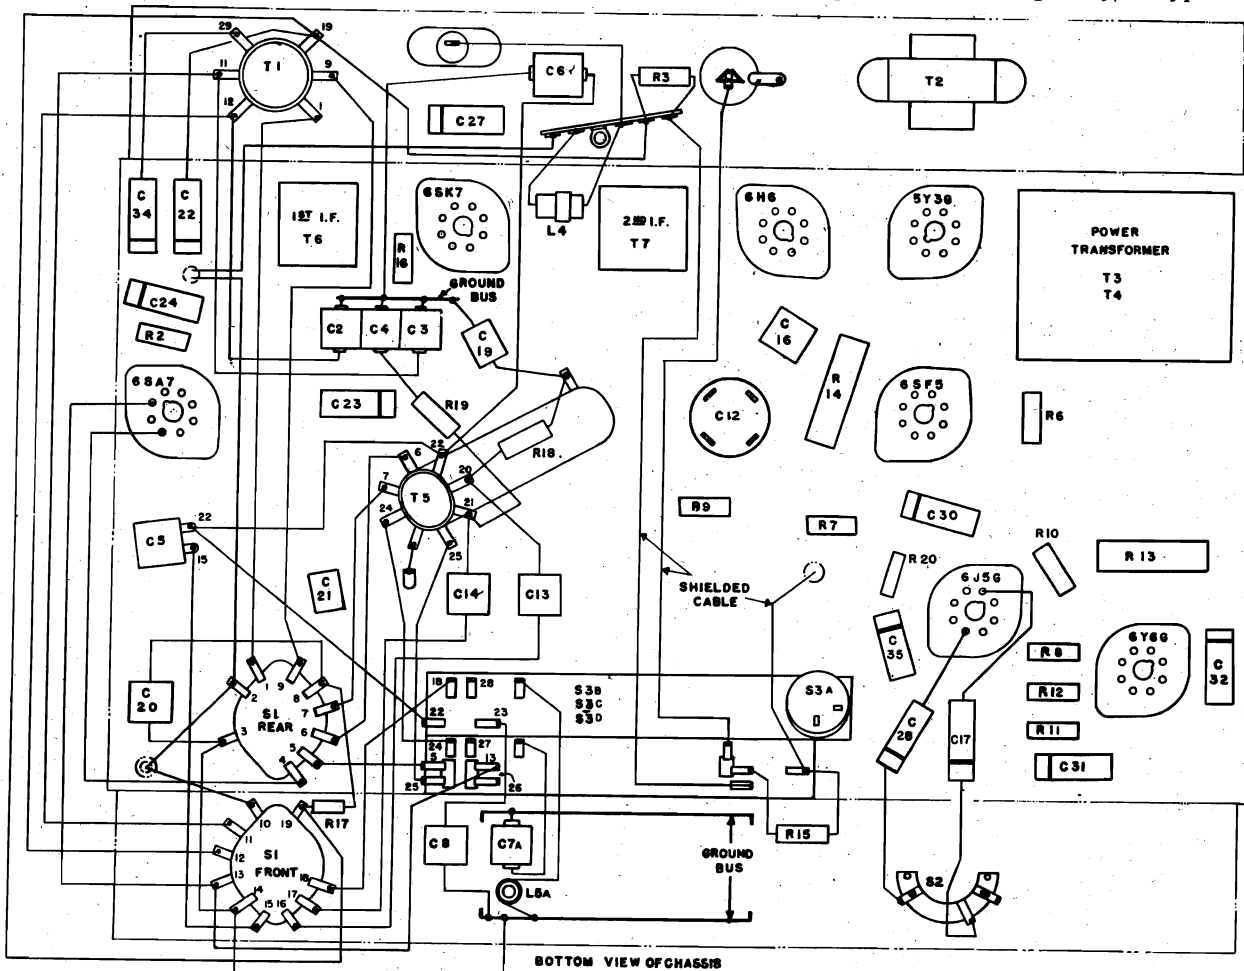


Fig. 15. Radio Chassis Parts Layout
(Model HM-226-7A only)

GENERAL ELECTRIC CO.

MODEL HM226-7A
Radio Alignment
Parts

RADIO ALIGNMENT PROCEDURE

(Model HM-226-7A only)

I. F. ALIGNMENT WITH OSCILLOSCOPE

Band Switch Setting	Input Freq.	Point of Input	Dummy Antenna	Trimmer	Comments
1. Band "B"	455 K.C. Sweep	I.F. Grid	.05 Mfd. or Larger	2nd I.F. Sec. 2nd I.F. Pri. (T-7)	Gang condenser plates closed—"Manual" key depressed—connect audio input of oscilloscope to chassis and to junction of R-3 and R-15. Adjust trimmers in order mentioned for a single symmetrical curve of maximum amplitude.
2. Band "B"	455 K.C. Sweep	Converter Grid	.05 Mfd. or Larger	1st I.F. Sec. 1st I.F. Pri. (T-6)	

I. F. ALIGNMENT WITH OUTPUT METER

1. Band "B"	455 K.C. Sweep	I.F. Grid	.05 Mfd. or Larger	2nd I.F. Sec. 2nd I.F. Pri. (T-7)	Gang condenser plates closed—connect output meter across voice coil—keep input signal low and volume control on as far as possible. Adjust all trimmers for maximum output.
2. Band "B"	455 K.C. Sweep	Converter Grid	.05 Mfd. or Larger	1st I.F. Sec. 1st I.F. Pri. (T-6)	

R. F. ALIGNMENT

1. Band "B"					Close gang plates—adjust pointer to first line at left end of tuning scale. Connect output meter across voice coil—tone control on "Bass" position. The image of any "D" band signal should be heard 910 K.C. below signal input when (C-4) is on proper peak. Example: 18 M.C. image, 17.09 M.C. Peak (C-2) while rocking the gang condenser. Peak for maximum output with a low input signal. Align (C-6) on 1500 K.C. and peak output with (C-11). Align for maximum output with a low input signal, rocking gang condenser. Retrim at 1500 K.C.
2. Band "D"	21 M.C. with Modulation	Antenna Post	I.R.E.	Osc. (C-4) Ant. (C-2)	
3. Band "C"	6 M.C. with Modulation	Antenna Post	I.R.E.	Ant. (C-3)	
4. Band "B"	1500 K.C. with Modulation	Antenna Post	I.R.E.	Osc. (C-6) Ant. (C-11)	
5. Band "B"	580 K.C. with Modulation	Antenna Post	I.R.E.	Osc. Padder (C-5)	
6. Band "B"	1500 K.C. with Modulation	Antenna Post	I.R.E.	Osc. (C-6) Ant. (C-11)	

RADIO CHASSIS PARTS

(Model HM-226-7A Radio)


(Prices Subject to Change without Notice)

*RB-008	BOARD—Terminal board (2 lug)	\$0.10	RK-044	KNOB—Radio control knob (Pkg. 2)	\$0.40
*RB-009	BOARD—Terminal board (1 lug)	.15	RK-204	KEY—Station key	.10
*RB-026	BOARD—Antenna terminal board	.10	RL-083	COIL—C and D band antenna coil (T-1)	.85
*RB-046	BOARD—Terminal board (5 lug)	.15	RL-096	COIL—B band antenna coil (L-1)	.15
*RB-096	BOARD—Terminal board (3 lug)	.10	RL-287	COIL—Oscillator coil (T-5)	1.15
*RB-098	BOARD—Ant. gnd. terminal board	.10	RL-345	CHOKE—Antenna choke (L-4)	.30
RB-625	BUSHING—Tuning control shaft bushing	.10	RL-606	COIL—Wave trap coil (L-9)	.10
RB-1009	BOARD—Phono terminal board	.10	RL-9510	COIL—Station selector coil assembly (L-5)	1.80
*RC-009	CAPACITOR—.001 mfd. 600 V. paper (C-35)	.30	RM-501	MASK—Dial scale mask (Pkg. 10)	.05
RC-016	CAPACITOR—.002 mfd. 600 V. paper (C-28)	.25	RP-127	POINTER—Dial pointer assembly (Pkg. 5)	.25
*RC-023	CAPACITOR—.005 mfd. 600 V. paper (C-26, 30)	.25	*RP-303	PULLEY—Pulley and C clip (Pkg. 2)	.10
*RC-039	CAPACITOR—.01 mfd. 600 V. paper (C-29)	.25	RO-642	RESISTOR—220 ohms 2 W. carbon (R-13)	.20
*RC-048	CAPACITOR—.02 mfd. 600 V. paper (C-17, 25, 31)	.30	RO-670	RESISTOR—3,300 ohms 2 W. carbon (R-14)	.35
*RC-060	CAPACITOR—.03 mfd. 600 V. paper (C-32)	.25	*RQ-1231	RESISTOR—68 ohms 1/2 W. carbon (R-19) (Pkg. 5)	.70
*RC-092	CAPACITOR—.05 mfd. 600 V. paper (C-22, 23, 24, 34)	.30	*RQ-1239	RESISTOR—150 ohms 1/2 W. carbon (R-18) (Pkg. 5)	.70
*RC-096	CAPACITOR—.01 mfd. 200 V. paper (C-27)	.30	*RQ-1251	RESISTOR—470 ohms 1/2 W. carbon (R-16) (Pkg. 5)	.70
*RC-206	CAPACITOR—50 mmf. wax treated mica (C-21)	.35	*RQ-1271	RESISTOR—3,300 ohms 1/2 W. carbon (R-10) (Pkg. 5)	.70
RC-233	CAPACITOR—22 mmf. mica (C-19)	.25	*RQ-1273	RESISTOR—3,900 ohms 1/2 W. carbon (R-9) (Pkg. 5)	.70
*RC-235	CAPACITOR—100 mmf. mica (C-15, 16)	.25	*RQ-1291	RESISTOR—22,000 ohms 1/2 W. carbon (R-2) (Pkg. 5)	.70
RC-307	CAPACITOR—750 mmf. silvered mica (C-8)	.40	*RQ-1299	RESISTOR—47,000 ohms 1/2 W. carbon (R-15, 17) (Pkg. 5)	.70
RC-337	CAPACITOR—1,800 mmf. mica ±5% (C-18)	.25	*RQ-1301	RESISTOR—56,000 ohms 1/2 W. carbon (R-5) (Pkg. 5)	.70
RC-358	CAPACITOR—2,000 mmf. mica ±5% (C-13)	.30	*RQ-1307	RESISTOR—100,000 ohms 1/2 W. carbon (R-11) (Pkg. 5)	.70
RC-394	CAPACITOR—4,700 mmf. mica ±5% (C-20)	.40	*RQ-1315	RESISTOR—220,000 ohms 1/2 W. carbon (R-7) (Pkg. 5)	.70
RC-396	CAPACITOR—5,600 mmf. mica ±5% (C-14)	.45	*RQ-1319	RESISTOR—330,000 ohms 1/2 W. carbon (R-12) (Pkg. 5)	.70
RC-875	CABLE—Power cable	.40	*RQ-1323	RESISTOR—470,000 ohms 1/2 W. carbon (R-4, 20) (Pkg. 5)	.70
RC-1987	CLAMP—Oscillator and antenna coil clamp (Pkg. 2)	.05	*RQ-1331	RESISTOR—1.0 megohm 1/2 W. carbon (R-8) (Pkg. 5)	.70
RC-1989	CUSHION—Condenser cushion (Pkg. 5)	.05	RQ-1339	RESISTOR—2.2 megohms 1/2 W. carbon (R-3) (Pkg. 5)	.70
RC-5130	CAPACITOR—40 mfd. 300 V.; 20 mfd. 300 V.; 20 mfd. 300 V.; 20 mfd. 25 V. dry electrolytic (C-12a, 12b, 12c, 12d)	2.10	*RQ-1365	RESISTOR—15 megohms 1/2 W. carbon (R-6) (Pkg. 5)	.70
RC-6509	CAPACITOR—B band padder (C-5)	.35	*RS-236	SOCKET—Radio dial light socket	.10
RC-6510	CAPACITOR—B band oscillator trimmer (C-6)	.20	RS-252	SOCKET—Octal tube socket	.15
RC-6523	CAPACITOR—B band antenna trimmer (C-11)	.15	RS-253	SOCKET—Electrolytic mounting socket	.10
RC-6524	CAPACITOR—Wave trap trimmer (C-33)	.20	RS-268	SOCKET—Bezel pilot lamp socket	.35
RC-7011	CONDENSER—Tuning condenser (C-1a, 1b)	2.15	*RS-401	SPRING—Drive cord spring (Pkg. 2)	.20
RC-8125	CABLE—Condenser drive cable assembly	.20	RS-924	SHAFT—Tuning control shaft	.10
RC-8141	CABLE—Power cable to radio (Power chassis end)	.20	RT-862	TRIMMER STRIP—Station selector trimmer strip (C-7a, 7b, 7c, 7d, 7e, 7f)	\$1.20
RC-8500	CARD—Station letter cards (1 set)	.80	RT-863	TRIMMER STRIP—D and C antenna trimmers	.45
RC-8505	CARD—Key manual tab card (Pkg. 10)	.05	*RT-952	D oscillator trimmer (C-2, 3, 4)	.05
RC-8507	CARD—Key of tab card (Pkg. 10)	.05	RV-067	TERMINAL—Speaker lead terminal (Pkg. 10)	.05
RC-8512	CARD—Key phono tab card (Pkg. 10)	.05	*RW-101	VOLUME CONTROL—2 megohm volume control (R-1)	.65
RD-135	DIAL—Radio dial	.40	RW-908	WASHER—Knob felt washer (Pkg. 10)	.05
RD-407	DRUM—Condenser drive drum assembly	2.40		WHEEL—Dial tuning volume wheel	.30
RE-204	ESCUTCHEON—Station key escutcheon	.40			
RE-205	ESCUTCHEON—Tuning and volume escutcheon	.40			
RH-006	HAIRPIN COTTER—Tuning drive shaft hairpin cotter (Pkg. 10)	.10			
RS-3022	SWITCH—Station selector switch (S-3)	\$7.60			
RS-3047	SWITCH—Tone control switch (S-2)	.40			
RS-3048	SWITCH—Band change switch (S-1)	1.00			
RT-0520	TRANSFORMER—60 cycle power transformer (T-3)	4.35			
RT-313	TRANSFORMER—1st I.F. transformer (T-6)	1.70			
RT-314	TRANSFORMER—2nd I.F. transformer (T-7)	1.90			
RT-462	TRANSFORMER—Output transformer (T-2)	1.40			

* Used on previous radio receivers.

MODEL H508
Schematic, Socket
Trimmers, Alignment

GENERAL ELECTRIC CO.

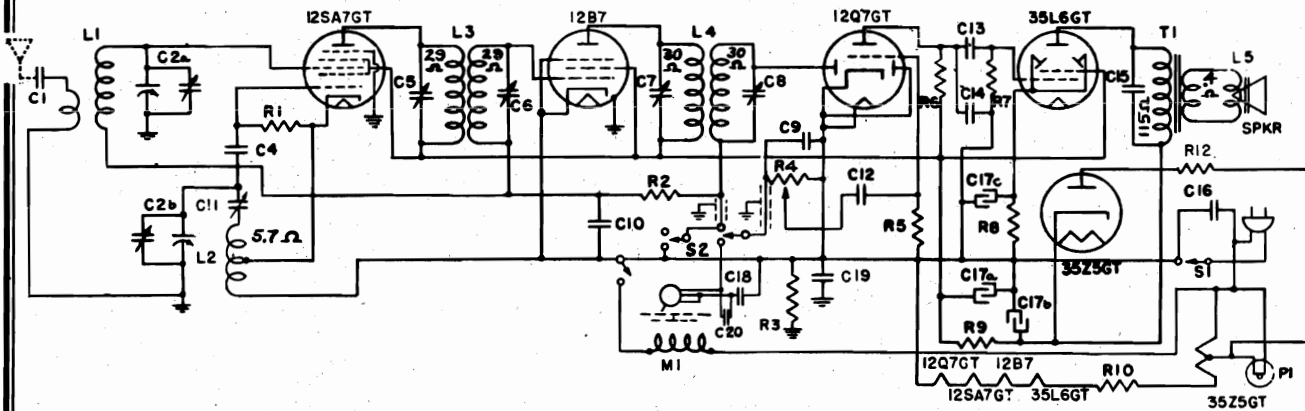

Symbol	Description	Symbol	Description	Symbol	Description
C-1	.002 mfd. paper capacitor	C-17b	40 mfd. 150 V. dry electrolytic	R-4	500,000 ohms volume control
C-2a	Antenna section tuning condenser	C-17c	20 mfd. 25 V. dry electrolytic	R-5	15 megohms carbon resistor
C-2b	Oscillator section tuning condenser	C-18	0.1 mfd. paper capacitor	R-6	470,000 ohms carbon resistor
C-4	47 mmf. mica capacitor	C-19	0.2 mfd. paper capacitor	R-7	470,000 ohms carbon resistor
C-9	470 mmf. mica capacitor	C-20	.001 mfd. paper capacitor	R-8	150 ohms carbon resistor
C-10	.05 mfd. paper capacitor	L-1	Beam-a-Scope	R-9	1200 ohms carbon resistor
C-11	B band padder	L-2	Oscillator coil	R-10	100 ohms wire wound resistor
C-12	.03 mfd. paper capacitor	L-3	1st I.F. transformer	R-12	15 ohms carbon resistor
C-13	.005 mfd. paper capacitor	L-4	2nd I.F. transformer	S-1	Power switch (on Volume Control)
C-14	330 mmf. mica capacitor	P-1	Dial Lamp MAZDA No. 47	S-2	Radio-Phono switch
C-15	.01 mfd. paper capacitor	R-1	33,000 ohms carbon resistor	T-1	Output transformer
C-16	.05 mfd. paper capacitor	R-2	2.2 megohms carbon resistor		
C-17a	30 mfd. 150 V. dry electrolytic	R-3	470,000 ohms carbon resistor		

SERVICE DATA

Over-all Dimensions

Height—10 1/8 inches. Width—15 1/4 inches. Depth—13 1/2 inches.

Tubes

- Converter-Oscillator.....GE-12SA7GT
- I. F. Amplifier.....GE-12B7
- Det., Aud, AVC.....GE-12Q7GT
- Power Output.....GE-35L6GT
- Rectifier.....GE-35Z5GT
- Dial Lamp.....MAZDA No. 47

Tuning Frequency Range.....540-1600 KC

Electrical Specifications

Rating	Power Supply (volts)	Frequency (cycles)	Power Consumption (watts)
A-6	115	60	55
A-5	115	50	55
C-2	115	25	55

Electrical Power Output (115-line volts)

Undistorted.....1.2 watts
 Maximum.....2.0 watts

Loud-speaker—"Alnico" Magnetic Dynamic

Outside Cone Diameter.....4 inches
 Voice Coil Impedance (400 cycles).....3.5 ohms

I.F. Alignment

Connect an output meter across the voice coil. Turn the volume control to maximum. Set test oscillator to 455 KC and keep the oscillator output as low as a readable meter reading will permit.

Apply this signal to the grid of the 12B7 through a .05 mfd. capacitor and align the 2nd I.F. transformer. Repeat the procedure, applying the 455 KC signal to the control grid of the 12SA7GT and aligning the 1st I.F. transformer. Do not remove grid leads from the tubes. Finish alignment by over-all adjustments.

R.F. Alignment

Apply a 1500 KC signal either through a standard I.R.E. dummy to the antenna terminal or through an additional loop connected to the generator output which can be magnetically coupled to the receiver Beam-a-Scope. Align (C-2b) at 1500 KC and peak (C-2a) for maximum output. Change signal to 580 KC and tune receiver to signal. Peak (C-11) on the 580 KC signal by rocking the gang condenser. Retrim at 1500 KC.

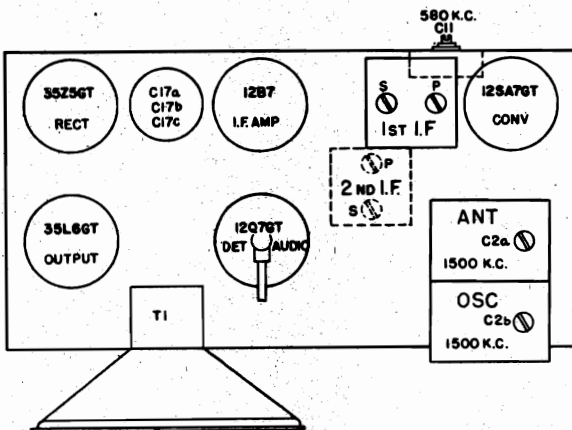


Fig. 2. Trimmer Location


ALIGNMENT PROCEDURE

Alignment Frequencies

I.F.....455 KC R.F.....1500 and 580 KC
 The location of all trimmers is shown in Fig. 2.

GENERAL ELECTRIC CO.

MODEL HB412
Schematic Notes

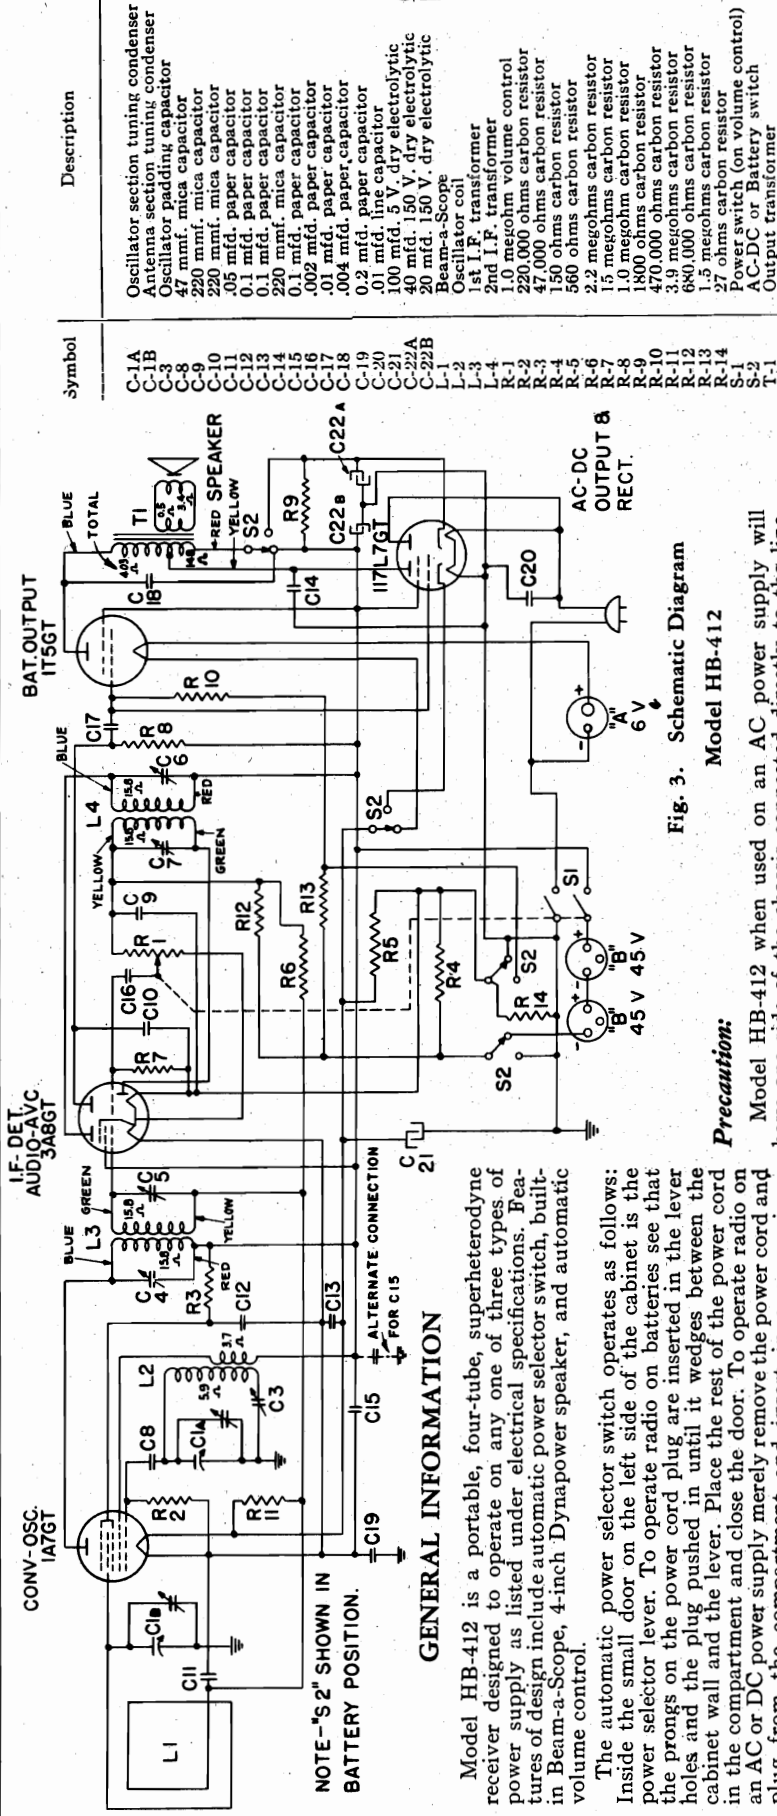

Symbol	Description
C-1A	Oscillator section tuning condenser
C-1B	Antenna section tuning condenser
C-3	Oscillator padding capacitor
C-8	47 mmf. mica capacitor
C-9	220 mmf. mica capacitor
C-10	220 mmf. mica capacitor
C-11	.05 mfd. paper capacitor
C-12	0.1 mfd. paper capacitor
C-13	0.1 mfd. paper capacitor
C-14	220 mmf. mica capacitor
C-15	0.1 mfd. paper capacitor
C-16	.002 mfd. paper capacitor
C-17	.004 mfd. paper capacitor
C-18	0.2 mfd. paper capacitor
C-19	0.1 mfd. line capacitor
C-20	100 mfd. 5 V. dry electrolytic
C-21	40 mfd. 150 V. dry electrolytic
C-22A	20 mfd. 150 V. dry electrolytic
C-22B	Beam-a-Scope
L-1	Oscillator coil
L-2	1st I.F. transformer
L-3	1.0 microhm volume control
L-4	220,000 ohms carbon resistor
R-2	47,000 ohms carbon resistor
R-3	150 ohms carbon resistor
R-4	560 ohms carbon resistor
R-5	2.2 megohms carbon resistor
R-6	15 megohms carbon resistor
R-7	1.0 megohm carbon resistor
R-8	1800 ohms carbon resistor
R-9	470,000 ohms carbon resistor
R-10	3.9 megohms carbon resistor
R-11	680,000 ohms carbon resistor
R-12	1.5 megohms carbon resistor
R-13	27 ohms carbon resistor
R-14	AC-DC
S-1	Power switch (on volume control)
S-2	AC-DC or Battery switch
T-1	Output transformer

Fig. 3. Schematic Diagram
Model HB-412

Precaution:

Model HB-412 when used on an AC power supply will have one side of the chassis connected directly to the line. In order to prevent injury to alignment equipment or shock to the servicemen, use an isolating transformer between the convenience outlet and the receiver power cord.

GENERAL INFORMATION

Model HB-412 is a portable, four-tube, superheterodyne receiver designed to operate on any one of three types of power supply as listed under electrical specifications. Features of design include automatic power selector switch, built-in Beam-a-Scope, 4-inch Dynapower speaker, and automatic volume control.

The automatic power selector switch operates as follows: Inside the small door on the left side of the cabinet is the power selector lever. To operate radio on batteries see that the prongs on the power cord plug are inserted in the lever holes and the plug pushed in until it wedges between the cabinet wall and the lever. Place the rest of the power cord in the compartment and close the door. To operate radio on an AC or DC power supply merely remove the power cord and plug from the compartment and insert in a convenience outlet.

Note: Do not press in on power selector lever while power cord is in convenience outlet.

When operating from a DC source of power, it is necessary to insert the power plug with the proper polarity; otherwise the receiver will fail to function. If any hum is noticed when the receiver is used on AC, reverse the power plug in the receptacle.

When the receiver is operating on batteries it will perform as soon as it is turned on. However, when operating from an AC or DC power supply, sufficient time must be allowed for the tubes to become heated.

Audio power output is obtained from the 1A7GT on battery operation, and from the pentode section of the 117L7GT on AC or DC, 115-volt operation. The driving grids of the two tubes are in parallel. On battery operation the 117L7GT is dead due to no filament voltage, as is the case of the 1A7GT on AC-DC, 115-volt operation. A tapped primary output transformer is used to insure matching to the different load impedances of the two output tubes. If the receiver does not operate on low line voltage check 117L7GT for low plate current since its plate current energizes the 3A8GT and 1A7GT filaments; also check 1A7GT for low emission.

Tubes

- Converter-Oscillator..... GE-1A7GT
- I.F.—Det.—Aud.—AVC..... GE-3A8GT
- Battery Power Output..... GE-1T5GT
- AC-DC Power Output—Rectifier..... GE-117L7GT

SERVICE DATA

Electrical Specifications

- AC or DC Power Supply
110-120 Volts, 25-60 cycles on AC, 25 watts
- Battery Power Supply
6-volt "A" supply, 90-volt "B" supply.

Recommended batteries for long life.

- (a) "A" supply—Eveready No. 747 or equivalent
- (b) "B" supply—two Eveready No. 482 or equivalent

Loud-speaker—"Alnico" Magnetic Dynamic

- Outside Cone Diameter..... 4 inches
- Voice Coil Impedance (400 cycles)..... 3.5 ohms

Tuning Frequency Range..... 550-1600 KC

Intermediate Frequency..... 455 KC

Maximum Power Output

- Battery Operation..... 275 milliwatts
- AC or DC Operation..... 2 watts

MODEL HB412
Voltage, Socket
Trimmers, Alignment

GENERAL ELECTRIC CO.

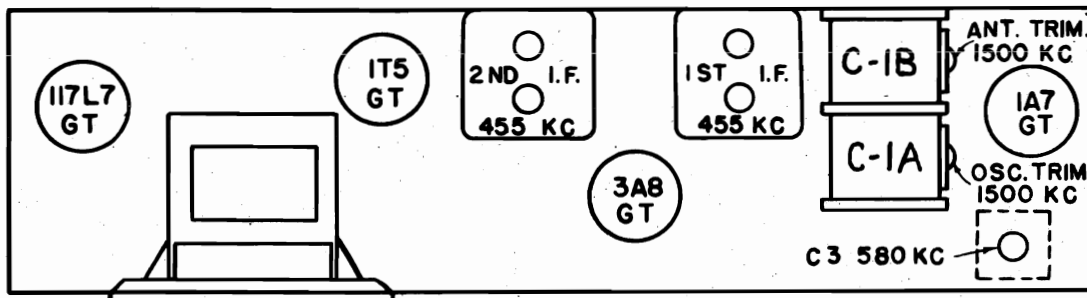


Fig. 1. Trimmer Location

ALIGNMENT PROCEDURE

Alignment Frequencies

I.F.....	455 KC
R.F.....	1500 and 580 KC

The location of all trimmers is shown in Fig. 1.

General Alignment Notes

This receiver must be removed from the carrying case in order to perform the alignment. Special care must be exercised to place the batteries, Beam-a-Scope and chassis in the same relative positions with respect to one another as these components occupied in the case; otherwise, alignment will not be satisfactory.

I.F. Alignment

With batteries, Beam-a-Scope and chassis in position for alignment as mentioned above, and using an isolating transformer if operating from an AC power source (refer to precaution under "General Information"), set up and align as follows: Connect an output meter across the voice coil. Rotate


the volume control to maximum. Set test oscillator to 455 KC and apply signal to the control grid of the 3A8GT tube through a .05 mfd. capacitor. Align the 2nd I.F. transformer trimmers. Next apply signal to the control grid of the 1A7GT tube through the same .05 mfd. capacitor and align the 1st I.F. transformer trimmers. Retouch the 2nd I.F. transformer trimmers while applying signal to the 1A7GT tube. Do not remove the grid leads from the tubes when applying the oscillator signal and keep the test oscillator output as low as a readable meter reading will permit.

R.F. Alignment

Place a one turn coupling loop not closer than six inches from the receiver Beam-a-Scope. Apply a 1500 KC signal to the coupling loop. Set pointer to 1500 KC and align the oscillator trimmer (C-1A). Peak (C-1B) for maximum output. Change test signal to 580 KC and with pointer in region of 580 KC peak (C-3) while rocking the gang condenser. Retrim at 1500 KC.

The Beam-a-Scope leads should be dressed the same after the components are mounted in the cabinet as during alignment.

FRONT OF CHASSIS

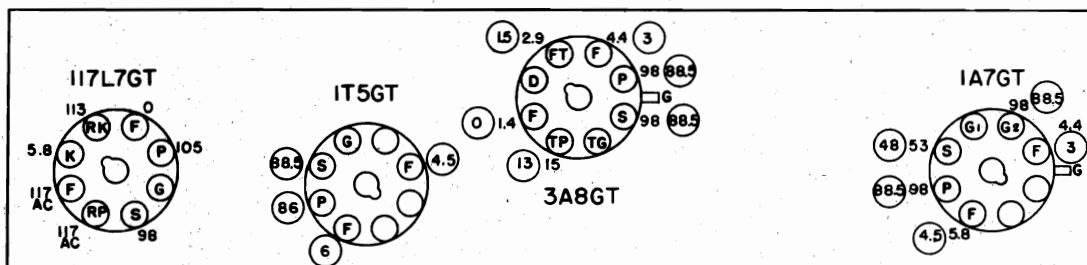

BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED BETWEEN SOCKET TERMINAL AND CHASSIS.
VOLTAGE READINGS ENCIRCLED INDICATE VALUES OBTAINED WHEN OPERATING WITH A 6-VOLT "A" BATTERY AND A 90-VOLT "B" BATTERY.
REMAINING VOLTAGE READINGS OBTAINED WHEN OPERATING ON A 117-VOLT AC POWER SUPPLY.
READINGS GREATER THAN 50 OBTAINED ON 250-VOLT SCALE OF 1000 OHMS PER VOLT METER.

- | | | |
|------------------|----------------------|-----------------------|
| D- DIODE PLATE | G1- OSCILLATOR GRID | RK- RECTIFIER CATHODE |
| F- FILAMENT | G2- OSCILLATOR PLATE | RP- RECTIFIER PLATE |
| FT- FILAMENT TAP | K- CATHODE | S- SCREEN |
| G- CONTROL GRID | P- PLATE | TG- TRIODE GRID |
| | | TP- TRIODE PLATE |

Fig. 2. Socket Voltages

MODELS H500U, H510U(W,X)
 MODEL H520U(W,X)
 Gain, Voltage, Trimmers
 Coils, Socket
 Color Specifications

GENERAL ELECTRIC CO.

Model Color and Material
 H-500U, 510U, 520U Oak—Plastic
 H-500UW, 510UW, 520UW Ivory—Plastic
 H-500UX, 510UX, 520UX Onyx—Plastic

Tuning Frequency Range

Model	H-500U, 510U (W and X Models Included)	H-520U (W and X Models Included)
Range	540-1800 KC	540-1600 KC

Electrical Power Output (115-line volts)

Undistorted.....0.9
 Maximum.....1.8

Loud-speaker—"Alnico" Magnetic Dynamic

Outside Cone Diameter..... 4 inches
 Voice Coil Impedance (400 cycles)... 3.5 ohms

Electrical Specifications

Power Supply (Volts)	Frequency (Cycles on AC)	Power Consumption (Watts)
115 Volts AC or DC	25-60	30

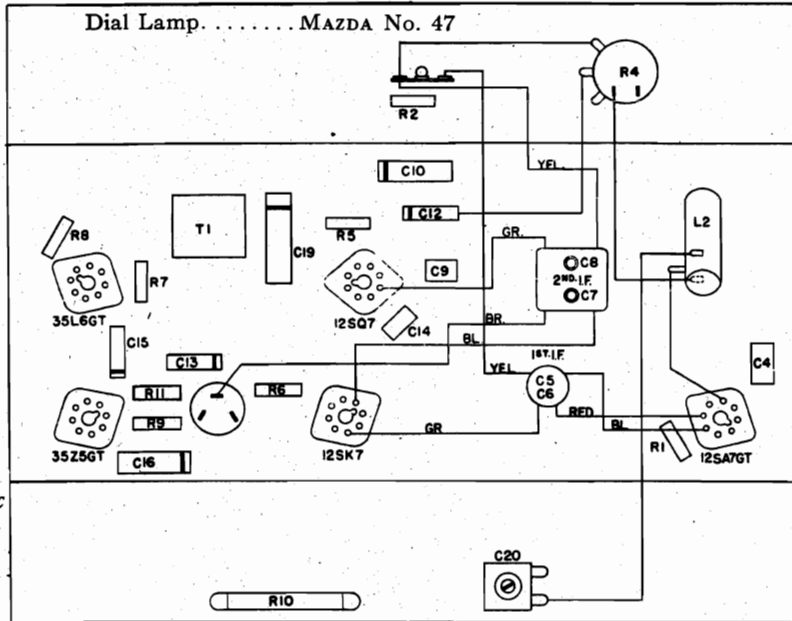


Fig. 7. Chassis Parts Layout

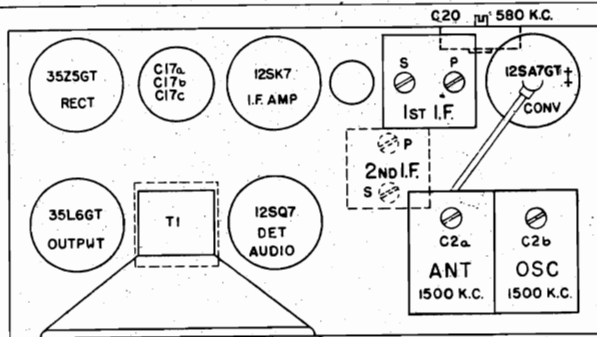


Fig. 1. Trimmer Location

† GE-12A8GT used on early production Model H-500U and H-510U.


COIL RESISTANCE CHART

Coil	Section	Resistance (Ohms)
Antenna Coil (H-500U, 510U)	Primary	7
	Secondary	26
Oscillator Coil (12SA7GT)	From C-20 to -B	5
	Plate Section	1.9
1st I.F. Transformer	Primary	29
	Secondary	29
2nd I.F. Transformer	Primary	30
	Secondary	30
Output Transformer	Primary	115
	Secondary	0.4

Special Service Information

The following information will be found very useful in servicing receivers if a vacuum tube voltmeter or similar voltage measuring instrument is available.

- Stage Gains
 Antenna to 12SA7GT..... 3 to 4 at 1000 KC
 12SA7GT to 12SK7 grid..... 42 at 455 KC†
 12SK7 grid to 12SQ7 detector plate..... 70 at 455 KC†
- 0.1 volt, 400 cycle signal across volume control will give 1/2 watt speaker output.† (Volume turned to maximum.)
- Average DC voltage developed across oscillator grid resistor (R-1)—12 volts.
 † Variation of +10%, -20% permissible.

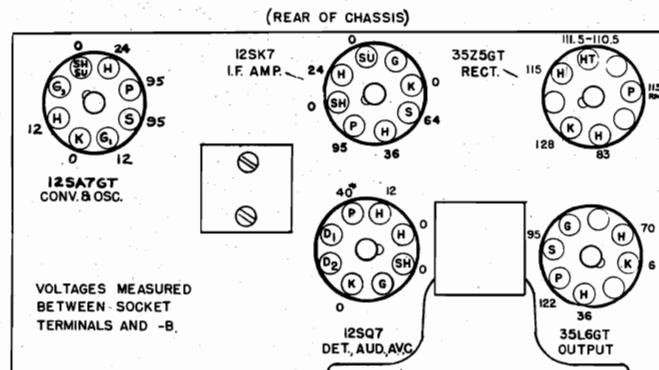

Bottom View of Chassis

Line volts—115. No signal input. When operated on a d-c power supply, voltages are about 15% lower. Use a high resistance voltmeter.
 * Measured on 500 volt scale of 1000 ohms per volt meter.


Fig. 2. Socket Voltages

Voltage, Socket, Chassis Wiring Gain, Parts List

GENERAL ELECTRIC CO.

MODELS H500, H501, H510, H511, H520, H521 (W and X)

H-500, 501, 510, 511, 520, 521..... Oak Plastic
 H-500W, 501W, 510W, 511W, 520W, 521W. Ivory Plastic
 H-500X, 501X, 510X, 511X, 520X, 521X.. Onyx Plastic

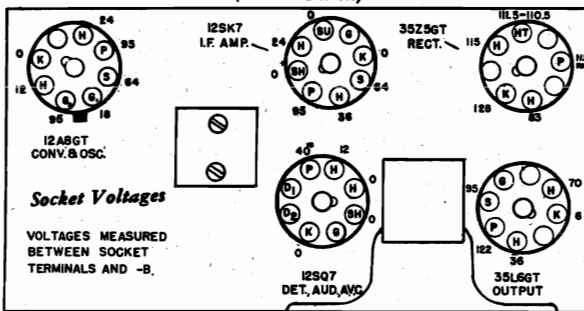

Line volts—115. No signal input. When operated on a DC power supply, voltages are about 15% lower. Use a high-resistance voltmeter.
 *Measured on 500-volt scale of 1000 ohms per volt meter.

D₁—Diode Plate G₁—Oscillator Plate HT—Heater Tap S—Screen
 D₂—Diode Plate G₂—Control Grid K—Cathode SU—Suppressor
 G₁—Oscillator Grid H—Heater P—Plate SH—Shell

MODEL	H-500, 501, 510, 511 (W and X Models Included)	H-520, 521 (W and X Models Included)
Range	540-1800 KC	540-1600 KC
Power Supply (Volts)	Frequency (Cycles on AC)	Power Consumption (Watts)
115 Volts AC or DC	25-60	30

Electrical Power Output (115-line volts)
 Undistorted.....0.9
 Maximum.....1.8 mfd. in all early production
Capacitor (C-12) .002
 mfd. in all early production
Loudspeaker "Alnico" Magnetic Dynamic receivers. As production progressed this capacitor was gressed this capacitor was Voice Coil Impedance (400 cycles) 3.5 ohms changed to .03 mfd. to improve performance.


Special Service Information

The following information will be found very useful in servicing of receivers if a vacuum tube voltmeter or similar voltage measuring instrument is available.

- Stage Gains Gain
 Antenna to 12A8GT grid..... 5 to 5.5 at 1000 KC
 12A8GT grid to 12SK7 grid..... .42 at 455 KC†
 12SK7 grid to 12SQ7 detector plate... .60 at 455 KC†
- 0.1 volt, 400 cycle signal across volume control will give 1/2 watt speaker output. (Volume control turned to maximum).
- Average DC voltage developed across oscillator grid leak..... 18 volt

Alignment


†Variations of +10%, -20% permissible
Precaution—If the signal generator is AC operated use an isolating transformer between the power supply and the radio receiver power input. The use of an isolating capacitor is not recommended as AC current through the capacitor will introduce hum modulation and/or create the possibility of a burned-out signal generator attenuator.

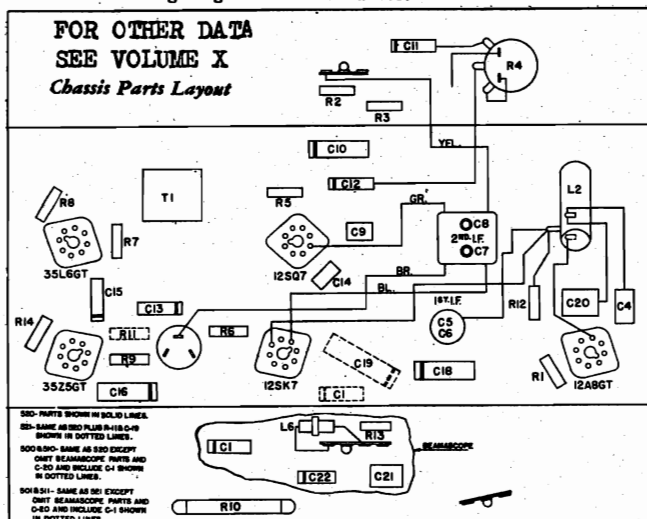

Stock No.	Description	List Price
RL-291	COIL—Oscillator coil for Models H-520 and H-521 (W & X inc.) (L-2).....	\$0.50
RL-346	CHOKE—RF choke for Models H-520 and H-521 (W & X inc.) (L-6).....	.30
RL-510	LOOP—Beam-a-Scope assembly for Models H-520 and H-521 (W & X inc.) (L-1).....	.70
RL-937	LUG—Key pin binding lug (Pkg. 10).....	.10
RP-134	PIN—Key pin for Models H-510, 511, 520, 521 (W & X inc.) (Pkg. 10).....	.05
*RQ-1215	RESISTOR—15 ohms, 1/2 W. carbon (R-14) (Pkg. 5).....	.70
*RQ-1283	RESISTOR—10,000 ohms, 1/2 W. carbon (R-13) Models H-520 and H-521 (W & X inc.) (Pkg. 5).....	.70
RS-256	SOCKET—Electrolytic mounting socket for Models H-501, 511, 521 (W & X inc.).....	.05
RS-257	SOCKET—Electrolytic mounting socket for Models H-500, 510, 520 (W & X inc.).....	\$0.05
RS-1016	SPEAKER—4-inch speaker for Models H-501, 511, 521 (W & X inc.) (L-5).....	3.35
RS-1017	SPEAKER—4-inch speaker for Models H-500, 510, 520 (W & X inc.) (L-5).....	3.25
RT-321	TRANSFORMER—1st IF transformer (L-3) for Models H-520 and H-521 (W & X inc.).....	.95
RT-323	TRANSFORMER—1st IF transformer for Models H-500, H-501, H-510, H-511 (W & X inc.).....	.90
RW-039	WINDOW—Celluloid station letter window for Models H-510, 511, 520, 521 (W & X inc.) (Pkg. 25).....	.10
*RB-013	BOARD—Terminal board (2 lug) for Models H-500, 501, 510, 511 (W & X inc.).....	.10
*RB-070	BOARD—Terminal board (3 lug) for Models H-520 and H-521 (W & X inc.).....	.10
RB-179	BRACKET—Bracket for Beam-a-Scope frame for Models H-520 and H-521 (W & X inc.).....	.10
RC-016	CAPACITOR—.002 mfd., 600 V. paper (C-1, 11).....	.25
*RC-060	CAPACITOR—.03 mfd., 600 V. paper (C-12).....	.25
*RC-130	CAPACITOR—.2 mfd., 400 V. paper for Models H-501, 511, 521 (W & X inc.) (C-19).....	.30
*RC-348	CAPACITOR—1600 mmf. mica for Models H-520, 521 (W & X inc.) (C-20).....	.35
*RC-390	CAPACITOR—3900 mmf. mica for Models H-520 and H-521 (W & X inc.) (C-21).....	.35
RC-1990	CLAMP—Antenna coil clamp for Models H-500, 501, 510, 511 (W & X inc.) (Pkg. 5).....	.10
RC-7012	CONDENSER—Tuning condenser for Models H-510, 511, 520, 521 (W & X inc.) (C-2a, 2b).....	4.00
RC-7013	CONDENSER—Tuning condenser for Models H-500, 501 (W & X inc.) (C-2a, 2b).....	2.00
RC-8508	CARDS—Station letter cards for Models H-510, 511, 520, 521 (W & X inc.).....	.30
RD-111	DIAL—Dial scale for Models H-500, 501, 510, 511 (W & X inc.).....	.20
RD-112	DIAL—Dial scale for Models H-520 and H-521 (W & X inc.).....	.20
RD-411	DRUM—Tuning condenser drive drum assembly for all models in ivory.....	.60
RD-414	DRUM—Tuning condenser drive drum assembly for all models in onyx.....	.60
RH-007	HANK—Antenna hank for Models H-500, 501, 510, 511 (W & X inc.).....	.20
RK-048	KNOB—Control knob for all models in ivory.....	.15
RK-051	KNOB—Control knob for all models in brown.....	.15
RK-065	KNOB—Control knob for all models in onyx.....	.15
RK-206	KEY—Station selector key for Models H-510, 511, 520, 521, 510W, 511W, 520W, 521W (Pkg. 5).....	.50
RK-208	KEY—Station selector key for Models H-510X, H-511X, H-520X, H-521X (Pkg. 5).....	.70
RL-085	COIL—Antenna coil for Models H-500, 501, 510, 511 (W & X inc.) (L-1).....	.50
RL-290	COIL—Oscillator coil for Models H-500, 501, 510, 511, (W & X inc.) (L-2).....	.50

*Used on previous receivers Prices subject to change without notice (When ordering drums, knobs, or keys, specify color)

MODEL HJ514 GENERAL ELECTRIC CO. Socket, Alignment, Trimmers
Schematic, Gain, Voltage

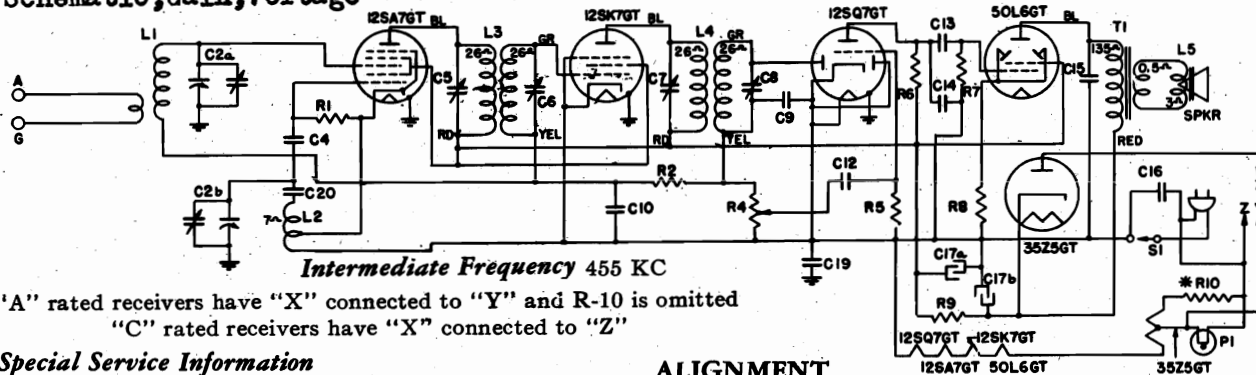

"A" rated receivers have "X" connected to "Y" and R-10 is omitted
 "C" rated receivers have "X" connected to "Z"

Special Service Information

The following information will be found very useful in servicing receivers if a vacuum tube voltmeter or similar voltage measuring instrument is available.

- (1) Stage Gains
 Antenna to 12SA7GT grid... 3 to 3.5 at 1000 KC †
 12SA7GT grid to 12SK7GT grid... 50 at 455 KC †
 12SK7GT grid to 12SQ7GT detector plate... 50 at 455 KC †
 Gains shown in the first two stages do not contain the conversion gain which amounts to 1.1 at 1000 KC.
- (2) 0.15 volt, 400 cycle signal across the volume control will give 1/2 watt speaker output. (Volume control turned to maximum.)
- (3) Average DC voltage developed across oscillator grid leak... 15 volts

† Variations of +10%, -20% permissible.

The glass tubes used in the I.F. amplifier and 2nd detector stages are interchangeable with metal tubes.

Stock No.	Description	List Price
*RB-008	BOARD—Terminal board (2 lug)	\$0.10
*RB-179	BRACKET—Cabinet back chassis mounting bracket	.10
*RB-626	BUSHING—Tuning shaft bushing	.10
*RB-1015	BOARD—Terminal board (1 lug)	.10
RB-1102	BRACKET—Condenser mounting bracket	.10
*RC-023	CAPACITOR—.005 mfd. 600 V. paper (C-13)	.25
*RC-039	CAPACITOR—.01 mfd. 600 V. paper (C-15, 20)	.25
*RC-060	CAPACITOR—.03 mfd. 600 V. paper (C-12)	.25
*RC-072	CAPACITOR—.05 mfd. 200 V. paper (C-10)	.25
*RC-092	CAPACITOR—.05 mfd. 600 V. paper (C-16)	.30
*RC-130	CAPACITOR—.2 mfd. 400 V. paper (C-19)	.30
*RC-232	CAPACITOR—47 mmf. mica (C-4)	.25
*RC-274	CAPACITOR—330 mmf. mica (C-14)	.30
*RC-293	CAPACITOR—470 mmf. mica (C-9)	.30
*RC-863	CORD—Power cord	.65
RC-5159	CAPACITOR—30 mfd. 150 V; 40 mfd. 150 V; dry electrolytic (C-17a, 17b)	2.05
RC-7026	CONDENSER—Tuning condenser (C-2a, 2b)	.10
RC-8160	CABLE—Tuning condenser drive cable	.10
*RC-9015	CONE ASSEMBLY—4-inch Dynapower speaker cone assembly	.80
RD-147	DIAL—Dial scale	.05
*RH-111	HAIRPIN COTTER—Tuning shaft retaining cotter (Pkg. 10)	.50
*RK-074	KNOB—Volume and tuning knobs (Pkg. 5)	.90
RL-525	BEAM-A-SCOPE—Cabinet back and Beam-a-Scope assembly (L-1)	.30
RL-2025	COIL—Oscillator coil (L-2)	.30
*RTN-001	NUT—Volume and tuning control pal nut (Pkg. 5)	.10
RP-173	POINTER—Dial pointer	.20
RQ-1214	RESISTOR—13 ohms, 1/4-W. carbon ±5% (R-10) (Pkg. 5)	.70
*RQ-1239	RESISTOR—150 ohms, 1/4-W. carbon (R-8) (Pkg. 5)	.70
*RQ-1295	RESISTOR—33,000 ohms, 1/4-W. carbon (R-1) (Pkg. 5)	.70
*RQ-1323	RESISTOR—470,000 ohms, 1/4-W. carbon (R-6, 7) (Pkg. 5)	.70
*RQ-1339	RESISTOR—2.2 meg. 1/4-W. carbon (R-2) (Pkg. 5)	.70
*RQ-1365	RESISTOR—15 meg. 1/4-W. carbon (R-5) (Pkg. 5)	.70
*RQ-1460	RESISTOR—1,200 ohms, 1-W. carbon (R-9) (Pkg. 5)	.70
*RS-238	SOCKET—Octal tube socket	.15
RS-278	SOCKET—Dial lamp socket assembly	.30
*RS-426	SPRING—Drive cable tension spring (Pkg. 5)	.10
RS-954	SPACER—Cardboard dial spacer (Pkg. 5)	.05
RS-1030	SPEAKER—4-inch Dynapower speaker (Complete with output transformer)	\$3.25
RS-4002	SPRING—Dial scale retaining spring (Pkg. 3)	.05
RS-9000	SHAFT—Tuning control shaft	.10
RT-352	TRANSFORMER—1st I.F. transformer (L-3)	.70
RT-353	TRANSFORMER—2nd I.F. transformer (L-4)	.70
RT-482	TRANSFORMER—Output transformer (T-1)	.90
RT-955	TERMINAL—Antenna or ground terminal (Pkg. 5)	.10
RV-091	VOLUME CONTROL—0.5 megohm volume control (R-4)	.80
RW-046	WINDOW—Dial scale window	.15
RW-121	WASHER—Pointer felt washer (Pkg. 10)	.05

* Used on previous receivers—(Prices subject to change without notice).


ALIGNMENT

I.F. Connect an output meter across the voice coil. Turn the volume control to maximum. Set test oscillator to 455 KC and keep the oscillator output as low as a readable meter reading will permit.

Apply signal to the converter grid of the 12SA7GT through a 0.05 mfd. capacitor and align progressively the trimmers in the 2nd and 1st I.F. transformer cans. Do not remove the grid lead from the 12SA7GT.

R.F. To insert the R.F. signal use either a standard I.R.E. dummy between the signal generator and the receiver antenna post or a loop connected across the generator output which can be magnetically coupled to the receiver Beam-a-Scope. When using an I.R.E. dummy antenna for R.F. alignment, the ground lead from the signal generator to the receiver ground post should be omitted.

With the gang condenser wide open, align oscillator trimmer (C-2b) to 1650 KC. Change generator signal to 1500 KC, tune receiver to the signal and peak antenna trimmer (C-2a) for maximum output.

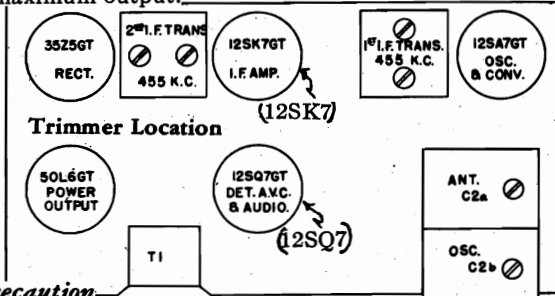

Precaution—If the signal generator is AC operated use an isolating transformer between the power supply and the radio receiver power input.


Rating	Power Supply (Volts)	Frequency (Cycles on AC)	Power Consumption (Watts)
A	115—AC or DC	40-60	30
C	115—AC or DC	25	30

Electrical Power Output (117-line volts)

Undistorted... 1.3 watts
 Maximum... 1.9 watts

Loud-speaker—"Alnico" Magnetic Dynamic

Outside Cone Diameter... 4 inches
 Voice Coil Impedance (400 cycles)... 3.5 ohms
 FRONT OF CHASSIS

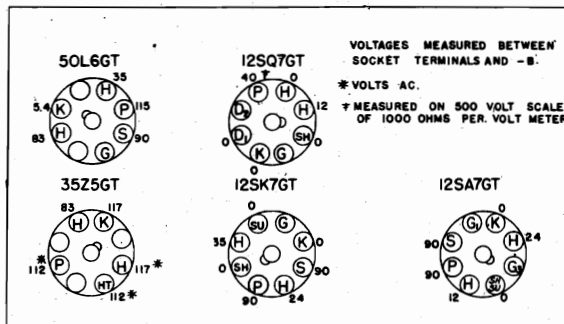

BOTTOM VIEW OF CHASSIS
 AC LINE VOLTS-117 MAX. VOLUME GANG CLOSED NO-SIGNAL

Schematic, Voltage, Coils
Socket, Alignment, Gain

GENERAL ELECTRIC CO.

MODEL H502
MODELS H503, H530 to H532

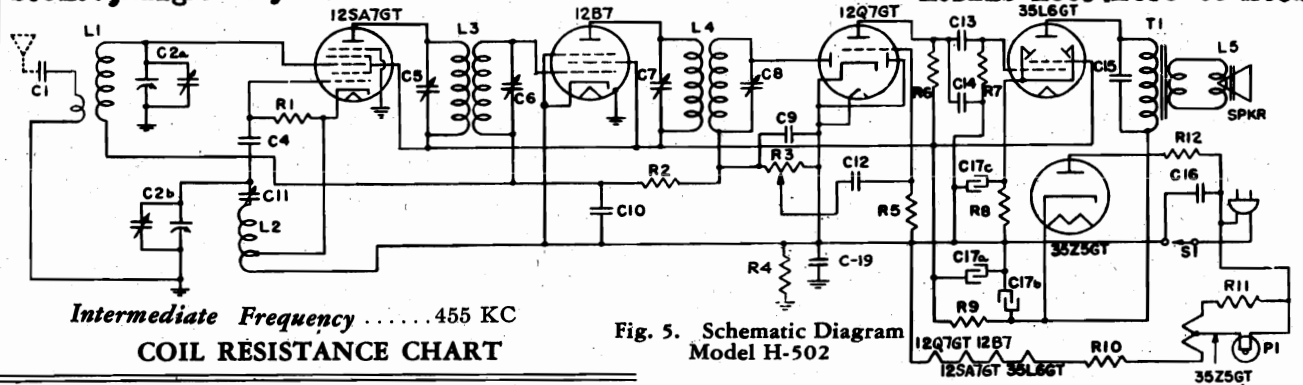


Fig. 5. Schematic Diagram Model H-502

Intermediate Frequency 455 KC

COIL RESISTANCE CHART

Coil	Section	Resistance
Oscillator Coil	Between C-11 and -B	5 ohms
1st I.F. Transformer	Primary	29 ohms
	Secondary	29 ohms
2nd I.F. Transformer	Primary	30 ohms
	Secondary	30 ohms
Output Transformer	Primary	115 ohms
	Secondary	0.4 ohms

Model	Color	Material
H-502	Mahogany	Plastic
H-503	Walnut	Wood
H-530	Walnut	Wood
H-531	Maroon	Texti-leather over wood
H-532	Eggshell Gray	Texti-leather over wood

GENERAL INFORMATION

These Models are compact superheterodyne receivers using five General Electric Pre-tested Tubes. Operation is permitted on either a DC or AC source of power. Features of design include the new "Alnico" Dynapower speaker, single-ended tubes in the detector circuits, high-filament voltage tubes which eliminate line dropping resistors, and full approval of the Underwriters' Laboratories.

Model	Power Supply (Volts)	Frequency (Cycles on A-C)	Power Consumption (Watts)
H-502	115 Volts AC or DC	25-60	30
H-503, 530, 531, 532	115 Volts AC or DC	40-60	30


Electrical Power Output (115-line volts)

Undistorted..... 1.2 watts
Maximum..... 2.3 watts

Special Service Information

The following data will be very useful to servicemen equipped with vacuum tube voltmeters or similar voltage measuring instruments.

- Stage Gains
Antenna to Converter Grid 3 to 4 at 1000 KC
Converter Grid to 12B7 Grid 45 at 455 KC†
12B7 Grid to 12Q7GT Grid 80 at 455 KC‡
- 0.1 volt, 400 cycle signal across volume control will give 1/2 watt speaker output. †(Volume Control turned to Maximum).
- Average DC voltage developed across oscillator grid resistor (R-1)—12 volts.
Variations of +10%, -20%, permissible.

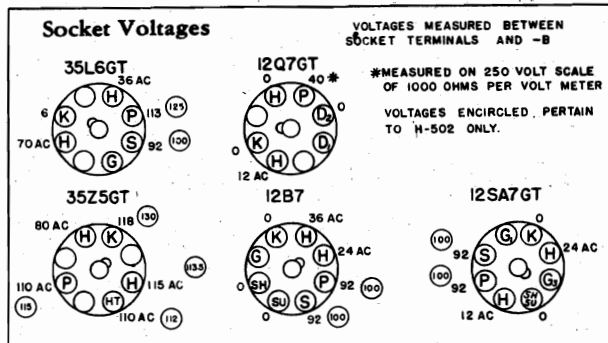

Loud-speaker—"Alnico" Magnetic Dynamic

Outside Cone Diameter..... 4 inches
Voice Coil Impedance (400 cycles)..... 3.5 ohms

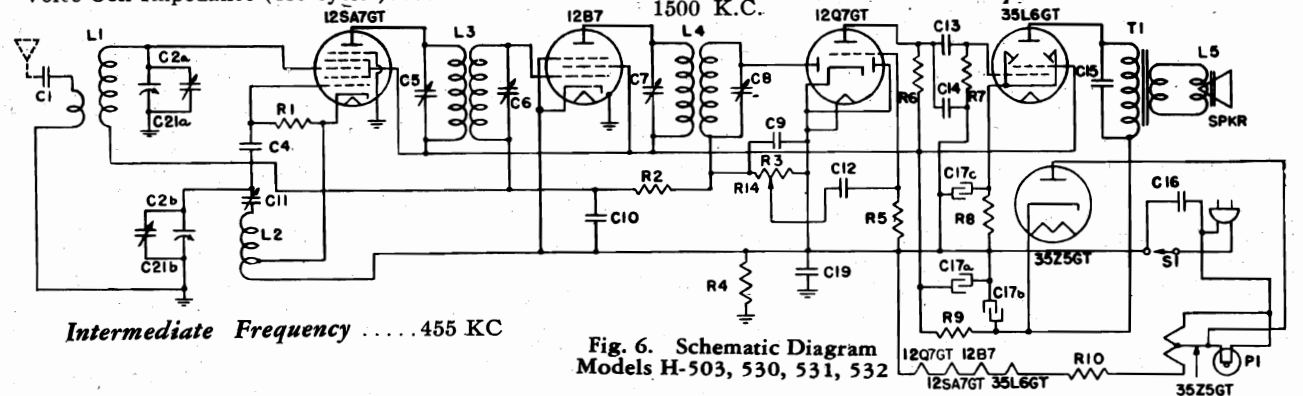


Fig. 6. Schematic Diagram Models H-503, 530, 531, 532

Intermediate Frequency 455 KC

MODEL H502
MODELS H503, H530 to H532


GENERAL ELECTRIC CO.

Chassis Wiring, Trimmers
Parts List



Stock No.	Description	List Price	Symbol	Description	List Price
*RB-008	BOARD—Terminal board (2 lug)	\$0.10	RK-072	KNOB—Control knob for Model H-53120
*RB-013	BOARD—Terminal board (2 lug)10	RL-518	LOOP—Beam-a-Scope assembly (L-1)80
RB-179	BRACKET—Bracket for "Beam-a-Scope" frame10	RL-2018	COIL—Oscillator coil (L-2)40
RB-193	BRACKET—Pilot light bracket for Model H-50205	RM-505	MASK—Drum dial felt masks for Model H-50305
RB-194	BRACKET—Pilot lamp bracket for Model H-50305	*RQ-1215	RESISTOR—15 ohms 1/2 W. Carbon (R-12) (Pkg. 5)70
RB-915	BACK COVER—Cabinet back cover for Model H-502	1.00	*RQ-1223	RESISTOR—33 ohms 1/2 W. Carbon (R-11) (Pkg. 5)70
RB-927	BACK COVER—Cabinet back cover for Model H-50310	*RQ-1239	RESISTOR—150 ohms 1/2 W. Carbon (R-8) (Pkg. 5)70
RB-928	BACK COVER—Cabinet back cover for Models H-530, 531, and 53210	*RQ-1261	RESISTOR—1200 ohms 1/2 W. Carbon (R-9) (Pkg. 5)70
*RC-011	CAPACITOR—.002 mfd. 600 V. paper (C-1)25	*RQ-1295	RESISTOR—33,000 ohms 1/2 W. Carbon (R-1) (Pkg. 5)70
*RC-023	CAPACITOR—.005 mfd. 600 V. paper (C-13)25	*RQ-1323	RESISTOR—470,000 ohms 1/2 W. Carbon (R-4, 6, 7) (Pkg. 5)70
*RC-039	CAPACITOR—.01 mfd. 600 V. paper (C-15)25	*RQ-1339	RESISTOR—2.2 megohms 1/2 W. Carbon (R-2) (Pkg. 5)70
*RC-060	CAPACITOR—.03 mfd. 600 V. paper (C-12)25	*RQ-1365	RESISTOR—15 megohms 1/4 W. Carbon (R-5) (Pkg. 5)70
*RC-072	CAPACITOR—.05 mfd. 200 V. paper (C-10)25	RR-351	RESISTOR—100 ohms wire wound (R-10)20
*RC-092	CAPACITOR—.05 mfd. 600 V. paper (C-16)30	*RS-238	SOCKET—Octal tube socket15
*RC-130	CAPACITOR—.02 mfd. 400 V. paper (C-19)30	RS-256	SOCKET—Electrolytic mounting socket05
*RC-216	CAPACITOR—47 mmf. mica (C-4)25	RS-258	SOCKET—Pilot lamp socket25
*RC-274	CAPACITOR—330 mmf. mica (C-14)30	RS-263	SOCKET—12B7 tube socket15
*RC-294	CAPACITOR—470 mmf. mica (C-9)30	RS-464	SPRING—Tuning drum spring (Pkg. 10)05
RC-676	CAPACITOR—B band padder (C-11)35	RS-1016	SPEAKER—4-inch P.M. speaker for Models H-503, 530, 531 and 532 (L-5)	3.35
*RC-863	CORD—Power cord65	RS-1026	SPEAKER—4-inch P.M. speaker for Model H-502 (L-5)	3.25
RC-5135	CAPACITOR—30 mfd. 150 V., 40 mfd. 150 V., 20 mfd. 25 V., dry electrolytic (C-17a, 17b, 17c)	1.15	RT-322	TRANSFORMER—2nd I.F. transformer (L-4)	1.00
RC-7019	CONDENSER—Tuning condenser for Models H-502 and 503 (C-2a, 2b)	2.05	RT-343	TRANSFORMER—1st I.F. transformer (L-3)95
RC-7020	CONDENSER—Tuning condenser for Models H-530, 531, and 532 (C-21a, 21b)	2.05	RT-465	TRANSFORMER—Output transformer for Models H-503, 530, 531 and 532 (T-1)	1.00
RC-9013	CONE ASSEMBLY—4-inch P.M. Cone Assembly for all models80	RT-476	TRANSFORMER—Output transformer for Model H-502 (T-1)	1.30
RD-140	DIAL—Dial scale for Models H-502 and 50320	RV-080	VOLUME CONTROL—500,000 ohm volume control for Model H-502 (R-3)75
RD-141	DIAL—Dial scale for Models H-530, 531, and 53245	RV-081	VOLUME CONTROL—500,000 ohm volume control for Model H-503 (R-3)75
RD-410	DRUM—Tuning condenser drive drum for Model H-50220	RV-082	VOLUME CONTROL—500,000 ohm volume control for Models H-530, 531 and 532 (R-14)75
RD-416	DRUM—Tuning condenser drive drum for Model H-50335	RZ-170	CABINET—Brown Cabinet for Model H-502	2.95
*RG-016	GRID CLIP—Control grid clip (Pkg. 5)10			
RK-051	KNOB—Control knob for Model H-50215			
RK-057	KNOB—Control knob for Model H-503	\$0.10			
RK-071	KNOB—Control knob for Models H-530 and 53220			

* Used on previous receivers.
(Prices Subject to Change without Notice)

Trimmer Location
Models H-502, 503

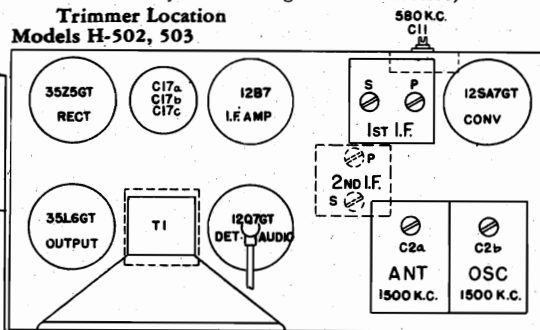

Trimmer Location
Models H-530, 531, 532

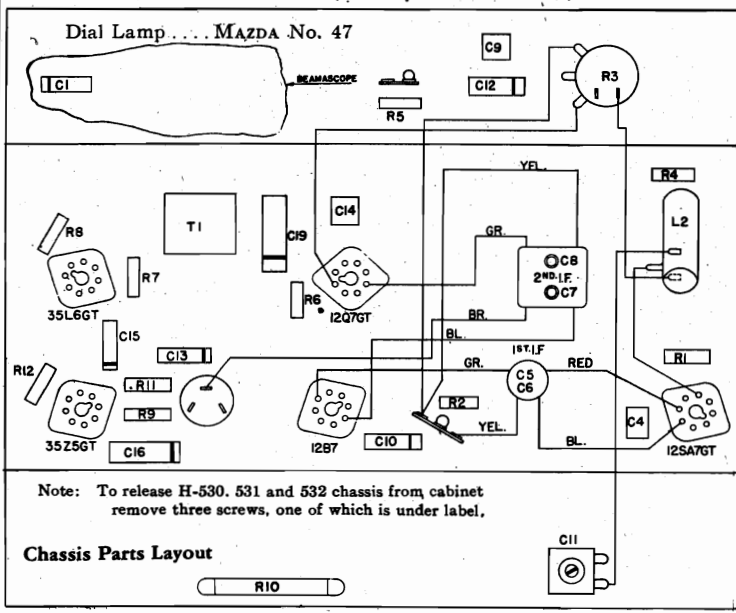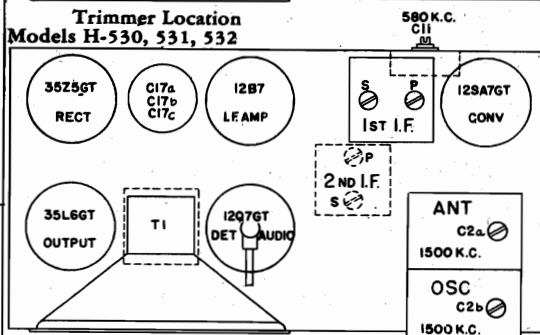

GENERAL ELECTRIC CO.

MODEL HB504
MODEL HB505
Schematics

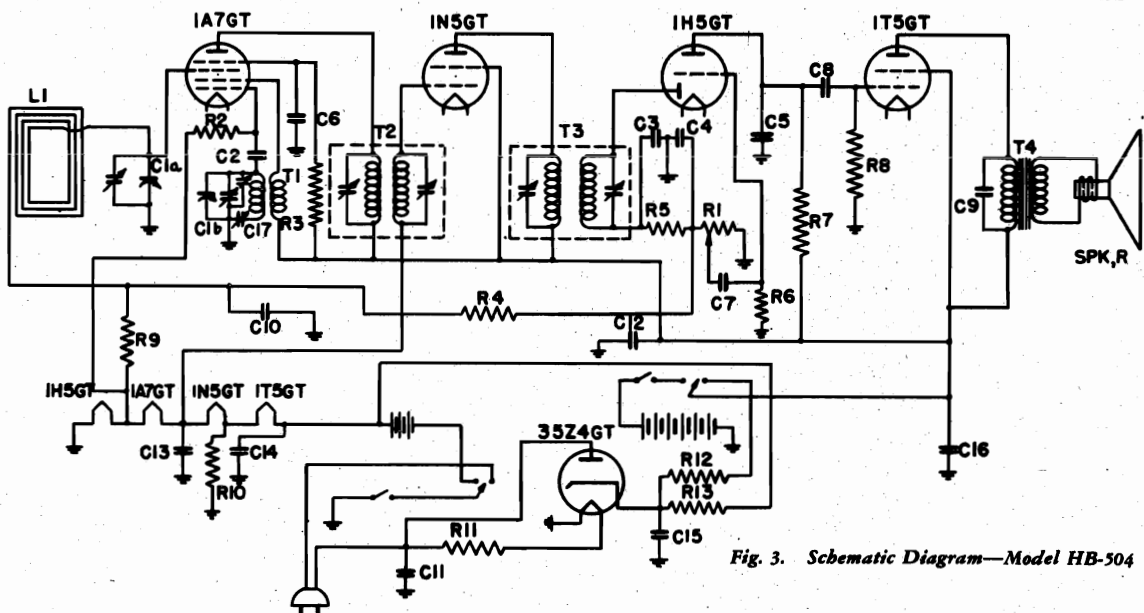


Fig. 3. Schematic Diagram—Model HB-504

Symbol	Description	Symbol	Description	Symbol	Description
C-1	Tuning Condenser	C-13	0.1 mfd., Paper Capacitor	R-7	1.0 megohms, Carbon Resistor
C-2	50 mmf., Mica Capacitor	C-14	100 mfd., 15 V. Dry Electrolytic	R-8	3.0 megohms, Carbon Resistor
C-3	100 mmf., Mica Capacitor	C-15	50 mfd., 150 V. Dry Electrolytic	R-9	3.0 megohms, Carbon Resistor
C-4	100 mmf., Mica Capacitor	C-16	20 mfd., 150 V. Dry Electrolytic	R-10	1000 ohms, Carbon Resistor
C-5	100 mmf., Mica Capacitor	C-17	600 KC. Padding Capacitor	R-11	600 ohms, Cord Dropping Resistor
C-6	.05 mfd., Paper Capacitor	L-1	Beam-a-scope	R-12	3000 ohms, Carbon Resistor
C-7	.001 mfd., Paper Capacitor	R-1	1.0 megohm, Volume Control	R-13	2500 ohms, Wire-wound Resistor
C-8	.004 mfd., Paper Capacitor	R-2	200,000 ohms, Carbon Resistor	T-1	Oscillator Coil
C-9	.002 mfd., Paper Capacitor	R-3	70,000 ohms, Carbon Resistor	T-2	1st I.F. Transformer
C-10	.05 mfd., Paper Capacitor	R-4	10 megohms, Carbon Resistor	T-3	2nd I.F. Transformer
C-11	.05 mfd., Paper Capacitor	R-5	100,000 ohms, Carbon Resistor	T-4	Output Transformer
C-12	0.1 mfd., Paper Capacitor	R-6	10 megohms, Carbon Resistor		

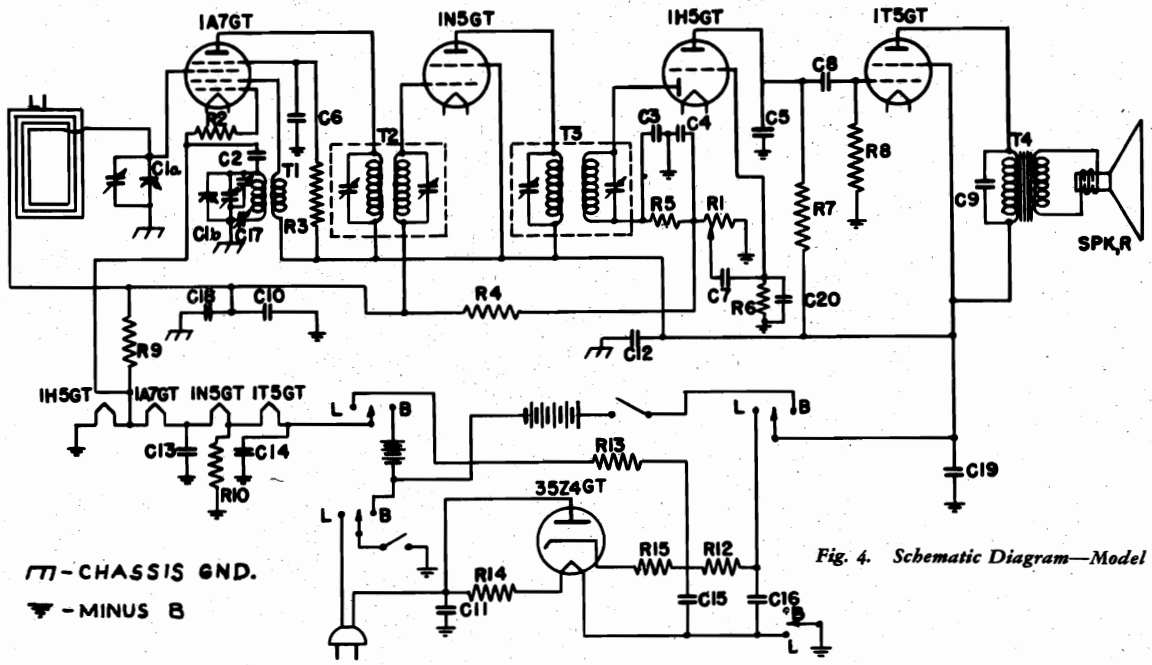


Fig. 4. Schematic Diagram—Model HB-505

Symbol	Description	Symbol	Description	Symbol	Description
C-1	Tuning Condenser	C-14	100 mfd., 15 V. Dry Electrolytic	R-6	10 megohms, Carbon Resistor
C-2	50 mmf., Mica Capacitor	C-15	50 mfd., 150 V. Dry Electrolytic	R-7	1.0 megohm, Carbon Resistor
C-3	100 mmf., Mica Capacitor	C-16	20 mfd., 150 V. Dry Electrolytic	R-8	3.0 megohms, Carbon Resistor
C-4	100 mmf., Mica Capacitor	C-17	600 KC. Padding Capacitor	R-9	3.0 megohms, Carbon Resistor
C-5	100 mmf., Mica Capacitor	C-18	.25 mfd., Paper Capacitor	R-10	1000 ohms, Carbon Resistor
C-6	.05 mfd., Paper Capacitor	C-19	.05 mfd., Paper Capacitor	R-12	3000 ohms, Carbon Resistor
C-7	.001 mfd., Paper Capacitor	C-20	100 mmf., Mica Capacitor	R-13	2500 ohms, Wire-wound Resistor
C-8	.004 mfd., Paper Capacitor	L-1	Beam-a-scope	R-14	50 ohms, Carbon Resistor
C-9	.002 mfd., Paper Capacitor	R-1	1.0 megohm, Volume Control	R-15	50 ohms, Carbon Resistor
C-10	.05 mfd., Paper Capacitor	R-2	200,000 ohms, Carbon Resistor	T-1	Oscillator Coil
C-11	.05 mfd., Paper Capacitor	R-3	70,000 ohms, Carbon Resistor	T-2	1st I.F. Transformer
C-12	0.1 mfd., Paper Capacitor	R-4	10 megohms, Carbon Resistor	T-3	2nd I.F. Transformer
C-13	0.1 mfd., Paper Capacitor	R-5	100,000 ohms, Carbon Resistor	T-4	Output Transformer

MODEL HB504

MODEL HB505

GENERAL ELECTRIC CO.

Voltage, Socket, Trimmers

Alignment, Notes

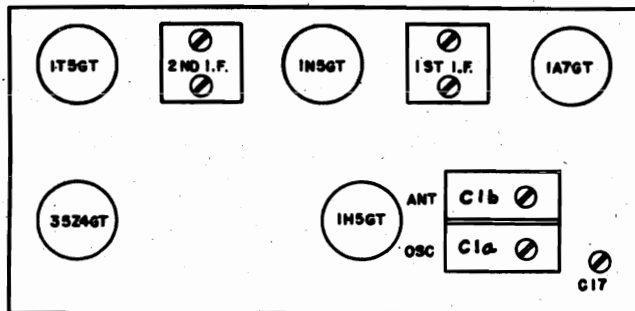


Fig. 1. Trimmer Location

Precaution: The Model HB-504 when used on an AC power supply will have one side of the chassis connected directly to the line. In order to prevent injury to the signal generator, if AC operated, or shock to the serviceman, use an isolating transformer between the convenience outlet and the receiver power cord.

Tubes

Converter and Oscillator.....	GE-1A7GT
I.F. Amplifier.....	GE-1N5GT
Det., Aud., AVC.....	GE-1H5GT
Power Output.....	GE-1T5GT
Rectifier.....	GE-35Z4GT

SERVICE DATA

Physical Dimensions

Models.....	HB-504 and HB-505
Height.....	9½ inches
Width.....	13¼ inches
Depth.....	6½ inches
Wt. with batteries.....	16¾ lbs

Tuning Control Drive Ratio.....5:1

Electrical Specifications

1. AC or DC Power Supply
105-125 Volts, 40-60 cycles on AC.
2. Battery Power Supply
1.5 volt "A" supply, 90-volt "B" supply.
Recommended batteries for 300-hour life:
 - (a) "A" supply—Eveready No. 718 or equivalent.
 - (b) "B" supply—Eveready No. 762 or equivalent.


Tuning Frequency Range.....540-1600 KC

Intermediate Frequency.....455 KC

Maximum Power Output.....175 milliwatts

Loud-speaker—"Alnico" Magnet Dynamic

Outside Cone Diameter—5 inches.
Voice Coil Impedance (400) cycles 4.6 ohms.

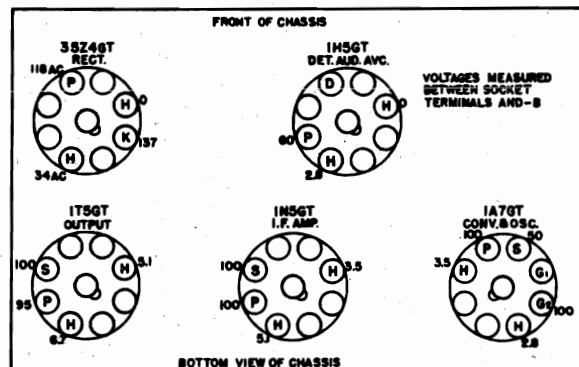

Line volts—118. No signal input.
When operated on a DC power supply, voltages are about 15% lower.
Voltages measured with a 20,000 ohms per volt meter.

- D—Diode Plate
- G₁—Oscillator Grid
- G₂—Oscillator Plate
- H—Heater
- K—Cathode
- P—Plate
- S—Screen

Fig. 2. Socket Voltages

GENERAL INFORMATION

The Models HB-504 and HB-505 are portable, five-tube, superheterodyne receivers which are designed to operate on any one of three types of power supplies as listed under electrical specifications. Features of design include automatic power selector switch, built-in Beam-a-scope, 5-inch "Alnico" magnet dynapower speaker and automatic volume control.

The automatic power selector switch operates as follows: When the door-cover at the side of the case is opened for the purpose of connecting the power cord to a convenience outlet, all batteries are automatically disconnected from the circuit. When the power cord is replaced and the door-cover is closed the radio is automatically returned to battery operation.

When operating from a DC source of power, it is necessary to insert the power plug with proper polarity; otherwise the receiver will fail to function. If any hum is noticed when the receiver is used on AC, reverse the power plug in the receptacle.

ALIGNMENT PROCEDURE

Alignment Frequencies

I.F.—455 KC Broadcast—1500 and 600 KC
The location of all trimmers is shown in Fig. 1.

General Alignment Notes

This receiver must be removed from the carrying case in order to perform the alignment. Special care must be exercised to place the batteries, Beam-a-scope and chassis in the same relative positions with respect to one another as these components occupied in the case, otherwise, alignment will not be satisfactory.

I.F. Alignment

With batteries, Beam-a-scope and chassis in position for alignment as mentioned above, connect an output meter across the voice coil. Rotate the volume control to maximum. Set test oscillator to 455 KC and apply signal to the control grid of the 1A7GT tube through a .05 mfd. capacitor. Do not remove the grid lead from the 1A7GT. Keep the test oscillator output as low as a readable meter reading will permit. Adjust all I.F. trimmers for maximum output.

R.F. Alignment

Place a coupling loop six inches from the receiver Beam-a-scope. Apply a 1500 KC signal to the coupling loop. Set pointer to 1500 KC and align the oscillator trimmer (C-1a). Peak (C-1b) for maximum output. Change test signal to 600 KC and with pointer in region of 600 KC peak (C-17) while rocking the gang condenser.

MODELS H600U, H610U, H620U
 H630U, H632U
 MODELS H600UW, H610UW, H620UW
 MODELS H600UX, H610UX, H620UX
 Chassis Wiring, Trimmers
 Dial Drive Data

GENERAL ELECTRIC CO.

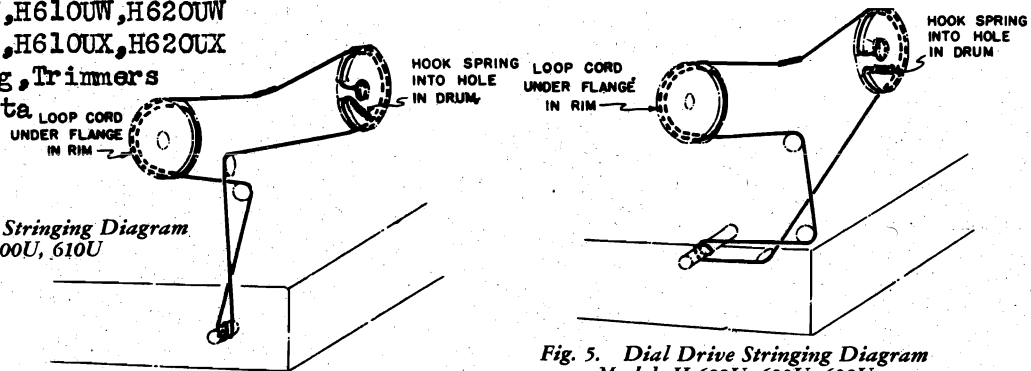


Fig. 4. Dial Drive Stringing Diagram
 Models H-600U, 610U

Fig. 5. Dial Drive Stringing Diagram
 Models H-620U, 630U, 632U

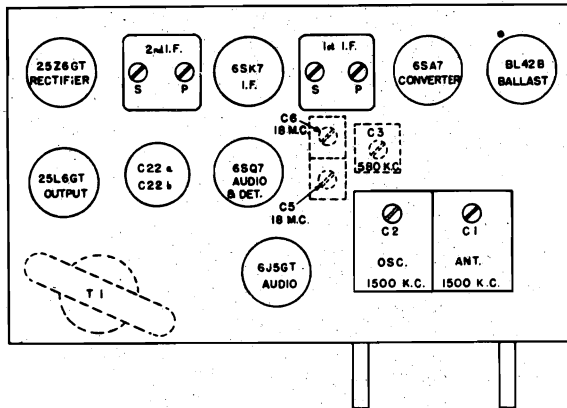


Fig. 2. Trimmer Location—Models H-620U, 630U, 632U

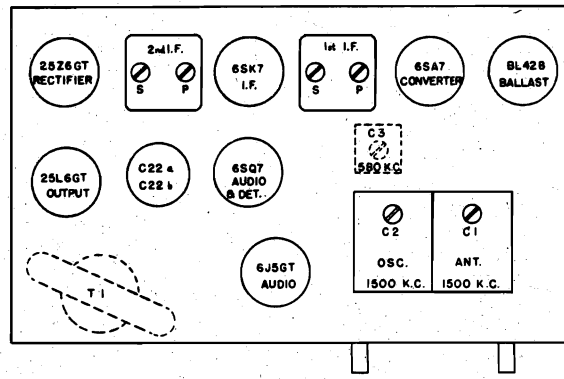


Fig. 1. Trimmer Location—Models H-600U, 610U

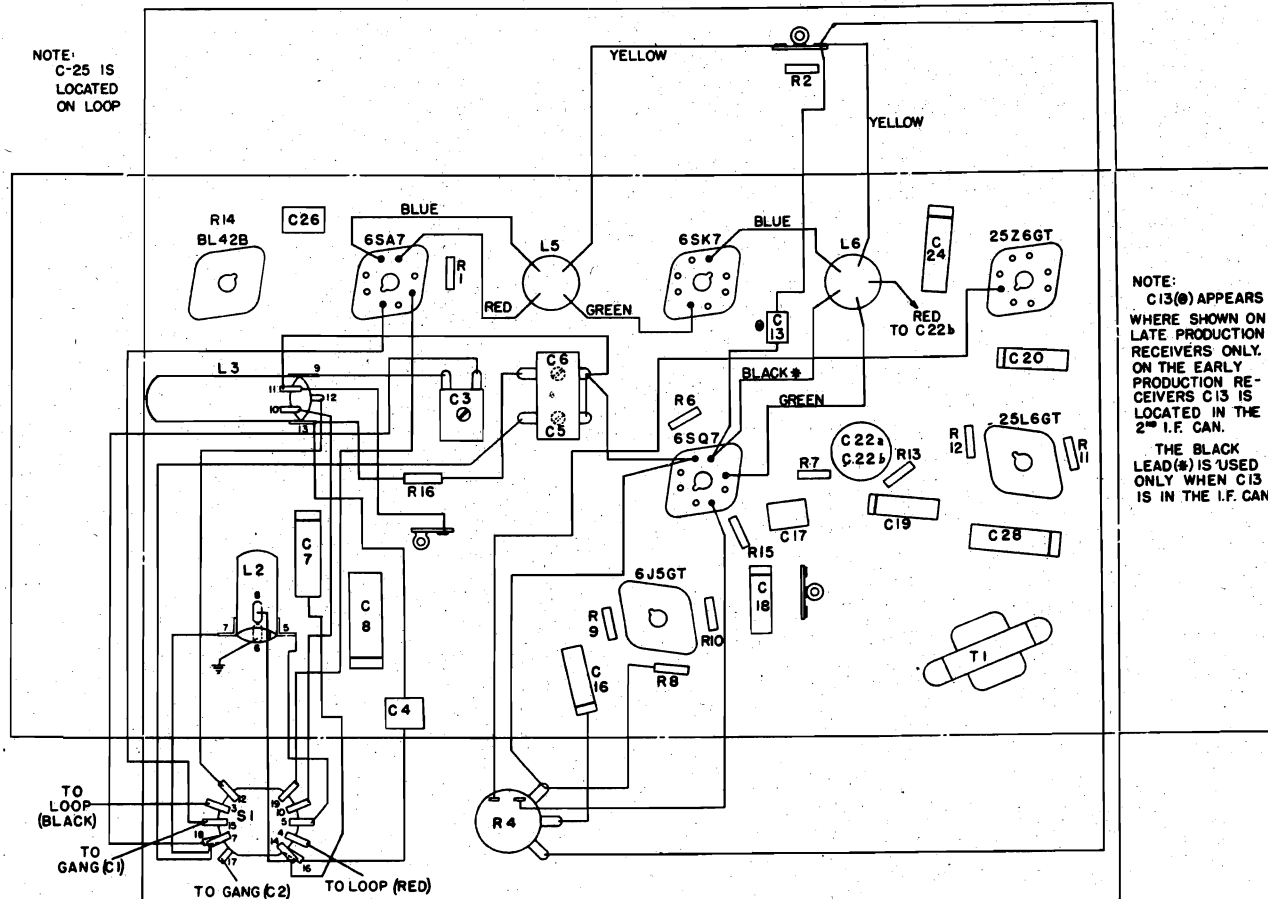


Fig. 6. Chassis Parts Layout for Models H-620U, 630U and 632U

(Chassis Parts Layout for Models H-600U and 610U are the same as above except for band switch, "D" band coils and associated parts which are omitted.)

NOTE:
 C-25 IS
 LOCATED
 ON LOOP

NOTE:
 C13(⊙) APPEARS
 WHERE SHOWN ON
 LATE PRODUCTION
 RECEIVERS ONLY.
 ON THE EARLY
 PRODUCTION RE-
 CEIVERS C13 IS
 LOCATED IN THE
 2ND I.F. CAN.

THE BLACK
 LEAD(⊙) IS USED
 ONLY WHEN C13
 IS IN THE I.F. CAN.

GENERAL ELECTRIC CO

MODELS H600U, H610U, H620U (W, X)
H630U, H632U

Schematics, Voltage, Changes

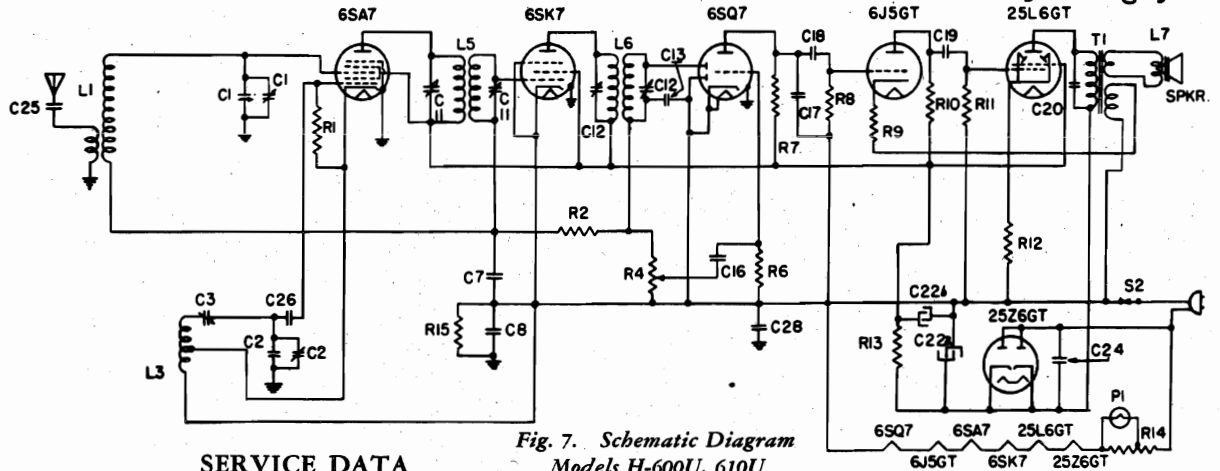


Fig. 7. Schematic Diagram Models H-600U, 610U

SERVICE DATA

Color Specifications

Model	Color	Material
H-600U, 610U, 620U	Mottled brown	Plastic
H-600UW, 610UW, 620UW	Ivory	Plastic
H-600UX, 610UX, 620UX	Onyx	Plastic
H-630U, 632U	Walnut	Wood

Electrical Specifications

Power Supply (Volts)	Frequency (Cycles on AC)	Power Consumption (Watts)
115 AC or DC	25-60	55

Tuning Control Drive Ratio.....4:1

Tuning Frequency Range

Models	H-600U, 610U	H620U, 630U, 632U
Range	550-1600 K.C.	550-1600 K.C. 5800-18000 K.C.

Intermediate Frequency.....455 K.C.

Electrical Power Output (117 line volts)

Undistorted.....	1.4 watts
Maximum.....	2.5 watts

Loud-speaker—"Alnico" Magnetic Dynamic


Outside Cone Diameter.....	5 inches
Voice Coil Impedance (400 cycles).....	3.5 ohms

Tubes

Converter and Oscillator.....	GE-6SA7
I.F. Amplifier.....	GE-6SK7
Det., Aud., AVC.....	GE-6SQ7
2nd Audio Amplifier.....	GE-6J5GT
Power Output.....	GE-25L6GT
Rectifier.....	GE-25Z6GT
Dial Lamp.....	MAZDA No. 44

PRODUCTION CHANGES

In changing from Models H-601, 611, 621, 631 and 633 to Models H-600U, 610U, 620U, 630U, and 632U several hundred receivers were built of the former type but labeled with the "U" series labels. These receivers can be identified by a 2.0 megohm volume control. Service information on receivers with 2.0 megohm volume controls will be found in Service Notes for Models H-600U, 610U, and 620U (EARLY), and in Service Notes for Models H-630U and 632U (EARLY).

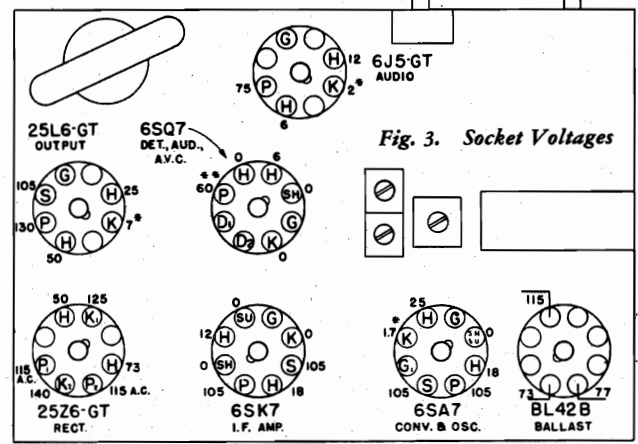

(REAR OF CHASSIS)
Voltages measured between socket terminal and -B.
Line Volts—115.
No signal input—Volume control at maximum.
When operated on DC power supply, voltages are about 15% lower.
Perform measurements with a high resistance voltmeter.
*Measured on 10 volt scale of a 20,000 ohms per volt meter.
**Measured on 250 volt scale of a 20,000 ohms per volt meter.

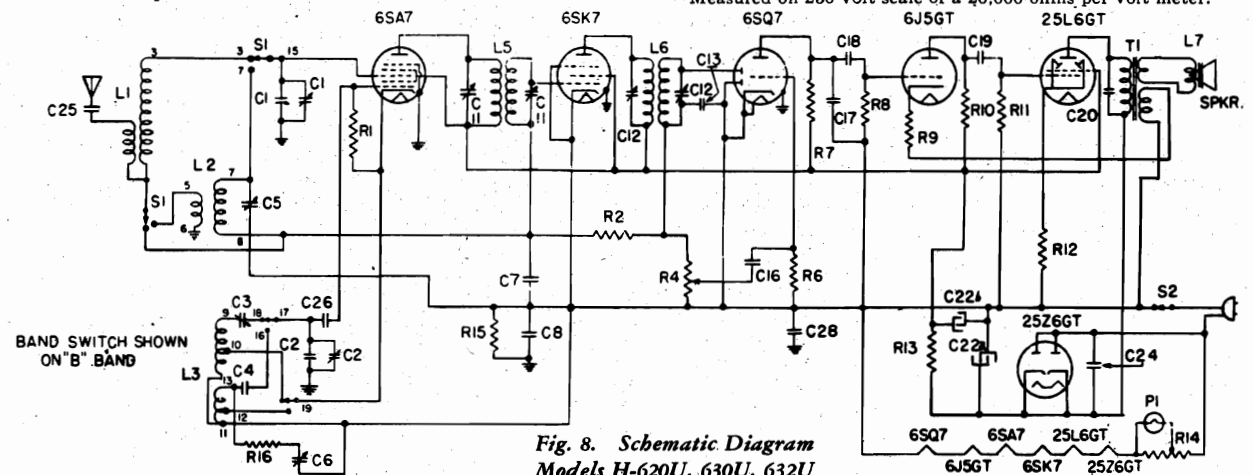


Fig. 8. Schematic Diagram Models H-620U, 630U, 632U

MODELS H600U, H610U, H620U(W,X)
H630U, H632U GENERAL ELECTRIC CO.
Alignment, Gain, Coils, Parts

REPLACEMENT PARTS LIST
Models H-600U, 610U, 620U, 630U, and 632U
(W AND X MODELS INCLUDED)

Stock No.	Description	List Price	Stock No.	Description	List Price
RA-313	CONDENSER ASSEMBLY—Tuning condenser and drive unit complete (Model H-610U)	\$5.50	RK-055	KNOB—Control knob for all models in ivory, and Models H-630U, 632U (Pkg. 5)	\$0.50
RA-314	CONDENSER ASSEMBLY—Tuning condenser and drive unit complete with point-to-point wiring (Models H-620U, 630U, 632U)	5.70	RK-066	KNOB—Control knob for all models in ivory (Pkg. 3)	.45
*RB-013	BOARD—Terminal board (2 lug)	1.10	RK-209	KEY—Station selector key (Models H-610U, 620U, 630U, 632U)	.25
*RB-041	BRACKET—Dial scale-condenser support bracket assembly (Model H-600U)	.50	RK-211	KEY—Station selector key (Models H-610U, 620U, 630U, 632U)	.15
*RB-181	BRACKET—Beam-shaft bushing (Models H-600U, 610U)	.10	RL-098	BEAM—S-COPE—Beam-Scope assembly (L-1)	.65
RB-182	BACK COVER—Plastic cabinet back cover for plastic models in brown	1.00	RL-320	LUG—Key pin binding lug (Pkg. 10)	.80
RB-915	BACK COVER—Plastic cabinet back cover for plastic models in ivory	1.00	RL-937	COIL—Oscillator coil (L-3) (Models H-620U, 630U, 632U)	.40
RB-920	BACK COVER—Plastic cabinet back cover for plastic models in onyx	1.00	RL-2021	PIN—Station selector key pin (Models H-610U, 620U, 630U, 632U)	.75
RB-921	BACK COVER—Plastic cabinet back cover for Model H-600U	1.80	RP-134	POINTNER—Dial scale pointer (Model H-610U, 620U, 630U, 632U)	.05
RB-922	BOARD—5 inch speaker terminal board (C-18, 19)	.15	RP-141	POINTNER—Dial scale pointer (Model H-610U, 620U, 630U, 632U)	.05
*RC-023	CAPACITOR—.005 mfd., 600 V. paper	.05	RP-142	POINTNER—Dial scale pointer (Model H-610U, 620U, 630U, 632U)	.05
*RC-039	CAPACITOR—.01 mfd., 600 V. paper	.25	RP-143	POINTNER—Dial scale pointer (Model H-610U, 620U, 630U, 632U)	.05
*RC-048	CAPACITOR—.02 mfd., 600 V. paper	.30	RP-307	PULLEY—Hemmer drive pulley (Pkg. 5)	.60
*RC-072	CAPACITOR—.05 mfd., 200 V. paper	.25	RP-308	PULLEY—1/2 inch drive cord idler pulley (Models H-610U, 620U, 630U, 632U)	.10
*RC-092	CAPACITOR—.05 mfd., 600 V. paper (C-24)	.30	RP-309	PULLEY—1/2 inch drive cord idler pulley (Models H-610U, 620U, 630U, 632U)	.10
*RC-123	CAPACITOR—.01 mfd., 400 V. paper (C-5, 28)	.35	*RQ-1235	RESISTOR—100 ohms, 1/4 W. carbon (R-10) (Pkg. 5)	.70
*RC-216	CAPACITOR—.47 mfd. mica (C-29)	.17	*RQ-1289	RESISTOR—100 ohms, 1/4 W. carbon (R-12) (Pkg. 5)	.70
*RC-390	CAPACITOR—3900 mfd. mica (C-4)	.35	*RQ-1259	RESISTOR—1000 ohms, 1/4 W. carbon (R-13) (Pkg. 5)	.70
*RC-876	CAPACITOR—"B" band padder (C-3)	.35	*RQ-1271	RESISTOR—3000 ohms, 1/4 W. carbon (R-1) (Pkg. 5)	.70
RC-747	CONDENSER—Tuning condenser (C-1, 2) (Model H-600U, 610U, 620U)	2.15	*RQ-1285	RESISTOR—30,000 ohms, 1/4 W. carbon (R-1) (Pkg. 5)	.70
RC-748	CONDENSER—Tuning condenser (C-1, 2) (Model H-610U)	4.15	*RQ-1287	RESISTOR—38,000 ohms, 1/4 W. carbon (R-10) (Pkg. 5)	.70
*RC-853	CLAMP—Power cord (Models H-620U, 630U, 632U)	.10	*RQ-1323	RESISTOR—10,000 ohms, 1/4 W. carbon (R-11) (Pkg. 5)	.70
RC-1989	CAMP—Power cord (Models H-620U, 630U, 632U)	.10	*RQ-1331	RESISTOR—10 megohm, 1/4 W. carbon (R-3) (Pkg. 5)	.70
RC-5136	CAPACITOR—50 mfd., 150 V.; 30 mfd., 150 V. dry electrolytic (C-22a, 22b)	1.15	*RQ-1339	RESISTOR—2.2 megohm, 1/4 W. carbon (R-3) (Pkg. 5)	.70
RC-6515	CAPACITOR—1000 mfd. band padder (C-3)	.30	*RQ-1385	RESISTOR—5 megohm, 1/4 W. carbon (R-6) (Pkg. 5)	.70
RC-6517	CAPACITOR—"D" band ant. and osc. trimmers (C-5, 6)	.30	RR-773	REFLECTOR—Ballast resistor (BL-42-B) (R-14)	.40
RC-8130	CABLE—Tuning drive cable assembly (Models H-610U, 620U, 630U, 632U)	.15	RR-928	REFLECTOR—Dial scale reflector (Model H-610U)	.35
RC-8508	CARD—Station letter card (Models H-610U, 620U, 630U, 632U)	.15	RR-930	REFLECTOR—Dial scale reflector (Models H-620U, 630U, 632U)	.30
RC-9014	CONE ASSEMBLY—Speaker cone assembly (Models H-600U, 610U)	.80	RS-200	SOCKET—Electrolytic mounting socket (Pkg. 5)	.75
RD-114	DIAL—(All models)	.15	RS-226	SOCKET—Electrolytic mounting socket (Pkg. 5)	.35
RD-115	DIAL—(All models)	.20	*RS-261	SOCKET—Dial lamp socket assembly	.10
RG-302	GROMMET—Tuning shaft drive cord support (Models H-600U, 620U, 630U)	.10	RS-510	SPACER—Station key spacer (Models H-610U, 620U, 630U, 632U)	.10
RH-111	HAIRPIN—Control—Tuning shaft hairpin cotter (Pkg. 10)	.05	RS-511	SLEEVE—Condenser bracket spacer sleeve (Pkg. 10)	.15
RK-054	KNOB—Control knob for all models in brown (Pkg. 3)	.45			

GENERAL INFORMATION
The above listed models are compact six-tube AC-DC superheterodyne receivers employing General Electric Pre-tested tubes. Features of design include the built-in "Beam-a-Scope", 5-inch Dynapower speaker, single-ended tubes in the R.F. and I.F. circuits and automatic volume control. Models H-620U (W & X inc.) also includes four "Feather-touch" tuning keys.
The H-630U and H-632U incorporate four "Feather-touch Tuning" keys and an additional frequency band permitting short-wave reception. All models are built applying the "Beam-a-Scope" principle. Colors are in ivory or onyx respectively. W or X indicate cabinet when operating from a DC source of power, it is necessary to insert the power plug with the proper polarity; otherwise, the receiver will fail to function. If excessive room is required, the receiver is used on AC, reverse the power plug in the receptacle.

ALIGNMENT PROCEDURE

Alignment Frequencies
I.F.—455 K.C. R.F.—1500 and 580 K.C.
The location of trimmers for the above models are shown in their respective diagrams, Figs. 1 and 2.

I.F. Alignment

Connect an output meter across the voice coil. Rotate the condenser completely to the first dial mark. Completely close the gang condenser plates and set the dial pointer to the first dial mark at the low end of the scale. Turn the band switch to "B" band on the two band receivers. C and apply signal to the set test oscillator. Adjust L-3 through a .05 mfd. capacitor. Do not remove the 6S47 grid lead. Keep the test oscillator output as low as a readable meter reading will permit. Adjust all I.F. trimmers for maximum meter reading.

R.F. Alignment

(1) All models.
Apply a 1500 K.C. signal either through a standard I.F. amplifier or through a signal generator through an additional loop connected to the generator output which can be magnetically coupled to the receiver. Align (C-2) at 1600 K.C. and peak (C-1) for maximum output. Change signal to 580 K.C. and tune receiver to signal. Peak (C-3) on the 580 K.C. signal by rocking the gang condenser. Retrim at 1500 K.C.

(2) Models H-620U, 630U and 632U

Turn the band switch to "B" band after plugging signal Peak (C-3) while peaking the gang condenser. The image of the 18 M.C. signal should be heard at approximately 17 M.C.

Special Service Information

The following data will be very useful to servicemen equipped with vacuum tube voltmeters or similar voltage measuring instruments.

- (1) Stage Gains.
Antenna to Converter Grid.....2.7 at 1000 K.C.
Converter Grid to 6SK7 Grid.....29 at 455 K.C.
6SK7 Grid to 6SQ7 Diode Plate.....37 at 455 K.C.
- (2) Audio Gain.
.05 volts, 400 cycle signal across volume control with control set to maximum will give approximately 1/2 watt output at speaker.
- (3) DC voltage developed across oscillator grid leak averages 18 volts.

†Variations of +10% - 20% permissible.

*Used on previous models.
†Used on previous models. Apply to models in ivory (W) and onyx (X) excepting cabinets, back covers, knobs, and keys. When ordering these items specify color as well as stock number.

(Prices Subject to Change without Notice)

COIL RESISTANCE CHART

Coil	Section	Resistance (Ohms)
"D" antenna coil	Primary	1.2
	Secondary	.04
"B" oscillator coil	C-3 to minus B	5
"D" oscillator coil	C-4 to minus B	1.2
1st I.F. transformer	Primary	32.4
	Secondary	32.4
2nd I.F. transformer	Primary	32.4
	Secondary	32.4
Output transformer	Primary	194
	Secondary	4

GENERAL ELECTRIC CO.

MODEL HJ612
Schematic, Voltage, Socket
Trimmers, Gain, Alignment

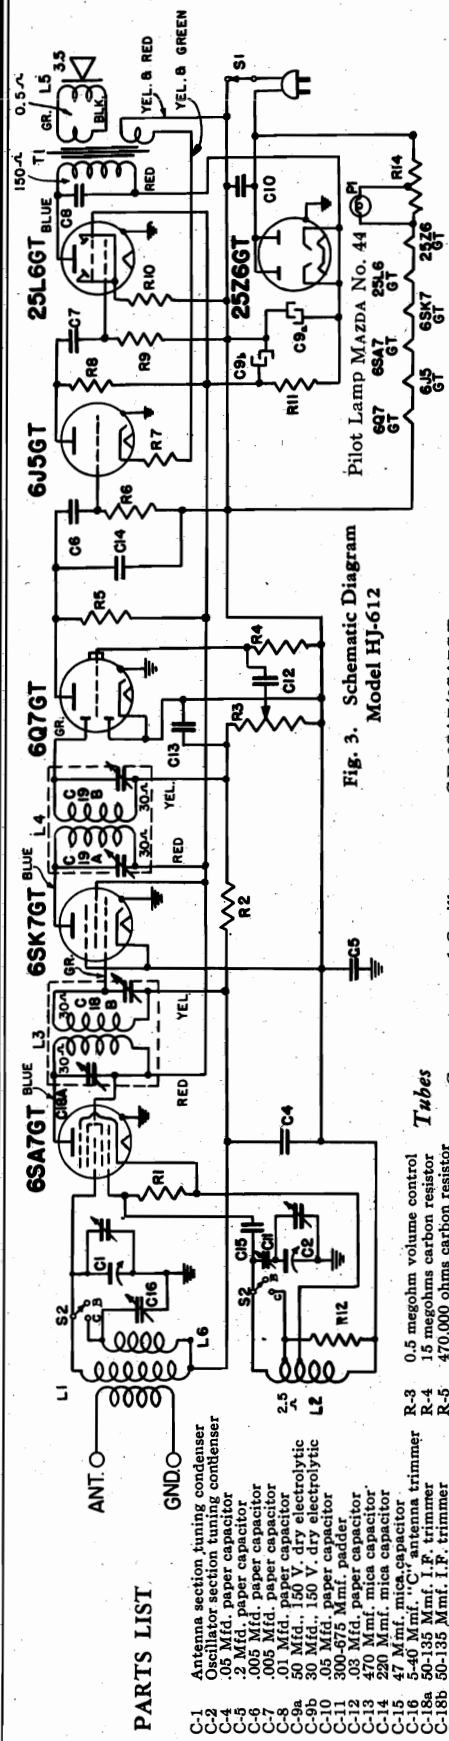


Fig. 3. Schematic Diagram Model HJ-612

Intermediate Frequency..... 455 KC

Tubes

- R-3 0.5 megohm volume control
- R-4 15 megohms carbon resistor
- R-5 470,000 ohms carbon resistor
- R-6 1.0 megohms carbon resistor
- R-7 33,000 ohms carbon resistor
- R-8 39,000 ohms carbon resistor
- R-9 470,000 ohms carbon resistor
- R-10 150 ohms carbon resistor
- R-11 1000 ohms 1 W. carbon resistor
- R-12 4700 ohms carbon resistor
- R-13 1500 ohms carbon resistor
- R-14 2.2 megohms carbon resistor
- T-1 Output transformer BL-42-B

- C-1 Antenna section tuning condenser
- C-2 Generator section tuning condenser
- C-3 0.01 Mfd. paper capacitor
- C-4 2 Mfd. paper capacitor
- C-5 .005 Mfd. paper capacitor
- C-6 .005 Mfd. paper capacitor
- C-7 .01 Mfd. paper capacitor
- C-8 50 Mfd., 150 V. dry electrolytic
- C-9 30 Mfd., 150 V. dry electrolytic
- C-10 .05 Mfd. paper capacitor
- C-11 .01 Mfd. mica capacitor
- C-12 30 Mfd. Mmf. paddler
- C-13 470 Mmf. mica capacitor
- C-14 220 Mmf. mica capacitor
- C-15 47 Mmf. mica capacitor
- C-16 5-40 Mmf. "C" antenna trimmer
- C-17 50-135 Mmf. I.F. trimmer
- C-18 50-135 Mmf. I.F. trimmer
- C-19 50-135 Mmf. I.F. trimmer
- C-20 50-135 Mmf. I.F. trimmer
- C-21 Beam-a-Scope
- L-1 1500 ohm coil
- L-2 1500 ohm coil
- L-3 1500 ohm coil
- L-4 2nd I.F. transformer
- P-1 Dial lamp, MAZDA No. 44
- R-1 33,000 ohms carbon resistor
- R-2 2.2 megohms carbon resistor

GENERAL INFORMATION

The Model HJ-612 is a compact 6-tube AC-DC super-heterodyne receiver employing General Electric Pre-tested Tubes. Features of design include built-in Beam-a-Scope, airplane-type dial, broadcast and police-amateur-aircraft coverage, and automatic volume control.

When operating from a DC source of power it is necessary to insert the power plug with the proper polarity; otherwise, the receiver will fail to function. If excessive hum is noticed when the receiver is used on AC, reverse the power plug in the receptacle.

ALIGNMENT PROCEDURE

I.F. Connect an output meter across the voice coil. Rotate the volume control to maximum. Completely close the gang condenser plates and set the dial pointer to the first dial mark at the low end of the scale. Throw the band switch to "BC" (up).

Set test oscillator to 455 KC and apply signal to the control grid of the 6SA7 tube through a .05 mfd. capacitor. Do not remove the 6SA7 grid lead. Keep the test oscillator output as low as a readable meter reading will permit. Adjust all I.F. trimmers for maximum meter reading.

R.F. Apply a 1500 KC signal either through a standard I.R.E. dummy to the antenna terminal or through an additional loop connected to the signal generator output which can be magnetically coupled to the receiver Beam-a-Scope. When using an I.R.E. dummy antenna for R.F. alignment do not connect a ground lead between the signal generator and the receiver. Align (C-2) at 1500 KC and peak (C-1) for maximum output. Change signal to 580 KC and tune receiver to signal. Peak (C-11) on the 580 KC signal by rocking the gang condenser. Retrim at 1500 KC.

Throw the band switch to "SW" band. Peak (C-16) on 2500 KC.

Power Supply Volts	Frequency (Cycles on AC)	Power Consumption (Watts)
115 AC or DC	25-60	50

Electrical Power Output (117 Line Volts)



Undistorted..... 1.4 watts
Maximum..... 2.5 watts

Tuning Frequency Range

Band "B"..... 540-1620 KC
Band "C"..... 1550-3500 KC

Loud-speaker—"Alnico" Magnet Dynamic

Outside Cone Diameter..... 5 inches
Voice Coil Impedance (400 cycles)..... 3 1/2 ohms

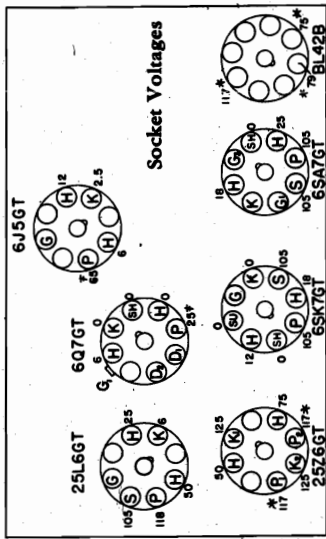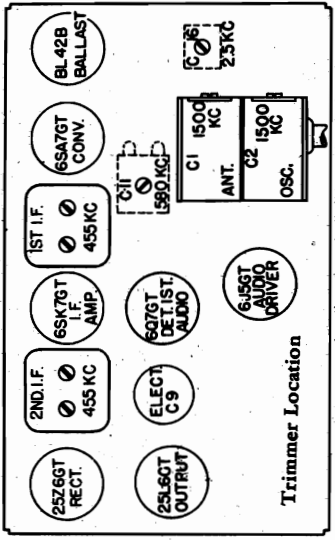

BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED BETWEEN SOCKET TERMINALS AND MINUS B
* MEASURED ON 250 VOLT SCALE OF 1000 OHMS PER VOLT METER
† VOLTS AC
‡ LINE VOLTS-117 AC. GANG CLOSED

SPECIAL SERVICE INFORMATION


The following data will be very useful to servicemen equipped with vacuum-tube voltmeters or similar voltage measuring instruments.

- (1) **Stage Gains**
Antenna Post to Converter Grid..... 2.7 at 1000 KC
Converter Grid to 6SK7 Grid..... 28 at 455 KC
6SK7 Grid to 6Q7/GT Diode Plate..... 87 at 455 KC
Audio Gain
A 400-cycle signal of .05 watt across volume control will give approximately 1/2-watt speaker output. (Volume control turned to maximum.)
- (2) **Gain**
Antenna Post to Converter Grid..... 2.7 at 1000 KC
Converter Grid to 6SK7 Grid..... 28 at 455 KC
6SK7 Grid to 6Q7/GT Diode Plate..... 87 at 455 KC
- (3) **DC voltage developed across oscillator grid resistor (R-1) averages 13 volts at 1000 KC.**
† Variation of +10%, -20% permissible.

MODELS HJ618AC, HJ618DC
Schematic, Voltage, Gain
Alignment, Trimmers, Socket

GENERAL ELECTRIC CO.

MODELS HJ624, HJ628
Alignment

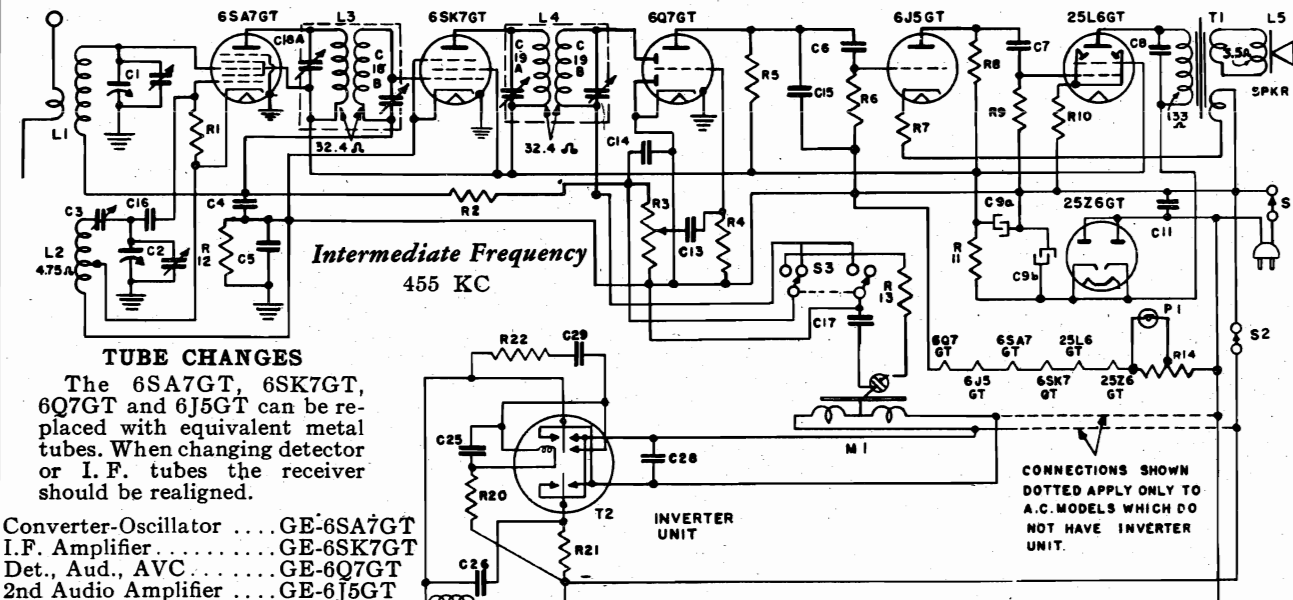

TUBE CHANGES

The 6SA7GT, 6SK7GT, 6Q7GT and 6J5GT can be replaced with equivalent metal tubes. When changing detector or I. F. tubes the receiver should be realigned.

- Converter-Oscillator GE-6SA7GT
- I.F. Amplifier GE-6SK7GT
- Det., Aud., AVC GE-6Q7GT
- 2nd Audio Amplifier GE-6J5GT
- Power Output GE-25L6GT
- Rectifier GE-25Z6GT
- Dial Lamp MAZDA No. 44

GENERAL INFORMATION

Models HJ-618 AC and HJ-618 DC are compact, table-model, radio-phonograph combinations using six General Electric Pre-tested Tubes in a superheterodyne circuit. Model HJ-618 AC is designed to operate on a 60-cycle source of power as shown under electrical specifications. Model HJ-618 DC incorporates the same chassis and phonograph as the Model HJ-618 AC but includes in addition an inverter unit which will allow operation on a DC source of power.

Loud-speaker—"Alnico" Magnetic Dynamic

Outside Cone Diameter 6.5 inches
Voice Coil Impedance (400 cycles) 3.5 ohms
NOTE—In no case should the magnet be removed from the assembled position without remagnetizing after replacing it.

Model	Power Supply (Volts)	Frequency (Cycles on AC)	Power Consumption (Watts)
HJ-618 AC	115 AC	60	75
HJ-618 DC	115 DC		85

Phonograph

Type Pick-up Crystal
Turntable Speed 78 R.P.M.

Special Service Information

The following data will be very useful to servicemen equipped with vacuum-tube voltmeters or similar voltage-measuring instruments.

- (1) Stage Gains
Antenna Post to Converter Grid—4 at 1000 KC†
Converter Grid to 6SK7GT Grid—30 at 455 KC†
6SK7GT Grid to 6Q7GT Det. Plate—100 at 455 KC†
 - (2) Audio Gains
.06 volts, 400 cycles signal across volume control with control set to maximum will give approximately 1/2-watt speaker output.
 - (3) DC voltage developed across oscillator grid resistor (R-1) averages 12 volts.
- † Variations of + 10%, -20% permissible.

FRONT OF CHASSIS

Electrical Power Output



Undistorted 2.0 watts
Maximum 2.5 watts

I.F. ALIGNMENT PROCEDURE

Connect an output meter across the voice coil. Turn the volume control to maximum. Set test oscillator to 455 KC and keep the oscillator output as low as a readable meter reading will permit.

Apply signal to the grid of the 6SK7GT through a .05 mfd. capacitor and align the 2nd I.F. transformer. Repeat the procedure, applying the 455 KC signal to the control grid of the 6SA7GT and aligning the 1st I.F. transformer. Finish by over-all adjustments.

R.F. With gang condenser plates completely closed, set dial pointer to the first mark at the left end of the scale. Apply a 1500 KC signal either through a standard I.R.E. dummy to the antenna terminal or through an additional loop connected to the generator output which can be magnetically coupled to the receiver Beam-a-Scope. Align (C-2) at 1500 KC and peak (C-3) on 580 KC while rocking the gang condenser. Retrim at 1500 KC.

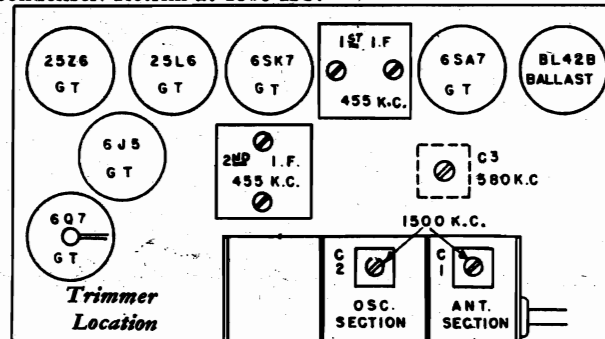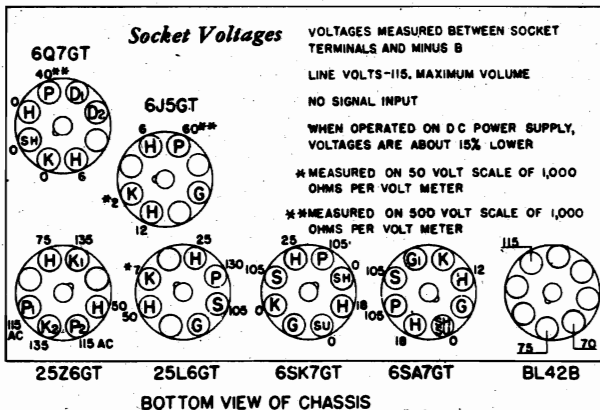

GENERAL ELECTRIC CO.

MODELS HJ-624 AND HJ-628
SERVICE DATA

Electrical Specifications

Model	Rating	Power Supply (Volts)	Frequency (Cycles on AC)	Power Consumption (Watts)
HJ-624		115 AC or DC	25-60	50
HJ-628	A6	115-125	60	75
	A5	115-125	50	75
	C2	115-125	25	90

Electrical Power Output

Undistorted..... 2.0 watts
Maximum..... 2.5 watts

Phonograph

Model..... HJ-628
Type Pick-up..... Crystal
Turntable Speed..... 78 R.P.M.

Loud-speaker

The voice coil is accurately and permanently centered at the factory and should seldom give trouble. In case a voice coil needs centering it will be necessary to replace the entire cone and voice coil assembly.

NOTE—In no case should the magnet be removed from the assembled position without remagnetizing after replacing it.

MODELS HJ-618 AC and HJ-618 DC HJ-624 HJ-628

H-639 AC AND H-639 DC

Stock No.	Description	List Price
CHASSIS ASSEMBLY		
*RB-008	BOARD—Terminal board (2 lug)	\$0.10
*RB-046	BOARD—Terminal board (5 lug)	.15
RB-186	BRACKET—Volume control bracket	.10
*RC-023	CAPACITOR—.005 mfd. 600 V. paper (C-6, 7)	.25
*RC-039	CAPACITOR—.01 mfd. 600 V. paper (C-8)	.25
*RC-060	CAPACITOR—.03 mfd. 600 V. paper (C-13)	.25
*RC-072	CAPACITOR—.05 mfd. 200 V. paper (C-4)	.25
*RC-092	CAPACITOR—.05 mfd. 600 V. paper (C-11)	.30
*RC-123	CAPACITOR—.01 mfd. 400 V. paper (C-17)	.35
*RC-130	CAPACITOR—.02 mfd. 400 V. paper (C-5)	.30
*RC-216	CAPACITOR—.47 mmf. mica (C-16)	.25
*RC-250	CAPACITOR—.220 mmf. mica (C-15)	.25
RC-293	CAPACITOR—.470 mmf. mica (C-14)	.30
*RC-863	CORD—Power cord	.65
RC-1995	CLAMP—Oscillator coil clamp (Pkg. 5)	.10
RC-5145	CAPACITOR—30 mfd. 150 V., 50 mfd. 150 V., dry electrolytic (C-9a, 9b)	.75
RC-6515	CAPACITOR—"B" band padder (C-3)	.30
RC-6530	CAPACITOR—Antenna trimmer (Model HJ-624)	.95
RC-9009	CONE ASSEMBLY—14-inch speaker cone assembly (Model HJ-628)	.95
RC-9010	CONE ASSEMBLY—Speaker cone assembly (Model HJ-624, H-639AC, H639DC)	\$0.90
RC-9010	CONE ASSEMBLY—Speaker cone assembly, Models HJ-618 AC and HJ-618 DC	.90
RE-068	ESCUTCHEON—Dial scale escutcheon	.65
RE-072	ESCUTCHEON—Station letter escutcheon (Model HJ-628)	.10
*RG-016	GRID CLIP—Tube control grid clip (Pkg. 5)	.10
RL-516	LOOP—Beam-a-Scope assembly (L-1) (Model HJ-628)	.90
RL-523	LOOP—Beam-a-Scope and cabinet back assembly (Model HJ-624)	
RL-528	LOOP—Beam-a-Scope and cabinet back assembly (L-1) HJ-618AC, HJ-618DC	\$1.00
RL-2016	COIL—Oscillator coil (L-2)	.25
RN-102	NEEDLE CUP—Phonograph needle cup	.10
*RO-1239	RESISTOR—150 ohms 1/2 W. carbon (R-10) (Pkg. 5)	.70
*RO-1271	RESISTOR—3300 ohms 1/2 W. carbon (R-7) (Pkg. 5)	.70
*RO-1295	RESISTOR—33,000 ohms 1/2 W. carbon (R-1) (Pkg. 5)	.70
*RO-1297	RESISTOR—39,000 ohms 1/2 W. carbon (R-8) (Pkg. 5)	.70
*RO-1307	RESISTOR—100,000 ohms 1/2 W. carbon (R-13) (Pkg. 5)	.70
*RO-1323	RESISTOR—470,000 ohms, 1/2 W. carbon (R-5, 9, 12) (Pkg. 5)	.70
*RO-1331	RESISTOR—1.0 megohm 1/2 W. carbon (R-6) (Pkg. 5)	.70
*RO-1339	RESISTOR—2.2 megohms 1/2 W. carbon (R-2) (Pkg. 5)	.70
*RO-1365	RESISTOR—15 megohms 1/2 W. carbon (R-4) (Pkg. 5)	.70
*RO-1459	RESISTOR—1000 ohms 1 W. carbon (R-11)	.20
RR-773	RESISTOR—BL-42B ballast resistor (R-14)	.40
*RS-238	SOCKET—Octal tube socket	\$0.15
RS-261	SOCKET—Pilot lamp socket assembly	.20
RS-1012	SPEAKER—6 1/4-inch Alnico magnet dynamic speaker	3.25

MODELS HJ618AC, HJ618DC
MODELS HJ624, HJ628
MODELS H639AC, H639DC
Parts, Phono. Switch

RS-1014	SPEAKER—14-inch Alnico magnet dynamic speaker (Model HJ-628)	6.00
RT-341	TRANSFORMER—1st I.F. transformer (L-3)	.80
RT-342	TRANSFORMER—2nd I.F. transformer (L-4)	.80
RT-475	TRANSFORMER—Output transformer (T-1)	1.00
RT-954	TERMINAL—Speaker contact terminal (Pkg. 10)	.10
RV-078	VOLUME CONTROL—.05 megohm volume control (R-3)	.80
RX-062	ASSEMBLY—Speaker mounting assembly	.16


CONDENSER AND DIAL SCALE

RC-7017	CONDENSER—Tuning condenser and reflector assembly (C-1, 2)	5.80
RD-415	DRUM—Tuning or volume control drum	.20
RF-752	FASTENER—Dial and window snap fastener (Pkg. 25)	.10
RK-209	KEY—Feathertouch tuning key for extreme left station selector	.15
RK-214	KEY—Feathertouch tuning key for all station selectors except for one on left	.10
RL-937	BINDING LUG—Station pin binding lug (Pkg. 10)	.10
RP-154	PIN—Station key adjusting pin (Pkg. 10)	.10
RP-155	POINTER—Dial scale pointer	.15
RP-156	PLATE—Reflector plate	.10
RP-313	PULLEY—Wooden idler pulley	.05
RP-314	PULLEY—Pointer drive pulley and "C" washer	.15
RS-464	SPRING—Drum tension spring (Pkg. 10)	.05
RS-470	SPRING—Drive cord idler pulley tension spring	.05
RW-043	WINDOW—Dial scale window	.15


STONE ARM AND SWITCH ASSEMBLY
Except Model HJ-624

*RC-123	CAPACITOR—.01 mfd. 400 V. paper (C-17)	.35
RP-505	PICKUP—Crystal pickup and leads	5.40
*RO-1307	RESISTOR—100,000 ohms 1/2 W. carbon (R-13) (Pkg. 5)	.70
*RO-1315	RESISTOR—220,000 ohms 1/2 W. carbon (R-15) (Pkg. 5)	.70
RS-472	SNAP RING—Tone arm spindle snap ring	.10
*RS-854	SCREW—Motor power switch set screw (Pkg. 10)	.25
RS-876	SCREW—Needle clamping screw	.25
RS-1810	SHIELD—Phono motor power switch shield	.15
RS-3051	SWITCH—Motor power switch and set screw assembly	.60
RS-3052	SWITCH—Phono switch, mounting plate and bushing assembly	2.15
RT-917	TONE ARM—Tone arm and pivot assembly	3.75

(continued)

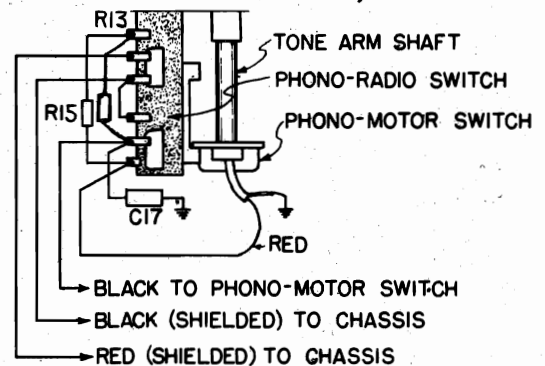

HJ-624
Fig. 3. Phono-Radio Switch Assembly

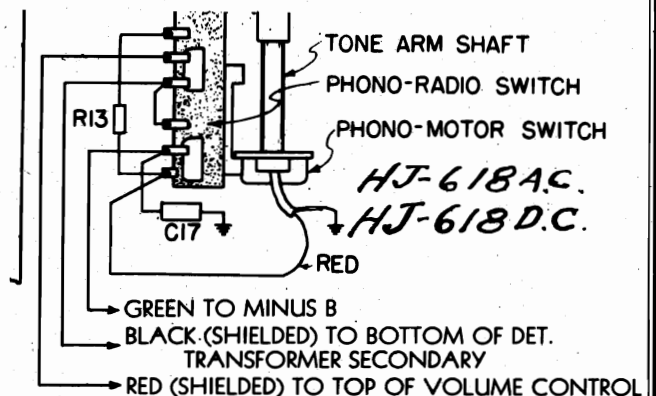

HJ-618AC, HJ-618DC
Fig. 3. Phono-Radio Switch Assembly

MODELS HJ618AC, HJ618DC
 MODELS HJ624, HJ628
 MODELS H639AC, H639DC

GENERAL ELECTRIC CO.

Turntable Parts

INVERTER ASSEMBLY
 (Except Model HJ-624)

(continued)

	(Used only on special installations)			
*RB-008	BOARD—Terminal board (2 lug)10	RS-943	SPINDLE—Turntable spindle and cotter
*RB-013	BOARD—Terminal board (2 lug)10	RS-953	SPACERS—Rotor spacers between bearings (Pkg. 5)
*RC-039	CAPACITOR—.01 mfd. 600 V. paper (C-27)25	RT-924	TURNTABLE—8-inch brown flocked turntable
*RC-123	CAPACITOR—.01 mfd. 400 V. paper (C-25, 29)35	RW-912	WHEEL—Rubber-edged wheel washer, oil felt and cotter
RC-159	CAPACITOR—.05 mfd. 200 V. paper (C-26)40	RX-073	ASSEMBLY—Rotor bearing brackets, felts, bearing
RC-5147	CAPACITOR—.05 mfd. 200 V. line capacitor (C-28)45	RX-074	ASSEMBLY
RL-347	CHOKE—4 uh vibrator choke (L-6)30	RX-075	ASSEMBLY—Motor mounting bushing, washers and
*RQ-1243	RESISTOR—220 ohms 1/2 W. carbon (R-22) (Pkg. 5)70	RX-076	ASSEMBLY—Motor field and winding assembly
RQ-1468	RESISTOR—2200 ohms 1 W. carbon (R-20)20	RX-077	ASSEMBLY—Movable-plate-guide spacer, washer screw
RR-781	RESISTOR—25 ohms 7.4 W. wire wound (R-21)20	RX-078	ASSEMBLY (Pkg. 5)
RS-215	SOCKET—Vibrator socket (Pkg. 5)60		ASSEMBLY—Propeller, cotter, washer assembly
RV-203	VIBRATOR—Inverter unit vibrator (T-2)	5.50		ASSEMBLY—Rotor assembly

MOTOR TURNTABLE
 ASSEMBLY

Model No. 1
 (MODEL HJ-628)
 MODELS HJ-618 AC, HJ-618 DC,
 H-639 AC AND H-639 DC



MOTOR
 TURNTABLE ASSEMBLY
 Model No. 3


HJ-618 AC AND HJ-618 DC
 H-639 AC AND H-639 DC



RB-187	BRACKET—Rubber-edged drive wheel bracket assembly	\$0.20	RB-184	BRACKET—Turntable drive wheel bracket15
RB-188	BRACKET—Rubber-edged idler wheel bracket assembly20	RB-185	BRACKET—Lower motor bearing bracket40
RB-627	BUSHING—Motor mounting rubber bushing (Pkg. 5)	1.00	RF-502	FIELD—60-cycle field stator assembly complete	3.60
RC-5146	CAPACITOR—Pyranol capacitor Cat. 25F14010	RF-503	FIELD—50-cycle field stator assembly complete	3.60
RH-112	HAIRPIN COTTER—Rubber-edged wheel locating hairpin cotter (Pkg. 10)	4.50	RF-504	FRAME—Upper motor frame assembly60
RM-129	MOTOR—60-cycle phono motor only90	RM-127	MOTOR—60-cycle motor assembly complete less turntable	5.85
RP-157	PLATE—Motor mounting plate and spindle bearing assembly30	RM-128	MOTOR—50-cycle motor assembly complete less turntable	6.40
RS-471	SPRING—Idler wheel bracket tension spring (Pkg. 5)30	RP-164	PLATE—Motor mounting plate and bearing assembly90
RS-934	SPINDLE—Turntable spindle and snap ring30	RP-311	PULLEY—60-cycle motor pulley and set-screw20
RT-916	TURNTABLE—8-inch brown flocked turntable	1.60	RP-312	PULLEY—50-cycle motor pulley and set-screw25
RW-910	WHEEL—Rubber-edged wheel35	RR-406	ROTOR—Rotor complete	1.55
			RS-467	SPRING—Turntable drive tension spring10
			RS-875	SETSCREW—Motor pulley setscrew (Pkg. 12)25

MOTOR TURNTABLE
 ASSEMBLY

Model No. 2
 (MODEL HJ-628)
 MODELS HJ-618 AC HJ-618 DC
 H-639 AC AND H-639 DC

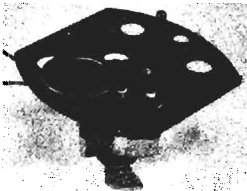

RM-133	MOTOR—60-cycle motor assembly complete	6.25	RX-067	ASSEMBLY—Motor mounting screw, washer and grommet assembly (Pkg. 3)25
RP-165	PLATE—Main plate and turntable shaft bearing assembly90	RX-068	ASSEMBLY—Drive wheel oil retainer, cotter and thrust washer assembly (Pkg. 5)10
RP-166	PLATE—Motor mounting plate30			
RP-167	PLATE—Rubber-edged wheel movable plate and bearing assembly70			
RP-316	PULLEY—60-cycle drive pulley and oil throw washer (Pkg. 2)25			
RS-493	SPRING—Movable plate tension spring (Pkg. 2)10			

*Used on previous receivers.

(Prices subject to change without notice)

NOTE:

When ordering motor-turntable assembly parts, refer to correct model list.

Alignment, Trimmers, Gain
Chassis Wiring, Changes

GENERAL ELECTRIC CO.

MODELS H622, H623
Schematic, Voltage, Socket

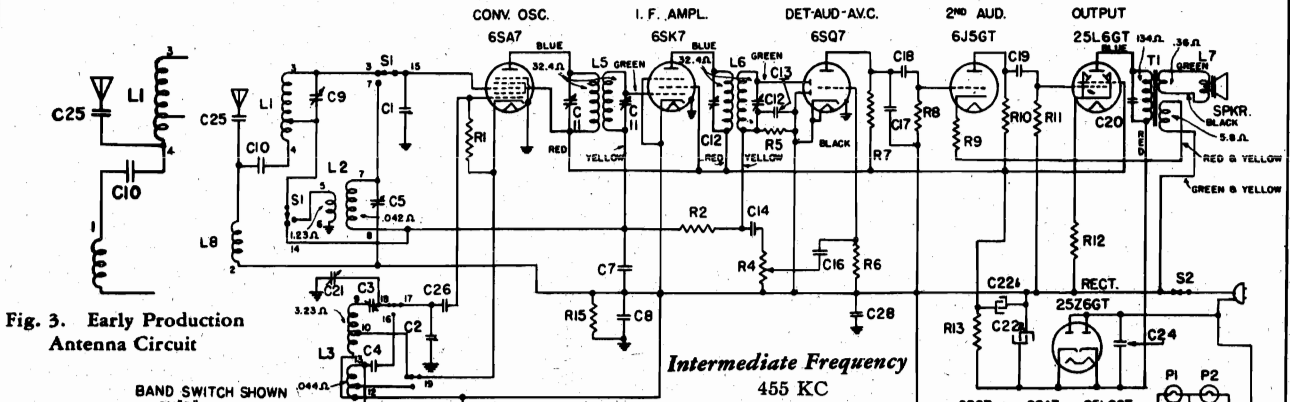


Fig. 3. Early Production Antenna Circuit

Fig. 5. Schematic Diagram Models H-622 and H-623

PRODUCTION CHANGES

Several hundred early production Model H-622 receivers were built with the antenna terminal connected as shown in Fig. 3. The remainder of these receivers were connected as shown in the schematic diagram, Fig. 5. The only difference between the two circuits is in the connection between the lower side of C-25 capacitor and the antenna circuit. Early production circuits had C-25 connected between L-1 and C-10. If hum is experienced when an outside antenna is used on these early production models with Fig. 3 antenna circuit, reverse the power plug in the power supply outlet. Should this procedure fail to attain the required results rewire C-25 into the circuit as shown in the schematic diagram, Fig. 5.

12-39

Power Supply	Frequency	Power Consumption
Volts	(Cycles on AC)	(Watts)
115	25-60	50
AC or DC		

Electrical Power Output (117 Line Volts)

Undistorted.....	1.4 watts
Maximum.....	2.5 watts

Loud-speaker—"Alnico" Magnet Dynamic

Outside Cone Diameter.....	6 1/2 inches
Voice Coil Impedance (400 cycles).....	3 1/2 ohms

Special Service Information

The following data will be very useful to servicemen equipped with vacuum-tube voltmeters or similar voltage-measuring instruments.

- Stage Gains
Antenna Post to Converter Grid..... 2.7 at 1000 KC
Converter Grid to 6SK7 Grid..... 28 at 455 KC
6SK7 Grid to 6SQ7 Diode Plate..... 87 at 455 KC
- Audio Gain
A 400 cycle signal of .05 volts across volume control will give approximately 1/2 watt speaker output. (Volume control turned to maximum.)
- DC voltage developed across oscillator grid resistor (R-1) averages 13 volts at 1000 KC.
†Variation of +10%, -20% permissible.


ALIGNMENT PROCEDURE

I.F. Connect an output meter across the voice coil. Rotate the volume control to maximum. Completely close the gang condenser plates and set the dial pointer to the first dial mark at the low end of the scale. Turn the band switch to "B" band (counterclockwise).


Set test oscillator to 455 KC and apply signal to the control grid of the 6SA7 tube through a .05 mfd. capacitor. Do not remove the 6SA7 grid lead. Keep the test oscillator output as low as a readable meter reading will permit. Adjust all I.F. trimmers for maximum meter reading.

R.F. Apply a 1500 KC signal either through a standard I.R.E. dummy to the antenna terminal or through an additional loop connected to the signal generator output which can be magnetically coupled to the receiver Beam-a-Scope. Align (C-21) at 1500 KC and peak (C-9) for maximum output. Change signal to 580 KC and tune receiver to signal. Peak (C-3) on the 580 KC signal by rocking the gang condenser. Retrim at 1500 KC.


Turn the band switch to "D" band. Align (C-6) at 18 MC using an 18 MC signal. Peak (C-5) while rocking the gang condenser. The image of the 18 MC signal should be heard at 17.09 MC when (C-6) is on the proper peak.

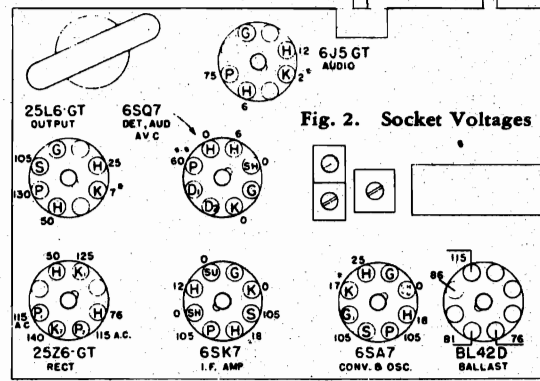

*Measured on 10 volt scale of 20,000 ohms per volt meter.
**Measured on 250 volt scale of 20,000 ohms per volt meter.
Line Volts—115.—No signal input.
Volume at maximum.
When operated on DC power supply, voltages are about 15 per cent lower.
All heater and ballast voltages are AC.

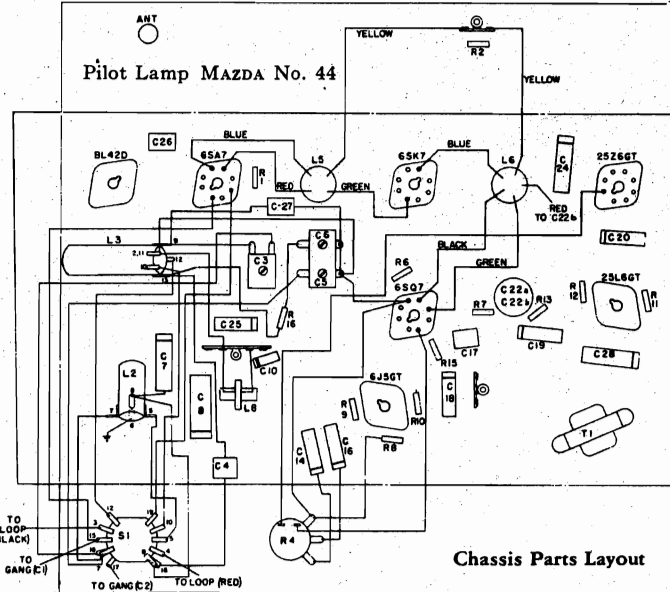

Chassis Parts Layout

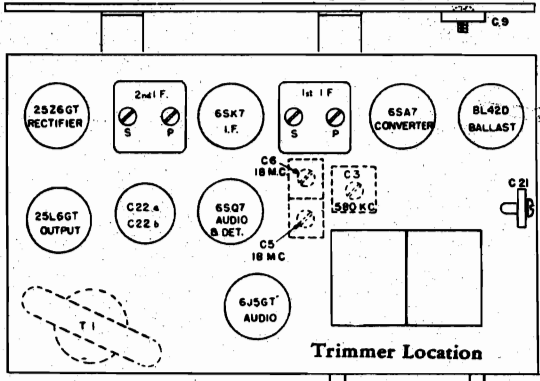

Trimmer Location

MODELS HJ624, HJ628

Schematic, Voltage, Gain
Trimmers, Socket,
Changes

GENERAL ELECTRIC CO.


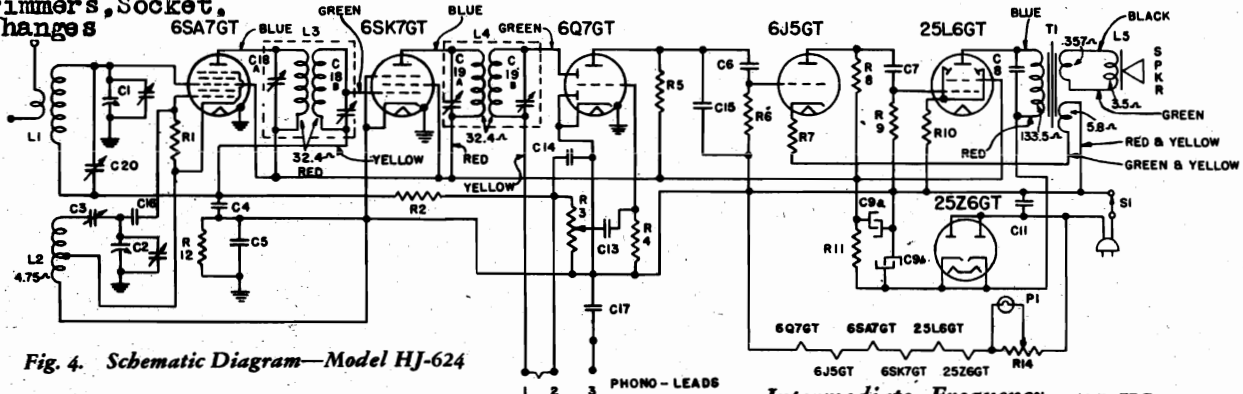


Fig. 4. Schematic Diagram—Model HJ-624

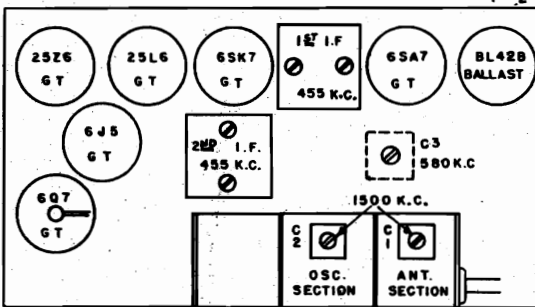

NOTE: On Model HJ-624 the antenna trimmer (C-1) on top the gang condenser is replaced with (C-20) located on the cabinet back cover.

Fig. 1. Trimmer Location

Special Service Information

The following data will be very useful to servicemen equipped with vacuum tube voltmeters or similar voltage measuring instruments.

- (1) Stage Gains
Antenna Post to Converter Grid—4 at 1000 KC†
Converter Grid to 6SK7GT Grid—30 at 455 KC†
6SK7GT Grid to 6Q7GT Det. Plate—100 at 455 KC†
- (2) Audio Gains
.06 volts, 400 cycles signal across volume control with control set to maximum will give approximately ½ watt speaker output.
- (3) DC voltage developed across oscillator grid resistor (R-1) averages 12 volts.

† Variations of +10%, -20% permissible

Intermediate Frequency 455 KC

Loud-speaker—"Alnico" Magnetic Dynamic

Model.....	HJ-624	HJ-628
Speaker Diameter.....	6.5 inches	14 inches
Voice Coil Impedance (400 cycles)		3.5 ohms

Tubes

Converter-Oscillator.....	GE-6SA7GT
I.F. Amplifier.....	GE-6SK7GT
Det., Aud., AVC.....	GE-6Q7GT
2nd Audio Amplifier.....	GE-6J5GT
Power Output.....	GE-25L6GT
Rectifier.....	GE-25Z6GT
Dial Lamp.....	MAZDA No. 44

FRONT OF CHASSIS

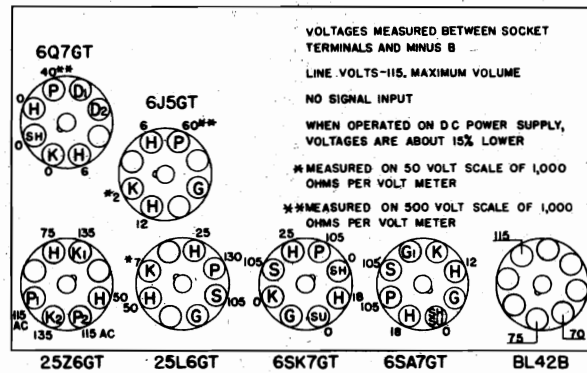


Fig. 2. Socket Voltages

BOTTOM VIEW OF CHASSIS

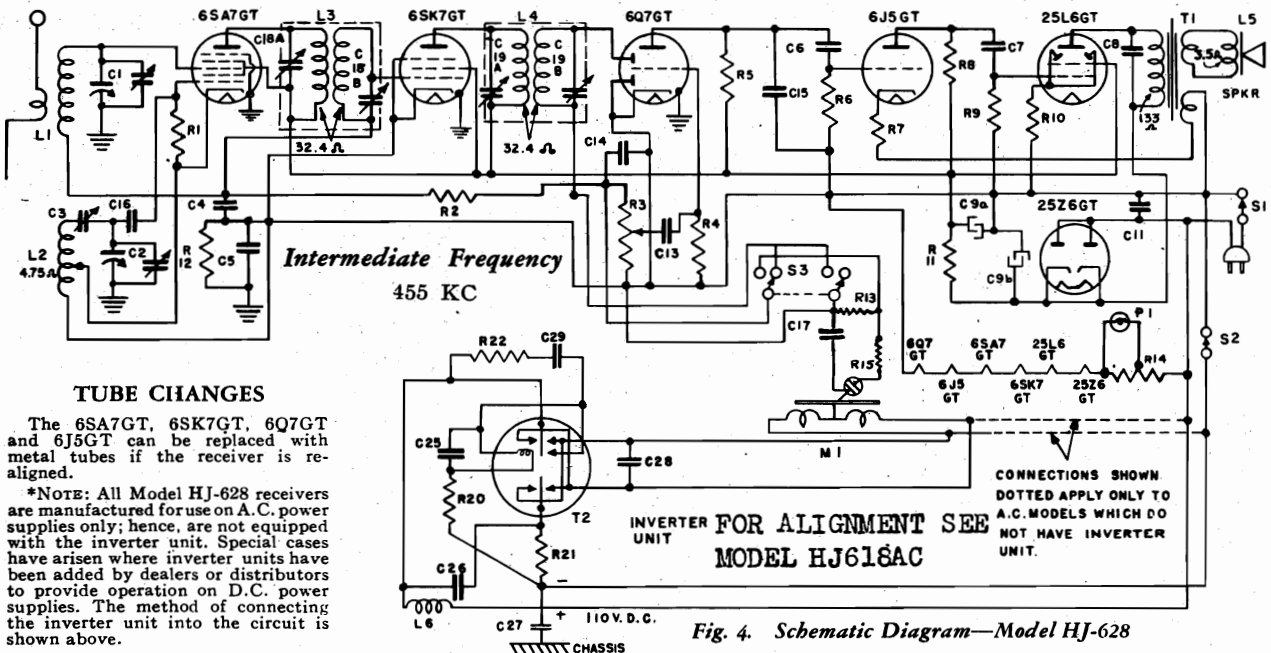


Fig. 4. Schematic Diagram—Model HJ-628

TUBE CHANGES

The 6SA7GT, 6SK7GT, 6Q7GT and 6J5GT can be replaced with metal tubes if the receiver is realigned.

*NOTE: All Model HJ-628 receivers are manufactured for use on A.C. power supplies only; hence, are not equipped with the inverter unit. Special cases have arisen where inverter units have been added by dealers or distributors to provide operation on D.C. power supplies. The method of connecting the inverter unit into the circuit is shown above.

CONNECTIONS SHOWN
DOTTED APPLY ONLY TO
A.C. MODELS WHICH DO
NOT HAVE INVERTER
UNIT.

H630U, H632U (Early)
Schematics, Gain

MODEL H625 (Final)
GENERAL ELECTRIC CO. MODELS H630 to H633 (Final)

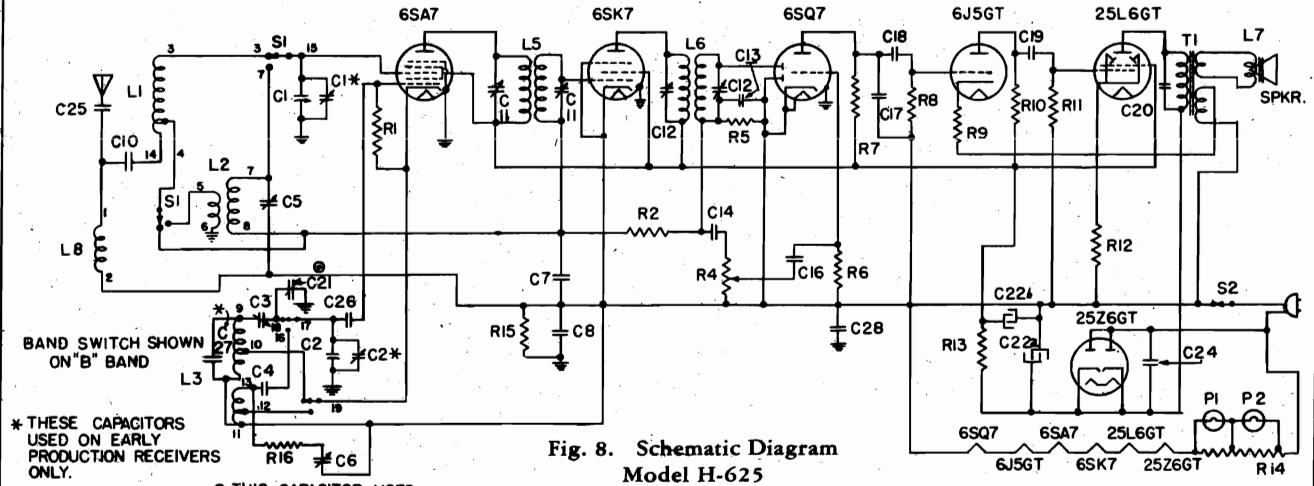


Fig. 8. Schematic Diagram
Model H-625

Type Cabinet

Model H-625..... Console
Models H-630, -631, -632, -633..... Table Model

Tuning Control Drive Ratio..... 4:1

Electrical Specifications

Power Supply Volts	Frequency (Cycles on AC)	Power Consumption (Watts)
115 AC or DC	25-60	50

Tubes

Converter and Oscillator..... GE-6SA7
I.F. Amplifier..... GE-6SK7
Det., Aud., AVC..... GE-6SQ7
2nd Audio Amplifier..... GE-6J5GT
Power Output..... GE-25L6GT
Rectifier..... GE-25Z6GT
Pilot Lamp..... MAZDA No. 44

Electrical Power Output (117 Line Volts)

Undistorted..... 1.4 watts
Maximum..... 2.5 watts*

*Tests made on Model H-625 indicate that the sound output from this receiver is approximately equal to that of an AC receiver using a conventional wound-field loud-speaker rated at 5 watts.

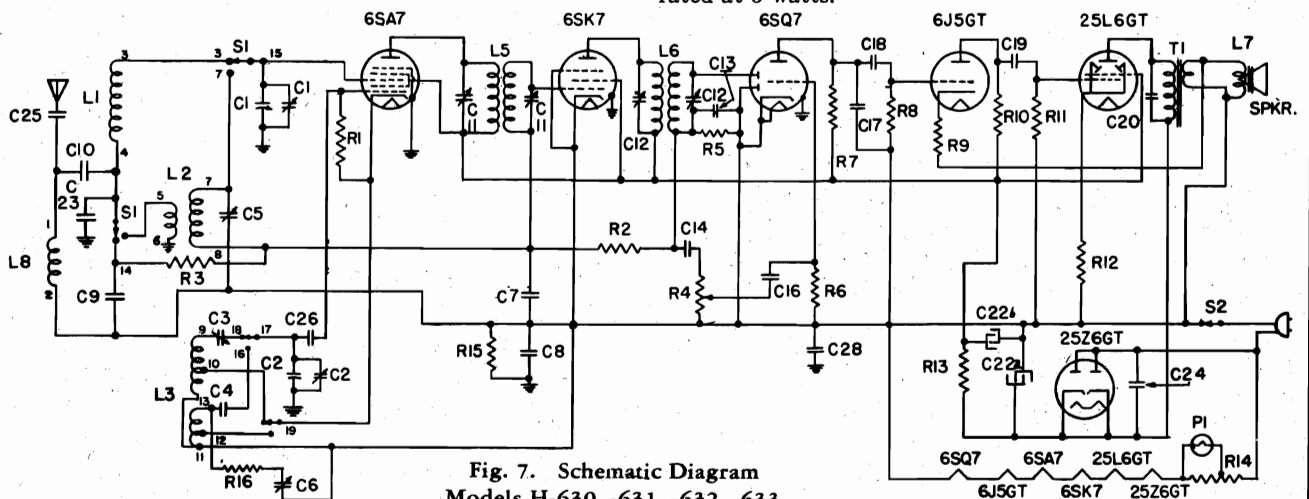


Fig. 7. Schematic Diagram
Models H-630, -631, -632, -633
Models H-630U, 632U (EARLY)


Special Service Information

The following data will be very useful to servicemen equipped with vacuum-tube voltmeters or similar voltage-measuring instruments.

- Stage Gains
Antenna Post to Converter Grid..... 2.7 at 1000 KC
Converter Grid to 6SK7 Grid..... 28 at 455 KC
6SK7 Grid to 6SQ7 Diode Plate..... 87 at 455 KC
- Audio Gain
A 400 cycle signal of .05 volts across volume control will give approximately 1/2 watt speaker output. (Volume control turned to maximum.)
- DC voltage developed across oscillator grid resistor (R-1) averages 13 volts at 1000 KC.

†Variations of +10%, -20% permissible.

ON H-631 & H-633
RECEIVERS SUBSTITUTE
THIS TRANSFORMER (T-1)
FOR ONE SHOWN ABOVE

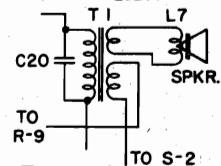

Loud-speaker—"Alnico" Magnet Dynamic

Model..... H-625..... H-630, -631, -632, -633
Outside Cone Diameter—12 in..... 5 in.
Voice Coil Impedance (400 cycles)..... 3 1/2 ohms

Tuning Frequency Range

Band "B"..... 550-1600 KC
Band "D"..... 5800-18,000 KC

Intermediate Frequency..... 455 KC

GENERAL ELECTRIC CO.

MODELS H625
 MODELS H630 to H633
 H630U, H632U
 Alignment, Changes, Trimmers
 Dial Drive Data, Parts

ALIGNMENT PROCEDURE

Alignment Frequencies

- I.F. 455 KC
- Band "B" 1500 and 580 KC
- Band "D" 18,000 KC

The location of trimmers for the above models are shown in their respective diagrams, Figs. 1 and 2.

I.F. Alignment

Connect an output meter across the voice coil. Rotate the volume control to maximum. Completely close the gang condenser plates and set the dial pointer to the first dial mark at the low end of the scale. Turn the band switch to "B" band (counterclockwise).

Set test oscillator to 455 KC and apply signal to the control grid of the 6SA7 tube through a .05 mfd. capacitor. Do not remove the 6SA7 grid lead. Keep the test oscillator output as low as a readable meter reading will permit. Adjust all I.F. trimmers for maximum meter reading.

R.F. Alignment

- (1) Models H-630, -631, -632, -633 Apply a 1500 KC signal either through a standard I.R.E. dummy to the antenna terminal or through an additional loop connected to the signal generator output which can be magnetically coupled to the receiver Beam-a-Scope. Align (C-2) at 1500 KC and peak (C-1) for maximum output. Change signal to 580 KC and tune receiver to signal. Peak (C-3) on the 580 KC signal by rocking the gang condenser. Retrim at 1500 KC.

Turn the band switch to "D" band. Align (C-6) at 18 MC using an 18 MC signal. Peak (C-5) while rocking the gang condenser. The image of the 18 MC signal should be heard at 17.09 MC when (C-6) is on the proper peak.

- (2) Model H-625 The same alignment procedure as above may be followed for this model excepting that final R.F. alignment on "B" band should be made after the chassis and Beam-a-Scope are properly mounted in the cabinet and interconnected. The location of the Beam-a-Scope with respect to the chassis materially affects alignment.


NOTE.—A change exists in the "B" band trimmer arrangement on late production models. "B" band antenna trimmer (C-1) is eliminated. "B" band oscillator trimmer (C-2) is moved from the top of the gang condenser to the chassis deck and renumbered (C-21) (see Fig. 2). In aligning the late production Model H-625 apply 1500 KC signal as described for H-630. Set dial pointer to 1500 KC and align (C-21) for maximum output by rocking the gang condenser. Retune to 580 KC and peak (C-3) on 580 KC signal by rocking gang condenser. Repeat at 1500 KC.

Alignment on "D" band is the same as described for Model H-630.

PRODUCTION CHANGES

Late production models of the H-625 have certain trimmer and coil changes incorporated which should be noted when ordering replacement parts.

1. "B" band trimmers (C-1) and (C-2) on top of gang condenser are removed. (C-1) antenna trimmer is completely eliminated. (C-2) oscillator trimmer is renumbered (C-21) and mounted on chassis deck (see Fig. 2).
2. "D" band antenna coil changed from Stock No. RL-088 (Code—Red) to RL-098 (Code—Orange).

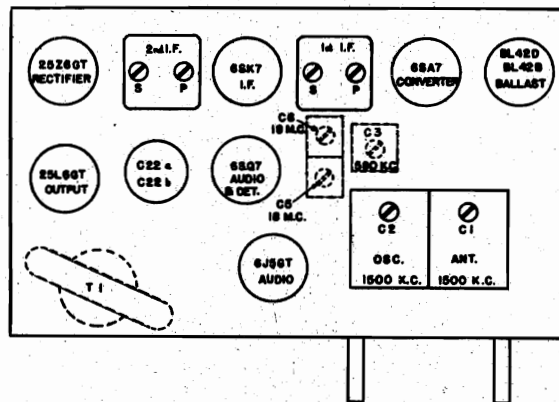

NOTE.—Models H-630, -631, -632, -633 use BL42B Ballast. Model H-625 uses BL42D Ballast.

Fig. 1. Trimmer Location
 Models H-625 (Early), -630, -631, -632, -633

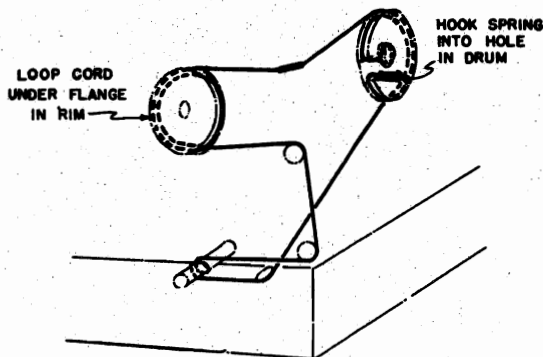


Fig. 9. Dial Drive Stringing Diagram

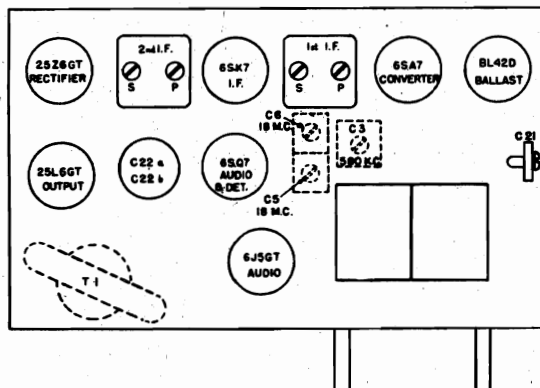


Fig. 2. Trimmer Location
 (Late Production Model H-625)

REPLACEMENT PARTS LIST

Stock No.	Description	List Price
CHASSIS ASSEMBLY		
RA-314	CONDENSER ASSEMBLY—Tuning condenser and drive unit complete with pointer (Models H-630, -631, -632, -633)	\$5.70
RA-315	CONDENSER ASSEMBLY—Tuning condenser and drive unit complete (Model H-625)	5.75
*RB-023	BOARD—Terminal board (4 lugs)	.10
RB-041	BOARD—Terminal board (2 lugs)	.10
RB-182	BRACKET—Beam-a-Scope bracket (Models H-630, -631, -632, -633)	.10
RB-921	BACK COVER—Cardboard cabinet back (Models H-630, -631)	.15
RB-922	BACK COVER—Cardboard cabinet back (Models H-632, -633)	.15
RB-924	BACK COVER—Cardboard cabinet back (Model H-625)	.30

MODELS H634, H638, H640
GENERAL ELECTRIC CO. Schematic, Socket, Trimmers

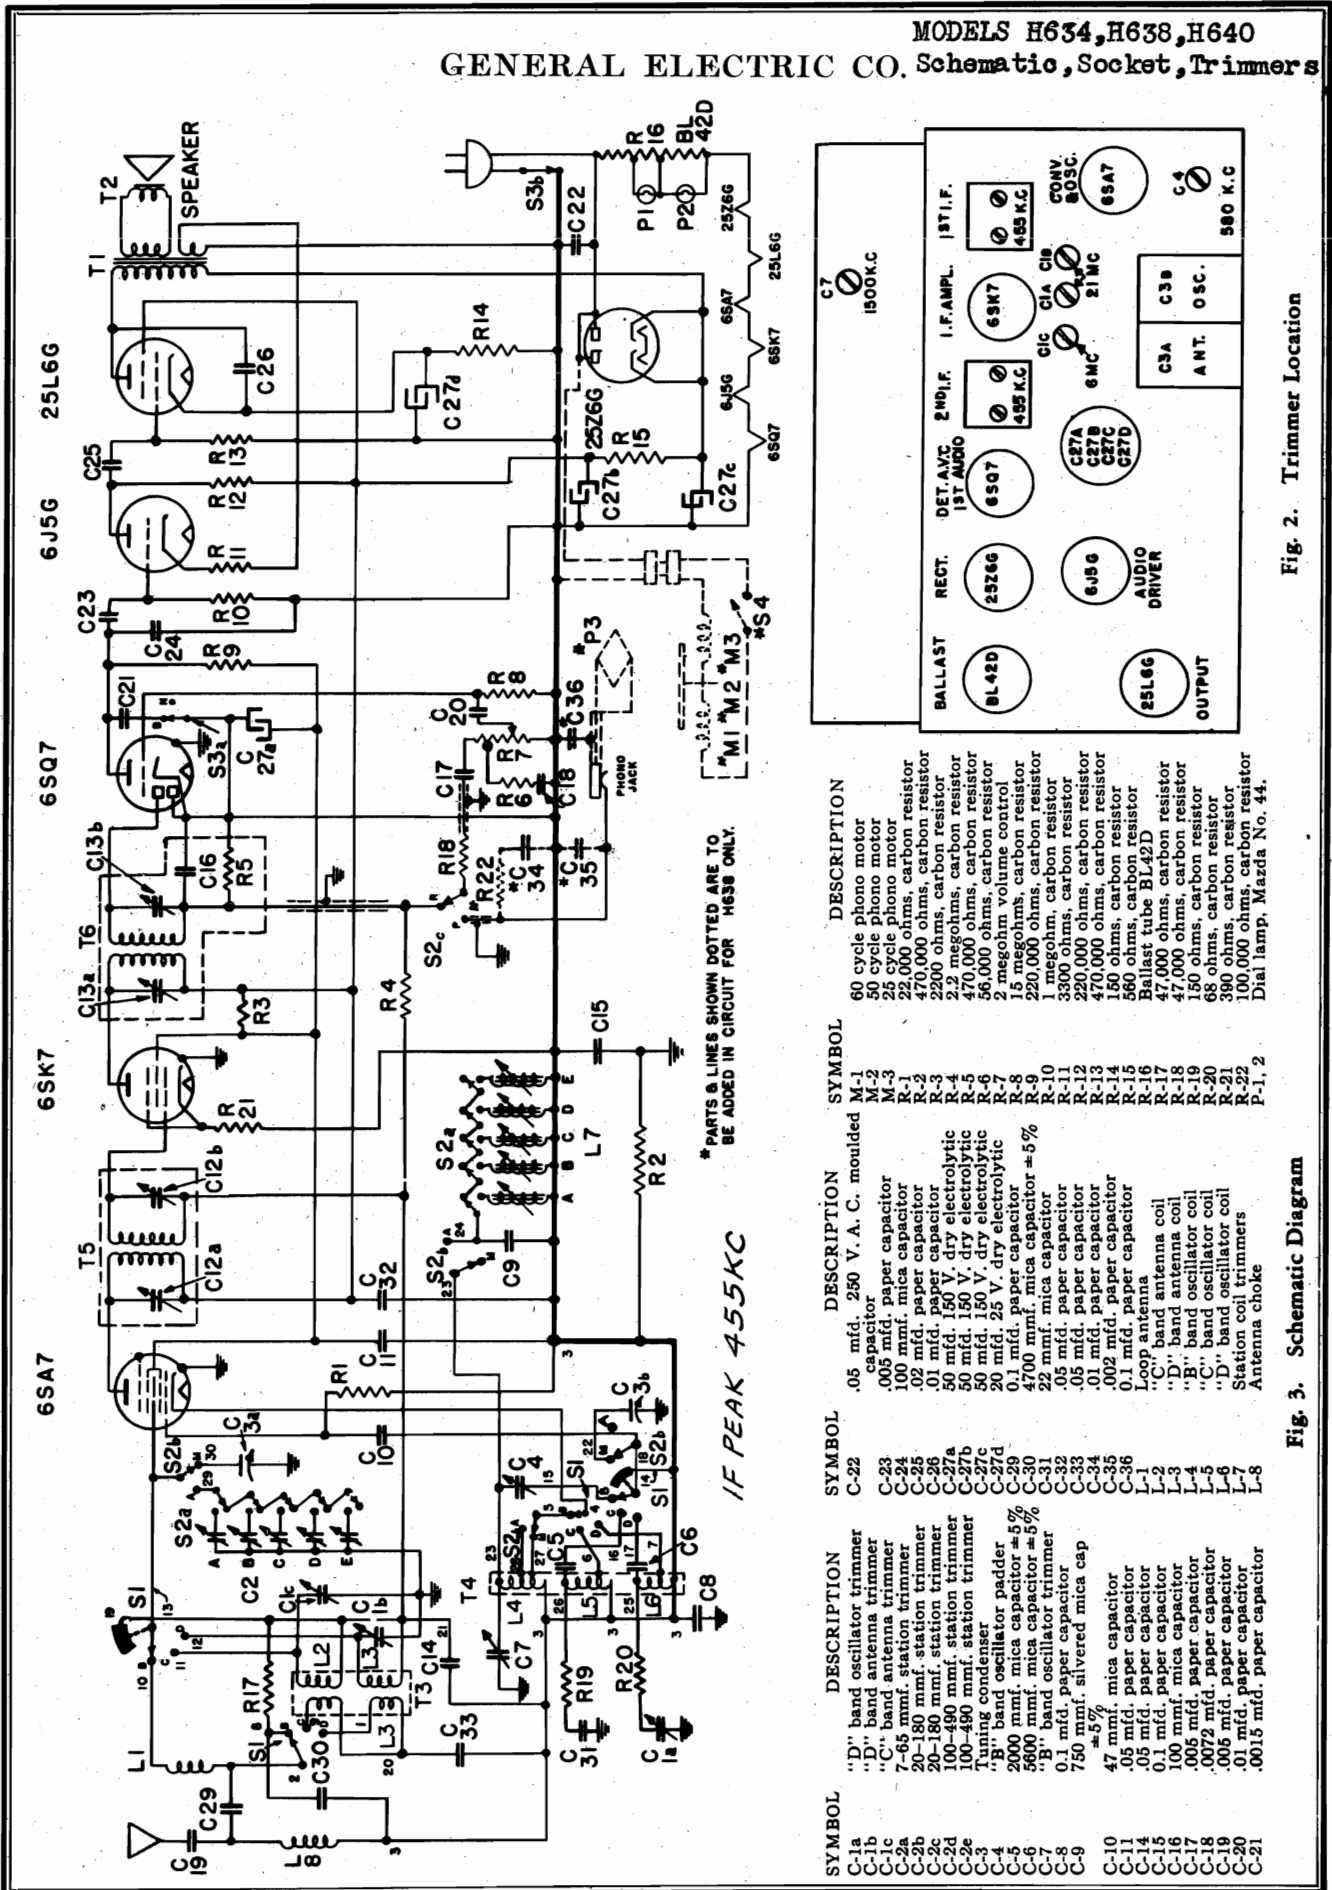



Fig. 2. Trimmer Location

Fig. 3. Schematic Diagram

MODELS H634, H638, H640
Chassis Wiring, Voltage



GENERAL ELECTRIC CO.

Fig. 7. I.R.E. Dummy Antenna

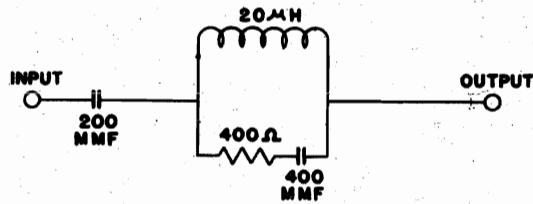

* Volts A.c.
Line Volts-117. No signal input. Max. volume. Gang closed. "B" band.
Volts measured on 20,000 ohms per volt-voltmeter.

Fig. 5. Socket Voltage

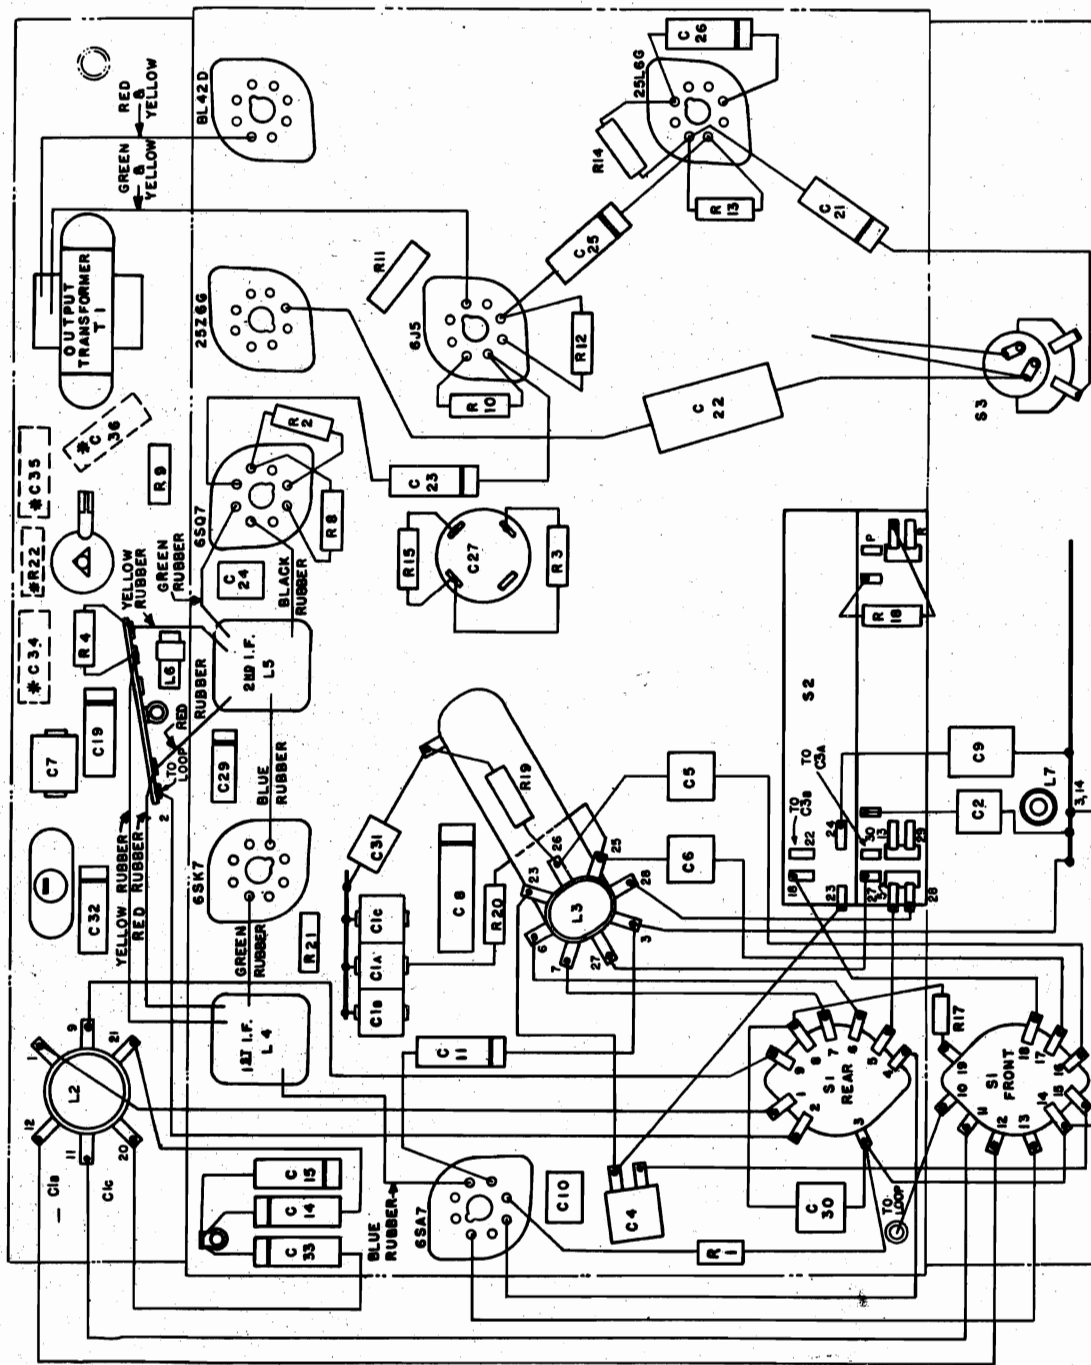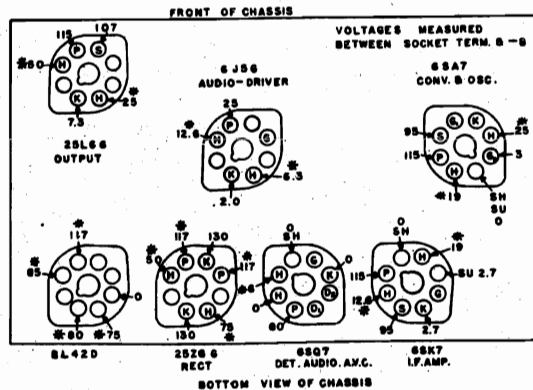

* C34-C35-C36-R22 TO BE ADDED FOR
H-638 PHONO-COMBINATION ONLY

Fig. 4. Chassis Parts Layout

GENERAL ELECTRIC CO.

MODELS H634, H638, H640
Gain, Coils, Notes

SPECIFICATIONS

Physical Specifications

Model	H-634	H-638	H-640
Height	10 1/2 in.	12 1/4 in.	10 1/2 in.
Width	18 in.	19 3/4 in.	19 3/8 in.
Depth	9 3/4 in.	13 3/8 in.	9 1/4 in.
Weight packed	22 lbs.	37 lbs.	22 lbs.

Tuning Control Drive Ratio.....10:1

Electrical Specifications

MODEL	RATING	POWER SUPPLY (VOLTS)	FREQUENCY (CYCLES ON AC)	POWER CONSUMPTION (WATTS)
H-634 H-640		110-120 AC or DC	25-60	55
H-638	A6 A5 C2	115-125 AC 115-125 AC 115-125 AC	60 50 25	75 75 75

Tuning Frequency Range

Band "B"	550-1600 K.C.
Band "C"	2200-6500 K.C.
Band "D"	6500-22000 K.C.

Intermediate Frequency.....455 K.C.

Electrical Power Output

Undistorted	1.75 watts
Maximum	2.7 watts

Tone Control.....2-position

Loud-speaker—"Alnico" Magnet Dynamic

Model	H-634	H-638	H-640
Outside Cone Diameter	5-in.	6 1/2 in.	6 1/2 in.
Voice Coil Impedance	3.5 ohms at 400 cycles		

Phonograph

Model	H-638
Type Pick-up	Crystal
Turntable Speed	78 rpm.

Tubes

Converter and Oscillator	GE-6SA7
I.F. Amplifier	GE-6SK7
Det., Aud., AVC	GE-6SQ7
Audio Driver	GE-6J5G
Output	GE-25L8G
Rectifier	GE-25Z6G
Pilot Lamp	(2) MAZDA No. 44

GENERAL INFORMATION

Models H-634, H-638 and H-640 employ three-band AC-DC receivers of the superheterodyne type using six General Electric Pre-tested Tubes. Features of design include the built-in "Beam-a-Scope," the new "Alnico" dynapower speaker, seven "Feathertouch Tuning" keys, a Visualux dial, iron core oscillator trimmer coils for station keys and automatic volume control.

In addition to the above features, the Model H-638 incorporates a phonograph mechanism for reproducing recordings. The phonograph plays 10-inch or 12-inch records and is manually operated. A constant speed, self-starting, silent electric motor and high-quality crystal pick-up insure realistic reproductions.

Coil System

L-1 is the Beam-a-Scope. On "B" band, L-1 operates as a loop antenna. On "C" and "D" bands, the grid end of L-1 is effectively grounded preventing absorption spots due to loop resonance. T-3 is the "C" and "D" antenna transformer while T-4 is the oscillator transformer for all bands. All band switch and coil terminals are numbered in Fig. 3 and Fig. 4 to facilitate in locating common points.

The following table shows the coils in use for various positions of the band and manual-automatic switch:

Band-switch Position	Antenna Primary	Antenna Secondary	Oscillator Grid	Oscillator Cathode	Remarks
Manual Tuning Band "B"		L-1	L-4	Section 3 to 27 of L-4	C-3a and C-3b tuning condenser in circuit
Automatic Tuning Band "B"		L-1	L-4	Section 3 to 28 of L-4	C-2 and L-7 trimmers and coils in circuit
Band "C"	L-2	L-2	L-5	Section 3 to 6 of L-5	L-1 and L-4 effectively grounded through C-14 and C-4 respectively
Band "D"	L-3	L-3	L-6	Section 3 to 7 of L-6	L-1, L-2 secondary grounded through C-14, L-4, L-5 grounded through C-4 and C-5 respectively

Loud-speaker

The voice coil is accurately and permanently centered at the factory and should seldom give trouble. In case a voice coil needs recentering, it will be necessary to replace the entire cone and voice coil assembly.

Note—In no case should the magnet be removed from the assembled position without remagnetizing before replacing it.

Phonograph or Television Audio Connections

These receivers are equipped with a phono-terminal (pin jack) to allow the convenient connection of record players or television audio channels. General Electric plug, Stock No. RP-145, fits the pin jack. The Model H-638 uses the plug connection from phonograph to radio and this plug may be readily removed to allow use of other record players, sound equipment or television sound converters.

Note—A suitable load consisting of a 100,000-ohm resistor and a .01 mfd. capacitor should be connected across the pick-up leads when using a crystal-type unit.

Alignment Procedure

The alignment procedure is given in table form. Use a standard I.R.E. "dummy" antenna, Fig. 7, in making all R.F. alignments. The relative position of the Beam-a-Scope with respect to the chassis materially affects R.F. alignment on "B" band; therefore, final R.F. alignment on "B" band should be made after the chassis and Beam-a-Scope are mounted in the cabinet.

Special Service Information

The following information will be found very useful in servicing receivers if a vacuum-tube voltmeter or similar voltage-measuring instrument is available.

- (1) Stage Gains
 - (a) Antenna Post to Converter Grid
 - Band "B".....3.5 to 4.0
 - Band "C".....3.0 to 3.5
 - Band "D".....1.3 to 3.0
 - (b) Converter Grid to 6SK7 Grid... .60 at 455 K.C. ‡
 - (c) 6SK7 Grid to 6SQ7 Det. Plate... .35 at 455 K.C. ‡
 - (2) A 400-cycle signal of .05 volts across the volume control will give 1/2 watt speaker output. ‡ (Volume control turned to maximum.)
 - (3) Average DC voltage developed across oscillator grid resistor (R1).
 - Band "B".....6 to 8 volts
 - Band "C".....5 to 10 volts
 - Band "D".....2 to 5 volts
- ‡ Variations of +10%, -20% permissible.

MODELS H634, H638, H640
Alignment, Phono, Data
Dial Drive

GENERAL ELECTRIC CO.

ALIGNMENT PROCEDURE

I.F. Alignment with Oscilloscope

Band Switch Setting	Input Freq.	Point of Input	Dummy Antenna	Trimmer	Comments
1. Band "B"	455 K.C. Sweep	I.F. Grid and Minus B	.05 mfd. or Larger	2nd I.F. Sec. (C-13b) 2nd I.F. Pri. (C-13a)	Gang condenser plates closed—"manual" key depressed—connect audio input of oscilloscope to minus B and to the junction of R-4 and R-18. Adjust trimmers in order mentioned for a single symmetrical curve of maximum amplitude. The resultant curve is shown in Fig. 1.
2. Band "B"	455 K.C. Sweep	Converter Grid and Minus B	.05 mfd. or Larger	1st I.F. Sec. (C-12b) 1st I.F. Pri. (C-12a)	

I.F. Alignment with Output Meter

1. Band "B"	455 K.C. with Modulation	I.F. Grid and Minus B	.05 mfd. or Larger	2nd I.F. Sec. (C-13b) 2nd I.F. Pri. (C-13a)	Gang condenser plates closed—connect output meter across voice coil—keep input signal low and volume control on as far as possible. Adjust all trimmers for maximum output.
2. Band "B"	455 K.C. with Modulation	Converter Grid and Minus B	.05 mfd. or Larger	1st I.F. Sec. (C-12b) 1st I.F. Pri. (C-12a)	

R. F. Alignment

1. Band "B"					Close gang plates adjust pointer to first line at left end of tuning scale. Connect output meter across voice coil—tone control on "Bass" position
2. Band "B"	580 K.C. with Modulation	Antenna Post	I.R.E.	Osc. Padder (C-4)	Set dial pointer to 580 K.C. and tune in signal with (C-4)
3. Band "B"	1500 K.C. with Modulation	Antenna Post	I.R.E.	Osc. (C-7)	Peak trimmer for maximum output while rocking the gang condenser
4. Band "B"	580 K.C. with Modulation	Antenna Post	I.R.E.	Osc. Padder (C-4)	Retrim for maximum output with a low input signal rocking gang condenser
5. Band "C"	6 M.C. with Modulation	Antenna Post	I.R.E.	Ant. (C-1c)	Peak for maximum output with a low input signal
6. Band "D"	21 M.C. with Modulation	Antenna Post	I.R.E.	Osc. (C-1a) Ant. (C-1b)	The image of any "D" band signal should be heard 910 K.C. below signal input when (C-1a) is on proper peak. Example: 15 M.C. image—14.09 M.C. Peak (C-1b) while rocking the gang condenser

PHONOGRAPH MECHANISM (H-638)

The phonoograph mechanism used in this receiver has been designed to be as simple as possible and give long and trouble-free performance. Under normal operating conditions service difficulties should be negligible. Occasionally, however, certain adjustments may be required.

Trip Mechanism

The trip mechanism is of simple design and consists of a latch bar connected to the motor switch and a trip lever. The latch is held closed by means of a spring between the latch bar and the trip lever. The motor switch is mechanically connected to the latch bar so that when the trip mechanism is released, the motor switch is in the "Off" position. Be sure this latch bar mechanism works freely without binding.

The trip is actuated by an adjustable arm on the trip lever. When the eccentric groove in the record swings the tone arm back and forth, it pushes the latch out of engagement.

Crystal Pick-up

The crystal pick-up employs a crystal element which is coupled to a light needle chuck. The needle movement bends the crystal element thus generating voltage by the piezo-electric effect. The voltage developed is dependent upon the needle movement amplitude and the load resistance.

The crystal cartridge is a factory-sealed unit and no adjustments are provided. The cartridge is held in the tone arm by means of two screws. The pick-up and tone-arm assembly should require very little servicing and if treated with reasonable care should perform its function without attention for long periods of time.

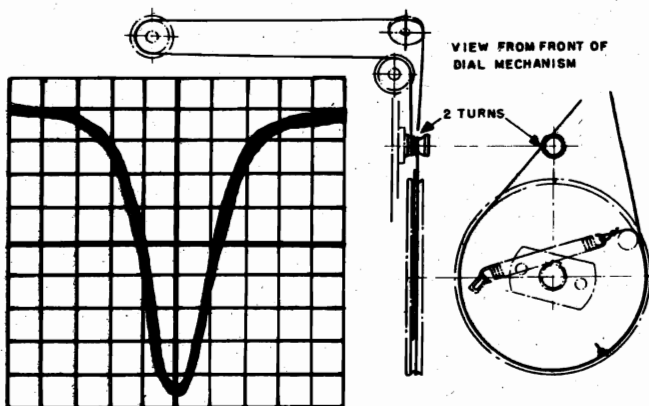


Fig. 1. Over-all I.F. Curve
Taken on G-E Oscilloscope OFM-1

Fig. 6. Dial Drive

Stringing Diagram

GENERAL ELECTRIC CO.

MODELS H708, H736, HJ737
Schematic, Chassis Wiring
Voltage, Socket

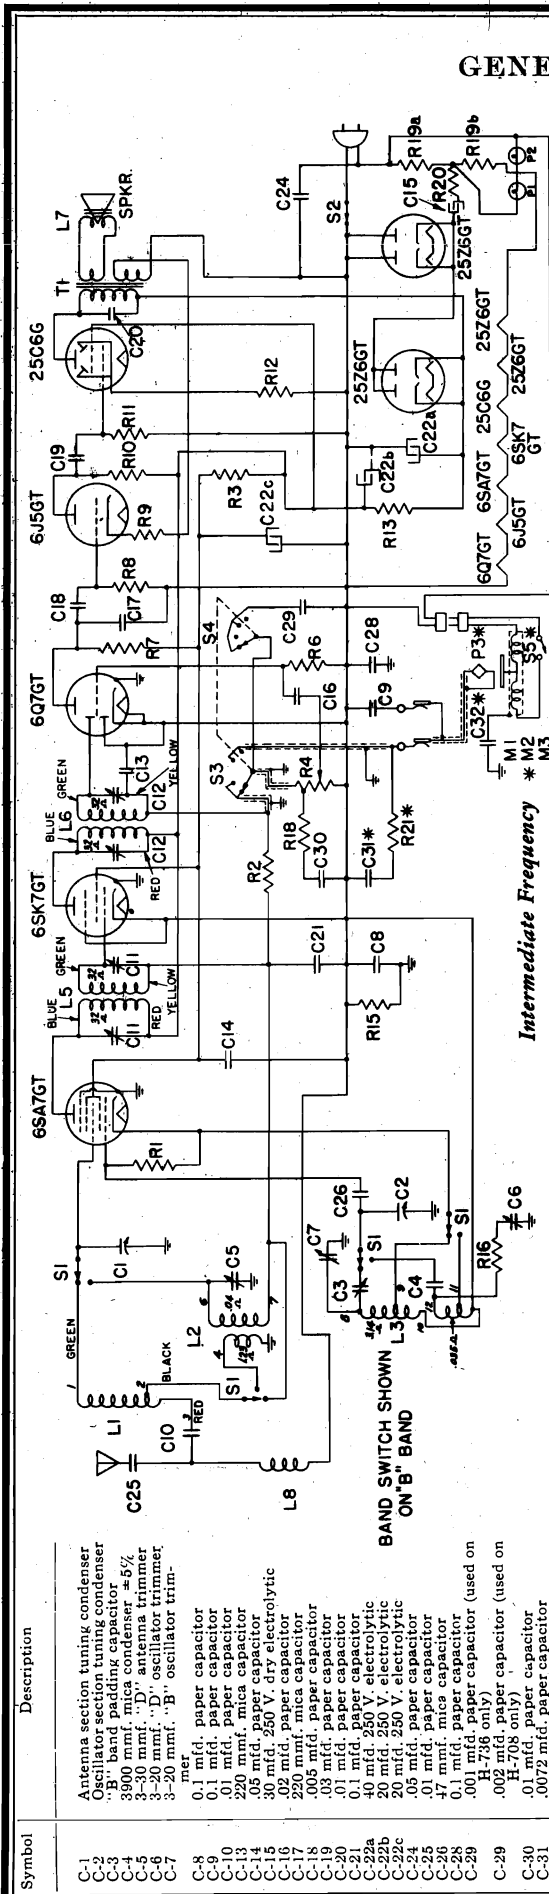


Fig. 5. Schematic Diagram

Electrical Specifications

Model	Rating	Power Supply (Volts)	Frequency (Cycles per second)	Power Consumption (Watts)
H-736		115	25-60	65
H-708	A6	115	60	90
	A5	115	50	90
	C2	115	25	90

Electrical Power Output

Undistorted..... 3.5 watts
Maximum..... 4.5 watts

FRONT OF CHASSIS

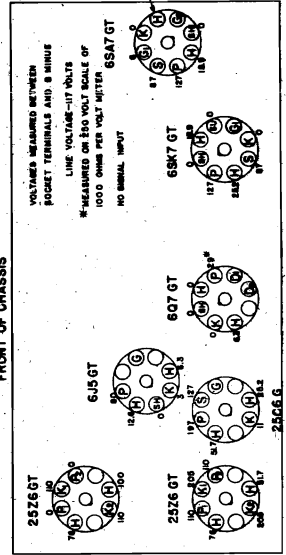


Fig. 2. Socket Voltages

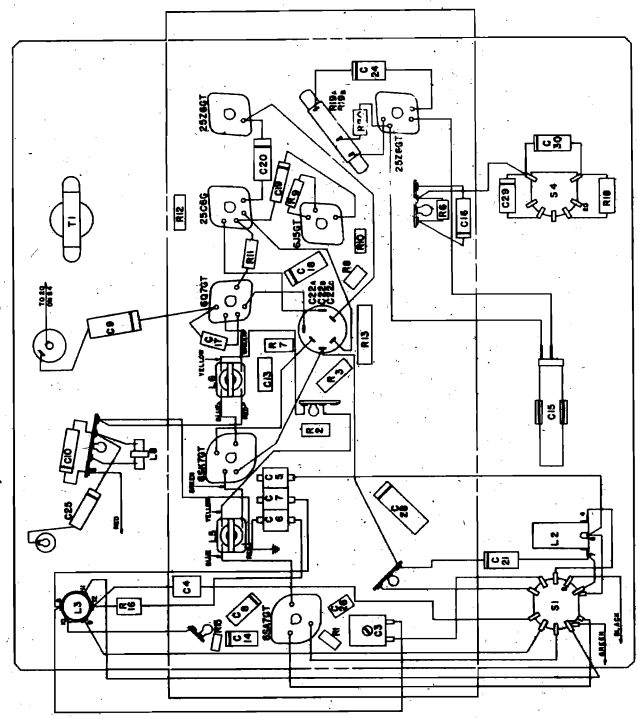


Fig. 4. Chassis Parts Layout

AUTOMATIC RECORD CHANGER (H-708)
SEE (G69) PAGE 10-9.

Model.....	H-708
Type.....	Automatic Record Changer
Record Capacity 10-inch.....	8
12-inch.....	7
Type Pick-up.....	Crystal
Turntable Speed.....	78 R.P.M.

Phonograph

MODELS H708, H736, HJ737

Alignment, Trimmers, Gain Circuit Data, Notes GENERAL ELECTRIC CO.

GENERAL INFORMATION

Models H-736 and H-708 employ two-band AC receivers of the superheterodyne type using seven General Electric Pre-tested Tubes. Features of design include the voltage doubler rectifier circuit, 12-inch Dynapower speaker, built-in Beam-a-Scope, "plug-in" type terminal for connecting a record player or television sound channel, six mechanical type "Feather-touch Tuning" keys and beam power output.

Model H-708 also contains an automatic-record-changing phonograph mechanism. High-quality reproduction is assured with a crystal pick-up and constant-speed, self-starting, silent electric motor.

Voltage Doubler

The voltage doubler circuit used in Models H-736 and H-708 operates in the following manner; refer to Schematic Diagram Fig. 5. When the B minus side of the power line is positive the right-hand 25Z6GT rectifier will conduct charging up electrolytic capacitor (C-15) to near line voltage. On the reverse cycle when the B minus side of the power line is negative, the line voltage will add to the charge on (C-15) and will charge up electrolytic capacitor (C-22a) through the left-hand 25Z6GT rectifier to nearly twice line voltage. The series resistor (R-20) is inserted as a protective device for both rectifier tubes.

Phonograph or Television Sound Connections

These receivers are equipped with a phono-terminal (pin jack) to allow the convenient connection of a record player or television sound channel. General Electric plug, Stock No. RP-145, fits the pin jack. The Model H-708 uses the plug connection from pick-up to radio and this plug may be readily removed to allow use of another record player or a television sound converter.

NOTE: When using a crystal pick-up other than the one supplied with the Model H-708, a suitable load consisting of a 47,000-ohm resistor in series with a .0072-mfd. capacitor should be connected across the pick-up leads.

ALIGNMENT PROCEDURE

Alignment Frequencies

I.F.	455 KC
"B" Band	1500 and 580 KC
"D" Band	18,000 KC

The location of trimmers for the above models is shown in Fig. 1.

I.F. Alignment

Connect an output meter across the voice coil. Rotate the volume control to maximum. Completely close the gang condenser plates and set the dial pointer to the first dial mark on the left-hand end of the broadcast scale. Turn the band switch to "B" band (counterclockwise) and the tone control to "Radio-Bass" (extreme counterclockwise).

Set test oscillator to 455 KC and apply signal to the control grid of the 6SA7GT tube through a .05 mfd. capacitor. Do not remove the 6SA7GT grid lead. Keep the test oscillator output as low as a readable meter reading will permit. Adjust all I.F. trimmers (C-11 and C-12) for maximum meter reading.

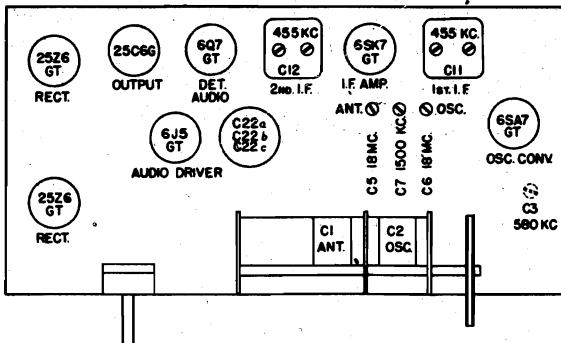


Fig. 1. Trimmer Location

R.F. Alignment

Apply R.F. signals through a standard I.R.E. dummy antenna to the antenna post on the rear apron of the chassis. The Beam-a-Scope must be connected for R.F. alignment and since its relative position with respect to the chassis materially affects the alignment on "B" band, it is advisable to perform the alignment when the chassis and Beam-a-Scope are properly mounted in the cabinet.

Align (C-3) on 580 KC when gang condenser is turned to the 580 KC dial mark. Peak (C-7) on 1500 KC while rocking gang condenser. Repeak (C-3) on 580 KC while rocking gang condenser.

Turn band switch to "D" band and turn gang condenser to 18 MC dial mark. Align (C-6) on 18 MC and peak (C-5) while rocking the gang condenser. The image of any "D" band signal should be heard 910 KC below the input signal when (C-6) is on the proper peak. Example: 18 MC image—17.09 MC.

Special Service Information

The following information will be found very useful in servicing receivers if a vacuum-tube voltmeter or similar voltage-measuring instrument is available:

- (1) Stage Gains
 - (a) Antenna Post to Converter Grid—10 at 1000 KC†
 - (b) Converter Grid to 6SK7 Grid—30 at 455 KC†
 - (c) 6SK7 Grid to 6Q7 Det. Plate—77 at 455 KC†
- (2) A 400-cycle signal of .06 volts across the volume control will give ½ watt speaker output.† (Volume turned to maximum.)
- (3) Average DC voltage developed across oscillator grid resistor (R-1)—6 volts.

† Variations of +10%, -20% permissible.

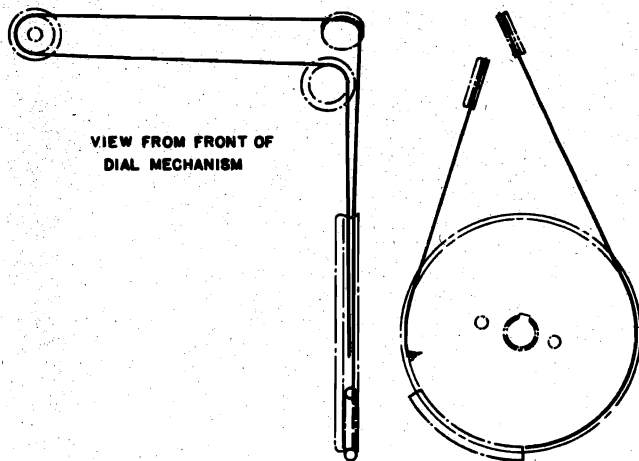


Fig. 3. Drive Cord Arrangement

Loud-speaker—"Alnico" Magnetic Dynamic


Outside Cone Diameter..... 12 inches
Voice Coil Impedance (400 cycles)..... 3.5 ohms

The voice coil is accurately and permanently centered at the factory and should seldom give trouble. In case a voice coil needs recentering, it will be necessary to replace the entire cone and voice coil assembly.

NOTE: In no case should the magnet be removed from the assembled position without remagnetizing after replacing it.

GENERAL ELECTRIC CO.

MODELS HJ905, HJ908, HJ908B
Schematic

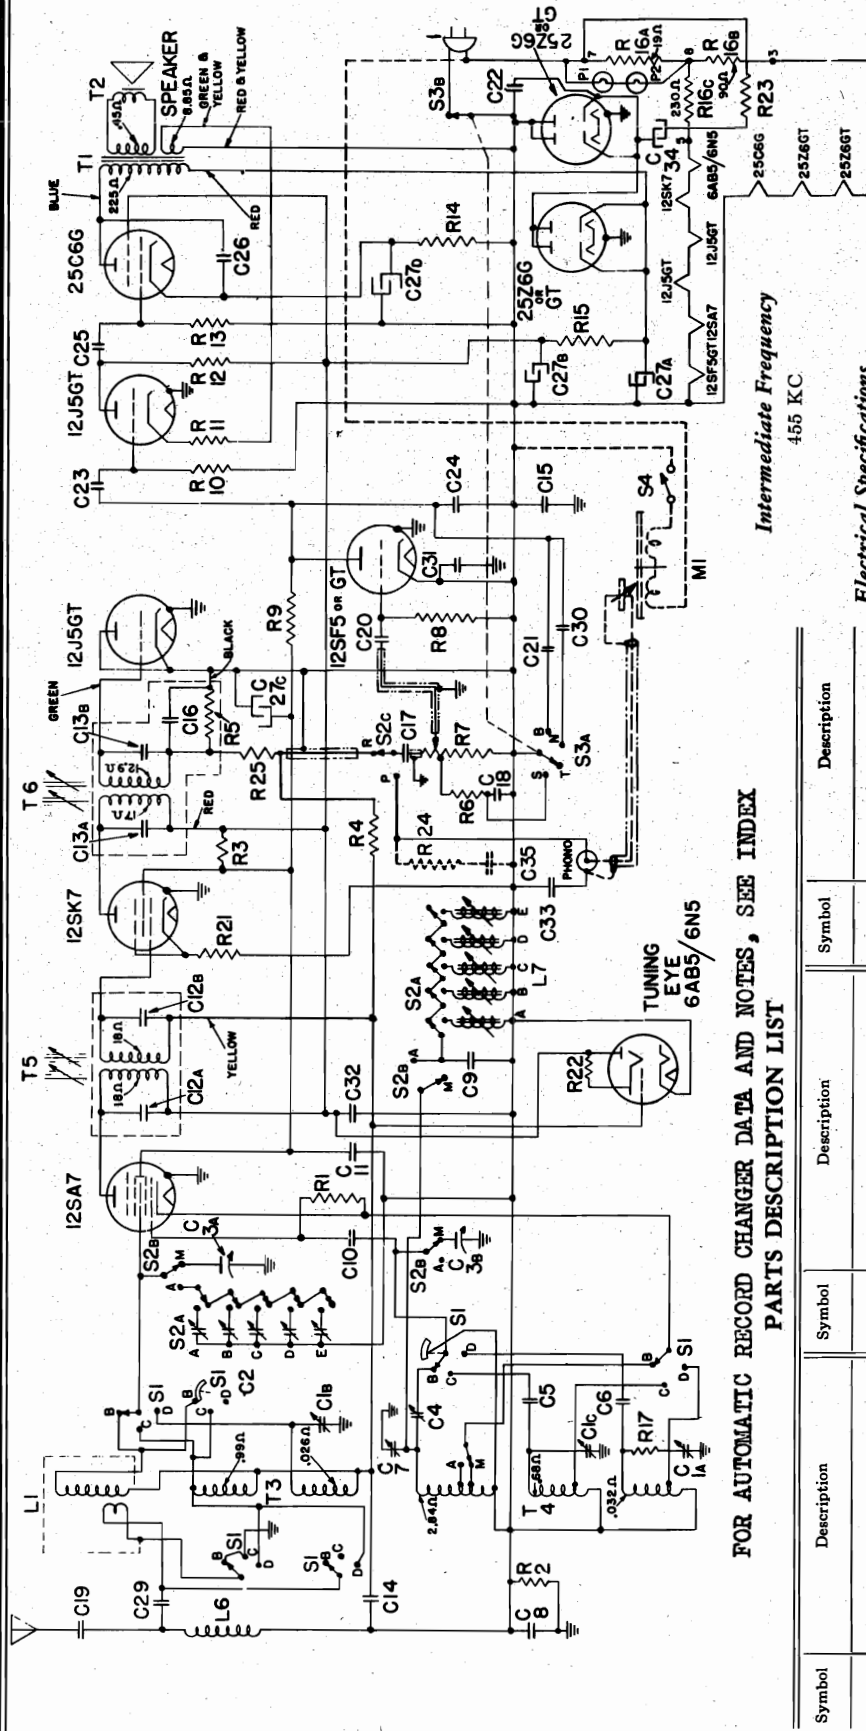

FOR AUTOMATIC RECORD CHANGER DATA AND NOTES, SEE INDEX
PARTS DESCRIPTION LIST

Symbol	Description	Symbol	Description	Symbol	Description
C-1A	"D" band oscillator trimmer	C-22	.05 mfd. paper capacitor	R-8	4.7 megohms carbon resistor
C-1B	"D" band antenna trimmer	C-23	.005 mfd. paper capacitor	R-9	220,000 ohms carbon resistor
C-1C	"C" band oscillator trimmer	C-24	100 mfd. mica capacitor	R-10	1.0 megohm carbon resistor
C-2A	7-65 mmf. station selector trimmer	C-25	.02 mfd. paper capacitor	R-11	3300 ohms carbon resistor
C-2B	20-180 mmf. station selector trimmer	C-26	.01 mfd. paper capacitor	R-12	220,000 ohms carbon resistor
C-2C	100-480 mmf. station selector trimmer	C-27A	40 mfd. 250 V. dry electrolytic	R-13	330,000 ohms carbon resistor
C-2D	100-480 mmf. station selector trimmer	C-27B	20 mfd. 250 V. dry electrolytic	R-14	220 ohms 1 W. carbon resistor
C-3A	Oscillator section tuning capacitor	C-27C	20 mfd. 250 V. dry electrolytic	R-15	3500 ohms 3 W. carbon resistor
C-3B	300-875 mmf. "B" band padder	C-27D	.01 mfd. paper capacitor	R-16A	90 ohms ballast resistor
C-3C	2400 mmf mica capacitor ±5%	C-28	.001 mfd. 1000 V. paper capacitor	R-16B	230 ohms ballast resistor
C-3D	5600 mmf. mica capacitor ±5%	C-29	.01 mfd. paper capacitor	R-17	33 ohms carbon resistor
C-4	"B" band oscillator trimmer	C-30	.05 mfd. paper capacitor	R-18	47 ohms carbon resistor
C-5	.08 mfd. paper capacitor	C-31	0.1 mfd. paper capacitor	R-19	30 ohms 4 W. wire resistor
C-6	750 mmf. silvered mica capacitor	C-32	30 mfd. 250 V. dry electrolytic	R-20	100,000 ohms carbon resistor
C-7	47 mfd. mica capacitor	C-33	.02 mfd. paper capacitor	R-21	47,000 ohms carbon resistor
C-8	10 mfd. paper capacitor	C-34	Beam-a-Scope	R-22	Band change switch
C-9	10 mfd. paper capacitor	C-35	Antenna Scope	S-1	Station selector switch
C-10	0.1 mfd. paper capacitor	L-1	p. 1	S-2A	Manual switch
C-11	0.1 mfd. paper capacitor	L-2	p. 2	S-2B	Phono switch
C-12	100 mfd. mica capacitor	R-1	33,000 ohms carbon resistor	S-2C	Tone switch
C-13	100 mfd. mica capacitor	R-2	470,000 ohms carbon resistor	S-3A	Power switch
C-14	.0075 mfd. paper capacitor	R-3	3300 ohms 1 W. carbon resistor	S-3B	Phono motor switch
C-15	.0075 mfd. paper capacitor	R-4	2.2 megohms carbon resistor	S-4	
C-16	.005 mfd. paper capacitor	R-5	470,000 ohms carbon resistor		
C-17	.005 mfd. paper capacitor	R-6	56,000 ohms carbon resistor		
C-18	.005 mfd. paper capacitor	R-7	2.0 megohms volume control		
C-19	.01 mfd. paper capacitor				
C-20	.0032 mfd. paper capacitor				
C-21					

Electrical Specifications

Model	Rating	Power Supply (Volts)	Frequency (Cycles per Second)	Power Consumption (Watts)
HJ-905		115	25-60	85
HJ-908	A6	110-125	60	95
	A5	110-125	50	95
	C2	110-125	25	110

Electrical Power Output

Undistorted.....	4.5 watts
Maximum.....	6 watts
Loud-speaker—"Alnico" Magnetic Dynamic	
Outside Cone Diameter.....	1.2 inches
Voice Coil Impedance (400 cycles).....	3.5 ohms

MODELS HJ905, HJ908, HJ908B

Chassis Wiring, Gain, Trimmers GENERAL ELECTRIC CO.

Alignment, Voltage, Socket Drive Cord Data

ALIGNMENT PROCEDURE

I.F. Alignment

Connect an output meter across the voice coil. Rotate the volume control to maximum. Completely close the gang condenser plates and set the dial pointer to the first dial mark on the left-hand end of the broadcast scale. Turn the band switch to "B" band (counterclockwise) and the tone control to "Normal."

Set test oscillator to 455 KC and apply signal to the control grid of the 12SA7 tube through a .05 mfd. capacitor. Do not remove the 12SA7 grid lead. Keep the test oscillator output as low as a readable meter reading will permit. Adjust all I.F. trimmers (C-12 and C-13) for maximum meter reading.

R.F. Alignment

Apply R.F. signals through a standard I.R.E. dummy antenna to the antenna post on the rear apron of the chassis. The Beam-a-Scope must be connected for R.F. alignment and since its relative position with respect to the chassis materially affects the alignment on "B" band, it is advisable to perform the alignment when the chassis and Beam-a-Scope are properly mounted in the cabinet.

Align (C-4) on 580 KC when gang condenser is turned to the 580 KC dial mark. Peak (C-7) on 1500 KC while rocking gang condenser. Repeak (C-4) on 580 KC while rocking gang condenser.

Turn band switch to "D" band and turn gang condenser to 21 MC dial mark. Align (C-1A) on 21 MC and peak (C-1B) while rocking the gang condenser. The image of any "D" band signal should be heard 910 KC below the input signal when (C-1A) is on the proper peak. Example: 21 MC image —20.09 MC.

Turn band switch to "C" band and set pointer at 6 MC dial mark. Align (C-1C) on 6 MC while rocking the gang condenser.

Special Service Information

The following information will be found very useful in servicing receivers if a vacuum-tube voltmeter or similar voltage-measuring instrument is available:

FRONT OF CHASSIS

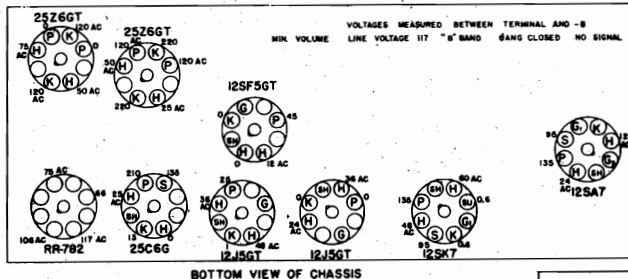


Fig. 2. Socket Voltages

Tuning Frequency Range

Broadcast.....550-1600 KC
Short-wave.....2300-22,000 KC

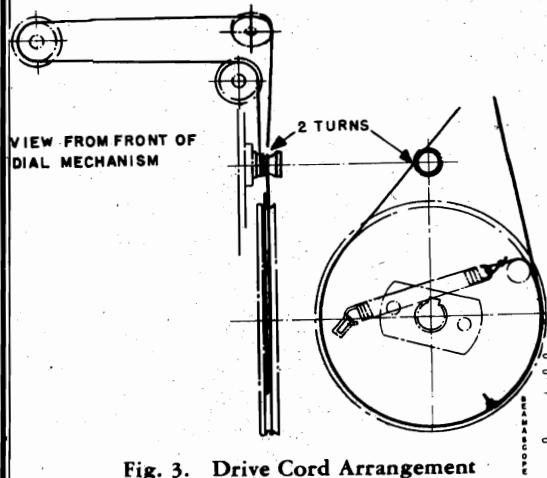


Fig. 3. Drive Cord Arrangement

(1) Stage Gains

- (a) Antenna Post to Converter Grid—12 at 1000 KC†
- (b) Converter Grid to 12SK7 Grid—60 at 455 KC†
- (c) 12SK7 Grid to 12J5GT Det. Grid—85 at 455 KC†

(2) A 400-cycle signal of .04 volts across the volume control will give 1/2 watt speaker output.† (Volume turned to maximum.)


(3) DC voltage developed across oscillator grid resistor (R-1)—11 volts at 1000 KC.

† Variations of +10%, -20% permissible.

Loud-speaker

The voice coil is accurately and permanently centered at the factory and should seldom give trouble. In case a voice coil needs recentering, it will be necessary to replace the entire cone and voice coil assembly.

NOTE: In no case should the magnet be removed from the assembled position without remagnetizing after replacing it.

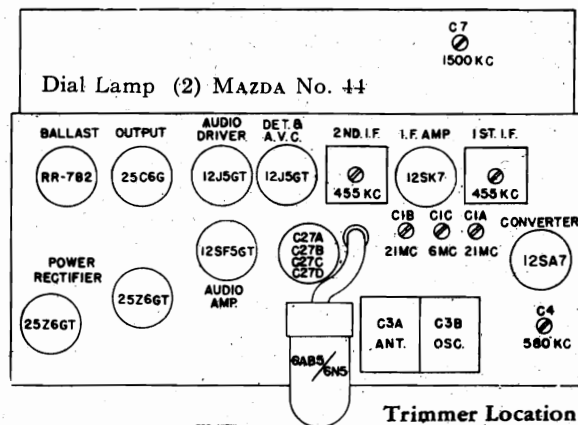

Trimmer Location

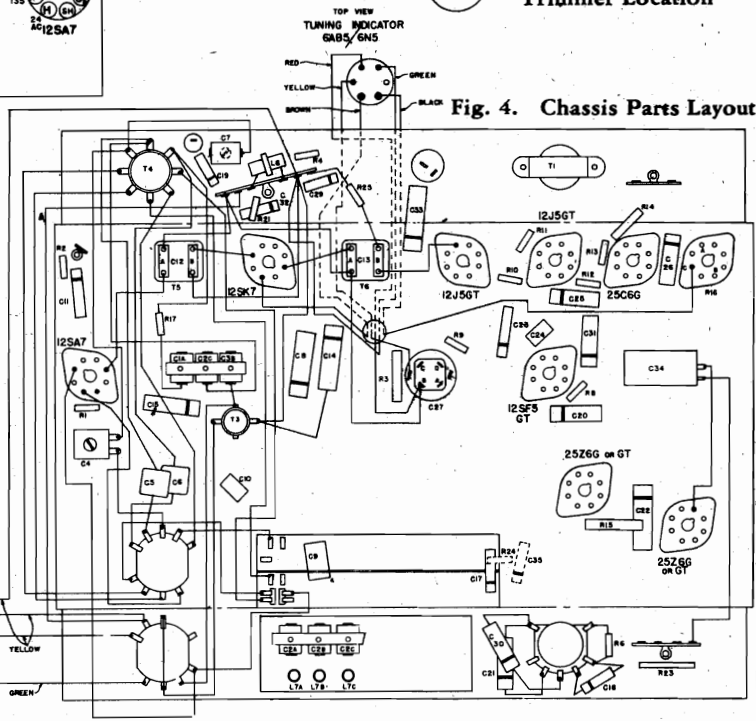



Fig. 4. Chassis Parts Layout

MODEL HM21 Wireless Record Player
Schematic, Adjustments

GENERAL ELECTRIC CO.

MODELS HJ905, HJ908, HJ908B
Circuit Data, Record Changer

AUTOMATIC RECORD CHANGER (HJ-908)

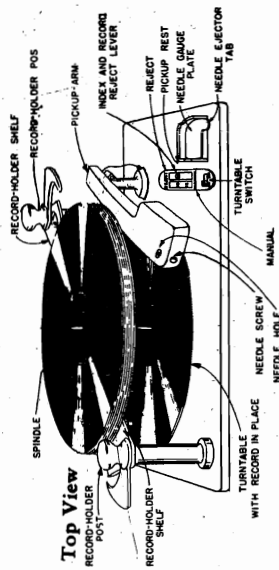


- Phonograph**
 Model..... HJ-908
 Type..... Automatic Record Changer
 Record Capacity
 10-inch..... 8
 12-inch..... 7
 Type Pick-up..... Crystal
 Turntable Speed..... 78 R.P.M.

General Information

Model HJ-908 radio-phonograph combination is equipped with an automatic record changer. The turntable is driven through a friction drive wheel mounted on the turntable spindle. It is important that the drive motor spindle and rubber tires on the main driving wheel and idler pulley be kept clean and free from oil, grease, dirt or any foreign matter. Any quick-drying naphtha is satisfactory for cleaning these parts. The drive motor bearing is lubricated from an oil well filled and sealed at the factory. It should not require lubrication in the field. The turntable is not removable from the spindle without removing the tapered pin "24" which fastens the rubber-tired driving wheel to the spindle. Once the pin is removed, the driving wheel can be shipped off the spindle and the turntable and spindle assembly lifted upward from the motor board. Caution should be exercised not to bend the spindle. The spindle bearing should be oiled and the cup and ball thrust bearing oiled and checked for proper position.

MOTOR BOARD MOUNTING

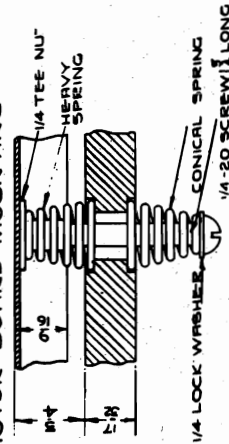

Mounting Details
of Automatic Record Changer

FREQUENCY ADJUSTMENT

To adjust the frequency of the oscillator turn the tuning trimmer which is accessible through a hole in the bottom cover near the power control knob. This is a screwdriver control. Clockwise rotation of the trimmer raises the frequency while counterclockwise rotation lowers the frequency. Since the electrical capacity of the hand may detune the transmitter somewhat if rested on the record player during adjustment, it is best to rest the record player on the edge of a table or bench with the tuning trimmer side of the record player just far enough out from the edge to allow screwdriver adjustment of the tuning trimmer.

MODELS HJ-905, HJ-908. GENERAL INFORMATION

Models HJ-905 and HJ-908 employ three-band AC receivers of the superheterodyne type using nine General Electric Pre-tested Tubes. Features of design include the voltage doubler rectifier circuit, 14-inch Dynapower speaker, built-in Super Beam-a-scope, "plug-in" type terminal for connecting a record player or television sound channel, seven "Feathertouch Tuning" keys and beam power output. Model HJ-908 also contains an automatic-record-changing phonograph mechanism. High-quality reproduction is assured with a crystal pick-up and constant-speed, self-starting, silent electric motor. Model HJ-908B is the same as Model HJ-908 except in bleached mahogany cabinet.

Voltage Doubler

The voltage doubler circuit used in Models HJ-905 and HJ-908 operates in the following manner: refer to Schematic Diagram Fig. 5. When the B minus side of the power line is positive the right-hand 25Z6G1 rectifier will conduct charging up electrolytic capacitor (C-34) to near line voltage. On the reverse cycle when the B minus side of the power line is negative the line voltage will add to the charge on (C-34) and will charge up electrolytic capacitor (C-27A) through the left-hand 25Z6G1 rectifier to nearly twice line voltage. The series resistor (R-23) is inserted as a protective device for both rectifier tubes.

Phonograph or Television Sound Connections

These receivers are equipped with a phono-terminal (pin jack) to allow the convenient connections of a record player or television sound channel. General Electric plug, Stock No. RP-145, fits the pin jack. The Model HJ-908 uses the plug connection from pick-up to radio and this plug may be readily removed to allow use of another record player or a television sound converter.


FEATHERTOUCH TUNING ADJUSTMENTS

When peaking the antenna trimmer of either of the first two left-hand station keys care must be exercised not to open the trimmer so far that tuning to the oscillator frequency results. If this occurs the tuning indicator shadow sector will vanish and a false indication will be given of tuning.

FOR OTHER AUTOMATIC RECORD CHANGER DATA SEE G69 VOL. X PAGE 9.

Electrical Specifications HM-21 Record Player Oscillator

Rating	Power Supply (Volts)	Frequency (Cycles per Second)	Power Consumption (Watts)
A6	115-125	60	30
A5	115-125	50	30

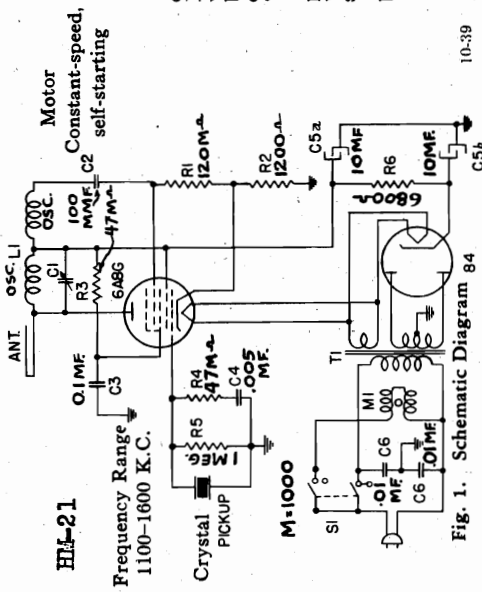

GENERAL INFORMATION

The Model HM-21 Wireless Record Player is a two-tube transmitter using a type 84 tube as a rectifier and a type 6A8G as an oscillator. Audio modulation is applied to the control grid of the 6A8G from a properly loaded crystal pickup circuit. The oscillator operates over a range of 1100-1600 kilocycles and the frequency is adjusted by the tuning trimmer (C-1). This trimmer is set to operate at approximately 1500 K.C. at the factory.


The turntable is driven at 78 revolutions per minute by a constant-speed, self-starting induction motor. The motor is properly lubricated at the factory for long operation and should not require attention under normal weather conditions.

The power control is a three-position switch. When this control is turned to the extreme counterclockwise position, all power is removed from the record player. When switched to the center position, power is applied to both the motor and the transmitter. When turned to the extreme clockwise position, power is still supplied to the transmitter but is removed from the motor. This last position provides a means of stopping turntable rotation without letting the tubes cool down from operating temperature.

MODELS H639AC, H639DC
Schematic, Gain, Voltage

GENERAL ELECTRIC CO.

Socket, Alignment, Trimmers
Phono Sw. Assembly

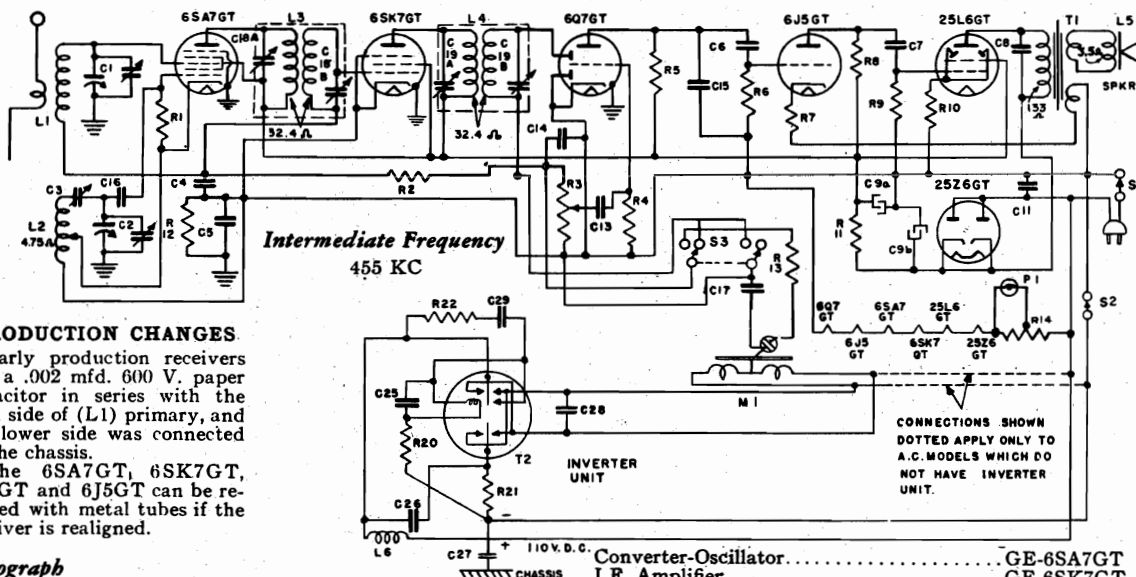

PRODUCTION CHANGES

Early production receivers had a .002 mfd. 600 V. paper capacitor in series with the high side of (L1) primary, and the lower side was connected to the chassis.

The 6SA7GT, 6SK7GT, 6Q7GT and 6J5GT can be replaced with metal tubes if the receiver is realigned.

Phonograph

Models..... H-639 AC and H-639 DC
Type Pick-up..... Crystal
Turntable Speed..... 78 R.P.M.

Special Service Information

The following data will be very useful to servicemen equipped with vacuum tube voltmeters or similar voltage measuring instruments.

- (1) Stage Gains
Antenna Post to Converter Grid—4 at 1000 KC†
Converter Grid to 6SK7GT Grid—30 at 455 KC†
6SK7GT Grid to 6Q7GT Det. Plate—100 at 455 KC†
 - (2) Audio Gains
.06 volts, 400 cycles signal across volume control with control set to maximum will give approximately 1/2 watt speaker output.
 - (3) DC voltage developed across oscillator grid resistor (R-1) averages 12 volts.
- † Variations of +10%, -20% permissible.

FRONT OF CHASSIS

Converter-Oscillator.....	GE-6SA7GT
I.F. Amplifier.....	GE-6SK7GT
Det., Aud., AVC.....	GE-6Q7GT
2nd Audio Amplifier.....	GE-6J5GT
Power Output.....	GE-25L6GT
Rectifier.....	GE-25Z6GT
Dial Lamp.....	MAZDA No. 44

Model	Power Supply (Volts)	Frequency (Cycles on AC)	Power Consumption (Watts)
H-639 AC	115 AC	60	75
H-639 DC	115 DC		85

Electrical Power Output

Undistorted..... 2.0 watts
Maximum..... 2.5 watts


Loudspeaker—"Alnico" Magnetic Dynamic

Outside Cone Diameter..... 6.5 inches
Voice Coil Impedance (400 cycles)..... 3.5 ohms
The voice coil is accurately and permanently centered at the factory and should seldom give trouble. In case a voice coil needs recentering it will be necessary to replace the entire cone and voice coil assembly.



NOTE—In no case should the magnet be removed from the assembled position without remagnetizing after replacing it.

ALIGNMENT PROCEDURE

- I.F.** Connect an output meter across the voice coil. Turn the volume control to maximum. Set test oscillator to 455 KC and keep the oscillator output as low as a readable meter reading will permit.
Apply signal to the grid of the 6SK7GT through a .05 mfd. capacitor and align the 2nd I.F. transformer. Repeat the procedure, applying the 455 KC signal to the control grid of the 6SA7GT and aligning the 1st I.F. transformer. Finish by over-all adjustments.
- R.F.** With gang condenser plates completely closed, set dial pointer to the first mark at the left end of the scale. Apply a 1500 KC signal either through a standard I.R.E. dummy to the antenna terminal or through an additional loop connected to the generator output which can be magnetically coupled to the receiver Beam-a-Scope. Align (C-2) at 1500 KC and peak (C-1) for maximum output. Peak (C-3) on 580 KC while rocking the gang condenser. Retrim at 1500 KC.

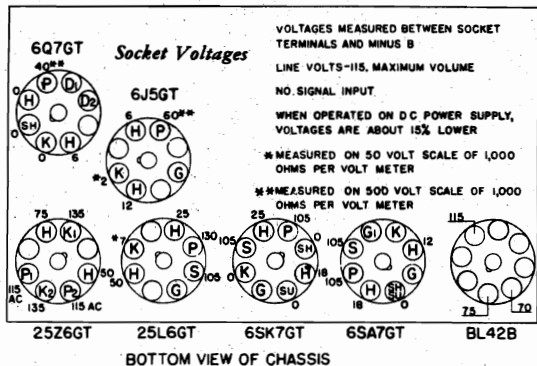


BOTTOM VIEW OF CHASSIS

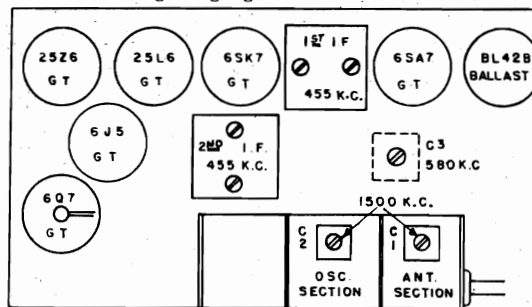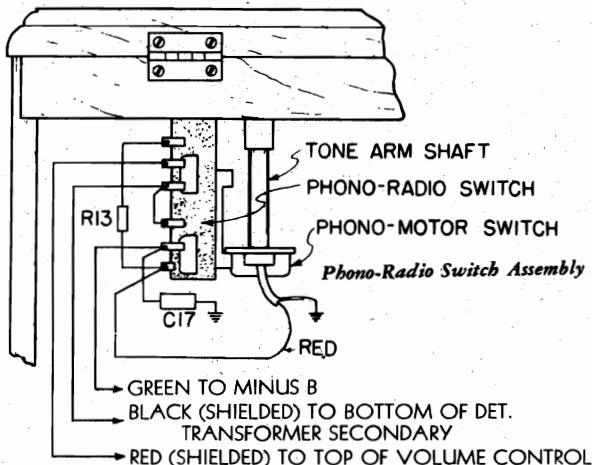

GENERAL ELECTRIC CO.

MODEL HJ1005
Schematic, Trimmers, Notes

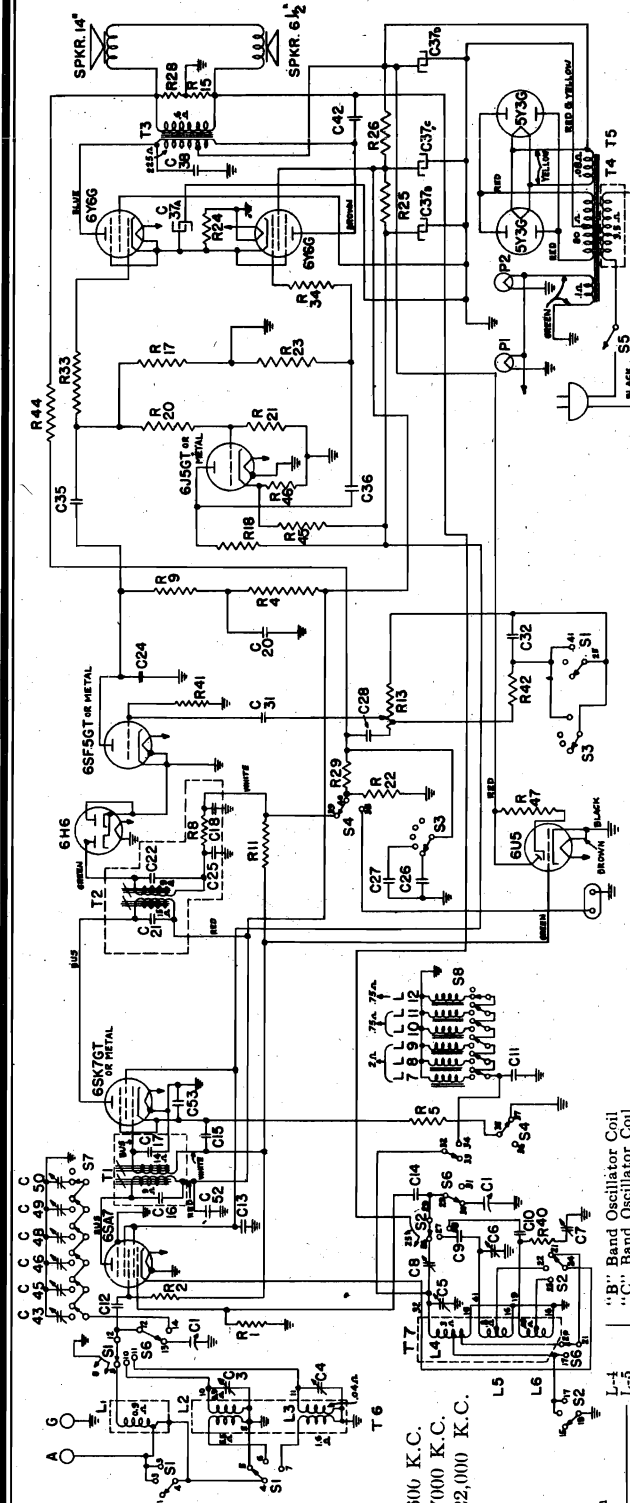


Tuning Frequency Range

- Band "B".....540-1600 K.C.
- Band "C".....2300-7000 K.C.
- Band "D".....7000-22,000 K.C.

Symbol Description

Symbol	Description
C-1	Tuning Condenser
C-3	3-30 mmf. "C" Antenna Trimmer
C-4	3-30 mmf. "D" Antenna Trimmer
C-5	3-30 mmf. "B" Oscillator Trimmer
C-6	3-30 mmf. "D" Oscillator Trimmer
C-7	3-30 mmf. "D" Oscillator Trimmer
C-8	560 mmf. Paper Capacitor
C-9	1600 mmf. Mica Capacitor
C-10	4300 mmf. Mica Capacitor
C-11	750 mmf. Mica Capacitor
C-12	150 mmf. Mica Capacitor
C-13	0.1 mfd. Paper Capacitor
C-14	47 mfd. Paper Capacitor
C-15	0.1 mfd. Paper Capacitor
C-16	175 mmf. I.F. Capacitor
C-17	85 mmf. I.F. Capacitor
C-18	25 mfd. I.F. Capacitor
C-19	85 mmf. I.F. Capacitor
C-20	175 mmf. I.F. Capacitor
C-21	100 mmf. Mica Capacitor
C-22	.0015 mfd. Paper Capacitor
C-23	470 mmf. Mica Capacitor
C-24	.01 mfd. Paper Capacitor
C-25	.01 mfd. Paper Capacitor
C-26	.01 mfd. Paper Capacitor
C-27	.01 mfd. Paper Capacitor
C-28	.01 mfd. Paper Capacitor
C-29	.01 mfd. Paper Capacitor
C-30	.01 mfd. Paper Capacitor
C-31	.01 mfd. Paper Capacitor
C-32	.01 mfd. Paper Capacitor
C-33	.01 mfd. Paper Capacitor
C-34	.01 mfd. Paper Capacitor
C-35	.01 mfd. Paper Capacitor
C-36	.01 mfd. Paper Capacitor
C-37A	20 mfd. 250 V. Dry Electrolytic
C-37B	20 mfd. 250 V. Dry Electrolytic
C-37C	20 mfd. 250 V. Dry Electrolytic
C-37D	40 mfd. 250 V. Dry Electrolytic
C-38	.02 mfd. 1000 V. Paper Capacitor
C-39	.01 mfd. 1000 V. Paper Capacitor
C-40	100-490 mmf. Station Trimmer
C-41	100-490 mmf. Station Trimmer
C-42	100-490 mmf. Station Trimmer
C-43	100-490 mmf. Station Trimmer
C-44	100-490 mmf. Station Trimmer
C-45	100-490 mmf. Station Trimmer
C-46	100-490 mmf. Station Trimmer
C-47	100-490 mmf. Station Trimmer
C-48	100-490 mmf. Station Trimmer
C-49	100-490 mmf. Station Trimmer
C-50	100-490 mmf. Station Trimmer
C-51	100-490 mmf. Station Trimmer
C-52	.25 mfd. Paper Capacitor
C-53	.08 mfd. Paper Capacitor
L-1	Beam-a-Scope
L-2	"C" Band Antenna Coil
L-3	"D" Band Antenna Coil
L-4	"B" Band Oscillator Coil
L-5	"C" Band Oscillator Coil
L-6	"D" Band Oscillator Coil
L-7	8, 9
L-8	10, 11
L-9	12
L-10	1, 2
L-11	3
L-12	4
L-13	5
L-14	6
L-15	7
L-16	8
L-17	9
L-18	10
L-19	11
L-20	12
L-21	13
L-22	14
L-23	15
L-24	16
L-25	17
L-26	18
L-27	19
L-28	20
L-29	21
L-30	22
L-31	23
L-32	24
L-33	25
L-34	26
L-35	27
L-36	28
L-37	29
L-38	30
L-39	31
L-40	32
L-41	33
L-42	34
L-43	35
L-44	36
L-45	37
L-46	38
L-47	39
L-48	40
L-49	41
L-50	42
L-51	43
L-52	44
L-53	45
L-54	46
L-55	47
L-56	48
L-57	49
L-58	50
L-59	51
L-60	52
L-61	53
L-62	54
L-63	55
L-64	56
L-65	57
L-66	58
L-67	59
L-68	60
L-69	61
L-70	62
L-71	63
L-72	64
L-73	65
L-74	66
L-75	67
L-76	68
L-77	69
L-78	70
L-79	71
L-80	72
L-81	73
L-82	74
L-83	75
L-84	76
L-85	77
L-86	78
L-87	79
L-88	80
L-89	81
L-90	82
L-91	83
L-92	84
L-93	85
L-94	86
L-95	87
L-96	88
L-97	89
L-98	90
L-99	91
L-100	92

Intermediate Frequency.....455 K.C.

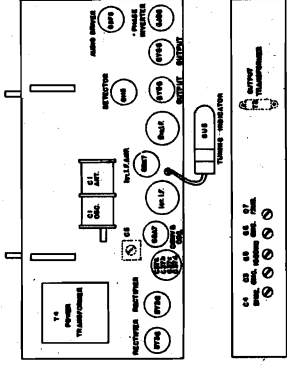

Tubes

- Converter and Oscillator GE-6SA7
- I.F. Amplifier.....GE-6SK7/6SK7GT
- Detector and AVC.....GE-6H6
- Audio Driver.....GE-6SF5/6SF5GT
- Phase Inverter.....GE-6J5G/6J5GT/6J5
- Power Output.....(2) GE-6Y6G
- Rectifier.....(2) GE-5Y3G
- Tuning Indicator.....GE-6U5
- Dial Lamp.....(2) MAZDA No. 44

GENERAL INFORMATION

The Model HJ-1005 is a three-band a-c operated receiver employing ten General Electric Pre-tested Tubes in a super-heterodyne circuit. This receiver is equipped with nine "Feathertouch" Tuning Keys, six of which may be set up for favorite stations. The three remaining keys allow power control manual tuning and phonograph or television audio reception. The new Super Beam-a-scope, which is a highly efficient self-contained antenna circuit, is standard equipment on this model. Other features of design include: Dual Dynapower speakers, floodlighted station key finder, visualux dial, iron core I.F. transformers, automatic tone compensation, automatic volume control and push-pull output.

Electrical Specifications

- Rating "A"—110-125 volts, 50-60 cycles, 125 watts
- Rating "C"—110-125 volts, 25-60 cycles, 125 watts

Electrical Power Output


- Undistorted.....8.5 watts
- Maximum.....10 watts

Loud-speakers—"Alnico" Magnetic Dynamic

- Outside Cone Diameters.....12-in. and 6 1/2-in.
- Voice Coil Impedances.....3.5 ohms

GENERAL ELECTRIC CO.

MODEL HJ1205
Schematic, Voltage, Socket, Coils

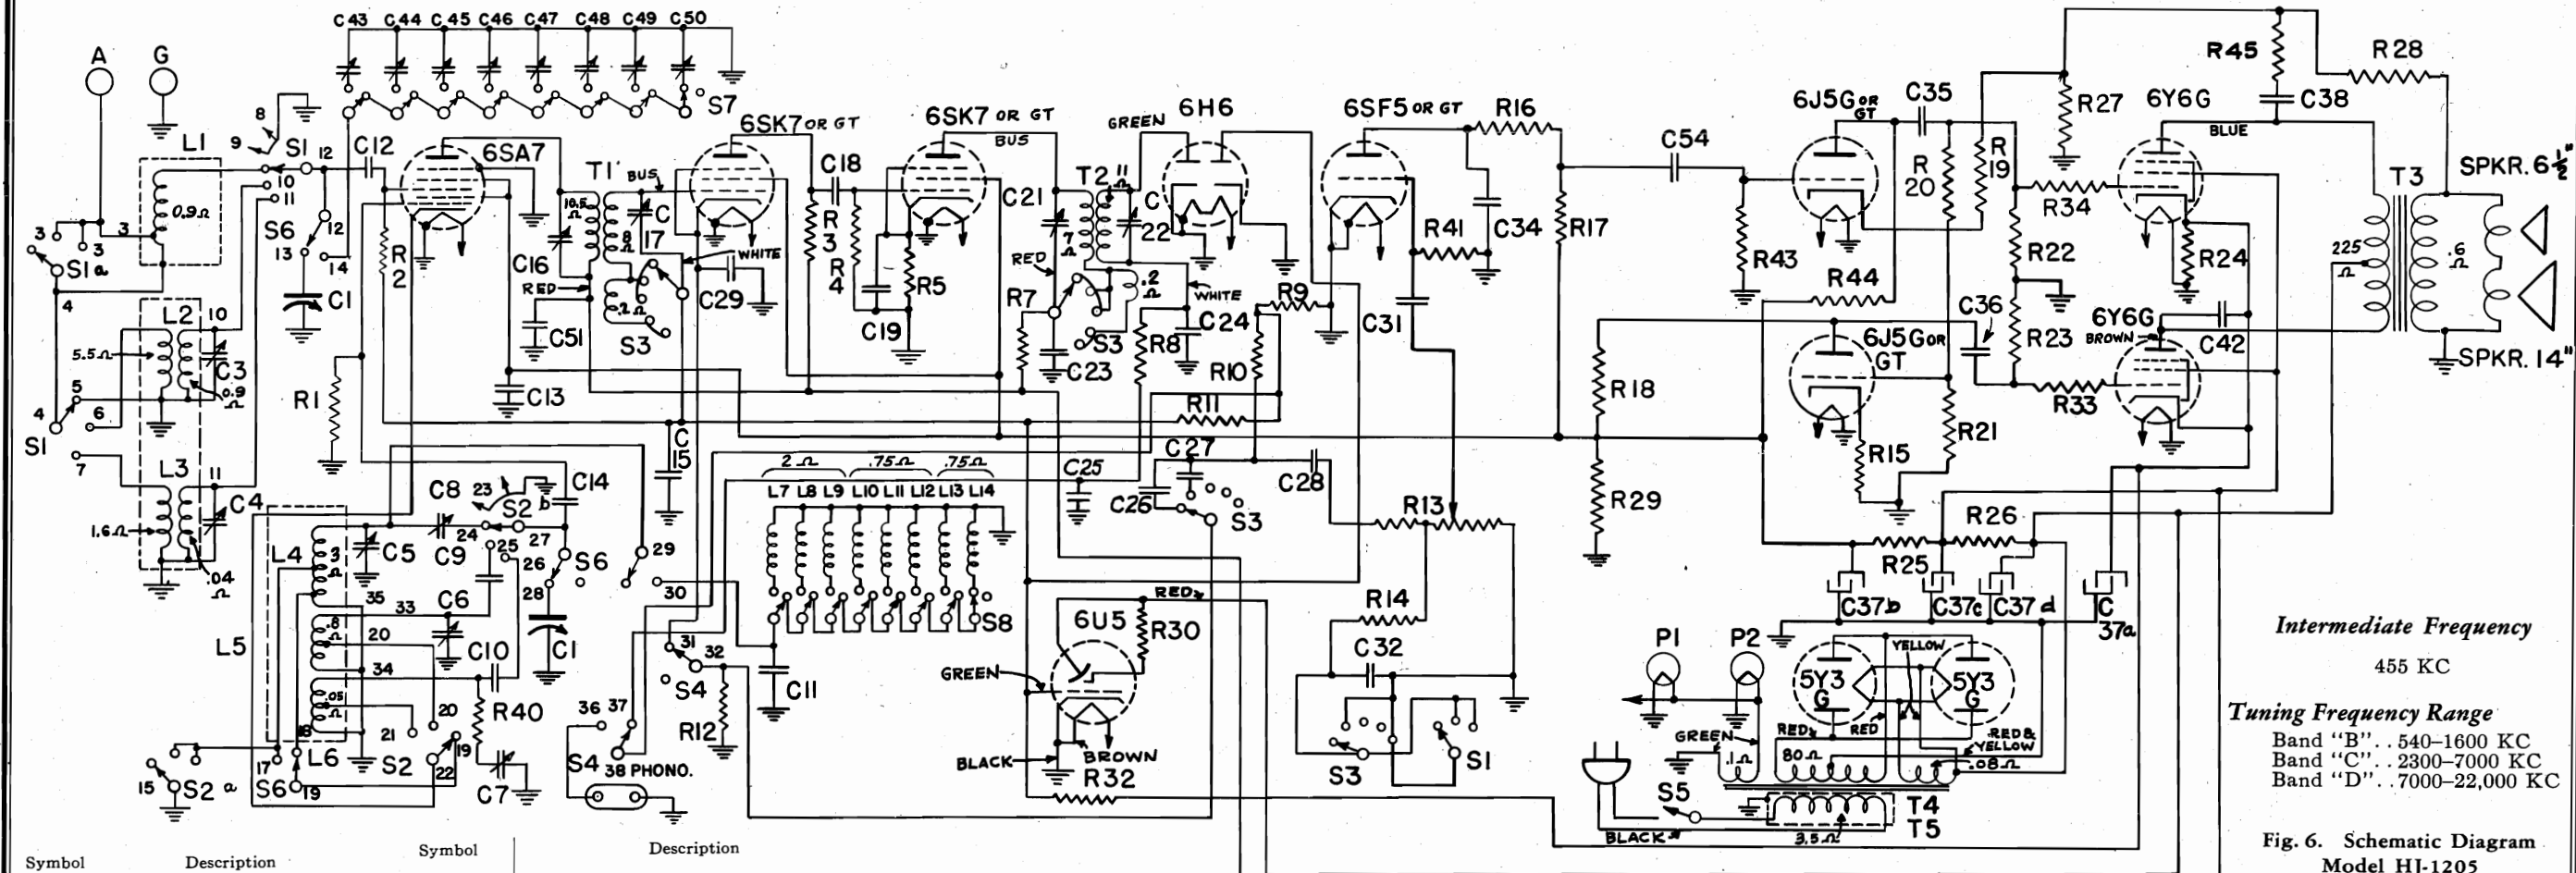

Intermediate Frequency
455 KC
Tuning Frequency Range
Band "B" . . . 540-1600 KC
Band "C" . . . 2300-7000 KC
Band "D" . . . 7000-22,000 KC

Fig. 6. Schematic Diagram Model HJ-1205

Symbol	Description	Symbol	Description
C-1	Tuning Capacitor	L-7, -8	Tuning Coils (No code)
C-3	"C" Band Antenna Trimmer	L-9, -10, -11	Tuning Coils (Code—Red)
C-4	"D" Band Antenna Trimmer	L-12, -13, -14	Tuning Coils (Code—Blue)
C-5	"B" Band Oscillator Trimmer	R-1	22,000 ohms, Carbon Resistor
C-6	"C" Band Oscillator Trimmer	R-2	1.0 megohm, Carbon Resistor
C-7	"D" Band Oscillator Trimmer	R-3	6800 ohms, Carbon Resistor
C-8	"B" Band Padder	R-4	47,000 ohms, Carbon Resistor
C-9	1600 mmf. Mica Capacitor =5%	R-5	330 ohms, Carbon Resistor
C-10	4300 mmf. Mica Capacitor =5%	R-7	1000 ohms, Carbon Resistor
C-11	750 mmf. Silvered Mica Capacitor =5%	R-8	47,000 ohms, Carbon Resistor
C-12	150 mmf. Mica Capacitor	R-9	220,000 ohms, Carbon Resistor
C-13	0.1 mfd. Paper Capacitor	R-10	47,000 ohms, Carbon Resistor
C-14	47 mmf. Mica Capacitor	R-11	220,000 ohms, Carbon Resistor
C-15	0.1 mfd. Paper Capacitor	R-12	470 ohms, Carbon Resistor
C-18	47 mmf. Mica Capacitor	R-13	2 megohm Volume Control
C-19	.05 mfd. Paper Capacitor	R-14	150,000 ohms, Carbon Resistor
C-23	.05 mfd. Paper Capacitor	R-15	3300 ohms, Carbon Resistor
C-24	100 mmf. Mica Capacitor	R-16	47,000 ohms, Carbon Resistor
C-25	47 mmf. Mica Capacitor	R-17	150,000 ohms, Carbon Resistor
C-26	.001 mfd. Paper Capacitor	R-18	47,000 ohms, Carbon Resistor
C-27	470 mmf. Mica Capacitor	R-19	3300 ohms, Carbon Resistor
C-28	.01 mfd. Paper Capacitor	R-20	1.5 megohms, Carbon Resistor
C-29	.05 mfd. Paper Capacitor	R-21	270,000 ohms, Carbon Resistor
C-31	.01 mfd. Paper Capacitor	R-22	220,000 ohms, Carbon Resistor
C-32	.003 mfd. Paper Capacitor	R-23	220,000 ohms, Carbon Resistor
C-34	47 mmf. Mica Capacitor	R-24	100 ohms, 3.4 W. Wire Wound
C-35	.05 mfd. Paper Capacitor	R-25	2400 ohms, or 3300 ohms 2 W. Resistor, Carbon
C-36	.05 mfd. Paper Capacitor	R-26	2200 ohms, 2.6 W. Wire Wound
C-37a	20 mfd. 25 V. Dry Electrolytic	R-27	56 ohms, Carbon Resistor
C-37b	20 mfd. 300 V. Dry Electrolytic	R-28	100 ohms, Carbon Resistor
C-37c	20 mfd. 300 V. Dry Electrolytic	R-29	47,000 ohms, Carbon Resistor
C-37d	40 mfd. 350 V. Dry Electrolytic	R-30	1.0 megohm, Carbon Resistor
C-38	.01 mfd. 1000 V. Paper Capacitor	R-32	5.6 megohms, Carbon Resistor
C-42	.01 mfd. 1000 V. Paper Capacitor	R-33	1000 ohms, Carbon Resistor
C-44	7-65 mmf. Antenna Trimmer	R-34	1000 ohms, Carbon Resistor
C-45	20-180 mmf. Antenna Trimmer	R-40	33 ohms, Carbon Resistor
C-46	20-180 mmf. Antenna Trimmer	R-41	4.7 megohms, Carbon Resistor
C-47	20-180 mmf. Antenna Trimmer	R-43	220,000 ohms, Carbon Resistor
C-48	100-490 mmf. Antenna Trimmer	R-44	150,000 ohms, Carbon Resistor
C-49	100-490 mmf. Antenna Trimmer	R-45	2200 ohms Carbon Resistor
C-50	100-490 mmf. Antenna Trimmer	P-1, -2	Antenna Band Switch
C-51	0.1 mfd. Paper Capacitor	S-1	Oscillator Band Switch
C-54	.05 mfd. Paper Capacitor	S-2	Tone Switch
L-1	Beam-a-Scope	S-3	Phono Switch
L-2	"C" Band Antenna Coil	S-4	Power Switch
L-3	"D" Band Antenna Coil	S-5	Manual Switch
L-4	"B" Band Oscillator Coil	S-6	Antenna Section Touch Tuning Switch
L-5	"C" Band Oscillator Coil	S-7	Oscillator Section Touch Tuning Switch
L-6	"D" Band Oscillator Coil	S-8	

Electrical Specifications

Rating "A"—110-125 volts, 50-60 cycles, 130 watts
Rating "C"—110-125 volts, 25-60 cycles, 130 watts

Electrical Power Output

Undistorted 8.5 watts
Maximum 10 watts

Tubes

Converter and Oscillator GE-6SA7
1st I.F. Amplifier GE-6SK7/6SK7GT

2nd I.F. Amplifier GE-6SK7/6SK7GT
Detector and A.V.C. GE-6H6
Audio Amplifier GE-6SF5/6SF5GT
Audio Driver GE-6J5G/6J5GT
Audio Inverter GE-6J5G/6J5GT
Audio Power Amplifier (2)GE-6Y6G
Tuning Indicator GE-6U5
Rectifier (2)GE-5Y3G
Dial Lamp (4)MAZDA No. 44

Loud-speakers—"Alnico" Magnetic Dynamic
Outside Cone Diameters 12 in. and 6 1/2 in.
Voice Coil Impedances 3.5 ohms
The voice coils are accurately and permanently centered at the factory and should seldom give trouble. In case a voice coil needs recentering it will be necessary to replace the entire cone and voice coil assembly.

Coil System
The "C" and "D" band antenna coils, L-2 and L-3 are wound on a single coil form as shown in Fig. 6. L-4, L-5 and L-6 compose the oscillator transformer for the "B" "C" and "D" bands. All switch points are numbered in Fig. 6 to facilitate in locating these switch points on the pictorial wiring diagram, Fig. 5.

The table opposite gives the coils in use for the various positions of the band switch.

Band-switch Position	Antenna Primary	Antenna Secondary	Oscillator Primary	Oscillator Secondary
Band "B"	Lower portion of L1	Upper portion of L1	Lower portion of L4	Upper portion of L4
Band "C"	L2 Primary (L1 Primary shorted)	L2 Secondary (Grid end of L1 to ground)	Lower portion of L5	Upper portion of L5 (High side of L4 to ground through R15. Mid tap of L4 to ground)
Band "D"	L3 Primary (L1 Primary shorted)	L3 Secondary (Grid end of L1 to ground. L2 secondary to ground)	Lower portion of L6	Upper portion of L6 (High side of L4 and L5 to ground through R15. Mid tap of L4 to ground)

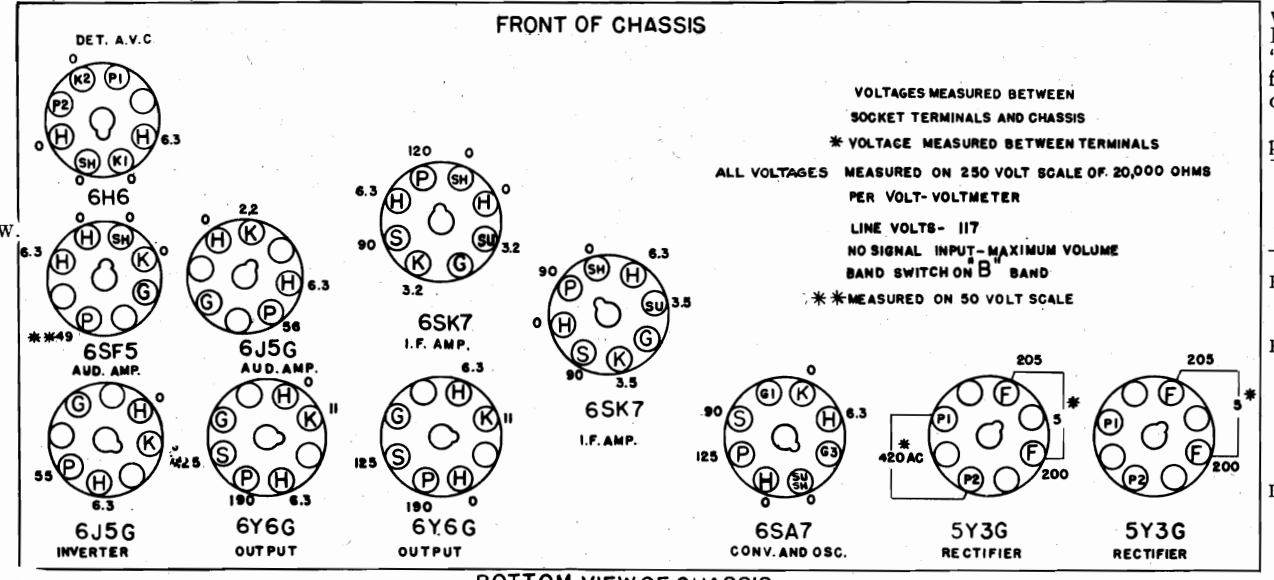


Fig. 7. Socket Voltages

GENERAL ELECTRIC CO. MODEL HJ1205
SPECIAL SERVICE INFORMATION Chassis Wiring, Gain

The following information will be found very useful in servicing receivers if a vacuum tube voltmeter or similar voltage measuring instrument is available.

- (1) Stage Gains †
 (a) Antenna Post to Converter Grid
 Band "B" (Beam-a-Scope connected)*—3 at 1000 KC
 Band "C" (Beam-a-Scope disconnected)**—3 at 4 MC
 Band "D" (Beam-a-Scope disconnected)**—3 at 18 MC
 (b) Converter Grid to 1st 6SK7 Grid . . . 30 at 455 KC
 (c) 1st 6SK7 Grid to 2nd 6SK7 Grid . . . 6 at 455 KC
 (d) 2nd 6SK7 Grid to 6H6 Det. Plate . . . 70 at 455 KC
 (2) A 400-cycle signal of .04 volts across volume control will give 1/2-watt speaker output. † (Volume Control turned to maximum.)
 (3) Average DC voltage developed across oscillator grid resistor (R1) with gang closed.
 Band "B" 6.5 volt
 Band "C" 7 volts
 Band "D" 2.8 volt

† Variations of +10%, -20% permissible.
 * Use I.R.E. dummy antenna.
 ** Use 70 mmf. capacitor between signal generator and antenna post.

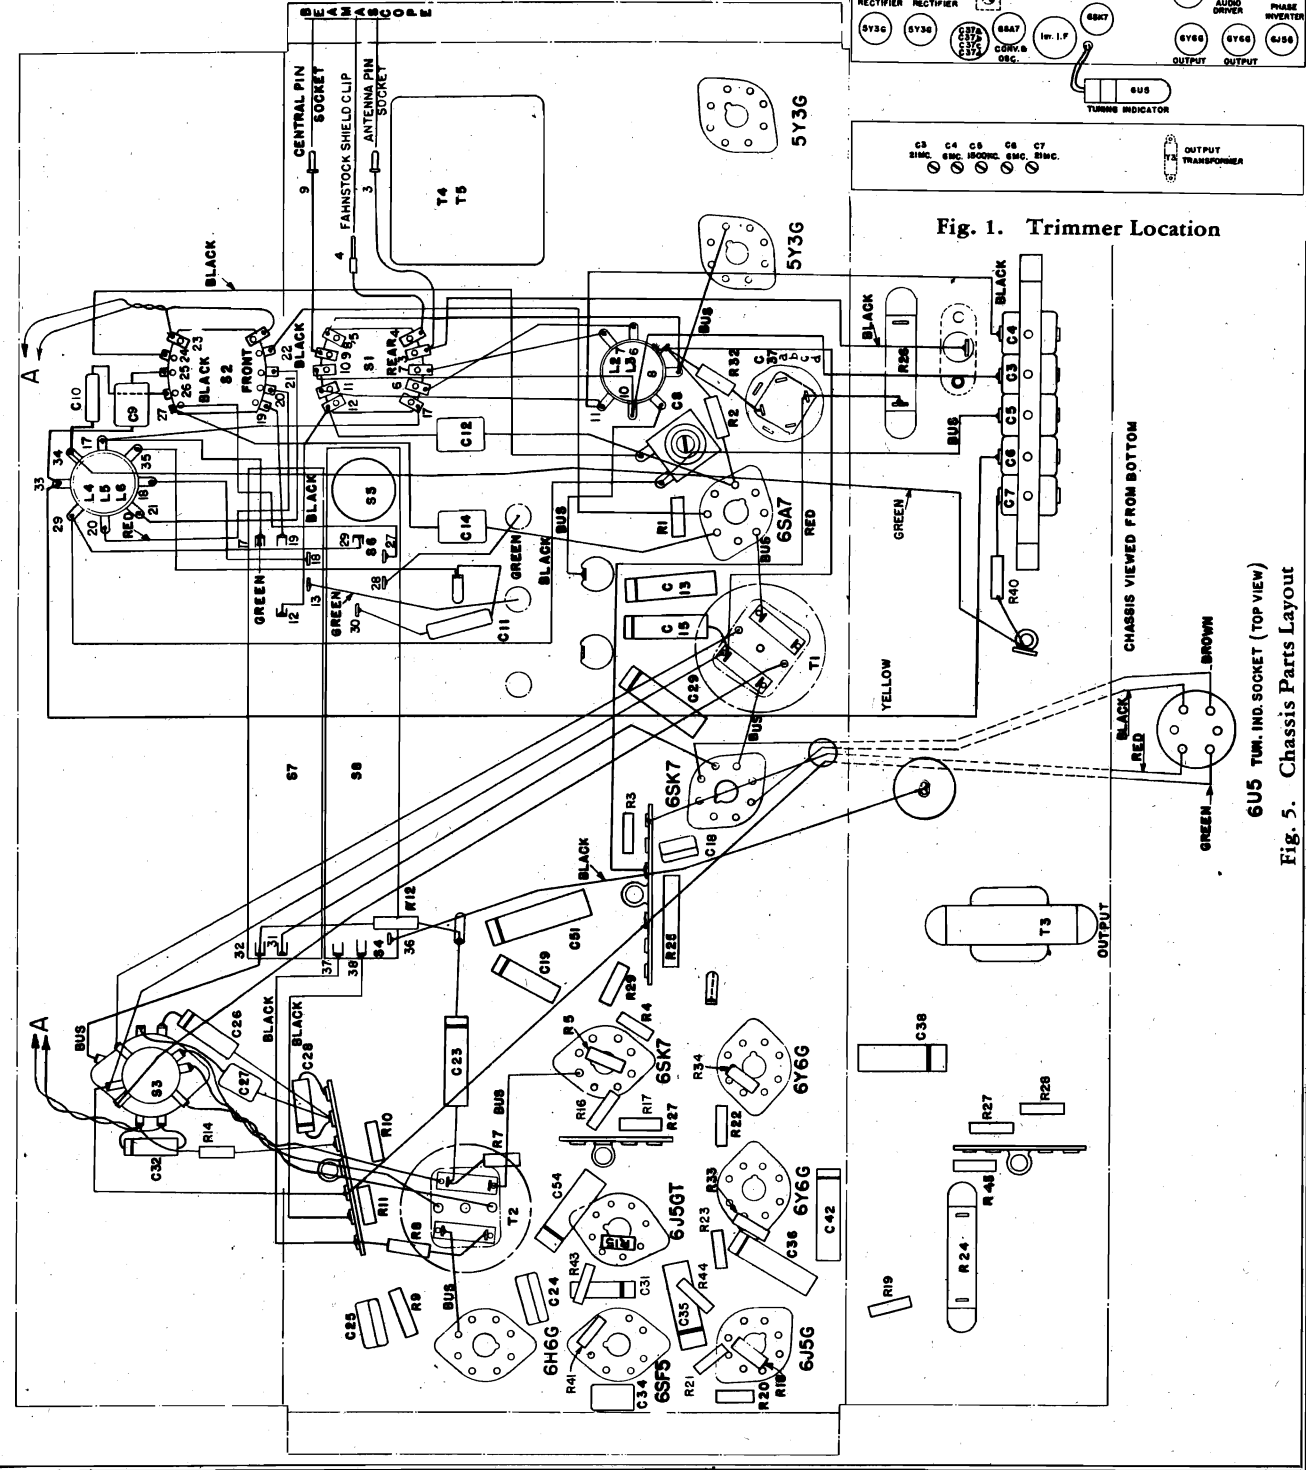


Fig. 1. Trimmer Location

Fig. 5. Chassis Parts Layout

MODEL HJ1205 Alignment, Drive Cord GENERAL ELECTRIC CO.

Band-switch Setting	Input Frequency	Tone Control Position	Point of Input	Trimmer	Comments
1. Band B	455 KC and 30 KC Sweep	Bass	1st I.F. 6SK7 Grid	2nd I.F. Sec. 2nd I.F. Pri.	Condenser gang at minimum capacity—vertical input to ground and junction at R-8, R-9, and R-10. Adjust trimmers in order mentioned for a single curve of maximum amplitude. The resulting curve on the "Bass" position is shown in Fig. 2a.
2. Band B	455 KC and 30 KC Sweep	Bass	Converter 6SA7 Grid	1st I.F. Sec. 1st I.F. Pri.	
3. Band B	455 KC and 30 KC Sweep	Bass	Converter 6SA7 Grid	All I.F. Trimmers	
4. Band B	455 KC and 30 KC Sweep	Treble I	Converter 6SA7 Grid		
I.F. ALIGNMENT WITH OUTPUT METER*					
1. Band B	455 KC Modulated	Bass	1st I.F. 6SK7 Grid	2nd I.F. Sec. 2nd I.F. Pri.	Condenser gang at minimum capacity—manual key depressed—output meter connected across voice coil—volume control at maximum—input as low as practical. Adjust all trimmers in order listed for maximum output. NOTE—Do not attempt alignment in the expanded position.
2. Band B	455 KC Modulated	Bass	Converter 6SA7 Grid	1st I.F. Sec. 1st I.F. Pri.	
3. Band B	455 KC Modulated	Bass	Converter 6SA7 Grid	All I.F. Trimmers	

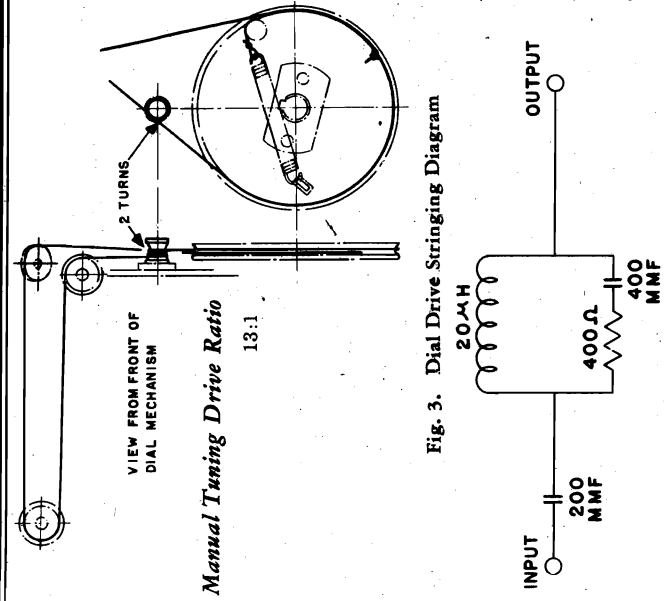


Fig. 3. Dial Drive Stringing Diagram

Fig. 4. I.R.E. Dummy Antenna


Alignment Procedure
 The alignment procedure is given in table form on this and opposite pages. Use the designated "dummy" antenna in making each individual alignment. I.F. alignment may be performed with the chassis removed from the cabinet and the Beam-a-Scope disconnected. R.F. alignment on "C" and "D" bands should be performed with the Beam-a-Scope disconnected and a 70 mmf. mica capacitor between the signal generator and the point of input. R.F. alignment on "B" band should be performed with the chassis and Beam-a-Scope mounted in the cabinet and properly connected.

* Use "dummy" antenna consisting of .05-mfd. capacitor between signal generator and point of input.

R.F. ALIGNMENT


Band	Input Frequency	Tone Control Position	Point of Input	Trimmer	Comments
1. Band B	455 KC Modulated	Bass	Antenna Post**	Osc. (C-6) Ant. (C-3)	Mechanically adjust dial pointer to first line at left-hand end of dial scale with condenser gang fully meshed. Connect output meter across voice coil. Set pointer to 6 MC mark and align (C-6). Peak (C-3) for maximum output. Set pointer to 21 MC mark and align (C-7). Peak C-4 while rocking gang condenser. The image of any signal on the "D" band should be 910 KC below input signal. Example: 15 MC image 14.09 MC.
2. Band C	6 MC Modulated	Bass	Antenna Post**	Osc. (C-7) Ant. (C-4)	
3. Band D	21 MC Modulated	Bass	Antenna Post***	Osc. Padder (C-8)	
4. Band B	580 KC Modulated	Bass	Antenna Post***	Osc. (C-5)	Set dial pointer to 580 MC mark and tune in signal with (C-8). Adjust (C-5) for maximum output in vicinity of 1500 KC while rocking gang condenser. Retrim (C-8). Repeak (C-5).
5. Band B	1500 KC Modulated	Bass	Antenna Post***	Osc. (C-5)	
6. Band B	580 KC Modulated	Bass	Antenna Post***	Osc. Padder (C-8)	
7. Band B	1500 KC Modulated	Bass	Antenna Post***	Osc. (C-5)	

** Use a "dummy" antenna consisting of 70-mmf. capacitor between signal generator and point of input with "Beam-a-Scope" disconnected.
 *** Use an I.R.E. "dummy" antenna as shown in Fig. 7 between signal generator and the point of input.

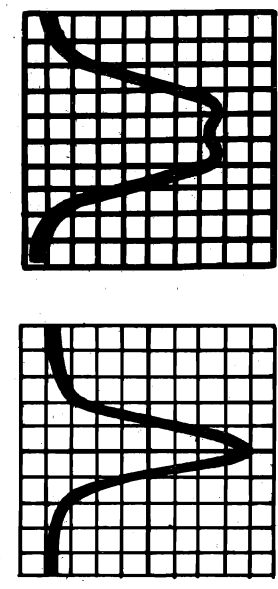

(a) Sharp Position
 (b) Expanded Position
 Fig. 2. I.F. Curves Taken on G-E Oscilloscope OFM-1

GOODYEAR TIRE & RUBBER CO., INC. MODEL 522 Schematic, Voltage Socket, Trimmers Alignment

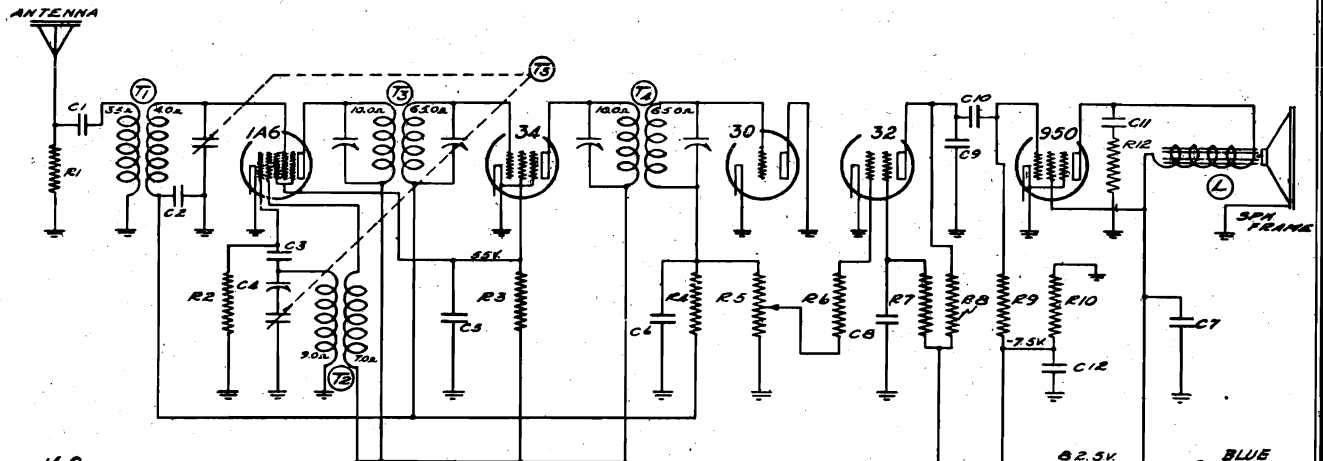

168

VOLTAGES TAKEN FROM POINTS INDICATED TO CHASSIS. SET NOT TUNED TO SIGNAL

SWITCH ON VOLUME CONTROL TO HEATERS
 BLUE B+ 90V
 B-SLT.
 A+RED
 A-BLK.

I.F. PEAK 465 KC


No.	Part No.	Description
RESISTORS		
R1	130-17	10M Ohm - 1/2 Watt - 20% - 20 Volt - Carbon
R2	130-52	50M Ohm - 1/2 Watt - 20% - 10 Volt - Carbon
R3	130-17	10M Ohm - 1/2 Watt - 20% - 20 Volt - Carbon
R4	130-38	2 Meg Ohm - 1/2 Watt - 20% - 100 Volt - Carbon
R5	101-43	1 Meg Ohm Volume Control and Switch
R6	130-52	50M Ohm - 1/2 Watt - 20% - 10 Volt - Carbon
R7	130-19	1 Meg Ohm - 1/2 Watt - 20% - 100 Volt - Carbon
R8	130-9	200M Ohm - 1/2 Watt - 20% - 20 Volt - Carbon
R9	130-19	1 Meg Ohm - 1/2 Watt - 20% - 100 Volt - Carbon
R10	130-93	450 Ohm - 1/2 Watt - 10% - 10 Volt - Carbon
R11	101-44	4.75 Ohms - Rheostat
R12	130-52	50M Ohm - 1/2 Watt - 20% - 10 Volt - Carbon
CONDENSERS		
C1	100-11	.01 x 400 Volt - 25%
C2	100-22	.05 x 200 Volt - 25%
C3	129-12	.00025 Mica - MT - 20%
C4	124-14	Series Pad
C5	100-9	.05 x 200 Volt - 25%
C6	129-5	.0001 Mica - MT - 20%
C7	100-6	.25 x 200 Volt
C8	100-9	.05 x 200 Volt - 25%
C9	129-2	.0005 Mica - MT - 20%
C10	100-11	.01 x 400 Volt - 25%
C11	100-11	.01 x 400 Volt - 25%
C12	119-22	10.0 Mfd. x 25 Volts - Working Voltage
PARTS		
T1	111-46	Antenna Coil
T2	110-36	Oscillator Coil
T3	108-67	Input I.F. Coil 465 K.C.
T4	108-68	Output I.F. Coil 465 K.C.
T5	102-29	Two Gang Condenser
L	114-19	Six Inch Magnetic Speaker

ALIGNING I.F. TRANSFORMERS: (465 K.C.)

1. With volume control full on and with variable condenser at its minimum capacity position, plates entirely out of mesh, and with external oscillator set at 465 K.C. connected in series with a .1 mfd. condenser, to the grid of the 1A6 tube (cap at top of tube), adjust I.F. transformers, parts number 108-67 and 108-68, to resonance. Both of these transformers have two (2) adjustments each, they are accessible from the tops of the cans (for location see top view).
 Use as a resonance indicator an output meter connected across the outside terminals of the speaker or by means of an adapter to the plate and screen of the type 950 output tube. Maximum deflection of the volt meter indicates resonance.
 Use only enough signal to get a readily readable output.
 A low range output meter or the low scale of a multi-range meter should be used.

BROADCAST BAND ALIGNMENT:

1. Set external oscillator to 1720 K.C. and connect it in series with a 200 mmfd. condenser to the antenna and ground posts.
 - (a) With variable condenser in its minimum capacity position, plates entirely out of mesh, adjust oscillator trimmer (rear section of variable condenser) to resonance.
 - (b) Re-set external oscillator to 1400 K.C. Rotate variable condenser, pick up signal and adjust antenna trimmer (front section of variable condenser) to resonance.
 - (c) Re-set external oscillator to 600 K.C., move dial pointer to 600 K.C., and adjust series pad, part number 124-14 (see top view), to resonance. While making this adjustment, slowly rock variable condenser to and fro until maximum output is obtained.
 - (d) Check for sensitivity at 1400, 1000, 600 K.C. DO NOT BEND PLATES.

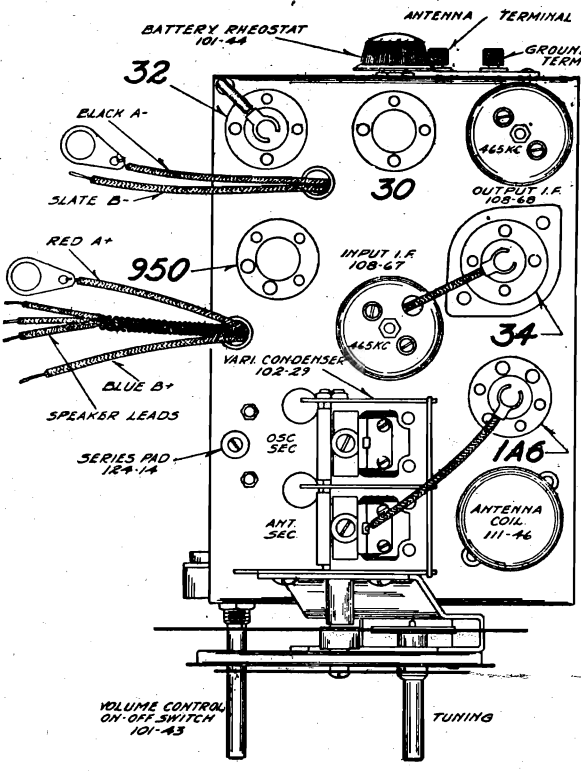

MODEL 525

Schematic, Voltage Socket, Trimmers Alignment

GOODYEAR TIRE & RUBBER CO., INC.

MODELS 685, 686

Alignment

- (a) Connect external oscillator set at 465 kilocycles, in series with "Dummy 1", to the control grid cap of the type 6K7 tube, and adjust the output I.F. transformer (No. 108-78) to resonance.
- (b) With "Dummy 1" still connected, move oscillator output clip from grid of 6K7 to grid cap to 6L7 and adjust input I.F. transformer (No. 108-74) to resonance.
- (c) With oscillator still connected to 6L7, readjust output I.F. transformer (108-78) if necessary.

BROADCAST BAND ALIGNMENT:

1. With band changing switch in the broadcast position, extreme left of its rotation, and with gang condenser in its minimum capacity position, plates entirely out of mesh, and with external oscillator connected in series with "Dummy 2", to tan antenna and black ground lead, make following adjustments:
 - (a) Set external oscillator to 1720 K.C. and adjust broadcast oscillator trimmer to resonance (adjustment number 1; see bottom view of coil assembly, Fig. 3).
 - (b) Re-set external oscillator to 1550 K.C., rotate variable gang condenser and pick up signal. Adjust broadcast antenna trimmer (Adjustment number 4) to resonance. The trimmer is located on the top of the three gang variable tuning condensers to which is mounted on the top of the chassis trimmer location. (See top view of chassis, Fig. 1, for resonance. (See top view of chassis, Fig. 1, for location of this adjustment.)
 - (c) Re-set external oscillator to 600 K.C., and adjust broadcast series pad to resonance by rotating condenser to approximately 600 K.C., rocking it slowly to and fro until by adjusting series pad maximum output is attained. This adjustment is located on the bottom of the chassis directly under the variable gang condenser. (See bottom view of chassis, Fig. 3.)
 - (d) Repeat adjustments "a" and "b" until sensitivity is at its maximum.
 - (e) Check tracking and sensitivity at 1000 kilocycles. Under conditions of maximum band width, variable condenser sections to correct tracking.

SHORT WAVE BAND ALIGNMENT:

1. With band changing switch in the short wave position, extreme right of its rotation, and with external oscillator set at 18 megacycles and connected in series with "Dummy 3", to the tan antenna and black ground lead, make the following adjustments:
 - (a) Move dial pointer to 17 megacycles and adjust short wave oscillator (Adjustment number 5) to resonance.
 - (b) Re-set external oscillator to 6 megacycles and pick up signal by rotating variable condenser and check sensitivity.
 - (c) Re-set external oscillator and check set at 18.1 megacycles and 5.3 megacycles for band coverage.

NOTE: It is extremely necessary in making all of these adjustments that the fundamental oscillator signal be low the fundamental frequency which will fall below the fundamental 18.3 megacycle signal appears near 17.4 megacycles.

MIDDLE WAVE BAND ALIGNMENT:

1. With band changing switch in the middle wave position, center of its rotation, and with external oscillator set at 30 megacycles and connected in series with "Dummy 3", to the tan antenna and black ground lead, make the following adjustments:
 - (a) Move dial pointer to 5000 kilocycles and adjust middle wave oscillator (Adjustment number 2) to resonance.
 - (b) Re-set external oscillator to 1800 kilocycles and pick up signal by rotating variable condenser and check sensitivity.
 - (c) Re-set external oscillator and check set at 6400 kilocycles and 1700 kilocycles for band coverage.

MODELS 685, 686 Runs 1 and 2.

TUBE COMPLEMENT

- consists of the latest "Metal-Glass" tubes which are interchangeable with metal tubes. They are as follows:
- 1-Type 6L7 Pentagrid Mixer, First Detector.
 - 1-Type 6C5 Oscillator.
 - 1-Type 6K7 Remote Cut-off Pentode, I.F. Amplifier (465 K.C.).
 - 1-Type 6Q7 Duplex Diode Triode Second Detector, A.V.C. and First Audio.
 - 1-Type 6F6 Pentode Output Amplifier.
 - 1-Type 5Y3 or 5W4 High Vacuum Rectifier.
 - 1-Type 6G5 Cathode-Ray Tuning Indicator. (Note: 6G5 available in all glass only)
- The tube complement of the model 686 is as follows:
- 1-Type 6L7 Pentagrid Mixer, First Detector.
 - 1-Type 6C5 Oscillator.
 - 1-Type 6K7G Remote Cut-off Pentode, I.F. Amplifier (465 K.C.).
 - 1-Type 6Q7G Duplex Diode Triode Second Detector, A.V.C. and First Audio.
 - 1-Type 6F6G Pentode Output Amplifier.
 - 1-Type 5Y3 High Vacuum Rectifier.

SERVICE NOTES:

Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.

All voltages as indicated on diagram are measured with 119 volts on the primary of the power transformer in ohms on the schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

Excessive hum, stuttering low volume and a reduction in all D.C. voltages is usually caused by a shorted electrolytic condenser; open by-pass condensers frequently cause oscillation and distorted tone.

ALIGNING INSTRUCTIONS:

CAUTION:—No aligning adjustments should be attempted without first thoroughly checking over all other possible causes of trouble, such as poor installations, open or grounded antenna systems, low line voltages, defective tubes, condensers and resistors. In order to properly align this chassis, an oscillator (generator) is absolutely necessary. No aligning adjustments should be attempted with the chassis in the cabinet. Remove the knobs and the four bolts which are used to fasten the chassis.

All adjustments should be made with a non-metallic screw driver.

DUMMY ANTENNAS:

The following dummy antennas are used in aligning and are referred to in the following alignment instructions as "Dummy 1," "Dummy 2," and "Dummy 3."

Dummy 1: (I.F.)—Consists of a 1 mfd. condenser connected in series with the external oscillator.

Dummy 2: (Broadcast)—Consists of a 200 mmfd. condenser with a 20 p.f. capacitor connected in series with the external oscillator.



Dummy 3: (Middle and Short Wave)—Consists of a 1 mfd. condenser and 400 ohm resistor connected in series with the external oscillator.

ALIGNING I.F. TRANSFORMERS; (465 K.C.):

Part No. 108-73 Output I.F. Transformer.
Part No. 108-74 Input I.F. Transformer.

These I.F. transformers have two adjustments, both of which are accessible from the top of chassis (see top view).

1. With volume control full on (the extreme right of its rotation), the band changing switch in the broadcast position, (extreme left of its rotation), and with the variable condenser set to approximately 1400 kilocycles, make the following adjustments:

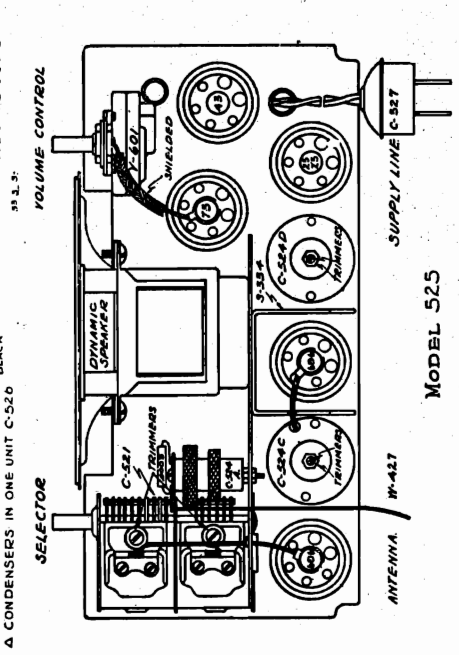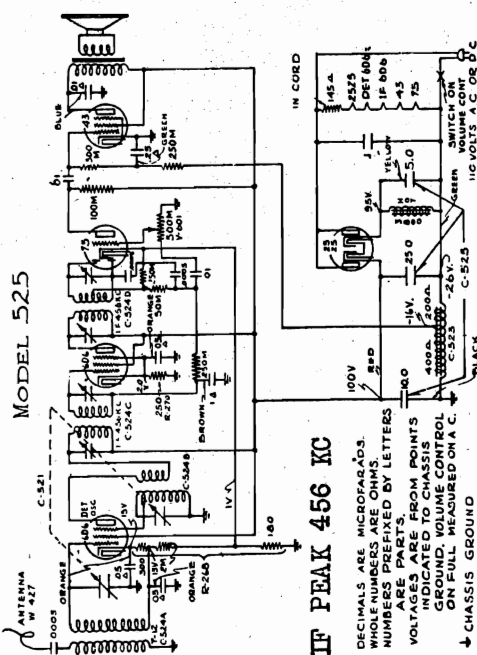

NOTE—CONNECTING CORD OF SET GETS WARM IN NORMAL OPERATION. DO NOT BECOME ALARMED.

Make sure that all tubes are pushed firmly in their proper sockets and that the clips are securely fastened to the caps on the tops of the tubes.

That the aerial is stretched out and that the connections to an outdoor antenna (if used) are good.

If necessary to change tubes or service chassis, UNDER NO CIRCUMSTANCES REMOVE BACK OR CHASSIS WITHOUT FIRST REMOVING PLUG FROM LIGHT SOCKET.

To remove chassis from cabinet, pull off knobs from front, remove back (held with screws to case). Remove four mounting screws, then chassis can be slipped out of case.

Should it be necessary, at any time, to rebalance this set the procedure is as follows: Attach a 456 kilocycle oscillator to the grid of the 6D6 tube in back of the variable capacitor and adjust the trimming condensers of the I. F. transformers to maximum deflection on an output meter connected across the primary of the speaker input transformer. While adjusting these trimmers, the variable condenser should be at the maximum capacity position—at the extreme right of its rotation.

Next disconnect the antenna wire and connect an oscillator in series with a 75 mmf. condenser to the antenna coil. Rotate the condenser plates to the minimum capacity position—extreme left turn, and adjust the trimmer to resonance. The resistance of the variable condenser to be used is 1700 kilohms. The trimmer should be set at 1700 kilohms. Align at 1400—1200—1000—800—600—530 kilocycles, the band slotted plates of variable condenser if necessary.

GOODYEAR TIRE & RUBBER CO., INC

MODEL 566
Schematic, Socket,
Alignment, Trimmers
Voltage, Notes

CONNECTIONS TO BATTERY:


The battery cable, number 152-2, (red wire with fuse receptacle at one end and terminal lug at other end) must be connected to battery terminal of ammeter. At the same time connect ammeter capacitor, number 148-3, to battery terminal of ammeter, other end of condenser to any convenient grounded screw on back of instrument panel. Make certain that insulating sleeve is slipped over fuse when fuse is placed in receptacle, before connecting to short battery cable from receiver.

ANTENNA CONNECTION:

The antenna is connected to the receiver by means of the antenna cable. The antenna wire is the single black wire projecting from the end of the cable. Splice this wire to the roof antenna lead and ground the pig-tail shielding as close to the corner post of the car as possible.

GENERATOR INTERFERENCE:

Remove the generator cutout mounting screw and fasten the condenser (148-1) bracket on the generator cutout mounting lug. Replace the cutout mounting screw and tighten down securely. Connect the condenser lead to the battery terminal of the cutout. The generator condenser is absolutely necessary as it is used to eliminate a high pitched whining noise which would otherwise be heard as the motor is accelerated.

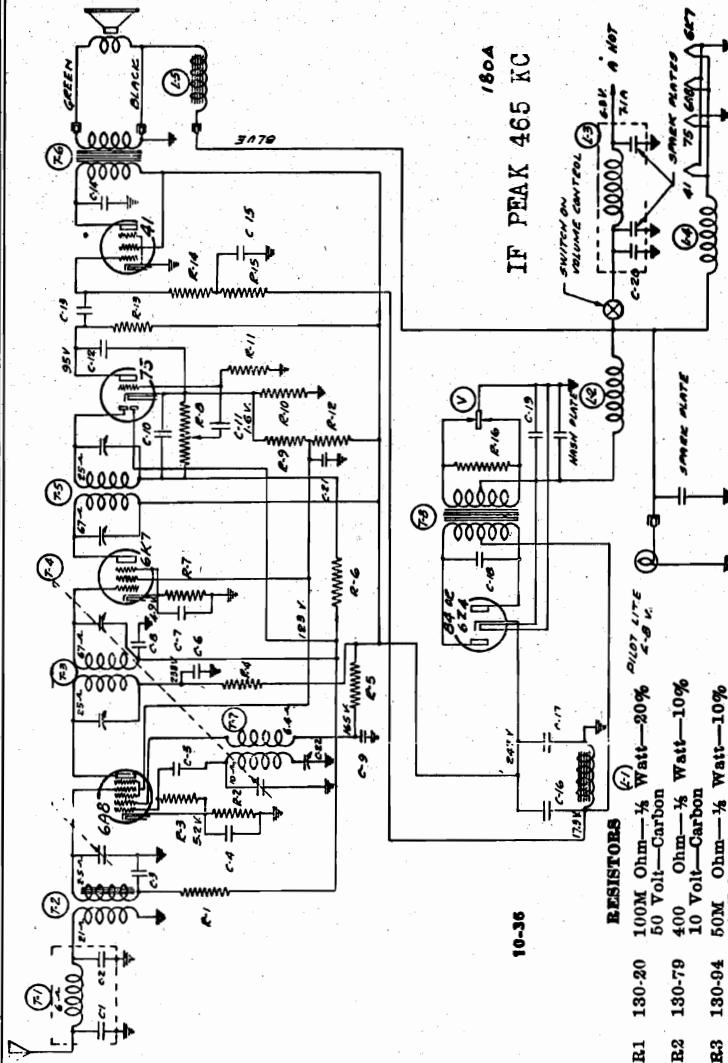

RESISTORS

R1	130-20	100M Ohm—1/2 Watt—20%
R2	130-79	50 Volt—Carbon
R3	130-94	400 Ohm—1/2 Watt—10%
R4	130-23	10 Volt—Carbon
R5	130-42	50M Ohm—1/2 Watt—10%
R6	130-68	2M Ohm—1/2 Watt—10%
R7	130-79	20 Volt—Carbon
R8	101-41	10 Volt—Carbon
R9	130-106	100M Ohm—1/2 Watt—10%
R10	130-101	100 Volt—Carbon—Ins.
R11	180-68	1 Meg Ohm—1/2 Watt—10%
R12	130-95	12M Ohm—1/2 Watt—10%
R13	130-3	500K Ohm—1/2 Watt—20%
R14	130-5	300M Ohm—1/2 Watt—20%
R15	130-45	250M Ohm—1/2 Watt—20%
R16	130-84	200 Ohm—1/2 Watt—20%
C1	129-3	.00002 Mica—"0"—20%
C2	129-49	.00009 Mica—"0"—5%

CONDENSERS

C1	129-3	.00002 Mica—"0"—20%
C2	129-49	.00009 Mica—"0"—5%


NOTE: C-13 and C-14 in one unit—part number 116-15.

**CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII**

PAERTS

T1	111-48	Antenna Filter Coil Assembly
T2	111-47	Antenna Coil Assembly
T3	108-69	Input I.F. Coil—465 K.C.
T4	102-27	Two Gang Variable Conden-ser
T5	108-70	Output I.F. Coil—465 K.C.
T6	106-22	Output Transformer
T7	110-37	Oscillator Coil Assembly
T8	104-51	Power Transformer
L1	106-23	Filter Choke
L2	106-19	"A" Choke
L3	106-25	"A" Filter Assembly
L4	106-24	"A" Choke
L5	114-34	5 1/4" Speaker (Field resist-ance & ohms)
V		Vibrator

IF PEAK 465 KC

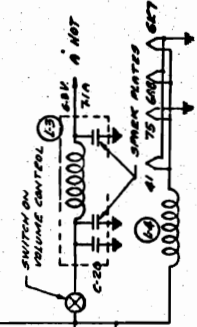


MODEL 586

Schematic, Voltage

GOODYEAR TIRE & RUBBER CO., INC.

Socket, Trimmers Alignment, Notes

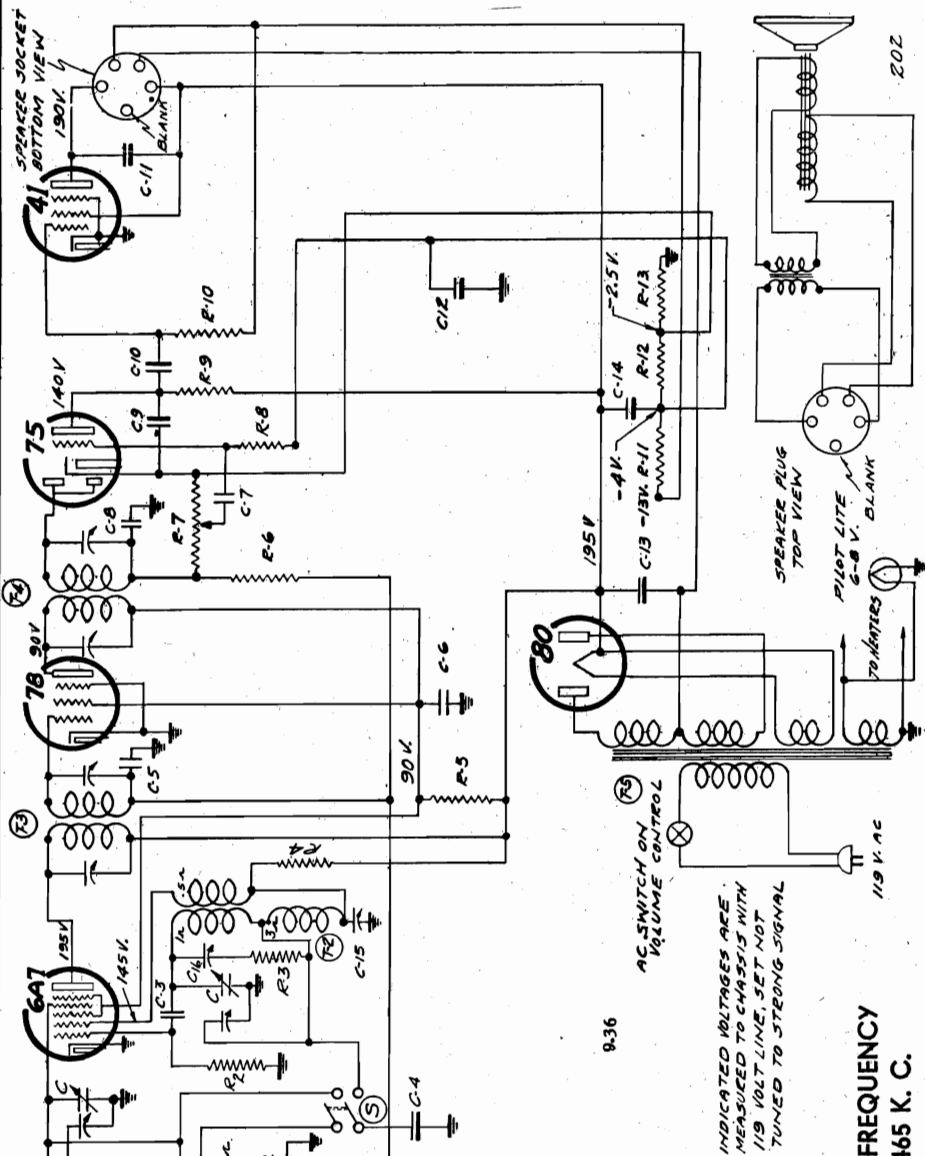

DUMMY ANTENNAS:

- (I.F.)—Consists of a .1 mfd. condenser connected in series with the external oscillator.
- (Broadcast)—Consists of a 200 mmfd. condenser and a 20 ohm resistor connected in series with each other and in series with the external oscillator.
- (Short Wave)—Consists of a .1 mfd. condenser and a 400 ohm resistor connected in series with each other and in series with the external oscillator.

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOL.VIII.

ALIGNMENT FREQUENCIES

- IF :- 465 KC (I.F.) Dummy Adjust IF Trimmers.
- S.W. Osc :- 6.6 MC (I.F.) Dummy Adjust S.W. Osc.
- B.C. Osc :- 1720 KC (B.C.) Dummy .. B.C. Osc.
- B.C. Ant. :- 1550 KC (B.C.) Dummy .. B.C. Ant.
- S.W. Ant :- 6 MC (S.W.) Dummy .. Series Pad.
- S.W. Ant :- 6 MC (S.W.) Dummy .. S.W. Ant (On rear section of variable).

INDICATED VOLTAGES ARE MEASURED TO CHASSIS WITH 119 VOLT LINE, SET NOT TUNED TO STRONG SIGNAL

I. F. FREQUENCY 465 K. C.

LIST OF REPAIR PARTS (Serial No. 6E248475 and up)

Part No. Reference	Description
100-6 C-12: C-6	.25 x200 Volt Tubular Without Bracket
100-9 C-5	.05 x200 Volt Tubular
100-11 C-10: C-7	.01 x400 Volt Tubular
100-19 C-2	.02 x400 Volt Tubular
100-26 C-13	8 Mfd. x 350 Volt Electrolytic
103-6 C-14	.0001 Mica-Type O-20%
103-7 C-9	.00025 Mica-Type O-20%
129-5 C-8	.0017 Mica-Type W-20%
129-61 C-4	.00003 Mica-Type O-10%
129-62 C-3	.0004 Mica-Type W-10%
129-63 C-1	RESISTORS
106-26 R-11: R-12: R-13	220 Ohm (R-11), 33 Ohm (R-12), 52 Ohm (R-13), Metal Clad Resistor
130-12 R-2	50M Ohm-1/3 Watt-20% 20 V.-Carbon
130-20 R-9	100M Ohm-1/3 Watt-20% 50 V.-Carbon
130-22 R-4	5M Ohm-1/3 Watt-20% 10 V.-Carbon
130-77 R-5	150M Ohm-1/3 Watt-20% 100 V.-Carbon
130-100 R-10	1 Meg Ohm-1/10 Watt-10% 100 V.-Carbon
130-110 R-6	100M Ohm-1/10 Watt-20% 50 V.-Carbon
130-111 R-1	100 Ohm-1/10 Watt-20% 10 V.-Carbon
130-112 R-3	2 Meg Ohm-1/10 Watt-20% 100 V.-Carbon
130-113 R-8	


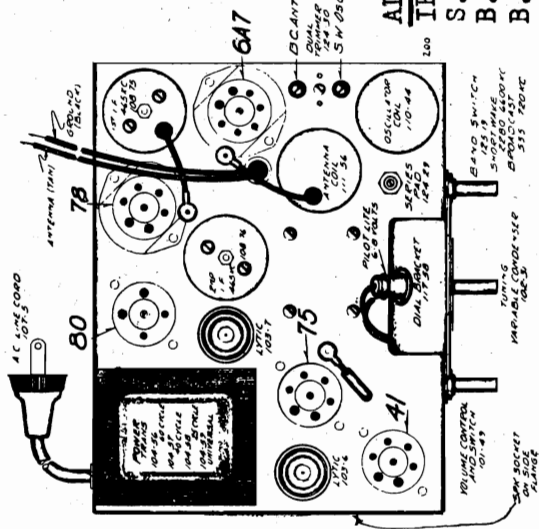


FIG. 1—TOP VIEW

GOODYEAR TIRE & RUBBER CO., INC.


MODEL 660
Schematic, Socket
Trimmers

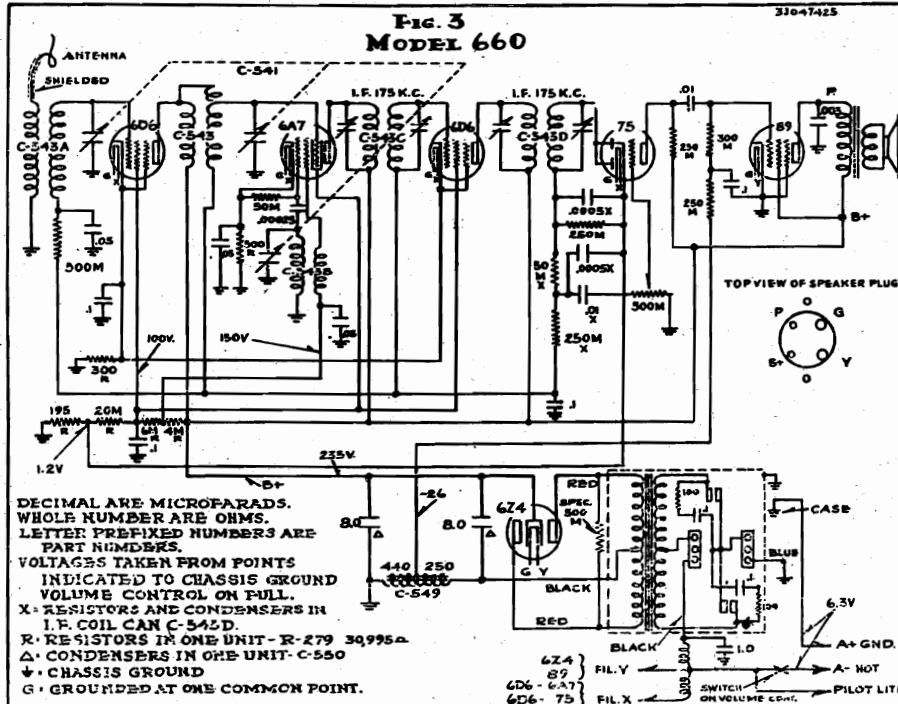

**SCHEMATIC CIRCUIT
DIAGRAM
MODEL 660 AUTORADIO**

PARTS LIST


Part No.	Description	List Price Each
A 660	Battery Cable—Plug Type	1.75
B 104	Cable Shaft Brackets	.35
B 660	Antenna Cable—Plug Type	.80
C 106	Shaft Couplings	.35
C 117	"A" Choke—Small	.25
C 118	"A" Choke—Large	.35
C 144	Dual .1-200 Volt Con- denser	.35
C 152	.00025 Mica Condenser	.20
C 155	.0005 Mica Condenser	.20
C 522	.01-400 Volt Condensers	.25
C 531A	Dual .05 Condenser	.30
C 535	Dual .1—200 Volt Con- denser	.35
C 541B	3 Gang Condenser	3.75
C 543	R.F. Coil	.80
C 543A	Antenna Coil	.80
C 543B	Oscillator Coil	.70
C 543C	Input I.F. Transformer	1.25
C 543D	Output I.F. Transformer with Paris	2.50
C 547	.1-200 Volt Condenser	.30
C 549	690 Ohm Choke	1.40
C 550	8-8 Mfd. Electrolytic Condenser	2.25
C 551	1 Mfd.—120 Volt Con- denser	.35
C 553	.05-200 Volt Condenser	.25
C 554	.5 Mfd. Generator Con- denser	.50
R 232A	Special 500M Ohm Resistor Identified with 2 Yellow Dots	.35
R 279	30,995 Ohm Resistor	.60
R 281	100 Ohm Resistor	.20
S 338	18" Volume Control Shaft	1.25
S 339	18" Selector Control Shaft	1.25
S 338S	Special 24" Volume Control Shaft	1.50
S 339S	Special 24" Selector Control Shaft	1.50
V 660	Complete "B" Unit—DAK	8.00
V 603	Volume Control	1.50
660	Remote Control Head Com- plete Less Shafts	5.00
	20 Ampere Fuses	.10
	Mounting Bolts	.10
	All carbon resistors	.20
	All sockets	.20
	Dynamic speakers	5.00

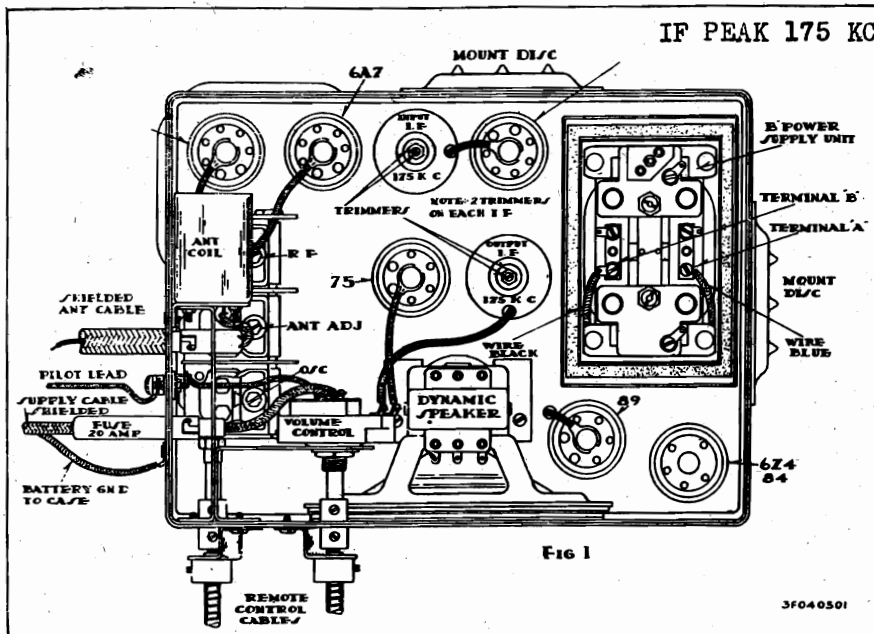

prices subject to
change without notice

First Series Model 660 - Serial Numbers 3F04051 - 23J047424.
Vibrator Heads Only \$4.00

MODEL 680
Schematic, Socket GOODYEAR TIRE & RUBBER CO., INC.
Trimmers, Alignment, Voltage MODEL 680

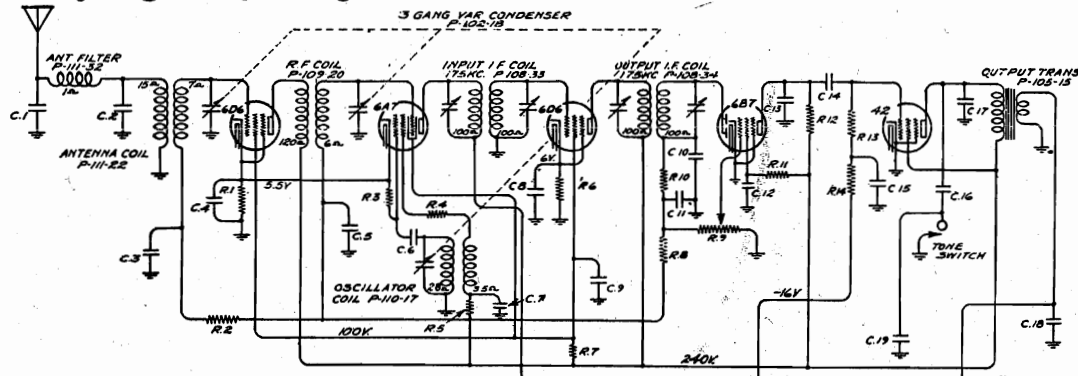

CONDENSERS		RESISTORS	
No.	Value	No.	Value
C.1:-20 MMF MICA	C.15:-.25x400V.	R.1:-500	1/4 W.
C.2:-20 MMF MICA	C.16:-.025x400V.	R.2:-100M	1/4 W.
C.3:-.01x400V.	C.17:-.015x400V.	R.3:-50M	1/4 W.
C.4:-.1x200V.	C.18:-500 MMF MICA	R.4:-3500	1/4 W.
C.5:-.05x200V.	C.19:-500 MMF MICA	R.5:-20M	1/4 W.
C.6:-100 MMF MICA	C.20:-500 MMF MICA	R.6:-1500	1/4 W.
C.7:-.1x200V.	C.21:-2000 MMF MICA	R.7:-25M	1 W.
C.8:-.1x200V.	C.22:-.5 MFD.x120V.	R.8:-500M	1/4 W.
C.9:-.1x200V.	C.23:-8 MFD.x300V.	R.9:-1 Meg. Vol. Control P-101-21	
C.10:-100 MMF MICA	C.24:-.01x400V.	R.10:-100M	1/4 W.
C.11:-100 MMF MICA	C.25:-.01x1400V	R.11:-1 MEG.	1/4 W.
C.12:-.1x200V.	C.26:-8 MFD.x300V.	R.12:-250M	1/4 W.
C.13:-100 MMF MICA		R.13:-301M	1/4 W.
C.14:-.01x400V.		R.14:-301M	1/4 W.
		R.15:-100	
		R.16:-100	

NOTE:

C.4 and C.9 are in one unit P-118-1
 C.7 and C.8 are in one unit P-118-1
 C.26 and C.23 are in one unit P-119-17
 R.16 and R.15 are in one unit P-106-6
 Numbers prefixed by letter "P" are part numbers.
 Voltages taken from points indicated to chassis ground. Vol. control on full, no signal.

I.F. ALIGNMENT:

1. With variable condenser in its minimum capacity position (plates entirely out of mesh) and with volume control full on, connect test oscillator set at 175 K.C., in series with I.F. dummy antenna, to the grid cap of the type 6A7 tube.
2. Adjust trimmer condensers of both input (108-33) and output (108-34) I.F. transformers to resonance with oscillator. See top view for location of these transformers. There are two adjustments on each and they are accessible from the top of the transformer shield and should be adjusted with an insulated screw driver.

BROADCAST ALIGNMENT:




1. With variable condenser in its minimum capacity position, connect test oscillator set at 1550 K.C. and in series with broadcast dummy, to the antenna lead of receiver.
 2. Adjust oscillator trimmer of variable condenser to resonance (this adjustment is on the end section of the three gang condenser—see top view).
 3. Shift test oscillator to 1400 K.C. and pick up signal by rotating condenser and adjust R.F. (center) and antenna (front) trimmers to resonance, see top view.
- (a) Check for sensitivity at 1000, 800 and 600 K.C. by setting test oscillator to these frequencies and picking up the signal by rotating variable condenser. Under no circumstances bend plates of oscillator section, bend R.F. and antenna plates only if absolutely necessary.

Serial No. 60001 up.

DUMMY ANTENNAS:


The dummy antennas referred to in the following instructions are:
 "I.F. Dummy"—A .1 mfd. condenser connected in series with the test oscillator output lead.
 "Broadcast Dummy"—A 200 mmfd. condenser connected in series with the output lead of the test oscillator.

IF PEAK 175 KC.

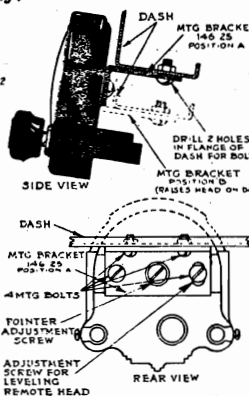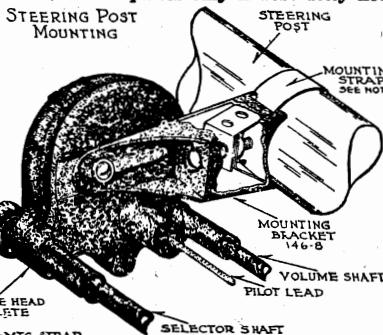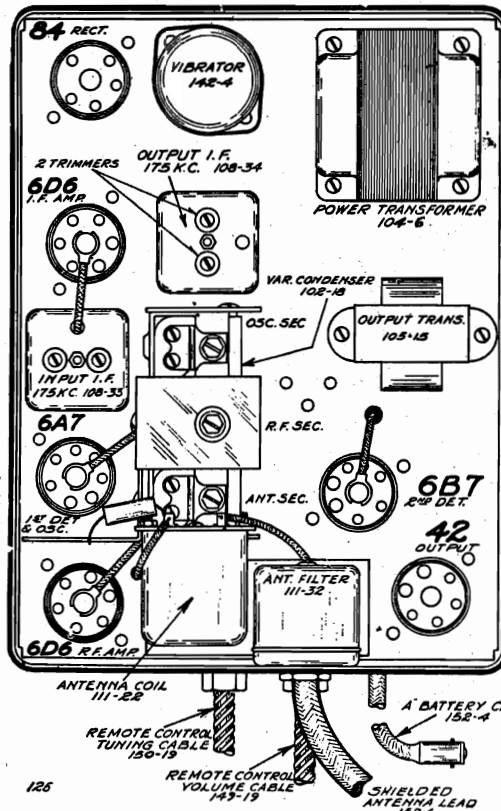

GOODYEAR TIRE & RUBBER CO., INC.

MODELS 685, 686,
Runs 1, 2
Schematic, Voltage
Socket, Trimmers

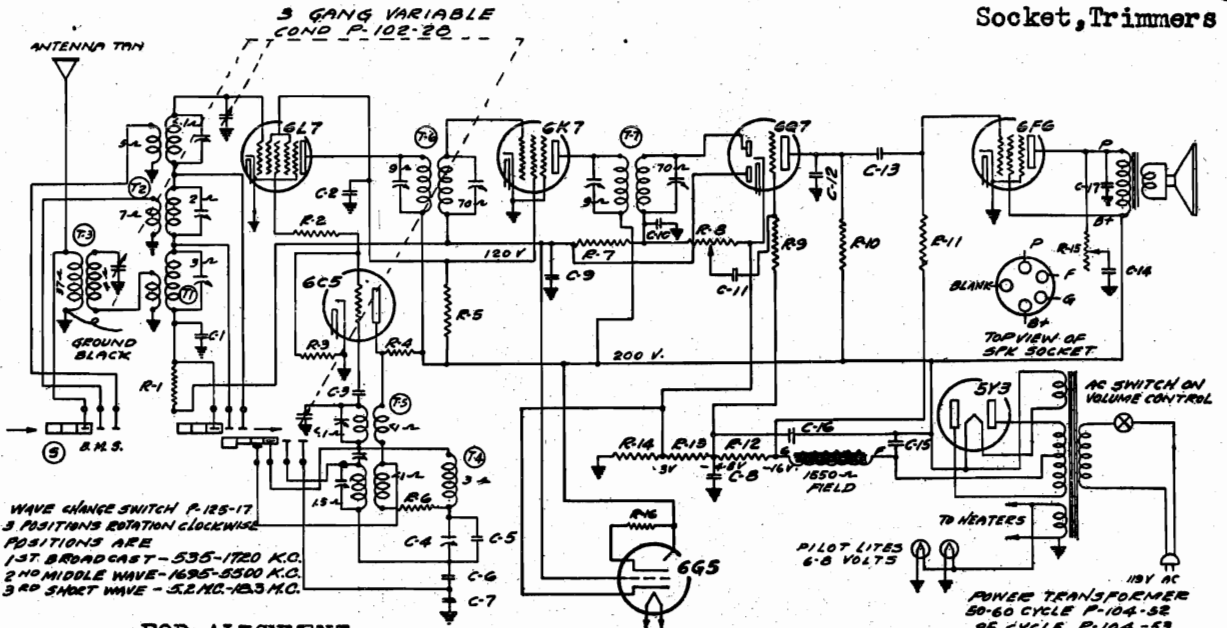

FOR ALIGNMENT
SEE INDEX

IF PEAK 465 KC

No.	Part No.	Description
RESISTORS		
R1	130-20	100M Ohm— $\frac{1}{4}$ Watt—20%
R2	130-105	150 Ohm— $\frac{1}{4}$ Watt—20%
R3	130-12	50M Ohm— $\frac{1}{4}$ Watt—20%
R4	130-104	9M Ohm—1 Watt—20%
R5	130-104	9M Ohm—1 Watt—20%
R6	130-27	50 Ohm— $\frac{1}{4}$ Watt—20%
R7	130-19	1 Meg Ohm— $\frac{1}{4}$ Watt—20%
R8	101-46	1 Meg Ohm—Volume Control
R9	130-4	3 Meg Ohm— $\frac{1}{4}$ Watt—20%
R10	130-103	100M Ohm— $\frac{1}{4}$ Watt—20%


R11	130-102	500M Ohm— $\frac{1}{4}$ Watt—10%
R12		—50 Volt—Carbon
R13	106-26	32 Ohm
R14		52 Ohm
R15	101-58	50M Ohm—Tone Control
R16	130-110	1 Meg Ohm— $\frac{1}{10}$ Watt—10%

CONDENSERS		
C1	100-22	.05 x 200 Volt—25%
C2	100-1	.1 x 400 Volt—25%
C3	129-39	.00005 Mica (MT-0)—20%
C4	124-28	Series Pad (80—225)
C5	129-58	.00055 Mica (MT-0)—10%
C6	129-55	.0034 Mica (MW-W)— $2\frac{1}{2}$ %
C7	129-54	.003 Mica (MW-W)— $2\frac{1}{2}$ %
C8	100-20	.1 x 200 Volt—25%
C9	100-22	.05 x 200 Volt—25%
C10	129-12	.00025 Mica (MT-0)—20%


C11	100-11	.01 x 400 Volt—25%
C12	129-2	.0005 Mica (MT-0)—20%
C13	100-11	.01 x 400 Volt—25%
C14	100-27	.025 x 600 Volt—25%
C15	103-6	8 Mfd. x 350 Volt Electrolytic
C16	103-7	8 Mfd. x 300 Volt Electrolytic
C17	100-25	.002 x 600 Volt—20%

PARTS	
T1	111-49 Broadcast Antenna Coll S.W.—M.W. Antenna Coll
T2	111-50 B.C.—Pre-Selector Coil Assem.
T3	111-51 B.C.—Pre-Selector Coil Assem.
T4	110-38 B.C. Oscillator Coil
T5	110-39 S.W.—M.W. Oscillator Coil
T6	108-74 Input I.F.—465 K.C.
T7	108-73 Output I.F.—465 K.C.
S	125-17 Band Switch

TUNING INDICATOR . NOT
USED WITH SOME SETS

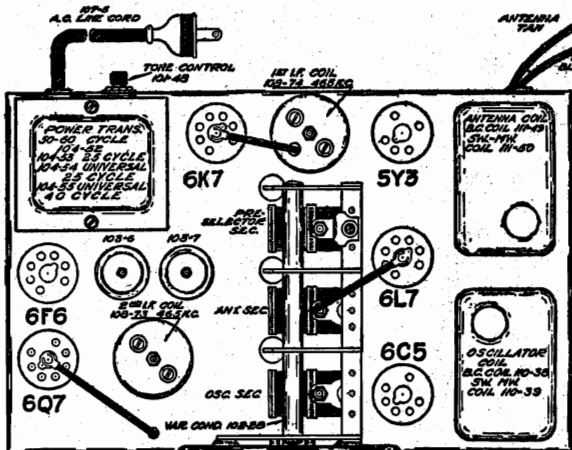

CHASSIS LAYOUT
MODEL 686 Run 1.

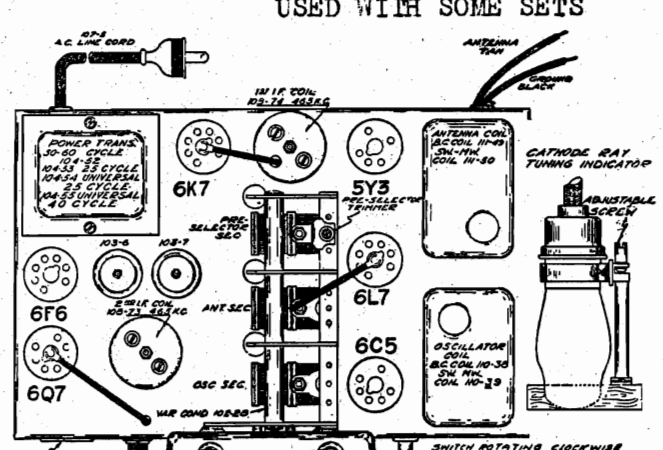

CHASSIS LAYOUT
MODEL 686 Run 2.

NOTE:—
Model 685 does not have tone control or tuning indicator and uses 2 metal and four glass tubes.

MODEL 770

Schematic, Voltage

GOODYEAR TIRE & RUBBER CO., INC.

Alignment, Trimmers Socket

ALIGNMENT FREQUENCIES

- IF - 465 KC Four trimmers.
- BC - BC Series Pad at 600 KC
- Osc.(3), RF (2), Ant.(1) at 1400 KC
- SW - Osc.(8), RF(7), Ant.(6) at 17 MC.
- INT.-MW Series Pad at 1800 KC
- RF(5), Ant.(4), Osc.(9) at 5MC.

Re-check broadcast alignment and if it is found necessary to re-adjust either R.F. or antenna trimmers, repeat the 17 M.C. short wave and 5 M.C. intermediate wave adjustments.

Dummy Antennas

(I.F.)—Consists of a .1 mfd. condenser connected in series with the external oscillator.


(Broadcast)—Consists of a 200 mmfd. condenser and a 20 ohm resistor connected in series with each other and in series with the external oscillator.

(Intermediate and Short Wave)—Consists of a .1 mfd. condenser and a 400 ohm resistor connected in series with each other and in series with the external oscillator.



CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOL. VIII

CONDENSERS		RESISTORS	
No.	Part No. Value	No.	Value
C.1-100-9	.05x200 V.	R.1-100M	1/3 W.
C.2-100-6	.25x200 V.	R.2-180	1/3 W.
C.3-129-22	.0014 Mica	R.3-500	1/3 W.
C.4-129-21	.0002 Mica	R.4-50M	1/3 W.
C.5-100-24	.25x400 V.	R.12-250M	1/3 W.
C.6-100-20	.1x200 V.	R.13-750M	1/3 W.
C.7-129-29	.0038 Mica	R.14-100	1/3 W.
C.8-129-31	.00025 M.	R.15-250M	1/3 W.
C.9-129-30	.0014 Mica	R.16-100M	1/3 W.
C.10-129-28	.00064 M.	R.17-5000	1/3 W.
C.11-100-13	.05x400 V.	R.18-250M	1/3 W.
C.12-100-9	.05x200 V.	R.19-50M	1/3 W.
C.13-129-47	.00004 M.	R.5-12M	1.0 W.
C.14-100-20	.1x200 V.	R.6-15M	2.0 W.
C.15-100-11	.01x400 V.	R.7-500M	1/5 W.
C.16-100-13	.05x400 V.	R.8-1 meg. Vol. Control	P-101-37
C.17-103-4	16 mfd. x350 V.	R.9-1 meg. Vol. Control	R.10-250M
C.18-100-6	.25x200 V.	R.11-300M	control P-101-38
C.19-103-8	14 mfd. x400 V.		
C.20-129-2	.0005 Mica		
C.21-129-47	.00004 M.		
C.22-129-21	.0002 Mica		
C.23-100-9	.05x200 V.		


Serial No. 5J154150 and up

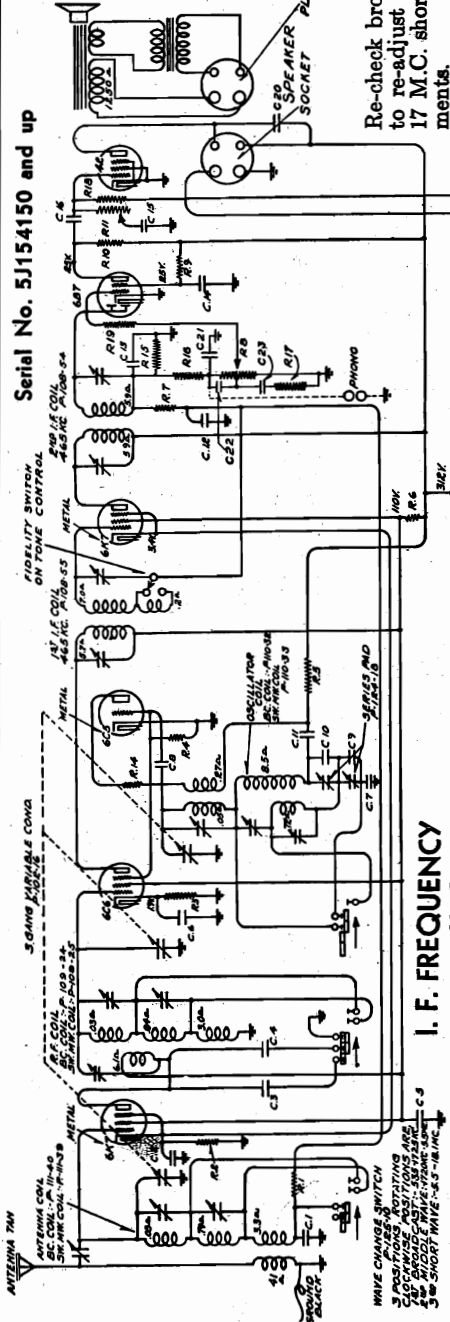

I. F. FREQUENCY
465 K. C.

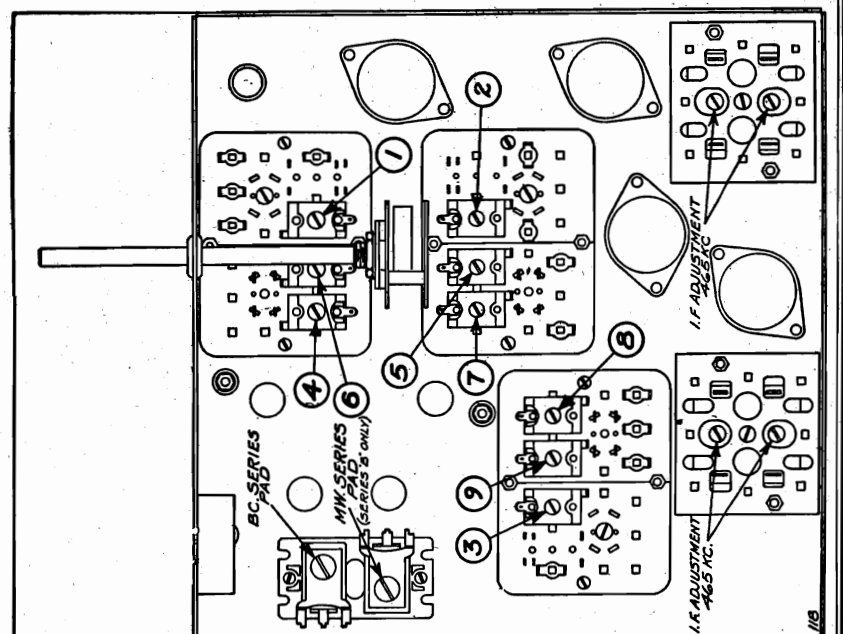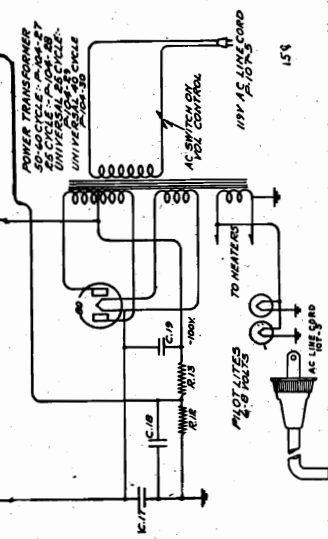


GOODYEAR TIRE & RUBBER CO., INC

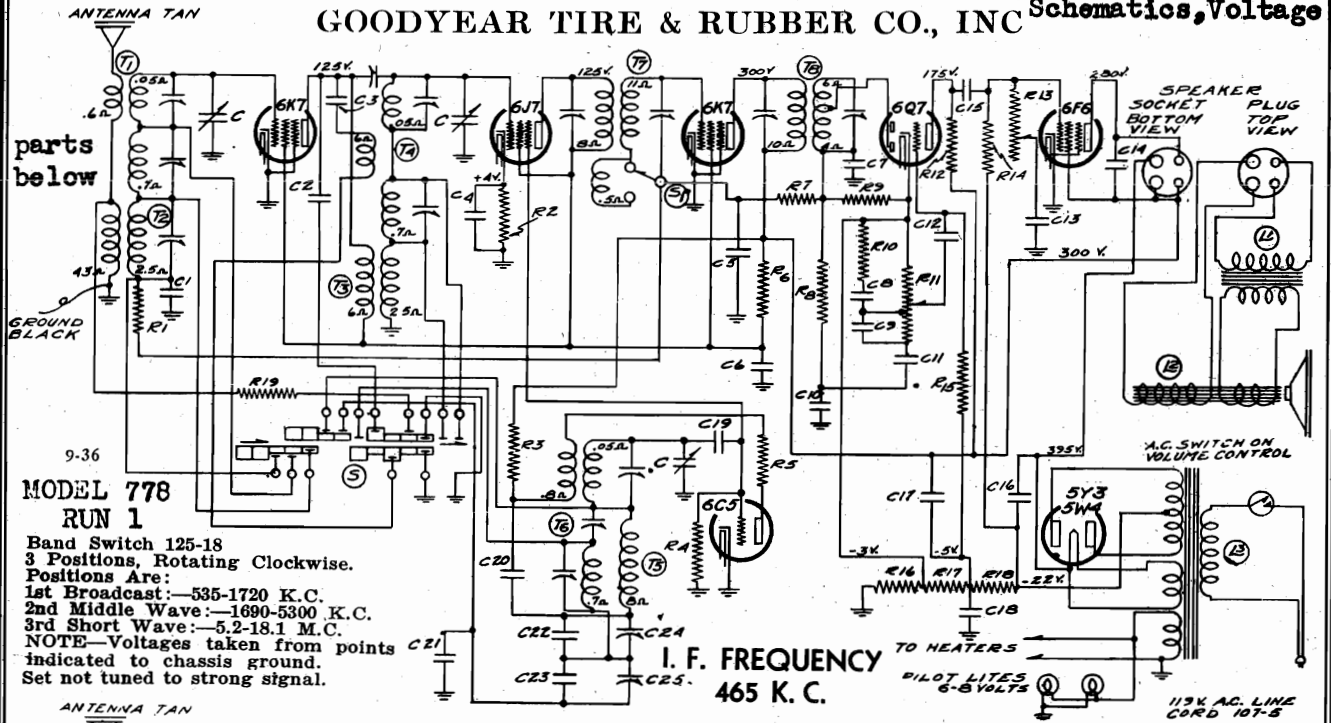

MODEL 778
RUN 1

Band Switch 125-18
3 Positions, Rotating Clockwise.
Positions Are:
1st Broadcast:—535-1720 K.C.
2nd Middle Wave:—1690-5300 K.C.
3rd Short Wave:—5.2-18.1 M.C.
NOTE—Voltages taken from points
indicated to chassis ground.
Set not tuned to strong signal.

I. F. FREQUENCY
465 K. C.

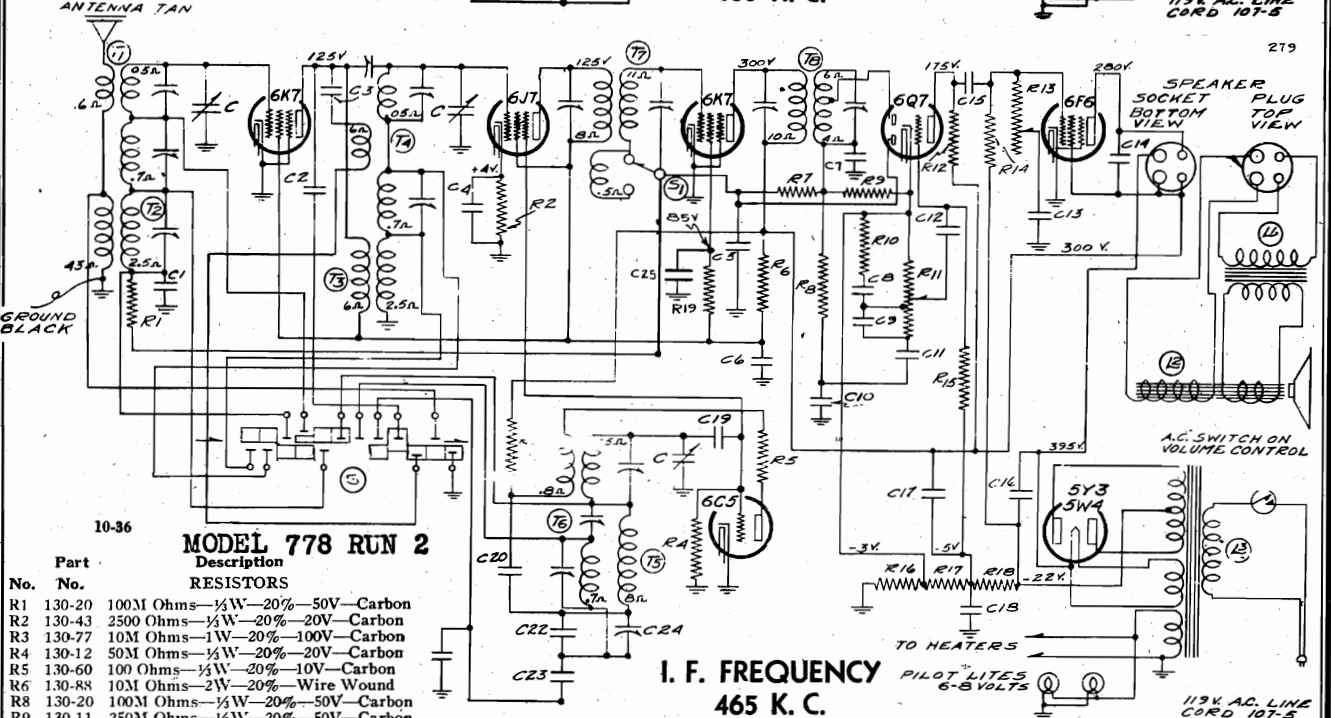

MODEL 778 RUN 2

Part No.	Description
RESISTORS	
R1 130-20	100M Ohms—1/2W—20%—50V—Carbon
R2 130-43	2500 Ohms—1/2W—20%—20V—Carbon
R3 130-77	10M Ohms—1W—20%—100V—Carbon
R4 130-12	50M Ohms—1/2W—20%—20V—Carbon
R5 130-60	100 Ohms—1/2W—20%—10V—Carbon
R6 130-88	10M Ohms—2W—20%—Wire Wound
R8 130-20	100M Ohms—1/2W—20%—50V—Carbon
R9 130-11	250M Ohms—1/2W—20%—50V—Carbon
R10 130-22	5000 Ohms—1/2W—20%—10V—Carbon
R11 101-47	1 megOhms—Vol. Con. with AC Switch
R12 130-20	100M Ohms—1/2W—20%—50V—Carbon
R13 101-38	100M Ohms—Tone Con. with Fid. Sw.
R14 130-3	506M Ohms—1/2W—20%—100V—Carbon
R15 130-38	2 megOhms—1/2W—20%—100V—Carbon
R16 106-27	38 Ohms—10% Muter Resistor
R17 106-27	28 Ohms—10% Muter Resistor
R18 106-27	220 Ohms—10% Muter Resistor
NOTE: R16, R17, R18 in one unit—part 106-27.	
CONDENSERS	
C 102-30	One section of three gang var. cond.
C1 100-9	.05—200 Volt—25%
C2 129-59	.0003 Mica—MT—0—5%
C3 129-39	.00005 Mica—MT—0—20%
C4 100-9	.05—200 Volt—25%
C5 100-9	.05—200 Volt—25%
C7 129-5	.0001 Mica—MT—0—20%
C8 100-9	.05—200 Volt—25%
C9 129-2	.0005 Mica—MT—0—20%
C10 129-60	.0015 Mica—MT—0—20%
C12 100-11	.01—400 Volt—25%
C13 100-26	.02—400 Volt—25%
C14 100-32	.0005—1000 Volt—20%
C15 100-11	.01—400 Volt—25%


I. F. FREQUENCY
465 K. C.

C16 103-8	14 mfd.—400 Volt Electrolytic
C17 103-6	8 mfd.—350 Volt Electrolytic
C19 129-31	.000025 Mica—MT—0—15%
C20 100-13	.05—400 Volt—25%
C22 129-57	.0005 Mica—MT—0—5%
PARTS	
T1 111-54	M.W. and S.W. Antenna Coil Assem.
T2 111-55	Broadcast Antenna Coil Assem.
T3 109-30	Broadcast R.F. Coil Assem.
T4 109-29	M.W. and S.W. R.F. Coil Assem.
T5 110-43	Broadcast Osc. Coil Assem.
T6 110-42	M.W. and S.W. Osc. Coil Assem.
T7 108-64	Input I.F. Coil—465 Kc.
T8 108-63	Output I.F. Coil—465 Kc.
L1	Output Transformer (on speaker)
L2 114-36	8" Speaker (Field Resis. 1250 Ohms)
L3 104-27	Power Transformer (50-60 Cycle)
S 125-18	Band Switch
S1 101-38	Fidelity Switch on Tone Control
PARTS RUN 1 ONLY	
R7 130-3	500M ohms—1/3 Watt—20%—100 Volt—Carbon
R19 130-27	50 ohms—1/3 Watt—20%—Carbon

C6 100-24B	.25—400 Volt—20%
C11 100-9	.05—200 Volt—25%
C18 100-6B	.25—200 Volt—20%
C21 129-54	.003 Mica—MW—W—2 1/2%
C22 129-57	.0005 Mica—MT—0—5%
C23 129-58	.0021 Mica—MW—W—5%
C24 124-18	Padder, 175 mmf. working capacity.
C25 124-18	Padder, 300 mmf. working capacity.
Note: C24, C25 in one unit—part No. 124-18.	
PARTS RUN 2 ONLY	
R7 130-38	2 megOhms—1/2W—20%—100V—Carbon
R19 130-76	30M Ohms—1/2W—20%—10V—Carbon
C6 100-41	.25—400 Volt—20%
C11 100-22	.05—200 Volt—25%
C18 100-46	.25—200 Volt—20%
C21 129-69	.0023 Mica—MW—W—2 1/2%
C23 129-55	.0034 Mica—MW—W—2 1/2%
C24 124-34	Padder, 200 mmf. working capacity
C25 100-11	.01 x 400 Volt—25%

THE HALLICRAFTERS INC.

MODEL S20-R
Schematic Notes

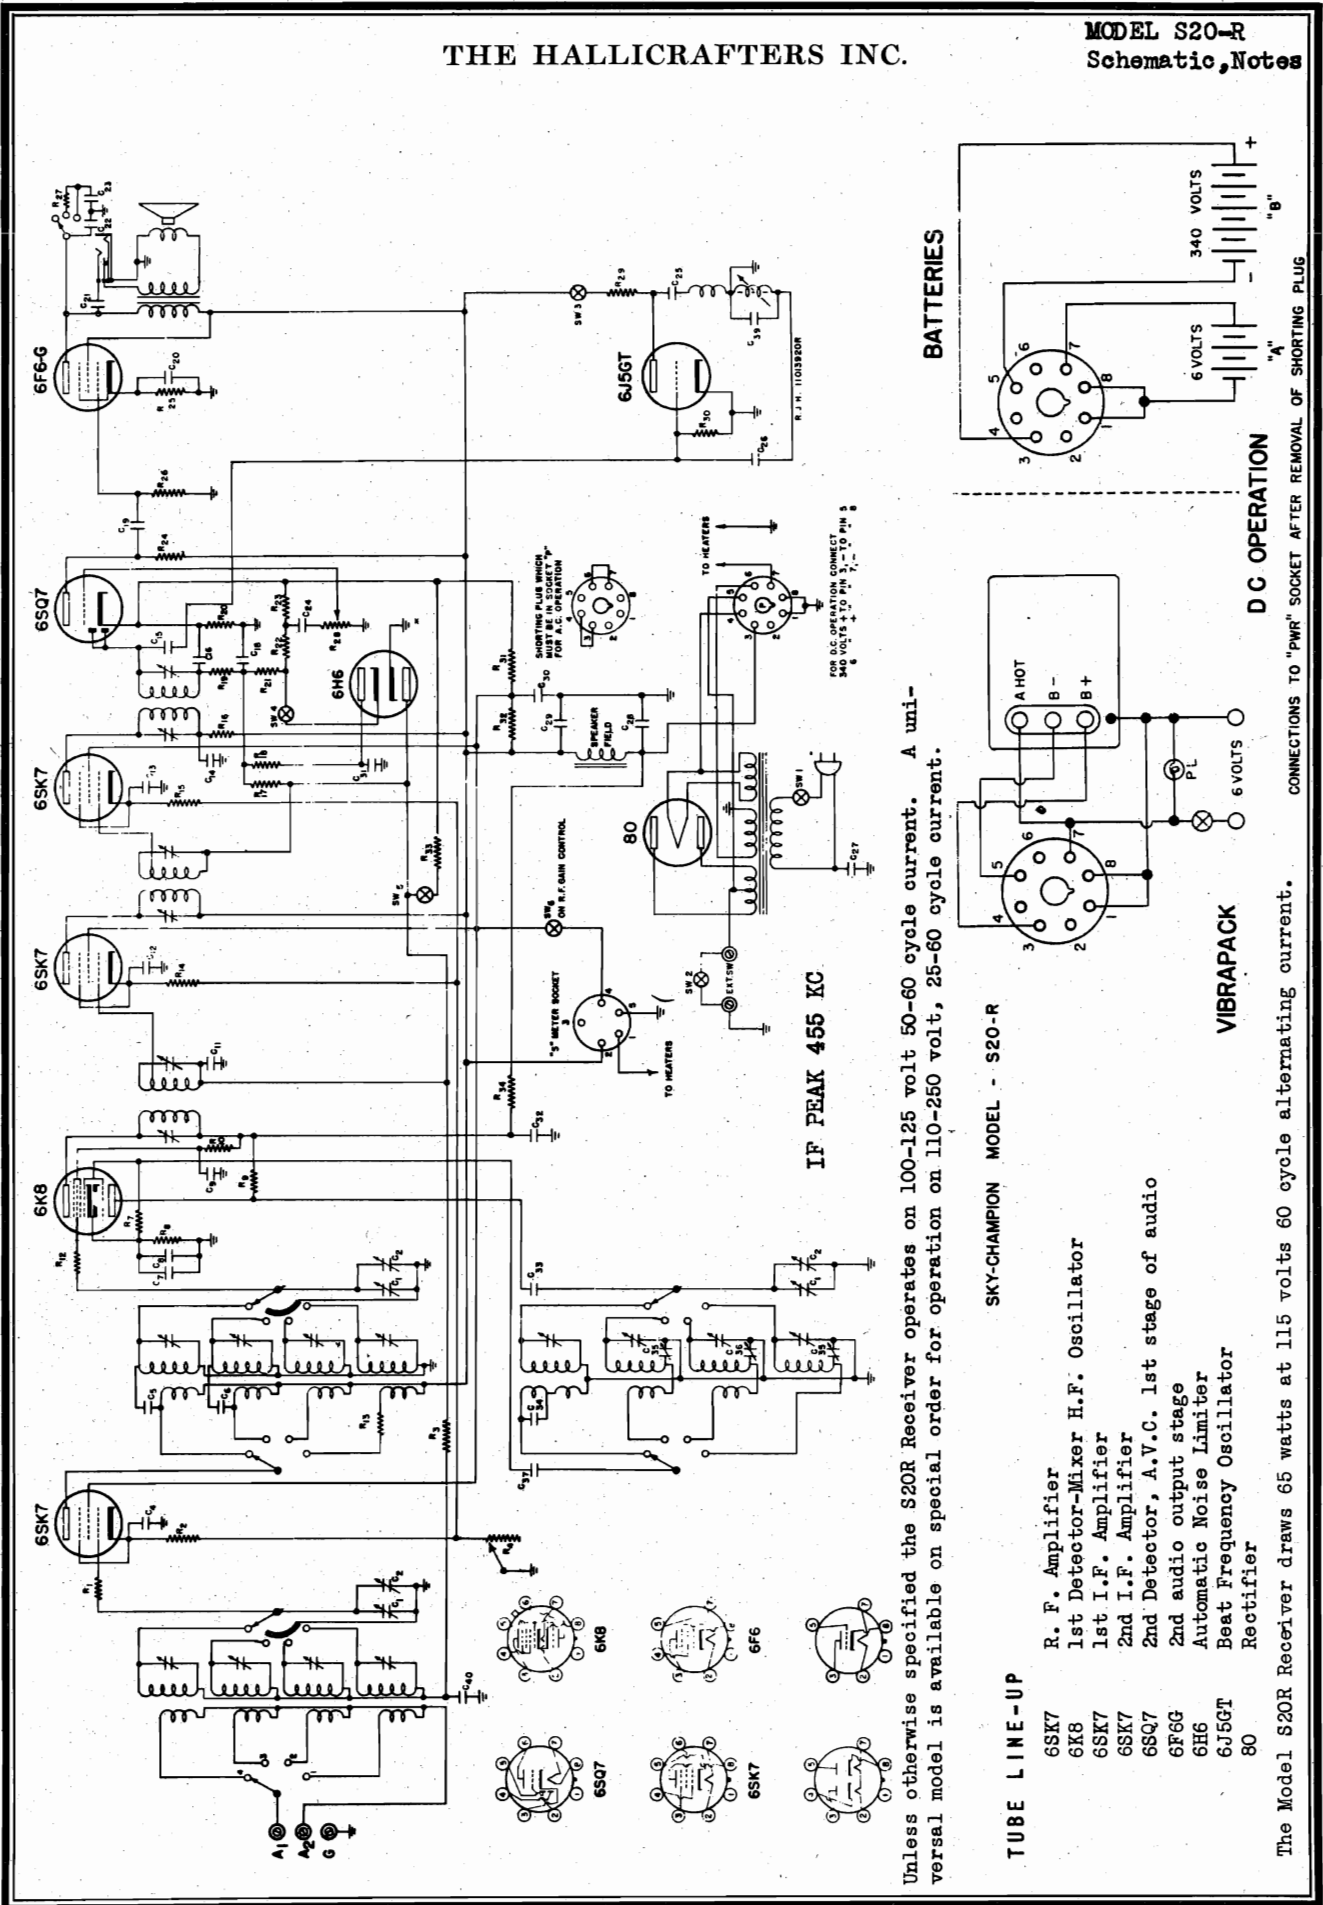

IF PEAK 455 KC



Unless otherwise specified the S20R Receiver operates on 100-125 volt 50-60 cycle current. A uni-versal model is available on special order for operation on 110-250 volt, 25-60 cycle current.

TUBE LINE-UP

- 6SK7 R. F. Amplifier
- 6K8 R. F. Detector-Mixer H.F. Oscillator
- 6SK7 1st I.F. Amplifier
- 6SK7 2nd I.F. Amplifier
- 6SQ7 2nd Detector, A.V.C. 1st stage of audio
- 6F6G 2nd audio output stage
- 6H6 Automatic Noise Limiter
- 6J5GT Beat Frequency Oscillator
- 80 Rectifier

The Model S20R Receiver draws 65 watts at 115 volts 60 cycle alternating current.

BATTERIES

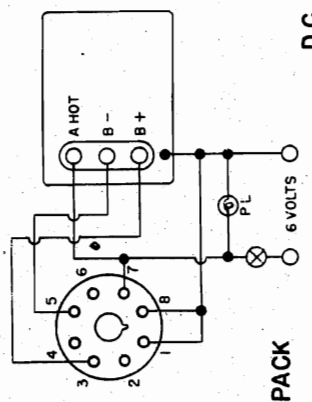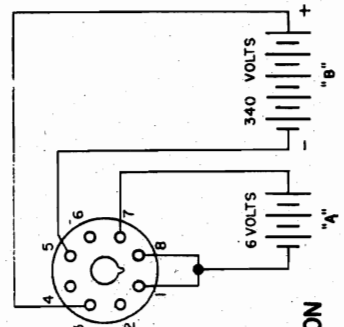

D C OPERATION

CONNECTIONS TO "PWR" SOCKET AFTER REMOVAL OF SHORTING PLUG

MODEL S20-R
Socket, Trimmers
Parts

THE HALLICRAFTERS INC.





Band	Frequency Range	Coverage
1	540 KC to 1,770 KC	
2	1.72 MC to 5.4 MC	
3	5.3 MC to 15.7 MC	
4	15.2 MC to 44. MC	

RESISTORS

NO.	OHMS	WATTAGE
1	30	1/3
2	200	"
3	100,000	"
4	10,000	R.F. Gain
7	50,000	1/3
8	200	"
9	20,000	1
10	30,000	1
12	3C	1/3
13	500	"
14	1,000	"
15	300	"
16	1,000	"
17	2,000,000	"
18	1,000,000	"
19	50,000	"
20	100	1/3
21	100,000	"
22	250,000	"
23	250,000	"
24	250,000	"
25	500	1
26	500,000	1/3
27	5,000	1
28	500,000	A.F. Gain
29	15,000	1-1/2
30	50,000	1/3
31	13,000	1-1/2
32	10,000	3
33	150	1/3
34	10,000	1-1/2

CONDENSERS

NO.	CAPACITY	VOLTAGE	TYPE
1	400	mmf	Main tuning
2	27	"	Band Spread
4	.05	mfd	200
5	25	mmf	Ceramic
6	5	"	"
7	.002	mfd	Mica
8	.05	"	200
9	.02	"	400
11	.02	"	400
12	.05	"	200
13	.05	"	200
14	.02	"	400
15	2	mmf	Twisted Pair
16	50	"	Mica
18	50	"	"
19	.02	mfd	400
20	10	"	25 Electrolytic
21	.01	"	400
22	.01	"	800
23	.02	mfd	600
24	.02	"	400
25	.01	"	400
26	100	mmf	Mica
27	.01	mfd	800
28	30	"	450 Electrolytic
29	10	"	400 "
30	.1	"	200
31	.05	"	200
32	10	"	450 Electrolytic
33	100	mmf	Ceramic
34	105	"	"
35	2400 and 450	"	Pad
36	1400	"	"
37	.002	mfd	Mica
39	.0005	"	"
40	.05	"	200

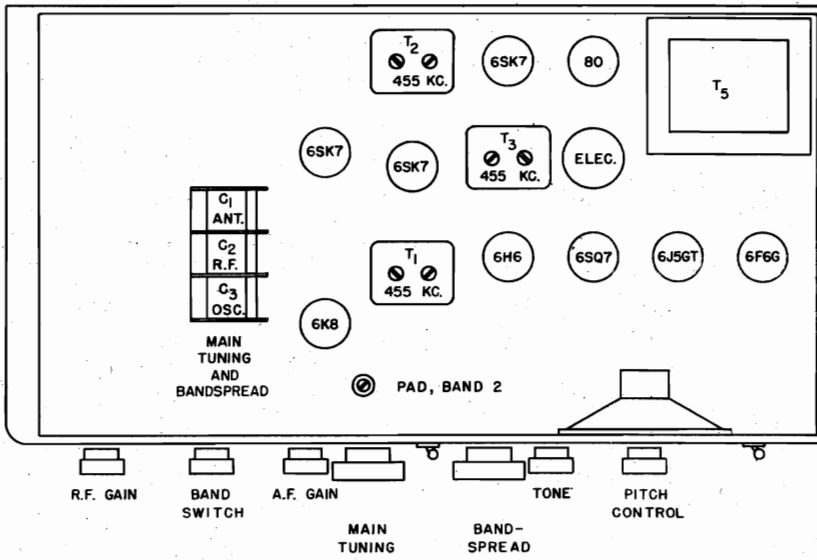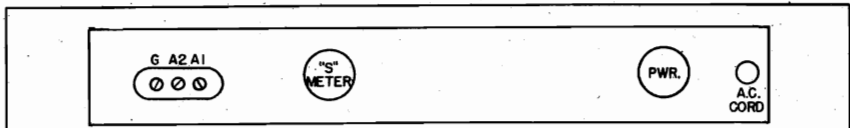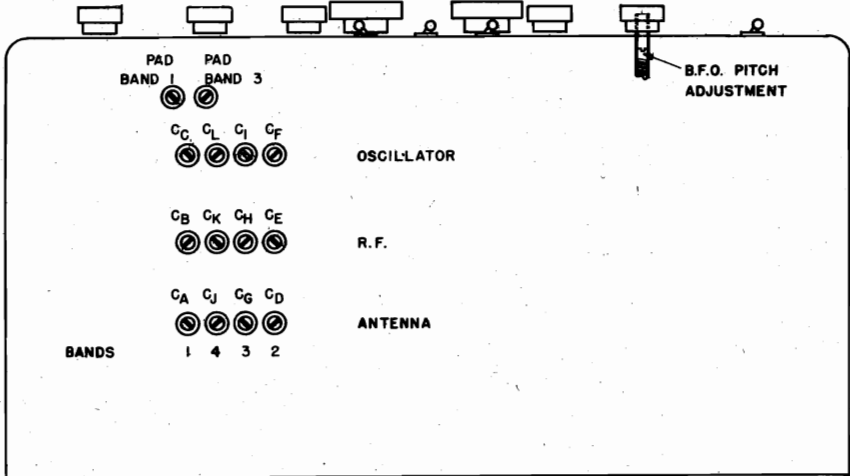

SWITCHES

- SW1 - AC On-Off On Tone Control Switch
- SW2 - Send Receive Switch
- SW3 - BFO On-Off
- SW4 - ANL On-Off
- SW5 - AVC On-Off
- SW6 - "S" Meter On R.F. Gain Control

THE HALLICRAFTERS INC.

MODEL S20-R
Alignment, Antenna Notes
MODEL SX-25
Antenna Notes

ANTENNA

The Sky Champion has an antenna input circuit which will allow the use of either a doublet or Marconi (inverted "L") antenna. The approximate antenna input impedance of the S20R is 400 ohms.

A very serviceable antenna will be the inverted "L", or Marconi type. This antenna should be approximately 75 feet long overall, including the lead-in to the set. Satisfactory operation of the Sky Champion is obtained throughout its tuning range with this type of antenna and because of that fact as well as its ease of construction it is highly recommended.

With the inverted "L" type of antenna A₂ must remain connected to G for best operation. While a ground connection is usually not necessary it might prove to be helpful in reducing noise. A cold water pipe or 6' foot rod driven in moist soil will be a very satisfactory ground when connected to the G terminal on the receiver. Connections to a radiator or gas piping are not recommended.

Should a doublet antenna be used it is suggested that a transmission line of 400 ohms value of impedance be constructed so that a most efficient transfer of energy is obtained. The commercially available all wave doublet antennas are usually provided with a coupling transformer which matches the transmission line to the receiver. This transformer connects to the A₁ and A₂ terminals on the antenna strip. The half-wave length-doublet antenna cut for a particular frequency can be computed by the following formula.

$$\text{Length in feet} = \frac{463}{\text{Frequency in megacycles}}$$

or for example, a half wave 20 meter or 14 megacycle antenna would be

$$\frac{463}{14} \text{ or } 33.7 \text{ feet long overall}$$

This type of antenna is broken in the center with an insulator and has the transmission line connected to each resulting quarter wave section at that point. This antenna is a very good performer, in a direction broadside to its length, only on the relatively narrow group of frequencies for which it was cut. It does not function well on harmonic frequencies.

When using either type of doublet antennas the transmission line should be connected to A₁ and A₂ binding posts. The wire connecting the A₂ to ground or G can be left connected if the performance of the receiver is improved.

ALIGNMENT PROCEDURE

455 KC, Intermediate-Frequency Alignment. B.F.O. switch in the "OFF" position.
Have the controls set as follows: Set band switch to #2 band.
AF and RF gain controls for maximum volume. Set main dial to 2 megacycles, band spread to zero.

Remove 6K8 grid cap and connect the hot side of your 455 KC generator to this tube. Connect the ground terminal of the signal generator to the chassis of the receiver. Now feed a 455 KC signal into the receiver. Adjust all I.F. transformer trimmers on T1, T2, T3, for maximum gain.

R. F. ALIGNMENT

Re-connect the grid cap to the 6K8 tube. Connect the hot side of the generator to the A₁ antenna terminal on the rear of the chassis through a 400 ohm resistor. Be sure a jumper is connected to A₂ and G. Leave signal generator ground connected to the chassis of the receiver.


The location of the following trimmers and padders can be determined by referring to the top and bottom chassis views. All pad adjustments are for the low frequency end of each band while the trimmers are for the high-frequency ends.

In order to get at the RF trimmers the guarantee card can be removed by placing a knife under the small snap fasteners holding it in place. So that most satisfactory adjustment of the trimmers and padders can be made, it is advisable to "Rock" the condenser gang across the signal being delivered by the generator until that particular circuit has been accurately peaked at all frequencies except 1400 KC and 4 MC.

Bands	Trim at	Pad at
1	1400 KC Adjust C _A C _B C _C	600 KC Adjust Pad Band 1
2	4 MC Adjust C _D C _E C _F	2 MC Adjust Pad Band 2 (Top Chassis)
3	14 MC Adjust C _G C _H C _I	7 MC Adjust Pad Band 3
4	34 MC Adjust C _J C _K C _L	17 MC No pad on this Band

MODEL SX-25, Super Defiant Schematic

THE HALLICRAFTERS INC.

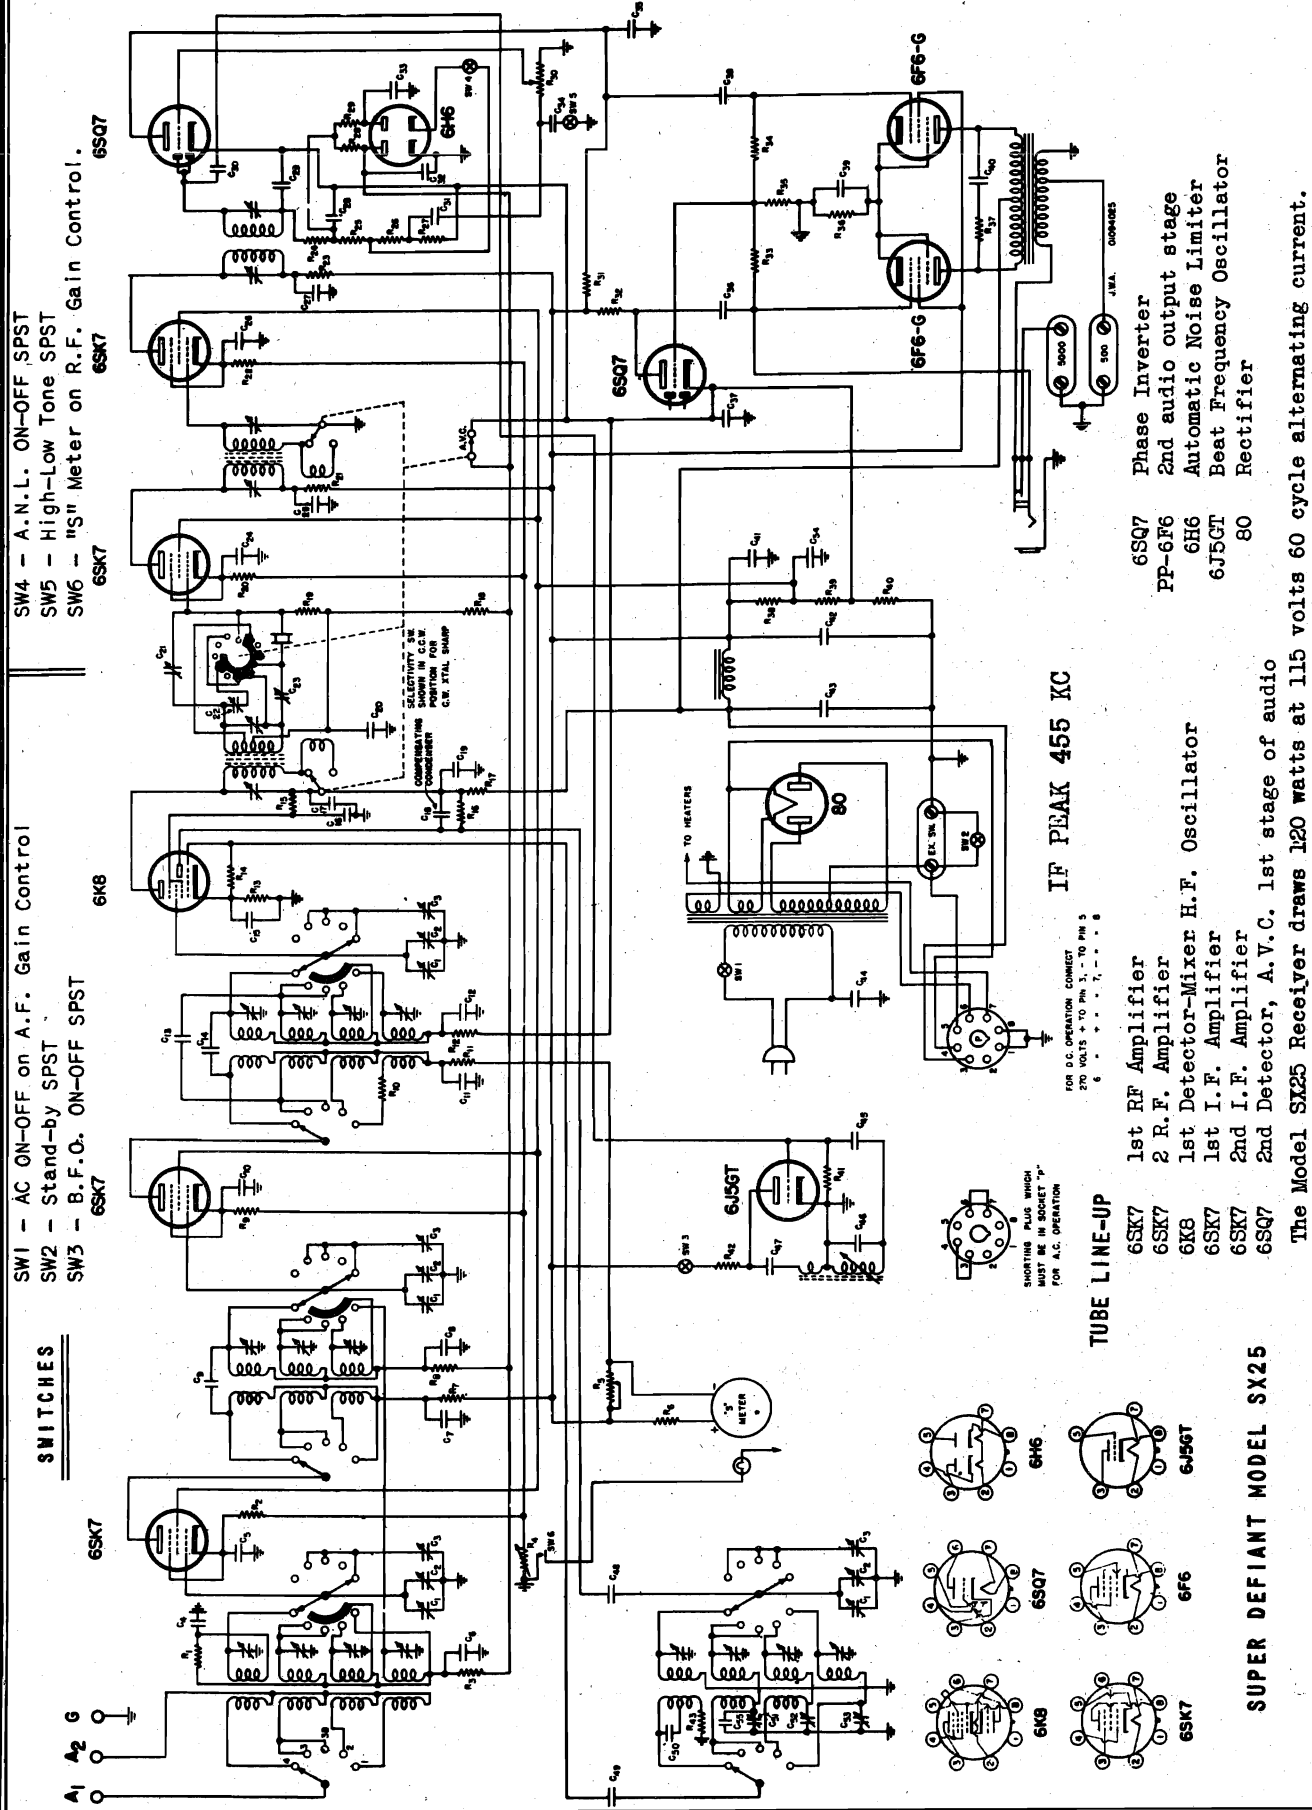

SW1 - AC ON-OFF on A.F. Gain Control
 SW2 - Stand-by SPST
 SW3 - B.F.O. ON-OFF SPST
 6SK7

SW4 - A.N.L. ON-OFF SPST
 SW5 - High-Low Tone SPST
 SW6 - "5" Meter on R.F. Gain Control.
 6SK7 6SQ7

6SQ7 Phase Inverter
 PP-6F6 2nd audio output stage
 6H6 Automatic Noise Limiter
 6J5GT Beat Frequency Oscillator
 80 Rectifier

IF PEAK 455 KC

FOR D.C. OPERATION CONNECT
 250 VOLTS + TO PIN 3, - TO PIN 5

TUBE LINE-UP
 6SK7 1st RF Amplifier
 6SK7 2 R.F. Amplifier
 6K8 1st Detector-Mixer H.F. Oscillator
 6SK7 1st I.F. Amplifier
 6SK7 2nd I.F. Amplifier
 6SQ7 2nd Detector, A.V.C. 1st stage of audio

SUPER DEFIANT MODEL SX25

The Model SX25 Receiver draws 120 watts at 115 volts 60 cycle alternating current.

THE HALLICRAFTERS INC.

FREQUENCY METER TUNING

MODEL SX-25, Super Defiant Alignment, Trimmers, Parts Frequency Meter Tuning

Around the outer edge of the main tuning dial the amateur bands for which "Frequency Meter Tuning" is available are marked with the red numerals; 10 - 20 - 40 and 80. Set the red line beneath these numerals directly opposite the hair-line on the window and switch to the correct band. The band spread scale will indicate correct frequency within the limits of the accuracy of the setting and calibration.

The band spread dial of the SX25 Model is calibrated so that the operator may determine quite closely the frequency of the signal to which he is listening on the 10 to 80 meter amateur bands inclusive. The outer edge of this dial is marked off in 100 divisions for additional ease in logging and locating stations.



BAND 3B -- Special reference is called to this position of the Band Switch so that no confusion will be experienced. Band 3B is the same as Band 3 and is used in order to have the band spreading of the 40 meter band accomplished through approximately the same number of degrees on the Band Spread Scale as occupied by the other amateur bands for which calibration appears. When the Band Switch is placed in position 3B another section of the band spread condenser is paralleled in the circuit. Band 3 main scale calibration will read somewhat high when the Band Switch is set on 3B.

Note: The accuracy of the main dial calibration will hold only if the BAND SPREAD condenser is set at minimum capacity, or the position indicated by 100 on the Band Spread dial which has been approached by turning the Band Spread Knob in a clockwise direction, or to the right, as far as it will go.

CONDENSERS				RESISTORS							
NO.	CAPACITY	VOLTAGE	TYPE	NO.	OHMS	WATTAGE					
C1	Main Tuning Gang			R1	100,000	1/3	20	800	1/3	32	250,000
2	2 PL. Bd. Spr. Sec.			2	400	"	21	3,000	"	33	250,000
3	5 " " " "			3	100,000	"	22	1,000	"	34	250,000
4	.01 mfd	200	Paper	4	10,000 R. F. Gain		23	3,000	1/3	35	200,000
5	.05 mfd	200	Paper	5	500 S Meter		24	50,000	"	36	250
6	.05 mfd	200	Paper	6	100	1/3	25	250,000	"	37	20,000
7	.02 mfd	400	Paper	7	3,000	"	26	100,000	"	38	15,000
8	.05 mfd	200	Paper	8	100,000	"	27	250,000	"	39	15,000
9	35 mmfd		Ceramicon	9	400	"	28	2,000,000	"	40	150
10	.05 mfd	200	Paper	10	500	"	29	1,000,000	"	41	50,000
11	.02 mfd	400	Paper	11	3,000	"	30	500,000 A.F. Gain		42	20,000
12	.05 mfd	200	Paper	12	100,000	"	31	250,000	1/3	43	8
13	5 mmfd		Ceramicon	13	400	"					
14	35 mmfd		Ceramicon	14	50,000	"					
15	.05 mfd	200	Paper	15	30,000	"					
16	.05 mfd	400	Paper	16	15,000	"					
17	.02 mfd	400	Paper	17	4,000	"					
18	4.5 mmfd		Compensating	18	100,000	1/3					
19	10 mfd	350	Electrolytic	19	500,000	"					
20	.05 mfd	200	Paper								
21	25 mmfd		Phasing								
22	1.5 to 18 mmfd		"TXS" Trimmer								
23	1.5 to 18 mmfd		Trimmer								
24	.05 mfd	200	Paper								
25	.02 mfd	400	Paper								
26	.05 mfd	200	Paper								
27	.02 mfd	400	Paper								
28	50 mmfd		Mica								
29	100 mmfd		Mica								
30	3 mmfd		Twisted Pair								
31	.02 mfd	400	Paper								
32	.02 mfd	400	Paper								
33	.05 mfd	200	Paper								
34	.002 mfd	1,600	Tubular Oil								
35	250 mfd		Mica								
36	.05 mfd	400	Paper								
37	10 mfd	25	Electrolytic								
38	.05 mfd	400	Paper								
39	10 mfd	25	Electrolytic								
40	.002 mfd	1,600	Tubular Oil								
41	.1 mfd	400	Paper								
42	10 mfd	350	Electrolytic								
43	30 mfd	350	Electrolytic								
44	.01 mfd	600	Paper								
45	100 mmfd		Mica								
46	500 mmfd		Mica								
47	.02 mfd	400	Paper								
48	105 mmfd		Ceramicon								
49	.002 mfd		Mica								
50	105 mmfd		Ceramicon								
51	2300 mmfd		Dual Pad								
52	1400 mmfd		Single Pad								
53	450 mmfd		Dual Pad								
54	.1 mfd	200	Paper								
55	700 mmfd		Mica								

ANTENNA

SEE ANTENNA DATA FOR MODEL S20-R

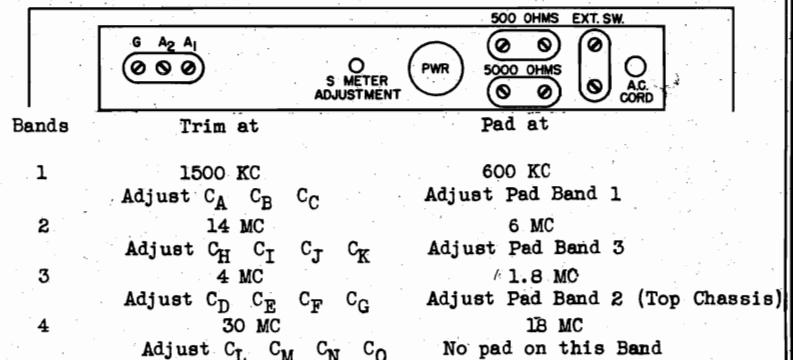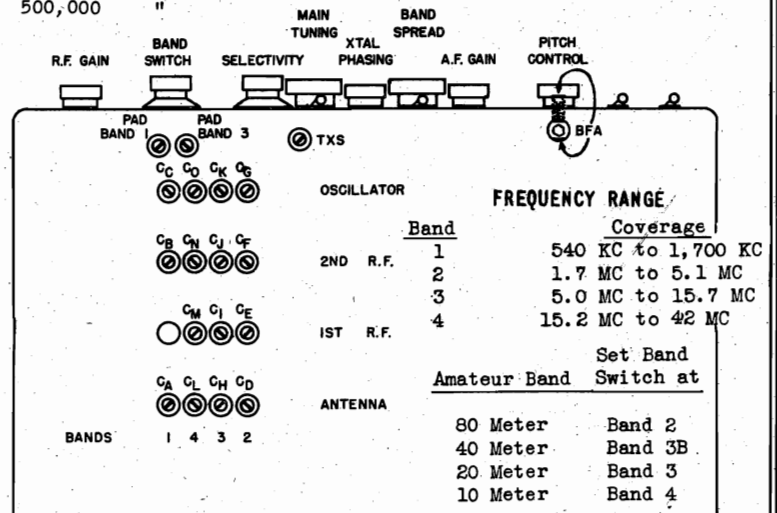

MODEL SX-25 Super Defiant
Alignment Procedure, NotesTHE HALLICRAFTERS INC.
"S" METER

When the R.F. gain control is advanced until a switch is heard to operate, a light will appear behind the translucent scale of the meter itself. Only when this light is on will the meter indicate in "S" units. When so adjusted the meter can be used as a resonance indicator. With the R.F. gain control backed off from maximum the meter is still in the circuit but will not indicate carrier level accurately. On the rear apron of the chassis is the "S" meter adjustment screw. To set the "S" meter, disconnect the antenna and have the R.F. Gain Control on full and the selectivity switch in the "I.F. SHARP A.V.C. ON" position. Now, adjust this knurled knob until the meter reads zero. Reconnecting the antenna and tuning in a station will show its relative carrier intensity.

The 500 and 5000 ohm terminals are for connections to a loud speaker or other load of those impedance values. The matching SX25 speaker should be connected to the 5000 ohm strip. When headphones are plugged into the phone jack the 5000 ohm speaker connection is automatically disconnected.

The "EXT. SWITCH" terminal strip is for external switch provisions should the receiver be controlled by a remote switch or relay. The SEND-REC switch on the panel must be in the Send Position when an external relay is used for stand-by operation.

Unless otherwise specified the SX25 Receiver operates on 100-125 volt 50-60 cycle current. A universal model is available on special order for operation on 110-250 volt, 25-60 cycle current.

ALIGNMENT PROCEDURE

455 KC, Intermediate-Frequency Alignment.

Have the controls set as follows:

AF and RF gain controls for maximum volume.

B.F.O. switch in the "ON" position.

Set band switch to #2 band.

Set main dial to 2 megacycles, band spread to 100.

Selectivity switch in "AVC OFF" xtal phone position.

Remove the 6K8 tube grid cap. Connect a 1 megohm resistor between grid cap and grid of 6K8 tube. Now connect the hot side of the signal generator to the grid of the 6K8 tube through a .1 MFD condenser. Connect the ground terminal of the signal generator to the chassis of the receiver. Remove modulation from generator and feed a 455 KC signal into the receiver and set the pitch control to give a beat note of approximately 1000 cycles. Adjust all I.F. transformer trimmers for maximum gain with the exception of the secondary trimmer on transformer T1. Identified on top chassis view as T1S. In adjusting this trimmer it will be noted that the output reaches a maximum goes through a dip and then back to maximum again. Wobble the IF frequency and align to the dip between the two maximum points. A distinct change in the crystal note sounding like an apparent broadening of the crystal action will be noted when the correct adjustment has been reached. At this point in the alignment it is necessary to make an adjustment on the phasing control as follows: Tune the signal generator so that its signal will go through zero beat and then to the other side of zero beat until a signal of approximately 5000 cycles is heard in the speaker or headphones. Now carefully adjust the "PHASING CONTROL" until this signal is reduced in volume to a minimum. Reset the signal generator to its original frequency and recheck the adjustment of T1S. Now repeak carefully the other trimmers on I.F. transformers for maximum gain. Place the selectivity switch in the "CW. XTAL" position leaving all controls on the receiver as previously adjusted. Again wobble the frequency of the signal generator carefully through the very narrow range of the crystal peak. Adjust small trimmer through hole in the bottom plate marked "TXS" until the sharp crystal peak reaches maximum output. At this point the crystal is extremely sharp and maximum output is possible. If this setting gives too sharp crystal filter action this "TXS" trimmer can be adjusted counter-clockwise for broader crystal response to suit the operator.

B.F.O. ADJUSTMENT

In the center of the "PITCH CONTROL" shaft, after the knob has been removed, you will find a recessed screw for adjustment of the Beat Frequency Oscillator.

Before rotating this screw with a suitable screw-driver loosen the set screw on this shaft. This set screw can be reached through a hole in the bottom plate directly under the B.F.O. Assembly marked "BFA".

Now tune in a signal on the receiver with the BFO off. Exact resonance can be determined with the controls so adjusted that the "S" meter will indicate. After you have assured yourself that you have the signal properly tuned in place the selectivity switch in anyone of the three "AVC OFF" positions. Turn the BFO switch to the "ON" position. You now can adjust the screw in the center of the pitch control shaft until a beat note is heard. Tighten the set screw through the bottom plate, replace the knob and the BFO adjustment is completed.

R. F. ALIGNMENT

Re-connect the grid cap to the 6K8 tube. Connect the hot side of the generator to the A₁ antenna terminal on the rear of the chassis. Be sure a jumper is connected to A₂ and G. Leave signal generator ground connected to the chassis of the receiver.

The location of the following trimmers and padders can be determined by referring to the top and bottom chassis views. All pad adjustments are for the low frequency end of each band while the trimmers are for the high frequency ends.

In order to get at the RF trimmers the guarantee card can be removed by placing a knife under the small snap fasteners holding it in place. So that most satisfactory adjustment of the trimmers and padders can be made, it is advisable to "Rock" the condenser gang across the signal being delivered by the generator until that particular circuit has been accurately peaked.

HALSON RADIO & TELEVISION INC. MODEL 6-Button Automatic Tuner-Data

SIX BUTTON AUTOMATIC TUNER

NOTE:--THE ADJUSTMENT SWITCH AND I.F. CONNECTIONS WERE ELIMINATED FROM THIS CIRCUIT, THEREFORE, OMIT ANYTHING PERTAINING TO THEM.

This push button assembly is for convenience and rapidity in the selection of favorite stations. Use preferably on strong local stations of good quality or the major networks. It in no way affects the operation of the normal manual tuning control, located below the dial which is used as heretofore, but is rather an adjunct for convenience.

CHOOSING THE STATIONS FOR AUTOMATIC TUNING Before any adjustment, select the six stations desired. Check their frequency and choose them so that two are from the low frequency end of the broadcast band, two are from the middle frequency and two are of the higher frequencies. Note that all trimmers in the back are marked with the range they cover. Be sure that each set of trimmers is used for only a station within its range.

In most cases this should accommodate the six most popular stations. Occasionally three stations might be desired in one frequency group. Since there are only two buttons available, the least important station will have to be tuned in by the manual control. The chosen stations should be lined up on the buttons in the order of their frequency with the lowest frequency on the left hand side, the next higher frequency to the right of it and so on until the highest frequency station is on the furthest right hand button. Remove the two small wood screws and take off the front escutcheon. Insert in the order chosen and in the correct windows, the station call letters desired behind the little celluloid windows.


ADJUSTMENT FOR A PARTICULAR BUTTON Each button is wired up to a particular trimmer set in the back. The back adjustment is approximately directly behind its button. For example, the last button nearest one end of the cabinet is adjusted by the last trimmer nearest that same end of the cabinet. Again, the third button from one end of the cabinet is adjusted by the third set of trimmer screws from that same end.

METHOD OF STATION ADJUSTMENT Having picked the station desired, the button for it and the trimmer screws behind the button, the next step is adjustment of the trimmers to actually receive the desired station. Turn back the switch to ADJUSTMENT position. Tune in manually the desired station and leave there. Turn the front automatic button switch to right or automatic position (left button will light up). Turn bottom screw of trimmer (oscillator) until desired station is heard. Switch back and forth between manual and automatic positions for easy identification of the desired station. Turn volume control up.

CAUTION - It is usually necessary at the beginning to arbitrarily screw top or RF trimmer in fairly tight to right. Sometimes a loud "buttering" or oscillation will be heard as lower oscillator screw is turned. When this occurs, tighten up (turn right, clockwise) the upper RF trimmer and then continue adjusting the oscillator until desired station is heard. The actual receiving of the station will always first have to be accomplished by the oscillator trimmer.

After the station is heard, tune upper trimmer for maximum response. Repeat both trimmer adjustments for greater accuracy. Continue to the next button and adjust its bottom and top trimmers behind it. After all trimmers have been adjusted, turn back switch to OPERATION position and leave there in that position henceforth. The receiver is now ready for use. The front button switch will instantly permit use of either automatic or manual tuning without any interaction or dependence of one upon the other.


(A)	(B)	(C)	(D)	(E)	(F)
550	700	700	1000	1000	1000
To	To	To	To	To	To
900 KC.	900 KC.	1300 KC.	1300 KC.	1500 KC.	1500 KC.

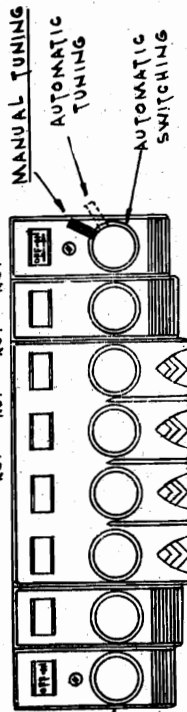

INDICATOR LAMP (LIGHTS ON AUTOMATIC TUNING)

(A)	(B)	(C)	(D)	(E)	(F)
550	550	700	700	1000	1000
To	To	To	To	To	To
900 KC.	900 KC.	1300 KC.	1300 KC.	1500 KC.	1500 KC.

REAR VIEW

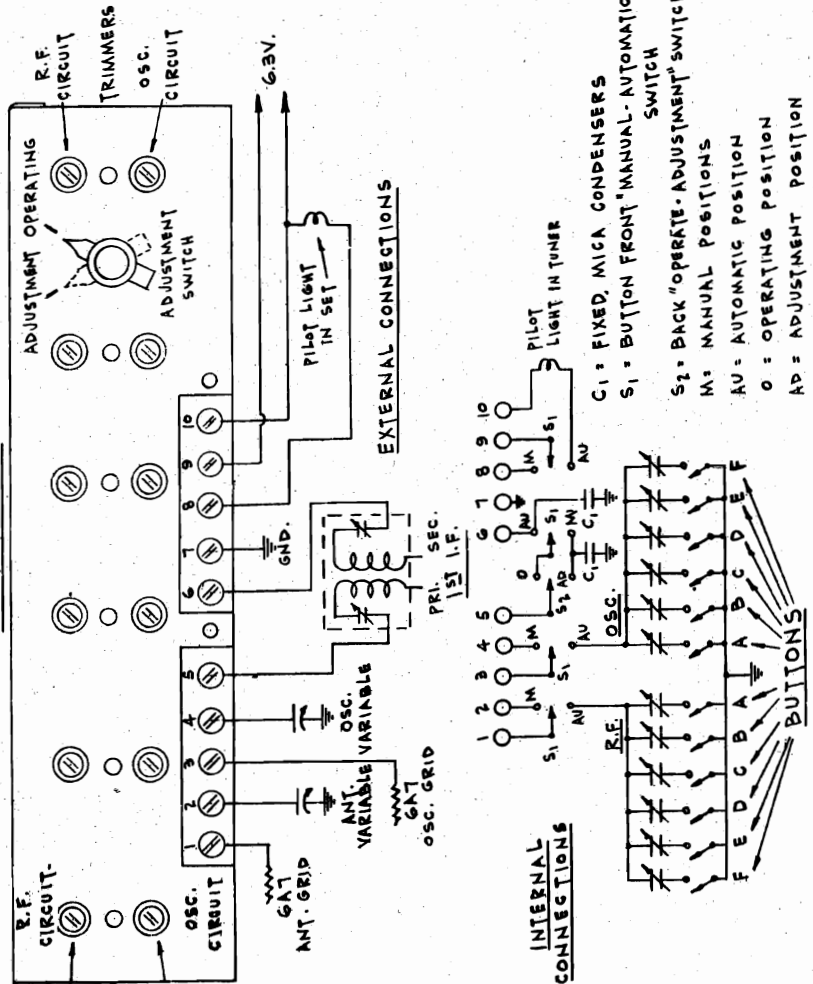


EXTERNAL CONNECTIONS

INTERNAL CONNECTIONS

- C1 = FIXED, MICA CONDENSERS
- S1 = BUTTON FRONT "MANUAL-AUTOMATIC" SWITCH
- S2 = BACK "OPERATE-ADJUSTMENT" SWITCH
- M = MANUAL POSITIONS
- AU = AUTOMATIC POSITION
- O = OPERATING POSITION
- AD = ADJUSTMENT POSITION

HALSON RADIO & TELEVISION INC.

MODEL 40B2X
Schematic, Socket
Alignment, Trimmers

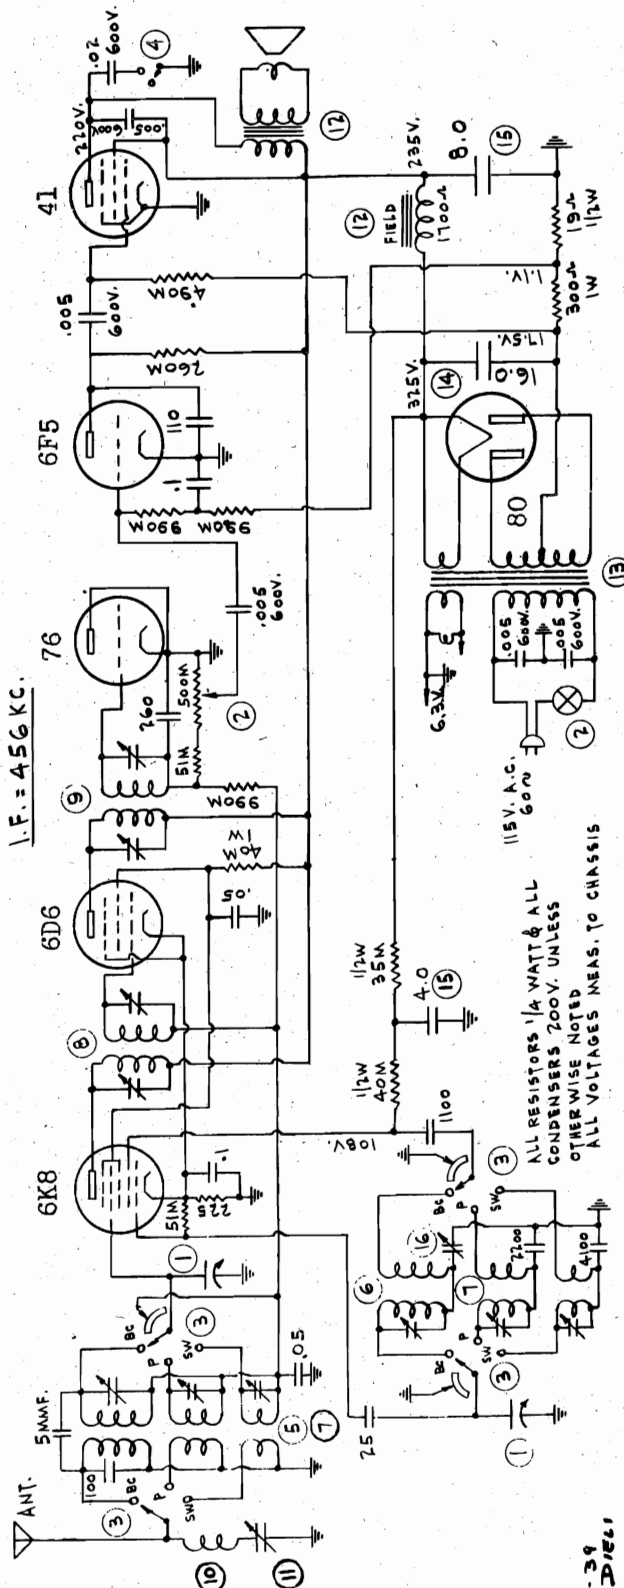


I.F. = 456 KC.

ALL RESISTORS 1/4 WATT & ALL
CONDENSERS 200V. UNLESS
OTHERWISE NOTED
ALL VOLTAGES MEAS. TO CHASSIS

10-31-39
App - F.D. 1161

- 6 = 2485 - OSCILLATOR "
- 7 = 2490 - ANT.-OSC. "
- 8 = 1900L - I.F. TRANSFORMER - 1ST - 456 K.C. - 2ND. "
- 9 = 1848P - " "
- 10 = 2297-1 - WAVE TRAP COIL - 456 KC. "
- 11 = 2337-1 - " TRIMMER
- 12 = 2271-1 - SPEAKER ASSEMBLY
- 13 = 2311 - POWER TRANSFORMER - 115V.-60N
- 14 = 2353 - ELECT. COND. (MET) 1G.MFD. 450V.
- 15 = 2308-2 - " B-4 MFD. 350V.
- 16 = 1821-1 PADDER COND. 700-685 MMFD.

- ALIGNMENT PROCEDURE**
- (1) Set service oscillator to 456 kc and connect the output lead to the top grid of 6A7. Adjust trimmers for maximum response.
 - (2) Connect oscillator set at 456 kc to the antenna lead through a .0002 mfd. condenser; variable condenser closed, and adjust wave trap trimmer for minimum response. Band switch to be in broadcast position.
 - (3) Turn band selector to the short wave band, set the test oscillator to 22 mc and connect to antenna lead through 400 ohm dummy antenna. Set dial pointer to 22 mc and adjust short wave oscillator trimmer until signal is heard. Then adjust short wave antenna trimmer for maximum response.
 - (4) Turn band selector to police band, set test oscillator to 6000 kc, connect to antenna lead through 400 ohm dummy antenna. Set dial pointer to 6000 kc and adjust police oscillator trimmer until signal is heard. Then adjust broadcast antenna trimmer for maximum response.
 - (5) Turn band selector to broadcast band, set test oscillator to 1500 kc, connect to antenna lead through a .0002 mfd. condenser. Set dial at 1500 kc and adjust broadcast oscillator trimmer until signal is heard. Then adjust broadcast antenna trimmer for maximum response.
 - (6) With band selector in broadcast position, set test oscillator to 600 kc and adjust broadcast oscillator series padder for maximum response by simultaneously adjusting the padder and rocking the tuning dial.
 - (7) Repeat procedures 5 and 6 for greater accuracy.

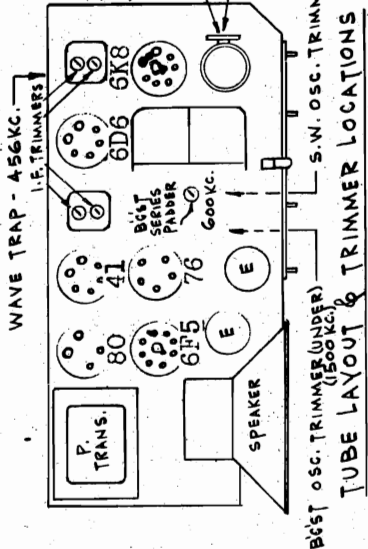


MINOR REASONS FOR FAILURE TO FUNCTION - Defective tubes, grid caps off, volume control not fully turned on, tubes not in their proper sockets, shorted antenna, defective plug or wiring loose in socket.

MODEL 40C3X

Schematic, Socket
Alignment, Trimmers


HALSON RADIO & TELEVISION INC.

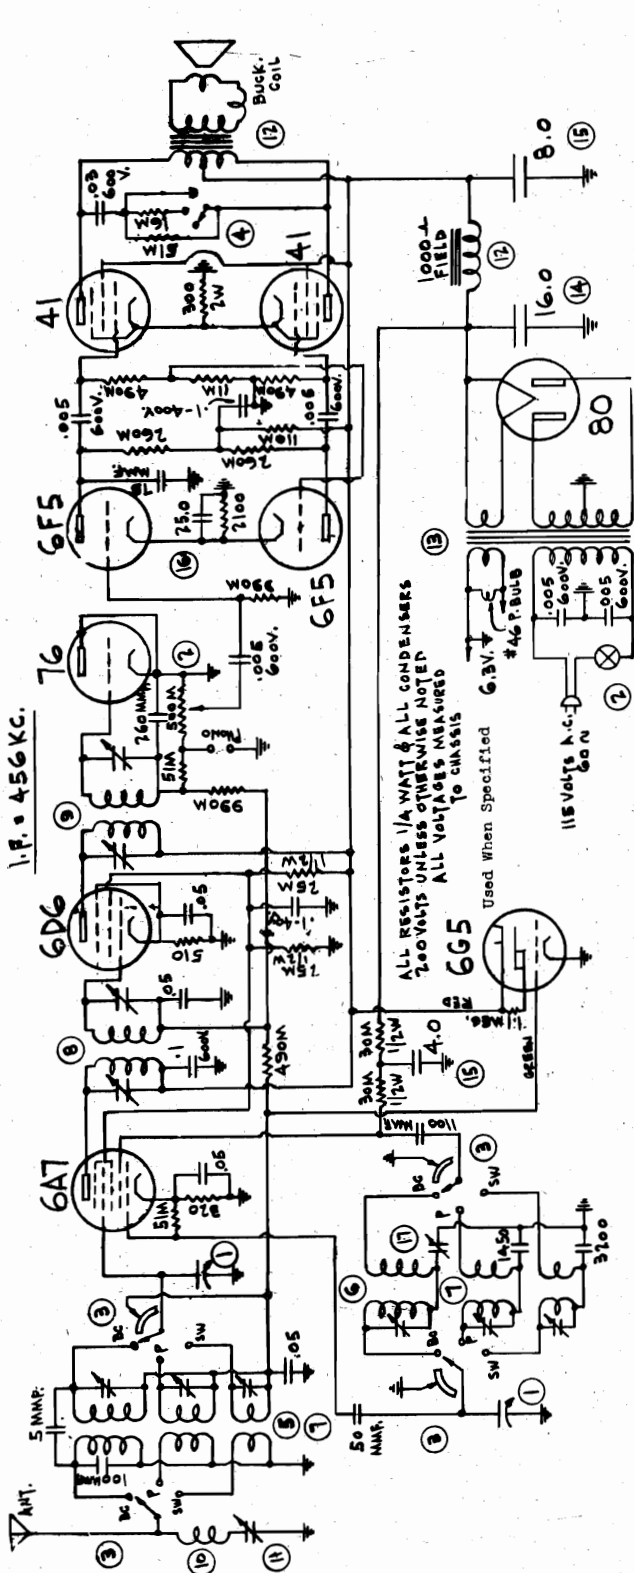

- 1 = 2200-3 - VARIABLE CONDENSER - 495 MMFD.
 2 = 190B-3 - VOLUME CONTROL & SWITCH
 3 = 2345 - RANGE SWITCH
 4 = 2346 - TONE CONTROL SWITCH
 5 = 2347 - ANTENNA COIL ASSEMBLY
 6 = 2348 - OSCILLATOR
 7 = 2349 - ANT.-OSC. " (POLICE BAND)
 8 = 2357-1 - I.F. TRANSFORMER - 1st - 456 KC.
 9 = 19481 - " - 2nd - "
 10 = 2197-1 - WAVE TRAP COIL - 456 KC.
 11 = 2337-1 - " TRIMMER
 12 = 2356-2a - SPEAKER ASSEMBLY
 13 = 2357-1 - POWER TRANSFORMER - 115V.-60V.
 14 = 2358 - ELECT. COND. (WET) 16MFD.-450V.
 15 = 2308-2 - " 8-A MFD.-350V.
 16 = 2369 - " 25 MFD.-15V.
 17 = 1621-1 - PADDER COND. 200-685 MMFD.

ALIGNMENT PROCEDURE

- (1) Set service oscillator to 456 kc and connect the output lead to the top grid of 6A7. Adjust trimmers for maximum response.
- (2) Connect oscillator set at 456 kc to base antenna lead through a .0002 mfd. condenser; variable condenser closed, and adjust wave trap trimmer for minimum response. Band switch to be in broadcast position.
- (3) Turn band selector to the short wave band, set the test oscillator to 22 mc and connect to antenna lead through 400 ohm dummy antenna. Set dial pointer to 22 mc and adjust short wave oscillator trimmer until signal is heard. Then adjust short wave antenna trimmer for maximum response.
- (4) Turn band selector to police band, set test oscillator to 6000 kc, connect to antenna lead through 400 ohm dummy antenna. Set dial pointer to 6000 kc and adjust police oscillator trimmer until signal is heard. Then adjust police antenna trimmer for maximum response.
- (5) Turn band selector to broadcast band, set test oscillator to 1500 kc, connect to antenna lead through a .0002 mfd. condenser. Set dial at 1500 kc and adjust broadcast oscillator trimmer until signal is heard. Then adjust broadcast antenna trimmer for maximum response.
- (6) With band selector in broadcast position, set test oscillator to 600 kc and adjust broadcast oscillator series padder for maximum response by simultaneously adjusting the padder and rocking the tuning dial.
- (7) Repeat procedures 5 and 6 for Greater accuracy.

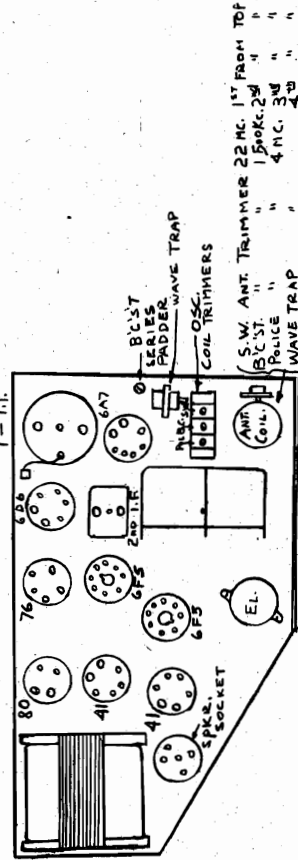

TUBE LAYOUT & TRIMMER LOCATION

MINOR REASONS FOR FAILURE TO FUNCTION - Defective tubes, grid caps off, volume control not fully turned on, tubes not in their proper sockets, shorted antenna, defective plug or wiring loose in socket.

FIG 9-7-39

HAMMARLUND MFG. CO., INC. MODEL 200 Series Circuit Data

CIRCUIT ARRANGEMENT

TWO-STAGE T.R.F. AMPLIFIER: For maximum sensitivity, high image ratio, and low noise level, the "SP-200" has two stages of tuned radio frequency amplification ahead of the mixer stage. The antenna input circuit is electrostatically shielded from

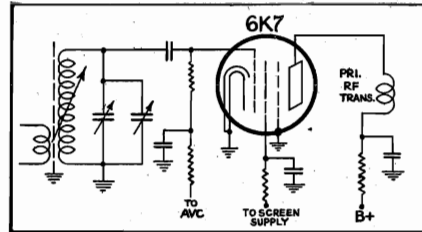


FIG. 2—Circuit diagram of first T.R.F. amplifier showing the electrostatic shield which reduces noise pickup.

the grid circuit of the first tube. This permits the use of low impedance transmission lines between the antenna and the receiver with a minimum of noise pick-up. When lines or lead-ins of the two wire type having an impedance of approximately 100 ohms are employed, no matching transformer is necessary. The input impedance of the receiver is approximately 112 ohms. The two tuned R.F. stages are employed on all bands covered by the receiver. Both inductive and capacitive trimming are employed in all signal frequency circuits.

OSCILLATOR AND MIXER: Two separate tubes are employed in the oscillator and mixer stages to improve stability and prevent pulling. There is a very respectable gain in the mixer stage which tends to minimize any noise that may be generated in the rest of the receiver. In fact, the gain in this stage is so great that the noise contributed by the following stages is negligible.

BAND SPREAD: In order to maintain relatively uniform band spread in the various tuning ranges of the receiver, every gang of the band spread condenser is subdivided into three sections. This allows the use of a proper sized condenser for maximum spread regardless of the position of the wave change switch. There are approximately 85 degrees spread for each of the important amateur bands, and there is also a corresponding spread over the other frequencies outside the amateur band.

CRYSTAL FILTER UNIT: The crystal filter used in the "Super-Pro" is an exclusive HAMMARLUND development and will be found only in HAMMARLUND receivers. This new filter has five ranges of selectivity varying from broad for phone reception, to knife-edge selectivity for single signal code reception. There are three positions for voice reception, and two for C.W. telegraph. The output of the filter is relatively constant over the entire selectivity range and has, therefore, little effect on "S"

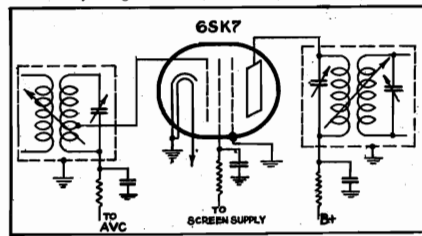


FIG. 3—Typical I.F. amplifier circuit with variable selectivity characteristics. Each circuit has isolating resistor and condenser to assure stability.

meter readings. Selectivity in the crystal filter circuit is not varied by detuning the load circuit. All circuits remain exactly in tune and selectivity is varied by changing the "Q" of the load circuit. This, together with the balanced phasing condenser, eliminates interlocking of controls and changes in filter gain when the selectivity is varied. Every precaution has been taken to effectively shield all circuits so that there is no feed-back or instability to impair the performance on even the highest frequencies. Stability is further insured by employing isolating resistor networks in every circuit that offers the slightest path for feed-back.

I.F. AMPLIFIER: There are three I.F. amplifier stages in the "SP-200." This elaborate amplifier is required in order to obtain a very high degree of selectivity. Special transformers are employed to hold down the gain per stage in order to maintain a high degree of selectivity and maximum stability. The band width of the I.F. amplifier is controlled by a cam arrangement which varies the coupling in two of the I.F. transformers. The I.F. channel is variable from 16 kc. down to 3 kc. with the crystal filter out of the circuit. The crystal filter, when in the circuit, is variable down to better than 100 cycles. Thus, full range selectivity is available. This wide degree of variable selectivity permits the operator to select the band width providing highest quality reproduction with a minimum of interference. In the "SP-200," the band width can be adjusted to suit operating conditions.

AVC SYSTEM: The automatic volume control system in the "SP-200" is extremely efficient. Both R.F. stages and the first two I.F. stages are automatically controlled by the incoming signal in order to compensate for variation in signal strength due to fading. This system is very fast in operation and will hold a rapidly fading signal to a relatively constant output. Special amplifier and rectifier stages are employed in order to obtain maximum efficiency.

BEAT FREQUENCY OSCILLATOR: The beat frequency oscillator circuit is designed to effectively heterodyne signals of various magnitudes. This oscillator is of the electron coupled type and is thoroughly isolated from the rest of the receiver. Careful selection of crystal values has resulted in excellent stability.

SECOND DETECTOR: A 6H6 connected in a half-wave rectifier circuit is employed for the second detector. The proper selection of circuit values in this circuit has resulted in a minimum of distortion. This circuit is more or less conventional and complete technical details are available by referring to the diagram.

NOISE LIMITER: The noise limiter in the "SP-200" is the latest development in audio peak limiting devices. It is designed to work with or without the AVC system and will follow variations in incoming signal strength. It is automatic and needs no adjustment. The limiter is designed to cut off interference of the automobile ignition nature at a point equal to approximately 100% modulation of the carrier of the signal being received. This provides for reception of 100% modulated signals without seriously affecting the quality of the voice or music. It must be remembered that this limiter

will only limit interference of very short pulse duration. Such interference, as caused by auto ignition systems and similar disturbances will be reduced to a negligible quantity.

A.F. AMPLIFIER: The audio frequency channel of the series 200 "Super-Pro" is designed for high quality reproduction. The first stage is a 6CS triode voltage amplifier. The second stage is a single 6F6 triode connected and used as a driver for the output amplifier which is a pair of 6F6's operated in push-pull, class AB. The rated output of this amplifier is approximately 14 watts. The fine quality of the A.F. amplifier in the "Super-Pro" is particularly apparent when the band width control is set in the wide position. There is no tone control in this amplifier and none is needed. The A.F. portion of the "Super-Pro" will respond equally well to both low and high frequencies. Attenuation of the higher frequencies is accomplished by narrowing the I.F. band width. In this manner, the band width control serves to control tone.

POWER SUPPLY: The power supply for the "SP-200" is an extra heavy duty unit designed to furnish filament plate and grid bias voltages. The power supply is a separate unit connected to the receiver by a flexible cable. Being a separate unit, the power supply introduces a minimum of hum in the receiver and also reduces the overall temperature rise of the receiver, and thus permits better stability. The high voltage rectifier in the power supply is a 5Z3 connected in a full wave circuit with a two-section filter consisting of 32 mf. capacity and a 15 henry filter choke. The field of the speaker serves as a second filter choke in standard model receivers. In special models, a choke is mounted in the power supply to take the place of the speaker field. Grid bias for the entire receiver is supplied by an 80 rectifier tube operating from a tap on the high

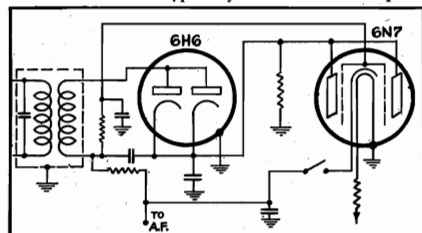


FIG. 4—"Super-Pro" noise limiter designed to reduce automobile ignition interference and other disturbances having similar characteristics.

voltage secondary. The C-Bias supply also has a multi-section filter consisting of three 8 mf. condensers, and three resistors. The primary of the standard power supply has three taps for operation on 105, 115, and 125 volt power lines. A fuse is also provided to guard against damage in cases of overload.

CALIBRATION: The main tuning dial of the "Super-Pro" is calibrated for all frequencies covered by the receiver. In the process of manufacture, every effort is made to maintain accuracy and, as a result, the accuracy of the calibration is guaranteed to be within 1/4 of 1% of the highest frequency of the band in use. When using the calibrated dial, it should be remembered that the figures are intended as a tuning guide and not for frequency measuring purposes.

"S" METER: The "S" meter in the "Super-Pro" was designed to provide greatest satisfaction to the operator. It is, in no way, limited by fixed, factory-made adjustments. A variable control on the rear of the chassis allows the operator to set the maximum reading of the meter to conform with his particular system of reporting signal strength in "S" numbers. The meter can be adjusted to read "S-9" on any signal from 10 to 10,000 microvolts. It is adjusted at the factory to indicate "S-9" on a 25 microvolt signal, but as pointed out above, this can readily be changed. Another feature is the centrally located scale. This is much more convenient than a scale that starts at the extreme left of the meter dial, and brings the indicating pointer well out in the clear. Special meter design has also eliminated the possibility of damage due to an extremely strong signal.

SELECTIVITY

The selectivity curves shown are representative curves made on a sample receiver and will hold reasonably true for all models. These curves were taken with the signal generator operating at the intermediate frequency and these curves will maintain throughout the entire range of the receiver, except at the very low frequency end of the broadcast band where the R.F. selectivity has a very slight narrowing effect. The selectivity of the "Super-Pro" is divided into two distinct ranges. In Fig. 5, appear the wide band curves. These curves were made at 4 different positions of the band width control. However, the actual selectivity obtainable is continuously variable between curves 3 and 16. Particular attention should be paid to the steepness of the sides of these curves. They are relatively straight and do not have the usual flare at the outer limits. This means that there will be less background interference from stations operating either higher or lower in frequency than the station being received. The advantage of having continuously variable selectivity over relatively wide limits in a receiver is readily apparent when one considers that the operator has absolute control and can adjust the receiver to compensate for almost any degree of interference that may be present. For example, when interference is not serious, the band width control can be set to the widest position and permit high quality reproduction of either voice or music. In other cases where interference is present, the band width control can be adjusted to the point where selectivity is just sufficient to eliminate interference. This adjustment provides maximum fidelity with a minimum of interference. It also permits the operator to utilize the extreme sensitivity of the "Super-Pro." Even in crowded bands, the selectivity can be adjusted to a point where interference is not bothersome and the sensitivity can be turned up to provide reception of extremely weak signals with marked clarity.

In Fig. 6, the variable selectivity crystal filter curves are illustrated. It will be noticed that the crystal filter fills in the gap very nicely between position "3" of the band width control and what would normally be maximum crystal selectivity for code reception. This variable selectivity crystal filter is an exclusive HAMMARLUND development and will be found only in a HAMMARLUND receiver. The crystal filter has five ranges of selectivity. The first three are intended for phone reception. The widest position of these, however, will permit good quality music under conditions where interference would, in most cases, make reception impossible. Positions four and five are for CW code reception and provide the usual single signal response.

SENSITIVITY

The sensitivity of the "Super-Pro" is exceptional and, in the majority of cases, limited only by noise picked up by the antenna system. Internal receiver noise has been held down to an extremely low value so that the limiting factors in the receiver itself are the noises originating in the first tube and its associated tuned circuit. The gain in the R.F. amplifier is adjusted so as to reduce the effective noise originating in the following tubes and tuned circuits. The result of this proper circuit design is a very

MODEL 200 Series Circuit Data, Operation Alignment, Trimmers HAMMARLUND MFG. CO., INC.

favorable signal-to-noise ratio on even very weak signals. Since sensitivity depends, to a great extent, upon overall noise level, the variable selectivity characteristics of the "Super-Pro" becomes doubly important, for, by narrowing the band width, noise can be reduced and thus better sensitivity is available.

PERFORMANCE

The "Super-Pro" is available to cover several frequency ranges. Such information as is given in this book will pertain to all models. The two standard models have the following tuning ranges:

SP-200	SP-200-S
540-1160 kc.	1250-2500 kc.
1160-2500 kc.	2.5-5 mc.
2.5-5 mc.	5-10 mc.
5-10 mc.	10-20 mc.
10-20 mc.	20-40 mc.

Other models are available to cover low frequencies in the neighborhood of 150 to 400 kc. as well as certain higher frequencies. In the two standard models, there is a convenient overlap of bands. The main tuning dial is calibrated in megacycles for the three high frequency bands, and in kilocycles for the two low frequency bands. Every effort is made to maintain a high degree of accuracy in calibrating the receiver and it is guaranteed to be at least 1/2 of 1% of the highest frequency of the band in use.

The sensitivity of the new "Super-Pro" is truly remarkable. By careful circuit design, the overall set noise has been held down to a minimum, thus making it possible to receive extremely weak signals with favorable signal-to-noise ratio. The variable selectivity feature of the "Super-Pro" permits the operator to make full use of the extreme sensitivity even under most severe conditions of interference. Selectivity can be adjusted to cut down interference within very close limits. The advantages of variable selectivity are tremendous when one considers that conditions of interference are not always the same. Under certain conditions, it may be possible to use quite a wide band width and thus enjoy improved tone, as well as easier tuning. Under other conditions, where interference is quite bad, the band width can be narrowed just enough to eliminate interference and in that case, the best possible fidelity that can be obtained without too much interference, is available. In a case where there is practically no interference from other stations, the band width can be adjusted to its widest point and high fidelity reception can be enjoyed.

AVC action in the "Super-Pro" is very efficient. Actual measurements on a sample receiver prove that a very great change in input is required to produce a 2 to 1 change in output. This means that rapidly fading signals can be held to a relatively constant output.

Images (two-spot tuning) on the "Super-Pro" have been eliminated, except in extremely rare cases. The average image ratio will be found to be in the neighborhood of 175,000 to 1 at 1 mc.; 65,000 to 1 at 2 mc.; 34,000 to 1 at 3.5 mc.; 10,000 to 1 at 7 mc.; 1,900 to 1 at 14 mc.; and 150 to 1 at 28 mc.

The audio frequency amplifier in the "Super-Pro" has a rated output of approximately 14 watts. It is capable of excellent quality reproduction. It will be found that the available output power is greatly in excess of that required when the receiver is used for communication purposes. Greatest intelligibility will be obtained on weak signals when the audio gain is kept down, not because of any amplifier limitation, but because the overall noise level will be too great a shock to the ear and make it difficult to follow the desired signal.

OPERATION

Although the "Super-Pro" is a highly technical piece of apparatus, with quite a large number of controls, it is relatively easy to operate. There are 15 controls on the panel. However, they are not all used at the same time. The number of controls necessary for operation will depend on the type of service for which the receiver is being used. The major controls are the band switch, main tuning, band spread, and audio gain. The remaining controls are brought into play as conditions demand their use. Assuming that the speaker, power supply and antenna have been connected according to instructions, the various controls should be set in the following positions: crystal selectivity, off; "phasing" on zero; "band width" on 6; "limiter," off; switch under the limiter control in "AVC" position; "sensitivity," maximum (10); band spread dial on 100; "signal" switch, on "modulation"; the toggle switch just beneath, should be set on "Speaker"; "audio gain" on 6; send-receive switch on "Rec."; beat oscillator on zero. Then, turn the main switch in the center of the panel marked "On-and-Off" to the on position. This puts the entire receiver in operation. The band switch should be adjusted to either the broadcast band or the next highest frequency band. This should permit reception of local stations and allow the operator to familiarize himself with various adjustments. The band width control should be adjusted to provide the most pleasing tone when there is no serious interference. Otherwise, it should be adjusted to the point providing best tone quality with a minimum of interference. The beat oscillator is turned on when the "signal" switch is in the "CW" position. The beat oscillator control varies the pitch of the heterodyne. This feature is used for code reception and for locating weak signals. The "limiter" control turns the noise limiter on and off. The noise limiter is most valuable on the shorter waves where automobile ignition interference is more serious. So far, we have considered the receiver adjustments necessary for phone reception. For code reception, the "AVC-Man" control should be set in the "Man." position and the sensitivity control turned down to provide proper sensitivity. On strong signals, this control should not be turned all the way on because there will be a tendency to overload the receiver. Volume is controlled with the "audio gain" control and not with the "sensitivity" control. The crystal filter is very effective and easy to operate because of its excellent stability. The first three positions are generally used for phone reception and will serve for code reception where interference is not severe. The last two positions are for code reception exclusively. When the crystal selectivity control is adjusted for optimum selectivity, the phasing control should be used to reject heterodyne interference or "whistle." The receiver can be temporarily silenced by turning the "Send-Receive" switch in the "Send" position. This allows the receiver to be ready for instant service and is more commonly called the "stand by switch" when the receiver is used for communication purposes. All tuning can be done with the main tuning control. In this case, the band spread dial is left at 100. The band spread dial operates so as to spread out a narrow band of frequencies in the neighborhood of the frequency at which the main dial is set. The band spread dial works continuously throughout the entire range of the receiver except on the lowest frequency bands. In this manner, many short wave

broadcast or amateur bands can be spread out over the band spread dial for easy tuning. The wave ranges of the receiver are so arranged that when the band spread and main dial are set for 80 meter amateur band reception the 40-meter band as well as the other amateur bands will appear on the band spread dial merely by turning the wave change switch. This is a great convenience and eliminates the necessity for searching each time for the amateur band which is to be covered by the band spread dial. For ear-phone operation, ear-phones are plugged into the terminal strip so marked on the rear of the chassis, and a switch on the front panel changes the receiver from ear-phone to loud speaker operation.


The next feature for consideration is the "S" Meter. This is used to judge relative signal levels and also as a tuning indicator. Maximum reading of the meter always indicates that the receiver is in exact tune with the station. The meter is calibrated in "S" units from 1 to 9, and the relative reading on any particular signal can be changed by re-setting the meter control which is located toward the rear of the chassis. The chassis drawing shows the position of this adjustment. A suggested method of adjusting the meter would be to tune in a signal of moderate strength. If you are accustomed to calling this signal, "S-8" or "S-9," then adjust the meter control so that it indicates that value. This adjustable meter arrangement allows the operator to provide reports consistent with his usual system of reporting. No amount of explaining will teach the operator exactly how to control a receiver. Experience is absolutely necessary in order to obtain best results.

H.F. OSCILLATOR AND R.F. ALIGNMENT

Connect the output of the test oscillator to the "A.A." terminal strip. Connect the output meter to the speaker voice coil terminals. The controls on the front panel should be set as follows:

(MEGACYCLES)			
10.0	5.0	2.5	1.25
TO	TO	TO	TO
20.0	10.0	4.0	2.0

(1) Band Change Switch on 540-1160 K.C. (2) Main Tuning Dial on 1100 K.C. (3) Band Spread Dial on 100. (4) Sensitivity Control "To Produce appropriate output meter reading." (5) Audio Gain Control "Full On." (6) C.W.-MOD switch on "MOD." (7) A.V.C.-MANUAL Switch on "MANUAL." (8) SEND-RECEIVE Switch on "RECEIVE." (9) "Phones-Speaker" Switch on "PHONES."

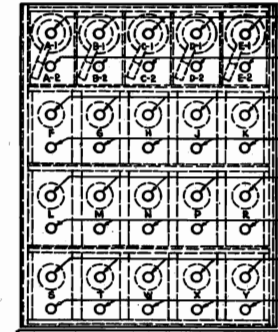

Turn the receiver over, bottom side up, placing a small block of wood under the rear of the switch section to protect the shield cans and tubes. The main tuning unit bottom plate should remain in place while H.F. oscillator and R.F. adjustments are being made. In order to facilitate the alignment of these stages, we have indicated in dotted lines, the coil positions beneath the bottom cover plate, together with all capacity and inductance adjusters. Capacity adjusting condensers are located on the coil bases and inductance adjusters extend through the top of each coil. The coil markings correspond to the designations on the schematic wiring diagram. Set the test oscillator to produce a 2.5 MC. signal. Adjust the trimmer capacitor "Y" until a peak reading is obtained in the output meter. Now set the main tuning condenser dial to 1.26 MC. and adjust the test oscillator for a 1.26 MC. signal. Turn the inductance adjustment on coil "Y" for a peak reading on the output meter. As these two adjustments react on each other it will be necessary to repeat them until no further change in either capacity or inductance is necessary. This realignment should only be done after making sure that the calibration of main dial is incorrect.

Turn the main tuning dial to 2.5 MC. and set the test oscillator for 2.5 MC. signal. Adjust each capacitor on coil "R," "K," "E2" in the order named, for peak reading on the output meter. The sensitivity control should be adjusted so that no overloading occurs and appropriate reading on the output meter is maintained. Now set the main tuning dial on 1.26 MC. and the test oscillator on the same frequency and turn the "inductance adjustments" on coil "R," "K," "E4" for peak reading on the output meter. These adjustments are also interlocking and should be repeated until no further improvement can be noticed. This completes the H.F. Oscillator and R.F. coil alignment for the frequency range of 1.25 to 2.50 MC.

The alignment procedure of the H.F. Oscillator and R.F. coils in the remaining frequency ranges is exactly the same as outlined for the 1.25-2.50 MC. band. Test oscillator frequencies and main tuning dial settings vary as follows:

Range	Capacity Frequency	Condensers	Inductance Frequency	Coils
1.25 to 2.50 MC.	2.5 MC.	Y-R-K-E2	1.26 MC.	Y-R-K-E1
2.5 to 5.0 MC.	5.0 MC.	X-P-J-D2	2.5 MC.	X-P-J-D1
20.0 to 40.0 MC.	40 MC.	W-N-H-C2	20 MC.	W-N-H-C1
5.0 to 10.0 MC.	10.0 M.C.	T-M-G-B2	5.0 M.C.	T-M-G-B1
10.0 to 20.0 MC.	20.0 M.C.	S-L-F-A2	10.0 M.C.	S-L-F-A1

I. F. ALIGNMENT

The following adjustments should only be attempted after making certain that the I.F. channel of the receiver is out of alignment.

The alignment of the I.F. amplifier may be checked as follows: Connect a low reading (1 volt) output meter across the voice coil terminals. Connect a test oscillator (modulated at 400 cycles or less) to the antenna terminals of the receiver. Set the crystal selectivity switch on Number 1, the phasing control on the arrow, and the band-width control at 3. With the AVC-MANUAL switch on "manual" and the A.F. gain at 10, adjust the sensitivity control for an output meter reading of approximately 1 volt, with the test signal tuned accurately. Now, check the settings of the I.F. tuning condenser on T-2, T-3, and T-4 (DO NOT DISTURB the screw tunings adjustments of the Crystal Filter T-1). Then reduce the A.F. gain to protect the output meter and throw the AVC-MANUAL to "AVC" and turn the sensitivity control to 10. Then adjust T-6 for maximum "S" meter reading. This can be done most satisfactorily by adjusting the input from the test oscillator to produce an "S" reading of approximately 8.

To check the alignment of the Crystal Filter T-1, an oscilloscope and sweep frequency oscillator are required. First adjust the sweep frequency oscillator to exact agreement with the crystal resonant frequency with the Crystal Selectivity switch on Number 5, and the phasing control on the arrow. Then, set the switch on Number 1 and adjust the lower screw on T-1 for maximum height, and the upper screw for symmetry of oscillogram image.

HAMMARLUND MFG. CO., INC.

MODEL 200 Series
Assembly, Selectivity Curves

FIG. 1—Band width control which varies selectivity and permits the operator to adjust the receiver for best quality obtainable with minimum interference.




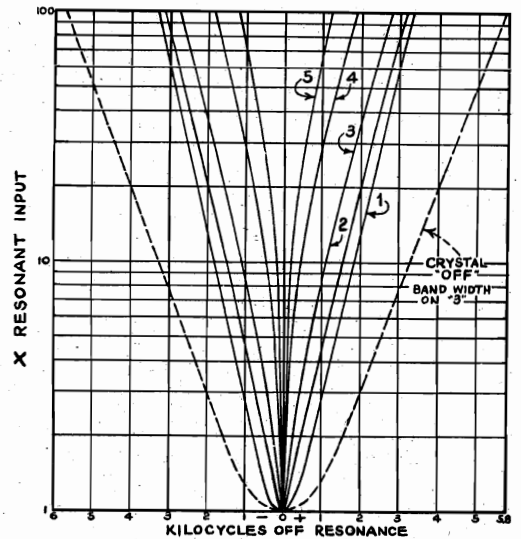


FIG. 6—Variable crystal filter selectivity curves showing five positions of the control switch. Positions 1, 2 and 3 are intended for voice reception. Position 1 is broad enough to permit reception of music. Positions 4 and 5 are for single signal code reception.

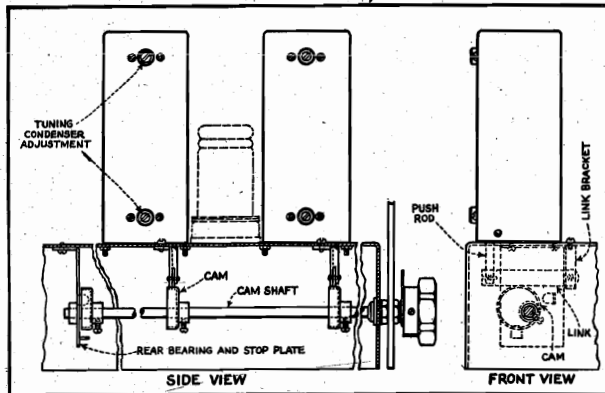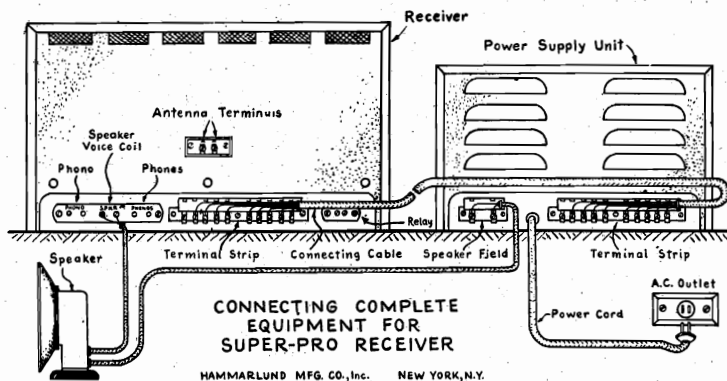

The two drawings on this page show the proper method of connecting the receiver, power supply, and speaker together. The drawing above shows a standard installation, while the diagram below indicates receiver connections when batteries furnish the power. Protective covers are furnished for all important terminal strips and they should always be in place.

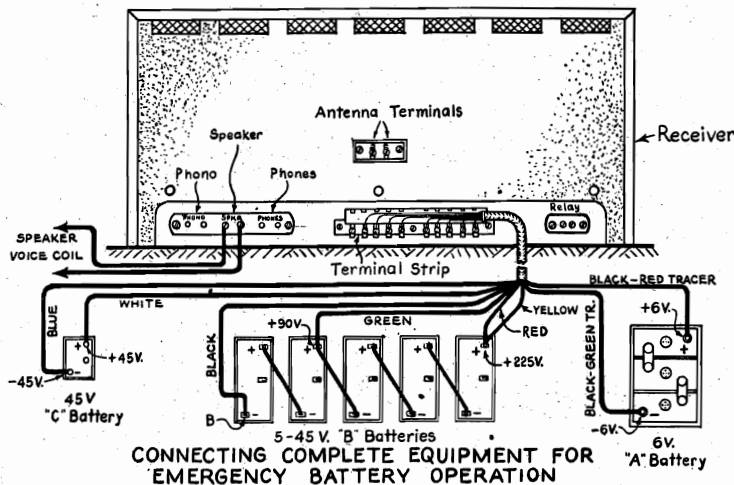

Drawing below provides voltage readings at the various terminals on either the receiver or power supply when the two are connected together.

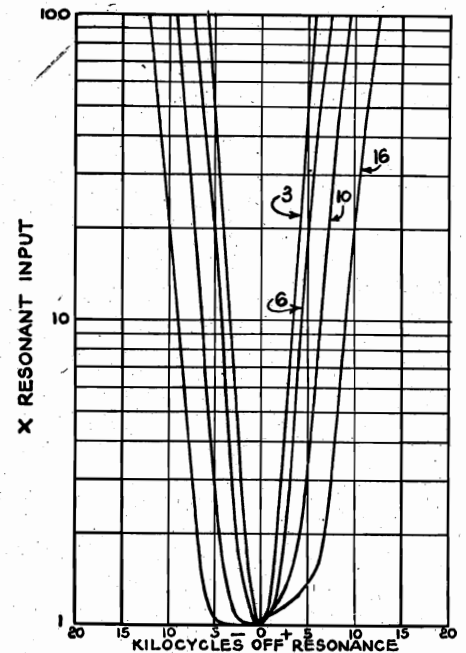
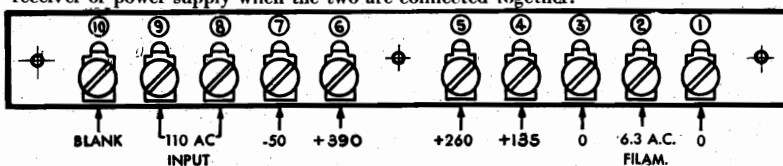


FIG. 5—I.F. curves taken at four positions of the band width control. The actual selectivity of the I.F. amplifier is continuously variable between curves 3 and 16. Particular attention should be paid to the sharp cut-off which greatly reduces back-ground interference.

MODEL 200 Series
Notes, Parts

HAMMARLUND MFG. CO., INC.

ANTENNA REQUIREMENTS

The input of the Series 200 "Super-Pro" is approximately 112 ohms. This means that for best results, the antenna should be coupled to the receiver by means of a low impedance transmission line. The doublet type antenna produces best results. Any well-known low impedance lead-in cable can be used with satisfaction. The use of low impedance lead-ins provides less chance for the lead-in itself to pick up extraneous noises. The low impedance lead-in, together with the electrostatic shield built into the antenna coil of the receiver, reduces noise to a minimum. It must be remembered that every antenna has a period of resonance and works best at that frequency. When erecting a doublet antenna, it is advisable to arrange its physical dimensions so that it will resonate in the band of frequencies where most sensitivity is desired. Care taken in designing and erecting an antenna will pay for itself many times in superior results.

DESIGN

The general design of the new "Super-Pro" embraces over five years of extensive research and experimentation. Individual components in the majority of cases have been specially designed for this receiver. The tuning inductors contained in the tuning unit are individually wound on low-loss forms. There are 20 in this group. Each coil has its own form and is mounted on an Isolantite base. This base also accommodates the variable trimming capacitor. All oscillator trimmers are of the air dielectric type and add considerably to the overall stability of the receiver. High stability mica trimmers are employed in the R.F. circuits.

The band change switch is especially designed for the "Super-Pro" and is unlike any other switch used for this purpose. The cam-operated knives contact stationary fingers and complete the circuit. Thus, no moving part carries current to cause noise or stray coupling. All contacts are silver-plated and will provide years of reliable service. The contacts are designed and placed so that the capacity between them is reduced to a negligible amount. This eliminates frequency drift due to change in dielectric constant during temperature rise. The I.F. transformers in the "Super-Pro" are designed particularly for this receiver. Each coil is wound on an Isolantite form and the coupling between them is mechanically variable to provide control of selectivity. Air dielectric trimmers are employed for maximum stability. Each grid coil in the I.F. unit is tapped near the low potential end so that changes in tubes will not affect the alignment of the receiver. This method also permits the use of a large number of stages operating at relatively low gain in order to obtain a maximum degree of selectivity without instability that might exist with a small number of stages operating at maximum gain.

SUPER-PRO MODELS AND PRICES

Code	Type	Tuning Range	Speaker	List Price
SP-210-X	Crystal	15-560 Meters	Jensen 10" Dynamic	\$465.00
SPR-210-X	Crystal Rack	15-560 Meters	Jensen 10" Dynamic	482.50
SP-220-X	Crystal	15-560 Meters	Jensen 12" High Fidelity	490.00
SPR-220-X	Crystal Rack	15-560 Meters	Jensen 12" High Fidelity	507.50
SP-210-SX	Crystal	7½-240 Meters	Jensen 10" Dynamic	465.00
SPR-210-SX	Crystal Rack	7½-240 Meters	Jensen 10" Dynamic	482.50
SP-220-SX	Crystal	7½-240 Meters	Jensen 12" High Fidelity	490.00
SPR-220-SX	Crystal Rack	7½-240 Meters	Jensen 12" High Fidelity	507.50
SP-210-LX	Crystal	*15-2000 Meters	Jensen 10" Dynamic	465.00
SPR-210-LX	Crystal Rack	*15-2000 Meters	Jensen 10" Dynamic	482.50
SP-220-LX	Crystal	*15-2000 Meters	Jensen 12" High Fidelity	490.00
SPR-220-LX	Crystal Rack	*15-2000 Meters	Jensen 12" High Fidelity	507.50
PSC-10	Speaker cabinet finished to match receiver			8.50

Above prices cover 110-115-125 volt, 50 to 60 cycle models with tubes, crystal, and speaker. Receiver and power supply enclosed in wrinkle finished table type metal cabinets. Special models for 50-60 cycles with universal type power supply tapped for 115, 125, 140, 230, and 250 volts, also available at no increase in price. Twenty-five cycle models, \$20.00 additional.

* In this model, the 1000 to 2000 meter band is substituted for the 60 to 120 meter band.

Receiver in cabinet measures 21½" wide, 15¼" deep, and 12½" high. Power supply in cabinet measures 13" wide, 7½" deep, and 8½" high. Rack models fit standard 19" relay racks. Shipping weight approximately 110 pounds.


(Prices subject to change without notice)

"SUPER-PRO" MODEL SP-200-SX PARTS LIST
(This parts list should be used to identify parts shown in the illustrations)

Schematic Designation	DESCRIPTION - RECEIVER PARTS	Part No.
A1	Antenna Input Coil Assembly 10.0 to 20.0 m.c.	SA-46
A2	Antenna Output Coil Assembly 10.0 to 20.0 m.c.	SA-110
B1	Antenna Input Coil Assembly 5.0 to 10.0 m.c.	SA-47
B2	Antenna Output Coil Assembly 5.0 to 10.0 m.c.	SA-113
C1	Antenna Input Coil Assembly 20.0 to 40.0 m.c.	SA-46
C2	Antenna Output Coil Assembly 20.0 to 40.0 m.c.	SA-130
D1	Antenna Input Coil Assembly 2.5 to 5.0 m.c.	SA-48
D2	Antenna Output Coil Assembly 2.5 to 5.0 m.c.	SA-116
E1	Antenna Input Coil Assembly 1250 to 2500 k.c.	SA-49
E2	Antenna Output Coil Assembly 1250 to 2500 k.c.	SA-136
F	1st R.F. Coil Assembly 10.0 to 20.0 m.c.	SA-111
G	1st R.F. Coil Assembly 5.0 to 10.0 m.c.	SA-114
H	1st R.F. Coil Assembly 20.0 to 40.0 m.c.	SA-131
J	1st R.F. Coil Assembly 2.5 to 5.0 m.c.	SA-117
K	1st R.F. Coil Assembly 1250 to 1160 k.c.	SA-137
L	2nd R.F. Coil Assembly 10.0 to 20.0 m.c.	SA-111
M	2nd R.F. Coil Assembly 5.0 to 10.0 m.c.	SA-114
N	2nd R.F. Coil Assembly 20.0 to 40.0 m.c.	SA-131
P	2nd R.F. Coil Assembly 2.5 to 5.0 m.c.	SA-117
R	2nd R.F. Coil Assembly 1250 to 2500 k.c.	SA-137
S	High Frequency Osc. Coil Assembly 10.0 to 20.0 m.c.	SA-112
T	High Frequency Osc. Coil Assembly 5.0 to 10.0 m.c.	SA-115
W	High Frequency Osc. Coil Assembly 20.0 to 40.0 m.c.	SA-132
X	High Frequency Osc. Coil Assembly 2.5 to 5.0 m.c.	SA-118
Y	High Frequency Osc. Coil Assembly 1250 to 2500 k.c.	SA-138
T-1	Crystal filter assembly (465 kc.)	SA-178
T-2, T-3	1st and 2nd. I.F. Transformer Coil Assembly	SA-166
T-4	Detector plate coil assembly	SA-167
T-5	Beat oscillator coil assembly	SA-169
T-6	A.V.C. Plate coil assembly	SA-168
T-7	Push-Pull Input Transformer	4827
T-8	Push-Pull Output Transformer	4828
2-12-22-106	Antenna terminal strip	3842
28	Capacitor Fixed Mica type 600 mmf.	6073
34	Capacitor Fixed Silver type 95 mmf.	6195
77	Capacitor Fixed Silver type 50 mmf.	6074
9-19-69	Capacitor Fixed Mica type 50 mmf.	6199
4-14-24	Capacitor Fixed Tubular type .02 mf. 500 V.	6176
7-17-30-36	Capacitor Fixed Tubular type .01 mf. 500 V.	6175
43-46-48-51	Capacitor Fixed Tubular type .05 mf. 500 V.	6174
56-58-61-63	Capacitor Fixed Tubular type .25 mf. 400 V.	3820
73-85-92	Capacitor Dry Electrolytic 40 mf. 150 V.	6171
40-101-102	Resistor 4 ohms wire wound 5 watt	4921
89	Resistor 750 ohms wire wound 10 watt	3836
80	Resistor 300 ohms metallized ½ watt	6169
89	Resistor 1,700 ohms metallized ½ watt	4947
98	Resistor 2,000 ohms metallized ½ watt	6160
10-20-44	Resistor 3,000 ohms metallized 1 watt	3809
6-47-49	Resistor 5,000 ohms metallized ½ watt	4814
57-59-16	Resistor 10,000 ohms metallized ½ watt	6165
99	Resistor 12,000 ohms metallized 2 watt	4840
86	Resistor 25,000 ohms metallized 2 watt	3999
5-15-25	Resistor 50,000 ohms metallized ½ watt	6075
50-60	Resistor 50,000 ohms metallized 1 watt	6166
37	Resistor 75,000 ohms metallized ½ watt	4914
29	Resistor 250,000 ohms metallized ½ watt	4912
35-26	Resistor 500,000 ohms metallized ½ watt	6076
66-84	Resistor 2,000,000 ohms metallized ½ watt	4920
64-72-93	Tube socket 6K7	4922
65	Tube socket 6SK7	4923
78	Tube socket 6H6	6111
3-13-23	Tube socket 6N7	4924
70-74-83	Tube socket 6SJ7	4925
53	Tube socket 6C5	4926
8-18-45	Tube socket 6F6	6108
8-18-45	Tube socket 6L7	4927
55-62-91	Tube socket 6J7	4928
76-95	Dial lamps 6.3 volt .15 amp.	3920
79	Meter lamp 6.3 volt .15 amp. Bayonet type	6036
81	Tuning meter	4903
71	Off-on Switch	2983
71	A.V.C.-MANUAL and SPEAKER-PHONES Switch	2990
75-87-90	CW-MOD Switch	4915
27	Send-Receive Switch	4917
42	Limiter switch	4916
32-33	Sensitivity control 50,000 ohm	4918
38	Audio Gain Control 250,000 ohm	4919
94	Relay terminal strip	4904
100	Phono-Speaker-Phones terminal strip	4905
105	Connecting terminal strip	3838
110	Meter adjusting potentiometer 1,000 W wire wound	4932
1	Power transformer 110 volts 60 cycle A.C.	4801
2	Filter choke	2981
3	A.C. input Cord and Plug	3900
4	Fuse Block for 2A. fuse	3859
5	Line Voltage Adjusting Strip	3858
6	Speaker Field Terminal Strip	3840
7	Connecting Terminal Strip	3838
8-9-10	Filter Condenser 16 mfd. electrolytic 450 volts	3832
11	Filter Condenser 8-8-8 mfd. electrolytic 450 volts	3834
12	Resistor 18,000 ohms (2 taps)	3997
13	Resistor 18,000 ohms (1 tap)	4946
14	Tube socket 80	4537
15	Tube socket 5Z3	3828
16	1 mf. paper filter condenser	4945


HOWARD RADIO CO.

MODEL 12B
Schematic Notes

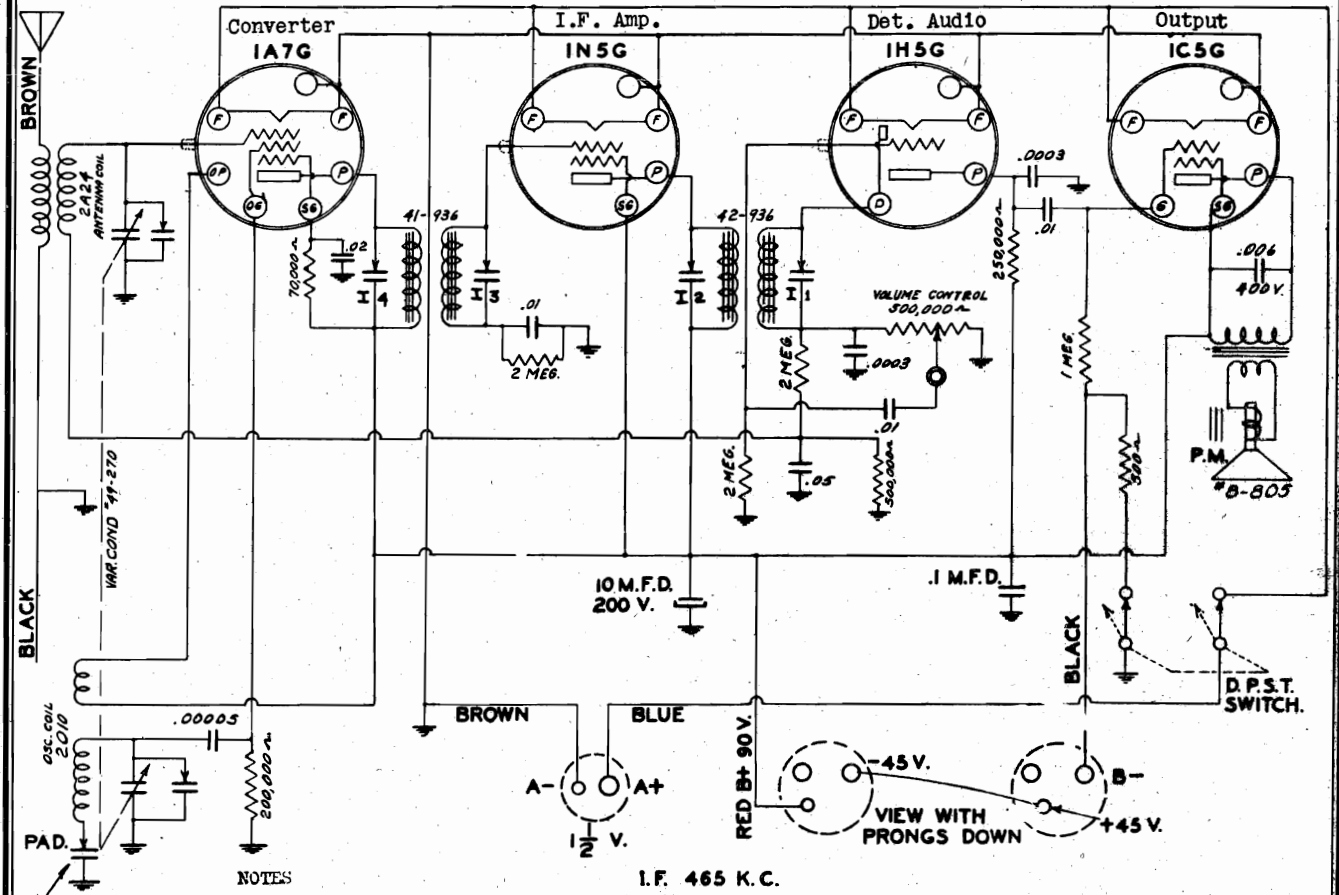

NOTES
When adjusting this pad, move the tuning hand back and forth and adjust padder until the peak of greatest intensity is obtained.

I.F. 465 K.C.



HOWARD RADIO CO.		
MODEL 12-B		
10-27-39.	DWG. NO. D64-715	
DWN. BY.	CHKD. BY.	APPVD. BY.
R. B. M.	<i>[Signature]</i>	<i>[Signature]</i>

SPEAKER = Permanent Magnet SIZE = 5"

V.C.IMP. (400CPS) = 4 Ohms
FIELD = P M

POWER SUPPLY 90 V. "B" - 1 1/2 V. "A" "B" drain - 10 mils.
"A" drain - 250 mils.

POWER OUTPUT - (MAX.) = 360mw

up to 180mw

SERVICE NOTES

Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.

It is necessary that the 1N5G tube be shielded. See that the shield is firmly in place around the bottom portion of the tube.

The intermediate frequency of this receiver is 465 MC.

The trimmers and padding condenser adjustments are accessible through bottom of cabinet.

See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.


Color code of battery leads:- Red B+90; Black B-; Brown A-; Blue A + 1 1/2 V.

The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.

RECOMMEND BATTERY KITS


	EVEREADY	BURGESS	
1 1/2 V. "A" 1 Required	740	20-F	
45 V. "B" 2 Required	749	D60	
Combination "A" and "B" Single Unit.	746	17GD60	Use Adapter

For greater economy use two "A" cells in PARALLEL. Connect plus to plus and minus to minus.



MODEL 14ACB
MODEL 700
Schematics

HOWARD RADIO CO.

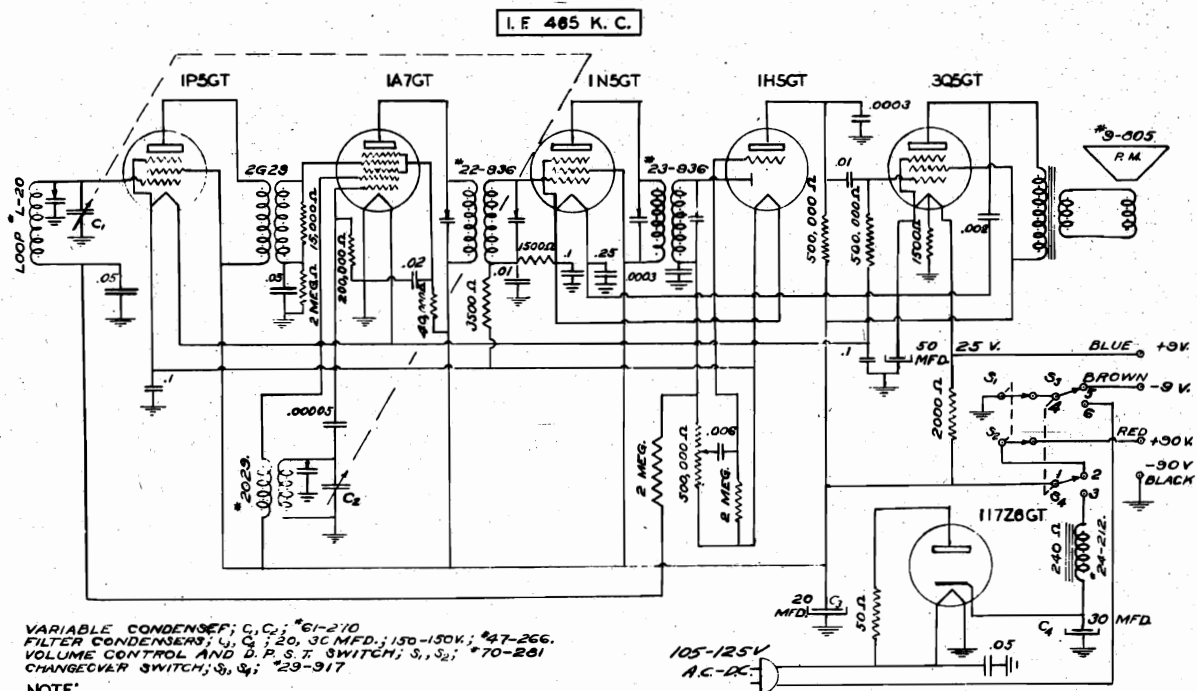


VARIABLE CONDENSER; C₁, C₂; *61-210
FILTER CONDENSERS; C₃, C₄; 20, 30 MFD.; 150-150V.; *47-266.
VOLUME CONTROL AND D. P. S. T. SWITCH; S₁, S₂; *70-281
CHANGEOVER SWITCH; S₃, S₄; *29-317

NOTE:

SWITCH SHOWN IN POSITION FOR BATTERY OPERATION. FOR A. C. OR D. C. OPERATION, SWITCH CONNECTS TERMINAL 4 TO 6 AND 1 TO 3.

MODEL 14ACB		
DWG. NO. D77-715	3-29-40	
DWN. BY	CHKD. BY	APPVD. BY
<i>WV</i>		

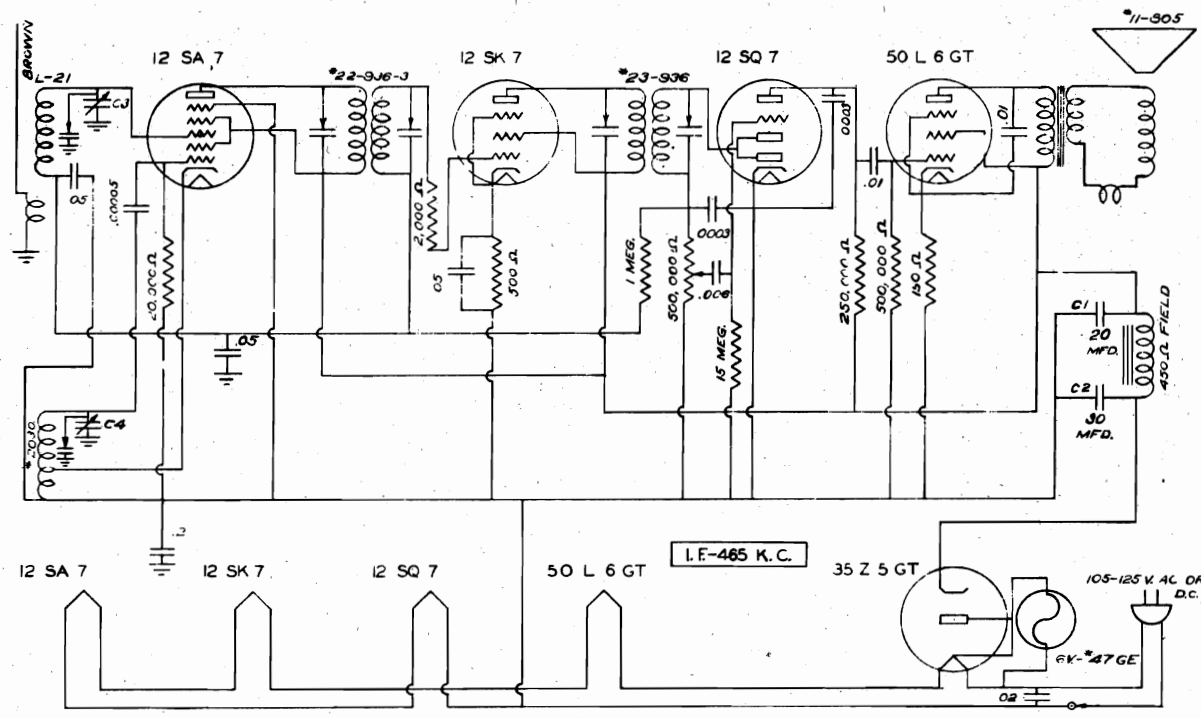


C₁, C₂-20-30 MFD 150-150V. *47-266.
C₃, C₄-VARIABLE CONDENSER *62-270.
VOLUME CONTROL AND SWITCH *69-281.

MODEL 700		
D76-715	3-26-40	

HOWARD RADIO CO.


MODEL 300
Schematic, Voltage
Alignment, Trimmers
6K6GT Output Socket

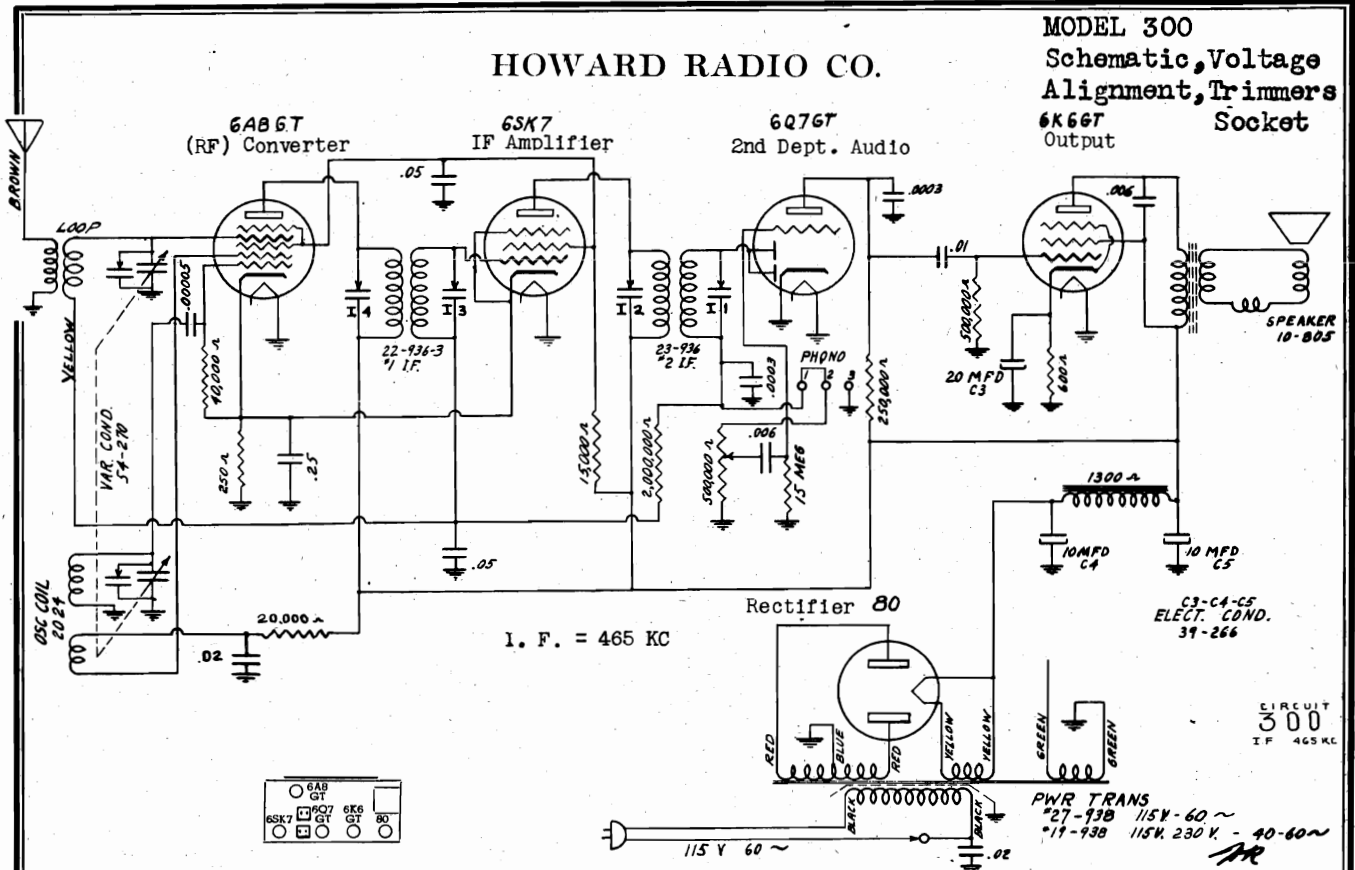

POWER SUPPLY - (Standard Models) = AC 105-120 V. 60 Cycles
CONSUMPTION 50 WATTS
POWER OUTPUT - (MAX.) = 2.7 W. upo = 1.5 W.

SPEAKER = Electrodynamic SIZE = 5"
V.C.IMP. (400CPS) = 4 Ohms
FIELD = 1300 Ohms


TOP VIEW

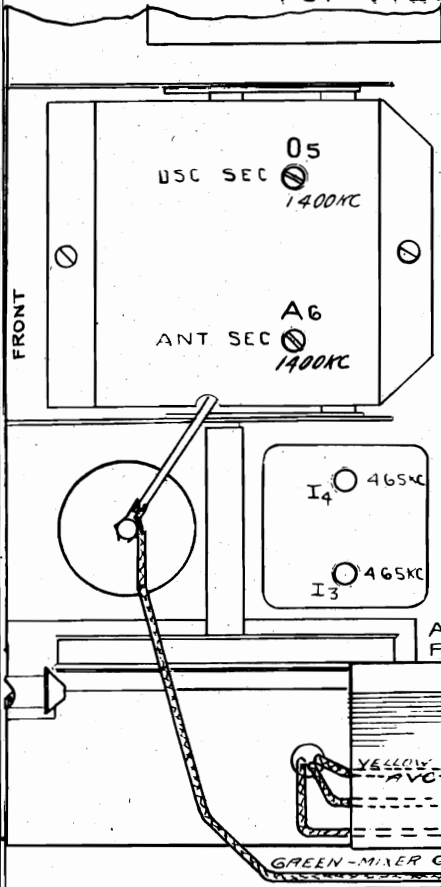

ALIGNMENT PROCEDURE

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
x	Min. Cap.	465 KC	6A8 Grid	A, E	I ₁ I ₂ I ₃ I ₄	IF
x	1400 KC	1400 KC	Brown lead	D	C ₅ A ₆	Osc. & Ant.
x	600 KC	600 KC	Brown lead		OUT PLATE	OSC. SECTION

A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from signal generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.
B- When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.
C- When adjusting this pad, move the tuning hand back and forth and adjust pad until the peak of greatest intensity is obtained.
D- See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.
E- The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.



SOCKET VOLTAGE READINGS

Voltage taken from ground with line voltage at - 117 AC.
High voltage reading off rectifier = 275 V.
Drop across speaker field = 75 V.
Voltage taken with 1,000 Ohm per volt meter -

TUBE	FUNCTION	CATH. ODE.	SCR. GRID	PLATE
6AB6T	Mixer	4.5	105	195
6SK7	IF	4.5	105	195
6Q7GT	Det.	x	x	60
6K6GT	Output	16	195	185

MODELS 300A, 301, 303
301APC, 304
Converter
6A8.6T


HOWARD RADIO CO.

Schematic, Voltage
Alignment, Trimmers
Output
6V66T

IF Amp.
6SK7

2nd Det.
6J56T

Audio
6Q76T

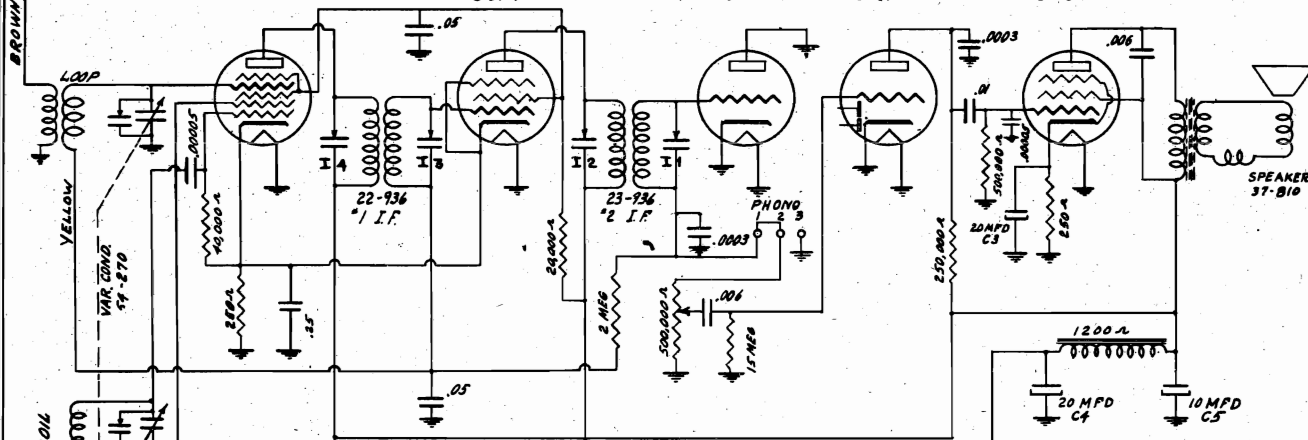


I. F. = 465 KC

Rectifier 80


C3-C4-C5
ELECT. COND.
40-266

THE ADAPTION OF THE SET FOR USE WITH PHONOGRAPH

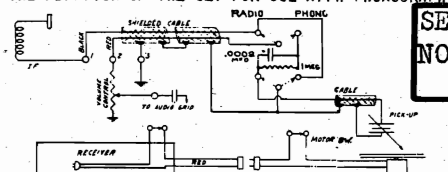

SEE SPECIAL
NOTE MODEL
302S

CIRCUIT 300A
MODELS 301, 303, 304
IF 465 KC



POWER SUPPLY - (Standard Models) = 105 to 120 V.
CONSUMPTION 60 WATTS + 30 W.APC.
POWER OUTPUT - (MAX.) = 6 W.

60 Cycle.

Automatic Phonograph Combination, 303 and 304,
employing Chassis type 300 A
SPEAKER = Electro-dynamic SIZE = 12"
V.C. IMP. (400 CPS) = 6 Ohms FIELD = 1200 Ohms


TOP VIEW

ALIGNMENT PROCEDURE

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
x	Min. Cap.	465 KC	6A8 Grid	A, E	I ₁ I ₂ I ₃ I ₄	IF
x	1400 KC	1400 KC	Brown lead	D	O ₅ A ₆	Osc., & Ant.
x	600 KC	600 KC	Brown lead			CUT PLATE OSC. SECTION

NOTES


- A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.
- B- When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 950 KC, or about 20,070 KC on the dial.
- C- When adjusting this pad, move the tuning hand back and forth and adjust pad until the peak of greatest intensity is obtained
- D- See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.
- E- The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.



SOCKET VOLTAGE READINGS

Voltage taken from ground with line voltage at -117 AC:
High voltage reading off rectifier = 330 V.
Drop across speaker field = 90 V.
Voltage taken with 1,000 Ohm per volt meter -

TUBE	FUNCTION	CATH. ODE.	SCR. GRID	PLATE
6A8	Mixer	4	112	235
6SK7	IF	4	112	235
6J5	Det.	x	x	x
6Q7	Audio	x	x	38
6V6	Output	11	240	230

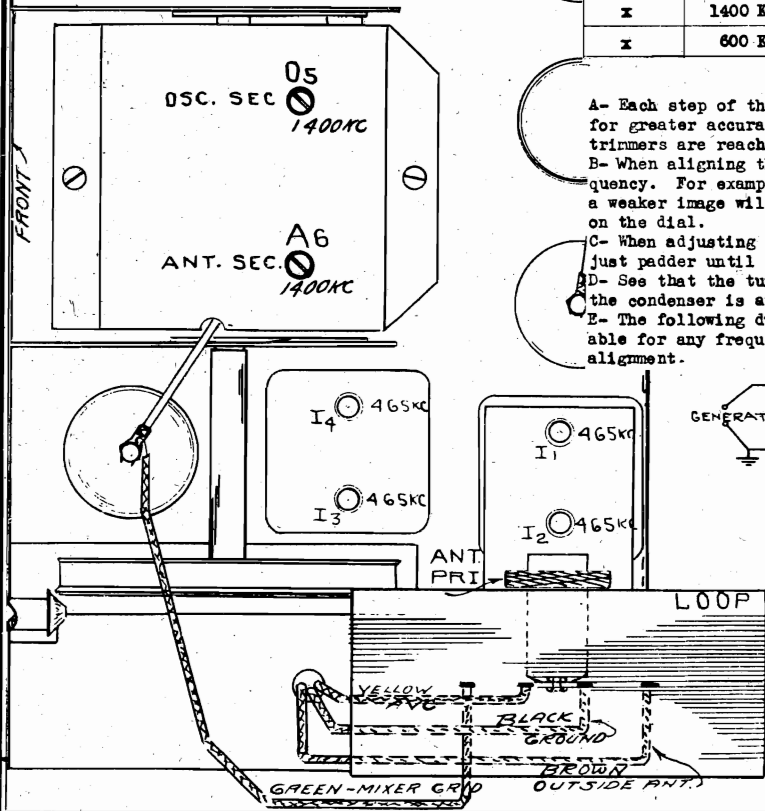

HOWARD RADIO CO.

MODEL 300 Series
MODEL 500 Series
Dial and Tuner Data

Dial Mechanism
300 Series

THE TUNING CONTROL
To provide smooth push button tuning with a minimum amount of effort the tuning shaft has a spring return which disengages the rubber friction drive from the large drive pulley after the tuning knob has been held down while tuning the set manually. There is no adjustment required on this mechanism.

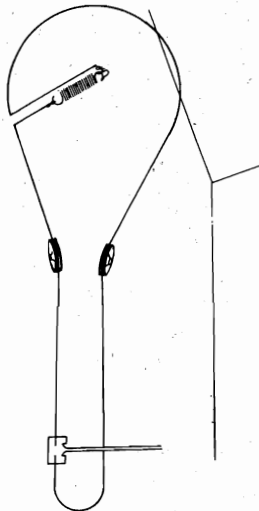


FIG. 1. SHOWS THE DIAL DRIVE MECHANISM IN ITS NORMAL STATIONARY POSITION ENGAGED FOR MANUAL TUNING.

500 Series Dial Mechanism

FIG. 1. SHOWS THE DIAL DRIVE MECHANISM IN ITS NORMAL STATIONARY POSITION ENGAGED FOR MANUAL TUNING. THE CORK ASSEMBLY C IS FRICTIONED AGAINST THE FACE OF STRING PULLEY P, DUE TO PRESSURE OF COIL SPRING S. THE PUSH BUTTON IS NOT PRESSED IN, LEAVING A SMALL GAP BETWEEN THE BRASS EYELET AND THE FLIP BAR.

FIG. 2. SHOWS THE PUSH BUTTON ON ITS WAY IN, AT THE VERY START OF WHICH THE EYELET MOVES THE FLIP BAR, CAUSING THE RELEASE ARM TO OVERCOME THE COIL SPRING TENSION AND FLIP THE CAM POINT CLUTCH AWAY FROM THE STRING PULLEY FACE. POINT C IS THE ACTION POINT WHICH PLACES BEFORE THE VARIABLE CONDENSER.

THE OBJECT OF THE ABOVE MECHANISM OF COURSE IS TO ELIMINATE THE PRESSURE THAT OTHERWISE WOULD BE REQUIRED IF THE MANUAL TUNING CONTROL HAD TO BE SPUN AROUND WHEN USING THE PUSH BUTTONS. THE SCREW ADJUSTMENT B, FIG. 1, WILL PROVIDE THE PROPER AMOUNT OF CLUTCH RELEASE CLEARANCE AT G, FIG. 2.

FIG. 2. THE STRING TENSION OF the drive cord is maintained by the coil spring on the large drive pulley FIG. 4.

THE PUSH BUTTONS must extend straight outward, before a chassis is mounted in the cabinet, see that the push-button screw shanks are not bent so as to bind against the escutcheon holes.

THE DRIVE BELT tension is very easily obtained between the tuning shaft and the pulley by raising or lowering the frame when the two screws B, B (FIG. 3) are loosened. Do not get the belt too tight. The belt runs directly on the tuning shaft, the rubber grommet on the shaft is merely acting as a guide.

TO REPLACE THE DRIVE BELT (1) remove screws B, B and D from frame, permitting frame to be disassembled. (2) Loosen set screws holding lead-in wires at tuning set. This will allow them to start to be pulled out to loop the belt in place.

THE REPLACEMENT OF THE CORK CLUTCH is also accomplished by removing screws B, B and D. D. THE TUNING HAND should be set to the end calibration line above 550 KC when the condenser is at maximum capacity.

The drive string running from one pulley across the dial plate to the other pulley will be higher at the point of mounting on the tuning hand, this will maintain a slight downward pull on the tuning hand which will prevent wobble. Another cause of wobble would be in crimping the lugs around the string causing the string to be out of line.

A slight amount of petroleum jelly along the top edge of the dial plate is beneficial. Arrange the long section of the hand so it will not scratch the dial numbers.

FIG. 4

THE ABOVE DIAGRAM SHOWS THE EXACT DRIVE CORD ARRANGEMENT IN CASE A REPLACEMENT IS REQUIRED. THE LAYOUT IS SHOWN WITH THE VARIABLE CONDENSER ALL THE WAY IN AT MAXIMUM CAPACITY AND THE TUNING HAND AT THE LAST LINE ABOVE 550.

(Four stations for Series 300)

LACK OF SMOOTHNESS in dial operation may be due to:

- Too much tension on dial string.
- Incorrect adjustment with release action causing drag. (See adjustment R).
- Fly wheel will rub on cabinet shelf if the rubber cushion is not in place beneath chassis.
- See that dial light sockets do not touch top edge of tuning hand as it moves across dial plate.
- Do not adjust the belt to a greater tension than is necessary.
- Slipping of the dial mechanism may be due to any of the above items or lack of sufficient cork friction which in turn may be due to weakness in tension spring S (FIG. 1) or a tight bearing at this point.

SETTING-UP THE PUSH BUTTONS

300 Series 500 Series

1. Leave the set turned on at least 15 minutes before making settings.
2. Decide upon the six stations that you want to tune automatically.
- It is preferable to set the lower frequency stations, starting with the button on the right.

3. Tune the station with the regular tuning knob, making certain the station is EXACTLY IN TUNE, then with the fingers loosen the push button with a twist to the left of about one-half turn, now push the button ALL THE WAY IN.
4. Carefully release button and tighten it with a twist to the right.
5. Repeat above procedure for the other five buttons for five other stations and insert station letter tab in position for each button.

THE PUSH BUTTONS WILL ONLY OPERATE CORRECTLY WHEN THEY ARE OPERATED WITH A FIRM, QUICK THRUST, KEEPING FINGER ON BUTTON UNTIL DIAL POINTER COMES TO A STOP.

THE ABOVE DIAGRAM SHOWS THE EXACT DRIVE CORD ARRANGEMENT IN CASE A REPLACEMENT IS REQUIRED. THE LAYOUT IS SHOWN WITH THE VARIABLE CONDENSER ALL THE WAY IN AT MAXIMUM CAPACITY AND THE TUNING HAND AT THE LAST LINE ABOVE 550.

The drive string running from one pulley across the dial plate to the other pulley may be slightly higher at its point of mounting to the tuning hand, this will maintain a slight downward pull on the hand to avoid wobble. Another cause of wobble would be caused by crimping the lugs of hand around the string in such a manner that the string would be out of line.

A slight amount of petroleum jelly along the top edge of the dial will provide a smoother travel of the hand. Arrange the long section of the hand straight and with sufficient clearance from the dial plate face to avoid scratching the numerals.

THE STRING TENSION of the drive string is maintained by the coil spring mounted on the large drive pulley. Too much tension will cause an extra load in tuning. Lack of tension will naturally cause backlash.

See that dial light sockets do not touch top edge of tuning hand as it moves across dial plate. Since the pull against the large pulley is quite great, see that the set screws in the pulley hub to the condenser shaft are tight to avoid slipping.

THE PUSH BUTTONS must extend straight outward. If a chassis is removed, see that the push-button screw shanks are not bent so as to bind against the openings in the cabinet panel.

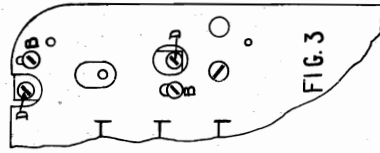


FIG. 3

(Four stations for Series 300)

MODEL 301APC MODEL 518APC
 MODEL 302APC MODEL 520APC
 MODEL 308APC MODEL 580APC

HOWARD RADIO CO.

Automatic Phono.Data

INSTALLATION AND OPERATING INSTRUCTIONS AUTOMATIC PHONOGRAPH COMBINATION

INSTALLATION

PREPARING FOR OPERATION - Remove the bracket "A" securing the pickup and needle mechanism. This bracket is shown in place in Figure 1. It is held to the motorboard by means of a screw "B". Remove the screw, lift off the bracket and replace screw in motorboard to cover hole. Then remove red bolts "c" and "d" which hold the motorboard secure during shipment. These are also shown in Figure 1. When these bolts are removed it will allow the wood strips to be taken out. "E" and "F".

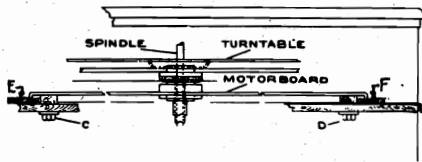
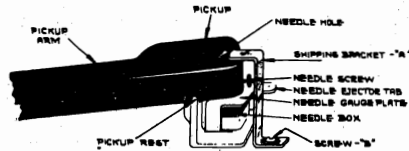


Figure 1 - Unpacking

The two record holder posts (See Figure 6) are covered with paper held in place by rubber bands as is also the pickup. Remove these paper coverings.

THE SCREWS THAT HOLD THE RADIO CHASSIS ARE LOOSENEED JUST ENOUGH TO ALLOW THE WOOD STRIPS (USED IN SHIPMENT) TO BE REMOVED. CAUTION: ONLY A SMALL AMOUNT OF TURNING OF THE WING SCREWS IS NECESSARY. IF THEY ARE TOO LOOSE THE CHASSIS WILL DROP OUT OF POSITION AND THE PUSH BUTTONS WILL NOT OPERATE PROPERLY.

LOCATION: The instrument should be located near an electric outlet and on a level surface. The cabinet should not be located near a source of heat such as a radiator or register. If the cabinet is placed parallel to a wall, at least an inch space should exist between the back of the cabinet and the wall, for best tone quality. The instrument must be installed in a level position for proper operation of the phonograph.

POWER SUPPLY: Unless otherwise specified on the chassis and on the power transformer, the standard receiver is to be operated from an alternating current only - (105 to 120 Volts, 60 cycle).

SPEED REGULATION: There are no adjustments on the Phonograph Motor for speed regulation since the design of the motor is for a constant speed, similar to an electric clock. Be certain that the power line frequency is the same as specified on the motor frame, the standard models being 60 cycle.

PHONOGRAPH INSTRUCTIONS

CAUTIONS - 1. NEVER USE FORCE TO START OR STOP THE MOTION OF ANY PART OF THE RECORD-CHANGING MECHANISM OR PICKUP ARM.
 2. THE USE OF RECORDS WHICH HAVE BECOME WARPED OR DAMAGED THROUGH IMPROPER CARE MAY CAUSE THE MECHANISM TO JAM AND DAMAGE THE INSTRUMENT. IN ADDITION, RECORDS WHICH HAVE BECOME WARPED WILL SLIDE ON ONE ANOTHER WHEN PLAYING, RESULTING IN UNSATISFACTORY REPRODUCTION.

3. THIS INSTRUMENT IS NOT RECOMMENDED FOR PLAYING 10-INCH AND 12-INCH RECORDS IN MIXED SEQUENCE. IF THE USER DESIRES THIS SERVICE HE MUST BE POSITIVE THAT ALL RECORDS ARE PERFECTLY FLAT AND FREE FROM WARP. THE INDEX AND RECORD REJECT LEVER MUST BE SET AT "10" AND AFTER PLAYING. THE LAST SELECTION THE PICKUP WILL COME DOWN IN POSITION FOR A 10-INCH RECORD AND REPEAT THE PLAYING OF THIS LAST RECORD ON A 10-INCH DIAMETER UNLESS THE TURNTABLE SWITCH IS TURNED OFF. ANY JAMMING OF THE MECHANISM UNDER THESE CONDITIONS INDICATES THAT THE RECORDS USED ARE NOT PERFECTLY FLAT OR THAT THEIR EDGES ARE NOT SUFFICIENTLY SMOOTH TO PERMIT NORMAL OPERATION OF THE SEPARATORS IN DROPPING EACH RECORD IN SEQUENCE ONTO THE TURNTABLE.

4. DO NOT LEAVE RECORDS ON THE RECORD HOLDER POSTS, AS THEY ARE LIABLE TO WARP. KEEP YOUR RECORDS IN A RECORD FILE (ALBUM OF CABINET) WHEN NOT IN USE. IF ANY RECORDS SHOULD BECOME WARPED, PLACE THEM ON A FLAT HEAVY ARTICLE, SUCH AS A LARGE BOOK, ON TOP AND LEAVE THEM IN THIS POSITION FOR A FEW DAYS.

ONLY LOAD YOUR RECORDS ON THE RECORD HOLDER SHELVES AFTER THE PICKUP IS IN ITS REST POSITION AND THE TURNTABLE STOPPED WITH TURNTABLE SWITCH AT "OFF".

TURNTABLE SWITCH: The Turntable Switch is a toggle type located in the front of the index plate on the motorboard (See Figure 6). It is used to start and stop the motor.

INDEX LEVER: The Index Lever moves in a small arc in the slot in the index plate. (See Figure 6). The plate is labeled for four positions of the lever - "Manual", "12", "10" and "Reject". If a single record is to be played the automatic record-changing feature will not be used and the Index Lever should be set to the "Manual" position.

If either 10 or 12-inch records are to be played automatically the index lever must be moved to the position indicating the size records that are to be played. If 10-inch records are to be played, or 10 and 12 inch mixed, the Index Lever must be set at "10" and if 12-inch records are to be played, the lever must be set at "12". To reject a record being played, or to start the record-changing cycle in case the record just played does not have the standard eccentric or spiral changing groove simply push the lever to the "REJECT" position and let go. The pickup will raise up and swing outwards and the next record will drop down. Upon releasing the lever, it will automatically return to the "10" position. If you are playing a series of 12-inch records, the lever should be returned to the "12" position after rejecting a record. Keep the lever in its "MANUAL" position when not actually playing records automatically.

Before operating the phonograph, either automatically or manually, be sure that the Pickup Arm is down at playing level and can be easily moved by hand. If not, the Index Lever will be in "10" or "12" and an "eject cycle" must be completed to bring the arm down. To do this, turn the Power switch on the radio panel to "ON" position, then throw the turntable switch "ON". The turntable will start to revolve and the cycle of motion of the pickup arm will be resumed. When the Pickup Arm comes down, turn off the turntable switch.

TO OPERATE THE PHONOGRAPH: To play records, set the radio Power switch to the "ON" position. With the Index Lever at Manual and the pickup resting on the support over the needle gauge plate, arm in groove, loosen the needle screw and drop a needle, point first, through the needle hole in the pickup. (See Figures 1 and 6). The needle will be stopped in the right position by the needle gauge plate. Press gently on top of pickup to seat it squarely on the gauge plate. Then tighten the needle screw with your fingers.

Lift the Record Holder shelves, Figure 6, with the fingers underneath and revolve to clear the record circle, also push back the lever sticking up adjacent to the rear record holder post. You now have clear access to the turntable. Place the first record upon the turntable with the spindle protruding through the center of the record.

Swing the shelves back into position down in place and load up. For automatic operation seven 10-inch records or six 12-inch records may be stacked on the record holder shelves.

It is not recommended to mix 10 and 12 inch records for automatic operation. Records should never be stacked higher than the spindle.

STEP BY STEP PROCEDURE FOR OPERATING PHONOGRAPH

A. TO PLAY 10" OR 12" RECORDS INDIVIDUALLY:

1. Move Index Lever to "Manual" position. See Figure 6.
2. Make sure the pickup arm is resting in its groove with pickup over used needle box. See Figures 1 and 6.
3. Lift the record holder shelves and swing outwards. See Figure 6.
4. Push back the vertical lever near the rear record holder post.
5. Place single record on turntable.
6. Turn power on at receiver, and switch to "Phono" position.
7. Turn on turntable switch. See Figure 6. The turntable will start revolving. Wait till it has reached its normal speed.
8. Lift pickup arm and carefully place needle in first groove of record.
9. Adjust "Volume" and "Tone" as for radio. The same controls are used.

The phonograph will not shut off until the turntable switch (Figure 6) or the Receiver switch is turned off.

To repeat the selection on records with the center changing groove, set index lever to the "10" or "12" position depending upon which size record is being played.

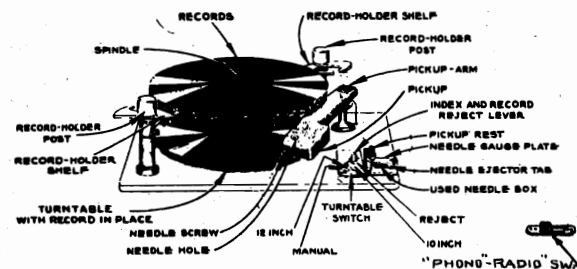


Figure 6

MODEL 210A
Push-Button Adapter
Schematic

HOWARD RADIO CO.

MODEL 301APC **MODEL 518APC**
MODEL 302APC **MODEL 520APC**
MODEL 308APC **MODEL 580APC**

Automatic Phono Data

- B. TO PLAY 10" OR 12" RECORDS SO THAT RECORDS WILL CHANGE AUTOMATICALLY AFTER EACH SELECTION.**
1. Move index lever to "Manual" position. Fig. 6.
 2. Make sure the pickup arm is resting in groove with pickup over reject needle cup. Figs. 1 and 6.
 3. Place first record on turntable as for individual playing.
 4. Swing the record holder shelves inward into place down on their posts and extending over the turntable. Fig. 6.
 5. Stack any amount up to seven 10-inch records on the record holder shelves.
 6. Turn power on at receiver, and switch to "Phono" position.
 7. Turn on turntable switch. Fig. 6.
 8. With index lever still in the "Manual" position lift pickup arm and lower to first groove of record.
 9. Move index lever to 10 or 12 inch position depending on the size records being played.
 10. Adjust volume and tone as for radio.

Records with the center changing groove will change automatically at the end of each selection until the end of the last record is reached. The last record will repeat itself until the Turntable Switch or Power-Tone control is turned off. To bring down another record at any time during playing of series, push the index lever, (Fig. 6) to "Reject" and let go. Bring back to "12" if you are playing 12-inch records.

CAUTION: DO NOT STOP THE TURNTABLE WITH TURNTABLE SWITCH OR POWER-TONE KNOB UNTIL THE PICKUP IS DOWN AT THE END OF A CYCLE. **TO CHANGE NEEDLE:** To change needle, place the pickup over the Needle Gauge Plate, with the pickup arm resting in the support groove, loosen the Needle Screw, press down the Needle Ejector Tab to drop the needle into the Used Needle Box (Figs. 1 and 6). Allow the gauge plate to return to its normal position. Drop a new needle point first, into the needle hole, press gently on pickup to seat it squarely on gauge plate and tighten the needle screw with your fingers.


NEEDLES: Good needles are essential to best reproduction. It is advisable to use medium-tone needles and these may be purchased from your Retail Store. Do not reinsert a used needle in the pickup. Change your needles frequently, worn needles distort reproduction and may damage the records. A rack for holding needle books will be found at the back of the compartment under the lid. To empty used needles from the needle box, lift the pickup and move to left out of the way, then tilt up used needle box at front and lift out of its hole in the motorboard. Press the ejector tab to open the lid; to replace, slide the lug on the back into its groove in the motor board and press the box into plate.

RECORDS: Handle your phonograph records carefully. It is advisable to purchase your records from The Retail Store where you may have them played over on an instrument of this type. Keep your records in a record album or lay them flat when not in use. Never leave them on the Record-Holder shelves. Electrically transcribed records are best. Worn or poorly transcribed records result in distortion. Records with the eccentric or spiral center groove are necessary for automatic operation, either change or repeat.


LUBRICATION: Petrolatum or petroleum jelly should be applied to cam, main gear, spindle pinion gear, and gear of record posts. Light machine oil should be used in the tone arm vertical bearing, record post bearings, and all other bearings of various levers on underside of motorboard.

Apply a few drops of light machine oil to the motor spindle bearing. The oil hole has a screw plug. Do not allow oil or grease to come in contact with rubber mounting of tone arm base, rubber bumper, or rubber spindle cap.

FOR SERVICE REFERENCE THE FUNDAMENTAL RADIO-PHONOGRAPH ELECTRICAL CIRCUIT IS SHOWN BELOW.

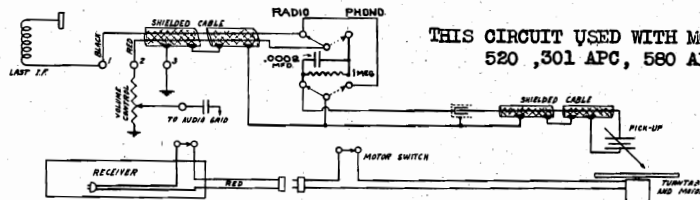


THIS CIRCUIT USED WITH MODELS:
 520, 301 APC, 580 APC

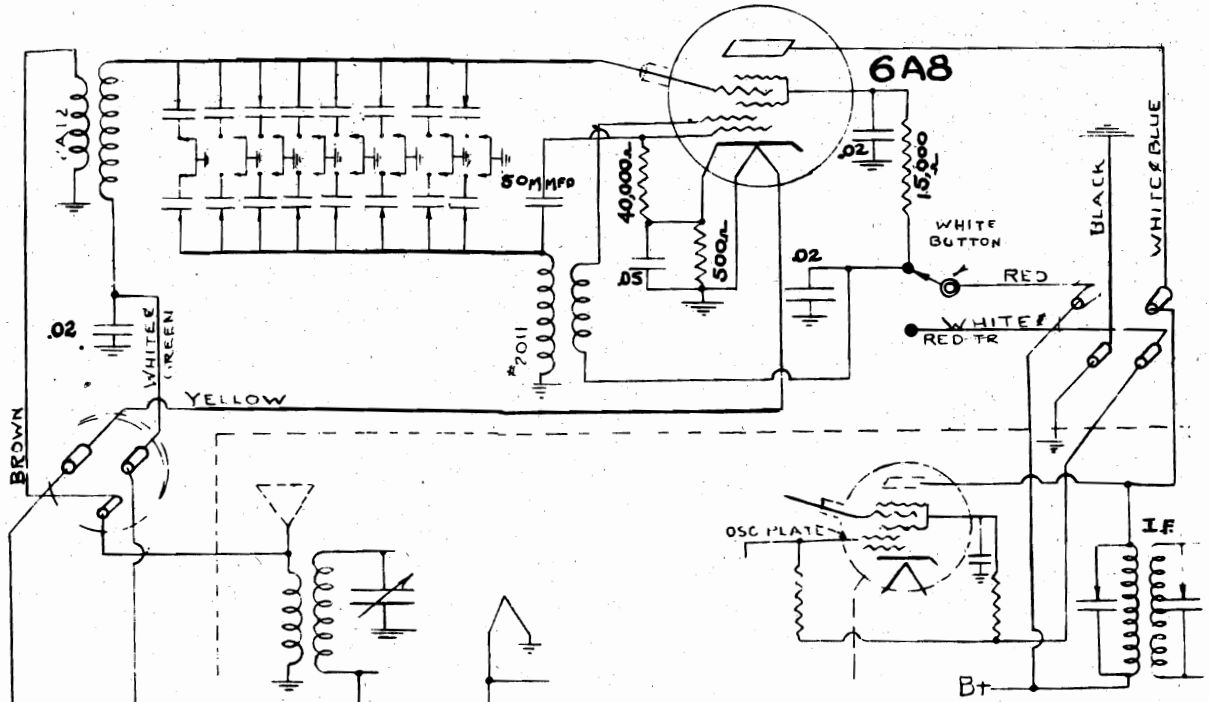

DRWG. NO. D41-715	ADAPTER
MODEL - 210A	WITH SWITCH IN SG. CIRCUIT
DATE	11-21-37

MODELS 302S, 302APC
Schematic, Voltage
Alignment, Trimmers

HOWARD RADIO CO.

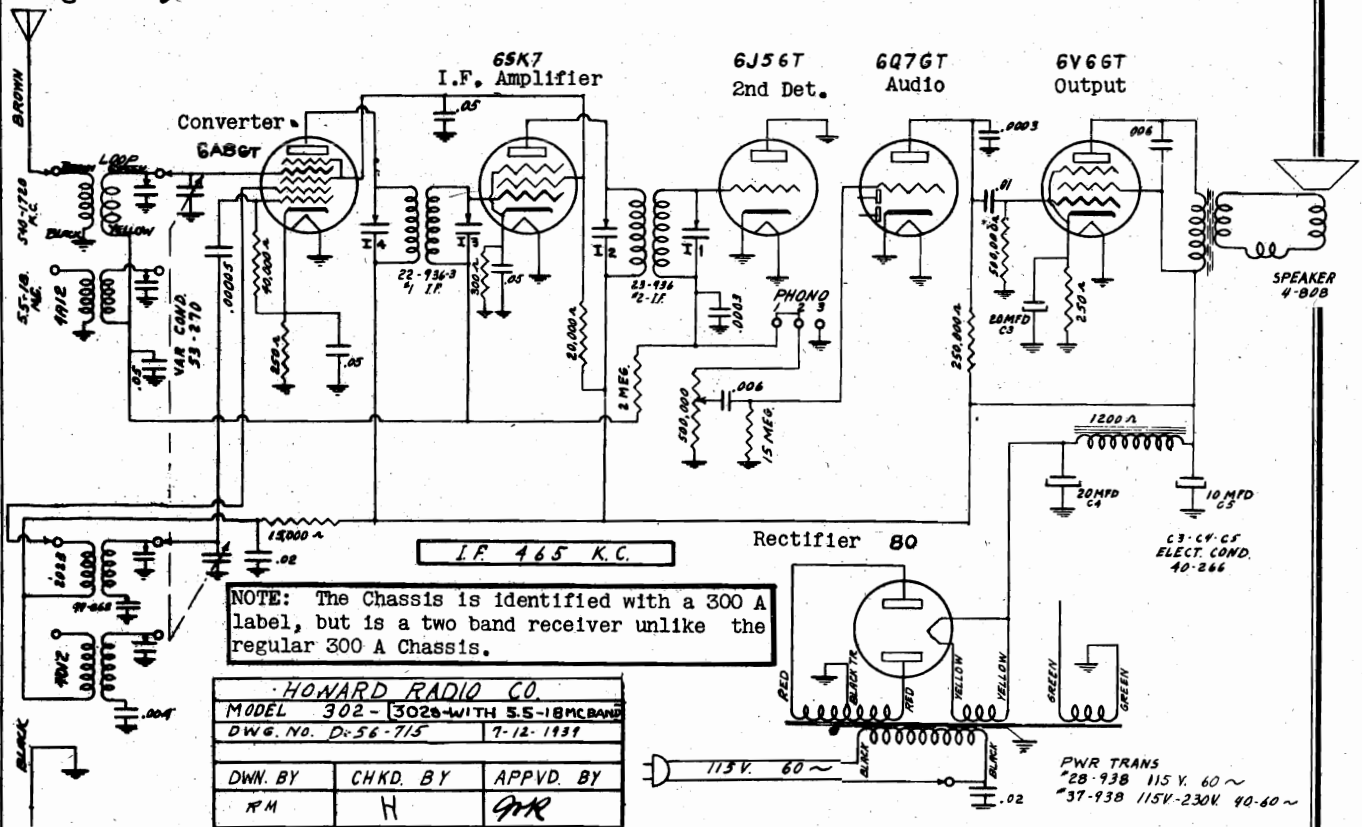


SPEAKER = Electro-dynamic | SIZE = 8" | V.C.IMP. (400CPS) = Ohms | FIELD = 1200 Ohms
 POWER SUPPLY - (Standard Models) = 105-120 V. 60 Cycle CONSUMPTION 60 WATTS NOTES
 POWER OUTPUT - (MAX.) = 6 W. upo 4 W.

ALIGNMENT PROCEDURE

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
80	Min. Cap.	465 KC	6A8 Grid	A, E	I ₁ I ₂ I ₃ I ₄	IF
SW	16 MC	16 MC	Brown lead	B, D	O ₅ A ₆	Osc. Ant.
80	1400 KC	1400 KC	Brown lead		O ₇ A ₈	Osc. Ant.
80	600 KC	600 KC	Brown lead	C	P ₉	Osc. Pad.


A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.
 B- When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.
 C- When adjusting this pad, move the tuning hand back and forth and adjust padder until the peak of greatest intensity is obtained.
 D- See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.
 E- The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.

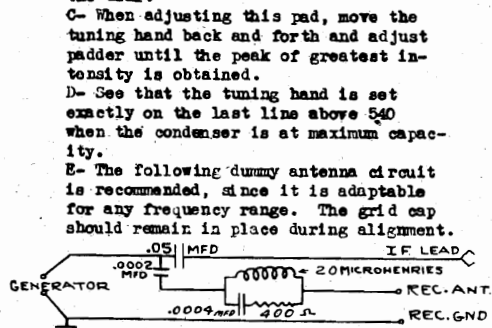


SOCKET VOLTAGE READINGS

Voltage taken from ground with line voltage at -117 AC
 High voltage reading off rectifier = 330V.
 Drop across speaker field = 90 V.
 Voltage taken with 1,000 Ohm per volt meter -


TUBE	FUNCTION	CATH. ODE.	SCR. GRID.	PLATE
6A8	Mixer	4	112	235
6SK7	IF.	4	112	235
6J5	Det.	x	x	x
6Q7	Audio	x	x	38
6V6	Output	11	240	230

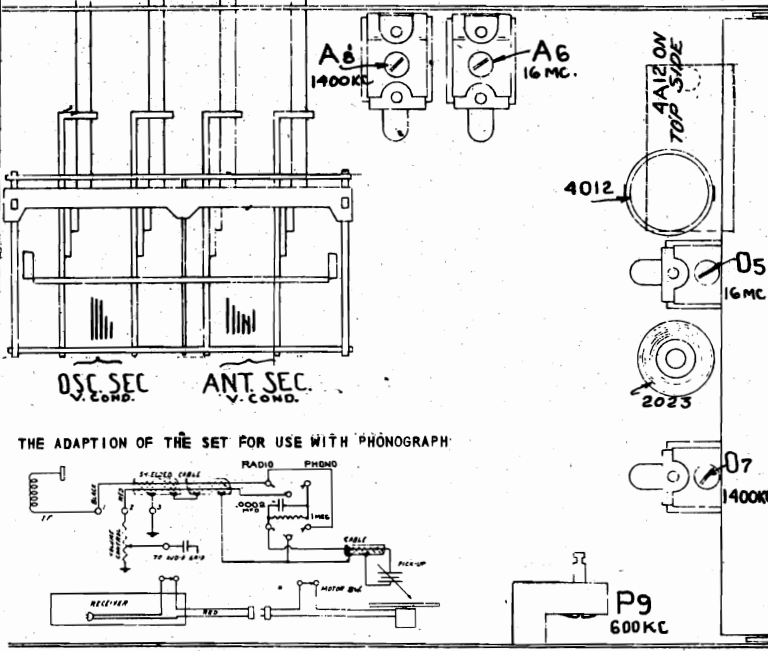

THE ADAPTION OF THE SET FOR USE WITH PHONOGRAPH

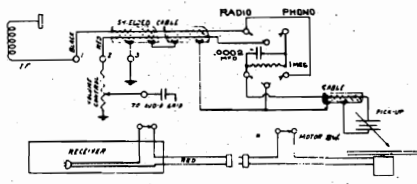

HOWARD RADIO CO.

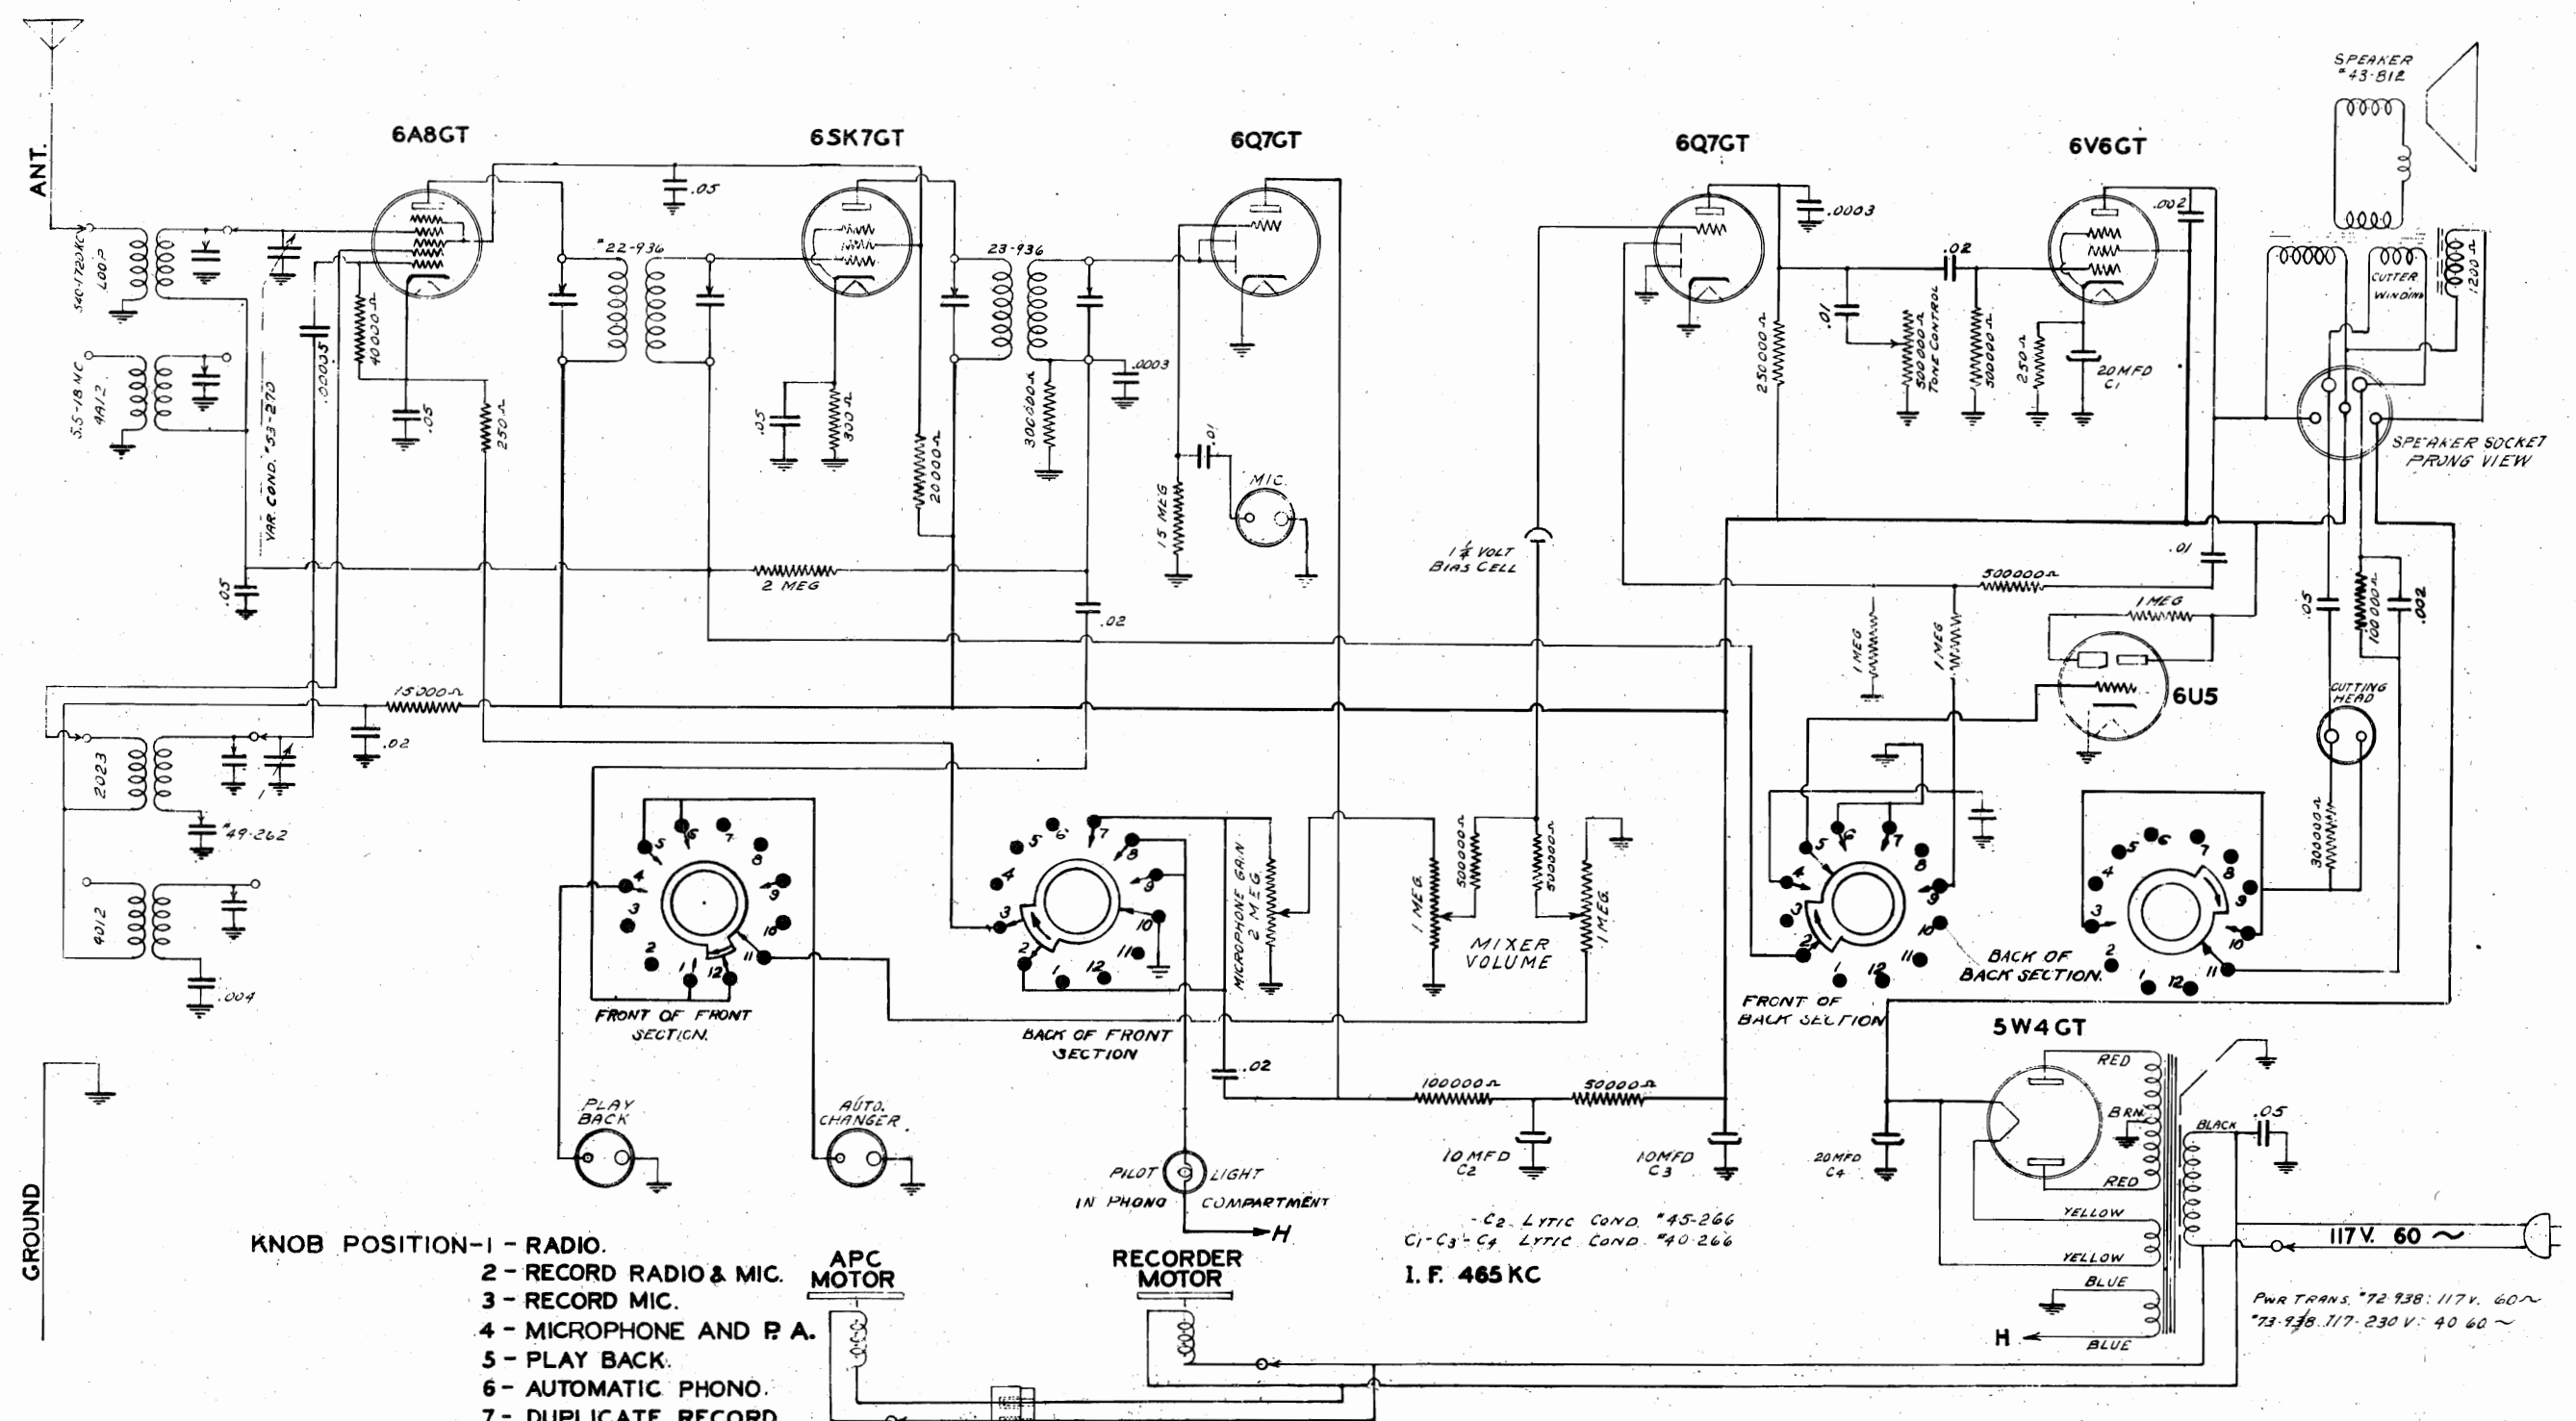

- KNOB POSITION-1 - RADIO.
 2 - RECORD RADIO & MIC.
 3 - RECORD MIC.
 4 - MICROPHONE AND P. A.
 5 - PLAY BACK.
 6 - AUTOMATIC PHONO.
 7 - DUPLICATE RECORD.


C₂ LYTIC COND. #45-266
 C₁-C₃-C₄ LYTIC COND. #40-266
 I. F. 465 KC

PWR TRANS. #72-938: 117V. 60~
 #73-938: 117-230V: 40 60~

HOWARD RADIO CO.	
MODEL 302 R. (RA), 302 RT	
DWG. NO. C71-715	2-21-40

HOWARD RADIO CO.


MODEL 305
Schematic, Voltage
Alignment, Trimmers

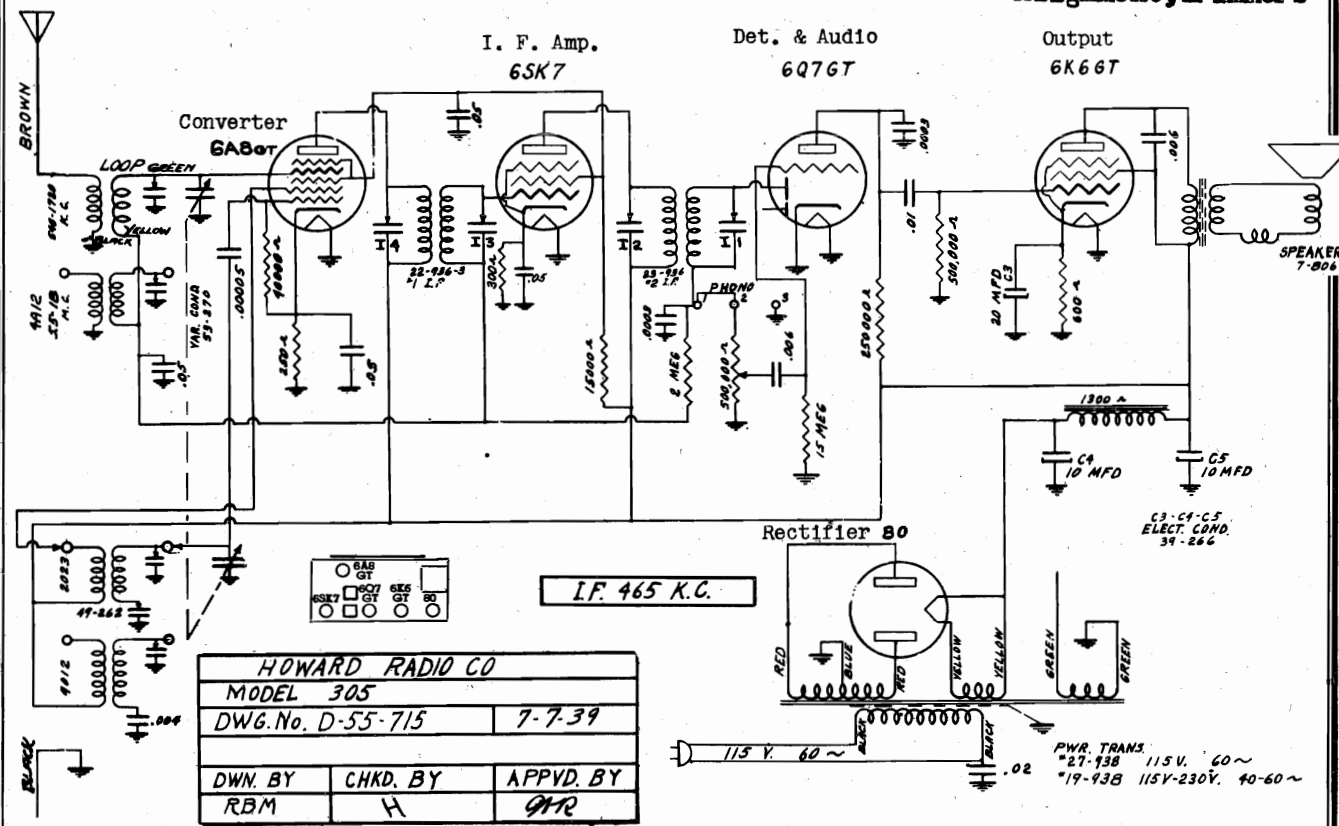

SPEAKER = Electro-dynamic SIZE = 6" V.C.I.M.P.(400CPS) = 4 Ohms
POWER SUPPLY - (Standard Models) = 105-120 V. 60 Cycle CONSUMPTION 50 WATTS
POWER OUTPUT - (MAX.) = 2.7 W. upo 1.5W


ALIGNMENT PROCEDURE

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
BC	Min. Cap.	465 KC	6A8 Grid	A, E	I ₁ I ₂ I ₃ I ₄	IF
SW	16 MC	16 MC	Brown lead	B, D	O ₅ A ₆	Osc. Ant.
BC	1400 KC	1400 KC	Brown lead		O ₇ A ₈	Osc. Ant.
BC	-600 KC	600 KC	Brown lead	C	P ₉	Osc. Pad.

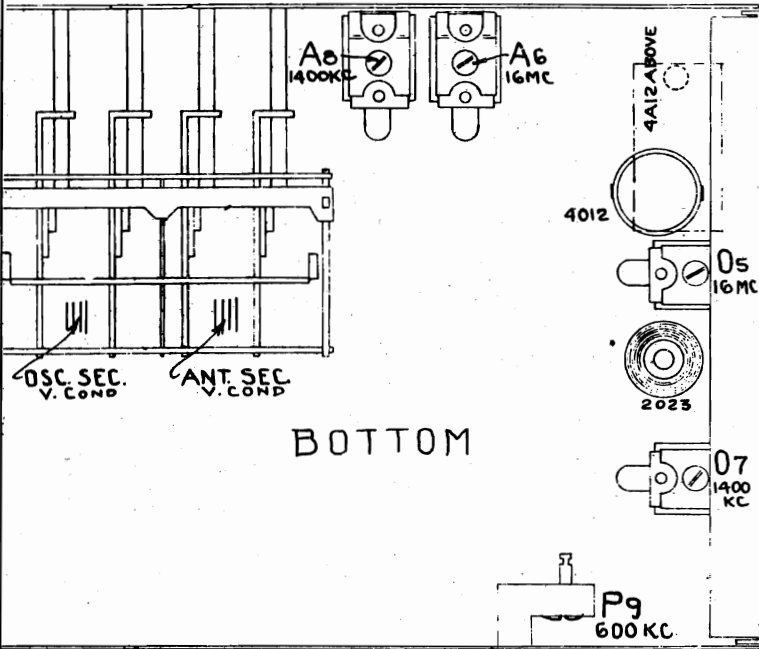

BOTTOM

NOTES
A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.
B- When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.
C- When adjusting this pad, move the tuning hand back and forth and adjust padder until the peak of greatest intensity is obtained.
D- See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.
E- The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.

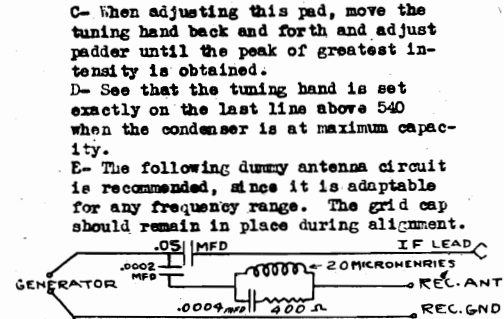


SOCKET VOLTAGE READINGS
Voltage taken from ground with line voltage at - 117 AC
High voltage reading off rectifier - 275 V.
Drop across speaker field = 75 V.
Voltage taken with 1,000 Ohm per volt meter -

TUBE	FUNCTION	CATH. ODE.	GRD.	PLATE
6A8 GT	Mixer	4.5	105	195
6SK7	IF	4.5	105	195
6Q7 GT	Det.		60	
6K6 GT	Output	16	195	185


MODEL 306
Schematic, Voltage
Alignment, Trimmers

HOWARD RADIO CO.

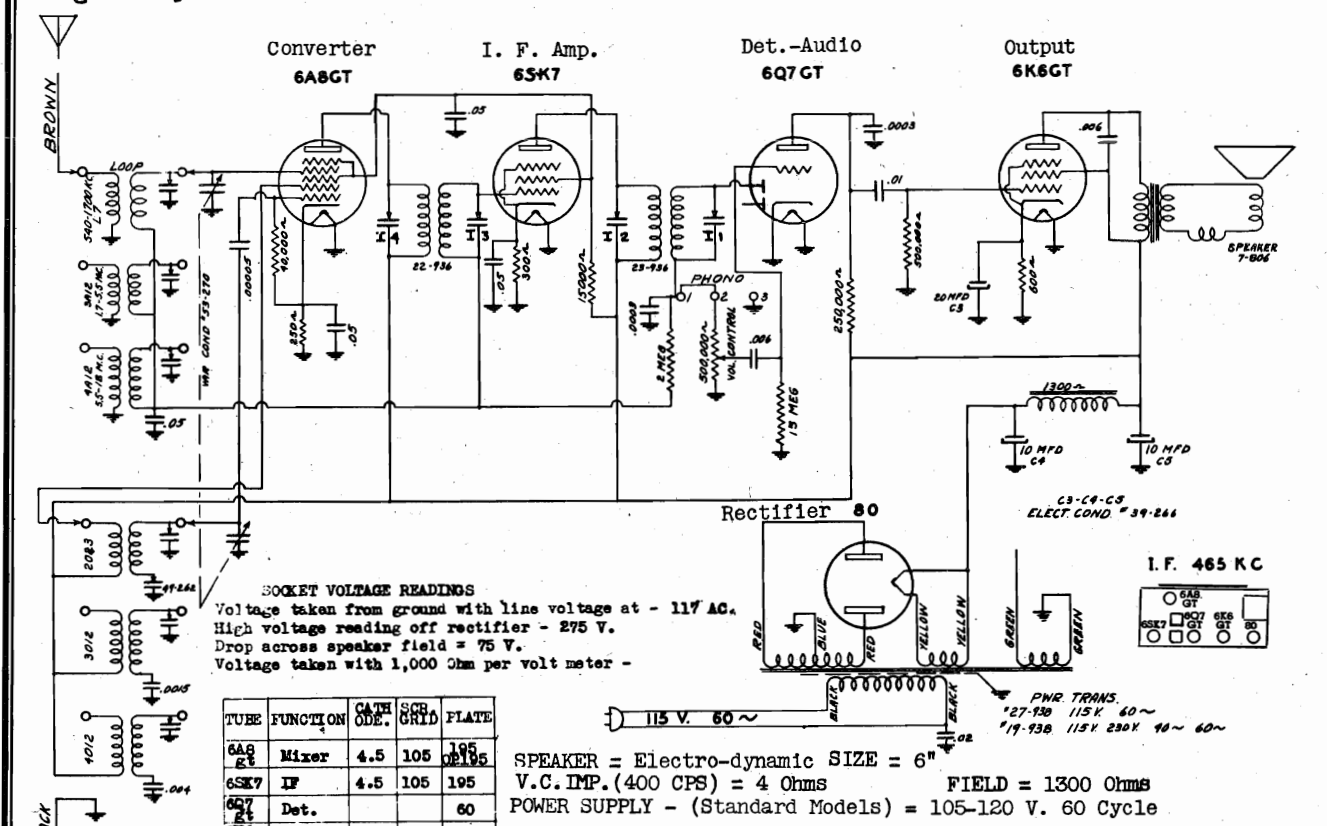


SPEAKER = Electro-dynamic SIZE = 6" V.C.I.M.P.(400 CPS) = 4 Ohms
POWER SUPPLY - (Standard Models) = 105-120 V. 60 Cycle
CONSUMPTION 50 WATTS
POWER OUTPUT - (MAX.) = 2.7 w upo 1.5w

HOWARD RADIO CO.		
MODEL 306	DWG. NO. D62-715	10-13-39
DWN. BY	CHKD. BY	APPVD. BY
RBM	H	JHR

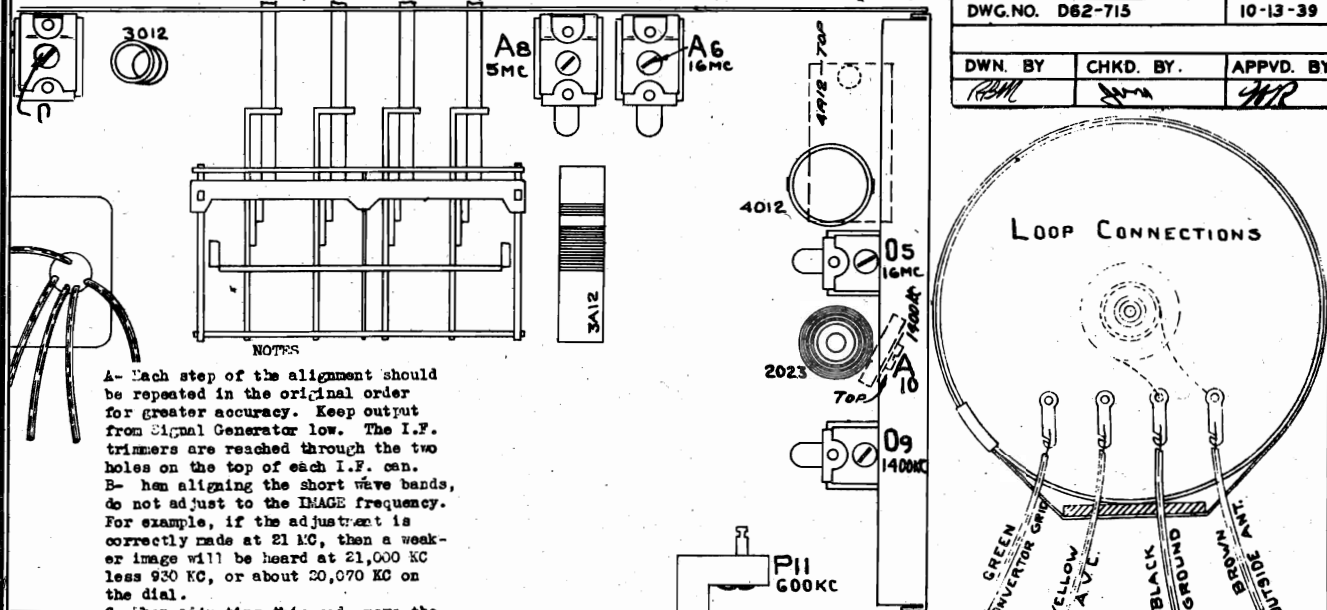


NOTES
A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.
B- When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 KC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.
C- When adjusting this pad, move the tuning hand back and forth and adjust padder until the peak of greatest intensity is obtained.
D- See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.
E- The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.



ALIGNMENT PROCEDURE					
Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)
BC	Min. Cap.	465 KC	6A8 Grid	A, E	I ₁ I ₂ I ₃ I ₄
SW	16 MC	16 MC	Brown lead	B, D	O ₅ A ₆
PB	5 MC	5 MC	Brown lead		O ₇ A ₈
BC	1400 KC	1400 KC	Brown lead		O ₉ A ₁₀
BC	600 KC	600 KC	Brown lead	C	P ₁₁

MODELS 308APC, 308C, 308TT
Schematic, Voltage
Alignment, Trimmers

HOWARD RADIO CO.


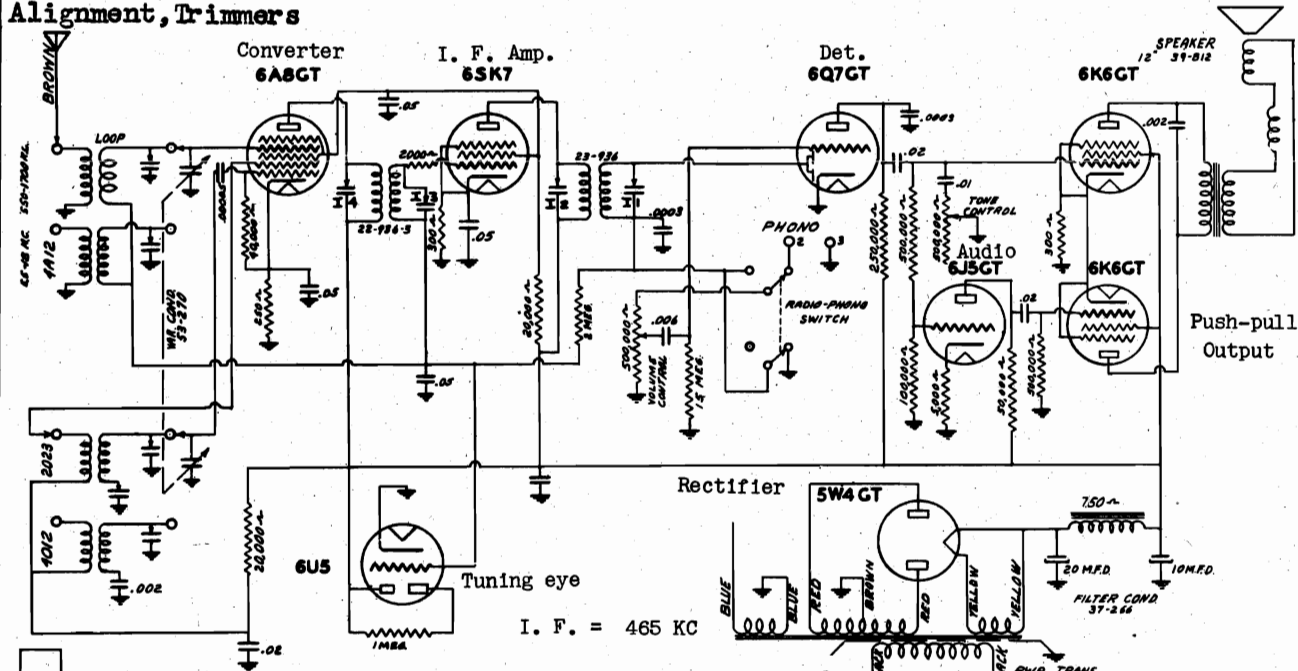


ALIGNMENT PROCEDURE

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
BC	Min. Cap.	465 KC	6A8 Grid	A, E	I ₁ I ₂ I ₃ I ₄	IF
SW	16 MC	16 MC	Brown lead	B, D	O ₅ A ₆	Osc. Ant.
BC	1400 KC	1400 KC	Brown lead		O ₇ A ₈	Osc. Ant.
BC	600 KC	600 KC	Brown lead	C	P ₉	Osc. Pad.

- A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.
- B- When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.
- C- When adjusting this pad, move the tuning hand back and forth and adjust padder until the peak of greatest intensity is obtained.
- D- See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.
- E- The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.


POWER SUPPLY - (Standard Models) = 105-120 V. 60 Cycle
CONSUMPTION 70 WATTS + 30APC
POWER OUTPUT - (MAX.) = 7.5 W. up to 4.5W.

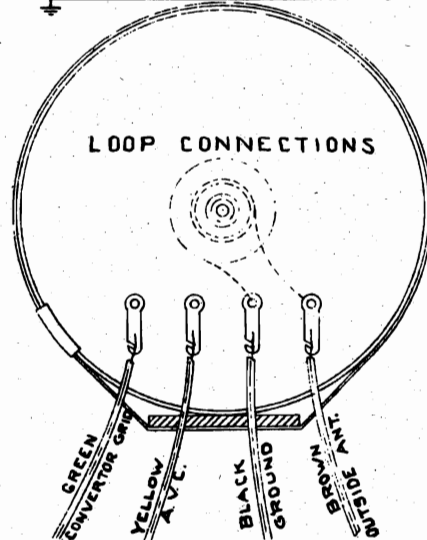

SOCKET VOLTAGE READINGS

Voltage taken from ground with line voltage at - 117 AC
High voltage reading off rectifier = 315 V.
Drop across speaker field = 75 V.
Voltage taken with 1,000 Ohm per volt meter -

TUBE	FUNCTION	CATH. ODE.	SCR. GRID	PLATE
6A8 GT	Mixer	4	105	250
6SK7	IF	3	105	235
6Q7 GT	Det.	x	x	70
6J5 GT	Inverter	7	x	150
6K6 GT	Output	18	240	230
6K6 GT	"	18	240	230

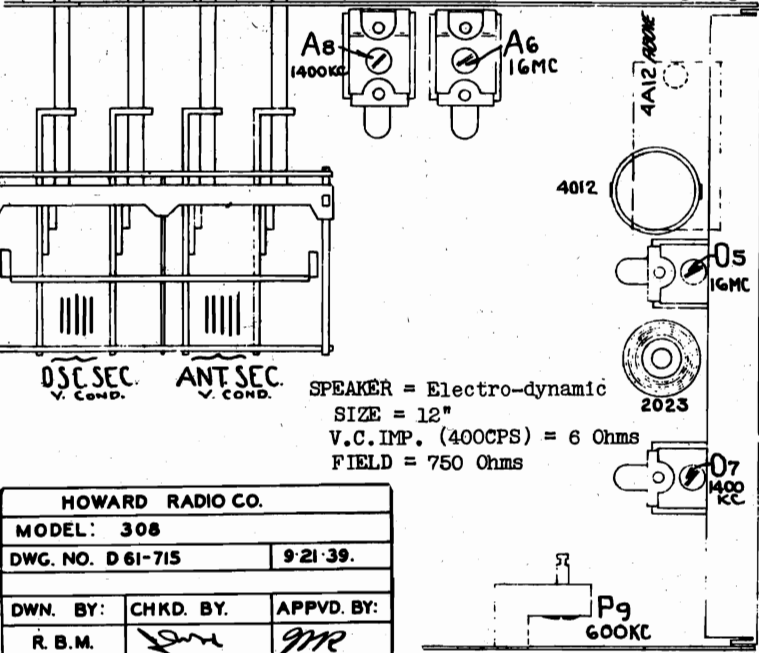


SPEAKER = Electro-dynamic
SIZE = 12"
V.C. IMP. (400CPS) = 6 Ohms
FIELD = 750 Ohms

HOWARD RADIO CO.		
MODEL: 308		
DWG. NO. D 61-715	9-21-39.	
DWN. BY:	CHKD. BY:	APPVD. BY:
R. B. M.	<i>[Signature]</i>	<i>[Signature]</i>

HOWARD RADIO CO.


MODELS 518, 518S, 518APC
Schematic, Voltage, Socket
Alignment, Trimmers

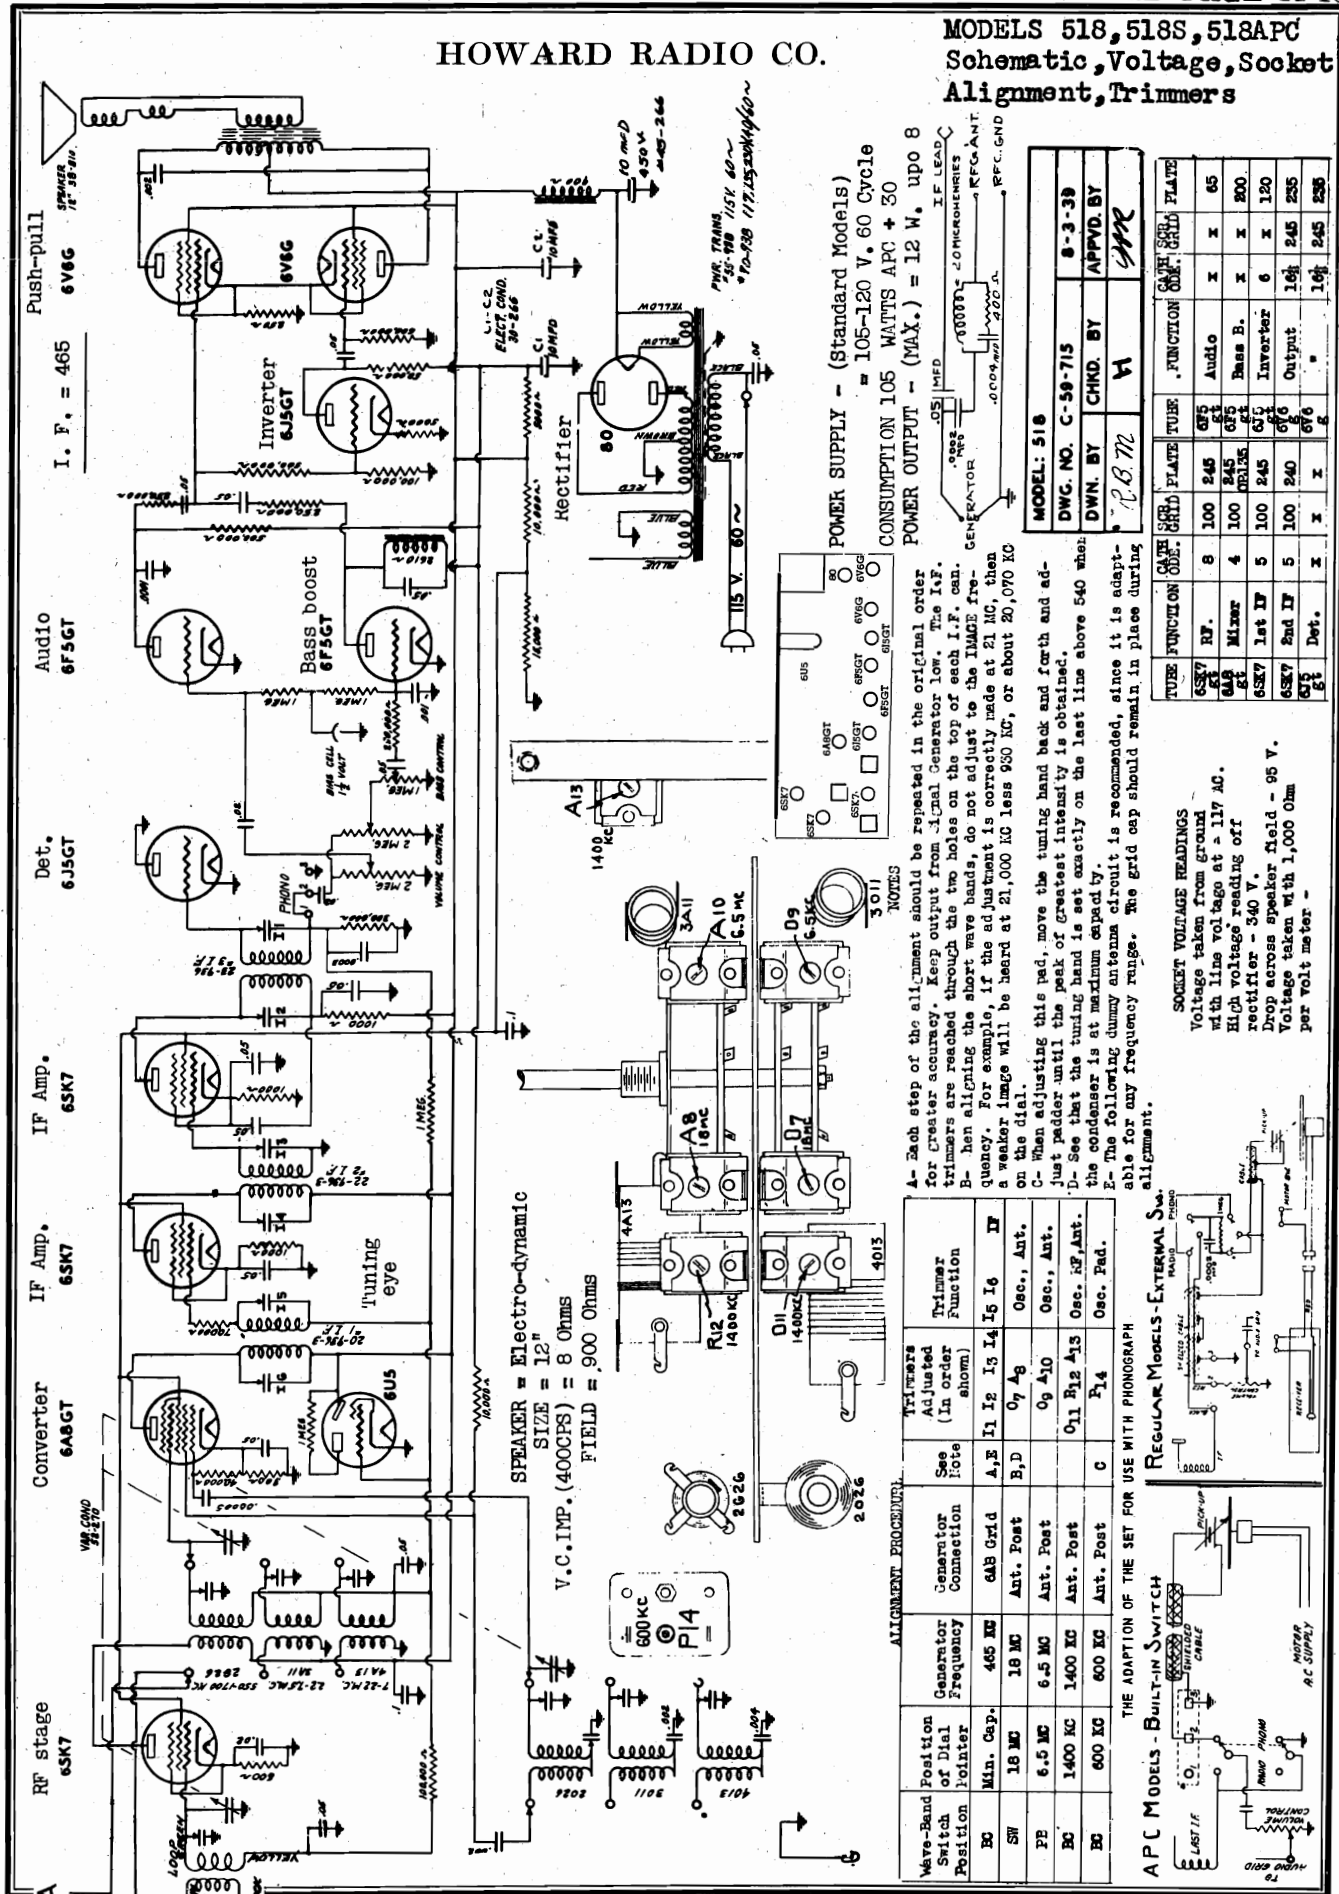

POWER SUPPLY - (Standard Models)
= 105-120 V. 60 Cycle
CONSUMPTION 105 WATTS APC + 30
POWER OUTPUT - (MAX.) = 12 W. upo 8

MODEL: 518
DWG. NO. C-59-715
CHKD. BY
APPVD. BY

TUBE	FUNCTION	PLATE	TUBES	FUNCTION	GRID	GRID	PLATE
6SK7	RF	8	100	245	6F5	6F5	65
6AG7	Mixer	4	100	245	6F5	6F5	200
6SK7	1st IF	5	100	245	6F5	6F5	120
6SK7	2nd IF	5	100	240	6F5	6F5	225
6V6	Det.	2	100	245	6F5	6F5	225

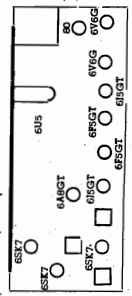



NOTES
A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from signal generator low. The 1st trimmers are reached through the two holes on the top of each I.F. can. B- When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.
C- When adjusting this pad, move the tuning hand back and forth and adjust pad until the peak of greatest intensity is obtained.
D- See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.
E- The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.

SOCKET VOLTAGE READINGS
Voltage taken from ground with line voltage at ~117 AC.
High voltage reading off rectifier - 340 V.
Drop across speaker field - 95 V.
Voltage taken with 1,000 Ohm per volt meter -

ALIGNMENT PROCEDURE


Wave-Band Switch Position	Generator Frequency	Generator Connection	Trimmers Adjusted (In order shown)	Function
BC	18 MC	6AB Grid	A, E I ₁ I ₂ I ₃ I ₄ I ₅ I ₆	IF
SW	6.5 MC	Ant. Post	O ₇ A ₈	Osc., Ant.
PE	6.5 MC	Ant. Post	O ₉ A ₁₀	Osc., Ant.
BC	1400 KC	Ant. Post	O ₁₁ B ₁₂ A ₁₃	Osc. AP, Ant.
BC	600 KC	Ant. Post	C P ₁₄	Osc. Pad.

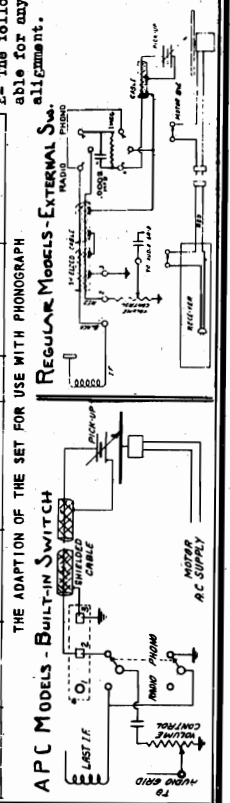

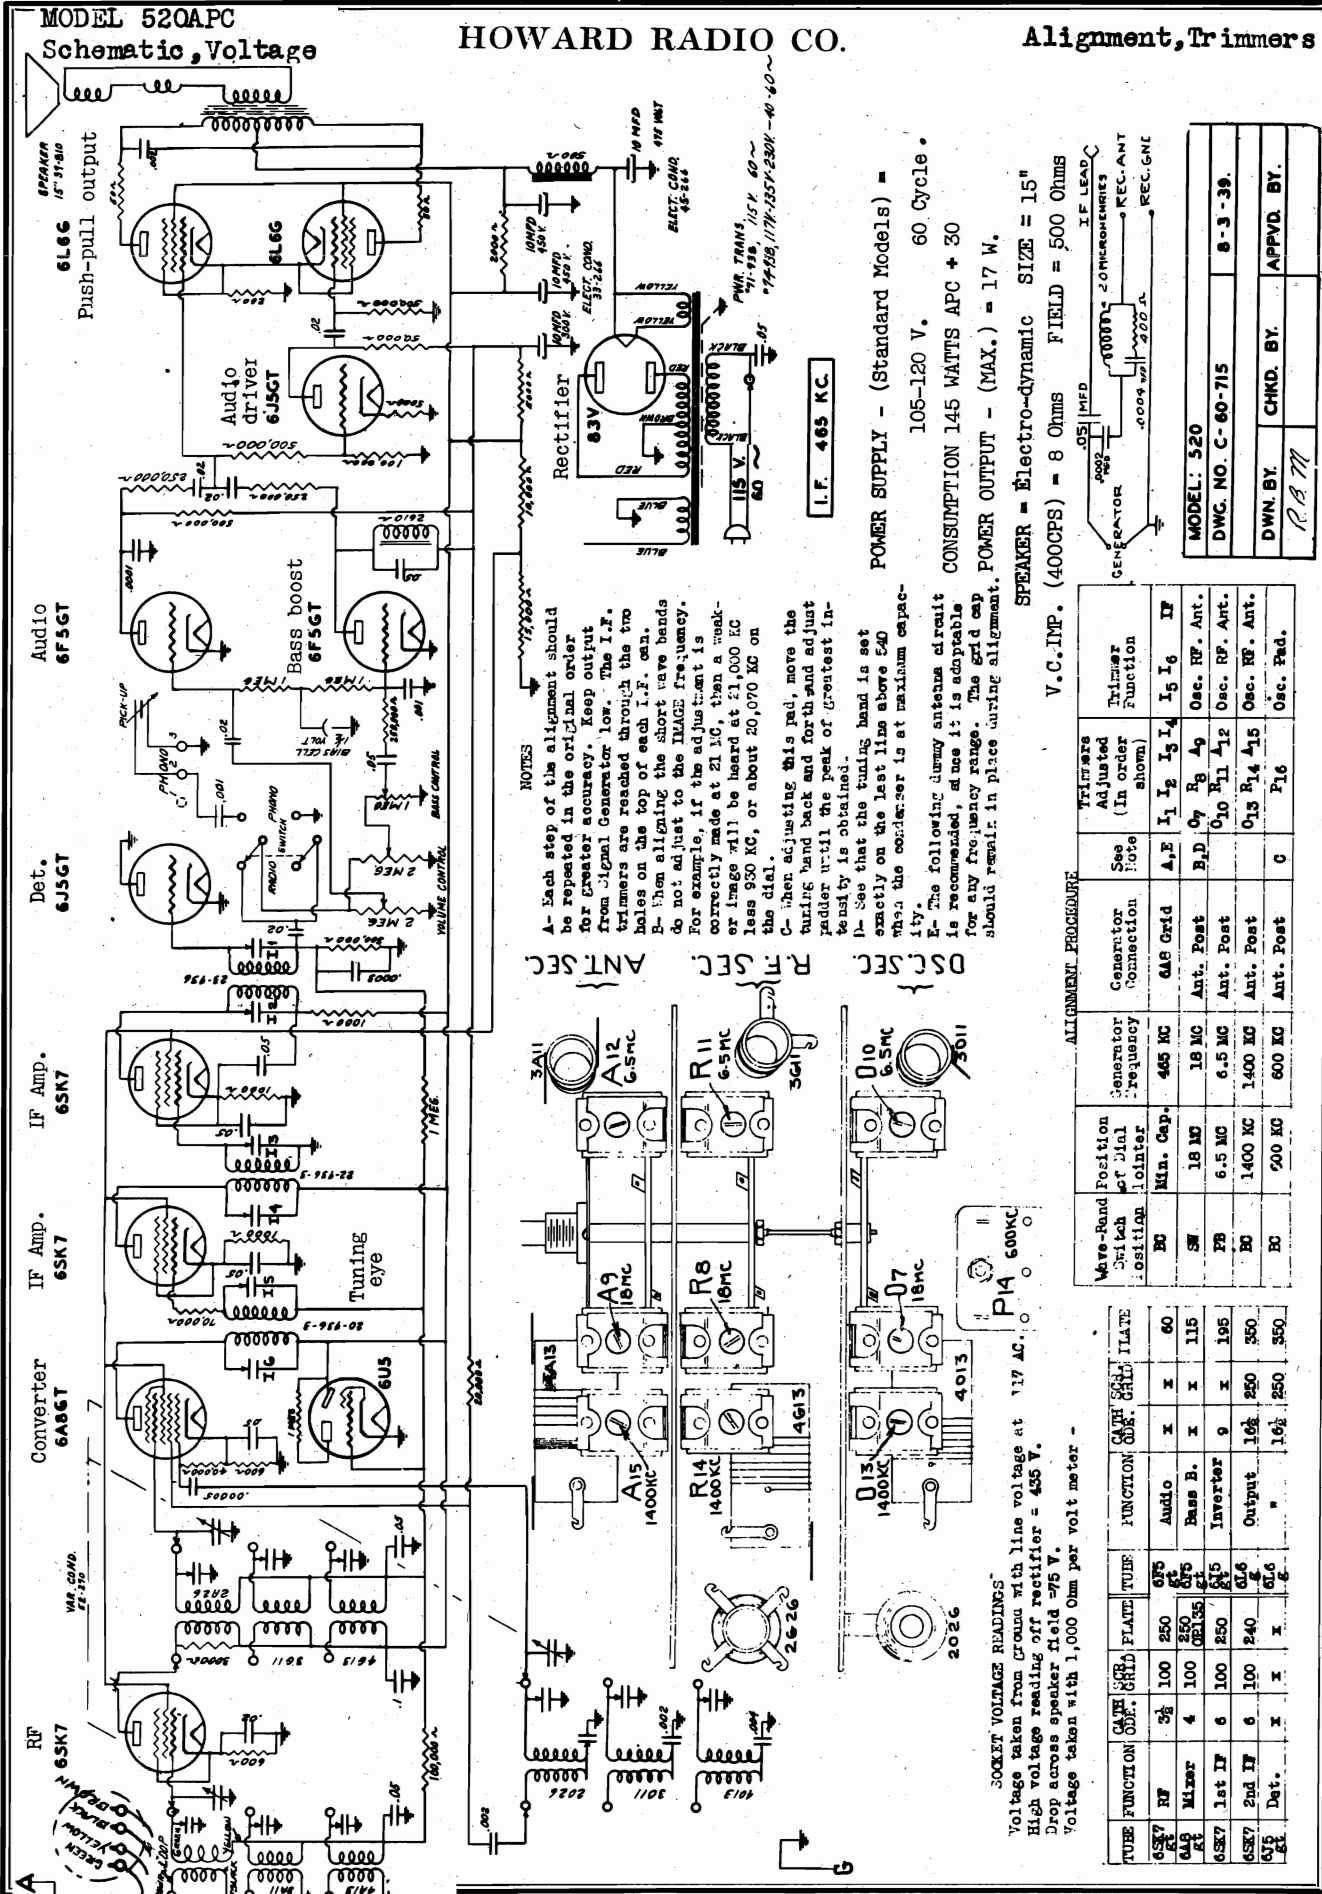


HOWARD RADIO CO.

MODEL 565(6v.,12v)
Schematics, Voltage
Alignment, Trimmers
Socket

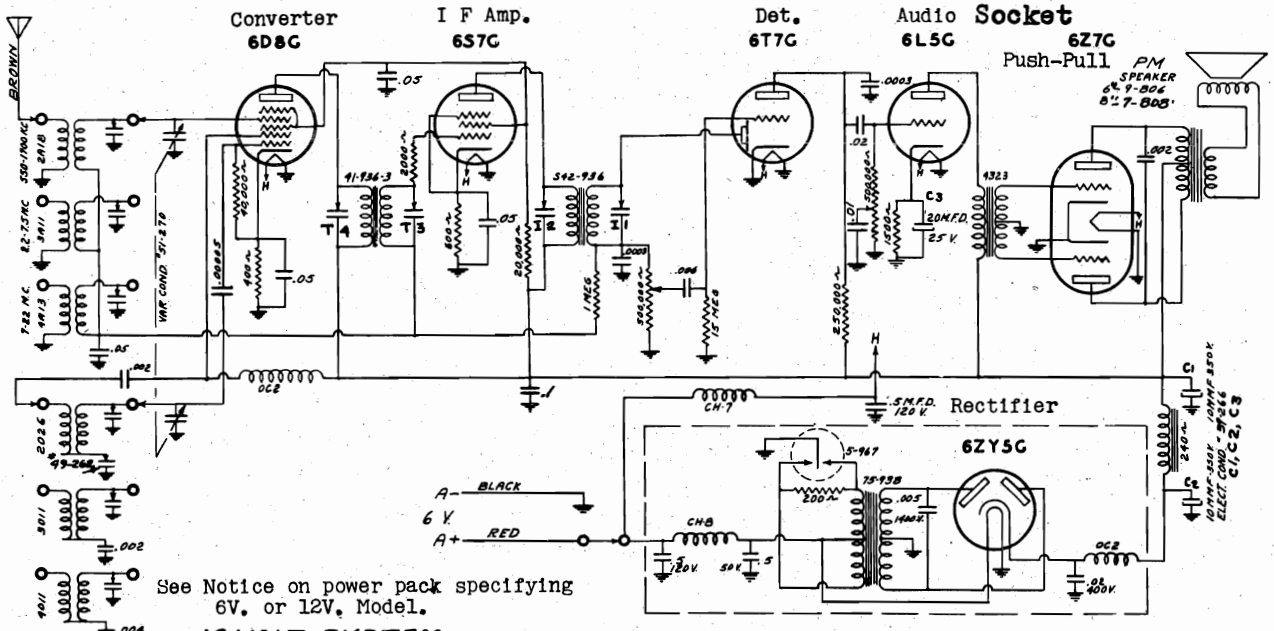

See Notice on power pack specifying 6V. or 12V. Model.

12 VOLT SYSTEM

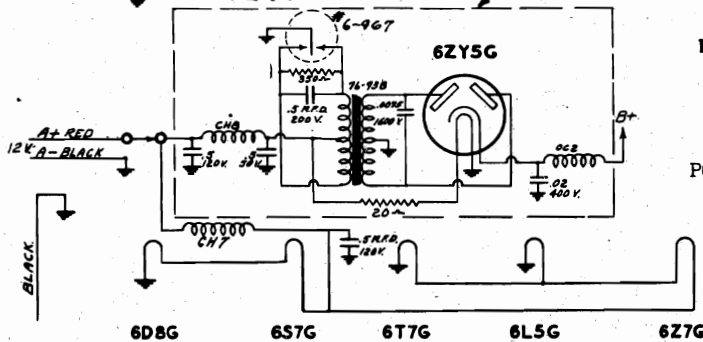

MODEL 565		
DWG. NO. D63-715	10-20-39	
DWN. BY. R.B.M.	CHKD. BY.	APPVD. BY.

I.F. 465 K.C.

POWER SUPPLY - (Standard Models) = 6 Volt & 12 Volt


DRAIN 2.4 Amps. With 6V. Models and 1.4 Amps. With 12V. Models

POWER OUTPUT - (MAX.) = 2W.

SPEAKER = Permanent Magnet SIZE = 6" & 8" V.C.IMP.(400CPS) = 6 Ohms FIELD - PM


NOTES

- A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can. do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.
- B- When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.
- C- When adjusting this pad, move the tuning hand back and forth and adjust padder until the peak of greatest intensity is obtained.
- D- See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.
- E- The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.

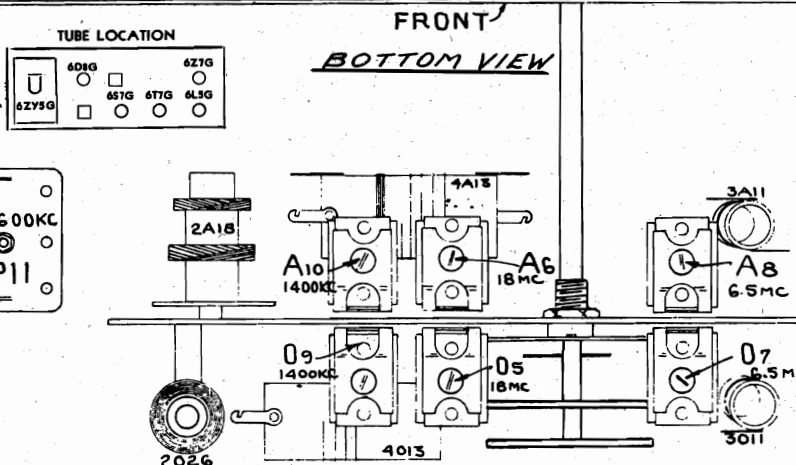

ALIGNMENT PROCEDURE

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)				Trimmer Function
					I ₁	I ₂	I ₃	I ₄	
BC	Min. Cap.	465 KC	6D8 Grid	A, E	I ₁	I ₂	I ₃	I ₄	IF
SW	18 MC	18 MC	Brown lead	B, D	O ₅	A ₆			Osc., Ant.
FB	6.5 MC	6.5 MC	Brown lead		O ₇	A ₈			Osc., Ant.
BC	1400 KC	1400 KC	Brown lead		O ₉	A ₁₀			Osc., Ant.
BC	600 KC	600 KC	Brown lead	C		P11			Osc. Pad.




TUBE	FUNCTION	CATH. ODE.	SCR. GRID	PLATE
6D8G	Mixer	3	70	145 DE145
6S7G	IF	3	70	145
6T7G	Det.	x	x	50
6L5G	Audio	6 V. Bias	x	145
6Z7G	FP Output	x	x	140

MODEL 568

Schematic, Voltage Alignment, Trimmers Socket

HOWARD RADIO CO.

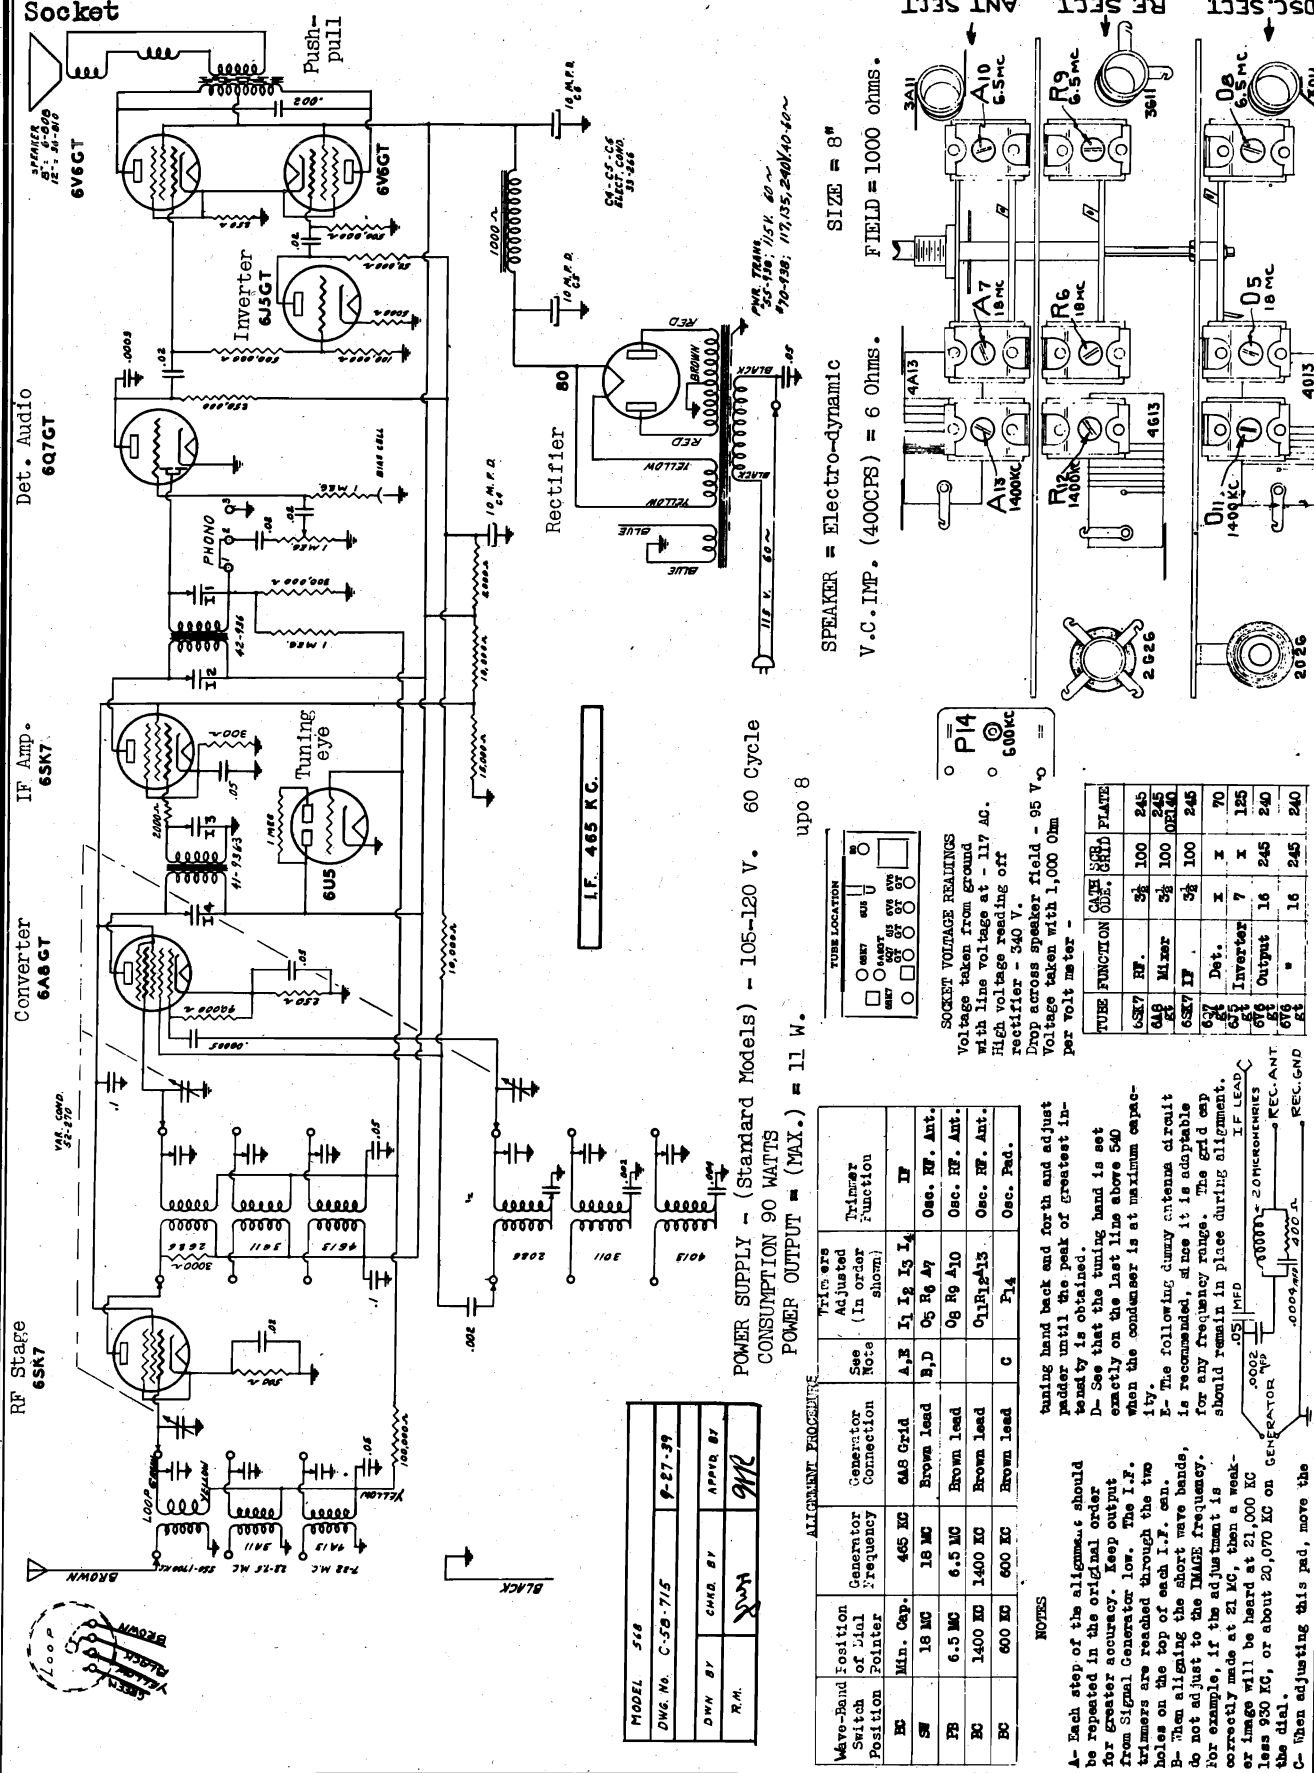

RF Stage 6SK7
 Converter 6AS6
 IF Amp. 6SK7
 Det. Audio 6Q7GT
 Inverter 6U5
 Rectifier 6X4
 Push-pull 6V6

POWER SUPPLY - (Standard Models) - 105-120 V. 60 Cycle
 CONSUMPTION 90 WATTS
 POWER OUTPUT = (MAX.) = 11 W. upo 8


MODEL 568	9-27-39
DWG. No. C-58-715	APPR. BY
DWN. BY	CHKD. BY
R.M.	2MR

Wave-Band Position	Switch of Dial Pointer	Frequency	Connector	See Note	Trimmer Adjusted (in order shown)	Function
BC	Min. Cap.	465 KC	A, E	I, I ₂	I ₃ , I ₄	IF
SW	18 MC	18 MC	B, D	O ₅	R ₆ , A ₇	Osc. RF. Ant.
FB	6.5 MC	6.5 MC		O ₈	R ₉ , A ₁₀	Osc. RF. Ant.
BC	1400 KC	1400 KC		O ₁₁ , P ₁₂	A ₁₃	Osc. RF. Ant.
BC	600 KC	600 KC		P ₁₄		Osc. Pad.


NOTES
 A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The i.f. trimmers are reached through the two holes on the top of each i.f. can.
 B- Then aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 950 KC, or about 20,070 KC on the dial.
 C- When adjusting this pad, move the

tuning hand back and forth and adjust until the peak of greatest intensity is obtained.
 D- See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.
 E- The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.
 F- I.F. LEAD - 20 MCH. RESISTANCE
 REC. ANT. - 200 Ω
 REC. GND

SOCKET VOLTAGE READINGS
 Voltage taken from ground
 High voltage reading off rectifier - 340 V.
 Drop across speaker field - 95 V
 Voltage taken with 1,000 Ohm per Volt meter -




TUBE	FUNCTION	GRID	SHIELD	PLATE
6SK7	RF	5	100	245
6AS6	Mixer	5	100	245
6SK7	IF	5	100	245
6U5	Det.	1	1	70
6U5	Inverter	7	1	125
6V6	Output	16	245	240
6X4		16	245	240

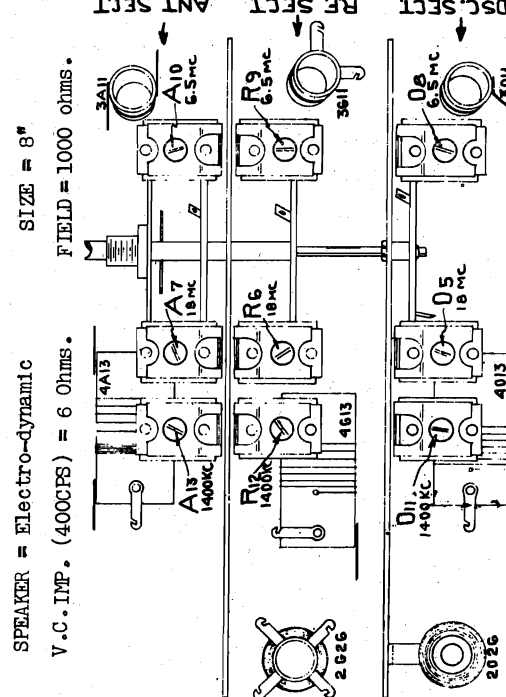

SPEAKER = Electro-dynamic
 V.C. IMP. (400CPS) = 6 Ohms.
 FIELD = 1000 ohms.
 SIZE = 8"



HOWARD RADIO CO.

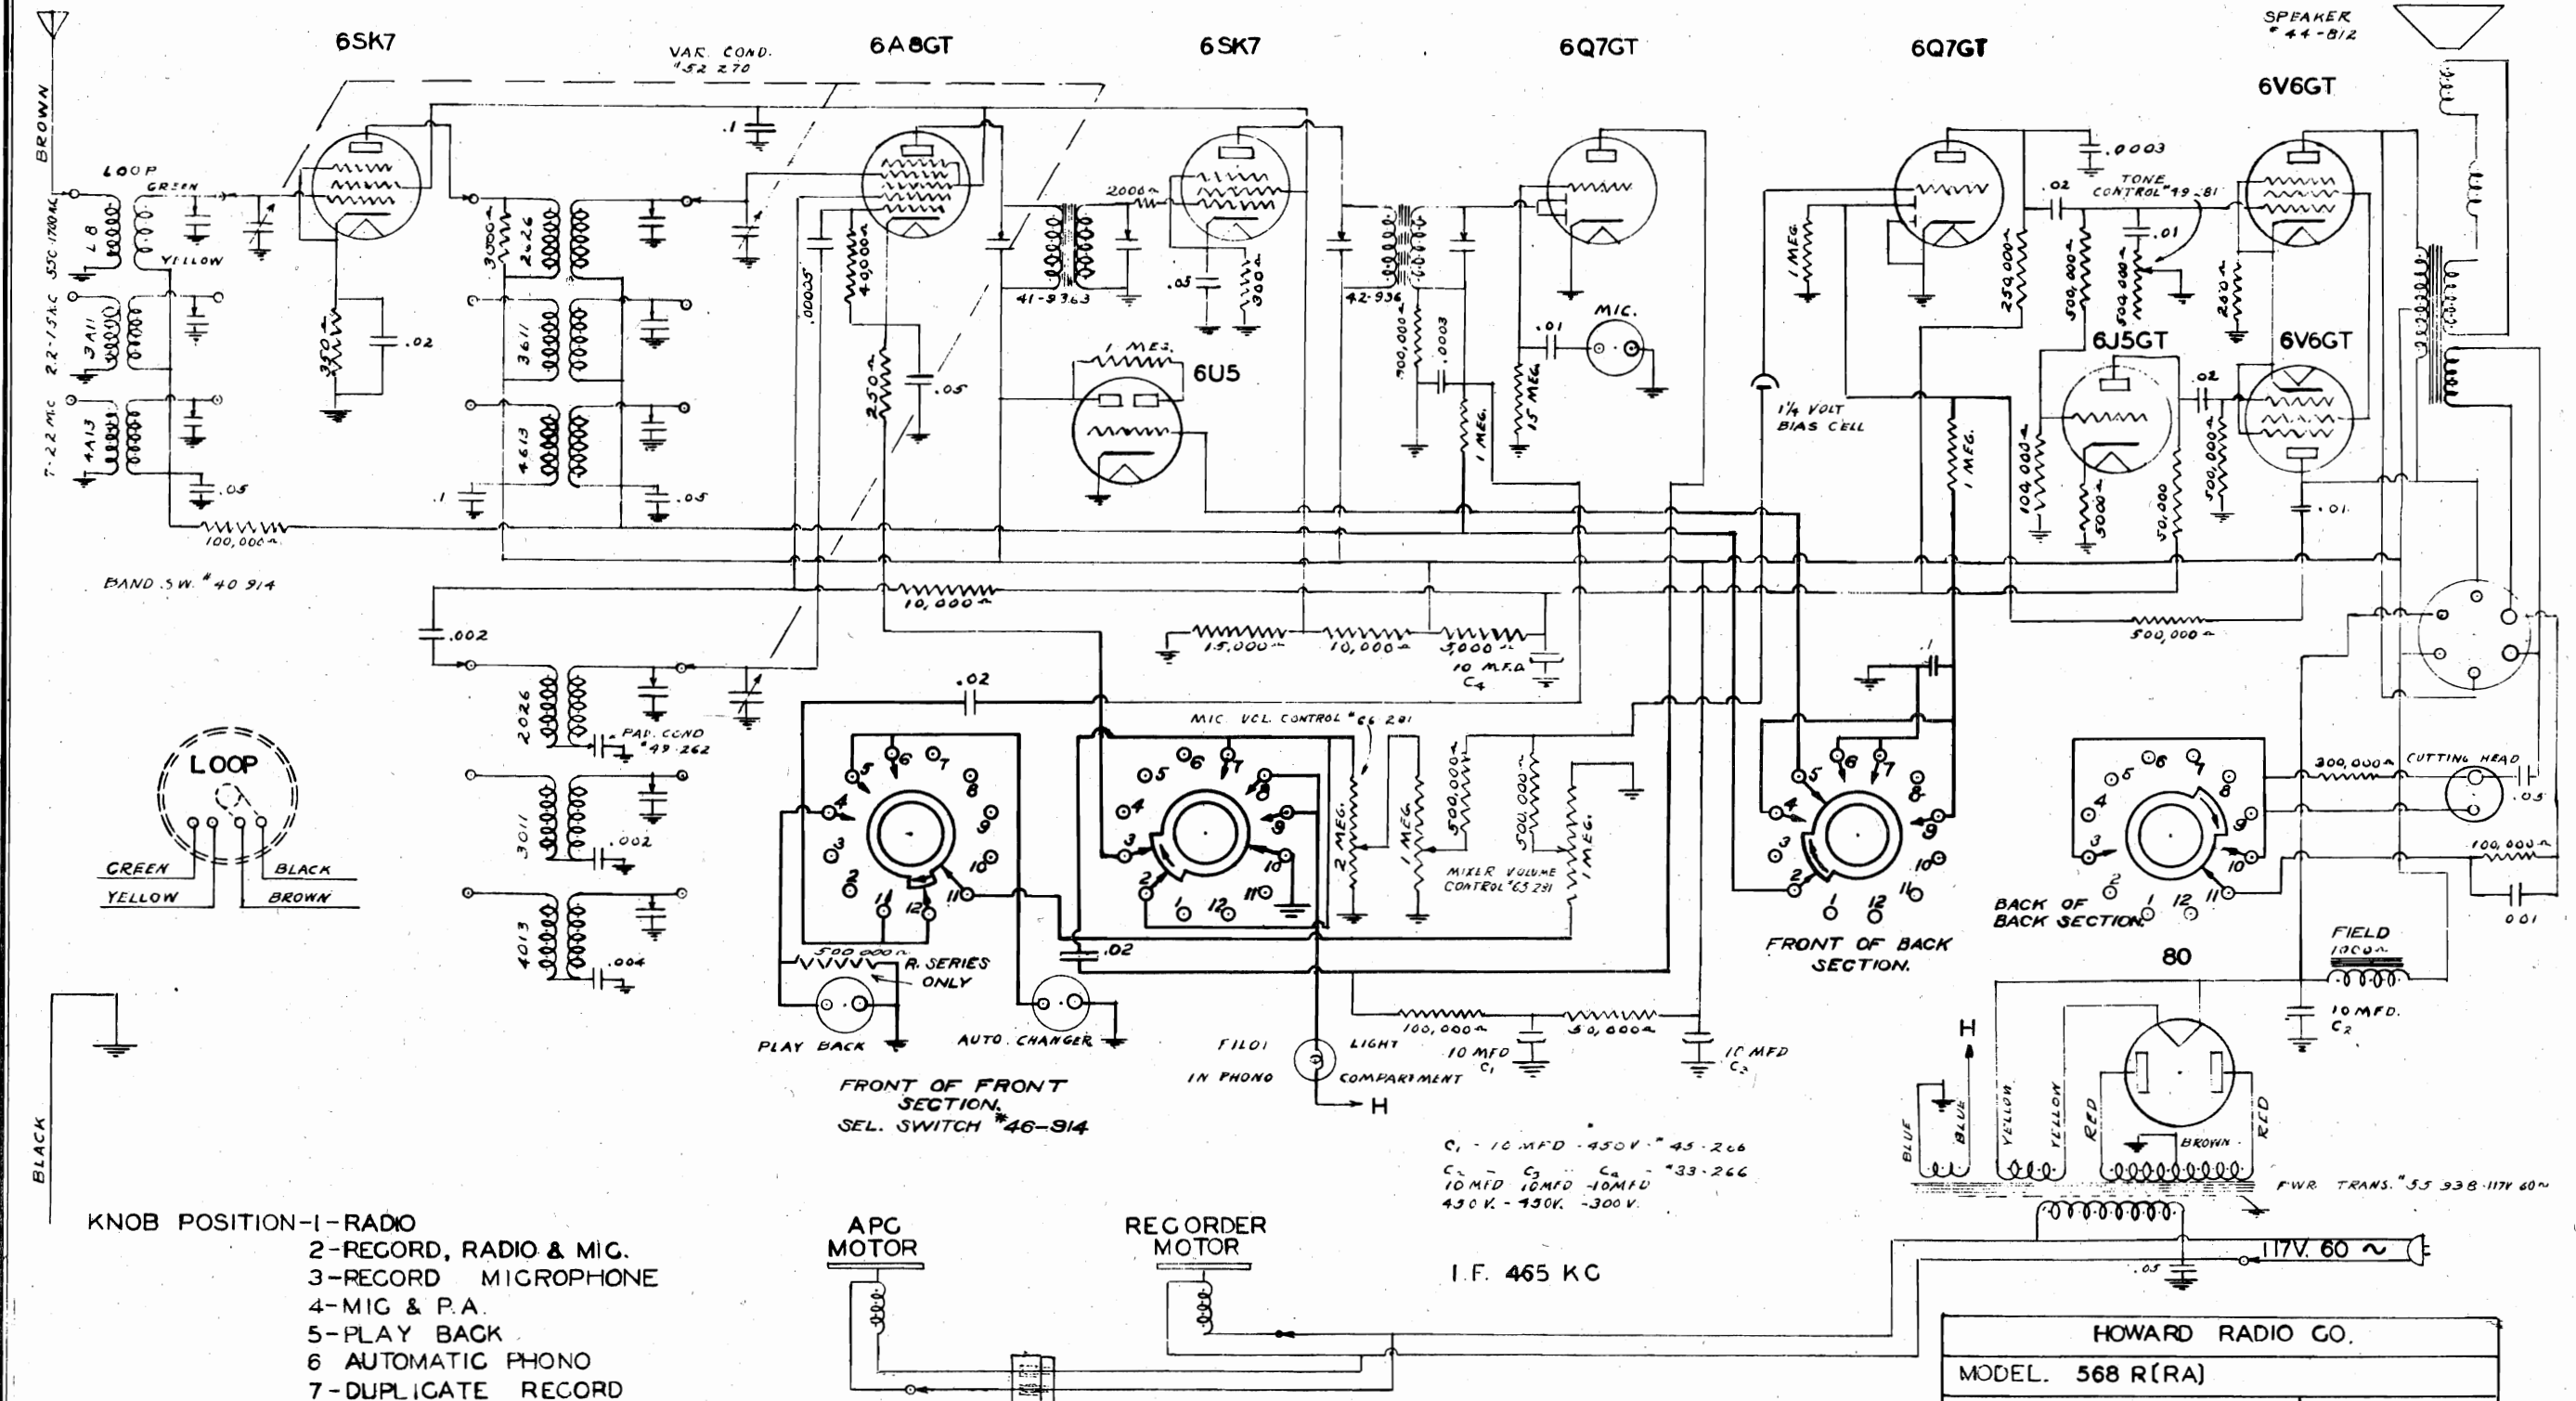

- LOOP POSITION-1-RADIO
 2-RECORD, RADIO & MIC.
 3-RECORD MICROPHONE
 4-MIG & P.A.
 5-PLAY BACK
 6 AUTOMATIC PHONO
 7-DUPLICATE RECORD

HOWARD RADIO CO.		
MODEL. 568 R(RA)		
DWG. NO. C73-715		
DWN. BY.	CHGKD. BY.	APPVD. BY
E. E. S.		


Alignment, Trimmers HOWARD RADIO CO. MODEL 575 Schematic, Voltage

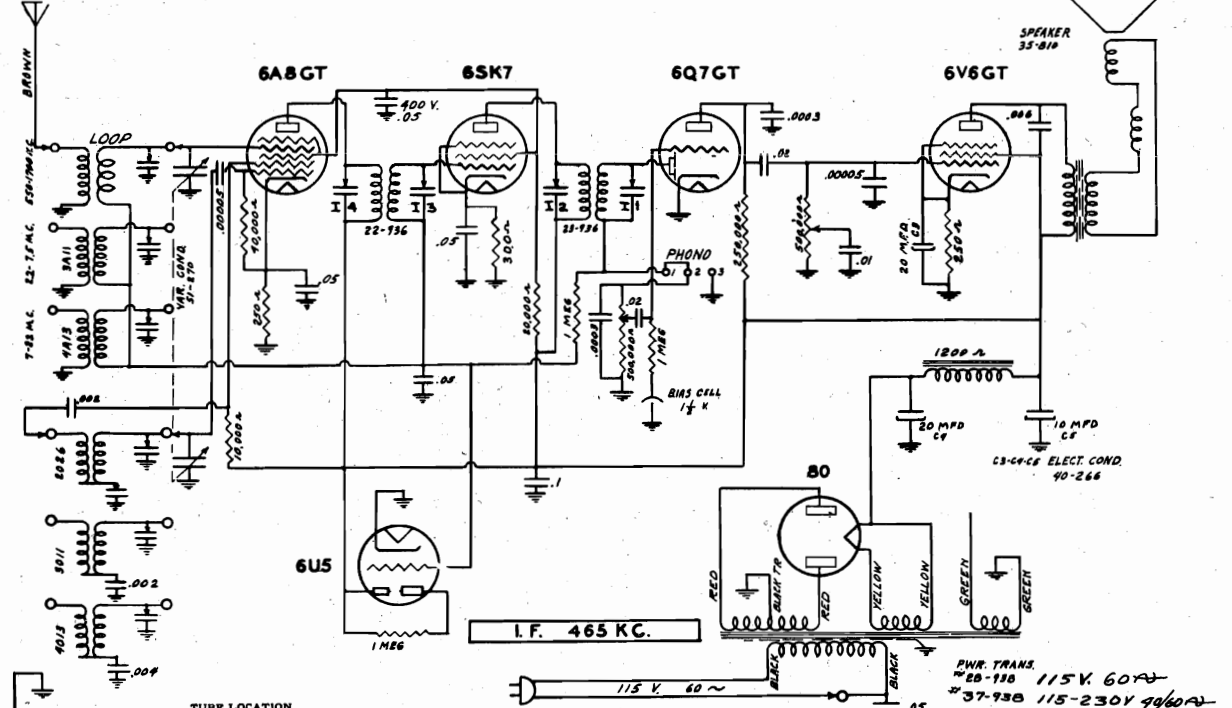

SPEAKER = Electro-dynamic
 SIZE = 6 1/2" V.C.IMP. (400CPS) = 4 Ohms FIELD = 1200 Ohms
 POWER SUPPLY - (Standard Models) = 105-120V. 60 Cycle
 CONSUMPTION 50 WATTS
 POWER OUTPUT - (MAX.) = 6W. upo 4W.


MODEL 575		
DWG. NO. D-59-715	7-25-39	
DWN. BY RM	CHKD. BY H	APPVD BY JBR

Tubes:
 6A8GT Converter | 6V6GT Output
 6SK7 I. F. Amp. | 6U5 Tuning Eye
 6Q7GT Det.-Audio | 80 Rectifier

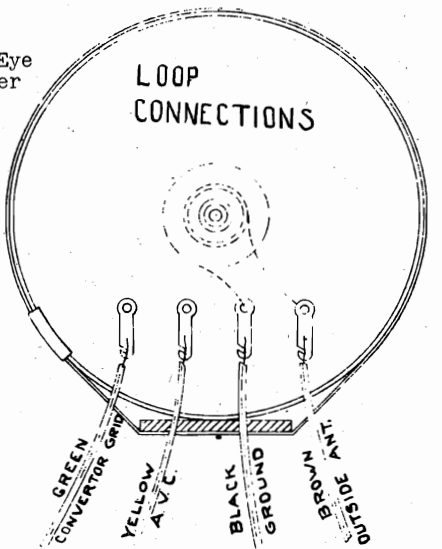


Wave-Band	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
BC	Min. Cap.	465 KC	6A8 Grid	A, E	I ₁ I ₂ I ₃ I ₄	IF
SW	18 MC	18 MC	Brown lead	B, D	O ₅ A ₆	Osc., Ant.
PB	6.5 MC	6.5 MC	Brown lead		O ₇ A ₈	Osc., Ant.
BC	1400 KC	1400 KC	Brown lead		O ₉ A ₁₀	Osc., Ant.
BC	600 KC	600 KC	Brown lead	C	P11	Osc., Pad.

NOTES
 A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.
 B- When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.
 C- When adjusting this pad, move the tuning hand back and forth and adjust padder until the peak of greatest intensity is obtained.
 D- See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.
 E- The following dummy antenna circuit is recommended, since it is adaptable for any frequency range. The grid cap should remain in place during alignment.




SOCKET VOLTAGE READINGS
 Voltage taken from ground with line voltage at -117 AC
 High voltage reading off rectifier - 320 V.
 Drop across speaker field - 80 V.
 Voltage taken with 1,000 Ohm per volt meter -


TUBE	FUNCTION	CATH. ODE.	GR. GRID	PLATE
6A8 GT	Mixer	3 1/2	107	235 OR 160
6SK7	IF	4	107	235
6Q7 GT	Det.	x	x	70
6V6 GT	Output	11	240	225

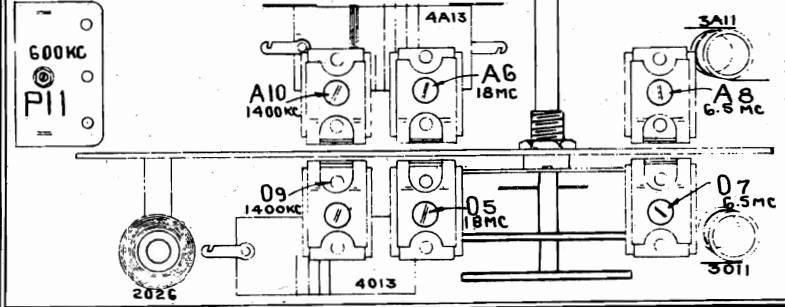


MODELS 580, 580C, 580ACP Schematic, Voltage, Socket Alignment, Trimmers Converter I. F. Amp. Det. - Audio HOWARD RADIO CO.

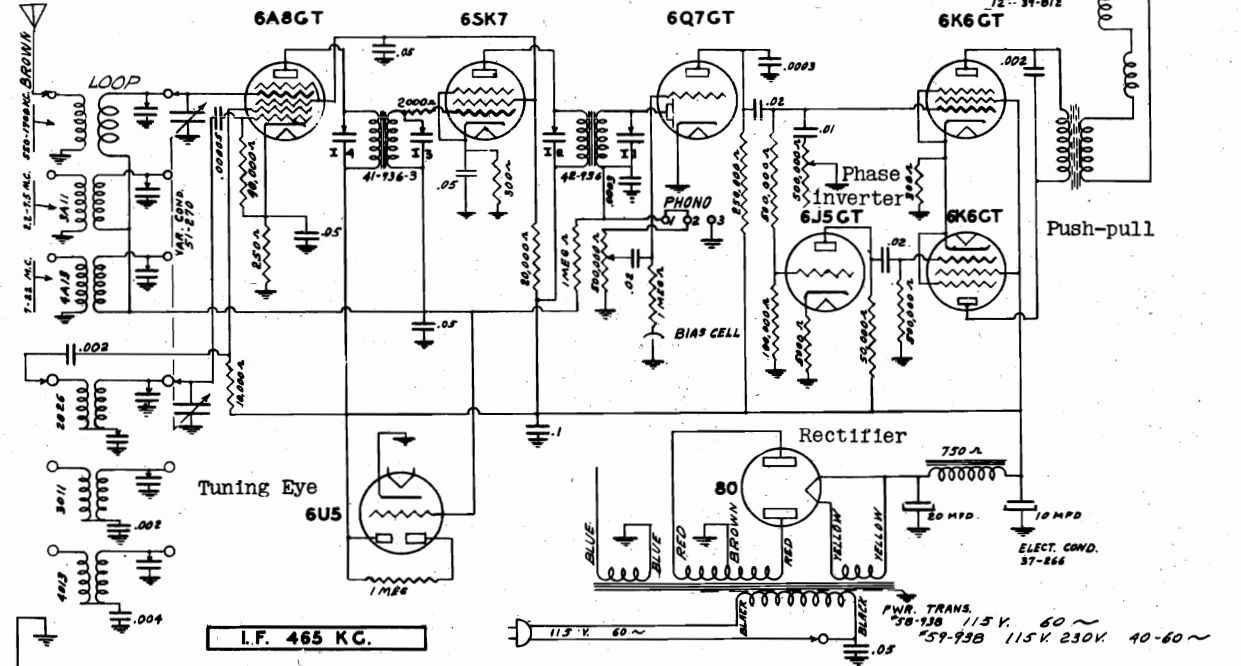

SPEAKER = Electro-dynamic SIZE = 8" & 12"
 V.C.IMP. (400CPS) = 4 Ohms FIELD = 750 Ohms
 POWER SUPPLY - (Standard Models) = 105-120 V. 60 Cycle
 CONSUMPTION 75 WATTS APC + 30
 POWER OUTPUT - (MAX.) = 7.5W upo 5
 NOTES

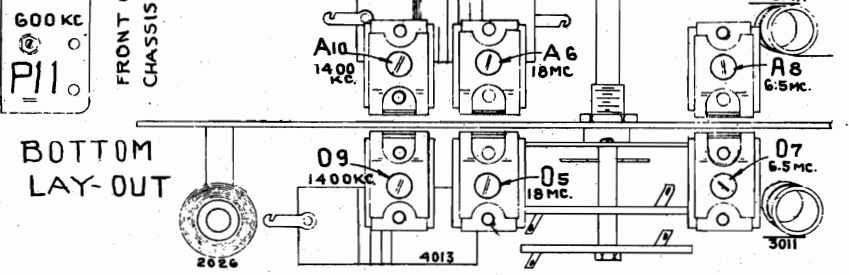


Wave-Band	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
BC	Min. Cap.	465 KC	6A8 Grid	A, E	I ₁ I ₂ I ₃ I ₄	IF
SW	18 MC	18 MC	Brown lead	B, D	O ₅ A ₆	Osc., Ant.
PB	6.5 MC	6.5 MC	Brown lead		O ₇ A ₈	Osc., Ant.
BC	1400 KC	1400 KC	Brown lead		O ₉ A ₁₀	Osc., Ant.
BC	600 KC	600 KC	Brown lead	C	P11	Osc., Pad.

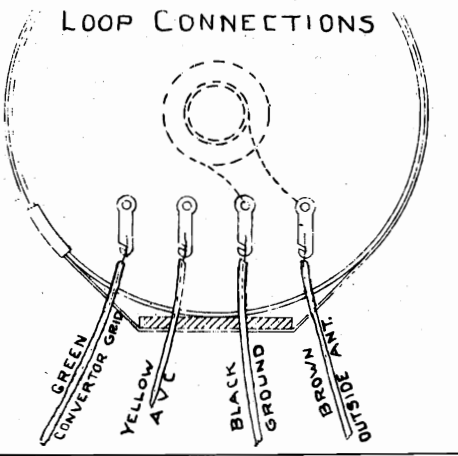

SOCKET VOLTAGE READINGS
 Voltage taken from ground with line voltage at -117 AC.
 High voltage reading off rectifier = 305 V.
 Drop across speaker field = 70 V.
 Voltage taken with 1,000 Ohm per volt meter -

TUBE	FUNCTION	CATH. ODE.	GR. GRID	PLATE
6A8 GT	Converter	4	110	235 OR 175
6SK7	IF	3 1/2	110	235
6Q7 GT	Det.	x	x	70
6K6 GT	Invert	8	x	140
6V6 GT	Output	18	235	225
6V6 GT	"	18	235	225

THE ADAPTATION OF THE SET FOR USE WITH PHONOGRAPH

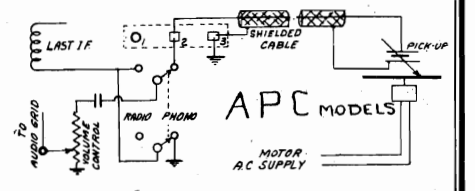

HUDSON MOTOR CAR CO.

MODEL DB39 Schematic, Voltage Socket

Output Maximum - 8.3 watts Undistorted - 5.5 W


6V6G OUTPUT

6R7G 2ND DET. A.V.C. A.F.

6K7G I.F.


6J7G 1ST DET. & OSC. R.F.

6K7G R.F.

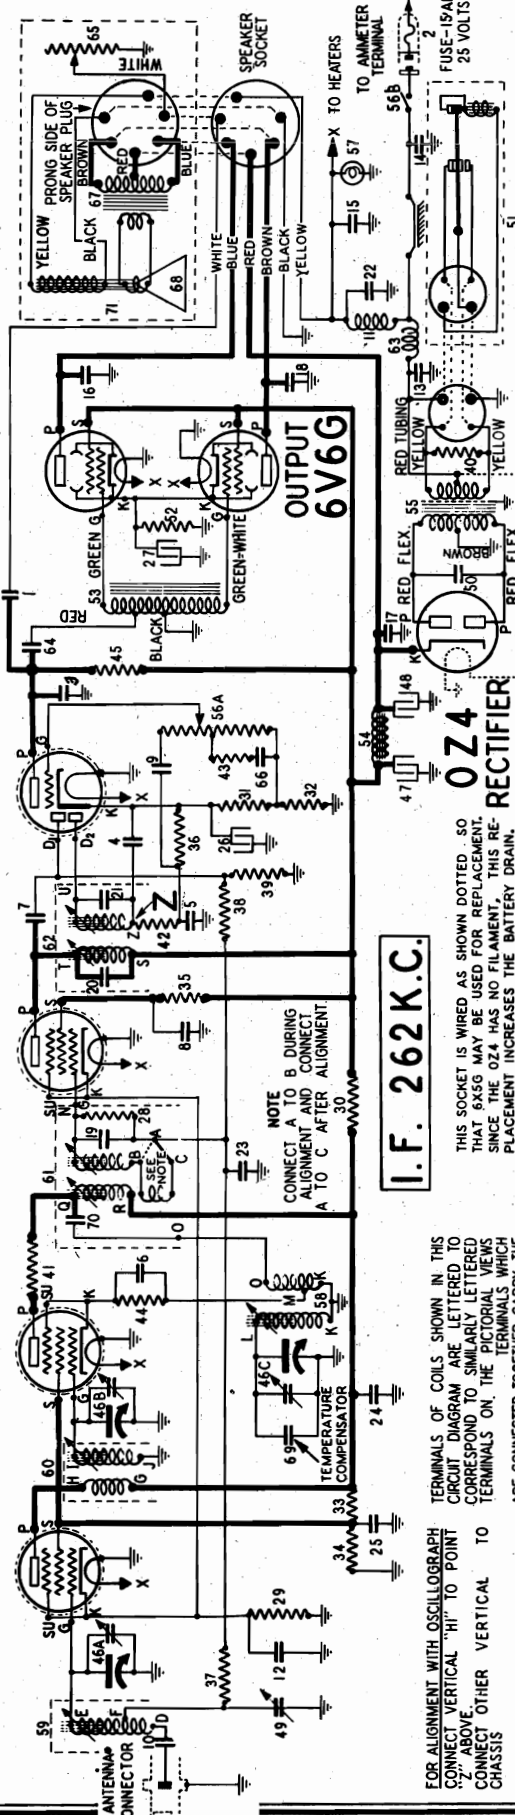

6 V. BATTERY VIBRATOR OZ4 RECTIFIER SPEAKER Y.C. IMP. 3.5-AT 4000 VIBRATOR FIELD RES. 5-Ω (COLD)

I.F. 262K.C.

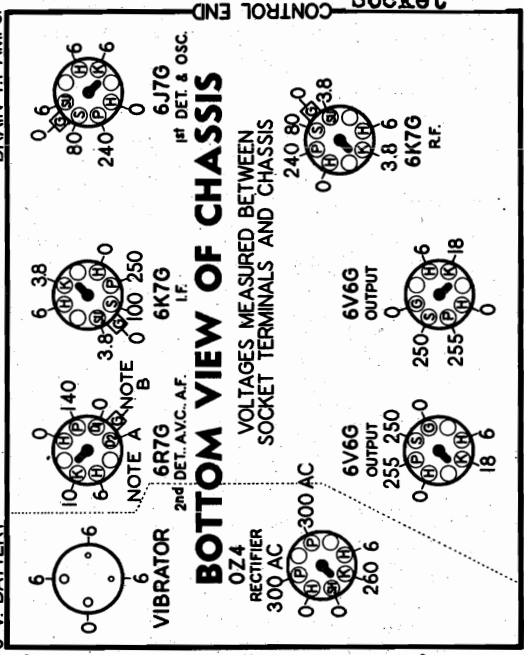

BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED BETWEEN SOCKET TERMINALS AND CHASSIS



Table with columns: DIAGRAM PART NUMBER, HUDSON PART NUMBER, DESCRIPTION. Lists components like resistors, capacitors, and transformers with their values and part numbers.

IMPORTANT - Use a high resistance voltmeter of at least 1000 ohms per volt. NOTE A: - Due to the high resistance in this circuit only a slight deflection of the voltmeter will be obtained. This voltage which is 10 volts is measured across the control grid of the 6R7G is 5 volts measured across resistor No. 32.

MODEL SA39

Schematic, Voltage Socket

HUDSON MOTOR CAR CO.

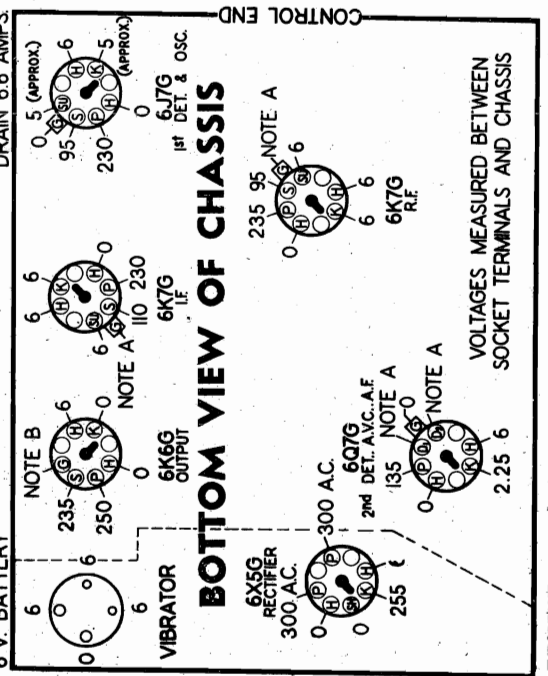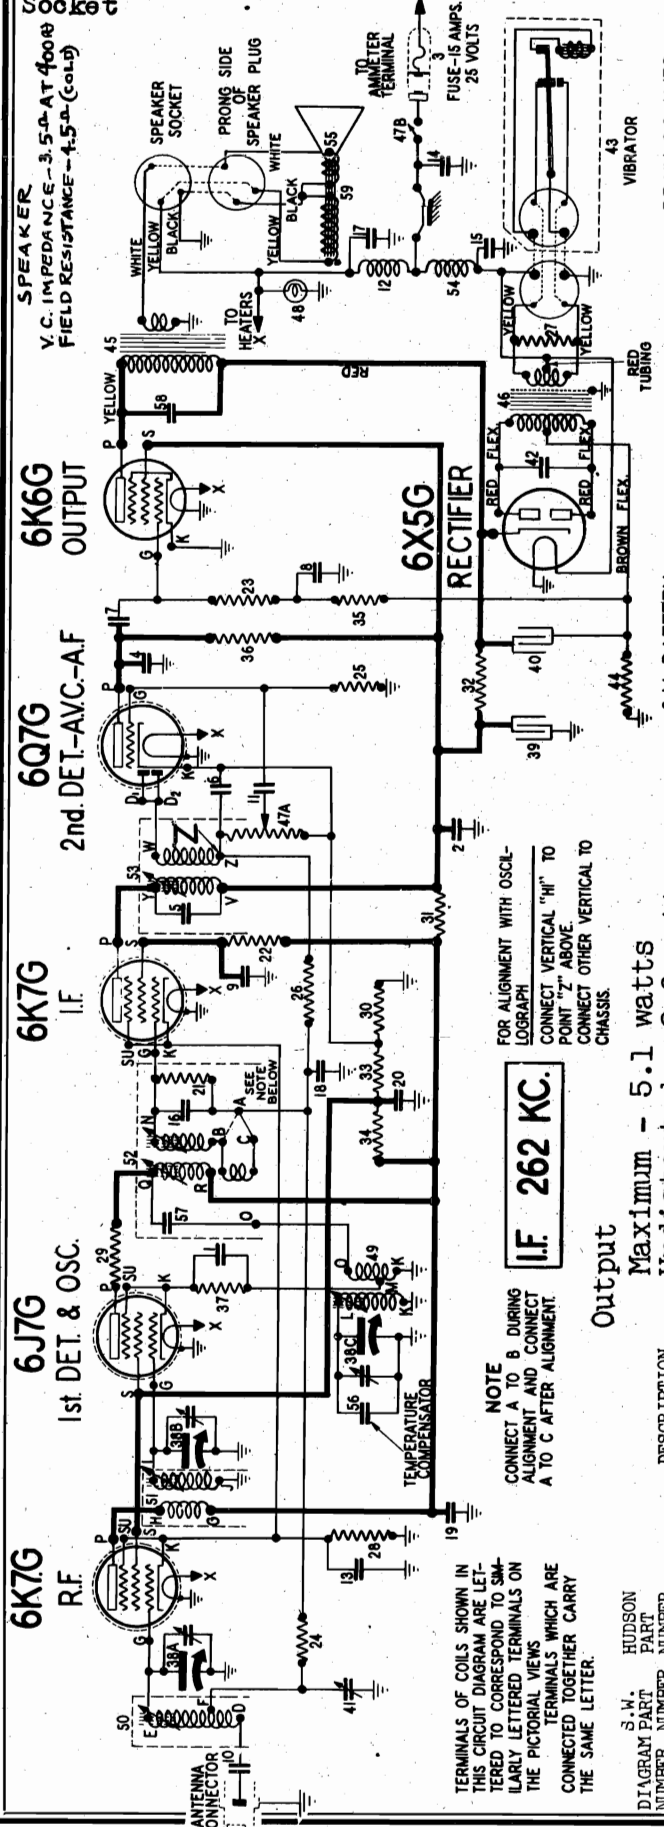

IMPORTANT: Use high resistance voltmeter of at least 1000 ohms/volt. NOTE A: The bias voltage on the grids of the 6K7G R.F.; 6K7G I.F. and the diode plates of the 6Q7G tube is 2.45 volts measured across resistor No. 30. NOTE B: The bias voltage on the grid of the 6K6G is -17 volts measured across resistor No. 44.

Output

Maximum - 5.1 watts
Undistorted - 2.6 watts

I.F. 262 KC.

NOTE: CONNECT A TO B DURING ALIGNMENT AND CONNECT A TO C AFTER ALIGNMENT.



FOR ALIGNMENT WITH OSCILLOGRAPH CONNECT VERTICAL "HI" TO POINT "T" ABOVE. CONNECT OTHER VERTICAL TO CHASSIS.

TERMINALS OF COILS SHOWN IN THIS CIRCUIT DIAGRAM ARE LETTERED TO CORRESPOND TO SIMILARLY LETTERED TERMINALS ON THE PICTORIAL VIEWS. TERMINALS WHICH ARE CONNECTED TOGETHER CARRY THE SAME LETTER.

DIAGRAM PART NUMBER	DESCRIPTION
1-2	81156 BO-158445--Condenser - mica .001 mfd.
3	8207 BO-158496--Fuse 15 amp. 25 volt
4	57E3 BO-158448--Cond.-mica, 110 mmfd. (10%)
5	2223 BO-158444--Cond.-mica, 110 mmfd. (5%)
6	25394 BO-158467--Condenser - mica 500 mmfd.
7-C-9	2202 BO-158451--Condenser - .02 mfd. 400V.
10-11	86030 BO-158452--Condenser - .02 mfd. 400V.
12	81183 BO-158499--"A" choke coil (short)
13	81195 BO-158453--Condenser - .25 mfd. 150V.
14-15	81195 BO-158454--Condenser - .5 mfd. 150 V.
16	86283 BO-158444--Cond.-110 mmfd. mica (5%)
17	86298 BO-158456--Condenser - .25 mfd. 150V.
18	86534 BO-158457--Condenser - .05 mfd. 150V.
19	86682 BO-158458--Condenser - .1 mfd. 400 V.
20	89421 BO-158459--Condenser - .1 mfd. 200 V.
21	110591 BO-158494--Resistor - carb. 860,000 ohms 1/4 watt
22	112969 BO-158475--Resistor - insulated 100,000 ohms 1/4 W. (10%)
23-24	112971 BO-158477--Resistor - insulated 470,000 ohms 1/4 watt
25	112972 BO-158478--Resistor - insulated 1 meg. 1/4 watt
26	112973 BO-158479--Resistor - insulated 1.5 meg. 1/4 watt
27	112976 BO-158480--Resistor - wire wound 220 ohms 1/2 watt (10%)
28-29	112977 BO-158481--Resistor - insulated 470 ohms 1/2 watt (10%)
30	112979 BO-158482--Resistor - insulated 800 ohms 1/2 watt (10%)
31	112980 BO-158483--Resistor - insulated 1000 ohms 1/4 watt
32	112981 BO-158484--Resistor - insulated 1500 ohms 1/2 watt
33	112983 BO-158486--Resistor - insulated 33,000 ohms 1/2 W. (10%)
34	112984 BO-158487--Resistor - insulated 33,000 ohms 2 W. (10%)
35	112985 BO-158488--Resistor - insulated 58,000 ohms 1/4 watt
36	112987 BO-158489--Resistor - insulated 220,000 ohms 1/4 watt
37	112989 BO-158491--Resistor - carbon 9,500 ohms 1/4 watt (10%)
38A to C	114243 BO-158464--Condenser - variable gang
39-40	114258 BO-158461--Cond.-elect. 8 mfd. 450 V.
41	114259 BO-158462--Condenser - padding
42	114277 BO-158463--Condenser - oil filled .01 mfd. 2000 volts
43	114300 BO-158505--Vibrator
44	114304 BO-158492--Resistor -360 oh. 2 W. (10%)
45	114348 BO-158506--Transformer - output
46	114354 BO-158509--Transformer - power
47A - 47B	114364 BO-158531--Vol. Cont. (500,000 ohms) flex. shaft & switch
48	114401 BO-158537--Dial lamp - 6 volt
49	114404 BO-158511--Oscillator coil
50	114406 BO-158512--Antenna coil
51	114410 BO-158513--R. F. Coil
52	114411 BO-158514--Transformer - 1st I.F.
53	114413 BO-158515--Transformer - 2nd I.F.
54	114435 BO-158517--"A" choke coil (long)
55	R-114487 BO-158545--Cone - voice coil assembly for R-115023 speaker
56	114499 BO-158489--Condenser-temp.comp.-.050.
57	114523 BO-158443--Cond.-mica 300 mmfd. 5%
58	114526 BO-158468--Condenser - .005 mfd. 600V.
59	R-115023 BO-158548--Speaker-dynamic (6 inch) (for Deluxe Model SA-39)

HUDSON MOTOR CAR CO.

MODEL DB39
MODEL SA39
Alignment, Trimmers
Socket, Coils

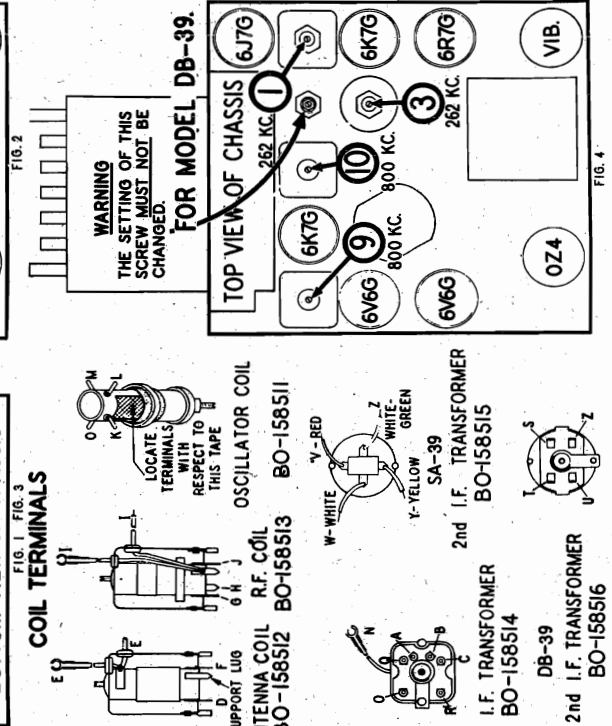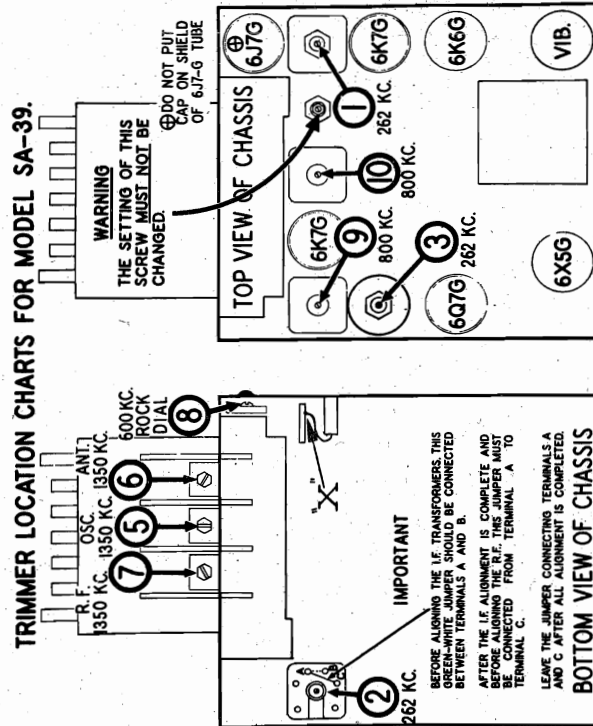


ALIGNMENT PROCEDURE
THIS MATERIAL APPLIES TO BOTH MODELS SA-39 AND DB-39 UNLESS OTHERWISE INDICATED BY NOTES BELOW.

TO PROPERLY ALIGN THESE RECEIVERS IT IS ESSENTIAL THAT YOU FOLLOW THIS PROCEDURE EXACTLY. BEFORE ALIGNING THE I.F. TRANSFORMERS THE GREEN-WHITE JUMPER LOCATED UNDER THE FIRST I.F. TRANSFORMER MUST BE CONNECTED AS SHOWN IN FIGURES 2 AND 4 OTHERWISE ALIGNMENT WILL BE INCORRECT. AFTER ALIGNING THE I.F. TRANSFORMERS, TRANSFER THE GREEN-WHITE JUMPER LOCATED UNDER THE FIRST I.F. TRANSFORMER TO ITS ORIGINAL POSITION.

- 1- Connect the output meter across the speaker voice coil or across the antenna coil and chassis in series with a .1 mfd. condenser. NOTE: - The more sensitive type of meter should be connected across the voice coil.
- 2- Connect the ground lead of the signal generator to the receiver chassis and leave it connected in this manner throughout the entire alignment procedure.
- 3- Turn the volume control to the maximum volume position.
- 4- With the Sine condenser in full mesh, set the pointer to the end of the calibration slot on the low frequency end of the dial scale. This can be done by loosening the set screw in the dial cord drive drum. (See "K" in figure 5 on page 11) holding the gage condenser in full mesh and turning the drum until the pointer is correctly set. Then retighten the set screw in the dial drum.

DUMMY ANT. IN SERIES WITH SIGNAL GENERATOR	CONNECTION TO SIGNAL GENERATOR	SIGNAL GENERATOR FREQUENCY	RECEIVER DIAL SETTING	TRIMMER NUMBER	TRIMMER DESCRIPTION	TYPE OF ADJUSTMENT
0.1 MFD CONDENSER	CONTROL GRID OF 6V7G TUBE	262 KC.	ANT. POINT DOES NOT AFFECT THE SIGNAL	1-2 3-4	1ST I. F. 2ND I. F.	IMPORTANT: CHANGE JUMPER ON BOTTOM OF TRIMMER. CONNECT GREEN-WHITE JUMPER BETWEEN TERMINALS A & B INSTEAD OF A & C. (SEE FIGURE 5 ON PAGE 11) FOR MAXIMUM OUTPUT. THEN REPEAT ADJUSTMENT. (TRIMMER NO. 4 IN MODEL DB-39 ONLY)
CONNECT A 125 MFD. MICA CONDENSER TO THE END OF THE SIGNAL GENERATOR LEAD. THIS CONDENSER SHOULD BE CONNECTED TO POINT "K" AS SHOWN IN FIGURES 1 OR 3 ON PAGE 9.		1350 KC.	1350 KC.	5	OSCILLATOR (SHUNT CONDENSER)	IMPORTANT: CHANGE JUMPER ON BOTTOM OF TRIMMER. CONNECT GREEN-WHITE JUMPER BETWEEN TERMINALS A & C INSTEAD OF A & B. (SEE TRIMMER LOCATION CHART ON PAGE 9) ADJUST TRIMMER TO BRING IN SIGNAL.
SAME AS ABOVE		1350 KC.	TUNE TO 1350 KC. GENERATOR SIGNAL	6 7	ANTENNA CONDENSER (SHUNT CONDENSER) R. F. (SHUNT CONDENSER)	ADJUST FOR MAXIMUM OUTPUT.
SAME AS ABOVE		600 KC.	TUNE TO 600 KC. GENERATOR SIGNAL	8	ANTENNA CONDENSER (SERIES CONDENSER)	ADJUST FOR MAXIMUM OUTPUT. TRY TO INCREASE OUTPUT BY DETUNING TRIMMER AND RETURNING RECEIVER DIAL UNTIL MAXIMUM OUTPUT IS OBTAINED.
SAME AS ABOVE		800 KC.	TUNE TO 800 KC. GENERATOR SIGNAL	9 10	ANTENNA (IRON CORE) R. F. (IRON CORE)	ADJUST FOR MAXIMUM OUTPUT.
SAME AS ABOVE		1350 KC.	TUNE TO 1350 KC. GENERATOR SIGNAL	6 7	ANTENNA CONDENSER R. F. (SHUNT CONDENSER)	ADJUST FOR MAXIMUM OUTPUT.
SAME AS ABOVE		600 KC.	TUNE TO 600 KC. GENERATOR SIGNAL	8	ANTENNA CONDENSER (SERIES CONDENSER)	ADJUST FOR MAXIMUM OUTPUT. TRY TO INCREASE OUTPUT BY DETUNING TRIMMER AND RETURNING RECEIVER DIAL UNTIL MAXIMUM OUTPUT IS OBTAINED.


AFTER THE SET IS INSTALLED IN THE CAR, TUNE IN A FAIRLY WEAK STATION NEAR 600 KC. AND ADJUST TRIMMER 8 FOR MAXIMUM OUTPUT.

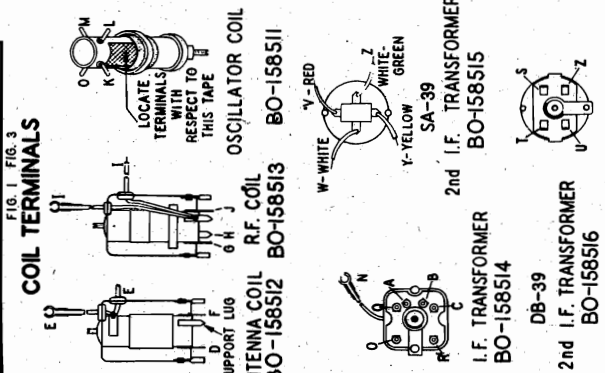


MODEL DB39
MODEL SA39
Chassis Wiring

HUDSON MOTOR CAR CO.

MODEL SA-39

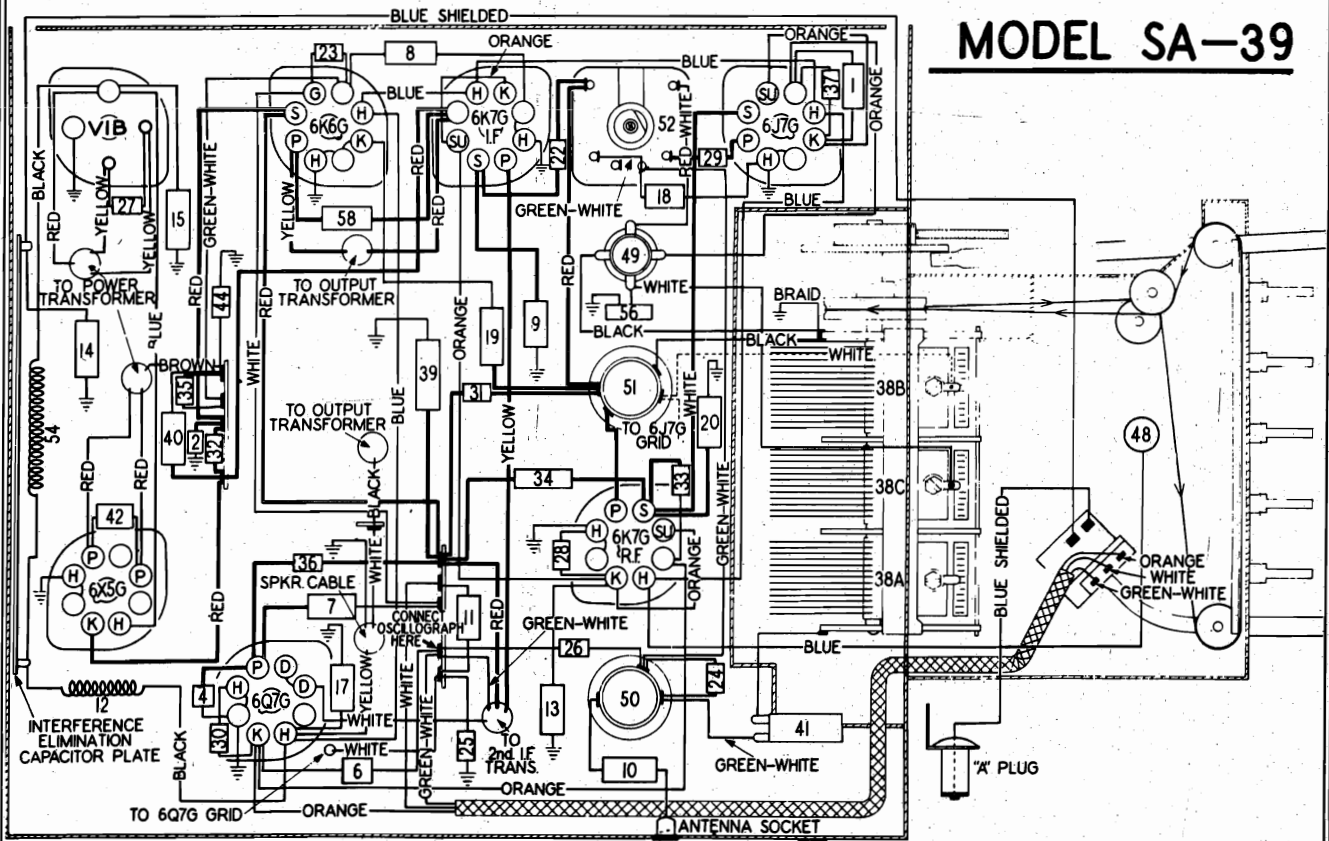

MODEL DB-39

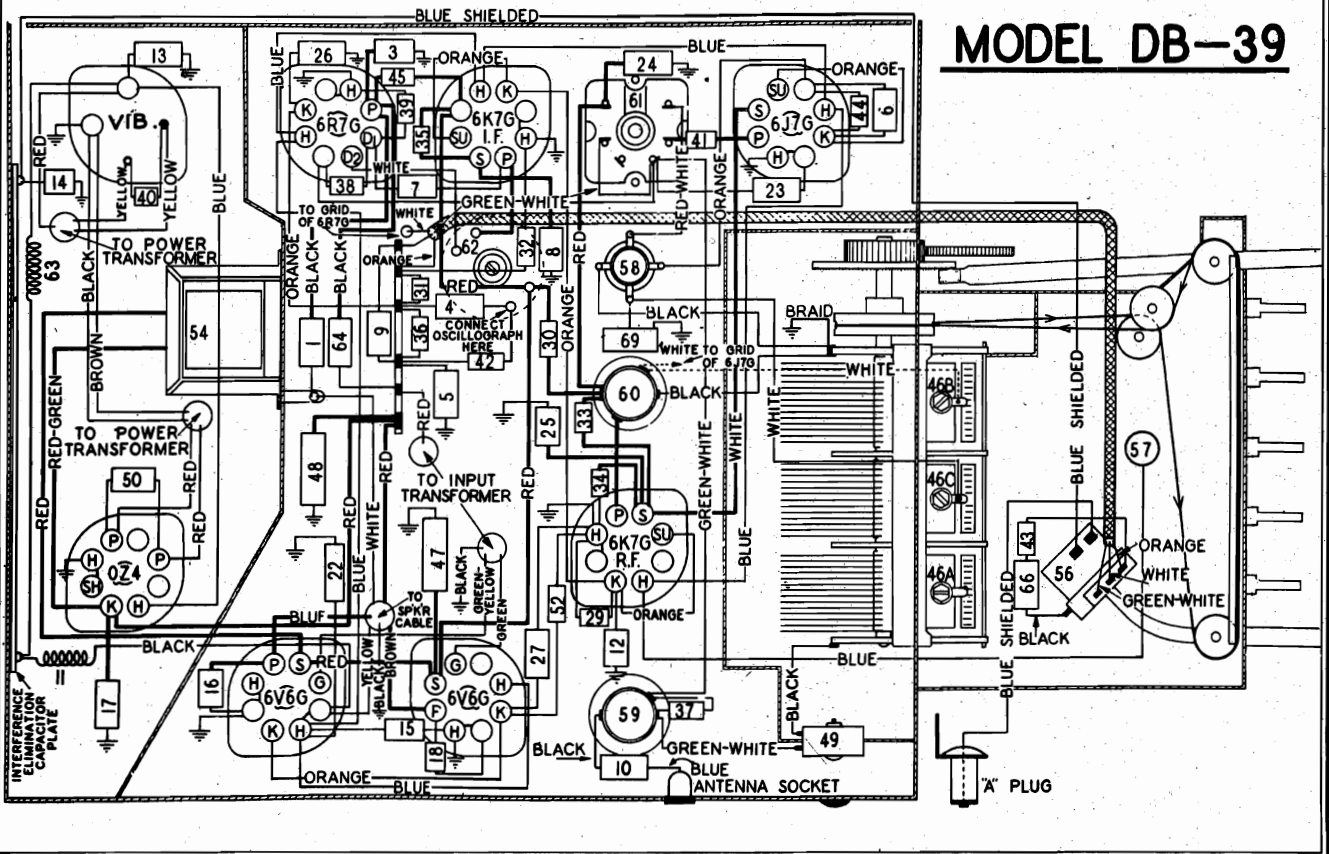

HUDSON MOTOR CAR CO.

MODEL DB39
MODEL SA39
Dial and Tuner
Data, Notes

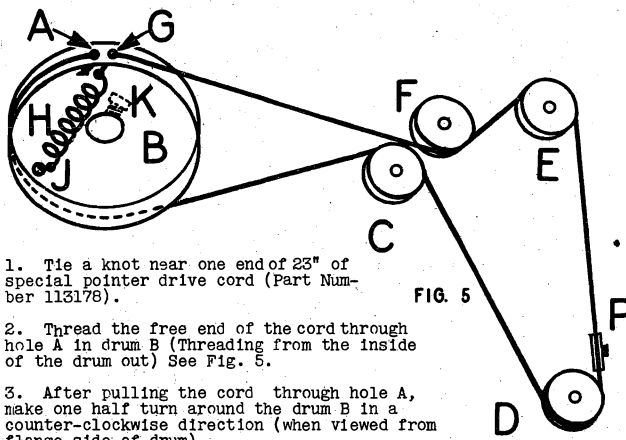
ADDITIONAL SERVICE DATA**HOW TO REPLACE THE DIAL POINTER DRIVE CORD**

FIG. 5

1. Tie a knot near one end of 23" of special pointer drive cord (Part Number 113178).
2. Thread the free end of the cord through hole A in drum B (Threading from the inside of the drum out) See Fig. 5.
3. After pulling the cord through hole A, make one half turn around the drum B in a counter-clockwise direction (when viewed from flange side of drum).
4. Continuing, draw the cord over to the back of pulley C and around to pulley D. From this point continue across to pulley E and around to pulley F.
5. Go around pulley F and up to the top of drum B to hole G.
6. Draw the cord through hole G and tie it to the end of tension spring H in such a manner that when the spring is clipped to lug J, the spring will be extended to approximately 7/8 inch.

HOW TO SET UP THE PUSH BUTTONS.

To set up the push buttons, proceed as follows:

1. Turn on the set and allow it to operate for at least one-quarter hour before attempting to set up the push buttons.
2. Select the five stations to which the buttons are to be set. Be sure to select nearby, powerful stations, since weak signals will generally give better results when tuned in manually. Any button may be set to any desired station.
3. Grasp the tuning knob and pull it out, (outward movement is slight, about 1/8 inch) so that the drive pinion engages the condenser drive gear and the set may be tuned manually.
4. Tune in the station to which you wish to set the particular button. Be sure to tune in the station correctly by TUNING TO THE POINT WHERE THE PROGRAM IS HEARD WITH THE LEAST HISS OR DISTORTION, AND NOT TO THE POINT OF GREATEST VOLUME.
5. Grasp the push button being set up, and turn it to the left (counter-clockwise) about one whole turn.
6. Push this button all the way in, and keeping it pushed in, turn right (clockwise) until reasonably tight.
7. Set up the remaining four buttons in a similar manner.
8. Label each button with the call letters of the stations you have selected, using the call letter tabs and celluloid covers packed with your receiver. Insert the call letter tab in the recess in the push button, and cover it with the celluloid tab.
9. To use your push button tuner, first push in the tuning knob. Then push in the button labelled with the call letters of the desired station. Be sure to push the button all the way in.

AUDIO OSCILLATION IN MODEL DB-39 RECEIVER.

Occasionally audio oscillation or howl may be encountered in this model. This is caused by an audio voltage being fed back to the audio section of receiver from the speaker cord. The remedy is to locate the speaker cord away from the 6R7-G and 6V6-G tubes, holding it in place with a rubber band if necessary.

INCORRECT TUNING OF PUSH BUTTONS

Occasionally a receiver may be found which will not tune-in stations accurately when push button tuning is used. The causes and remedies for this are as follows:

1. Push buttons incorrectly set-up. Remedy: Reset the button to the desired station being sure to tune in the station carefully.
2. Extreme sharpness of tuning of the receiver. Remedy: The green-white jumper wire on the bottom of the 1st I. F. transformer may be improperly connected. The correct connection for normal operation of the receiver is shown in Fig. 1 (Terminals A and C should be connected together).

LOW SENSITIVITY

Low sensitivity may be due to improper adjustment of the antenna compensator, trimmer #8 (see alignment procedure page). This trimmer is accessible without removing the set from the car. When the readjustment of the compensator is necessary, care should be taken that the antenna, if of the under-car type, is clean and free of accumulation of mud or slush which would alter its capacity and lower its resistance. In such cases, the antenna and its insulators should be washed, and preferably, allowed to dry before making adjustment. Doing this sharpens the tuning of the compensator and makes possible an accurate setting.

FAILURE OF RECEIVER TO OPERATE

Failure of the receiver to operate may be due to one or more causes. When a receiver is found in such condition, its parts should be checked as follows:

1-FUSE

The fuse may be burned out or making poor contact. In cases of burnout, replace with another 15 Ampere fuse. If second fuse fails, remove receiver from car and investigate condition of vibrator and receiver circuits. DO NOT USE A HIGHER RATING FUSE.

2-TUBES

Unfasten the trunk clamps holding the speaker case cover. This will enable you to reach the tubes. Check to see that all tubes are in their proper sockets. One or more tubes may be defective. To determine their condition, remove them from the receiver and test with a tube tester, or if a tube tester is not available, replace the tubes, one at a time, with tubes known to be good, until the defective tube is located.

3-VIBRATOR

Improper operation of the vibrator is usually evidenced by one of the following symptoms: Receiver blows fuses, receiver is dead or weak, reception is intermittent, reception is noisy and unsteady. To check the vibrator, replace the suspected unit with a new vibrator. Do not attempt to adjust the defective unit.

4-CIRCUIT

Failures within the basic circuits of the receiver may be isolated by a systematic test procedure. The receiver should be removed from the car and placed where it will be readily accessible. The top cover and speaker case cover should be removed from the case. The defect in the receiver can then be located by means of continuity, voltage, or stage analysis, using a signal generator.

When checking the receiver, using a signal generator, a signal is fed progressively into the I. F. and R. F. stages of the receiver, until the defective stage is located, and a continuity or voltage check may then be given that stage to isolate the defective unit or circuit.

ADJUSTMENT OF IRON CORES IN COILS.

The Antenna, R. F., and Oscillator coils have adjustable iron cores. Any adjustment of these cores will necessarily change the inductance of the coils and therefore extreme caution must be exercised where adjustment becomes necessary. THE CORE OF THE OSCILLATOR COIL MUST NOT BE ADJUSTED AT ANY TIME. The correct method of adjusting the R. F. and antenna coil cores is adequately covered under "Alignment Instructions".

MODEL SA 40

Schematic, Voltage

HUDSON MOTOR CAR CO.
Output

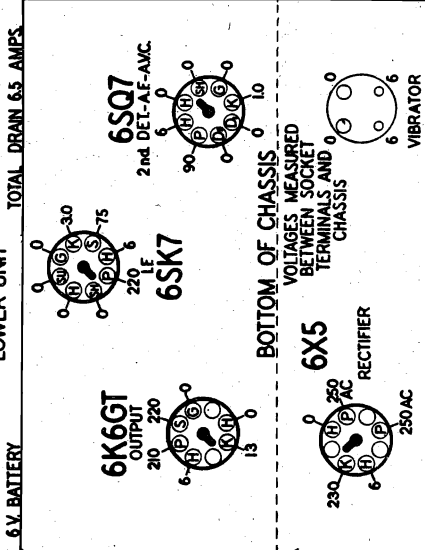
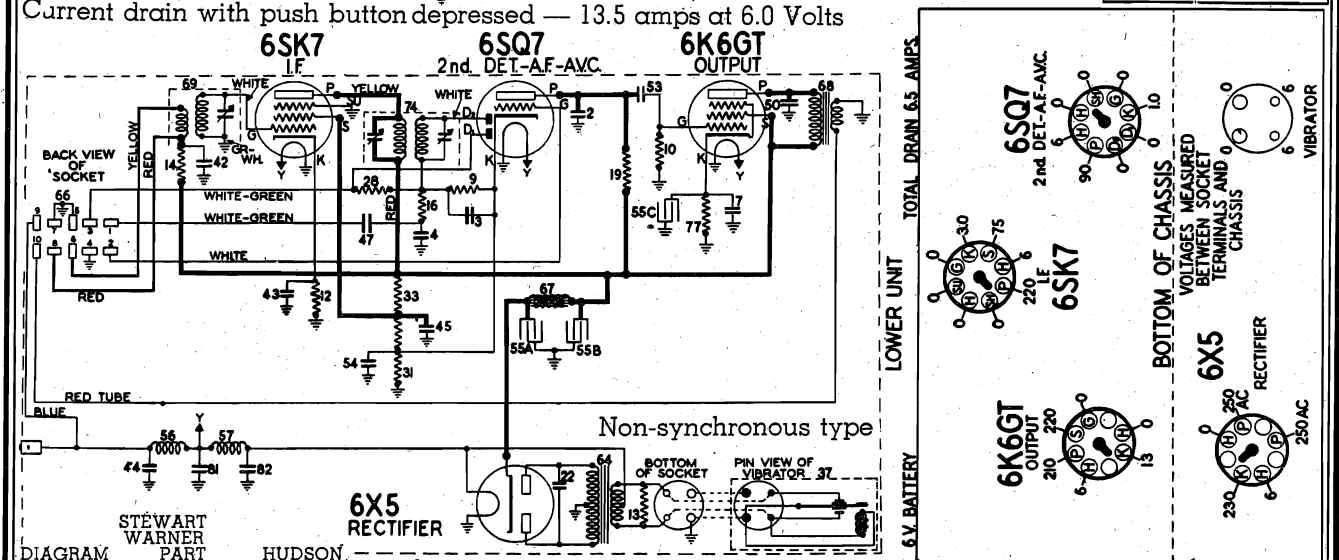
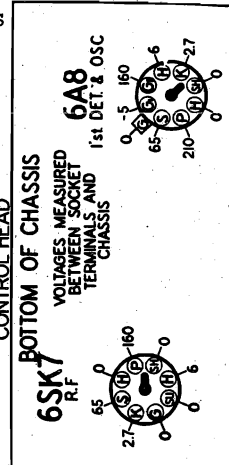
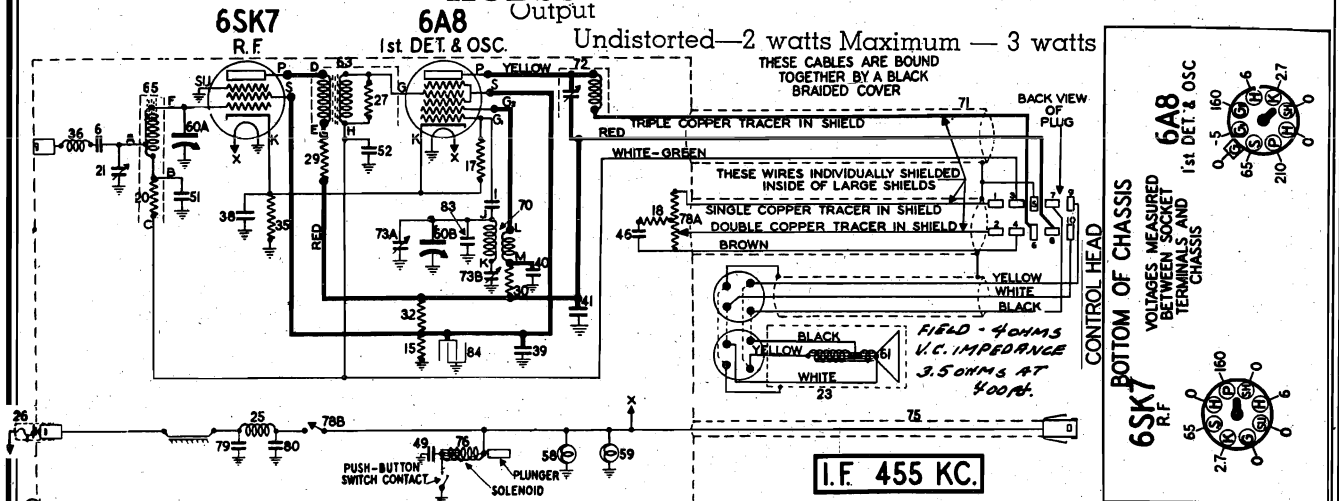


DIAGRAM NUMBER	PART NUMBER	HUDSON PART NUMBER	DESCRIPTION
1-2	83539	BO-158447	Condenser - mica 260 mmfd.
3-4	83783	BO-158448	Condenser - mica 110 mmfd.
6-7	88205	BO-158455	Condenser - mica 2100 mmfd.
9	112970	BO-158478	Resistor - 330,000 ohms 1/4 W.
10	112971	BO-158477	Resistor - 470,000 ohms 1/4 W.
12	112977	BO-158481	Resistor - 470 ohms 1/4 W.
13	112976	BO-158480	Resistor - 220 ohms 1/2 W.
14	112980	BO-158483	Resistor - 1000 ohms 1/4 W.
15-16	112986	BO-161476	Resistor - 100,000 ohms 1/4 W.
17-19	112987	BO-158489	Resistor - 220,000 ohms 1/4 W.
18	118210	BO-161490	Resistor - 50,000 ohms 1/4 W.
20	112993	BO-161477	Resistor - 470,000 ohms 1/10 W.
21	113468	BO-161460	Condenser - trimmer
22	114277	BO-158463	Condenser - .01 mfd. 2000 V.
23	U-115072	BO-161558	Speaker - 6" dynamic
25	116035	BO-161492	Choke coil - "A" supply lead
26	116049	BO-170420	Fuse - 20 amps 25 volts
27	116052	BO-161478	Resistor - 33,000 ohms 1/10 W.
28	116090	BO-161485	Resistor - 3.3 meg. 1/4 W.
29	116073	BO-161480	Resistor - 10,000 ohms 1/2 W.
30	116074	BO-161481	Resistor - 22,000 ohms 1 W.
31-35	116078	BO-161482	Resistor - 560 ohms 1/4 W.
32-33	116087	BO-161483	Resistor - 47,000 ohms 1 W.
34	116089	BO-161484	Resistor - 47,000 ohms 1/2 W.
36	118726	BO-161580	Antenna motor noise choke.
37	116202	BO-161493	Vibrator
38 to 45 inc.	116625	BO-161461	Condenser - 1 mfd. 600 V.
46-47	116640	BO-161462	Condenser - .01 mfd. 600 V.
49	116647	BO-161463	Condenser - .004 mfd. 600 V.
50	117571	BO-161469	Condenser - .008 mfd. 600 V.
51-52	116819	BO-161465	Condenser - .05 mfd. 600 V.
53	116893	BO-161466	Condenser - .02 mfd. 600 V.
54	117022	BO-161467	Condenser - .002 mfd. 600 V.
55A to 55C	117314	BO-161468	Condenser - electrolytic Section A - 10 mfd. 450 V. Section B - 10 mfd. 450 V. Section C - 10 mfd. 35 V.
56-57	117332	BO-161495	"A" choke
58-59	117499	BO-71550	Dial lamp - mazda No. 55
60A-60B	117883	BO-161470	Condenser - variable tuning
61	U-118205	BO-161563	Cone and Voice coil for U-115072 speaker
63	117919	BO-161498	Transformer - R.F.
64	117923	BO-161499	Transformer - power
65	117939	BO-161500	Coil - antenna
66	117944	BO-161501	Socket - 10 contact
67	117952	BO-161502	Filter choke
68	117979	BO-161507	Transformer - output
69	117972	BO-161505	Transformer - 1st I.F. (lower unit)
70	117975	BO-161506	Coil - oscillator
71	118001	BO-161508	Cable and Plug assembly (10 terminals)
72	118113	BO-161509	Transformer - 1st I.F. (control unit)
73A-73B	118117	BO-161471	Condenser - 2 section - oscillator trimmer & padder
74	118118	BO-161510	Transformer - 2nd I.F.
75	118140	BO-161511	"A" cable connecting units
76	118143	BO-161528	Magnet (coil only)
77	118126	BO-161487	Resistor - 500 ohms 1 Watt
78A-78B	118216	BO-161513	Volume control with switch
79-80-81-82	118225	BO-161473	Condenser - .5 mfd. 600 V.
83	118332	BO-161474	Condenser - temperature compensating
84	118485	BO-161475	Condenser - 4 mfd. 200 V. electrolytic

HUDSON MOTOR CAR CO.

MODEL DB40
MODEL SA40
Alignment, Trimmers
Changes, Notes

ALIGNMENT PROCEDURE

- For alignment an output meter and accurately calibrated signal generator are required.
1. Connect the output meter across the voice coil or between the plate of the output tube and chassis in series with a .1 mfd. condenser. The more sensitive type of meter should be connected across the voice coil.
 2. Remove only the top cover of the lower unit and the bottom cover of the voice coil.
 3. Connect the ground lead of the signal generator to the receiver chassis and leave it connected in this manner through the entire alignment procedure.
 4. Turn the volume control to maximum volume position and leave it throughout the entire alignment procedure.

TRIMMER NUMBER	TRIMMER DESCRIPTION	RECEIVER DIAL SETTING	SIGNAL GENERATOR FREQUENCY	CONNECTION OF SIGNAL OUTPUT TO RECEIVER	TYPE OF ADJUSTMENT
1-2	2nd I.F. LOWER UNIT	ANY POINT WHERE IT DOES NOT AFFECT THE SIGNAL	485 KC.	CONTROL GRID OF 6A8	ADJUST FOR MAXIMUM OUTPUT. THEN REPEAT ADJUSTMENT.
3	1st I.F. LOWER UNIT				
4	1st I.F. CONT. UNIT				
5	OSCILLATOR CONDENSER	SET SO THAT SIGNAL IS ENTIRELY OUT OF MESH	1580 KC.	ANTENNA CONNECTION ON SET	CAREFULLY ADJUST FOR MAXIMUM OUTPUT.
6	ANTENNA CONDENSER UNDER PLUG BUTTON ON END OF CONTROL UNIT	ACCURATELY TUNE TO 1400 KC. GENERATOR SIGNAL	1400 KC.	ANTENNA CONNECTION ON SET	ADJUST FOR MAXIMUM OUTPUT.
7	OSCILLATOR CONDENSER (SERIES)	TUNE TO GENERATOR SIGNAL	600 KC.	ANTENNA CONNECTION ON SET	ADJUST FOR MAXIMUM OUTPUT. TRY TO INCREASE OUTPUT BY DETUNING TRIMMER AND RETURNING RECEIVER DIAL.

Now repeat adjustments made on trimmer numbers 5, 6 and 7.

After the set has been installed in the car, tune in a fairly weak station near 1400 KC. and adjust trimmer No. 6 under the plug button on the end of the control unit until maximum volume is obtained.

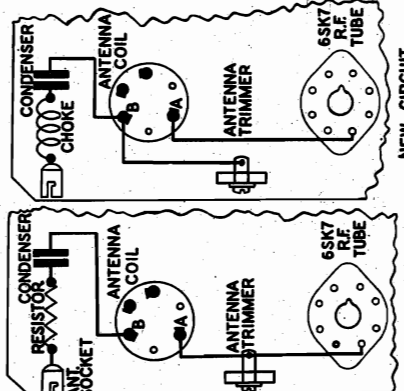
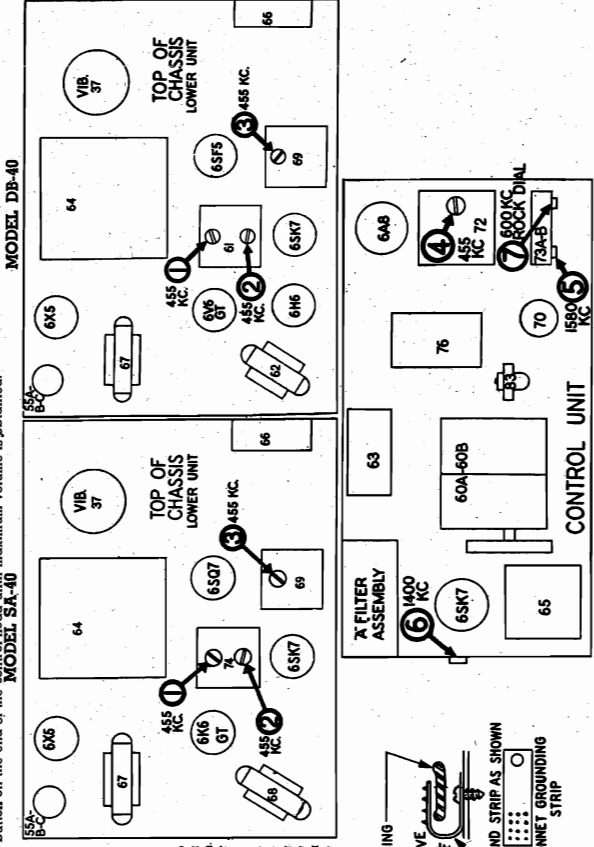


FIG. 1. Diagram illustrating Recommended Antenna Circuit Changes

Disconnect this wire from the antenna coil terminal and from the trimmer terminal. Slip a piece of spaghetti tubing over this wire and re-connect it to the same lug on the antenna coil. (Marked A in Figure 1.)

Connect the trimmer condenser to the antenna coil terminal nearest the corner of the chassis. (Marked B in Figure 1.) This is the terminal to which the antenna series mica condenser connects.

Replace the antenna socket using the two mounting screws.

Solder the choke to the terminals from which you removed the resistor (see Fig. 1).

Check to see that the wiring of the unit has not been pushed over so as to interfere with the dial drive cord.

After this change is made, it is absolutely essential to realign the antenna trimmer. This must be done with a signal generator and an 80 mfd. condenser in series with the antenna lead and the signal generator. If any other capacity is used, adjustment will be incorrect.

The antenna trimmer can and should be aligned to the regular car aerial. To do this we suggest connecting the radio in the car so it will operate but without mounting the antenna lead and the signal generator. Tune in a weak station near 1400 kc. on the dial and adjust the antenna trimmer for maximum volume.

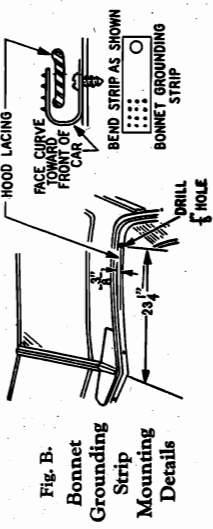


Fig. B. Bonnet Grounding Strip Mounting Details

LOW SENSITIVITY

In cases of low sensitivity not traceable to weak tubes or defective parts, check the setting of the antenna trimmer. If the set has been aligned using any dummy antenna other than the 80 mfd. condenser recommended, the setting of this condenser will be off considerably. In all cases, the antenna should be adjusted to the regular car aerial. Do not mount the antenna trimmer and place it in some accessible place. Tune in a weak station, near 1400 KC, remove the plug button covering the antenna trimmer from the case, and adjust this trimmer for maximum volume.

REPLACING TUBES IN CONTROL HEAD

1. Remove the two Phillips screws at the bottom of the instrument panel grill. Lift out the grill.
2. Remove the four machine screws holding the speaker plate.
3. Insert a screwdriver blade in the slot in the front of the control unit and pry off the lower cover. This will give access to the 6A8 and 6SK7 tubes.

HUM

A possible source of hum difficult to trace, is caused when the lower end of the volume control accidentally becomes grounded in the control unit, in addition to the ground which is made in the lower radio unit. Removing the accidental ground in the control head will clear up this difficulty.

IGNITION NOISE

If ignition noise is excessive, first make sure the installation man has performed all the operations described in paragraphs 20 and 21.

Additional bonnet grounding strips (Stewart-Warner Part No. 118718, Hudson Part No. BO-181417) may be helpful in further reducing ignition interference. The best location for these can be determined by grounding the hood to the body at various points with a knife. If the grounding strip is located at a point 10 1/2 inches from the center of the car, install an additional strip at a point 23 1/2 inches from the center as shown in Fig. B.

INSTALLATION OF ANTENNA CHOKE

The antenna noise choke (Stewart-Warner Part No. 118726, Hudson Part No. BO-181580) is a single layer choke coil wound on a ceramic body which looks like an insulated resistor. It is to be installed inside the control unit in place of the resistor connected in series with the antenna lead on early sets. Later sets already have the choke.

Remove the top cover of the control unit. Check whether the antenna trimmer is a choke wound on a resistor body. (See Fig. 1.) If it is a choke wound on a resistor body, the change has already been made. If you find a plain, insulated resistor connected to a terminal lug to which the blue wire from the antenna socket is connected, proceed with the change. This resistor has a value of 88 ohms and can be identified by its blue body grey end and black dot. Remove the resistor.

Remove the two screws holding the antenna socket to the case. The antenna trimmer must now be connected to a different terminal on the antenna coil. The antenna trimmer is the wire runs from the antenna coil terminal A, through the top trimmer lug to the control grid of the 6SK7 tube.

MODEL DB40

MODEL SA40

Tuner Adjustments, Notes

HUDSON MOTOR CAR CO.


HOW THE "FEATHERTOUCH TUNER" OPERATES

OPERATION OF CLUTCH AND DE-CLUTCH ARM

The clutch mechanism of this tuner (see Fig. 6) functions every time a push button is depressed. Its purpose is to disengage the tuner gears from the tuner gears from the automatic portion of the tuner when tuning electrically. The clutch is a dual unit, providing positive mechanical coupling between the manual tuning gears and the tuner gears and also with the leather friction disc which operates the contact plate. The clutch mechanism is designed to remove excessive backlash when tuning mechanically.

When the plunger is drawn into the magnet, turning the gathering bar shaft, the cam attached to the shaft (Fig. 6) exerts pressure on the de-clutch arm, which bears against the inside section of the clutch. When this pressure is released, the clutch return spring contracts, separating the two halves of the clutch, thus disengaging the manual tuning gears.

When the push button is again released, allowing the plunger to be withdrawn from the magnet, the gathering bar shaft moves upward on the de-clutch arm, and in turn on the clutch, thus engaging the two clutch sections, and making manual tuning possible.


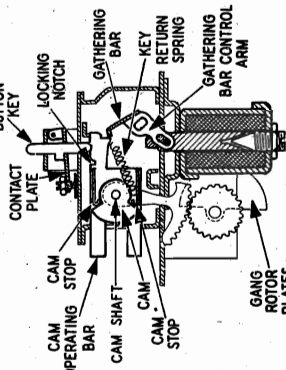


Refer to Fig. 3 and Fig. 4. When a push button is depressed, it makes mechanical contact with the cam operating bar. This causes the cam operating bar to move up so that the gathering bar can make contact with it. At the same time, the key forces the contact plate downward, making electrical contact through the contact screw. When the contact screw makes contact, it energizes the winding of the magnet assembly as shown in Fig. 4. The plunger is mechanically coupled to the gathering bar and gathering bar shaft, so that when the plunger is drawn into the magnet, it causes the gathering bar to move forward. This in turn engages the cam operating bar which is drawn forward by the push button key and drives it forward as shown in Fig. 4. This position of the cam operating bar is indicated by the ends of the cam operating bar extending from the mechanism forward. The cam stops attached to the bar, engage the cam, rotating it until it is in the position indicated in Fig. 4. The rotation of the cam causes the cam shaft and condenser to a position corresponding to the station to which this particular key is set.

HOW THE "LOCKING-UP" MECHANISM WORKS

The cam shaft assembly consists primarily of a shaft on which five cams are alternately spaced between friction collars. On the clutch end of this bar is a short threaded section upon which screws the collar which is part of the clutch and clutch spring assembly. When the cams are locked, this threaded collar is turned upon the threaded section of this cam shaft, exerting pressure upon the cams and friction collars, thus locking them securely in position. When the cams are unlocked, this threaded collar is turned so as to unscrew it and exert a minimum of pressure on the cams and friction collars. The only pressure then exerted upon the cams to hold them in position is that exerted by a spring. When the cam shaft is turned, the cam shaft and the cams are held so they cannot move of their own accord, but are still loose enough to permit them to be set to correspond to the desired station.

The threaded collar is connected through the clutch to the manual tuning control, permitting adjustment of the cams from outside the tuning unit.

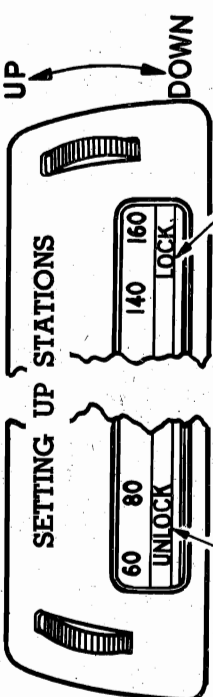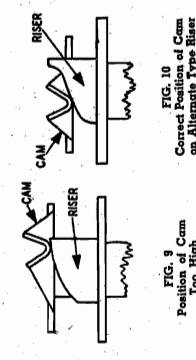


TO UNLOCK: Turn Manual Tuning Control UP about 70 to 100 strokes. Control will LOCK. After word LOCK appears, turn until control turns hard after turning CONTROL DOWN. THIS POINT IS REACHED.

TO LOCK: Turn Manual Tuning Control UP about 70 to 100 strokes. Control will LOCK. After word LOCK appears, turn until control turns hard after turning CONTROL DOWN. THIS POINT IS REACHED.

The unlocking operation begins AFTER the tuning control is turned to the point where the word UNLOCK appears. To complete the unlocking operation, the tuning control must be turned to the point where the word LOCK appears. When the tuning control is turned to the point where the word LOCK appears, but then it begins to turn quite easily. You must continue to turn it downwards until it again turns hard. Because of the high gear ratio, it may require 18 to 24 complete turns to turn it downwards until it again turns hard. Because of this control only a quarter of a turn at a time, it may require 70 to 100 strokes of the finger on the control to completely unlock the mechanism. The tuning control will NOT unlock until the mechanism is unlocked. However, even when the tuning control is unlocked, the tuning control will spring back when you take your finger off after turning it. At this point, the tuning indicator light will flash. THIS POSITION IS REACHED. DO NOT FORCE THE TUNING CONTROL FURTHER DOWN.

LOCKING TUNING MECHANISM
The locking action begins when you continue to turn the tuning control upwards after the word LOCK appears. The action is much the same as described under UNLOCKING. However, every time the tuning control is turned, the mechanism will lock.

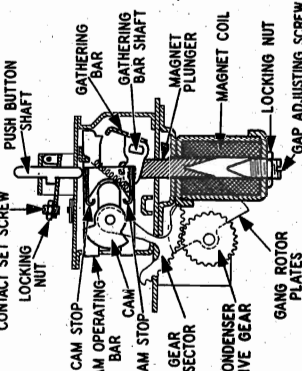

SETTING UP EARLY RADIOS
Some of the earliest radios produced require a slightly different set-up procedure than given above. This same procedure can be used on later sets though it is not necessary, unless the tuning mechanism, proceed as follows for each button:

1. Tune station in manually.
2. Now hold the manual tuning control and push the button to be set up several times.
3. After pushing and releasing button several times, hold button down and again tune station carefully by turning the manual tuning control back and forth slightly.
4. The essential difference between this procedure and the one given above is that the button is pushed and released several times in quick succession after desired station is tuned in but before final tuning adjustment is made.

UNLOCKING TUNING MECHANISM

In setting up this mechanism, you must understand the action of the control during locking and unlocking.

HOW TO SET UP PUSH BUTTONS

- (a) Operate set for about ten minutes before setting up buttons.
- (b) TO UNLOCK TUNING MECHANISM: Rotate right (tuning) control downwards until word UNLOCK shows at the left side of dial. Continue to turn until wheel stops. Then turn wheel upwards until word LOCK appears. A complete description of this procedure is given above under the heading "Unlocking Tuning Mechanism."
- (c) Tune in desired station with (tuning) control.
- (d) Hold down the button selected and move tuning control up and down leaving it in position where tone is deepest. Release button.
- (e) Follow same procedure for other buttons. **IMPORTANT:** After mechanism has been locked as in (d), it is necessary to reset it as in (c) and (d).
- (f) LOCK TUNING MECHANISM: Rotate tuning control upwards until word LOCK appears at right side of dial. Then turn wheel downwards until word UNLOCK appears. The tuning operation is also given above.
- (g) Insert station call letter tab in front of each button. The tabs are inserted by flexing them and allowing them to snap into place in the buttons.

In all cases where slipping clutches are reported, check to see that there is no excessive friction in the gang condenser dial or gang condenser drive gears. See section on "Binding."

MODEL DB40

MODEL SA40

Dial Drive Data

HUDSON MOTOR CAR CO.



REMOVING TUNING UNIT CHASSIS FROM CASE

1. Pry off bottom cover, utilizing screwdriver slot at front of case.
2. Remove four self-tapping screws holding down top cover and pry cover off.
3. Unsolder the blue wire extending from the on-off switch to the "A" choke assembly.
4. Remove two screws holding antenna receptacle to case. Also remove the screw holding down the cable grounding plate. Then remove four screws holding chassis assembly to case.
5. The entire tuning unit chassis can now be lifted from the case.

REMOVING TUNING MECHANISM FROM CHASSIS

1. Unsolder the green-white and the white wire from the gang condenser.
2. Unsolder brown cable wire from low end of volume control.
3. Unsolder gray rubber covered shielded wire (2 copper tracers) from center terminal of volume control.
4. Unsolder gray rubber covered shielded wire (1 copper tracer) from high end of volume control.
5. Unsolder blue wire from on-off switch on volume control. Also unsolder shielding from volume control bracket.
6. Unsolder 2 blue pilot light wires at 6A8 socket.
7. Unsolder ground of .05 mfd. condenser from frame of tuning mechanism. Mechanism can now be lifted out.

HOW TO REPLACE THE DIAL DRIVE CORD

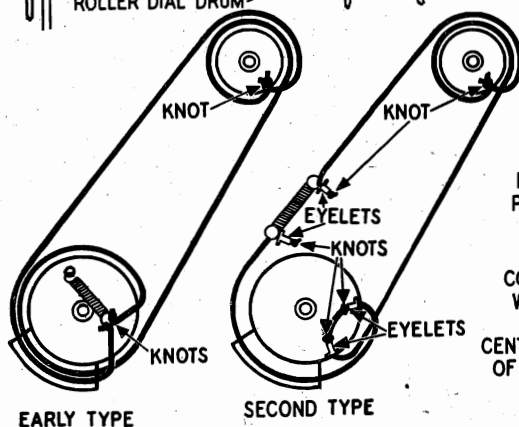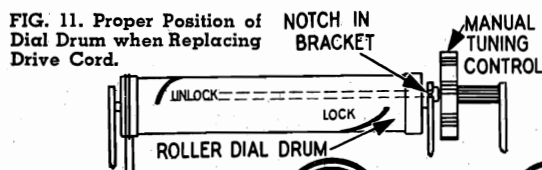

EARLY TYPE
FIG. 12
Early Type
Dial Drive System

SECOND TYPE
FIG. 13
Second Type
Dial Drive System

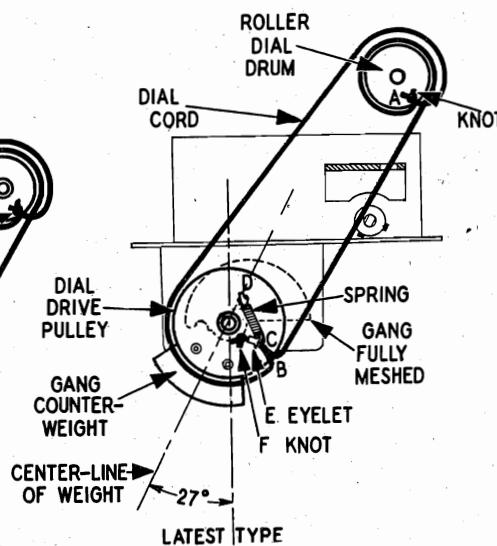


FIG. 14
Details of Latest Type
Dial Drive Systems

Three dial drive systems are illustrated here. The method marked "Second Type" (Fig. 13) can be used in sets originally using the "Early Type" (Fig. 12). The second type is preferable to the early type.


The method marked "Latest Type" (Fig. 14) is the best but uses a different Dial Drive Pulley. Therefore early type or second type drives **cannot** be restrung as shown for latest type unless a new Dial Drive Pulley (Stewart-Warner Part No. 118176, Hudson Part No. BO-161539) is installed.

The dial cord in the latest type dial drive can be replaced as follows:

1. Remove chassis from case as described on this page.
2. Remove the antenna coil shield can by removing the two nuts holding it to the chassis. This will give access to the dial drive drum.
3. Refer to Fig. 11. Rotate the dial so the word "UNLOCK" is directly in line with the reference notch in the right hand dial support bracket. Block the dial in this position, using a small block of rubber or other soft material which will not mar or damage the dial.
4. Rotate the gang condenser so its plates are fully meshed. (See Fig. 14.) Keep the gang in this position until the dial cord has been replaced.
5. About 26 inches of dial drive cord (Stewart-Warner Part No. 113178, Hudson Part No. BO-158521) are required. Tie a large knot in the center of this dial cord.
6. Pass both ends of the cord outward through hole A in the roller dial drum. (Fig. 14.)
7. Pass one end of the dial drive cord clockwise around the roller dial drum, through the hole in the support bracket and through hole B in the dial drive pulley.
8. Pass the other end of the cord counter-clockwise around the roller dial drum, counter-clockwise around the dial drive pulley and inward through hole B in the dial drive pulley.
9. At this point, make sure that the gang is fully meshed, that the counter-weight is in the proper position, and the dial is in the position shown in Fig. 11. Otherwise calibration will be incorrect.
10. Tie a spring to the ends of the dial drive cord inside the dial drive pulley so that the cord extends about $\frac{3}{8}$ inch inside the pulley when the cord is pulled taut. See Fig. 14. This illustration shows the recommended method of fastening the spring using an eyelet. Fasten the other end of the spring to the tab D on the pulley. The spring should be stretched only very slightly when in place. Too much spring tension may cause binding.
11. Remove the material used to hold the dial in position as described in Step 2. If the above procedure has been followed, the calibration of the dial will be correct when the unit is replaced in the case.

LAFAYETTE RADIO MFG. CO.


MODEL C-10 Late
Schematic, Voltage
Alignment, Socket
Trimmers

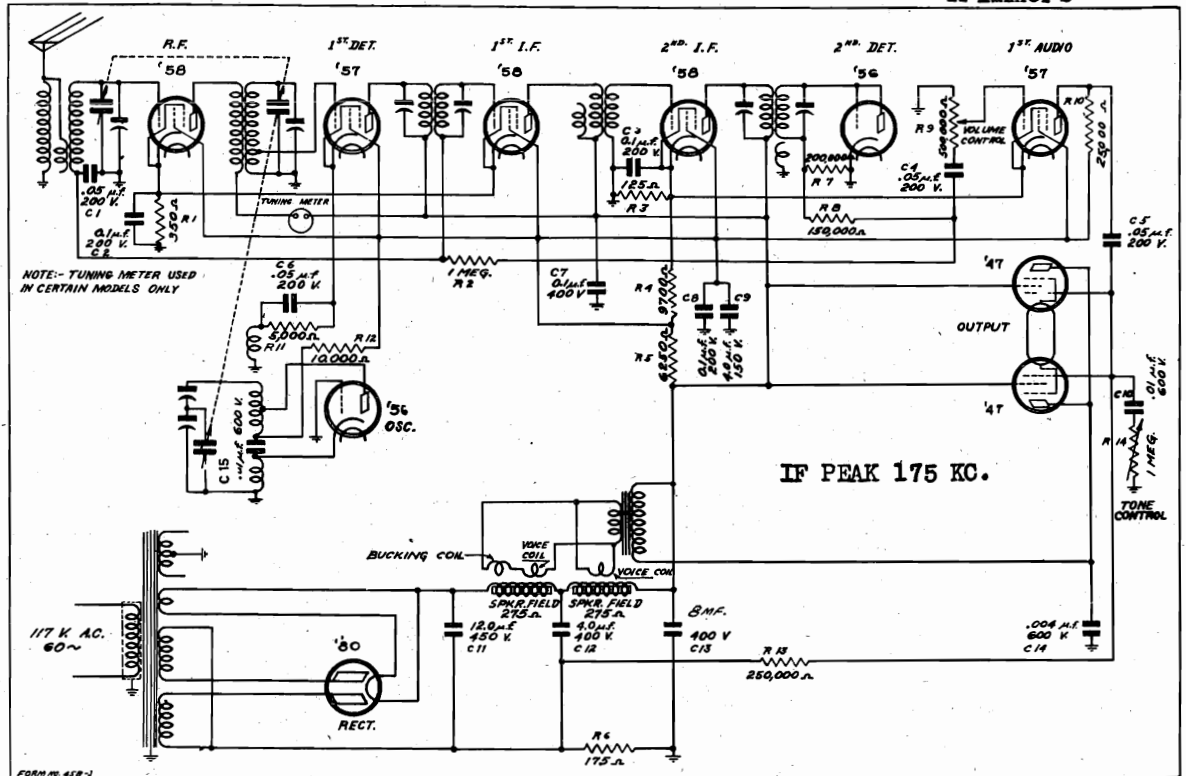

Set the signal generator for 175 K.C. Connect the signal lead from the signal generator to the grid of the 1st detector tube through a .05 mfd. condenser. Turn the tuning condenser rotor until the plates are completely out. The ground lead from the signal generator goes to the ground lead of the receiver. Then adjust the four intermediate frequency condensers for maximum output. The adjusting screws for these condensers are reached from the bottom of the chassis.

Next set the signal generator for a signal of exactly 1400 K.C. The antenna lead from the signal generator is, in this instance, connected to the antenna lead of the receiver. Set the dial pointer on the 1400 K.C. mark on the dial scale and adjust the three trimmer condensers on the gang tuning condenser for maximum output, adjusting the oscillator trimmer first.

Next set the signal generator for a signal of 600 K.C. and adjust the oscillator 600 K.C. trimmer. The adjusting screw for this condenser is reached from the top of the chassis and is between the I.F. and oscillator coil cans.

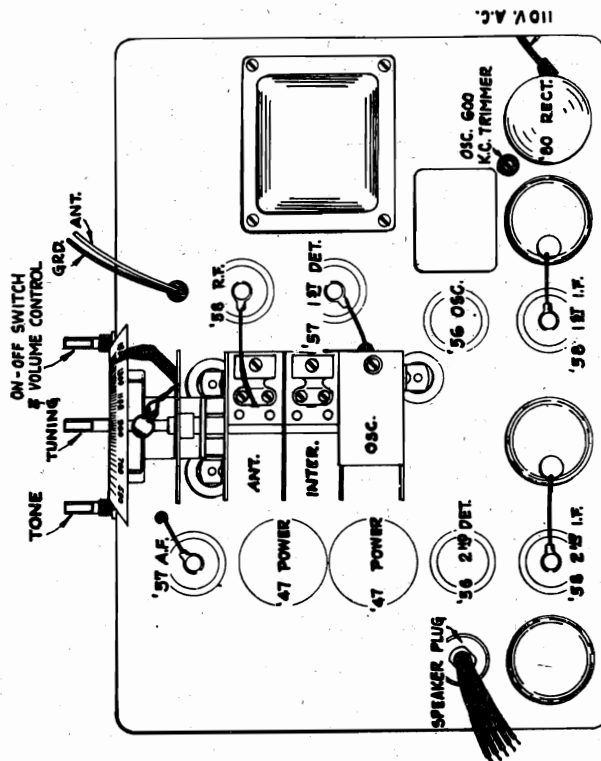

Voltages at Sockets
LINE VOLTAGE, 115 — ANTENNA LEAD
SHORTED TO GROUND



Type of Tube	Function	Across Filament or Heater	Plate to Cathode	Screen to Cathode	Grid to Cathode	Normal Plate M.A.
58	R.F.	2.4	275	100	4.2 ⁽¹⁾	5.2
57	1st Det.	2.4	265	99	5.4	.9
56	Osc.	2.4	28		0	8.6
58	1st I.F.	2.4	275	100	4.2 ⁽¹⁾	5.2
58	2nd I.F.	2.4	275	102	3.0	8.5
56	2nd Det.	2.4	0		0	0
57	1st Audio	2.4	12	102	3.0 ⁽¹⁾	1.8
47	Output	2.4	265	280	18.5 ⁽²⁾	30.0
80	Rect.	4.9				55.0 per plate

(1) Measured from cathode to ground.

(2) Measured across Resistor R6.

MODEL L-20, Nomad
Schematic, Voltage
Socket

LAFAYETTE RADIO MFG. CO.

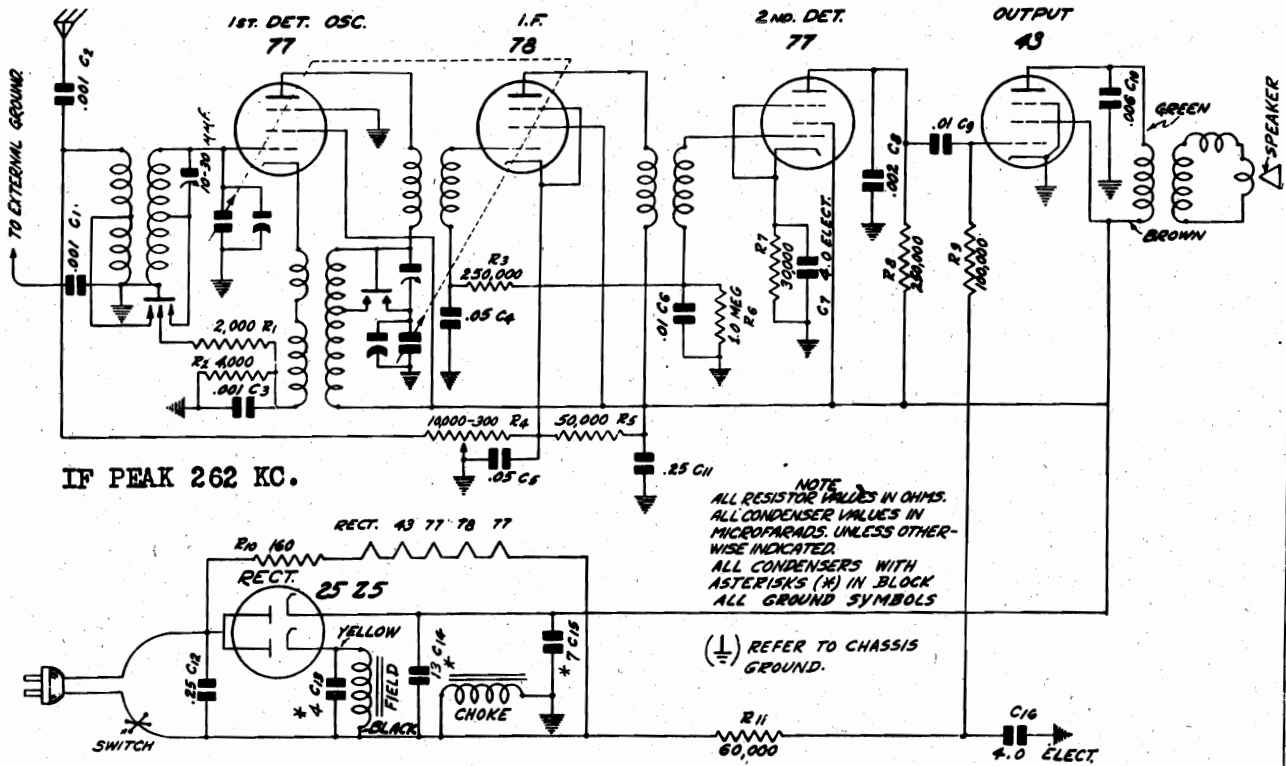

Voltages at Sockets

Antenna lead connected to ground lead (not external ground).—Volume Control at Maximum.
CAUTION—Do not put chassis on any grounded surface or let chassis touch any ground.

		A.C. Line Voltage—115 Use High Resistance A.C. Meter, Rectifier Type, for Heater Voltage Measurements					D.C. Line Voltage—110 Use High Resistance D.C. Meter for Heater Voltage Measurements				
Type of Tube	Function	Across Heater	Plate to Cathode	Screen to Cathode	Grid to Cathode	Normal Plate M. A.	Across Heater	Plate to Cathode	Screen to Cathode	Grid to Cathode	Normal Plate M. A.
77	1st Det. Osc.	5.8	106	106	5.2	.8	5.6	87	87	4.3	.6
78	I.F.	5.8	108	108	3.0(1)	7.4	5.6	88	88	2.4(1)	6.0
77	2nd Det.	5.8	65(2)	104	6.0(3)	.14	5.6	58(2)	82	5.0(3)	.11
43	Output	24.	95	110	18.0(4)	22.0	23.0	80	90	15.0(4)	17.0
25Z5	Rect.	24.	110(5) 155(5)			84.0 Total	23.0	5.0(5) 6.0(5)			74.0 Total

(1) Cathode to Ground.
 (2) With 1,000,000 ohm meter—reading will be lower with lower resistance meter.
 (3) Cathode to ground—read with 100,000 ohm meter.
 (4) Read across filter choke.
 (5) Readings from plate to two cathodes with 250,000 ohm meter

MODEL B-61
Schematic, Voltage
Socket, Resistance

LAFAYETTE RADIO MFG. CO.

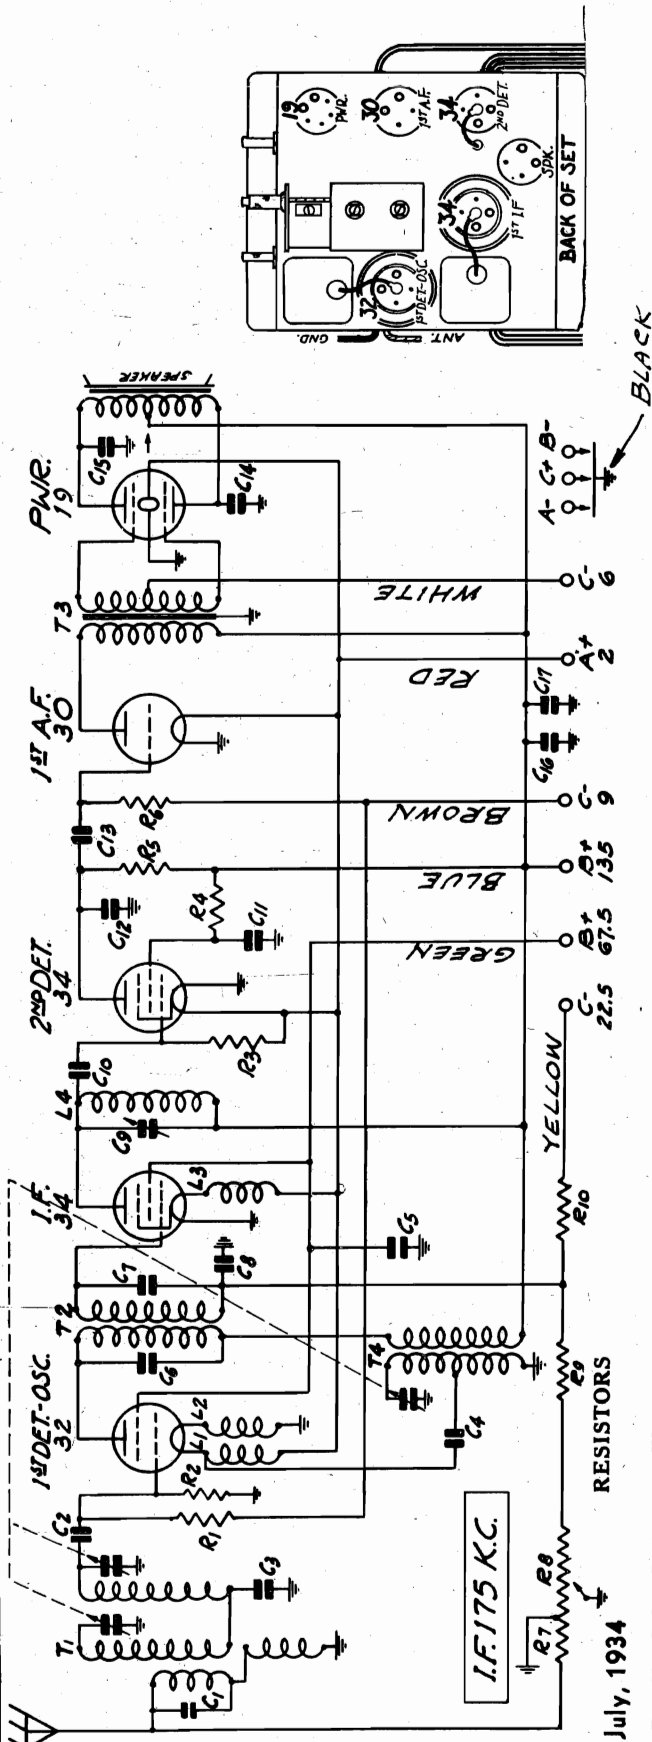


Fig. 1—Schematic Circuit Diagram.

July, 1934

Part No.	Code	Resistance	Wattage	Type
P-A94505	R1	5 Megohm	0.2	Carbon
P-A94105	R2	1 Megohm	0.2	Carbon
P-A94205	R3	2 Megohm	0.2	Carbon
P-B94104	R4	100,000 Ohm	0.5	Carbon
P-B94403	R5	40,000 Ohm	0.5	Carbon
P-A95105	R6	1 Megohm	0.2	Carbon
P-96001	{R7	3,000 Ohm		Volume Control
	{R8	60,000 Ohm		Volume Control
P-A94901	ww R9	900 Ohm	0.2	Wire Wound
P-A94652	R10	6,500 Ohm	0.2	Carbon
*P-A94105	R1	10 Megohm	0.2	Carbon
*P-A94205	R2	2 Megohm	0.2	Carbon

*These resistors were used on first models.

CONDENSERS

Part No.	Code	Capacity	Voltage	Type
P-81812	C1	200 mmf		Wire—Part of Ant. Assem
P-81801	C2	35 mmf		Wire—Part of Ant. Assem.
P-80862	C3	0.05 mf	200V	Tubular
P-80862	C4	0.05 mf	200V	Tubular
P-80862	C5	0.05 mf	200V	Tubular
P-81806	C6	70 mmf		Wire
P-81804	C7	45 mmf		Wire
P-80862	C8	0.05 mf	200V	Tubular
P-1685	C9	70 ± 30 mmf		I. F. Trimmer
P-81800	C10	50 mmf		Wire
P-81045	C11	0.25 mf	200V	Tubular
P-80863	C12	0.004 mf	600V	Tubular
P-80898	C13	0.006 mf	600V	Tubular
P-80969	{C14	0.01 mf	400V	Dual Tubular
	{C15	0.01 mf	400V	Dual Tubular
P-80864	C16	0.1 mf	200V	Tubular
P-80968	C17	4.0 mf	150V	Electrolytic
P-81035				3 Gang Condenser

VOLTAGES AT SOCKETS
Volume Control at Maximum—Antenna Shorted to Ground
B + 135 Volts

Type of Tube	Function	Across Filament	Plate to Cath.	Screen to Cath.	Grid to Cath.	Normal Plate M. A.
32	1st Det. & Osc.	2.0	135	67.5	7.5(1)(2)	2.5
34	I. F.	2.0	135	67.5	2.5(3)	2.8
34	2nd Det.	2.0	50	40(1)	0	1.8
30	1st Audio	2.0	135		9(4)	3.0
19	Output	2.0	135		6	1.8
	(1) With 250,000 ohm meter.					Total
	(2) Subject to variation due to oscillatory current.					
	(3) With 25,000 ohm meter.					
	(4) As read at "C" battery.					

D. C. Resistance of Windings

Following are the D. C. resistances of the various windings in the chassis.

Item	Code	D. C. Resistance in Ohms
Double Tuned Ant. Coil Pri.	T1	19.2
Double Tuned Ant. Coil Sec. (Presselector)	T1	3.2
Double Tuned Ant. Coil Sec. (1st Det.)	T1	3.2
1st I.F. Coil Pri.	T2	90.0
1st I.F. Coil Sec.	T2	116.0
D Audio Input Trans. Pri.	T3	1010.
Audio Input Trans. Sec. Cent. Tap to outside end	T3	648.
Audio Input Trans. Sec. Cent. Tap to inside end	T3	588.
Oscillator Coil, Grid Winding	T4	4.1
Oscillator Coil, Plate Winding	T4	10.4
Double Filament Reactor Assem.	L1	.61
Double Filament Reactor Assem.	L2	.61
Single Filament Reactor Assem.	L3	.61
2nd I.F. Reactor Coil	L4	52.1
6" Magnetic Speaker, Center Tap to outside end		272.
6" Magnetic Speaker, Center Tap to inside end		225.
8" Magnetic Speaker (same as P-2124)		

LAFAYETTE RADIO MFG. CO.

MODEL B-64
Schematic, Voltage
Socket

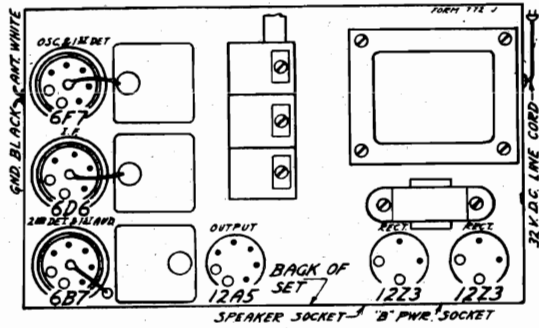



Fig. 2—Arrangement of Tubes

VOLTAGES AT SOCKETS

Input 32 Volts—Antenna Shorted to Ground

Type of Tube	Function	Across Filament	Plate to Cathode	Screen to Cathode	Grid to Cathode	Normal Plate M.A.
6F7	1st Det. & Osc.	6.3	167(1)	90	2.6	7.0(1)
			117(2)			2.8(2)
6D6	I. F.	6.3	172	120	3.2	8.2
6B7	2nd Det.	6.3	25	25	7.25	2.0
12A5	Output	12.6	180	180	25	32
12Z3	Rectifier	12.6	225			25

- (1) Pentode Section of Tube
- (2) Triode Section of Tube

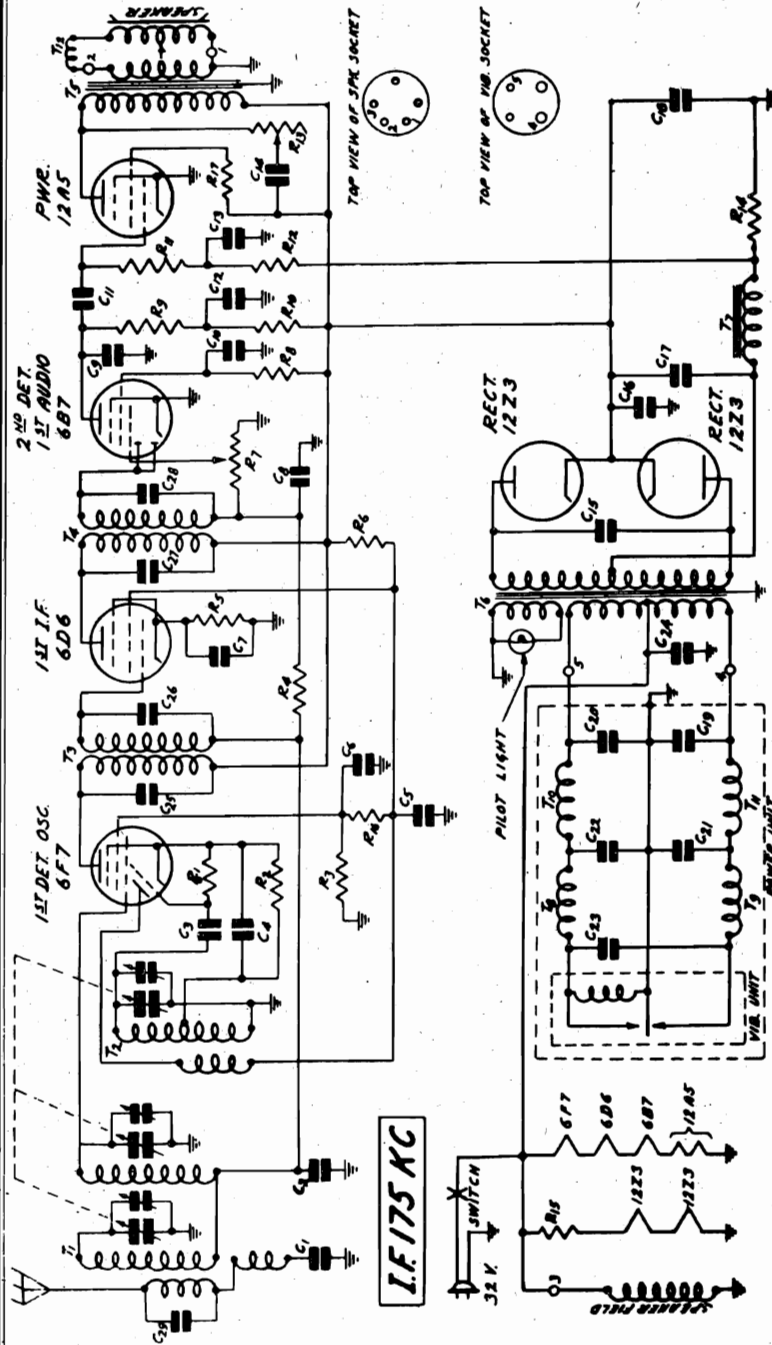

The numbers on the 2 sockets shown at the right above, correspond with the numbers as shown in the circuit.

Fig. 1—Schematic Circuit Diagram

CONDENSERS

Part No.	Capacity	Voltage	Type
P-80862	.05 Mf.	200V	Tubular
P-80862	.05 Mf.	200V	Tubular
P-81801	35 Mmf.	200V	Wire Capacitor Part of Osc. Assem.
P-80862	.05 Mf.	200V	Tubular
P-80888	.25 Mf.	200V	"
P-80888	.05 Mf.	200V	"
P-81049	.05 Mf.	200V	Wire Capacitor
P-81811	100 Mmf.	600V	Tubular
P-81051	.02 Mf.	200V	"
P-80888	.25 Mf.	600V	"
P-80872	.25 Mf.	200V	"
P-80888	.25 Mf.	200V	"
P-81062	.01 Mf.	140V	"
P-81052	.05 Mf.	400V	"
P-81052	.015 Mf.	1600V	"
P-80887	.10 Mf.	400V	"
P-81016	8.0 Mf.	300V	Electrolytic Block
P-80993	5 Mf.	140V	Tubular
P-81806	70 Mmf.	Wire Capac. Part of 1st I.F. Assem.	
P-81804	45 Mmf.	Wire Capac. Part of 1st I.F. Assem.	
P-81808	90 Mmf.	Wire Capac. Part of 2nd I.F. Assem.	
P-81810	100 Mmf.	Wire Capac. Part of 2nd I.F. Assem.	
P-81812	200 Mmf.	Wire Capac. Part of Ant. Assem.	
P-81015			Three Gang Condenser.

RESISTORS

Part No.	Resistance	Wattage	Type
R1	100,000 Ohm	.2	Carbon
R2	1,500 Ohm	.5	Carbon
R3	30,000 Ohm	.2	Carbon
R4	2 Megohm	.2	Carbon
R5	400 Ohm	1.0	Wire Wound
R6	7,000 Ohm	.5	Carbon
R7	500,000 Ohm	.5	Carbon
R8	200,000 Ohm	.5	Carbon
R9	60,000 Ohm	.2	Carbon
R10	20,000 Ohm	.2	Carbon
R11	500,000 Ohm	.2	Carbon
R12	100,000 Ohm	.2	Carbon
R13	150,000 Ohm	.2	Carbon
R14	450 Ohm	2.0	Tone Control
R15	25 Ohm	3.0	Wire Wound
R16	6,000 Ohm	.5	Carbon

Oct, 1934

MODEL B-65

Schematic, Voltage Socket

LAFAYETTE RADIO MFG. CO.

RESISTORS

Part No.	Code	Resistance	Wattage	Type
P-A95104	R1	100,000 Ohm	.2	Carbon
P-A98803	R2	30,000 Ohm	.2	Carbon
P-A95104	R3	100,000 Ohm	.2	Carbon
P-A98602	R4	6,000 Ohm	.2	Carbon
P-B93902	R5	9,000 Ohm	.5	Carbon
P-A95505	R6	5 Megohm	.2	Carbon
P-96012	R7	1 Megohm	.2	Volume Control
P-A95505	R8	5 Megohm	.2	Carbon
P-A94603	R9	60,000 Ohm	.2	Carbon
P-A95104	R10	100,000 Ohm	.2	Carbon
P-A95104	R11	100,000 Ohm	.2	Carbon

Voltages at Sockets
ANTENNA SHORTED TO GROUND

Type of Tube	Function	Fila-ment Volt.	Plate to Neg. Filament	Screen to Neg. Filament	Grid to Neg. Filament	Normal Plate M. A.
34	1st Detector	2.0	135	55	3.0 av.	1.90
30	Oscillator	2.0	75	70	0.0	3.70
34	I. F.	2.0	135	70	3.0 av.	8.00
30	2nd Detector	2.0	2	65	4.0	2.30
34	1st A. F.	2.0	140	65	4.0	2.30
30	2nd A. F.	2.0	135	65	8.0	3.10
19	Output	2.0	137	65	6.0	1.00 per plate

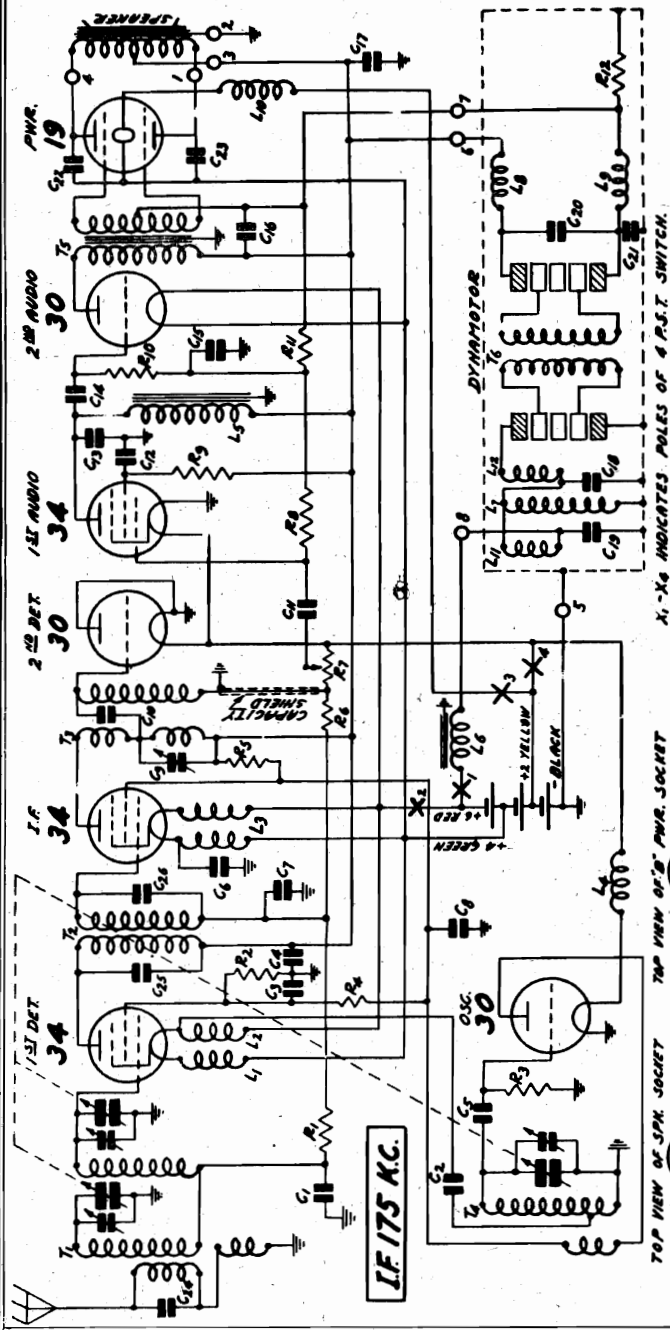


Fig. 1. Schematic Circuit Diagram

CONDENSERS

Part No.	Code	Capacity	Voltage	Type
P-80862	C1	0.050 Mf.	200V	Tubular
P-80862	C2	0.050 Mf.	200V	Tubular
P-80862	C3	0.050 Mf.	200V	Tubular
P-80864	C4	0.100 Mf.	200V	Tubular
P-81801	C5	.35 Mmf.	Cap. Part of Osc. Coil Assem.	
P-80888	C6	0.250 Mf.	200V	Tubular
P-80862	C7	0.050 Mf.	200V	Tubular
P-80988	C8	1.500 Mf.	140V	Tubular
P-1965	C9	70-140 Mmf.	Trimmer	
P-81800	C10	50 Mmf.	Cap. Part of 2nd I.F. Coil As.	
P-80981	C11	0.010 Mf.	400V	Tubular
P-80888	C12	0.250 Mf.	200V	Tubular
P-80945	C13	500 Mmf.	Moulded	
P-80862	C14	0.050 Mf.	200V	Tubular
P-80888	C15	0.250 Mf.	200V	Tubular
P-81014	C16	16.00 Mf.	Electrolytic Block	
P-80914	C22	0.002 Mf.	600V	Tubular
P-80914	C23	0.002 Mf.	600V	Tubular
P-81812	C24	200 Mmf.	Cap. Part of Ant. Assem.	
P-81807	C25	70 Mmf.	Cap. Part of 1st I.F. Coil As.	
P-81805	C26	45 Mmf.	Cap. Part of 1st I.F. Coil As.	

Three Gang Condensers



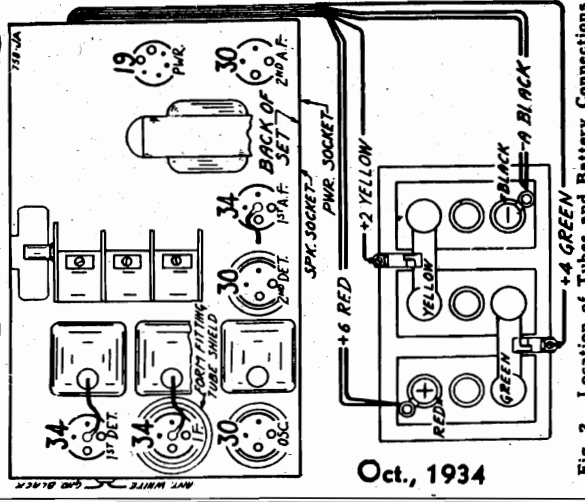



Fig. 2. Location of Tubes and Battery Connections

MODEL IA35
 LAUREHK RADIO MFG. CO. MODEL Radio-Hearing Aid
 Schematics

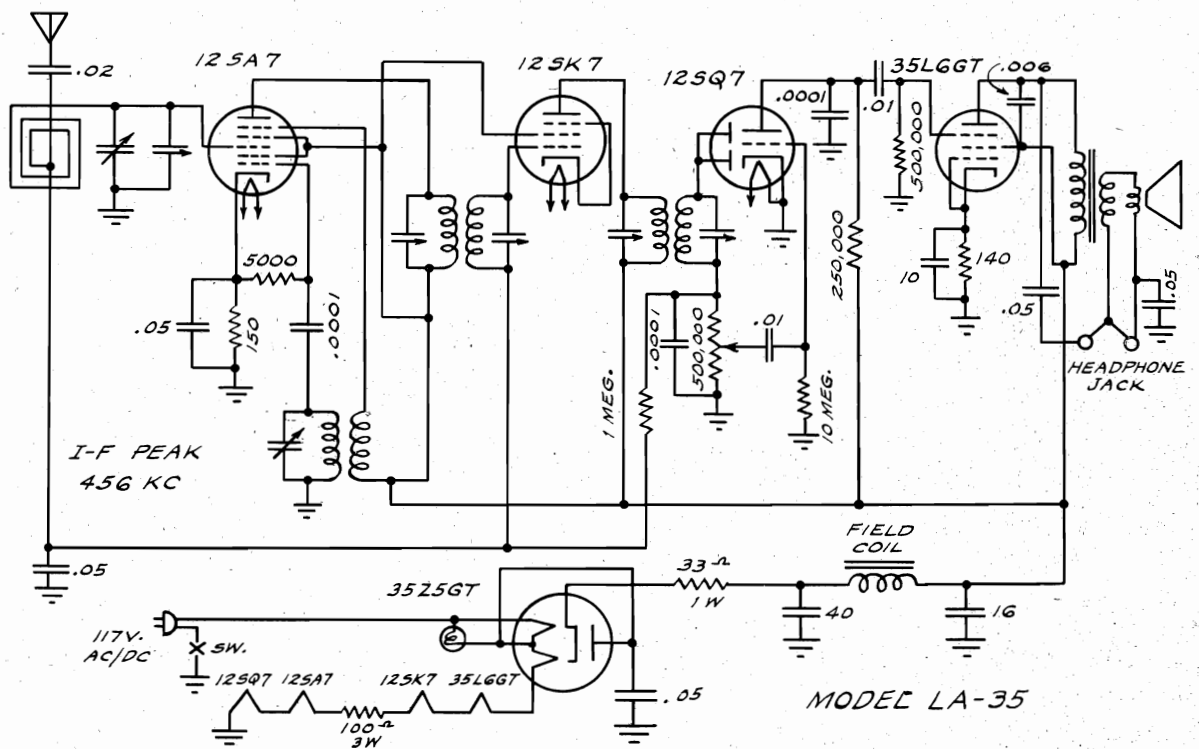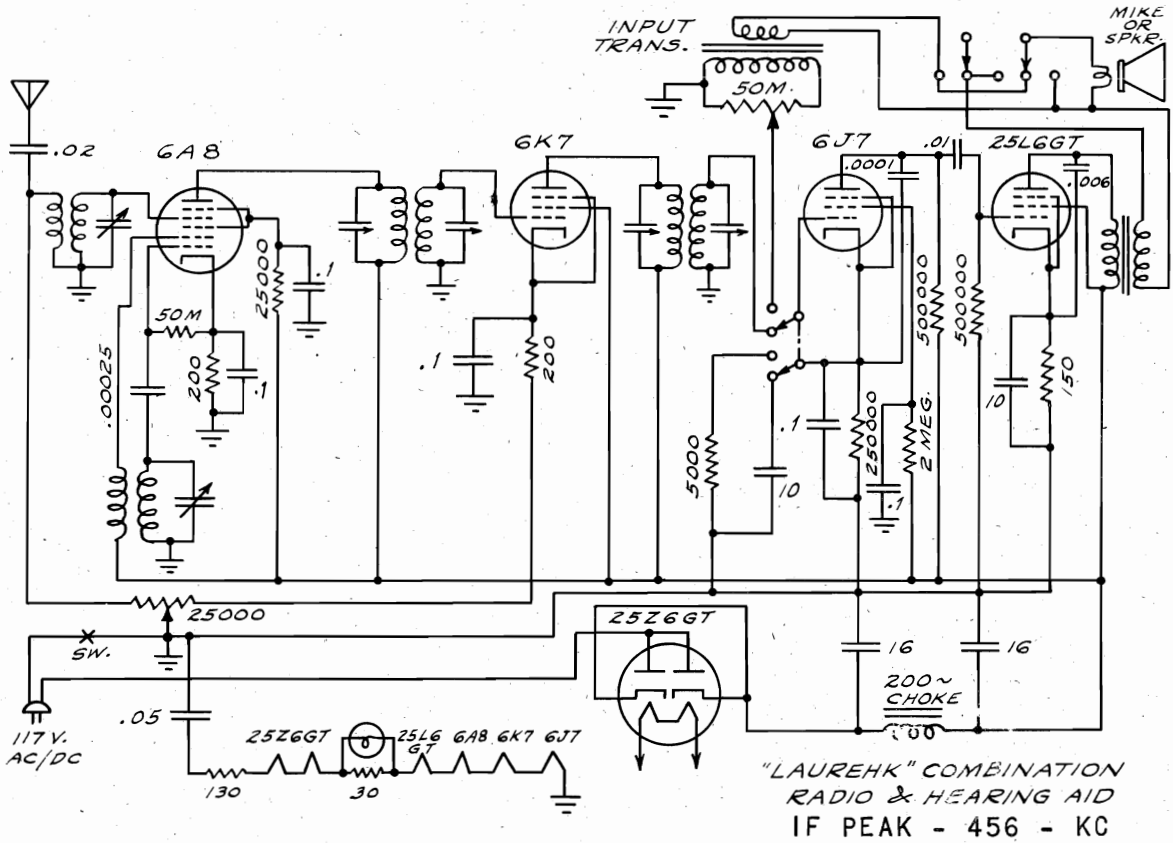

MODEL L67
Schematic, Alignment

LAUREHK RADIO MFG. CO.

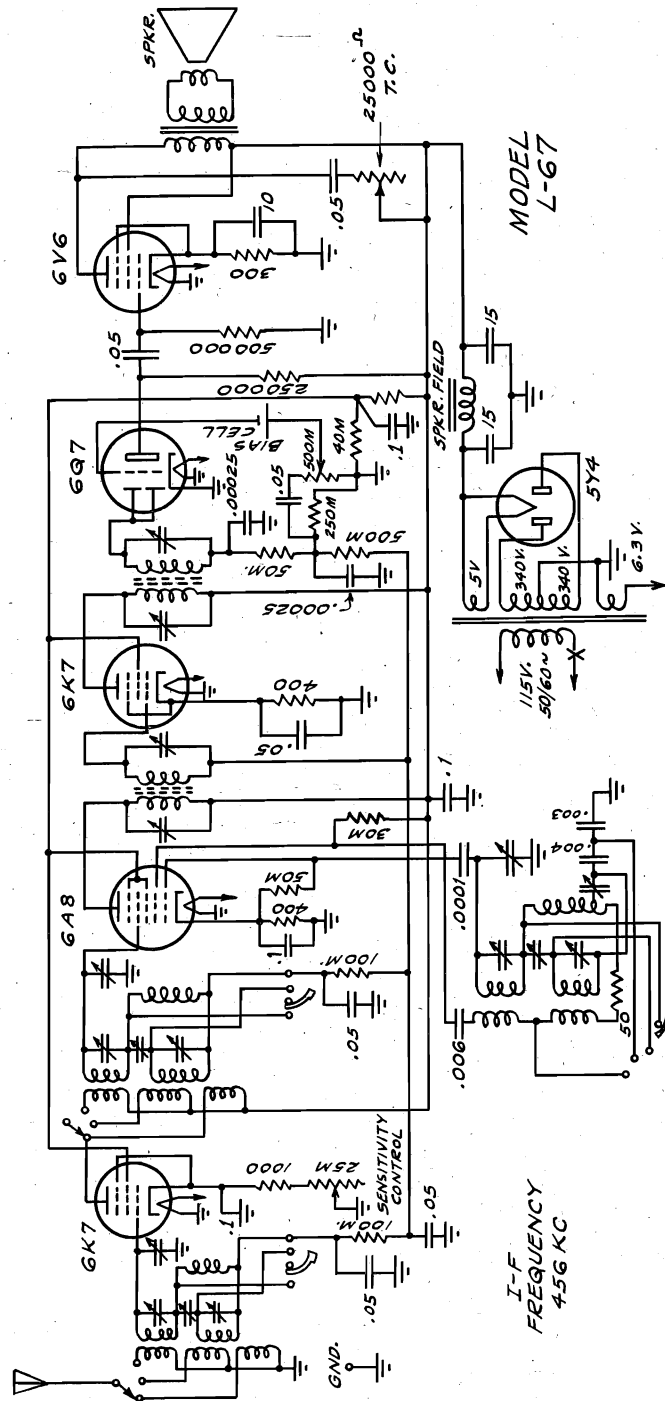

The I. F. Amplifier is aligned in the usual manner. Connect a service oscillator between the chassis and the grid of the 6A8 tube, using a condenser .0005 mfd. to .25 mfd. between the grid and the high side of the generator output. Do not remove the grid clip for this operation. The Range Switch should be turned to the Broadcast band and the dial set near 600 Kc; then proceed with alignment at 456 Kc.

Turn the audio Volume Control and Sensitivity Controls on full. Increase the output of the service oscillator until a signal is just audible. Adjust each I. F. Trimmer so that maximum volume is obtained. It is best to repeat this procedure two or three times on each trimmer to obtain the most accurate adjustment. These trimmers are adjusted with a small screw driver through the openings in the top of the shield on each I.F. transformer.

The service oscillator should now be connected to the Antenna and ground terminals of the receiver, through the proper dummy antenna.

Close the gang condenser and see that the dial pointer position coincides with the last line at the low-frequency end of the dial. If this condition does not obtain, loosen the set-screw on the dial drum, make the necessary correction, and firmly tighten the screw.


Turn the range switch to the Short-Wave (extreme clockwise) position, set the dial and the service oscillator to 17 Mc, connect a 400 ohm resistor between the service oscillator and the antenna binding post as a dummy antenna, turn the output of the service oscillator up to maximum, tighten the top trimmer in the oscillator coil until just snug, then loosen it four turns and then as the trimmer is tightened, set it to the position of maximum response, reducing the output of the service oscillator as alignment proceeds. (If two responses are found of nearly equal intensity, adjust for the one with the trimmer farthest open). Align the

top trimmers in the RF coil, but since the RF adjustment has some effect on the oscillator frequency it will be necessary to rock the dial slightly to keep the signal tuned in. Having aligned the oscillator and RF circuits adjust the top trimmer in the Antenna coil for maximum sensitivity, reducing the output of the service oscillator as the receiver becomes progressively more sensitive. If the receiver tends to "motor-boat", turn down the service oscillator output until the trouble stops. Some service oscillators, however, leak through enough signal that even with the output control set at zero, the receiver is still overloaded, in which case it is necessary to turn down the Sensitivity and Audio Controls until the receiver behaves properly.

Turn the Range Switch to the "Police" or middle range and set the service oscillator and dial at 4.8 Mc. Align first the oscillator, then the RF and Antenna coils on this band - lower trimmer on all three coils, in a manner similar to that used on the Short Wave band. Both the Short Wave and Police band ranges have fixed padding condensers.

Turn the Range Switch to the Broadcast position, substitute a 200 mmfd. condenser for the 400 ohm resistor as a dummy antenna, set the dial and the service oscillator to 1400 Kc. and align the circuits again (middle trimmer) in the same manner as described above. Having done this, set the service oscillator to 600 Kc. and tune the receiver dial for maximum response in the neighborhood of 600 Kc. Next, rock the dial back and forth across the signal, at the same time adjusting the padding condenser, turning continuously in one direction until the output of the receiver, as it is rocked across the signal, becomes maximum. If the padding is turned too far, the output will drop off again. A few minutes experiment with this operation will show more than a lengthy description. Having completed the padding operation, return the receiver and the generator to 1400 Kc. and realign as before. This completes the alignment of the Broadcast band end of the receiver.

THE MAGNAVOX CO., INC. CHASSIS CR134, CR137, CR144 Schematic, Voltage, Socket

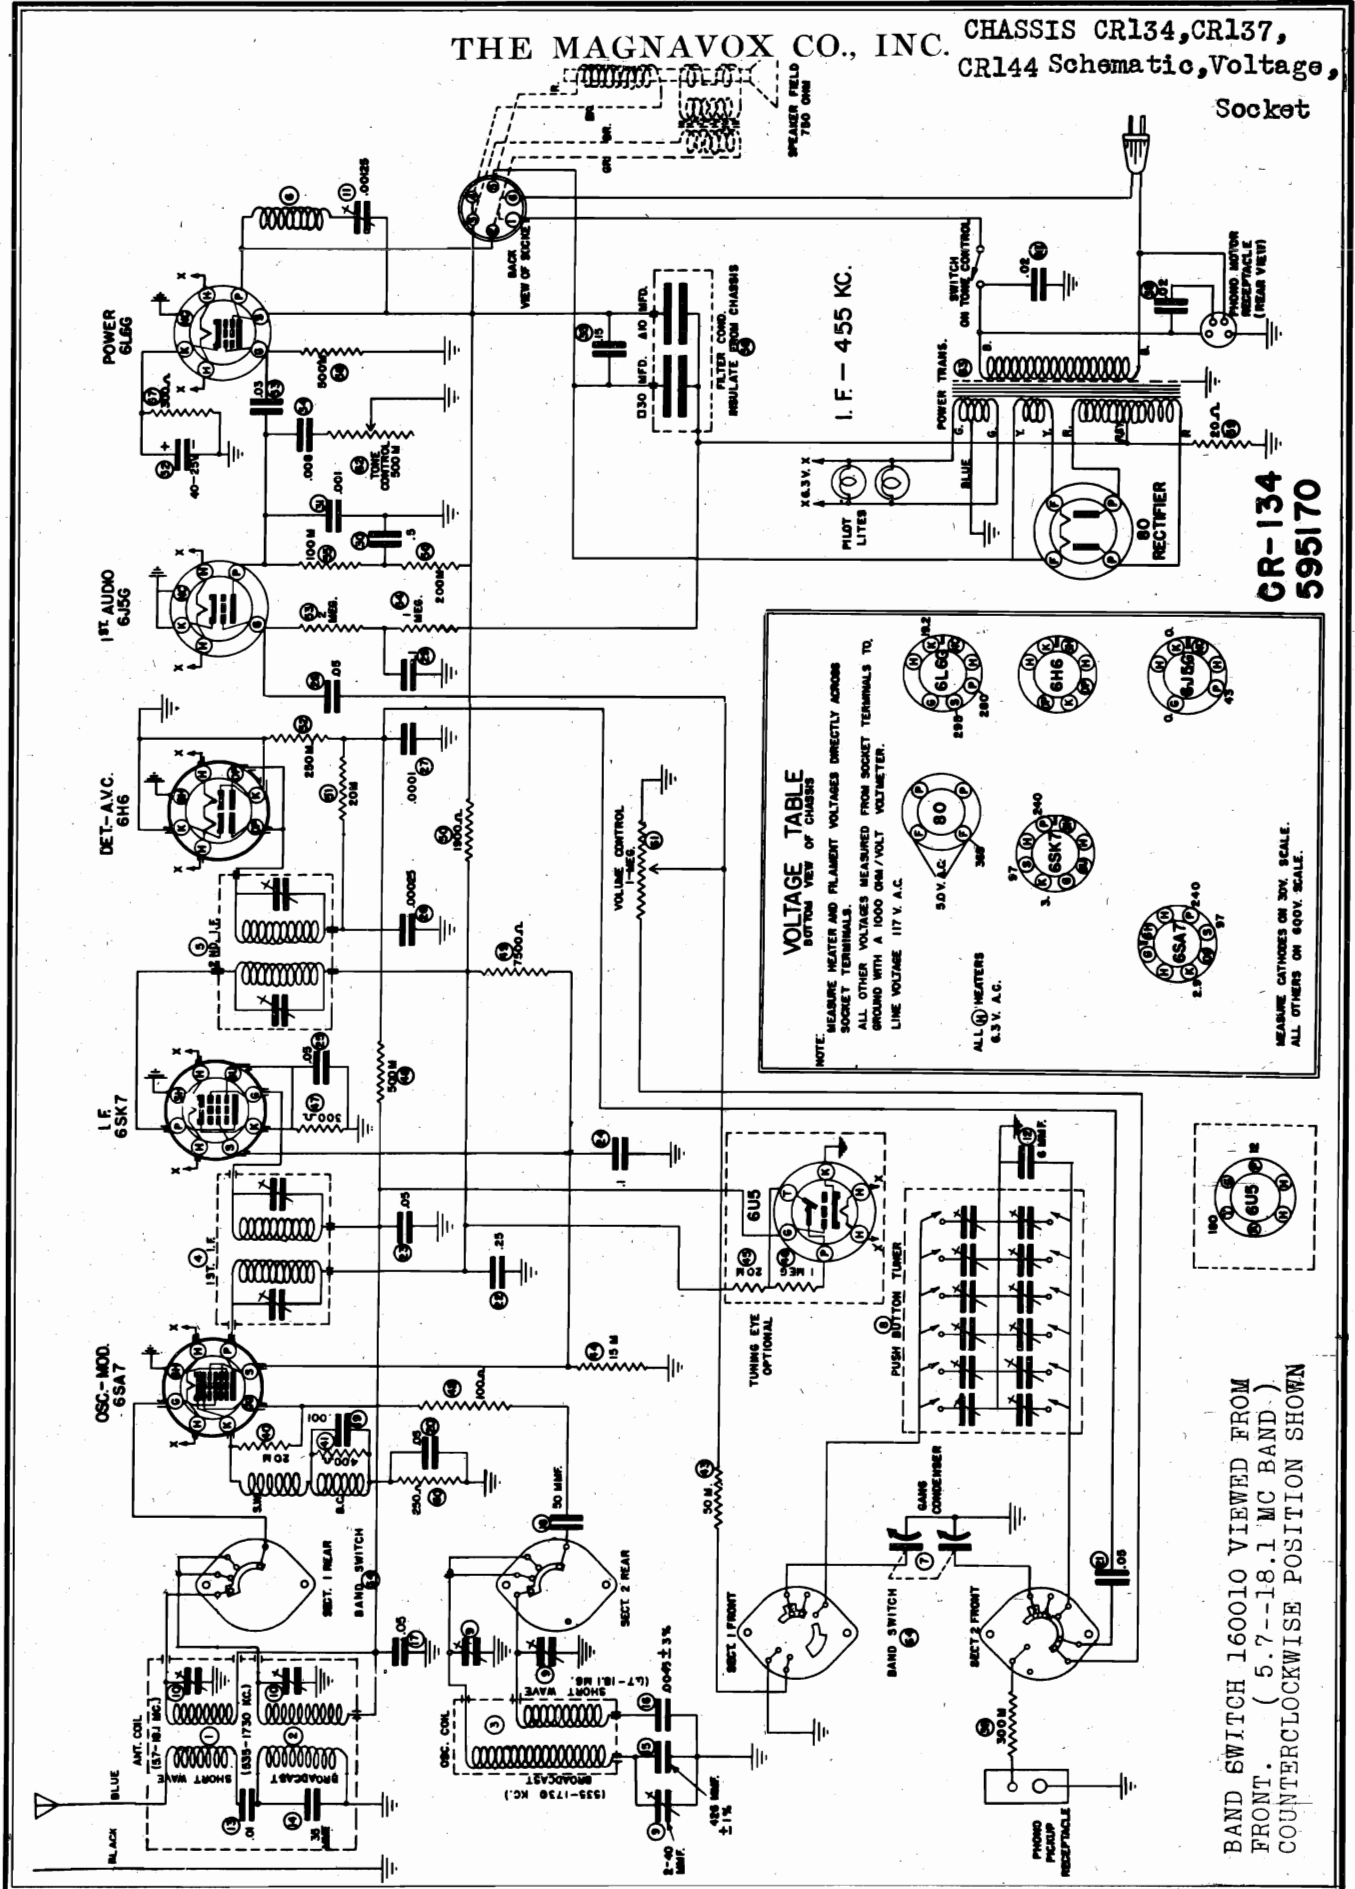

VOLTAGE TABLE
BOTTOM VIEW OF CHASSIS

NOTE: HEATRE HEATER AND FILAMENT VOLTAGES DIRECTLY ACROSS SOCKET TERMINALS. ALL OTHER VOLTAGES MEASURED FROM SOCKET TERMINALS TO GROUND WITH A 1000 OHM/VOLT VOLTMETER. LINE VOLTAGE 117 V. A.C.

6L6G	6H6	6J5G
6SK7	6SK7	6SA7
80	80	80
6US	6US	6US

MEASURE CATHODES ON 30V. SCALE. ALL OTHERS ON 500V. SCALE.


CR-134
595170

BAND SWITCH 160010 VIEWED FROM FRONT. (5.7-18.1 MC BAND) COUNTERCLOCKWISE POSITION SHOWN

CHASSIS CR134, CR137
CR144

THE MAGNAVOX CO., INC.

Chassis, Alignment
Trimmers

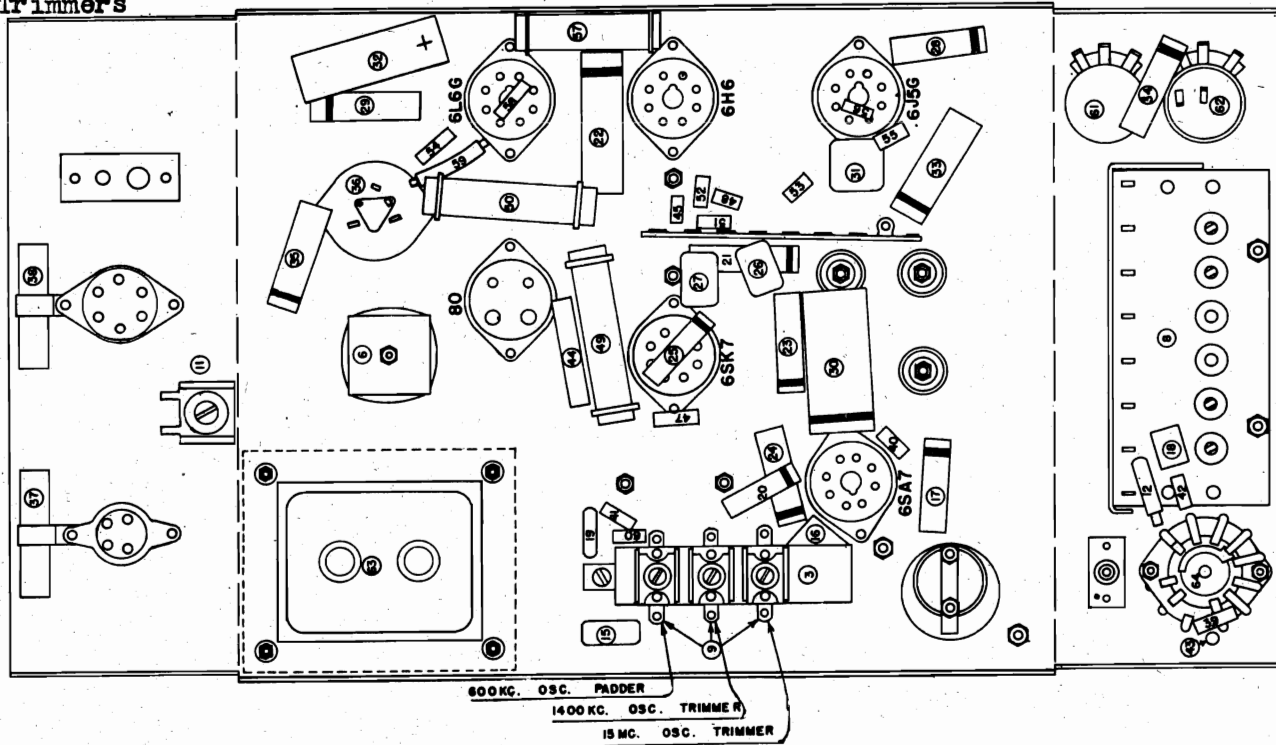


SPECIFICATIONS

Primary voltage.....117 V. AC; Intermediate frequency.....455 KC;
Power consumption..... 90 watts; Tuning frequency range: 535 - 1730 KC;
Power output..... 6 watts; 5.7 - 18.1 MC;


Speaker:
Field coil..... 750 ohms; Cancellation in volume control for phonograph
Transformer.....3500 ohms; pickup; push-button condenser-type tuner.
Circuit: Superheterodyne with two tuning ranges, treble control, A.V.C.; bass com-

CR-134 --- Used in Concerto Combination.
CR-144 --- Used in Chairside and Modern American Combinations, same as CR-134 with addition of tuning eye.

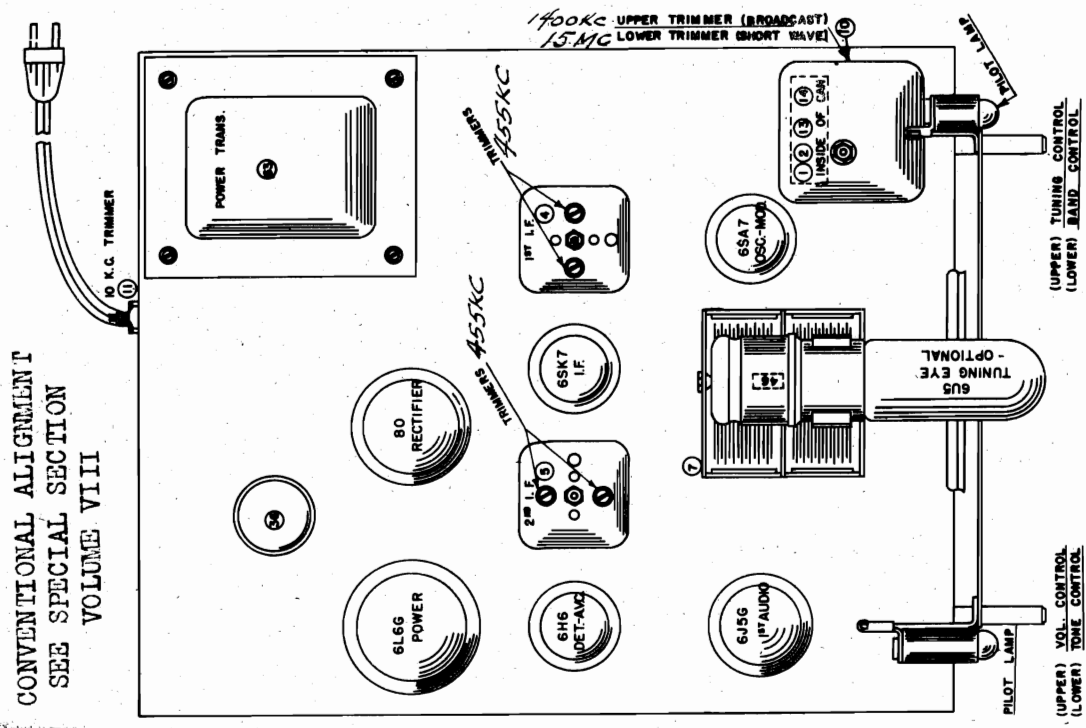


THE MAGNAVOX CO., INC.

CHASSIS CR133
Schematic, Voltage
Alignment, Trimmers
Socket, Chassis

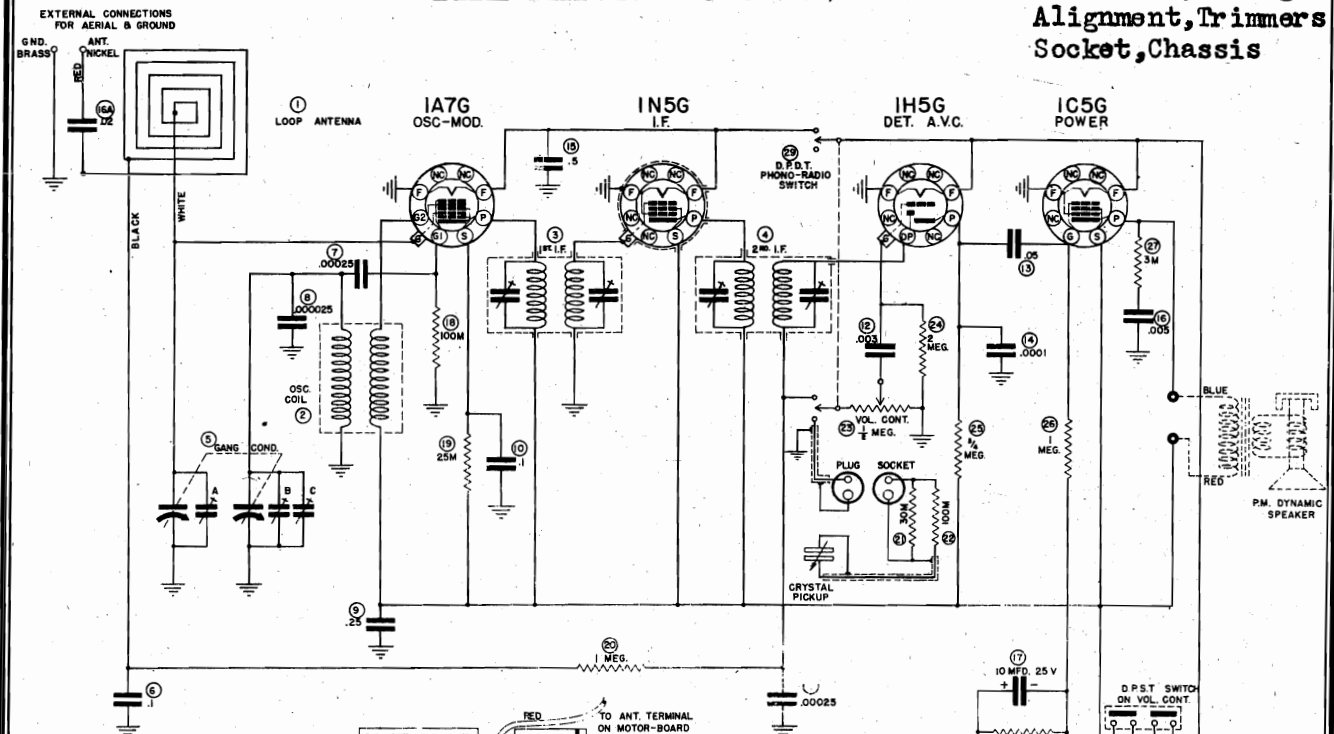

I. F. 455 KC.
NUMBERS SHOWN IN CIRCLES ARE ILLUSTRATION NUMBERS.

FOR SET ALIGNMENT REMOVE BLACK WIRE AND CONNECT TEST OSCILLATOR TO TERMINALS A & B

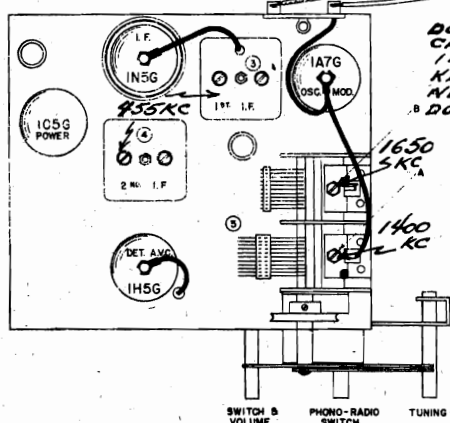


DONOT REMOVE GRID CAP WHEN ALIGNING I.F. KEEP MOTORBOARD NEAR NORMAL POSITION DURING ALIGNMENT.

VOLTAGE TABLE
BOTTOM VIEW OF CHASSIS

FILAMENT VOLTAGES MEASURED DIRECTLY ACROSS SOCKET TERMINALS WITH A 1 1/2 VOLT 'A' SUPPLY. ALL MEASUREMENTS MADE FROM SOCKET CONTACTS TO GROUND WITH A 1000 OHM PER VOLT VOLTMETER, AND 90 VOLTS 'B' SUPPLY.

BATTERY DRAIN
A - 0.25 AMP. B - 13.5 MA.

82	85	0.2	0	5	85
1.5	1.5				

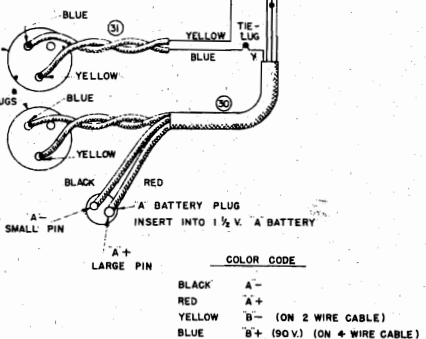


SYN	DESCRIPTION
P	PLATE
F	FILAMENT
G	CONTROL GRID
S	SCREEN GRID
GL	OSC. GRID
G2	OSC. PLATE
DP	DIODE PLATE
NC	NO CONNECTION

CR-133
595176
5/18/39 CK

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII
SPECIFICATIONS.

- "A" Battery voltage.....1.5 volt;
- "B" Battery voltage..... 90 volt;
- "A" Battery drain.....0.25 amp.;
- "B" Battery drain.....13.5 m.a.;
- Power output..... 0.2 watt;
- Intermediate frequency.....455 K.C.;
- Tuning frequency range:
540 -- 1650 K.C.;
- Speaker transformer.....8000 ohms;
- Type circuit:..... Superheterodyne;

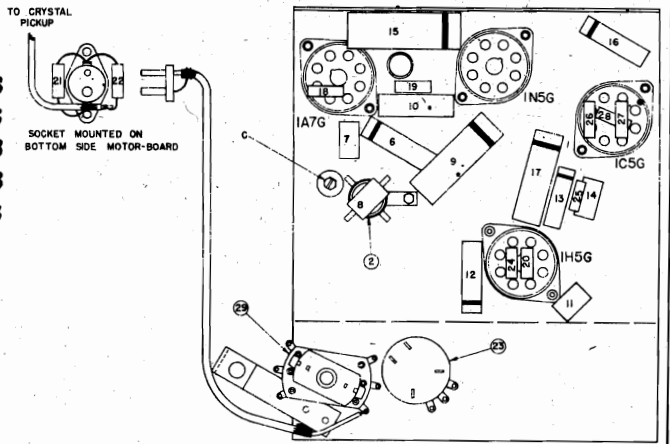

CHASSIS CR134, CR136, CR140
 CR142, CR143 to CR153 incl. THE MAGNAVOX CO., INC.
 10-kc Filter Adjustment
 CHASSIS CR141, CR142


MODEL CR-141 and CR-142.

Changes

Since the first production of this model was released, several circuit changes have been made to improve the fidelity and volume of phonograph reproduction. These changes were made at two different times and are shown in Figures B and C.

Figure A shows the original circuit. It is possible to check the phonograph input circuit on this radio without removing the chassis from the cabinet by the use of an ohmmeter, according to instructions shown.

TURN WAVE SWITCH TO PHONO POSITION, REMOVE PICKUP PLUG AND CONNECT OHMMETER TO PICKUP SOCKET—MEASURE RESISTANCE WITH VOLUME CONTROL OFF AND FULL ON.

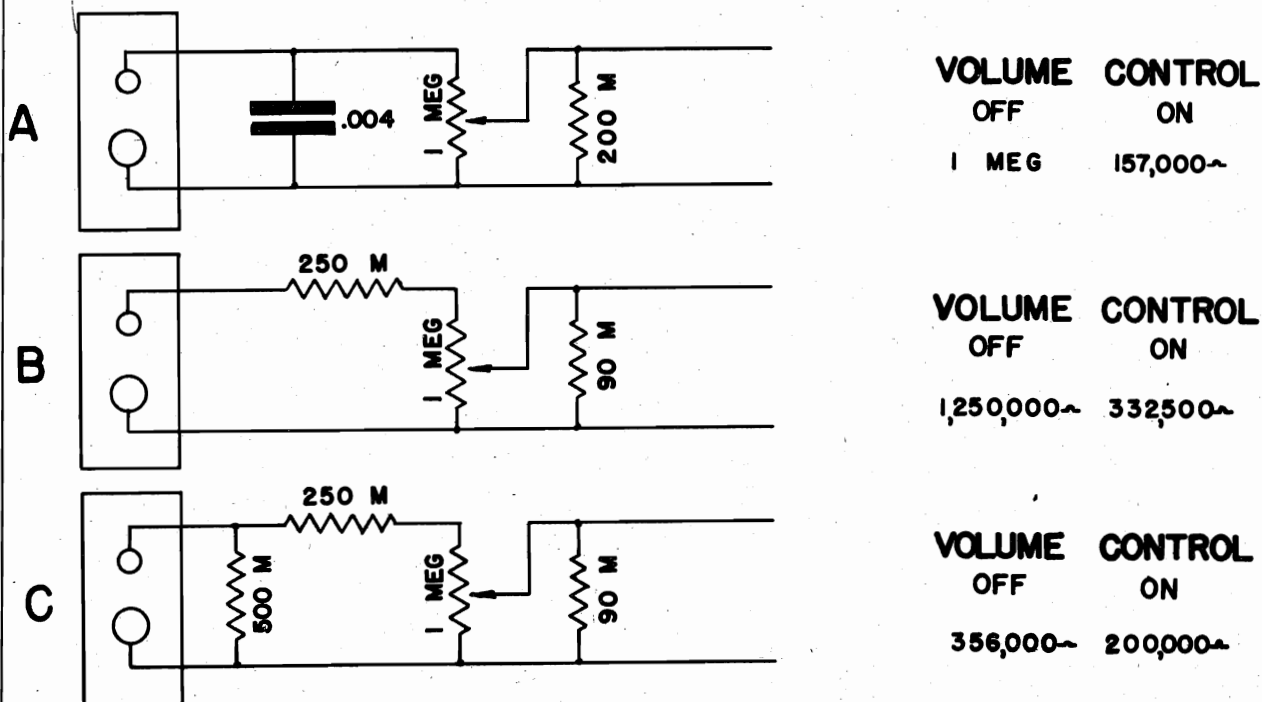

IF IT IS FOUND THAT CIRCUIT "A" OR "B" IS USED, CHANGE TO CIRCUIT "C".

10 K.C. FILTER ADJUSTMENT

MODELS CR-136, CR-146, CR-147, CR-148, CR-149, CR-152, CR-153.

With the tone control set for maximum treble response and the Band Expander set in the High Fidelity position (accomplished by rotating the treble control to the right as far as possible), tune the receiver to a point between two stations of about the same signal strength on adjacent channels. If a 10,000 cycle heterodyne is heard as the beat note between the two carriers, it may be eliminated by retuning the 10 KC output filter by means of the 10 KC trimmer condenser at the rear center of the chassis. In the absence of such a signal source in the daytime, an ACCURATE audio oscillator may be used to feed a 10 KC into the volume control.

MODELS CR-134, CR-140, CR-142, CR-144, CR-143, CR-145, CR-150, CR-151.

With the tone control set for maximum treble response, tune the receiver to a point between two stations of about the same signal strength on adjacent channels. If a 10,000 cycle heterodyne is heard as the beat note between the two carriers, it may be eliminated by retuning the 10 KC output filter by means of the 10 KC trimmer condenser at the rear center of the chassis.

CHASSIS CR136
Chassis, Alignment
Socket, Trimmers

THE MAGNAVOX CO., INC.

Circuit: Superheterodyne with three tuning ranges, treble and bass controls, I.F. band expansion, A.V.C., bass compensation control for phonograph pickup.

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII
SPECIFICATIONS





Primary voltage...117 V. AC;
Power consumption...134 watts;
Power output..... 20 watts;
Speaker (12C131):

455KC Field Coil... 250 ohms;
1ST I.F. TRANS. TRIMMERS
Transformer.. NONE

Speaker (302):
Field Coil... 250 ohms;
Transformer.. 5M ohms ;
(for dual speakers)

Intermediate frequency 455 KC;
Tuning range: 535 - 1730 KC;
1.65 - 5.8 MC;
5.6 - 18.2 MC;


ALIGNMENT NOTE:
KEEP BAND EXPANDER SWITCH IN
"SHARP TONE" POSITION DURING
ALL ADJUSTMENTS.

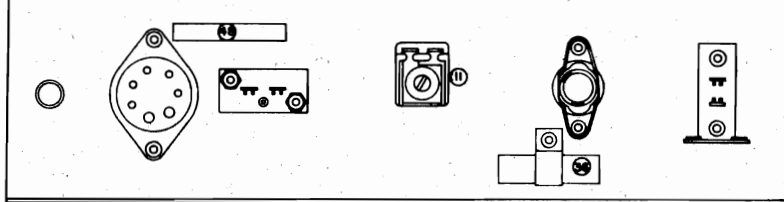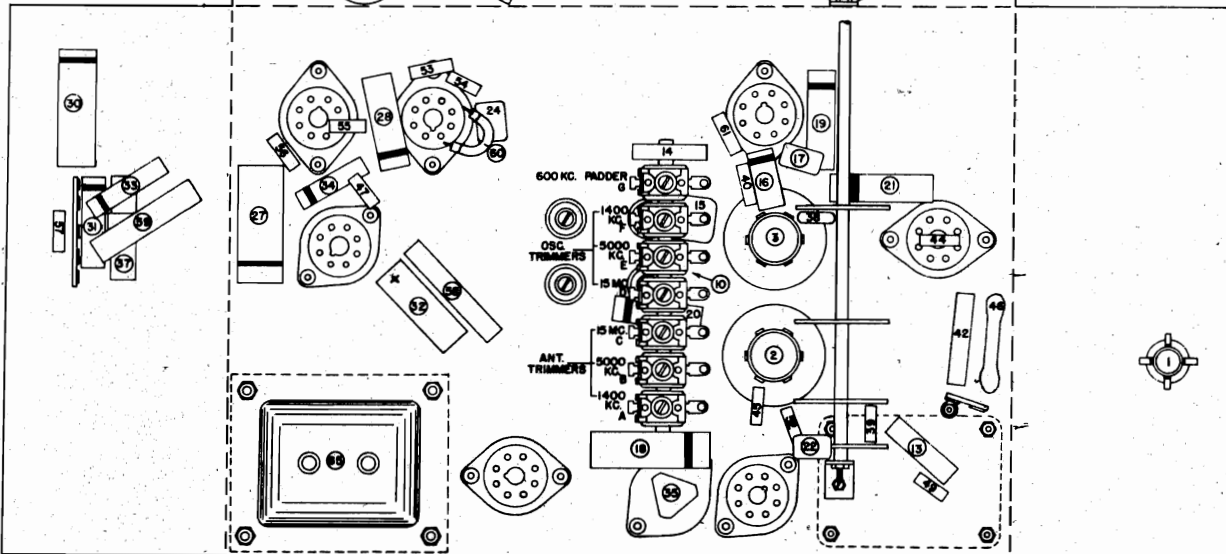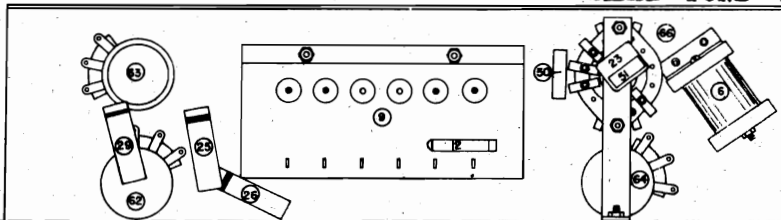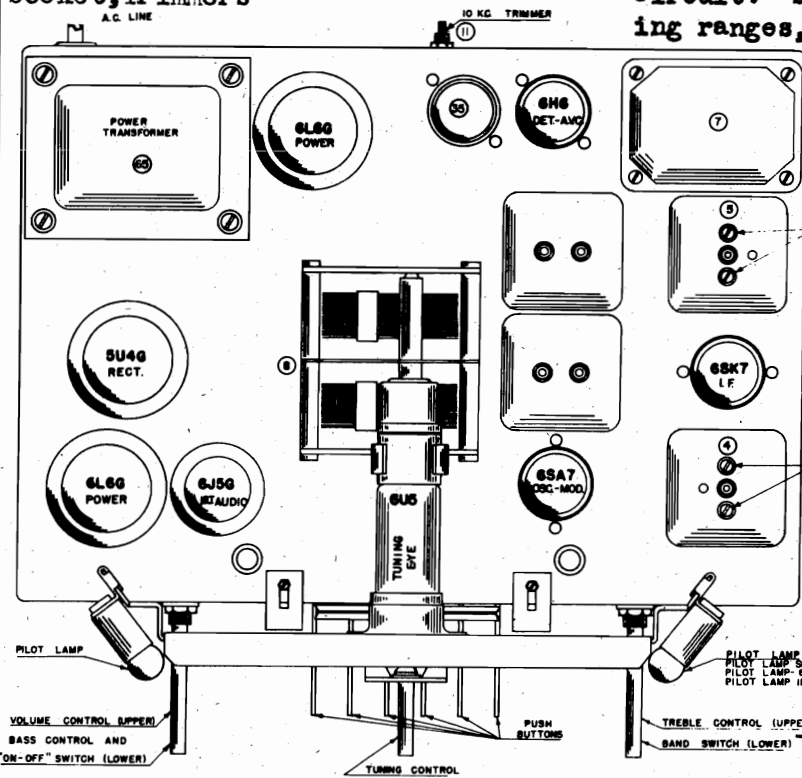


CR-136
595173

THE MAGNAVOX CO., INC.

CHASSIS CR140, CR150
CR151
Chassis, Alignment
Socket, Trimmers

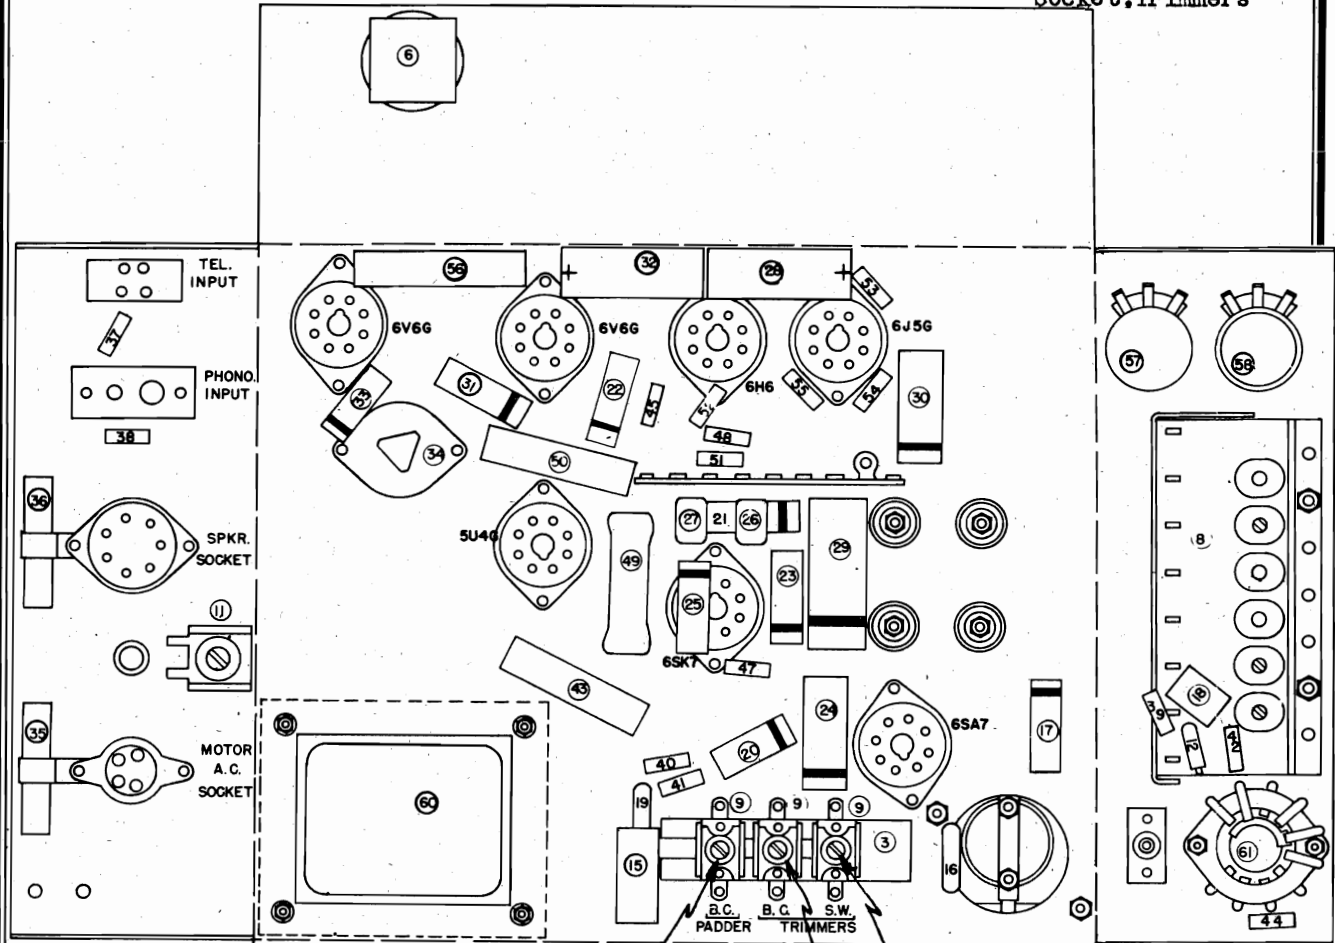

CR-140, 150, 151.
595184

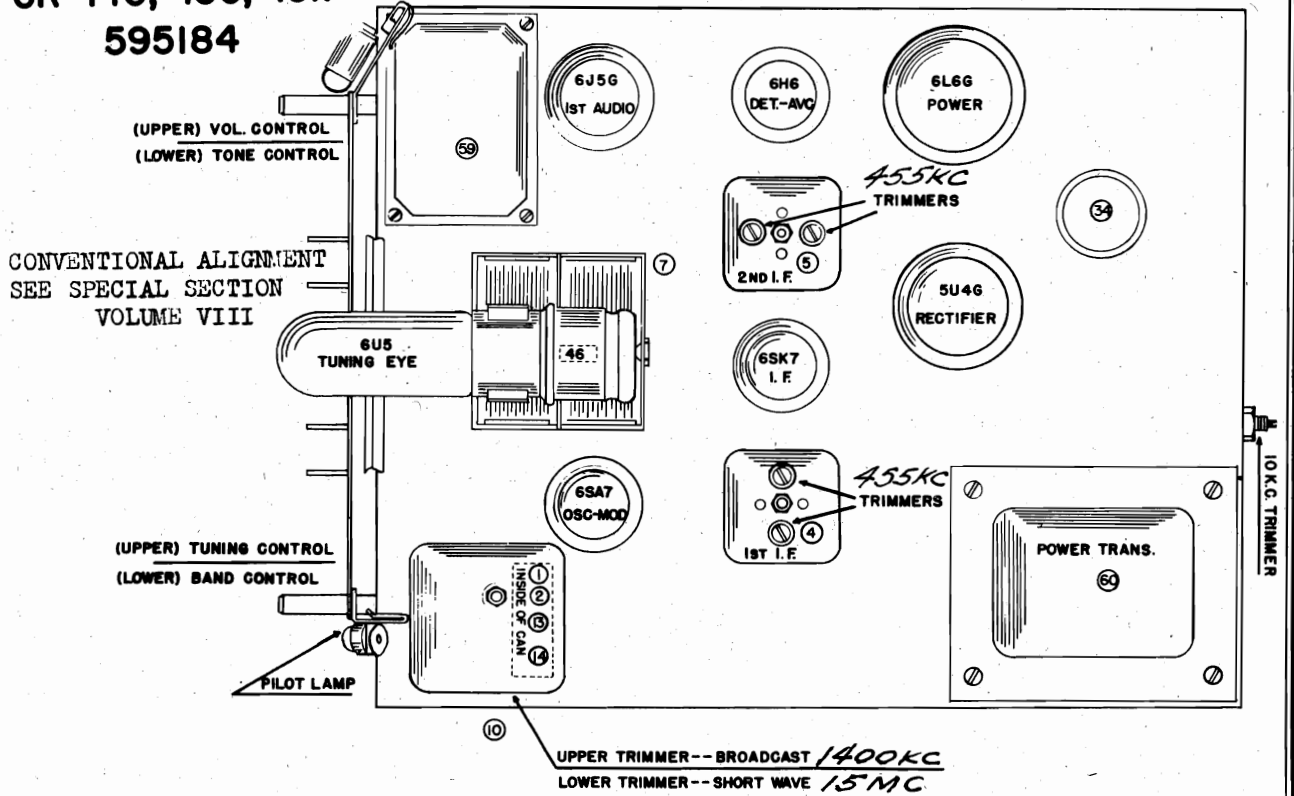

CHASSIS CR153
Chassis Alignment
Socket, Trimmers
Notes

THE MAGNAVOX CO., INC.

TO REMOVE THE CHASSIS FROM THE CABINET.

BERKELEY AND HEPPLEWHITE UNITS

1. Remove the four plugs from the lower side of the chassis and remove the antenna-ground terminal board from the side of the cabinet.
2. Pull the control knobs and the push button knobs from their shafts.
3. Remove the stay-hinges from the lid of the cabinet by removing the two upper wood screws holding it in place. Tilt the cabinet lid back and rest it on a support.
4. Remove the stay-hinge plate from the radio panel.
5. Remove the Phillips-head wood screws, securing the radio panel, and lift the panel from the cabinet.
6. Loosen the four screws securing the chassis to the cabinet cleats, and lift the chassis from the cabinet.


CAUTION: Do not remove the mounting brackets from the chassis at any time.

CR 153-595196

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII.

SPECIFICATIONS


- Primary voltage.....117 V. AC; Intermediate frequency.....155 KC;
 Power consumption.....103 watts; Tuning frequency range 575 - 1770 KC;
 Power output.....12 watts; 1.55 - 5.8 MC;
 5.60 - 15.2 MC;
Speaker: Circuit: Superheterodyne with three tuning ranges, treble and bass controls, bass Field Coil.....1000 ohms; compensation in volume control for phono-Transformer.....8000 ohms; graph pickup, A.V.C.; condenser type push-button tuner, variable selectivity.

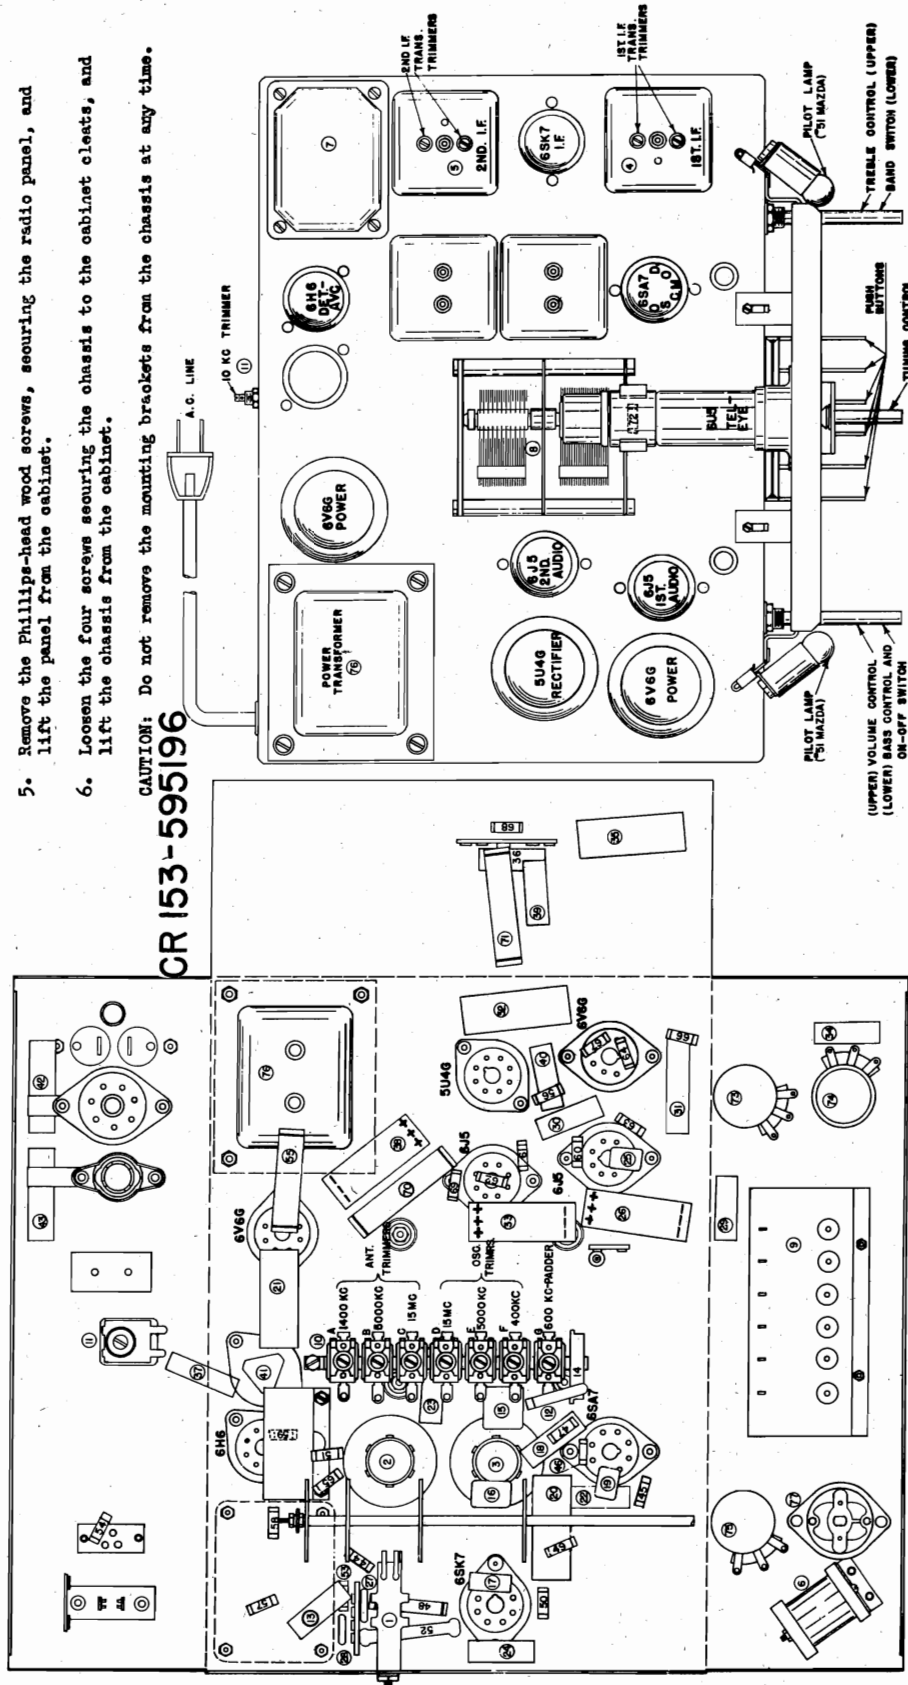

THE MAGNAVOX CO., INC.

CHASSIS CR141, CR142
Schematic, Voltage

In the first production, Item 29 was .006 mfd. This should be replaced with a .003 mfd. 600 V. tubular condenser.

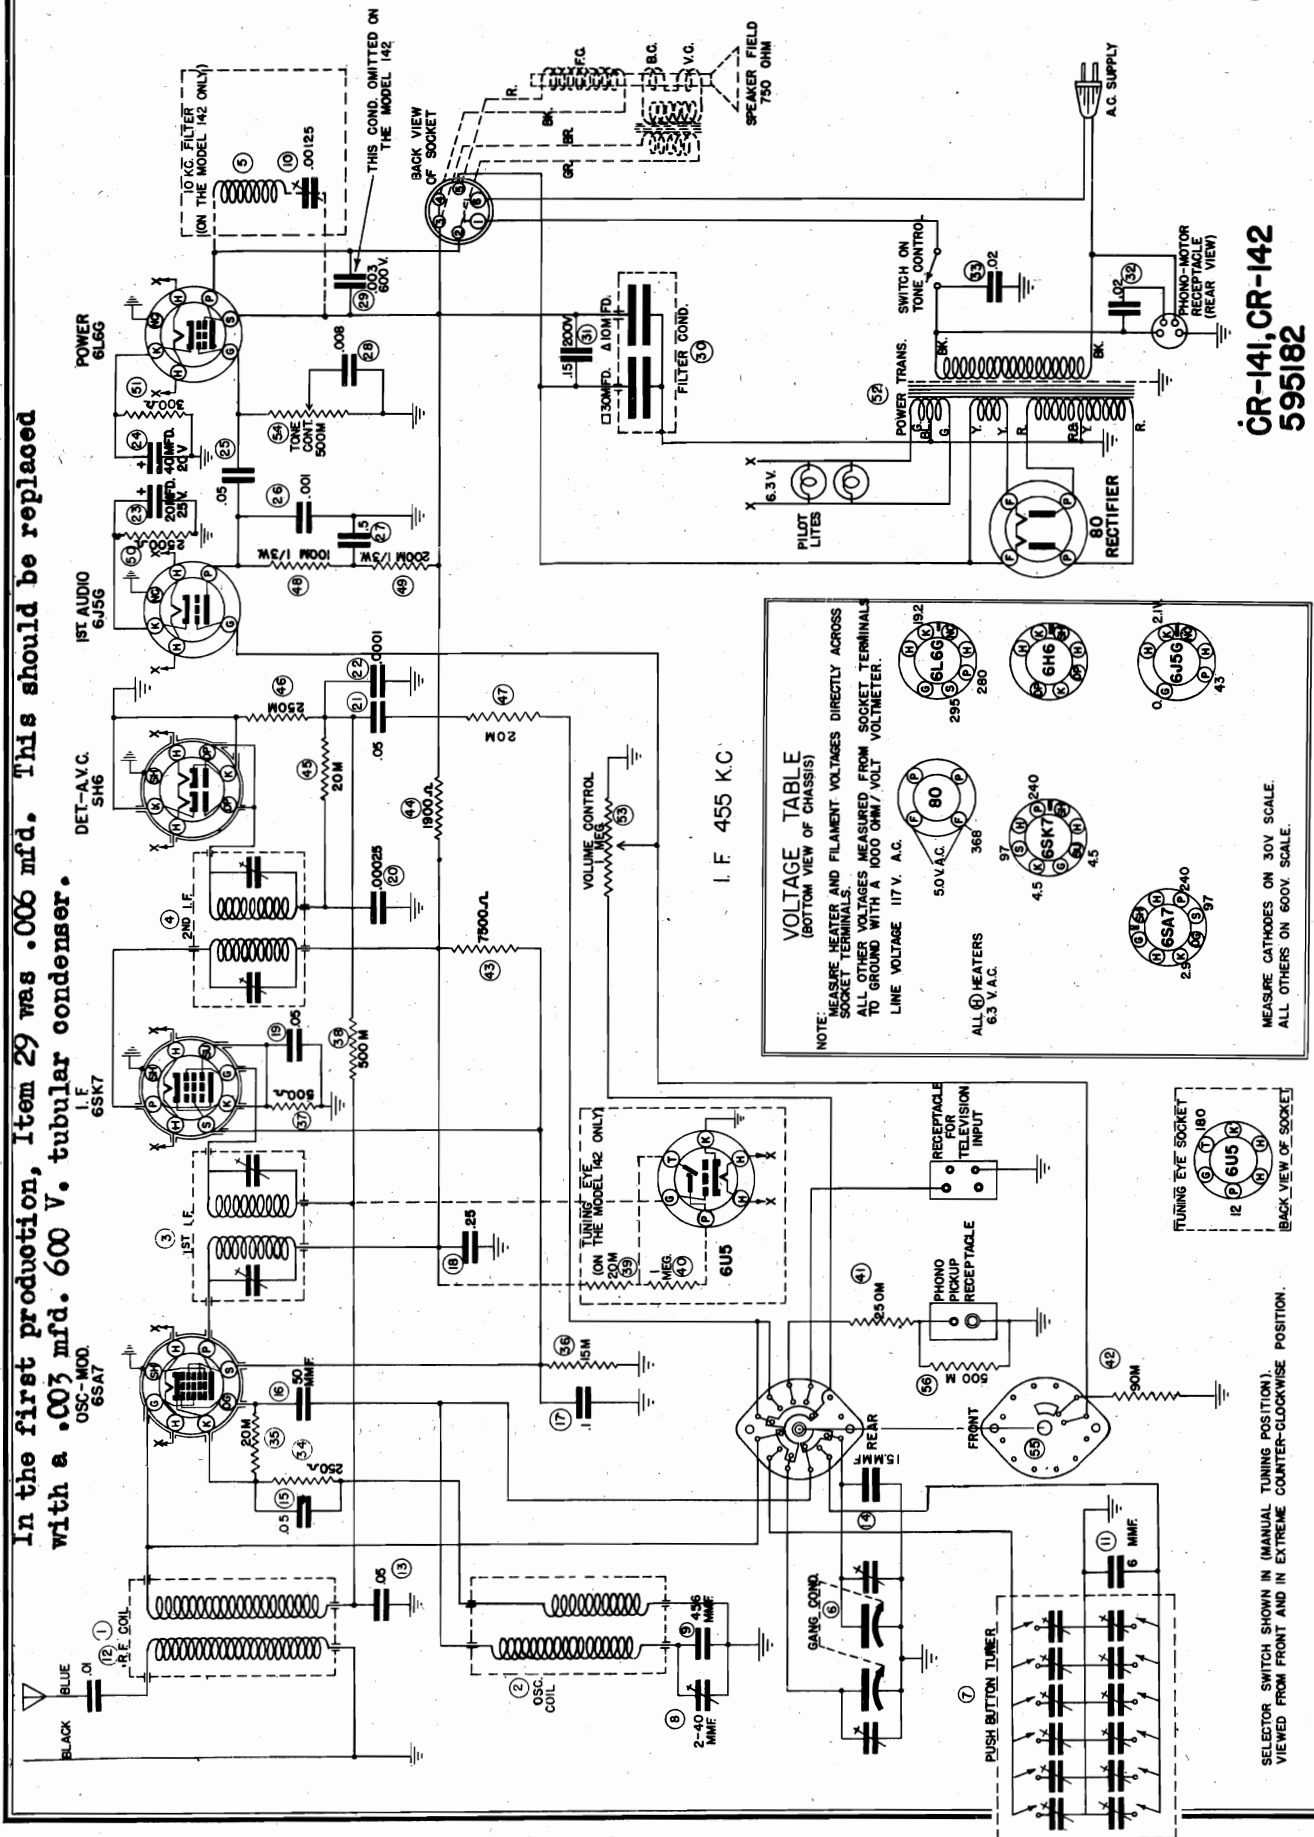

CR-141, CR-142
595182

VOLTAGE TABLE
(BOTTOM VIEW OF CHASSIS)

NOTE: MEASURE HEATER AND FILAMENT VOLTAGES DIRECTLY ACROSS SOCKET TERMINALS. ALL OTHER VOLTAGES MEASURED FROM SOCKET TERMINALS TO GROUND WITH A 1000 OHM, 7-VOLT VOLTMETER.

LINE VOLTAGE 117 V. A.C.

6L6G	295	280	6H6	280	6J5G	45
80	368	57	6SK7	4.5	6SA7	2.5
6U5	2.5	2.5	6U5	2.5	6U5	2.5

ALL HEATERS 6.3 V.A.C.

MEASURE CATHODES ON 30V SCALE.
ALL OTHERS ON 600V SCALE.

CHASSIS CR141, CR142
 Chassis Alignment
 Socket, Trimmers

THE MAGNAVOX CO., INC.


Intermediate frequency.....455 KC;
 Tuning frequency range... 535-1730 KC;
 Circuit: Superheterodyne with treble
 control; push-button condenser type
 tuner; A.V.C.; bass compensation in
 volume control for phonograph pickup;
 television input receptacle.

CR-141 --- Used in Concerto Combination
 Used in Modern Table Combination
 Used in Sheraton Table Combination

CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION
 VOLUME VIII


SPECIFICATIONS

Primary voltage.....117 V. AC; Speaker:
 Field Coil.....1000 ohms;
 Transformer.....8000 ohms;
 Power consumption.....82 watts;
 Power output.....6 watts;

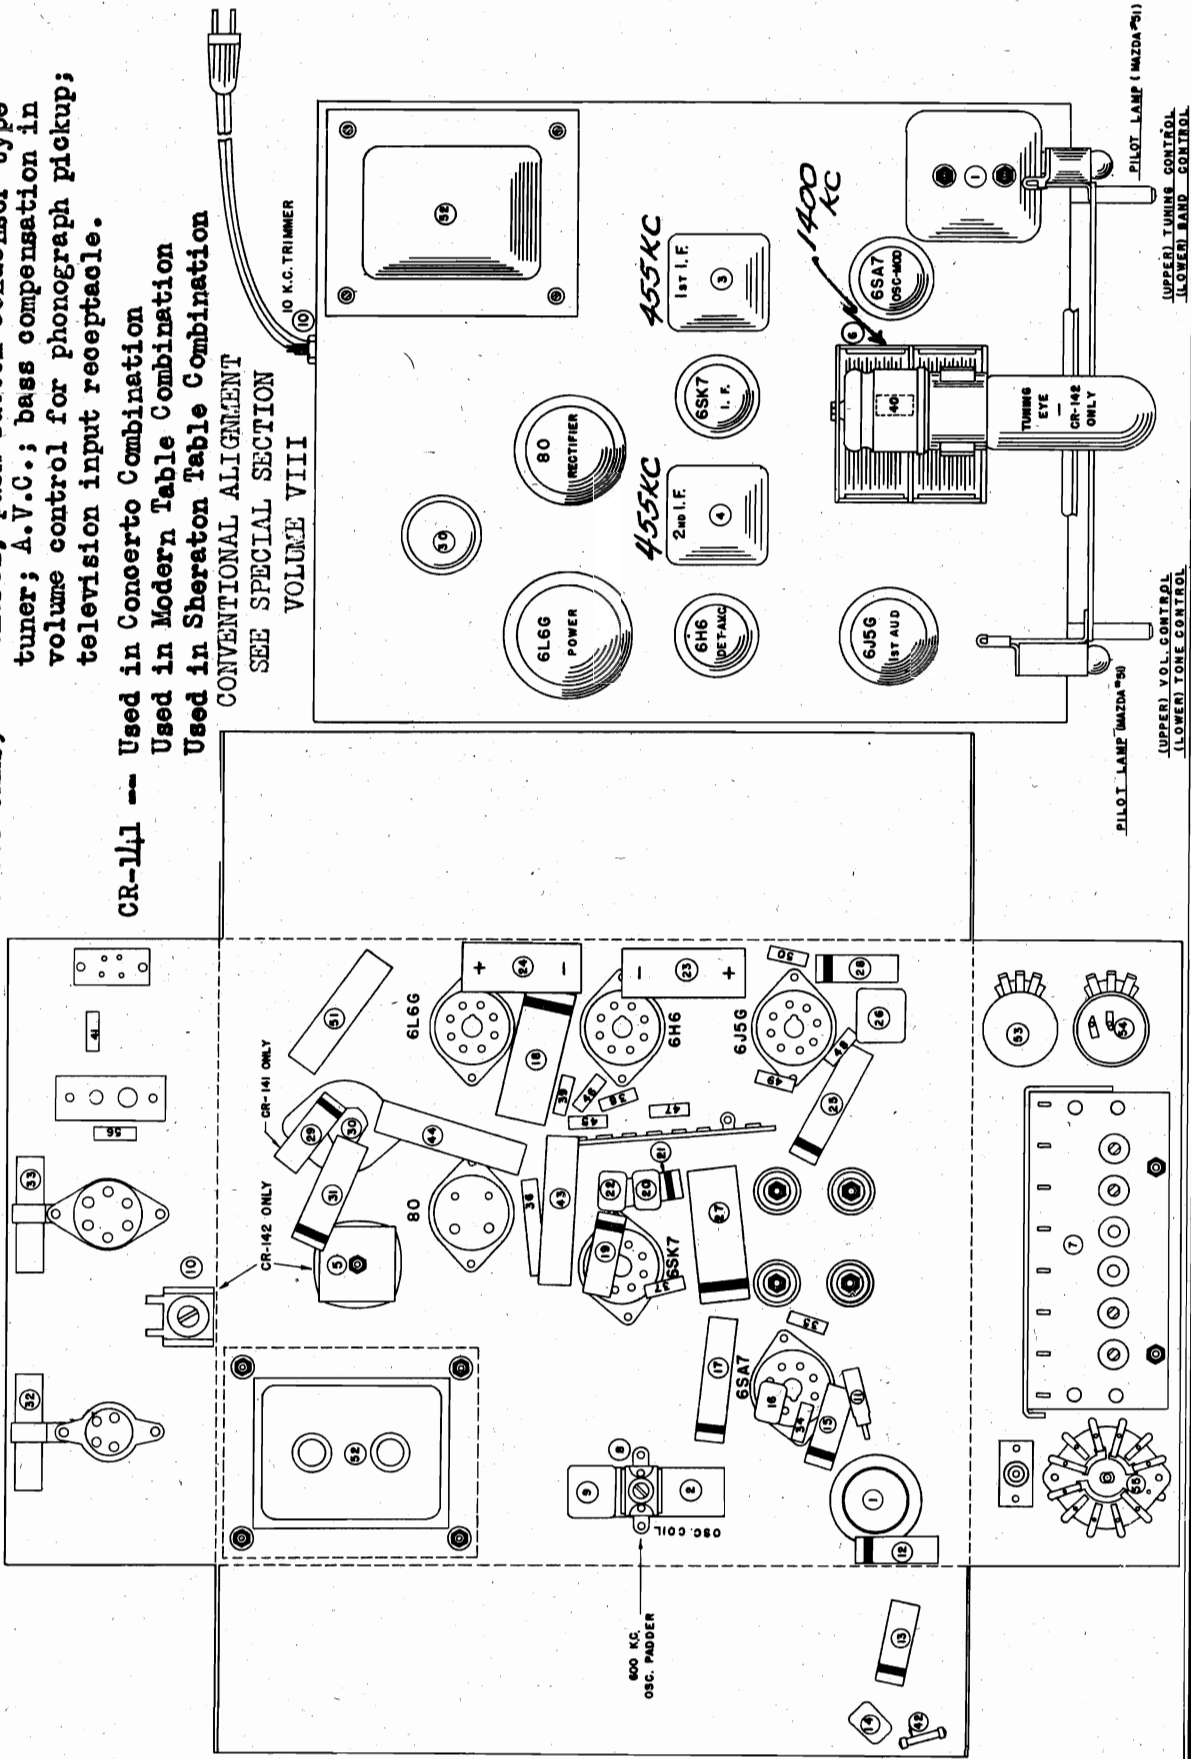

MAJESTIC RADIO & TELEV. CORP

MODELS 1A50A, 1A50F
1A50H, 1A50AB, 1A50FB
1A50HB, 1A50, 1A50B
MODEL 1D50MB
Schematics, Alignment
Socket, Trimmers, Tuner

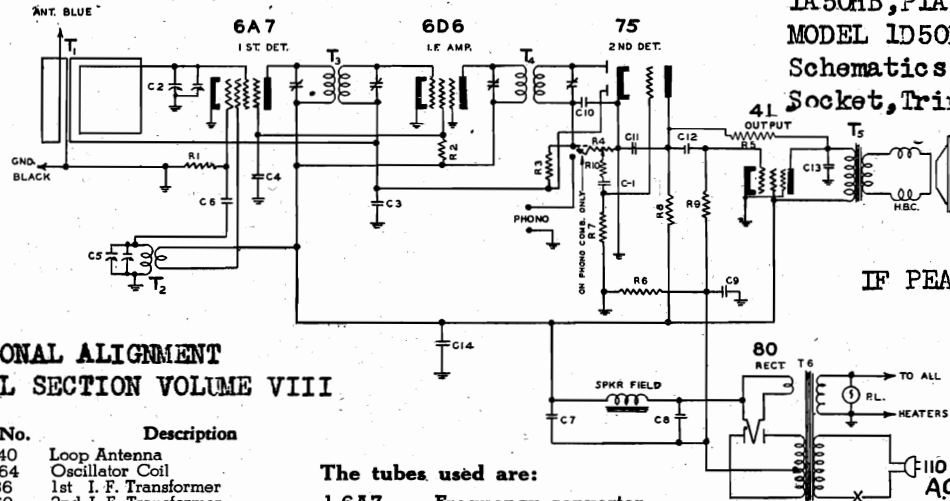



CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII

Schematic Location	Part No.	Description
T1	Y-CR-40	Loop Antenna
T2	Y-CS-64	Oscillator Coil
T3	Y-CI-36	1st I. F. Transformer
T4	Y-CI-60	2nd I. F. Transformer
T5		Speaker Output Transformer
T6	Y-TP-30	Power Transformer
C1, C12	C-15754	Tubular cond. .01 mfd. 400V
C2, C5	Y-CV-37	Variable Condenser
C3	C-15752	Tubular cond. .05 mfd. 200V
C4	C-15756	Tubular cond. .05 mfd. 400V
C6	CM-29	Mica cond. 50 mmf. 30%
C10, C11	CM-30	Mica cond. 250 mmf. 30%
C7, C8, C9	Y-CE-43	Electrolytic Condenser
C13	C-25	Tubular cond. .006 mfd. 400V
C14	C-15757	Tubular cond. .1 mfd. 400V
R1	R-15511	Carbon res. 50Kohm 1/4W20%
R2	R-83	Carbon res. 35Kohm 1W20%
R3	R-15500	Carbon resistor 2meg 1/4W20%
R4	Y-VC-30	Volume Control
R5	R-15559	Carbon resistor 3meg 1/4W20%
R6	R-117	Carbon res. 275 ohm 1/2W20%
R7	R-109	Carbon resistor 5meg 1/4W20%
R8, R9	R-15520	Carbon res. 500Kohm 1/4W20%
R10	R-15515	Carbon res. 100Kohm 1/4W20%
P.L.	LB-44	Pilot Light Mazda #44

The tubes used are:

- 1-6A7 Frequency converter
- 1-6D6 Intermediate frequency amplifier
- 1-75 2nd Detector, AVC, and audio driver
- 1-41 Power output
- 1-80 Rectifier

- Model 1A50-A
- Model 1A50-F
- Model 1A50-H
- Model P-1A50
- Model 1A50-A-B
- Model 1A50-F-B
- Model 1A50-H-B
- Model P-1A50-B

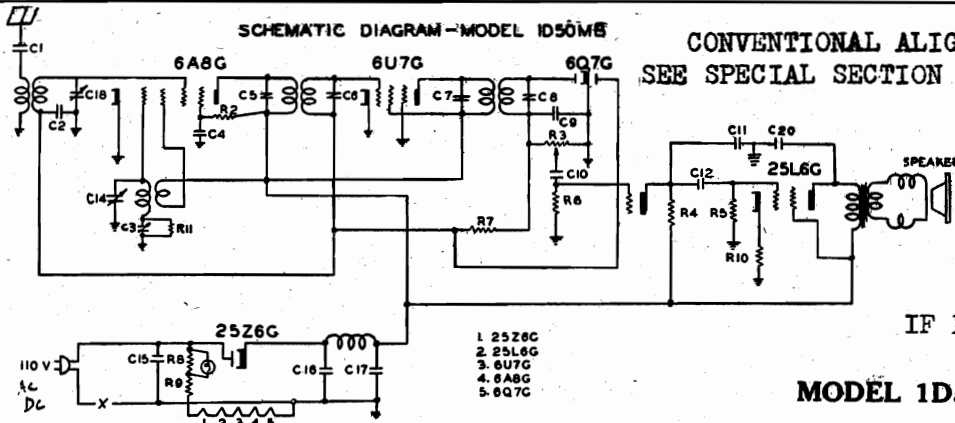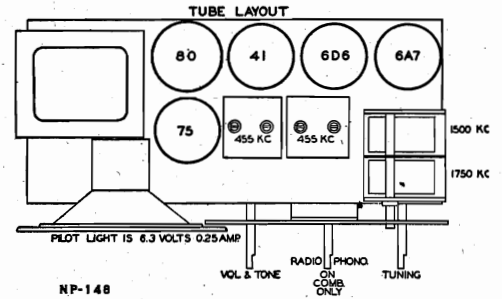

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII


MODEL 1D50-MB

PUSH-BUTTONS: Unscrew the push-button on which you desire to receive a certain station. Tune in this station manually. Push in the push button and screw it tightly while holding it in. Repeat for other stations. Insert station tabs in the escutcheons by snapping them in place. Pushing in any button will cause the desired station to be heard.

Schematic Location	Part No.	Description
C1, C12	C-15754	Tubular cond. .01 mfd. 400V
C2, C4	C-15752	Tubular cond. .05 mfd. 200V
C15	C-15756	Tubular cond. .05 mfd. 400V
C10	C-15753	Tubular cond. .002 mfd. 600V
C16, C17, C13	Y-CE-46	Electrolytic
C9	CM-30	Mica cond. 250 mmf. 30%
C11	CM-31	Mica cond. 100 mmf. 30%
C3	Y-CP-8	Padding Condenser
R11	R-15511	Carbon res. 50Kohm 1/4W20%
R5	R-15520	Carbon res. 500Kohm 1/4W20%
R4	R-15512	Carbon res. 250Kohm 1/4W20%
R6	R-79	Carbon resistor 15meg 1/4W20%
R10	R-46	Carbon res. 110 ohm 1/4W20%
R7	R-15500	Carbon resistor 2meg 1/4W20%
R3	Y-CV-25	Volume Control
R8, R9	L-49-B	Plug in Ballast Resistor

The tubes used are:


- 1-6A8G Converter
- 1-6U7G I. F. Amplifier
- 1-6Q7G 2nd Detector
- 1-25L6G Beam Output
- 1-25Z6G Rectifier
- 1-L49B Plug-in Ballast Resistor

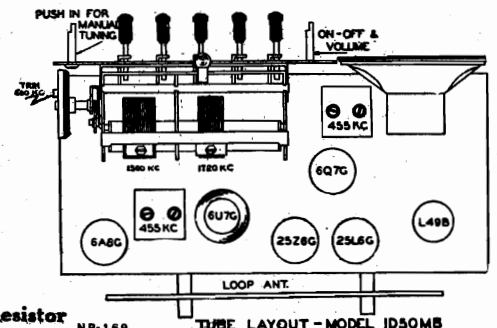

MODEL 1D59-EB-PL
Schematic, Socket
Alignment, Trimmers
Tuner

MAJESTIC RADIO & TELEV. CORP.

- The tubes used are:
- 1-6A7 Frequency converter
 - 1-6D6 Intermediate frequency amplifier
 - 1-75 2nd detector, AVC, and A. F. Amplifier
 - 1-25Z5 Rectifier
 - 1-L49B Plug-in Ballast Resistor

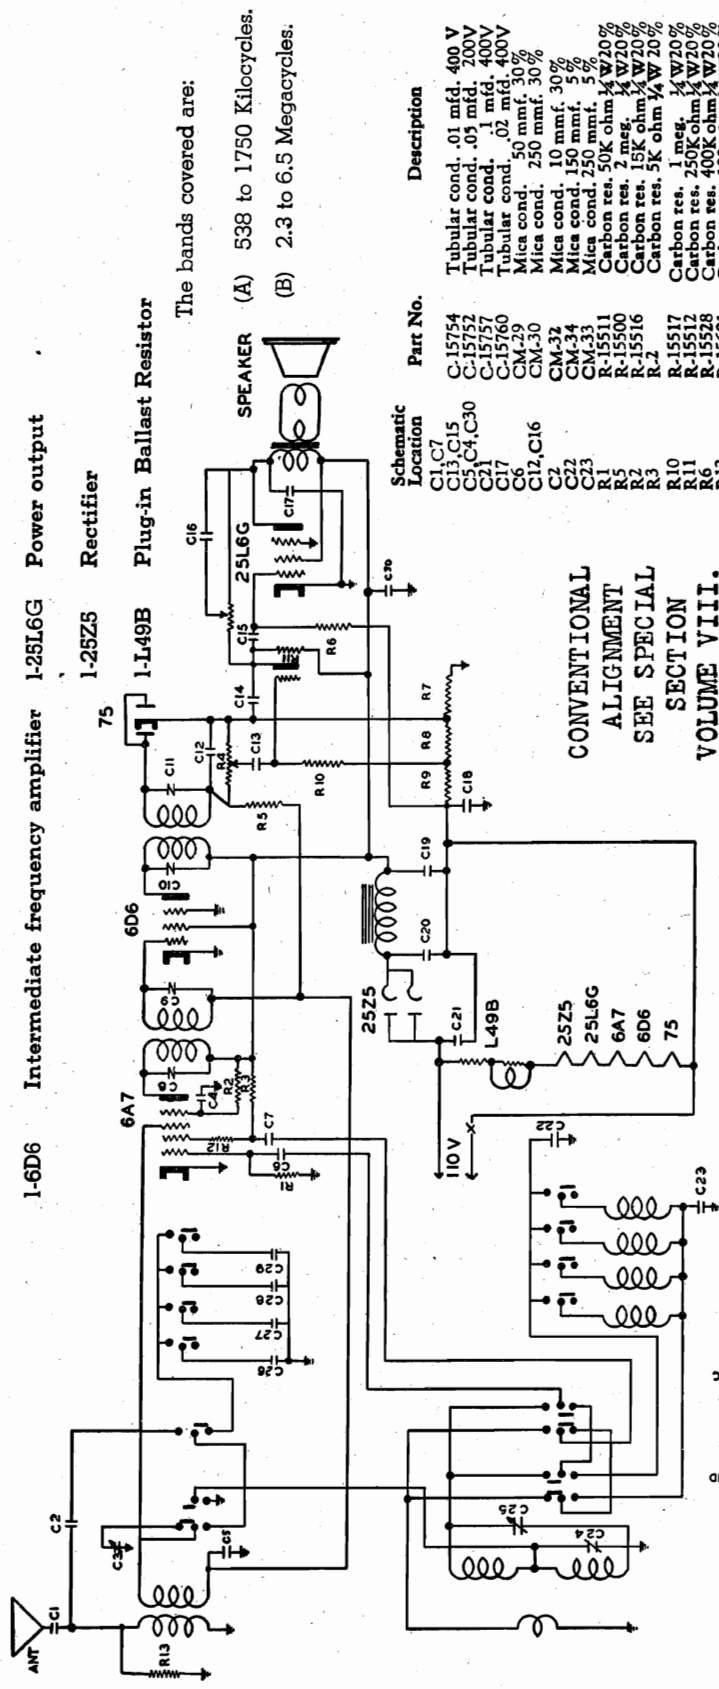

The bands covered are:
(A) 538 to 1750 Kilocycles.
(B) 2.3 to 6.5 Megacycles.


Schematic Location	Part No.	Description
C1, C7	C-15754	Tubular cond. .01 mfd. 400 V
C13, C15	C-15752	Tubular cond. .05 mfd. 200V
C3, C4, C30	C-15757	Tubular cond. .1 mfd. 400V
C21	C-15760	Tubular cond. .02 mfd. 400V
C17	CM-29	Mica cond. 50 mmf. 30%
C6	CM-30	Mica cond. 250 mmf. 30%
C2	CM-32	Mica cond. 10 mmf. 30%
C22	CM-34	Mica cond. 150 mmf. 5%
C23	CM-33	Mica cond. 250 mmf. 5%
R1	R-15511	Carbon res. 50K ohm 1/4 W 20%
R5	R-15500	Carbon res. 7 meg. 1/4 W 20%
R2	R-15516	Carbon res. 15K ohm 1/4 W 20%
R3	R-2	Carbon res. 5K ohm 1/4 W 20%
R10	R-15517	Carbon res. 1 meg. 1/4 W 20%
R11	R-15512	Carbon res. 250K ohm 1/4 W 20%
R6	R-15528	Carbon res. 400K ohm 1/4 W 20%
R7	R-15601	Carbon res. 100 ohm 1/4 W 20%
R12	RC-8	Candohm Resistor
R7, R8, R9	R-15531	Carbon res. 10K ohm 1/4 W 20%
R13	Y-VC-33	Volume and tone control

CONVENTIONAL
ALIGNMENT
SEE SPECIAL
SECTION
VOLUME VIII.

ADJUSTMENTS OF PUSH BUTTONS

These push-buttons are adjusted so as to come within three (3) frequency ranges. The first button from the left is for stations lying between 1200 and 1600 kilocycles. The second (2) button is for stations lying between 800 and 1350 kilocycles. The third (3) and fourth (4) buttons are for stations lying between 540 and 1100 kilocycles. To set up these buttons, determine which four (4) stations you wish to receive most frequently. Ascertain their frequencies and determine on which button they should be set up. Push in the button on which a particular station is to be set up and, with a screw driver, turn the screw at the rear of the chassis corresponding to this push-button, until the station you desire to hear is received with best quality and tone. Go to the top rear of the chassis and adjust the corresponding trimmer condenser until that station is heard with maximum volume. Repeat for the other push-buttons. The location of these adjustment points is shown in figure 1.


IF PEAK 455 KC

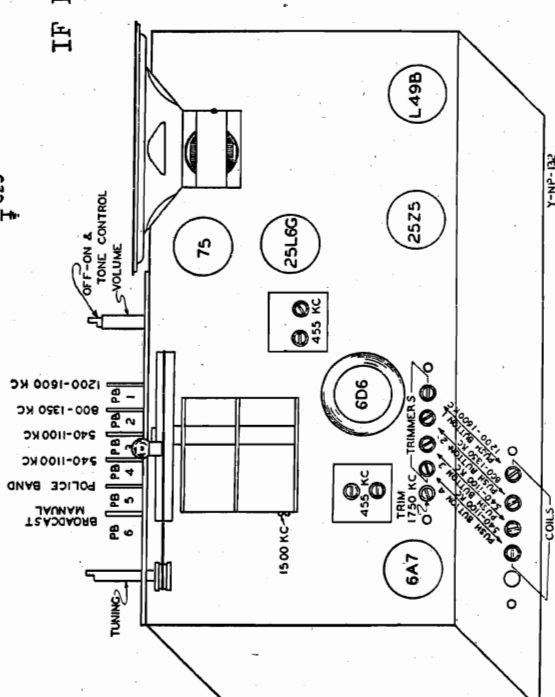

MAJESTIC RADIO & TELEV. CORP.

MODELS 1M40I, 1M40R
1M40W

Schematic, Socket
Alignment, Trimmers

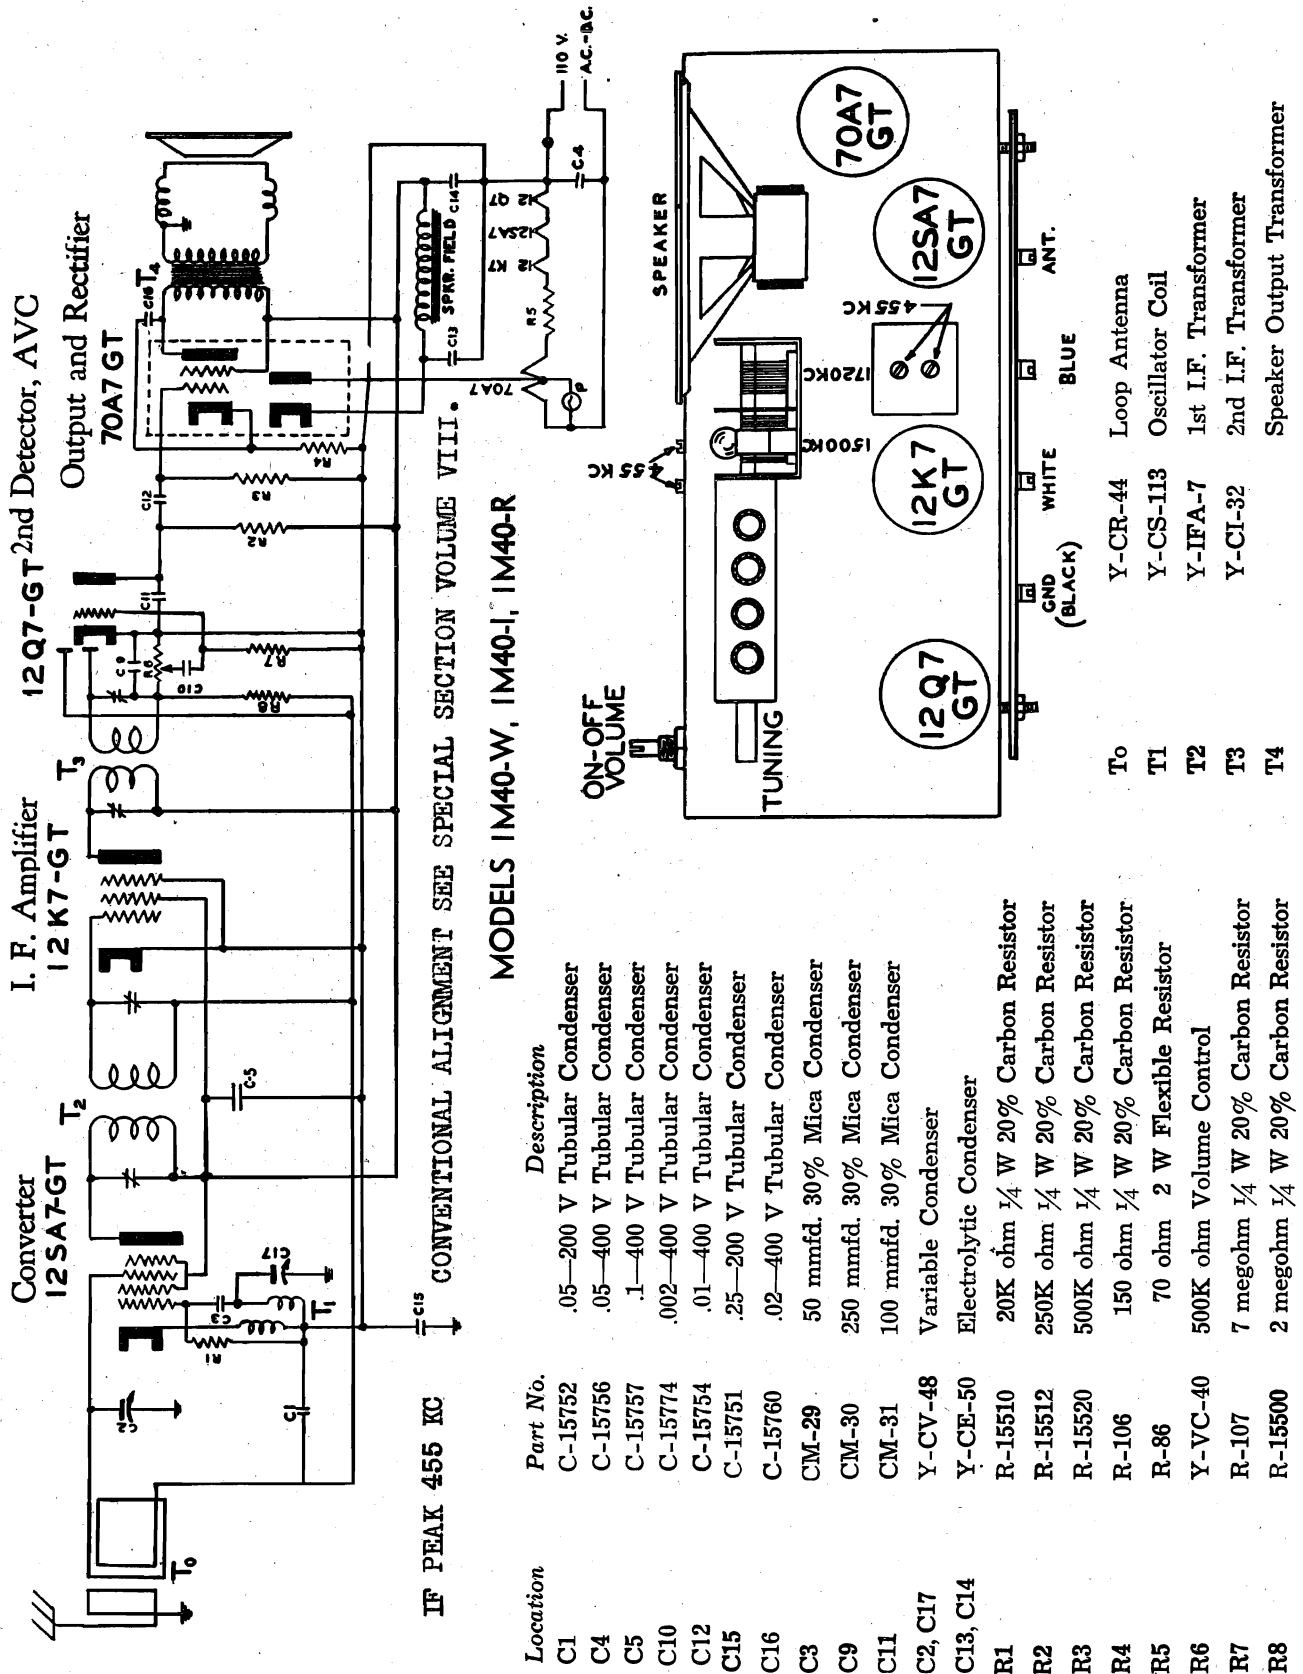

MODELS 1M40 Series
 MODELS 380 Series
 MODELS 390 Series
 Tuner Data


MAJESTIC RADIO & TELEV. CORP
 MODELS 5BDA, 5BEA
 Tuner, Socket, Trimmers
 Alignment

MODEL 1M40.

ADJUSTMENT OF PUSH BUTTONS

Determine on which push button you wish to set a particular station. Pull off that button. Using a screw driver, loosen the screw covered by the button. Tune the set manually by means of the station dial drum until the desired station is heard with best tone and volume. Push the push button shaft as far as it will go, tighten the screw, insert the proper station tab in the slot of the push button, and replace the push button on the push button shaft. Repeat for other stations.

CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION
 VOLUME VIII

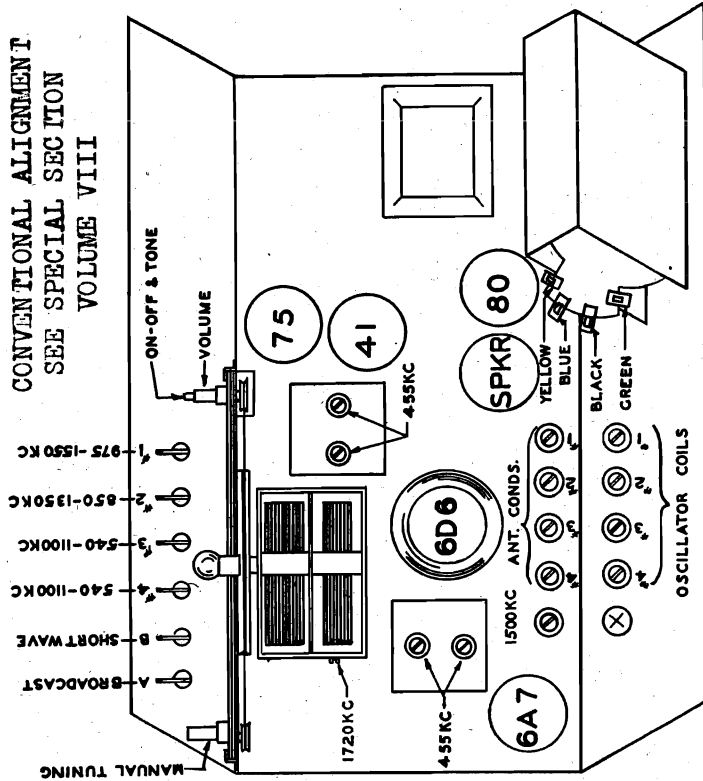

MODELS 5BDA, 5BEA

MODELS 3C80, 3C80P, 380; 3SC80, 3SC80B; 3C90, 390; 3C90.

PUSH BUTTON TUNING

Six buttons on this set are provided to allow you to select your favorite station in the broadcast band instantaneously without any operation except that of pushing a button. These buttons start from the fourth from the left to the fourth from the right, inclusive, and numbering them from the left to the right, as 1, 2, 3, 4, 5, and 6. The buttons numbered 1, 2, and 3 are designed to cover the frequency range from 1700 to 800 Kc. Buttons number 4, 5, and 6 are designed to cover the range from 1200 to 540 Kc. To set up these buttons it is only necessary to select one of the buttons which includes the frequency of the station which you wish to receive, and depress that button. Select the corresponding screw in the back of the receiver and with a small screw driver adjust it by turning the screw in or out until the station is being received as well as possible. Then, using the same screw driver, adjust the corresponding trimmer from the top of the chassis until maximum volume is obtained on that station. The other buttons may be adjusted in exactly the same fashion to different stations. Every time a button is adjusted for a certain station, remove the call letter tab from the sheet of call letters furnished with the receiver, and insert it through the small slit in the side of the knob so that the call letters show through the top of the knob. After the buttons have been once adjusted in this fashion, it is only necessary to press the button marked with the call letters of the station you wish to receive, whereupon it will be heard instantaneously.

MODELS 5BDA, 5BEA

PUSH BUTTONS: Looking at the front of the set counting from left to right, the first four push buttons are for setting up stations.


- Button number 1 is for stations lying between 975 and 1550 Kilocycles
- Button number 2 is for stations lying between 850 and 1350 Kilocycles
- Button number 3 is for stations lying between 540 and 1100 Kilocycles
- Button number 4 is for stations lying between 540 and 1100 Kilocycles
- Button number A is for Broadcast Band.
- Button number B is for Short Wave Band

Determine on which button a desired station is to be set up. Push that button in. Going to the rear of the receiver, adjust the coil corresponding to the chosen push button until the desired station is heard with maximum volume and best tone. Adjust the trimmer corresponding to the chosen button until that station is heard with maximum volume. Repeat for other push buttons.

Socket Trimmers
Tuner

MAJESTIC RADIO & TELEV. CORP.

MODELS 2A50F, 2A50FB
2A50FM, 2A50FMB
Schematic, Alignment

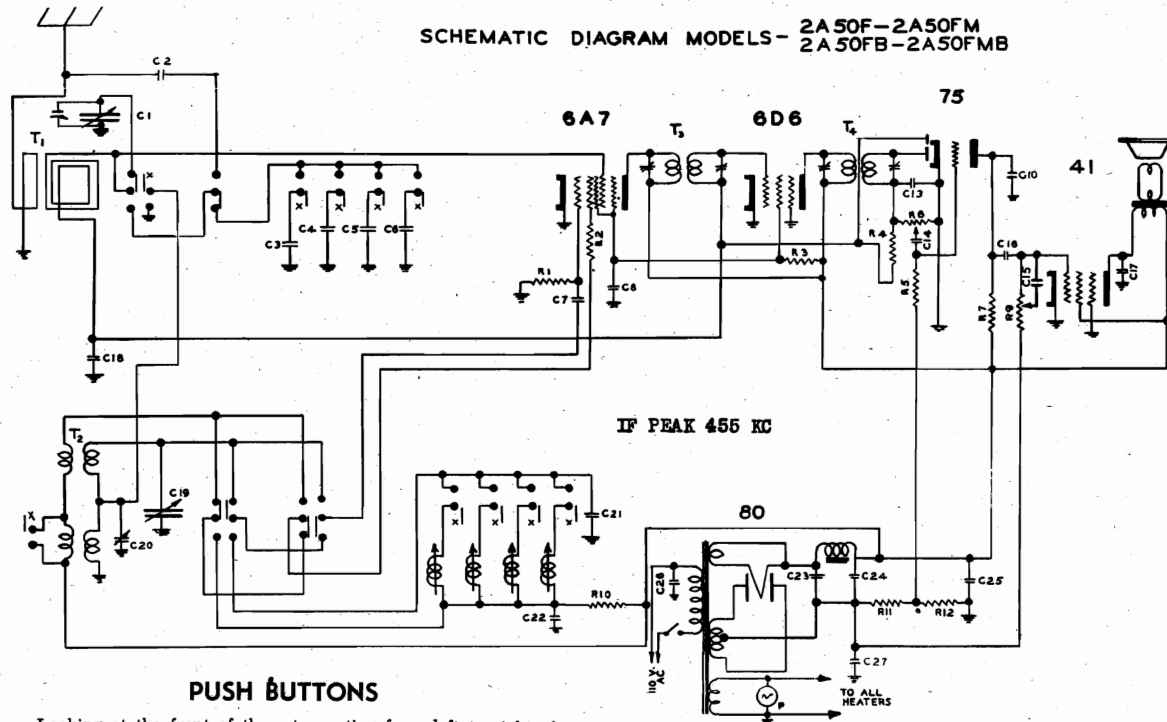


PUSH BUTTONS

Looking at the front of the set counting from left to right, the first four push buttons are for setting up stations. Button number 1 is for stations lying between 975 and 1550 Kilocycles. Button number 2 is for stations lying between 850 and 1350 Kilocycles. Button number 3 is for stations lying between 540 and 1100 Kilocycles. Button number 4 is for stations lying between 540 and 1100 Kilocycles. Button number A is for Broadcast Band. Button number B is for Short Wave Band.

Determine on which button a desired station is to be set up. Push that button in. Going to the rear of the receiver, adjust the coil corresponding to the chosen push button until the desired station is heard with maximum volume and best tone. Adjust the trimmer corresponding to the chosen button until that station is heard with maximum volume. Repeat for other push buttons.

Plug in the line cord to an AC power line of 105-130 Volts of 60 Cycles for Models 2A50-F and 2A50-F-M, and 50 or 60 Cycles for Models 2A50-F-B and 2A50-F-M-B.

- The tubes used are:
- 1-6A7 Frequency converter
 - 1-6D6 Intermediate frequency amplifier
 - 1-75 Second detector, AVC, and Audio frequency amplifier
 - 1-41 Output
 - 1-80 Rectifier

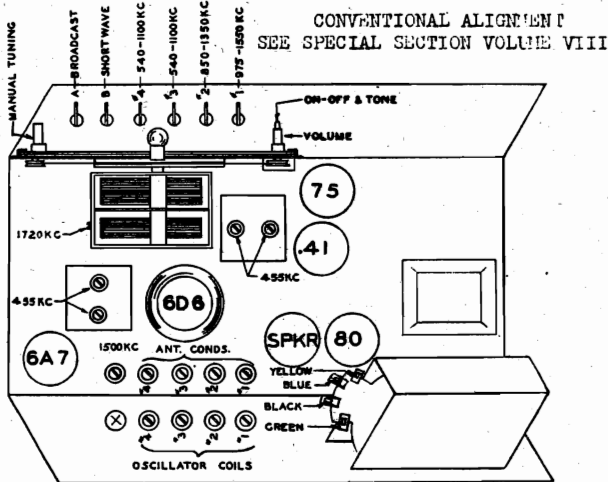

TUBE LAYOUT MODEL 2A50
(See Figure No. 1)

REPLACEMENT PARTS LIST FOR MODELS 2A50-F, 2A50-F-B, 2A50-F-M, 2A50-F-M-B

Schematic Location	Part Number	Description
R1	R-15511	50K ohm 1/4 W 20% Carbon Resistor
R2	R-15601	100 ohm 1/4 W 20% Carbon Resistor

Schematic Location	Part Number	Description
R3	R-15544	15K-ohm 1 W 20% Carbon Resistor
R4	R-15500	2 megohm 1/4 W 20% Carbon Resistor
R5	R-15517	1 megohm 1/4 W 20% Carbon Resistor
R6, R9	Y-VC-33	Volume and Tone Control
R7	R-15512	250K ohm 1/4 W 20% Carbon Resistor
R10	R-2	5000 ohm 1/4 W 20% Carbon Resistor
R11	R-82	35 ohm 1/4 W 20% Carbon Resistor
R12	R-98	150 ohm 1/2 W 10% Carbon Resistor
T1	Y-CS-100	Loop Antenna
T2	Y-CS-102	Oscillator Coil
T3	Y-CI-40	1st I.F. Transformer
T4	Y-CI-42	2nd I.F. Transformer
C2, C14	C-15754	.01 mfd. 400 V Tubular Condenser
C8, C25	C-15756	.05 mfd. 400 V Tubular Condenser
C15	C-30	.001 mfd. 400 V Tubular Condenser
C16, C17	C-25	.006 mfd. 400 V Tubular Condenser
C18	C-15752	.05 mfd. 200 V Tubular Condenser
C26	C-18	.01 mfd. 400 V 20% Tubular Ceramic
C7	CM-29	50 mmf. 30% Mica Condenser
C10	CM-31	100 mmf. 30% Mica Condenser
C22	CM-33	250 mmf. 5% Mica Condenser
C21	CM-34	150 mmf. 5% Mica Condenser
C3, C4, C5, C6	Y-CT-30B	Trimmer Strip
C20	Y-CE-43	Electrolytic Condenser
C23, C24, C27	Y-CE-43	Electrolytic Condenser

MODELS 3C70, 360


Schematic, Alignment MAJESTIC RADIO & TELEV. CORP.

Socket, Trimmers

Tuner

3C70
SCHEMATIC DIAGRAM - MODEL 360

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII

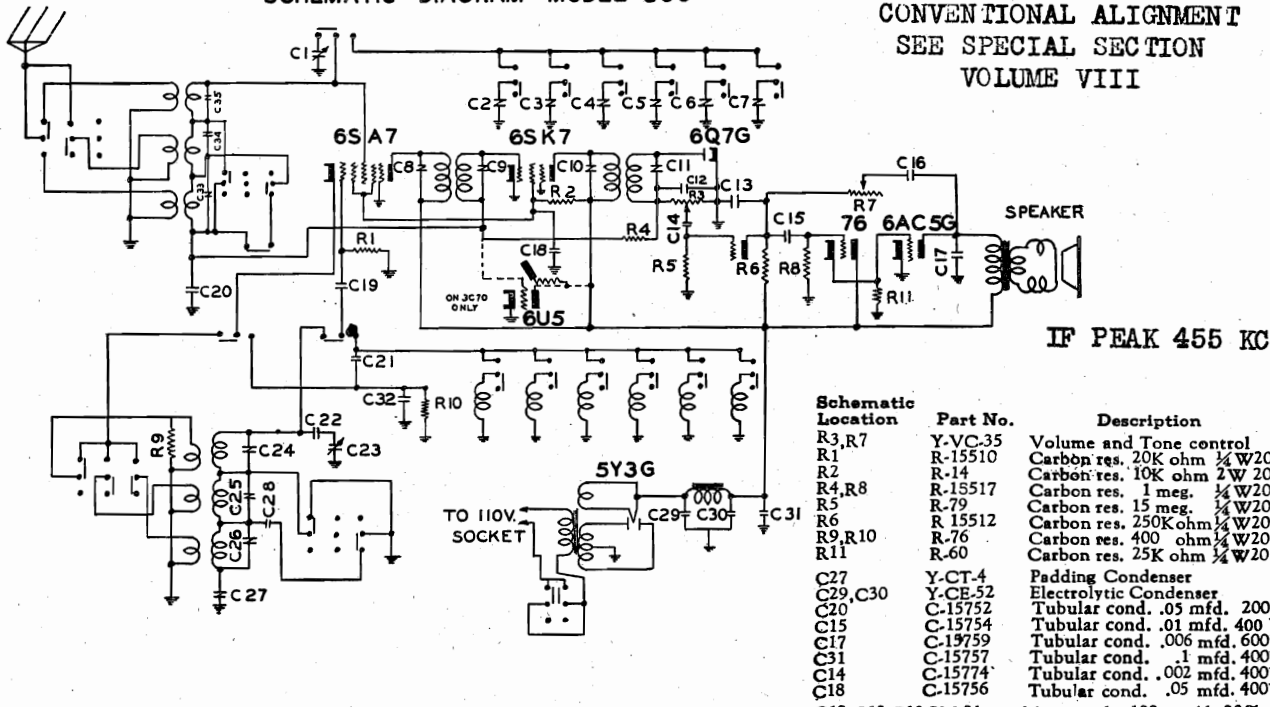

IF PEAK 455 KC

Schematic Location	Part No.	Description
R3, R7	Y-VC-35	Volume and Tone control
R1	R-15510	Carbon res. 20K ohm 1/4 W 20%
R2	R-14	Carbon res. 10K ohm 2 W 20%
R4, R8	R-15517	Carbon res. 1 meg. 1/4 W 20%
R5	R-79	Carbon res. 15 meg. 1/4 W 20%
R6	R-15512	Carbon res. 250K ohm 1/4 W 20%
R9, R10	R-76	Carbon res. 400 ohm 1/4 W 20%
R11	R-60	Carbon res. 25K ohm 1/4 W 20%
C27	Y-CT-4	Padding Condenser
C29, C30	Y-CE-52	Electrolytic Condenser
C20	C-15752	Tubular cond. .05 mfd. 200V
C15	C-15754	Tubular cond. .01 mfd. 400 V
C17	C-19759	Tubular cond. .006 mfd. 600V
C31	C-15757	Tubular cond. .1 mfd. 400V
C14	C-15774	Tubular cond. .002 mfd. 400V
C18	C-15756	Tubular cond. .05 mfd. 400V
C12, C13, C19	CM-31	Mica cond. 100 mmfd. 30%
C16	CM-30	Mica cond. 250 mmfd. 30%
C22	CM-2	Mica cond. 4330 mmfd. 5%
C28	CM-36	Mica cond. 2770 mmfd. 5%
C21	CM-13	Mica cond. 100 mmfd. 5%
C32	CM-27	Mica cond. 2000 mmfd. 3%
C2, C3, C4, C5, C6, C7	GT-28	Trim. capacities for P. B. tuning


The receiver operates with the following tubes:

- 1-6SA7 Single ended frequency converter
- 1-6SK7 Single ended intermediate frequency amplifier
- 1-6Q7G 2nd detector, A. V. C. and A. F. driver
- 1-76 Output tube driver
- 1-6AC5G Dynamically coupled output stage
- 1-5Y3G Rectifier
- 1-6U5 Tuning indicator (Model 3C70 only)


SETTING UP OF PUSH-BUTTONS

- Button No. 1 is for stations lying between 1100 and 1550 KC's.
- " No. 2 is for stations lying between 950 and 1450 KC's.
- " No. 3 is for stations lying between 800 and 1200 KC's.
- " No. 4 is for stations lying between 620 and 950 KC's.
- " No. 5 is for stations lying between 620 and 950 KC's.
- " No. 6 is for stations lying between 540 and 800 KC's.

1. Select the stations that you wish to set up on the push-buttons.
2. Determine on which push-buttons these stations should be set up, according to above table.
3. Push the button on which you should set up a particular station.
4. Using a screw driver, adjust the coil corresponding to the proper push-button until the desired station is heard with maximum volume and best tone.
5. Adjust the trimmer condenser corresponding to the proper push-button until the desired station is heard with maximum volume.
6. Repeat for other push-buttons.

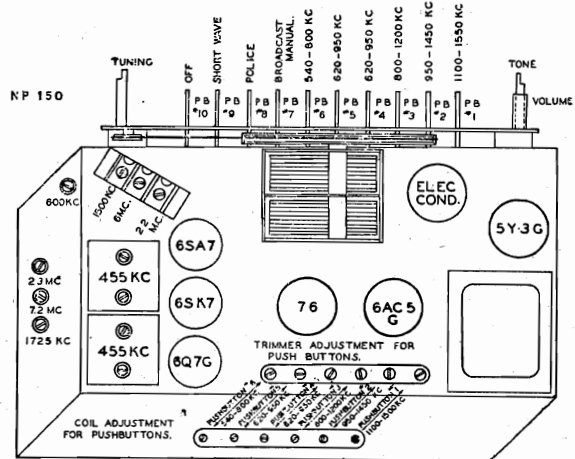


MAJESTIC RADIO & TELEV. CORP.

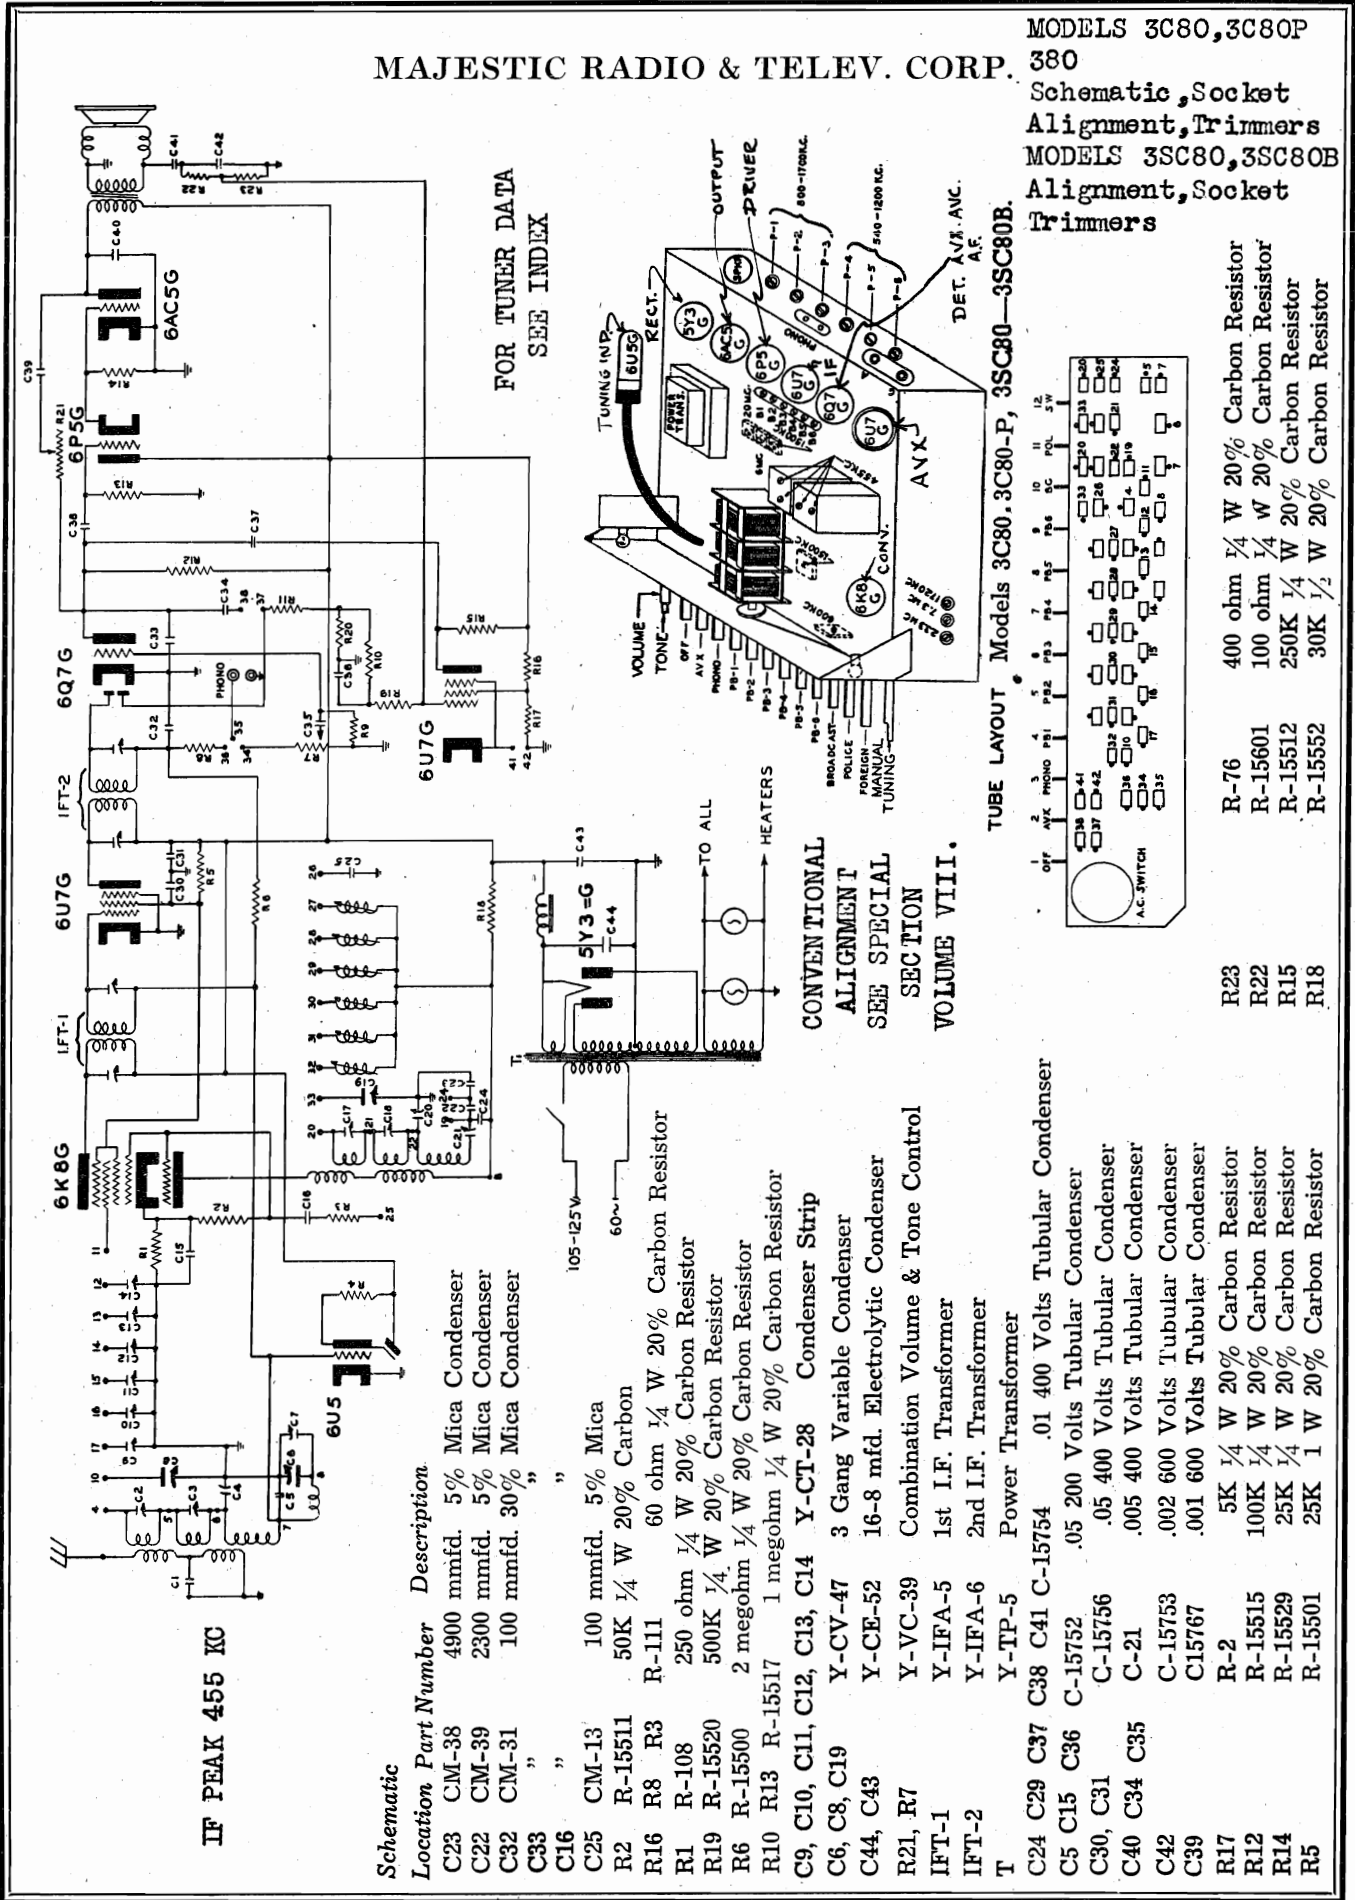

Schematic

Location	Part Number	Description
C23	CM-38	4900 mmfd. 5% Mica Condenser
C22	CM-39	2300 mmfd. 5% Mica Condenser
C32	CM-31	100 mmfd. 30% Mica Condenser
C33	"	"
C16	"	"
C25	CM-13	100 mmfd. 5% Mica
R2	R-15511	50K 1/4 W 20% Carbon
R16	R8 R3	R-111 60 ohm 1/4 W 20% Carbon Resistor
R1	R-108	250 ohm 1/4 W 20% Carbon Resistor
R19	R-15520	500K 1/4 W 20% Carbon Resistor
R6	R-15500	2 megohm 1/4 W 20% Carbon Resistor
R10	R13 R-15517	1 megohm 1/4 W 20% Carbon Resistor
C9, C10, C11, C12, C13, C14	Y-CT-28	Condenser Strip
C6, C8, C19	Y-CV-47	3 Gang Variable Condenser
C44, C43	Y-CE-52	16-8 mfd. Electrolytic Condenser
R21, R7	Y-VC-39	Combination Volume & Tone Control
IFT-1	Y-IFA-5	1st I.F. Transformer
IFT-2	Y-IFA-6	2nd I.F. Transformer
T	Y-TP-5	Power Transformer
C24	C29 C37	C38 C41 C-15754 .01 400 Volts Tubular Condenser
C5	C15 C36	C-15752 .05 200 Volts Tubular Condenser
C30, C31	C-15756	.05 400 Volts Tubular Condenser
C40	C34 C35	C-21 .005 400 Volts Tubular Condenser
C42	C-15753	.002 600 Volts Tubular Condenser
C39	C15767	.001 600 Volts Tubular Condenser
R17	R-2	5K 1/4 W 20% Carbon Resistor
R12	R-15515	100K 1/4 W 20% Carbon Resistor
R14	R-15529	25K 1/4 W 20% Carbon Resistor
R5	R-15501	25K 1 W 20% Carbon Resistor

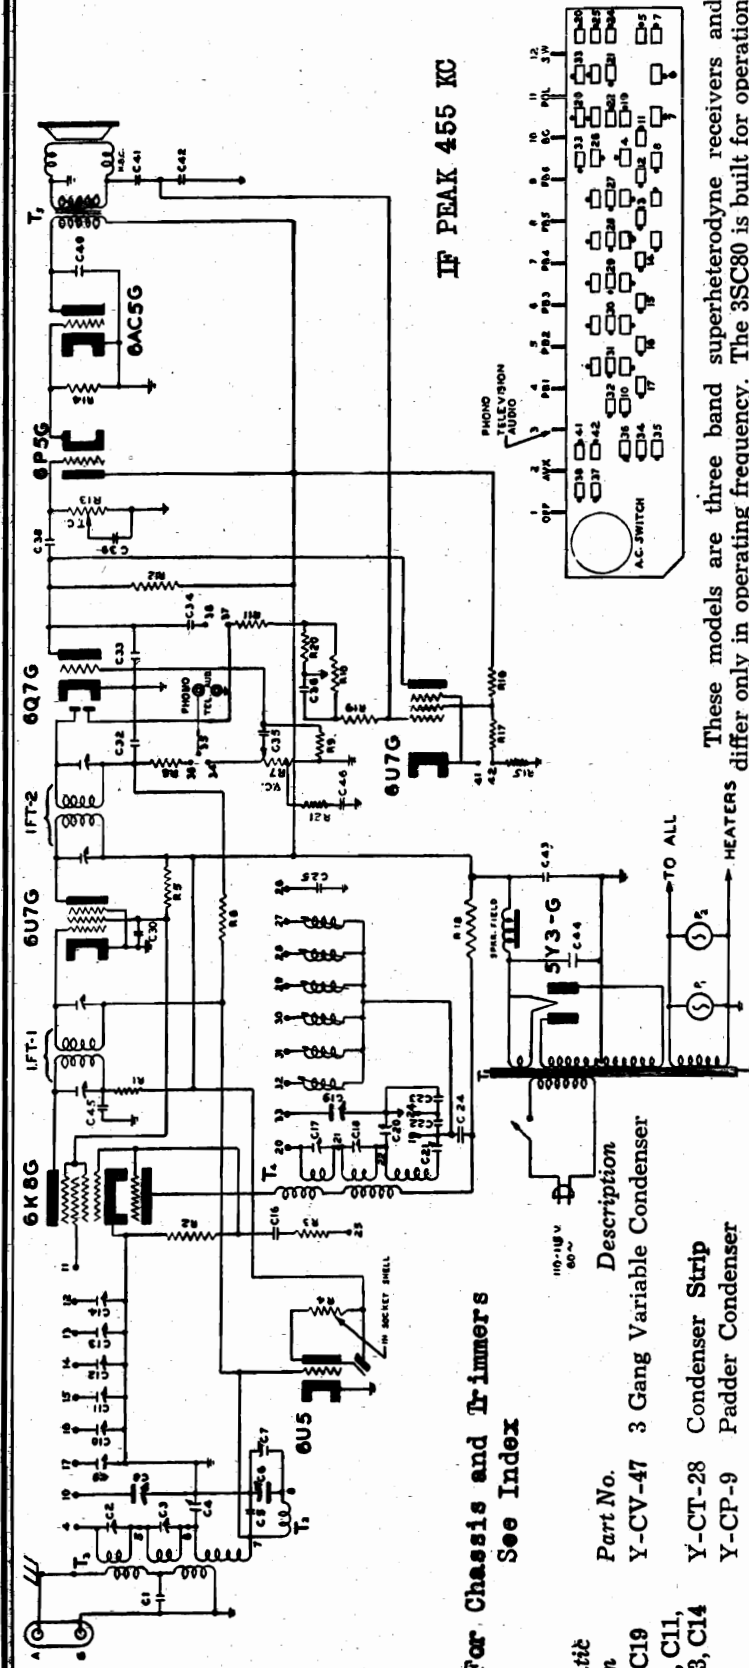

For Chassis and Trimmers
See Index

Schematic Location

- C6, C8, C19
- C9, C10, C11, C12, C13, C14
- C21
- C43, C44
- R7, R13
- IFT-1
- IFT-2
- P1, P2
- T1
- T2
- T3
- T4
- T5
- C5, C36
- C24, C38, C41, C45, C46
- C30
- C34, C35, C39, C40
- C42
- C1, C16, C32, C33

Part No.

- Y-CV-47 3 Gang Variable Condenser
- Y-CT-28 Condenser Strip
- Y-CP-9 Padder Condenser
- Y-CE-52 16-8 mfd. Electrolytic Condenser
- Y-VC-39 Combination Volume & Tone Control
- Y-IFA-5 1st I.F. Transformer
- Y-IFA-6 2nd I.F. Transformer
- LB-51 Pilot Lights Mazda No. 51
- Y-TP-5 Power Transformer
- Y-CS-120 Preselector Coil
- Y-CS-116 Antenna Coil Assembly
- Y-CS-115 Oscillator Coil Assembly
- Y-SPA-64 Output Transformer
- C-15752 .05 mfd. 200 Volts Tubular Condenser
- C-15754 .01 mfd. 400 Volts Tubular Condenser
- C-15756 .05 mfd. 400 Volts Tubular Condenser
- C-21 .005 mfd. 400 Volts Tubular Condenser
- C-15753 .002 mfd. 600 Volts Tubular Condenser
- CM-31 100 mmfd. 30% Mica Condenser

Description

- C22
- C23
- C25
- R1, R15
- R2, R8, R21
- R3
- R4
- R5
- R6, R10
- R9
- R11, R19, R20
- R12
- R14
- R16
- R17
- R18


These models are three band superheterodyne receivers and differ only in operating frequency. The 3SC80 is built for operation on 115 volts 60 cycles A.C. and the 3SC80B is for 115 volts 50-60 cycles A.C.

- CM-39 2300 mmfd. 5% Mica Condenser
- CM-38 4900 mmfd. 5% Mica Condenser
- CM-13 100 mmfd. 5% Mica Condenser
- R-15542 1000 ohm 1/4 W 20% Carbon Resistor
- R-15511 50K ohm 1/4 W 20% Carbon Resistor
- R-15536 100 ohm 1/4 W 20% Carbon Resistor
- R-43 1 megohm 1/4 W 20% Carbon Resistor
- R-15501 25K ohm 1 W 20% Carbon Resistor
- R-15500 2 megohm 1/4 W 20% Carbon Resistor
- R-109 5 megohm 1/4 W 20% Carbon Resistor
- R-15520 500K ohm 1/4 W 20% Carbon Resistor
- R-15515 100K ohm 1/4 W 20% Carbon Resistor
- R-15529 25K ohm 1/4 W 20% Carbon Resistor
- R-15524 50K ohm 1 W 20% Carbon Resistor
- R-2 5K ohm 1/4 W 20% Carbon Resistor
- R-15506 30K ohm 1/2 W 20% Carbon Resistor

MAJESTIC RADIO & TELEV. CORP.

MODELS 3C90, 3SC90
390

Schematic, Alignment
Socket, Trimmers
Tuner Layout

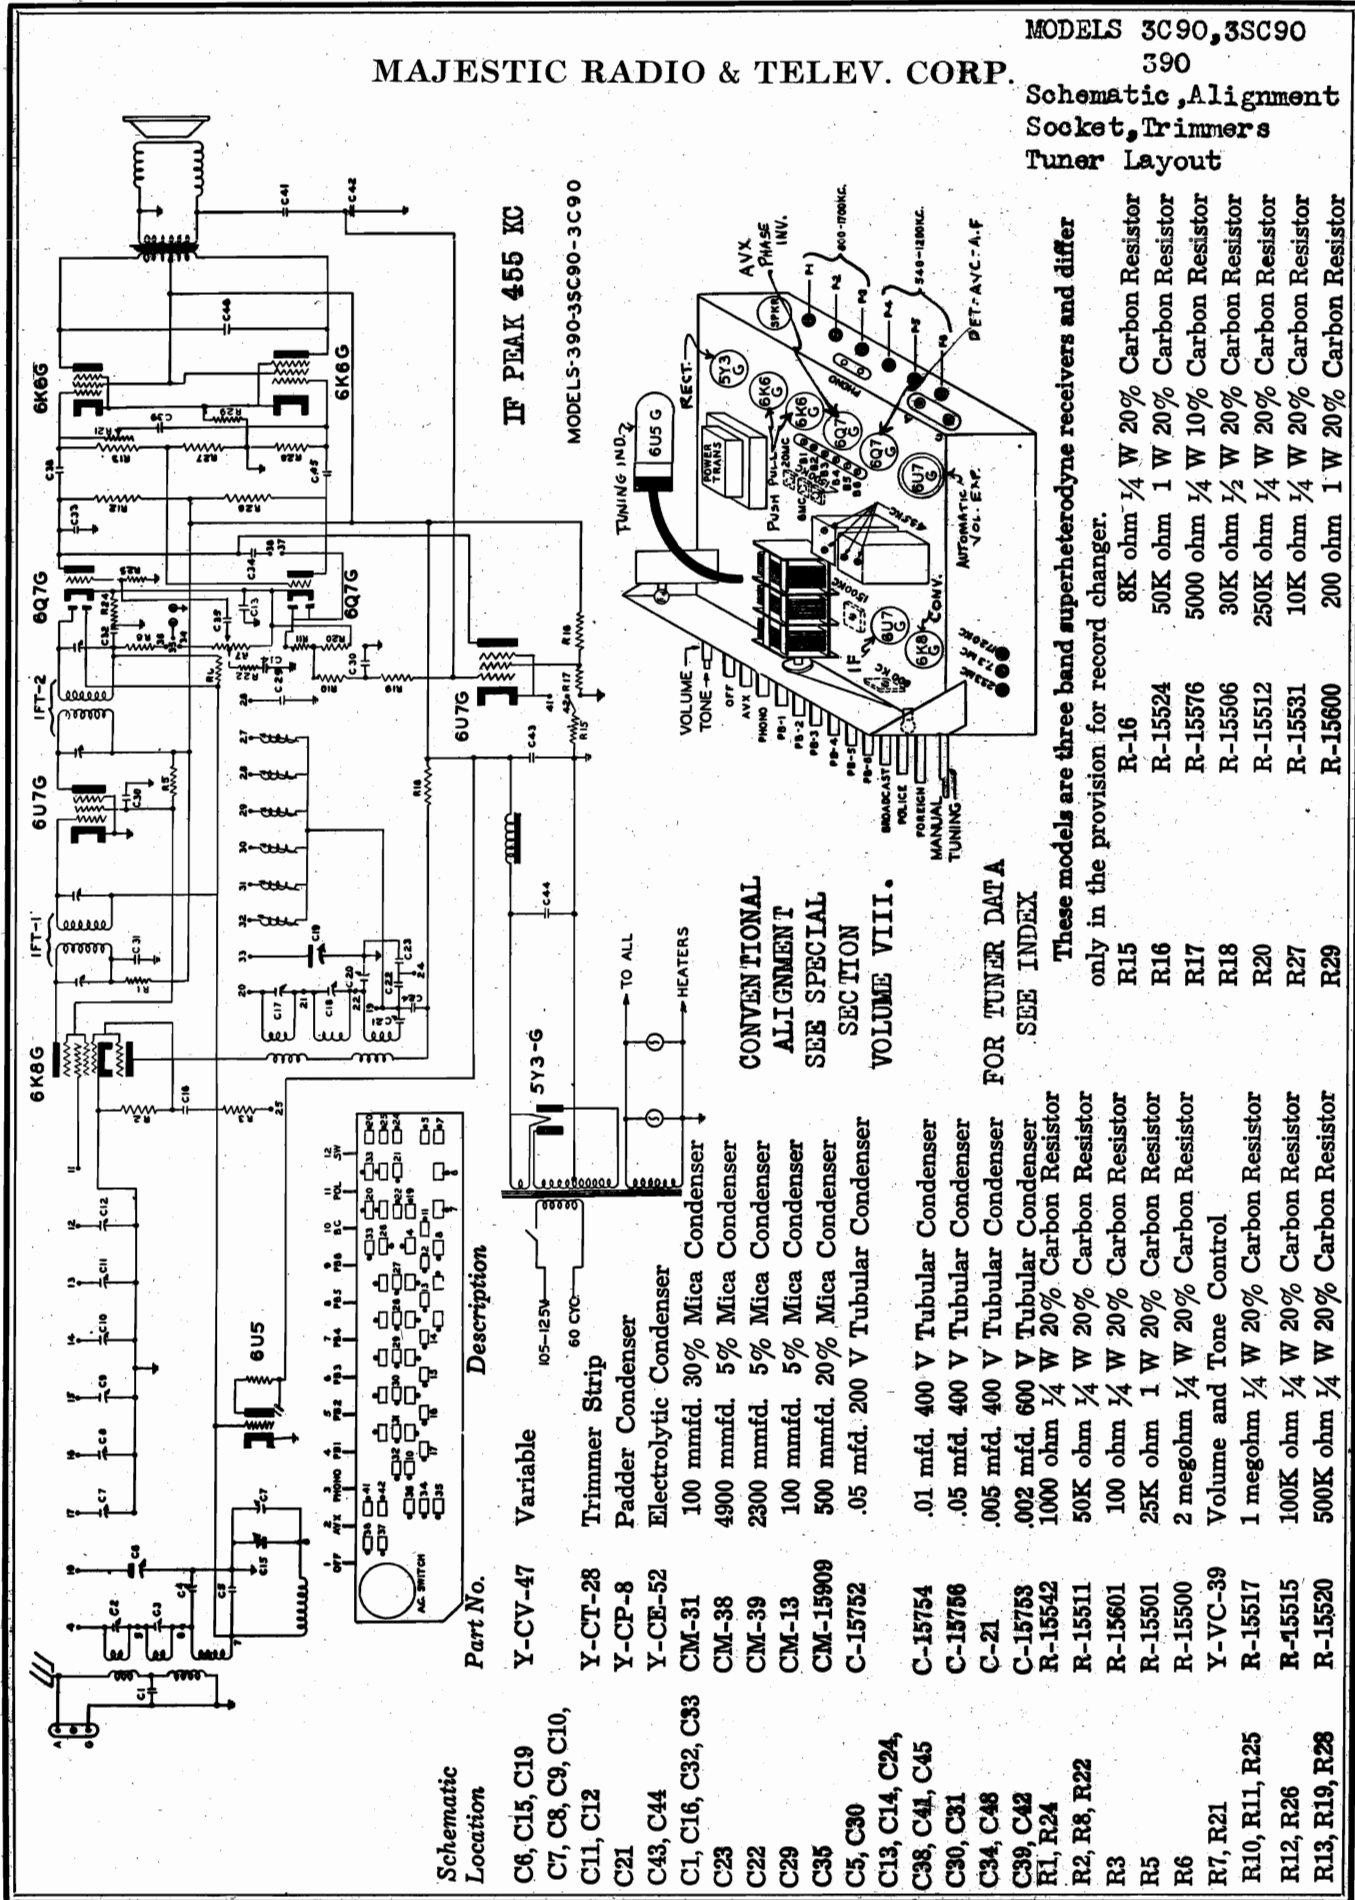

IF PEAK 455 KC
MODELS-390-3SC90-3C90

CONVENTIONAL
ALIGNMENT
SEE SPECIAL
SECTION
VOLUME VIII.

FOR TUNER DATA
SEE INDEX

These models are three band superheterodyne receivers and differ only in the provision for record changer.


R-15	8K ohm 1/4 W 20% Carbon Resistor
R-16	50K ohm 1 W 20% Carbon Resistor
R-17	5000 ohm 1/4 W 10% Carbon Resistor
R-18	30K ohm 1/2 W 20% Carbon Resistor
R-20	250K ohm 1/4 W 20% Carbon Resistor
R-27	10K ohm 1/4 W 20% Carbon Resistor
R-29	200 ohm 1 W 20% Carbon Resistor

Schematic Location	Part No.	Description
C6, C15, C19	Y-CV-47	Variable
C7, C8, C9, C10, C11, C12	Y-CT-28	Trimmer Strip
C21	Y-CP-8	Padder Condenser
C43, C44	Y-CE-52	Electrolytic Condenser
C1, C16, C32, C33	CM-31	100 mmfd. 30% Mica Condenser
C23	CM-38	4900 mmfd. 5% Mica Condenser
C22	CM-39	2300 mmfd. 5% Mica Condenser
C29	CM-13	100 mmfd. 5% Mica Condenser
C35	CM-15909	500 mmfd. 20% Mica Condenser
C5, C30	C-15752	.05 mfd. 200 V Tubular Condenser
C13, C14, C24, C38, C41, C45	C-15754	.01 mfd. 400 V Tubular Condenser
C30, C31	C-15756	.05 mfd. 400 V Tubular Condenser
C34, C48	C-21	.005 mfd. 400 V Tubular Condenser
C39, C42	C-15753	.002 mfd. 600 V Tubular Condenser
R1, R24	R-15542	1000 ohm 1/4 W 20% Carbon Resistor
R2, R8, R22	R-15511	50K ohm 1/4 W 20% Carbon Resistor
R3	R-15601	100 ohm 1/4 W 20% Carbon Resistor
R5	R-15501	25K ohm 1 W 20% Carbon Resistor
R6	R-15500	2 megohm 1/4 W 20% Carbon Resistor
R7, R21	Y-VC-39	Volume and Tone Control
R10, R11, R25	R-15517	1 megohm 1/4 W 20% Carbon Resistor
R12, R26	R-15515	100K ohm 1/4 W 20% Carbon Resistor
R13, R19, R28	R-15520	500K ohm 1/4 W 20% Carbon Resistor


MODEL 4-PWO
Wireless Record Player
Schematic, Socket

MAJESTIC RADIO & TELEV. CORP

MODEL 6UL51
Schematic, Socket
Alignment, Trimmers

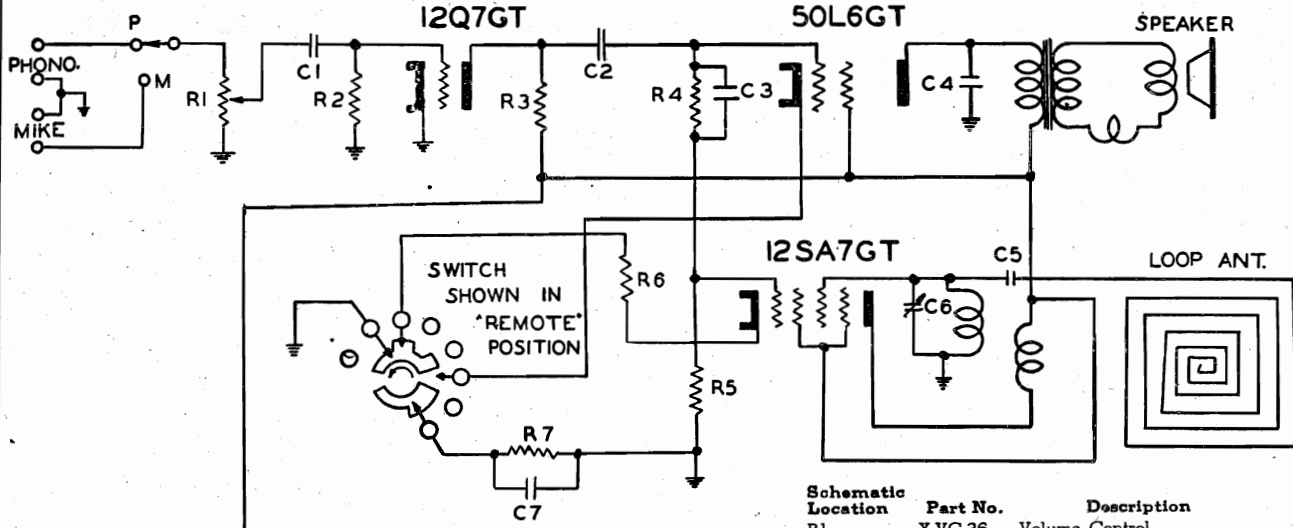



Schematic Location	Part No.	Description
R1	Y-VC-36	Volume Control
R2	R-79	Carbon resistor 15meg 1/4W20%
R3	R-15512	Carbon res. 250Kohm 1/4W20%
R4	R-15517	Carbon res. 400Kohm 1/4W20%
R5	R-15511	Carbon res. 50Kohm 1/4W20%
R6	R-15542	Carbon res. 1Kohm 1/4W20%
R7	R-15508	Carbon res. 150ohm 1/4W10%
R8	R-104	Carbon res. 50ohm 2W flexible res.
C1	C-15774	Tubular cond. .002 mfd. 400V
C2, C4	C-15760	Tubular cond. .02 mfd. 400V
C10	C-15757	Tubular cond. .1 mfd. 400V
C3	CM-37	Mica cond. 500 mmi. 30%
C5	CM-10	Mica cond. 10 mmi. 10%
C7, C8, C9	Y-CE-54	Electrolytic

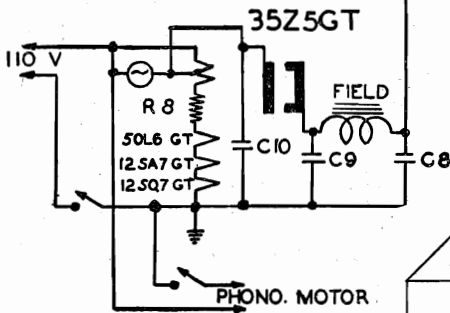

MODEL 4-PWO

The tubes used are


- 1-12Q7GT Pre Amplifier
- 1-50L6GT Beam power output
- 1-12SA7GT Modulator oscillator
- 1-35Z5GT Rectifier

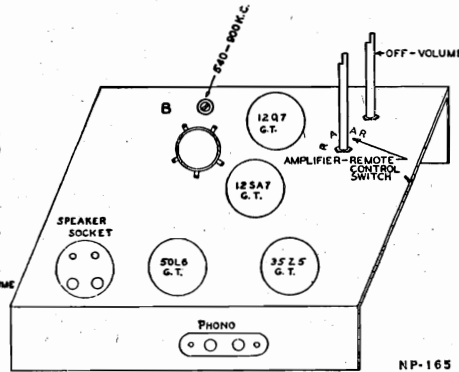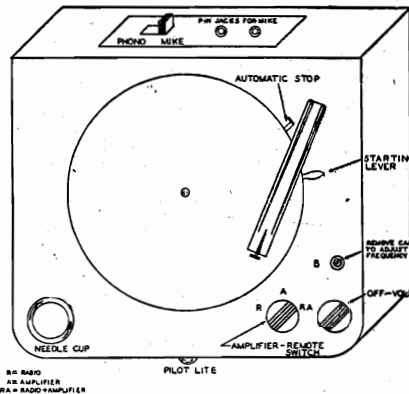

Model 4PWO operates on 105-130 volts, 60 cycles, AC. It can be made to operate on 50-cycle AC by changing a bushing on the motor shaft.

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII


Schematic Location	Part No.	Description
C1, C13	C-15754	Tubular cond. .01 mfd. 400V
C2	C-15752	Tubular cond. .05 mfd. 200V
C5	Y-CV-22	Variable cond. (Osc. Section)
C20		Variable cond. (Signal Section)
C6, C7	Y-CI-1	Trimmer cond. 1st I.F. Trans.
C8, C9	Y-CI-1	Trimmer cond. 2nd I.F. Trans.
C16	C-20	Paper cond. .25 mfd. 200V (Mol.)
C15	C-15760	Tubular cond. .02 mfd. 400V
C4	CM-29	Mica cond. 50 mmi.
C10, C12, C14	CM-31	Mica cond. 100 mmi.
C17	Y-CE-40	Electr. cond. 16 mfd. 150V (Met.)
C18	Y-CE-39	Electr. cond. 40 mfd. 200V (Clad)
C19	C-24	Paper cond. .1 mfd. 300V (Mol.)
C11	C-15774	Tubular cond. .002 mfd. 400V
C3	C-28	Paper cond. .05 mfd. 200V (Mol.)
R1	R-15511	Carbon res. 50Kohm 1/4W20%
R2	R-15516	Carbon res. 15Kohm 1/4W20%
R3	R-15500	Carbon resistor 2meg 1/4W20%
R5	R-79	Carbon resistor 15meg 1/4W20%
R6	R-15512	Carbon res. 250Kohm 1/4W20%
R7	R-15520	Carbon res. 500Kohm 1/4W20%
R9	R-15531	Carbon resistor 10K 1/4W20%
R8	R-56	Carbon res. 100ohm 1/4W10%
R4	Y-VC-21	Volume Control

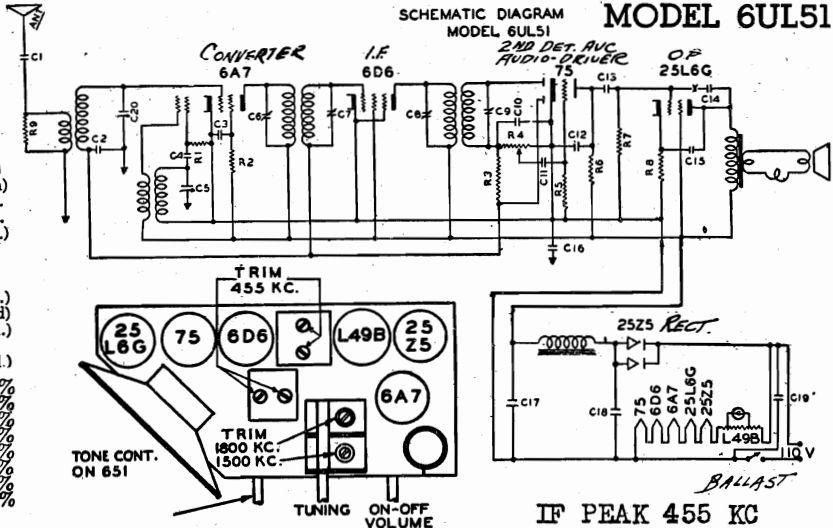

MAJESTIC RADIO & TELEV. CORP.

MODELS 5BDA, 5BEA
Schematic

This is a 5-tube, 2-band receiver, operating on alternating current of 110-115 Volts, 60 Cycles for Model 5BDA, and 50-60 Cycles for Model 5BEA. The tuning range for the broadcast band is from 535 to 1720 Kilocycles. The tuning range for the short wave band is from 2.3 to 6.5 Megacycles.

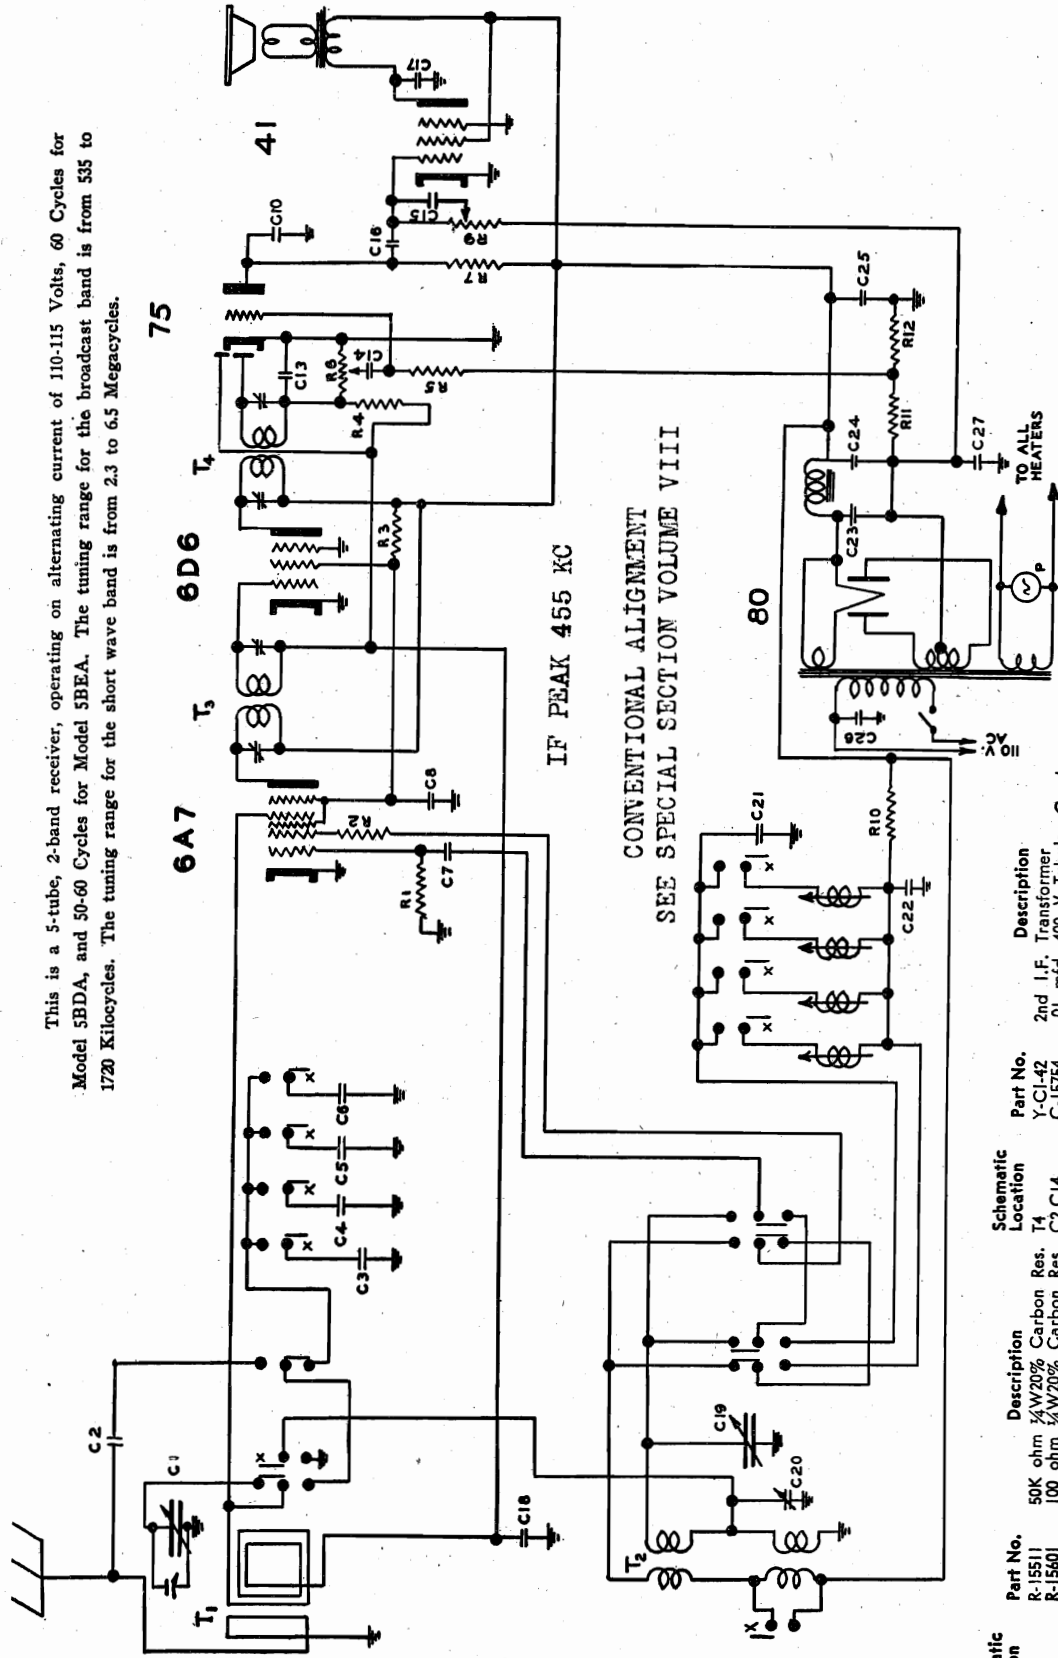

IF PEAK 455 KC
CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII

FOR TUNER AND LAYOUT
SEE INDEX



- The tubes used are:
- 1-6A7 Frequency converter
 - 1-6D6 Intermediate frequency amplifier
 - 1-75 Second detector, AVC, and Audio frequency amplifier
 - 1-41 Output
 - 1-80 Rectifier

Schematic Location	Description	Part No.	Description	Schematic Location	Description	Part No.	Description
R1	50K ohm 1/4W20% Carbon Res.	Y-CI-42	2nd I.F. Transformer	T4	500 ohm 1/4W20% Carbon Res.	Y-CI-42	2nd I.F. Transformer
R2	100 ohm 1/4W20% Carbon Res.	C-15754	.01 mfd. 400 V Tubular Cond.	C2, C14	100 ohm 1/4W20% Carbon Res.	C-15754	.01 mfd. 400 V Tubular Cond.
R3	15K ohm 1W20% Carbon Res.	C8, C25	.05 mfd. 400 V Tubular Cond.	C8, C25	2 meg. 1/4W20% Carbon Res.	C-30	.001 mfd. 400 V Tubular Cond.
R4	2 meg. 1/4W20% Carbon Res.	C15	.006 mfd. 400 V Tubular Cond.	C15	1 meg. 1/4W20% Carbon Res.	C-25	.006 mfd. 400 V Tubular Cond.
R5	1 meg. 1/4W20% Carbon Res.	C16, C17	.05 mfd. 400 V Tubular Cond.	C16, C17	Volume and Tone Control	C-18	.05 mfd. 400 V Tubular Cond.
R6, R9	250K ohm 1/4W20% Carbon Res.	C18	50 mfd. 200 V Ceramic	C18	250K ohm 1/4W20% Carbon Res.	C-18	50 mfd. 200 V Ceramic
R7	5000 ohm 1/4W20% Carbon Res.	C76	100 mfd. Mica Condenser	C76	250K ohm 1/4W20% Carbon Res.	CM-29	100 mfd. Mica Condenser
R10	35 ohm 1/4W20% Carbon Res.	C10	250 mfd. 5% Mica Condenser	C10	35 ohm 1/4W20% Carbon Res.	CM-31	250 mfd. 5% Mica Condenser
R11	150 ohm 1/4W10% Carbon Res.	C22	150 mfd. 5% Mica Condenser	C22	150 ohm 1/4W10% Carbon Res.	CM-33	150 mfd. 5% Mica Condenser
R12	Loop Antenna	C21	Trimmer Strip	C21	Loop Antenna	Y-CT-308	Trimmer Strip
T1	Oscillator Coil	C3, C4, C5, C6	Electrolytic Condenser	C3, C4, C5, C6	Oscillator Coil	Y-CE-43	Electrolytic Condenser
T2	1st I.F. Transformer	C23, C24, C27		C23, C24, C27	1st I.F. Transformer		
T3							

MODELS 5T, 5TO
 MODELS 140, 148
 Schematics, Socket
 Trimmers, Alignment

MAJESTIC RADIO & TELEV. CORP.

This is a 5-Tube superheterodyne receiver, operating on alternating current of 60 cycles only, at 105 to 130 volts.
 It tunes from 538 to 1750 kilocycles.

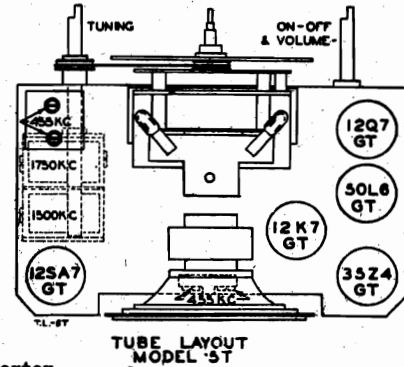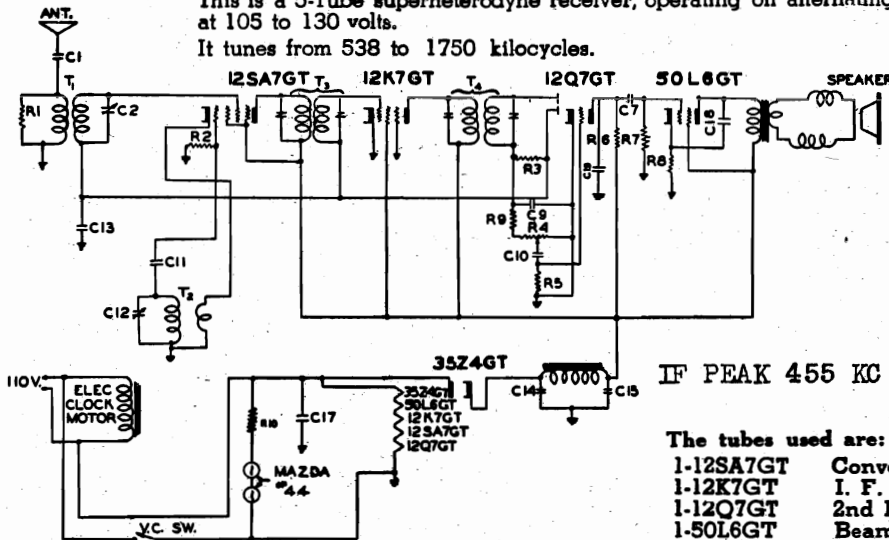

The tubes used are:
 1-12SA7GT Converter
 1-12K7GT I. F. Amplifier
 1-12Q7GT 2nd Detector, A.V.C., Driver
 1-50L6GT Beam Power Output
 1-35Z4GT Rectifier



MODELS 5T-5TO

Schematic Location	Part No.	Description
R1	R-15531	Carbon res. 10Kohm 1/4W20%
R2	R-15510	Carbon res. 20Kohm 1/4W20%
R3	R-15500	Carbon resistor 2meg 1/4W20%
R4	Y-VC-21	Volume Control
R5	R-50	Carbon resistor 5meg 1/4W20%
R6	R-15512	Carbon res. 250Kohm 1/4W20%
R7	R-15520	Carbon res. 500Kohm 1/4W20%
R8	R-80	Carbon res. 110 ohm 1/4W20%
R9	R-15515	Carbon res. 100K ohm 1/4W20%
R10	LC-14	Line Cord

Schematic Location	Part No.	Description
C1, C7	C-15754	Tubular cond. .01 mfd. 400V
C13	C-15752	Tubular cond. .05 mfd. 200V
C10	C-15774	Tubular cond. .002 mfd. 400V
C17, C18	C-15760	Tubular cond. .02 mfd. 400V
C11	CM-29	Mica cond. 50 mmfd. 30%
C9, C19	CM-30	Mica cond. 250 mmfd. 30%
C14, C15	Y-CE-55	40 16 mfd. 150 V
T-1	Y-CS-111	Antenna Coil
T-3	CI-69	1st I. F. Transformer
T-4	Y-CI-32	2nd I. F. Transformer
	Y-M-26	Electric Clock
T-2	CS-112	Osc. Coil

CONVENTIONAL ALIGNMENT FOR ALL MODELS SEE SPECIAL SECTION VOLUME VIII

SCHMATIC DIAGRAM MODELS 140-148

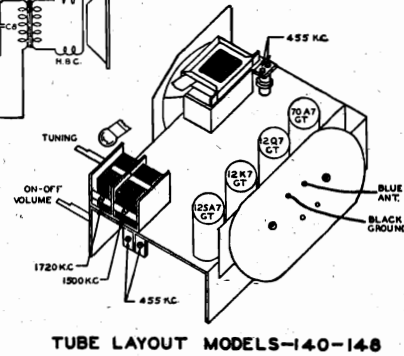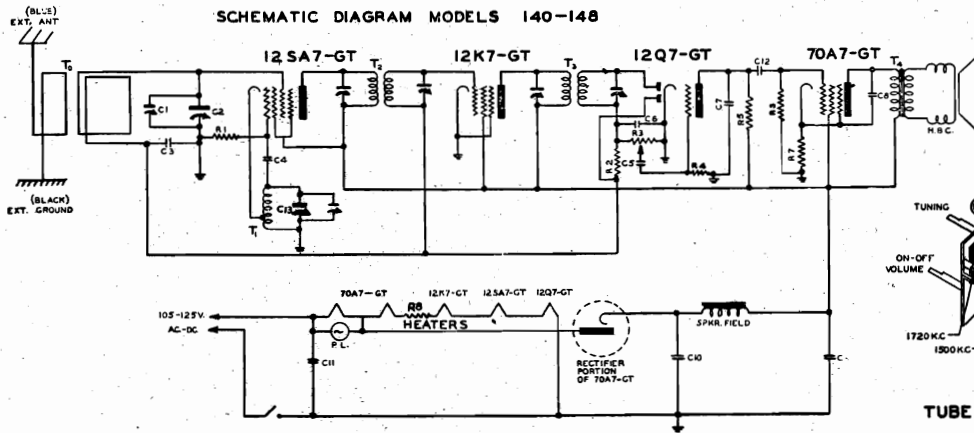

IF PEAK 455 KC MODELS 140, 148

This set is a one band, 4-tube superheterodyne receiver equipped with a Majestic High Q loop. This set will operate on 105-125 volts AC or DC current, and will receive stations lying between 540 and 1720 Kc. This includes standard broadcast and most police stations.

The tubes used are:
 1-12SA7GT Frequency Converter and Osc.
 1-12K7GT I. F. Amplifier
 1-12Q7GT 2nd Detector, AVC, First Audio
 1-70A7GT Output and Rectifier


Schematic Location	Part No.	Description
C3	C-15752	Tubular cond. .05 mfd. 200V
C5	C-15753	Tubular cond. .002 mfd. 600V
C8	C-15760	Tubular cond. .02 mfd. 400V
C11	C-15756	Tubular cond. .05 mfd. 400V
C12	C-15754	Tubular cond. .01 mfd. 400V
C2, C13	Y-CV-15	Variable Condenser
C9, C10	Y-CE-56	Electrolytic Condenser
C4	CM-29	Mica cond. 50 mmfd.
C6, C7	CM-30	Mica cond. 250 mmfd.

Schematic Location	Part No.	Description
R1	R-15510	Carbon res. 20K ohm 1/4W20%
R2	R-15500	Carbon resistor 2meg 1/4W20%
R3	Y-VC-15	Volume Control
R4	R-15559	Carbon resistor 3meg 1/4W20%
R5	R-15512	Carbon res 250K ohm 1/4W20%
R6	R-15520	Carbon res. 500K ohm 1/4W20%
R7	R-106	Carbon res. 150 ohm 1/4W20%
R8	R-86	Flexible res. 70 ohm 2W
T0	Y-CS-131	Loop Assembly
T1	Y-CS-105	Oscillator Coil
T2	Y-CS-106	1st I. F. Transformer
T3	Y-CS-107	2nd I. F. Transformer
P.L.	LB-47	Pilot Light Mazda #47

MAJESTIC RADIO & TELEV. CORP.


MODELS 130, 130U
MODEL 150L
Schematics, Socket
Alignment, Trimmers

SCHMATIC DIAGRAM - MODEL 150L

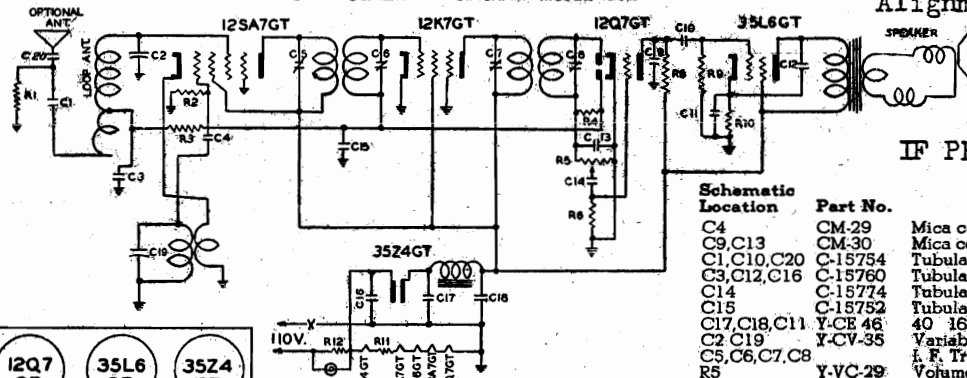

IF PEAK 455 KC

Schematic Location	Part No.	Description
C4	CM-29	Mica cond. 50 mmf. 30%
C9, C13	CM-30	Mica cond. 250 mmf. 30%
C1, C10, C20	C-18754	Tubular cond. .01 mfd. 400V
C3, C12, C16	C-18760	Tubular cond. .02 mfd. 400V
C14	C-18774	Tubular cond. .002 mfd. 400V
C15	C-18782	Tubular cond. .05 mfd. 200V
C17, C18, C11	Y-CE 46	40 16 mfd. 150V 20 mfd. 25V
C2, C19	Y-CV-35	Variable Condenser
C5, C6, C7, C8	Y-VC-29	V. F. Trimmer Condenser
R5	Y-VC-29	Volume Control and Switch
R11	R-96	Carbon res. 50 ohm 1W20%
R2	R-15510	Carbon res. 20K ohm 1/2W20%
R9	R-15520	Carbon res. 500K ohm 1/2W20%
R4	R-15500	Carbon res. 2 meg 1/2W20%
R6	R-79	Carbon res. 15 meg 1/2W20%
R10	R-80	Carbon res. 110 ohm 1/2W20%
R1	R-15531	Carbon res. 10K ohm 1/2W20%
R3	R-15515	Carbon res. 100K ohm 1/2W20%
R12	R-83	Carbon res. 35 ohm 1W20%

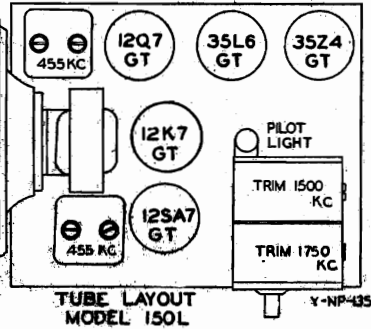

MODEL 150-L


The tubes used are:

- 1-12SA7-GT Frequency converter
- 1-12K7-GT Intermediate frequency amplifier
- 1-12Q7-GT Second Detector, Automatic Volume, and Audio Driver
- 1-35L6-GT Beam power output
- 1-35Z4-GT Rectifier

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII

MODEL 130, 130U

SCHMATIC DIAGRAM MODEL-130

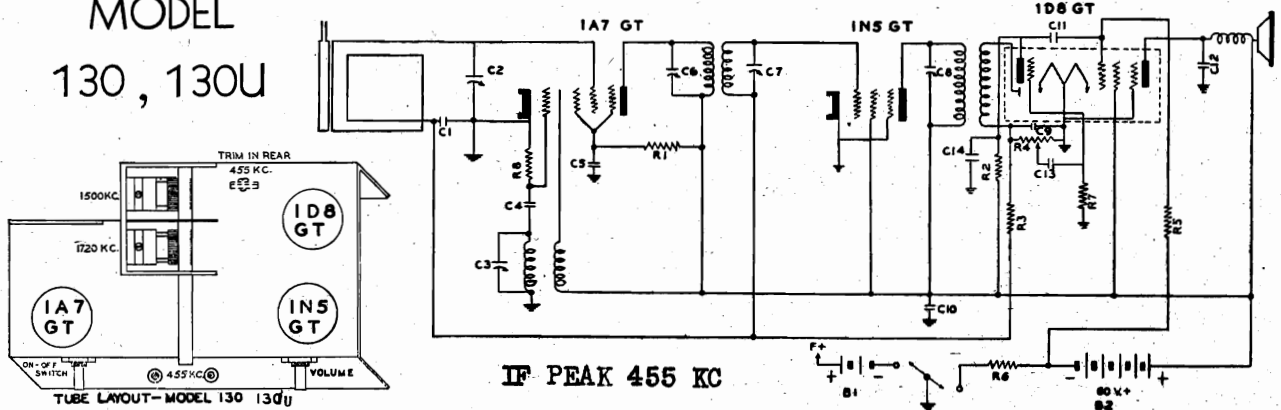


IF PEAK 455 KC

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII

To change the "A" battery, remove the old one from its bracket. Remove the wrapping or tube from the new battery and snap it in position as shown in Figure 1, making certain that the small center contact of the battery makes a good connection to the spring contact as shown in Figure 1.

To change the "B" battery, slide the old one from underneath the chassis. Remove the plug from this battery. Insert the plug into the new battery and replace the new battery.

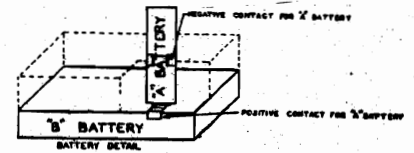

The tuning range is from 540 to 1750 kilocycles.

The tubes used are:

- 1-1A7GT Combined oscillator and 1st detector.
- 1-1N5GT Intermediate frequency amplifier.
- 1-1D8GT Combined second detector, Audio driver, and Power output.

MODEL 130

- B1 No. 9 Majestic Battery No. 9 1.5V
- B2 No. 3A40P Majestic Battery No. 3A40P 60V

MODEL 130U



- 1-P-94A Majestic Battery No. P-94A 1.5V
- 2-P-5303 Majestic Battery No. P-5303 45V

Schematic Location	Part No.	Description
C1	C-45	Tubular cond. .05 mfd. 200V
C2, C3	Y-CV-46	Variable Condenser
C4	CM-31	Mica cond. 100 mmfd.
C5, C11	C-48	Tubular cond. .01 mfd. 400V
C6, C7	CT-1	Trimmer condenser
C8	CT-32	Trimmer condenser
C9, C14	CM-30	Mica cond. 250 mmfd.
C10	CE-58	4 mfd. 100V Electrolyt c
C12, C13	C-47	Tubular cond. .004 mfd. 400V
R1	R-105	Carbon res. 5K ohm
R2	R-102	Carbon res. 1 meg.
R3, R5, R7	R-107	Carbon res. 2 meg.
R8	R-99	Carbon res. 200K ohm
R6	R-103	Carbon res. 60 ohm

MODEL 310UL
 MODELS 419B, 420
 420PL, 421, 421PL
 Schematics, Socket
 Trimmers, Alignment

MAJESTIC RADIO & TELEV. CORP.

MODEL 310UL
 IF PEAK 455 KC

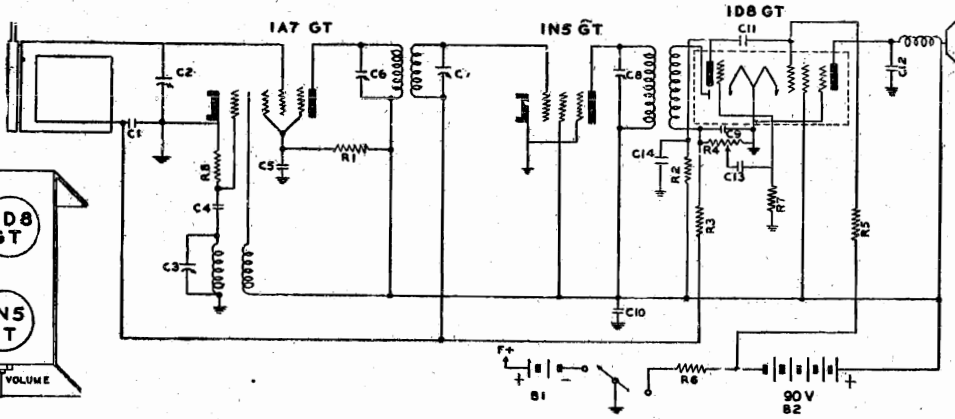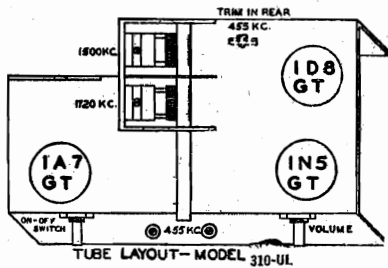


- The tubes used are:
- 1—1A7GT Combined oscillator and 1st detector.
 - 1—1N5GT Intermediate frequency amplifier.
 - 1—1D8GT Combined second detector, Audio driver, and Power output.

Schematic Location	Part No.	Description
C1	C-45	Tubular cond. .05 mfd. 200V
C2, C3	Y-CV-46	Variable Condenser
C4	CM-31	Mica cond. 100 mmfd.
C5, C11	C-48	Tubular cond. .01 mfd. 400V
C6, C7	CT-1	Trimmer condenser
C8	CT-32	Trimmer condenser
C9, C14	CM-30	Mica cond. 250 mmfd.
C10	CE-58	4 mfd. 100V Electrolytic
C12, C13	C-47	Tubular cond. .004 mfd. 400V
R1	R-105	Carbon res. 5K ohm
R2	R-102	Carbon res. 1 meg.
R3, R5, R7	R-101	Carbon res. 2 meg.
R8	R-15515	Carbon res. 100K ohm
R6	R-103	Carbon res. 600 ohm
B1	1—P-94A	Majestic Battery No. P-96 1.5V
B2	2—P-5303	Majestic Battery No. P-530 45V

CONVENTIONAL
 ALIGNMENT
 SEE SPECIAL
 SECTION
 VOLUME VIII.


Model 419-B
 Model 420
 Model 420-PL
 Model 421
 Model 421-PL

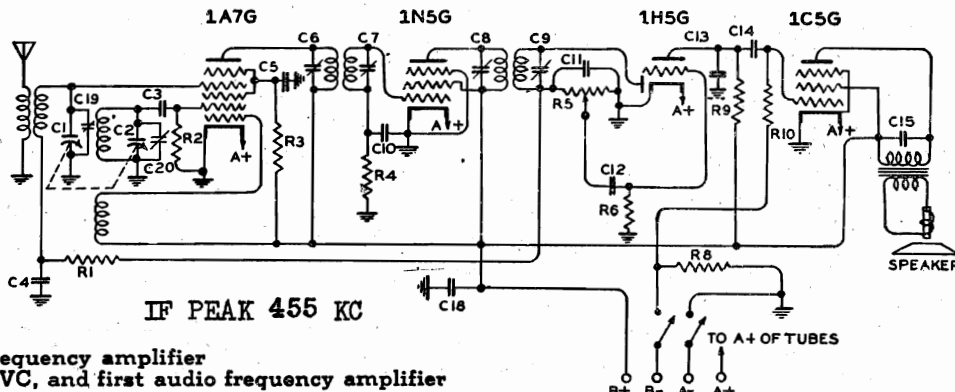

- The tubes used are:
- 1-1A7G Converter
 - 1-1N5G Intermediate frequency amplifier
 - 1-1H5G 2nd detector, AVC, and first audio frequency amplifier
 - 1-1C5G Output tube

Schematic Location	Part No.	Description
C4, C5	C-15752	.05 mfd. 200V
C10, C12, C14	C-15763	.01 mfd. 200V
C15	C-25	.006 mfd. 400V
C3, C11, C13	CM-15918	100 mmf Type "O" Mica
C1, C2	Y-CV-26	Variable Condenser
C6, C7, C8, C9	Y-CT-2	1. F. Trimmer Condenser
C18	CE-35	8 mfd. 150V Electrolytic
R9	R-15520	500K 1/4W 20%
R10	R-15517	1 meg. 1/4W 20%
R8	R-72	600 ohms 1/4W 20%
R2	R-15523	200K 1/4W 20%
R6	R-15559	3 meg. 1/4W 20%
R3	R-44	70K 1/4W 10%
R1, R4	R-15500	2 meg. 1/4W 20%
R5	Y-VC-26	Volume Control

CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION
 VOLUME VIII

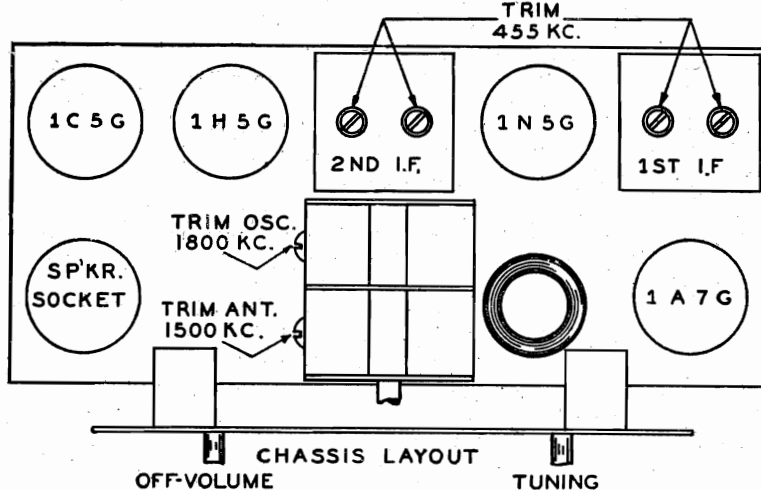

This receiver is designed to operate on the following dry batteries.


1. 1 1/2 volt A-battery — Eveready 742A — RAY-O-VAC P-94A or the equivalent.
2. 45 volt B-batteries — Eveready 762 — RAY-O-VAC P-5303 or the equivalent.

Schematic, Socket Trimmers, Alignment
MODEL 699P
Schematic

MAJESTIC RADIO & TELEV. CORP.

MODELS 511, 511A
519P, 519PA Late

Model 511
Model 511A
Model 519P
Model 519PA

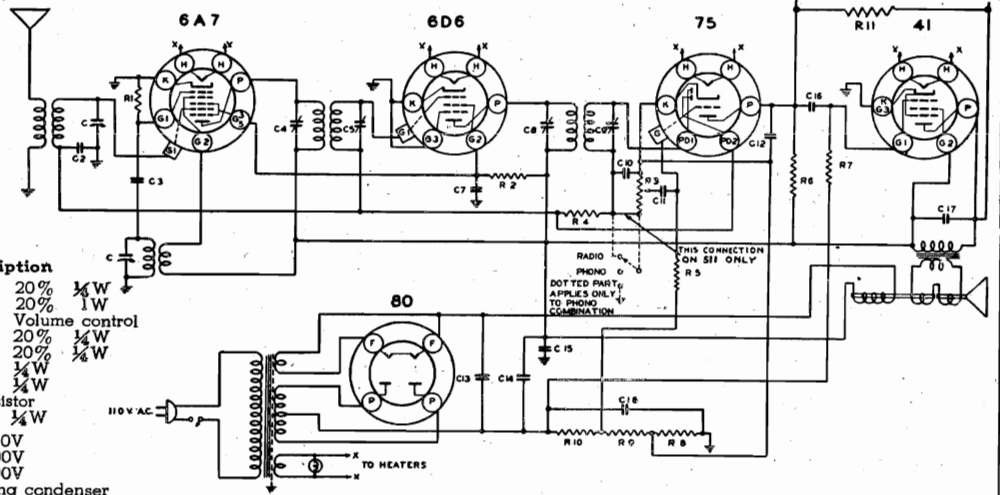


Schematic Location	Part No.	Description
R1	R-15511	50K ohms 20% 1/4W
R2	R-15544	15K ohms 20% 1W
R3	Y-VC-17	500K ohms Volume control
R4	R-15500	2 meg ohms 20% 1/4W
R5	R-15517	1 meg ohm 20% 1/4W
R6	R-15520	500K 20% 1/4W
R7	R-15528	400K 20% 1/4W
R10, R9, R8	RC-7	Candohm resistor
R11	R-50	5 meg 20% 1/4W
C2	C-15752	.05 mfd. 200V
C7, C15	C-15756	.05 mfd. 400V
C11, C16	C-15754	.01 mfd 400V
C	Y-CV-17	Variable gang condenser
C4, C5, C8, C9	Y-CT-1	I. F. Trimmers
C10, C12	CM-15918	100 mmfd. 20%
C3	CM-15929	50 mmfd. 20%
C13, C14, C18	Y-CE-43	Electrolytic condenser 12 8 mfd. 300 V 20 mfd. 25 V
C19	CM-16	150 mmfd. 20%
C17	C-15759	.006 mfd, 600V


The tubes used are:

- 1-6A7 Converter tube
- 1-6D6 I. F. Amplifier
- 1-75 Second detector, automatic volume control and audio amplifier
- 1-41 Power output
- 1-80 Rectifier

IF PEAK 455 KC

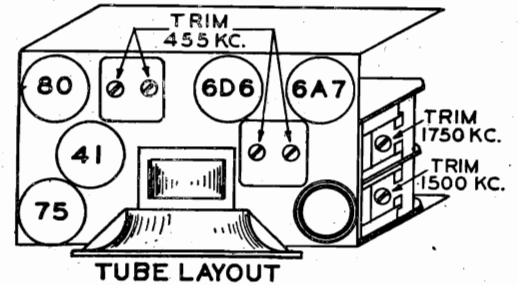

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII.

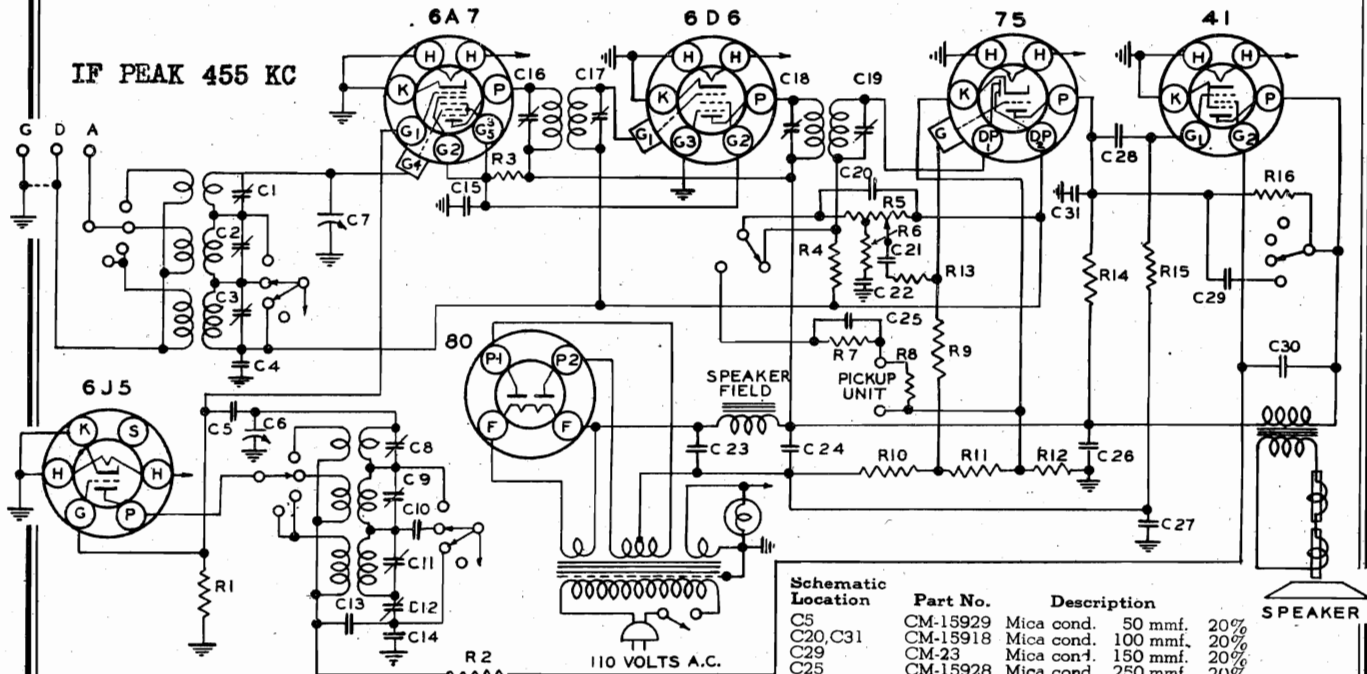

MODEL 699-P


Schematic Location	Part No.	Description
R1, R6	R-15511	Carbon resistor 50K 1/4W 20%
R4, R7, R16	R-15500	Carbon resistor 2 Meg 1/4W 20%
R13, R8, R14	R-15512	Carbon resistor 250K 1/4W 20%
R5	R-2	Carbon resistor 5K 1/4W 20%
R9	R-15517	Carbon resistor 1 Meg 1/4W 20%
R15	R-15520	Carbon resistor 5 Meg 1/4W 20%
R3	R-15535	Carbon resistor 13K 2W 20%
R10, R11, R12	RC-6	Candohm resistor
R5	Y-VC-22	Volume control

Schematic Location	Part No.	Description
C5	CM-15929	Mica cond. 50 mmfd. 20%
C20, C31	CM-15918	Mica cond. 100 mmfd. 20%
C29	CM-23	Mica cond. 150 mmfd. 20%
C25	CM-15928	Mica cond. 250 mmfd. 20%
C10	CM-1	Mica cond 2550 mmf 5%
C14	CM-17	Mica cond. pre. 4330 mmf. 3%
C15, C26	C-15756	Tubular cond. .05 mfd. 400 V
C13, C21	C-15754	Tubular cond. .01 mfd. 400 V
C22, C28	C-15759	Tubular cond. .006 mfd. 400 V
C30	C-15752	Tubular cond. .05 mfd. 200 V
C4	Y-CP-1	Trimmer cond. ant.
C1, C2, C3	Y-CP-1	Trimmer cond. ant.
C8, C9, C11	Y-CP-1	Trimmer cond. ant.
C12	Y-CP-16472	Osc. Padder condenser
C16, C17	Y-CT-1	Trimmer cond. 1st I. F.
C18, C19	Y-CT-1	Trimmer cond. 2nd I. F.
C23, C24, C27, Y-CE-7	Y-CE-7	Elect. cond. 16.16 mfd. 400 V, 12 mfd. 25V
C6, C7	Y-CV-19	2 gang variable cond.

MODEL 699-P

Socket, Trimmers
Alignment, Tuner

MAJESTIC RADIO & TELEV. CORP.

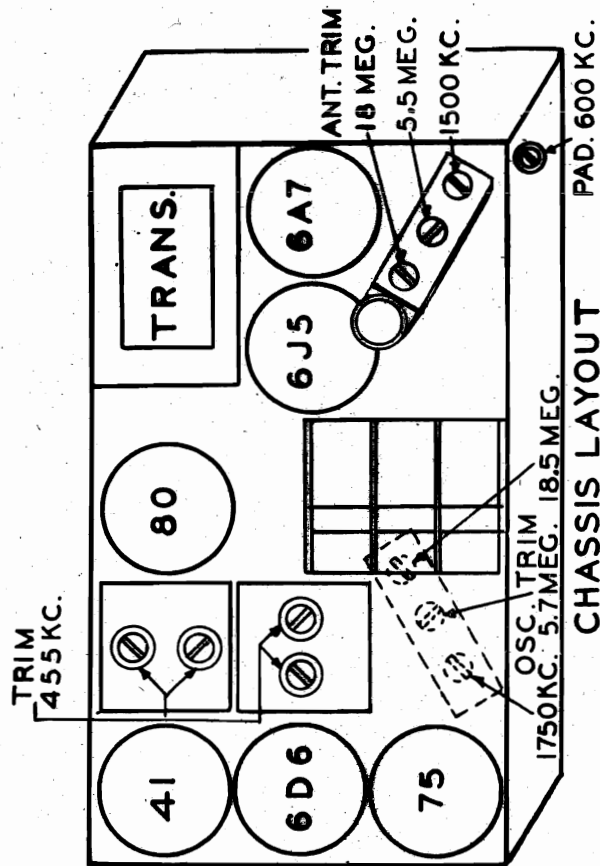

- (3) Tune in your desired station manually until it is heard with best quality.
 - (4) Push in the button while holding the manual tuning knob fixed on the station.
 - (5) Tighten the button by turning it to the right while the button is pushed all the way in, as tightly as possible. Allow the button to come out and tighten still more. It is of the utmost importance that the buttons be logged as tightly as possible.
 - (6) Repeat this procedure to set up the other buttons.
- IT IS IMPORTANT THAT ALL THE BUTTONS BE LOGGED ON STATIONS LYING BETWEEN 550 AND 1700 KILOCYCLES AND THAT THESE BUTTONS BE SCREWED TIGHTLY. IF THIS IS NOT DONE THE CAMS OPERATING THE PUSH BUTTON UNIT MAY WANDER AND JAM THE WHOLE UNIT.**

If there are not enough stations in your locality to log all six buttons, the unused buttons should be logged somewhere between 550 and 1700 kilocycles.

To change any one setting at any time repeat the above procedure. After that, to get this station, push the desired button with an even firm push until it has reached the end of its travel. After the push buttons are adjusted to your desired station, cut out the proper station call letters from the enclosed station call letter sheet, and snap this tab into the rectangular opening above the push buttons. Cover them with the small transparent celluloid tabs supplied with the call letters. These openings are shown in Fig. 1 as No. 1, No. 2, No. 3, No. 4, No. 5 and No. 6.

MODEL 699-P

Model 699-P is a six tube radio phonograph combination operating on a 110 volts 50-60 cycles. The receiver tunes to three bands, these are:


- A—Broadcast band 538 to 1750 kilocycles.
- B—Police and airplane 1.75 to 5.8 M.C.
- C—American and foreign short wave receptions 5.8 to 18.6 M.C.

The receiver is equipped with automatic volume control, inverse feedback, inverse feedback one control, base compensation, and mechanical push button tuning.

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII.

The tubes used are:

- 1—6A7 First detector
- 1—6J5 Oscillator
- 1—6D6 I. F. Amplifier
- 1—75 Second detector, automatic volume control and first audio amplifier
- 1—41 Power output
- 1—80 Rectifier

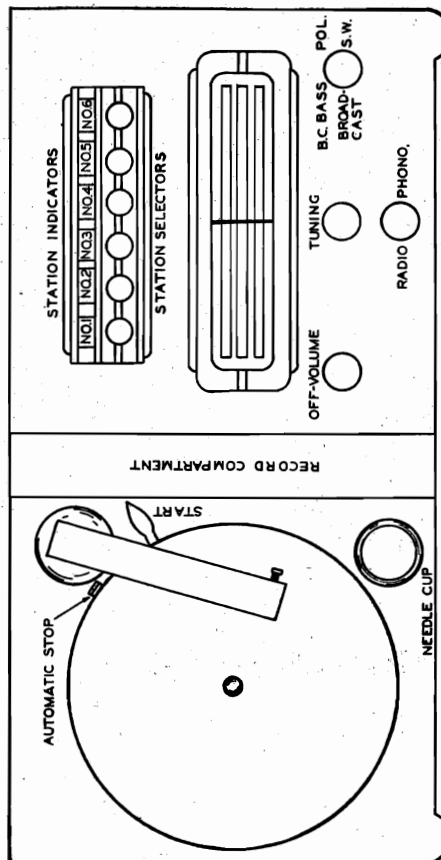

Operations For Setting Up Of Buttons

- (1) Decide which station you desire to hear on any one button.
- (2) Loosen this button by turning it to the left.

MIDWEST RADIO CORP.



MODEL 7-39 Batt. Schematic, Socket Voltage

E34	Eye Clamp
E35	Eye Socket Cable
K4	P. Button Key
K24	1 Inch Knob
P40	Pilot Light 6-0
R12	500 Ohm 1/2 W.
R17	25M.
R19	100M.
R22	1Meg.
R23	3
R72	15M. 1 W.
R73	25M.
S304	6" P.M. Split
S319	Spring, Belt
S307	Printer Assembly
S407	Band Switch
S445	Tone Switch
T71	Power Trans.
T79	Audio Transfer
T164	127 F.
T165	21/2 F.
V73	Vibrator
C231	Osc. Pak. E Band
J7	Conn. Outlet



C27	Battery Cable
G09	Choke, R.F.
C10	Choke, R.F.
C11	Choke, R.F.
C21	Trimmer 3 gang
C226	I.F. Padder
C232	Osc. Padder
C240	Dual Dry
C260	100 mfd. Nlce
C285	2000
C287	200
C289	1200
C301	.01 mfd. 200V.
C302	.05
C303	.25
C304	.5
C311	.01
C313	.25
C314	.05
C324	.015
C349	20 gang Variable
C363	Vol. Cont. W.S.
E16	Eye Escutcheon
E33	Eye Bracket

No Signal, Volume Control Turned Off, Stray Voltage - 6 Volts D.C. Meter Used - 20,000 Ohms per Volt.

TUBE	PLATE	SCREEN SUPR.	CATH.	HEATS	
6A3 Converter	135	80	90	4	6.0
6B7 I.F. Ampl.	135	80	4	0	6.0
6L5 Detector	0	0	0	0	6.0
6L5 I.F.A.F.	2.5	0	0	0	6.0
6L3 Driver	130	0	0	0	6.0
6Z7 Output	135	0	0	0	6.0
6N5 Eye Tube	135	0	0	0	6.0

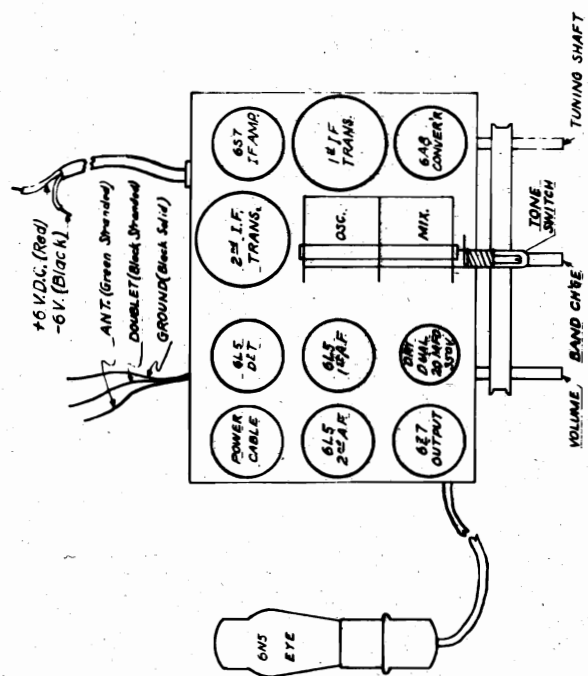

IF PEAK 456 KC

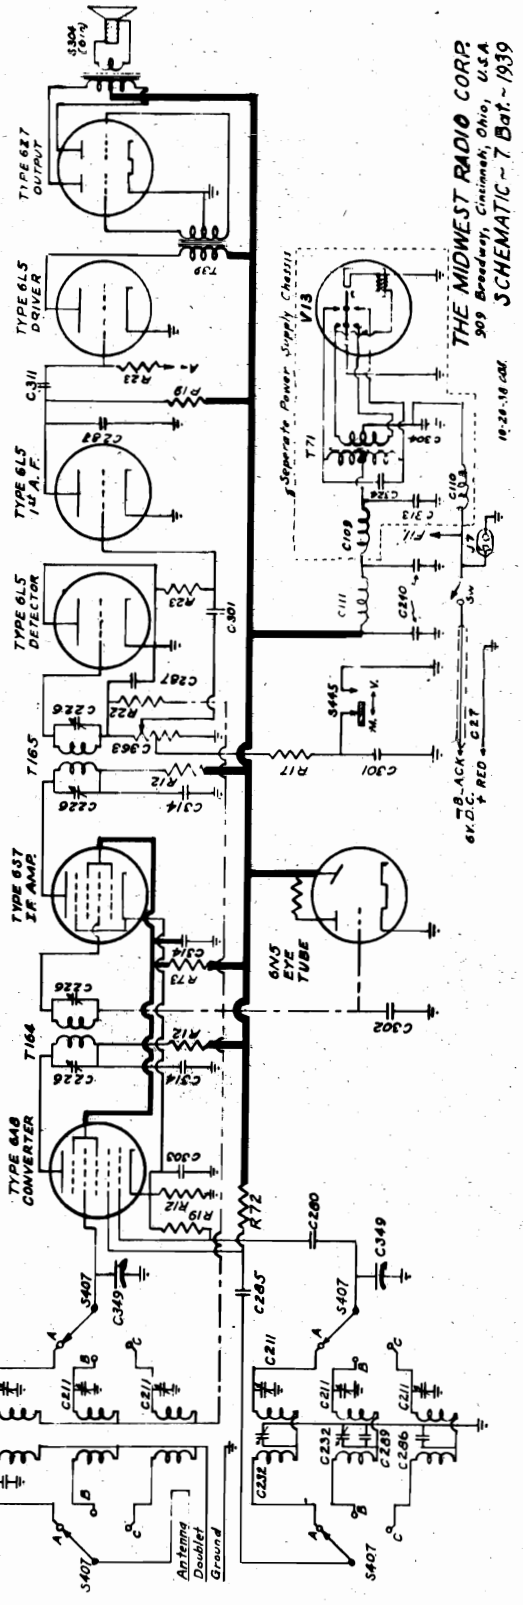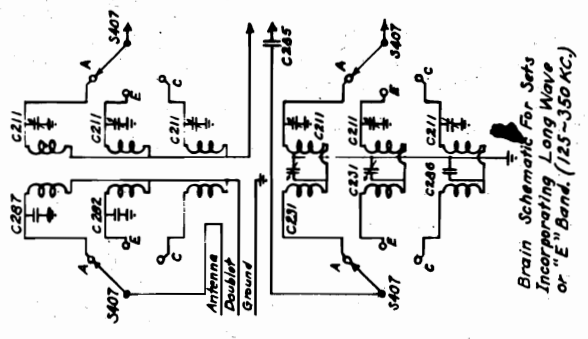

THE MIDWEST RADIO CORP. 509 Broadway, Cincinnati, Ohio, U.S.A. SCHEMATIC - 7 Batt. - 1939

MODEL 12-40
Schematic, Socket
Voltage

MIDWEST RADIO CORP.

R27	25M Ohm, 1/2 W.
R49	50M " 1 W.
R72	15M " 2 W.
R106	200 Ohm, 2 W.
S319	Spring, Bell Ten.
S367	Speakers, 12 Inch.
S441	Coil Switch, Osc.
S442	" " R.F.
S443	Switch, Clicker
C318	0.3 - 200 K
C276	0.04 - 200
C277	1.75 Power Trans.
T161	1/2 I.F. Trans.
T162	2nd " "
T163	3rd " "
W316	Window/Tuning


C314	0.5MF, 400V.
C350	Gang Variable
C363	Control, Volume
C401	Fish Line, Belts
D 3	Dial Background
D 4	Dial Glass
M24	Knob, 1 Inch
M25	Knob, 2 Inch
M26	Motor
P 9	Panel, Milled
P46	Pilot Light-60
P59	Printer-Slide
R11	200 Ohm, 1/2 W.
R12	500 " "
R13	1000 " "
R14	2000 " "
R15	5000 " "
R17	25M. " "
R18	50M. " "
R19	100M. " "
R20	200M. " "
R21	500M. " "
R22	1 Megohm " "
R23	3 " "
R23.3	40M. ohms " "

A 9	Antenna Strip
B26	Brush Holder
B27	Brush Clip
B28	Brush Contact
C26	Cable Plug, A.C.
C45	Commutator Disk
C146	Commutator-Synch
C211	Gang Trimmer
C226	I.F. Padder
C234	Osc. Padder
C249	120 Mfd. 400V.D
C250	80 Mfd. 350V.A
C276	10 Mfd. Mica
C277	1.5 " "
C280	100 " "
C285	5000 " "
C286	2000 " "
C287	200 " "
C290	60 " "
C301	0.1 Mfd. 200V.
C302	0.05 " "
C303	0.2 " "
C311	0.1 " "
C313	1.25 " "

TUBE	PLATE	SCREEN SUPPLY	CATH. HEATER
6K7 R.F.	230	78	2.4
6AB Mixer	233	78	2.4
6J5 Osc.	125		0
6J7 1st I.F.	230	78	4.4
6K7 2nd I.F.	230	78	4.4
6H6 2nd Det.			6.0
6P5 1st A.F.	135		8.6
6P5 Inverter	135		8.6
6V6 Outputs	280	220	12.5
6O Rectifier	350 (A.C.)		300

OPERATING VOLTAGES



No Signal. Volume Control Turned Off. Motor Switch in Off Position. Line Voltage 117Volts, 60 Cycles. Meter Used - 20,000 Ohms per Volt.



Parts in Parenthesis in Sets After Serial No. 12-00300

— BY LINES
- - - - - A.V.C. LINES

IF PEAK 456 KC

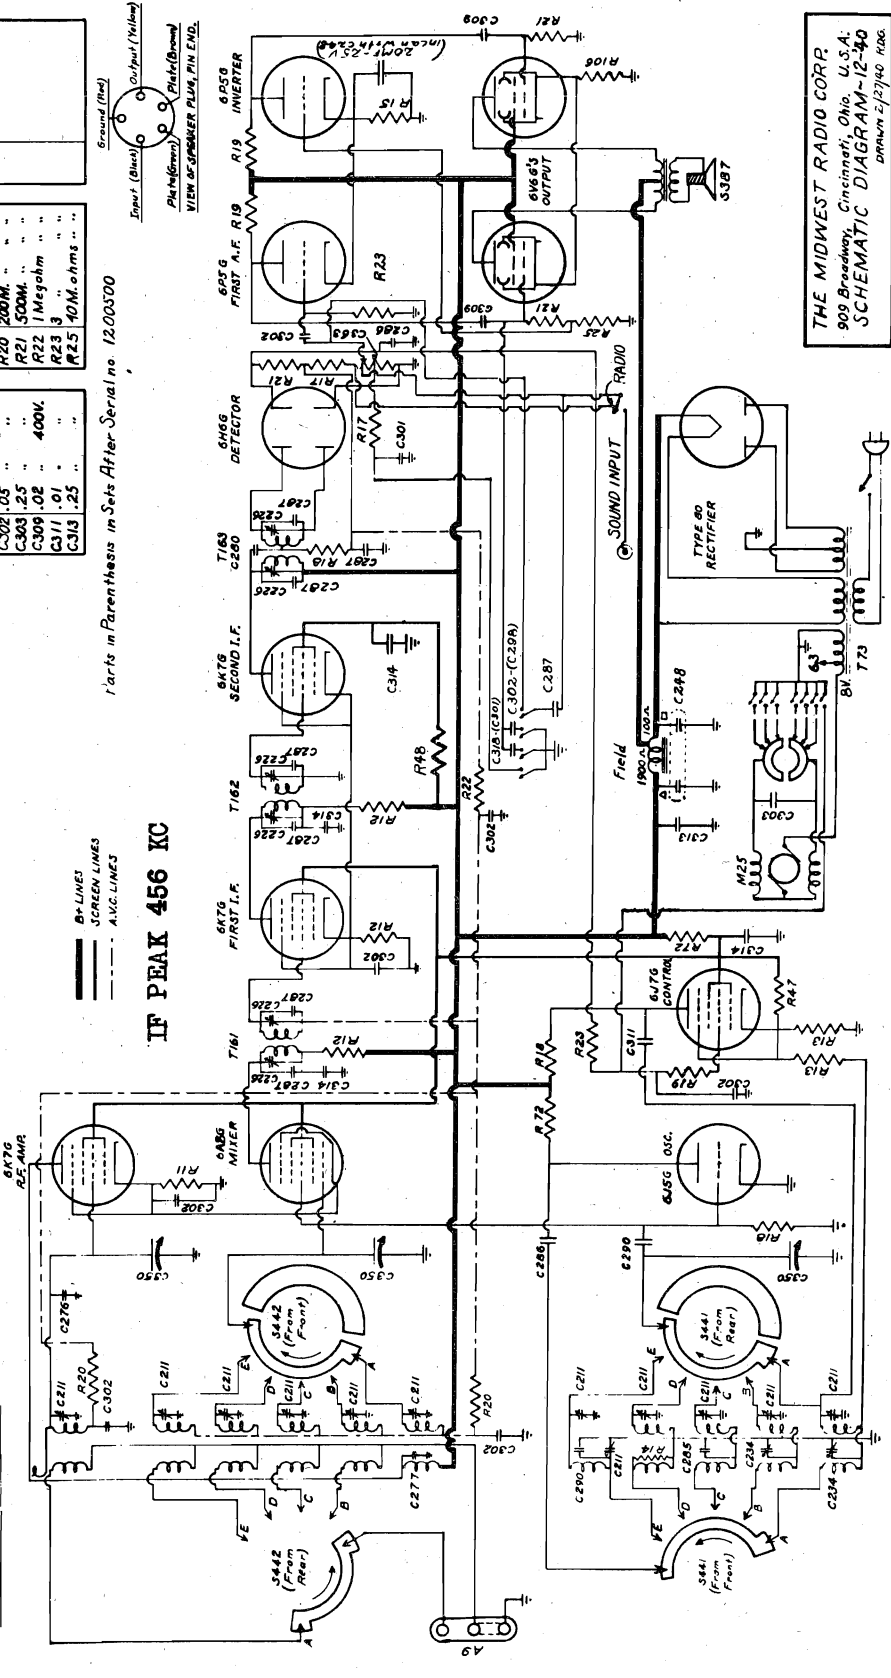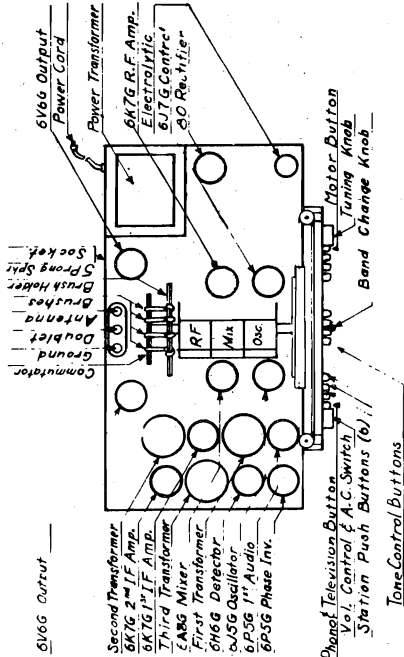

THE MIDWEST RADIO CORP.
909 Broadway, Cincinnati, Ohio, U.S.A.
SCHEMATIC DIAGRAM-12-40
DRAWN 2-12-40 HOC

MODEL 170
Schematic, Voltage
Socket

MIDWEST RADIO CORP.

R25	40K Ohms
R47	25K "
R48	50K "
R72	5K "
S307	Speaker 3 1/2" 12"
S387	" "
S441	Band Sw. Oic. RF
S442	" "
773	Per. Trans.

C313	.25 MFD
C314	.05 "
C330	36ggr Var Cond
C383	Control Volume
C401	Drive Cable
D 3	Dial Background
D 4	Dial Glass
K 24	Knob (brown-1")
M23	Meter Panel
P10	50K ohm
P46	Alar Lights-8V
P59	Pointer-Slide
R 11	200 Ohm
R 12	500 "
R 13	1000 "
R 14	2000 "
R 15	5000 "
R 17	25K "
R 19	100K "
R 20	200K "
R 21	500K "
R 22	1Meg "
R 23	3 "



A 0	Ant Binding post
B 26	Brush Holder
B 27	Brush Clip
B 28	Brush Contact
C 20	Cable-Plug
C 40	Commutator Disk
C 71	Segment
C 71	36ggr Trimmer
C 225	IF Padder
C 234	On-Pad (green)
C 248	Filter Cond.
C 276	10 MIMFD.
C 277	.25 "
C 280	100 "
C 285	2000 "
C 286	3000 "
C 287	200 "
C 290	60 "
C 301	DI MFD paper
C 302	.05 "
C 303	.25 "
C 309	.02 "
C 311	.01 "

OPERATING VOLTAGES

No Signal Volume Control Tapped
Down. Meter Switch In UP Position.
Line Voltage 117 Volts, 60 Cycles
Meter Used 20,000 ohms per Volt



TUBE	VAC. SUPPLY	GRID	CONTROL	PLATE	MAX. SUPPLY	MAX. PLATE
6K7 RF	245	65	2.4	2.4	6.0	6.0
6B8 Mixer	140	0	0	0	0	0
6B5 Dc	200	85	4.4	4.4	4	4
6K7 1st IF	245	65	2.4	2.4	6.0	6.0
6K7 2nd IF	245	65	2.4	2.4	6.0	6.0
6PS DC AMP	245	65	2.4	2.4	6.0	6.0
6H6 2nd D-F	150	0	0	0	0	0
6PS 1st A-F	150	0	0	0	0	0
6PS Inverter	245	65	2.4	2.4	6.0	6.0
6PS Drivers	245	65	2.4	2.4	6.0	6.0
6AL5	335	0	0	0	0	0
80 Rect	340	0	0	0	0	0
6AR5 EYE	245	65	2.4	2.4	6.0	6.0

IF PEAK 456 KC

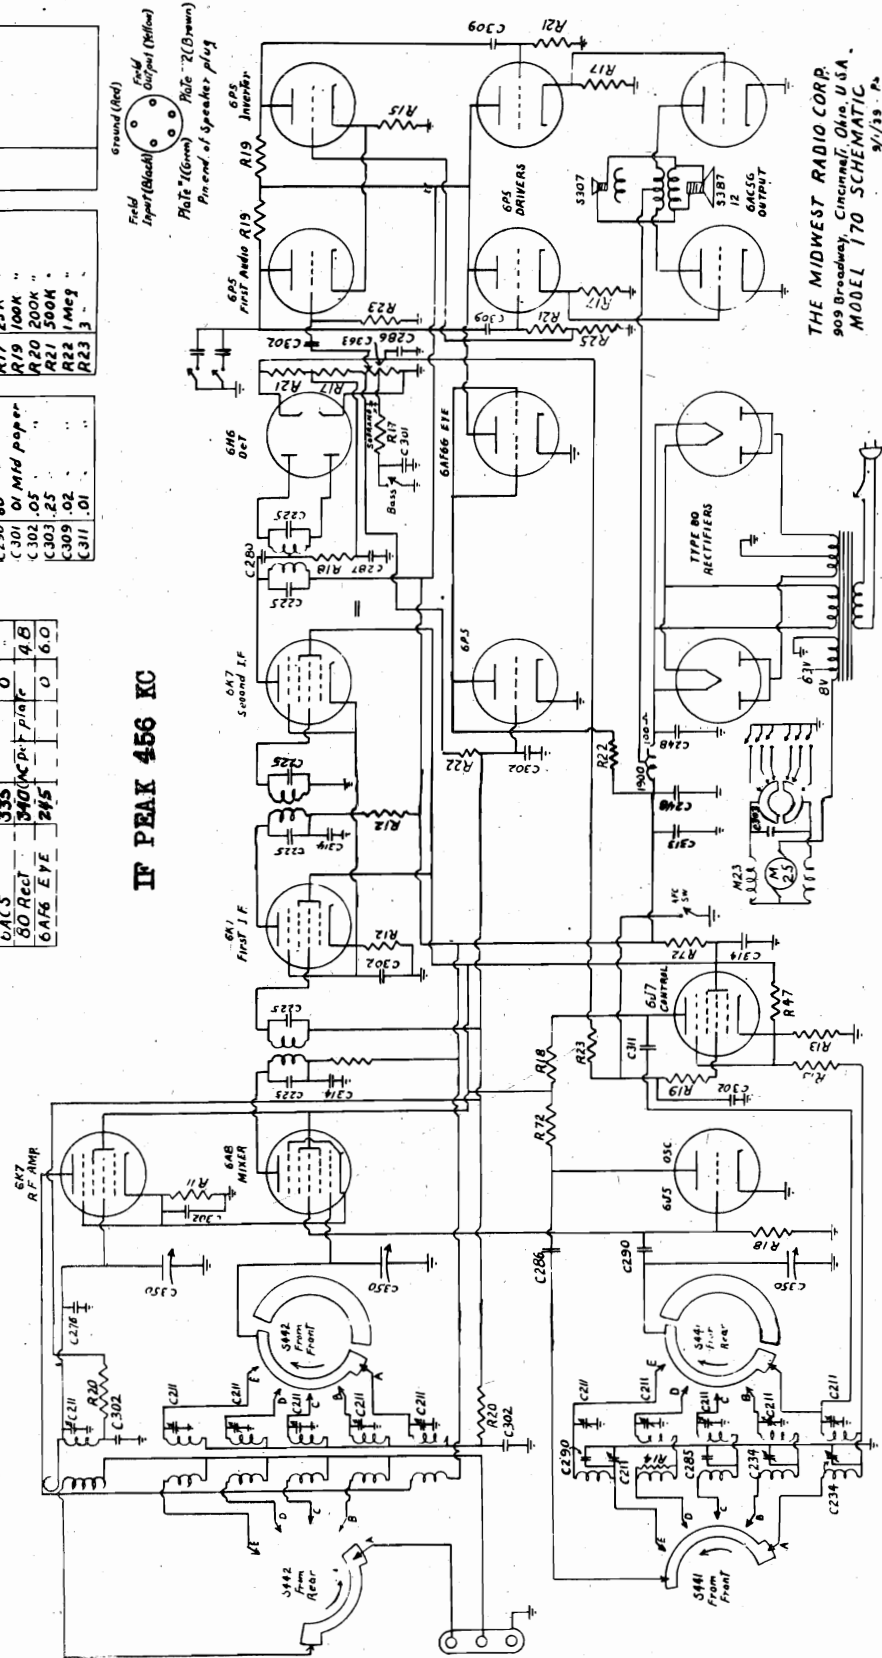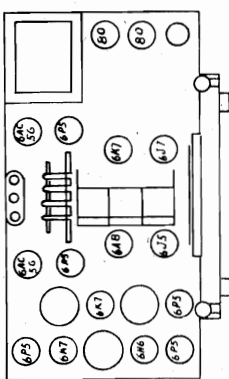


THE MIDWEST RADIO CORP.
909 Broadway, Cincinnati, Ohio, U.S.A.
MODEL 170 SCHEMATIC
9/15 - P4

MISSION BELL RADIO MFG. CO., INC. MODELS 407, 408, 412
Schematics

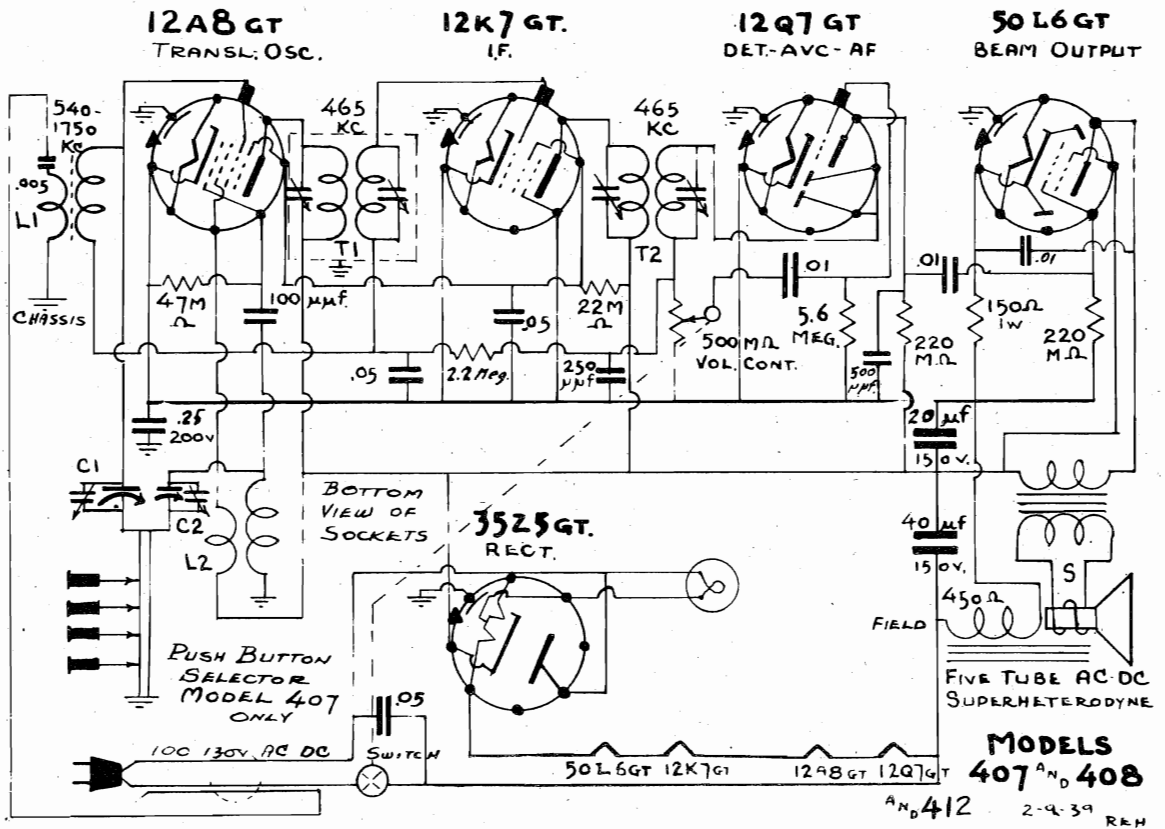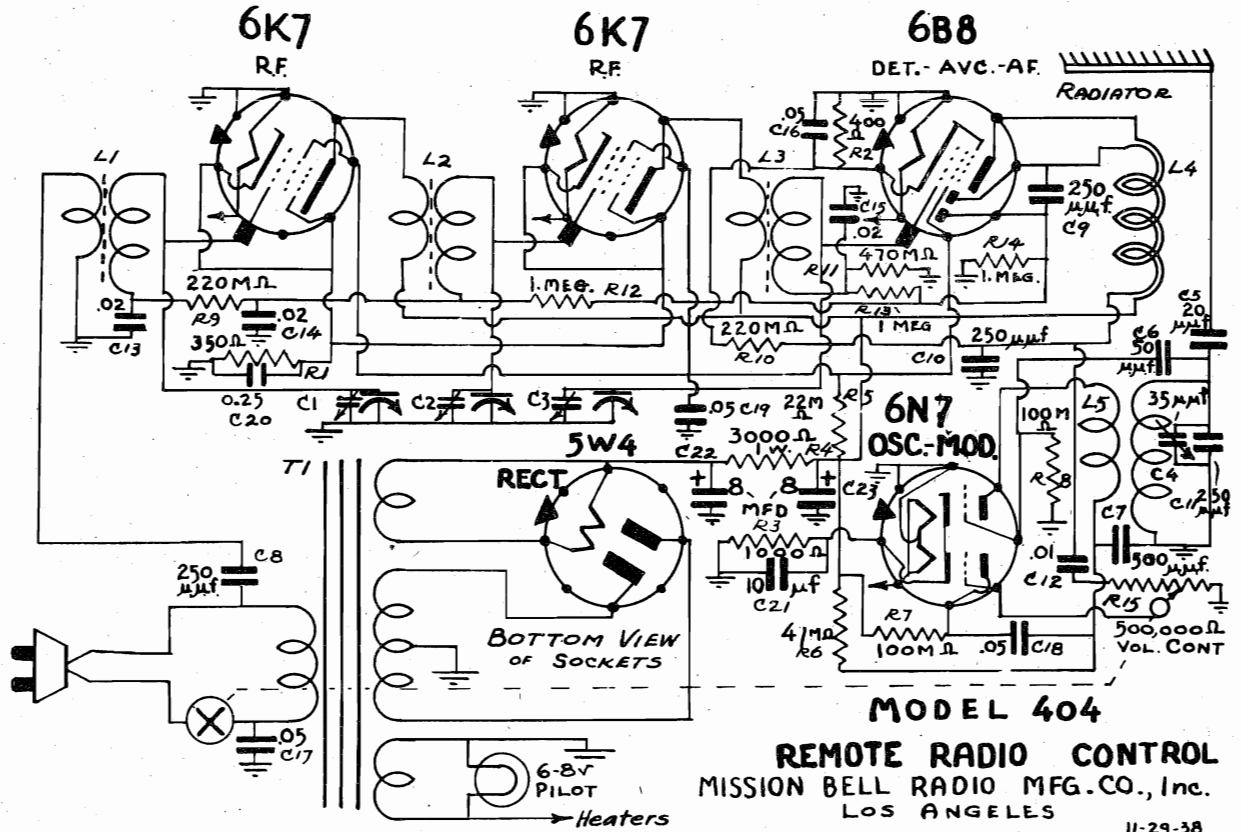


Schematics

MISSION BELL RADIO MFG. CO., INC. MODEL 410 Record Player

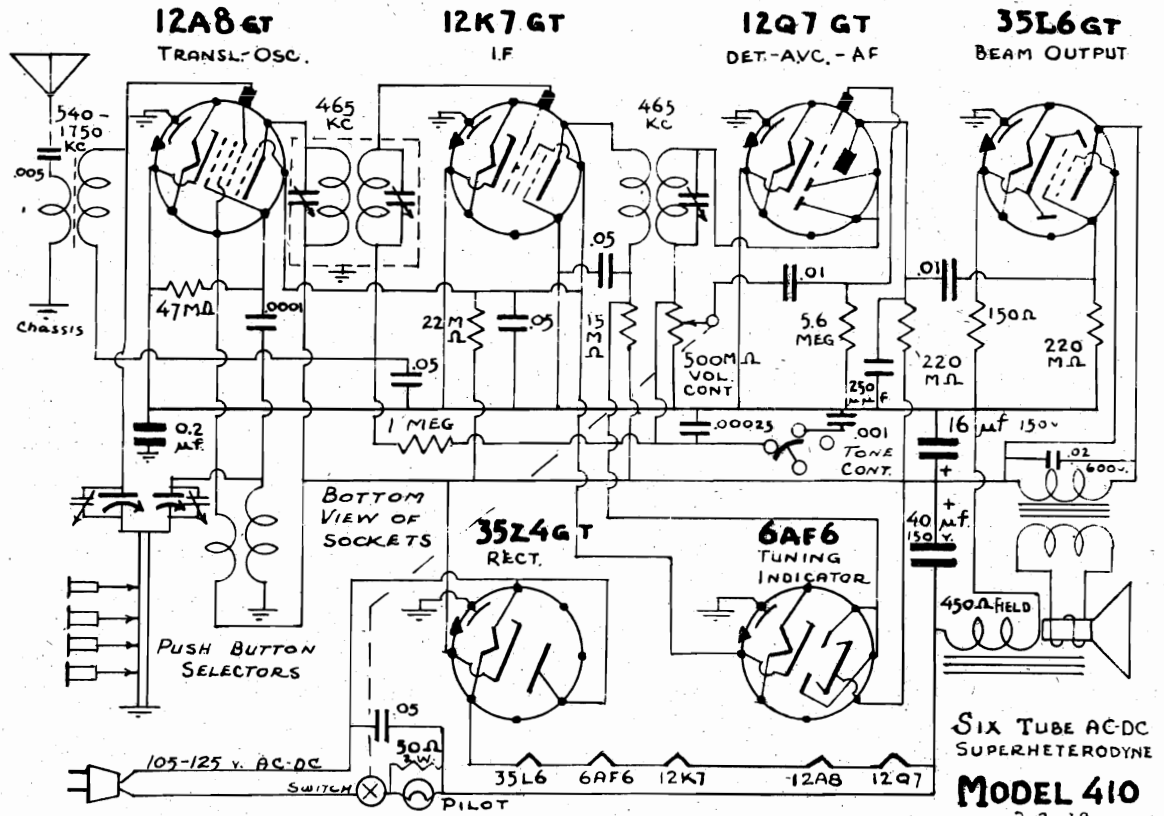

SIX TUBE AC-DC SUPERHETERODYNE
MODEL 410
2 2 39 REH

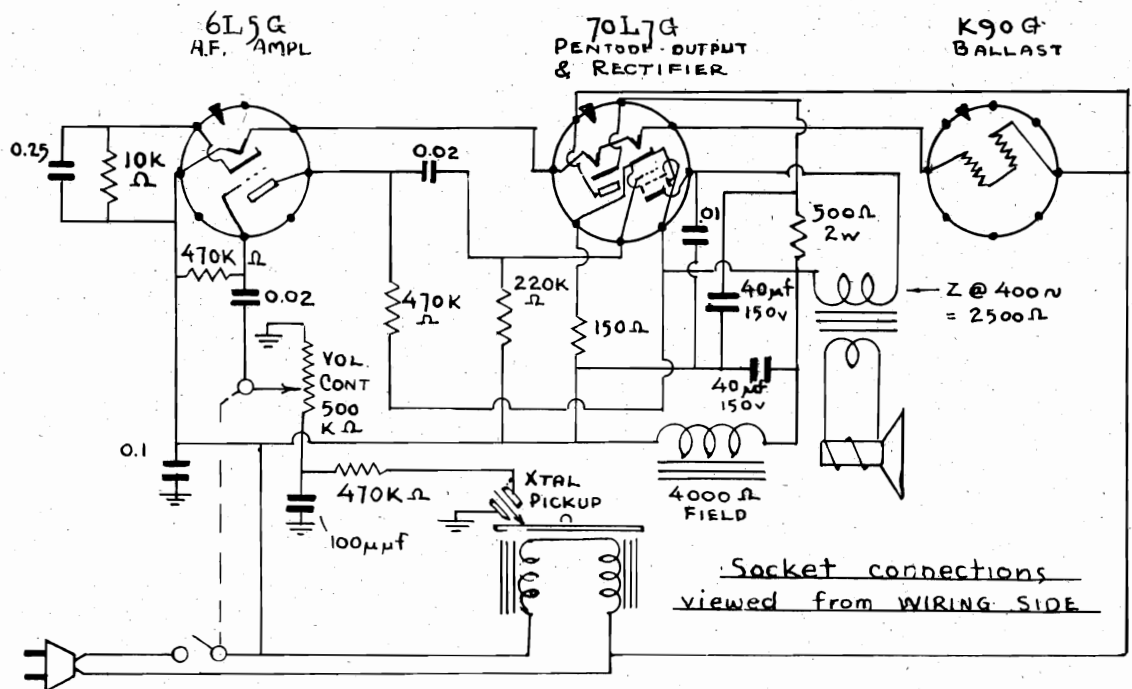


AMPLIFIER
RECORD PLAYER
MODEL 498

MISSION BELL RADIO
MFG. CO., INC.
LOS ANGELES
6-19-39 REH

MODEL 416
Schematic

MISSION BELL RADIO MFG. CO., INC.

9-12-39.

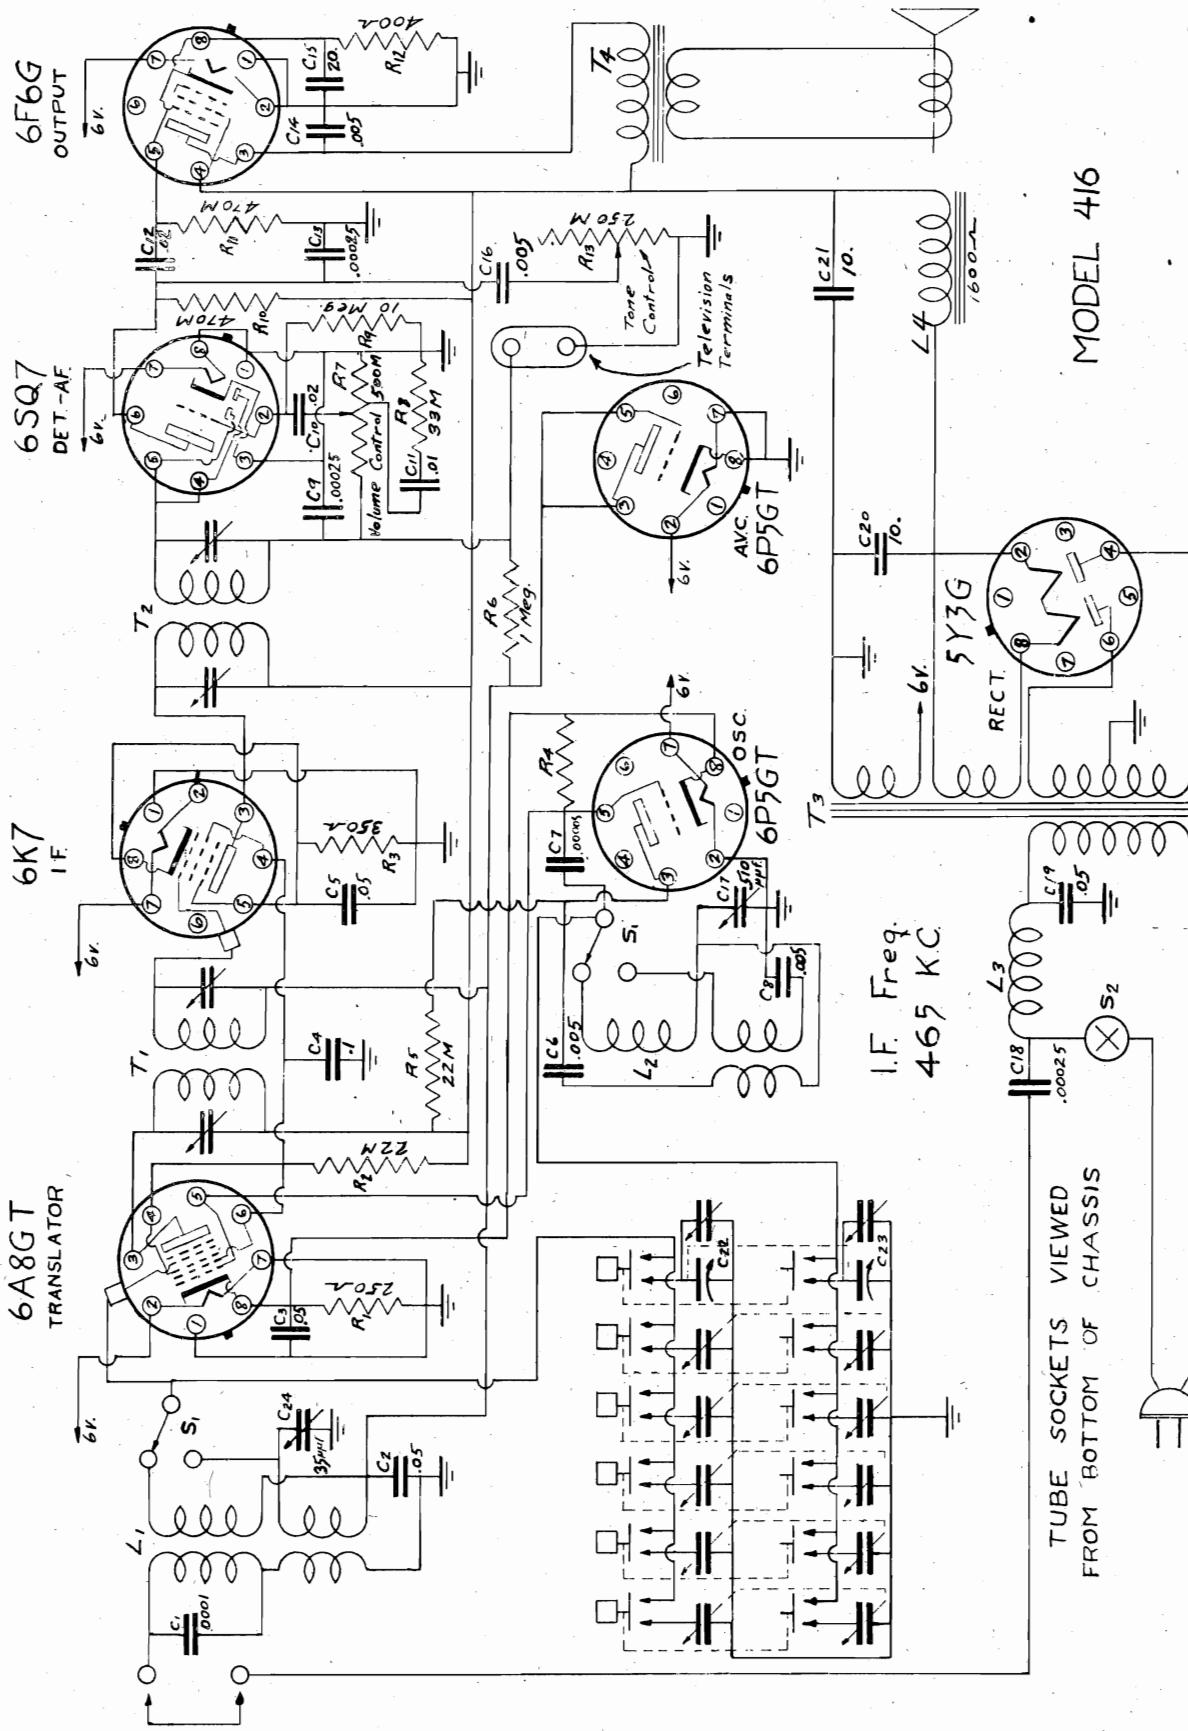


MODEL 416

TUBE SOCKETS VIEWED
FROM BOTTOM OF CHASSIS

MISSION BELL RADIO MFG. CO., INC.


MODEL 417
Schematic

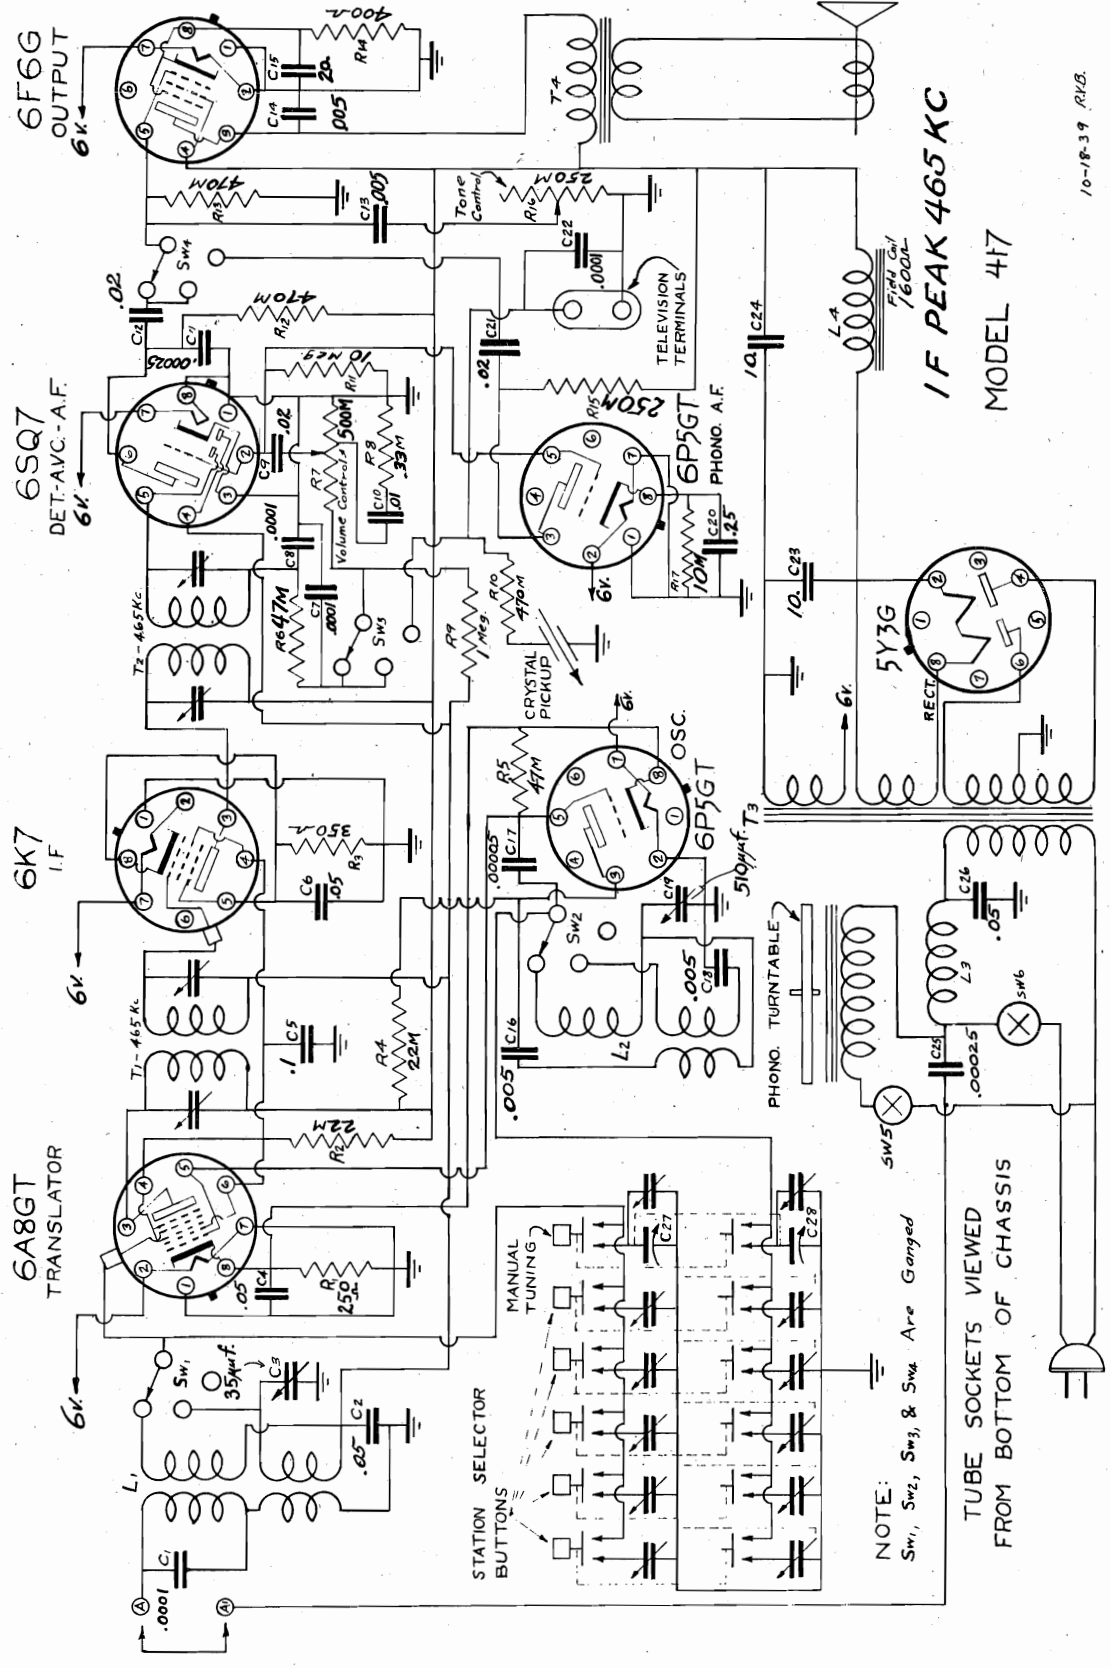

10-18-39 R.H.B.

MODEL 504
Schematic

MISSION BELL RADIO MFG. CO., INC.

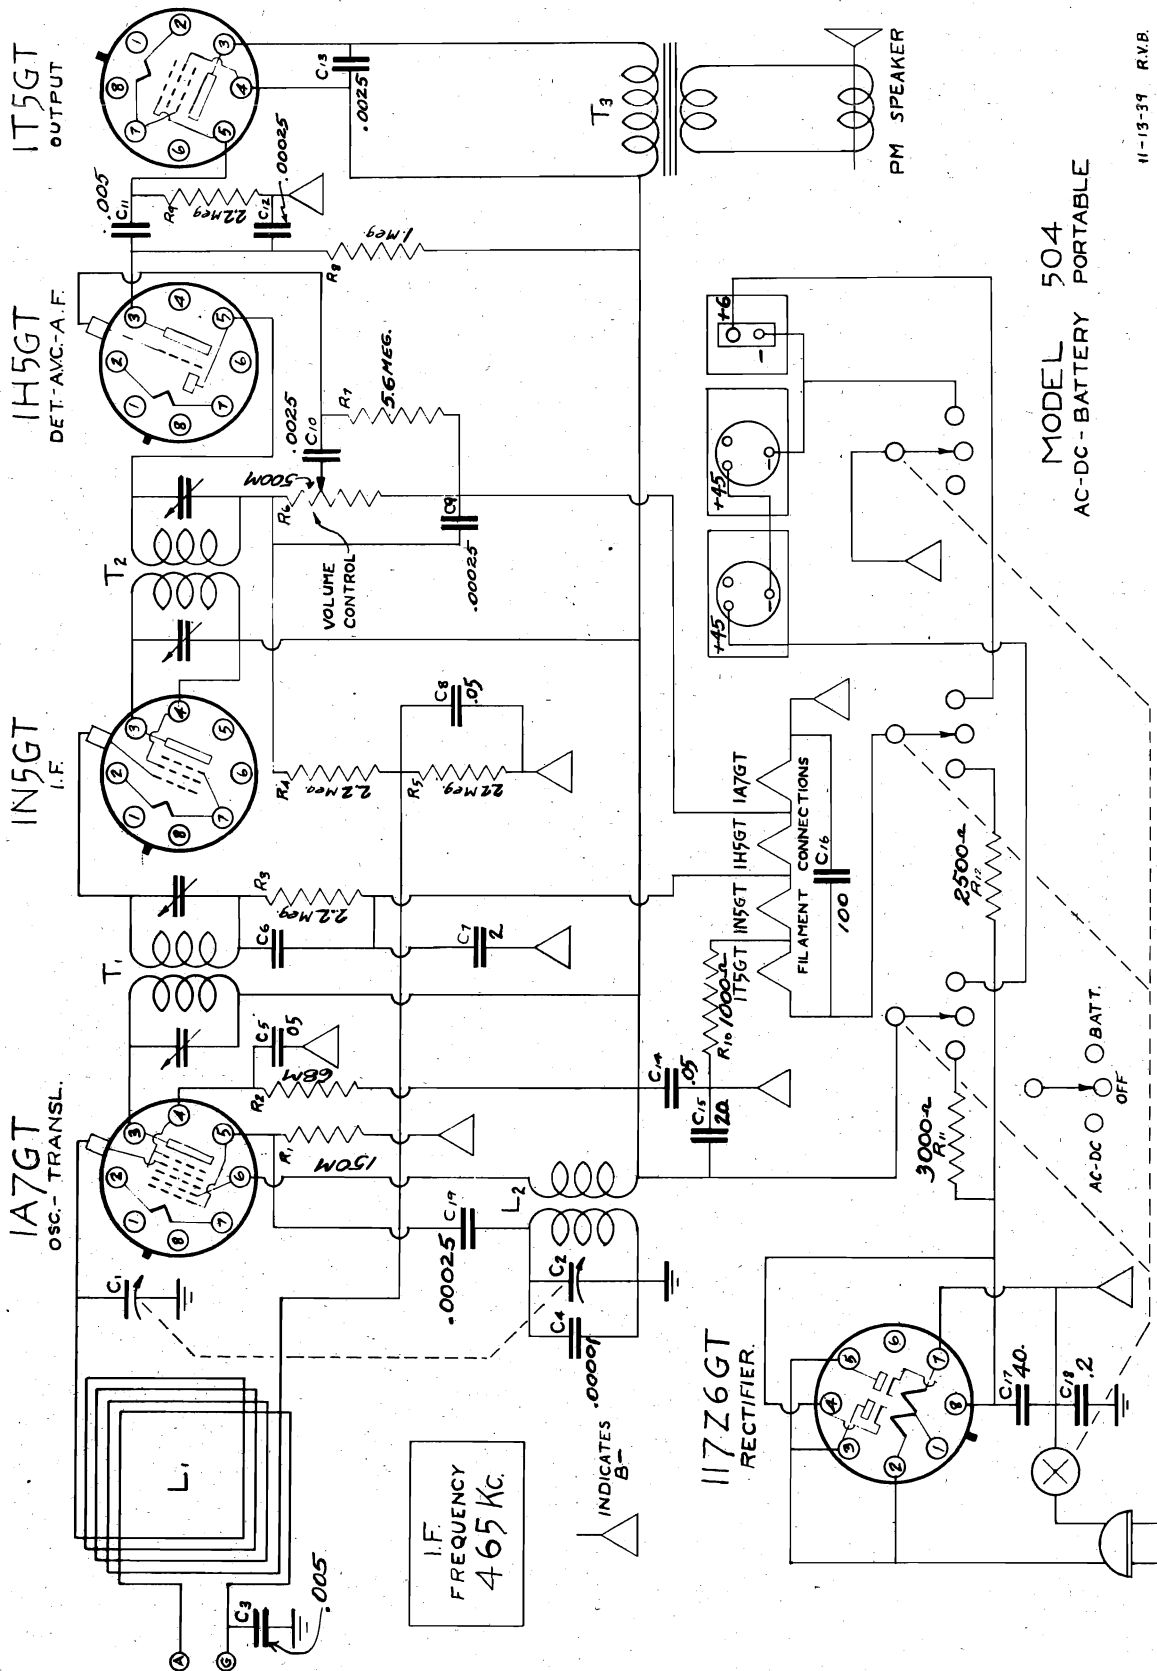

MONTGOMERY WARD & CO.

MODELS 62-303, 62-433
Schematic, Socket, Coils
Transformer, Phono, Conn.

POWER CONSUMPTION---160 WATTS AT 117 V. 60 CYCLES.
190 WATTS (MOTOR OPERATING).
POWER OUTPUT-----20 WATTS UNDISTORTED.
30 WATTS MAXIMUM.

SPEAKER:-
12" DYNAMIC.


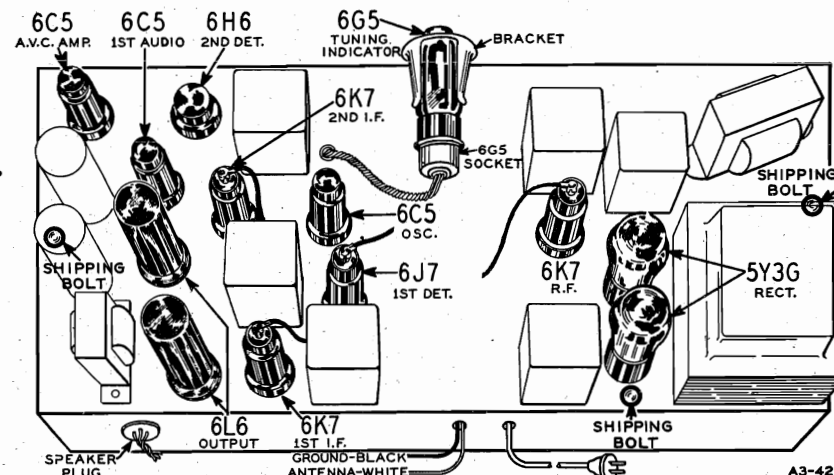


Fig. 6—Location of Tubes

1ST ANT. "B" TRANS. T2 ANT. R.F. TRANS. "C" & "D"—2ND ANT. "B" T1 INTERSTAGE R.F. TRANS. T3

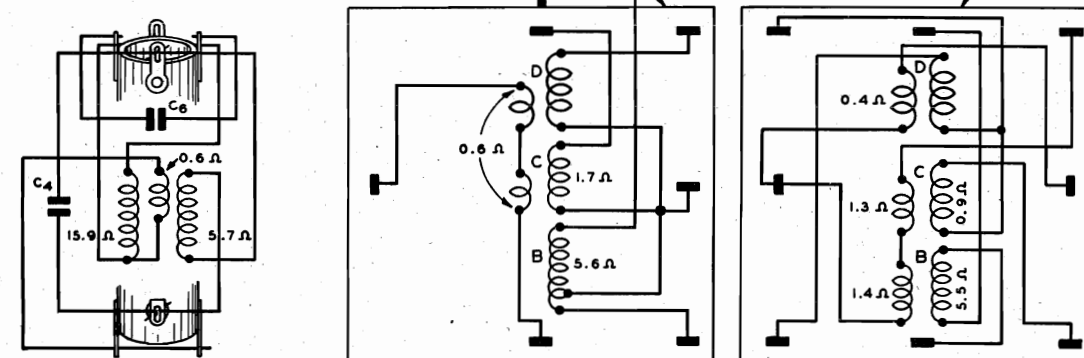

RANGES:-
B- 528 - 1830 KC
C- 1810 - 6350 KC
D- 6300 - 22000 KC

Fig. 5—R.F. and Oscillator Coil Base Terminal Arrangement and D.C. Resistance of Windings



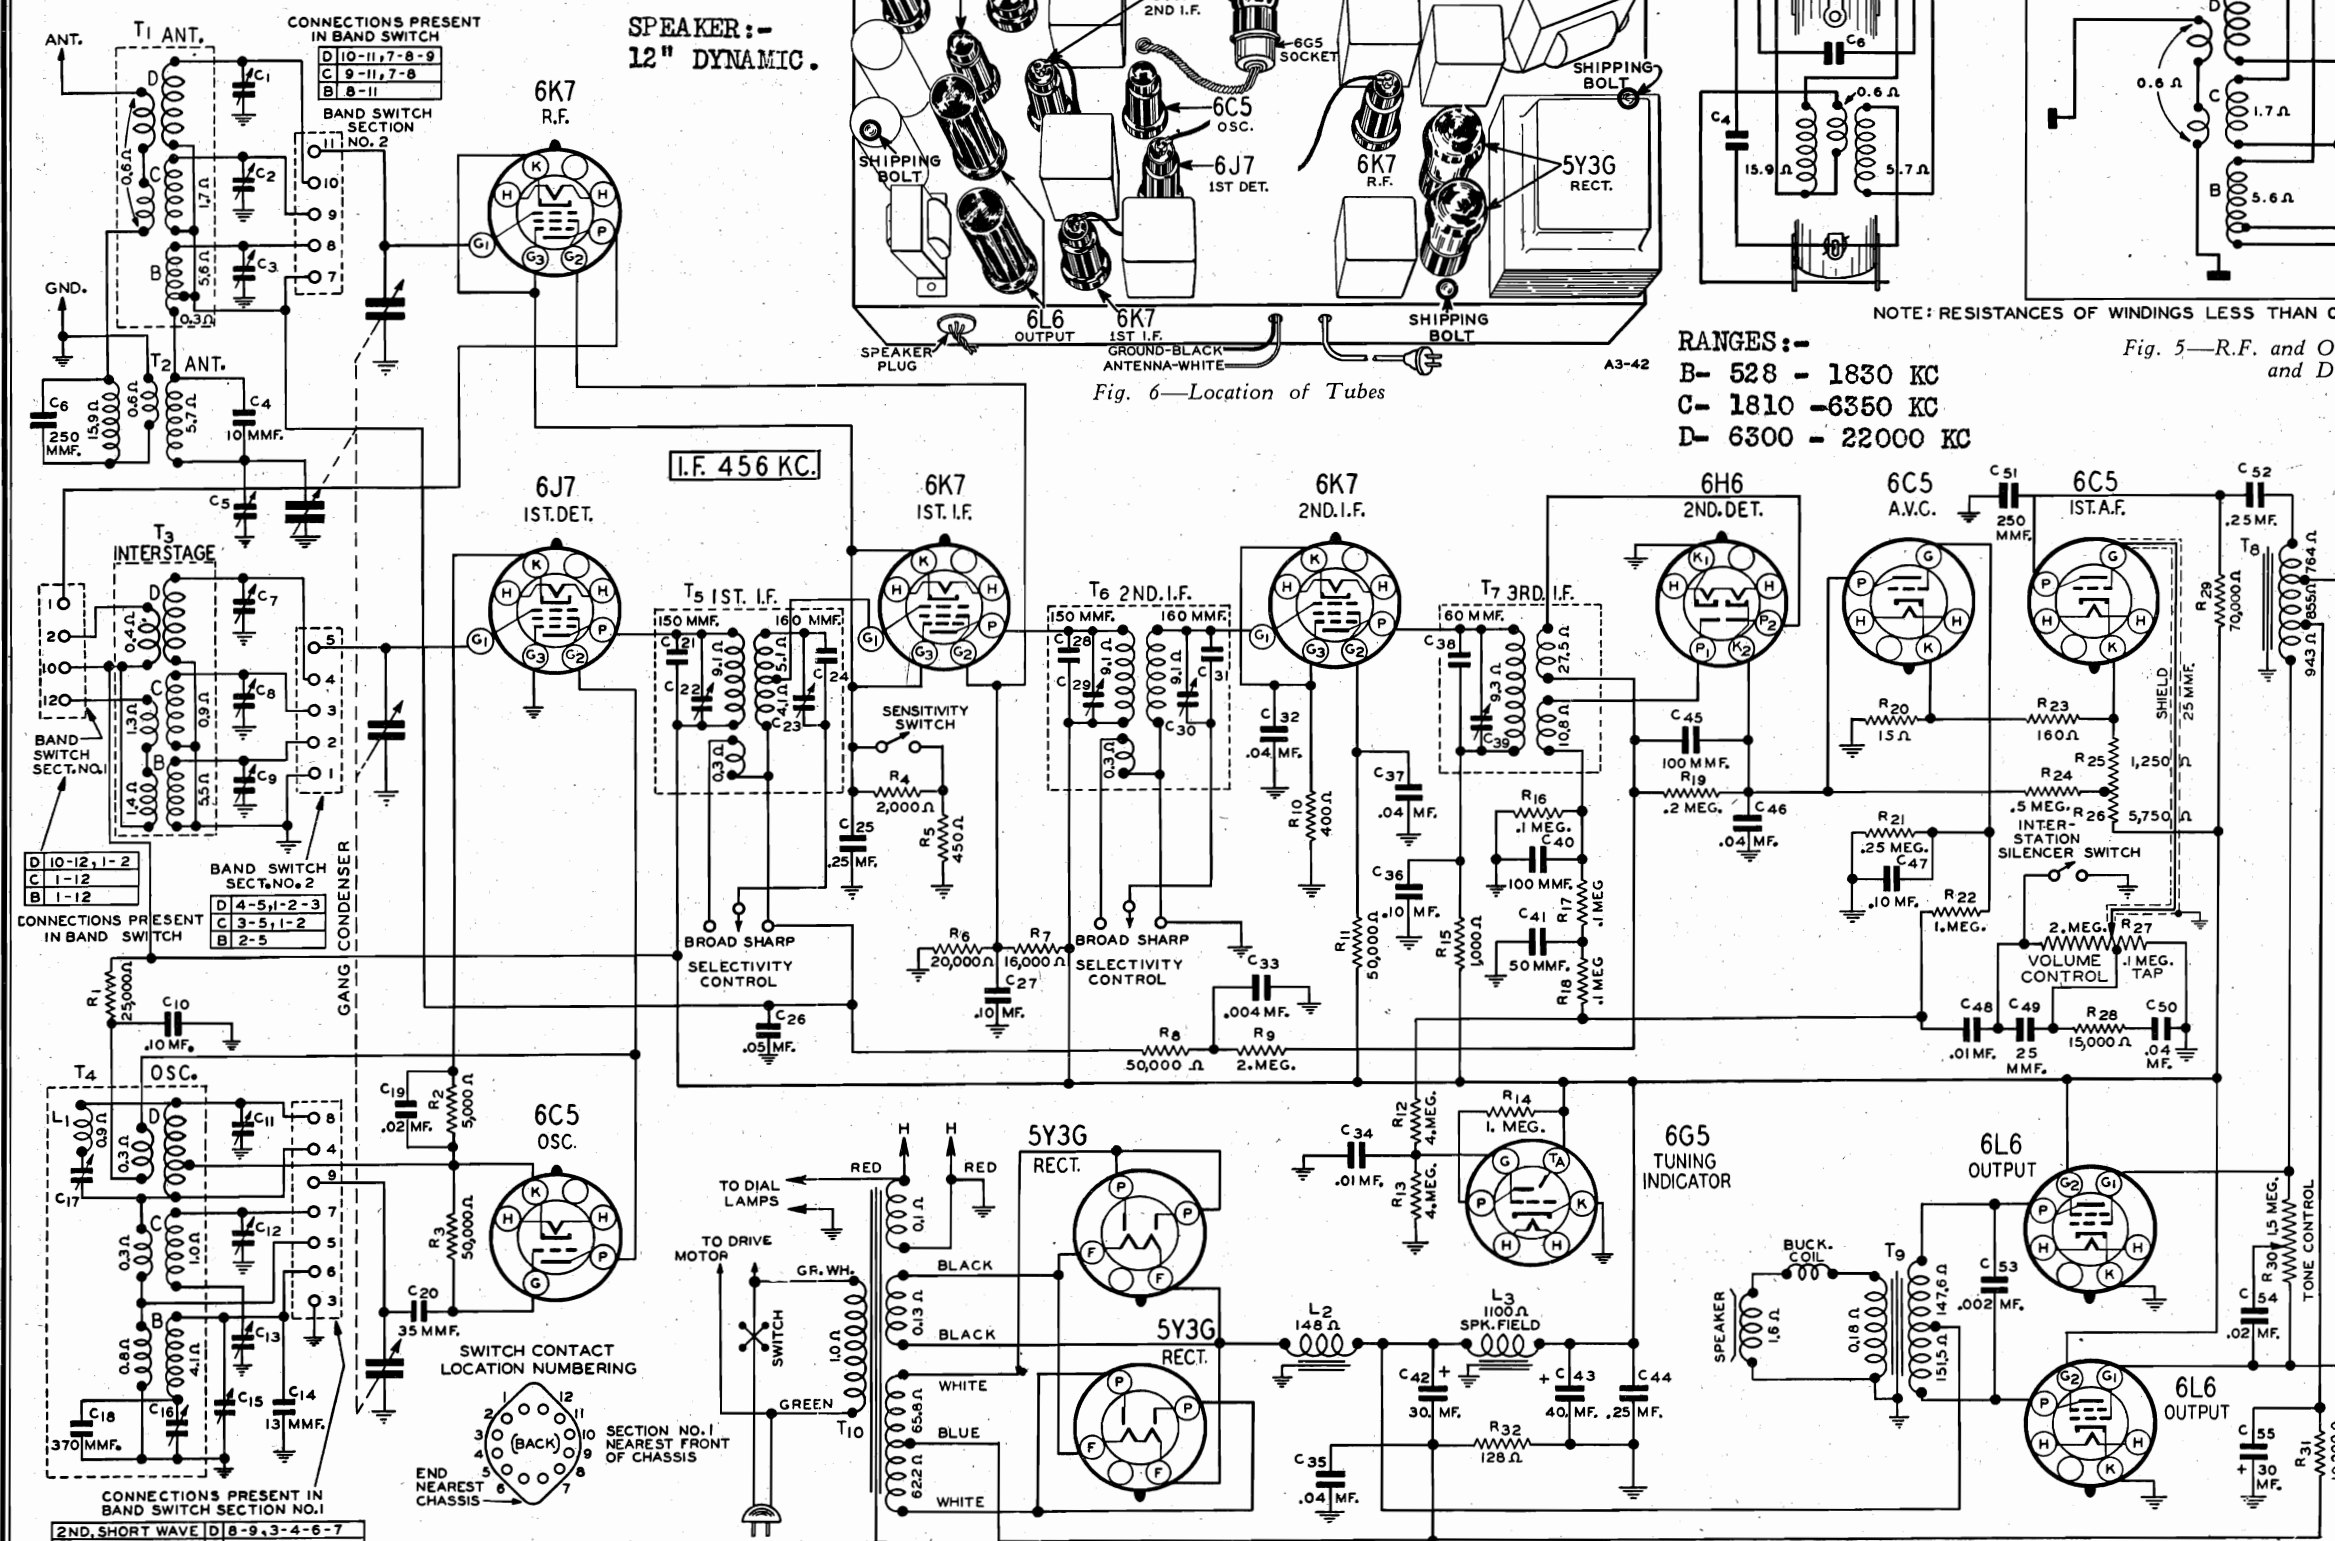


Fig. 2—Schematic Circuit Diagram


OSC. COIL T4 SIDE TOWARD FRONT OF CHASSIS

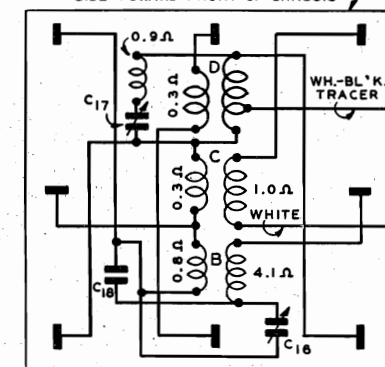

A3-81

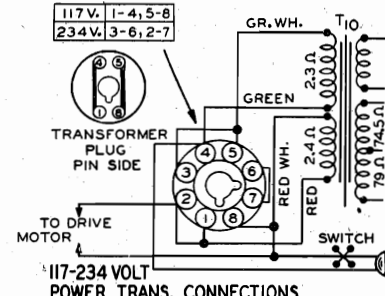

117-234 VOLT POWER TRANS. CONNECTIONS

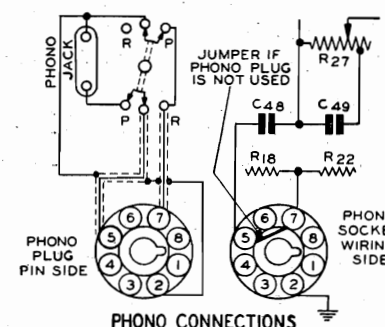

PHONO CONNECTIONS

JULY, 1937 A3-47-E-B

MONTGOMERY WARD & CO MODELS 62-303, 62-433 Alignment, Trimmers Voltage, Notes


A. C. POWER SUPPLY

13 TUBE • 3 BAND • ALL WAVE

ALIGNMENT PROCEDURE table with columns: STEP, BAND SWITCH SETTING, DUMMY ANTENNA, SIGNAL GENERATOR, TRIMMERS ADJUSTED, INITIAL STEPS, ADJUSTMENT

Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC. After each range is completed, repeat the procedure as a final check.

In sets using any other type of dial mechanism, it will be necessary to adjust the position of the indicator until it is at the 1500 KC mark.

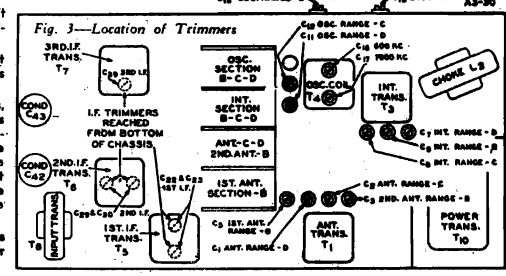


117-234 Volt Power Transformer Some models are equipped with a 117-234 volt universal power transformer. Connections as shown in Fig. 2 are completed to a special octal socket mounted on the back panel of the chassis.

VOLTAGES AT SOCKETS table with columns: TUBE, FUNCTION, Prong No. 1-8, Voltage

Twenty-Five Cycle Models Twenty-five cycle receivers not equipped with an electric motor drive, differ from sixty cycle receivers only in the fact that a different power transformer is used.

Dial and Drive Assembly Complete information regarding the dial and drive assemblies will be found in the Dial and Drive Service NOTES issued for this chassis.

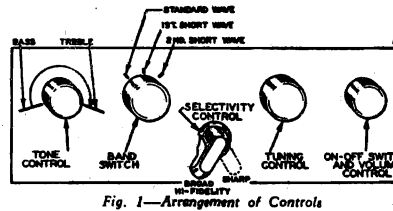


MODELS 62-303, 62-309, 62-321, 62-347, 62-417, 62-433, 62-447, 62-449, 62-451 Elec. Drive Panel Assembly MONTGOMERY WARD & CO. Replacement Instructions Notes

CAUTION When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.

When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.


When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.

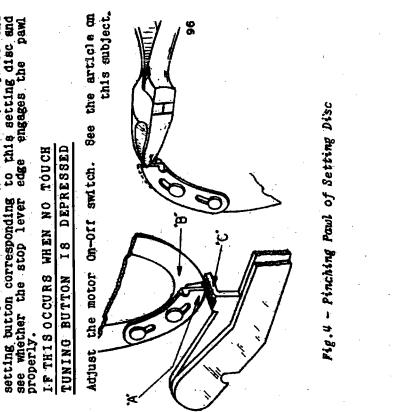

MOUSEING BOLTS The bolts with heads painted red are furnished with the electric drive panel and must be used in the top mounting holes only.

When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.


When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.

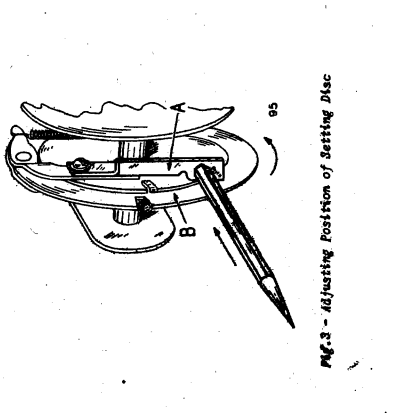

When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.

When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.


When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.

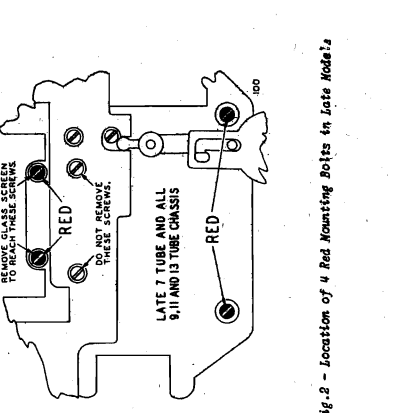

When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.

When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.

When the electric drive panel is removed from the chassis, there is a possibility that the motor on-off switch on the back of the unit will be damaged or thrown out of adjustment.

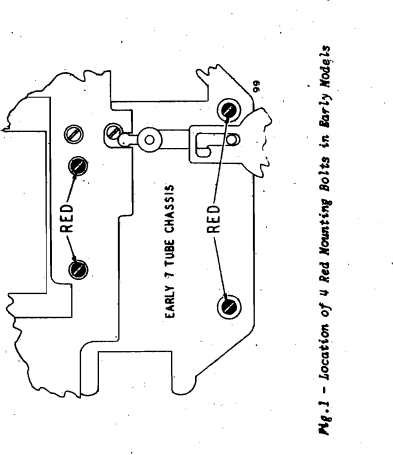

MODELS 62-303, 62-309, 62-321
62-347, 62-417, 62-433, 62-447
62-449, 62-451
Drive Panel Adjustments
Compound Gear Notes

MONTGOMERY WARD & CO.

Adjusting or Replacing the Motor On-Off Switch

ADJUSTING SWITCH

The motor On-Off switch is at the upper right side of the panel (from back of radio). If this switch is not properly adjusted, the motor may not start when the touch tuning button is depressed or the motor may stop when the station is tuned in by means of the electric mechanism.

To check this switch, remove the fibre cover by taking out the screw which holds the bracket over this fibre cover.

When the switch operating lever (offset metal piece shown back of assembly which interacts with the 8 setting discs - see Fig. 6) is in its lowest position, the switch will close and at the same position of the lever the switch will again open.

If the switch does not appear to operate in this manner, loosen the 2 screws which hold it in place. Grasp the bakelite base of the switch at the left side (from back) and raise or lower it until the action as mentioned above is satisfactory. When properly adjusted, the switch base may have to be bent slightly to get the switch lever to get the proper throw of the switch mechanism.

REPLACING SWITCH

If the switch mechanism is broken or cannot be put in proper working order, a new one may be ordered. The old switch is removed by taking out the 2 screws which hold it in place and unscrewing the 2 switch leads.

Replacing Compound Gear

Remove belt and idler pulley - See Fig. 6.

Refer to turnbuckle take-up on steel drive cable - See Fig. 6. Observe position of hex nut on the stud of this cable. It is important to see how many threads this nut is from the end of the stud.

Loosen the main drive cable by loosening the hex nut on the stud and backing off the round knurled nut about 5 half turns.

Remove horseshoe washer. From gears 1 and 2, spreading the washers by means of long nose pliers and screwdriver.

General Adjustments

IF, WHEN A TOUCH TUNING BUTTON IS PUSHED IN, THE MOTOR DOES NOT TURN

Push the button which has previously been depressed or say other touch tuning button, all the way in and release. Then again push in the button which is wanted and at this time the drive should function.

The motor On-Off switch may be out of adjustment - See article on that subject in this manual.

JUMPY ACTION WHEN TUNING

Put gear drive in motor - Return electric drive panel to factory to have this done.

EXCESSIVE BACKLASH

IN MANUAL TUNING

If there is too much backlash when tuning the radio manually, free the film drum cable. To do this, stretch the film drum cable. Also stretch the phosphor bronze film drum cable and oil the pulleys on which this cable runs. Check the tightness of the set screws holding the drive drum to the tuning condenser shaft.

MOTOR ROTATES BUT DIAL FIGURES DO NOT MOVE

Correct this condition in the same manner as described above under "Backlash in Manual Tuning" (early models only).

Occasionally this condition can be remedied by turning the tuning knob in this position, then turn the tuning knob with the other hand a slight amount in the direction in which it turns most easily. Then turn the electric-mechanism lever back to the electric position.

The friction disc in the motor may slip. Change to the gear drive in the motor - Return electric drive panel to factory to have this done.

The fibre gear No. 1 (see Fig. 6) may be slipping on its hub. Replace this gear - See article on that subject in this manual.

IF THE DIAL DOES NOT STOP AT THE SAME POINT EACH TIME THE BUTTON IS DEPRESSED

IF THIS OCCURS ON ONE BUTTON ONLY - It will be necessary to replace the detentive setting disc at the top of the button. Return the electric drive panel to the factory to have this done.

IF THIS OCCURS ON ALL BUTTONS - Tighten the main drive cable by means of the turnbuckle.

See if set screws on top pulley of main drive cable are tight.

Check spring clip on drive drum of tuning condenser which holds drive arm to see whether or not it is gripping this arm tightly.

The silencer switch spring assembly at the front of the electric drive panel may not have sufficient spring tension to break the assembly before the circuit is broken. This assembly has two pins on the circuit. First, it silences the radio while the motor is in operation. Its second function is to exert a slight spring action on the end of the armature shaft which extends from the motor.

Inside of the motor is a small pinion gear which rotates on the armature and two extensions on the gear. The entire armature shaft assembly slides back and forth in its bearings.

When the circuit thru the motor is complete, magnetic action causes the armature shaft to slide toward the front of the panel. The force is strong enough to overcome the tendency of the silencer switch spring to prevent this movement.

The small gear comes into close proximity with the armature and the two pins and two extensions mentioned above engage, causing this gear to rotate with the armature. When the circuit thru the motor turns off, the magnetic pull on the armature is released and the silencer switch spring forces the armature toward the front of the panel, causing the small gear to disengage from the armature proper.

Now to get back to our original thought. If there is slack tension in this spring, it will not push back the armature. The force is strong enough to overcome the inertia of the motor will continue to exert a driving force on the train of gears. To overcome this condition, tighten the spring by bending it. Care must be taken to bend the spring in the direction in which this would prevent engaging the armature with the spring when the current is on. Care should also be taken not to bend the spring assembly in such a manner that the two points will be permanently in contact.

DRIVE SLIPPAGE WHEN TUNING THE RADIO MANUALLY

Increase amount of oil on drive belt - Clean off oil. Excessive tension on drive belt by re-adjusting position of idler (early models only).

Both drive cables too tight - Loosen tension on main drive cable by means of turnbuckle and on film drum drive cable by lessening tension on idler tension spring. Friction disc in motor blades - Change to gear drive in motor - Return electric drive panel to factory to have this done.

BUTTONS WORK STIFFLY

The touch tuning buttons may not push in easily. This may be due to the fact that the chassis is too far forward in the cabinet - Pull it back slightly.

Put some grease on each touch tuning button shaft at the point where it passes thru the front locking plate.

IF THE DIAL FIGURES REACH THE END OF THE SCALE AND STOP, BUT MOTOR CONTINUES TO OPERATE

Loosen the reversing switch mounting screws and adjust position of this bracket up or down until the switch operates properly. If this procedure does not remedy the trouble, the reversing switch - one of these can be obtained from the factory. Later models are already equipped with this spring. - See Fig. 5.

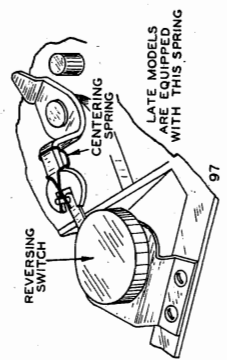


Fig. 5 - Use of Centering Spring on Early Models

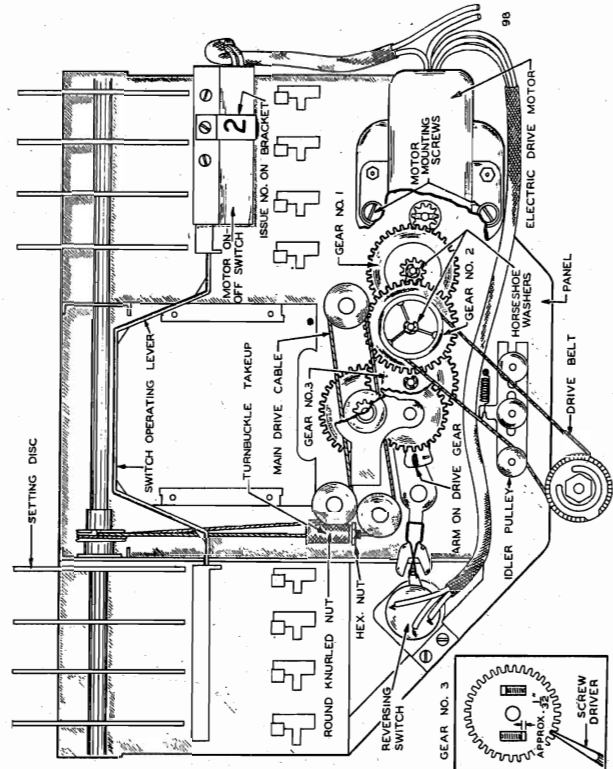


Fig. 6 - Rear View of Electric Drive Panel Showing Gear Assembly

Replacing Main Drive Cable

Check for take-up on gear 5. Approximately 1/32 inch of the fixed gear (bottom) will show through slot in top gear - See Fig. 6.

Reassemble motor to frame, pushing tension spring under motor shaft. Be sure to use the same screws to mount the motor to the frame that were taken off. Care must be taken that the piton gear in the motor meshes properly with gear on shaft. The motor meshes should be properly adjusted so close together that they bind, pull the motor away from gear No. 1 before tightening the mounting screws.

Replace belt and idler pulley.

Tighten turnbuckle on main drive cable bringing hex nut to its former position and round knurled nut down tight against hex nut washer.

Reassemble electric drive panel to chassis.

Take out the 2 motor mounting screws and lift the motor out of place - See Fig. 6.

Lift up the main drive cable to clear the teeth at the top of gear 2 - take care not to nick the cable.

Remove gears 2 and 1.

Put the new fibre tooth gear on the shaft and replace horsehoe washer.

Now refer to gear assembly 3 - See Fig. 6. The top gear of this assembly is movable and the bottom gear is fixed. Rotate the top gear one tooth clockwise relative to the bottom gear and hold the two in this position with a screwdriver - see Fig. 6.

Slide gear 2 on its shaft, pulling the main drive cable over the top of the teeth - again care must be taken not to nick the cable.

Push gear 2 all the way on its shaft, engaging gears 1 and 5. Replace the horsehoe washers.

Replacing Main Drive Cable (No. 2 and Later Issue Panels)

The main drive cable is the steel cable which has the turnbuckle take-up. A change was made in this cable and the method of stringing it early in production.

Later models with the new cable can be identified by the numeral 2 stamped on the socket from the end of the cable. Models with the old cable will have numeral 1 stamped on the socket from one of the set screws which hold the top pulley of this cable in place.

EARLY MODEL CABLE - Should cable breakage or any kind of major cable trouble be experienced which would require restringing of the cable in the early models, do not attempt to disassemble the cable from the electric drive panel assembly from Walls-Gardner and Co. (except in case of early 7-tube set).

LATER MODEL CABLE - Should cable restringing be required in the case of the later type, this can readily be accomplished by the user with the new drive cable, and is necessary, and putting it on in accordance with the following instructions:

Remove electric drive panel from chassis.

Remove the old drive cable. It will have to be unsoldered at pulleys B and E. See Fig. 11. Turn electric-manual lever to manual position.

From the front of the panel, turn manual tuning knob to the right (clockwise) as far as it will go. This will bring the arm on the drive gear to the left (from back of panel) - See Fig. 6.

Now support the panel in such a manner that it is held firmly in an upright position, the back of the panel toward the operator. The bottom of the casting can be supported by a screwdriver. Care should be taken not to distort the castings.

Referring to the new drive cable, it will be noted that one end has a screw fitting and the other end has a round knurled nut fitting. These two fittings together with the hex nut and lock washer comprise the turnbuckle take-up.

With screw end F (Fig. 7) hanging down, place the cable into the vertical slot at the back of pulley B with the knot inside of the opening at point G.

Then wind the screw end of the cable on pulley B in a clockwise direction so that the portion of this cable which is in slot H.

Bring the screw end of the cable over to pulley A and hold it in this position. This can be done by fastening a 1/2 inch stout cord to the end of the cable. Attach the cord to the top of the panel as shown in Fig. 7. Instead of a stout cord, the round knurled nut and old cable can be secured to the screw end of the new cable.

Now refer to the portion of the cable that is in the slot at point H pulley B. Using a screwdriver, push the cable into groove J. CAUTION: Do not use a metal prod as this may damage the cable. It is important that the cable at groove J be kept close to the front flange of pulley B (flange nearest panel), while the portion of the cable between groove J and pulley B is kept close to the back flange of pulley B so that the cable from pulley A will ride freely in the center of pulley B - as shown in Fig. 11.

Then from groove J bring the cable in a counterclockwise direction 1/2 turn around pulley B, over to pulley C, 1/2 turn around pulley C, over to pulley D, and then up to the shaft at the right of pulley E. Be sure the cable is well down in slot H, pulley B.

Wind the cable LOOSELY one and one-half turns around this shaft, progressing toward the left as shown in Fig. 6.

Rotate the setting discs until pulley E is approximately in the position shown in Fig. 9. Using a thin wooden prod, place cable in slot L with knot in hole at point K of pulley E. Rotate the setting discs a slight amount until the cable in the slot provides clearance to slide down into slot L - See Fig. 9.

Rotate the setting discs 3/4 of a complete revolution in such a direction that the top of the discs move toward the front of the panel. Bring the round knurled nut under the loop of the cable as shown in Fig. 10.

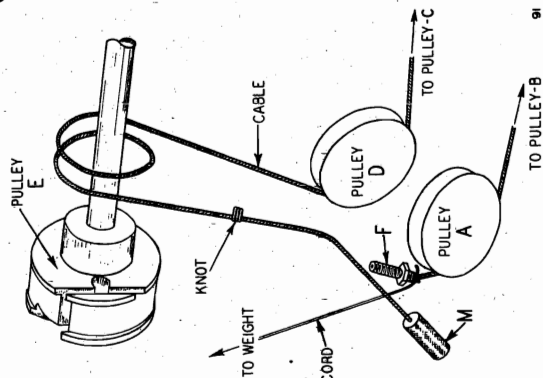


Fig. 8 - Drive Cord Replacement - Step No. 2

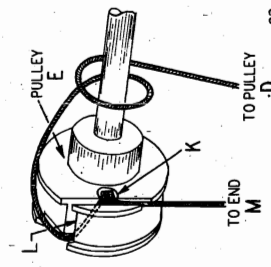


Fig. 9 - Drive Cord Replacement - Step No. 3

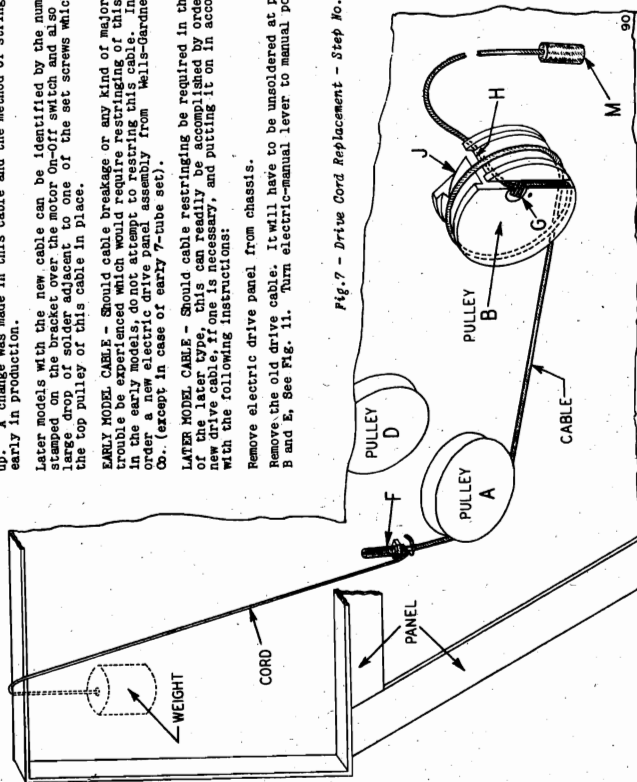


Fig. 7 - Drive Cord Replacement - Step No. 1

MONTGOMERY WARD & CO.

MODELS 62-303, 62-309, 62-321
62-347, 62-417, 62-433, 62-447
62-449, 62-451
Drive Cord Data, Movie Dial

40 Cycle Power Supply

An electric drive chassis equipped with a 117-224 volt 40 to 60 cycle power transformer can be used on a 60 cycle power supply only, unless changed as mentioned below. The electric drive panels of these sets are equipped with 60 cycle motors and these will function satisfactorily only at that frequency.

If one of these radios is to be used on a 40 cycle power supply, it will be necessary to change the motor. The motor regularly supplied with the 25 cycle model is used for this purpose.

25 Cycle Electric Drive Panel

The 25 cycle electric drive panel assembly is identical to the 60 cycle assembly except that a 25 cycle motor and a different gear No. 1 (see Fig. 6) are used.

The pinion gear in the 25 and 60 cycle motors are not the same. If, therefore, one of these pinions is ordered, the type of motor must be specified. (Both 25 and 60 cycle motors are furnished with pinion included.)

Movie Dial Adjustments and Replacements

Replacing and Positioning the Dial Lamp

Caution—If a new lamp is required, use only a No. 81 lamp, Wards catalogue No. 61-8204.

Turn the radio off and turn the band switch to the standard wave position.

Remove the lamp housing by unscrewing and removing the two screws which hold this housing in place—See Fig. 1.

Remove the old lamp from the housing. It will be necessary to depress the contact plug retaining spring which will be seen in the narrow slot near the upper end of the housing and pull the plug out a slight amount from the housing, in order to remove the lamp. Replace the lamp and push the plug down until the locking spring snaps into place.

Replace the lamp housing by means of the two screws, but do not tighten these screws yet.

Turn the radio on.

Then grasp the top of the lamp housing assembly and move it up or down until the image on the screen is clear and the lines are horizontal. The effect of having the lamp assembly too high or low is shown in the illustration in the instruction book. Tighten the two screws.

Replacing Film

Turn the band switch to the standard wave position. Then remove the lamp housing (See article "Replacing and Positioning the Dial Lamp").

Remove weight and cord (or round nut), from screw and F in this cable. Screw round knurled nut onto end of cable. While this is being done, the setting discs should be grasped by another person and rotated as far as they will go in such a direction that the top of the discs moves away from the front of the panel. The purpose of this is to take up all slack in the cable and to enable the two ends of the turnbuckle to be secured together. The cable must be firm and with all slack out. It should be tight, however, that the setting discs and pulleys do not rub freely. The position of the knurled nut must be regulated by the position of the hex nut. The round washer next to the hex nut. The lock washer next to the hex nut. Solder knots at points G and K on pulleys B and E respectively. Reassemble the electric drive panel to chassis.

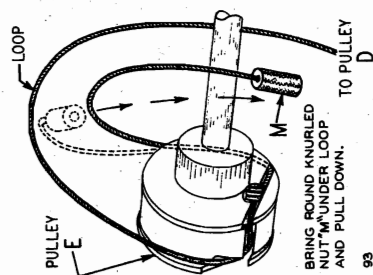


Fig. 10 - Drive Cord Replacement - Step No. 4

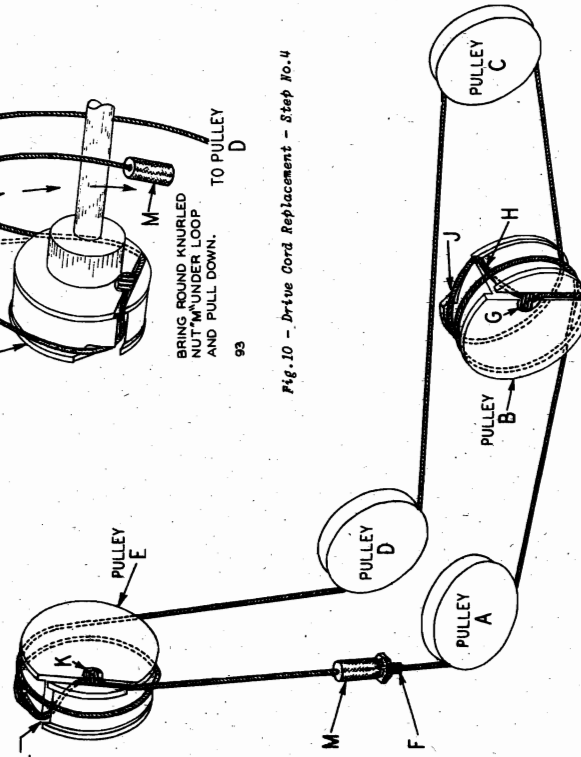


Fig. 11 - Drive Cord Replacement - Complete Assembly

Place cable from pulley D on pulley E at left flange (from back of panel) from pulley B. Now draw cable from pulley B over the discs in such a direction that the top of the discs move away from the front of the panel. Rotate the discs approximately 3/4 of a turn or until the slack in the cable from pulley D is all taken up. Pulley E and the cable will then be in the position shown in Fig. 11 and the knurled nut and F of the cable will be hanging down from pulley E and must be held in tension. The next step is to connect the two portions of the turnbuckle together. Before doing this, see that the cable is on all of the pulleys as shown in Fig. 11. Tension should still be applied to both ends of the cable.

Unscrew and take out the six screws spaced around the edge of the film drum casing. Then carefully lift the edge of the film nearest the back of the chassis. At the same time, lower the opposite edge of the film and slide it in toward the center of the film drum casing. (On two band radios, it will be necessary to lift the lens assembly as high as it will go while removing the film.) When the film clears the lens, it may be lifted out.

To replace the film, reverse the above procedure. Make certain that the entire lower edge of the film rests on the shoulder near the bottom inside the film drum. The radio is calibrated as described in the article under that name in this manual.

Calibrating the Radio

To calibrate the electric drive movie dial radios, tune in a station of known frequency between 530 and 900 KC. In the early models loosen the two set screws in the hub of the film drum pulley. Turn the film drum until it is at the correct kilocycle mark on the dial scale and then tighten the pulley set screws.

In the case of later models, the film drum is held in position by a friction washer which will be seen under the drum. In these models, the film drum can be turned without loosening the set screws.


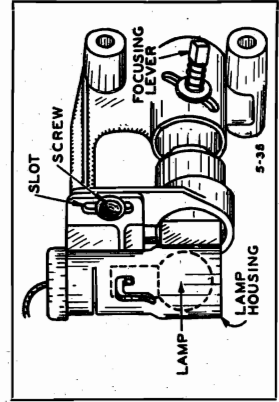


Fig. 1 - Adjusting Lamp Height

FOR ELECTRIC DRIVE
DATA SEE INDEX

MONTGOMERY WARD & CO.

MODELS 62-309, 62-449
Schematic, Selectivity
Transformer Data

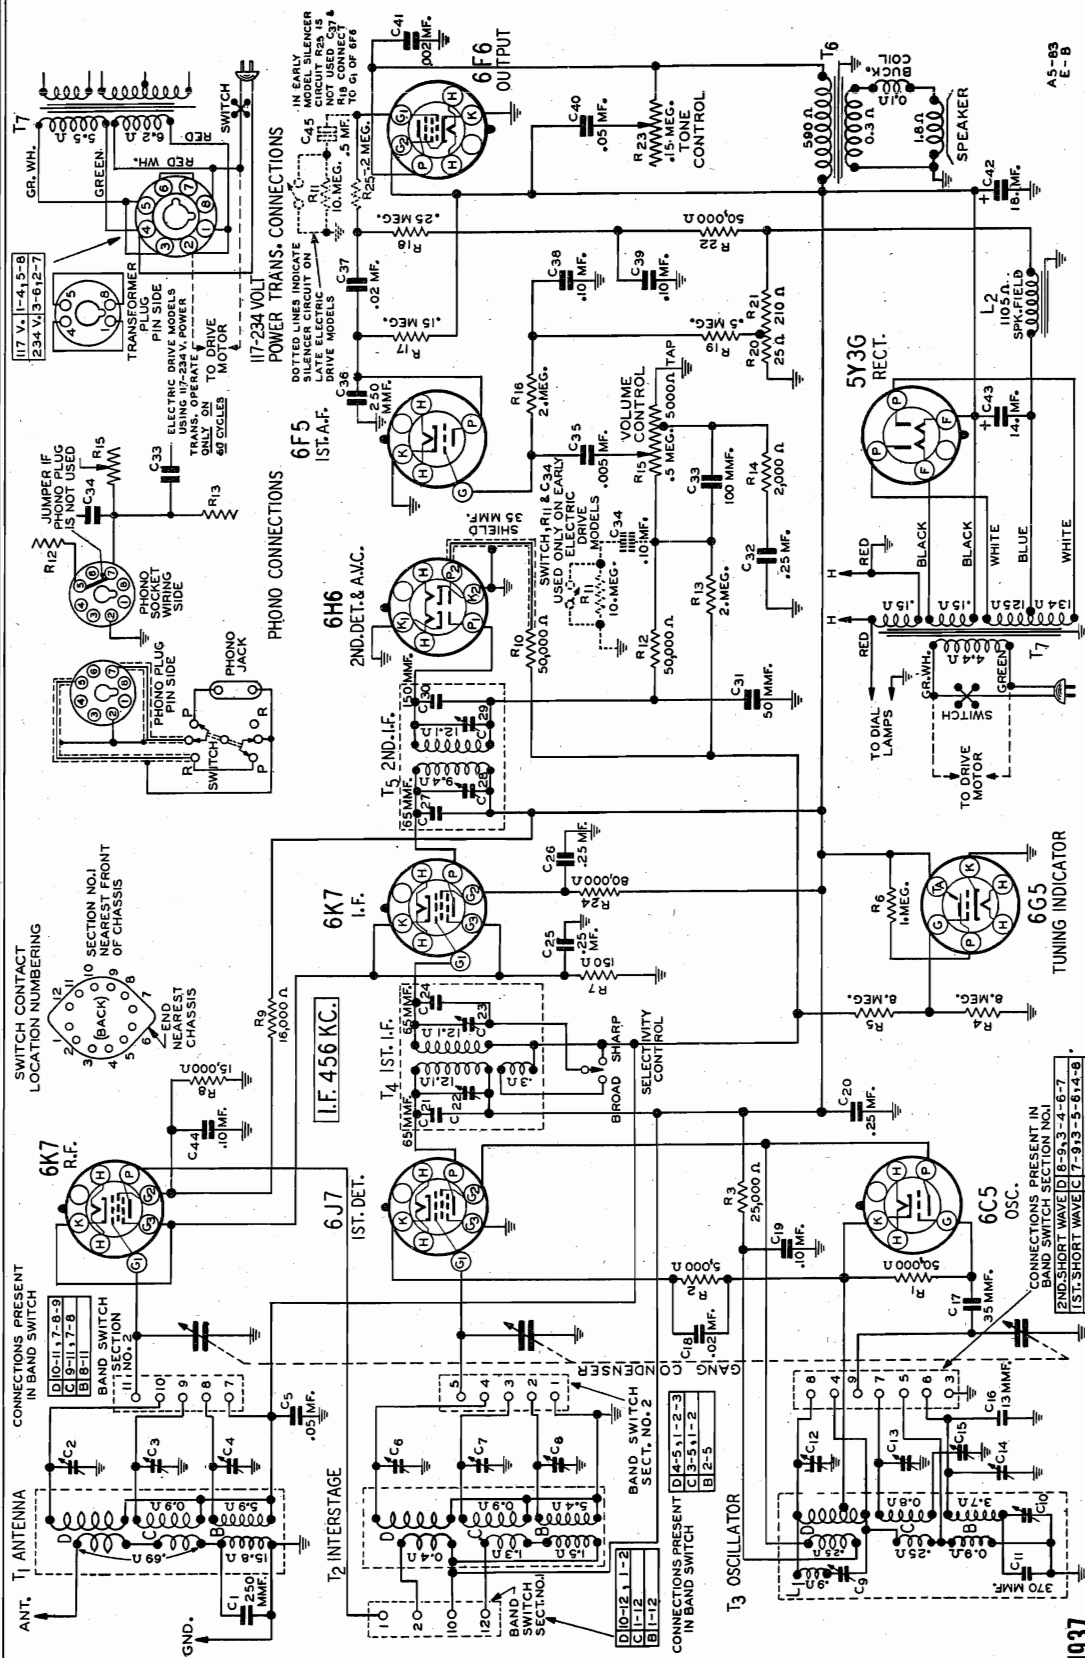

Tuning Frequency Range

B Range	528 to 1830 KC.
C Range	1810 to 6350 KC.
D Range	6300 to 22000 KC.

Sensitivity

B Range	1.0 Microvolts Average
C Range	1.0 Microvolts Average
D Range	2.0 Microvolts Average

Selectivity - 27 KC Broad at 1000 times Signal (Sharp)

Intermediate Frequency - - - - - 456 KC.

Speakers - - - - - 8" or 10" Dynamic

Power Consumption - 75 Watts (At 117 volts 60 cycles)
113 Watts (Motor Operating)
3.0 Watts Undistorted
5.0 Watts Maximum

Fig. 2—Schematic Circuit Diagram

JULY, 1937

SPECIFICATIONS

NOTE: RESISTANCES OF WINDINGS LESS THAN 0.1 Ω ARE NOT SHOWN

MODELS 62-309, 62-449
Circuit Data, Voltage
Socket, Coils, Notes

MONTGOMERY WARD & CO.

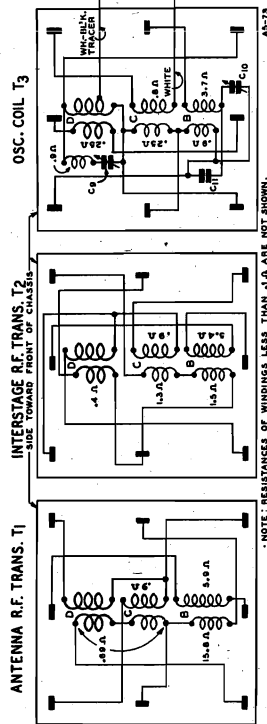


Fig. 6—Coil Terminal Arrangement and D.C. Resistance of Windings

Phonograph Connections

Phonograph connections are made as shown in Fig. 2. On the front panel of the chassis base is a round knockout 1 1/2 inch in diameter. An octal base socket is mounted in this knockout opening and wired as illustrated.

A phono cable assembly may then be purchased (see parts list). On one end of this cable is an octal plug and on the other end is a phonograph radio switch and double tip jack.

Dial and Drive Assembly

SEE INDEX.

Circuit

This model is a three band AC operated radio with a tuning range as shown in the specifications above.

Referring to the schematic circuit diagram, Fig. 2, T1 and T2 are the antenna and interstage R.F. transformer assemblies and T3 is the oscillator coil assembly. The standard wave, 1st and 2nd short wave coils in each assembly are indicated by the letters B, C and D respectively.

The band switch completes connections to the coils in use. The band switch sections are designed in the schematic as section 1 and section 2.

The antenna transformer with tuned secondary feeds into a type 6K7 R.F. amplifier tube. The output of this tube is fed through the interstage R.F. transformer with tuned secondary into a 6J7 tube which functions as the 1st detector.

A separate type 6C5 tube is employed in the oscillator circuit. The oscillating circuit is always resonant at 476 KC above the frequency to which the R.F. amplifier is tuned.

One stage of I.F. amplification is employed using a 6K7 tube. The primaries and secondaries of the 1st and 2nd I.F. transformers are tuned by small trimmer condensers.

Referring to Fig. 2, it will be noted that there is a coupling winding connected in series with the

secondary of I.F. transformer T4. When the selectivity control is in the sharp position, the coupling winding is open circuited and the loose coupling which exists between the primary and secondary of this transformer results in high selectivity.

When the selectivity control is in the broad position, the coupling winding which is wound under the primary is connected in series with the secondary. This provides overcoupling which results in a greatly widened resonance curve. Passage of a wide range of audio frequencies is thus obtained.

A 6H6 tube is applied to the control grid circuits of the R.F. and I.F. tubes.

Across the volume control resistor R15 is a filter composed of condensers C32 and C33 and resistor R14. At high volume settings, the filter is not effective. At low volume settings, the action of this filter results in an increase of high and low frequency amplitudes relative to the other frequency amplitudes.

A 6F5 triode tube functions as the first audio amplifier while the output stage uses a 6F6 output pentode tube. A dynamic reproducer is employed.

The power unit uses a 5Y3G full wave rectifier. A 6G5 tuning indicator tube is employed.

Ordinarily, a twenty-five cycle receiver may be operated from a sixty cycle power supply. However, the electric drive models cannot be operated in this manner because the twenty-five cycle motor will not operate properly on a sixty cycle power supply.

The sixty cycle receiver cannot be operated from a twenty-five cycle power supply.

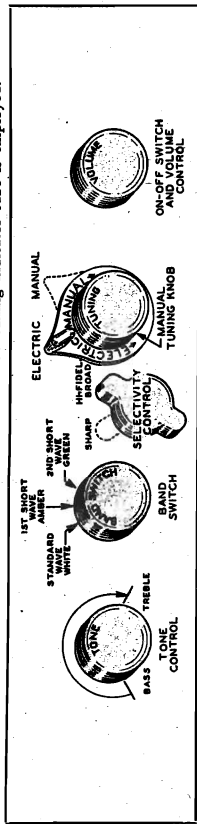


Fig. 1—Arrangement of Controls

General Service Data

The twenty-five cycle receiver differs from the sixty cycle receiver only in the fact that a different power transformer and electric drive motor are used.

Ordinarily, a twenty-five cycle receiver may be operated from a sixty cycle power supply. However, the electric drive models cannot be operated in this manner because the twenty-five cycle motor will not operate properly on a sixty cycle power supply.

The sixty cycle receiver cannot be operated from a twenty-five cycle power supply.

117-234 Volt Power Transformer

A 117-234 volt 60 cycle power transformer is also available for this model. It is important that these sets be operated on a 60 cycle power supply only.

Ordinarily, radios equipped with a 117-234 volt universal transformer may be operated on a 40 to 60 cycle power supply. However, the 60 cycle motor

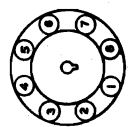


Fig. 5—Octal Tube Terminal Numbering (bottom of socket).

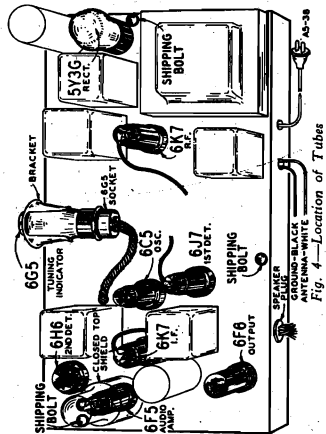


Fig. 4—Location of Tubes

VOLTAGES AT SOCKETS

Line Voltage: 117—Volume Control: Maximum
Readings taken with 1000 Ohm-per-volt meter

Antenna Shorted to Ground
Position of Band Switch: Standard Wave

TUBE	FUNCTION	VOLTAGE BETWEEN SOCKET PRONG AND GROUND (Unless otherwise indicated)									
		Prong No. 1	Prong No. 2	Prong No. 3	Prong No. 4	Prong No. 5	Prong No. 6	Prong No. 7	Prong No. 8		
6K7	R.F.	0	6.2(1)	245	118	245	2.5	6.2(1)	2.5	6.2(1)	2.5
6J7	1st Det.	0	6.2(1)	245	114	0	6.2(1)	6.2(1)	6.2		
6C5	Osc.	0	6.2(1)	114	0	0	6.2(1)	6.2(1)	0		
6K7	I.F.	0	6.2(1)	245	118	245	2.5	6.2(1)	2.5	6.2(1)	2.5
6H6	2nd Det.	0	6.2(1)	0	0	0	6.2(1)	6.2(1)	0		
6F5	1st A.F.	0	6.2(1)	230	155	245	16(3)	6.2(1)	0	6.2(1)	0(2)
6F6	Power	0	6.2(1)	230	245	680(5)	680(5)	6.2(1)	0	6.2(1)	0
5Y3G	Rectifier	0	5.0(4)								5.0(4)
6G5	Tuning Indicator										
		Plate to Ground	20								
		Target to Ground	245								
		Cathode to Ground	0								
		Across Heater	6.2								

(1) A.C. voltage as read across heater terminals 2 and 7.
(2) Bias (1.5 volts) as read across resistor R20.
(3) Bias (16 volts) as read across resistors R20 and 21.
(4) A.C. voltage as read across filament terminals 2 and 8.
(5) A.C. voltage as read across terminals 4 and 6.

MONTGOMERY WARD & CO.

MODELS 62-309, 62-449
 MODELS 62-321, 62-451
 MODELS 62-347, 62-417
 62-447
 Alignment, Trimmers

ALIGNMENT PROCEDURE

The following equipment is required for aligning:
 An All Wave Signal Generator, which will provide an accurately calibrated signal at the test frequencies as listed.
 Output Indicating Meter — Non-Metallic Screwdriver.
 Dummy Antennas — .1 mf., 200 mmf., and 400 ohms.
 Volume Control—Maximum All Adjustments.
 Selectivity Control—Sharp Position All Adjustments.
 Connect Radio Chassis to Ground Post of Signal Generator with a Short Heavy Lead.
 Allow Chassis and Signal Generator to "Heat Up" for several minutes.

STEP (Follow Order as Given)	BAND SWITCH SETTING	DUMMY ANTENNA	SIGNAL GENERATOR FREQUENCY SETTING	TRIMMERS ADJUSTED		PROCEDURE	ADJUSTMENT
				TRIMMERS ADJUSTED	INITIAL STEPS		
I.F. 2nd I.F. Adj. Range B 1st I.F. Adj. Range B	.1 mf. .1 mf.	456 KC 456 KC	Grid of I.F. Tube Grid of 1st Det.	Models 62-309, -449	Turn Rotor to Full Open	Adjust to Maximum Output	
				Model 62-321	Turn Rotor to Full Open	Adjust to Maximum Output	
				Turn Rotor to Full Open	Adjust to Maximum Output		
RANGE B 1830 KC 1500 KC	200 mmf. 200 mmf.	1830 KC 1500 KC	Antenna Lead Antenna Lead	Oscillator Range B (C13)	Turn Rotor to Full Open	Adjust to Maximum Output	
				Ant. Range B (C4)	Set Indicator to 1500 KC— See Note A	Adjust to Maximum Output	
				Ant. Range B (C8)	Turn Rotor to Max. Output	Adjust to Maximum Output Rock Rotor — See Note B	
RANGE C 6350 KC 6000 KC	400 Ohm 400 Ohm	6350 KC 6000 KC	Antenna Lead Antenna Lead	Oscillator Range C (C13)	Turn Rotor to Full Open	Adjust to Maximum Output	
				Antenna Range C (C3)	Turn Rotor to Max. Output	Adjust to Maximum Output	
				Antenna Range C (C7)	Turn Rotor to Max. Output	Adjust to Maximum Output Rock Rotor — See Note B	
RANGE D 20000 KC 20,000 KC	400 Ohm 400 Ohm	20000 KC 20,000 KC	Antenna Lead Antenna Lead	Oscillator Range D (C12)	Turn Rotor to Full Open	Adjust to Maximum Output	
				Ant. Range D (C2)	Turn Rotor to Max. Output	Adjust to Maximum Output Rock Rotor — See Note B	
				Ant. Range D (C5)	Turn Rotor to Max. Output	Adjust to Maximum Output Rock Rotor — See Note B	
7000 KC	400 Ohm	7000 KC	Antenna Lead	Oscillator Range D (C11)	Turn Rotor to Full Open	Adjust to Maximum Output	
				Ant. Range D (C2)	Turn Rotor to Max. Output	Adjust to Maximum Output Rock Rotor — See Note B	
				Ant. Range D (C5)	Turn Rotor to Max. Output	Adjust to Maximum Output Rock Rotor — See Note B	

Models
 62-347, 62-417, 62-447

STEP (Follow Order as Given)	BAND SWITCH SETTING	DUMMY ANTENNA	SIGNAL GENERATOR FREQUENCY SETTING	TRIMMERS ADJUSTED		PROCEDURE	ADJUSTMENT
				TRIMMERS ADJUSTED	INITIAL STEPS		
I.F. 2nd I.F. Adj. Range B 1st I.F. Adj. Range B	.1 mf. .1 mf.	456 KC 456 KC	Grid of I.F. Tube Grid of 1st Det.	Models 62-309, -449	Turn Rotor to Full Open	Adjust to Maximum Output	
				Model 62-321	Turn Rotor to Full Open	Adjust to Maximum Output	
				Turn Rotor to Full Open	Adjust to Maximum Output		
RANGE B 1830 KC 1500 KC	200 mmf. 200 mmf.	1830 KC 1500 KC	Antenna Lead Antenna Lead	Oscillator Range B (C13)	Turn Rotor to Full Open	Adjust to Maximum Output	
				Ant. Range B (C4)	Set Indicator to 1500 KC— See Note A	Adjust to Maximum Output	
				Ant. Range B (C8)	Turn Rotor to Max. Output	Adjust to Maximum Output Rock Rotor — See Note B	
RANGE D 19800 KC 16000 KC	400 ohm 400 ohm	19800 KC 16000 KC	Antenna Lead Antenna Lead	Oscillator Range D (C12)	Turn Rotor to Full Open	Adjust to Maximum Output	
				Ant. Range D (C2)	Turn Rotor to Max. Output	Adjust to Maximum Output	
				Ant. Range D (C5)	Turn Rotor to Max. Output	Adjust to Maximum Output Rock Rotor — See Note B	
6000 KC	400 ohm	6000 KC	Antenna Lead	Oscillator Range D (C11)	Turn Rotor to Full Open	Adjust to Maximum Output	
				Ant. Range D (C2)	Turn Rotor to Max. Output	Adjust to Maximum Output Rock Rotor — See Note B	
				Ant. Range D (C5)	Turn Rotor to Max. Output	Adjust to Maximum Output Rock Rotor — See Note B	

Modify this adjustment if necessary until all stations between 530 KC and approximately 900 KC are tuned in with some part of their call letters touching the vertical line on this screen.

(2) Set the signal generator for exactly 1500 KC. Turn Rotor to Full Open. Then adjust the oscillator Range trimmer until the signal is tuned in to maximum output.

(3) Adjust the 1st and 2nd antenna Range B trimmers to maximum output at 1500 KC.

(4) Check the 600 KC adjustment for maximum output.

Calibration should now be substantially correct over the entire dial. If it is not, repeat the above procedure.

CAUTION—When aligning the short wave band, be sure NOT to adjust at the image frequency. This can be checked as follows: Let us say the signal generator is set for 15,000 KC. The signal will then be heard at 100 KC on the dial of the radio. The image signal, which is 14,900 KC, will be heard at 14,900 KC on the dial. It may be necessary to increase the input signal to hear the image.

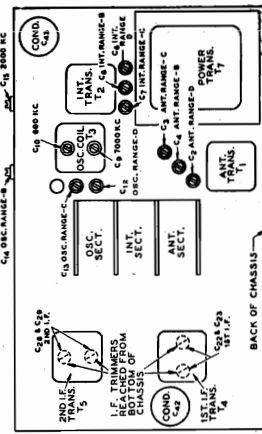


Fig. 3—Location of Trimmers
 Models 62-309, 62-449

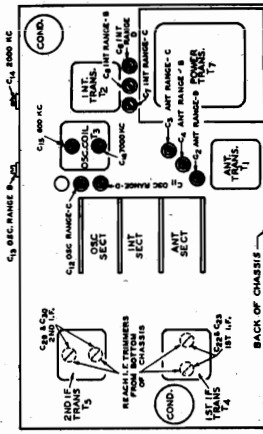


Fig. 3—Location of Trimmers
 Models 62-321, 62-451


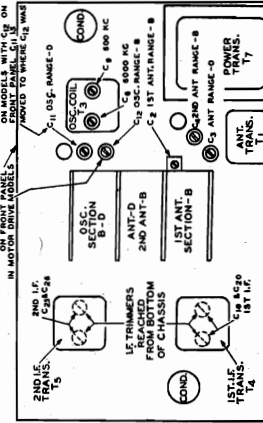


Fig. 3—Location of Trimmers
 Models 62-347, 62-417, 62-447

MODELS 62-376, 62-425
62-486

MONTGOMERY WARD & CO.


Schematic, Socket
Trimmers, Alignment

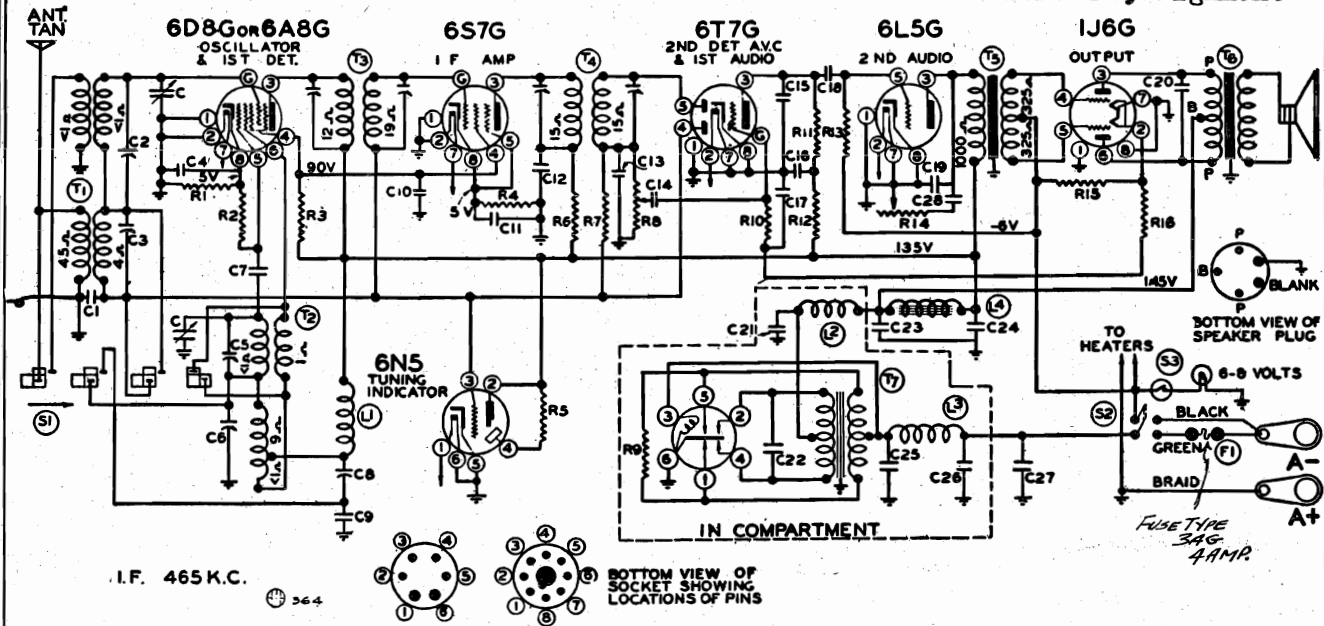


LIST OF REPAIR PARTS (Serial No. 7E607720 and up)

Part No.	Schematic Reference	Description	No. Used in Set
CONDENSERS			
BE100-11	C14, C17	.01 x 400 Volt Tubular	2
BE100-14	C21	.1 x 200 Volt Tubular	1
BE100-20	C1, C4, C10, C11, C12, C16	.1 x 200 Volt Tubular	7
BE100-25	C19, C20	.002 x 600 Volt Tubular	2
BE100-26	C18, C28	.02 x 400 Volt Tubular	2
BE100-34	C22	.005 x 1200 Volt Tubular	1
BE100-35	C25, C26	.5 x 200 Volt (Oval Type)	2
BE119-41	C23, C24	8-4 MFD. 200 W. V. Lytic Filter	1
BE124-32	C8	Series Padder Condenser	1
BE124-30	C5, C6	Dual Ceramic Padder Condenser	2
BE129-5	C13	.0001 Mica - Type MT - 20%	1
BE129-12	C15	.00025 Mica - Type MT - 20%	1
BE129-39	C7	.00005 Mica - Type MT - 20%	1
BE129-54	C9	.003 Mica - Type MW - 2 1/2 %	1
RESISTORS			
BE130-12	R2	50M Ohm-1/3 Watt-20%-Carbon 1	1
BE130-19	R10, R16	1 Meg Ohm-1/3 Watt-20%-Carbon	2
BE130-20	R11, R12	100M Ohm-1/3 Watt-20%-Carbon	2
BE130-31	R4, R6	1500 Ohm-1/3 Watt-20%-Carbon	2
BE130-38	R7, R13	2 Megohm-1/3 Watt-20%-Carbon	2
BE130-54	R1	500 Ohm-1/3 Watt-20%-Carbon	1
BE130-84	R9	200 Ohm-1/3 Watt-20%-Carbon	1
BE130-149	R3	15M Ohm-1/3 Watt-20%-Carbon	1
BE130-158	R15	16 Ohm-1 Watt-5% Wire Wound	1
COILS			
BE B-108-92B	T4	Output I. F. Coil Assembly complete with can	1
BE B-108-93B	T3	Input I. F. Coil Assembly complete with can	1
BE B-110-61	T2	Broadcast and Short-wave Oscillator Coil Assembly complete with can	1
BE B-111-77	T1	Broadcast and Short-wave Antenna Coil Assembly complete with can	1
CHOKE COILS			
BE105-19	L3	"A" Choke Coil	1
BE B-105-30D	L4	Filter Choke (400 Ohms)	1
BE105-35	L1, L2	R. F. "B" Choke Coil	2
TRANSFORMERS			
BE B-104-62C	T7	Power Transformer for Vibrator	1
BE B-105-36B	T5	Input Audio Transformer	1
SPEAKER			
BE114-58	T6	Six inch P. M. Dynamic Speaker	1
MISCELLANEOUS			
BE101-81	R8, S2	Volume Control and Switch (500M Ohm)	1
BE101-82	R14	Tone Control (100M Ohm)	1
BE107-105 (R5)		Cable and Socket Assembly complete with 250M Ohm Resistor	1


REAR VIEW

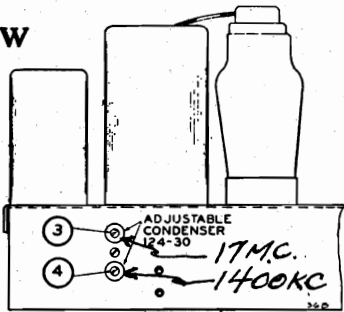

BOTTOM VIEW

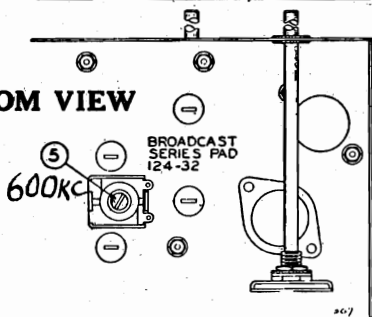

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII

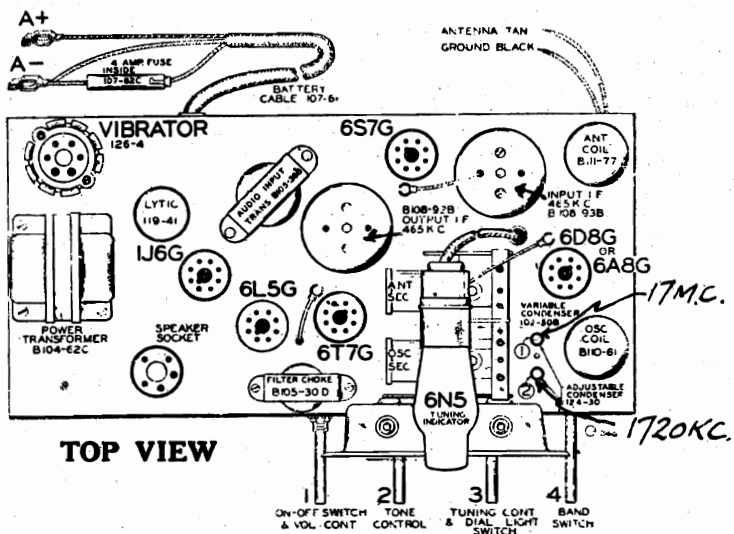

MODELS 62-321, 62-451
Circuit Data, Voltage
Socket, Coils, Notes

MONTGOMERY WARD & CO.

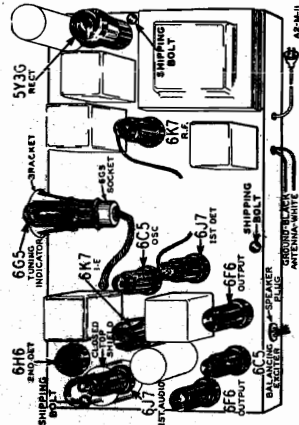


Fig. 5—Location of Tubes

Twenty-five Cycle Models

The twenty-five cycle receiver differs from the sixty cycle receiver only in the fact that a different power transformer and electric drive motor are used. Ordinarily, a twenty-five cycle receiver may be operated from a sixty cycle power supply. However, the electric drive models cannot be operated in this manner because the twenty-five cycle motor will not operate properly on a sixty cycle power supply. This sixty cycle receiver cannot be operated from a twenty-five cycle power supply.




Fig. 4—Octal Tube Terminal Numbering (bottom of socket)

117-234 Volt Power Transformer

A 117-234 volt 60 cycle power transformer is also available for this model. It is important that these sets be operated on a 60 cycle power supply only.

Ordinarily, radios equipped with a 117-234 volt universal transformer may be operated on a 40 to 60 cycle power supply. However, the 60 cycle motor in the electric drive panel of this model will not operate satisfactorily at any frequency other than 60 cycles. Consequently, if one of these radios is to be used on a 40 cycle power supply, it will be necessary to change the motor. The motor regularly supplied with the 25 cycle model is used for this purpose.

Connections for the 117-234 volt transformer are shown in Fig. 2. There is a 1 1/8 inch round knockout on the back panel of the chassis which may be removed to permit installation of a special socket.

Circuit

This model is a three band AC operated radio with a tuning range as shown in the specifications above.

Referring to the schematic circuit diagram, Fig. 2, T1 and T2 are the antenna and interstage R.F. transformer assemblies and T3 is the oscillator coil assembly. The standard wave, 1st and 2nd short wave coils in each assembly are indicated by the letters B, C, and D respectively.

The band switch completes connections to the coils in use. The band switch sections are designated in the schematic as section 1 and section 2.

The antenna transformer with tuned secondary feeds into a type 6K7 R.F. amplifier tube. The output of this tube is fed through the interstage R.F. transformer with tuned secondary into a 6J7 tube which functions as the 1st detector.

A separate type 6C5 tube is employed in the oscillator circuit. The oscillating circuit is always resonant at 456 KC above the frequency to which the R.F. amplifier is tuned.

One stage of I.F. amplification is employed using a 6K7 tube. The primaries and secondaries of the 1st and 2nd I.F. transformers are tuned by small trimmer condensers.

Referring to the 1st and 2nd I.F. transformers T4 and T5 in Fig. 2, it will be noted that there is a coupling winding shown below the primary of T4 and below the secondary of T5.

When the selectivity control is in the sharp position, the coupling windings are open circuited and the loose coupling which exists between the primary and secondary of these transformers results in high selectivity.

When the selectivity control is in the broad position, the coupling winding which is wound in series with the primary in the case of T4, is connected in series with the secondary. In the case of T5, the coupling winding which is wound under the secondary is in series with the primary. This provides overcoupling which results in a greatly widened resonance curve. Passage of a wide range of audio frequencies is thus obtained.

A 6H6 tube functions as a diode 2nd detector. AVC voltage is applied to the control grid circuits of the R.F. and I.F. tubes.

Across the volume control resistor R12 is a filter composed of condensers C34 and C35 and resistor R13. At high volume settings, the filter is not effective. At low volume settings, the action of this filter results in an increase of high and low frequency amplitudes relative to the other frequency amplitudes.

The output of the 2nd detector is applied to the 6J7 1st A. F. tube. The output of this tube is fed through resistance coupling into the 6F6 output tube shown nearest to it in the schematic.

A portion of the voltage developed across the output tube grid resistor is applied to the control grid of the 6C5 balancing exciter tube. This tube functions as a phase inverter and applies the audio voltage of proper phase and amplitude to the other 6F6 output tube. The two output tubes operate as a stage of Class A push-pull amplification. The balancing exciter tube thus replaces a push-pull input transformer. A dynamic reproducer is employed.

The power unit uses a 5Y3G full wave rectifier. A 6G5 tuning indicator tube is employed.

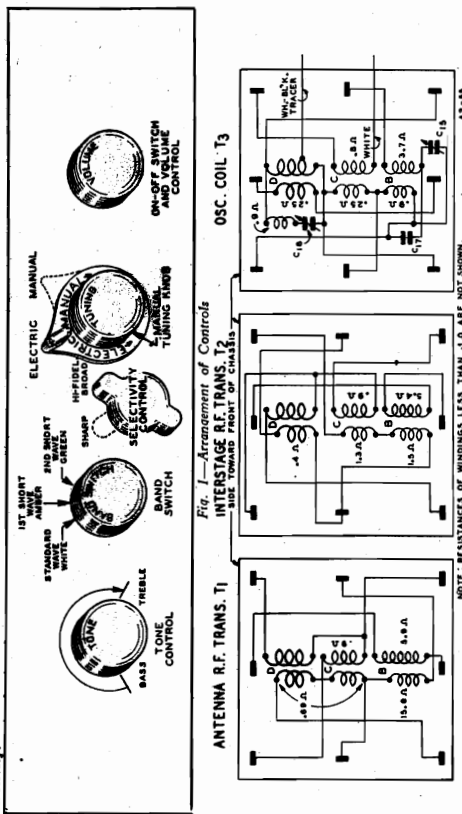


Fig. 1—Arrangement of Controls

Fig. 6—Coil Terminal Arrangement and DC Resistance of Windings

A plug which goes with this socket may then be inserted for either the 117-volt or 234-volt connection.

Phonograph Connections

Phonograph connections are made as shown in Fig. 2. On the front panel of the chassis base is a round knockout 1 1/8 inch in diameter. An octal base socket is mounted in this knockout opening and wired as illustrated.

A phono cable assembly may then be purchased on one end of this cable is an octal plug and on the other end is a phonograph radio switch and double tip jack.

Dial and Drive Assembly

SEE INDEX

VOLTAGES AT SOCKETS

Antenna Shorted to Ground
Position of Band Switch: Standard Wave

Line Voltage: 117—Volume Control: Maximum
Readings taken with 1000 Ohm-per-volt meter.

TUBE	FUNCTION	VOLTAGE BETWEEN SOCKET PRONG AND GROUND (Unless otherwise indicated)																
		Prong No. 1	Prong No. 2	Prong No. 3	Prong No. 4	Prong No. 5	Prong No. 6	Prong No. 7	Prong No. 8	Prong No. 9	Prong No. 10							
6K7	R.F.	0	6.1(1)	280	108	2.5	6.1(1)	2.5	6.1(1)	2.5	6.1(1)	2.5	6.1(1)	2.5	6.1(1)	2.5	6.1(1)	2.5
6J7	1st Det.	0	6.1(1)	280	125	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0
6C5	Osc.	0	6.1(1)	128(2)	100	2.5	6.1(1)	0(2)	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0
6H6	2nd Det.—A.V.C.	0	6.1(1)	110	120	0(2)	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0
6F6	1st A.F.	0	6.1(1)	100	330	280	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0
6S5	Output	0	6.1(1)	730(4)	730(4)	730(4)	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0
6G5	Rectifier	0	4.8(5)	20	250	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0
665	Tuning Indicator	Plate to Ground	20	250	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)	0	6.1(1)
		Cathode to Ground	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
		Across Heater	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.	6.1 A.C.

(1) A.C. voltage at read across heater terminals 2 and 7.
(2) Higher than specification.
(3) Bias (2.5 volts) at read across resistor R22.
(4) Bias (24 volts) at read across resistors R22, R23 & R24.
(5) A.C. voltage as read across filament terminal 2 and 8.
(6) A.C. voltage as read across terminals 4 and 6.

MODELS 62-347, 62-417
62-447
Circuit Data, Voltage
Socket, Coils, Phono.

MONTGOMERY WARD & CO.

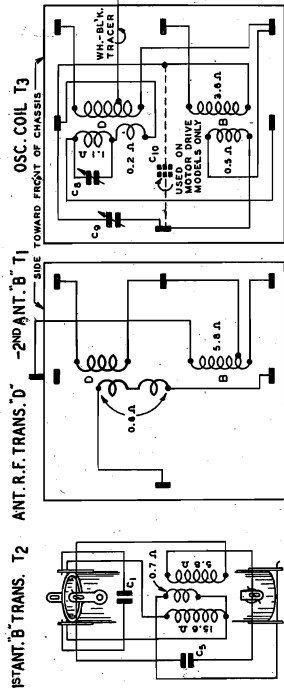


Fig. 4—Coil Terminal Arrangement and D.C. Resistance of Windings

Ordinarily, radios equipped with a 117-234 volt universal transformer may be operated on a 40 to 60 cycle power supply. However, the 60 cycle motor in the electric drive panel of this model will not operate satisfactorily at any frequency other than 60 cycles. Consequently, if one of these radios is to be used on a 40 cycle power supply, it will be necessary to change the motor. The motor regularly supplied with the 25 cycle model is used for this purpose.

Connections for the 117-234 volt transformer are shown in Fig. 2. There is a 1/8 inch round knockout on the back panel of the chassis which may be removed to permit installation of a special octal socket. A plug which goes with this socket may then be inserted for either the 117 volt or 234 volt connection.

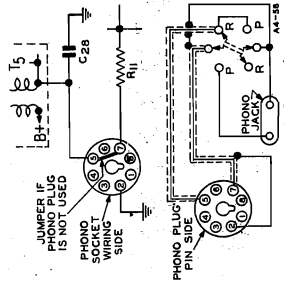


Fig. 7—Phonograph Connections

Phonograph Connections

Phonograph connections are made as shown in Fig. 7. On the side panel of the chassis base is a round knockout 1/8 inch in diameter. An octal base socket is mounted in this knockout opening and wired as illustrated.

VOLTAGES AT SOCKETS

Line Voltage: 117—Volume Control: Maximum
Readings taken with 1000 Ohm-per-volt meter

TUBE	FUNCTION	VOLTAGE BETWEEN SOCKET PRONG AND GROUND (Unless otherwise indicated)								
		Prong No. 1	Prong No. 2	Prong No. 3	Prong No. 4	Prong No. 5	Prong No. 6	Prong No. 7	Prong No. 8	
6I7	1st Det.	0	6.2(1)	230	145	9.5		6.2(1)	9.5	
6K7	I.F.	0	6.2(1)	230	100	2.0		6.2(1)	2.0	0
6C5	Det.	0	6.2(1)	140				6.2(1)	0	
6Q7	1st Audio & 2nd Det.	0	6.2(1)	100				6.2(1)	0(2)	
6F6	Power Amp.	0	6.2(1)	210	230			6.2(1)	0(3)	
5Y3G	Rectifier	0	5.0(4)		630(5)			630(5)		5.0(4)
665	Tuning Indicator			Plugs to Ground 20						
				Plugs to Ground 230						

(1) A.C. voltage as read across heater terminals 2 and 7.
(2) Bias (1.5 volts) as read across resistor R15.
(3) Bias (14 volts) as read across resistors R15 and R16.
(4) A.C. voltage as read across heater terminals 2 and 8.
(5) A.C. voltage as read across heater terminals 4 and 8.

Circuit

This model is a two band AC operated radio with a tuning range as shown in the specifications above. Referring to the schematic circuit diagram, Fig. 2, T1 and T2 are the antenna coil assemblies and T3 is the oscillator coil assembly. The standard wave and short wave coils in each assembly are indicated by the letters B and D respectively.

The band switch completes connections to the coils in use. When it is in the Range B position, a double tuned antenna R.F. stage is used while for the D Range, a single tuned secondary is used.

A type 6I7 tube functions as the 1st detector. A separate type 6C5 tube is employed in the oscillator circuit. The oscillating circuit is always resonant at 436 KC above the frequency to which the R.F. amplifier is tuned.

One stage of I.F. amplification is employed using a 6K7 tube. The primaries and secondaries of the 1st and 2nd I.F. transformers are tuned by small trimmer condensers.

Referring to Fig. 2, it will be noted that there is resistance coupling is used between the 1st audio stage and the output stage which employs a type 6Q7 output pentode tube. A dynamic reproducer is used.

The power unit uses a 5Y3G full wave rectifier. A 6C5 tuning indicator tube is employed.

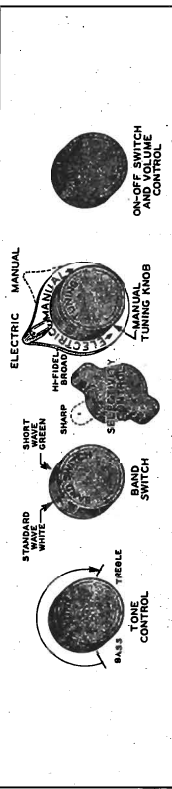


Fig. 1—Arrangement of Controls

General Service Data

The twenty-five cycle receiver differs from the sixty cycle receiver only in the fact that a different power transformer and electric drive motor are used. Ordinarily, a twenty-five cycle receiver may be operated from a sixty cycle power supply. However, the electric drive models cannot be operated in this manner because the twenty-five cycle motor will not operate properly on a sixty cycle power supply.

The sixty cycle receiver cannot be operated from a twenty-five cycle power supply.

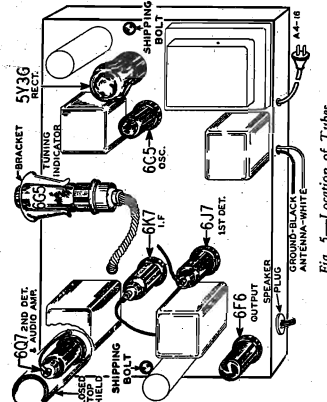


Fig. 5—Location of Tubes

Dial and Drive Assembly

SEE INDEX

117-234 Volt Power Transformer

A 117-234 volt 60 cycle power transformer is also available for this model. It is important that these sets be operated on a 60 cycle power supply only.





Fig. 6—Octal Tube Terminal Numbering (bottom of socket).

MODEL 93BR-335A, Ser. A MONTGOMERY WARD & CO.
Schematic, Voltage Alignment, Trimmers Socket
 First Detector-Oscillator. I. F. Amplifier. Second Detector, A.V.C. First Audio. Output Amplifier.
6SA7 6SK7 6SQ7 6K6G

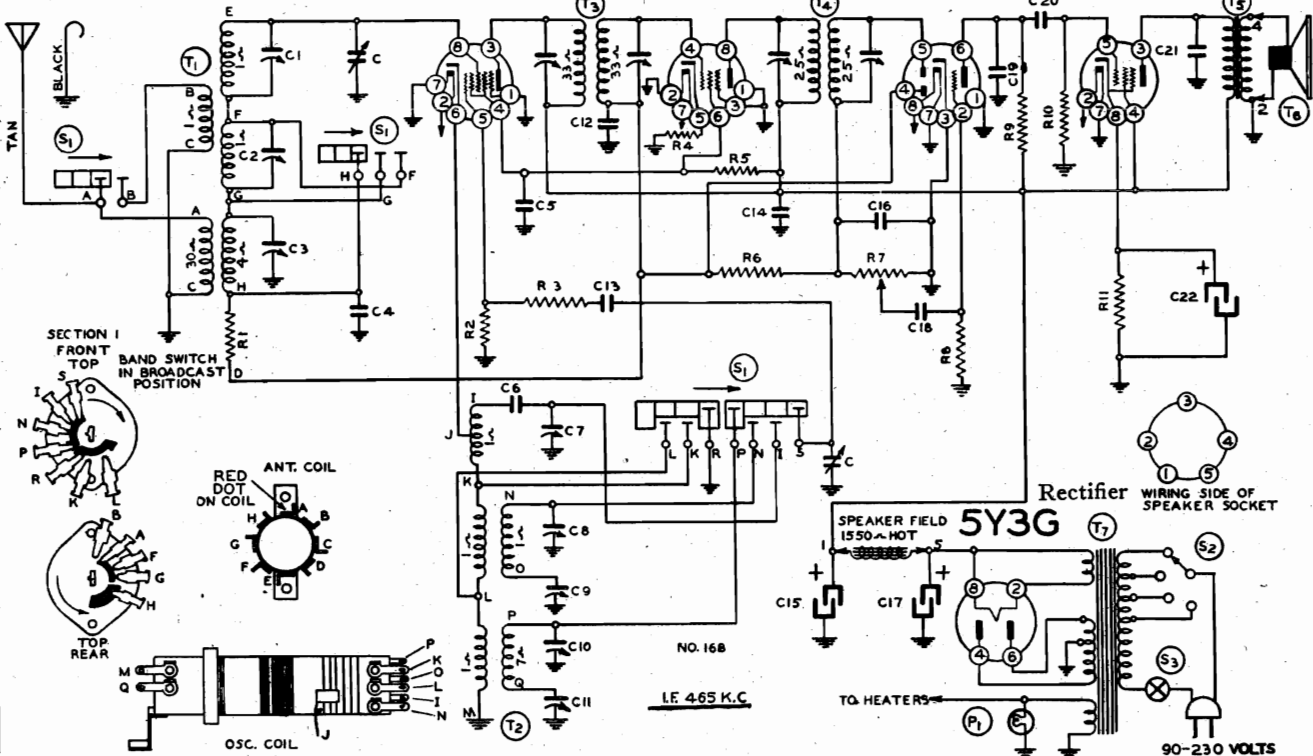

MODEL 93BR-335A, SERIES A (SERIAL No. 9M259100 and UP)

Ref. No.	Part No.	Description
RESISTORS		
R1	BE13011	250M ohm-1/2 w.
R2	BE130194	35M ohm-1/2 w.
R3	BE130299	10 ohm-1/2 w.
R4	BE130239	250 ohm-1/2 w.
R5	BE130242	12M ohm-1 watt
R6	BE1304	3 megohm-1/2 w.
R7	BE101208	1 megohm volume control
R8	BE130223	10 megohm-1/2 w.
R9	BE13011	250M ohm-1/2 w.
R10	BE13019	1 megohm-1/2 w.
R11	BE13070	500 ohm-1/2 w.


C12	BE10026	.02 x 400 v.
C13	BE1295	.0001 Mica
C14	BE1001	.1 x 400 v.
C15	BE119103	40 mfd. lytic
C16	BE1295	.0001 Mica
C17	BE119103	10 mfd. lytic
C18	BE10025	.002 x 600 v
C19	BE1292	.0005 Mica
C20	BE10026	.02 x 400 v.
C21	BE10071	.004 x 600 v.
C22	BE119103	20 mfd. lytic x 25 w. v.

C15, C17 and C22 in same unit


Ref. No.	Part No.	Description
CONDENSERS		
C	BE102124	Two Gang Variable Cond
C1	BE124124	S. W. Antenna Trimmer
C2	BE124124	M. W. Antenna Trimmer
C3	BE124124	B. C. Antenna Trimmer
C4	BE1009	.05 x 200 v.
C5	BE1001	.1 x 400 v.
C6	BE129153	.006-S. W. Padder (Set at Factory)
C7	BE124123	S. W. Oscillator Trimmer
C8	BE124123	M. W. Oscillator Trimmer
C9	BE129154	.0025 M. W. Padder
C10	BE124123	B. C. Oscillator Trimmer
C11	BE129155	B. C. Padder

Ref. No.	Part No.	Description
T1	BE111169	Antenna Coil
T2	BE110143	Oscillator Coil
T3	BE108169B	Input I. F.
T4	BE108170	Output I. F.
T5	BE10575	Output Transformer
T6	BE114176	6" Dynamic Speaker (1550 ohm field)
T7	BE104193	Power Transformer 40-60 cycles .. 90-230 volts
S1	BE125105	Band Switch
S2	BE10794	Voltage Switch on Power Transformer
S3	BE10794	Volume Control-On-Off switch
P1	BE10794	Pilot Light Bulb T-44



CONVENTIONAL ALIGNMENT 12-39
SEE SPECIAL SECTION VOLUME VIII

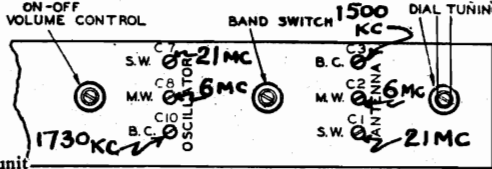

FRONT OF CHASSIS 1083



REAR OF CHASSIS 1084

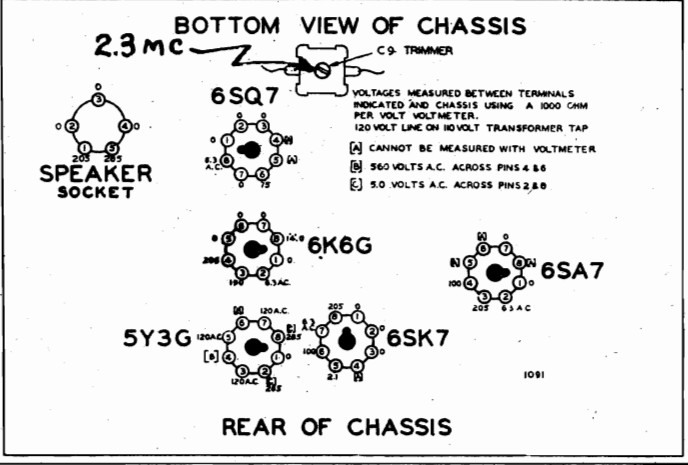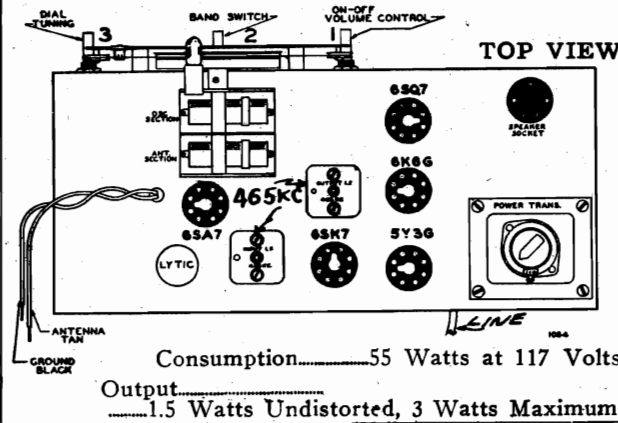

Alignment, Socket Trimmers




MONTGOMERY WARD & CO.

MODEL 93BR-391A, Ser. A

Schematic, Voltage Second Detector, A.V.C.

R. F. Amplifier. First Detector-Oscillator. I. F. Amplifier. First Audio. Output

NOTE: WHEN USING SINGLE WIRE ANT. CONNECT DOUBLET TO GROUND

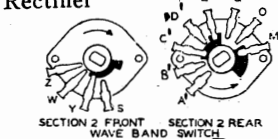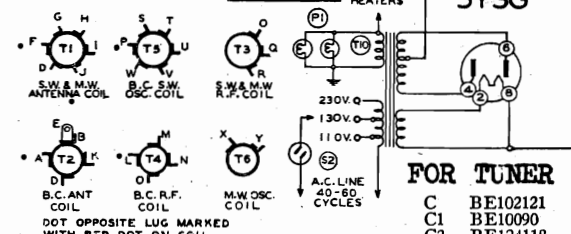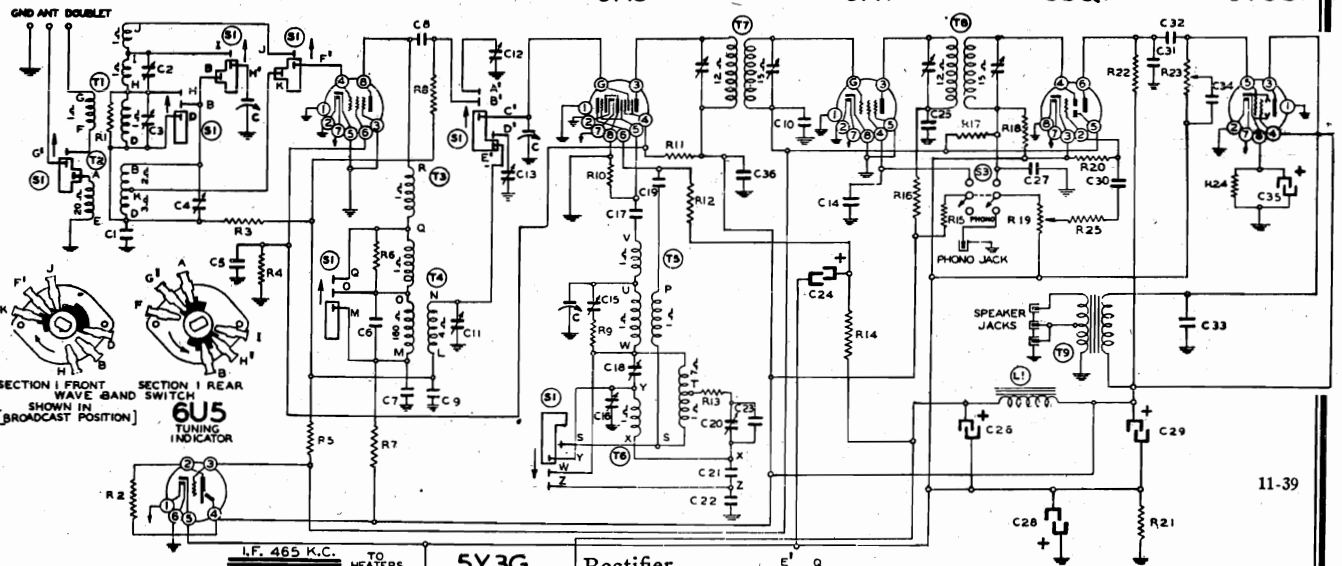

MODEL 93BR-391A SERIES A
CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION
VOLUME VIII

Ref. No.	Part No.	Description
R1	BE13094	50M ohm-1/2 w.-10%
R2	BE1303	500M ohm-1/2 w.
R3	BE13020	100M ohm
R4	BE13012	50M ohm-1/2 w.
R5	BE13026	1000 ohm-1/2 w.
R6	BE130232	25M ohm-1/2 w.
R7	BE13026	1000 ohm-1/2 w.
R8	BE13019	1 megohm-1/2 w.
R9	BE13097	200 ohm-1/2 w.
R10	BE13012	50M ohm-1/2 w.
R11	BE130304	12M ohm-2 watt
R12	BE13017	10M ohm-1/2 w.
R13	BE130299	10 ohm-1/2 w.
R14	BE13017	10M ohm-1/2 w.
R15	BE13020	100M ohm-1/2 w.
R16	BE13023	2M ohm-1/2 w.
R17	BE1304	3 megohm-1/2 w.
R18	BE1304	3 megohm-1/2 w.
R19	BE101184	1 megohm volume control
R20	BE130225	15 megohm-1/2 w.
R21	BE130303	35 ohm-1/2 w.
R22	BE1309	200M ohm-1/2 w.
R23	BE101206	150M ohm tone control
R24	BE130227	250 ohm-1 watt
R25	BE13020	100M ohm-1/2 w.

FOR TUNER SEE INDEX

C	BE102121	3 gang variable condenser
C1	BE10090	.02 x 400 v.
C2	BE124118	S.W. Antenna Trimmer
C3	BE124118	M.W. Antenna Trimmer
C4	BE124118	B.C. Antenna Trimmer
C5	BE10013	.05 x 400 v.
C6	BE12938	.00005 mica
C7	BE10090	.02 x 400 v.
C8	BE10090	.02 x 400 v.
C9	BE10090	.02 x 400 v.
C10	BE1009	.05 x 200 v.
C11	BE124119	B.C. R.F. Trimmer
C12	BE124119	S.W. R.F. Trimmer
C13	BE124119	M.W. R.F. Trimmer
C14	BE10013	.05 x 400 v.
C15	BE124119	S.W. Oscillator Trimmer
C16	BE124119	M.W. Oscillator Trimmer
C17	BE12962	.00003 Mica
C18	BE124119	B.C. Oscillator Trimmer
C19	BE10025	.002 x 600 v.
C20	BE124119	B.C. Padding Condenser
C21	BE129149	.0028 Compression M.W. Pad
C22	BE129105	.0035 Compression S.W. Pad
C23	BE12959	.0003 mica
C24	BE11981	16 uf. lytic x 400 v. v.
C25	BE1001	1 x 400 v.
C26	BE19100	30 uf. lytic x 450 v. v.
C27	BE1295	.0001 mica
C28	BE11991	40 uf. lytic x 25 w. v.



Power Consumption.....65 Watts at 117 Volts
 Power Output -4 Watts Undistorted,
 6.5 Watt Maximum

(SERIAL No. 9K188300 and UP)

C29	BE119100	30 uf. lytic x 450 w. v.
C30	BE10025	.002 x 600 v.
C31	BE12912	.00025 mica
C32	BE10013	.05 x 400 v.
C33	BE10097	.02 x 600 v.
C34	BE10078	.01 x 200 v.
C35	BE119100	40 uf. lytic-25 w. v.
C36	BE10013	.05 x 400 v.

C26, C29, and C35 in same unit

T1	BE111156	S.W. M.W. Ant. Coil
T2	BE111158	B.C. Antenna Coil
T3	BE10955	S.W. M.W. R.F. Coil
T4	BE10956	B.C. R.F. Coil
T5	BE110140	B.C. S.W. Osc. Coil
T6	BE110138	M.W. Oscillator Coil
T7	BE108165	1st I.F. Input Coil
T8	BE108119	2nd I.F. Output Coil
T9	BE10598	Output Transformer
T10	BF104181	Universal Transformer
	BE114179	8" P. M. Speaker
L1	BE10597B	"B" Filter Choke
S1	BE12595	Wave Band Switch
S2	BE12581	On & Off Switch
S3	BE12570	Radio Phono Switch
P1	BE10794	(2) Pilot Lights - T44

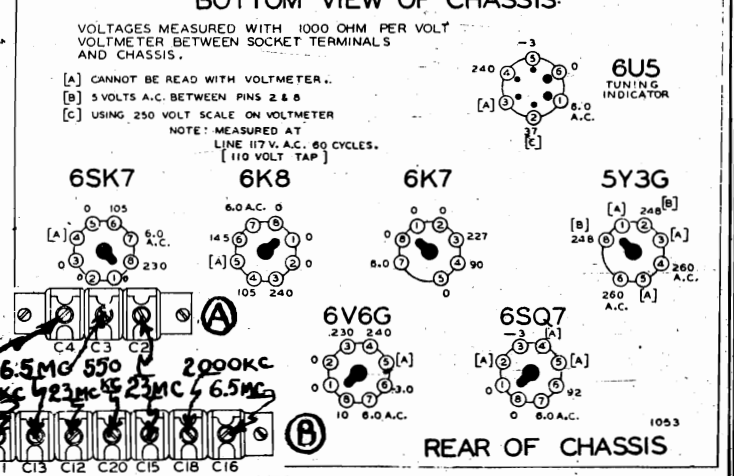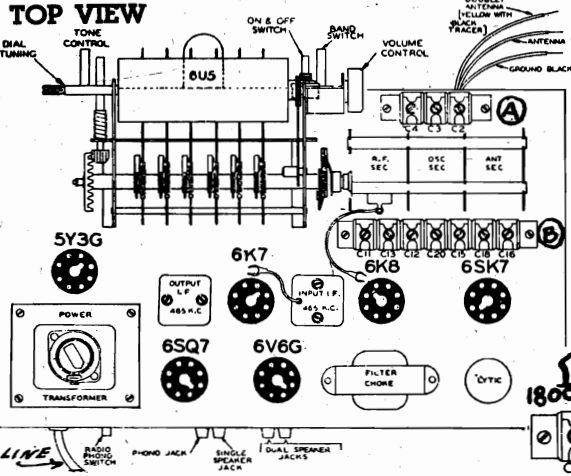


MODEL 93BR-392A, Ser. A
Schematic, Voltage

MONTGOMERY WARD & CO. Trimmers
Alignment, Socket
Second Detector, A.V.C.

R. F. Amplifier. First Detector-Oscillator. I. F. Amplifier. First Audio. Output
6SK7 6K8 6K7 6SQ7 25N6G

NOTE: WHEN USING SINGLE WIRE ANT. CONNECT DOUBLET TO GROUND.

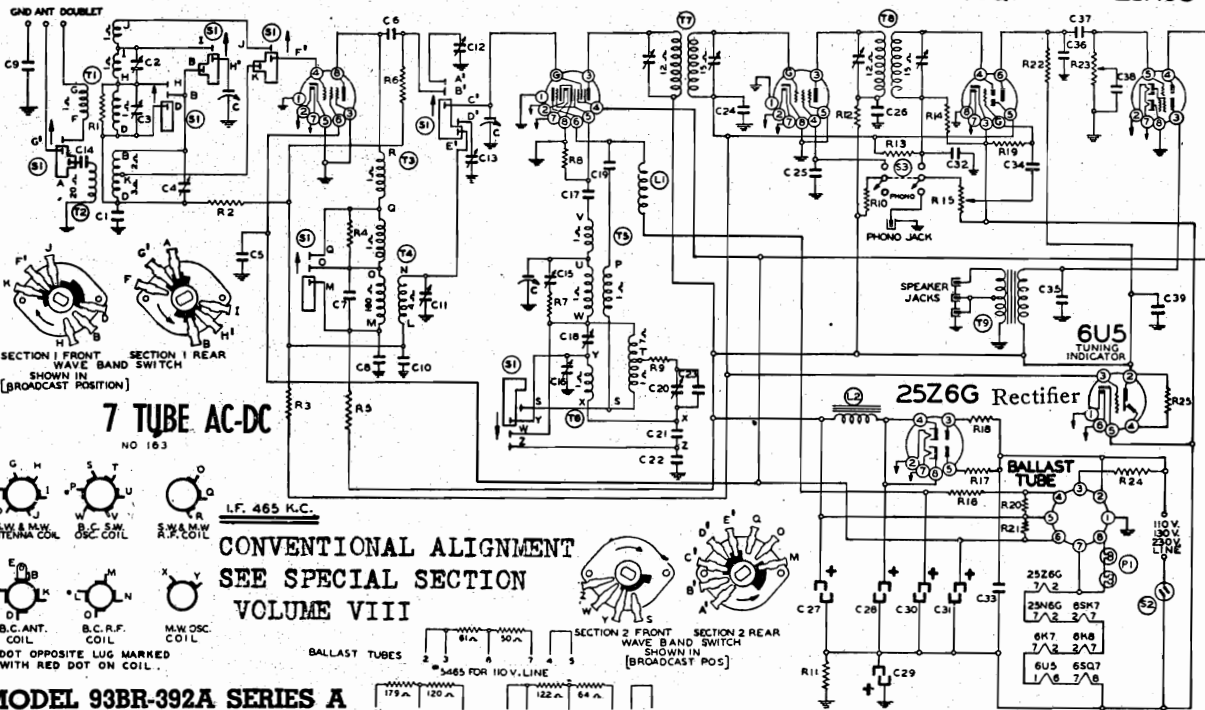

7 TUBE AC-DC
NO 103

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII

MODEL 93BR-392A SERIES A
(SERIAL No. 9K167300 and UP)



Ref. No.	Part No.	Description	11-39
R1	BE13094	50M ohm-1/2 w.	
R2	BE13020	100M ohm-1/2 w.	
R3	BE13026	1000 ohm-1/2 w.	
R4	BE130232	25M ohm-1/2 w.-10%	
R5	BE13026	1000 ohm-1/2 w.	
R6	BE13019	1 megohm-1/2 w.	
R7	BE13097	200 ohm-1/2 w.-10%	
R8	BE13012	50M ohm-1/2 w.	
R9	BE130299	10 ohm-1/2 w.-10%	
R10	BE13020	100M ohm-1/2 w.	
R11	BE130197	20 ohm-1/2 w.-10%	
R12	BE13023	2000 ohm-1/2 w.	
R13	BE1304	3 megohm-1/2 w.	
R14	BE1304	3 megohm-1/2 w.	
R15	BE101184	1 megohm volume control	
R16	BE13022	5000 ohm-1/2 w.	
R17	BE130168	100 ohm-1/2 w.	
R18	BE130168	100 ohm-1/2 w.-10%	
R19	BE130225	15 megohm-1/2 w.	
R20	BE130176	20M ohm-1/2 w.-10%	
R21	BE130302	9M ohm-1.5 watt-10%	
R22	BE1309	200M ohm-1/2 w.	
R23	BE101207	1 megohm tone control	
R24	BE10658	300 ohm-10%-50 watt	
R25	BE13019	1 megohm-1/2 w.	
C	BE102121	Three gang variable condenser	
C1	BE10090-B	.02 x 400 v.	
C2	BE124118	S.W. Antenna Trimmer	
C3	BE124118	M.W. Antenna Trimmer	
C4	BE124118	B.C. Antenna Trimmer	
C5	BE10013	.05 x 400 v.	
C6	BE10090	.02 x 400 v.	
C7	BE12938	.00005 mica	
C8	BE10090	.02 x 400 v.	
C9	BE10026	.02 x 400 v.	
C10	BE10090	.02 x 400 v.	
C11	BE124119	B.C. R.R. Trimmer	
C12	BE124119	S.W. R.F. Trimmer	
C13	BE124119	M.W. R.F. Trimmer	
C14	BE10026	.02 x 400 v.	
C15	BE124119	S.W. Oscillator Trimmer	
C16	BE124119	M.W. Oscillator Trimmer	
C17	BE12962	.0003 mica	
C18	BE124119	B.C. Oscillator Trimmer	
C19	BE10025	.002 x 600 v.	
C20	BE124119	B.C. Padding Condenser	
C21	BE129149	.0028 Compression M.W. Pad	
C22	BE129105	.0035 Compression S.W. Pad	
C23	BE12959	.0003 mica	
C24	BE1009	.05 x 200 v.	
C25	BE10013	.05 x 400 v.	
C26	BE1001	.1 x 400 v.	
C27	BE11998	30 uf. lytic-300 w.v.	
C28	BE11998	30 uf. lytic-300 w.v.	
C29	BE11998	40 uf. lytic-25 w.v.	
C30	BE11998	15 uf. lytic-400 w.v.	
C31	BE11964	10 uf. lytic-350 w.v.	
C32	BE1295	.0001 mica	
C33	BE10013	.05 x 400 v.	
C34	BE10025	.002 x 600 v.	
C35	BE10026	.02 x 400 v.	

Consumption	Output
.110 Watts at 230 Volts	4 Watts Undistorted, 5 Watt Maximum (Measured with 230 Volt Line Voltage)
C36 BE12912 .00025 mica	C37 BE10013 .05 x 400 v.
C38 BE10078 .01 x 200 v.	C39 BE10013 .05 x 400 v.
C2, C3 and C4 are in same unit.	
C11, C12, C13, C15, C16, C18 and C20 in same unit.	
C27, C28 and C29 in same unit.	
C30 and C31 in same unit.	
T1 BE111156 S.W. M.W. Antenna Coil	T2 BE111158 B.C. Antenna Coil
T3 BE10955 S.W. M.W. R.F. Coil	T4 BE10956 B.C. R.F. Coil
T5 BE110140 B.C. S.W. Oscillator Coil	T6 BE110138 M.W. Oscillator Coil
T7 BE108165 1st I. F. Input Coil	T8 BE108119 2nd I. F. Output Coil
T9 BE10598 Output Transformer	BE114179 8" P.M. Speaker
L1 BE1234 R.F. Choke	L2 BE10597B "B" Filter Choke
S1 BE12595 Wave Band Switch	S2 BE12581 On and Off Switch
S3 BE12570 Radio-Phono Switch	P1 BE10794 (2) Pilot Lights T-44

BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMETER BETWEEN SOCKET TERMINALS AND CHASSIS.

NOTE: MEASURED AT LINE 230 V. A.C. 60 CYCLES
[A] CANNOT BE READ WITH VOLTMETER.

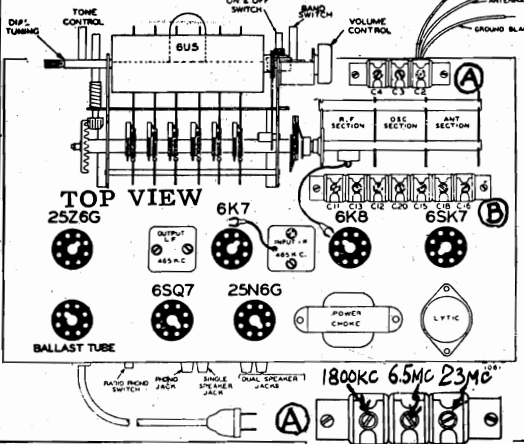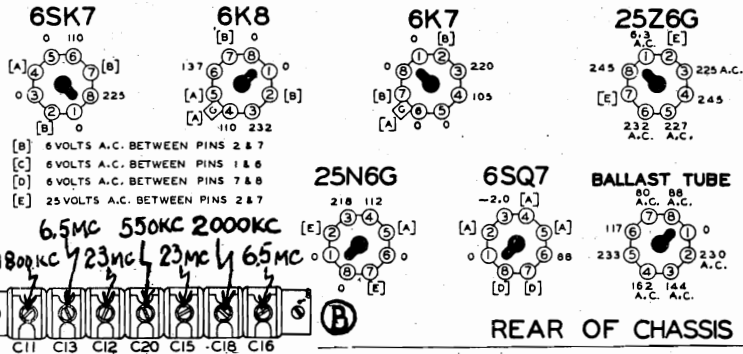

MODEL 95BR-393A, Ser. A
Voltage, Alignment
Trimmers
S.P.U. Notes

MONTGOMERY WARD & CO.

ALIGNMENT FREQUENCIES

- IF 465 KC
- SHORT WAVE BAND 23 MC
Align S.W. Osc. (C15), Ant. (C2), RF (C12)
- MEDIUM WAVE BAND 6.5 MC
Align M Osc. (C16), Ant. (C3), RF (C13)
- BROADCAST BAND
Align Osc. (C18) at 2000 KC.
Align Ant. (C4), RF (C11) at 1800 KC.
Align Osc. Series Pad (C20) at 550 KC.

THE ALIGNMENT IS CONVENTIONAL
SEE SPECIAL SECTION VOLUME VIII.

BATTERY AND POWER SUPPLY:

This radio obtains its power entirely from a six volt storage battery—no other batteries are required.

1. For 6 volt storage battery operation:
 - (a) Connect the lead (containing the fuse receptacle) marked A positive (+) to the positive (+) post of the storage battery.
 - (b) Connect the lead marked A negative (—) to the negative (—) post of the storage battery.
2. For 100-250 volts, 40/60 cycle operation; see Fig. 2.

Installing the Model 62-381X Power Unit

(For 100-250 Volt 40/60 Cycle A. C. Operation)

To install the Model 62-381X A.C. power unit proceed as follows:—

1. Remove the chassis from the cabinet, by removing the four chassis mounting bolts from the bottom of the cabinet.
2. Referring to Fig. 1, note that the 6-volt power unit is fastened to the top of the radio chassis with eight copper head screws, (six on top of chassis, and two on rear flange of chassis).
3. Remove the eight copper head screws.
4. Disconnect the four flexible leads of the power unit from the chassis connector strip. These leads clip into pin jacks. Note that the color of each flexible lead matches the color dot on the chassis pin jack connector strip.
5. Place the model 62-381X A.C. power unit (see Fig. 2) on the top of the radio chassis and plug the four flexible leads into the pin jacks on the chassis connector strip.
 - (a) The red lead should be plugged into the pin jack which is marked with a red dot.
 - (b) The green lead connects to the pin jack which is marked with a green dot.
 - (c) The yellow lead connects to the pin jack which is marked with a yellow dot.
 - (d) The black lead connects to the pin jack which is marked with a black dot.
6. Mount the power unit to the chassis using the eight copper head screws.

IMPORTANT:

After the A.C. power unit has been installed check the connections again to make sure you have followed the instructions correctly. Set the switch on the top of the power transformer to the proper voltage.

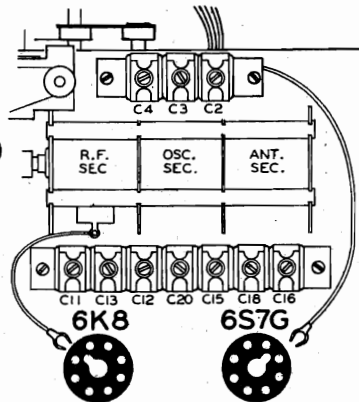


FIG. 5—TOP OF CHASSIS

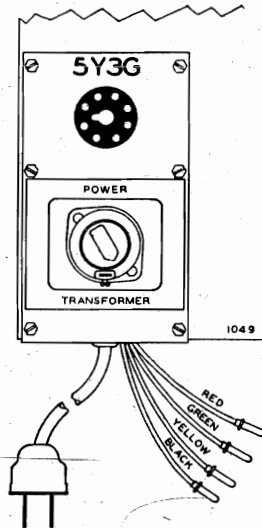


FIG. 2—MODEL 62-381X A. C. POWER UNIT

SERVICE NOTES:

Voltage taken from different points of circuit to chassis are measured with volume control at minimum, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.

IN ORDER TO PREVENT SIGNAL FROM ACTING UPON AVC AND AFFECTING ACCURACY OF VOLTAGE MEASUREMENTS, AERIAL AND GROUND LEADS SHOULD BE SHORT CIRCUITED WHILE MAKING MEASUREMENTS.

All voltages as indicated on the voltage chart are measured with a fully charged 6 volt storage battery or from 117 volt A. C. line if the Model 62-381X A. C. power unit is installed in place of the 6 volt power unit.


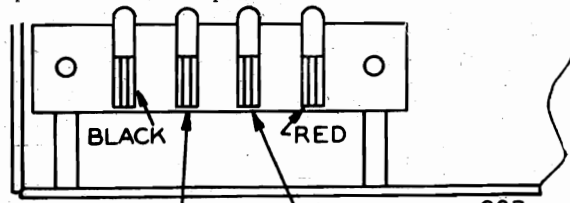



FIG. 3—CONNECTOR STRIP ON CHASSIS FOR POWER UNIT

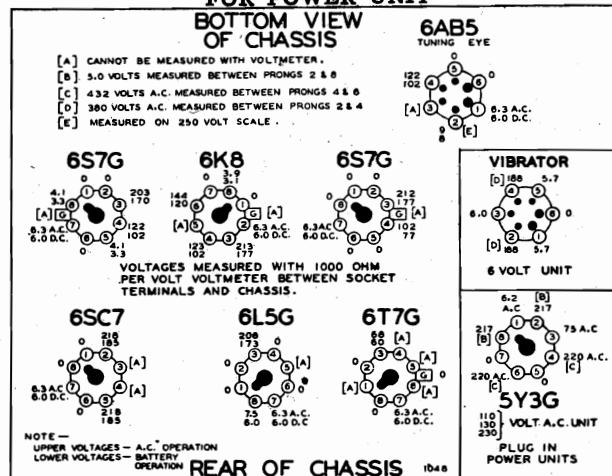

MONTGOMERY WARD & CO.

MODELS 93BR-420A, 93BR-421A
 Series A; 93BR-420B, 93BR-421B, 93BR-423B, 93BR-424B
 93BR-431B, Series B
 Serial 813000 up, Ser. B
 Schematic, Voltage, Socket
 Sensitivity, Trimmers

FOR ALIGNMENT
 SEE INDEX

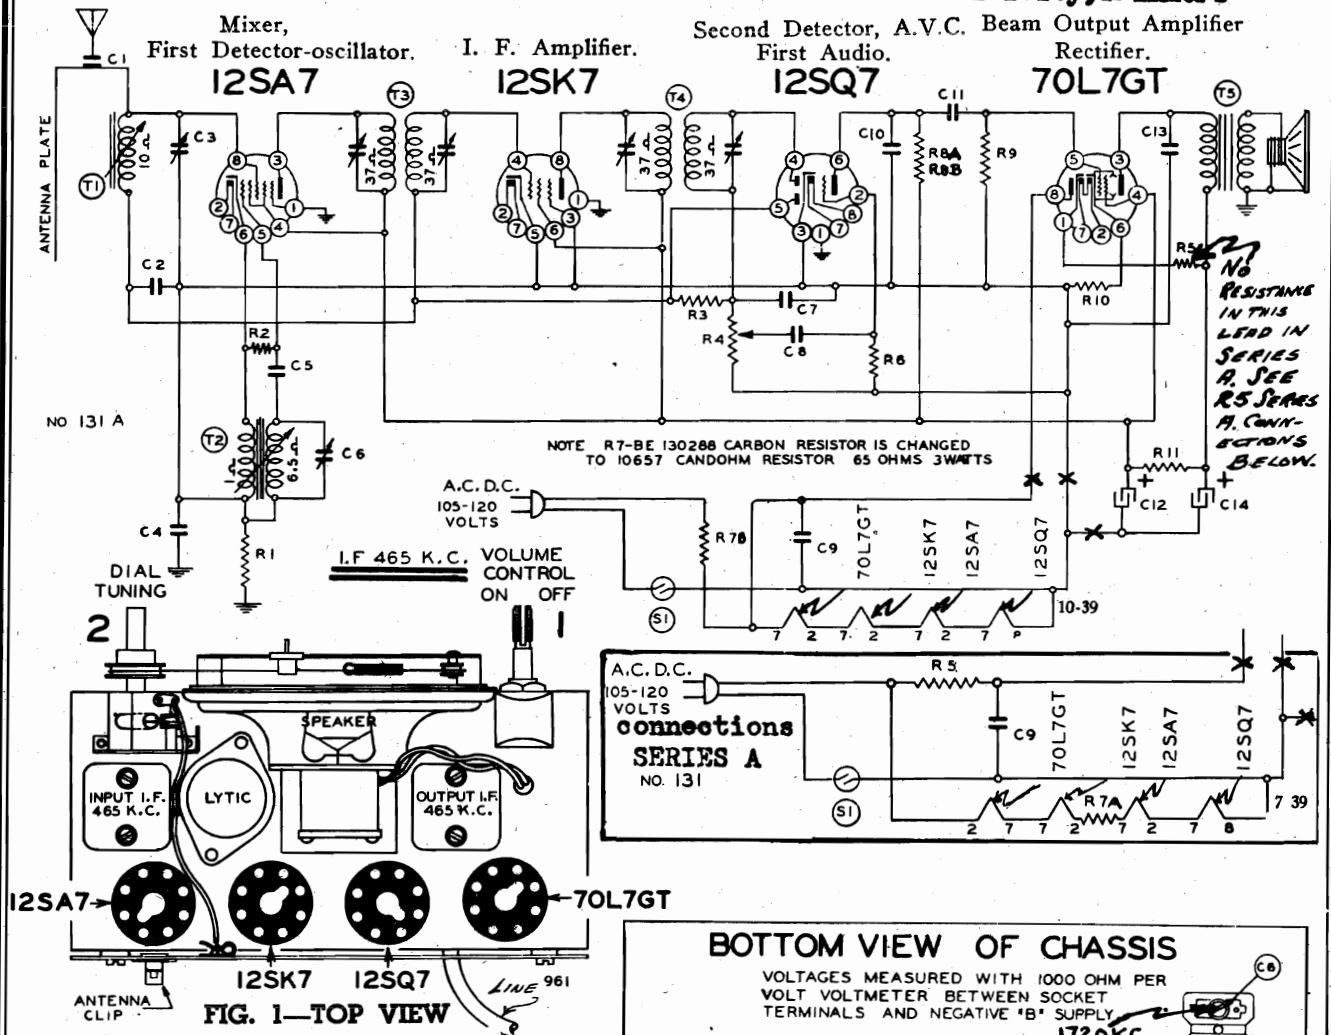

NOTE R7-BE 130288 CARBON RESISTOR IS CHANGED TO 10657 CANOHM RESISTOR 65 OHMS 3WATTS

RESISTANCE IN THIS LEAD IN SERIES A. SEE R5 SERIES A. CONNECTIONS BELOW.

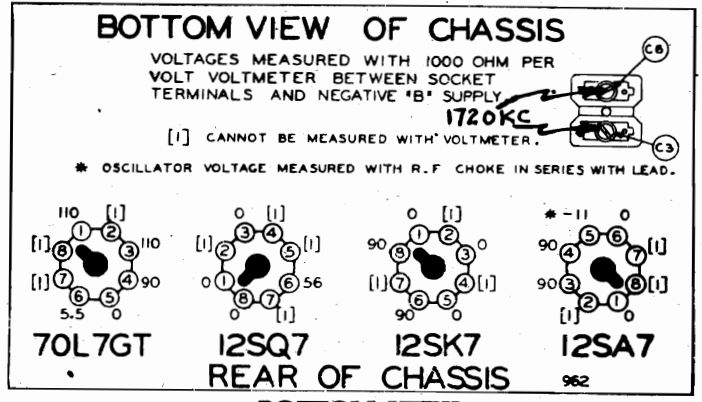
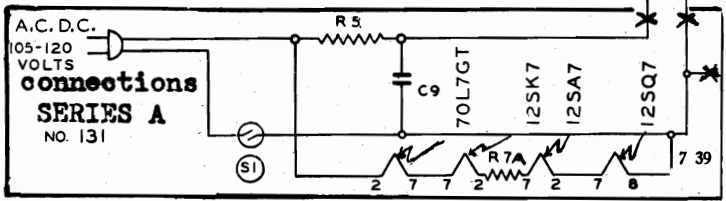


FIG. 1—TOP VIEW

Ref.	No.	Description
RESISTORS		
R1	BE130100	150M ohm—1/2 w.
R2	BE130176	20M ohm—1/2 w.
R3	BE1304	3 megohm—1/2 w.
R4	BE101188	Volume control (500M ohm)
R5	BE130293	30 ohm—1 watt
R6	BE130257	5 megohm—1/2 w.
R7A	BE130288	50 ohm—1 1/2 watt
R8A	BE1302	75M ohm—1/2 w.
R7B	BE10657	65 ohm—3 watt
R8B	BE13011	250M ohm—1/2 w.
R9	BE13011	250M ohm—1/2 w.
R10	BE130166	150 ohm—1/2 w.
R11	BE130279	1M ohm—1 watt
CONDENSERS		
C1	BE131262	.0001 washer condenser (Ant. Clip on Back Plate)
C2	BE1009	.05 x 200 v.
C3	BE124100	Antenna Trimmer
C4	BE10091	.15 x 400 v.
C5	BE12939	.00005 mica
C6	BE124100	Osc. Trimmer
C7	BE12912	.00025 mica
C8	BE10025	.002 x 600 v
C9	BE10013	.05 x 400 v.
C10	BE1292	.0005 mica
C11	BE10011	.01 x 400 v.
C12	BE11992	20 ufd. x 150 w. v. lytic
C13	BE10011	.01 x 400 v.
C14	BE11992	40 ufd. x 150 w. v. lytic
C3 and C6 in one unit C12 and C14 in one unit		

- Power Consumption - - - - - 35 Watts
- Power Output - - - - - 800 Milliwatts Undistorted
- Sensitivity (for .05 Watts Output) - 60 Microvolts Average
- Selectivity - 75 KC Broad at 1000 Times Signal at 1000 KC
- Tuning Frequency Range - - - - - 540 to 1720 KC
- Intermediate Frequency - - - - - 465 KC
- Speaker - - - - - 4 in. P. M. Dynamic

MODEL 62-381 SPU

Installation Notes

MODELS 93BR420A, 93BR421A
93BR420B, 93BR421B,
93BR423B, 93BR424B
93BR431B, Ser. A, B


MONTGOMERY WARD & CO. MODEL 93BR714B

MODELS 93BR461A, 93BR462A

Alignment, Trimmers

Installing the Model 62-381 Power Unit

(For 105-125 Volt 50/60 Cycle A. C. Operation)
MODEL 93BR-688A and 93BR-688A SERIES A

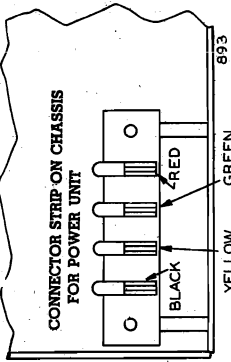

To install the Model 62-381 A.C. power unit proceed as follows:—

1. Remove the chassis from the cabinet, by removing the four chassis mounting bolts from the bottom of the cabinet.
2. Referring to Fig. 1, page 1, note that the 6-watt power unit is fastened to the top of the radio chassis with eight copper head screws, (six on top of chassis, and two on rear flange of chassis).
3. Remove the eight copper head screws.
4. Disconnect the four flexible leads of the power unit from the chassis connector strip. These leads clip into pin jacks. Note that the color of each flexible lead matches the color dot on the chassis pin jack connector strip.
5. Place the model 62-381 A.C. power unit on the top of the radio chassis and plug the four flexible leads into the pin jacks on the chassis connector strip.
 - (a) The red lead should be plugged into the pin jack which is marked with a red dot.
 - (b) The green lead connects to the pin jack which is marked with a green dot.
 - (c) The yellow lead connects to the pin jack which is marked with a yellow dot.
 - (d) The black lead connects to the pin jack which is marked with a black dot.
6. Mount the power unit to the chassis using the eight copper head screws.

IMPORTANT:

After the A.C. power unit has been installed check the connections again to make sure you have followed the instructions correctly.

Specifications

Model No. 93BR-714B

- Power Consumption 65 Watts
- Power Output 2.5 Watts Undistorted
- Sensitivity (for .5 Watts Output)
- Bandwidth 30 Macrovolts Average
- Shortwave Band—50 Macrovolts Average
- Selectivity - 45 KC Broad at 1000 Times Signal at 1000 KC

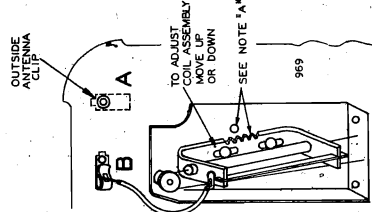


FIG. 4

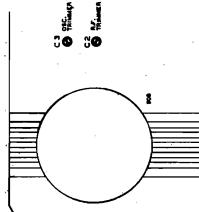


FIG. 4

MODELS 93BR-461A, -462A.

ALIGNMENT PROCEDURE Models No. 93BR-420B, 93BR-421B, 93BR-423B, 93BR-424B and 93BR-421A

- Volume control—Maximum all adjustments.
- Signal generator in series with generator output lead.
- Connect dummy antenna in series with generator output lead.
- Allow chassis and signal generator to "heat up" for several minutes.

BAND	Frequency Setting	Connections to Radio	Position of Iron Cores (Dial Settings)	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
L. F.	465 Kc.	Terminal "B" (See Fig. 4)	All the way out	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	Terminal "B" (See Fig. 4)	All the way out	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
BROAD-CAST BAND	1720 Kc.	Terminal "A" (See Fig. 4)	All the way out	Trimmer (C) (See Fig. 3)	Oscillator	Adjust to maximum output
	1720 Kc.	Terminal "A" (See Fig. 4)	All the way out	Trimmer (C) (See Fig. 3)	Oscillator	Adjust to maximum output
	200 MAF.	Terminal "A" (See Fig. 4)	All the way out	Antenna (See Note "A")	Antenna	Adjust to maximum output
	1400 Kc.	Terminal "A" (See Fig. 4)	Turn dial to 1400 Kc.	Antenna coil adjustment (See Note "A")	Antenna coil	Adjust to maximum output
	1720 Kc.	Terminal "A" (See Fig. 4)	Turn dial to 1720 Kc.	Adjust trimmer (C) (See Note "A")	Antenna	Check for tracking (See Note "B")

NOTE "A"—The antenna coil assembly is made so that it is movable up or down. When making the adjustment as given in the alignment procedure the coil is moved by hand or by providing one edge of the blade of screwdriver in the slot and depressing the blade in the gear teeth of the coil form.

NOTE "B"—After the antenna coil has been tracked at 1400 Kc., it is necessary to check the antenna trimmer (C) adjustment again at 1720 Kc. If the antenna trimmer (C) is not adjusted to maximum output at 1720 Kc., if the position of the antenna coil at 1400 Kc. These two adjustments should be made several times until no change of trimmer adjustment is required at 1720 Kc.

MODELS 93BR-461A, -462A.

BAND	Frequency Setting	Connections to Radio	Variable Condenser Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F. ONLY	465 Kc.	Grid of 1A7G Tube	Four trimmers on top (Phase out of mesh)	Four trimmers on top (See Note "A")	Output I. F.	Adjust to maximum output
	465 Kc.	Grid of 1A7G Tube	Four trimmers on top (Phase out of mesh)	Four trimmers on top (See Note "A")	Output I. F.	Adjust to maximum output
	465 Kc.	Grid of 1A7G Tube	Four trimmers on top (Phase out of mesh)	Four trimmers on top (See Note "A")	Output I. F.	Adjust to maximum output
BROAD-CAST BAND	1650 Kc.	Grid of 1A7G Tube	Trimmer (C) (See Fig. 4)	Trimmer (C) (See Fig. 4)	Oscillator	Adjust to maximum output
	1600 Kc.	Grid of 1A7G Tube	Trimmer (C) (See Fig. 4)	Trimmer (C) (See Fig. 4)	Oscillator	Adjust to maximum output

MODEL 93BR-714B (CAT. NO. 62-721)

- Volume control—Maximum all adjustments.
- Connect radio ground to ground post of signal generator with a short heavy lead.
- Connect dummy antenna in series with generator output lead.
- Allow chassis and signal generator to "heat up" for several minutes.

BAND	Frequency Setting	Connections to Radio	Position of Band Switch	Variable Condenser Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment
I. F.	465 Kc.	Grid of 6X4	Broadcast	Plates out of mesh	Two trimmers on top (See Note "A")	Trimmer Output	Adjust to maximum output
	465 Kc.	Grid of 6X4	Broadcast	Plates out of mesh	Two trimmers on top (See Note "A")	Trimmer Output	Adjust to maximum output
SHORT WAVE BAND (See Note A)	18 Mc.	Antenna and Ground	Short Wave	Set Dial at 18 Mc.	Trimmer C3	Short Wave oscillator	Adjust to maximum output
	18 Mc.	Antenna and Ground	Short Wave	Set Dial at 18 Mc.	Trimmer C2	Short Wave oscillator	Adjust to maximum output
	6 Mc.	Antenna and Ground	Short Wave	Set Dial at 6 Mc.	Trimmer C1	Short Wave oscillator	Adjust to maximum output
BROAD-CAST BAND (See Note A)	1600 Kc.	Grid of 6X4	Broadcast	Plates out of mesh	Trimmer C4	Broadcast oscillator	Adjust to maximum output
	500 Kc.	Grid of 6X4	Broadcast	Plates out of mesh	Trimmer C5	Broadcast oscillator	Adjust to maximum output
LOOP ALIGNMENT (See Note B)	1500 Kc.	Antenna and Ground	Broadcast	Set Dial at 1500 Kc.	Trimmer C1	Broadcast antenna	Adjust to maximum output
	600 Kc.	Antenna and Ground	Broadcast	Set Dial at 600 Kc.	Trimmer L1	Trimmer Coil	Adjust to maximum output


NOTE "A"—The signal generator is connected to the "ANT." and "GND." terminals on the rear of the chassis when aligning the Short Wave Band and to the grid of the antenna coil when aligning the Broadcast Band oscillator end. The loop antenna need not be connected to the radio when making these adjustments.

NOTE "B"—Loop alignment is made with the chassis mounted in the cabinet and the "ANT." and "GND." terminals and the jumper on the terminal board connected to "EXT." terminal (See Fig. 1).

FIG. 4

MONTGOMERY WARD & CO.

MODELS 93BR-461A,
Serial 759400 up
93BR-462A, Ser. 939800 up
Schematics, Sensitivity

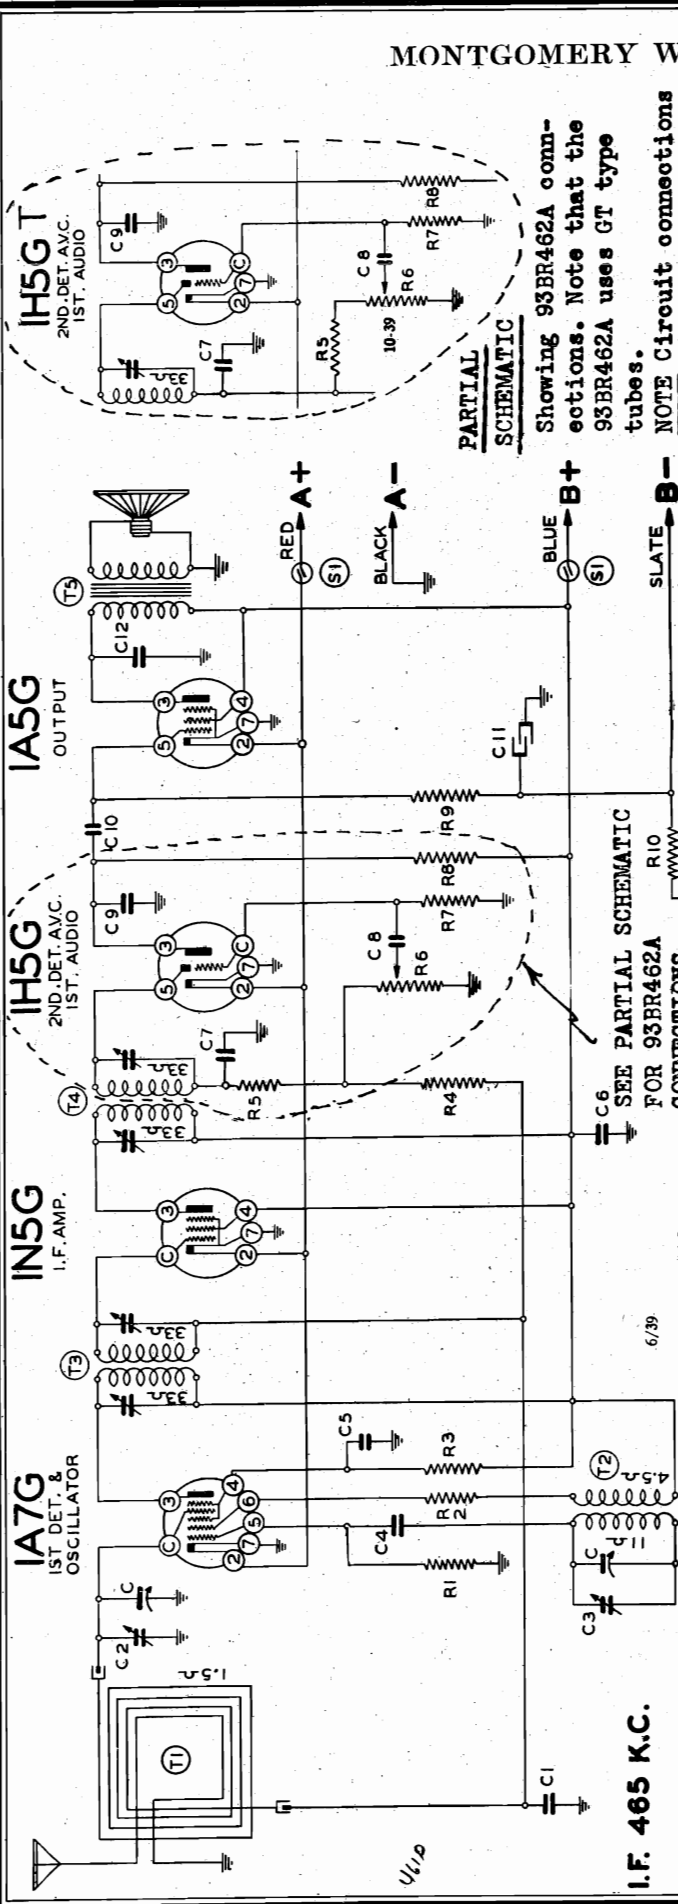

PARTIAL SCHEMATIC

Showing 93BR462A connections. Note that the 93BR462A uses GT type tubes.

NOTE Circuit connections are the same in both sets except for differences above.

I.F. 465 K.C.

FOR ALIGNMENT AND TUNER SEE INDEX

BE SURE TO REFER TO PROPER LIST FOR CORRECT PARTS CONNECTIONS

MODEL 93BR-461A (SERIAL No. 759400 and UP)

MODEL 93BR-462A (SERIAL No. 939800 and UP)

Ref. No.	Part No.	Description
R1	BE1309	200M ohm - 1/4 w. - 20%
R2	BE13018	4M ohm - 1/4 w. - 20%
R3	BE13018	4M ohm - 1/4 w. - 20%
R4	BE1304	50M ohm - 1/4 w. - 20%
R5	BE13020	3 megohm - 1/4 w. - 20%
R6	BE10124	100M ohm - 1/4 w. - 20%
R7	BE130257	1 megohm - 1/4 w. - 25% Lytic
R8	BE13037	5 megohm - 1/4 w. - 20%
R9	BE13038	2 megohm - 1/4 w. - 20%
R10	BE13070	500 ohm - 1/4 w. - 10%
C1	BE10220	2 gang variable condenser
C2	BE1009	.05 x 200 v. - 25%
C3	BE12415	R. F. Trimmer on loop
C4	BE12921	.0002 mica - 20%
C5	BE102108	2 gang variable condenser
C6	BE10022	.05 x 200 v. - 25%
C7	BE102108	2 gang variable condenser
C8	BE10022	.05 x 200 v. - 25%
C9	BE102108	2 gang variable condenser
C10	BE10022	.05 x 200 v. - 25%
C11	BE10078	.01 x 200 v. - 25%
C12	BE10025	.0025 mica - 20%
T1	BE11159	Loop Antenna Complete
T2	BE110139	Oscillator Coil
T3	BE108167	Input I. F. Coil
T4	BE108168	Output I. F. Coil
T5	BE105100	Output Transformer
T6	BE114183	4" P. M. Speaker
S1	BE12597	On-Off Switch




Specifications Model No. 93BR-461A Model No. 93BR-462A

- "A" Battery 1-1/2 volt "A" Battery; Article No. 62-5021.
- "B" Batteries 2-45 volt "B" Batteries; Article No. 62-4951.
- Power Consumption - "A" Battery 200 MA; "B" Battery 8 MA.
- Power Output - 100 Milliwatts, Undistorted
- Sensitivity (for .05 Watts) - 60 Microvolts Average
- Selectivity - 52 Kc. Broad at 1000 Times Signal at 1000 Kc. 75 Microvolts Average

MODEL 93BR-461A
Voltage, Trimmers
Battery Conn. Socket

MONTGOMERY WARD & CO.

MODEL 93BR-462A
Voltage, Trimmers
Notes, Batt. Conn.

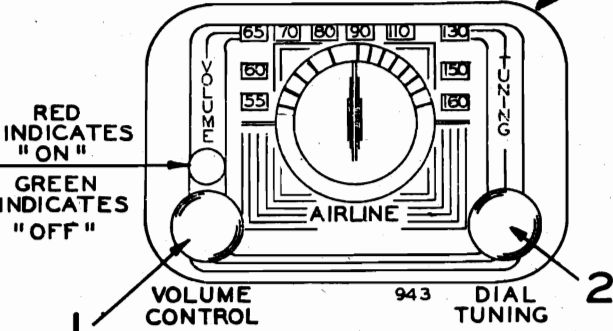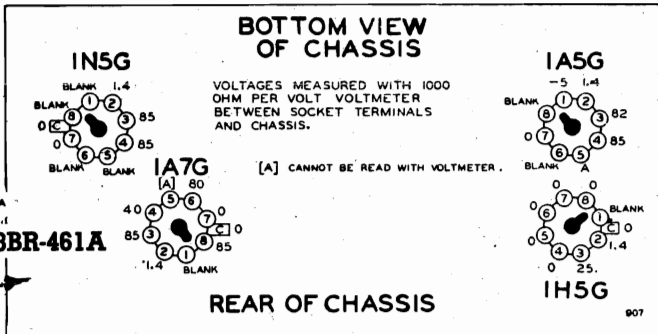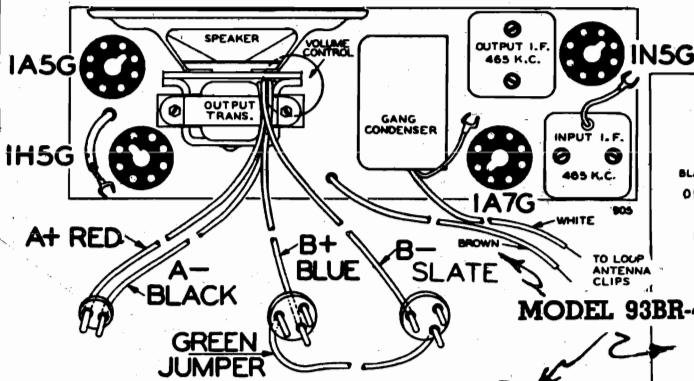

ADJUSTING THE ANTENNA:

IMPORTANT: MODEL 93BR-462A


After the batteries have been installed and the radio placed in operation, tune in a weak station around 1400 Kc. on the dial.

On the back of the cabinet a small adjustment screw is provided, (see C2, Fig. 2).

Very carefully turn this adjustment screw in or out until the station is as clear and loud as it can be made.


NOTE: The "A" battery should be placed in the cabinet so that the plug-in socket on the top of the battery is nearer to the side of the cabinet which is faced down than only the built-in loop antenna is used.

to the side of the cabinet which is facing up. Also, the "A" battery should be pushed all the way into the cabinet so that it fits between the left end of the radio chassis and the side of the cabinet. **NEXT:**—Tune in a station around 600 Kc. on the dial and adjust adjustment screw (See A, Fig. 2). Both these adjustments are very important for best reception.

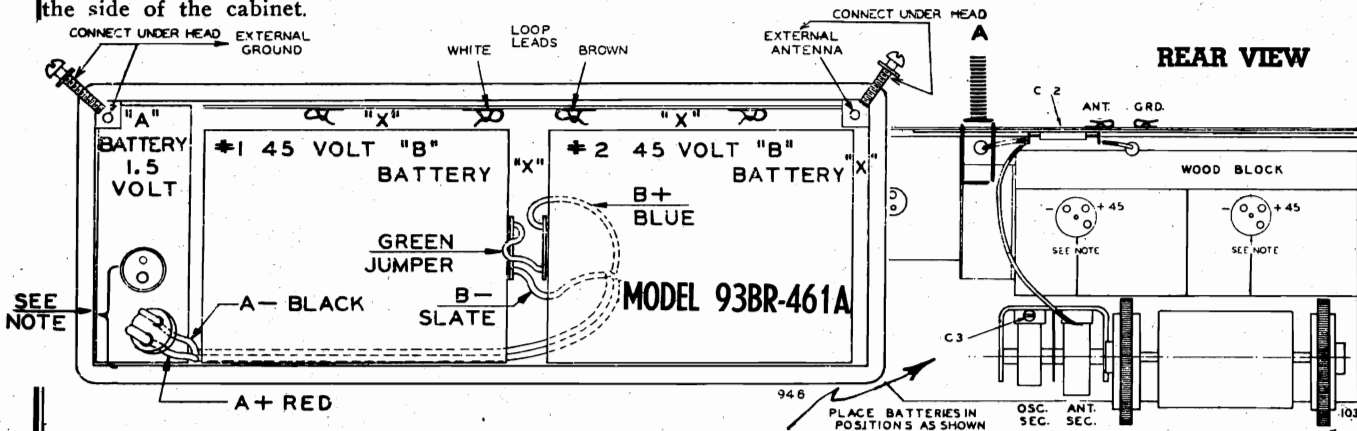


PRONG VIEW

VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMETER BETWEEN SOCKET TERMINALS AND CHASSIS.
[A] CANNOT BE READ WITH VOLTMETER
T.P.—TIE POINT

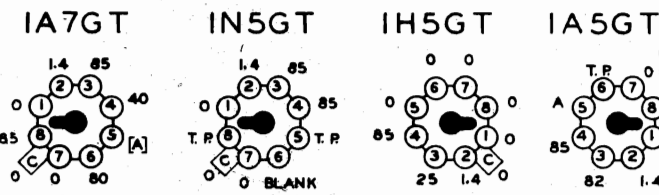


FRONT OF CHASSIS

MODEL 93BR-462A

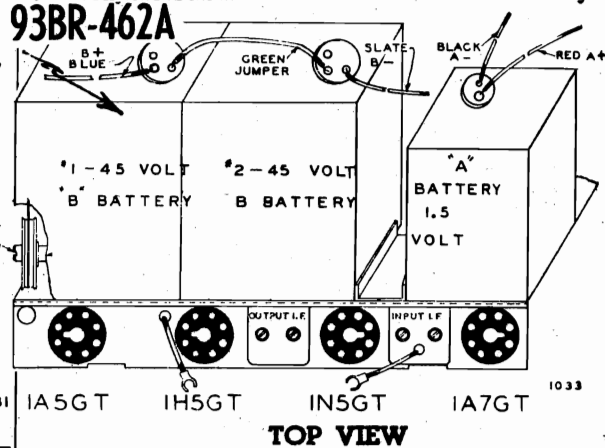

TOP VIEW

MODELS 93BR-561A, 93BR-563A **MONTGOMERY WARD & CO.** **Schematic, Socket, Voltage Alignment, Trimmers, Coils**
Serial 783300 up Mixer, 1st I. F. Amplifier & CO. Second Detector, Output
 First Detector-oscillator 2nd I. F. Amplifier A.V.C., 1st Audio

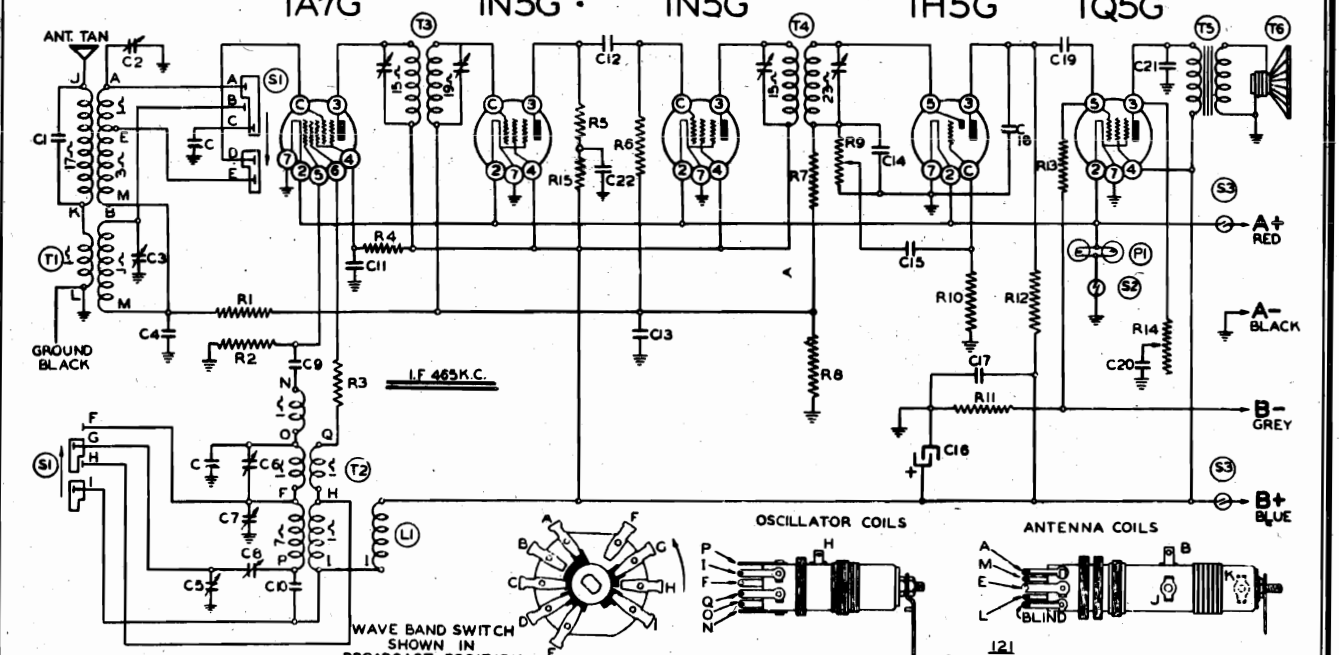

1—1½ volt "A" Battery.
 2—45 volt "B" Batteries.

Selectivity - .35 Kc. Broad at 1000 Times Signal at 1000 Kc.
Sensitivity (for .05 Watts) Broadcast - 10 Microvolts Average
Short Wave - 20 Microvolts Average

MODELS 93BR-561A and 93BR-563A (SERIAL No. 783300 and UP)

Ref. No.	Part No.	Description
RESISTORS		
R1	BE13020	100M ohm—½ w.
R2	BE1309	200M ohm—½ w.
R3	BE13056	100 ohm—½ w.
R4	BE13012	50M ohm—½ w.
R5	BE13022	5M ohm—½ w.
R6	BE13020	100M ohm—½ w.
R7	BE1304	3 megohm—½ w.
R8	BE1304	3 megohm—½ w.
R9	BE101184	1 megohm—volume control
R10	BE130225	15 megohm—½ w.
R11	BE130101	600 ohm—½ w.
R12	BE1303	500M ohm—½ w.
R13	BE13019	1 megohm—½ w.
R14	BE101179	Tone Control
R15	BE13017	10M ohm—½ w.




Ref. No.	Part No.	Description
C11	BE1009	.05 x 200 v.
C12	BE1292	.0005 mica
C13	BE1009	.05 x 200 v.
C14	BE12960	.00015 mica
C15	BE10012	.003 x 600 v.
C16	BE11986	8 mid. lytic
C17	BE1006	.25 x 200 v.
C18	BE12921	.0002 mica
C19	BE10011	.01 x 400 v.
C20	BE10026	.02 x 400 v.
C21	BE10071	.004 x 600 v.
C22	BE10020	.1 x 200 v.

C2 and C3 in one unit. C6 and C7 in same unit. C5 and C8 in one unit.

Ref. No.	Part No.	Description
CONDENSERS		
C	BE102106B	2 gang variable condenser
C1	BE129132	.000125 mica
C2	BE12485	B. C. Trimmer
C3	BE12485	S. W. Trimmer
C4	BE1009	.05 x 200 v.
C5	BE12486	S. W. Pad
C6	BE12484	S. W. Trimmer
C7	BE12484	B. C. Trimmer
C8	BE12486	B. C. Pad
C9	BE12939	.00005 mica
C10	BE1009	.05 x 200 v.

Ref. No.	Part No.	Description
PARTS		
T1	BE11120	B. C.—S. W. Antenna Coil
T2	BE110118	B. C.—S. W. Osc. Coil
T3	BE108111G	Input I. F. Coil
T4	BE108112	Output I. F. Coil
T5	BE10569	Output Transformer
T6	BE114162R	6" P. M. Speaker (for 62-563)
T6	BE114169	8" P. M. (for 62-561)
S1	BE12579	Band Switch
S2	BE12581	Pushbutton Switch—Pilot
S3		Off-on switch on tone control
P1	BE107243	(2) 1.5 v. Pilot Lights
L1	BE1233	R. F. Choke Coil

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII
Consumption - - -
"A" Battery 300 MA; "B" Battery 11 MA.
Output - - - -
190 Milliwatts, Undistorted

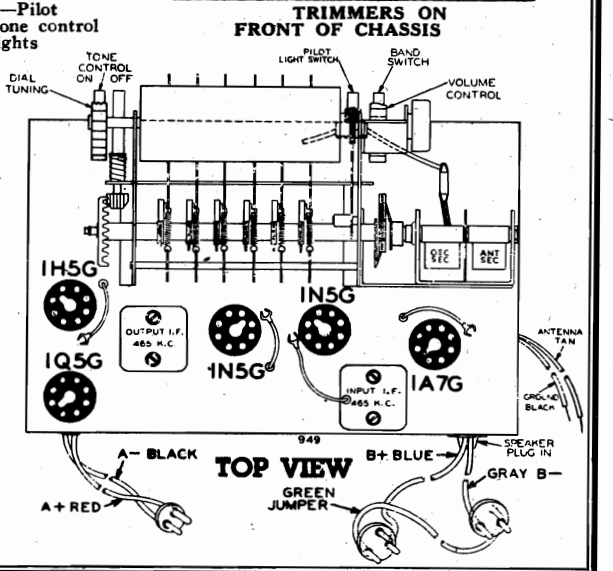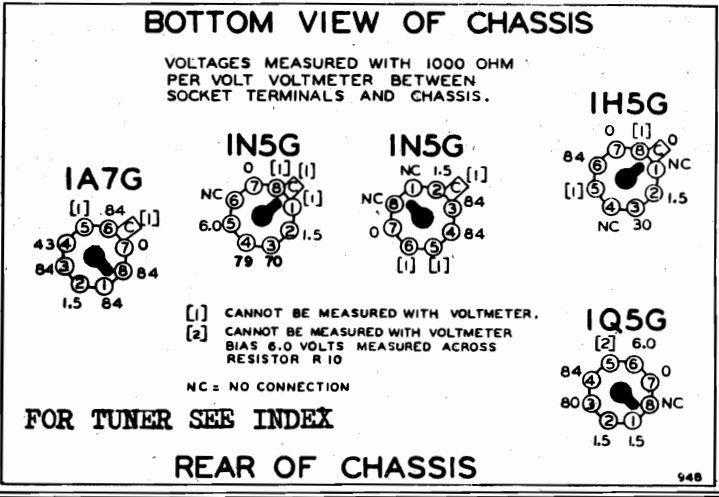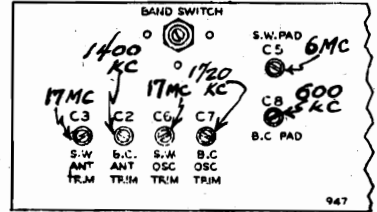

MODELS 93BR-658A, 93BR-666A

Series A, Serial 9F824600 up


MONTGOMERY WARD & CO.

Schematic, Voltage, Socket

Alignment, Trimmers

First Detector-oscillator 6D8G I. F. Amplifier 6SK7 Second Detector, A.V.C. 6T7G

Output 6G6G

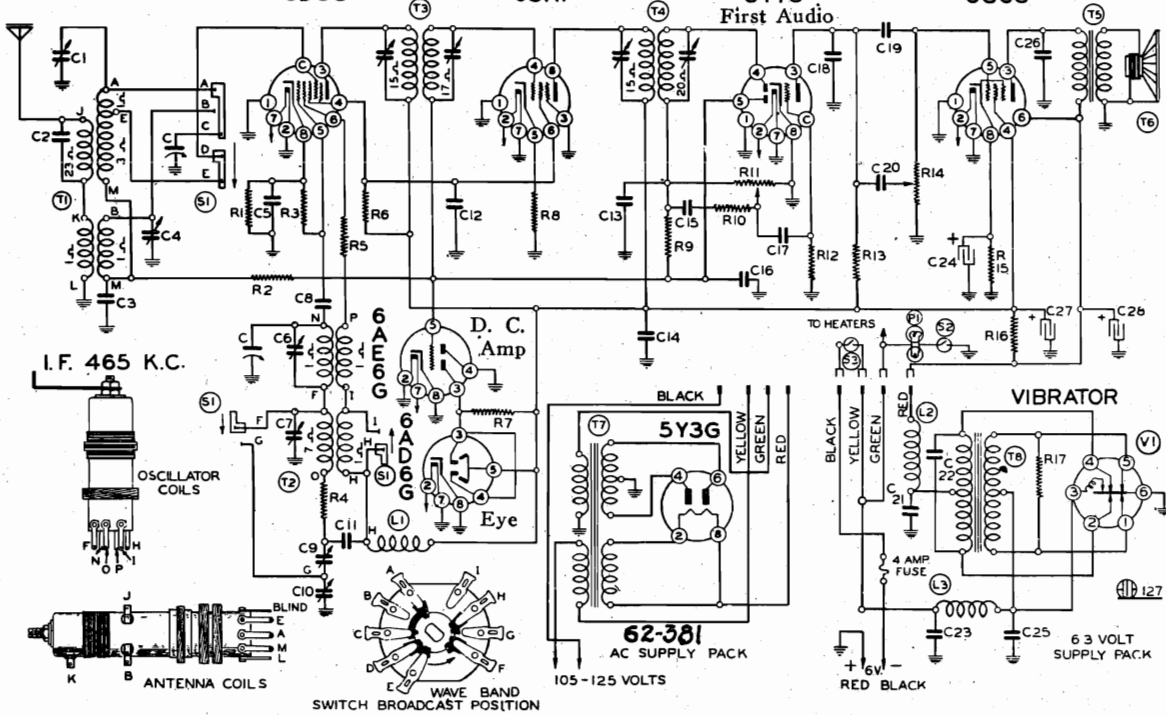

Ref. No. Part No.

MODEL 93BR-658A and 93BR-666A SERIES A (SERIAL No. 9F824600 and UP)

RESISTORS

R1	BE13083	300 ohm—1/4 w.
R2	BE13020	100M ohm—1/4 w.
R3	BE13012	50M ohm—1/4 w.
R4	BE130286	20 ohm—1/4 w.
R5	BE130168	100 ohm—1/4 w.
R6	BE13048	15M ohm—1/4 w.
R7	BE13019	1 megohm—1/4 w.
R8	BE13097	200 ohm—1/4 w.
R9	BE1304	3 megohm—1/4 w.
R10	BE13012	50M ohm—1/4 w.
R11	BE101184	1 Megohm volume control
R12	BE130225	15 megohm—1/4 w.
R13	BE1305	300M ohm—1/4 w.
R14	BE101177	500M ohm tone control
R15	BE13070	500 ohm—1/4 w.
R16	BE130199	1500 ohm—1 watt
R17	BE130285	200 ohm—1/4 w.



CONDENSERS

C1	BE102106B	2 gang variable condenser
C2	BE12475	BC Antenna Trimmer
C3	BE129132	.000125 mica
C4	BE1009	.05 x 200
C5	BE12475	S. W. Antenna Trimmer
C6	BE10020	.1 x 200 v.
C7	BE12476	S. W. Oscillator Trimmer
C8	BE12476	B. C. Oscillator Trimmer
C9	BE12938	.00005 Mica

C9	BE12488	B. C. Series Pad
C10	BE12488	S. W. Series Pad
C11	BE10020	.1 x 200 v.
C12	BE10020	.1 x 200 v.
C13	BE1295	.0001 Mica
C14	BE10020	.1 x 200 v.
C15	BE1295	.0001 mica
C16	BE10026	.02 x 400 v.
C17	BE10019	.006 x 600 v.
C18	BE1292	.0005 mica
C19	BE10026	.02 x 400 v.
C20	BE10019	.006 x 600 v.
C21	BE10020	.1 x 200 v.
C22	BE10068	.003 x 1400 v.
C23	BE10040	.5 x 120 v.
C24	BE11985	20 mfd.—25 w. v. lytic
C25	BE10040	.5 x 120 v.
C26	BE10019	.006 x 600 v.
C27	BE11985	30 mfd.—200 w. v. lytic
C28	BE11985	30 mfd.—200 w. v. lytic

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII




FOR TUNER
SEE INDEX

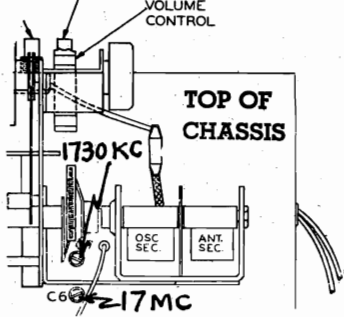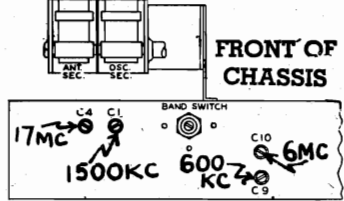

Sensitivity (for .05 Watts Output) - Broadcast 15 Microvolts Average
Shortwave 30 Microvolts Average
Selectivity - 35 KC Broad at 1000 Times Signal at 1000 KC

T1	BE11121	Antenna Coil
T2	BE11017	Oscillator Coil
T3	BE10811-I	Input I. F.
T4	BE108112E	Output I. F.
T5	BE10569C	Output Transformer
T6	BE114162J	6 in. P.M. speaker—for model 91BR-666A
T7	BE114169	8 in. P.M. speaker—for model 93BR-658A
T8	BE104165	AC Power Transformer
T9	BE104164	Vibrator Transformer
V1	BE12616	Vibrator
L1	BE1233	R. F. Choke
L2	BE1233	R. F. Choke
L3	BE10568	"A" Choke
S1	BE12579	Wave Band Switch
S2	BE12581	Pilot Light Switch
S3		Off-on switch on tone control
P1	BE10789	Pilot light 6.3 v.—150 ma.—T-40

Power Consumption 2.5 Amp. at 6.3 Volts

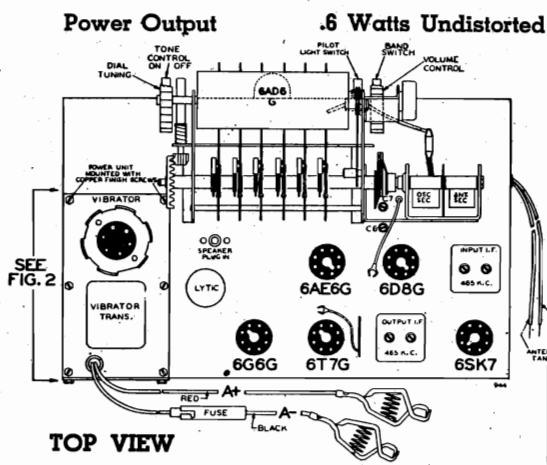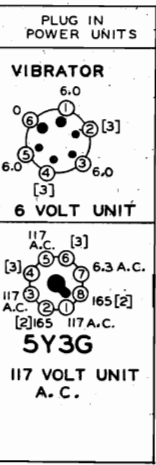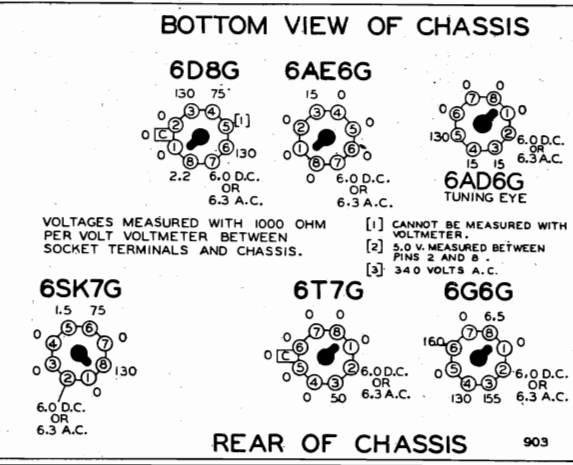


Power Output .6 Watts Undistorted



Alignment, Trimmers, Sensitivity, Coils

MONTGOMERY WARD & CO.

MODELS 93BR-659A, 93BR-660A
Serial 9F806900 up
Schematic, Voltage, Socket

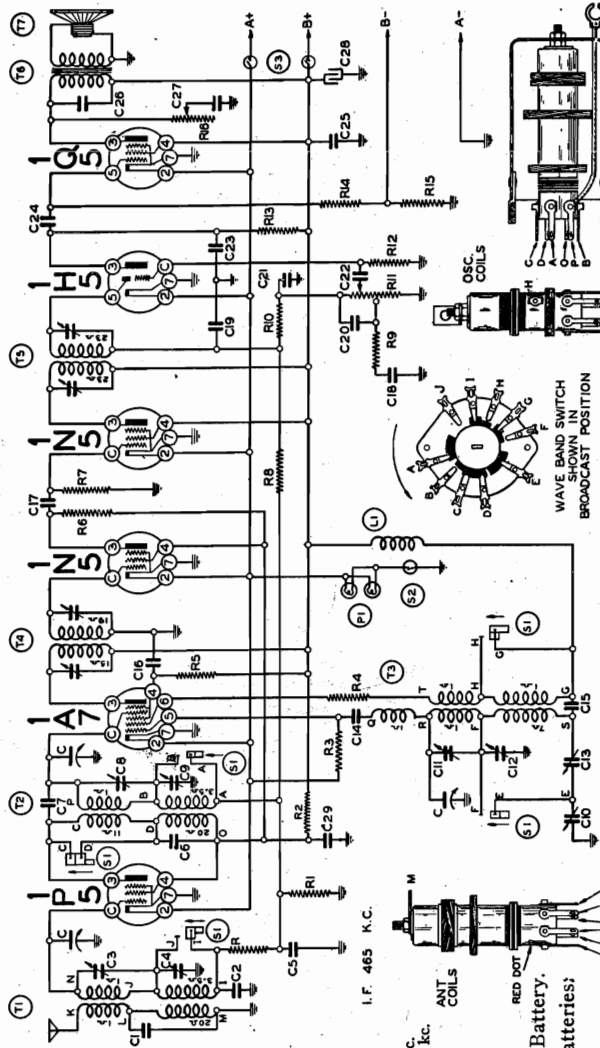


MODELS 93BR-659A and 93BR-660A 122
(SERIAL No. 9F806900 and UP)

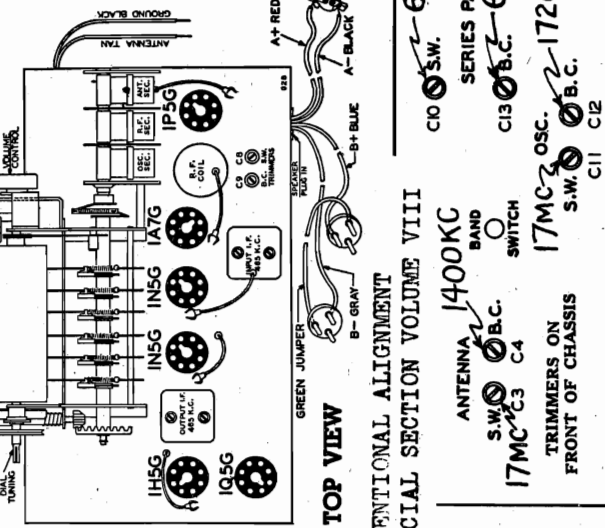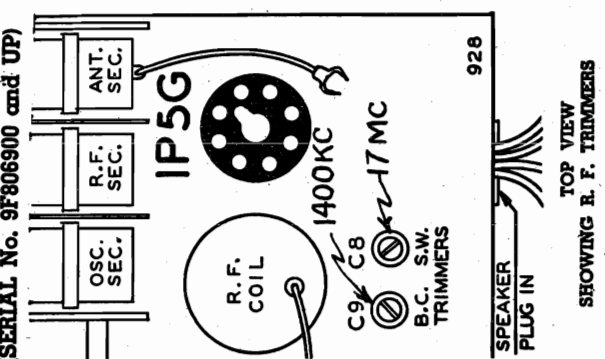

Ref. No.	Part No.	Description
R1	BE130100	150M ohm-1/4 w.
R2	BE13104	3 megohm-1/4 w.
R3	BE131023	2M ohm-1/4 w.
R4	BE13109	200M ohm-1/4 w.
R5	BE131056	100 ohm-1/4 w.
R6	BE13012	50M ohm-1/4 w.
R7	BE13020	100M ohm-1/4 w.
R8	BE13104	15M ohm-1/4 w.
R9	BE13012	50M ohm-1/4 w.
R10	BE130125	15 megohm-volume control
R11	BE130125	15 megohm-1/4 w.
R12	BE13105	1 megohm-1/4 w.
R13	BE13105	1 megohm-1/4 w.
R14	BE13019	1 megohm-1/4 w.
R15	BE13022	350 ohm-1/4 w.
R16	BE101179	1 megohm tone control
C1	BE102112	3 gang variable condenser
C2	BE1295	.001 mica condenser
C3	BE12496	.02 x 400 v.
C4	BE12496	Dual Trimmer (S.W. Ant.)
C5	BE12496	Dual Trimmer (B.C. Ant.)
C6	BE1295	.001 mica
C7	BE129143	.00005 ceramicion
C8	BE12495	Dual Trimmer (S.W. R.F.)
C9	BE12495	Dual Trimmer (B.C. R.F.)
C10	BE12493	Dual Compression Trimmer
C11	BE12494	Dual Trimmer (S.W. Osc.)
C12	BE12494	Dual Trimmer (B.C. Osc.)
C13	BE12493	Dual Compression Trimmer
C14	BE12939	.00005 mica
C15	BE12939	.05 x 200 v.
C16	BE1292	.0005 mica
C17	BE1292	.01 x 400 v.
C18	BE10011	.0005 mica
C19	BE12939	.00005 mica
C20	BE12939	.05 x 200 v.
C21	BE12939	.0005 mica
C22	BE10012	.001 mica
C23	BE10011	.001 mica
C24	BE1001	.05 x 200 v.
C25	BE1001	.05 x 200 v.
C26	BE10071	.04 x 400 v.
C27	BE11986	.02 x 400 v.
C28	BE11986	8 mid. lytic-150 w. v.
C29	BE11986	.25 x 200 v.
S1	BE12580	Band Switch
S2	BE12581	Pilot Light Switch
S3	BE11133	On-off switch on tone control
T1	BE10951	B.C.-S.W. Antenna Coil
T2	BE10123	B.C.-S.W. R.F. Coil
T3	BE10811	Input I.F. Oscillator Coil
T4	BE10811	Output I.F. Transformer-465 kc.
T5	BE1082	Output Transformer-465 kc.
T6	BE11473	8" speaker-For 93BR-659A
T7	BE114169	8" speaker-For 93BR-660A
T8	BE1233	R.F. Choke Coil
T9	BE107243	Pilot Light-1.35 v.

The type and function of each tube is as follows.
 1-1 1/2 volt "A" Batteries;
 2-45 volt "B" Batteries;
 1-Type IP5G R. F. Amplifier.
 1-Type IA7G Mixer, First Detector-oscillator.
 1-Type IN5G Remote Cut-Off Pentode, 1st I. F. Amplifier (465 K.C.).
 1-Type IN5G Remote Cut-Off Pentode, 2nd I. F. Amplifier (465 K.C.).
 1-Type IH5G Second Detector, A.V.C., 1st Audio.
 1-Type IQ5G Output Amplifier.

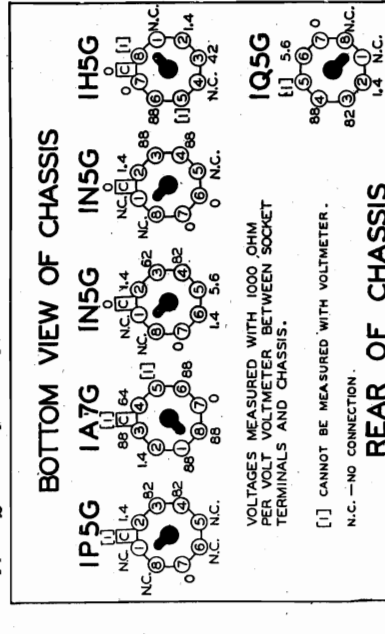

REAR OF CHASSIS
 Power Consumption - "A" Battery 350 MA; "B" Battery 15 MA.
 Power Output - 190 Milliwatts, Undistorted
 Sensitivity (for .05 Watts) - Broadcast Band-6 Microvolts Average
 Short Wave Band-15 Microvolts Average
 Selectivity - 35 Kc. Broad at 1000 Times Signal at 1000 Kc.

FOR TUNER
SEE INDEX

CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION VOLUME VIII
 ANTENNA 1400KC BAND SWITCH
 S.W. C3 C4
 17MC OSC. TRIMMERS ON FRONT OF CHASSIS
 S.W. C11 C12
 17MC B.C. 1720 MC
 SERIES PAD
 C10 S.W. 6MC
 600KC
 931

MODELS 93BR-714A, 93BR-716A

Serial 939200 and up

93BR-715A, Ser. A

Serial 786400 and up


Schematic, Voltage, Socket

MODEL 93BR-714A, 93BR-716A

SERIES A

(SERIAL No. 939200 and UP)

No.	Part No.	Description
R1	BE13011	250M ohm-1/4 w.
R2	BE13021	20M ohm-20%-1/4 w.
R3	BE130197	20 ohm-10%-1/4 w.
R4	BE130144	15M ohm-20%-1 watt
R5	BE130168	100 ohm-10%-1/4 w.
R6	BE130110	1 megohm-10%-1/10 w.
R7	BE1304	3 megohm-20%-1/4 w.
R8	BE13055	12M ohm-20%-2 watt
R9	BE101185	1 megohm-volume control
R10	BE130225	15 megohm-50-30%-1/4 w.
R11	BE13037	500M ohm-20%-1/4 w.
R12	BE13019	1 megohm-20%-1/4 w.
R13	BE101183	1 megohm-tone control
C	BE102114	2 gang variable condenser
C1	BE12467	Wave Trap Trimmer
C2	BE129140	.00016 mica-5%
C3	BE10011	.01 x 400 volt-25%
C4	BE1009	.05 x 200 volt-25%
C5	BE129131	.002775 mica-3%
C6	BE12468	Image Trimmer
C7	BE12475	B. C. Antenna Trimmer
C8	BE12475	S. W. Antenna Trimmer
C9	BE12960	.00015 Mica-20%
C10	BE12487	B. C. Series Pad
C11	BE12487	S. W. Series Pad
C12	BE12476	S. W. Oscillator Trimmer
C13	BE12476	B. C. Oscillator Trimmer
C14	BE11984	5 mfd. x 300 v. lytic
C15	BE1001	.1 x 400 v. 50-10%
C16	BE1001	.1 x 400 v. 50-10%
C17	BE1295	.0001 mica-20%
C18	BE10071	.004 x 600 v.-25%
C19	BE1292	.0005 mica-20%
C20	BE11984	15 mfd. x 350 v. lytic
C21	BE10026	.02 x 400 v.-25%
C22	BE10071	.004 x 600 v.-25%
C23	BE11984	10 mfd. x 450 v. lytic
C24	BE10019	.006 x 600 v.-25%
C7 and C8		in one unit. C10 and C11 in one unit.
C12 and C13		in one unit. C14, C20, and C23 in one unit.
T1	BE108146	Wave Trap
T2	BE111122	Antenna Coil Complete
T3	BE110115	Oscillator Coil Complete
T4	BE108111H	Input I. F. Coil-465 kc.
T5	BE108132B	Output I. F. Coil-465 kc.
T6	BE10590	Output Transformer
T7	BE114161	6" Dynamic Speaker (1175 Ohm Field)
T8	BE104139D	Power Transformer
P1	BE10794	6-8 volt pilot light T44
S1	BE12584	Band Switch
S2	BE12577	AC Switch



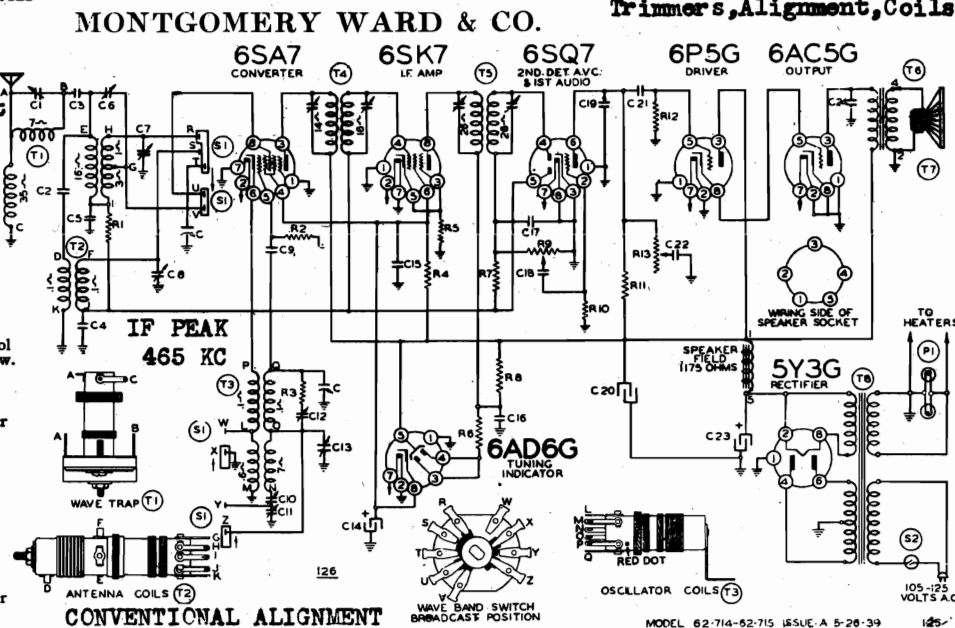


CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION VOLUME VIII
 NOTE:-Refer to proper parts list for correct parts.
 MODEL 93BR-715A SERIES A (SERIAL No. 786400 and UP)


Ref. No.	Part No.	Description
R1	BE13011	250M ohm-20%-1/4 w.
R2	BE13021	20M ohm-20%-1/4 w.
R3	BE130197	20 ohm-10%-1/4 w.
R4	BE130144	15M ohm-20%-1 watt
R5	BE130168	100 ohm-10%-1/4 w.
R6	BE130110	1 megohm-10%-1/10 w.
R7	BE1304	3 megohm-20%-1/4 w.
R8	BE13055	12M ohm-20%-2 watt
R9	BE101184	1 megohm-volume control
R10	BE130225	15 megohm-50-30%-1/4 w.
R11	BE13037	500M ohm-20%-1/4 w.
R12	BE13019	1 megohm-20%-1/4 w.
R13	BE101176	1 megohm-tone control
C	BE102106B	2 gang variable condenser
C1	BE12467	Wave Trap Trimmer
C2	BE129140	.00016 mica-5%
C3	BE10011	.01 x 400 volt-25%
C4	BE1009	.05 x 200 volt-25%
C5	BE129131	.002775 mica-3%
C6	BE12468	Image Trimmer
C7	BE12475	B. C. Antenna Trimmer
C8	BE12475	S. W. Antenna Trimmer
C9	BE12960	.00015 Mica-20%
C10	BE12487	B. C. Series Pad
C11	BE12487	S. W. Series Pad
C12	BE12476	S. W. Oscillator Trimmer
C13	BE12476	B. C. Oscillator Trimmer
C14	BE11984	5 mfd. x 300 v. lytic
C15	BE1001	.1 x 400 v. 50-10%
C16	BE1001	.1 x 400 v. 50-10%
C17	BE1295	.0001 mica-20%
C18	BE10071	.004 x 600 v.-25%
C19	BE1292	.0005 mica-20%
C20	BE11984	15 mfd. x 350 v. lytic
C21	BE10026	.02 x 400 v.-25%
C22	BE10071	.004 x 600 v.-25%
C23	BE11984	10 mfd. x 450 v. lytic
C24	BE10019	.006 x 600 v.-25%
C7 and C8		in one unit. C10 and C11 in one unit.
C12 and C13		in one unit. C14, C20, and C23 in one unit.
T1	BE108146	Wave Trap
T2	BE111122	Antenna Coil Complete
T3	BE110115	Oscillator Coil Complete
T4	BE108111H	Input I. F. Coil-465 kc.
T5	BE108132B	Output I. F. Coil-465 kc.
T6	BE10590	Output Transformer
T7	BE114161	6" Dynamic Speaker (1175 Ohm Field)
T8	BE104139D	Power Transformer
P1	BE10794	6-8 volt pilot light T44
S1	BE12579	Band Switch
S2	BE12581	AC Switch

FOR TUNER
 SEE INDEX

Power Consumption 65 Watts
 Output 2.5 Watts Undistorted

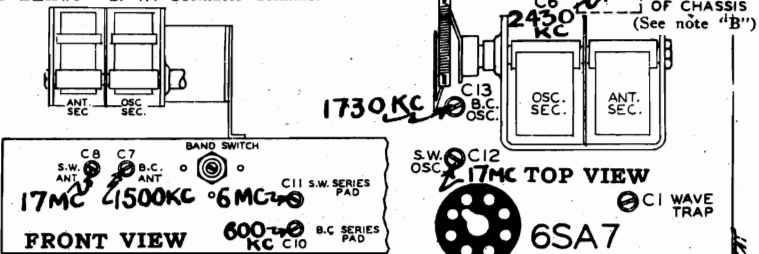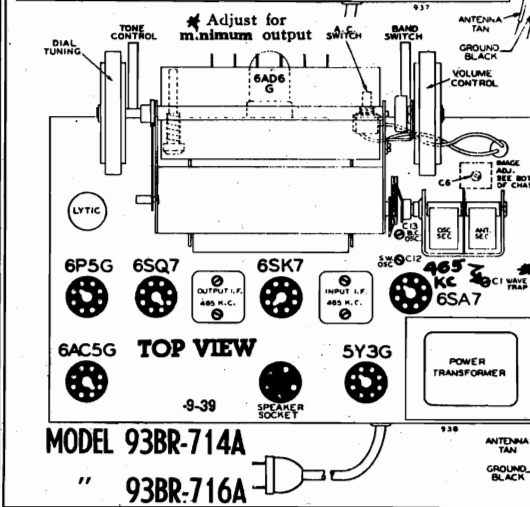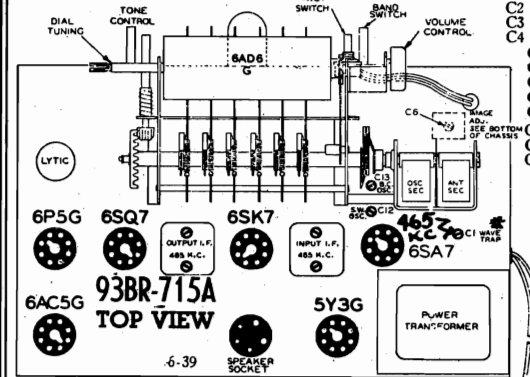


NOTE "B" 1500 KC. is the image frequency of 2430 KC. Adjust Trimmer (C6) until a minimum output is obtained. Trimmer (C6) is mounted on the bottom of the chassis.

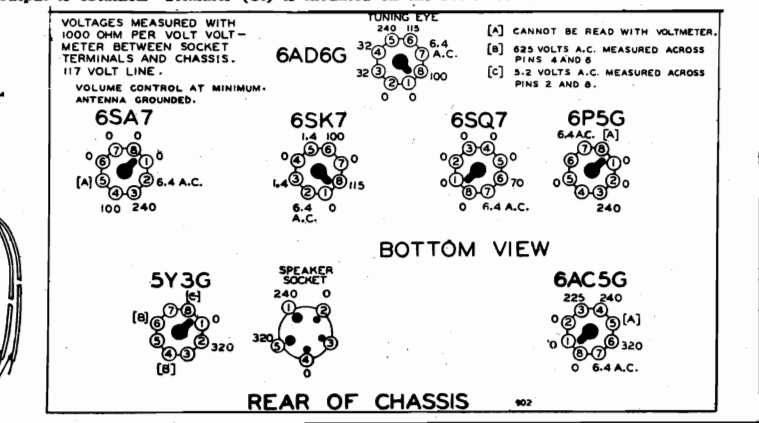

MODEL 93BR-715B, Series A
Serial 105400 up
Schematic, Voltage, Socket


MONTGOMERY WARD & CO.

Trimmers, Alignment
Sensitivity, Coils



MODEL 93BR-715B SERIES A
(SERIAL No. 105400 and UP)

Ref. No.	Part No.	Description
R1	BE13021	20M ohm-20%-1/4 w.
R2	BE13011	250M ohm-20%-1/4 w.
R3	BE13021	20M ohm-20%-1/4 w.
R4	BE130197	20 ohm-10%-1/4 w.
R5	BE130168	100 ohm-10%-1/4 w.
R6	BE13019	1 megohm-10%-1/4 w.
R7	BE1304	3 megohm-20%-1/4 w.
R8	BE13055	12M ohm-20%-2 watt
R9	BE130144	15M ohm-20%-1 watt
R10	BE130225	15 megohm-30%-1/4 w.
R11	BE101184	1 megohm-volume control
R12	BE1303	500M ohm-20%-1/4 w.
R13	BE13019	1 megohm-20%-1/4 w.
R14	BE101176	1 megohm-tone control
R15	BE1301	25M ohm-20%-1/4 w.
C	BE102119	2 gang variable condenser
C1	BE124109	B.C. Antenna Trimmer
C2	BE10025	.002 x 600 v.-25%
C3	BE12954	.003 mica-3%
C4	BE124109	S.W. Antenna Trimmer
C5	BE12960	.00015 mica-20%
C6	BE124120	B.C. Series Pad
C7	BE129150	S.W. Series Pad
C8	BE12476	B.C. Oscillator Trimmer
C9	BE12476	B.C. Oscillator Trimmer
C10	BE11984	5. mfd. x 300 v. lytic
C11	BE1001	.1 x 400 v.-10%
C12	BE1001	.1 x 400 v.-10%
C13	BE1295	.0001 mica-20%
C14	BE10071	.004 x 600 v.-25%
C15	BE1292	.0005 mica-20%
C16	BE10026	.02 x 400 v.-25%
C17	BE10071	.004 x 600 v.-25%
C18	BE11984	15 mfd. x 350 v. lytic
C19	BE11984	10 mfd. x 450 v. lytic
C20	BE10019	.006 x 600 v.-25%
C21	BE10061	.02 x 600 v.-Bakelite
C22	BE1009	.05 x 200 v.-25%
C8 and C9 in one unit		
C10, C18 and C19 in one unit		
T1	BE111166	B.C. Loop Assembly
T2	BE111167	S.W. Antenna Coil Complete
T3	BE110141	Oscillator Coil Complete
T4	BE108166	Input I.F. Coil-465 kc.
T5	BE108132B	Output I.F. Coil-465 kc.
T6	BE10590	Output Transformer
T7	BE114161	6" Dynamic Speaker
T8	BE104139E	Power Transformer
P1	BE10794	2 6-8 volt pilot light T44
S1	BE125102	Band Switch
S2	BE12581	AC Switch
S3	BE12570	Phono or Television-Radio Switch

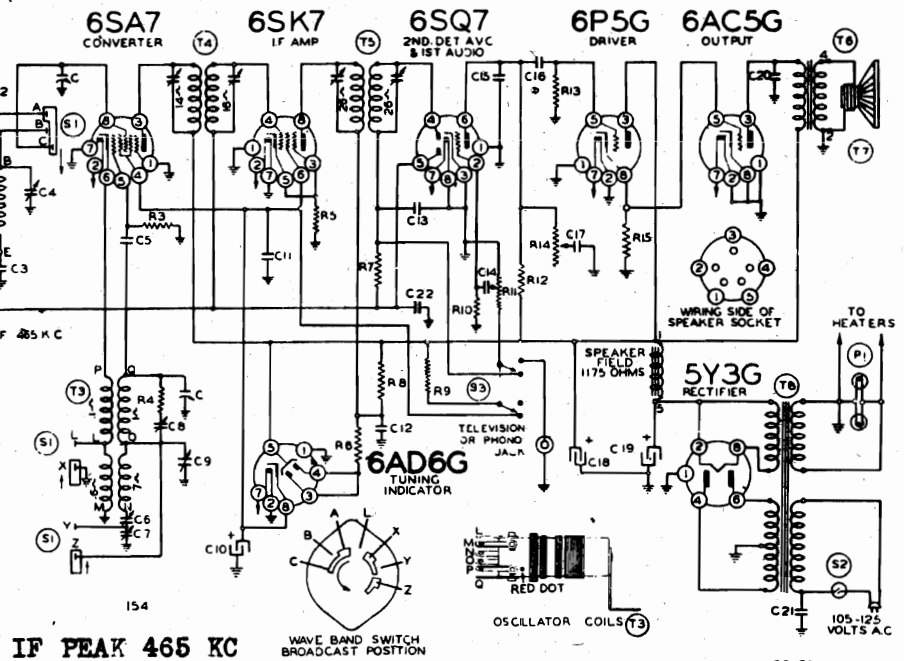

IF PEAK 465 KC

WAVE BAND SWITCH BROADCAST POSITION

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOL. VIII

SEE ALSO NOTES

ALIGNMENT PROCEDURE MODEL 93BR-714B.

Power Consumption - - - 65 Watts


Power Output - 2.5 Watts Undistorted

Sensitivity (for .5 Watts Output)

Broadcast Band-30 Microvolts Average


Shortwave Band-50 Microvolts Average

Selectivity - 45 KC Broad at 1000 Times Signal at 1000 KC

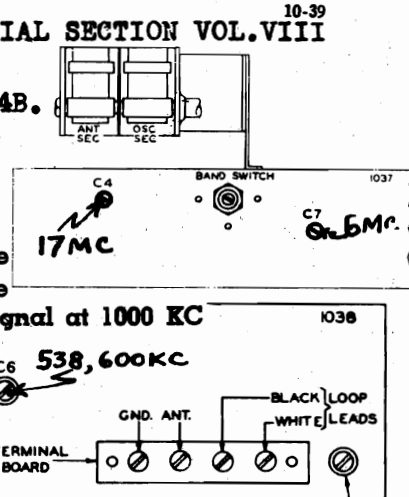


FOR TUNER
SEE INDEX

When an outside antenna is used connect the antenna to the binding screw on the rear of the chassis, marked "Ant." Connect the ground to the binding screw marked "Gnd." Do not disconnect the loop antenna when an outside antenna and ground are used.

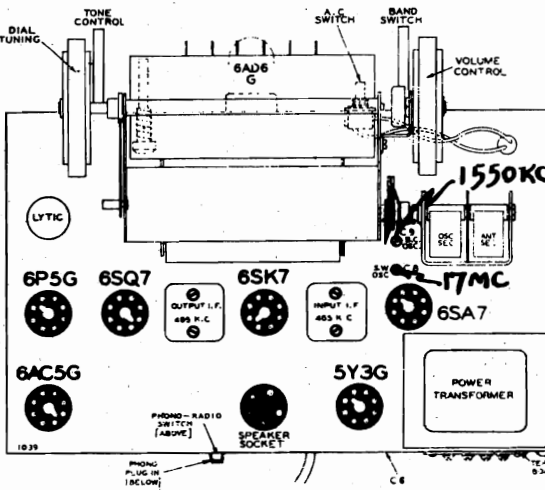


BOTTOM VIEW OF CHASSIS

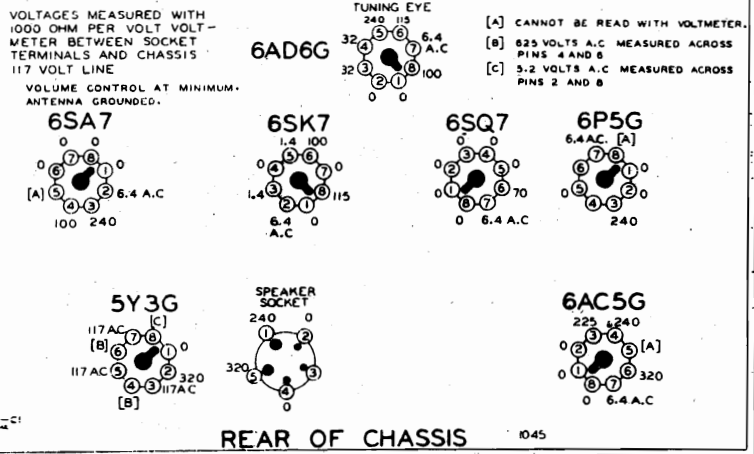

MODEL 93BR-717A, Series A
Serial 786400 up
Schematic, Voltage, Coils
Alignment, Trimmers
Sensitivity, Socket

MONTGOMERY WARD & CO.

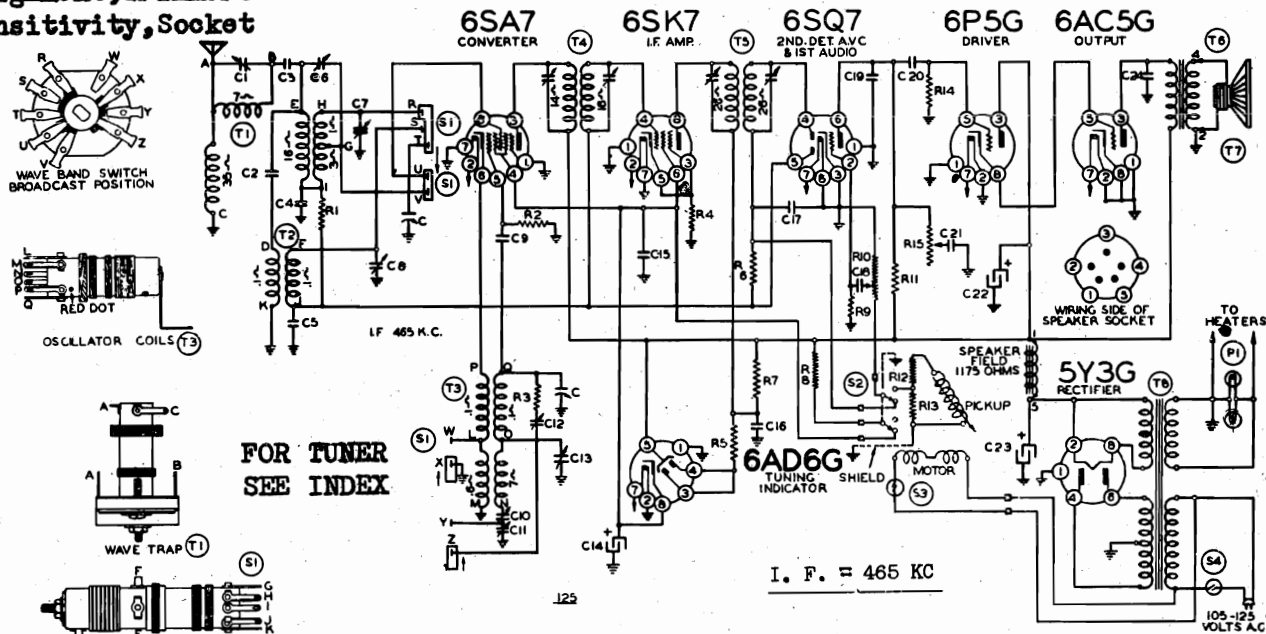

FOR TUNER
SEE INDEX

I. F. = 465 KC

MODEL 93BR-717A SERIES A (SERIAL No. 786400 and UP)

6-39



CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII

Power Consumption 115 Watts Sensitivity (for .5 Watts Output)
 Power Output 2.5 Watts Undistorted Broadcast Band—30 Microvolts Average
 Shortwave Band—50 Microvolts Average


Ref. No.	Part No.	Description
R1	BE13011	250M ohm—20%—1/3 w.
R2	BE13021	20M ohm—20%—1/3 w.
R3	BE130197	20 ohm—10%—1/3 w.
R4	BE130168	100 ohm—10%—1/3 w.
R5	BE130110	1 megohm—10%—1/10 w.
R6	BE1304	3 megohm—20%—1/3 w.
R7	BE13055	12M ohm—20%—2 watt
R8	BE130144	15M ohm—20%—1 watt
R9	BE130225	15 megohm—50—30%—1/3 w.
R10	BE101184	1 megohm—volume control
R11	BE1303	500M ohm—20%—1/3 w.
R12	BE130268	350M ohm—20%—1/3 w.
R13	BE130100	150M ohm—20%—1/3 w.
R14	BE13019	1 megohm—20%—1/3 w.
R15	BE101176	1 megohm—Tone control
C	BE102106B	2 gang variable condenser
C1	BE12467	Wave Trap Trimmer
C2	BE129140	.00016 mica—5%
C3	BE10011	.01 x 400 volt—25%
C4	BE129131	.002775 mica—3%
C5	BE1009	.05 x 200 volt—25%
C6	BE12468	Image Trimmer
C7	BE12475	B. C. Antenna Trimmer
C8	BE12475	S. W. Antenna Trimmer
C9	BE12960	.00015 Mica—20%
C10	BE12487	B. C. Series Pad
C11	BE12487	S. W. Series Pad
C12	BE12476	S. W. Oscillator Trimmer
C13	BE12476	B. C. Oscillator Trimmer
C14	BE11984	5. mfd. x 300 v. lytic.
C15	BE1001	.1 x 400 v. 50—10%
C16	BE1001	.1 x 400 v. 50—10%
C17	BE12939	.00005 Mica—20%
C18	BE10071	.004 x 600 v.—25%
C19	BE1292	.0005 mica—20%
C20	BE10026	.02 x 400 v.—25%
C21	BE10071	.004 x 600 v.—25%
C22	BE11984	15 mfd. x 350 v. lytic
C23	BE11984	10 mfd. x 450 v. lytic
C24	BE10019	.006 x 600 v.—25%
T1	BE108146	Wave Trap
T2	BE111122	Antenna Coil Complete
T3	BE110115	Oscillator Coil Complete
T4	BE108111H	Input I. F. Coil—465 kc.
T5	BE108132B	Output I. F. Coil—465 kc.
T6	BE10590	Output Transformer
T7	BE114161	6" Dynamic Speaker (1175 Ohm Field)

Selectivity - 45 KC Broad at 1000 Times Signal at 1000 KC


- T8 BE104139D Power Transformer
- P1 BE10794 6-8 volt pilot light T44
- S1 BE12579 Band Switch
- S2 BE12570B Phono-Radio Switch
- S3 BE12588 Motor switch
- S4 BE12581 A. C. Switch

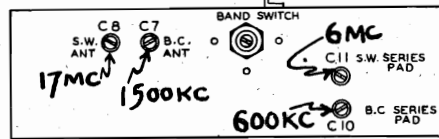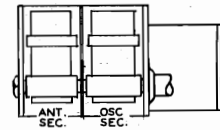

BOTTOM VIEW OF CHASSIS

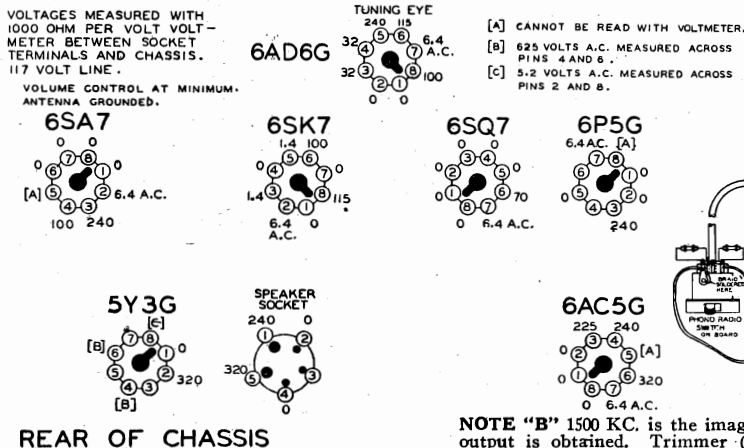

FRONT VIEW

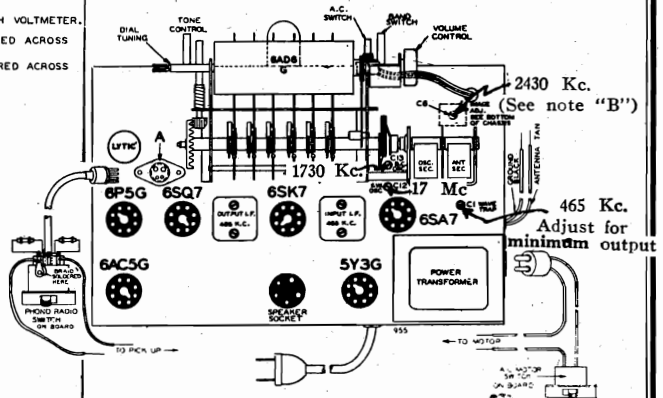


NOTE "B" 1500 KC. is the image frequency of 2430 KC. Adjust Trimmer (C6) until a minimum output is obtained. Trimmer (C6) is mounted on the bottom of the chassis.

MODEL 93BR-719A, Series A
Serial 9L228300 up
Schematic, Voltage, Coils

MONTGOMERY WARD & CO.

Alignment, Trimmers
Sensitivity, Socket

I. F. Amplifier Second Detector, Phase
 First Detector-oscillator • A.V.C. and First Audio. Inverter

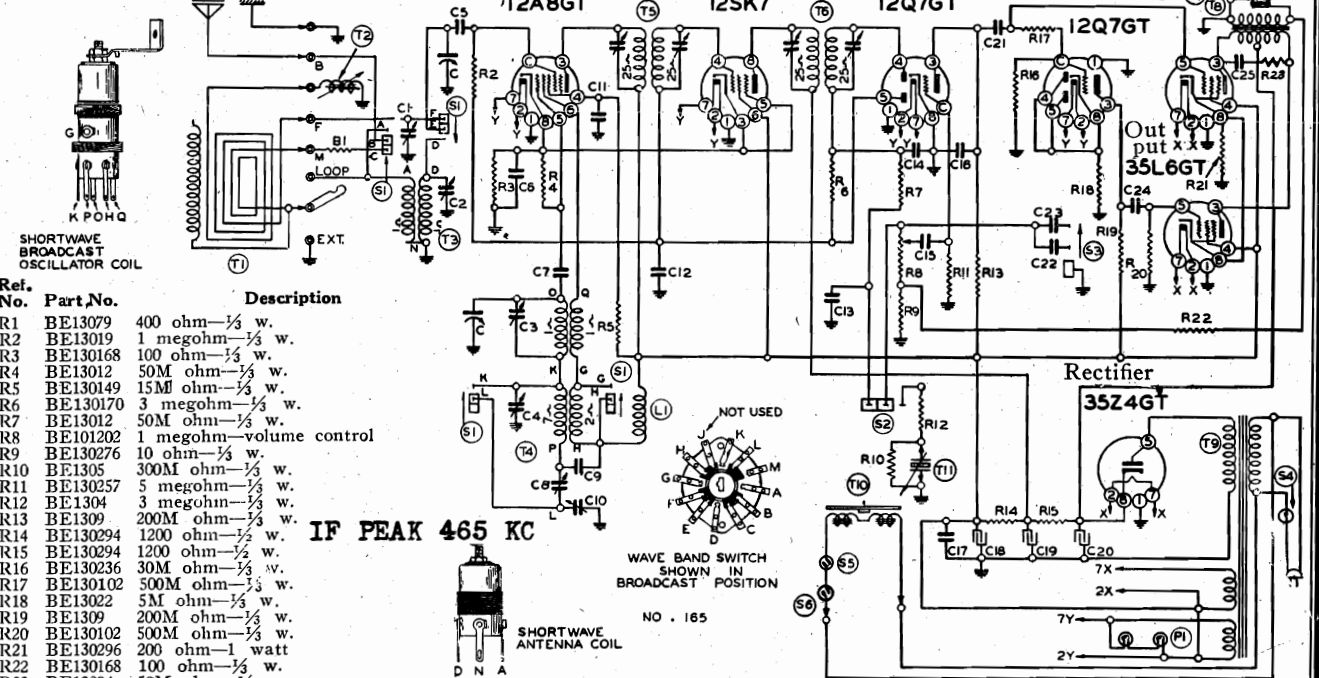


Ref. No.	Part No.	Description
R1	BE13079	400 ohm—1/2 w.
R2	BE13019	1 megohm—1/2 w.
R3	BE130168	100 ohm—1/2 w.
R4	BE13012	50M ohm—1/2 w.
R5	BE130149	15M ohm—1/2 w.
R6	BE130170	3 megohm—1/2 w.
R7	BE13012	50M ohm—1/2 w.
R8	BE101202	1 megohm—volume control
R9	BE130276	10 ohm—1/2 w.
R10	BF1305	300M ohm—1/2 w.
R11	BE130257	5 megohm—1/2 w.
R12	BE1304	3 megohm—1/2 w.
R13	BE1309	200M ohm—1/2 w.
R14	BE130294	1200 ohm—1/2 w.
R15	BE130294	1200 ohm—1/2 w.
R16	BE130236	30M ohm—1/2 w.
R17	BE130102	500M ohm—1/2 w.
R18	BE13022	5M ohm—1/2 w.
R19	BE1309	200M ohm—1/2 w.
R20	BE130102	500M ohm—1/2 w.
R21	BE130296	200 ohm—1 watt
R22	BE130168	100 ohm—1/2 w.
R23	BE13094	50M ohm—1/2 w.
C1	BE102119	2 gang variable condenser
C2	BE124111	B.C. Adj. Trimmer (Antenna)
C3	BE124112	S.W. Adj. Trimmer (Oscillator)
C4	BE124112	B.C. Adj. Trimmer (Oscillator)
C5	BE1292	.0005 mica
C6	BE100104	.5 x 100 v.
C7	BE12939	.00005 mica
C8	BE124113	B.C. Series Pad
C9	BE1009	.05 x 200 v.
C10	BE124113	S.W. Series Pad
C11	BE10020	.1 x 200 v.
C12	BE1009	.05 x 200 v.
C13	BE1295	.0001 mica
C14	BE1295	.0001 mica
C15	BE10025	.002 x 600 v.
C16	BE1292	.0005 mica
C17	BE10020	.1 x 200 v.
C18	BE119101	20 mfd. lytic
C19	BE119101	20 mfd. lytic
C20	BE119101	40 mfd. lytic
C21	BE10026	.02 x 400 v.
C22	BE1298	.0006 mica
C23	BE100112	.001 x 200 v.
C24	BE10026	.02 x 400 v.
C25	BE1001	.1 x 400 v.

IF PEAK 465 KC



MODEL 93BR-719A SERIES A
(SERIAL No. 9L228300 and UP)


CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOL.VIII

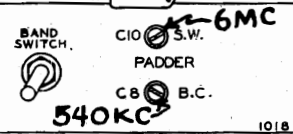


FOR TUNER SEE INDEX

C1 and C2 in same unit
 C8 and C10 in same unit
 C18, C19 and C20 in same unit
 C3 and C4 in same unit


REAR VIEW



ALIGNMENT NOTE
 S.W.-Signal to ANT&GND.
 B.C.-12A8GT Grid.
 LOOP-(C1,T2) with chassis mounted, loop connected, signal to ANT & GND. Jumper connected to EXT.

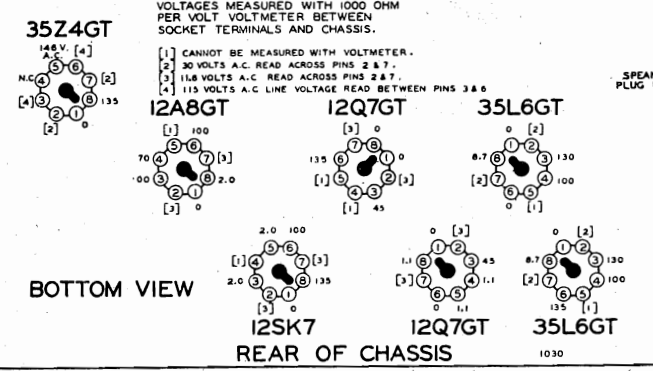


Selectivity - 50 KC Broad at 1000 Times
Signal at 1000 KC
Sensitivity (for .5 Watts Output)
 Broadcast Band—45 Microvolts Average
 Shortwave Band—50 Microvolts Average
Power Consumption
 (Radio Chassis Only) 55 Watts
 (Radio Chassis and Phono Motor) 80 Watts
Power Output
 3 Watts Undistorted

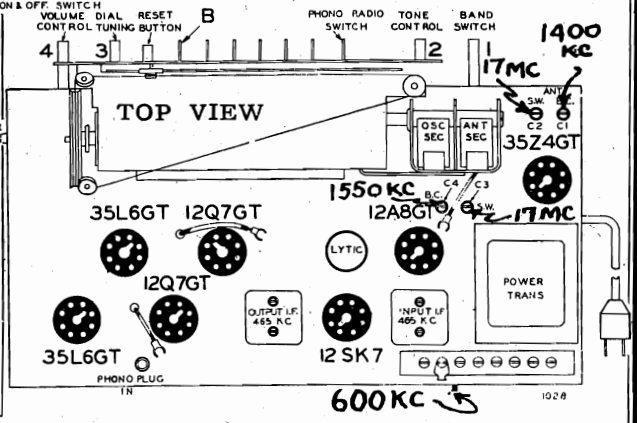

MONTGOMERY WARD & CO.

MODEL 93BR-1201A, Series A
Serial 9F826400 up
Schematic

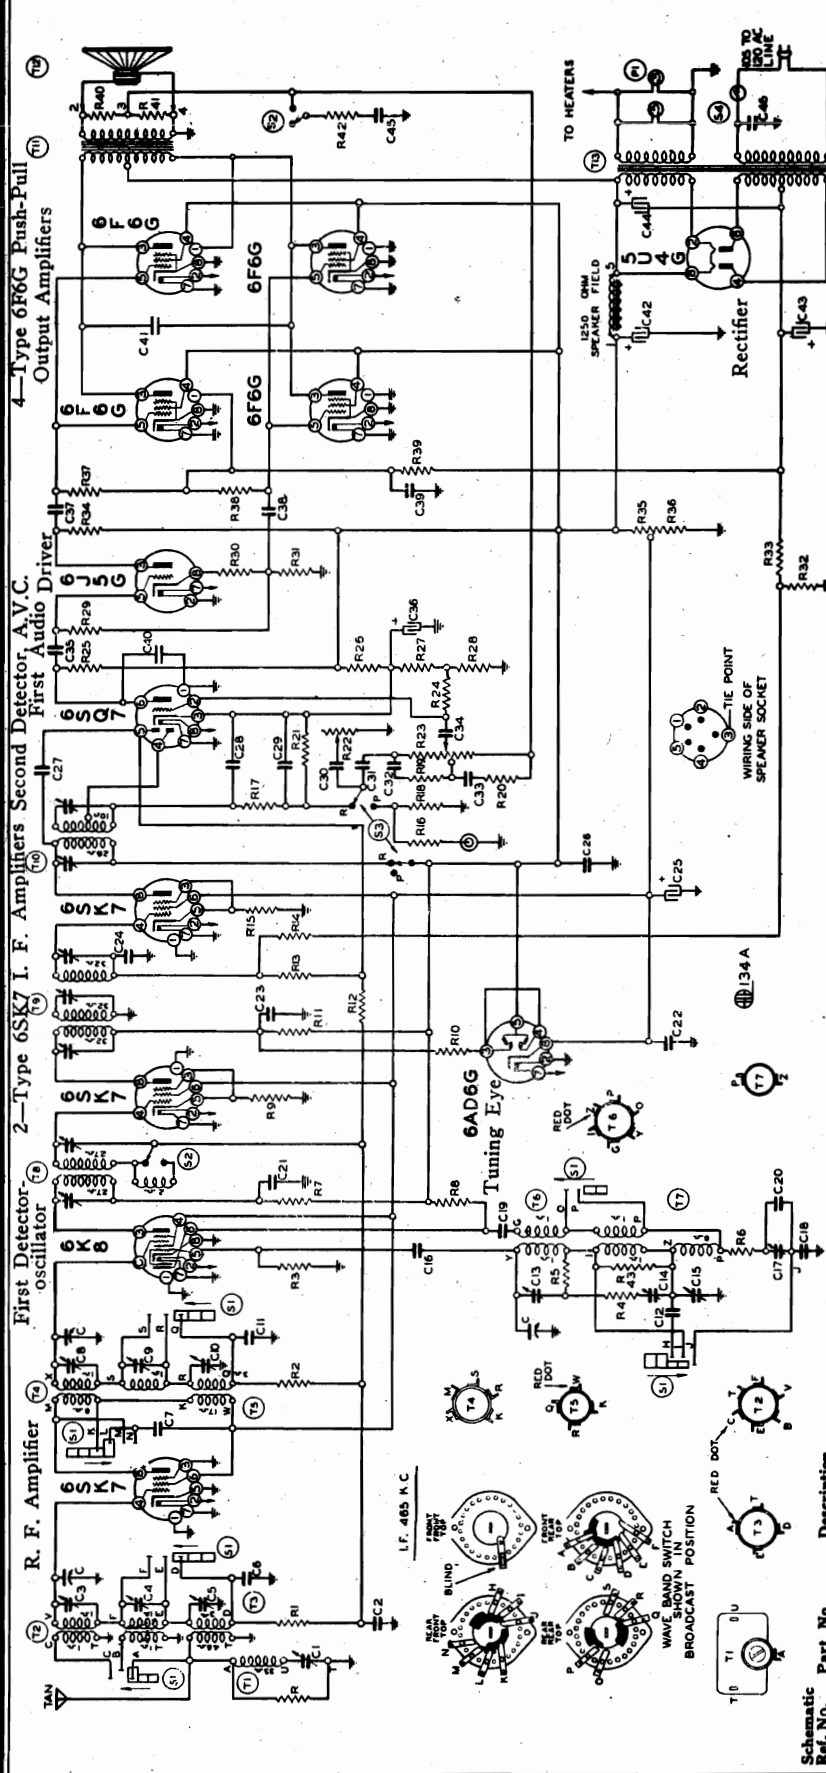

MODEL 93BR-1201A SERIES A
(SERIAL NO. 9F826400 and UP)

- PARTS**
- T1 BE108159 Wave Trap Coil
 - T2 BE111135 S.W.—M.W. Antenna Coils
 - T3 BE111134 B.C.—Antenna Coil
 - T4 BE10953 S.W.—M.W. R.F. Coil
 - T5 BE10952 B.C.—R.F. Coil
 - T6 BE110124 S.W.—M.W. Osc. Coil
 - T7 BE108154 B.C. Oscillator Coil
 - T8 BE108154 Input I.F.—465 kc.
 - T9 BE108155 Interstage I.F.—465 kc.
 - T10 BE108156 Output I.F.—465 kc.
 - T11 BE10593 Output Transformer
 - T12 BE114167 12" Dynamic Speaker
 - T13 BE104166 Power Transformer
 - S1 BE12582 Band Switch
 - S2 Hi-Fi Switch on tone control
 - S3 BE12570 Radio-Phono Switch
 - S4 BE12577 Off-on AC Switch
 - P1 BE10794 2-6-8 v. pilot lights T4

- C26 BE1001 .1 x 400 v.
- C27 BE129145 .0001 ceramicon
- C28 BE1295 .0001 mica
- C29 BE1295 .0001 mica
- C30 BE1009 .006 x 200 v.
- C31 BE1002 .05 x 400 v.
- C32 BE1295 .0001 mica
- C33 BE1001 .01 x 400 v.
- C34 BE1002 .05 x 200 v.
- C35 BE1003 .05 x 400 v.
- C36 BE1989 20 mid.—25 w.v. lyric
- C37 BE1001 .1 x 400 v.
- C38 BE1001 .1 x 400 v.
- C39 BE10048 .25 x 200 v.
- C40 BE1295 .0001 mica
- C41 BE10073 .008 x 1200 v.
- C42 BE10103 30 mid.—450 w.v. lyric
- C43 BE1991 40 mid.—25 w.v. lyric
- C44 BE10310C 30 mid.—450 w.v. lyric
- C45 BE10018 .5 x 100 v.
- C46 BE10061 .02 x 600 v.—Bakelite

- C2 BE1009 .05 x 200 v.
- C3 BE12497 SW Antenna Trimmer
- C4 BE12497 MW Antenna Trimmer
- C5 BE12497 BC Antenna Trimmer
- C6 BE10096 .02 x 200 v.
- C7 BE12972 .004 mica
- C8 BE12498 M.W.—R.F. Trimmer
- C9 BE12498 B.C.—R.F. Trimmer
- C10 BE12498 20 ohm resistor strip—1/2 watt
- C11 BE129144 .00395 mica comp. type
- C12 BE12498 S.W. Oscillator trimmer
- C13 BE12498 M.W. Oscillator trimmer
- C14 BE12498 B.C. Oscillator trimmer
- C15 BE12498 .0005 mica
- C16 BE12939 B.C. Series Pad adjustable
- C17 BE12939 .0025 mica
- C18 BE12929 .0025 mica
- C19 BE10025 .02 x 600 v.
- C20 BE129104 .00045 mica
- C21 BE1001 .1 x 400 v.
- C22 BE1001 .1 x 400 v.
- C23 BE1001 .1 x 400 v.
- C24 BE10026 3 gang variable condenser
- C25 BE1989 10 mid. lyric—350 w. v.

- R24 BE13019 1 megohm—1/2 w.
- R25 BE13011 250M ohm—1/2 w.
- R26 BE13021 50M ohm—1 watt
- R27 BE13020 180 ohm—1/2 w.
- R28 BE13071 4M ohm—1/2 w.
- R29 BE1303 500M ohm—1/2 w.
- R30 BE13018 5M ohm—1/2 w.
- R31 BE13013 100M ohm—1/2 w.
- R32 BE10655 20 ohm resistor strip—1/2 watt
- R33 BE10655 125 ohm-resistor strip—5 watt
- R34 BE13013 100M ohm—1/2 w.
- R35 BE10656 3M ohm resistor strip—7 1/2 w.
- R36 BE10656 300 ohm resistor strip—3/2 w.
- R37 BE13013 100M ohm—1/2 w.
- R38 BE13013 100M ohm—1/2 w.
- R39 BE13013 100M ohm—1/2 w.
- R40 BE13079 400 ohm—1/2 w.
- R41 BE130168 100 ohm—1/2 w.
- R42 BE130174 50 ohm—1/2 w.
- R43 BE13048 15M ohm—1/2 w.
- R32 and R33 in same unit
- R35 and R36 in same unit

- R1 BE13082 10M ohm—1/2 w.
- R2 BE13020 100M ohm—1/2 w.
- R3 BE13011 250M ohm—1/2 w.
- R4 BE13012 50M ohm—1/2 w.
- R5 BE13024 30 ohm—1/2 w.
- R6 BE130174 50 ohm—1/2 w.
- R7 BE13043 2500 ohm—1/2 w.
- R8 BE130196 300M ohm—1 watt
- R9 BE13097 200 ohm—1/2 watt
- R10 BE13019 1 megohm—1/2 w.
- R11 BE130219 20M ohm—1 watt
- R12 BE13019 1 megohm—1/2 w.
- R13 BE1303 500M ohm—1/2 w.
- R14 BE1303 500M ohm—1/2 w.
- R15 BE130294 1200 ohm—1/2 w.
- R16 BE13011 250M ohm—1/2 w.
- R17 BE13066 75M ohm—1/2 w.
- R18 BE13011 250M ohm—1/2 w.
- R19 BE13013 100M ohm—1/2 w.
- R20 BE13076 30M ohm—1/2 w.
- R21 BE130292 125M ohm—1/2 w.
- R22 BE10182 50M ohm tone control
- R23 BE10181 1 megohm volume control

- Schematic Ref. No. Part No. Description**
- C1 BE12499 Wave trap—adj. condenser

MODEL 93BR-1201A
Alignment, Trimmers

MONTGOMERY WARD & CO.

Voltage, Socket Sensitivity

BAND	SIGNAL GENERATOR Frequency Setting	Dummy Antenna	Connection to Radio	Position of Band Switch	Variable Condenser Setting	Trimmers Adjusted (in Order Shown)	Trimmer Function	Adjustment (See Note "A")
I. F.	465 Kc.	.1 MFD.	Grid of 6SK7 (2nd I.F.)	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Output I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Grid of 6SK7 (1st I.F.)	Broadcast	Rotor full open (Plates out of mesh)	Three trimmers on top (See Fig. 1)	Interstage I. F.	Adjust to maximum output
	465 Kc.	.1 MFD.	Grid of 6K8	Broadcast	Rotor full open (Plates out of mesh)	Two trimmers on top (See Fig. 1)	Input I. F.	Adjust to maximum output
SHORT WAVE BAND	21 Mc.	400 ohms	Antenna lead	Short Wave	Set Dial at 21 Mc.	Trimmer (C13) (See Fig. 3)	Short Wave oscillator	(See Note "B") Adjust to maximum output
	21 Mc.	400 ohms	Antenna lead	Short Wave	Dial Set at 21 Mc.	Trimmers (C3 & C8) (See Fig. 3)	Short Wave antenna & R. F.	Adjust to maximum output
MIDDLE WAVE BAND	6 Mc.	400 ohms	Antenna lead	Middle Wave	Set Dial at 6 Mc.	Trimmer (C14) (See Fig. 3)	Middle Wave oscillator	Adjust to maximum output
	6 Mc.	400 ohms	Antenna lead	Middle Wave	Dial Set at 6 Mc.	Trimmers (C4) (C9) (See Fig. 3)	Middle Wave antenna and R. F.	Adjust to maximum output
	2.3 Mc.	400 ohms	Antenna lead	Middle Wave	Set Dial at 2.3 Mc.	Trimmer (C12) (See Bottom of Chassis)	Middle Wave oscillator series pad	Adjust to maximum rock dial. (See note "C")
BROADCAST BAND	1730 Kc.	200 mmi.	Antenna lead	Broadcast	Rotor full open (Plates out of mesh)	Trimmer (C15) (See Fig. 3)	Broadcast oscillator	Adjust to maximum output
	1500 Kc.	200 mmi.	Antenna lead	Broadcast	Set Dial at 1500 Kc.	Trimmers (C5) (C10) (See Fig. 3)	Broadcast antenna and R. F.	Adjust to maximum output
	600 Kc.	200 mmi.	Antenna lead	Broadcast	Set Dial at 600 Kc.	Trimmer (C17) (See Fig. 3)	Broadcast oscillator series pad	Adjust to maximum rock dial. (See note "D")
	465 Kc.	200 mmi.	Antenna lead	Broadcast	Set Dial at 600 Kc.	Trimmer (C1) (See Fig. 3)	I. F. Wave Trap	Adjust for minimum output (See Note "E")

NOTE "A" I.F. Alignment as given is for use with output meter. For oscilloscope alignment; connect oscilloscope between ground and high side of 125M ohm diode load resistor on output I.F. Make same adjustments as above except readjust input I.F. trimmers in broad position for uniform expansion.


NOTE "B" Make certain that the 21MC signal and not the image has been tuned in by noting that the image falls near 20MC. on the dial scale.

NOTE "C" The middle wave oscillator series padder condenser is mounted on the bottom of the chassis at the rear of the bandswitch. When adjusting this trimmer turn the dial back and forth slightly (rock) and adjust until the peak of greatest intensity is obtained.

NOTE "D" Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.

NOTE "E" After adjusting wavetrap trimmer (C1), go over 1730 Kc, 1500 Kc and 600 Kc adjustments again.

Power Consumption - - - - 165 Watts
Power Output - - 21 Watts Undistorted
Sensitivity (for .5 Watts Output) - -
Broadcast Band—4 Microvolts Average
Middle Band—6 Microvolts Average
Shortwave Band—10 Microvolts Average

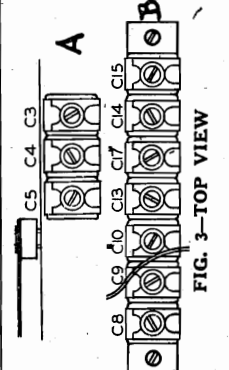

FOR TUNER SEE INDEX


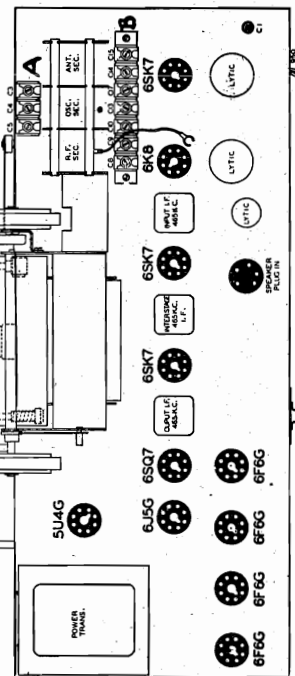


FIG. 1—TOP VIEW

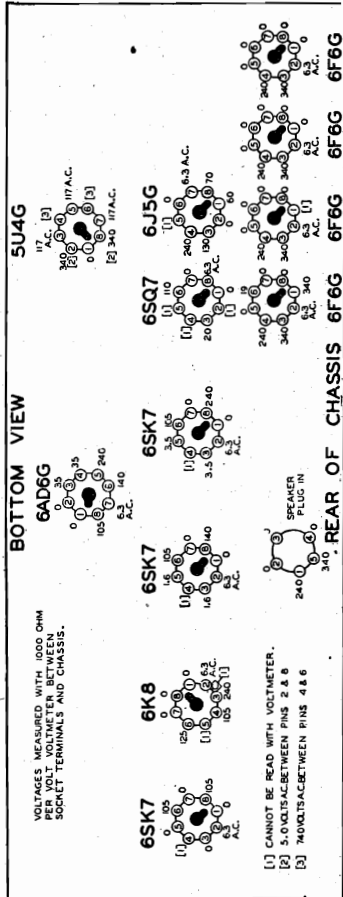

REAR OF CHASSIS

MONTGOMERY WARD & CO.

MODELS 93BR-391A, 93BR-392A, 93BR-393A, 93BR-462A, 93BR-561A, 93BR-658A, 93BR-659A, 93BR-714A, B, 93BR-715B, 93BR-717A, 93BR-719A, 93BR-720A, 93BR-1201A
Tuner Data

Procedure for Setting the Automatic Push Buttons

IMPORTANT—Read carefully before setting the automatic push buttons:

There are six push buttons by means of which six stations may be selected (See "A," Fig. 2). Make a list of local stations or stations you tune in regularly; any number up to and including six.

On the front of each automatic push button an opening is provided for inserting the call letter tabs. (See "p," Fig. 2). Insert the call letter tabs in the rectangular openings of each of the automatic push buttons. One of the small celluloid tabs supplied should be inserted into place over each of the station call letter tabs.

NOW, PROCEED AS FOLLOWS:

Unlock the Tuner Mechanism. (NOTE:—The automatic tuner mechanism is locked tight when radio is shipped from the factory.)

1. Remove the snap-in button from the dial escutcheon plate (see Fig. 2). If the snap-in button will not come out easily, using your fingers, pry it off with a screwdriver or a knife, being careful not to mar the finish on the escutcheon plate.

2. Unlock the tuner mechanism by inserting a screwdriver through the hole in the panel. Press in and loosen the locking screw by turning it to the left as far as it will turn without forcing.

You will note that as the locking screw is turned, it will turn easily until the dial reaches a certain point. At this point the tuner mechanism is actually start unloading the tuner mechanism. Beyond this point, the locking screw will turn quite easily again until the tuner mechanism is completely unlocked. At this point do not force the locking screw any further. The tuner mechanism is now unlocked.

1. Make a list of six stations you tune in regularly. There are six push buttons on the front of the radio by means of which six stations may be tuned automatically (See "p," Fig. 3).

2. Punch out the call letters of the stations you have selected from the set of station call letter tabs supplied.

On the front of each automatic tuner button an opening is provided for inserting the call letter tabs, (see "A," Fig. 3). Insert the call letter tabs in the rectangular openings in each of the automatic tuner pushbuttons. One of the small celluloid tabs supplied should be snapped into place over each of the station call letter tabs.

3. Stations may be set up in any sequence desired.

NOW, PROCEED AS FOLLOWS:

1. Pull the "Reset" button all the way out (see control No. 6, Fig. 3), and rotate the button to the left (counter-clockwise) until it cannot be turned any further.

You will note that as the button is rotated it will turn easily until the pointer reaches the end of the dial scale and then a slight amount of force will be required to actually start unloading the tuner mechanism. Beyond this point, the button will turn quite easily again until the tuner mechanism is completely unlocked. At this point do not force the button any further. The tuner mechanism is now unlocked.

(NOTE:—Automatic tuner mechanism is locked tight when radio is shipped from the factory.)

2. Push in all the way any one of the pushbuttons and at the same time push the dial tuning knob. The tuner knob should be pushed hard enough to make them stay latched in.

You may find it necessary to rotate the dial tuning knob slightly when pushing it in to make certain that the gears mesh properly.

3. Both the pushbutton and the Dial Tuning Knob are now

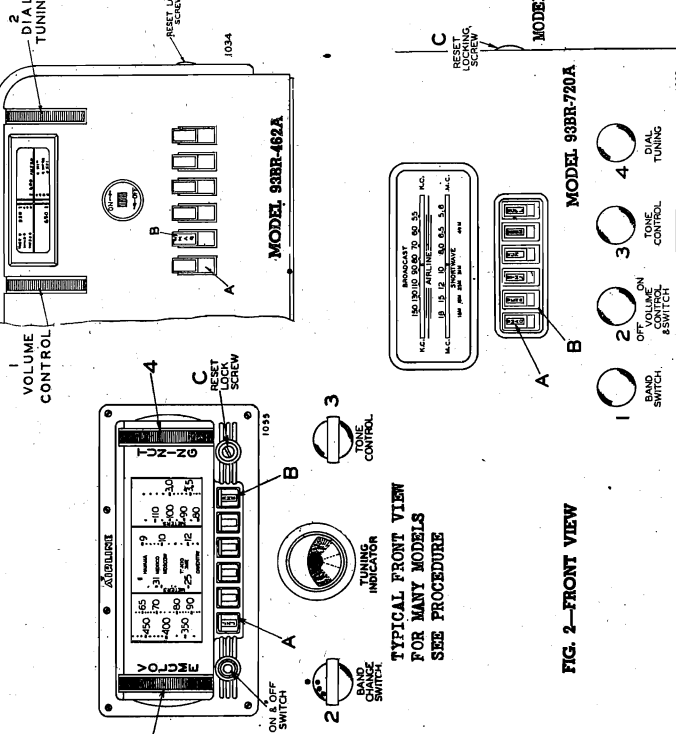


FIG. 2—FRONT VIEW

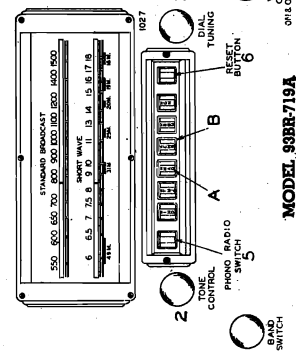


FIG. 3.

SETTING PUSH BUTTONS

1. Press in all the way any one of the automatic tuner push-buttons. Holding it in firmly, tune in by means of the Dial Tuning Knob. Control the dial tuning knob by means of the station call letter tab on this push button. Move the Dial Tuning Knob very slowly up and down (while still holding the automatic tuner push button in firmly), noting the width of the shadow on the screen of the cathode-ray tuning eye. Minimum width on the tuning eye indicates the ideal tuning position (resonance). The station will then be clearest and accurately tuned in.
2. Press in another tuner push button. Holding it in firmly, carefully tune in the station indicated on the call letter tab on this push button.
3. Follow this procedure until you have selected all of your favorite stations.

(NOTE:—If the dial mechanism works hard or has a tendency to slip when setting up a station for one of the push buttons, it is due to the tuner mechanism not being unlocked all the way. Loosen the reset locking screw. The Dial Tuning Control should turn the dial drum freely with a push button pushed in.)

LOCKING THE TUNER MECHANISM

1. To lock the tuner mechanism insert a screwdriver through the hole in the panel. Press in and loosen the reset locking screw to the right until it cannot be turned any further without forcing it.
 2. This will lock the tuner mechanism, and all the stations tuned in are now locked in place for automatic tuning.
- Press in any one of the push buttons and—YOUR FAVORITE STATION IS SELECTED.

MODEL 93BR-719A Procedure for Setting the Automatic Pushbuttons

latched in. Do not hold the pushbutton in by hand while tuning in a station. Tune in by means of the dial tuning knob the station indicated on the station call letter tab on the push-button which is latched in. Turn the dial tuning knob very slowly back and forth until the station is clearest. The station will then be accurately tuned in.

4. Push in all the way another pushbutton, at the same time push the dial tuning knob in so that both the pushbutton and the dial tuning knob are latched in together. Tune in the station indicated on the call letter tab on this pushbutton. Follow this procedure until you have tuned in all of your favorite stations.

6. Pull the "Reset" button all the way out and rotate the button to the right (clockwise) until it cannot be turned any further. This will lock the automatic tuner mechanism and the stations you have set up for automatic tuning will be locked in place.

CHANGING STATIONS:

If you should desire to change any station you selected to another, pull the "Reset" button all the way out and rotate the button to the left (counter-clockwise) and unlock the tuner mechanism. Select the new station as explained.

(NOTE:—If the dial mechanism works hard when setting up a new station for one of the automatic tuner pushbuttons, it is due to the tuner mechanism not being unlocked all the way. Loosen the reset button on all the way and rotate the button to the left (counter-clockwise) until it can turn no further. The dial mechanism should work freely with a tuner push-button latched-in.

After you have selected the new station, pull the "Reset" button all the way out and rotate the button to the right (clockwise) to lock the tuner mechanism. Be sure the button is turned until it will turn no further.

The automatic tuner buttons are now set up for quick tuning.


MODEL 93WG-510
 Drive Cord Data
 MODELS 93WG1103, 93WG1104
 Alignment, Trimmers

MONTGOMERY WARD & CO

MODELS 04WG-725, 93WG382,
 93WG754, 93WG800, 93WG801
 93WG1000
 Tuner Data

Procedure for Setting the Station Buttons

FOR MODELS 93WG-382, 04WG-725, 93WG-800, 801, 806 (LOOP MODELS)
 93WG-801, 802, 806, 93WG-1000, 1001 and 93WG-1000, 1001 (LOOP MODELS)

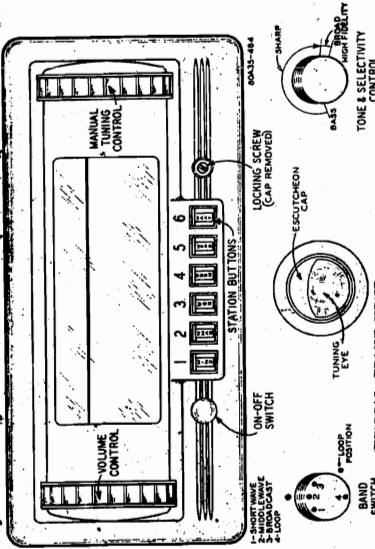


Selecting the Stations to Be Set

There are 6 buttons on the automatic tuning dial by means of which 6 stations may be set for quick tuning. Make a list of your favorite stations, those which you tune in regularly. There may be any number up to and including 6 in this list. It is better to list the station with the lowest kilocycle number first, the station with the next higher kilocycle number next, and so on. Any button may be used for any station you can receive, although it will be more convenient to set the stations so that the kilocycle numbers increase from left to right.

Setting a Station Button

Turn the manual tuning control so that the dial moves toward 1700 KC until the stop is reached. At the right side of the escutcheon (from the front) will be seen a cap which covers a hole in the escutcheon.—See illustration. Pull off this cap. At the end of the tube in back of the hole in the escutcheon is the locking screw. Using a small handed screwdriver, unlock the mechanism by turning this screw in a counter-clockwise direction several turns. TO SET STATIONS ACCURATELY DO NOT JAR THE RADIO OR BUTTONS WHILE THE MECHANISM IS UNLOCKED. Select the first station from the list you have prepared, and carefully tune in this station by means of the manual tuning control using the tuning eye as a guide.

MODEL 93WG-510

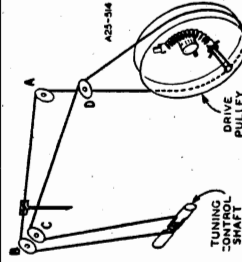

Dial Pointer Attachment—Tune in a station of known frequency. Set the pointer at this frequency on the dial scale and secure pointer to cord and place over pulley C. —See illustration.

Caution


The metal chassis is connected to one side of the line through a .25 mfd. condenser. Both AC and DC power lines are generally grounded on one side. If the side of the line not connected to the metal chassis through the condenser is grounded, the metal chassis will be in contact with an external ground. This contact will increase in hum. Therefore, in any service work on the chassis, keep it on an other insulated surface to avoid contact with ground. The person working on the set should avoid getting in contact with any ground.

MODELS 93WG-1103 and 93WG-1104 ALIGNMENT PROCEDURE

Volume Control—Maximum All Adjustments. The following equipment is required for aligning: An All Wave Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed. Output, Indicating Meter—Non-Metallic Screwdriver. Dummy Antennas—1 mf., 200 mmf., and 400 ohms.

SIGNAL GENERATOR FREQUENCY	DUMMY ANTENNA CONNECTION AT RADIO	BAND SWITCH SETTING	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
I. F.	45 KC	Grid of 1st Det.	.1 mf.	Turn Rotor to Full Open
RANGE D	18,300 KC	Antenna Lead	400 Ohm	Turn Rotor to Full Open
	15,000 KC	Antenna Lead	400 Ohm	Turn Rotor to Max. Output
RANGE C	5400 KC	Antenna Lead	400 Ohm	Turn Rotor to Full Open
	8000 KC	Antenna Lead	400 Ohm	Turn Rotor to Max. Output
RANGE B	1600 KC	Antenna Lead	200 mmf.	Turn Rotor to Full Open
	1400 KC	Antenna Lead	200 mmf.	Turn Rotor to Max. Output
	600 KC	Antenna Lead	200 mmf.	Turn Rotor to Max. Output

At 5000 use 712 KC, or 4088 KC on the dial. If the pointer is to be increased the input signal to be the image.

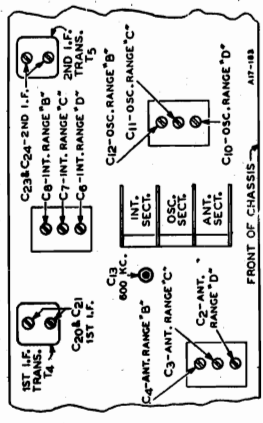

NOTE A—When the rotor is turned back and forth and the trimmer until the peak of greatest intensity is obtained. NOTE B—If the pointer is not at 1400 KC on the dial, loosen the 2 clamps which hold the pointer assembly on the cord, move the pointer to the 1400 KC mark, and tighten the clamps. CAUTION—When aligning the short wave bands, be sure NOT to adjust at the image frequency. This can be checked as follows: Set the dial to 5000 KC. The signal will then be heard at 5000 KC on the dial of the radio. The image signal, which is much weaker, will be heard at 5000 KC on the dial of the radio.

Voltagess at Sockets

The voltages at sockets are shown on the schematic circuit diagram. Unless otherwise specified, the voltages are read under the following conditions: Antenna Shorted to Ground. Readings taken with 1000 ohm-per-volt meter. Plate and screen voltages are read on 500 volt scale.




Drive Cord Replacement

Secure other end of spring to hook on pulley. Thread looped end of cord, starting from inside of drive pulley, through hole in rim of drive pulley. Double new drive cord and knot both ends to same loop on tension spring. There should be a distance of 13 inches between knot and looped end of cord.

MONTGOMERY WARD & CO.


MODEL 93WG-382
Schematic, Voltage
Sensitivity, Coils
Socket

- Power Consumption** 70 Watts (At 117 volts 60 cycles) **Sensitivity**—External Antenna—(For 0.5 Watt output)
 B Range..... 1.0 Microvolt Average
 C Range..... 4.0 Watts Undistorted
 D Range..... 5.0 Watts Maximum
Power Output 4.0 Watts Undistorted
 5.0 Watts Maximum
Selectivity - 30 KC Broad at 1000 times Signal **Tuning Frequency Range**
 B Range..... 528 to 1730 KC
 C Range..... 2000 to 7000 KC
 D Range..... 7000 to 25000 KC
Intermediate Frequency 456 KC
Speaker 8" Electro-Dynamic

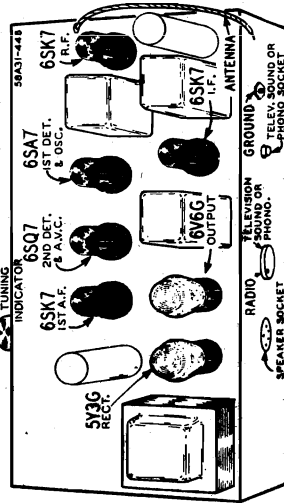

COIL TERMINALS

EXTERNAL CONNECTION

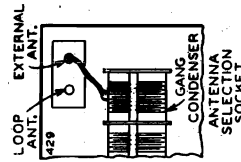


ANTENNA SELECTION SOCKET
 At the right front corner (from back of cabinet) of the chassis base is a 2 hole pin tip socket.—See illustration. If it is desired to operate the radio using the loop antenna, the pin tip should be inserted in the hole farthest from the side of the chassis. If it is desired to operate the radio using an external antenna, insert the pin tip in the hole nearest the side of the chassis.

Voltages at Sockets

The voltages at sockets are shown on the schematic circuit diagram. Unless otherwise specified, the voltage indicated is between the socket terminal and ground.

These voltages are read under the following conditions:

- Line Voltage—117.
- Volume Control—Maximum.
- Antenna Shorted to Ground.
- Readings taken with 1000 ohm-per-volt meter. Plate and screen voltages are read on 500 volt scale.

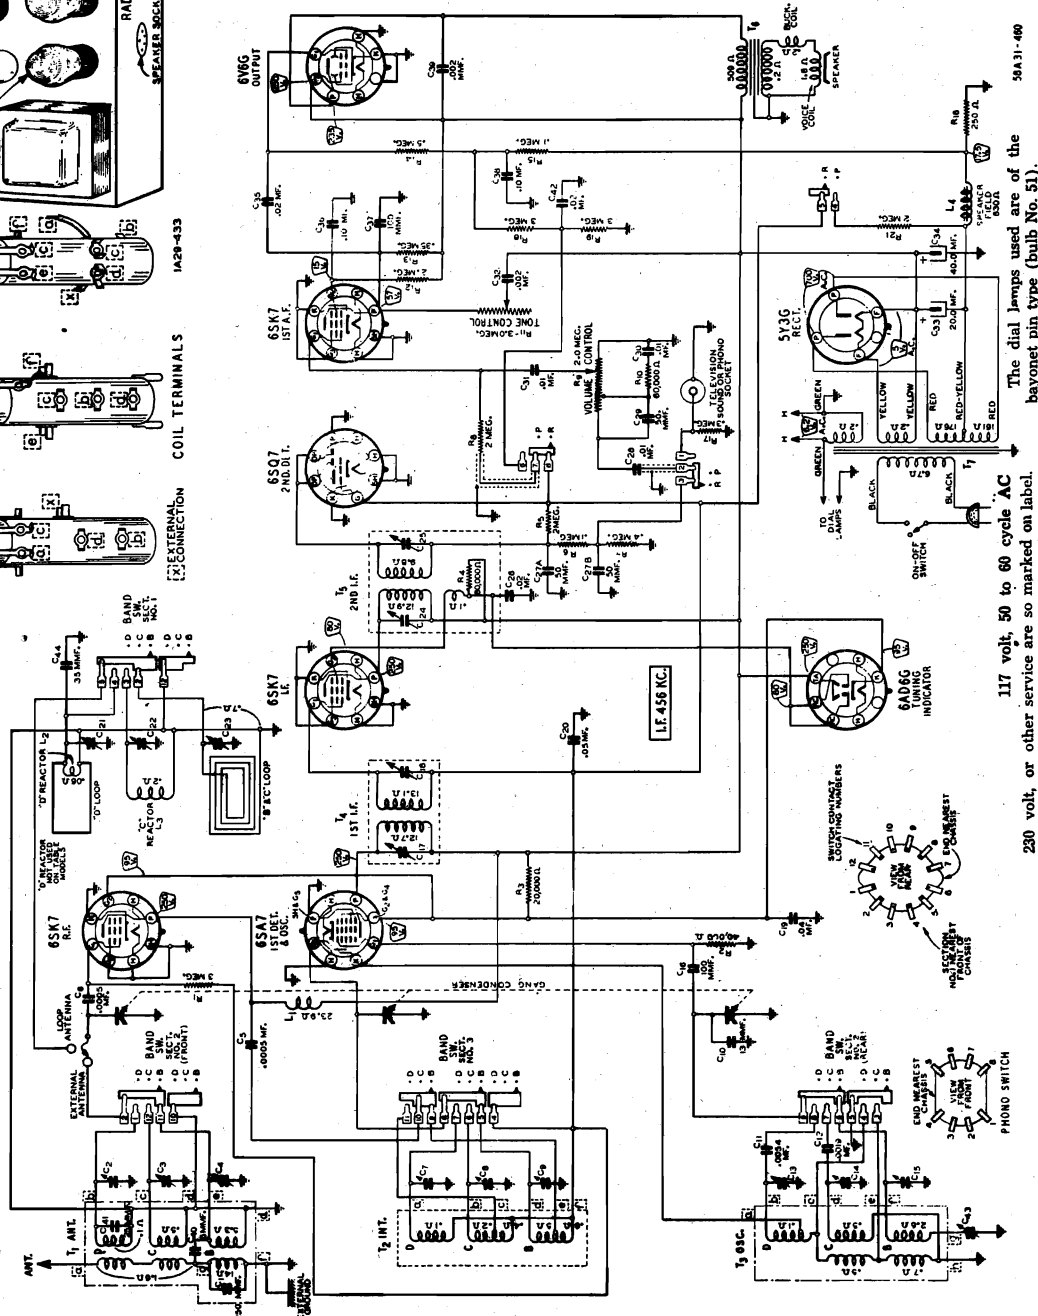


The dial lamps used are of the bayonet pin type (bulb No. 51).


117 volt, 50 to 60 cycle AC
 230 volt, or other service are so marked on label.

MODEL 04WG-725
MODEL 93WG-382
MODELS 93WG754, 93WG755
Alignment, Trimmers


MONTGOMERY WARD & CO.

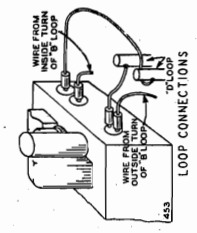

hole of Antenna Selection Socket—See illustration on page one.
NOTE E—Control knobs only—Turn knob of loop until output is maximum.
CAUTION—When aligning the short wave bands, be sure NOT to adjust at the image frequency. This can be checked as follows: Turn the dial drum until the signal is heard at 5000 KC. The signal will then be heard at 5000 KC on the dial of the radio. The image signal, which is much weaker, will be heard at 15,000 less 912 KC, or 14,088 KC on the dial. It may be necessary to increase the input signal to hear the image.

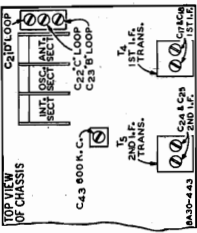


une control drum. Hold the tuning control drum on the dial drum the necessary amount in the required direction. Retighten the set screw.
NOTE C—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.
NOTE D—Re-install set in cabinet. Connect a loop approximately one foot in diameter across the antenna and ground posts of the loop in cabinet. Insert pin in loop antenna loop in cabinet, between 3 and 10 feet from

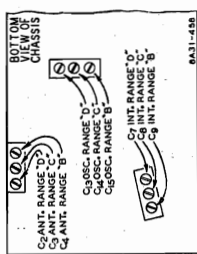


Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.
NOTE A—For all adjustments, with the exception of the 3 loop range adjustments, the pin tip should be in the antenna antenna selection socket—See illustration on page one.
NOTE B—if the indicator is set at 1500 KC, it will be necessary to recalibrate. Loosen the set screw on the dial hub near the vol-


Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.
After each range is completed, repeat the procedure as a final check.
NOTE A—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.
CALIBRATION—Chassis should be in cabinet. If it is necessary to recalibrate the dial, loosen the set screw on the dial hub near the volume control drum. Tune in a signal from a radio station and at the same time adjust drum stationary and at the same time turn the dial drum the necessary amount in the required direction. If the radio detunes at the dial drum is turned, loosen this set screw on the dial hub and retighten it after recalibrating the set screw.

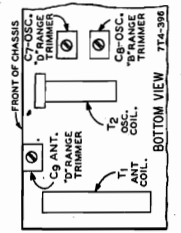

15,000 KC on the dial of the radio. The image signal, which is much weaker, will be heard at 15,000 less 912 KC, or 14,088 KC on the dial. It may be necessary to increase the input signal to hear the image.

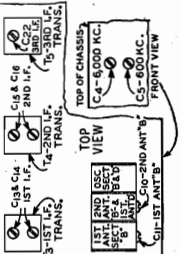

CAUTION—When aligning the short wave band, be sure NOT to adjust at the image frequency. This can be checked as follows: Let us say the signal generator is set for 15,000 KC. The signal will then be heard at 15,000 KC on the dial of the radio. The image signal, which is much weaker, will be heard at 15,000 less 912 KC, or 14,088 KC on the dial. It may be necessary to increase the input signal to hear the image.

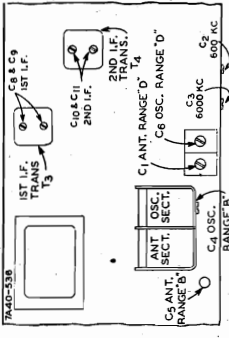

NOTE A—if the pointer is set at 1400 KC on the dial, remove pointer from drive and turn in a 1400 KC signal. Set pointer at the 1400 KC mark on the dial scale. Attach pointer to drive cord.
After each range is completed, repeat the procedure as a final check.

Volume Control—Maximum All Adjustments. Connect Radio Chassis to Ground Post of Signal Generator with a Short Heavy Lead.
Allow Chassis and Signal Generator to "Heat Up" for several minutes.

SIGNAL GENERATOR MODEL 93WG-382	CONDITION AT RADIO	DUMMY ANTENNA	BAND SETTINGS	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
465 KC	Grid of 1st Det.	.1 mf.	B Range See Note A	Turn Rotor to Full Open	1st L.F. (C17) & (C18) 2nd L.F. (C24) & (C25)
1730 KC	Antenna Lead	200 mhf.	B Range	Turn Rotor to Full Open	Oscillator Range B (C15)
1500 KC	Antenna Lead	200 mhf.	B Range	Turn Rotor to Max. Output Set Indicator to 1500 KC— See Note B	Ant. Range B (C4) Int. Range B (C9)
600 KC	Antenna Lead	200 mhf.	B Range	Turn Rotor to Max. Output	600 KC (C43) Rock Rotor—See Note C
7000 KC	Antenna Lead	400 Ohm	C Range	Turn Rotor to Full Open	Oscillator Range C (C14) Ant. Range C (C3)
6000 KC	Antenna Lead	400 Ohm	C Range	Turn Rotor to Max. Output	Ant. Range C (C3)
22,000 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Full Open	Oscillator Range D (C13) Int. Range D (C7) Rock Rotor—See Note C
21,000 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Max. Output	Oscillator Range D (C13) Int. Range D (C7) Rock Rotor—See Note C
1500 KC	See Note D	None—See Note D	B Range	Turn Rotor to Max. Output	Loop Trimmer (C23) See Note E
6000 KC	See Note D	None—See Note D	C Range	Turn Rotor to Max. Output	Loop Trimmer (C22) See Note E
21,000 KC	See Note D	None—See Note D	D Range	Turn Rotor to Max. Output	Loop Trimmer (C21) Rock Rotor—See Note C


SIGNAL GENERATOR MODEL 93WG-754	CONDITION AT RADIO	DUMMY ANTENNA	BAND SETTINGS	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
465 KC	Grid of 1st Det.	.1 mf.	B Range	Turn Rotor to Full Open	1st L.F. (C13) & (C14) 2nd L.F. (C15) & (C16) 3rd L.F. (C22)
1730 KC	Antenna Lead	200 mhf.	B Range	Turn Rotor to Full Open	Oscillator Range B (C8)
1500 KC	Antenna Lead	200 mhf.	B Range	Turn Rotor to Max. Output	1st Ant. Range B (C11) 2nd Ant. Range B (C10)
600 KC	Antenna Lead	200 mhf.	B Range	Turn Rotor to Max. Output	600 KC (C5) Rock Rotor—See Note A
18,300 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Full Open	Oscillator Range D (C7)
16,000 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Max. Output	Ant. Range D (C9) Rock Rotor—See Note A
6000 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Max. Output	6000 KC (C4) Rock Rotor—See Note A

SIGNAL GENERATOR MODEL 04WG-725	CONDITION AT RADIO	DUMMY ANTENNA	BAND SETTINGS	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
465 KC	Grid of 1st Det.	.1 mf.	B Range	Turn Rotor to Full Open	1st L.F. (C8) & (C9) 2nd L.F. (C10) & (C11)
1500 KC	Antenna Lead	200 mhf.	B Range	Turn Rotor to Full Open	Oscillator Range B (C4)
1400 KC	Antenna Lead	200 mhf.	B Range	Turn Rotor to Max. Output Set Indicator to 1400 KC— See Note A	Ant. Range B (C5)
600 KC	Antenna Lead	200 mhf.	B Range	Turn Rotor to Max. Output	600 KC (C2) Rock Rotor—See Note B
18,300 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Full Open	Oscillator Range D (C6)
17,000 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Max. Output	Ant. Range D (C1) Rock Rotor—See Note B
6000 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Max. Output	6000 KC (C1) Rock Rotor—See Note B
1400 KC	None— See Note C	None— See Note C	B Range	Turn Rotor to Max. Output	Ant. Range B (C5) See Note C




Trimmers, Socket Sensitivity Alignment

MONTGOMERY WARD & CO.

MODEL 95WG-510 Schematic, Voltage

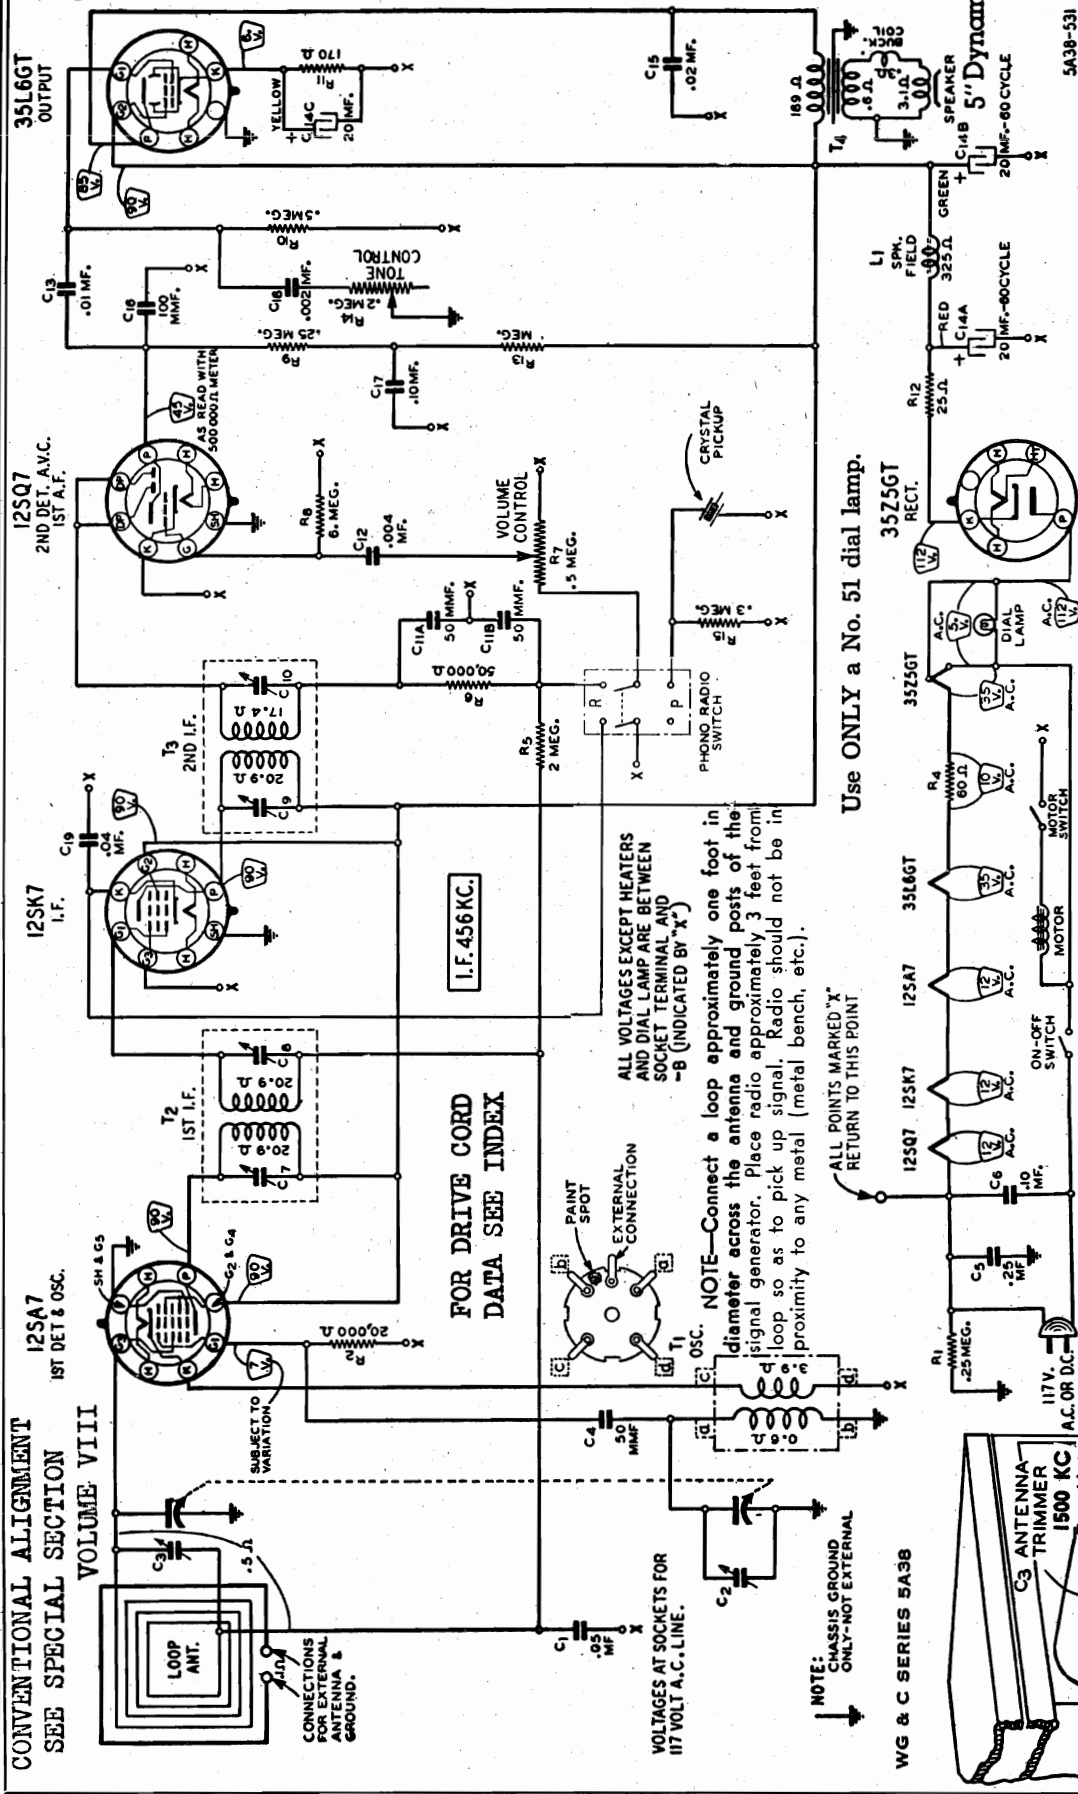

Power - 28 Watts (At 117 volts AC Supply)
 Consumption 43 Watts (Phonograph Operating)
 Power Output - .8 Watt Undistorted.
 Selectivity 50 KC Broad at 1000 times Signal
 Tuning Frequency Range 528 to 1730 KC
 Sensitivity 50 Microvolts per Meter Average
 (For .05 Watt Output)

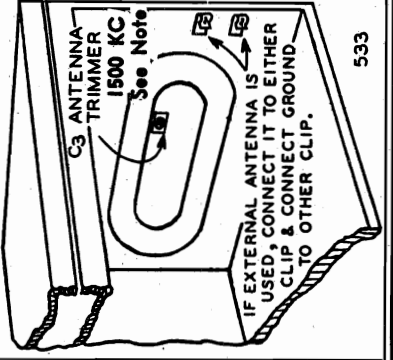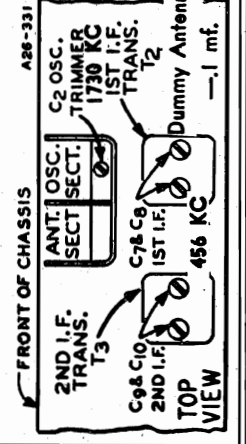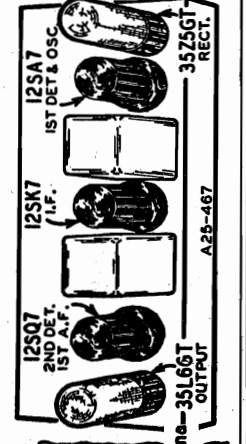

CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION
 VOLUME VIII

FOR DRIVE CORD
 DATA SEE INDEX

I.F. 456 KC.

ALL VOLTAGES EXCEPT HEATERS
 AND DIAL LAMP ARE BETWEEN
 SOCKET TERMINAL AND
 GROUND (INDICATED BY 'X')

NOTE—Connect a loop approximately one foot in
 diameter across the antenna and ground posts of the
 signal generator. Place radio approximately 3 feet from
 loop so as to pick up signal. Radio should not be in
 proximity to any metal (metal bench, etc.).



Use ONLY a No. 51 dial lamp.

WG & C SERIES 5A38


MODEL 93WG-565A
Schematic, Voltage

MONTGOMERY WARD & CO.

Socket, Trimmers
Alignment, Sensitivity

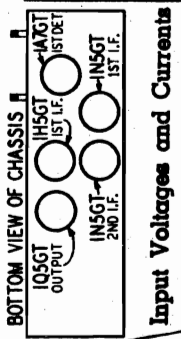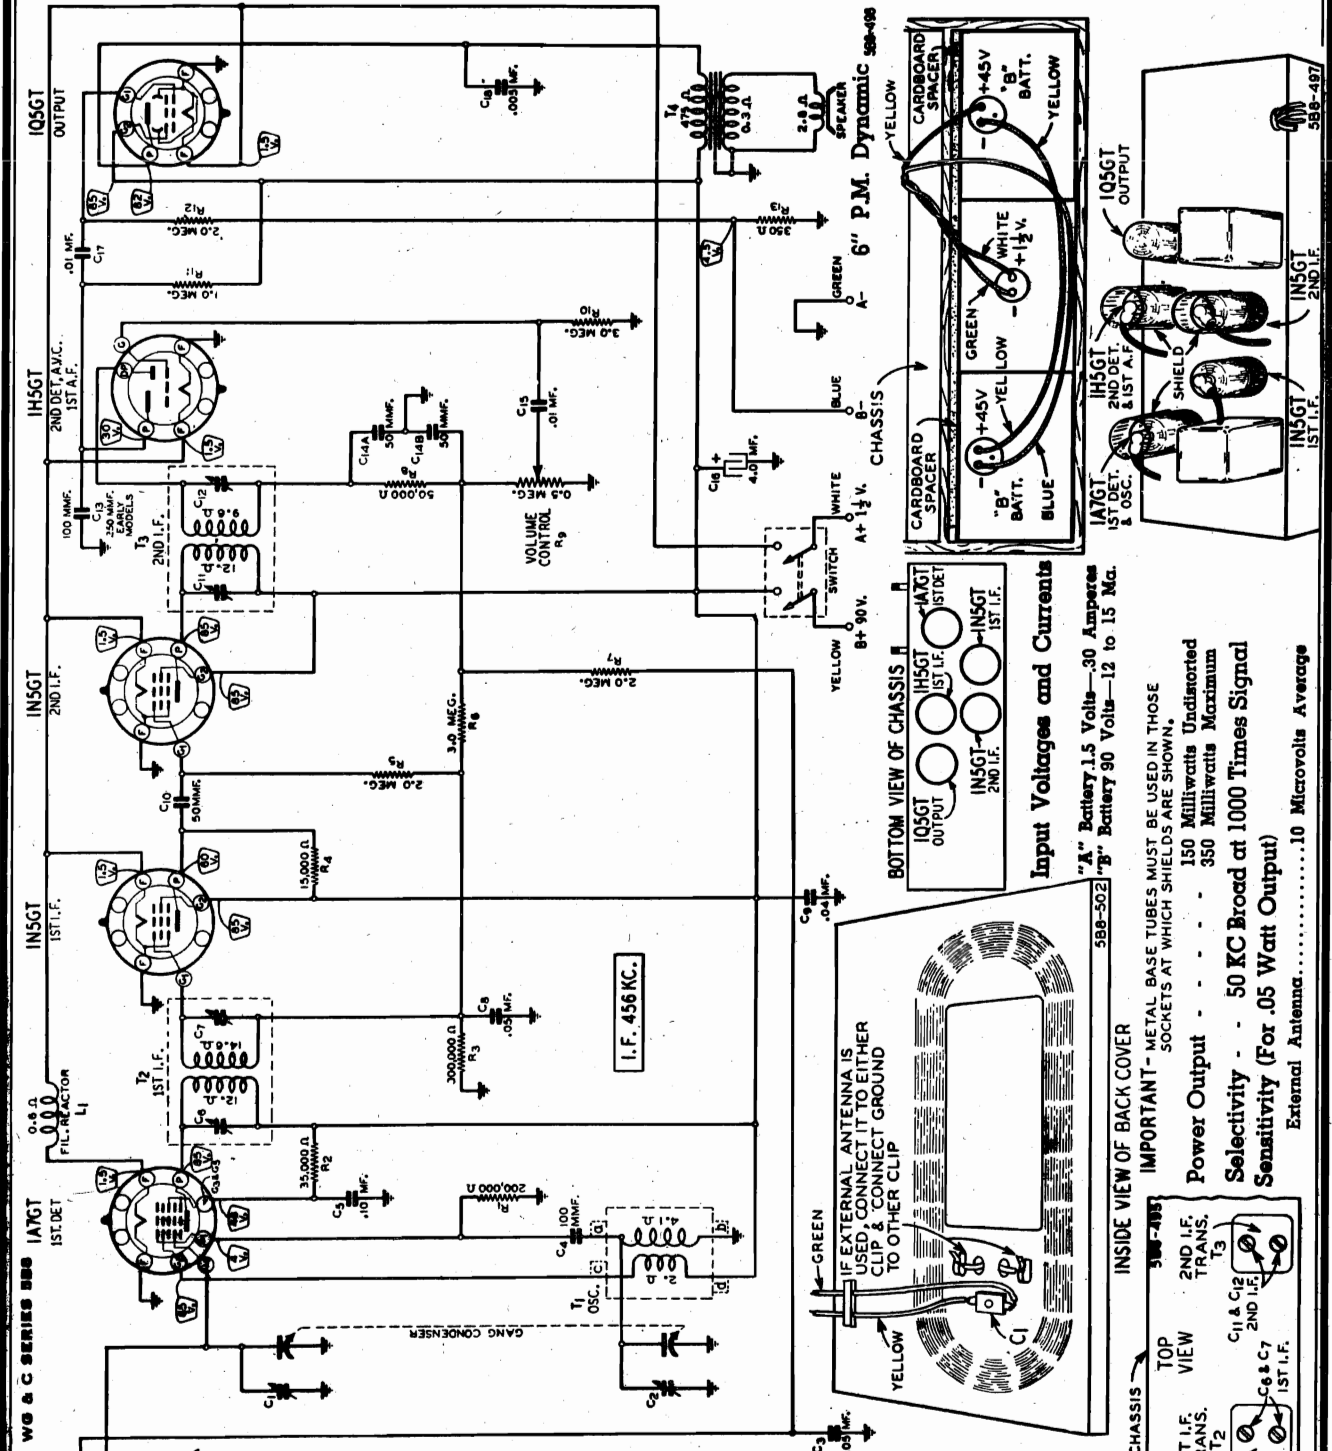

Input Voltages and Currents
"A" Battery 1.5 Volts—30 Amperes
"B" Battery 90 Volts—12 to 15 Ma.

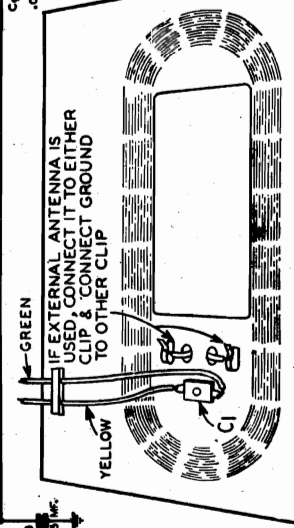

IMPORTANT - METAL BASE TUBES MUST BE USED IN THOSE SOCKETS AT WHICH SHIELDS ARE SHOWN.

- Power Output - 150 Milliwatts Undistorted
- 350 Milliwatts Maximum
- Selectivity - 50 KC Broad at 1000 Times Signal
- Sensitivity (For .05 Watt Output) External Antenna.....10 Microvolts Average

ALIGNMENT PROCEDURE


Volume Control—Maximum All Adjustments.
Connect Radio Chassis to Ground Post of Signal Generator with a Short Heavy Lead.
Allow Chassis and Signal Generator to "Heat Up" for several minutes.

SIGNAL GENERATOR FREQUENCY SETTING	CONNECTION AT RADIO	DUMMY ANTENNA	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
456 KC	Signal Grid of 1st Det. (Top Cap)	.1 mf.	Turn rotor to full open	1st I.F. (C6) & (C7) 2nd I.F. (C11) & (C12)
1600 KC	Signal Grid of 1st Det.	.1 mf.	Turn rotor to full open	Oscillator (C2)
1500 KC	None—See Note A		Turn rotor to max. output	Antenna (C1)

NOTE A—Chassis must be in cabinet. Connect a loop approximately one foot in diameter across the antenna and ground posts of the signal generator. The back of the cabinet must be in place. Place radio approximately 3 feet from loop so as to pick up signal. Radio should not be in proximity to any metal (metal bench, etc.).
CALIBRATION (For models with pointer in front of dial scale)—To obtain dial scale calibration, tune in an 800 KC signal. The pointer should be at the 800 KC mark on the dial. If it is not, hold the pulley at the back of the dial, loosen the pointer screw, set the pointer at the 800 KC mark, and retighten the pointer screw.

MONTGOMERY WARD & CO.

MODELS 93WG-754, 93WG-755
Schematic, Voltage, Coils
Sensitivity, Socket

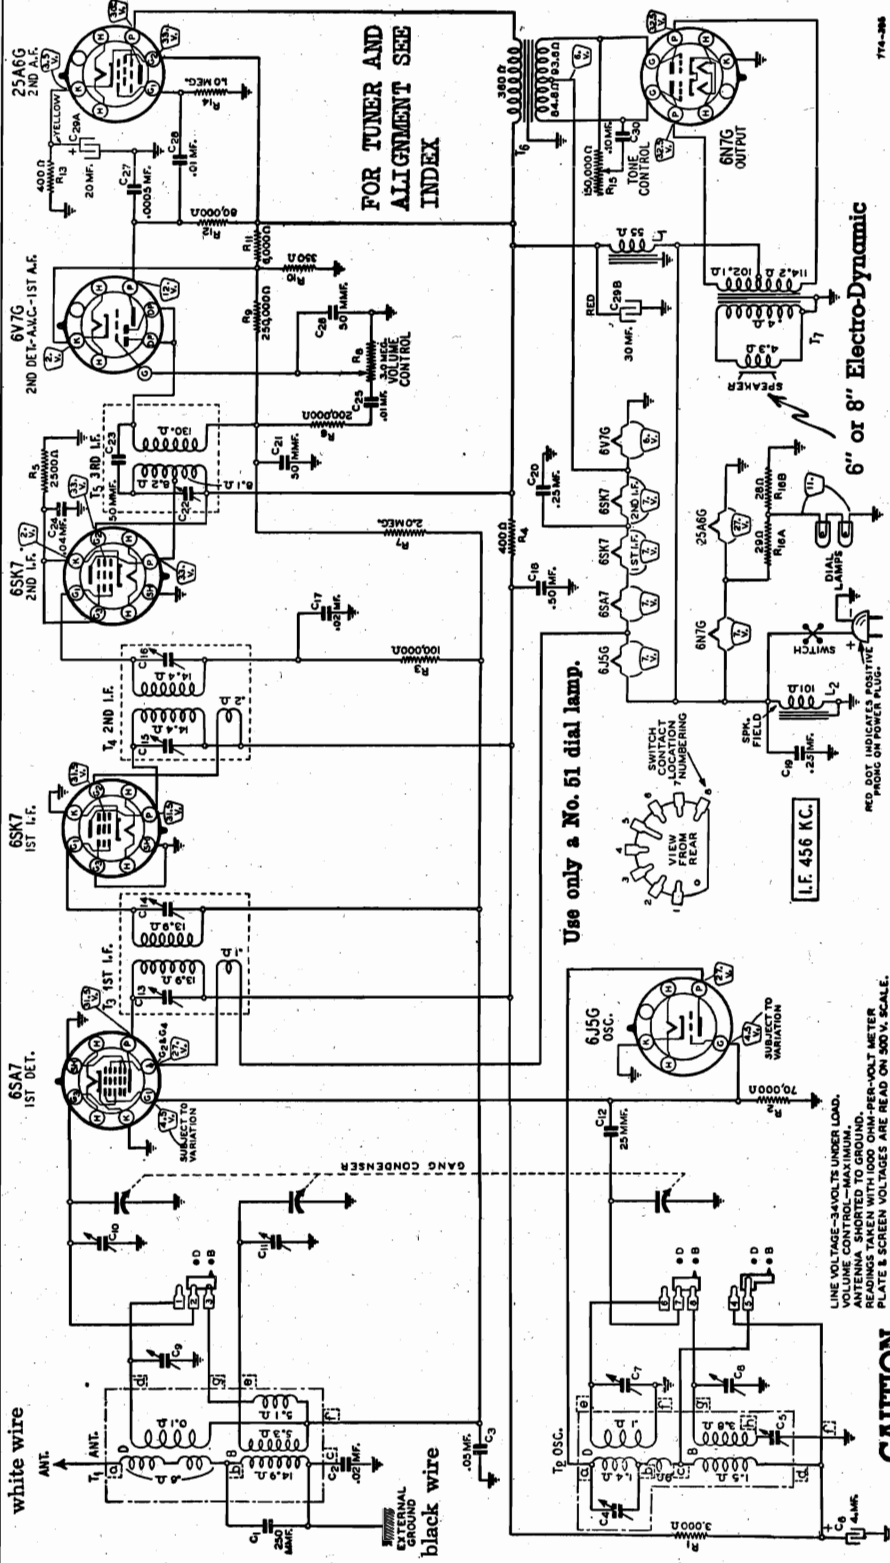

Power Consumption - 1.60 Amperes at 36 Volts DC
Power Output17 Watt Undistorted
 .40 Watt Maximum
Selectivity - - 30 KC Broad at 1000 times Signal
Sensitivity (For .05 watt output)
 B Range 528 to 1730 KC . . . 6.0 Microvolts Average
 D Range 5750 to 18300 KC . . . 8.0 Microvolts Average



Line Voltage Range
 The radio will operate satisfactorily within a line voltage range of 25 to 42 volts. If the line voltage is higher than 42, it will be necessary to use a series resistor to cut it down. If the voltage varies, a variable resistor may be required.

Use only a No. 51 dial lamp.


CAUTION

The metal chassis is connected to one side of the line—See Schematic Circuit Diagram.

This radio is designed for use on farms and in those places where the power supply consists of a 32 volt direct current generating plant. The radio may not be satisfactory on plants which do not use storage batteries.
 The power consumption of this radio is 57.6 watts. When first turned on, the power consumption is higher for a few seconds until the tubes heat.

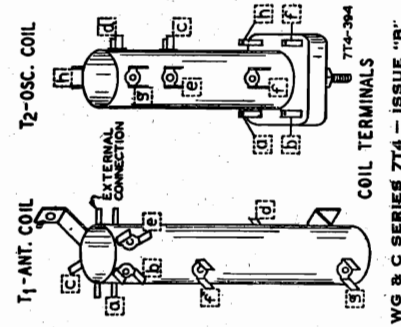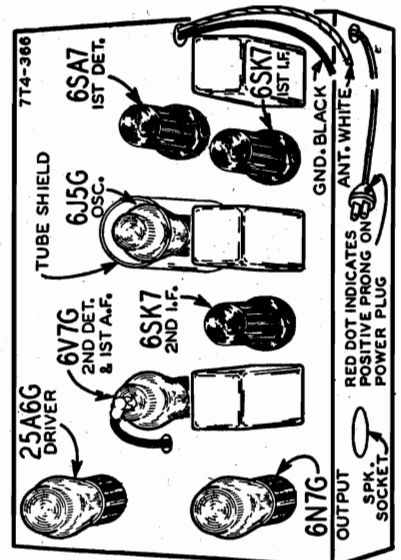


WG & C SERIES 774 - ISSUE 'B'

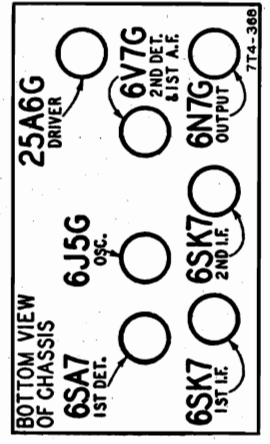

MODELS 93WG-800, 93WG-801
(With Loop)
Schematic, Voltage, Coils
Sensitivity, Socket


MONTGOMERY WARD & CO.

Power Consumption 71 Watts (At 117 volts 60 cycles)
Power Output . . . 3.0 Watts Undistorted
-4.5 Watts Maximum
Selectivity 35 KC Broad at 1000 times Signal
Sensitivity—External Antenna—
(For 0.5 Watt output)
B Range.. 528 to 1730 KC....2.0 Microvolts Average
D Range..5750 to 18300 KC....4.0 Microvolts Average

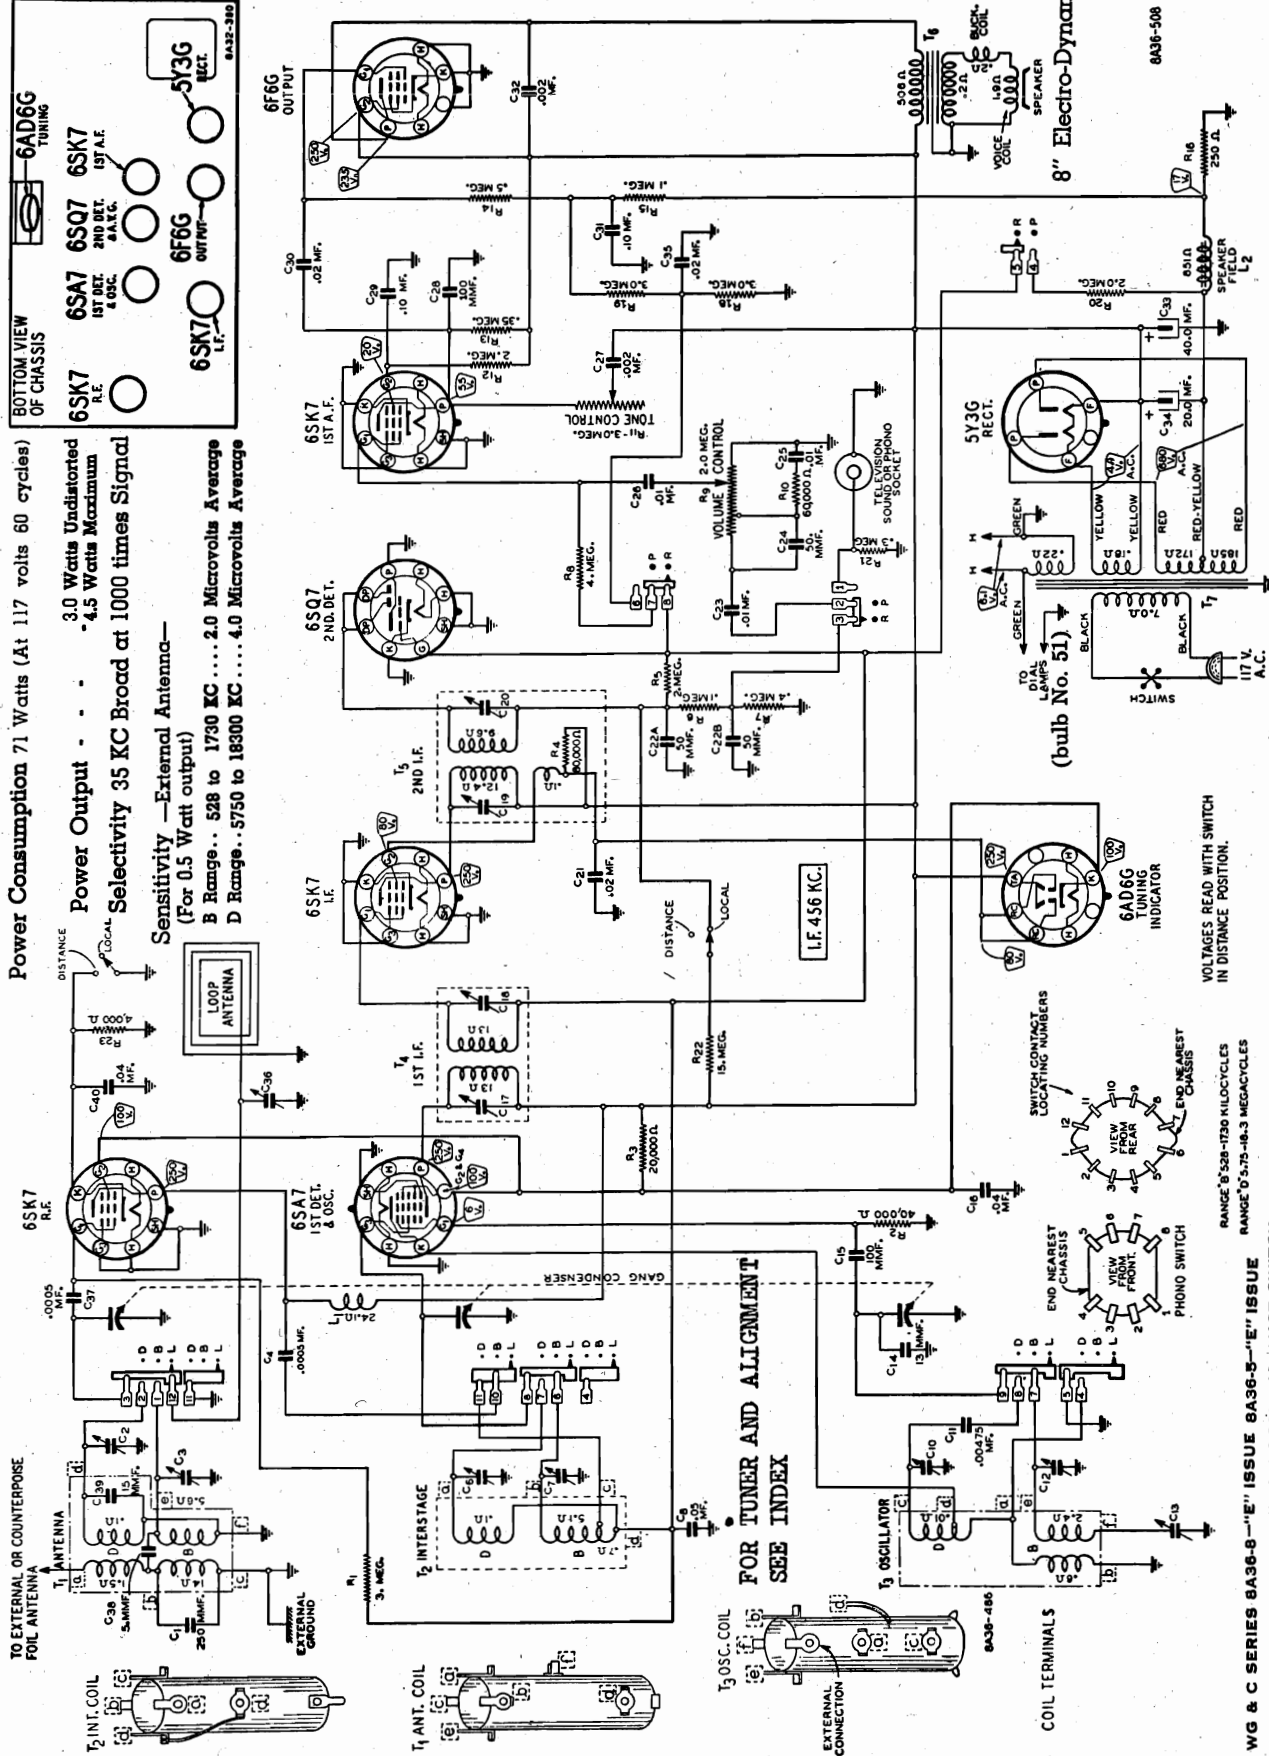

MODEL 93WG-805(With Loop)
Schematic, Voltage, Coils
Sensitivity, Socket

MONTGOMERY WARD & CO.


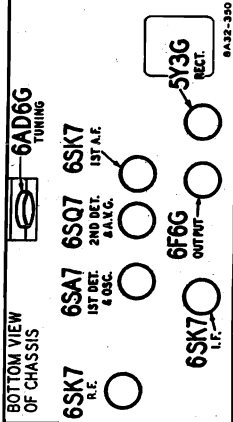


Power Consumption 71 Watts (At 117 volts 60 cycles)
 88 Watts (Phonograph Operating)

Power Output 30 Watts Undistorted
 4.5 Watts Maximum

Selectivity 35 KC Broad at 1000 times Signal
 Intermediate Frequency 456 KC

Speaker 10" Electro-Dynamic
 Sensitivity—External Antenna—(For 0.5 Watt Output)
 B Range... 528 to 1730 KC... 2.0 Microvolts Average
 D Range... 5750 to 18300 KC... 4.0 Microvolts Average

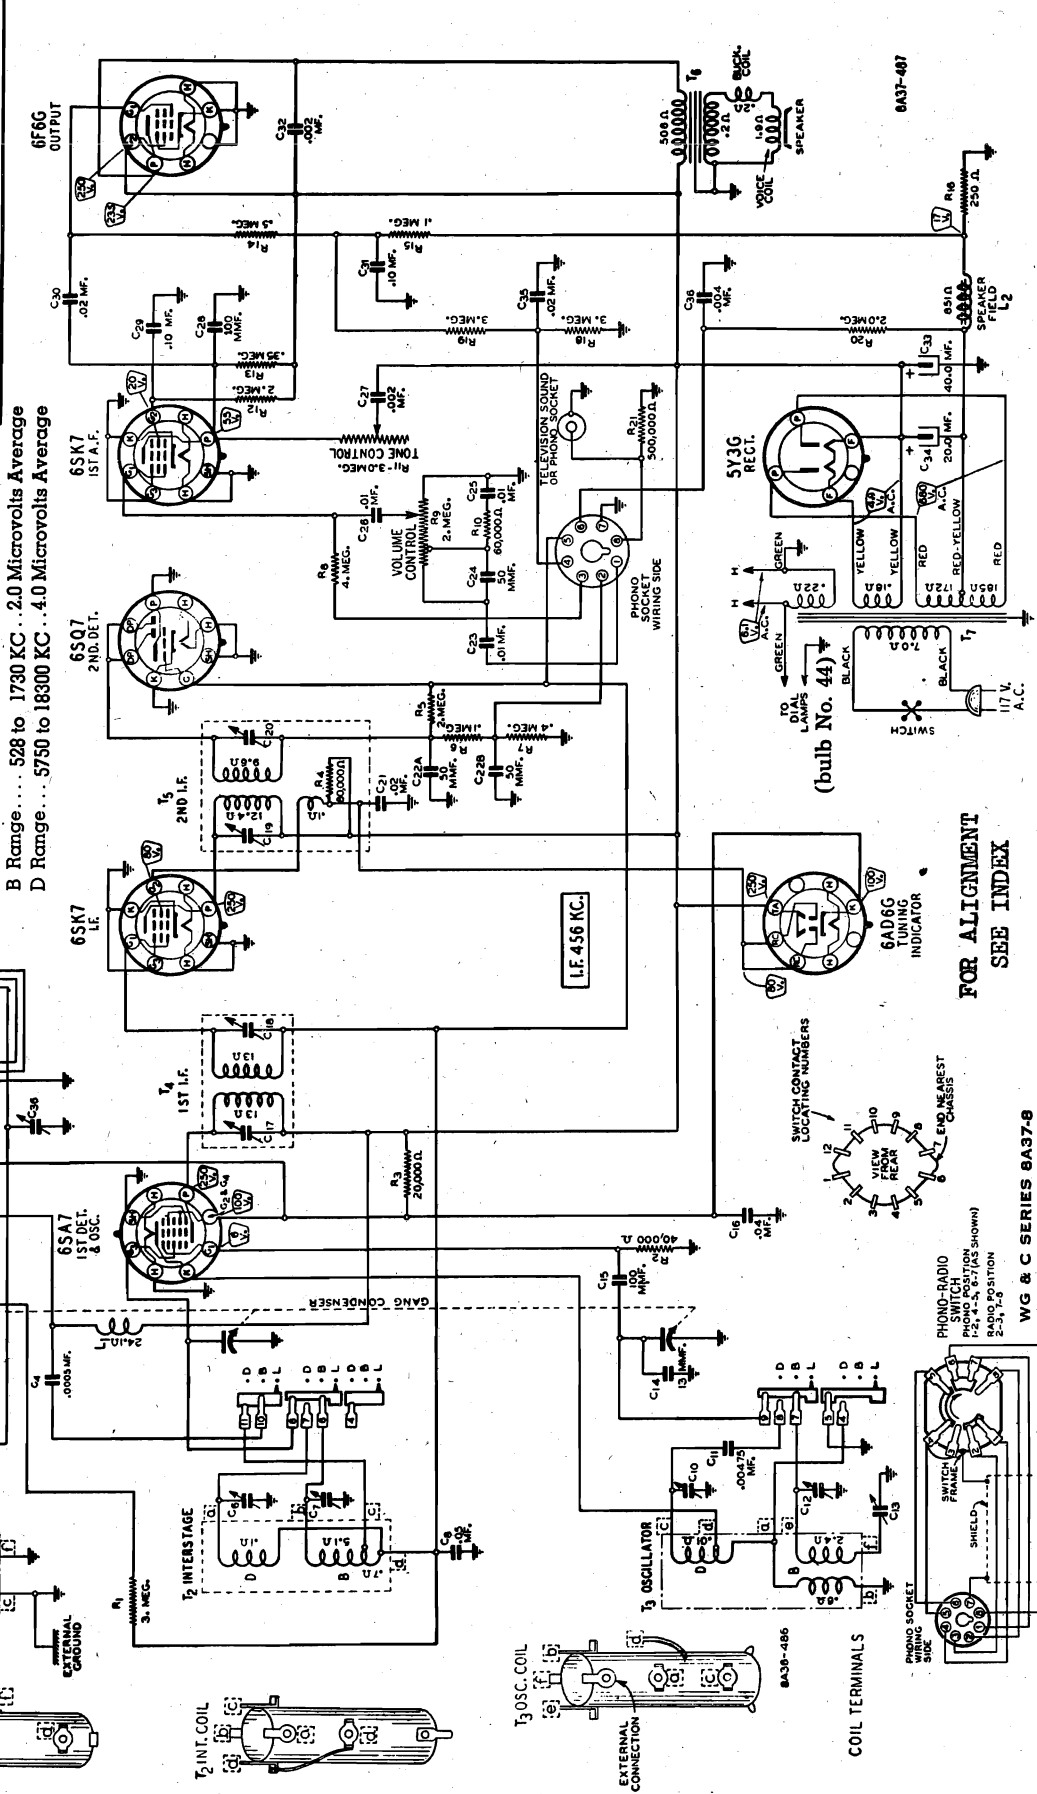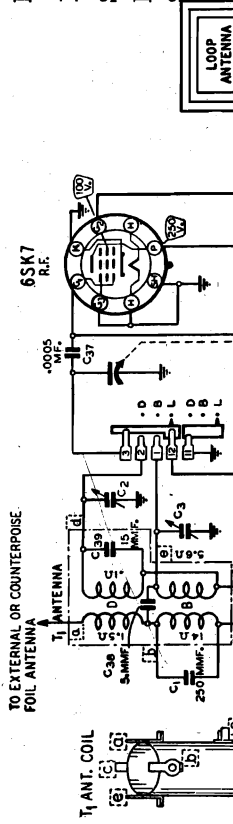



MONTGOMERY WARD & CO.

MODELS 93WG-100, 93WG-1001
Schematic, Voltage, Coils
Sensitivity, Socket

SPECIFICATIONS

- Power Consumption - 98 Watts (At 117 volts 60 cycles)
- Power Output - 8 Watts Undistorted
9 Watts Maximum
- Selectivity - 29.5 KC Broad at 1000 times Signal
(Sharp)
- Speaker - 10" Electro-dynamic
- Sensitivity (For 0.5 Watt output)
 - B Range..... 1.0 Microvolt Average
 - C Range..... 1.0 Microvolt Average
 - D Range..... 3.0 Microvolts Average

FOR TUNER AND ALIGNMENT SEE INDEX

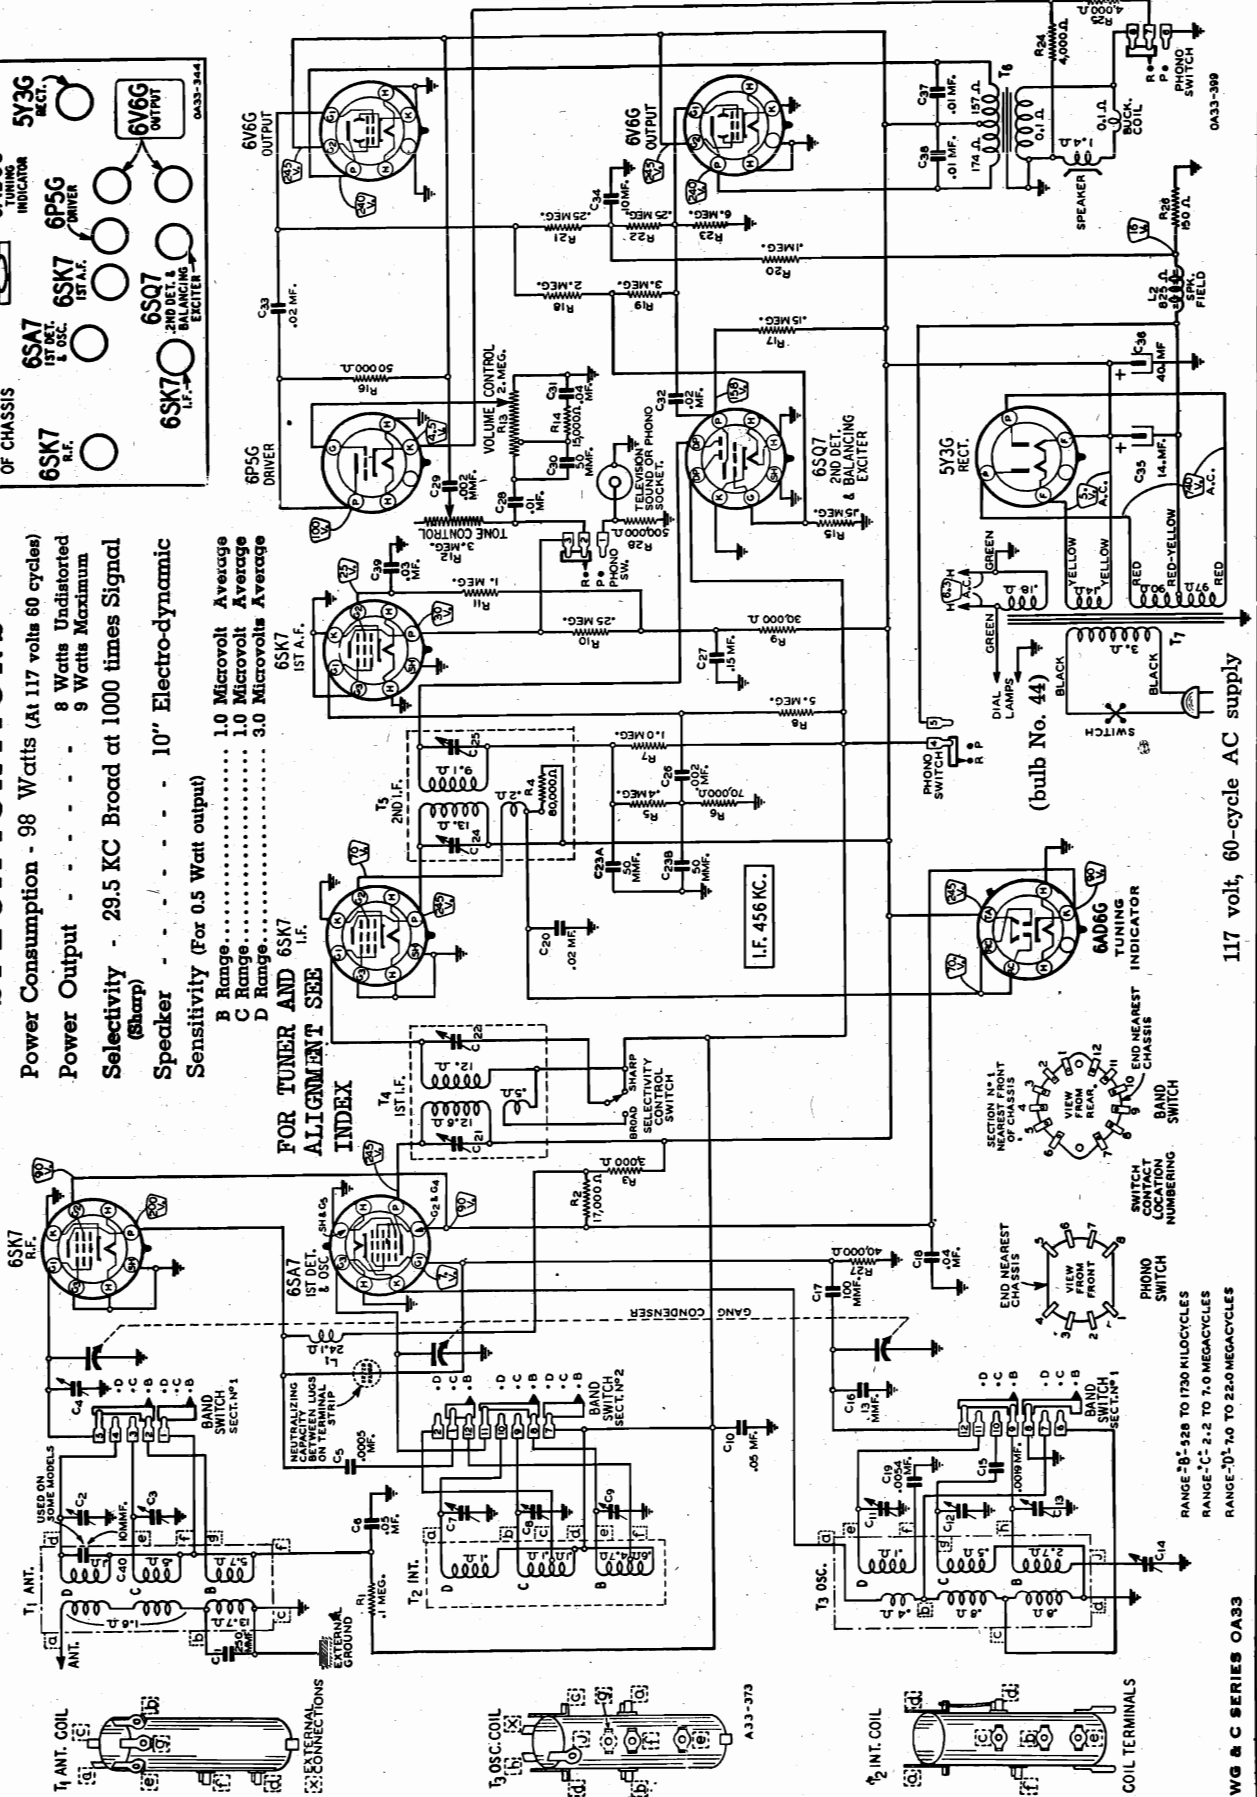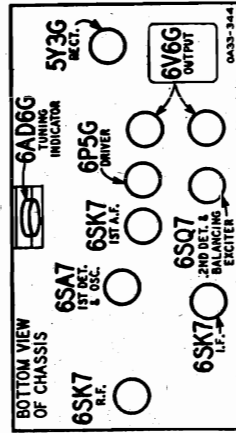

117 volt, 60-cycle AC supply

WG & C SERIES OA33




MODELS 93WG-1000, 93WG-1001
(With Loop)

MONTGOMERY WARD & CO.

Schematic, Voltage, Coils
Sensitivity, Socket

SPECIFICATIONS

- Power Consumption - 98 Watts (At 117 volts 60 cycles)
- Power Output 8 Watts Undistorted
9 Watts Maximum
- Selectivity - 29.5 KC Broad at 1000 times Signal
(Sharp)
- Intermediate Frequency 456 KC
Speaker 10" Electro-dynamic
- Sensitivity - External Antenna - (For 0.5 Watt output)
B Range . . . 528 to 1720 KC . . . 1.0 Microvolt Average
C Range . . . 2200 to 7000 KC . . . 1.0 Microvolt Average
D Range . . . 7000 to 22000 KC . . . 3.0 Microvolts Average

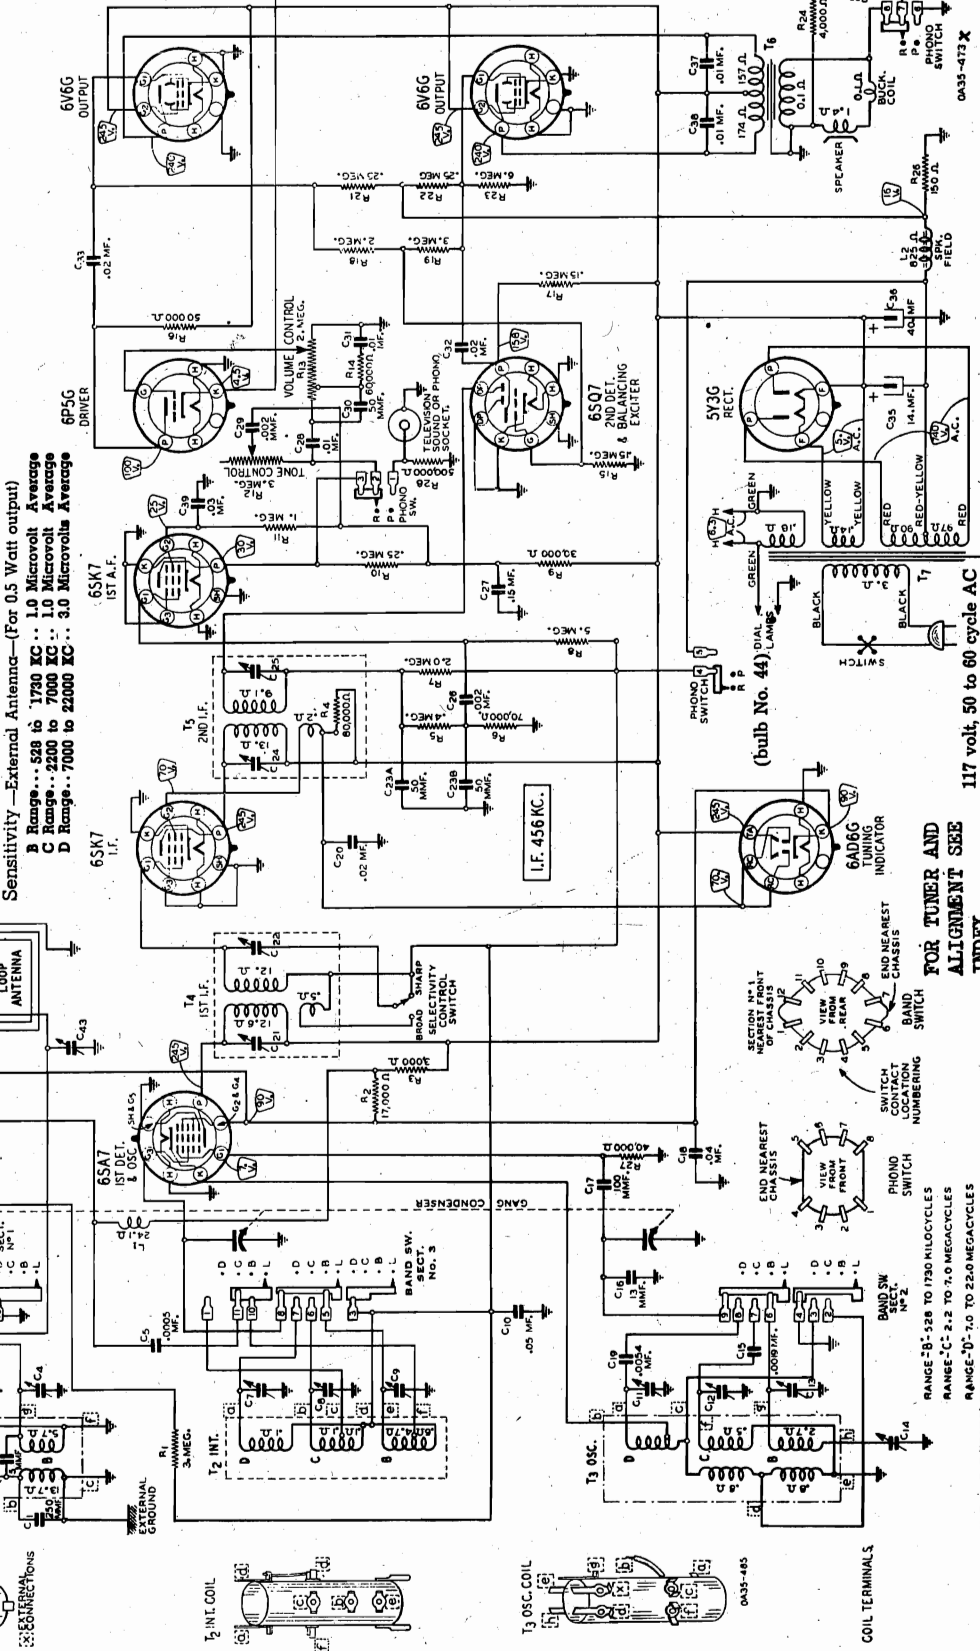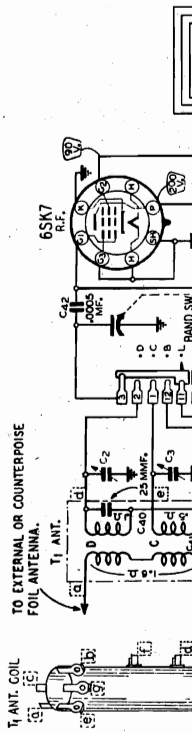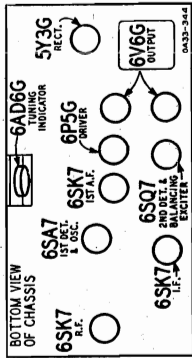

FOR TUNER AND ALIGNMENT SEE INDEX

WG & C SERIES 0A33

MONTGOMERY WARD & CO. MODELS 93WG-1103, 93WG-1104 Schematic, Voltage, Coils Socket, Sensitivity Drive Cord Replacement



Drive Cord Replacement

Tie a knot with a small loop at one end of the new drive cord. Slide a 1/4 inch length of fabric and around pulley B. Then bring the cord to the left and over pulley C. See that the fabric tubing should be tied to the tension spring in such a manner that there is a distance of 5/8 inches between the knots.

Turn the gang condenser to full open position. Place the looped end of the drive cord over the hook on condenser drive drum A and wind one turn clockwise around the drum rim.

hook on condenser drive drum A—See illustration. Bring the cord up through the slot in the drum rim and pass to the right (from back of chassis) and around pulley B. Then bring the cord to the left and over pulley C. See that the fabric tubing is now between pulleys B and C. Continue cord down to control shaft D and wind 3 1/2 turns counter-clockwise (from back of chassis) on shaft D. Turn the gang condenser to full open position. Bring cord down to and over pulley E. Bring cord down to top of drive drum A and wind one turn clockwise around the drum rim.



Pass the remaining drive cord and tension spring through the slot in the drum. Place free end of

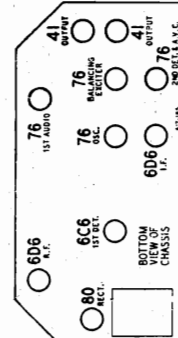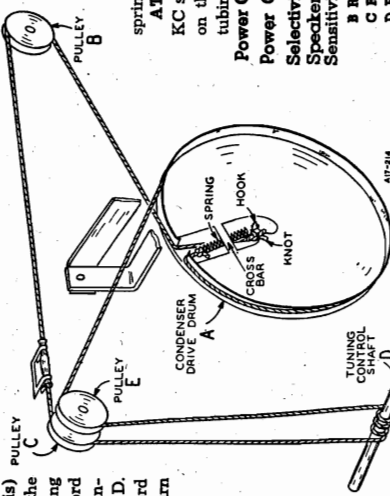

spring over the hook on the condenser drive drum. ATTACHING DIAL POINTER—Tune in a 1500 KC signal. Move the pointer to the 1500 KC mark on the dial and clamp it tightly over the fabric tubing on the cord.

Power Consumption - 80 Watts (At 117 volts 60 cycles)
Power Output - 5.0 Watts Undistorted
Selectivity - 32 KC Broad at 1000 times Signal
Speaker - 10" Electro-Dynamic
Sensitivity (For 0.5 Watt Output)

B Range - 2.0 Microvolts Average
C Range - 3.0 Microvolts Average
D Range - 8.0 Microvolts Average
 WE & C SERIES 1A17

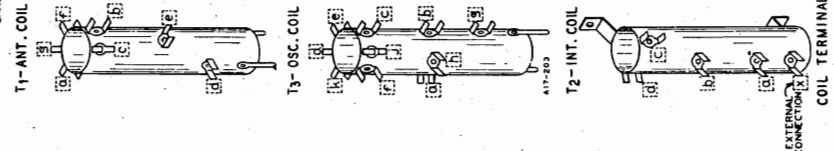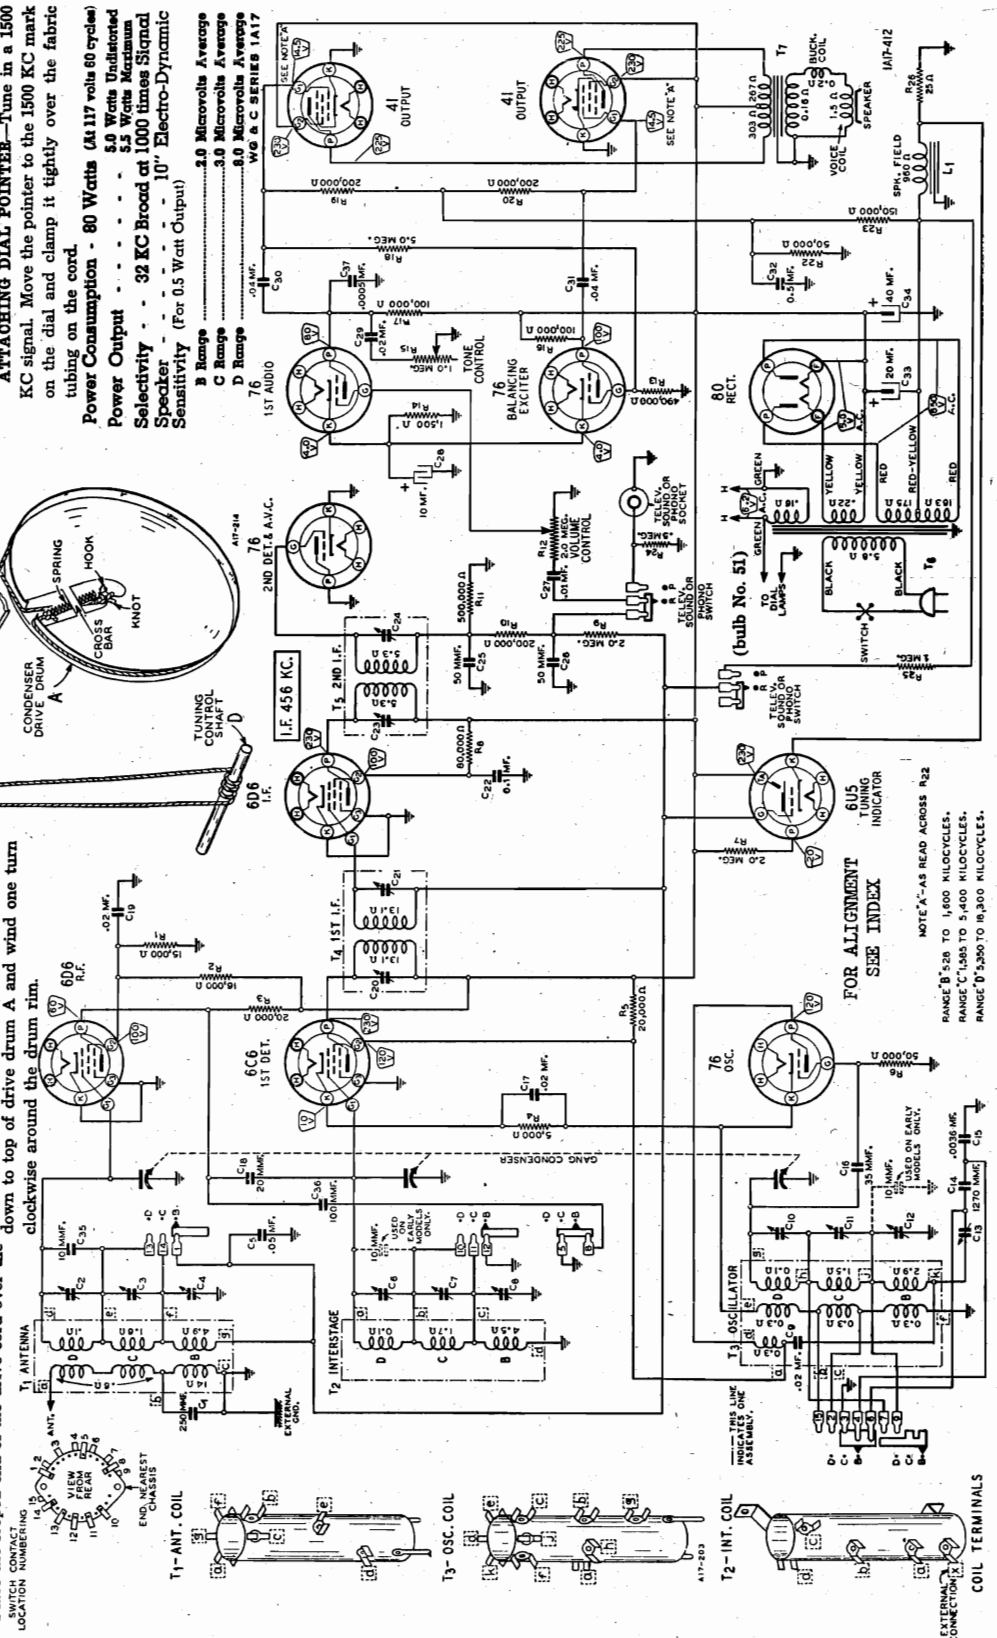


FOR ALIGNMENT SEE INDEX

NOTE "A" - AS READ ACROSS R22
 RANGE B - 230 TO 1,600 KILOCYCLES.
 RANGE C - 1,905 TO 5,400 KILOCYCLES.
 RANGE D - 9,300 TO 19,300 KILOCYCLES.

MODEL 93WG-2208
Schematic, Chassis
Parts

MONTGOMERY WARD & CO.


MODEL 93WG-2208 consists of receiver Model 93WG-565A and the record player shown here. See Index for data on receiver.

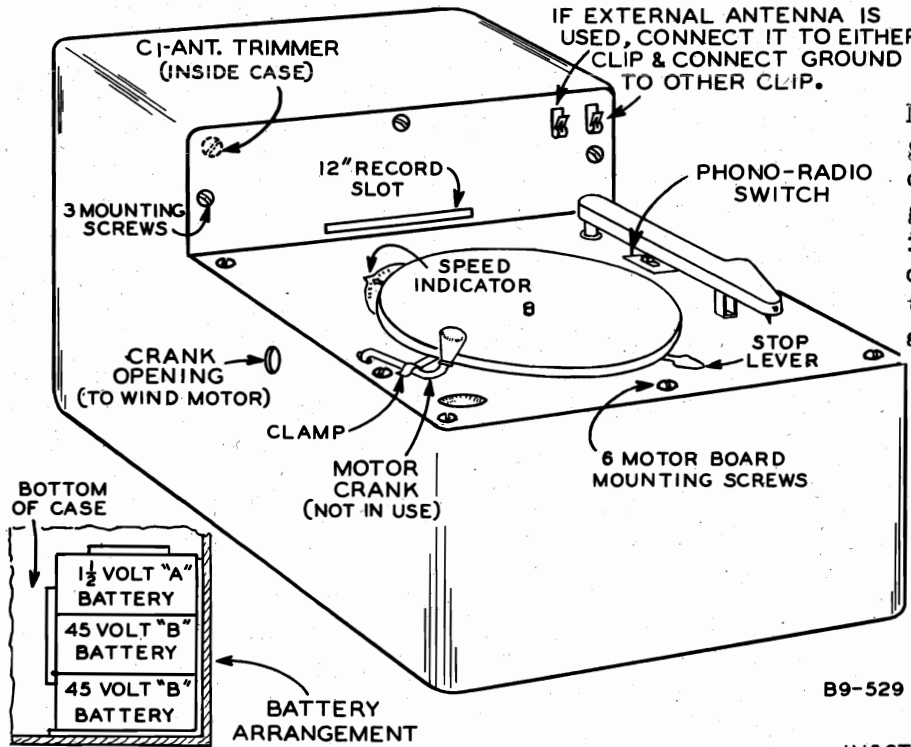

Most of the information given for 93WG-565A is correct for this phono-graph combination. The information that is different is given on this page with changes and additions.

B9-529

BATTERY OPERATED PORTABLE RADIO WITH SPRING MOTOR RECORD PLAYER

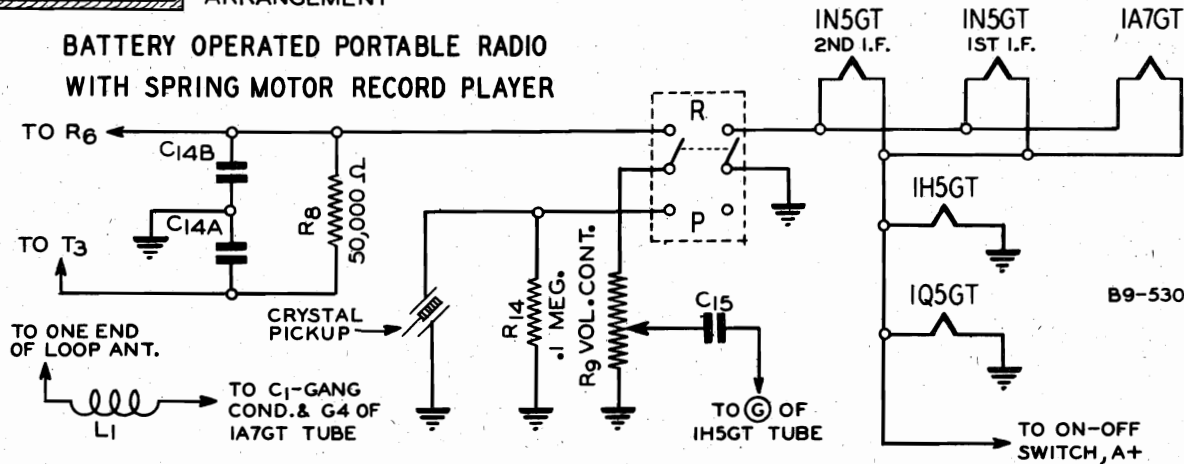

PARTS USED ON MODEL 93WG-565A ARE USED ON THIS MODEL EXCEPT AS FOLLOWS:-

The following NEW PARTS not shown on MODEL 93WG-565A ARE USED

Bin No.	Part No.	Code	Description	Selling Price
	2A161		Radio-Phono Switch.....	\$0.16
	4X351		Escutcheon for Phono-Radio Switch.....	.12
	17A131	C1	1-12 mmf. Trimmer Condenser.....	.10
	14A115		2 Section Gang Condenser complete with Tuning Control Shaft.....	2.05
	A85104	R14	100,000 Ohm 0.2 Watt Carbon Resistor.....	.06
	28A3		Needle Cup.....	.06
	28A7		Cover for Needle Cup.....	.06
	9A1218		Loading Coil for Loop Antenna.....	.18

The following parts shown on MODEL 93WG-565A ARE NOT USED


Bin No.	Part No.	Code	Description	Selling Price
	9A1191		Loop Antenna Assembly.....	\$0.54
	4A139		Fibre Strip (Loop Antenna Leads).....	.04
	17A110	C1	2.5-35 mmf. Loop Antenna Trimmer Condenser.....	.06
	14A114		2 Section Gang Condenser complete with Tuning Control Shaft.....	1.20

W G & C Series 5B9

Prices Subject to Change Without Notice.

NOBLITT-SPARKS INDUSTRIES, INC.

MODEL 71
Chassis RE-43
Schematic, Voltage
Alignment, Sensitivity

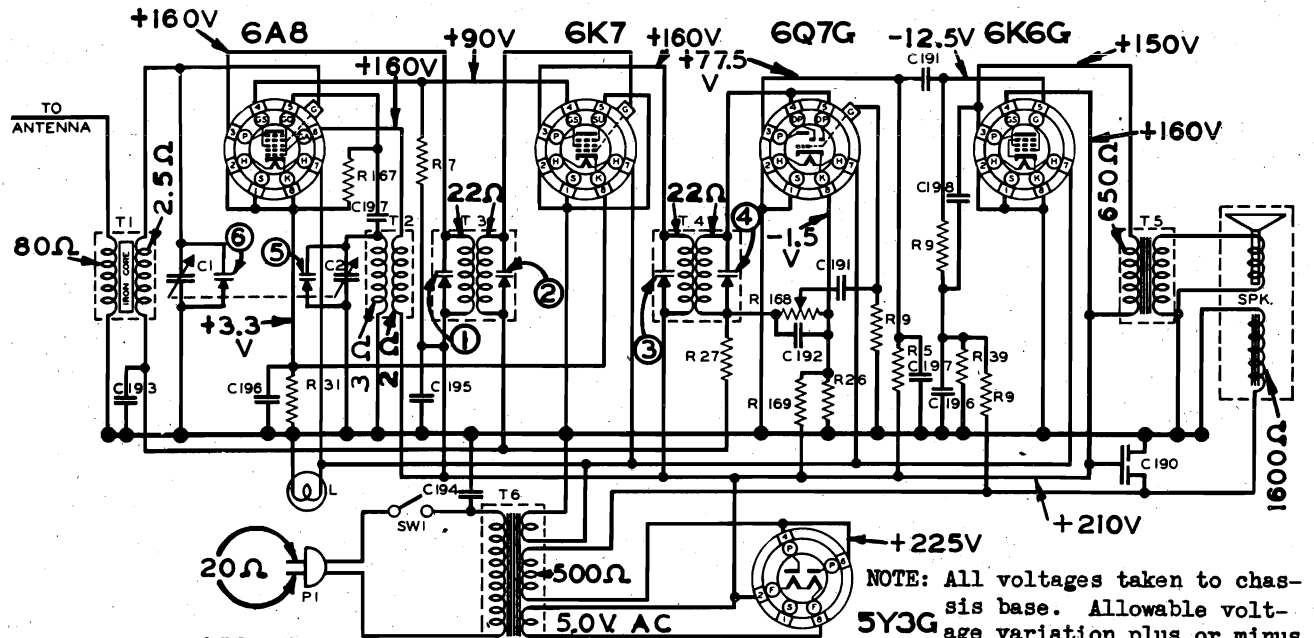

IF PEAK 455 KC

NOTE: All voltages taken to chassis base. Allowable voltage variation plus or minus 20% from values shown.

BALANCING INSTRUCTIONS

Operation No.	Connect Bal. Oscillator to	Bal. Oscillator Frequency	Adj. Padder No.	Dial Setting	Sens.
1.	* 6A8 Grid	455	1, 2, 3 & 4	550 kc	75 mv.
2.	Ant. Lead Through 200 uuf.	1720	5	1720 kc	
3.	Ant. Lead Through 200 uuf.	1400	6	1400 kc	30 mv.

* I.F. Sensitivity should be 150 microvolts minimum for 200 milliwatts output

RESISTORS

Ref. No.	Part No.	Description	Price
R5	17-2070	500,000 ohms 1/4 watt	.20
R7	17-2072	20,000 ohms 1/2 watt	.20
R9	17-2080	1,000,000 ohms 1/4 watt	.20
R27	17-4788	2,000,000 ohms 1/4 watt	.20
R31	17-2066	260 ohms 1/2 watt	.20
R39	17-14051	300,000 ohms 1/4 watt	.20
R167	17-14281	60,000 ohms 1/4 watt	.20
R168	17-16166	500,000 ohms volume control	.75
R169	17-14282	150,000 ohms 1/4 watt	.20
R26	17-4781	600 ohms 1/4 watt	.20

COILS AND TRANSFORMERS

Ref. No.	Part No.	Description	Price
T1	00-16141	Antenna Coil	.75
T2	00-16142	Oscillator coil	.50
T3	00-16161	First I.F. Transformer	1.50
T4	00-16162	Second I.F. Transformer	1.50
T5	00-16160	Output transformer	1.50
T6	00-16140	Power transformer	3.00

ELECTRICAL and MECHANICAL SPECIFICATIONS

TUBES: 6A8--1st Detector Oscillator
6K7--L.F. Amplifier
6Q7G--2nd Detector, A.V.C. Audio Amplifier
6K6G--Power output Amplifier
5Y3G--Rectifier

Dial Light: Mazda #44
Frequency Range: 1725 to 540 K.C.
Power Output: 1.8 watts
Speaker: 5" Electro Dynamic, 3 ohm voice coil
1600 ohms field.

Voltage & Frequency: 117 V. 60 cycles AC only
Watts Power Consumption: 45 Watts
Sensitivity: 50 microvolts for 200 milliwatts output

Approved by: Underwriters
Licensed under: R.C.A. and Hazeltine patents
Chassis Dimensions: Width 10 3/4"; height 6 3/4"; depth 6 3/4"
Cabinet dimensions: Width 11 1/2"; height 8"; depth 6 1/4"
Mechanical Push-button Tuning: 4 push-buttons

CONDENSERS



Ref. No.	Part No.	Description	Price
C1 & 2	17-16147	Tuning condenser	3.00
C190	17-14271	10-10 mfd. 300 v.d.c.	1.50
C191	17-14272	.01 mfd. 400 v.d.c.	.35
C192	17-14273	.00025 mfd. 600 v.d.c.	.25
C193	17-14274	.05 mfd. 200 v.d.c.	.30
C194	17-14275	.01 mfd. 400 v.d.c.	.40
C195	17-14276	.05 mfd. 400 v.d.c.	.35
C196	17-14277	.1 mfd. 200 v.d.w.	.35
C197	17-14278	.0001 mfd. 600 v.d.c.	.25
C198	17-14279	.005 mfd. 400 v.d.c.	.30

MISCELLANEOUS

Part No.	Description	Price
17-13905	Dial light bulb (Mazda #44)	.15
17-15791E	Line cord and plug assembly	.40
17-16133	Speaker Assembly	4.00
17-15926A	Volume control and switch	1.00


MODEL 71
 Chassis RE-43
 Chassis, Trimmers
 Socket

NOBLITT-SPARKS INDUSTRIES, INC.

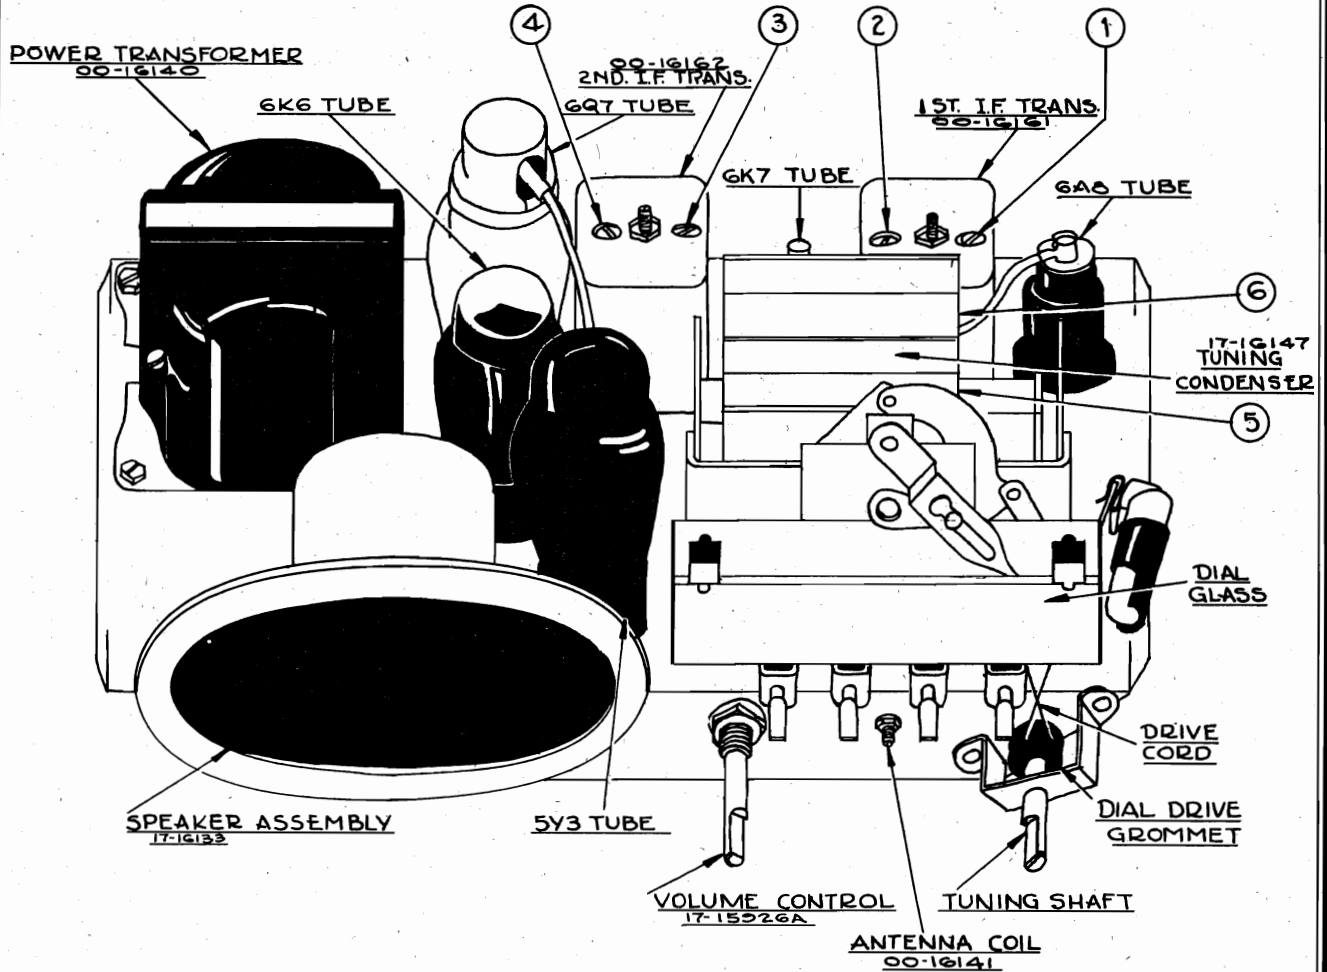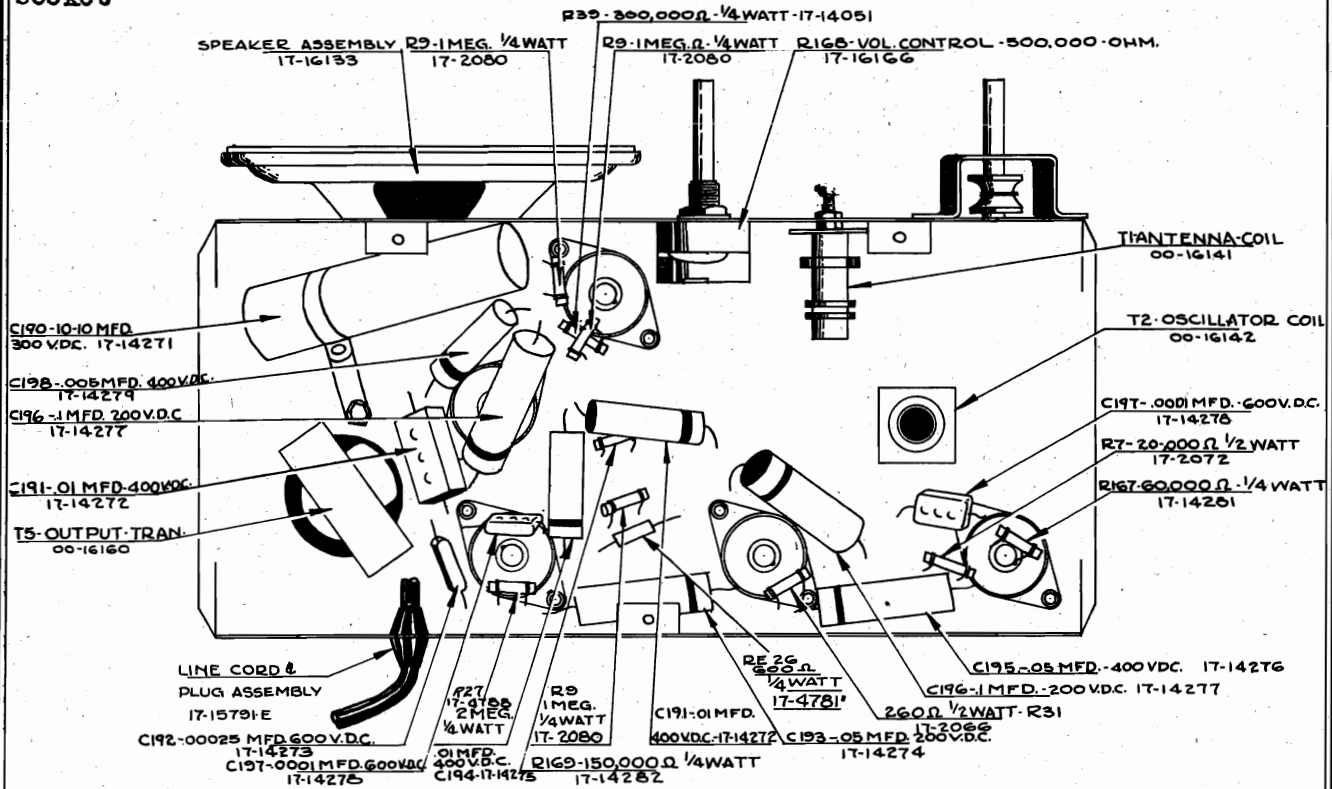

NOBLITT-SPARKS INDUSTRIES, INC.

MODELS 40,40A
MODELS 402,402A
Ch.RE-55
Schematics

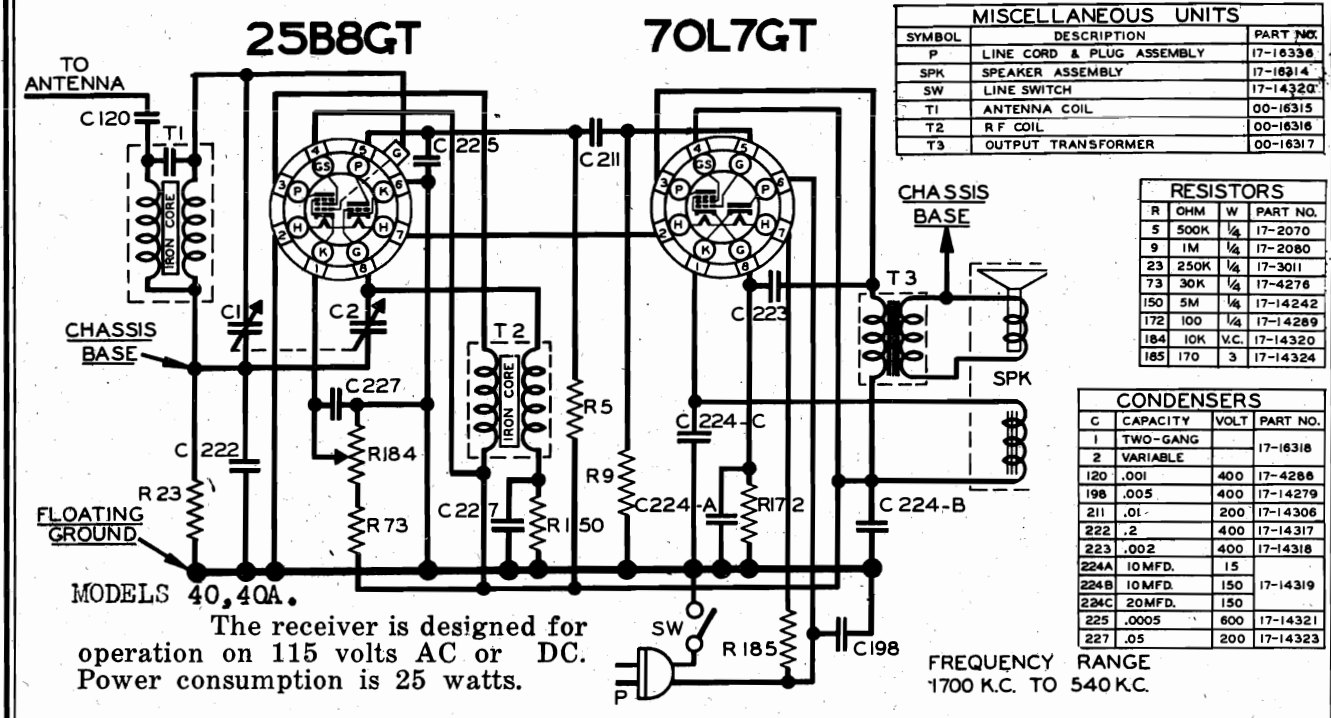


MISCELLANEOUS UNITS		
SYMBOL	DESCRIPTION	PART NO.
P	LINE CORD & PLUG ASSEMBLY	17-16336
SPK	SPEAKER ASSEMBLY	17-16314
SW	LINE SWITCH	17-14320
T1	ANTENNA COIL	00-16315
T2	R.F. COIL	00-16316
T3	OUTPUT TRANSFORMER	00-16317

RESISTORS			
R	OHM	W	PART NO.
5	500K	1/4	17-2070
9	1M	1/4	17-2080
23	250K	1/4	17-3011
73	30K	1/4	17-4276
150	5M	1/4	17-14242
172	100	1/4	17-14269
184	10K	V.C.	17-14320
185	170	3	17-14324

CONDENSERS			
C	CAPACITY	VOLT	PART NO.
1	TWO-GANG		17-16318
2	VARIABLE		17-16318
120	.001	400	17-4286
198	.005	400	17-14279
211	.01	200	17-14306
222	.2	400	17-14317
223	.002	400	17-14318
224A	10 MFD.	15	
224B	10 MFD.	150	17-14319
224C	20 MFD.	150	
225	.0005	600	17-14321
227	.05	200	17-14323

MODELS 40,40A.
The receiver is designed for operation on 115 volts AC or DC. Power consumption is 25 watts.

FREQUENCY RANGE
1700 K.C. TO 540 K.C.

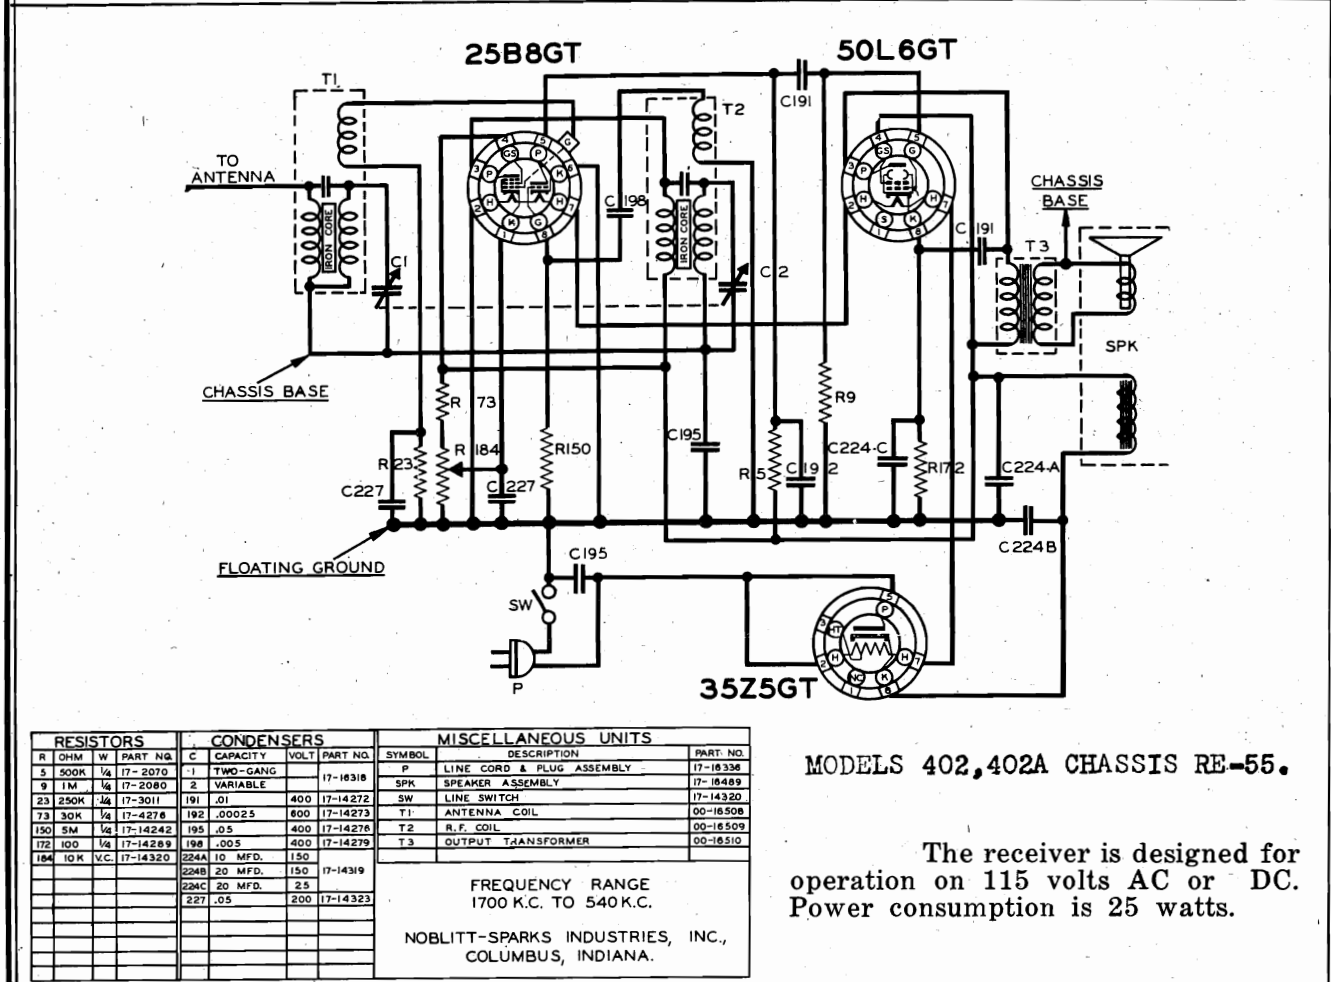

RESISTORS			
R	OHM	W	PART NO.
5	500K	1/4	17-2070
9	1M	1/4	17-2080
23	250K	1/4	17-3011
73	30K	1/4	17-4276
150	5M	1/4	17-14242
172	100	1/4	17-14269
184	10K	V.C.	17-14320

CONDENSERS			
C	CAPACITY	VOLT	PART NO.
1	TWO-GANG		17-16318
2	VARIABLE		17-16318
191	.01	400	17-14272
192	.00025	600	17-14273
195	.05	400	17-14276
198	.005	400	17-14279
224A	10 MFD.	150	
224B	20 MFD.	150	17-14319
224C	20 MFD.	25	
227	.05	200	17-14323

MISCELLANEOUS UNITS		
SYMBOL	DESCRIPTION	PART NO.
P	LINE CORD & PLUG ASSEMBLY	17-16336
SPK	SPEAKER ASSEMBLY	17-16314
SW	LINE SWITCH	17-14320
T1	ANTENNA COIL	00-16508
T2	R.F. COIL	00-16509
T3	OUTPUT TRANSFORMER	00-16510

MODELS 402,402A CHASSIS RE-55.

The receiver is designed for operation on 115 volts AC or DC. Power consumption is 25 watts.


FREQUENCY RANGE
1700 K.C. TO 540 K.C.
NOBLITT-SPARKS INDUSTRIES, INC.,
COLUMBUS, INDIANA.

MODELS 502, 502A

Chassis RE-48

Schematic, Alignment

NOBLITT-SPARKS INDUSTRIES, INC.

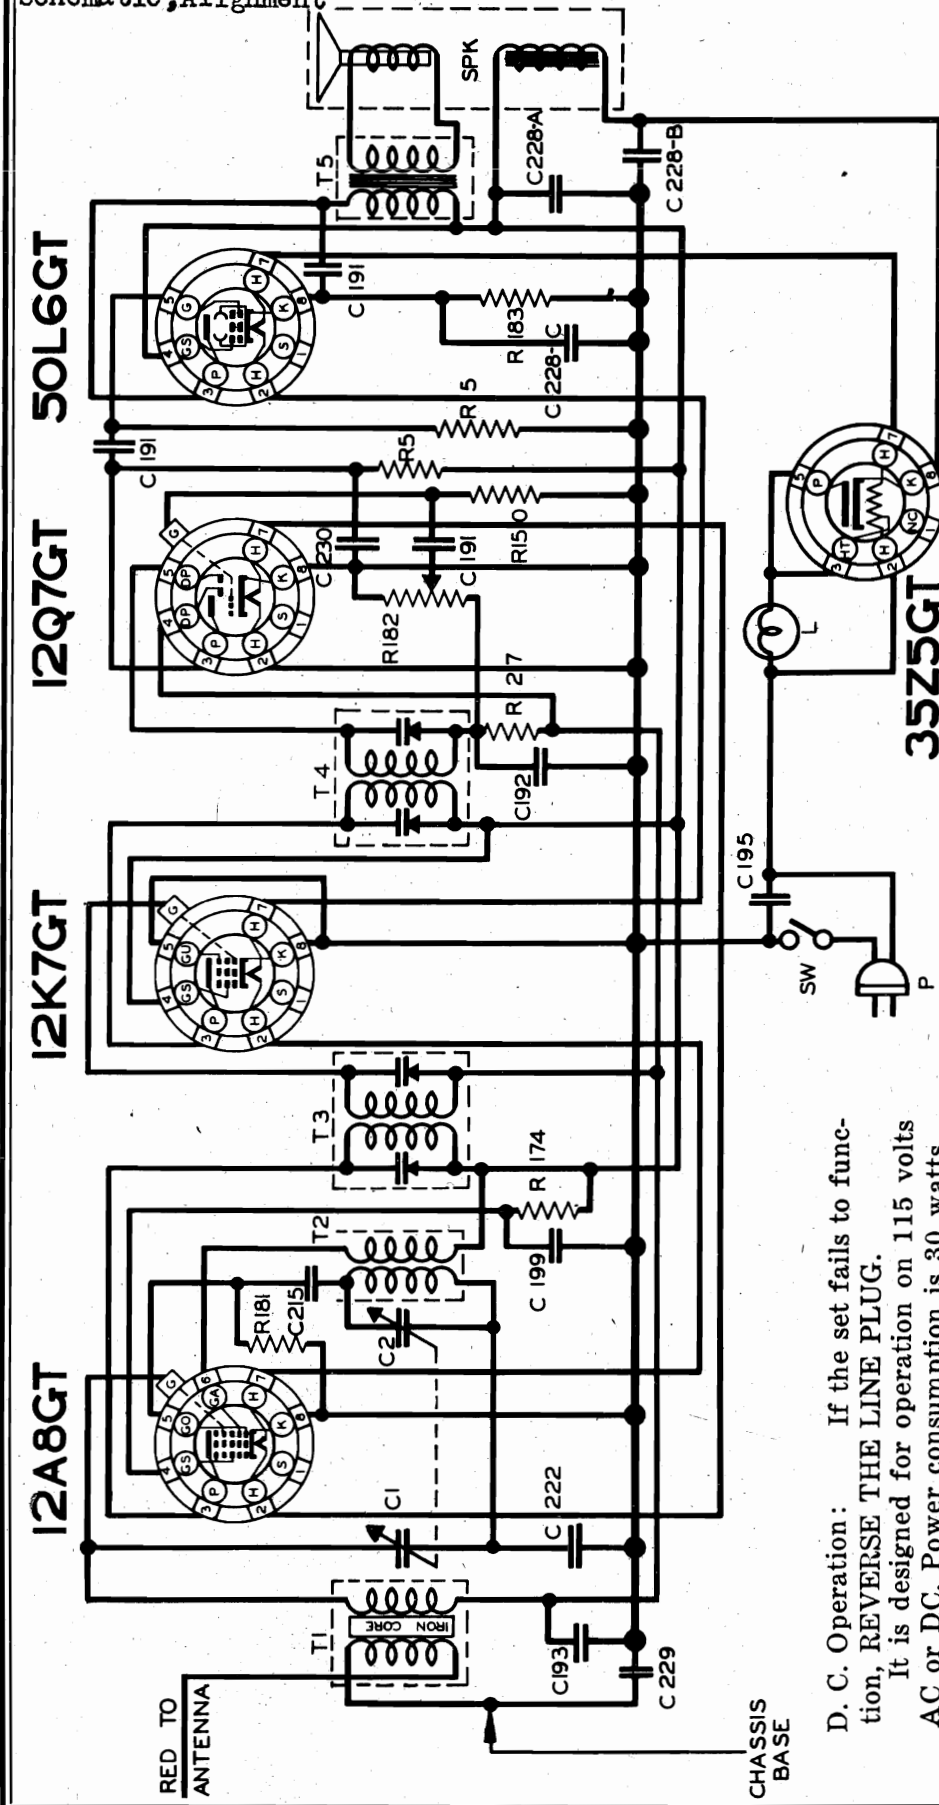


D. C. Operation : If the set fails to function, REVERSE THE LINE PLUG.
It is designed for operation on 115 volts AC or DC. Power consumption is 30 watts.

RESISTORS		CONDENSERS		TRANSFORMERS		MISCELLANEOUS UNITS	
R	OHM W PART NO.	C	CAPACITY VOLT	T	TYPE PART NO.	SYMBOL	DESCRIPTION PART NO.
5	500K 1/4 17-2070	1	TWO-GANG	1	ANTENNA COIL 00-16320	L	DIAL LIGHT BULB - MAZDA NO. 51 17-13904
27	2M 1/4 17-4786	2	VARIABLE	2	OSCILLATOR COIL 00-16321	P	LINE CORD & PLUG ASSEMBLY 17-16371
150	5M 1/4 17-14242	191	.01	3	FIRST I.F. COIL 00-16322	SPK	SPEAKER ASSEMBLY 17-16344A
174	20K 1/4 17-14291	192	.00025	4	SECOND I.F. COIL 00-16323	SW	LINE SWITCH 17-14315
181	100K 1/4 17-14303	193	.05	5	OUTPUT TRANS. 00-16324		
182	1M 1/4 17-14315	195	.05				
183	150 1/4 17-14316	199	.02				
		215	.0001				
		222	.2				
		228A	10 MFD.				
		228B	20 MFD.				
		229C	2.0 MFD.				
		229	.02				
		230	.0005				

I.F. PEAK 455 K.C.
BALANCE 1400 K.C. - CHECK AT 600K.C.
NOBLITT-SPARKS INDUSTRIES, INC.,
COLUMBUS, INDIANA
MODEL 502, 502A CHASSIS RE-48.


Model 610
Tuner Data

MODELS 510, Chassis RE-54
NOBLITT-SPARKS INDUSTRIES, INC. 610, Chassis RE-58
Schematic, Socket, Trimmers

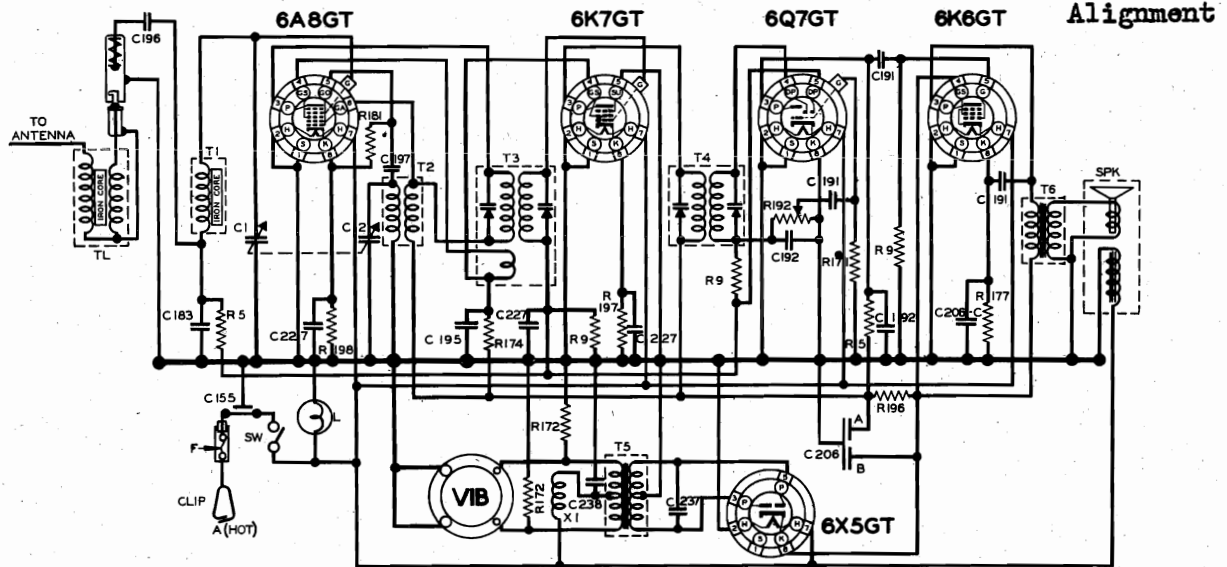

IF PEAK 455 KC
FREQUENCY RANGE 1575 TO 540 K.C.
NOBLITT-SPARKS INDUSTRIES, INC.,
COLUMBUS, INDIANA.

ARVIN CAR RADIO
CHASSIS RE 54, RE 58.

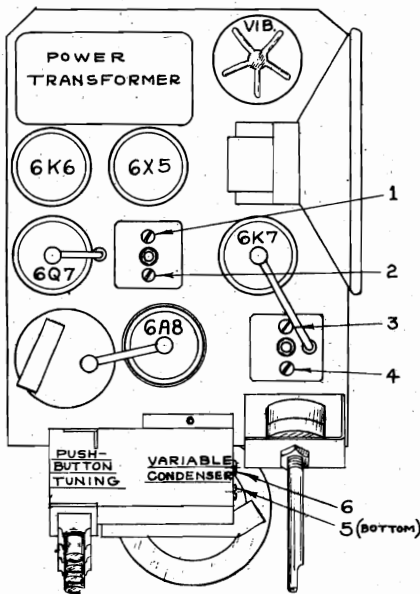

MODEL 610


Model 610 PUSH BUTTON ADJUSTMENT:

Any button may be set to any station desired. First, tune in the desired station by means of the thumb wheel. Second, turn the push button counter-clockwise two full turns. Then depress this button the full length of its stroke, and while depressed, tighten the button again by turning it clockwise. The button may now be released. To check the correct setting for this button, turn the thumb wheel to some other point and depress the push button. This will return the tuning mechanism to the station just set up. If it does not, repeat the foregoing sequence of operations more carefully. Each of the remaining buttons may be set to other stations in a like manner.

RESISTORS				CONDENSERS			
R	OHMS	W	PART NO.	C	CAPACITY	VOLT	PART NO.
3	300K	1/4	17-2070	1	TWO-GANG		17-16431
5	1M	1/4	17-2085	2	VARIABLE		17-16432
171	15M	1/4	17-14288	155	.0002	200	17-14217
172	100	1/4	17-14289	237	.005	1200	17-14345
174	20K	1/4	17-14291	204A	10 MFD.	300	17-14297
177	850	1/4	17-14288	206C	20 MFD.	35	
181	100K	1/4	17-14205	191	.01	400	17-14272
182	1M	1/4	17-14242	192	.00035	600	17-14273
198	500	1/4	17-14340	183	.003	800	17-14286
197	800	1/4	17-14342	185	.03	400	17-14276
196	400	1/4	17-14343	188	.1	200	17-14277
				197	.0001	400	17-14278
				236	.2	150	17-14344
				237	.05	200	17-14343

T-X	TYPE	PART NO.
1	ANTENNA COIL	00-18441
2	OSCILLATOR COIL	00-18442
3	FIRST I.F. COIL	00-18443
4	SECOND I.F. COIL	00-18444
5	POWER TRANS.	00-18448
6	OUTPUT TRANS.	00-18445
X	CHOC	
1	SUPPRESSION CHOC	20-18457

SYMBOL	DESCRIPTION	PART NO.
F	FUSE - 20 AMP	17-2228
L	DIAL LIGHT BULB - MAZDA NO 44	17-13605
SPK	SPEAKER ASSEMBLY	17-16456
SW	POWER SWITCH	17-16422
TL	TRANSMISSION LINE	00-18446
VIB	VIBRATOR	17-14747

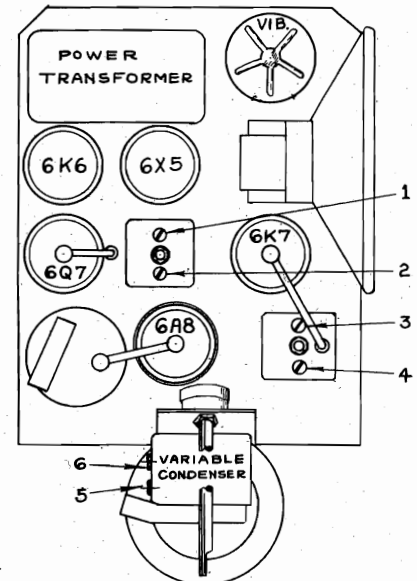

MODEL 510

BALANCING INSTRUCTIONS:

All sensitivities given for 1/2 watt output = 1.4 V. across Voice Coil

Operation No.	Connect Bal. Oscillator to	Bal. Oscillator Frequency	Adjust Padder No.	Dial Setting	Sensitivity
1	6A8 Grid	455	1, 2, 3 & 4	550 KC	50 uv
2	Ant. Coupler Through 20 uuf	1400	5	1400	
3	"	1400	6	1:00	10 uv


MODELS 510,610
 MODEL 710
 MODEL 810

NOBLITT-SPARKS INDUSTRIES, INC. Antenna Data, Tuner Noise Elimination


MOTOR INTERFERENCE ELIMINATION:
 (See Fig. 5 & 6)

If after following the installation instructions in detail objectionable motor noise is encountered the following interference elimination procedure should be followed.
 A standard distributor suppressor must be installed in series with the center high tension coil lead as close to the distributor as possible. This suppressor is not used with Ford V8 automobiles.
 The generator condenser should be installed on the car generator as illustrated and between the ammeter or ignition switch terminal and the grounded metal instrument panel.
 This interference elimination material can be obtained from your local Arvin Jobber.
 The "A" lead from the receiver should be connected to the ammeter terminal of the car or to some other convenient point such as the ignition switch terminal in the Ford V8.

The two front mounting bolts are 1 1/4 inches long to permit the Ford V8 installation shown in Figure 4. For other installations such as shown in Figure 3 these bolts may be cut down to 3/4 inches if desired to facilitate installation.

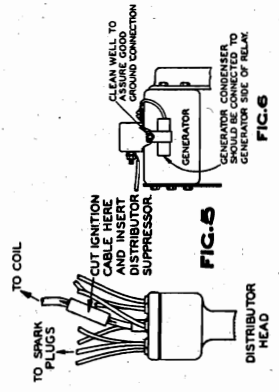


Antenna is included in the packing list. In installations other than the Ford V8 this spacer may be found useful in spacing away from the lip of the instrument panel one side of the radio (where the

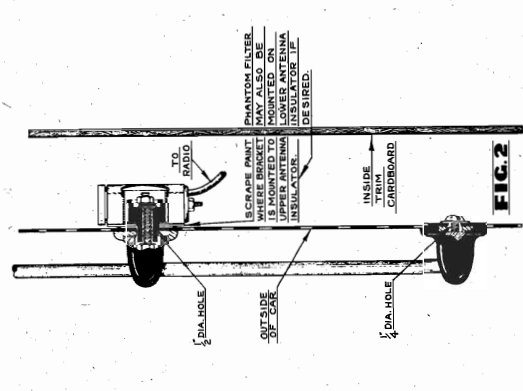

DESCRIPTION:
 The Arvin Model 510 is a five-tube single unit Car Radio Receiver. This receiver is designed to mount under the lower edge of the instrument panel on all makes of cars.

Tuning is accomplished by rotating the calibrated thumb wheel on the lower front of the radio. Directly above the thumb wheel is located the volume control knob which also serves as the On-Off switch.

ANTENNA:
 Arvin Antennas A25, A26, A27 and A28 are recommended for use with the Model 510 Arvin

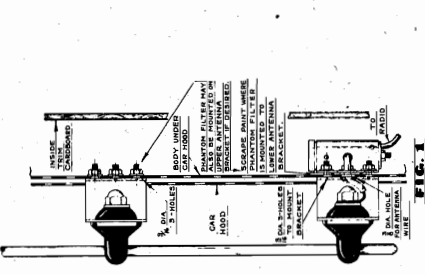

Car Radio. If either the A25 or A26 antenna is selected the installation of the Phantom Filter to the antenna should be made as illustrated in Figure 1. If a side cowl type (A27 or A28) is selected the installation should be made as shown in Figure 2. Each antenna package has included in it detailed information as to the size and location of mounting holes.

INSTALLATION:
 This receiver may be installed by securing it to the instrument panel of the car with the screws supplied in the hardware package. The rear end of the radio is supported by a perforated mounting bracket which may be bent to fit any installation requirement.

Illustrations in Figure 3 are representative of an average installation. Precaution should be taken, however, that the radio, when installed, does not interfere with the operation of the brake, clutch, cowl vent or emergency brake lever, and ample room for future installation for an Arvin Hot Water Heater should be allowed.
 Ford V8 automobiles built in 1938 and 1939 require a special installation which is illustrated in Figure 4. The necessary spacer for this instal-

lip of the instrument panel is not horizontal). In this case the spacer may be cut to the proper length with a hack saw. The spacer may also be cut into two equal lengths and used to space the entire front portion of the radio down from the lip of the instrument panel in order to avoid a projection of some sort such as a toggle switch.



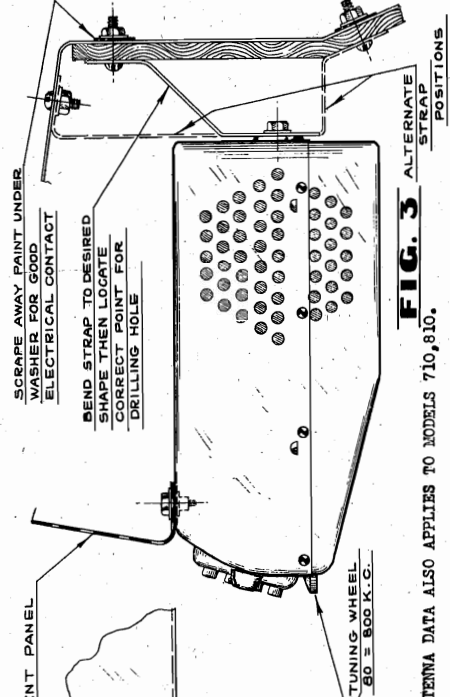


FIG. 4

FIG. 3 ALTERNATE STRAP POSITIONS

NOTE: This data also applies to the PUSH BUTTON MODEL 610 CHASSIS RE-56. ANTENNA DATA ALSO APPLIES TO MODELS 710, 810.

NOBLITT-SPARKS INDUSTRIES, INC MODELS 602, 602A
 Chassis RE-53
 Schematic, Alignment

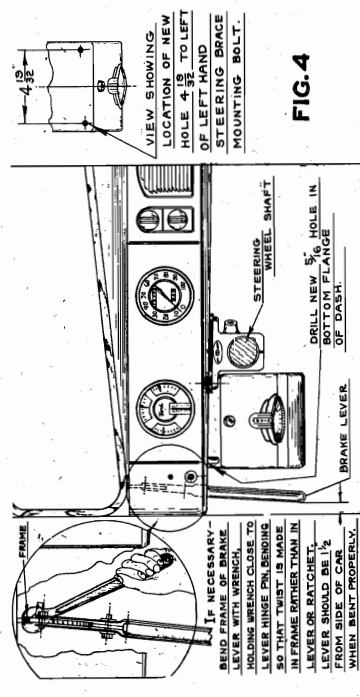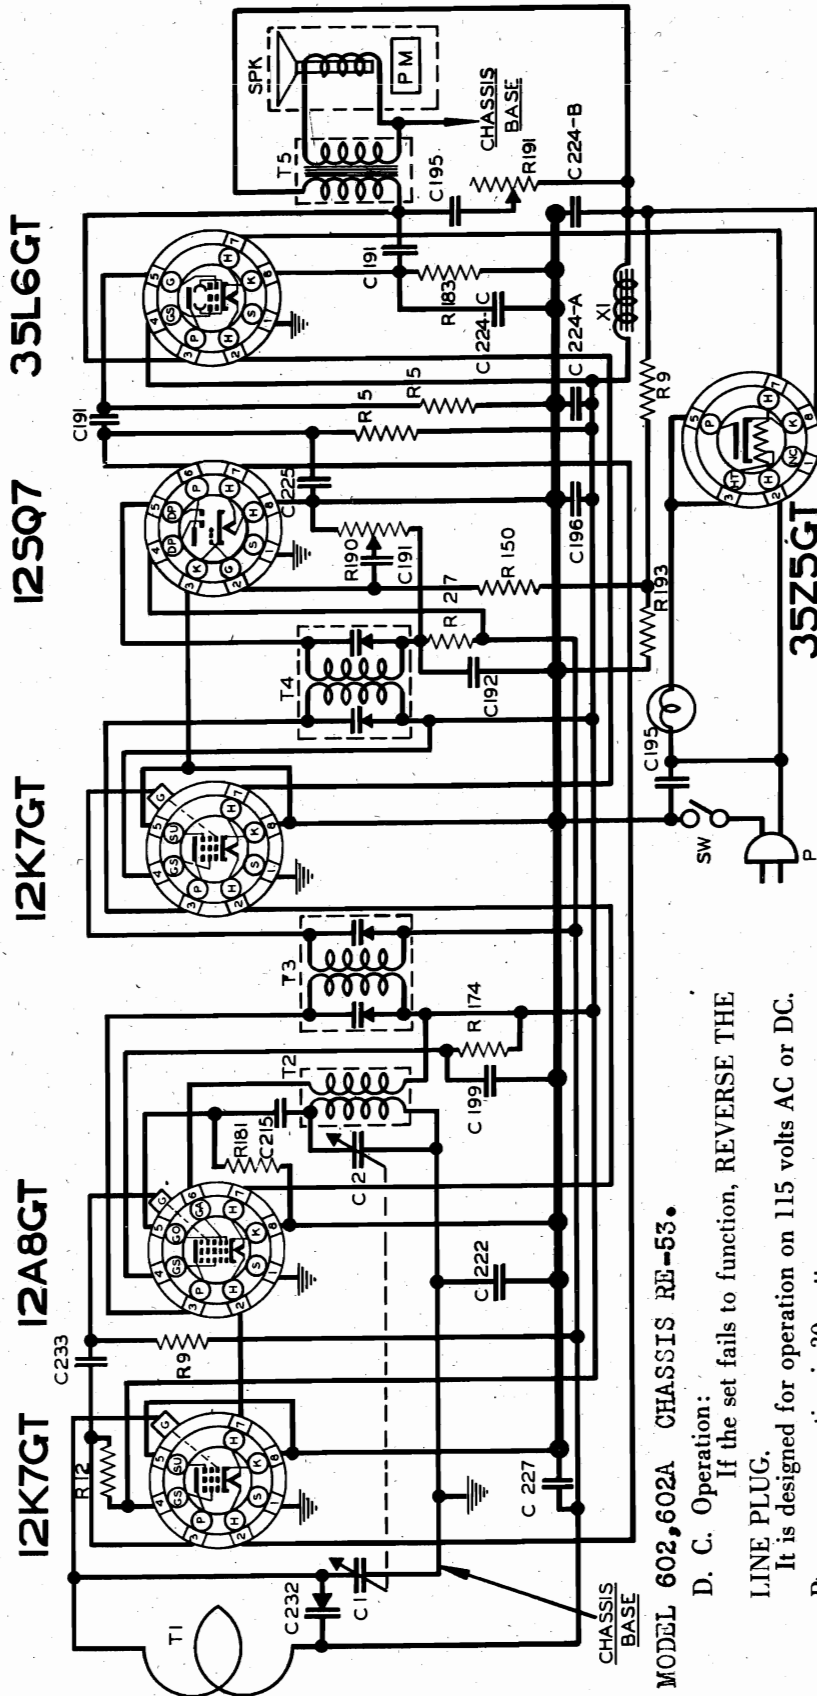

MODEL 602, 602A CHASSIS RE-53.


D. C. Operation:
 If the set fails to function, REVERSE THE
 LINE PLUG.
 It is designed for operation on 115 volts AC or DC.
 Power consumption is 30 watts.

RESISTORS		CONDENSERS		TRANSFORMERS & CHOKES		MISCELLANEOUS UNITS	
R	OHM W	C	CAPACITY	T	TRANSFORMER	SYMBOL	MISCELLANEOUS UNITS
5	500K 1/4	1	TWO-GANG	1	ANTENNA LOOP	L	DIAL LIGHT BULB - MAZDA 47
9	1M 1/4	2	VARIABLE	2	OSCILLATOR COIL	P	LINE CORD & PLUG ASSEMBLY
12	10K 1/4	191	.01	3	FIRST I.F. COIL	SPK	PERMANENT MAGNET SPEAKER
27	10K 2M 1/4	192	.00025	4	SECOND I.F. COIL	SW	LINE SWITCH (SEE VOLUME CONTROL)
150	5M 1/4	195	.05	5	OUTPUT TRANS.		
174	20K 1/4	196	.1				
181	100K 1/4	199	.02	X	CHOKES		
183	150 1/4	215	.0001	1	IRON CORE CHOKES		
190	1M 1/4	222	.2				
191	100K 1/4	224A	10 MFD.				
193	2K 1/4	224B	20 MFD.				
		224C	10 MFD.				
		225	.0005				
		227	.05				
		232	2-20 UUF				
		233	.000035				

I.F. PEAK 455 K.C.
 BALANCE 1400 K.C. - CHECK AT 600K.C.
 NOBLITT-SPARKS INDUSTRIES, INC.,
 COLUMBUS, INDIANA

MODEL 702
Chassis RE-56
Schematic, Tuner
Alignment

NOBLITT-SPARKS INDUSTRIES, INC.

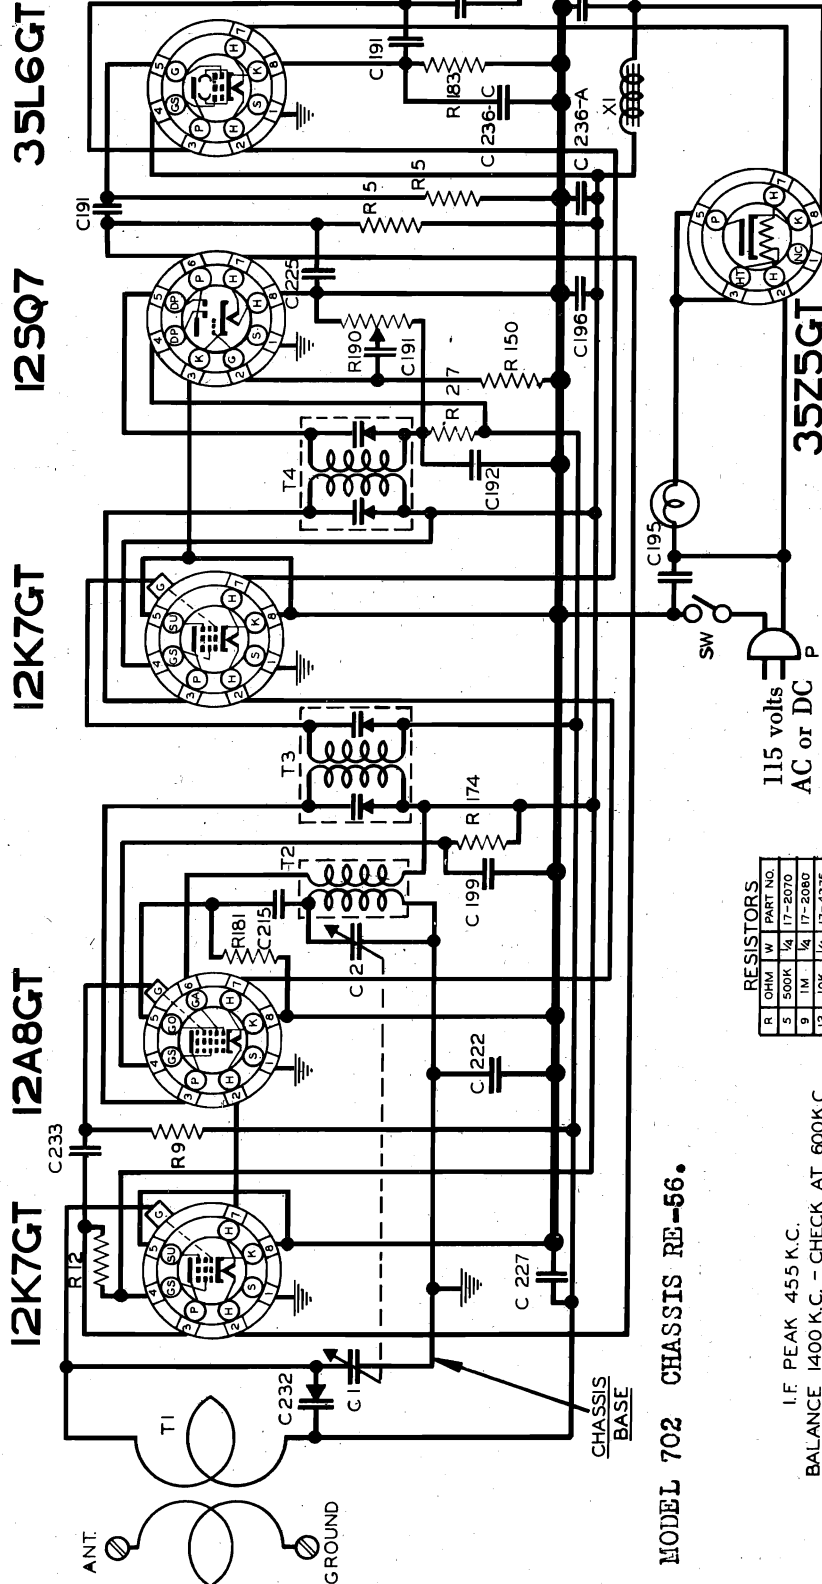

MODEL 702 CHASSIS RE-56.

I.F. PEAK 455 K.C.

BALANCE 1400 K.C. - CHECK AT 600K.C.

Power consumption is 30 watts.

Push Button Adjustment:

Any button may be set up for any station desired. First, tune in the desired station by means of the manual tuning control. Second, turn the push button counter-clockwise two full turns. Then depress this button the full length of its stroke, and while depressed, tighten the button again by turning it clockwise. The button may now be released. To check the correct setting for this button, turn the manual control to some other point and depress the push button. This will return the tuning mechanism to the station just set up. If it does not, repeat the foregoing sequence of operations more carefully. Each of the remaining buttons may be set to other stations in a like manner.

RESISTORS

R	OHM	W	PART NO.
5	500K	1/4	17-2070
9	1M	1/4	17-2080
12	10K	1/4	17-4275
27	5M	1/4	17-4788
150	2M	1/4	17-4242
174	100K	1/4	17-4320
181	100K	1/4	17-4303
183	150	1/4	17-4336
190	1M	1/4	17-16521
191	100K	1/4	17-16520

MISCELLANEOUS UNITS


SYMBOL	MISCELLANEOUS UNITS	PART NO.
L	DIAL LIGHT BULB - MAXIDA 47	17-16376
P	LINE CORD & PLUG ASSEMBLY	17-16336
SPK	PERMANENT MAGNET SPEAKER	17-16516
SW	LINE SWITCH (SEE VOLUME CONTROL)	17-16521

CONDENSERS

C	CAPACITY	VOLT	PART NO.
1	TWO-GANG		17-16513
2	VARIABLE	400	17-14272
132	50025	600	17-14273
195	.05	400	17-14278
196	.1	200	17-14277
199	.02	200	17-14283
215	.0001	500	17-14310
222	.2	400	17-14317
236A	20 MFD.	150	17-14344
236B	40 MFD.	150	17-14344
236C	20 MFD.	25	
225	.0005	600	17-14321
227	.05	200	17-14323
233	2-20 UUF	PAD	17-14355
233	200035	500	17-14336


TRANSFORMERS & CHOKES

T	TRANSFORMER	PART NO.
1	ANTENNA LOOP	00-16530
2	OSCILLATOR COIL	00-16404
3	FIRST I.F. COIL	00-16531
4	SECOND I.F. COIL	00-16532
5	OUTPUT TRANS.	00-16533
X	CHOKES	
1	IRON CORE CHOKES	00-16534

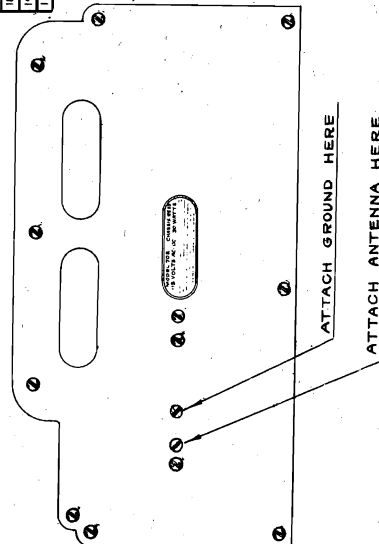

NOBLITT-SPARKS INDUSTRIES, INC.
ARVIN CAR RADIO CHASSIS RE-59

MODEL 710,
Chassis RE-59
MODEL 810,
Chassis RE-60
Schematics

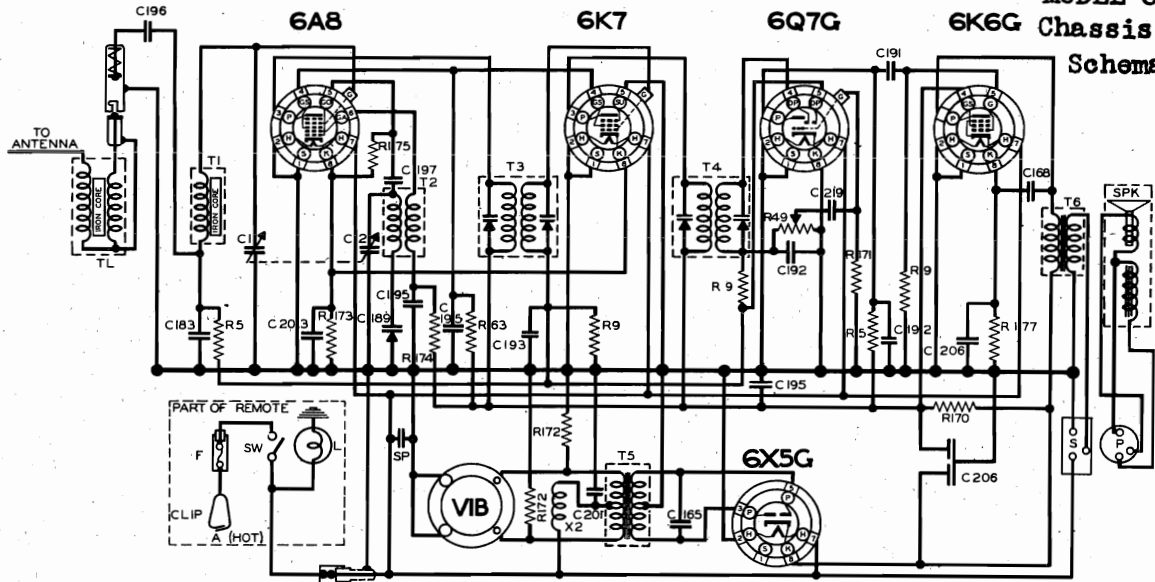


ARVIN MODEL 710 CAR RADIO

RESISTORS		CONDENSERS		CHOKES & TRANSFORMERS		MISCELLANEOUS UNITS	
R (OHMS) W PART NO	C CAPACITY VOLT PART NO	T-X TYPE PART NO	SYMBOL	DESCRIPTION	PART NO		
3 500K 1/4 17-2070	1 TWO-GANG 25 ⁰ 254	1 ANTENNA COIL 00-18218	F	FUSE - 20 AMP	17-2228		
9 1M 1/4 17-2080	2 VARIABLE 17-14230	2 OSCILLATOR COIL 00-18220	L	DIAL LIGHT BULB - MAZDA NO 51	17-1304		
19 500K 1/4 17-14238	181 205 1500 17-14230	3 FIRST I.F. COIL 00-18223	P	SPEAKER PLUG	17-4782		
53 25K 1/4 17-14091	183 .003 500 17-14294	4 SECOND I.F. COIL 00-18264	S	SPEAKER SOCKET	17-15631		
170 800 1/4 17-14287	189 .0005 PAD 17-14286	5 POWER TRANS. 00-18265	SPK	SPEAKER ASSEMBLY	17-18517		
171 15K 1/4 17-14288	191 .01 400 17-14272	6 OUTPUT TRANS. 00-18266	SW	POWER SWITCH	17-14747		
172 100 1/4 17-14289	192 .00025 500 17-14273	X CHOKES	TL	TRANSMISSION LINE	00-18233		
173 200 1/4 17-14290	193 .05 200 17-14274	2 SUPPRESSION CHOKES 29-13459	SP	SPARK PLATE			
174 20K 1/4 17-14291	195 .05 400 17-14278		VIB	VIBRATOR	17-14747		
175 40K 1/4 17-14292	196 1 250 17-14277						
177 650 1/4 17-14296	197 .0001 500 17-14278						
	219 .003 200 17-14312						
	201 .2 150 17-14285						
	203 2 200 17-14242						
	204 0-20MFD 300 17-14297						
	206 250MFD 15 17-14297						
	168 502 400 17-14234						

I.F. PEAK 455 K.C.
FREQUENCY RANGE 1575 TO 540 K.C.
NOBLITT-SPARKS INDUSTRIES, INC.,
COLUMBUS, INDIANA.

ARVIN CAR RADIO CHASSIS RE-60

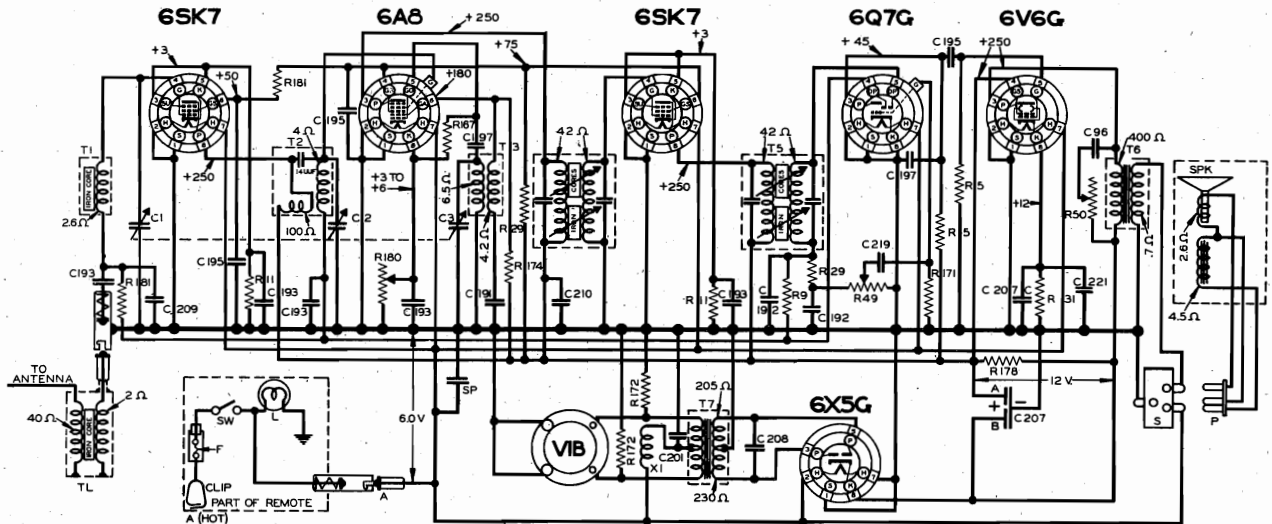

ARVIN MODEL 810 CAR RADIO

NOTE - ALL VOLTAGES GIVEN
FOR 7" INPUT 6 VOLTS.
ALLOW ±10% ON ALL
VOLTAGES & RESISTANCES
OF WINDING.


RESISTORS		CONDENSERS		CHOKES & TRANSFORMERS		MISCELLANEOUS UNITS	
R (OHMS) W PART NO	C CAPACITY VOLT PART NO	T-X TYPE PART NO	SYMBOL	DESCRIPTION	PART NO		
3 500K 1/4 17-2070	1 THREE-GANG 25 ⁰ 254	1 ANTENNA COIL 00-18-00	F	FUSE - 20 AMP	17-2228		
9 1M 1/4 17-2080	2 GANG 17-19724	2 OSCILLATOR COIL 00-18-01	L	DIAL LIGHT BULB - MAZDA NO 51	17-1304		
11 5K 1/4 17-422	3 VARIABLE 17-14312	3 I.F. COIL 00-18-02	P	SPEAKER PLUG	17-4782		
28 50K 1/4 17-2080	181 25 400 17-14312	4 FIRST I.F. COIL 00-18-03	S	SPEAKER SOCKET	17-15631		
31 280 1/4 17-2088	182 .01 500 17-14308	5 SECOND I.F. COIL 00-18-04	SPK	SPEAKER ASSEMBLY	17-18510		
49 500K 1/4 17-4536	183 .00025 500 17-14312	6 OUTPUT TRANS. 00-18-05	SW	POWER SWITCH	17-14747		
50 100K 1/4 17-4538	184 .00025 500 17-14312	7 POWER TRANS. 00-18-06	SP	SPARK PLATE	00-18307		
187 80K 1/4 17-4281	185 .05 200 17-14281	X CHOKES	TL	TRANSMISSION LINE	00-18307		
171 15K 1/4 17-14288	186 .01 400 17-14281	1 SUPPRESSION CHOKES 29-13308	VIB	VIBRATOR	17-14747		
174 200 1/4 17-14291	187 .0001 500 17-14281						
178 1200 1/4 17-14292	201 2 200 17-14291						
172 100 1/4 17-14289	202 0.001 500 17-14303						
180 2000 1/4 17-14302	203 .00125 500 17-14303						
181 100K 1/4 17-14303	204 1 400 17-14304						
	205 .00025 500 17-14304						
	206 250 200 17-14312						

INTERMEDIATE FREQUENCY 170 K.C.
FREQUENCY RANGE 1570 TO 540 K.C.
NOBLITT-SPARKS INDUSTRIES, INC.,
COLUMBUS, INDIANA.

Alignment

NOBLITT-SPARKS INDUSTRIES, INC.

MODEL 802
Chassis RE-57
Schematic

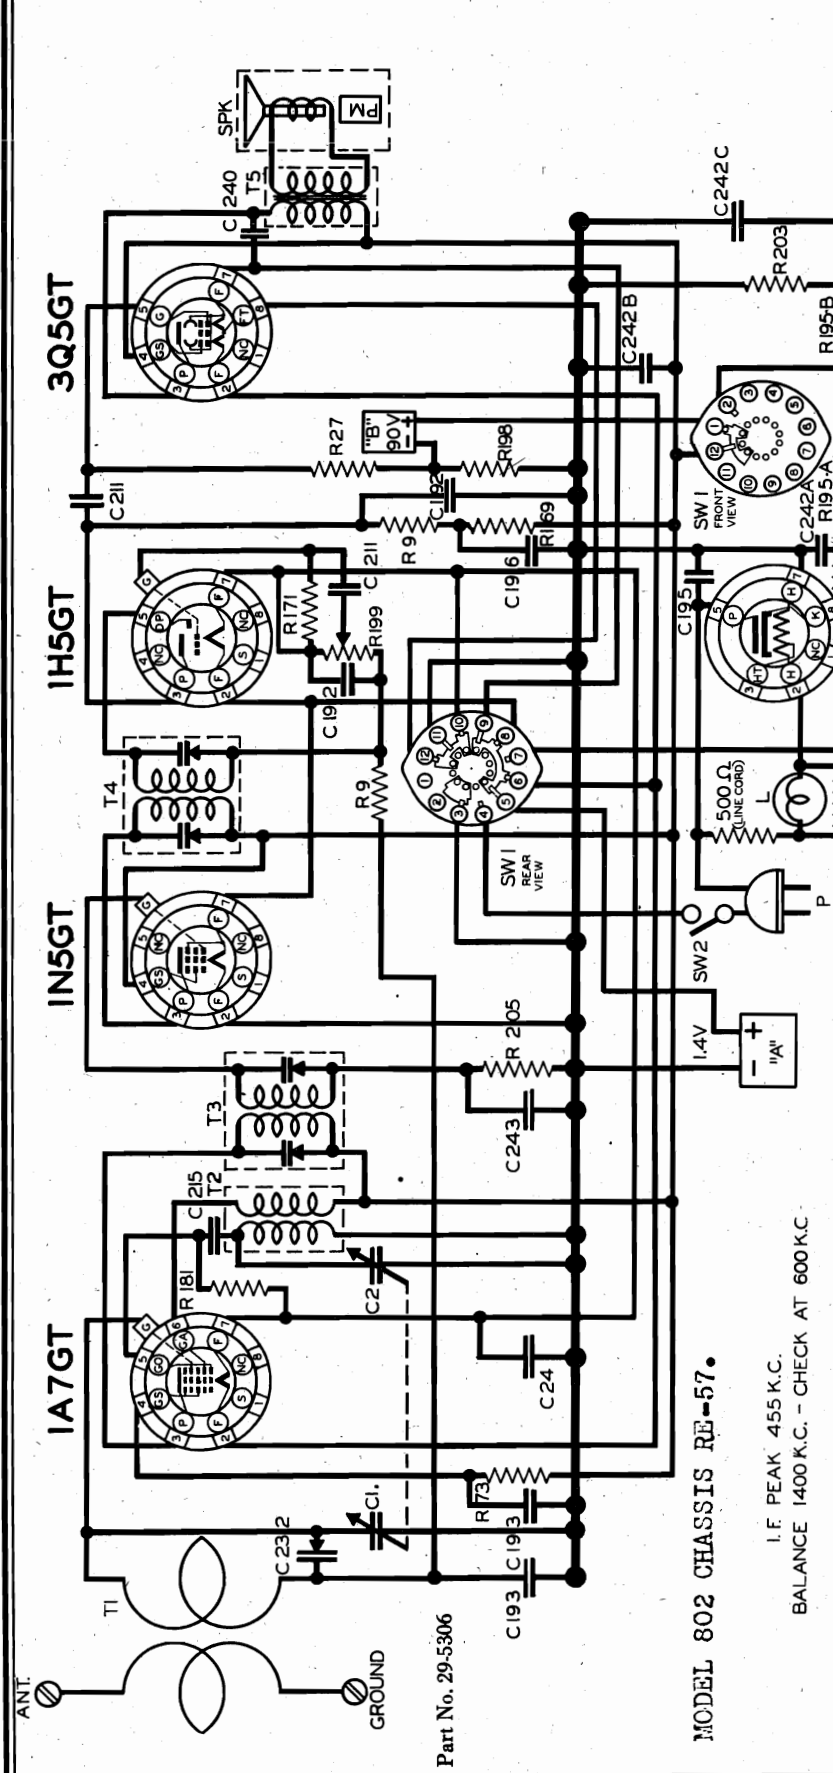

Part No. 29-5306

MODEL 802 CHASSIS RE-57.

I.F. PEAK 455 K.C.
BALANCE 1400 K.C. - CHECK AT 600 K.C.

RESISTORS		CONDENSERS	
R	OHM W	C	CAPACITY
9	1M	1	TWO-GANG
27	2M	2	VARIABLE
73	30K	192	.00025
169	150K	193	.05
171	15M	194	.05
172	100	198	.1
181	100K	211	.01
184	460	215	.0001
185	1500	232	2-20 UUF
198	400	24	.5
199	1M	240	.003
203	450	242A	.05
193	2K	242B	.20
205	3M	242C	100
		243	.002

NOTE - CHANGE OVER SWITCH SHOWN IN BATTERY OPERATION POSITION.

BALANCING INSTRUCTIONS

All sensitivities given for 50 milliwatts output = .4 volts across Voice Coil.


The Arvin Model 802 is a five-tube Portable Radio Receiver designed to receive its operating power from either the self contained batteries in the receiver or a 115 volt AC or DC circuit.

Operation No.	Connect Bal. Oscillator to	Balance Oscillator Frequency	Adjust	Dial Setting
1	1A7 Grid	455 kc	1st & 2nd I. F. Trimmers	550 kc
2	Ant Post Through 20 uuf	1400 kc	Osc. Trimmer	1400 kc
3	Ant Post Through 20 uuf	1400 kc	Ant Trimmer	1400 kc

TRANSFORMERS		MISCELLANEOUS UNITS	
T	TYPE	SYMBOL	DESCRIPTION
1	ANTENNA LOOP	A	1.5 VOLT "A" BATTERY
2	OSCILLATOR COIL	B	TWO 45 VOLT "B" BATTERIES
3	FIRST I.F. COIL	L	DIAL LIGHT BULB - MAZDA 47
4	SECOND I.F. COIL	P	LINE CORD & PLUG ASSEMBLY
5	OUTPUT TRANS.	SPK	SPEAKER ASSEMBLY - 5" PERMANENT MAGNET
		SW1	AC DC - BATTERY SWITCH
		SW2	VOLUME CONTROL & LINE SWITCH

MODEL 803
 Chassis RE-63
 Schematic, Alignment

NOBLITT-SPARKS INDUSTRIES, INC.

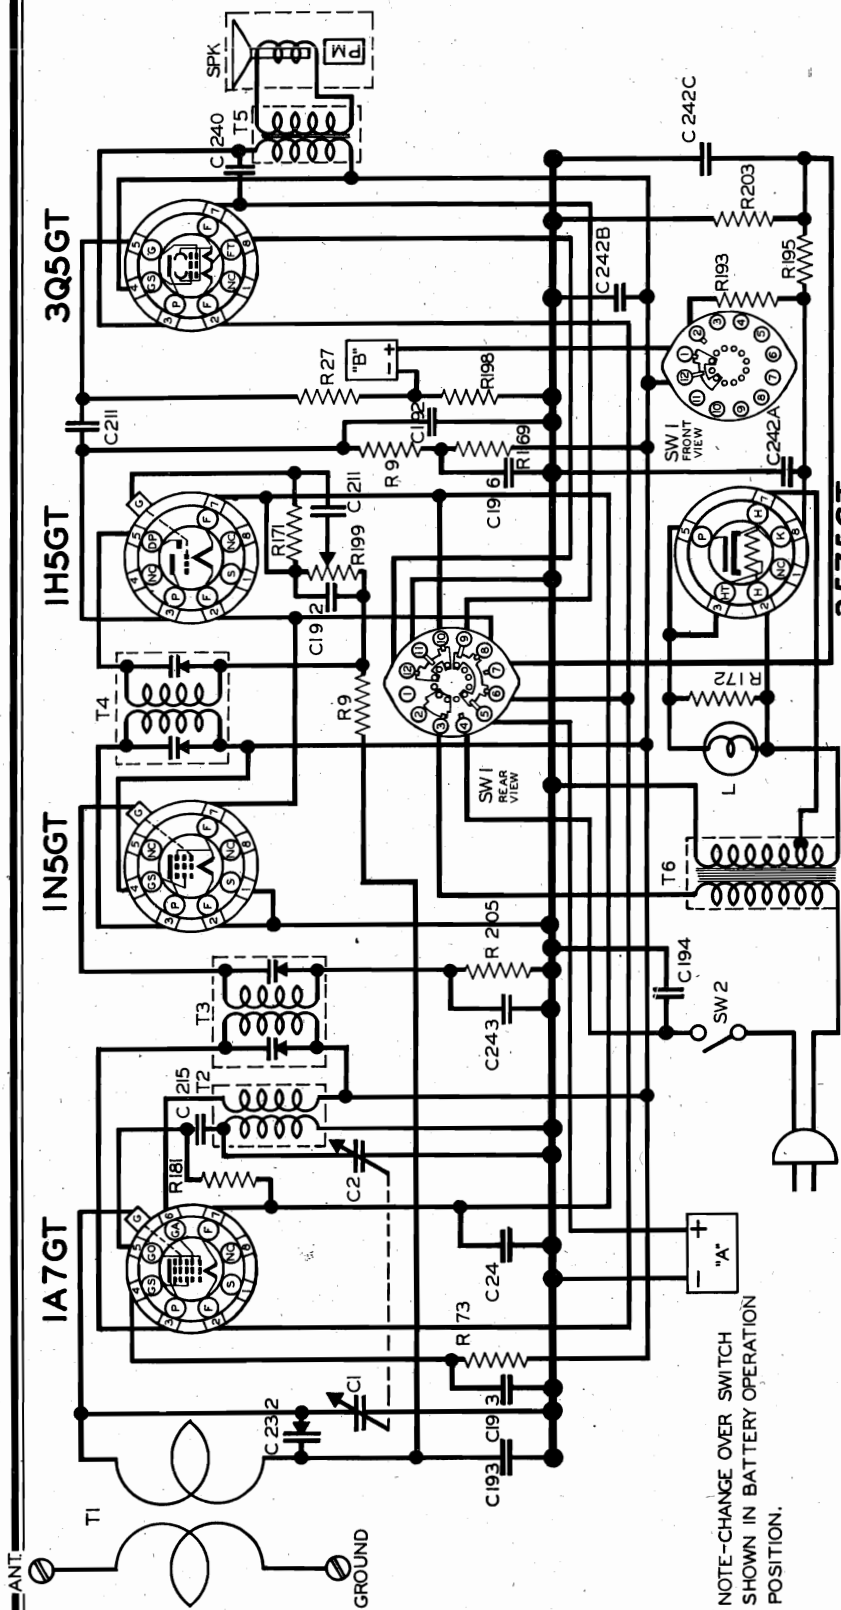

NOTE-CHANGE OVER SWITCH SHOWN IN BATTERY OPERATION POSITION.

I.F. PEAK 455 K.C.
 BALANCE 1400 K.C. - CHECK AT 600 K.C.
 NOBLITT-SPARKS INDUSTRIES, INC.,
 COLUMBUS, INDIANA.

BALANCING INSTRUCTIONS

All sensitivities given for 50 milliwatts output = .4 volts across Voice Coil.


Operation No.	Connect Bal. Oscillator to	Balance Oscillator Frequency	Adjust	Dial Setting
1	1A7 Grid	455 kc	1st & 2nd I. F. Trimmers	550 kc
2	Ant Post Through 20 uuf	1400 kc	Osc. Trimmer	1400 kc
3	Ant Post Through 20 uuf	1400 kc	Ant Trimmer	1400 kc

TRANSFORMERS		MISCELLANEOUS UNITS	
T	TYPE	SYMBOL	DESCRIPTION
1	ANTENNA LOOP	A	1.5 VOLT "A" BATTERY
2	OSCILLATOR COIL	B	TWO 45 VOLT "B" BATTERIES
3	FIRST I.F. COIL	L	DIAL LIGHT BULB - MAZDA 47
4	SECOND I.F. COIL	P	LINE CORD & PLUG ASSEMBLY
5	OUTPUT TRANS.	SPK	SPEAKER ASSEMBLY - 5" P.M.
6	I POWER TRANS.	SW2	AC-DC BATTERY SWITCH
			VOLUME CONTROL & LINE SWITCH

RESISTORS		CONDENSERS	
R	OHM W	C	CAPACITY
9	1M	1	TWO-GANG
27	2M	2	VARIABLE
73	30K	24	.5
74	150K	25	.00025
75	15M	192	.00025
76	100K	193	.05
77	100K	194	.01
78	100K	195	.01
79	2K	200	17-14271
80	1/4	211	.01
81	1/4	212	.0001
82	1/4	213	.0001
83	1/4	214	2-20 UUF
84	1/4	215	400
85	1/4	216	400
86	1/4	217	150
87	1/4	218	20 MFD.
88	1/4	219	20 MFD.
89	1/4	220	100
90	1/4	221	200

OLDSMOBILE DIV.—GEN. MOTORS


MODEL 982161
Schematic

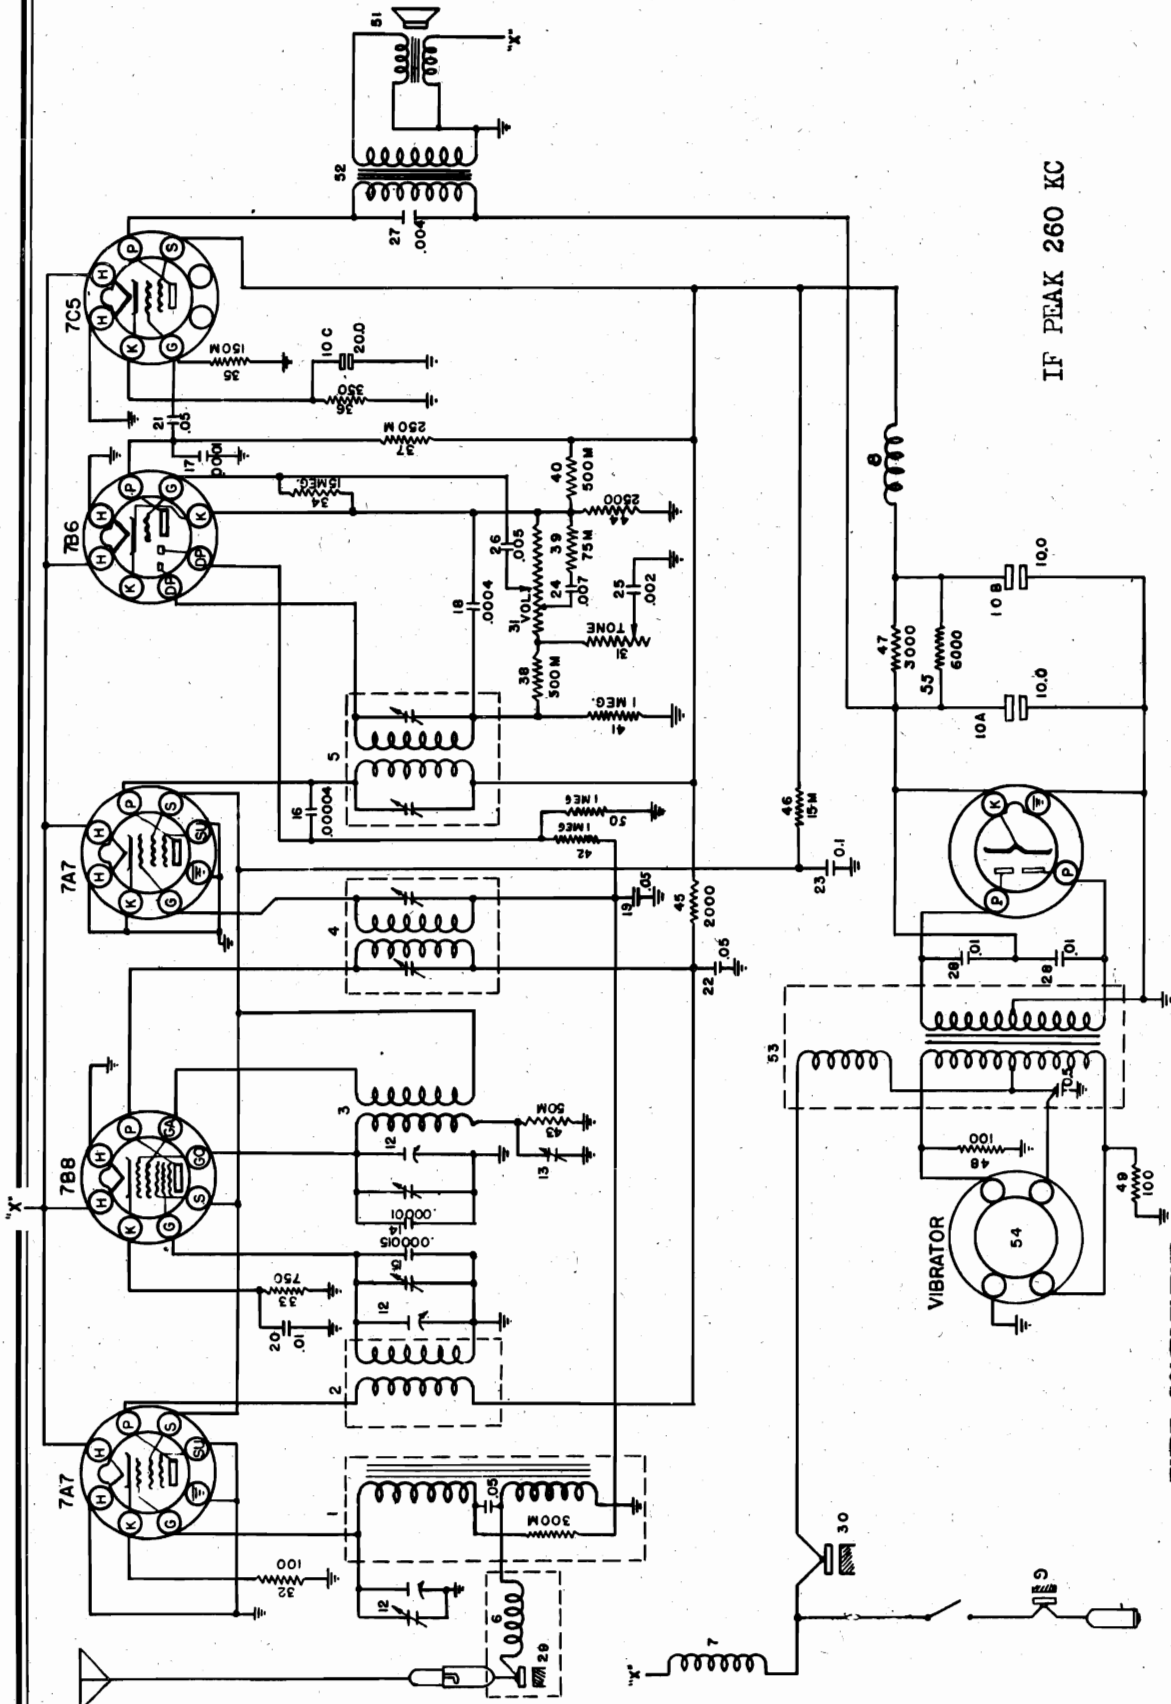

TUBE COMPLEMENT	
Type	Function
7A7	R-F Amplifier
7B8	Oscillator Modulator
7A7	I-F Amplifier
7B6	Detector AVC 1st Audio
7C5	Audio Power Output
OZ4	Rectifier


Olds Model 982161
Date: 1-12-40

MODEL 982161
 Alignment, Trimmers
 Chassis, Voltage
 OLDSMOBILE DIV.—GEN. MOTORS

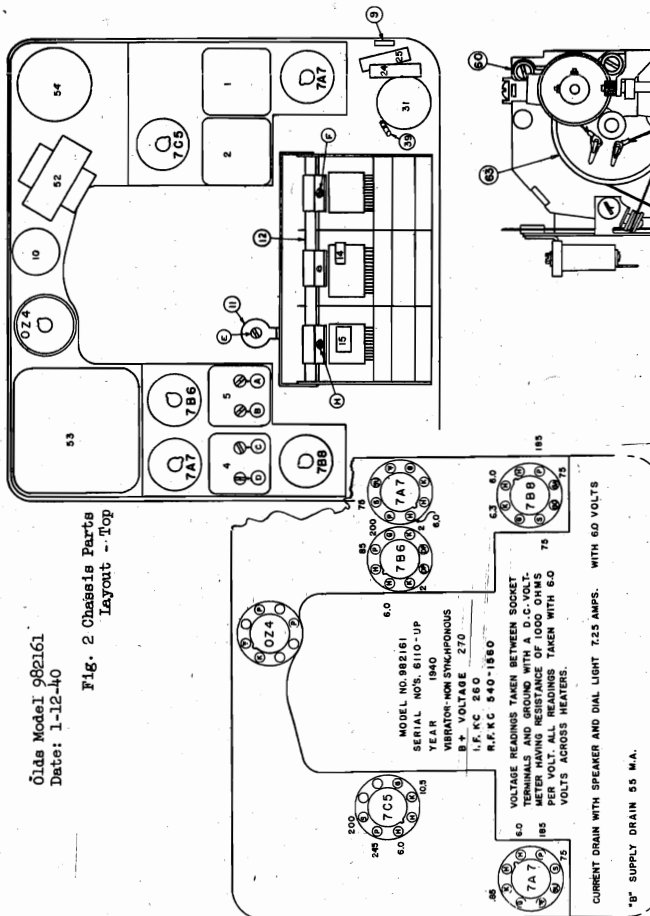

Olds Model 982161
 Date: 1-12-40

Fig. 2 Chassis Parts
 Layout - Top

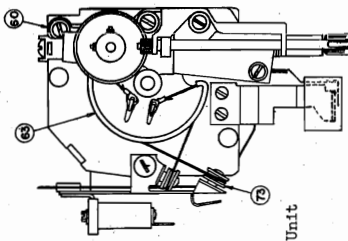

Tuning Control Unit

Fig. 4 Chassis Tube Voltage Chart

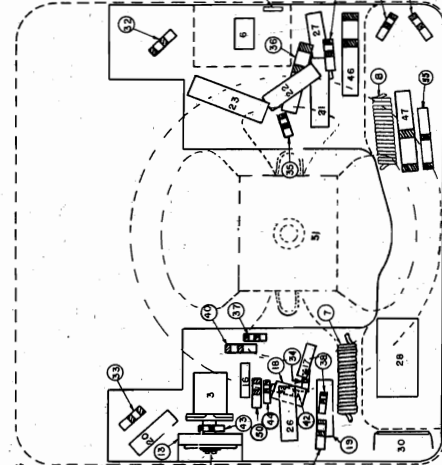


Fig. 3 Chassis Parts Layout - Bottom

CIRCUIT ALIGNMENT

An accurately calibrated test oscillator or signal generator and an output meter must be used to align the receiver circuits correctly. To make all alignment adjustments, the back cover must be removed. All trimmers except the oscillator series trimmer are readily accessible (See "A", "B", "C", "D", "E", "F", Fig. 2). The oscillator series trimmer ("J" Fig. 3) is adjusted through a hole in the side of the case.

1. I-F Alignment at 260 Kilocycles.
 - (a) Connect an output meter across the speaker field coil, leaving speaker connected.
 - (b) Connect the signal lead of the test oscillator to the gang condenser terminal to which condenser No. 15 is connected (Fig. 2).
 - (c) With the test oscillator set at exactly 260 K.C. adjust the I-F trimmers "A", "B", "C", and "D" until a maximum output is obtained. Re-check alignment several times with oscillator output signal low as possible for suitable output readings.
2. Alignment at 1560 Kilocycles.
 - (a) Connect the test lead of the test oscillator to the receiver antenna connection through a .00005 mfd. condenser.
 - (b) Turn the rotor plates of the gang condenser all the way out against the high frequency stop.
 - (c) Set the test oscillator to 1560 K.C.
 - (d) Adjust the oscillator trimmer "E" (Fig. 2) until a maximum output is obtained.
3. Alignment at 1400 Kilocycles.
 - (a) Leave the test oscillator leads connected the same as for alignment at 1560 Kilocycles. Set the test oscillator frequency at 1400 Kilocycles. Tune the set to this signal.
 - (b) Adjust the R-F trimmer "F" and the antenna trimmer "J" (Fig. 2) for maximum output.
4. Alignment at 600 Kilocycles.
 - (a) Leave the test oscillator leads connected the same as for alignment at 1400 K.C. Set the test oscillator frequency at 600 K.C.
 - (b) Tune set to this signal.
 - (c) Adjust the oscillator series trimmer "J" (Fig. 3) through the side of the case for maximum output, while rocking the tuning dial back and forth through the signal.
5. Realignment at 1560 and 1400 Kilocycles.


Repeat alignment of R-F and antenna sections of the gang condenser as outlined under paragraphs 2 and 3.
6. Adjusting Receiver to Car Antenna.

When the receiver leaves the factory the antenna circuit is closely aligned to match the capacity of the car antenna. However, due to variations in antenna capacity, it will be necessary with set installed in car, to adjust the antenna trimmer to match the car antenna. This should be done as follows:

 - (a) Make sure antenna lead is connected properly.
 - (b) Be sure the antenna is fully extended (all the way out).
 - (c) Turn set on and tune in a very weak station between 120 and 150 (near 150). Adjust the antenna trimmer "J" for maximum volume. Do not disturb the oscillator or the R-F trimmers in making this adjustment.

MODEL 301
Schematic, Alignment
Socket, Trimmers

PACIFIC RADIO CORP.

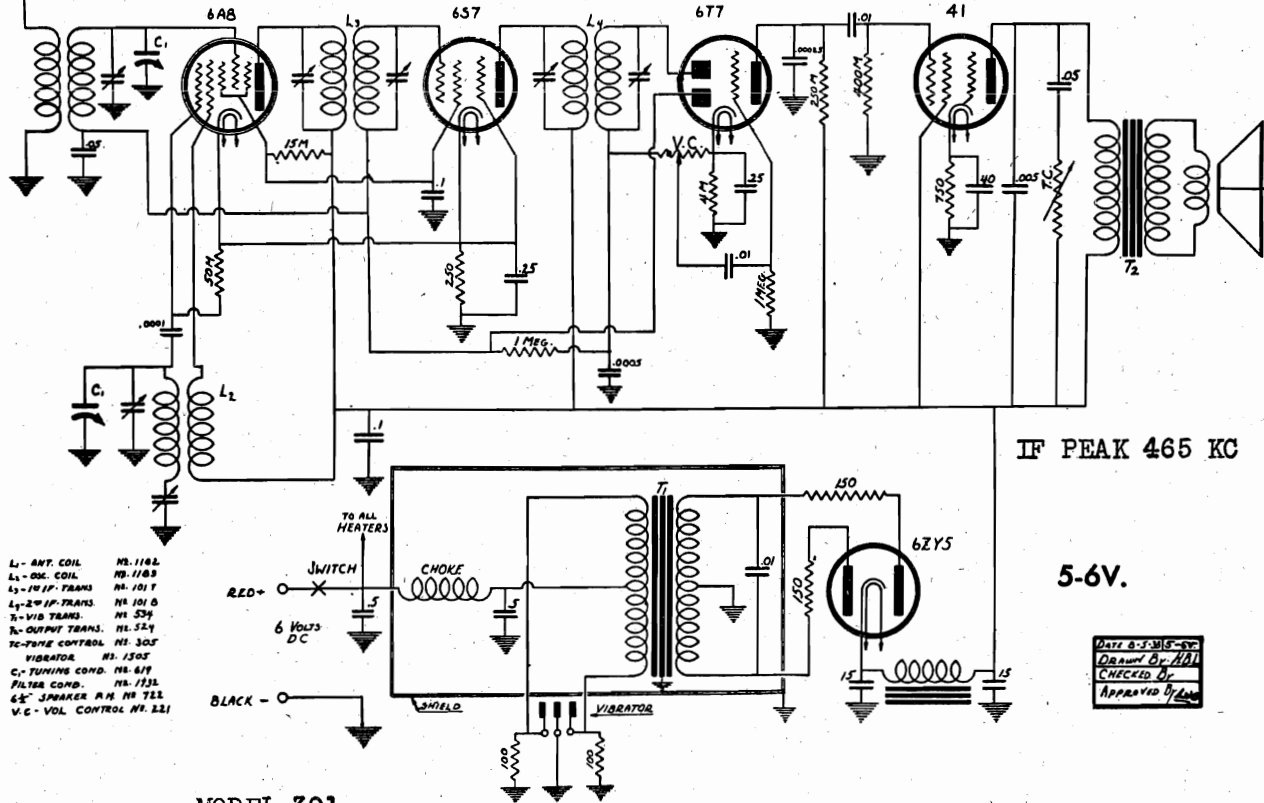


IF PEAK 465 KC

5-6V.

DATE 8-3-35-75
DRAWN BY HAI
CHECKED BY
APPROVED BY

MODEL 301

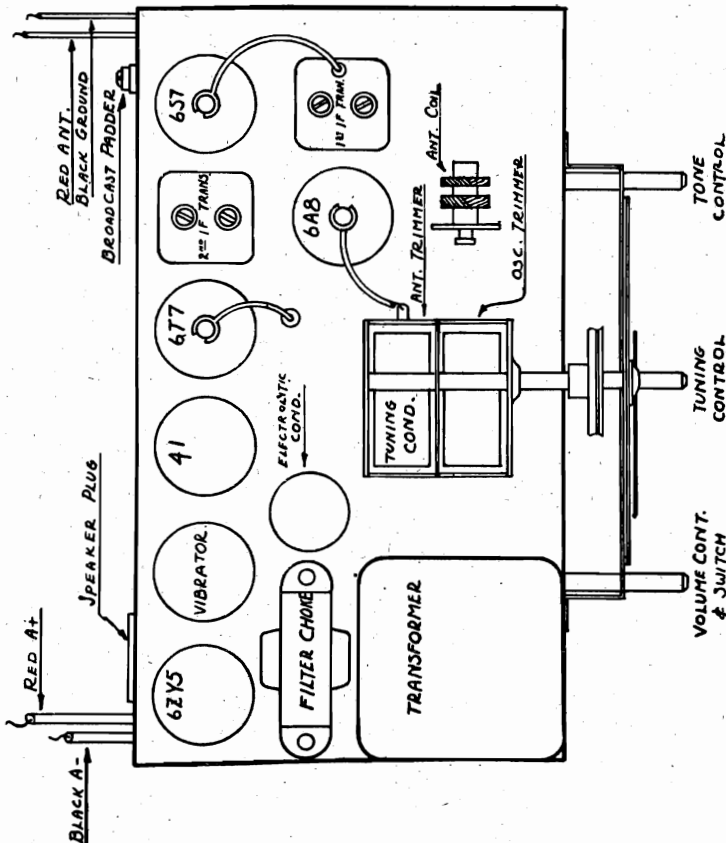



ALIGNMENT DATA

INTERMEDIATE FREQUENCY: Set oscillator to 465 KC. Feed this to the grid of the pentagrid (6A7) converter tube. Adjust trimmers on the intermediate frequency transformers for peak readings as indicated on the output meter which is to be placed across the output transformer.

BROADCAST BAND: Adjust oscillator to 1400 KC and connect the output of the generator to the antenna connection at the rear of the chassis through a .0002 mfd. mica condenser. Set the pointer on the dial to 1400 KC making sure that the volume control is set at its maximum position. Adjust the broadcast antenna and broadcast oscillator trimmers for maximum signal (as indicated on the output meter). Reset the dial pointer on the receiver and on the test oscillator to 600 KC. Slowly increase or decrease the broadcast padding condenser while tuning back and forth across the signal with the station selector knob until the maximum reading is obtained on the output meter. Re-check the 1400 KC alignment as the adjustment at 600 KC may have slightly disturbed the original 1400 KC setting.



MODEL 40B
 MODEL 50P
 Schematics, Socket

PACKARD BELL CO.

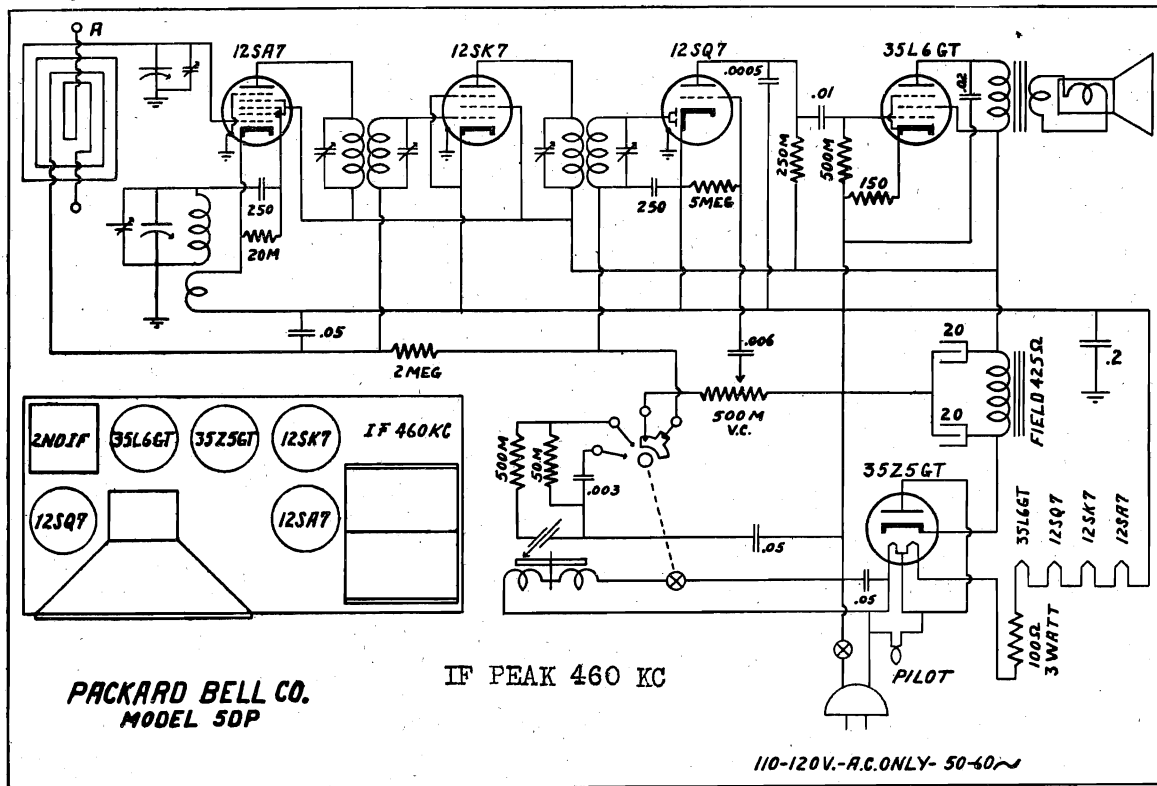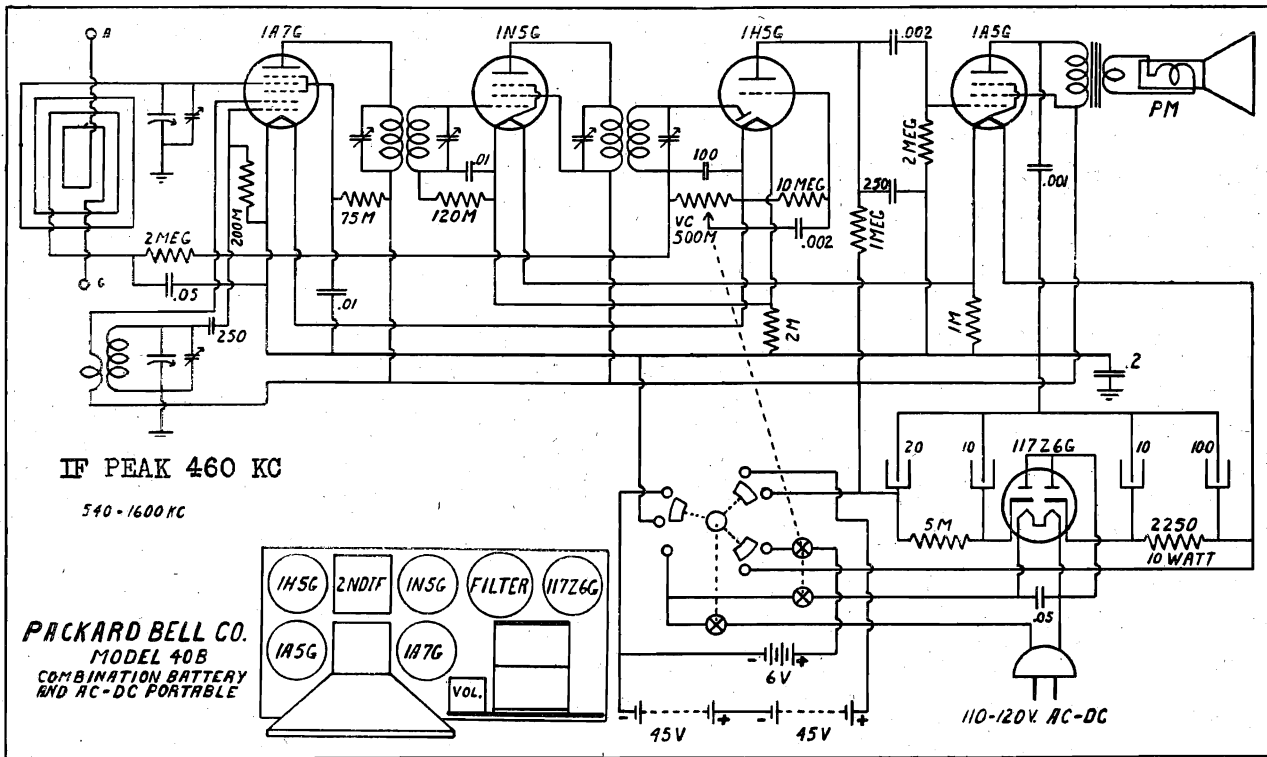



MODELS 46H, 46HC
 MODEL 46HP
 Schematics, Socket

PACKARD BELL CO.

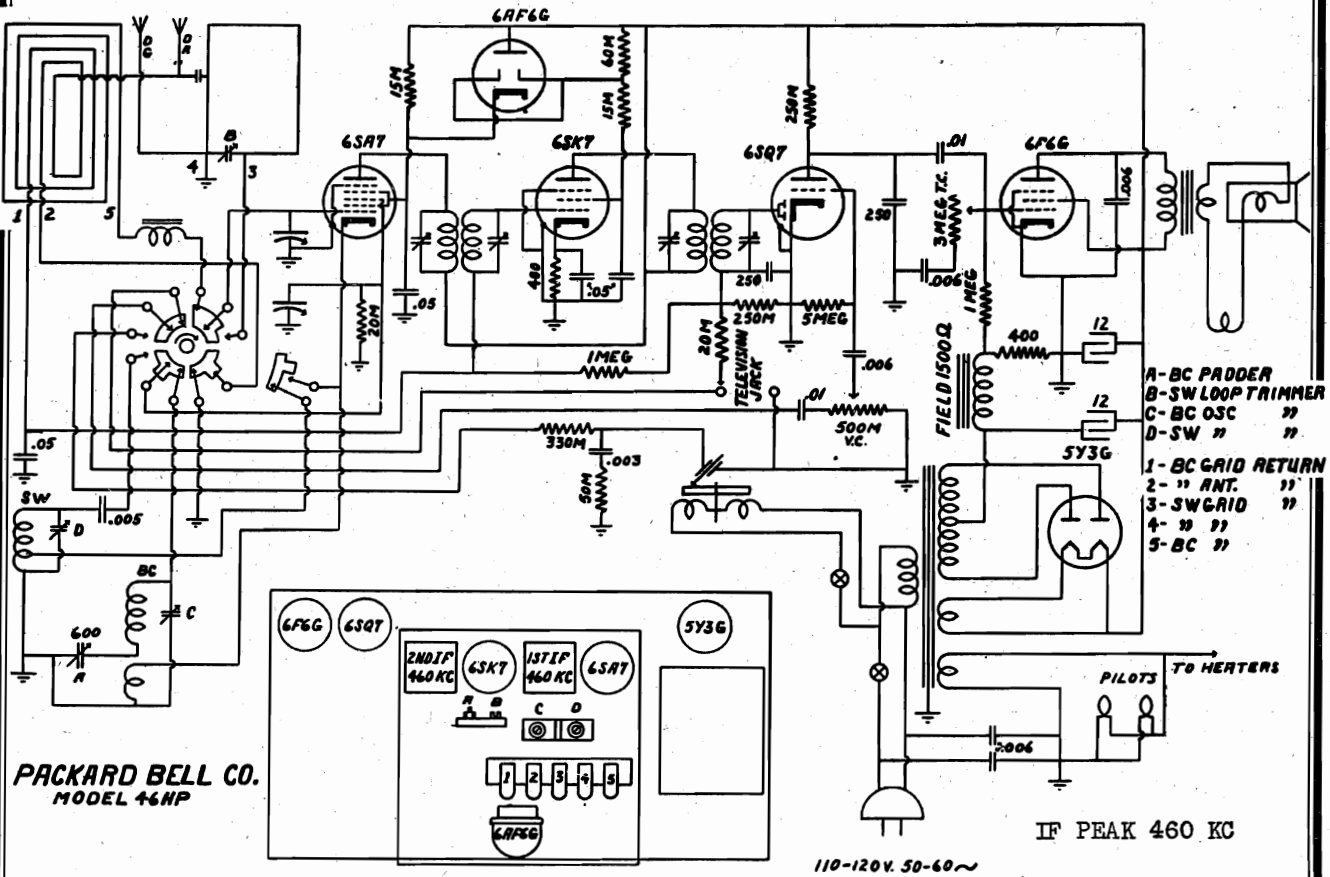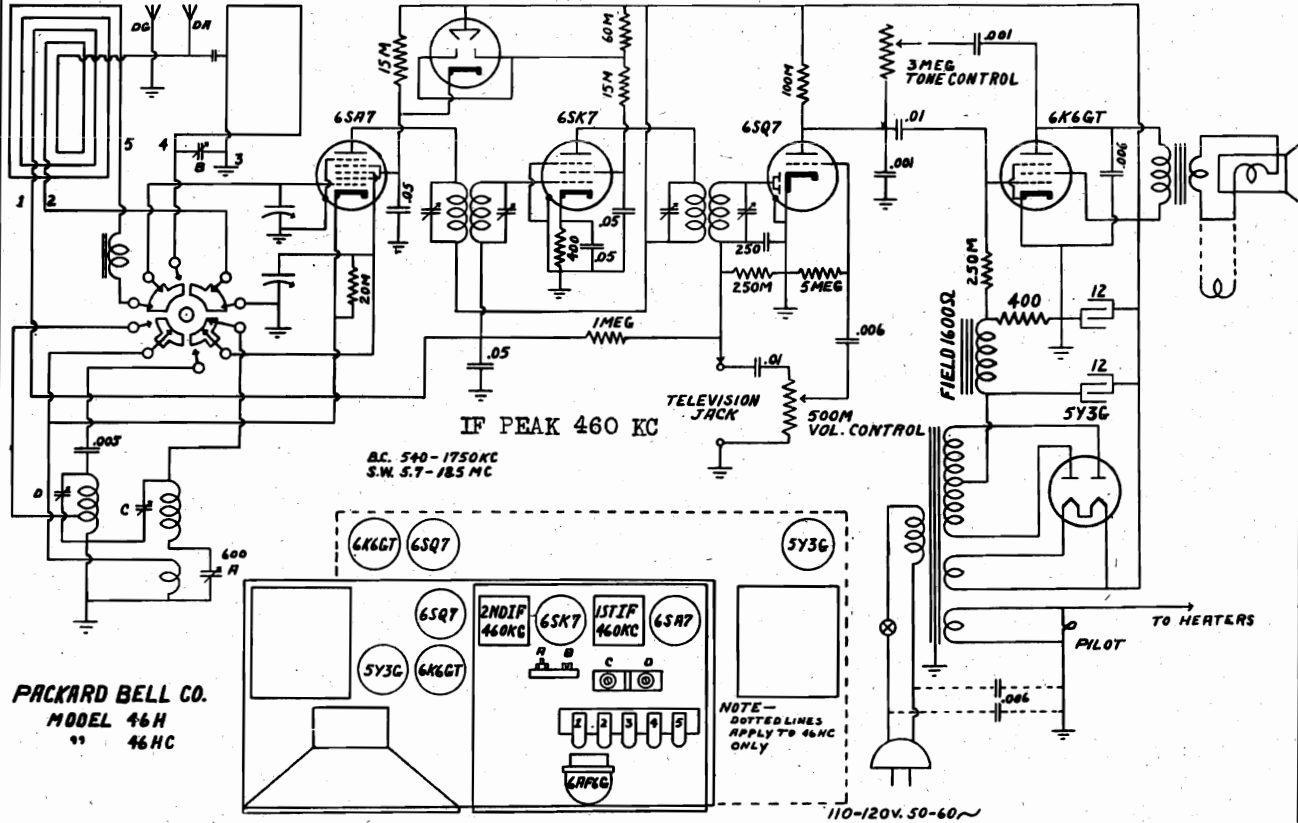



PACKARD BELL CO.

MODELS 48E, 48EP
MODEL 48F
Schematics Socket

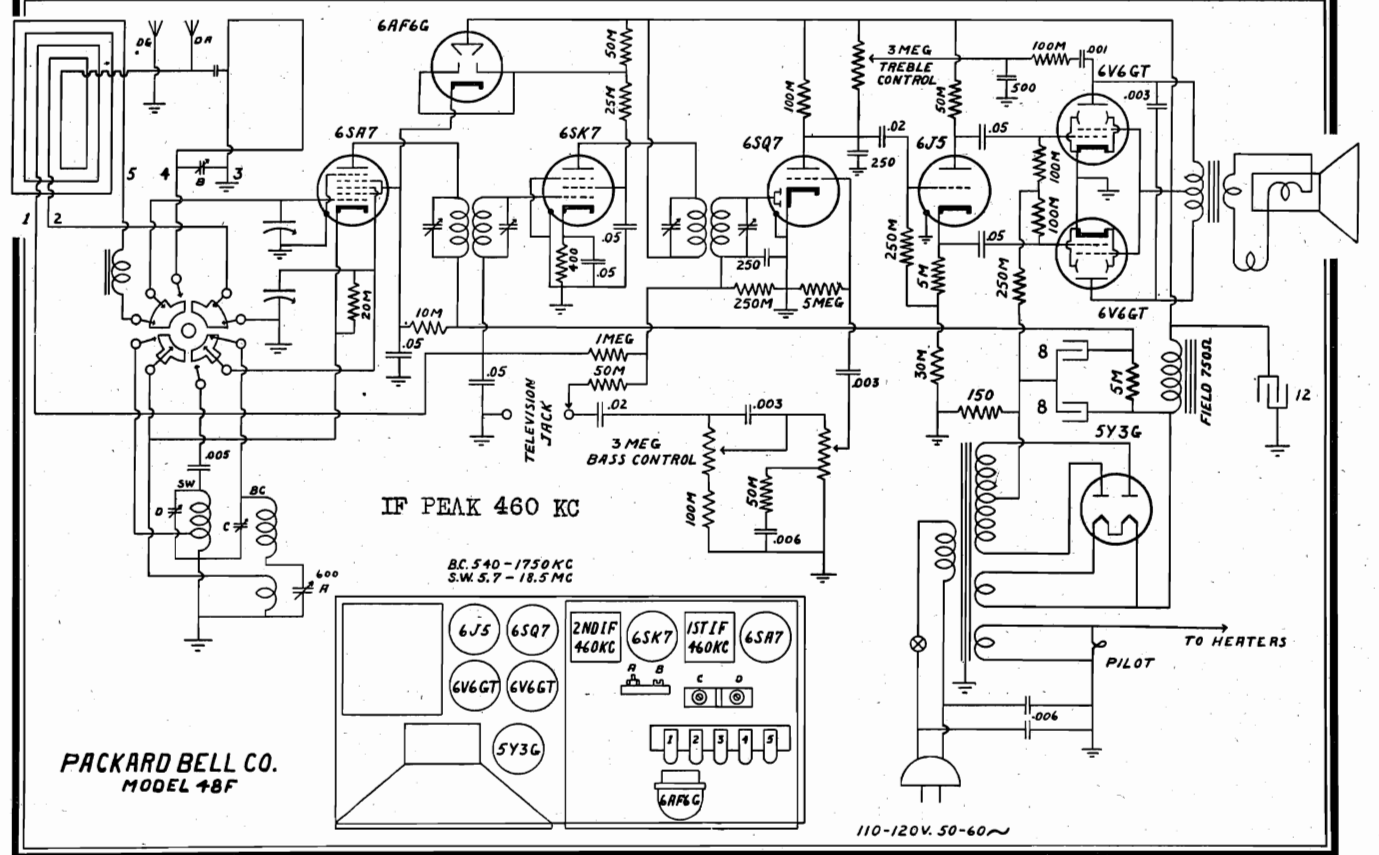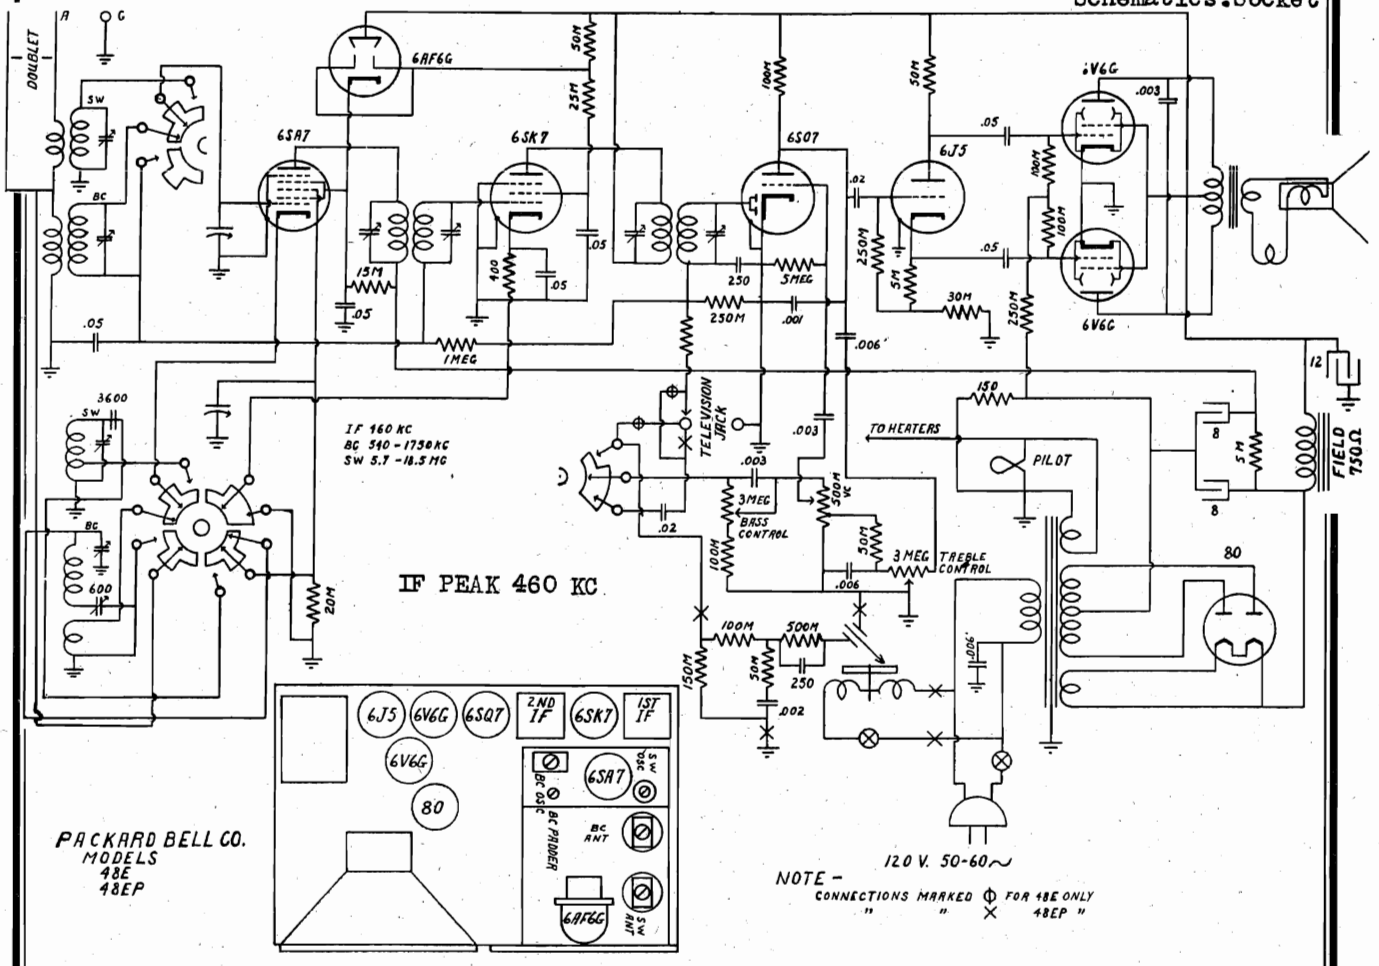


MODEL 48FPA
 MODEL 58A
 Schematics, Socket

PACKARD BELL CO.

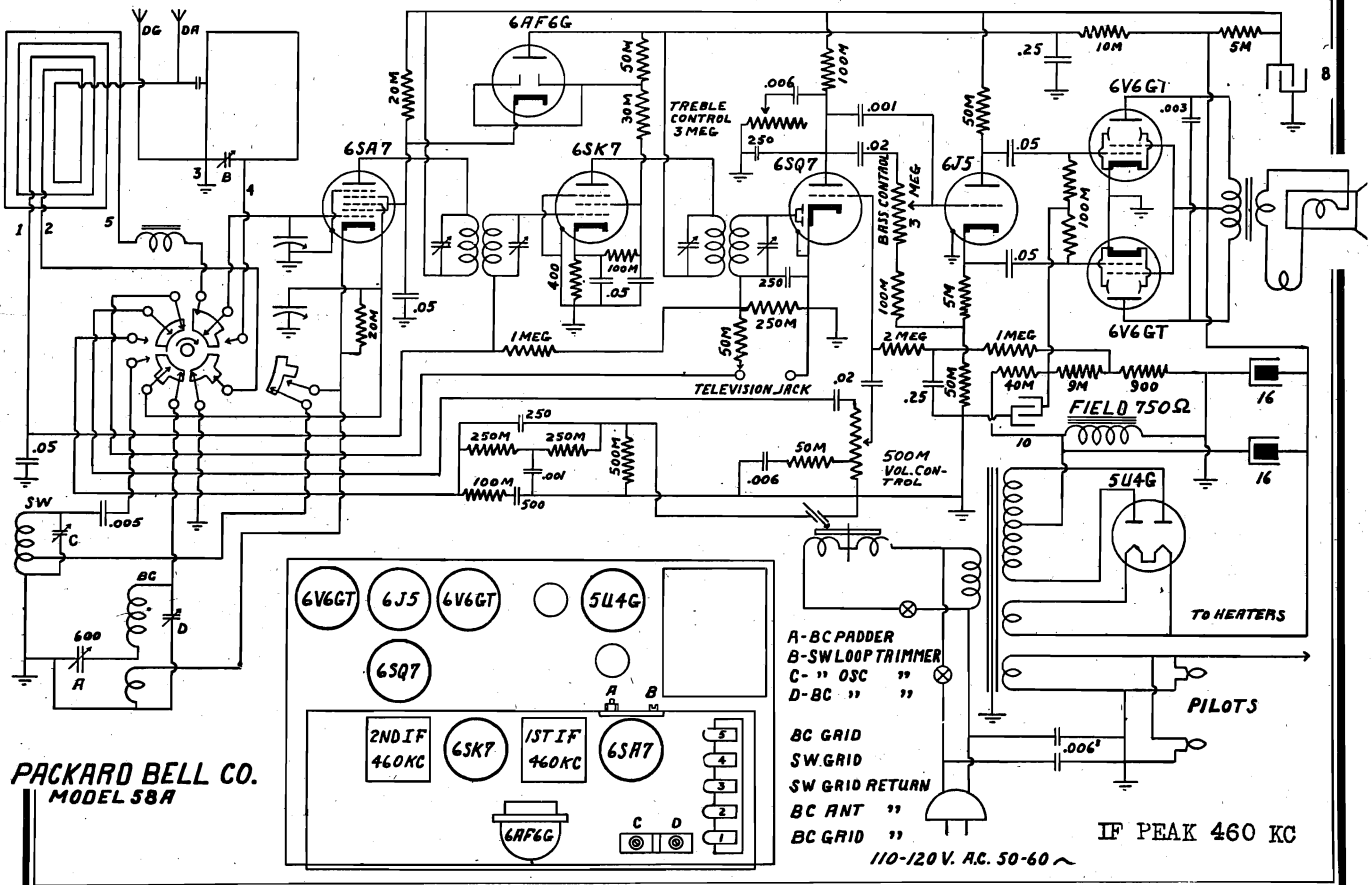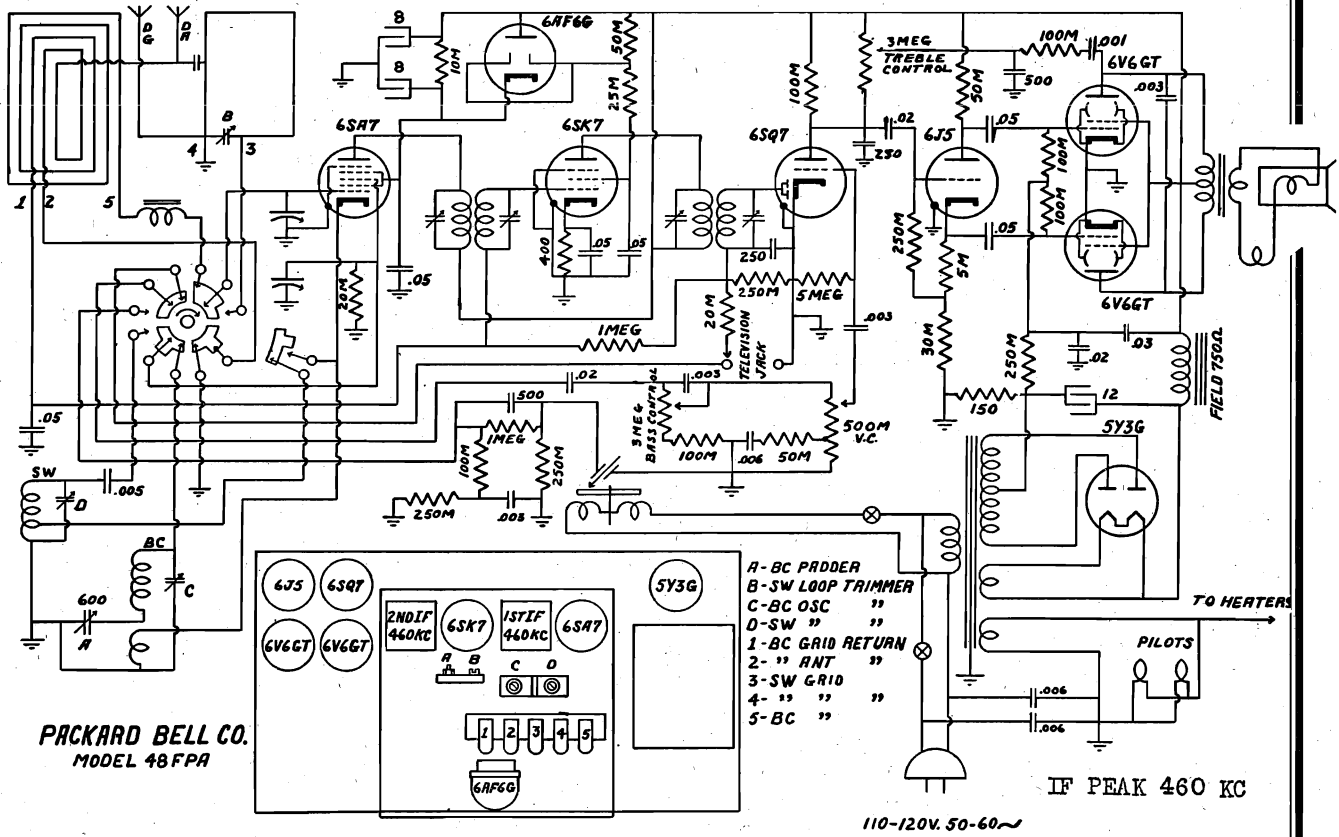

PATHE

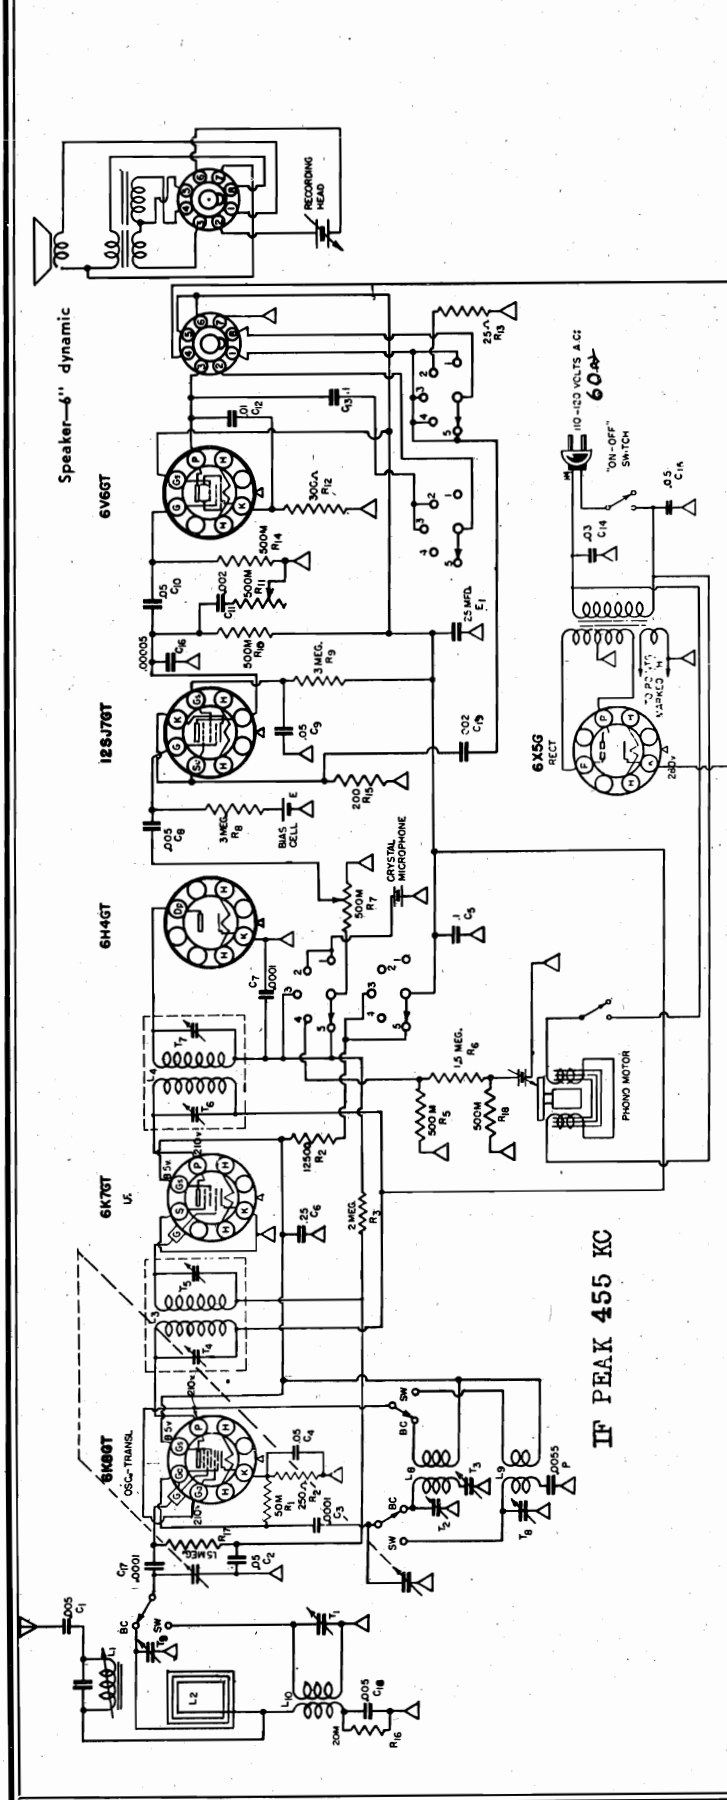


IF PEAK 455 KC

RADIO
 To record radio programs set "PhonoRadio Switch" so that number "5" is opposite brass marker above the knob. Set volume control for loud and clear reception. Then set switch so that number "3" is opposite the marker and record the program. Do not allow needle to cut disc when it reaches the inner label. Do not allow the fine threads which form to collect under the needle, brush lightly with a soft cloth or brush towards the center of the disc.


MICROPHONE
 For microphone recording set switch so that number 1 is opposite marker and test for operation. Then turn switch so that number "2" is opposite the marker. Turn volume control fully to the right. In speaking use normal voice with microphones at least six inches from the mouth.

HOME RECORDING
 NOTE:-Be sure needle is firmly in place and that the flat side points towards the rear of the cabinet. Check that the small pin projects through one of the three holes on the blank to prevent the disc from slipping.

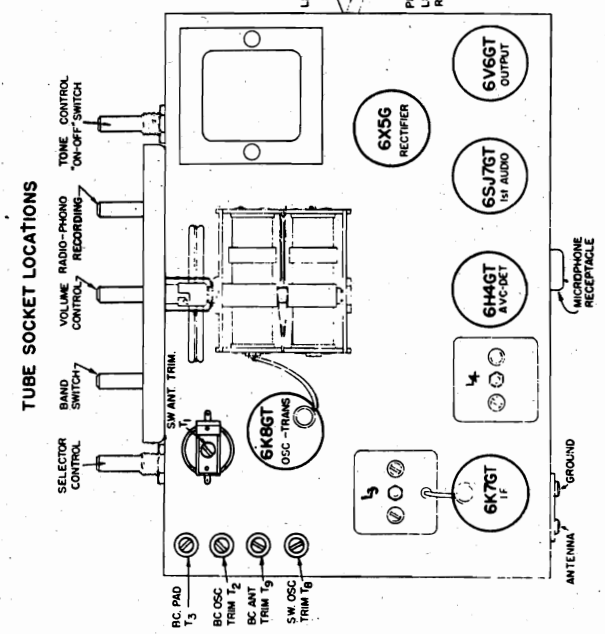

MODEL 23X
MODEL 114C
Schematics, Socket

PATHE


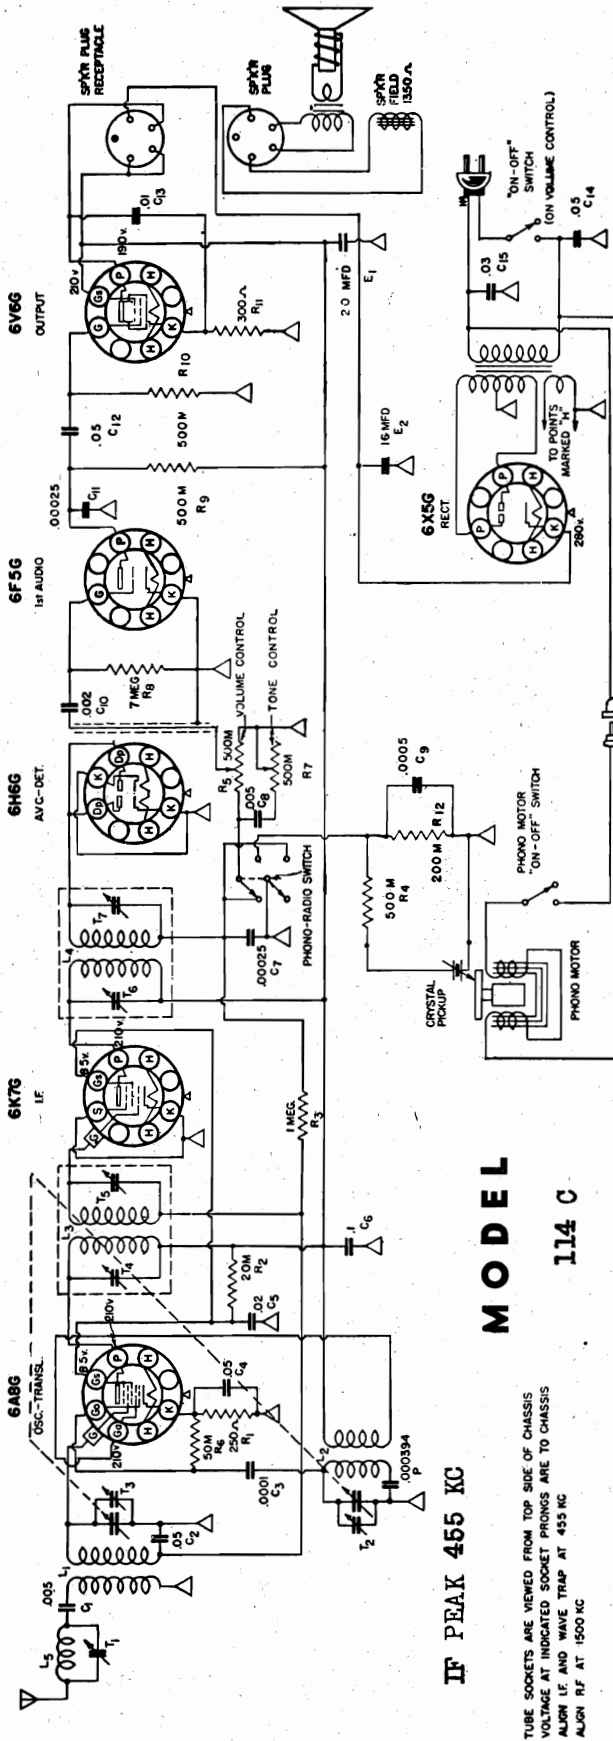


MODEL
114 C

IF PEAK 455 KC

TUBE SOCKETS ARE VIEWED FROM TOP SIDE OF CHASSIS
VOLTAGE AT INDICATED SOCKET PRONGS ARE TO CHASSIS
ALIGN LF AND WAVE TRAP AT 455 KC
ALIGN RF AT 1500 KC



The receiver is designed for operation from 115 volt alternating current, 25-60 cycle (AC) supply lines. The proper frequency (cycles) is specified on the label at the rear of the chassis.

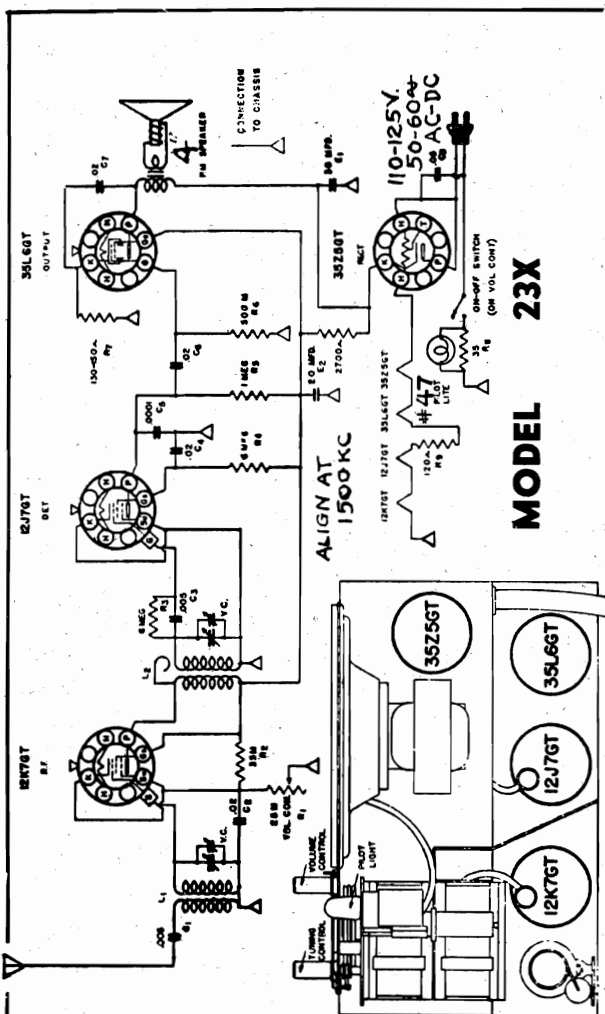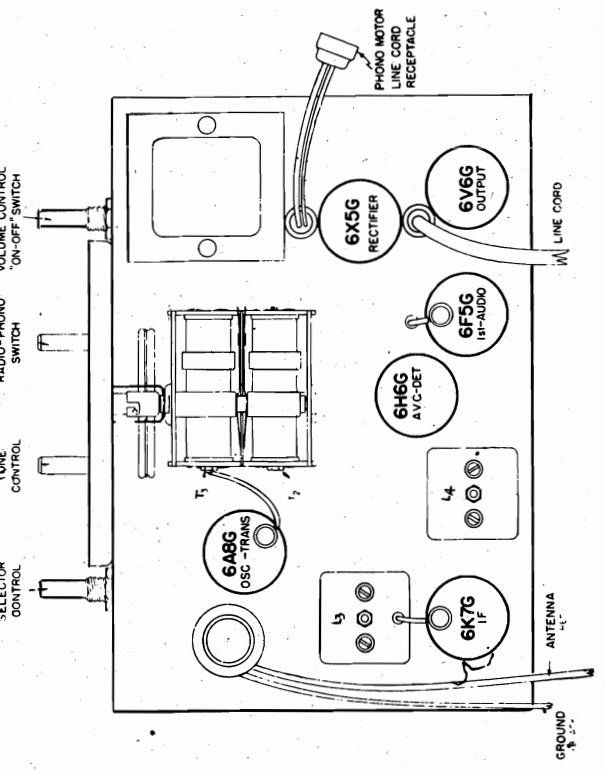

MODEL 54
Schematic, Socket
Alignment, Trimmers
Tuner

PATHE

MODEL 40T
Socket, Trimmers

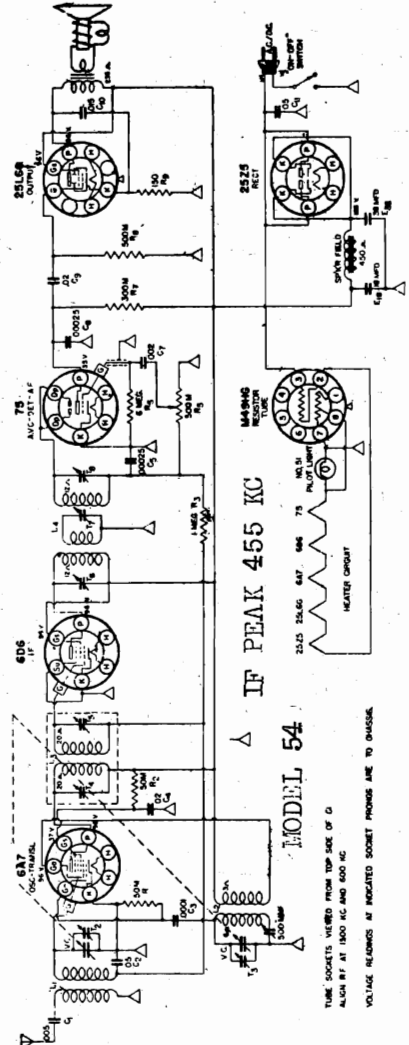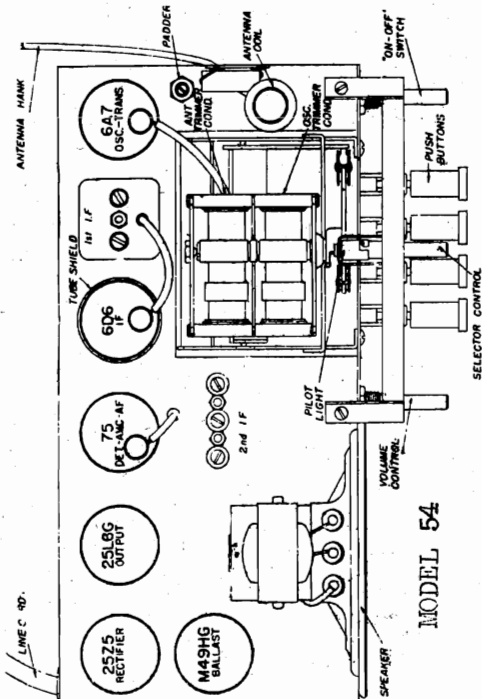

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII

MODEL 54

AUTOMATIC TUNING: There are four push buttons on the front panel which can be set so that by simply pushing the button marked with a station's call letters, any of four different stations may be received.

Allow the receiver to warm up for 20 minutes before making the station adjustments. Decide on the station you wish to receive.

Tune to this station as accurately as possible with the selector knob. Next, push in this button as far as possible, being careful not to disturb the station setting on the dial.


Turn this push button knob about one turn to the left, or until it starts to unscrew easily.

Holding the button at the "IN" position, screw the push button knob to the right until it is tight.

Cut out name of station from list supplied and insert in face of button.

Insert celluloid disk.

This completes the adjustments for one station. The three other buttons may be set in a similar manner.

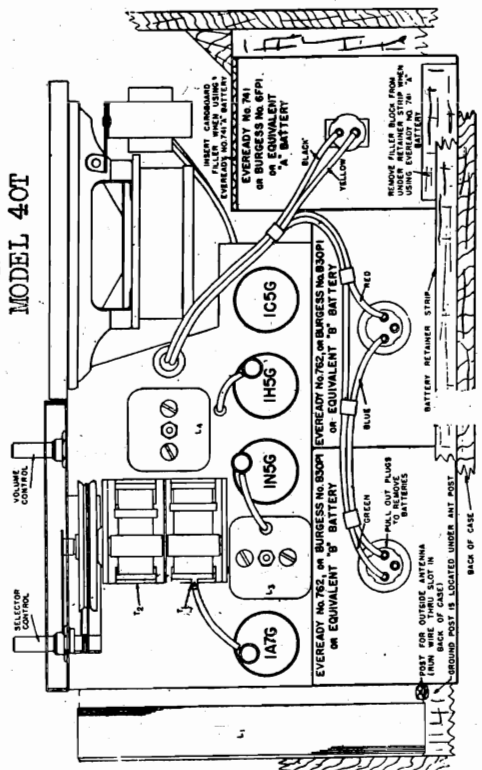

PHILCO RADIO & TELEV. CORP.

MODEL L
Record Changer
Instructions

PHILCO Model 'L' RECORD CHANGER

OPERATING INSTRUCTIONS

The Model "L" Record Changer plays seven 12" or eight 10" records automatically. The last record remains on the turntable and repeats as long as the Record Changer is in operation.

Records may be repeated as often as desired by raising the record removing arm at A Fig. 1 to the upright position. To reject a record and play the next record below it, pull the latch lever at L Fig. 1 forward.

To adjust the record removing arm to handle 10" records set the record removing arm change lever at D Fig. 1 opposite the number 10 stamped on the base plate. For 12" records set the lever opposite the number 12.

To adjust the pickup to play 10" records, push the pickup stop at K Fig. 1 back. (Away from the pickup needle). For 12" records pull the stop forward (toward the needle) as far as it will go.

Some units are equipped with two speed motors, and others with 78 RPM motors. When the two speed motor is used, change from one speed to the other by simply moving lever at F Fig. 1 to position desired.

To start motor, throw switch at N Fig. 1 on the "on" position.

clamps the lever to the motor shaft. This shaft is provided with a screw-driver slot in the end. Next, using a screw driver, turn this shaft in a clockwise direction until you feel it strike the stop. The motor is now in the 33-1/3 RPM position. Now set the lever against the lug provided in the base plate and opposite the legend 33-1/3 and tighten the clamp screw. This places the lever in the correct position on the motor shaft. The final step is the adjustment of the eccentric bushing at G Fig. 1 which limits the throw of the lever. First loosen the screw which holds the eccentric bushing. Next, throw the speed changer lever to its farthest 78 RPM position, (using care that the lever does not slip on the motor shaft). Then turn the eccentric bushing around until it touches the side of the lever, and tighten it in place with the screw provided.

TRIP MECHANISM

The trip mechanism is the trigger that sets the Record Changer in motion. This is done by allowing the latch bar at O Fig. 1 to drop in front of, and be actuated by the cam at P Fig. 1. This cam is driven by the motor and is in motion as long as the motor is running. If this mechanism does not operate smoothly, the precautions outlined in succeeding paragraphs should be observed.

First of all, make sure that the square pin in the latch lever at U Fig. 1 latches properly in the notch in the lift lever at I Fig. 1. When latched, the notch should be engaged approximately one-half of its depth. The depth of engagement is adjusted by means of the eccentric washer and locking screw at J Fig. 1. Now run the Record Changer through its cycle. If the square pin fails to engage the notch in the lift lever, first check the tension of the latch spring at H Fig. 1 to insure that the notch can engage the pin. Next check the tension of the reset spring at E Fig. 1. This reset spring should not be under tension when the latch bar is latched but should have enough tension when the latch bar drops back off of the cam to cause the square pin to over travel the notch in the lift lever.

IMPORTANT—Before attempting to change the tension of any spring, be sure that the parts involved work freely without any tendency to bind, as of course any binding condition would preclude proper operation.

The Record Changer is adjusted at the factory to trip on a spiral trip groove record when the phonograph needle is 1 1/4" from the edge of the hole in the center of the record.

MOTOR LUBRICATION

The motor installed in the Record Changer is governor controlled, with all gearing enclosed, and leaves the factory lubricated for proper operation. For maximum satisfaction, lubricate the motor at regular intervals with SAE No. 10 oil. Please do not use any other grade of oil.

The governor disc engages with a ring of hard felt. This felt is impregnated with a lubricating solution sufficient for proper operation for approximately a year under normal conditions. It may be necessary, however, if the motor shows a tendency to chatter or waiver, to apply a drop or two of oil to this felt ring.

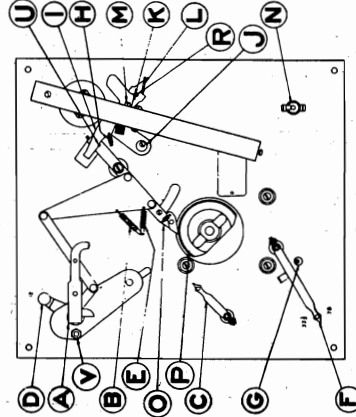


FIG. 1.

MOTOR SPEED

The motor speed is adjusted by means of a lever at C Fig. 1 which is mounted under the turntable. The direction of swing to fast or slow is indicated by the legends F and S on the base plate.

33-1/3 RPM — 78 RPM SHIFT
(Two-speed motors only)

Move the speed change lever at F Fig. 1 as far as it will go in the direction of swing indicated by the legends 33-1/3 and 78 on the base plate.

If adjustment of the speed change lever is required for any reason, proceed as follows: First loosen the screw which

When eccentric or oscillating trip groove records are used, tripping is effected by means of the hardened steel pin in the end of tone arm lift crank at S Fig. 2, engaging the serrated block on the trip lever at T Fig. 2. There must be a minimum of 1/32" play between the end of the pin and the block, when, with a short needle, (3/8" Minimum Length) the pickup is resting on one record on the turntable. If the pressure of the pin on the block is not sufficient to insure operation, then check the pressure spring which is located up under the pickup.

The oval head pivot screw at R Fig. 1 serves as a pivot for the lift lever at I Fig. 1. This screw should allow the lift lever to be raised by the latch bar to its maximum height without binding but also without any additional play.

If the Record Changer fails to trip, see if the phonograph needle is jumping out of a worn record trip groove. Next make certain that all parts of the mechanism work freely and smoothly. If it is found that the latch bar at O Fig. 1 is not dropping in far enough to engage the cam at P Fig. 1, then check the tension of the trip spring at B Fig. 1.

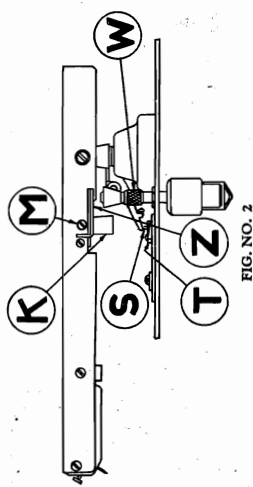


FIG. NO. 2

RECORD REMOVING MECHANISM

The Record Changer is adjusted so that it will always leave one record on the turntable. This is done to prevent the phonograph needle from damaging the covering on the turntable.

In case the Record Removing Mechanism fails to operate smoothly, proceed as follows: First make certain that all parts work freely with no binding in pivots or bearings. Next stop the motor in such a position that the record removing arm assembly rests on the stop screw at Q Fig. 3. Swing stop the motor in such a position that the latch bar at O Fig. 1 can swing up and clear the cam at P Fig. 1. Place just one record on the turntable and measure from the top of this record down to the base plate. This distance should be one inch. Now by pulling the reject lever at Y Fig. 1 first, it will be found possible to swing the record removing finger at Y Fig. 3 over to where it just touches the edge of the record. If the adjustment is correct, the record removing finger should just barely rise over the edge of the first record. If adjustment is required it can be made by means of the stop screw at Q Fig. 3. In the event the record removing arm raises the record from the turntable and drops it back in place without removing it, check the lift adjustment at V Fig. 1. This adjustment consists of an eccentric stud which is provided with a lock nut, and is made by loosening the lock nut and turning the eccentric stud. The lift adjustment should be set so that the hole in the center of the record just clears turntable spindle when the Record Changer is in operation.

PICKUP LOWERING MECHANISM

The pickup lowering mechanism has two functions. First, it lowers the phonograph needle gently to the surface of the record. Second, it feeds the needle toward the center of the record so that it will enter the playing groove.

If the pickup descends too fast or too slow, adjust the speed of descent by turning the knurled thumb nut on the dashpot sleeve at W Fig. 2.





FIG. NO. 4

The unit is adjusted at the factory so that the needle will be set down approximately 3/32" in from the edge of the record. An adjusting screw is provided on the side of the pickup at M Fig. 2. If the needle is being lowered onto the playing surface of the record, and the adjusting screw at M Fig. 2 fails to correct this condition proceed as follows: First stop the record changer, with the pickup in the maximum raised position and check the clearance between the underside of the pickup shelf at Z Fig. 2 and the tip of the dashpot. This clearance should be very small as otherwise the pickup will tend to bounce as it is lowered. There must be sufficient clearance however to prevent the pickup shelf from rubbing on the tip of the dash pot, or the pickup will not swing out far enough to allow the adjustable stop at K Fig. 2 to come to rest against the dashpot. Check this clearance in both 10" and 12" record positions. If adjustment is required, the height of the dashpot may be regulated by loosening the nuts on the bottom of the lift lever stud at X Fig. 4 and changing their position on the stud. To raise the dashpot turn the nuts clockwise, to lower the dashpot turn the nuts counter-clockwise. Be sure to lock the nuts tightly together after the adjustment is made.

MODEL TH-1
Schematic
Alignment

PHILCO RADIO & TELEV. CORP.

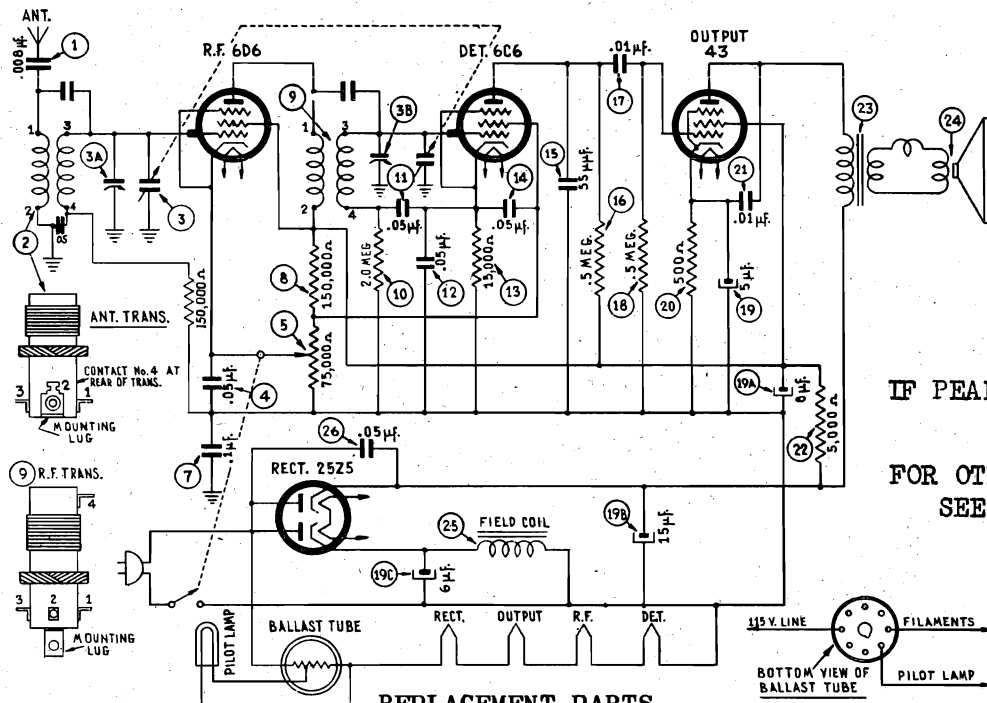

IF PEAK 470 KC

FOR OTHER DATA
SEE INDEX

REPLACEMENT PARTS

TRANSITONE HOME RADIO MODEL TH-1

Schem. No.	Description	Philco Part No.	Schem. No.	Description	Philco Part No.
1	Condenser (.006 mfd. 200 V).....	32104	23	Output Transformer.....	43118
2	Ant. Transformer.....	40168	24	Speaker.....	60110
3	Tuning Condenser.....	33110	25	Field Coil.....Part of Spkr. Unit	14100
4	Condenser .05 mfd. 200 V).....	32100	26	Condenser .05 mfd. 400 V.....	32101
5	Volume Control.....	49115	28	Clip (Drive Cord).....	20156
6	Resistor 150,000 ohms.....	47100		Dial (Scale).....	16200T
7	Condenser .1 mfd. 200V.....	32117		Dial Window.....	14100
8	Resistor 150,000 ohms.....	47100		Drive Cord Assembly.....	90232
9	R.F. Transformer.....	40189		Drive Pulley & Screw.....	21102
10	Resistor 150,000 ohms.....	47100		Knob Assembly.....	13100
11	Condenser .05 mfd. 200 V.....	32100		Pointer.....	20237
12	Condenser .05 mfd. 200 V.....	32100		Socket 25Z5.....	15103
13	Resistor 15,000 ohms.....	47154		Socket 6D6.....	15100
14	Condenser .05 mfd. 200 V.....	32100		Socket 6C6.....	15101
15	Condenser 55 mmfd.....	30115		Socket 43.....	15102
16	Resistor .5 megohm.....	47101		Socket K55B.....	15104
17	Condenser .01 mfd. 200 V.....	32102		Socket Assembly (Pilot Lamp)....	90100
18	Resistor .5 megohm.....	47101		Shaft (Tuning Drive).....	21101
19	Electrolytic Condenser.....	31116		Spring (Drive Cord).....	23103
20	Resistor 500 ohms.....	47155		Speaker Cone.....	
21	Condenser .01 mfd. 400 V.....	32103		Washer "C" Type Drive Shaft.....	23102
22	Resistor 5000 ohms.....	47105			

ALIGNMENT OF THE COMPENSATORS

In order to align the R.F. circuit of the receiver, an output meter, and signal generator will be required. With these instruments, the compensators should be adjusted as given below.

1. Connect an output meter to the plate and cathode terminals of the 43 tube.

2. The signal generator output lead is now connected to the aerial wire of the receiver through a 100 mmfd. condenser and the generator ground to a good ground connection. Then, turn the volume control to a full volume position.

3. Adjust the dial pointer as follows: Turn the tuning con-

denser to maximum capacity position. With the condenser in this position, the dial pointer should be $\frac{1}{4}$ inch below the 550 K.C. mark of the dial and horizontal with the chassis.

4. Set the signal generator and receiver dial for 1500 K.C. and adjust padders 3A and 3B for maximum reading on the output meter.

MODEL TH-1 is a 5 tube receiver designed for operation on alternating current (A.C.) or direct current (D.C.) 115 volts and covers a frequency range of 540 to 1720 kilocycles.

An indoor aerial 20 feet in length is attached to the receiver for average receiving conditions. In remote localities where signal strength is weak, a regular outdoor aerial is recommended, such as Philco aerial Part No. 40-6383. For hotels and apartment house installations, Philco Utility Aerial Part No. 40-6384 should be used.

MODELS TH-3, TH-4, TP-4,
TH-5, TP-5, TP-10, TP-11
TP-12

Alignment Instructions

PHILCO RADIO & TELEV. CORP.

GENERAL ALIGNING INSTRUCTIONS

Models TH-3, TH-4, TP-4, TH-5, TP-5, TP-10, TP-11, TP-12

The same general procedure is followed in aligning the compensating condensers in any of the above listed models.

EQUIPMENT REQUIRED

Signal Generator Philco Model 077 or 177 should be used.

Aligning Indicator Philco Model 027 and Model 028 circuit testers which contain an audio output meter and vacuum tube voltmeter. Either of the vacuum tube voltmeter or the audio

output meters may be used as an aligning indicator and are connected as given under "Connecting Aligning Instruments".

Tools: Fibre handle aligning screw driver, Philco Part No. 45-2610.

CONNECTING ALIGNING INSTRUMENTS

Audio Output Meter: If an aligning indicator of this type is used, connect it to the plate and screen terminals of the output tube.

Vacuum Tube Voltmeter: To use the vacuum tube voltmeter as an aligning indicator, make the following connections:

Attach the negative terminal of the voltmeter to any point in the circuit where the A.V.C. voltage can be obtained. Connect the positive terminal to the ground connection of the receiver. In AC-DC sets the positive (+) terminal of the vacuum tube voltmeter should be connected to (B-) of the receiver. (Cathode 7C6.)

For aligning receivers with loktal type tubes, an aligning adaptor, Philco Part No. 45-2767 may be used with the vacuum tube voltmeter. To use the adaptor, remove the second detector tube from its socket and insert the aligning adaptor in the socket, then replace the tube in the adaptor. Connect the negative terminal of the vacuum tube voltmeter to the light colored wire which protrudes from the side of the adaptor.

Attach the positive terminal of the vacuum tube voltmeter to the black wire of the adaptor.

Signal Generator: When adjusting the I.F. padders, the high side of the signal generator is connected through a .004 mfd. condenser to the antenna section of the tuning condenser. Connect the ground or low side of the generator to the chassis. It may be necessary when adjusting AC-DC models to reverse the power plug to eliminate hum.

The R.F. and oscillator padders are aligned with the high side of the signal generator connected to the antenna of the receiver through a 100 mmfd. condenser.

After connecting the aligning instruments, adjust the compensators on all models in the order as shown in the tabulation below. The first and second I.F. transformers in all models are located on the top and bottom sections of the chassis respectively. The antenna and oscillator padders are located on the tuning condenser.

Operations in Order	SIGNAL GENERATOR		RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Setting	Adjust Compensators in Order	
1	Ant. Section of Tuning Cond.	470 K. C.	540 K. C. Tuning Cond. closed	Vol. Max.	1st & 2nd I.F.	Push in manual button on push button models
2	Ant. Ter.	1700 K. C.	1700 K. C.	Vol. Max.	"Osc"	Note A and B
3	Ant. Ter.	1500 K. C.	1500 K. C.	Vol. Max.	"Ant"	Note B

NOTE A — DIAL CALIBRATION: With the exception of Models TP-10 and TP-11 the dial pointers are adjusted by closing the tuning condenser (plates fully meshed) and setting the pointers on the dot below 55 on the dial.

NOTE B—The alignment procedure for the I.F. padders in Models TP-10 and TP-11 is the same as that given above. The antenna and oscillator padders of these models, however, are adjusted as follows:

1. Turn the tuning condenser to the extreme high frequency position (all plates out of mesh).
2. Insert a .004" gauge between the stationary and rotor plates of the oscillator condenser. If the gauge is not handy, a piece of bond writing paper can be used. After inserting gauge, turn rotor toward the low frequency end so that the gauge will be held in position.
3. Set signal generator at 1720 K.C. and tune oscillator padder for maximum reading on the output meter.

4. Remove gauge and set signal generator to 1500 K.C. and tune tuning condenser for maximum reading on this signal, then adjust the antenna padder for maximum output.

5. Place set in cabinet so that the tuning arm on the tuning condenser engages the dial on the cabinet. After placing receiver in the cabinet and it is found that the dial does not track properly with station signals, the dial can be calibrated as follows: Set the signal generator to a low frequency signal (600 K.C.) and tune receiver until signal shows maximum reading on the output meter. The dial is then set to this signal by inserting a 6-32 Phillips screw driver to the adjustment screw on the tuning condenser pulley. Loosen screw and slightly turn dial so that it reads 600 K.C. then retighten screw. When doing this, however, precaution should be taken so that the tuning condenser is not disturbed while dial is being adjusted and screw is being tightened or loosened.

PHILCO RADIO & TELEV. CORP.

MODEL RP-3, Wireless
Record Player
Schematic, Data

WIRELESS RECORD PLAYER.....MODEL RP-3

Model RP-3 is a Wireless Record Player, designed to operate through the entire R.F. and audio system of a Radio Receiver. No connections are required between the Wireless Record Player and the Radio. The sound from the record is converted into a radio signal (540 K.C.) and broadcasted to the aerial of the radio set.

This model is equipped with a semi-automatic crystal pickup mechanism which will play either ten inch or twelve inch records. The pickup mechanism automatically places the pickup on the record when the lid of the cabinet is closed. Records can also be repeated by simply opening and closing the lid.

The player is operated from a 115 Volt, 60 cycle A.C. power supply. A volume control is also provided for adjusting the output of the player.


CHANGING OPERATING FREQUENCY

When the Record Player leaves the factory it is adjusted to operate at approximately 540 K.C. If interference from broadcasting stations is encountered, the frequency of the unit can be changed to any other frequency between 530 K.C. and 580 K.C. by removing snap button and adjusting small screw indicated in diagram. Turning screw clockwise lowers the frequency, counter-clockwise raises the frequency. *This adjustment is best made while the unit is in operation.*

No definite rule can be established for the relative location of the record player to a radio; individual trial will establish the best location. However, in general, satisfactory operation may be obtained up to a distance of fifty (50) feet, provided local noise conditions are not too severe.

If hum is experienced it may be necessary to reverse the power plug of the record player, the radio, or both. In some cases it may be advisable to use the same receptacle for record player and radio.


MODEL RP-3 WIRELESS RECORD PLAYER

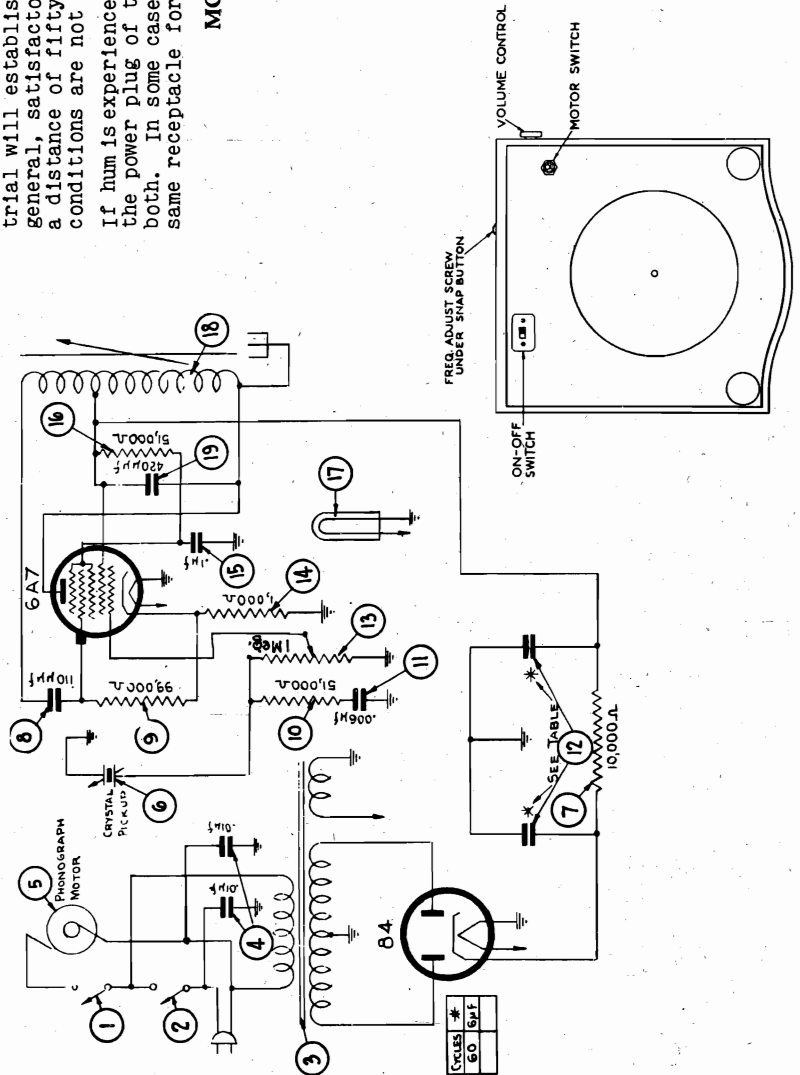

Schem. No.	Description	Philco Part No.
1	Motor Switch	42-1503
2	Master Switch	42-1406-2
3	Power Transformer	32-8043
4	Line Condenser (.01 mf.-01 mf., 600 v.)	3903-DC
5	Motor	35-2021
6	Crystal Pickup	35-2028
7	Crystal Cartridge	415-1027
8	Filter Resistor (10,000 ohms., ½ watt)	33-310344
9	Oscillator Grid Cond. (110 mmf.)	30-1031
10	Oscillator Grid Resistor (99,000 ohms., ½ watt)	33-399344
11	Comp. Resistor (51,000 ohms., ½ watt)	33-351344
12	Comp. Condenser (.006 mf., 200 v.)	30-4467
13	Electrolytic Condenser (6 mf.-6 mf., 150 v.)	30-2388
14	Volume Control	33-5322
15	Cathode Bias Resistor (1,000 ohms., ½ watt)	33-210344
16	Screen By-Pass (.1 mf., 200 v.)	30-4499-S
17	Screen Resistor (51,000 ohms., ½ watt)	33-351344
18	Pilot Light (6-8 v., .250 amp.)	34-2210
19	Oscillator Coil	32-3232
20	Oscillator Condenser (420 mmf.)	30-1116

MODELS TH-4, TH-4T
Schematic, Notes

PHILCO RADIO & TELEV. CORP.

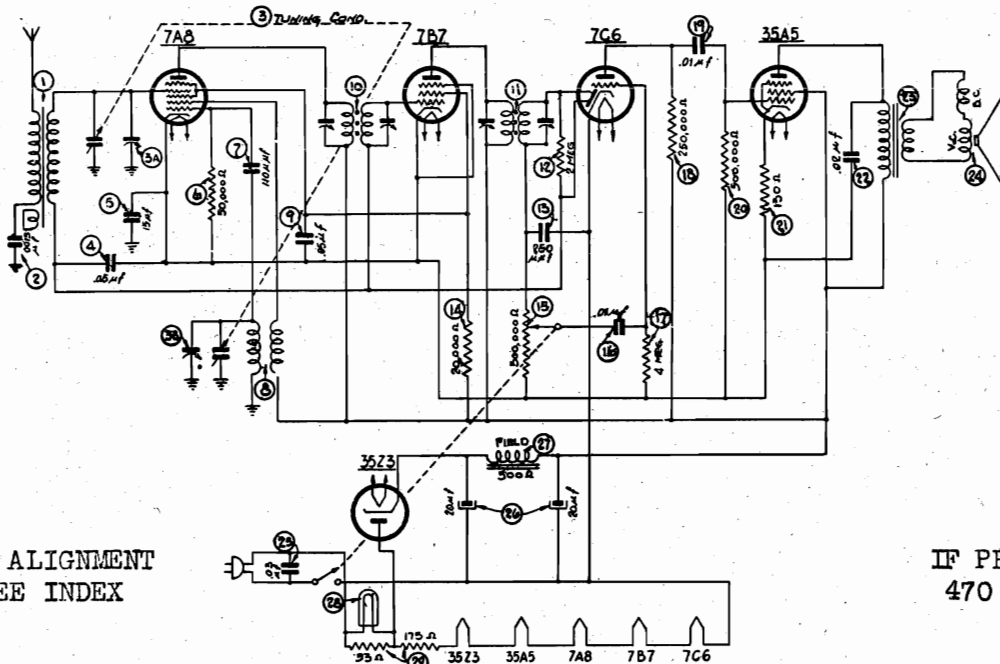

FOR ALIGNMENT
SEE INDEX

IF PEAK
470 KC

REPLACEMENT PARTS

TRANSITONE HOME RADIO MODEL TH-4

Schem. No.	Description	Philco Part No.	Schem. No.	Description	Philco Part No.
1	Antenna Transformer.....	32-3151	22	Tubular Condenser (.02 mf., 400v.)	30-45168
2	Tubular Condenser (.0015 mf., 200v.)	30-45558	23	Output Transformer	
3	Tuning Condenser.....	31-2354		For Speaker 36-1469-1.....	32-8047
4	Tubular Condenser (.05 mf., 400v.)	30-45198		For Speaker 36-1469-9.....	32-8044
5	Tubular Condenser (.15 mf., 400v.)	30-45058	24	Speaker.....	36-1469
6	Resistor (50,000 ohms, 1/3 watt)...	33-350244	25	Tubular Condenser (.03 mf., 400v.)	30-44498
7	Mica Condenser (110 mmf.).....	30-1031	26	Electrolytic Condenser (20-20mf, 150v)	30-2382
8	Oscillator Transformer.....	32-3152	27	Field Coil -- Part of Speaker No..	36-1469
9	Tubular Condenser (.05 mf., 400v.)	30-45198	28	Pilot Lamp.....	34-2068
10	1st I.F. Transformer.....	32-3149	29	Line Resistor.....	33-3367
11	2nd I.F. Transformer.....	32-3150		Cone Assembly (for Speaker 36-1469-1)	36-4115
12	Resistor (2 meg., 1/3 watt).....	33-520244		Cone Assembly (for Speaker 36-1469-9)	36-4113
13	Mica Condenser (250 mmf.).....	30-1032		Drive Cord Assy.....	31-2358
14	Resistor (20,000 ohms, 1/3 watt)...	33-320244		Drive Shaft Assy.....	31-2355
15	Volume Control 500,000 ohms).....	33-5306		Pilot Lamp Socket.....	38-9825
16	Tubular Condenser (.01 mf., 200v.)	30-44798		Pointer.....	27-4891
17	Resistor (4 meg., 1/3 watt).....	33-540244		Power Cord.....	L-3199
18	Resistor (250,000 ohms, 1/3 watt)...	33-425244		Scale.....	27-5553
19	Tubular Condenser (.01 mf., 400v.)	30-45728		Socket.....	27-6130
20	Resistor (500,000 ohms, 1/3 watt)...	33-450244		Spring (Drive Cord).....	28-8954
21	Resistor (130 ohms, 1/2 watt).....	33-113336		Speaker Assy.....	36-1469

MODEL TH-4T

MODEL TH-4T IVORY

Cardboard Back.....	27-9511	Cardboard Back.....	27-9545
Dial Window.....	27-5472	Knob Assembly.....	27-4810
Grille Cloth.....	44-1287		
Knob Assy.....	27-4809		


MODEL TH-4 is a 5 tube superheterodyne receiver covering a frequency range of 540 to 1720 kilocycles and designed for operation on either alternating current (A.C.) or direct current (D.C.) 115 volts.

An indoor aerial 20 feet in length is attached to the receiver for average receiving conditions; however in apartment houses, hotels, or steel re-inforced buildings, the Philco Utility Aerial Part No. 40-6384 is recommended.

NOTE: If no sound is heard after connecting the receiver to the power supply and sufficient time has been allowed for the tubes to heat, reverse the electric plug in the outlet. The same procedure should be observed on A.C. power supplies when a slight hum is heard with the volume turned low.

PHILCO RADIO & TELEV. CORP.

MODELS TP-4, TP4-I
Schematic, Notes

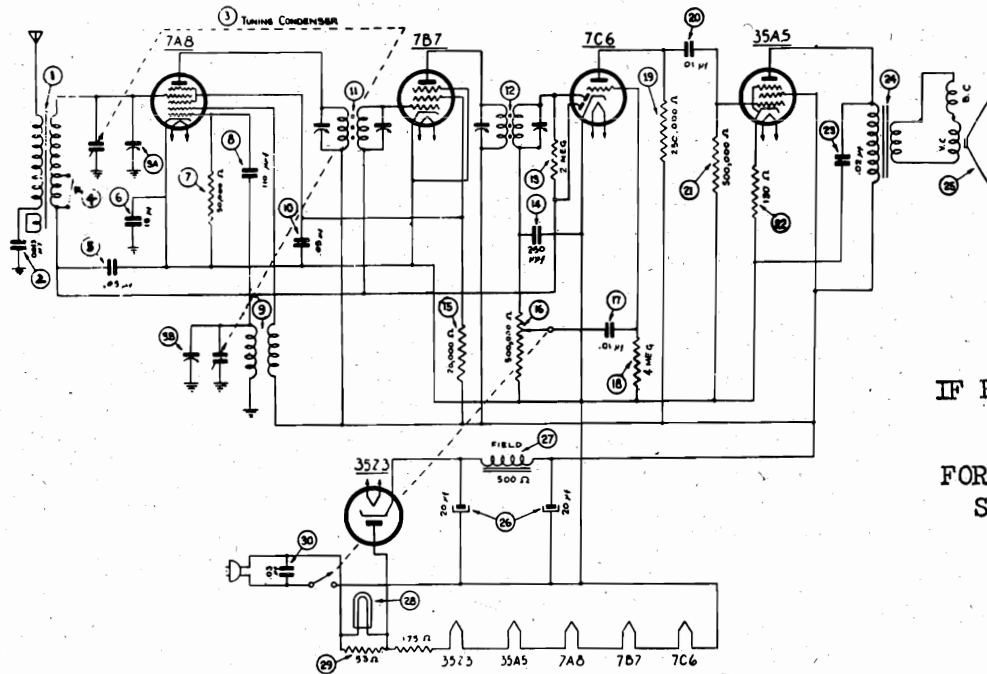

IF PEAK 470 KC

FOR OTHER DATA
SEE INDEX

REPLACEMENT PARTS

TRANSITONE HOME RADIO MODEL TP-4

Schem. No.	Description	Philco Part No.	Schem. No.	Description	Philco Part No.
1	Antenna Transformer.....	32-3164			
2	Tubular Condenser (.0015 mf., 200V)	30-45558	25	Cone Assembly	32-8044
3	Tuning Condenser.....	31-2354		For Speaker 36-1469-1.....	36-4115
4	Switch.....	42-1406		For Speaker 36-1469-9.....	36-4113
5	Tubular Condenser (.05 mf., 200V.)	30-45198	26	Tubular Condenser (.03 mf., 400V.)	30-44498
6	Tubular Condenser (.15 mf., 400V.)	30-45058	27	Electrolytic Condenser	
7	Resistor (50,000 ohms, 1/3 watt)..	33-350244		(20-20 mf., 150V.).....	30-2382
8	Mica Condenser (110 mmf.).....	30-1031	28	Field Coil	
9	Oscillator Transformer.....	32-3152	 Part of Speaker, Part No 36-1469	
10	Tubular Condenser (.05 mf., 200V.)	30-45198	29	Pilot Lamp.....	34-2068
11	1st I.F. Transformer.....	32-3149	30	Line Resistor.....	33-3367
12	2nd I.F. Transformer.....	32-3150		Cardboard Back.....	27-9511
13	Resistor (2 meg., 1/3 watt).....	33-520244		Dial Window.....	27-5472
14	Mica Condenser (250 mmf.).....	30-1032		Drive Cord Assembly.....	31-2358
15	Resistor (20,000 ohms, 1/3 watt)..	33-320244		Drive Shaft Assembly.....	31-2355
16	Volume Control (500,000 ohms)....	33-5306		Drive Drum.....	28-6662
17	Tubular Condenser (.01 mf., 200V.)	30-44798		Grille Cloth.....	44-1287
18	Resistor (4 meg., 1/3 watt).....	33-540244		Knob Assembly.....	27-4809
19	Resistor (250,000 ohms, 1/3 watt).	33-425244		Pointer.....	27-4891
20	Tubular Condenser (.01 mf., 400V.)	30-45728		Scale.....	27-5556
21	Resistor (500,000 ohms, 1/3 watt).	33-450244		Sockets.....	27-6130
22	Resistor (130 ohms, 1/2 watt).....	33-113338		Speaker.....	36-1469
23	Tubular Condenser (.02 mf., 400V.)	30-45188		Spring (Drive Cord).....	28-8954
24	Output Transformer				
	For Speaker 36-1469-1.....	32-8047			

TP-4 IVORY

Cardboard Back.....	27-9545	Knob Assembly.....	27-4810
---------------------	---------	--------------------	---------


MODELS TP-4 and TP-4-I are 5 tube superheterodyne receivers having 2 tuning ranges covering from 540 to 1720 kilocycles on the broadcast band and a frequency range from 2.3 to 2.5 megacycles (M.C.) on the police band. This model is designed to operate on either alternating (A.C.) or direct current (D.C.) 115 volts. These models are identical with the exception of cabinets.

An indoor aerial 20 feet in length is attached to the receiver for average receiving conditions; however in apartment houses, hotels or steel re-inforced buildings, the Philco Utility Aerial Part No. 40-6384 is recommended.

NOTE: If no sound is heard after connecting the receiver to the power supply and sufficient time has been allowed for the tubes to heat, reverse the electric plug in the outlet. The same procedure should be observed on A.C. power supplies when a slight hum is heard with the volume turned low.

MODELS TH-5, TH-5T
Schematic, Tuner

PHILCO RADIO & TELEV. CORP.

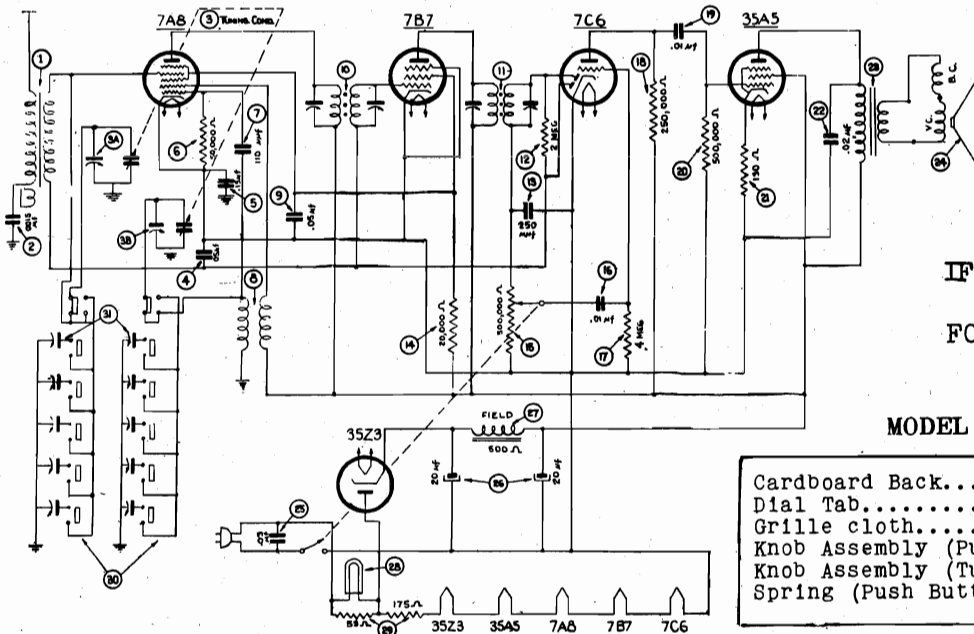

IF PEAK 470 KC

FOR OTHER DATA
SEE INDEX

MODEL TH-5T IVORY

Cardboard Back.....	27-9328
Dial Tab.....	27-5528
Grille cloth.....	44-1288
Knob Assembly (Push Button)....	27-4830
Knob Assembly (Tuning & Volume)	27-4810
Spring (Push Button Knobs)....	28-5686

REPLACEMENT PARTS

Schem. No.	Description	Philco Part No.	Part No.	Description	Part No.
1	Antenna Transformer.....	32-3186	22	Tubular Condenser (.02 mf., 400V)	30-45168
2	Tubular Condenser (.0015 mf., 200v)	30-45558	23	Output Transformer	
3	Tuning Condenser.....	31-2365		For Speaker 36-1469-1.....	32-8047
4	Tubular Condenser (.05 mf., 200v.)	30-45198		For Speaker 36-1469-9.....	32-8044
5	Tubular Condenser (.15 mf., 400v.)	30-45058	24	Speaker.....	36-1469
6	Resistor (50,000 ohms, 1/3 watt)	33-350244	25	Tubular Condenser (.03 mf., 400v.)	30-44498
7	Mica Condenser (110 mmf.).....	30-1031	26	Electrolytic Condenser	
8	Oscillator Transformer.....	32-3167		(20-20 mf., 150 v).....	30-2382
9	Tubular Condenser (.05 mf., 200v)	30-45198	27	Field Coil-Part of Speaker, PartNo..	36-1469
10	1st I.F. Transformer.....	32-3149	28	Pilot Lamp.....	34-2068
11	2nd I.F. Transformer.....	32-3150	29	Line Resistor.....	33-3367
12	Resistor (2 meg., 1/3 watt)....	33-520244	30	Push-Button Switch.....	42-1485
13	Mica Condenser (250 mmf.).....	30-1032	31	Padding Condenser Strip.....	31-6293
14	Resistor (20,000 ohms, 1/3 watt)	33-320244		Cone Assembly (for Speaker 36-1469-1)	36-4115
15	Volume Control (500,000 ohms)...	33-5306		Cone Assembly (for Speaker 36-1469-9)	36-4113
16	Tubular Condenser (.01 mf., 200v)	30-44798		Cardboard Back.....	27-9314
17	Resistor (4 meg. 1/3 watt).....	33-540244		Dial Window.....	27-5472
18	Resistor (250,000 ohms, 1/3 watt)	33-425244		Drive Cord Assy.....	31-2358
19	Tubular Condenser (.01 mf., 400v)	30-45728		Drive Shaft Assy.....	31-2355
20	Resistor (500,000 ohms, 1/3 watt)	33-450244		Grille cloth.....	44-1288
21	Resistor (130 ohms, 1/2 watt)...	33-113336		Knob Assembly (Push Button).....	27-4823
				Knob Assembly (Tuning, Volume)....	27-4809
				Padding Strip (Tuning Unit).....	31-6293
				Pilot Lamp socket assembly.....	36-9825
				Pointer.....	27-4891
				Power Cord.....	L-3199
				Push Button Switch.....	42-1485
				Scale.....	27-5553
				Sockets.....	27-6130
				Spring (Drive Cord).....	28-8954

MODEL TH-5 is a 5 tube superheterodyne receiver covering a frequency range of 540 to 1720 kilocycles and designed for operation on either alternating current (A.C.) or direct current (D.C.) 115 volts.

This model is equipped with 6 electric push-buttons for automatically selecting stations in addition to dial tuning. Five push-buttons are used for the stations and one push button for selecting dial tuning. The push-buttons cover a frequency range as follows:


Padders (right to left from rear)	Buttons (left to right from front)	Frequency Range	Padders (right to left from rear)	Buttons (left to right from front)	Frequency Range
1 Ant. } 2 Osc. }	1	540 to 1030 kilocycles	7 Ant. } 8 Osc. }	4	900 to 1470 kilocycles
3 Ant. } 4 Osc. }	2	650 to 1100 kilocycles	9 Ant. } 10 Osc. }	5	1160 to 1600 kilocycles
5 Ant. } 6 Osc. }	3	740 to 1240 kilocycles	6	Manual	

An indoor aerial 20 feet in length is attached to the receiver for average receiving conditions; however in apartment houses, hotels or steel re-inforced buildings, the Philco Utility Aerial Part No. 40-8384 is recommended.

NOTE: If no sound is heard after connecting the receiver to the power supply and sufficient time has been allowed for the tubes to heat, reverse the electric plug in the outlet. The same procedure should be observed on A.C. power supplies when a slight hum is heard with the volume turned low.

PHILCO RADIO & TELEV. CORP.

MODELS TP-5, TP-5-I
TP-5T
Schematic, Tuner

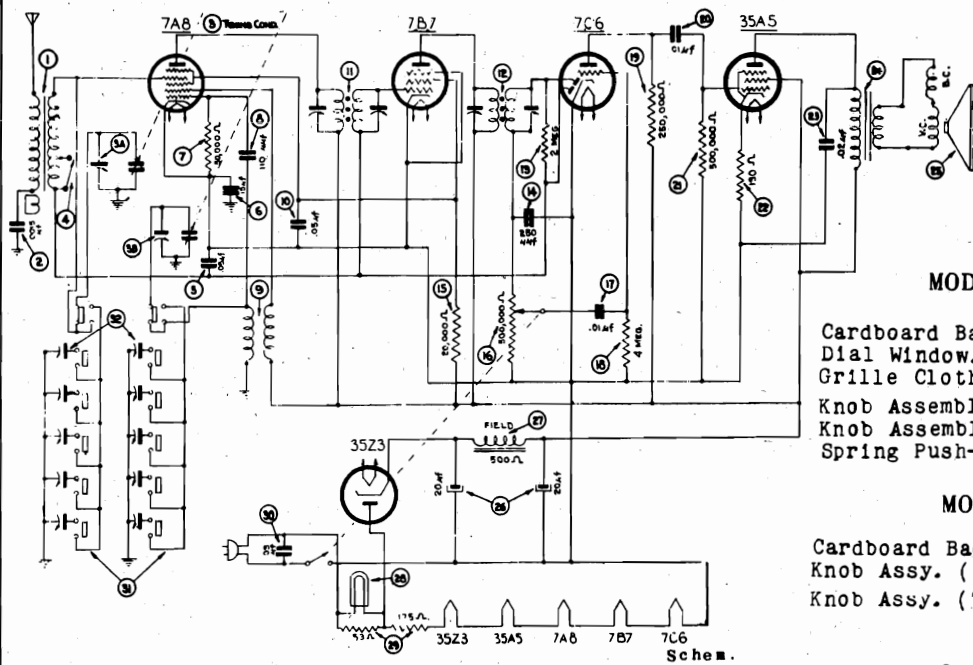

IF PEAK 470 KC
FOR OTHER DATA
SEE INDEX

MODEL TP-5T WALNUT

- Cardboard Back..... 27-9314
- Dial Window..... 27-5472
- Grille Cloth..... 44-1288
- Knob Assembly..... 27-4809
- Knob Assembly (Push Button). 27-4823
- Spring Push-Button Knob..... 28-5686

MODEL TP-5T IVORY

- Cardboard Back..... 27-9328
- Knob Assy. (Push Button).... 27-4830
- Knob Assy. (Tuning, Volume). 27-4810

MODEL TP-5

Schem. No.	Description	Philco Part No.
23	Tubular Condenser (.02 mf., 400V)	30-4516S
24	Output Transformer	
	For Speaker 36-1469-1.....	32-8047
	For Speaker 36-1469-9.....	32-8044
25	Cone Assembly	
	For Speaker 36-1469-1.....	36-4115
	For Speaker 36-1469-9.....	36-4113
26	Electrolytic Condenser (20-20 mf., 150V.)	30-2382
27	Field Coil -- Part of Speaker No.	36-1469
28	Pilot Lamp.....	34-2088
29	Line Resistor.....	33-3387
30	Tubular Condenser (.03 mfd. 400V.)	30-4449S
31	Push-Button Switch.....	42-1485
32	Padding Condenser Strip.....	31-8293
	Drive Cord Assembly.....	31-2358
	Drive Shaft Assembly.....	31-2355
	Drive Drum.....	28-6662
	Padding Strip.....	31-8293
	Pointer.....	27-4891
	Power Cord.....	L-3199
	Push-Button Switch.....	42-1485
	Scale.....	27-5553
	Sockets.....	27-6130
	Spring (Drive Cord).....	28-8954
	Speaker.....	36-1469

REPLACEMENT PARTS

Schem. No.	Description	Philco Part No.
1	Antenna Transformer.....	32-3188
2	Tubular Condenser (.0015 mf., 200V)	30-4555S
3	Tuning Condenser.....	31-2365
4	Switch.....	42-1406
5	Tubular Condenser (.05 mf., 200V)	30-4519S
6	Tubular Condenser (.15 mf., 400V)	30-4505S
7	Resistor (50,000 ohms, 1/3 watt).	33-350244
8	Mica Condenser (110 mmf.).....	30-1031
9	Oscillator Transformer.....	32-3167
10	Tubular Condenser (.05 mf., 200V)	30-4519S
11	1st I.F. Transformer.....	32-3149
12	2nd I.F. Transformer.....	32-3150
13	Resistor (2 meg. 1/3 watt).....	33-520244
14	Mica Condenser (250 mmf.).....	30-1032
15	Resistor (20,000 ohms, 1/3 watt).	33-320244
16	Volume Control (500,000 ohms)...	33-5306
17	Tubular Condenser (.01 mf., 200V)	30-4479S
18	Resistor (4 meg., 1/3 watt).....	33-540244
19	Resistor (250,000 ohms, 1/3 watt)	33-425244
20	Tubular Condenser (.01 mf., 400V).	30-4572S
21	Resistor (500,000 ohms, 1/3 watt)	33-450244
22	Resistor (130 ohms, 1/2 watt)....	33-113336

MODELS TP-5 and TP-5-I are 5 tube superheterodyne receivers having 2 tuning ranges covering from 540 to 1720 kilocycles on the broadcast band and from 2.3 to 2.5 megacycles (M.C.) on the police band. This model is designed for operation on alternating current (A.C.) or direct current (D.C.) 115 volts. These models are identical with the exception of cabinets.

The set is equipped with 6 electric push-buttons for automatically selecting stations in addition to dial tuning. Five push-buttons are used for the stations and one push-button for selecting dial tuning. The push-buttons cover a frequency range as follows:

Padders (right to left from rear)	Circuit	Buttons (left to right from front)	Frequency Range	Padders (right to left from rear)	Circuit	Buttons (left to right from front)	Frequency Range
1	Ant. Osc.	1	540 to 1030 kilocycles	7	Ant. Osc.	4	900 to 1470 kilocycles
2	Ant. Osc.			8	Ant. Osc.		
3	Ant. Osc.	2	650 to 1100 kilocycles	9	Ant. Osc.	5	1160 to 1600 kilocycles
4	Ant. Osc.			10	Ant. Osc.		
5	Ant. Osc.	3	740 to 1240 kilocycles			6	Manual
6	Ant. Osc.						

An indoor aerial 20 feet in length is attached to the receiver for average receiving conditions; however in apartment houses, hotels or steel re-inforced buildings, the Philco Utility Aerial Part No. 40-8384 is recommended.

NOTE: If no sound is heard after connecting the receiver to the power supply and sufficient time has been allowed for the tubes to heat, reverse the electric plug in the outlet. The same procedure should be observed on A.C. power supplies when a slight hum is heard with the volume turned low.

MODELS TP-5, TP-11, TH-5
 Tuner Data
 MODEL 39-8
 Alignment

PHILCO RADIO & TELEV. CORP.

SETTING AND OPERATING ELECTRIC PUSH BUTTON TUNING

Models TP-5, TP-11, TH-5

Select five of your favorite nearby broadcast stations and remove their call letters from the station call letter tab sheets supplied. Place the call letters in the windows above the buttons, making sure that each respective button covers the frequency of the station for which it is to be used. The frequency of the popular stations in your vicinity may be found by consulting any station list. The frequency range of the buttons is as follows:—

Paddrs (right to left from rear)	Circuit	Buttons (left to right from front)	Frequency Range
1	Ant }	1	540 to 1030 kilocycles
2	Osc }		
3	Ant }	2	650 to 1100 kilocycles
4	Osc }		
5	Ant }	3	740 to 1240 kilocycles
6	Osc }		
7	Ant }	4	900 to 1470 kilocycles
8	Osc }		
9	Ant }	5	1160 to 1600 kilocycles
10	Osc }		
		6	Dial

The left-hand button looking at the front of the cabinet corresponds to the two right-hand screws looking at the rear and covers the lowest frequency range.

With the "Manual" button depressed, tune in the station whose call letters appear above the left-hand button. Then depressing the left-hand button, tune in this station by rotating

the "OSC" screw of No. 1 pair (at the right end of the unit looking at the rear of the chassis). Turn the screw slowly and listen carefully or the station may be passed without noticing it. After the "OSC" screw has been adjusted for maximum volume, the corresponding "ANT" screw should be adjusted for maximum. For some stations, it may be necessary to re-adjust the "OSC" screw after the "ANT" screw has been set. Switching from the "Manual" to the automatic push button will enable you to make sure you have the correct station tuned in. When the first station has been set, the same procedure should be followed for the remaining buttons, first tuning in the desired station by means of the "Manual" control.

To tune the receiver with the "Push-Buttons," simply press in the button which is under the call letters of the desired station. Your station will be received instantly. The volume of the program may be controlled with the manual volume control.

While the above procedure is satisfactory in setting up push buttons for stations, a very accurate adjustment can be obtained with a vacuum tube voltmeter.

Model 39-8

ALIGNMENT OF COMPENSATORS

EQUIPMENT REQUIRED:

- (1) Signal Generator; Philco Model 077 Signal Generator which has a fundamental frequency range from 115 to 38,000 K.C. is the correct instrument for this purpose.
- (2) Output Meter, Philco Model 027 Circuit Tester, incorporates a sensitive output meter and is recommended.
- (3) Philco Fiber Handle Screw Driver, Part No. 45-2810 and Fiber Wrench, Part No. 3164.

OUTPUT METER:

The Philco 027 Output Meter is connected to the plate and screen terminals of the type 43 tube and adjusted for the 0 to 30 A.V.C. scale. After connecting the output meter, adjust the compensators in the order as shown in the tabulation below. Locations of the compensators are shown on Fig. 2. If the output meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.

Signal Generator

Receiver


Operation In Order	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Setting	Adjust Compensators in order	Special Instructions
1	6A7 Grid Cap	.1 mf.	470 K.C.	580 K.C.	Vol.Cont. Max.	I2A, 10B, 10A	Adjust for max. output
2	Ant. Lead	100 mf.	1550 K.C.	1550 K.C.	Vol.Cont. Max.	2B, 2A	Adjust for max. output Note A, B.

NOTE A--The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.

NOTE B--DIAL CALIBRATION: With the tuning condenser in "maximum capacity" position (plates fully meshed), set the dial pointer between the two horizontal lines at the low frequency end of the scale (550 K.C.).

PHILCO RADIO & TELEV. CORP.

MODEL TP-10
Schematic
Notes

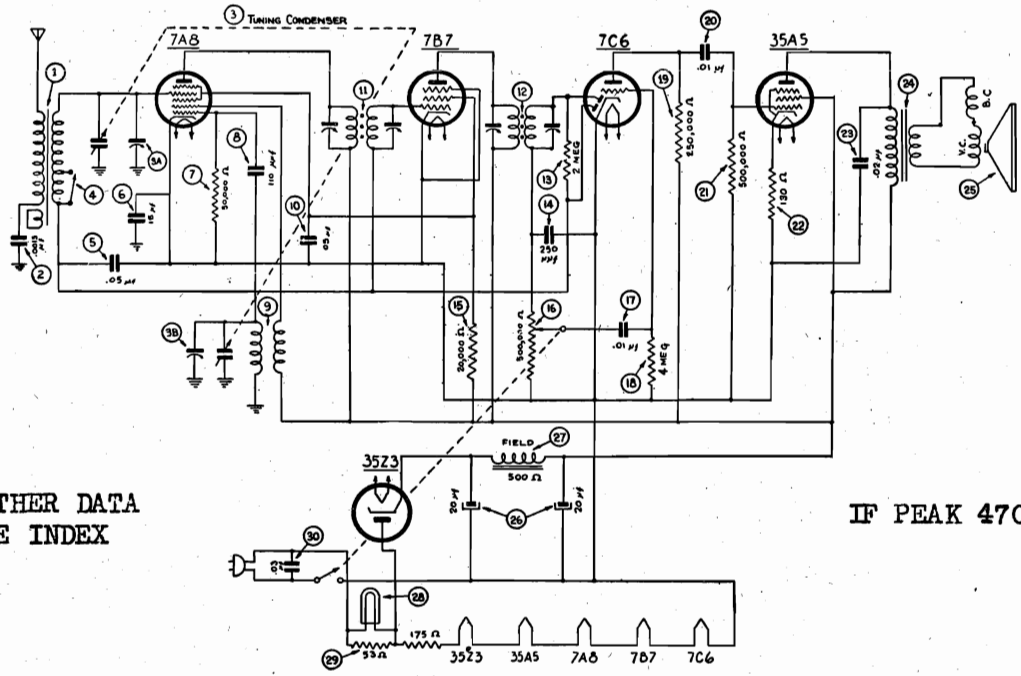

FOR OTHER DATA
SEE INDEX

IF PEAK 470 KC

REPLACEMENT PARTS

TRANSITONE HOME RADIO MODEL TP-10

Schem. No.	Description	Philco Part No.	Schem. No.	Description	Philco Part No.
1	Antenna Transformer.....	32-3164	25	For Speaker 36-1469-9.....	32-8044
2	Tubular Condenser (.0015 mf., 200V)	30-45558	26	Cone Assembly For Speaker 36-1469-1.....	36-4115
3	Tuning Condenser.....	31-2354		For Speaker 36-1469-9.....	36-4113
4	Switch.....	42-1406	26	Electrolytic Condenser (20-20 mf., 150 V.).....	30-2382
5	Tubular Condenser (.05 mf., 200V)	30-45198	27	Field Coil....Part of Speaker No.	36-1469
6	Tubular Condenser (.15 mf., 400V)	30-45058	28	Pilot Lamp.....	34-2068
7	Resistor (50,000 ohms, 1/3 watt).	33-350244	29	Line Resistor.....	33-3387
8	Mica Condenser (110 mmf.).....	30-1031	30	Tubular Condenser (.03 mf., 400V)	30-4449S
9	Oscillator Transformer.....	32-3152		Cabinet.....	10367-A
10	Tubular Condenser (.05 mf., 200V)	30-45198		Cardboard Back.....	27-9320
11	1st I.F. Transformer.....	32-3149		Disc Feet.....	27-9337
12	2nd I.F. Transformer.....	32-3150		Drive Cord Assembly.....	31-2358
13	Resistor (2 meg., 1/3 watt).....	33-520244		Drive Drum.....	56-8033
14	Mica Condenser (250 mmf.).....	30-1032		Driving Arm (Pointer Drive).....	56-1376
15	Resistor (20,000 ohms, 1/3 watt).	33-320244		Drive Shaft Assy.....	31-2355
16	Volume Control (500,000 ohms)....	33-5306		Grille Silk & Gasket.....	40-6452
17	Tubular Condenser (.01 mf., 200V).	30-44798		Knob Assembly.....	27-4815
18	Resistor (4 meg., 1/3 watt).....	33-540244		Pilot Lamp Socket Assembly.....	38-982B
19	Resistor (250,000 ohms, 1/3 watt)	33-425244		Power Cord.....	L-3199
20	Tubular Condenser (.01 mf., 400V)	30-4572S		Rubber Tubing (Driving Arm).....	27-9334
21	Resistor (500,000 ohms, 1/3 watt)	33-450244		Sockets.....	27-6130
22	Resistor (130 ohms, 1/2 watt)....	33-113336		Speaker Assembly.....	36-1469
23	Tubular Condenser (.02 mf., 400V)	30-4516S		Spring.....	28-8751
24	Output Transformer For Speaker 36-1469-1.....	32-8047			


MODEL TP-10 is a 5 tube superheterodyne receiver having 2 tuning ranges covering from 540 to 1720 kilocycles (K.C.) on the broadcast band and 2.3 to 2.5 megacycles (M.C.) on the police band. This model is designed for operation on either alternating current (A.C.) or direct current (D.C.) 115 volts. The receiver is assembled in a streamlined, 2 toned plastic cabinet.

An indoor aerial 20 feet in length is attached to the receiver for average receiving conditions; however in apartment houses, hotels or steel re-inforced buildings, the Philco Utility Aerial Part No. 40-8384 is recommended.

NOTE: If no sound is heard after connecting the receiver to the power supply and sufficient time has been allowed for the tubes to heat, reverse the electric plug in the outlet. The same procedure should be observed on A.C. power supplies when a slight hum is heard with the volume turned low.

MODEL TP-11
Schematic, Tuner

PHILCO RADIO & TELEV. CORP.

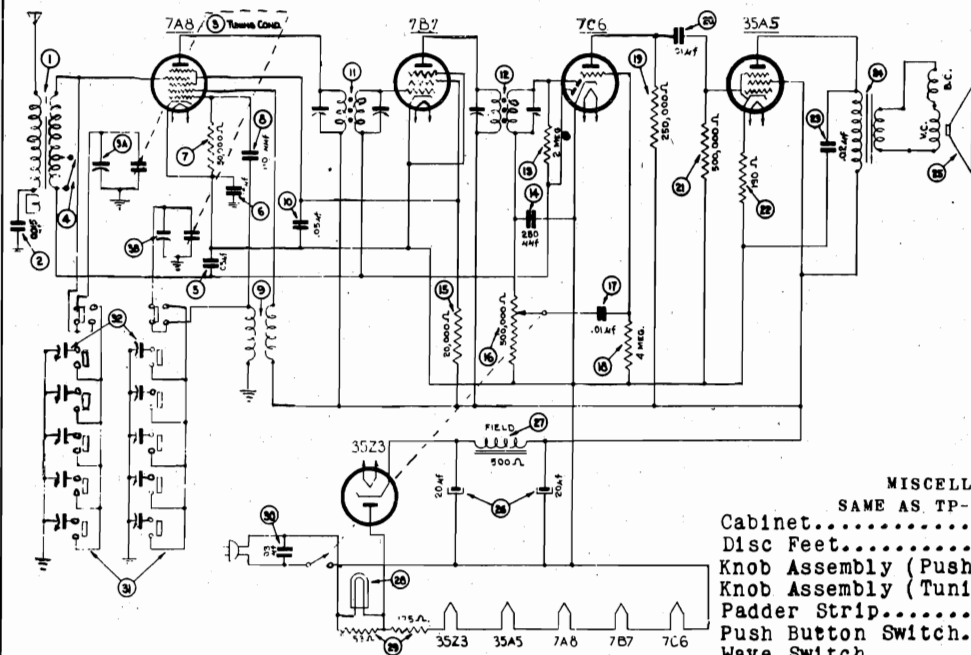

IF PEAK 470 KC

FOR OTHER DATA
SEE INDEX

MISCELLANEOUS PARTS

	SAME AS TP-10 WITH EXCEPTION	
Cabinet.....		10368-A
Disc Feet.....		27-9337
Knob Assembly (Pushbutton).....		27-4824
Knob Assembly (Tuning).....		27-4815
Padder Strip.....		31-6293
Push Button Switch.....		42-1485
Wave Switch.....		42-1408

REPLACEMENT PARTS

Schem. No.	Description	Philco Part No.
1	Antenna Transformer.....	32-3168
2	Tubular Condenser (.0015 mf., 200V)	30-4555S
3	Tuning Condenser.....	31-2365
4	Switch.....	42-1406
5	Tubular Condenser (.05 mf., 200V)	30-4519S
6	Tubular Condenser (.15 mf., 400V)	30-4505S
7	Resistor (50,000 ohms, 1/3 watt).	33-350244
8	Mica Condenser (110 mmf.).....	30-1031
9	Oscillator Transformer.....	32-3167
10	Tubular Condenser (.05 mf., 200V)	30-4519S
11	1st I.F. Transformer.....	32-3149
12	2nd I.F. Transformer.....	32-3150
13	Resistor (2 meg., 1/3 watt).....	33-520244
14	Mica Condenser (250 mmf.).....	30-1032
15	Resistor (20,000 ohms, 1/3 watt)	33-320244
16	Volume Control (500,000 ohms)...	33-5306

17	Tubular Condenser (.01 mf., 200V)	30-4479S
18	Resistor (4 meg., 1/3 watt).....	33-540244
19	Resistor (250,000 ohms, 1/3 watt)	33-425244
20	Tubular Condenser (.01 mf., 400V)	30-4572S
21	Resistor (500,000 ohms, 1/3 watt)	33-450244
22	Resistor (130 ohms, 1/2 watt)...	33-113336
23	Tubular Condenser (.02 mf., 400V)	30-4516S
24	Output Transformer	
	For Speaker 36-1469-1.....	32-8047
	For Speaker 36-1469-9.....	32-8044
25	Cone Assembly	
	For Speaker 36-1469-1.....	36-4115
	For Speaker 36-1469-9.....	36-4113
26	Electrolytic Condenser	
	(20-20 mf., 150 V.).....	30-2382
27	Field Coil.....Part of Speaker No36-1469	
28	Pilot Lamp.....	34-2068
29	Line Resistor.....	33-3367
30	Tubular Condenser (.03 mf., 400 V)	30-4449S
31	Push-Button Switch.....	42-1485
32	Padding Condenser Strip.....	31-6293

MODEL TP-11 is a 5 tube superheterodyne receiver having 2 tuning ranges covering from 540 to 1720 kilocycles (K.C.) on the broadcast band and from 2.3 to 2.5 megacycles (M.C.) on the police band. This model is assembled in a 2 toned, streamlined plastic cabinet.

This model is equipped with 6 electric push-buttons for automatically selecting stations in addition to dial tuning. Five push-buttons are used for the stations and one push-button for selecting dial tuning. The push-buttons cover a frequency range as follows:


Padders (right to left from rear)	Circuit	Buttons (left to right from front)	Frequency Range	Padders (right to left from rear)	Circuit	Buttons (left to right from front)	Frequency Range
1	Ant. Osc.	1	540 to 1030 kilocycles	7	Ant. Osc.	4	900 to 1470 kilocycles
2	Ant. Osc.			8	Ant. Osc.		
3	Ant. Osc.	2	650 to 1100 kilocycles	9	Ant. Osc.	5	1160 to 1600 kilocycles
4	Ant. Osc.			10	Ant. Osc.		
5	Ant. Osc.	3	740 to 1240 kilocycles			6	Manual
6	Ant. Osc.						

An indoor aerial 20 feet in length is attached to the receiver for average receiving conditions; however in apartment houses, hotels or steel re-inforced buildings, the Philco Utility Aerial Part No. 40-6384 is recommended.

NOTE: If no sound is heard after connecting the receiver to the power supply and sufficient time has been allowed for the tubes to heat, reverse the electric plug in the outlet. The same procedure should be observed on A.C. power supplies when a slight hum is heard with the volume turned low.

PHILCO RADIO & TELEV. CORP.

MODEL TP-12
Schematic, Notes

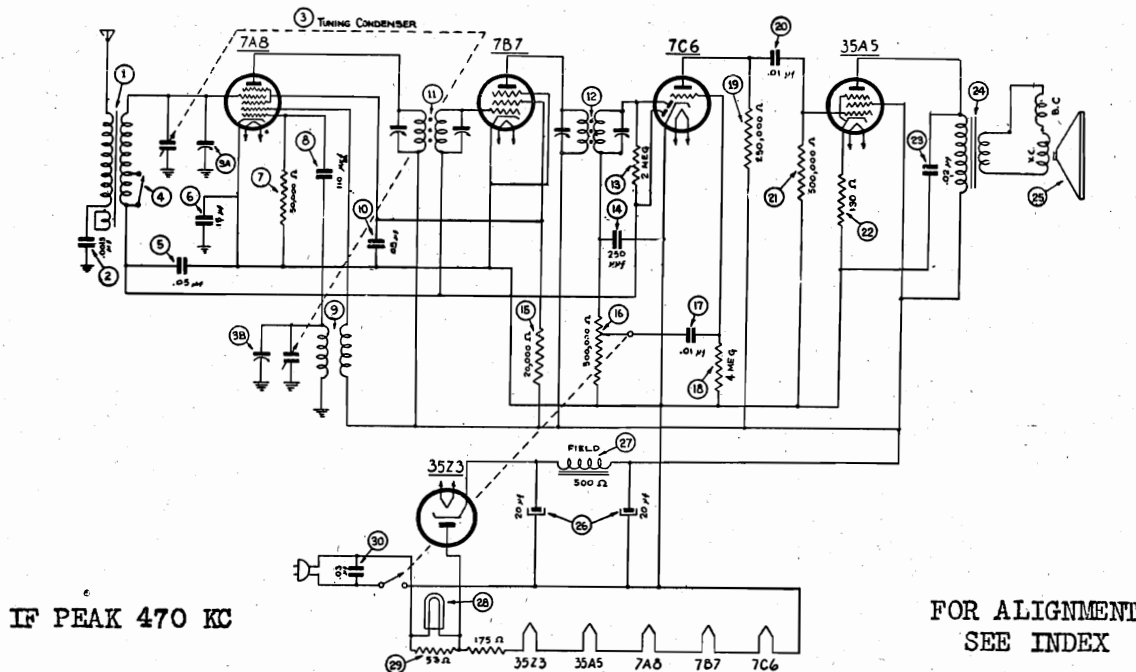

IF PEAK 470 KC

FOR ALIGNMENT
SEE INDEX

REPLACEMENT PARTS

TRANSITONE HOME RADIO MODEL TP-12

Schem. No.	Description	Philco Part No.	Schem. No.	Description	Philco Part No.
1	Antenna Transformer.....	32-3164			
2	Tubular Condenser (.0015 mf., 200V)	30-4555S	25	Cone Assembly	32-8044
3	Tuning Condenser.....	31-2354		For Speaker 36-1469-1.....	36-4115
4	Switch.....	42-1406		For Speaker 36-1469-9.....	36-4113
5	Tubular Condenser (.05 mf., 200V).	30-4519S	26	Electrolytic Capacitor	
6	Tubular Condenser (.15 mf., 400V).	30-4505S		(20-20 mf., 150V).....	30-2382
7	Resistor (50,000 ohms, 1/3 watt).	33-350244	27	Field Coil....Part of Speaker No	36-1469
8	Mica Condenser (110 mmf.).....	30-1031	28	Pilot Lamp.....	34-2068
9	Oscillator Transformer.....	32-3152	29	Line Resistor.....	33-3367
10	Tubular Condenser (.05 mf., 200V).	30-4519S	30	Tubular Condenser (.03 mf., 400V)	30-4449S
11	1st I.F. Transformer.....	32-3149		Cardboard.....	27-9299
12	2nd I.F. Transformer.....	32-3150		Cabinet.....	10374
13	Resistor (2 meg., 1/3 watt).....	33-520244		Cable (Power).....	L-3183
14	Mica Condenser (250 mmf.).....	30-1032		Dial Scale.....	27-5498
15	Resistor (20,000 ohms, 1/3 watt)..	33-320244		Drive Drum.....	28-6662
16	Volume Control (500,000 ohms)....	33-5306		Drive Shaft Assembly.....	31-2355
17	Tubular Condenser (.01 mf., 200V).	30-4479S		Drive Cord Assembly.....	31-2358
18	Resistor (4 meg., 1/3 watt).....	33-540244		Knob Assembly.....	27-4820
19	Resistor (250,000 ohms, 1/3 watt).	33-425244		Pointer Dial.....	56-1326
20	Tubular Condenser (.01 mf., 400V).	30-4572S		Spring (Drive Cord).....	28-8751
21	Resistor (500,000 ohms, 1/3 watt).	33-450244		Speaker.....	36-1469
22	Resistor (130 ohms, 1/2 watt).....	33-113336		Socket Assembly (Pilot Lamp)....	38-9825
23	Tubular Condenser (.02 mf., 400V).	30-4516S		Sockets.....	27-6128
24	Output Transformer				
	For Speaker 36-1469-1.....	32-8047			


MODEL TP-12 is a 5 tube superheterodyne receiver having 2 tuning ranges covering from 540 to 1720 kilocycles (K.C.) on the broadcast band and from 2.3 to 2.5 megacycles (M.C.) on the police band. This model is designed to operate on either alternating (A.C.) or direct current (D.C.) 115 volts. This model is assembled in a walnut cabinet with contrasting maple inlays.

An indoor aerial 20 feet in length is attached to the receiver for average receiving conditions; however in apartment houses, hotels or steel re-inforced buildings, the Philco Utility Aerial Part No. 40-6334 is recommended.

NOTE: If no sound is heard after connecting the receiver to the power supply and sufficient time has been allowed for the tubes to heat, reverse the electric plug in the outlet. The same procedure should be observed on A.C. power supplies when a slight hum is heard with the volume turned low.

MODELS 12TP, 39-12
39-12TP, Early, Late
Schematic, Changes

PHILCO RADIO & TELEV. CORP.

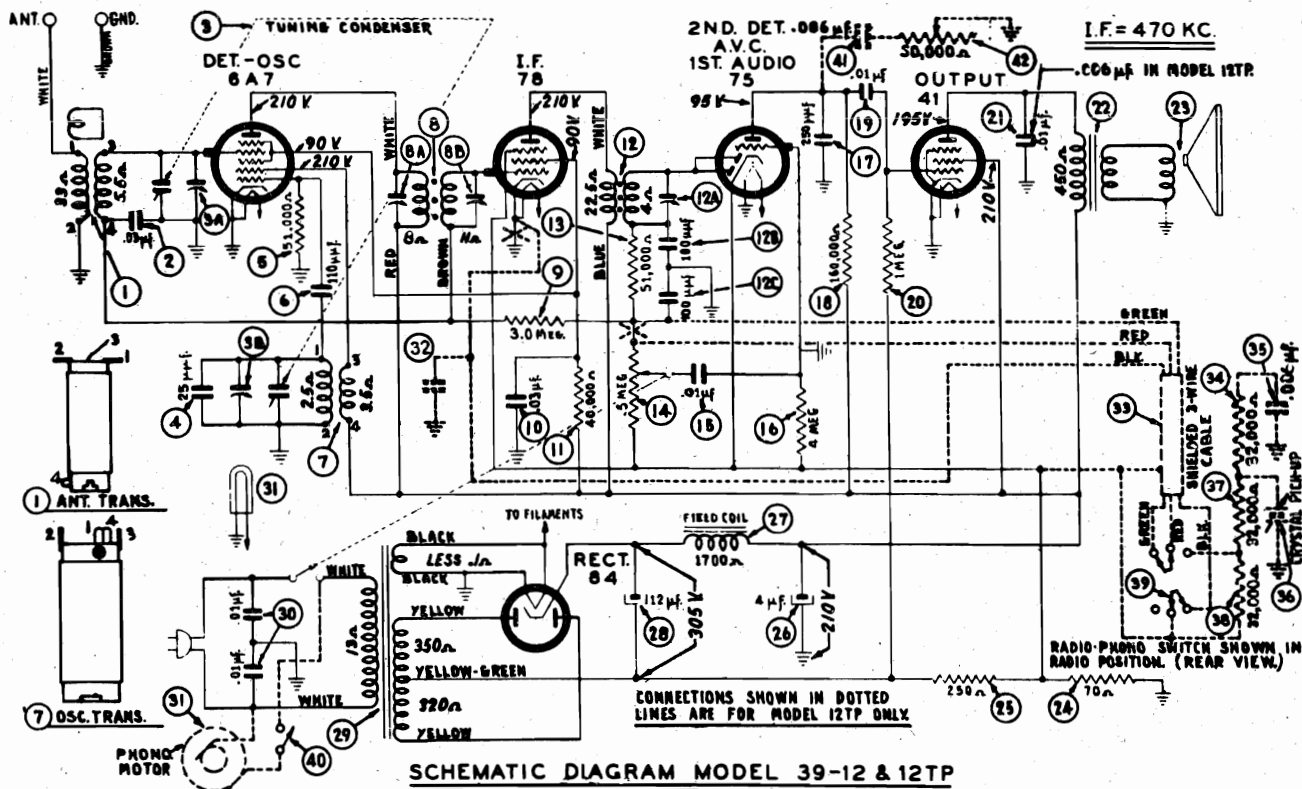

The wiring of the earlier and later production models 12-TP were different. The complete circuit diagram of the early production receiver is shown above. The later production receivers used a Model 39-6 chassis.


The Phonograph connections as used with Model 39-6 is shown below. Refer to index for Model 39-6.

**MODEL 39-12TP
"EARLY TYPE"**

Schem. No.	Description	Part No.
31	Motor (115 Volts).....	35-1174
32	Condenser (.05 mfd., 200 V.).....	30-4519
33	Cable.....	
34	Resistor (32,000 ohms).....	33-332339
35	Condenser (.006 mfd., 400 V.).....	30-4591
36	Crystal Cartridge.....	415-1027
37	Resistor (32,000 ohms).....	33-332339
38	Resistor (32,000 ohms).....	33-332339
39	Switch (Radio-Phono).....	42-1522
40	Motor (Power Switch).....	42-1498
41	Condenser (.006 mfd., 400 V.).....	30-4591
42	Tone Control.....	33-5330
	Pickup Complete.....	35-2027

**MODEL 39-12TP
"LATER PRODUCTION MODELS"**

Schem. No.	Description	Part No.
34	Condenser (.006 mfd., 400 V.).....	30-4591
35	Tone Control.....	33-5330
36	Crystal Cartridge (Pickup).....	415-1027
37	Resistor (30,000 ohms).....	33-330339
38	Resistor (100,000 ohms).....	33-410339
39	Switch (Radio-Phono).....	42-1522
40	Cable.....	
41	Condenser (.05 mfd., 200 V.).....	30-4519
	Pickup Complete.....	35-2027
	Motor (115 Volt A.C. 60 cycle).....	35-1174
	Power Switch (Motor).....	42-1498

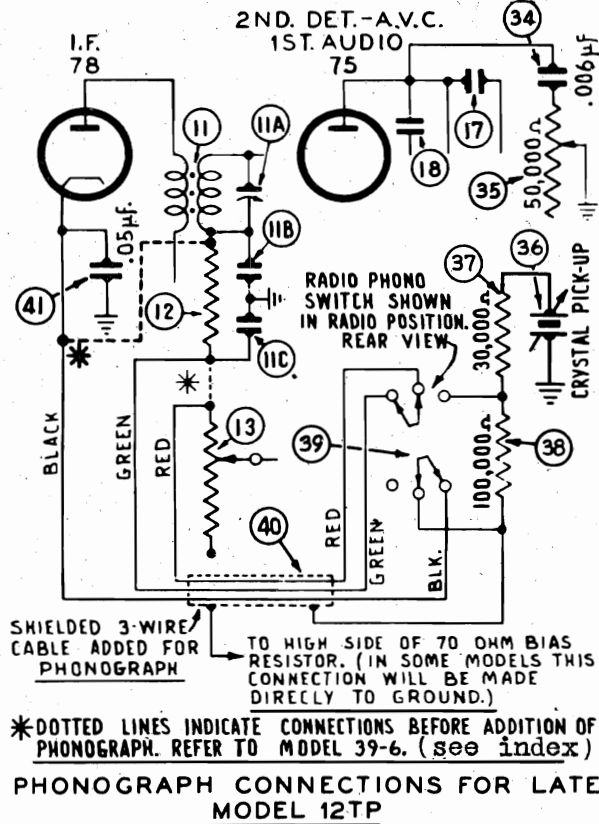

PHILCO RADIO & TELEV. CORP.

MODELS 12TP, 39-12
39-12TP, Early, Late
Alignment, Trimmers
Socket, Parts

PHILCO RADIO PHONOGRAPH.....MODEL 12-TP

SPECIFICATIONS

TYPE OF CIRCUIT: Model 39-12 TP is a table model combination semi-automatic phonograph and superheterodyne radio receiver. The phonograph mechanism automatically places the pickup on the record when the lid is closed and will play 10 or 12 inch records.

A.C. operated, superheterodyne with automatic volume control, pentode audio output, and covers the standard broadcast and state police frequencies.

POWER SUPPLY: Voltage 115 Frequency Cycles 50 To 60

INTERMEDIATE FREQUENCY: 470 K.C.

R.F. TUNING RANGE: 540 to 1720 K.C.

AUDIO OUTPUT: 2 watts.

PHILCO TUBES USED: Five: One 6A7, Det. Osc.; One 78, I.F.; One 75, 2nd Det., 1st Audio; One 41, Output, and One 84, Rectifier.

TUNING MECHANISM: 8 to 1 Ratio using Pulley and Cord.

ALIGNMENT OF COMPENSATORS

EQUIPMENT REQUIRED:

- (1) Signal Generator
- (2) Output Meter
- (3) Philco Fibre Handle Screw Driver, Part No. 45-2810 and Fibre Wrench, Part No. 3164.

OUTPUT METER:

The O27 Output Meter is connected to the plate and cathode terminals of the 41 tube. Adjust the meter to use the (0-30) volt scale and advance the attenuator control of the generator until a readable

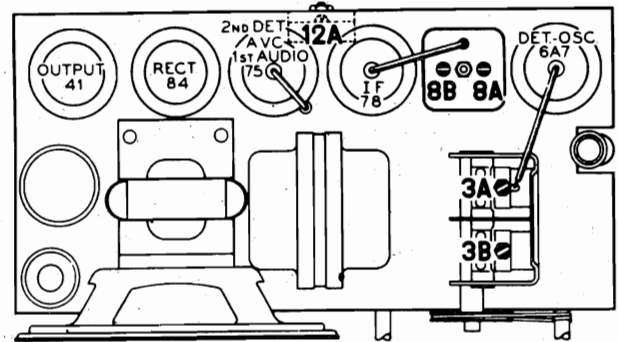


FIG. 2.—Locations of Compensators.

indication is noted on the output meter after signal is applied.

DIAL CALIBRATION:

- 1 Turn the tuning condenser to maximum capacity position (plates fully meshed).
- 2 Holding the tuning condenser in this position, turn the pointer until it is 1/16 of an inch below the three lines of the scale at the 550 K.C. end. This is the correct position of pointer at maximum capacity of tuning condenser.

OPERATIONS IN ORDER	SIGNAL GENERATOR			RECEIVER			NOTES
	Output Connections to Receiver	Dummy Antenna	Dial Setting	Dial Setting	Control Settings	Adjust Compensators	
1	6A7 Grid	.1 mfd	470 KC	580 KC	Vol (Max)	(12A), (8B) (8A)	Adjust for Max.
2	Aerial (White Wire)	100 mfd	1500 KC	1500 KC	Vol (Max)	(3B), (3A)	Adjust for Max.

REPLACEMENT PARTS

MODEL 39-12 TP

Schem. No.	Description	Part No.	Schem. No.	Description	Part No.
1	Antenna Transformer.....	32-2583	*27	Field coil assembly (not supplied; see Note)	
2	Condenser (0.05 mfd. tubular).....	30-4444	28	Condenser (Electrolytic 12 mfd.).....	30-2235
3	Tuning Condenser Assembly.....	31-2258	29	Power Transformer (115V, 50 to 60 cycle)	32-7993
4	Compensator (Part of tuning condenser 3)		30	Condenser (0.01 mfd., .01 mfd.).....	3903-DG
5	Resistor (51,000 ohms, 1/2 watt).....	33-351339		Pilot Lamp.....	34-2068
6	110 mfd. mica.....	30-1031		Bezel and Glass Assembly.....	40-6158
7	Oscillator Transformer.....	32-3019		Bezel Clamp.....	28-5153
8	First I.F. Transformer.....	32-3018		Cable (Power).....	L-2778
9	Resistor (2 megohms).....	33-520339		Clip (R.F. Trans. small).....	28-5002
10	Condenser (0.03 mfd. tubular).....	30-4449		Clip (R.F. Trans. large).....	28-5003
11	Resistor (40,000 ohms, 1/2 watt).....	33-340339		Clip (Tuning Shaft).....	28-8610
12	Second I.F. Transformer.....	32-2944		Dial Assembly.....	31-2097
13	Resistor (51,000 ohms, 1/2 watt).....	33-351339		Dial Pointer.....	28-5185
14	Volume Control.....	33-5230		Dial Drive Cord Assembly.....	31-2082
15	Condenser (0.01 mfd. tubular).....	30-4479		Dial Drive Drum.....	28-6662
16	Resistor (4 megohms, 1/2 watt).....	33-540339		Dial Drive Spring.....	28-8751
17	Condenser (250 mfd. mica).....	30-1032		Knob (Tuning and Volume).....	27-4604
18	Resistor (160,000 ohms, 1/2 watt).....	33-416339		Shaft Assembly (Tuning).....	31-2179
19	Condenser (0.01 mfd. tubular).....	30-4169		Shield (Tube).....	28-5059
20	Resistor (2 megohm, 1/2 watt).....	33-510339		Socket (6 prong).....	27-6036
21	Condenser (0.01 mfd. tubular).....	30-4169		Socket (7 prong).....	27-6037
22	Output Transformer.....	32-7861		Socket (5 prong).....	27-6035
23	Cone and Voice Coil Assembly.....	36-4084		Stop--Rubber.....	27-4540
24	Resistor (70 ohms, 1/2 watt).....	33-070339		Speaker Model B0-1.....	36-1418
25	Resistor (250 ohms, 1/2 watt).....	33-125431		Pilot Lamp Assembly.....	31-2179
26	Condenser (Electrolytic 4 mfd.).....	30-2236			

* Entire Speaker must be replaced when field coil is open or damaged.

**MODEL 35-1169, Automatic
Record Changer**
PHILCO RADIO & TELEV. CORP.
Notes

Automatic record changer Part No. 35-1169 plays eight 10" records automatically or eight 12" records manually. The last record remains on the turntable and repeats as long as the record changer is in operation either in the manual or automatic position.

OPERATION
AUTOMATIC POSITION:

To load the mechanism lift the record removing arm at (A) Fig. 1 to the upright position. To adjust the pickup to play 10" records, automatically, push the pickup stop at (K) Fig. 1 back away from the pickup. To play 12" records manually, pull the stop forward toward the needle as far as it will go. Place records on turntable. Throw switch at (N) Fig. 1 to the "On" position. Mechanism will now operate and reject each record after it has been played through. To reject a record and play the next record below it, pull the latch lever at (L) Fig. 1 forward.

MANUAL POSITION:

To operate the mechanism in the manual position, lift the record removing arm at (A) Fig. 1 to the upright position. 10 or 12" records can then be played by the position of the pickup stop at (K) Fig. 1. To play 10" records manually, push the pickup stop at (K) Fig. 1 back away from the pickup needle. For 12" records, pull the stop forward toward the needle as far as it will go.

MOTOR LUBRICATION

The motor installed in this Record Changer is governor controlled, with all gearing enclosed and leaves the factory lubricated for proper operation. For best results, lubricate the motor at regular intervals with a pure mineral oil as light as obtainable. Under no circumstances use any oil heavier than an SAE #10 nor any oil containing mixtures of animal or vegetable oils.

The governor disc engages with a felt brake. This felt is impregnated with a lubricating solution sufficient for proper operation for approximately six months under normal conditions. An oil hole is provided in the top of the governor housing for re-lubricating the brake felt.

MOTOR SPEED

The motor speed is adjusted by means of a slotted post (C) 3 Fig. 1 which is located under the turntable. To change motor speed rotate this post slightly by means of a screw driver.

TRIP MECHANISM

The trip mechanism is the trigger that sets the Record Changer in motion. This is done by allowing the latch bar at (O) Fig. 1 to drop in front of, and be actuated by the cam at (P) Fig. 1. This cam is driven by the motor and is in motion as long as the motor is running. If this mechanism does not operate smoothly, the precautions outlined in succeeding paragraphs should be observed.

First of all, make sure that the square pin in the latch lever at (U) Fig. 1 latches properly in the notch in the lift lever at (1) Fig. 1. When latched, the notch should be engaged approximately one-half of its depth. The depth of engagement is adjusted by means of the eccentric washer and locking screw at (J) Fig. 1. Now run the record changer through its cycle. If the square pin fails to engage the notch in the lift lever, first check the tension of the latch spring at (H) Fig. 1 to insure that the notch can engage the pin. Next check the tension of the reset spring at (E) Fig. 1. This reset spring should not be under tension when the latch bar is latched but should have enough tension when the latch bar drops back off of the cam to cause the square pin to over travel the notch in the lift lever.

IMPORTANT --- Before attempting to change the tension of any spring, be sure that the parts involved work freely without any tendency to bind, as of course any binding condition would preclude proper operation.

The Record Changer is adjusted at the factory to trip on a spiral trip groove record when the phonograph needle is 1-3/4" from the edge of the hole in the center of the record.

When eccentric or oscillating trip groove records are used, tripping is effected by means of the

hardened steel pin in the end of tone arm lift crank at (S) Fig. 2 engaging the serrated block on the trip lever at (T) Fig. 2. There must be a minimum of 1/32" play between the end of the pin and the block, when, with a short needle, (5/8" Minimum Length) the pickup is resting on one record on the turntable. If the pressure of the pin on the block is not sufficient to insure operation, then check the pressure spring which is located up under the pickup.

The oval head pivot screw at (R) Fig. 1 serves as a pivot for the lift lever at (1) Fig. 1. This screw should allow the lift lever to be raised by the latch bar to its maximum height without binding but also without any additional play.

If the Record Changer fails to trip, see if the phonograph needle is jumping out of a worn record trip groove. Next make certain that all parts of the mechanism work freely and smoothly. If it is found that the latch bar at (O) Fig. 1 is not dropping in far enough to engage the cam at (P) Fig. 1 then check the tension of the trip spring at (B) Fig. 1.

RECORD REMOVING MECHANISM

The record Changer is adjusted so that it will always leave one record on the turntable. This is done to prevent the phonograph needle from damaging the covering on the turntable.

In case the Record Removing Mechanism fails to operate smoothly, proceed as follows: First make certain that all parts work freely with no binding in pivots or bearings, and that the record removing arm assembly rests on the stop screw at (Q) Fig. 3. Next stop the motor in such a position that the latch bar at (O) Fig. 1 can swing by and clear the cam at (P) Fig. 1. Place just one record on the turntable and measure from the top of this record down to the base plate. This distance should be one inch. Now by pulling the reject lever at (L) Fig. 1 first, it will be found possible to swing the record removing finger at (Y) Fig. 3 over to where it just touches the edge of the record. If the adjustment is correct, the record removing finger should just barely rise over the edge of the first record. If adjustment is required it can be made by means of the stop screw at (Q) Fig. 3. In the event the record removing arm raises the record from the turntable and drops it back in place without removing it, check the lift adjustment at (V) Fig. 1. This adjustment consists of an eccentric stud which is provided with a lock nut, and is made by loosening the lock nut and turning the eccentric stud. The lift adjustment should be set so that the hole in the center of the record just clears turntable spindle when the Record Changer is in operation.

PICKUP LOWERING MECHANISM

The pickup lowering mechanism has two functions. First, it lowers the phonograph needle gently to the surface of the record. Second, it feeds the needle toward the center of the record so that it will enter the playing groove.

If the pickup descends too fast or too slow, adjust the speed of descent by turning the knurled thumb nut on the dashpot sleeve at (W) Fig. 2.

The unit is adjusted at the factory so that the needle will be set down approximately 3/32" in from the edge of the record. An adjusting screw is provided on the side of the pickup at (M) Fig. 2. If the needle is being lowered onto the playing surface of the record, and the adjusting screw at (M) Fig. 2 fails to correct the condition proceed as follows: First stop the record changer, with the pickup in the maximum raised position and check the clearance between the underside of the pickup shelf at (Z) Fig. 2 and the tip of the dashpot. This clearance should be very small as otherwise the pickup will tend to bounce as it is lowered. There must be sufficient clearance however to prevent the pickup shelf from rubbing on the tip of the dash pot, or the pickup will not swing out far enough to allow the adjustable stop at (K) Fig. 2 to come to rest against the dashpot. Check this clearance in both 10" and 12" record positions. If adjustment is required, the height of the dashpot may be regulated by loosening the nuts on the bottom of the lift lever stud at (X) Fig. 4 and changing their position on the stud. To raise the dashpot turn the nuts clockwise, to lower the dashpot turn the nuts counter-clockwise. Be sure to lock the nuts tightly together after the adjustment is made.

PHILCO RADIO & TELEV. CORP.

MODEL 35-1169
Assembly, Parts

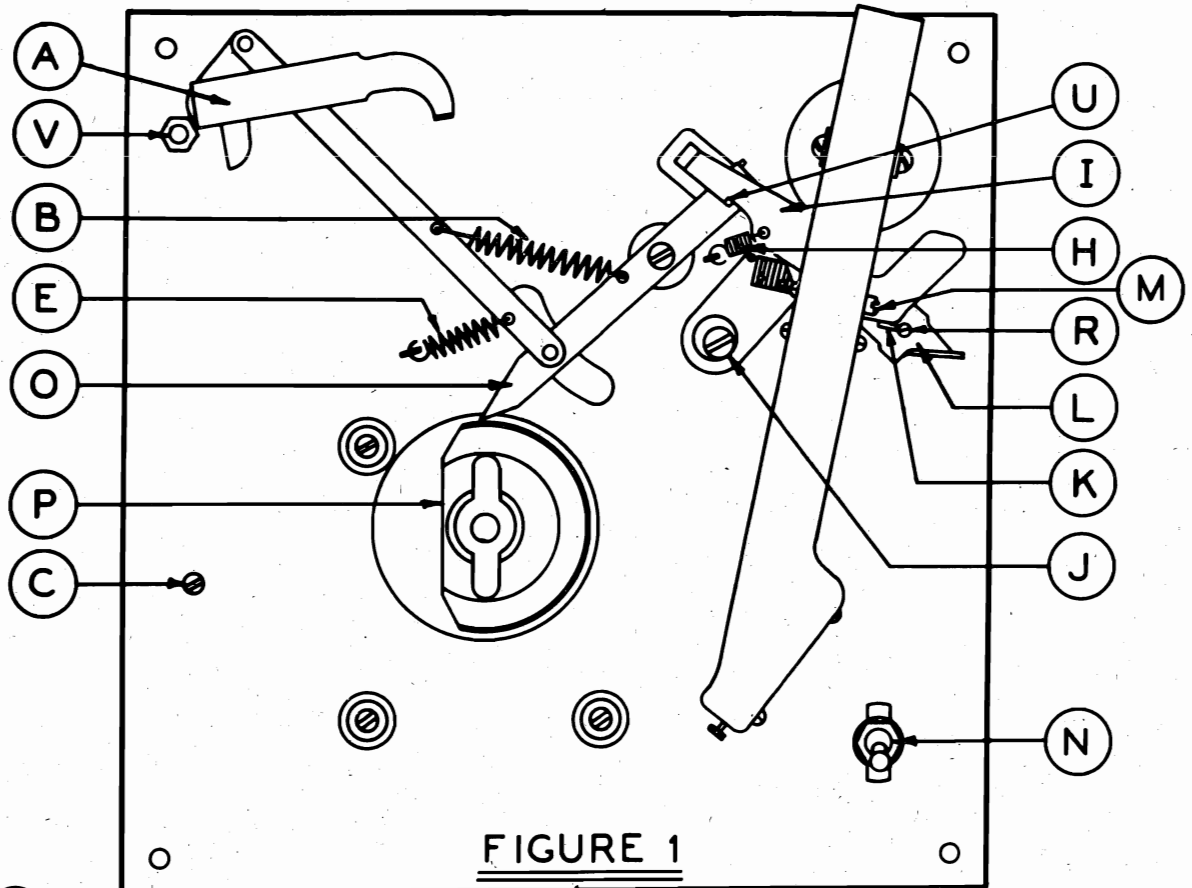


FIGURE 1

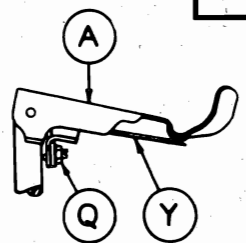


FIGURE 3

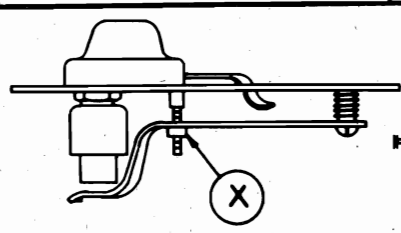


FIGURE 4

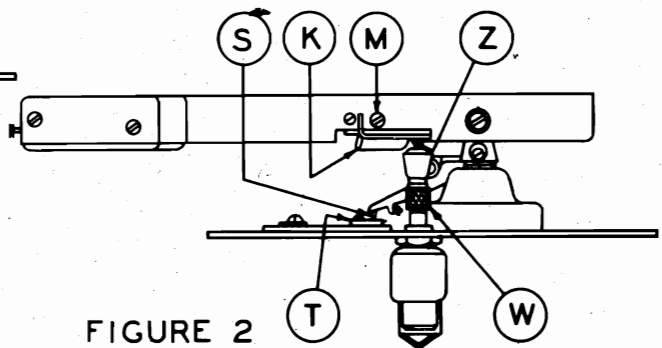


FIGURE 2

- A. Record Removing Mechanism Assy. Complete
- Parts of Above Assembly
 - Record Removing Arm Assembly
 - Record Removing Sleeve & Link Assy.
 - Record Removing Sleeve Link Mtg. Stud
 - Record Removing Sleeve Screw
 - Record Removing Link Screw
 - Record Removing Link Spring
 - Record Removing Finger Pin
 - Record Removing Finger
 - Record Removing Finger Spring
 - Record Removing Arm Adjusting Nut
 - Record Removing Arm Adjusting Screw
 - Record Removing Arm Pin
 - (Arm to Sleeve & Link Assy.)
- B. Trip Spring
- C. Motor Speed Adjusting Post
- E. Record Removing Link Spring
- H. Latch Spring
- I. Lift Lever Assembly
 - Lift Spring
 - Lift Crank Washer
 - Lift Lever Screw
- J. Eccentric Washer & Locking Screw
- K. Adjustable Stop
- L. Reject Lever
- M. Pickup Positioning Adjusting Screw
- N. Power Switch
- O. Latch Bar Assembly Complete
 - Screw (Latch Bar Mtg.)
 - Stud Nut (Latch Bar & Bumper)
 - Stop (Latch Bar)
- P. Cam (Latch Bar Stop)
- Q. Record Removing Arm Adjusting Screw
- Nut (Record Removing Arm)
- R. Lift Lever Pivot Screw
- S. Tone Arm Lift Crank
- T. Trip Lever Serrated Block (Part of L)
- U. Pin (Part of Latch Bar (0))
- V. Record Removing Arm Adjusting Stud
- W. Dash Pot Complete.
- X. Dash Pot Lift Lever
- Y. Record Removing Finger
- Z. Pickup Lift Shelf
- Washer (Latch Bar Mtg. Screw)
- Mounting Screw (Latch Bar Stop)
- Screw (Latch Bar & Pickup Lift Stop)
- Washer (Dash Pot)
- Nut (Dash Pot)
- Adjusting Cap (Dash Pot)
- Gland (Dash Pot)
- Plunger Assembly (Dash Pot)
- Lever Spring (Dash Pot)
- Weight (Dash Pot)
- Lever Spacer (Dash Pot)
- Felt Washer (Dash Pot)
- Leather (Dash Pot)
- Washer Large (Dash Pot)
- Washer Small (Dash Pot)

MODEL 35-1176, Intermix
Auto Record Changer
Assembly, Motor Notes

PHILCO RADIO & TELEV. CORP.

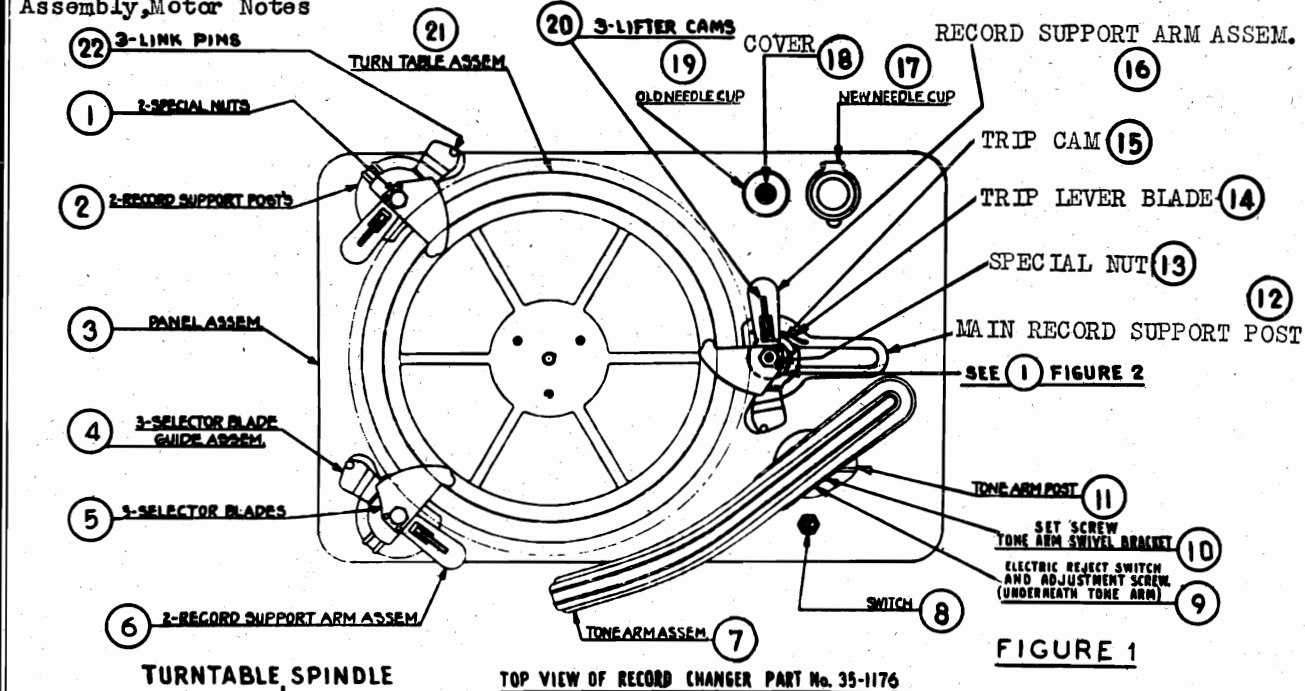


FIGURE 1

TOP VIEW OF RECORD CHANGER PART No. 35-1176

REMOVING MOTOR TRANSMISSION

In removing the motor transmission, the following parts should be disassembled first:

1. Remove turntable shaft. (See paragraph — Removing Turntable Shaft Assembly.)
2. Unsolder pick-up wires.
3. Loosen the two set screws which hold the tone arm shaft and the tone arm shaft and remove tone arm and shaft.
4. Remove the mounting screws which hold the tone arm post to the panel. Unsolder electric tone arm reject switch wire from the terminal strip and remove tone arm post.
5. Remove "C" washer from the drive link pin — this will allow the drive link to be removed from the transmission and then remove the six mounting screws holding the transmission to the panel and take out the transmission.

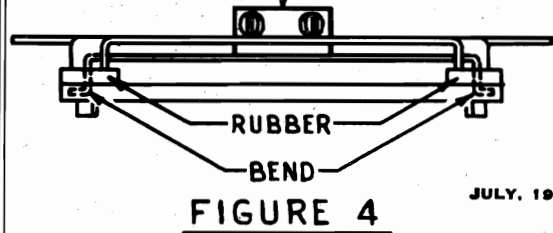


FIGURE 4

JULY, 1939.

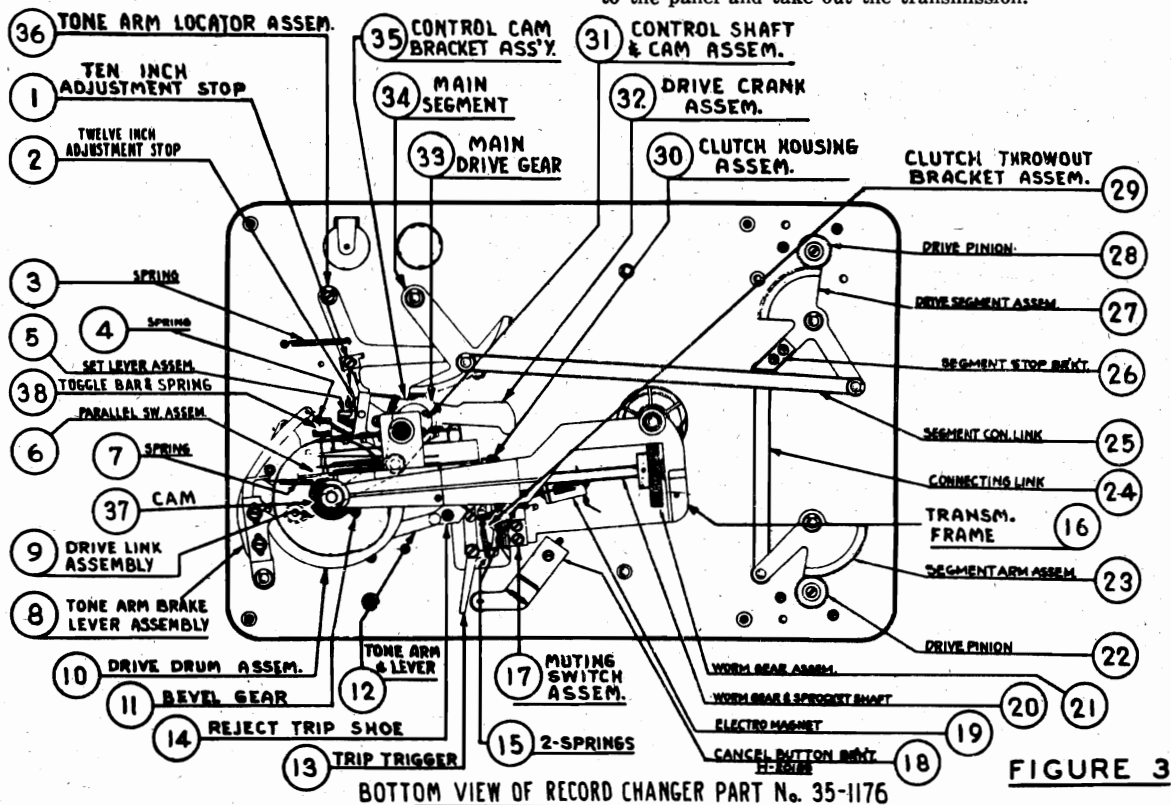


FIGURE 3

PHILCO RADIO & TELEV. CORP.

TONE ARM ELECTRIC REJECT SWITCH WILL NOT OPERATE**(When no record is on turntable)**

The tone arm electric reject switch operates when the mechanism is first loaded and no records are on the turntable or no records are on the record support arms. This switch closes when the pick-up needle drops into a groove provided in the turntable; allowing the tone arm to go to a lower level and causing switch contact to close. Adjustment of this switch is as follows:

1. Adjust screw (9) Fig. 1 located in the tone arm directly above the end of the tone arm shaft. Turn this screw in the direction necessary to obtain a clearance of $\frac{1}{16}$ " between the bottom of the groove in the turntable and the bottom end of the needle.
2. With a record on the turntable and the needle resting on the record, a clearance of $\frac{1}{16}$ " between the top and bottom contacts of the tone arm electric reject switch should be obtained. Bend the moving contacts spring upward or downward to obtain the necessary clearance.
3. Also check the electric magnet (19) Fig. 3 and associated wiring for open circuits.
4. Check the small metal rod connecting the trip trigger (13) Fig. 3 and lever of electric magnet.

MECHANISM WILL NOT REJECT AT THE END OF RECORDS

The tone arm is designed to reject records with an oscillating or spiral reject groove. To make the adjustments for either type of records, proceed as follows:

1. See that the screw (10) Fig. 1 which clamps the tone arm swivel bracket is tight. Make sure that the set screws holding the tone arm lever (12) Fig. 3 to the tone arm shaft are tight.

2. Oscillating Groove Records

Records with an oscillating reject groove are rejected by the trip dog located on the end of the tone arm lever (12) Fig. 3 engaging the saw teeth of the trip trigger (13) Fig. 3. When the mechanism will not reject an oscillating groove record, either the screws mentioned in paragraph 1 are loose or the trip dog trip trigger (13) Fig. 3 or springs (15) Fig. 3 are at fault. When it is found that these parts have become worn or weak, they should be replaced.

3. Spiral Groove Records

Records with spiral reject grooves are rejected by the trip shoe (14) Fig. 3 located on the end of the tone arm lever (12) Fig. 3. This trip shoe (14) Fig. 3 hits the pin on the trip trigger (13) Fig. 3 releasing the clutch throwout bracket (29) Fig. 3. This should occur when the pick-up needle has traveled to within a distance of $\frac{1}{8}$ " from the center of the turntable spindle. Adjust the mechanism to properly reject this type of record as follows: If the pick-up does not reject the mechanism after traveling to within $\frac{1}{8}$ " from the center of the turntable spindle (or $\frac{1}{4}$ " from the edge of spindle), loosen the knurled nut holding trip shoe (14) Fig. 3 to the tone arm lever (12) Fig. 3. Move trip shoe toward or away from the pin on the trip trigger (13) Fig. 3 until the trip shoe operates the mechanism properly. When this point is found, the knurled nut should be well tightened.

TEN AND TWELVE INCH RECORDS DO NOT SEPARATE PROPERLY IN A MIXED LOADING

Ten and twelve inch records in a mixed loading are separated by lifter cams (20) Fig. 1 located on the record support arms (6) (16) Fig. 1. These cams operate when the next record to be selected by the mechanism is 10" and are designed to lift a 12" record when one is located directly above the 10" record. This allows the selector blades (5) Fig. 1 and guide arms (4) Fig. 1 to slide under the 12" record so that a 10" record can be placed on the turntable. The lifter cams (20) Fig. 1 are caused to operate by the 10" record hitting the end of the cam. Check the following parts when mechanism does not separate records properly:

1. The lifter cam link (20) Fig. 1 should be approximately $\frac{3}{32}$ " above the surface of the record support arms (6) (16) Fig. 1 when no records are on support arms (6) (16) Fig. 1. This link is held in this position by the small return spring found under (20) Fig. 1 underneath the support arms (6) (16) Fig. 1. If link is not above the surface of support arms (6) (16) Fig. 1, check for loose spring; replace spring if necessary.
2. The selector blades (5) Fig. 1 should have a slight downward pressure on the top surface of the guide arms (4) Fig. 1 when in their return position ready for next selection.

3. In their full return position after a record has been placed on the turntable the selector blades should also pass the guide arm link pin (22) Fig. 1 so that the selector blades will carry the guide arm toward the edge of a record when making the next selection. If any one of the blades do not return enough to clear the guide arm link pin (22) Fig. 1, the blade should be adjusted as given in paragraph "RECORD SELECTORS DO NOT OPERATE IN SYNCHRONISM".

PHILCO INTER-MIX RECORD CHANGER, Part No. 35-1176 plays and automatically changes with one loading—14 ten-inch and twelve-inch records mixed together in any order. This record changer will also separately play 15 ten-inch records or 13 twelve inch records. In addition, the mechanism is designed to operate with slightly warped records. Service information contained in this bulletin covers operation, care, and adjustments that may be necessary if the mechanism ceases to function properly.

When ordering parts, refer to the part number of the entire mechanism in addition to the number and name of parts shown in the figures of this bulletin.

PHILCO RECORD PLAYER NEEDLES

To obtain brilliant life-like tone quality, PHILCO Record Player Needles are recommended. These needles are especially designed to give high fidelity tone reproduction—less record wear and less surface noise. One needle plays 15 to 20 records. The use of inferior needles in the pick-up of this mechanism will greatly affect the tone reproduction performance.

AUTOMATIC AND MANUAL POSITIONS

A control knob (1) Fig. 2 is provided for placing the mechanism in the automatic or manual operating position.

When changing from manual to automatic or automatic to manual positions, the mechanism should be turned off and allowed to complete its cycle. The knob can then be set for the position desired as follows:

To operate the mechanism manually, press knob (1) Fig. 2 marked "Press-Turn" down and turn to the right (clockwise) until record support arm assembly (16) Fig. 1 is in the extreme clockwise position.

For the automatic operating position, control knob (1) Fig. 2 is turned to the left (counter-clockwise) until knob snaps up.

PICK-UP DOES NOT INDEX PROPERLY ON OUTER EDGE OF 10" AND 12" RECORDS

The pick-up is set for 12" records by the trip cam (15) Fig. 1 that is pivotally mounted under the selector blade on main record support post (12) Fig. 1. This trip cam is operated by the edge of a 12" record compressing the cam when the record support arm moves in a clockwise direction. This cam moves trip lever blade (14) Fig. 1 and toggle bar and spring (38) Fig. 3 which pushes set lever blade (5) Fig. 3 into position to hold the tone arm locator (36) Fig. 3 in the 12" position.

After playing a record or the mechanism has been rejected, the set lever (5) Fig. 3 is reset for the 10" position by the control cam bracket lever (35) Fig. 3 mounted on the set lever shaft. The control cam bracket (35) Fig. 3 engages the control shaft cam pin (31) Fig. 3 at the start of rotation.

Adjustment of the tone arm when placing the needle in the first groove of 10" and 12" records is controlled by tone arm locator (36) Fig. 3. When 10" or 12" adjustments are made, the 12" adjustment should be made first. If 10" adjustment alone is necessary, the 12" adjustment should be re-checked. Adjustment of the locator lever is as follows:

12-inch Record Adjustment

1. Turn control knob (1) Fig. 2 to "manual" position.
2. Place a 12" record on the turntable.
3. Start mechanism and allow pick-up to position itself on the outer edge of the record. If the needle has not been placed in the center of the smooth outer rim of the record, adjust stop (2) Fig. 3 by loosening set screw. Move the stop in the direction necessary to center the needle on the smooth outer rim of the record.

10-inch Record Adjustment

1. Set control knob (1) Fig. 2 to "automatic" position.
2. Load the mechanism with several 10" records.
3. Allow mechanism to set a record on turntable and place the pick-up on the smooth outer rim of the record.
4. If the pick-up does not come down in the center of the smooth outer edge of the record, adjust the following:
5. Loosen 10" record stop (1) Fig. 3.
6. Move the stop slightly toward or away from the stop pin as the case may be to center the pick-up needle on the outer edge of the record.

If, after making the above adjustments, it is found that the pick-up will not move into the first groove after the needle is centered on the outer edge of the record, examine the following parts:

1. Spring (2) Fig. 3 on 12" adjustment stop may be weak.
2. Tone arm lever or swivel shaft may be binding; examine and lubricate.

MODEL 35-1176

Notes

PHILCO RADIO & TELEV. CORP.

4. There should also be sufficient tension between the guide arm link pin (22) Fig. 1 and the end of the selector blade (5) Fig. 1 so that the guide arms (4) Fig. 1 will be pulled forward against the record when the selector blade (5) Fig. 1 moves to select the next record. Tension between guide arms and selector blades should be sufficient so that sloop on guide should lift a full load of records to proper height for selector blades to select bottom record. If guide arm pin (22) Fig. 1 does not have enough tension against end of selector blades (5) Fig. 1, check the springs holding the pin in position, also, for worn surface on side of pin.

5. Action of the selector guide arm (4) Fig. 1. The guide arm is designed to guide the selector blade (5) Fig. 1 and lift the record to the proper height necessary to separate the records. The top of the guide arm (4) Fig. 1 has two inclined surfaces. The outer surface for 10" records and the inner surface for 12" records. After the selector blades (5) Fig. 1 have entered between the records, the guide arm (4) Fig. 1 is released and returned to its normal position. If it does not return to its normal position, check for a weak spring on the guide arms (4) Fig. 1 or binding between guide arm and record support post (2) Fig. 1. These springs are attached to record support posts (2) (12) Fig. 1 and a pin at the swivel of the guide arm.

6. In case of a warped 10" record with its concave face down, resting on a warped 12" record with the concave face upward, there is a tendency for the selector blades to jam against the edge of the 10" record instead of going in under it. In order to prevent this condition the blades must be bent down sufficiently to slide along the top surface of the 12" record.

SELECTOR BLADE (5) FIG. 1 FAILS TO SEPARATE BOTTOM RECORD FROM STACK

This is due either to a badly warped condition of the record, or to its being of a thickness considerably different from those now in standard use. The design of both selector blade and record support arms is such as to accommodate a maximum variation in thickness and flatness of records, but certain records may be found which are so far out as to be unfit for use in the automatic changer.

RECORD SELECTORS DO NOT OPERATE IN SYNCHRONISM

If the record selector blades (5) Fig. 1 do not operate in synchronism proceed as follows:

1. Set the control knob (1) Fig. 2 to "automatic" position. See page 1 "Automatic and Manual Positions". (Turn knob to the left until it snaps up). Place one 10" record on selector blades. After record has been dropped to record supports, pull lower plug and rotate turntable by hand until the selector blades are close to the edge of record. At this point all selector blades should be as nearly as possible the same distance from spindle. If the selector blades are not the same distance from the spindle due to replacement of gears, etc., the blades are resynchronized as follows:

2. With the mechanism in the same condition as outlined in paragraph 1, remove the "C" washer from segment arms (23) or (27) Fig. 3 depending on which of these selector blades are out of time. Pull segment arm down so that gears are disengaged, then move selector blade (5) Fig. 1 in direction necessary to align it with other blades. When this position is found, mesh gears and replace "C" washer.

MECHANISM DOES NOT RETURN SELECTOR BLADES TO LOADING POSITION

If the selector blades will not return to the loading position (pointed toward spindle) after a record has been placed on the turntable:

1. Look for trouble in the parallel cam switch (6) Fig. 3. The contact of this switch should be in a closed position, at the time a record is being played.

2. When the selector blades are in the proper loading position cam (37) Fig. 3 should open parallel switch (6) Fig. 3. To place the mechanism in the loading position, turn changer switch (8) Fig. 1 off. After the switch is off the changer should continue to operate until the next record is selected and dropped on the turntable. When the record is dropped on the turntable, cam (37) Fig. 3 should open parallel switch (6) Fig. 3. When the turntable stops rotating the selector blades should be pointed toward spindle.

3. To adjust cam (37) Fig. 3 loosen the two set screws and rotate cam on the shaft until proper position is obtained. Retighten set screws.

TOP RECORD SLIPS WHEN PICK-UP IS IN THE PLAYING POSITION

If the top record slips in the playing position, check the following parts:

1. Check for excessively warped records. Records warped too badly should be replaced and not used in the changes.

2. Check for worn grooves in record, particularly old records. After the grooves of the records lose their gloss, the pick-up does not glide through the groove. This condition has a tendency to cause pick-up needle to drag resulting in the top record slipping.

3. Check record friction spring (16) Fig. 2 for tension. This spring should protrude far enough from the shaft to hold the top record from slipping when in the playing position. This spring when adjusted properly to hold a record, should also allow a 10" record to fall freely onto the turntable.

If the spring is in need of adjustment, see heading "Removing Turntable Shaft Assembly", Paragraph 4.

OILING AND GREASING MOTOR AND MECHANISM

The motor and mechanism should be oiled and greased every six months with a good grade of S. A. E. 10 oil.

Parts to Lubricate:

1. All bearings of the mechanism.
2. All sliding surfaces such as, cams, etc., should be lubricated with a very light grease.
3. Motor bearings and governor felt.

TURNTABLE SPEED ADJUSTMENT

If motor runs too fast or slow, the governor adjustment screw (27) Fig. 2 on the top side of the governor should be screwed in or out slightly as required. To do this, loosen the lock nut and turn screw, then retighten lock nut.

REMOVING TURNTABLE SHAFT ASSEMBLY

To remove the turntable shaft assembly, proceed as follows:

1. Loosen the two set screws holding the motor coupling (21) Fig. 2 to the turntable shaft.

2. Loosen the two screws holding the turntable drive worm (23) Fig. 2 to the turntable shaft, then lift out turntable and shaft.

3. To remove the turntable from the shaft, remove the three screws and nuts which hold it to the hub.

4. The record friction spring (16) Fig. 2 on the turntable shaft can be removed by pushing the hub downward toward the heavy end of the shaft — the spring can then be removed. If it is desired to increase the record friction on spring, bend upward the lower section of the spring which contacts with the bottom surface of the hub. To decrease the record friction against the spring, bend the spring downward.

The motor is removed as follows:

1. Remove the three $1\frac{1}{2}$ " machine screws which hold the motor to the motor mounting bracket. Three $\frac{1}{2}$ " spacers will also be found which space the motor from the mounting plate.

2. There are two motor bracket locating pins on the underside of the changer base panel which pass through rubber grommets located in the motor mounting bracket. These are provided to keep the mounting panel and motor bracket in proper alignment.

MECHANISM AND CHASSIS MOUNTING

The mechanism is mounted in the cabinet as follows: 4 mounting studs are located in the bottom surface of the panel each threaded to take $\frac{1}{4}$ " No. 20 machine screws. The mounting panel rests on four tapered coil springs. The small end of each spring is pressed over a mounting stud and the large end of each spring fits into a screw in the top surface of the mounting shaft in the cabinet. Four spacing blocks $\frac{1}{8}$ " thick and with a $\frac{3}{16}$ " hole are fastened to the lower side of the cabinet motor board. The $\frac{3}{16}$ " hole in each block is centered with the $\frac{7}{16}$ " screw clearance hole. These are provided and located on the lower side of the cabinet motor board into which each of the lower mounting springs are to fit. The $\frac{1}{4}$ " No. 20 machine screws are turned through the four wing nuts until the head of each screw is against the head of the bottom side of each wing nut. The four lower springs are of smaller diameter than the upper springs. These lower springs are slipped over the nuts to each of the $\frac{1}{4}$ " No. 20 machine screws with the smaller end toward the head and resting on the wing nuts.

The $\frac{1}{4}$ " No. 20 machine screws are pushed through the $\frac{7}{16}$ " clearance hole and tightly screwed into the mounting studs. Wing nuts should be backed down on head of $\frac{1}{4}$ " No. 20 bolt to place changer in operation.

MODEL 35-1180
Auto. Record Changer
Operating Notes

PHILCO RADIO & TELEV. CORP.

MODEL 35-1176
Assembly Notes

NO REPRODUCTION WHEN NEEDLE IS OPERATING ON RECORD

A muting switch (177 Fig. 3, the purpose of which is to short the pick-up during the change cycle. This switch is mounted on the transmission frame, and is operated from the clutch throw-out (29) Fig. 3. When a record is on the turntable and the needle is in playing position, the contact of this switch should be in the open position.

AUTOMATIC CLUTCH DOES NOT COMPLETELY DISENGAGE AT THE END OF THE CYCLE


This trouble is identified by a steady thumping or clicking sound when the pick-up is in the playing position and is caused by the clutch not properly disengaging at the end of the automatic cycle. In most cases, this trouble is due to the clutch clearance adjusting plate not being in the proper position on the tone arm brake (8) Fig. 3. To eliminate this trouble, make the following adjustments:

1. Loosen the two screws that hold the clutch clearance adjusting plate to the tone arm brake lever (8) Fig. 3. Advance the adjusting plate until the clutch pawl [found in clutch housing (30) Fig. 3] clears the clutch sprocket.
2. If the clutch disengages before the pin on the drive drum (10) Fig. 3 reaches the inclined surface of the adjusting plate, the plate should then be retarded until the drive drum pin passes over the humps and slides down inclined surface.

FAILURE OF UNIVERSAL DRIVE COUPLING

The Universal drive coupling consists of four strips of rubber held together by a frame having ears projecting into slots in the rubber.

If excessive strain is placed on the coupling, the projecting ears may slip out of the slots in the rubber, thus disconnecting the drive. In order to hold the coupling together more firmly, the outer end of these ears projecting through the rubber may be bent outward at right angles to form a hook which will hold the rubber firmly in place. Do not make bend any more than 1/8" from end of ear. See Fig. 4.

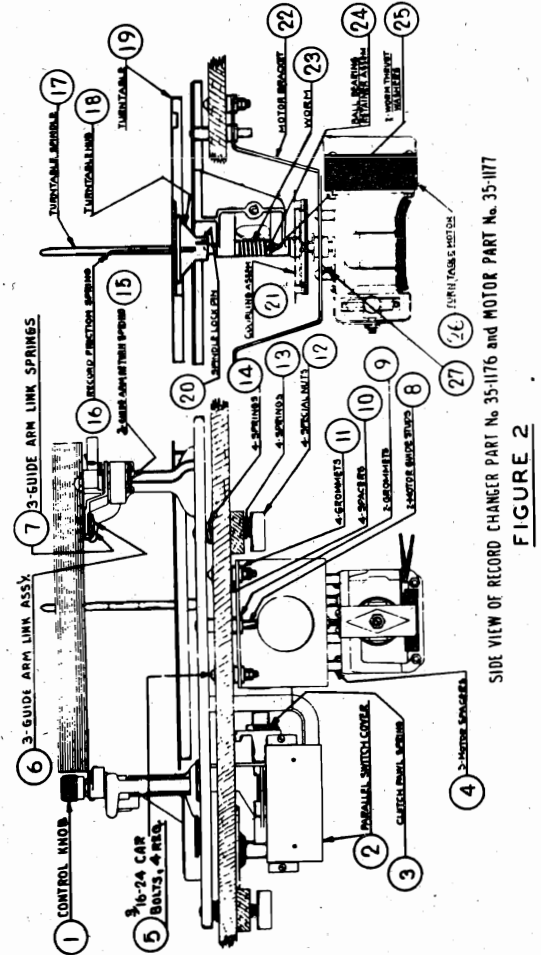

Automatic Record Changer Part No. 35-1180

PHILCO AUTOMATIC RECORD CHANGER Part No. 35 - 1180 automatically changes either twelve 10" or ten 12" records. The service information contained in this bulletin covers the operation, care, and adjustments that may be necessary if the mechanism ceases to function properly.

When ordering parts for this mechanism, refer to the part number of the entire mechanism in addition to the number and names of the parts shown in the figures of this bulletin.

CHANGER OPERATION

Setting for Record Size

This changer plays up to twelve 10-inch records or ten 12-inch records at one loading.

On each post you will see two plates. The lower one, on which the records rest, is the shelf plate. The upper one is the selector blade which selects the next record to be played from the bottom of the stack.

To set for record size. (1) Clasp one of the posts just underneath the shelf plate, with thumb and finger of left hand. With right hand, lift knob and turn selector plate until the figure 10 or 12 (whichever size you want to play) is opposite the pointer. Do the same with the other post. Both selector plates must be in 10 or 12 position. (2) Push button marked 10 or 12, as required (see Figure 1).

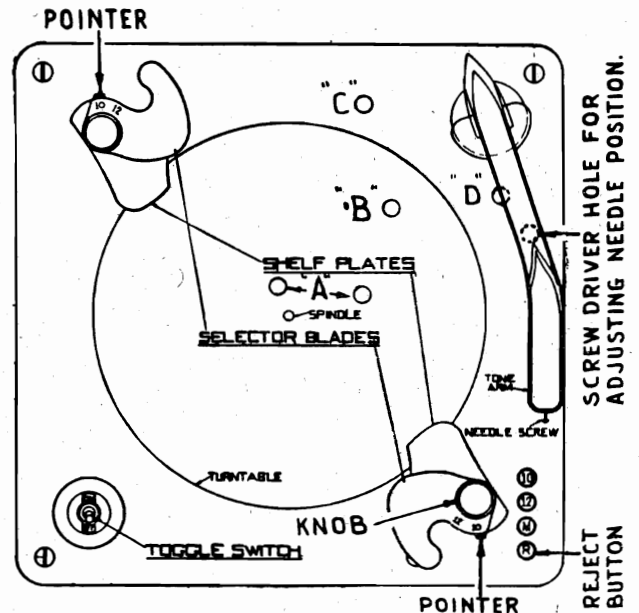


FIG. 1 SHOWS SELECTOR BLADES IN POSITION FOR 10-INCH RECORDS.

MODEL 35-1180

Adjustments, Notes

PHILCO RADIO & TELEV. CORP.

Loading

See that both shelf plates are turned toward center of turntable. As shelf plates near correct position you will feel the shelf plates drop into their indexing slots. Make sure both posts have dropped into their slots, if one is not in the slot, records may be damaged. Place the stack of records over center pin so they will rest on the two shelf plates.

Starting the Mechanism

To start motor and turntable (1) turn the switch to "ON" position. (2) Then push button "R". This will release the first record and start the record-changing mechanism.

Rejecting a Record

To reject a record press the "R" button. This can be done any time after the needle has come into contact with that record.

Turning Off

Turn changer switch to "OFF" position. Lift pickup arm, place it on the pickup rest. (If you happen to turn off the changer switch while the mechanism is going through a "change cycle", you will notice that it does not stop until the cycle has been completed, and pickup is again in playing position, ready to be lifted over onto the pickup rest.)

To avoid warping of records, never leave records resting on the shelf plates.

Removing Played Records

To remove records make sure motor switch is off, then take hold of both posts, just below the shelf plates, and turn them out of the way. Lift the played records from the turntable. Taking hold of posts as before (below shelf plate) move plates until post again falls into indexed position as outlined under loading. The changer may then be loaded with a new stack of records.

Manual Operation

To play records one at a time as in an ordinary phonograph: (1) Remove any records remaining on the turntable, leave plates turned outward as for removing played records. Do not turn them back toward center of turntable. (2) Press button marked "M". Then place a record on the turntable, switch on motor and lift pickup into position.

LUBRICATION

The record changer will not need lubrication more than once a year and should be lubricated with a good light machine oil such as S.A.E. 10. There are 6 locations that will need oiling. These are shown in Figure 1. These lubricating holes can be reached from the top of the mechanism and are as follows:

1. The motor gear housing contains 3 lubricating wicks. These wicks are shown at "A" in Figure 1. Two of these wicks are reached through the hole directly in back of the turntable spindle and the other wick to the right of the turntable spindle.
2. A small quantity of oil should be dropped through hole marked "B" in Figure 1. Lubricating this point distributes oil to the various moving surfaces of the mechanism.
3. A felt wick directly below the hole marked "C" in Figure 1 should also be oiled.
4. Another felt wick marked "D" in Figure 1 should also be well oiled.

After long periods of use the oil becomes gummed in the above mentioned wicks. The wicks should be removed and cleaned with kerosene or carbon tetrachloride.

NEEDLE FAILS TO MOVE INTO RECORD GROOVE AFTER LANDING ON RECORD

Generally when the needle will not pull into the groove after landing on the record, trouble may be found due to lead spring (97) being weak. Increasing the tension of this spring or replacing spring will generally eliminate the trouble.

If after adjusting the lead spring (97) it is found that the needle jumps across the record, it may be necessary to adjust the angle of the pickup in relation to the turntable spindle. This procedure is covered under paragraph "Mechanism Will Not Reject at the End of Records".

TONE ARM SLIDES INWARD ACROSS RECORD

This is caused by the guide arms stud (12) not releasing from the grooves in the upper side of the large cam gear (11). This may be due to friction at the shoulder screw (26) or the coil spring lifting the arm may be weak.

If the coil spring appears to be weak, it may be strengthened by shortening. If there is binding at the bearing, a little oil will help; also, a few movements by hand under considerable pressure will relieve the binding. If the binding is caused by the are being twisted out of line, the trouble can be sured by straightening up the parts.

ADJUSTING THE RISING HEIGHT OF PICK-UP ARM

The pick-up arm should rise high enough during the change cycle so that the top of the tone arm clears the record resting on the support arms by $\frac{1}{8}$ ". When the maximum load of records are on the turntable, the needle should clear the top record, if not adjust as follows:

Loosen the lock nut in pick-up sleeve (22). Turn the sleeve in the direction necessary to lengthen or shorten the pick-up plunger (21). After correct adjustment is found, tighten lock nut.

ADJUSTING DISTANCE FROM TURNTABLE SPINDLE AT WHICH REJECT WILL OPERATE AND CYCLE WILL BEGIN

The mechanism is designed to reject records of all types whether they are provided with special grooves or not. The mechanism is adjusted to operate $1\frac{1}{8}$ " from the center of the record spindle; this distance has been found to be the most satisfactory point for all modern records so that they will be rejected after they have been played through. To adjust the reject mechanism for this distance or any distance that may be desired, a trip adjusting screw (18) is provided. By turning this screw toward the trip trigger (16), the mechanism is caused to operate at a closer distance from the spindle. Turning the adjusting screw (18) away from the trip trigger, operates the reject closer to the turntable spindle.

It may be found on some records of very early manufacture that it will not be possible to obtain a satisfactory adjustment that will always operate the changer mechanism.

REJECT BUTTON "R" WILL NOT OPERATE MECHANISM

If the "R" button does not cause the mechanism to go through a change cycle check the following parts:

- a. Examine key control unit (75) for parts that have become out of shape or any obstruction that will prevent the "R" button from moving to its maximum length of travel.
- b. Inspect reject rod (78). If this rod does not trip the mechanism even when properly revolved by complete depressing of "R" button, the rod has probably been bent out of shape. Replace the rod or reshape it to its former position.
- c. If trigger (16) is properly actuated but without starting a change cycle see instructions as given under "Mechanism Will Not Reject at End of Records" paragraph 3.

PRESSING "M" BUTTON DOES NOT CHANGE MECHANISM FROM AUTOMATIC TO MANUAL POSITIONS

Observe action of "M" button. Button should travel far enough down when depressed to cause the manual rod (77) to actuate the key control unit. The key control unit (75) should also be checked for parts which have become out of shape or any foreign obstruction.

MOTOR STOPS IMMEDIATELY WHEN CHANGER SWITCH IS TURNED OFF DURING A CHANGE CYCLE

The normal action of the mechanism when the changer switch is turned off during a change cycle is to continue to operate until the needle is again on the record. The mechanism should then stop. This action is caused by the cycling switch (85) short circuiting the manual changer switch during a change cycle. The switch should be changed when the above mentioned trouble develops.

MECHANISM DOES NOT REPEAT THE LAST RECORD

If the mechanism does not repeat the last record, any one of the parts listed under "Mechanism Will Not Repeat at End of Records" may be causing the trouble.

RECORDS FALL UNEVENLY ON THE TURNTABLE

Records falling unevenly on the turntable is generally due to the turntable spindle not being correctly centered between the record loading posts. To correct this trouble, see "Replacing Motor."

LAST RECORD DROPS ON ONE SIDE

This trouble is due in most cases to the loading posts being bent out of perpendicular to the main plate. To check for this trouble, test the posts with a steel square as directed under "Replacing Motor". Replace or adjust post so that it will be perpendicular to the main plate.

CHANGER CONTINUES CYCLING

If the mechanism continues to change records constantly, it indicates trouble in the lift (37). Failure of this lift to disengage with the cam gear (11), Fig. 2, will cause the trouble. Check the various rivets at which motion occurs to find a point where friction or binding is interfering with freedom of motion. The cam lever (39), Fig. 2, should also be checked for too much friction. Oil this part if necessary.

SELECTOR BLADE FAILS TO SEPARATE BOTTOM RECORD FROM STACK

This is due either to a badly warped record or to its being of a thickness considerably different from records now in standard use. The selector blade and shelf blades are designed to accommodate a maximum variation in thickness and flatness of records now in standard use. There are certain records, however, that may be found which vary in thickness so much as to be impracticable for use in the automatic changers.

SELECTOR BLADES JAM INTO EDGE OF RECORD

This is generally caused by too small a spacing between the selector plate and the spacing between the selector plate and the shelf plate. This space should never be less than .050 inch when selector plate is in 10" position. Another cause of jamming is too sharp an edge on the selector plate.

To eliminate this trouble, check spacing of plates. Bend the selector plate slightly, if necessary. Smooth up the edge of the selector plate by means of a piece of fine emery cloth.

MECHANISM SLOW IN STARTING OR STALLS DURING A CHANGE OF CYCLE

Trouble is probably due to:

- Motor mechanism is not thoroughly lubricated. See heading "Lubrication".
- Check for loose set screws.
- Line voltage may be abnormally low or motor windings damaged. If the windings of the motor are damaged, replace motor. To remove motor, see heading "Replacing Motor".

REPLACING MOTOR


Replacing the motor necessitates extreme care in aligning and correctly mounting the new motor. The procedure listed below should be followed closely. When replacing a new motor or ordering a new one from your distributor, specify the power supply from which the motor is to be operated. The motor electrical wiring is shown in Fig. 4.

When mounting replacement motor, it is most important to see that record pin is centered between the two posts of the changer, that it stands perpendicular to main plate (53), and that it has not become bent so as to wobble. Even though

the posts are stout and not easy to bend, it is well to check them also, with a 12" combination square laid clear across the concave upper surface of main plate. When the new motor has been attached, with three screws through grommet sleeves (51) (spacers) into its frame, and record pin is seen to revolve without appreciable wobble, the correct position of the record pin between the record-mounting posts can be accurately checked as follows: Place a single 12" record on the shelf plates, press "R" button, and turn turntable forward by hand. Immediately after the shelf plates open and allows the record to fall, turn turntable slightly backward, and with other hand support the record between the shelf plates; it can then be readily seen whether record pin is off center. If the record pin is found to be off center, remove the record and turntable, and loosen slightly the motor mounting screw or screws nearest the shelf plate to which record appeared closest. This should improve evenness of operation. However, unless the unevenness was very slight, it will be necessary for a permanent repair to insert a shim or two on one or more of the three screws (or change shims from one screw to another). The shims used are shaped like an ordinary washer, cut out at one side (see cut-away view at 52 on photo, showing a shim in place upon one of the grommet sleeves). Shims can readily be cut out with shears and punch from thin metal or cardboard—or an assortment of shims of different thicknesses can be had from your distributor. (Order "Assortment of Part No. 45-2785"). They should be inserted; around proper screws (when screws have been sufficiently loosened) between motor frame and the metal grommet sleeve. Do not insert shims next to rubber grommet.

TURNING CHANGER SWITCH OFF FAILS TO STOP MECHANISM

If after turning the changer switch off the mechanism continues to operate it indicates trouble in the cycling switch (85). Replace the switch when this trouble develops.

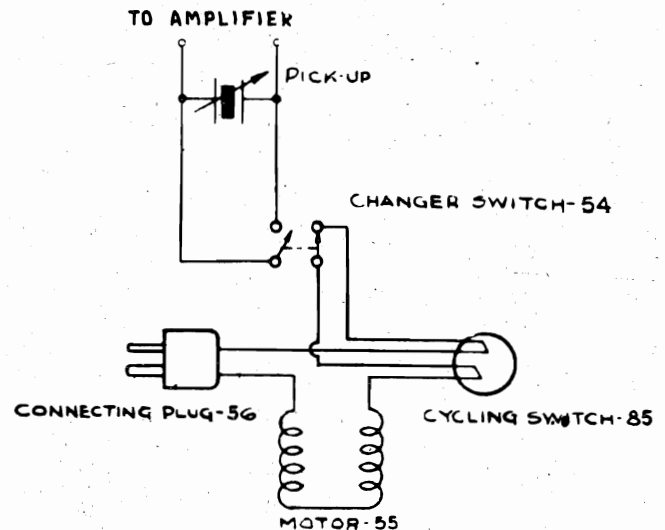


**FIG. 4. MOTOR ELECTRICAL CONNECTIONS
DISASSEMBLING THE CHANGER**

Before attempting to remove sub-plate assembly (83) detach key control unit (75) from main plate. To do this, start with control unit truss bar (80). Then take out the screw which holds left end of adjusting rod lever (94). Next remove adjusting rod (92) and adjusting rod extension (79). Take out the screw holding spring (73); then the screws holding key control unit (75) to main plate. Rods (77) and (78) can then, with due care, be extracted without bending. Free the cam connecting rod (58) by loosening setscrew holding spreader and hub assembly (59). Sub-plate assembly can then be detached without bending parts. In reassembling, reverse the procedure.

MODEL 35-1180
 Assembly Notes

PHILCO RADIO & TELEV. CORP.

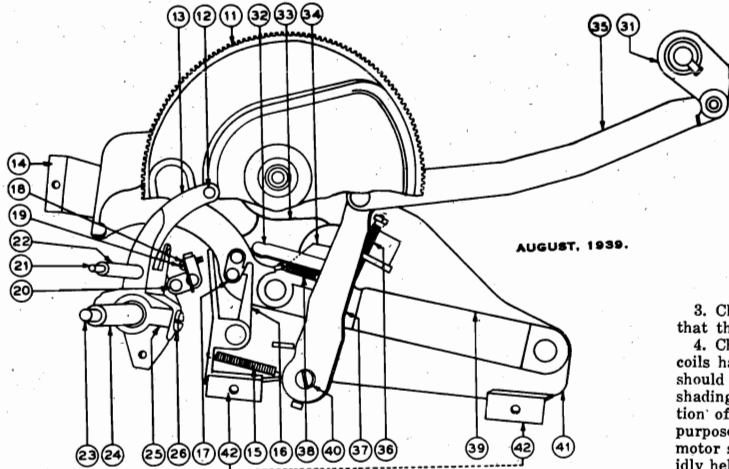

AUGUST, 1939.

FIG. 2. CUTAWAY VIEW SHOWING PARTS UNDER SUB-PLATE ASSEMBLY (83)

Numbers on Figs. 2 and 3	PART DESCRIPTION	Numbers on Figs. 2 and 3	PART DESCRIPTION	Numbers on Figs. 2 and 3	PART DESCRIPTION
11	Cam Gear	38	Spring	77	Manual Rod
12	Stud	39	Cam Lever	78	Reject Rod
13	Guide Arm	40	Shoulder Screw	79	Extension Rod
14	Bracket	41	Sub-Plate	80	Truss Bar
15	Trigger Spring	42	Bracket	81	Adjusting Cam
16	Trigger	51	Grommet Sleeve	82	Cam Gear
17	Trigger Catch	52	Shim	83	Sub-Plate Assem.
18	Trip Adj. Screw	53	Main Plate	84	Spring
19	Lock Spring	54	Changer Switch	85	Cycling Switch
20	Release Lever	55	Motor	86	Bracket
21	Pickup Plunger	56	Connecting Plug	87	Spring
22	Pickup Sleeve	57	Changer Connect. Rod	88	Link
23	Swivel Shaft	58	Cam Connecting Rod	89	Release Lever
24	Swivel Tube	59	Spreader-Hub Assem.	90	Upper Spreader
25	Swivel Trunnion	60	Shaft	91	Lower Spreader
26	Shoulder Screw	61	Spring Roller	92	Rod
31	Spreader-Hub Assem.	62	Spreader Spring	93	Lever-Hub Assem.
32	Bridge	71	Post Nut	94	Lever
33	Lifter Cam	72	Lever-Hub Assem.	95	Swivel Spring
34	Pawl	73	Flat Spring	96	Lever Spring
35	Cam Connecting Rod	74	Shaft	97	Lead Spring
36	Spring	75	Key Unit		
37	Lift	76	Key Bracket		

SQUEAKS OR OTHER NOISES DURING PLAYING OF RECORDS

If squeaks or various noises are heard from the mechanism during the playing of records or changing of records, the following items should be checked:

1. In the majority of the cases, these squeaks will be usually found to come from the friction between the stacked records and the turntable spindle. To check for this trouble, operate the mechanism with and without a load of records. To eliminate this condition, apply a very thin coat of light motor grease or vaseline to the turntable spindle.

2. Check the 5 wicks given under the paragraph on "Lubrication." Each wick should be thoroughly saturated with oil. All 3 motor wicks should be removed from the retaining holes with tweezers and examined to see if the oil has become gummy. In this case, the wicks should be thoroughly cleaned and relubricated with oil and replaced in their sockets.

3. Check all set screws to see that they are in place and tight.

4. Check motor windings. If coils have been jarred loose they should be tightened in place. The shading coils which encircle a portion of each laminated pole, the purpose of which is to make the motor self-starting, should be rigidly held in place by the retaining tape.

ADJUSTING LANDING POSITION OF NEEDLE ON RECORD

Adjustment of the landing position of the needle on records is controlled by the adjusting screw located in the hole shown in Figure 1. This adjustment is made with a screw driver from the top of the mechanism and does not require the removal of the changer from the cabinet. If the needle comes down too far from the edge of the record, playing of records will not start at their beginning. In this case, turn the needle positioning adjustment screw very slightly counter-clockwise. If the needle comes down too close to the edge of the record, the pickup may slip off the record. To adjust this condition turn the adjusting screw clockwise. If adjustment screw is too far to rear and cannot be adjusted through hole in base plate, depress "Manual" push button, and push bracket—Forward.

TURNTABLE SPEED VARIES

The turntable speed should be 78 R.P.M. + or - 2 R.P.M. when a record is being played, and the mechanism will operate satisfactorily. If the speed is below or above these limits, it indicates either trouble in the motor windings or bearings of the motor. Sometimes a few drops of oil on the bearings will increase the speed to normal. If upon investigation the normal speed cannot be obtained, replace the motor.

MECHANISM WILL NOT REJECT AT THE END OF RECORDS

There are several parts that will cause the mechanism to fail in the operation of rejecting records. These items are listed as follows:

1. Examine swivel spring (95) for stretching. This spring is attached to the lugs at the end of the swivel spreaders (90) (91). The purpose of this spring is to keep the swivel spreaders (90) (91) closed, so that the trip trigger can be actuated. Increasing the tension of the spring (95) will prevent the swivel spreads from opening allow the trip trigger to actuate properly.

If after increasing the tension of the spring (95) it is found that the needle jumps across the record, it may be necessary to adjust the horizontal level of the pickup. Sometimes the pickup leans towards the center of the record. To remedy this condition, the pickup mounting post should be examined for proper mounting position or the pickup arm may be twisted out of shape. In either of these cases the pickup arm should be replaced or adjusted to its original position. When the pickup arm is properly adjusted, it should lean slightly in an outward direction (toward the edge of the record).

2. After it is found that the trip trigger (16) is operating properly, trouble may be found due to the cam lever (39) binding against sub-Plate (41). In this case, look for some obstruction or foreign material on these two parts. Also see that the rivets are operating freely. If lever (39) engages cam lever pawl (34) so that lift (37) forces its rollers up into the groove on cam gear (82) and if the set screws are tight, the change cycle should go into motion as the cam gear (82) turns.

3. Sometimes friction between the trigger (16) and trigger catch (17) due to burrs or rough surfaces may also prevent the reject from operating. If the trigger unlatches but the cam lever (39) does not move, it indicates binding between sliding surfaces. This may be caused by above mentioned burrs or by the cam lever being slightly warped.

To eliminate this condition, locate the position where there is excessive friction. If it is found that the parts are out of shape due to being bent, new parts should be added or the old ones straightened. When it is found that trouble is due to a burr on the edge of the metal parts, burrs should be removed with a very fine file or scraper. After eliminating this trouble, a small amount of oil should be applied to the sliding surfaces.

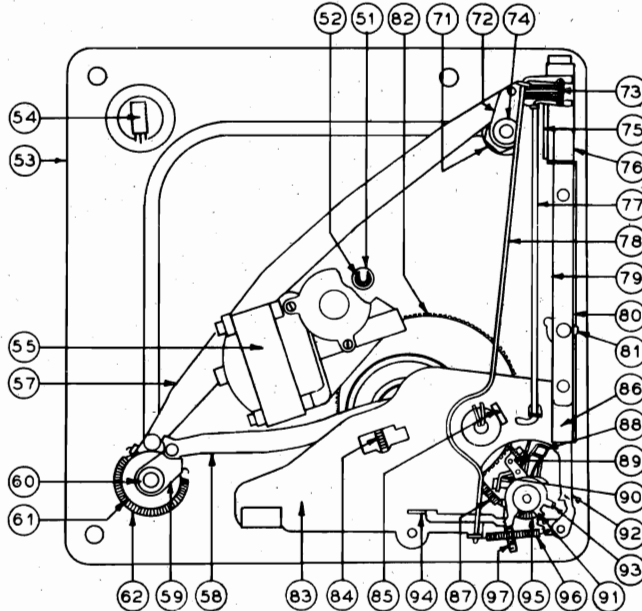


FIG. 3

PHILCO RADIO & TELEV. CORP.

MODELS 39-31, 39-31XF
39-31XK, Code 121
MODELS 39-3-31PA,
39-40PCX, 39-2-40PC
Schematics, Notes


PHILCO Model 39-3-31 PA

Model 3-31 PA is a combination automatic record changer, phonograph and electric push-button tuning super-heterodyne radio. This model is identical to the Model 39-31 Code 121 with the exception of the automatic record changer.

The automatic record changer plays seven 12" or eight 10" records automatically. The last record remains on the turntable and repeats as long as the record changer is in operation. The electric pick-up is a crystal type.

The specifications for the radio receiver, alignment of compensators and adjustments of push-buttons for reception of stations is covered under the Model 39-31 Code 121. Connections for the phonograph pick-up as connected to the Model 39-31 Code 121 receiver are shown below. The circle numbers of this diagram correspond to the circle numbers of the Model 39-31 Schematic.

For automatic record changer Model "L" used with this set, see index.

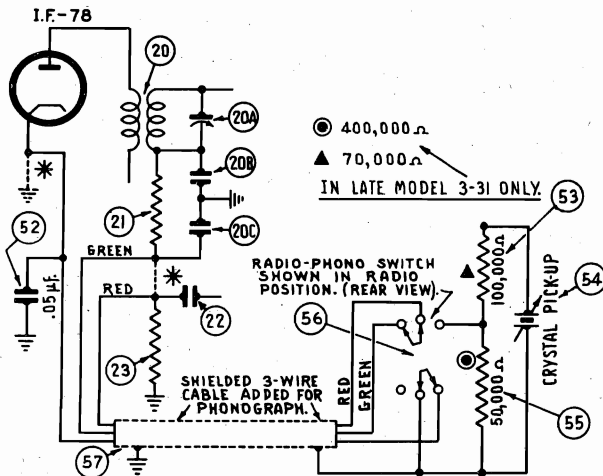

* DOTTED LINES INDICATE CONNECTIONS BEFORE ADDITION OF PHONOGRAPH. (REFER TO MODEL 39-35.)
PHONOGRAPH CONNECTIONS FOR MODEL 3-31.

Replacement Parts — Model 39-3-31 PA

SCHE. No.	DESCRIPTION	PART No.
52	Condenser (.05 mfd., 200 V.)	30-4519
53	Resistor (100,000 ohms)	33-410339
54	Crystal Cartridge	35-2030
55	Resistor (50,000 ohms)	33-350339
56	Switch (Radio-Phono)	42-1053
57	Cable	

MISCELLANEOUS PARTS

Motor (115 V., 60 cycle A. C.)	
Motor Switch	
Tone Arm Complete	35-2055
Turntable	35-3041

Models 39-31XF and 39-31XK are identical to Model 39-35, Code 121 with the exception of cabinets.

The Model 39-35, code 121 specifications, diagram and replacement parts apply to Models 39-31XF and XK.

See Philco pages 10-13 through 10-16.

PHILCO Models 39-40 PCX and 2-40 PC


Models 39-40 PCX and 2-40 PC are combination automatic record changer phonograph and electric push-button tuning superheterodyne radio receivers. These models are identical to the Model 39-40 Code 121 with the exception of the phonograph mechanism. The phonograph contains an automatic record changer which plays ten records either 10 or 12 inches repeating the last selection until the records are restacked or the set is turned off.

The radio receiver specifications, aligning instructions and adjustments for electric push-button tuning are covered under Model 39-40 Code 121. The cabinet size and power consumption, however, differ on the Models 39-40 PCX and 2-40 PC and are listed below.

The phonograph connections diagram shown below indicates the connections to the radio receiver of the Model 39-40 Code 121. The circle numbers of the diagram correspond to the circle numbers of the Model 39-40 Code 121 diagram.

CABINET DIMENSIONS:

Height, 37 1/2". Width, 39 1/16". Depth, 17 1/2".

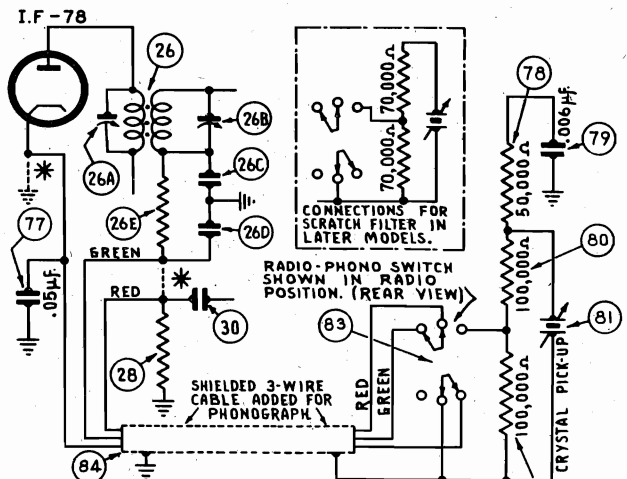

* DOTTED LINES INDICATE CONNECTIONS BEFORE ADDITION OF PHONOGRAPH. (REFER TO MODEL 39-40.)
PHONOGRAPH CONNECTIONS FOR MODELS 39-40PCX, 2-40PC

Replacement Parts — Models 39-40 PCX and 2-40 PC


SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.
77	Condenser (.05 mfd., 200 V.)	30-4519	81	Crystal Cartridge	35-2030	MISCELLANEOUS PARTS		
78	Resistor (50,000 ohms)	33-350339	82	Resistor (100,000 ohms)	33-410339			
79	Condenser (.006 mfd., 200 V.)	30-4583	83	Switch (Radio-Phono)	42-1053	Motor 110 volt, 50 cycle	35-1186	
80	Resistor (100,000 ohms)	33-410339	84	Cable		Automatic Record Chgr. (Com.)	35-1178	
						Governor (motor)	35-1165	

MODELS 39-8, 39-8T

Schematic

Voltage

PHILCO RADIO & TELEV. CORP.

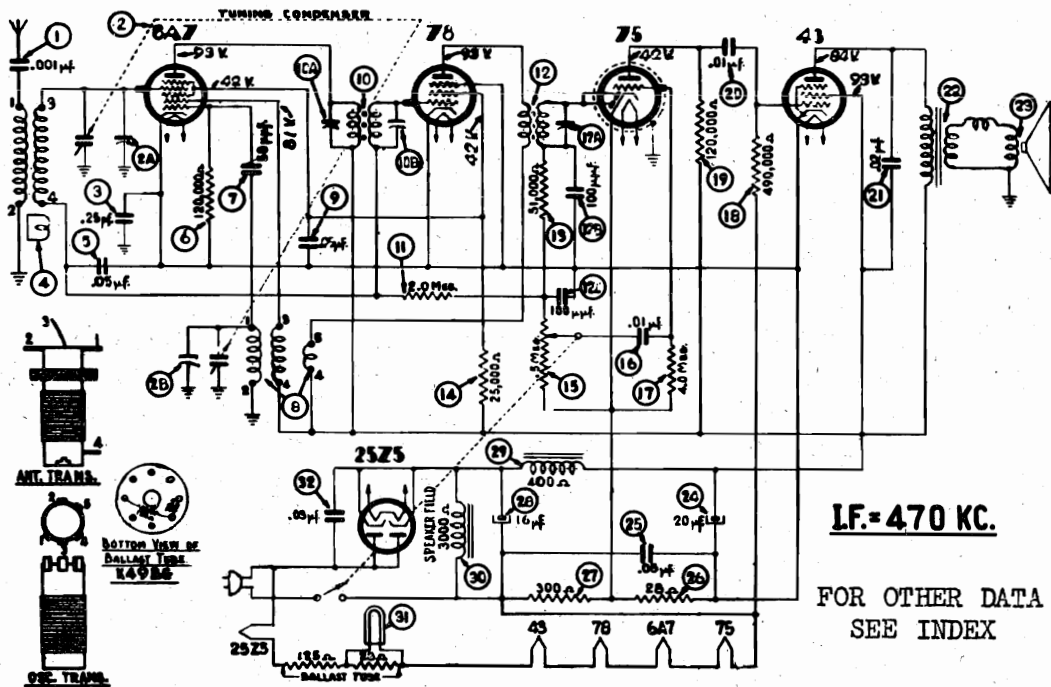

SPECIFICATIONS

TYPE OF CIRCUIT: Model 39-8T is a 5 tube superheterodyne receiver designed for operation on AC or DC current in a frequency range from 25 to 100 cycles. In addition, other features of design are: Automatic Volume Control and Pentode Audio Output.

PHILCO TUBES USED: 6A7, First Detector, oscillator; 78, I.F. Amplifier; 75, Second Detector, A.V.C., First Audio; 43, Audio Output and 25Z5, Rectifier.

- POWER SUPPLY:** 100 to 125 volts AC
25 to 60 cycles or D.C.
- POWER CONSUMPTION:** 30 watts.
- AUDIO OUTPUT:** One (1) watt.
- FREQUENCY RANGE:** 530 to 1720 K.C.
- INTERMEDIATE FREQUENCY:** 470 K.C.

REPLACEMENT PARTS

MODEL 39-8

Schem. No.	Description	Part No.	Schem. No.	Description	Part No.
1	Tubular Cond. (.001 mfd.)	30-4453	23	Cone & Voice Coil Assembly	
2	Tuning Cond. Assy.			Speaker Part No. 36-1362-1)	36-3981
2A	Part of No. 2		24	Electrolytic Cond. (20 mfd., 150V)	30-2245
2B			25	Tubular Cond. (.05 mfd.)	30-4444
3	Tubular Cond. (.25 mfd.)	30-4148	26	Resistor (27 ohms, 1/2 watt)	33-027339
4	Antenna Trans.	32-2583	27	Resistor (300 ohms)	33-1214
5	Tubular Cond. (.05 mfd.)	30-4444	28	Electrolytic Cond. (16 mfd., 150V)	30-2246
6	Resistor (120,000 ohms, 1/2 watt)	33-412339	29	Filter Choke	32-7868
7	Mica Cond. (50 mmfd.)	30-1029	30	Field Coil (Replace Speaker)	
8	Oscillator Trans.	32-2860	31	Pilot Lamp	34-2068
9	Tubular Cond. (.05 mfd.)	30-4444	32	Tubular Cond. (.03 mfd.)	30-4449
10	1st I.F. Trans. Assy.	32-3018			
10A	Part of No. 10				
10B					
11		Resistor (2.0 meg., 1/2 watt)	33-520339		
12	2nd I.F. Trans. Assy.	32-2674			
12A	Part of No. 12				
12B					
12C					
13	Resistor (51,000 ohms, 1/2 watt)	33-351339			
14	Resistor (25,000 ohms, 1/2 watt)	33-325339			
15	Volume Control (.5 meg.)	33-5254			
16	Tubular Cond. (.01 mfd.)	30-4479			
17	Resistor (4.0 meg., 1/2 watt)	33-540339			
18	Resistor (490,000 ohms, 1/2 watt)	33-449339			
19	Resistor (120,000 ohms, 1/2 watt)	33-412339			
20	Tubular Cond. (.01 mfd.)	30-4479			
21	Tubular Cond. (.02 mfd.)	30-4215			
22	Output Transformer	32-7874			

MISCELLANEOUS PARTS

Bezel & Glass Assembly	13105
Bezel Clamp	20162
Dial Scale	16104P
Drive Drum & Set Screw	31-1283
Drive Shaft Assembly	31-2140
Drive Cord Assembly	90325
Output Transformer	32-7874
Pointer (Dial)	28-5468
Spring Drive Cord	28-8751
Speaker	36-1362-1
Socket (7 prong)	27-8037
Socket (6 prong)	27-8036
Socket (8 prong)	27-8058

PHILCO RADIO & TELEV. CORP.

MODELS 39-17, 39-18, 39-19
 39-19PA, 39-19PF, 39-19PCS
 39-19PT, 39-75
 Tuner Data
 MODEL 39-85
 Alignment, Trimmers

Alignment of Compensators

EQUIPMENT REQUIRED:

- (1) Philco Model 077 Signal Generator which has a fundamental frequency range from 115 to 36,000 KC is the correct instrument for this purpose.
- (2) Output Meter, Philco Model 027 Circuit Tester, incorporates a sensitive output meter and is recommended.

- (3) Philco Fiber Handle Screw Driver, part No. 45-2810 and Fiber Wrench, part No. 3164.

OUTPUT METER: The Philco 027 Output Meter is connected to the plate and screen terminals of the 1A5G tube. Set the meter to use the 0-30 volt scale.

Operations in Order	Signal Generator			Receiver			Special Instructions
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Settings	Adjust Compensators in Order	
1	1A7G Grid	.1 mf	470 KC	580 KC	Vol. Cont. max.	(20A) (19B) (19A)	
2	Ant. Lead (white)	400 ohms	18.0 MC	18.0 MC	Vol. Cont. max.	(6B)	See Note B
3	Ant. Lead (white)	225 mmf	1550 KC	1550 KC	Vol. Cont. max.	(9) (6A)	
4	Ant. Lead (white)	225 mmf	580 KC	580 KC	Vol. Cont. max.	(9A)	Roll gang
5	Ant. Lead (white)	225 mmf	1550 KC	1550 KC	Vol. Cont. max.	(9)	

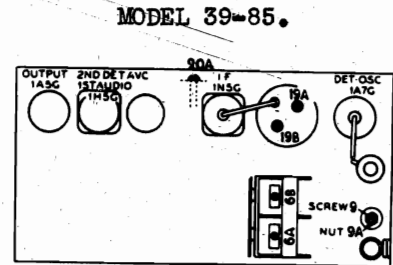


Fig. 1. Locations of Compensators

NOTE A—The "Dummy Antenna" consists of a condenser or resistor connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.

NOTE B—DIAL CALIBRATION: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To adjust the dial proceed as follows: Turn the tuning condenser to maximum capacity (plates fully meshed). With tuning condenser in this position set the pointer horizontally across the dial.

Specifications

TYPE OF CIRCUIT: Four tube, battery operated superhetrodyne circuit, two tuning ranges, Automatic Volume Control, and Pentode Output.

TUNING RANGES: Range 1, 540 to 1720 KC.; Range 2, 5.6 to 18.0 MC.

INTERMEDIATE FREQUENCY: 470 KC.

PHILCO TUBES USED: 1-1A7G, 1st Detector and Oscillator; 1-1N5G, I. F. Amplifier; 1-1H5G, 2nd Detector, 1st Audio, and Automatic Volume Control; and 1-1A5G, Output.

AERIAL AND GROUND: Philco "Farm Radio Aerial," part No. 40-6383, is required for maximum performance. A good ground is very essential.

CABINETS: Types "B" and "XF."

BATTERIES REQUIRED: One Philco "A" Pack, part No. 41-8014, and one Philco "B" Pack, part No. 41-8015.

BATTERY DRAIN: 6.5 Ma. "B" and 200 Ma. "A." Total with no signal.

TUNING MECHANISM: Pulley and cable drive for Manual tuning. Electric Push-Button for Automatic Tuning.

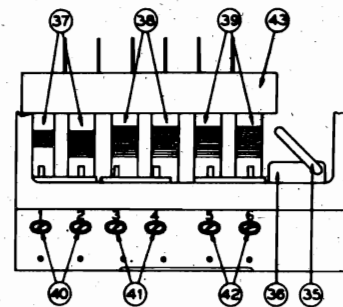


Fig. 4. Automatic Tuning Unit

Instructions for setting up and operating the electric push-button tuning will be found on Philco Page 10-16.

SETTING AND OPERATING AUTOMATIC TUNING

Models 39-17, 39-18, 39-19, 39-19PA, 39-19PF, 39-19PCS, 39-19PT, and 39-75.

For best results follow these instructions carefully.

Select six of your favorite nearby broadcast stations and remove their call letters from the station call letter tab sheets supplied. Insert these call letters in the escutcheon directly in front of the buttons at the top of the cabinet.

Hold the "Station Selector" knob to prevent it from rotating while you insert a large coin in the screw head at the center of the knob, (see figure) and loosen by turning counter-clockwise about one turn. Press down any one of the six buttons. Holding it down, tune in with the "Station Selector" the station corresponding to the call letters in front of the button. With the volume low, turn the "Station Selector" knob slowly back and forth until the signal is clearest. The station is then tuned in correctly.

Release the button and press another button all the way down. Follow the above instructions, tuning in the station accurately with the button held down. In the same way continue to set all the buttons.

After all buttons are set, and the last one is released, hold the "Station Selector" knob to prevent it from turning while you tighten the screw at the center of the knob. When the screw is tightened the unit is ready to operate.

If it is ever desired to substitute a station received well in your locality for a station already set, follow the same procedure, setting up only the desired station.


To tune your receiver automatically simply press down the button in the rear of the desired station call letters. Be sure that you press the button all the way down until a distinct stop is noted.

MODELS 39-19PA,
39-19PF, 39-19PCS
39-19PT

PHILCO RADIO & TELEV. CORP.

MODEL 39-30PCX
Phono Connections
Notes, Parts

Models 39-19 PA, 39-19 PF, 39-19 PCS, 39-19 PT

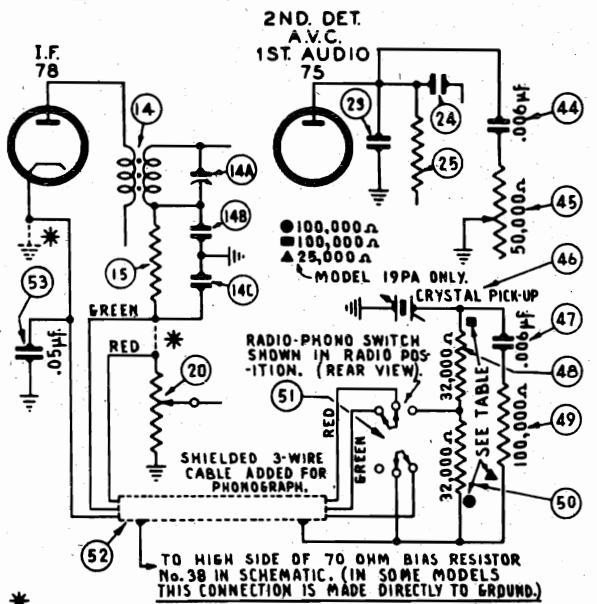

* DOTTED LINES INDICATE CONNECTIONS BEFORE ADDITION OF PHONOGRAPH. (REFER TO MODEL 39-19. see index.)

PHONOGRAPH CONNECTIONS MODELS 19PA, 19PF, 19PCS, 19PT.

Model 39-19 PA is a combination automatic record changer phonograph and automatic push-button tuning superheterodyne radio receiver. The radio receiver of this model is identical to the Model 39-19 Code 122 with the exception of the automatic phonograph connections. The automatic record changer plays eight 10-inch records automatically or 12-inch records manually. The specifications of this model with the exception of the cabinet dimensions and power consumption and automatic record changer are the same as Model 39-19 Code 122. The connections for the phonograph pick-up as connected in the Model 39-19 Code 122 are shown below. The circle numbers of this diagram correspond to the circle numbers of the Model 39-19 Code 122.

The alignment of compensators will also be found under Model 39-19 Code 122 (see index)

For record changer 35-1169 see index.

Models 39-19 PF, 39-19 PCS and 39-19 PT, are combination phonograph and automatic tuning superheterodyne radio receivers. The radio receivers of Models 39-19 PF and PCS are identical to Model 39-19 Code 122 with the exception of the phonograph connections. The radio receiver of Model 39-19 PT is identical to Model 39-19 Code 121 with the addition of the phonograph connections. The phonograph section of these models consists of a semi-automatic pick-up that places itself automatically on the turntable when the lid is closed and plays either 10- or 12-inch records.

The specifications of this model with the exception of cabinet dimensions, power consumption and semi-automatic pick-up are the same as Model 39-19 Codes 121, 122. The connections for the phonograph pick-up as connected to Model 39-19, Codes 121 and 122 are shown below. The circle numbers of this diagram correspond to the circle numbers of the Model 39-19 Codes 121, 122.

The alignment of the compensators will also be found under Model 39-19 Codes 121, 122 (see index)

Replacement Parts — Model 39-19 PA

SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.
44	Condenser (.006 mfd., 400 V.)	30-4591	52	Cable (Radio-Phono Switch)	30-4519		Tone Arm Complete with Crystal and Base	35-2048
45	Tone Control	33-5327	53	Condenser	30-4519		Turntable (10")	35-3032
46	Crystal Cartridge	35-2044					Tuning Shaft	56-6018
47	Condenser (.006 mfd., 400 V.)	30-4591					Motor (110 V., 60 cycle)	35-1163
48	Resistor (32,000 ohms)	33-332339					Shaft (Wave Switch and Volume Control)	38-9640
49	Resistor (100,000 ohms)	33-410339					Tuning Shaft Tube	56-6004
50	Resistor (32,000 ohms)	33-332339					Dashpot Assy. (Automatic Record Chgr.)	315-1001
51	Switch (Radio-Phono)	42-1053					Handles (For Lid of 19PA Cabinet)	27-4597
							Springs (Governor Ball of Record Chgr.)	35-1179

MISCELLANEOUS PARTS

Automatic Record Changer Complete	35-1169
Governor (Motor)	35-1199
Grille and Baffle	40-6491
Tone Arm Complete with Crystal	35-2047

Replacement Parts — Models 39-19 PF, 39-19 PCS, 39-19 PT

SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.
44	Condenser (.006 mfd., 400 V.)	30-4591	50	Resistor (32,000 ohms)	33-332339		Sleeve for Tuning Shaft	28-6935
45	Tone Control	33-5327	51	Switch (Radio-Phono)	42-1053		Shaft (Wave Change and Volume Control)	38-9748
46	Crystal Cartridge	415-1027	52	Cable (Radio-Phono Switch)	30-4519		Tuning Shaft Tube	28-6935
47	Condenser (.006 mfd., 400 V.)	30-4591	53	Condenser (.05 mfd., 200 V.)	30-4519		Tone Arm and Pick-up Complete	35-2027
48	Resistor (32,000 ohms)	33-332339					Turntable (9")	35-3035
49	Resistor (100,000 ohms)	33-410339						

PHILCO Model 39-30 PCX

Model 39-30 PCX is a combination automatic record changer phonograph and electric push-button tuning superheterodyne radio receiver. This model is identical to the Model 39-30 Code 121 with the exception of the automatic record changer. The automatic record changer plays ten records either 10 or 12 inches repeating the last selection until the records are restacked or the set is turned off. The electric pick-up is a crystal type.


The specifications for the radio receiver, alignment of compensators and adjustment of push-buttons for reception of stations is covered under Model 39-30 Code 121. The connections for the phonograph pick-up as connected in the Model 39-30 Code 121 receiver are shown below. The circle numbers of this diagram correspond to the circle numbers of the Model 39-30 Code 121 schematic.

Replacement Parts — Model 39-30 PCX

SCHE. No.	DESCRIPTION	PART No.
52	Condenser (.05 mfd., 200 V.)	30-4519
53	Condenser (.006 mfd., 200 V.)	30-4583
54	Resistor (50,000 ohms)	33-350339
55	Resistor (100,000 ohms)	33-410339
56	Crystal Cartridge	35-2030
57	Resistor (100,000 ohms)	33-410339
58	Switch (Radio-Phono)	42-1522
59	Cable	

MISCELLANEOUS PART

Tone Arm and Pick-up (Less Base)	35-2059
----------------------------------	---------

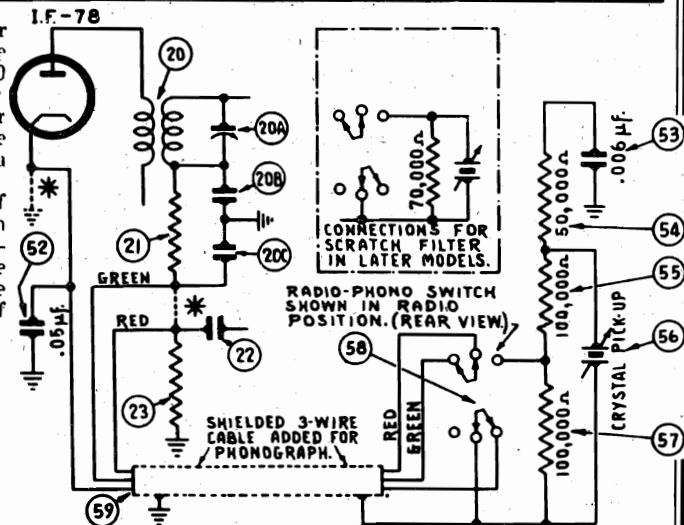

* DOTTED LINES INDICATE CONNECTIONS BEFORE ADDITION OF PHONOGRAPH. (REFER TO MODEL 39-30. (see index).)
PHONOGRAPH CONNECTIONS FOR MODEL 39-30PCX

MODEL 39-85, Code 121
PHILCO RADIO & TELEV. CORP Schematic, Chassis Voltage

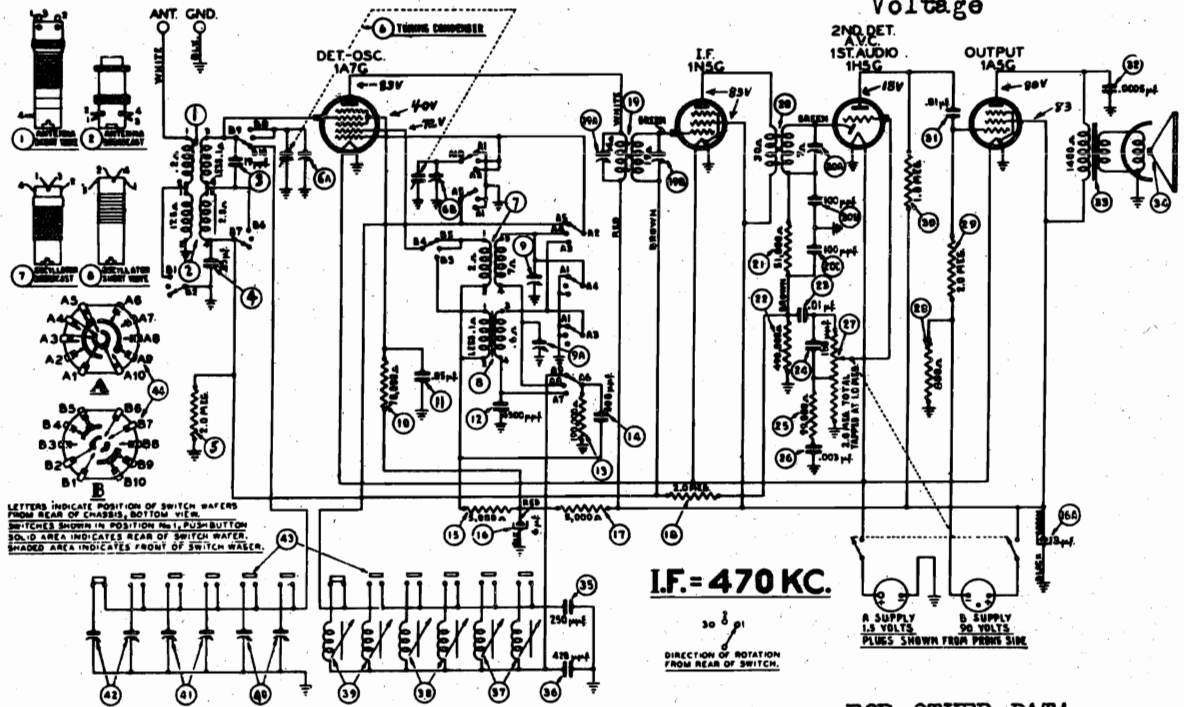


Fig. 2. Schematic Diagram

FOR OTHER DATA
 SEE INDEX

**Replacement Parts
 Model 39-85, Code 121**

Schem. No.	Description	Part No.
1	Antenna Transformer, Range 2 (Incls. No. 3)	32-3092
2	Antenna Transformer, Range 1	32-3084
3	Condenser (19 mmf) (part of No. 1)	30-1090
4	Condenser (.05 mf tubular)	30-4519
5	Resistor (2.0 megohms, 1/2 watt)	33-520339
6	Tuning Condenser Assembly	31-2300
7	Oscillator Transformer, Range 1	32-3082
8	Oscillator Transformer, Range 2	32-3085
9	Compensator (two sections)	31-6100
10	Resistor (70,000 ohms, 1/2 watt)	33-370339
11	Condenser (.05 mf tubular)	30-4444
12	Condenser (4500 mmf mica)	30-1109
13	Resistor (190,000 ohms, 1/2 watt)	33-419339
14	Condenser (500 mmf mica)	30-1114
15	Resistor (5000 ohms, 1/2 watt)	33-250339
16	Electrolytic Condenser (6 mf—3 mf)	30-2348
17	Resistor (5000 ohms, 1/2 watt)	33-250339
18	Resistor (2.0 megohms)	33-520339
19	1st I. F. Transformer Assembly	32-2841
20	2nd I. F. Transformer Assembly	32-3081
21	Resistor (51,000 ohms, 1/2 watt)	33-351339
22	Resistor (490,000 ohms, 1/2 watt)	33-449339
23	Condenser (.01 mf tubular)	30-4572
24	Condenser (150 mmf mica)	30-1033
25	Resistor (99,000 ohms, 1/2 watt)	33-399330
26	Condenser (.003 mf tubular)	30-4580
27	Volume Control and On-Off Switch	33-5288
28	Resistor (800 ohms, 1/2 watt)	33-180339
29	Resistor (2.0 megohms, 1/2 watt)	33-520339
30	Resistor (1.0 megohm, 1/2 watt)	33-510339
31	Condenser (.01 mf tubular)	30-4572
32	Condenser (.0005 mf mica)	30-1114
33	Output Transformer	32-7984
34	Cone & Voice Coil Assembly for Speaker (Part No. 36-1410)	36-4093
	Cone & Voice Coil Assembly for Speaker (Part No. 36-1436)	36-4094
35	Condenser (250 mmf, silver plated mica)	30-1104
36	Condenser (420 mmf, silver plated mica)	30-1116

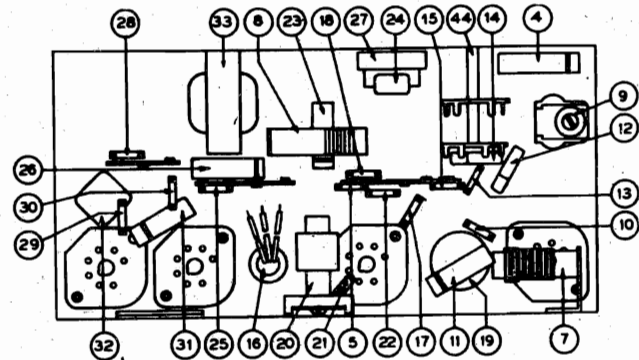


Fig. 3. Part locations, underside of chassis

Replacement Parts

CONTINUED

Schem. No.	Description	Part No.	Description	Part No.
37	Oscillator Coil Assem. (High freq. No. 1 and 2)	32-2941	Bezel Assy. (Dial)	40-6374
38	Oscillator Coil Assem. (Medium frequency No. 3 and 4)	32-2942	Cable (Battery)	41-3437
39	Oscillator Coil Assem. (Low frequency No. 5 and 6)	32-2943	Dial Assy.	31-2307
40	Compensator (two sections) (Nos. 1 and 2)	31-6244	Dial Pointer	56-1091
41	Compensator (two sections) (Nos. 3 and 4)	31-6245	Dial Drive Cord	31-2318
42	Compensator (two sections) (Nos. 5 and 6)	31-6246	Dial Drive Spring	28-8751
43	Push-Button Switch	42-1471	Dial Tuning Shaft	31-2290
44	Wave Switch	42-1466	Escutcheon (Push-Button)	28-5561
			Knob (Push-Button)	27-4702
			Knob (Range Switch)	27-4321
			Knob (Volume & Tuning)	27-4332
			Pulley (Tuning Condenser)	28-6662
			Speaker (B Cabinet)	36-1410
			Speaker (XF Cabinet)	36-1436
			Socket (6 prong)	27-6086
			Socket (7 prong)	27-6099
			Socket (Speaker)	27-6115
			Tab Kit	40-6408

MODEL 39-116PCX
Phono. Connections
Notes

PHILCO RADIO & TELEV. CORP.

PHILCO Model 39-116 PCX


Model 39-116 PCX is a combination phonograph and 14 tube radio receiver employing a superheterodyne circuit with three tuning ranges for reception of standard and short-wave broadcast stations. Incorporated in this receiver is Philco mystery control for electric automatic tuning of eight standard broadcast stations from a remote point. The phonograph section contains an automatic record changer which plays ten records either 10- or 12-inch size automatically repeating the last record until the records are restacked or the switch turned off.

This model with the exception of the phonograph mechanism is identical to the Model 39-116 RX. The same specifications for the Model 39-116 RX apply to this model except the cabinet size and power consumption which are listed below.

CABINET DIMENSIONS:

Height, 37 1/8". Width, 44 1/8". Depth, 17 1/8".

The adjustment of the mystery control circuit for reception of stations and alignment of compensators is also covered under Model 39-116 RX. The phonograph connections are shown below as connected in the Model 39-116 RX circuit diagram. The circle numbers of this phonograph diagram correspond to the circle numbers of the Model 39-116 RX diagram.

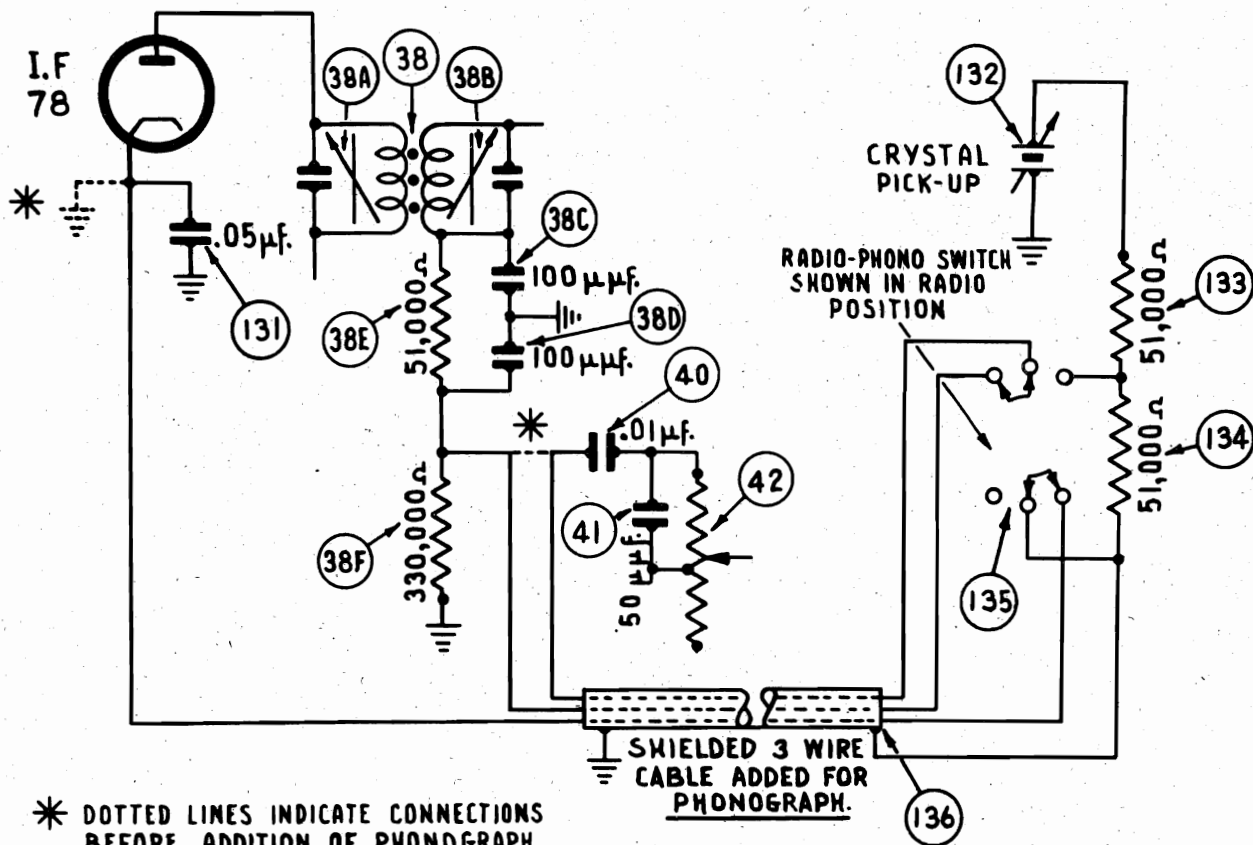

* DOTTED LINES INDICATE CONNECTIONS BEFORE ADDITION OF PHONOGRAPH. REFER TO SERVICE BULLETIN No. 310.



PHONOGRAPH CONNECTIONS FOR MODEL 39-116 PCX

Replacement Parts — Model 39-116 PCX

SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.
131	Condenser (.05 mfd., 200 V.)	30-4519	MISCELLANEOUS PARTS		
132	Crystal Cartridge (Pick-up)	35-2030			
133	Resistor (51,000 ohms)	33-351339	Automatic Record Changer (Complete)	35-1178	
134	Resistor (51,000 ohms)	33-351339	Motor 110 volts, 60 cycles	35-1187	
135	Switch (Radio-Phono)	42-1053	Motor 110 volts, 50 cycles	35-1186	
136	Cable		Governor (motor)	35-1165	

PHILCO RADIO & TELEV. CORP.

MODEL 39-117(121,122)
MODEL 39-118(121,122)
Schematics
Voltage

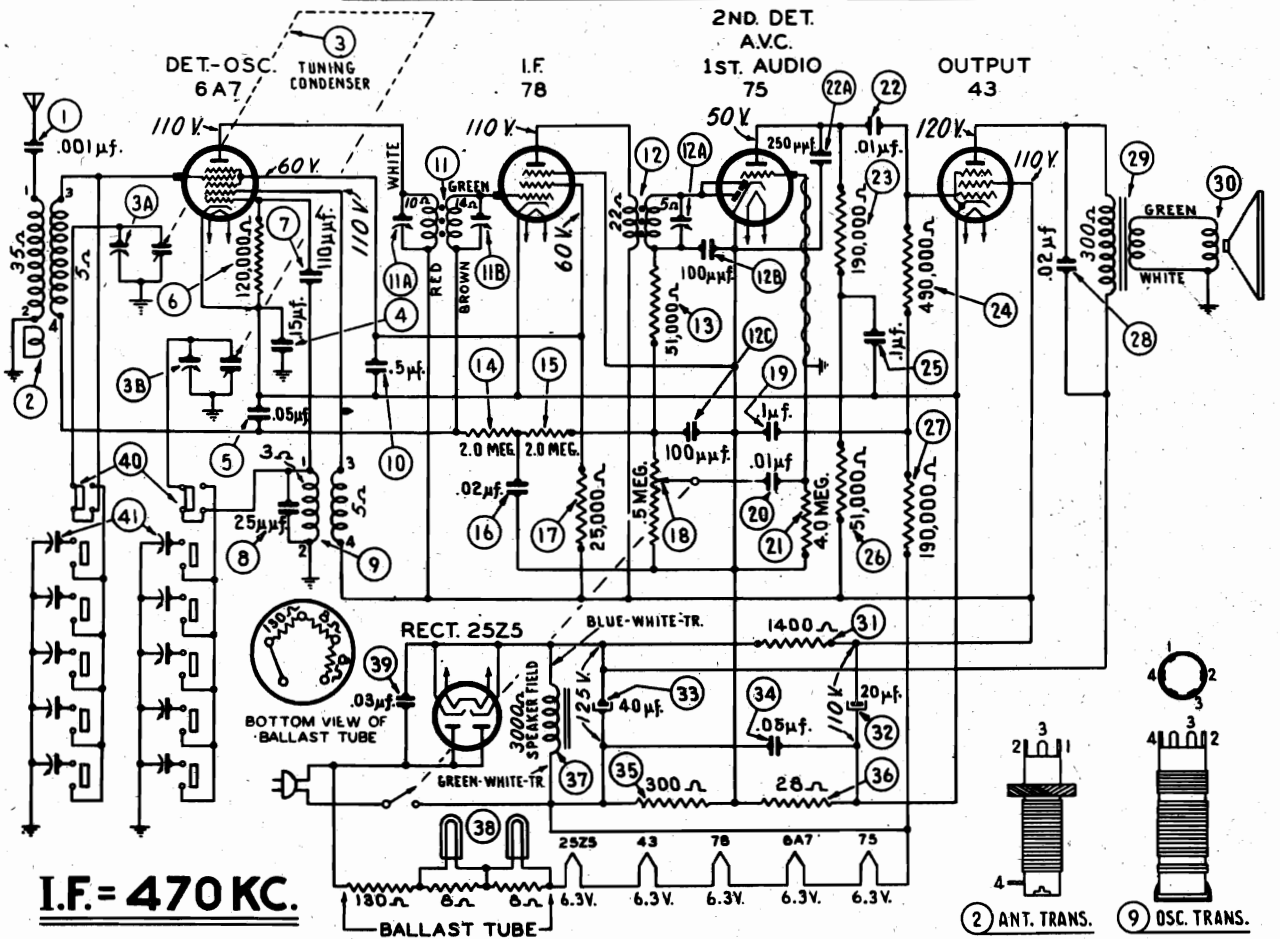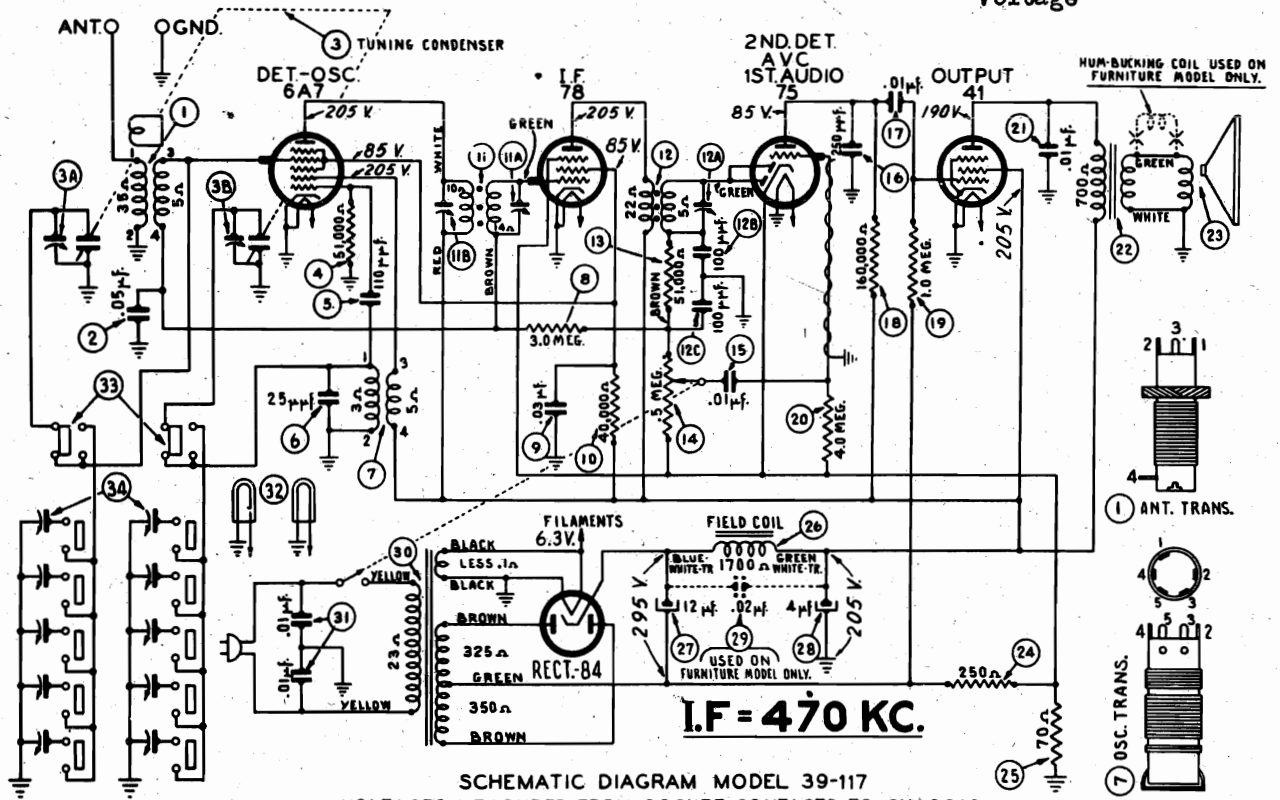

MODEL 39-117(121,122)
 MODEL 39-118(121,122)
 Alignment

PHILCO RADIO & TELEV. CORP

MODEL 39-119(121,122)
 Alignment, Trimmers
 Chassis, Parts

Alignment of Compensators

EQUIPMENT REQUIRED:

- (1) Signal Generator: Philco Model 077 Signal Generator, which has a fundamental frequency range from 115 to 36,000 K.C., is the correct instrument for this purpose.
- (2) Output Meter: Philco Model 027 Vacuum Tube Voltmeter and Circuit Tester incorporates a sensitive output meter and is recommended.
- (3) Philco Fiber Handle Screw Driver, Part No. 27-7059, and Fiber Wrench, Part No. 3164.
- (4) Philco Set Transformer, Part No. 32-2763

OUTPUT METER:

Two indicating devices for aligning of the receiver can be used; either an audio output meter or a vacuum tube voltmeter. The method of connecting the audio output meter is given in the next paragraph. The procedure for connecting the vacuum tube voltmeter as an aligning indicator will be found on Page 5. Where greater accuracy of the various tuned circuits is desired, the vacuum tube voltmeter is recommended as an aligning device.

The Philco 027 Output Meter is connected to the plate and cathode terminals of the type 41 tube in Model 39-117 and 119 and type 43 tube in Model 39-118. Set the meter to use the 0-30 volt scale.

Procedure—Model 39-117

Operations in Order	SIGNAL GENERATOR			RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Settings	Adjust Compensators in Order	
1	6A7 Grid	.1 mf.	470 K.C.	580 K.C.	Vol. Cont. (Max.)	12A, 11A, 11B	Push "In" Manual Button
2	Ant. Ter.	200 mmf.	1550 K.C.	1550 K.C.	Vol. Cont. (Max.)	3B, 3A	See Note B

Procedure—Model 39-118

1	6A7 Grid	.1 mfd.	470 K.C.	580 K.C.	Vol. Cont. (Max.)	12A, 11A, 11B	See Note C
2	Ant. and Gnd.	200 mmf.	1550 K.C.	1550 K.C.	Vol. Cont. (Max.)	3B, 3A	See Note B See Note D

Procedure—Model 39-119

1	6A7 Grid	.1 mfd.	470 K.C.	580 K.C.	Vol. Max.	14A, 13B, 13A	Note B
2	Ant. and Gnd.	200 mmf.	18 M.C.	18 M.C.	Vol. Max.	4B	
3	Ant. and Gnd.	200 mmf.	1550 K.C.	1550 K.C.	Vol. Max.	8, 4A	Roll Tuning Condenser
4	Ant. and Gnd.	200 mmf.	580 K.C.	580 K.C.	Vol. Max.	8A	
5	Ant. and Gnd.	200 mmf.	1550 K.C.	1550 K.C.	Vol. Max.	8, 4A	

A—The "Dummy Antenna" consists of a condenser or resistance connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.

B—Dial Calibration: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To do this, proceed as follows: Turn the tuning condenser to the maximum capacity position (plates fully meshed). With the condenser in this position, the tuning pointer is set on the first index line at the low frequency end of the scale (540 K.C.).

* Several speakers on these models have the same part number with the exception of a -1, -2, etc., following the part number. These speakers are interchangeable. The cone assembly, however, cannot be interchanged. When ordering cones, be sure to order correct cone part number as indicated in each parts list.

C—Insert the signal generator output lead into the "Med" jack and the ground lead into the "Gnd" jack of the signal generator. Connect the other end of the output lead to terminal No. 1 on the Set Transformer Part No. 32-2763, and the cable ground to terminal No. 2. Nos. 3 and 4 terminals of Set Transformer are then connected to the chassis and 6A7 grid respectively of the receiver with short pieces of wire. Insert the 0.1 mf. in series with the No. 4 lead which connects to the grid.

D—Insert the signal generator output lead into the "Med" jack and the ground lead into the "Gnd" jack of the signal generator. Connect the other end of the output lead to terminal No. 1 of the Set Transformer, Part No. 32-2763, and the cable ground to terminal No. 2. Nos. 3 and 4 terminals of Set Transformer are then connected to the chassis and antenna lead respectively of the receiver with short pieces of wire. Insert the 100 mmf. in series with the No. 4 lead which connects to the antenna lead.

MODEL 39-119, CODE 121-122

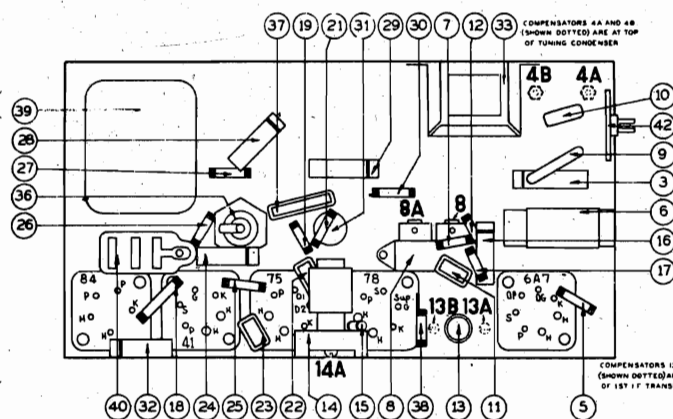


Fig. 3—Part Locations, Model 39-119

Description	Part No.
Bezel Assembly (Dial)	40-6364
Bezel Gasket (Dial)	27-9174
Bezel (Push Button)	56-1364
Bezel Gasket (Push Button)	27-9218
Bezel Clamp (Push Button)	28-5153
Cable & Plug (Power Supply)	L-2778
Dial	27-5480
Dial Tuning Drum Assy.	31-2281
Drive Cord Assy. (Pointer operation)	31-2275
Drive Cord Assy. (Tuning Cond.)	31-2343
Clip (Mtr. Ant. Coils)	28-5002
Clip (Mtr. Osc. Coil)	28-5003
Escutcheon Plate (extension shafts F cabinet)	56-1051
Escutcheon Pin	W-950
Knobs (Volume & Tuning)	27-4753
Knob (Wave Switch)	27-4754
Pilot Lamp Socket Assembly	38-9612
Pointer (Dial)	28-5934
Push Button	27-4814
Screws (Bezel Mtg.)	W-1834 FGA
Shaft Extensions (Volume, Tuning and Wave Switch)	38-9640
Spring (Tuning Cond. Cord)	28-8751
Spring (Pointer Cord)	28-8946
Speaker (T cabinet, code 121—optional)	*36-1426-3 *36-1426-1
Speaker (F cabinet—code 122)	*36-1449-3
Spring, Retaining (Volume Shaft)	28-8915
Socket (5 prong, Rect. tube)	27-6035
Socket (6 prong, type 78, 75 and 41 tubes)	27-6036
Socket (7 prong, type 6A7 tube)	27-6107
Tab (Manual)	27-5486
Tab Kit	40-6391
† Replace speaker.	

MODEL 39-117(121,122)
 PHILCO RADIO & TELEV. CORP MODEL 39-118(121,122)

Chassis, Trimmers
 Parts

Model 39-117, Codes 121-122

TYPE OF CIRCUIT: A.C. operated; super-heterodyne circuit, covering standard broadcast and police stations (540 K.C. to 1720 K.C.). In addition other features of design are: Electric Push-Button Tuning; Automatic Volume Control; and pentode audio output.

Codes 121 and 122 chassis of this model are similar with the exception of Speaker and Cabinet.

This receiver is designed to operate from a "Philco Utility Aerial," Part No. 45-2450. This aerial system should be used to obtain maximum performance from the receiver.

POWER SUPPLY: Voltage—115 volts. Frequency—50-60 cycles. Power Consumption—40 watts.

INTERMEDIATE FREQUENCY: 470 K.C.

TUNING RANGE: 540 to 1720 K.C.

AUDIO OUTPUT: 2 watts.

PHILCO TUBES USED: Five tubes: 1-6A7, 1st detector and oscillator; 1-78, I.F.; 1-75, 2nd detector, Automatic Volume Control, and 1st audio; 1-41, Output; and 1-84, Rectifier.


TUNING MECHANISM: Pulley and cable drive for Manual tuning. Six Electric Push-Buttons for Automatic Tuning. Five push-buttons are used for stations and one for manual tuning. The procedure for adjusting and operating the Electric Push-Buttons will be found in the instructions supplied with each set.

CABINETS: Code 121 chassis in type "T" cabinet
 Code 122 chassis in type "F" cabinet.

Schem. No.	Description	Part No.
1	Ant. Trans.	32-3039
2	Tubular Cond. (.05 mfd.)	30-4519
3	Tuning Cond. Assy.	31-2362
4	Resistor (51,000 ohms, 1 watt)	33-351439
5	Mica Cond. (110 mmfd.)	30-1031
6	Silver Mica Cond. (25 mmfd.)	30-1112
7	Osc. Trans.	32-3040
8	Resistor (3.0 meg., 1 watt)	33-530439
9	Tubular Cond. (.03 mfd.)	30-4449
10	Resistor (40,000 ohms, 1 watt)	33-340439
11	1st I. F. Trans. Assy.	32-3075
12	2nd I. F. Trans. Assy.	32-2944
13	Resistor (51,000 ohms, 1 watt)	33-351439
14	Volume Control & On-Off switch.	33-5276

15	Tubular Cond. (.01 mfd.)	30-4479
16	Mica Cond. (250 mmfd.)	30-1032
17	Tubular Cond. (.01 mfd.)	30-4572
18	Resistor (160,000 ohms, 1 watt)	33-416439
19	Resistor (1.0 meg., 1 watt)	33-510439
20	Resistor (4.0 meg., 1 watt)	33-540439
21	Tubular Cond. (.01 mfd.)	30-4572
22	Output Trans.	32-7980
23	Cone & Voice Coil Assy. For Speaker (Pt. No. 36-1426-1)	36-4083
	(Pt. No. 36-1426-3)	36-4085
	Cone & Voice Coil Assy. for Speaker (Pt. No. 36-1440-3)	36-4086
24	Resistor (250 ohms wirewound)	33-125431
25	Resistor (70 ohms, 1 watt)	33-070439
26	†Field Coil for Speaker (Pt. No. 36-1426)	
†	Field Coil for Speaker (Pt. No. 36-1440)	
27	Electro. Cond. (12 mfd.)	30-2319
28	Electro. Cond. (4 mfd.)	30-2236
29	Tubular Cond. (.02 mfd.)	30-4215
30	Power Trans. (115 volts, 50-60 cycles)	32-7974
31	Bakelite Cond. (.01 mfd.—.01 mfd.)	3903 DG
32	Pilot Lamps	34-2064
33	Push button switch	42-1484
34	Padder strip	31-6292

Bezel Assy. (Dial)	40-6364
Bezel Gasket (Dial)	27-9174
Bezel (Push buttons)	56-1364
Bezel Gasket (push buttons)	27-9218
Bezel Clamp (Dial)	28-5153
Cable & Plug (Power Supply)	L-2778
Dial	27-5406
Dial Tuning Drum Assy.	31-2281
Drive Cord Assy. (Pointer)	31-2275
Drive Cord Assy. (Tuning cond.)	31-2243
Clip (Mtg. Ant. Coll)	28-5002
Clip (Mtg. Osc. Coll)	28-5003
Escutcheon Plate (extension shafts F Cabinet)	56-1051
Escutcheon Pin	W-950
Knobs (Volume & Tuning)	27-4753
Pilot Lamp Socket Assy.	38-9612
Pointer (Dial)	28-5934
Push buttons (6 used)	27-4814
Screws (bezel mtg.)	W-1834 FGA
Shaft Extensions (2 used) F cabinet only	38-9640
Spring (retaining, volume and tuning) F cabinet only	28-8915
Spring (Tuning cond cord)	28-8751
Spring (Pointer Cord)	28-8946
Socket (5 prong, Rect. tube)	27-6035
Socket (6 prong, type 78 75 & 41 tubes)	27-6036
Socket (7 prong, type 6A7 tube)	27-6107
*Speaker (F cabinet)	36-1440
*Speaker (T cabinet)	36-1426-3
† Replace speaker.	40-6391

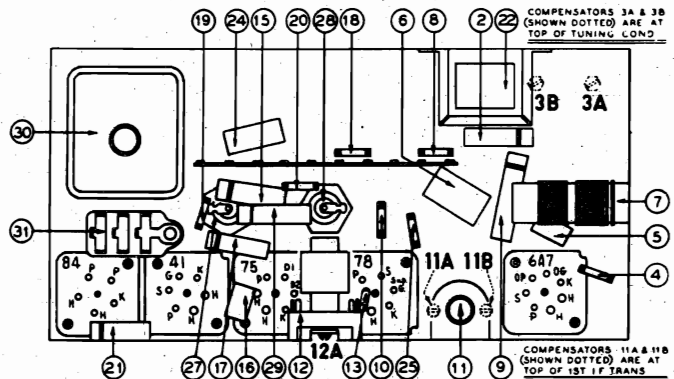

Model 39-118, Codes 121-122

TYPE OF CIRCUIT: A.C. D.C. operated; super-heterodyne circuit, covering standard broadcast and police stations (540 K.C. to 1720 K.C.). In addition other features of design are: Electric Push-Button Tuning; Automatic Volume Control; and pentode audio output.

Codes 121 and 122 chassis of this model are similar with the exception of Speaker and Cabinet.

The receiver is designed to operate from a "Philco Utility Aerial," Part No. 45-2450. This aerial system should be used to obtain maximum performance from the receiver.

POWER SUPPLY: Voltage—115 volts. A.C. or D.C. Power Consumption—55 watts.

INTERMEDIATE FREQUENCY: 470 K.C.

TUNING RANGE: 540 to 1720 K.C.

PHILCO TUBES USED: 1-6A7, 1st detector and oscillator; 1-78, I.F.; 1-75, 2nd detector, Automatic Volume Control and 1st audio; 1-43, Output; 1-25Z5, Rectifier; and 1-BKV51DJ, ballast tube.


TUNING MECHANISM: Pulley and cable drive for Manual tuning. Six Electric Push-Buttons for Automatic Tuning. Five push-buttons are used for stations and one for manual tuning. The procedure for adjusting and operating the Electric Push-Buttons will be found in the instructions supplied with each set.

CABINETS: Code 121 chassis in type "T" cabinet.
 Code 122 chassis in type "F" cabinet.

Schem. No.	Description	Part No.
1	Tubular Cond. (.001 mfd.)	30-4453
2	Ant. Trans.	32-3039
3	Tuning cond. Assy.	31-2362
4	Tubular Cond. (.15 mfd.)	30-4505
5	Tubular Cond. (.05 mfd.)	30-4519
6	Resistor (120,000 ohms, 1 watt)	33-412439
7	Mica Cond. (110 mmfd.)	30-1031
8	Silver Mica Cond. (25 mmfd.)	30-1112
9	Osc. Trans.	32-3040
10	Tubular Cond. (.5 mfd.)	30-4551
11	1st I. F. Trans. Assy.	32-3075
12	2nd I. F. Trans. Assy.	32-2944
13	Resistor (51,000 ohms, 1 watt)	33-351439
14	Resistor (2.0 megohms, 1 watt)	33-520439

15	Resistor (2.0 megohms, 1 watt)	33-520439
16	Tubular Cond. (.02 mfd.)	30-4215
17	Resistor (25,000 ohms, 1 watt)	33-325439
18	Volume Control & On-Off Switch	33-5276
19	Tubular Cond. (.1 mfd.)	30-4499
20	Tubular Cond. (.01 mfd.)	30-4572
21	Resistor (4.0 megohms, 1 watt)	33-540439
22	Tubular Cond. (.01 mfd.)	30-4572
23	Resistor (190,000 ohms, 1 watt)	33-419439
24	Resistor (490,000 ohms, 1 watt)	33-419439
25	Tubular Cond. (.1 mfd.)	30-4499
26	Resistor (51,000 ohms, 1 watt)	33-351439
27	Resistor (190,000 ohms, 1 watt)	33-419439
28	Tubular Cond. (.02 mfd.)	30-4516
29	Output Trans.	32-7986
30	Cone & Voice Coil Assy.	
	Speaker Part No. 36-1444-1	*36-4083
	Speaker Part No. 36-1444-3	*36-4085
	Cone & Voice Coil Assy.	
	Speaker Part No. 36-1445	*36-4086
31	Resistor (1400 ohms, 1 watt)	33-214439
32	Electro. Cond. (20 mfd.)	30-2245
33	Electro. Cond. (40 mfd.)	30-2332
34	Tubular Cond. (.05 mfd.)	30-4444
35	Resistor (300 ohms) (wirewound)	33-130431
36	Resistor (28 ohms, 1 watt)	33-028439
37	†Field Coil for Speaker, Part No. 36-1444	
†	Field Coil for Speaker, Part No. 36-1445	
38	Pilot Lamps	34-2068
39	Tubular Cond. (.03 mfd.)	30-4449
40	Push button switch	42-1484
41	Padder strip	31-6292


Bezel Assy. (Dial)	40-6364
Bezel Gasket (Dial)	27-9174
Bezel (Push Buttons)	56-1364
Bezel Gasket (Push Buttons)	27-9218
Bezel Clamp (Dial)	28-5153
Cable & Plug (Power Supply)	L-2778
Dial	27-5406
Dial Tuning Drum Assy.	31-2281
Drive Cord Assy. (Pointer)	31-2275
Drive Cord Assy. (Tuning Cond.)	31-2243
Clip (Mtg. Ant. Coll)	28-5002
Clip (Mtg. Osc. Coll)	28-5003
Escutcheon Plate (extension shafts F cabinet)	56-1051
Escutcheon Pin	W-950
Knobs (Volume & Tuning)	27-4753
Pilot Lamp Socket Assy.	38-9612
Pointer	28-5934
Push Buttons (6 used)	27-4814
Shaft Extensions (2 used) F cabinet only	38-9640
Spring (retaining) Volume & Tuning F Cabinet	28-8915
Spring (Tuning Cond. Cord)	28-8751
Spring (Pointer Cord)	28-8946
Socket (5 prong, Ballast tube)	27-6035
Socket (6 prong, type 25Z5, 43, 75 & 78 tubes)	27-6036
Socket (7 prong, type 6A7 Tube)	27-6107
*Speaker (F cabinet)	36-1440
*Speaker (T cabinet, optional)	36-1444-1
† Replace speaker.	40-6391

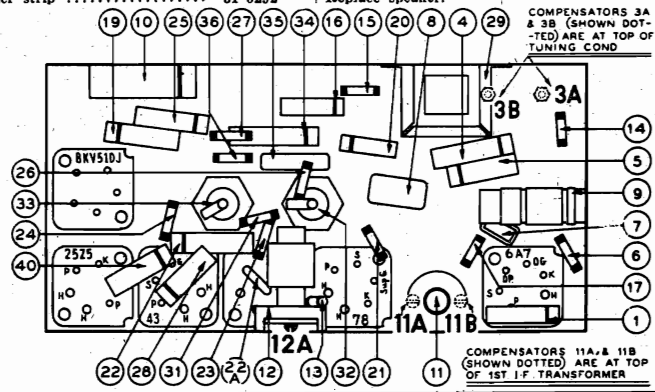

MODEL 39-119(121,122)
Schematic, Voltage
Notes

PHILCO RADIO & TELEV. CORP.

MODEL 39-119EZ
Changes (121,122)

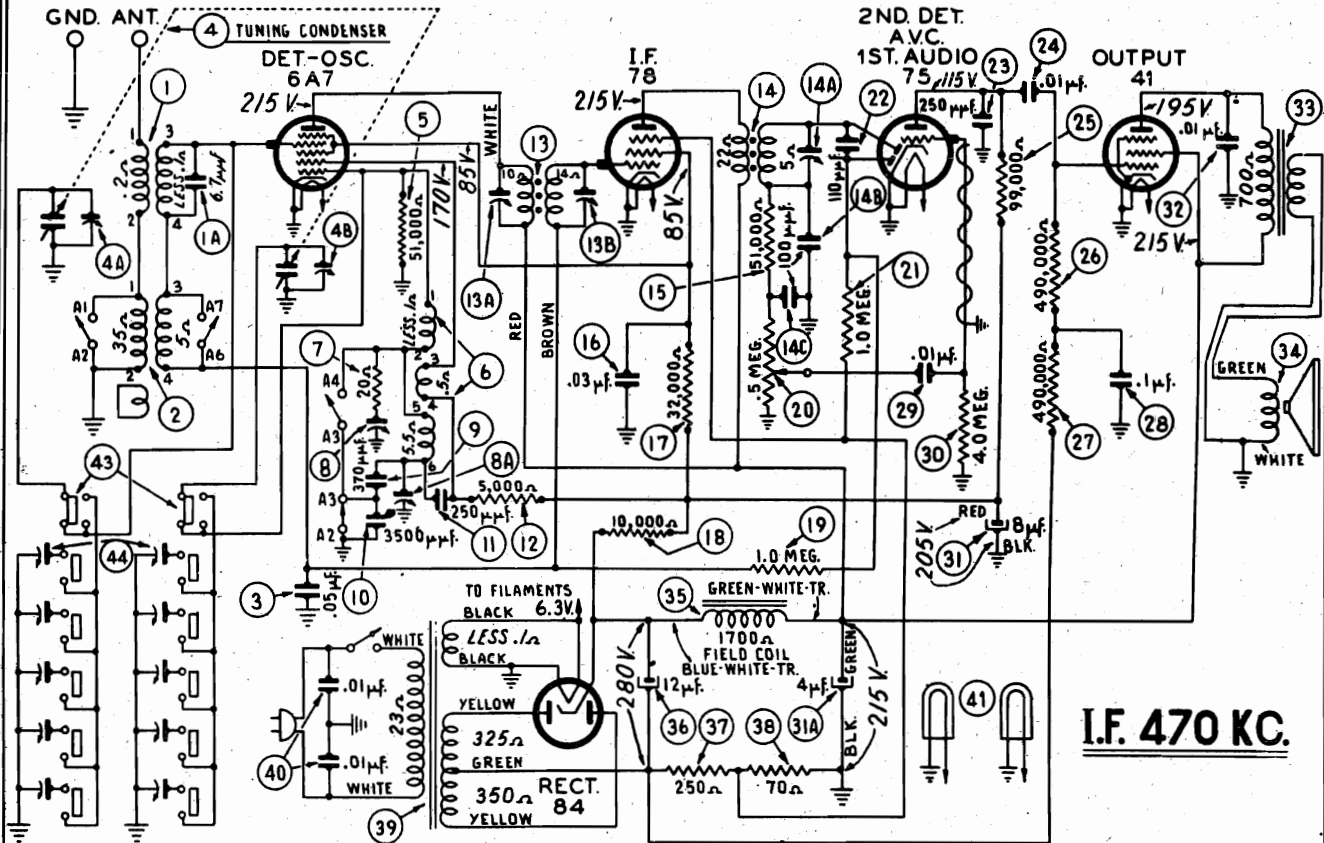

SCHEMATIC DIAGRAM MODEL 39-119
VOLTAGES MEASURED FROM SOCKET CONTACTS TO CHASSIS

PRODUCTION CHANGES
MODEL 39-119EZ, CODE 121-122

(39) Power Trans. 110/220 V., 60 cycle 32-8005

TYPE OF CIRCUIT: A.C. operated; super-heterodyne circuit with two tuning ranges, covering standard broadcast (540 K.C. to 1720 K.C.) and short wave (5.5 M.C. to 18.0 M.C.) frequencies. In addition other features of design are: Electric Push-Button Tuning; Automatic Volume Control; and pentode output.

Codes 121 and 122 chassis of this model are similar with the exception of Speaker and Cabinet.

The receiver is designed to operate from a "Philco Utility Aerial," Part No. 45-2450. This aerial system should be used to obtain maximum performance from the receiver.

POWER SUPPLY: Voltage—115 volts. Frequency—50-60 cycles. Power Consumption—40 watts.

INTERMEDIATE FREQUENCY: 470 K.C.

TUNING RANGES: 540 K.C. to 1720 K.C.; 5.5 M.C. to 18.0 M.C.


AUDIO OUTPUT: 2 watts.

PHILCO TUBES USED: Five tubes: 1-6A7, 1st detector and oscillator; 1-78, I.F.; 1-75, 2nd detector, Automatic Volume Control, and 1st audio; 1-41, Output; and 1-84. Rectifier.

TUNING MECHANISM: Pulley and cable drive for Manual Tuning. Six push-buttons for Automatic Tuning. Five push-buttons are used for stations and one for manual tuning. The procedure for adjusting and operating the Electric Tuning Push-Buttons will be found in the instructions supplied with each set.



CABINETS: Code 121 chassis in type "T" cabinet. Code 122 chassis in type "F" cabinet.

I.F. 470 KC.

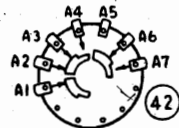

SWITCH SHOWN FROM REAR OF CHASSIS, BOTTOM VIEW IN BROADCAST POSITION.


19 02
DIRECTION OF ROTATION FROM REAR OF CHASSIS.

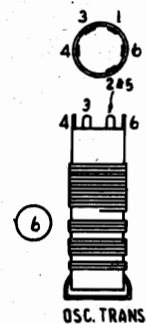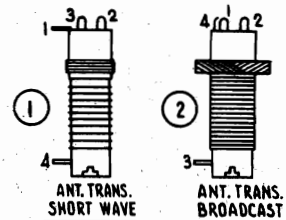

Schem. No.	Description	Part No.
1	Ant. Trans. (Short Wave)	32-3162
1A	Mica Cond. (.5 mmfd.)	30-1097
2	Ant. Trans. (Broadcast)	32-3161
3	Tubular Cond. (.45 mfd.)	30-3519
4	Tuning Cond. Assy.	31-2363
5	Resistor (51,000 ohms, 1 watt)	33-351439
6	Oscillator Trans.	32-3163
7	Resistor (20 ohms, 1 watt)	33-020439
8	Compensator (2 section)	31-6257
9	Silver Mica Cond. (.370 mmfd.)	30-1110
10	Mica Cond. (.350 mmfd.)	30-1084
11	Mica Cond. (.250 mmfd.)	30-1032
12	Resistor (5000 ohms, 1 watt)	33-250439
13	1st I. F. Trans. Assy.	32-3075
14	2nd I. F. Trans. Assy.	32-2944
15	Resistor (51,000 ohms, 1 watt)	33-351439
16	Tubular Cond. (.03 mfd.)	30-4449
17	Resistor (29,000 ohms, 1 watt)	33-382439
18	Resistor (10,000 ohms, 1 watt)	33-310439
19	Resistor (1.0 meg., 1 watt)	33-510439
20	Volume Control and On-Off Switch	33-5276
21	Resistor (1.0 meg., 1 watt)	33-510439
22	Mica Cond. (.110 mmfd.)	30-1031
23	Mica Cond. (.250 mmfd.)	30-1032
24	Tubular Cond. (.01 mfd.)	30-4572

Schem. No.	Description	Part No.
25	Resistor (.9,000 ohms, 1 watt)	33-390439
26	Resistor (490,000 ohms, 1 watt)	33-449439
27	Resistor (490,000 ohms, 1 watt)	33-449439
28	Tubular Cond. (.1 mfd.)	30-4499
29	Tubular Cond. (.01 mfd.)	30-4479
30	Resistor (4.0 meg., 1 watt)	33-540439
31	Electrolytic Cond. (4-8 mfd.)	30-2323
32	Tubular Cond. (.01 mfd.)	30-4572
33	Output Trans.	32-7980
34	Cone & Voice Coil Assy.	
	Speaker Part No. 36-1426-1	*36-4083
	Speaker Part No. 36-1426-3	*36-4085
	Cone & Voice Coil Assy.	
	Speaker Part No. 36-1449	*36-4086
35	Field Coil (Speaker Part No. 36-1426)	
	Field Coil (Speaker Part No. 36-1449)	
36	Electrolytic Cond. (.8 mfd.)	30-3219
37	Resistor (250 ohms, wirewound)	33-125431
38	Resistor (70 ohms, 1 watt)	33-070439
39	Power Trans. (115 volts, 50-60 cycles)	32-7974
40	Bakelite Cond. (.01-.01 mfd.)	3903 DG
41	Pilot Lamps	34-2064
42	Wave Switch	42-1449
43	Push Button Switch	42-1484
44	Padder Strip	31-6292

PHILCO RADIO & TELEVISION CORP. MODEL 39-175(121,122) Schematic, Voltage

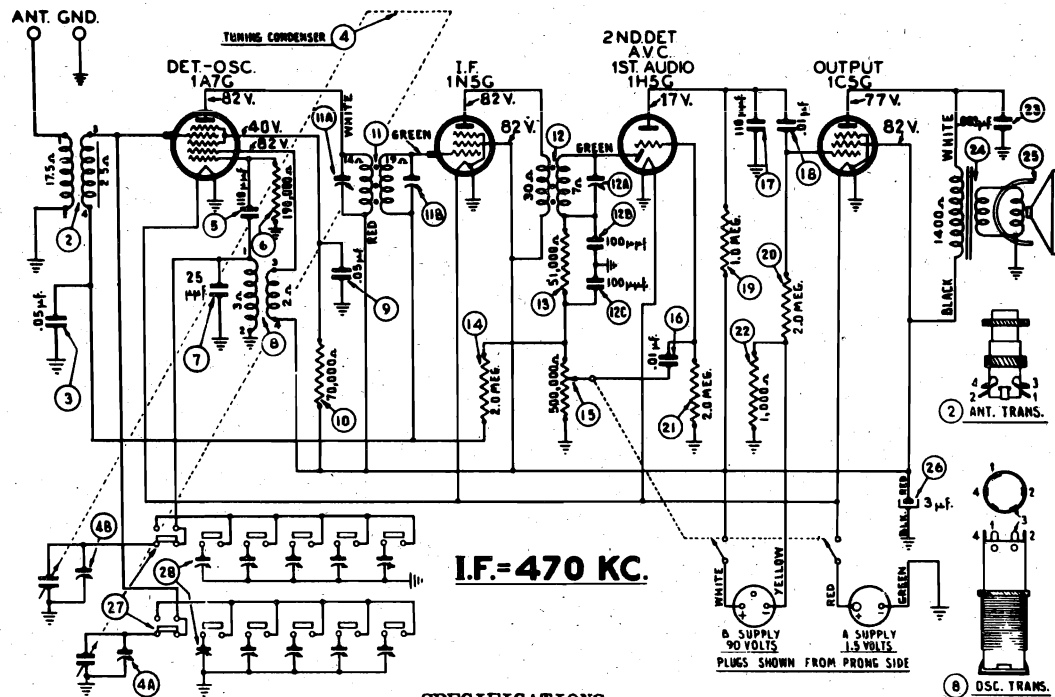

I.F. = 470 KC.

SPECIFICATIONS

RANGE: 530 to 1720 K.C.
Model 39-175 is a 4 tube battery operated superheterodyne receiver covering standard broadcast and state police stations. The receiver is equipped with electric push-button tuning in addition to manual tuning, low current battery tubes and extremely sensitive speaker.

The electric push-button tuning contains 6 push buttons for selecting any of 5 stations in the standard broadcast band and one button for dial tuning. The procedure for adjusting and operating the push-buttons will be found in the instructions on page 3.

Code 121 is assembled in a type T cabinet and has the speaker mounted on the chassis. Code 122 is assembled in a console cabinet with the speaker detached from the chassis.

Alignment of the R.F. and I.F. compensating condensers of this model is the same as that given for the Model 39-75 code 121 and 122.

2	Antenna Transformer.....	32-3169
3	Tubular Condenser (.05 mfd.).....	30-4519
4	Tuning Condenser Assembly.....	31-2362
5	Condenser (110 mmfd., mica).....	30-1031
6	Resistor (190,000 ohms, 1 watt).....	33-419439
7	Condenser (25 mmfd., silver plated mica).....	30-1112
8	Oscillator Transformer.....	32-3083
9	Tubular Cond. (.05 mfd.).....	30-4444
10	Resistor (70,000 ohms, 1 watt).....	33-370439
11	1st I.F. Transformer Assembly.....	32-3078
12	2nd I.F. Transformer Assembly.....	32-3081
13	Resistor (51,000 ohms, 1 watt).....	33-351439
14	Resistor (2.0 megohms, 1 watt).....	33-520439
15	Volume Control.....	33-5291
16	Tubular Condenser (.01 mfd.).....	30-4572
17	Condenser (110 mmfd., mica).....	30-1031
18	Tubular Condenser (.01 mfd.).....	30-4572
19	Resistor (1.0 megohm, 1 watt).....	33-510439
20	Resistor (2.0 megohms, 1 watt).....	33-520439
21	Resistor (2.0 megohms, 1 watt).....	33-520439
22	Resistor (1000 ohms, 1 watt).....	33-210439
23	Tubular Condenser (.003 mfd.).....	30-4469
24	Output Transformer.....	32-7995
25	Cone & Voice Coil Assemblies	
	Speaker Part No. 36-1442-3.....	36-4090
	Speaker Part No. 36-1447-3.....	36-4092
26	Electrolytic Condenser (3 mfd.).....	30-2346
27	Push-Button Switch.....	42-1484
28	Padder Strip.....	31-6292

INTERMEDIATE FREQUENCY: 470 K.C.

PHILCO TUBES: One 1A7G, First Detector and Oscillator; one 1N5G, I.F. Amplifier; one 1H5G, Second Detector; First Audio and Automatic Volume Control, and one 1C5G Pentode Output.

BATTERIES REQUIRED: One (1) Philco "A" Pack, Part No. 41-8014; one (1) Philco "B" Pack, Part No. 41-8015.

BATTERY DRAIN:
"A"- (250 M.A.) "B"- (8 1/2 M.A.)

AERIAL AND GROUND: In order to obtain the highest amount of sensitivity from these receivers the Philco Farm Radio Aerial, Part No. 40-63893, should be used. This aerial is accurately designed to match the tuned antenna circuit in the receiver so that maximum performance will be obtained.

A good ground connection to the nearest water pipe or any other good ground source is also required.

Spring (On-Off Indicator).....	28-8927
Snap Fastener (On-Off Indicator).....	28-4342
Speaker (T Cabinet).....	36-1442
(F Cabinet).....	36-1447
Socket (6 prong).....	27-6086
Socket (7 prong).....	27-6099
Socket (Speaker).....	27-6115
Wire Link (On-Off Indicator).....	28-8922
Tab (Manual).....	27-5487
Tab Kit.....	40-6408
Shaft Extension (Tuning, Volume).....	38-8640
Spring (Shaft Retaining).....	28-8915
Bezel (Push button).....	56-1364
Bezel Assembly (Dial).....	40-6364
Bezel Gasket (Dial).....	27-9174
Bezel Gasket (Push Button).....	27-9218
Cable Battery.....	41-3429
Dial.....	27-5420
Drive Drum Assembly.....	31-2281
Drive Pulley.....	28-6662
Drive Cord (Pointer).....	31-2275
Drive Cord (Cord Drive).....	31-2343
Knob (Push Button).....	27-4814
Knob (Tuning, Volume).....	27-4753
Pointer.....	28-5934
Shaft (Tuning).....	56-6032
Spring (Drive Cord Tuning Condenser).....	28-8751
Spring (Drive Cord Pointer).....	28-8946

MODEL 39-711(121)
MODEL 39-751(121)

PHILCO RADIO & TELEV. CORP. Parts

Chassis, Trimmers

**Replacement Parts
Model 39-711**

Schem. No.	Description	Part No.
1	Tubular Cond. (.001 mfd. 1000 V)	30-4601
2	Tubular Cond. (.01 mfd. 400 V.)	30-4572
3	Tubular Cond. (.25 mfd. 400 V.)	30-4589
4	Ant. Trans. (B.C. & Police)	32-3141
5	Ant. Trans. (S.W.)	32-3142
6	Compensator (2 section)	31-6287
7	Tubular Cond. (.1 mfd. 200 V.)	30-4586
8	Tubular Cond. (.25 mfd. 400 V.)	30-4589
9	Resistor (51,000 ohms, 1 watt)	33-351439
10	Resistor (120,000 ohms, 1 watt)	33-112439
11	Tuning Cond.	31-2357
12	Osc. Trans. (B.C. & Police)	32-3142
13	Osc. Trans. (S.W.)	32-3144
14	Compensator (2 section)	31-6287
15	Compensator	31-6289
16	Mica Cond. (1650 mmfd.)	30-4587
17	Mica Cond. (3500 mmfd.)	30-4594
18	Resistor (3300 ohms, 1 watt)	33-234399
19	Mica Cond. (250 mmfd.)	30-1119
20	Resistor (5000 ohms, 1 watt)	33-250439
21	1st I.F. Trans. Assy.	32-3139
22	2nd I.F. Trans. Assy.	32-3140
23	Tubular Cond. (.1 mfd. 200 V.)	30-4586
24	Tubular Cond. (.01 mfd. 600 V.)	30-4581
25	Resistor (20,000 ohms, 1 watt)	33-320439
26	Resistor (2.0 meg., 1 watt)	33-520439
27	Tubular Cond. (.05 mfd. 200 V.)	30-4519
28	Volume Control (5 meg.)	33-5305
29	Tubular Cond. (.001 mfd. 200 V.)	30-4582
30	Resistor (10.0 meg., 1 watt)	33-110439
31	Resistor (30,000 ohms, 1 watt)	33-390439
32	Resistor (330,000 ohms, 1 watt)	33-433439
33	Mica Cond. (250 mmfd.)	30-1119
34	Tubular Cond. (.02 mfd. 200 V.)	30-4584
35	Resistor (330,000 ohms, 1 watt)	33-433439
36	Resistor (150 ohms, 1 watt)	33-115439

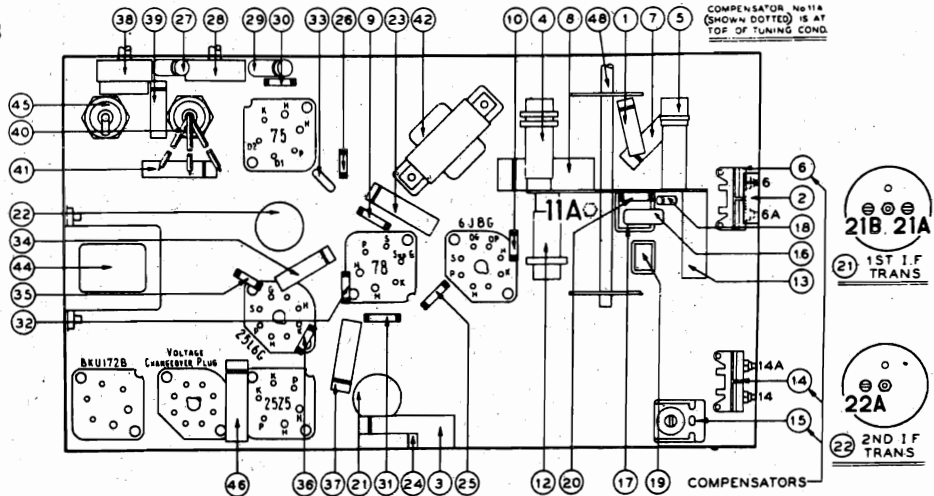


Fig. 3—Part Locations, Model 39-711, Underside of Chassis

**Replacement Parts
Model 39-751**

Schem. No.	Description	Part No.
1	Tubular Cond. (.25 mfd.)	30-4589
2	Tubular Cond. (.01 mfd.)	30-4572
3	Ant. Trans. (B.C.)	32-2588
4	Ant. Trans. (S.W. 1)	32-3093
5	Ant. Trans. (S.W. 2)	32-2885
6	Compensator	31-6288
7	Tubular Cond. (.01 mfd.)	30-4572
8	Tubular Cond. (.15 mfd.)	30-4600
9	Tubular Cond. (.05 mfd.)	30-4519
10	Tubular Cond. (.05 mfd.)	30-4519
11	Resistor (100 ohms, 1 watt)	33-110439
12	Tubular Cond. (.1 mfd.)	30-4586
13	Tubular Cond. (.1 mfd.)	30-4586
14	Resistor (1.5 megohm)	33-515439
15	R.F. Trans. (Brdst.)	32-2379
16	R.F. Trans. (S.W. 1)	32-3099
17	R.F. Trans. (S.W. 2)	32-3165
18	Mica Cond. (5 mmfd.)	30-1120
19	Compensator	31-6288
20	Tubular Cond. (.05 mfd.)	30-4519
21	Tubular Cond. (.05 mfd.)	30-4519
22	Resistor (51,000 ohms, 1 watt)	33-351439
23	Resistor (100 ohms, 1 watt)	33-110439
24	Resistor (30,000 ohms, 1 watt)	33-390439
25	Mica Cond. (250 mmfd.)	30-1119
26	Tuning Cond.	31-2325
27	Osc. Trans. (Brdst.)	32-2120
28	Osc. Trans. (S.W. 1)	32-3094
29	Osc. Trans. (S.W. 2)	32-3102
30	2 Section Compensator	31-6287
31	Compensator	31-6289
32	Semi-Fixed Condenser (1605 mmfd.)	31-6282
33	Compensator	31-6288
34	Semi-Fixed Condenser (3300 mmfd.)	31-6283
35	Mica Cond. (250 mmfd.)	30-1119
36	Resistor (5,000 ohms, 1 watt)	33-250439
37	Resistor (2,000 ohms, 1 watt)	33-220439
38	Tubular Cond. (.05 mfd.)	30-4519
39	Resistor (600 ohms, 1 watt)	33-160439
40	Tubular Cond. (.05 mfd.)	30-4519
41	Tubular Cond. (.001 mfd.)	30-4592
42	Resistor (20,000 ohms, 1 watt)	33-320439
43	1st I.F. Trans. Assy.	32-3116
44	2nd I.F. Trans. Assy.	32-3133
45	Resistor (10,000 ohms, 1 watt)	33-310439
46	Mica Cond. (250 mmfd.)	30-1119
47	Tubular Cond. (.1 mfd.)	30-4586
48	Resistor (120,000 ohms, 1 watt)	33-412439
49	Resistor (99,000 ohms, 1 watt)	33-399439
50	Resistor (240,000 ohms, 1 watt)	33-424439
51	Resistor (120,000 ohms, 1 watt)	33-412439
52	Resistor (1.0 meg., 1 watt)	33-510439
53	Resistor (10.0 meg., 1 watt)	33-610439
54	Tubular Cond. (.006 mfd.)	30-4583
55	Tubular Cond. (.01 mfd.)	30-4581
56	Tone Control (4.0 meg.)	33-5299
57	Tubular Cond. (.02 mfd.)	30-4584
58	Mica Cond. (110 mmfd.)	30-1118
59	Volume Control	33-5304
60	Resistor (70,000 ohms, 1 watt)	33-370439
61	Tubular Cond. (.006 mfd.)	30-4583
62	Tubular Cond. (.25 mfd.)	30-4589
63	Resistor (32,000 ohms, 1 watt)	33-332439
64	Resistor (32,000 ohms, 1 watt)	33-332439
65	Resistor (25,000 ohms, 1 watt)	33-325439
66	Resistor (5,000 ohms, 1 watt)	33-250439
67	Tubular Cond. (.02 mfd.)	30-4584
68	Resistor (490,000 ohms, 1 watt)	33-490439
69	Tubular Cond. (.01 mfd.)	30-4581

Schem. No.	Description	Part No.
37	Tubular Cond. (.1 mfd., 200 V.)	30-4586
38	Tone Control Switch	42-1481
39	Tubular Cond. (.05 mfd., 400 V.)	40-4518
40	Electrolytic Cond. (6 mfd., 25 V.)	30-2380
41	Tubular Cond. (.015 mfd., 400 V.)	30-4515
42	Output Trans.	32-8033
43	Cone & Voice Coil Assy.	36-4170
44	Filter Choke	32-8029
45	Electrolytic Cond. (20 mfd., 150 V.)	30-2245
46	Tubular Cond. (.05 mfd., 600 V.)	30-4602
47	Pilot Lamp	34-2068
48	Wave Switch	42-1480

Miscellaneous Parts

Description	Part No.
Cord (Wave Band Indicator)	27-9294
Cord (Pointer Operation)	31-2359
Dial	27-5499
Knobs (4 used)	56-1269
Pointer (Dial)	27-4332
Socket (Pilot Lamp)	56-1276
Socket (6 prong, type 25Z5 & Ballast tube)	38-9127
Socket (6 prong, type 78 & 75 tubes)	27-6036
Socket (8 prong, type 78 & 75 tubes)	27-6120
Socket (8 prong, type 6J86 & 25L6G tubes)	27-6127
Socket (8 prong, voltage changer plug)	27-6127
Spring (Tuning Indicator Cord)	28-8913
Spring (Wave Band Indicator Mounting)	28-8943
Spring (Wave Band Indicator Cord)	28-8945

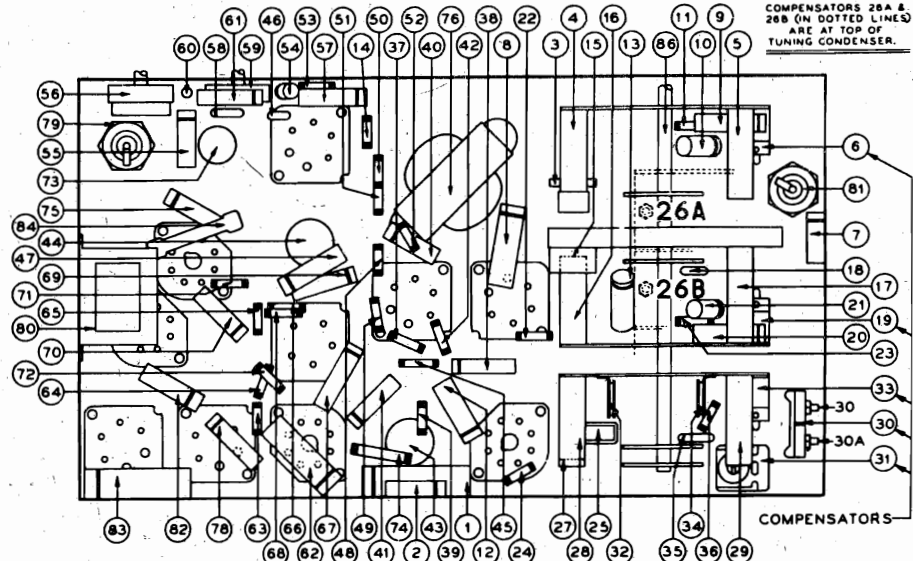


Fig. 4—Part Locations, Model 39-751, Underside of Chassis


Schem. No.	Description	Part No.
70	Tubular Cond. (.02 mfd.)	30-4584
71	Resistor (240,000 ohms, 1 watt)	33-424439
72	Resistor (240,000 ohms, 1 watt)	33-424439
73	Electrolytic Cond. (16 mfd., 300 V., 10 mfd., 25 V.)	30-2372
74	Resistor (150 ohms, 1 watt)	33-115439
75	Tubular Cond. (.01 mfd.)	30-4581
76	Output Trans.	32-8028
77	Cone & Voice Coil Assy. (For Speaker 36-1456-3)	36-4108
78	Cone & Voice Coil Assy. (For Speaker 36-1455-3)	36-4107
79	Tubular Cond. (.01 mfd.)	30-4581
80	Filter Choke	32-8029
81	Electrolytic Cond. (40 mfd., 300 V.)	30-2373
82	Tubular Cond. (.02 mfd.)	30-4599
83	Tubular Cond. (.5 mfd.)	30-4590
84	Resistor (10,000 ohms, 3 watt)	33-3366
85	Pilot Lamps	34-2068
86	Wave Switch	42-1454

Miscellaneous Parts

Description	Part No.
Bezel (39-751T)	56-1246
Bezel (39-751XX)	56-1222
Cord (Wave Band Indicator)	27-9294
Cord (Pointer Operation)	31-2359
Cord (Tone Control Indicator)	31-2351
Dial	27-5499
Knob (Tuning)	27-4330
Knob (Vernier)	27-4331
Knob (Tone Control & Vol. Cont.)	27-4332
Pointer (Dial)	56-1276
Screws (Bezel)	W-1834 (FAD)
Socket (Pilot Lamp)	38-9118
Socket (5 prong, type 76 tube)	27-6124
Socket (6 prong, type 78 & 75 tubes)	27-6123
Socket (6 prong, type 25Z5 & Ballast Tubes)	27-6036
Socket (8 prong, type 78 & 75 tubes)	27-6120
Socket (8 prong, type 6J86 & 25L6G tubes)	27-6127
Spring (Tuning Indicator Cord)	28-8913
Spring (Indicator Operation)	28-8931
Spring (Indicator Mounting)	28-8943
Vernier Drive	31-2329
Speaker	36-1456-31
Speaker	36-1455-3

PHILCO RADIO & TELEV. CORP.

MODEL 39-711(121) Schematic, Voltage Changes

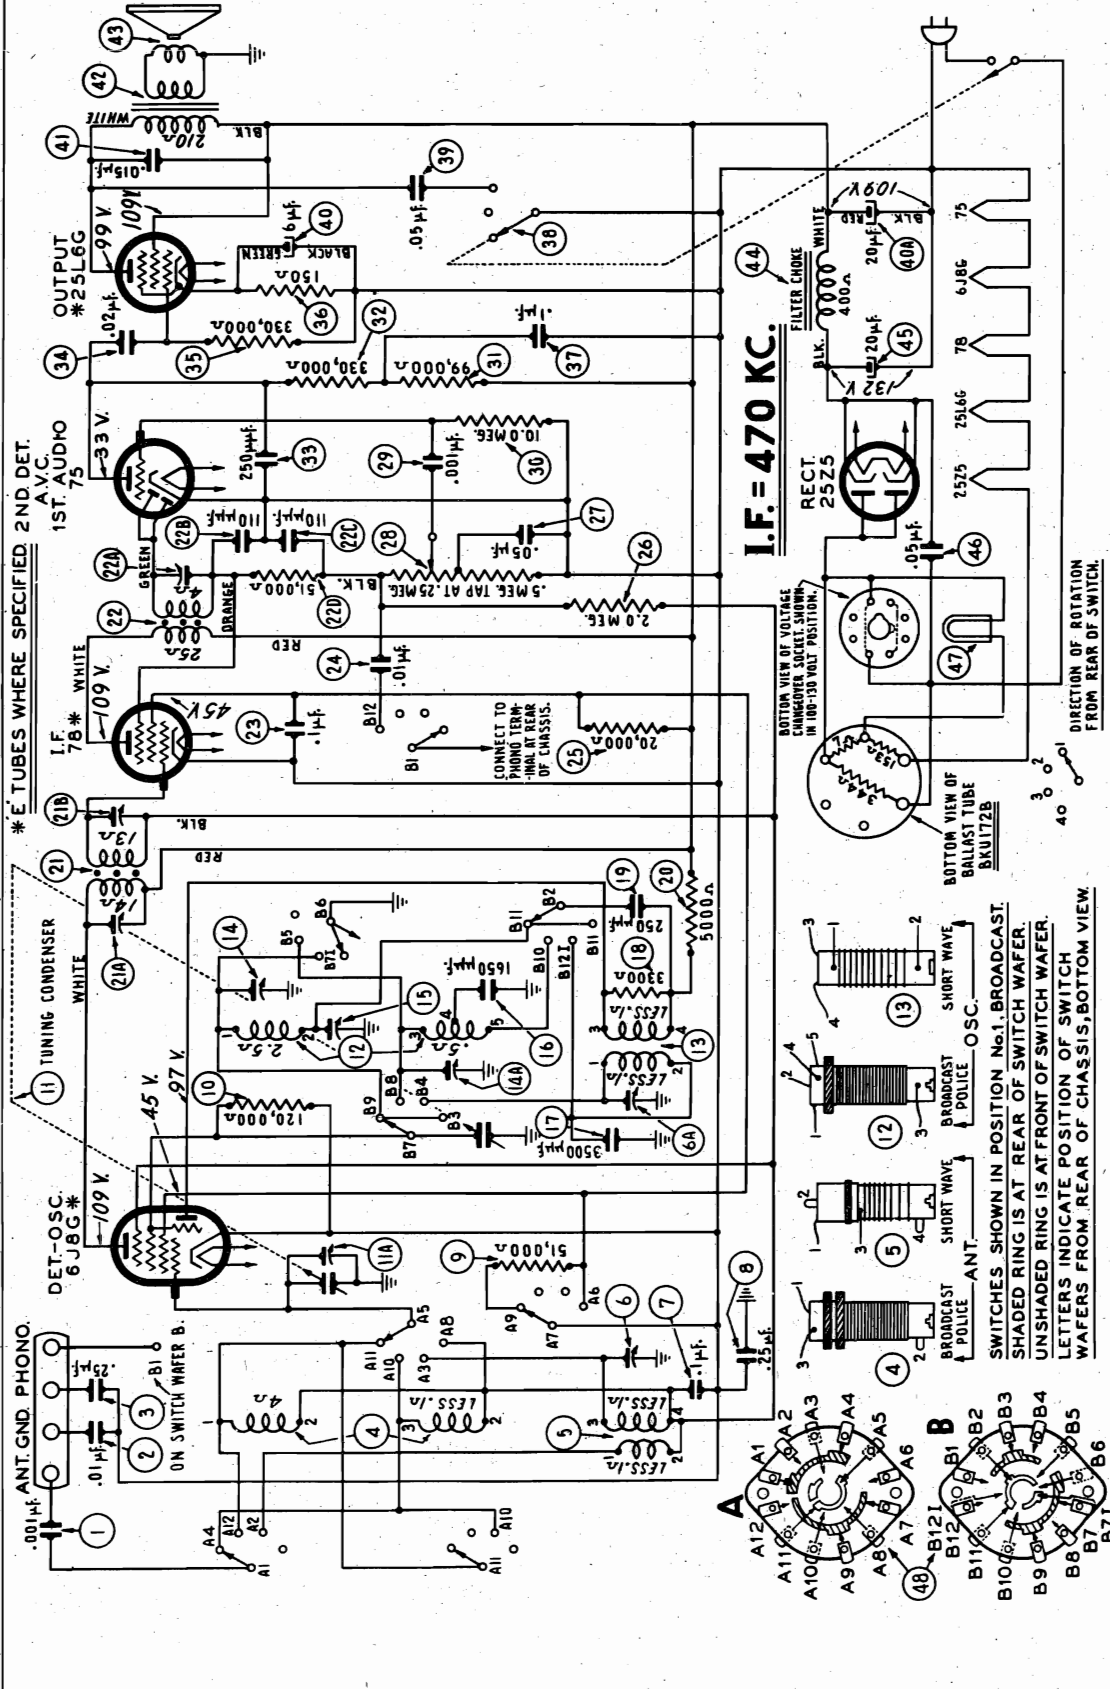

E TUBES WHERE SPECIFIED 2ND DET. A.V.C. 1ST. AUDIO 75

DET.-OSC. 6J8G*

ANT. GND. PHONO.

ON SWITCH WAFER B.

TUNING CONDENSER WHITE

I.F. 78# WHITE

OUTPUT #25L6G

I.F. = 470 KC.

RECT. 25Z5

REAR VIEW OF BALLAST TUBE SK1172B

REAR VIEW OF VOLTAGE CHANGER SOCKET SHOWN IN 100-150 VOLT POSITION.

SWITCHES SHOWN IN POSITION No.1. BROADCAST. SHADED RING IS AT REAR OF SWITCH WAFER. UNSHADED RING IS AT FRONT OF SWITCH WAFER.

LETTERS INDICATE POSITION OF SWITCH WAFERS FROM REAR OF CHASSIS; BOTTOM VIEW.

TYPE CIRCUIT: Model 39-711, code 121, is a six (6) tube A.C. or D.C. operated receiver employing a superheterodyne circuit with three tuning ranges for reception of Standard, Police and Shortwave Broadcast Stations. Connections are also provided for attaching a high impedance Electric Phonograph pick-up. In addition other features of design are: Automatic Volume Control; Tone Control; and Compensation; and special compensation for reducing frequency drift to a minimum.

POWER SUPPLY: 100-150 or 200-250 volts A.C. or D.C. The voltage ranges selected by inserting the changer plug as indicated on top of the chassis.

POWER CONSUMPTION: 85 watts at 240 V.
48 watts at 120 V.

TUNING RANGES: 550 to 1720 K.C.;
2.3 to 7.4 M.C.; 7.3 to 22 M.C.


CABINET DIMENSIONS: T 15% Height 16% Width 9% Depth 9%

PRODUCTION CHANGES
Condenser Part No. 39-1119, 250 mard, added from suppressor grid of the 6A8EG tube to ground to prevent regeneration at 15 to 22 M.C.

AERIAL AND GROUND: To obtain maximum performance from this receiver, the Philco Safety Grounding System should be used and a good ground connection to the nearest water pipe or any other good source.

MODEL 39-751(121)
Runs 1,2
Schematic, Voltage
Changes



PHILCO RADIO & TELEV. CORP.

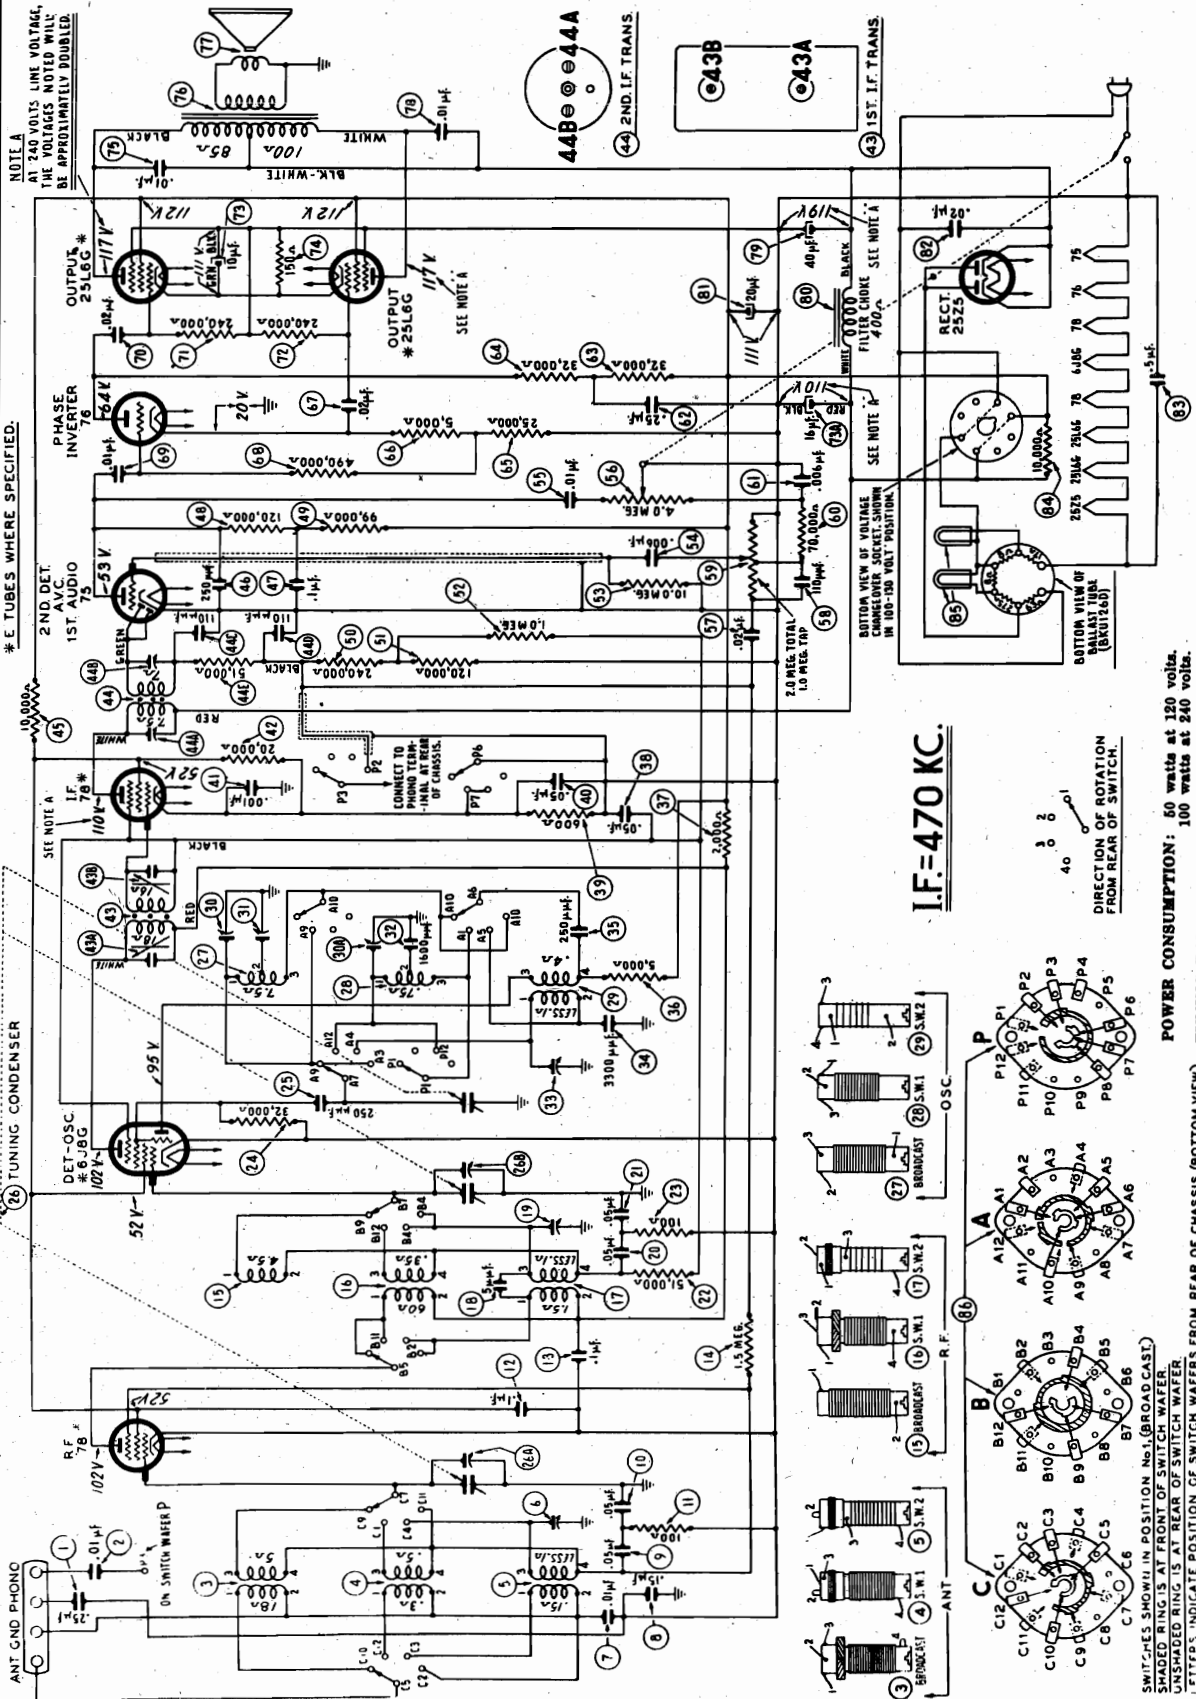


NOTE A
AT 240 VOLTS LINE VOLTAGE,
THE VOLTAGES NOTED WILL
BE APPROXIMATELY DOUBLED.

* E TUBES WHERE SPECIFIED.

#6 TUNING CONDENSER



I.F.=470 KC.

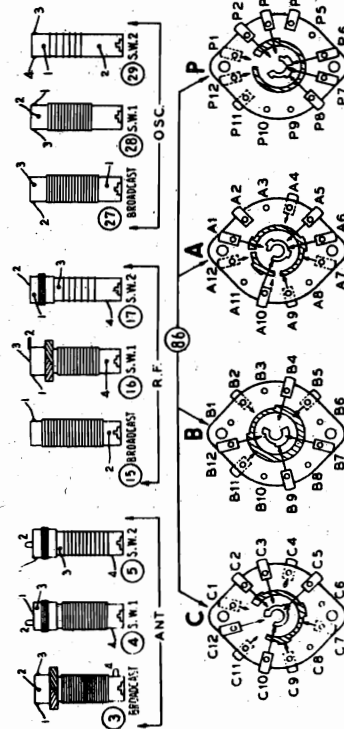

SWITCHES SHOWN IN POSITION NO.1 (BROAD CAST).
SHADE RING IS AT FRONT OF SWITCH WAFER.
UNSHADE RING IS AT REAR OF SWITCH WAFER.
LETTERS INDICATE POSITION OF SWITCH WAFERS FROM REAR OF CHASSIS (BOTTOM VIEW)

POWER CONSUMPTION: 50 watts at 120 volts.
100 watts at 240 volts.

TUNING RANGES: 530 to 1720 K.C.; 2.3 to 7.4 M.C.; 7.3 to 22 M.C.

TYPE CIRCUIT: Model 39-751, code 121, is an eight (8) tube A.C. or D.C. operated receiver employing a superheterodyne circuit with three tuning ranges for reception of Standard, Police and Shortwave Broadcast Stations. Connections are also provided for attaching a high impedance Electric Phonograph pick-up. Other features of design are: Automatic Volume Control; Continuously Variable Tone Control; Bus

POWER SUPPLY: 100-130 or 200-260 volt, A.C. or D.C. current. The voltage ranges are selected by inserting the changeover plug as indicated on top of the chassis.

COMPENSATION: Push-Pull Pentode Audio Output; and special compensation for reducing frequency drift to a minimum.

AERIAL AND GROUND: Same as Model 39-711.

HEIGHT: 14 1/4"

WIDTH: 20 9/16"

DEPTH: 11"

To prevent instability at 530 K.C. a 70000 ohm resistor, part No. 33-370339 was connected in parallel with the primary R.F. transformer (16).

PHILCO RADIO & TELEV. CORP.

MODEL 39-711(121)
 MODEL 39-751(121)
 Alignment

Alignment of Compensators

EQUIPMENT REQUIRED:

- (1) Signal Generator; Philco Model 077.
- (2) Output Meter, Philco Model 027 Circuit Tester.
- (3) Philco Fiber Handle Screw Driver, Part No. 27-7059 and Fiber Wrench, Part No. 3164.

of the various tuned circuits is desired, the vacuum tube voltmeter is recommended as an aligning device.

OUTPUT METER:

Two indicating devices for aligning of the receiver can be used; either an audio output meter or a vacuum tube voltmeter. The method of connecting the audio output meter is given in the next paragraph. The procedure for connecting the vacuum tube voltmeter as an aligning indicator will be found on page 5. Where greater accuracy

The Philco 027 Output Meter is connected to the plate and cathode terminals of the type 25L6G tube (use one tube in Model 39-751) and adjusted for the 0 to 30 V.A.C. scale. After connecting the output meter, adjust the compensators in the order as shown in the tabulation below. Locations of the compensators are shown in Fig. 3, Model 39-711, and Fig. 4, Model 39-751. If the output meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.

MODEL 39-711

Operations in Order	SIGNAL GENERATOR			RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Settings	Adjust Compensators	
1	6J8EG	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Tone treble Range Sw. Brdcast.	22A, 21B, 21A	
2	Ant. & Grnd.	200 mmfd.	1500 K.C.	1500 K.C.	Vol. Max. Tone treble Range Sw. Brdcast.	14, 11A	Note B
3	Ant. & Grnd.	200 mmfd.	580 K.C.	580 K.C.	Vol. Max. Tone treble Range Sw. Brdcast.	15	Roll gang Repeat Oper. 2
4	Ant. & Grnd.	400 ohms	7.0 M.C.	7.0 M.C.	Range Sw. Police	14A	Roll Gang
5	Ant. & Grnd.	400 ohms	20 M.C.	20 M.C.	Range Sw. S. W.	6A, 6	Note C

MODEL 39-751

Operations in Order	SIGNAL GENERATOR			RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Settings	Adjust Compensators	
1	6J8G Grid and Ground	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Tone-Treble	44B, 44A, 43B, 43A	
2	Ant. and Grd.	200 mmfd.	1500 K.C.	1500 K.C.	Vol. Max. Range Sw. Brdcast.	30, 26B, 26A	Note B
3	Ant. and Grd.	200 mmfd.	580 K.C.	580 K.C.	Vol. Max.	31	Roll gang Repeat Operation 2
4	Ant. and Grd.	400 ohms	6.0 M.C.	6.0 M.C.	Vol. Max. Tone-Treble Range Sw. Police	30A	Roll gang
5	Ant. and Grd.	400 ohms	20 M.C.	20 M.C.	Vol. Max. Tone-Treble Range Sw. S. W.	33, 19, 6	Note C

NOTE A—The "Dummy Antenna" consists of a condenser or resistance connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.

NOTE B—Dial Calibration: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum capacity), set the dial pointer on the first mark on the left edge (low frequency end) of the broadcast scale.

NOTE C—When adjusting compensator (33) model 39-751 and (6A)—model 39-711 be sure to tune in the fundamental signal (20 M.C.) instead of the image signal. If the compensator is correctly adjusted, the image signal will be found by turning dial 940 K.C. below the fundamental signal, which will be 19.060 M.C.

The Philco-Tropic radio is particularly recommended for locations where super reception of short wave is necessary and where the radio and the cabinet are exposed to extreme conditions. The receiver is especially constructed to withstand decay, spoilage and deterioration caused by extreme conditions of humidity, heat, salt air and cold; and to stand up under the most severe tropic weather conditions.

The chassis is heavily plated, making it impervious to salt air, rust and corrosion.


The various parts, such as coils, condensers, chokes and transformers, are treated with special wax that will withstand very high temperatures. In addition the wax is treated with chemicals which repel rodents and insects.

The cabinet is treated with a special sealing compound which protects it against moisture and heat.


MODEL 40-81(121,122)

Schematic, Voltage Chassis

PHILCO RADIO & TELEV. CORP.

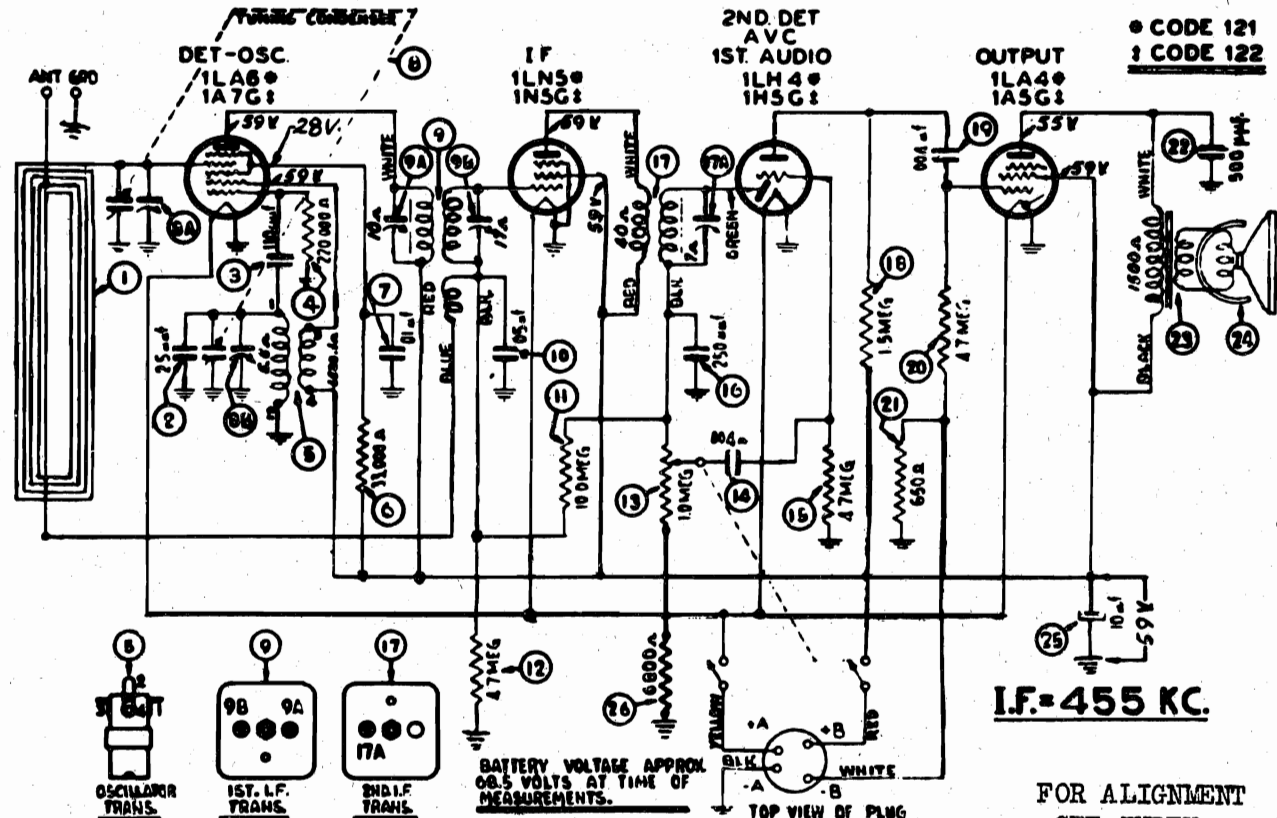

SCHEMATIC DIAGRAM MODEL 40-81 CODES 121 & 122

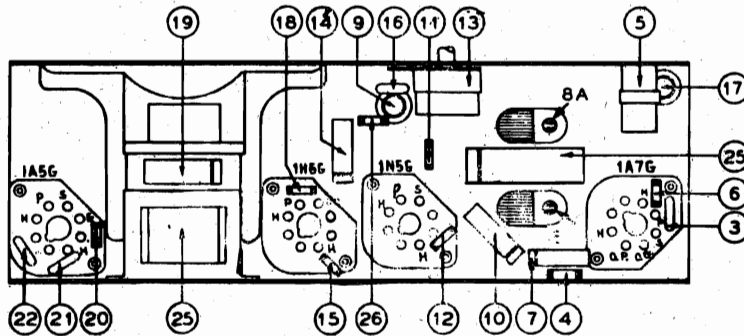


AUGUST, 1939.

Replacement Parts — Models 40-81, Codes 121, 122

SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.
1	Loop Assembly (Part of Cabinet)	10413A	23	Output Transformer	32-8062
2	Mica Condenser (15 mmfd.)	61-0038	24	Cone and Voice Coil Assembly (Speaker Part No. 36-1481-3)	36-4121
3	Mica Condenser (110 mmfd.)	30-1031	25	Electrolytic Condenser (10 mfd., 150 V.)	30-2396
4	Resistor (220,000 ohms, 1/2 watt)	33-422339	26	Resistor (6800 ohms, 1/2 watt)	33-268339
5	Oscillator Transformer	32-3277	MISCELLANEOUS PARTS		
6	Resistor (33,000 ohms, 1/2 watt)	33-332339		Acetate Window	27-5541
7	Tubular Condenser (.01 mfd.)	30-4572		Cabinet	10431A
8	Tuning Condenser Assembly	31-2432		Clip (Coil Mounting)	28-5002
9	1st I. F. Transformer Assembly	32-3266		Drive Cord Assembly	31-2411
10	Tubular Condenser (.05 mfd.)	30-4519		Dial	27-5961
11	Resistor (10.0 meg., 1/2 watt)	33-610339		Grille Screen	56-1539
12	Resistor (4.7 meg., 1/2 watt)	33-547339		Knobs (Volume and Tuning)	27-4876
13	Volume Control and On-Off Switch	33-5331		Pointer	27-4891
14	Tubular Condenser (.004 mfd.)	30-4578		Speaker	36-1481
15	Resistor (4.7 meg., 1/2 watt)	33-547339		Shield (Tube, Code 122)	56-1566
16	Mica Condenser (250 mmfd.)	61-0033		Sockets (Loktal, Code 121)	55-0875
17	2nd I. F. Transformer Assembly	32-3266		Sockets (Octal, Code 122)	27-6133
18	Resistor (1.5 meg., 1/2 watt)	33-515339		Spring (Drive Cord)	28-8751
19	Tubular Condenser (.004 mfd.)	30-4578		Tuning Shaft Assembly	38-9878
20	Resistor (4.7 meg., 1/2 watt)	33-547339			
21	Resistor (650 ohms, 1/2 watt)	33-165326			
22	Mica Condenser (500 mmfd.)	30-1114			

PHILCO RADIO & TELEV. CORP.

MODEL 39-744(121)
Runs 1,2,3
Schematic
Voltage, Changes

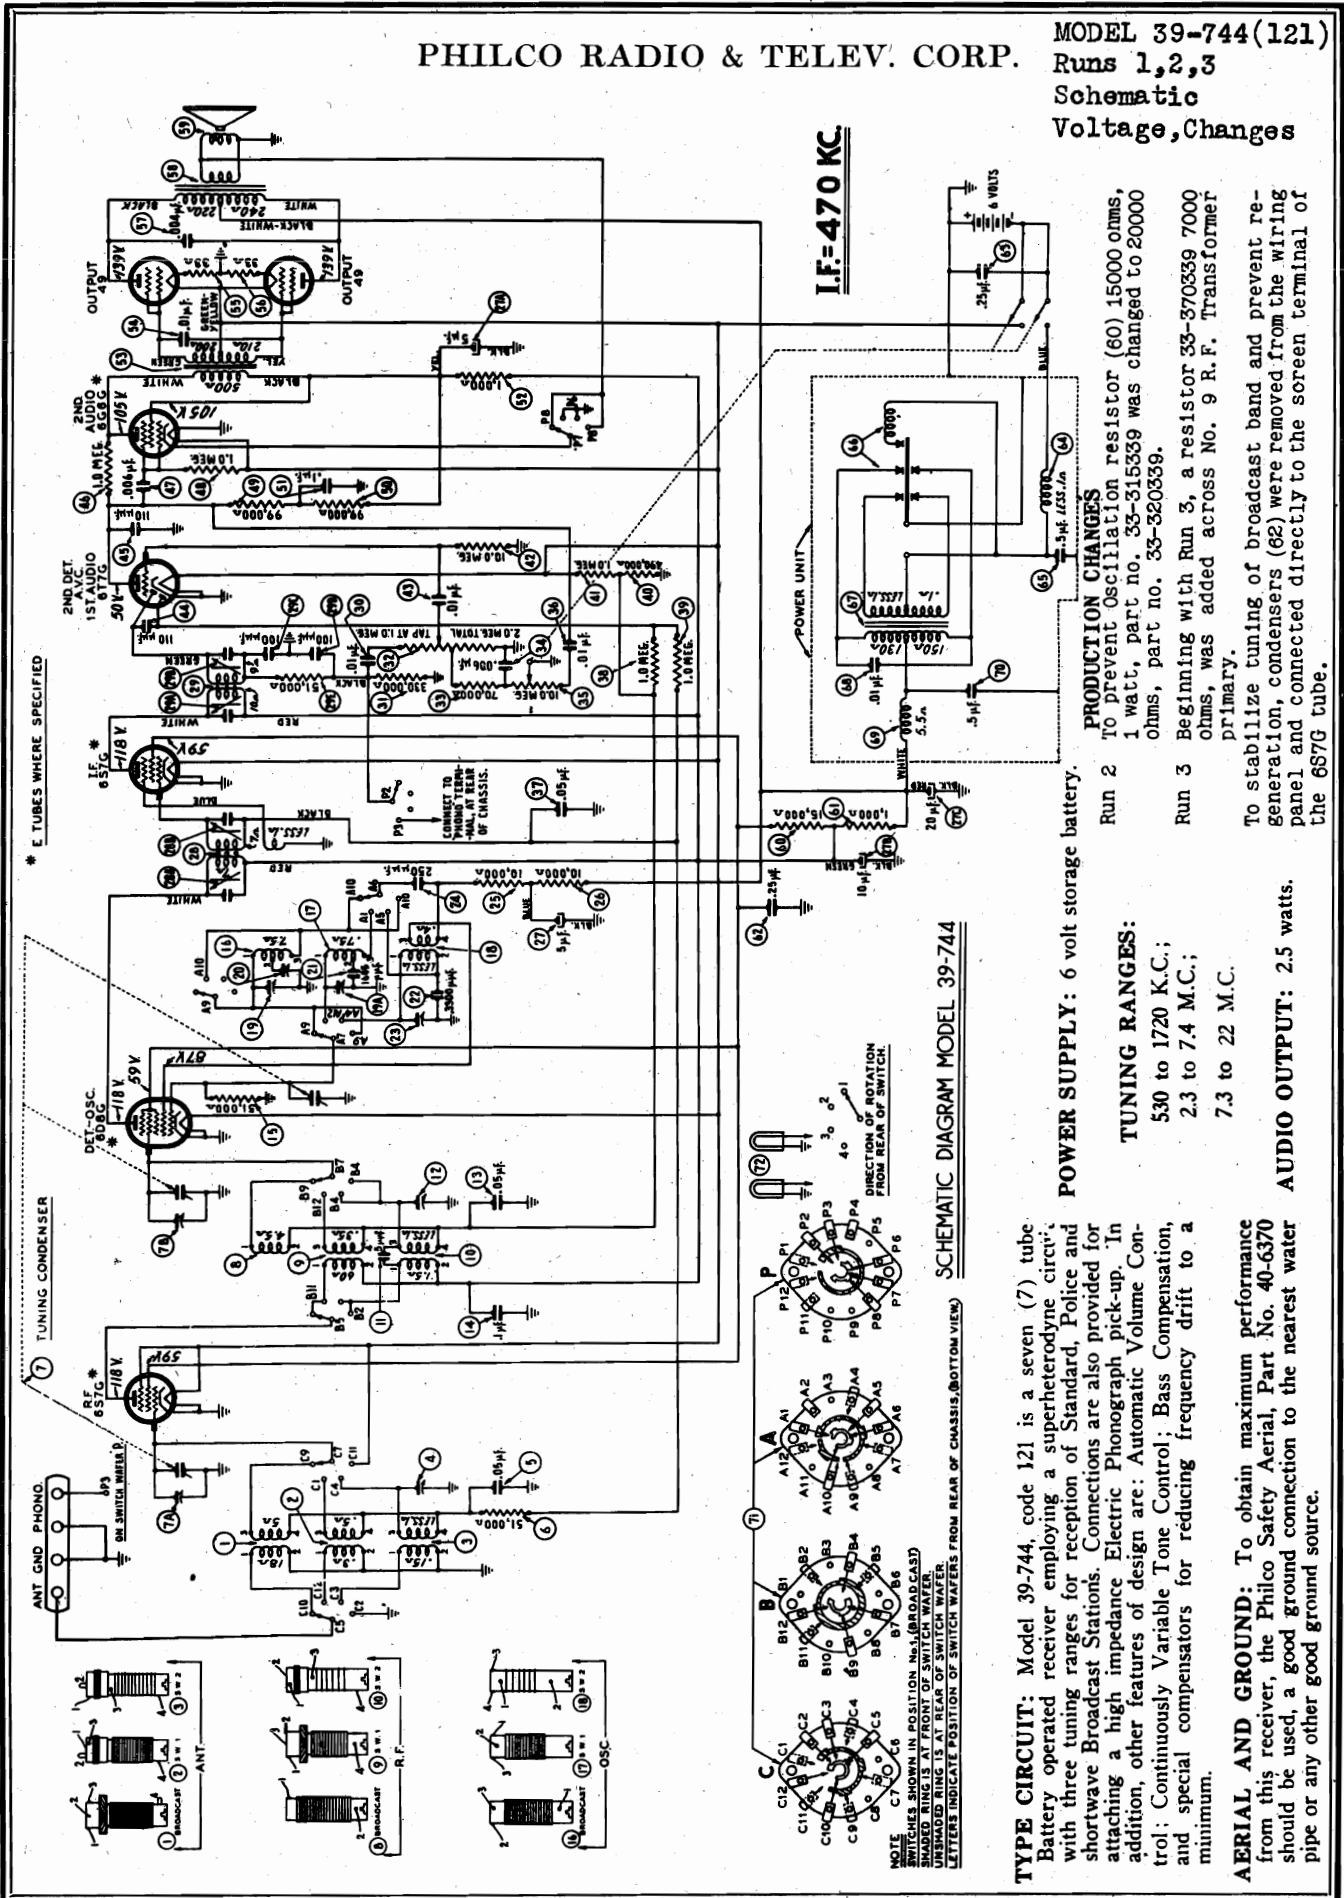

©John F. Rider, Publisher

SCHEMATIC DIAGRAM MODEL 39-744

TYPE CIRCUIT: Model 39-744, code 121 is a seven (7) tube Battery operated receiver employing a superheterodyne circuit with three tuning ranges for reception of Standard, Police and shortwave Broadcast Stations. Connections are also provided for attaching a high impedance Electric Phonograph pick-up. In addition, other features of design are: Automatic Volume Control; Continuously Variable Tone Control; Bass Compensation, and special compensators for reducing frequency drift to a minimum.

AERIAL AND GROUND: To obtain maximum performance from this receiver, the Philco Safety Aerial, Part No. 40-6370 should be used, a good ground connection to the nearest water pipe or any other good ground source.

POWER SUPPLY: 6 volt storage battery.

TUNING RANGES:

- 530 to 1720 K.C.;
- 2.3 to 7.4 M.C.;
- 7.3 to 22 M.C.

PRODUCTION CHANGES

- Run 2 To prevent oscillation resistor (60) 15000 ohms, 1 watt, part no. 33-315339 was changed to 20000 ohms, part no. 33-320339.
- Run 3 Beginning with Run 3, a resistor 33-370339 7000 ohms, was added across No. 9 R.F. Transformer primary.

To stabilize tuning of broadcast band and prevent regeneration, condensers (62) were removed from the wiring panel and connected directly to the screen terminal of the 657G tube.

I.F. = 470 KC

NOTE: SWITCHES SHOWN IN POSITION NEAR BROADCAST. SHADED RING IS AT FRONT OF SWITCH WAFER. UNSHADED RING IS AT REAR OF SWITCH WAFER. LETTERS INDICATE POSITION OF SWITCH WAFERS FROM REAR OF CHASSIS (BOTTOM VIEW).

MODEL 39-744(121)

Runs 1,2,3

Alignment, Chassis
Trimmers, Parts

Replacement Parts
Model 39-744

Schem. No.	Description	Part No.
1	Ant. Trans. (Brdst.)	32-2588
2	Ant. Trans. (S.W. 1)	32-3093
3	Ant. Trans. (S.W. 2)	32-2885
4	Compensator	31-6288
5	Tubular Cond. (.05 mfd.)	30-4519
6	Resistor (51,000 ohms, 1 watt)	33-351439
7	Tuning Cond.	31-2325
8	R.F. Trans. (Brdst.)	32-2379
9	R.F. Trans. (S.W. 1)	32-3099
10	R.F. Trans. (S.W. 2)	32-3165
11	Mica Cond. (5 mmfd.)	30-1120
12	Compensator	31-6288
13	Tubular Cond. (.05 mfd.)	30-4519
14	Tubular Cond. (.1 mfd.)	30-4586
15	Resistor (51,000 ohms, 1 watt)	33-351439
16	Osc. Trans. (Brdst.)	32-2120
17	Osc. Trans. (S.W. 1)	32-3094
18	Osc. Trans. (S.W. 2)	32-3102
19	2 Section Compensator	31-6287
20	Compensator	31-6289
21	Semi-fixed Cond. (1605 mmfd.)	31-6282
22	Semi-fixed Cond. (3300 mmfd.)	31-6283
23	Compensator	31-6288
24	Mica Cond. (250 mmfd.)	30-1119
25	Resistor (10,000 ohms, 1 watt)	33-310439
26	Resistor (10,000 ohms, 1 watt)	33-310439
27	Electrolytic Cond. (5 mfd., 150 V.)	30-2374
27A	Electrolytic Cond. (5 mfd., 150 V.)	
27B	Elect. Cond. (10 mfd., 150 V.)	
27C	Elect. Cond. (20 mfd., 150 V.)	
28	1st I.F. Trans. Assy.	32-3127
29	2nd I.F. Trans. Assy.	32-3117
30	Tubular Cond. (.01 mfd.)	30-4581
31	Resistor (330,000 ohms, 1 watt)	33-433439
32	Volume Control (2.0 meg.)	33-5298
33	Resistor (70,000 ohms, 1 watt)	33-370439
34	Tubular Cond. (.006 mfd.)	30-4583
35	Tone Control (10.0 meg.)	33-5303
36	Tubular Cond. (.01 mfd.)	30-4581
37	Tubular Cond. (.05 mfd.)	30-4519
38	Resistor (1.0 megohm, 1 watt)	33-510439
39	Resistor (1.0 megohm, 1 watt)	33-510439
40	Resistor (490,000 ohms, 1 watt)	33-449439
41	Resistor (1.0 megohm, 1 watt)	33-510439
42	Resistor (10.0 megohm, 1 watt)	33-610439
43	Tubular Cond. (.01 mfd.)	30-4581
44	Mica Cond. (110 mmfd.)	30-1118
45	Mica Cond. (110 mmfd.)	30-1118
46	Resistor (1.0 megohm, 1 watt)	33-510439
47	Tubular Cond. (.006 mfd.)	30-4583
48	Resistor (1.0 megohm, 1 watt)	33-510439
49	Resistor (99,000 ohms, 1 watt)	33-399439
50	Resistor (99,000 ohms, 1 watt)	33-399439
51	Tubular Cond. (.1 mfd.)	30-4586
52	Resistor (1,000 ohms, 1 watt)	33-210439
53	Driver Trans.	33-8027
54	Tubular Cond. (.01 mfd.)	30-4581
55	Resistor (33 ohms, 1 watt, wire-wound)	33-033421
56	Resistor (33 ohms, 1 watt, wire-wound)	33-033421
57	Tubular Cond. (.004 mfd.)	30-4578
58	Output Trans.	32-8026
59	Cone & Voice Coil Assy. (Spkr. 36-1455-3)	36-4107
	Cone & Voice Coil Assy. (Spkr. 36-1456-3)	36-4108
60	Resistor (15,000 ohms, 1 watt)	33-315439
61	Resistor (1,000 ohms, 1 watt)	33-210439
62	Tubular Cond. (.25 mfd.)	30-4588
63	Tubular Cond. (.25 mfd.)	30-4588
64	"A" Choke	32-1954
65	Tubular Cond. (.5 mfd., metal case)	30-4296
66	Vibrator	41-3222
67	Power Trans.	32-7682
68	Tubular Cond. (.01 mfd.)	30-4598
69	"B" Choke	32-2925
70	Tubular Cond. (.5 mfd., metal case)	30-4296
71	Wave Switch	42-1474
72	Pilot Lamp Bulbs	34-2968
	Bezel (T Cabinet)	56-1246
	Bezel (XX Cabinet)	56-1222
	Cable (Battery)	41-3472
	Cord (Wave Switch)	27-9294
	Cord (Tuning Drive)	31-2330
	Cord (Tone Control)	31-2331
	Dial	27-5438
	Drum (Tone Control)	28-6996
	Drum (Wave Switch)	28-7315
	Drum and Coupling (Tuning Drive)	31-2327
	Gasket (Dial Mtg.)	27-9256
	Indicator (Tone & Range)	56-1269
	Knob (Tuning)	27-4330
	Knob (Vernier)	27-4331
	Knob (Tone, Volume)	27-4332
	Pointer	56-1276
	Speaker (T Cabinet)	36-1455-3
	Speaker (XX Cabinet)	36-1456-3
	Spring (Tuning Cord)	38-8913
	Spring (Tone and Range Indicators)	28-8945
	Spring (Indicator Mtg.)	28-8943
	Socket (5 prong)	27-8035
	Socket (6 prong) Vibrator Unit)	27-8036
	Socket (8 prong)	27-8036
	Socket (9 prong)	27-6120
	Socket Assy. (Pilot Lamp)	38-9796
	Shield (Square)	28-2726
	Shield Cap (Square Shield)	28-2727
	Shield—Round (two required)	56-1072
	Shield Cap (Round Shield)	56-1073
	Shield Base	56-1074
	Station Card	27-5436
	Station Card Shield	27-5437
	Station Card Holder	56-1273
	Vernier Drive	31-2329

PHILCO RADIO & TELEV. CORP.

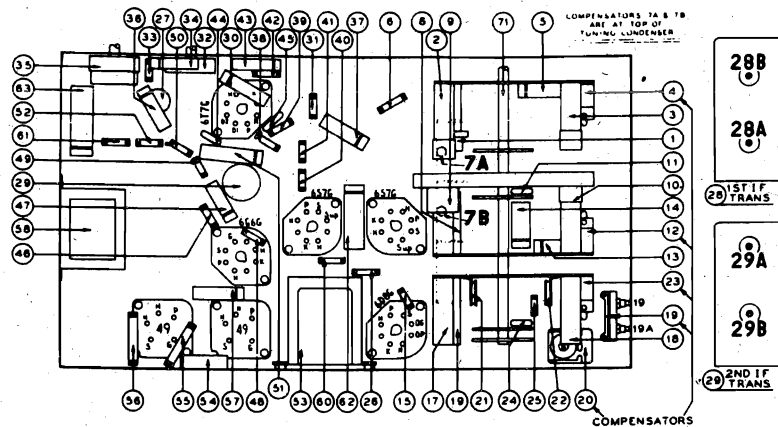


Fig. 1—Part Locations—Underside of Chassis

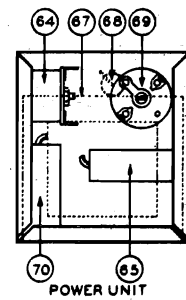


Fig. 2—Part Locations—Power Unit

Alignment of Compensators

EQUIPMENT REQUIRED:

- (1) Signal Generator; Philco Model 077 A.C. operated or Model 177 Battery operated.
- (2) Output Meter, Philco Model 027 Circuit Tester.
- (3) Philco Fiber Handle Screw Driver, Part No. 27-7059, and Fiber Wrench, Part No. 3164.

OUTPUT METER: The Philco 027 Output Meter is connected to the plate and cathode terminals of one of the type 49 tubes and adjusted for the 0 to 30 V.A.C. scale. After connecting the output meter, adjust the compensators in the order as shown in the tabulation below. Locations of the compensators are shown in Fig. 1. If the output meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.

Order	SIGNAL GENERATOR			RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Settings	Adjust Compensators	
1	6D8EG Grid and Ground	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Tone-Treble	29B, 29A, 28B, 28A	
2	Ant. and Grd.	200 mmfd.	1500 K.C.	1500 K.C.	Vol. Max. Range Switch Brdst.	19, 7B, 7A	Note B
3	Ant. and Grd.	200 mmfd.	580 K.C.	580 K.C.	Vol. Max.	20	Roll Gang Repeat Oper-2
4	Ant. and Grd.	400 ohms	6.0 M.C.	6.0 M.C.	Vol. Max. Tone-Treble Range Switch Police	19A	Roll Gang
5	Ant. and Grd.	400 ohms	20 M.C.	20 M.C.	Vol. Max. Tone-Treble Range Switch S. W.	23, 12, 4	Note C


A—The "Dummy Antenna" consists of a condenser or resistance connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.

B—Dial Calibration: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum capacity), compensator is correctly adjusted, the image set the dial pointer on the first mark on the left edge (low frequency end) of the broad-dial 940 K.C. below the fundamental signal.

C—When adjusting compensator (23) be sure to tune in the fundamental signal (20) from tight position of the image signal. If the image set the dial pointer on the first mark on the left edge (low frequency end) of the broad-dial 940 K.C. below the fundamental signal.

PHILCO RADIO & TELEV. CORP

MODEL 39-770(121)
Schematic, Voltage

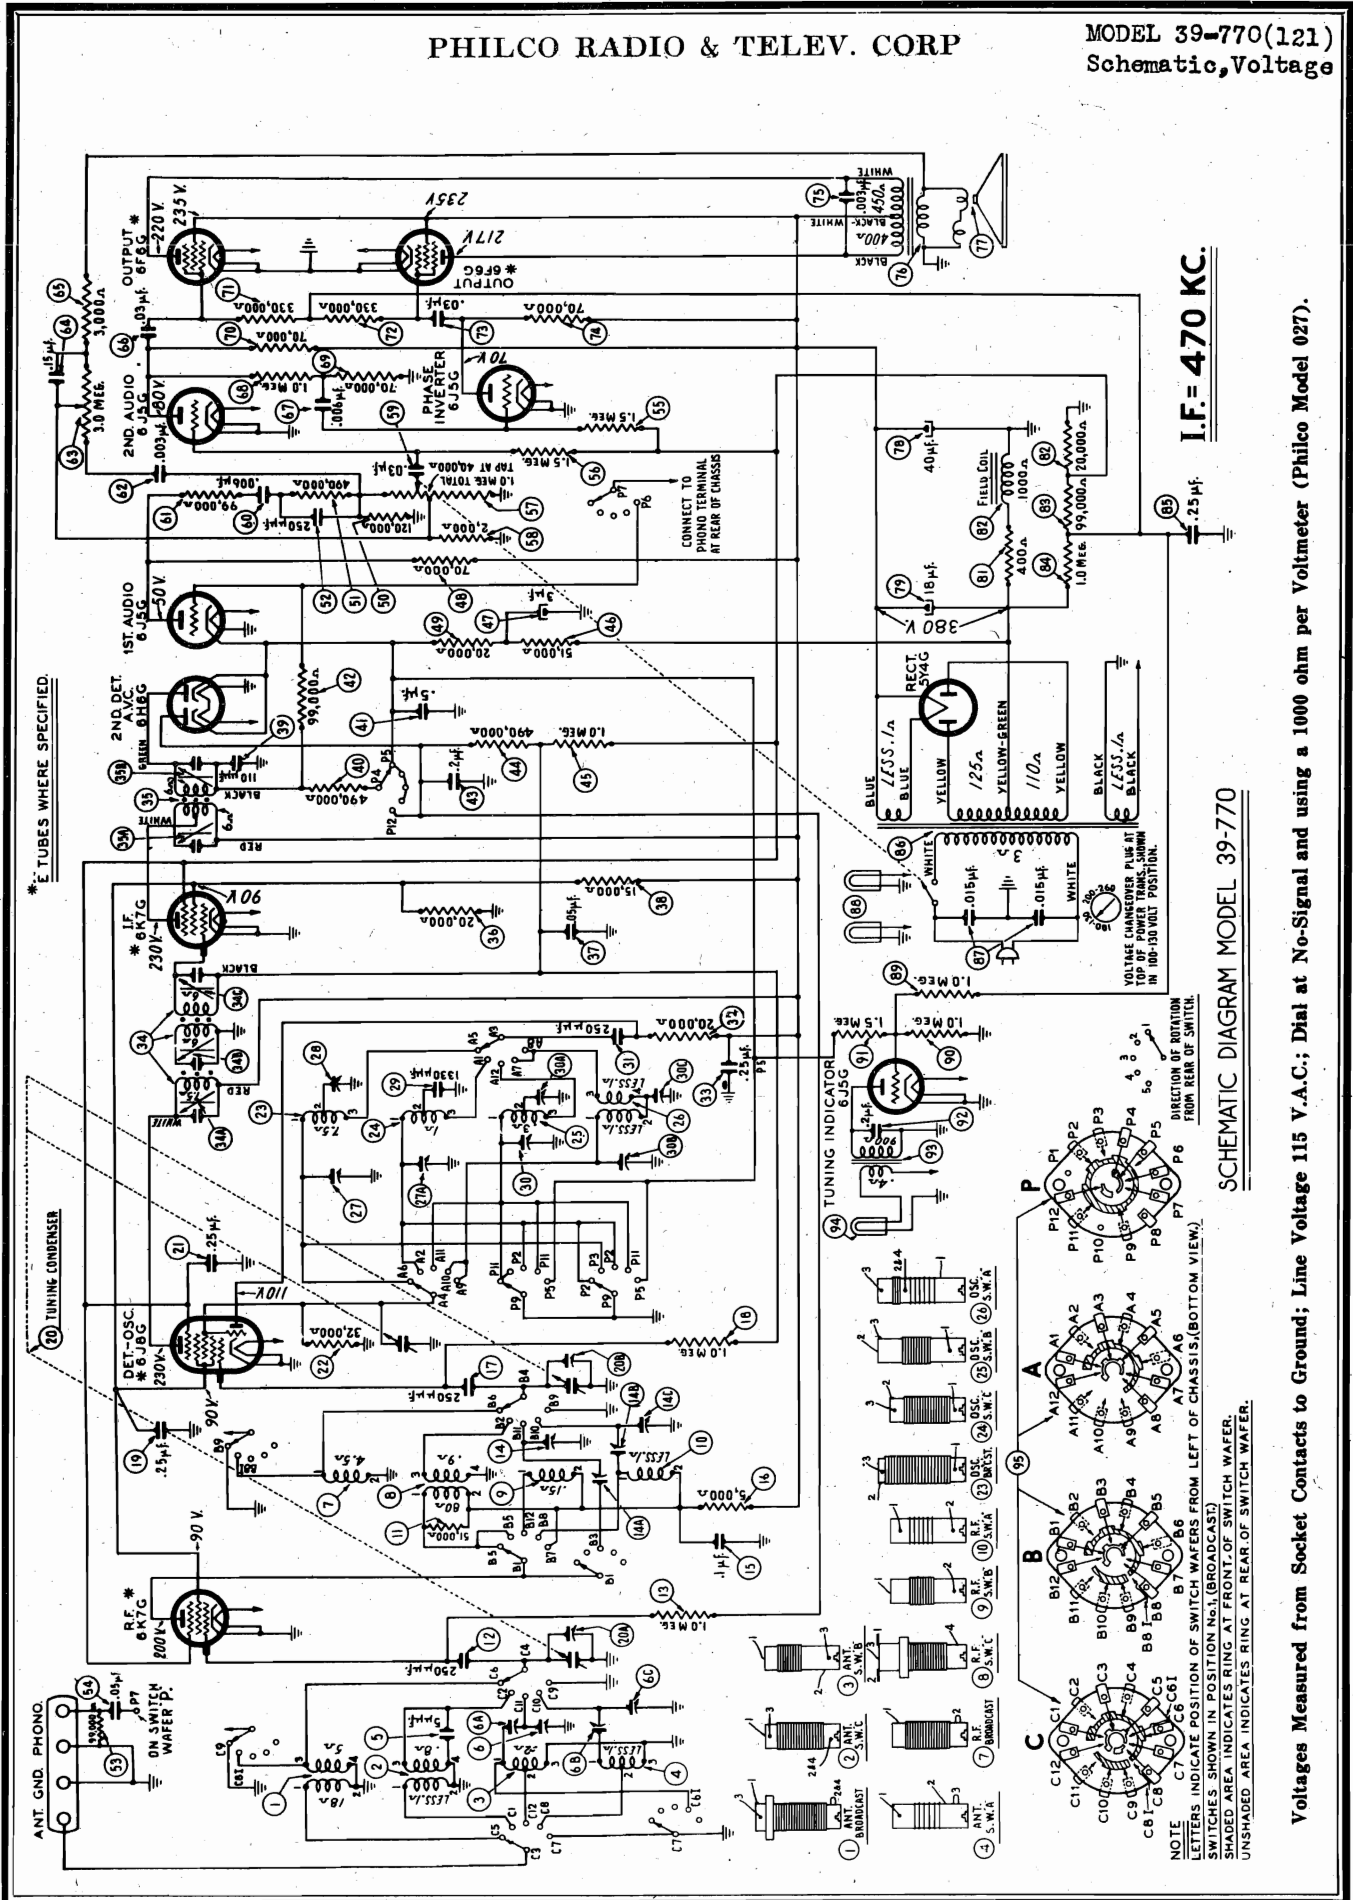

I.F. = 470 KC.

SCHEMATIC DIAGRAM MODEL 39-770

Voltages Measured from Socket Contacts to Ground; Line Voltage 115 V.A.C.; Dial at No-Signal and using a 1000 ohm per Voltmeter (Philco Model 027).

MODEL 39-770(121)
Chassis, Trimmers
Drive Cord Data

PHILCO RADIO & TELEV. CORP.

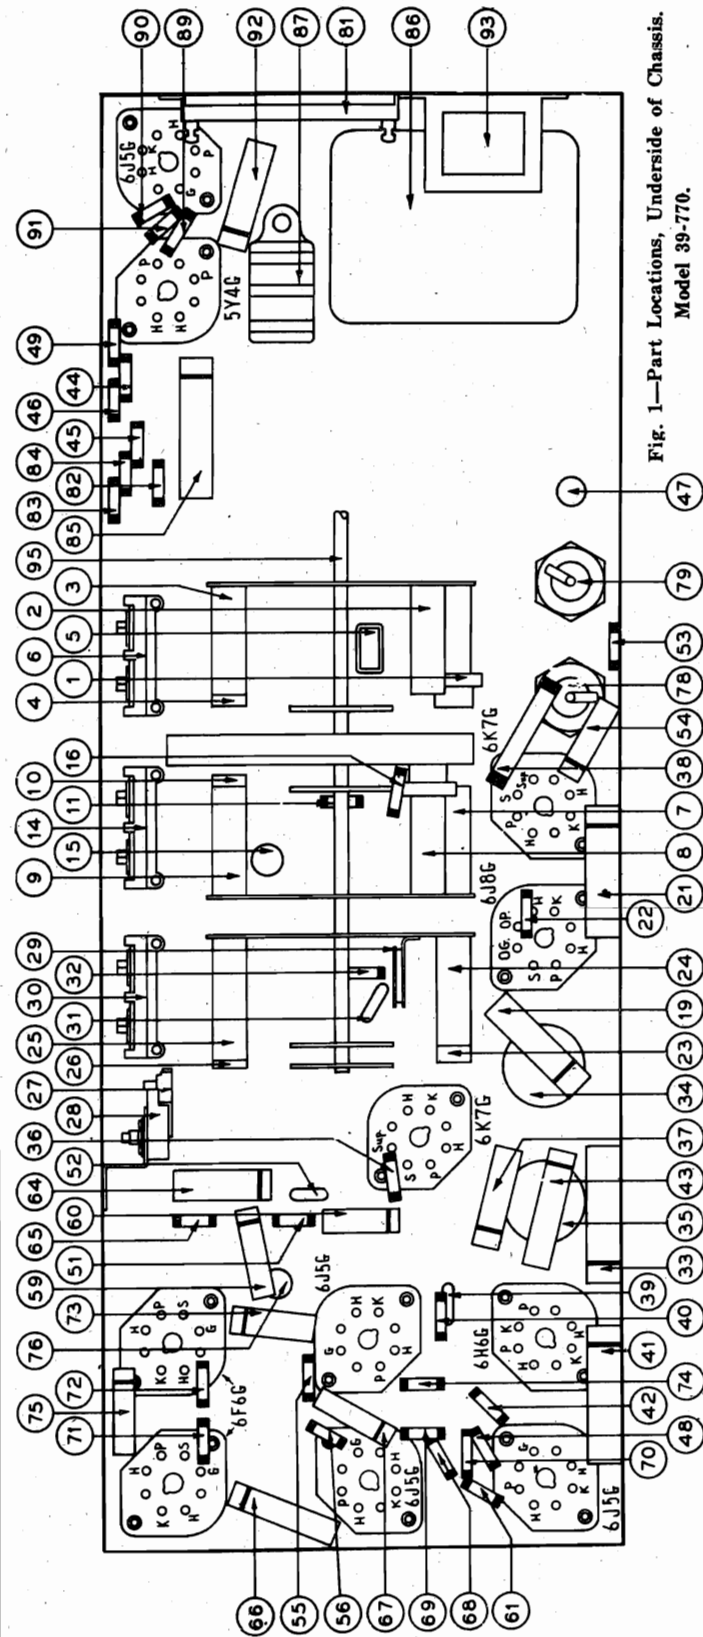


Fig. 1—Part Locations, Underside of Chassis, Model 39-770.

TYPE CIRCUIT: Model 39-770 is an eleven (11) tube A.C. operated superheterodyne circuit with four (4) tuning ranges covering the frequencies listed below. Provisions are also provided for connecting a high impedance phonograph pick-up. In addition other features of design are: Tuning Light Indicator; Continuously Variable Tone Control with Variable Bass Compensation; Amplified Automatic Volume Control; Push-Pull Pentode Audio Output; and Special Compensation in all circuits to prevent frequency drift.

POWER SUPPLY: 115 or 220 V. 50 to 60 Cycle A.C. 115 Watts. To operate the receiver on either of the above voltages, insert the plug on top of power transformer as indicated on the transformer. Special Power Transformers for operation on 25 cycle current are available.

TUNING RANGES: 530 to 1720 K.C.; 17 M.C. to 5.6 M.C. 5.5 M.C. to 11.6 M.C.; 11.6 M.C. to 22.0 M.C.

AUDIO OUTPUT: 7.5 Watts.

AERIAL AND GROUND: To obtain maximum performance from this receiver, the Philco Safety Aerial, Part No. 40-6370, should be used together with a good ground connection to the nearest water pipe or any other good ground source.

CABINET DIMENSIONS:

Type	Height	Width	Depth
Type T	18 $\frac{1}{2}$ "	23 $\frac{3}{4}$ "	12 $\frac{3}{4}$ "
Type XX	36 $\frac{1}{2}$ "	34 $\frac{3}{4}$ "	14 $\frac{3}{4}$ "

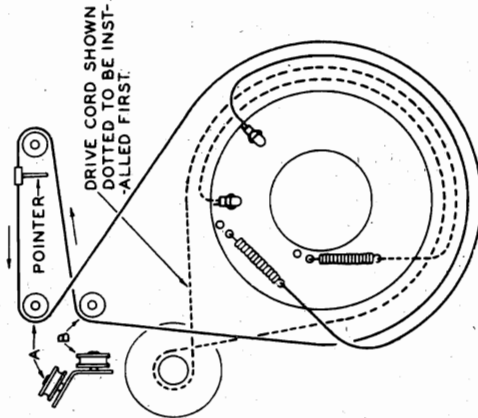


Fig. 3—Installing Drive Cords.

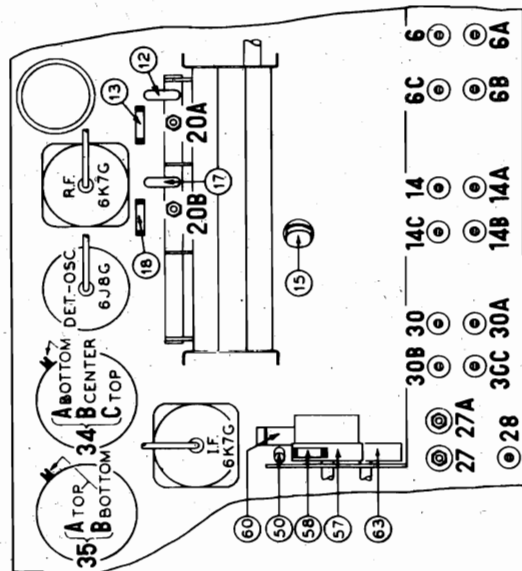


Fig. 2—Compensator Locations: Top, Front View of Chassis.

PHILCO RADIO & TELEV. CORP.

MODEL 39-770(121)
Alignment, Parts

Alignment of Compensators

Operations	SIGNAL GENERATOR			RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Setting	Adjust Compensators	
1	6J8G Grid	.1 mfd.	470 K.C.	580 K.C.	Tone-Treble Vol.—Max. Range Switch "Brdcat."	35B, 35A, 34C, 34A	Turn 34B "IN" full
2	6J8G Grid	.1 mfd.	470 K.C.	580 K.C.	Tone-Treble Vol.—Max. Range Switch "Brdcat."	34B	TO MAX. OUTPUT
3	Ant. & Gnd. Panel	200 mmfd.	1500 K.C.	1500 K.C.	Tone-Treble Vol.—Max. Range Switch "Brdcat."	27, 20B, 20A	Note B
4	Ant. & Gnd. Panel	200 mmfd.	580 K.C.	580 K.C.	Tone-Treble Vol.—Max. Range Switch "Brdcat."	28	Roll Gang
5	Ant. & Gnd. Panel	200 mmfd.	5.0 M.C.	5.0 M.C.	Tone-Treble Vol.—Max. Range Switch "SW"	27A	Roll Gang Note C
6	Ant. & Gnd. Panel	400 ohms	11 M.C.	11 M.C.	Tone-Treble Vol.—Max. Range Switch "SWE"	30, 14, 6	Note D Roll Gang on 14 and 6 Image above 11.0 M.C.
7	Ant. & Gnd. Panel	400 ohms	6.0 M.C.	6.0 M.C.	Tone-Treble Vol.—Max. Range Switch "SWE"	30A, 14A, 6A	Note D Roll Gang on 14A and 6A Image above 6.0 M.C. Repeat Operation 6
8	Ant. & Gnd. Panel	400 ohms	20.0 M.C.	20.0 M.C.	Tone-Treble Vol.—Max. Range Switch "SWA"	30B, 14C, 6C	Note D Roll Gang on 14C and 6C Image above 20.0 M.C.
9	Ant. & Gnd. Panel	400 ohms	12.0 M.C.	12.0 M.C.	Tone-Treble Vol.—Max. Range Switch "SWA"	30C, 14B, 6B	Note D Roll Gang on 14B and 6B Image above 12.0 M.C. Repeat Operation 7

NOTE A—The "Dummy Antenna" consists of a condenser or resistance connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.

NOTE B—Dial Calibration: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum capacity), set

the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable with condenser and pointer in this position is shown.

NOTE C—Compensator (27A) should be peaked to the Fundamental signal which is the second (2) signal from the tight (maximum capacity) position. If the compensator is correctly padded, the "Image" signal will be found by turning the receiver dial 940 K.C. below 5.0 M.C.

NOTE D—Compensators of Shortwave Ranges "A" and "B" should be peaked to the first signal from the tight (maximum capacity) position. If the compensators are correctly padded, the "Image" signal will be found by turning the receiver dial 940 K.C. above the frequencies being used. Example: 11.0 M.C. (Image 11.940); 20.0 M.C. (Image 20.940).

Schem. No.	Description	Part No.	Schem. No.	Description	Part No.	Schem. No.	Description	Part No.
1	Ant. Trans. (Brdcat.)	32-2588	44	Resistor (490,000 ohms, 1 watt)	33-449439	82	Resistor (20,000 ohms, 1 watt)	33-320439
2	Ant. Trans. (S.W. C)	32-3105	45	Resistor (1.0 megohm, 1 watt)	33-510439	83	Resistor (99,000 ohms, 1 watt)	33-399439
3	Ant. Trans. (S.W. B)	32-3108	46	Resistor (51,000 ohms, 1 watt)	33-351439	84	Resistor (1.0 megohm, 1 watt)	33-510439
4	Ant. Trans. (S.W. A)	32-3111	47	Electrolytic Cond. (.3 mfd., 150 V.)	30-2367	85	Tubular Cond. (.05 mfd.)	30-4588
5	Mica Cond. (5 mmfd.)	30-1120	48	Resistor (70,000 ohms, 1 watt)	33-370439	86	Power Trans. 100/130 or 200/260 V., 50 to 60 cycles	32-8008
6	Compensators (4 section)	31-6284	49	Resistor (20,000 ohms, 1 watt)	33-320439	87	Bakelite Cond. (.015 and .015 mfd.)	3793-ODG
7	R.F. Trans. (Brdcat.)	32-2379	50	Resistor (120,000 ohms, 1 watt)	33-412439	88	Pilot Lamps (Dial)	34-2064
8	R.F. Trans. (S.W. C)	32-3106	51	Resistor (490,000 ohms, 1 watt)	33-449439	89	Resistor (1.0 megohm, 1 watt)	33-510439
9	R.F. Trans. (S.W. B)	32-3109	52	Mica Cond. (250 mmfd.)	30-1119	90	Resistor (1.0 megohm, 1 watt)	33-510439
10	R.F. Trans. (S.W. A)	32-3112	53	Resistor (99,000 ohms, 1 watt)	33-399439	91	Resistor (1.5 megohms, 1 watt)	33-515439
11	Resistor (32,000 ohms, 1 watt)	33-351439	54	Tubular Cond. (.05 mfd.)	30-4519	92	Tubular Cond. (.2 mfd.)	30-4587
12	Mica Cond. (250 mmfd.)	30-1119	55	Resistor (1.5 megohms, 1 watt)	33-515439	93	Tuning Indicator Trans.	32-8009
13	Resistor (1.0 meg., 1 watt)	33-510439	56	Resistor (1.5 megohms, 1 watt)	33-515439	94	Pilot Lamp (Tuning Indicator)	34-2221
14	Compensators (4 section)	31-6284	57	Volume Control (1.0 megohm)	33-5302	95	Wave Switch	42-1476
15	Tubular Cond. (.1 mfd.)	30-4527	58	Resistor (2000 ohms, 1 watt)	33-220439		Bezel	56-1163
16	Resistor (5000 ohms, 1 watt)	33-250439	59	Tubular Cond. (.03 mfd.)	30-4585		Bezel Gasket	38-9734
17	Mica Cond. (250 mmfd.)	30-1119	60	Tubular Cond. (.006 mfd.)	30-4591		Cable (Power)	L-3180
18	Resistor (1.0 megohm)	33-510439	61	Resistor (99,000 ohms, 1 watt)	33-399439		Coupling (Tuning Cond. to Drive)	31-2291
19	Tubular Cond. (.25 mfd.)	30-4588	62	Tubular Cond. (.003 mfd.)	30-4580		Disc (Volume Control)	27-4765
20	Tuning Cond.	31-2326	63	Tone Control (3.0 megohms)	33-5287		Disc (Range Switch)	27-4767
21	Tubular Cond. (.25 mfd.)	30-4588	64	Tubular Cond. (.15 mfd.)	30-4593		Disc (Tuning)	27-4798
22	Resistor (32,000 ohms, 1 watt)	33-332439	65	Resistor (3000 ohms, 1 watt)	33-230439		Disc (Tone Control)	27-4802
23	Osc. Trans. (Brdcat.)	32-2120	66	Tubular Cond. (.03 mfd.)	30-4517		Dial	27-5448
24	Osc. Trans. (S.W. C)	32-3107	67	Tubular Cond. (.006 mfd.)	30-4591		Dial Pointer	56-1033
25	Osc. Trans. (S.W. B)	32-3110	68	Resistor (1.0 megohm, 1 watt)	33-510439		Dial Cord Spring	28-8913
26	Osc. Trans. (S.W. A)	32-3113	69	Resistor (70,000 ohms, 1 watt)	33-370439		Drive Cord (Pointer)	31-2352
27	Compensator	31-6288	70	Resistor (70,000 ohms, 1 watt)	33-370439		Drive Cord (Tuning Drum)	31-2350
28	Compensator	31-6289	71	Resistor (330,000 ohms, 1 watt)	33-433439		Drum Assembly (Tuning Cond.)	38-9716
29	Semi-Fixed Cond. (1330 mmfd.)	31-6286	72	Resistor (330,000 ohms, 1 watt)	33-433439		Range Switch Operating Arm and Link Assembly	38-9756
30	Compensators (4 section)	31-6285	73	Tubular Cond. (.03 mfd.)	30-4517		Socket (7 prong—6K7G R.F. Tube)	27-6099
31	Mica Cond. (250 mmfd.)	30-1119	74	Resistor (70,000 ohms, 1 watt)	33-370439		Socket (6 prong)	27-6121
32	Resistor (20,000 ohms, 1 watt)	33-320439	75	Tubular Cond. (.003 mfd.)	30-4582		Socket (8 prong—6J8G)	27-6120
33	Tubular Cond. (.25 mfd.)	30-4589	76	Output Trans.	32-8020		Socket Assembly (Dial Lamp)	38-9694
34	1st I.F. Trans. Assy.	32-3114	77	Cone and Voice Coil Assy. (Spkr. Pt. No. 36-1460-3)	36-4105		Socket Assembly (Dial Lamp)	38-9695
35	2nd I.F. Trans. Assy.	32-3115	77A	Cone and Voice Coil Assy. (Spkr. Pt. No. 36-1459-2)	36-4106		Socket Assembly (Bullseye XX Cabinet)	38-9696
36	Resistor (20,000 ohms, 1 watt)	33-320439	78	Electrolytic Cond. (40 mfd., 300 V.)	30-2366		Station Card	27-5446
37	Tubular Cond. (.05 mfd.)	30-4519	79	Electrolytic Cond. (18 mfd.)	30-2368		Station Card Shield	27-5447
38	Resistor (15,000 ohms, 2 watt)	33-315539	80	Field Coil (Replace Spkr. 36-1459-2 in "T" Cabinet and Replace Spkr. 36-1460-3 in "XX" Cabinet)			Spring (Retaining Station Card)	56-1294
39	Mica Cond. (110 mmfd.)	30-1118	81	Resistor (400 ohms, wire wound)	33-3365		Speaker (XX Cabinet)	36-1460-3
40	Resistor (490,000 ohms, 1 watt)	33-449439					Speaker (T Cabinet)	36-1459-2
41	Tubular Cond. (.5 mfd.)	30-4590						
42	Resistor (99,000 ohms, 1 watt)	33-399439						
43	Tubular Cond. (.2 mfd.)	30-4587						

MODEL 39-2770(121)
Alignment, Notes

PHILCO RADIO & TELEV. CORP.

SPECIFICATIONS

Model 39-2770 is an eleven (11) tube A. C. operated superheterodyne circuit with four tuning ranges covering—long wave, 140 to 390 K. C.; standard broadcasts, 540 to 1720 K. C.; short wave (A) 5.7 to 11.5 M. C.; short wave (B) 11.5 to 22 M. C. Other than the tuning range coverage Model 39-2770 is similar in design to the Model 39-770.

Service information for Model 39-2770 is the same as that given for Model 39-770 with the exception of "Alignment of Compensator" procedure and some parts in the R. F. section.

These differences are listed below:—
SCHEMATIC NO.

DESCRIPTION
Ant. Trans.
R. F. Trans.
Osc. Trans.

PART NO.
32-3135
32-3136
32-3137

1—Add a 2200 mmfd. condenser, Part No. 30-1125, from contact C1 on Range Switch to ground.

2—Add a 5 mmfd. condenser, Part No. 30-1120, from contact C2 on Range Switch to ground.

3—Add a 110 mmfd. condenser, Part No. 30-1118 in place of the 51,000 ohm resistor, Part No. 33-351439, now used in the Model 39-770.

4—Add a 5 mmfd. condenser, Part No. 30-1120 from contact B2 on Range Switch to ground.

5—Add a compensator, Part No. 31-6297, from contact A1 on Wave Switch to ground. (The 1330 mmfd. semi-fixed condenser, Part No. 31-6286, used in Model 39-770 is removed from Model 39-2770.)

ALIGNMENT OF COMPENSATORS


SIGNAL GENERATOR				RECEIVER			
Opera- Tions	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Setting	Adjust Compensators	Special Instructions
1	6J8G Grid	.1 mfd.	470 K. C.	580 K. C.	Tone-Treble Vol.-Max. Range Switch Brdct.	35B, 35A, 34C, 34A	Turn 34B "in" full
2	6J8G Grid	.1 mfd.	470 K. C.	580 K. C.	Tone-Treble Vol.-Max. Range Switch Brdct.	34B	To Max. Output
3	Ant. & Gnd. Panel	200 mmfd.	1500 K. C.	1500 K. C.	Tone-Treble Vol.-Max. Range Switch Brdct.	27, 20B, 20A	Note B
4	Ant. & Gnd. Panel	200 mmfd.	580 K. C.	580 K. C.	Tone-Treble Vol.-Max. Range Switch Brdct.	28	Roll gang
5	Ant. & Gnd. Panel	200 mmfd.	350 K. C.	350 K. C.	Tone-Treble Vol.-Max. Range Switch "LW"	27A	Note B
6	Ant. & Gnd. Panel	200 mmfd.	160 K. C.	160 K. C.	Tone-Treble Vol.-Max. Range Switch "LW"	New Compensator contact A1 Range Switch	Roll gang
7	Ant. & Gnd. Panel	400 ohms	11 M. C.	11 M. C.	Tone-Treble Vol.-Max. Range Switch "SWB"	30, 14, 6	Note D Roll gang on 14 and 6 image above 11.0 M. C.
8	Ant. & Gnd. Panel	400 ohms	6.0 M. C.	6.0 M. C.	Tone-Treble Vol.-Max. Range Switch "SWB"	30A, 14A, 6A	Note D Roll gang on 14A and 6A image above 6.0 M. C. Repeat operation 6
9	Ant. & Gnd. Panel	400 ohms	20.0 M. C.	20.0 M. C.	Tone-Treble Vol.-Max. Range Switch "SWA"	30B, 14C, 6C	Note D Roll gang on 14C and 6C image above 20.0 M. C.
10	Ant. & Gnd. Panel	400 ohms	12.0 M. C.	12.0 M. C.	Tone-Treble Vol.-Max. Range Switch "SWA"	30C, 14B, 6B	Note D Roll gang on 14C and 6B image above 12.0 M. C. Repeat operation 7

COILS SHOWN BELOW

The numbers on coil connections shown, correspond to same numbers on coil connections for Model 39-770.



32-3135

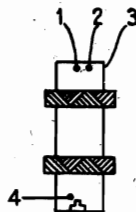


32-3136



32-3137

PHILCO RADIO & TELEV. CORP.

MODEL 40-110
Schematic, Voltage
Chassis, Trimmers

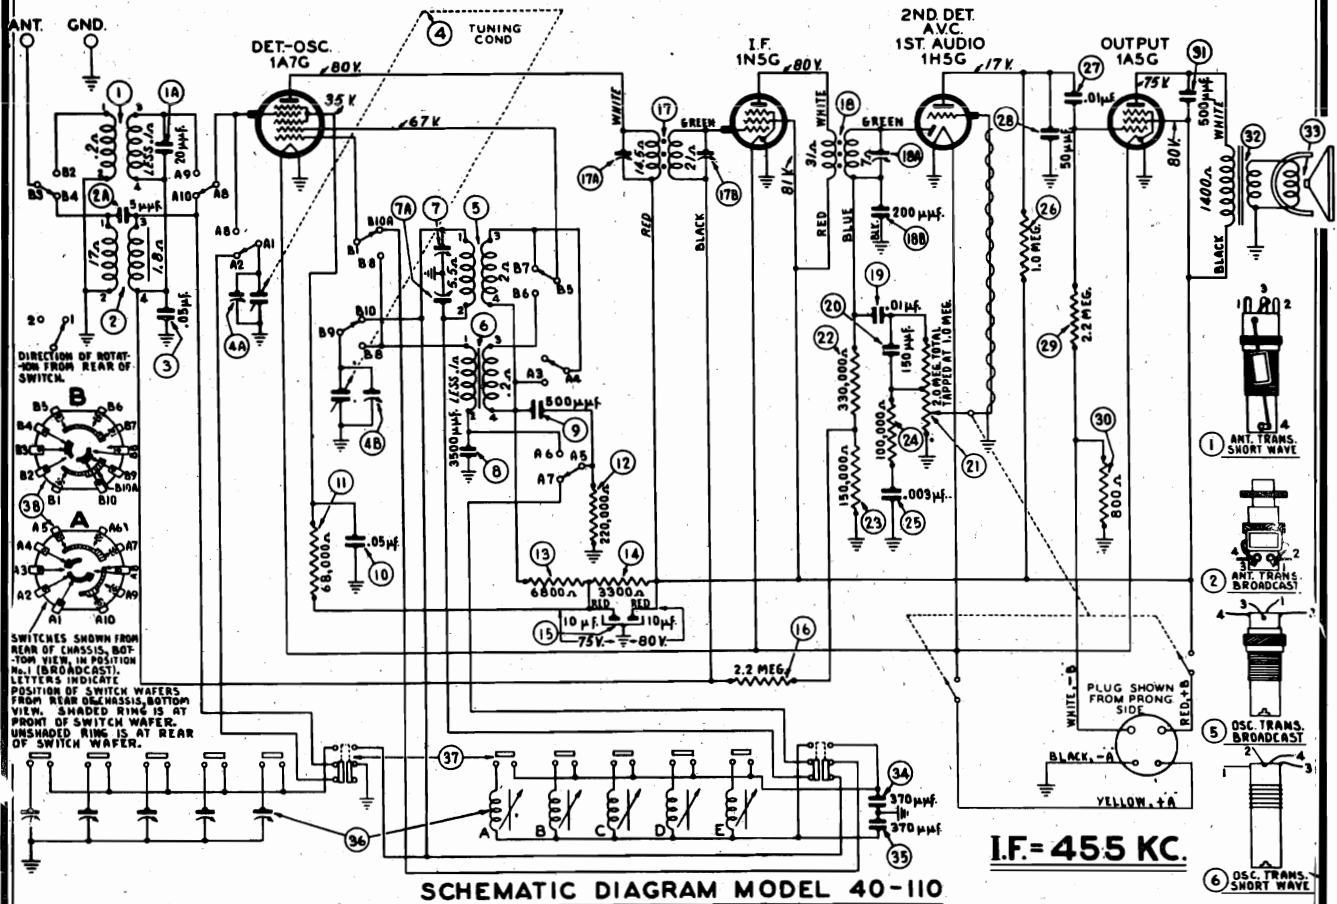

Replacement Parts — Model 40-110

SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.
1	Ant. Trans. Ass'y. (Short Wave)	32-3289	22	Resistor (330,000 ohms, 1/2 watt)	33-433339
1A	Mica Condenser (20 mmfd.)	61-0039	23	Resistor (180,000 ohms, 1/2 watt)	33-415339
2	Ant. Trans. Ass'y. (Broadcast)	32-3279	24	Resistor (100,000 ohms, 1/2 watt)	33-410339
2A	Mica Condenser (5 mmfd.)	30-1097	25	Tubular Condenser (.003 mfd.)	30-4469
3	Tubular Condenser (.05 mfd.)	30-4519	26	Resistor (1.0 meg., 1/2 watt)	33-510339
4	Tuning Condenser Assembly	31-2404	27	Tubular Condenser (.01 mfd.)	30-4872
5	Osc. Transformer (Broadcast)	32-3287	28	Mica Condenser (50 mmfd.)	30-1029
6	Osc. Transformer (Short Wave)	32-3288	29	Resistor (2.2 meg., 1/2 watt)	33-522339
7	Compensator	31-6321	30	Resistor (800 ohms, 1/2 watt)	33-180326
8	Mica Condenser (3500 mmfd.)	30-1094	31	Mica Condenser (500 mmfd.)	30-1114
9	Mica Condenser (500 mmfd.)	30-1114	32	Output Transformer	32-8066
10	Tubular Condenser (.05 mfd.)	30-4444	33	Conc and Voice Coil Assembly (Speaker Part No. 38-1410-1)	38-4093
11	Resistor (68,000 ohms, 1/2 watt)	33-368339	34	Silver Mica Condenser (370 mmfd.)	30-1110
12	Resistor (220,000 ohms, 1/2 watt)	33-422339	35	Silver Mica Condenser (370 mmfd.)	30-1110
13	Resistor (6800 ohms, 1/2 watt)	33-268339	36	Coils—Padder Strip and Brk. Assembly	30-1110
14	Resistor (3300 ohms, 1/2 watt)	33-233339	36A	Coil No. 1 (540-1030 K. C.)	32-3042
15	Elec. Condenser (10-10 mfd., 150 V.)	30-2408	36B	Coil No. 2 (650-1100 K. C.)	32-3042
16	Resistor (2.2 meg., 1/2 watt)	33-522339	36C	Coil No. 3 (850-1100 K. C.)	32-3042
17	1st I. F. Transformer Assembly	32-3198	36D	Coil No. 4 (740-1240 K. C.)	32-3041
18	2nd I. F. Transformer Assembly	32-3259	36E	Coil No. 5 (1160-1600 K. C.)	32-3041
19	Tubular Condenser (.01 mfd.)	30-4872	37	Push-Button Switch	42-1827
20	Mica Condenser (150 mmfd.)	30-1033	38	Wave Switch	42-1816
21	Volume Control (2 meg.)	33-5326			

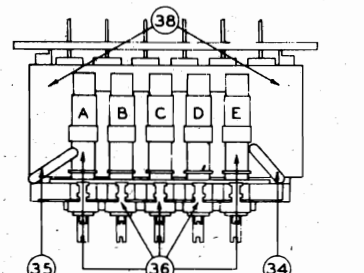


FIG. 2.

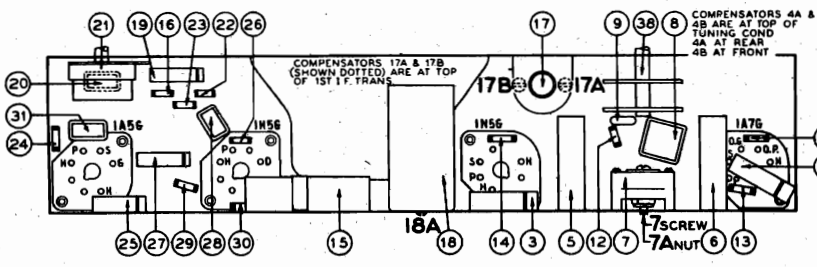


FIG. 3.

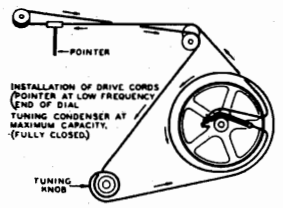


FIG. 1.

MISCELLANEOUS PARTS

DESCRIPTION	PART No.	DESCRIPTION	PART No.
Bezel (Dial)	56-1453	Knob Ass'y. (Vol., Tuning, Wave Switch)	27-4329
Bezel (Push-Buttons)	56-1455	Knob Assembly (Push-Buttons)	27-4324
Cabinet	103932	Pointer	56-1464
Clip (Coil Mounting)	27-5539	Socket (7 prong, type 1A7G tube)	27-6059
Dial	27-5539	Socket (Speaker)	27-6115
Dial Tab	27-5524	Screw (Push-Button Bezel Mounting)	W-1834F62
Drive Cord Assembly	31-2405	Screw (Bezel Mounting)	W-1836F62
		Tab Kit	40-6472
		Tuning Shaft Assembly	31-2395

MODEL 40-110
Alignment, Notes

PHILCO RADIO & TELEV. CORP.

SPECIFICATIONS

TYPE OF CIRCUIT: Model 40-110 is a four tube battery operated superheterodyne receiver with electric push-button tuning. In addition other features of design are: Low current drain tubes, new high sound output speaker, specially designed tone chamber, two tuning ranges, automatic volume control, and pentode audio output.

The receiver is equipped with six electric tuning push-buttons for automatically selecting stations. Five of the push-buttons are used for broadcast stations and one for selecting dial tuning. The procedure for adjusting the push-buttons will be found in the instructions supplied with each set.

TUNING RANGES: 540 to 1630 K. C. 5.4 to 18.0 M. C.

INTERMEDIATE FREQUENCY: 455 K. C.

PHILCO TUBES USED: One 1A7G, Converter; one 1N5G, I. F. Amplifier; one 1H5G, 2nd Detector, A. V. C. 1st Audio; one 1A5G, Audio Output.

PHILCO BATTERIES: One Type P-60D-11L.

BATTERY DRAIN: "A" 200 M. A. "B" 7.2 M. A.

CABINET DIMENSIONS:

	Height	Width	Depth
40-110K	37½	26¾	11½
40-110B	17½	17½	9½

AERIAL AND GROUND: To obtain maximum operating performance with this model, Philco Farm Radio Aerial Part No. 40-6383 is recommended and a good ground source such as a water pipe.

ALIGNMENT OF COMPENSATORS

EQUIPMENT REQUIRED

Signal Generator covering a frequency range of 115 K. C. to 36 M. C. such as Philco Model 077.

Aligning Indicator: A vacuum tube voltmeter or audio output meter such as contained in Philco Models 027 and 028 circuit testers. Either of these meters can be used to align the

receiver and are connected as given below.

Tools: Aligning screw driver Part No. 45-2610.

CONNECTING ALIGNING METERS

Audio Output Meter: The audio output meter is connected to the plate and screen terminals of the 1A5G tube. Adjust the meter for the 0 to 30 volt A. C. scale.

Vacuum Tube Voltmeter: To use the vacuum tube voltmeter as an aligning indicator it should be connected to the A. V. C. circuit as follows: Connect the negative (—) terminal of the voltmeter through a 2 meg. resistor to any point in the

A. V. C. circuit where voltage can be obtained. The positive (+) terminal is connected to the receiver chassis.

After connecting the aligning meter, adjust the compensators in the order as shown in the tabulation below.

Operations in Order	SIGNAL GENERATOR			RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dummy Antenna	Dial Setting	Dial Setting	Control Setting	Adjust Padders	
1	Aerial	Note A	455 K. C.	580 K. C.	Vol. Max. Range Switch "Brdcat"	18A, 17A, 17B	Manual Push-button "IN"
2	Aerial	400 ohms	18 M. C.	18 M. C.	Vol. Max. Range Switch "S. W."	4A	Note B
3	Aerial	225 mmfd.	1500 K. C.	1500 K. C.	Range Switch "Brdcat"	7 screw, 4B	Note E
4	Aerial	225 mmfd.	580 K. C.	580 K. C.	Range Switch "Brdcat"	7A (nut)	Roll Tuning Condenser
5	Aerial	400 ohms	1500 K. C.	1500 K. C.	Range Switch "Brdcat"	7 screw	


NOTE A — The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (High side). Use the capacity or resistance as specified in each step of the above procedure.

NOTE B — **DIAL CALIBRATION:** In order to adjust the receiver correctly, the dial must be aligned to track properly

with the tuning condenser. To do this, proceed as follows: Turn the tuning condenser to the maximum capacity position (plates fully meshed). With the condenser in this position, the tuning pointer is set horizontal at the low frequency end of the scale (530 K. C.).

PHILCO RADIO & TELEV. CORP.

MODELS 40-115, 40-124
Code 121
Schematic, Voltage
Chassis, Trimmers
Alignment
OUTPUT
35A5

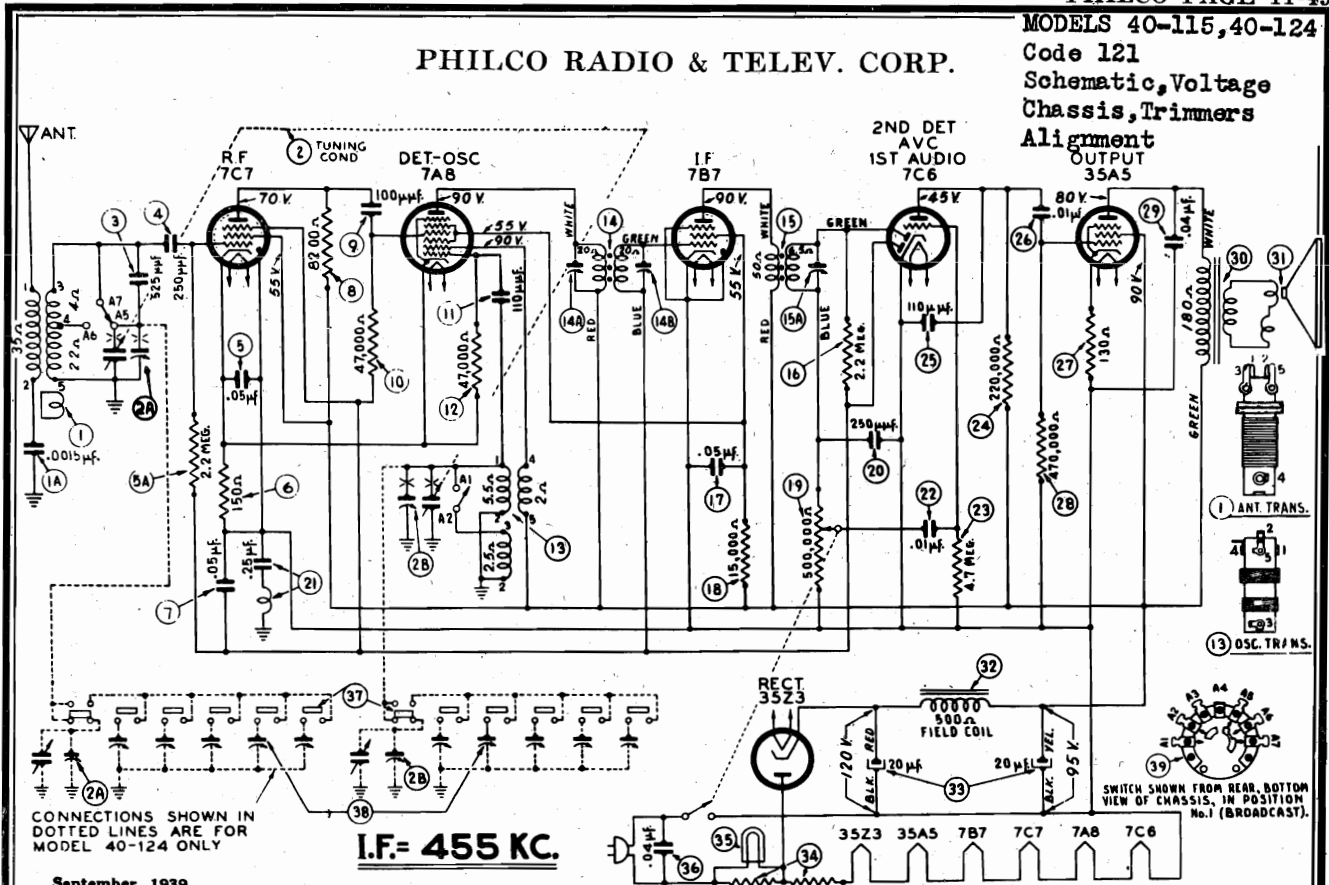

CONNECTIONS SHOWN IN
DOTTED LINES ARE FOR
MODEL 40-124 ONLY

I.F. = 455 KC.

September, 1939

SCHE. No.	DESCRIPTION	PART No.
1	Antenna Transformer (Model 40-115)...	32-3303
2	Antenna Transformer (Model 40-124)...	32-3321
1A	Tubular Condenser (.0015 mfd.)...	30-4555
2	Tuning Condenser (Model 40-115)...	31-2425
3	Tuning Condenser (Model 40-124)...	31-2428
4	Mica Condenser (525 mmfd.)...	30-1142
5	Mica Condenser (250 mmfd.)...	61-0033
5A	Tubular Condenser (.05 mfd.)...	30-4519
6	Resistor (2.2 meg., 1/2 watt)...	33-522339
7	Resistor (150 ohms, 1/2 watt)...	33-115336
8	Tubular Condenser (.05 mfd.)...	30-4519
9	Resistor (8200 ohms, 1/2 watt)...	33-282339
10	Mica Condenser (100 mmfd.)...	30-1125
11	Resistor (47,000 ohms, 1/2 watt)...	33-347339
12	Mica Condenser (110 mmfd.)...	30-1130
13	Resistor (47,000 ohms, 1/2 watt)...	33-347339
14	Oscillator Trans. (Model 40-115)...	32-3255
15	Oscillator Trans. (Model 40-124)...	32-3256
16	1st I. F. Transformer Assembly...	32-3237
17	2nd I. F. Transformer Assembly...	32-3238
18	Resistor (2.2 meg., 1/2 watt)...	33-522339
19	Tubular Condenser (.05 mfd.)...	30-4519
20	Resistor (15,000 ohms, 1/2 watt)...	33-115339
21	Volume Control and On-Off Switch...	33-5306
22	Mica Condenser (250 mmfd.)...	30-1074
23	Choke and Condenser Assembly (.25 mfd.)...	38-9956
24	Tubular Condenser (.01 mfd.)...	30-4479
25	Resistor (4.7 meg., 1/2 watt)...	33-547339
26	Resistor (220,000 ohms, 1/2 watt)...	33-422339
27	Mica Condenser (110 mmfd.)...	30-1130
28	Tubular Condenser (.01 mfd.)...	30-4572
29	Resistor (130 ohms, 1/2 watt)...	33-113336
30	Resistor (470,000 ohms, 1/2 watt)...	33-447339
31	Tubular Condenser (.04 mfd.)...	30-4119
32	Output Transformer (Speaker Part No. 36-1469-1)...	32-8047
33	Output Transformer (Speaker Part No. 36-1469-9)...	32-8048
34	Cone and Voice Coil Assembly (Speaker Part No. 36-1469-1)...	36-4115
35	Cone and Voice Coil Assembly (Speaker Part No. 36-1469-9)...	36-4113
36	Field Coil (Replace Speaker Part No. 36-1469)...	30-2403
37	Electrolytic Condenser (20-20 mfd.)...	33-3375
38	Filament Resistor...	33-9956
39	Pilot Lamp...	34-2068
40	Tubular Condenser (.04 mfd.)...	30-4119


SCHE. No.	DESCRIPTION	PART No.
37	Pushbutton Switch (Model 40-124)...	42-1512
38	Padder Strip (Model 40-124)...	31-6312
39	Wave Switch...	42-1505

MISCELLANEOUS PARTS

Cable and Plug (Power Supply)...	L-3199
Cabinet (Model 40-115)...	10432A
Clip (Coil Mounting)...	28-5002
Dial...	27-5517
Drive Cord Assembly...	31-2387
Drive Shaft Assembly...	31-2370
Knobs (Volume, Tuning, Wave Switch)...	27-4809
Pilot Lamp Socket Assembly...	38-9825
Pointer (Dial)...	27-4868

**MISCELLANEOUS PARTS
MODEL 40-124**

Cabinet (Pushbutton)...	10433A
Knobs (Pushbutton)...	27-4824
Tab (Dial)...	27-5526
Tab (Television)...	27-9450
Tab Kit...	40-6473

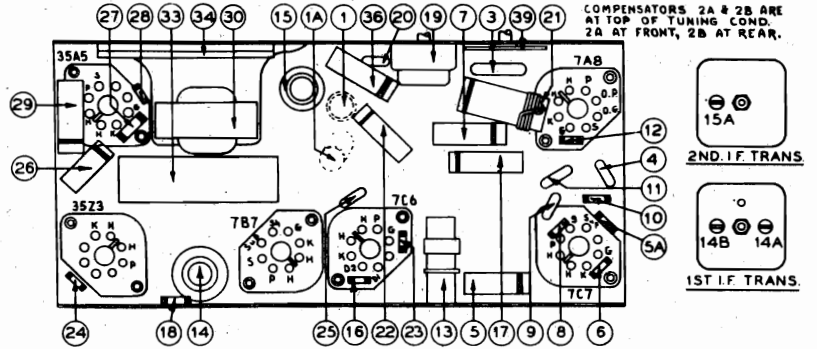

MODELS 40-115, 40-124 PART LOCATIONS, UNDERSIDE OF CHASSIS.

Operations in Order	SIGNAL GENERATOR		RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dummy Antenna	Dial Setting	Dial Setting	Control Settings	
1	7A8 Grid	.004	455 K. C.	580 K. C.	Vol. Max. Range Switch "Brdcat"	15A, 14A, 14B Manual Pushbutton "IN" Model 40-124
2	Aerial	100 mmfd.	1580 K. C.	1580 K. C.	Range Switch "Brdcat"	(2B) Note B, Note C
3	Aerial	100 mmfd.	1500 K. C.	1500 K. C.	Range Switch "Brdcat"	(2A)

NOTE B—DIAL CALIBRATION: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To do this, proceed as follows: Turn the tuning condenser to the maximum capacity position (plates fully meshed). With the

condenser in this position, the tuning pointer is set horizontal at the low frequency end of the scale (530 K. C.).
NOTE C—Compensators 2A and 2B are on top of the Tuning Condenser. 2A at the front, 2B at the rear.

MODEL 40-81(121,122)
 MODEL 40-88(121)
 MODELS 40-140,40-145,
 40-507

PHILCO RADIO & TELEV. CORP.

Alignment

Models 40-140, 40-145, 40-507.

ALIGNMENT OF COMPENSATORS

EQUIPMENT REQUIRED

1. Signal Generator with a frequency range from 115 to 36,000 K. C., such as Philco Model 077.
2. Aligning Indicator, Philco Model 027 or 028, vacuum tube voltmeter and circuit tester incorporates sensitive audio output

- meters and vacuum tube voltmeters. Either of these instruments can be used as an aligning indicator.
3. Fibre Handle Screw Driver, Philco Part No. 45-2610. When using the vacuum tube voltmeter for aligning the receiver, an aligning adaptor Part No. 45-2767 is required.

CONNECTING ALIGNING METERS

1. Audio Output Meter: If the Philco Models 027 and 028 audio output meters are used, they are connected to the speaker voice coil terminals or the plate and screen terminals of the 7B5 tube. Adjust the meter to use the 0 to 10 volt A. C. scale.
2. Vacuum Tube Voltmeter: To use the vacuum tube voltmeter as an aligning indicator make the following connections:
 Adjusting I. F. Circuit: Remove the 1232 R. F. tube from its socket and insert the aligning adaptor, then replace the tube in the adaptor. Connect the negative terminal of the vacuum tube voltmeter to the light colored wire which protrudes from the side of the adaptor. Attach the positive terminal of the vacuum tube voltmeter to the black wire of the adaptor.

- Adjusting R. F. Circuit: To adjust the R. F. circuit, the aligning adaptor is inserted in the 7C6 second detector tube socket. The vacuum tube voltmeter remains connected to the adaptor as given in the paragraph above. With the voltmeter connected in this manner, a very sensitive indication of the A. V. C. voltage is obtained when the padders are adjusted.
- After connecting the aligning adaptors, adjust the compensators as shown in the tabulation below. Locations of the compensators are shown in Schematic Diagram. If the aligning meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.

Operations in Order	SIGNAL GENERATOR		RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections	Dial Setting	Dial Setting	Control Settings	Adjust Compensators	
1	No. 1 Ter. on Loop Panel Note B	455 K. C.	580 K. C.	Vol. Cont. Max. Range Switch "Brdcst"	33A, 33B, 26A, 26B	Dial Push-Button "In" Model 40-145
2	Use Loop, Note C	18.0 M. C.	18.0 M. C.	Vol. Cont. Max. Range Switch "S.W."	27A, 2A, Note D	Check Image at 17,000 K. C.
3	Use Loop, Note C	1500 K. C.	1500 K. C.	Range Switch "Brdcst"	25A, 1A	Note A
4	Use Loop, Note C	580 K. C.	580 K. C.	Range Switch "Brdcst"	25	Roll Tuning Condenser
5	Use Loop, Note C	1500 K. C.	1500 K. C.	Range Switch "Brdcst"	25A, 2A	
6	Use Loop, Note C	18.0 M. C.	18.0 M. C.	Range Switch "S.W."	2A, Note D	Roll Tuning Condenser & Adjust Padder to First Peak from Tight Position

NOTE A — DIAL CALIBRATION: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To do this, proceed as follows: Turn the tuning condenser to the maximum capacity position (plates fully meshed). With the condenser in this position, set the tuning pointer on the extreme left index line at the low frequency end of the broadcast scale.

NOTE B — When adjusting the I. F. padders the high side of the signal generator output is connected through a .1 mfd. condenser to terminal No. 1 of the loop terminal panel at the rear of the chassis. The ground or low side of the generator is connected to the chassis of the receiver.

NOTE C — When aligning the R. F. Circuits a loop is made from a few turns of wire and connected to the generator output terminals; the signal generator is then placed two or three feet from the loop in the cabinet.

NOTE D — S. W. Oscillator compensator (27A) is located on top of the tuning condenser. Antenna compensators (1A) and (2A) are located on the loop. When adjusting the "Ant" compensators, the receiver loop should be held in place against the back of the cabinet.

Models 40-81, Codes 121, 122

Operations in Order	SIGNAL GENERATOR		RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Setting	Adjust Compensators	
1	See Paragraph on Signal Generator above	455 K. C.	580 K. C.	Vol. Max.	17A, 9B, 9A	See Paragraph on Signal Generator above
2	Use Loop on Generator	1500 K. C.	1500 K. C.	Vol. Max.	8B, 8A	Padder location Fig. 1 Note A

Model 40-88, Code 121

1	See Signal Generator Paragraph above	455 K. C.	580 K. C.	Vol. Max.	21A, 20B, 20A	
2	Use Loop on Generator	18 M. C.	18 M. C.	Vol. Max. Range Switch "S. W."	8B	Note A
3	Use Loop	1400 K. C.	1400 K. C.	Range Switch "Brdcst"	12, Screw, 8A	
4	Use Loop	580 K. C.	580 K. C.	Range Switch "Brdcst"	12A, Nut	Roll Tuning Condenser
5	Use Loop	1400 K. C.	1400 K. C.	Range Switch "Brdcst"	12, Screw, 8A	
6	Use Loop	18 M. C.	18 M. C.	Range Switch "S. W."	3	See Paragraph on Signal Generator above

NOTE A — DIAL CALIBRATION: Before adjusting the R. F. padders the dial must be aligned to track properly with the tuning condenser. To adjust the dial proceed as follows: With the tuning condenser in the closed position (maximum capacity) set the dial pointer on the small dot below 550 K. C.


BATTERY CURRENT: "A" Battery, 200 M. A. Model 40-81 Battery, 5.6 M. A.

BATTERY CURRENT: "A" Battery, 250 M. A. Model 40-88 "B" Battery, 8 M. A.

MODELS 40-503, 40-506,
MODEL 40-525
Chassis, Tuner

PHILCO RADIO & TELEV. CORP.

MODELS 40-130, 40-135
Schematic, Voltage, Tuner
Chassis, Trimmers

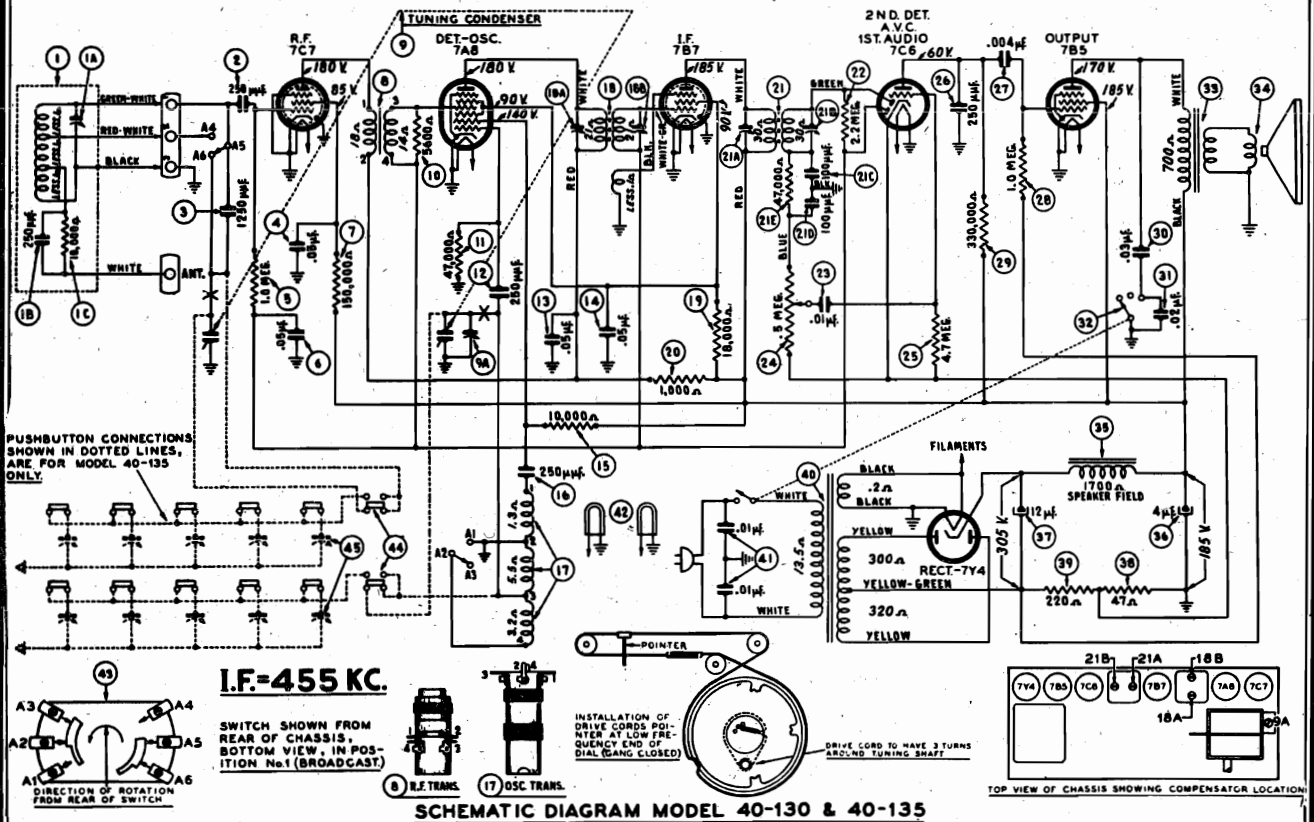

JUNE, 1939.

Replacement Parts — Models 40-130 and 40-135

SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.
1	Loop Assembly	38-9891	28	Clip (R. F. and Osc. Trans. Mts.)	28-5002		Rubber Bushing (Tuning Cond. Drive)	27-9432
1A	Compensator	31-8318	29	Dial (R. F. and Osc. Trans. Mts.)	27-5206		Spring (Drive Cord, Tuning Cond.)	28-8731
1B	Nica Cond. (250 mmfd.)	81-0023	30	Drive Cord Assy. (Pointer)	31-2398		Spring (Tuning Shaft Assy.)	28-8925
1C	Resistor (10,000 ohms, 1/2 watt)	33-10339	31	Drive Cord Assy. (Tuning Cond.)	31-2400		Speaker	38-1478
2	Nica Cond. (250 mmfd.)	81-0033	32	Escutcheon (Pushbutton Model 40-135)	28-8742		Socket (Loktal, all tubes)	38-0875
3	Nica Cond. (1250 mmfd.)	3888	33	Escutcheon Pin (Model 40-135)	49-1074		Socket (Loktal, all tubes)	38-0875
4	Tubular Cond. (.05 mfd.)	30-4513	34	Escutcheon Pin (Insulate Drive Shaft)	27-9437		Tuning Shaft	38-9883
5	Resistor (1.0 meg., 1/2 watt)	33-510339	35	Knobs (Tuning, Tone, Volume and Wave Switch)	27-4332		Tuning Drive Drum Assy.	27-8828
6	Tubular Cond. (.05 mfd.)	30-4518	36	Knobs (Pushbutton Model 40-135)	27-4824		Tab (Television, Model 40-135)	27-9450
7	Resistor (150,000 ohms, 1/2 watt)	33-415339	37	Pilot Lamp Socket Assy.	38-9904		Tab Kit (Model 40-135)	40-8473
8	R. F. Transformer	32-3283	38	Pointer	38-1532		Washer "C" Type, Tuning Shaft	28-5043
9	Tuning Condenser	31-1747						
10	Resistor (5800 ohms, 1/2 watt)	33-258339						
11	Resistor (47,000 ohms, 1/2 watt)	33-318339						
12	Nica Cond. (250 mmfd.)	81-0033						
13	Tubular Cond. (.05 mfd.)	30-4518						
14	Tubular Cond. (.05 mfd.)	30-4518						
15	Resistor (10,000 ohms, 1/2 watt)	33-310339						
16	Nica Cond. (250 mmfd.)	81-0023						
17	Oscillator Transformer	32-3212						
18	1st I. F. Trans. Assy.	33-318339						
19	Resistor (18,000 ohms, 1/2 watt)	33-210339						
20	Resistor (1,000 ohms, 1/2 watt)	33-210339						
21	2nd I. F. Trans. Assy.	32-3283						
22	Resistor (2.5 meg., 1/2 watt)	33-510339						
23	Tubular Cond. (.01 mfd.)	30-4872						
24	Volume Control (.5 meg.)	33-5333						
25	Resistor (4.7 meg., 1/2 watt)	33-527339						
26	Nica Cond. (250 mmfd.)	81-0033						
27	Tubular Cond. (.004 mfd.)	30-4878						
28	Resistor (1.0 meg., 1/2 watt)	33-510339						
29	Resistor (330,000 ohms, 1/2 watt)	33-423339						
30	Tubular Cond. (.03 mfd.)	31-2174						
31	Tubular Cond. (.02 mfd.)	30-4481						
32	Tone Control and On-Off Switch	32-8063						
33	Output Transformer	32-8063						
34	Cone and Voice Coil Assy. (Sptr. Part No. 38-1478-3)	28-4085						
35	Field Coil (Replace Spkr. Part No. 38-1478)	30-2401						
36	Electrolytic Cond. (.4 mfd., 400 V.)	30-4409						
37	Electrolytic Cond. (.2 mfd., 400 V.)	33-047331						
38	Resistor (47 ohms, 1/2 watt)	34-2064						
39	Resistor (250 ohms, 1/2 watt)	33-8064						
40	Power Trans. (115 V., 50-60 cycles)	39-03-00						
41	Sakelite Cond. (.01-.01 mfd.)	34-2064						
42	Pilot Lamp	42-1494						
43	Wave Switch	42-1494						
44	Pushbutton Switch (Model 40-135 only)	31-8318						
45	Padder Strip (Model 40-135 only)	31-8318						

MISCELLANEOUS PARTS
Cabinet (Model 40-130)..... 10394A
Cabinet (Model 40-135)..... 10394B
Cable and Plug (Power Supply)..... L-3199

FIG. 1. PART LOCATIONS, UNDERSIDE OF CHASSIS.

Model 40-130 is dial tuned and assembled in cabinet type "T"

* Model 40-135 is equipped with six electric push buttons for automatically selecting stations in addition to dial tuning. Five push buttons are used for stations one of which can be used in combination with Special type PHILCO TELEVISION receivers for reception of television sound programs. The sixth push button selects dial tuning. The push buttons in this model cover frequency ranges as follows:

540 to 1030 K. C. 740 to 1300 K. C.
650 to 1100 K. C. 900 to 1470 K. C.
1160 to 1600 K. C.

*NOTE: Push button data and tuning ranges apply for Models 40-503, 40-506 and 40-525 also.

This parts layout applies to Models 40-130, 40-135, 40-503, 40-506, and 40-525.

The procedure for adjusting the push buttons for reception of stations is similar to the method described in the volume can the only difference being that the frequency range of each button is different.

Philco television sets and record players contain instructions for setting up and adjusting the push-button in model 40-135.

TUNING RANGES: 540 to 1550 K. C.; 1.5 to 3.3 M. C.

INTERMEDIATE FREQUENCY: 455 K. C.

POWER SUPPLY: 115 volts A. C., 60 cycles.

POWER CONSUMPTION: 35 watts.

See Philco page 10-16.

MODELS 40-130,40-135
 MODEL 40-165
 MODELS 40-503,40-506
 MODEL 40-525

PHILCO RADIO & TELEV. CORP.

Alignment

40-503, 40-506, 40-130, 40-135, 40-525

ALIGNMENT OF COMPENSATORS

EQUIPMENT REQUIRED

(1) **Signal Generator:** Philco Model 077 Signal Generator which has a fundamental frequency range from 115 to 36,000 K. C. is the correct instrument for this purpose.

(2) **Aligning Indicator:** Philco Models 027 or 028 Vacuum Tube

Voltmeters and Circuit Testers incorporate sensitive vacuum tube voltmeters and audio output meters and are recommended.

(3) Philco Fiber Handle Screw Driver, Part No. 45-2610. Aligning adaptor Part No. 45-2767, when using the vacuum tube voltmeter for alignment.

CONNECTING ALIGNING METERS

Audio Output Meter: Philco Model 027 or 028 Audio Output Meters is connected to the voice coil terminals of the speaker or the plate and screen of the 7B5 tube and adjusted for the 0 to 10 volt A. C. scale.

Vacuum Tube Voltmeter: To use the Vacuum Tube Voltmeter as an alignment indicator make the following connections:

(1) **Adjusting I. F. Circuit:** Remove the 7C7 R. F. tube from its socket and insert the aligning adaptor, then replace the tube in the adaptor. Connect the negative terminal of the vacuum tube voltmeter to the light colored wire which protrudes from the side of the adaptor. Attach the positive terminal of the vacuum tube voltmeter to the black wire of the adaptor.

(2) **Adjusting R. F. Circuit:** To adjust the R. F. circuit, the aligning adaptor is inserted in the 7C6 second detector tube socket. The vacuum tube voltmeter remains connected to the adaptor as given in the paragraph above. With the voltmeter connected in this manner a very sensitive indication of the A. V. C. voltage is obtained when the padders are adjusted.

After connecting the aligning adaptors, adjust the compensators as shown in the tabulation below. Locations of the compensators are shown in Fig. 1. If the output meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.

Operations in Order	SIGNAL GENERATOR		RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Settings	Adjust Compensators in Order	
1	No. 1 Ter. on Panel Note B	455 K. C.	580 K. C.	Vol. Cont. Max. Range Switch "Brdcst"	21B, 21A, 18B, 18A	Dial Push-Button "In" Model 40-125
2	Loop Note C	1500 K. C.	1500 K. C.	Vol. Cont. Max. Range Switch "Brdcst"	9A, 1A Note D	Note A

NOTE A—DIAL CALIBRATION: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To do this, proceed as follows: Turn the tuning condenser to the maximum capacity position (plates fully meshed). With the condenser in this position, set the tuning pointer on the extreme left index line at the low frequency end of the broadcast scale.

NOTE B—When adjusting the I. F. padders the high side of the signal generator output is connected through a .1 mfd. condenser to terminal No. 1 of the loop terminal panel at the rear of the chassis.

The ground or low side of the generator is connected to the chassis of the receiver.

NOTE C—When aligning the R. F. a loop is made from a few turns of wire and connected to the signal generator output terminals; the signal generator is then placed two or three feet from the loop in the cabinet.

NOTE D—Oscillator compensator (9A) is located on top of the tuning condenser. Antenna compensator (1A) is located on the loop. When adjusting the "ANT" compensators the receiver loop should be held in place against the back of the cabinet.

Model 40-165

Signal Generator: When adjusting the I. F. padders, the high side of the signal generator is connected through a .1 mfd. condenser to terminal No. 1 of the loop terminal panel at the rear of the chassis. The ground or low side of the signal generator is connected to the chassis of the receiver.

When aligning the R. F. padders a loop antenna is made from a few turns of wire and connected to the signal generator output terminals; the generator is then placed two or three feet from the loop in the cabinet. Do not remove the receiver loop from the cabinet. It is necessary when adjusting the padders, that the receiver be left in the cabinet.

Operations in Order	SIGNAL GENERATOR		RECEIVER			Special Instructions
	Output Connections to Receiver	Frequency Setting	Dial Setting	Control Settings	Adjust Compensators	
1	High Side to No. 1 Ter. Loop Panel	455 K. C.	580 K. C. No Signal	Range Switch "Brdcst." Vol. Max. Dial Push-Button "In"	37A, 37B, 34A, 34B	See paragraph on signal generator above
2	Use Loop on Generator	18.0 M. C.	18.0 M. C.	Range Switch "SW"	61A	Note A. Image should be 910 K.C. below 18 M.C.
3	Use Loop on Generator	1500 K. C.	1500 K. C.	Range Switch Brdcst.	26, 25	
4	Use Loop on Generator	580 K. C.	580 K. C.	Range Switch Brdcst.	26A	Roll tuning condenser
5	Use Loop on Generator	1500 K. C.	1500 K. C.	Range Switch Brdcst.	26, 25	
6	Use Loop on Generator	18.0 M. C.	18.0 M. C.	Range Switch "SW"	2A	Note B, Note C

NOTE A—DIAL CALIBRATION: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum capacity), set the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable in this position is shown in Schematic Diagram.


NOTE B—Turn loop padder to closed position (maximum capacity), then adjust to the first signal peak from this position; at the same time roll the tuning condenser. See Note C.

NOTE C—When adjusting the low frequency compensator of Range One (Broadcast) or the antenna compensators of the high frequency tuning ranges; the receiver Tuning Condenser must be adjusted (rolled) as follows: First tune the compensator for maximum output, then vary the tuning condenser of the receiver for maximum output. Now turn the compensator slightly to the right or left. Continue turning compensator in the direction that gives greatest signal and again vary the receiver tuning condenser for maximum output. This procedure of first setting the compensator and then varying the tuning condenser is continued until there is no further gain in output reading.


MODEL 40-507
Tuner, Chassis

PHILCO RADIO & TELEV. CORP.

MODELS 40-140, 40-145
Schematic, Voltage, Chassis
Trimmers, Loop, Tuner

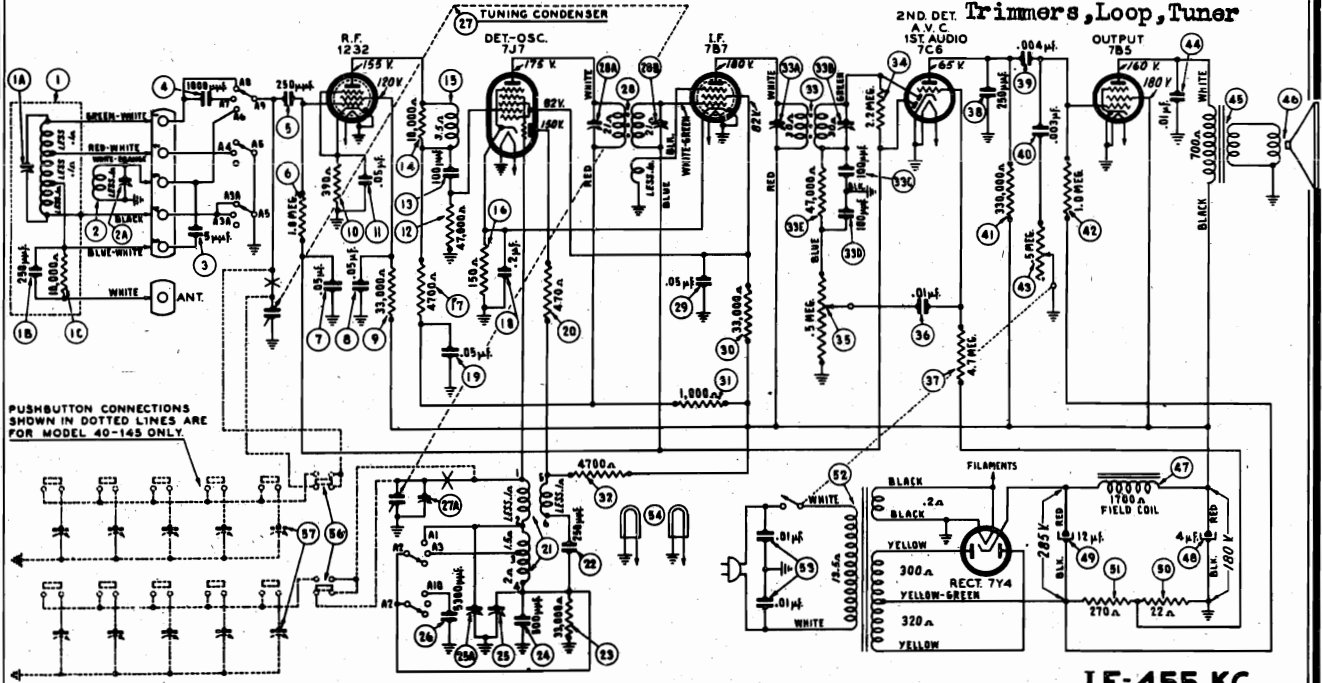

PUSHBUTTON CONNECTIONS SHOWN IN DOTTED LINES ARE FOR MODEL 40-145 ONLY.

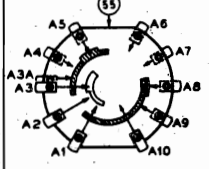


SWITCH SHOWN FROM REAR OF CHASSIS, BOTTOM VIEW, IN POSITION No. 1 B'CAST. SHADED AREA INDICATES RING AT FRONT OF SWITCH WAFER. UNSHADED AREA INDICATES RING AT REAR OF SWITCH WAFER.

DIRECTION OF ROTATION FROM REAR OF SWITCH



INSTALLATION OF DRIVE CORDS. POINTER AT LOW FREQUENCY END OF DIAL GANG CLOSED.

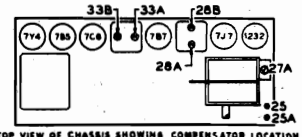

I.F.: 455 KC.

Replacement Parts

Schematic Diagram Model 40-140 & 40-145

SCHE. No.	DESCRIPTION	PART No.
1	Loop Assembly (Broadcast)	38-8892
1A	Compensator	31-13118
1B	Mica Cond. (250 mmfd.)	61-0033
1C	Resistor (10,000 ohms, 1/2 watt)	33-10339
2	Loop Assembly (Short Wave)	38-8893
2A	Compensator	31-8320
3	Mica Cond. (15 mmfd.)	30-1087
4	Mica Cond. (1000 mmfd.)	30-1083
5	Mica Cond. (250 mmfd.)	61-0033
6	Resistor (1.0 meg, 1/2 watt)	33-10339
7	Tubular Cond. (.05 mfd.)	30-4518
8	Tubular Cond. (.05 mfd.)	30-4518
9	Resistor (33,000 ohms, 1/2 watt)	33-33339
10	Resistor (390 ohms, 1/2 watt)	33-139331
11	Tubular Cond. (.05 mfd.)	30-4518
12	Resistor (47,000 ohms, 1/2 watt)	33-347339
13	Mica Cond. (100 mmfd.)	30-4518
14	Resistor (10,000 ohms, 1/2 watt)	33-10339
15	R. F. Transformer	32-3194
16	Resistor (150 ohms, 1/2 watt)	33-15331
17	Resistor (4700 ohms, 1/2 watt)	33-247339
18	Tubular Cond. (.2 mfd.)	30-4526
19	Tubular Cond. (.03 mfd.)	30-4518
20	Resistor (470 ohms, 1/2 watt)	33-147339
21	Oscillator Transformer	32-3194
22	Mica Cond. (250 mmfd.)	61-0033
23	Resistor (33,000 ohms, 1/2 watt)	33-33339
24	Silver Res. Cond. (500 mmfd.)	30-1134
25	Compensator (2 section)	31-8317
26	Mica Cond. (3300 mmfd.)	30-1134
27	Tuning Condenser	31-8318
28	1st I. F. Trans. Assy.	32-3210
29	Tubular Cond. (.03 mfd.)	30-4518
30	Resistor (33,000 ohms, 1/2 watt)	33-33339
31	Resistor (1,000 ohms, 1/2 watt)	33-210339
32	Resistor (4700 ohms, 1/2 watt)	33-247339
33	2nd I. F. Trans. Assy.	32-3221
34	Resistor (.2 meg, 1/2 watt)	33-522339
35	Volume Control (.01 mfd.)	30-4872
36	Tubular Cond. (.01 mfd.)	30-4872
37	Resistor (4.7 meg, 1/2 watt)	33-47339
38	Mica Cond. (250 mmfd.)	61-0033
39	Tubular Cond. (.004 mfd.)	30-4876
40	Resistor (1.0 meg, 1/2 watt)	33-10339
41	Resistor (330,000 ohms, 1/2 watt)	33-433339
42	Resistor (1.0 meg, 1/2 watt)	33-10339
43	Tone Control (.5 meg, & On-Off Switch)	33-8333
44	Tubular Cond. (.01 mfd.)	30-4872
45	Output Transformer	32-8063
46	Cone and Voice Coil Assy. (Sphr. Part No. 38-1478-3)	38-4088
47	Field Coil (Replace Sphr. Part No. 38-1478)	30-2401
48	Electric Cond. (.8 mfd., 400 V.)	30-2409
49	Resistor (22 ohms, 1 watt)	33-2231
50	Resistor (270 ohms, 1 watt)	33-127431
51	Power Trans. (115 V., 80-80 cycles)	34-060

JUNE, 1939.

FOR OTHER DATA SEE INDEX

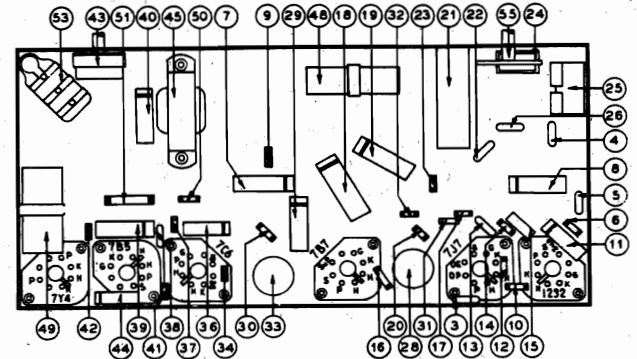


FIG. 1. PART LOCATIONS, UNDERSIDE OF CHASSIS.

DESCRIPTION	PART No.
Line Condenser (.01-.01 mfd.)	3903-000
Pilot Lamps	34-300
Wave Switch	42-1485
Push Button Switch (Model 40-145 only)	42-1328
Padder Strip (Model 40-145 only)	31-318

MISCELLANEOUS PARTS	DESCRIPTION	PART No.
Cable and Plug Assy. (Power Supply)	L-3199	
Cabinet (Model 40-140)	10385A	
Cabinet (Model 40-145)	10385B	
Clip (Reg. Osc. Coil)	21-3399	
Drive Cord Assy. (Pointer)	21-3400	
Drive Cord Assy. (Tuning Cond.)	21-3401	
Dial Escutcheon (Pushbuttons, Model 40-145)	27-8107	
Escutcheon (Pushbuttons, Model 40-145)	28-5742	
Escutcheon Pin (Model 40-145)	W-1074	


DESCRIPTION	PART No.
Insulating Bushing (Drive Shaft)	27-9437
Knobs (Tuning, Tone, Vol., Wave Switch)	27-4332
Knobs (Pushbuttons, Model 40-145)	27-4324
Pilot Lamp Socket Assy.	38-8904
Pointer	38-1532
Rubber Bushing (Tuning Cond. Drive)	27-9432
Spring (Tuning, Drive Cord)	28-8751
Spring (Pointer, Drive Cord)	28-8953
Spring (Tuning Shaft Assy.)	28-8925
Speaker	38-1478
Sockets (Lokalt Tubes)	35-0575
Tuning Shaft	36-6052
Tuning Drive Drum Assy.	38-8883
Tab (Dial, Model 40-145)	27-5226
Tab (Television, Model 40-145)	27-9450
Tab Kit (Model 40-145)	40-8473
Washer ("C" Type, Tuning Shaft)	28-2043

PHILCO BUILT-IN SUPER AERIAL SYSTEM:

Included in the built-in super aerial system is a statically shielded loop for broadcast band reception and a short wave receiving loop. A feature of the built-in broadcast band statically shielded loop is that the receiver may be turned to the position in which it picks up a minimum amount of interference, or if interference is not present the receiver may be set in the position where best reception is obtained. In addition, other features of design are: Three tuning ranges; special high gain R. F. stage; Philco high-efficiency Lokalt tubes; automatic volume control, tone control and a Beam power audio output stage. In general, these models are similar but differ in their tuning mechanisms and cabinets. Model 40-140 is dial tuned and assembled in cabinet type "T" (Table model). Model 40-145 is equipped with six electric push buttons for automatically selecting stations in addition to dial tuning. Five push buttons are used for stations one of which can be APPLIES TO MODEL 40-507 ALSO

used in combination with special type PHILCO TELEVISION receivers for reception of television sound programs. The sixth push button selects dial tuning. The procedure for adjusting the push buttons to broadcast stations is the same as that contained in volume ten. The frequency coverage of each push button is as follows:
540 to 1030 K. C. 740 to 1300 K. C.
650 to 1100 K. C. 900 to 1470 K. C.
1160 to 1600 K. C.
Philco television sets and record players contain information for adjusting the push button on the 40-145.
* TUNING RANGES:
540 to 1550 K. C. 1.5 to 3.3 M. C. 5.7 to 18.0 M. C.
INTERMEDIATE FREQUENCY: 455 K. C.
POWER SUPPLY: 115 volts A. C., 60 cycle.
POWER CONSUMPTION: 38 watts.
AUDIO OUTPUT: 2 watts.
PHILCO TUBES USED: 1232, R. F.; 7J7, converter; 7B7, I. F.; 7C6, second detector, AVC and first audio; 7B5, audio output and 7Y4, rectifier.

MODEL 40-165
Schematic, Voltage, Chassis PHILCO RADIO & TELEV. CORP.
Trimmers, Notes

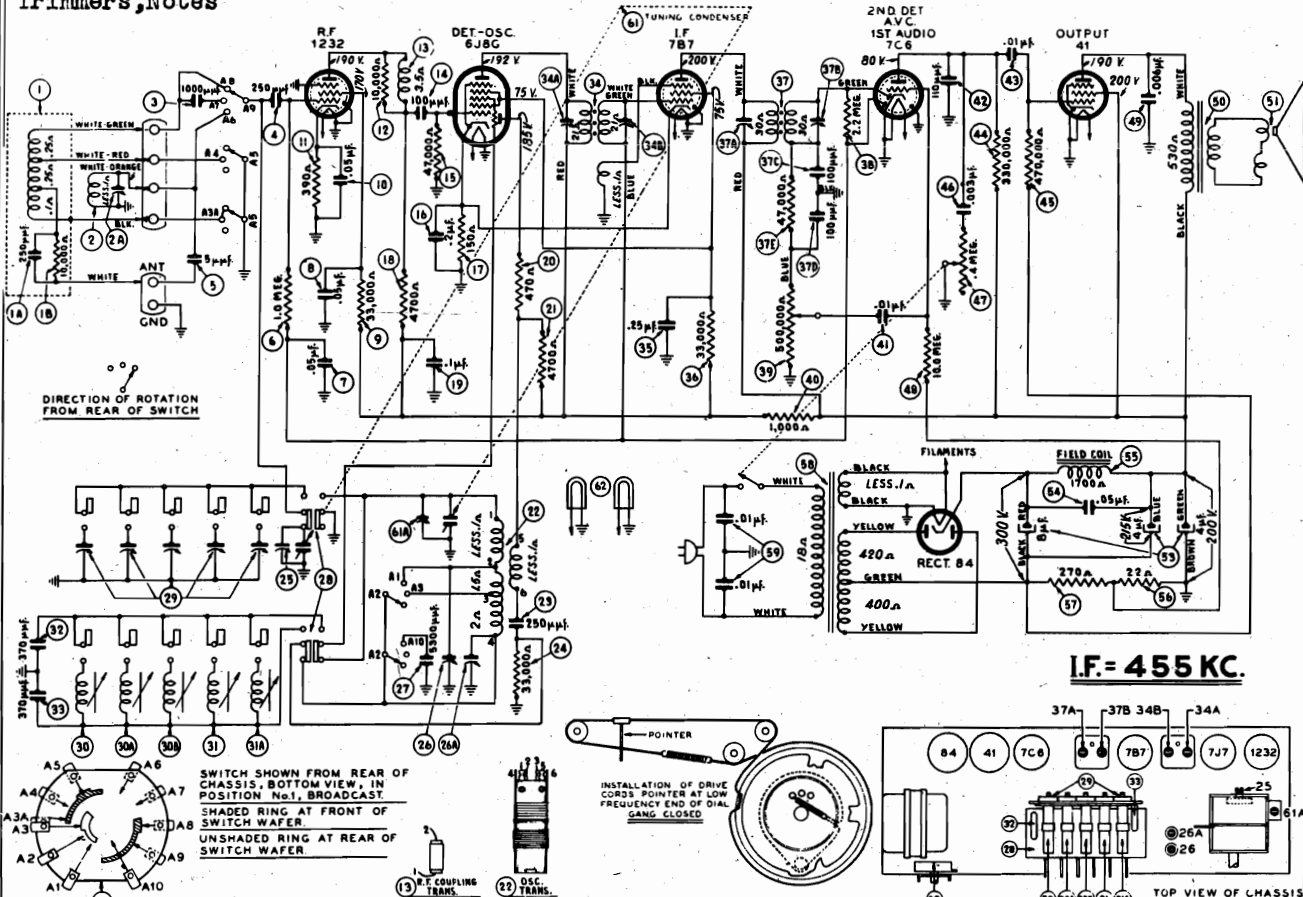

Replacement Parts — Model 40-165

SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.	SCHE. No.	DESCRIPTION	PART No.
1A	Loop Assy. (Broadcast)	38-9895	54	Tubular Cond. (.05 mfd.)	30-4123		Knobs (Tuning, Tone, Volume, Wave Switch)	27-4332
1B	Mica Cond. (.250 mmfd.)	61-0033	55	Field Coil (Replace Spkr. Part No. 36-1480)	33-022331		Pilot Lamp Socket Assy.	38-9308
2	Resistor (10,000 ohms, 1/2 watt)	33-310339	56	Resistor (22 ohms, 1/2 watt)	33-127439		Pointer	36-1479
2A	Loop Assy. (Short Wave)	38-9896	57	Resistor (270 ohms, 1 watt)	33-8055		Rubber Hose (Tuning Cond. Drive)	27-9432
3	Compensator (of S.W. Loop)	30-1063	58	Power Trans. (115 volt, 60 cycle)	38-03-50		Spring (Tuning, Drive Card)	28-8953
3A	Mica Cond. (.1000 mmfd.)	61-0033	59	Line Cond. (.01-.01 mfd.)	42-1495		Spring (Pointer, Drive Card)	28-8955
4	Mica Cond. (.250 mmfd.)	20-1143	60	Wave Switch	34-2064		Washer (Bezel Mtg.)	36-1480
5	Mica Cond. (.5 mmfd.)	33-510339	61	Tuning Cond. (.01 mfd.)	27-4824		Speaker	36-1480
6	Resistor (1.0 meg., 1/2 watt)	30-4819	62	Pilot Lamps			Socket (Type 41 Tube)	27-6036
7	Tubular Cond. (.05 mfd.)	33-333339					Socket (Type 84 Tube)	27-6131
8	Tubular Cond. (.05 mfd.)	33-333339					Socket (Type 6J80 Tube)	27-6120
9	Resistor (33,000 ohms, 1/2 watt)	33-333339					Socket (Loktal, Type 1232, 7B7, 706 Tube)	27-8528
10	Tubular Cond. (.05 mfd.)	33-310339					Tab (Dial)	27-9451
11	Resistor (390 ohms, 1/2 watt)	33-115339					Tab (Television)	40-6474
12	Resistor (10,000 ohms, 1/2 watt)	33-247339					Tab Kit	38-9552
13	R. F. Coupling Trans.	30-1128					Tuning Shaft	38-9853
14	Mica Cond. (.100 mmfd.)	33-347339					Tuning Drive Drum Assy.	28-2043
15	Resistor (47,000 ohms, 1/2 watt)	30-4587						
16	Tubular Cond. (.2 mfd.)	33-115339						
17	Resistor (150 ohms, 1/2 watt)	33-247339						
18	Resistor (4700 ohms, 1/2 watt)	30-4827						
19	Tubular Cond. (.1 mfd.)	33-147339						
20	Resistor (470 ohms, 1/2 watt)	33-219339						
21	Resistor (250 ohms, 1/2 watt)	32-3195						
22	Mica Cond. (.250 mmfd.)	33-333339						
23	Resistor (33,000 ohms, 1/2 watt)	31-8308						
24	Compensator (Single)	31-302						
25	Compensator (2 section)	30-1134						
26	Mica Cond. (.5300 mmfd.)	42-1493						
27	Push Button Switch	31-8325						
28	Fader Strip and Bracket Assy.							
30	Coil No. 1 (540-1000 K.C.)	32-3042						
30A	Coil No. 2 (650-1100 K.C.)							
30B	Coil No. 3 (740-1300 K.C.)							
31	Coil No. 4 (900-1500 K.C.)							
31A	Coil No. 5 (1100-1800 K.C.)							
32	Silver Mica Cond. (.270 mmfd.)	30-1110						
33	Silver Mica Cond. (.370 mmfd.)	32-3210						
34	1st I. F. Trans. (.270 mfd.)	33-333339						
35	Tubular Cond. (.05 mfd.)	32-3211						
36	Resistor (33,000 ohms, 1/2 watt)	33-523339						
37	2nd I. F. Trans. (.270 mfd.)	33-5219						
38	Resistor (2.2 meg., 1/2 watt)	33-523339						
39	Volume Control (500,000 ohms)	30-4572						
40	Resistor (1000 ohms, 1/2 watt)	30-1130						
41	Tubular Cond. (.01 mfd.)	33-433339						
42	Mica Cond. (.110 mmfd.)	33-433339						
43	Tubular Cond. (.2 mfd.)	33-433339						
44	Resistor (330,000 ohms, 1/2 watt)	30-4469						
45	Resistor (470,000 ohms, 1/2 watt)	33-5333						
46	Tubular Cond. (.003 mfd.)	33-510339						
47	Tone Control and On-Off Switch (4 meg.)	32-4804						
48	Resistor (15.0 ohms, 1/2 watt)	32-8056						
49	Tubular Cond. (.006 mfd.)	32-4088						
50	Output Trans. (Sptr. Part No. 36-1480-3)	30-2400						
51	Cone and Voice Coil Assy.							
53	Electrolytic Cond. (4-4-8 mfd.)							

FIG. 1. PART LOCATIONS, UNDERSIDE OF CHASSIS.

PHILCO BUILT-IN SUPER AERIAL SYSTEM:
Included in the built-in super aerial system is a statically shielded loop for broadcast band reception and a short wave receiving loop. The feature of the built-in broadcast band statically shielded loop is that it may be turned to the position in which it picks up a minimum amount of interference, or if interference is not present the loop may be set in the position where best reception is obtained.

POWER SUPPLY: 115 Volts, 25 and 60 Cycle A. C.

POWER CONSUMPTION: 45 watts.

FREQUENCY TUNING RANGES: (Three)
540 to 1550 K. C. 1.5 to 3.5 M. C. 6.0 to 18.0 M. C.

INTERMEDIATE FREQUENCY: 455 K. C.

AUDIO OUTPUT: 2 watts.

PHILCO TUBES USED: 1232, R. F.; 6J8G, Converter; 7B7, I. F.; 7C6, Second Detector, A. V. C. and First Audio; 41, Audio Power Output; 84, Rectifier.

CABINET DIMENSIONS: Type F; Height, 37"; Width, 23 3/4"; Depth, 9 3/4".

ADJUSTING ELECTRIC PUSH-BUTTON TUNING:
The procedure for adjusting the electric tuning push-buttons in this model is covered in **vol. X, Philco page 10-16.**

MODEL 40-205
 MODEL 40-216
 MODEL 40-510
 MODEL 40-516

PHILCO RADIO & TELEV. CORP.
Models 40-205, 40-216
 and MODELS 40-510, 40-516.

Wireless Remote Control
 Adjustments, Notes

ⓐ **Model 40-205, 510.**

TYPE CIRCUIT: Model 40-205, code 121, is a 12-tube wireless remote control and dial tuned receiver employing a super-heterodyne circuit for reception of standard broadcast stations. Eight broadcast stations can be automatically tuned in from the remote control unit. The wireless remote control unit also increases and decreases volume and turns off the set without any connections between the receiver and the control unit. This model is also designed to receive the sound of a television program tuned in by Philco Television sets.

PHILCO BUILT-IN SUPER AERIAL SYSTEM:

A new type aerial system which eliminates an outside aerial is also incorporated in this model. Included in the built-in super aerial system is a statically shielded loop for broadcast band reception. The feature of the built-in broadcast band statically shielded loop is that it may be turned to the position in which it picks up a minimum amount of interference or if interference is not present, the loop may be set in the position where best reception is obtained.

In addition, other features of design are automatic volume control, continuously variable tone control, base compensation, degenerated push pull pentode audio output.

POWER SUPPLY: 115 Volts, 50 to 60 Cycles, A. C.

POWER CONSUMPTION: 180 watts. (Model 40-205 only)

TUNING RANGES: 540 to 1600 K. C.

I. F. FREQUENCY: 470 K. C.

PHILCO TUBES USED: Receiver—7C7, F. R. Amplifier; 6J8G, First Detector Oscillator; 78, I. F. Amplifier; 6Q7G, Second Detector, A. V. C. and First Audio; two (2) 42 Audio Output, and one 80 Rectifier.

Wireless Remote Control Amplifier—78, First Control Amplifier; 6J7G, Second Control Amplifier; A. V. C.; 6ZY5G, A. V. C. and a 2A4G Thyatron Rectifier.

Wireless Remote Control Unit—One type 30.

AUDIO OUTPUT: 10 watts.

(Model 40-205 only)

CABINET DIMENSIONS:	Height	Width	Depth
Console	38	30	15 1/2
Wireless Remote Control	5 1/2	7 1/2	9 1/2

Model 40-510 is a radio-phonograph combination assembled in a console cabinet consisting of a 12 tube, wireless remote control superheterodyne radio receiver and a Deluxe Inter-Mix Record Changer.

ⓑ **Model 40-216, 516.**

TYPE CIRCUIT: Model 40-216, code 121, is a 14-tube wireless remote control and dial tuned receiver employing a super-heterodyne circuit with three tuning ranges for reception of standard and short wave broadcast stations. Eight broadcast stations can be automatically tuned in from the remote control unit. The wireless remote control unit also increases and decreases volume and turns off the set without any connections between the receiver and the control unit. This model is also designed to receive the sound of a television program tuned in by Philco Television sets. A Philco wireless record player can also be set up for use with this receiver.

PHILCO BUILT-IN SUPER AERIAL SYSTEM:

A new type aerial system which eliminates an outside aerial is also incorporated in this model. Included in the built-in super aerial system is a statically shielded loop for broadcast band reception and a short wave receiving loop. The feature of the built-in broadcast band statically shielded loop is that it may be turned to the position in which it picks up a minimum amount of interference or if interference is not present, the loop may be set in the position where best reception is obtained.

In addition other features of design are automatic volume control, continuously variable tone control, base compensation, degenerated push pull pentode audio output. Outside aerial connections are also provided for remote localities where station signal strength is exceptionally weak.

POWER SUPPLY: 115 Volts, 50 to 60 Cycles, A. C.

POWER CONSUMPTION: 190 watts. (Model 40-216 only)

TUNING RANGES: 540 to 1600 K.C., 1.6 to 4.5 M.C., 6.0 to 18.0 M.C.

I. F. FREQUENCY: 470 K. C.

PHILCO TUBES USED: Receiver—6J7G, R. F. Amplifier; 6A8G, Converter; 78, I. F. Amplifier; 6Q7G, Second Detector, A. V. C. and First Audio; 37, Phase Inverter; two 42 Audio Output, and one 80, Rectifier.

Wireless Remote Control Amplifier—78, First Control Amplifier; 6J7G, Second Control Amplifier; 6J5G, A. V. C., 6ZY5G and 2A4G, Rectifier.

Wireless Remote Control Unit—1 type 30 tube.

AUDIO OUTPUT: 10 watts.

Model 40-516 is a radio-phonograph combination assembled in a console cabinet consisting of a 14 tube, wireless remote control superheterodyne radio receiver and a Deluxe Inter-Mix Record Changer.

ADJUSTMENT OF WIRELESS REMOTE CONTROL CIRCUITS

Models 40-205, 40-216 and 40-510, 40-516.

ADJUSTING CONTROL FREQUENCY AMPLIFIER

The wireless remote control models are shipped with 5 different control frequencies which range from 350 to 400 K. C. These frequencies are identified by code numbers appearing on the serial number ticket and on the rear of the chassis. The code numbers and frequencies are as follows:

- Code 5.....355 K. C. Code 7.....375 K. C.
- Code 6.....367 K. C. Code 8.....383 K. C.
- Code 9.....395 K. C.

The purpose of the different control frequencies is to prevent interaction between two or more wireless remote control models which are on the same floor or exceptionally close together. When several wireless remote control models are to be located close together, it will be necessary to use different control frequencies. These frequencies should be 20 K. C. apart. For example, if three models are to be operated at the same time and are closely situated, it will be advisable to adjust the control frequency of the first set to 355 K. C., the second set to 375 K. C., and the third set to 395 K. C.

In order to realign or change the control frequency of these models, the following equipment is required:

1. Philco Model 077 signal generator with a loop attached to the output terminal. (A few turns of wire 12 inch in diameter).
2. Philco wireless remote control aligning adapter. Part No. 45-2769.
3. Philco aligning screw driver, Part No. 45-2610.

With this apparatus the control frequency is adjusted as follows:

1. Remove the 2A4G control tube from its socket and replace with the aligning adapter. Connect the red lead of the aligning adapter to the positive terminal of the vacuum tube voltmeter. The black lead of the adapter is connected to the negative terminal of the vacuum tube voltmeter.
2. Remove the 78 control amplifier tube, its shield and the shield of the 6J7G tube. Apply power to the set and turn the range selector disc to "remote".
3. Attach the "high" side of the signal generator output to the grid of the 6J7G tube. Set the generator modulation

control to "mod on" and turn the attenuator control about one-fourth on.

4. The control frequency to which the control amplifier is tuned can now be determined by tuning the signal generator between 350 and 400 K. C. When the signal generator is tuned to the control frequency, the vacuum tube voltmeter will show maximum deflection. If this frequency is to be used, leave the signal generator at this point or turn the indicator to any other frequency desired between 350 and 400 K. C.

5. After the control frequency has been found or changed, compensators (103A), (103B) Model 40-216; and (74A), (74B) Model 40-205 are adjusted for maximum indication on the vacuum tube voltmeter.

6. After adjusting this circuit, replace the 78 tube and shields in their sockets and remove the signal generator lead from the grid of the 6J7G tube.

7. Place the small loop mentioned above into the "high" and "ground" of the signal generator output terminals and place the signal generator near the secondary inductor loop in the bottom of the cabinet. When doing this, do not disturb the setting of the signal generator indicator. Turn the sensitivity control located on the right rear of the chassis toward the position marked "extreme" then adjust compensators (119), (115) Model 40-216; (90), (85) Model 40-205 for maximum reading on the vacuum tube voltmeter.

8. Next adjust the secondary inductor loop compensator (121) in the Model 216 and (92) Model 205 located in the bottom of the cabinet. This compensator is encased in a cardboard container that is attached to one corner of a loop. Extreme care should be used in adjusting the compensator to the exact point of resonance as the secondary inductor is a very sharply tuned circuit.

9. If the vacuum tube voltmeter pointer goes off scale when adjusting the compensators, turn the attenuator control of the signal generator toward the "off" position. After these compensators are adjusted to maximum, the control amplifier is tuned to the frequency selected.

PHILCO RADIO & TELEV. CORP.

MODEL 40-205
 MODEL 40-216
 MODEL 40-510
 MODEL 40-516
 Alignment
 Remote Cont. Notes

**ALIGNING OF COMPENSATING CONDENSERS
 EQUIPMENT REQUIRED**

- (1) **Signal Generator.** In order to properly adjust this receiver a calibrated signal generator such as Philco Model 077 is required. This signal generator covers a frequency range of 540 to 36,000 K. C.
- (2) **Indicating Device.** To obtain maximum signal strength and accurate adjustment of the padders a vacuum tube volt-

meter and circuit tester such as Philco Models 027 and 028 is recommended. These testers also contain an audio output meter which may be used as an indicating device.

- (3) **Aligning Tools.** Fiber handle screw driver Philco Part No. 45-2610. When using the vacuum tube voltmeter for adjusting the set, an aligning adaptor Part No. 45-2767 is required.

CONNECTING ALIGNING INSTRUMENTS

VACUUM TUBE VOLTMETER: To use the vacuum tube voltmeter as an aligning indicator it should be connected to the A. V. C. circuit as follows:

- 1. Connect the negative (—) terminal of the voltmeter through a 2 meg. resistor to the converter grid (6J8G) Model 205; (6A8G) Model 216. The resistor must be connected directly to the grid of the tube and the voltmeter wire attached to the resistor.
- 2. Connect the positive (+) terminal to the chassis ground terminal.

AUDIO OUTPUT METER: If this type of meter is used as an aligning indicator, it should be connected to the plate terminals of the 42 tubes. Adjust the meter for the 0 to 30 volt A. C. scale.

After connecting the aligning meter, adjust the compensators

in the order as shown in the tabulation below. Locations of the compensators are shown in Fig. 6 and 7, page No. 6. If the output meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.

SIGNAL GENERATOR: When adjusting the I. F. padders, the high side of the signal generator is connected through a .1 mfd. condenser to terminal No. 1 of the loop terminal panel at the rear of the chassis. The ground or low side of the signal generator is connected to the chassis of the receiver.

When aligning the R. F. padders a loop antenna is made from a few turns of wire and connected to the signal generator output terminals; the loop is then placed two or three feet from the loop in the cabinet. Do not remove the receiver loop from the cabinet. It is necessary when adjusting the padders, that the receiver be left in the cabinet.

Receiver Circuit Adjustments — Model 40-216 and MODEL 40-516.

Operation	SIGNAL GENERATOR		RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Setting	Adjust Compensators	
1	78 I. F. Grid	470 K.C.	580 K.C.	Vol. Max. Range Switch "Brdcst"	38A, 38B	Turn Out 33B Full
2	6A8G Det. Osc. Grid	470 K.C.	580 K.C.	Vol. Max. Range Switch "Brdcst"	33C, 33A, 33B	Note A
3	Use Loop on Generator	18.0 M.C.	18.0 M.C.	Vol. Max. Range Switch "Short Wave"	22B, 124A, 2A	Note C, Note D
4	Use Loop on Generator	1500 K.C.	1500 K.C.	Vol. Max. Range Switch "Brdcst"	22, 13X, 3X	Note A
5	Use Loop on Generator	580 K.C.	580 K.C.	Vol. Max. Range Switch "Brdcst"	23	Rollgang
6	Use Loop on Generator	1550 K.C.	1550 K.C.	Vol. Max. Range Switch "Brdcst"	22	
7	Use Loop on Generator	3.5 M.C.	3.5 M.C.	Vol. Max. Range Switch "Police"	22A	Note B

Receiver Circuit Adjustments — Model 40-205 and MODEL 40-510.

Operation	SIGNAL GENERATOR		RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Setting	Adjust Compensators	
1	78 Grid	470 K.C.	580 K.C.	Vol. Max. Range Switch "Brdcst"	14A, 14B	Turn Out 13B Full
2	6J8G Grid	470 K.C.	580 K.C.	Vol. Max. Range Switch "Brdcst"	13A, 13C, 13B, 14A	
3	Loop	1500 K.C.	1500 K.C.	Vol. Max. Range Switch "Brdcst"	95B, 95A	Note A
4	Loop	580 K.C.	580 K.C.	Vol. Max. Range Switch "Brdcst"	7	Rollgang when Adjusting Padder
5	Loop	1500 K.C.	1500 K.C.	Vol. Max. Range Switch "Brdcst"	95B, 95A	Note B

NOTE A — Dial Calibration: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum capacity), set the dial pointer on the extreme left index line at the low frequency end

of the broadcast scale. The arrangement of the drive cable and dial pointer in shown in Fig. 5.

NOTE C — If two peaks (signals) are observed on the aligning meter when adjusting the oscillator padder No. 22A tune the padder to the second peak from the maximum capacity position (screw all the way in).

NOTE D — If two peaks (signals) are observed on the aligning meter when adjusting the R. F. and loop padders 124A and 2A, tune the padders to the first peak signal from the maximum capacity position (screw all the way in). When adjusting the padders to this first peak roll the tuning condenser (rock) slightly back and forth to obtain the maximum readings on the aligning meter.

NOTE B — See Remote Control Amplifier adjustments.

ADJUSTING WIRELESS REMOTE CONTROL UNIT

The wireless remote control unit is now adjusted to the control frequency of the amplifier as follows:

- 1. Turn off the signal generator, then dial any one of the stations indicated on the remote control unit by pulling the selector to the stop position; release the selector and at the same time press the stop down and hold it in this position.
- 2. Now bring the wireless remote control unit close to the receiver. Using a padding wrench, Philco Part No. 3164, tune the compensator (127) Fig. 3, located on the bottom of the remote control unit until a maximum voltage reading is indicated on the vacuum tube voltmeter. When tuning this compensator, it should be done very slowly so as not to pass over the frequency to which the control amplifier is tuned.

3. After adjusting the compensator with the sensitivity control on the receiver in the "extreme" position, the remote control unit is adjusted for maximum sensitivity by setting the sensitivity control in the "near" position and placing the remote control unit a few feet away from the receiver. The compensator (127) Fig. 3, is then adjusted again for maximum voltage reading of the vacuum tube voltmeter.

4. After making these adjustments, remove the aligning adapter from the socket and replace the 2A4G tube. The wireless remote control unit should now be adjusted to the same frequency as the control frequency in the receiver.

MODEL 40-205
 MODEL 40-510
 Chassis, Trimmers

PHILCO RADIO & TELEV. CORP.

Stepper Unit
 Adjustments

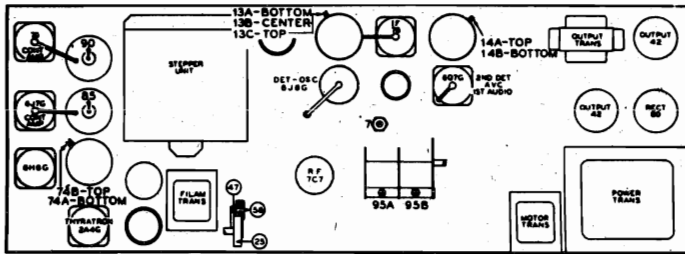


FIG. 6. LOCATIONS OF COMPENSATORS, MODEL 40-205.


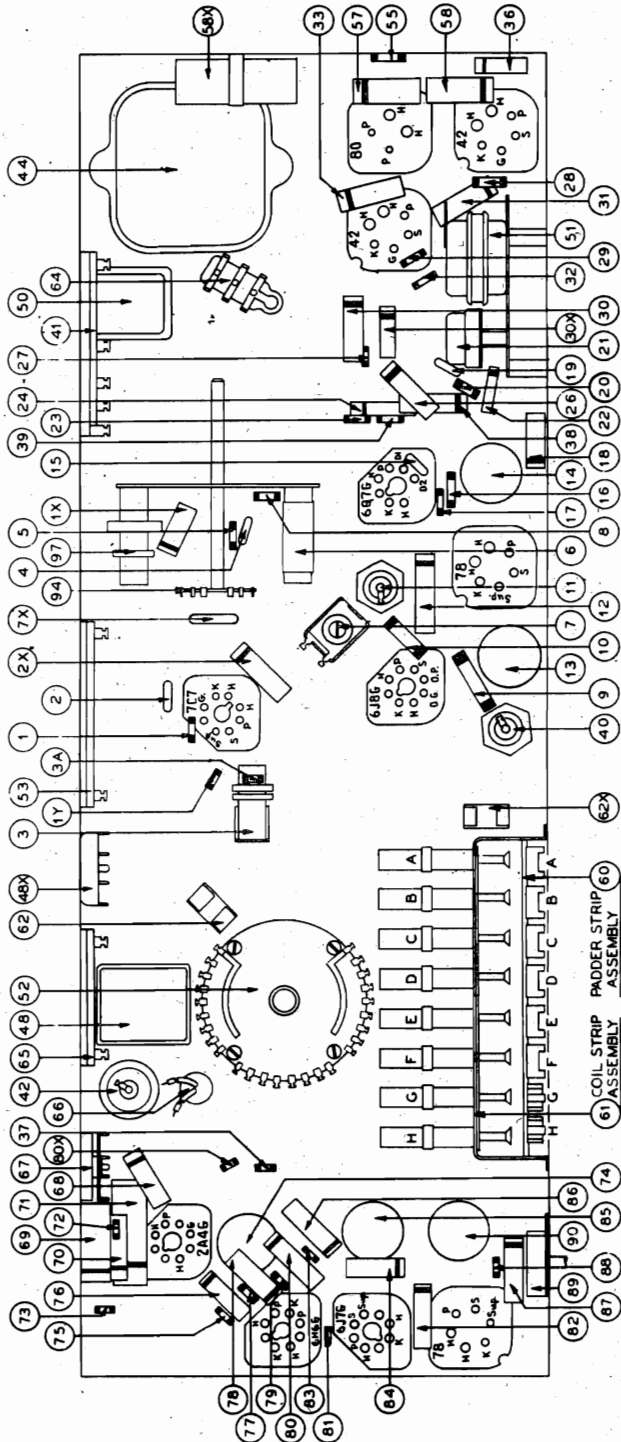


FIG. 1. LOCATIONS OF PARTS, UNDERSIDE OF CHASSIS.

Adjusting Wireless Remote Control for Reception of Stations

NOTE: In Model 40-510 No. 8 position is used for phonograph. This position is already connected and will not need adjustment. The procedure for setting up stations on the wireless remote control receivers is similar to the procedure in setting up Philco electric automatic tuning models. The eight push buttons, however, are automatically gated by the remote control unit instead of by pushing buttons. To set up stations on these models for best reception, a signal generator, Philco Model 077 and a vacuum tube voltmeter Philco Model 027 or 028 should be used. With this equipment proceed as follows:


1. Select and remove the desired eight station call letters from the large station tab card supplied with the receiver. Insert the station tabs in the apertures (windows) of the bezel. The lowest frequency station is placed in the first window on the left and the remaining station tabs in the order of increasing frequency. Turn "on" power switch.
2. Remove from the small call letter card the tab of the first low frequency station. Insert the tab in the third aperture on the right side of the bezel on the remote control unit dial. Trans-parent tabs are also supplied to be placed over each call letter. The remaining call letter tabs are then placed in the order of increasing frequency around the bezel from right to left (counter clock-wise).
3. Insert the loud and soft tabs in the first and second windows respectively on the right hand side of the bezel.
4. Connect the negative terminal of the vacuum tube voltmeter through a 2 meg. resistor to the grid of the 78 I. F. tube. The resistor must be connected directly to the grid of the tube and the voltmeter attached to the resistor at this point. Connect the positive terminal to the chassis ground terminal.
5. Attach a loop consisting of a few turns of wire to the output terminals of the Model 077 signal generator. Turn the signal generator modulation control to "mod on". Turn the receiver range selector switch to "Broadcast" and manually tune in the lowest frequency station desired. This station should be between 540 and 1030 K. C. The signal generator is then tuned to the frequency of the station being received. A beat note should then be heard when the volume control is turned on.
6. Turn the range selector disc of the receiver to "remote". Dial first low frequency station on the right side of the bezel of the remote control unit.
7. Using a padding screw driver, adjust the first 540 to 1030 K. C. "Osc" padder (bottom row of holes) at the left rear of the chassis, until the station identified by the modulated signal of the generator is tuned in to maximum on the vacuum tube voltmeter. Next adjust the first 540 to 1030 K. C. "Ant" padder (top row of holes) for maximum indication on the voltmeter.
8. Turn the signal generator off the station frequency and readjust the "Ant" and "Osc" padders with the station frequency and maximum reading on the voltmeter. This should be done with the volume control of the receiver adjusted for low volume. This procedure is repeated for each of the remaining stations to be set up. The next station to be set up should be within the frequency range of 540 to 1030 K. C. of the second set of padders. The third station is tuned in by the third set of padders and should be within a frequency range of 670 to 1160 K. C. The remaining stations are then set up in the order of increasing frequency.

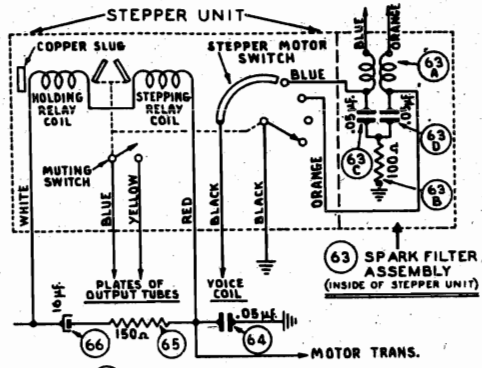

STEPPER UNIT COMPLETE

PHILCO RADIO & TELEV. CORP.

MODEL 40-216
Schematic, Voltage

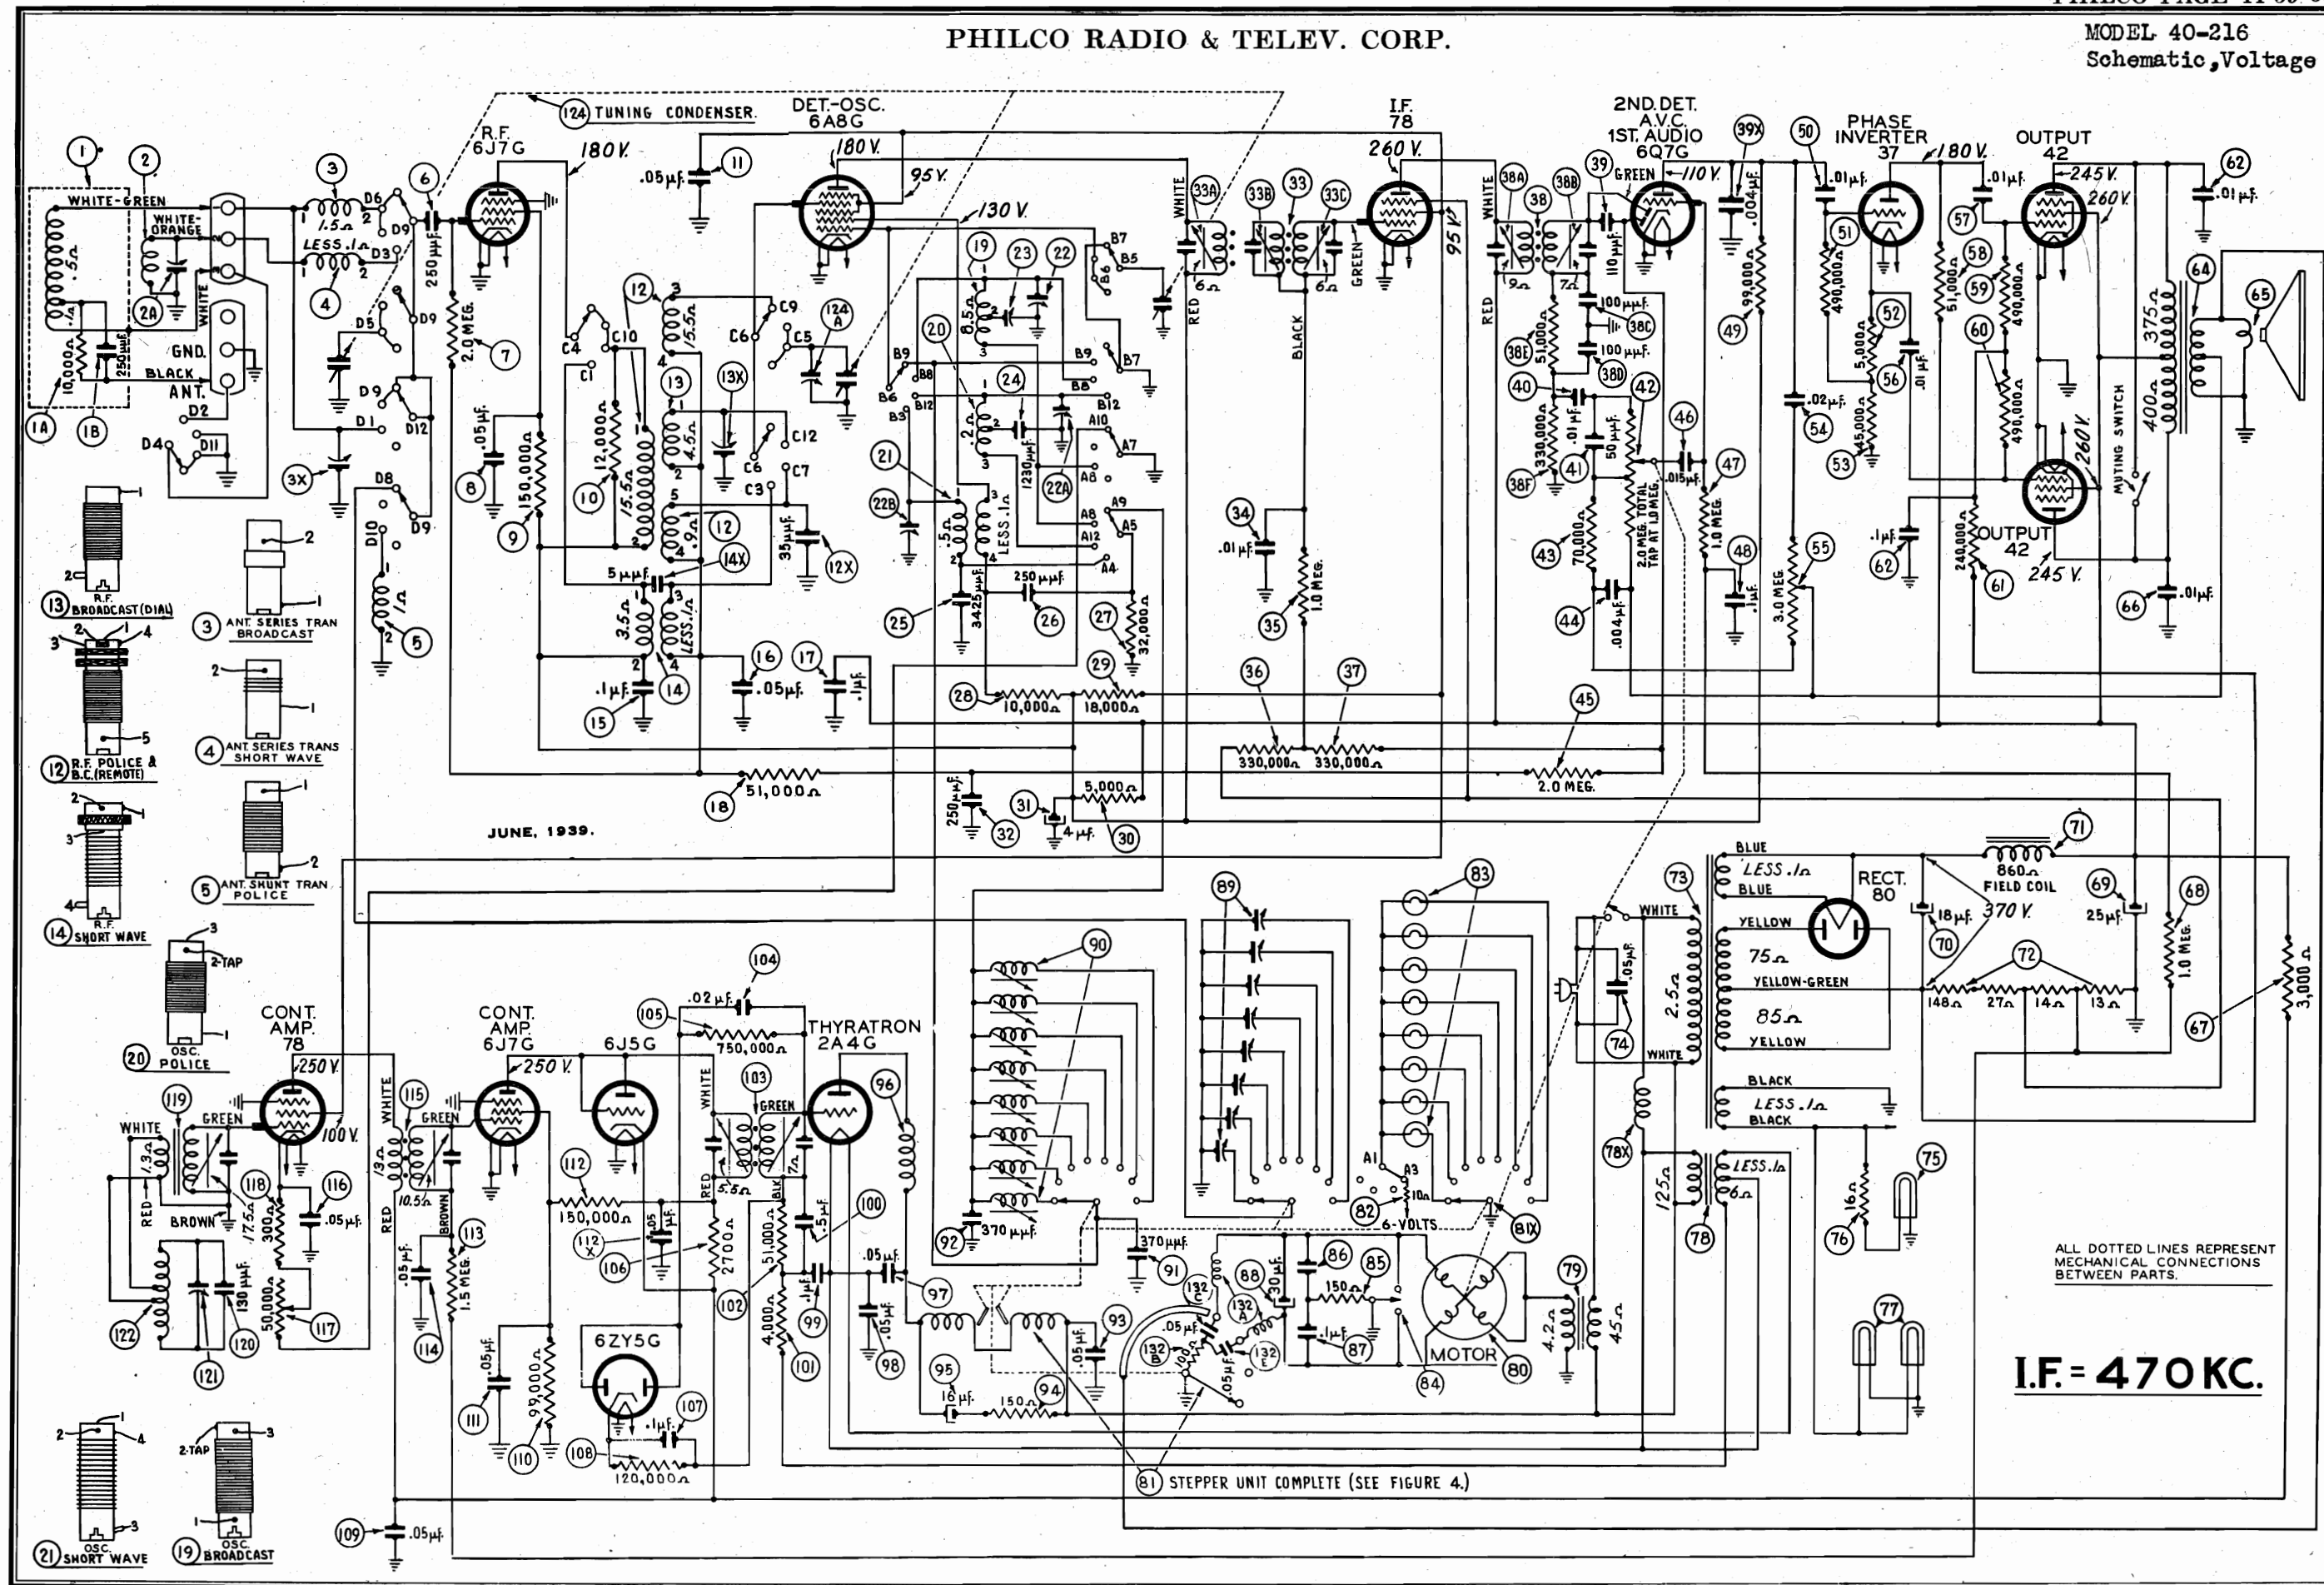

JUNE, 1939.

ALL DOTTED LINES REPRESENT
MECHANICAL CONNECTIONS
BETWEEN PARTS.

I.F. = 470 KC.

(81) STEPPER UNIT COMPLETE (SEE FIGURE 4.)

Chassis, Trimmers
Stepper Unit, Dial

PHILCO RADIO & TELEV. CORP.

MODEL 40-216
MODEL 40-516

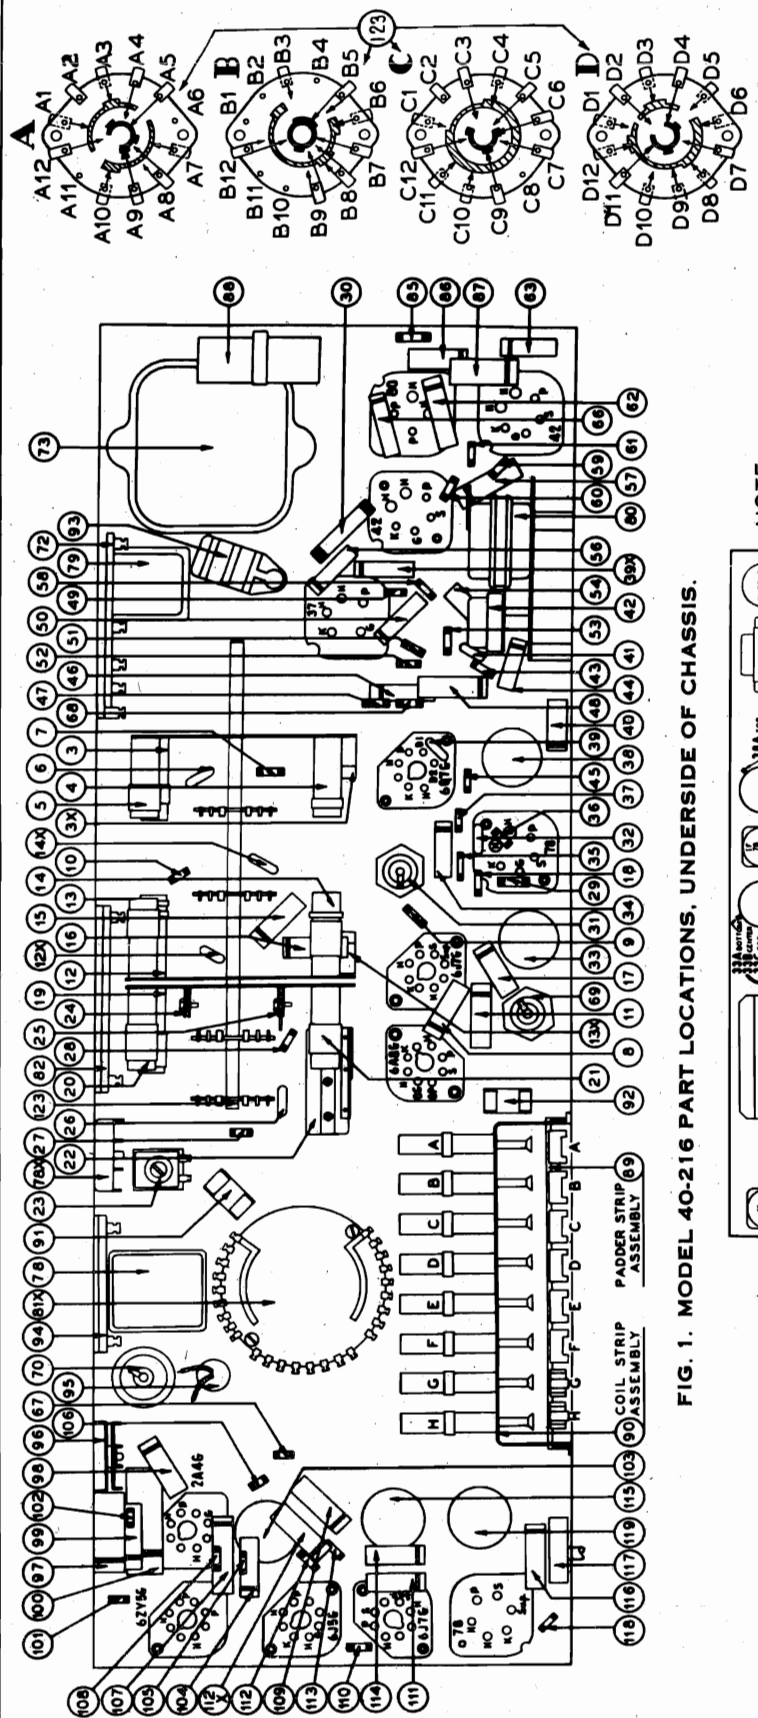


FIG. 1. MODEL 40-216 PART LOCATIONS, UNDERSIDE OF CHASSIS.

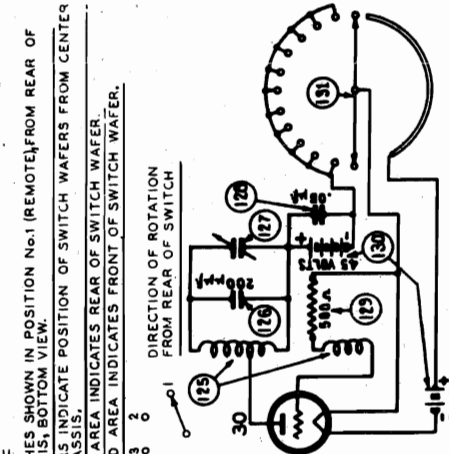


FIG. 3. WIRELESS REMOTE CONTROL UNIT SCHEMATIC DIAGRAM.

* In Model 40-516 No. 8 position is used for photograph. This position is already connected and will not need adjustment.

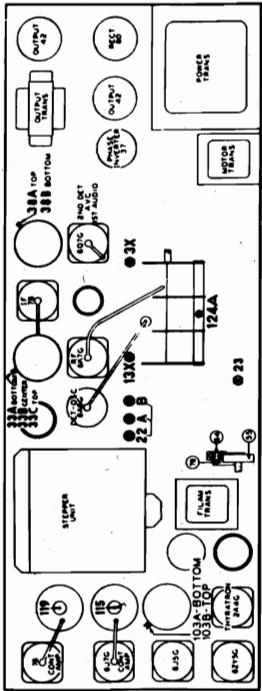


FIG. 7. LOCATIONS OF COMPENSATORS, MODEL 40-216.

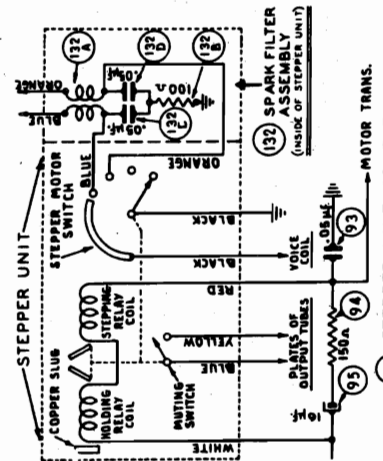


FIG. 2. INTERNAL WIRING OF STEPPER UNIT COMPLETE TO SCHEMATIC.

MODEL 40-205
MODEL 40-216

PHILCO RADIO & TELEV. CORP.

Parts Lists

Model 40-205

Table with 3 columns: SCHE. No., DESCRIPTION, PART No. Lists various electronic components and their part numbers for Model 40-205.

Replacement Parts

Table with 4 columns: SCHE. No., DESCRIPTION, PART No., and a second set of columns for MISCELLANEOUS PARTS. Lists replacement parts and miscellaneous parts for Model 40-205.

Replacement Parts

Model 40-216

Table with 3 columns: SCHE. No., DESCRIPTION, PART No. Lists various electronic components and their part numbers for Model 40-216.


Table with 4 columns: SCHE. No., DESCRIPTION, PART No., and a second set of columns for MISCELLANEOUS PARTS. Lists replacement parts and miscellaneous parts for Model 40-216.

WIRELESS REMOTE CONTROL UNIT

Table with 3 columns: SCHE. No., DESCRIPTION, PART No. Lists parts for the wireless remote control unit.

PHILCO RADIO & TELEV. CORP.


MODEL 40-88(121)
Schematic, Voltage
Chassis, Trimmers

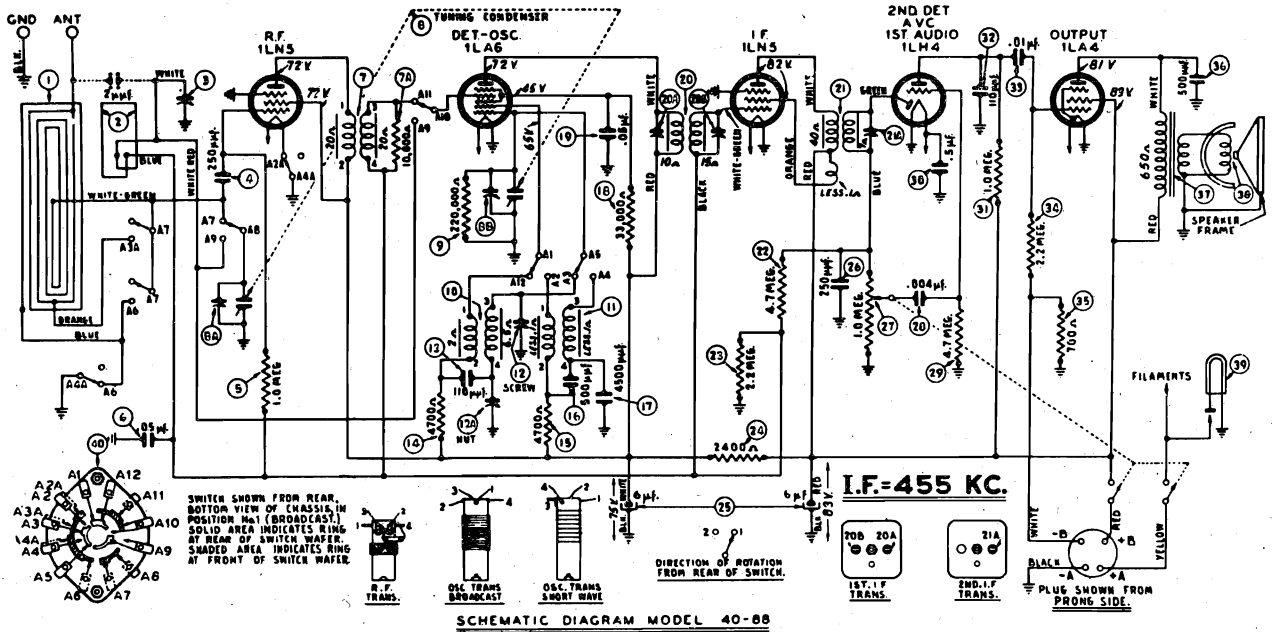

Replacement Parts — Model 40-88, Code 121

SCH. No.	DESCRIPTION	PART No.	SCH. No.	DESCRIPTION	PART No.
1	Loop Assembly (Broadcast)	38-8917	34	Resistor (2.2 meg., 1/2 watt)	33-522339
2	Loop Assembly (Short Wave)	38-8965	35	Resistor (700 ohms, 1/2 watt)	33-170339
3	Compensator	31-6288	36	Mica Condenser (500 mmfd.)	30-1114
4	Mica Condenser (250 mmfd.)	61-0033	37	Output Transformer	32-8096
5	Resistor (1.0 meg., 1/2 watt)	33-510339	38	Cone and Voice Coil Assembly (Speaker Part No. 36-1482-3)	36-1421
6	Tubular Condenser (.05 mfd.)	30-4519	39	Pilot Lamp	34-2246
7	R. F. Transformer Assembly	32-3219	40	Wave Switch	42-1499
7A	Resistor (10,000 ohms, 1/2 watt)	33-310339	MISCELLANEOUS PARTS		
8	Oscillator Transformer (Broadcast)	32-3249	27	Bezel	27-4855
9	Oscillator Transformer (Short Wave)	32-3220	104	Cabinet	104-4A
10	Resistor (220,000 ohms, 1/2 watt)	33-422339	28	Clip (Coil Mounting)	28-5002
11	Resistor (4700 ohms, 1/2 watt)	33-247339	29	Drive Cord Assembly	31-2380
12	Compensator	31-6100	27	Dial	27-1111
13	Mica Condenser (110 mmfd.)	30-1130	56	Flag (On-Off Indication)	56-1418
14	Resistor (4700 ohms, 1/2 watt)	33-247339	56	Flag Bearing	56-6045
15	Resistor (4700 ohms, 1/2 watt)	33-247339	28	Flag Spring	28-8947
16	Mica Condenser (500 mmfd.)	30-1114	38	Flag Cam and Hub Assembly	38-9861
17	Mica Condenser (4500 mmfd.)	30-1109	27	Gasket (Dial Mounting)	27-9472
18	Resistor (33,000 ohms, 1/2 watt)	33-333339	27	Knobs (Tuning, Volume and Wave Switch)	27-4862
19	Tubular Condenser (.05 mfd.)	30-4519	56	Operating Finger (Pilot Lamp)	56-1487
20	1st I. F. Transformer Assembly	32-3222	36	Pointer	36-1488
21	2nd I. F. Transformer Assembly	33-547339	27	Pushbutton (Pilot Lamp)	27-4844
22	Resistor (4.7 meg., 1/2 watt)	33-547339	36	Operating Finger (Pilot Lamp)	36-1487
23	Resistor (2.2 meg., 1/2 watt)	33-522339	36	Speaker	36-1482
24	Resistor (2400 ohms, 1/2 watt)	33-247339	56	Speaker Grille	56-1255
25	Electrolytic Condenser (6-6 mf., 150 V.)	30-2386	28	Spring (Pilot Lamp)	28-8952
26	Mica Condenser (250 mmfd.)	61-0033	28	Spring (Drive Cord)	28-8882
27	Volume Control and On-Off Switch	33-5210	28	Spring (Wave Switch Centering)	28-8665
28	Tubular Condenser (.004 mfd.)	30-4578	28	Resistor (1.0 meg., 1/2 watt)	28-4342
29	Resistor (4.7 meg., 1/2 watt)	33-547339	53	Socket (Loktal)	53-0575
30	Tubular Condenser (.5 mfd.)	30-4551	56	Tuning Shaft	56-6070
31	Resistor (1.0 meg., 1/2 watt)	33-510339	56	Tuning Drum	56-1486
32	Mica Condenser (110 mmfd.)	30-1130			
33	Tubular Condenser (.01 mfd.)	30-4572			


FOR ALIGNMENT
SEE INDEX

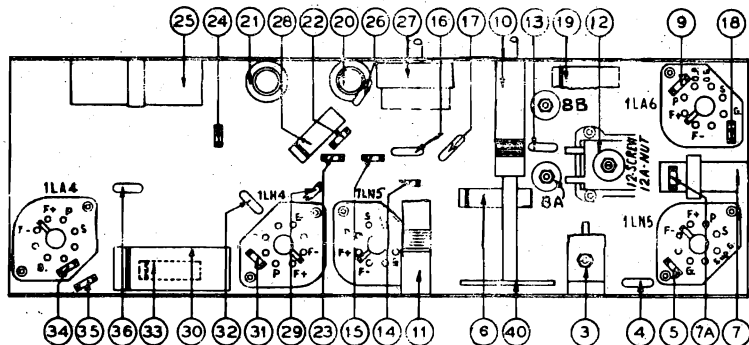

MODEL 40-507
Schematic, Voltage

PHILCO RADIO & TELEV. CORP.

Trimmers

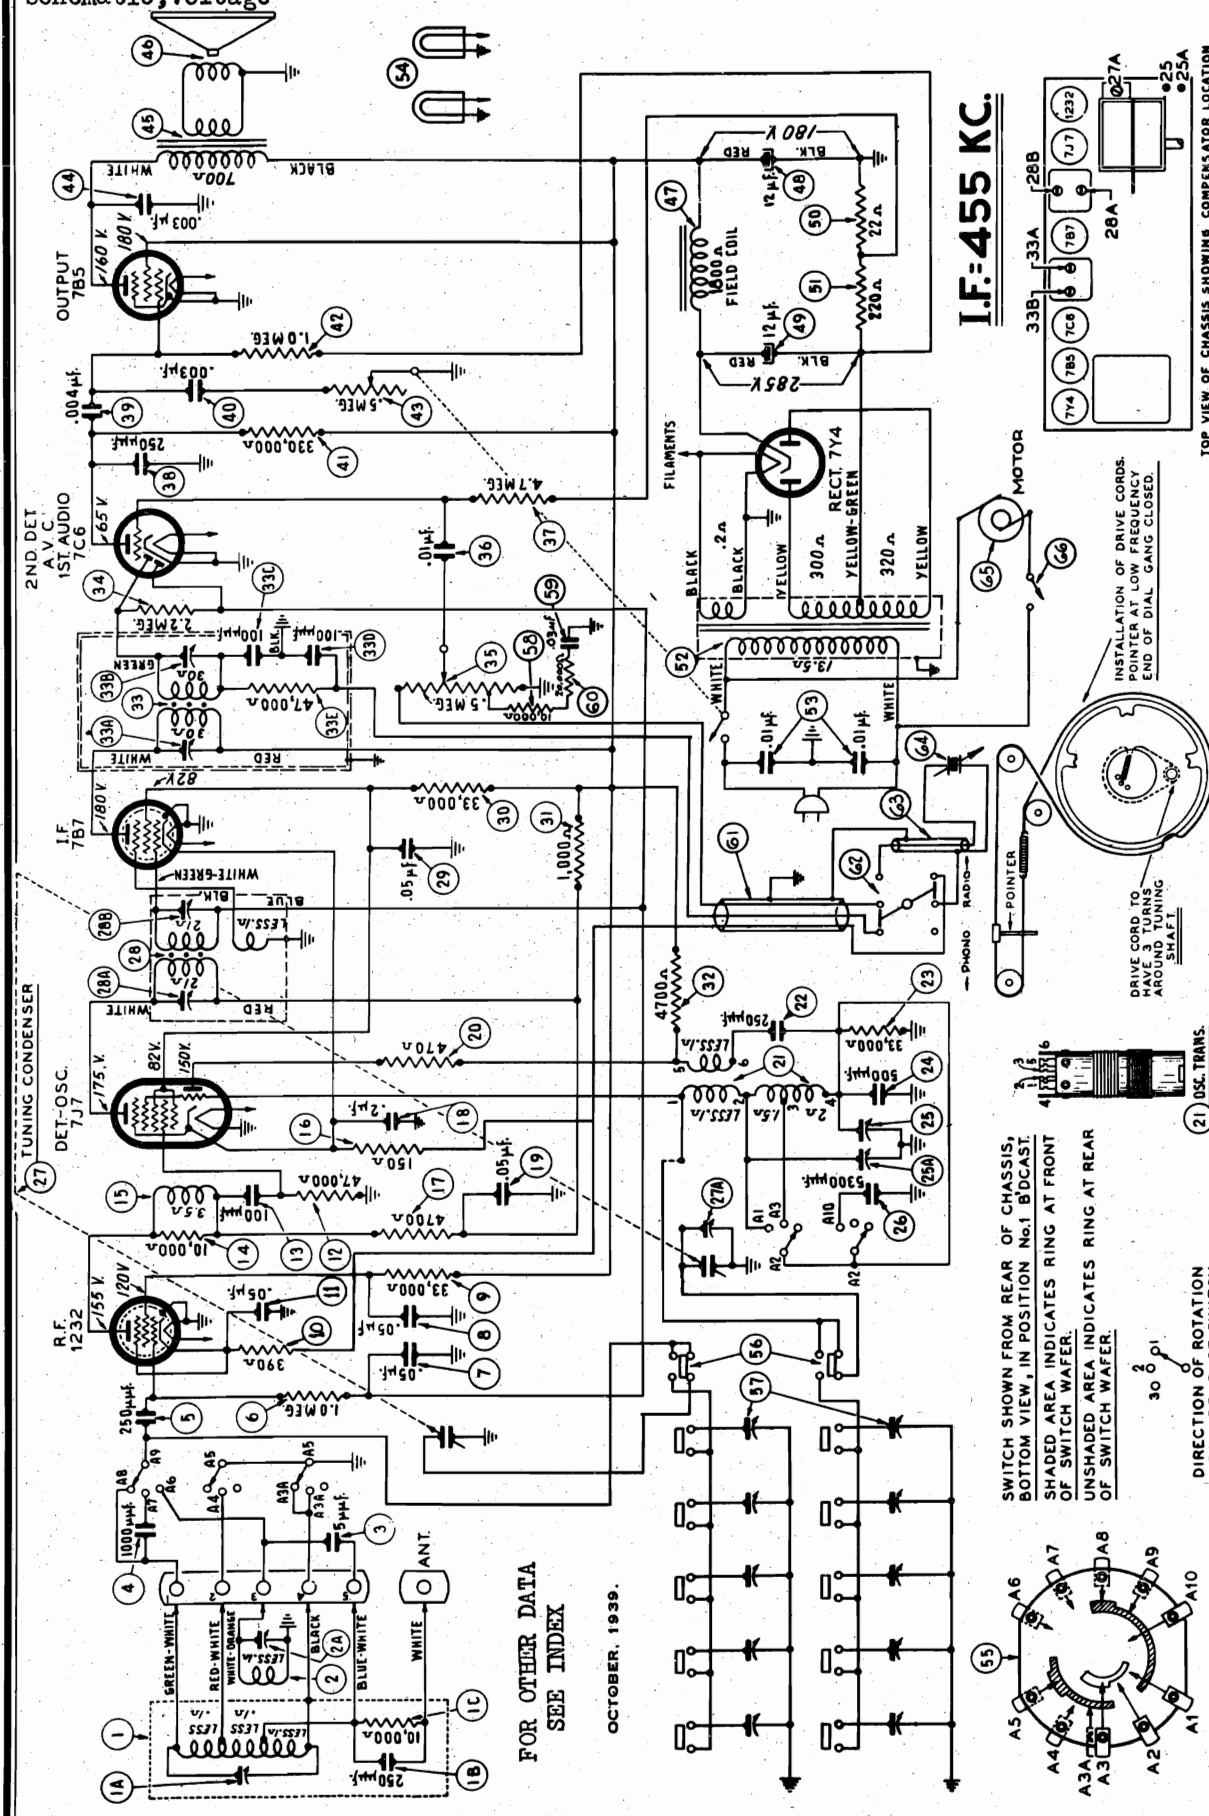



I.F.: 455 KC.



SWITCH SHOWN FROM REAR OF CHASSIS, BOTTOM VIEW, IN POSITION No.1 BDCAS. SHADED AREA INDICATES RING AT FRONT OF SWITCH WAFER. UNSHADED AREA INDICATES RING AT REAR OF SWITCH WAFER.


DIRECTION OF ROTATION FROM REAR OF SWITCH

30 Ω

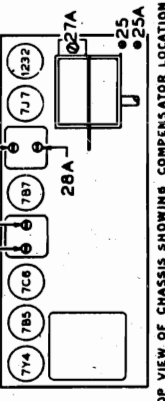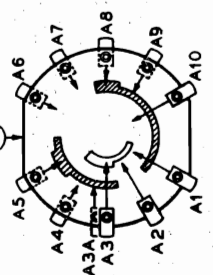

INSTALLATION OF DRIVE CORDS. POINTER AT LOW FREQUENCY END OF DIAL GANG CLOSED.

DRIVE CORD TO HAVE 3 TURNS AROUND TUNING SHAFT

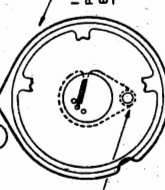

FOR OTHER DATA SEE INDEX

OCTOBER, 1939.


POWER CONSUMPTION: 70 watts.

SCHEMATIC DIAGRAM MODEL 40-507

THE VOLTAGES INDICATED WERE MEASURED WITH A 1000 OHMS PER VOLT-METER. PHILCO MODEL 027. LINE VOLTAGE 115 VOLTS A. C. NO SIGNAL BEING RECEIVED.

PHILCO RADIO & TELEV. CORP.

MODEL 40-510
Schematic, Voltage
Notes

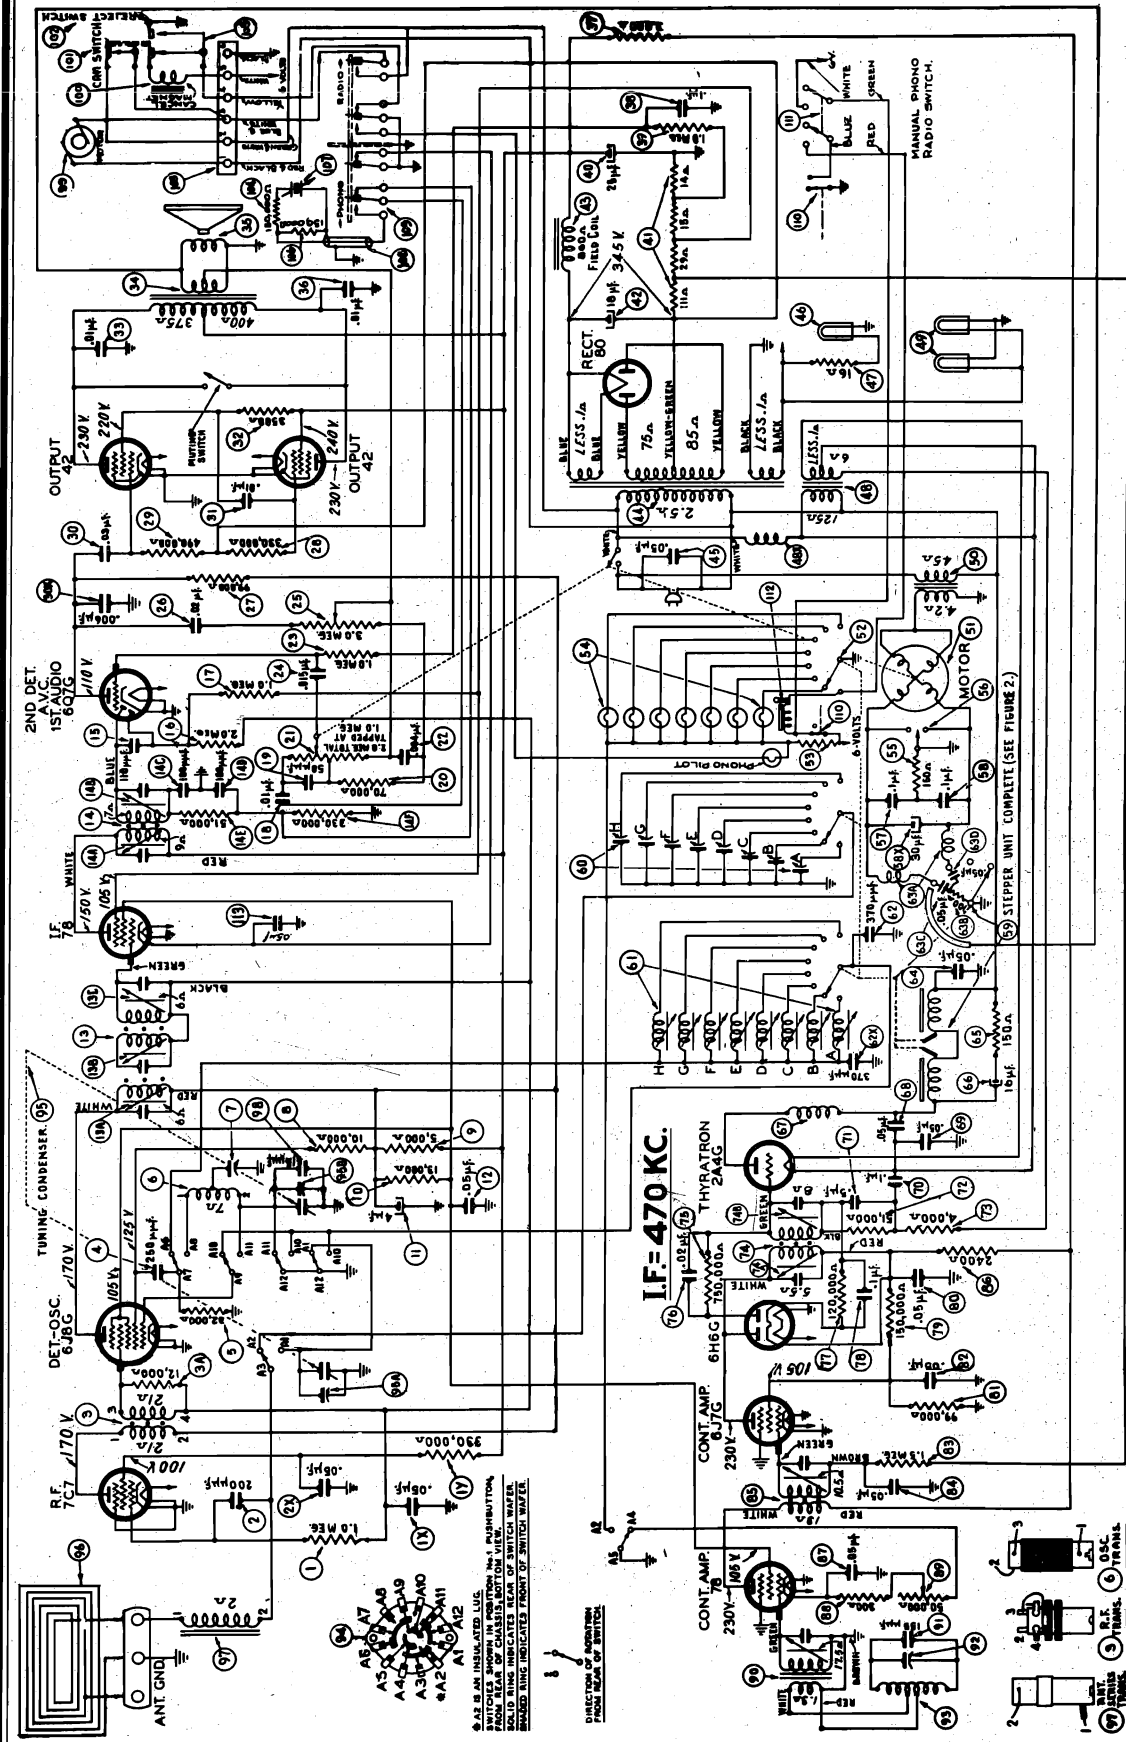

SCHMATIC DIAGRAM MODEL 40-510

VOLTAGES INDICATED AT TUBE ELEMENTS WERE MEASURED WITH A PHILCO MODEL 027 CIRCUIT TESTER AND VACUUM TUBE VOLTMETER. OCTOBER, 1939.

LINE VOLTAGE 115 VOLTS A. C., NO. SIGNAL BEING RECEIVED.

The Deluxe Inter-Mix Record Changer plays fourteen 10" and 12" records intermixed, fifteen 10" or thirteen 12" records at one loading. The record changer can be operated manually or from the wireless remote control circuit of the radio receiver. When using the wireless remote control to operate the phonograph, the Inter-Mix Record Changer can be started and stopped, records rejected and volume adjusted, from the remote control unit. The automatic record changer is selected by dialing "PHONO" position. This operates relay (112) which pulls "Radio-Phono" switch (109) to the "PHONO" position. Records are also rejected by dialing the "PHONO" position on the wireless remote control unit. Phono relay (112) is connected to No. 8 contact of the pilot lamp section of rotary switch (52).

POWER CONSUMPTION: 220 Watts.
CABINET DIMENSIONS: 5 3/4" High, 40 1/2" Wide, 21" Deep.

FOR OTHER DATA, SEE INDEX

MODEL 40-510
Stepper Unit, Parts
MODEL 40-516
Parts List


PHILCO RADIO & TELEV. CORP.

Replacement Parts — Model 40-510

SCH. No.	DESCRIPTION	PART No.
1	Resistor (1.0 meg., 1/2 watt)	33-510339
1X	Tubular Cond. (.05 mfd.)	30-45111
1Y	Resistor (330,000 ohms, 1/2 watt)	33-103339
2	Mica Cond. (200 mmfd.)	30-1078
2X	Cu. Coil (.05 mfd.)	30-4123
3	R. F. Trans.	32-3282
3A	Resistor (12,000 ohms, 1/2 watt)	33-123339
4	Mica Cond. (250 mmfd.)	30-1032
5	Resistor (32,000 ohms, 1/2 watt)	33-332339
6	Oscillator Trans.	32-3238
7	Compensator Trans.	31-6270
7X	Mica Cond. (15 mmfd.)	30-1139
8	Resistor (9,000 ohms, 1/2 watt)	33-103339
9	Resistor (5,000 ohms, 2 watts)	33-250339
10	Resistor (13,000 ohms, 1 watt)	33-313439
11	Electric Cond. (4 mfd., 250 V.)	30-2334
12	Tubular Cond. (.05 mfd.)	30-4123
13	1st I. F. Trans. Assy.	32-3085
14	2nd I. F. Trans. Assy.	32-2645
15	Mica Cond. (110 mmfd.)	30-1031
16	Resistor (1.0 meg., 1/2 watt)	33-520339
17	Resistor (1.0 meg., 1/2 watt)	33-510339
18	Tubular Cond. (.01 mfd.)	30-4479
19	Mica Cond. (50 mmfd.)	33-5300
20	Resistor (70,000 ohms, 1/2 watt)	33-370339
21	Volume Control (.20 meg.)	33-5300
22	Tubular Cond. (.004 mfd.)	30-4334
23	Resistor (1.0 meg., 1/2 watt)	33-510339
24	Tubular Cond. (.015 mfd.)	30-4529
25	Tone Control (3.0 meg.)	33-5287
26	Tubular Cond. (.02 mfd.)	30-4488
27	Resistor (99,000 ohms, 1/2 watt)	33-399339
28	Resistor (330,000 ohms, 1/2 watt)	33-433339
29	Resistor (490,000 ohms, 1/2 watt)	33-483339
30	Tubular Cond. (.03 mfd.)	30-4511
30X	Tubular Cond. (.006 mfd.)	30-4445
31	Resistor (1.5 meg., 1/2 watt)	33-510339
32	Resistor (3500 ohms, 1/2 watt)	33-235339
33	Tubular Cond. (.01 mfd.)	30-4501
34	Output Trans.	32-3291
35	Cone and Voice Coil Assy. (Sprk. Part No. 36-1450-2)	36-4089
36	Tubular Cond. (.01 mfd.)	30-4511
37	Resistor (3000 ohms, 1/2 watt)	30-4501
38	Tubular Cond. (.1 mfd.)	30-4499
39	Resistor (1.0 meg., 1/2 watt)	33-510339
40	Electric Cond. (2 mfd., 300 V.)	30-2200
41	Bias Resistor (Wirewound)	33-3361
42	Electric Cond. (.1 mfd., 475 V.)	30-2200
43	Field Coil (Recd. Spkr. Parts No. 36-1450)	32-7999
44	Power Trans. (115 V., 50-60 cycles)	30-357
45	Power Trans. (115 V., 25-40 cycles)	30-4576
46	Capacitor (.05 mfd., 115 V. Plug)	34-2210
47	Pilot Lamp (Bullseye)	30-1431
48	Flament Trans. (115 V., 16 ohms, 1 watt)	32-7993
49	Flament Trans. (115 V., 25-40 cycles)	32-1281
49X	Choke Coil	34-2064
50	Motor Trans. (115 V., 50-60 cycles)	32-8015
51	Volume Control Motor Assy.	32-8015
52	Rotary Switch	35-1151
53	Bias Resistor (Wirewound, 10 ohms)	33-3363
54	Pilot Lamps (Staple Indicator)	34-2064
55	Resistor (500 ohms, 1/2 watt)	33-115339
56	Volume Control Switch (Motor Control)	42-1469
57	Tubular Cond. (.01 mfd.)	30-4511
58	Tubular Cond. (.1 mfd.)	30-4499
58X	Electric Cond. (30 mfd., 30 V.)	30-2361
60A	Stepper Unit (Complete)	31-6264
60B	Compensator Strip (Pushbutton)	31-6264
60C	Compensator No. 2	30-4511
60D	Compensator No. 4	30-4511
60E	Compensator No. 6	30-4511
60F	Compensator No. 8	30-4511
60G	Compensator No. 10	30-4511
60H	Compensator No. 12	30-4511
60I	Compensator No. 14	30-4511
60J	Compensator No. 16	30-4511
60K	Compensator No. 18	30-4511
60L	Compensator No. 20	30-4511
60M	Compensator No. 22	30-4511
60N	Compensator No. 24	30-4511
60O	Compensator No. 26	30-4511
60P	Compensator No. 28	30-4511
60Q	Compensator No. 30	30-4511
60R	Compensator No. 32	30-4511
60S	Compensator No. 34	30-4511
60T	Compensator No. 36	30-4511
60U	Compensator No. 38	30-4511
60V	Compensator No. 40	30-4511
60W	Compensator No. 42	30-4511
60X	Compensator No. 44	30-4511
60Y	Compensator No. 46	30-4511
60Z	Compensator No. 48	30-4511
60AA	Compensator No. 50	30-4511
60AB	Compensator No. 52	30-4511
60AC	Compensator No. 54	30-4511
60AD	Compensator No. 56	30-4511
60AE	Compensator No. 58	30-4511
60AF	Compensator No. 60	30-4511
60AG	Compensator No. 62	30-4511
60AH	Compensator No. 64	30-4511
60AI	Compensator No. 66	30-4511
60AJ	Compensator No. 68	30-4511
60AK	Compensator No. 70	30-4511
60AL	Compensator No. 72	30-4511
60AM	Compensator No. 74	30-4511
60AN	Compensator No. 76	30-4511
60AO	Compensator No. 78	30-4511
60AP	Compensator No. 80	30-4511
60AQ	Compensator No. 82	30-4511
60AR	Compensator No. 84	30-4511
60AS	Compensator No. 86	30-4511
60AT	Compensator No. 88	30-4511
60AU	Compensator No. 90	30-4511
60AV	Compensator No. 92	30-4511
60AW	Compensator No. 94	30-4511
60AX	Compensator No. 96	30-4511
60AY	Compensator No. 98	30-4511
60AZ	Compensator No. 100	30-4511
60BA	Compensator No. 102	30-4511
60BB	Compensator No. 104	30-4511
60BC	Compensator No. 106	30-4511
60BD	Compensator No. 108	30-4511
60BE	Compensator No. 110	30-4511
60BF	Compensator No. 112	30-4511
60BG	Compensator No. 114	30-4511
60BH	Compensator No. 116	30-4511
60BI	Compensator No. 118	30-4511
60BJ	Compensator No. 120	30-4511
60BK	Compensator No. 122	30-4511
60BL	Compensator No. 124	30-4511
60BM	Compensator No. 126	30-4511
60BN	Compensator No. 128	30-4511
60BO	Compensator No. 130	30-4511
60BP	Compensator No. 132	30-4511
60BQ	Compensator No. 134	30-4511
60BR	Compensator No. 136	30-4511
60BS	Compensator No. 138	30-4511
60BT	Compensator No. 140	30-4511
60BU	Compensator No. 142	30-4511
60BV	Compensator No. 144	30-4511
60BW	Compensator No. 146	30-4511
60BX	Compensator No. 148	30-4511
60BY	Compensator No. 150	30-4511
60BZ	Compensator No. 152	30-4511
60CA	Compensator No. 154	30-4511
60CB	Compensator No. 156	30-4511
60CC	Compensator No. 158	30-4511
60CD	Compensator No. 160	30-4511
60CE	Compensator No. 162	30-4511
60CF	Compensator No. 164	30-4511
60CG	Compensator No. 166	30-4511
60CH	Compensator No. 168	30-4511
60CI	Compensator No. 170	30-4511
60CJ	Compensator No. 172	30-4511
60CK	Compensator No. 174	30-4511
60CL	Compensator No. 176	30-4511
60CM	Compensator No. 178	30-4511
60CN	Compensator No. 180	30-4511
60CO	Compensator No. 182	30-4511
60CP	Compensator No. 184	30-4511
60CQ	Compensator No. 186	30-4511
60CR	Compensator No. 188	30-4511
60CS	Compensator No. 190	30-4511
60CT	Compensator No. 192	30-4511
60CU	Compensator No. 194	30-4511
60CV	Compensator No. 196	30-4511
60CW	Compensator No. 198	30-4511
60CX	Compensator No. 200	30-4511
60CY	Compensator No. 202	30-4511
60CZ	Compensator No. 204	30-4511
60DA	Compensator No. 206	30-4511
60DB	Compensator No. 208	30-4511
60DC	Compensator No. 210	30-4511
60DD	Compensator No. 212	30-4511
60DE	Compensator No. 214	30-4511
60DE	Compensator No. 216	30-4511
60DF	Compensator No. 218	30-4511
60DG	Compensator No. 220	30-4511
60DH	Compensator No. 222	30-4511
60DI	Compensator No. 224	30-4511
60DJ	Compensator No. 226	30-4511
60DK	Compensator No. 228	30-4511
60DL	Compensator No. 230	30-4511
60DM	Compensator No. 232	30-4511
60DN	Compensator No. 234	30-4511
60DO	Compensator No. 236	30-4511
60DP	Compensator No. 238	30-4511
60DQ	Compensator No. 240	30-4511
60DR	Compensator No. 242	30-4511
60DS	Compensator No. 244	30-4511
60DT	Compensator No. 246	30-4511
60DU	Compensator No. 248	30-4511
60DV	Compensator No. 250	30-4511
60DV	Compensator No. 252	30-4511
60DW	Compensator No. 254	30-4511
60DX	Compensator No. 256	30-4511
60DY	Compensator No. 258	30-4511
60DZ	Compensator No. 260	30-4511
60EA	Compensator No. 262	30-4511
60EB	Compensator No. 264	30-4511
60EC	Compensator No. 266	30-4511
60ED	Compensator No. 268	30-4511
60EE	Compensator No. 270	30-4511
60EE	Compensator No. 272	30-4511
60EF	Compensator No. 274	30-4511
60EG	Compensator No. 276	30-4511
60EF	Compensator No. 278	30-4511
60EH	Compensator No. 280	30-4511
60EI	Compensator No. 282	30-4511
60EJ	Compensator No. 284	30-4511
60EK	Compensator No. 286	30-4511
60EL	Compensator No. 288	30-4511
60EM	Compensator No. 290	30-4511
60EN	Compensator No. 292	30-4511
60EO	Compensator No. 294	30-4511
60EP	Compensator No. 296	30-4511
60EQ	Compensator No. 298	30-4511
60ER	Compensator No. 300	30-4511
60ER	Compensator No. 302	30-4511
60ES	Compensator No. 304	30-4511
60ET	Compensator No. 306	30-4511
60EU	Compensator No. 308	30-4511
60EV	Compensator No. 310	30-4511
60EV	Compensator No. 312	30-4511
60EW	Compensator No. 314	30-4511
60EX	Compensator No. 316	30-4511
60EY	Compensator No. 318	30-4511
60EZ	Compensator No. 320	30-4511
60FA	Compensator No. 322	30-4511
60FB	Compensator No. 324	30-4511
60FC	Compensator No. 326	30-4511
60FD	Compensator No. 328	30-4511
60FE	Compensator No. 330	30-4511
60FE	Compensator No. 332	30-4511
60FF	Compensator No. 334	30-4511
60FG	Compensator No. 336	30-4511
60FG	Compensator No. 338	30-4511
60FH	Compensator No. 340	30-4511
60FI	Compensator No. 342	30-4511
60FI	Compensator No. 344	30-4511
60FJ	Compensator No. 346	30-4511
60FK	Compensator No. 348	30-4511
60FL	Compensator No. 350	30-4511
60FL	Compensator No. 352	30-4511
60FM	Compensator No. 354	30-4511
60FN	Compensator No. 356	30-4511
60FO	Compensator No. 358	30-4511
60FO	Compensator No. 360	30-4511
60FP	Compensator No. 362	30-4511
60FQ	Compensator No. 364	30-4511
60FR	Compensator No. 366	30-4511
60FR	Compensator No. 368	30-4511
60FS	Compensator No. 370	30-4511
60FT	Compensator No. 372	30-4511
60FT	Compensator No. 374	30-4511
60FU	Compensator No. 376	30-4511
60FV	Compensator No. 378	30-4511
60FV	Compensator No. 380	30-4511
60FW	Compensator No. 382	30-4511
60FX	Compensator No. 384	30-4511
60FY	Compensator No. 386	30-4511
60FZ	Compensator No. 388	30-4511
60GA	Compensator No. 390	30-4511
60GB	Compensator No. 392	30-4511
60GC	Compensator No. 394	30-4511
60GD	Compensator No. 396	30-4511
60GD	Compensator No. 398	30-4511
60GE	Compensator No. 400	30-4511
60GE	Compensator No. 402	30-4511
60GF	Compensator No. 404	30-4511
60GF	Compensator No. 406	30-4511
60GG	Compensator No. 408	30-4511
60GG	Compensator No. 410	30-4511
60GH	Compensator No. 412	30-4511
60GH	Compensator No. 414	30-4511
60GI	Compensator No. 416	30-4511
60GI	Compensator No. 418	30-4511
60GJ	Compensator No. 420	30-4511
60GJ	Compensator No. 422	30-4511
60GK	Compensator No. 424	30-4511
60GL	Compensator No. 426	30-4511
60GL	Compensator No. 428	30-4511
60GM	Compensator No. 430	30-4511
60GM	Compensator No. 432	30-4511
60GN	Compensator No. 434	30-4511
60GN	Compensator No. 436	30-4511
60GO	Compensator No. 438	30-4511
60GO	Compensator No. 440	30-4511
60GP	Compensator No. 442	30-4511
60GP	Compensator No. 444	30-4511
60GQ	Compensator No. 446	30-4511
60GQ	Compensator No. 448	30-4511
60GR	Compensator No. 450	30-4511
60GR	Compensator No. 452	30-4511
60GS	Compensator No. 454	30-4511
60GS	Compensator No. 456	30-4511
60GT	Compensator No. 458	30-4511
60GT	Compensator No. 460	30-4511
60GU	Compensator No. 462	30-4511
60GU	Compensator No. 464	30-4511
60GV	Compensator No. 466	30-4511
60GV	Compensator No. 468	30-4511
60GW	Compensator No. 470	30-4511
60GW	Compensator No. 472	30-4511
60GX	Compensator No. 474	30-4511
60GX	Compensator No. 476	30-4511
60GY	Compensator No. 478	30-4511
60GY	Compensator No. 48	

PHILCO RADIO & TELEV. CORP.

MODEL 40-516 Schematic, Voltage Notes

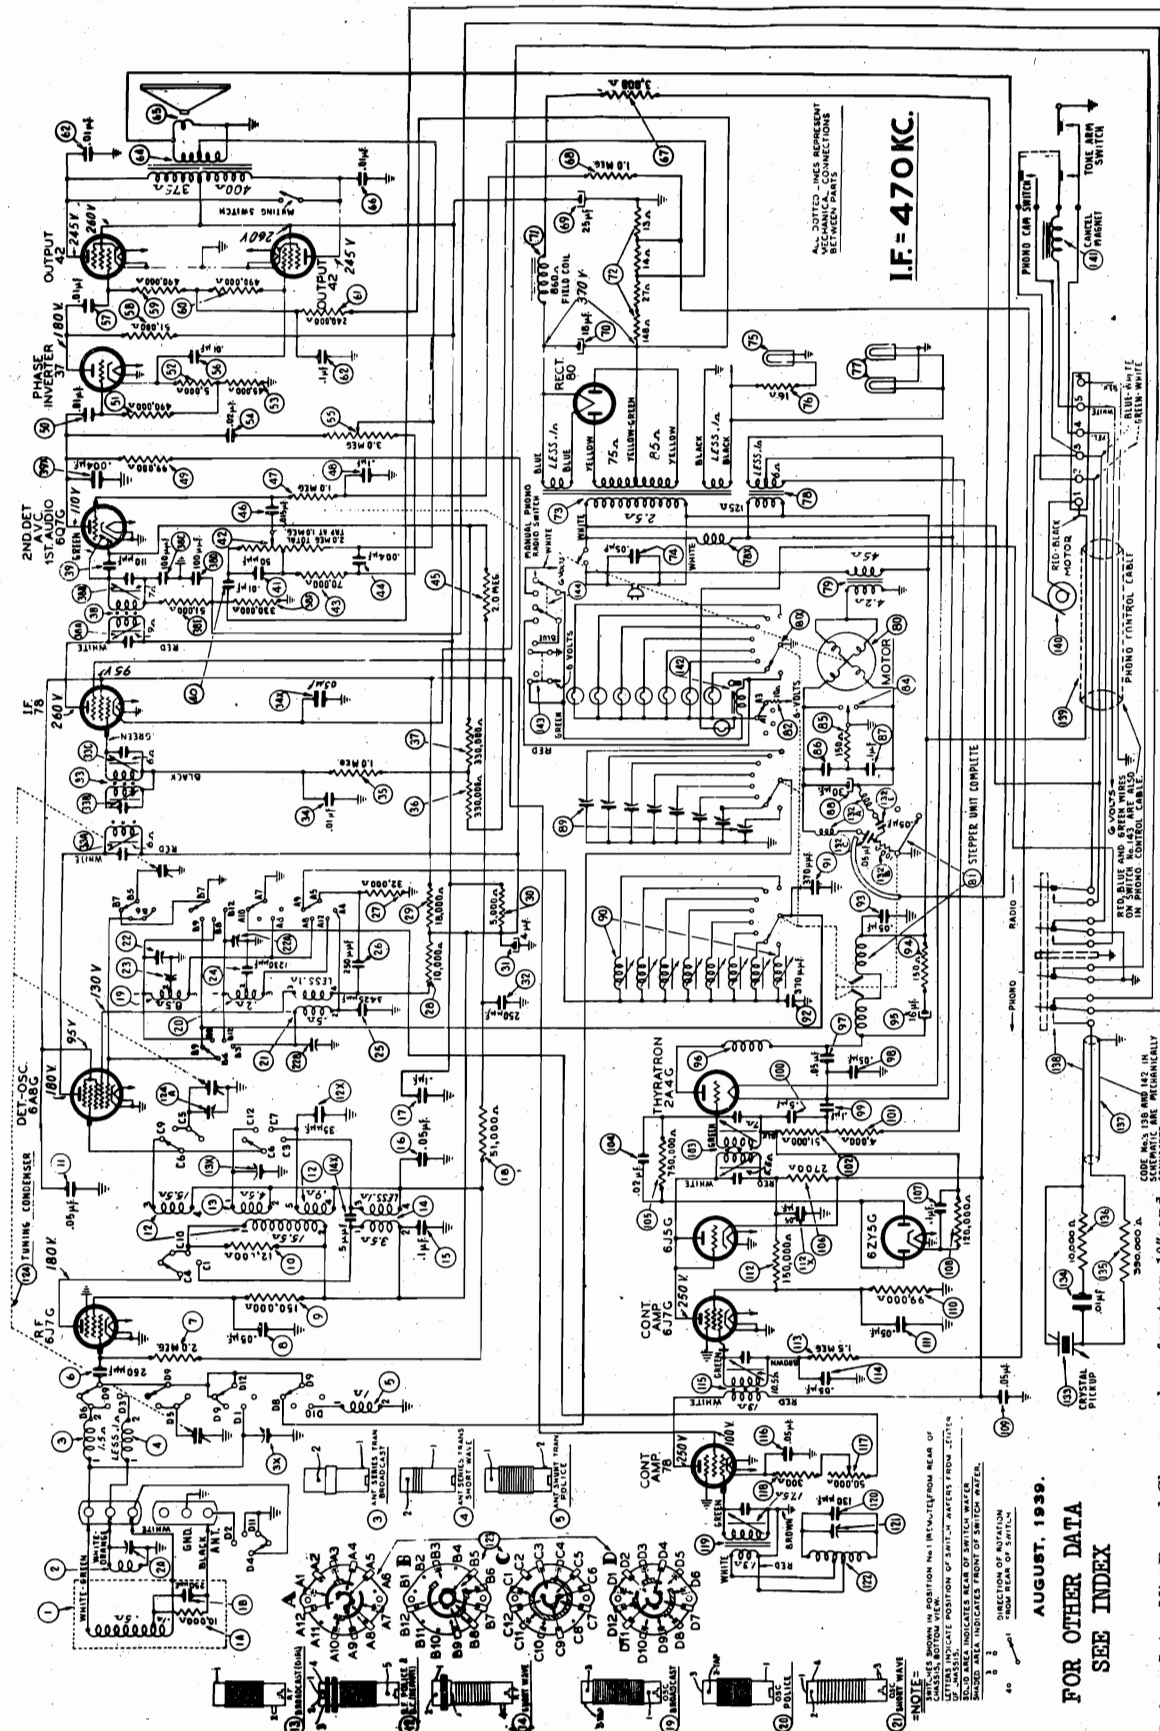

IF = 470 KC.

The Deluxe Inter-Mix Record Changer plays fourteen 10" and 12" records intermixed, fifteen 10" or thirteen 12" records at graph, the Inter-Mix Record Changer can be started and "Radio-Phono" switch (138) to the "PHONO" position. Records one loading. The record changer can be operated manually or stopped, records rejected and volume adjusted, from the remote also rejected by dialing the "PHONO" position on the from the wireless remote control circuit of the radio receiver. The automatic record changer is selected by dial- to No. 8 contact of the pilot lamp section of rotary switch When using the wireless remote control to operate the phono- ing "PHONO" position. This operates relay (142) which pulls (81X).


AUGUST, 1939.

FOR OTHER DATA SEE INDEX

NOTE: SWITCHES IN POSITION 1 ARE VIEWED FROM REAR OF SWITCH. SWITCHES IN POSITION 2 ARE VIEWED FROM FRONT OF SWITCH. LETTERS IN CAPITALS INDICATE POSITION OF SWITCH. LETTERS IN SMALL CAPS INDICATE REAR OF SWITCH. WIRE COLOR INDICATES FRONT OF SWITCH. WIRE COLOR INDICATES REAR OF SWITCH.


MODEL 40-525(121)
Schematic, Voltage

PHILCO RADIO & TELEV. CORP.

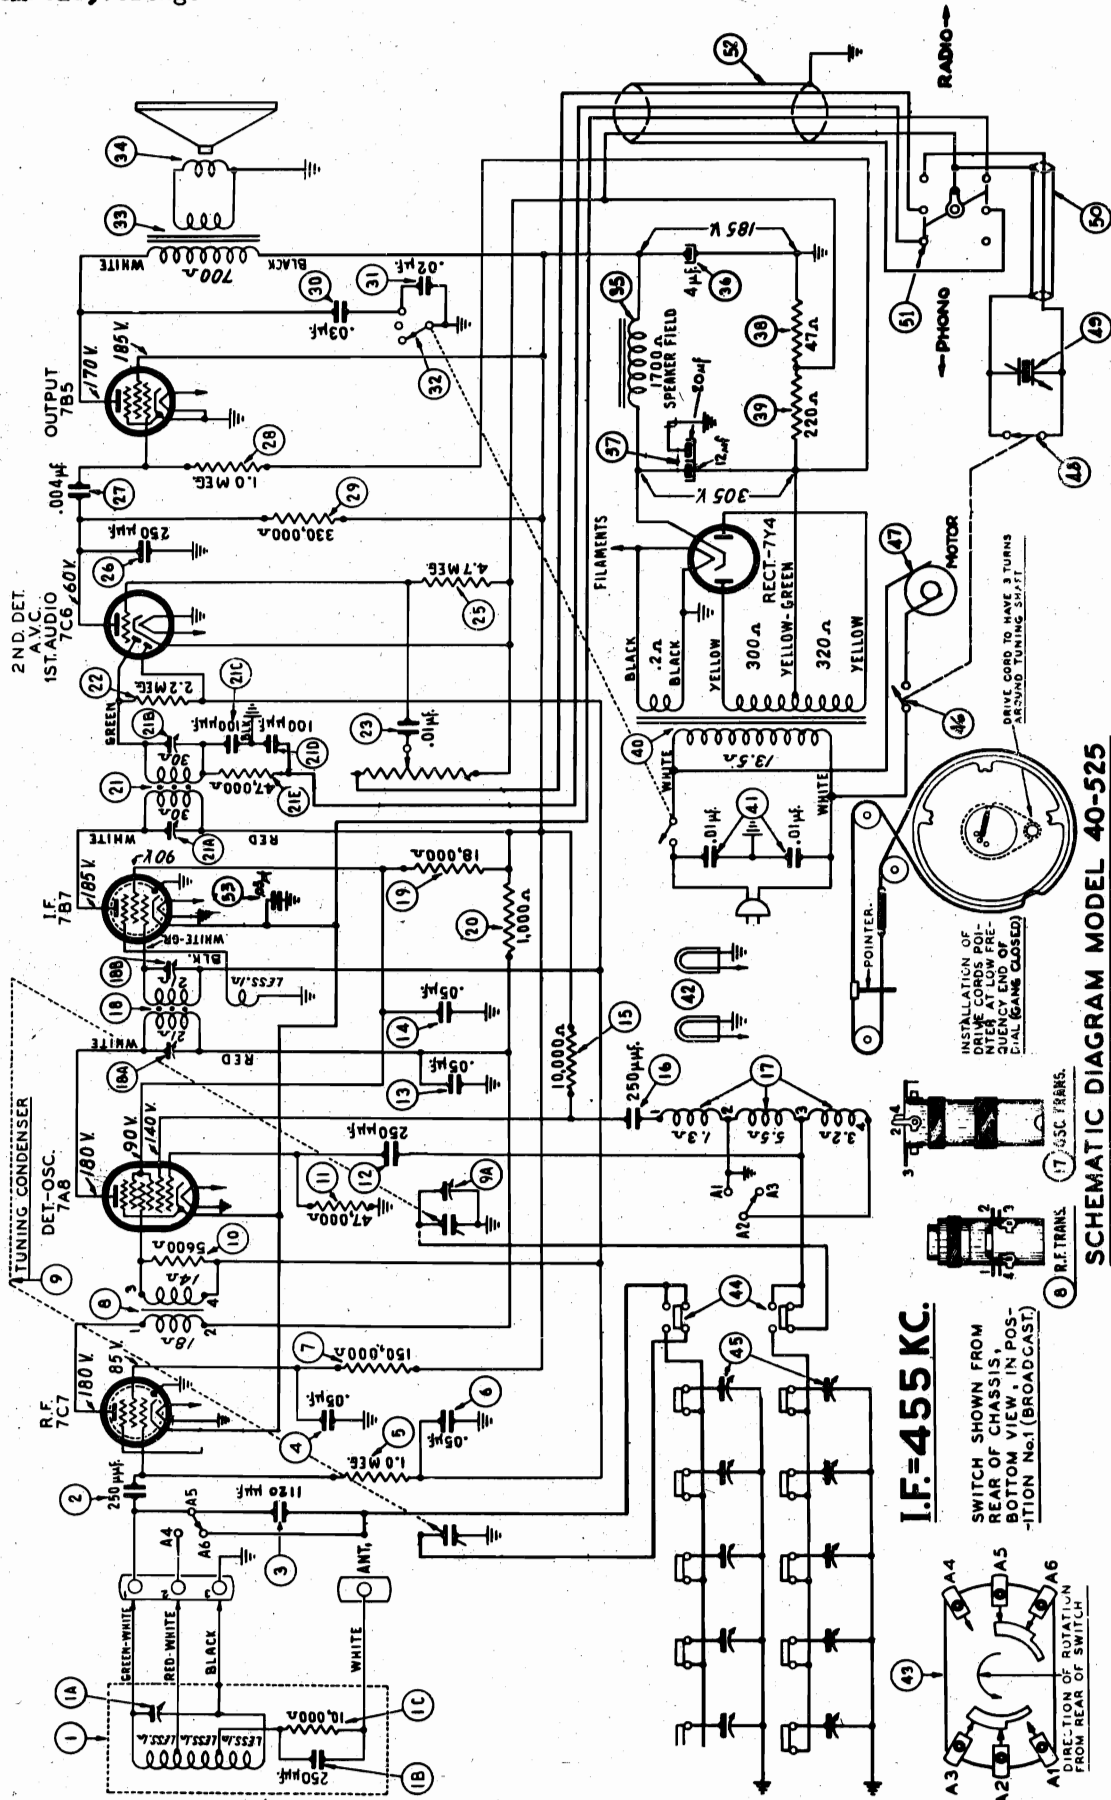

SCHMATIC DIAGRAM MODEL 40-525

I.F.=455 KC.
SWITCH SHOWN FROM REAR OF CHASSIS, BOTTOM VIEW, IN POSITION No.1 (BROADCAST)

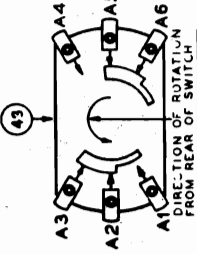

INSTALLATION OF DRIVE CORDS FOR QUENCH END OF TUNING SLIP



17. 45C TRANS.

8. R.F. TRANS.

OCTOBER, 1939.


VOLTAGES INDICATED AT TUBE ELEMENTS WERE MEASURED WITH A PHILCO MODEL 027 CIRCUIT TESTER AND VACUUM TUBE VOLTMETER. LINE VOLTAGE 115 VOLTS A. C. NO SIGNAL BEING RECEIVED.

POWER CONSUMPTION: 60 watts.

FOR OTHER DATA, SEE INDEX.

PHILCO RADIO & TELEV. CORP.

MODEL 40-710
Schematic, Voltage
Chassis, Trimmers

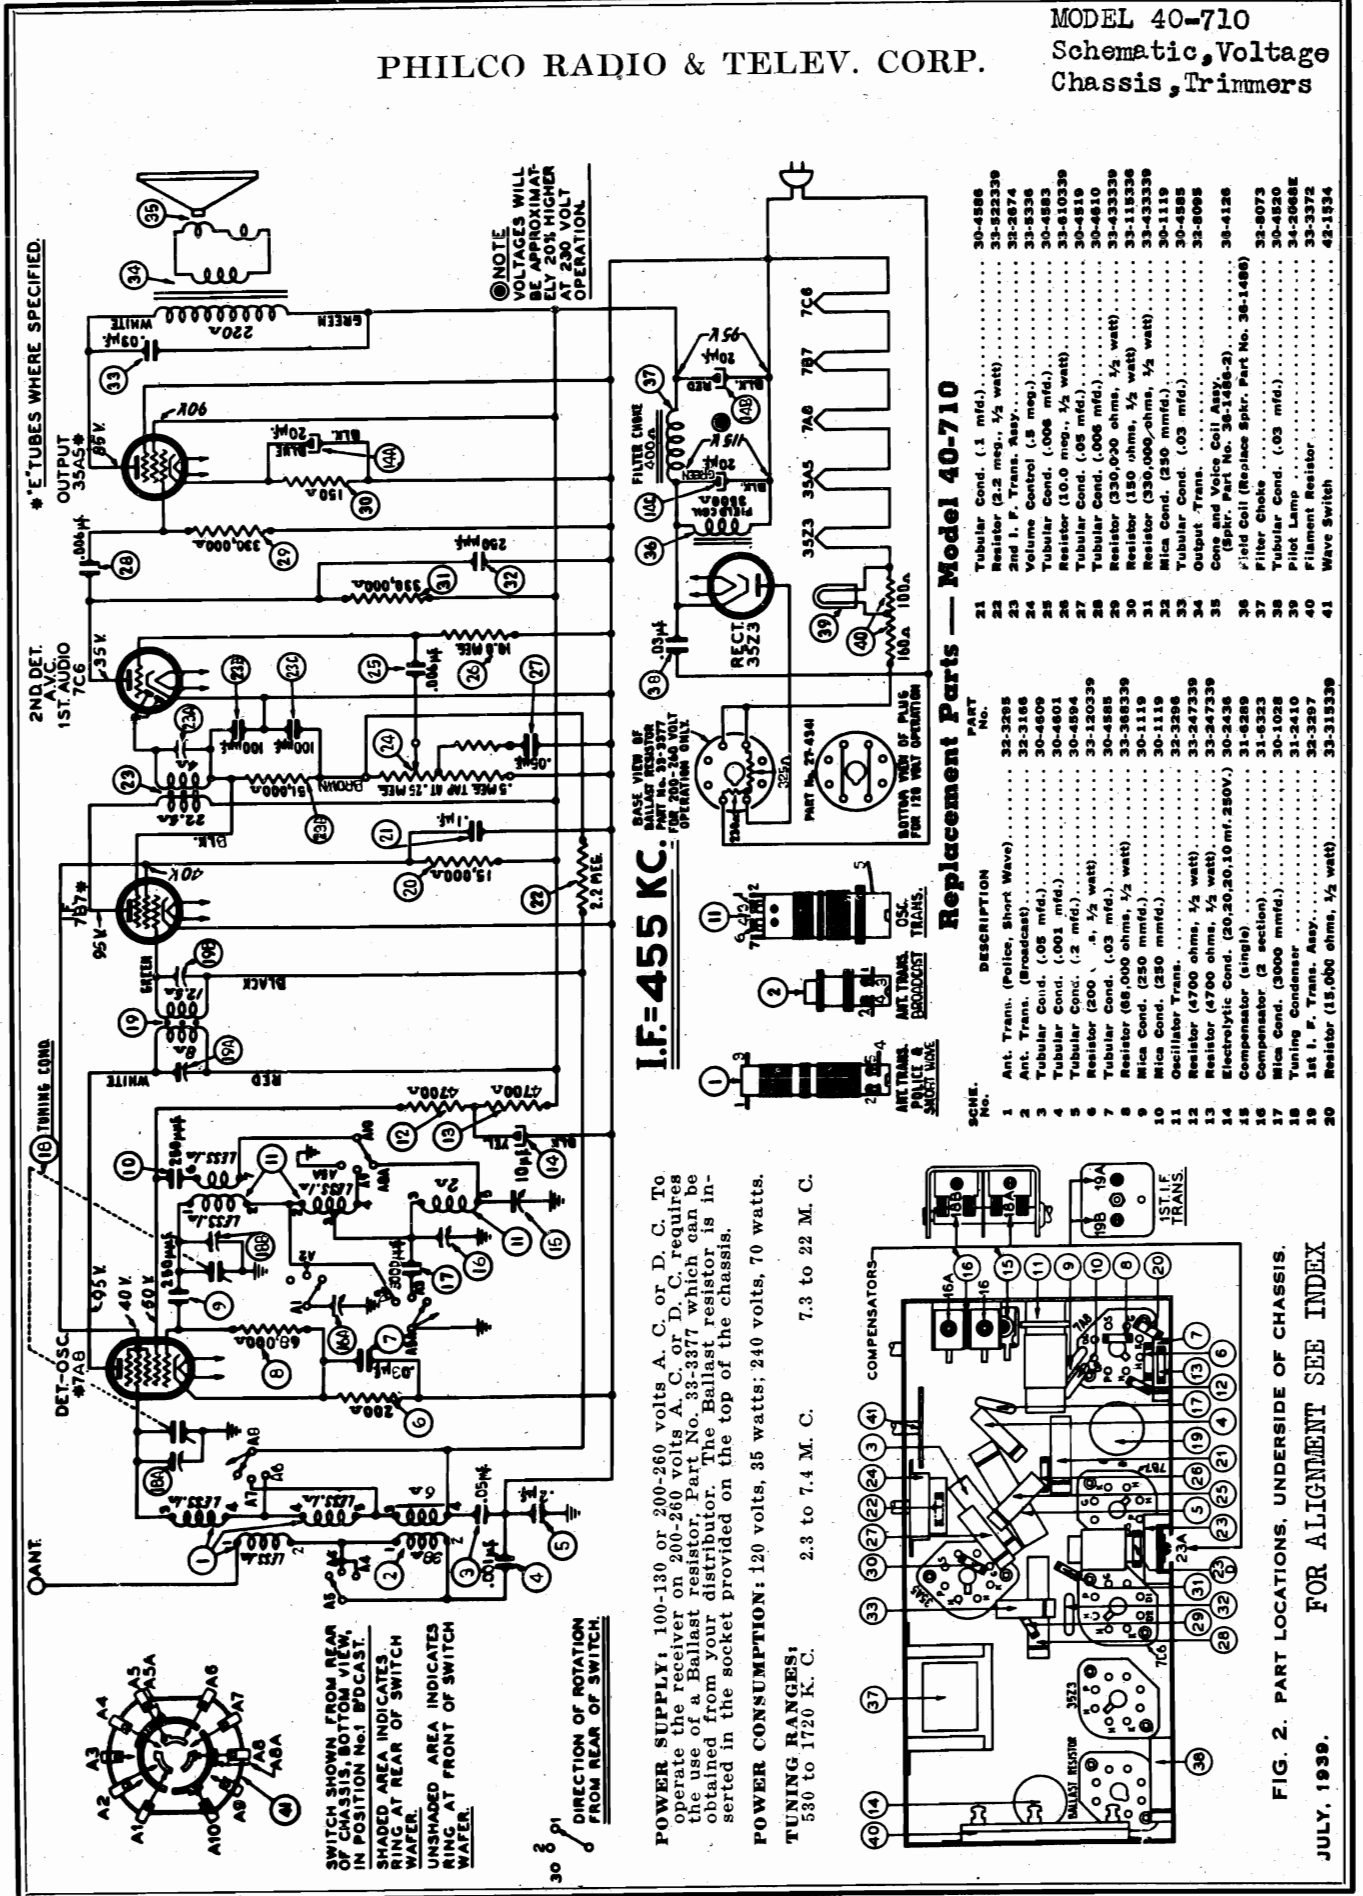

MODEL 40-710
MODEL 40-715
Alignment

PHILCO RADIO & TELEV. CORP.

ALIGNMENT MODELS 40-710, 40-715

EQUIPMENT REQUIRED

(1) **Signal Generator.** In order to properly adjust this receiver, a calibrated signal generator such as Philco Model 077 A. C. or Model 177 battery operated are required. These signal generators cover a frequency range of 540 to 36,000 K. C.

(2) **Indicating Device.** To obtain maximum signal strength and accurate adjustment of the padders a vacuum tube volt-

meter and circuit tester such as Philco Models 027 and 028 is recommended. These testers also contain an audio output meter which may be used as an indicating device.

(3) **Aligning Tools.** Fiber handle screw driver, Philco Part No. 45-2610.

MODEL 40 -710 CONNECTING ALIGNING INSTRUMENTS

Vacuum Tube Voltmeters: To use the vacuum tube voltmeter as an aligning indicator it should be connected to the A. V. C. circuit with the Philco aligning adaptor, Part No. 45-2767, as follows:

Remove the 7C6 tube from its socket and insert the aligning adaptor in the socket, then replace the tube in the adaptor. Connect the negative terminal of the vacuum tube voltmeter to the light colored wire which protrudes from the side of the adaptor. Attach the positive terminal of the voltmeter to the black wire.

Audio Output Meter: If this type of meter is used as an aligning indicator, it should be connected to the plate and

screen terminals of the 35A5 tube. Adjust the meter for the 0 to 30 volt A. C. scale.

After connecting the aligning meter, adjust the compensators in the order as shown in the tabulation below. Locations of the compensators are shown in Fig. 2. If the output meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.

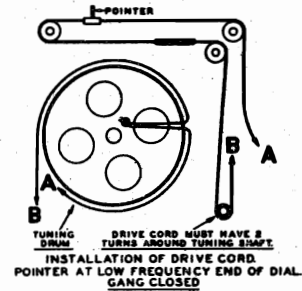


FIG. 1. DIAL CALIBRATION.

Operations in Order	SIGNAL GENERATOR			RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Settings	Adjust Compensators	
1	7A8	.1 mfd.	455 K. C.	580 K. C.	Vol. Max. Range Switch "Brdcat"	23A, 19B, 19A	
2	Ant. & Chassis	400 ohms	20 M. C.	20 M. C.	Range Switch "S. W. 2"	18B, 18A	Note C
3	Ant. & Chassis	400 ohms	7.0 M. C.	7.0 M. C.	Range Switch "S. W. 1"	16A	Rollgang
4	Ant. & Chassis	200 mmfd.	1400 K. C.	1400 K. C.	Vol. Max. Range Switch "Brdcat"	16	Note B
5	Ant. & Chassis	200 mmfd.	580 K. C.	580 K. C.	Vol. Max. Range Switch "Brdcat"	15	Rollgang Repeat Oper. 4

NOTE A—The "Dummy Antenna" consists of a condenser or resistance connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.

NOTE B—DIAL CALIBRATION: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning

condenser closed (maximum capacity), set the dial pointer on the first mark on the left edge (low frequency end) of the broadcast scale.

NOTE C—When adjusting compensator (18B) be sure to tune in the fundamental signal (20 M. C.) instead of the image signal. If the compensator is correctly adjusted, the image signal will be found by turning dial 910 K. C. below the fundamental signal, which will be 19.090 M. C.

MODEL 40-715 CONNECTING ALIGNING INSTRUMENTS

Vacuum Tube Voltmeter: To use the vacuum tube voltmeter as an aligning indicator it should be connected to the A. V. C. circuit as follows:

1. Connect the negative (—) terminal of the voltmeter through a 2 meg. resistor to the converter grid (6J8G). The resistor must be connected directly to the grid of the tube and the voltmeter wire attached to the resistor.

2. Connect the positive (+) terminal to the chassis ground terminal.

Audio Output Meter: If this type of meter is used as an aligning indicator, it should be connected to the plate and

screen terminals of the 41 tube. Adjust the meter for the 0 to 30 volt A. C. scale.

After connecting the aligning meter, adjust the compensators in the order as shown in the tabulation below. Locations of the compensators are shown in Fig. 1. If the output meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.

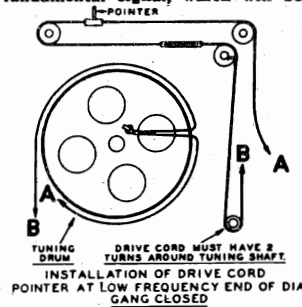


FIG. 1. DIAL CALIBRATION.

Operations in Order	SIGNAL GENERATOR			RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Settings	Adjust Compensators	
1	6J8EG	.1 mfd.	455 K. C.	580 K. C.	Vol. Max. Tone Treble Range Switch "Brdcat"	24, 16B, 16A	
2	Ant. & Grnd.	200 mmfd.	1500 K. C.	1500 K. C.	Vol. Max. Tone Treble Range Switch "Brdcat"	9A, 15A	Note B
3	Ant. & Grnd.	200 mmfd.	580 K. C.	580 K. C.	Vol. Max. Tone Treble Range Switch "Brdcat"	11	Roll Gang Repeat Oper. 2
4	Ant. & Grnd.	400 ohms	7.0 M. C.	7.0 M. C.	Range Switch "Police"	9	Roll Gang
5	Ant. & Grnd.	400 ohms	20 M. C.	20 M. C.	Range Switch "S.W."	5A, 5	Note C

NOTE A—The "Dummy Antenna" consists of a condenser or resistance connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.


NOTE B—DIAL CALIBRATION: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning

condenser closed (maximum capacity), set the dial pointer on the first mark on the left edge (low frequency end) of the broadcast scale.

NOTE C—When adjusting compensator (5A) be sure to tune in the fundamental signal (20 M. C.) instead of the image signal. If the compensator is correctly adjusted, the image signal will be found by turning dial 910 K. C. below the fundamental signal, which will be 19.090 M. C.

PHILCO RADIO & TELEV. CORP. MODEL 40-715(121)
Schematic, Voltage, Chassis
Trimmers

* E TUBES WHERE SPECIFIED

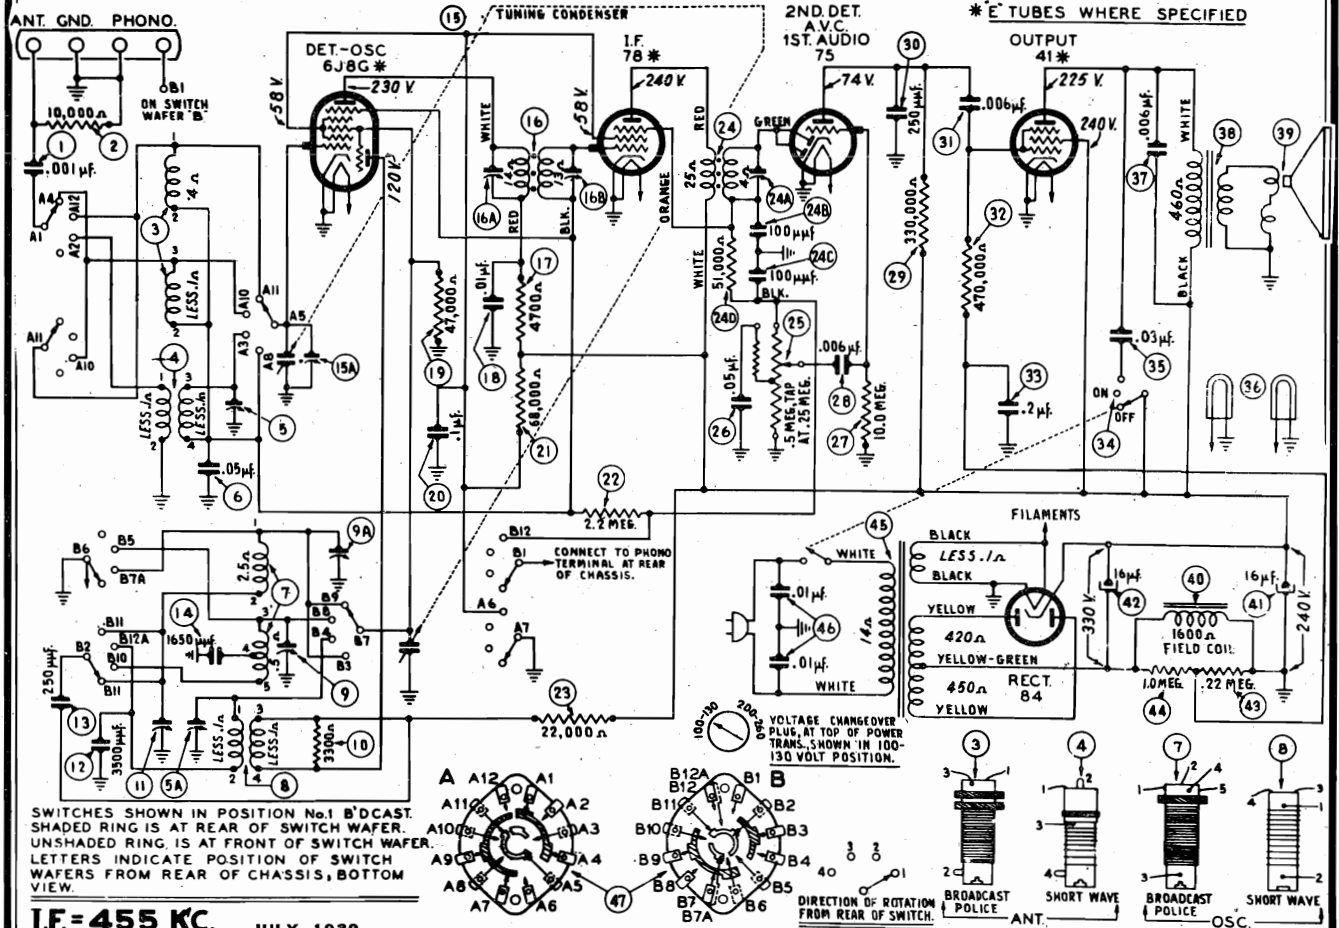


SWITCHES SHOWN IN POSITION No. 1 B'CAST. SHADED RING IS AT REAR OF SWITCH WAFER. UNSHADED RING IS AT FRONT OF SWITCH WAFER. LETTERS INDICATE POSITION OF SWITCH WAFERS FROM REAR OF CHASSIS, BOTTOM VIEW.

I.F. = 455 KC. JULY, 1939.

Replacement Parts — Model 40-715

SCH. No.	DESCRIPTION	PART No.	SCH. No.	DESCRIPTION	PART No.	SCH. No.	DESCRIPTION	PART No.	
1	Tubular Cond. (.001 mfd.)	30-4892	46	Line Cond. (.01-.01 mfd.)	3903-ODG		Pilot Lamp Socket Assembly	38-9796	
2	Resistor (10,000 ohms, 1/2 watt)	33-310239	47	Wave Switch	42-1480		Pointer	38-1276	
3	Antenna Trans. (Broadcast, Police)	32-3142	MISCELLANEOUS PARTS					Socket (5 prong, type 84 tube)	27-6035
4	Antenna Trans. (Short Wave)	32-3143	Clamp (Dial Mounting)	56-1271		Socket (6 prong, type 41, 75 & 78 tubes)	27-6036		
5A	Compensator (2 section)	31-6287	Cabinet	10365A		Socket (8 prong, Octal, type 6J8G tube)	27-6058		
6	Tubular Cond. (.05 mfd.)	30-4609	Cable and Plug (Power Supply)	L-2289		Spring Clip (Coil Mounting)	28-5002		
7	Oscillator Trans. (Broadcast, Police)	32-3142	A. C. Plug (Special)	L-1367		Spring (Drive Cord)	28-8913		
8	Oscillator Trans. (Short Wave)	32-3144	Dial	27-5469		Station Card Shield	27-5437		
9A	Compensator (2 section)	31-6287	Drive Cord Assembly (Pointer Operation)	31-2359		Station Card Holder	36-1273		
10	Resistor (3300 ohms, 1/2 watt)	33-233339	Gasket (Dial Mounting)	27-9258		Tuning Condenser Drum	31-2353		
11	Compensator (1 section)	31-6289	Knobs (Tuning, Tone, Volume, Wave Sw.)	27-4332		Tuning Shaft and Bracket Assembly	31-2356		
12	Mica Cond. (350 mmfd.)	30-1094							
13	Mica Cond. (250 mmfd.)	30-1119							
14	Mica Cond. (1650 mmfd.)	5877							
15	Tuning Condenser	32-2357							
16	1st I. F. Transformer	32-3139							
16A	Part of 16								
16B	Part of 16								
17	Resistor (4700 ohms, 1/2 watt)	33-247339							
18	Tubular Cond. (.03 mfd.)	30-4572							
19	Resistor (47,000 ohms, 1/2 watt)	33-347339							
20	Tubular Cond. (.005 mfd.)	30-4583							
21	Resistor (68,000 ohms, 1/2 watt)	33-368439							
22	Resistor (2.2 meg., 1/2 watt)	33-522339							
23	Resistor (22,000 ohms, 1/2 watt)	33-523339							
24	2nd I. F. Transformer	32-3140							
24A	Part of 24								
24B	Part of 24								
24C	Part of 24								
25	Volume Control (.5 meg.)	33-5305							
26	Tubular Cond. (.05 mfd.)	30-4519							
27	Resistor (10.0 meg., 1/2 watt)	33-610339							
28	Resistor (.005 mfd.)	30-4585							
29	Resistor (330,000 ohms, 1/2 watt)	33-433339							
30	Mica Cond. (250 mmfd.)	30-1119							
31	Tubular Cond. (.006 mfd.)	30-4610							
32	Resistor (470,000 ohms, 1/2 watt)	33-447339							
33	Tubular Cond. (.2 mfd.)	30-4587							
34	Tone Control and On-Off Switch	42-1481							
35	Tubular Cond. (.03 mfd.)	30-4517							
36	Pilot Lamp	30-4518							
37	Tubular Cond. (.03 mfd.)	30-4591							
38	Output Transformer	32-8018							
39	Cone and Voice Coil Assembly (Spkr. Part No. 36-1452-2)	36-4193							
40	Field Coil (4200 ohms, 100-130 V.)	30-2363							
41	Electrolytic Cond. (16 mfd., 300 V.)	30-2364							
42	Electrolytic Cond. (16 mfd., 400 V.)	30-2364							
43	Resistor (2.2 meg., 1/2 watt)	33-522339							
44	Resistor (1.0 meg., 1/2 watt)	33-510339							
45	Power Transformer (100-130 V., 200-260 V., 50-60 cycles)	32-8006							

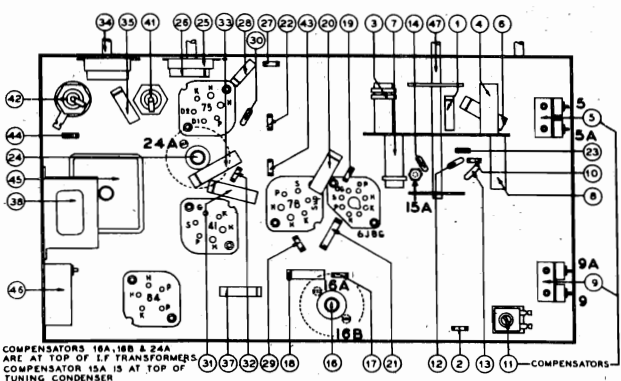

MANY OF THE PARTS IN THIS PHILCO SUCH AS CONDENSERS AND RESISTORS, ARE HELD TO MUCH CLOSER TOLERANCE THAN STANDARD REPLACEMENT PARTS. GENUINE PHILCO REPLACEMENT PARTS MUST BE USED TO OBTAIN SATISFACTORY PERFORMANCE OF THIS MODEL.

SPECIFICATIONS

TYPE CIRCUIT: Model 40-715, code 121, is a five (5) tube A. C. operated radio employing a superheterodyne circuit with three tuning ranges for reception of Standard, Police and Shortwave Broadcast Stations. Connections are also provided for attaching a high impedance Electric Phonograph pick-up. In addition other features of design are: Automatic Volume Control; Three Point Tone Control; Bass Compensation; and special temperature and humidity-proof compensators for reducing frequency drift to a minimum.

POWER SUPPLY: 100-130 or 200-260 volts A. C. The voltage ranges are selected by inserting the changeover plug as indicated on top of the power transformer.
POWER CONSUMPTION: 40 watts.
TUNING RANGES: 530 to 1720 K. C. 2.3 to 7.4 M. C. 7.3 to 22 M. C.
I. F. FREQUENCY: 455 K. C.
PHILCO TUBES: 6J8EG, Converter-Oscillator; 78E, I. F. Amplifier; 75, Second Detector, First Audio and A. V. C.; 41E, Audio Output; 84, Rectifier.

FOR ALIGNMENT SEE INDEX

MODEL 40-725(121)
 MODEL 40-755(121)
 Alignment

PHILCO RADIO & TELEV. CORP.

Philco-Tropic Models 40-725, code 121
 40-755, code 121

SPECIFICATIONS

Model 40-725

TYPE CIRCUIT: Model 40-725, code 121, is a six (6) tube A. C. operated receiver employing a superheterodyne circuit with three tuning ranges for reception of Standard, Police and Shortwave Broadcast Stations. Connections are also provided for attaching a high impedance Electric Phonograph pick-up. In addition other features of design are: Automatic Volume Control; Continuously Variable Tone Control; Bass Compensation, and special compensation for reducing frequency drift to a minimum.

POWER SUPPLY: 100-130 or 200-260 volt, 50-60 cycle, 60 watts. The voltage ranges are selected by inserting the plug as indicated on top of the power transformer.

TUNING RANGES:
 530 to 1720 K. C. 2.3 to 7.4 M. C. 7.3 to 22 M. C.

I. F. FREQUENCY: 455 K. C.

PHILCO TUBES: 78E, R. F. Amplifier; 6J8EG, Converter-Oscillator; 78E, I. F. Amplifier; 75, Second Detector, First Audio, and A. V. C.; 41E, Pentode Audio Output; 84, Rectifier.

AUDIO OUTPUT: 2.5 watts.

AERIAL AND GROUND: To obtain maximum performance from this receiver, the Philco Safety Aerial, Part No. 40-6370 should be used and a good ground connection to the nearest water pipe or any other good ground.

CABINET DIMENSIONS:
 Height, 14 1/4". Width, 18 1/4". Depth, 10 1/4".

Model 40-755

TYPE CIRCUIT: Model 40-755, code 121, is an eight (8) tube A. C. operated receiver employing a superheterodyne circuit with three tuning ranges for reception of Standard, Police and Shortwave Broadcast Stations. Connections are also provided for attaching a high impedance Electric Phonograph pick-up. Other features of design are: Automatic Volume Control; Continuously Variable Tone Control; Bass Compensation; Push-Pull Pentode Audio Output; Tuning Resonance Indicator, and special compensation for reducing frequency drift to a minimum.

POWER SUPPLY: 100-130 or 200-260 volt, 50 to 60 cycle, 83 watts. The voltage ranges are selected by inserting the plug as indicated on top of the power transformer.

TUNING RANGES:
 530 to 1720 K. C. 2.3 to 7.4 M. C. 7.3 to 22 M. C.

I. F. FREQUENCY: 455 K. C.

PHILCO TUBES: 78E, R. F. Amplifier; 6J8EG, Converter-Oscillator; 78E, I. F. Amplifier; 75, Second Detector, First Audio, and A. V. C.; 76, Inverter; two 42E, Pentode Audio Output; 80, Rectifier.

AUDIO OUTPUT: 6 watts.

AERIAL AND GROUND: Same as Model 40-725.

CABINET DIMENSIONS:
 Height, 14 1/4". Width, 20". Depth, 10 1/4".

ALIGNING COMPENSATING CONDENSERS

EQUIPMENT REQUIRED

(1) **Signal Generator.** In order to properly adjust this receiver a calibrated signal generator such as Philco Model 077 A. C. or Model 177 battery operated are required. These signal generators cover a frequency range of 540 to 36,000 K. C.

(2) **Indicating Device.** To obtain maximum signal strength and accurate adjustment of the padders a vacuum tube volt-

meter and circuit tester such as Philco Models 027 and 028 is recommended. These testers also contain an audio output meter which may be used as an indicating device.

(3) **Aligning Tools.** Fiber handle screw driver, Philco Part No. 45-2610.

CONNECTING ALIGNING INSTRUMENTS

Vacuum Tube Voltmeter: To use the vacuum tube voltmeter as an aligning indicator it should be connected to the A. V. C. circuit as follows:

1. Connect the negative (—) terminal of the voltmeter through a 2 meg. resistor to the converter grid (6J8G). The resistor must be connected directly to the grid of the tube and the voltmeter wire attached to the resistor.

2. Connect the positive (+) terminal to the chassis ground terminal.

Audio Output Meter: If this type of meter is used as an aligning indicator, it should be connected to the plate and screen terminals of the 41 tube. Adjust the meter for the 0 to 30 volt A. C. scale.

After connecting the aligning meter, adjust the compensators in the order as shown in the tabulation below. Locations of the compensators are shown in Fig. 1. If the output meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.

Operations in Order	SIGNAL GENERATOR			RECEIVER				SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Settings	Adjust Compensators		
						Model 40-725	Model 40-755	
1	6J8G Grid and Ground	.1 mfd.	455 K. C.	580 K. C.	Vol. Max. Tone Treble	38B, 38A, 32B, 32A	39B, 39A, 33B, 33A	
2	Ant. & Grnd.	200 mmfd.	1500 K. C.	1500 K. C.	Vol. Max. Range Switch "Brdcst"	27, 22B, 22A	27, 32B, 32A	Note B
3	Ant. & Grnd.	200 mmfd.	580 K. C.	580 K. C.	Vol. Max.	23	23	Roll Gang
4	Ant. & Grnd.	200 mmfd.	1500 K. C.	1500 K. C.	Vol. Max.	27, 22B, 22A	27, 32B, 32A	
5	Ant. & Grnd.	400 ohms	6.0 M. C.	6.0 M. C.	Vol. Max. Tone Treble Range Switch "S.W.1"	27A	27A	Roll Gang
6	Ant. & Grnd.	400 ohms	20 M. C.	20 M. C.	Vol. Max. Tone Treble Range Switch "S.W.2"	29, 15, 5	29, 16, 5	Note C

NOTE A—The "Dummy Antenna" consists of a condenser or resistance connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.


NOTE B—**DIAL CALIBRATION:** In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning

condenser closed (maximum capacity), set the dial pointer on the first mark on the left edge (low frequency end) of the broadcast scale.

NOTE C—When adjusting compensator (29) be sure to tune in the fundamental signal (20 M. C.) instead of the image signal. If the compensator is correctly adjusted, the image signal will be 910 K. C. below the fundamental signal, which will be 19.090 M. C.

PHILCO RADIO & TELEV. CORP.

MODEL 40-725(121)
Schematic, Voltage

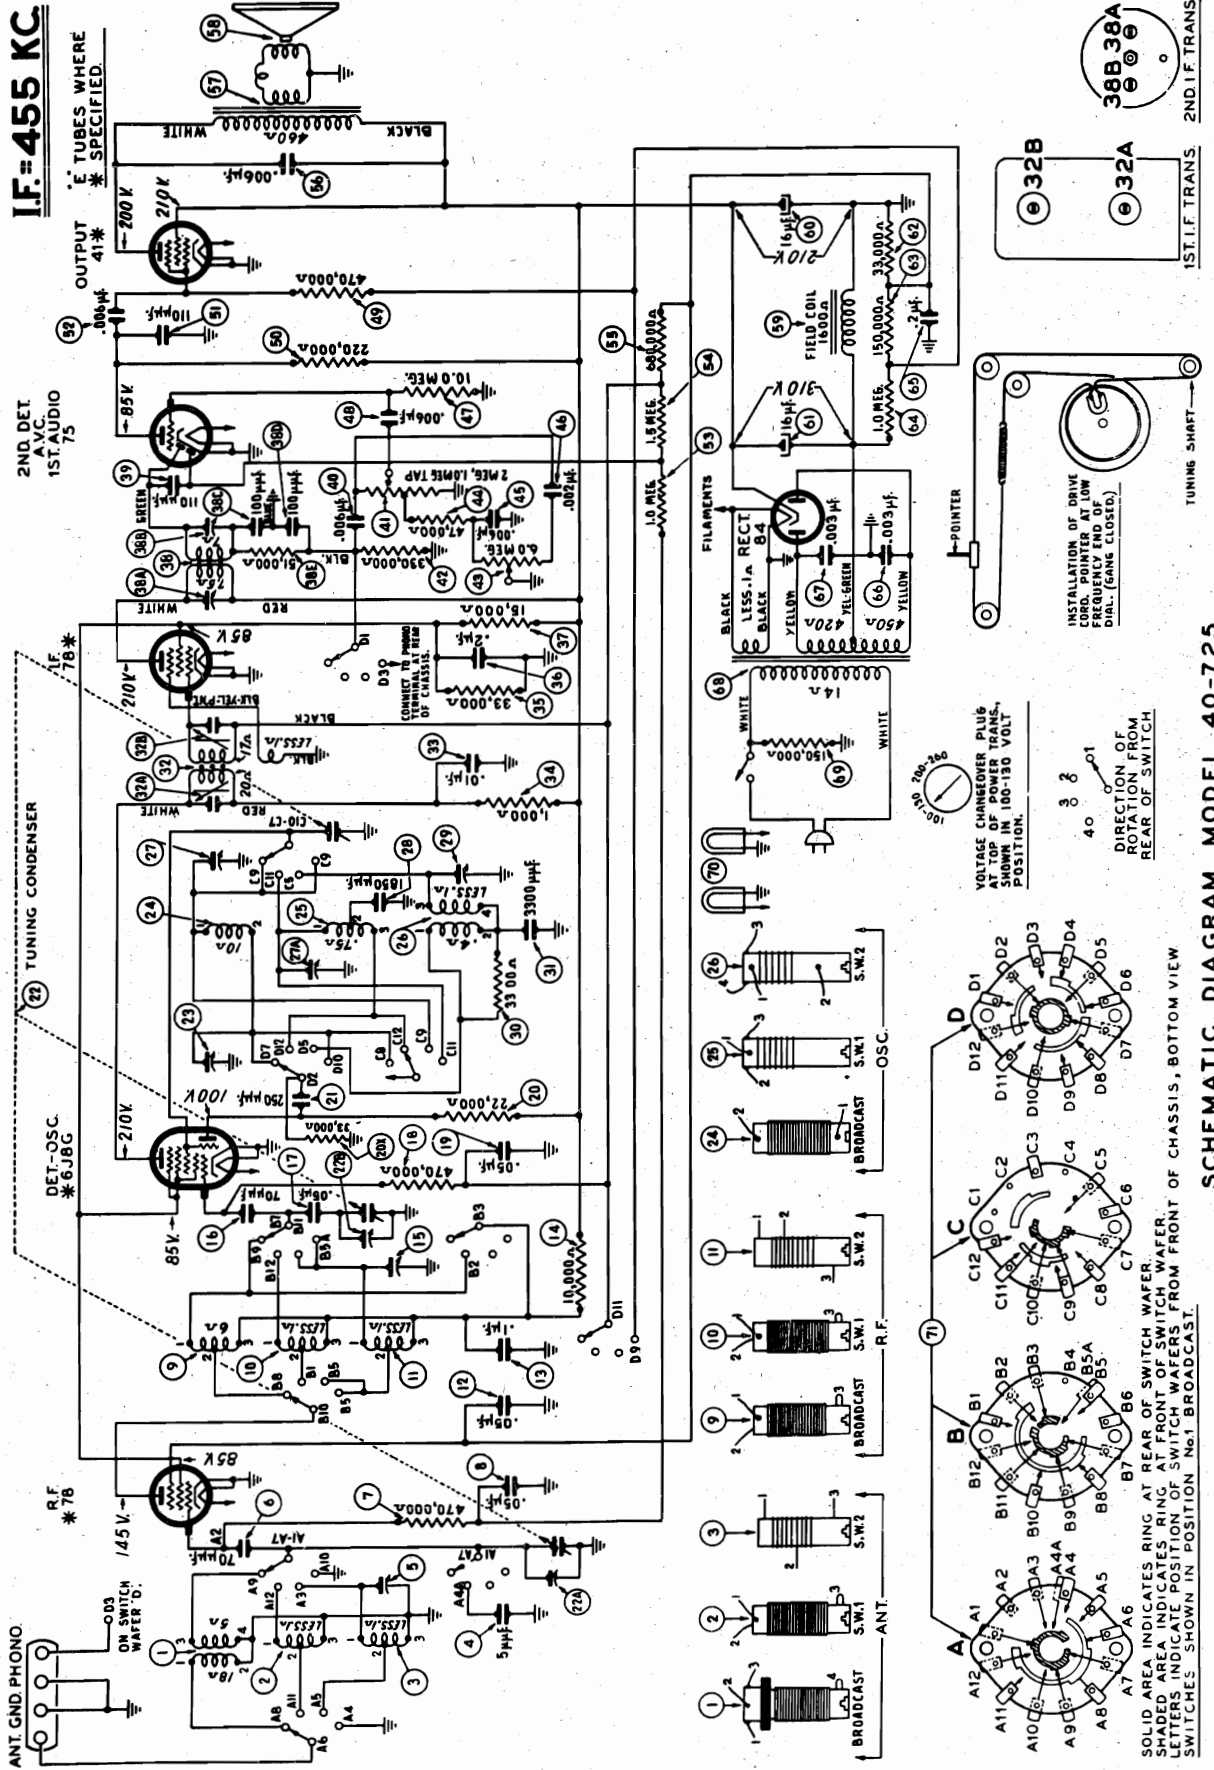

SCHMATIC DIAGRAM MODEL 40-725

MODEL 40-725(121)
MODEL 40-755(121)
Chassis, Parts

PHILCO RADIO & TELEV. CORP.

Model 40-725, Code 121
Replacement Parts

SCH. No.	DESCRIPTION	PART No.
1	Antenna Transformer (Broadcast)	32-2588
2	Antenna Transformer (S. W. 2)	32-3191
3	Antenna Transformer (S. W. 2)	32-3196
4	Tubular Condenser (.5 mfd.)	30-1120
5	Compensator (Antenna S. W. 2)	31-6288
6	Mica Condenser (.70 mfd.)	30-1117
7	Resistor (470,000 ohms, 1/2 watt)	33-447339
8	Tubular Condenser (.05 mfd.)	30-4609
9	R. F. Transformer (Broadcast)	32-3189
10	R. F. Transformer (S. W. 2)	32-3190
11	R. F. Transformer (S. W. 2)	32-3197
12	Tubular Condenser (.05 mfd.)	30-4519
13	Tubular Condenser (.1 mfd.)	30-4611
14	Resistor (10,000 ohms, 1 watt)	33-310439
15	Compensator (R. F. S. W. 2)	31-6232
16	Mica Condenser (.70 mfd.)	30-1117
17	Tubular Condenser (.05 mfd.)	30-4519
18	Resistor (470,000 ohms, 1/2 watt)	33-447339
19	Tubular Condenser (.05 mfd.)	30-4609
20	Resistor (22,000 ohms, 1/2 watt)	33-322339
20X	Resistor (33,000 ohms, 1/2 watt)	33-333339
21	Mica Condenser (.250 mfd.)	30-1119
22	Tuning Condenser Assembly	31-2186
23	Compensator (Broadcast series)	31-6287
24	Oscillator Transformer (Broadcast)	32-3254
25	Oscillator Transformer (S. W. 1)	32-3094
26	Oscillator Transformer (S. W. 2)	32-3102
27	Compensator (Broadcast shunt)	31-2687
27A	Compensator (S. W. 1)	31-2687
28	Tracking Condenser (.1850 mfd.)	31-6310
29	Compensator (S. W. 2)	33-233339
30	Resistor (3300 ohms, 1/2 watt)	33-233339
31	Tracking Condenser (.300 mfd.)	31-6311
32	1st I. F. Transformer Assembly	32-3187
33	Tubular Condenser (.01 mfd.)	30-4572
34	Resistor (1,000 ohms, 1/2 watt)	33-210339
35	Resistor (33,000 ohms, 1/2 watt)	33-333339
36	Tubular Condenser (.2 mfd.)	30-4587
37	Resistor (15,000 ohms, 1/2 watt)	33-315439
38	2nd I. F. Transformer Assembly	32-3133
39	Mica Condenser (.110 mfd.)	30-1118
40	Tubular Condenser (.006 mfd.)	30-4583
41	Volume Control (2 meg.)	33-5298
42	Resistor (330,000 ohms, 1/2 watt)	33-423339
43	Tone Control and On-Off Switch	33-5299
44	Resistor (47,000 ohms, 1/2 watt)	33-347339
45	Tubular Condenser (.002 mfd.)	30-4579
46	Tubular Condenser (.002 mfd.)	30-4579
47	Resistor (10.0 meg., 1/2 watt)	33-610339
48	Tubular Condenser (.006 mfd.)	30-4583
49	Resistor (470,000 ohms, 1/2 watt)	33-447339
50	Resistor (250,000 ohms, 1/2 watt)	33-423339
51	Mica Condenser (.110 mfd.)	30-1118
52	Tubular Condenser (.006 mfd.)	30-4583
53	Resistor (1.0 meg., 1/2 watt)	33-510339
54	Resistor (1.5 meg., 1/2 watt)	33-513339
55	Resistor (680,000 ohms, 1/2 watt)	33-610339
56	Tubular Condenser (.006 mfd.)	30-4581
57	Output Transformer	32-8018
58	Cone and Voice Coil Assembly (Speaker Part No. 36-1452-2)	36-4103
59	Field Coil (Replace Spkr. Part No. 36-1453)	36-4104
60	Electrolytic Condenser (16 mfd., 300 V.)	30-2319
61	Electrolytic Condenser (16 mfd., 400 V.)	30-2364
62	Resistor (33,000 ohms, 1/2 watt)	33-333339
63	Resistor (150,000 ohms, 1/2 watt)	33-413339
64	Resistor (1.0 meg., 1/2 watt)	33-510339
65	Tubular Condenser (.003 mfd.)	30-4608
66	Tubular Condenser (.003 mfd.)	30-4608

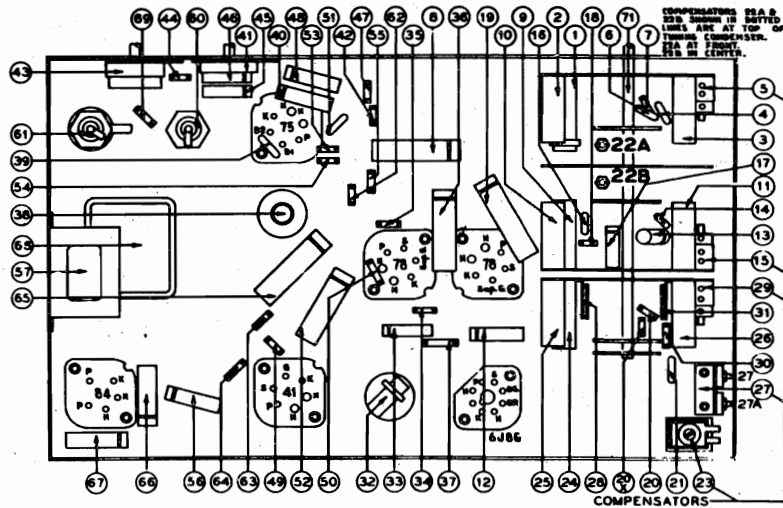


FIG. 1. MODEL 40-725 PART LOCATIONS, UNDERSIDE OF CHASSIS.

SCH. No.	DESCRIPTION	PART No.	SCH. No.	DESCRIPTION	PART No.
67	Tubular Condenser (.003 mfd.)	30-4608	27-8225	Felt Strip (Bezel Mounting)	27-8225
68	Power Transformer (100-130 V., 200-260 V., 50-60 cycles)	32-8006	27-4330	Knob (Tuning)	27-4330
69	Resistor (150,000 ohms, 1/2 watt)	33-413339	27-4862	Knob (Tone Control)	27-4862
70	Pilot Lamps	34-2064E	27-4332	Knobs (Volume and Wave Switch)	27-4332
71	Wave Switch	42-1504	38-9798	Pilot Lamp Socket Assembly	38-9798
			58-1276	Pointer	58-1276
			W-2071	Screws (Bezel Mounting)	W-2071
			28-8913	Spring (Drive Cord)	28-8913
			28-8002	Spring Clip (Coil Mounting)	28-8002
			27-6035	Socket (5 prong, type 84 tube)	27-6035
			27-6036	Socket (6 prong, type 78, 41, 75 tubes)	27-6036
			27-6058	Socket (Octal, type 6J80 tube)	27-6058
			38-1452	Speaker	38-1452
			31-2327	Tuning Drum and Coupling Assembly	31-2327
			31-2329	Vernier Drive (Tuning)	31-2329

MISCELLANEOUS PARTS

Model 40-755, Code 121
Replacement Parts

SCH. No.	DESCRIPTION	PART No.
1	Antenna Transformer (Broadcast)	32-2588
2	Antenna Transformer (S. W. 3)	32-3191
3	Antenna Transformer (S. W. 2)	32-3196
4	Mica Condenser (.5 mfd.)	30-1120
5	Compensator (Antenna S. W. 2)	31-6288
6	Mica Condenser (.70 mfd.)	30-1117
7	Resistor (470,000 ohms, 1/2 watt)	33-447339
8	Tubular Condenser (.05 mfd.)	30-4609
9	R. F. Transformer (Broadcast)	32-3189
10	R. F. Transformer (S. W. 1)	32-3190
11	R. F. Transformer (S. W. 2)	32-3197
12	Tubular Condenser (.05 mfd.)	30-4519
13	Tubular Condenser (.1 mfd.)	30-4611
14	Resistor (10,000 ohms, 1 watt)	33-310439
15	Tubular Condenser (.05 mfd.)	30-4609
16	Compensator (Antenna S. W. 2)	31-6288
17	Tubular Condenser (.05 mfd.)	30-4519
18	Resistor (470,000 ohms, 1/2 watt)	33-447339
19	Resistor (22,000 ohms, 1/2 watt)	33-322339
20	Mica Condenser (.70 mfd.)	30-1117
21	Mica Condenser (.250 mfd.)	30-1119
22	Resistor (33,000 ohms, 1/2 watt)	33-333339
23	Compensator	31-6289
24	Oscillator Transformer (Broadcast)	32-3254
25	Oscillator Transformer (S. W. 1)	32-3094
26	Oscillator Transformer (S. W. 2)	32-3102
27	Compensator (2 sections)	31-6287
28	Tracking Condenser (.1850 mfd.)	31-6310
29	Compensator	31-6288
30	Resistor (3300 ohms, 1/2 watt)	33-233339
31	Tracking Condenser (.300 mfd.)	31-6311
32	Tuning Condenser Assembly	31-2186
33	1st I. F. Transformer Assembly	32-3187
34	Tubular Condenser (.01 mfd.)	30-4572
35	Resistor (1,000 ohms, 1/2 watt)	33-210339
36	Resistor (33,000 ohms, 1/2 watt)	33-333339
37	Tubular Condenser (.2 mfd.)	30-4587
38	Resistor (15,000 ohms, 1/2 watt)	33-315439
39	2nd I. F. Transformer Assembly	32-3133
40	Mica Condenser (.110 mfd.)	30-1118
41	Tubular Condenser (.006 mfd.)	30-4583
42	Volume Control (2 meg.)	33-5298
43	Resistor (330,000 ohms, 1/2 watt)	33-423339
44	Tone Control and On-Off Switch	33-5299
45	Resistor (47,000 ohms, 1/2 watt)	33-347339
46	Tubular Condenser (.002 mfd.)	30-4579
47	Tubular Condenser (.002 mfd.)	30-4579
48	Resistor (10.0 meg., 1/2 watt)	33-610339
49	Tubular Condenser (.006 mfd.)	30-4583
50	Resistor (250,000 ohms, 1/2 watt)	33-423339
51	Resistor (470,000 ohms, 1/2 watt)	33-447339
52	Mica Condenser (.250 mfd.)	30-1119
53	Tubular Condenser (.006 mfd.)	30-4583
54	Resistor (4,700 ohms, 1/2 watt)	33-247339
55	Resistor (1.0 meg., 1/2 watt)	33-510339
56	Resistor (33,000 ohms, 1/2 watt)	33-333339
57	Resistor (1.0 meg., 1/2 watt)	33-510339
58	Resistor (470,000 ohms, 1/2 watt)	33-447339
59	Resistor (470,000 ohms, 1/2 watt)	33-447339
60	Resistor (470,000 ohms, 1/2 watt)	33-447339
61	Resistor (470,000 ohms, 1/2 watt)	33-447339
62	Tubular Condenser (.006 mfd.)	30-4610
63	Tubular Condenser (.006 mfd.)	30-4610
64	Tubular Condenser (.006 mfd.)	30-4582
65	Output Transformer	32-8058
66	Cone and Voice Coil Assembly (Speaker Part No. 36-1453-4)	36-4104
67	Field Coil (Replace Spkr. Part No. 36-1453 T Cabinet)	36-4105
68	Electrolytic Condenser (16 mfd., 400 V.)	30-2364

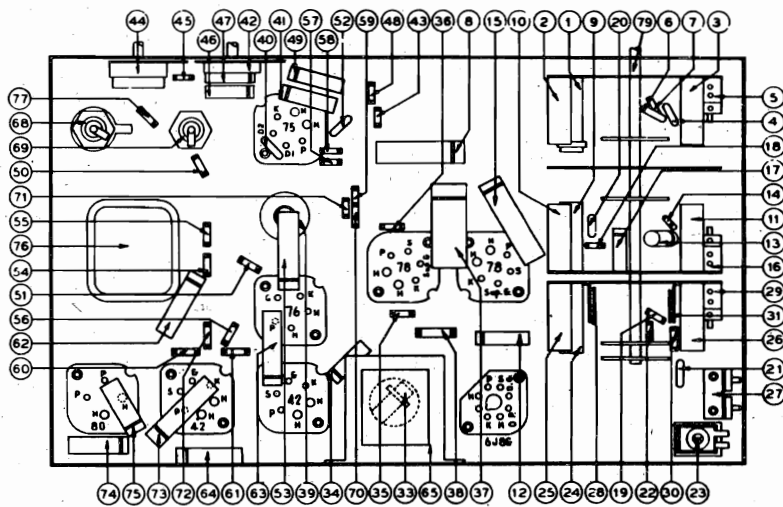


FIG. 2. MODEL 40-755 PART LOCATIONS, UNDERSIDE OF CHASSIS.

SCH. No.	DESCRIPTION	PART No.	SCH. No.	DESCRIPTION	PART No.
69	Electrolytic Condenser (40 mfd., 300 V.)	30-2366	27-5544	Dial	27-5544
70	Resistor (39,000 ohms, 1/2 watt)	33-339339	31-2330	Drive Cord	31-2330
71	Resistor (150,000 ohms, 1/2 watt)	33-413339	27-4330	Knob (Tuning)	27-4330
72	Resistor (1.0 meg., 1/2 watt)	33-510339	27-4862	Knob (Volume and Wave Switch)	27-4862
73	Tubular Condenser (.2 mfd.)	30-4587	27-4332	Knobs (Tone Control)	27-4332
74	Tubular Condenser (.003 mfd.)	30-4608	58-1276	Pointer	58-1276
75	Tubular Condenser (.003 mfd.)	30-4608	27-6035	Socket (5 prong, type 78 tube)	27-6035
76	Power Transformer (100-130 V., 200-260 V., 50-60 cycles)	32-8007	27-6036	Socket (6 prong, type 78, 42, 75 tubes)	27-6036
77	Resistor (150,000 ohms, 1/2 watt)	33-413339	27-6044	Socket (4 prong, type 80 tube)	27-6044
78	Pilot Lamps	42-1504	27-6058	Socket (Octal, type 6J80 tube)	27-6058
79	Wave Switch	42-1504	36-1460	Speaker (Model 40-755XK)	36-1460
	Cable and Plug (Power Supply)	58-12289	27-4862	Knob (Tuning)	27-4862
	(Special A. C. Export Plug)	L-1367	28-8913	Spring (Drive Cord)	28-8913
	Cabinet (40-755T)	10416A	56-1273	Station Card Holder	56-1273
	Cabinet (40-755XK)	10420A	31-2327	Tuning Drum and Coupling Assembly	31-2327
			31-2329	Vernier Drive (Tuning)	31-2329

MODEL 40-748(121)
 Chassis, Trimmers
 Alignment
 MODEL S-1722
 Tuner Data

PHILCO RADIO & TELEV. CORP.

PHILCO - TROPIC MODEL 40-748, CODE 121

SPECIFICATIONS

TYPE CIRCUIT: Model 40-748, code 121 is a 7 tube battery operated radio receiver employing a superheterodyne circuit with 3 tuning ranges for reception of standard, police, and shortwave broadcast stations. Connections are also provided for attaching an external high impedance electric phonograph pick-up. In addition other features of design are automatic volume control, continuously variable tone control, BASS compensation, and a push pull pentode audio output circuit. A vibrator is used for supplying the "B" voltage from the 6 volt storage battery.

POWER SUPPLY: 6 volt storage battery.

TUNING RANGES: 530-1720 K. C. 2.3-7.4 M. C. 7.3-22 M. C.

INTERMEDIATE FREQUENCY: 455 K. C.

PHILCO TUBES USED: 6S7EG, R. F. Amplifier; 6D8EG, Converter; 6S7EG, I. F. Amplifier; 6T7G, Second Detector A. V. C. and First Audio; 6G6EG, Second Audio; two 49, Output.

AUDIO OUTPUT: 2.5 watts.

AERIAL & GROUND: To obtain maximum performance from this receiver, the Philco Safety aerial, Part No. 40-6370 should be used. A good ground source to the nearest water pipe or any other grounding connection should be used.

CABINET DIMENSIONS: Height, 14 1/2"; Width, 20"; Depth, 10 1/4".


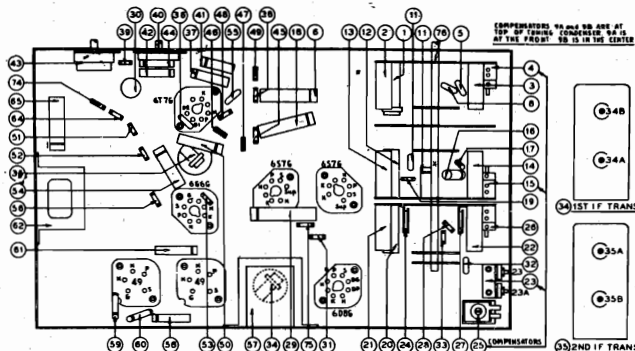


FIG. 1. PART LOCATIONS—UNDERSIDE OF CHASSIS.

MISCELLANEOUS PARTS

DESCRIPTION	PART NO.
Speaker (T Cabinet)	36-1455
Speaker (XX Cabinet)	36-1456
Spring Clip (Coil Mounting)	28-5002
Spring (Drive Cord)	28-8913
Station Card Holder	56-1273
Socket (5 prong, type 49 tube)	27-6035
Socket (6 prong, vibrator)	27-6036
Socket (Loktal tubes)	27-6058
Shield (Tube, Half)	56-1072
Shield Cap	56-1073
Shield Base	56-1074
Rubber Cushion (Vibrator Mounting)	27-4287
Rubber Washer (Vibrator Unit Mounting)	27-4307
Rubber Corner (Chassis)	27-4564
Tuning Drum and Coupling Assembly	31-2327
Vernier Drive (Tuning)	31-2329

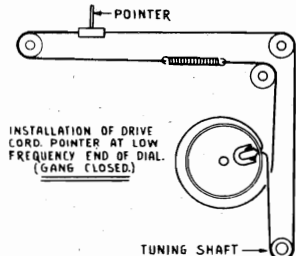

INSTALLATION OF DRIVE CORD.

ALIGNMENT OF COMPENSATORS

Operations in Order	SIGNAL GENERATOR			RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Settings	Adjust Compensators	
1	6D8EG Grid and Ground	.1 mfd.	455 K. C.	580 K. C.	Vol. Max. Tone-Treble Range Switch "Brdcst"	35A, 35B 34A, 34B	
2	Ant. & Grd.	200 mmfd.	1500 K. C.	1500 K. C.	Vol. Max. Range Switch "Brdcst"	23, 9B, 9A	Note B
3	Ant. & Grd.	200 mmfd.	580 K. C.	580 K. C.	Vol. Max.	25	Roll Gang
4	Ant. & Grd.	200 mmfd.	1500 K. C.	1500 K. C.	Vol. Max. Range Switch "Brdcst"	23, 9B, 9A	Note B
5	Ant. & Grd.	400 ohms	6.0 M. C.	6.0 M. C.	Vol. Max. Tone-Treble Range Switch "S. W. 1"	23A	Roll Gang
6	Ant. & Grd.	400 ohms	21 M. C.	21 M. C.	Vol. Max. Tone-Treble Range Switch "S. W. 2"	26, 15, 4	Note C

NOTE A—The "Dummy Antenna" consists of a condenser or resistance connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.

NOTE B—**DIAL CALIBRATION:** In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning

condenser closed (maximum capacity), set the dial pointer on the first mark on the left edge (low frequency end) of the broadcast scale.

NOTE C—When adjusting compensator (26) be sure to tune in the fundamental signal (21 M. C.—second signal from tight position of padder) instead of the image signal. If the compensator is correctly adjusted, the image signal will be found by turning the receiver dial 910 K. C. below the fundamental signal.

MODEL S-1722 SETTING UP THE RECEIVER FOR AUTOMATIC TUNING

1—Turn the Receiver on and allow it to operate for TWENTY minutes. Remove the cover plate over the automatic tuning adjusting screws. This plate is on the front of the Receiver and is removed by removing two screws.

2—Push the Automatic Station Selector button until the word "DIAL" appears in the indicator window. Tune in the station whose call letters are in the first position on the dial (the highest frequency station) and note the program. Push the Automatic Selector button once and this station's call letters will appear at the indicator window.

3—With a small screwdriver, turn the No. 1 adjusting screw (See Fig. 3) in the lower column, to the right or left until this station is tuned in. Now adjust the corresponding screw in the upper column until maximum volume is obtained. Make these adjustments carefully, as it may be easy to pass by, the loudest point on some stations.

When adjusting for Automatic Tuning on strong local stations the antenna rod should be all the way down and the adjustments made

with the car in a shielded area, such as in a steel constructed building or under a viaduct. This is necessary in order to obtain a weak signal so the adjustments can be accurately made.

4—Press the Automatic Station Selector button until "DIAL" appears again in the indicator window and tune in the station whose call letters are in the second position on the automatic dial (the next lower frequency). Press the automatic button two times and adjust the number 2 set of adjusting screws.

Repeat this procedure until each of the five pairs of adjusting screws has been tuned to its respective station.

IT IS NECESSARY THAT THE SETTING OF THE ADJUSTING SCREWS BE REPEATED TO BE SURE THEY ARE PROPERLY SET SO THAT MAXIMUM PERFORMANCE MAY BE HAD.

Make all adjustments for maximum reading on the output meter.

PHILCO RADIO & TELEV. CORP.

MODEL 40-755(121)
Schematic, Voltage
Trimmers








I.F. = 455 KC.

* E TUBES WHERE SPECIFIED.

(30) TUNING CONDENSER

DET-OSC
6.88G*


ANT. GND. PHONO
ON SWITCH WAFER 'D'

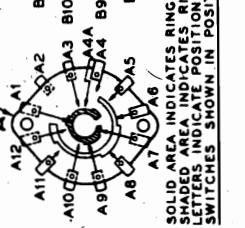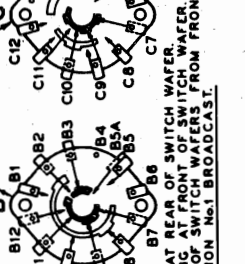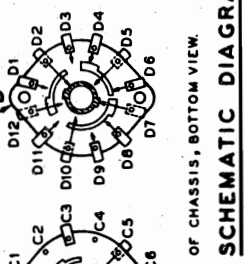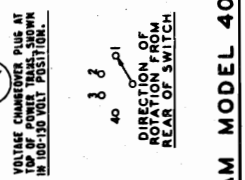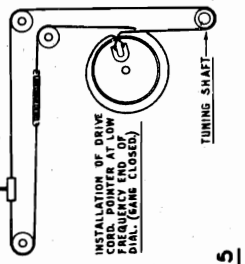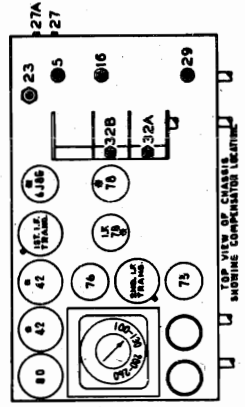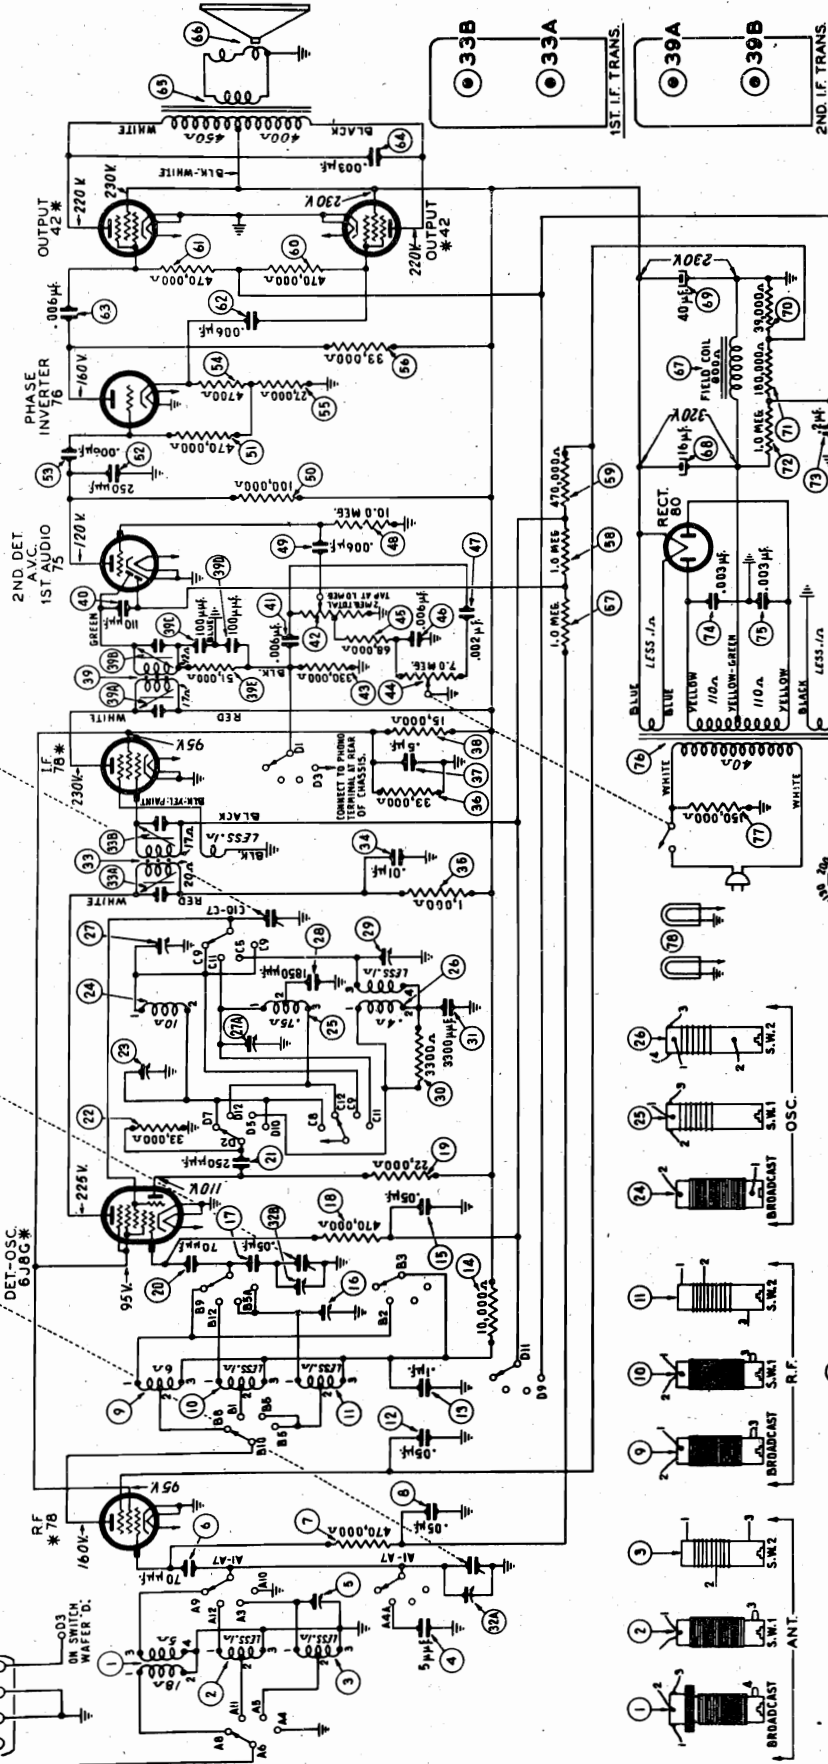

SCHEMATIC DIAGRAM MODEL 40-755

MODEL 107(121)
Runs 1,2
Schematic, Voltage
Notes

PHILCO RADIO & TELEV. CORP

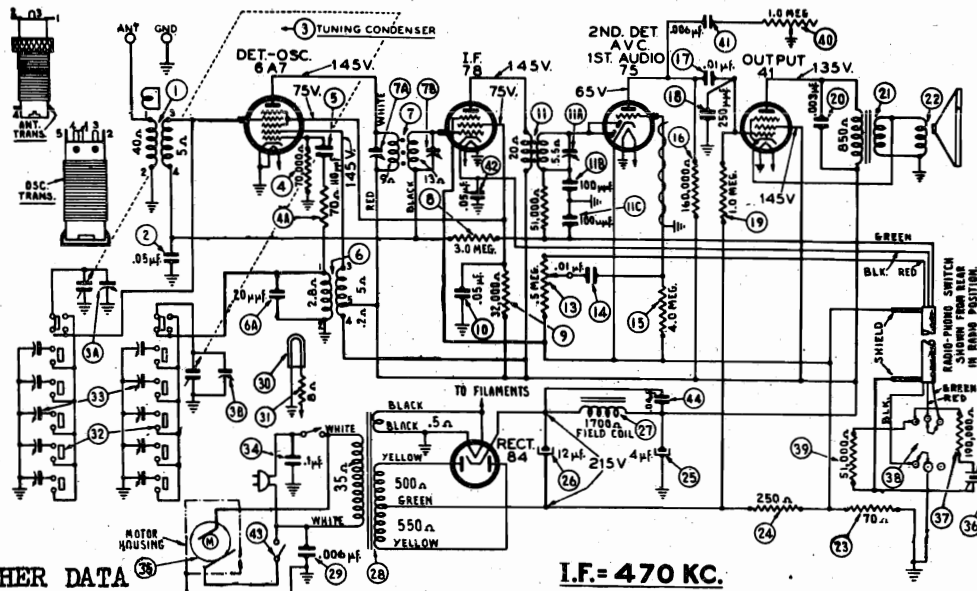

FOR OTHER DATA
SEE INDEX

I.F. = 470 KC.
SCHEMATIC DIAGRAM MODEL 107
SPECIFICATIONS

TYPE OF CIRCUIT:

Model 107, code 121 is a combination Automatic Record Changer, Phonograph and Electric push-button tuning radio receiver.

The record Changer plays eight 10" records automatically and 12" records manually and employs a crystal pick-up.

The Radio Receiver employs a five tube A.C. operated superheterodyne circuit, covering standard broadcast frequencies: 530 to 1720 K.C., Automatic Volume Control, and Pentode Audio Output. Six Electric Automatic Push-Buttons are provided; five push-buttons are used for selecting any one of five stations in the standard broadcast range, and one push-button for

changing to manual tuning. The procedure for adjusting the push-buttons for reception of stations will be found in the instructions supplied with each set.

INTERMEDIATE FREQUENCY: 470 K.C.

PHILCO TUBES USED:

6A7 First Detector Oscillator; 78, I.F. Amplifier; 75, Second Detector, A.V.C., First Audio; 41 Audio Output and 84, Rectifier.

POWER SUPPLY: 115 V., 50 to 60 cycle A.C.

Power Transformers are available for operation on 115 V., 25 to 40 cycles A.C.

POWER CONSUMPTION: 57 watts

AUDIO OUTPUT: One (1) watt

Compensating condensers will be found under the

The aligning instructions for the R.F. and I.F. model 39-7, code.121. (See Philco page 10-2)


Schem. No.	Description	Part No.
1	Antenna Transformer.....	32-3039
2	Tubular Condenser (.05 mfd.)....	30-4519
3	Tuning Condenser.....	31-2338
4	Resistor (70,000 ohms, 1/2 watt)...	33-370339
4A	Resistor (70 ohms, 1/2 watt)....	33-070339
5	Mica Condenser (110 mmfd.).....	30-1031
6	Oscillator Transformer.....	32-2122
6A	Mica Condenser (20 mmfd.).....	30-1123
7	1st I.F. Transformer Assy.....	32-3121
8	Resistor (3.0 meg., 1/2 watt)....	33-530339
9	Resistor (32,000 ohms, 1/2 watt)...	33-332339
10	Tubular Cond. (.05 mfd.).....	30-4444
11	2nd I.F. Transformer Assy.....	32-2674
12	Resistor (51,000 ohms, 1/2 watt)...	33-351339
13	Volume Control (.5 meg.).....	33-5254
14	Tubular Condenser (.01 mfd.)....	30-4479
15	Resistor (4.0 meg., 1/2 watt)....	33-540339
16	Resistor (180,000 ohms, 1/2 watt)...	33-416339
17	Tubular Condenser (.01 mfd.)....	30-4572
18	Mica Condenser (250 mmfd.).....	30-1032
19	Resistor (1.0 meg., 1/2 watt)....	33-510339
20	Tubular Condenser (.003 mfd.)....	30-4582
21	Output Transformer.....	32-7980
22	Cone & Voice Coil Assembly	
	Speaker No. 36-1473-3.....	36-4120
	Speaker No. 36-1440-3.....	36-4086
23	Resistor (50 ohms, 1/2 watt)....	33-050339
24	Resistor (250 ohms, 1/2 watt)....	33-125339
25	Electrolytic Cond.	
	(Run 1- 6 mfd., 450 V.).....	30-2265

Schem. No.	Description	Part No.
26	Electrolytic Cond. (12 mfd., 300V.)	30-2404
27	Field Coil	
	(replace spkr. #36-1473-3)	
	(replace spkr. #36-1440-3)	
28	Power Trans. (115V., 50-60 cycles)	32-7979
29	Condenser (.006 mfd., moulded)...	30-4423
30	Pilot Lamp.....	34-2064
31	Pilot Lamp Resistor (8 ohms, 1/2wt)	33-980331
32	Push Button Switch.....	42-1477
33	Padder Strip Assembly.....	31-6290
34	Tubular Cond. (.1 mfd.).....	30-4122
35	Phono Motor (110 volt 60 cycle)...	35-1163
36	Crystal Pick-up (metal case)....	35-2041
	Crystal Pick-up (bakelite case)...	35-2030
37	Resistor (190,000 ohms, 1/2 watt)	33-419339
38	Radio Phono Switch.....	42-1509
39	Resistor (51,000 ohms, 1/2 watt)...	33-351339
40	Tone Control (1.0 meg.).....	33-5320
41	Tubular Cond. (.006 mfd.).....	30-4591
42	Tubular Cond. (.05 mfd.).....	30-4519
43	Motor Switch.....	
44	Tubular Cond. (.04 mfd.).....	30-4119
	Bezel Assembly (Dial).....	56-1305
	Bezel Clamp.....	28-5153
	Knobs.....	27-4832
	Manual Tab.....	27-5460
	Push-button.....	27-4702
	Station tab holder.....	28-5661
	Visor Screen.....	27-5468
	Automatic Record Changer	35-1169

PHILCO RADIO & TELEV. CORP. Schematic, Chassis
 Trimmers, Alignment

MODELS 931, 932

No.	Description	Part No.
1	Antenna Choke	65-0102
2	Condenser (.01 mfd.)	61-0014
3	Antenna Transformer	65-0195
4	Antenna Compensator	63-0030
5	Tuning Condenser	63-0028
6	Condenser (.05 mfd.)	30-4444
7	First Padder (on Tun. Cond.)	30-1106
8	Condenser (8 mmfd.)	30-4569
9	Condenser (.05 mfd.)	30-4569
10	Resistor (10,000 ohms)	33-310247
11	Condenser (110 mmfd.)	30-1031
12	Resistor (20,000 ohms)	33-320247
13	Resistor (200 ohms)	33-120346
14	Filament Choke	65-0158
15	Resistor (100,000 ohms)	33-410247
16	Second Padder (on Tun. Cond.)	30-1031
17	Oscillator Transformer	65-0194
18	Padder (Pri. 1st I. F. Trans.)	65-0191
19	Padder (Sec. 2nd I. F. Trans.)	30-4569
20	Resistor (200 ohms)	33-120346
21	Second I. F. Transformer	65-0192
22	Resistor (2,000,000 ohms)	33-520247
23	Condenser (250 mmfd.)	61-0033
24	Volume Control (350,000 ohms) and On-Off Switch	67-0020
25	Condenser (4,000 mmfd.)	30-4456
26	Resistor (13,000 ohms)	33-13247
27	Condenser (.05 mfd.)	30-4569
28	Resistor (15,000,000 ohms)	33-615247
29	Resistor (250,000 ohms)	33-424247
30	Condenser (.01 mfd.)	61-0014
31	Resistor (500,000 ohms)	33-49247
32	Filter Condenser (10-10-30 mfd.)	61-0088
33	Resistor (190 ohms)	33-120346
34	Resistor (2,000 ohms)	33-220347
35	Condenser (.05 mfd.)	30-4449
36	Output Transformer (Model 931)	65-0221
37	Output Transformer (Model 932)	65-0221
38	Cone Kit (Model 932)	91-0078
39	Field Coil (For 73-0027-1 Speaker)	91-0078
40	Field Coil (Not Replaceable)	91-0078
41	Condenser (250 mmfd.)	61-0033
42	Condenser (.5 mfd.)	61-0054
43	"A" Choke	32-1644
44	Condenser (250 mmfd.)	61-0033
45	Pilot Lamp	34-2089
46	Vibrator Choke	65-0204
47	Condenser (.5 mfd.)	61-0054
48	Vibrator	83-0017
49	Resistor (200 ohms)	33-120347
50	Power Transformer	65-0185
51	Resistor (200 ohms)	33-120347
52	Condenser (.015 mfd.)	30-4552
53	Resistor (2,500 ohms)	33-225447
54	Condenser (250 mmfd.)	61-0033
55	Condenser (250 mmfd.)	61-0033
56	Field Coil (Not Replaceable)	91-0068
57	Cone Kit (Model 932)	91-0068
58	For 73-0024-2 Speaker	91-0028
59	For 73-0025-2 Speaker	91-0028
60	Drive Cord (1.6 3/4")	55-0589
61	Drive Cord (1.5 3/4")	55-0589
62	Drive Cord (1.3 3/4")	55-0589
63	Drive Cord (1.1 3/4")	55-0589
64	Dial Assembly (Model 931)	77-0346
65	Dial Assembly (Model 932)	77-0346

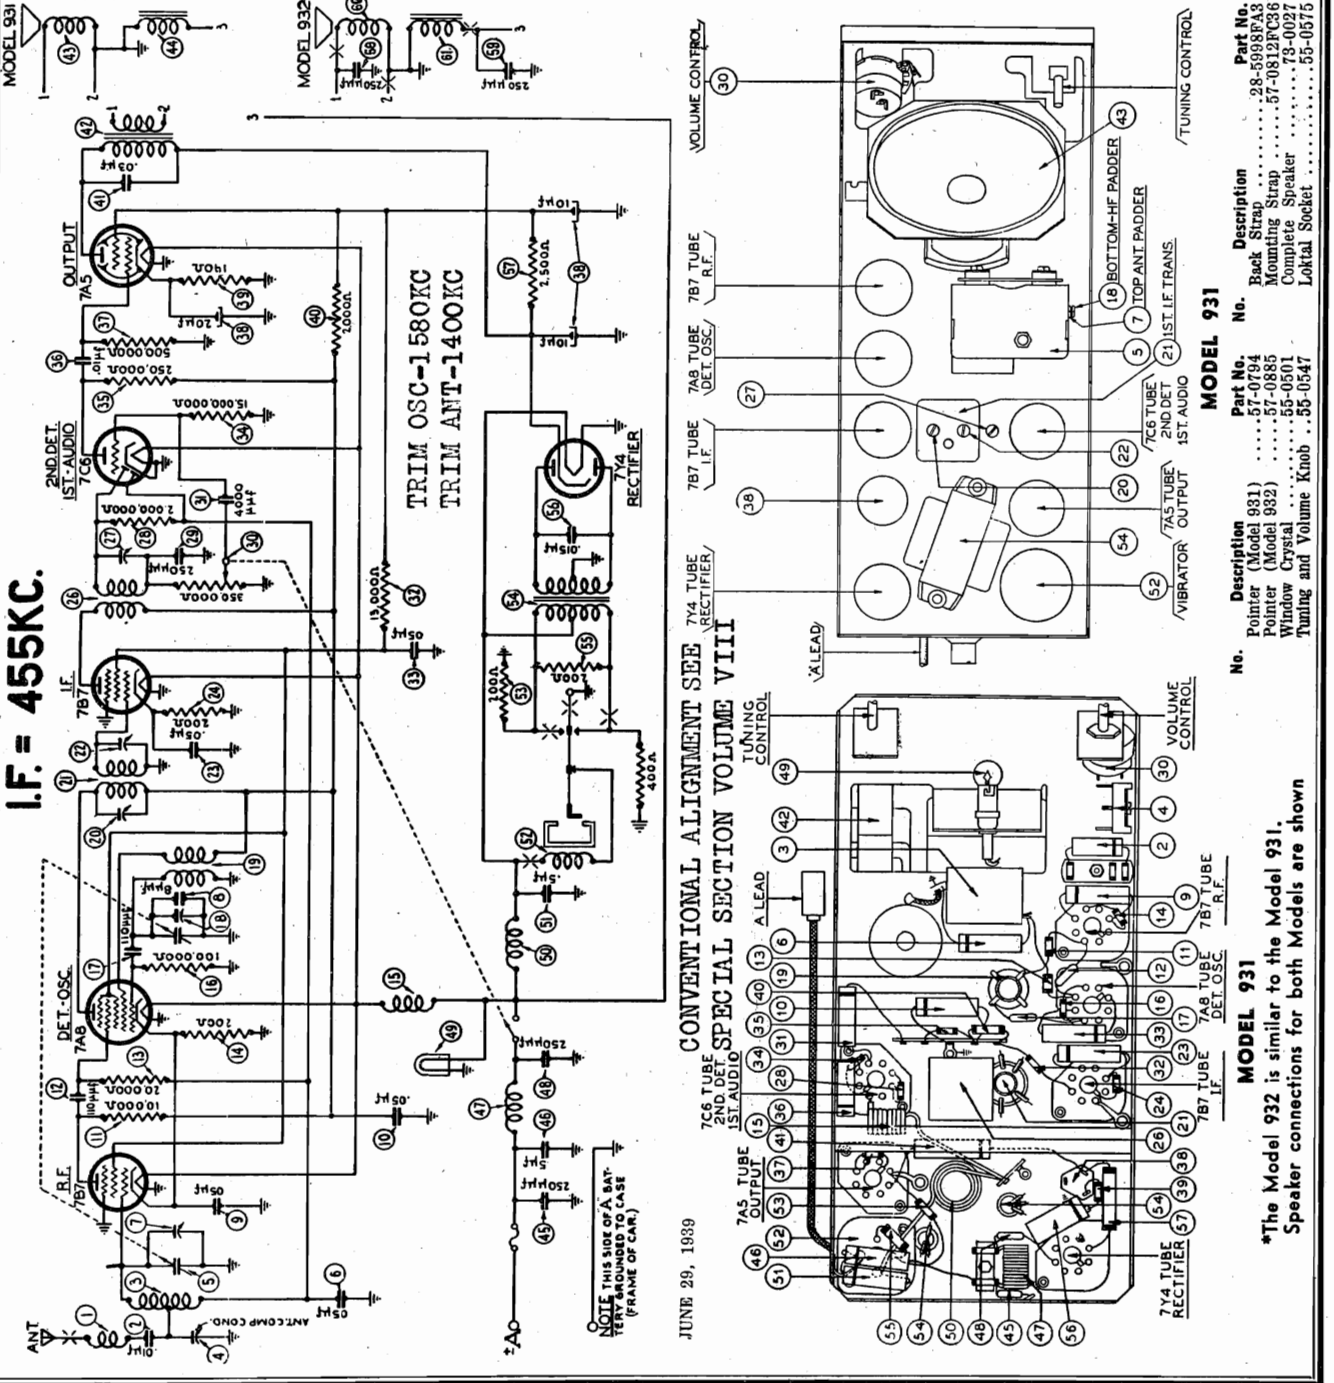

©John F. Rider, Publisher

No.	Description	Part No.
1	Pointer (Model 931)	57-0794
2	Pointer (Model 932)	57-0885
3	Window Crystal	55-0501
4	Tuning and Volume Knob	55-0547
5	Back Strap	28-5998FA3
6	Mounting Strap	57-0812FC36
7	Complete Speaker	73-0027
8	Loktal Socket	55-0547

NOTE THIS SIDE OF A BATTERY (FRAME OF CAR.)

JUNE 29, 1939

*The Model 932 is similar to the Model 931. Speaker connections for both Models are shown

MODEL 933
Alignment, Trimmers

PHILCO RADIO & TELEV. CORP.

**MODEL 933
ADJUSTMENTS**

All padding adjustments are carefully made at the factory and ordinarily no readjustments are necessary. However, when readjustments are required, the procedure given below must be followed in detail.

Equipment — Fully charged heavy duty storage battery or 6-volt power pack, 077 or 177 Philco Signal Generator, 027 Philco vacuum tube voltmeter and circuit tester and a 27-7159 Padding screw driver.

General — The vacuum tube voltmeter can be used as a "wireless" output meter as a convenient method for obtaining maximum output reading. Solder one end of a piece of wire to a strip of phosphor bronze approximately 1" wide, 6" long and .02" thick. Coil this strip so that it can be slipped over the top of the type 7B5 output tube, and make a fairly tight contact. Connect the other end of the wire to the "high" terminal of the vacuum tube voltmeter. Then connect a wire from the radio chassis to the "plus" terminal of the vacuum tube voltmeter.

With the Radio and signal generator set up for operation at the prescribed frequency, turn the Radio volume control on full and set the signal generator attenuator so that a half scale reading is obtained on the output meter. The signal in the speaker should be audible but not loud.

The shielding on the generator output lead must be connected to the Radio housing.

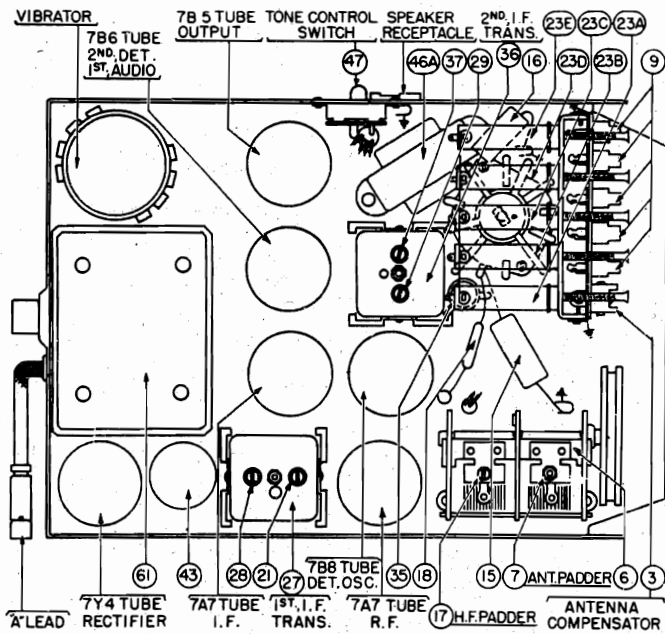


FIGURE 3

OPERATION	SIGNAL GENERATOR		DUMMY CAPACITY	SPECIAL INSTRUCTIONS	ADJUST PADDERS
	FREQUENCY	CONNECTION			
1	Press the Automatic Station Selector button until "DIAL" appears in the window and stations can be tuned in by Manual Tuning.				
2	470 K.C.	To Antenna Receptacle on Radio	30 Mmfd. See Note 1	Turn Tuning Condenser Plates Out of Mesh as Far as They Will Go.	29 28 29 21
3	1580 K.C.	To Antenna Receptacle on Radio	30 Mmfd. See Note 1	Set Tuning Condenser at 1580 K.C.	27
4	1500 K.C.	To Antenna Receptacle on Radio	30 Mmfd. See Note 1	Set Tuning Condenser at 1500 K.C.	2 Note 2

Make all adjustments for maximum reading on the output meter.

NOTE 1 Connect the antenna lead, Part No. 41-3191, to the antenna receptacle in the radio. Connect a 30 Mmfd. Condenser in series between the signal generator and the antenna lead.

NOTE 2 When the antenna stage adjustment is made with the Radio installed in the car, the Radio antenna lead must be connected to the car antenna in the usual manner. Connect the signal generator output lead to a wire placed near the car antenna but not connected to it. Also adjust the antenna compensator 2 for maximum on a weak signal at approximately 1400 K.C.

PHILCO RADIO & TELEV. CORP.

MODEL 933
Schematic, Chassis

MODEL 933 SCHEMATIC
I.F. = 470KC

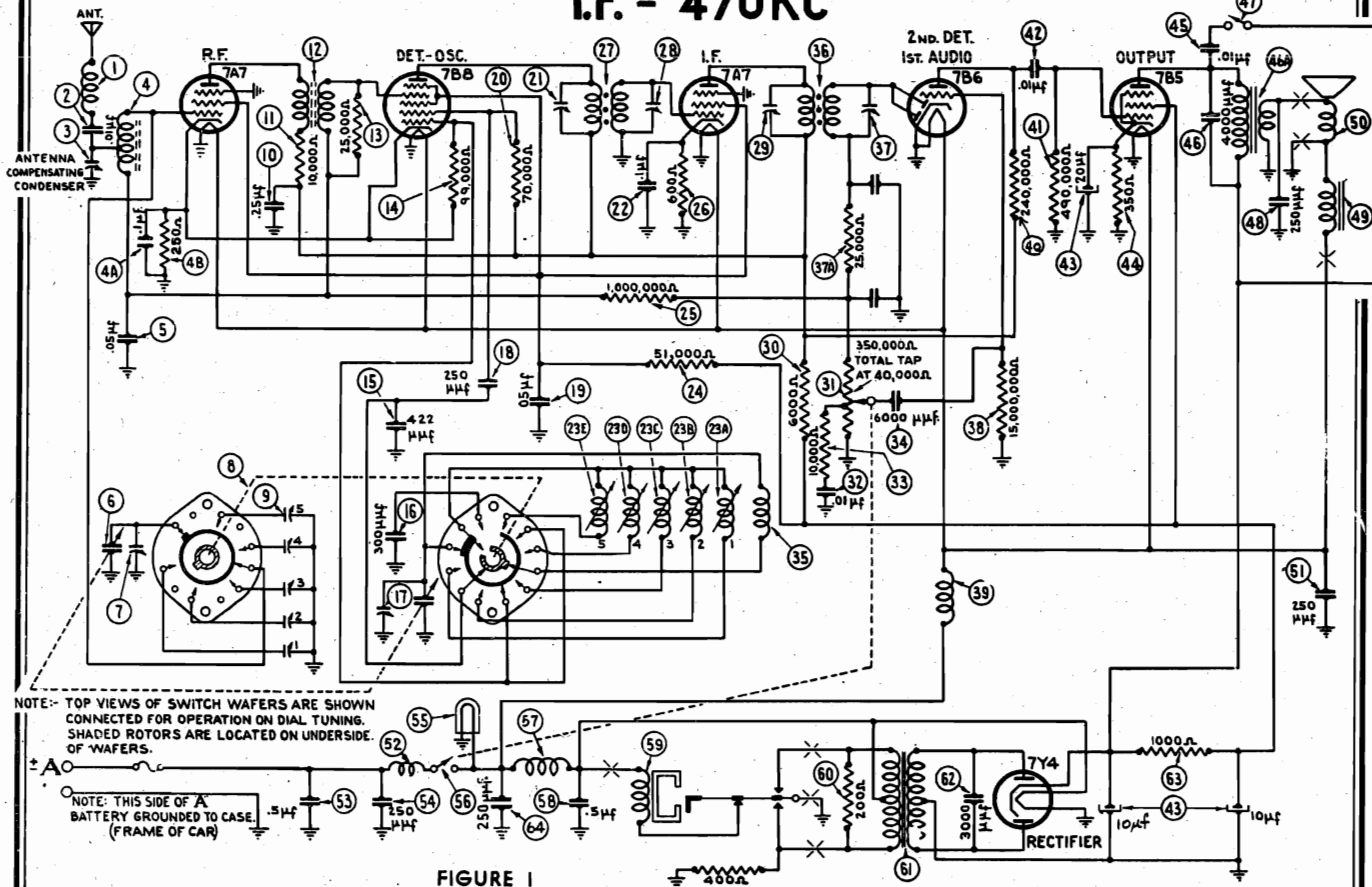


FIGURE 1

PARTS LIST

No.	Description	Part No. No.	Description	Part No.
1	Antenna Choke	65-0184	Volume Control (350,000 ohms)	67-0019
2	Condenser (.01 mfd.)	61-0014	and On-Off Switch	67-0019
3	Antenna Compensator	Part of 3	Condenser (.01 mfd.)	61-0014
4	Antenna Transformer	65-0182	Resistor (10,000 ohms)	33-310237
5	Condenser (.01 mfd.)	30-1499	Condenser (6,000 mmfd.)	30-4467
6	Resistor (250 ohms)	33-125336	Oscillator Transformer	
7	Condenser (.05 mfd.)	30-4444	(Dial)	65-0165
8	Tuning Condenser	63-0024	Second I. F. Transformer	65-0161
9	First Padder (on Tun. Cond.)		Padder (Sec. 2nd I. F. Trans.)	
10	Wafer Switch	412-1024	Resistor (25,000 ohms)	33-325237
11	Antenna Padder Assy.	77-0286	Resistor	
12	Condenser (.25 mfd.)	30-4446	(15,000,000 ohms)	33-615337
13	Resistor (10,000 ohms)	33-310237	Filament Choke	65-0201
14	R. F. Transformer	65-0183	Resistor (240,000 ohms)	33-424337
15	Resistor (25,000 ohms)	33-325337	Resistor (490,000 ohms)	33-449237
16	Resistor (99,000 ohms)	33-399237	Condenser (.01 mfd.)	30-4124
17	Silver Mica Condenser		Filter Condenser	
18	(422 mmfd.)	61-0066	(10-10-20 mfd.)	61-0028
19	Silver Mica Condenser		Resistor (350 ohms)	33-135336
20	(300 mmfd.)	61-0002	Condenser (.01 mfd.)	30-4381
21	Second Padder (on Tun. Cond.)		Condenser (4,000 mmfd.)	30-4185
22	Condenser (250 mmfd.)	30-1038	Output Transformer	65-0182
23	Condenser (.05 mfd.)	30-4444	Tone Control Switch	42-1406
24	Resistor (70,000 ohms)	33-370337	Condenser (250 mmfd.)	61-0033
25	Padder (Pri. 1st I. F. Trans.)		Field Coil	Not Replaceable
26	Condenser (.1 mfd.)	30-4499	Cone Kit	
27	Oscillator Transformer (1)	65-0169	For 73-0024-3 Speaker	91-0068
28	Oscillator Transformer (2)	65-0170	For 73-0024-3 Speaker	91-0028
29	Oscillator Transformer (3)	65-0171	For 73-0025-2 Speaker	91-0065
30	Oscillator Transformer (4)	65-0172	Condenser (250 mmfd.)	61-0033
31	Oscillator Transformer (5)	65-0173	"A" Choke	65-0037
32	Resistor (51,000 ohms)	33-351257	Condenser (.5 mfd.)	30-4565
33	Resistor		Condenser (250 mmfd.)	61-0033
34	(1,000,000 ohms)	33-510237	Pilot Lamp	34-2040
35	Resistor (600 ohms)	33-160438	On-Off Switch and	
36	Resistor (1,000 ohms)	33-310237	Volume Control	67-0019
37	First I. F. Transformer	65-0160	Vibrator Choke	65-0075
38	Padder (Sec. 1st I. F. Trans.)		Condenser (.5 mfd.)	30-4565
39	Padder (Pri. 2nd I. F. Trans.)		Vibrator	83-0017
40	Resistor (6,000 ohms)	33-260337		

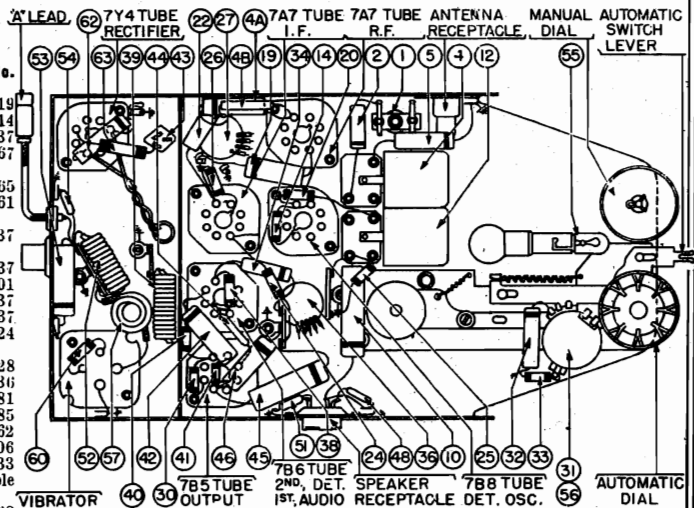


FIGURE 2

No.	Description	Part No. No.	Description	Part No.
41	Resistor (200 ohms)	33-120337	Push Button Knob	55-0474
42	Power Transformer	65-0159	Loktal Socket	55-0575
43	Condenser (3,000 mmfd.)	61-0059	Back Strap	28-5998FA3
44	Resistor (1,000 ohms)	33-210437	Front Bracket	57-0753FC36
45	Condenser (250 mmfd.)	61-0033	Fuse	45-2559
46	Dial Disc. and Drum Assy.	77-0323	Fuse Lead	77-0235
47	Station Indicator Dial	318-1395	Interference Condenser	30-4007
48	Dial Tabs	79-0343	Distributor Resistor	33-1196

MODELS C1708, S1722, S1726
 F1740, L1760, L1761
 Dial Cord Data

PHILCO RADIO & TELEV. CORP.

PHILCO AUTO RADIO

INSTALLING THE DIAL CORD ON THE
Chrysler Model C-1708 **Lincoln Models L-1760, L-1761**
Ford Model F-1740 **Studebaker Models S-1722, S-1726**

STUDEBAKER MODEL S-1722

1. Remove the chassis from the housing.
2. Place the Receiver on the bench, right side up and with the shafts to the front.
3. Turn the tuning condenser plates in mesh.
4. Feed the loop on the short end of the cord through the hole in the back of the tuning shaft and pass the free end of the loop through the loop of the cord. Pull the cord tight.
5. Wrap 1½ turns of cord CLOCKWISE around the end of the tuning shaft and then ¼ of a turn CLOCKWISE around the tuning condenser drum.
6. Fasten the center loop of the cord to one end of the spring and fasten the other end of the spring in the hole in the drum.
7. Pass the long end of the cord around the idler pulley and through the hole in the sub-base.
8. Hold the cord and turn the radio over with the wiring side showing.
9. Wrap one turn of cord CLOCKWISE around the tuning dial drum.
10. Holding the cord with one hand, turn the tuning shaft CLOCKWISE until the stop position is reached.
11. Wrap 1½ turns of cord COUNTER-CLOCKWISE, around the tuning shaft in back of the front flange.
12. Feed the loop of the cord through the hole in the shaft and pass the free end of cord through the eyelet. The cord must have tension after it is assembled.
13. Assemble the Receiver in the housing.

STUDEBAKER MODEL S-1726

1. Remove the top cover, bottom cover and front housing.
2. Place the Receiver on the bench right side up with the control knobs in front.
3. Turn the tuning shaft clockwise as far as it will go.
4. Loosen the two set screws on the tuning shaft coupling, so that the shaft turns freely.
5. Place the small "U" spring in the slot at the back of the tuning shaft.
6. Hook one of the knotted ends of the cord into one of the hooks on the spring and turn the shaft clockwise until there are eight turns of cord on the shaft between the spring and the front shaft bracket.
7. Hook the remaining end of the cord to the other hook on the spring and turn the shaft counter-clockwise until one turn is wound on the back end of the shaft.
8. Hold the tuning shaft so that it does not turn and place the both cords COUNTER-CLOCKWISE over the two pulleys.
9. Bring the cord under the pointer with the front end of the cord in front of the guide bracket and the back end of the cord in back of the guide bracket.
10. Slide the pointer over to the right end of the guide bracket and place the large "U" spring under the pointer and through the slot, with the hook to the back.
11. With a fine piece of wire as a hook, feed the front end of the cord through the hole in the pointer from the bottom and fasten this loop to the hook on the "U" spring on the pointer.
12. Pull the cord tight and loop it over the pulley on the left end of the pointer guide bracket. Tighten the set screws on the tuning shaft coupling.
13. The pointer can be adjusted to the proper frequency by holding the tuning shaft and sliding the pointer along the guide bracket.
14. Replace the front housing and top and bottom covers.

October, 1939.

When installing new dial cords on the custom built radios, follow the procedure given below:

CHRYSLER MODEL C-1708

1. Remove the top cover, bottom cover and front housing.
2. Turn the radio upside down with the control shafts in front.
3. Turn the tuning control shaft CLOCKWISE to the stop position.
4. Hook the spring on one end of the cord.
5. Hook a paper clip through the eyelet of the cord to which the spring is attached and fasten the clip to the dial mounting bracket.
6. Place the long end of the cord over the rear wooden pulley. Wrap seven turns of cord CLOCKWISE around the back portion of the tuning shaft. Pass the cord through the slot in the collar of the shaft and wrap ¼ of a turn CLOCKWISE around the shaft in front of the collar. Run the cord over the front wooden pulley and fasten the other end of the cord to the spring. Then force the cord over the metal pulley at the top of the scale bracket.
7. Place the pointer on the dial cord and slide it to the first line above the 1500 mark.
8. Remove the paper clip and recheck the pointer setting, using a broadcast signal or a Philco Signal Generator. Slide the pointer along the dial cord to the correct frequency.
9. Replace the front housing and the top and bottom covers.


FORD MODEL F-1740 — LINCOLN MODELS L-1760 and L-1761

1. Remove the tuning condenser assembly from the front casting of the radio.
2. Remove the dial and shaft assembly from the tuning condenser bracket.
3. Remove the dial drum from the knob and shaft assembly.
4. Place the tuning condenser unit on the bench with the bracket to the back and the metal pulley facing up. The tuning condenser plates must be in mesh.
5. Connect one end of the cord to the link and hook the link on the right tab on the inside of the pulley. Feed the cord through the slot in the pulley and wrap one turn of cord CLOCKWISE around the pulley, keeping the cord to the right of the guide pin on the tuning condenser.
6. Hold the dial drum with the left hand and wrap two turns of cord COUNTER-CLOCKWISE around the spool, keeping the cord to the left of the pin in the spool. Loop one turn of cord around the pin. Then wrap one turn COUNTER-CLOCKWISE around the spool, keeping the cord to the right of the pin in the spool.
7. Place the knob and shaft on the spool, with the pin on the spool nearest to the knob and with the thin washer on the left side of the knob and the thick washer on the right side. Place the shaft in the grooves on the tuning condenser bracket.
8. Bring the cord COUNTER-CLOCKWISE around the idler pulley on the bracket and wrap five turns of cord CLOCKWISE around the knob shaft. Be sure the washer is against the end of the bracket.
9. Bring the cord CLOCKWISE around the pulley on the tuning condenser and connect the end of the cord to the link on the drum.
10. Hook the closed end of the tension spring to the tab on the left side of the pulley and hook the other end to both ends of the cord where it enters the pulley.
11. Replace the tuning condenser assembly.



PHILCO RADIO & TELEV. CORP.

MODEL C-1708 Chrysler Schematic, Chassis

I.F. = 455 KC.

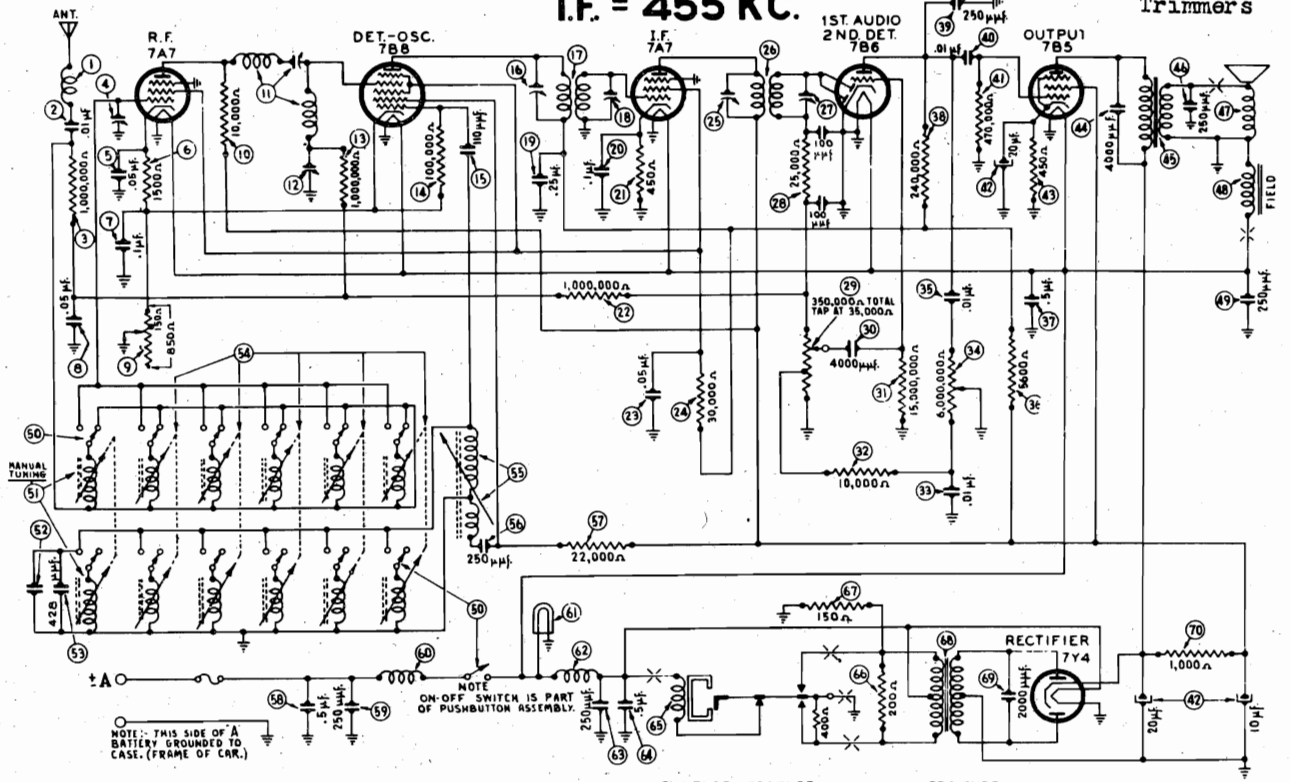

SCHE. No.	DESCRIPTION	PART No.
1	Antenna Choke	65-0102
2	Capacitor (.01 mfd.)	61-0014
3	Resistor (1,000,000 ohms)	33-51154
4	Antenna Padder	63-0035
5	Capacitor (.05 mfd.)	30-4444
6	Resistor (1500 ohms)	33-21334
7	Capacitor (.1 mfd.)	30-4499
8	Capacitor (.05 mfd.)	30-4444
9	Sensitivity Control (1000 ohms)	67-0025
10	Resistor (10,000 ohms)	33-310454
11	Untuned R.F. Assembly	65-0271
12	I.F. Wave Trap Padder	33-510154
13	Resistor (100,000 ohms)	33-41314
14	Capacitor (.10 mfd.)	30-1031
15	Padder (Pri. 1st I.F. Trans.)	65-0236
16	Padder (Sec. 1st I.F. Trans.)	30-4604
17	Capacitor (.25 mfd.)	30-4499
18	Resistor (450 ohms)	33-145438
19	Resistor (1,000,000 ohms)	33-510154
20	Capacitor (.05 mfd.)	30-4444
21	Resistor (30,000 ohms)	33-330434
22	Padder (Pri. 2nd I.F. Trans.)	65-0237
23	Second I.F. Transformer	33-325154
24	Padder (Sec. 2nd I.F. Trans.)	67-0022
25	Volume Control (350,000 ohms)	30-4134
26	Capacitor (4000 mfd.)	33-615154
27	Resistor (15,000,000 ohms)	33-310154
28	Resistor (10,000 ohms)	30-4479
29	Capacitor (.01 mfd.)	67-0022
30	Tone Control (8,000,000 ohms)	30-4479
31	Capacitor (.01 mfd.)	33-256334
32	Resistor (5600 ohms)	61-0058
33	Capacitor (.5 mfd.)	33-424354
34	Resistor (240,000 ohms)	61-0033
35	Capacitor (250 mfd.)	30-4169
36	Capacitor (.01 mfd.)	33-447154
37	Resistor (470,000 ohms)	61-0072
38	Filter Capacitor (10-20-20 mfd.)	61-0073
39	Resistor (450 ohms)	65-0235
40	Capacitor (4000 mfd.)	61-0033
41	Output Transformer	77-0369
42	Capacitor (250 mfd.)	61-0086
43	Cone Kit (For 73-0030-2)	91-0086
44	Cone Kit (For 73-0030-3)	91-0085
45	Field Coil	Not Replaceable
46	Capacitor (250 mfd.)	61-0033
47	Push-Button and On-Off Switch	85-0097
48	Inductive Tuning Unit	77-0440
49	Thermol Compensator	61-0080
50	Capacitor (428 mfd.)	61-0082
51	Push-Button Switch and Trans. Assy.	77-0369
52	Oscillator Tracking Coil	65-0229
53	Capacitor (250 mfd.)	61-0033
54	Resistor (23,000 ohms)	33-322454
55	Capacitor (.5 mfd.)	61-0033
56	Capacitor (250 mfd.)	30-4491
57	'A' Choke	34-2039
58	Pilot Lamp	65-0222
59	Vibrator Choke	61-0033
60	Capacitor (5 mfd.)	30-4565
61	Vibrator	83-0017
62	Resistor (200 ohms)	33-120354
63	Resistor (150 ohms)	33-115354
64	Power Transformer	65-0234
65	Capacitor (2000 mfd.)	33-210434
66	Resistor (1000 ohms)	33-0581
67	Dial	55-0888
68	Drive Cord	57-0894
69	Pointer	55-0679
70	Window Crystal	55-0651
	Tuning and Volume Knob (Motor Parts)	55-0683
	Tuning and Volume Knob (Dodge)	55-0684
	Tuning and Volume Knob (DeSoto)	55-0685
	Tuning and Volume Knob (Chrysler)	55-0713
	Push-Button Knob	55-0731
	Station Tab	55-0730
	Tone Control Lever (Ply. Chry., Dod.)	57-1110FA7
	Tone Control Lever (DeSoto)	57-1107A17
	Speaker Cable	95-0105
	Antenna Lead	95-0106

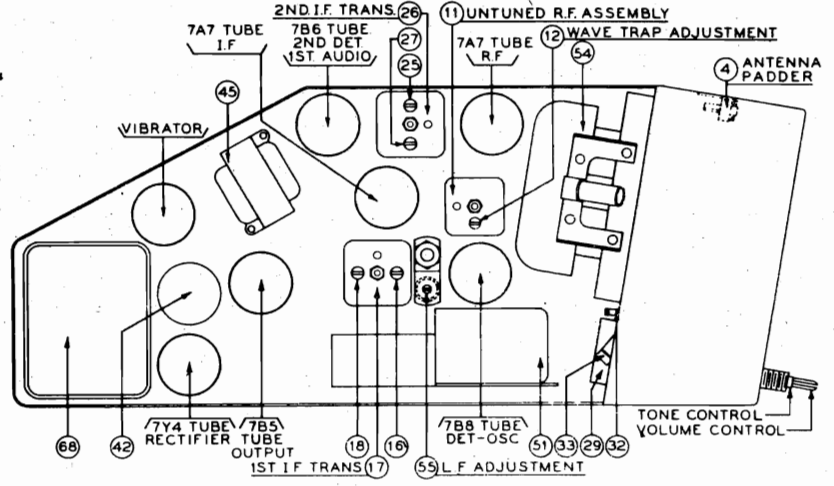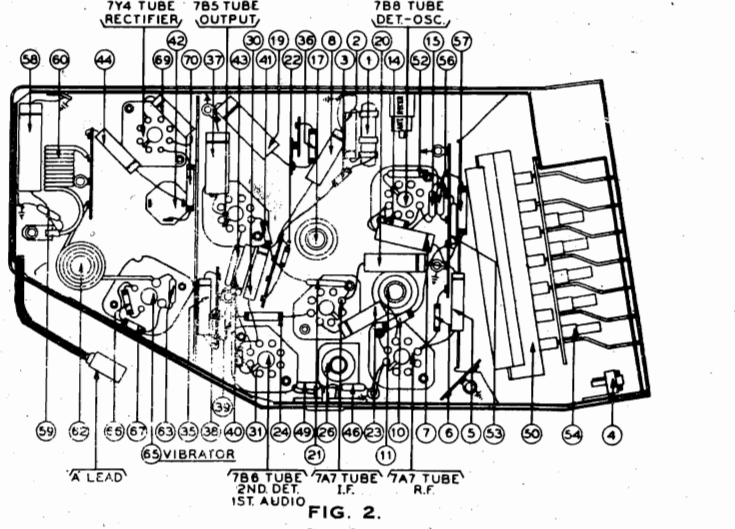

FOR ALIGNMENT SEE INDEX

September, 1939

MODEL C-1708
 MODEL S-1722
 Alignment

PHILCO RADIO & TELEV. CORP.

Model C - 1708
ADJUSTMENTS

All padding adjustments are carefully made at the factory and ordinarily no readjustments are necessary. However, when readjustments are required, the procedure given below must be followed in detail.

Equipment — Fully charged heavy duty storage battery or 6-volt power pack, 077 or 177 Philco Signal Generator, 027 Philco vacuum tube voltmeter and circuit tester and a 27-7159 Padding screw driver

General — The vacuum tube voltmeter can be used as a "wireless" output meter as a convenient method for

obtaining maximum output reading. Solder one end of a piece of wire to a strip of phosphor bronze approximately 1" wide, 6" long and .02" thick.

Coil this strip so that it can be slipped over the top of the type 7B5 output tube, and make a fairly tight contact. Connect the other end of the wire to the "high" terminal of the vacuum tube voltmeter. Then connect a wire from the radio chassis to the "plus" terminal of the vacuum tube voltmeter.

With the Radio and signal generator set up for operation at the prescribed frequency, turn the Radio volume control on full and set the signal generator attenuator so that a half scale reading is obtained on the output meter. The signal in the speaker should be audible but not loud.

The shielding on the generator output lead must be connected to the Radio housing.

OPERATIONS	SIGNAL GENERATOR		DUMMY CAPACITY	SPECIAL INSTRUCTIONS	ADJUST PADDER
	FREQUENCY	CONNECTION			
Press the "DIAL" button and stations can be tuned in by "DIAL" tuning					
1	455 K. C.	To Antenna Receptacle on Radio	.1 mfd.	Note 1	(27) (25) (18) (16) (27) (25) (18) (16)
2	455 K. C.	To Antenna Receptacle on Radio	.1 mfd.	Note 1	(12) minimum
3	1400 K. C.	To Antenna Receptacle on Radio	20 mmfd. Note 2	Set tuning condenser at 1400 K. C.	(3)
4	580 K. C.	To Antenna Receptacle on Radio	20 mmfd. Note 2	Set tuning condenser at 580 K. C.	(55) Note 3
5	1400 K. C.	To Antenna Receptacle on Radio	20 mmfd. Note 2	Set tuning condenser at 1400 K. C.	(4) Note 4

Make all adjustments for maximum reading on the output meter unless otherwise specified.

NOTE 1 — Turn the tuning control knob clockwise as far as it will go.

NOTE 2 — Connect the Chrysler Antenna lead, Part No. 95-0106, to the antenna receptacle on the radio. Connect a 20 mmfd. Condenser in series between the signal generator and the antenna lead.

NOTE 3 — Rotate the tuning control when adjusting the Low Frequency screw (55). Tune to the signal and adjust

the screw for maximum output. Turn the tuning control knob slightly, first one way then the other, for maximum output. Repeat this procedure until no further improvement is noticed.

NOTE 4 — When the Antenna Stage adjustment is made with the Radio installed in the car, the Radio Antenna lead must be connected to the Cowl Antenna in the usual manner. Connect the signal generator output lead to a wire placed near the car antenna lead but not connected to it and adjust padder (4) for maximum signal at 1400 K. C.

ALIGNMENT FOR
MODEL S-1722

OPERATIONS	SIGNAL GENERATOR		DUMMY CAPACITY	SPECIAL INSTRUCTIONS	ADJUST PADDER
	FREQUENCY	CONNECTION			
1	Press the Automatic Station Selector button until "DIAL" appears in the window and stations can be tuned in by Manual Tuning.				
2	470 K. C.	To Grid of 78 I. F. Tube	.5 mfd.	Note 2	(25) (23) (15) (13)
3	1580 K. C.	To Antenna Receptacle on Radio	35 mmfd. See Note 1	Note 2	(54)
4	1360 K. C.	To Antenna Receptacle on Radio	35 mmfd. See Note 1	Set tuning condenser at 1360 K. C.	(47) Note 3

NOTE 1 — Connect the antenna lead, Part No. L-2765, to the antenna receptacle in the radio. Connect a 35 mmfd. Condenser in series between the signal generator and the antenna lead.


NOTE 2 — Turn the condenser rotor plates completely out of mesh as far as they will go.

NOTE 3 — When the antenna stage adjustment is made with the Radio installed in the car, the Radio antenna lead must be connected to the car antenna in the usual manner. Connect the signal generator output lead to a wire placed near the car antenna but not connected to it.

Studebaker
Trimmers

PHILCO RADIO & TELEV. CORP.


MODEL S-1722
Schematic, Chassis

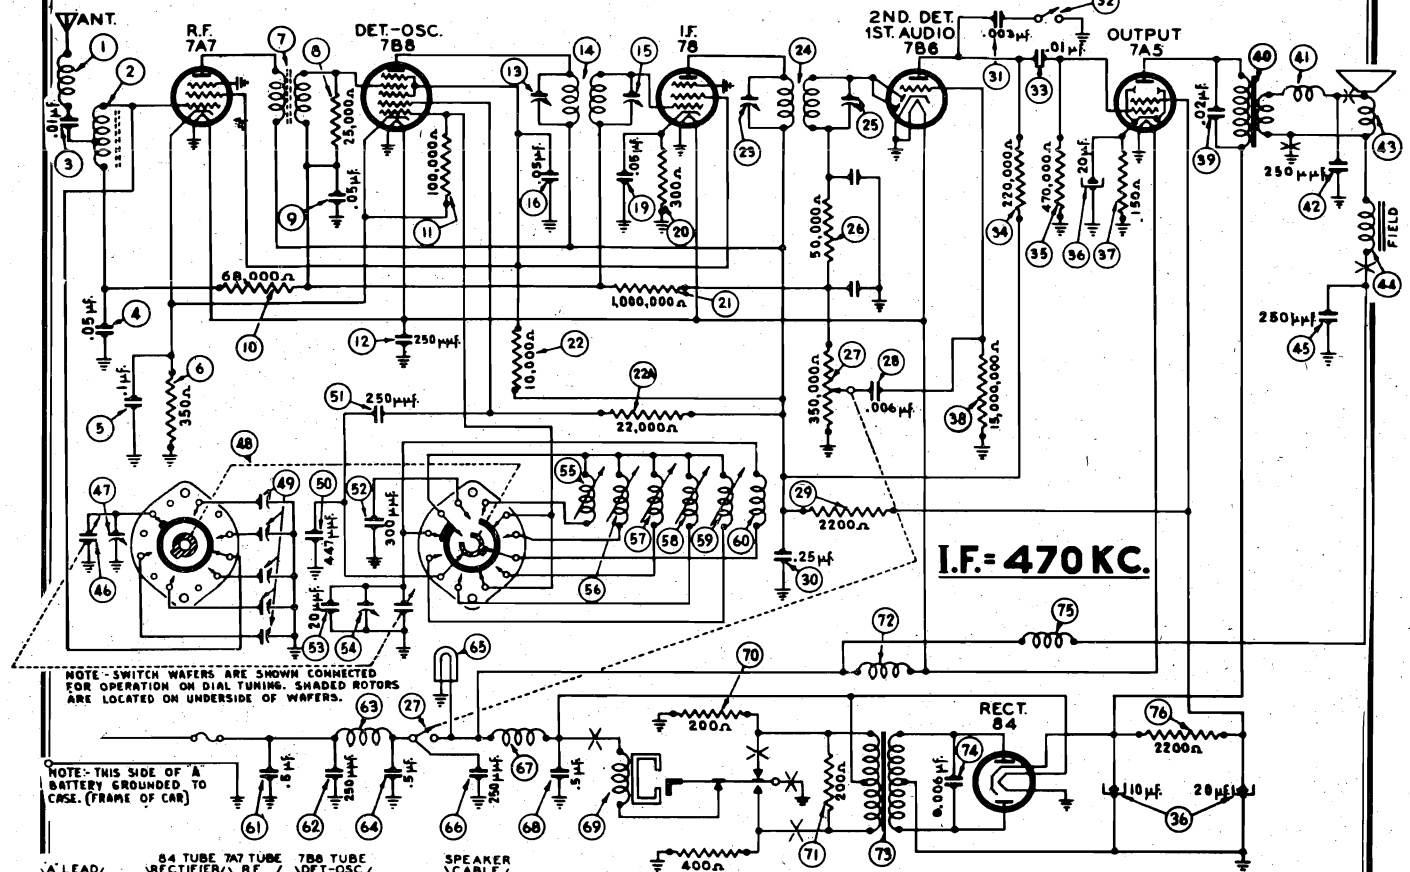

NOTE: SWITCH WAFERS ARE SHOWN CONNECTED FOR OPERATION ON DIAL TUNING. SHADED ROTORS ARE LOCATED ON UNDERSIDE OF WAFERS.

NOTE: THIS SIDE OF A BATTERY GROUNDED TO CASE. (FRAME OF CAR)

FOR ALIGNMENT SEE INDEX

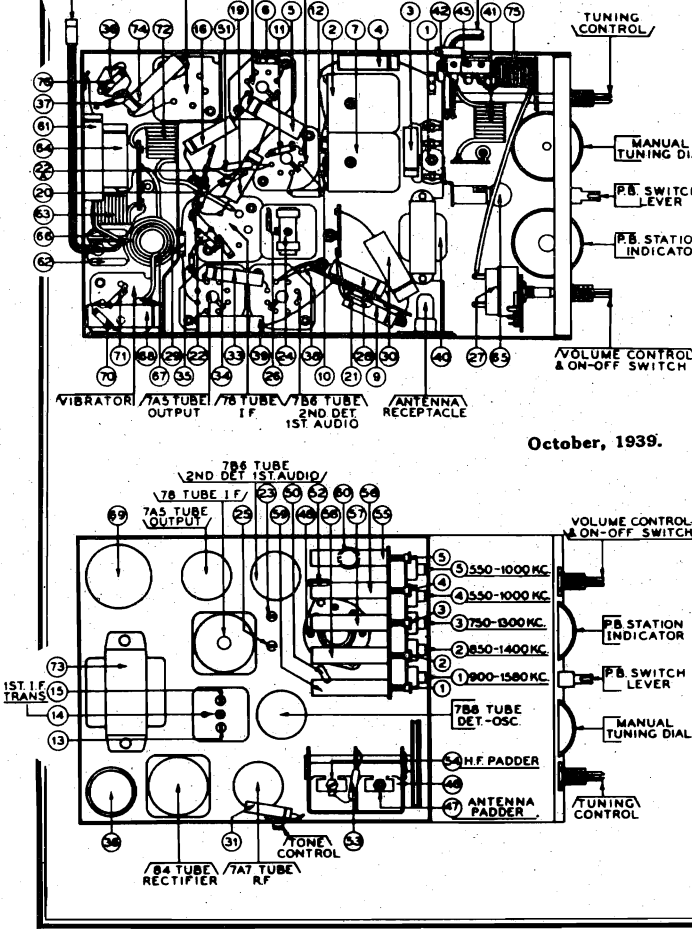

October, 1939.

PARTS LIST

No.	Description	Part No.	No.	Description	Part No.
1	Antenna Choke	65-0102	80	Resistor (15,000,000 ohms)	33-615154
2	Antenna Transformer	65-0115	81	Condenser (.02 mfd.)	61-0077
3	Condenser (.01 mfd.)	61-0014	82	Output Transformer	65-0221
4	Condenser (.05 mfd.)	30-4444	83	Choke	32-1561
5	Condenser (.1 mfd.)	30-4499	84	Condenser (250 mmfd.)	61-0033
6	Resistor (350 ohms)	33-135334	85	Cone and Voice Coil	91-0065
7	R. F. Transformer	65-0114	86	Field Coil	Not Replaceable
8	Resistor (25,000 ohms)	33-325334	87	Condenser (250 mmfd.)	61-0033
9	Condenser (.05 mfd.)	30-4444	88	Tuning Condenser	63-0023
10	Resistor (68,000 ohms)	33-368354	89	First Padder (On Tun. Cond.)	412-1023
11	Resistor (100,000 ohms)	33-410354	90	Wafer Switch	77-0262
12	Condenser (250 mmfd.)	61-0033	91	Antenna Padder Assembly	61-0047
13	Padder (Pri. 1st I. F. Trans.)	65-0148	92	Sil. Mica Cond. (447 mmfd.)	61-0038
14	First I. F. Transformer	65-0148	93	Sil. Mica Cond. (300 mmfd.)	61-0003
15	Padder (Sec. 1st I. F. Trans.)	30-4444	94	Condenser (20 mmfd.)	61-0039
16	Condenser (.05 mfd.)	30-4444	95	Second Padder (On Tun. Cond.)	65-0139
17	Resistor (300 ohms)	33-130334	96	Oscil. Trans. (550-1000 K.C.)	65-0138
18	Resistor (1,000,000 ohms)	33-510154	97	Oscil. Trans. (550-1000 K.C.)	65-0137
19	Resistor (10,000 ohms)	33-310334	98	Oscil. Trans. (750-1300 K.C.)	65-0136
20	Resistor (22,000 ohms)	33-322334	99	Oscil. Trans. (850-1400 K.C.)	65-0169
21	Padder (Pri. 2nd I. F. Trans.)	65-0214	100	Oscil. Trans. (900-1500 K.C.)	65-0134
22	Second I. F. Transformer	65-0214	101	Oscil. Trans. (manual)	61-0084
23	Padder (Sec. 2nd I. F. Trans.)	33-350134	102	Condenser (.5 mfd.)	61-0033
24	Resistor (50,000 ohms)	33-350134	103	Condenser (250 mmfd.)	32-1644
25	Volume Control (350,000 ohms) and On-Off Switch	67-0027	104	"A" Choke	61-0083
26	Condenser (6000 mmfd.)	30-4467	105	Condenser (.5 mfd.)	34-2039
27	Resistor (2000 ohms)	33-222334	106	Pilot Lamp	61-0033
28	Condenser (.25 mfd.)	30-4446	107	Condenser (250 mmfd.)	65-0151
29	Condenser (3000 mmfd.)	61-0078	108	Vibrator Choke	65-0151
30	Tone Control Switch	42-1406	109	Condenser (.5 mfd.)	83-0017
31	Condenser (.01 mfd.)	30-4169	110	Resistor (200 ohms)	33-120354
32	Resistor (220,000 ohms)	33-422334	111	Resistor (200 ohms)	33-120354
33	Resistor (470,000 ohms)	33-447154	112	Filament Choke	65-0158
34	Filter Cond. (10-20-20 mfd.)	61-0076	113	Power Transformer	65-0260
35	Resistor (150 ohms)	33-115334	114	Condenser (6000 mmfd.)	61-0052
36	Knob Base	28-4184FA8	115	Choke	32-1438
37	Fuel Gauge Resistor	77-0335	116	Resistor (2200 ohms)	33-222334
38	Dial Assembly (Manual)	77-0352	117	Drive Cord	55-0413
39	Dial Assembly (Automatic)	318-1374	118	Speaker	73-0022
40	Radio Mounting Bracket	57-066:FA3	119	Call Letter Kit	81-0143
41	Bezel	57-0670	120	Push-Button	55-0412
42	Mounting Spacer	57-0729	121	Push-Button	55-0482
43	Bezel Gasket and Grille Silk	77-0285	122	Tuning and Volume Knob	55-0486
44	Steering Col. Ground Strap	77-0336	123	Tuning and Volume Knob	27-4689

PHILCO RADIO & TELEV. CORP.

MODEL F-1740
Alignment, Tuner
Parts

PARTS LIST

No.	Description	Part No.	No.	Description	Part No.
①	Antenna Choke	65-0283	②	Sil. Mica Cond. (300 mmfd.)	61-0003
②	Antenna Padder	Part of ②	③	Oscillator Trans. (Manual)	65-0252
③	Antenna Choke	65-0282	④	H. F. Padder (on Tuning Cond.)	
④	Antenna Transformer	65-0268	⑤	Condenser (15 mmfd.)	61-0038
⑤	Condenser (.03 mfd.)	61-0064	⑥	Oscil. Trans. (900-1580 K.C.)	65-0255
⑥	Resistor (330,000 ohms)	33-43234	⑦	Oscil. Trans. (900-1580 K.C.)	65-0255
⑦	Sensitivity Control	67-0029	⑧	Oscil. Trans. (750-1300 K.C.)	65-0256
⑧	Resistor (10,000 ohms)	33-310334	⑨	Oscil. Trans. (580-1050 K.C.)	65-0257
⑨	R. F. Transformer	65-0267	⑩	Sil. Mica Cond. (390 mmfd.)	61-0031
⑩	I. F. Wave Trap Padder, Part of ⑩		⑪	Condenser (.5 mfd.)	61-0084
			⑫	"A" Choke	Part of ⑩
			⑬	Vibrator Choke	Part of ⑩
			⑭	Vibrator	83-0017
			⑮	Resistor (150 ohms)	33-115334
			⑯	Resistor (200 ohms)	33-120334
			⑰	Condenser (.5 mfd.)	61-0083
			⑱	Power Transformer	65-0278
			⑲	Condenser (3000 mmfd.)	61-0059
			⑳	Resistor (1800 ohms)	33-218534
			㉑	Resistor (150 ohms)	33-115334
				Drive Cord	55-0881
				Indicator Scale (P. B.)	55-0695
				Dial Scale (Manual)	55-0821
				Manual Control Knob	55-0705
				Volume Control Knob	55-0706
				Push-Button	55-0704
				Bezel	55-0754
				Bezel Screws	97-0101
				Interference Condenser	61-0040
				Interference Condenser	61-0092
				Interference Condenser	30-4307
				Hook Bolt	97-0094FA3
				Wing Nut	97-0048FA3
				Gland Nut & Sleeve Assy.	77-0459
				Speaker	73-0036-2
				Pilot Lamp	34-2044
				Jumpers Plug	57-1121
				Baffle Gasket	55-0707
			㉒	Resistor (1,000,000 ohms)	33-510238
			㉓	Condenser (.05 mfd.)	30-4567
			㉔	Resistor (100,000 ohms)	33-410154
			㉕	Condenser (250 mmfd.)	61-0034
			㉖	Resistor (24,000 ohms)	33-324334
			㉗	Padder (Pri. 1st I. F. Trans.)	
			㉘	First I. F. Transformer	65-0265
			㉙	Padder (Sec. 1st I. F. Trans.)	
			㉚	Condenser (.1 mfd.)	30-4455
			㉛	Condenser (.05 mfd.)	30-4569
			㉜	Resistor (700 ohms)	33-170438
			㉝	Resistor (3300 ohms)	33-233334
			㉞	Padder (Pri. 2nd I. F. Trans.)	
			㉟	Second I. F. Transformer	65-0264
			㊱	Padder (Sec. 2nd I. F. Trans.)	
			㊲	Resistor (25,000 ohms)	33-325234
			㊳	Condenser (100 mmfd.)	30-1031
			㊴	Condenser (.02 mfd.)	30-4481
			㊵	Resistor (220,000 ohms)	33-422334
			㊶	Resistor (470,000 ohms)	33-447154
			㊷	Filter Cond. (10-15-20 mfd.)	61-0089
			㊸	Resistor (300 ohms)	33-130438
			㊹	Tone Control Switch	42-1406-6
			㊺	Condenser (.03 mfd.)	30-4447
			㊻	Condenser (.01 mfd.)	30-4381
			㊼	Output Transformer	65-0279
			㊽	Replacement Cone	91-0086
			㊾	Field Coil	Not Replaceable
			㊿	Condenser (.05 mfd.)	30-4569
			①	Resistor (1,000,000 ohms)	33-510154
			②	Vol. Cont. & On-Off Switch	67-0026
			③	Condenser (.01 mfd.)	61-0014
			④	Resistor (10,000 ohms)	33-310154
			⑤	Condenser (.03 mfd.)	61-0061
			⑥	Resistor (1,000,000 ohms)	33-510154
			⑦	Resistor (600 ohms)	33-140334
			⑧	Condenser (.01 mfd.)	30-4479
			⑨	Resistor (24,000 ohms)	33-324334
			⑩	Condenser (.05 mfd.)	30-4569
			⑪	Resistor (24,000 ohms)	33-324434
			⑫	Condenser (250 mmfd.)	61-0033
			⑬	Wafer Switch	77-0397
			⑭	Antenna Padder Assembly	77-0391
			⑮	Tuning Condenser	63-0036
			⑯	Low Frequency Padder	63-0037

Model F-1740
ADJUSTMENTS

All padding adjustments are carefully made at the factory and ordinarily no readjustments are necessary. However, when readjustments are required, the procedure given below must be followed in detail.

Equipment — Fully charged heavy duty storage battery or 6-volt power pack, 077 or 177 Philco Signal Generator, 027 Philco vacuum tube voltmeter and circuit tester and a 27-7059 Padding screw driver.

General — The vacuum tube voltmeter can be used as an output meter, as a convenient method for obtaining maximum output reading. Connect one end of the test lead to the "high" terminal of the vacuum tube voltmeter and the other end to the jumper on the bottom of the radio. Then connect one end of the other test lead, from the "plus" terminal of the vacuum tube voltmeter to the radio chassis.

With the Radio and signal generator set up for operation at the prescribed frequency, turn the Radio volume control on full and set the signal generator attenuator so that a half scale reading is obtained on the output meter. The signal in the speaker should be audible but not loud.

All cover plates must be in place on the radio and screwed to the housing before attempting to adjust the radio.

OPERATIONS	SIGNAL GENERATOR		DUMMY CAPACITY	SPECIAL INSTRUCTIONS	ADJUST PADDER
	FREQUENCY	CONNECTION			
Press the Automatic Station Selector button until "DIAL" appears in the window and stations can be tuned in by Manual Tuning.					
1	455 K. C.	To Antenna Receptacle on Radio	.1 mfd.	Note 2	⑳ ㉑ ㉒ ㉓
2	455 K. C.	To Antenna Receptacle on Radio	.1 mfd.	Note 2	㉔ Minimum
3	1580 K. C.	To Antenna Receptacle on Radio	See Note 1	Note 2	㉕
4	1400 K. C.	To Antenna Receptacle on Radio	See Note 1	Set Tuning Condenser at 1400 K. C.	㉖
5	580 K. C.	To Antenna Receptacle on Radio	See Note 1	Set Tuning Condenser at 580 K. C.	㉗ Note 3
6	1580 K. C.	To Antenna Receptacle on Radio	See Note 1	Note 2	㉘
7	1400 K. C.	To Antenna Receptacle on Radio	See Note 1	Set Tuning Condenser at 1400 K. C.	㉙ Note 4

Make all adjustments for maximum reading on the output meter.

NOTE 1 — Connect the antenna lead part number 95-0120 to the antenna receptacle on the radio, in series with a 20 mmfd. condenser between the antenna lead and the signal generator. Ground the shield pigtail on the antenna lead to the signal generator.

NOTE 2 — Turn the condenser rotor plates completely out of mesh as far as they will go.

NOTE 3 — Rock the tuning condenser while adjusting the low frequency padder. Tune the condenser to the signal and adjust the padder for maximum output. Rotate the tuning condenser back and forth slightly for maximum output. Then readjust the padder for maximum output. Repeat this procedure until no further improvement is noticed.

NOTE 4 — When the antenna stage adjustment is made with the Radio installed in the car, the Radio antenna lead must be connected to the car antenna in the usual manner. Connect the signal generator output lead to a wire placed near the car antenna but not connected to it.

SETTING UP THE RADIO FOR AUTOMATIC TUNING

The Antenna and Rotomatic adjustments are easily accessible by removing the plastic bezel on the top of the radio. This bezel is held by two screws.

1 — Turn the radio on and allow it to operate for at least twenty minutes before starting any adjustments. All adjustments must be made with the antenna fully extended.

2 — Press the Rotomatic button until the word "Dial" appears on the Rotomatic indicator. Tune in a weak station on the manual dial between 1300 and 1400 kilocycles. Adjust the antenna padder ② (Fig. 3) until maximum volume is obtained. NOTE: This adjustment must be made first before any Rotomatic adjustments are made; otherwise, mis-tuning will result.

3 — Select five stations within the frequency range shown under each set of adjustment screws in Fig. 3.

4 — With "Dial" showing on the Rotomatic indicator, manually tune in the station to be set up on position No. 1 and identify the program.

5 — Press the Rotomatic button until No. 1 appears on the Rotomatic indicator. Now adjust the top screw at position No. 1 until the station selected is brought in with loudest volume. Then adjust the slotted hex screw at the bottom until maximum volume is obtained. NOTE: Stations of higher frequencies are tuned in by turning the screws to the left or counter-clockwise. Lower frequency stations are tuned by turning to the right or clockwise.

6 — Proceed with setting up the remaining four stations in the same manner as described under Paragraph 4 and 5.

7 — Because there is some detuning of the coils due to the movements of the cores in adjacent coils, it is necessary to re-check the adjustments again, going back from Position No. 5 to No. 1 and again re-checking from No. 1 to No. 5. This is important for accurate reception while driving at a distance from the broadcasting stations.

8 — This final re-checking of adjustments should be made in an area of low signal strength in your service station or in some known "dead" spot where signals can just barely be heard.

MODELS 91A, 91B, 99A,
99B Ford
Antenna Data

PHILCO RADIO & TELEV. CORP.

FORD ANTENNA PARTS LIST

(FORD 91A CLOSED CAR)
Philco Part No. 91A18813A

Part No.	Description	List Price Each	per 100	List Price Each
*W-55FA1	Nut	per 100	1.20	
W-55B	Lockwasher	per 100	.90	
W-679FA1	Lockwasher	per 100	.46	
*W-1907	Nut	per 100	4.00	
*W-1988FA8	Screw (Escutcheon Mtg.)	per 100	1.50	
27-4506	Antenna Stop		.08	
*27-4671	Bushing		.15	
27-4678	Gasket		.10	

*Used on No. 116 car also.

FORD ANTENNA PARTS LIST

(FORD 91B OPEN CAR)
Philco Part No. 91B18813B

Part No.	Description	List Price Each	per 100	List Price Each
*W-55	Nut	per 100	\$1.20	
*W-579FA1	Lockwasher	per 100	.46	
W-1774FA8	Screw (Stop Mtg.)	per 100	.10	
27-4710	Antenna Stop		.15	
28-2606	Washer	per 100	.50	

*Used on 91A car also.

FORD ANTENNA PARTS LIST

(FORD 91B OPEN CAR)
Philco Part No. 91-0031

Part No.	Description	List Price Each	per 100	List Price Each
28-4696	Wrench		.10	
*55-0182	Knob		.46	
55-0285	Gasket		.08	
55-0810	Threaded Bakelite Dushing		.25	
91-0044	Antenna Assembly		4.26	
*95-0075	Antenna Lead		1.80	

FORD ANTENNA PARTS LIST

(FORD 116 CLOSED CAR (MERCURY) (99A))
Philco Part No. 91-0031

Part No.	Description	List Price Each	per 100	List Price Each
28-4696	Wrench		.10	
96-4048	Tow Strap		.02	
55-0182	Knob		.46	
55-0240	Antenna Stop		.10	
57-0278	Escutcheon		.20	
91-0058	Antenna Assembly		\$8.76	
95-0075	Antenna Lead		1.80	

FORD ANTENNA PARTS LIST

(FOR 116 OPEN CAR (MERCURY) (99B))
Philco Part No. 91-0039

Part No.	Description	List Price Each	per 100	List Price Each
55-0240	Stop		.10	
55-0285	Gasket		.08	
55-0810	Threaded Bakelite Bushing		.25	
91-0045	Antenna Assembly		4.26	
95-0075	Antenna Lead		1.80	

Prices subject to change without notice

1939 FORD ADJUSTABLE ANTENNA
(FOR CLOSED CARS — MODELS 91A AND 99A)

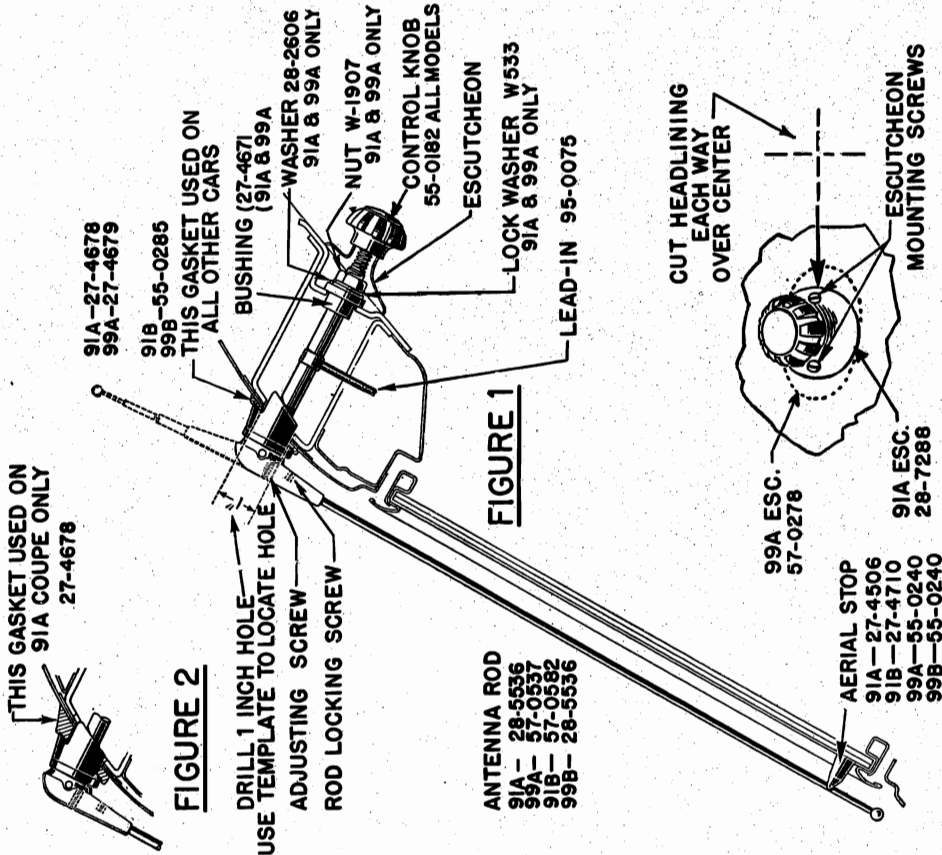




FIGURE 2

FIGURE 1

FIGURE 3

PILOT RADIO CORP.

MODEL T-101
Schematic, Socket
Trimmers, Alignment

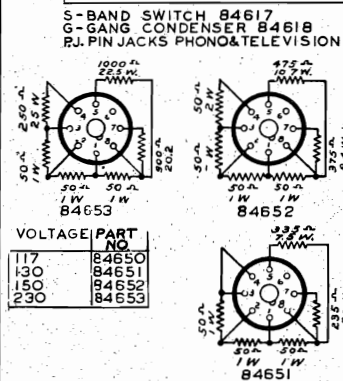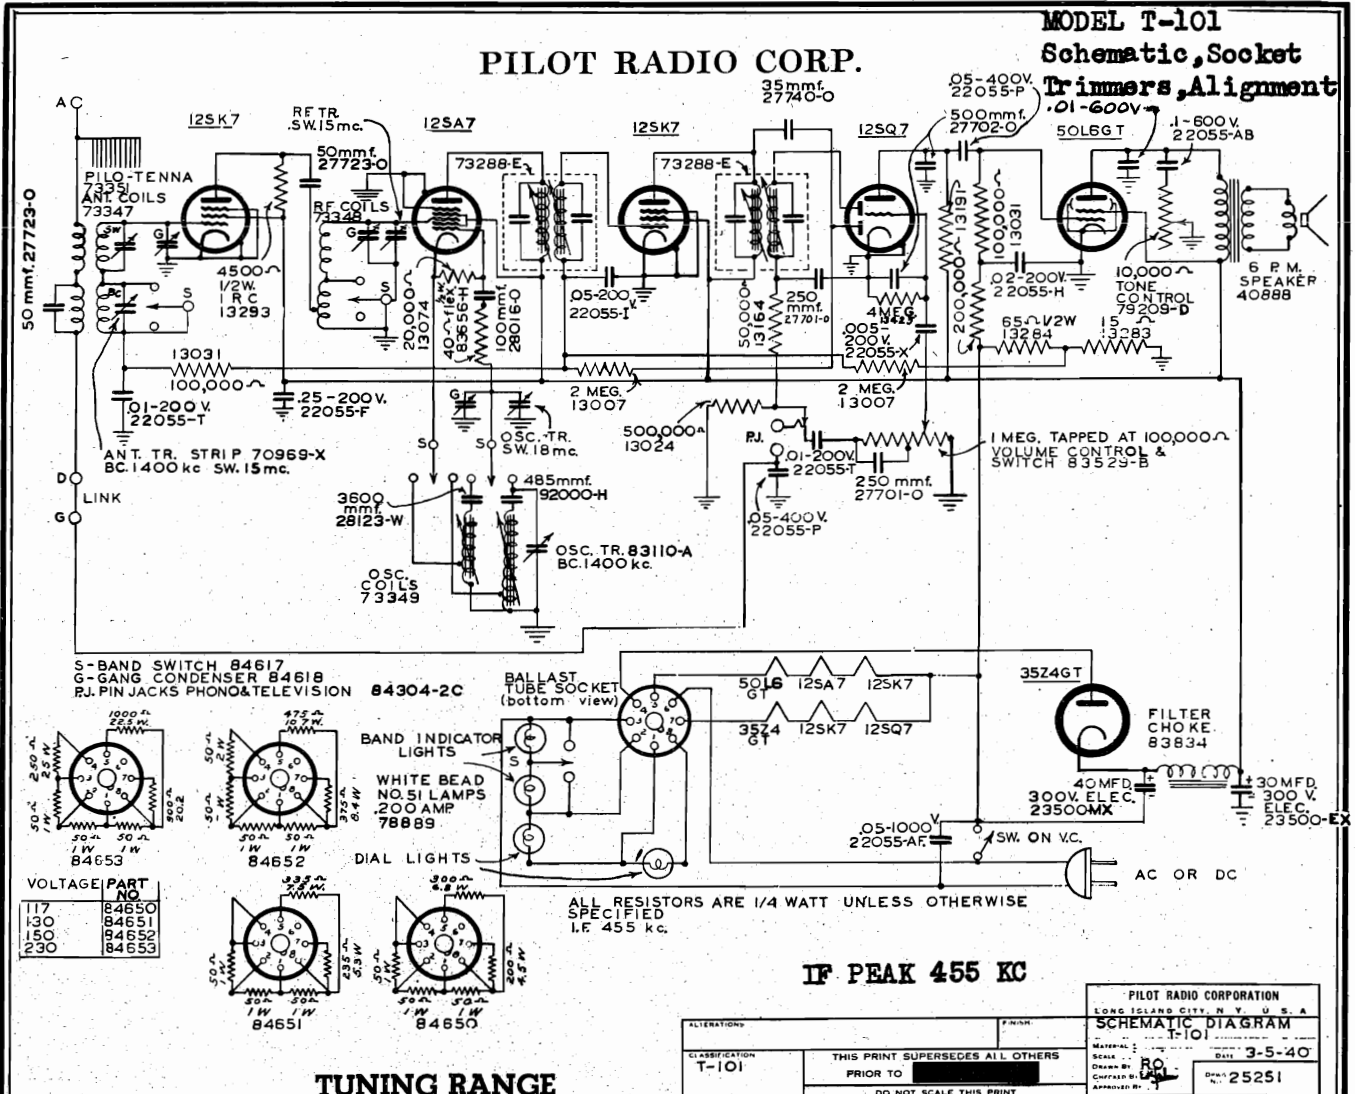

VOLTAGE	PART NO.
117	84650
130	84651
150	84652
230	84653

TUNING RANGE

Broadcast Band 535 to 1720 kc.; or 561 to 174 meters
Short Wave Band 5.6 to 19.8 kc.; or 53.6 to 15.2 meters

ANTENNA



While this receiver is equipped with the new "Pilo-tenna" for the reception of local stations with good tone quality, it is recommended that a good outside antenna of the doublet type be installed for short wave or distant broadcast band reception and for the reduction of interfering noises due to other electrical devices.

When using a doublet antenna, connect one lead-in wire to terminal "A" at the rear of the chassis, and the other lead-in wire to terminal "D". Remove the connecting link from terminals "D" and "G" and connect terminal "G" to a ground such as a cold water pipe or radiator. If an ordinary single wire antenna is used, connect the lead-in wire to Terminal "A" on the rear of the chassis. Leave the link between "D" and "G" terminals and connect a ground wire under terminal "G".

SERVICE NOTES

The location of all adjustments used in re-aligning this receiver, and the frequencies at which these adjustments should be made, are shown in the accompanying diagram.

When aligning the I. F. amplifier, the generator must be connected to the grid of the 12SA7 tube through a .1 mfd condenser. When aligning the receiver on the Broadcast Band, connect the generator to the Antenna wire through a .0002 mfd condenser, and on the short wave band use a 400 ohm carbon resistor.

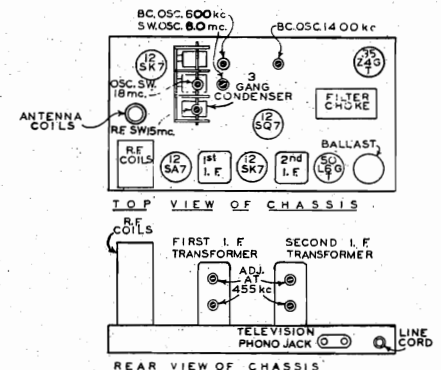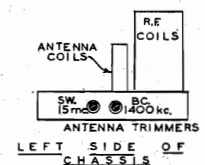

IF PEAK 455 KC


ALL RESISTORS ARE 1/4 WATT UNLESS OTHERWISE SPECIFIED I.F. 455 kc.

PILOT RADIO CORPORATION LONG ISLAND CITY, N. Y. U. S. A.	
SCHEMATIC DIAGRAM T-101	
CLASSIFICATION T-101	DATE 3-5-40
THIS PRINT SUPERSEDES ALL OTHERS PRIOR TO [REDACTED]	
NO. 25251	

PILOT RADIO CORPORATION LONG ISLAND CITY, N. Y. U. S. A.	
TRIMMER LAYOUT T-101	
CLASSIFICATION T-101	DATE 3-5-40
THIS PRINT SUPERSEDES ALL OTHERS PRIOR TO [REDACTED]	
NO. 2525c	

MODEL T-102
Schematic, Socket
Alignment, Trimmers

PILOT RADIO CORP.

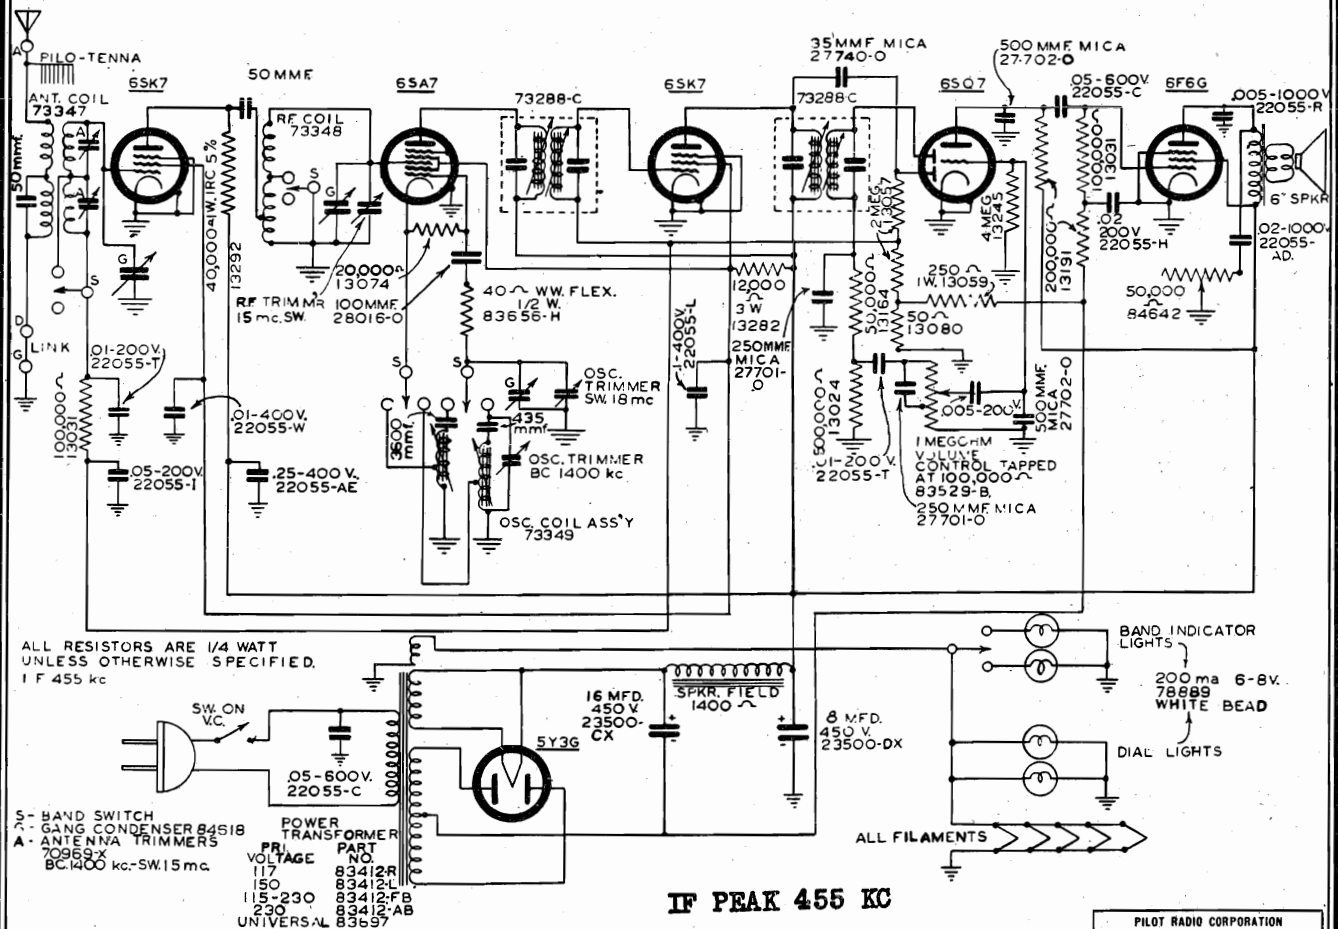

ALL RESISTORS ARE 1/4 WATT UNLESS OTHERWISE SPECIFIED. IF 455 kc

S - BAND SWITCH
 G - GANG CONDENSER 8451B
 A - ANTENNA TRIMMERS 70959X
 BC 1400 kc-SW 15 mc.

POWER TRANSFORMER PART NO.

PRI. VOLTAGE	PART NO.
117	83412R
150	83412L
115-230	83412FB
230	83412-AB
UNIVERSAL	83597

IF PEAK 455 KC

Broadcast Band 535 to 1720 kc.; or 561 to 174.0 meters
 Short Wave Band 5.6 to 19.8 mc.; or 53.6 to 15.2 meters

ALTERATIONS		PILOT RADIO CORPORATION LONG ISLAND CITY, N. Y. U. S. A.	
CLASSIFICATION		SCHEMATIC DIAGRAM	
T-102	THIS PRINT SUPERSEDES ALL OTHERS	Model No. T-102	Date 2-20-40
	PRIOR TO	Checked by E. W. [Signature]	Drawn No. 25249
DO NOT SCALE THIS PRINT			

SERVICE NOTES




The location of all adjustments used in re-aligning this receiver, and the frequencies at which these adjustments should be made, are shown in the accompanying diagram.

When aligning the I. F. amplifier, the generator must be connected to the grid of the 6SA7 tube through a .1 mfd condenser. When aligning the receiver on the Broadcast Band, connect the generator to the Antenna wire through a .0002 mfd condenser, and on the short wave band use a 400 ohm carbon resistor.

ANTENNA



While this receiver is equipped with the new "Pilo-tenna" for the reception of local stations with good tone quality, it is recommended that a good outside antenna of the doublet type be installed for short wave or distant broadcast band reception and for the reduction of interfering noises due to other electrical devices.

When using a doublet antenna, connect one lead-in wire to terminal "A" at the rear of the cabinet, and the other lead-in wire to terminal "D". Remove the connecting link from terminals "D" and "G" and connect terminal "G" to a ground such as a cold water pipe or radiator. If an ordinary single wire antenna is used, connect the lead-in wire to Terminal "A" on the rear of the cabinet. Leave the link between "D" and "G" terminals and connect a ground wire under terminal "G".

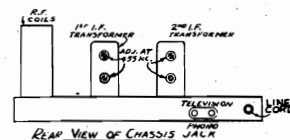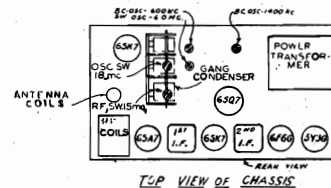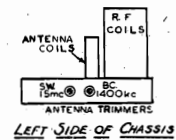

PILOT RADIO CORP.


MODEL T-121
MODEL T-122
Schematics

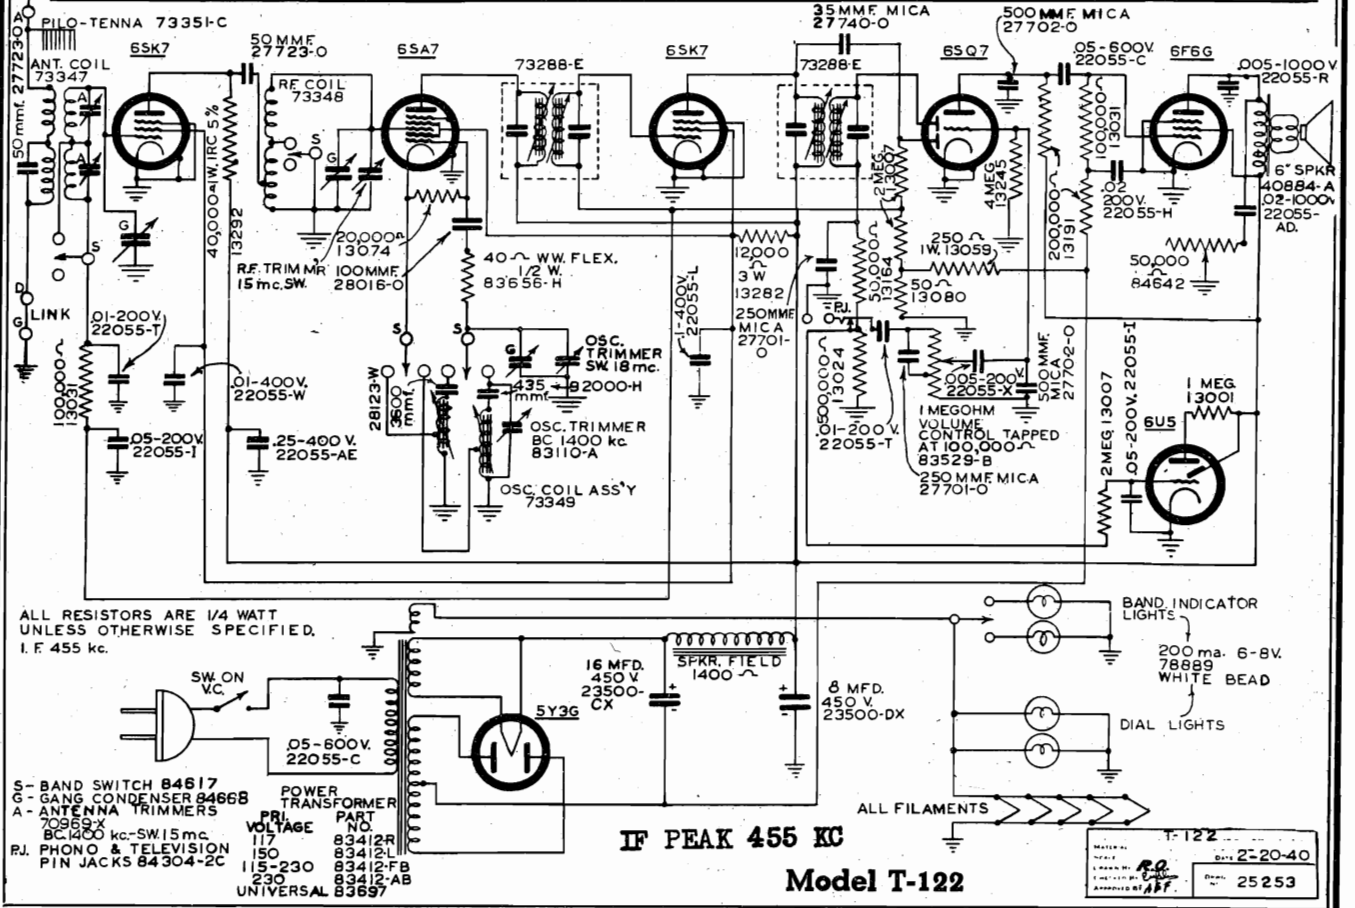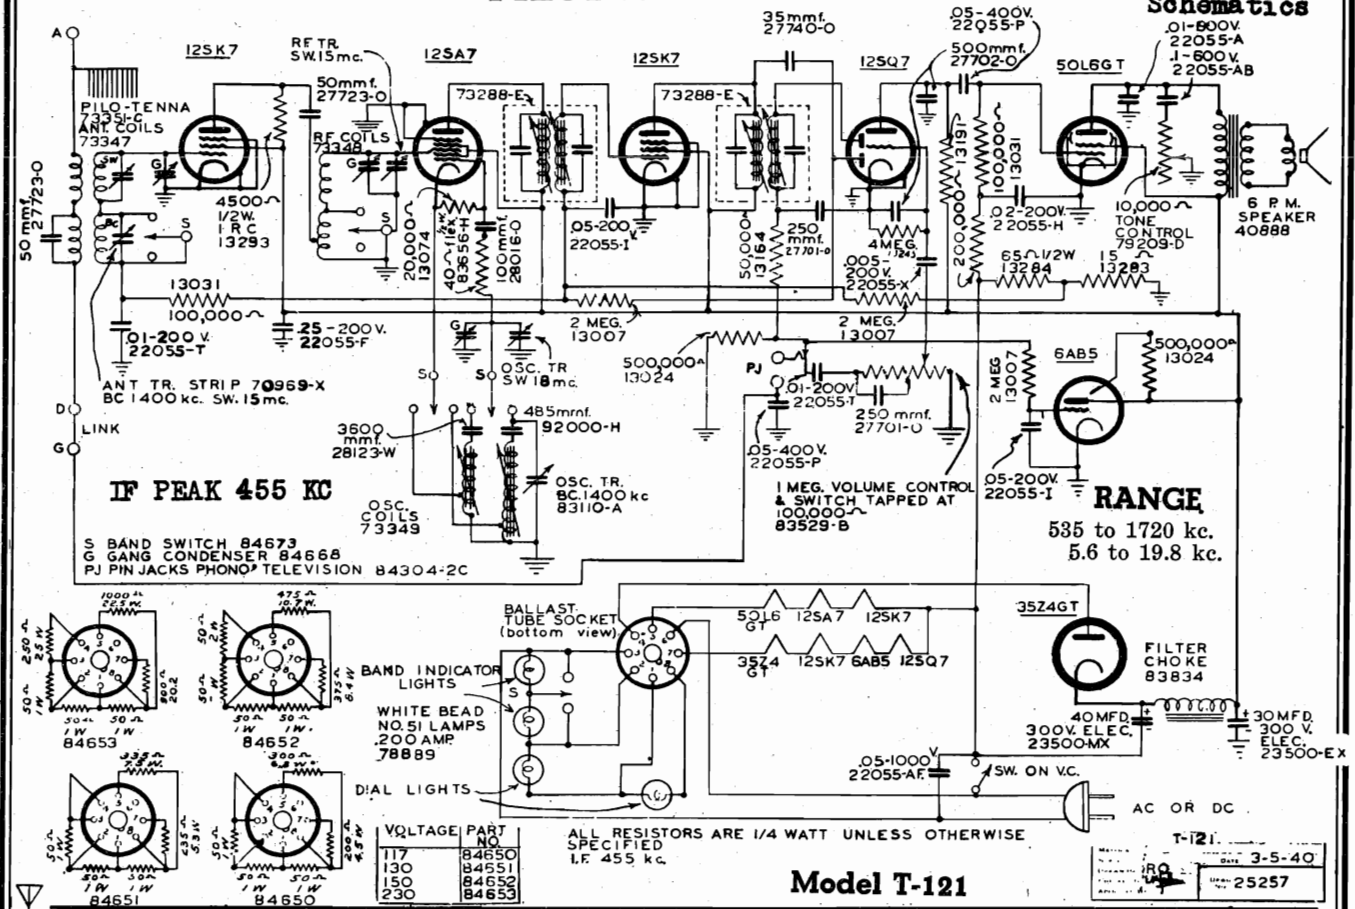

MODEL T-121
MODEL T-122
Alignment, Trimmers
12SA7

PILOT RADIO CORP.

MODELS TP1062, TP1862
Schematic, Socket
Trimmers, Alignment

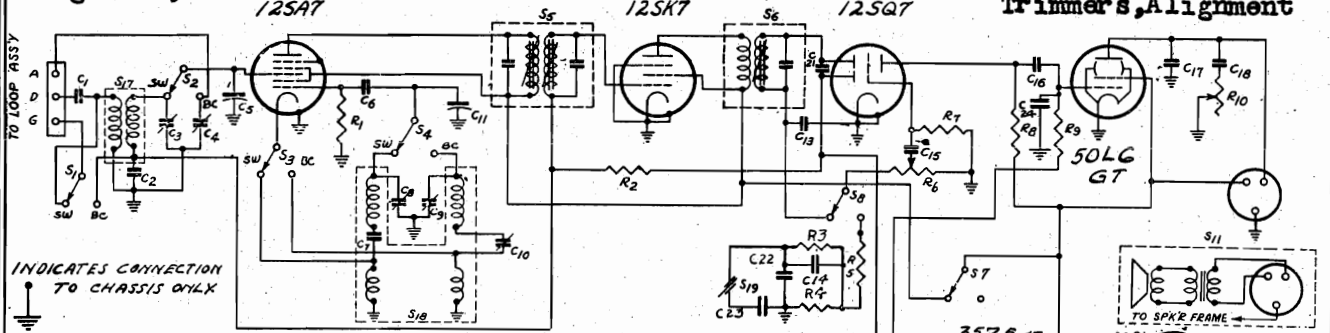


CONDENSERS FOR MODEL TP1062

C1	22035-W	.01 MFD.	400 V.
C4	22035-W	.1 MFD.	200 V.
C3, C4	70968-K	TRIMMER ASSY	
C5, C71	84037	GRID CONDENSER	
C6	22016-O	.001 MFD.	MICA
C7	27794-W	.005 MFD.	MICA
C8, C9	70969-E	TRIMMER ASSY	
C10	79431-B	385 MMFD	PADDER
C12	22035-AC	.02 MFD.	600 V.
C13	27701-O	.00025 MFD.	MICA
C14	22035AT	.002 MFD.	200 V.
C15	22035-AU	.005 MFD.	400 V.
C16	22035-W	.01 MFD.	400 V.
C17	22035-A	.01 MFD.	600 V.
C18	22035-AB	.1 MFD.	600 V.
C19, C20	23500-E	.30 MFD.	300 V. ELEC.
C21	27736-O	.25 MMFD.	MICA
C22	22035-T	.01 MFD.	200 V.
C23	22035-AB	.1 MFD.	600 V.
C24	22035-T	.0004	TP1062


MISCELLANEOUS FOR MODEL TP1062

S1 TO S4	84060-C	BAND SWITCH
S5	73192-D	1ST I.F. TRANS. ASSY
S6	73267	2ND I.F. TRANS. ASSY
S7, S8	84060-C	PHONO-RADIO SWITCH
S9	SWITCH ON VOL. CONTROL	
S11	40880	8" P.M. SPEAKER
S12	8334	FILTER CHOKE
S13	84429	BALLAST TUBE 180 V.
S14	84430	BALLAST TUBE 150 V.
S15	84431	BALLAST TUBE 230 V.
S16	84428	BALLAST TUBE 117 V.
S17	73268	S.W. ANT. COIL WITH WIRE
S18	73266	S.W. ANT. COIL WITH WIRE
S19	72151	DUAL LAMP (85W/100V)
S20	84056B	CABINET BRK.-100P/35X
S21	84506	PHONO MOTOR FOR 130V
S22	84507	PHONO MOTOR FOR 150V
S23	84508	PHONO MOTOR FOR 230V
S24	79448	PHONO MOTOR FOR 117V

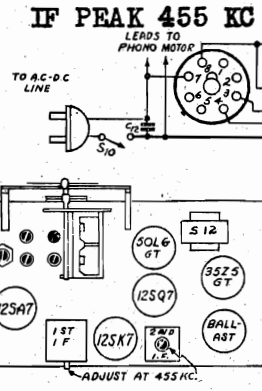

RESISTORS FOR MODEL TP1062

R1	13074	20,000 OHMS.	1/4 WATT
R2, R13	13007	2 MEGOHMS.	1/4 WATT
R3	73031	100,000 OHMS.	1/4 WATT
R4	73117	1500 OHMS.	1/4 WATT
R5	73028	1000 OHMS.	1/4 WATT
R6	79429-B	500,000 OHMS.	VOL. CONT.
R7	13245	4 MEGOHMS.	1/4 WATT
R8	13147	300,000 OHMS.	1/4 WATT
R9	13024	500,000 OHMS.	1/4 WATT
R10	83447	100,000 OHMS.	TONE CONT.
R11	13203	15 OHMS.	1/2 WATT
R12	13284	.65 OHMS.	1/2 WATT

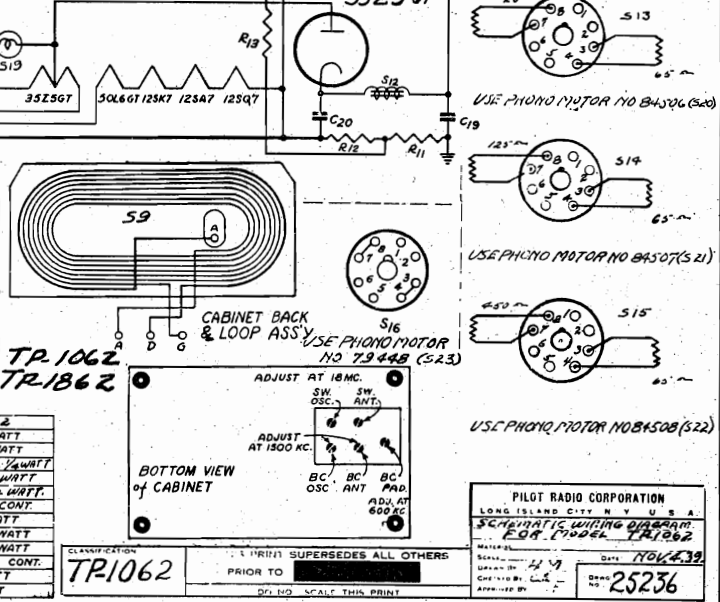

TP1062
TR1862

PILOT RADIO CORPORATION
LONG ISLAND CITY, N. Y. U. S. A.
SCHEMATIC DRAWING OF MODEL TP1062
E.O. 12812-1


DATE: NOV 4 1959
DRAWN BY: [Signature]
CHECKED BY: [Signature]
APPROVED BY: [Signature]

NO. 25236

Broadcast Band:
535 to 1720 kc.

Short Wave Band:
5.6 to 19.8 mc.


MODEL T-122

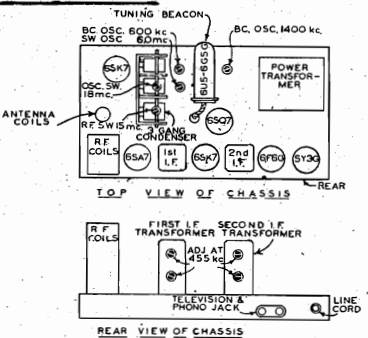

PILOT RADIO CORPORATION
LONG ISLAND CITY, N. Y. U. S. A.
SCHEMATIC DRAWING OF MODEL T-122
E.O. 12812-1

DATE: 3-15-40
DRAWN BY: [Signature]
CHECKED BY: [Signature]
APPROVED BY: [Signature]

NO. 25254

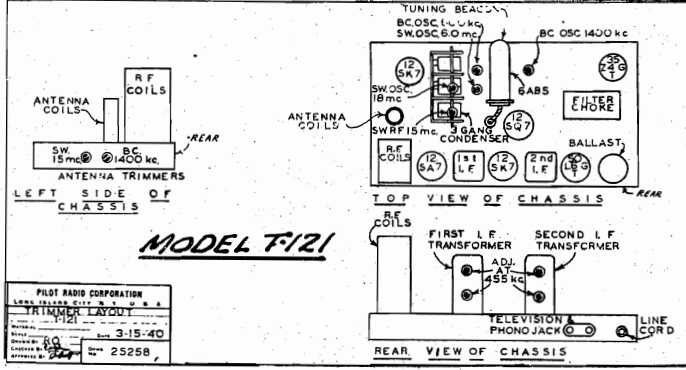

MODEL T-121 ANTENNA MODEL T-122

When using a doublet antenna, connect one lead-in wire to terminal "A" at the rear of the chassis, and the other lead-in wire to terminal "D". Remove the connecting link from terminals "D" and "G" and connect terminal "G" to a ground such as a cold water pipe or radiator. If an ordinary single wire antenna is used, connect the lead-in wire to Terminal "A" on the rear of the chassis. Leave the link between "D" and "G" terminals and connect a ground wire under terminal "G".

SERVICE NOTES

The location of all adjustments used in re-aligning this receiver, and the frequencies at which these adjustments should be made; are shown in the accompanying diagram.


When aligning the I. F. amplifier, the generator must be connected to the grid of the 12SA7 tube through a .1 mfd condenser. When aligning the receiver on the Broadcast Band, connect the generator to the Antenna wire through a .0002 mfd condenser, and on the short wave band use a 400 ohm carbon resistor.

* 6SA7 tube-MODEL T-122

Schematics, Socket Alignment, Trimmers

PILOT RADIO CORP.

MODEL T1264
MODEL T1351

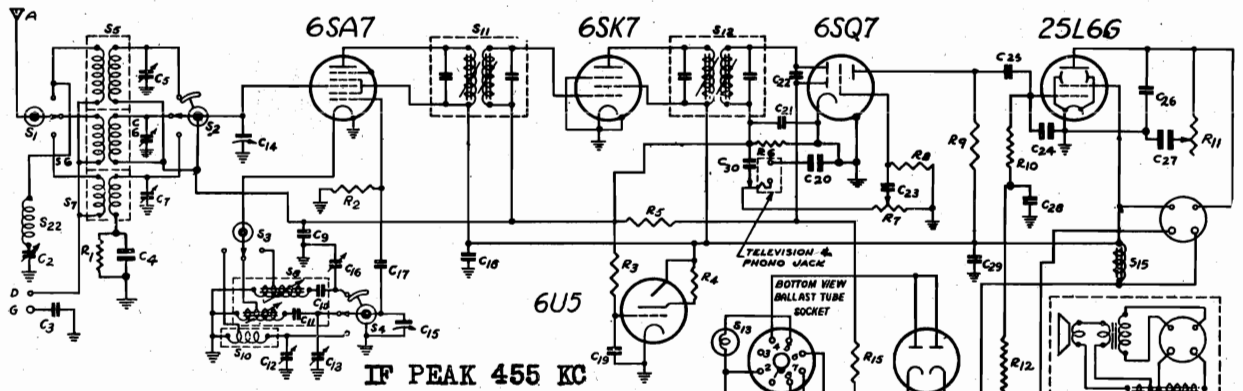

CONDENSERS FOR MODEL T-1264



C3	23055-R	.005 MFD. 100V.
C5, C12	70969-J	TRIMMER ASSY.
C6, C7	70969-E	TRIMMER ASSY.
C13, C16	70969-E	TRIMMER ASSY.
C21	27786-O	150 MMF. MICA
C4	28120-W	.005 MFD. MICA ±5%
C9	22055-T	.05 MFD. 200V.
C14	28103-W	.0021 MFD. MICA
C10	92000-C	450 MMF. MICA
C17	28016-O	.0001 MFD. MICA
C18	22055-L	.10 MFD. 400V.
C19, C30	22055-T	.01 MFD. 200V.
C20	22055-P	.05 MFD. 400V.
C22	27740-O	35 MMF. MICA
C23	22055-X	.005 MFD. 200V.
C24	27702-O	500 MMF. MICA
C25	22055-Z	.02 MFD. 400V.
C28	22055-AU	.005 MFD. 400V.
C26	22055-A	.01 MFD. 600V.
C27	22055-AB	.1 MFD. 600V.
C29	23500-EY	30 MFD. 300V. ELEC.
C31	23500-EK	30 MFD. 300V. ELEC.
C32	22055-U	.01 MFD. 1000V.
C14, C15	84125	2 GANG COND.
C2	79435	WAVE TRAP TRIM.

RESISTORS FOR MODEL T-1264

R4	15024	500,000 OHMS, 1/4 WATT
R2	12074	20,000 OHMS, 1/4 WATT
R3	13007	2 MEG OHMS, 1/4 WATT
R13	132B4	65 OHMS, 1/4 WATT
R6	132D5	650,000 OHMS, 1/4 WATT
R7	83529-D	1 MEG OHM VOL. CONT.
R8	13245	4 MEG OHMS, 1/4 WATT
R14	13191	200,000 OHMS, 1/4 WATT
R12	13171	250,000 OHMS, 1/4 WATT
R11	83447-D	100,000 OHMS, TONE CONT.
R10	13031	100,000 OHMS, 1/4 WATT
R1	13241	60,000 OHMS, 1/4 WATT
R15, R5	13007	2 MEG OHMS, 1/4 WATT
R14	132B5	75 OHMS, 1/4 WATT

MISCELLANEOUS FOR MODEL T-1264

S1 to S4	68246	BAND SWITCH
S5	73306	B.C. ANT. COIL ASSY.
S6	73307	ANT. COIL ASSY. B-2
S7	73307	ANT. COIL ASSY. B-1
S8	73309	OSC. COIL ASSY. BC, B-2
S10	73310	OSC. COIL ASSY. B-1
S11	73280-C	1ST. I.F. TRANS. ASSY.
S12	73180-C	2ND. I.F. TRANS. ASSY.
S13, S14	71282	PILOT LIGHT, .25A. BLUE
S15	83834	FILTER CHOKE, 170 Ω
S16	40855	SPEAKER, 2500 Ω FIELD
S17	81971	BALLAST TUBE 110/125 V.
S18	81972	BALLAST TUBE 250/250 V.
S20	81976	BALLAST TUBE, 150 V.
S19	84105	BALLAST TUBE, 150 V.
S21	83527-D	SWITCH ON VOL. CONT.

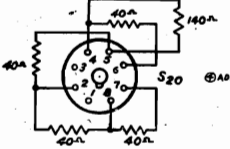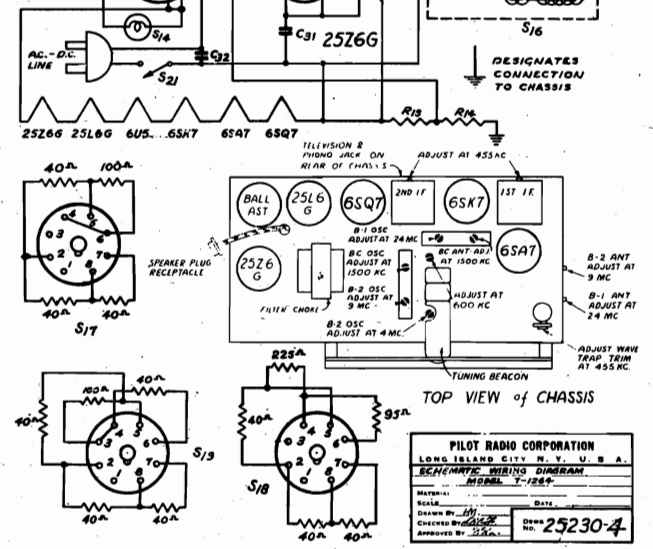


DOUBLE ANT. COIL. ADDED IN 10-12-39
REVISIONS: C-01, R-1, R-2, R-3, R-4, R-5, R-6, R-7, R-8, R-9, R-10, R-11, R-12, R-13, R-14, R-15, R-16, R-17, R-18, R-19, R-20, R-21, R-22, R-23, R-24, R-25, R-26, R-27, R-28, R-29, R-30, R-31, R-32, R-33, R-34, R-35, R-36, R-37, R-38, R-39, R-40, R-41, R-42, R-43, R-44, R-45, R-46, R-47, R-48, R-49, R-50, R-51, R-52, R-53, R-54, R-55, R-56, R-57, R-58, R-59, R-60, R-61, R-62, R-63, R-64, R-65, R-66, R-67, R-68, R-69, R-70, R-71, R-72, R-73, R-74, R-75, R-76, R-77, R-78, R-79, R-80, R-81, R-82, R-83, R-84, R-85, R-86, R-87, R-88, R-89, R-90, R-91, R-92, R-93, R-94, R-95, R-96, R-97, R-98, R-99, R-100, R-101, R-102, R-103, R-104, R-105, R-106, R-107, R-108, R-109, R-110, R-111, R-112, R-113, R-114, R-115, R-116, R-117, R-118, R-119, R-120, R-121, R-122, R-123, R-124, R-125, R-126, R-127, R-128, R-129, R-130, R-131, R-132, R-133, R-134, R-135, R-136, R-137, R-138, R-139, R-140, R-141, R-142, R-143, R-144, R-145, R-146, R-147, R-148, R-149, R-150, R-151, R-152, R-153, R-154, R-155, R-156, R-157, R-158, R-159, R-160, R-161, R-162, R-163, R-164, R-165, R-166, R-167, R-168, R-169, R-170, R-171, R-172, R-173, R-174, R-175, R-176, R-177, R-178, R-179, R-180, R-181, R-182, R-183, R-184, R-185, R-186, R-187, R-188, R-189, R-190, R-191, R-192, R-193, R-194, R-195, R-196, R-197, R-198, R-199, R-200, R-201, R-202, R-203, R-204, R-205, R-206, R-207, R-208, R-209, R-210, R-211, R-212, R-213, R-214, R-215, R-216, R-217, R-218, R-219, R-220, R-221, R-222, R-223, R-224, R-225, R-226, R-227, R-228, R-229, R-230, R-231, R-232, R-233, R-234, R-235, R-236, R-237, R-238, R-239, R-240, R-241, R-242, R-243, R-244, R-245, R-246, R-247, R-248, R-249, R-250, R-251, R-252, R-253, R-254, R-255, R-256, R-257, R-258, R-259, R-260, R-261, R-262, R-263, R-264, R-265, R-266, R-267, R-268, R-269, R-270, R-271, R-272, R-273, R-274, R-275, R-276, R-277, R-278, R-279, R-280, R-281, R-282, R-283, R-284, R-285, R-286, R-287, R-288, R-289, R-290, R-291, R-292, R-293, R-294, R-295, R-296, R-297, R-298, R-299, R-300, R-301, R-302, R-303, R-304, R-305, R-306, R-307, R-308, R-309, R-310, R-311, R-312, R-313, R-314, R-315, R-316, R-317, R-318, R-319, R-320, R-321, R-322, R-323, R-324, R-325, R-326, R-327, R-328, R-329, R-330, R-331, R-332, R-333, R-334, R-335, R-336, R-337, R-338, R-339, R-340, R-341, R-342, R-343, R-344, R-345, R-346, R-347, R-348, R-349, R-350, R-351, R-352, R-353, R-354, R-355, R-356, R-357, R-358, R-359, R-360, R-361, R-362, R-363, R-364, R-365, R-366, R-367, R-368, R-369, R-370, R-371, R-372, R-373, R-374, R-375, R-376, R-377, R-378, R-379, R-380, R-381, R-382, R-383, R-384, R-385, R-386, R-387, R-388, R-389, R-390, R-391, R-392, R-393, R-394, R-395, R-396, R-397, R-398, R-399, R-400, R-401, R-402, R-403, R-404, R-405, R-406, R-407, R-408, R-409, R-410, R-411, R-412, R-413, R-414, R-415, R-416, R-417, R-418, R-419, R-420, R-421, R-422, R-423, R-424, R-425, R-426, R-427, R-428, R-429, R-430, R-431, R-432, R-433, R-434, R-435, R-436, R-437, R-438, R-439, R-440, R-441, R-442, R-443, R-444, R-445, R-446, R-447, R-448, R-449, R-450, R-451, R-452, R-453, R-454, R-455, R-456, R-457, R-458, R-459, R-460, R-461, R-462, R-463, R-464, R-465, R-466, R-467, R-468, R-469, R-470, R-471, R-472, R-473, R-474, R-475, R-476, R-477, R-478, R-479, R-480, R-481, R-482, R-483, R-484, R-485, R-486, R-487, R-488, R-489, R-490, R-491, R-492, R-493, R-494, R-495, R-496, R-497, R-498, R-499, R-500, R-501, R-502, R-503, R-504, R-505, R-506, R-507, R-508, R-509, R-510, R-511, R-512, R-513, R-514, R-515, R-516, R-517, R-518, R-519, R-520, R-521, R-522, R-523, R-524, R-525, R-526, R-527, R-528, R-529, R-530, R-531, R-532, R-533, R-534, R-535, R-536, R-537, R-538, R-539, R-540, R-541, R-542, R-543, R-544, R-545, R-546, R-547, R-548, R-549, R-550, R-551, R-552, R-553, R-554, R-555, R-556, R-557, R-558, R-559, R-560, R-561, R-562, R-563, R-564, R-565, R-566, R-567, R-568, R-569, R-570, R-571, R-572, R-573, R-574, R-575, R-576, R-577, R-578, R-579, R-580, R-581, R-582, R-583, R-584, R-585, R-586, R-587, R-588, R-589, R-590, R-591, R-592, R-593, R-594, R-595, R-596, R-597, R-598, R-599, R-600, R-601, R-602, R-603, R-604, R-605, R-606, R-607, R-608, R-609, R-610, R-611, R-612, R-613, R-614, R-615, R-616, R-617, R-618, R-619, R-620, R-621, R-622, R-623, R-624, R-625, R-626, R-627, R-628, R-629, R-630, R-631, R-632, R-633, R-634, R-635, R-636, R-637, R-638, R-639, R-640, R-641, R-642, R-643, R-644, R-645, R-646, R-647, R-648, R-649, R-650, R-651, R-652, R-653, R-654, R-655, R-656, R-657, R-658, R-659, R-660, R-661, R-662, R-663, R-664, R-665, R-666, R-667, R-668, R-669, R-670, R-671, R-672, R-673, R-674, R-675, R-676, R-677, R-678, R-679, R-680, R-681, R-682, R-683, R-684, R-685, R-686, R-687, R-688, R-689, R-690, R-691, R-692, R-693, R-694, R-695, R-696, R-697, R-698, R-699, R-700, R-701, R-702, R-703, R-704, R-705, R-706, R-707, R-708, R-709, R-710, R-711, R-712, R-713, R-714, R-715, R-716, R-717, R-718, R-719, R-720, R-721, R-722, R-723, R-724, R-725, R-726, R-727, R-728, R-729, R-730, R-731, R-732, R-733, R-734, R-735, R-736, R-737, R-738, R-739, R-740, R-741, R-742, R-743, R-744, R-745, R-746, R-747, R-748, R-749, R-750, R-751, R-752, R-753, R-754, R-755, R-756, R-757, R-758, R-759, R-760, R-761, R-762, R-763, R-764, R-765, R-766, R-767, R-768, R-769, R-770, R-771, R-772, R-773, R-774, R-775, R-776, R-777, R-778, R-779, R-780, R-781, R-782, R-783, R-784, R-785, R-786, R-787, R-788, R-789, R-790, R-791, R-792, R-793, R-794, R-795, R-796, R-797, R-798, R-799, R-800, R-801, R-802, R-803, R-804, R-805, R-806, R-807, R-808, R-809, R-810, R-811, R-812, R-813, R-814, R-815, R-816, R-817, R-818, R-819, R-820, R-821, R-822, R-823, R-824, R-825, R-826, R-827, R-828, R-829, R-830, R-831, R-832, R-833, R-834, R-835, R-836, R-837, R-838, R-839, R-840, R-841, R-842, R-843, R-844, R-845, R-846, R-847, R-848, R-849, R-850, R-851, R-852, R-853, R-854, R-855, R-856, R-857, R-858, R-859, R-860, R-861, R-862, R-863, R-864, R-865, R-866, R-867, R-868, R-869, R-870, R-871, R-872, R-873, R-874, R-875, R-876, R-877, R-878, R-879, R-880, R-881, R-882, R-883, R-884, R-885, R-886, R-887, R-888, R-889, R-890, R-891, R-892, R-893, R-894, R-895, R-896, R-897, R-898, R-899, R-900, R-901, R-902, R-903, R-904, R-905, R-906, R-907, R-908, R-909, R-910, R-911, R-912, R-913, R-914, R-915, R-916, R-917, R-918, R-919, R-920, R-921, R-922, R-923, R-924, R-925, R-926, R-927, R-928, R-929, R-930, R-931, R-932, R-933, R-934, R-935, R-936, R-937, R-938, R-939, R-940, R-941, R-942, R-943, R-944, R-945, R-946, R-947, R-948, R-949, R-950, R-951, R-952, R-953, R-954, R-955, R-956, R-957, R-958, R-959, R-960, R-961, R-962, R-963, R-964, R-965, R-966, R-967, R-968, R-969, R-970, R-971, R-972, R-973, R-974, R-975, R-976, R-977, R-978, R-979, R-980, R-981, R-982, R-983, R-984, R-985, R-986, R-987, R-988, R-989, R-990, R-991, R-992, R-993, R-994, R-995, R-996, R-997, R-998, R-999, R-1000, R-1001, R-1002, R-1003, R-1004, R-1005, R-1006, R-1007, R-1008, R-1009, R-1010, R-1011, R-1012, R-1013, R-1014, R-1015, R-1016, R-1017, R-1018, R-1019, R-1020, R-1021, R-1022, R-1023, R-1024, R-1025, R-1026, R-1027, R-1028, R-1029, R-1030, R-1031, R-1032, R-1033, R-1034, R-1035, R-1036, R-1037, R-1038, R-1039, R-1040, R-1041, R-1042, R-1043, R-1044, R-1045, R-1046, R-1047, R-1048, R-1049, R-1050, R-1051, R-1052, R-1053, R-1054, R-1055, R-1056, R-1057, R-1058, R-1059, R-1060, R-1061, R-1062, R-1063, R-1064, R-1065, R-1066, R-1067, R-1068, R-1069, R-1070, R-1071, R-1072, R-1073, R-1074, R-1075, R-1076, R-1077, R-1078, R-1079, R-1080, R-1081, R-1082, R-1083, R-1084, R-1085, R-1086, R-1087, R-1088, R-1089, R-1090, R-1091, R-1092, R-1093, R-1094, R-1095, R-1096, R-1097, R-1098, R-1099, R-1100, R-1101, R-1102, R-1103, R-1104, R-1105, R-1106, R-1107, R-1108, R-1109, R-1110, R-1111, R-1112, R-1113, R-1114, R-1115, R-1116, R-1117, R-1118, R-1119, R-1120, R-1121, R-1122, R-1123, R-1124, R-1125, R-1126, R-1127, R-1128, R-1129, R-1130, R-1131, R-1132, R-1133, R-1134, R-1135, R-1136, R-1137, R-1138, R-1139, R-1140, R-1141, R-1142, R-1143, R-1144, R-1145, R-1146, R-1147, R-1148, R-1149, R-1150, R-1151, R-1152, R-1153, R-1154, R-1155, R-1156, R-1157, R-1158, R-1159, R-1160, R-1161, R-1162, R-1163, R-1164, R-1165, R-1166, R-1167, R-1168, R-1169, R-1170, R-1171, R-1172, R-1173, R-1174, R-1175, R-1176, R-1177, R-1178, R-1179, R-1180, R-1181, R-1182, R-1183, R-1184, R-1185, R-1186, R-1187, R-1188, R-1189, R-1190, R-1191, R-1192, R-1193, R-1194, R-1195, R-1196, R-1197, R-1198, R-1199, R-1200, R-1201, R-1202, R-1203, R-1204, R-1205, R-1206, R-1207, R-1208, R-1209, R-1210, R-1211, R-1212, R-1213, R-1214, R-1215, R-1216, R-1217, R-1218, R-1219, R-1220, R-1221, R-1222, R-1223, R-1224, R-1225, R-1226, R-1227, R-1228, R-1229, R-1230, R-1231, R-1232, R-1233, R-1234, R-1235, R-1236, R-1237, R-1238, R-1239, R-1240, R-1241, R-1242, R-1243, R-1244, R-1245, R-1246, R-1247, R-1248, R-1249, R-1250, R-1251, R-1252, R-1253, R-1254, R-1255, R-1256, R-1257, R-1258, R-1259, R-1260, R-1261, R-1262, R-1263, R-1264, R-1265, R-1266, R-1267, R-1268, R-1269, R-1270, R-1271, R-1272, R-1273, R-1274, R-1275, R-1276, R-1277, R-1278, R-1279, R-1280, R-1281, R-1282, R-1283, R-1284, R-1285, R-1286, R-1287, R-1288, R-1289, R-1290, R-1291, R-1292, R-1293, R-1294, R-1295, R-1296, R-1297, R-1298, R-1299, R-1300, R-1301, R-1302, R-1303, R-1304, R-1305, R-1306, R-1307, R-1308, R-1309, R-1310, R-1311, R-1312, R-1313, R-1314, R-1315, R-1316, R-1317, R-1318, R-1319, R-1320, R-1321, R-1322, R-1323, R-1324, R-1325, R-1326, R-1327, R-1328, R-1329, R-1330, R-1331, R-1332, R-1333, R-1334, R-1335, R-1336, R-1337, R-1338, R-1339, R-1340, R-1341, R-1342, R-1343, R-1344, R-1345, R-1346, R-1347, R-1348, R-1349, R-1350, R-1351, R-1352, R-1353, R-1354, R-1355, R-1356, R-1357, R-1358, R-1359, R-1360, R-1361, R-1362, R-1363, R-1364, R-1365, R-1366, R-1367, R-1368, R-1369, R-1370, R-1371, R-1372, R-1373, R-1374, R-1375, R-1376, R-1377, R-1378, R-1379, R-1380, R-1381, R-1382, R-1383, R-1384, R-1385, R-1386, R-1387, R-1388, R-1389, R-1390, R-1391, R-1392, R-1393, R-1394, R-1395, R-1396, R-1397, R-1398, R-1399, R-1400, R-1401, R-1402, R-1403, R-1404, R-1405, R-1406, R-1407, R-1408, R-1409, R-1410, R-1411, R-1412, R-1413, R-1414, R-1415, R-1416, R-1417, R-1418, R-1419, R-1420, R-1421, R-1422, R-1423, R-1424, R-1425, R-1426, R-1427, R-1428, R-1429, R-1430, R-1431, R-1432, R-1433, R-1434, R-1435, R-1436, R-1437, R-1438, R-1439, R-1440, R-1441, R-1442, R-1443, R-1444, R-1445, R-1446, R-1447, R-1448, R-1449, R-1450, R-1451, R-1452, R-1453, R-1454, R-1455, R-1456, R-1457, R-1458, R-1459, R-1460, R-1461, R-1462, R-1463, R-1464, R-1465, R-1466, R-1467, R-1468, R-1469, R-1470, R-1471, R-1472, R-1473, R-1474, R-1475, R-1476, R-1477, R-1478, R-1479, R-1480, R-1481, R-1482, R-1483, R-1484, R-1485, R-1486, R-1487, R-1488, R-1489, R-1490, R-1491, R-1492, R-1493, R-1494, R-1495, R-1496, R-1497, R-1498, R-1499, R-1500, R-1501, R-1502, R-1503, R-1504, R-1505, R-1506, R-1507, R-1508, R-1509, R-1510, R-1511, R-1512, R-1513, R-1514, R-1515, R-1516, R-1517, R-1518, R-1519, R-1520, R-1521, R-1522, R-1523, R-1524, R-1525, R-1526, R-1527, R-1528, R-1529, R-1530, R-1531, R-1532, R-1533, R-1534, R-1535, R-1536, R-1537, R-1538, R-1539, R-1540, R-1541, R-1542, R-1543, R-

MODEL T1451

MODELS T1664, T1764

PILOT RADIO CORP.

Schematics, Trimmers Alignment

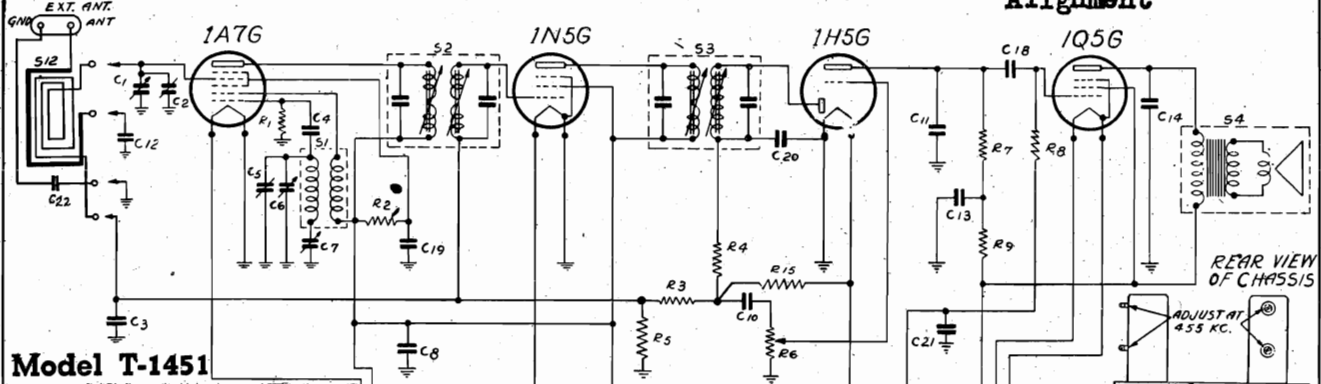

Model T-1451

RESISTORS FOR MODEL T-1451

R1	13191	200,000 OHMS 1/4 W CARBON
R2	13241	60,000 OHMS 1/4 W CARBON
R3 R5 R8	13223	3.3 MEGS. 1/4 W CARBON
R4	13164	50,000 OHMS 1/4 W CARBON
R6	84105	2 MFGS VOL CONT & SWITCH
R7	13001	1-MEG. 1/4 W CARBON
R9	13031	100,000 OHMS 1/4 W CARBON
R10	83656-J	50 OHMS 1 W FLEXIBLE
R11	83656-G	25 OHMS 3 W FLEXIBLE
R12	84116	700 OHMS 8 W W IRONCLAD
R13	13019	2000 OHMS 1/4 W CARBON
R14	13048	800 OHMS 1/4 W CARBON
R15	13007	2 MEGS. 1/4 W CARBON

CONDENSERS FOR MODEL T-1451

C1 C6	84125	2 GANG COND
C2 C5	70969-J	ANT. OSC TRIMMER ASSY
C3	22055-I	0.5 MFD 200V PAPER COND.
C4 C11	28016-B	100 MMFD MICA COND.
C7	79431-B	385 MMFD PADDING COND
C16	22055-P	.05 MFD 400V PAPER COND.
C9 C17	23500-J	40 MFD 150V ELEC. COND
C10	22491-E	0.1 MFD. 200V. COND.
C12	22055-W	0.1 MFD 400V PAPER COND.
C13	22055-M	1 MFD 200V PAPER COND.
C14	22055-K	.002 MFD 600V PAPER COND.
C15	23500-G	30 MFD 25V ELEC. COND.
C18 C19	22055-T	0.1 MFD 200V PAPER COND.
C20	27701-O	250 MMFD MICA COND.
C8	22055-AK	1.0 MFD 200V PAPER COND.
C21	23500-B	10 MFD 25V ELEC COND.
C22	22055-A	.01 MFD 600 V


MISCELLANEOUS FOR MODEL T-1451

S1	73271	OSC. COIL ASSY
S2	73277	1ST I.F. TRANS. ASSY
S3	73274	2ND I.F. TRANS. ASSY
S4	40877	5 1/2" R.M. SPEAKER
S5 S7	84110	RELAY
S6	72151	DIAL LIGHT .15 AMPS.
S8	84115	CHOKI 5 HS 200A 100MA
S9	84106	LINE CORD 310"
S10 S11		SWITCHES ON VOL CONT.
S12	73264	ANT LOOP ASSY

ALTERATIONS & DATE

- 1 C2 C5 WAS 70969-E & R 5/16/33
- 2 R-14 WAS 1240-1888 WMS 100V & C 6-1-31
- 3 C22 ADDED, AND N-14 ANT 5ND CTRM 4-11-33
- 4 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 5 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 6 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 7 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 8 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 9 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 10 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 11 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 12 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 13 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 14 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 15 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 16 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 17 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 18 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 19 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 20 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 21 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 22 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 23 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 24 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 25 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 26 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 27 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 28 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 29 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 30 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 31 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 32 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 33 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 34 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 35 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 36 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 37 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 38 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 39 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 40 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 41 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 42 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 43 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 44 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 45 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 46 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 47 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 48 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 49 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 50 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 51 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 52 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 53 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 54 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 55 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 56 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 57 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 58 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 59 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 60 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 61 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 62 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 63 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 64 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 65 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 66 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 67 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 68 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 69 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 70 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 71 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 72 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 73 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 74 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 75 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 76 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 77 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 78 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 79 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 80 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 81 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 82 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 83 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 84 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 85 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 86 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 87 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 88 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 89 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 90 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 91 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 92 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 93 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 94 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 95 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 96 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 97 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 98 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 99 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 100 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY

IF PEAK 455 KC
ALIGNING FREQUENCIES
BC. 150C & 600KC.

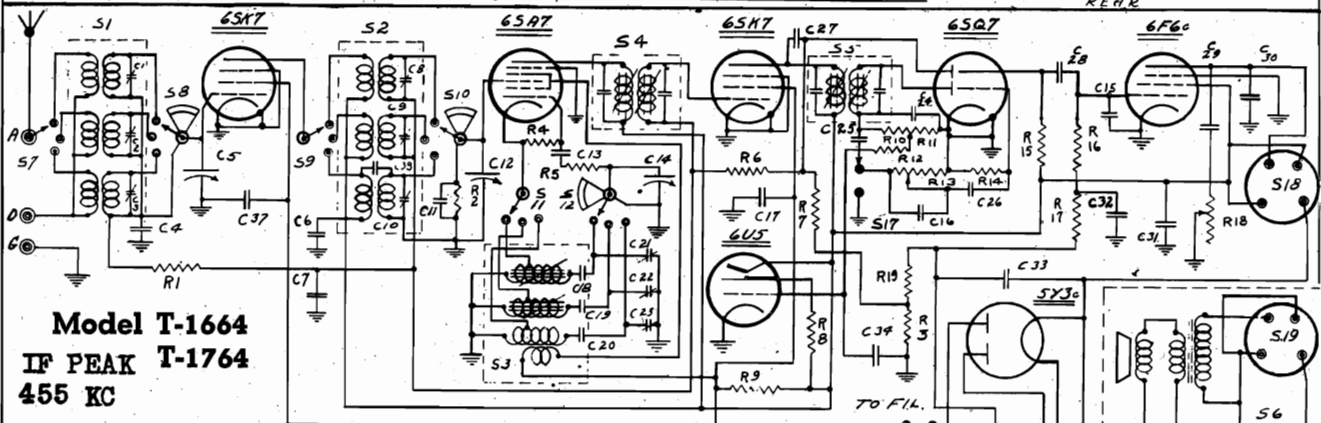

Model T-1664
IF PEAK T-1764
455 KC

RESISTORS FOR MODEL 1660

R1, R16	13031	100,000 OHMS 1/4 WATT
R2, R7	13001	1 MEG OHM 1/4 WATT
R3	13010	50 OHMS 1/4 WATT
R4	13074	100,000 OHMS 1/4 WATT
R5	83656-H	40 OHMS 1/4 W FLEX
R6, R12	13007	2 MEG OHMS 1/4 WATT
R8	13282	12,000 OHMS 3/4 WATT
R9, R11	13221	330,000 OHMS 1/4 WATT
R13	83656-F	1 MEG OHM VOL. CONTROL
R14	13225	4 MEG OHMS 1/4 WATT
R15	13191	200,000 OHMS 1/4 WATT
R17	13171	330,000 OHMS 1/4 WATT
R18	83647E	100,000 OHMS 1/2 WATT
R19	13036	200,000 OHMS 1 WATT

MISCELLANEOUS FOR MODEL 1660

S1	73271	OSC. COIL ASSY
S2	73277	1ST I.F. TRANS. ASSY
S3	73274	2ND I.F. TRANS. ASSY
S4	40877	5 1/2" R.M. SPEAKER
S5 S7	84110	RELAY
S6	72151	DIAL LIGHT .15 AMPS.
S8	84115	CHOKI 5 HS 200A 100MA
S9	84106	LINE CORD 310"
S10 S11		SWITCHES ON VOL CONT.
S12	73264	ANT LOOP ASSY

CONDENSERS FOR MODEL 1660


C1, C6, C3		TRIMMERS
C4 C7	22055-I	.05 MFD 200 V.P.T.
C5, C10, C11	84407	3 GANG CONDENSER
C8, C9, C10		TRIMMERS
C11	22055-T	.01 MFD 200 V.P.T.
C12	277230	50 MMFD MICA
C13	27702-O	500 MMFD MICA
C14	27701-O	250 MMFD MICA
C15	22055-A	.01 MFD. 600V
C16	32000-C	430 MMFD SILVERMICA
C17	27732	.0016 MFD. MICA
C18	28023-W	.0038 MFD MICA
C19	28023-W	.0038 MFD MICA
C20	28023-W	.0038 MFD MICA
C21, C22	70969-E	TRIMMERS
C23	28105	150 MMFD MICA
C24	22055-T	.01 MFD 200V
C25	22055-X	.005 MFD 200V
C26	28114-A	20 MMFD MICA
C27	22055-AK	.02 MFD 600V
C28	22055-T	.03 MFD 1000V
C29	22055-A	.005 MFD 1000V
C30	22055-A	.005 MFD 1000V
C31	23500-D	8 MFD. 450V ELEC
C32	23500-D	16 MFD. 450V ELEC
C33	22055-T	.01 MFD. 200V
C34	22055-T	.01 MFD. 200V
C35, C36	22055-V	.01 MFD 1000V
C37	28120-A	5 MMFD MICA
C38	83110-B	TRIMMER
C39	22055-C	.05 MFD. 600VOLT

ALTERATIONS & DATE

- 1 C2 C5 WAS 70969-E & R 5/16/33
- 2 R-14 WAS 1240-1888 WMS 100V & C 6-1-31
- 3 C22 ADDED, AND N-14 ANT 5ND CTRM 4-11-33
- 4 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 5 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 6 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 7 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 8 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 9 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 10 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 11 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 12 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 13 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 14 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 15 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 16 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 17 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 18 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 19 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 20 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 21 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 22 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 23 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 24 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 25 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 26 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 27 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 28 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 29 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 30 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 31 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 32 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 33 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 34 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 35 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 36 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 37 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 38 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 39 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 40 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 41 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 42 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 43 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 44 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 45 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 46 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 47 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 48 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 49 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 50 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 51 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 52 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 53 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 54 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 55 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 56 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 57 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 58 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 59 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 60 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 61 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 62 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 63 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 64 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 65 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 66 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 67 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 68 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 69 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 70 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 71 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 72 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 73 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 74 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 75 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 76 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 77 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 78 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 79 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 80 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 81 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 82 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 83 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 84 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 85 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 86 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 87 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 88 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 89 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 90 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 91 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 92 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 93 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 94 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 95 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 96 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 97 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 98 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 99 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY
- 100 2ND I.F. TRANS. COIL 2ND I.F. TRANS. ASSY

MISCELLANEOUS FOR MODEL 1660



S1	73271	OSC. COIL ASSY
S2	73277	1ST I.F. TRANS. ASSY
S3	73274	2ND I.F. TRANS. ASSY
S4	40877	5 1/2" R.M. SPEAKER
S5 S7	84110	RELAY
S6	72151	DIAL LIGHT .15 AMPS.
S8	84115	CHOKI 5 HS 200A 100MA
S9	84106	LINE CORD 310"
S10 S11		SWITCHES ON VOL CONT.
S12	73264	ANT LOOP ASSY

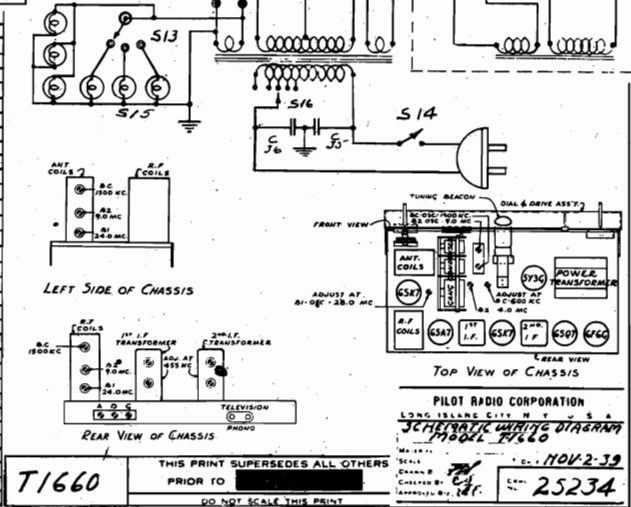

Schematics, Socket Trimmers, Alignment

PILOT RADIO CORP.


MODELS X1584, X1684 MODEL T1854

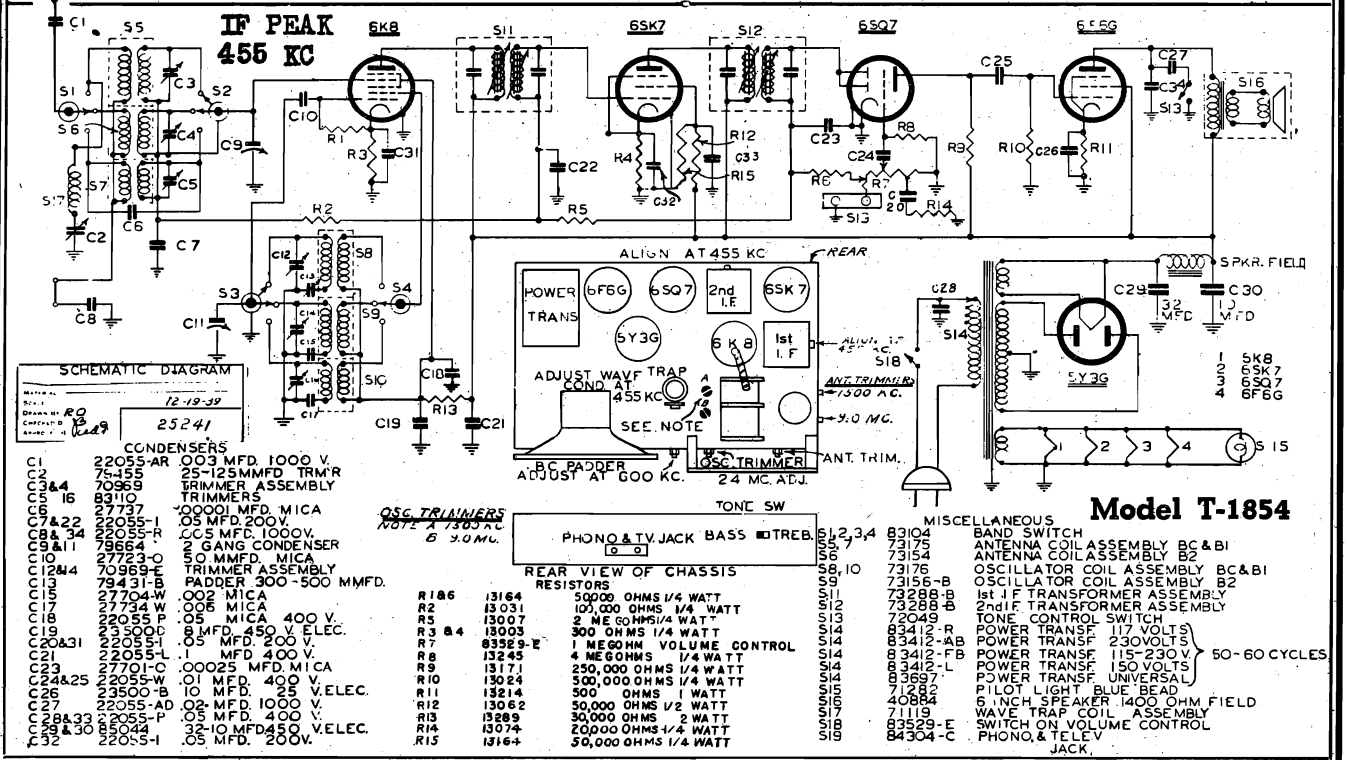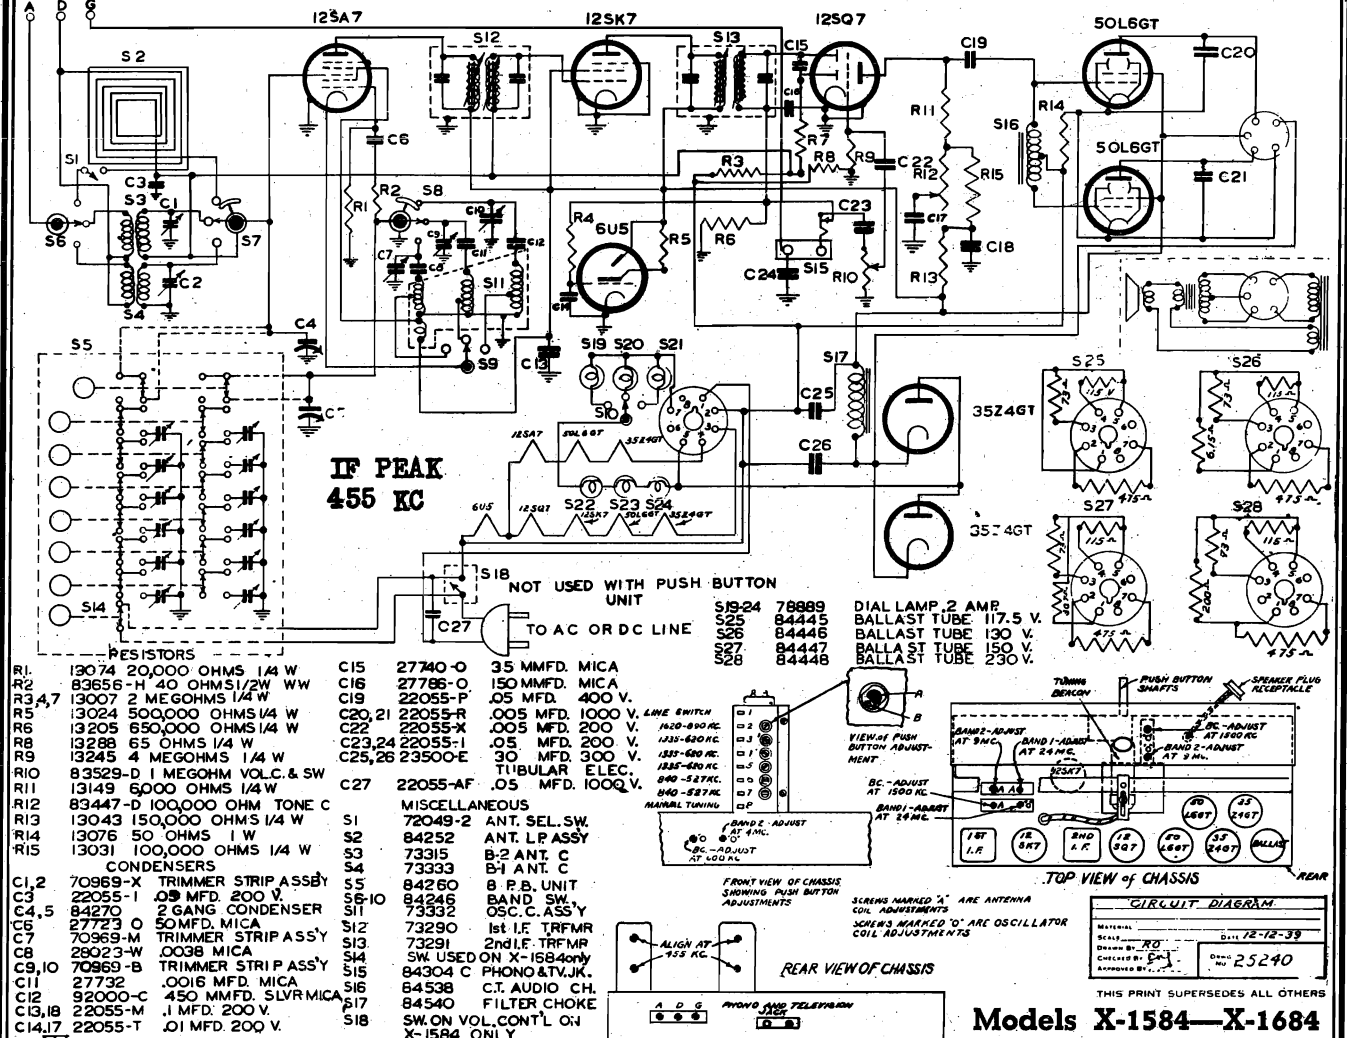

MODELS T1584, T1684

Schematic, Socket Alignment, Trimmers Tuner Data

PILOT RADIO CORP.

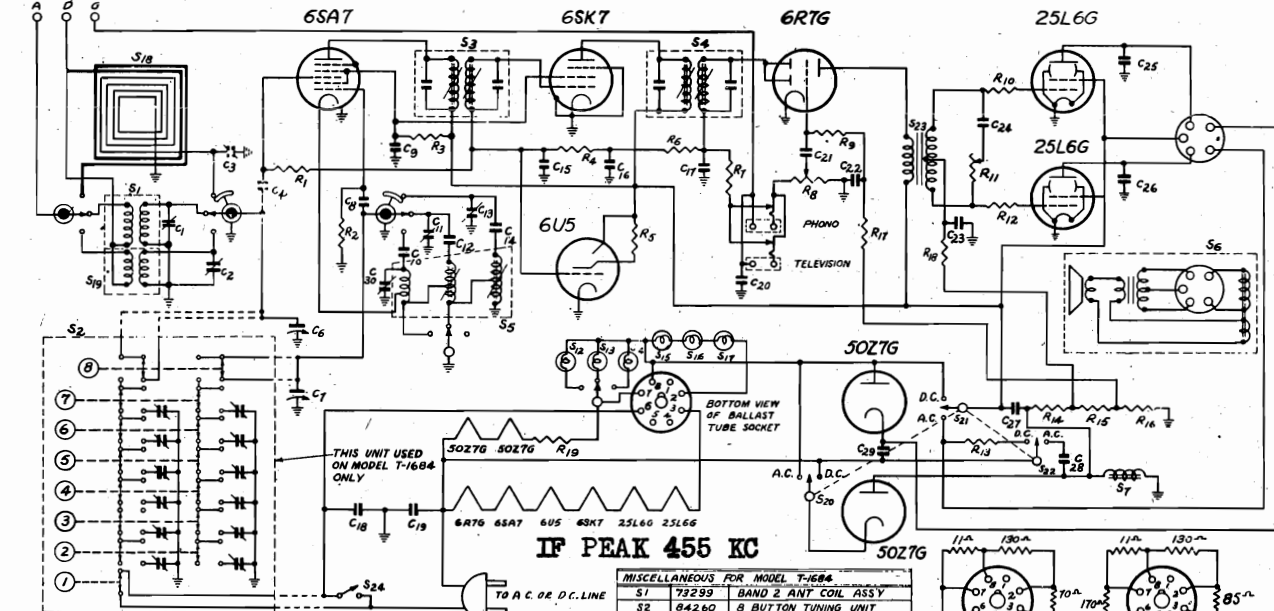

CONDENSERS FOR MODELS T-1584, T-1684

C1, C2	T0969-X	TRIMMER STRIP ASSY
C3, C30	T0969-J	TRIMMER STRIP ASSY
C11, C13	T0969-B	TRIMMER STRIP ASSY
C4	2770I-D	250 MMF. MICA
C6, C7	04270	GANG CONDENSER
C9, C17	28046-O	100 MMF. MICA
C8, C20	23035-I	.05 - 200 VOLTS PAPER
C10	28023-W	.0038 MMF. MICA
C12	27732	.0048 MMF. MICA
C14	92000-C	450 MMF. SILVER CAP. MICA
C15, C16	22055-M	.1 MFD. - 200 VOLTS PAPER
C18, C19	T8503-B	.01-.01 MFD. 1000 VOLTS SHIELDED
C21	22055W	.005 MFD. 400 VOLTS PAPER
C25, C26	22055-R	.005 MFD. 1000 VOLTS PAPER
C27	28065-F	.25 MFD. - 200 VOLTS PAPER
C28, C29	28500-E	30 MFD. - 300 VOLTS SMALL TUB.
C29, C32	23500-J	40 MFD. - 160 VOLTS ELECTRO.
C24	22055W	.01 400 VOLTS PAPER

RESISTORS FOR MODELS T-1584, T-1684


R1, R5, R9	13024	1/2 MEGOHM, 1/4 WATT
R2, R7	13074	20,000 OHMS, 1/4 WATT
R3	13082	2,000 OHMS, 1/4 WATT
R4	13001	1 MEGOHM, 1/4 WATT
R6	13007	2 MEGOHM, 1/4 WATT
R8	T8906-B	1/2 MEGOHM VOL. CONTROL
R10, R12	13012	500 OHMS, 1/4 WATT
R12	83447-D	750,000 OHMS, TONE CONTROL
R13	83039-B	300 OHMS, .10 WATTS
R14	13204	120,000 OHMS, 1/4 WATT
R15	13043	150,000 OHMS, 1/4 WATT
R16	13200	75,000 OHMS, 1/4 WATT
R17, R18	13171	250,000 OHMS, 1/4 WATT
R19	83656-M	110 OHMS, 2 WATTS

MISCELLANEOUS FOR MODEL T-1684


S1	T9299	BAND 2 ANT. COIL ASSY
S2	84260	8 BUTTON TUNING UNIT
S3	T3250	1ST I.F. TRANS. ASSY
S4	T3252	2ND I.F. TRANS. ASSY
S5	T3292	OSCILLATOR COIL ASSY
S6	40875	8 A.C. D.C. SPEAKER, 700A FIELD
S7	84115-B	FILTER CHOKES
S8	81908	BALLAST TUBE 115 V.
S9	81931	BALLAST TUBE 230 V.
S10	81989	BALLAST TUBE 130 V.
S11	81990	BALLAST TUBE 150 V.
S12	T2151	DIAL LAMP BROWN BEAD BULB
S18	84252	ANTENNA LOOP ASSY
S19	T3298	BAND 1 ANT. COIL ASSY
S20-S22	84262	POWER SELECTOR SWITCH
S23	8387T	PUSH PULL INPUT TRANS. ASSY

MISCELLANEOUS FOR MODEL T-1580 SAME AS FOR MODEL T-1680 EXCEPT FOLLOWING

S2	NOT USED
----	----------

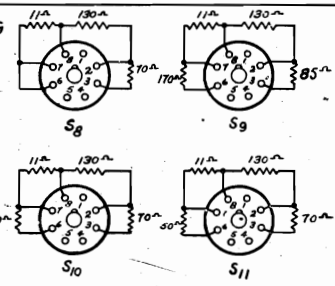

PILOT RADIO CORPORATION
LONG ISLAND CITY, N. Y., U. S. A.
SCHEMATIC CIRCUIT DIAGRAM
MODEL T-1584, T-1684
DATE 9-19-39
25226

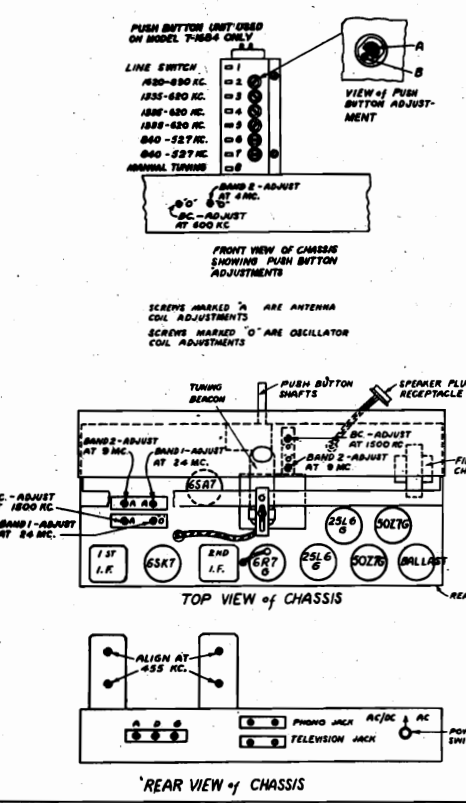

PUSH BUTTON CONTROLS:

The purpose of the topmost button (No. 1) is to shut off the power of the receiver. The following 6 push buttons are available for any 8 stations on the broadcast band in the tuning ranges designated below. The lowest button (No. 8) is to be pressed when you wish to operate the manual tuning control.

To set the 6 station tunings (No. 2 to 7) to various stations of the broadcast band, the operations noted below should be followed.

1. Remove the two screws above and below the push buttons in the wooden cover plate and lift off the plate. This will disclose the adjusting screws.
2. With a screw driver inserted in the larger of the two screws opposite the buttons, turn either right or left until the desired station is tuned in. Then make the final adjustment with the small screw.

The limiting wave lengths between which the various buttons can be adjusted are as follows: (buttons numbered from top to bottom).

- Button No. 1—"OFF" power switch
- Button No. 2—from 1620 kc. to 890 kc. and "ON" power switch
- Button No. 3—from 1335 kc. to 620 kc. and "ON" power switch
- Button No. 4—from 1335 kc. to 620 kc. and "ON" power switch
- Button No. 5—from 1335 kc. to 620 kc. and "ON" power switch
- Button No. 6—from 840 kc. to 527 kc. and "ON" power switch
- Button No. 7—from 840 kc. to 527 kc. and "ON" power switch
- Button No. 8—Manual Tuning and "ON" power switch


3. In the instruction envelope you will find a card with perforated call letters for most of the broadcasting stations.

Remove the desired one and insert it in the head of the push button whose shaft is next to the screw which has been adjusted to that station.

4. After all push buttons have been set, replace the front wooden plate.

MODEL 4QB, Ch. RC440
Schematic, Lead Dress


RCA MFG. CO., INC.

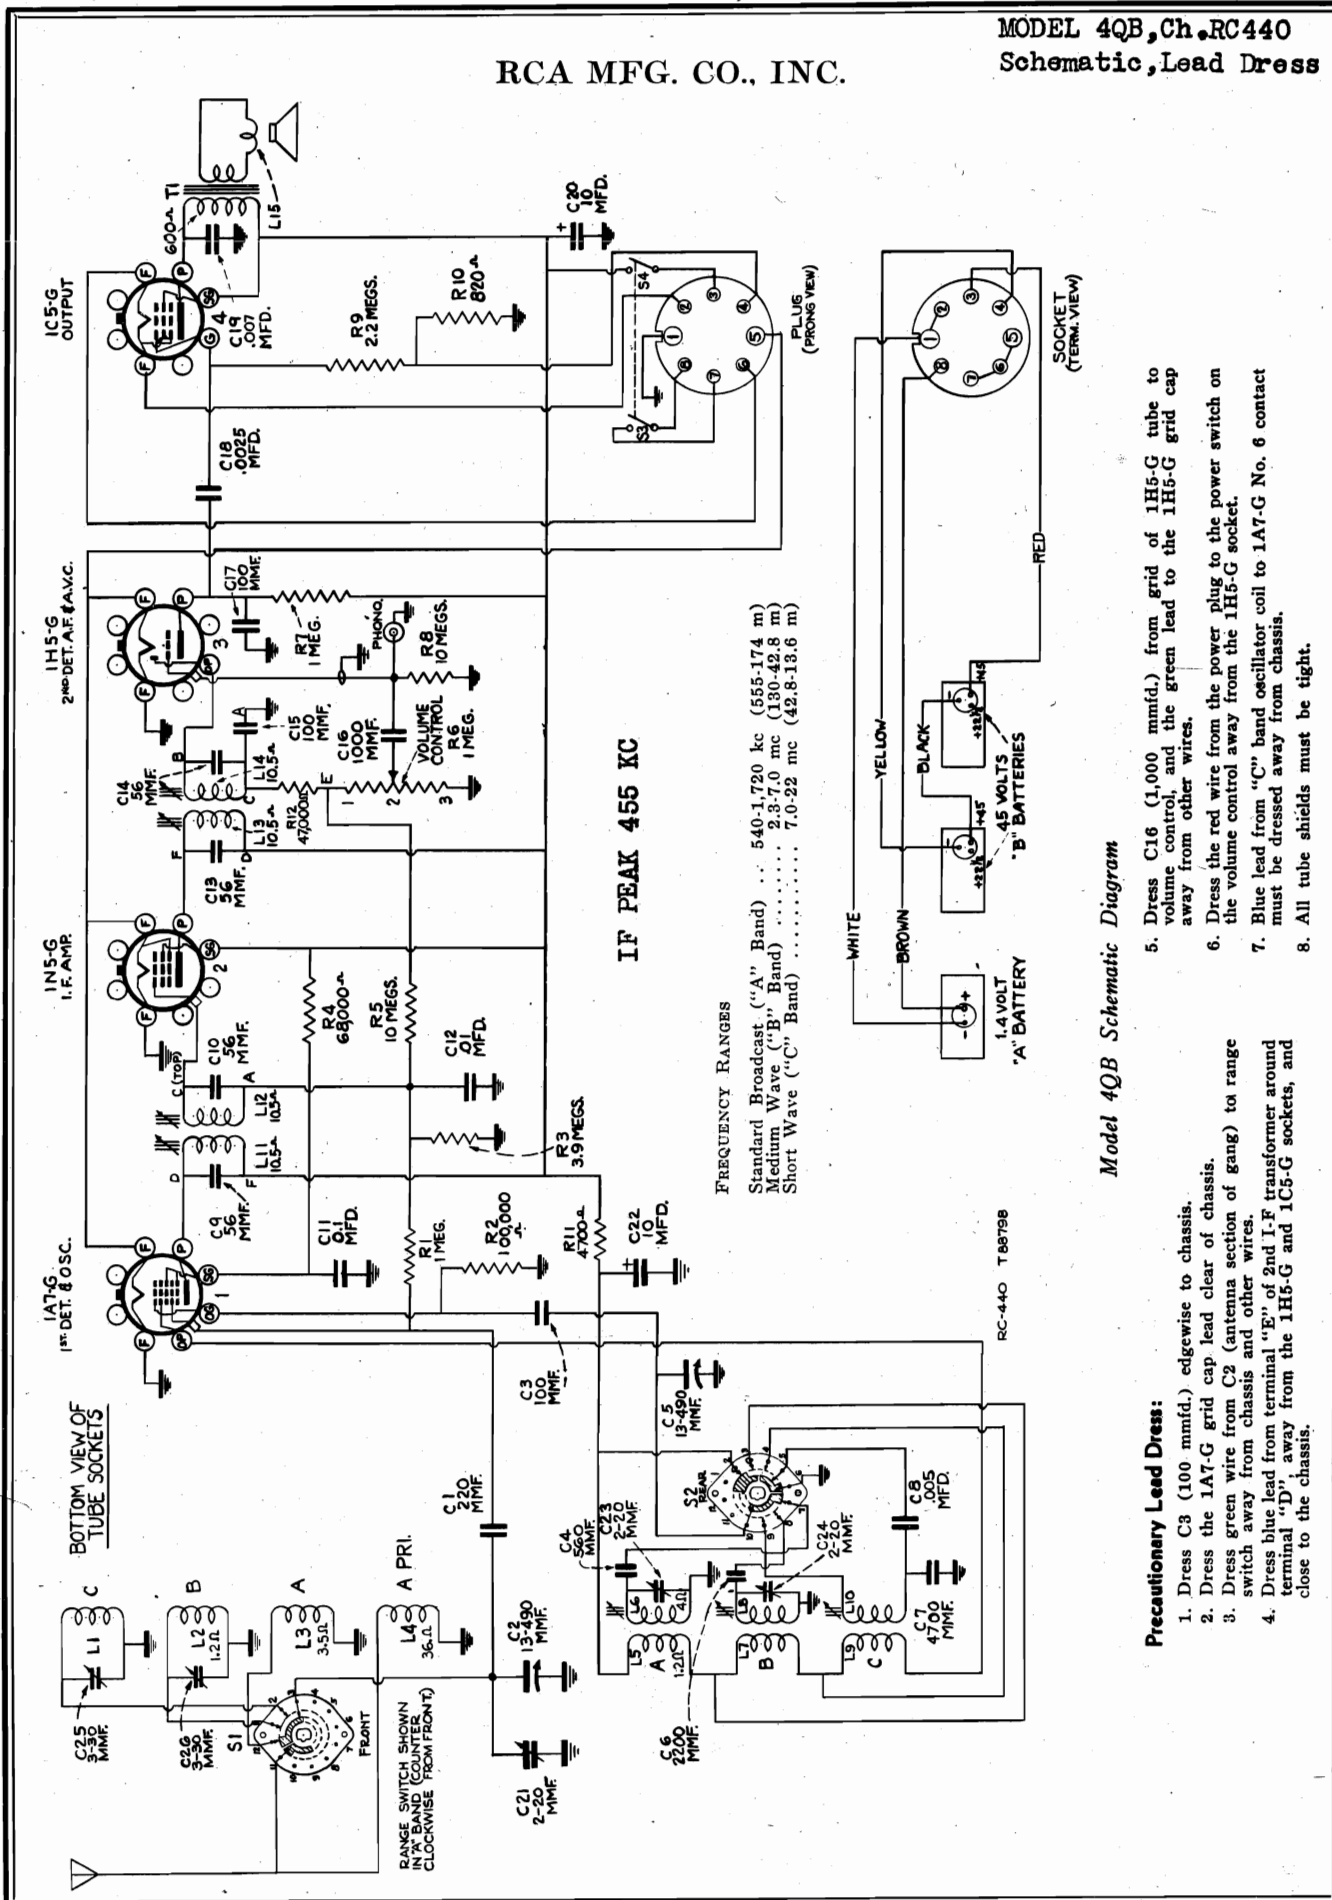

MODEL 4QB
Alignment, Socket
Trimmers, Voltage
Chassis Wiring


RCA MFG. CO., INC.
Model 4QB Alignment Procedure

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output—
1	1N5-G I-F grid cap, in series with .01 mfd.	455 kc	"A" band, quiet point at high-frequency end	L14 and L13 (2nd I-F Trans.)
2	1A7-G 1st-Det. grid cap, in series with .01 mfd.			L12 and L11† (1st I-F Trans.)
3	Antenna lead, in series with 200 mmfd.	1,500 kc	1,500 kc (152.5°) "A" band	Preset L6 (osc.) core 5/16-in. out. Peak C23 (osc.) and C21 (ant.)
4		600 kc	600 kc (33°) "A" band	L6 (osc.)**
5		Repeat steps 3 and 4		
6		6.1 mc	6.1 mc (151°) "B" band	Preset L8 (osc.) core 1/8-in. out. Peak C24 (osc.)* and C26 (ant.)
7	Repeat steps 6 and 7	2.5	2.5 mc (29.5°) "B" band	L8 (osc.)**
8		Repeat steps 6 and 7		
9	Antenna lead, in series with 300 ohms	15.2 mc	15.2 mc (122°) "C" band	L10 (osc.)
10		20 mc	20 mc (155.5°) "C" band	C25 (ant.)†† Rock gang
11	Antenna lead, in series with 200 mmfd.	1,500 kc	1,500 kc (152.5 kc) "A" band	C23 (osc.)

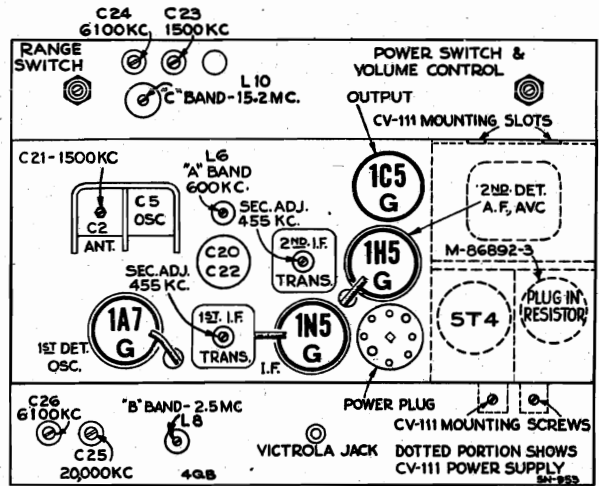

Model 4QB Top View

*Use minimum capacity peak if two peaks can be obtained.
 **Rock gang slightly for peak output.
 †Do not readjust L13 or L14 when test-osc. is applied to 1A7-G grid.
 ††Use maximum capacity peak if two peaks can be obtained.

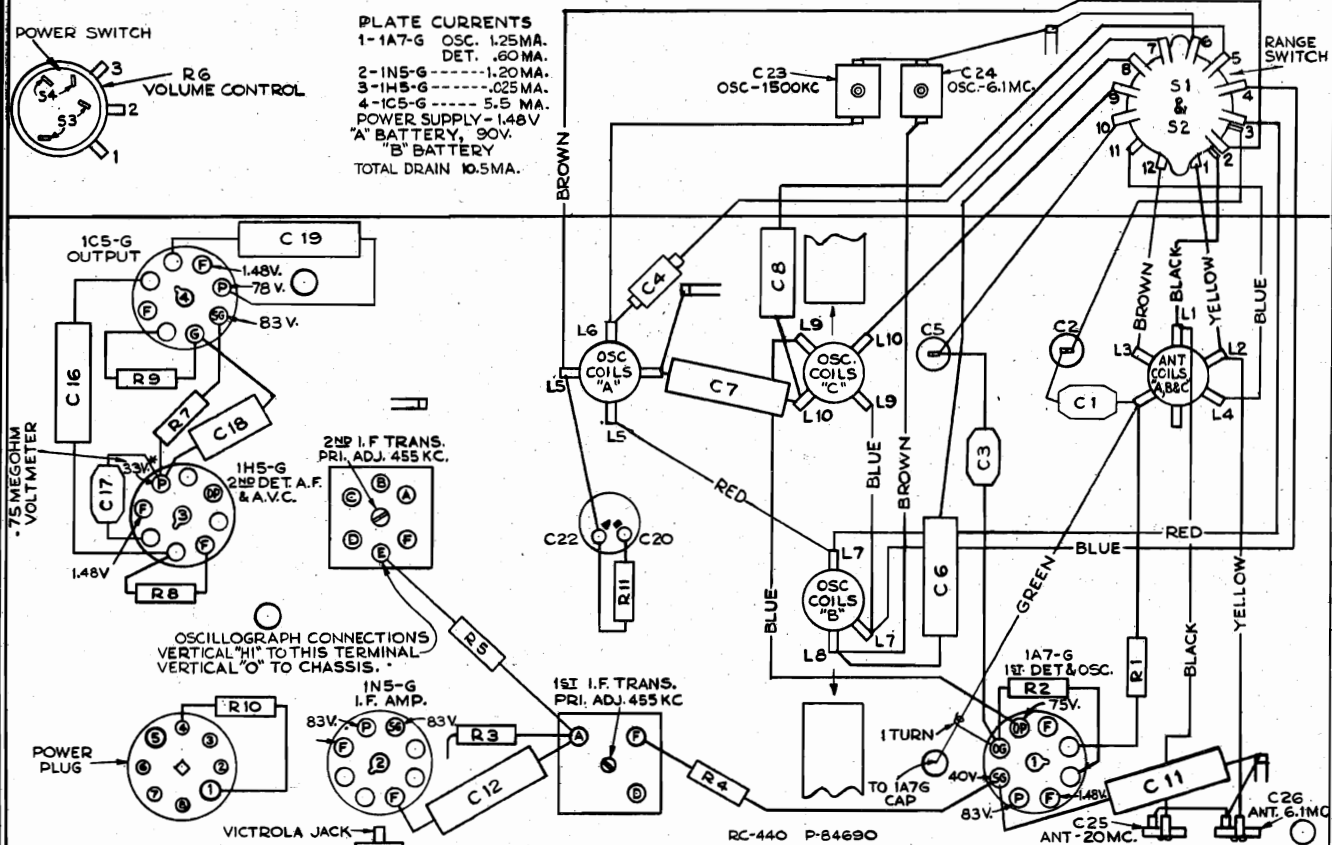

BOTTOM VIEW - REAR OF CHASSIS

Model 4QB R-F Wiring Diagram and Socket Voltages
 Voltages shown above are for battery operation.

RCA MFG. CO., INC.

MODEL 4QB4 MODEL 4QB
Alignment Notes, Drive Cord
MODEL CV-111 Power Supply
Schematic, Voltage, Notes

General Alignment Data for Models 4QB and 4QB4

(Refer to specific "Alignment Procedure" for each model)

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the ground terminal, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment, therefore a calibration scale is attached to the rear of the drum which is mounted on the shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 45 degree mark on drum scale should be in an approximately horizontal position when the plates are fully meshed. The distance from the edge of the chassis to the drum must not exceed 3/8-inch. The drum is held to the shaft by means of a set screw, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang condenser frame, and bend the wire so that it points to the "0" mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, (last mark at end of "A" scale) and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

CV-111 A-C POWER SUPPLY UNIT

- Power Rating 105-125/200-250 volts, 50-60 cycles, 65 watts
- Rectifier Tube RCA-5T4
- Ballast Resistor Tube Type 86892-3
- Dial Lamp Mazda 44, 6.3 volts, 0.25 amp.
- Dimensions (inches) 5 x 3 1/2 x 6 1/2
- Net Weight 5 lbs.

Miscellaneous Data

Battery Connections:

A four-wire cable with a plug at each end is provided for making connection from the 8-prong connector on chassis to a plug-in 1 1/2-volt "A-B" battery pack.

When separate "A" and "B" batteries are used, it is necessary to use an adapter cable with a socket on one end and three plugs on the other end, connected as shown in the accompanying sketch.

With separate "A" and "B" batteries that have terminals instead of plug-in connectors, remove the three plugs on the adapter cable and connect the leads to the battery terminals, following the color code shown in the schematic diagram.


Victrola Attachment:

A jack is provided on the rear of chassis for connecting a Victrola Attachment into the audio-amplifying circuit. The cable from the Victrola Attachment should be terminated in a Stock No. 31048 plug to fit the jack.

CV-111 A-C Power Supply Unit

Models 4QB and 4QB4 may be operated on 105-125/200-250 volts, 50-60 cycle a-c power supply, by installing a CV-111 power supply unit on the chassis, as follows:

1. Remove the battery cable plug from the power plug on chassis.
2. Set the line power switch (on side of CV-111) to the correct position for the a-c voltage that is to be used.
3. Place the CV-111 on top of the radio chassis as shown in dotted lines in the top view. Press the dial light clip on the projection at low-frequency end of dial assembly. Insert the 8-prong socket (on cable from CV-111) into the power plug on chassis.
4. Fasten the power unit to the chassis. The front of the unit has two projections which fit into slots on the front of the

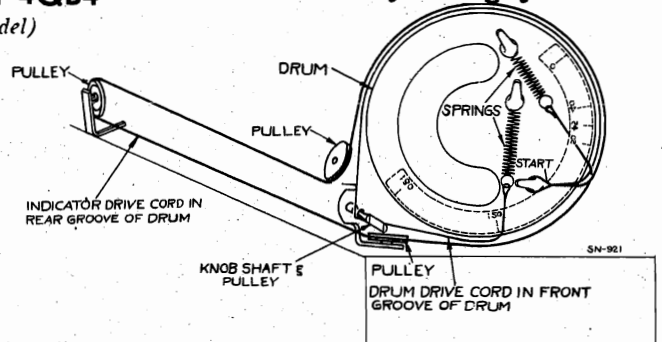

Arrangement of Drive Cords for Tuning Condenser and Dial Indicator

(Drum shown with gang in maximum-capacity position)

POWER OUTPUT RATING

	Undistorted	Maximum
With Battery Supply	0.13 watt	0.23 watt
With A-C Supply	0.20 watt	0.46 watt

LOUDSPEAKER


Type 5-inch permanent-magnet dynamic
Voice-coil Impedance 3 ohms at 400 cycles

BATTERIES REQUIRED

One 1 1/2-volt "A" battery, and
Two 45-volt "B" batteries, or
One 1 1/2-90-volt battery pack.

BATTERY DRAIN

"A"25 amp.
"B"	10.5 ma.

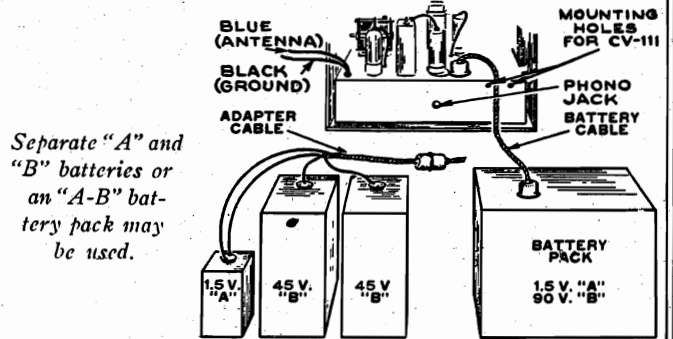

Separate "A" and "B" batteries or an "A-B" battery pack may be used.

SEPARATE "A" & "B" BATTERIES (ALTERNATIVE)

"A-B" PACK BATTERY


chassis. Two projections on the rear of the unit have holes for fastening to the rear of the chassis with self-tapping screws.

5. Caution: Before connecting to the a-c supply, make certain that all tubes are firmly seated in their sockets. Always disconnect the a-c supply before removing or replacing tubes.
6. Reverse the a-c power plug for minimum hum.

Socket Voltages, with CV-111 Power Supply Unit (Line Supply Voltage, 117, or 234 volts)

Tube	1A7-G	1N5-G	1H5-G	1C5-G
Function	1st-Det.	Osc.	I. F.	2nd Det., A. F.
Filament Voltage	1.3	1.3	1.3	1.28
Plate Voltage	95	85	95	40**
Screen Voltage	45	95		95
Plate Mils.	0.4	1.5	1.5	.03
Screen Mils.	.7	.35		1.75
Bias				6.1


Total "B" current, 15 mls. Total filament current, 146 mls.
First Edition **With 750,000 ohm voltmeter.

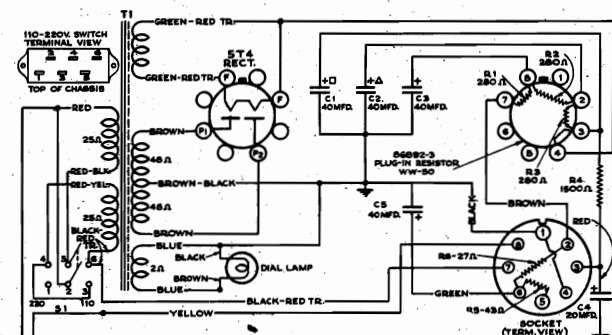

Model CV-111 Power Unit

RCA MFG. CO., INC.

MODEL 4QB4, Ch. RC440A
Schematic, Lead Dress

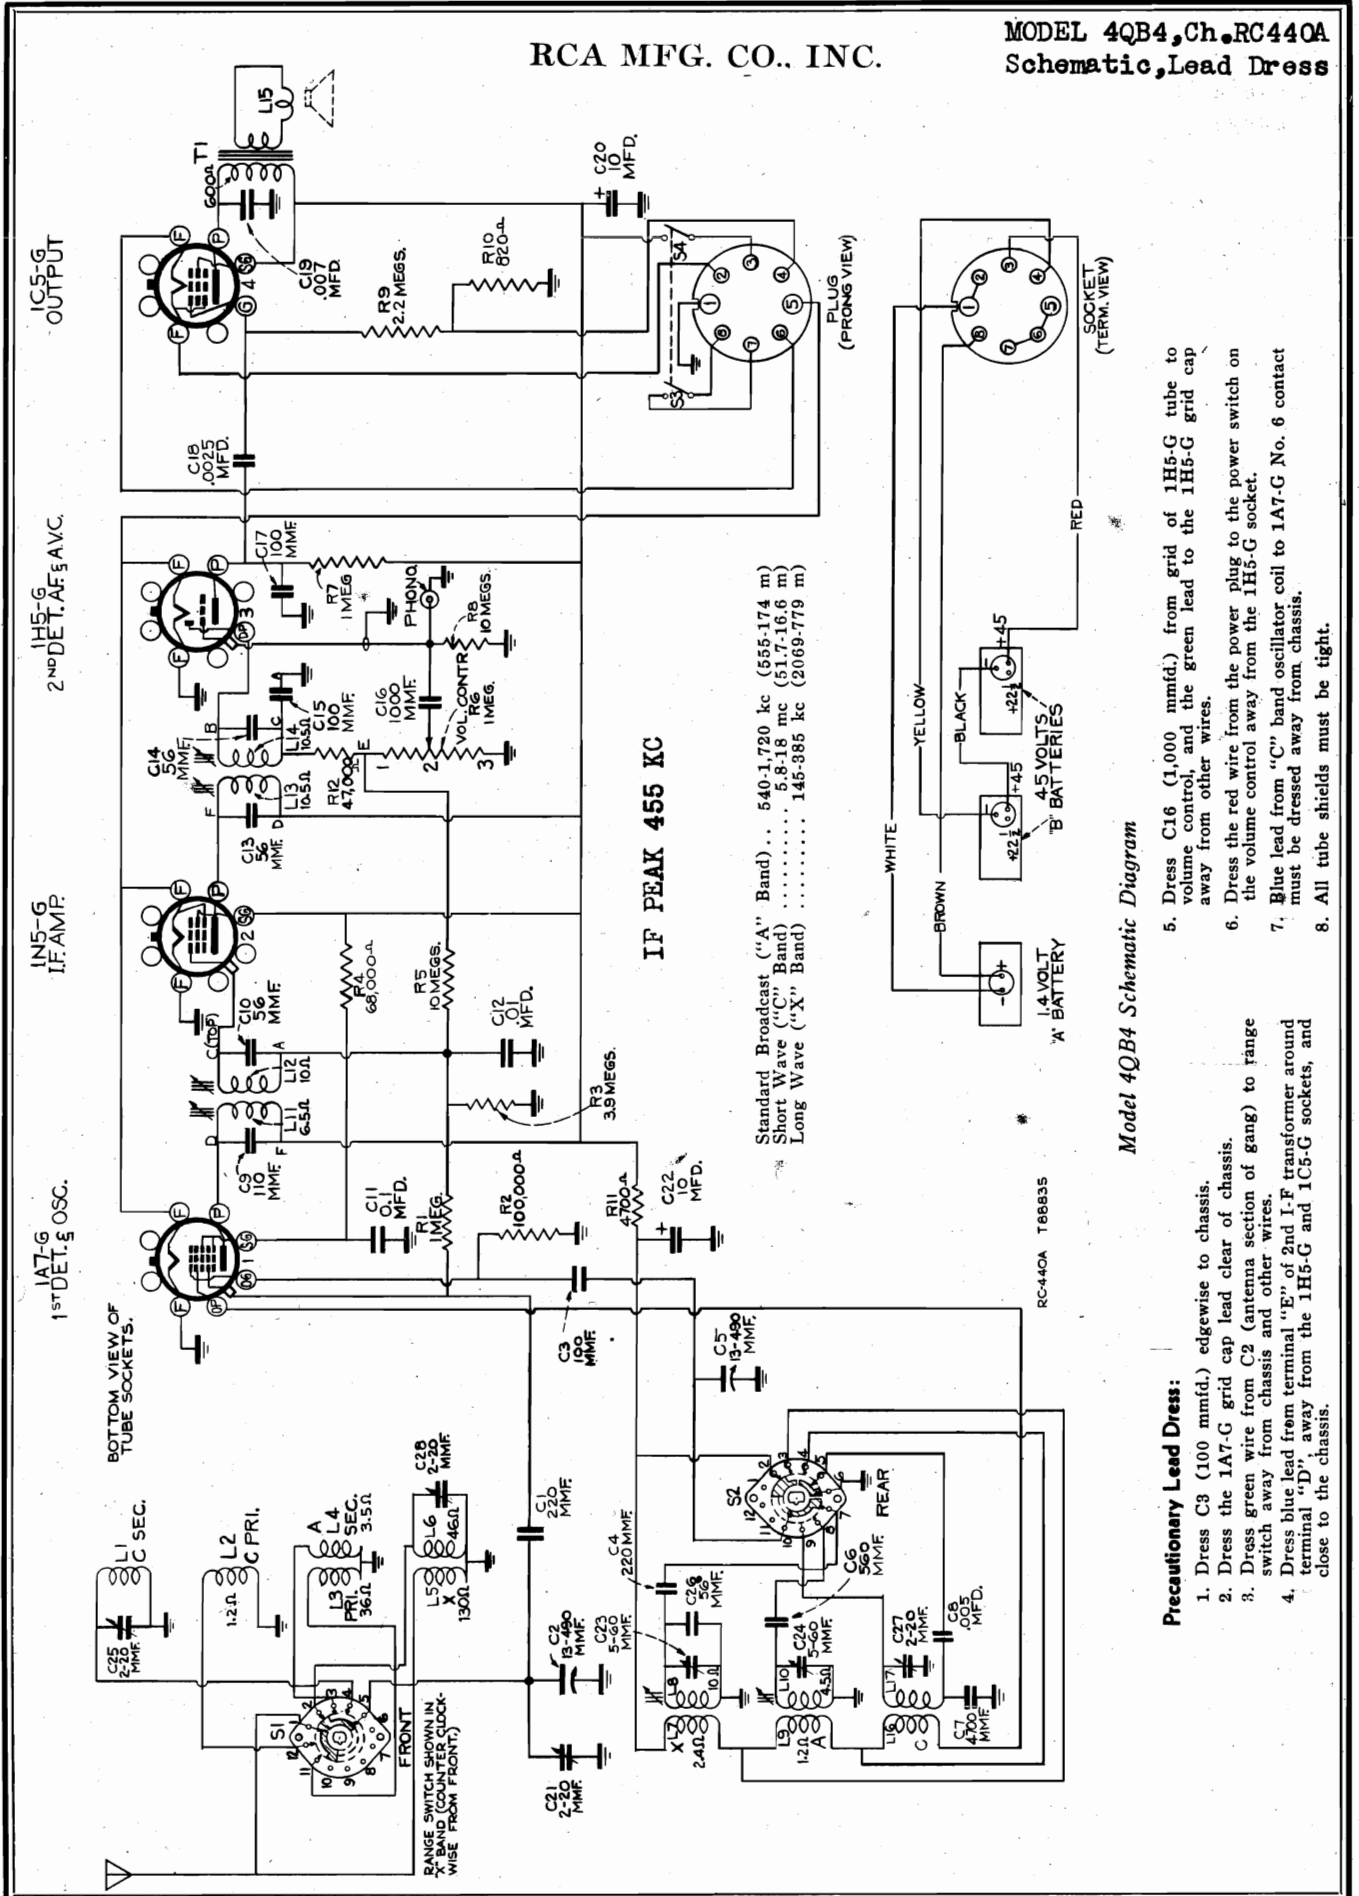

Model 4QB4 Schematic Diagram

1. Dress C3 (100 mmfd.) edgewise to chassis.
2. Dress the 1A7-G grid cap lead clear of chassis.
3. Dress green wire from C2 (antenna section of gang) to range switch away from chassis and other wires.
4. Dress blue lead from terminal "E" of 2nd I-F transformer around terminal "D", away from the 1H5-G and 1C5-G sockets, and close to the chassis.
5. Dress C16 (1,000 mmfd.) from grid of 1H5-G tube to volume control, and the green lead to the 1H5-G grid cap away from other wires.
6. Dress the red wire from the power plug to the power switch on the volume control away from the 1H5-G socket.
7. Blue lead from "C" band oscillator coil to 1A7-G No. 6 contact must be dressed away from chassis.
8. All tube shields must be tight.

Precautionary Lead Dress:


1. Dress C3 (100 mmfd.) edgewise to chassis.
2. Dress the 1A7-G grid cap lead clear of chassis.
3. Dress green wire from C2 (antenna section of gang) to range switch away from chassis and other wires.
4. Dress blue lead from terminal "E" of 2nd I-F transformer around terminal "D", away from the 1H5-G and 1C5-G sockets, and close to the chassis.

MODEL 4QB4
Alignment, Trimmers
Chassis Wiring, Socket
Voltage

RCA MFG. CO., INC.


Model 4QB4 Alignment Procedure

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	1N5-G I-F grid cap, in series with .01 mfd.	455 kc	"A" Band, Quiet Point at high-frequency end	L14 and L13 (2nd I-F Trans.)
2	1A7-G 1st-Det. grid cap, in series with .01 mfd.			L12 and L11 (1st I-F Trans.)†
3	Antenna lead, in series with 200 mmfd.	1,500 kc (200 m)	1,500 kc (152.5°) "A" Band	Preset L10 (osc.) core 5/16-in. out Peak C24 (osc.) and C21 (ant.)
4		800 kc (500 m)	800 kc (33°)	L10 (osc.)**
5		Repeat steps 3 and 4.		
6		360 kc (833 m)	360 kc (181°) "X" Band	Preset L8 (osc.) core 5/16-in. out Peak C23 (osc.) and C28 (ant.)
7		175 kc (1,710 m)	175 kc (55°) "X" Band	L8 (osc.)**
8	Repeat steps 6 and 7.			
9	Antenna lead, in series with 800 ohms	15 mc	15 mc (146°) "C" Band	C27 (osc.)* C25 (ant.)††
10	Antenna lead, in series with 200 mmfd.	1,500 kc (200 m)	1,500 kc (152.5°) "A" Band	C24 (osc.)

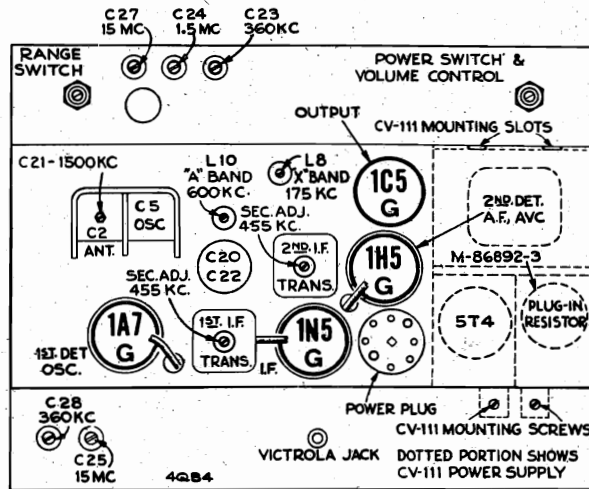

Model 4QB4 Top View

- *Use minimum capacity peak if two peaks can be obtained.
- **Rock gang slightly for peak output.
- †Do not readjust L13 or L14 when test-osc. is applied to 1A7-G grid.
- ††Use maximum capacity peak if two peaks can be obtained.

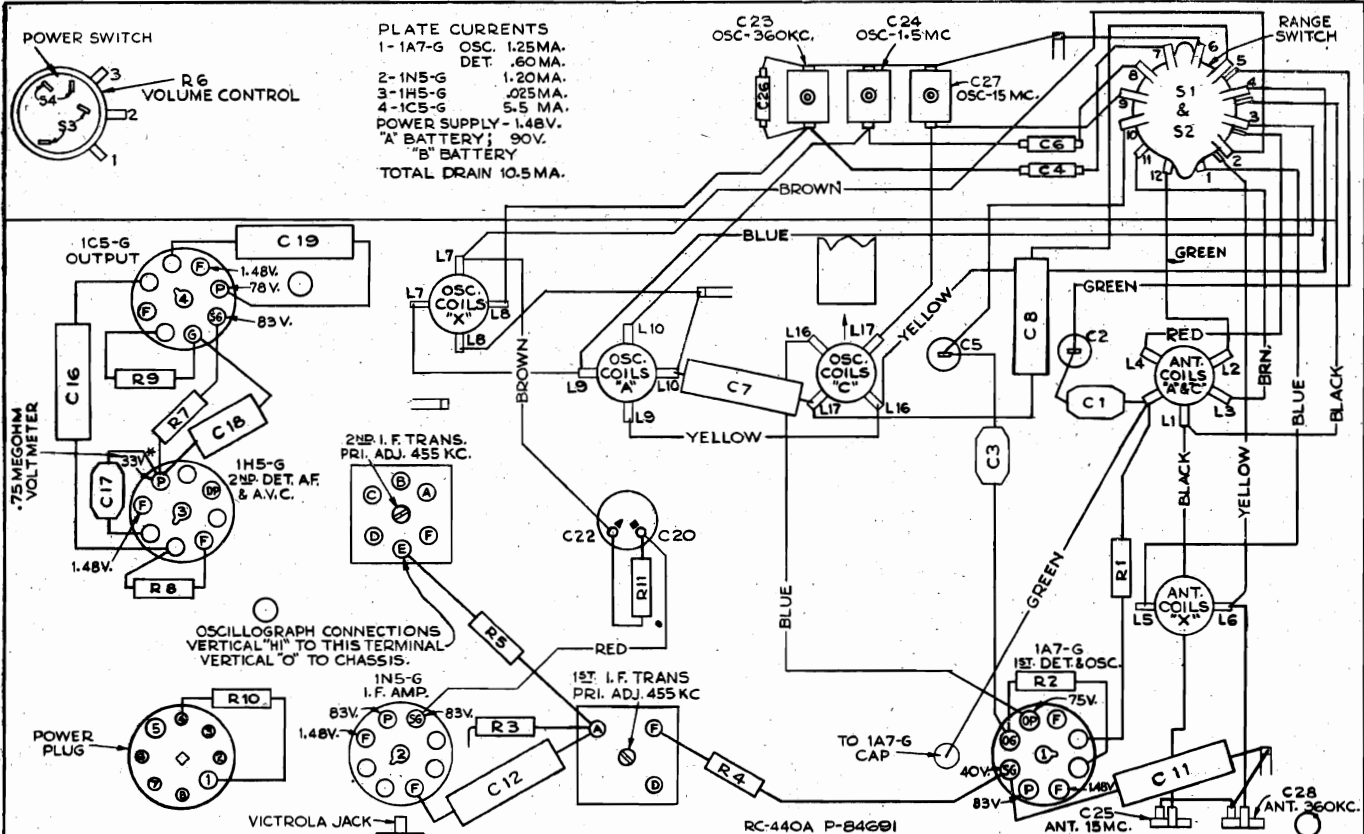


BOTTOM VIEW-REAR OF CHASSIS

Model 4QB4 R-F Wiring Diagram and Socket Voltages
 Voltages shown above are for battery operation.

Schematic
Chassis Wiring

RCA MFG. CO., INC.

MODEL 5Q1
(Formerly 95FT)

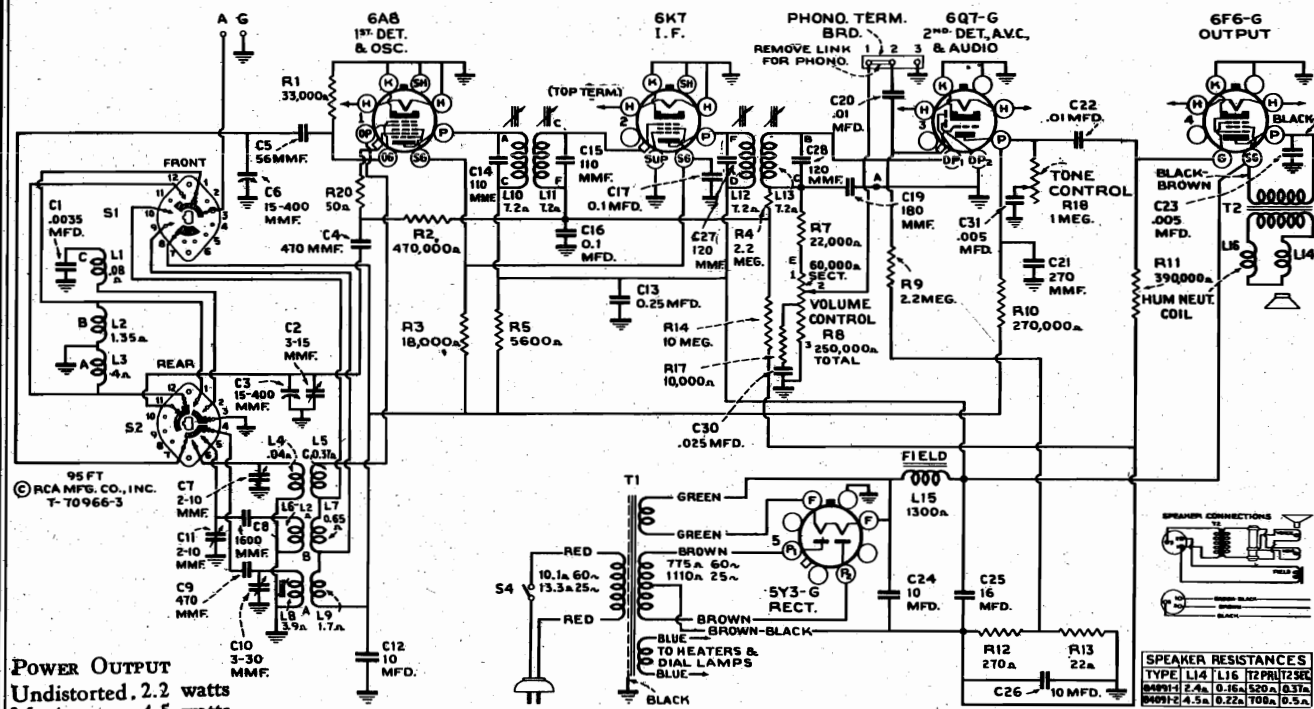

POWER OUTPUT
Undistorted 2.2 watts
Maximum . . . 4.5 watts

POWER SUPPLY RATINGS

Rating A 105-125 volts, 50-60 cycles, 75 watts.
Rating B 105-125 volts, 25-60 cycles, 75 watts.
Rating C 105-125/200-250 volts, 50-60 cycles, 75 watts.


LOUDSPEAKER 6-inch electrodynamic

Type { 84091-1 } 2.6 ohms at 400 cycles


V. C. Impedance { 84091-2 } 4.7 ohms at 400 cycles IF PEAK 455 KC
 { 84001-6 }

SPEAKER RESISTANCES

TYPE	L14	L16	T2	PH1	T250
84091-1	2.4Ω	0.16Ω	520Ω	0.37Ω	
84091-2	4.5Ω	0.22Ω	705Ω	0.5Ω	

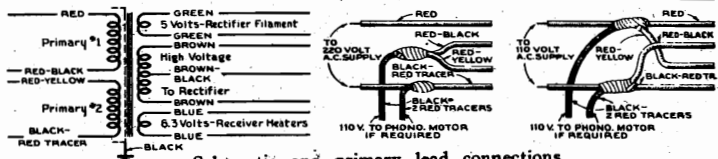

Schematic and primary lead connections for 110-220 volt power transformer (Stock No. 30607). Resistance of each primary winding, 10 ohms; High-voltage secondary winding, 386 ohms total.

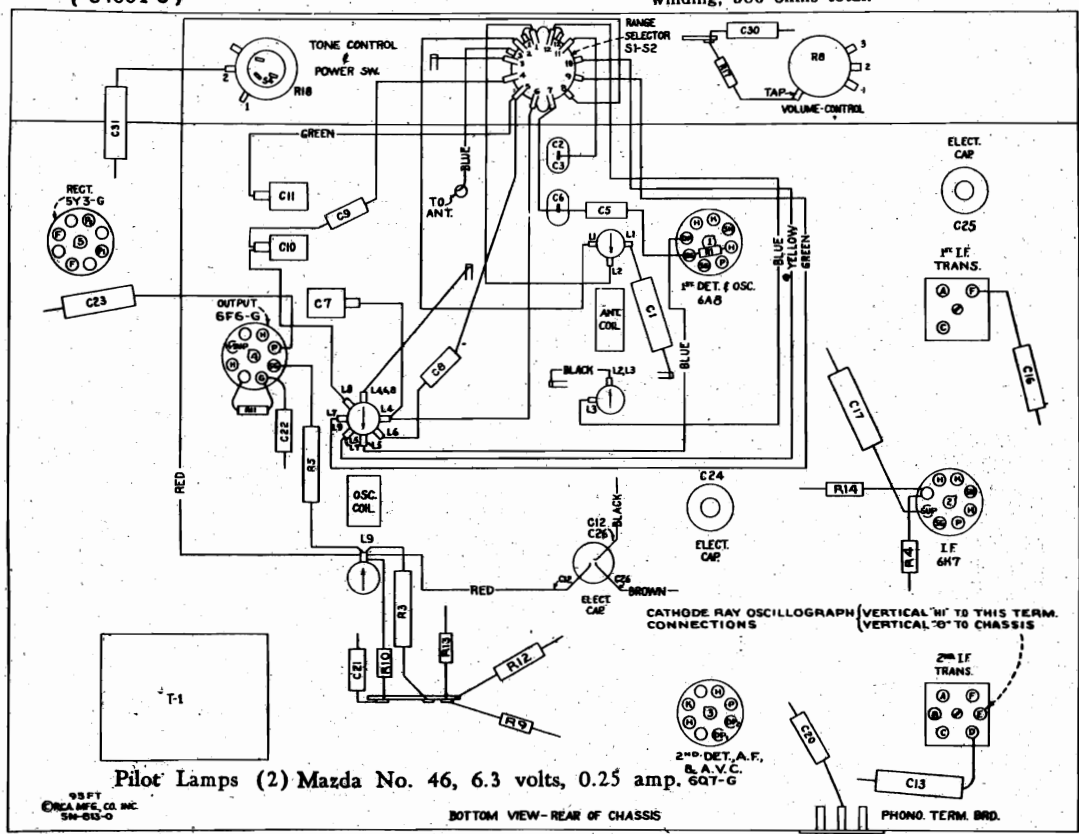

Pilot Lamps (2) Mazda No. 46, 6.3 volts, 0.25 amp.

1938
First Edition

MODEL 5Q1

Voltage, Alignment
Socket, Trimmers, Notes

RCA MFG. CO., INC.

General Description and Service Data

This receiver uses a three-band superheterodyne circuit in a table-type cabinet. Features of design include magnetecore adjusted i-f transformers and low frequency "A" oscillator tracking; automatic volume control; phonograph terminal board; aural-compensated volume control; continuously variable tone control; dustproof electrodynamic loudspeaker and an edge-illuminated, straight-line dial.

Loudspeaker.—Centering of the loudspeaker voice coil is made in the usual manner with three narrow celluloid or paper feelers after first removing the front dust cover. This may be removed by softening its cement with a light application of acetone, using care not to allow the acetone to flow into the air gap. A dust cover should be cemented in place with ambroid upon completion of adjustment.

Precautionary Lead Dress.—(1) Keep leads from C1 as short as possible. (2) Dress yellow and green leads from range selector to oscillator coil between front apron and range selector. (3) Dress blue lead from oscillator coil to oscillator plate away from other parts. Maintain original length and size of the following: (4) bus lead from antenna coil L1 to range selector and (5) lead from oscillator coil to chassis.

Phonograph Attachment.—A terminal board is provided for connecting a phonograph into the audio amplifying circuit. RCA Victor Models R-93, R-93-A, R-93-B, R-93-C, R-93-2, or R-94 Record Players should be connected as follows: Open link between terminals 1 and 2 on terminal board. Connect yellow wire in Radio-Record switch cable to terminal 1, green to terminal 2, and shield extension to terminal 3. Tape unused red and blue leads separately. Connect a 2-conductor twisted cable between the Record Player binding posts and the screw terminals on Radio-Record switch.

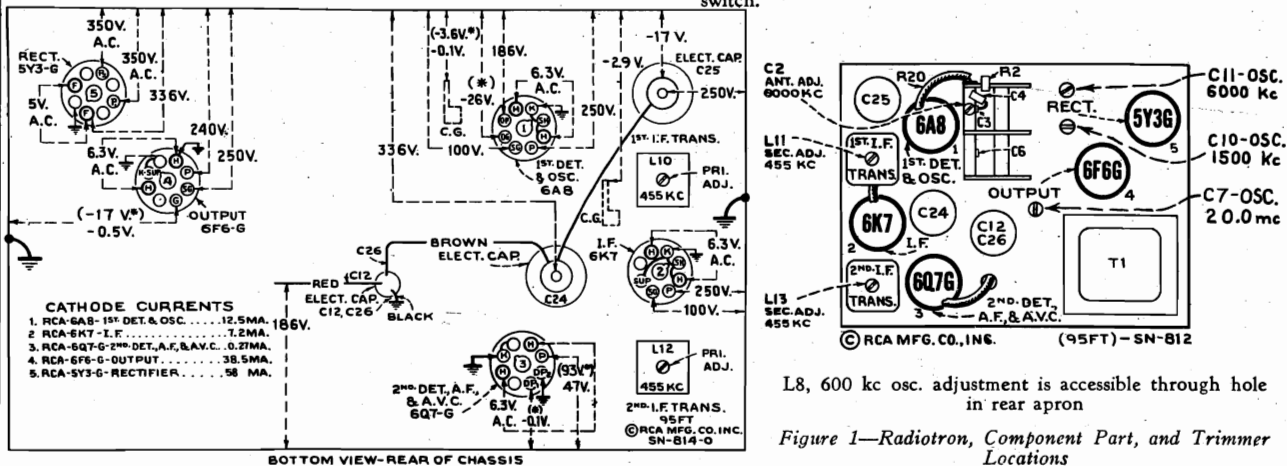


Figure 4—Radiotron Socket Voltages and Trimmer Locations

Note: Values with star (*) are operating voltages. Values not starred are actual measured voltages. Measurements made to chassis unless otherwise indicated. Measurements made with set tuned to quiet point, volume control at minimum, using 1,000-ohm-per-volt meter, having ranges of 10,

50, 250, and 500 volts. (Use nearest range above the specified measured voltage.)

Values should hold within approximately $\pm 20\%$ for 117-volt 60-cycle supply.

Alignment Procedure

With the gang tuning-condenser plates in full-mesh position, adjust the pointer to the low-frequency (end) calibration mark on the dial scale. The pointer is soldered in place on the drive cable.

Perform alignment in proper order, tabulated below, starting with No. 1 and following all operations across, then No. 2, etc. Adjustment locations are shown on figures 1 and 4.

Cathode-ray alignment is preferable; the connections to the chassis are shown on figure 3. If an output indicator is used, connect it across the loudspeaker voice-coil and advance the receiver volume control to full-volume position. Connect the "low" output terminal of the test oscillator to

the receiver "G" (ground) terminal for all alignment operations. Regulate the output of the test oscillator so that minimum signal is applied to the receiver to obtain an observable output indication. This will avoid a-v-c action.

The term "Dummy antenna" means the device which must be connected between the "high" test-oscillator output and the point of connection to the receiver in order to obtain ideal alignment. "No signal, 550-750 kc" means that the receiver should be tuned to a point between 550 and 750 kc where no signal or interference is received from a station or local (heterodyne) oscillator.

Order of Alignment	Test Oscillator			Range Selector	Receiver Dial Setting	Circuit to Adjust	Adjustment Symbols	Adjust to Obtain
	Connection to Receiver	Dummy Antenna	Frequency Setting					
1	6K7 I-F Grid Cap	.001 Mfd.	455 kc	"A" Left	No Signal 550-750 kc	2nd I-F Trans.	L12 and L13	Max. (peak)
2	6A8 Det. Grid Cap	.001 Mfd.	455 kc	"A"	No Signal 550-750 kc	1st I-F Trans.	L10 and L11	Max. (peak)
3	Ant. Term.	300 Ohms	6,000 kc	"B" Center	6,000 kc	"B" Osc.	C11	Max. (peak)*
4	Ant. Term.	300 Ohms	6,000 kc	"B"	6,000 kc	"B" Ant.	C2	Max. (peak)†
5	Ant. Term.	300 Ohms	20,000 kc	"C" Right	20,000 kc	"C" Osc.	C7	Max. (peak)‡
6	Ant. Term.	200 Mmfd.	600 kc	"A" Left	600 kc	"A" L-F Osc.	L8	Max. (peak)
7	Ant. Term.	200 Mmfd.	1,500 kc	"A"	1,500 kc	"A" H-F Osc.	C10	Max. (peak)
8	Ant. Term.	200 Mmfd.	600 kc	"A"	600 kc	"A" L-F Osc.	L8	Max. (peak)
9	Ant. Term.	200 Mmfd.	1,500 kc	"A"	1,500 kc	"A" H-F Osc.	C10	Max. (peak)

* Use minimum capacity peak if two peaks can be obtained.

† After this adjustment, check for image signal by shifting receiver dial to 5.09 mc.



‡ Use maximum capacity peak if two peaks can be obtained. After this adjustment, check for image signal by shifting receiver dial to 20.91 mc.

Note that the heterodyne oscillator tracks above the signal frequency on bands "A" and "B," and below the signal frequency on band "C."

Schematic, Voltage
Chassis Wiring

RCA MFG. CO., INC.

MODEL 5Q2
Chassis RC325C

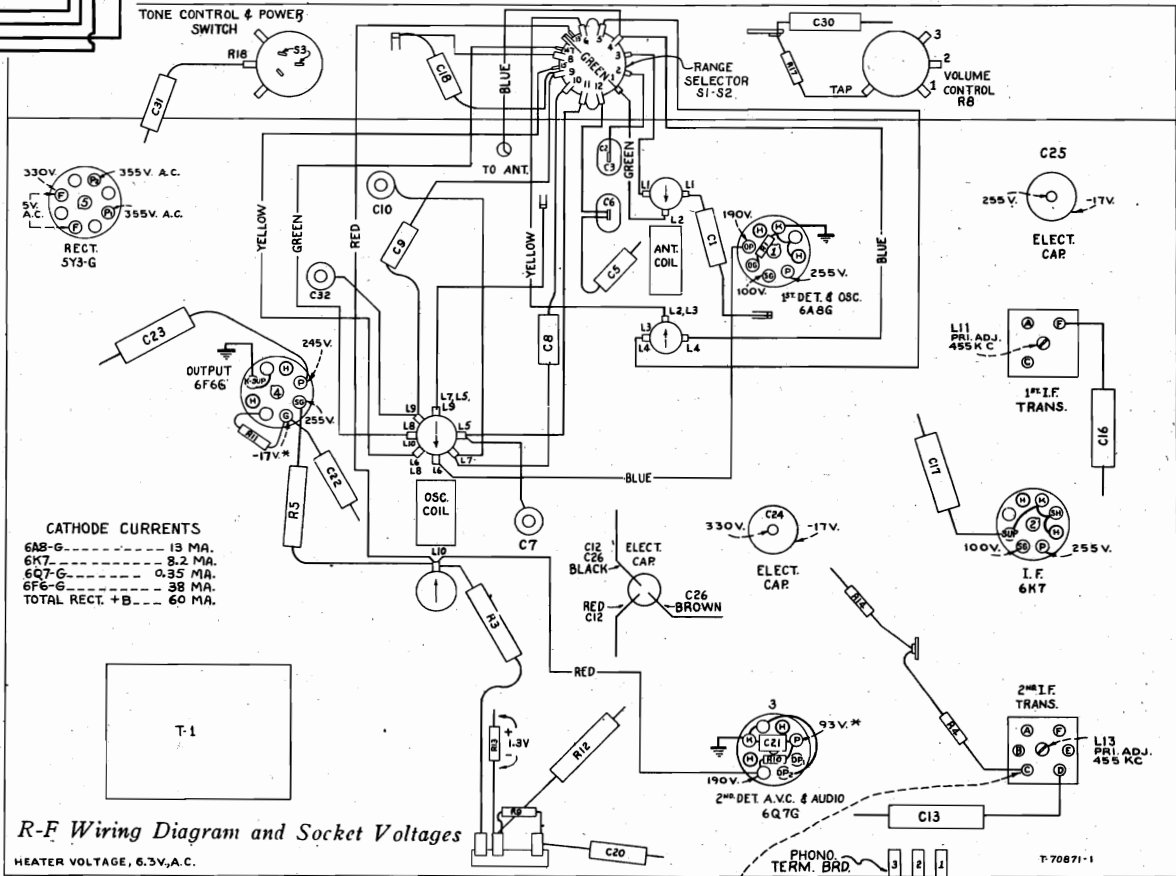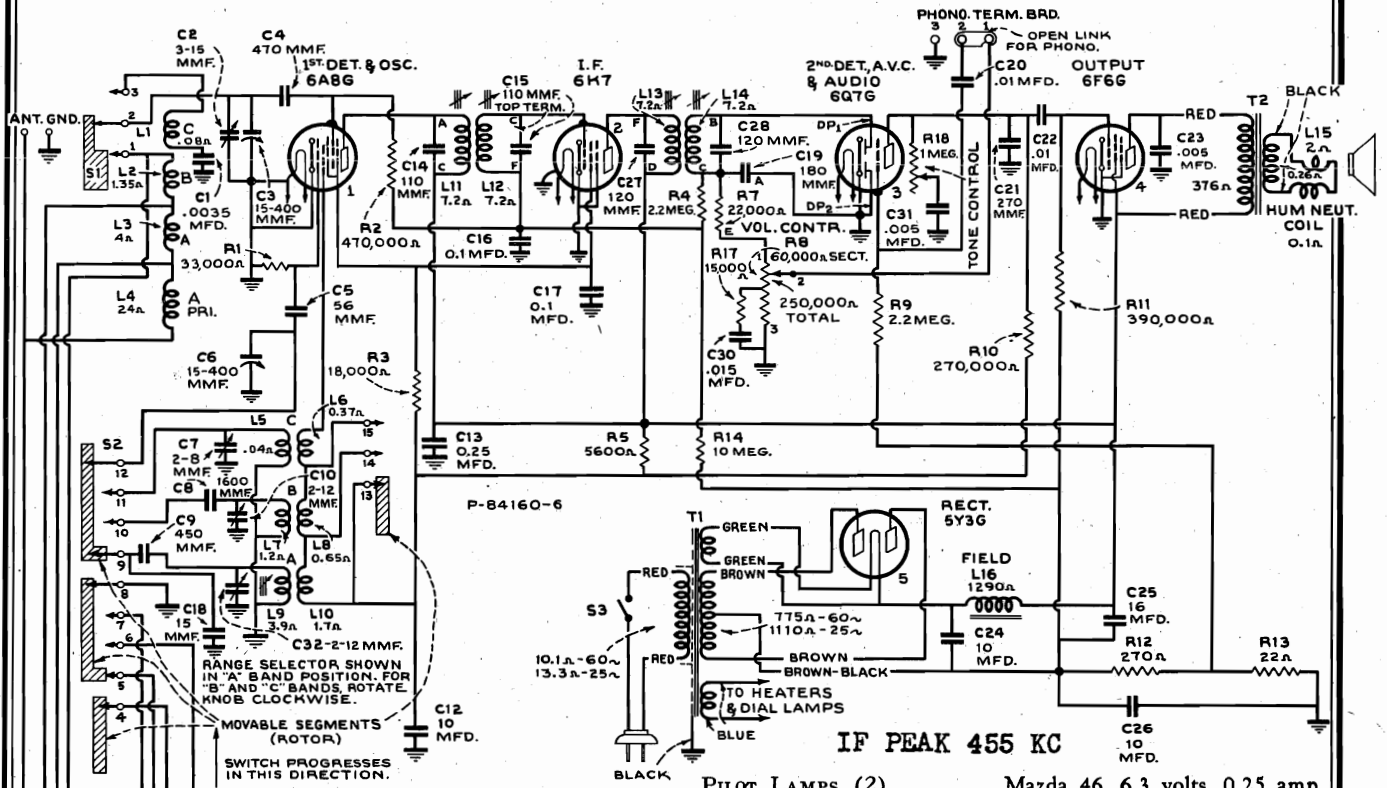

R-F Wiring Diagram and Socket Voltages
HEATER VOLTAGE, 6.3V, A.C.

BOTTOM VIEW - REAR OF CHASSIS

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within ±20% with 115-volt a.c. supply.


CATHODE RAY OSCILLOGRAPH CONNECTIONS
VERTICAL 'H' TO THIS TERM.
VERTICAL '0' TO CHASSIS

NOTE: Values with star () are operating voltages in circuits with high series resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

First Edition

MODEL 5Q2
Alignment, Socket
Trimmers, Phono, Data

RCA MFG. CO., INC.

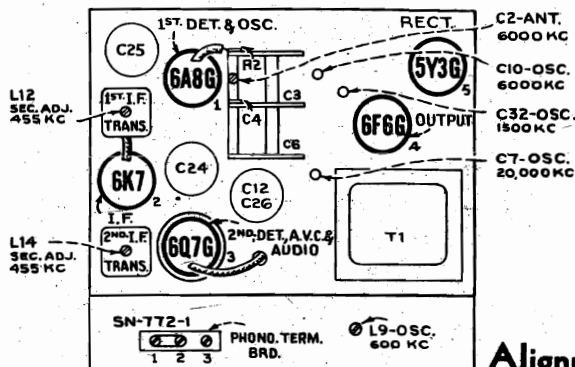

POWER OUTPUT RATING
Undistorted..... 2.5 watts
Maximum..... 4.5 watts
LOUDSPEAKER (RL-63F-1)
Type..... 8-inch Electrodynamic
V.C. Impedance..... 2.2 ohms at 400 cycles
POWER SUPPLY RATINGS
Rating A..... 105-125 volts, 50-60 cycles, 75 watts
Rating B..... 105-125 volts, 25-60 cycles, 75 watts
Rating C..... 105-125/200-250 volts, 50-60 cycles, 75 watts
FREQUENCY RANGES
"Standard Broadcast" (A)..... 540-1,720 kc (555-174 m)
"Medium Wave" (B)..... 2.3-7.0 mc (130-42.8 m)
"Short Wave" (C)..... 7.0-22.0 mc (42.8-13.6 m)
INTERMEDIATE FREQUENCY..... 455 kc

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Pre-setting Dial.—With the gang condenser in full mesh, the dial pointer should be in line with the left-hand end of the dial scales. The pointer is soldered to the drive cable.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"A" band, Quiet Point between 550-750 kc	L13 and L14 (2nd I-F Trans.)
2	6A8-G det. grid cap, in series with .01 mfd.	455 kc		L11 and L12 (1st I-F Trans.)
3	Antenna Terminal in series with 300 ohms	6 mc	6 mc "B" band	C10 (osc.) * C2 (ant.) †
4	Antenna Terminal in series with 300 ohms	20 mc	20 mc "C" band	C7 (osc.) **
5	Antenna Terminal in series with 200 mmf.	600 kc	600 kc "A" band	L9 (osc.)
6	Antenna Terminal in series with 200 mmf.	1,500 kc	1,500 kc "A" band	C32 (osc.) *
7	Repeat steps 5 and 6.			

* Use minimum capacity peak if two peaks can be obtained.

† After adjusting C2, check to determine that C10 has been adjusted to the correct peak by tuning the receiver to approximately 5.09 mc, where a weaker signal should be received.

** Use maximum capacity peak if two peaks can be obtained. Check to determine that C7 has been adjusted to the correct peak by tuning the receiver to approximately 20.91 mc, where a weaker signal should be received.

NOTE: The oscillator tracks 455 kc above the signal on "A" and "B" bands, and 455 kc below the signal on "C" band.

Miscellaneous Service Data

Loudspeaker.—To center the loudspeaker voice coil, first remove the front dust cover by applying acetone sparingly, then loosen the spider screws, insert three narrow feelers at equal distances in the gap, and tighten the spider screws. Remove the feelers, and fasten a dust cover in place with loudspeaker cement.

Victrola. The connections for this switch are as follows:


Connect the yellow lead in the switch cable to terminal No. 1.

Connect the green lead in the switch cable to terminal No. 2.


Connect the shielding of the cable to terminal No. 3.

Tape the ends of the blue and the red leads separately.

Connect the Victrola Attachment to the two clip-type connectors on the switch.

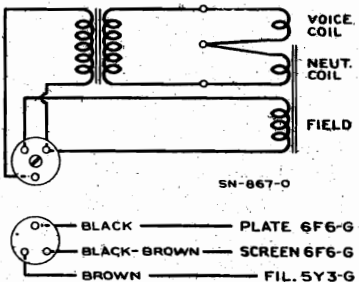



Connections and Colors of Speaker and Cable

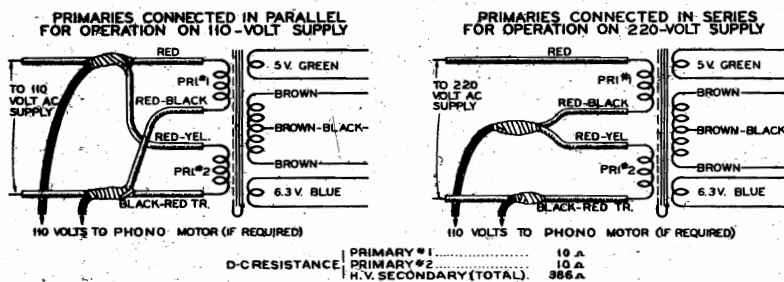

Connections of Universal Power Transformer Primary for 220 and 110 Volts

RCA MFG. CO., INC.

MODEL 5Q2X, Ch. RC325D
Schematic, Voltage
Chassis Wiring

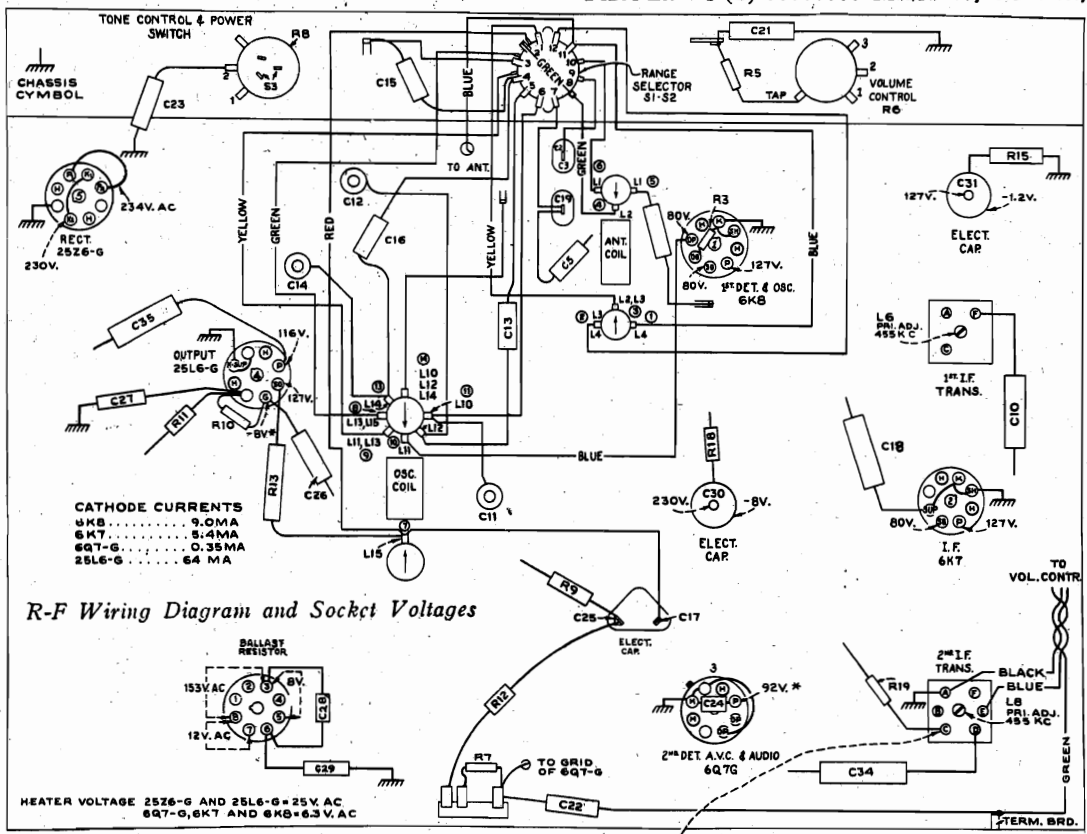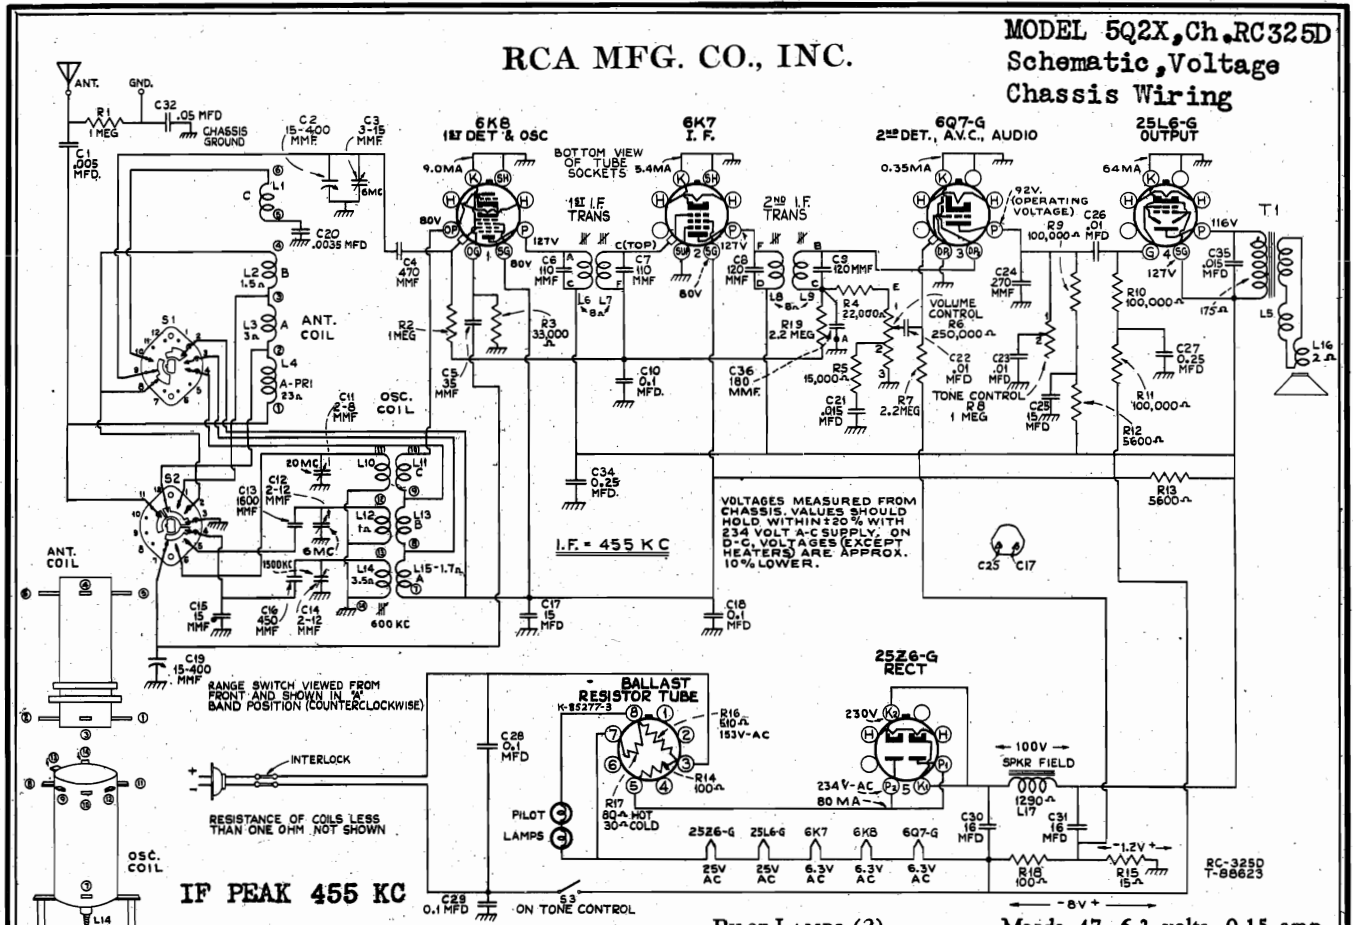

—1938— First Edition BOTTOM VIEW - REAR OF CHASSIS

CATHODE RAY OSCILLOGRAPH CONNECTIONS (VERTICAL "H" TO THIS TERM. VERTICAL "V" TO CHASSIS)

RC-325D SN-894

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within ±20% with 234-volt a-c supply.

* NOTE: Values with star (*) are operating voltages in circuits with high series resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

MODEL 5Q2X
Alignment, Socket, Trimmers
Lead Dress

RCA MFG. CO., INC.


Precautionary Lead Dress.—

1. Leads on C20 ("C" band tracking condenser) must be as short as possible.
2. Dress blue lead from oscillator plate away from all parts.
3. Dress speaker cable away from ballast tube.


4. Dress C22 (1st A.F. coupling condenser) against rear apron.

Power Supply Polarity.—

For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, a similar reversal of the plug may reduce hum.

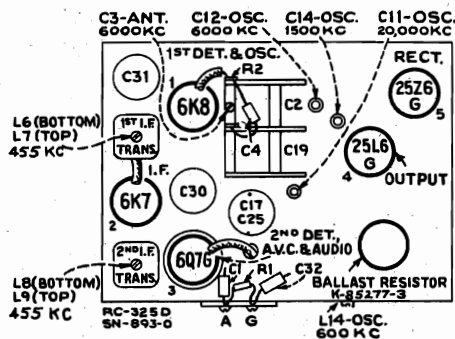

CAUTION: The chassis is connected to one side of the power supply. Avoid contact of chassis or parts to external ground when servicing.

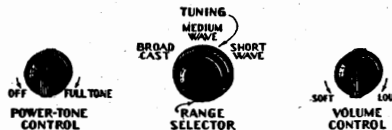

Location of Controls

POWER OUTPUT RATING

(A-C Operation)	
Undistorted.....	1.7 watts
Maximum.....	2.7 watts
(D-C Operation)	
Undistorted.....	1.4 watts
Maximum.....	2.3 watts

LOUDSPEAKER

Type..... 8-inch Electrodynamic
 V.C. Impedance..... 2.2 ohms at 400 cycles

POWER SUPPLY RATINGS

A-C Rating..... 200-250 volts 50/60 cycles, 115 watts
 D-C Rating..... 200-250 volts direct current, 105 watts

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the ground terminal, and keep the output as low as possible to avoid a-v-c action.

Pre-setting Dial.—With the gang condenser in full mesh, the dial pointer should be in line with the left-hand end of the dial scales. The pointer is soldered to the drive cable.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"A" band, Quiet Point between 550-750 kc	L8 and L9 (2nd I-F Trans.)
2	6K8 det. grid cap, in series with .01 mfd.	455 kc		L6 and L7 (1st I-F Trans.)
3	Antenna Terminal in series with 300 ohms	6 mc	"B" band	C12 (osc.)* C3 (ant.)†
4	Antenna Terminal in series with 300 ohms	20 mc	"C" band	C11 (osc.)** (Rock In)
5	Antenna Terminal in series with 200 mmf.	600 kc	"A" band	L14 (osc.)
6	Antenna Terminal in series with 200 mmf.	1,500 kc	"A" band	C14 (osc.) (Rock In)
7	Repeat steps 5 and 6.			


* Use minimum capacity peak if two peaks can be obtained.

† After adjusting C3, check to determine that C12 has been adjusted to the correct peak by tuning the receiver to approximately 5.09 mc, where a weaker signal should be received.

** Use maximum capacity peak if two peaks can be obtained. Check to determine that C11 has been adjusted to the correct peak by tuning the receiver to approximately 20.91 mc, where a weaker signal should be received.

NOTE: The oscillator tracks 455 kc above the signal on "A" and "B" bands, and 455 kc below the signal on "C" band.


Loudspeaker.—To center the loudspeaker voice coil, first remove the front dust cover, then loosen the spider screws, insert three narrow feelers at equal distances in the gap, and tighten the spider screws. Remove the feelers, and fasten a dust cover in place with loudspeaker cement.

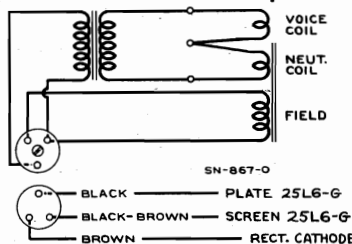


At Right—Connections and Colors of Speaker and Cable

MODEL 5Q4
Alignment, Trimmers
Socket, Lead Dress


RCA MFG. CO., INC.

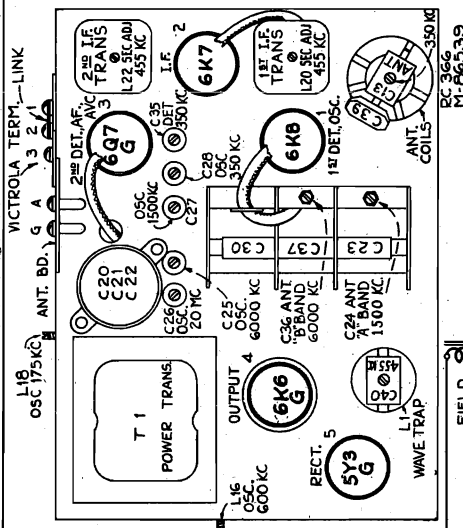


Connections of Loudspeaker and Cable

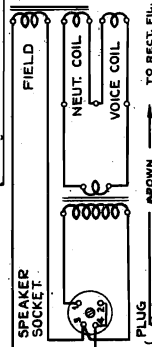

Connections of Universal Power Transformer Primary for 220 and 110 Volts

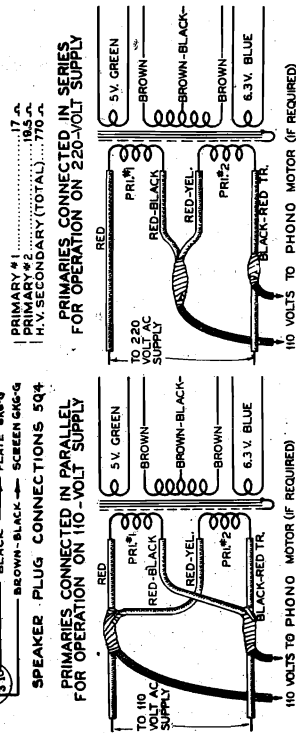

Victrola Attachment (Record Player)

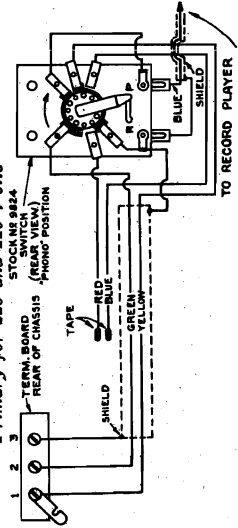

Loudspeaker.—To center the loudspeaker voice coil, first remove the front dust cover, then loosen the spider screws, insert three narrow feelers at equal distances in the gap, and tighten the spider screws. Remove the feelers, and fasten a dust cover in place with loudspeaker cement.

- 105-125 volts, 50-60 cycles, 75 watts
- 105-125 volts, 25-60 cycles, 75 watts
- 105-125/200-250 volts, 50-60 cycles, 75 watts

Alignment Procedure

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a.v.c. action.

Pre-setting Dial.—With the gang condenser in full mesh, the dial pointer should be in line with the left end of the dial scales. The pointer is soldered to the drive cable.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following to obtain maximum output
1	6K7 I-F grid cap in series with .01 mfd.	455 kc	"A" band No Station Point between 550-750 kc	L21 and L22 (2nd I-F transformer)
2	6K8 det. grid cap in series with .01 mfd.	455 kc		L19 and L20 (1st I-F transformer)
3	Antenna Terminal in series with 200 mmfd.	455 kc		C40 (wave trap) MINIMUM OUTPUT
4	Antenna Terminal in series with 300 ohms.	6 mc	6 mc "B" band	C25 (osc.) use MINIMUM capacity peak C38 (antenna) use MAXIMUM capacity peak*
5	Antenna Terminal in series with 300 ohms.	20 mc	20 mc "C" band	C26 (osc.) use MINIMUM capacity peak*
6		600 kc	600 kc "A" band	L16 (osc.) Rock Gang
7		1,500 kc	1,500 kc "A" band	C27 (oscillator) C24 (antenna)
8	Antenna Terminal in series with 200 mmfd.	600 kc	600 kc "A" band	L16 (osc.) Rock Gang
9		175 kc	175 kc "X" band	L18 (osc.) Rock Gang
10		350 kc	350 kc "X" band	C28 (oscillator) C35 (1st det.) C13 (antenna)
11		175 kc	175 kc "X" band	L18 (osc.) Rock Gang

* Check to determine that trimmer has been adjusted to correct peak by tuning receiver approximately 910 kc lower, where a weaker signal should be heard.

Note: Oscillator tracks above the signal on all bands.


- Precautionary Lead Dress.**
1. Dress blue lead from L7 to terminal 1 on range switch S2 clear of coils and other wires.
 2. Dress bus from L12 to contact 4 on range switch S2 clear of other wiring.
 3. Dress leads on C29 from gang to range switch short and clear of bus wires.
 4. Dress leads from X and A band antenna coil close to underside of chassis.

5. Dress all plus B leads to terminal board under electrolytic between the board and the rear apron.
6. Dress blue lead from 6Q7-G plate to terminal 6 on 6K6-G close to chassis and in front of terminal board (under electrolytic).
7. Dress blue lead from antenna terminal close to top of chassis and clear of gang rotor.
8. Twisted leads from volume control must be dressed clear of self-tapping screws in corners of chassis.

Victrola Attachment (Record Player)—Terminals are provided on the rear of the chassis for convenient connection to a Victrola Attachment (record player) such as the RCA R-93 and R-94 series. A stock No. 9824 switch may be used to change from radio to record player as shown at right.

RCA MFG. CO., INC.

MODELS 5Q5, 5Q5A to 5Q5E incl.
5Q55, 5Q56. Chassis RC-396
6Q7 Chassis RC-414A
Schematic, Voltage
Chassis Wiring
Lead Dress

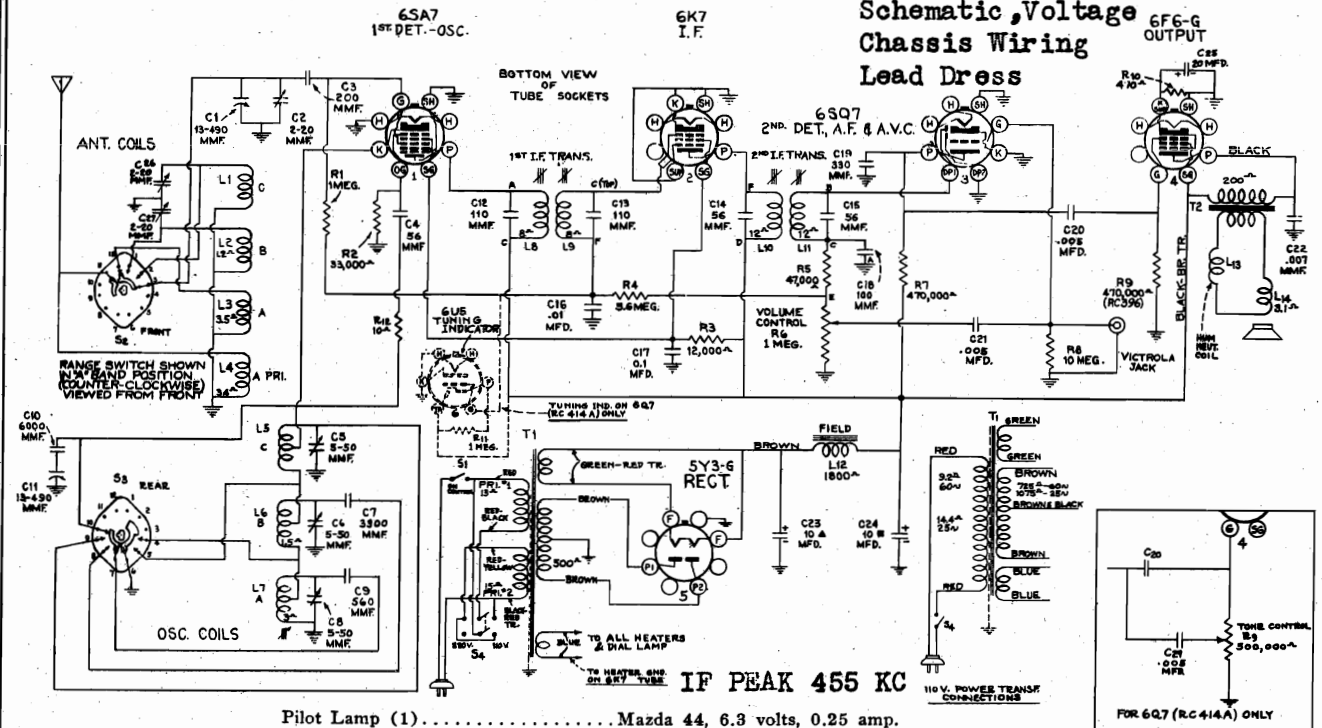


Pilot Lamp (1)..... Mazda 44, 6.3 volts, 0.25 amp.

Precautionary Lead Dress

1. Lead from 2nd I.F. (E) to volume control should be kept close to chassis.
2. R.F. coil leads should be kept short and away from coil.
3. Leads to 6,000 mmf. (C10) should be as short as possible and condenser dressed away from chassis, bearing against 10 ohm (R12) resistor.


Victrola Attachment.—A jack is provided on the rear of chassis for connection to a Victrola Attachment. The cable from the attachment should be terminated in a Stock No. 31048 plug to fit the jack.

Loudspeaker.—To center the loudspeaker voice coil, first remove the front dust cover, then loosen the screws holding the spider assembly. Insert three narrow feelers into the air gap, and tighten the spider screws. Remove the feelers and fasten a dust cover in place with loud-speaker cement.

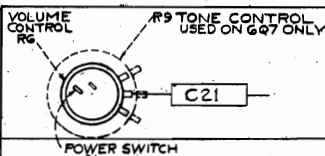

CATHODE CURRENTS

(1) 6SA7	12.42 MA.
(2) 6K7	8.30 "
(3) 6SQ7	0.78 "
(4) 6F6-G	32.00 "
TOTAL RECTIFIED "B" CURRENT - 57MA.	

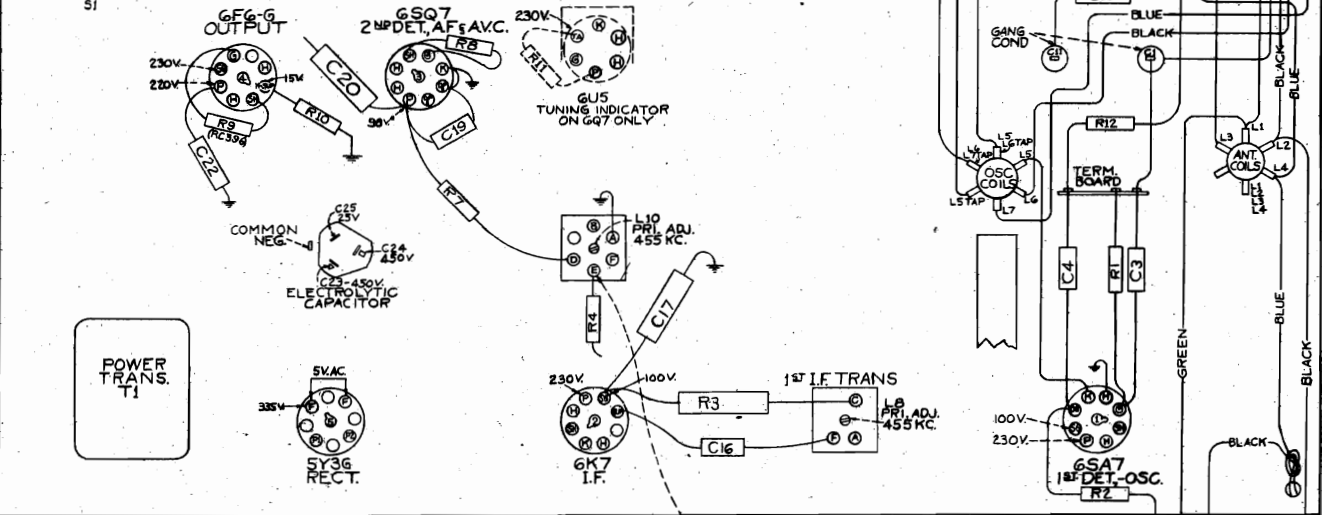

R-F Wiring Diagram and Socket Voltages



BOTTOM VIEW-REAR OF CHASSIS

ALL HEATERS @ 3VAC, EXCEPT 5Y3G, 5.0VAC.

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within $\pm 20\%$ with 117-volt a-c supply.

—1939 No. 10— ***NOTE:** Values with star (*) are operating voltages in circuits with high series resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

First Edition

MODELS 5Q5, 5Q5A to 5Q5E
5Q55, 5Q56, 6Q7

RCA MFG. CO., INC.

Alignment, Trimmers, Socket
Drive Cords, Notes

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the ground terminal, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment, therefore a calibration scale is attached to the rear of the drum which is mounted on the shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 45 degree mark on the drum scale (see "Drum Drive and Indicator Cord Assembly" drawings) must be in a horizontal position when the plates are fully meshed. The distance from the edge of the chassis to the drum must not exceed 3/8-inch. The drum is held to the shaft by means of a set screw, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "0" mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"A" Band quiet point between 550-750 kc	L10 and L11 (2nd I.F. trans.)
2	Tuning condenser stator (osc.) in series with .01 mfd. **	455 kc		L8 and L9 (1st I.F. trans.)
3	Antenna lead (blue) in series with 200 mmfd.	600 kc	600 kc (33°) "A" Band	L7†
4		1,500 kc	1,500 kc (152.4°) "A" Band	C2 (ant.) C8 (osc.)
5	Repeat steps 3 and 4			
6	Antenna lead (blue) in series with 400 ohms	20 mc	20 mc (155.4°) "C" Band	C5 (osc.) * C26 (ant.)
7		6 mc	6 mc (149°) "B" Band	C6 (osc.) * C27 (ant.)
8	Antenna lead (blue) in series with 200 mmf.	1,500 kc	1,500 kc (152.4°) "A" Band	C8 (osc.)

* Use minimum capacity peak if two peaks can be obtained.

† Rock gang condenser slightly while adjusting L7.

** Make test-oscillator connection to lug on tuning condenser stator (oscillator section) in series with .01 mfd. condenser.


Note.—Oscillator tracks 455 kc above signal on all bands.

LOUDSPEAKER

Type (5Q5, 5Q55, 5Q56) RL-78-2..... 5-inch Electrodynamic (6Q7).....RL-79-2..... 6-inch Electrodynamic
Voice-Coil Impedance..... 3.4 ohms at 400 cycles

POWER SUPPLY RATINGS

Rating A..... 105-125 volts, 50-60 cycles, 70 watts
Rating B..... 105-125 volts, 25-60 cycles, 70 watts
Rating C..... 105-125/200-250 volts, 50-60 cycles, 70 watts

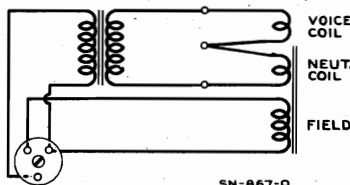


Connections and Colors of Speaker and Cable

POWER OUTPUT RATING


Undistorted..... 1.5 watts
Maximum..... 3.3 watts

FREQUENCY RANGES


"Standard Broadcast" (A)..... 540-1,720 kc (555-174 m)
"Medium Wave" (B)..... 2.3-7.0 mc (130-42.8 m)
"Short Wave" (C)..... 7.0-22.0 mc (42.8-13.6 m)
Intermediate Frequency..... 455 kc

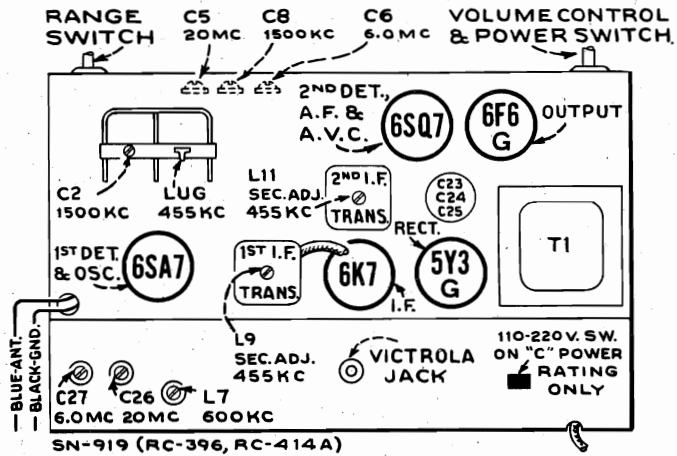


Tube and Trimmer Locations

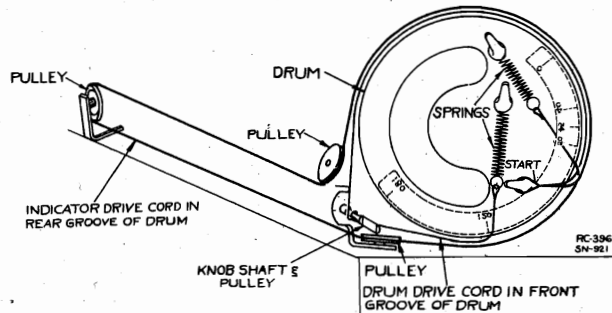

Arrangement of Drive Cords for Tuning Condenser and Dial Indicator (Models 5Q5, 5Q55 and 5Q56) Drum Shown with Gang at Maximum Capacity

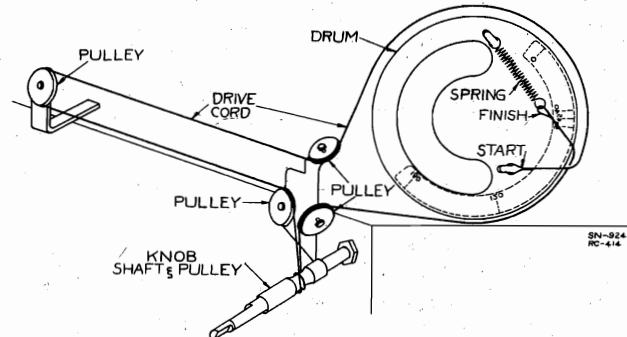

Arrangement of Drive Cord for Tuning Condenser and Dial Indicator (Model 6Q7) Drum Shown with Gang at Maximum Capacity

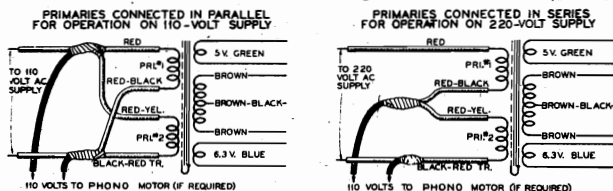


D-C Resistance } Primary No. 1..... 13 ohms
Primary No. 2..... 15 ohms
H. V. Secondary (Total)..... 500 ohms

Connections of Universal Power Transformer Primary for 220 and 110 Volts

RCA MFG. CO., INC.

MODEL 5Q6, Chassis RC-477A
Schematic, Voltage

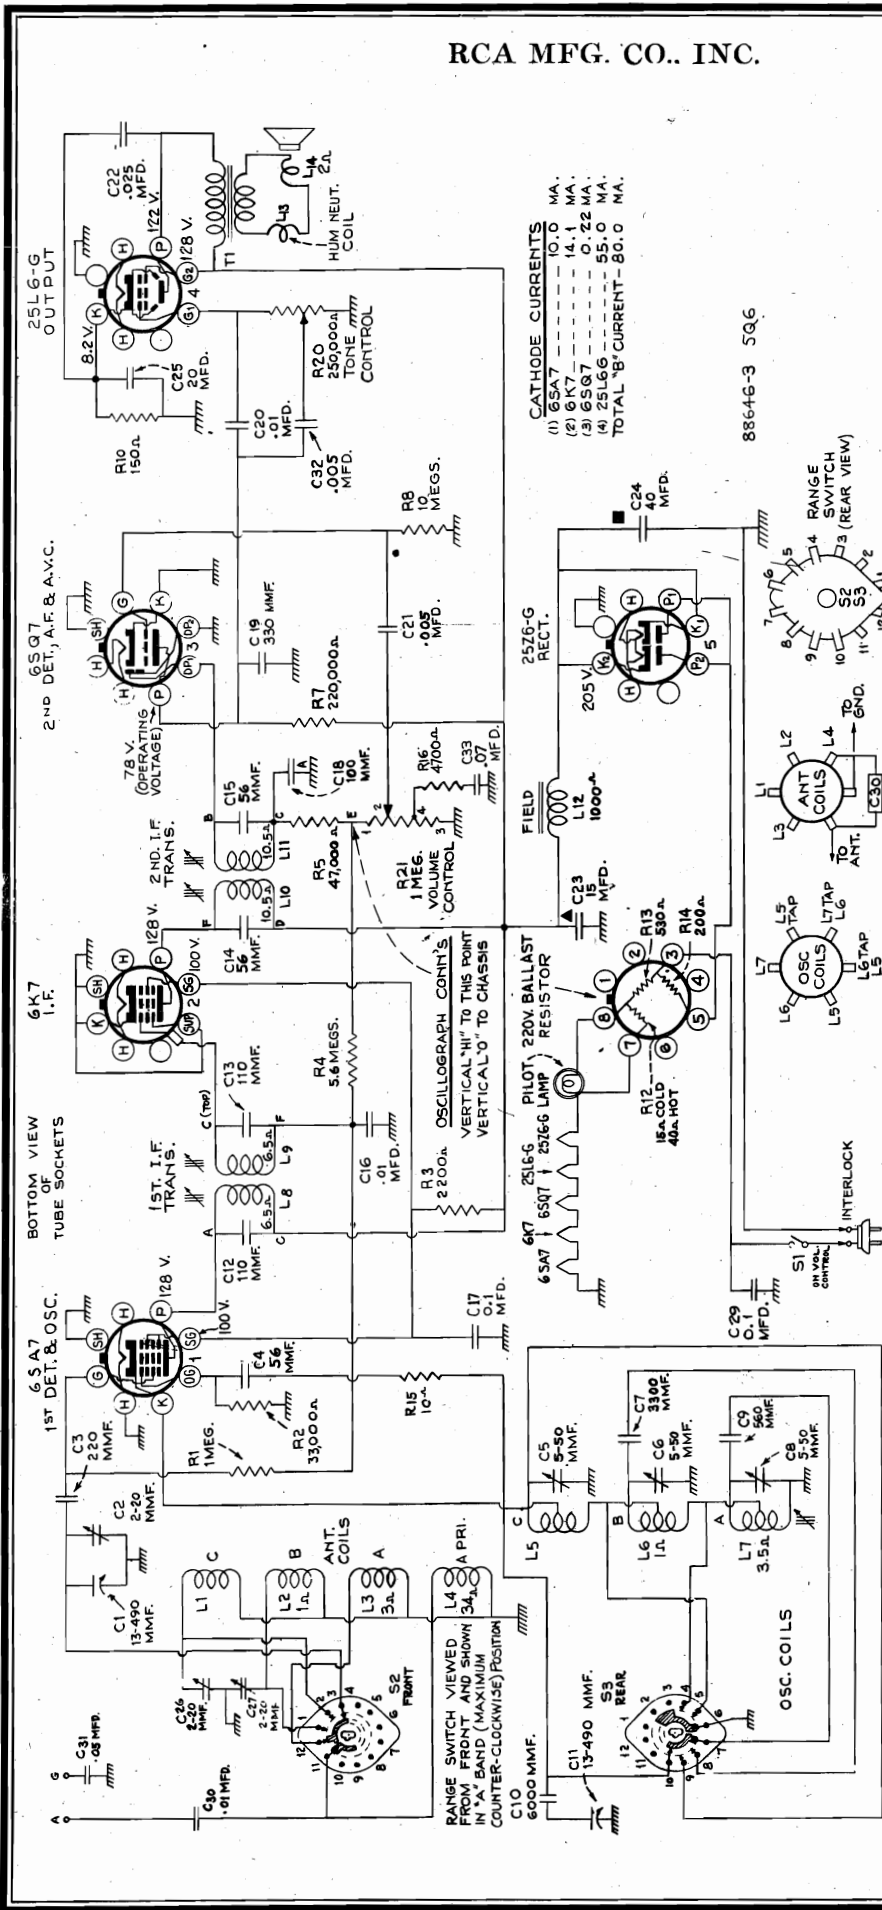

FREQUENCY RANGES
Standard - Broadcast ("A" Band) 540-1,720 kc (555-174 m)
Medium Wave ("B" Band) 2.3-7.0 mc (130-42.8 m)
Short Wave ("C" Band) 7.0-22 mc (42.8-13.6 m)

INTERMEDIATE FREQUENCY 455 kc

General Description

Model 5Q6 is a three-band, table-loudspeaker, high-frequency tone control complement type superheterodyne receiver housed in a plastic cabinet. It is designed for operation on 210-250 volts, 50-60 cycles net. AC, or 210-250 volts DC.

Features of design include: New type single-ended tubes (6SA7 and 6SQ7); magnetite core I-F transformers; magnetic core oscillator adjustment for "A" band; automatic volume control; bass compensation; electrodynamic hum.

POWER OUTPUT RATING
(210-250 Volt Operation)
Undistorted 1.5 watts
Maximum 2.7 watts

LOUDSPEAKER (84557-2)
Type 5-inch
V. C. Impedance 2.2 ohms at 400 cycles

POWER SUPPLY RATINGS
210-250 volts, 50-60 cycles 125 watts
210-250 volts, direct current 125 watts

First Edition
1939

MODEL 5Q6, Chassis RC-477A
Alignment, Trimmers, Socket
Drive Cord, Notes

RCA MFG. CO., INC.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver ground lead (black), and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 135° mark on the drum scale must be vertical, and directly under the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of a set screw, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the 0° mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the

530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.




Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"A" Band quiet point between 550-750 kc	L10 and L11 (2nd I.F. trans.)
2	Tuning condenser stator (osc.) in series with .01 mfd. **	455 kc		L8 and L9 (1st I.F. trans.)
3	Antenna lead in series with 200 mmfd.	600 kc	600 kc (33°) "A" Band	L7†
4		1,500 kc	1,500 kc (152.4°) "A" Band	C2 (ant.) C8 (osc.)
5	Repeat steps 3 and 4			
6	Antenna lead in series with 400 ohms	20 mc	20 mc (155.4°) "C" Band	C5 (osc.)* C26 (ant.)
7		6 mc	6 mc (148°) "B" Band	C6 (osc.)* C27 (ant.)
8	Antenna lead in series with 200 mmf.	1,500 kc	1,500 kc (152.4°) "A" Band	C8 (osc.)

* Use minimum capacity peak if two peaks can be obtained.


† Rock gang condenser slightly while adjusting L7.

** Make test-oscillator connection to lug on tuning condenser stator (oscillator section) in series with .01 mfd. condenser.

Note.—Oscillator tracks 455 kc above signal on all bands.

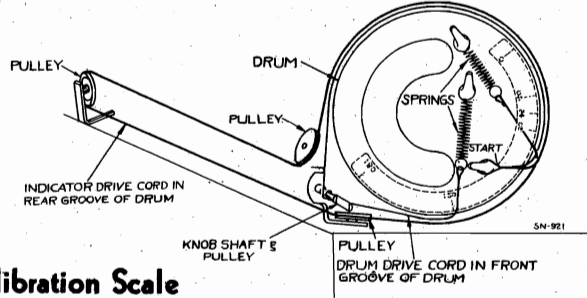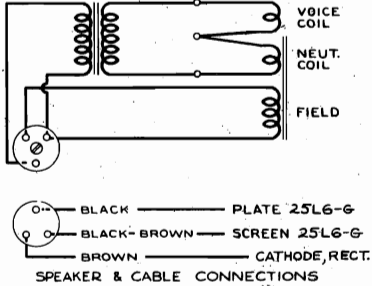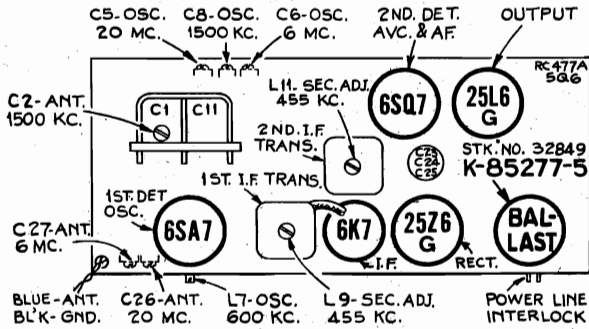

Calibration Scale

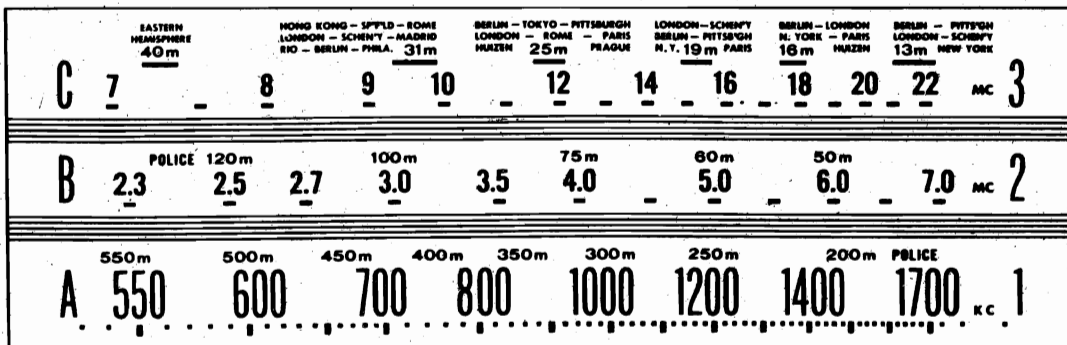


Reduced Reproduction of Receiver Dial, and Corresponding 0-180° Calibration Scales

The corresponding position of the dial indicator for any setting of the calibration scale can be determined by drawing a line from this point on the bottom calibration scale to the same point on the top calibration scale. For example: 33° on the calibration scale corresponds to approximately 7.9 mc on "C" band, and 600 kc on "A" band, etc. Read instructions under "Alignment Procedure."

Chassis Wiring, Lead Dress

RCA MFG. CO. INC.

MODEL 5Q8, Chassis RC-396B
Schematic, Voltage

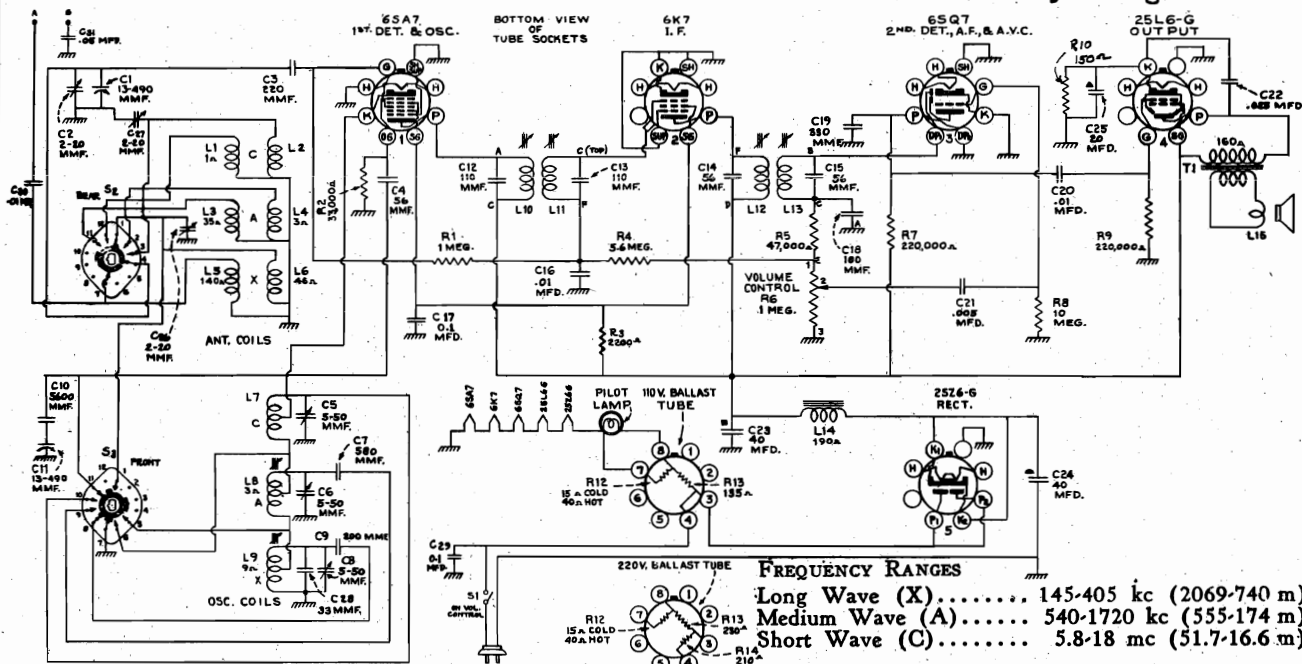


- PILOT LAMP..... Mazda No. 47, 6.3 volts, 0.15 amp.
- POWER OUTPUT RATING (210-250 Volt Operation)
 - Undistorted..... 1.5 watts
 - Maximum..... 2.7 watts
- (105-125 Volt Operation)
 - Undistorted..... 1.7 watts
 - Maximum..... 2.9 watts

- (5) RCA-25Z6-G..... Rectifier
- Ballast Tubes..... RCA Stock No. 32544 for 105-125 volt operation; RCA Stock No. 32850 for 210-250 volt operation.
- LOUDSPEAKER .
 - Type..... 5-inch
 - V. C. Impedance..... 3.0 ohms at 400 cycles
- POWER SUPPLY RATINGS
 - 105-125 volts, AC-DC..... 65 watts
 - 210-250 volts, AC-DC..... 125 watts

Precautionary Lead Dress:

1. Lead from 2nd I-F transformer to volume control should be kept close to the chassis and dressed against front apron.
2. C-10 should be dressed away from the antenna section of the variable condenser (C-1).

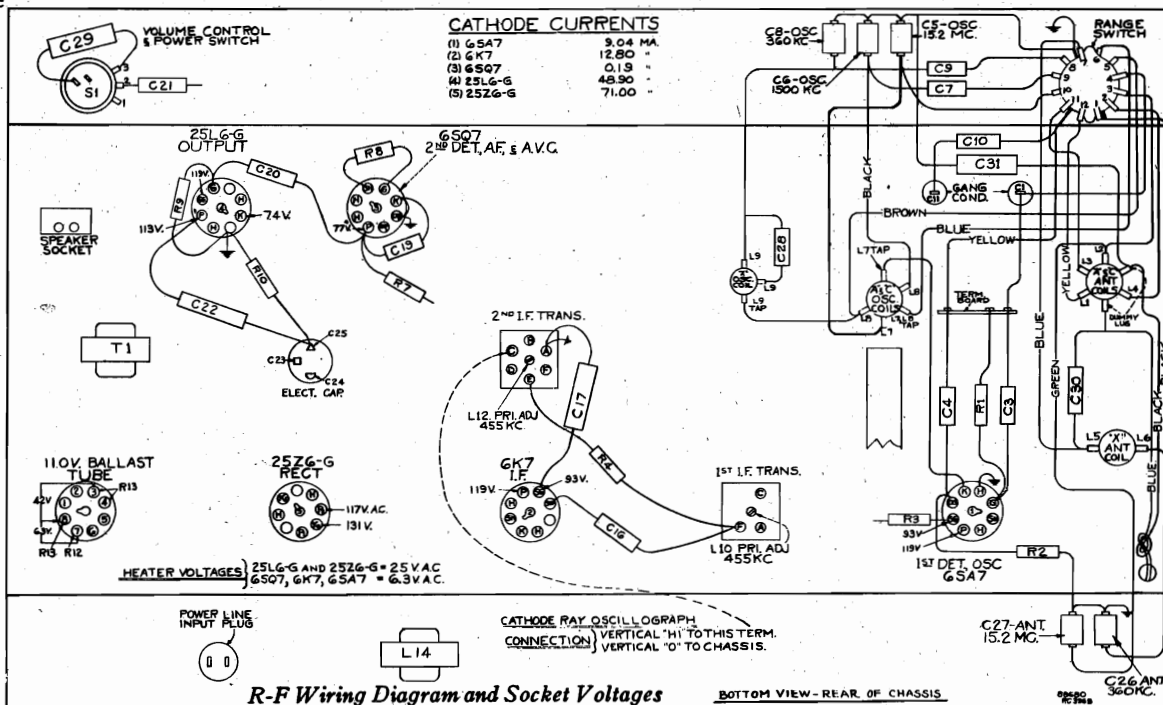


Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within $\pm 20\%$ with 117-volt a.c. supply.

* NOTE: Values with star (*) are operating voltages in circuits with high series resistance. The actual measured voltages will be lower, depending on the voltmeter loading.


First Edition — 1939 —

MODEL 5Q8, Chassis RC-396B
 Alignment, Trimmers
 Drive Cord, Socket

RCA MFG. CO., INC.

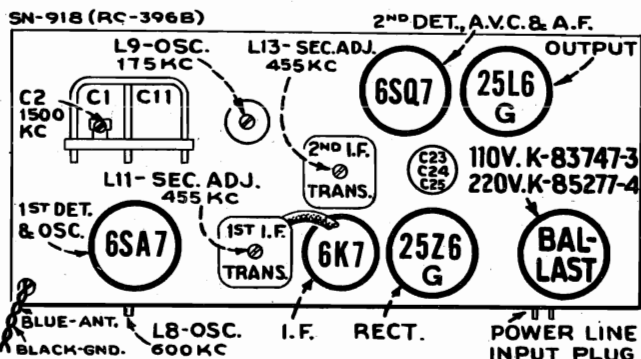

Tube and Trimmer Locations

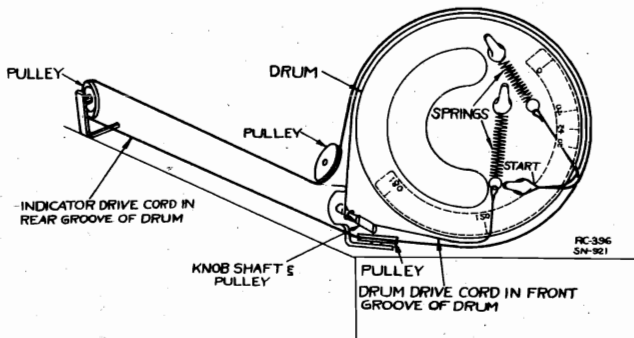

Arrangement of Drive Cords for Tuning Condenser and Dial Indicator

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees.

The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 135° mark on the drum scale must be vertical, and directly under the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of one set screw, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the 0° mark on the calibration scale when the plates are fully meshed.



Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap in series with .01 mfd.	455 kc	"A" Band Quiet Point between 550-750 kc	L12 and L13 (2nd I-F Trans.)
2	6SA7 det. grid in series with .01 mfd.	455 kc		L10 and L11 (1st I-F Trans.)
3	Ant. terminal in series with 200 mmf.	1,500 kc	1,500 kc (152.4°) "A" Band	C6 (osc.) C2 (ant.)
4	Ant. terminal in series with 200 mmf.	600 kc	600 kc (33°) "A" Band	L8 (osc.)
5	Repeat steps 3 and 4			
6	Ant. terminal in series with 200 mmf.	360 kc	360 kc (151.5°) "X" Band	C8 (osc.) C26 (ant.)
7	Ant. terminal in series with 200 mmf.	175 kc	175 kc (53.3°) "X" Band	L9 (osc.)
8	Repeat steps 6 and 7			
9	Ant. terminal in series with 300 ohms	15.2 mc	15.2 mc (147.2°) "C" Band	C5 (osc.)* C27 (ant.)
10	Ant. terminal in series with 200 mmf.	360 kc	360 kc (151.5°) "X" Band	C8 (osc.)
11	Ant. terminal in series with 200 mmf.	1,500 kc	1,500 kc (152.4°) "A" Band	C6 (osc.)

*Use minimum capacity peak if two can be obtained. Check to determine that C5 is adjusted to correct peak by tuning receiver to approximately 14.29 mc where a weaker signal should be received.

NOTE: Oscillator tracks above signal on all bands.

RCA MFG. CO. INC.

MODEL 6Q1, Chassis RC-441
Schematic

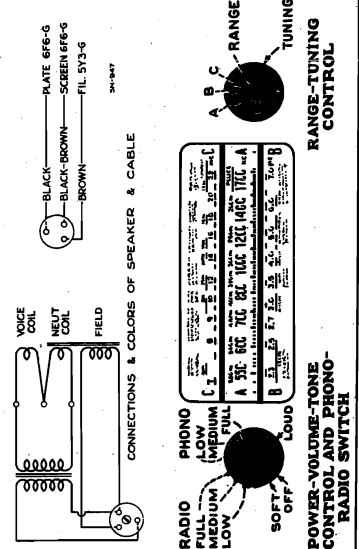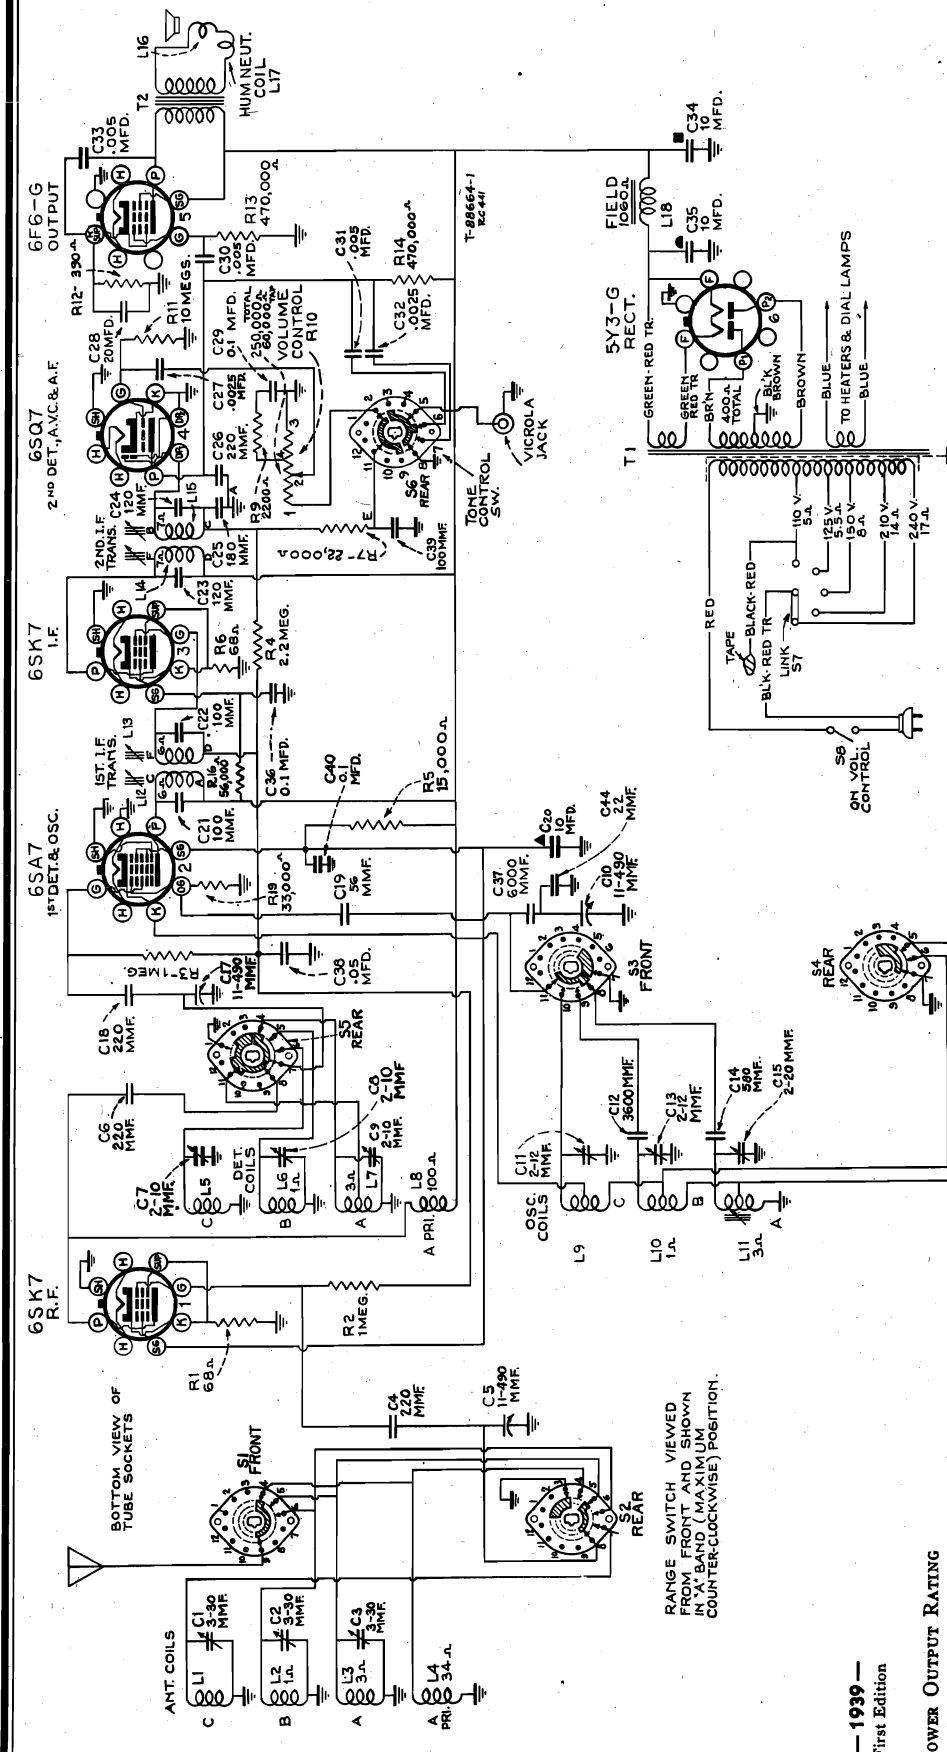


- TUBE COMPLEMENT**
- (1) RCA-6SK7..... R-F Amplifier
 - (2) RCA-6SA7..... 1st Detector-Oscillator
 - (3) RCA-6SK7..... I-F Amplifier
 - (4) RCA-6SQ7..... 2nd Detector, A.V.C., and A-F Amplifier
 - (5) RCA-6F6-G..... Output Rectifier
 - (6) RCA-5Y3-G..... 5Y3-G
- PILOT LAMPS (2)..... Mazda No. 44, 6.3 volts, 0.25 amp.**

- POWER OUTPUT RATING**
- Undistorted..... 2.5 watts
 - Maximum..... 4.5 watts
- LOUDSPEAKER (RL-79A-2)**
- Type..... 6-inch electrodynamic
 - V.C. Impedance..... 3.4 ohms at 400 cycles
- POWER SUPPLY RATINGS**
- Rating A..... 105-125 volts, 50-60 cycles, 75 watts
 - Rating B..... 105-125 volts, 25-60 cycles, 75 watts
 - Rating C..... 105-130, 140-160, 200-230 volts, 40-60 cycles, 75 watts
- FREQUENCY RANGES**
- Standard Broadcast ("A" Band) 540-1,720 kc (555-174 m)
 - Medium Wave ("B" Band)..... 2.3-7.0 mc (130-42.8 m)
 - Short Wave ("C" Band)..... 7.0-22.0 mc (42.8-13.6 m)
- INTERMEDIATE FREQUENCY..... 455 kc**

— 1939 —
First Edition

MODEL 6Q1, Chassis RC-441
Chassis Wiring, Voltage
Lead Dress

RCA MFG. CO. INC.

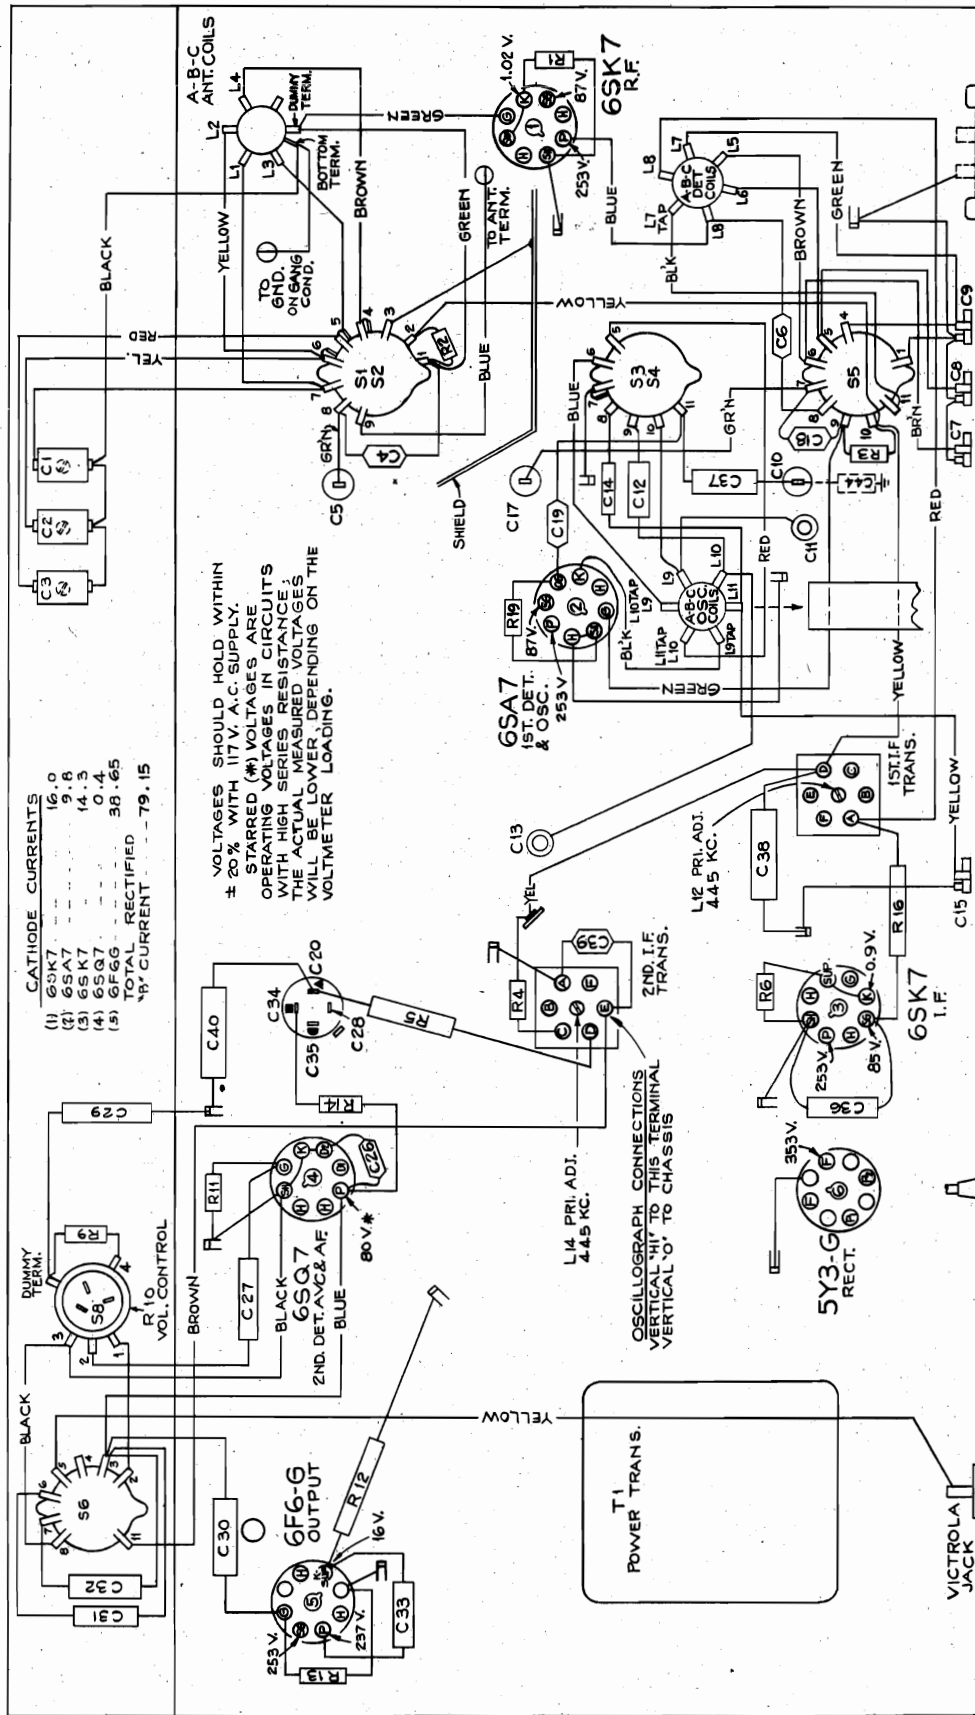

CATHODE CURRENTS

(1) 6SK7	16.0
(2) 6SA7	9.8
(3) 6SK7	14.3
(4) 6F6-G	0.14
(5) TOTAL RECTIFIED	38.165
1/2" CURRENT	79.15

VOLTAGES SHOULD HOLD WITHIN ± 20% WITH 117 V. A.C. SUPPLY. STARRING (*) VOLTAGES ARE OPERATING VOLTAGES IN CIRCUITS WITH HIGH SERIES RESISTANCE. THE ACTUAL MEASURED VOLTAGES WILL BE LOWER, DEPENDING ON THE VOLT-METER LOADING.

OSCILLOGRAPH CONNECTIONS VERTICAL "H" TO THIS TERMINAL VERTICAL "O" TO CHASSIS

6Q1 (RC 441) T-88638
BOTTOM VIEW - REAR OF CHASSIS
R-F WIRING AND SOCKET VOLTAGES

Precautionary Lead Dress:

1. Dress yellow lead from antenna coil to first section of range switch away from adjoining wires.
2. Dress green lead from middle section of gang and green lead from 6SA7 to the rear section of the range switch. away from chassis, ground leads, other wires and capacitors.
3. Dress brown lead, from detector coil to rear section of the

range switch away from the detector coil; loop brown lead toward rear apron.

4. Dress black lead from 2nd I.F. transformer "B" to 6SQ7 socket against chassis.
5. Twist power leads together, and dress away from 6SQ7 socket.
6. Dress blue lead from 6SK7 (R-F) socket to detector coil

7. Dress black lead from antenna trimmer (C1) to antenna coil away from range switch link action.
8. Dress black speaker lead around output socket toward power transformer, against base.
9. Keep green lead of 6SK7 R-F grid circuit away from blue antenna lead.

RCA MFG. CO., INC.

MODEL 6Q1, Chassis RC-441
Alignment, Trimmers, Socket
Drive Cord and Controls

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscilloscope are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.


Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improve a pointer for the calibration scale by fastening a piece of wire to the gang-

condenser frame, and bend the wire so that it points to the 180° mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed.


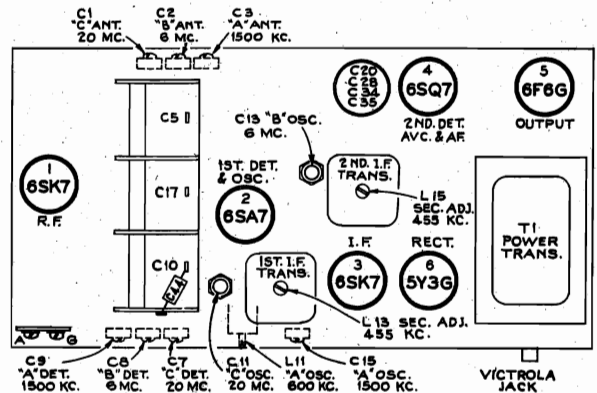


Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	6SK7 I-F grid in series with .01 mfd.	455 kc	"A" Band Quiet point between 550-750 kc	L14 and L15 (2nd I-F trans.)
2	6SA7 grid in series with .01 mfd.			L12 and L13 (1st I-F trans.)
3	Ant. terminal in series with 200 mmfd.	600 kc (148°)	"A" Band	L11 (osc.) Rock gang
4		1,500 kc (28°)	"A" Band	C15 (osc.) C9 (det.) C3 (ant.)
5	Repeat steps 3 and 4.			
6	Ant. terminal in series with 300 ohms	6 mc	"B" Band (31°)	C13 (osc.)* C8 (det.) C2 (ant.)
7		20 mc	"C" Band (23°)	C11 (osc.)** C7 (det.) C1 (ant.)

* Use minimum capacity peak if two can be obtained. Check to determine that C13 has been adjusted to the correct peak by tuning receiver to approximately 5.09 mc where a weaker signal should be received.

** Use minimum capacity peak if two can be obtained. Check to determine that C11 has been adjusted to the correct peak by tuning the receiver to approximately 19.09 mc where a weaker signal should be received.

Note.—Oscillator tracks above signal on all bands.

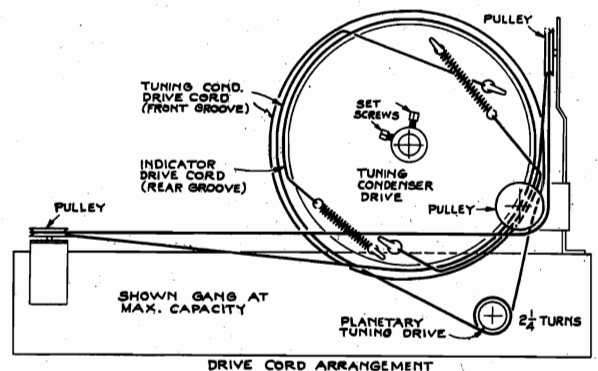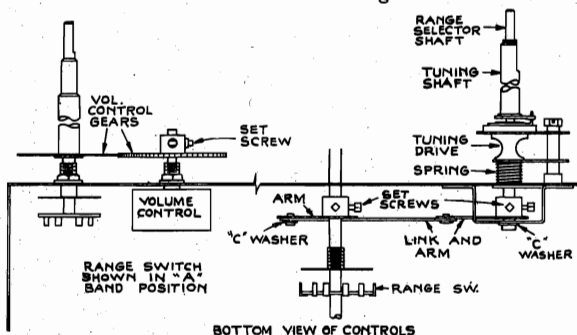

MODEL 6Q4, Chassis RC-441A
Alignment, Trimmers
Drive Cord, Socket

RCA MFG. CO., INC.
Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.


Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the 180° mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed.

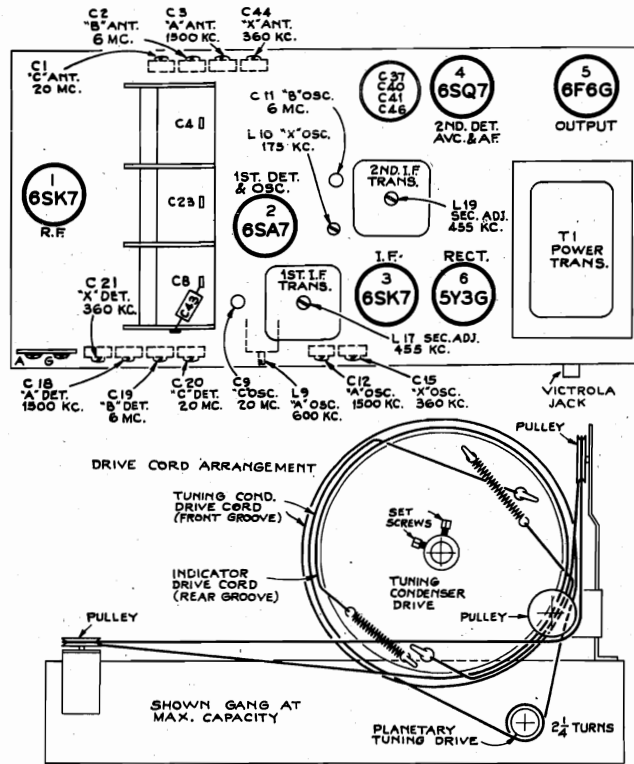

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	Turn tone control to 3rd position (sharp) from maximum counter-clockwise.			
2	6SK7 I-F grid in series with .01 mfd.	455 kc	"A" Band Quiet point between 550-750 kc	L18 and L19 (2nd I-F trans.)
3	6SA7 grid in series with .01 mfd.			L16 and L17 (1st I-F trans.)
4	Turn tone control to 4th position (broad) from maximum counter-clockwise and check I-F response which should be a slightly double-peaked curve. Leave tone control in 3rd position (sharp) for the following steps.			
5	Ant. terminal in series with 200 mmfd.	360 kc	360 kc (31.5°) "X" Band	C15 (osc.)† C21 (det.) C44 (ant.)
6		175 kc	175 kc (127.2°) "X" Band	L10 (osc.) Rock gang
7		1,500 kc	1,500 kc (28°) "A" Band	C12 (osc.)†† C18 (det.) C3 (ant.)
8		600 kc	600 kc (148°) "A" Band	L9 (osc.) Rock gang
9	Repeat steps 5, 6, 7, and 8.			
10	Ant. terminal in series with 300 ohms	6 mc	6 mc (30°) "B" Band	C11 (osc.)* C19 (det.) C2 (ant.)
11		20 mc	20 mc (23°) "C" Band	C9 (osc.)** C20 (det.) C1 (ant.)

* Use **minimum** capacity peak if two can be obtained. Check to determine that C11 has been adjusted to the correct peak by tuning receiver to approximately 5.09 mc where a weaker signal should be received.

** Use **minimum** capacity peak if two can be obtained. Check to determine that C9 has been adjusted to the correct peak by tuning receiver to approximately 19.09 mc where a weaker signal should be received.


† Preset L10 core approximately 1/2-inch out before adjusting C15.

†† Preset L9 core screw flush with apron before adjusting C12.

Note.—Oscillator tracks above signal on all bands.

RCA MFG. CO., INC.

MODEL 6Q4, Chassis RC-441A
Schematic, Controls

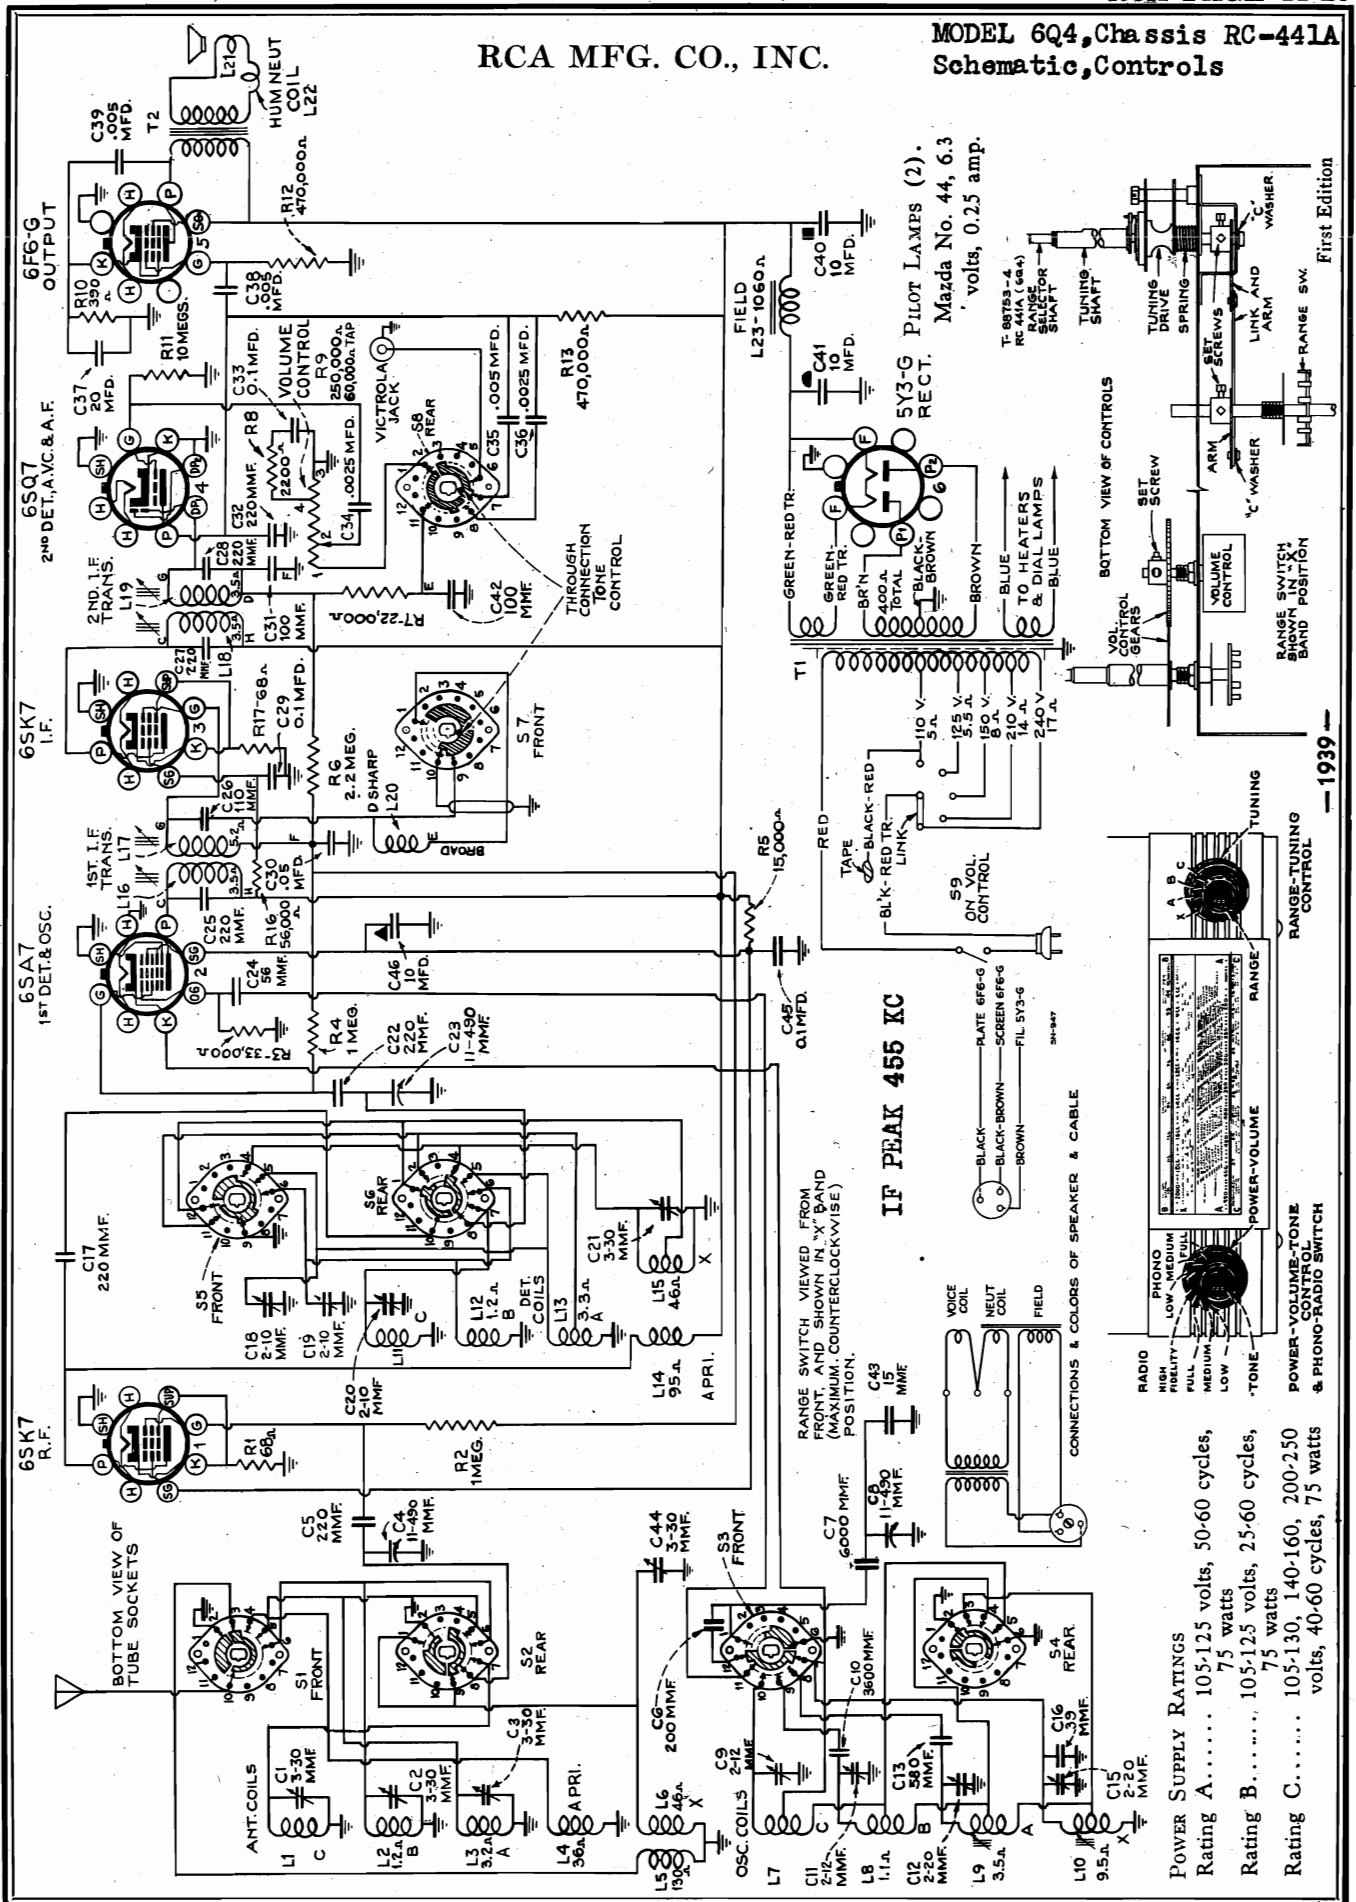

IF PEAK 455 KC

RANGE SWITCH VIEWED FROM FRONT, AND SHOWN IN "X" BAND (MAXIMUM, COUNTERCLOCKWISE POSITION).


CONNECTIONS & COLORS OF SPEAKER & CABLE

POWER SUPPLY RATINGS

- Rating A..... 105-125 volts, 50-60 cycles, 75 watts
- Rating B..... 105-125 volts, 25-60 cycles, 75 watts
- Rating C..... 105-130, 140-160, 200-250 volts, 40-60 cycles, 75 watts

MODEL 6Q4, Chassis RC-441A
Chassis Wiring, Voltage
Lead Dress

RCA MFG. CO., INC.

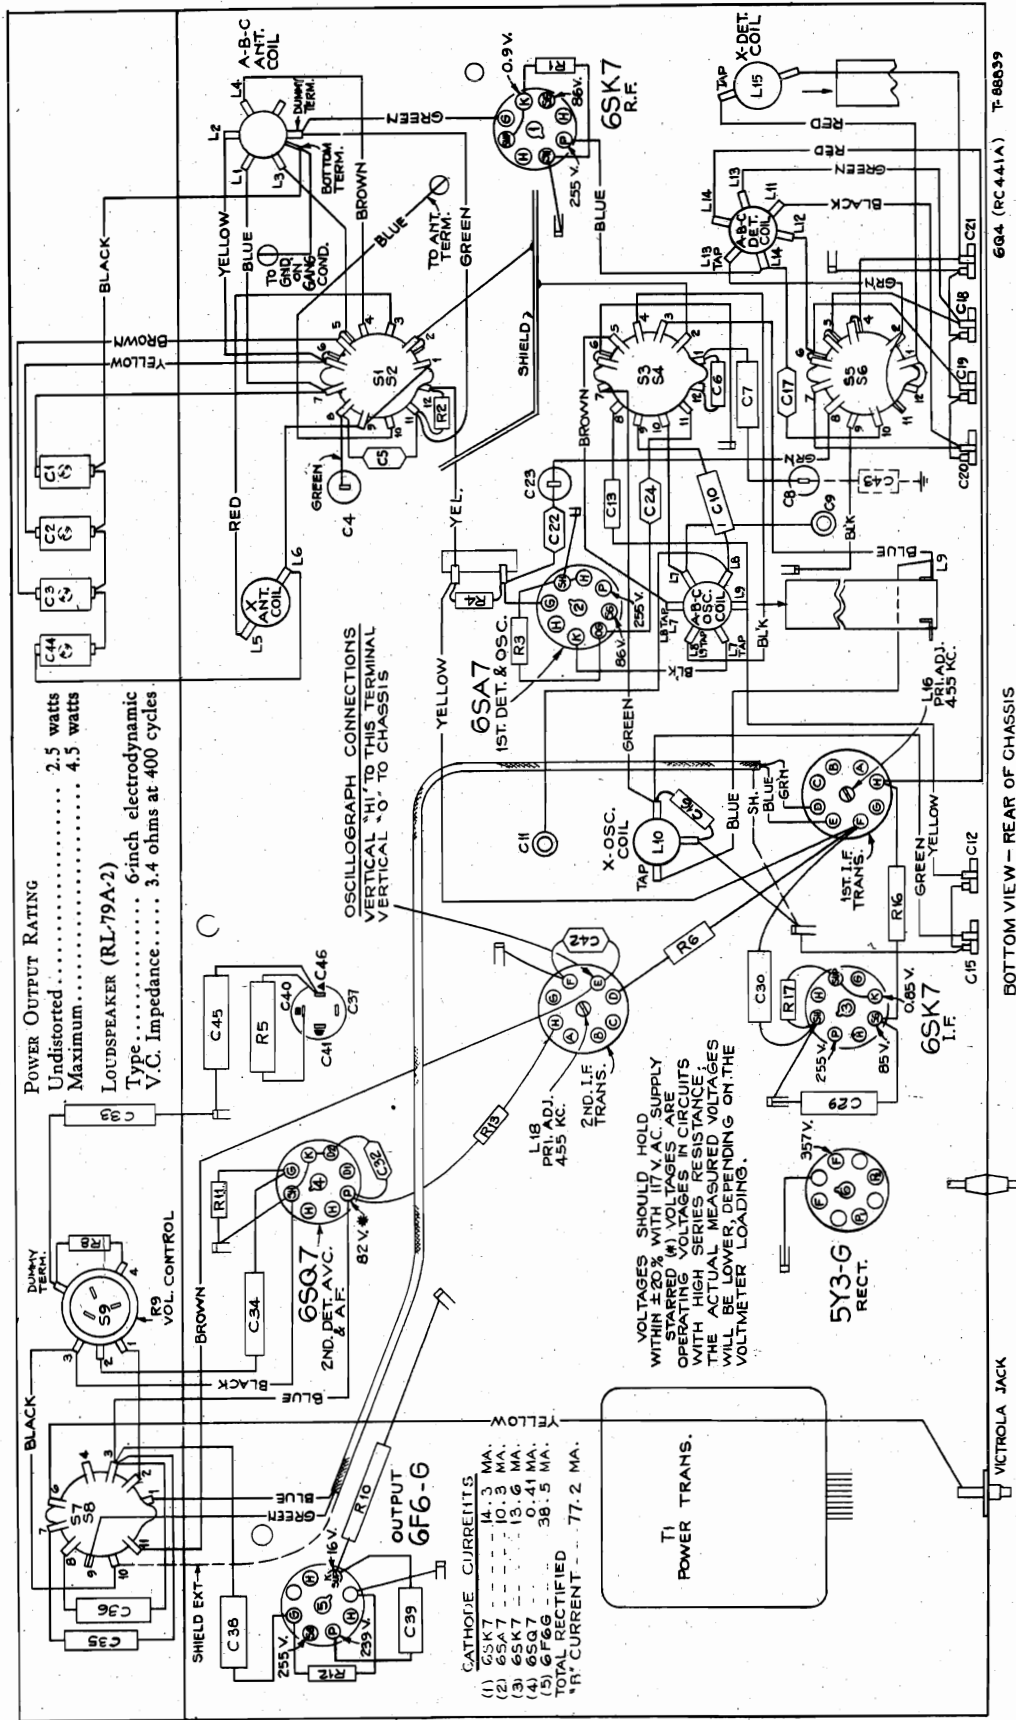

POWER OUTPUT RATING
Undistorted..... 2.5 watts
Maximum..... 4.5 watts
LOUDSPEAKER (RL-79A-2)
Type..... 6-inch electrodynamic
V.C. Impedance..... 3.4 ohms at 400 cycles

OSCILLOGRAPH CONNECTIONS
VERTICAL "HI." TO THIS TERMINAL
VERTICAL "O." TO CHASSIS

CATHODE CURRENTS

(1) 6SK7	14.3 MA.
(2) 6SA7	10.3 MA.
(3) 6SK7	13.4 MA.
(4) 6SQ7	10.41 MA.
(5) 6F6-G	38.5 MA.
TOTAL RECTIFIED	77.2 MA.


*R.F. CURRENT

VOLTAGES SHOULD HOLD WITHIN $\pm 20\%$ WITH 117 V. AC SUPPLY. STARRED (*) VOLTAGES ARE OPERATING VOLTAGES IN CIRCUITS WITH HIGH SERIES RESISTANCE. THE ACTUAL MEASURED VOLTAGES WILL BE LOWER, DEPENDING ON THE VOLTMETER LOADING.

6Q4 (RC 441A) T-88339

BOTTOM VIEW - REAR OF CHASSIS
R-F WIRING AND SOCKET VOLTAGES


- Precautionary Lead Dress:**
1. Dress black lead from L11 to C20 against terminals 6 and 7 of S6.
 2. Dress the green lead from the middle section of the gang away from any other leads, parts, or chassis.
 3. Dress the black diode lead running between the 6SQ7 and terminal G on the 2nd I-F transformer, directly against the chassis.
 4. Twist the power leads together and dress them away from the 6SQ7 socket.
 5. Dress the brown lead from terminal E on the 2nd I-F transformer to terminal 11 on S8 close to chassis.
 6. Dress the black lead from trimmer (C1) to antenna coil away from the range switch link section.
 7. Dress black speaker lead around the output socket toward the power transformer.
 8. Keep green lead of 6SK7 R-F grid circuit away from blue antenna lead.

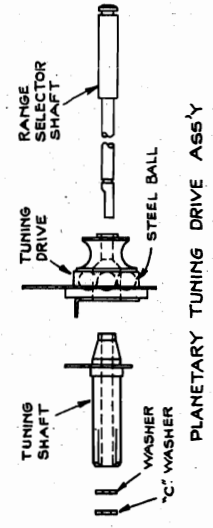

PLANETARY TUNING DRIVE ASS'Y

RCA MFG. CO., INC.

MODEL 604X, Chassis RC-442
Schematic, Drive Cord
Controls, Phono, Data

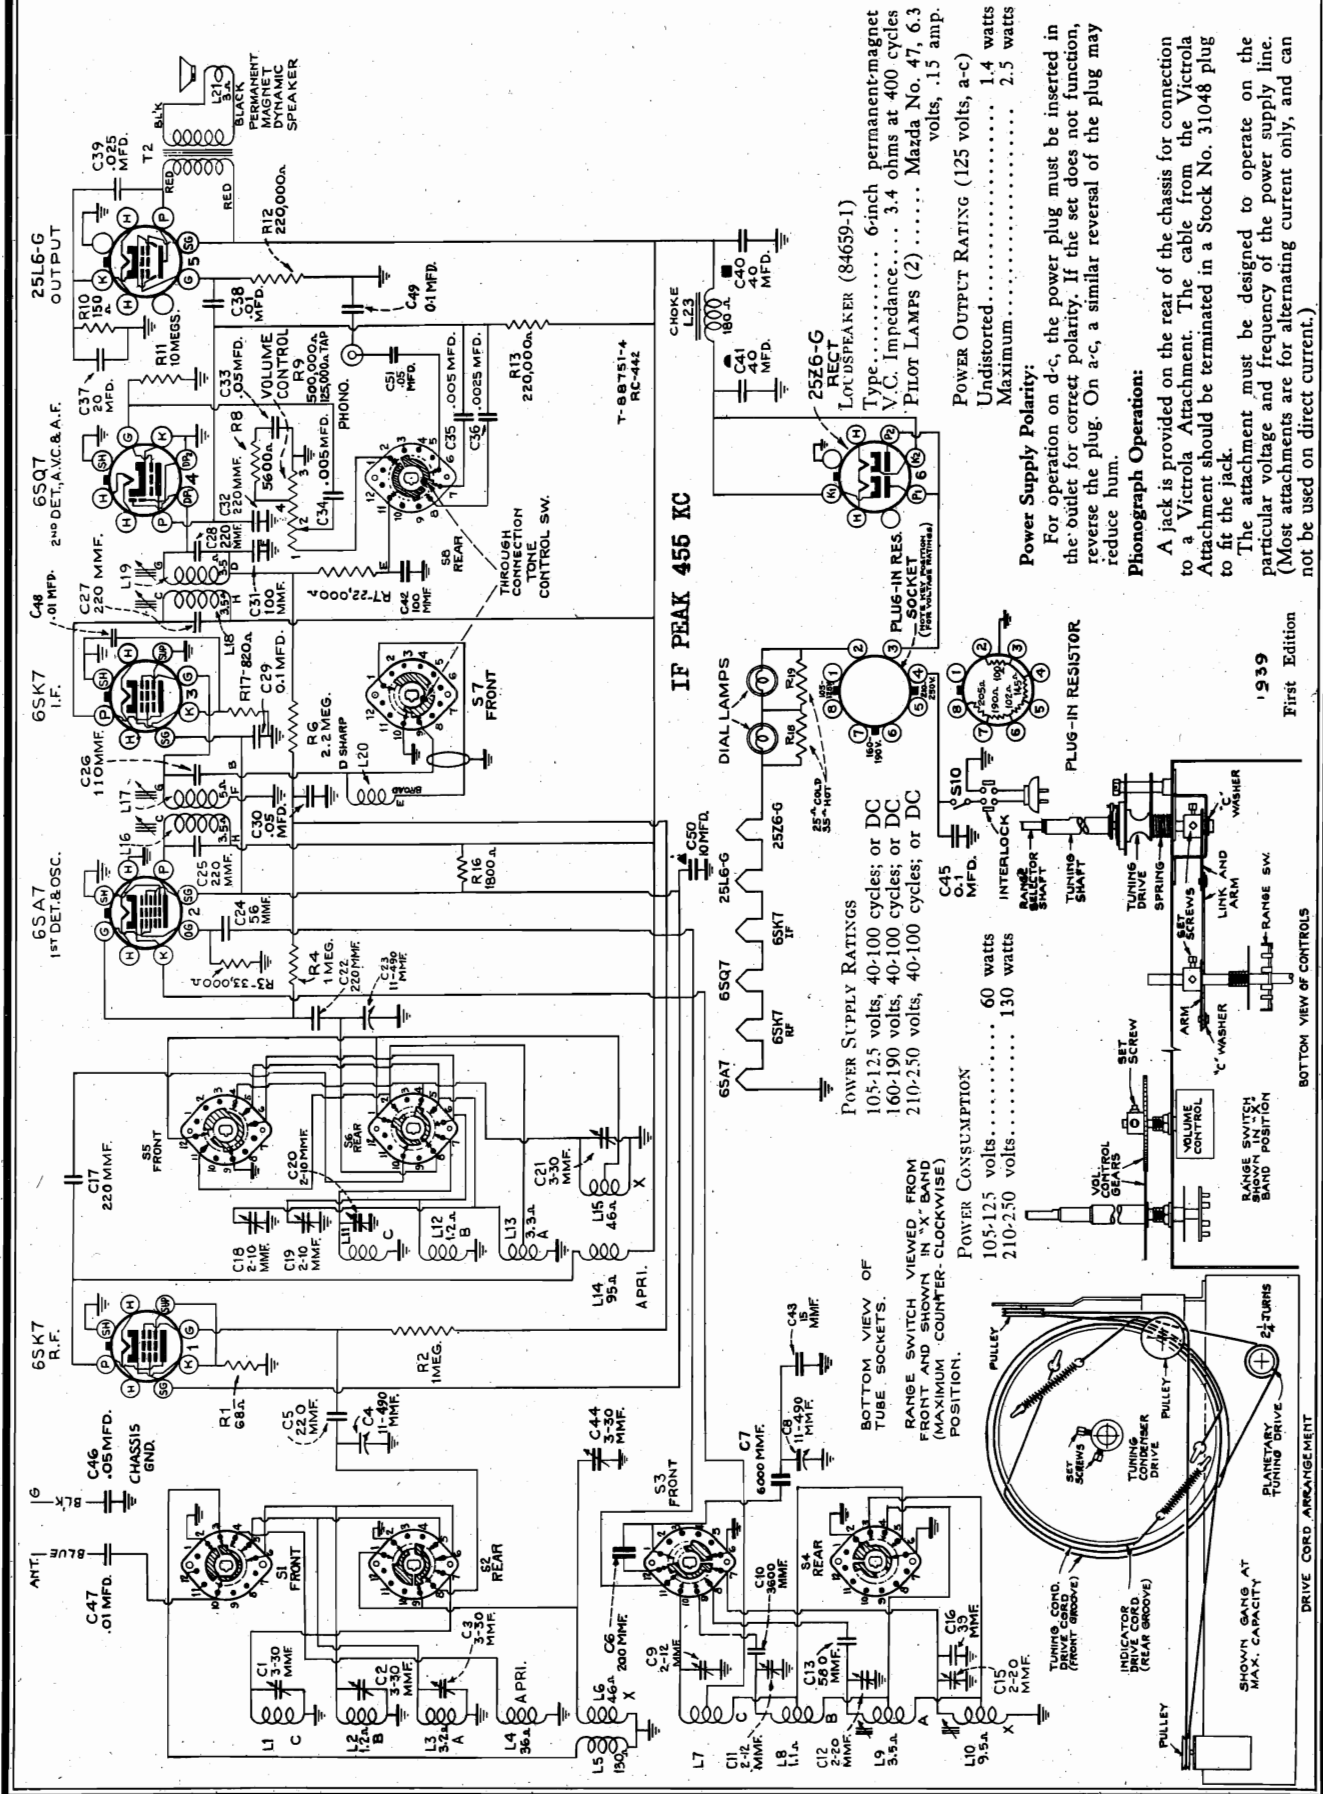

POWER SUPPLY RATINGS
 105-125 volts, 40-100 cycles; or DC
 160-190 volts, 40-100 cycles; or DC
 210-250 volts, 40-100 cycles; or DC

POWER CONSUMPTION
 105-125 volts..... 60 watts
 210-250 volts..... 130 watts

Phonograph Operation:
 A jack is provided on the rear of the chassis for connection to a Victrola Attachment. The cable from the Victrola Attachment should be terminated in a Stock No. 31048 plug to fit the jack.
 The attachment must be designed to operate on the particular voltage and frequency of the power supply line. (Most attachments are for alternating current only, and can not be used on direct current.)

Power Output Rating (125 volts, a-c)
 Undistorted..... 1.4 watts
 Maximum..... 2.5 watts

Power Supply Polarity:
 For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, a similar reversal of the plug may reduce hum.

1939
First Edition

MODEL 6Q4X, Chassis RC-442
Alignment, Trimmers
Socket

RCA MFG. CO., INC.
Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.


Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the black lead and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.


As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the 180° mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed.

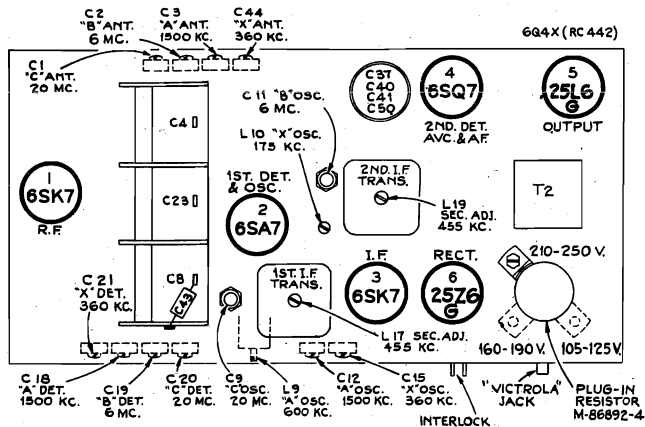

SEE 6Q4 FOR PLANETARY TUNING DRIVE ASS'Y

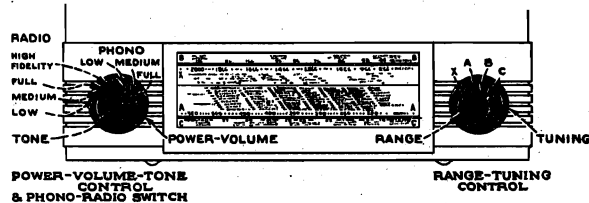

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	Turn tone control to 3rd position (sharp) from maximum counter-clockwise.			
2	6SK7 I-F grid in series with .01 mfd.	455 kc	"A" Band Quiet point between 550-750 kc	L18 and L19 (2nd I-F trans.)
3	6SA7 grid in series with .01 mfd.			L16 and L17 (1st I-F trans.)
4	Turn tone control to 4th position (broad) from maximum counter-clockwise and check I-F response which should be a slightly double-peaked curve. Leave tone control in 3rd position (sharp) for the following steps.			
5	Ant. terminal in series with 200 mmfd.	360 kc	360 kc (31.5°) "X" Band	C15 (osc.)† C21 (det.) C44 (ant.)
6		175 kc	175 kc (127.2°) "X" Band	L10 (osc.) Rock gang
7		1,500 kc	1,500 kc (28°) "A" Band	C12 (osc.)†† C18 (det.) C3 (ant.)
8		600 kc	600 kc (148°) "A" Band	L9 (osc.) Rock gang
9	Repeat steps 5, 6, 7, and 8.			
10	Ant. terminal in series with 300 ohms	6 mc	6 mc (30°) "B" Band	C11 (osc.)* C19 (det.) C2 (ant.)
11		20 mc	20 mc (23°) "C" Band	C9 (osc.)** C20 (det.) C1 (ant.)

* Use minimum capacity peak if two can be obtained. Check to determine that C11 has been adjusted to the correct peak by tuning receiver to approximately 5.09 mc where a weaker signal should be received.

** Use minimum capacity peak if two can be obtained. Check to determine that C9 has been adjusted to the correct peak by tuning receiver to approximately 19.09 mc where a weaker signal should be received.


† Preset L10 core approximately 1/2-inch out before adjusting C15.

†† Preset L9 core screw flush with apron before adjusting C12.

Note.—Oscillator tracks above signal on all bands.

RCA MFG. CO., INC.


MODEL 6Q4X, Chassis RC-442
Chassis Wiring, Voltage
Load Dress

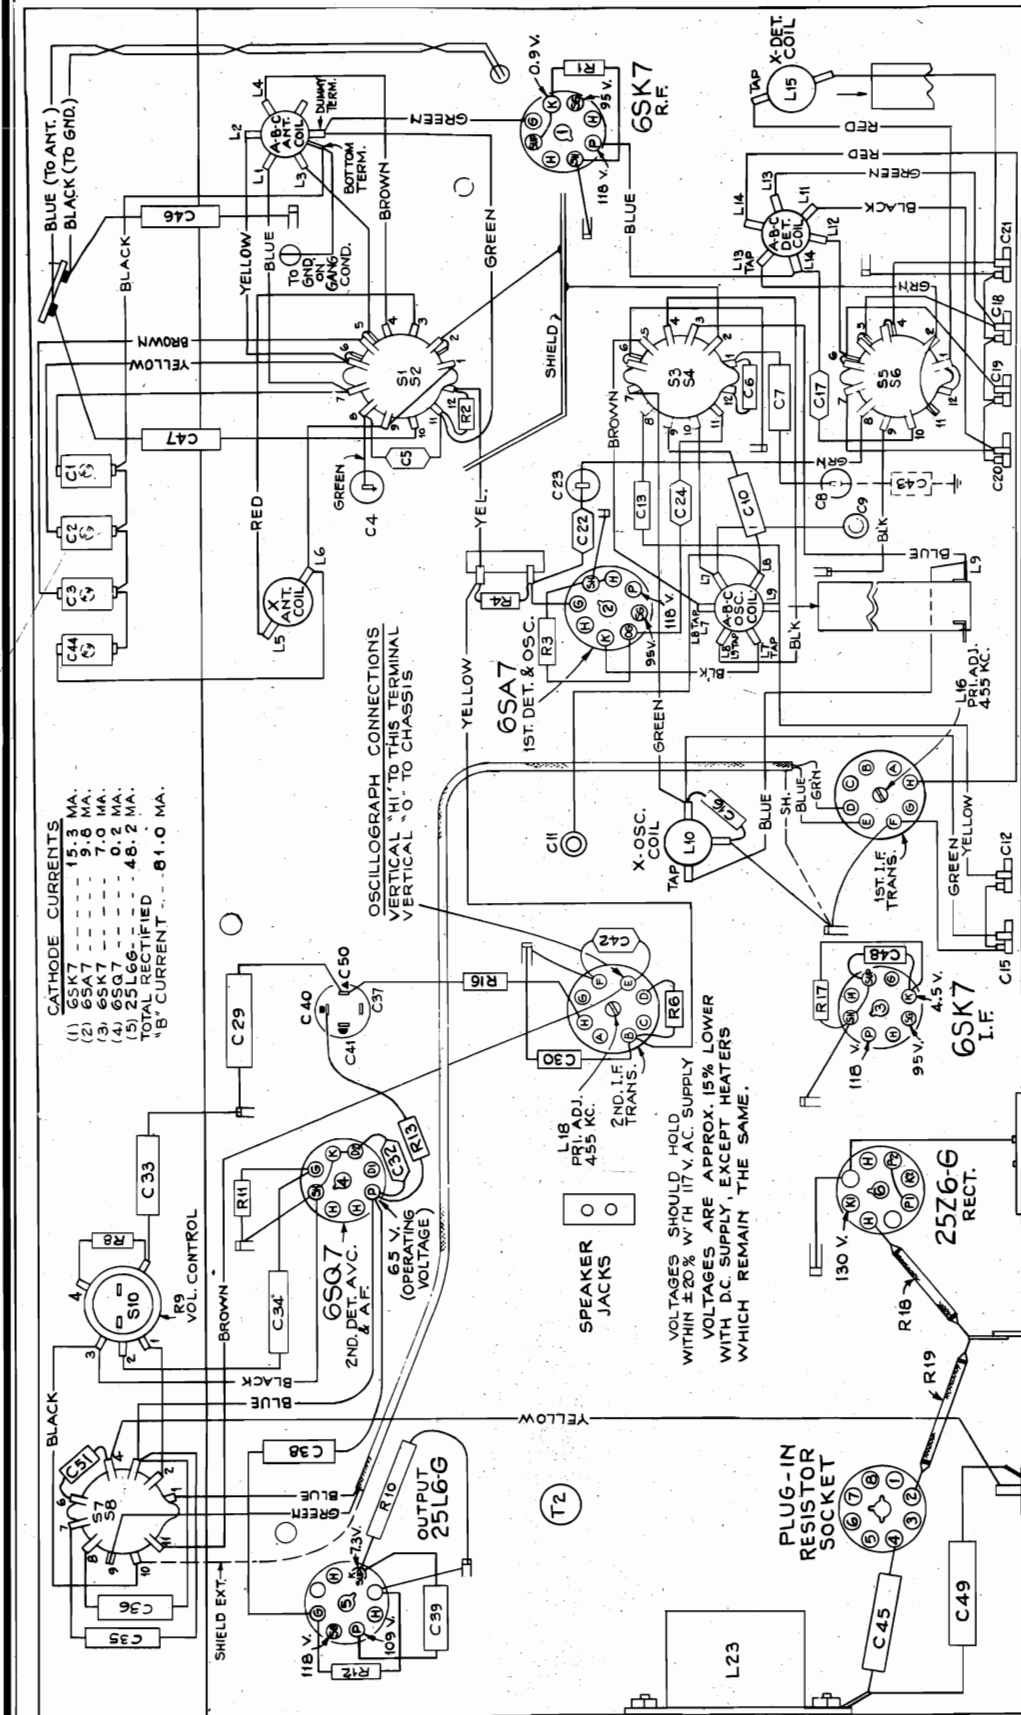

- CATHODE CURRENTS**
- (1) 6SK7 15.3 MA.
 - (2) 6SA7 7.8 MA.
 - (3) 6SK7 0.9 MA.
 - (4) 6SQ7 0.2 MA.
 - (5) 25Z6G 48.2 MA.
 - TOTAL RECTIFIED 81.0 MA.

OSCILLOGRAPH CONNECTIONS
VERTICAL "HI" TO THIS TERMINAL
VERTICAL "O" TO CHASSIS

VOLTAGES SHOULD HOLD
WITHIN ±20% OF 117 V AC SUPPLY
VOLTAGES ARE APPROX. 15% LOWER
WITH DC SUPPLY, EXCEPT HEATERS
WHICH REMAIN THE SAME.

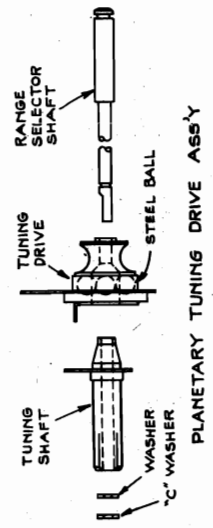


6Q4X (RC442) SN-959
BOTTOM VIEW - REAR OF CHASSIS
R-F WIRING AND SOCKET VOLTAGES

- Precautionary Lead Dress:**
1. Dress black lead from L11 to C20 against terminals 6 and 7 of S6.
 2. Dress the green lead from the middle section of the gang away from any other leads, parts, or chassis.
 3. Dress the black diode lead running between the 6SQ7 and terminal G on the 2nd I-F transformer, directly against the chassis.
 4. Twist the power leads together and dress them away from the 6SQ7 socket.
 5. Dress the brown lead from terminal E on the 2nd I-F transformer to terminal 11 on S8 against the chassis.
 6. Dress the black lead from trimmer (C1) to antenna coil away from the range switch link action.

MODEL 8Q1, Chassis RC-337
Chassis Wiring, Voltage
Lead Dress

RCA MFG. CO., INC.

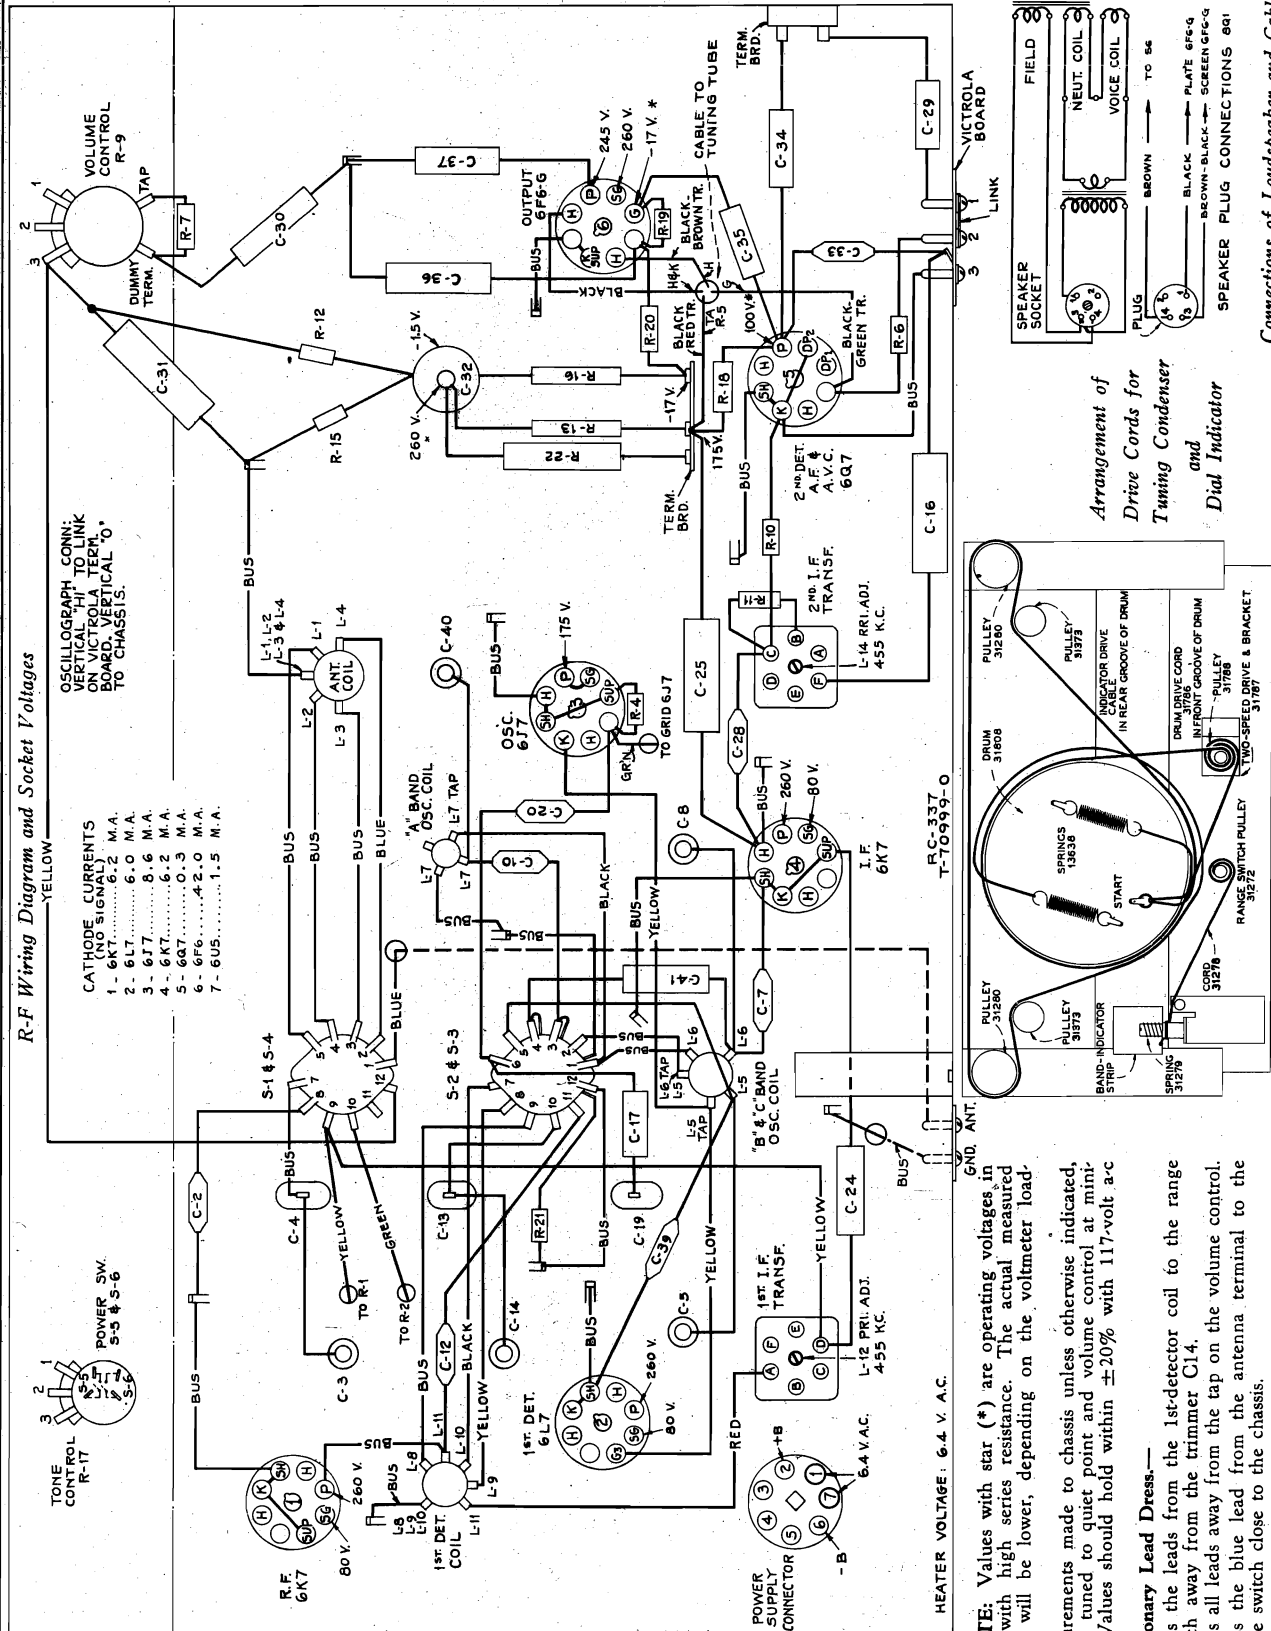



*** NOTE:** Values with star (*) are operating voltages in circuits with high series resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within $\pm 20\%$ with 117-volt a-c supply.

Precautionary Lead Dress.

1. Dress the leads from the 1st-detector coil to the range switch away from the trimmer C14.
2. Dress all leads away from the tap on the volume control.
3. Dress the blue lead from the antenna terminal to the range switch close to the chassis.


Connections of Loudspeaker and Cable

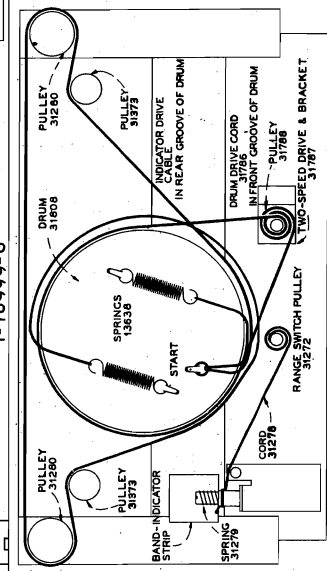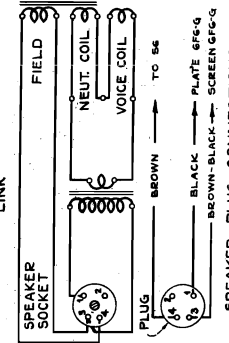

RCA MFG. CO., INC.

MODEL 8Q1, Chassis RC-337
Schematic

FOR POWER SUPPLY DATA
SEE INDEX

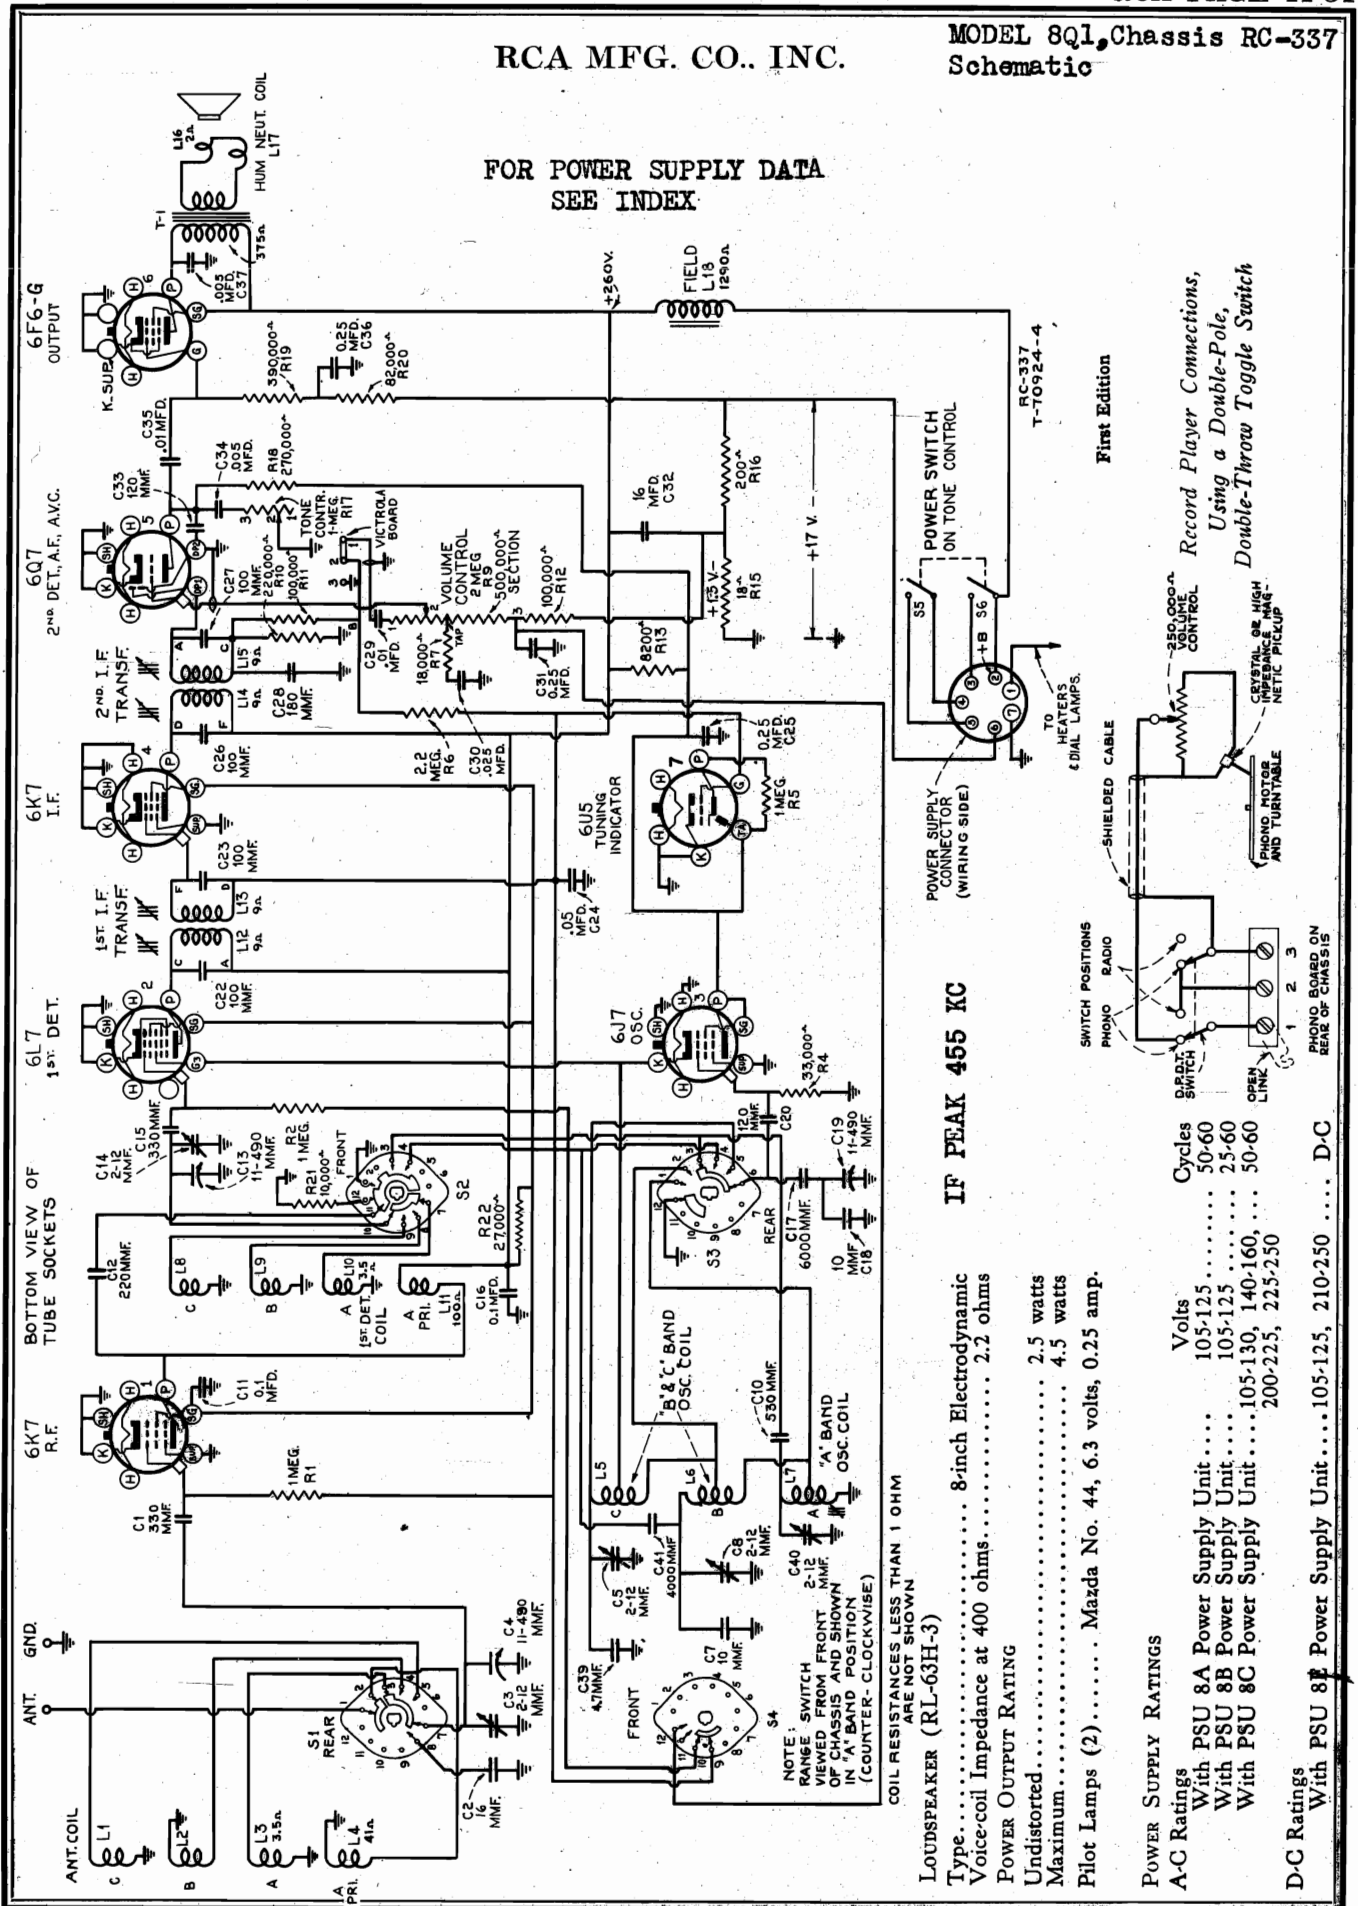

IF PEAK 455 KC

- LOUDSPEAKER (RL-63H-3)
- Type..... 8-inch Electrodynamic
- Voice-coil Impedance at 400 ohms..... 2.2 ohms
- Power Output Rating
- Undistorted..... 2.5 watts
- Maximum..... 4.5 watts
- Pilot Lamps (2)..... Mazda No. 44, 6.3 volts, 0.25 amp.

POWER SUPPLY RATINGS

A-C Ratings

With PSU 8A Power Supply Unit.....	105-125.....	50-60
With PSU 8B Power Supply Unit.....	105-125.....	25-60
With PSU 8C Power Supply Unit.....	105-130, 140-160, ...	50-60
	200-225, 225-250	

D-C Ratings

With PSU 8A Power Supply Unit.....	105-125, 210-250
With PSU 8B Power Supply Unit.....	D-C	

Record Player Connections,
Using a Double-Pole,
Double-Throw Toggle Switch

First Edition

MODEL 8Q1, Chassis RC-337
Alignment, Trimmers,
Socket

RCA MFG. CO., INC.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver ground terminal (G), and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.


As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The surface of the drum must be flush with the end of the gang-condenser shaft. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "180°" mark on the calibration scale when the plates are fully meshed.



Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the left-hand end marked on the dial scales, and gang-condenser fully meshed. The indicator has a spring clip for attachment to the cable.

At Right—Location of Controls

To turn on the set, turn the power-tone control fully clockwise, past the snap of the switch. This is the full-range tone position. To switch off the set, turn this knob fully counter-clockwise.

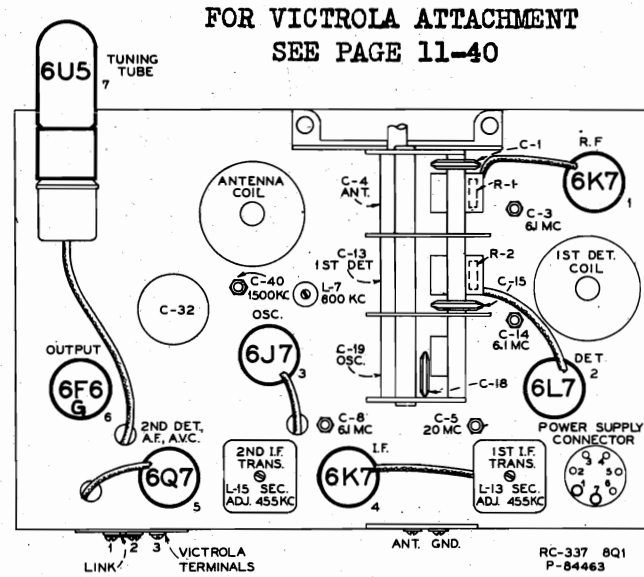

Top View, Showing Location of Tubes and Trimmers

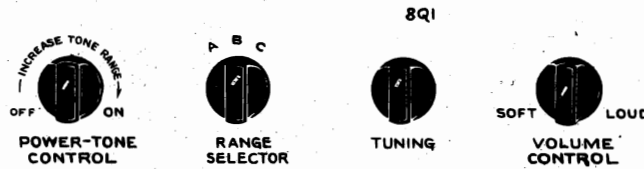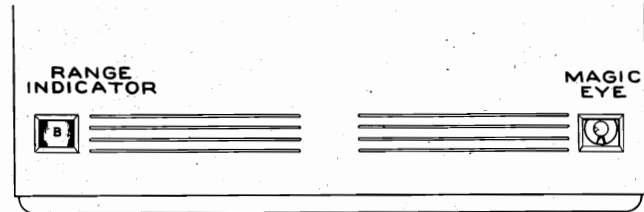


Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"C" band, Quiet Point.	L14 and L15 (2nd I-F Trans.)
2	6L7 1st-Det. grid cap, in series with .01 mfd.			L12 and L13 (1st I-F Trans.)
3	Antenna Terminal, in series with 300 ohms	6.1 mc	"B" band	C8 (osc.)* C14 (det.):** C3 (ant.)
3A	Check to determine that C8 has been adjusted to the correct peak by turning radio to 5.19 mc (50°) where a weaker signal should be received.			
4	Antenna Terminal, in series with 300 ohms	20 mc	20 mc (23.5°) "C" band	C5 (osc.)*
4A	Check to determine that C5 has been adjusted to the correct peak by turning radio to 19.09 mc (29.5°) where a weaker signal should be received.			
5	Antenna Terminal, in series with 200 mmf.	1,500 kc	1,500 kc (31°) "A" band	C40 (osc.)
6	Antenna Terminal, in series with 200 mmf.	600 kc	600 kc (144.5°) "A" band	L7 (osc.)†
7	Repeat Step No. 5			

* Use minimum capacity peak (plunger out) if two peaks can be obtained.
 ** Rock gang condenser slightly while peaking C14, and use maximum capacity peak if two peaks can be obtained.
 † Rock gang condenser slightly while peaking L7 for maximum output.
NOTE: The oscillator tracks 455 kc above the signal on all bands.

RCA MFG. CO., INC.

MODEL 6Q8, Chassis 414B
Schematic, Voltage
Chassis Wiring

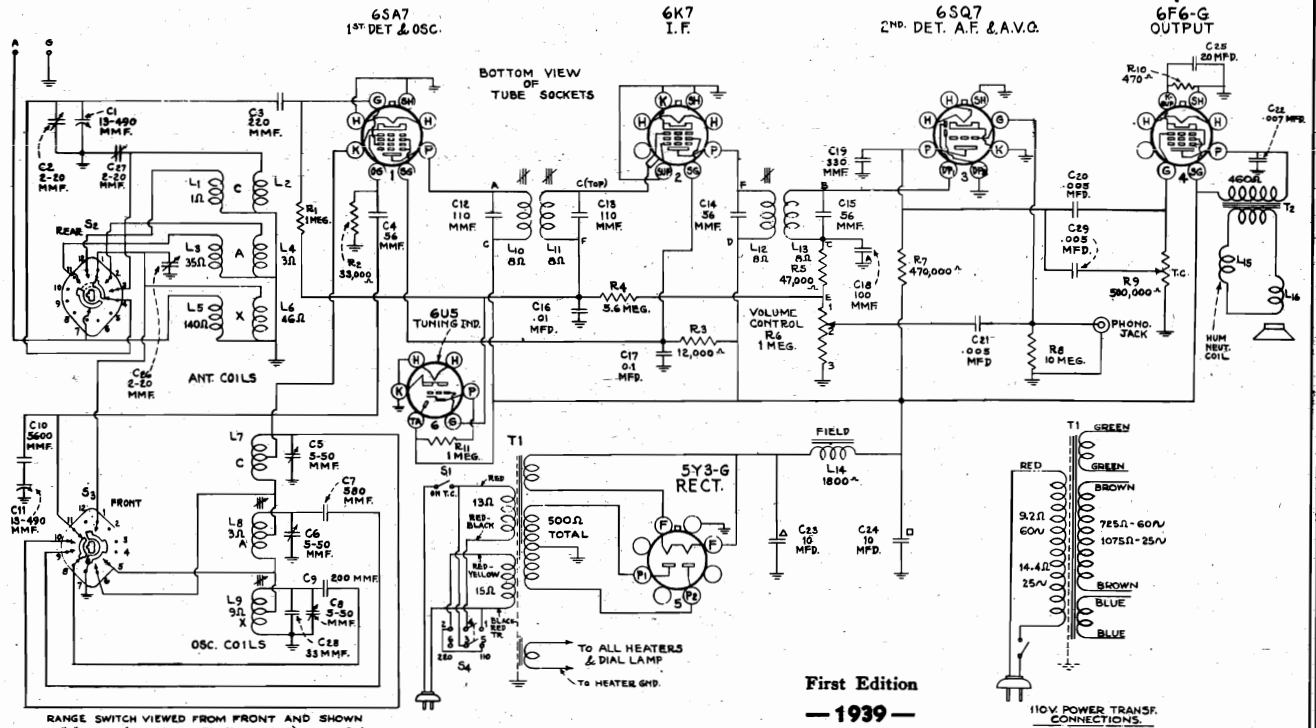

RANGE SWITCH VIEWED FROM FRONT AND SHOWN IN "X" BAND (MAX. COU. ITER CLOCKWISE) POSITION.

PILOT LAMP Mazda No. 44, 6.3 volts, 0.25 amp.

POWER OUTPUT RATING (105-125 Volt Operation)

Undistorted 1.5 watts

Maximum 3.3 watts

Precautionary Lead Dress:

First Edition
- 1939 -

POWER SUPPLY RATINGS

Rating A..... 105-125 volts, 50-60 cycles

Rating B..... 105-125 volts, 25 cycles, 75 watts

Rating C..... 105-125; 200-250 volts, 50-60 cycles, 75 watts


LOUDSPEAKER

Type..... 6-inch electrodynamic

V. C. Impedance..... 3.4 ohms at 400 cycles

1. Lead from 2nd I-F transformer to volume control should be kept close to the chassis and dressed against front apron.

2. C-10 should be dressed away from the antenna section of the variable condenser (C-1).


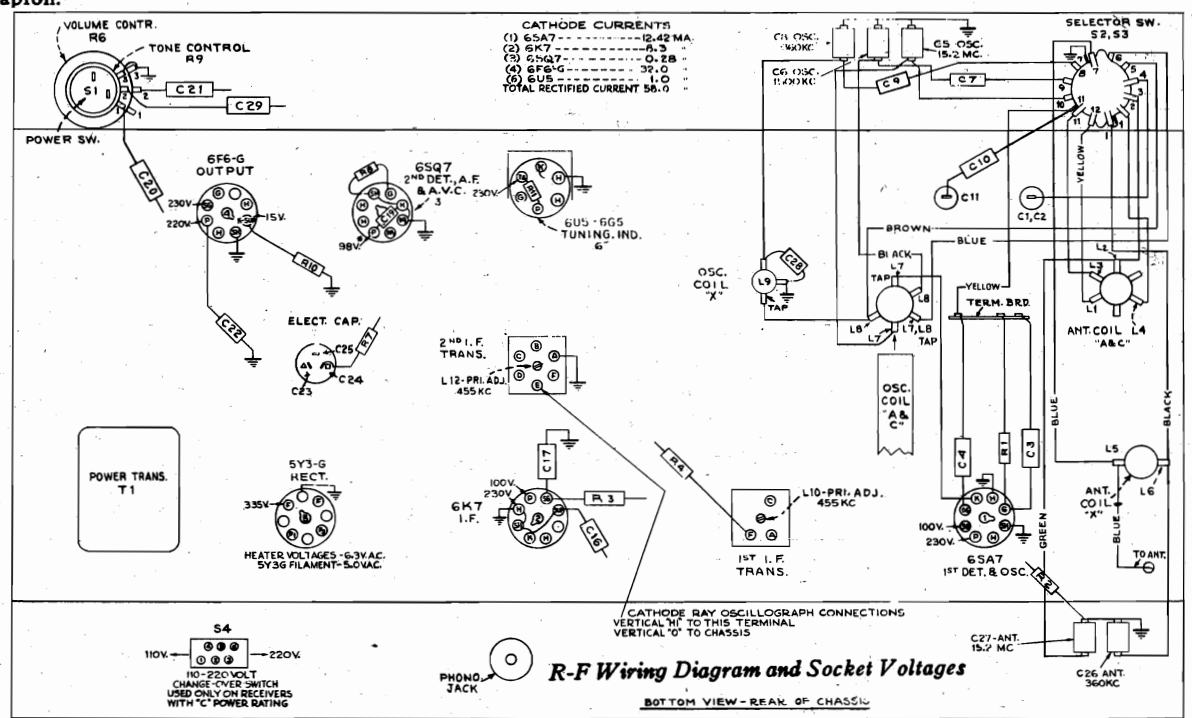


Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within $\pm 20\%$ with 117-volt a-c supply.

* NOTE: Values with star (*) are operating voltages in circuits with high series resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

MODEL 6Q8, Chassis RC-414B
Alignment, Trimmers
Socket, Drive Cord

RCA MFG. CO., INC.

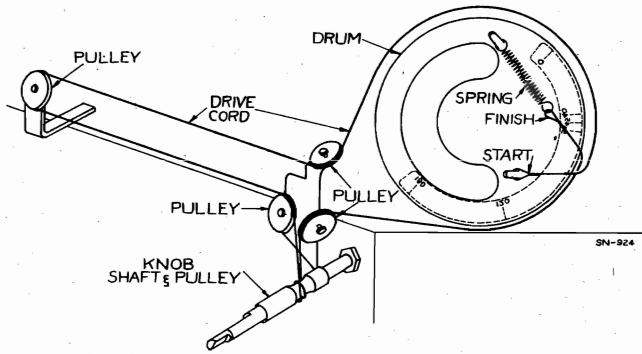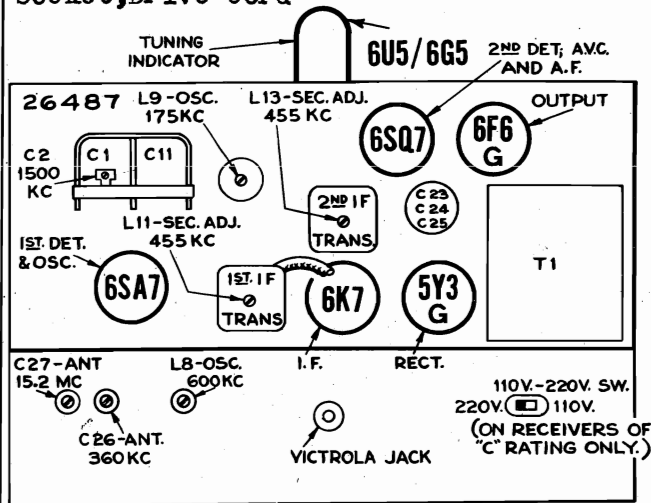

Arrangement of Drive Cords for Tuning Condenser and Dial Indicator

At Left—Tube and Trimmer Locations

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees.

The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 135° mark on the drum scale must be vertical, and directly under the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of one set screw, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the 0° mark on the calibration scale when the plates are fully meshed.


Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap in series with .01 mfd.	455 kc	"A" Band Quiet Point between 550-750 kc	L12 and L13 (2nd I-F Trans.)
2	6SA7 det. grid in series with .01 mfd.	455 kc		L10 and L11 (1st I-F Trans.)
3	Ant. terminal in series with 200 mmf.	1,500 kc	1,500 kc (152.4°) "A" Band	C6 (osc.) C2 (ant.)
4	Ant. terminal in series with 200 mmf.	600 kc	600 kc (93°) "A" Band	L8 (osc.) Rock Gang
5	Repeat steps 3 and 4			
6	Ant. terminal in series with 200 mmf.	360 kc	360 kc (151.5°) "X" Band	C8 (osc.) C26 (ant.)
7	Ant. terminal in series with 200 mmf.	175 kc	175 kc (53.3°) "X" Band	L9 (osc.) Rock Gang
8	Repeat steps 6 and 7			
9	Ant. terminal in series with 300 ohms	15.2 mc	15.2 mc (147.2°) "C" Band	C5 (osc.)* C27 (ant.)
10	Ant. terminal in series with 200 mmf.	360 kc	360 kc (151.5°) "X" Band	C8 (osc.)
11	Ant. terminal in series with 200 mmf.	1,500 kc	1,500 kc (152.4°) "A" Band	C6 (osc.)

*Use minimum capacity peak if two can be obtained. Check to determine that C5 is adjusted to correct peak by tuning receiver to approximately 14.29 mc where a weaker signal should be received.

NOTE: Oscillator tracks above signal on all bands.

RCA MFG. CO., INC.


MODELS PSU 8E, 10E
Schematic, Chassis Wiring

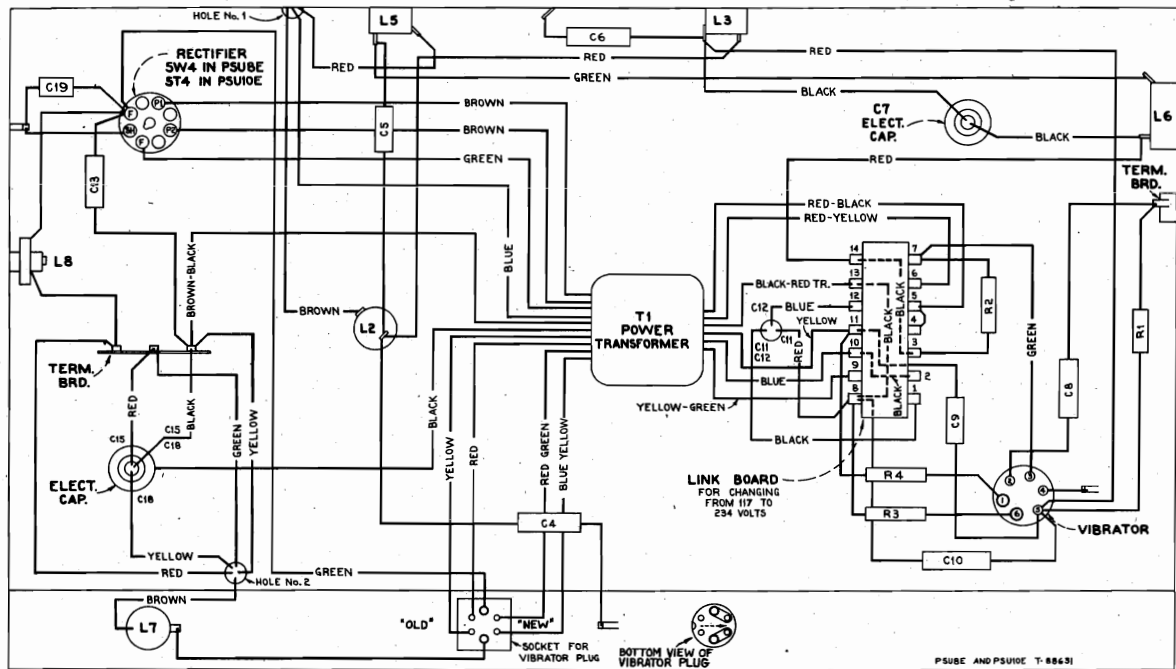


Above—
Bottom View of D-C Power Unit

At Left—
Top View of D-C Power Unit

Below—
Schematic Diagram

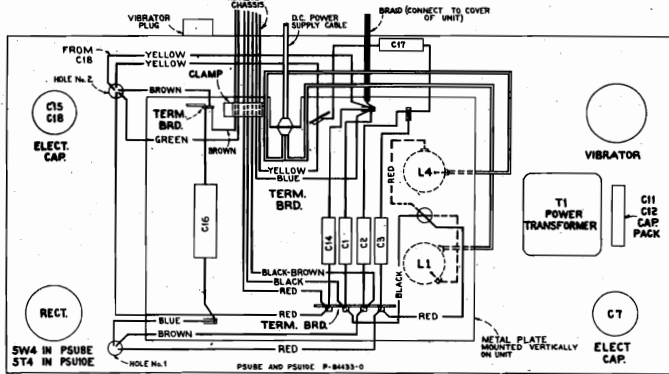


VIBRATOR-PLUG SOCKET
SHOWN WITH PLUG
INSERTED IN "NEW" POSITION

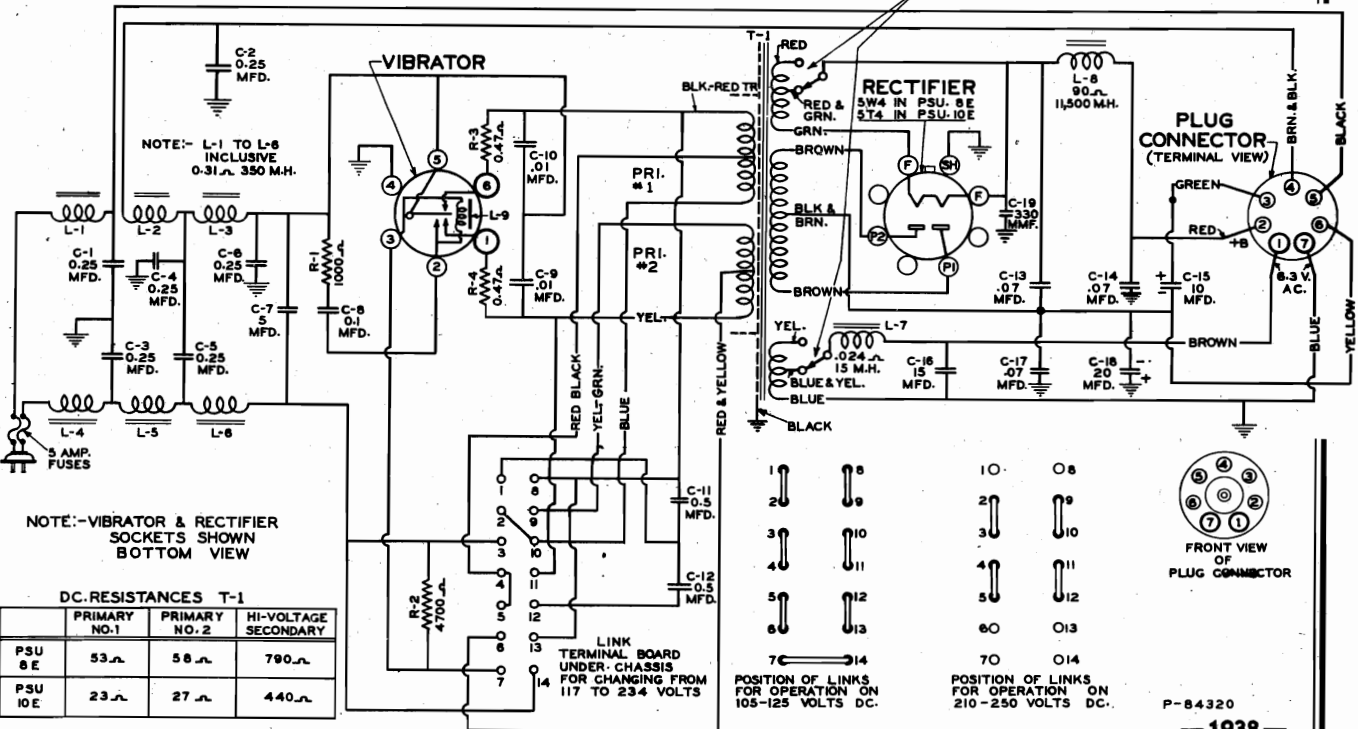

NOTE:— L-1 TO L-8
INCLUSIVE
0.31 μ 350 M.H.

NOTE:—VIBRATOR & RECTIFIER
SOCKETS SHOWN
BOTTOM VIEW

DC. RESISTANCES T-1			
	PRIMARY NO.1	PRIMARY NO.2	HI-VOLTAGE SECONDARY
PSU 8E	53 Ω	58 Ω	790 Ω
PSU 10E	23 Ω	27 Ω	440 Ω

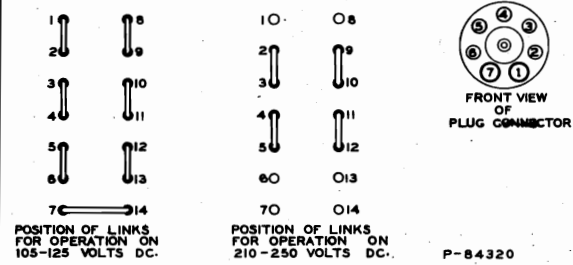

P-84320

— 1938 —

MODELS PSU 8E, 10E
Voltage, Notes, Parts

RCA MFG. CO., INC.

PSU 8E and 10E D-C Power Supply Units

Each d-c unit is equipped with an 18-inch 7-wire cable, with a 7-contact female receptacle which plugs into a 7-prong male connector on the receiver chassis. The d-c power cord (double conductor) is 6-feet long and is provided with a fused plug. The units are approximately 12½-inches long, 5½-inches wide, and 8½-inches high.

GOOD GROUND IS ESSENTIAL.—It is necessary to provide a good ground connection to the receiver chassis. The ground lead should be heavy wire, as short as possible, connected to a water pipe by means of an approved ground clamp. If a water pipe ground is not available, a buried metal plate or screen may be used. This should have an area of approximately 20 square feet and should be buried one or two feet in moist ground. The connection to the plate should be electrically good, mechanically solid, and permanent.

Grounding Power Supply Unit.—A flexible metal braid is connected from the PSU chassis to the case of the unit, and another length of braid extends from the case for connection to the receiver chassis. Loosen one of the self-tapping screws on the rear of the chassis, and attach the braid under this screw. It is important to see that these connections are made correctly at the time of installation.

Magic Wave Antenna Recommended.—In cases where the line or vibrator interference is found to be objectionable, the use of an RCA Magic Wave Antenna (Stock No. 9812) is recommended in conjunction with a good ground as specified above.

Link Board for Changing from 117 to 234 Volts.—A link board is mounted under the chassis of the PSU for making connections to permit operation on 105-125 volts d.c., or on 210-250 volts d.c. The correct position of the links for each voltage range is shown in the schematic diagram. The links must be arranged correctly in the link board for the particular voltage range on which the unit is to be operated, otherwise damage to the receiver may result.

Vibrator Plug.—The heater windings on the power transformer are tapped and connected to a six-contact socket on the rear of the PSU chassis. A plug fits into this socket in two positions only. An arrow on the plug points to markings "NEW" or "OLD" on the

case of the unit. When the vibrator is new, the plug is inserted with the arrow pointing to "NEW." In the course of time, when the vibrator is worn to an extent where the dial lights burn dull or red instead of with their usual brilliancy, the plug should be removed and re-inserted with the arrow pointing to "OLD." (In this position, all the turns of the heater windings are connected, thus bringing the heater voltage up to normal.)

The number of operating hours to the time when it is necessary to turn the plug to "OLD" is not an indication of the ultimate life of the vibrator: For example, with high line voltage, the plug may usually be left at "NEW" for practically the entire useful life of the vibrator; but with low line voltage, it may be necessary to turn the plug to "OLD" after a time corresponding to a small fraction of the total life of the vibrator.

Testing.—The simplest way to check PSU 8E or 10E is to plug it into a receiver for which it is designed. (First check the position of the links for the particular line voltage.) Note whether the dial lamps in the receiver light with normal brilliancy, and measure the rectified "B" voltage at the receiver to determine whether it is normal.

If a receiver is not available, dummy loads may be connected to the unit as specified in the table below.

The supply current must be measured with a d-c ammeter, not a meter of the ac-dc type, inasmuch as the r.m.s. value of the current is considerably higher than the d-c current. The heater voltage must be measured with an r.m.s. meter (thermo-coupled), not with an average meter (rectifier type), on account of the square wave shape. If an accurate thermo-coupled meter is not available, the heater voltage may be checked by observing the brilliancy of the dial lamps in the receiver. They will glow dull or red if the heater voltage is low.

Precautionary Lead Dress.—(1) Dress all leads on the power transformer primary and the buffer capacitors away from the line chokes. (2) Leads to C19 must be as short as possible. (3) The rectifier filament leads should be run close to each other, and dressed away from the filter chokes. (4) D-C power cord must not touch power transformer. (5) Keep antenna and ground leads away from PSU and PSU cables.

PSU	Supply Volts DC	Heater Load (ohms)	Rectifier Load (ohms)	Supply Current D-C amps.	Heater Voltage (A.C.)		Rectified Voltage (D.C.)		Used With Models
					Max.	Min.	Max.	Min.	
8E	117	2.2	4,900	0.90	7.85	7.1	400	360	8Q1, and 8Q4
	234	2.2	4,900	0.50	7.85	7.1	400	360	
10E	117	1.4	3,400	1.10	7.4	6.6	400	360	10Q1, 12Q4, 12QK
	234	1.4	3,400	.65	7.4	6.6	400	360	

NOTE: The heater and rectifier dummy load resistors should be capable of handling 50 watts. Connect the heater load across terminals 1 and 7 on the 7-contact plug. Connect the rectifier load resistor across terminals 2 and 6 on the 7-contact plug. Connect a jumper from terminal 2 to 3, and from 4 to 5 on this plug. Check position of links before turning power on.

Replacement Parts

Insist on genuine factory-tested parts, which are readily identified and may be purchased from authorized dealers.


STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit List Price
	DC POWER SUPPLY (PSU-8E and PSU-10E)		32053	Coil—Choke coil (L8).....	.60
12952	Capacitor—330 mmfd. (C18).....	.35	5140	Fuse—5 amp. fuse.....	.10
4937	Capacitor—.01 mfd. (C9, C10).....	.25	30557	Plug—Fused plug less fuses and power cord...	.55
14626	Capacitor—.07 mfd. (C13, C14, C17).....	.25	32052	Plug—6-contact power change plug.....	.30
4839	Capacitor—.01 mfd. (C8).....	.30	14409	Plug—7-contact female plug for power supply cable.....	.45
12484	Capacitor—.25 mfd. (C1, C2, C3, C4, C5, C6).....	.30	32064	Resistor—0.47 ohms, flexible type (R3, R4)...	.15
32049	Capacitor—Comprising two sections of 0.5 mfd. each (C11, C12).....	3.20	4687	Resistor—1,000 ohms, ½ watt (R1).....	.20
32048	Capacitor—5 mfd. (C7).....	1.50	11768	Resistor—4,700 ohms, 2 watt (R2).....	.25
32047	Capacitor—Comprising one section 10 mfd. and one section 20 mfd. (C15, C18).....	1.55	32051	Socket—6-contact power change socket.....	.20
32045	Capacitor—15 mfd. (C16).....	.70	31251	Socket—Tube socket.....	.25
32046	Coil—Choke coil (L1, L2, L3, L4, L5, L6)....	.80	14312	Socket—Vibrator socket.....	.25
31794	Coil—Choke coil (L7).....	.65	32062	Transformer—Power transformer (PSU-8E only)	11.90
			32063	Transformer—Power transformer (PSU-10E only)	18.50
			32050	Vibrator.....	10.40

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

2nd Production
Schematic, Socket, Voltage
Alignment, Trimmers

RCA MFG. CO., INC.

MODELS 9TX-50, 9TX-50M
Chassis RC454; 40X-52,
40X-55, Ch. RC-453
OUTPUT
50L6GT

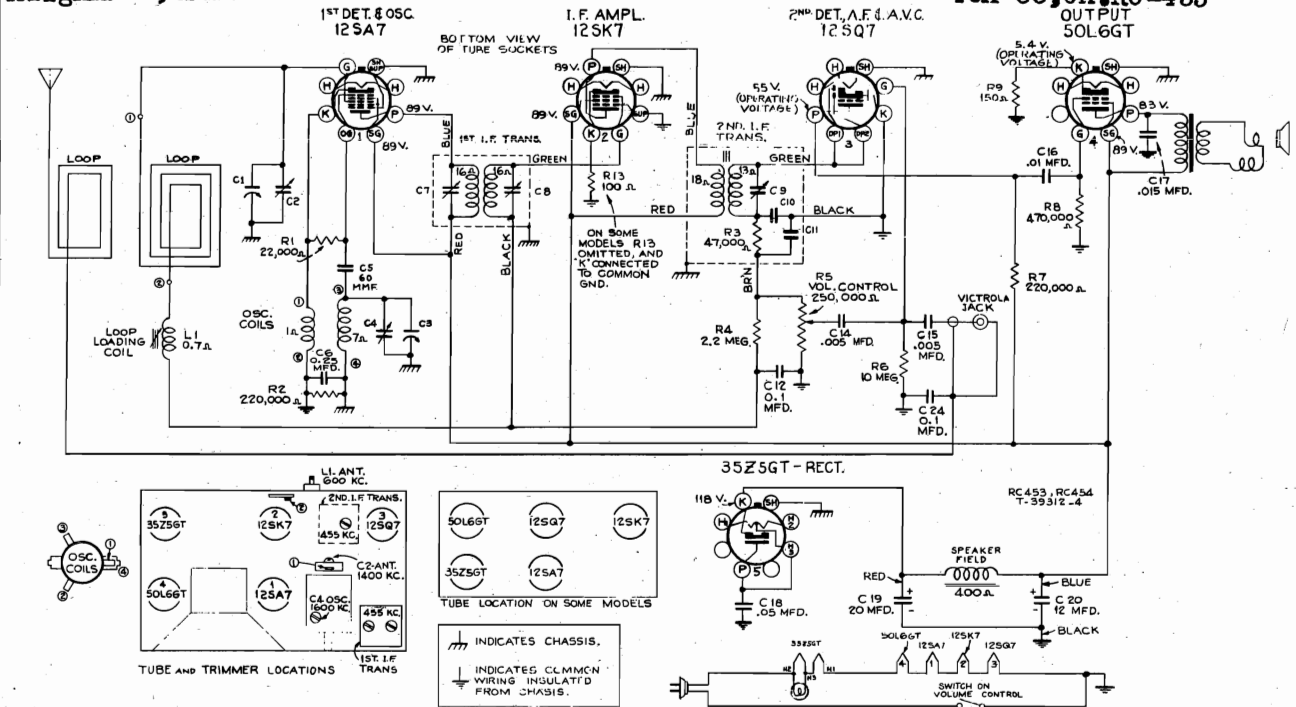

Steps	Connect the test oscillator to—	Tune test-osc. to—	Turn Radio Dial to—	Adjust the following for maximum peak output
1	Tuning Condenser stator (ant.) in series with .1 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C7, C8, C9 (1st and 2nd I-F transformers)
2	Radiation Loop consisting of 2 turns of wire 18 in. in diameter located 4' to 6 feet from receiver	1,650 kc	Full clockwise (out of mesh)	C4 (oscillator)
3		600 kc	Resonance on 600 kc signal	L1 (Loop inductance)
4		1,400 kc	Resonance on 1,400 kc signal	C2 (Antenna)

Precautionary Lead Dress:

- Green and blue leads from 1st I.F. transformer must be kept separated.
- Dress yellow lead from loudspeaker under green lead from hum bucking coil to prevent it from touching the 50L6GT.

POWER SUPPLY RATINGS

A-C Rating 105-125 volts, 50-60 cycles, 30 watts
D-C Rating 105-125 volts, direct current, 30 watts

POWER OUTPUT (125 volt, 60 cycle supply)

Undistorted6 watts
Maximum 2.0 watts

LOUDSPEAKER

Type 5-inch Electrodynamic

STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES (RC-453, RC-454)		
34444	Bracket—Dial and lamp support (9TX-50, 50M)	.30
34447	Capacitor—Mica trimmer, 2.5 to 30 mmfd. (C1)	XX
13057	Capacitor—60 mmfd. (C5)	.35
4838	Capacitor—.005 mfd. (C14, C15)	.25
4937	Capacitor—.01 mfd. (C18)	.25
11315	Capacitor—.015 mfd. (C17)	.20
32787	Capacitor—.05 mfd. (C18)	.20
4839	Capacitor—.1 mfd. (C12, C24)	.30
12484	Capacitor—.25 mfd. (C6)	.30
34597	Capacitor—Electrolytic comprising 1 section of 20 mfd. and 1 section of 12 mfd. (C19, C20)	.90
34592	Coil—Loop loading coil	XX
34443	Coil—Oscillator coil	XX
34448	Condenser—Variable tuning condenser (40X-52, 55)	XX
34440	Condenser—Variable tuning condenser (9TX-50, 50M)	XX
32545	Control—Volume control and power switch (40X-52, 55)	1.50
33291	Control—Volume control and power switch (9TX-50, 50M)	1.50
32634	Cord—Tuning condenser drive cord	.10
34567	Drum—Variable tuning condenser drive drum (40X-52, 55)	.35
34446	Eyelet—Used as pulley for drive cord (9TX-50, 50M)	XX
11765	Lamp—Dial lamp	.15
34445	Pointer—Dial pointer (9TX-50, 50M)	XX
14439	Resistor—100 ohms, 1/2 watt (R13)	.20
13428	Resistor—150 ohms, 1/2 watt (R9)	.20
13998	Resistor—22,000 ohms, 1/2 watt (R1)	.20
12264	Resistor—220,000 ohms, 1/2 watt (R2, R7)	.20

34332	Shaft—Tuning condenser drive shaft (9TX-50, 50M)	XX
34449	Socket—Dial lamp socket	XX
31319	Socket—Tube socket	.25
30585	Spring—Tuning condenser drive cord spring (40X52, 55)	.06
31615	Spring—Drive cord spring (9TX-50, 50M)	.06
34441	Transformer—1st I.F. transformer	XX
34442	Transformer—2nd I.F. transformer	XX
12285	Resistor—470,000 ohms, 1/2 watt (R8)	.20
12679	Resistor—2.2 megohm, 1/2 watt (R4)	.20
13601	Resistor—10 megohm, 1/2 watt (R6)	.20
33061	Shaft—Tuning condenser drive shaft (40X-52, 55)	.20
SPEAKER ASSEMBLIES 40X-55 (RL86-1)		
32907	Cap—Dust cap	.02
35066	Cone—Cone complete with voice coil	XX
34450	Speaker—5" dynamic speaker complete with cone and voice coil less output transformer	XX
35056	Transformer—Output transformer	XX
SPEAKER ASSEMBLIES (40X-52, 9TX-50 and 9TX-50M) (39223-1)		
35065	Cone—Cone complete with voice coil	XX
34450	Speaker—5" dynamic speaker complete with cone and voice coil less output transformer	XX
34174	Transformer—Output transformer	1.25
MISCELLANEOUS		
33744	Dial—Dial scale—glass (40X-52, 55)	.50
33289	Dial—Dial scale (9TX-50, 50M)	.40
34016	Knob—Walnut tuning or volume control knob (40X-52, 55)	.15
34015	Knob—Tuning or volume control knob (9TX-50, 50M)	.15



ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

XX Price upon application to your RCA Victor Parts Distributor.

RCA MFG. CO., INC.

MODEL 10Q1, Chassis RC-377B
Schematic, Lead Dress
Phono. Connections


FOR POWER SUPPLY
DATA SEE INDEX

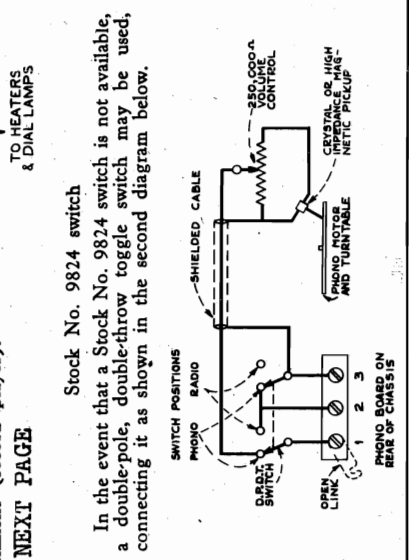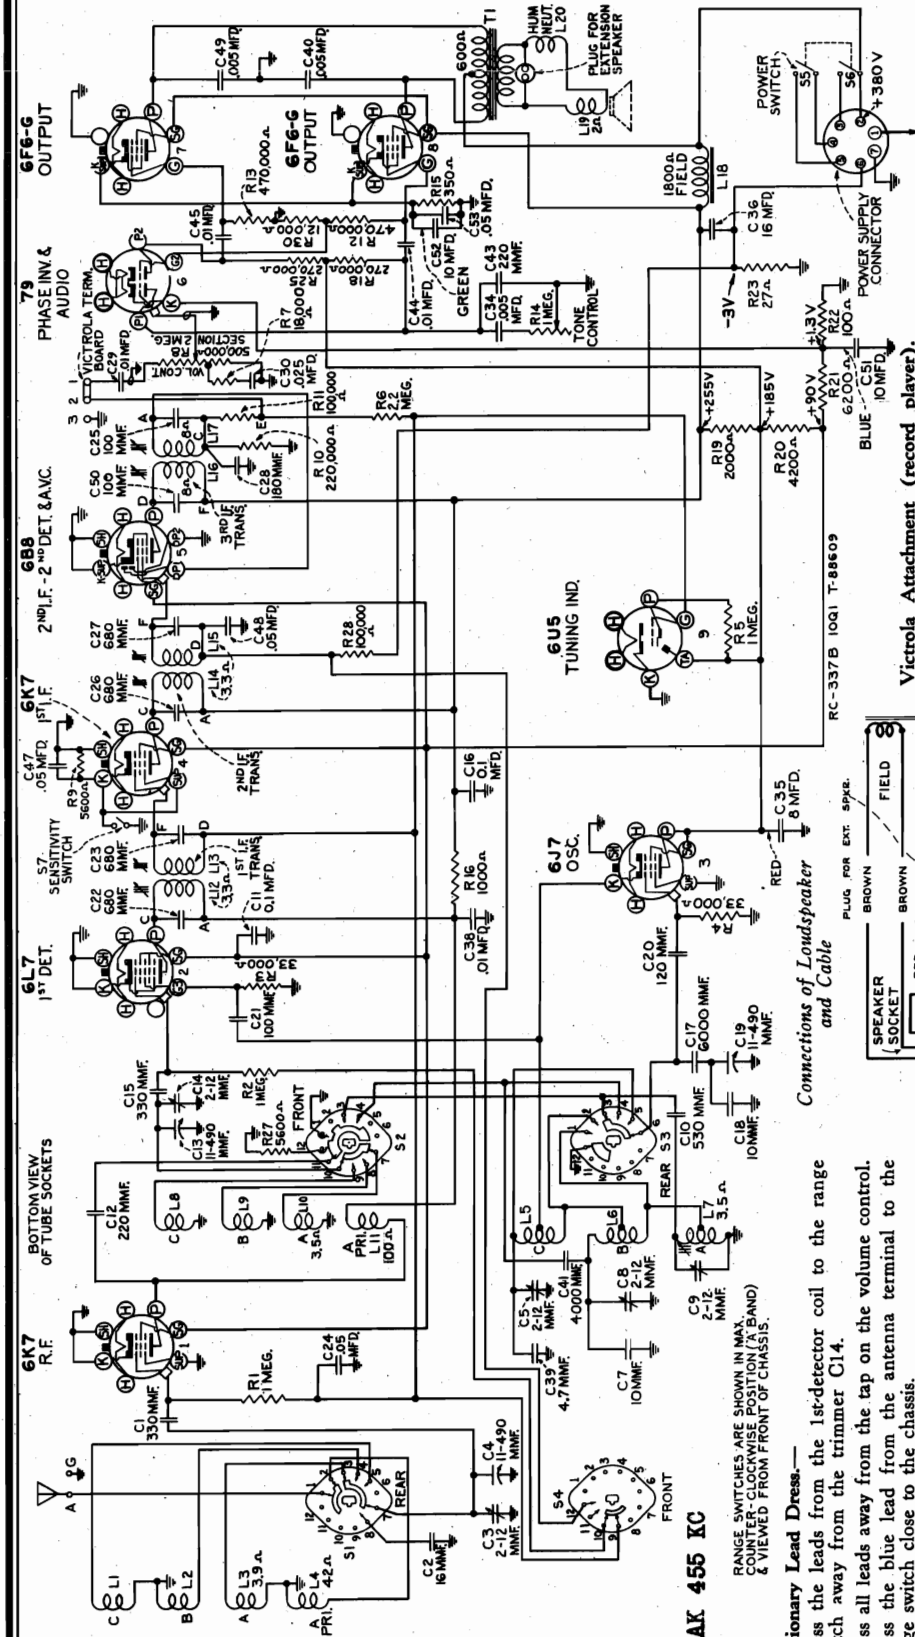

Stock No. 9824 switch

In the event that a Stock No. 9824 switch is not available, a double-pole, double-throw toggle switch may be used, connecting it as shown in the second diagram below.

Victrola Attachment (record player).
SEE NEXT PAGE

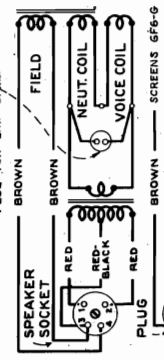

Connections of Loudspeaker and Cable

IF PEAK 455 KC

RANGE SWITCHES ARE SHOWN IN MAX. POSITION (CLOCKWISE POSITION) (A BAND) & VIEWED FROM FRONT OF CHASSIS.

- Precautionary Lead Dress—**
1. Dress the leads from the 1st-detector coil to the range switch away from the trimmer C14.
 2. Dress all leads away from the tap on the volume control.
 3. Dress the blue lead from the antenna terminal to the range switch close to the chassis.

LOUDSPEAKER (RL-63H-4)

- Type..... 8-inch electrodynamic
- Voice-coil Impedance at 400 cycles.....2.2 ohms
- Power Output Rating..... 10 watts
- Undistorted..... 12 watts
- Maximum..... 12 watts

Pilot Lamps (2)..... Mazda No. 44, 6.3 volts, 0.25 amp.

POWER SUPPLY RATINGS

- A-C Ratings
- With PSU 10A Power Supply Unit..... 105-125 Cycles
- With PSU 10B Power Supply Unit..... 105-125 Cycles
- With PSU 10C Power Supply Unit..... 105-130, 140-160 Cycles
- With PSU 10E Power Supply Unit..... 200-225, 225-250 Cycles
- D-C Ratings
- With PSU 10E Power Supply Unit..... 105-125, 210-250 D-C

MODEL 10Q1, Chassis RC-377B
Alignment, Trimmers, Socket
Victrola Attachment

RCA MFG. CO., INC.

MODEL 8Q1
Record Player

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver ground terminal (G), and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of

the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The surface of the drum must be flush with the end of the gang-condenser shaft. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "180°" mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the left-hand end marked on the dial scales, and gang-condenser fully meshed. The indicator has a spring clip for attachment to the cable.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
Leave sensitivity switch open (minimum sensitivity) for all alignment operations.				
1	6B8 2nd I-F grid cap, in series with .01 mfd.	455 kc	"C" band Quiet Point.	L16 and L17 (3rd I-F Trans.)
2	6K7 1st I-F grid cap, in series with .01 mfd.			L14 and L15 (2nd I-F Trans.)
3	6L7 1st Det. grid cap, in series with .01 mfd.			L12 and L13 (1st I-F Trans.)
4	Antenna Terminal, in series with 300 ohms	6.1 mc	6.1 mc (29°) "B" band	C8 (osc.)* C14 (det.)† C3 (ant.)
5	Antenna Terminal, in series with 300 ohms	20 mc	20 mc (23.5°) "C" band	C5 (osc.)††
6	Antenna Terminal, in series with 200 mmf.	1,500 kc	1,500 kc (31°) "A" band	C9 (osc.)
7	Antenna Terminal, in series with 200 mmf.	600 kc	600 kc (144.5°) "A" band	L7 (osc.)‡
8	Repeat Step No. 6			

* Use minimum capacity peak if two peaks can be obtained.

† Rock the gang condenser slightly, and use the maximum capacity peak if two peaks can be obtained with trimmer C14. Check to determine that C8 has been adjusted to the correct peak by turning the receiver to 5.19 mc (50°), where a weaker signal should be received.



†† Use minimum capacity peak if two peaks can be obtained. Check to determine that C5 has been adjusted to the correct peak by turning the receiver dial to 19.09 mc (29.5°), where a weaker signal should be received.

‡ Rock gang condenser slightly while peaking L7 for maximum output.

NOTE: Oscillator tracks 455 kc above the signal on all bands.

USED ALSO WITH MODEL 8Q1


Victrola Attachment (Record Player).—Terminals are provided on the rear of the chassis for convenient connection to a Victrola Attachment (record player) such as the RCA R93 and R94 series. A stock No. 9824 switch may be used to change from radio to record player. The connections of this switch are shown. In the event that a No. 9824 switch is not available, a double-pole double-throw toggle switch may be used.

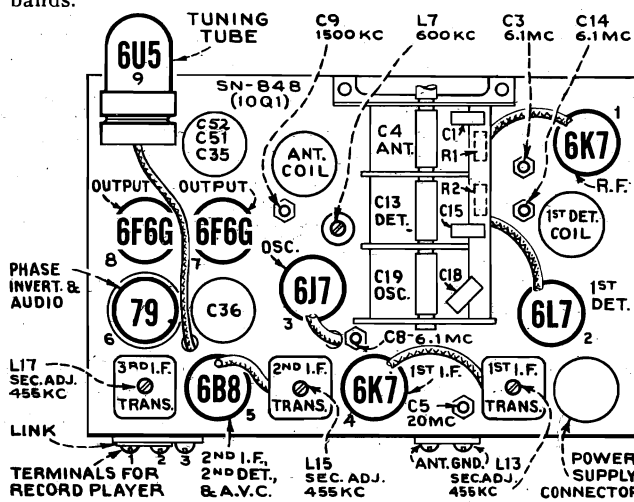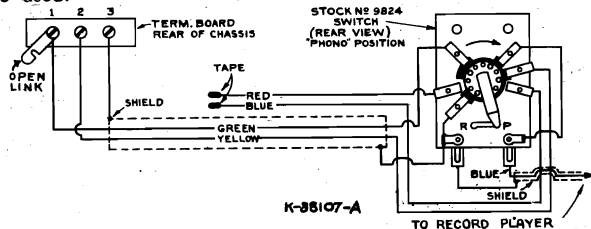

Top View, Showing Location of Tubes and Trimmers

RCA MFG. CO., INC.

MODEL U10, Chassis RC-418B
Schematic, Alignment, Tuner

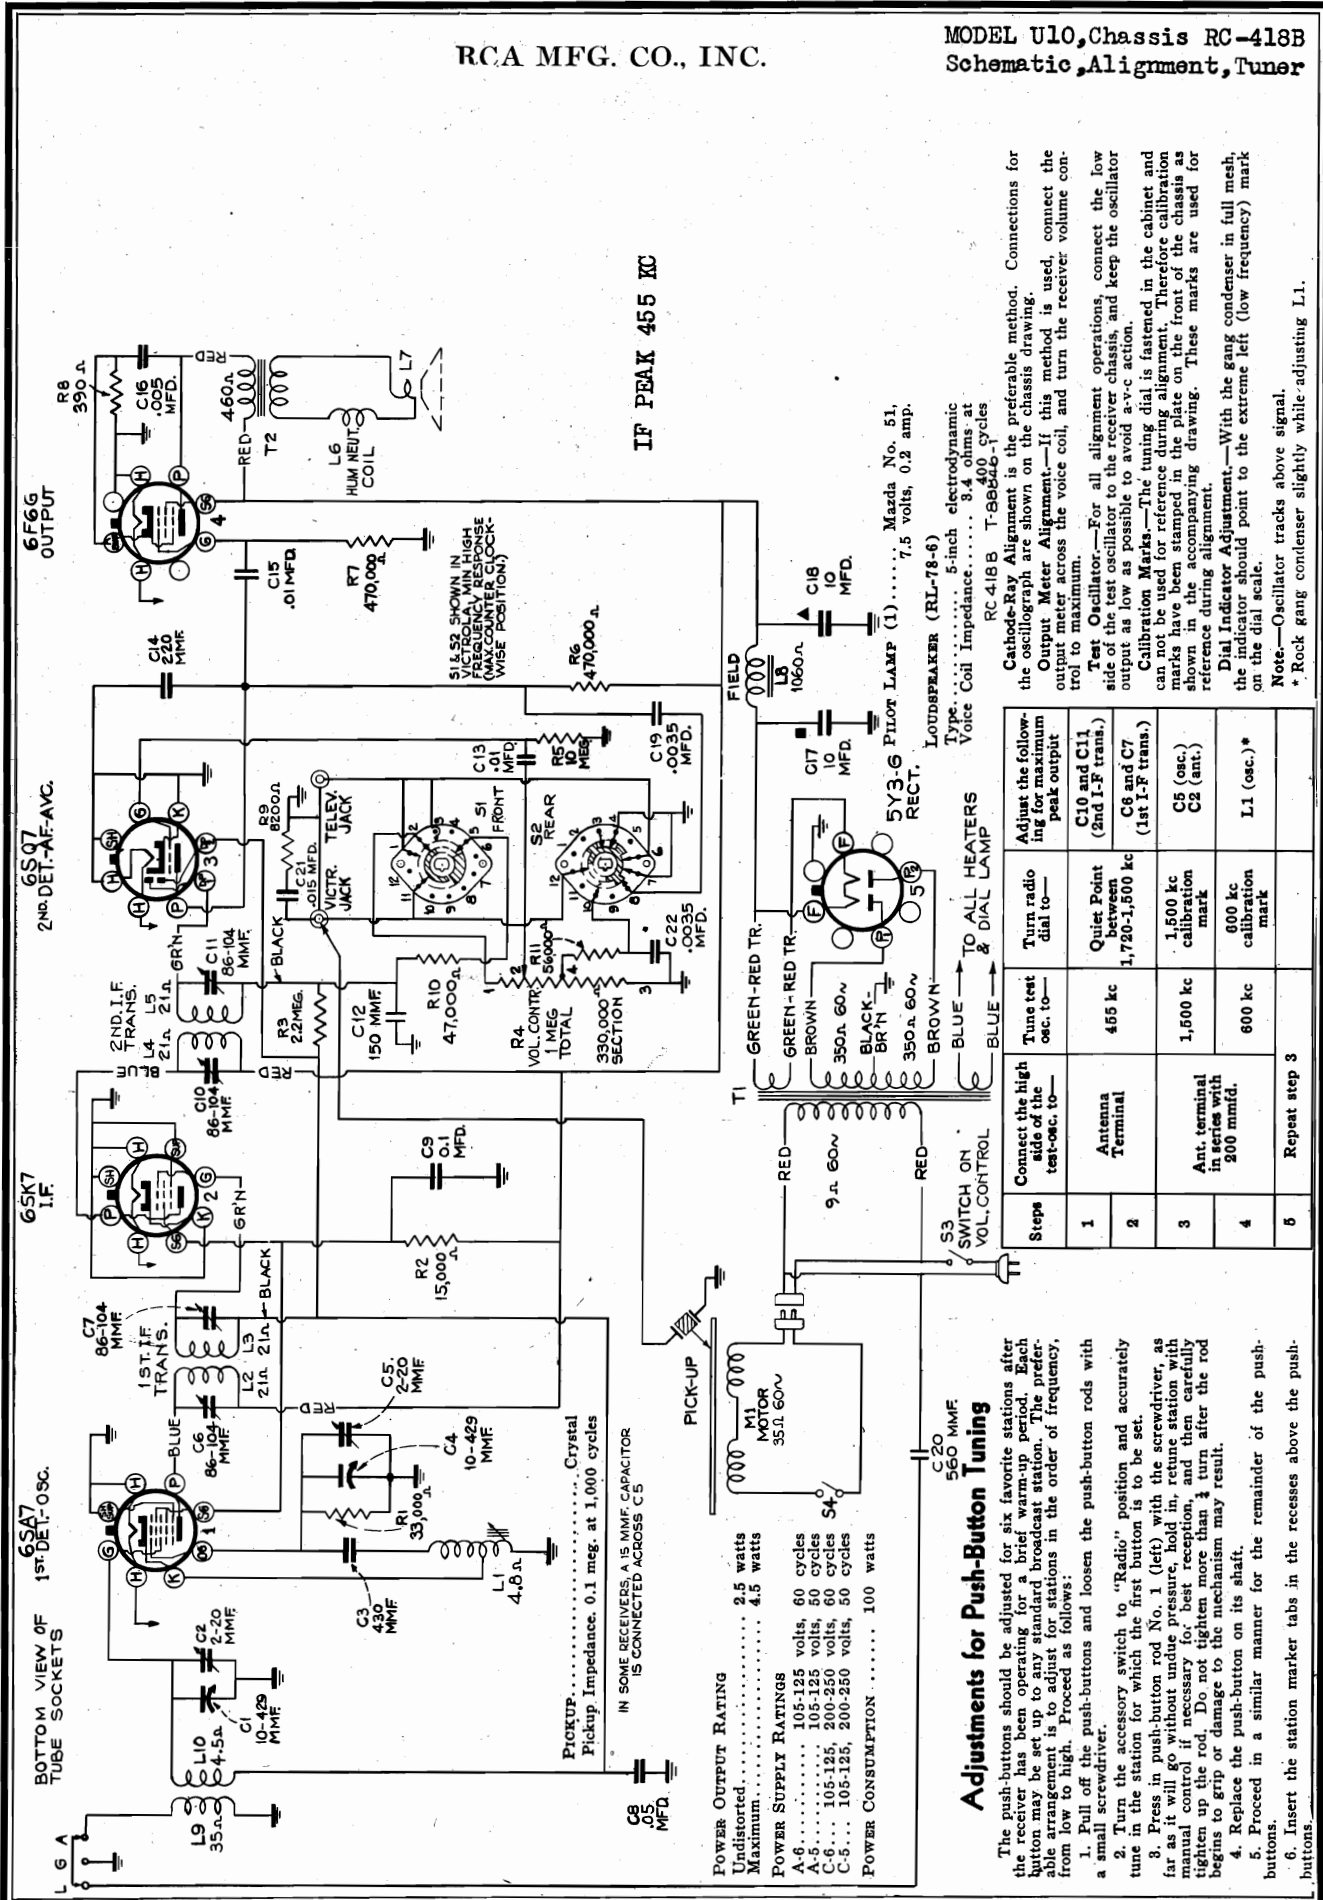

IF PEAK 455 KC

- POWER OUTPUT RATING**
 Undistorted..... 2.5 watts
 Maximum..... 4.5 watts
- POWER SUPPLY RATINGS**
 A-6..... 105-125 volts, 60 cycles
 A-5..... 105-125 volts, 50 cycles
 C-6..... 105-125, 200-250 volts, 60 cycles
 C-5..... 105-125, 200-250 volts, 50 cycles
- POWER CONSUMPTION** 100 watts

Adjustments for Push-Button Tuning

The push-buttons should be adjusted for six favorite stations after the receiver has been operating for a brief warm-up period. Each button may be set up to any standard broadcast station. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:

1. Pull off the push-buttons and loosen the push-button rods with a small screwdriver.
2. Turn the accessory switch to "Radio" position and accurately tune in the station for which the first button is to be set.
3. Press in push-button rod No. 1 (left) with the screwdriver, as far as it will go without undue pressure. Loosen the station fully manual control if necessary for "best" reception and then retighten up the rod. Do not tighten more than 1/4 turn after the rod begins to grip or damage to the mechanism may result.
4. Replace the push-button on its shaft.
5. Proceed in a similar manner for the remainder of the push-buttons.
6. Insert the station marker tabs in the recesses above the push-buttons.

Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn ratio dial to—	Adjust the following for maximum peak output
1	Antenna Terminal	455 kc	Quiet Point between 1,720-1,500 kc	C10 and C11 (2nd I-F trans.)
2				C6 and C7 (1st I-F trans.)
3	Ant. terminal in series with 300 mmfd.	1,500 kc	1,500 kc calibration mark	C5 (osc.) C2 (ant.)
4		600 kc	600 kc calibration mark	L1 (osc.)*
5	Repeat step 3			

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown on the chassis drawing.

Output Meter Alignment—If this method is used, connect the output meter across the voice coil, and turn the receiver volume control to maximum.

Test Oscillator—For all alignment operations, connect the low side of the test oscillator to the receiver chassis, and keep the oscillator output as low as possible to avoid a-v-c action.




Calibration Marks—The tuning dial is fastened in the cabinet and can not be used for reference during alignment. Therefore calibration marks have been stamped in the plate on the front of the chassis as shown in the accompanying drawing. These marks are used for reference during alignment.

Dial Indicator Adjustment—With the gang condenser in full mesh, the indicator should point to the extreme left (low frequency) mark on the dial scale.

Note—Oscillator tracks above signal.
 * Rock gang condenser slightly while adjusting L1.


MODEL U10, Chassis RC-418B
 Chassis Wiring, Voltage
 Socket, Trimmers, Lead Dress
 Phono., Drive Cord Data

RCA MFG. CO., INC.

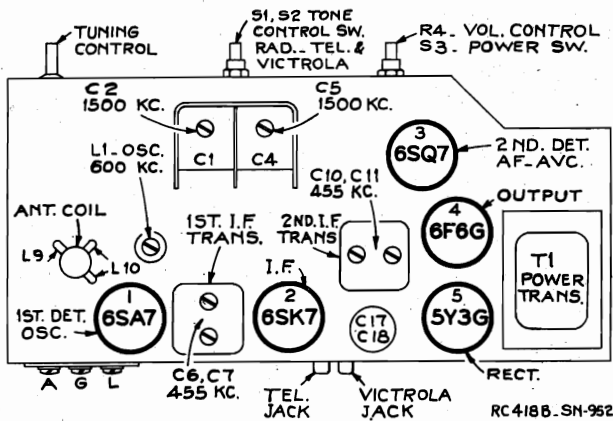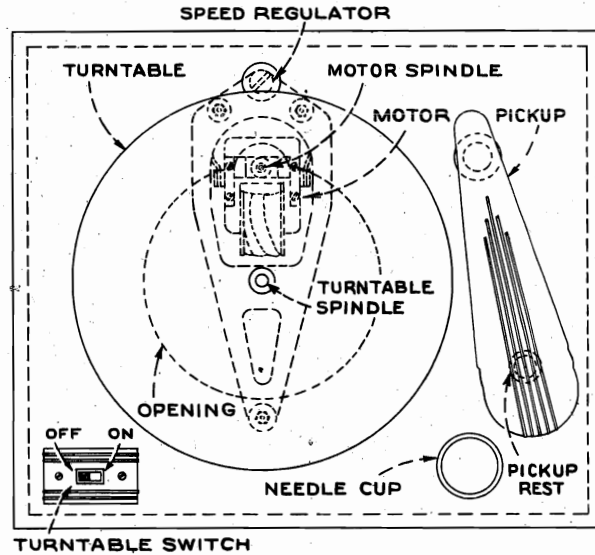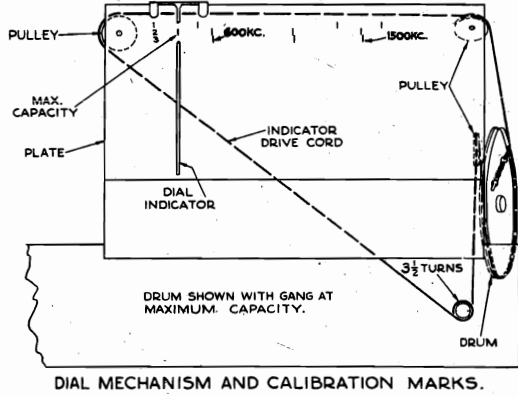

PRECAUTIONARY LEAD DRESS.—

1. Power cord leads must be dressed up away from 6SQ7 socket, and toward end of chassis.
2. Green lead 2nd I.F. to 6SQ7 must be dressed against base.
3. Blue lead 2nd I.F. to 6SK7 must be dressed close to base.
4. Green and blue leads from 1st I.F. transformer must be dressed close to base.
5. Red lead from "L" terminal on antenna board to 5Y3G socket must be dressed against base.
6. Green lead from gang to 6SA7 socket must be dressed toward side apron away from other parts.

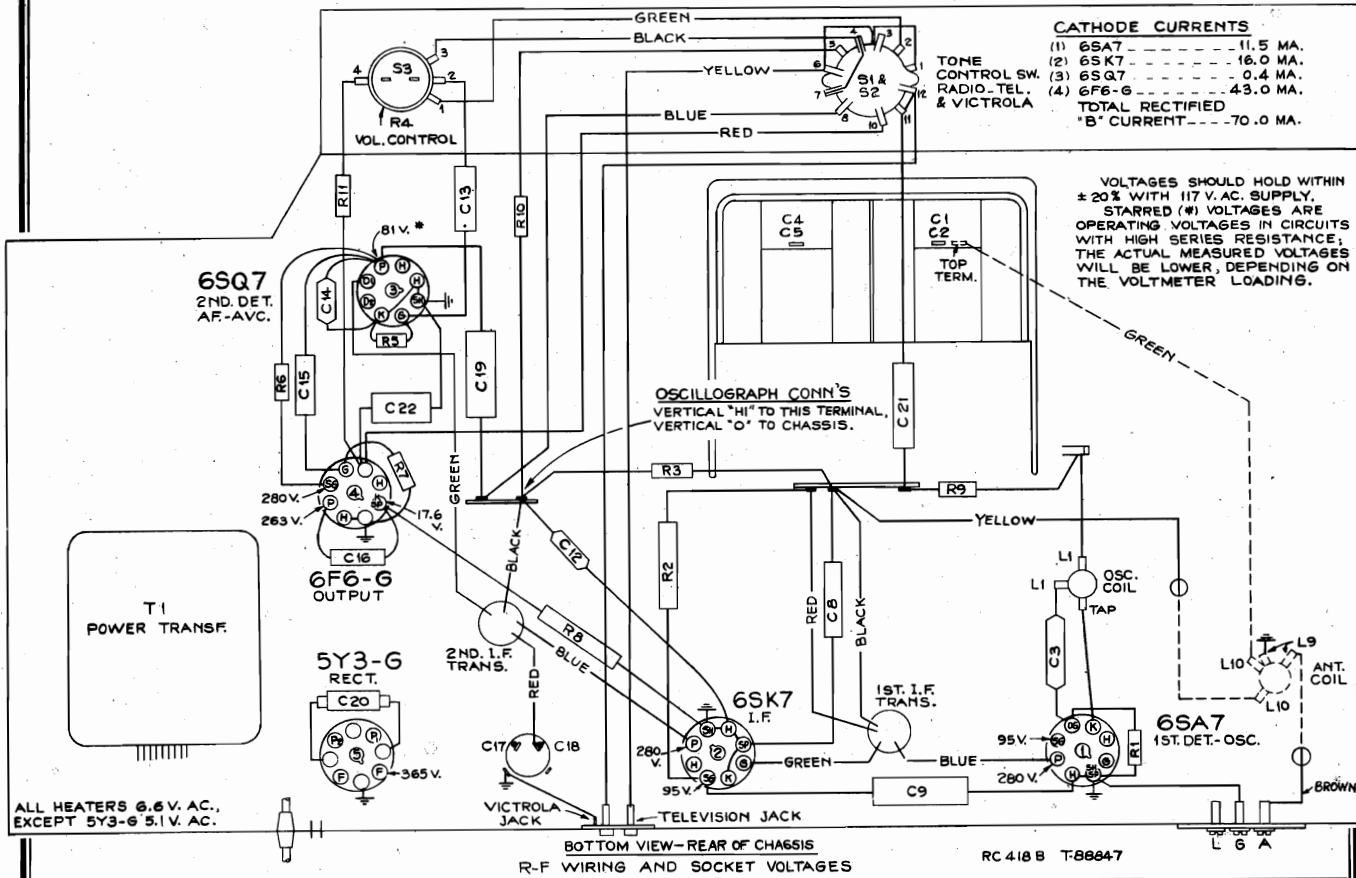

CATHODE CURRENTS

(1) 6SA7	11.5 MA.
(2) 6SK7	16.0 MA.
(3) 6SQ7	0.4 MA.
(4) 6F6-G	43.0 MA.
TOTAL RECTIFIED "B" CURRENT	70.0 MA.

VOLTAGES SHOULD HOLD WITHIN ± 20% WITH 117 V. AC. SUPPLY. STARRED (*) VOLTAGES ARE OPERATING VOLTAGES IN CIRCUITS WITH HIGH SERIES RESISTANCE; THE ACTUAL MEASURED VOLTAGES WILL BE LOWER, DEPENDING ON THE VOLTMETER LOADING.

ALL HEATERS 6.6 V. AC., EXCEPT 5Y3-G 5.1 V. AC.

RCA MFG. CO., INC. Alignment Procedure

MODELS 11Q4, 11QK, 11QU
Alignment, Trimmers
Socket

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.


Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver ground terminal (G), and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 0° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The surface of the drum must be flush with the end of the gang-condenser shaft. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "0°" mark on the calibration scale when the plates are fully meshed.

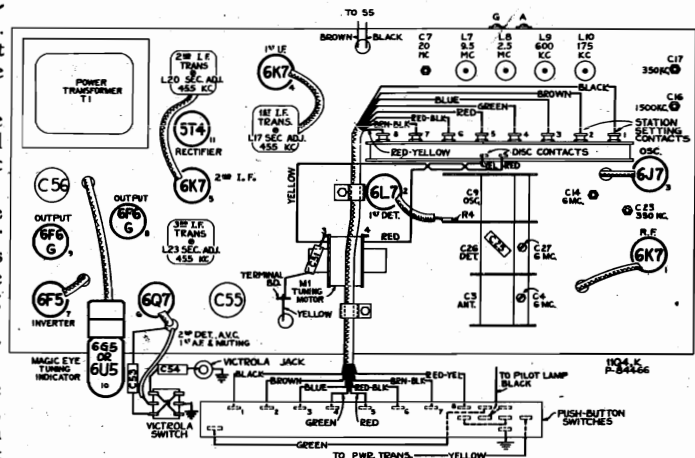

Top View, Showing Location of Tubes and Trimmers

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the left-hand end mark on the dial scales and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.


Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following to obtain maximum output
1	Turn fidelity control counter-clockwise (sharp), and sensitivity switch at minimum (open).			
2	6K7 2nd I-F grid cap in series with .01 mfd.	455 kc	"A" band, Quiet Point between 550-750 kc	L22 and L23 (3rd I-F Trans.)
3	6K7 1st I-F grid cap in series with .01 mfd.			L19 and L20 (2nd I-F Trans.)
4	6L7 1st-det. grid cap in series with .01 mfd.			L16 and L17 (1st I-F Trans.)
5	Turn fidelity switch clockwise (broad) and check I-F response which should be a double-peaked curve. Leave fidelity counter-clockwise (sharp) for all of the following steps.			
6	Antenna Terminal in series with 300 ohms	2.5 mc	2.5 mc ("B") 24½°	L8 (osc.)
7		6.0 mc	6.0 mc ("B") 147°	C14 (osc.) Use minimum capacity peak C27 (det.) Use maximum capacity peak C4 (ant.) Use maximum capacity peak*
8		9.5 mc	9.5 mc ("C") 55°	L7 (osc.)
9		20 mc	20 mc ("C") 153°	C7 (osc.) Use minimum capacity peak*
10	Antenna Terminal in series with 200 mmf.	600 kc	600 kc ("A") 24½°	L9 (osc.) Rock gang
11		1,500 kc	1,500 kc ("A") 151½°	C16 (osc.)
12	Repeat steps 10 and 11.			
13	Antenna Terminal in series with 200 mmf.	175 kc	175 kc ("X") 53½°	L10 (osc.)
14		350 kc	350 kc ("X") 145½°	C17 (osc.) C23 (det.)
15	Repeat steps 13 and 14.			

* Check to determine that the oscillator trimmer has been adjusted to the correct peak by tuning the receiver approximately 910 kc lower, where a weaker signal should be received.



NOTE: The oscillator tracks 455 kc above the signal on all bands.

RCA MFG. CO., INC.

MODELS 12Q4, 12QK, Chassis RC-338
12QU, Chassis RC-338A
Schematic, Changes

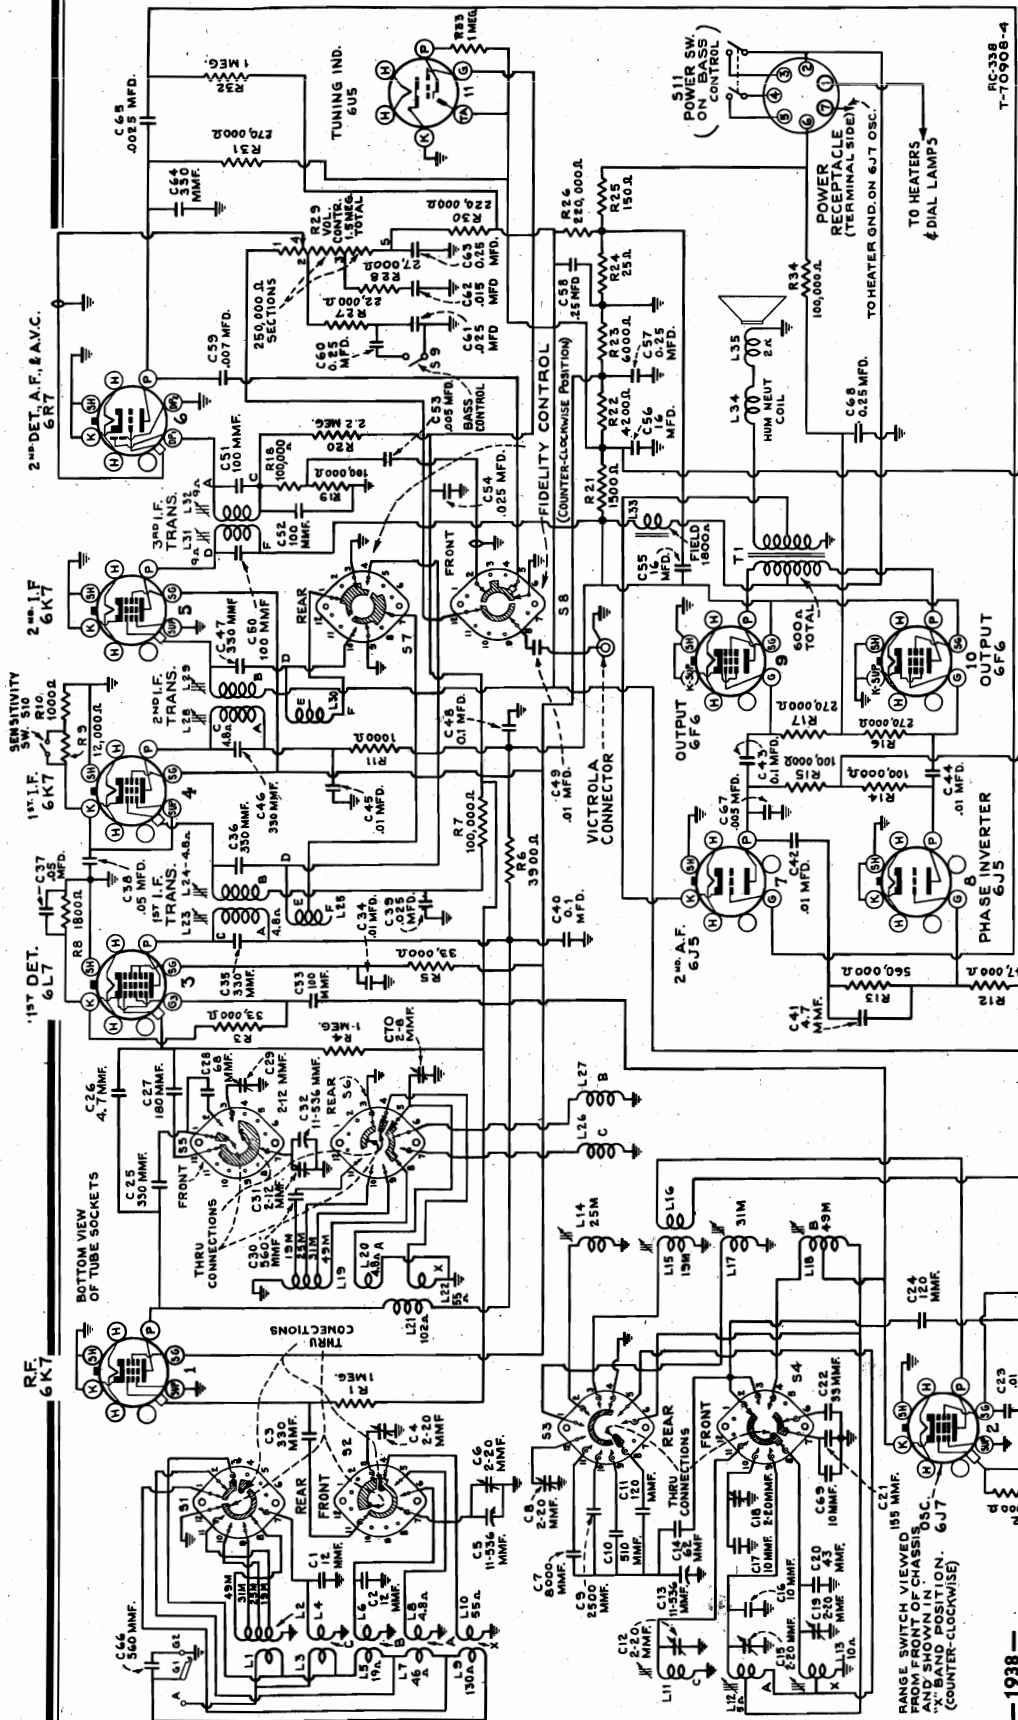

- RADIOTRON COMPLEMENT**
- (1) RCA-6K7..... R-F Amplifier
 - (2) RCA-6I7..... Oscillator
 - (3) RCA-6L7..... 1st Detector
 - (4) RCA-6K7..... 1st I-F Amplifier
 - (5) RCA-6K7..... 2nd I-F Amplifier
 - (6) RCA-6R7..... 2nd Det., A.V.C., and 1st A-F Amplifier
 - (7) RCA-6J5..... 2nd A-F Amplifier
 - (8) RCA-6J5..... Phase Inverter
 - (9) RCA-6F6..... Power Output
 - (10) RCA-6F6..... Power Output
 - (11) RCA-3U4-G (In PSU 10A, 10B, 10C A-C power supply unit)*..... Rectifier
 - (12) RCA-3T4 (In PSU 10E D-C power supply unit)..... Rectifier
- (For use with 12Q4 or 12QK only)

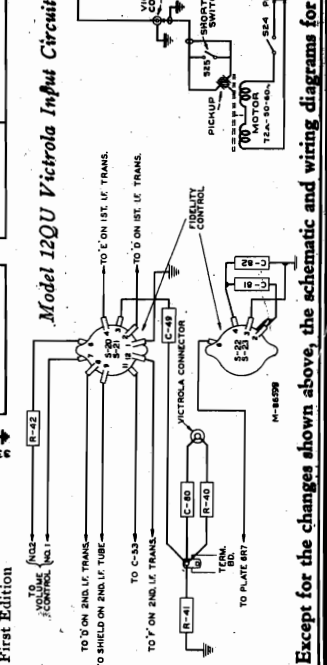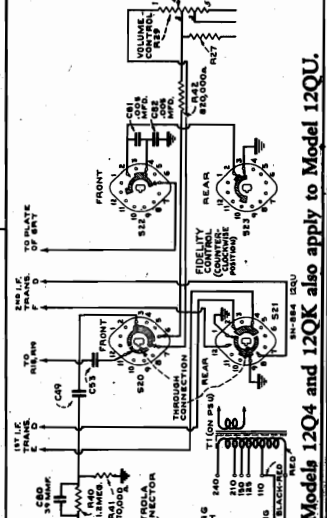



MODELS 12Q4, 12QK, 12QU
Chassis Wiring, Voltage

RCA MFG. CO., INC.


Load Dress

Precautionary Lead Dress.—

- The following leads should be dressed away from other parts and chassis:
 - All leads to the bottom of the tuning gang.
 - All capacitor leads to oscillator section of range switch.
 - Yellow lead from lug No. 10 on S4 to dummy lug on "A" oscillator coil.
 - Yellow lead from pin No. 8 on 6J7 oscillator socket to terminal board.
 - Yellow and green leads from "X" detector coil (should be dressed away from each other as well as other parts).
- Dress all leads away from phono jack and C49.
- Twisted leads of "B" oscillator coil must be soldered together within 1/4-inch of coil tube.
- The brown, black, and blue leads in back of the oscillator coils should be dressed away from coil windings.
- R13 and C41 must be dressed away from pin No. 7 of 6J5 (tube No. 7).

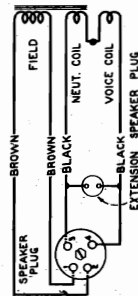

Connections of Loudspeaker and Cable

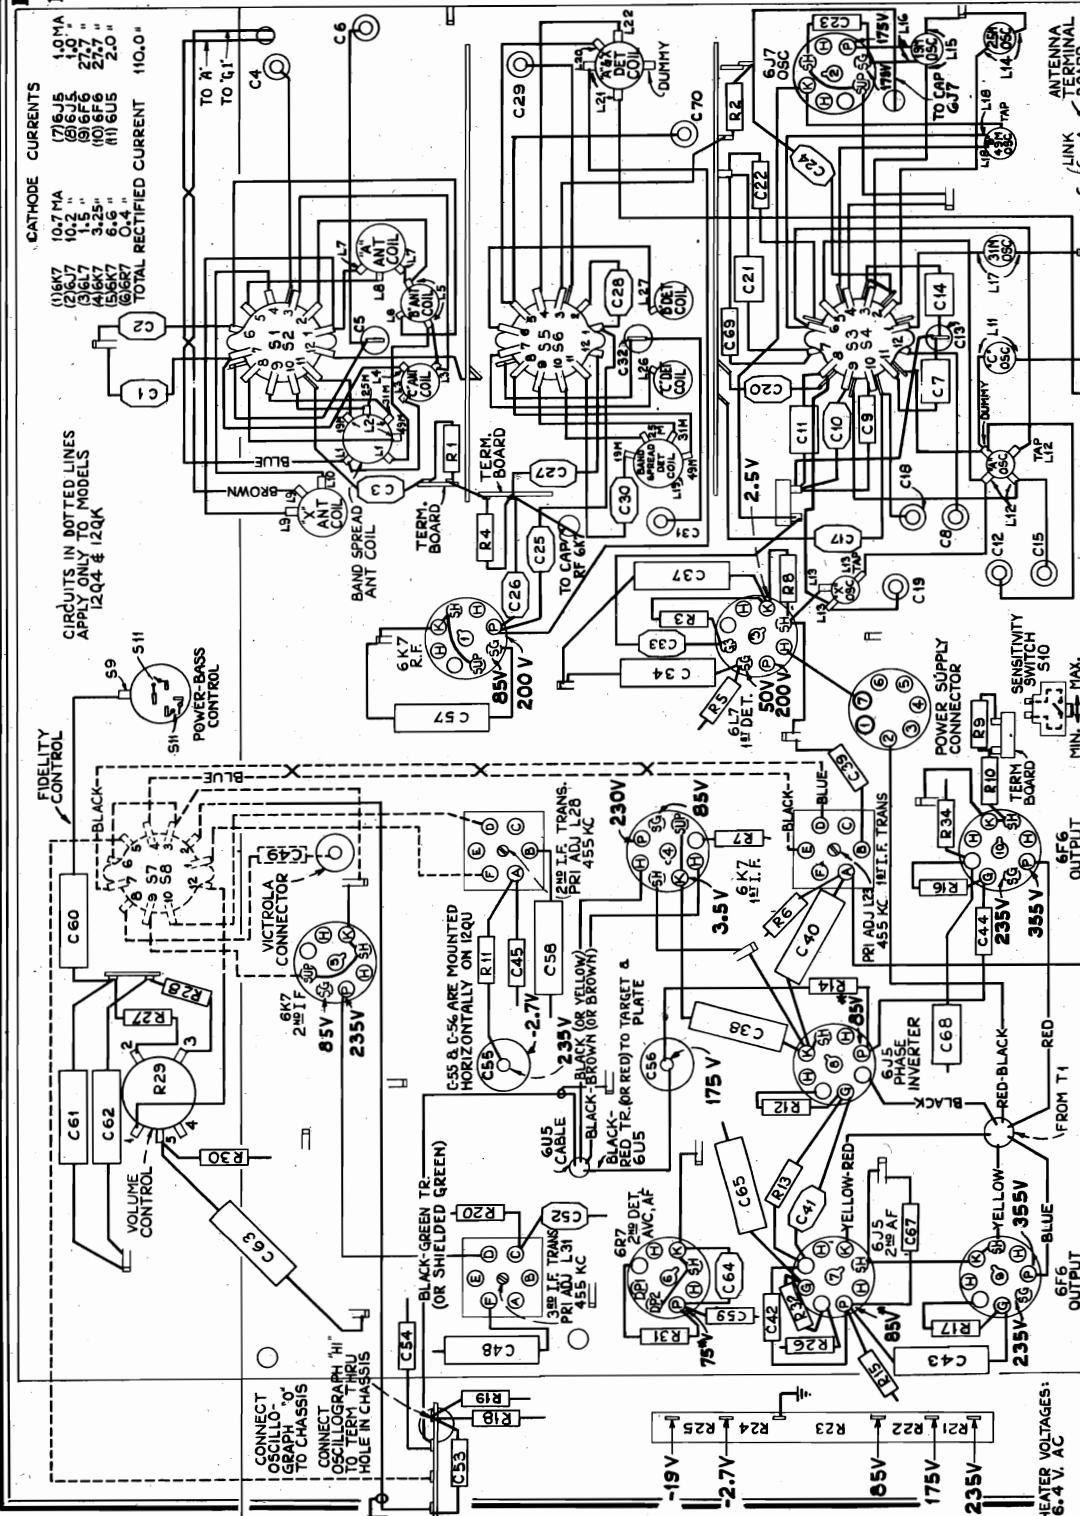

T-98927
RC-336

R-F Wiring Diagram and Socket Voltages, Models 12Q4 and 12QK

Model 12QU is the same except for the Victrola connections, which are shown in a separate diagram.

* NOTE: Values with star (*) are operating voltages in circuits with high series-resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point, sensitivity switch at maximum (closed), and volume control at minimum. Values should hold within approximately $\pm 20\%$ with 117-volt a-c supply.

RCA MFG. CO., INC.

FOR POWER SUPPLY
DATA SEE INDEX

MODELS 12Q4, 12QK, 12QU
Socket, Trimmers
Drive Cord Data
Power Supply Notes

Specifications

FREQUENCY RANGES

Long Wave ("X" Band).....	150-400 kc (2,000-750 m)	49 Meter Spread Band	5.92-6.23 mc
Medium Wave ("A" Band).....	530-1,625 kc (566-184.6 m)	31 Meter Spread Band	9.48-9.70 mc
Short Wave 1 ("B" Band).....	2.3-7.0 mc (130-42.8 m)	25 Meter Spread Band	11.68-11.94 mc
Short Wave 2 ("C" Band).....	7.0-22 mc (42.8-13.6 m)	19 Meter Spread Band	15.08-15.39 mc

INTERMEDIATE FREQUENCY..... 455 kc

PHONOGRAPH (Model 12QU only)



Type	Automatic
Record Capacity.....	Eight 10-inch or seven 12-inch
Turntable Speed.....	78 r.p.m. (adjustable)
Type Pickup.....	Crystal
Pickup Impedance.....	100,000 ohms at 1,000 cycles

PILOT LAMPS
Models 12Q4 and 12QK..... One 6.3-volt, 0.15-amp., Mazda No. 47; two 6.3-volt, 0.25 amp., Mazda No. 44
Model 12QU..... One 6.3-volt, 0.15-amp., Mazda No. 47; three 6.3-volt, 0.25 amp., Mazda No. 44

POWER OUTPUT RATING	LOUDSPEAKER (RL-70H-3)
Undistorted.....	Type..... 12-inch electrodynamic
Maximum.....	Voice Coil Impedance at 400 cycles..... 2.2 ohms

POWER SUPPLY RATINGS	12Q4, 12QK	Radio	12QU*	Total
A-C Ratings				
With PSU 10A Power Supply Unit.....	105-125 volts, 50-60 cycles	125 watts	125 watts	150 watts
With PSU 10B Power Supply Unit.....	105-125 volts, 25-60 cycles	125 watts	125 watts	150 watts
With PSU 10C Power Supply Unit.....	105-130, 140-160, 200-250 volts, 50-60 cycles	125 watts	125 watts	150 watts

D-C Ratings
With PSU 10E Power Supply Unit..... 105-125, 210-250 volts D-C..... (See text for current consumption ratings)
* Model 12QU may be used with PSU 10A or 10C only.

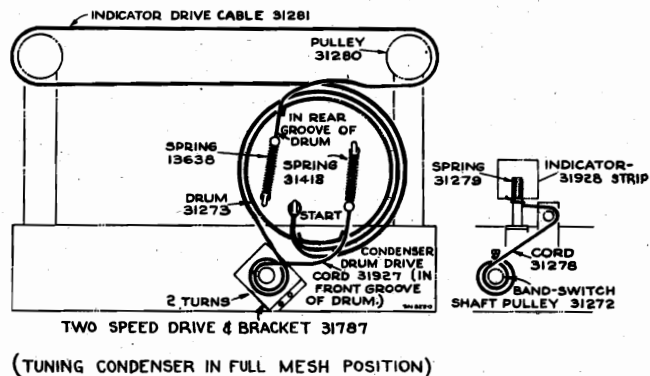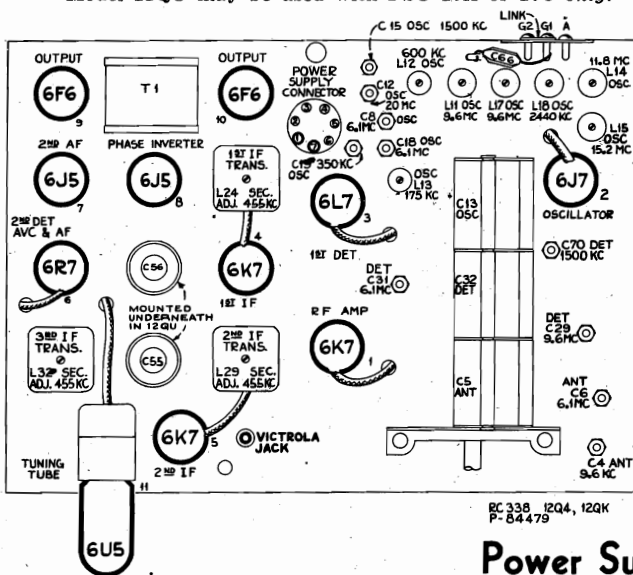


Above—Arrangement of Drive Cords for Tuning Condenser and Dial Indicator

At Left—Location of Tubes and Trimmers


Power Supply Units

Models 12Q4, 12QK, and 12QU have seven-prong connectors for connection to a separate power supply unit. Units are available in different ratings for a.c. and d.c. operation, as listed under "Power Supply Ratings" in the electrical specifications. It should be noted, however, that Model 12QU may be used with a.c. units PSU 10A or 10C only.
When Model 12Q4 or Model 12QK is used with a d.c. Power Supply Unit, the measured current drain is 0.7

amperes from a 234 volt supply, and 1.4 amperes from a 117 volt supply. These current values may vary as much as 30% when measured by various types of ammeters, due to the rectangular wave-shape of the vibrator current.
Service data, diagrams, and replacement parts lists for the power supply units are printed in separate service data sheets which should be referred to for further information.

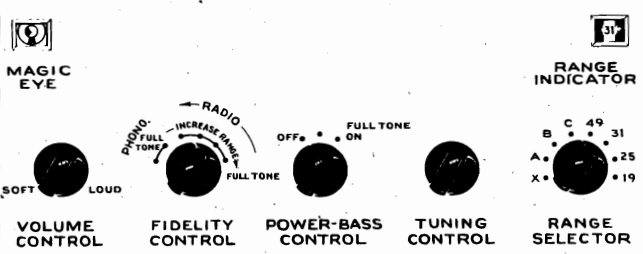

Location of Controls, Models 12Q4 and 12QK

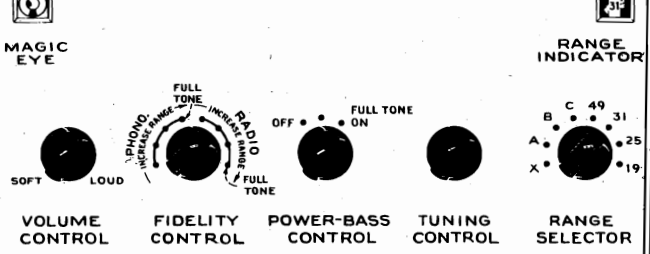

Location of Controls, Model 12QU

MODELS 12Q4, 12QK, 12QU
Alignment, Notes

RCA MFG. CO., INC.

Using RCA Stock No. 150 Test Oscillator.—When using this oscillator for spread-band alignment, insert an operating plug in the "EXT. MOD." jack and set the test oscillator dial 800 kc lower than the desired frequency for the four lower frequency ranges, and 800 kc higher than the desired frequency for the two high ranges. This provides an unmodulated signal of the desired frequency and the magnetic eye may be used as an output indicator for this unmodulated signal.

this range by means of a crystal calibrator (RCA Stock No. 9572), or by zero-beating against standard broadcast stations.

When a test oscillator is employed for spread-band alignment, a final check should be made on actual reception of short-wave stations of known frequency, and the magneti-core oscillator coil for each band should be re-adjusted so that the stations come in at the correct points on the dial. For additional information, refer to booklet "RCA Victor Receiver Alignment."

Alignment Table


Step	Connect high side of test-osc. to—	Tune test osc. to—	Turn radio dial to—	Adjust following for maximum peak output	Check Selectivity Curve No.
1	Turn fidelity control to 3rd position from maximum clockwise, sensitivity switch min. (open)				
2	6K7 2nd I.F. grid cap in series with .01 mfd.		"A" band	L31 and L32 3rd I-F Trana.	1
3	6K7 1st I.F. grid cap in series with .01 mfd.	450 kc	Quiet Point between 550-750 kc	L28 and L29 2nd I-F Trana.	2
4	6L7 1st-det. grid cap in series with .01 mfd.			L29 and L24 1st I-F Trana.	3
5	Turn fidelity control one position back from full clockwise				4
5A	Turn fidelity control full clockwise				5
6	Turn fidelity control to 3rd position from maximum clockwise for the following operations				
7	Antenna Terminal, in series with 200 mmfd.	2,440 kc	"B" band 2.44 mc (16')	L18 (osc.) †	
8	Antenna Terminal, in series with 300 ohms	6,100 kc	"B" band 6.1 mc (150')	C18 (osc.) C31 (det.)** C6 (ant.)**	
9		600 kc	"A" band 600 kc (8')	L12 (osc.) Rock Gang	
10		1,500 kc	"A" band 1,600 kc (108')	C15 (osc.) C70 (det.)	
11	Antenna Terminal, in series with 200 mmfd.	600 kc	"A" band 600 kc (8')	L12 (osc.) Rock Gang	
12		175 kc	"X" band 175 kc (54')	L13 (osc.) Rock Gang	
13		390 kc	"X" band 350 kc (147')	C19 (osc.)	
14		175 kc	"X" band 175 kc (54')	L13 (osc.) Rock Gang	
15		9,600 kc	"C" band 9.6 mc (58.5')	L11 (osc.) ††	
18		20,000 kc	"C" band 20 mc (137')	C12 (osc.)	
17	Antenna Terminal, in series with 300 ohms	9,600 kc	"31M" band 9.6 mc (106')	L17 (osc.) C29 (det.) C4 (ant.)	
18*		6,100 kc	"25M" band 6.1 mc (106')	C8 (osc.)	
19		11,800 kc	"25M" band 11.8 mc (90')	L14 (osc.)	
20		15,200 kc	"19M" band 15.2 mc (78')	L15 (osc.)	

* NOTE:
In step 18 only, the oscillator tracks on low side of signal; use maximum capacity peak (plunger in) if two peaks can be obtained. All other oscillator adjustments use minimum inductance or capacity peak (plunger out), if two peaks can be obtained.

** Use maximum capacity peak if two can be obtained.

† Before adjusting L18, set C18 so it projects approximately 2 inches above top of chassis.

†† Before adjusting L11, set C12 so it projects approximately 2 inches above top of chassis.

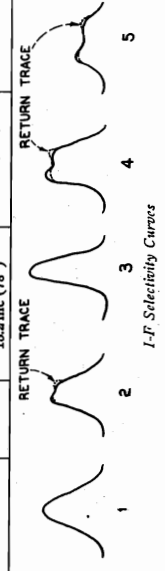

I-F Selectivity Curves

MODEL 12QU
I-F Channel Audio Channel

Position	For Use On	Min. highs	Max. highs
1 (Extreme clockwise)	Victrola	—	—
2	Victrola	—	Medium No. 1
3	Victrola	—	Max. highs
4	Distant Stations	Sharp	Min. highs
5	Distant Stations	Sharp	Max. highs
6	Local and Distant Stations	Medium	Max. highs
7	Local Stations	Broad	Max. highs
8 (Extreme Clockwise)	Local Stations	Broad	Max. highs

MODELS 12QK AND 12Q4
I-F Channel Audio Channel

Position	For Use On	Min. highs	Max. highs
1 (Extreme clockwise)	Record Player	—	—
2	Record Player	—	Max. highs
3	Distant Stations	Sharp	Min. highs
4	Distant Stations	Sharp	Max. highs
5	Local and Distant Stations	Medium	Max. highs
6 (Extreme Clockwise)	Local Stations	Broad	Max. highs

Miscellaneous Service Data

impedance extension speaker, it is advisable to use heavy cable.

A high-impedance magnetic-type speaker may be used in conjunction with a suitable coupling transformer such as RCA Stock No. 7853.

Victrola Attachment (second player)—A jack located on the top near the front of the chassis is provided for connecting a Victrola Attachment (second player) into the audio amplifying circuit on Models 12Q4 and 12QK. The cable running from the Victrola Attachment should be terminated in a Stock No. 31048 plug to fit the jack.

Antenna Connections.—Three terminals ("A," "G1," and "G2") are provided on the rear of the chassis. Connect the antenna to "A," Connect "G1" to a nearby ground. A link (especially on "X" band) open the link and connect "G2" separately to ground. This also applies when a d.c. power supply is used.

Plug for Extension Loudspeaker.—A two-contact female socket, equipped with a male plug, is connected across the output circuit on the loudspeaker to facilitate the connection of an extension loudspeaker if desired.

A permanent-magnet dynamic speaker, with voice-coil in a 2-ohm voice coil, is recommended. With a 2-ohm voice coil, the percentage of power delivered to the extension speaker will be decreased.

The RCA MI-6248 8-inch diameter Alnico permanent-magnet dynamic loudspeaker, which has a 2-ohm voice coil, and a power-handling capacity of 5 watts, is recommended. This speaker may be housed in the RCA MI-6292 sloping-front, walnut-finished wood housing.

The voice coil of the extension speaker should be connected to the male plug. The speaker should be used on any desired length, but with a long run, when using a low-

ALIGNMENT PROCEDURE

Alignment using the Cathode Ray Oscillograph is much the preferable method because of the variable selectivity features of these instruments. The curves shown illustrate the general shape of the I-F selectivity curves for different settings of the gain control. The curves should be properly aligned. Connections for the oscillograph are shown at the bottom view of the receiver chassis. Use short, unshielded leads to oscillograph, and well-shielded leads from test oscillator. If possible, use 30 or 40 kc sweep frequency for I-F alignment.

Output Meter Alignment.—If this method is used, connect meter across voice coil, and turn receiver volume control to maximum. Disregard steps 5 and 5A of alignment table. However, a listening check should be made to check operation of fidelity control, after receiver has been aligned.

Test Oscillator.—For all alignment operations connect the "A" side of test oscillator to chassis, the high side as indicated, and keep output as low as possible to avoid a-c-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is set at the station and cannot be used for references during alignment operations. The tuning dial is attached to the rear of the indicator-drive-cord drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the tuning dial. The 0° mark on the drum scale must be vertical, and the 90° mark on the gang-condenser shaft when the plates are fully meshed. The drum should be set by means of two set screws, which must be tightened securely when the drum is in the correct position.

To determine the corresponding frequency for any setting of the calibration scales, refer to the accompanying drawing which shows the dial with 0-180° calibration scales drawn at top and bottom.

Pointer for Calibration Scales.—Improve a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "0" mark on the calibration scale when the plates are fully meshed.




Dial Indicator Adjustment.—After fastening the chassis in the test set, the dial indicator to the drive cable with indicator on the left side, and turn the dial to the 0° mark on the scales, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

Spread-Band Alignment.—The most satisfactory method of aligning or checking the spread-band ranges is by reception of short-wave stations of known frequency, by adjusting the magneti-core oscillator coil for each band so that these stations come in at the correct points on the dial. In exceptional cases, when the set is being serviced in a location where the noise level is high enough to prevent reception of short-wave stations, a test-oscillator may be used for alignment, but an extremely high degree of accuracy is required in the frequency settings of the test-oscillator, as a slight error will produce considerable inaccuracy on the spread-band dial. The frequency settings of the test-oscillator may be checked by one or both of the following methods:


- Determine the exact dial settings of the test-oscillator (from the dial indicator) for the spread-band alignment frequencies by zero-beating the test-oscillator against short-wave stations of known frequency.
- Use harmonics of the standard broadcast range of a test-oscillator, first checking the frequency settings on a

RCA MFG. CO., INC.

MODEL 11QU
MODEL 12QU
Record Changer Assembly

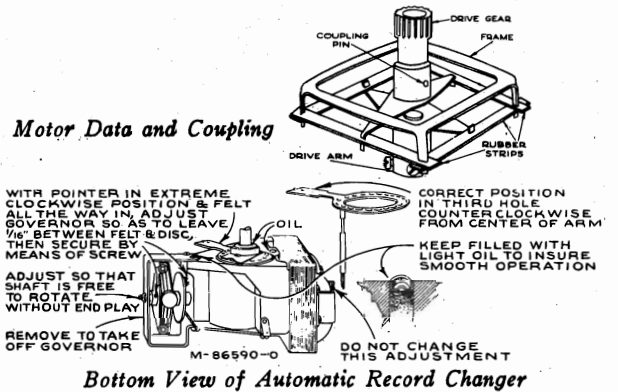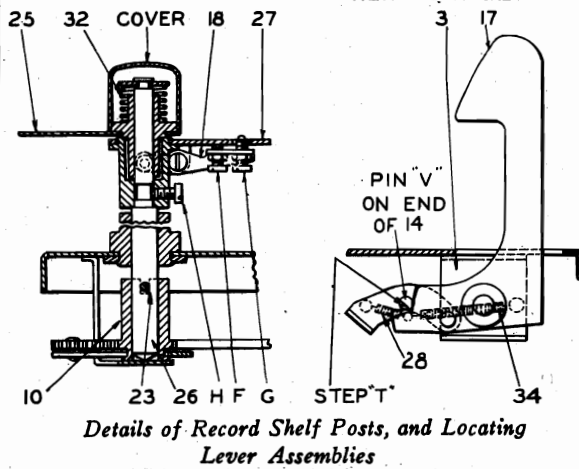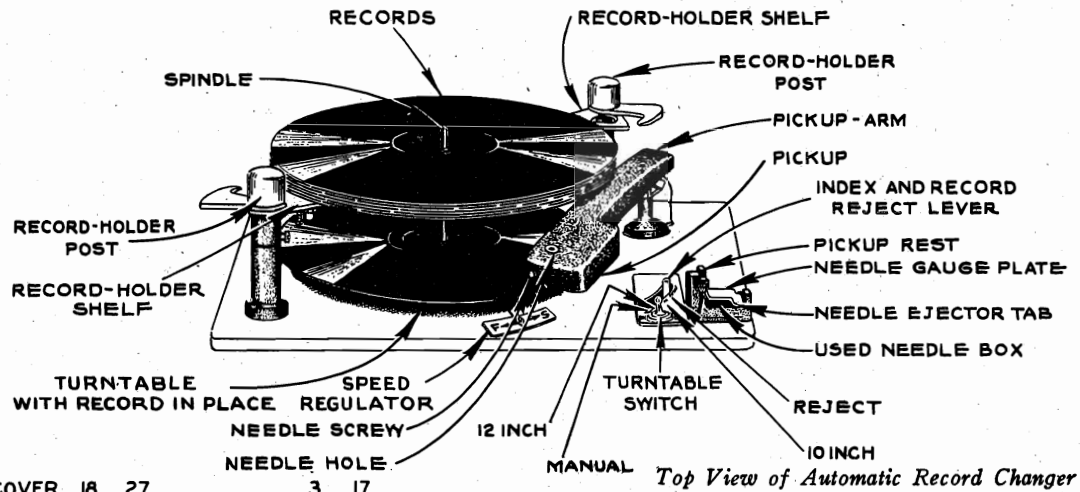

NOTE: Numbers refer to parts—letters refer to adjustments.

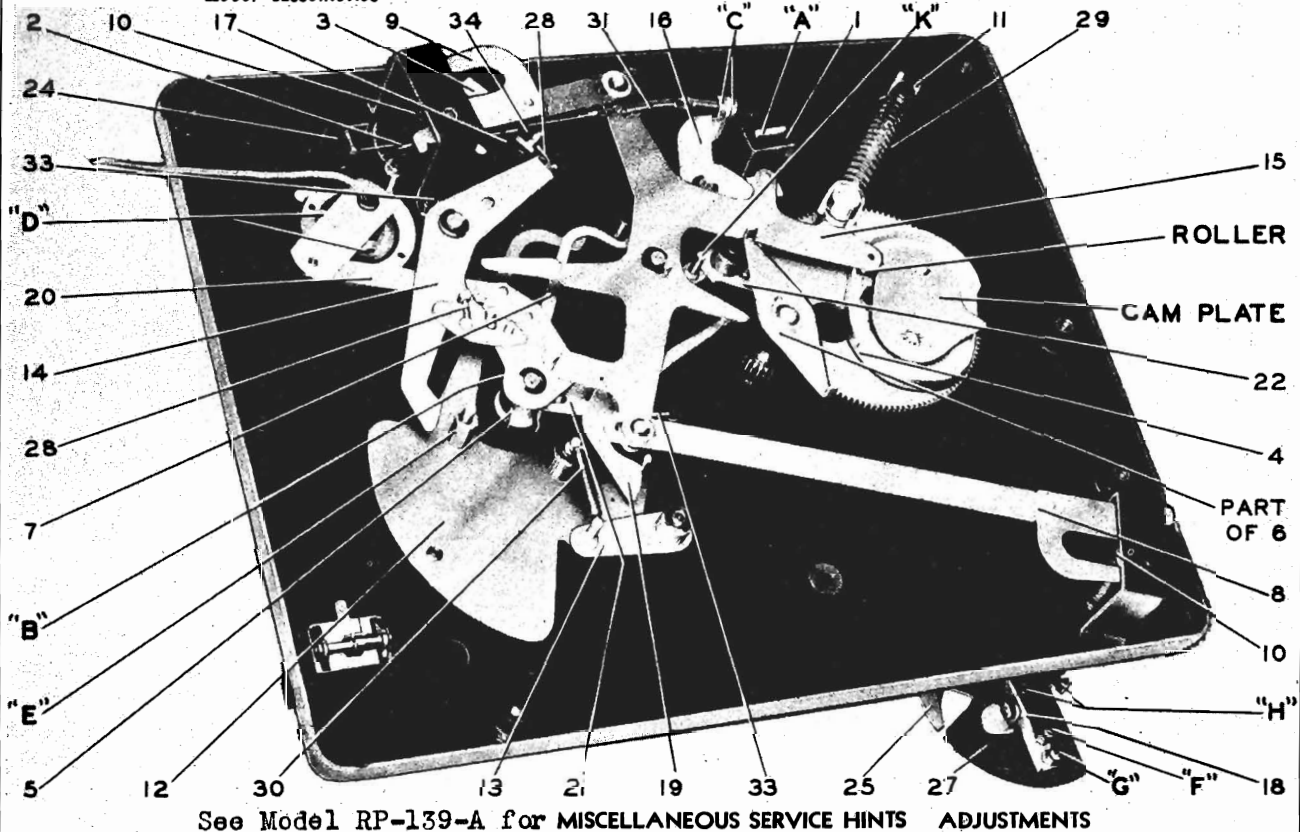


See Model RP-139-A for MISCELLANEOUS SERVICE HINTS ADJUSTMENTS

RCA MFG. CO., INC.

MODEL U12, Chassis RC425A
Schematic, Socket, Trimmers
Lead Dress, Voltage

FOR TUNER SEE
PAGE 11-41

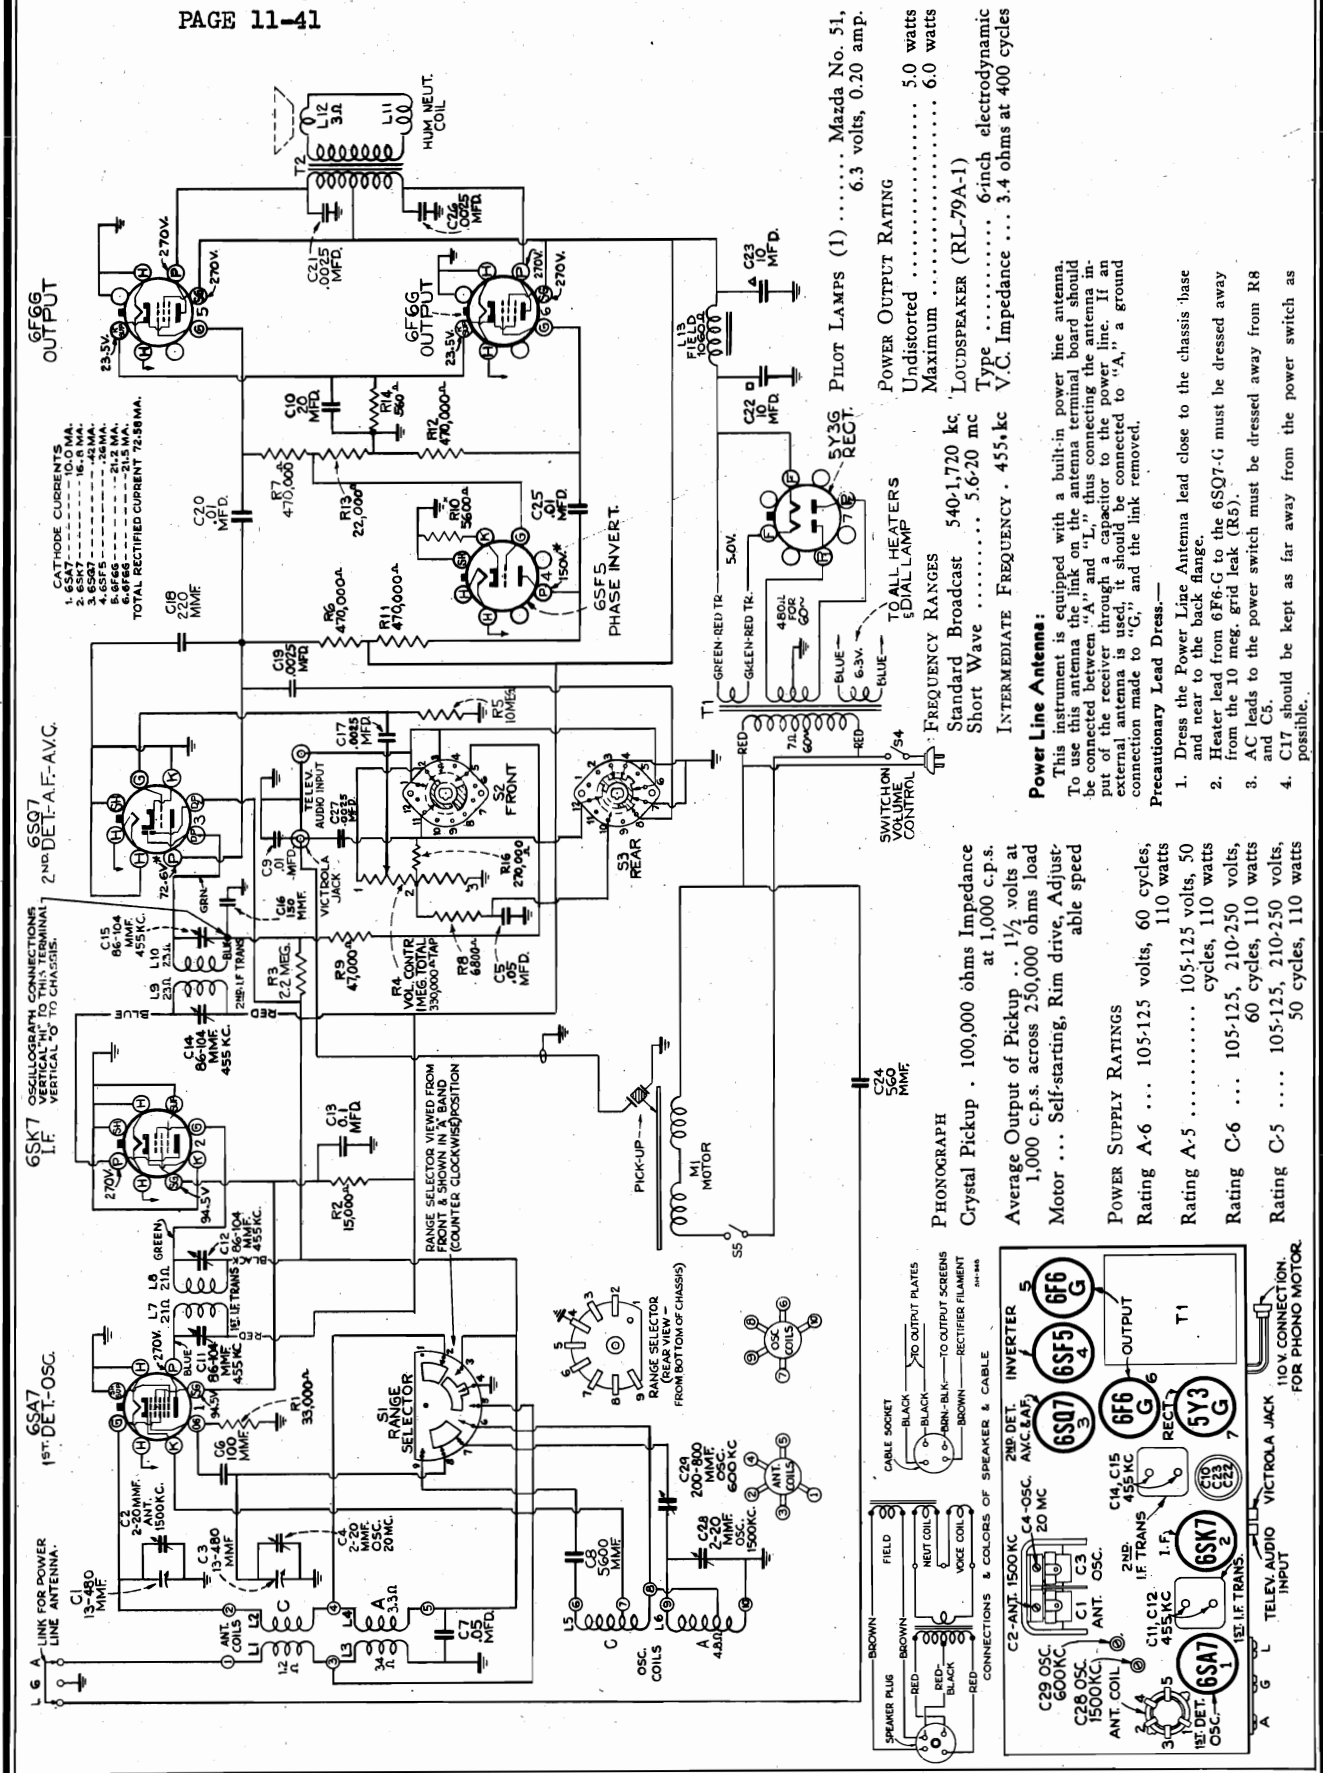

CATHODE CURRENTS

1. 6SA7	0.1 MA.
2. 6SK7	16.0 MA.
3. 6SQ7	42.0 MA.
4. 6SF5	21.2 MA.
5. 6F6	21.5 MA.
6. 6F6G	21.5 MA.

TOTAL RECTIFIED CURRENT 72.96 MA.

5Y3G PILOT LAMPS (1) Mazda No. 51,
6.3 volts, 0.20 amp.


POWER OUTPUT RATING
Undistorted 5.0 watts
Maximum 6.0 watts

FREQUENCY RANGES
Standard Broadcast 540-1,720 kc, LOUSPEAKER (RL-79A-1)
Short Wave 5.6-20 mc
INTERMEDIATE FREQUENCY . 455, kc
Type 6-inch electrodynamic
V.C. Impedance ... 3.4 ohms at 400 cycles

- Power Line Antenna:**
This instrument is equipped with a built-in power line antenna. To use this antenna the link on the antenna terminal board should be connected between "A" and "L," thus connecting the antenna input of the receiver through a capacitor to the power line. If an external antenna is used, it should be connected to "A," a ground connection made to "G," and the link removed.
- Precautinary Lead Dress.—**
1. Dress the Power Line Antenna lead close to the chassis base and near to the back flange.
 2. Heater lead from 6F6-G to the 6SQ7-G must be dressed away from the 10 meg. grid leak (R5).
 3. AC leads to the power switch must be dressed away from R8 and C5.
 4. C17 should be kept as far away from the power switch as possible.

PHONOGRAPH
Crystal Pickup . 100,000 ohms Impedance at 1,000 c.p.s.
Average Output of Pickup ... 1 1/2 volts at 1,000 c.p.s. across 250,000 ohms load
Motor ... Self-starting, Rim drive, Adjustable speed

- POWER SUPPLY RATINGS**
- Rating A-6 ... 105-125 volts, 60 cycles, 110 watts
Rating A-5 ... 105-125 volts, 50 cycles, 110 watts
Rating C-6 ... 105-125, 210-250 volts, 60 cycles, 110 watts
Rating C-5 ... 105-125, 210-250 volts, 50 cycles, 110 watts

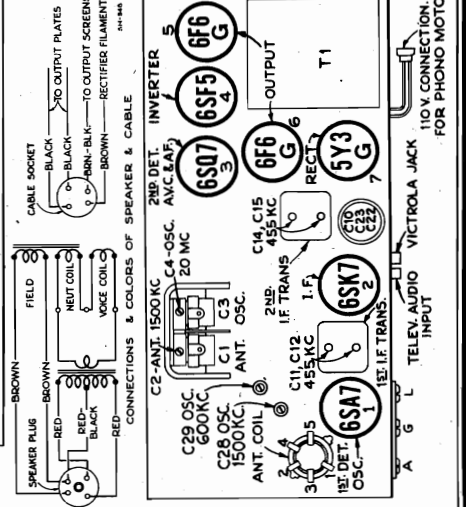

MODELS U20, Ch. RC498, U40
Ch. RC498A, U42, Ch. RC498B
Alignment, Phono, Speaker
Parts List

RCA MFG. CO., INC.

Alignment Procedure

Output Meter Alignment—If this method is used, connect the output meter to the voice coil, and turn the receiver volume control to maximum.
Test Oscillator—For all alignment operations, keep the oscillator output as low as possible to avoid s.w. action.
Calibration Marks—The tuning dial is fastened in the cabinet and can not be used for reference during alignment. Therefore calibration marks have been stamped in the plate on the front of the chassis as shown in the accompanying drawing. These marks are used for reference during alignment.
Indicator Adjustment—With the gang condenser in full, the indicator should point to the extreme left (low frequency) mark on the dial scale.
For additional details, refer to booklet "RCA Victor Receiver Alignment."

Before proceeding with alignment the following lead dress should be carefully checked.

1. Dress AC switch leads away from 6SF5 tube socket.
2. Do not twist loop leads together or around each other. Spacing between leads from "C" band loop to chassis is important—see alignment step "5" below.
3. "High side" leads from loop sockets, range switch, oscillator coil, and trimmers must be dressed away from chassis and each other.
4. Dress C-6 and C-33 away from each other.
5. Dress C-17 away from power switch leads.

Cathode-Ray Alignment is the preferable method. Consult the schematic for the oscillograph are shown on the chassis schematics.

Steps	Connect test-osc. output to—	Tune test-osc. to—	Turn radio dial to	Adjust the following for minimum peak output
1	L-F grid through 0.1 mfd capacitor and ground	465 kc	Quiet point 1,730-1,690 kc	L-6 and L-6 (and L-F trans.)
2	1st det. grid through 0.1 mfd capacitor and ground	16.2 mc	16.2 mc	L-3 and L-4 (1st L-F trans.)
3		16.2 mc	16.2 mc	C-4 oscillator*
4		6.1 mc	6.1 mc	Spacing between leads from "C" band loop to chassis
5		15.3 mc	Rock at 16.2 mc	C-2 antenna while rocking
6	Radiation loop consisting of two turns of wire 18 inches in diameter located 4 to 6 feet from receiver	1,600 kc	1,600 kc	C-34 antenna while rocking
7		600 kc	Rock at 600 kc	L-2 oscillator while rocking
8		1,600 kc	1,600 kc	C-54 antenna C-28 oscillator

When making adjustments 4 to 9 inclusive, the chassis must be in the cabinet, both loops connected, and all leads in their normal positions. When mounting chassis in cabinet if calibration marks on dial plate do not line up with dial scale mounted on cabinet move pointer to agree with dial scale on cabinet.

* Oscillator should track on high frequency side of signal. If two peaks are obtained use high frequency (minimum capacity) peak.
† If two peaks can be obtained use low frequency (maximum capacity) peak.


Phonograph Information

The U-20 phonograph motor has its bearing filled with oil and sealed at the factory and hence should not require lubrication in the field. However the two rubber tired idler pulleys on the motor should be oiled with S.A.E. 10 oil. The motor drive shaft should be oiled with S.A.E. 10 oil. The motor other foreign matter on the rubber tires. These tires and the motor spindle should be cleaned occasionally with quick drying naphtha. The spindle bearing should also be lubricated occasionally with S.A.E. 10 oil.

For information regarding the automatic record changers used in models U-40 and U-42 refer to service note No. 41 covering these mechanisms.

Antennas

Each of these receivers is equipped with two loop antennas ("C" band horizontal and fixed, and "A" band vertical and rotatable). During installation the "A" band loop should be rotated to the position giving maximum signal strength and freedom from noise. The "C" band loop should be rotated to the position giving maximum signal strength and freedom from noise. The "A" band loop should be rotated to the position giving maximum signal strength and freedom from noise. The "C" band loop should be rotated to the position giving maximum signal strength and freedom from noise.

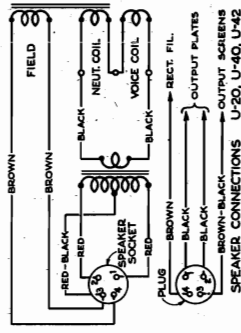

Centering Loudspeaker Cone

The loudspeaker cone centering support is fastened to the field frame by two screws accessible from the rear of the speaker. The cone is usually kept around until the proper position is found without disturbing the dust cover. However, in some cases it may be necessary to remove the front dust cover and insert spacers between the voice coil and pole piece to center the cone. A new dust cover should then be installed.


Replacement Parts

List on genuine factory-tested parts, which are readily identified and may be purchased from authorized dealers.

SPK. No.	DESCRIPTION	SPK. No.	DESCRIPTION	Unit List Price
37719	Ball-bearing motor assembly (Model U-40)	34415	Motor assemblies U-20	.55
37720	Ball-bearing motor assembly (Model U-42)	34416	Arm—idler wheel support arm (short)	.50
37721	Ball-bearing motor assembly (Model U-43)	34417	Arm—idler wheel support arm (short)	.50
37722	Ball-bearing motor assembly (Model U-44)	34418	Ball-bearing motor assembly	.55
37723	Ball-bearing motor assembly (Model U-45)	34419	Ball-bearing motor assembly	.55
37724	Ball-bearing motor assembly (Model U-46)	34420	Capacitor—1.50 mfd., 50 cycle motor starting	1.65
37725	Ball-bearing motor assembly (Model U-47)	34421	Capacitor—1.50 mfd., 50 cycle motor starting	1.65
37726	Ball-bearing motor assembly (Model U-48)	34422	Cover—bakelite top and shell for motor	1.20
37727	Ball-bearing motor assembly (Model U-49)	34423	Motor—rubber tired idler or drive wheel	.50
37728	Ball-bearing motor assembly (Model U-50)	34424	Motor—rubber tired idler or drive wheel	.50
37729	Ball-bearing motor assembly (Model U-51)	34425	Plates pulleys, capacitor and motor cradle (M.I.)	1.00
37730	Ball-bearing motor assembly (Model U-52)	34426	Reaming—idler wheel restainer spring	.01
37731	Ball-bearing motor assembly (Model U-53)	34427	Reaming—idler wheel restainer spring	.01
37732	Ball-bearing motor assembly (Model U-54)	34428	Spring—idler arm tension spring	.25
37733	Ball-bearing motor assembly (Model U-55)	34429	Spring—idler arm tension spring	.25
37734	Ball-bearing motor assembly (Model U-56)	34430	Spring—idler arm tension spring	.25
37735	Ball-bearing motor assembly (Model U-57)	34431	Spring—idler arm tension spring	.25
37736	Ball-bearing motor assembly (Model U-58)	34432	Spring—idler arm tension spring	.25
37737	Ball-bearing motor assembly (Model U-59)	34433	Spring—idler arm tension spring	.25
37738	Ball-bearing motor assembly (Model U-60)	34434	Spring—idler arm tension spring	.25
37739	Ball-bearing motor assembly (Model U-61)	34435	Spring—idler arm tension spring	.25
37740	Ball-bearing motor assembly (Model U-62)	34436	Spring—idler arm tension spring	.25
37741	Ball-bearing motor assembly (Model U-63)	34437	Spring—idler arm tension spring	.25
37742	Ball-bearing motor assembly (Model U-64)	34438	Spring—idler arm tension spring	.25
37743	Ball-bearing motor assembly (Model U-65)	34439	Spring—idler arm tension spring	.25
37744	Ball-bearing motor assembly (Model U-66)	34440	Spring—idler arm tension spring	.25
37745	Ball-bearing motor assembly (Model U-67)	34441	Spring—idler arm tension spring	.25
37746	Ball-bearing motor assembly (Model U-68)	34442	Spring—idler arm tension spring	.25
37747	Ball-bearing motor assembly (Model U-69)	34443	Spring—idler arm tension spring	.25
37748	Ball-bearing motor assembly (Model U-70)	34444	Spring—idler arm tension spring	.25
37749	Ball-bearing motor assembly (Model U-71)	34445	Spring—idler arm tension spring	.25
37750	Ball-bearing motor assembly (Model U-72)	34446	Spring—idler arm tension spring	.25
37751	Ball-bearing motor assembly (Model U-73)	34447	Spring—idler arm tension spring	.25
37752	Ball-bearing motor assembly (Model U-74)	34448	Spring—idler arm tension spring	.25
37753	Ball-bearing motor assembly (Model U-75)	34449	Spring—idler arm tension spring	.25
37754	Ball-bearing motor assembly (Model U-76)	34450	Spring—idler arm tension spring	.25
37755	Ball-bearing motor assembly (Model U-77)	34451	Spring—idler arm tension spring	.25
37756	Ball-bearing motor assembly (Model U-78)	34452	Spring—idler arm tension spring	.25
37757	Ball-bearing motor assembly (Model U-79)	34453	Spring—idler arm tension spring	.25
37758	Ball-bearing motor assembly (Model U-80)	34454	Spring—idler arm tension spring	.25
37759	Ball-bearing motor assembly (Model U-81)	34455	Spring—idler arm tension spring	.25
37760	Ball-bearing motor assembly (Model U-82)	34456	Spring—idler arm tension spring	.25
37761	Ball-bearing motor assembly (Model U-83)	34457	Spring—idler arm tension spring	.25
37762	Ball-bearing motor assembly (Model U-84)	34458	Spring—idler arm tension spring	.25
37763	Ball-bearing motor assembly (Model U-85)	34459	Spring—idler arm tension spring	.25
37764	Ball-bearing motor assembly (Model U-86)	34460	Spring—idler arm tension spring	.25
37765	Ball-bearing motor assembly (Model U-87)	34461	Spring—idler arm tension spring	.25
37766	Ball-bearing motor assembly (Model U-88)	34462	Spring—idler arm tension spring	.25
37767	Ball-bearing motor assembly (Model U-89)	34463	Spring—idler arm tension spring	.25
37768	Ball-bearing motor assembly (Model U-90)	34464	Spring—idler arm tension spring	.25
37769	Ball-bearing motor assembly (Model U-91)	34465	Spring—idler arm tension spring	.25
37770	Ball-bearing motor assembly (Model U-92)	34466	Spring—idler arm tension spring	.25
37771	Ball-bearing motor assembly (Model U-93)	34467	Spring—idler arm tension spring	.25
37772	Ball-bearing motor assembly (Model U-94)	34468	Spring—idler arm tension spring	.25
37773	Ball-bearing motor assembly (Model U-95)	34469	Spring—idler arm tension spring	.25
37774	Ball-bearing motor assembly (Model U-96)	34470	Spring—idler arm tension spring	.25
37775	Ball-bearing motor assembly (Model U-97)	34471	Spring—idler arm tension spring	.25
37776	Ball-bearing motor assembly (Model U-98)	34472	Spring—idler arm tension spring	.25
37777	Ball-bearing motor assembly (Model U-99)	34473	Spring—idler arm tension spring	.25
37778	Ball-bearing motor assembly (Model U-100)	34474	Spring—idler arm tension spring	.25
37779	Ball-bearing motor assembly (Model U-101)	34475	Spring—idler arm tension spring	.25
37780	Ball-bearing motor assembly (Model U-102)	34476	Spring—idler arm tension spring	.25
37781	Ball-bearing motor assembly (Model U-103)	34477	Spring—idler arm tension spring	.25
37782	Ball-bearing motor assembly (Model U-104)	34478	Spring—idler arm tension spring	.25
37783	Ball-bearing motor assembly (Model U-105)	34479	Spring—idler arm tension spring	.25
37784	Ball-bearing motor assembly (Model U-106)	34480	Spring—idler arm tension spring	.25
37785	Ball-bearing motor assembly (Model U-107)	34481	Spring—idler arm tension spring	.25
37786	Ball-bearing motor assembly (Model U-108)	34482	Spring—idler arm tension spring	.25
37787	Ball-bearing motor assembly (Model U-109)	34483	Spring—idler arm tension spring	.25
37788	Ball-bearing motor assembly (Model U-110)	34484	Spring—idler arm tension spring	.25
37789	Ball-bearing motor assembly (Model U-111)	34485	Spring—idler arm tension spring	.25
37790	Ball-bearing motor assembly (Model U-112)	34486	Spring—idler arm tension spring	.25
37791	Ball-bearing motor assembly (Model U-113)	34487	Spring—idler arm tension spring	.25
37792	Ball-bearing motor assembly (Model U-114)	34488	Spring—idler arm tension spring	.25
37793	Ball-bearing motor assembly (Model U-115)	34489	Spring—idler arm tension spring	.25
37794	Ball-bearing motor assembly (Model U-116)	34490	Spring—idler arm tension spring	.25
37795	Ball-bearing motor assembly (Model U-117)	34491	Spring—idler arm tension spring	.25
37796	Ball-bearing motor assembly (Model U-118)	34492	Spring—idler arm tension spring	.25
37797	Ball-bearing motor assembly (Model U-119)	34493	Spring—idler arm tension spring	.25
37798	Ball-bearing motor assembly (Model U-120)	34494	Spring—idler arm tension spring	.25
37799	Ball-bearing motor assembly (Model U-121)	34495	Spring—idler arm tension spring	.25
37800	Ball-bearing motor assembly (Model U-122)	34496	Spring—idler arm tension spring	.25
37801	Ball-bearing motor assembly (Model U-123)	34497	Spring—idler arm tension spring	.25
37802	Ball-bearing motor assembly (Model U-124)	34498	Spring—idler arm tension spring	.25
37803	Ball-bearing motor assembly (Model U-125)	34499	Spring—idler arm tension spring	.25
37804	Ball-bearing motor assembly (Model U-126)	34500	Spring—idler arm tension spring	.25
37805	Ball-bearing motor assembly (Model U-127)	34501	Spring—idler arm tension spring	.25
37806	Ball-bearing motor assembly (Model U-128)	34502	Spring—idler arm tension spring	.25
37807	Ball-bearing motor assembly (Model U-129)	34503	Spring—idler arm tension spring	.25
37808	Ball-bearing motor assembly (Model U-130)	34504	Spring—idler arm tension spring	.25
37809	Ball-bearing motor assembly (Model U-131)	34505	Spring—idler arm tension spring	.25
37810	Ball-bearing motor assembly (Model U-132)	34506	Spring—idler arm tension spring	.25
37811	Ball-bearing motor assembly (Model U-133)	34507	Spring—idler arm tension spring	.25
37812	Ball-bearing motor assembly (Model U-134)	34508	Spring—idler arm tension spring	.25
37813	Ball-bearing motor assembly (Model U-135)	34509	Spring—idler arm tension spring	.25
37814	Ball-bearing motor assembly (Model U-136)	34510	Spring—idler arm tension spring	.25
37815	Ball-bearing motor assembly (Model U-137)	34511	Spring—idler arm tension spring	.25
37816	Ball-bearing motor assembly (Model U-138)	34512	Spring—idler arm tension spring	.25
37817	Ball-bearing motor assembly (Model U-139)	34513	Spring—idler arm tension spring	.25
37818	Ball-bearing motor assembly (Model U-140)	34514	Spring—idler arm tension spring	.25
37819	Ball-bearing motor assembly (Model U-141)	34515	Spring—idler arm tension spring	.25
37820	Ball-bearing motor assembly (Model U-142)	34516	Spring—idler arm tension spring	.25
37821	Ball-bearing motor assembly (Model U-143)	34517	Spring—idler arm tension spring	.25
37822	Ball-bearing motor assembly (Model U-144)	34518	Spring—idler arm tension spring	.25
37823	Ball-bearing motor assembly (Model U-145)	34519	Spring—idler arm tension spring	.25
37824	Ball-bearing motor assembly (Model U-146)	34520	Spring—idler arm tension spring	.25
37825	Ball-bearing motor assembly (Model U-147)	34521	Spring—idler arm tension spring	.25
37826	Ball-bearing motor assembly (Model U-148)	34522	Spring—idler arm tension spring	.25
37827	Ball-bearing motor assembly (Model U-149)	34523	Spring—idler arm tension spring	.25
37828	Ball-bearing motor assembly (Model U-150)	34524	Spring—idler arm tension spring	.25
37829	Ball-bearing motor assembly (Model U-151)	34525	Spring—idler arm tension spring	.25
37830	Ball-bearing motor assembly (Model U-152)	34526	Spring—idler arm tension spring	.25
37831	Ball-bearing motor assembly (Model U-153)	34527	Spring—idler arm tension spring	.25
37832	Ball-bearing motor assembly (Model U-154)	34528	Spring—idler arm tension spring	.25
37833	Ball-bearing motor assembly (Model U-155)	34529	Spring—idler arm tension spring	.25
37834	Ball-bearing motor assembly (Model U-156)	34530	Spring—idler arm tension spring	.25
37835	Ball-bearing motor assembly (Model U-157)	34531	Spring—idler arm tension spring	.25
37836	Ball-bearing motor assembly (Model U-158)	34532	Spring—idler arm tension spring	.25
37837	Ball-bearing motor assembly (Model U-159)	34533	Spring—idler arm tension spring	.25
37838	Ball-bearing motor assembly (Model U-160)	34534	Spring—idler arm tension spring	.25
37839	Ball-bearing motor assembly (Model U-161)	34535	Spring—idler arm tension spring	.25
37840	Ball-bearing motor assembly (Model U-162)	34536	Spring—idler arm tension spring	.25
37841	Ball-bearing motor assembly (Model U-163)	34537	Spring—idler arm tension spring	.25
37842	Ball-bearing motor assembly (Model U-164)	34538	Spring—idler arm tension spring	.25
37843	Ball-bearing motor assembly (Model U-165)	34539	Spring—idler arm tension spring	.25
37844	Ball-bearing motor assembly (Model U-166)	34540	Spring—idler arm tension spring	.25
37845	Ball-bearing motor assembly (Model U-167)	34541	Spring—idler arm tension spring	.25
37846	Ball-bearing motor assembly (Model U-168)	34542	Spring—idler arm tension spring	.25
37847	Ball-bearing motor assembly (Model U-169)	34543	Spring—idler arm tension spring	.25
37848	Ball-bearing motor assembly (Model U-170)	34544	Spring—idler arm tension spring	.25
37849	Ball-bearing motor assembly (Model U-171)	34545	Spring—idler arm tension spring	.25
37850	Ball-bearing motor assembly (Model U-172)	34546	Spring—idler arm tension spring	.25
37851	Ball-bearing motor assembly (Model U-173)	34547	Spring—idler arm tension spring	.25
37852	Ball-bearing motor assembly (Model U-174)	34548	Spring—idler arm tension spring	.25
37853	Ball-bearing motor assembly (Model U-175)	34549	Spring—idler arm tension spring	.25
37854	Ball-bearing motor assembly (Model U-176)	34550	Spring—idler arm tension spring	.25
37855	Ball-bearing motor assembly (Model U-177)	34551	Spring—idler arm tension spring	.25
37856	Ball-bearing motor assembly (Model U-178)	34552	Spring—idler arm tension spring	.25
37857	Ball-bearing motor assembly (Model U-179)	34553	Spring—idler arm tension spring	.25
37858	Ball-bearing motor assembly (Model U-180)	34554	Spring—idler arm tension spring	.25
37859	Ball-bearing motor assembly (Model U-181)	34555	Spring—idler arm tension spring	.25
37860	Ball-bearing motor assembly (Model U-182)	34556	Spring—idler arm tension spring	.25
37861	Ball-bearing motor assembly (Model U-183)	34557	Spring—idler arm tension spring	.25
37862	Ball-bearing motor assembly (Model U-184)	34558	Spring—idler arm tension spring	.25
37863	Ball-bearing motor assembly (Model U-185)	34559	Spring—idler arm tension spring	.25
37864	Ball-bearing motor assembly (Model U-186)	34560	Spring—idler arm tension spring	.25
37865	Ball-bearing motor assembly (Model U-187)	34561	Spring—idler arm tension spring	.25
37866	Ball-bearing motor assembly (Model U-188)	34562	Spring—idler arm tension spring	.25
37867	Ball-bearing motor assembly (Model U-189)	34563	Spring—idler arm tension spring	.25
37868	Ball-bearing motor assembly (Model U-190)	34564	Spring—idler arm tension spring	.25
37869	Ball-bearing motor assembly (Model U-191)	34565		

RCA MFG. CO., INC.

MODEL U42, Chassis RC498B
Schematic, Trimmers
Socket, SPU Schematic

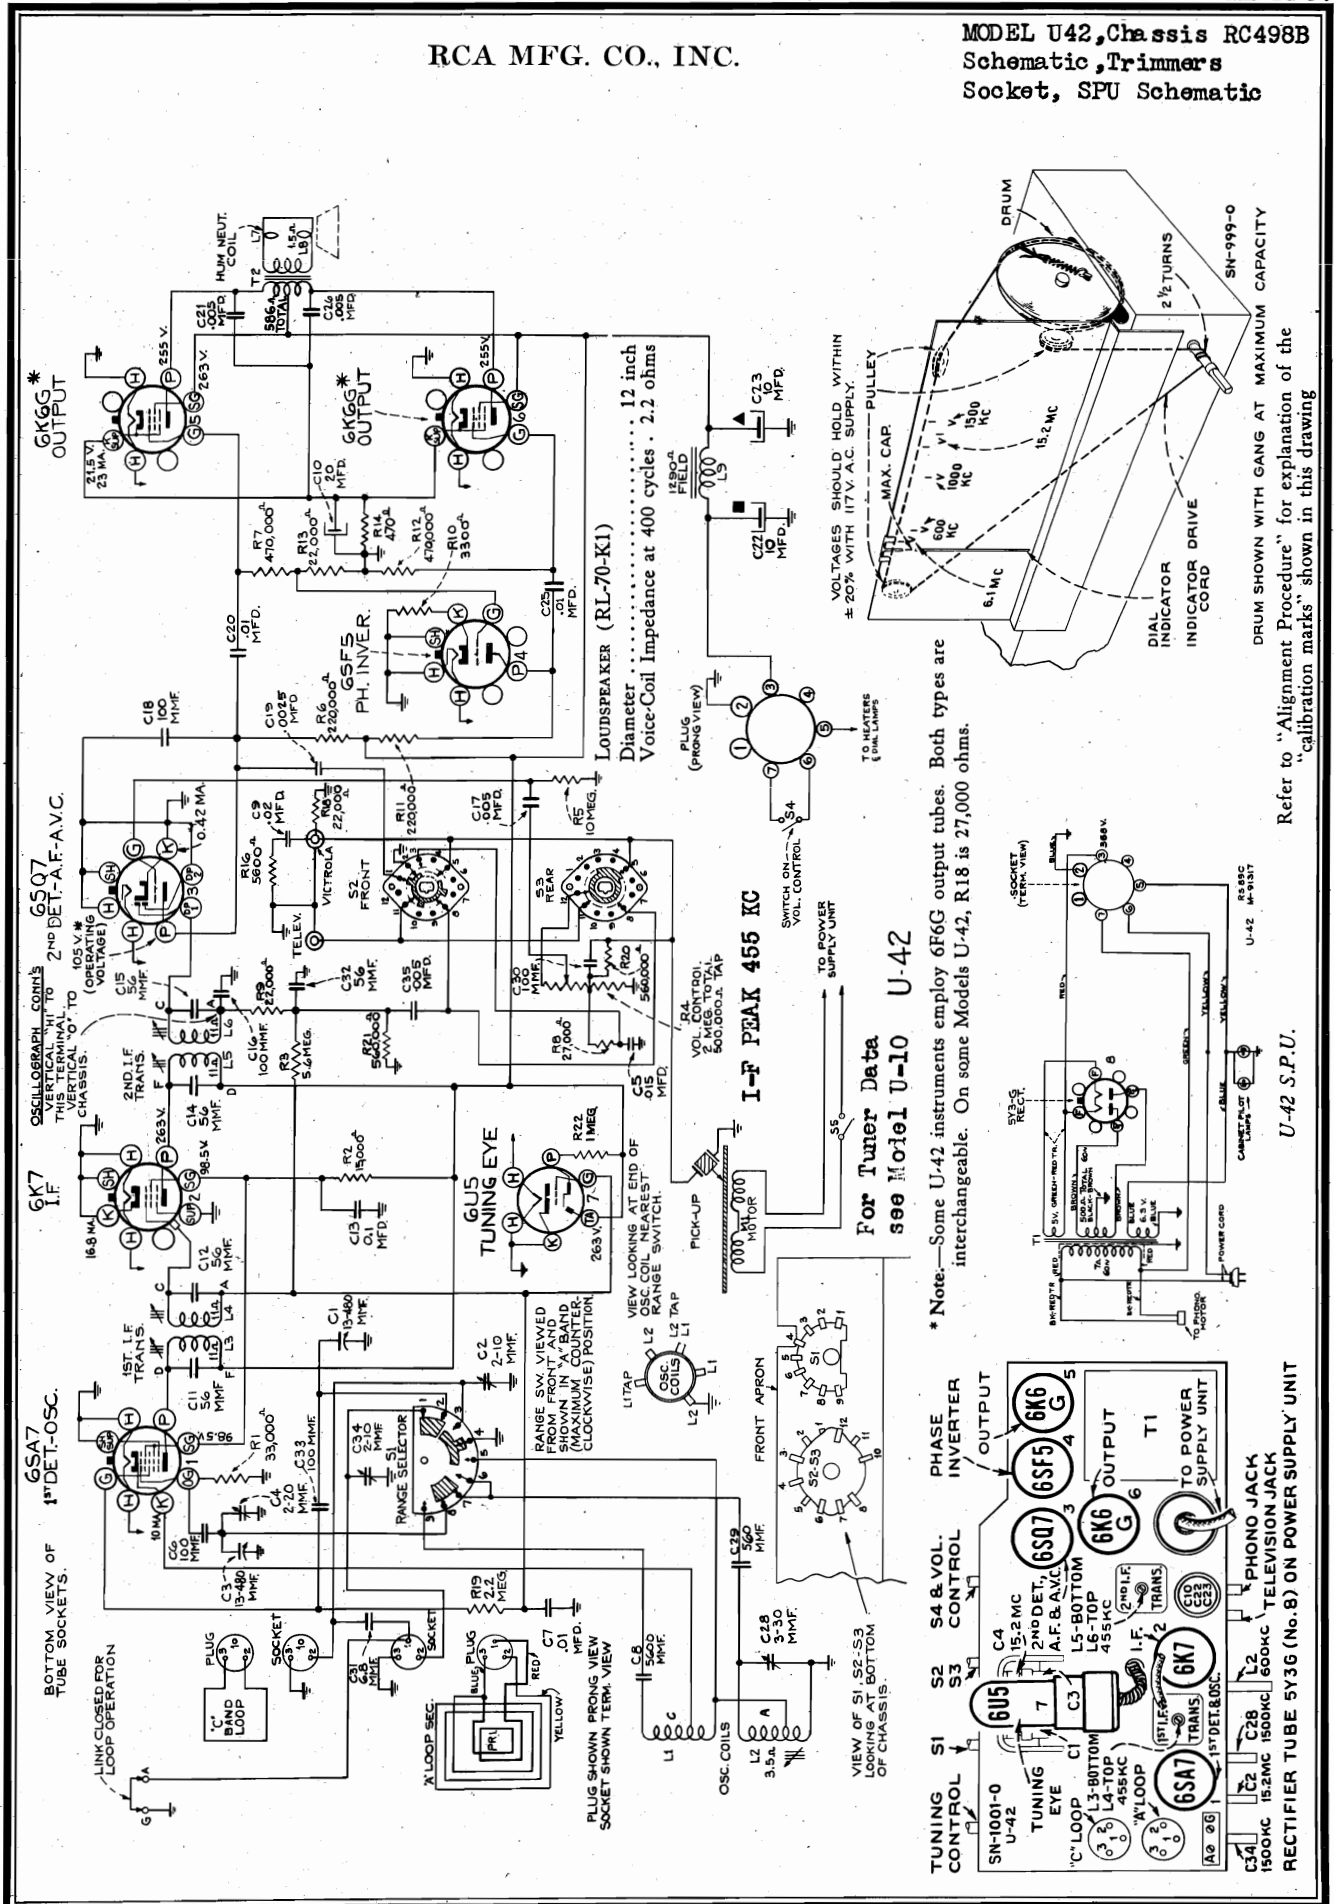

Refer to "Alignment Procedure" for explanation of the "calibration marks" shown in this drawing

U-42 S.P.U.

RECTIFIER TUBE 5Y3G (No. 8) ON POWER SUPPLY UNIT
TELEVISION JACK
600KC
1500KC
C28
PHONO JACK
TO POWER SUPPLY UNIT

DRUM SHOWN WITH GANG AT MAXIMUM CAPACITY

* Note.—Some U-42 instruments employ 6F6G output tubes. Both types are interchangeable. On some Models U-42, R18 is 27,000 ohms.

For Tuner Data see Model U-10 U-42

I-F PEAK 455 KC

LOUDSPEAKER (RL-70-K1)
Diameter 12 inch
Voice-Coil Impedance at 400 cycles . 2.2 ohms

VOLTAGES SHOULD HOLD WITHIN ± 20% WITH 117V. A.C. SUPPLY.

TO HEATERS (PHIL LAMPS)

TO POWER SUPPLY UNIT

TO POWER SUPPLY UNIT

TO POWER SUPPLY UNIT

TO POWER SUPPLY UNIT


TO POWER SUPPLY UNIT

TO POWER SUPPLY UNIT

TO POWER SUPPLY UNIT

RCA MFG. CO., INC.

MODELS U25, U26
Chassis RC386B
Schematic, Socket
Trimmers, Tuner
Lead Dress

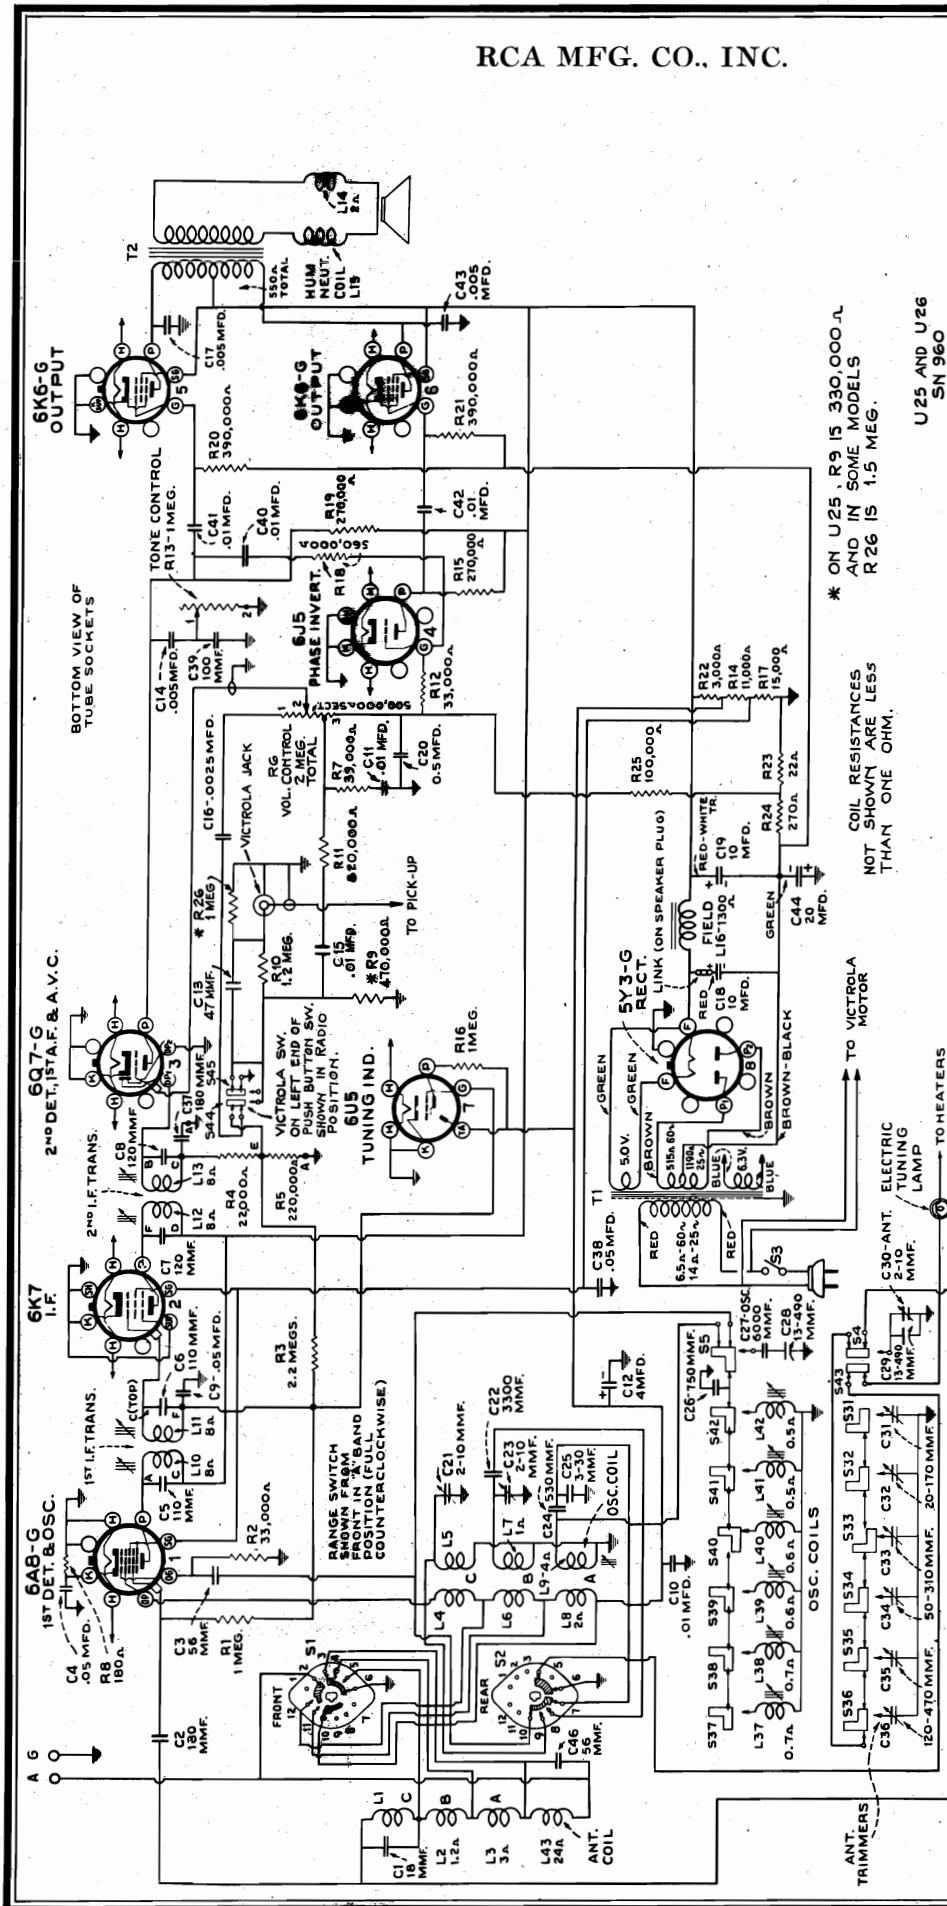

* ON U25, R9 IS 330,000 Ω
AND IN SOME MODELS
R26 IS 1.5 MEG.


COIL RESISTANCES
NOT SHOWN ARE LESS
THAN ONE OHM.

U25 AND U26
SN 960

These models have eight push buttons. The left-hand button is a Victoria switch. The right-hand button connects the gang condenser for electric tuning. The standard buttons are for electric tuning of six different stations in the standard broadcast band. The station buttons connect separate magnetic-core oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow at least five minutes warm-up period before making adjustments.

The procedure is as follows:

1. Make a list of the desired six stations, arranged in order from low to high frequencies.
2. Push in the dial-tuning button, and manually tune in the first station on the list.
3. Push in station button No. 1 (second from left) and adjust No. 1 oscillator core (L37) to receive this station. Screw the core until the way in, to lowest frequency, and then unscrew slowly until station is received.
4. Adjust No. 1 antenna trimmer (C36) for maximum output on this station.

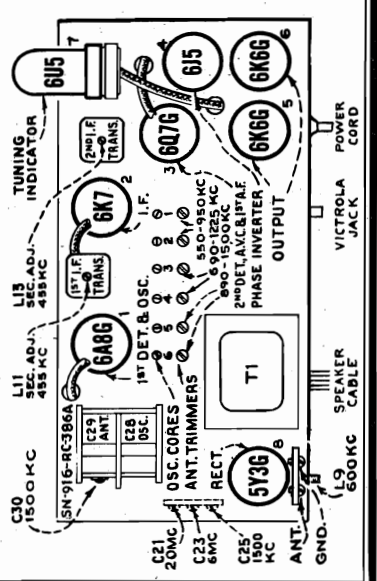

Bottom view of tube sockets.

6K6-G OUTPUT

6K4-G OUTPUT

6J5 PHASE INVERT.

5Y3-G RECT.

6X4-G

6Q7-G

6K7 I.F.

6A8-G OSC.

6B8-G

6C8-G

6D8-G

6E8-G

6F8-G

6G8-G

6H8-G

6I8-G

6J8-G

6K8-G

6L8-G

6M8-G

6N8-G

6O8-G

6P8-G

6Q8-G

6R8-G

6S8-G

6T8-G

6U8-G

6V8-G

6W8-G

6X8-G

6Y8-G

6Z8-G

Adjustments of cores and trimmers tunes the circuits to lower frequencies.

5. Adjust for each of the remaining five stations in the same manner.

6. Make a final careful adjustment of the oscillator cores and antenna trimmers.


Precautionary Lead Dress.—

1. Dress red leads from power transformer to power switch (S3) in corner of chassis and away from volume control terminals.
2. Dress brown lead from push-button switch to gang over end of switch, and away from C27 and bus between S5 and range switch.
3. Leads to C27 must be as short as possible.
4. Blue lead from range switch to oscillator coil must be as short as possible and dressed away from antenna coil.
5. Leads across back of chassis must be dressed under electrolytic away from Victrola jack.
6. Parts and leads should be dressed away from R22-R14 as it becomes heated.
7. Leads from oscillator coil to trimmers must be dressed away from coil.
8. Green lead from S4 to range switch must be clear of other leads and away from front edge of chassis.


MODELS U25,U26
Chassis RC386B
Chassis Wiring
Voltage, Dial Drive

RCA MFG. CO., INC.



FOR PHONOGRAPH DATA SEE
RCA PAGES 10-51 AND
10-52 in VOLUME X

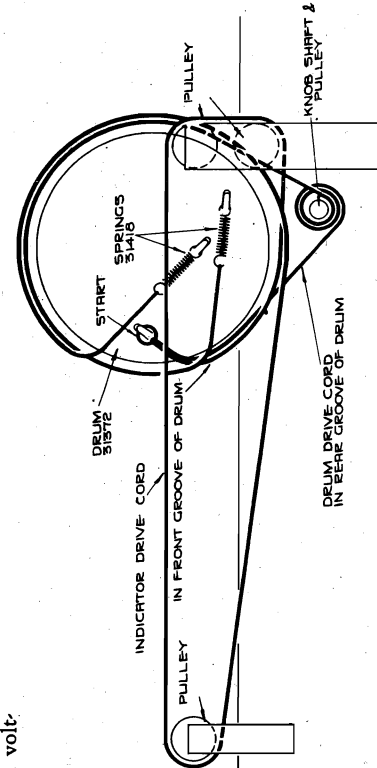

DRUM SHOWN WITH GANG AT MAXIMUM CAPACITY

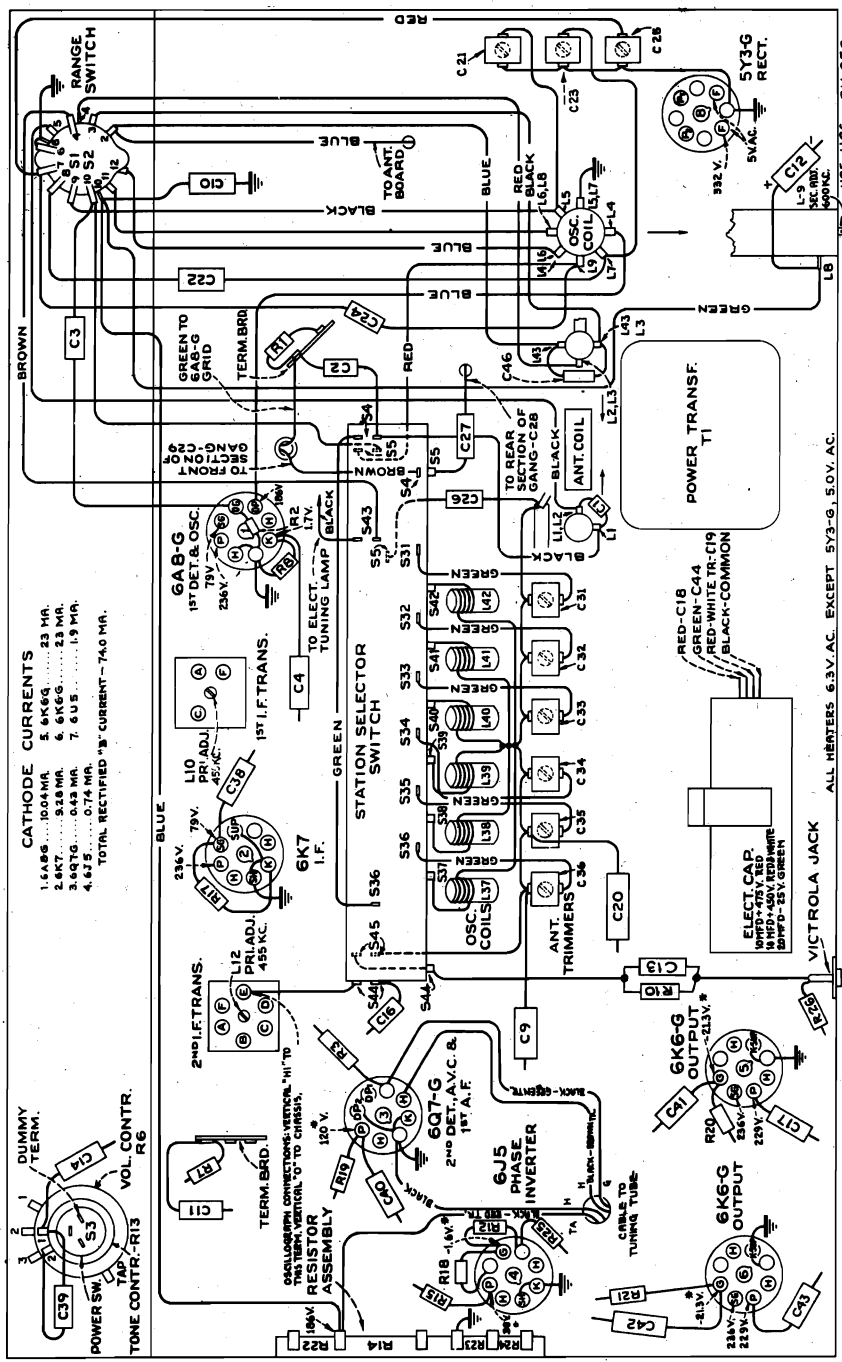

* NOTE: Values with star (*) are operating voltages in circuits with high series resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

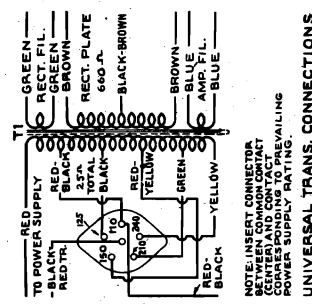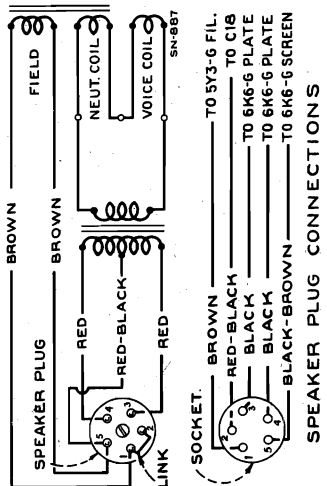

NOTE: INSERT CONNECTOR BETWEEN COMMON CONTACT CORRESPONDING TO PREVAILING POWER SUPPLY RATING.

Installation, Operation
Lead Dress, Parts

RCA MFG. CO., INC.

MODEL OSC-22
Wireless Oscillator
Schematic, Voltage

Specifications **OSC-22** —1939 No. 28—
First Edition

Wireless Oscillator

FREQUENCY RANGE..... Approx. 530-625 kc
TUBE COMPLEMENT
(1) RCA-6SA7..... Modulator—Oscillator
(2) RCA-25Z6-G..... Half-Wave Rectifier
(3) Type B-86-A..... Ballast Resistor

POWER SUPPLY RATINGS
A-C Rating.... 105-125 volts, 25-60 cycles, 35 watts
D-C Rating..... 105-125 volts, 35 watts

DIMENSIONS
Chassis Base..... 7 1/2-in. x 4 1/2-in x 2 1/2-in.

- Precautionary Lead Dress.—
1. Keep 110-volt leads away from oscillator coil.
2. Leads to oscillator coil must be short and direct.

The RCA Victor Wireless Oscillator is an adapter unit used to convert your Victrola Attachment, such as the RCA Victor Model VA-22, into a wireless record player. This permits you to play phonograph records through your radio receiver without any connecting wires from the Victrola Attachment to the Radio Receiver.

INSTALLATION

Certain RCA Victrola Attachments such as the VA-22 are provided with a side shelf inside the cabinet for mounting the Wireless Oscillator. Three holes are drilled in the shelf correctly spaced for the oscillator mounting bolts to go through and screw into the holes in the OSC-22 chassis base. To install the OSC-22 first detach the VA-22 power cord from the electric outlet, then:

1. Look in the back of the VA-22 or similar Victrola cabinet and locate the connection from the pickup to the volume control on the side of the cabinet. This is a length of wire with a connector plug on one end. Disconnect the plug from the bayonet socket and then loosen the set screw and remove the knob and the volume control on the other end of the wire, together with the wire, from the VA-22 cabinet. It is attached to the cabinet by a nut and washer.
2. Mount the OSC-22 on the cabinet shelf with the three mounting screws and washers provided.
3. Mount the OSC-22 Power Switch and Volume Control unit in the location from which the VA-22 volume control was removed, using the washer and nut taken

from the VA-22 volume control. Be sure that the locating pin on the new control is in the correct position. Attach knob on shaft of Power Switch and Volume Control unit and tighten up the set screw.

4. Insert the pickup plug into the connector on the cable of the newly installed Volume Control of the OSC-22.
5. Insert the plug on the end of the VA-22 power cord into the power receptacle on the OSC-22 chassis base.
6. Insert the plug on the end of the OSC-22 power cord into the electric outlet.

OPERATION

CONTROLS AND MOVING MECHANISM

In order to obtain best reproduction, the

newly installed Volume Control should first be turned on about 2/3 full and the Volume Control on your radio receiver turned to the point that gives the greatest volume you are likely to require. Then all control of volume may be made with the knob on the Wireless Victrola Attachment. In particularly noisy locations it may be preferable to set the Volume Control of the Wireless Victrola Attachment at about 2/3 full and regulate with the volume control knob on the receiver.

The Victrola Adjustment.—On the back of the OSC-22 chassis is a small adjusting rod to give reproduction at the most convenient point on your radio receiver dial. With your radio receiver in operation, set the Tuning Control to bring the pointer on the Standard Broadcast Scale to a point at the low frequency end between 530 and about 630 kilocycles, 530 is preferable, at which no station can be obtained. Then set your Wireless Victrola Attachment in operation and turn the adjusting rod on the OSC-22 slowly and carefully until the record reproduction is heard at its best.

Antenna Modification.—If, due to your particular special conditions, insufficient volume or excessive noise interference affects record reproduction, a simple remedy is to connect a wire from the Wireless Victrola Attachment to your radio antenna lead. This is easily accomplished by means of a length of wire to cover the distance between the Victrola Attachment and Radio Receiver. One end of this should be wound 3 or 4 turns around the outside of the short wire projecting from the OSC-22 plug on the power cord. The other end


of the wire should be wound 3 or 4 turns around the outside of the receiver antenna lead. When an RCA Master Antenna is used, the wire should be wound around the counterpoise lead where it is attached to the A-3 terminal of your radio receiver antenna terminal board.

Radio Receiver Controls.—Your radio receiver picks up the record selection as it does a broadcast program. So after the Victrola Adjustment is made, you must tune your radio receiver to the signal from the Wireless Victrola Attachment between 530 and about 630 kilocycles. Do this according to the instructions for operating your particular receiver and turn the Tuning Control to bring the pointer on the dial scale to the low frequency end of the Standard Broadcast band, about 530 to 630 kilocycles, and tune in accurately with the Wireless Victrola Attachment playing a selection. This point is your "Victrola" station. If you have a radio with Push Button Tuning you can set a push button and label it "Victrola." The push button or switch labeled "Victrola," "Record Player" or "Phono" on RCA Victor Radio Receivers previous to 1939 is of no use with the Wireless Victrola Attachment.


PLAYING

Plug the power cord from the OSC-22 into a convenient house outlet, then to play records proceed as follows:

1. Turn on the power to your radio receiver.
2. Set the tuning knob to your new "Victrola" station (530 to 630 kilocycles), or if you have specially adjusted a push button, press it.
3. Turn on power to the Wireless Victrola Attachment.
4. Make the set-up for playing records in accordance with the original instructions accompanying the Victrola Attachment.
5. Turn the Wireless Victrola Attachment Volume Control about 2/3 fully clockwise.
6. Adjust radio receiver Tuning knob to accurately tune in the phonograph selection.
7. Turn Radio Receiver Volume Control to give the loudest reproduction you are likely to require.
8. Adjust the Wireless Victrola Attachment Volume Control to suit.
9. Adjust radio receiver Tone Control if desirable.

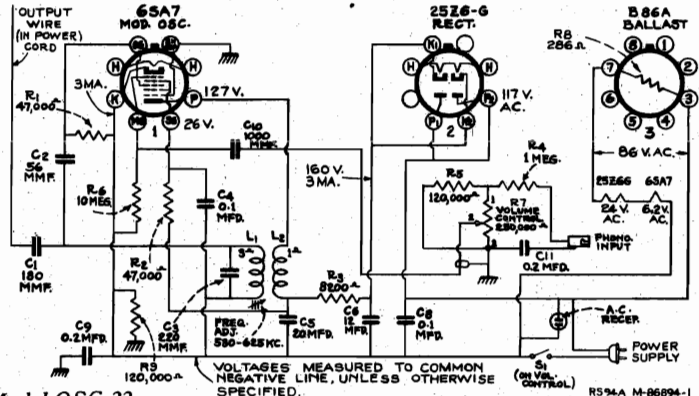

Model OSC-22
Schematic Diagram

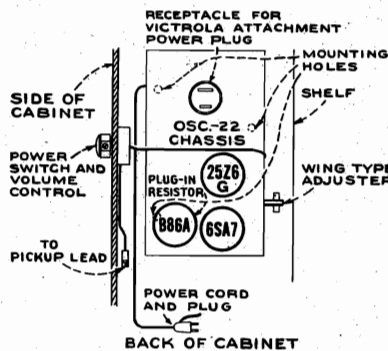


STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit List Price
ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.					
33793	Ballast—Ballast resistor tube—Type B86A (R8)	.80	33792	Receptacle—A.C. receptacle	.45
12723	Capacitor—56 mmfd. (C2)	.35	33793	Resistor—Ballast resistor tube—Type B86A (R8)	.80
13003	Capacitor—180 mmfd. (C1)	.35	14075	Resistor—8,200 ohms, 1/2 watt (R3)	.20
12694	Capacitor—220 mmfd. (C3)	.35	12412	Resistor—47,000 ohms, 1/2 watt (R1, R2)	.20
4839	Capacitor—0.1 mfd. (C4, C8)	.30	13734	Resistor—120,000 ohms, 1/2 watt (R5, R9)	.20
33834	Capacitor—0.2 mfd. (C9, C11)	.30	13730	Resistor—1 meg., 1/2 watt (R4)	.20
32576	Capacitor—Electrolytic, one section 20 mfd., and one section 12 mfd. (C5, C6)	.90	13601	Resistor—10 meg., 1/2 watt (R6)	.20
12635	Capacitor—1,000 mfd. (C10)	.50	31251	Socket—Tube socket	.25
32501	Coil—Oscillator coil (L1, L2)	1.00	33793	Tube—Ballast resistor tube—Type B86A (R8)	.80
			33794	Volume control and switch (R7, S1)	1.50

MODELS 40X-30, Ch. RC 405C
40X-31, Chassis 405D
Schematic, Voltage

RCA MFG. CO., INC.

Alignment, Trimmers
Socket, Lead Dress

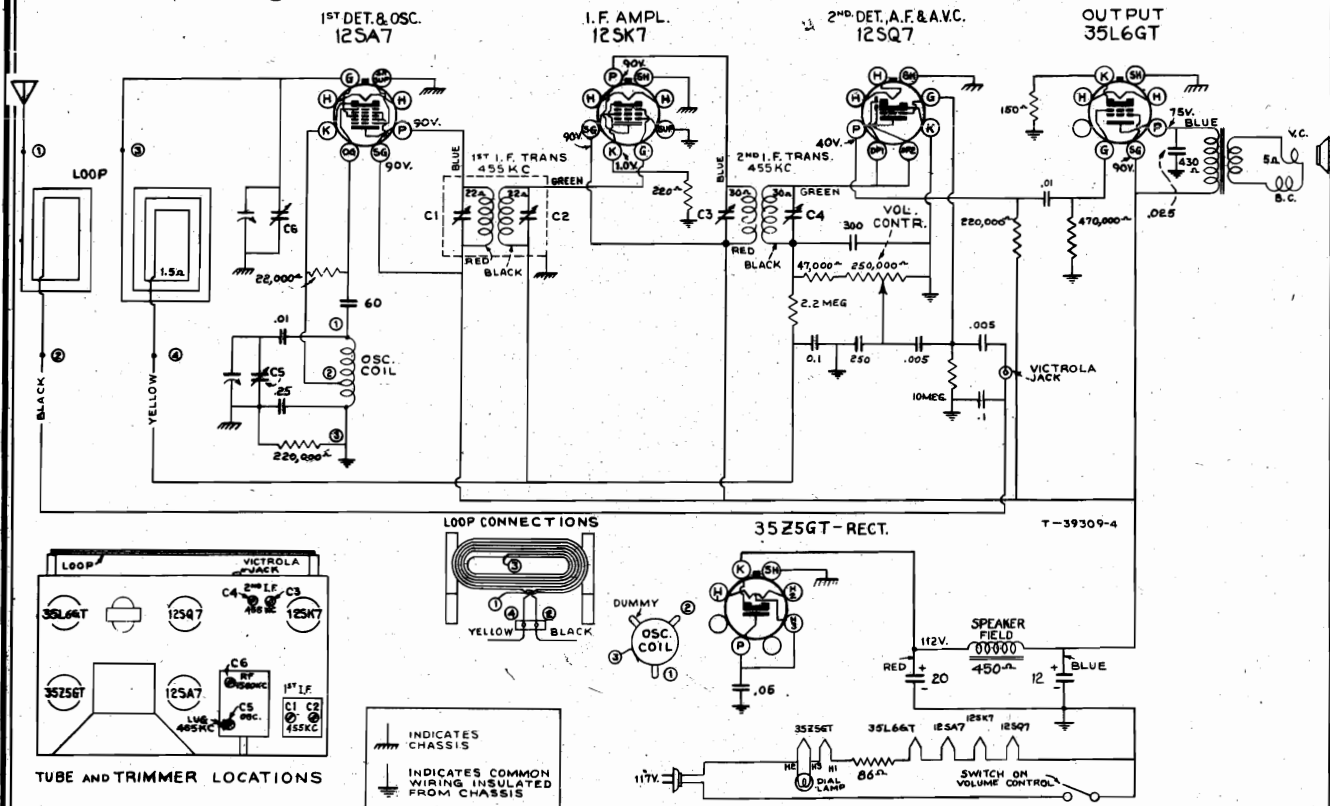

— 1939 No. 34 —

Features of design include: New Type single-ended tubes (12SA7, 12SK7, and 12SQ7); edge-lighted dial; dust proof electrodynamic loudspeaker; "Magic Loop"; Television-Victrola Jack; and Beam Power Output.

First Edition

Electrical and Mechanical Specifications

FREQUENCY RANGE..... 540-1,680 kc
Intermediate Frequency..... 455 kc

TUBE COMPLEMENT

- (1) RCA-12SA7..... 1st-Detector-Oscillator
 - (2) RCA-12SK7..... I-F Amplifier
 - (3) RCA-12SQ7..... 2nd-Detector, 1st A-F, and A.V.C.
 - (4) RCA-35L6GT..... Power Output
 - (5) RCA-35Z5GT..... Half-Wave Rectifier
- Dial Lamp (1)..... Mazda 51, 7.5 volts, 0.2 amp.

POWER SUPPLY RATINGS

A-C Rating..... 105-125 volts, 50-60 cycles, 30 watts
D-C Rating..... 105-125 volts, direct current, 30 watts

POWER OUTPUT (125 volt, 60 cycle supply)

Undistorted..... .6 watts
Maximum..... 2.0 watts

LOUDSPEAKER

Type..... 4-inch Electrodynamic
Cabinet Dimensions (inches) .. Height 5-1/16, Width 8 1/2, Depth 4 1/2
Weight (net)..... 4 1/2 pounds

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

Pre-setting Dial.—With gang condenser in full mesh, the pointer should be horizontal.

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the "ANT." terminal on rear of cabinet. It should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

Victrola Attachment.—A jack is provided on the rear of cabinet for connecting a Victrola Attachment into the audio-amplifying circuit. The cable from the Victrola Attachment should be terminated in a Stock No. 31048 plug to fit the jack.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. loop in series with 100 mmfd.	1,680 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal	C6 (antenna)


Precautionary Lead Dress

1. Dress 2nd I-F green lead close to chassis and under other parts.
2. Dress lead from gang condenser to grid of 12SA7 close to chassis and away from 12SQ7 socket.
3. Dress blue 1st I-F lead under volume control close to chassis.
4. Dress blue 2nd I-F lead close to chassis and behind 12SK7 socket.

Alignment, Trimmers
Socket, Lead Dress

RCA MFG. CO., INC.

MODELS 40X-50 to 40X-57
Chassis RC-436
Schematic, Voltage

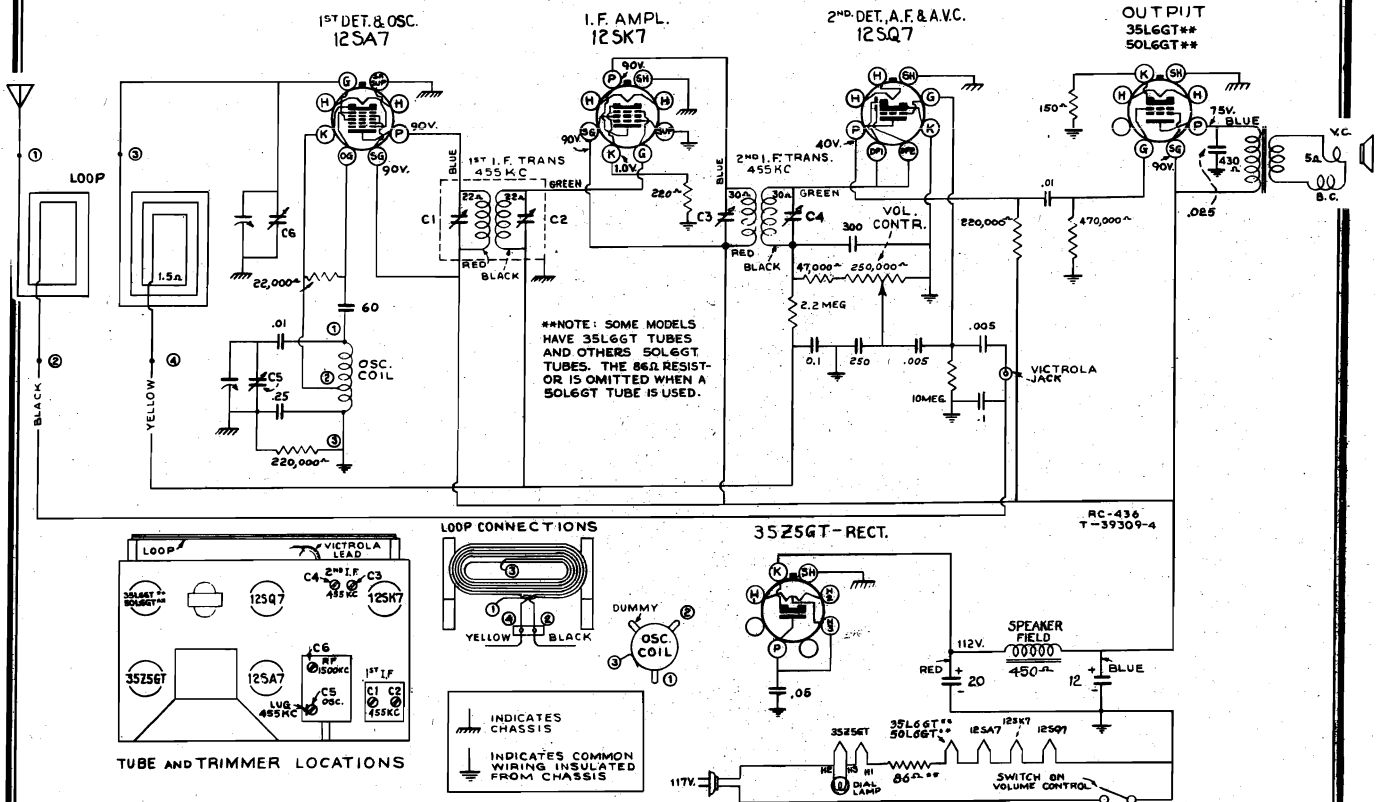

NOTE: Output cathode resistor is 120 ohm when 50L6GT tube is used.

Pre-setting Dial.—With gang condenser in full mesh, the pointer should be horizontal.

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the "ANT" terminal on rear of cabinet. It should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. loop in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal	C6 (antenna)

STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES (RC-436)		
33745	Cable—Phono. cable	.30
13057	Capacitor—60 mmfd.	.35
12488	Capacitor—250 mmfd.	.35
12952	Capacitor—300 mmfd.	.35
4838	Capacitor—.005 mfd.	.25
4870	Capacitor—.025 mfd.	.20
32787	Capacitor—.05 mfd.	.20
4839	Capacitor—.1 mfd.	.30
12484	Capacitor—.25 mfd.	.30
32576	Capacitor—Electrolytic, 20-12 mfd.	.90
32968	Capacitor—Variable tuning	2.25
32962	Coil—Oscillator coil	.60
32634	Cord—Drive cord	.10
33743	Drum—Drive drum	.40
31480	Lamp—Pilot lamp	.20
33663	Loop—Complete antenna loop	1.20
33558	Resistor—86 ohms	.15
12071	Resistor—120 ohms, 1/2 watt	.20
13428	Resistor—150 ohms, 1/2 watt	.20
14561	Resistor—220 ohms, 1/2 watt	.20
13998	Resistor—22,000 ohms, 1/2 watt	.20
12412	Resistor—47,000 ohms, 1/2 watt	.20
12264	Resistor—220,000 ohms, 1/2 watt	.20
12285	Resistor—470,000 ohms, 1/2 watt	.20
12679	Resistor—2.2 meg., 1/2 watt	.20
13601	Resistor—10 meg., 1/2 watt	.20
33061	Shaft—Drive shaft	.20
30585	Spring—Drive cord spring	.06
33557	Socket—Dial light socket	.30
32537	Socket—Tube socket	.20
32966	Transformer—I-F input transformer	1.25

Precautionary Lead Dress

1. Dress 2nd I-F green lead close to chassis and under other parts.
2. Dress lead from gang condenser to grid of 12SA7 close to chassis and away from 12SQ7 socket.
3. Dress blue 1st I-F lead under volume control close to chassis.
4. Dress blue 2nd I-F lead close to chassis and behind 12SK7 socket.

POWER SUPPLY RATINGS

A-C Rating 105-125 volts, 50-60 cycles, 30 watts
D-C Rating 105-125 volts, direct current, 30 watts

POWER OUTPUT (125 volt, 60 cycle supply)

Undistorted6 watts
Maximum 2.0 watts


STOCK No.	DESCRIPTION	Unit List Price
32967	Transformer—I-F output transformer	1.05
32545	Volume control	1.50
SPEAKER ASSEMBLIES (39105-2)		
32963	Speaker—Complete with transformer	3.95
32964	Transformer—Output transformer	1.25

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

MODELS BK41, BT41
Chassis RC-449
Schematic, Voltage
Alignment, Trimmers
Socket, Lead Dress


RCA MFG. CO., INC.

MODEL CV40, S.P.U.
Schematic

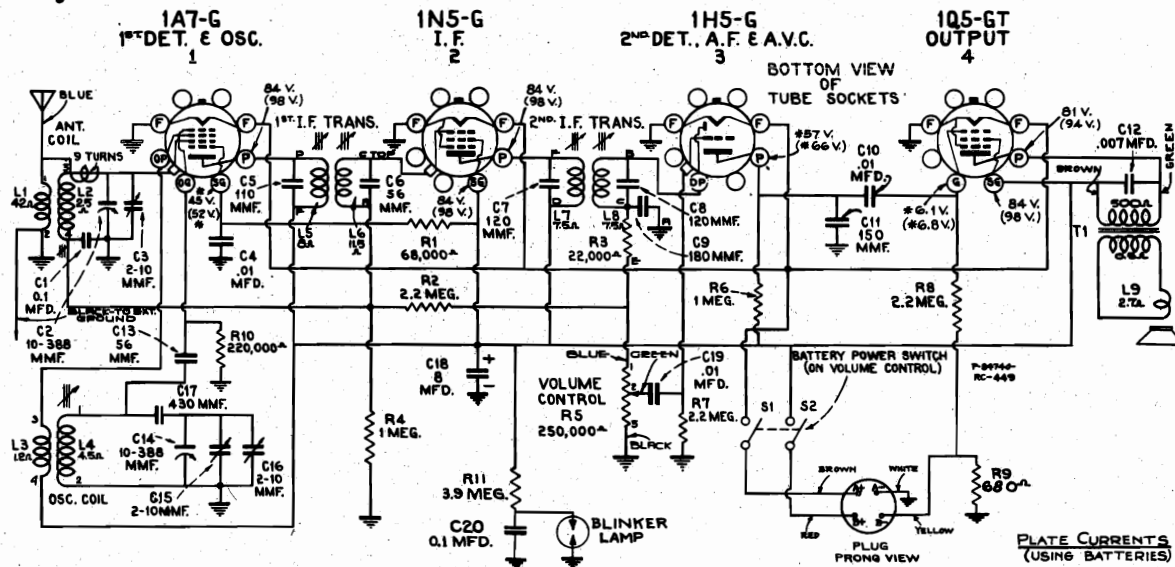

STARRED (*) VOLTAGES ARE OPERATING VOLTAGES IN CIRCUITS WITH HIGH SERIES RESISTANCE; THE ACTUAL MEASURED VOLTAGES WILL BE LOWER, DEPENDING ON THE VOLTMETER LOADING.

VOLTAGES IN PARENTHESES ARE THOSE OBTAINED BY USING POWER SUPPLY CV-40. WHEN BATTERIES ARE USED VOLTAGES NOT IN PARENTHESES APPLY.

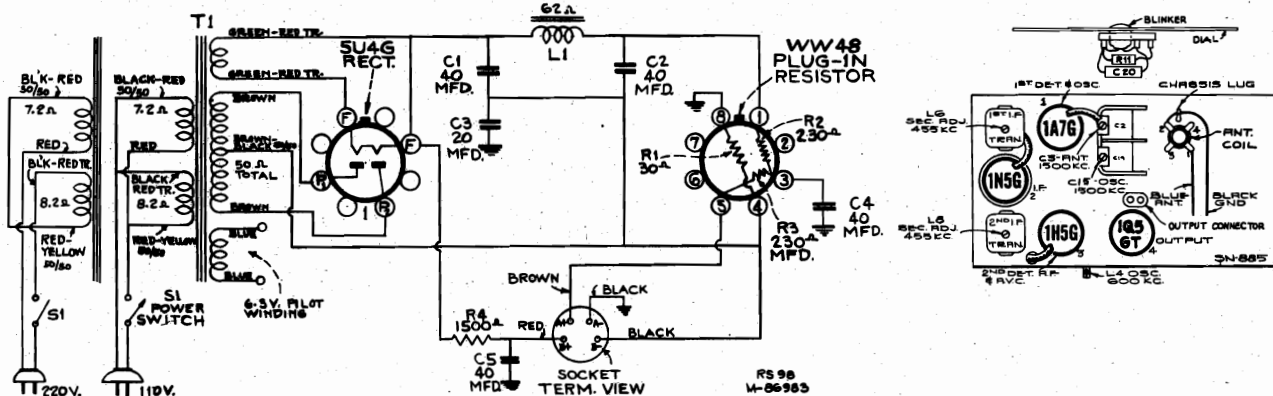

Schematic Diagram—Model CV-40

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
No. 1	1N5-G I-F grid cap, in series with 0.01 mfd.	455 kc	Quiet point between 550-750 kc	L7 and L8 (2nd I-F transformer)
No. 2	1A7-G 1st-det. grid cap in series with 0.01 mfd.	455 kc		L5 and L6 (1st I-F transformer)
No. 3	Antenna lead, in series with 200 mmfd.	600 kc	600 kc	L4 (oscillator) L2 (antenna)
No. 4	Antenna lead, in series with 200 mmfd.	1,500 kc	1,500 kc	C15† (oscillator) C3 (antenna)

† Trimmer C16 on gang condenser should be unscrewed one complete turn from tight, before adjusting C15.

Cathode-ray Alignment is the preferable method. Connections for the oscillograph are as follows: Vertical "Hi" to E on the 2nd I-F transformer, Vertical "O" to chassis.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Pre-setting Dial.—With gang condenser in full mesh, the pointer should be horizontal.

Precautionary Lead Dress

1. Red lead from second i-f transformer to screen terminal of 1N5-G must be dressed close to and along edge of chassis.
2. Twisted green wire from antenna coil to gang must be 9 turns and kept clear of rotor.
3. Blue and green leads to volume control must be dressed close to chassis and between gang and apron.
4. The opening in the shield of the 1N5-G should be turned away from the chassis and the i-f transformers.
5. Antenna and ground wires should be twisted together.

CV-40

Rectifier RCA-5U4-G
Plug-in Resistor WW48, Stock No. 34563

POWER OUTPUT (Battery Operation)

Undistorted 0.125 watt
Maximum 0.300 watt

LOUDSPEAKER

Type Permanent Magnet Dynamic
Diameter BK41, 8 inches; BT41, 5 inches
Voice Coil-Impedance BK41, 2.2 ohms; BT41, 3.0 ohms at 400 cycles

BATTERY REQUIRED

Combination 1 1/2 volt-90 volt A-B Pack

CURRENT CONSUMPTION

"A" at 1.4 volts, 0.25 amp.



"B" at 90 volts, 9.4 ma.

A-C Operation

Use of power unit CV-40 with either Model BK41 or BT41 adapts that receiver for A-C operation.

RCA MFG. CO., INC.

MODEL BT42, Chassis RC408A
Schematic, Voltage, Socket
Alignment, Trimmers
Lead Dress

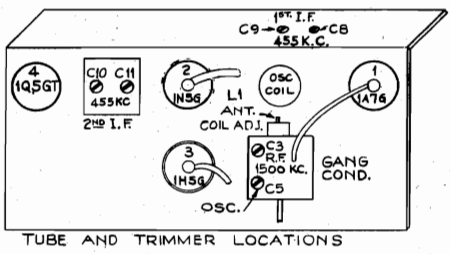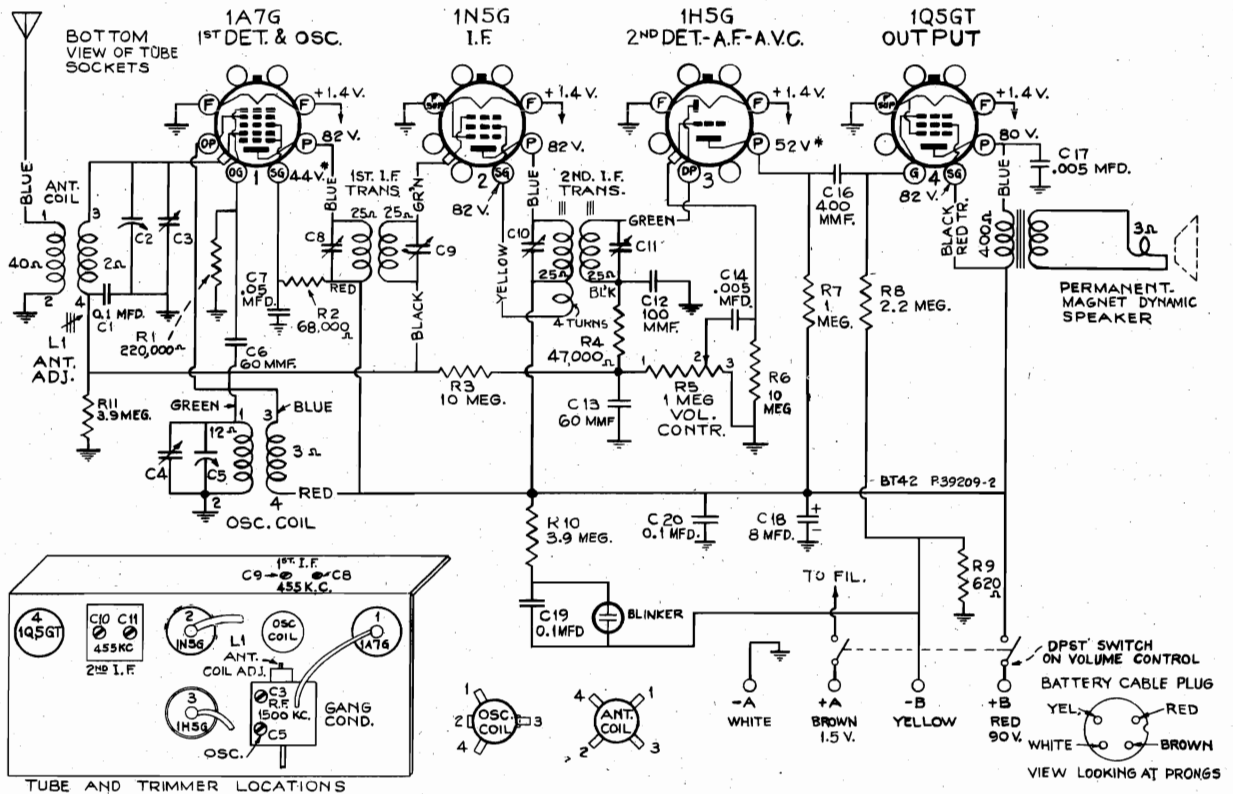

General Description

The RCA Victor Model BT-42 is a table type battery operated radio receiver.

Features of design include: On and off "Economy" Blinker; 4 RCA 1.4 volt low drain tubes; large horizontal dial; magnetite core transformers; automatic volume control; 16 to 1 tuning ratio; 5" permanent magnet speaker, and an available converter unit (CV40) to convert the receiver to 110 volt AC operation.

Electrical and Mechanical Specifications

Frequency Range 540-1,720 kc
Intermediate Frequency 455 kc

RCA TUBE COMPLEMENT

- (1) RCA-1A7-G 1st-Det.—Osc.
- (2) RCA-1N5-G I-F Amplifier
- (3) RCA-1H5-G 2nd-Det., A-F, and A.V.C.
- (4) RCA-1Q5-G Output

BATTERIES REQUIRED

1 "A"—"B" Pack (Eveready No. 748 or equivalent).

CURRENT CONSUMPTION

"A," 0.24 ampere—"B," 10 milliamperes.

POWER OUTPUT

Undistorted 0.15 watt
Maximum 0.25 watt

LOUDSPEAKER

Type 5-inch permanent-magnet dynamic
Voice-coil Impedance 3.3 ohms at 400 cycles

Cabinet Dimensions (inches) Height 9 1/2, Width 17 1/2, Depth 9 1/2
Weight—Shipping weight 16 pounds
Tuning Drive Ratio 16 to 1

Alignment Procedure

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-oscillator.—For all alignment operations, keep the output as low as possible to avoid a-v-c action.

Pre-setting Dial.—With the gang condenser fully out of mesh, the indicator should point to the extreme right (high frequency) mark on the dial scale.


CAUTION.—When ready to install or replace batteries or tubes or to make any repairs or changes, be sure to turn off power switch.

Precautionary Lead Dress.—

1. All filament (brown) and B+ (red) leads must be dressed away from unshielded I.F. coil.
2. Green grid lead of 1A7G tube to be twisted around antenna (blue) lead for capacity coupling.
3. Red and brown battery cable leads to be dressed and held against front apron with tape.


Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn Radio Dial to—	Adjust the following for max. peak output—
1	1A7G 1st-Det. grid cap. in series with .01 mfd.	455 kc	Quiet point at 550 kc End of Dial	C8, C9, C10, C11 (1st and 2nd I-F transformers)
2	Antenna lead (blue) in series with 100 mmfd.	1,500 kc	1,500 kc	C5 (oscillator)
3		600 kc	600 kc	L1 (antenna)*
4		1,500 kc	1,500 kc	C3 (antenna)

* When adjusting L1 (antenna), trimmer C3 should be in a minimum capacity position (unscrewed).

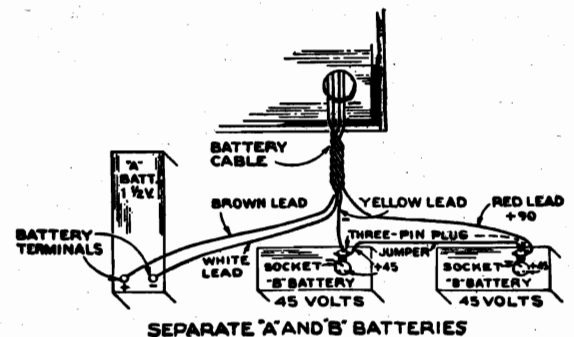

MODEL VA-20, Wireless Record Player Schematic
Set-up Procedure, Notes
Chassis Wiring

RCA MFG. CO., INC.

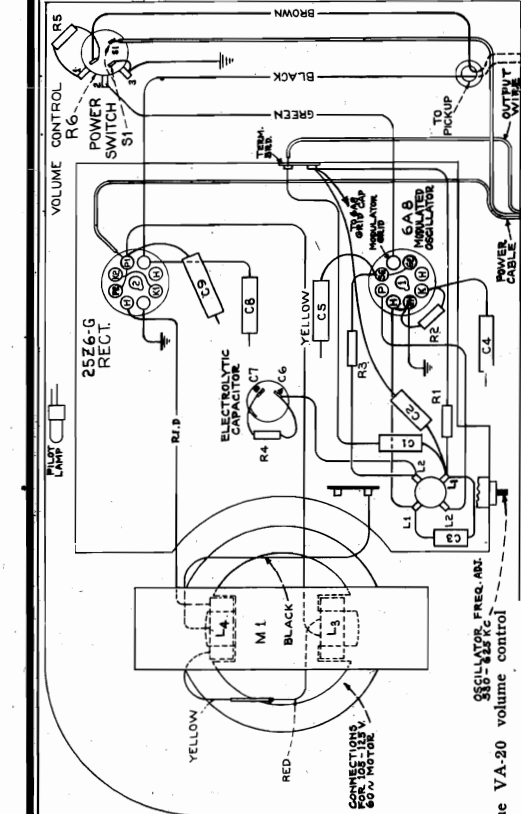


Removing Rotor.—The rotor and turntable assembly simply rests on the ball bearing at bottom of vertical bearing. Remove by lifting upward.

Rotor Adjustment.—Remove motor from cabinet. Loosen the three screws that hold the rotor to the turntable, insert three 16-mil shims at equal distances around the gap between the rotor and stator, and then carefully tighten the three screws. The top of rotor must be flush with top of stator; add additional steel washers beneath the stator if necessary.

Note: Voltages with star (*) are operating voltages in circuits with high series resistance. The actual measured voltage will be lower, depending on the voltmeter loading. Voltages are measured to chassis, unless otherwise indicated. Values should hold within approximately $\pm 20\%$ with 117-volt a-c supply.


Precautionary Lead Dress

1. The power supply cord must be dressed between chassis and top of cabinet, away from grid of 6A8, and entirely away from 25Z6-G.
 2. All leads to oscillator coil must be as short as possible.
 3. All motor leads must be dressed away from rotor.
 4. Pickup leads must be dressed away from the top grid of 6A8, and kept away from the 25Z6-G.
- Caution: Do not remove turntable from motor while power is turned on, as damage to the tubes will result.**

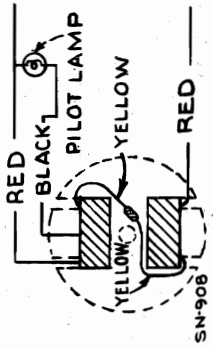

50-Cycle Motor Coil Assembly and Connections
 D-C resistance of each coil:


105-125 volts, 60 cycles	36 ohms
105-125 volts, 50 cycles	40 ohms

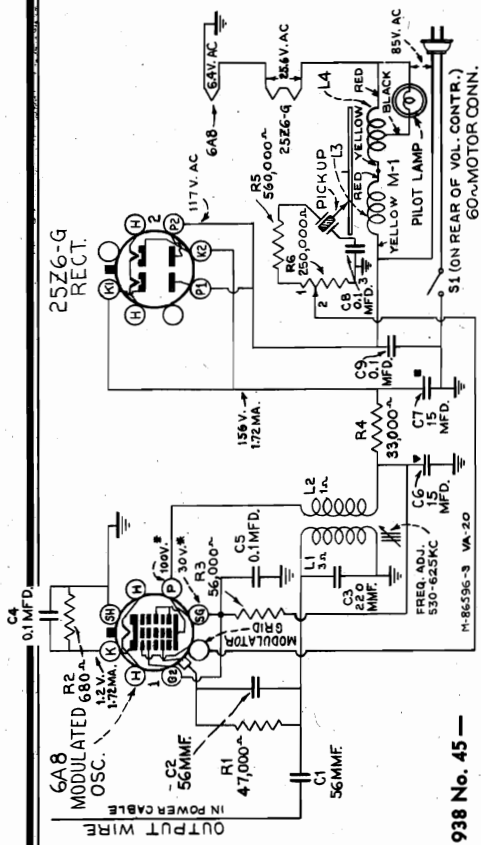

is likely to be required, and then use the VA-20 volume control for further adjustment. It may be desirable to leave the VA-20 volume control turned full clockwise, and regulate the radio volume control for the desired level.

6. If there is insufficient volume, or excessive noise, the remedy is to couple the VA-20 to the radio receiver, by running a piece of insulated wire between the two units: Wrap one end (three or four turns) around the antenna lead-in on the radio, and wrap the other end (three or four turns) around the short wire that projects from the plug on the power cord of the VA-20. With an RCA Master Antenna, wrap the wire around the counter-poise lead where it attaches to the receiver (terminal A3) or to the coupling unit (terminal B).

7. If the radio receiver has push-button tuning, one of the buttons may be set up to tune in the VA-20 oscillator frequency. This button should be marked "Record Player."

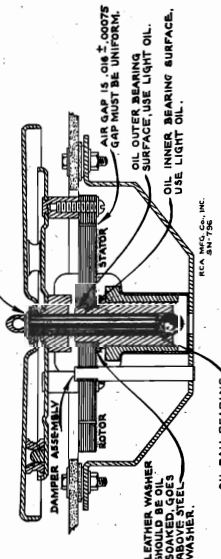

Smooth starting and running will be insured by keeping the bearings well cleaned and oiled.

Hum and Vibration.—A small amount of hum when starting, decreasing to a negligible amount when running, is normal. If excessive vibration occurs it may be due to:

1. Insufficient lubrication, or any failure that will cause binding.
2. Leather washer not oiled. (Check to make certain that the motor is properly supported from motor board.)
3. Burrs on poles of rotor or stator. Remove with fine emery cloth.

The damper spring must fit without binding or chattering in the slot in the stator. The stator must be free to deflect in either direction between the limits of the damper spring. The damper spring must exert approximately equal force in restoring the stator to its mid-position when the stator is deflected manually in each direction.

Motor Data

- Smooth starting and running will be insured by keeping the bearings well cleaned and oiled.
- Hum and Vibration.**—A small amount of hum when starting, decreasing to a negligible amount when running, is normal. If excessive vibration occurs it may be due to:
1. Insufficient lubrication, or any failure that will cause binding.
 2. Leather washer not oiled. (Check to make certain that the motor is properly supported from motor board.)
 3. Burrs on poles of rotor or stator. Remove with fine emery cloth.
- The damper spring must fit without binding or chattering in the slot in the stator. The stator must be free to deflect in either direction between the limits of the damper spring. The damper spring must exert approximately equal force in restoring the stator to its mid-position when the stator is deflected manually in each direction.

General Description

The crystal pickup in Model VA-20 is connected through a volume control to grid No. 1 in an RCA-6A8 tube which functions as a modulated r-f oscillator. The oscillator frequency can be adjusted from 550 to 625 kc by means of a magnetite core in the oscillator transformer, L1-L2. (This is a screwdriver adjustment at the rear of the cabinet.) An output wire is connected to the grid circuit of the oscillator, and is run parallel with the power cable. The output is sufficient to permit operation within approximately 20 feet of a radio receiver.

Electrical and Mechanical Specifications

FREQUENCY RANGE	530-625 kc
TUBE COMPLEMENT	
(1) RCA-6A8	Modulator-Oscillator
(2) RCA-25Z6-G	Half-Wave Rectifier
Dial Lamp	Mazda 47, 6-8 volts, .15 amp.
POWER SUPPLY RATINGS	
A-6	105-125 volts, 60 cycles, 50 watts
A-5	105-125 volts, 50 cycles, 50 watts
MOTOR	
Type	Synchronous (Manual Starting)
Turntable Speed	78 r.p.m.
PICKUP	
Type	Crystal
Pickup Impedance	100,000 ohms at 1000 cycles
Average Output Voltage	31 volts at 1000 cycles with 250,000 ohm load.
CABINET DIMENSIONS	
Height	38 inches
Width	12 1/2 inches
Depth	8 1/2 inches
Over-All Height	5 inches
Turntable Diameter	7 inches
Weight	7 1/2 lbs. (shipping)


Set-Up Procedure

1. Insert plug in power supply outlet, and turn the power-switch control knob on top of VA-20 to full clockwise position. Set a record on the VA-20. The motor is a synchronous manual-starting type and requires a clockwise spin to start.
2. Tune the radio receiving set to a quiet point between 530-625 kc.
3. Tune the oscillator in the VA-20 to this frequency by adjusting the button on the rear of the VA-20 cabinet to obtain peak output on the receiver. Clockwise rotation decreases the frequency; counter-clockwise rotation increases the frequency.
4. Adjust the radio volume control for the highest volume that

RCA MFG. CO., INC.

MODEL U-43, Chassis RC498 E
Schematic, Voltage, Tuner

FOR RECORD CHANGER DATA
SEE MODEL RP-139A

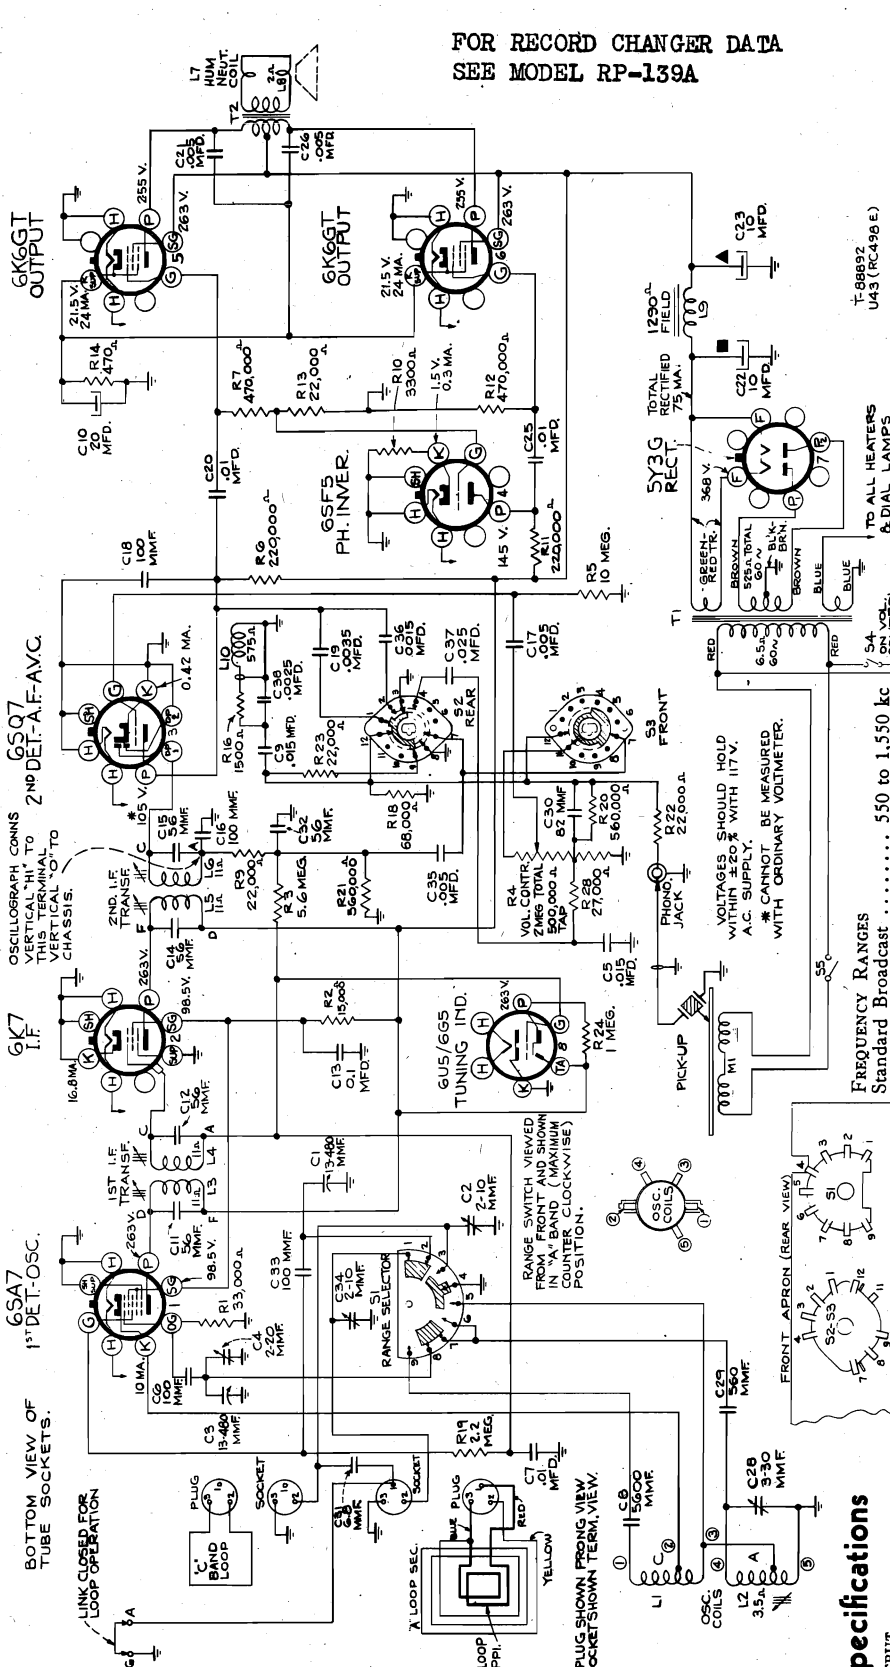

Specifications

- Power Output
 - Undistorted 5 watts
 - Maximum 6 watts
- Philor Lamps (2) . . . Mazda No. 44 6.3 volts, 0.25 amps. B2 105-125 volts, 25 cycles, 110 watts
- 500,000 ohm ZMEG total impedance
- 60 cycles, 110 watts C6 105-130/140-160/200-250 volts, 60 cycles, 110 watts
- 50 cycles, 110 watts
- 25 cycles, 110 watts C5 105-130/140-160/200-250 volts, 50 cycles, 110 watts

Adjustments for Push-Button Tuning


1. Pull off the push-buttons and loosen the push-button rods with a small screwdriver.
2. Set the radio-phonograph switch to "radio" position and accurately tune in the station for which the first button is to be set.
3. Press in push-button rod No. 1 (left) with the screwdriver, as far as it will go without undue pressure, hold in, retune station with manual control if necessary for best reception, and then carefully tighten up the rod. Do not tighten more than 1/4 turn after the rod begins to grip or damage to the mechanism may result.
4. Replace the push-button on its shaft.
5. Proceed in a similar manner for the remainder of the push-buttons.
6. Insert the station marker tabs in the recesses above the push-buttons.

Specifications

- Standard Broadcast 550 to 1,550 kc
- Short Wave 6 to 18 mc
- I-F Frequency 455 kc
- 60 cycles, 110 watts C6 105-130/140-160/200-250 volts, 60 cycles, 110 watts
- 50 cycles, 110 watts
- 25 cycles, 110 watts C5 105-130/140-160/200-250 volts, 50 cycles, 110 watts

Specifications


- 500,000 ohm ZMEG total impedance
- 60 cycles, 110 watts C6 105-130/140-160/200-250 volts, 60 cycles, 110 watts
- 50 cycles, 110 watts
- 25 cycles, 110 watts C5 105-130/140-160/200-250 volts, 50 cycles, 110 watts

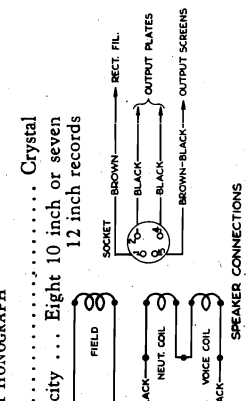

MODEL U-43, Ch. RC498E
Alignment, Trimmers
Socket, Dial Mechanism

RCA MFG. CO., INC.

Alignment Procedure

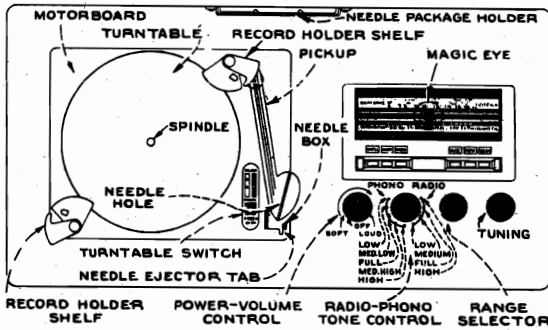

Output Meter Alignment.—If this method is used, connect the output meter across the voice coil, and turn the receiver volume control to maximum.

Test Oscillator.—For all alignment operations, keep the oscillator output as low as possible to avoid a-v-c action.

Calibration Marks.—The tuning dial is fastened in the cabinet and can not be used for reference during alignment. Therefore calibration marks have been stamped in the plate on the front of the chassis as shown in the accompanying drawing. These marks are used for reference during alignment.

Dial Indicator Adjustment.—With the gang condenser in full mesh, the indicator should point to the extreme left (low frequency) mark on the dial scale.


Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown on the chassis schematic.

Steps	Connect test-osc. output to—	Tune test-osc. to—	Turn radio dial to	Adjust the following for maximum peak output
1	I-F grid through 0.1 mfd capacitor and ground	455 kc	Quiet point between 1,720-1,500 kc	L5 and L6 (2nd I-F trans.)
2	1st det. grid through 0.1 mfd capacitor and ground			L3 and L4 (1st I-F trans.)
3	Radiation loop consisting of two turns of wire 18 inches in diameter located 4 to 6 feet from receiver	15.2 mc	15.2 mc	C-4 oscillator*
4		15.2 mc	Rock at 15.2 mc	C-2 antenna† while rocking
5		6.1 mc	6.1 mc	Spacing between leads from "C" band loop to chassis
6		15.2 mc	Rock at 15.2 mc	C-2 antenna† while rocking
7		1,500 kc	1,500 kc	C-34 antenna C-28 oscillator
8		600 kc	Rock at 600 kc	L-2 oscillator while rocking
9		1,500 kc	1,500 kc	C-34 antenna C-28 oscillator


When making adjustments 4 to 9 inclusive the chassis must be in the cabinet, both loops connected, and all leads in their normal positions. When mounting chassis in cabinet if calibration marks on dial plate do not line up with dial scale mounted on cabinet move pointer to agree with dial scale on cabinet.

* Oscillator should track on high frequency side of signal. If two peaks are obtained use high frequency (minimum capacity) peak.

† If two peaks can be obtained use low frequency (maximum capacity) peak.

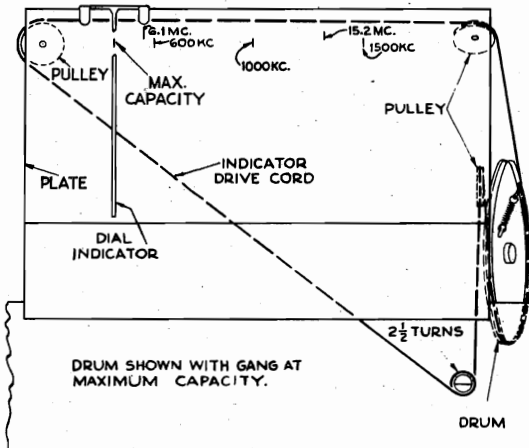

Dial-Indicator and Drive Mechanism

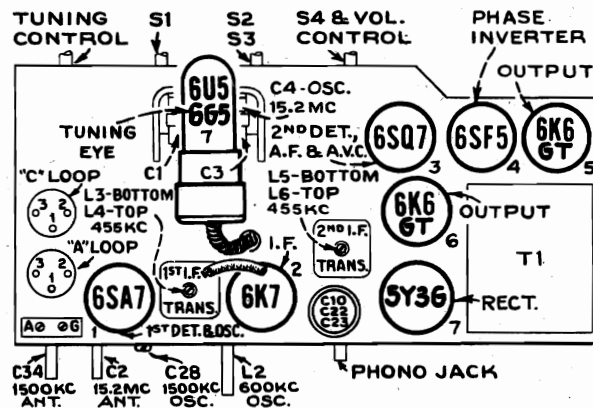


Tube and Trimmer Locations

S.P.U. Schematic

RCA MFG. CO., INC.

MODEL U44, Chassis RC486B
Schematic, Speaker Conn.

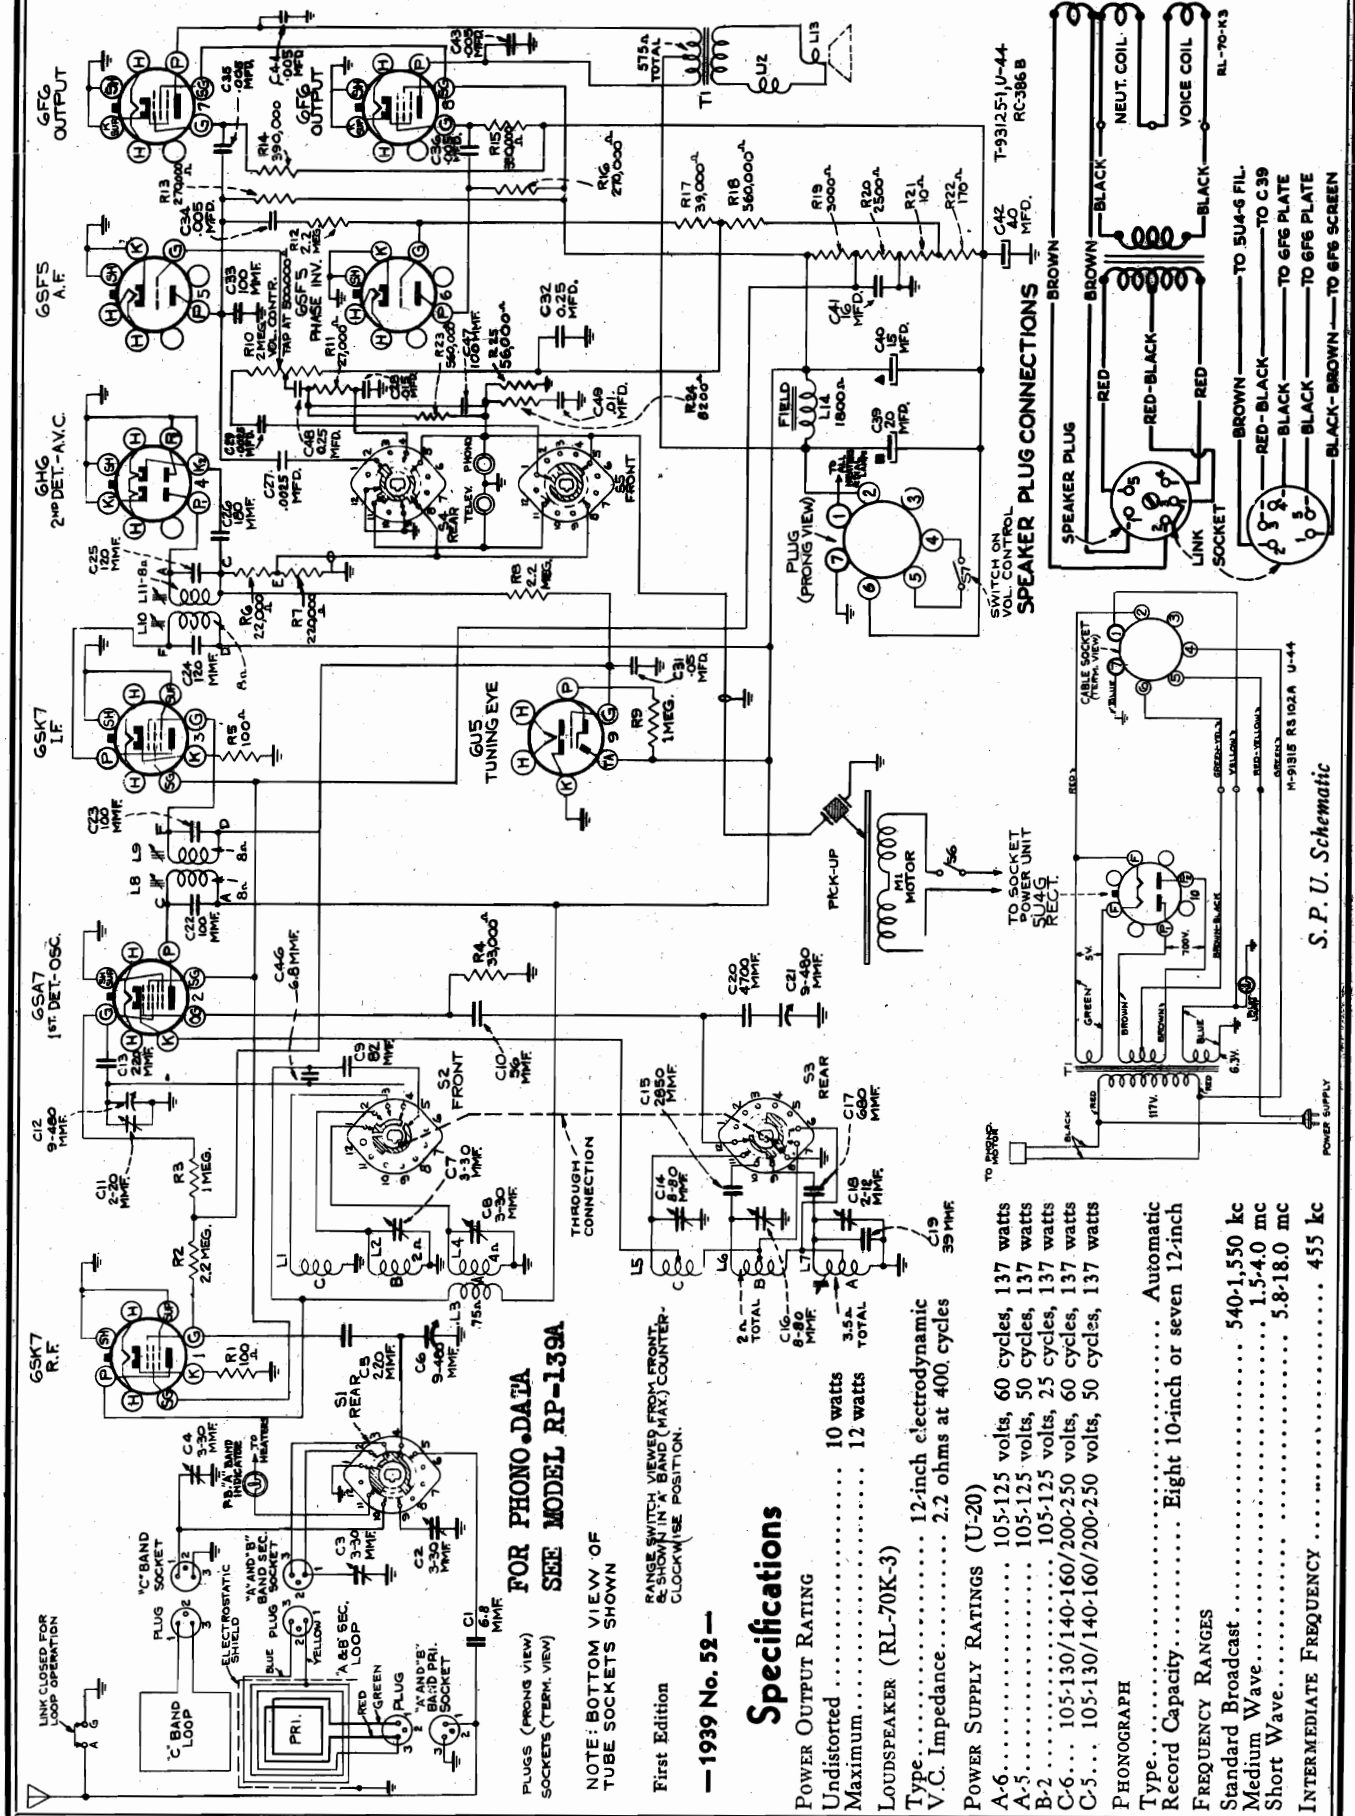

FOR PHONO DATA
SEE MODEL RP-139A

NOTE: BOTTOM VIEW OF
TUBE SOCKETS SHOWN

First Edition
RANGE SWITCH VIEWED FROM FRONT
& SHOWN IN 'A' BAND (MAX) POSITION.
CLOCKWISE POSITION.



— 1939 No. 52 —

Specifications

- POWER OUTPUT RATING
 - Undistorted 10 watts
 - Maximum 12 watts
- LOUDSPEAKER (RL-70K-3)
 - Type 12-inch electrodynamic
 - V.C. Impedance 2.2 ohms at 400. cycles
- POWER SUPPLY RATINGS (U-20)
 - A-6 105-125 volts, 60 cycles, 137 watts
 - A-5 105-125 volts, 50 cycles, 137 watts
 - B-2 105-125 volts, 25 cycles, 137 watts
 - C-6 105-130/140-160/200-250 volts, 60 cycles, 137 watts
 - C-5 105-130/140-160/200-250 volts, 50 cycles, 137 watts

PHONOGRAPH

- Type Automatic
- Record Capacity Eight 10-inch or seven 12-inch
- FREQUENCY RANGES
 - Standard Broadcast 540-1,550 kc
 - Medium Wave 1.5-4.0 mc
 - Short Wave 5.8-18.0 mc
- INTERMEDIATE FREQUENCY 455 kc

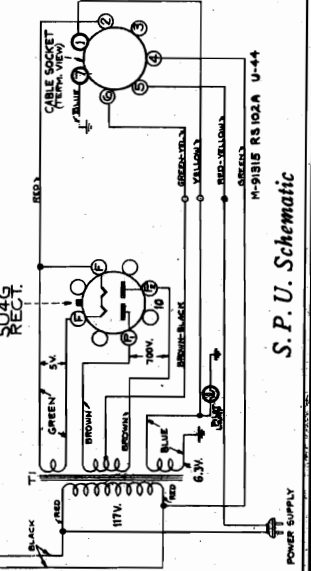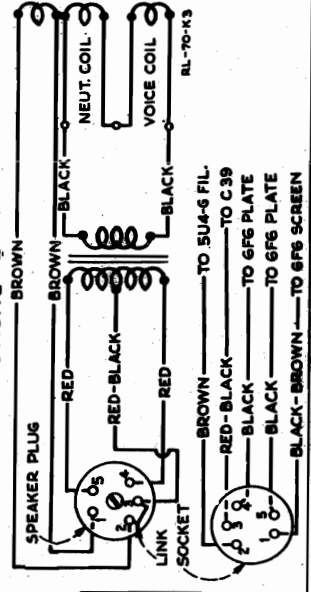

S. P. U. Schematic

MODEL U44, Chassis RC486B
Chassis Wiring, Voltage

RCA MFG. CO., INC.

Tuner, Trimmers,
Socket

button is to be set.

The push-buttons should be adjusted for six favorite stations after the receiver has been operating for a brief warm-up period. Each button may be set up to any standard broadcast station. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:


1. Remove station marker tabs; reach through tab holes in escutcheon with small screwdriver and loosen push-button rods.
2. Set the radio-phonotelevision switch to "radio" position and accurately tune in the station for which the first push-button is to be set.
3. Press in push-button rod No. 1 with the screwdriver, as far as it will go without undue pressure, hold in, return station with manual control if necessary for best reception, and then carefully tighten up the rod. Do not tighten more than 1/4 turn after the rod begins to grip or damage to the mechanism may result.
4. Proceed in a similar manner for the remainder of the push-buttons.
5. Insert the station marker tabs in the recesses adjacent to the push-buttons.

PHONO-TONE CONTR. R18 TAP 4 VOL. CONTROL R10

VOLTAGES AND CURRENTS
SHOWN ARE APPROXIMATE
WITH 117 V. A.C. SUPPLY.

Tube and Trimmer Locations

PHONO JACK
TELEVISION JACK
C14
C16
C18
C19
C20
C21
C22
C23
C24
C25
C26
C27
C28
C29
C30
C31
C32
C33
C34
C35
C36
C37
C38
C39
C40
C41
C42
C43
C44
C45
C46
C47
C48
C49
C50
C51
C52
C53
C54
C55
C56
C57
C58
C59
C60
C61
C62
C63
C64
C65
C66
C67
C68
C69
C70
C71
C72
C73
C74
C75
C76
C77
C78
C79
C80
C81
C82
C83
C84
C85
C86
C87
C88
C89
C90
C91
C92
C93
C94
C95
C96
C97
C98
C99
C100

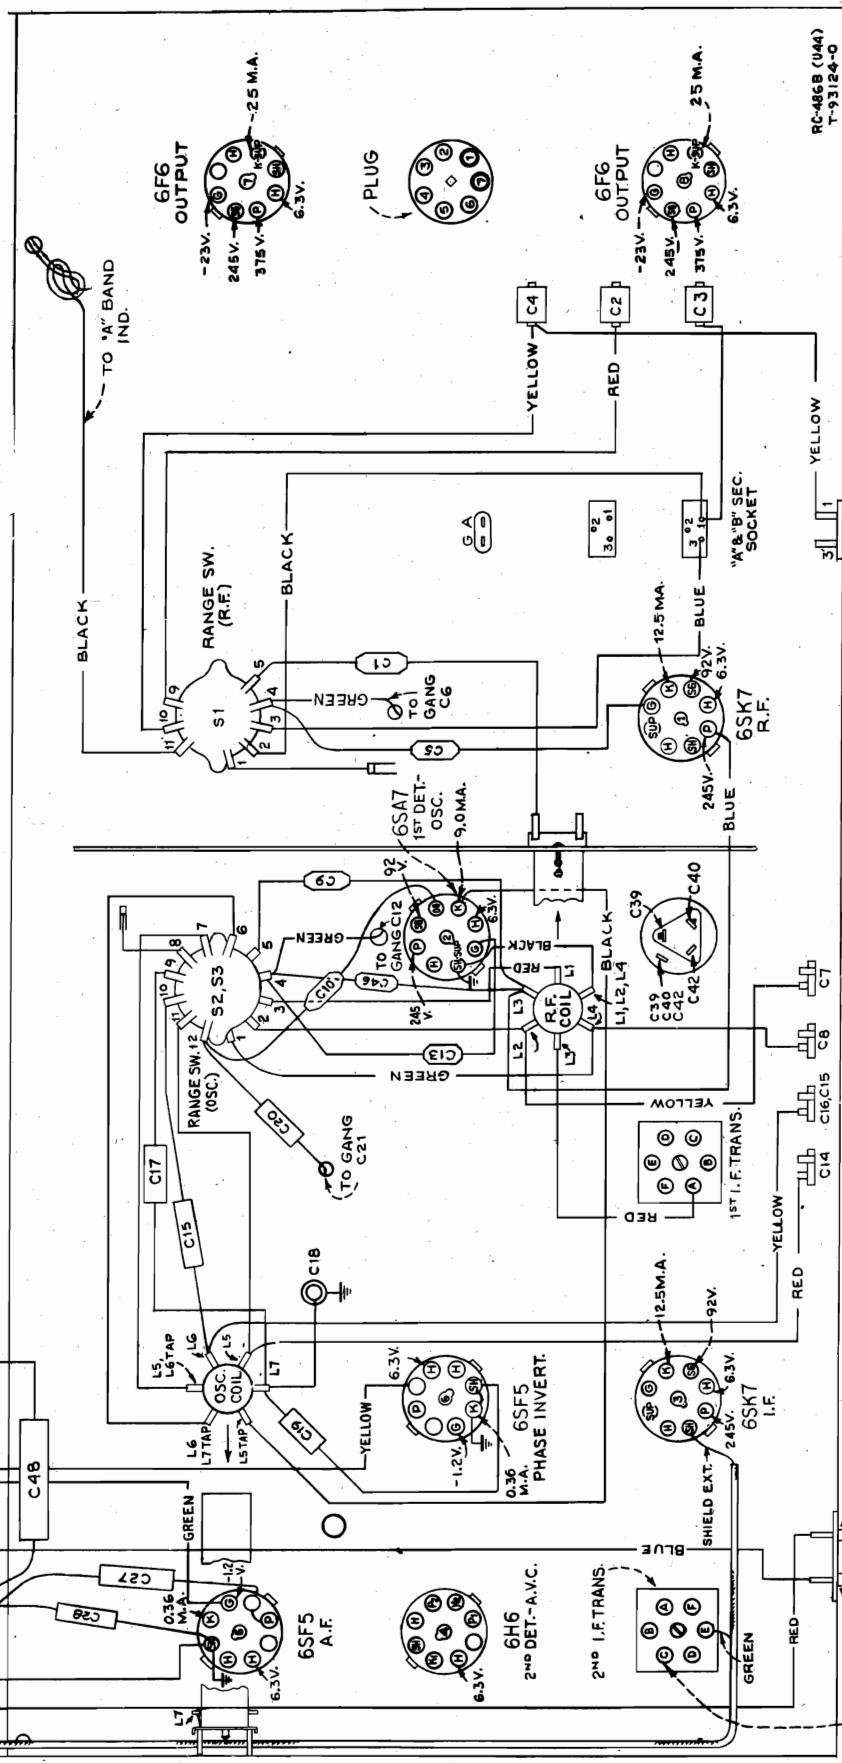

PHONO, TELEV. CATHODE RAY OSCILLOGRAPH VERTICAL "H" TO THIS TERM.
VERTICAL "G" TO CHASSIS

RC-486B (U44)
T-93124-0

BOTTOM VIEW-REAR OF CHASSIS

RCA MFG. CO., INC.

MODEL U44, Chassis RC486B

Alignment, Lead Dress

Antennas

This receiver is equipped with two loop antennas ("C" band horizontal and fixed, and "A" and "B" band vertical, shielded, and rotatable). During installation the "A" and "B" band loop should be rotated to the position giving maximum signal strength and freedom from noise. If desired, an outside antenna and ground can be connected to the terminals provided and when this is done the link between these terminals must be opened. However, for loop operation this link must be closed. If such an antenna is used it should be approximately 100 feet long.

Alignment Procedure

Before proceeding with alignment the following lead dress should be carefully checked:

1. A.C. leads at volume control dressed away from audio leads.
2. C-29 dressed close to chassis.
3. C-48 dressed under volume control.
4. Dress C-44 and 6F6 plate leads away from antenna leads.
5. Leads to phono and television jacks dressed close to end of chassis.
6. Red lead from R.F. coil to range switch short and direct as possible.
7. Leads to loop sockets dressed away from chassis and other leads.
8. Green lead from volume control arm to A.F. grid close to chassis.

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis wiring drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, keep the six steps in alignment the low side of the test-oscillator should

output as low as possible to avoid a-v-c action. For the first be connected to the receiver chassis. Following step 6, the signal must be radiated (see alignment table).

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the tuning drum. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 240° mark on the drum scale must be vertical and directly above the center of the shaft of the tuning drum when the plates are fully meshed. The drum is held to the shaft by means of two set-screws, which must be tightened securely when the drum is in the correct position.

On the inner side of the tuning drum are two projections which serve as stops to prevent extreme rotation of the gang condenser. The tuning drum should be set so that the stop limiting clockwise movement of the drum takes effect just as the gang condenser plates are becoming fully meshed, thus preventing stress on the gang due to extreme rotation.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the chassis, and bend the wire so that it points to the 240° mark on the calibration scale when the plates are fully meshed.

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	6SK7 I-F grid in series with .01 mfd.	455 kc	"A" band Quiet point near 600 kc	L10 and L11 (2nd I-F trans.)
2	6SA7 det. grid in series with .01 mfd.			L8 and L9 (1st I-F trans.)
3	6SK7 R-F grid in series with 0.1 mfd.	15.2 mc	15.2 mc (47°) "C" band	C14 (osc.)* C11 (det.)***
4		3.44 mc	3.44 mc (57°) "B" band	C16 (osc.)** C7 (det.)
5		600 kc	600 kc (200°) "A" band	L7 (osc.) Rock gang
6		1,500 kc	1,500 kc (22°) "A" band	C18 (osc.) C8 (det.)
7		15.2 mc	15.2 mc "C" band	C4 (ant.)
8		6.1 mc	6.1 mc "C" band	Inductance of "C" band loop†
9	Radiation loop consisting of two turns of wire 18 inches in diameter located 4 to 6 feet from receiver	Repeat step 7		
10		3.44 mc	3.44 mc "B" band	C2 (ant.)
11		1,500 kc	1,500 kc "A" band	C3 (ant.)
12		600 kc	600 kc "A" band	L7 (osc.) Rock gang
13		1,500 kc	1,500 kc "A" band	C18 (osc.) C8 (det.)

Note.—For steps 7 to 13 inclusive the chassis must be in the cabinet, all loop leads connected and in their normal positions. The dial indicator pointer must be fastened to the drive cord in such a position that it is at the 530 kc mark on "A" scale when the gang condenser plates are fully meshed.

* Use **minimum** capacity peak if two can be obtained. Check to determine that C14 has been adjusted to the correct peak by tuning the receiver to approximately 14.29 mc where a weaker signal should be received.

** Use **minimum** capacity peak if two can be obtained. Check to determine that C16 has been adjusted to the correct peak by tuning the receiver to approximately 2.53 mc where a weaker signal should be received.



*** Use **maximum** capacity peak if two peaks can be obtained and rock gang condenser while adjusting.

† Adjust the inductance of "C" band loop by varying the spacing between the leads of the loop. Moving the leads closer together decreases the inductance and tunes the loop to a higher frequency; moving the leads farther apart increases the inductance and tunes the loop to a lower frequency.




Important.—The oscillator tracks **above** the signal on all bands.

MODELS 45E, 45E-m, 45E-W
Chassis RC-435A
Schematic, Voltage
Alignment, Lead Dress
Trimmers, Socket

RCA MFG. CO., INC.

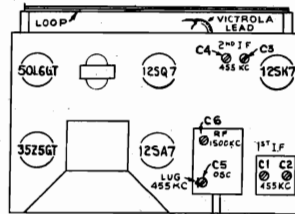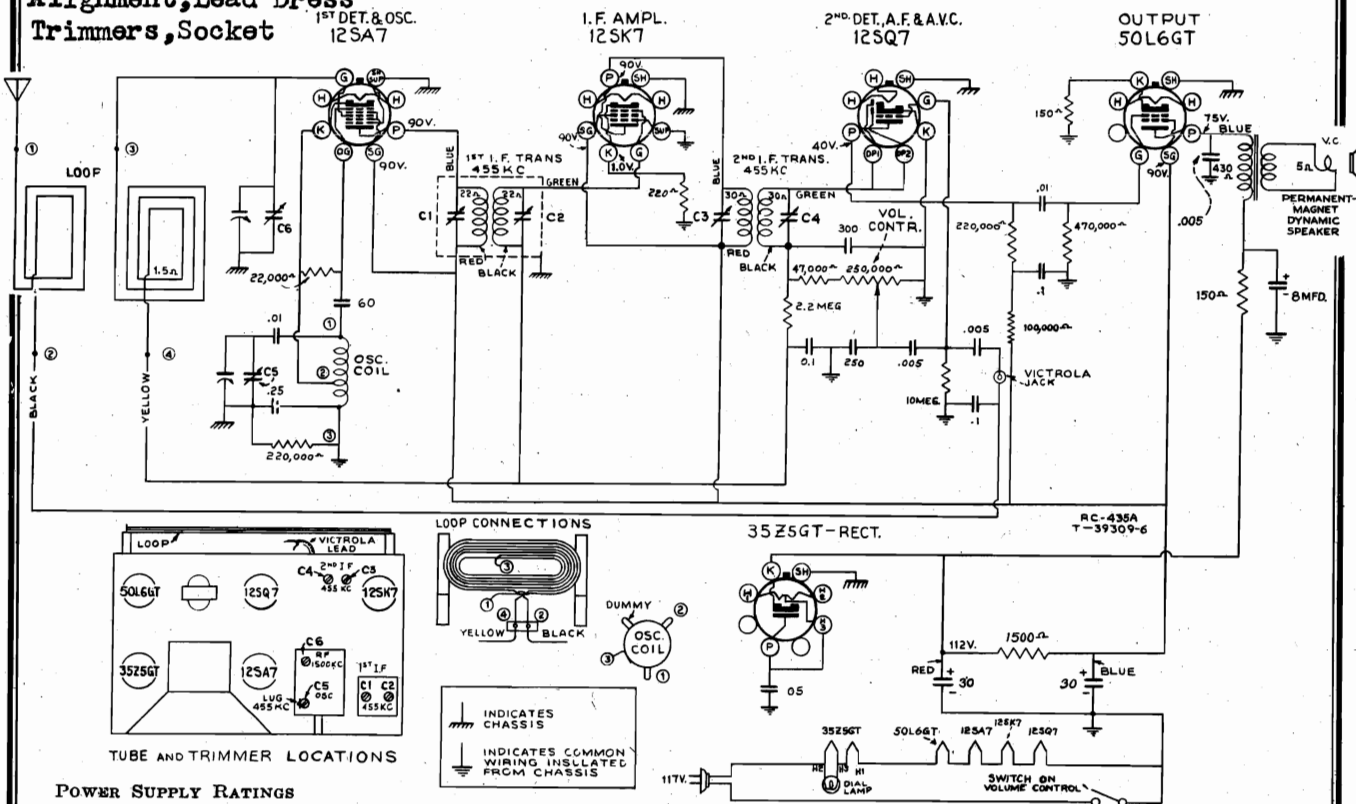

LOOP CONNECTIONS

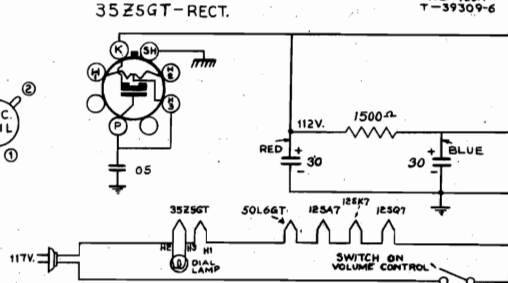

POWER SUPPLY RATINGS

A-C Rating..... 105-125 volts, 50-60 cycles, 30 watts
 D-C Rating..... 105-125 volts, direct current, 30 watts

POWER OUTPUT (125 volt, 60 cycle supply)

Undistorted..... .6 watts
 Maximum..... 2.0 watts

LOUDSPEAKER

Type..... 5-inch permanent magnet dynamic

Pre-Setting Dial.—With gang condenser in full mesh, the pointer should be adjusted so that top edge of pointer just touches rivet in dial plate.

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the "ANT" terminal on rear of cabinet. It should be no longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. loop in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal	C6 (antenna)

Precautionary Lead Dress

1. Dress 2nd I-F green lead close to chassis and under other parts.
2. Dress lead from gang condenser to grid of 12SA7 close to chassis and away from 12SQ7 socket.
3. Dress blue 1st I-F lead under volume control close to chassis.
4. Dress blue 2nd I-F lead close to chassis and behind 12SK7 socket.

STOCK No.	DESCRIPTION	Unit List Price
33296	Spring—Retaining spring for drum	.08
32966	Transformer—First I-F transformer	1.25
32967	Transformer—Second I-F transformer	1.05
33291	Volume control and switch	1.50
SPEAKER ASSEMBLIES (39213-1)		
33853	Cone—Speaker cone and voice coil	1.75
33851	Speaker complete	4.50
33854	Transformer—Output transformer	1.20
CHASSIS ASSEMBLIES		
13057	Capacitor—60 mmfd.	.35
12488	Capacitor—250 mmfd.	.35
12952	Capacitor—300 mmfd.	.35
4838	Capacitor—.005 mfd.	.25
32787	Capacitor—.05 mfd.	.20
4839	Capacitor—0.1 mfd.	.30
12484	Capacitor—0.25 mfd.	.30
33952	Capacitor—Electrolytic, 8 mfd.	.50
33850	Capacitor—Electrolytic, 2 sections 30 mfd. each	1.00
34259	Coil—Oscillator coil	.60
32968	Condenser—Variable tuning condenser	2.25
32634	Cord—Drive cord	.10
33862	Drum—Drive drum	.25
33295	Indicator—Dial pointer	.25



Stock No.	DESCRIPTION	Unit List Price
11765	Lamp—Dial lamp	.15
33683	Loop—Antenna loop complete	1.20
33294	Pulley—Drive cord pulley	.02
13428	Resistor—150 ohms, 1/2 watt	.20
14561	Resistor—220 ohms, 1/2 watt	.20
3153	Resistor—1,500 ohms, 1 watt	.22
13998	Resistor—22,000 ohms, 1/2 watt	.20
12412	Resistor—47,000 ohms, 1/2 watt	.20
14560	Resistor—100,000 ohms, 1/2 watt	.20
12264	Resistor—220,000 ohms, 1/2 watt	.20
12199	Resistor—270,000 ohms, 1/2 watt	.20
12879	Resistor—2.2 meg., 1/2 watt	.20
33293	Shaft—Tuning knob shaft and bushing	.30
33557	Socket—Dial lamp socket	.30
32537	Socket—Tube socket	.20
31615	Spring—Drive cord spring	.02

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

MODEL U45, Chassis RC486C
Chassis Wiring, Voltage

RCA MFG. CO., INC.

Lead Dress, Tuner

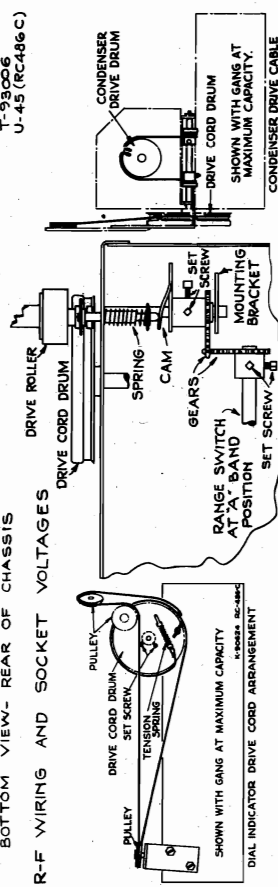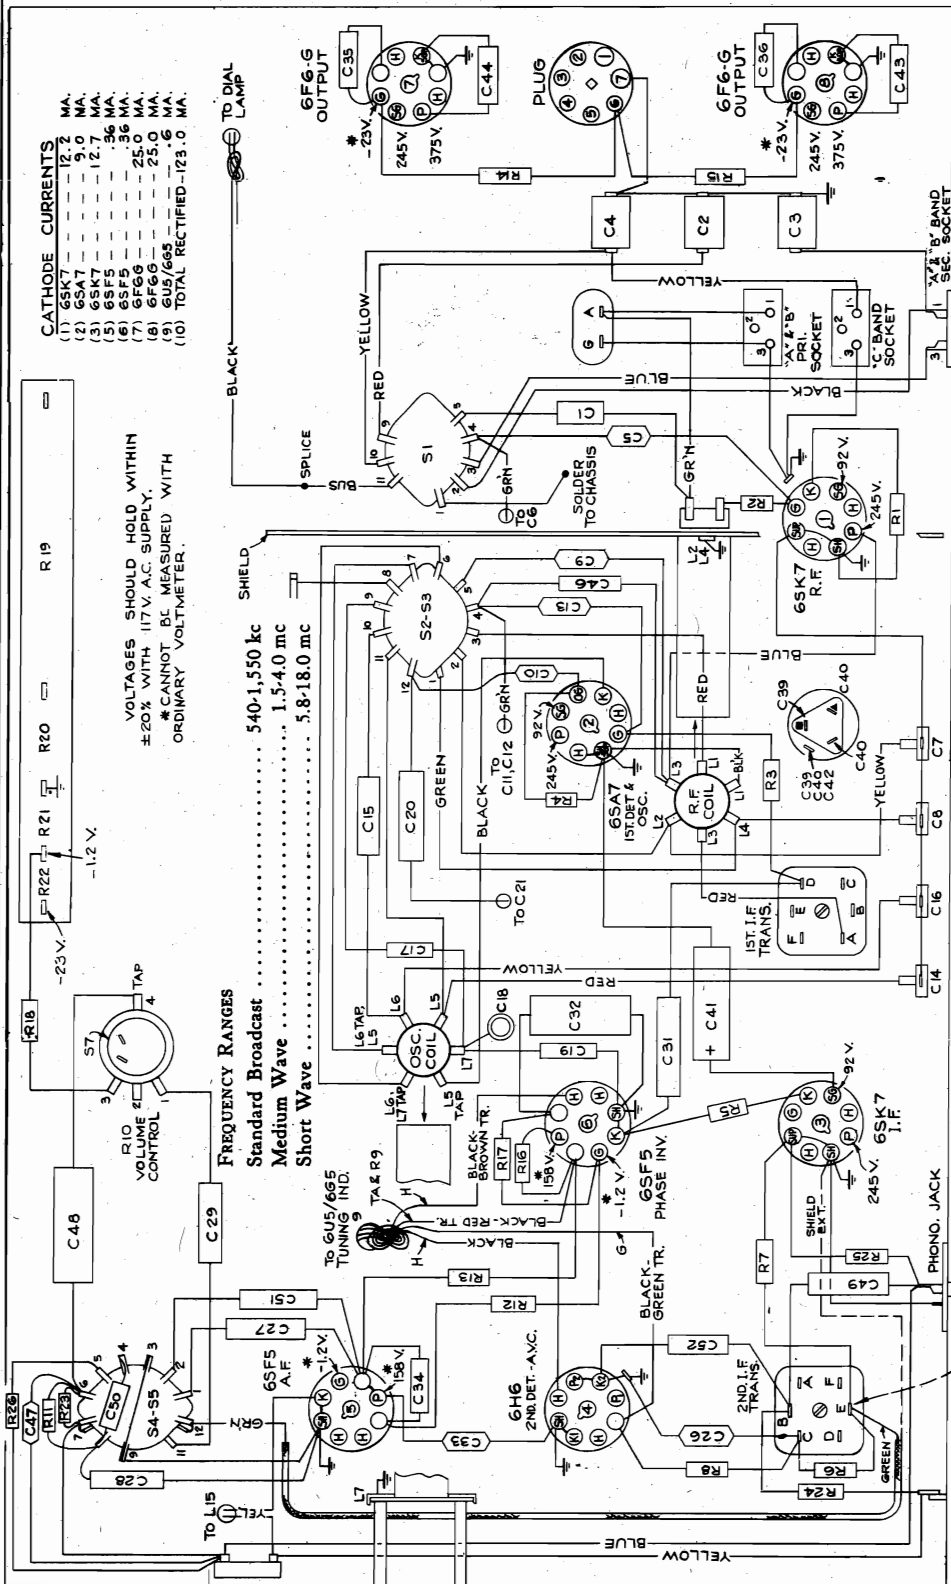

OSCILLOGRAPH CONNECTIONS
VERTICAL "H" TO THIS TERMINAL
VERTICAL "O" TO CHASSIS

- Precautionary Lead Dress:**
1. A.C. leads at volume control dressed away from audio leads.
 2. C-29 dressed close to chassis.
 3. C-48 dressed under volume control.
 4. Dress C-44 and 6F6-G plate leads away from antenna leads.
 5. Leads to phono jack dressed close to end of chassis.
 6. Red lead from R.F. coil to range switch short and direct as possible.
 7. Leads to loop sockets dressed away from chassis and other leads.
 8. Green lead from volume control arm to A.F. grid close to chassis.

CATHODE CURRENTS

(1) 6SK7	12.7 MA.
(2) 6S4	5.0 MA.
(3) 6SK7	12.7 MA.
(4) 6S5	12.7 MA.
(5) 6S7	12.7 MA.
(6) 6S5	36 MA.
(7) 6F6-G	25.0 MA.
(8) 6G6-G	25.0 MA.
(9) 6S9/6S5	12.3 MA.
(10) TOTAL RECTIFIED	123.0 MA.

VOLTAGES SHOULD HOLD WITHIN
±20% WITH 117 V. A.C. SUPPLY.
* CANNOT BE MEASURED WITH
ORDINARY VOLTMETER.


FREQUENCY RANGES
Standard Broadcast 540-1,550 kc
Medium Wave 1.5-4.0 mc
Short Wave 5.8-18.0 mc

**Adjustments
for
Push-Button
Tuning**

The push-buttons should be adjusted for six favorite stations after the receiver has been operating for a brief warm-up period. Each button may be set up to any standard broadcast station. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:

1. Remove station marker tabs; reach through tab holes in escutcheon with small screwdriver and loosen push-button rods.
2. Set the radio-phono switch to "radio" position and accurately tune in the station for which the first button is to be set.

3. Press in push-button rod No. 1 with the screwdriver, as far as it will go without undue pressure, hold in, retune station with manual control if necessary for best reception, and then carefully tighten up the rod. Do not tighten more than 1/4 turn after the rod begins to grip or damage to the mechanism may result.
4. Proceed in a similar manner for the remainder of the push-buttons.
5. Insert the station marker tabs in the recesses adjacent to the push-buttons.

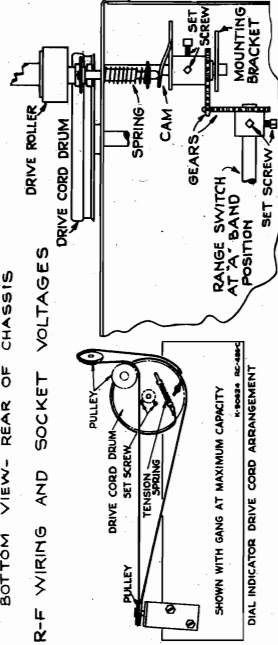


Note: Adjustment of the cam should be such that in "A" band position when push-buttons are operated, the drive cord drum will turn freely without rubbing or binding against the drive roller.

MODEL U45, Chassis RC486C
Alignment, Trimmers
Socket

RCA MFG. CO., INC.

Alignment Procedure

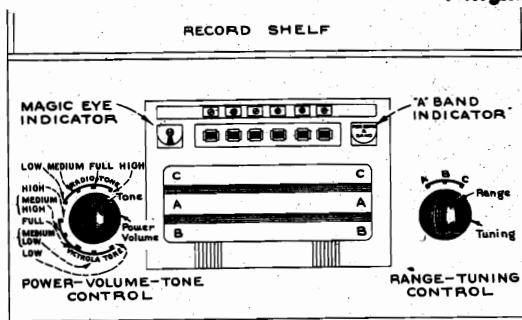

Controls

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis wiring drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.


Test-Oscillator.—For all alignment operations, keep the output as low as possible to avoid a-v-c action. For the first six steps in alignment the low side of the test-oscillator should be connected to the receiver chassis. Following step 6, the signal must be radiated (see alignment table).

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the tuning drum. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 240° mark on the drum scale must be vertical and directly above the center of the shaft of the tuning drum when the plates are fully meshed. The drum is held to the shaft by means of two set-screws, which must be tightened securely when the drum is in the correct position.

On the inner side of the tuning drum are two projections which serve as stops to prevent extreme rotation of the gang condenser. The tuning drum should be set so that the stop limiting clockwise movement of the drum takes effect just as the gang condenser plates are becoming fully meshed, thus preventing stress on the gang due to extreme rotation.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the chassis, and bend the wire so that it points to the 240° mark on the calibration scale when the plates are fully meshed.

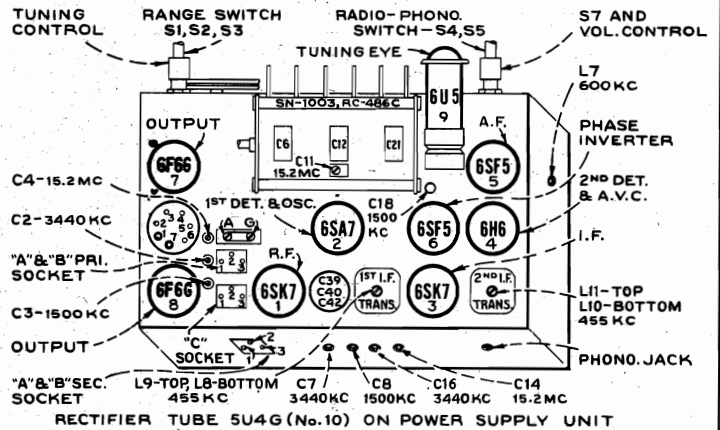

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	6SK7 I-F grid in series with .01 mfd.	455 kc	"A" band Quiet point near 600 kc	L10 and L11 (2nd I-F trans.)
2	6SA7 det. grid in series with .01 mfd.			L8 and L9 (1st I-F trans.)
3	6SK7 R-F grid in series with 0.1 mfd.	15.2 mc	15.2 mc (47°) "C" band	C14 (osc.)* C11 (det.)***
4		3.44 mc	3.44 mc (57°) "B" band	C16 (osc.)** C7 (det.)
5		600 kc	600 kc (200°) "A" band	L7 (osc.) Rock gang
6		1,500 kc	1,500 kc (22°) "A" band	C18 (osc.) C8 (det.)
7		15.2 mc	15.2 mc "C" band	C4 (ant.)
8		6.1 mc	6.1 mc "C" band	Inductance of "C" band loop†
9		Repeat step 7		
10	Radiation loop consisting of two turns of wire 18 inches in diameter located 4 to 6 feet from receiver	3.44 mc	3.44 mc "B" band	C2 (ant.)
11		1,500 kc	1,500 kc "A" band	C3 (ant.)
12		600 kc	600 kc "A" band	L7 (osc.) Rock gang
13		1,500 kc	1,500 kc "A" band	C18 (osc.) C8 (det.)

Note.—For steps 7 to 13 inclusive the chassis must be in the cabinet, all loop leads connected and in their normal positions. The dial indicator pointer must be fastened to the drive cord in such a position that it is at the 530 kc mark on "A" scale when the gang condenser plates are fully meshed.

* Use **minimum** capacity peak if two can be obtained. Check to determine that C14 has been adjusted to the correct peak by tuning the receiver to approximately 14.29 mc where a weaker signal should be received.

** Use **minimum** capacity peak if two can be obtained. Check to determine that C16 has been adjusted to the correct peak by tuning the receiver to approximately 2.53 mc where a weaker signal should be received.


*** Use **maximum** capacity peak if two peaks can be obtained and rock gang condenser while adjusting.

† Adjust the inductance of "C" band loop by varying the spacing between the leads of the loop. Moving the leads closer together decreases the inductance and tunes the loop to a higher frequency; moving the leads farther apart increases the inductance and tunes the loop to a lower frequency.


Important.—The oscillator tracks **above** the signal on all bands.

MODELS 45X1, 45X2
Chassis RC457
Schematic, Voltage
Alignment, Socket
Trimmers

RCA MFG. CO., INC.

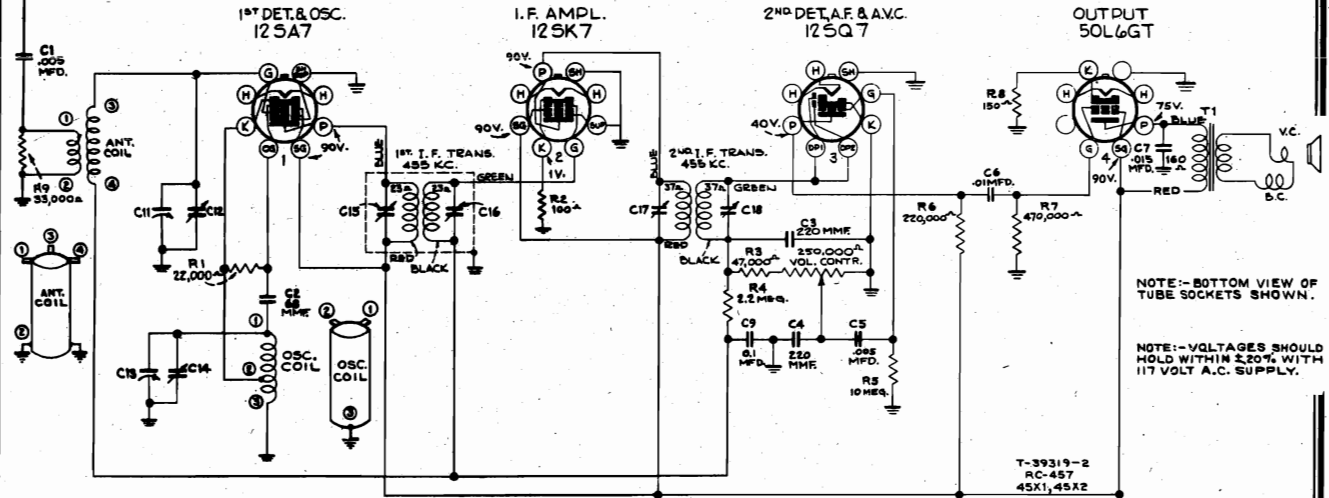

NOTE:—BOTTOM VIEW OF TUBE SOCKETS SHOWN.
 NOTE:—VOLTAGES SHOULD HOLD WITHIN 2.0% WITH 117 VOLT A.C. SUPPLY.

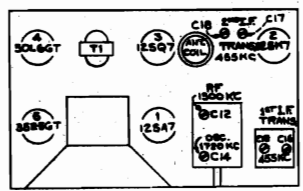

TUBE LOCATIONS

POWER SUPPLY RATINGS AND ALIGNMENT SCREW POSITIONS
 A-C Rating..... 105-125 volts, 50-60 cycles, 30 watts
 D-C Rating..... 105-125 volts, direct current, 30 watts
POWER OUTPUT (125 volt, 60 cycle supply)
 Undistorted..... .6 watts
 Maximum..... 2.0 watts
LOUDSPEAKER
 Type..... 4-inch Electrodynamic
Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C15, C16, C17, C18 (1st and 2nd I-F transformers)
2	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C14 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal	C12 (antenna)


STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES					
13057	Capacitor—.68 mmfd. (C2)	.35	35118	Shield—Shield can for I.F. transformer Stock No. 35114	.35
12694	Capacitor—.220 mmfd. (C3, C4)	.35	32969	Socket—Dial lamp socket	.25
33584	Capacitor—.005 mfd. (C1, C5)	.25	31319	Socket—Tube socket	.25
4937	Capacitor—.01 mfd. (C8)	.25	30585	Spring—Drive cord tension spring	.06
30856	Capacitor—.015 mfd. (C7)	.90	34848	Transformer—Audio transformer	1.25
32787	Capacitor—.05 mfd. (C8)	.20	35114	Transformer—1st I.F. transformer	1.20
4839	Capacitor—.1 mfd. (C9)	.30	33301	Transformer—2nd I.F. transformer	1.20
32576	Capacitor—Electrolytic comprising 1 section of 20 mfd and 1 section of 12 mfd.	.90	SPEAKER ASSEMBLIES (39105-505)		
35115	Coil—Antenna coil	.80	35120	Cone—Cone complete with voice coil	1.50
35116	Coil—Oscillator coil	.60	35119	Speaker—4-inch dynamic speaker complete	2.85
34843	Condenser—Variable tuning condenser	2.20	MISCELLANEOUS ASSEMBLIES (RR-572)		
35113	Control—Volume control and power switch	1.50	35122	Back—Cabinet back for Model 45X1	.25
32634	Cord—Drive cord	.10	35125	Back—Cabinet back for Model 45X2	.25
35117	Drum—Tuning condenser drive drum	.40	35124	Dial—Glass dial scale	1.00
11765	Lamp—Dial lamp	.15	33317	Fastener—Push on fastener	.02
31193	Lead—Antenna lead	.50	35123	Knob—Ivory tuning or volume control knob for Model 45X2	.10
14439	Resistor—100 ohms, 1/2 watt (R2)	.20	35121	Knob—Walnut tuning or volume control knob for Model 45X1	.10
30880	Resistor—150 ohms, 1/2 watt (R8)	.20	35126	Spring—Retaining spring for knobs Stock No. 35121 and 35123	.03
13998	Resistor—22,000 ohms, 1/2 watt (R1)	.20			
12412	Resistor—47,000 ohms, 1/2 watt (R3)	.20			
12264	Resistor—220,000 ohms, 1/2 watt (R6)	.20			
12285	Resistor—470,000 ohms, 1/2 watt (R7)	.20			
12879	Resistor—2.2 megohms, 1/2 watt (R4)	.20			
13601	Resistor—10 megohms, 1/2 watt (R5)	.20			
33305	Shaft—Condenser drive shaft	.25			

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

Alignment, Trimmers
Socket, Lead Dress

RCA MFG. CO., INC.

MODELS 45X5, 45X6
Chassis RC457D
Schematic, Voltage

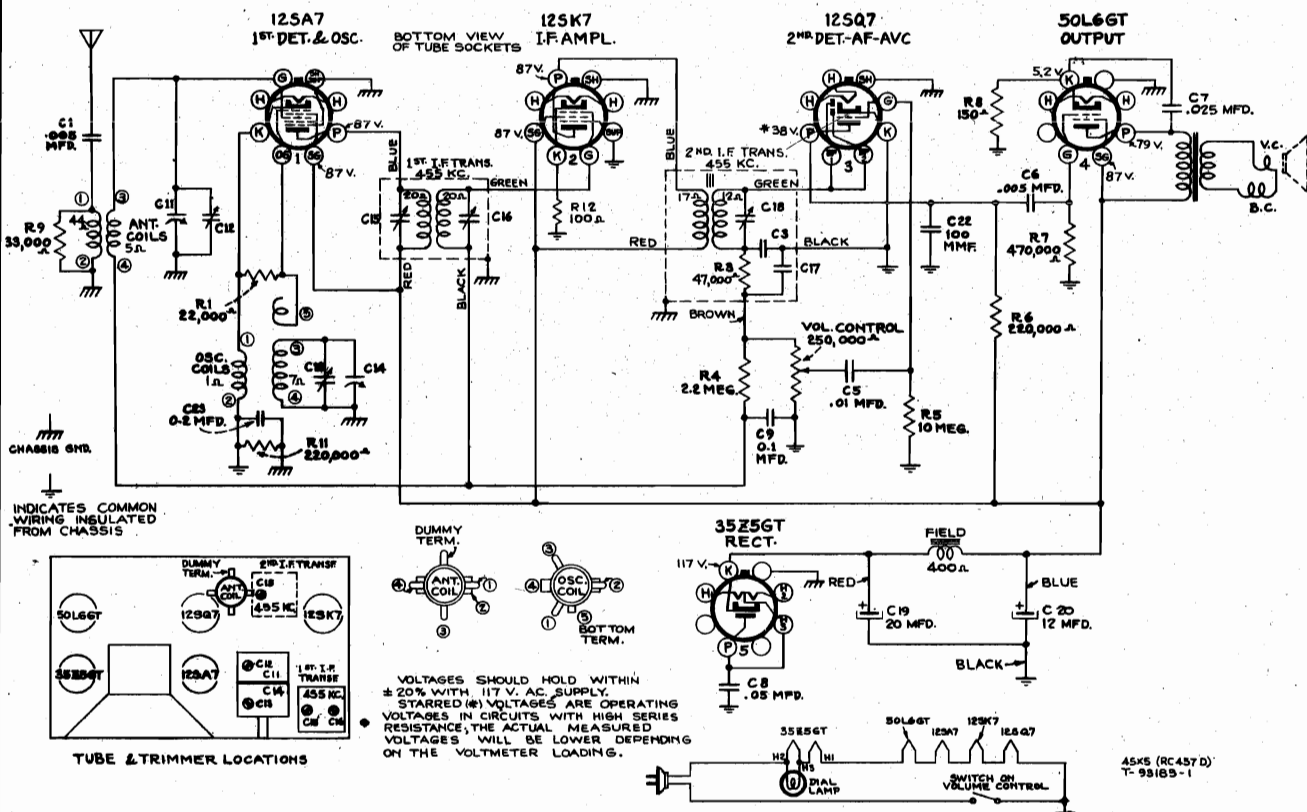

— 1940 No. 1. —

Features of design include: New Type single-ended tubes (12SA7, 12SK7, and 12SQ7); edge-lighted dial; dust proof electrodynamic loudspeaker; and Beam Power Output.

First Edition

Electrical and Mechanical Specifications

FREQUENCY RANGE..... 540-1,680 kc
Intermediate Frequency..... 455 kc

TUBE COMPLEMENT

- (1) RCA-12SA7..... 1st-Detector-Oscillator
- (2) RCA-12SK7..... I-F Amplifier
- (3) RCA-12SQ7..... 2nd-Detector, 1st A-F, and A.V.C.
- (4) RCA-50L6GT..... Power Output
- (5) RCA-35Z5GT..... Half-Wave Rectifier

Dial Lamp (1)..... Mazda 51, 7.5 volts, 0.2 amp.

POWER SUPPLY RATINGS

A-C Rating..... 105-125 volts, 50-60 cycles, 30 watts
D-C Rating..... 105-125 volts, direct current, 30 watts

POWER OUTPUT (125 volt, 60 cycle supply)

Undistorted..... 1.0 watts
Maximum..... 1.25 watts

LOUDSPEAKER

Type..... 4-inch Electrodynamic
Cabinet Dimensions (inches).. Height 5-1/16, Width 8 1/2, Depth 4 1/2
Weight (net)..... 4 pounds

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For I-F alignment, connect the low side of the test-oscillator to the receiver chassis through a .01 mfd. capacitor, and keep the output as low as possible.

Pre-Setting Dial.—With gang condenser in full mesh, the pointer should be adjusted so that it is vertical.

Antenna.—The set is equipped with length of antenna wire. Do not connect the antenna to ground. If an outdoor antenna is used, it should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmfd. capacitor in series with the lead-in.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	12SK7 I-F grid in series with .01 mfd.			C18 (2nd I-F trans.)
2	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C15 and C16 (1st I-F trans.)
3	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C13 (oscillator)
4		1,400 kc	Resonance on 1,400 kc signal	C12 (antenna)


Precautionary Lead Dress

1. Green and blue leads from 1st I.F. transformer should be dressed apart and against chassis.
2. Blue lead of the 2nd I.F. transformer must be dressed against the shield and down between the tube socket and chassis.
3. Dress green diode lead away from 12SQ7 grid resistor and condenser.

MODELS 45X11, 45X12
Chassis RC-459
Schematic, Voltage

RCA MFG. CO., INC.

Alignment, Trimmer's
Socket, lead Dress

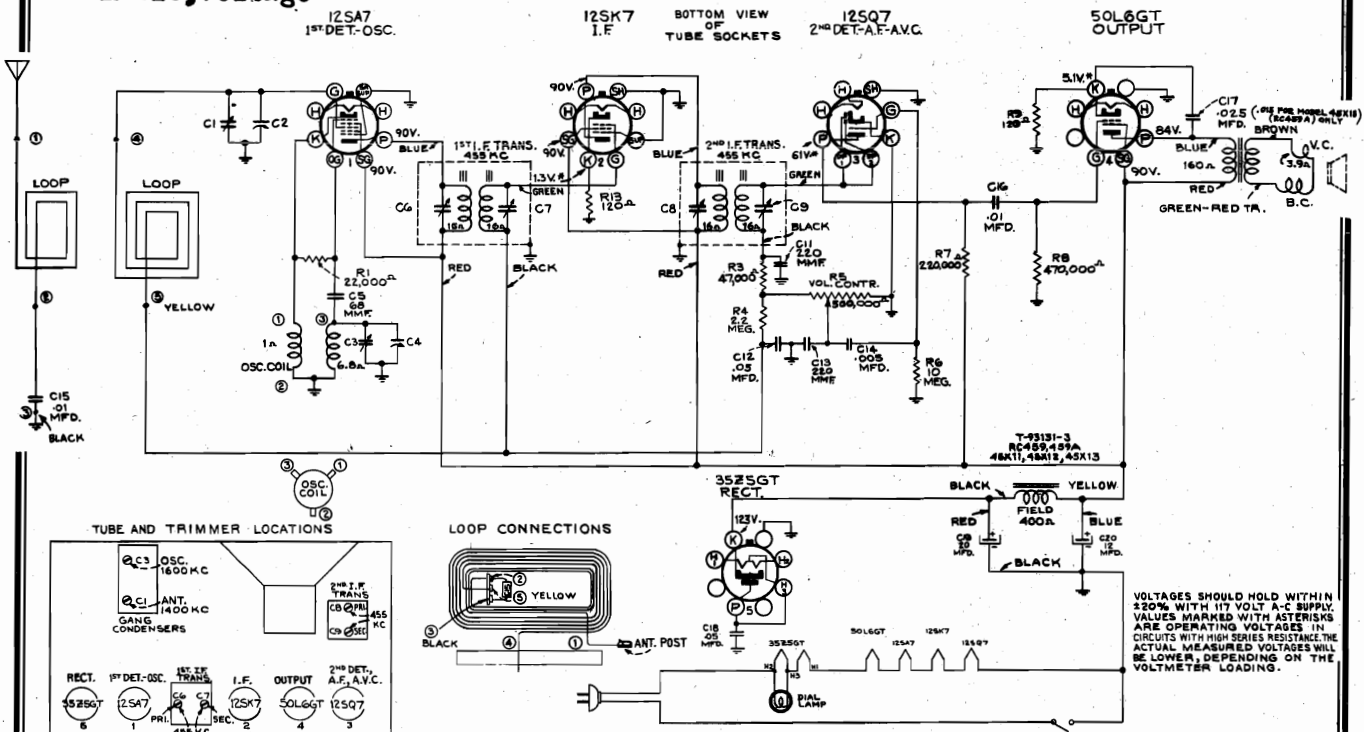

VOLTAGES SHOULD HOLD WITHIN ±20% WITH 117 VOLT A.C. SUPPLY. VALUES MARKED WITH ASTERISKS ARE OPERATING VOLTAGES IN CIRCUITS WITH HIGH SERIES RESISTANCE. THE ACTUAL MEASURED VOLTAGES WILL BE LOWER, DEPENDING ON THE VOLTMEETER LOADING.

Pre-Setting Dial.—With gang condenser in full mesh, the pointer should be adjusted so that pointer is vertical.

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the "ANT" terminal on rear of cabinet. It should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

POWER SUPPLY RATINGS

A-C Rating 105-125 volts, 50-60 cycles, 30 watts
D-C Rating 105-125 volts, direct current, 30 watts

POWER OUTPUT (125 volt, 60 cycle supply)

Undistorted 1.0 watts
Maximum 1.5 watts

Precautionary Lead Dress

1. Audio coupling capacitor to volume control must be dressed under the terminal board and down against the corner of the chassis.
2. The voice coil leads from the output transformer to the speaker must be dressed away from the terminal-board to which the above audio coupling capacitor is connected.
3. The output tube bypass condenser must be dressed away from the 12SQ7 tube.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	12SK7 (I-F) grid in series with .01 mfd.	455 kc	Quiet point at 800 kc end of dial	C8, C9 (2nd I-F trans.)
2	Tuning condenser stator (ant.) in series with .01 mfd.			C6, C7 (1st I-F trans.)
3	Radiation loop consisting of two turns of wire 18 inches in diameter	1,600 kc	Full clockwise (out of mesh)	C3 (oscillator)
4		1,400 kc	Resonance on 1,400 kc signal	C1 (antenna)


ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES (RC-459) (RC-459A)		
13057	Capacitor—68 mmfd. (C5)35
12694	Capacitor—220 mmfd. (C11, C13)35
33584	Capacitor—.005 mfd. (C14)25
4937	Capacitor—.01 mfd. (C15, C16)25
11315	Capacitor—.015 mfd. (C17) (RC-459A)20
30938	Capacitor—.025 mfd. (C17) (RC-459)20
32787	Capacitor—.05 mfd. (C12)20
32576	Capacitor—Electrolytic comprising 1 section of 20 mfd. and 1 section of 12 mfd.90
34443	Coil—Oscillator coil60
35053	Condenser—Variable tuning condenser less drive drum	2.00

STOCK No.	DESCRIPTION	Unit List Price
35058	Shaft—Tuning condenser drive shaft20
34449	Socket—Dial lamp socket30
31319	Socket—Tube socket25
30585	Spring—Drive cord tension spring06
35056	Transformer—Output transformer	1.30
35054	Transformer—1st I.F. transformer	1.75
35055	Transformer—2nd I.F. transformer	1.75
SPEAKER ASSEMBLIES (39223-2)		
35065	Cone—Cone complete with voice coil	1.20
34174	Transformer—Output transformer	1.25
SPEAKER ASSEMBLIES (RL 86-2)		
32907	Cap—Dust cap02
35066	Cone—Cone complete with voice coil	1.30
34450	Speaker—5-inch dynamic speaker complete with cone and voice coil less output transformer ..	3.25
35057	Control—Volume control and power switch	1.50
32634	Cord—Tuning condenser drive cord10
35063	Drum—Tuning condenser drive drum30
35062	Indicator—Station selector indicator20
11765	Lamp—Dial lamp15
35061	Loop—Antenna loop complete	1.95
12071	Resistor—120 ohms, ½ watt (R13)20
32535	Resistor—120 ohms, ½ watt (R9)20
13998	Resistor—22,000 ohms, ½ watt (R1)20
12412	Resistor—47,000 ohms, ½ watt (R3)20
12264	Resistor—220,000 ohms, ½ watt (R7)20
12285	Resistor—470,000 ohms, ½ watt (R8)20
12679	Resistor—2.2 megohms, ½ watt (R4)20
13601	Resistor—10 megohms, ½ watt (R6)20
35059	Scale—Dial scale65

RCA MFG. CO., INC.

MODELS U46, Chassis RC501
K130, Chassis RC501A
Schematic

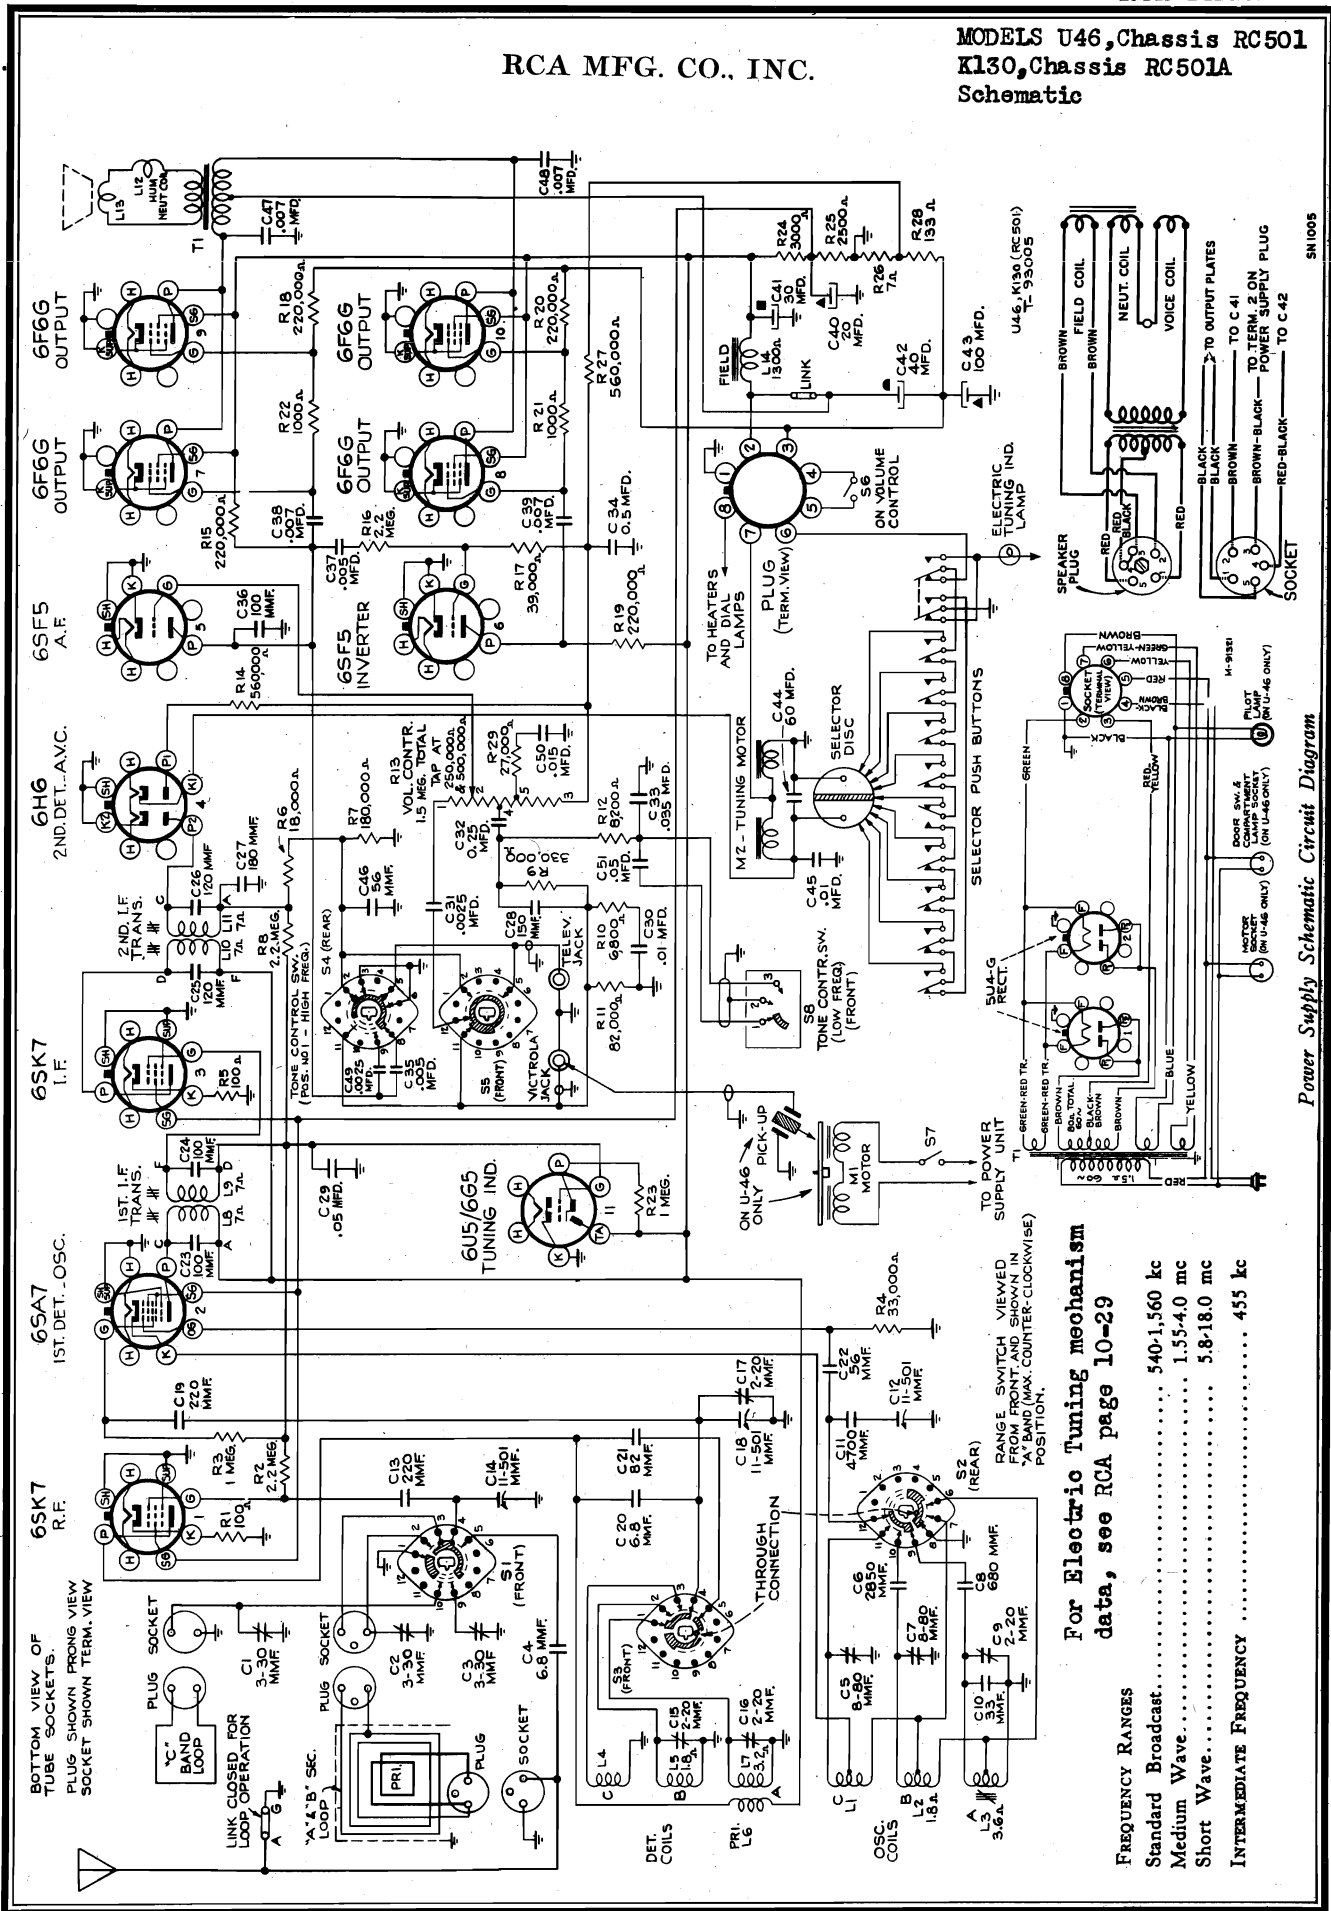

BOTTOM VIEW OF TUBE SOCKETS. PLUG SHOWN FROM VIEW SOCKET SHOWN TERM. VIEW SOCKET SHOWN TERM. VIEW

LINK CLOSED FOR LOOP OPERATION

"A," "B," SEC. (LOOP)

THROUGH CONNECTION

DET. COILS

OSC. COILS

PR. LG

TO HEATERS AND DIAL LAMPS

PLUG (TERM. VIEW)

ON U-46 PICK-UP ONLY

TO POWER SUPPLY UNIT

TO GREEN-RED TR.

TO C 41

TO TERM. 2 ON POWER SUPPLY PLUG

TO C 42

TO C 43

TO C 44

TO C 45

TO C 46

TO C 47

For Electric Tuning mechanism data, see RCA page 10-29


FREQUENCY RANGES	
Standard Broadcast.....	540-1,560 kc
Medium Wave.....	1.55-4.0 mc
Short Wave.....	5.8-18.0 mc
INTERMEDIATE FREQUENCY	455 kc

Power Supply Schematic Circuit Diagram

5N1005

MODELS U46, K130
Chassis Wiring, Voltage

RCA MFG. CO., INC.

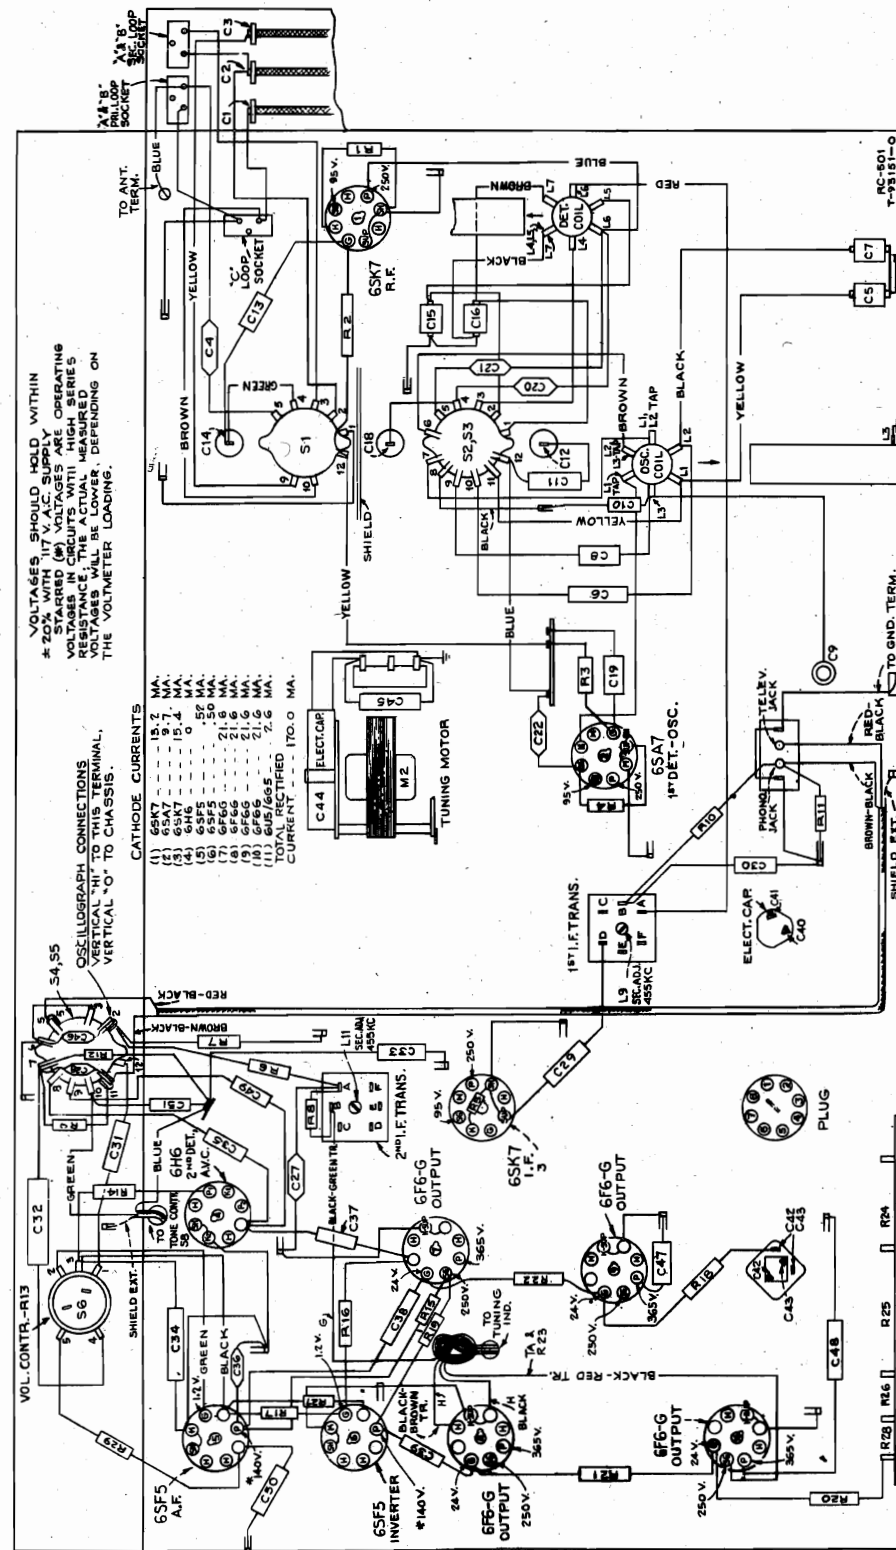

- PILOT LAMPS { Mazda No. 44, 6.3 volts, 0.25 amp.
Mazda No. 47, 6.3 volts, 0.15 amp.
- POWER OUTPUT RATING
 - Undistorted 20 watts
 - Maximum 22 watts
- PHONOGRAPH (Model U-46 only)
 - Type Automatic
 - Record Capacity Eight 10-inch or Seven 12-inch
 - Turntable Speed 78 r.p.m. (Adjustable)
 - Type Pickup Crystal
 - Pickup Impedance 100,000 ohms at 1,000 cycles

R-F Wiring Diagram and Socket Voltages

- LOUDSPEAKER (RL-76B-5)
 - Type 12-inch electrodynamic
 - V.C. Impedance 11.5 ohms at 400 cycles
- POWER SUPPLY RATINGS K-130 (U-46, 50 watts additional)
 - Rating A 105-125 volts, 50-60 cycles, 200 watts
 - Rating B 105-125 volts, 25-60 cycles, 200 watts
 - Rating C 105-130, 140-160, 200-250 volts, 40-60 cycles, 200 watts

MODEL K50, 2nd Production
Alignment, Lead Dress, Parts

RCA MFG. CO., INC.

MODELS U46, K130
Alignment, Trimmers
Socket

MODEL K-50, 2nd Production.

Precautory Lead Dress:

Before proceeding with alignment dress power cord leads away from 6S07 socket and close as possible to end of chassis; dress ground wire to volume control between power leads and audio grid; and dress power from phono switch to volume control as far away from power leads as possible.

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown on the chassis schematics.

Output Meter Alignment.—If this method is used, connect the output meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, keep the oscillator output as low as possible to avoid a-v-c action.

Calibration Marks.—The tuning dial is fastened in the cabinet and is used for reference during alignment. Therefore calibration marks are stamped on the plate on the front of the chassis as shown in the alignment drawing. These marks are used for reference during alignment.


Dial Indicator Adjustment.—With the gang condenser in full mesh, the indicator should point to the extreme left (low frequency) mark on the dial scale.

Steps	Connect test-osc. output to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	I-F grid through 0.1 mfd. capacitor and ground	455 kc	Quiet point between 600-700 kc	L4 and L5 (2nd I-F trans.)
2	1st det. grid through 0.1 mfd. capacitor and ground	1,500 kc	1,500 kc	L2 and L3 (1st I-F trans.)
3	Radiation loop consisting of two turns of wire 18 inches in diameter located 4 to 6 feet from receiver	600 kc	Rock at 600 kc	C2 antenna C5 oscillator*
4		1,500 kc	1,500 kc	L1 oscillator while rocking
5				C2 antenna C5 oscillator*

When making adjustments 3 to 5 inclusive the chassis must be in the cabinet, the loop connected, and all leads in their normal positions. When mounting chassis in cabinet if calibration marks on dial plate do not line up with dial scale mounted on cabinet move pointer to agree with dial scale on cabinet.

* Oscillator should track on high frequency side of signal.

Dial Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the chassis with the indicator at the 530 kc mark and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

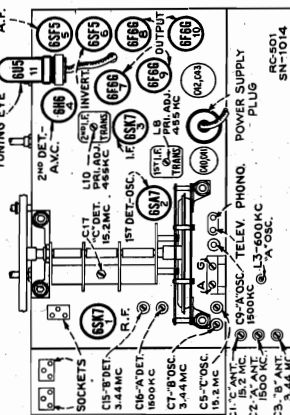

MODELS U-46, K-130

Test-Oscillator.—For all alignment operations, keep the output as low as possible to avoid a-v-c action. For the first eight steps in alignment the low side of the test-oscillator should be connected to the receiver chassis. Following step 8, the signal must be radiated.

Calibration Scale on Indicator-Drive-Card Drum.—The tuning dial is fastened in the cabinet and must be used for reference during the first eight steps of alignment; therefore, a calibration scale is attached to the tuning dial which is calibrated in degrees. The correct setting of the gang in degrees for each alignment frequency is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical when the test-oscillator is connected to the chassis and the plates are fully meshed. The drum is held to the shaft by means of two set-screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improve a pointer for the calibration scale by fastening a piece of wire to the chassis, and adjust it so that it points to the 0° mark on the calibration scale when the plates are fully meshed.

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	6S07 I-F grid in series with .01 mfd.	455 kc	"A" band quiet point	L10 and L11 (2nd I-F trans.)
2	6S07 det. grid in series with .01 mfd.		L8 and L9	(1st I-F trans.)
2A	With input to 6S07 grid, do not re-adjust 2nd I-F trans. has been adjusted.			
3		15.2 mc	"C" band 15.2 mc (144°)	C5 (osc.) C11 (det.)** Rock gang
4		3.44 mc	"B" band 3.44 mc (138°)	C7 (osc.)* C15 (det.)**
5	Front section of gang in series with .01 mfd.	600 kc	"A" band 600 kc (29.5°)	L3 (osc.)
6		1,500 kc	"A" band 1,500 kc (166°)	C9 (osc.) C16 (det.)
7		600 kc	"A" band 600 kc (29.5°)	L3 (osc.) Rock gang
8		Repeat step 6	"C" band; 15.2 mc	C1 (ant.)
9		15.2 mc	"C" band; 6.1 mc	Inductance of "C" band loop†
10		6.1 mc	"B" band; 3.44 mc	C3 (ant.)
11		Repeat step 9	"A" band; 1,500 kc	C2 (ant.)
12		3.44 mc	"A" band; 600 kc	L3 (osc.) Rock gang
13		1,500 kc	"A" band; 1,500 kc	C9 (osc.) C16 (det.)
14		600 kc	"A" band; 600 kc	
15		1,500 kc	"A" band; 1,500 kc	

* Use minimum capacity peak if two can be obtained. Check for selection of correct peak by tuning receiver approximately 910 kc lower where a weaker signal should be received.
 ** Use maximum capacity peak if two can be obtained.
 † Adjust the inductance of "C" band loop by varying the spacing between the leads of the loop. Moving the leads closer together decreases the inductance and tunes the loop to a higher frequency; moving the leads farther apart increases the inductance and tunes the loop to a lower frequency.
Important.—The oscillator tracks above the signal on all bands.


ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

STOCK No.	DESCRIPTION	STOCK No.	DESCRIPTION	Unit List Price	Unit Last Price
33719	Belt—Adjusting belt for push button arm.	34411	Shaft—Drive shaft	.15	.15
33724	Capacitor—50 mfd. (C28)	34223	Socket—Antenna loop socket	.20	.20
33725	Capacitor—50 mfd. (C29)	34274	Socket—Dial lamp socket	.20	.20
33726	Capacitor—50 mfd. (C30)	34275	Socket—Dial lamp socket and jack	.25	.25
33727	Capacitor—50 mfd. (C31)	31319	Socket—Tube socket	.25	.25
33728	Capacitor—50 mfd. (C32)	31418	Spring—Drive cord spring	.05	.05
33729	Capacitor—50 mfd. (C33)	33434	Switch—Radio-Phono	.30	.30
33730	Capacitor—50 mfd. (C34)	31675	Transformer—Power transformer (100-120 and 250-240) volt 50-60 cycle	8.35	8.35
33731	Capacitor—50 mfd. (C35)	83112	Transformer—50-60 cycle 105-120 volt	4.30	4.30
33732	Capacitor—50 mfd. (C36)	33618	Cycle—Power transformer 110 volt, 25-60	6.40	6.40
33733	Capacitor—50 mfd. (C37)	32263	Transformer—1st I.F. transformer	2.90	2.90
33734	Capacitor—50 mfd. (C38)	34719	Transformer—2nd I.F. transformer	1.75	1.75
33735	Capacitor—50 mfd. (C39)	33726	Washer—C washer for drive shaft	.02	.02
33736	Capacitor—50 mfd. (C40)		SPEAKER ASSEMBLIES (RL-702)		
33737	Capacitor—50 mfd. (C41)	31825	Cap—Dust cap	.02	.02
33738	Capacitor—50 mfd. (C42)	34801	Coil—Drive coil (L4)	1.10	1.10
33739	Capacitor—50 mfd. (C43)	33176	Coil—Speaker field coil (L8)	2.10	2.10
33740	Capacitor—50 mfd. (C44)	31275	Coil—Speaker cone and voice coil (L7)	1.75	1.75
33741	Capacitor—50 mfd. (C45)	33778	Plug—3 contact male connector plug	.25	.25
33742	Capacitor—50 mfd. (C46)	33779	Transformer—Output transformer (32)	1.50	1.50
33743	Capacitor—50 mfd. (C47)		MISCELLANEOUS ASSEMBLIES		
33744	Capacitor—50 mfd. (C48)	33731	Button—Push button	.15	.15
33745	Capacitor—50 mfd. (C49)	34802	Dial—Glass dial	1.80	1.80
33746	Capacitor—50 mfd. (C50)	33637	Escutcheon—Dial and push button escutcheon	1.00	1.00
33747	Capacitor—50 mfd. (C51)	34800	Knob—Tuning, tone control, or volume control	1.00	1.00
33748	Capacitor—50 mfd. (C52)	34801	Loop—Antenna loop	.65	.65
33749	Capacitor—50 mfd. (C53)	33973	Marker—Station markers	.15	.15
33750	Capacitor—50 mfd. (C54)	33974	Ring—Spring male plug for antenna loop	.40	.40
33751	Capacitor—50 mfd. (C55)	33975	Spring—Spring male plug for antenna loop	.15	.15
33752	Capacitor—50 mfd. (C56)	33976	Socket—Station socket	.15	.15
33753	Capacitor—50 mfd. (C57)	33977	Socket—Station socket	.15	.15
33754	Capacitor—50 mfd. (C58)	33978	Socket—Station socket	.15	.15
33755	Capacitor—50 mfd. (C59)	33979	Socket—Station socket	.15	.15
33756	Capacitor—50 mfd. (C60)	33980	Socket—Station socket	.15	.15
33757	Capacitor—50 mfd. (C61)	33981	Socket—Station socket	.15	.15
33758	Capacitor—50 mfd. (C62)	33982	Socket—Station socket	.15	.15
33759	Capacitor—50 mfd. (C63)	33983	Socket—Station socket	.15	.15
33760	Capacitor—50 mfd. (C64)	33984	Socket—Station socket	.15	.15
33761	Capacitor—50 mfd. (C65)	33985	Socket—Station socket	.15	.15
33762	Capacitor—50 mfd. (C66)	33986	Socket—Station socket	.15	.15
33763	Capacitor—50 mfd. (C67)	33987	Socket—Station socket	.15	.15
33764	Capacitor—50 mfd. (C68)	33988	Socket—Station socket	.15	.15
33765	Capacitor—50 mfd. (C69)	33989	Socket—Station socket	.15	.15
33766	Capacitor—50 mfd. (C70)	33990	Socket—Station socket	.15	.15
33767	Capacitor—50 mfd. (C71)	33991	Socket—Station socket	.15	.15
33768	Capacitor—50 mfd. (C72)	33992	Socket—Station socket	.15	.15
33769	Capacitor—50 mfd. (C73)	33993	Socket—Station socket	.15	.15
33770	Capacitor—50 mfd. (C74)	33994	Socket—Station socket	.15	.15
33771	Capacitor—50 mfd. (C75)	33995	Socket—Station socket	.15	.15
33772	Capacitor—50 mfd. (C76)	33996	Socket—Station socket	.15	.15
33773	Capacitor—50 mfd. (C77)	33997	Socket—Station socket	.15	.15
33774	Capacitor—50 mfd. (C78)	33998	Socket—Station socket	.15	.15
33775	Capacitor—50 mfd. (C79)	33999	Socket—Station socket	.15	.15
33776	Capacitor—50 mfd. (C80)	34000	Socket—Station socket	.15	.15
33777	Capacitor—50 mfd. (C81)	34001	Socket—Station socket	.15	.15
33778	Capacitor—50 mfd. (C82)	34002	Socket—Station socket	.15	.15
33779	Capacitor—50 mfd. (C83)	34003	Socket—Station socket	.15	.15
33780	Capacitor—50 mfd. (C84)	34004	Socket—Station socket	.15	.15
33781	Capacitor—50 mfd. (C85)	34005	Socket—Station socket	.15	.15
33782	Capacitor—50 mfd. (C86)	34006	Socket—Station socket	.15	.15
33783	Capacitor—50 mfd. (C87)	34007	Socket—Station socket	.15	.15
33784	Capacitor—50 mfd. (C88)	34008	Socket—Station socket	.15	.15
33785	Capacitor—50 mfd. (C89)	34009	Socket—Station socket	.15	.15
33786	Capacitor—50 mfd. (C90)	34010	Socket—Station socket	.15	.15
33787	Capacitor—50 mfd. (C91)	34011	Socket—Station socket	.15	.15
33788	Capacitor—50 mfd. (C92)	34012	Socket—Station socket	.15	.15
33789	Capacitor—50 mfd. (C93)	34013	Socket—Station socket	.15	.15
33790	Capacitor—50 mfd. (C94)	34014	Socket—Station socket	.15	.15
33791	Capacitor—50 mfd. (C95)	34015	Socket—Station socket	.15	.15
33792	Capacitor—50 mfd. (C96)	34016	Socket—Station socket	.15	.15
33793	Capacitor—50 mfd. (C97)	34017	Socket—Station socket	.15	.15
33794	Capacitor—50 mfd. (C98)	34018	Socket—Station socket	.15	.15
33795	Capacitor—50 mfd. (C99)	34019	Socket—Station socket	.15	.15
33796	Capacitor—50 mfd. (C100)	34020	Socket—Station socket	.15	.15





**MODELS U46, K130
Record Changer
Assembly**

RCA MFG. CO., INC.

**FOR ADJUSTMENTS, NOTES
AND SERVICE DATA, SEE
MODEL RP-139-A**

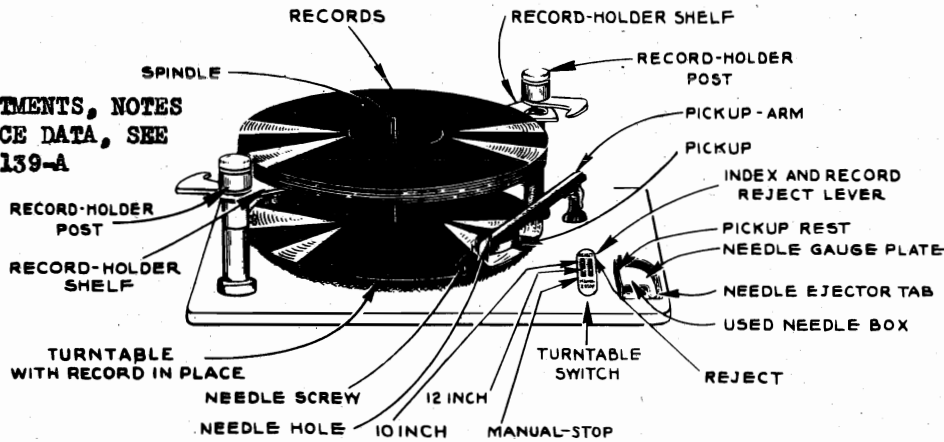


Top View of Automatic Record Changer

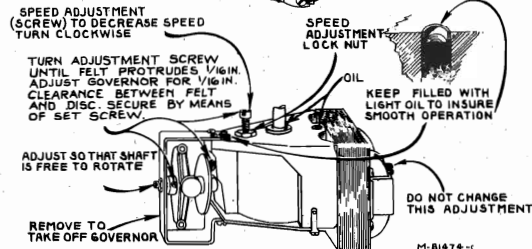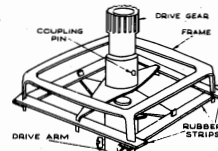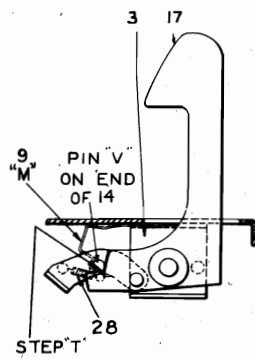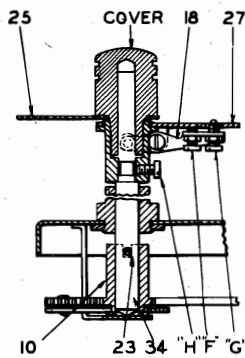

Details of Record Shelf Posts and Lever Assemblies

Motor Data and Coupling

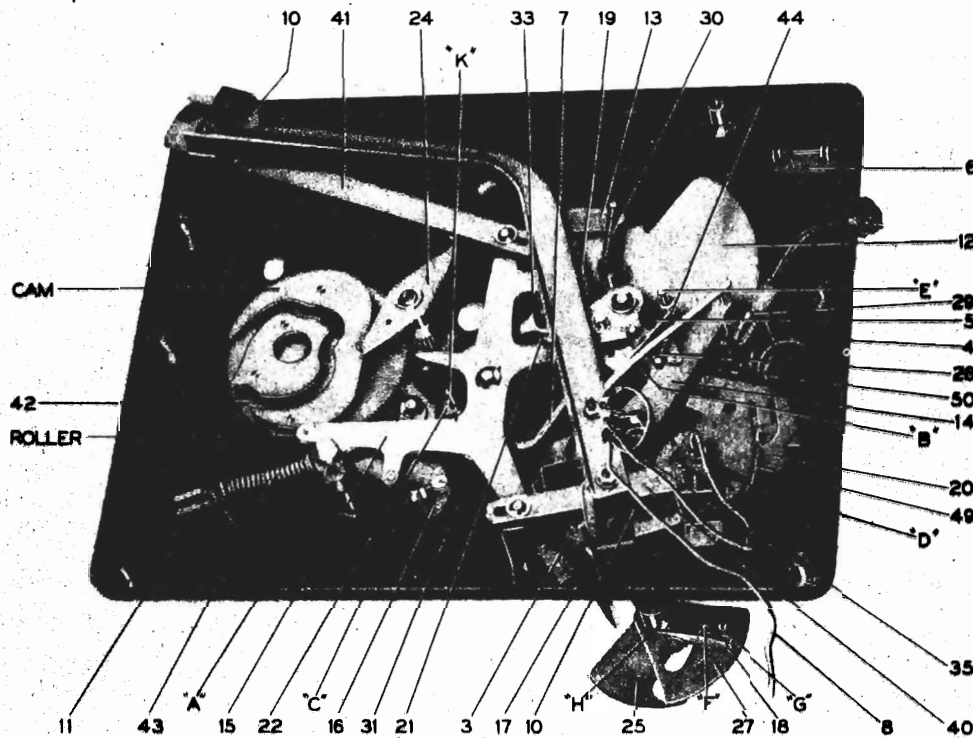


Bottom View of Automatic Record Changer

NOTE: Numbers refer to parts—letters refer to adjustments.

Schematic, Voltage Alignment, Trimmers Socket, Lead Dress

RCA MFG. CO., INC.

**MODELS 45X111, 45X112
Ch. RC459J, 45X113
Chassis RC459K**

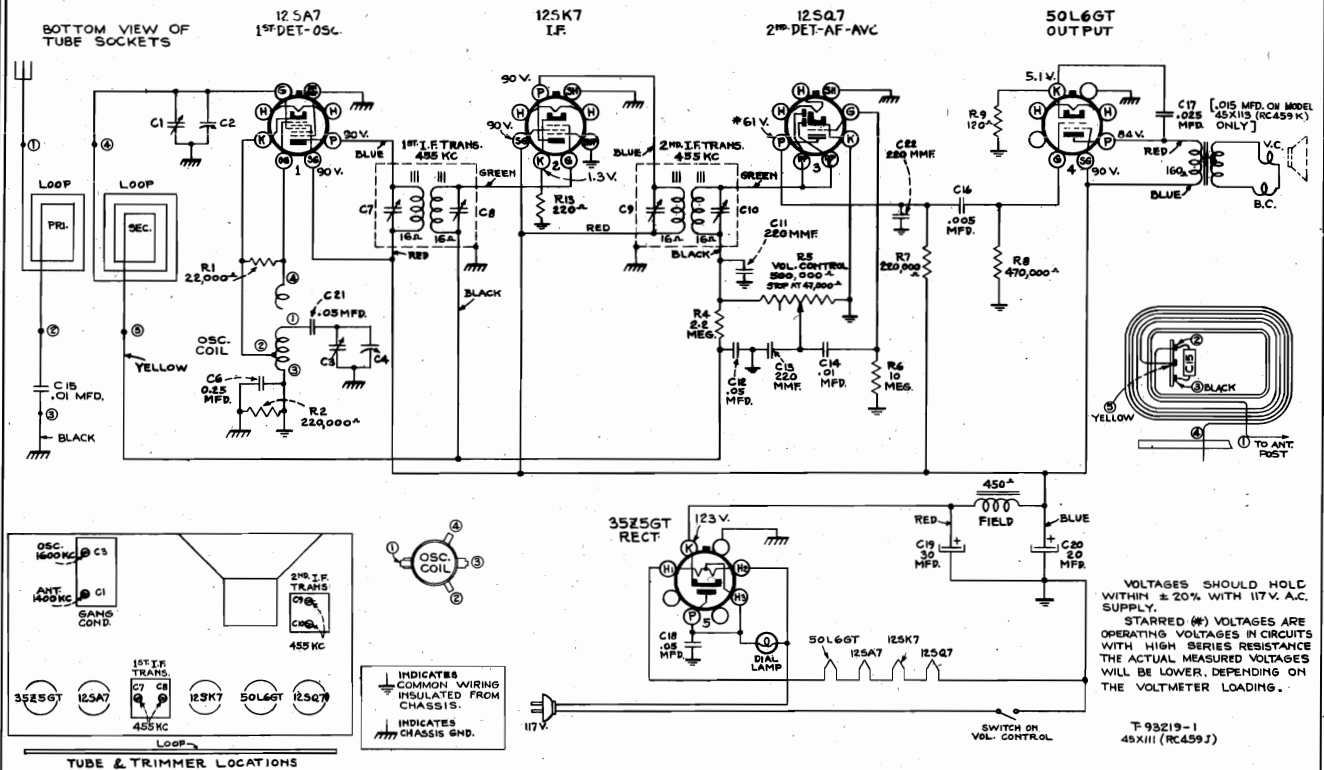

—1940 No. 2—

Features of design include: New type single-ended tubes (12SA7, 12SK7, and 12SQ7); clock-type dial; dust-proofed electrodynamic loud-speaker; "Magic Loop"; and Beam Power Output.

First Edition

Electrical and Mechanical Specifications

FREQUENCY RANGE..... 550-1,600 kc
Intermediate Frequency..... 455 kc
TUBE COMPLEMENT
 (1) RCA-12SA7 1st-Detector—Oscillator
 (2) RCA-12SK7 I-F Amplifier
 (3) RCA-12SQ7 2nd-Detector, 1st A-F, and A.V.C.
 (4) RCA-50L6GT Power Output
 (5) RCA-35Z5GT Rectifier
 Dial Lamp (1)..... Mazda 51, 7.5 volts, .20 amp.

POWER SUPPLY RATINGS
 A-C Rating..... 105-125 volts, 50-60 cycles, 30 watts
 D-C Rating..... 105-125 volts, direct current, 30 watts
POWER OUTPUT (125 volt, 60 cycle supply)
 Undistorted..... .8 watts
 Maximum..... 1.3 watts
LOUDSPEAKER
 Type..... 5-inch electrodynamic

Model	Weight (shipping)	Description	Cabinet Dimensions (inches)
45X111	8½ lbs.	Mahogany plastic finish	6 19/32 x 9 25/32 x 5½
45X112	8½ lbs.	Antique-ivory plastic finish	6 19/32 x 9 25/32 x 5½
45X113	10 lbs.	Walnut finish	8½ x 13½ x 6 5/16

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For I-F alignment, connect the low side of the test-oscillator to the receiver chassis through a .01 mfd. capacitor, and keep the output as low as possible.

Pre-Setting Dial.—With gang condenser in full mesh, the pointer should be adjusted so that it is vertical.

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the "ANT" terminal on rear of cabinet. It should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.


Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	12SK7 I-F grid in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C9 and C10 (2nd I-F trans.)
2	Tuning condenser stator (osc.) in series with .01 mfd.			C7 and C8 (1st I-F trans.)
3	Radiation loop consisting of two turns of wire 18 inches in diameter	1,600 kc	Full clockwise (out of mesh)	C3 (oscillator)
4		1,400 kc	Resonance on 1,400 kc signal	C1 (antenna)

Precautionary Lead Dress

1. Dress grid lead of 12SK7 close to chassis under condenser (C12).
2. Dress green and blue leads from i-f transformers close to chassis and away from each other.
3. Dress leads from terminal board on loop support away from loop.

**MODELS 46X1, 46X2, Ch. RC 459B,
46X3, Chassis RC 459C**
Schematic, Voltage, Socket
Trimmers, Alignment
Lead Dress

RCA MFG. CO., INC.

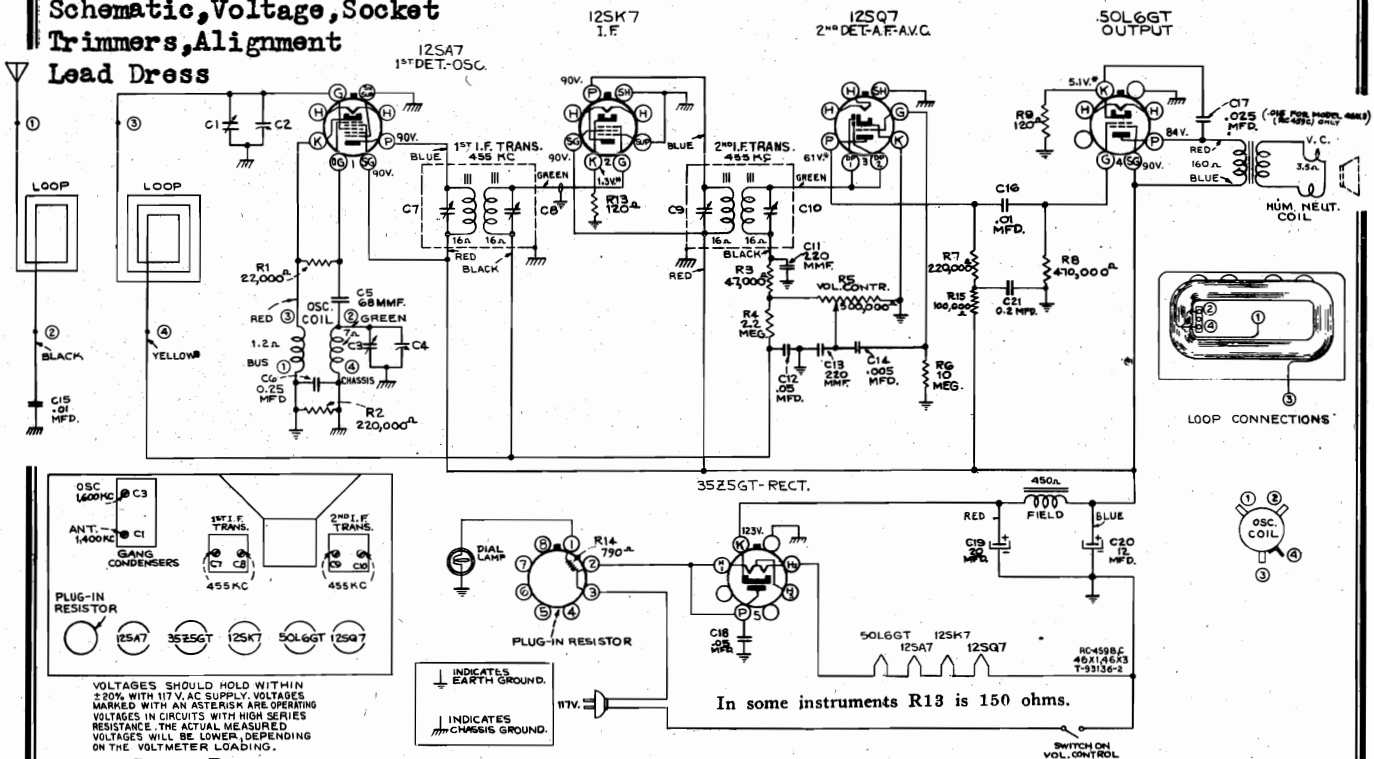

POWER SUPPLY RATINGS

A-C Rating 105-125 volts, 50-60 cycles, 50 watts
D-C Rating 105-125 volts, direct current, 50 watts

POWER OUTPUT (125 volt, 60 cycle supply)

Undistorted6 watts
Maximum2.0 watts

Pre-Setting Dial.—With gang condenser in full mesh, the pointer should be adjusted so that it is vertical.

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the "ANT" terminal on rear of cabinet. It should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	12SK7 I-F grid in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C9 and C10 (2nd I-F trans.)
2	Tuning condenser stator (osc.) in series with .01 mfd.			C7 and C8 (1st I-F trans.)
3	Radiation loop consisting of two turns of wire 18 inches in diameter	1,600 kc	Full clockwise (out of mesh)	C3 (oscillator)
4		1,400 kc	Resonance on 1,400 kc signal	C1 (antenna)

STOCK No.	DESCRIPTION	Unit List Price
SPEAKER ASSEMBLIES (39223-2)		
35065	Cone—Cone complete with voice coil	1.20
34174	Transformer—Output transformer	1.25
SPEAKER ASSEMBLIES (RL 86-5)		
32907	Cap—Dust cap02
35066	Cone—Cone complete with voice coil	1.30
34450	Speaker 5" dynamic speaker complete with cone and voice coil less output transformer	3.25
CHASSIS ASSEMBLIES (RC-459B and RC-459C)		
35000	Ballast—Ballast tube resistor80
13057	Capacitor—68 mmfd. (C5)35
12694	Capacitor—220 mmfd. (C11, C13)35
33584	Capacitor—.005 mfd. (C14)25
4937	Capacitor—.01 mfd. (C15, C16)25
11315	Capacitor—.015 mfd. (C17)20
30938	Capacitor—.025 mfd. (C17)20
32787	Capacitor—.05 mfd. (C12, C18)20
34505	Capacitor—.2 mfd. (C21)30
12484	Capacitor—.25 mfd. (C6)30
35064	Capacitor—Electrolytic comprising 1 section of 20 mfd. and 1 section of 12 mfd.75
34443	Coil—Oscillator coil60
35053	Condenser—Variable tuning condenser less drive drum	2.00
35057	Control—Volume control and power switch	1.50
32634	Cord—Tuning condenser drive cord10
35063	Drum—Tuning condenser drive drum30
35062	Indicator—Station selector indicator20


- Precautionary Lead Dress**
1. Dress grid lead of 12SK7 close to chassis under condenser (C12).
 2. Dress green and blue leads from i-f transformers close to chassis and away from each other.
 3. Dress leads from terminal board on loop support away from loop.

STOCK No.	DESCRIPTION	Unit List Price
31480	Lamp—Dial lamp20
35061	Loop—Antenna loop complete	1.95
12071	Resistor—120 ohms, 1/2 watt (R13)20
32535	Resistor—120 ohms, 1/2 watt (R9)20
13998	Resistor—22,000 ohms, 1/2 watt (R1)20
12412	Resistor—47,000 ohms, 1/2 watt (R3)20
11281	Resistor—100,000 ohms, 1/10 watt (R15)15
12264	Resistor—220,000 ohms, 1/2 watt (R2)20
12285	Resistor—470,000 ohms, 1/2 watt (R8)20
12679	Resistor—2.2 megohms, 1/2 watt (R4)20
13601	Resistor—10 megohms, 1/2 watt (R6)20
35000	Resistor—Ballast tube resistor80
35060	Scale—Dial scale65
35058	Shaft—Tuning condenser drive shaft20
34449	Socket—Dial lamp socket30
31319	Socket—Tube socket25
30585	Spring—Drive cord tension spring06
35056	Transformer—Output transformer	1.30
35054	Transformer—1st I.F. transformer	1.75
35055	Transformer—2nd I.F. transformer	1.75
35000	Tube—Ballast tube resistor80

**Schematic, Voltage
Socket, Trimmers
Alignment**

RCA MFG. CO., INC.

**MODELS 46X11, 46X12
Chassis RC-456
46X13, Ch. RC 456A**

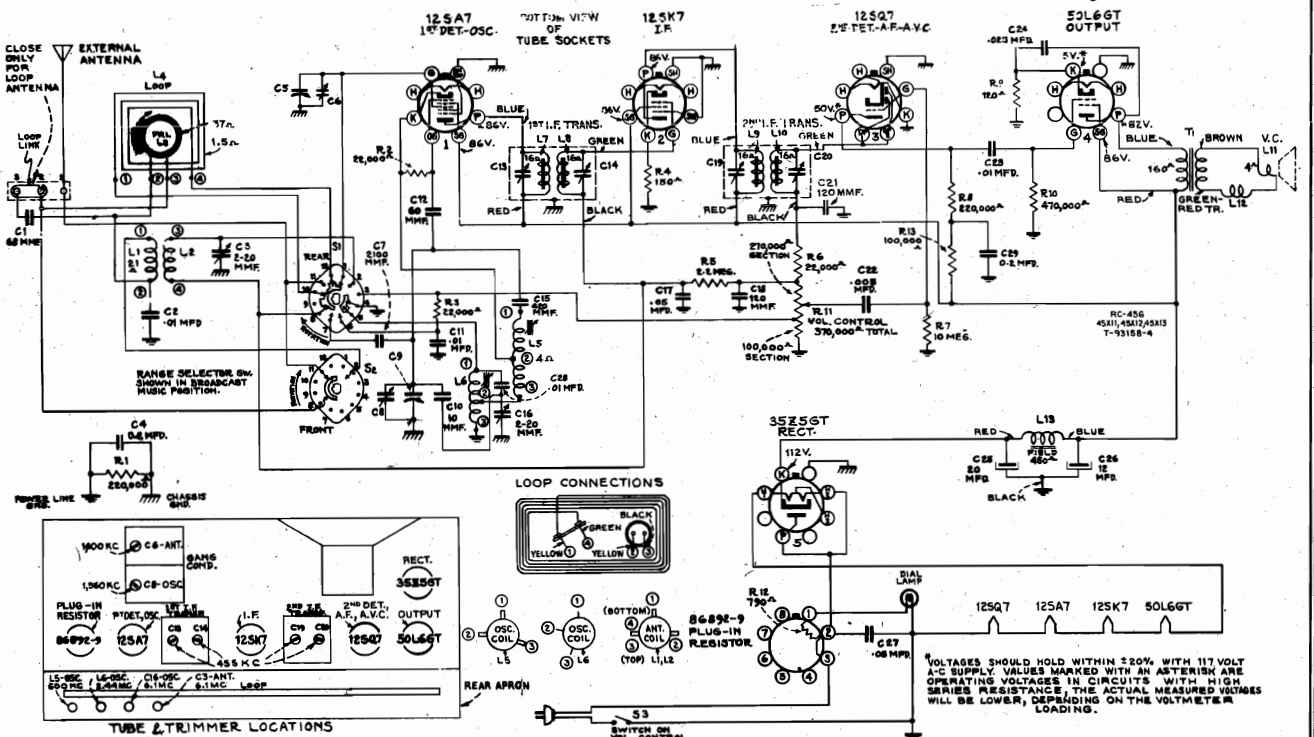

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	12SK7 grid in series with .01 mfd.	455 kc	"Standard Broadcast" band quiet point with gang nearly open	L9 and L10 (2nd I-F Trans.)
2	12SA7 grid in series with .01 mfd.			L7 and L8 (1st I-F Trans.)
3	Ant. terminal 1 in series with 200 mmfd. Link closed	600 kc	600 kc "Standard Broadcast" band	L5 (osc.)
4		1,560 kc	Pointer at second from bottom mark at extreme right edge of dial plate* "Standard Broadcast" band	C8 (osc.)
5		1,400 kc	Resonance on 1,400 kc signal "Standard Broadcast" band	C6 (ant.)
6		600 kc	Resonance on 600 kc signal "Standard Broadcast" band	L5 (osc.) Rock gang
7	Repeat steps 4, 5, and 6			
8	Ant. terminal 1 in series with 200 mmfd. Link closed	6.1 mc	Pointer on dot at extreme right edge of dial* "Short Wave" band	C16 (osc.)** C3 (ant.) Rock gang
9		2.44 mc	Resonance on 2.44 mc signal "Short Wave" band	L6 (osc.) Rock gang
10	Repeat steps 8 and 9			

*These calibration marks are concealed when chassis is in cabinet.
**Use minimum capacity peak if two can be obtained. Check for selection of correct peak by tuning receiver to approximately 5.19 mc where a weaker signal should be received.

Pre-Setting Pointer.—With gang condenser in full mesh, the pointer should be adjusted to a horizontal position.

Antenna.—The set is equipped with a built-in loop antenna. If the loop antenna is used, the antenna terminal board link should be closed. This link should be open when an external antenna is used. Connect the external antenna to terminal 1. If an antenna longer than 100 feet (including lead-in) is used, connect a 100 to 200 mmf. capacitor in series with the lead-in.

LOUDSPEAKER

Type..... 5-inch electrodynamic
V.C. Impedance..... 4 ohms at 400 cycles

POWER SUPPLY RATINGS

A-C Rating..... 105-125 volts, 50-60 cycles, 50 watts
D-C Rating..... 105-125 volts, direct current, 50 watts

POWER OUTPUT RATING


Undistorted..... 1 watt
Maximum..... 2 watts

32830	Capacitor—Mica trimmer comprising 2 sections of 2-20 mmfd. (C3, C16).....	.40
13200	Capacitor—10 mmfd. (C10).....	.35
12724	Capacitor—120 mmfd. (C18, C21).....	.35
31870	Capacitor—415 mmfd. (C15).....	.30
35099	Capacitor—2,100 mmfd. (C7).....	.45
33584	Capacitor—.005 mfd. (C22).....	.25
4937	Capacitor—.01 mfd. (C2, C11, C23, C28).....	.25
4870	Capacitor—.025 mfd. (C24).....	.20
32787	Capacitor—.05 mfd. (C17, C27).....	.20
34505	Capacitor—.02 mfd. (C4, C29).....	.30
32576	Capacitor—Electrolytic, comprising 1 section of 20 mfd., and 1 section of 12 mfd. (C25, C26).....	.90
31296	Coil—"A" band oscillator coil (L5).....	1.05
35090	Coil—Antenna coil—"B" band (L1, L2).....	.80
35096	Coil—Loop loading coil (L3).....	.50
35251	Coil—Oscillator coil—"B" band (L6).....	.70
35082	Condenser—Variable tuning condenser—less drum.....	2.10
35086	Control—Volume control and power switch.....	2.00
32634	Cord—Drive cord.....	.10
35093	Dial—Dial scale.....	.50
35083	Drum—Tuning condenser drive drum.....	.35
35091	Indicator—Station selector indicator.....	.25
31480	Lamp—Dial lamp.....	.20
35095	Loop—Antenna loop complete.....	2.50
35092	Plate—Dial plate—less dial scale.....	.30
35000	Resistor—Ballast tube resistor.....	.80
30936	Resistor—120 ohms, 1 watt (R9).....	.22
13428	Resistor—150 ohms, ½ watt (R4).....	.20
13998	Resistor—22,000 ohms, ½ watt (R2, R3, R6).....	.20
14560	Resistor—100,000 ohms, ½ watt (R13).....	.20
12264	Resistor—220,000 ohms, ½ watt (R1, R8).....	.20
12285	Resistor—470,000 ohms, ½ watt (R10).....	.20
12679	Resistor—2.2 meg., ½ watt (R5).....	.20
13601	Resistor—10 meg., ½ watt (R7).....	.20

MODELS 46X21, Ch. RC 461A
46X23, Ch. RC 461B, 46X24,

RCA MFG. CO., INC.

Chassis RC461
Schematic, Voltage
Alignment, Trimmers
Socket, Lead Dress

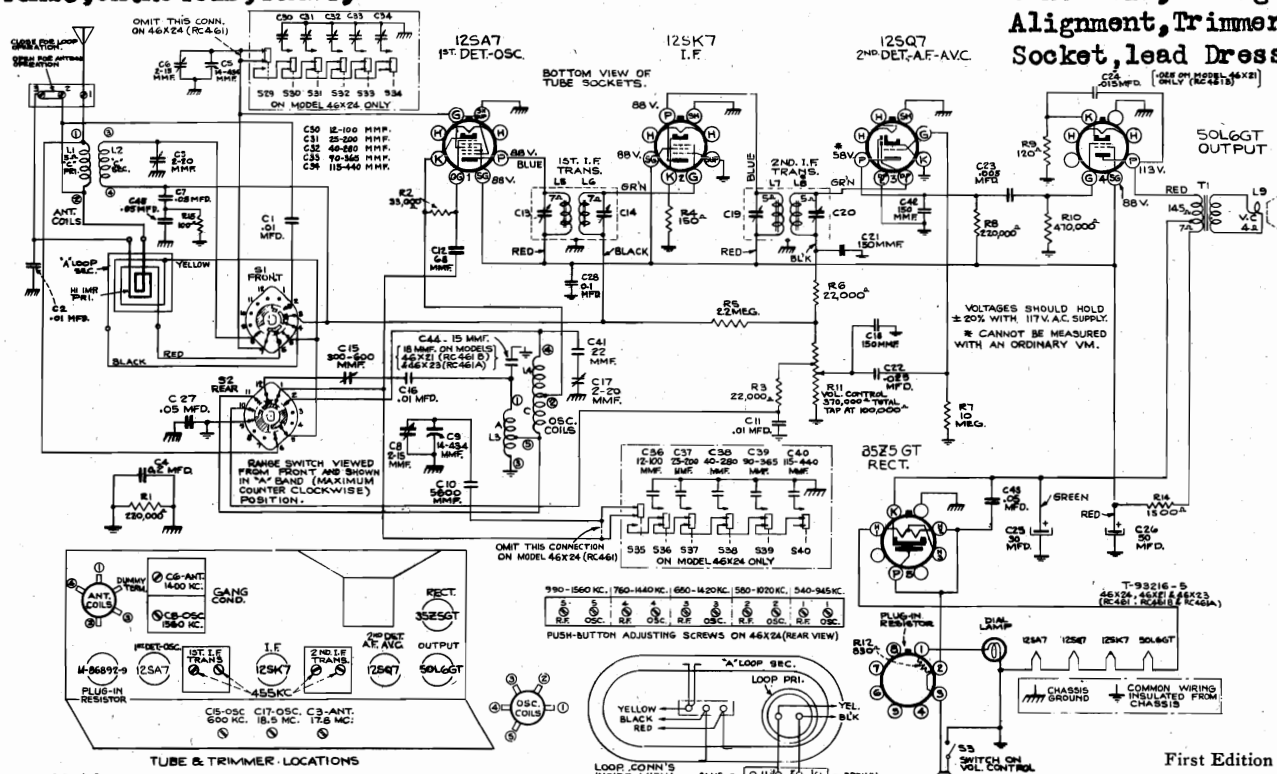

First Edition

-1940 No. 6-

Specifications

Frequency Ranges 550-1,550 kc and 6-18 mc

PUSH BUTTON RANGES (Model 46X24 only)

- (1) Approximately 540- 945 kc
- (2) Approximately 580-1,020 kc
- (3) Approximately 650-1,320 kc
- (4) Approximately 760-1,440 kc
- (5) Approximately 990-1,560 kc

Intermediate Frequency 455 kc

POWER OUTPUT RATING

Undistorted 1.1 watts
Maximum 1.4 watts

Dial and Controls

LOUDSPEAKER (RL81A1)

Type 5-inch permanent magnet dynamic
Voice Coil Impedance at 400 Cycles 4.5 ohms

POWER SUPPLY RATINGS

A-C Rating 105-125 volts, 50-60 cycles, 50 watts
D-C Rating 105-125 volts, direct current, 50 watts

Adjustments for Electric Tuning:

The push buttons and corresponding frequency ranges are given in the schematic diagram. Allow the set to warm up for about 15 minutes and proceed as follows:

- (1) List five desired stations in order of the push button ranges.
- (2) Push in the dial tuning (right hand) button and manually tune in the first station on the list.
- (3) Press button No. 1. Turn R-F screw half way in; next turn the oscillator screw entirely in and then gradually back out until the station is heard.
- (4) Adjust the R-F trimmer for maximum output. (Clockwise adjustment of oscillator and R-F trimmers tunes the circuits to lower frequencies.)
- (5) By turning the set to a position in which reception is weak a final more accurate adjustment may be made.
- (6) Adjust for each of the remaining stations in a similar manner and place corresponding station tabs in recesses above buttons. A "Dial Tuning" tab should be above button No. 6.

Precautionary Lead Dress:

- (1) Dress all leads away from oscillator and antenna coils.
- (2) Dress cathode resistor (R4) and B+ lead across 12SK7 socket between plate and grid terminals.
- (3) (46X24 only) Dress leads to push button switch straight up and parallel so that they do not touch each other.
- (4) Dress black lead from 1st I-F transformer over green lead.
- (5) Keep plate-cathode bypass (C43) of rectifier tube away from volume control.

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis through a .01 mfd. capacitor, and keep the output as low as possible.

Pre-Setting Pointer.—With gang condenser in full mesh, the pointer should be adjusted to a horizontal position.

Antenna.—The set is equipped with a built-in loop antenna. If the loop antenna is used, the antenna terminal board link should be closed. This link should be open when an external antenna is used. Connect the external antenna to terminal 1. If an antenna longer than 100 feet (including lead-in) is used, connect a 100 to 200 mfd. capacitor in series with the lead-in.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not operate, reverse the plug. On a-c, reversal of the plug may reduce hum.


Step	Connect high side of test oscillator to—	Tune test oscillator to—	Turn radio dial to—	Adjust following for max. output—
1	Grid 12SK7 in series with 0.01 mfd.	455 kc	"A" Band Quiet Point at 1,550 kc end of dial	C19 and C20 (2nd I-F Trans.)
2	Grid 12SA7 in series with 0.01 mfd.			C13 and C14 (1st I-F Trans.)
3		600 kc	"A" Band 600 kc	C15 (osc.)
4	Antenna in series with 200 mfd.	1,560 kc	"A" Band Full Clockwise	C8 (osc.)
5		1,400 kc	Resonance on "A" Band	C6 (ant.)
6	Repeat steps 3 (rock in), 4 and 5			
7		18.5 kc	"C" Band Full Clockwise	C17 (osc.)*
8	Antenna in series with 300 ohms	17.8 kc	"C" Band Resonance on 17.8 kc Signal	C3 (ant.)
9	Repeat steps 7 and 8			

* Use minimum capacity peak if two can be obtained.
Note: Oscillator tracks above signal on all bands.


MODELS K50, Ch. RC418A
T55, T56, Ch. RC418
Schematic, Voltage
Chassis Wiring

RCA MFG. CO., INC.

FOR TUNER DATA
SEE PAGE 11-41

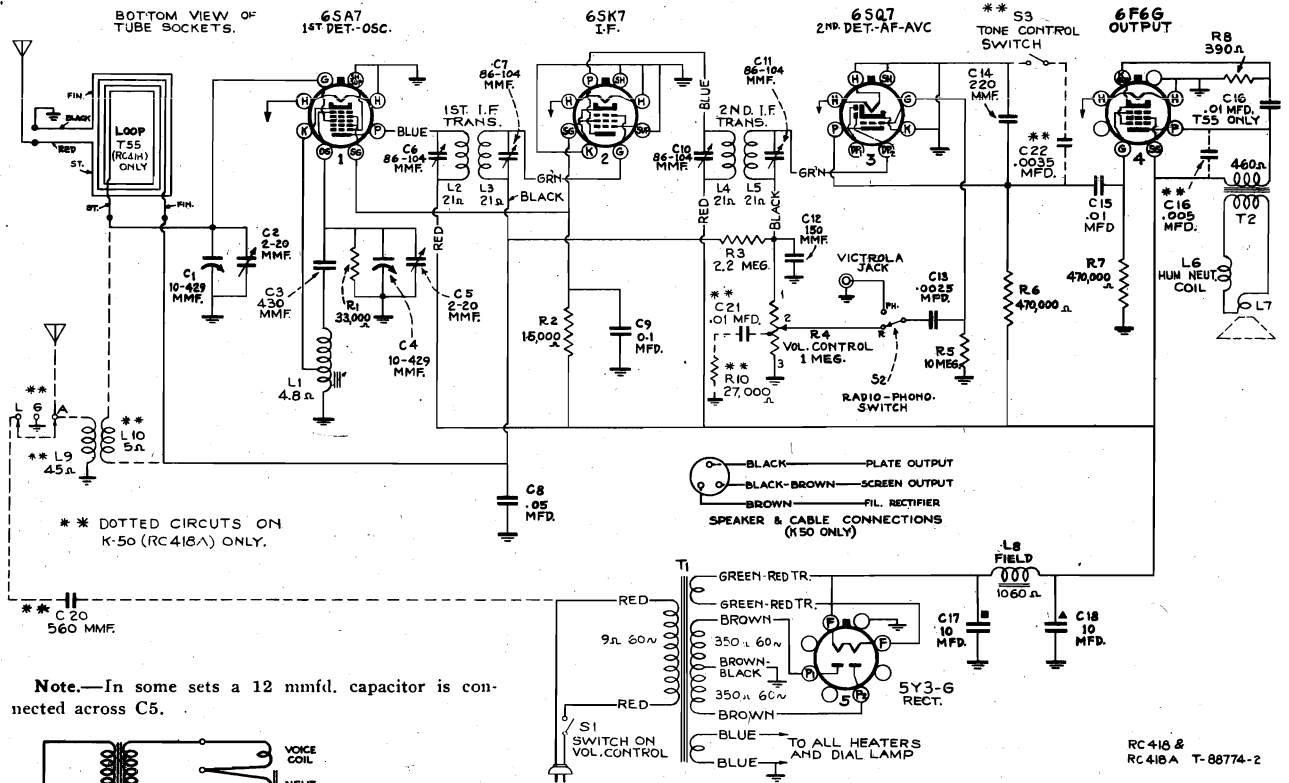

Note.—In some sets a 12 mmfd. capacitor is connected across C5.

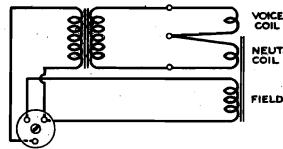


LOUDSPEAKER

T55

K50


Type 5 inch electrodynamic 12 inch electrodynamic
V. C. impedance at 400 cycles..... 3.4 ohms 2.2 ohms

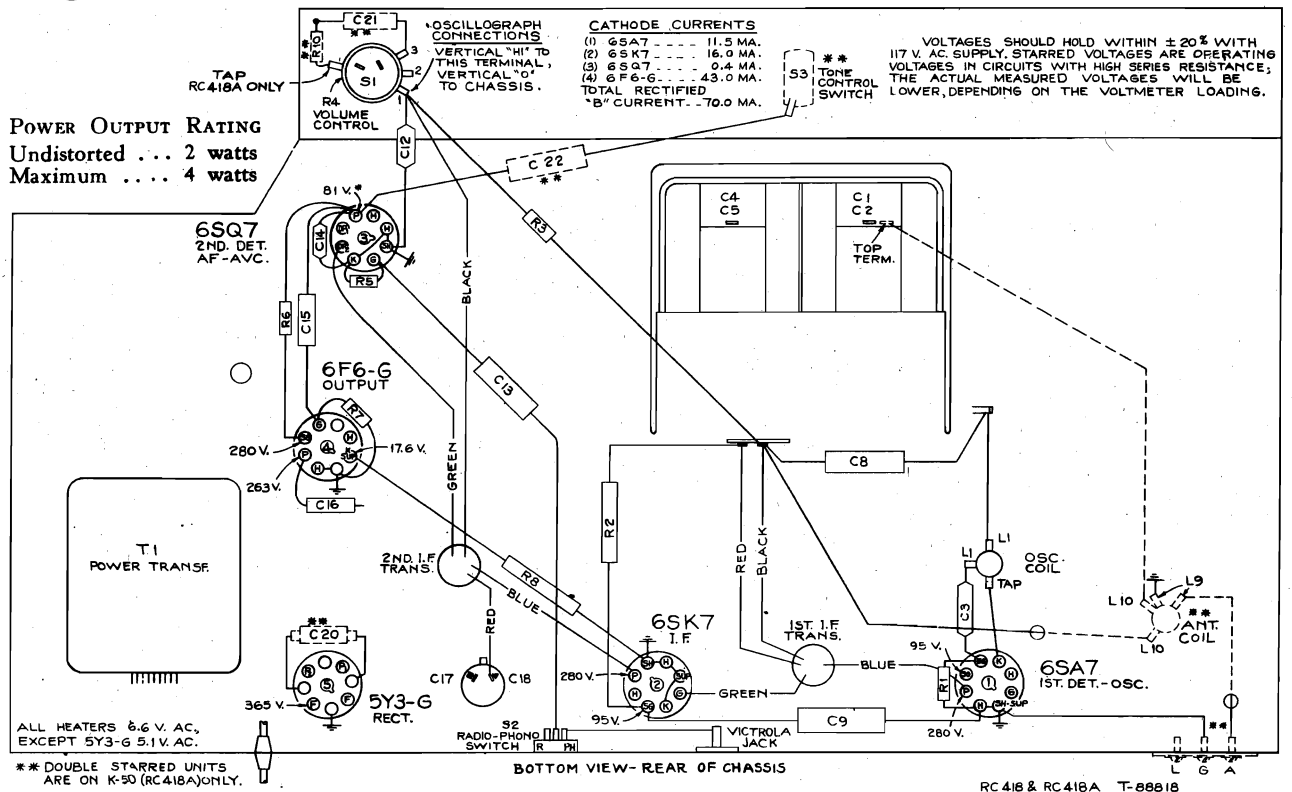

R-F Wiring Diagram and Socket Voltages


RCA MFG. CO., INC.

MODEL K50, Chassis RC497
2nd Production
Schematic, Voltage
Socket, Trimmers, Dial

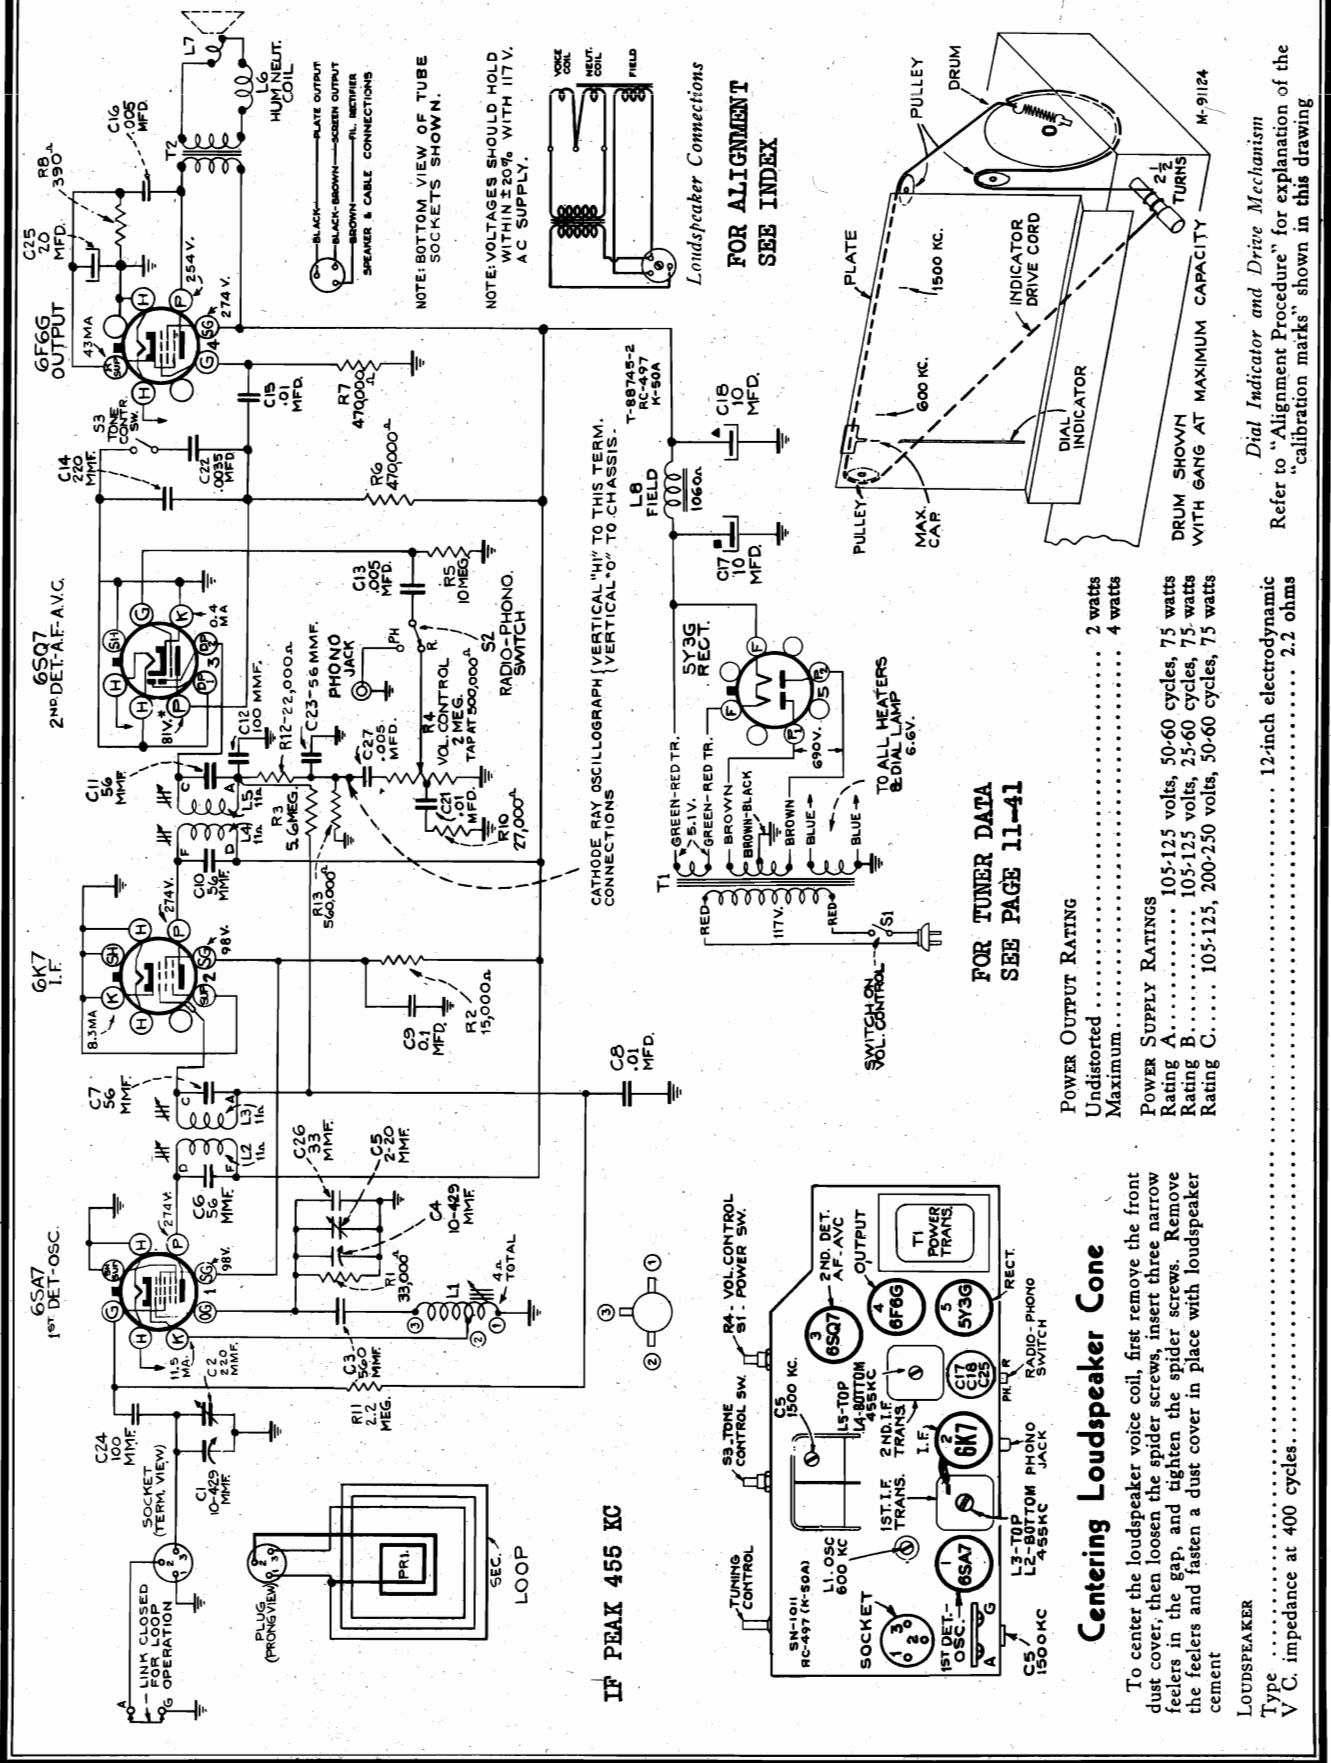

MODELS BP55, BP56, BP85
Chassis RC-455
Schematic, Voltage
Alignment, Trimmers
Socket

RCA MFG. CO., INC.

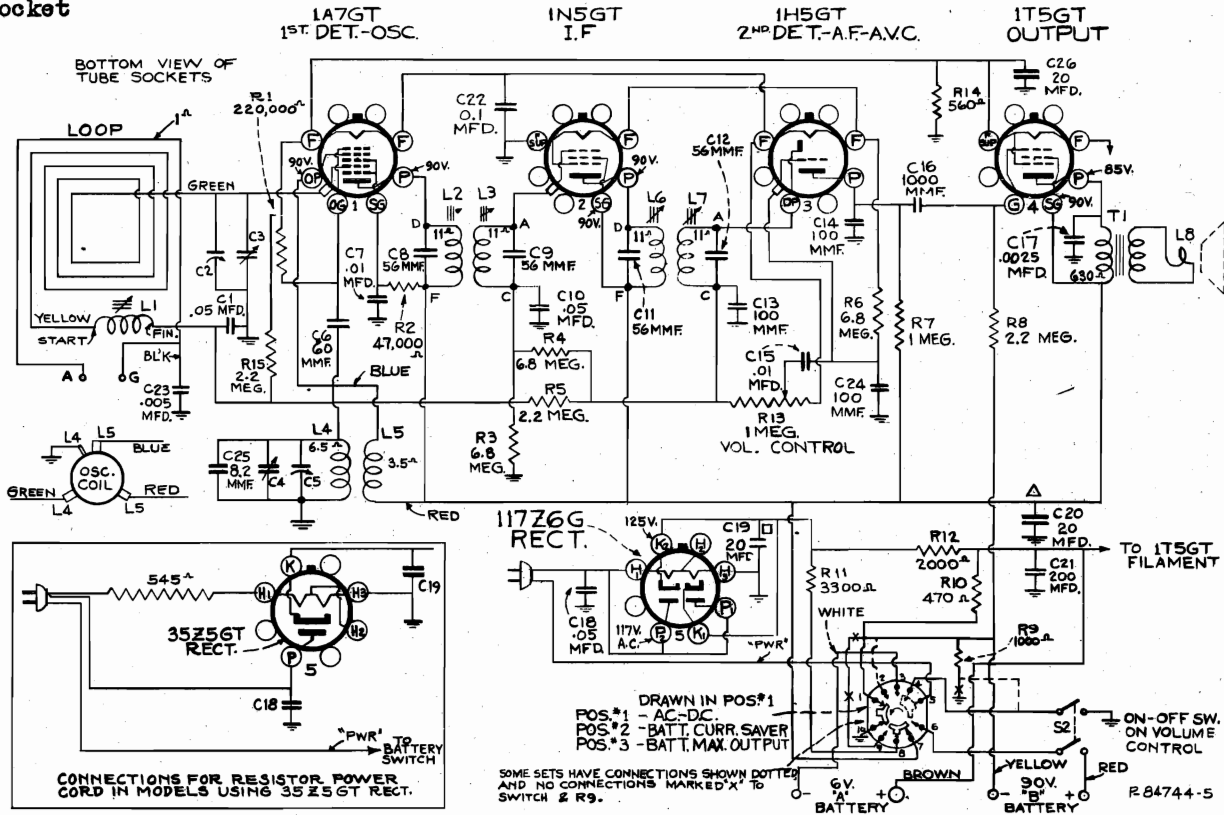

Schematic Circuit Diagram

Measurements are made to chassis unless otherwise indicated, with set tuned to quiet point. Values should hold within approximately 20% with rated battery voltage.

LINE CURRENT SUPPLY

110 to 125 volts, AC 50 or 60 cycles, or DC

BATTERIES REQUIRED

"A" one 6 volt dry plug-in type (Eveready No. 747 or equivalent)
 "B" two 45 volt dry plug-in type (Eveready No. 482 or equivalent)

Frequency Range..... 540-1,600 kc
 Intermediate Frequency..... 455 kc

CURRENT CONSUMPTION

"A," 0.05 ampere—"B," 10.5 milliamperes full power;
 6.0 milliamperes save power.

POWER OUTPUT

Undistorted..... 0.125 watt
 Maximum..... 0.17 watt

LOUDSPEAKER

Type..... 5-inch permanent-magnet dynamic
 Voice-coil Impedance..... 4.5 ohms at 400 cycles

position will sometimes be helpful. If no broadcast signal is available connect test oscillator output to a suitable radiation loop located several feet away from receiver.



Alignment Procedure

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-oscillator.—For all alignment operations, keep the output as low as possible to avoid a-v-c action.


Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	1A7GT 1st-Det. grid cap, in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	L2, L3, L6, L7 (1st and 2nd I-F transformers)
2		1,600 kc	1,600 kc	C4 osc.
3	radiated signal near 600 kc		signal frequency	L1
4	radiated signal near 1,400 kc		signal frequency	C3
5	radiated signal near 600 kc		signal frequency	L1

For steps 3, 4, and 5 the chassis must be in the cabinet and the batteries in place and connected. L-1 is then reached through the small hole in the cabinet which is normally covered with a small plug located farthest away from C-3 and C-3 is reached through an eyelet in the speaker-grille. If a broadcast signal is used it should be weak to avoid a-v-c action. Turning loop to minimum pickup

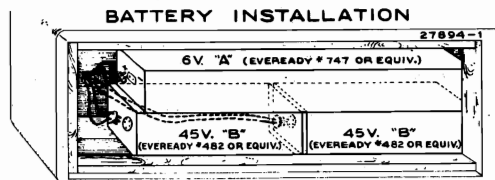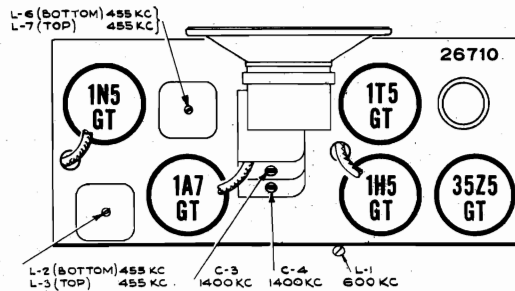

RCA MFG. CO., INC.


MODEL K60, Chassis RC415
Schematic, Voltage
Chassis Wiring, Changes

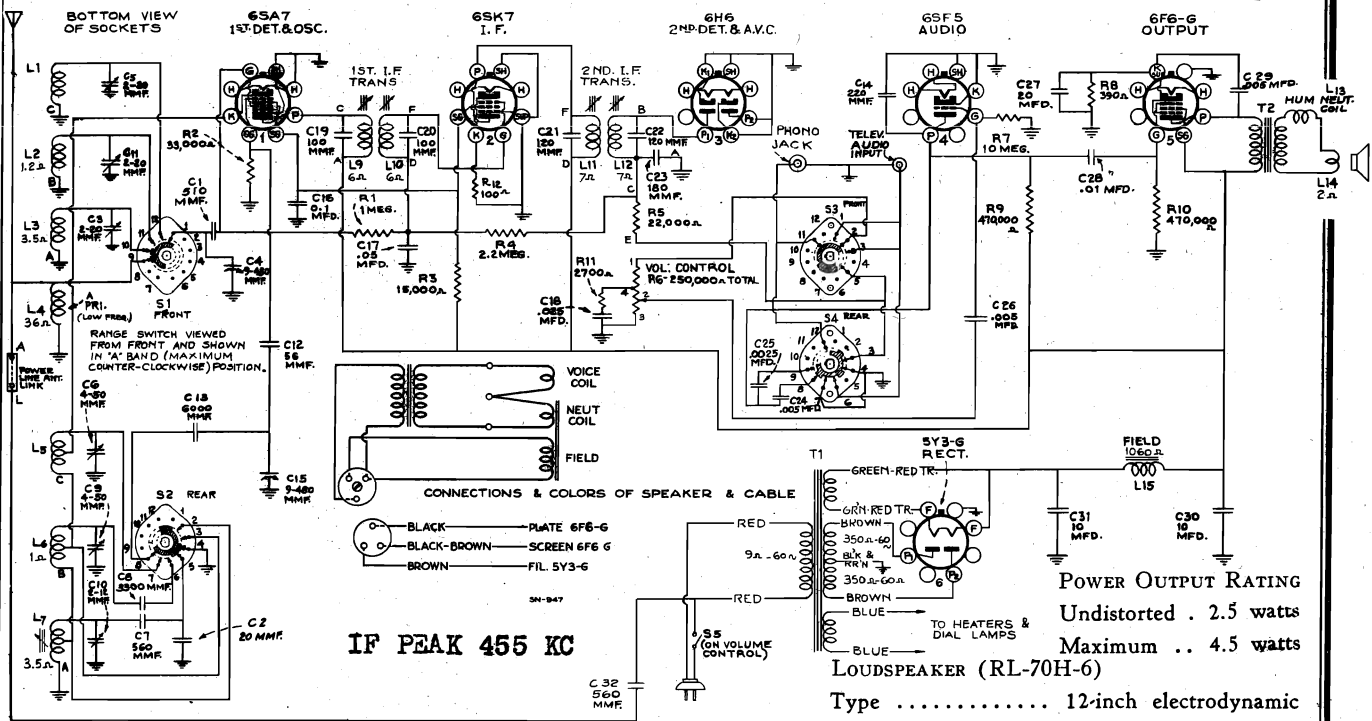

Note: On some receivers the following circuit modifications are in effect:

1. R11 is 4,700 ohms, and C18 is .05 mfd.
2. C1 is 470 mmfd.
3. There are three types of 2nd I-F transformers in use.
 - a. The first type (Stock No. 14308) has C23 and R5 mounted inside the case, and is connected exactly as shown above.
 - b. In the second type R5 is omitted and the lead from S4 connects to C instead of E. E is not used.
 - c. In the third type R5 is omitted and C23 is connected externally from C to ground. E is not used. The lead from the diode plate connects to A instead of B. When replacing this transformer with Stock No. 14308, remove the external C23 and connect the replacement transformer as shown in the above diagram.

Important: Stock No. 14308 is used as replacement for all three of the above types, and should be connected as shown in the diagram.

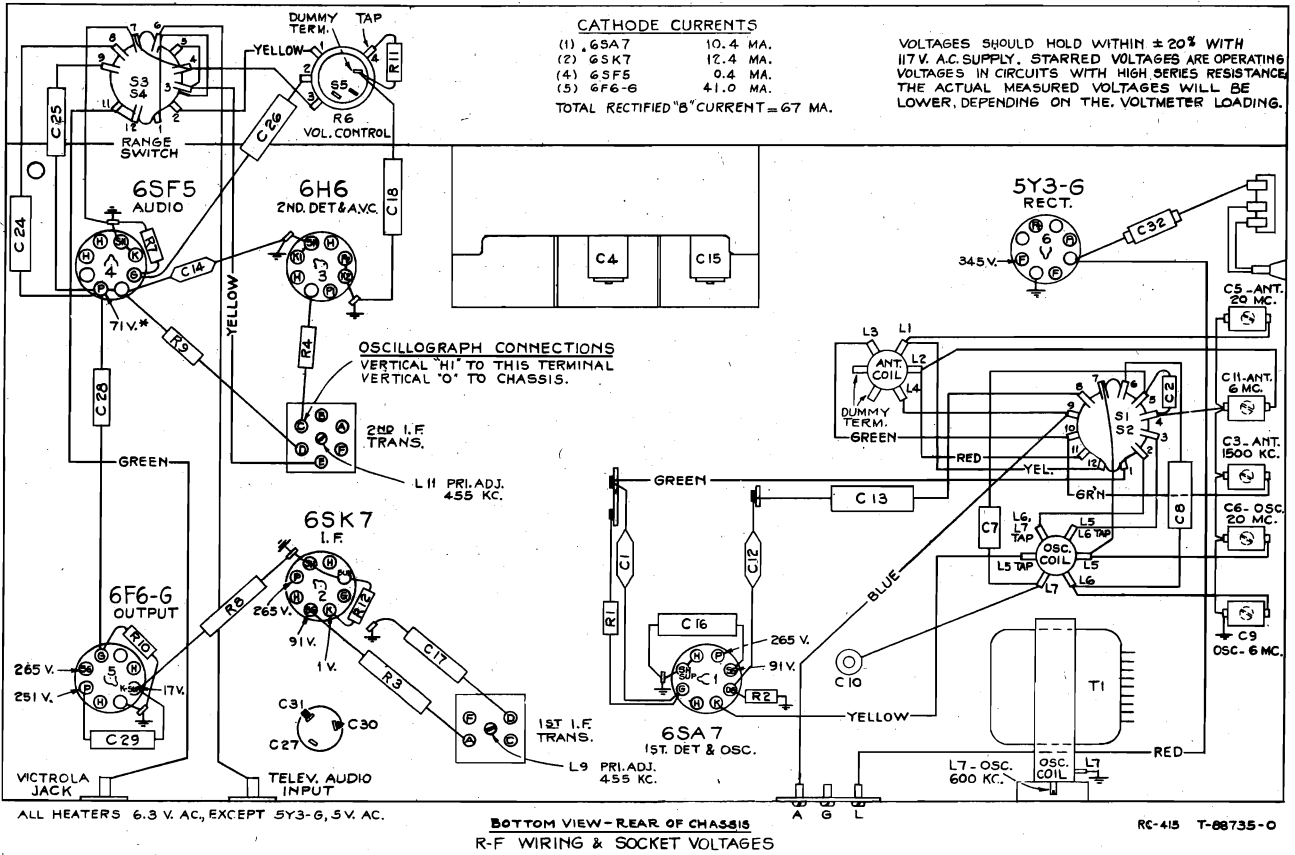

MODEL K60, Chassis RC415
 MODEL K80, Chassis RC415A
 Alignment, Trimmers
 Socket

RCA MFG. CO., INC.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord-Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the tuning drum. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical and directly under the center of the shaft of the tuning drum when the plates are fully meshed. The drum is held to the shaft by means of two set-screws, which must be tightened securely when the drum is in the correct position.

On the inner side of the tuning drum are two projections which serve as stops to prevent extreme rotation of the gang condenser. The tuning drum should be set so that the stop limiting clockwise movement of the drum takes effect just as the gang condenser plates are becoming fully meshed, thus preventing stress on the gang due to extreme rotation.



Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the chassis, and bend the wire so that it points to the 0° mark on the calibration scale when the plates are fully meshed.

Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	6SK7 grid in series with .01 mfd.	455 kc	"A" Band Quiet Point between 550-750 kc	L11 and L12 (2nd I-F Trans.)
2	6SA7 grid in series with .01 mfd.			L9 and L10 (1st I-F Trans.)
3	Ant. terminal in series with 300 ohms	20 mc	20 mc (200°) "C" Band	C8 (osc.)* C5 (ant.)
4		6 mc	6 mc (187.5°) "B" Band	C9 (osc.)** C11 (ant.)
5	Ant. terminal in series with 200 mmfd.	1,500 kc	1,500 kc (198.25°) "A" Band	C10 (osc.) C3 (ant.)
6		600 kc	600 kc (39.75°) "A" Band	L7 (osc.) Rock Gang
7	Repeat step 5.			


* Use minimum capacity peak if two can be obtained. Check to determine that C8 has been adjusted to correct peak by tuning receiver to approximately 19.09 mc where a weaker signal should be received.

** Use minimum capacity peak if two can be obtained. Check to determine that C9 has been adjusted to correct peak by tuning receiver to approximately 5.09 mc where a weaker signal should be received.

Note: Oscillator tracks above signal on all bands.

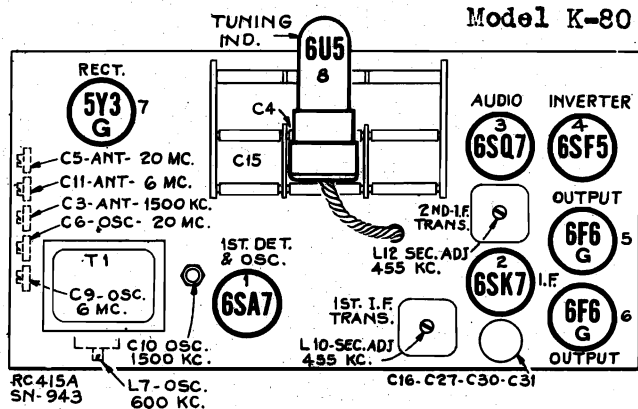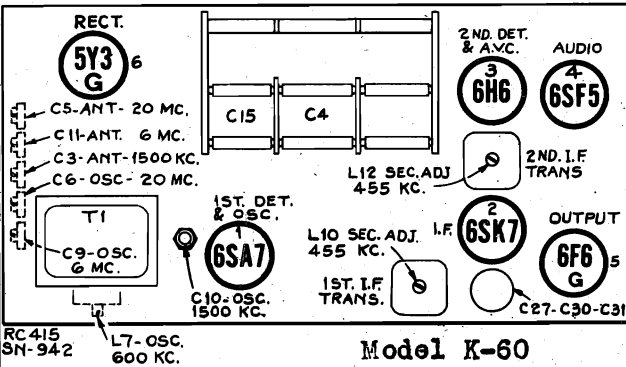

Calibration Scale


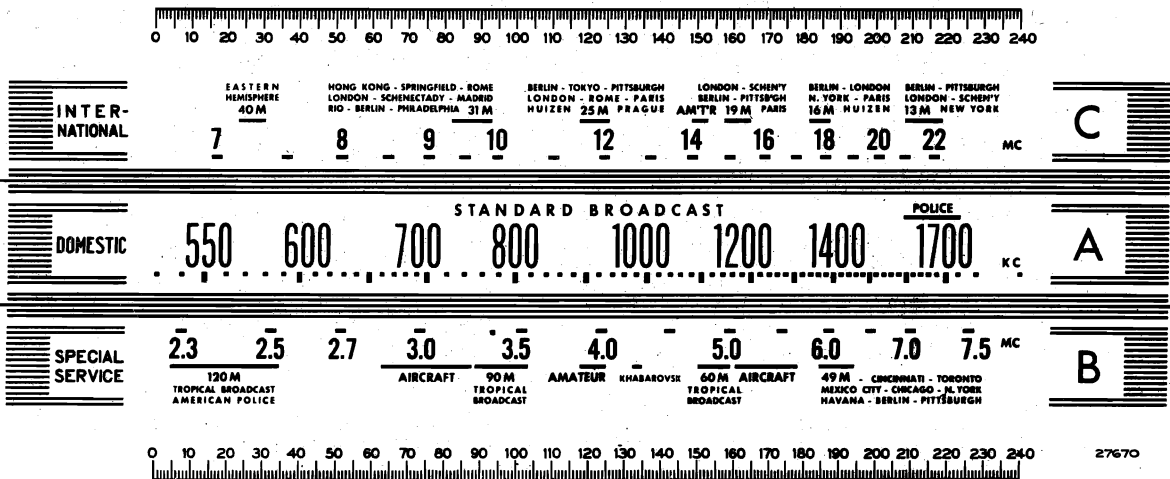


The corresponding position of the dial indicator for any setting of the calibration scale can be determined by drawing a line from this point on the bottom calibration scale to the same point on the top calibration scale. For example 39.75° on the calibration scale corresponds to 600 kc on "A" band. Read instructions under "Alignment Procedure."

MODEL K105
Drive Cord Data


RCA MFG. CO., INC.

MODEL K60, Chassis RC415
MODEL K80, Chassis RC415A
Dial Data, Parts List

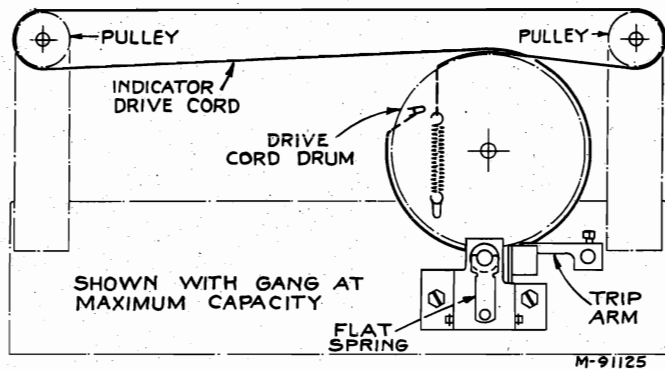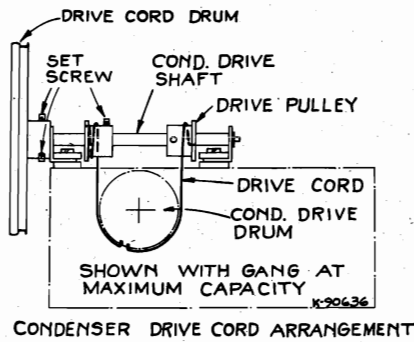

Note: In the Dial Indicator Drive Cord Assembly drawing at the right the mechanism is shown with the range switch in the "A" band position. In this position the trip arm on the range switch shaft must be adjusted so that when push-buttons are operated, the drive cord drum will turn freely without rubbing or binding against the drive roller.

DIAL INDICATOR DRIVE CORD ASSEMBLY

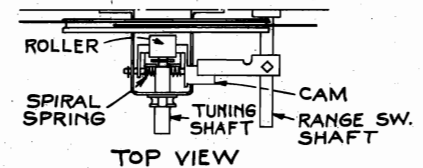

STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES (RC-415A)					
33620	Arm—Push arm and cam assembly on tuning unit—less lock screw	.35	13730	Resistor—1 meg., 1/4 watt (R1)	.20
33432	Arm—Trip arm and set screw located on range switch shaft	.15	12679	Resistor—2.2 meg., 1/4 watt (R4)	.20
33430	Board—Antenna and ground terminal board	.20	13601	Resistor—10 meg., 1/4 watt (R7, R15)	.20
30766	Cap—Rubber cap for Magic Eye—Model K80 only	.15	30340	Retainer—Retainer for shaft of tuning shaft cam and arm	.02
12714	Capacitor—Air-trimmer, 2-12 mmfd. (C10)	.50	33419	Roller—Friction roller for tuning knob shaft	.10
33429	Capacitor—Trimmer capacitor bank, 2 sections 4-50 mmfd., and 3 sections 2-20 mmfd. (C3, C5, C6, C9, C11)	.80	4669	Screw—No. 8-32 square head set screw for drum	.03
31871	Capacitor—20 mmfd. (C2)	.40	33621	Screw—Push arm lock screw	.05
12723	Capacitor—56 mmfd. (C12)	.35	33624	Shaft—Tuning condenser drive shaft and washer	.15
30904	Capacitor—100 mmfd. (C19, C20)	.25	33422	Shaft—Tuning shaft—less friction roller	.20
12404	Capacitor—120 mmfd. (C21, C22)	.30	31364	Socket—Dial lamp socket	.20
14712	Capacitor—180 mmfd. (C23)	.30	13871	Socket—Magic Eye tube socket	.45
30232	Capacitor—220 mmfd. (C14)	.35	14278	Socket—Phonograph or Television input socket	.25
30608	Capacitor—510 mmfd. (C1)	.35	31319	Socket—Tube socket	.05
31433	Capacitor—560 mmfd. (C7)	.35	35175	Spring—Drive drum tension spring	.25
12537	Capacitor—560 mmfd. (C32)	.35	33623	Spring—Drive drum cord spring	.04
31403	Capacitor—3,300 mmfd. (C8)	.60	33421	Spring—Push arm return spring	.08
31405	Capacitor—6,000 mmfd. (C13)	.75	33420	Spring—Tuning shaft flat spring	.10
5107	Capacitor—.0025 mfd. (C25)	.20	33420	Spring—Tuning shaft cam spiral spring	.06
4838	Capacitor—.005 mfd. (C24, C26, C29, C33, C35)	.25	33426	Switch—Range switch (S1, S2)	1.10
4937	Capacitor—.01 mfd. (C28)	.25	33428	Transformer—First i-f transformer (L9, L10, C19, C20)	1.95
32787	Capacitor—.05 mfd., 400 V. (C17, C34)	.20	14308	Transformer—Second i-f transformer (L11, L12, C21, C22, C23, R5)	2.90
32786	Capacitor—.01 mfd. (C18)	.20	33618	Transformer—Power transformer—105-120 volts, 25 cycle (T1)	6.40
33014	Capacitor—Electrolytic, 3 sections 10 mfd., one section 20 mfd. (C16, C27, C30, C31)	1.90	33112	Transformer—Power transformer—105-120 volts, 50-60 cycle (T1)	4.30
32821	Coil—Antenna coil (L1, L2, L3, L4)	1.35	SPEAKER ASSEMBLIES (RL-70J1)		
32824	Coil—Oscillator coil (L5, L6, L7)	1.00	31825	Cap—Cone center dust cap	.05
33424	Control—Tone control (S3, S4)	1.15	11469	Coil—Hum neutralizing coil (L13)	.30
33425	Control—Volume control and power switch (R6, S5)	2.00	33116	Coil—Speaker field coil (L15)	2.10
32635	Cord—Condenser drive cord	.24	31275	Cone—Speaker cone, voice coil, and dust cap (L14)	1.75
32634	Cord—Drive cord	.10	5039	Plug—4-prong male, for speaker	.30
32713	Core—Adjustable core and stud for oscillator coil	.35	33444	Transformer—Output transformer (T2)	2.00
33627	Drum—Condenser drive drum	.25	MISCELLANEOUS ASSEMBLIES		
33174	Drum—Drive cord drum with set screws and calibrator dial	.65	33473	Button—Push button	.10
11891	Lamp—Dial lamp	.17	30716	Clip—Magic Eye clip	.25
33625	Plate—Front guide plate for push arms	.25	33437	Dial—Dial scale (glass)	1.10
5940	Plug—4-contact female for speaker cable	.30	33439	Escutcheon—Dial escutcheon—less push buttons	2.20
33427	Pulley—Drive cord pulley and mounting bracket	.30	33435	Frame—Dial scale holder, mounting brackets, pointer, and Magic Eye bracket and clip assembled—less dial	2.50
33626	Pulley—Drive pulley—less bronze drive cord	.25	34383	Indicator—Dial pointer, carriage, and clip	.40
14439	Resistor—100 ohms, 1/4 watt (R12)	.20	33434	Knob—Volume control, tone control, range switch, or station selector knob	.30
30735	Resistor—560 ohms, 1/4 watt (R8)	.22	33431	Link—Link for "Antenna-Ground" terminal board	.02
13714	Resistor—5,600 ohms, 1/4 watt (R11)	.20	33842	Marker—Station selectors call letter markers	.25
12265	Resistor—6,800 ohms, 1/4 watt (R17)	.20	33438	Screw—Thumb screw for Magic Eye clip	.05
33489	Resistor—15,000 ohms, 2.5 watt (R3)	.55	34143	Shaft—Pointer carriage slide rod	.15
14284	Resistor—22,000 ohms, 1/10 watt (R5)	.15	14270	Spring—Retaining spring for knob	.05
12454	Resistor—33,000 ohms, 1/4 watt (R2)	.20	SPEAKER ASSEMBLIES (RL-70H6)		
12285	Resistor—470,000 ohms, 1/4 watt (R9, R10, R14, R16)	.20	5118	Plug—3-contact male, for speaker	.25
12013	Resistor—1 meg., 1/10 watt (R13)	.15	31301	Transformer—Output transformer (T2)	1.70
			33436	Frame—Dial scale holder, mounting brackets, and pointer assembled—less dial	2.35

*C18 in Model K80 ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE. *IN MODEL K80 ONLY

NOTE: Above Parts List applies to both Model K-60 and K-80 except for items noted. Items on the right apply only to Model K-60.

MODELS K60, K62, Ch. RC415B
 MODELS K80, K81, K82,
 Chassis RC415C, RC415D
 Alignment, Parts

RCA MFG. CO., INC.

Replacement Parts

Ident on genuine factory-tested parts, which are readily identified and may be purchased from authorized dealers.

STOCK No.	DESCRIPTION	STOCK No.	DESCRIPTION	Unit List Price	Unit List Price
33620	Arm—Push arm and cam assembly on tuning unit	31981	Socket—Dial lamp socket (Models K-80, K-81)	.20	.45
33432	A—less lock screw, 1/16" dia.	32778	Socket—Phonograph or Television input socket	.25	.25
34674	Board—Ant.-Grid terminal board	33179	Socket—Dial lamp socket (Models K-80, K-81)	.25	.25
12581	Cap—1 transformer shield cap.	33223	Spring—Drive drum cord spring	.04	.04
30766	Cap—1 transformer shield cap.	33622	Spring—Push arm return spring	.08	.08
34673	Capacitor—Trimmer, 2 sections 2-10 mfd., each	33421	Spring—Tuning shaft flat spring	.10	.10
34672	Capacitor—Trimmer, 2 sections 4-50 mfd., each	34677	Switch—Range switch	1.35	1.35
14076	Capacitor—48 mfd., (C3)	33818	Transformer—First I-F transformer	2.45	2.45
34680	Capacitor—39 mfd., (C2)	33819	Transformer—Second I-F transformer	2.50	2.50
32723	Capacitor—68 mfd., (C1)	33112	Transformer—Power transformer—105-120 volts, 50-80 cycle (T1)	6.40	6.40
30433	Capacitor—100 mfd., (C15, C20)				
30432	Capacitor—220 mfd., (C14)				
30433	Capacitor—470 mfd., (C1)				
30434	Capacitor—1000 mfd., (C2)				
30067	Capacitor—2700 mfd., (C8)				
31989	Capacitor—4020 mfd., (C30)				
31077	Capacitor—1000 mfd., (C29)				
30884	Capacitor—1000 mfd., (C28)				
4839	Capacitor—100 mfd., (C24, C26, C29)				
4837	Capacitor—100 mfd., (C25, C27, C30, C31)				
32787	Capacitor—.05 mfd., (C34—Models K-60, K-81)				
4839	Capacitor—.1 mfd., (C16)				
32786	Capacitor—.1 mfd., (C1)				
32840	Capacitor—Electrolytic, 2 sections 10 mfd., one K-60 only, mid. (C37, C30, C31) (Model K-80 only)				
33014	Capacitor—Electrolytic, 3 sections 10 mfd., one section 20 mfd., (C16, C27, C30, C31)				
34679	Coil—Oscillator coil				
34678	Control—Tone control				
34675	Control—Volume control and power switch				
34676	Control—Tone drive cord				
32834	Cord—Drive cord				
32718	Core—Adjustable core and stud for oscillator coil				
32827	Drum—Condenser drive drum, with set screws and calibrator dial				
33174	Lamp—Dial lamp				
11891	Plate—Front guide plate for push arm				
33925	Plug—K-60-A only				
5118	Plug—K-60-A only female for speaker cable (Model K-80, K-81)				
5040	Plug—4 contact female for speaker cable (Models K-80, K-81)				
33427	Pulley—4 pulley and mounting bracket				
33926	Pulley—Drive pulley—less bronze drive cord				
31388	Resistor—380 ohms, 1 watt (R8) (Model K-60 only)				
30735	Resistor—2700 ohms, 1 watt (R9) (Models K-80, K-81)				
14084	Resistor—2700 ohms, 1/2 watt (R11, R15)				
12695	Resistor—5000 ohms, 1/2 watt (R17) (Models K-80, K-81)				
33489	Resistor—15,000 ohms, 2.5 watt (R3)				
5139	Resistor—17,000 ohms, 1/2 watt (R2)				
12412	Resistor—17,000 ohms, 1/2 watt (R11) (Model K-60 only)				
12286	Resistor—170,000 ohms, 1/2 watt (R11) (Models K-80, K-81)				
12013	Resistor—K-81 meg., 1/10 watt (R13) (Models K-80, K-81)				
12679	Resistor—2.2 meg., 1/2 watt (R4)				
30271	Resistor—4.7 meg., 1/2 watt (R7)				
33001	Resistor—10 meg., 1/2 watt (R7)				
30390	Roller—Friction roller for tuning shaft cam and arm				
33419	Screw—No. 8-32 square head set screw for drum				
4869	Screw—No. 8-32 square head set screw for Magic Eye clip				
33924	Shaft—Tuning condenser drive shaft and washer				
33422	Shaft—Tuning shaft—less friction roller				
34676	Socket—3-contact female, for loop input				

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

XX Price upon application to your RCA Victor Parts Distributor.

Calibration Scale on Indicator-Drive-Cord-Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference when the tuning drum is rotated. The setting of the gang condenser is read on this scale, which is calibrated in degrees.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical and directly under the center of the shaft of the tuning drum when the plates are fully meshed. The tuning drum should be rotated until the plates are fully meshed, which must be tightened securely when the drum is in the correct position.

On the inner side of the tuning drum are two projections which serve as stops to prevent extreme rotation of the gang condenser. The projections are spaced 180° apart. The stop limiting clockwise movement of the drum is taken off so that the stop limiting counterclockwise movement of the drum is taken off, thus preventing stress on the gang due to extreme rotation.

Pointer for Calibration Scale.—Improve a pointer for the calibration scale by fastening a piece of wire to the chassis, and bend the wire so that it is parallel to the scale. The 0° mark on the calibration scale when the plates are fully meshed.

Steps	Connect test-osc. output to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	1st-det. grid, in series with .51 mfd.	455 kc	"C" band quiet point	L3 and L7 (and I-F trans.) L4 and L5 (1st I-F trans.)
2		15 mc	191° "C" band	C8 (occ.)*
3		2.44 mc	115° "B" band	C9 (occ.)
4	Fasten chassis in cabinet, see that link is closed on the antenna board, attach dial indicator to drive cord, with indicator at 90° mark and gang at maximum capacity.			
5		15 mc	15 mc signal "C" band	C11 Rock gang
6	Radiation loop	0.0 mc	0.0 mc signal "C" band	"C" loop leads**
7	Repeats step 5			
8	Repeats step 5	600 kc	600 kc "A" band	L3 (occ.) Rock gang
9	Repeats step 5	1,000 kc	1,000 kc "A" band	C10 (occ.) C38 (loop)
10	Repeats step 5	2.44 mc	2.44 mc "B" band	C9 (occ.) Rock gang
11	Repeats step 5	2.44 mc	2.44 mc "B" band	C9 (occ.) Rock gang

* Use minimum capacity peak if two peaks can be obtained.
 ** Adjust spacing between two leads from "C" band loop.
 NOTE: Oscillator tracks above signal on all bands.


The push-buttons should be adjusted for eight favorite stations after the receiver is operating, and has had a brief warm-up period.

Any standard broadcast stations may be chosen. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:


1. Loosen the push-button screws in back of the station-marker recesses.
2. Set Accessory-Tone Knob to "Radio" and turn the range selector to "A".
3. Press in the tuning knob and accurately tune in the first station.
4. With station accurately tuned in, press in the first push-button and tighten the screw.
5. Place the station marker tab in the recess.
6. Proceed in a similar manner to adjust the remainder of the push-buttons.

RCA MFG. CO., INC.

MODELS K60, K62, Ch. RC415B
(With Loop)
Schematic, Socket, Trimmers


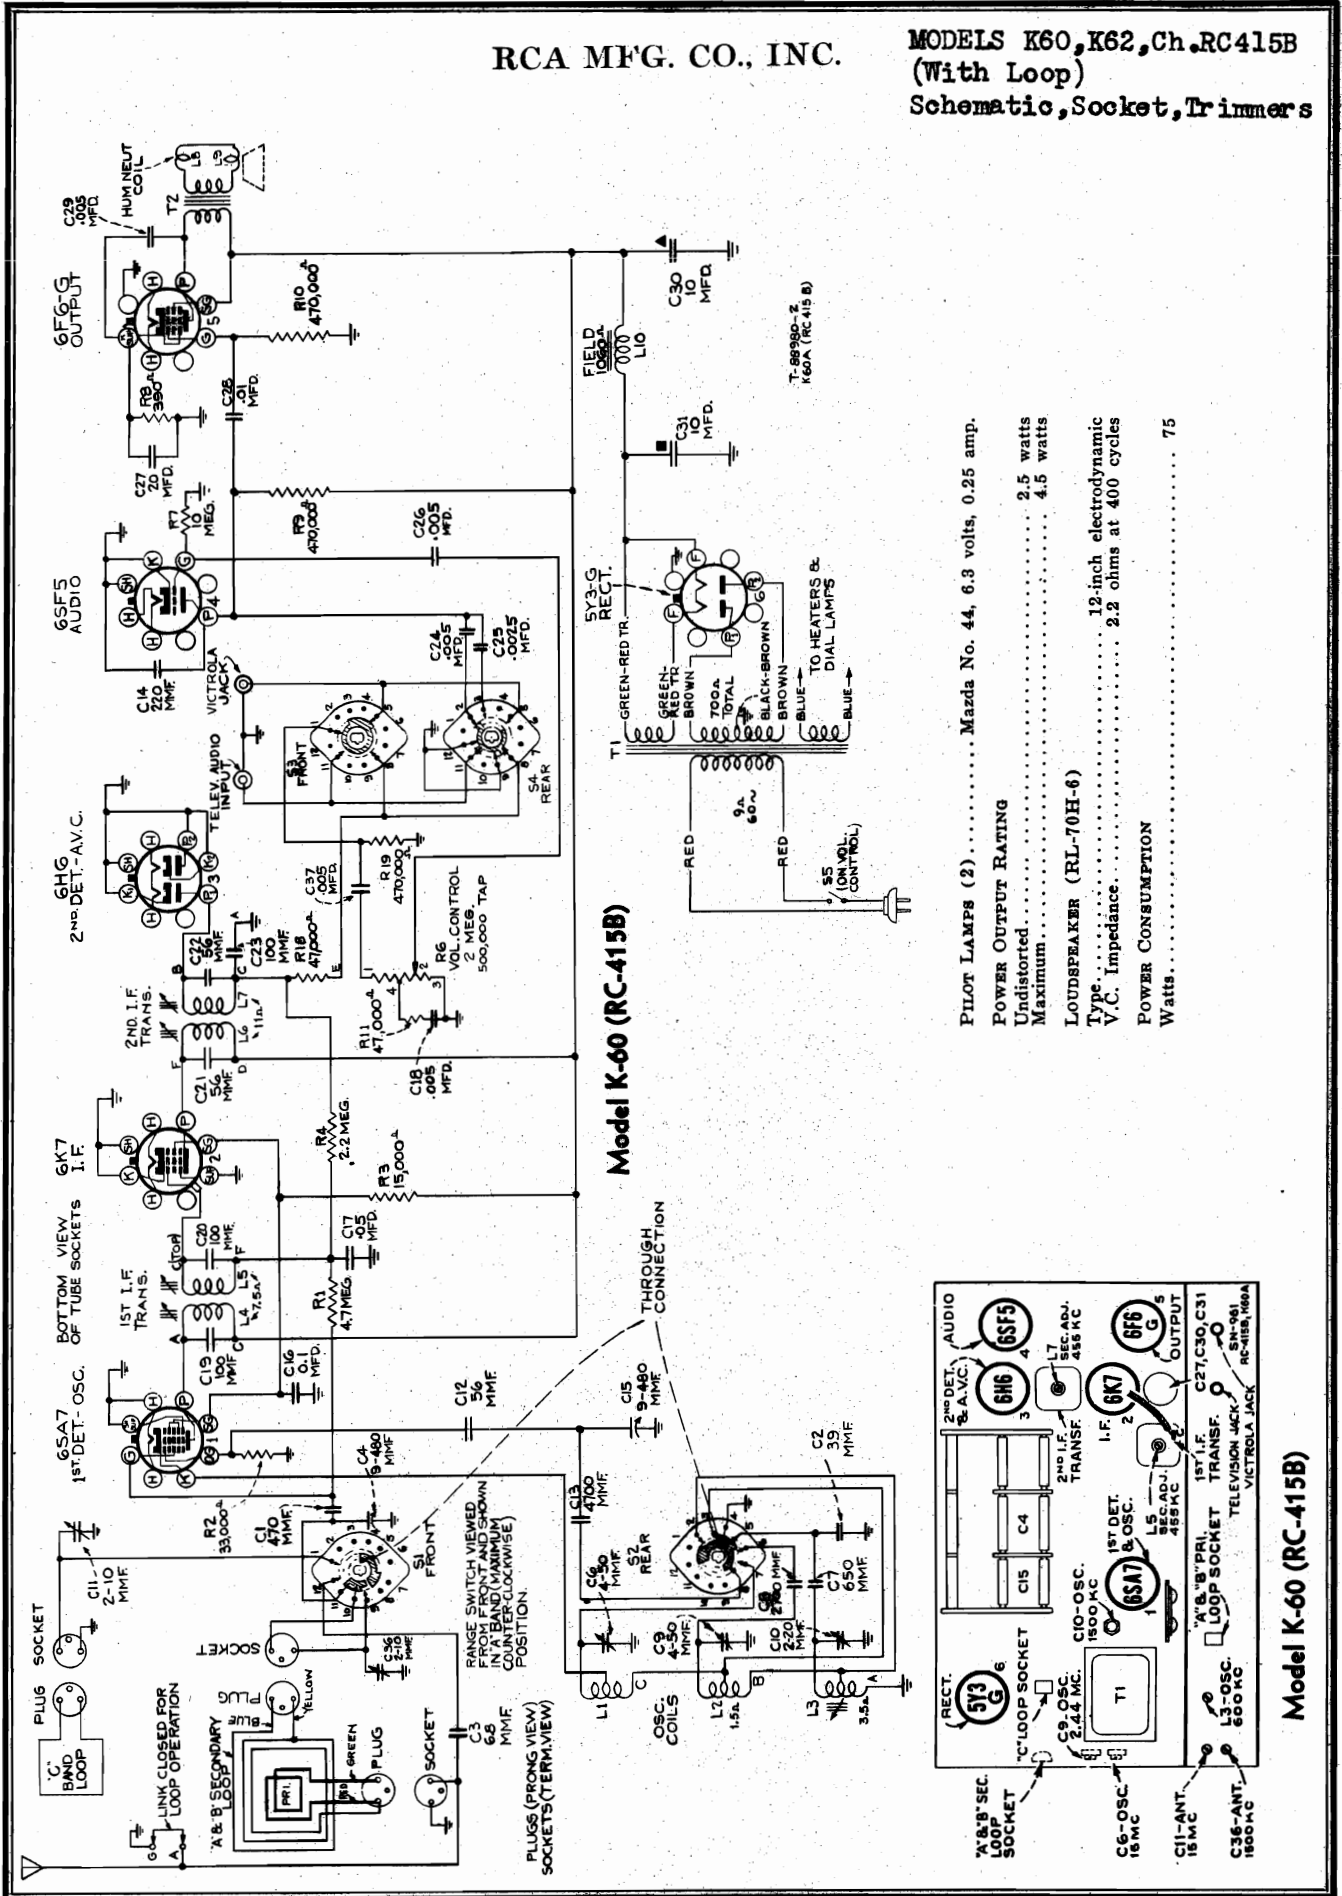


PILOT LAMPS (2)..... Mazda No. 44, 6.3 volts, 0.25 amp.	
POWER OUTPUT RATING	
Undistorted.....	2.5 watts
Maximum.....	4.5 watts
LOUDSPEAKER (RL-70H-6)	
Type.....	12-inch electrodynamic
V.C. Impedance.....	2.2 ohms at 400 cycles
POWER CONSUMPTION	
Watts.....	75

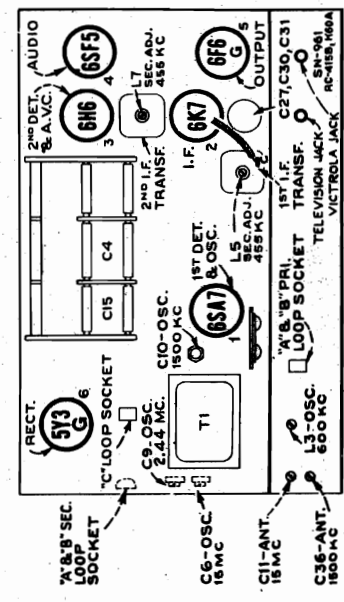

MODELS K60, K62, Ch. RC415B
 MODELS K80, Ch. RC415C, RC415D
 K81, K82, Chassis RC415C
 Chassis Wiring, Voltage

RCA MFG. CO., INC.

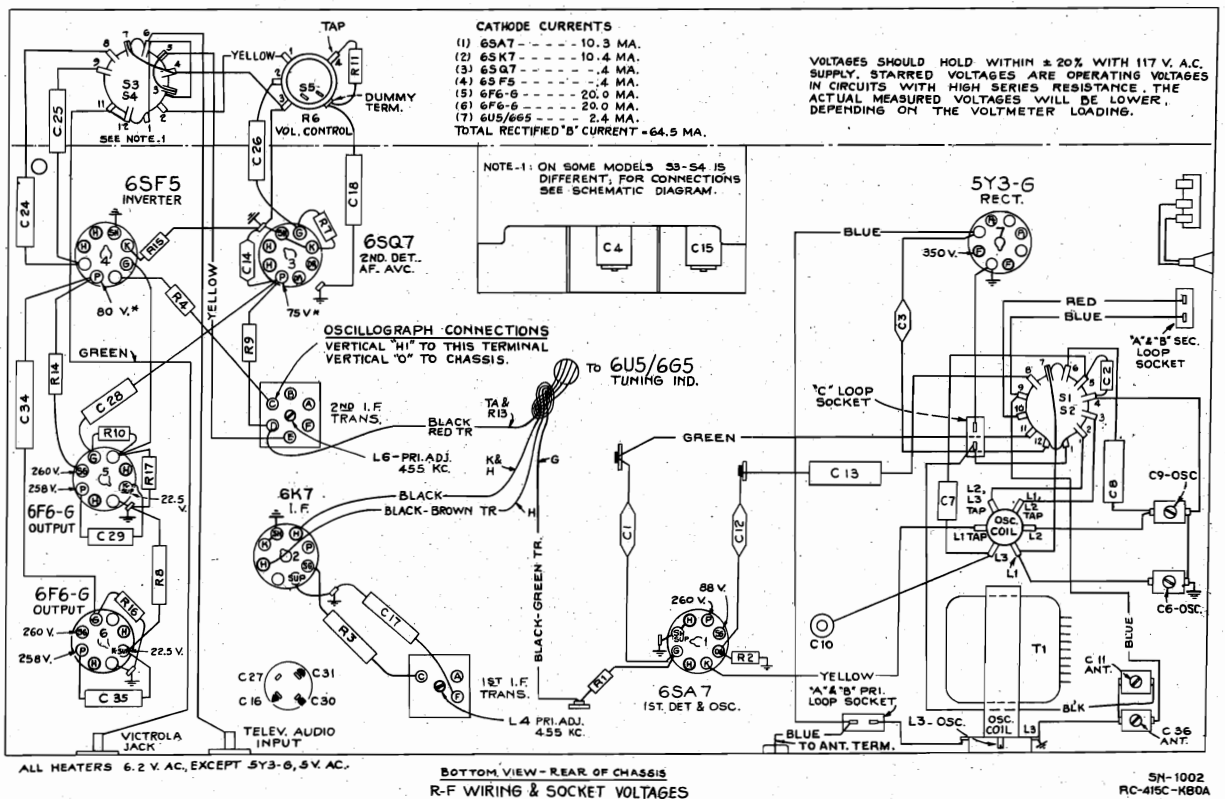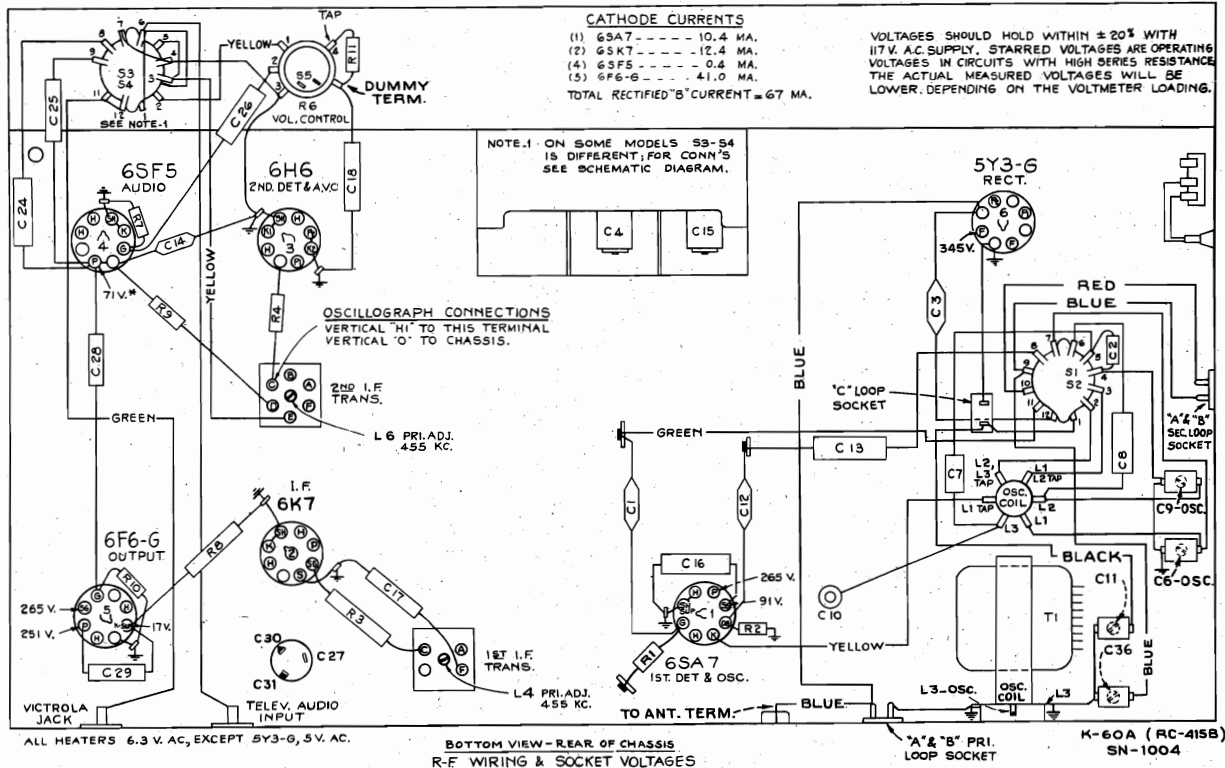


Models K-80 (RC-415C, RC-415D), and K-81 (RC-415C)

* The Tuning Indicator is not used in RC-415D

RCA MFG. CO., INC.

MODELS T60, Ch. RC425
T62, Chassis RC425D
Schematic, Voltage
Lead Dress

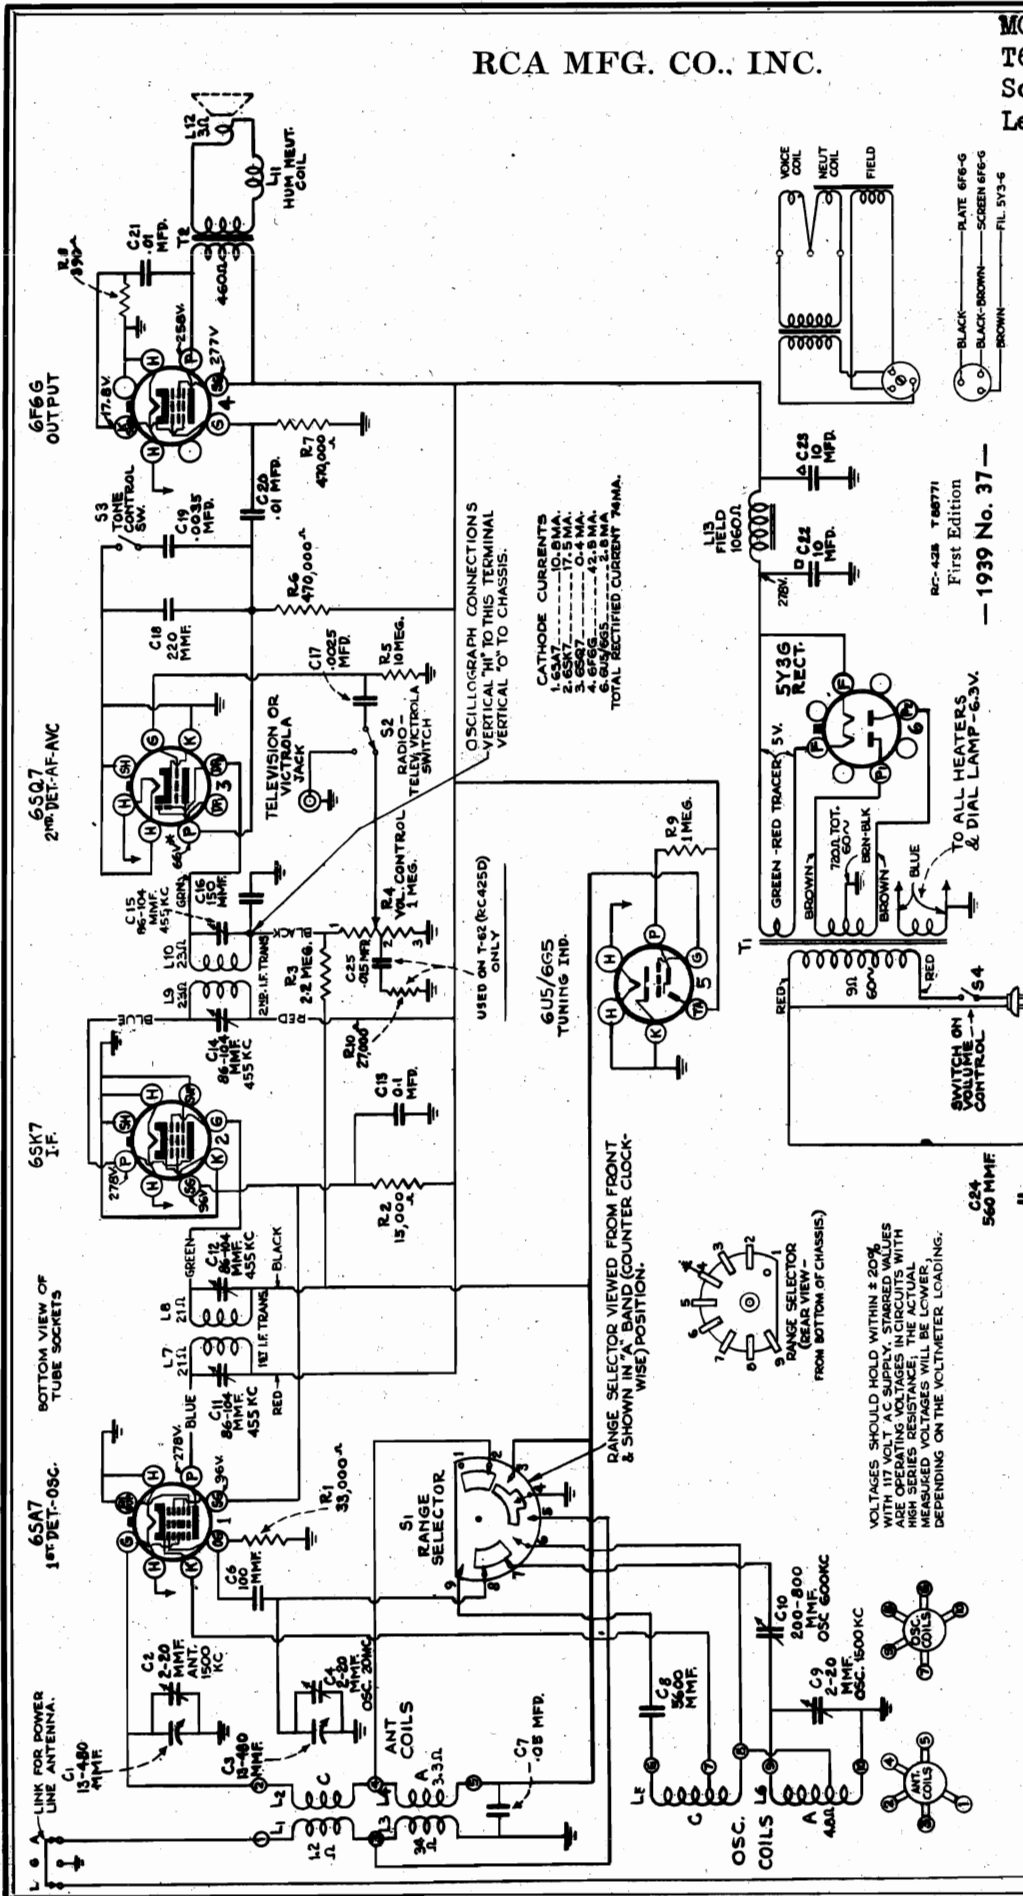

FREQUENCY RANGES

Standard Broadcast 540-1,720 kc

Short Wave 5.6-20 mc

INTERMEDIATE FREQUENCY 455 kc

POWER OUTPUT RATING

Undistorted 2.2 watts

Maximum 4.2 watts

Precautionary Lead Dress.—

1. Dress the Power Line Antenna lead close to the chassis base and near the back flange.
2. Power switch leads should be dressed around the 6SQ7 socket.

LOUDSPEAKER (T-60, RL-78-6; T-62, RL-79A-4)

Type T-60, 5-inch electrodynamic; T-62, 6-inch electrodynamic

V. C. Impedance 3.4 ohms at 400 cycles

POWER SUPPLY RATINGS

Rating A 105-125 volts, 50-60 cycles, 80 watts

Rating B 105-125 volts, 25-60 cycles, 80 watts

Rating C 100-130, 140-160, 195-250 volts, 40-60 cycles, 80 watts

PILOT LAMP (1) Mazda No. 51, 6.3 volts, 0.20 amp.

Power Line Antenna

Each of these models is equipped with a built-in power line antenna. To use this antenna, the link on the antenna terminal board should be connected between "A" and "L", thus connecting the antenna input of the receiver through a capacitor to the powerline. If an outside antenna is used, it should be connected to "A", a ground connection made to "G", and the link removed.

MODELS T60, T62
Alignment, Trimmers
Socket, Tuner, Dial Data

RCA MFG. CO., INC.

Alignment Procedure


Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid A.V.C. action.

Calibration Marks.—The tuning dial is fastened in the cabinet and can not be used for reference during alignment. Therefore calibration marks corresponding to dial readings of 600 kc, 1,500 kc, 6.1 mc, and 20 mc have been stamped in the plate on the front of the chassis as shown in the accompanying drawing. These marks are used for reference during alignment.



Dial Indicator Adjustment.—With the gang condenser in full mesh, the indicator should point to the mark at the extreme left (low frequency) end of the dial scale.

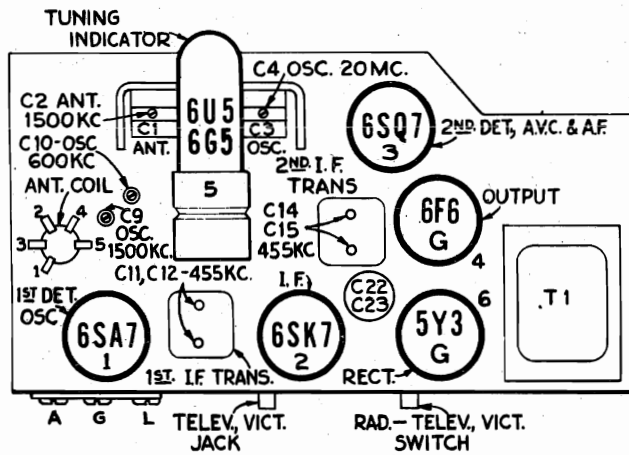

Steps	Connect the high side of the test osc. to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	Antenna terminal	455 kc	"A" Band Quiet point between 550-750 kc	C14 and C15 (2nd I-F trans.)
2				C11 and C12 (1st I-F trans.)
3	Antenna terminal in series with 300 ohms	20 mc	"C" Band 20 mc calibration mark	C4 (osc.)*
4	Antenna terminal in series with 200 mmf.	1,500 kc	"A" Band 1,500 kc calibration mark	C9 (osc.) C2 (ant.)
5		600 kc	"A" Band 600 kc calibration mark	C10 (osc.) Rock gang
6	Repeat step 4			

* Use minimum peak if two can be obtained. Check to determine that C4 has been adjusted properly by tuning receiver to approximately 19.09 mc where a weaker signal should be received.

Note: Oscillator tracks above signal on both bands.

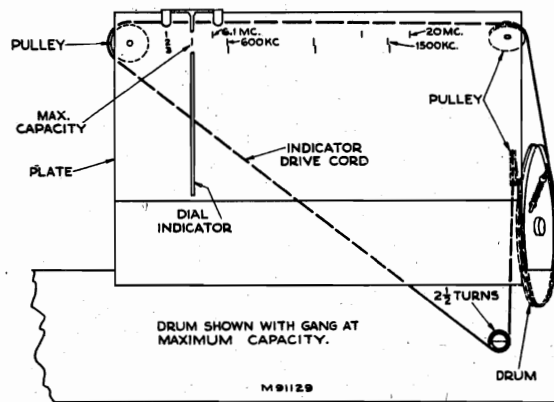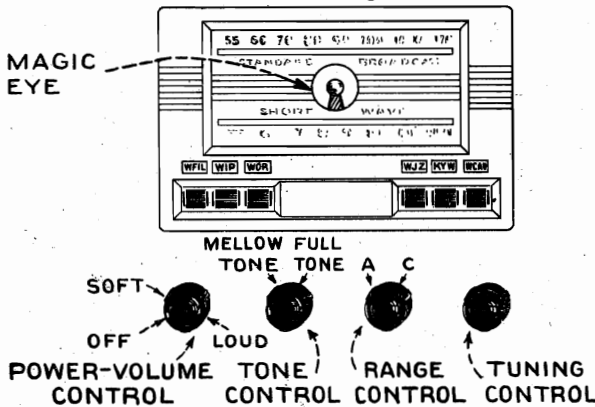

DIAL MECHANISM AND CALIBRATION MARKS.

Adjustments for Push-Button Tuning

The push-buttons should be adjusted for six favorite stations after the receiver has been operating for a brief warm-up period. Each button may be set up to any standard broadcast station. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:


1. Pull off the push-buttons and loosen the push-button rods with a small screwdriver.
2. Turn the accessory switch on the back apron of the chassis to "Radio" position and accurately tune in the station for which the first button is to be set.

3. Press in the first push-button rod (left) with the screwdriver, as far as it will go without undue pressure, hold in, retune station with manual control if necessary for best reception, and then carefully tighten up the rod. Do not tighten more than 1/4 turn after the rod begins to grip or damage to the mechanism may result.

4. Replace the push-button on its shaft.
5. Proceed in a similar manner for the remainder of the push-buttons.
6. Insert the station marker tabs in the recesses above the push-buttons.

RCA MFG. CO., INC.

MODEL K61, Chassis RC498F
Schematic, Voltage
Lead Dress

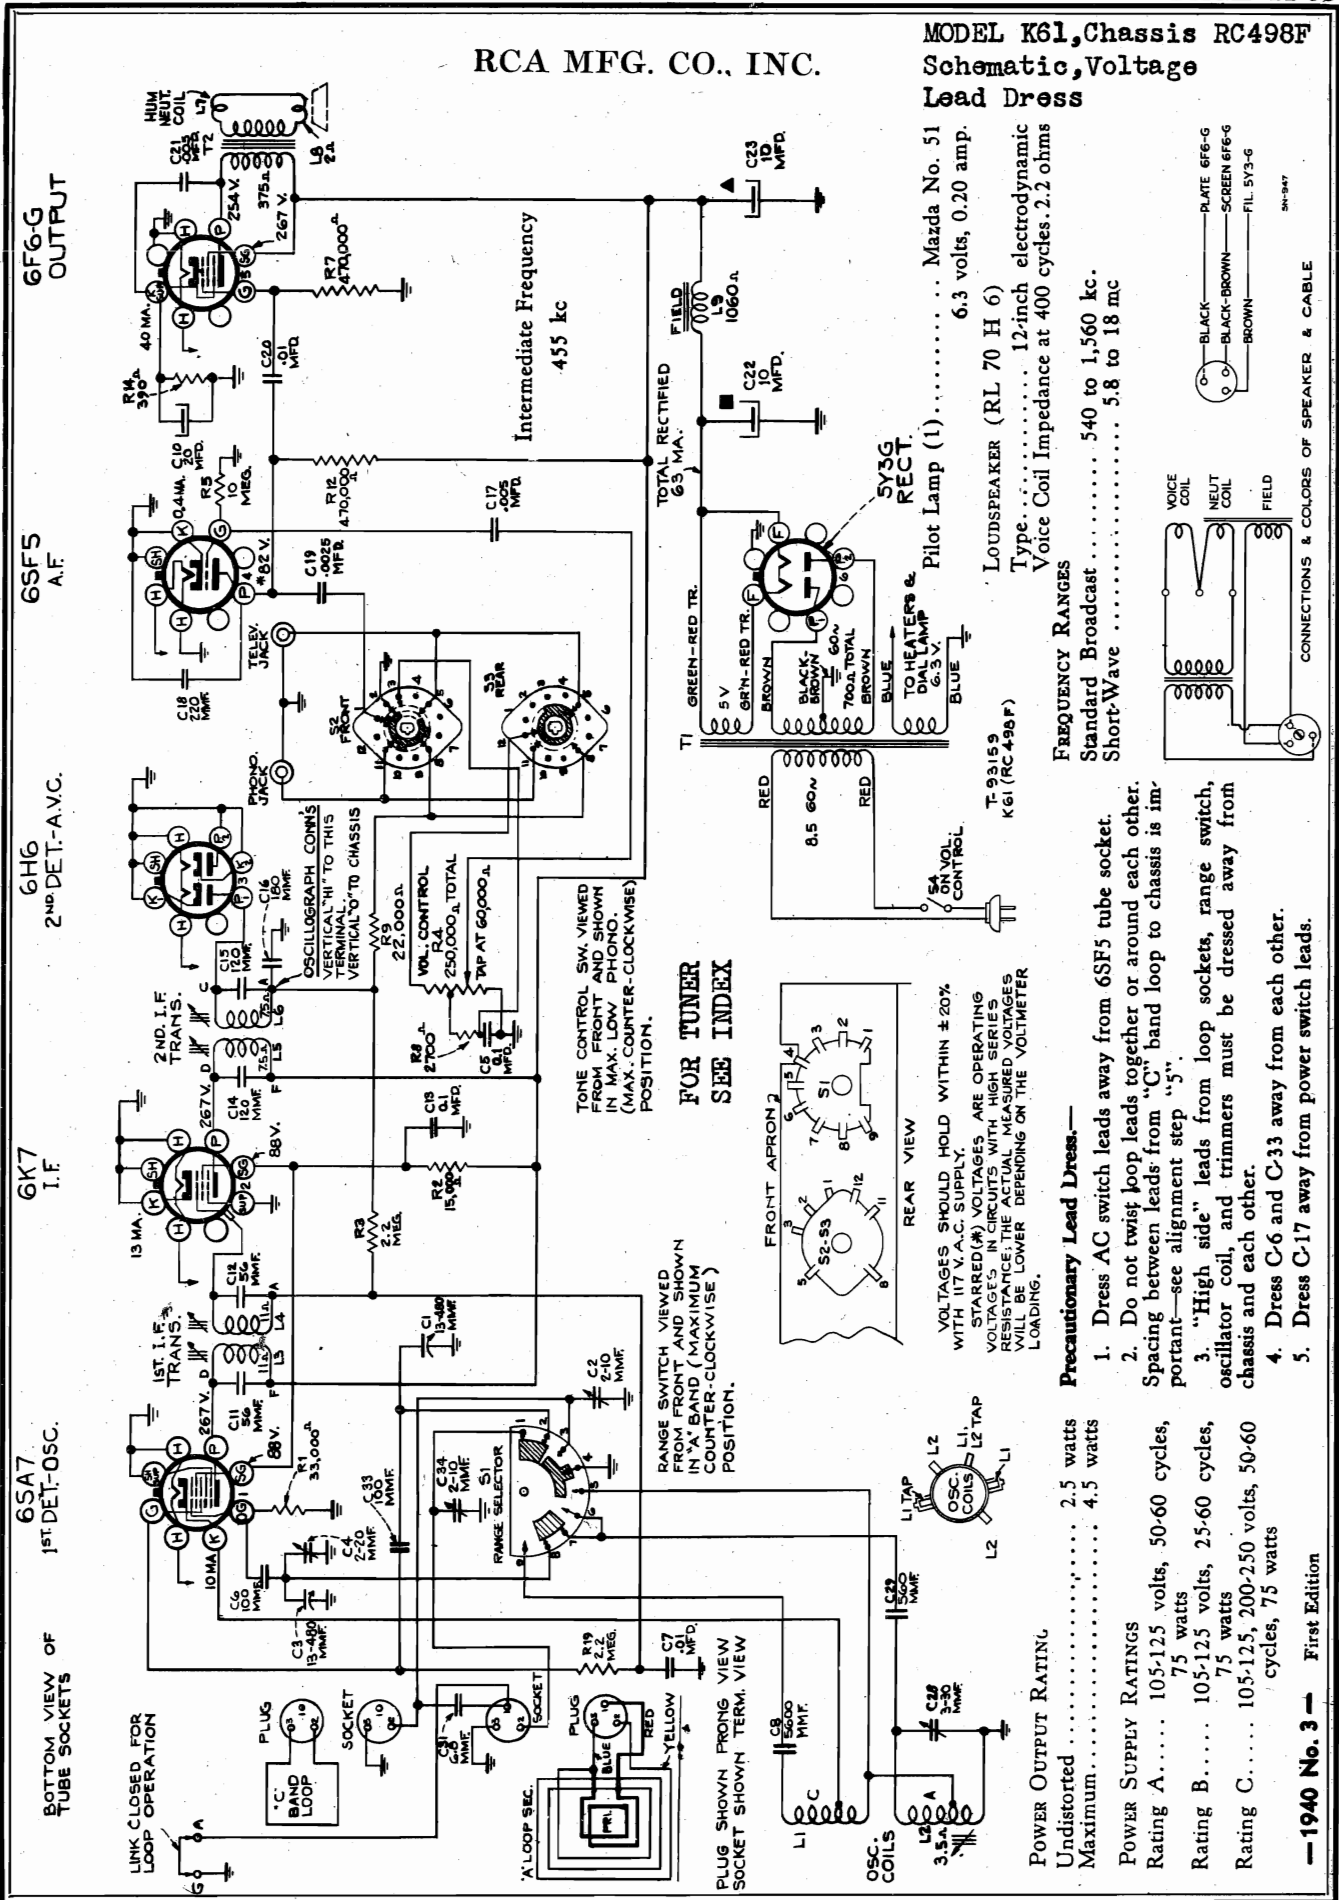

6FG-6 OUTPUT
6SF5 A.F.
6H6 2ND DET.-A.V.C.
6K7 I.F.
6SA7 1ST DET.-OSC.

Intermediate Frequency 455 kc

TOTAL RECTIFIED 65 MA.
FIELD 1060 A.

5Y3G RECT.
TO HEATERS & DIAL LAMP
6.3 V.

LOUDSPEAKER (RL 70 H 6)
Type..... 12-inch electrodynamic
Voice Coil Impedance at 400 cycles 2.2 ohms

FREQUENCY RANGES
Standard Broadcast..... 540 to 1,560 kc.
Short-Wave..... 5.8 to 18 mc

OSCILLOGRAPH CONN'S
VERTICAL "HI" TO THIS
VERTICAL "LO" TO CHASSIS

VOL. CONTROL
250,000 A. TOTAL
TAP AT 60,000 A.

VOICE COIL
NEUT. COIL
FIELD

CONNECTIONS & COLORS OF SPEAKER & CABLE

PLATE 6FG-6
SCREEN 6FG-6
FIL 5Y3-G

5V
GREEN-RED TR.
BROWN
BLACK-BROWN
700 A. TOTAL
BROWN
TO HEATERS & DIAL LAMP
BLUE

8.5 60W
RED
RED

T-93159
K61 (RC-498F)

ON VOL CONTROL

FRONT APRON 2
REAR VIEW

VOLTAGES SHOULD HOLD WITHIN ±20%
WITH 117 V.A.C. SUPPLY.
STARRED (*) VOLTAGES ARE OPERATING
VOLTAGES IN CIRCUITS WITH HIGH SERIES
RESISTANCE; THE ACTUAL MEASURED VOLTAGES
WILL BE LOWER DEPENDING ON THE VOLT-METER
LOADING.

FOR TUNER
SEE INDEX

OSCILLOGRAPH CONN'S
VERTICAL "HI" TO THIS
VERTICAL "LO" TO CHASSIS

VOL. CONTROL
250,000 A. TOTAL
TAP AT 60,000 A.

VOICE COIL
NEUT. COIL
FIELD

CONNECTIONS & COLORS OF SPEAKER & CABLE

PLATE 6FG-6
SCREEN 6FG-6
FIL 5Y3-G

5V
GREEN-RED TR.
BROWN
BLACK-BROWN
700 A. TOTAL
BROWN
TO HEATERS & DIAL LAMP
BLUE

8.5 60W
RED
RED

T-93159
K61 (RC-498F)

ON VOL CONTROL

FRONT APRON 2
REAR VIEW

VOLTAGES SHOULD HOLD WITHIN ±20%
WITH 117 V.A.C. SUPPLY.
STARRED (*) VOLTAGES ARE OPERATING
VOLTAGES IN CIRCUITS WITH HIGH SERIES
RESISTANCE; THE ACTUAL MEASURED VOLTAGES
WILL BE LOWER DEPENDING ON THE VOLT-METER
LOADING.

Precautionary Lead Dress.—

1. Dress AC switch leads away from 6SF5 tube socket.
2. Do not twist loop leads together or around each other. Spacing between leads: from "C" band loop to chassis is important—see alignment step.
3. "High side" leads from loop sockets, range switch, oscillator coil, and trimmers must be dressed away from chassis and each other.
4. Dress C-6 and C-33 away from each other.
5. Dress C-17 away from power switch leads.

POWER OUTPUT RATING

Undistorted 2.5 watts
Maximum 4.5 watts


POWER SUPPLY RATINGS

Rating A. 105-125 volts, 50-60 cycles, 75 watts
Rating B. 105-125 volts, 25-60 cycles, 75 watts
Rating C. 105-125, 200-250 volts, 50-60 cycles, 75 watts

MODEL K61, Chassis RC498F
Alignment, Trimmers
Socket, Dial Data

RCA MFG. CO., INC.

Alignment Procedure

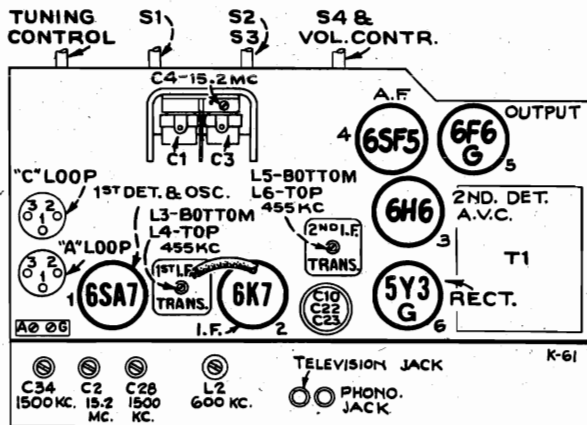

Tube and Trimmer Locations

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown on the chassis schematic.

Output Meter Alignment.—If this method is used, connect the output meter across the voice coil, and turn the receiver volume control to maximum.

Test Oscillator.—For all alignment operations, keep the oscillator output as low as possible to avoid a-v-c action.

Calibration Marks.—The tuning dial is fastened in the cabinet and can not be used for reference during alignment. Therefore calibration marks have been stamped in the plate on the front of the chassis as shown in the accompanying drawing. These marks are used for reference during alignment.

Dial Indicator Adjustment.—With the gang condenser in full mesh, the indicator should point to the extreme left (low frequency) mark on the dial scale.

Steps	Connect test-osc. output to—	Tune test-osc. to—	Turn radio dial to	Adjust the following for maximum peak output
1	I-F grid through 0.1 mfd capacitor and ground	455 kc	Quiet point between 1,720-1,500 kc	L5 and L6 (2nd I-F trans.)
2	1st det. grid through 0.1 mfd capacitor and ground			L3 and L4 (1st I-F trans.)
3		15.2 mc	15.2 mc	C-4 oscillator*
4		15.2 mc	Rock at 15.2 mc	C-2 antenna† while rocking
5		6.1 mc	6.1 mc	Spacing between leads from "C" band loop to chassis
6	Radiation loop consisting of two turns of wire 18 inches in diameter located 4 to 6 feet from receiver	15.2 mc	Rock at 15.2 mc	C-2 antenna† while rocking
7		1,500 kc	1,500 kc	C-34 antenna C-28 oscillator
8		600 kc	Rock at 600 kc	L-2 oscillator while rocking
9		1,500 kc	1,500 kc	C-34 antenna C-28 oscillator


When making adjustments 4 to 9 inclusive the chassis must be in the cabinet, both loops connected, and all leads in their normal positions. When mounting chassis in cabinet if calibration marks on dial plate do not line up with dial scale mounted on cabinet move pointer to agree with dial scale on cabinet.

* Oscillator should track on high frequency side of signal. If two peaks are obtained use high frequency (minimum capacity) peak.


† If two peaks can be obtained use low frequency (maximum capacity) peak.

Antennas

This receiver is equipped with two loop antennas ("C" band horizontal and fixed, and "A" band vertical and rotatable). During operation the "A" band loop should be rotated to the position giving maximum signal strength and freedom from noise. If desired, an outside antenna and ground can be connected to the terminals provided and when this is done the link between these terminals must be opened. However, for loop operation this link must be closed.

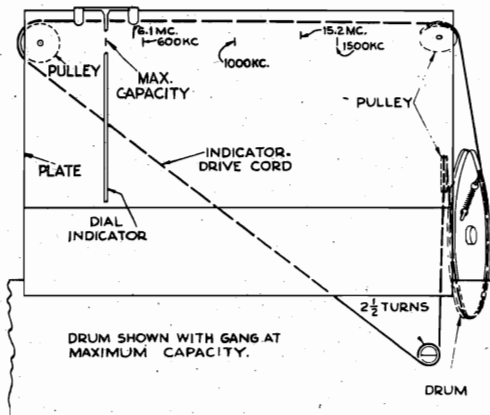

Dial Indicator and Drive Mechanism

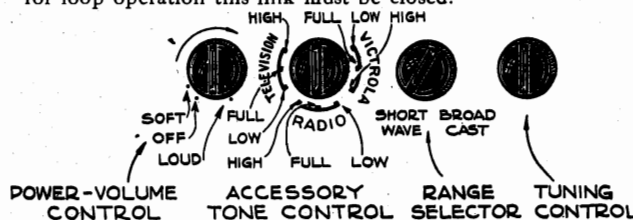

Controls

MODEL T63, Ch. RC472F
Alignment, Trimmers
Socket, Dial Data
Tuner

RCA MFG. CO., INC.

MODEL K61
Tuner Data

POWER OUTPUT RATING

Undistorted 2.5 watts
 Maximum 4.5 watts

LOUDSPEAKER (RL 79 A 4)

Type 6 inch Electrodynamic
 Voice Coil Impedance at 400 Cycles..... 3.4 ohms

POWER SUPPLY RATINGS

Rating A 105-125 volts, 50-60 cycles, 75 watts
 Rating B 105-125 volts, 25-60 cycles, 75 watts
 Rating C 105-125, 200-250 volts, 50-60 cycles, 75 watts

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, keep the output as low as possible to avoid a-v-c action. The low side of the test-oscillator should be connected to the receiver chassis.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the tuning drum. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the chassis, and bend the wire so that it points to the 0° mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, adjust the dial indicator along the drive cable to the 540 kc mark, gang condenser fully meshed. The indicator has a clip for attachment to the cable.

Precautionary Lead Dress:

- (1) Dress C8 (Oscillator coil to range switch) and its leads away from surrounding wires and chassis.
- (2) Dress R2 (Screen to B+) away from surrounding wires and parts.
- (3) Dress power switch leads away from 6SQ7 and 6F6G tube sockets.

Steps	Connect high side of test-osc. to—	Tune test osc. to—	Turn radio Dial to	Adjust the following for max. peak output
1	Grid of 6K7 through 0.01 mfd.	455 kc	"A" band Quiet point between 550-750 kc	L5 and L6 (2nd I-F trans.)
2	Grid of 6SA7 through 0.01 mfd.			L3 and L4 (1st I-F trans.)
3	Antenna terminal through 300 ohms	15 mc	"C" band 15 mc (132°)	C4 osc.* C27 ant.**
4	Antenna terminal through 200 mmfd.	600 kc	"A" band 600 kc (23.5°)	L2 osc. (Rock in)
5		1,500 kc	"A" band 1,500 kc (156.5°)	C9 osc. C26 ant.
6	Repeat Steps 4 and 5			

* Use minimum capacity peak if two can be obtained.

** Use maximum capacity peak if two can be obtained.

NOTE: Oscillator tracks above signal on all bands.


Adjustments for Push-Button Tuning

The push-buttons should be adjusted for six favorite stations after the receiver has been operating for a brief warm-up period. Each button may be set up for any standard broadcast station. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:


1. Pull off the push-buttons and loosen the push-button rods with a small screwdriver.
2. Set the receiver for "Radio" operation, range selector on "Broadcast", and accurately tune in the station for which the first button is to be set.

ANTENNAS


This receiver is equipped with a loop antenna for "A" and "C" bands. Both loops are fixed in position being mounted vertically from the rear of the chassis. For best performance the receiver should be turned to a position giving maximum signal strength and freedom from noise. The loop connections are shown in a separate diagram. If desired, an external antenna and ground can be connected to the terminals provided. In this case the link between these terminals must be opened; however, for loop operation this link must be closed.

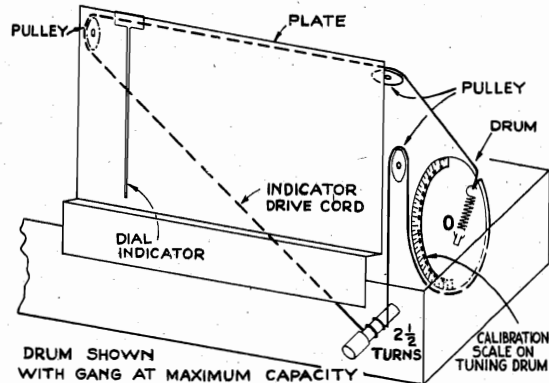

Dial Indicator and Drive Mechanism

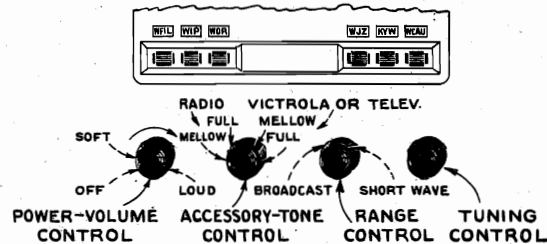

Dial and Controls



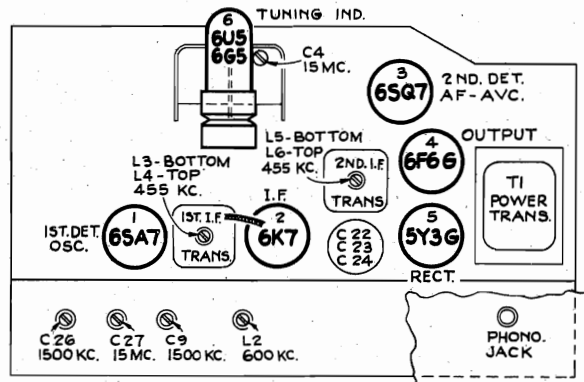


Tube and Trimmer Locations

3. Press in the first push-button rod (left) with the screwdriver as far as it will go without undue pressure, hold in, retune station with manual control if necessary for best reception, and then carefully tighten up the rod. Do not tighten more than 1/4 turn after the rod begins to grip or damage to the mechanism may result.
4. Replace the push-button on its shaft.
5. Proceed in a similar manner for the remainder of the push-buttons.
6. Insert the station marker tabs in the recesses above the push-buttons.

RCA MFG. CO., INC.

MODEL R60, Chassis RS91B
Victrola
Schematic, Voltage
Chassis Wiring, Assembly

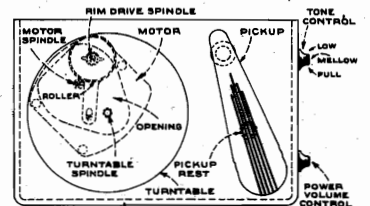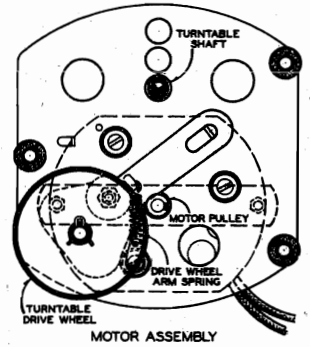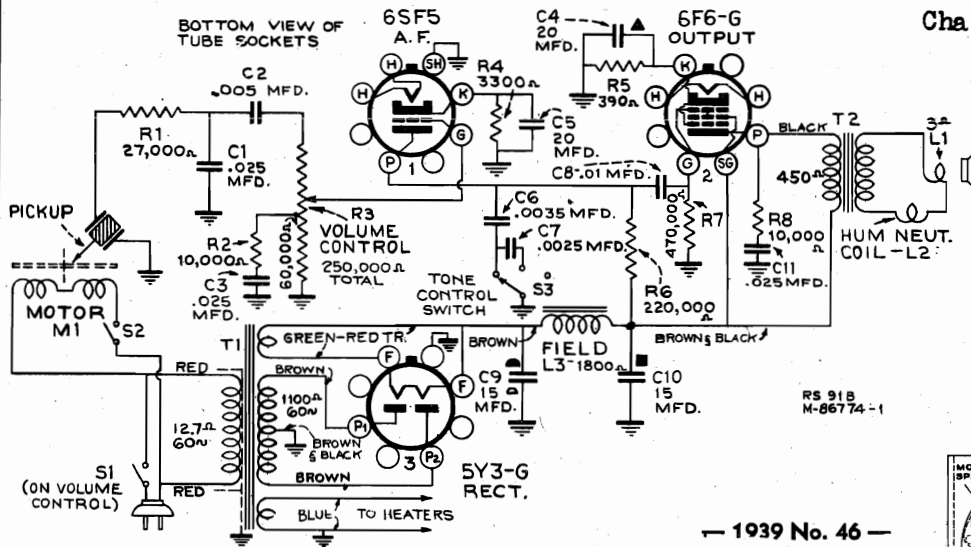

— 1939 No. 46 —
First Edition


The Victrola Model R-60 consists of a crystal pickup, a two-stage audio amplifier, a six-inch electrodynamic speaker, and a rim-drive motor turntable mechanism with automatic mercury switch for starting and stopping—all housed in a wood cabinet of modern design and appearance.

The phonograph motor is a self-starting, constant-speed induction type. It should be lubricated every six months by applying a few drops of light machine oil to the top and bottom motor spindle bearings, to the turntable spindle, and to the turntable drive wheel bearing.

CAUTION: Keep oil away from drive bushing on top of motor spindle and from rubber driving tire on turntable drive wheel.

The motor switch is automatic for both starting and stopping, and when properly adjusted, will turn the motor on as the pickup is moved from the pickup rest toward the turntable. The switch should be adjusted so that it will snap into the "off" position when the pickup needle is 1/4 inches from the center line of the spindle. The motor may be shut off at any time by placing the pickup on the pickup rest.

VICTROLA MODEL R-60
(phonograph only) RS-91B

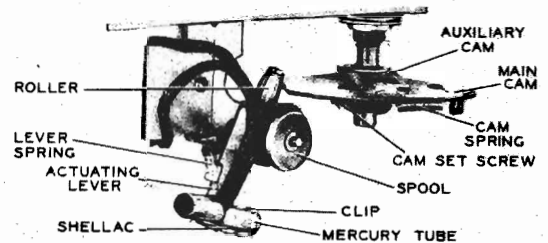

MERCURY SWITCH MECHANISM
(VIEWED FROM FRONT)
SHOWN WITH PICKUP IN REST POSITION

Specifications


POWER SUPPLY RATINGS
A-6..... 105-125 volts, 60 cycles, 90 watts
A-5..... 105-125 volts, 50 cycles, 90 watts

LOUDSPEAKER (RL-79-2)
Type..... 6-inch electrodynamic
V. C. Impedance at 400 cycles..... 3.4 ohms

TUBE COMPLEMENT
(1) RCA—6SF5..... A-F Amplifier
(2) RCA—6F6-G..... Output
(3) RCA—5Y3-G..... Rectifier

PICKUP
Type..... Crystal
Impedance..... 100,000 ohms at 400 cycles
Average Output.... 1 1/2 volts at 1,000 cycles with 250,000 ohms load

	Height	Width	Depth
Cabinet Dimensions (inches).....	8 1/8	14	9 3/4
Chassis Base Dimensions (inches) ..	2 1/4	7 3/8	4 1/4
Overall Chassis Height.....	6 1/2 inches		
Weight.....	20 lbs. (shipping)		

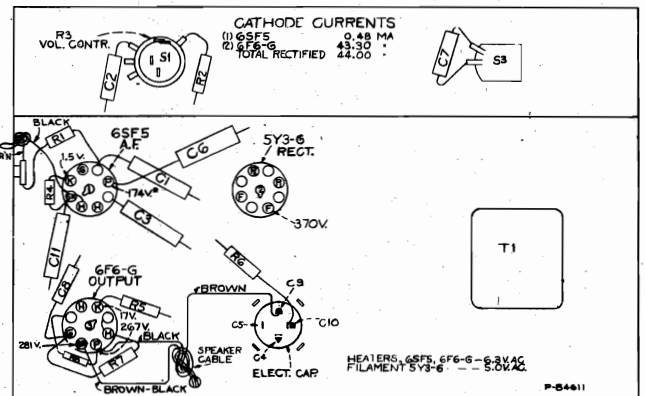

BOTTOM VIEW-REAR OF CHASSIS
PARTS LAYOUT AND SOCKET VOLTAGES


* NOTE: Values with star (*) are operating voltages in circuits with high series-resistance, and when measured will read lower depending on the voltmeter loading.

Measurements made to chassis unless otherwise indicated. Values should hold within approximately ±20% with 117-volt a-c supply.

MODELS T64, T65, Ch. RC416
MODEL T80, Chassis RC416A
Tuner, Parts List

RCA MFG. CO., INC.

MODEL T80,
Socket, Trimmers

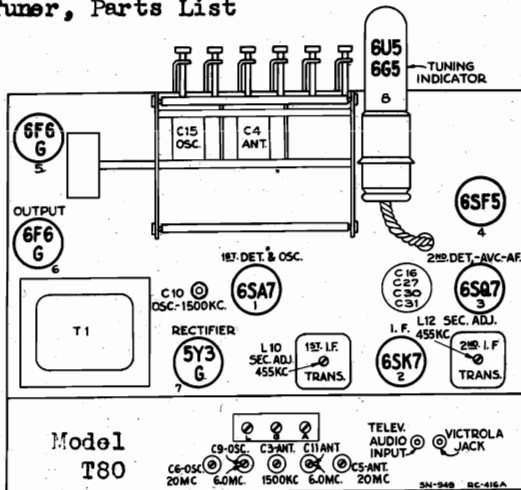

The push-buttons should be adjusted for six favorite stations after the receiver is operating, and has had a brief warm-up period.

Any standard broadcast stations may be chosen. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:

1. Loosen the push-button screws in back of the station-marker recesses.
2. Set Accessory-Tone Knob to "Radio" and turn the range selector to "A," so that the "A" band indicator lights up.
3. Press in the tuning knob and accurately tune in the first station.
4. With station accurately tuned in, press in the first push-button and tighten the screw.
5. Place the station marker tab in the recess.
6. Proceed in a similar manner to adjust the remainder of the push-buttons.


STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES (RC-416A)					
33620	Arm—Push arm and cam assembly on tuning unit—less lock screw	.35	34040	Ring—Retaining ring for tuning shaft	.02
33430	Board—Antenna and ground terminal board	.20	4669	Screw—No. 8-32 sq. hd. set screw for volume control gear and drum	.03
34268	Cap—Rubber cap for tuning tube	.10	33621	Screw—Push arm lock screw	.05
12714	Capacitor—Air trimmer, 2-12 mmfd. (C10)	.50	34039	Shaft—Range switch knob shaft	.15
33429	Capacitor—Trimmer capacitor bank, two 4-50 mmfd., three 2-20 mmfd., sections (C3, C5, C6, C9, C11)	.80	33624	Shaft—Tuning condenser drive shaft and washer	.15
32792	Capacitor—25 mmfd. (C2)	.40	34038	Shaft—Tuning knob shaft with rubber drive roller and pulley assembled	.60
12723	Capacitor—56 mmfd. (C12)	.35	33545	Shield—Dial lamp shield	.05
30904	Capacitor—100 mmfd. (C19, C20)	.25	31364	Socket—Dial lamp socket	.20
12404	Capacitor—120 mmfd. (C21, C22)	.30	33514	Socket—Phonograph and Television socket	.25
14712	Capacitor—180 mmfd. (C23)	.30	31319	Socket—Tube socket	.25
12694	Capacitor—220 mmfd. (C14)	.35	33544	Spring—Drive cord tension spring	.05
30433	Capacitor—470 mmfd. (C1)	.35	33623	Spring—Drive drum cord spring	.04
12537	Capacitor—560 mmfd. (C32)	.35	33622	Spring—Push arm return spring	.08
31433	Capacitor—560 mmfd. (C7)	.35	34042	Spring—Spring and pin for range switch shaft	.20
31493	Capacitor—3,300 mmfd. (C8)	.60	33515	Spring—Tension spring for spring and pin	.02
31405	Capacitor—6,000 mmfd. (C13)	.75	33512	Switch—Range switch (S1, S2)	1.05
5107	Capacitor—.0025 mfd. (C25)	.20	33511	Tone Control, Television and Phono switch (S3, S4)	1.10
4838	Capacitor—.005 mfd. (C24, C26, C29, C33, C35)	.25	33428	Transformer—First i-f transformer (L9, L10, C19, C20)	1.95
4937	Capacitor—.01 mfd. (C28)	.25	14308	Transformer—Second i-f transformer (L11, L12, C21, C22, C23, R5)	2.90
4870	Capacitor—.025 mfd. (C18)	.20	33619	Transformer—Power transformer 105-120 volts, 25-60 cycles (T1)	6.40
32787	Capacitor—.05 mfd. (C17, C34)	.20	33112	Transformer—Power transformer 105-120 volts, 50-60 cycles (T1)	4.30
33014	Capacitor—Electrolytic, three 10 mfd., and one 20 mfd. sections (C16, C27, C30, C31)	1.90	31446	Transformer—Power transformer—Universal—60 cycle (T1)	6.40
33508	Clip—Magic Eye mounting clip and bracket	.25	33512	Volume control and power switch (R6, S5)	2.00
32821	Coil—Antenna coil (L1, L2, L3, L4)	1.35	33726	Washer—"C" washer for spring and pin	.02
32824	Coil—Oscillator coil (L5, L6, L7)	1.00	34037	Washer—"C" washer for tuning shaft	.02
32635	Cord—Condenser drive cord	.24	SPEAKER ASSEMBLIES (RL79-5)		
32634	Cord—Drive cord	.10	32907	Cap—Cone center dust cap	.02
32713	Core—Adjustable core and stud for oscillator coil	.35	32906	Coil—Hum neutralizing coil	.25
33627	Drum—Condenser drive drum	.25	33547	Coil—Speaker field coil	1.00
34267	Drum—Drive cord drum	.65	32934	Cone—Speaker cone and voice coil	1.65
33186	Gear—Volume control knob shaft and gear	.40	5039	Plug—4-prong male speaker connection plug	.30
33185	Gear—Volume control gear and hub, with set screws	.50	33509	Transformer—Speaker output transformer	1.35
11891	Lamp—Dial lamp	.17	MISCELLANEOUS ASSEMBLIES		
33431	Link—Antenna and ground terminal board link	.02	33474	Button—Push button	.10
34041	Link—Link complete with arm and cam for operating range switch	.50	33552	Dial—Glass dial scale	1.80
33628	Plate—Front guide plate for push arms	.25	33549	Escutcheon—Dial and push button escutcheon—less buttons and screen	1.95
13871	Plug—Eye cable plug	.45	33551	Frame—Dial frame, holder, and pointer assembled—less dial	1.70
5040	Plug—Speaker cable plug	.30	33471	Knob—Volume control knob	.25
33509	Pulley—Drive cord pulley and bracket (1 pulley)	.20	33553	Knob—Range selector knob	.30
33510	Pulley—Drive cord pulleys and bracket (2 pulleys)	.45	33470	Knob—Tone control knob	.20
33626	Pulley—Drive pulley	.25	33505	Knob—Tuning control knob	.30
14439	Resistor—100 ohms, 1/2 watt (R12)	.20	33842	Marker—Station selector call letter markers	.25
30735	Resistor—560 ohms, 1/2 watt (R8)	.22	33550	Screen—"Push Button" "A" Band" marker screen	.20
12265	Resistor—6,800 ohms, 1/2 watt (R17)	.20	33470	Spring—Retaining spring for knob, Stock No. 33470	.03
14559	Resistor—10,000 ohms, 1/2 watt (R11)	.20	14270	Spring—Retaining spring for knob, Stock No. 33553 and Stock No. 33471	.05
33489	Resistor—15,000 ohms, 2.5 watts (R3)	.55	4982	Spring—Retaining spring for knob, Stock No. 33505	.05
14284	Resistor—22,000 ohms, 1/10 watt (R5)	.15	ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.		
12454	Resistor—33,000 ohms, 1/2 watt (R2)	.20	4839	Capacitor—0.1 mfd. (C16)	.30
12285	Resistor—470,000 ohms, 1/2 watt (R9, R10, R14, R18)	.20	32240	Capacitor—Electrolytic, two 10 mfd., and one 20 mfd. sections (C27, C30, C31)	1.45
12013	Resistor—1 meg., 1/10 watt (R13)	.15	31388	Resistor—390 ohms, 1 watt (R8)	.22
13730	Resistor—1 meg., 1/2 watt (R1)	.20	5119	Plug—Speaker cable plug	.25
12679	Resistor—2.2 meg., 1/2 watt (R4)	.20	SPEAKER ASSEMBLIES (RL79-4)		
13601	Resistor—10 meg., 1/2 watt (R7, R15)	.20	5118	Plug—3-contact male plug for speaker	.25
14343	Retainer—Retaining ring for volume control knob shaft	.03	32905	Transformer—Output transformer (T2)	1.35

* Model T-80 only

NOTE: Above Parts List applies to both Models T-64 and T-80, except for the items noted. Items on the right apply only to Model T-64.

RCA MFG. CO., INC.



MODELS T64, T65, Ch. RC416
Schematic, Voltage
Chassis Wiring, Changes

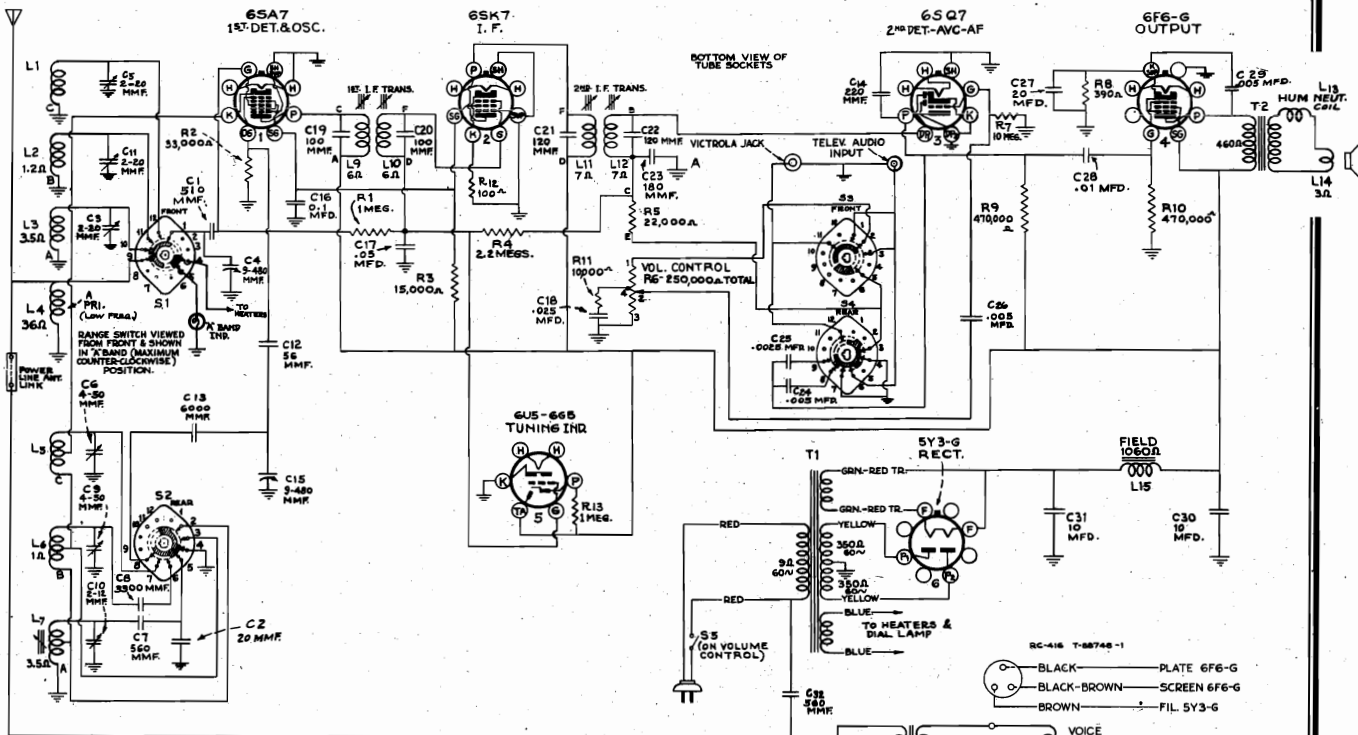

Note: On some receivers the following circuit changes are in effect:

1. C1 is 470 mmfd.
2. There are three types of 2nd. I-F transformers in use.
 - a. The first type (Stock No. 14308) has C23 and R5 omitted in the case, and is connected exactly as shown below.
 - b. In the second type R5 is omitted and the lead from S4 connects to C instead of E. E is not used.
 - c. In the third type R5 is omitted and C23 is connected externally from C to ground. E is not used. The lead from the diode plate connects to A instead of B. When replacing this transformer with

Stock No. 14308, remove the external C23 and connect the replacement transformer as shown in the schematic diagram.
Important: Stock No. 14308 is used as replacement for all three of the above types, and should be connected as shown in the schematic diagram.

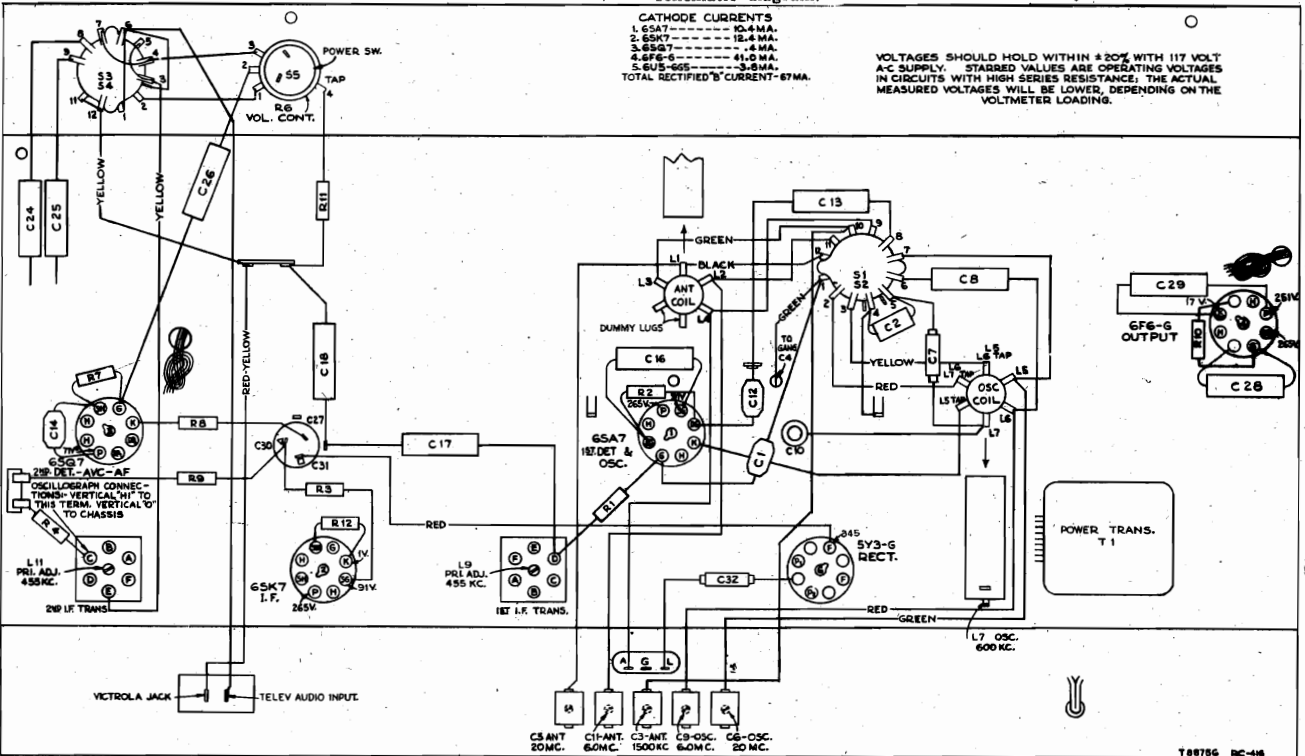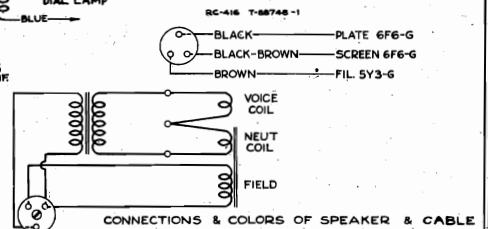

First Edition

BOTTOM VIEW-REAR OF CHASSIS
R-F. WIRING & SOCKET VOLTAGES

— 1939 No. 25 —

MODEL T64, T65, Ch. RC416
Alignment, Trimmers
Socket, Drive Cable

RCA MFG. CO., INC.

POWER SUPPLY RATINGS

- Rating A..... 105-125 volts, 50-60 cycles, 75 watts
- Rating B..... 105-125 volts, 25-60 cycles, 75 watts
- Rating C..... 100-130, 140-160, 195-250 volts, 40-60 cycles, 75 watts

PILOT LAMPS (2) .. Mazda No. 44, 6.3 volts, 0.25 amp.

POWER OUTPUT RATING

- Undistorted..... 2.5 watts
- Maximum..... 4.5 watts

LOUDSPEAKER (RL-79-4)

Type..... 6-inch Electrodynamic
 V.C. Impedance..... 3.4 ohms at 400 cycles

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord-Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the tuning drum. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 240° mark on the drum scale must be vertical and directly above the center of the shaft of the tuning drum when the plates are fully meshed. The drum is held to the shaft by means of two set-screws, which must be tightened securely when the drum is in the correct position.

On the inner side of the tuning drum are two projections which serve as stops to prevent extreme rotation of the gang condenser. The tuning drum should be set so that the stop limiting clockwise movement of the drum takes effect just as the gang condenser plates are becoming fully meshed, thus preventing stress on the gang due to extreme rotation.






Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the chassis, and bend the wire so that it points to the 240° mark on the calibration scale when the plates are fully meshed.

Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	6SK7 grid in series with .01 mfd.	455 kc	"A" Band Quiet Point between 550-750 kc	L11 and L12 (2nd I-F Trans.)
2	6SA7 grid in series with .01 mfd.			L9 and L10 (1st I-F Trans.)
3	Ant. terminal in series with 300 ohms	20 mc	20 mc (40°) "C" Band	C6 (osc.)* C5 (ant.)
4		6 mc	6 mc (52.5°) "B" Band	C9 (osc.)** C11 (ant.)
5	Ant. terminal in series with 200 mmfd.	1,500 kc	1,500 kc (41.75°) "A" Band	C10 (osc.) C3 (ant.)
6		600 kc	600 kc (200.25°) "A" Band	L7 (osc.) Rock Gang
7	Repeat step 5.			

* Use minimum capacity peak if two can be obtained. Check to determine that C6 has been adjusted to correct peak by tuning receiver to approximately 19.09 mc where a weaker signal should be received.

** Use minimum capacity peak if two can be obtained. Check to determine that C9 has been adjusted to correct peak by tuning receiver to approximately 5.09 mc where a weaker signal should be received.



Note: Oscillator tracks above signal on all bands.

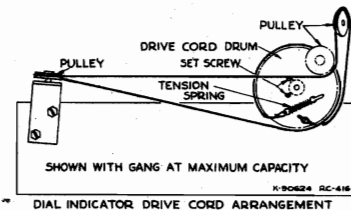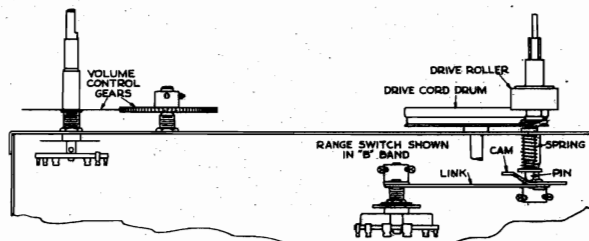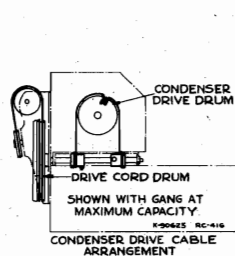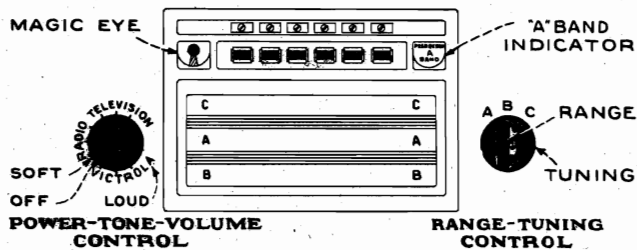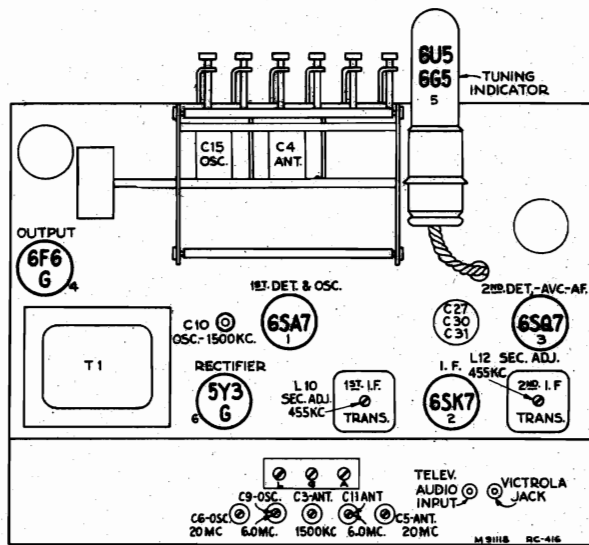

Note: Adjustment of the link and cam should be such that in "A" band position when push-buttons are operated, the drive cord drum will turn freely without rubbing or binding against the drive roller.


RCA MFG. CO., INC.

MODEL K80, Ch. RC415A
Schematic, Voltage
Chassis Wiring, Changes

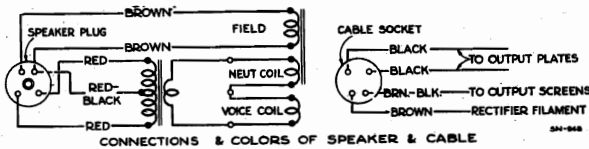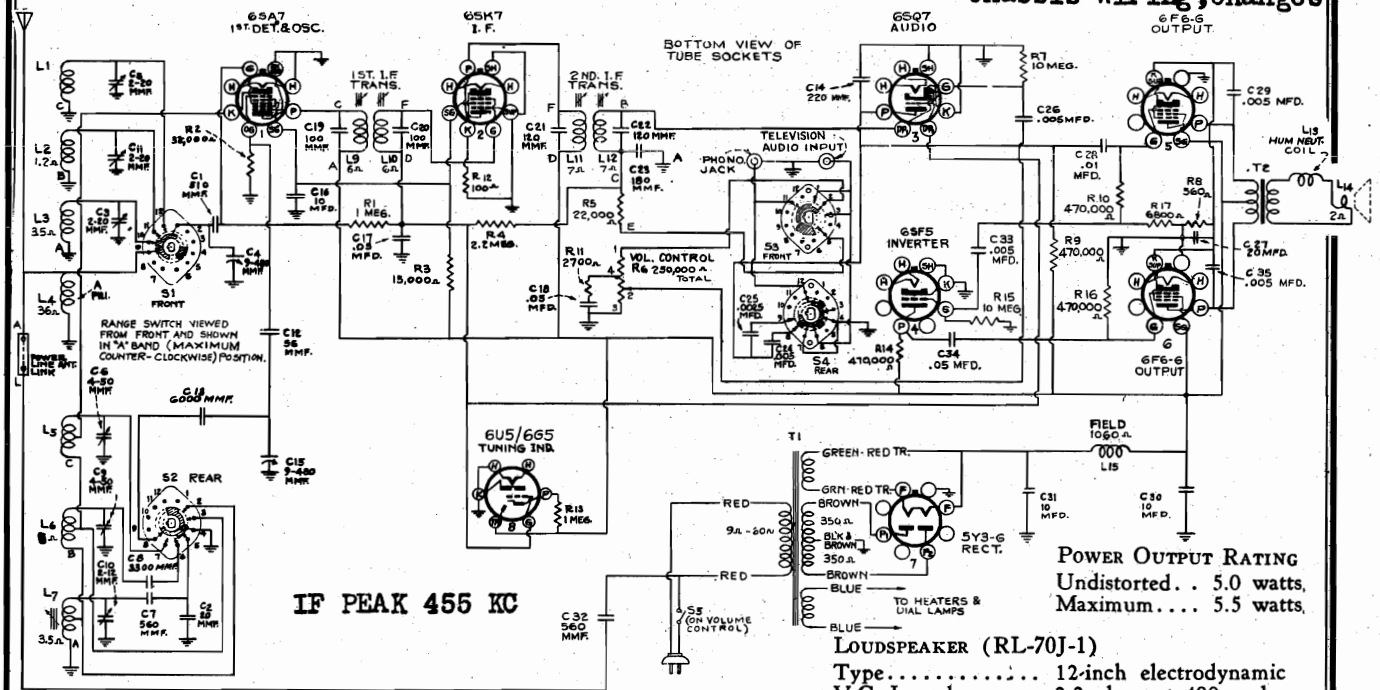


Note: On some receivers the following circuit modifications are in effect:

1. R11 is 5,600 ohms, and C18 is 0.1 mfd.
 2. C1 is 470 mmfd.; R15 is 2,700 ohms and is connected from cathode of 6SF5 Inverter to ground; R17 is 15,000 ohms; and C33 is omitted.
 3. There are three types of 2nd I-F transformers in use.
 - a. The first type (Stock No. 14308) has C23 and R5 mounted inside the case, and is connected exactly as shown above.
 - b. In the second type R5 is omitted and the lead from S4 connects to C instead of E. E is not used.
 - c. In the third type R5 is omitted and C23 is connected externally from C to ground. E is not used. The lead from the diode plate connects to A instead of B. When replacing this transformer with Stock No. 14308, remove the external C23 and connect the replacement transformer as shown in the above diagram.
- Important: Stock No. 14308 is used as replacement for all three of the above types, and should be connected as shown in the diagram.

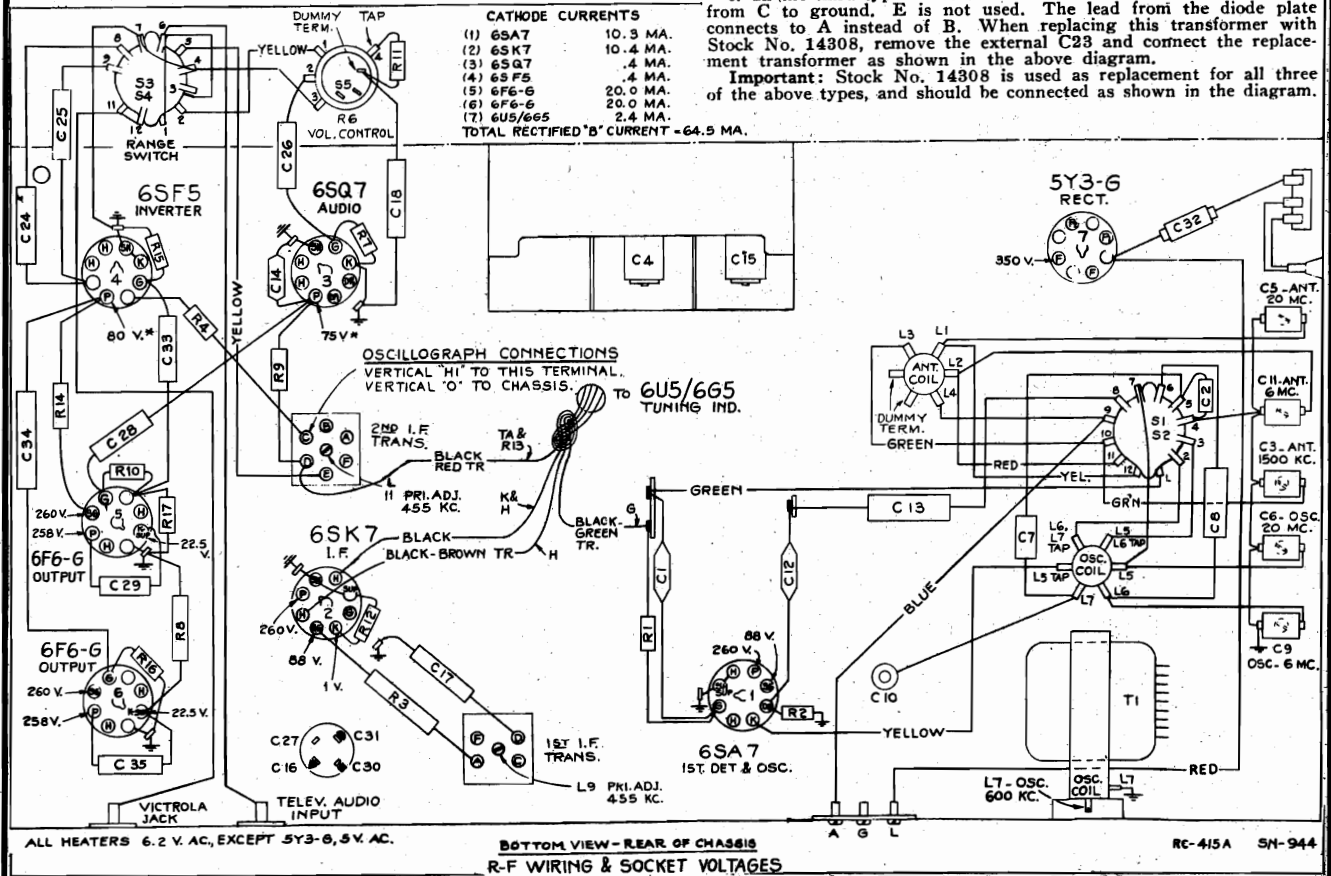

**MODELS K80, Ch. RC415C, RC415D
K81, K82, Ch. RC415C**
Schematic, Socket, Trimmers

RCA MFG. CO., INC.

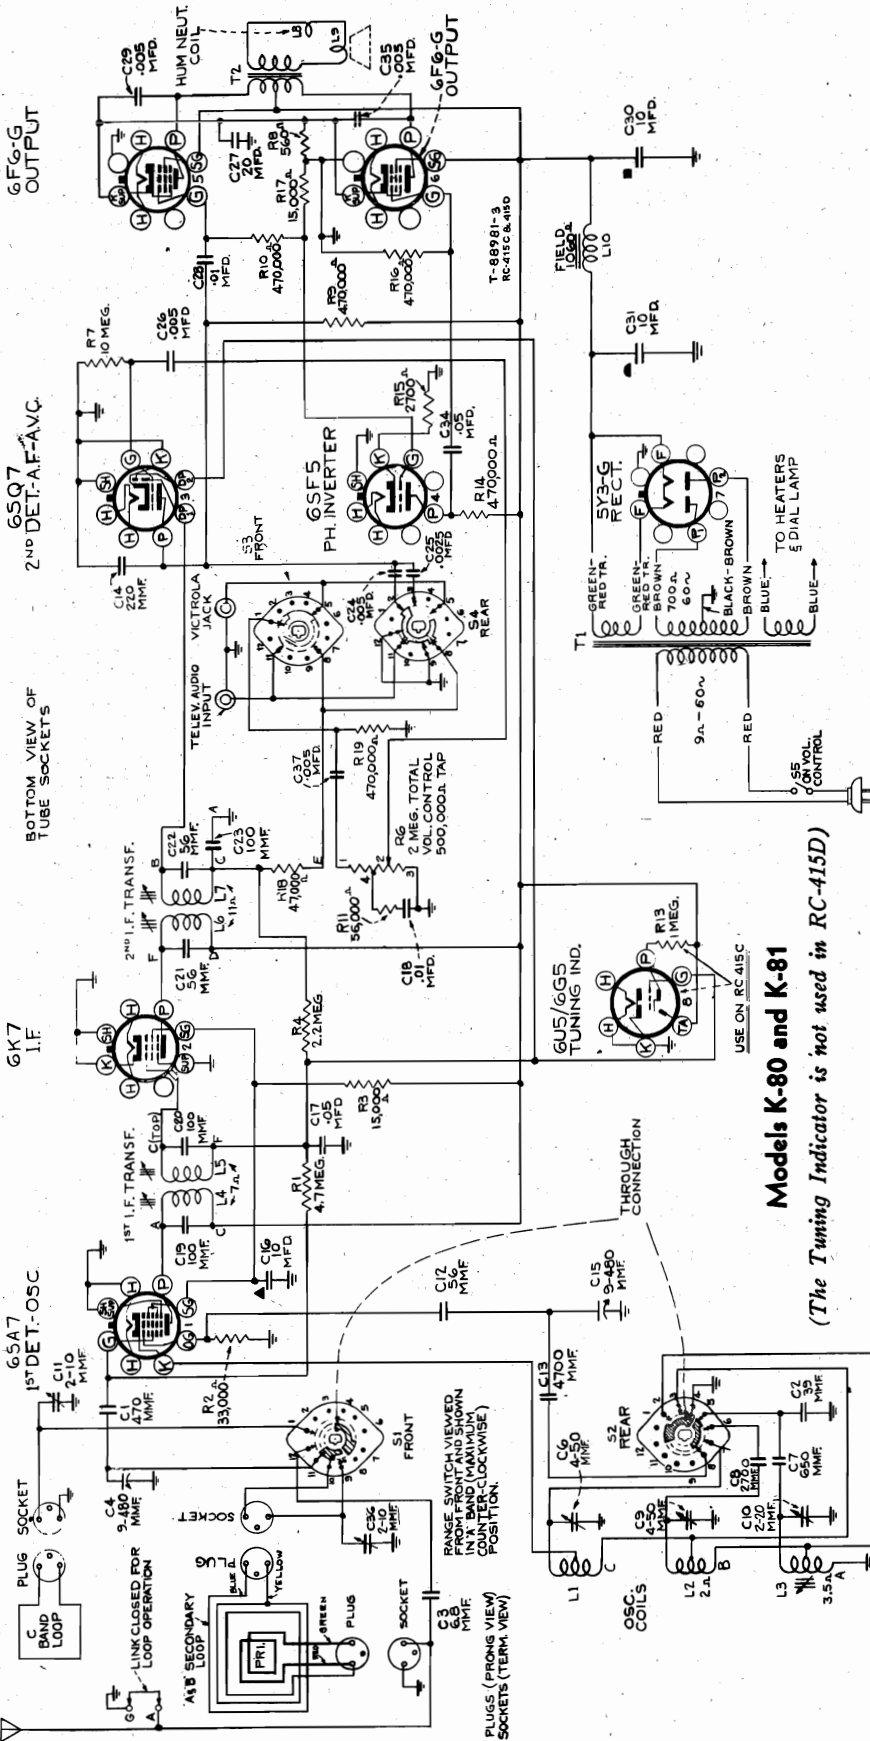


Models K-80 and K-81

(The Tuning Indicator is not used in RC-415D)

**FOR OTHER DATA
SEE INDEX**


PILOT LAMPS (2).....	Mazda No. 44, 6.3 volts, 0.25 amp.
POWER OUTPUT RATING	
Undistorted.....	5.0 watts
Maximum.....	5.5 watts
LOUDSPEAKER (RL-707-1)	
Type.....	12-inch electrodynamic
V.C. Impedance.....	2.2 ohms at 400 cycles
POWER CONSUMPTION	
Watts.....	85

The Dial Drive used in this chassis is the same as is used in Chassis RC415

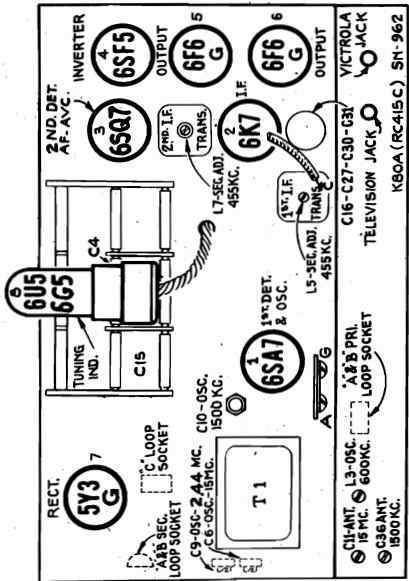

RCA MFG. CO., INC.

MODEL T80, Ch. RC416A
Schematic, Voltage
Chassis Wiring

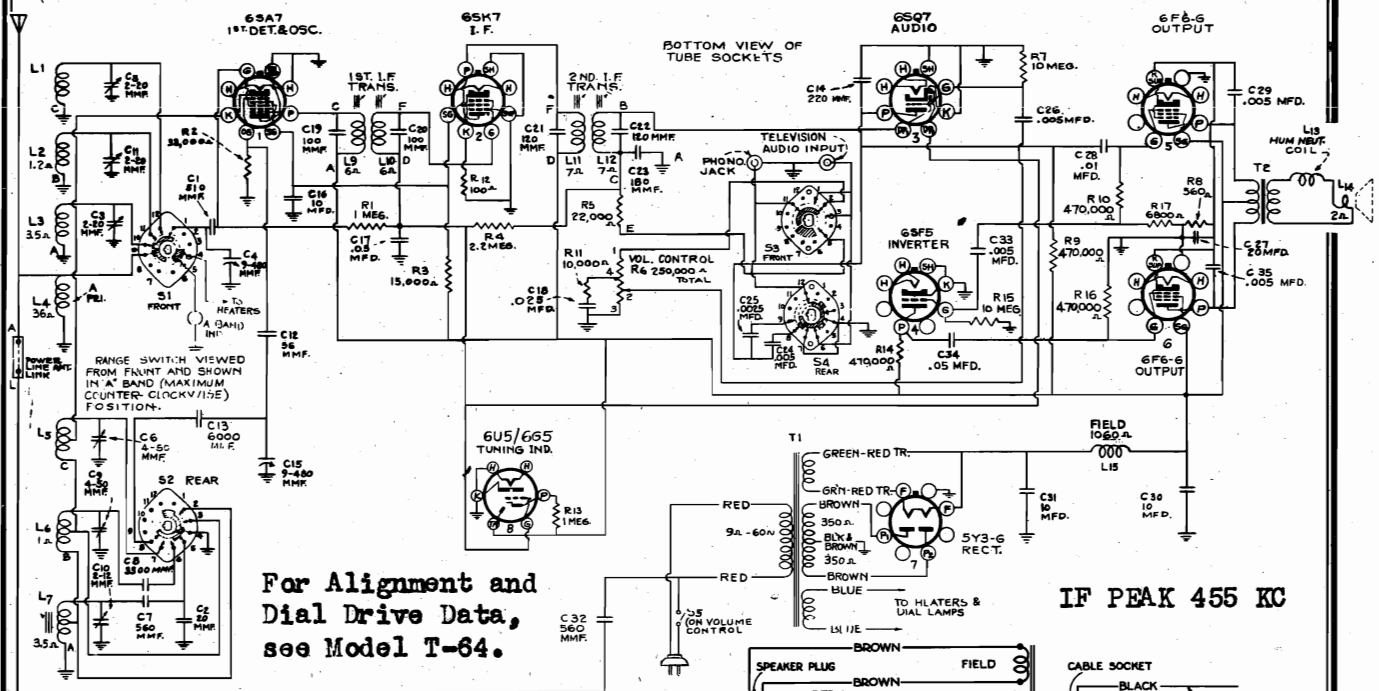

For Alignment and
Dial Drive Data,
see Model T-64.

Note: On some receivers the following circuit modifications are in effect:

1. R11 is 5,600 ohms, and C18 is 0.1 mfd.
2. C1 is 470 mfd.; R15 is 2,700 ohms and is connected from cathode of 6SF5 Inverter to ground; R17 is 15,000 ohms; and C33 is omitted.
3. There are three types of 2nd I-F transformers in use.
 - a. The first type (Stock No. 14308) has C23 and R5 mounted inside the case, and is connected exactly as shown below.
 - b. In the second type R5 is omitted and the lead from S4 connects to C instead of E. E is not used.

c. In the third type R5 is omitted and C23 is connected externally from C to ground. E is not used. The lead from the diode plate connects to A instead of B. When replacing this transformer with Stock No. 14308, remove the external C23 and connect the replacement transformer as shown in the schematic diagram.

Important: Stock No. 14308 is used as replacement for all three of the above types, and should be connected as shown in the schematic diagram.

POWER OUTPUT RATING


Undistorted 5.0 watts
Maximum 5.5 watts

LOUDSPEAKER (RL-79-5)

Type 6-inch electrodynamic
V.C. Impedance:.... 3.4 ohms at 400 cycles

CATHODE CURRENTS.


1. 6SA7	-----	10.3 MA.
2. 6SK7	-----	10.4 MA.
3. 6SK7	-----	0.4 MA.
4. 6SF5	-----	0.79 MA.
5. 6F6G	-----	20.7 MA.
6. 6F6G	-----	20.7 MA.
7. 5U5-5G5	-----	2.4 MA.
TOTAL RECTIFIED DC CURRENT 64.5 MA.		

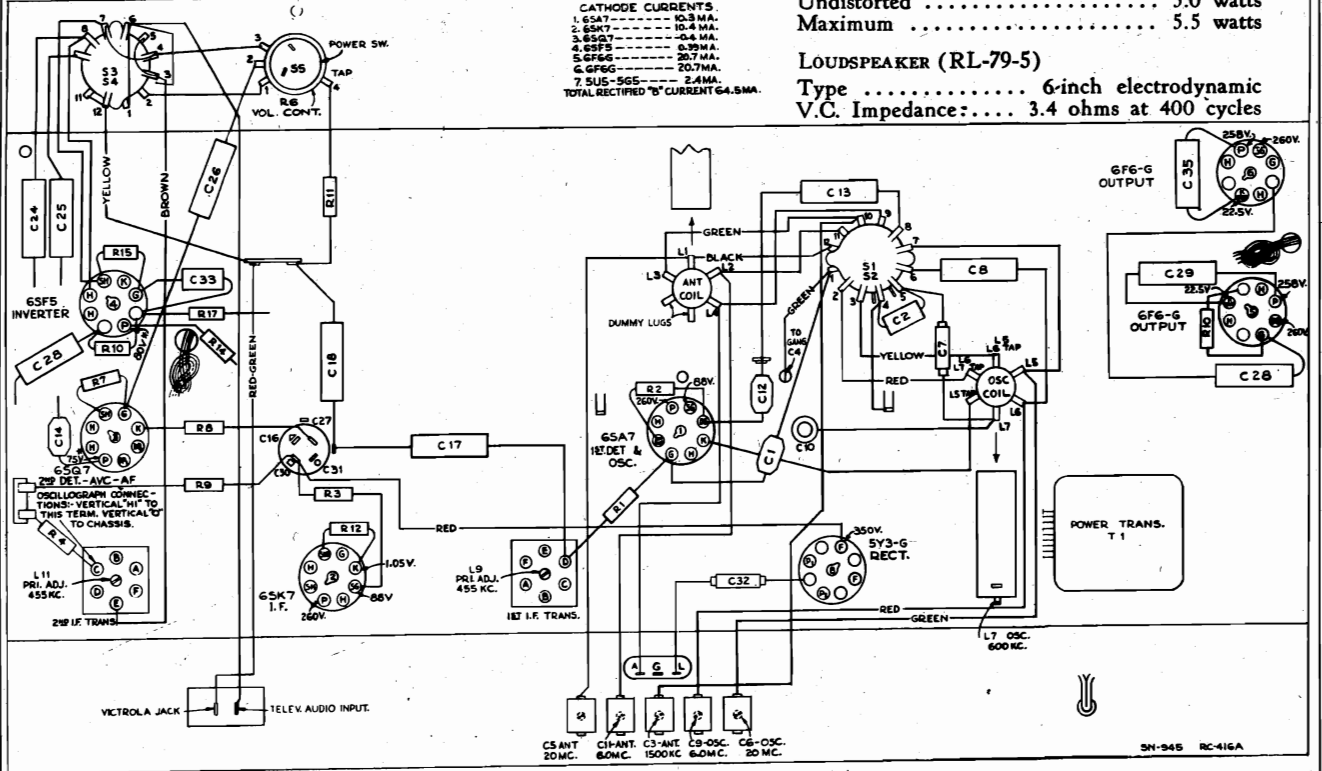

MODEL 95XLW

Chassis RC-345F
Schematic, Voltage, Socket
Trimmers, Chassis Wiring
Lead Dress

RCA MFG. CO., INC.

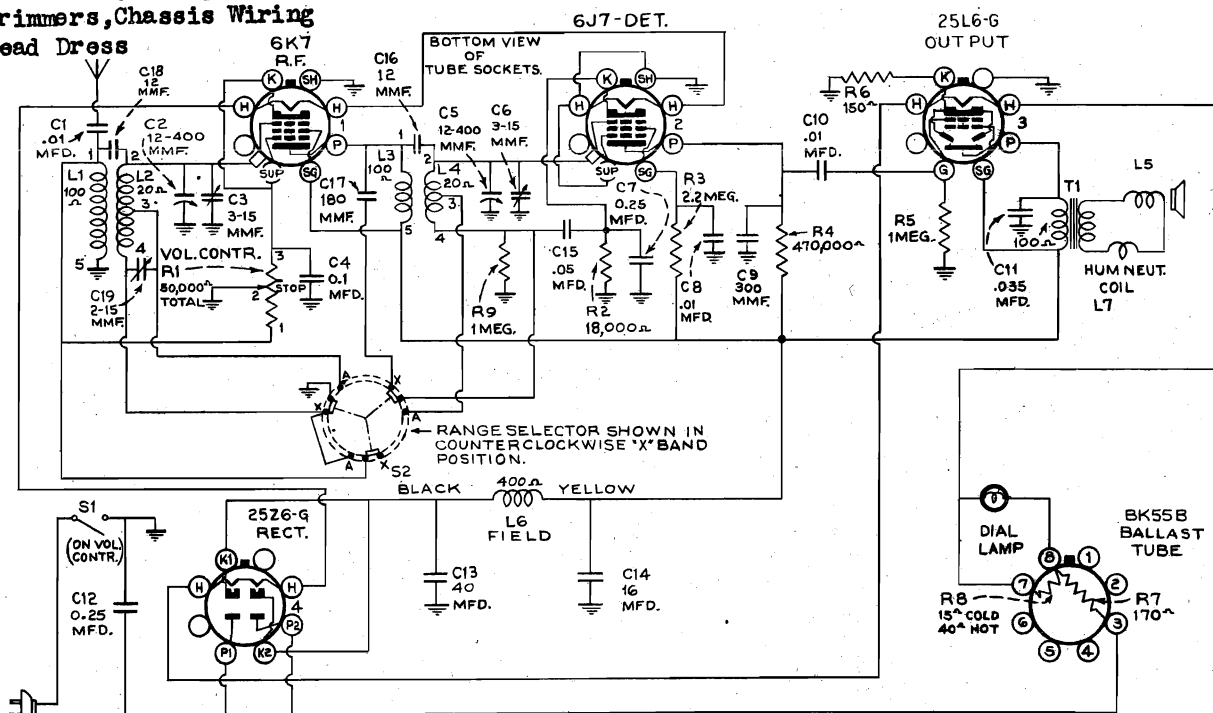

POWER SUPPLY RATINGS

A-C Rating..... 105-125 volts, 25-60 cycles, 70 watts
 D-C Rating..... 105-125 volts, 50 watts

FREQUENCY RANGES

Long Wave (X)..... 150-360 kc
 Standard Broadcast (A)..... 590-1,500 kc

LOUDSPEAKER

Type..... 5-inch electrodynamic
 Voice-Coil Impedance... 3 ohms at 400 cycles

POWER OUTPUT

(125 volt, 60 cycle supply)
 Undistorted..... 1.0 watt
 Maximum..... 1.5 watts

Alignment Procedure


CAUTION: The chassis is connected to one side of the power line. Avoid contact of chassis or parts to external ground when servicing.

Turn pointer, while holding tuning knob, so that the pointer is horizontal and pointing to low frequency end when the gang condenser is at maximum.


Reel up the antenna wire, and connect the high side of test-oscillator through an 80 mmfd. capacitor to the antenna terminal on the antenna transformer. Connect low side of oscillator to receiver chassis through a 0.1 capacitor. Keep antenna roll and lead clear of chassis during alignment.

To align "A" band, turn range switch to "A" band (clockwise) position, turn receiver dial to 1,500 kc, tune test-oscillator to 1,500 kc, connect an output meter across the voice coil, and turn volume control to maximum. Adjust the two trimmers (C3 and C6) on side of gang condenser for maximum output, using lowest possible output from test-oscillator.

To align "X" band, turn range switch to "X" band (counter-clockwise) position, tune test-oscillator to 360 kc, and adjust C19 for maximum output. The gang should be rocked during "X" band alignment.

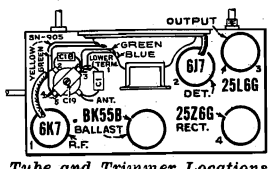

Tube and Trimmer Locations

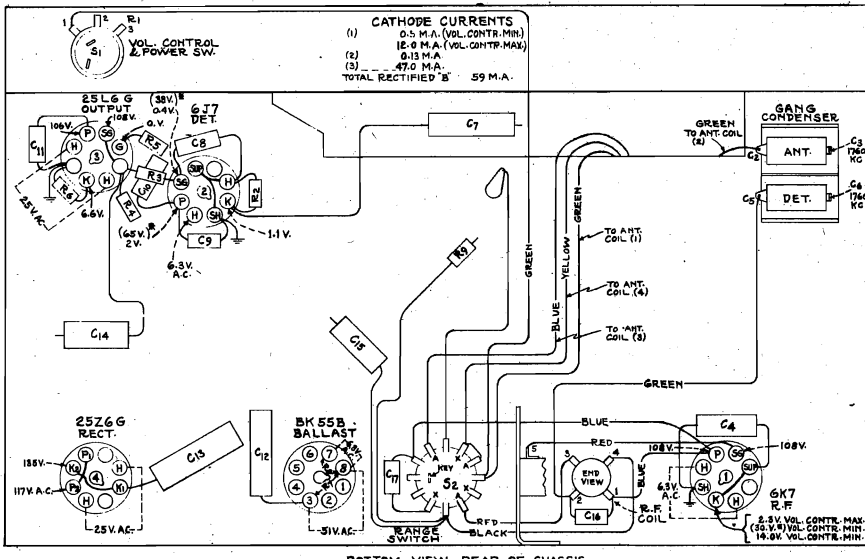

BOTTOM VIEW-REAR OF CHASSIS

* Note: Values with (*) are operating voltages.
 Values not starred are actual measured voltages.

Measurements made to chassis unless otherwise indicated.

Measurements made with set tuned to quiet point, volume control at minimum, using 1,000-ohm-per-volt meter, having ranges of 10, 50, and 250 volts. (Use nearest range above the specified measured voltage.)

Values should hold within approximately ± 20% for 117-volt 60-cycle a-c supply. On d-c, voltages are approximately 10% lower, except heaters, which remain the same.


Precautionary Lead Dress

1. Dress power cord away from yellow lead to volume control.
2. Dress all leads away from antenna coil.
3. Green lead from gang to detector coil must be dressed under switch shaft and over detector coil (looking from bottom of chassis).
4. Yellow lead from volume control to 6K7 cathode must be dressed down against rear apron of chassis.
5. Green lead from switch to volume control must be dressed away from all other wires.
6. All leads to detector coil, except green lead in No. 3 (above) must be dressed down against the chassis base.

First Edition, 39


RCA MFG. CO., INC.

MODEL 95T5LW
Chassis RC-348F
Schematic, Voltage
Chassis Wiring, Lead Dress

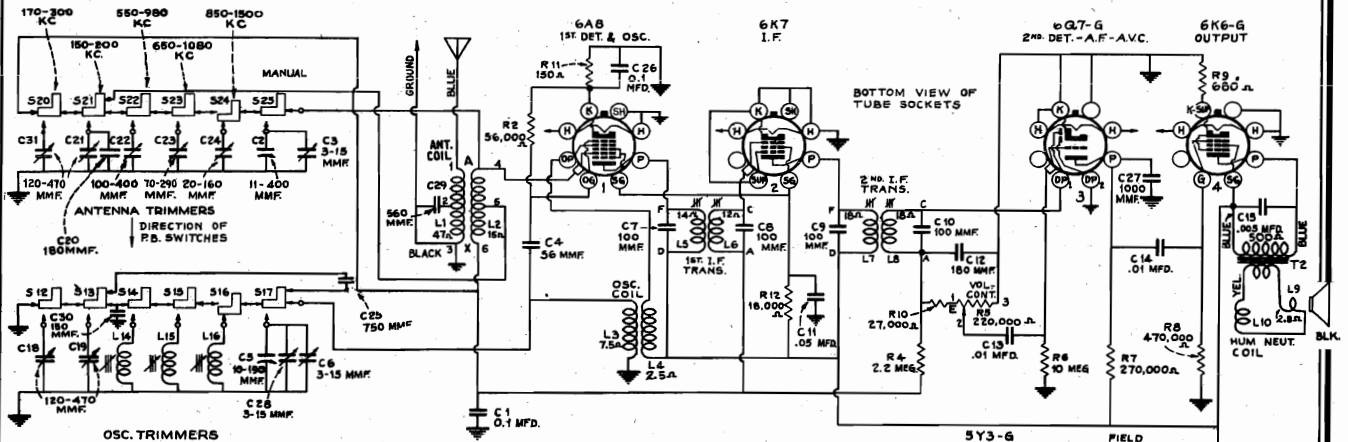

Precautionary Lead Dress.—

1. Blue, green, and black leads to the volume control should be dressed away from the 6K6-G socket and from leads to this socket.
2. Leads to the power transformer should be dressed toward the end of the chassis and away from wires to the push button assembly.
3. Power cord lead should be dressed toward the end of the chassis.


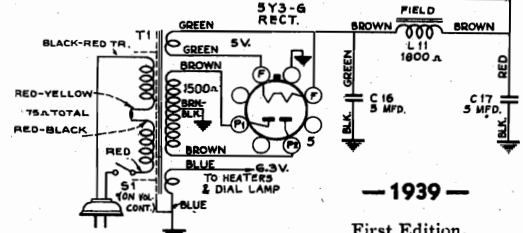


— 1939 —

First Edition.

CATHODE CURRENTS

- (1) 6AB-G 9. M.A.
 - (2) 6K7 12.1 M.A.
 - (3) 6Q7-G 0.48 M.A.
 - (4) 6K6-G 22. M.A.
- TOTAL RECTIFIED 'B' CURRENT 44 M.A.

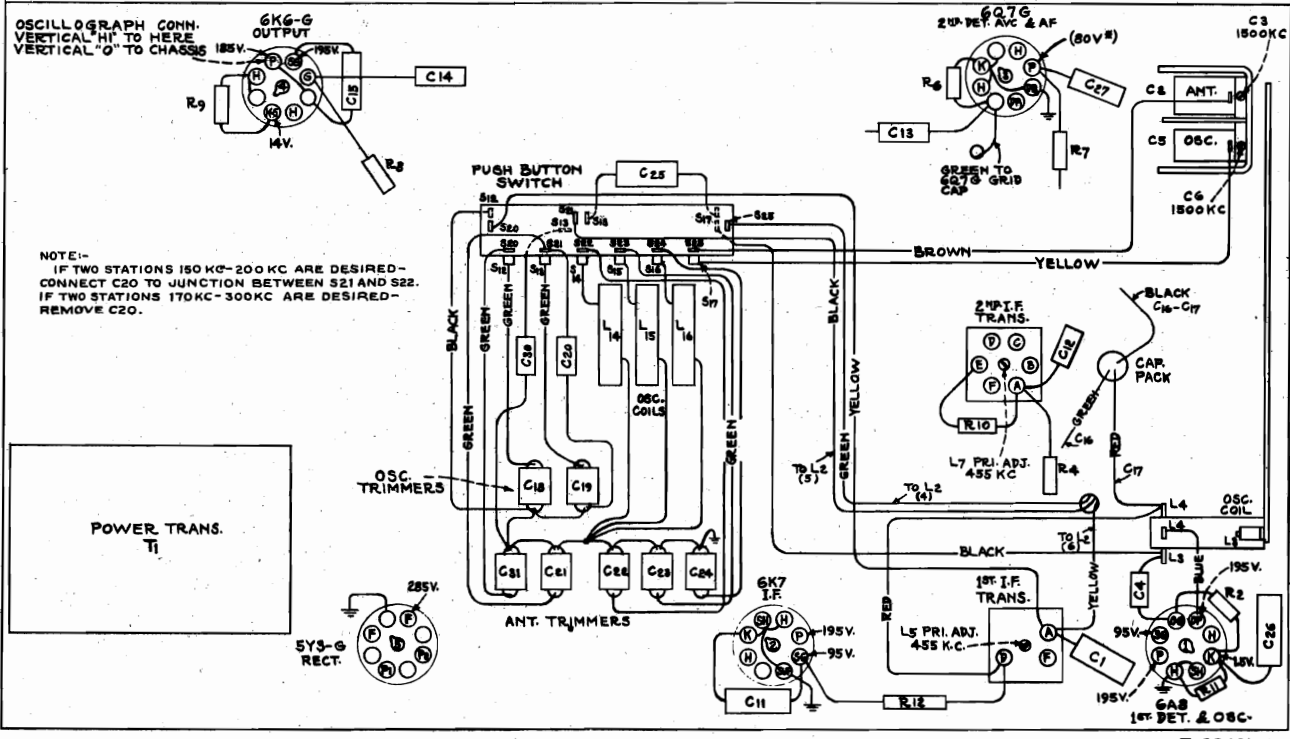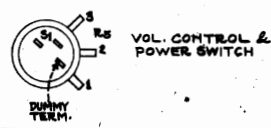

BOTTOM VIEW- REAR OF CHASSIS
R-F Wiring Diagram and Socket Voltages

T-88621-0

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within approximately ±20% with 117-volt a-c supply.

* NOTE: Values with star (*) are operating voltages in circuits with high series-resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

MODEL 95T5LW, Ch. RC-348F
 Alignment, Trimmers
 Socket, Tuner, Dial Data

RCA MFG. CO., INC.

POWER SUPPLY RATINGS

Rating A.....	105-125 volts, 50-60 cycles, 50 watts
Rating C.....	100-120, 200-240 volts, 50-60 cycles, 50 watts
LOUDSPEAKER	
Type.....	5-inch Electrodynamic
V.C. Impedance.....	3.1 ohms at 400 cycles
POWER OUTPUT	
Undistorted.....	1.0 watt
Maximum.....	1.5 watts


Adjustments for Electric Tuning

Two stations between approximately 150-300 kc
 One station between approximately 350-980 kc
 One station between approximately 650-1,080 kc
 One station between approximately 850-1,500 kc

This model has six push buttons. The right-hand button connects the gang condenser for dial tuning. The other five buttons are for electric tuning of five different stations. The station buttons connect to separate magnetite-core coils and trimmers and to separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow at least five minutes warm-up period before making adjustments. Use a regular antenna for preliminary adjustments.

The procedure is as follows:

1. Make a list of the desired stations, arranged in the order of the push button ranges shown on the schematic diagram.
2. To adjust buttons Nos. 1 and 2, best results are obtained by using a test-oscillator. Using a separate receiver, tune in the desired station for button No. 1 and zero-beat the test-oscillator against the carrier of the test-oscillator. Then, keeping the same setting on the test-oscillator, connect its output to the antenna of the 95T5LW. Adjust the antenna and oscillator trimmers of button No. 1 for maximum output. Proceed in a similar fashion for button No. 2.
3. To adjust buttons Nos. 3, 4 and 5, proceed as follows:
 - a. Push in the dial-tuning (right-hand) button, and manually tune in the third station on the list.
 - b. Push in station-button No. 3 and adjust No. 3 oscillator core (L14) to receive this station. Screw the core all the way in, to lowest frequency, and then unscrew slowly until the station is received.
 - c. Adjust No. 3 antenna trimmer (C22) for maximum output on this station.
 - d. Adjust for each of the remaining stations in a similar manner.
4. (Clockwise adjustment of oscillator and antenna trimmers tunes the circuits to lower frequencies.)
5. Make a final careful adjustment of the oscillator and antenna trimmers, using one or two feet of wire as an antenna to insure sharp peaking.

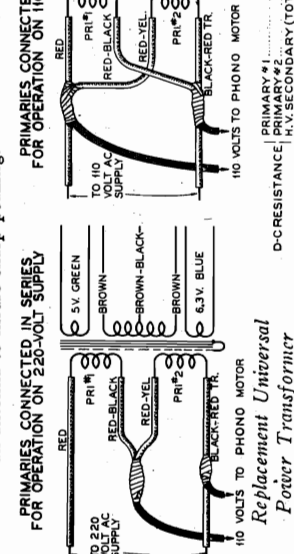

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing. Turn the receiver volume control to maximum.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Marks.—The tuning dial is fastened in the cabinet and can not be used for reference during alignment. Therefore calibration marks corresponding to dial readings of 600 kc and 1,500 kc have been stamped in the plate on the front of the chassis, as shown in the accompanying drawing. These marks are used for reference during alignment.

Drum and Dial Indicator Adjustment.—As the first step



in r-f alignment, check the position of the drum on the front shaft of the gang condenser. With the gang at maximum (full mesh) the drum set-screw should be pointing directly down as shown in the drawing. With the drum in this position, and the gang at maximum, move the dial indicator along the drive cord to coincide with the left-hand line as shown. The indicator is held to the drive cord by means of spring clips.

After completion of alignment, and after the chassis has been fastened in the cabinet, turn the gang to maximum and note whether the dial indicator is at the left-hand end mark on the dial; if it is not, loosen the drum set-screw (which is accessible through a slot in the bottom of the cabinet), turn the drum slightly so that the indicator is at this mark, and then tighten the set-screw.

After completion of alignment, seal the i-f core-adjustment screws with household cement.


Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	Quiet point between 550-750 kc	L7 and L8 (2nd I-F Trans.)
2	6A8-G grid cap, in series with .01 mfd.	455 kc		L5 and L6 (1st I-F Trans.)
3	Antenna lead (blue) in series with 200 mmf.	1,500 kc	1,500 kc calibration mark	C6 (osc.)* C3 (ant.)
4	Follow "Adjustments for Electric Tuning."			

* The oscillator section of the gang condenser has two trimmers, one on top, accessible through a hole in the chassis, and the other on bottom. It may be necessary to adjust both of these trimmers to secure a peak on 1,500 kc.

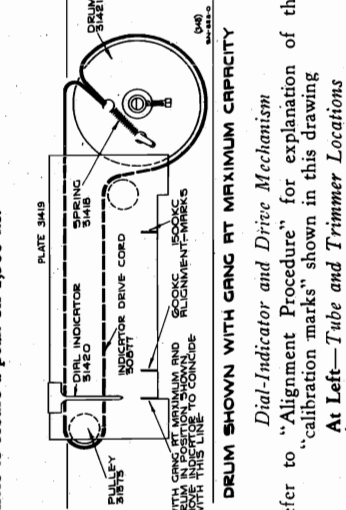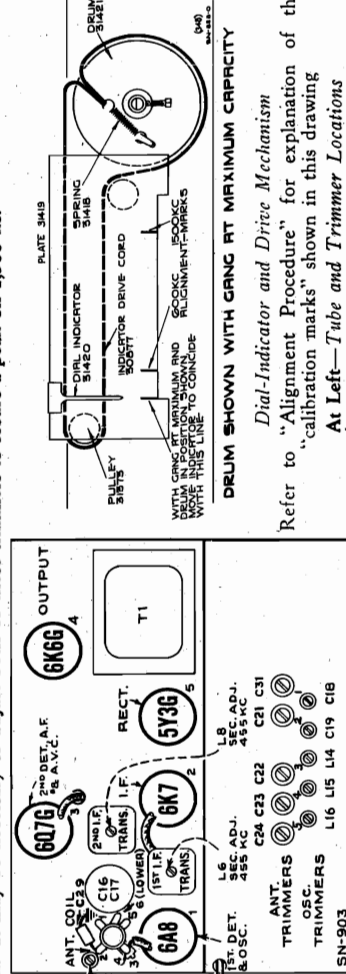

RCA MFG. CO., INC.

MODEL 98T2, Chassis RC352D
Schematic, Alignment, Tuner

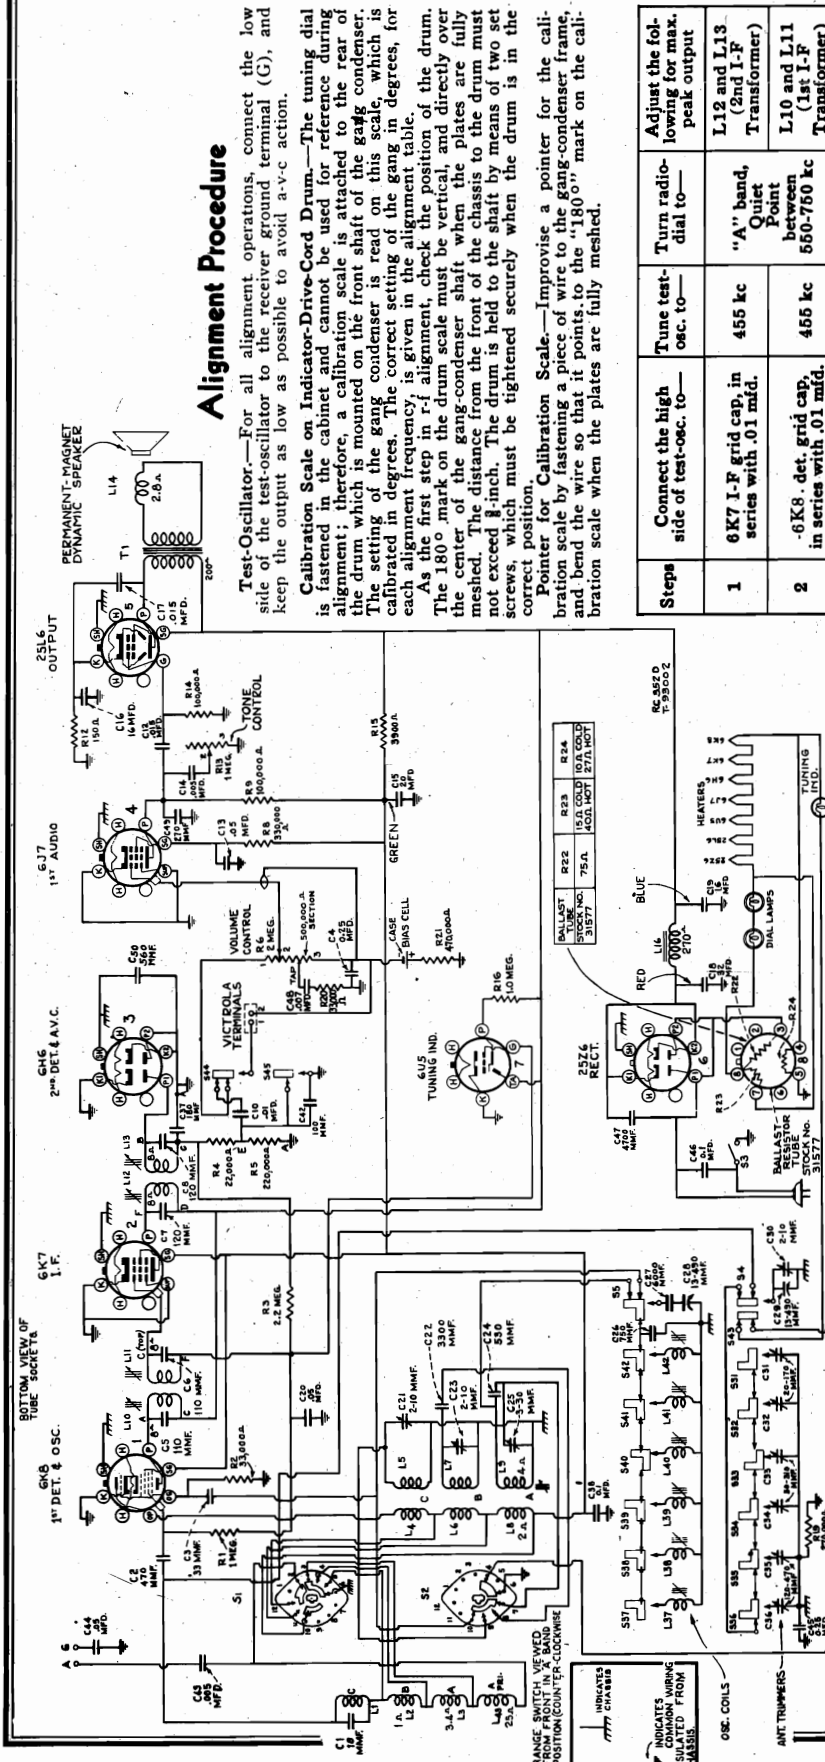

Alignment Procedure

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver ground terminal (G), and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The distance from the front of the chassis to the drum must not exceed 1/8-inch. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the "180°" mark on the calibration scale when the plates are fully meshed.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio-dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap. in series with .01 mfd.	455 kc	"A" band, Quiet Point between 550-750 kc	L12 and L13 (2nd I-F Transformer)
2	.6K8 det. grid cap. in series with .01 mfd.	455 kc		L10 and L11 (1st I-F Transformer)
3	Antenna Terminal, in series with 200 mmf.	600 kc	600 kc (150.5°) "A" band	L9
4		1,500 kc	1,500 kc (28°) "A" band	C25 (osc.) C30 (ant.)
5	Repeat steps 3 and 4.			
6	Antenna Terminal, in series with 400 ohms.	6 mc	6 mc (26.5°) "B" band	C23 (osc.)*
7		20 mc	20 mc (92°) "C" band	C21 (osc.)*
8	Follow "Adjustments for Electric Tuning."			

*Use minimum capacity peak if two peaks can be obtained, and rock gang condenser slightly while adjusting C23 and C21.
Note.—Oscillator tracks 455 kc above signal on all bands.
Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, move the dial indicator on the drive cable to the left-hand end mark on dial, with gang condenser fully meshed.

Adjustments for Electric Tuning

These models have eight push buttons. The left-hand button is a Victrola switch. The right-hand button connects the gang condenser for manual tuning. The other six buttons are for electric tuning of six different stations in the standard-broadcast range. The station buttons connect to separate magnetic-core oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow at least five minutes warm-up period before making adjustments.

- The procedure is as follows:
1. Make a list of the desired stations, arranged in order from low to high frequencies.
 2. Push in the dial-tuning button, and manually tune in the first station on the list.
 3. Push in station button No. 1 (second from left) and adjust No. 1 oscillator core (L37) to receive this station. Screw the core all the way in, to lowest frequency, and then unscrew slowly until station is received.
 4. Adjust No. 1 antenna trimmer (C36) for maximum output on this station.
- Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.
5. Adjust for each of the remaining five stations in the same manner.
 6. Make a final careful adjustment of the oscillator cores and antenna trimmers.

Pilot Lamps..... Mazda 47, 6.3 volts, .15 amp.


POWER OUTPUT
Undistorted 1.5 watts
Maximum 2.5 watts

POWER SUPPLY RATING
A-C Rating 105-125 volts, 25-60 cycles, 55 watts
D-C Rating 105-125 volts, 55 watts

LOUDSPEAKER (PERMANENT-MAGNET DYNAMIC)
Diameter 6 inches
V. C. Impedance at 400 cycles 3 ohms



MODEL 98T2, Ch. RC352D
Chassis Wiring, Voltage
Trimmers, Socket, Lead Dress

RCA MFG. CO., INC.

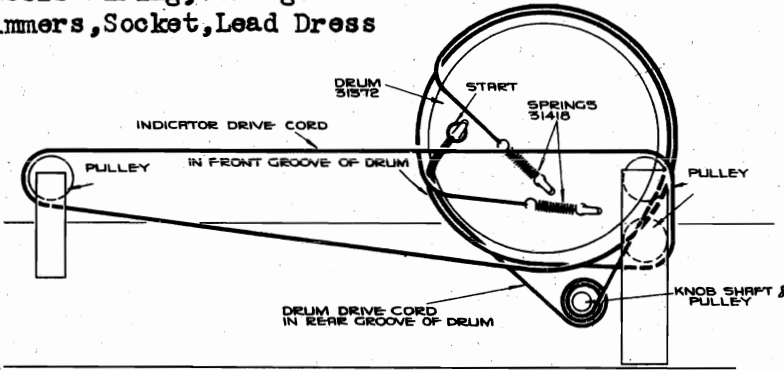

DRUM SHOWN WITH GANG AT MAXIMUM CAPACITY

Arrangement of Drive Cords for Tuning Condenser and Dial Indicator

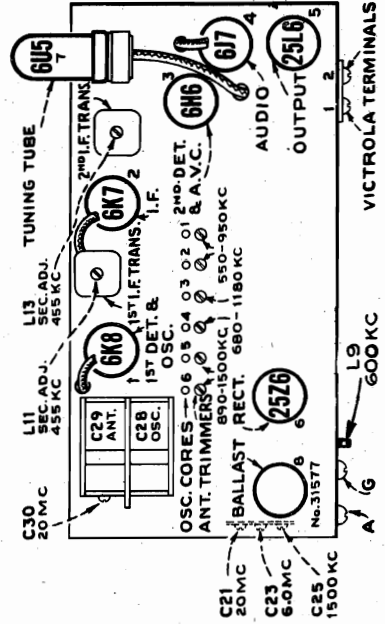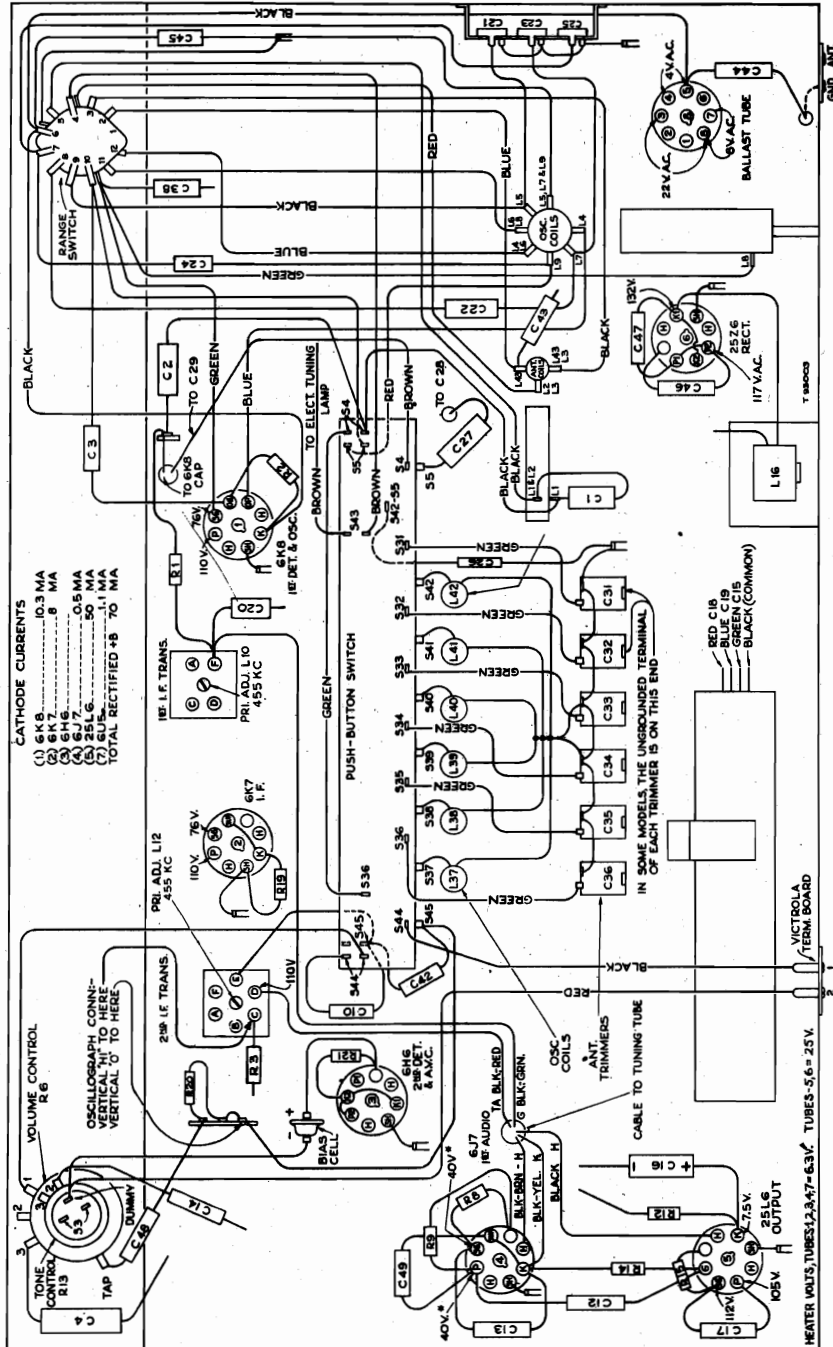

R-F Wiring Diagram and Socket Voltages

Measurements made to low-side of tone control unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within approximately $\pm 20\%$ with 117-volt a-c supply. On d-c, voltages are approximately $\pm 10\%$ lower, except heaters, which remain the same.
* NOTE: Values with star (*) are operating voltages in circuits with high series-resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

Precautionary Lead Dress—

1. Dress the bias cell clear of all bus leads.
2. Leads from S43 must be dressed in front of range switch.
3. Blue lead from range switch to L5 must be short and clear of other leads.
4. Dress leads away from antenna and oscillator coils.
5. Leads across back of chassis must be dressed under electrolytic to prevent approaching Victrola jack.
6. Green lead from range switch to rear contact on oscillator coil must be dressed close to base.

RCA MFG. CO., INC.

MODEL 98T2, Ch. RC352D
Parts List

Miscellaneous Service Notes

Bias Cell.—The bias cell provides approximately 1-volt bias for the 1st audio grid. The cell should never be shorted, not measured with an ordinary voltmeter or other device that draws current. The cell may be checked by measuring the 1st-audio cathode current with a new tested 6J7 tube in this socket. The current should be approximately ½ milliamperes. If it is appreciably greater than ½ mil., install a new bias cell.

Victrola Attachment.—Two screw-type terminals, numbered 1 and 2, are provided on the rear apron of the chassis for connection to a Victrola Attachment, such as the R-93, R-93B, etc. (When A-C supply is available.)

Care must be taken that these terminals are never connected in any way to the chassis, otherwise injury will result to the bias cell. To safeguard against this possibility, the following precautions should

be observed in connecting the Victrola Attachment to the receiver.

Victrola Attachment with shielded cable.—If the shielded cable has a plug connector, remove the plug, connect the shielding to terminal 1, and connect the lead (inside the shielding) to terminal 2. Tape the shielding for a sufficient distance to prevent the possibility of it shorting against the chassis.

Victrola Attachment with twisted-pair cable.—Connect the low-side of the Attachment to terminal No. 1, and the high-side of the Attachment to terminal No. 2. (In some Attachments, the lead from the low-side is black, and the lead from the high-side is black-brown.)

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the position of the plug. For operation on a-c, a similar reversal of the plug may reduce hum.

REPLACEMENT PARTS

Insist on genuine factory-tested parts, which are readily identified and may be purchased from authorized dealers.


STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit List Price
RECEIVER ASSEMBLIES					
31577	Ballast—Ballast resistor tube (R22, R23, R24)	.80	31373	Pulley—Drive cord pulley	.08
31767	Board—Antenna-ground terminal board	.20	5066	Reactor (L16)	1.65
31579	Board—Phonograph terminal board	.20	31577	Resistor—Ballast resistor (R22, R23, R24)	.80
30752	Bracket—Bracket for holding Magic Eye tube	.25	30880	Resistor—150 ohms, ½ watt (R12)	.20
14338	Bushing—Variable condenser mounting bushing and screws	.08	30694	Resistor—3,900 ohms, ½ watt (R15)	.20
30766	Cap—Cap for Magic Eye	.15	14284	Resistor—22,000 ohms, 1/10 watt (R4)	.15
31400	Capacitor—Adjustable trimmer capacitor, two sections 2-10 mmfd. and one section 3-30 mmfd. (C21, C23, C25)	.50	12454	Resistor—33,000 ohms, ½ watt (R2, R20)	.20
32486	Capacitor—Antenna coil trimmer capacitor bank —20-470 mmfd. (C31, C32, C33, C34, C35, C36)	1.40	14560	Resistor—100,000 ohms, ½ watt (R9, R14)	.20
12948	Capacitor—33 mmfd. (C3)	.35	11398	Resistor—220,000 ohms, 1/10 watt (R5)	.15
12722	Capacitor—18 mmfd. (C1)	.35	12199	Resistor—270,000 ohms, ½ watt (R19)	.20
12720	Capacitor—100 mmfd. (C42)	.35	14983	Resistor—330,000 ohms, ½ watt (R8)	.20
12462	Capacitor—109 mmfd. (C5, C6)	.30	12285	Resistor—470,000 ohms, ½ watt (R21)	.20
12404	Capacitor—120 mmfd. (C7, C8)	.30	13730	Resistor—1 meg., ½ watt (R1)	.20
14712	Capacitor—180 mmfd. (C37)	.30	12013	Resistor—1 meg., 1/10 watt (R16)	.15
12488	Capacitor—270 mmfd. (C49)	.35	12679	Resistor—2.2 meg., ½ watt (R3)	.20
30433	Capacitor—470 mmfd. (C2)	.35	14343	Retainer—Drive cord pulley retainer	.03
32492	Capacitor—530 mmfd. (C24)	.40	14887	Retainer—Retainer for drive cord pulley	.01
12537	Capacitor—560 mmfd. (C50)	.35	4669	Screw—No. 8-32 square head set screw for drum, Stock No. 31372	.03
31435	Capacitor—750 mmfd. (C26)	.40	32671	Shaft—Station selector knob shaft and pulley	.35
4881	Capacitor—3,300 mmfd. (C22)	.60	12110	Shield—Radiotron shield cap	.14
12897	Capacitor—4,700 mmfd. (C47)	.65	31365	Socket—Dial lamp socket	.30
31405	Capacitor—6,000 mmfd. (C27)	.75	13871	Socket—Magic Eye socket	.45
5148	Capacitor—.007 mfd. (C48)	.20	31251	Socket—Tube socket	.25
4838	Capacitor—.005 mfd. (C14, C43)	.25	31970	Spring—Tension spring for station selector push button switch latch bar	.05
14393	Capacitor—.01 mfd. (C10)	.30	31418	Spring—Indicator or drum drive cord tension spring	.05
11315	Capacitor—.015 mfd. (C12, C17)	.20	31370	Switch—Push button selector switch (S4, S5, S31, S32, S33, S34, S35, S36, S37, S38, S39, S40, S41, S42, S43, S44, S45)	3.85
4886	Capacitor—.05 mfd. (C13, C20, C44)	.20	33009	Switch—Range switch (S1, S2)	1.15
4839	Capacitor—.1 mfd. (C38, C46)	.30	14376	Transformer—First i-f transformer (L10, L11, C5, C6)	2.45
12484	Capacitor—.25 mfd. (C4, C45)	.30	14283	Transformer—Second i-f transformer (L12, L13, C7, C8, C37, R4, R5)	3.80
31323	Capacitor—.16 mfd. (C16)	.65	31577	Tube—Ballast resistor tube (R22, R23, R24)	.80
31576	Capacitor—Comprising one 32 mfd., one 20 mfd., and one 16 mfd. section (C15, C18, C19)	2.15	SPEAKER ASSEMBLIES (84307-1)		
31581	Cell—Bias cell	.25	31665	Cone—Speaker cone and voice coil (L14)	3.20
31382	Clip—Mounting clip for coils and cores on oscillator bank	.04	5118	Plug—3-contact male plug for speaker	.25
32493	Coil—Antenna coil (L1, L2, L3, L43)	1.35	31664	Speaker complete	6.30
31951	Coil—Oscillator coil (L4, L5, L6, L7, L8, L9, C24)	1.40	31666	Transformer—Output transformer (T1)	1.20
31385	Coil—Push button oscillator coil (L37, L38)	.30	MISCELLANEOUS ASSEMBLIES		
32487	Coil—Push button oscillator coil (L39, L40)	.35	31397	Button—Station selector push button	.15
31383	Coil—Push button oscillator coil (L41, L42)	.30	31456	Cover—8-protective covers for push button markers	.08
31369	Condenser—2-gang variable tuning condenser (C28, C29, C30)	2.65	32673	Dial—Station selector dial scale (glass)	.60
5119	Connector—3-contact female connector plug for reproducer cable	.25	32674	Escutcheon—Station selector escutcheon less dial scale and push buttons	3.85
32668	Control—Volume control, tone control, and on-off switch (R6, R13, S3)	3.00	31355	Knob—Range switch knob	.12
32634	Cord—Drum drive cord	.10	14359	Knob—Station selector knob	.20
32635	Cord—Indicator pointer drive cord	.24	31391	Knob—Tone control knob	.15
31386	Core—Adjustable core and stud assembly for oscillator bank	.15	30773	Knob—Volume control knob	.15
12800	Core—Adjustable core and stud for oscillator coil, Stock No. 31951	.35	31458	Marker—"Dial Tuning" push button marker	.01
31372	Drum—Variable condenser drive cord drum and calibrator	.65	31457	Marker—"Record Player" push button marker	.01
31580	Holder—Bias cell holder	.15	31589	Marker—Station call letters push button markers	.35
32552	Indicator—Dial pointer	.20	4982	Spring—Retaining spring for knob, Stock No. 14359	.05
31480	Lamp—Dial lamp (Mazda No. 47)	.20	30330	Spring—Retaining spring for knob, Stock No. 31391	.03
32670	Plate—Dial color plate, pointer slide, and lamp brackets assembled	.75	14270	Spring—Retaining spring for knob, Stock Nos. 30773 and 31355	.05

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

MODEL Governor Motors for
Models R98,U103,U105,U124

RCA MFG. CO., INC.

U125,U126,U130,U132,U134
Assembly,Maintenance,Notes

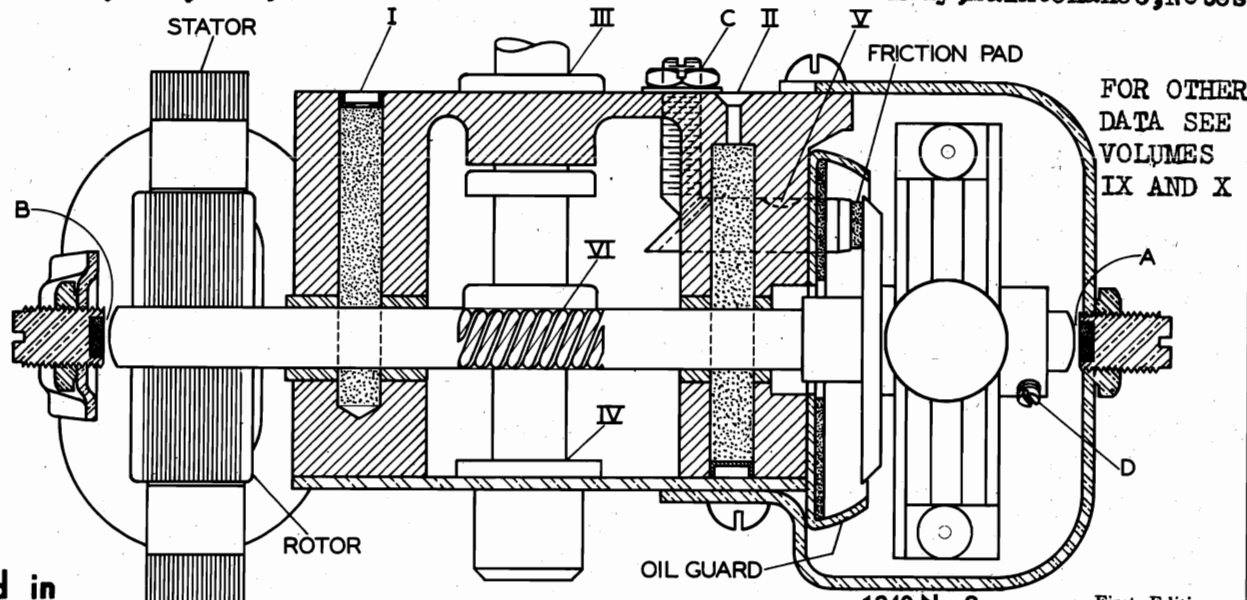

FOR OTHER
DATA SEE
VOLUMES
IX AND X

Used in

Models U-125, U-126, U-130, U-132, U-134, U-103, U-105, U-124, R-98, Etc.

Lubrication and Adjustment.

To assure normal and satisfactory operation, every motor requiring service should be lubricated and adjusted as follows:—

- (1) Remove motor end brackets, bottom cover containing lower spindle bearing, and governor. Slide vertical spindle downward, remove C-washer; then push upward to disengage worm gear. Slide rotor and shaft from motor.
- (2) Clean rotor bearings and rotor shaft thoroughly with "Carbena" or "benzine." Flush oil reservoirs I and II with the same solvent, preferably after removing oil wicks.
- (3) Remove governor felt friction pad V. Replace this pad with revised type Stock No. 34058, being certain to saturate thoroughly with oil.
- (4) Put slight amount of oil in each rotor bearing, and reinsert rotor shaft. See that shaft revolves freely when in position.
- (5) Oil bearing IV, grease gear VI, and re-install bottom cover; checking to assure that vertical spindle revolves freely and worm is properly meshed after cover is in place and screws tightened. Do not misplace small disc of bottom thrust bearing.
- (6) Inspect governor to see that springs move freely under retaining washers, and that governor is otherwise in good condition. Install on rotor shaft, checking for possible bind of sleeve on the shaft.
- (7) Replace end brackets containing thrust screws "A" and "B"
- (8) Adjust thrust screw "A" so that one steel lamination of rotor shows beyond the stator laminations as illustrated. This positions rotor at the electrical center of the stator, for maximum torque.
- (9) Adjust thrust screw "B" to provide 1/16 inch clearance from end of rotor shaft.
- (10) Fill both wells I and II with oil. At least 30-50 drops are required. Also oil bearing III.
- (11) Position governor so that when it is fully contracted (closed), the friction disc is aligned with outer edge of oil guard. Tighten set screw "D".
- (12) Connect motor to source of power, and adjust screw "C" to give 78 R.P.M. After allowing motor to run a short time, to compress felt pad. It may be necessary to recheck position of governor to give sufficient range of speed adjustment.
- (13) Test motor, after allowing it to reach operating temperature, by grasping spindle and noting relative amount

of force required to cause governor to contract. Also stall motor, and release, to see that governor has "snappy" response.

Special Notes

- (1) Do not interchange parts of different motors, especially bearings, shafts, or gears.
- (2) Where a new rotor or turntable spindle is installed, allow motor to run-in for eight hours; preferably under load.
- (3) The motor should not be tested or used at temperatures below 65 degrees Fahrenheit.
- (4) Where thrust bearing screw "A" is badly worn or does not have a fibre insert, replace with RCA Stock No. 31616.
- (5) Governor motors should be thoroughly lubricated after approximately 300-500 hours of operation. This is equivalent to 1-2 years usage in the average home.

Lubricant Specifications

Only mineral base oils and greases should be used.

- (1) For points requiring oil, use a type having a high viscosity index (with a viscosity rating of SAE 20-30), such as "Esso Motor Oil, Uniflo No. 3."
- (2) For points requiring grease, a light gear grease having good clinging properties, such as "Cities Service No. 7035-A1" or "Koolmotor Universal Trojan No. 1", should be used.

Governor Waver—Causes

Drifting of motor speed at a slow rate, or erratic shift to other than normal speed, is generally caused by (1) binding of rotor or spindle bearings due to lack of lubrication, (2) scored shafts or bearings, (3) binding due to tight adjustment of thrust bearing "B", (4) binding of turntable spindle bearing on motor board (where used), (5) improper centering of motor with respect to turntable spindle.

Governor Chatter—Causes


When the governor rattles or flutters rapidly, accompanied by excessive mechanical noise, the likely source of trouble is (1) glazed felt friction pad due to lack of lubrication, (2) rotor not centrally positioned in stator, (3) thrust bearing "A" worn, (4) misaligned or rough governor disc.

Heavy Duty Motor

A heavy duty motor Stock No. 31163 is available for replacement of the Stock No. 31157 type used in Models U125, U126, U128, U132, U134, etc., at a nominal exchange price. The larger motor has a higher torque specification, will operate normally over greater ranges of voltage and frequency, and gives increased life before relubrication is required.

MODEL K105, Ch. RC476
Voltage, Chassis Wiring
Lead Dress

RCA MFG. CO., INC.

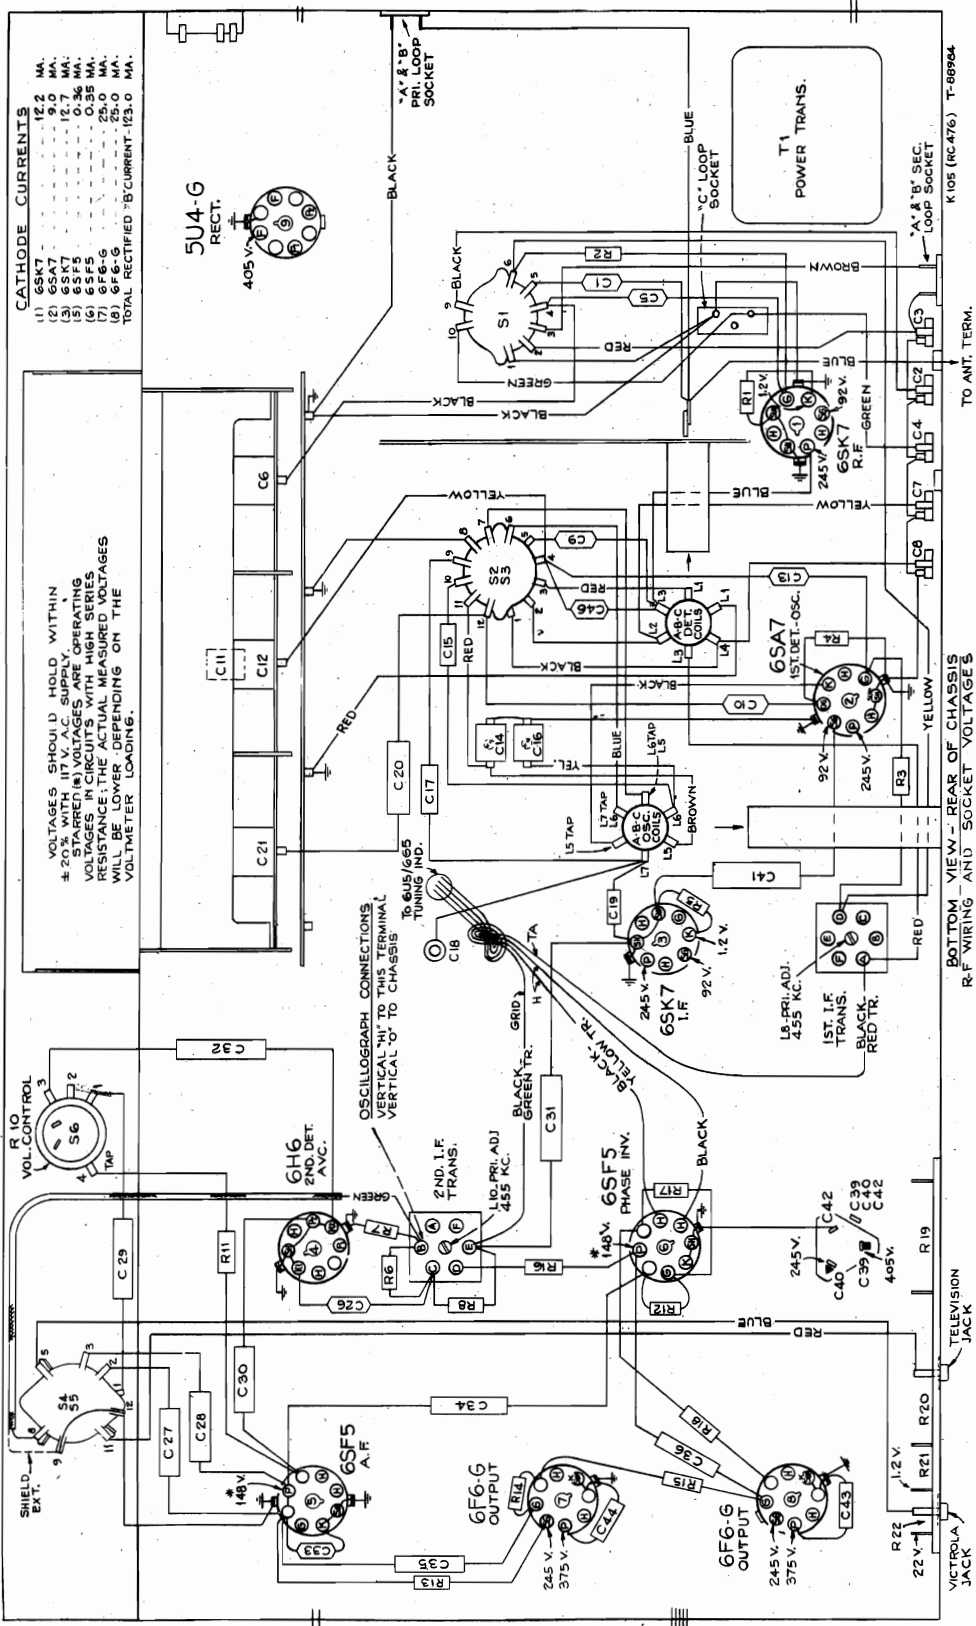

CATHODE CURRENTS

(1) 6SK7	12.2 MA.
(2) 6SK7	17.0 MA.
(3) 6SF5	17.0 MA.
(4) 6SF5	0.36 MA.
(5) 6SF5	0.35 MA.
(6) 6F6-G	25.0 MA.
(7) 6F6-G	25.0 MA.
TOTAL RECTIFIED 'B' CURRENT - 123.0 MA.	

VOLTAGES SHOULD HOLD WITHIN ± 20% (IN V.C. SUPPLY STAGES) (IN VOLTAGES ARE OPERATING VOLTAGES IN CIRCUITS WITH HIGH SERIES RESISTANCE; THE ACTUAL MEASURED VOLTAGES WILL BE LOWER, DEPENDING ON THE VOLTMETER LOADING).

Precautionary Lead Dress:

1. Dress 4,000-mmf/d. roll capacitor from the range switch to the gang condenser (C21) away from the chassis.
2. Dress 2,700-mmf/d. capacitor connected from the oscillator coil (L6) to the range switch away from the bus wire directly beneath it.
3. Dress leads from phono and television plugs to tone control switch away from the speaker leads, terminal No. 3 (plate) of the output leads and away from the 6H6.

4. Dress red AC leads to power switch away from 6H6 and away from volume control terminals.

5. Leads from power transformer must be dressed close to base away from trimmer bank and oscillator coil.
6. All leads from trimmers should be dressed away from chassis base and range switch.
7. Green, blue, and brown leads from loop terminal boards should be dressed away from chassis base and range switch.

K 105 (RC 476) T-8896A

BOTTOM VIEW - REAR OF CHASSIS R.F. WIRING AND SOCKET VOLTAGES

RCA MFG. CO., INC.

MODEL K105, Ch. RC 476
Alignment, Parts

REPLACEMENT PARTS

In list on genuine factory-tested parts, which are readily identified and may be purchased from authorized dealers.

STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit Price
CHASSIS ASSEMBLIES (RC-476)					
33920	Arm—Push arm and cam assembly on tuning unit	.35	33419	Roller—Rolling roller for tuning knob shaft.	.10
34574	Board—Antenna-ground board	.20	31813	Screw—No. 8-32 milled head set screw for tuning knob shaft	.02
33766	Board—Antenna-ground board	.20	34821	Screw—Push arm lock screw	.03
32864	Capacitor—Air trimmer—3.30 mfd. (C18)	.60	33422	Shaft—Tuning shaft cam spiral spring	.10
34791	Capacitor—Tuner comprising 4 sections of C3, C4, C7, C8	.80	31884	Socket—Dial lamp socket	.40
34792	Capacitor—Tuner comprising 2 sections of C3, C4, C7, C8	.40	34876	Socket—Tuning indicator socket	.45
14079	Capacitor—38 mfd. (C19)	.45	33170	Socket—2-terminal loop socket	.25
13545	Capacitor—38 mfd. (C19)	.35	33171	Socket—Tube socket	.25
13546	Capacitor—38 mfd. (C19)	.35	34822	Spring—Push arm return spring	.08
13720	Capacitor—100 mfd. (C20)	.30	34823	Spring—Tuning shaft cam spiral spring	.10
34989	Capacitor—100 mfd. (C20)	.30	34824	Switch—Range switch	3.00
34700	Capacitor—120 mfd. (C24)	.35	34886	Transformer—First I transformer	1.75
34700	Capacitor—120 mfd. (C24)	.35	34887	Transformer—Power transformer—110 volts, 20 cycles	6.00
31552	Capacitor—480 mfd. (C1, C13)	.35	34889	Transformer—Power transformer—105-125 volts, 50-60 cycles	4.75
30957	Capacitor—2,700 mfd. (C15)	.55	SPEAKER ASSEMBLIES (RL-70K-5)		
34289	Capacitor—4,000 mfd. (C20)	.65	31825	Cap—Dust cap	.03
34290	Capacitor—4,000 mfd. (C20)	.65	35170	Coil—Field coil	2.00
35854	Capacitor—605 mfd. (C27, C34, C35, C36, C45, C44)	.80	34773	Coil—Neutralizing coil with voice coil	1.80
4870	Capacitor—.05 mfd. (C30)	.25	34778	Diffuser	.25
32787	Capacitor—.05 mfd. (C30)	.25	34839	Plug—5-prong male plug for speaker	2.10
13454	Capacitor—.05 mfd. (C30)	.30	MISCELLANEOUS ASSEMBLIES		
34533	Capacitor—Electrolytic comprising 1 section of 20 mfd., 1 section of 15 mfd. and 1 section of 30 mfd.	1.80	Bearing—Antenna loop bearing comprising spindle and pivot	.70	
34579	Coil—Oscillator coil	2.00	Clip—Tuning indicator clip	.20	
34687	Coil—R-F coil	2.00	Dowel—1 set of dowel pins for loop antenna	.10	
32713	Coil—Tuning condenser drum drive cord	1.10	Button—Antenna selector switch on push button	2.90	
34578	Control—Tone control	1.35	Frame—Dial frame complete with brackets (see note)	1.10	
34895	Control—Volume control and power switch	5.00	Frame—Frame only for "C" band loop	.40	
33174	Drum—Tuning condenser drive drum	2.00	Knob—Tuning knob	.40	
34532	Gear—Gear sector for range switch	.45	Knob—Tuning knob with volume control knob	.40	
34547	Pulley—Drive cord pulley and mounting bracket	.37	Marker—Push button band antenna loop	11.90	
35005	Resistor—Drive pulley base bronze drive cord	.30	Plug—3-prong male plug for "C" band loop	.10	
34537	Resistor—Drive pulley base bronze drive cord section of 3,000 ohms, 1/10 watt (R5)	.20	Plug—3-prong male plug for "A" and "B" band	.10	
14459	Resistor—10 ohms, 1/10 watt (R1)	.10	Scale—Glass dial scale	2.15	
13988	Resistor—22,000 ohms, 1/10 watt (R2)	.10	Shaft—Removable shaft assembly to turn loop	.85	
13494	Resistor—22,000 ohms, 1/10 watt (R2)	.10	Spring—Retaining spring for knob, Stock No. 33484	.15	
12284	Resistor—220,000 ohms, 1/10 watt (R3)	.10			
12284	Resistor—220,000 ohms, 1/10 watt (R3)	.10			
12199	Resistor—270,000 ohms, 1/10 watt (R3, R15)	.10			
12486	Resistor—280,000 ohms, 1/10 watt (R3)	.10			
12513	Resistor—1 megohm, 1/10 watt (R5)	.15			
12979	Resistor—2.2 megohm, 1/10 watt (R2, R4, R13) and arm	.30			
30340	Resistor—Retainer for shaft of tuning shaft cam	.02			

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

** Use minimum capacity peak if two can be obtained. Check to determine that C16 has been adjusted to the correct peak by tuning the receiver to approximately 2.33 mc where a weaker signal should be received.

† Adjust the inductance of "C" band loop by varying the spacing between the leads of the loop. Moving the leads closer together decreases the inductance and tunes the loop to a higher frequency; moving the leads farther apart increases the inductance and tunes the loop to a lower frequency.

Important—The oscillator tracks above the signal on all bands.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing. **Output Meter Alignment**—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator—For all alignment operations, keep the output as low as possible to avoid a-c action. For the first six steps in alignment the low side of the test-oscillator should be connected to the receiver chassis. Following step 6, the signal must be radiated (see note under alignment table).

Calibration Scale on Indicator-Drive-Cord Drum—The tuning dial is fastened in the cabinet and cannot be used for reference during the first six steps of alignment; therefore, a calibration scale is attached to the tuning drum. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.


Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn ratio dial to—	Adjust the following for maximum peak output
1	6SK7 I-F grid in series with .01 mfd.	455 kc	"B" band Quiet point between 1.5-2.0 mc	L10 and L11 (2nd I-F trans.)
2	6SA7 det. grid in series with .01 mfd.	15.2 mc	15.2 mc (192°) "C" band	L8 and L9 (1st I-F trans.)
3		3.44 mc	3.44 mc (183°) "B" band	C14 (osc.)* C11 (det.) Rock Gang
4	6SK7 R-F grid in series with .01 mfd.	600 kc	600 kc (35.5°) "A" band	C16 (osc.)** C7 (det.) Rock Gang
5		1,500 kc	1,500 kc (246°) "A" band	C18 (osc.) C8 (det.)
6		15.2 mc	15.2 mc "C" band	C4 (ant.)
7		6.1 mc	6.1 mc "C" band	Inductance of "C" band loop†
8		Repeat step 7		
9		3.44 mc	3.44 mc "B" band	C3 (ant.)
10	Radiate signal (See note)	1,500 kc	1,500 kc "A" band	C3 (ant.)
11		600 kc	600 kc "A" band	L7 (osc.) Rock Gang
12		1,500 kc	1,500 kc "A" band	C8 (det.)
13				

Note—Following step 6, a radiated signal must be used for the remainder of the alignment. One or two turns of wire forming a loop approximately 18 inches in diameter connected across the output of a test-oscillator such as RCA Model 151, Stock No. 9592 (TMV-97C), etc., will be suitable. For the adjustments using the radiated signal, the chassis must be placed in the cabinet and the receiver loops connected. The radiating loop should be placed near enough to the receiver loop to provide ample signal strength for alignment.

* Use minimum capacity peak if two can be obtained. Check to determine that C14 has been adjusted to the correct peak by tuning the receiver to approximately 14.29 mc where a weaker signal should be received.

MODELS 8A, 8B, 8C,
10A, 10B, 10C
A-C S.P.U.
Schematics, Data
Parts

RCA MFG. CO., INC.

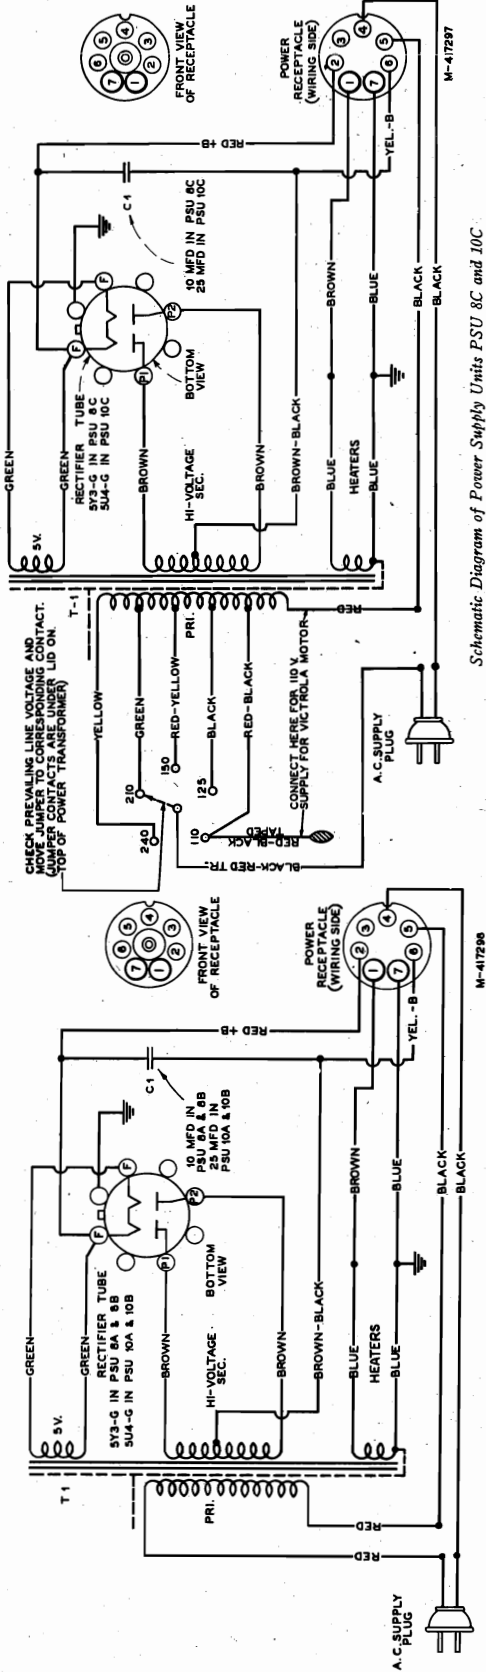

Schematic Diagram of Power Supply Units PSU 8C and 10C

Schematic Circuit Diagram of Power Supply Units PSU 8A, 8B, 10A, and 10B

Specifications

Type	Rating		Radiotron Rectifier	D-C Output	Heater (A-C)	Used with Models	D-C Resist., T1		Net Weight (pounds)
	Voltage	Cycles					Pri. ohms Total	Sec. ohms Total	
PSU 8A	105-125	50/60	5Y3-G	375 volts at 78 milliamperes	6.45 V 3 amps	8Q1 and 8Q4	6.4	535	7
PSU 8B	105-125	25/60	5Y3-G	375 volts at 78 milliamperes	6.45 V 3 amps	8Q1 and 8Q4	8.3	705	9 1/2
PSU 8C	Universal*	50/60	5Y3-G	375 volts at 78 milliamperes	6.45 V 3 amps	8Q1 and 8Q4	17.4	455	11 1/2
PSU 10A	105-125	50/60	5U4-G	380 volts at 110 milliamperes	6.36 V 5 amps	10Q1, 12Q4, 12QK, 12QU**	3.0	250	9
PSU 10B	105-125	25/60	5U4-G	380 volts at 110 milliamperes	6.36 V 5 amps	10Q1, 12Q4, 12QK, 12QU**	3.9	250	13
PSU 10C	Universal*	50/60	5U4-G	380 volts at 110 milliamperes	6.36 V 5 amps	10Q1, 12Q4, 12QK, 12QU**	8.9	190	15

* The universal can be set for 105-117, 117-130, 140-160, 200-225, or 225-250 volt supply.
** Model 12QU has a phonograph motor designed for 50/60 cycle operation only, and uses either PSU 10A, or 10C.
First Edition

REPLACEMENT PARTS

Insist on genuine factory-tested parts, which are readily identified and may be purchased from authorized dealers.

STOCK No.	DESCRIPTION	Unit Price	STOCK No.	DESCRIPTION	Unit Price
31739	Cable—6-conductor power output cable with plug	1.20	31784	Transformer—Power transformer 105-125 volts, 25-60 cycle (T1) (PSU 8B only)	10.35
11203	Capacitor—10 mfd. (C1) (PSU 8A, 8B or C only) 25 mfd. (C1) (PSU 10A, 10B or 10C only)	1.15	31787	Transformer—Power transformer 105-125 volts, 25-60 cycle (T1) (PSU 10B only)	14.30
14681	Capacitor—10 mfd. (C1) (PSU 10A, 10B or 10C only)	1.55	31795	Transformer—Power transformer 105-125 volts, 25-60 cycle (T1) (PSU 8C only)	10.80
14609	Plug—7-contact plug for power output cable	.45	31738	Transformer—Power transformer, 105-130, 140-160, 200-250 volts, 50-60 cycle (T1) (PSU 10C only)	14.95
31733	Transformer—Power transformer 105-125 volts, 50-60 cycle (T1) (PSU 8A only)	7.70			
31736	Transformer—Power transformer 105-125 volts, 50-60 cycle (T1) (PSU 10A only)	10.75			

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE

**PSU 8A, 8B, 8C, 10A, 10B and 10C
A-C Power Supply Units**

General Description

Certain models of the "Q" Line of RCA Victor "Magic Brain" 1938 radio receivers are designed for use with a separate plug-in power supply unit. Different units are available to permit operation on a-c power supplies of various voltages and cycles, and also on 110 or 220 volts d-c.

Service data and diagrams for the a-c units are contained in this sheet. The d-c units are described in a separate sheet.

Each a-c unit is equipped with an 18-inch 6-wire cable with a 7-contact female receptacle which plugs into a 7-prong male connector on the receiver chassis. The a-c power cord is 6 feet long. The units are approximately 7 1/2 inches long, 4 1/4 inches wide, and 6 inches high.

Testing.—To check an a-c power unit when a receiver is not available, connect a 50-watt resistor (4,800 ohms for PSU 8A, 8B, 8C, and 3,450 ohms for PSU 10A, 10B and 10C) across contacts 2 and 6 on the power receptacle. Connect a jumper across contacts 4 and 5. Measure the d-c voltage across the resistor, which should be approximately 375 volts, with 117 volts supply on the 117-volt tap.

RCA MFG. CO., INC.

MODEL RP139A
MODEL RP145
Adjustments, Notes
Parts

The RP-139-A and RP-145 automatic record changers are very similar in design and construction. Most of the parts and adjustments are identical on both. The RP-139-A turntable is driven through a worm gear in the motor housing while the RP-145 turntable is driven through a friction drive disc mounted on the turntable spindle.

On Model RP-145 it is important that the drive motor spindle, and rubber tires on main driving disc and idler pulley be kept clean and free from oil, grease, dirt, or any foreign matter at all times. Any quick-drying naphtha is satisfactory for cleaning these parts. The RP-145 drive motor bearing is lubricated from an oil well fitted and sealed at the factory. It should not require lubrication in the field.

The RP-145 turntable is not removable from the spindle. However, the rubber tired driving disc is fastened to the spindle by means of a tapered pin "24." If necessary to remove these parts the tapered pin should first be removed. The driving disc can then be removed from the spindle and the turntable and spindle assembly lifted upward from the motorboard. If this is done, great care should be taken not to bend the spindle. At the same time the spindle bearing should be oiled and the cup and ball thrust bearing oiled and checked for proper position.

Before servicing the automatic record changer, inspect the assembly to see that all levers, parts, gears, springs, etc., are in good order and are correctly assembled.

A bind or jam in the mechanism can usually be relieved by rotating the turntable in the reverse direction.

The changer can be conveniently rotated through its change cycle by pushing the index lever to "Reject" and revolving the turntable by hand. Six turntable revolutions are required for one change cycle.

If the record changer or cabinet is not perfectly level, normal operation is likely to be affected.

The 10 and 12 inch records must be absolutely flat for smooth operation.

A pickup shorting switch, located under the motorboard, operates when the pickup is moved outward to the pickup rest.

MISCELLANEOUS SERVICE HINTS

Incorrect adjustment of a particular mechanism of the changer is generally exhibited in a specific mode of improper operation. The following relations between effects on opera-

tion and the usual misadjustments will enable ready adjustment in most cases.

1. For any irregularity of operation, the adjustment of the main lever "15" should be checked first as in "A."
2. Needle does not land properly on both 10 and 12 inch records—Make complete adjustments "D" and "E."
3. Needle does not land properly on 12 inch record but correct on 10 inch—Effect adjustment "E."
4. Failure to trip at end of record—Increase clutch "5" friction by means of screw "B." Also, see that levers "7" and "12" are free to move without touching each other.
5. Pickup strikes lower record of stack or drags across top record on turntable—Adjust lift cable per adjustment "C."
6. Needle does not track after landing—Friction clutch "5" adjustment "B" may be too tight; bind in tone arm vertical bearing; levers "7" and "12" fouled; or pickup output cable twisted.
7. Cycle commences before record is complete—Record is defective, or adjustment "B" of friction clutch "5" is too tight.
8. Wow in record reproduction—Record is defective, or instrument is not being operated at normal room temperature; on Model RP-145 oil, grease, dirt, or other foreign matter on motor spindle, main driving disc or idler pulley rubber tire. Clean with any quick drying naphtha. Also, on RP-145 the motor support bracket "N" should be moved in its mounting holes until the motor spindle is parallel to the turntable spindle and exactly at right angles to the main driving disc "29." The bracket mounting nuts should then be, securely tightened.
9. Record knives strike edge of records—Records warped; record edges are rough; or knife adjustments "F" and "G" are incorrect.
10. Record not released properly—Adjust record shelf assemblies in respect to shaft by means of adjustment "H."
11. When playing both types of records mixed and needle either lands in 10 inch position on 12 inch record or misses record entirely—Increase tension of mixed record discriminating lever spring "M."

ADJUSTMENTS

A. Main Lever.—This lever is basically important in that it interlinks the various individual mechanisms which control needle landing, tripping, record separation, etc. Rotate the turntable until the changer is out-of-cycle; and check rubber bumper bracket (A). The roller should clear the nose of the cam plate by approximately 1/16 inch.

B. Friction Clutch.—The motion of the tone arm toward the center of the record is transmitted to the trip pawl "22" by the trip lever "7" through a friction clutch "5." If the motion of the pickup is abruptly accelerated or becomes irregular due to swinging in the eccentric groove, the trip finger "7" moves the trip pawl "22" into engagement with the pawl on the main gear, and the change cycle is started. Proper adjustment of the friction clutch "5" occurs when movement of the tone arm causes positive movement of the trip pawl "22" without tendency of the clutch to slip. The friction should be just enough to prevent slippage, and is adjustable by means of screw "B." If adjustment is too tight, the needle will repeat grooves; if too loose, tripping will not occur at the end of the record.

C. Pickup Lift Cable Screw.—During the record change cycle, lever "16" is actuated by the main lever "15" so as to raise the tone arm clear of the record by means of the pickup lift cable. To adjust pickup for proper elevation, stop the changer "in-cycle" at the point where pickup is raised to the maximum height above the turntable plate, and has not moved outward; at this point adjust locknuts "C" to obtain 1 inch spacing between needle point and turntable top surface.


D. & E. Needle Landing on Record.—The relation of coupling between the tone arm vertical shaft and lever "20" determines the landing position of the needle on a 10 inch record. Position of eccentric stud "E" governs the landing of the needle on a 12 inch record; this, however, is dependent on the proper 10 inch adjustment.

To adjust for needle landing, place 10 inch record on turntable; push index lever to reject position and return to the 10 inch position; see that pickup locating lever "17" is tilted fully toward turntable; rotate mechanism through cycle until needle is just ready to land on the record; then see that pin "V" on lever "14" is in contact with "Step T" on lever "17." The correct point of landing is 4/8 inches from the nearest side of the turntable spindle; loosen the two screws "D" and adjust horizontal position of tone arm to proper dimension, being careful not to disturb levers "14" and "17." Leave approximately 1/32 inch end play between hub of lever "20" and pickup base bearing, and tighten the blunt nose screw "D"; run mechanism through several cycles as a check, then tighten cone pointed screw "D."

After adjusting for needle landing on a 10 inch record, place 12 inch record on turntable; push index lever to reject and return to 12 inch position; rotate mechanism through cycle until needle is just ready to land on the record; the correct point of landing is 5/8 inches from nearest side of spindle. If the landing is incorrect, turn stud "E" until the eccentric end adjust lever "14" will give correct needle landing. The eccentric end of the stud must always be toward the rest of the motorboard, otherwise incorrect landing may occur with 10 inch records.

F. & G. Record Separating Knife.—The upper plate (knife) "25" on each of the record posts serves to separate the lower record from the stack and to support the remaining records during the change cycle. It is essential that the spacing between the knife and the rotating record shelf "27" be accurately maintained. The spacing for the 10 inch record is nominally .055 inch, and for the 12 inch record it is .075 inch.

To adjust, rotate the knife to the point of minimum vertical separation from the record shelf and turn screw and lock nut "F" to give .052-.058 inch separation. Screw "G" must not be depressed during this adjustment. After setting screw "F," adjust screw "G" so that when its tip is depressed flush with top of record shelf, the vertical spacing between the knife, in its lowest rotational position, and the shelf, is .072-.078 inch.

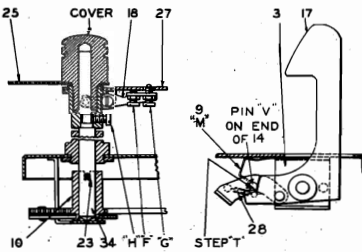

H. Record Support Shelf.—The record shelf revolves during the change cycle to allow the lower record to drop onto the turntable. Both posts are rotated simultaneously by a gear and rack coupled to the main lever "15," and it is necessary that adjustment be such that the record is released from both shelves at the same instant. To adjust, place a 12 inch record on the turntable, rotate mechanism into cycle to the point where both separating knives have turned clockwise as far as the mechanism will turn them; lift record upward until it is in contact with both separating knives. Then loosen screws "H" and shift record shelves "27" so that the curved inner edges of the shelves are uniformly spaced approximately 1/16 inch from the record edge. Some backlash will be present in the rotation of these shelves. They should be adjusted so that the backlash permits them to move away from the record but not closer than the approximate 1/16 inch specified above. Tighten the blunt nose screw "H," run mechanism through cycle several times to check action, then tighten cone pointed screw "H."

If record shelves or knives are bent, or not perfectly horizontal, improper operation and jamming of mechanism will occur.

J. Tone Arm Rest Support (not shown).—When the changer is out-of-cycle, the front lower edge of the pickup head should be 5/16 inch above surface of motorboard. This may be adjusted by bending the tone arm support bracket, which is associated with the tone arm mounting base, in the required direction.

K. Trip Pawl Stop Pin.—The position of the trip pawl stop pin "K" in relation to the main lever "15" governs the point at which the roller enters the cam. By bending the pin support either toward or away from trip pawl bearing stud, the roller can be made to enter the cam later or earlier, respectively. This adjustment should be made so that the roller definitely clears the cam outer guide as well as the nose of the cam plate.

Lubrication.—Petrolatum or petroleum jelly should be applied to cam, main gear, spindle pinion gear, and gears of record posts.

Light machine oil should be used in the tone arm vertical bearing, record post bearings, and all other bearings of various levers and pulleys on underside of motorboard. The turntable spindle bearing of RP-145 must be lubricated from the top of the motorboard. Using an oil can with a long spout, reach in between the turntable and motorboard and apply oil directly to the spindle.

On Model RP-139-A apply a few drops of light machine oil (S.A.E.-10) to the motor oil hole adjacent to the spindle bearing after each 1,000 hours of operation. The oil hole has a screw plug.

Do not allow oil or grease to come in contact with rubber mounting of tone arm base, rubber bumper, rubber spindle cap, or rubber parts of friction drive mechanism of Model RP-145.

STOCK No.	DESCRIPTION	Unit List Price
PICKUP ARM ASSEMBLIES		
33906	Arm—Pickup arm shell	.45
33977	Cable—Pickup shielded cable (8)	.50
33905	Crystal—Pickup cartridge and needle screw (RP-139-A only)	4.25
35171	Crystal—Pickup cartridge and needle screw (RP-145 only)	xx
33976	Pin—Used to fasten pivot arm in pickup arm shell	.03
33974	Screw—Needle screw	.15
33976	Shaft—Pickup pivot shaft and pivot arm	1.40
MOTOR ASSEMBLIES (Model RP-139A)		
32956	Coil—Field coil and laminations for 25 cycle motor	7.15
32955	Coil—Field coil and laminations for 50 cycle motor	5.90
32954	Coil—Field coil and laminations for 60 cycle motor	5.35
32960	Gear—Motor spindle gear and pin	.75
32873	Motor—Motor complete, 25 cycle, 110 volt AC	15.95
32872	Motor—Motor complete, 50 cycle, 110 volt AC	13.75
32871	Motor—Motor complete, 60 cycle, 110 volt AC	13.25
30870	Plug—2 prong male plug—used on motor leads	.35
32959	Spindle—Turntable spindle complete with metal pinion and fibre gear for 25 cycle motor	2.90
32958	Spindle—Turntable spindle complete with metal pinion and fibre gear for 50 cycle motor	2.90
32957	Spindle—Turntable spindle complete with metal pinion and fibre gear for 60 cycle motor	2.80
32875	Switch—Motor control switch	.30
MOTOR ASSEMBLIES (Model RP-145)		
34613	Armature—Complete armature and shaft for 60 cycle motor	xx
34612	Cap—Bakelite cap for motor	xx
34368	Capacitor—125 and 150 microfarad motor (38)	1.75
34364	Motor—105/125 volts, 60 cycle, complete with capacitor (37)	6.75
30870	Plug—3 prong male plug for motor leads	.35
MOTORBOARD ASSEMBLIES (Model RP-139A)		
33981	Base—Pickup arm mounting base	.60
33978	Board—Motorboard complete with bearings and posts less operating mechanism	6.50
33909	Cup—Used needle cup, lid, and pickup arm rest (6)	1.00
33979	Escutcheon—Index escutcheon	.50
31150	Mounting—Pickup arm base rubber mounting complete	.45
31155	Spring—Used needle cup lid spring (48)	.04
MOTORBOARD ASSEMBLIES (Model RP-145)		
33981	Base—Pickup arm mounting base	.60
34363	Board—Motorboard complete with bearings and posts—less operating mechanism	6.70
33909	Cup—Used cup, lid, and pickup arm rest (6)	1.00
33979	Escutcheon—Index escutcheon	.50
31150	Mounting—Pickup arm base rubber mounting complete	.45
31155	Spring—Used needle cup lid spring (48)	.04
32875	Switch—Motor switch (4)	.30
OPERATING MECHANISM		
10129	Ball—Steel ball for turntable bearing (Model RP-145)	.02
33984	Bracket—Record discriminating lever mounting bracket (3)	.20
33987	Cam—Cam and drive gear (48)	2.00
34369	Cam—Turntable bearing cam (Model RP-145) (36)	.35
32883	Damper—Rubber drive sleeve and damper plate for motor spindle (Model RP-139A) (45, 46)	.30
34367	Disc—Turntable drive disc and arm (Model RP-145) (28)	2.25
31118	Finger—Trip lever friction finger (7)	.45
32879	Gear—Long arm and rack gear (41)	.60
31121	Gear—Record separator shaft gear (10)	.80
32880	Gear—Short arm and rack gear (41)	.60
34368	Grommet—Rubber grommet for motor mounting (Model RP-145) (49)	.08
31151	Guide—Lift cable spring guide (11)	.10
34370	Guide—Main spring guide (11)	.10
33982	Idler—Turntable idler wheel and arm (Model RP-145) (39)	.60
33988	Lever—Index lever (18)	.70
33989	Lever—Landing lever (18)	.70
33995	Lever—Main lever (15)	1.05
33993	Lever—10-inch and 12-inch record discriminating lever (17)	.85
31140	Lever—Pickup lift cable lever and spring (16)	.50
31130	Lever—Record separator elevating lever with adjustment screws (18)	.85
31132	Lever—Trip detaining lever (19)	.30
34374	Lever—Trip lever assembly (20)	1.85
31131	Lever—Trip regulator lever (21)	.25
30892	Link—Index lever setting link and button	.20
31137	Pawl—Index lever pawl (15)	.30
31133	Pawl—Trip pawl assembly (52)	.80
31535	Pin—Drive pin for turntable drive disc (Model RP-145) (54)	.03
31124	Pin—Pin to fasten gear on record separator shaft (23)	.04
31119	Screw—Cone pointed set screw for record separator shaft (19)	.06
14936	Screw—No. 10-32 cone pointed set screw for trip lever hub ("D")	.05
33983	Screw—Record separator elevating lever pivot screw	.15
31117	Screw—Special to adjust friction clutch	.05
33990	Separator—Index separator (25)	1.85
33988	Shaft—Record separator shaft (34)	.70
33989	Shaft—Record separator shaft (37)	1.25
3676	Spring—Cam gear pawl spring	.04
31138	Spring—Index lever pawl spring (50)	.05
3698	Spring—Lift cable spring (31)	.04
32436	Spring—Locating lever spring (35)	.05
36982	Spring—Main lever tension spring (43)	.05
34376	Spring—Pickup arm starting spring (28)	.10
14190	Spring—Record discriminating lever pawl spring or locating lever pawl spring (33)	.08
33994	Spring—Record discriminating lever spring (34)	.05
34372	Spring—Trip detaining lever spring (35)	.04
14191	Spring—Turntable idler wheel spring (Model RP-145) (47)	.10
34371	Support—Turntable drive and motor support (Model RP-145)	.70
34375	Switch—Pickup shorting switch (44)	.45
33991	Turntable—(Model RP-139A)	3.00
34366	Turntable and Spindle Shaft—(Model RP-145) (32)	3.35
34373	Washer—Cup washer for mounting idler wheel and arm (Model RP-145)	.03

xx Price upon application to your RCA Victor Parts Distributor. ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

MODEL RP139A





MODEL RP145

Assembly, Ratings

RCA MFG. CO., INC.



These record changers are available for operation on voltages and frequencies as follows:

RP-139-A.....	105-125 volts, 60 cycles, 21 watts
RP-139-A.....	105-125 volts, 50 cycles, 21 watts
RP-139-A.....	105-125 volts, 25 cycles, 22 watts
RP-145.....	105-125 volts, 60 cycles, 15 watts
RP-145.....	105-125 volts, 50 cycles, 15 watts

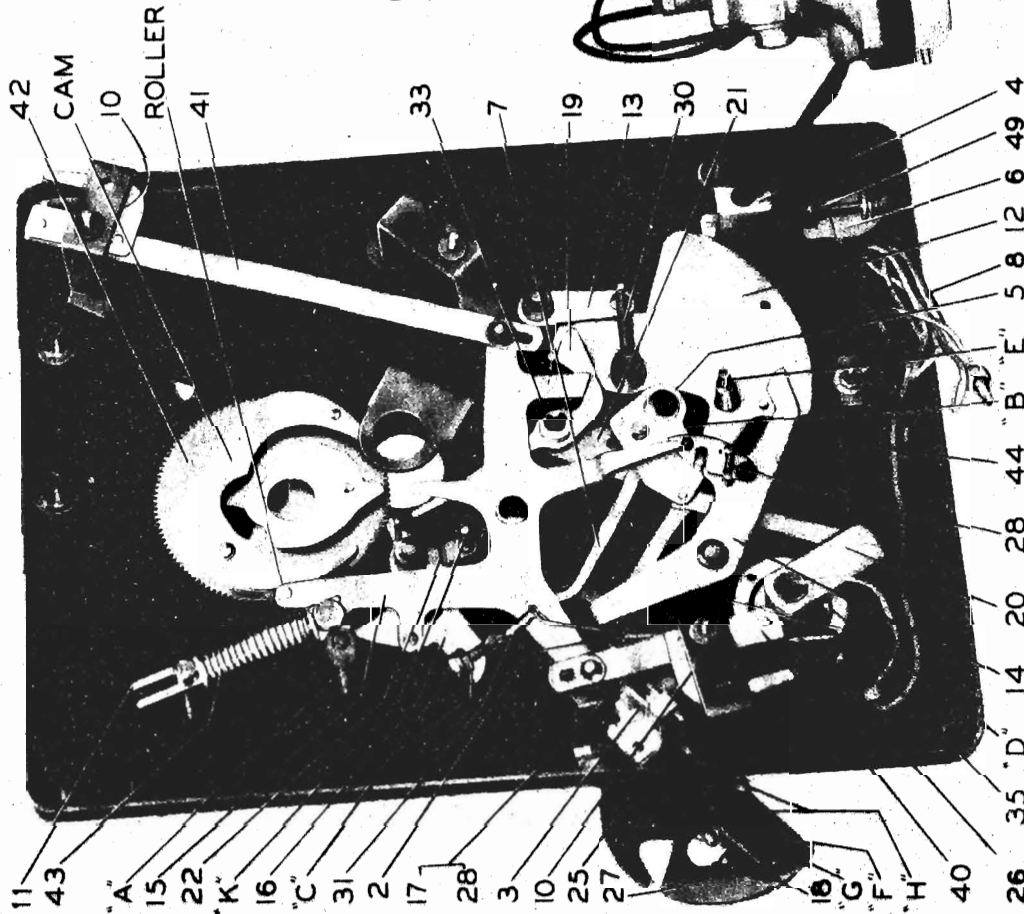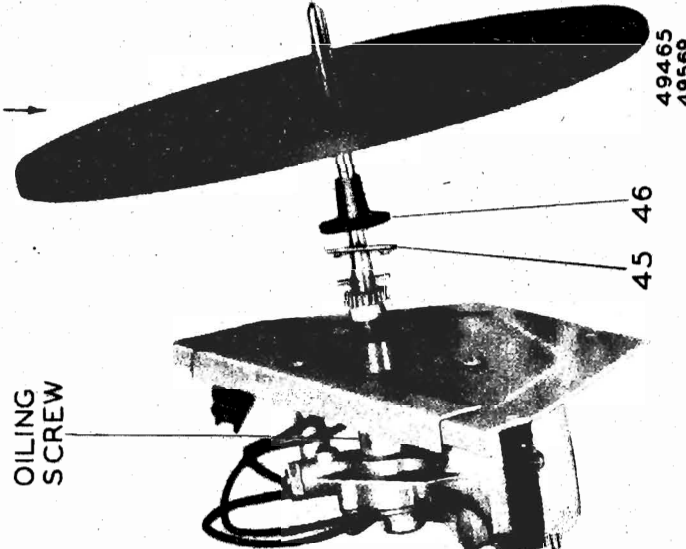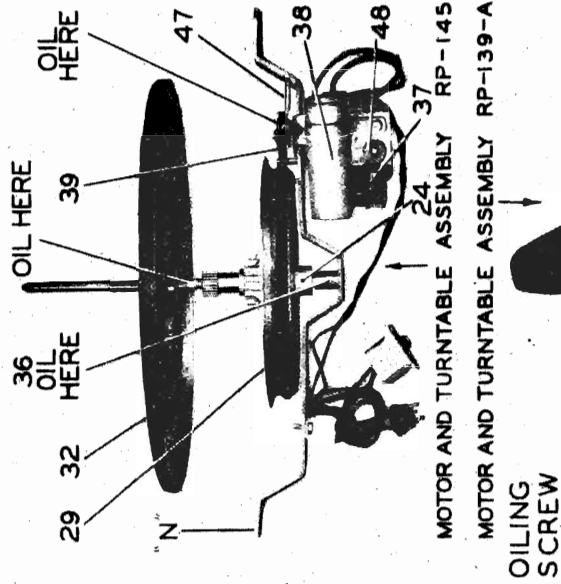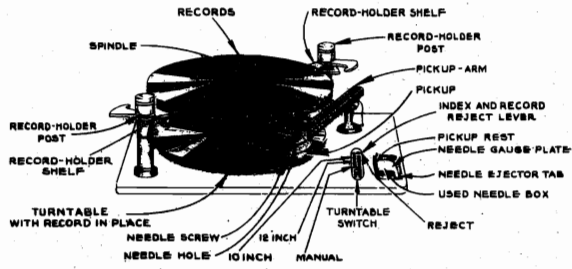

RCA MFG. CO., INC.

MODEL 5Q66
Ch RC-477C
Schematic, Voltage

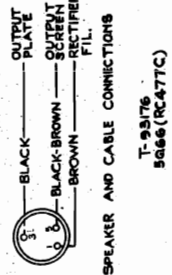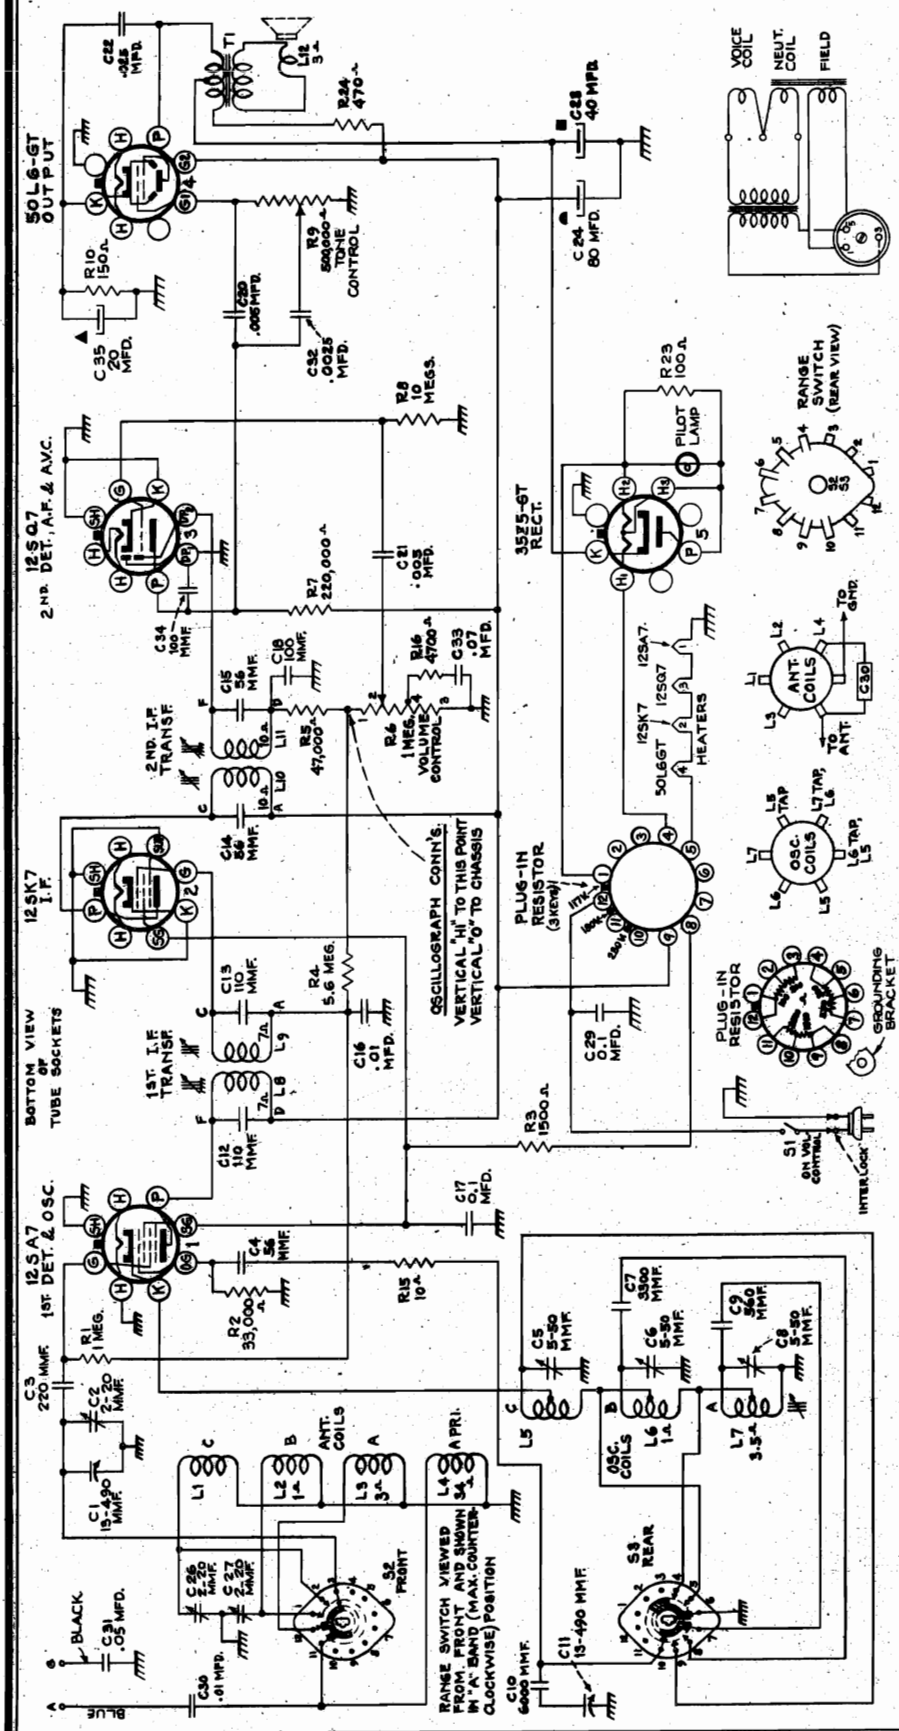

— 1940 —
First Edition

VOLTAGES SHOULD HOLD WITHIN ± 20%.
 * CANNOT BE MEASURED WITH AN ORDINARY VOLTMETER.

TUBES	117 V. SUPPLY		180 V. SUPPLY		230 V. SUPPLY	
	VOLTAGE	CURRENT	VOLTAGE	CURRENT	VOLTAGE	CURRENT
(1) 12SA7	106	89	98	12.8	146	87
(2) 12SK7	106	89	96	17.5	146	87
(3) 12SQ7	58*	—	70*	—	74*	—
(4) 50L6-GT	11.4	106	137	6.3	157	146
(5) 35Z5-GT	—	119	150	80.0	—	160
						83.0

POWER SUPPLY RATINGS
 105-125 volts 30 watts
 160-180 volts 45 watts
 210-250 volts 60 watts

PILOT LAMP Mazda No. 47, 6.3 volts, 0.15 amp.
 Ballast Tube RCA Stock No. 35748

POWER OUTPUT RATING
 (210-250 Volt Operation)
 Undistorted 3.0 watts
 Maximum 4.5 watts

LOUSPEAKER (84905-501)
 Type 5-inch
 V. C. Impedance 4.5 ohms at 400 cycles

FREQUENCY RANGES
 Standard Broadcast ("A" Band) . 540-1,720 kc (555-174 m)
 Medium Wave ("B" Band) 2.3-7.0 mc (130-42.8 m)
 Short Wave ("C" Band) 7.0-22 mc (42.8-13.6 m)

INTERMEDIATE FREQUENCY 455 kc

MODEL 5Q66
Alignment, Trimmers
Socket

RCA MFG. CO., INC.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver ground lead (black), and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 135° mark on the drum scale must be vertical, and directly under the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of a set screw, which must be tightened securely when the drum is in the correct position.


Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the 0° mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the

530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.


Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	12SK7 I-F grid in series with .01 mfd.	455 kc	"A" Band quiet point between 550-750 kc	L10 and L11 (2nd I.F. trans.)
2	Tuning condenser stator (osc.) in series with .01 mfd. **	455 kc		L8 and L9 (1st I.F. trans.)
3	Antenna lead in series with 200 mmfd.	600 kc	600 kc (33°) "A" Band	L7†
4		1,500 kc	1,500 kc (152.4°) "A" Band	C2 (ant.) C8 (osc.)
5	Repeat steps 3 and 4			
6	Antenna lead in series with 400 ohms	20 mc	20 mc (155.4°) "C" Band	C5 (osc.)* C26 (ant.)
7		6 mc	6 mc (148°) "B" Band	C6 (osc.)* C27 (ant.)
8	Antenna lead in series with 200 mmfd.	1,500 kc	1,500 kc (152.4°) "A" Band	C8 (osc.)

* Use minimum capacity peak if two peaks can be obtained.
 † Rock gang condenser slightly while adjusting L7.
 ** Make test-oscillator connection to lug on tuning condenser stator (oscillator section) in series with .01 mfd. condenser.
 Note.—Oscillator tracks 455 kc above signal on all bands.

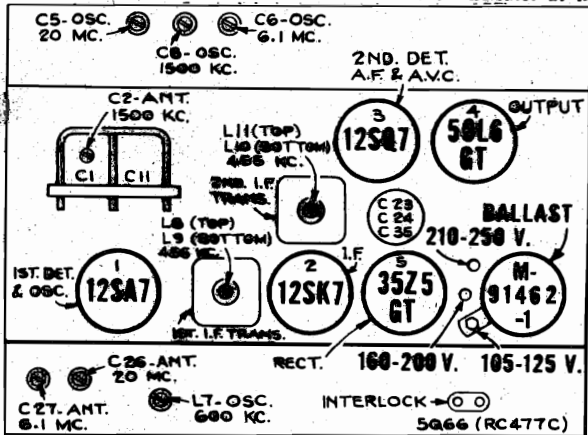


Above—Top View

At Right—Dial Mechanism

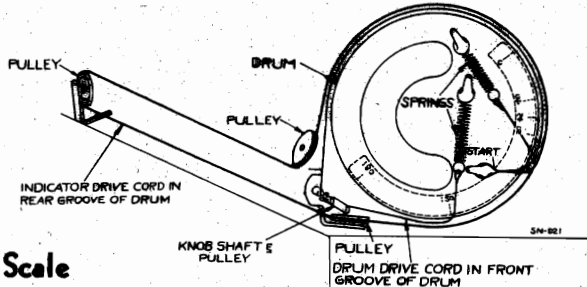

Calibration Scale

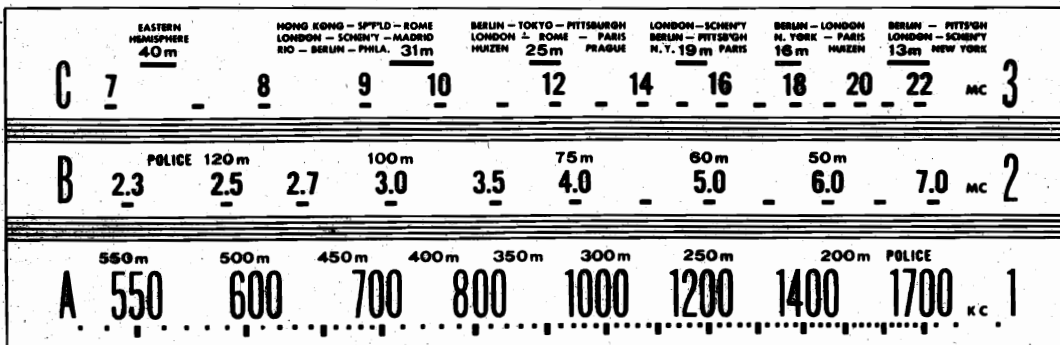


Reduced Reproduction of Receiver Dial, and Corresponding 0-180° Calibration Scales

The corresponding position of the dial indicator for any setting of the calibration scale can be determined by drawing a line from this point on the bottom calibration scale to the same point on the top calibration scale. For example: 33° on the calibration scale corresponds to approximately 7.9 mc on "C" band, and 600 kc on "A" band, etc. Read instructions under "Alignment Procedure."

RCA MFG. CO., INC.

MODEL 7Q4X
Ch. RC-502
Schematic

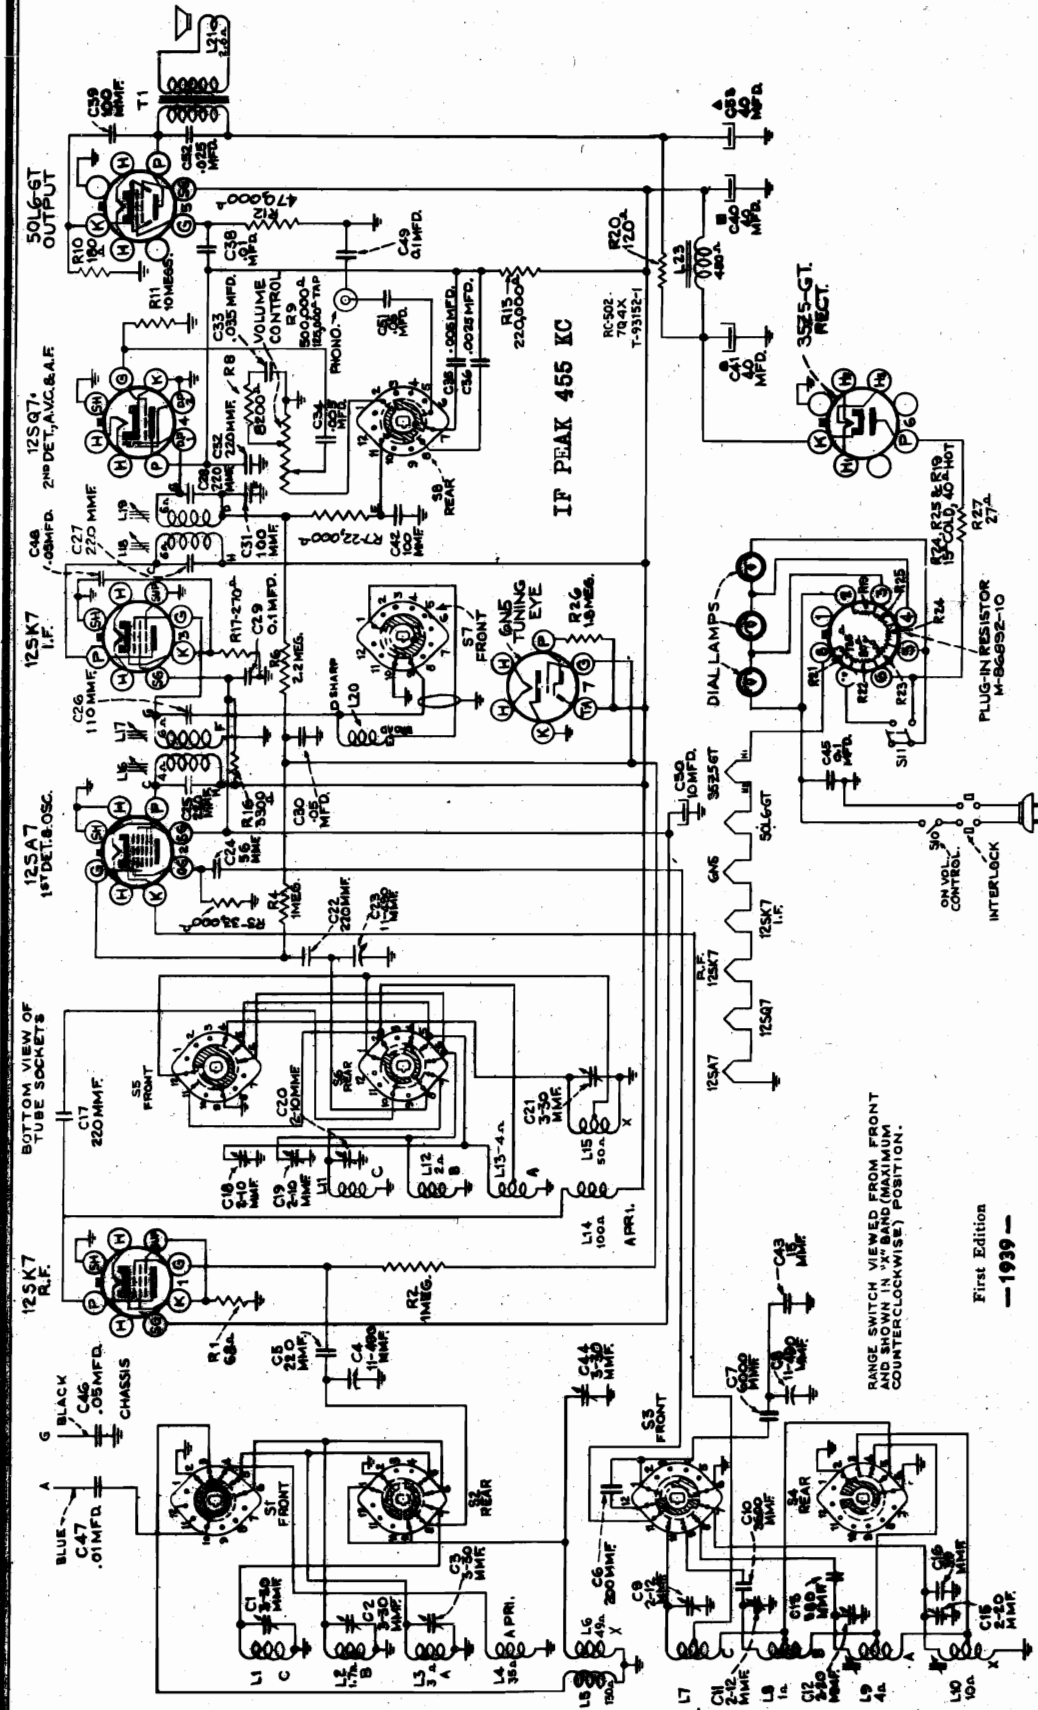

FREQUENCY RANGES

"X" Band.....	145-405 kc (2,069-740 m)
Standard Broadcast ("A").....	540-1,720 kc (555-174 m)
"B" Band.....	2.3-7.0 mc (130-42.8 m)
"C" Band.....	7.0-22.0 mc (42.8-13.6 m)
INTERMEDIATE FREQUENCY	455 kc

POWER SUPPLY RATINGS

160-200 volts, 40-100 cycles.....	60 watts
160-200 volts, Direct Current	70 watts
210-250 volts, 40-100 cycles	70 watts
210-250 volts, Direct Current	70 watts


Pilot Lamps (3)..... Mazda No. 47, 6.3 volts, .15 amp. LOUSPEAKER (RL-90-1)

Type.....	8-inch permanent magnet dynamic
Voice Coil Impedance.....	2.6 ohms at 400 cycles
Power Output Rating	70 watts Undistorted..... 3.5 watts Maximum
.....	4.5 watts

First Edition
-1939-

MODEL 7Q4X
Chassis Wiring, Voltage
Phono. Data, Lead Dress

RCA MFG. CO., INC.

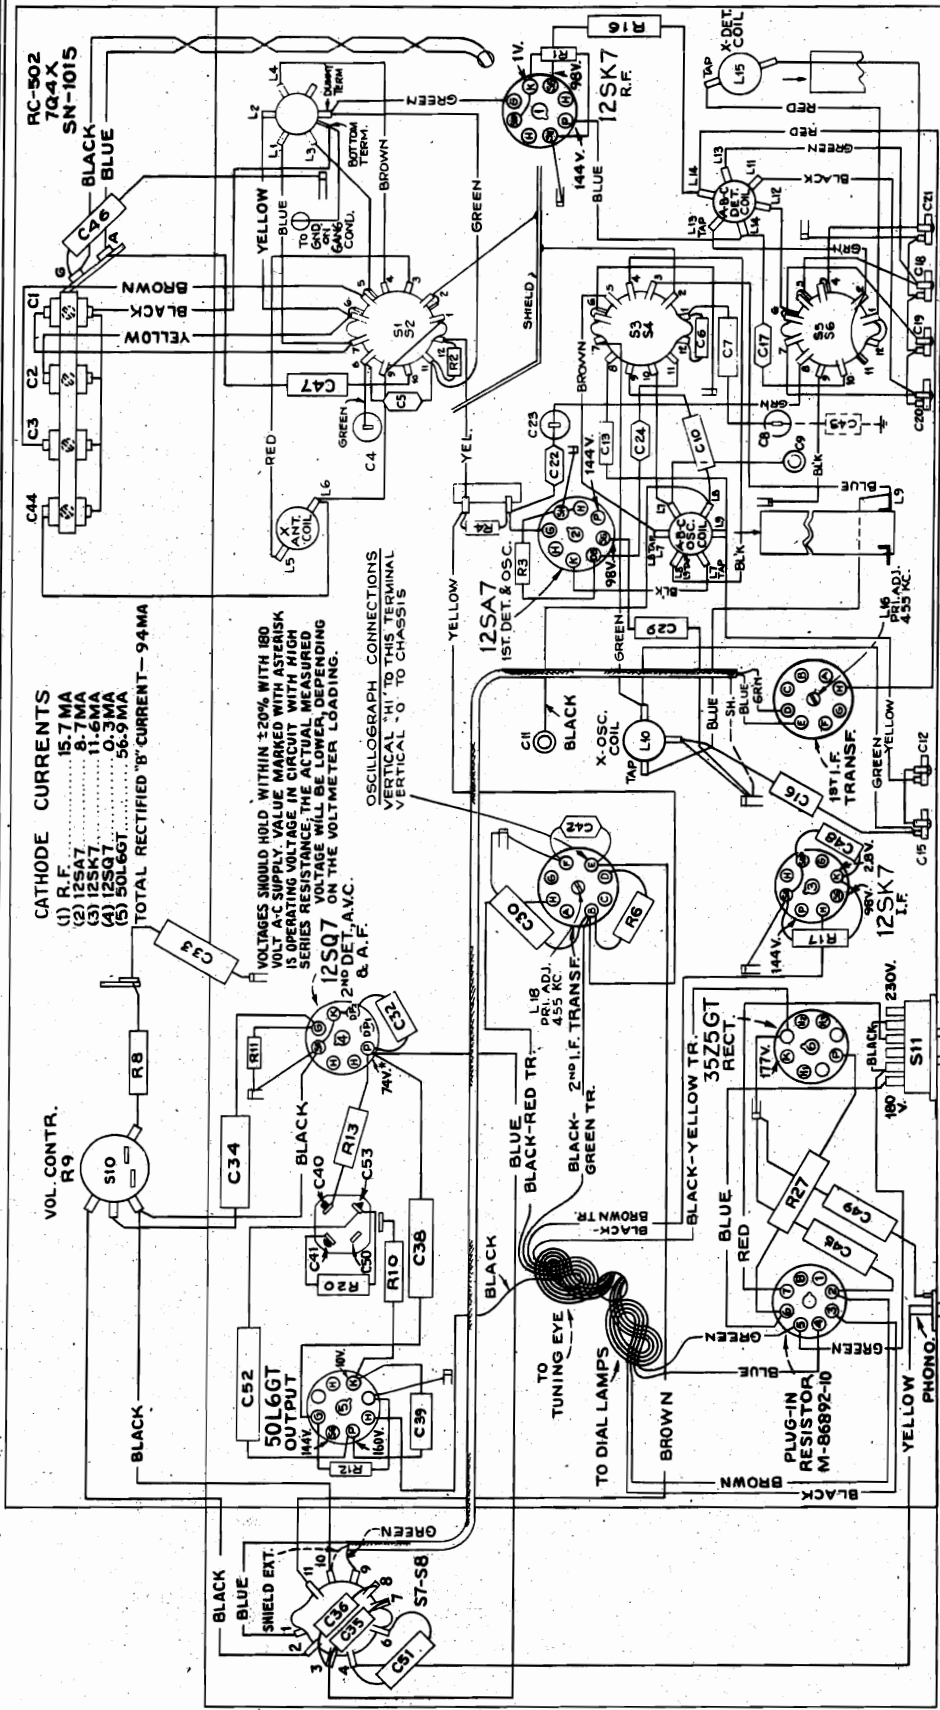

CATHODE CURRENTS

(1) R.F.	15.7 MA
(2) 12SA7	8.7 MA
(3) 12SK7	11.6 MA
(4) 12SQ7	0.3 MA
(5) 50L6GT	56.9 MA

TOTAL RECTIFIED "B" CURRENT - 94 MA

VOLTAGES SHOULD HOLD WITHIN ±20% WITH 180 VOLT A.C. SUPPLY. VALUE MARKED WITH ASTERISK IS OPERATING VOLTAGE IN CIRCUIT WITH HIGH SERIES RESISTANCE. THE ACTUAL MEASURED VOLTAGE WILL BE LOWER, DEPENDING ON THE VOLTMETER LOADING.

OSCILLOGRAPH CONNECTIONS
VERTICAL "HI" TO THIS TERMINAL
VERTICAL "O" TO CHASSIS

BOTTOM VIEW - REAR OF CHASSIS
R-F WIRING AND SOCKET VOLTAGES

- RCA TUBE COMPLEMENT**
- (1) RCA-12SK7..... R-F Amplifier
 - (2) RCA-12SA7..... 1st Detector, Oscillator
 - (3) RCA-12SK7..... 1st Amplifier
 - (4) RCA-12SQ7... 2nd Detector, A.V.C., Audio Amplifier
 - (5) RCA-50L6GT..... Output
 - (6) RCA-35Z5GT..... Rectifier
 - (7) RCA-6N5..... Tuning Indicator

2. Dress the brown lead from terminal E on the 2nd I-F transformer to terminal 11 on S8 against the chassis.
3. Dress the phono lead from phono jack to switch along the side of the chassis.
4. Dress the filament lead from No. 8 of the 12SQ7 to 12SK7 R.F. behind the 12SQ7 socket and away from diode and plate.
5. Dress C-34 and R-11 along chassis above volume control.

Phonograph Operation:
A jack is provided on the rear of the chassis for connection to a phonograph attachment. The cable from the phonograph attachment should be terminated in a Stock No. 31048 plug to fit the jack.
The attachment must be designed to operate on the particular voltage and frequency of the power supply line. (Most attachments are for alternating current only, and can not be used on direct current.)

Precautionary Lead Dress:
1. Dress the black diode lead running between the 12SQ7 and terminal G on the 2nd I-F transformer, directly against the chassis.

Caution!
Before replacing ballast resistor, check rectifier and plate circuits to be sure that there are no shorts which would cause the ballast to burn out.

MODELS 8QB, 8QBK

Ch. RC-336

Alignment, Trimmers

Socket

RCA MFG. CO., INC.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.


Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver ground terminal (G), and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.


As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The surface of the drum must be flush with the end of the gang-condenser shaft. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "180°" mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the left-hand end mark on the dial scales and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

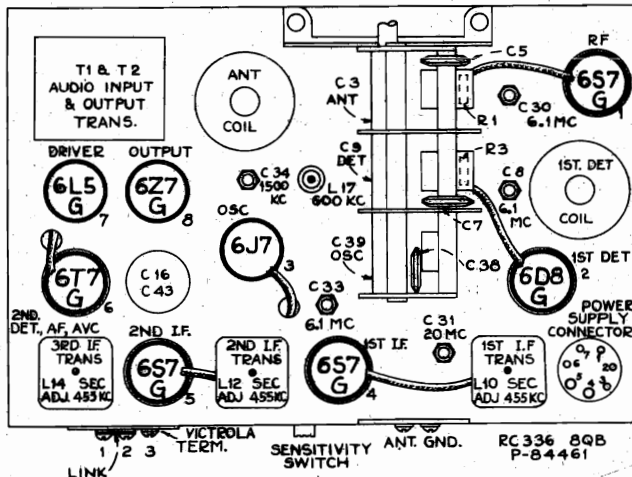

Top View, Showing Location of Tubes and Trimmers

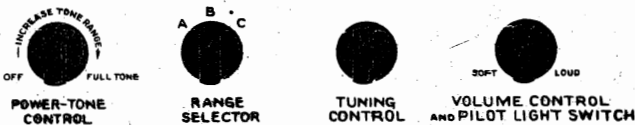

Location of Controls

The pilot lights are illuminated by pressing in the volume-control knob. (The pilot lights are not controlled by this action when the receiver is operated with the CV-110 a-c power supply unit.) Sensitivity switch is on rear of chassis.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
Leave the sensitivity switch open (minimum sensitivity) during all alignment operations.				
1	6S7-G 2nd-I.F. grid cap, in series with .01 mfd.	455 kc	"B" band, Quiet point.	L13 and L14 (3rd I-F Trans.)
2	6S7-G 1st-I.F. grid cap, in series with .01 mfd.			L11 and L12 (2nd I-F Trans.)
3	6D8-G 1st-det. grid cap, in series with .01 mfd.			L9 and L10 (1st I-F Trans.)
4	Antenna Terminal, in series with 300 ohms	6.1 mc	6.1 mc (29°) "B" band	C33 (osc.)* C8 (det.)* C30 (ant.)
4A	Check to determine that C33 has been adjusted to correct peak by turning radio to 5.19 mc (50°), where a weaker signal should be received.			
5	Antenna Terminal, in series with 300 ohms	20 mc	20 mc (23.5°) "C" band	C31 (osc.)*
5A	Check to determine that C31 has been adjusted to correct peak by turning radio to 19.09 mc (29.5°), where a weaker signal should be received.			
6	Antenna Terminal, in series with 200 mmf.	1,500 kc	1,500 kc (31°) "A" band	C34 (osc.)*
7	Antenna Terminal in series with 200 mmf.	600 kc	600 kc (144.5°) "A" band	L17 (osc.)††
8	Repeat Step No. 6.			

* Use minimum capacity peak (plunger out) if two peaks can be obtained.

† Rock the gang condenser slightly while adjusting C8, and use maximum capacity peak if two peaks can be obtained.

†† Rock the gang condenser slightly while adjusting L17 for maximum output.

NOTE: The oscillator tracks 455 kc above the signal on all bands.


MODELS 8QB, 8QBK
Chassis Wiring, Voltage
SPU Schematics

RCA MFG. CO., INC.

Bottom View of Chassis, with R-F Wiring Diagram and Socket Voltages


Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within $\pm 20\%$ with 6-volt d-c supply.

NOTE: Values with star () are operating voltages in circuits with high series resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

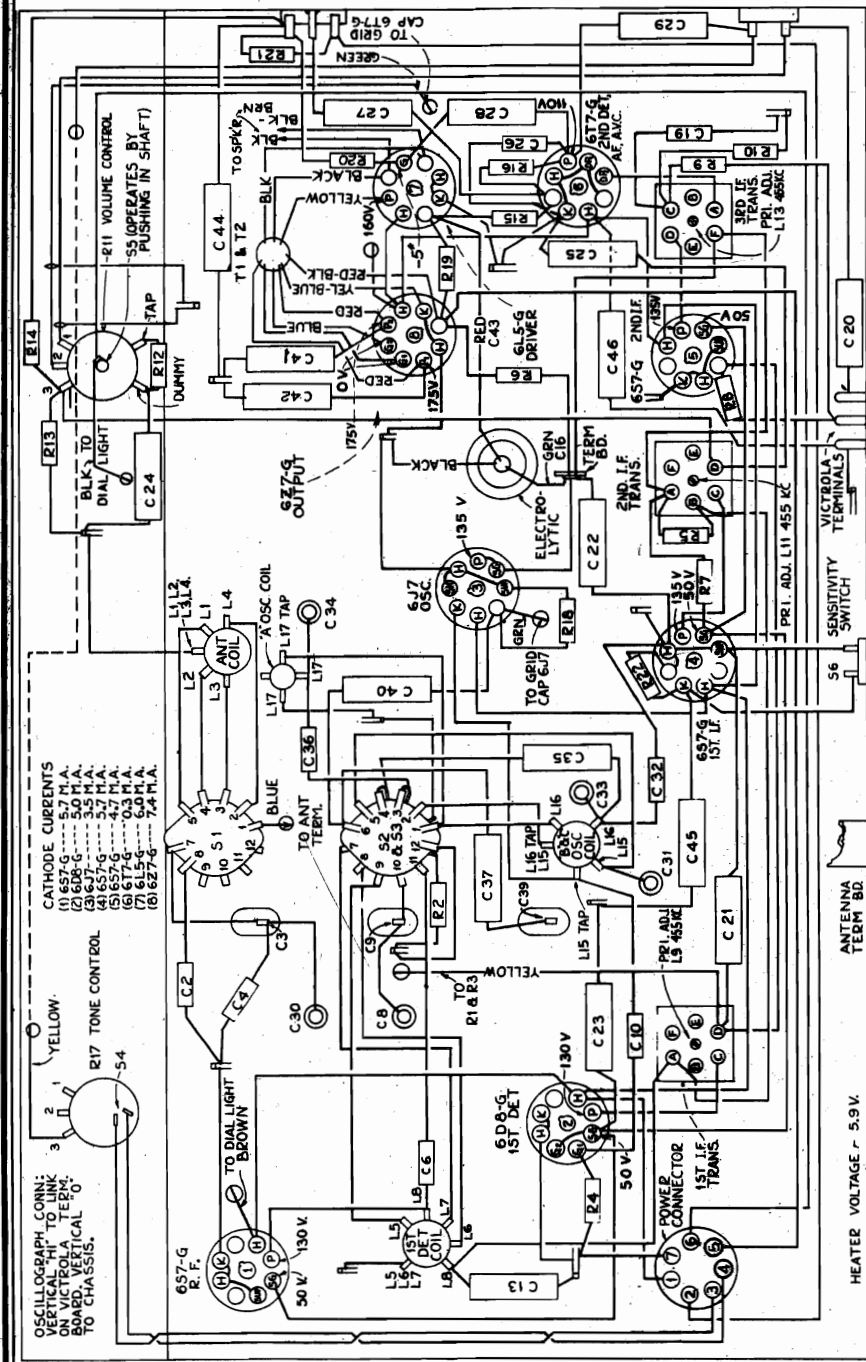


CATHODE CURRENTS


(1) 6X4-G	5.0 M.A.
(2) 6X4-G	5.0 M.A.
(3) 6X5-G	3.5 M.A.
(4) 6X5-G	3.5 M.A.
(5) 6X4-G	4.7 M.A.
(6) 6X4-G	4.7 M.A.
(7) 6X5-G	6.0 M.A.
(8) 6X5-G	7.4 M.A.

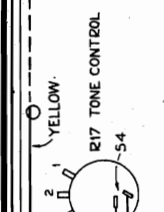

CV-110 A-C Power Supply Unit

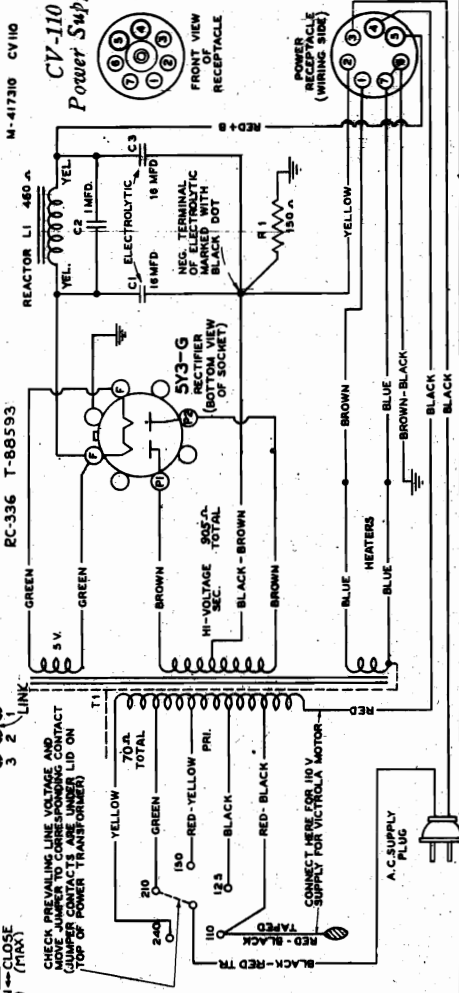


Vibrator-Type Power Supply Unit

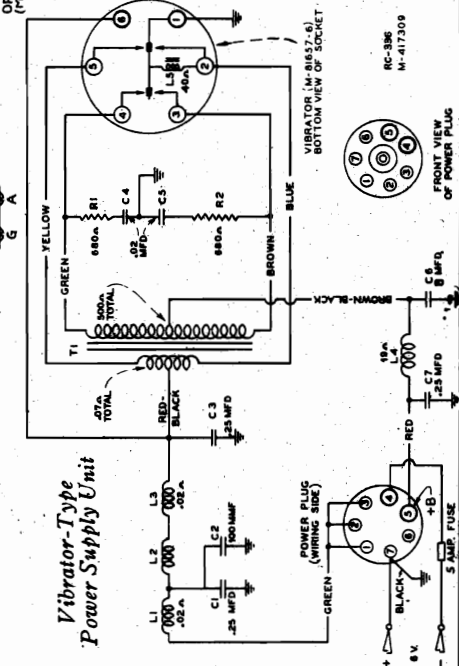

RCA MFG. CO., INC.

MODELS 8Q2, Ch. RC-443
8QU5C, 8QU5M, Ch. RC-443B
Schematic, Lead Dress

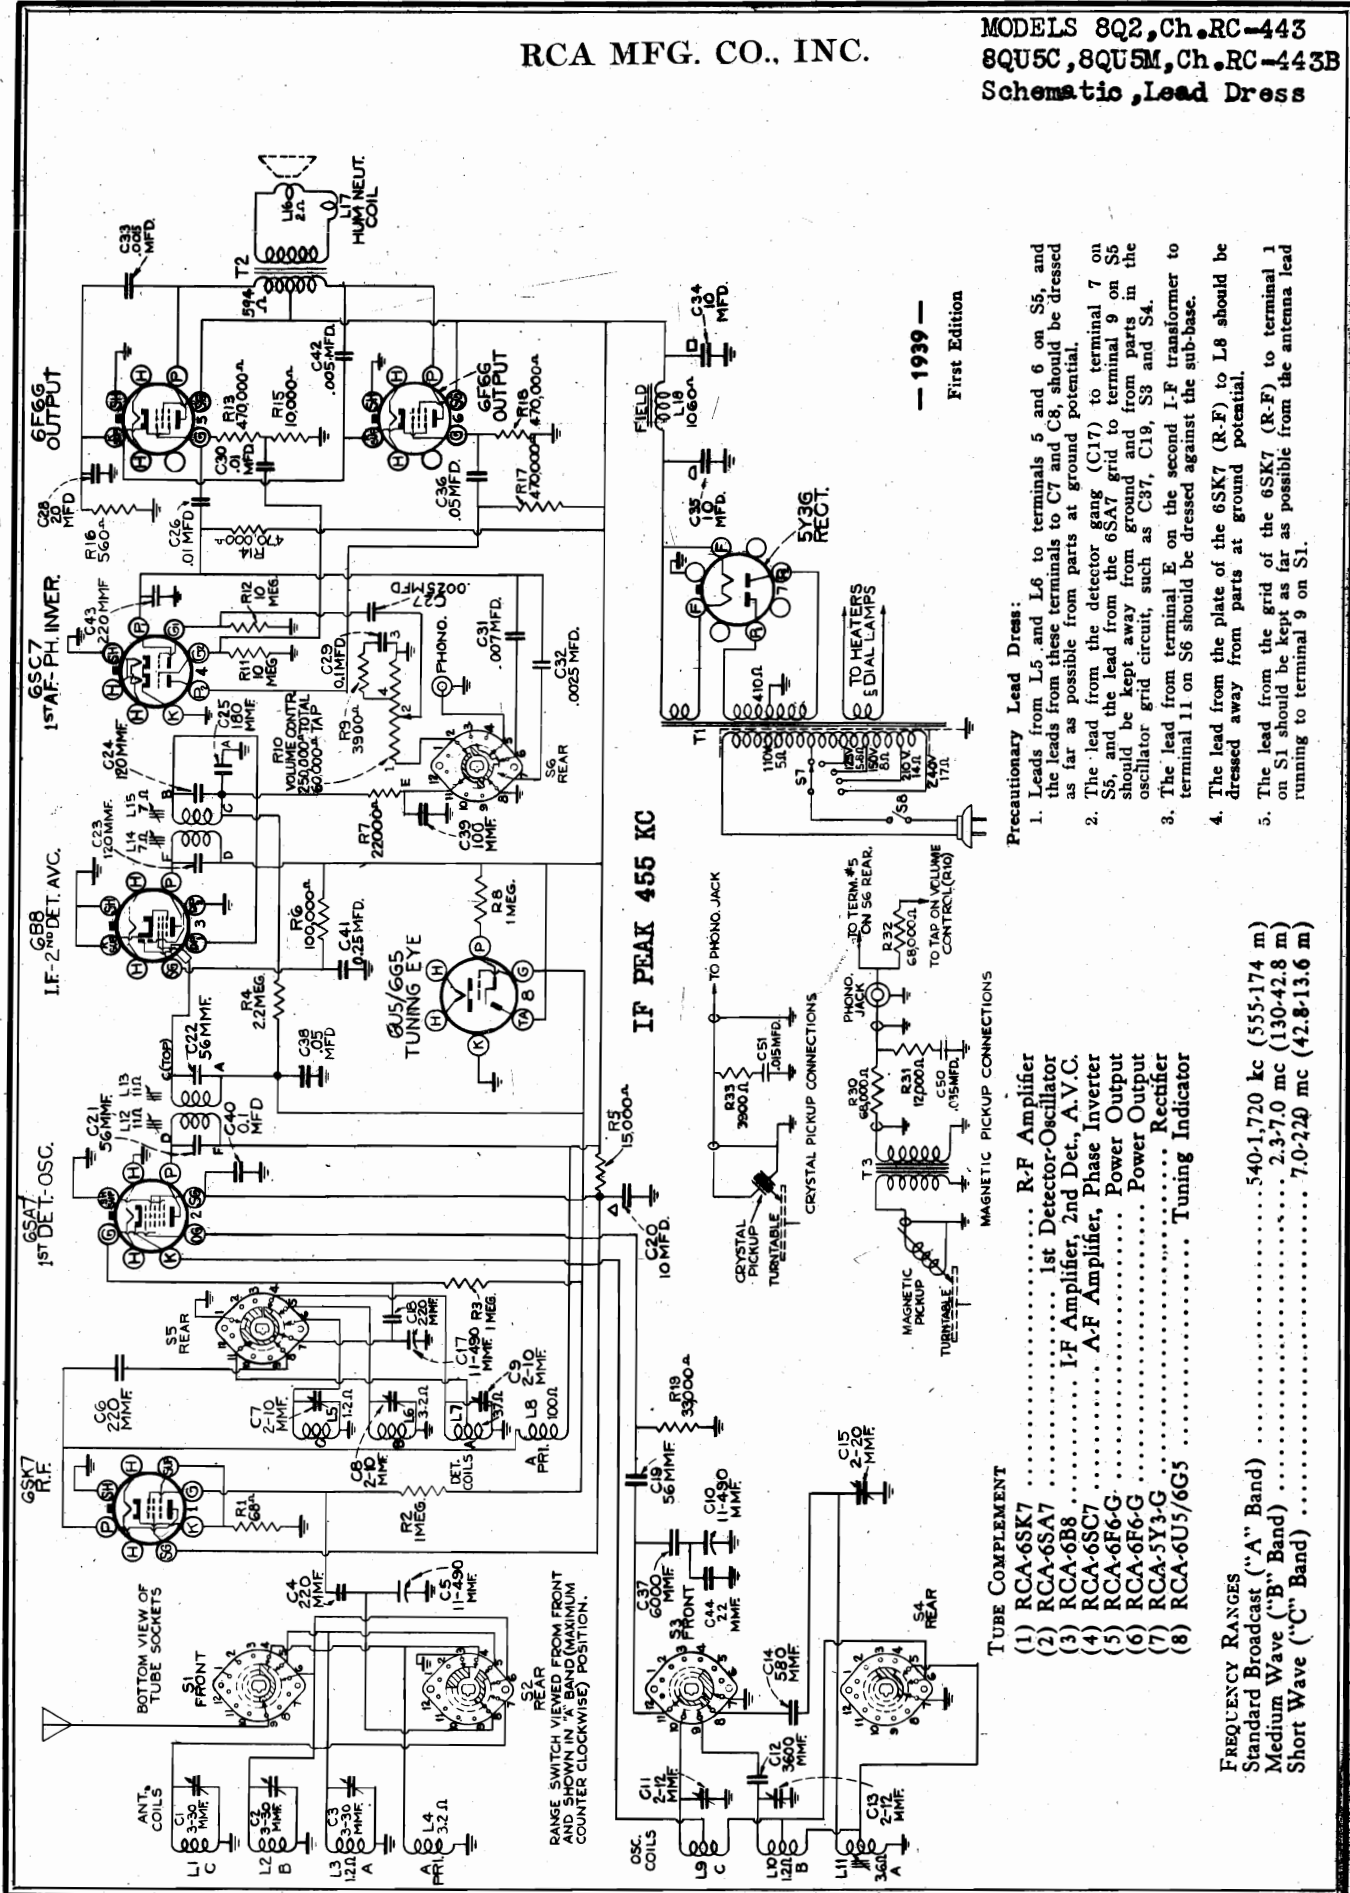

— 1939 —
First Edition


- Precautionary Lead Dress:**
1. Leads from L5 and L6 to terminals 5 and 6 on S5, and the leads from these terminals to C7 and C8, should be dressed as far as possible from parts at ground potential.
 2. The lead from the detector gang (C17) to terminal 7 on S5, and the lead from the 6SA7 grid to terminal 9 on S5 should be kept away from ground and from parts in the oscillator grid circuit, such as C37, C19, S3 and S4.
 3. The lead from terminal E on the second I.F. transformer to terminal 11 on S6 should be dressed against the sub-base.
 4. The lead from the plate of the 6SK7 (R-F) to L8 should be dressed away from parts at ground potential.
 5. On S1 should be kept as far as possible from the antenna lead running to terminal 9 on S1.

- TUBE COMPLEMENT**
- (1) RCA-6SK7 R-F Amplifier
 - (2) RCA-6SA7 1st Detector-Oscillator
 - (3) RCA-6B8 I-F Amplifier, 2nd Det., A.V.C.
 - (4) RCA-6SC7 A-F Amplifier, Phase Inverter
 - (5) RCA-6F6-G Power Output
 - (6) RCA-6F6-G Power Output
 - (7) RCA-5Y3-G Rectifier
 - (8) RCA-6U5/6G5 Tuning Indicator

- FREQUENCY RANGES**
- Standard Broadcast ("A" Band) 540-1,720 kc (555-174 m)
 - Medium Wave ("B" Band) 2.3-7.0 mc (130-42.8 m)
 - Short Wave ("C" Band) 7.0-22.0 mc (42.8-13.6 m)

MODELS 8Q2, 8QU5C, 8QU5M
Chassis Wiring, Voltage

RCA MFG. CO., INC.


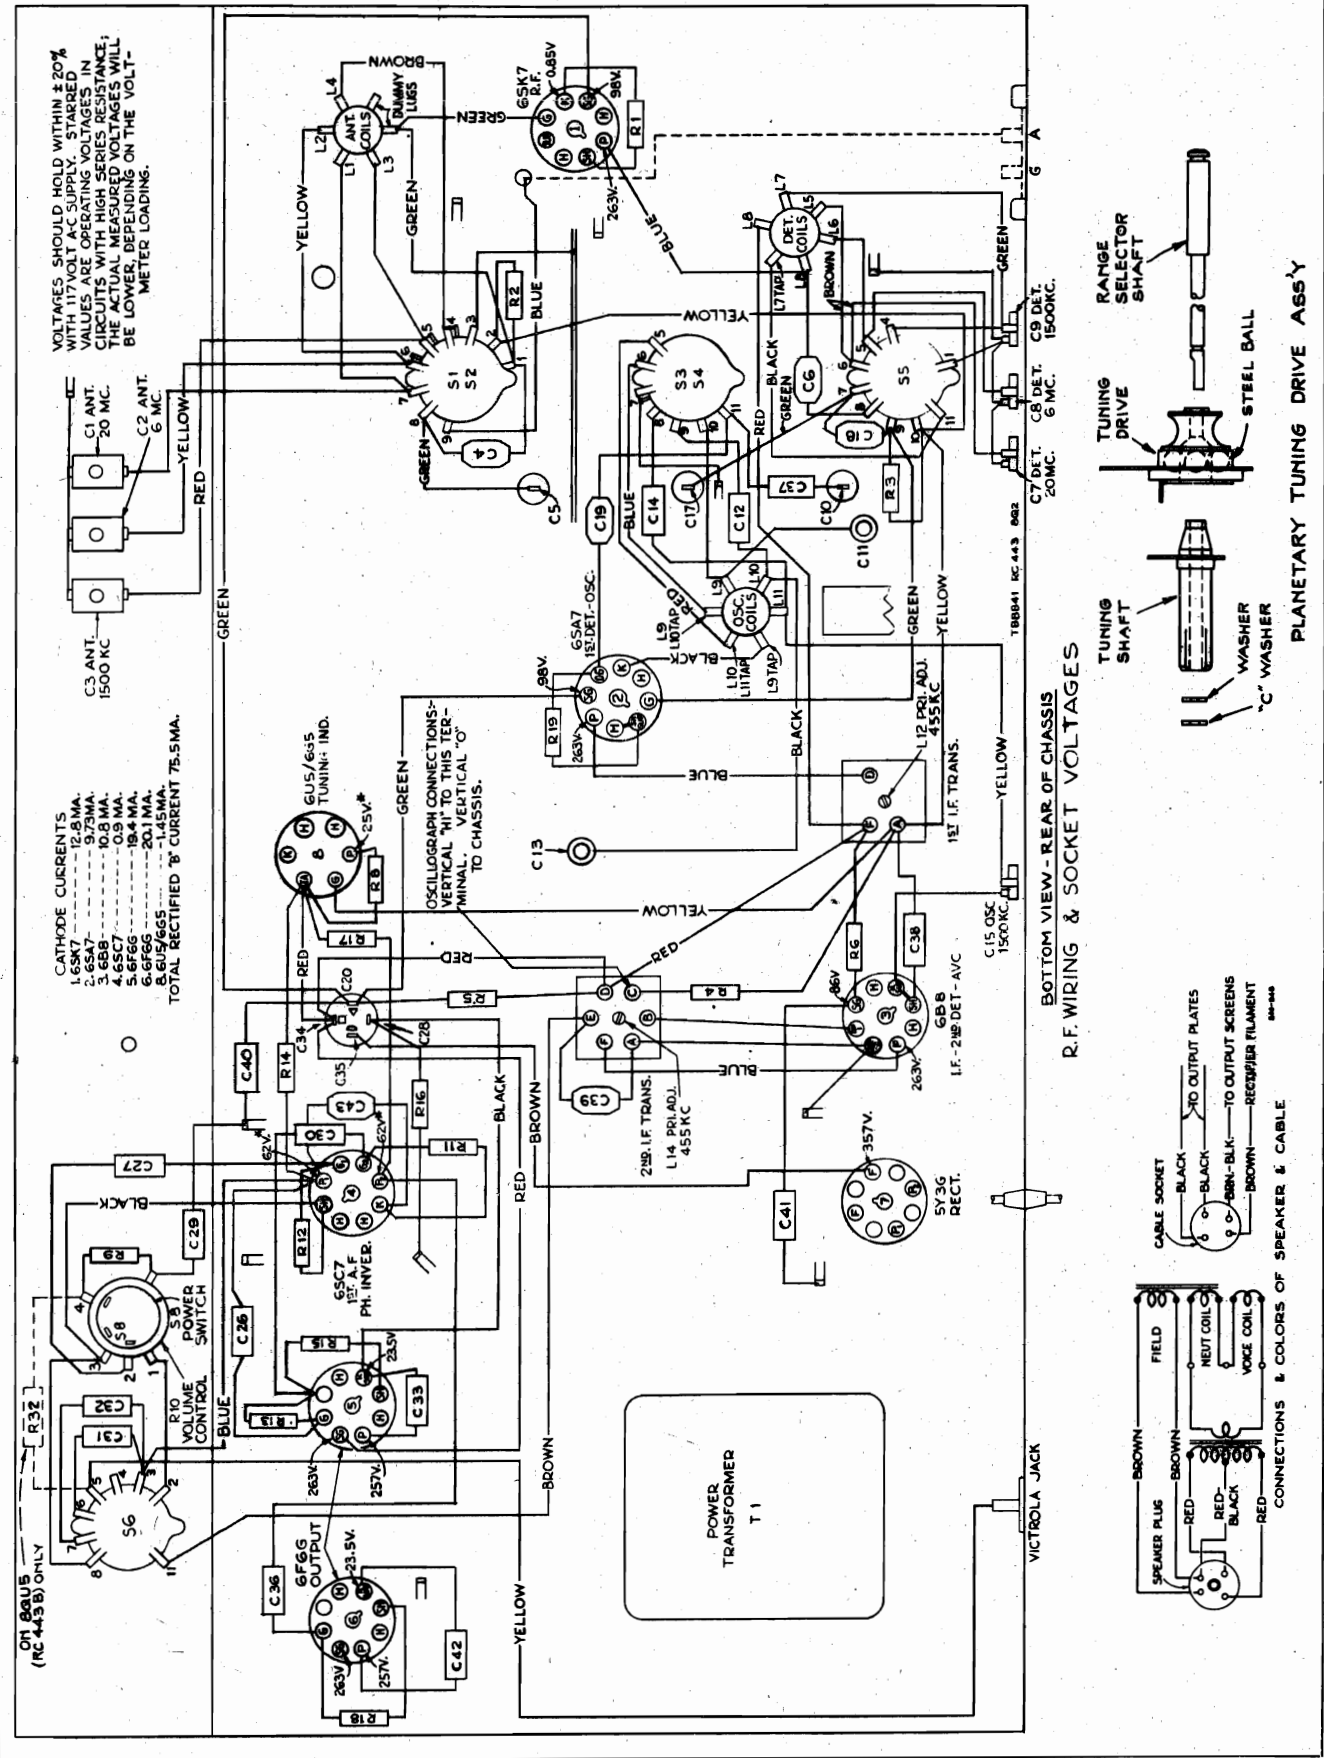


VOLTAGES SHOULD HOLD WITHIN ±20% OF VALUES GIVEN. OPERATING VOLTAGES IN CIRCUITS WITH HIGH SERIES RESISTANCE, THE ACTUAL MEASURED VOLTAGES WILL BE LOWER, DEPENDING ON THE VOLT-METER LOADING.

CATHODE CURRENTS
 1. 6X47 ----- 12.8 MA.
 2. 6X47 ----- 9.75 MA.
 3. 6SC7 ----- 0.8 MA.
 4. 6SC7 ----- 0.8 MA.
 5. 6F6G ----- 19.4 MA.
 6. 6F6G ----- 20.1 MA.
 7. 6G5/6G5 ----- 1.45 MA.
 8. 6G5/6G5 ----- 1.45 MA.
 TOTAL RECTIFIED B' CURRENT 75.5 MA.

OSCILLOGRAPH CONNECTIONS--
 VERTICAL "M" TO THIS TERMINAL,
 "MINI." VERTICAL "O"
 TO CHASSIS.

BOTTOM VIEW - REAR OF CHASSIS
 R.F. WIRING & SOCKET VOLTAGES

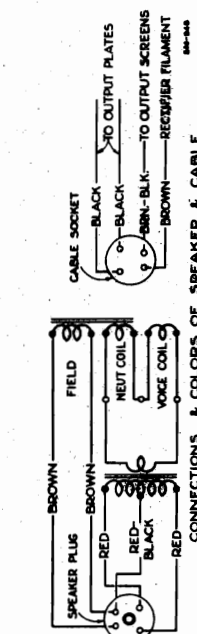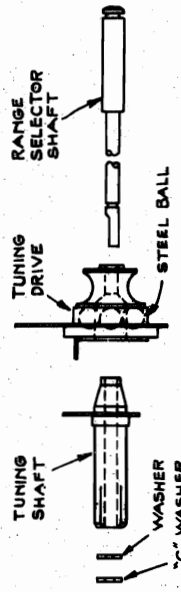

CONNECTIONS & COLORS OF SPEAKER & CABLE

RCA MFG. CO., INC.

Specifications

MODELS 8Q2, 8QU5C, 8QU5M
Alignment, Trimmers
Socket, Notes 455 kc

INTERMEDIATE FREQUENCY
CRYSTAL PICKUP
 Impedance 100,000 ohms at 1,000 c.p.s.
 Average Output ... 1.5 volts at 1,000 c.p.s. across 500,000 ohms load

MAGNETIC PICKUP
 Impedance 96 ohms at 1,000 c.p.s.
 Average Output .. 0.14 volts at 400 c.p.s. across open circuit

PILOT LAMPS (3) ... } 2-Mazda No. 44, 6.3 volts, 0.25 amp.;
 } 1-Mazda No. 47, 6.3 volts, 0.15 amp

POWER SUPPLY RATINGS
8Q2:
 Rating A 105-125 volts, 50-60 cycles, 75 watts
 Rating B 105-125 volts, 25-60 cycles, 75 watts
 Rating C 100-130, 140-160, 195-250 volts, 40-60 cycles, 75 watts

POWER OUTPUT RATING
 Undistorted 4.5 watts
 Maximum 5.5 watts

8QU5C and 8QU5M
 Rating A5 105-125 volts, 50 cycles, 105 watts
 Rating A6 105-125 volts, 60 cycles, 105 watts
 Rating C5 105-125; 200-250 volts, 50 cycles, 105 watts
 Rating C6 105-125; 200-250 volts, 60 cycles, 105 watts

LOUDSPEAKER (RL-63J-6)
 Type 8-inch electrodynamic
 V.C Impedance 2.2 ohms at 400 c.p.s.

PHONOGRAPH MOTOR } self-starting, constant-speed,
 } induction type

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

and bend the wire so that it points to the 180° mark on the calibration scale when the plates are fully meshed.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.




Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame,

Steps	Connect the high side of test-osc. to	Tune test-osc. to	Turn radio dial to	Adjust the following for maximum peak output
1	6B8-I-F grid in series with .01 mfd.	455 kc	Quiet point on "C" Band	L14 and L15 (2nd I-F Trans.)
2	Stator of middle section of gang [C17] in series with .01 mfd.			L12 and L13 (1st I-F Trans.)
3	Ant. terminal in series with 200 mmfd.	600 kc	600 kc (148°) "A" Band	L11 (osc.) Rock gang
4		1,500 kc	1,500 kc (28°) "A" Band	C15 (osc.)* C9 (det.)* C3 (ant.)†
5	Ant. terminal in series with 300 ohms	6.1 mc	6.1 mc (29°) "B" Band	C13 (osc.)* C8 (det.)* C2 (ant.)†
6		20 mc	20 mc (23°) "C" Band	C11 (osc.)* C7 (det.)* C2 (ant.)†

* Use minimum capacity peak if two peaks can be obtained.
 † Use maximum capacity peak if two peaks can be obtained.
 NOTE: Oscillator tracks 455 kc above signal on all bands.

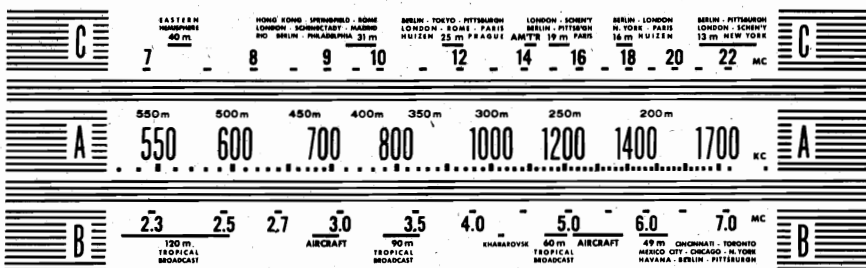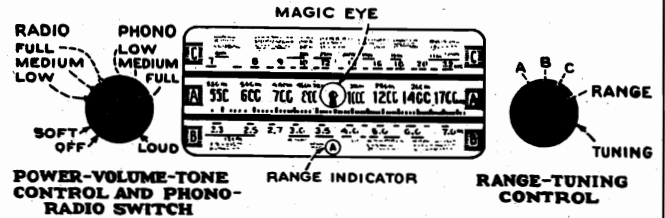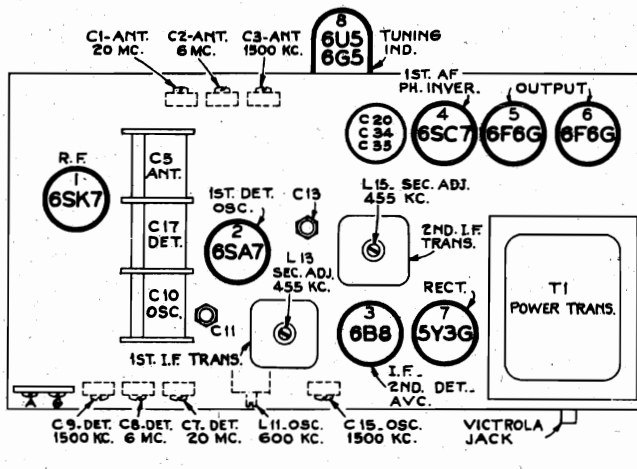



Calibration Scale

Reduced Reproduction of Receiver Dial, and Corresponding 0-180° Calibration Scales

The corresponding position of the dial indicator for any setting of the calibration scale can be determined by drawing a line from this point on the bottom calibration scale to the same point on the top calibration scale. For example: 33° on the calibration scale corresponds to approximately 7.9 mc on "C" band, and 600 kc on "A" band, etc. Read instructions under "Alignment Procedure."

MODELS 8Q2, 8QU5C, 8QU5M
Phonograph Data

RCA MFG. CO., INC.

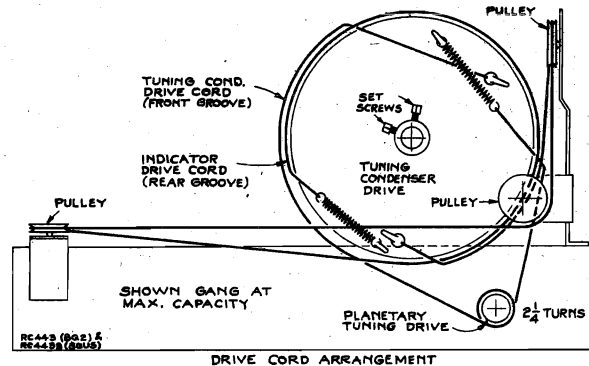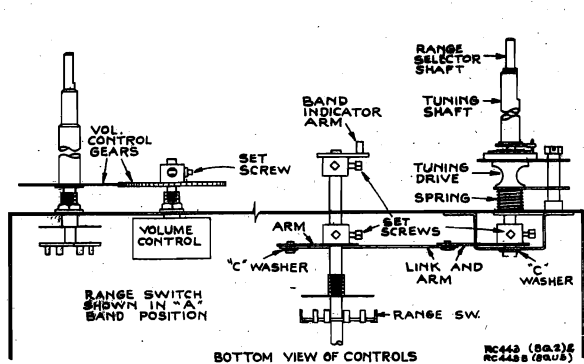

Victrola Data

The 8QU5M is equipped with a magnetic pickup, and the 8QU5C with a crystal pickup. The output of the crystal pickup is fed directly into the Victrola jack at the rear of the chassis. On instruments using a magnetic pickup, a transformer and compensating circuit are used between the pickup and the Victrola jack (see schematic diagram). The transformer has two jacks, the larger one (primary) for input from the pickup and the smaller one (secondary) for output to the compensating circuit. The components of the compensating circuit are mounted externally to the chassis on a terminal board in the rear of the cabinet.

The phonograph motor is a self-starting, constant-speed induction type. It should be lubricated every six months by applying a few drops of light machine oil to the spindle bearing and oil hole.

The motor spindle is tapered, and a conical rubber piece fits snugly on the spindle. The hole in the turntable bushing is tapered to fit the rubber. This provides an excellent self-centering floating mounting.

A metal washer is placed on the spindle under the rubber piece. The washer has ears on the under side which fit over a pin that projects through the spindle.

The motor switch is automatic for both starting and stopping, and when properly adjusted, will turn the motor on as the pickup is moved from the pickup rest toward the turntable. The switch should be adjusted so that it will snap into the "off" position when the pickup needle is 1 1/2 inches from the center line of the spindle shaft. The motor may be shut off at any time by placing the pickup on the pickup rest.


Crystal Pickup:

The crystal pickup is sealed in a metal case; if failure occurs, do not attempt to repair the unit, but install a new crystal unit.

Magnetic Pickup:

The magnetic pickup used is of an improved design. The horseshoe magnet is rigidly welded to the pole pieces and is irremovable. There is a centering spring attached to the armature to maintain proper adjustment and to provide a limiting effect on the movement of the armature. Service operations which may be necessary on the pickup are as follows:

Centering Armature.—Refer to the figure showing the pickup inner structure. The armature is shown in its proper relation to the magnet pole pieces, i. e., exactly centered. Whenever this centering adjustment has been disturbed it will be necessary to remove the pickup mechanism from the tone arm for re-adjustment. Unsolder the two leads from the lugs on the terminal board at the rear of the pickup.

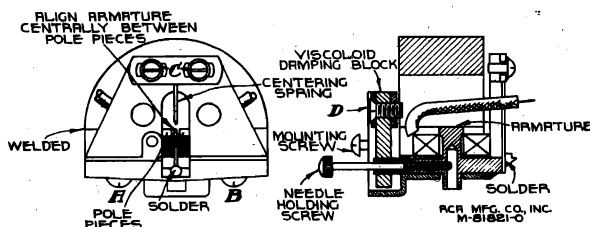


Insert a small rod or nail into the armature needle hole and tighten the needle holding screw to hold the rod securely. If the armature clamping screws A and B have not been disturbed, screws C should be loosened which will permit the armature to be moved from side to side, the rod acting as a lever to perform this operation. The

proper adjustment is obtained when the armature is brought to the mid position between the pole pieces. Screws C should then be tightened. The armature position should then be central between the pole pieces and at right angles to them. Check to make sure that the armature is not touching the coil. The air gap between the pole pieces and the armature should be kept free from dust, filings, and other foreign material which would obstruct the movement of the pickup armature.

Replacing Coil.—Whenever there is defective operation due to an open or shorted pickup coil, this coil should be replaced. Remove the pickup mechanism and terminal board. Remove screws A and B and the magnet assembly. Remove the bakelite coil support (with coil attached) and insert the new coil support assembly in its place, after which replace the magnet assembly and center the armature as described above, then re-assemble the remainder of the unit. Only rosin core solder should be used for soldering the coil leads and pickup leads to the pickup terminal board. This same type of solder should be used when necessary for soldering the centering spring to the armature.

Magnetizing.—Loss of magnetization will not usually occur when the pickup has received normal care because the magnet and pole pieces are one unit and the magnetic circuit remains practically closed at all times. When the pickup has been mishandled, subjected to a strong a-c field, jolted, or dropped, there may be an appreciable loss of magnetic strength, in which case it will be necessary to re-magnetize the entire structure. To do this, it will be necessary to first remove the pickup mechanism from the tone arm, and then remove the magnet assembly. Place the magnet assembly on the poles of a standard pickup magnetizer such as the RCA Stock No. 9549 Pickup Magnetizer and charge the magnet in accordance with the instructions accompanying the magnetizer. It is preferable to check the polarity of the pickup magnet and to remagnetize it so that the same polarity is maintained.

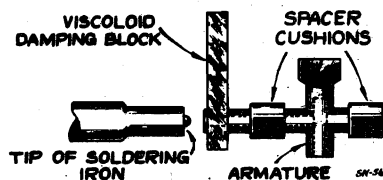

Damping Block.—The viscoloid damping block which is attached to the front end of the armature shank serves to reduce undesirable resonances and to cause the frequency response to be uniform. Should it be necessary to replace this damping block, the pickup mechanism should be removed from the tone arm. Remove screw D and the damping block from the pickup assembly. Make sure that the shaft of the armature which contacts the viscoloid is clean. Then insert the new damping block so that it occupies the same position as that of the original block, and is in correct vertical alignment with the armature. The hole in the block is somewhat smaller than the diameter of the armature in order to permit a snug fit. With the damping block properly aligned on the armature, screw D with its washer should then be replaced. Heat should be applied to the armature (viscoloid side) so that the damping block will fuse at the point of contact and become rigidly attached to the armature. A special-tip soldering iron, constructed as shown, will be found very useful in performing this operation. The iron should be applied only long enough to slightly melt the block, causing a small bulge on both sides.

MODEL 8Q4

Ch. RC-337A

Alignment, Trimmers

Socket

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.


Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The surface of the drum must be flush with the end of the gang-condenser shaft. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "180°" mark on the calibration scale when the plates are fully meshed.


RCA MFG. CO., INC. Alignment Procedure

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with

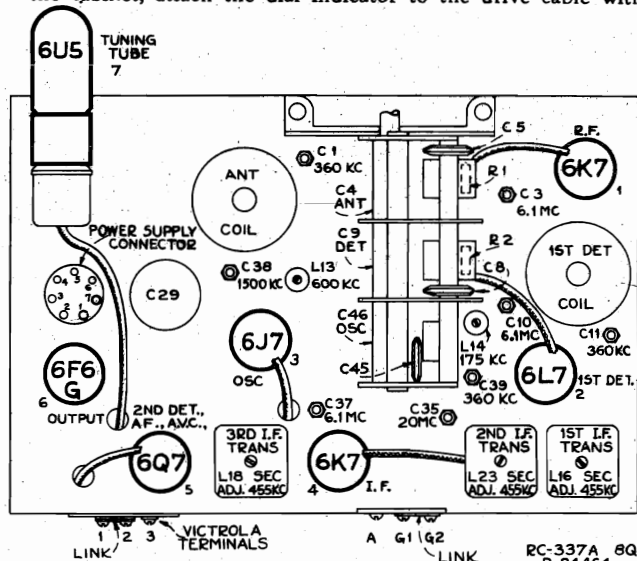

RCA MFG. CO., INC.


MODEL 8Q4
Ch. RC-337A
Schematic, Lead Dress
Phono. Data

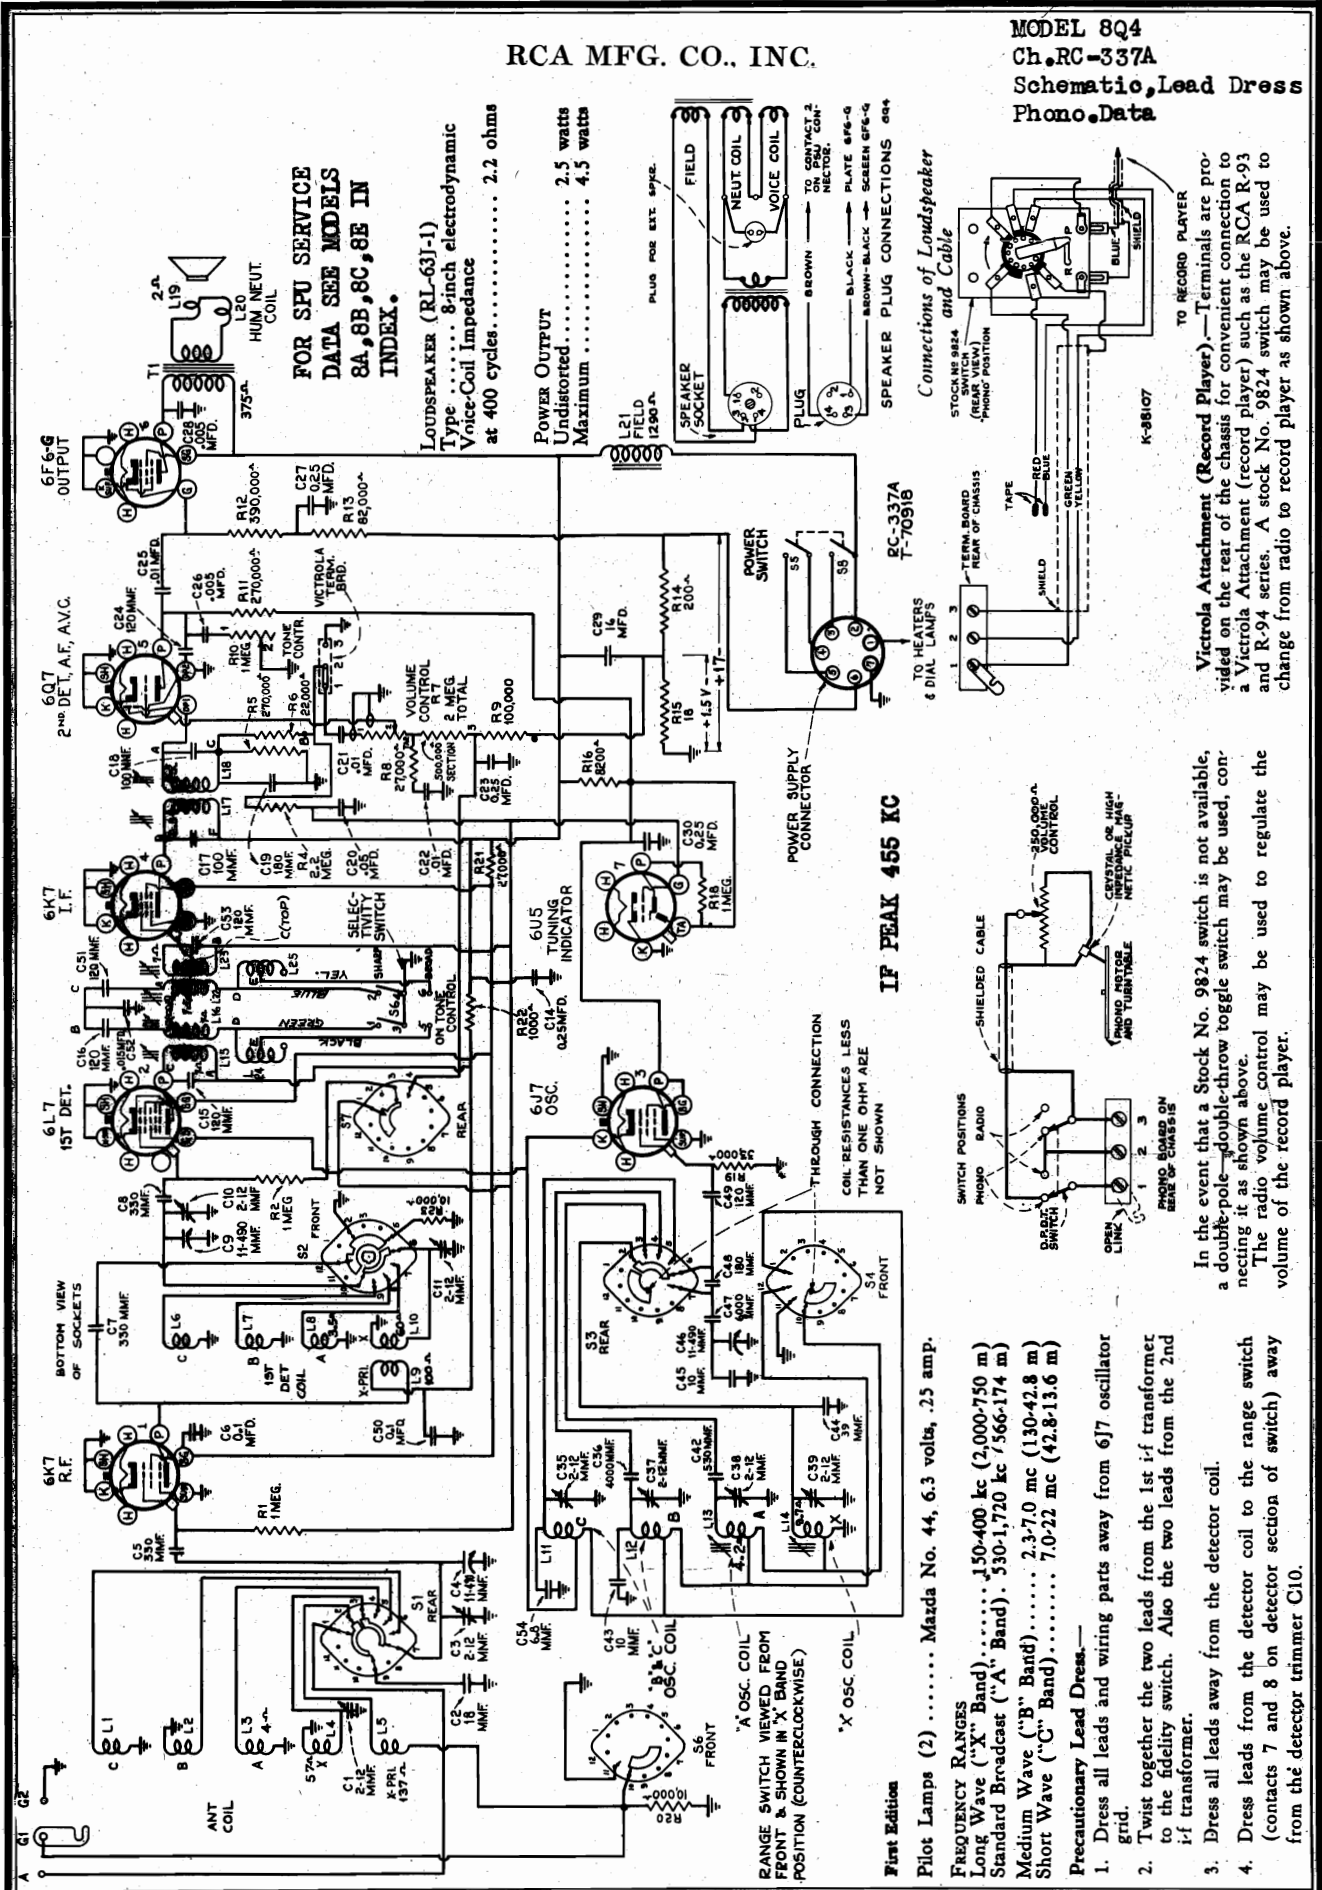


FOR SPK SERVICE
DATA SEE MODELS
8A, 8B, 8C, 8E IN
INDEX.

LOUDSPEAKER (RL-63J-1)
Type 8-inch electrodynamic
Voice-Coil Impedance
at 400 cycles 2.2 ohms

POWER OUTPUT
Undistorted 2.5 watts
Maximum 4.5 watts

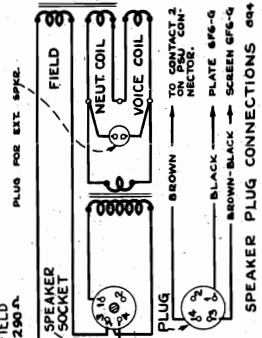


Connections of Loudspeaker
and Cable

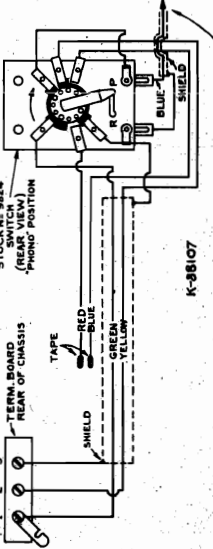

TO RECORD PLAYER
Victrola Attachment (Record Player).—Terminals are provided on the rear of the chassis for convenient connection to a Victrola Attachment (record player) such as the RCA R-93 and R-94 series. A stock No. 9824 switch may be used to change from radio to record player as shown above.

IF PEAK 455 KC

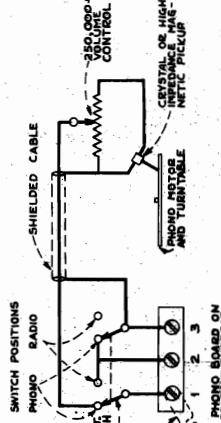

In the event that a Stock No. 9824 switch is not available, a double-pole—double-throw toggle switch may be used, connecting it as shown above.
The radio volume control may be used to regulate the volume of the record player.

First Edition
Pilot Lamps (2) Mazda No. 44, 6.3 volts, .25 amp.
FREQUENCY RANGES
Long Wave ("X" Band) 150-400 kc (2,000-750 m)
Standard Broadcast ("A" Band) 530-1,720 kc (566-174 m)
Medium Wave ("B" Band) 2.3-7.0 mc (130-42.8 m)
Short Wave ("C" Band) 7.0-22 mc (42.8-13.6 m)

- Precautory Lead Dress.—
1. Dress all leads and wiring parts away from 6J7 oscillator grid.
 2. Twist together the two leads from the 1st if transformer to the fidelity switch. Also the two leads from the 2nd if transformer.
 3. Dress all leads away from the detector coil.
 4. Dress leads from the detector coil to the range switch (contacts 7 and 8 on detector section of switch) away from the detector trimmer C10.

RCA MFG. CO., INC.

MODELS 9Q1, 9QK
Alignment

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment, therefore a calibration scale is attached to the indicator-drive-cord drum which is mounted on the shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The "0" mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

To determine the corresponding frequency for any setting of the calibration scales, refer to the accompanying drawing which shows the dial with 0-180° calibration scales drawn at top and bottom.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "0" mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in

the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

Spread-Band Alignment.—The most satisfactory method of aligning or checking the spread-band ranges is on actual reception of short-wave stations of known frequency, by adjusting the magnetite-core oscillator coil for each band so that these stations come in at the correct points on the dial.

In exceptional cases, when the set is being serviced in a location where the noise level is high enough to prevent reception of short-wave stations, a test-oscillator may be used for alignment, but an extremely high degree of accuracy is required in the frequency settings of the test-oscillator, as a slight error will produce considerable inaccuracy on the spread-band dials. The frequency settings of the test-oscillator may be checked by one or both of the following methods:

1. Determine the exact dial settings of the test-oscillator (for frequencies at or close to the specified alignment frequencies) by zero-beating the test-oscillator against short-wave stations of known frequency.
2. Use harmonics of the standard-broadcast range of a test-oscillator, first checking the frequency settings on this range by means of a crystal calibrator (RCA Stock No. 9572), or by zero-beating against standard broadcast stations.

When a test oscillator is employed for spread-band alignment, a final check should be made on actual reception of short-wave stations of known frequency, and the magnetite-core oscillator coil for each band should be re-adjusted so that the stations come in at the correct points on the dial.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Range switch	Turn radio dial to—	Adjust the following for max. peak output	
1	6B8 I-F Grid in series with .01 mfd.	455 kc	A	Quiet Point Near 0°	L29 and L28 (2nd I.F. Trans.)	
2	6SA7 1st Detector Grid in series with .01 mfd.				L27 and L26 (1st I.F. Trans.)	
3	Antenna Terminal in series with 300 ohms	9.5 mc	31M	20°	L13 (osc.)* C24 (det.)† C2 (ant.)	
4		11.7 mc		171°	C16 (osc.)*	
4A		Check to determine that C16 has been adjusted to the correct peak by turning radio to 10.8 mc (141°) where a weaker signal should be received.				
5		9.5 mc	B	180°	C11 (osc.)*	
5A		Check to determine that C11 has been adjusted to the correct peak by turning radio to 8.6 mc (156°) where a weaker signal should be received.				
6		3.0 mc	B	0°	L12 (osc.)* (Rock Gang)	
7		Antenna Terminal in series with 200 mmf.	1,500 kc	A	149°	C10 (osc.) C3 (ant.) C25 (det.)
8			600 kc		27°	L11 (osc.) (Rock Gang)
8A	Repeat steps 7 and 8.					
9	Antenna Terminal in series with 300 ohms	11.8 mc	25M	33°	L14 (osc.)* C20 (det.)† C1 (ant.)	
10		15.2 mc	19M	37°	L15 (osc.)*	
11		17.75 mc	16M	40°	L16 (osc.)**	
12		21.5 mc	13M	55°	L17 (osc.)**	

* Use peak with plunger out if two peaks can be obtained. ** Use peak with plunger in if two peaks can be obtained.

† Rock gang condenser slightly while peaking. Use maximum capacity peak if two peaks can be obtained.


Note: Oscillator tracks above signal on A, B, 31M, 25M and 19M bands; below signal on 16M and 13M bands.

MODELS 9Q1, 9QK
MODEL 9Q4
Parts Lists

STOCK No.	DESCRIPTION	STOCK No.	DESCRIPTION
MODEL 9Q4			
CHASSIS ASSEMBLIES (RC-478)			
34401	Arm—Arm and hub for band indicator less cable—fastens on range switch shaft.	13601	Resistor—10 megohm, 1/2 watt (R11, R10)
34402	Band—Drive belt.	30340	Retainer—Retaining clip for pulley, Stock No. 31373
34403	Board—"Ant-Grd." terminal board.	34396	Shaft—Intermediate tuning drive shaft, and drive cord pulley—less drive belt, pulley and set screws
34404	Cable—Cable and clips for band indicator.	34397	Shaft—Intermediate tuning drive shaft, and fly-wheel—less drive belt pulley and set screws.
34405	Capacitor—Mica trimmer—3 sections 2-10 mmfd. and 1 section 3-30 mmfd. (C18, C19, C20, C21)	31364	Socket—Dial lamp socket.
12714	Capacitor—Air trimmer, 2-12 mmfd. (C9, C11) each (C12, C15)	34864	Socket—Magic Eye socket.
33818	Capacitor—Mica trimmer, 2 sections 3-30 mmfd. each (C1, C2, C3, C44)	14278	Socket—Phono. input socket.
12896	Capacitor—15 mmfd. (C43)	31251	Spring—Tube socket.
13545	Capacitor—39 mmfd. (C16)	34645	Switch—Pointer drive cord tension spring
12720	Capacitor—36 mmfd. (C24)	34391	Switch—Phono. switch, and fidelity control switch (S5)
32939	Capacitor—110 mmfd. (C28, C31)	34596	Switch—Slide switch for tone control (S10, L17, L20, C25, C28)
30292	Capacitor—200 mmfd. (C6)	33761	Transformer—First i-f transformer (L18, L17, L20, C25, C28)
12694	Capacitor—220 mmfd. (C5, C17, C22, C32)	34183	Transformer—Second i-f transformer (L18, L19, C27, C28, C31, R7)
32760	Capacitor—220 mmfd. (C5, C17, C22, C32)	34389	Transformer—Power transformer — 100/130, 140/160, 195/250 volts, 50/60 cycles (T1)
12811	Capacitor—580 mmfd. (C13)	33726	Volume Control—Volume control and power switch (R8, S9)
31405	Capacitor—6,000 mmfd. (C7)	33726	Washer—"C" washer for tuning shaft.
34459	Capacitor—0.025 mfd. (C34)	SPEAKER ASSEMBLIES (RL63K3)	
33594	Capacitor—0.005 mfd. (C38, C39, C46, C48)	31825	Cap—Dust cap
5148	Capacitor—0.007 mfd. (C35)	34815	Cone—Cone complete with voice coil (L2)
4937	Capacitor—0.1 mfd. (C36, C47)	31359	Plug—5-prong male plug for speaker
32877	Capacitor—0.5 mfd. (C30)	34891	Speaker—8-inch dynamic complete with cone and voice coil—less output transformer.
4889	Capacitor—0.1 mfd. (C29, C33, C45)	14534	Transformer—Output transformer (T2)
34393	Capacitor—Electrolytic—2 sections 20 mfd. and 1 section 15 mfd. (C37, C40, C41)	MODEL 9Q1, 9QK	
32762	Coil—Antenna coil A-B-C Bands (L1, L2, L3, L4)	CHASSIS ASSEMBLIES	
32923	Coil—Antenna coil X Band (L5, L6)	14517	Board—"Antenna-Ground" board
32763	Coil—Detector coil A-B-C Bands (L11, L12, L13, L14)	34865	Bracket—Drive cord bracket and pulley—long bracket with one pulley
32764	Coil—Oscillator coil A-B-C Bands (L7, L8, L9)	34660	Bracket—Drive cord bracket and pulley—short bracket with one pulley
32931	Coil—Oscillator coil X Band (L10)	34656	Bracket—Drive cord bracket and pulleys—long bracket with two pulleys (C10)
32756	Condenser—3-gang variable tuning condenser (C4, C8, C23)	12714	Capacitor—Air trimmer—2-12 mmfd. (C10)
34595	Control—Tone control (R12)	12884	Capacitor—Al. trimmer—long—2-20 mmfd. (C11, C16)
32634	Core—Pointer drive cord.	34854	Capacitor—Trimmer comprising 2 sections of 2.5-10 mmfd. and 1 section of 2.5-20 mmfd. (C20, C24, C25)
32713	Core—Adjustable core and stud for A-B-C Band coil	34853	Capacitor—Trimmer comprising 2 sections of 5-50 mmfd. and 1 section of 3-30 mmfd. (C1, C2, C3)
34392	Drum—Variable condenser drive drum.	13200	Capacitor—10 mmfd. (C12, C17)
11891	Lamp—Dial lamp.	34668	Capacitor—11 mmfd. (C6, C21)
14028	Nut—Clamp nut for air trimmer.	33380	Capacitor—12 mmfd. (C14)
31817	Plate—Cushion socket mounting plate, less socket	12896	Capacitor—15 mmfd. (C52)
19493	Plug—5-contact female plug for speaker cable.	12948	Capacitor—33 mmfd. (C58)
34399	Pulley—Drive belt pulley and set screws for tuning knob shaft.	34670	Capacitor—34 mmfd. (C13)
34398	Pulley—Drive belt pulley and set screws for intermediate drive shaft.	13141	Capacitor—47 mmfd. (C5, C22)
31373	Pulley—Drive cord pulley for L.H. support.	32743	Capacitor—56 mmfd. (C26, C27, C51)
34402	Pulley—Drive cord pulley and bracket for R.H. support	30819	Capacitor—50 mmfd. (C29, C37)
34394	Pulley—L.H. support and drive cord pulleys (2) assembled, less loose pulley.	14712	Capacitor—180 mmfd. (C36, C37)
34395	Pulley—R.H. support and drive cord pulleys (2) assembled, less loose pulley and bracket.	12949	Capacitor—220 mmfd. (C7, C18, C19, C41)
14281	Resistor—68 ohms, 1/2 watt (R1, R17)	33235	Capacitor—560 mmfd. (C8)
34189	Resistor—2,200 ohms, 1/2 watt (R8)	34459	Capacitor—3,300 mmfd. (C9)
12695	Resistor—Voltage divider, 2 sections 5,000 ohms and 1 section 195 ohms (R21, R22, R25)	33584	Capacitor—0.025 mfd. (C39)
13998	Resistor—15,000 ohms, 1/2 watt (R14)	5148	Capacitor—0.05 mfd. (C46, C47)
12454	Resistor—22,000 ohms, 1/2 watt (R7)	32787	Capacitor—0.07 mfd. (C49, C45)
30650	Resistor—33,000 ohms, 1/2 watt (R3)	4839	Capacitor—0.1 mfd. (C32, C45)
12684	Resistor—56,000 ohms, 1/2 watt (R16)	4839	Capacitor—0.1 mfd. (C31, C35, C50)
12685	Resistor—220,000 ohms, 1/2 watt (R15, R19)	12484	Capacitor—0.25 mfd. (C33)
12685	Resistor—470,000 ohms, 1/2 watt (R18, R20)	33014	Capacitor—Electrolytic comprising 3 sections of 10 mfd. and 1 section of 20 mfd. (C30, C44, C48, C49)
12730	Resistor—1 megohm, 1/2 watt (R2, R4, R13)	CHASSIS ASSEMBLIES	
12679	Resistor—2.2 megohm, 1/2 watt (R6)	MODEL 9Q1	
13602	Resistor—10 megohm, 1/2 watt (R12, R18)	(RL-63K5)	
4689	Resistor—No. 832 square head set screw for drum	34648	Coil—Antenna coil—AT160
14350	Stock No. 34392 square head set screw for drum	34649	Coil—Antenna coil—AT181
14350	Stock No. 34663 square head set screw for pulley Stock No. 34663	34647	Coil—Oscillator coil for "A" band.
34655	Shaft—Tuning knob shaft and flywheel.	34659	Coil—Oscillator coil for "B" band and 31 meter bands
34864	Socket—Dial lamp socket.	34661	Coil—Oscillator coil for 12 meter band
14278	Socket—Magic Eye socket.	34662	Coil—Oscillator coil for 16 meter band and 19 meter bands
31251	Socket—Phonograph input socket.	34663	Coil—Oscillator coil for 25 meter band
31251	Socket—Tube socket.	34652	Coil—R. F. coil—RFT 108A
34645	Spring—Tuning condenser drive drum spring.	34651	Coil—R. F. coil—RFT 110
34664	Switch—Range switch for tone control.	34650	Coil—R. F. coil—RFT 112
34664	Switch—Slide switch for tone control.	34665	Condenser—Variable tuning condenser.
32263	Transformer—1st I.F. transformer.	34667	Control—Tone control
14308	Transformer—2nd I.F. transformer.	34667	Control—Volume control and power switch.
31794	Transformer—Power transformer—110 volts 25 cycle	34662	Control—Volume control and power switch.
31795	Transformer—Power transformer—Universal 50-60 cycle	11765	Drum—Variable tuning condenser drive drum.
31793	Transformer—Power transformer—110 volt 60 cycle	5040	Lamp—Dial lamp
SPEAKER ASSEMBLIES			
MODEL 9Q1			
(RL-63K5)			
31825	Cap—Dust cap	31825	Cap—Dust cap
34815	Cone—Cone complete with voice coil.	11489	Coil—Field coil
5039	Plug—5 contact male plug for speaker	31275	Coil—Neutralizing coil
34871	Speaker—8" Dynamic complete with cone and voice coil less output transformer and plug.	5039	Cone—Cone complete with voice coil
14534	Transformer—Output transformer	14534	Plug—5 prong male plug for speaker
SPEAKER ASSEMBLIES			
MODEL 9QK			
(RL-70J3)			
31825	Cap—Dust cap	31825	Cap—Dust cap
11489	Coil—Field coil	11489	Coil—Field coil
31275	Coil—Neutralizing coil	31275	Coil—Neutralizing coil
5039	Cone—Cone complete with voice coil	5039	Cone—Cone complete with voice coil
14534	Plug—5 prong male plug for speaker	14534	Plug—5 prong male plug for speaker
14534	Transformer—Output transformer	14534	Transformer—Output transformer

RCA MFG. CO., INC.

MODEL 9Q4
Chassis RC-478
Schematic

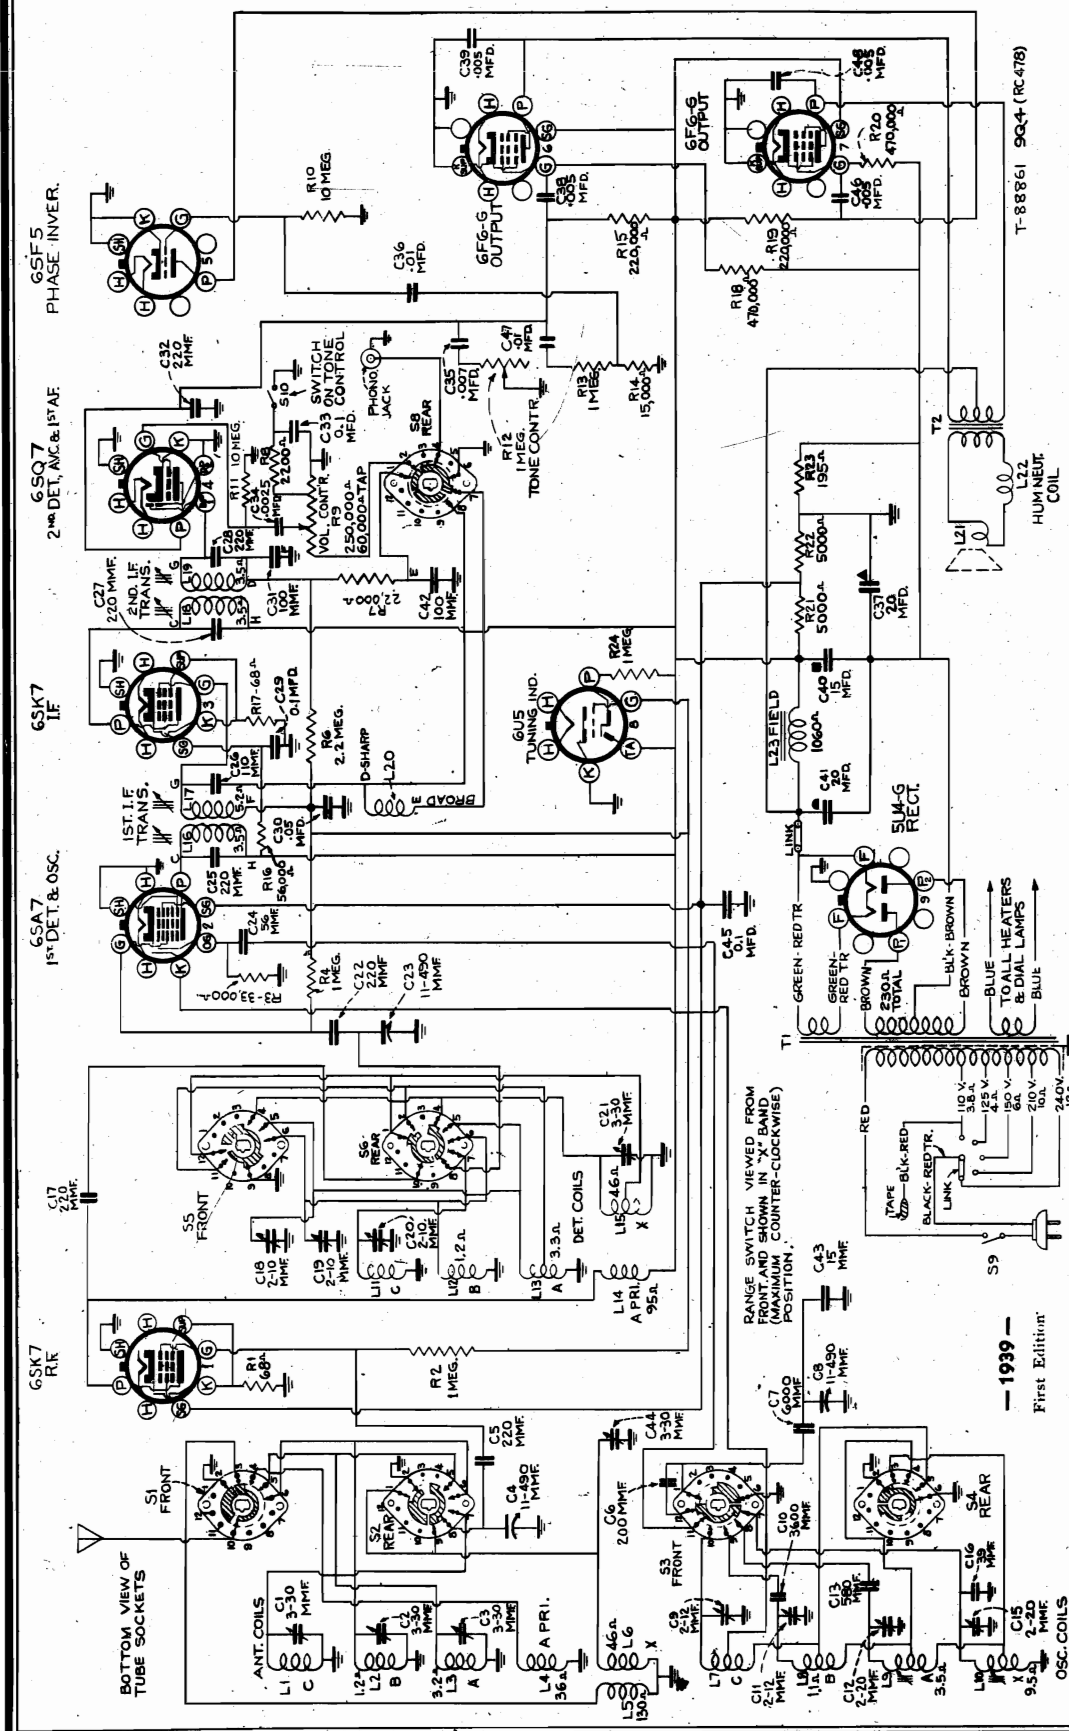

TUBE COMPLEMENT
 (1) RCA-6SK7..... R-F Amplifier (5) RCA-6SF5..... Phase Inverter
 (2) RCA-6SA7..... 1st Detector-Oscillator (6) RCA-6F6-G..... Output
 (3) RCA-6SK7..... 1st IF Amplifier (7) RCA-6F6-G..... Output
 (4) RCA-6SQ7..... 2nd Detector, A.V.C., and A.F. Amplifier (9) RCA-5U4-G..... Rectifier

PILOT LAMPS (2)..... Mazda No. 44, 6.3 volts, 0.25 amp.

INTERMEDIATE FREQUENCY..... 455 kc

POWER OUTPUT RATING
 Undistorted..... 10 watts
 Maximum..... 12 watts


LOUDSPEAKER (RL-63K-3)
 Type..... 8-inch electrodynamic
 V.C. Impedance..... 2.2 ohms at 400 cycles

POWER SUPPLY RATINGS
 Rating A..... 105-125 volts, 50-60 cycles, 115 watts
 Rating B..... 105-125 volts, 25-60 cycles, 115 watts
 Rating C..... 105-130, 140-160, 200-250 volts, 40-60 cycles, 115 watts

MODEL 9Q4
Chassis Wiring, Voltage

RCA MFG. CO., INC.

Lead Dress, Dial Data

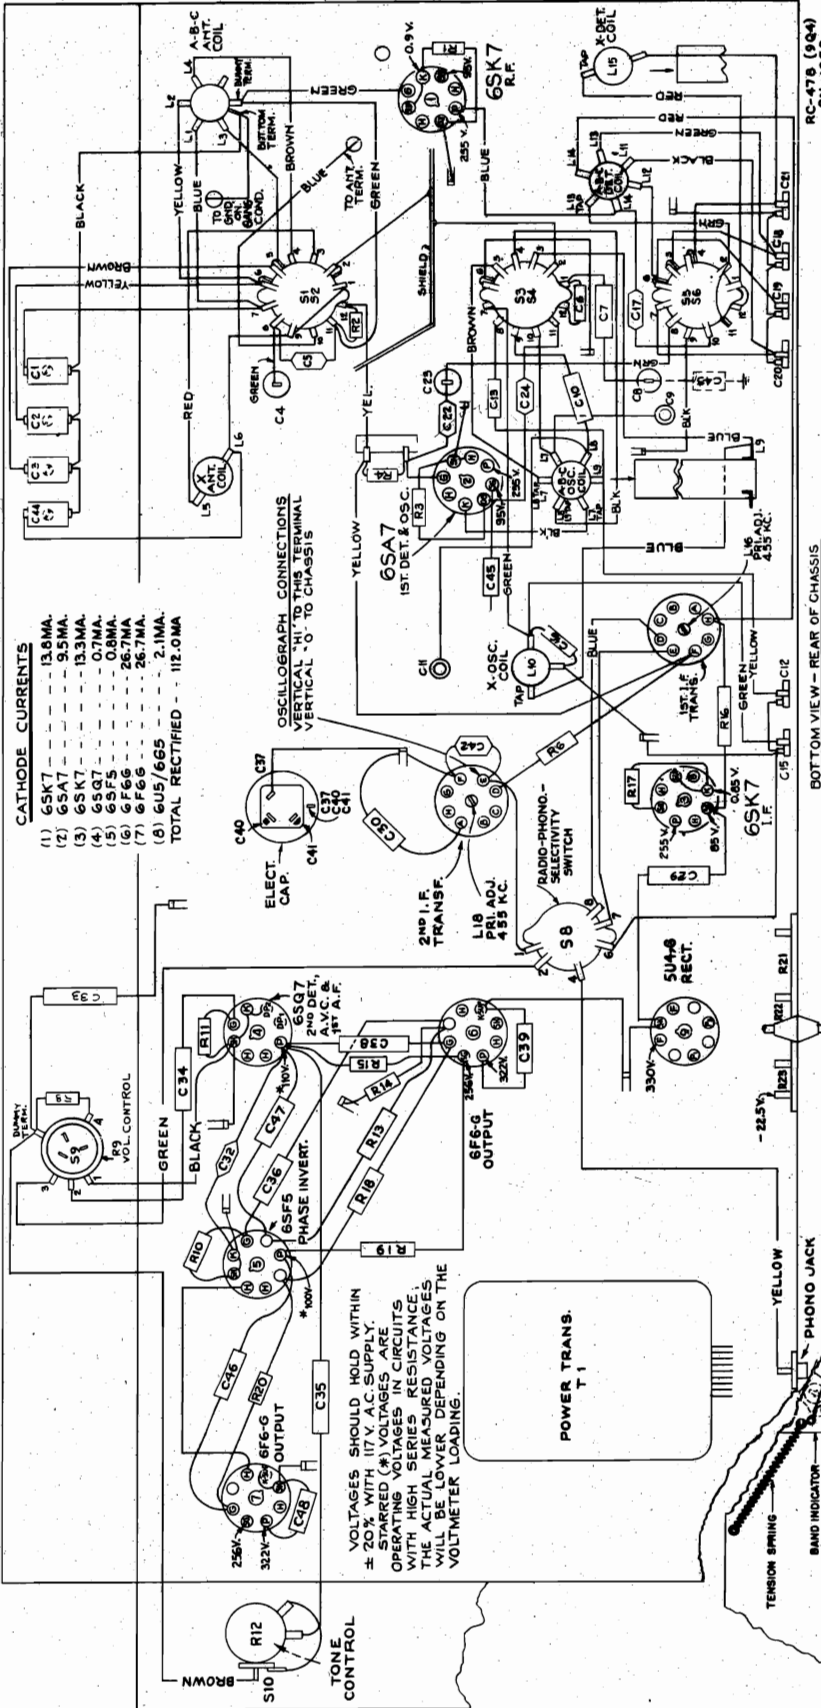

CATHODE CURRENTS

(1) 6SK7	13.8MA.
(2) 6S7	9.5MA.
(3) 6SK7	13.3MA.
(4) 6S7	0.7MA.
(5) 6SF5	0.8MA.
(6) 6F66	26.7MA.
(7) 6F66	26.7MA.
(8) 6U5/665	2.1MA.
TOTAL RECTIFIED - 112.0MA	

OSCILLOGRAPH CONNECTIONS
VERTICAL "HI" TO THIS TERMINAL
VERTICAL "O" TO CHASSIS


RC-478 (9Q4)
SN-1008

BOTTOM VIEW - REAR OF CHASSIS
R-F WIRING AND SOCKET VOLTAGES


FREQUENCY RANGES
Long Wave ("X" Band) 145-405 kc (2,069-740 m)
Standard Broadcast ("A" Band) 540-1,720 kc (555-174 m)
Medium Wave ("B" Band) 2.3-7.0 mc (130-42.8 m)
Short Wave ("C" Band) 7.0-22.0 mc (42.8-13.6 m)

Precautionary Lead Dress:

1. Dress black lead from L11 to C20 away from other leads.
2. Dress the green lead from the middle section of the gang away from any other leads, parts, or chassis.
3. Dress the black diode lead running between the 6SQ7 and terminal G on the 2nd I-F transformer, directly against the chassis.
4. Twist the power leads together and dress them away from the 6SQ7 socket, and also away from the yellow phono input lead.
5. Keep green lead of 6SK7 R-F grid circuit away from blue antenna lead.

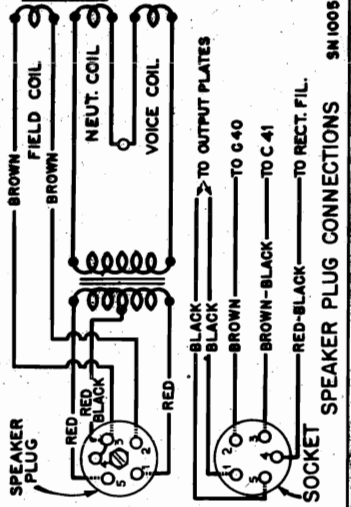

Drive Cord and Band Indicator Arrangement

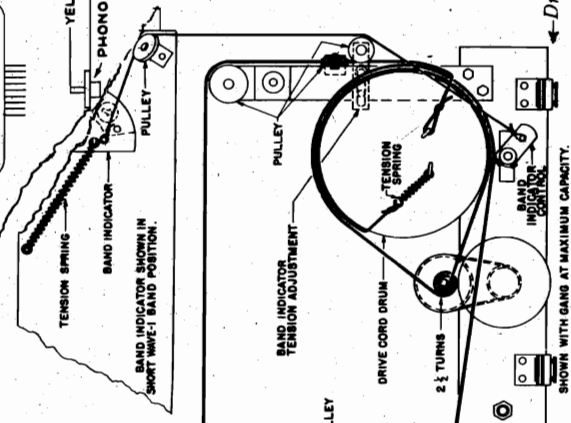

RCA MFG. CO., INC.

MODEL 9Q4
Alignment, Trimmers
Socket

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.



Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 0° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the 0° mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed.

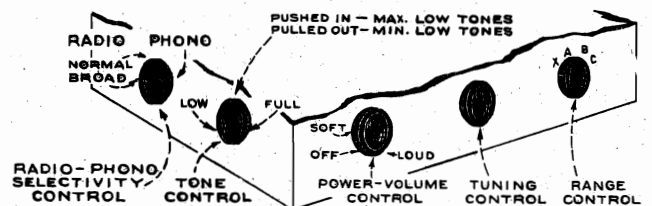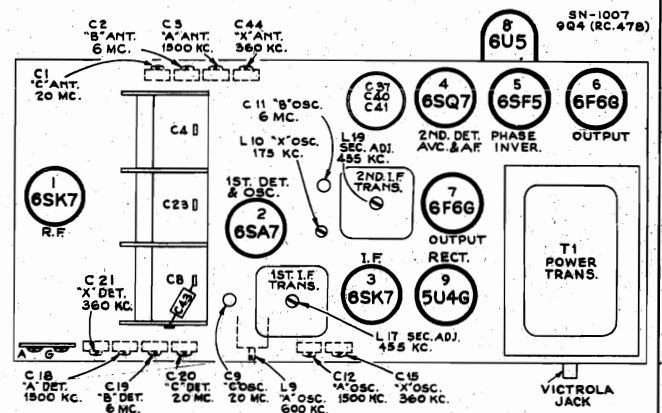

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	Turn tone control to 2nd position (sharp) from maximum counter-clockwise.			
2	6SK7 I-F grid in series with .01 mfd.	455 kc	"A" Band Quiet point between 550-750 kc	L18 and L19 (2nd I-F trans.)
3	6SA7 grid in series with .01 mfd.			L16 and L17 (1st I-F trans.)
4	Turn tone control to maximum counter-clockwise (broad) position and check I-F response which should be a slightly double-peaked curve. Return tone control to 2nd position (sharp) for the following steps.			
5	Ant. terminal in series with 200 mmfd.	175 kc	175 kc (52.5°) "X" Band	L10 (osc.) Rock gang
6		360 kc	360 kc (148.5°) "X" Band	C15 (osc.) C21 (det.) C44 (ant.)
7		600 kc	600 kc (32°) "A" Band	L9 (osc.) Rock gang
8		1,500 kc	1,500 kc (152°) "A" Band	C12 (osc.) C18 (det.) C3 (ant.)
9	Repeat steps 5, 6, 7, and 8.			
10	Ant. terminal in series with 300 ohms	6.1 mc	6.1 mc (151°) "B" Band	C11 (osc.)* C19 (det.) C2 (ant.)
11		20 mc	20 mc (157°) "C" Band	C9 (osc.)** C20 (det.) C1 (ant.)


* Use minimum capacity peak if two can be obtained. Check to determine that C11 has been adjusted to the correct peak by tuning receiver to approximately 5.19 mc where a weaker signal should be received.

** Use minimum capacity peak if two can be obtained. Check to determine that C9 has been adjusted to the correct peak by tuning receiver to approximately 19.09 mc where a weaker signal should be received.

Note.—Oscillator tracks above signal on all bands.

MODEL VA-21
Wireless Record Player
Schematic, Voltage
Adjustments, Notes

RCA MFG. CO., INC.

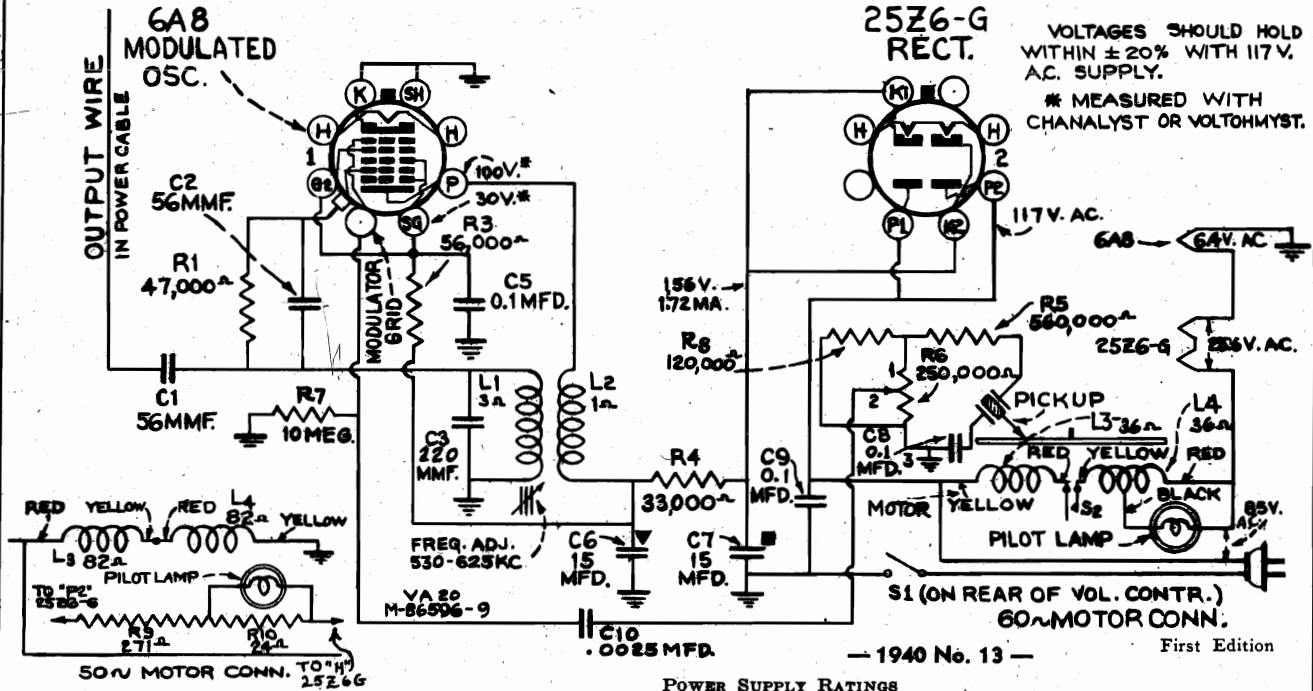

VOLTAGES SHOULD HOLD WITHIN $\pm 20\%$ WITH 117V. AC. SUPPLY.
 * MEASURED WITH CHANALYST OR VOLTOHMYST.

General Description

The crystal pickup in Model VA-21 is connected through a volume control to grid No. 1 in an RCA-6A8 tube which functions as a modulated r-f oscillator. The oscillator frequency can be adjusted from 530 to 625 kc by means of a magnetite core in the oscillator transformer, L1-L2. (This is a screwdriver adjustment at the rear of the cabinet.) An output wire is connected to the grid circuit of the oscillator, and is run parallel with the power cable. The output is sufficient to permit operation within approximately 20 feet of a radio receiver.

Set-Up Procedure

1. Insert plug in power supply outlet, and turn the power-switch—volume control knob on top of VA-21 to full clockwise position. Start a record on the VA-21. The motor is a synchronous manual-starting type, and requires a clockwise spin to start.
2. Tune the radio receiving set to a quiet point between 530-625 kc.
3. Tune the oscillator in the VA-21 to this frequency by adjusting the button on the rear of the VA-21 cabinet to obtain peak output on the receiver. Clockwise rotation decreases the frequency; counter-clockwise rotation increases the frequency.
4. Adjust the radio volume control for the highest volume that is likely to be required, and then use the VA-21 volume control for further adjustment.
5. In noisy locations, it may be desirable to leave the VA-21 volume control turned full clockwise, and regulate the radio volume control for the desired level.
6. If there is insufficient volume, or excessive noise, the remedy is to couple the VA-21 to the radio receiver, by running a piece of insulated wire between the two units: Wrap one end (three or four turns) around the antenna lead-in on the radio, and wrap the other end (three or four turns) around the short wire that projects from the plug on the power cord of the VA-21. With an RCA Master Antenna, wrap the wire around the counter-poise lead where it attaches to the receiver (terminal A3) or to the coupling unit (terminal B). With a loop receiver, place the end of the wire close to the loop.
7. If the radio receiver has push-button tuning, one of the buttons may be set up to tune in the VA-21 oscillator frequency. This button should be marked "Record Player."

Precautionary Lead Dress

1. The power supply cord must be dressed between chassis and top of cabinet, away from grid of 6A8, and entirely away from 25Z6-G.
2. All leads to oscillator coil must be as short as possible.
3. All motor leads must be dressed away from rotor.
4. Pickup leads must be dressed away from the top grid of 6A8, and kept away from the 25Z6-G.

— 1940 No. 13 — First Edition

POWER SUPPLY RATINGS	
A-6	105-125 volts, 60 cycles, 50 watts
A-5	105-125 volts, 50 cycles, 50 watts

MOTOR	
Type	Synchronous (Manual Starting)
Turntable Speed	78 r.p.m.

PICKUP	
Type	Crystal
Pickup Impedance	100,000 ohms at 1000 cycles
Average Output Voltage	1½ volts at 1000 cycles with 250,000 ohm load.

Motor Data

Smooth starting and running will be insured by keeping the bearings well cleaned and oiled.


Hum and Vibration.—A small amount of hum when starting, decreasing to a negligible amount when running, is normal. If excessive vibration occurs it may be due to:

1. Insufficient lubrication, or any failure that will cause binding.
2. Leather washer not oiled. (Check to make certain that the leather washer is above the steel washer.)
3. Motor not properly supported from motor board.
4. Burrs on poles of rotor or stator. Remove with fine emery cloth.

The damper spring must fit without binding or chattering in the slot in the stator. The stator must be free to deflect in either direction between the limits of the damper spring. The damper spring must exert approximately equal force in restoring the stator to its mid-position when the stator is deflected manually in each direction.


Removing Rotor.—The rotor and turntable assembly simply rests on the ball bearing at bottom of vertical bearing. Remove by lifting upward.

Rotor Adjustment.—Remove motor from cabinet. Loosen the three screws that hold the rotor to the turntable, insert three 16-mil shims at equal distances around the gap between the rotor and stator, and then carefully tighten the three screws. The top of rotor must be flush with top of stator; add additional steel washers beneath the stator if necessary.

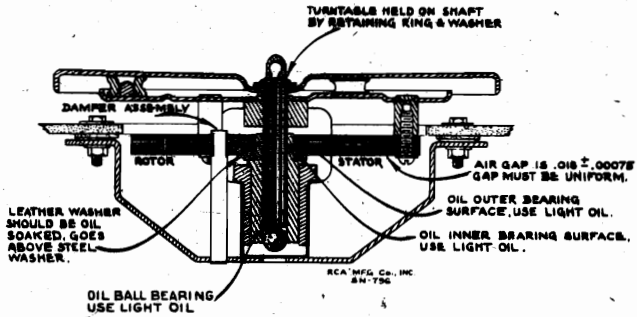


RCA MFG. CO., INC.


MODEL U9 (2nd Production)
Schematic, Gain, Voltage
Alignment, Trimmers, Socket
Lead Dress, Phono Data

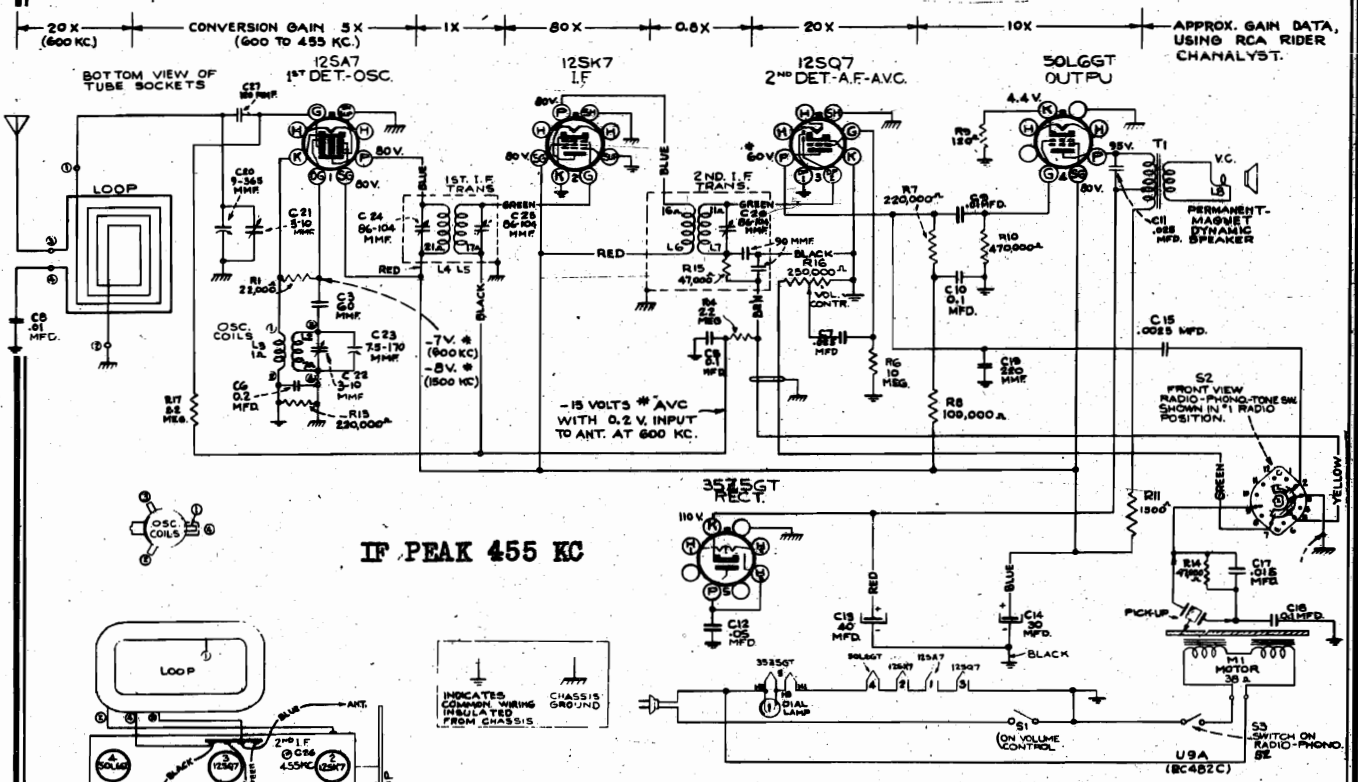

IF PEAK 455 KC

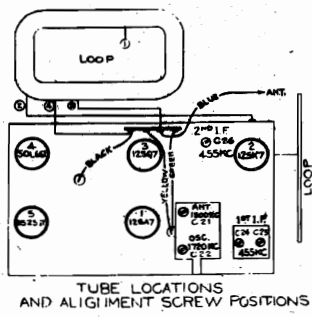

VOLTAGES SHOULD HOLD WITHIN ± 20% WITH 117V AC SUPPLY.
* MEASURED WITH CHANALYST, OR VOLT-OHM-YST.

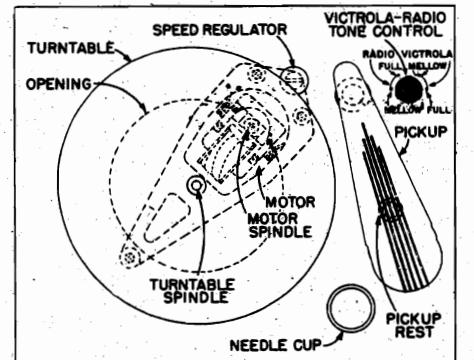

-1940 No. 12-

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test Oscillator.—Connect the low side of the test oscillator to the receiver chassis through a 0.01 mfd capacitor, and keep the output as low as possible.

Pre-Setting Dial.—With gang condenser in full mesh, the pointer should coincide with the left hand mark stamped in the dial back-plate.

Antenna.—This set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the green antenna lead, stapled to the base of the cabinet. The antenna should not be longer than 100 feet including the lead-in. If it is longer, connect a 100 mmfd. capacitor in series with the lead-in.

Steps	Connect the high side of test oscillator to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for max. output—
1	Tuning Cond. stator (det.) in series with 0.01 mfd.	455 kc	Quiet Point at 1,800 kc end of dial	C24, C25, C26 (1st and 2nd I-F transformers)
2	Antenna lead (green) in series with 100 mmfd.	1,720 kc	Full Clockwise (out of mesh)	C22 (osc.)
3		1,500 kc	Resonance on 1,500 kc signal	C21 (ant.)

LEAD	DRESS
black-high side of AC line	Away from R10; C9, R7 and C15; against side of chassis
heaters	down against chassis
C7, C9, C19, C15, R6, R7, R10, Shield Cable (green and yellow)	up away from chassis
blue and brown leads from phono switch	Tape to shielded cable away from phono switch black leads
green converter lead	Against base and away from diode lead
green diode lead	Away from 12SQ7 grid

First Edition

MODEL 19 (2nd Production)
Phono Data, Parts List

RCA MFG. CO., INC.

Miscellaneous Service Data


PHONOGRAPH MECHANISM.—

The phonograph motor is self-starting and operates the turntable through friction drive between the motor spindle and the rubber tire on the underside of the turntable.

The rubber driving tire on the turntable should never be removed since it is ground in to be concentric with the spindle. If replacement is required, the entire turntable should be replaced.

The speed regulator raises and lowers the motor. This changes the driving ratio between the motor and the turntable due to the motor spindle being conical in shape. It is important to adjust this regulator for a turntable speed of 78 r.p.m. WHILE PLAYING A 10-INCH RECORD WITH THE NEEDLE APPROXIMATELY ONE INCH FROM THE OUTER EDGE OF THE RECORD.

Lubrication.—The motor should be lubricated as follows: Place a few drops of S.A.E. 20 (or equivalent) on the turntable spindle and saturate the oil retaining felt pads on the motor shaft with S.A.E. 10 oil. This oiling process should be repeated once or twice a year. **CAUTION.**—THE MOTOR DRIVE SPINDLE AND RUBBER DRIVING TIRE ON THE TURNTABLE MUST BE KEPT CLEAN AND ENTIRELY FREE FROM OIL AND GREASE AT ALL TIMES.

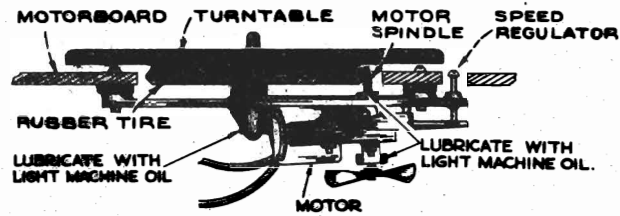

Electrical and Mechanical Specifications

FREQUENCY RANGE
 Standard Broadcast and one Police Band..... 540-1,720 kc
INTERMEDIATE FREQUENCY 455 kc

TUBE COMPLEMENT
 (1) RCA-12SA7..... 1st Detector—Oscillator
 (2) RCA-12SK7..... I-F Amplifier
 (3) RCA-12SQ7..... 2nd Detector, A.V.C., A.F.
 (4) RCA-50L6GT..... Power Output
 (5) RCA-35Z5GT..... Rectifier

PILOT LAMP (1)..... Mazda No. 51, 7.5 volts, 0.2 amp.

LOUDSPEAKER (RL-81-A3)
 Type..... 5-inch P M Dynamic
 Voice Coil Impedance..... 4.0 ohms at 400 cycles

PICKUP..... Crystal
 Pickup Impedance..... 0.1 meg. at 1,000 cycles

PHONO MECHANISM..... { Self-starting motor
 Edge-driven turntable
 Adjustable Speed

POWER OUTPUT RATING
 Undistorted..... 0.71 watts
 Maximum..... 1.36 watts

POWER SUPPLY RATINGS
 A-6..... 105-125 volts, 60 cycles
 A-5..... 105-125 volts, 50 cycles

POWER CONSUMPTION..... 55 watts

CABINET DIMENSIONS
 10-5/16 in. high 17-7/16 in. wide 13 3/4 in. deep
 Tuning Drive Ratio..... 12 to 1
 Shipping Weight..... 23 1/2 lbs.
 Net Weight..... 22 lbs.

Replacement Parts


Insist on genuine factory-tested parts, which are readily identified and may be purchased from authorized dealers.

STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES (RC-482C)			MOTOR ASSEMBLIES		
12724	Capacitor—120 mmfd. (C27).....	.35	32654	Ball—Ball for turntable bearing.....	.06
13057	Capacitor—66 mmfd. (C3).....	.35	33007	Base—Motor base and ball assembled.....	.80
34459	Capacitor—.0025 mfd. (C15).....	.20	33002	Motor—Complete motor 105-125 volts, 60 cycle (M1).....	3.70
11315	Capacitor—.015 mfd. (C17).....	.20	34406	Motor—Complete motor 105-125 volts, 50 cycle (M1).....	4.60
30938	Capacitor—.025 mfd. (C7, C11).....	.20	33896	Mounting—Motor cradle mounting hardware and retainer.....	.10
4937	Capacitor—.01 mfd. (C8, C9).....	.25	PICKUP AND ARM ASSEMBLIES		
32787	Capacitor—.05 mfd. (C12).....	.20	33591	Arm—Pickup arm only—less cartridge, base and cable.....	.50
4839	Capacitor—.01 mfd. (C5, C10, C18).....	.30	34481	Arm—Pickup pivot arm and shaft.....	.70
34505	Capacitor—.02 mfd. (C6).....	.30	34482	Base—Pickup mounting base.....	.30
34873	Capacitor—Electrolytic comprising 1 section of 40 mfd. and 1 section of 30 mfd.....	1.00	34758	Bushing—Rubber bushing and metal bushing for pickup pivot arm shaft.....	.15
34443	Coil—Oscillator coil.....	.60	33122	Crystal—Pickup crystal cartridge and needle screw.....	3.75
34843	Condenser—Tuning condenser.....	2.20	34311	Ring—Retaining ring for pivot shaft.....	.05
34034	Control—Volume control and power switch.....	1.50	33529	Screw—Needle screw.....	.10
32634	Cord—Drive cord.....	.10	SPEAKER ASSEMBLIES (RL-81A3)		
33453	Drum—Drive cord drum.....	.50	32907	Cap—Dust cap.....	.02
34841	Frame—Dial and drive frame complete—less indicator drive cord, tuning shaft and drive drum.....	1.45	35570	Cone—Cone complete with voice coil.....	1.35
34842	Indicator—Station selector indicator.....	.30	5118	Plug—3-prong male plug for speaker.....	.25
11765	Lamp—Dial lamp.....	.15	35904	Transformer—Output transformer.....	1.45
35130	Loop—Antenna loop.....	1.45	MISCELLANEOUS ASSEMBLIES		
30668	Plug—2-contact female plug for motor cable.....	.35	33680	Cup—Needle cup.....	.15
5119	Plug—3-contact female plug for speaker cable.....	.25	34849	Dial—Glass dial scale.....	1.50
12071	Resistor—120 ohms, 1/2 watt (R9).....	.20	34850	Hinge—Lid hinge.....	.25
3153	Resistor—1,500 ohms, 1 watt (R11).....	.22	33942	Knob—"Radio-Phono." switch knob.....	.25
13996	Resistor—22,000 ohms, 1/2 watt (R1).....	.20	30863	Knob—Tuning or volume control and power switch knob.....	.15
5132	Resistor—47,000 ohms, 1/10 watt.....	.15	30870	Plug—2-contact male plug for motor leads.....	.35
12412	Resistor—47,000 ohms, 1/2 watt (R14).....	.20	32610	Rest—Rubber pickup rest.....	.10
14560	Resistor—100,000 ohms, 1/2 watt (R8).....	.20	30900	Spring—Retaining spring for knobs Stock No. 33942 and 30863.....	.05
12264	Resistor—220,000 ohms, 1/2 watt (R7, R13).....	.20	32627	Support—Lid support.....	.40
12285	Resistor—470,000 ohms, 1/2 watt (R10).....	.20	33467	Switch—Combination "Radio-Phono." switch tone control.....	1.35
12679	Resistor—2.2 meg., 1/2 watt (R4, R17).....	.20	33899	Turntable—Turntable complete with spindle and rubber drive tire.....	3.70
13601	Resistor—10 meg., 1/2 watt (R6).....	.20			
34033	Shaft—Tuning shaft.....	.25			
34449	Socket—Dial lamp socket.....	.30			
32537	Socket—Tube socket.....	.20			
33296	Spring—Retaining spring for drum Stock No. 33453.....	.06			
34844	Transformer—First I-F transformer.....	1.25			
34442	Transformer—Second I-F transformer.....	1.50			
11908	Washer—"C" washer for holding shaft Stock No. 34933.....	.03			

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

RCA MFG. CO., INC.

MODELS 14BT1, 14BT2, 14BK
Ch. RC-525, RC-525A, RC-525B
Schematic, Gain, Voltage
Alignment, Trimmers, Socket
Lead Dress, Batt. Connection

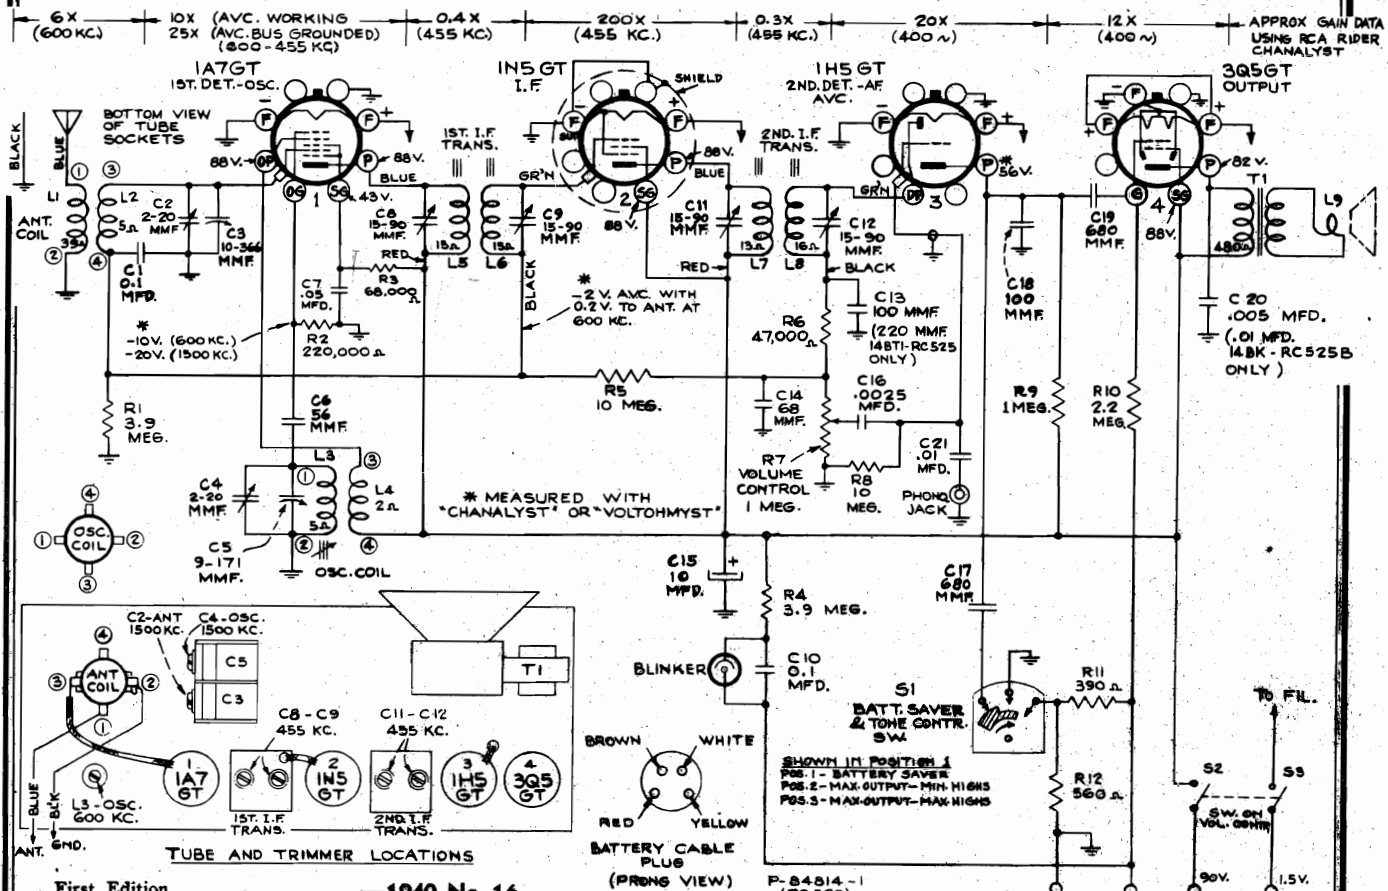

First Edition

-1940 No. 16-

Frequency Range..... 540-1,720 kc
Intermediate Frequency..... 455 kc
LOUDSPEAKER
Type..... Permanent-magnet Dynamic
Diameter (14BT1, 14BT2) 5 in. (14BK) 6 in.
Voice Coil Impedance (14BT1, 14BT2) 4 ohms (14BK) 3.4 ohms

Alignment Procedure

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-oscillator.—For all alignment operations, keep the output as low as possible to avoid a-v-c action.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	1N5-GT grid cap, in series with .01 mfd.	455 kc	Quiet point between 550-750 kc	C11 and C12 (2nd I-F transformer)
2	1A7-GT grid cap, in series with .01 mfd.	455 kc		C8 and C9 (1st I-F transformer)
3	Antenna terminal, in series with 200 mmfd. Connect low side of test-osc. to "G" term.	1500 kc	1500 kc	C4 (osc.) C2 (ant.)
4		600 kc	600 kc	L3 (sec.) Rock in
5	Repeat steps 3 and 4			

Precautionary Lead Dress

1. The phono input leads should be dressed away from 3Q5GT output leads.
2. C21 should be dressed away from the 3Q5GT output leads.
3. The lead from the 3Q5GT plate to output transformer should be dressed under clip and away from audio input plate leads.

POWER OUTPUT



Undistorted Maximum .065 watts .140 watts
Maximum .180 watts .250 watts

BATTERIES REQUIRED

1 "A"—"B" Pack (Burgess Type 17GD60 or equivalent).


CURRENT CONSUMPTION

"A" 0.25 amperes
"B" { 7.3 m.a. (switch at "Battery Saver" position).
11.8 m.a. (switch at "Music" or "Speech" position).

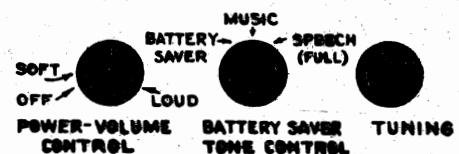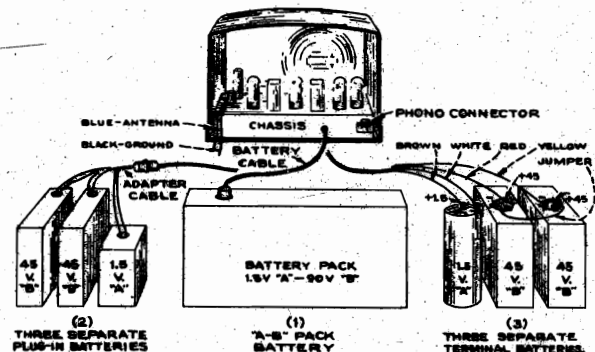

RCA MFG. CO., INC.

MODELS 16K, Ch. RC-509C
16T3, Ch. RC-509A
Schematic, Gain, Voltage

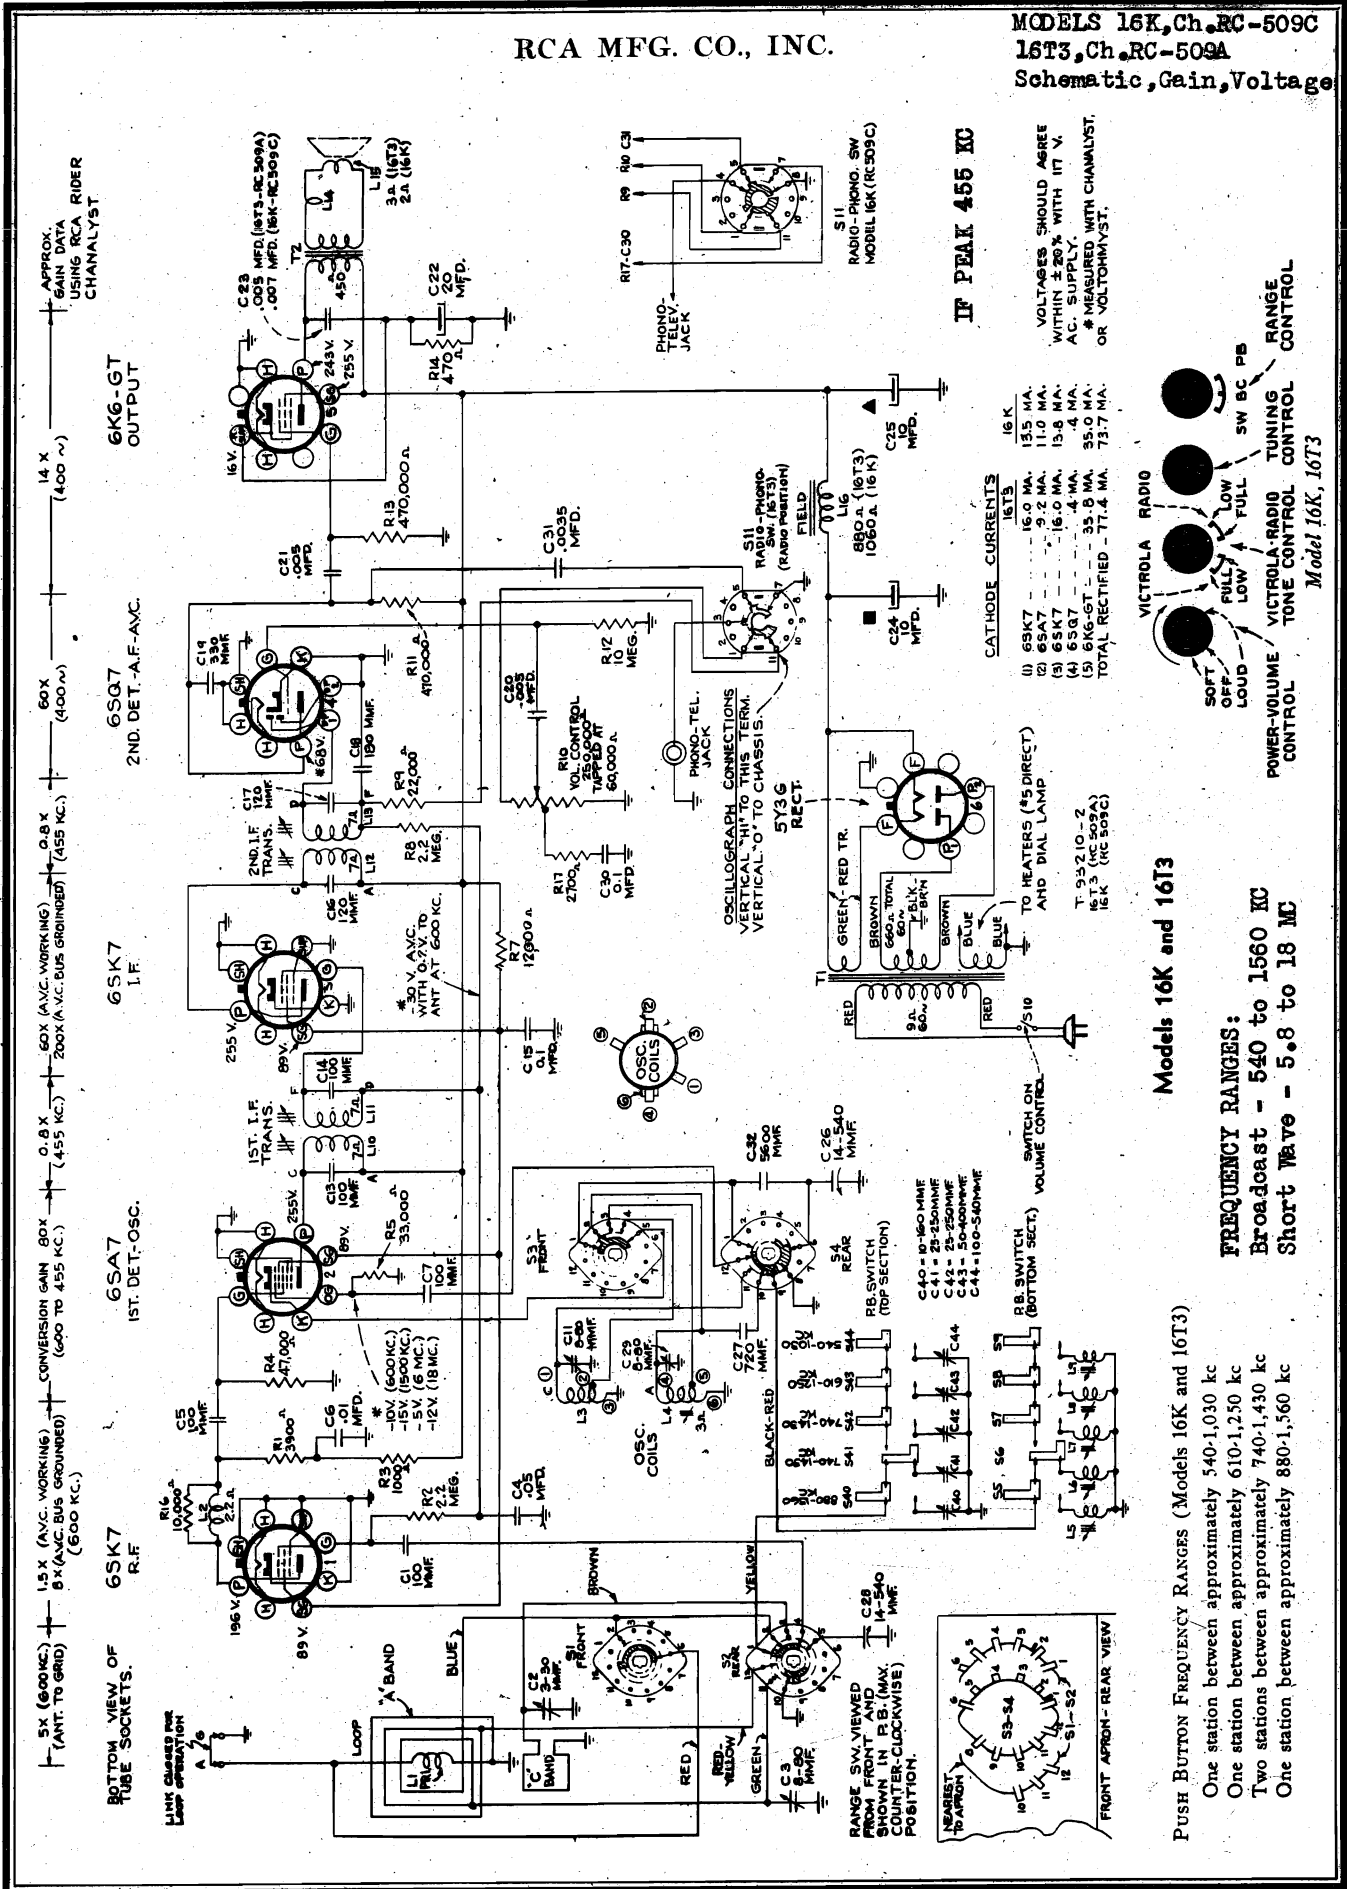

APPROX. GAIN DATA USING RCA RIDER CHANNELYST

14 X (400 ~)

60 X (400 ~)

0.8 X (455 KC.)

0.8 X (455 KC.)

1.5 X (600 KC.)

5 X (600 KC.)

6GK-GT OUTPUT

6SK7 2ND. DET.-A.F.-A.V.C.


6SK7 I.F.

6SK7 R.F.

1ST. DET.-OSC.

BOTTOM VIEW OF TUBE SOCKETS

Limit checked for last operation

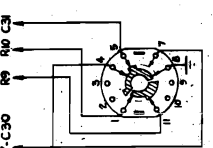


RADIO-PHONO. SW MODEL 16K (RC509C)

IF PEAK 455 KC

VOLTAGES SHOULD AGREE WITHIN ±20% WITH IT V. AC. SUPPLY. * MEASURED WITH CHANNELYST. OR VOLT-TOHMVST.

CATHODE CURRENTS


Model	16K	16T3
(1) 6SK7	15.0 MA.	13.5 MA.
(2) 6SK7	9.2 MA.	11.0 MA.
(3) 6SK7	16.0 MA.	15.8 MA.
(4) 6SK7	4.4 MA.	4.4 MA.
(5) 6GK-GT	35.8 MA.	35.0 MA.
TOTAL RECTIFIED	71.4 MA.	71.7 MA.

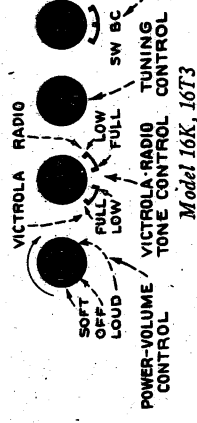

Models 16K and 16T3

FREQUENCY RANGES:
Broadcast - 540 to 1560 KC
Short Wave - 5.8 to 18 MC



PUSH BUTTON FREQUENCY RANGES (Models 16K and 16T3)
One station between approximately 540-1,030 kc
One station between approximately 610-1,250 kc
Two stations between approximately 740-1,430 kc
One station between approximately 880-1,560 kc

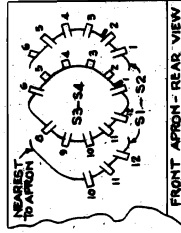

RANGE SW. VIEWED FROM FRONT. POSITION SHOWN IN R.B. (MAX. COUNTER-CLOCKWISE) POSITION.

RCA MFG. CO., INC.


MODEL 16T2, Ch. RC-509B
Schematic, Gain, Voltage

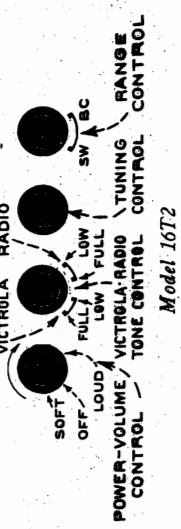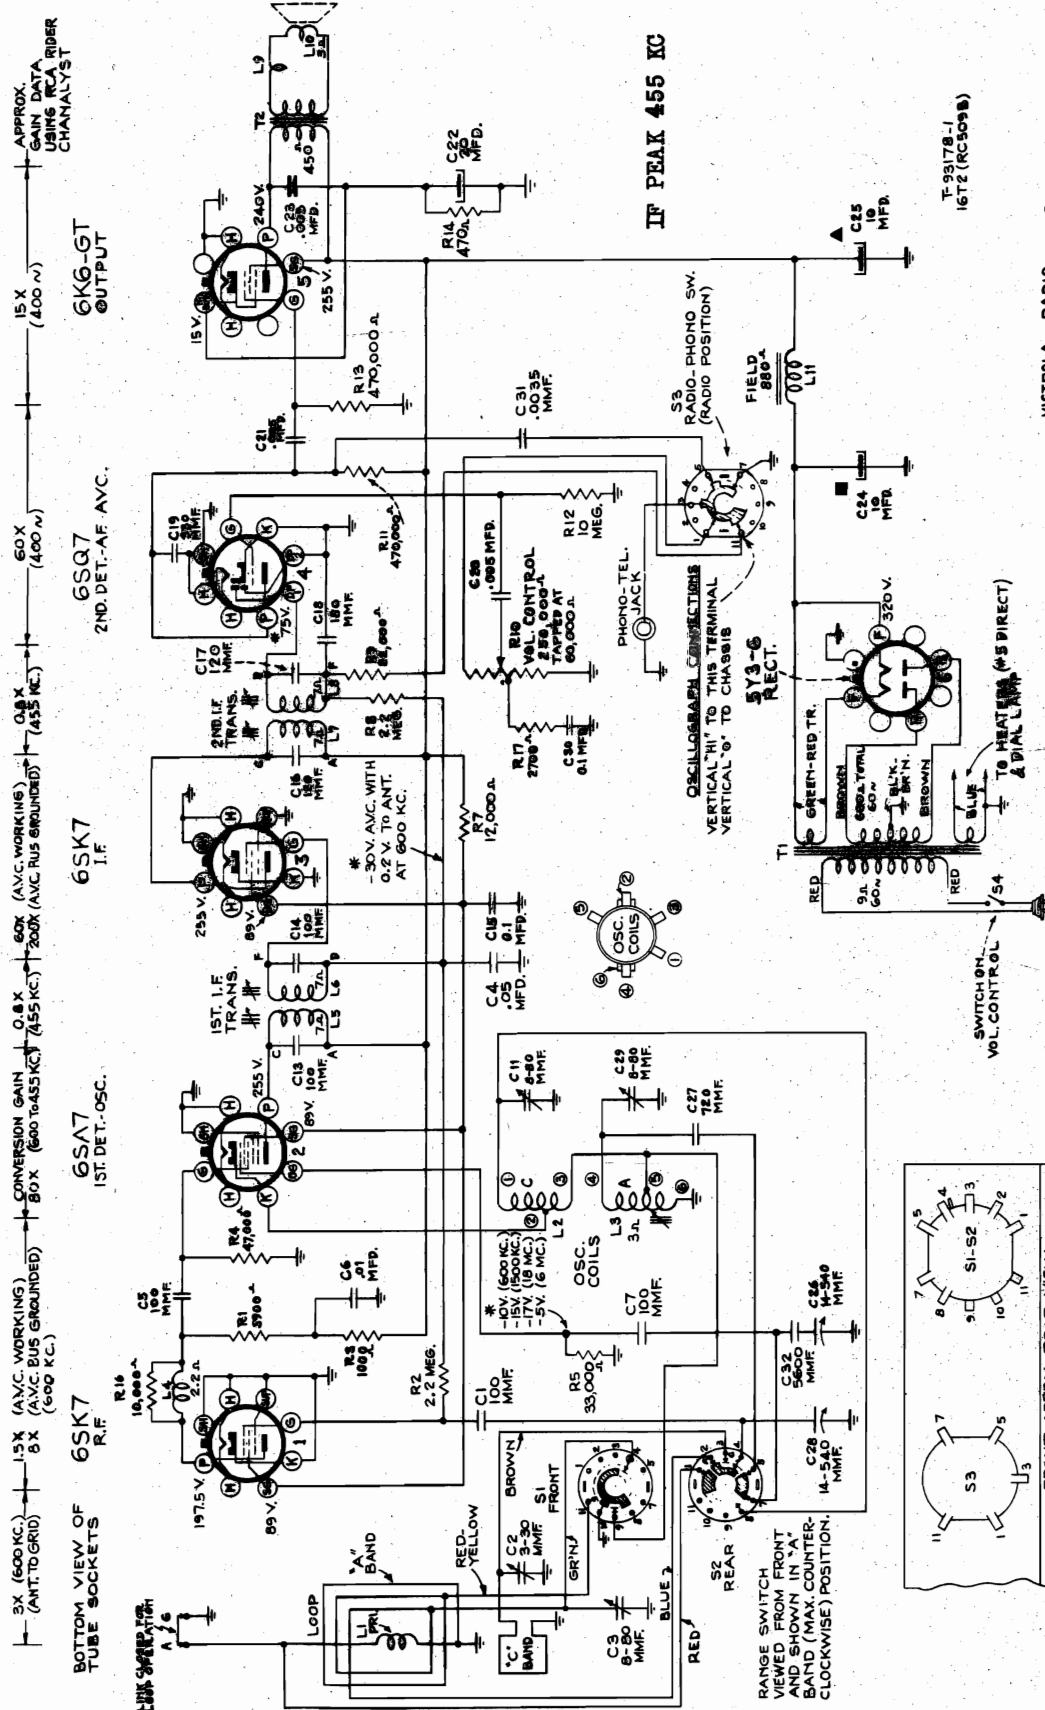

Model 16T2
FREQUENCY RANGES:
Broadcast - 540 to 1560 KC
Short Wave - 5.8 to 18 MC

CATHODE CURRENTS
(1) 6SK7 - 15.5 MA.
(2) 6SA7 - 9.9 MA.
(3) 6SK7 - 16.5 MA.
(4) 6SQ7 - 0.4 MA.
(5) 6K6-GT - 35.0 MA.
TOTAL RECTIFIED - 76.4 MA.

VOLTAGES SHOULD AGREE WITHIN ± 20% WITH 117 V. A.C. SUPPLY.
* MEASURED WITH CHANNELYST OR VOLTOHMYST.

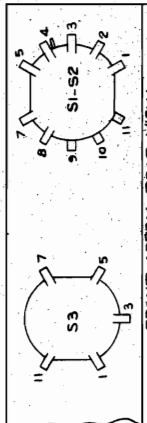

APPROX. GAIN DATA USING RCA RIDER CHANNELYST

15X (400 M)
6K6-GT OUTPUT

60X (400 M)
6SQ7 2ND DET.-AF. AVC.

0.8X (455 KC)
6SK7 I.F.

CONVERSION GAIN BOX (600 TO 455 KC) 200X (AVC BUS GROUND)
0.8X (A.V.C. WORKING) 60X (A.V.C. WORKING) 200X (AVC BUS GROUND)
6SA7 1ST DET.-OSC.


15X (600 KC) 15X (ANT. TO GRID) 8X (A.V.C. WORKING) 8X (A.V.C. WORKING)
6SK7 R.F.

3X (600 KC) (ANT. TO GRID) 15X (A.V.C. WORKING) 8X (A.V.C. WORKING) 8X (A.V.C. WORKING)
BOTTOM VIEW OF TUBE SOCKETS


MODELS 16K, 16T3
Tuner Data, Trimmers
Loop Connections, Dial

RCA MFG. CO., INC.


MODEL 16T2
Loop Connections, Dial
Lead Dress, all models

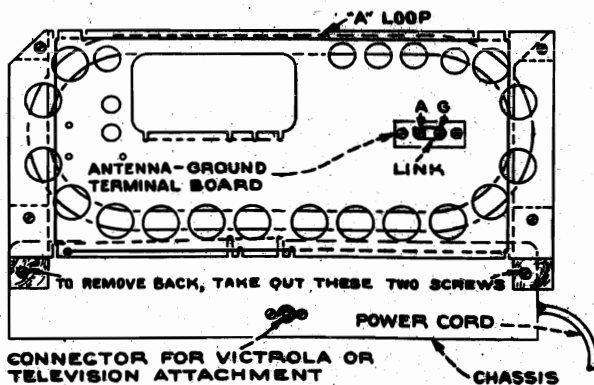


Model 16T2

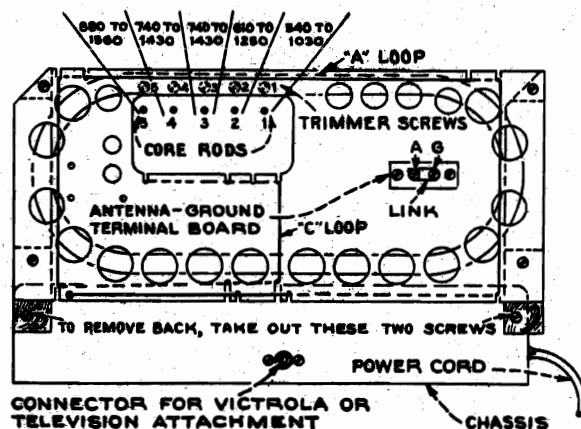


Model 16K, 16T3

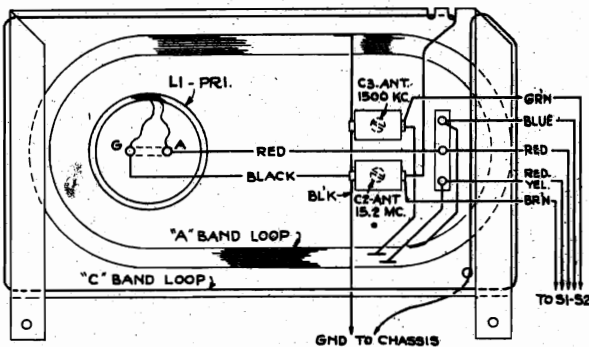

Model 16T2

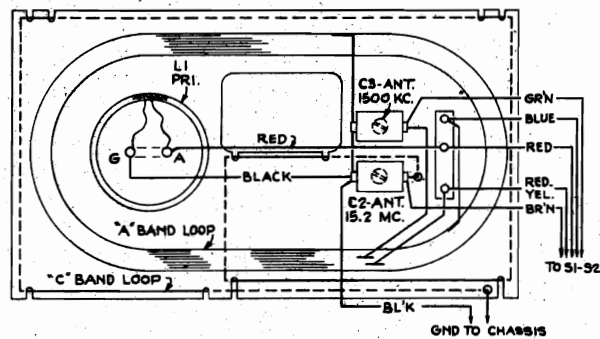

Model 16K, 16T3

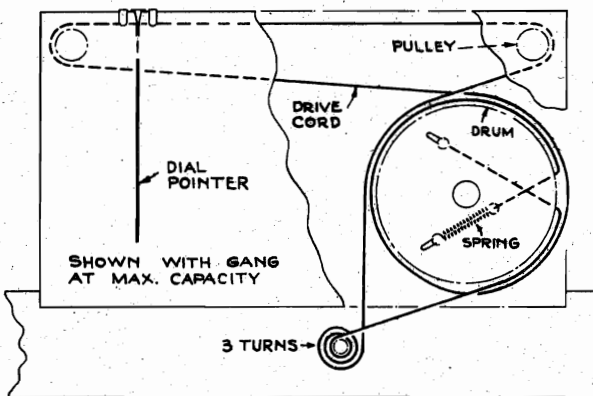

Precautionary Lead Dress.—

1. Dress red leads from C band trimmer to coil and switch away from each other (16T2).
2. Keep bus from range switch to lance short as possible (16T2).
3. Tape together red, blue, and brown leads from chassis to loop (16T2).
4. Dress yellow lead from IF to tone switch up away from chassis.
5. Dress C-20 from volume control up away from chassis.
6. Keep grid end of R-12 as short as possible.
7. Dress C-80 away from red and brown A.C. leads.
8. Dress power transformer leads down against chassis.
9. Dress brown power transformer leads back away from IF transformer.

At left—Dial Drive in Models 16K, 16T2, 16T3.

Push Button Adjustment (Models 16K and 16T3)

The push buttons connect to separate magnetite-core oscillator coils and separate loop circuit trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow about five minutes warm-up period before making adjustments.

The procedure is as follows:

1. Make a list of the five desired stations, arranged in order from low to high frequencies.
2. Turn the range switch to the broadcast (BC) position and manually tune in the first station on the list.
3. Turn range switch to push-button (PB) position and press in the left-hand button.
4. Unscrew the push-button loop trimmers to minimum capacity.
5. Adjust L9 to receive the first station. To secure the best adjustment, rotate the set for least pickup, and adjust L9 for peak output.

6. Adjust C44 for peak output on the first station.
7. Proceed in the same manner to adjust for the remaining four stations.


Owing to the relatively high R-F gain, it may be found that there are several settings of each push-button magnetite core that will bring in any particular station. The procedure outlined above (backing the push-button loop trimmers to minimum capacity before adjusting the cores) will reduce this effect.

On the 880 to 1,560 kc push-button, the higher frequency stations may be received with L5 either in or out (oscillator frequency either 455 kc below or 455 kc above the station frequency). The adjustment with this core in its out position (oscillator frequency 455 kc above the station frequency) is the correct one.

NOTE: Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.

RCA MFG. CO., INC.


MODEL 16T4, Ch. RC-509
Schematic, Gain, Voltage
Dial, Tone Cont, Data

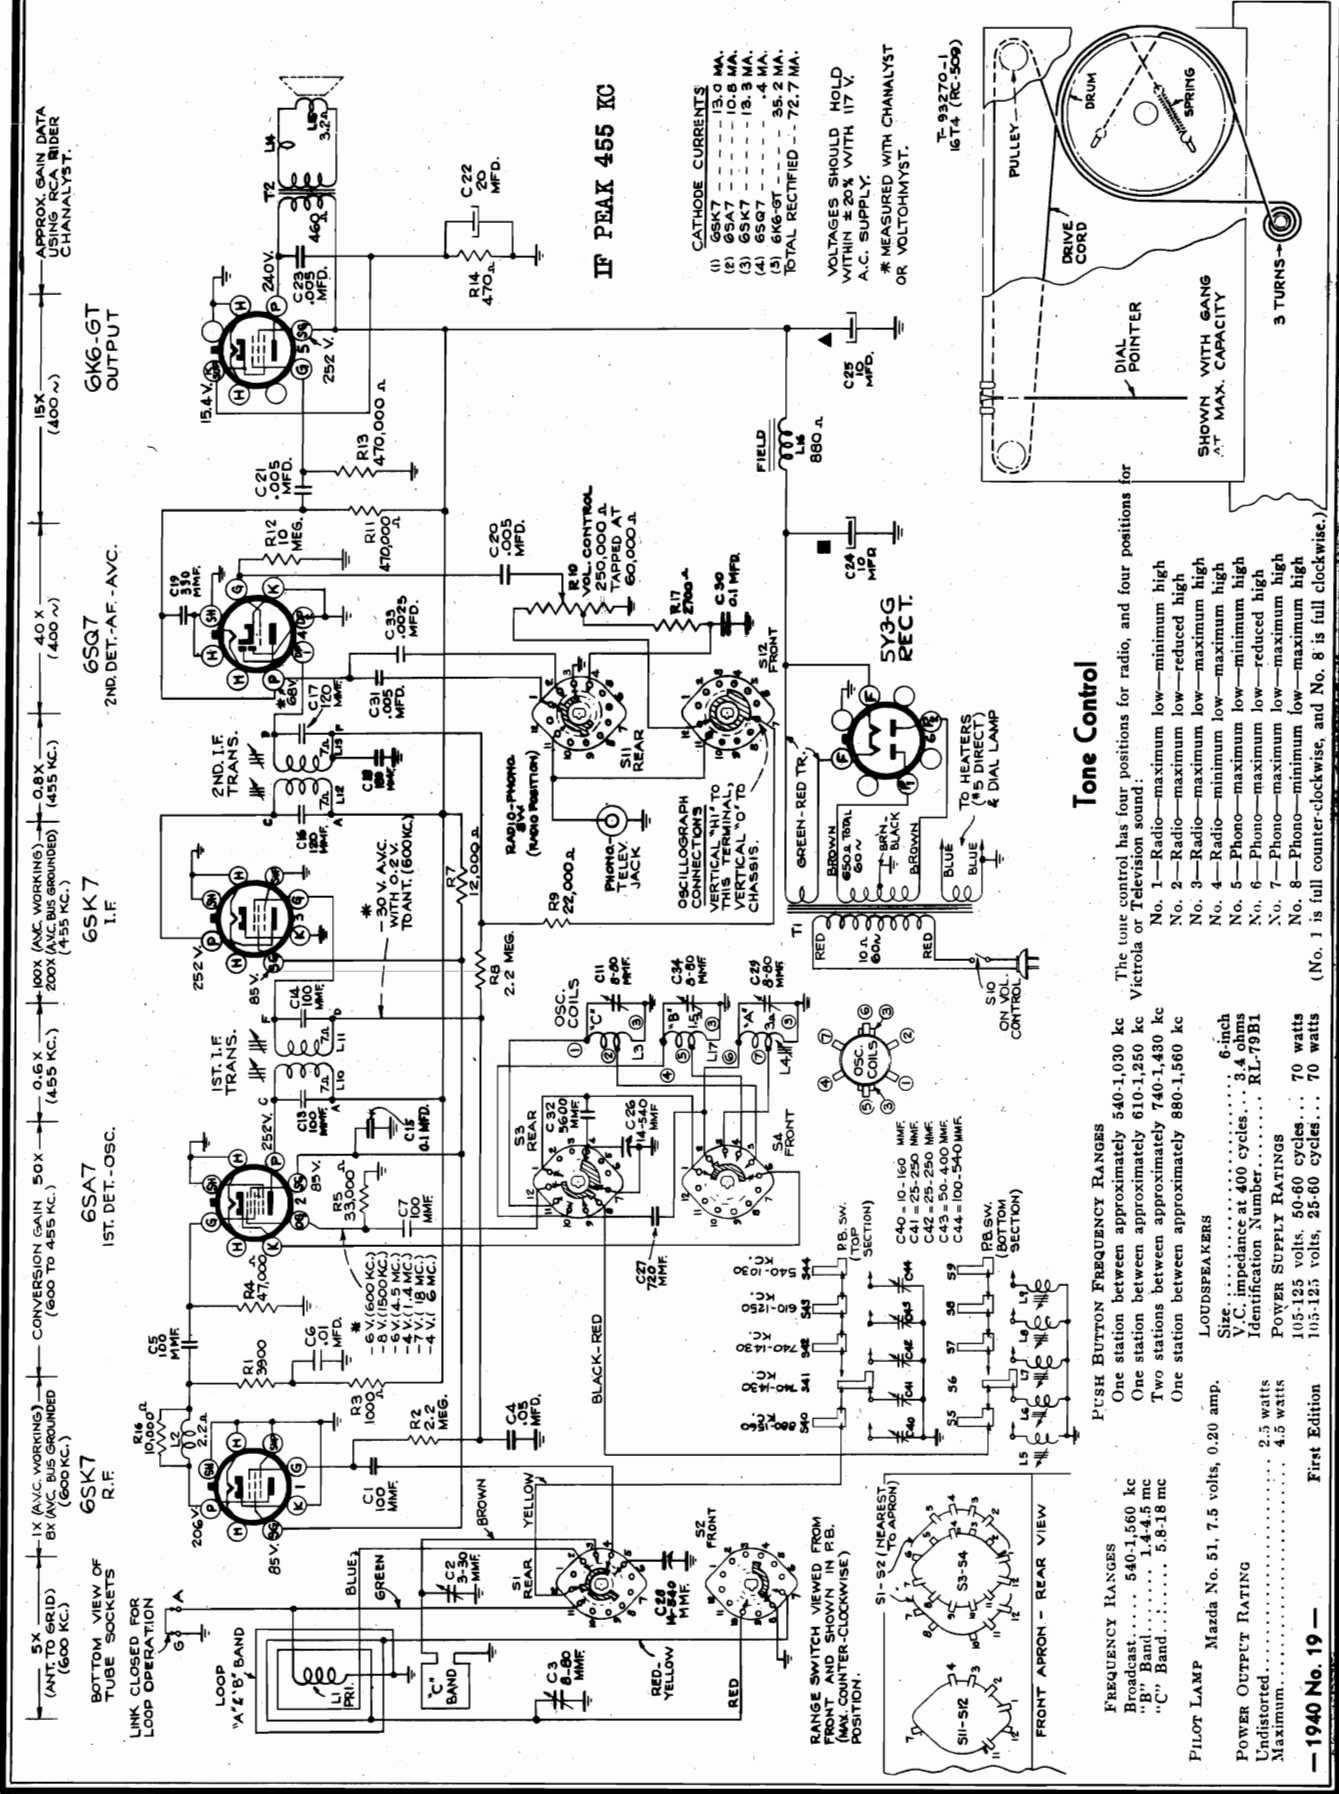

CATHODE CURRENTS
 (1) 6SK7 3.0 MA.
 (2) 6SA7 10.0 MA.
 (3) 6SK7 13.0 MA.
 (4) 6SQ7 4.0 MA.
 (5) 6K6-GT 35.2 MA.
 TOTAL RECTIFIED 72.7 MA.

VOLTAGES SHOULD HOLD WITHIN ±20% WITH 117 V. A.C. SUPPLY.
 * MEASURED WITH CHANALYST OR VOLTOHMYST.

IF PEAK 455 KC

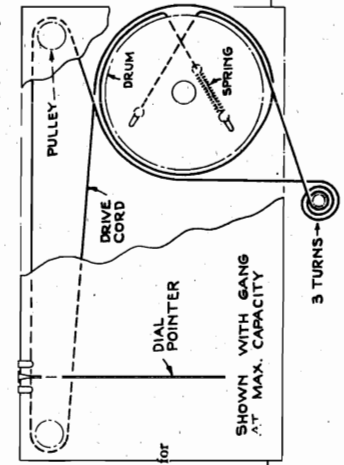

Tone Control

The tone control has four positions for radio, and four positions for Victrola or Television sound:

- No. 1—Radio—maximum low—minimum high
- No. 2—Radio—maximum low—reduced high
- No. 3—Radio—maximum low—maximum high
- No. 4—Radio—minimum low—maximum high
- No. 5—Phono—maximum low—minimum high
- No. 6—Phono—maximum low—reduced high
- No. 7—Phono—maximum low—maximum high
- No. 8—Phono—minimum low—maximum high

(No. 1 is full clockwise, and No. 8 is full counterclockwise.)

PUSH BUTTON FREQUENCY RANGES

One station between approximately 540-1,030 kc
 One station between approximately 610-1,250 kc
 Two stations between approximately 740-1,450 kc
 One station between approximately 880-1,560 kc

LOUDSPEAKERS

Size 6-inch
 V.C. impedance at 400 cycles 3.4 ohms
 Identification Number RL-79B1

POWER SUPPLY RATINGS

Undistorted 2.5 watts
 Maximum 4.5 watts

PILOT LAMP

Mazda No. 51, 7.5 volts, 0.20 amp.
 First Edition

MODEL 16T4
Alignment, Trimmers, Socket
Tuner, Loop Connections

RCA MFG. CO., INC.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic diagrams.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Electronic Voltmeter.—The electronic voltmeter in the Chanalyst or Volt Ohmyst provides an unexcelled output indicator. It should be connected to the AVC bus, and the test-oscillator output adjusted to produce several volts of AVC.

Calibration Scale.—The glass tuning dial may be easily removed from the cabinet and temporarily attached to the chassis for quick reference during alignment. Or, if necessary, the calibration scale printed in this service note can be used in conjunction with an ordinary 12-inch ruler as an accurate and convenient substitute for the regular dial.


Each method is described below.

Using Tuning Dial.—

- Slide out the flat spring clamp at each end of the dial, and remove the glass dial from the cabinet.
- With gang in full mesh, move the dial pointer to the reference mark at the left-hand end of the dial backing plate.
- Place the glass dial under the pointer so that the extreme left scale graduations coincide with the pointer. Use scotch tape to hold the glass dial in this position.
- After completion of the alignment, replace the glass dial in cabinet, taking care that the fibre light shields are in correct position at ends of dial.

Using Calibration Scale.—

- With gang in full mesh, move the dial pointer to the reference mark at the left-hand end of the dial backing plate.

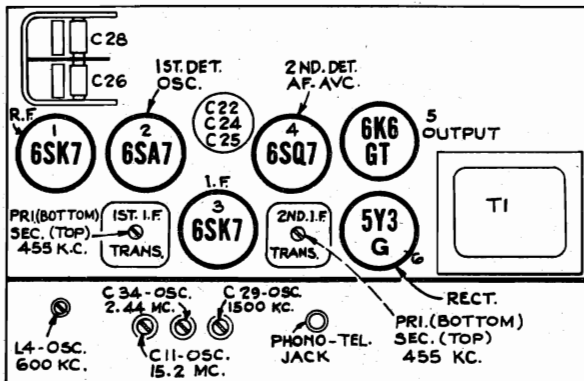

2. Place a flat 12-inch ruler on the dial backing plate so the left-end of ruler is at the reference mark at left-end of backing plate. Temporarily fasten the ruler with scotch tape to the backing plate.


3. Refer to calibration scale printed in this service note. This is a reduced reproduction of the dial with an inch-scale drawn at top and bottom. To find the correct pointer position in inches for any desired frequency, draw a vertical line through this frequency on the calibration scale. For example, 1,500 kc is approximately 4 inches from the reference mark.

see Calibration Dial Model 16K

Dial-Pointer Adjustment.—After the chassis is replaced in cabinet, move the dial pointer (if necessary) so that it is at the left-hand graduation on the dial with the gang in full mesh.

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output—
1	I-F grid, in series with .01	455 kc	"A" band, Quiet Point at 1,500 kc end of dial	L12 and L13 (2nd I.F. Trans.)
2	1st-Det. grid, in series with .01			L10 and L11 (1st I.F. Trans.)
3	Antenna terminal, in series with 300 ohms (link open)	15.2 mc	15.2 mc "C" band	C11 (osc.)* C2 (ant.)
4		2.44 mc	2.44 mc "B" band	C34 (osc.) Rock in
5	Antenna terminal, in series with 200 mmfd. (link open)	1,500 kc	1,500 kc "A" band	C29 (osc.) C3 (ant.)
6		600 kc	600 kc "A" band	L4 Rock in
7	Repeat steps 5 and 6.			

* Use minimum capacity peak if two peaks can be obtained. Check to determine that the correct peak has been used, by tuning receiver to 14.29 mc, where a weaker signal should be received.
 Note: Oscillator tracks above signal on all bands.

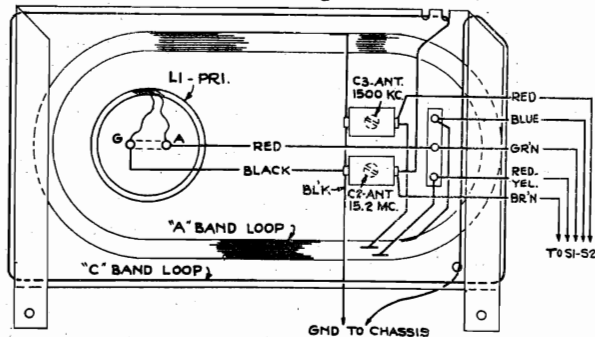

Push Button Adjustment



The push buttons connect to separate magnetite-core oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow at least five minutes warm-up period before making adjustments.

In the event that the receiver is to be used with an external antenna use one or two feet of wire (as an antenna) to ensure sharp peaking during the final adjustment procedure. For loop operation, the link should be strapped across "A" and "G" terminals on back of set. In either case the procedure is as follows:

- Make a list of the desired stations, arranged in order from low to high frequencies.
- Turn the range selector to "A" band, and manually tune in the first station on the list.
- Turn range selector to "PB" position, push-in station button No. 1 (extreme left). Then adjust the No. 1 oscillator core (L9) to receive the station.
- After oscillator core is adjusted properly, adjust C-44 for maximum output.

Owing to the relatively high RF gain, it may be found that there are several settings of each push-button magnetite core that will bring in any particular station. In such cases it is advisable to unscrew the push-button loop trimmers to minimum capacity before adjusting the push-button magnetite cores. Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.

- Adjust for each of the remaining stations in the same manner.
- Make a final careful adjustment of the oscillator cores and antenna trimmers.

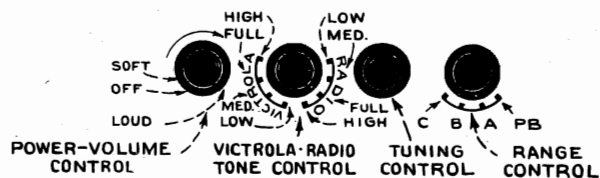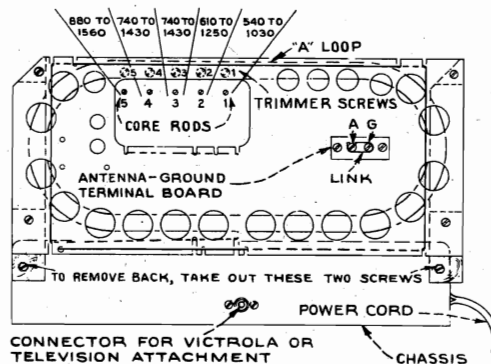

MODEL 17K
Alignment, Trimmers
Socket, Dial, Loop

RCA MFG. CO., INC.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic diagram.


Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.


Calibration for Alignment.—The proper dial calibration for alignment purposes can be set up in two ways:

1. The dial may be removed from the cabinet by sliding out the two spring pieces which clamp it in its mounting position. The condenser plates should then be turned into full mesh, the pointer adjusted to the scratch at the left end of the dial backing plate, and the dial slipped under the pointer so that its extreme left calibration mark coincides with the pointer. The dial may be held in place with scotch tape. In this manner the actual receiver dial is used for alignment. When alignment is finished, the scale should be replaced including the fibre light shields which are folded under the ends of the glass scale.
2. A calibration scale is attached to the tuning drum. The correct setting of the gang, in degrees, for each alignment frequency is given in the alignment table. Check the position of the drum, making sure that the 0 degree scale mark is horizontal with the gang in full mesh.

Pointer for Calibration Scale.—If method (2) is used, improvise a pointer for the calibration scale by fastening a piece of wire to the chassis, and bend the wire so that it points to the 0 degree mark on the calibration scale when the plates are fully meshed.


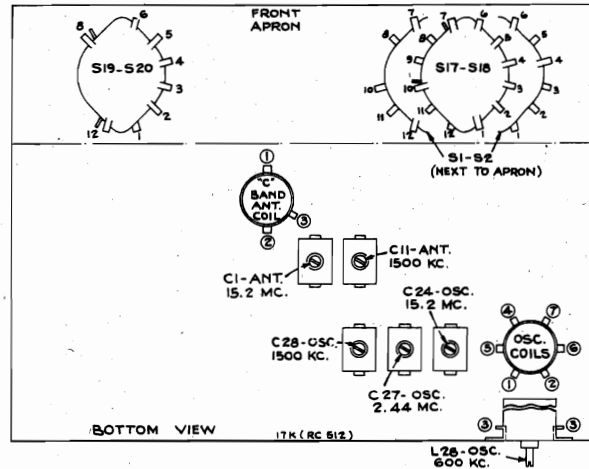


Steps	Connect high side of test oscillator to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for maximum peak output—
1	6SK7 I-F grid in series with 0.01 mfd.	455 kc	"A" band. Quiet Point between 550 and 750 kc	L-21 and L-22 (2nd I-F Trans.)
2	6SA7 grid in series with 0.01 mfd.			L-19 and L-20 (1st I-F Trans.)
3	Antenna terminal in series with 47 mmfd.	15.2 mc	15.2 mc (149°) "C" band	C-24 (Osc.)* C-1 (R-F) Rock gang
4	Antenna terminal in series with 200 mmf. (link open)	2.44 mc	2.44 mc (97°) "B" band	C-27 (Osc.)
5	Antenna terminal in series with 200 mmf.	600 kc	600 kc (30.5°) "A" band	L-28 (Rock in)
6	Antenna terminal in series with 200 mmf.	1,500 kc	1,500 kc (158°) "A" band	C-28 (Osc.) C-11 (R-F)
7	Repeat steps 5 and 6.			

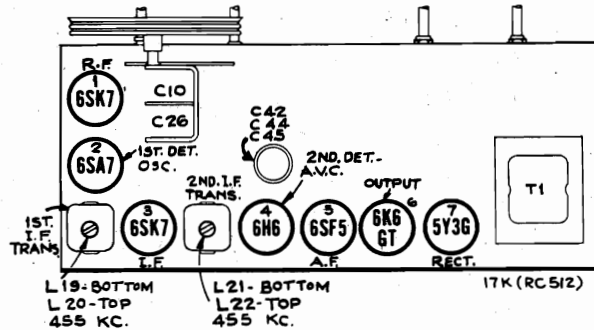

* Use minimum capacity peak if two can be obtained. Check to determine that C-24 has been adjusted to correct peak by tuning receiver to approximately 14.29 mc where a weaker signal should be received.

Note.—Oscillator tracks above signal on all bands.

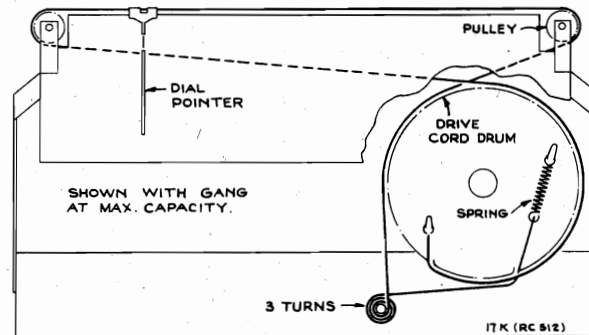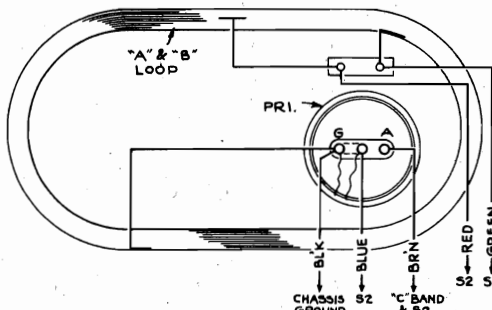

RCA MFG. CO., INC.

MODEL 17K
Tuner Data, Parts


Push Button Adjustment

The station push buttons connect to separate magnetite-core oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow at least five minutes warm-up period before making adjustments.

In the event that the receiver is to be used with an external antenna use one or two feet of wire (as an antenna) to ensure sharp peaking during the final adjustment procedure. For loop operation, the link should be strapped across terminals on back of set. In either case the procedure is as follows:

1. Make a list of the desired stations, arranged in order from low to high frequencies.
2. Turn the range selector to "A" band, and manually tune in the first station on the list.
3. After turning range selector to "PB" position, push in station button No. 1 (extreme left). Then adjust the No. 1 oscillator core (L-14) to receive the station.
4. After oscillator core is set correctly, adjust C-8 for maximum output.
Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.
5. Adjust for each of the remaining stations in the same manner.
6. Make a final careful adjustment of the oscillator cores and antenna trimmers.

Owing to the relatively high r-f gain, it may be found that a given station can be tuned in at several different settings of the

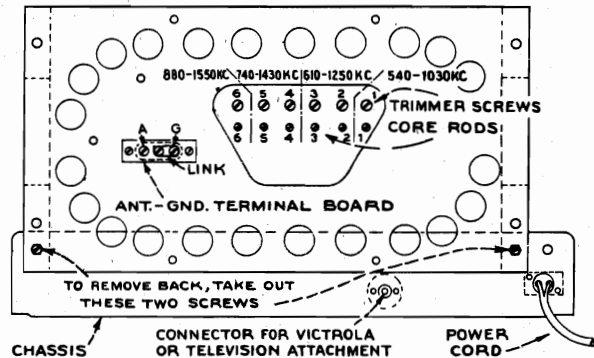

magnetite-core oscillator push-button coils. In such cases, it is advisable to unscrew the loop push-button trimmers to minimum capacity before adjusting the magnetite cores.

On the 880 to 1,550 kc push-button, the higher frequency stations may be received with L-9 either in or out (oscillator frequency either 455 kc below or 455 kc above the station frequency). The adjustment with this core in its out position (oscillator frequency 455 kc above the station frequency) is the correct one.

Replacement Parts

Insist on genuine factory-tested parts, which are readily identified and may be purchased from authorized dealers.

STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES (RC-512)					
34025	Board—"Antenna-Ground" board	.25	12454	Resistor—33,000 ohms, 1/4 watt	.20
35795	Calibrator—Drive drum calibrator	.25	12412	Resistor—47,000 ohms, 1/4 watt	.20
35792	Capacitor—Trimmer comprising 2 sections of 3-30 mmfd. each	.40	12264	Resistor—220,000 ohms, 1/4 watt	.20
35791	Capacitor—Mica trimmer comprising 3 sections of 8-80 mmfd. each	.50	12285	Resistor—470,000 ohms, 1/4 watt	.20
13200	Capacitor—10 mmfd.	.35	12679	Resistor—2.2 meg., 1/4 watt	.20
35804	Capacitor—Mica trimmer comprising 1 section of 10-160 mmfd., 2 sections of 25-250 mmfd., 2 sections of 50-400 mmfd., and 1 section of 100-540 mmfd.	1.15	13601	Resistor—10 meg., 1/4 watt	.20
13057	Capacitor—88 mmfd.	.35	35797	Shaft—Tuning shaft and pulley	.30
12720	Capacitor—100 mmfd.	.35	35772	Shield—Bottom end shield for power transformer	.30
13003	Capacitor—180 mmfd.	.35	35709	Shield—Top end shield for power transformer	.30
35877	Capacitor—720 mmfd.	.45	31364	Socket—Dial lamp socket	.20
13895	Capacitor—5,600 mmfd.	.70	31251	Socket—Tube socket	.25
34506	Capacitor—.0018 mfd.	.25	31418	Spring—Drive cord spring	.05
33584	Capacitor—.005 mfd.	.25	36025	Switch—Push button selector switch	3.50
4937	Capacitor—.01 mfd.	.25	36024	Switch—Range switch	1.90
32787	Capacitor—.05 mfd.	.20	35636	Transformer—First I-F transformer	1.70
4839	Capacitor—0.1 mfd.	.30	35790	Transformer—Second I-F transformer	1.60
35858	Capacitor—Electrolytic comprising 2 sections of 10 mfd., 400 volts each and 1 section of 20 mfd., 25 volts	1.70	35588	Transformer—Power transformer—110 volts, 25 cycle	6.30
35965	Coil—Antenna coil—"C" band	.60	35959	Transformer—Power transformer—110 volts, 60 cycle—less end shields	3.75
35876	Coil—Coil and resistor assembly	.30	35969	Washer—"C" washer for tuning shaft	.02
36031	Coil—Loop loading coil	.50	SPEAKER ASSEMBLIES (RL-70L5)		
35789	Coil—Oscillator coil	1.15	13867	Cap—Dust cap	.03
35803	Coil—Push button switch oscillator coil	.30	12079	Coil—Field coil—1,060 ohms	2.70
35960	Condenser—Variable tuning condenser	2.50	11469	Coil—Neutralizing coil	.30
36249	Control—Tone control	1.15	36145	Cone—Cone complete with voice coil	1.50
36250	Control—Volume control and power switch	2.00	5118	Plug—3-prong male speaker plug	.25
34662	Cord—Drive cord	.25	31301	Transformer—Output transformer	1.70
35788	Core—Adjusting core and stud for oscillator coil	.15	MISCELLANEOUS ASSEMBLIES		
35871	Core—Adjusting core and stud for push button oscillator coils	.55	36027	Bezel—Push button bezel—less buttons	.75
35794	Drum—Tuning condenser drive drum—less calibrator	.70	35883	Button—Push button—dark brown	.15
35799	Frame—Dial frame complete with lamp bracket and pulleys—less dial	2.00	36299	Button—Push button—light brown	.15
35798	Indicator—Station selector indicator and carriage	.20	35914	Decalcomania—Control panel decal	.10
36029	Loop—Antenna loop complete	3.00	36028	Dial—Glass dial scale	1.20
36030	Loop—Loop winding only	.75	36026	Escutcheon—Dial scale escutcheon—less dial	1.75
36009	Plug—2-contact male plug for loop cable	.25	35814	Knob—Range switch or tone control knob—dark brown	.25
5119	Plug—3-contact female plug for speaker cable	.25	36297	Knob—Range switch or tone control knob—light brown	.25
5040	Plug—4-contact female plug for speaker cable	.30	35775	Knob—Tuning or volume control knob—dark brown	.25
35787	Plug—Phono. input plug	.15	36298	Knob—Tuning or volume control knob—light brown	.25
35973	Pulley—Drive cord pulley	.08	11765	Lamp—Dial lamp	.15
30498	Resistor—390 ohms, 1/4 watt	.20	36149	Marker—Push button station marker	.35
14720	Resistor—1,000 ohms, 1/4 watt	.20	36007	Mounting—Antenna loop mounting hardware	.10
30654	Resistor—1,500 ohms, 1/4 watt	.20	33774	Mounting—Speaker mounting hardware comprising 1 eyelet and 1 grommet	.30
35878	Resistor—10,000 ohms	.30	34053	Spring—Retaining spring for button Stock No. 35883 and 36299	.02
35875	Resistor—12,000 ohms, 3 watts	.35	30900	Spring—Retaining spring for knob Stock No. 35775, 35814, 36297, 36298	.05
13045	Resistor—18,000 ohms, 1/4 watt	.20			
13998	Resistor—22,000 ohms, 1/4 watt	.20			

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

MODEL 18T

Tuner Data, Parts

RCA MFG. CO., INC.

Push Button Adjustment

Six station push buttons connect to separate magnetite-core oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow at least five minutes warm-up period before making adjustments.

In the event that the receiver is to be used with an external antenna use one or two feet of wire (as an antenna) to ensure sharp peaking during the final adjustment procedure. For loop operation, the link should be strapped across "A" and "G" terminals on back of set. In either case the procedure is as follows:


1. Make a list of the desired six stations, arranged in order from low to high frequencies.
2. Turn the range selector to "A" band, and manually tune in the first station on the list.
3. After turning range selector to "PB" position, push in station button No. 1 (extreme left). Then adjust the No. 1 oscillator core (L-14) to receive the station. It may be necessary to maintain approximate tracking between antenna and oscillator to receive weak stations. Approximate tracking will be indicated by noise, when tuned off a station, which will disappear when the station is correctly tuned.
4. After oscillator core is adjusted properly, adjust C-8 for maximum output.

Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.

5. Adjust for each of the five remaining stations in the same manner.

6. Make a final careful adjustment of the oscillator cores and antenna trimmers.

Owing to the relatively high RF gain, it may be found that there are several settings of each push-button magnetite core that will bring in any particular station. In such cases, it is advisable to unscrew the push-button loop trimmers to minimum capacity before adjusting the push-button magnetite cores.

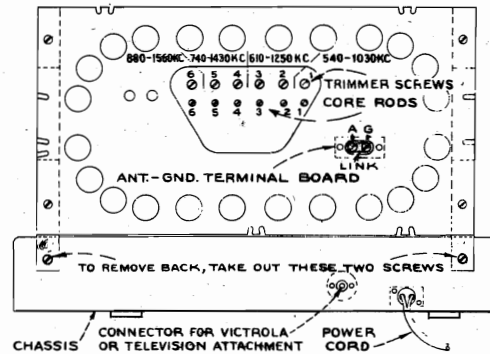

Replacement Parts

Insist on genuine factory-tested parts, which are readily identified and may be purchased from authorized dealers.


STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES (RC-511)					
34785	Board—"Antenna-Ground" board	.20	13716	Resistor—2,200 ohm, 1/4 watt	.20
31292	Capacitor—Mica trimmer for loop—comprising 2 sections of 3-30 mmfd.	.40	14024	Resistor—2,700 ohm, 1/4 watt	.20
35792	Capacitor—Mica trimmer—comprising 2 sections of 3-30 mmfd.	.40	14559	Resistor—10,000 ohm, 1/4 watt	.20
35791	Capacitor—Mica trimmer—comprising 3 sections of 8-80 mmfd.	.50	35875	Resistor—12,000 ohm, 3/4 watt	.35
13001	Capacitor—8.2 mmfd.	.35	12695	Resistor—15,000 ohm, 1/4 watt	.20
35804	Capacitor—Mica trimmer—comprising 1 section of 10-160 mmfd., 2 sections of 25-250 mmfd., 2 sections of 50-400 mmfd. and 1 section of 100-540 mmfd.	1.15	13998	Resistor—22,000 ohm, 1/4 watt	.20
12896	Capacitor—15 mmfd.	.35	12454	Resistor—33,000 ohm, 1/4 watt	.20
13057	Capacitor—88 mmfd.	.35	12264	Resistor—220,000 ohms, 1/4 watt	.20
34899	Capacitor—100 mmfd. (in 1st I.F. can)	.30	12285	Resistor—470,000 ohm, 1/4 watt	.20
12720	Capacitor—100 mmfd.	.35	12679	Resistor—2.2 megohm, 1/4 watt	.20
34700	Capacitor—120 mmfd.	.30	13601	Resistor—10 megohm, 1/4 watt	.20
13003	Capacitor—180 mmfd.	.35	14350	Screw—No. 8-32 square-head set-screw for drum	.03
12952	Capacitor—330 mmfd.	.35	35797	Shaft—Tuning shaft and pulley	.30
35877	Capacitor—720 mmfd.	.45	31364	Socket—Dial lamp socket	.20
34787	Capacitor—2,850 mmfd.	.50	35787	Socket—Phonograph input socket	.15
13895	Capacitor—5,600 mmfd.	.70	31251	Socket—Tube socket	.25
34459	Capacitor—.0025 mfd.	.20	31418	Spring—Drive cord spring	.05
33584	Capacitor—.005 mfd.	.25	35802	Switch—Push button switch—less coils and trimmer	2.75
32787	Capacitor—.05 mfd.	.20	35793	Switch—Range switch	2.20
12484	Capacitor—.025 mfd.	.30	36249	Switch—Tone switch	XX
33014	Capacitor—Electrolytic—comprising 3 sections of 10 mfd. and 1 section of 20 mfd.	1.90	35636	Transformer—First I.F. transformer	1.70
35785	Coil—Loop primary (L1)	.50	35790	Transformer—Second I.F. transformer	1.60
35803	Coil—Push button oscillator coil	.30	35588	Transformer—Power transformer, 110 volt, 25 cycle	6.30
35789	Coil—Oscillator coil	1.15	35800	Transformer—Power transformer, 110 volt, 60 cycle	4.75
35805	Coil—R. F. coil	1.15	33726	Washer—"C" washer for tuning shaft	.02
35796	Condenser—Variable tuning condenser	4.00	SPEAKER ASSEMBLIES (RL79A5)		
35807	Control—Volume control (1/4 meg.) and power switch	2.00	35849	Cap—Speaker cone dust cap	.03
36250	Control—Volume control (2 meg.) and power switch	XX	35810	Coil—Field coil, 1,060 ohm	1.70
32634	Cord—Drive cord	.10	35441	Cone—Cone complete with voice coil	1.25
35788	Core—Core and stud for oscillator coil	.15	35809	Transformer—Output transformer	1.35
35795	Dial—Calibrator dial	.25	MISCELLANEOUS ASSEMBLIES		
35794	Drum—Tuning condenser drive drum—less calibrator	.70	35813	Bezel—Push button bezel	1.10
35799	Frame—Dial frame complete—less dial scale	2.00	35812	Button—Push button (dark brown)	.15
35798	Indicator—Station selector indicator	.20	36300	Button—Push button (light brown)	XX
35788	Loop—Antenna loop winding	.50	35914	Decalcomania—Control panel decal	.10
35784	Loop—Complete antenna loop with trimmer, coil and "Antenna-Ground" board	3.60	35392	Decalcomania—"RCA Victor" decal	.05
13988	Resistor—10 ohm, 1/4 watt	.20	35811	Dial—Glass dial scale	1.75
13220	Resistor—56 ohm, 1/4 watt	.20	35814	Knob—Range or tone switch knob (dark brown)	.25
14439	Resistor—100 ohm, 1/4 watt	.20	36297	Knob—Range or tone switch knob (light brown)	XX
35885	Resistor—470 ohm, 2 watt	.25	35775	Knob—Tuning or volume control knob (dark brown)	.25
			36298	Knob—Tuning or volume control knob (light brown)	XX
			11765	Lamp—Dial lamp	.15
			36149	Marker—Push button marker	XX
			30900	Spring—Retaining spring for knobs, Stock No. 35814	.05

XX—Price upon application to your RCA Distributor.

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

RCA MFG. CO., INC.

MODEL 18T, Ch. RC-511
Schematic, Gain

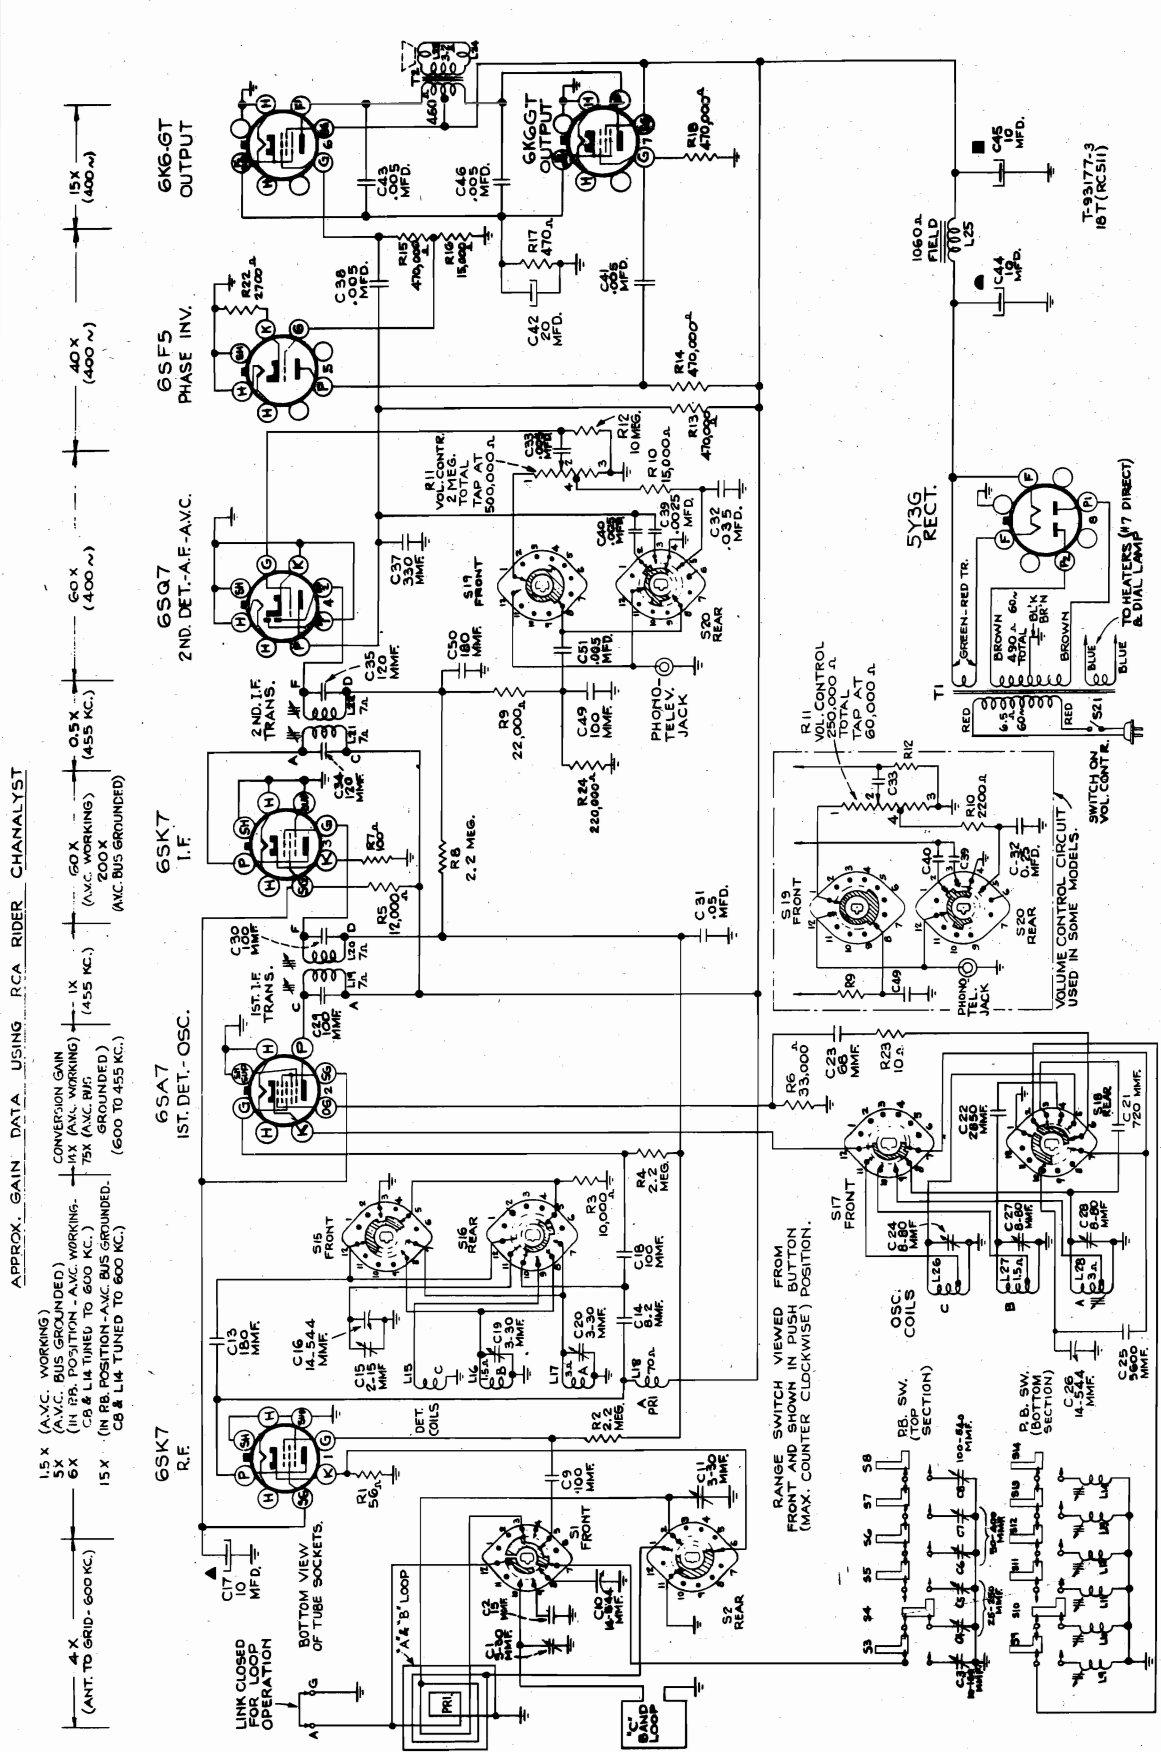

APPROX. GAIN DATA USING RCA RIDER CHANNELYST

CONVERSION GAIN
 1X (A.V.C. WORKING) (455 KC.)
 75X (A.V.C. OFF) (600 KC.)
 600X (A.V.C. BUS GROUNDING) (600 TO 455 KC.)

15X (A.V.C. WORKING) (ANT. TO GRID - 600 KC.)
 5X (IN RB. POSITION - A.V.C. WORKING) (600 TO 455 KC.)
 4X (ANT. TO GRID - 600 KC.)

LOUDSPEAKER (RL-79-A5)
 Type 6-inch Electrodynamic
 V.C. Impedance 8.4 ohms at 400 cycles

POWER SUPPLY RATINGS
 105-125 volts, 50-60 cycles, 90 watts
 105-125 volts, 25-60 cycles, 80 watts

First Edition

PILOT LAMPS (2) ... Mazda No. 51, 6.3 volts, 0.20 amp.
 POWER OUTPUT RATING
 Undistorted 6.0 watts
 Maximum 5.5 watts

Electrical Specifications

PUSH-BUTTON RANGES
 One station between approximately ... 540-1,080 kc
 Two stations between approximately ... 610-1,250 kc
 Two stations between approximately ... 740-1,430 kc
 One station between approximately ... 880-1,560 kc

—1940 No. 11—

FREQUENCY RANGES
 Broadcast 540-1,560 kc
 Medium Wave 1,560-4.0 mc
 Short Wave 5.8-18.0 mc
 INTERMEDIATE FREQUENCY 455 kc

MODEL 18T
Alignment, Trimmers
Socket, Dial, Loop
Tone Cont. Data

RCA MFG. CO., INC.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.


Calibration for Alignment.—The proper dial calibration for alignment purposes can be set up in two ways:

1. The dial may be removed from the cabinet by sliding out the two spring pieces which clamp it in its mounting position. The condenser plates should then be turned into full mesh, the pointer adjusted to the scratch at the left end of the dial backing plate, and the dial slipped under the pointer so that its extreme left calibration mark coincides with the pointer. The dial may be held in place with scotch tape. In this manner the actual receiver dial is used for alignment. When alignment is finished, the scale should be replaced including the fibre light shields which are folded under the ends of the glass scale.
2. A calibration scale is attached to the tuning drum. The correct setting of the gang, in degrees, for each alignment frequency is given in the alignment table. Check the position of the drum, making sure that the 0 degree scale mark is horizontal with the gang in full mesh.

Pointer for Calibration Scale.—If method (2) is used, improvise a pointer for the calibration scale by fastening a piece of wire to the

chassis, and bend the wire so that it points to the 0 degree mark on the calibration scale when the plates are fully meshed.


Steps	Connect high side of test oscillator to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for maximum peak output—
1	6SK7 I-F grid in series with 0.01 mfd.	455 kc	"A" band Quiet Point between 550 and 750 kc	L-21 and L-22 (2nd I-F Trans.)
2	6SA7 grid in series with 0.01 mfd.			L-19 and L-20 (1st I-F Trans.)
3	Antenna terminal in series with 300 ohms ("A" antenna trimmer C-11, should be $\frac{1}{2}$ turn out)	15.2 mc	15.2 mc (149°) "C" band	C-24 (Osc.)* C-15 (Det.) Rock gang C-1 (R-F) Rock gang
4	Antenna terminal in series with 200 mmf.	2.44 mc	2.44 mc (91.5°) "B" band	C-27 (Osc.) C-19 (Det.)
5	Antenna terminal in series with 200 mmf. (Preset "A" osc. trimmer C-28 $\frac{1}{2}$ turn out)	600 kc	600 kc (33.2°) "A" band	L-28 Rock gang
6	Antenna terminal in series with 200 mmf.	1,500 kc	1,500 kc (163.4°) "A" band	C-28 (Osc.) C-20 (Det.) C-11 (R-F)
7	Repeat step 5, then 6			
8	Antenna terminal in series with 300 ohms	15.2 mc	15.2 mc (149°) "C" band	C-1 (R-F) Rock gang

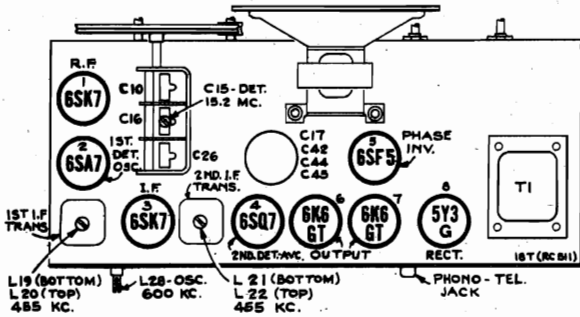

* Use minimum capacity peak if two can be obtained. Check to determine that C-24 has been adjusted to correct peak by tuning receiver to approximately 14.29 mc where a weaker signal should be received.

Note.—Oscillator tracks above signal on all bands.

To reduce sensitivity during RF Alignment connect a 15,000 ohm, $\frac{1}{2}$ watt resistor across secondary of 1st IF transformer.


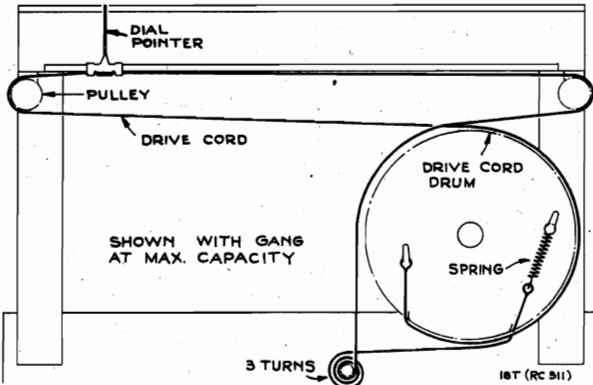


Tone Control

The tone control has four positions for radio, and four positions for Victrola or Television sound:


- No. 1—Radio—maximum low—minimum high
- No. 2—Radio—maximum low—reduced high
- No. 3—Radio—maximum low—maximum high
- No. 4—Radio—minimum low—maximum high
- No. 5—Phono—maximum low—minimum high
- No. 6—Phono—maximum low—reduced high
- No. 7—Phono—maximum low—maximum high
- No. 8—Phono—minimum low—maximum high

(No. 1 is full counter-clockwise, and No. 8 is full clockwise.)

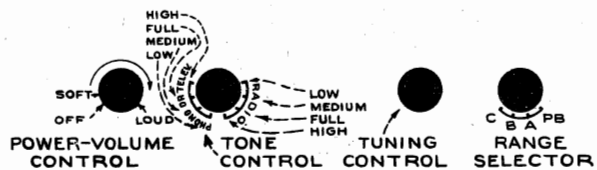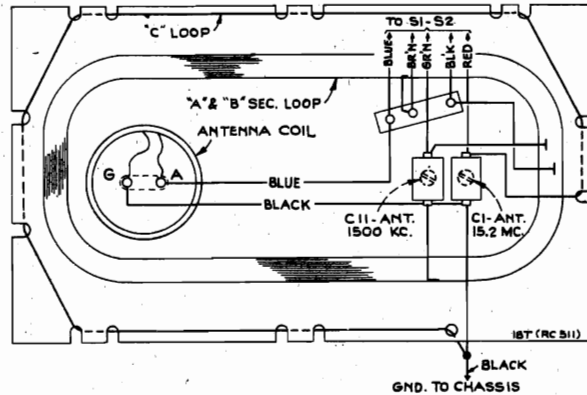

RCA MFG. CO., INC.

MODEL 18T
Chassis Wiring, Voltage

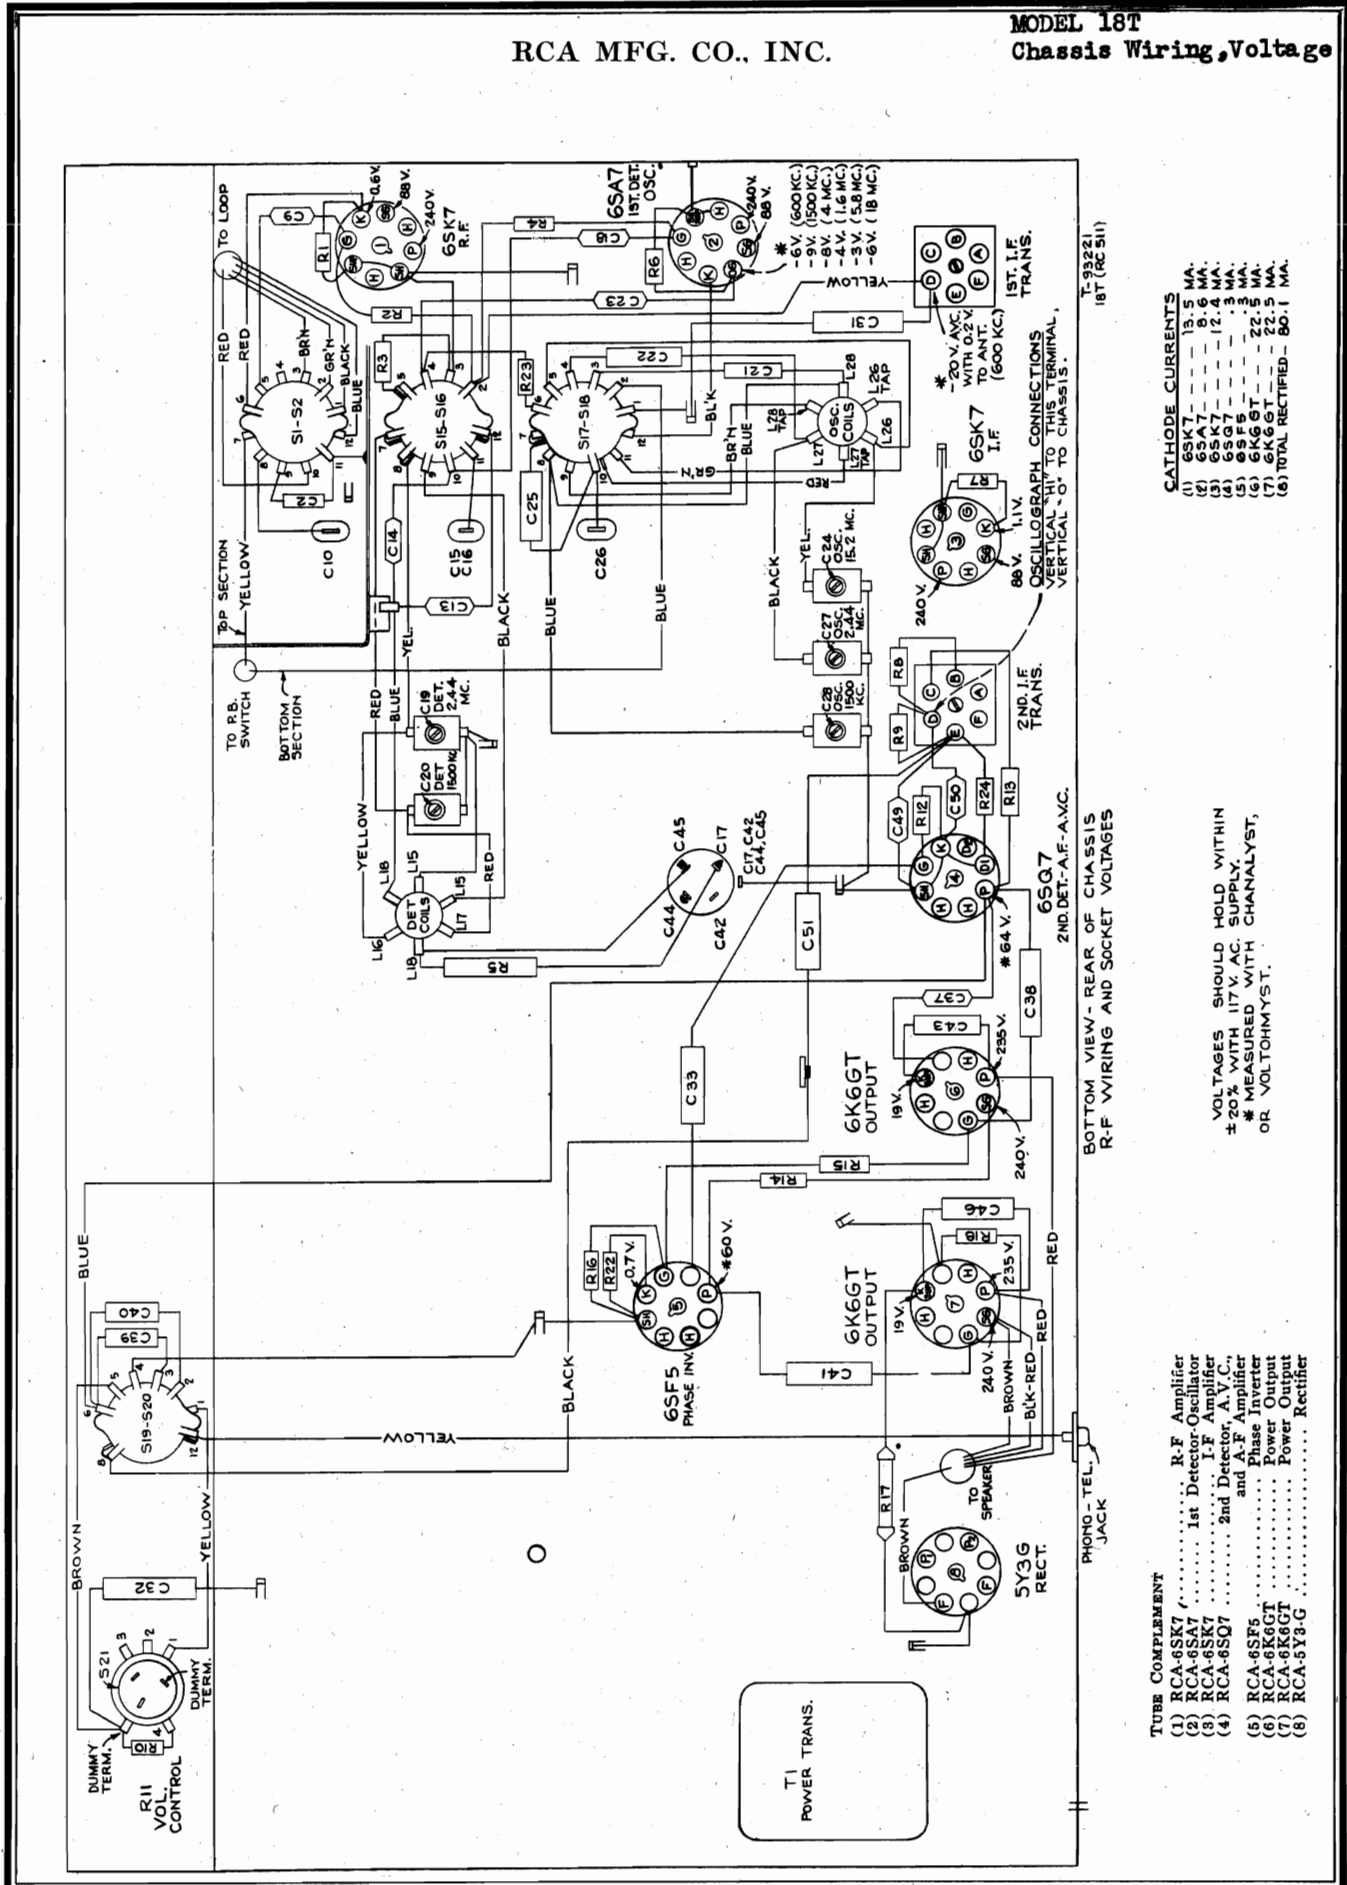

T-93221
18T (RC 511)

BOTTOM VIEW - REAR OF CHASSIS
R-F WIRING AND SOCKET VOLTAGES

CATHODE CURRENTS

(1) 6SK7	13.5 MA.
(2) 6SA7	8.6 MA.
(3) 6SK7	12.4 MA.
(4) 65Q7	12.3 MA.
(5) 6SF5	3 MA.
(6) 6K6GT	22.5 MA.
(7) 6K6GT	22.5 MA.
(8) TOTAL RECTIFIED	80.1 MA.

- TUBE COMPLEMENT
- (1) RCA-6SK7 R-F Amplifier
 - (2) RCA-6SA7 1st Detector-Oscillator
 - (3) RCA-6SK7 I-F Amplifier
 - (4) RCA-65Q7 2nd Detector, A.V.C., and A-F Amplifier
 - (5) RCA-6SF5 Phase Inverter
 - (6) RCA-6K6GT Power Output
 - (7) RCA-6K6GT Power Output
 - (8) RCA-5Y3-G Rectifier

VOLTAGES SHOULD HOLD WITHIN
± 20% WITH 117V. AC. SUPPLY
* MEASURED WITH CHANALYST,
OR VOLTOMMYS.T.

OSCILLOGRAPH CONNECTIONS
VERTICAL - SHV TO THIS TERMINAL,
VERTICAL - O - TO CHASSIS.

**MODEL 19K
Tuner Data, Dial
Parts List**

RCA MFG. CO., INC.

Adjustment for Electric Tuning

This model has six push buttons for electric tuning. The buttons connect to separate magnetite-core oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow at least five minutes warm-up period before making adjustments.

The procedure is as follows:

1. Make a list of the six desired stations, arranged in order from low to high frequencies.
2. Turn Range Control knob to "A" position, and manually tune in the first station on the list.

890 TO 1550 KC	740 TO 1430 KC	610 TO 1250 KC	540 TO 1030 KC
6	5 4	3 2	1
⊙	⊙ ⊙	⊙ ⊙	⊙
			TRIMMER SCREWS
			⊙
			CORE RODS
			1
6	5 4	3 2	

Push Button Adjustments

Turn the Loop Antenna to give minimum pickup of signal, no outside antenna should be used and link on antenna board should be closed.


3. Turn Range Control knob to "PB" and press push button No. 1 and adjust No. 1 oscillator core to receive this station. Screw the core all the way in, to lowest frequency, and then unscrew slowly until station is received.
4. Adjust No. 1 antenna trimmer for maximum output on this station.

Owing to the relatively high R-F gain, it may be found that there are several settings of each push-button magnetite core

that will bring in any particular station. In such cases it is advisable to unscrew the push button antenna trimmers to minimum capacity before adjusting the oscillator cores.

Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.

5. Adjust for each of the remaining five stations in the same manner.
6. After all six stations are tuned-in on the buttons, turn the Loop Antenna to a position giving the best signal pickup and make a final careful adjustment of all core rods until best reception is obtained for each. Outdoor antenna should now be reconnected if used.

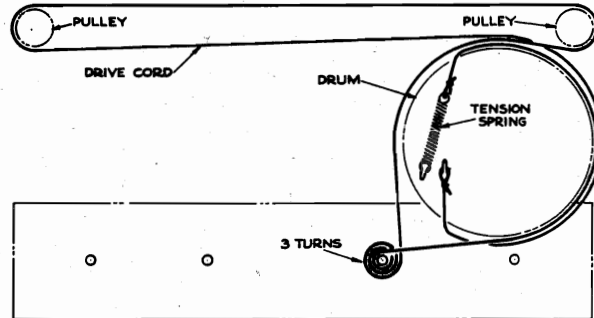

Arrangement of Drive Cords for Tuning Condenser and Dial Indicator

Replacement Parts

Insist on genuine factory-tested parts, which are readily identified and may be purchased from authorized dealers.

STOCK No.	DESCRIPTION	Unit List Price	STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES (RC-512A)					
35966	Board—"Antenna-Ground" board.....	.20	12738	Resistor—27,000 ohms, 1/4 watt.....	.20
35795	Calibrator—Drive drum calibrator.....	.25	12454	Resistor—33,000 ohms, 1/4 watt.....	.20
35961	Capacitor—Mica trimmer (C1).....	.25	12412	Resistor—47,000 ohms, 1/4 watt.....	.20
14079	Capacitor—6.8 mmfd.....	.35	12199	Resistor—270,000 ohms, 1/4 watt.....	.20
35791	Capacitor—Mica trimmer comprising 3 sections (C2, C4, C5).....	.50	12285	Resistor—470,000 ohms, 1/4 watt.....	.20
35804	Capacitor—Mica trimmer comprising 6 sections for push buttons 1, 2, 3, 4, 5, 6.....	1.15	12679	Resistor—2.2 meg., 1/4 watt.....	.20
13057	Capacitor—68 mmfd.....	.35	13601	Resistor—10 meg., 1/4 watt.....	.20
12720	Capacitor—100 mmfd., moulded.....	.35	35968	Shaft—Tuning shaft and pulley.....	.25
34699	Capacitor—100 mmfd., mica.....	.30	36772	Shield—Bottom shield for power transformer.....	.30
34700	Capacitor—120 mmfd.....	.30	35709	Shield—Top shield for power transformer.....	.30
13003	Capacitor—180 mmfd.....	.35	31364	Socket—Dial lamp socket.....	.20
12952	Capacitor—330 mmfd.....	.35	31251	Socket—Tube socket.....	.25
35877	Capacitor—720 mmfd.....	.45	31418	Spring—Drive cord spring.....	.05
13895	Capacitor—5,600 mmfd.....	.70	35787	Socket—Phono. input socket.....	.15
34506	Capacitor—.0018 mfd.....	.25	35974	Support—Dial plate support.....	.65
33584	Capacitor—.005 mfd.....	.25	35987	Switch—Push button selector switch.....	3.50
14393	Capacitor—.01 mfd.....	.30	35964	Switch—Range switch (S1, S2, S3, S4).....	1.90
32787	Capacitor—.05 mfd.....	.20	35963	Switch—Tone switch (S5, S6).....	1.00
4839	Capacitor—.1 mfd.....	.30	35636	Transformer—First I-F transformer.....	1.70
35858	Capacitor—Electrolytic comprising 2 sections of 10 mfd., 400 volts each and 1 section of 20 mfd., 25 volts.....	1.70	35790	Transformer—Second I-F transformer.....	1.60
35965	Coil—Antenna coil—"C" band.....	.60	35588	Transformer—Power transformer—110 volts, 25 cycle.....	6.30
35876	Coil—Coil and resistor assembly L6.....	.30	35959	Transformer—Power transformer—110 volts, 60 cycle—less end shields.....	3.75
35789	Coil—Oscillator coil (A, B, C).....	1.15	35969	Washer—"C" washer for tuning shaft.....	.02
35803	Coil—Push button switch oscillator coil.....	.30	SPEAKER ASSEMBLIES (RL-70J1)		
35960	Condenser—Variable tuning condenser.....	2.50	31825	Cap—Cone center dust cap.....	.02
35962	Control—Volume control and power switch.....	2.00	11469	Coil—Hum neutralizing coil.....	.30
34662	Cord—Drive cord.....	.25	33116	Coil—Speaker field coil.....	2.10
35788	Core—Adjusting core and stud for oscillator coil (L5).....	.15	31275	Cone—Speaker cone, voice coil, and dust cap... ..	1.50
35871	Core—Adjusting core and stud for push button oscillator coils 1, 2, 3, 4, 5, 6.....	.55	5039	Plug—4-prong male, for speaker.....	.30
35794	Drum—Tuning condenser drive drum—less calibrator.....	.70	33444	Transformer—Output transformer.....	2.00
35970	Indicator—Station selector indicator and carriage.....	.30	MISCELLANEOUS ASSEMBLIES		
35972	Plate—Dial plate complete with drive cord pulleys.....	1.10	36005	Button—Push button.....	.15
36009	Plug—2-contact male plug for loop cable.....	.25	35998	Capacitor—Mica trimmer (C3) for loop.....	.25
5040	Plug—4-contact female plug for speaker cable.....	.30	36002	Coil—Loop primary coil.....	.40
35973	Pulley—Drive cord pulley.....	.08	35914	Decalcomania—Control panel decal.....	.10
32165	Resistor—470 ohms, 2 watts.....	.25	36019	Dial—Glass dial scale.....	1.65
14720	Resistor—1,000 ohms, 1/4 watt.....	.20	36006	Escutcheon—Dial scale escutcheon—less dial.....	2.75
14024	Resistor—2,700 ohms, 1/4 watt.....	.20	36003	Knob—Tone or range switch knob.....	.25
30694	Resistor—3,900 ohms, 1/4 watt.....	.20	36004	Knob—Tuning or volume control knob.....	.25
35875	Resistor—12,000 ohms, 3/4 watt.....	.35	11765	Lamp—Dial lamp.....	.15
12695	Resistor—15,000 ohms, 1/4 watt.....	.20	35997	Loop—Antenna loop.....	3.00
			36149	Marker—Station selector push button markers... ..	.35
			36087	Mounting—Antenna loop mounting hardware.....	.10
			35029	Mounting—Speaker mounting hardware.....	.35
			35999	Socket—Two contact socket for antenna loop... ..	.25
			34053	Spring—Push button spring.....	.02
			14270	Spring—Retaining spring for knobs.....	.05

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

MODEL 19K

**Alignment, Trimmers
Socket, Speaker, Lead Dress**

RCA MFG. CO., INC.

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment, therefore a calibration scale is attached to the indicator-drive-cord drum which is mounted on the shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The "90°" mark on the drum scale must be vertical, and directly under the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

To determine the corresponding frequency for any setting of the calibration scales, refer to the accompanying drawing which shows the dial with 0-180° calibration scales drawn at top and bottom.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "0" mark on the calibration scale when the plates are fully meshed.


Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 540 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

Precautionary Lead Dress.—


1. Dress 2nd I.F. leads close to chassis.
2. Dress leads from volume control and tone switch away from filaments, diode and power leads.
3. Dress .005 mfd. volume control condenser away from electrolytic.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Range switch	Turn radio dial to—	Adjust the following for max. peak output
1	6SK7 I-F grid in series with .01 mfd.	455 kc	"A"	Quiet Point near 180°	L3 and L4 (2nd I-F Trans.)
2	6SA7 1st Detector in series with .01 mfd.				L1 and L2 (1st I-F Trans.)
3	Ant. terminal "A" in series with 47 mmf.	15.2 mc	"C"	148.5°	C1 (ant.) C2 (osc.)*
4	Ant. section of gang condenser in series with 300 ohms	2.44 mc	"B"	97°	C4 (osc.)*
5		1,500 kc	"A"	180°	C5 (osc.)*
6		600 kc		30°	L5 (osc.) (Rock gang)
7	Fasten chassis in cabinet. Connect loop, see that link is closed on the antenna board, attach dial indicator to drive cord, with indicator at 540 kc mark and gang at maximum capacity.				
8	Radiation loop consisting of two turns of wire 18 in. in diameter located 4 to 6 feet from receiver	1,500 kc	"A"	1,500 kc	C3 (ant.) (on loop)
9		600 kc		600 kc	L5 (osc.) (Rock gang)
10	Repeat steps 8 and 9				


* Use minimum capacity peak of two peaks can be obtained. Note: Oscillator tracks above signal on all bands.

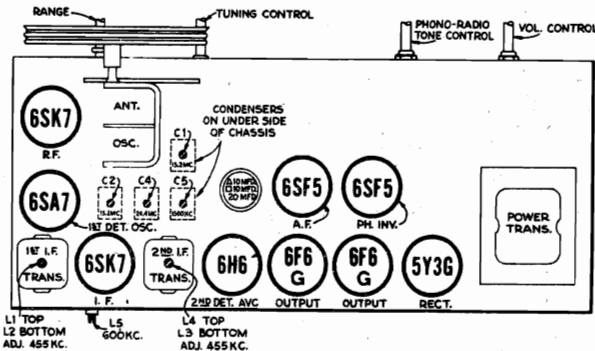



Tube and Trimmer Locations

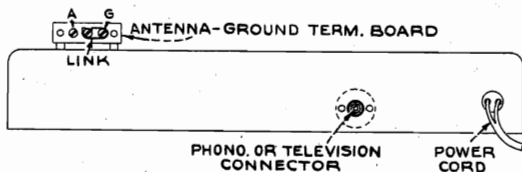


Back of Chassis

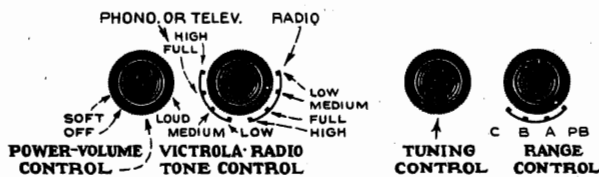

Location of Controls

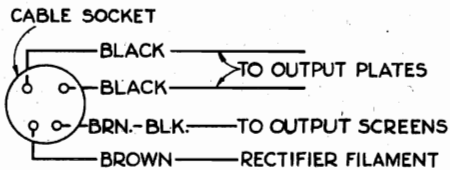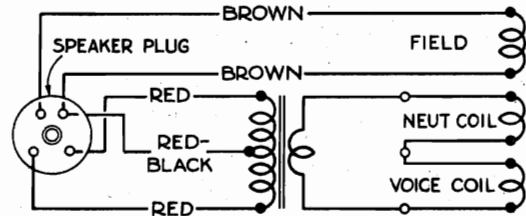

Connections and Colors of Loudspeaker and Cable

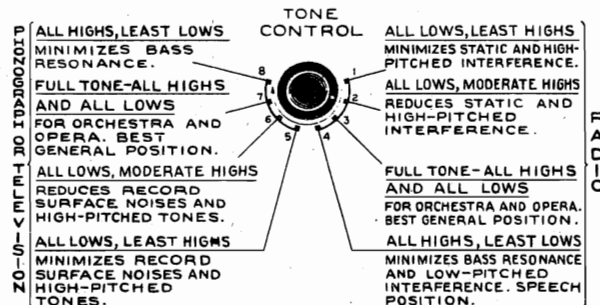


Tone Control and Phono-Radio Switch

RCA MFG. CO., INC.

MODELS Q20, Q21
Chassis RC-514
Schematic, Voltage

— 1940 No. 17 —
First Edition

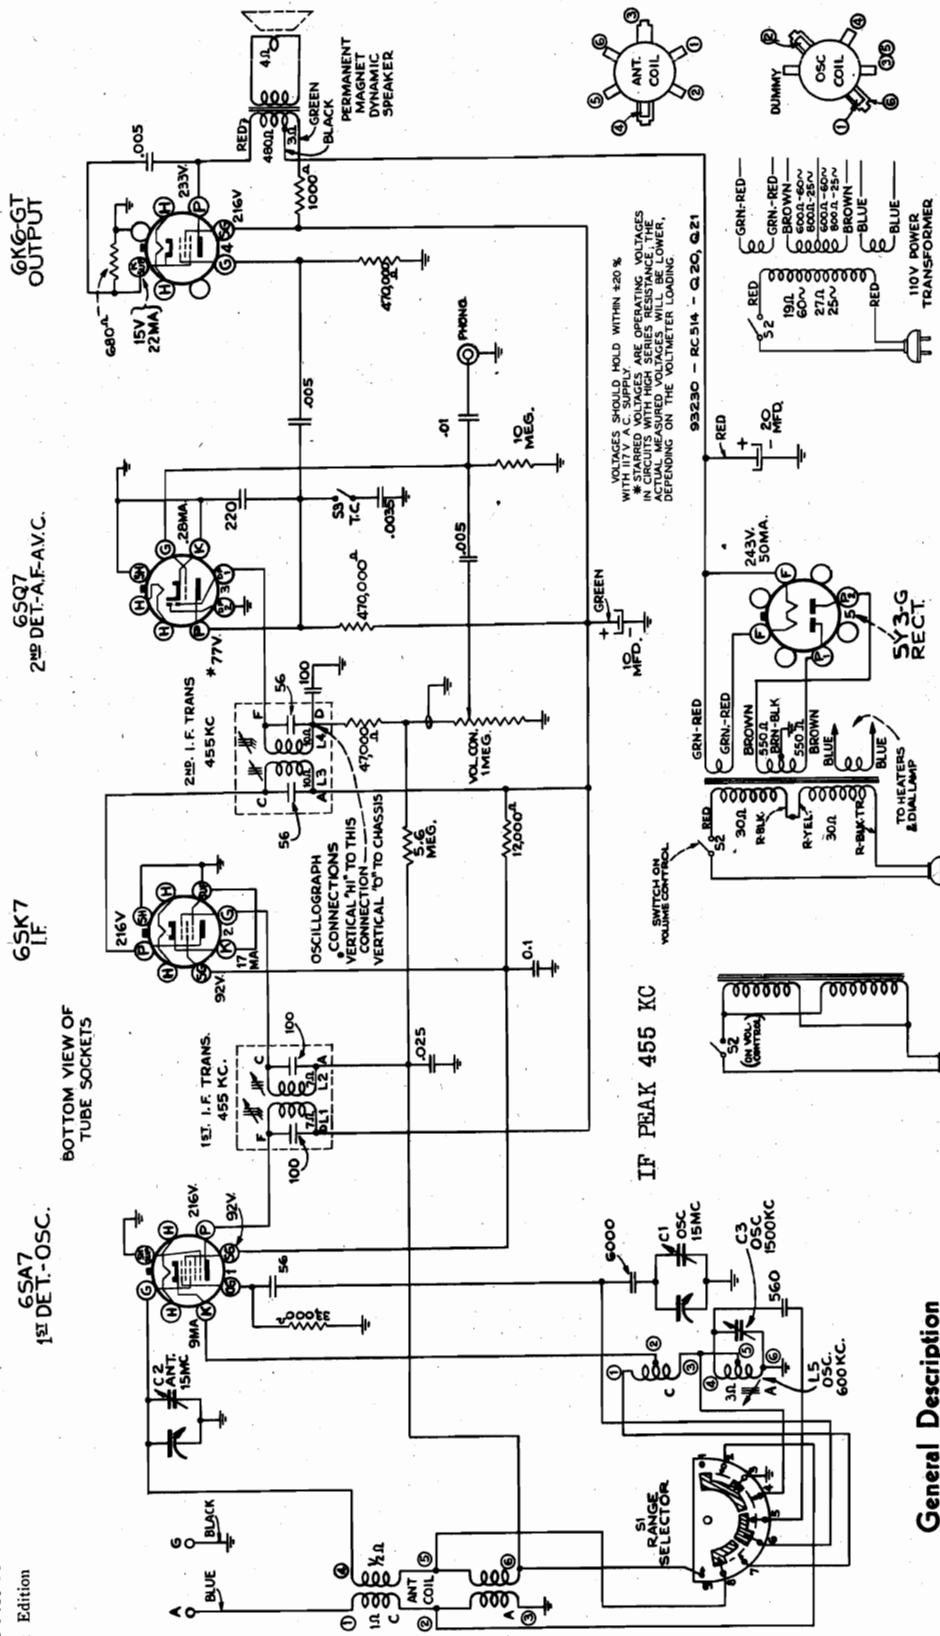

General Description

Models Q20 and Q21 are two-band table type super-heterodyne receivers. They are designed to cover the broadcast range of 540 to 1,800 kilocycles, and the short-wave range from 4.5 to 18 megacycles.

Features of design include: Magnette-core I.F. transformers; magnette-core "A" band oscillator coil; automatic volume control; tone control; illuminated dial; jack for phonograph attachment; 25 to 1 ratio vernier tuning, and dust-proofed permanent-magnet dynamic loudspeaker.


Phonograph Attachment.—A jack is provided on the rear of chassis for connection to a phonograph attachment. The cable from the attachment should be terminated in a Stock No. 31048 plug to fit the jack.

Electrical Specifications

- Pilot Lamp..... Mazda 51, 7.5 volts, 0.2 amp.
- POWER SUPPLY RATINGS
- Rating A..... 105-125 volts, 50-60 cycles, 50 watts
- Rating B..... 105-125 volts, 25-60 cycles, 50 watts
- Rating C..... 105-125, 200-250 volts, 50-60 cycles, 50 watts

- POWER OUTPUT RATING
- Undistorted..... 1.5 watts
- Maximum..... 2.3 watts

- LOUDSPEAKER
- Type (RL-81-A2)..... 5-inch permanent-magnet dynamic
- Voice-coil Impedance..... 4.5 ohms at 400 cycles
- FREQUENCY RANGES
- Standard Broadcast (A)..... 540-1,800 kc (555-166 m)
- Short Wave (C)..... 4.5-18 mc (66.7-16.6 m)
- Intermediate Frequency..... 455 kc

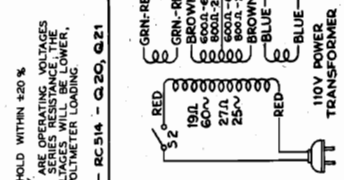

VOLTAGES SHOULD HOLD WITHIN ±20%
* STARRED VOLTAGES ARE OPERATING VOLTAGES
IN CIRCUITS WITH HIGH SERIES RESISTANCE, THE
RESISTANCE BEING THAT OF THE TUBE POWER,
DEPENDING ON THE VOLTMETER LOADING.


110-220V. TRANSFORMER
PRIMARY CONNECTIONS
FOR 110V. A.C.

110-220V. TRANSFORMER
PRIMARY CONNECTIONS
FOR 220V. A.C.

Alignment, Trimmers
Socket, Parts

RCA MFG. CO., INC.

MODELS 45X3, 45X4
Chassis RC-457E
Schematic, Gain, Voltage

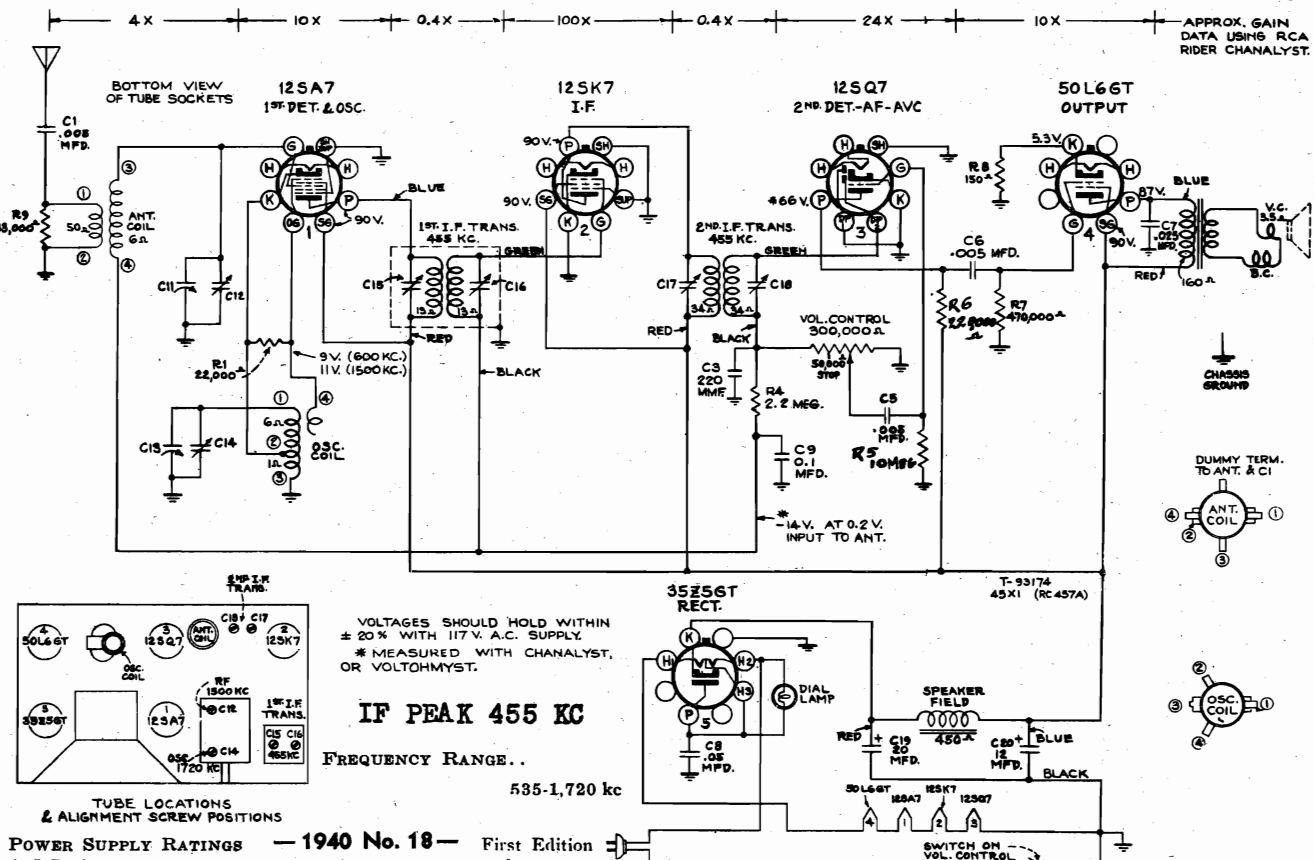

IF PEAK 455 KC
FREQUENCY RANGE.. 535-1,720 kc

POWER SUPPLY RATINGS — 1940 No. 18 — First Edition
A-C Rating..... 105-125 volts, 50-60 cycles, 30 watts
D-C Rating..... 105-125 volts, direct current, 30 watts

POWER OUTPUT
(117 volt, 60 cycle supply)..... 1.0 watt

LOUDSPEAKER
Type..... 4-inch Electrodynamic
Voice-coil impedance at 400 cycles..... 4 ohms

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

Dial Lamp (1)..... Mazda 51, 7.5 volts, 0.2 amp.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	12SK7 grid in series with .001 mfd.	455 kc	Quiet Point at 1,600 kc end of dial	C17, C18 (2nd I-F Trans.)
2	12SA7 grid in series with .001 mfd.			C15, C16 (1st I-F Trans.)
3	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C14 (oscillator)
4		1,500 kc	Resonance on 1,500 kc signal	C12 (antenna)

STOCK No.	DESCRIPTION	Unit List Price
CHASSIS ASSEMBLIES (RC-457E)		
12694	Capacitor—220 mmfd.35
33584	Capacitor—.005 mfd.25
4870	Capacitor—.025 mfd.20
32787	Capacitor—.05 mfd.20
4839	Capacitor—.01 mfd.30
32576	Capacitor—Electrolytic comprising 1 section of 20 mfd., and 1 section of 12 mfd.75
35115	Coil—Antenna coil80
35333	Coil—Oscillator coil65
35977	Condenser—Variable tuning condenser	2.40
35979	Control—Volume control and power switch	1.50
32634	Cord—Drive cord10
35982	Dial—Dial scale70
35980	Indicator—Station selector indicator25
11765	Lamp—Dial lamp15
31193	Lead—Antenna lead50
35981	Plate—Dial plate—less dial.30
30880	Resistor—150 ohms, 1/2 watt.20
13998	Resistor—22,000 ohms, 1/2 watt.20
12454	Resistor—33,000 ohms, 1/2 watt.20
12264	Resistor—220,000 ohms, 1/2 watt.20
12285	Resistor—470,000 ohms, 1/2 watt.20
12679	Resistor—2.2 meg., 1/2 watt.20
13601	Resistor—10 meg., 1/2 watt.20

35978	Shaft—Tuning shaft	.10
35332	Shield—Shield for first I-F transformer	.30
35345	Socket—Dial lamp socket	.25
31251	Socket—Tube socket	.25
30585	Spring—Drive cord spring	.06
35098	Spring—Spring to hold I-F transformer in shield can	.08
34846	Transformer—Audio transformer	1.25
35331	Transformer—First I-F transformer—less shield	1.10
33301	Transformer—Second I-F transformer	1.20
34373	Washer—"C" washer for tuning shaft	.03


SPEAKER ASSEMBLIES (39105-505)		
35120	Cone—Cone complete with voice coil	1.15
35611	Speaker—Four inch dynamic speaker complete with cone and voice coil	3.10

MISCELLANEOUS ASSEMBLIES		
36017	Back—Cabinet back—Model 45X3	.25
36018	Back—Cabinet back—Model 45X4	.25
35983	Bezel—Dial scale bezel and crystal	1.00
35121	Knob—Walnut volume control or tuning knob	.10
35126	Spring—Retaining spring for knob Stock No. 35121	.03

ALL PRICES ARE SUBJECT TO CHANGE OR WITHDRAWAL WITHOUT NOTICE.

MODELS 45X16, 45X17
Chassis RC-459M
Schematic, Gain, Voltage
Alignment, Trimmers
Socket

RCA MFG. CO., INC.

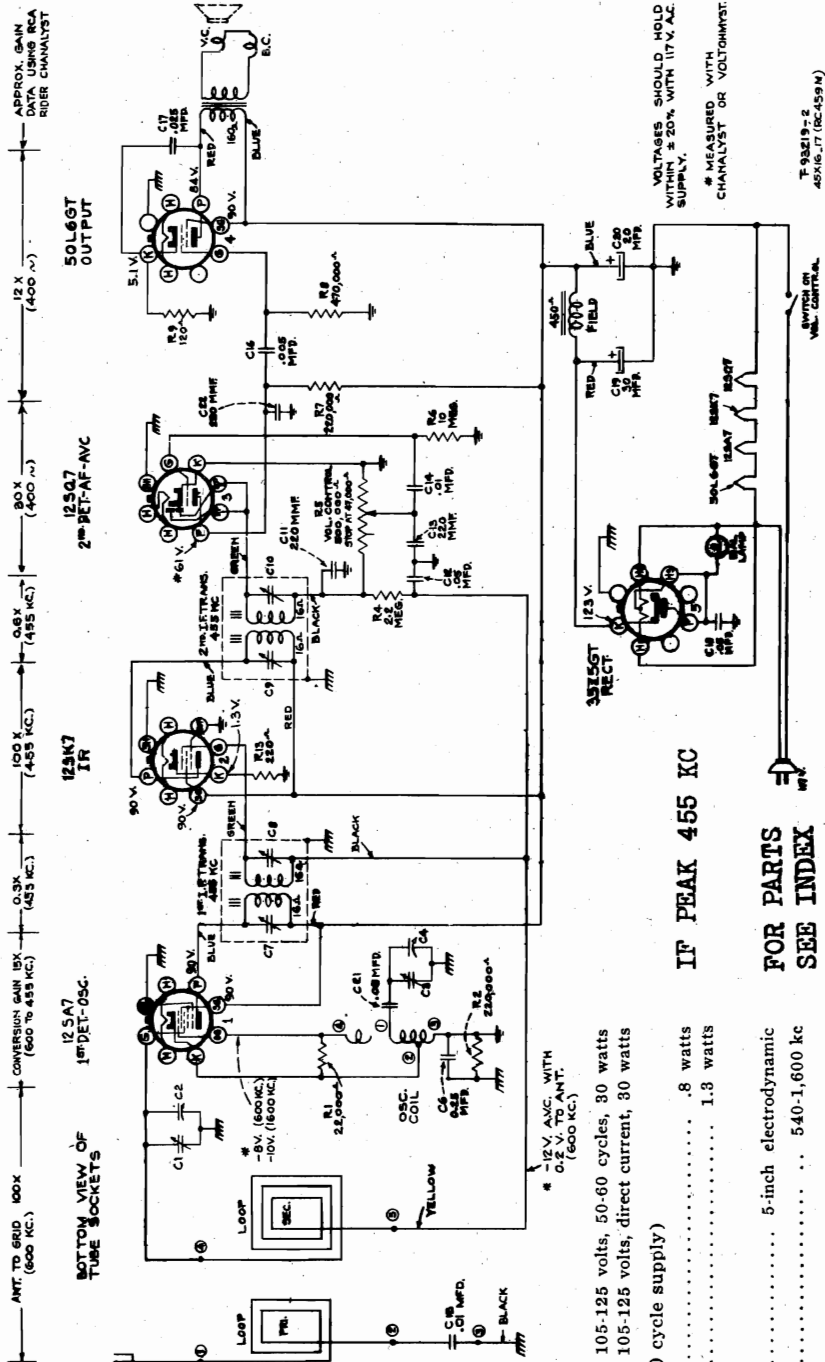

- POWER SUPPLY RATINGS**
- A-C Rating..... 105-125 volts, 50-60 cycles, 80 watts
 - D-C Rating..... 105-125 volts, direct current, 30 watts
- POWER OUTPUT (125 volt, 60 cycle supply)**
- Undistorted..... .8 watts
 - Maximum..... 1.3 watts
- LOUDSPEAKER**
- Type..... 5-inch electrodynamic
 - FREQUENCY RANGE..... 540-1,600 kc
- Dial Lamp (1)..... Mazda 51, 7.5 volts, .20 amp.**

IF PEAK 455 KC

FOR PARTS SEE INDEX

— 1940 No. 22 —

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.


Test-Oscillator.—For I-F alignment, connect the low side of the test-oscillator to the receiver chassis through a .01 mfd. capacitor, and keep the output as low as possible.

Pre-Setting Dial.—With gang condensér in full mesh, the pointer should be adjusted so that it is vertical.

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the "ANT." terminal on rear of cabinet. It should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	12SK7 I-F grid in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C9 and C10 (2nd I-F trans.)
2	Tuning condenser stator (osc.) in series with .01 mfd.	1,600 kc	Full clockwise (out of mesh)	C7 and C8 (1st I-F trans.)
3	Radiation loop consisting of two turns of wire 18 inches in diameter	1,400 kc	Resonance on 1,400 kc signal	C3 (oscillator)
4		1,400 kc		C1 (antenna)

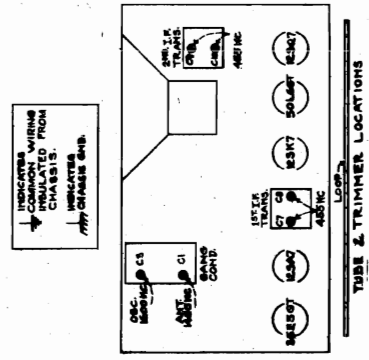


First Edition

T 93219-2
45X16, 17 (RC-459M)

VOLTAGES SHOULD HOLD WITHIN ± 20% WITH 117 V. A.C. SUPPLY.
 * MEASURED WITH CHANNELYST OR VOLTOMMIST.

RCA MFG. CO., INC.

Gain Data Instructions
Test Schematic

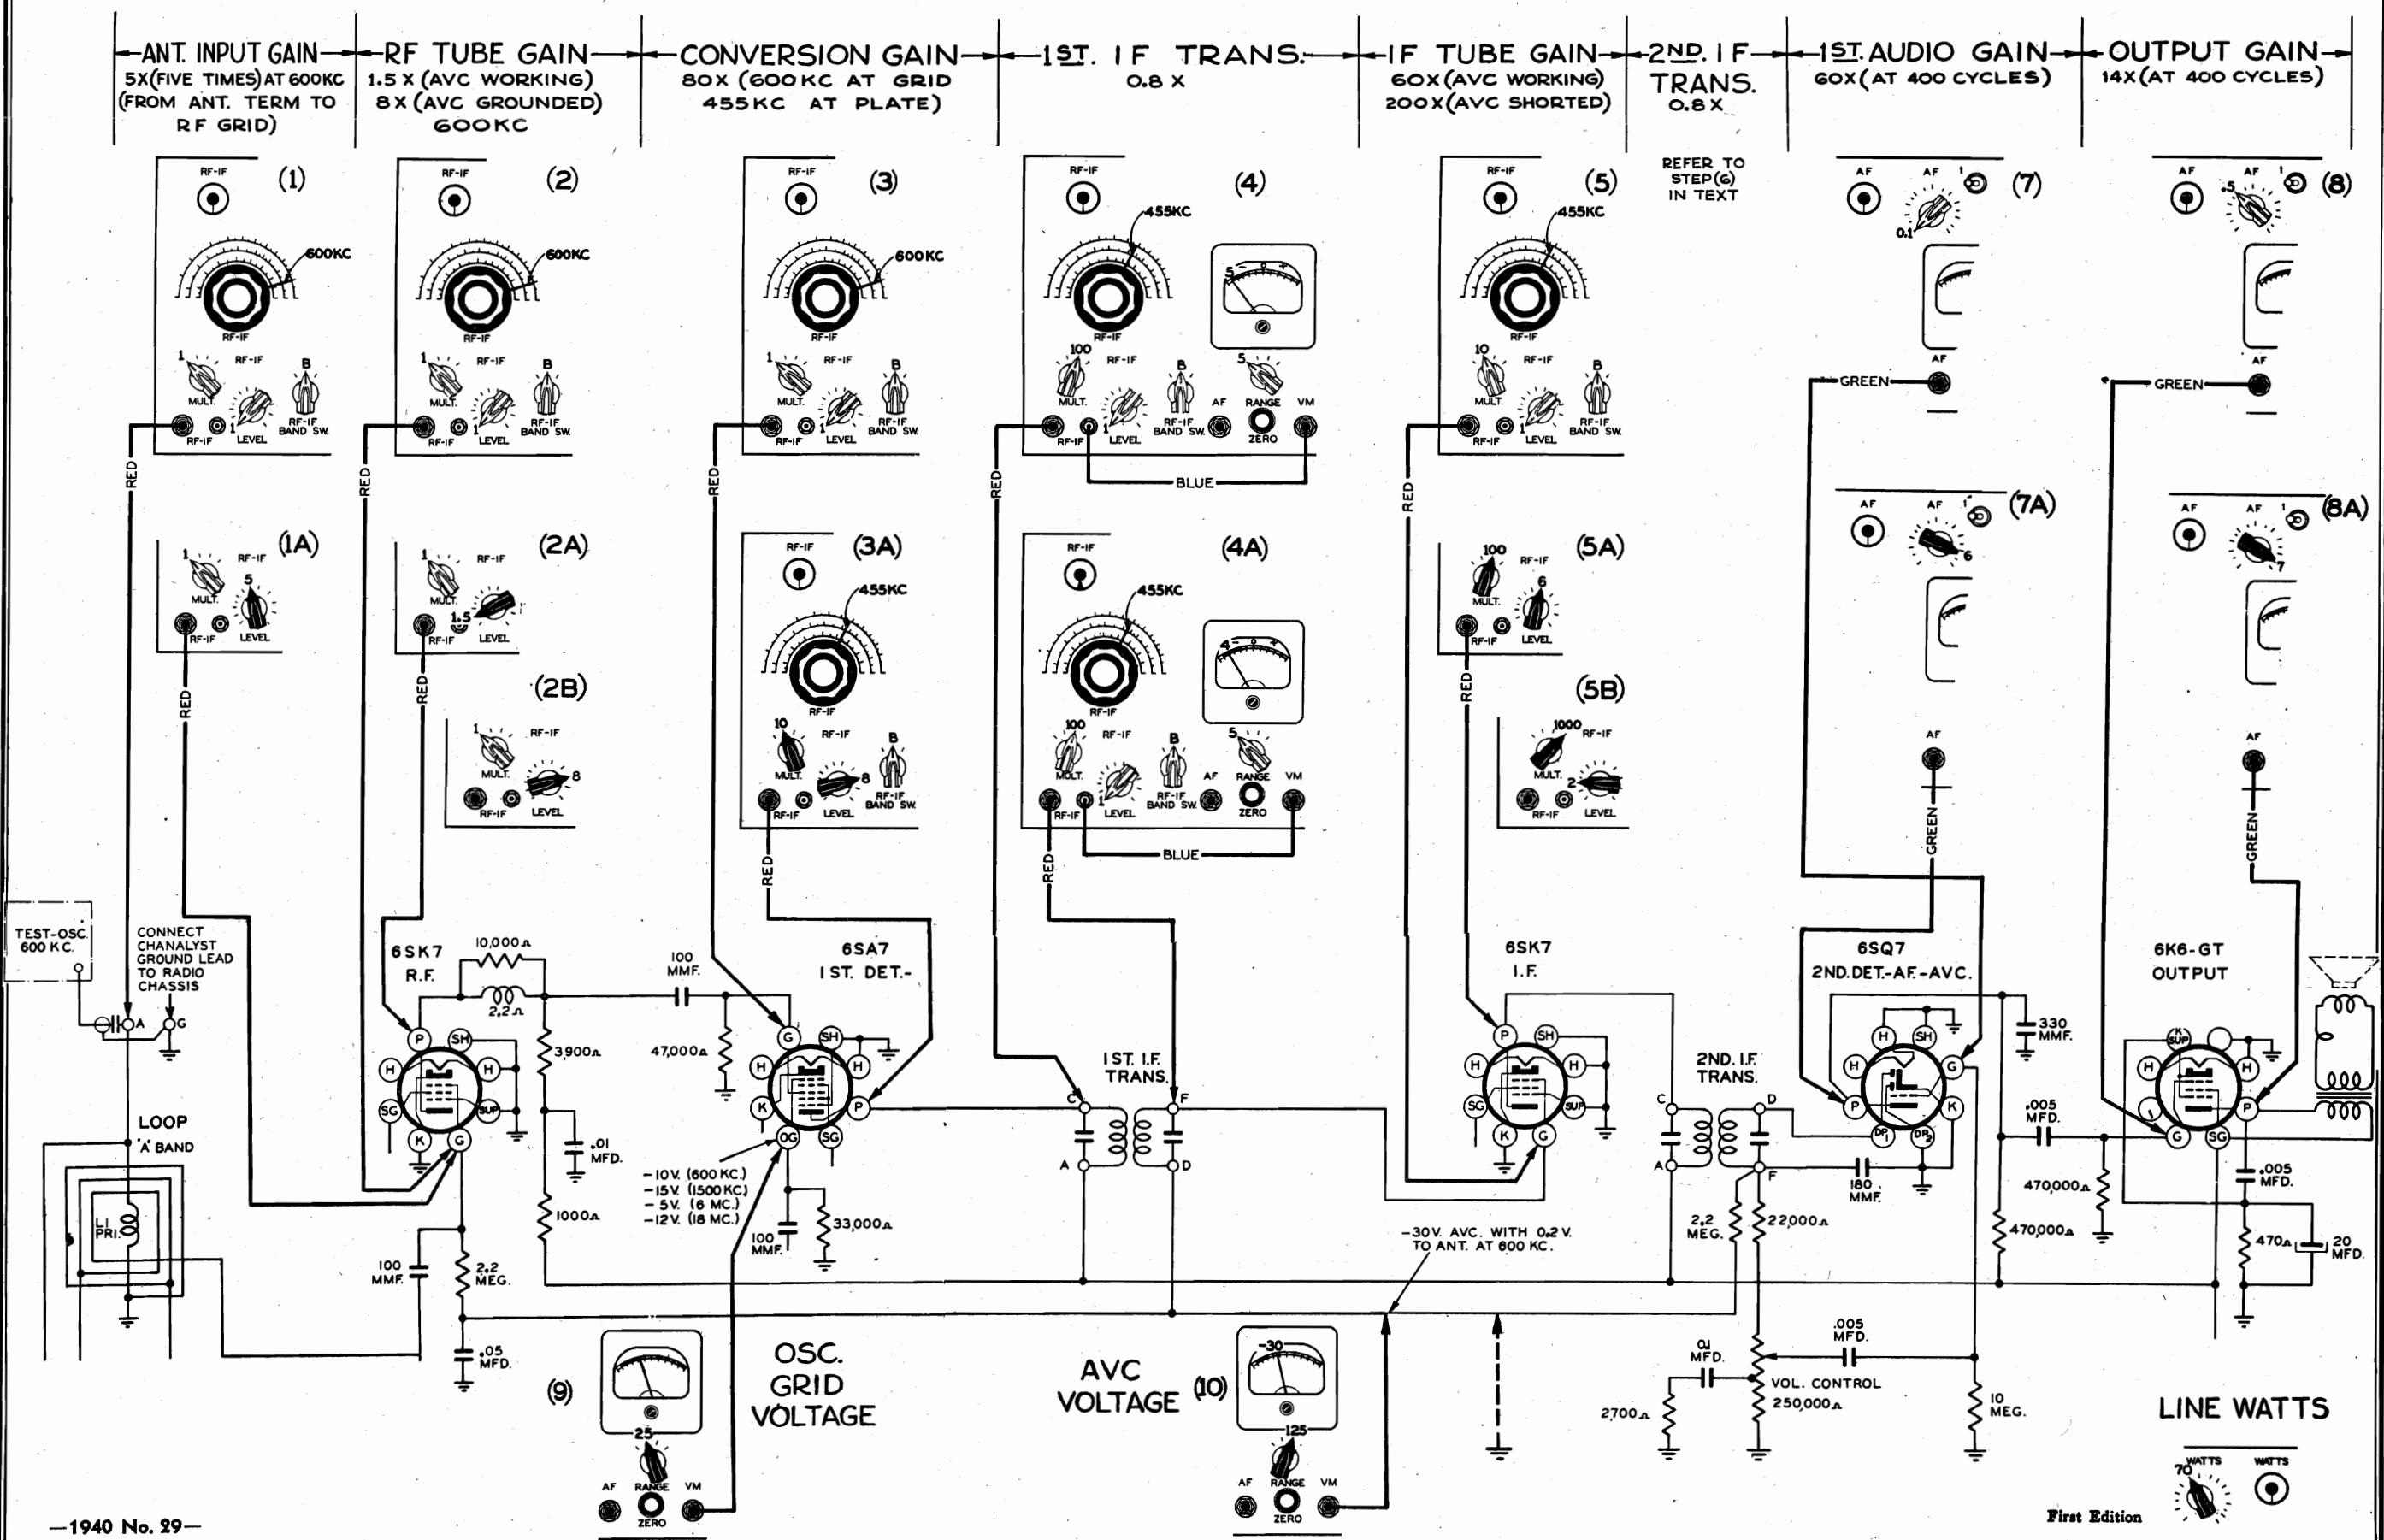

Introduction

Complete gain data is published in the Service Notes for RCA Victor 1941 radio receivers. For speed and convenience, the gain data is printed on the schematic diagram of each model.

For the utmost utility in signal tracing, so that any trouble may be quickly narrowed down to a single point, the gain is given for each separate RF, IF, and AF tube, and also for each RF and IF transformer. In addition, the AVC voltage is shown, and also the oscillator grid voltage on all frequency ranges.

Tube Gain is Shown Both With and Without AVC
The gain data in RCA Victor Service Notes generally shows the gain of the RF, 1st-detector, and IF tubes both with and without automatic volume control. Checks be made as outlined herein, first checking the gain with the AVC working, and then if there is any doubt with the AVC bus grounded.

The important thing in following this recommended procedure (where the signal is fed into the antenna circuit for all checks) is to keep the RF-IF channel at maximum sensitivity when establishing the level at the antenna terminal, at the grid of the RF tube, and at the grid of the detector tube, as shown at (1), (2), and (3) in the illustration. This method is followed in obtaining the published RCA gain data on actual production samples.

On small sets, the gain is given only with the AVC working. On certain models, the 1st-detector tube is not controlled by the AVC, and should therefore be measured with the AVC working.

In checking from primary to secondary on RF and IF transformers, the AVC should be left working to avoid possible grid current that would reduce the apparent gain of the transformers.

Gain Tolerance

Several variable factors influence the gain of sections in a receiver, including tubes which may vary more than 25%, AVC action, grid current, if the AVC is killed, regeneration, adjustment of the tuned circuits, accuracy of tuning, line voltages, and experience on the part of the operator. Obviously it is impossible to specify definite receiver tolerances. Two-to-one variations may be regarded as normal.

Make Gain Checks With 600 kc Signal Fed into Antenna Terminal of Receiver

All gain checks throughout the entire receiver circuit (radio-frequency, intermediate-frequency, and audio-frequency sections) can be made with the signal generator connected to one point (the antenna terminal), and tuned to one frequency (600 kc). This naturally simplifies the procedure and speeds up the work.

Preliminary Set-Up

Signal Generator Connections

Connect the output cable of the signal generator to the antenna and ground terminals of the receiver.

Dummy Antenna

Use the recommended dummy (usually 100, 200, or 300 mm.) in series with the antenna terminal.

Tune Signal Generator to 600 kc

Adjust the signal generator to 600 kc, or to some frequency near 600 kc that is free from local broadcast interference.

The exact frequency is not important. If the signal generator is slightly off calibration, set it to the 600 kc mark, because both the receiver and the Chanalyst will be tuned to the actual generator frequency even though this may be slightly above or below 600 kc. In other words, the generator frequency is the starting point, and both the receiver and the Chanalyst will be tuned to it.

Use 400 Cycle Audio Modulation (30%)

Set the signal generator to give 400 cycle internal audio modulation on the 600 kc signal. The percentage of modulation is not important in making gain checks, but the standard value of 30% is recommended.

Tune the Receiver to 600 kc

Tune the receiver carefully for peak output on the signal (assumed to be 600 kc) from the generator.

Connect Chanalyst Ground Lead to the Receiver Chassis

Connect the clip on the end of the Chanalyst ground lead (black) to the receiver chassis. (See note in reference to connection on a.c.-d.c. receivers.)

Tune RF-IF Channel to 600 kc

Place the Chanalyst RF-IF probe (red cable) on the receiver antenna terminal. Set the RF-IF controls as shown in step (1), and tune the RF-IF channel for peak output as indicated on the RF-IF magic eye.

Making Gain Checks

(Refer to drawing, which shows each step in checking a typical radio receiver.)

Step (1). Antenna Input Gain

With the RF-IF channel tuned to the 600 kc signal, and with the level and multiplier controls set at 1 and 1, as shown at (1) in the drawing, adjust the output of the signal generator until the RF-IF Magic Eye just closes (or electronic voltmeter reads -5 volts). See note about using the electronic voltmeter in conjunction with the magic eye.

Move the RF-IF probe from the antenna terminal to the grid prong of the RF tube. If there is a gain, the RF-IF magic eye will overlap. Adjust the level control until the eye is just closed. In this example, the level control has been turned from 1 to 5, indicating a voltage step-up or gain of five times from the antenna terminal to the grid of the first tube. (This is the gain from the antenna coil to the tuned loop.)

The service note for this particular model (Model 16T3) specifies an approximate gain of five times from the antenna terminal to the RF control grid. If the gain is appreciably less than 5 times, the tracking should be checked. The simplest and most definite method for doing this is described later.

Step (2). RF Tube Gain

Place RF-IF probe on grid of RF tube. Set RF-IF input

controls as shown in (2). Adjust signal generator output until RF-IF Magic Eye is just closed.

Move RF-IF probe to plate of RF tube. Adjust level control until eye just closes. If new level setting is 1.5, the gain from grid to plate is 1.5 times.

To check the RF tube gain without automatic volume control, ground the AVC bus as indicated in dotted lines. Repeat step (2) to establish a signal level on the grid. Then move the RF-IF probe to the plate of the RF tube, and adjust the level control until the RF-IF eye is just closed. In this example (2B) the level control is turned to 8, indicating an RF tube gain of eight times with the AVC killed.

Move the probe to the grid of the 1st-detector tube, which is resistance-coupled to the RF tube in this particular model. There should be only a slight drop through the coupling circuit.

Remove the AVC ground after this check.

With a receiver that has transformer coupling between the RF and 1st-detector tubes, check the gain from primary to secondary (with AVC working).

Step (3). 1st-Detector Conversion Gain

Place the RF-IF probe on 1st-detector control grid and turn RF-IF level and multiplier controls to 1 and 1. Adjust signal generator output so the RF-IF Magic Eye is just closed.

Move the RF-IF probe to the 1st-detector plate. Tune the RF-IF channel for peak output on the IF signal. Adjust multiplier and level controls so RF-IF Magic Eye is just closed.

In this example (3A) the multiplier is turned from 1 to 10 (10 times), and the level control is turned from 1 to 8 (8 times). The conversion gain is therefore 80 times.

The IF signal voltage across the plate circuit of the 1st-detector tube is 80 times greater than the 600 kc signal voltage across the 1st-detector grid circuit.

If the conversion gain is appreciably less than specified, it may be due to incorrect IF alignment, but first try returning the set for peak output. (The voltmeter channel provides an excellent output meter for this purpose by using it to measure AVC voltage.)

Step (4). Checking 1st-IF Transformer

In this step, there is a decrease or loss, instead of a gain, from primary to secondary of the 1st-IF transformer.

Place the RF-IF probe on the primary of the 1st-IF transformer and adjust the signal generator output so the RF-IF Magic Eye just closes, or so the electronic voltmeter indicates -5 volts.

Move the probe to the secondary. In this example (4A), the eye opens slightly, and the meter drops to -4 volts, indicating a loss of 5 to 4 or 0.8 times.

Step (5). IF Tube Gain

Place RF-IF probe on the IF grid. Set multiplier at 10 and level at 1. Adjust signal generator output so that RF-IF Magic Eye is just closed.

Move RF-IF probe to plate of the IF tube and adjust multiplier and level controls until eye is just closed.

In this example (5A) the multiplier is turned from 10 to 100 (10 times) and the level control is turned from 1 to 6 (6 times). The gain is therefore 10 times 6, or 60.

Check the IF gain with the AVC killed, connect the AVC bus to the chassis and repeat step (5) to establish a signal level on the IF grid.

Move the RF-IF probe to the plate of the IF tube and adjust the multiplier and level controls until the RF-IF Magic Eye just closes. In this example (5B), the multiplier is turned from 10 to 1,000 (100 times) and the level control

When connected in this way, the meter indicates the rectified signal voltage at the grid of the RF-IF Magic Eye. Approximately -5 volts are required to just close the eye.

Tracking at 600 kc

In using the published gain data it is advisable to check, and if necessary adjust, the tracking between the RF tuned circuits and the oscillator circuit.

The following method is unequalled for speed and accuracy because no "rocking" of the gang condenser is necessary.

(a) Align the IF to the correct IF frequency.

(b) Feed a 600 kc signal into the antenna circuit of receiver through the specified dummy antenna.

(c) Place RF-IF probe (red cable) on grid of first tube in receiver, and tune the RF-IF channel to the 600 kc signal.

(d) Carefully turn the receiver gang condenser for maximum output on the RF-IF Magic Eye (not for maximum output on the receiver).

(e) Leave the receiver gang in this position even though the receiver dial may indicate 10 or 20 kc off, because this is the correct setting of the gang to tune the receiver's antenna circuit to 600 kc.

(f) Connect the electronic voltmeter probe (blue cable) to the AVC circuit of the receiver.

(g) Adjust the oscillator magnetite core or low-frequency padder for maximum AVC voltage as indicated on the electronic voltmeter.

Input to Loop Receivers

Some loop receivers have a link that must be opened when feeding the signal generator into the antenna terminal.

On console loop receivers, such as RCA Model 110K, if only the chassis has been brought in for service and the loop is not available, connect the signal generator through an 0.01 mfd. capacitor to the control grid of the first tube. Tune the receiver for maximum AVC voltage on the 600 kc signal.

Chanalyst Ground Connection to AC-DC Receivers

On a.c.-d.c. receivers where one side of the 110-volt line is connected to the chassis, attach the Chanalyst ground lead to the receiver chassis.

If the 110-volt line is isolated from the receiver chassis, connect the Chanalyst ground lead to the common negative wiring in the chassis.

In either of these cases it must be remembered that the receiver and the Chanalyst may be "hot," and due care must be taken to prevent grounding of either. The best method is to use an isolating power transformer as described below.

Isolating Power Transformer

When working on a.c.-d.c. receivers, it is becoming general practice to use a one-to-one ratio power transformer between the a.c. power supply and the receiver. This avoids grounding difficulties and certain hum conditions.

The isolation power transformer may be used in conjunction with the Chanalyst when testing a.c.-d.c. receivers by plugging one winding of the transformer into the Chanalyst test-watts receptacle, and connecting the a.c.-d.c. receiver to the other winding.

is turned from 1 to 2. Therefore the IF gain is 100 times 2, or 200, with the AVC killed.

Remove the AVC bus ground after this check.

Step (6). Checking 2nd-IF Transformer

In this particular set, the 2nd-IF transformer has the same loss as the 1st-IF transformer, and is checked as in step (4), except with multiplier at 1,000.

Step (7). 1st-Audio Gain

(In making audio gain checks, the tone controls should be set for maximum response.)

Turn Chanalyst AF control to 0.1 and set AF toggle switch to 1.

Place the AF channel probe (green cable) on the arm of the receiver volume control. Adjust the receiver volume control so the AF channel Magic Eye just closes.

Move the probe to the 1st-audio grid. There should be only a slight drop through the coupling condenser.

With the AF channel probe on the grid of the 1st-audio tube, reset the receiver volume control so the AF eye is just closed.

Adjust the AF probe to the plate of the 1st-audio tube. Move the AF channel control so the AF eye is just closed. In this example (7A) the control is turned from 0.1 to 6.0, indicating a voltage step-up or gain of 60 times (0.1 divided by 6.0 equals 60).

With the AF probe to the grid of the output tube. There should be only a slight drop through the coupling capacitor. If the receiver has a push-pull output stage, check its gain in the same way as described for the 1st-audio tube.

Step (8). Output Stage Gain

Turn Chanalyst AF control to 0.5 and place AF probe on the grid of the output tube. Adjust the receiver volume control so the AF Magic Eye is just closed.

Move the probe to the plate of the output tube. Adjust the AF channel control so the AF eye is just closed. In this example (8A), the control is turned from 0.5 to 7.0, indicating a voltage step-up or gain of 14 times (0.5 divided into 7.0 equals 14).

With a push-pull (or parallel push pull) output stage, check each tube separately, with the other output tube (or tubes) removed from the set. This gives a definite check on each output tube. The published data gives the gain with all of the output tubes in operation.

Step (9). Measuring Oscillator Grid Voltage

Checking the oscillator grid current (by measuring the rectified oscillator signal across the oscillator grid leak) is a valuable and quick method of determining whether the oscillator is working throughout the range on each band.

Connect the electronic voltmeter channel probe (blue cable) to the oscillator grid.

Observe the voltage reading while tuning each band.

The published RCA gain data gives the oscillator grid voltage at the high-frequency and low-frequency end of each band.

It will be observed that the oscillator grid voltage generally increases when tuning through stations. The published data is taken at quiet points on the dial.


Dead spots or points where the oscillator ceases to work may be caused by absorption due to resonance in adjacent coils which deflects the tuning action of the range switch and will show up as dips in the oscillator grid voltages.

Step (10). Measuring AVC Voltage

Connect the voltmeter channel probe (blue cable) to the

RADIO MFG. ENGINEERS, INC.

MODEL ME-14
Schematic

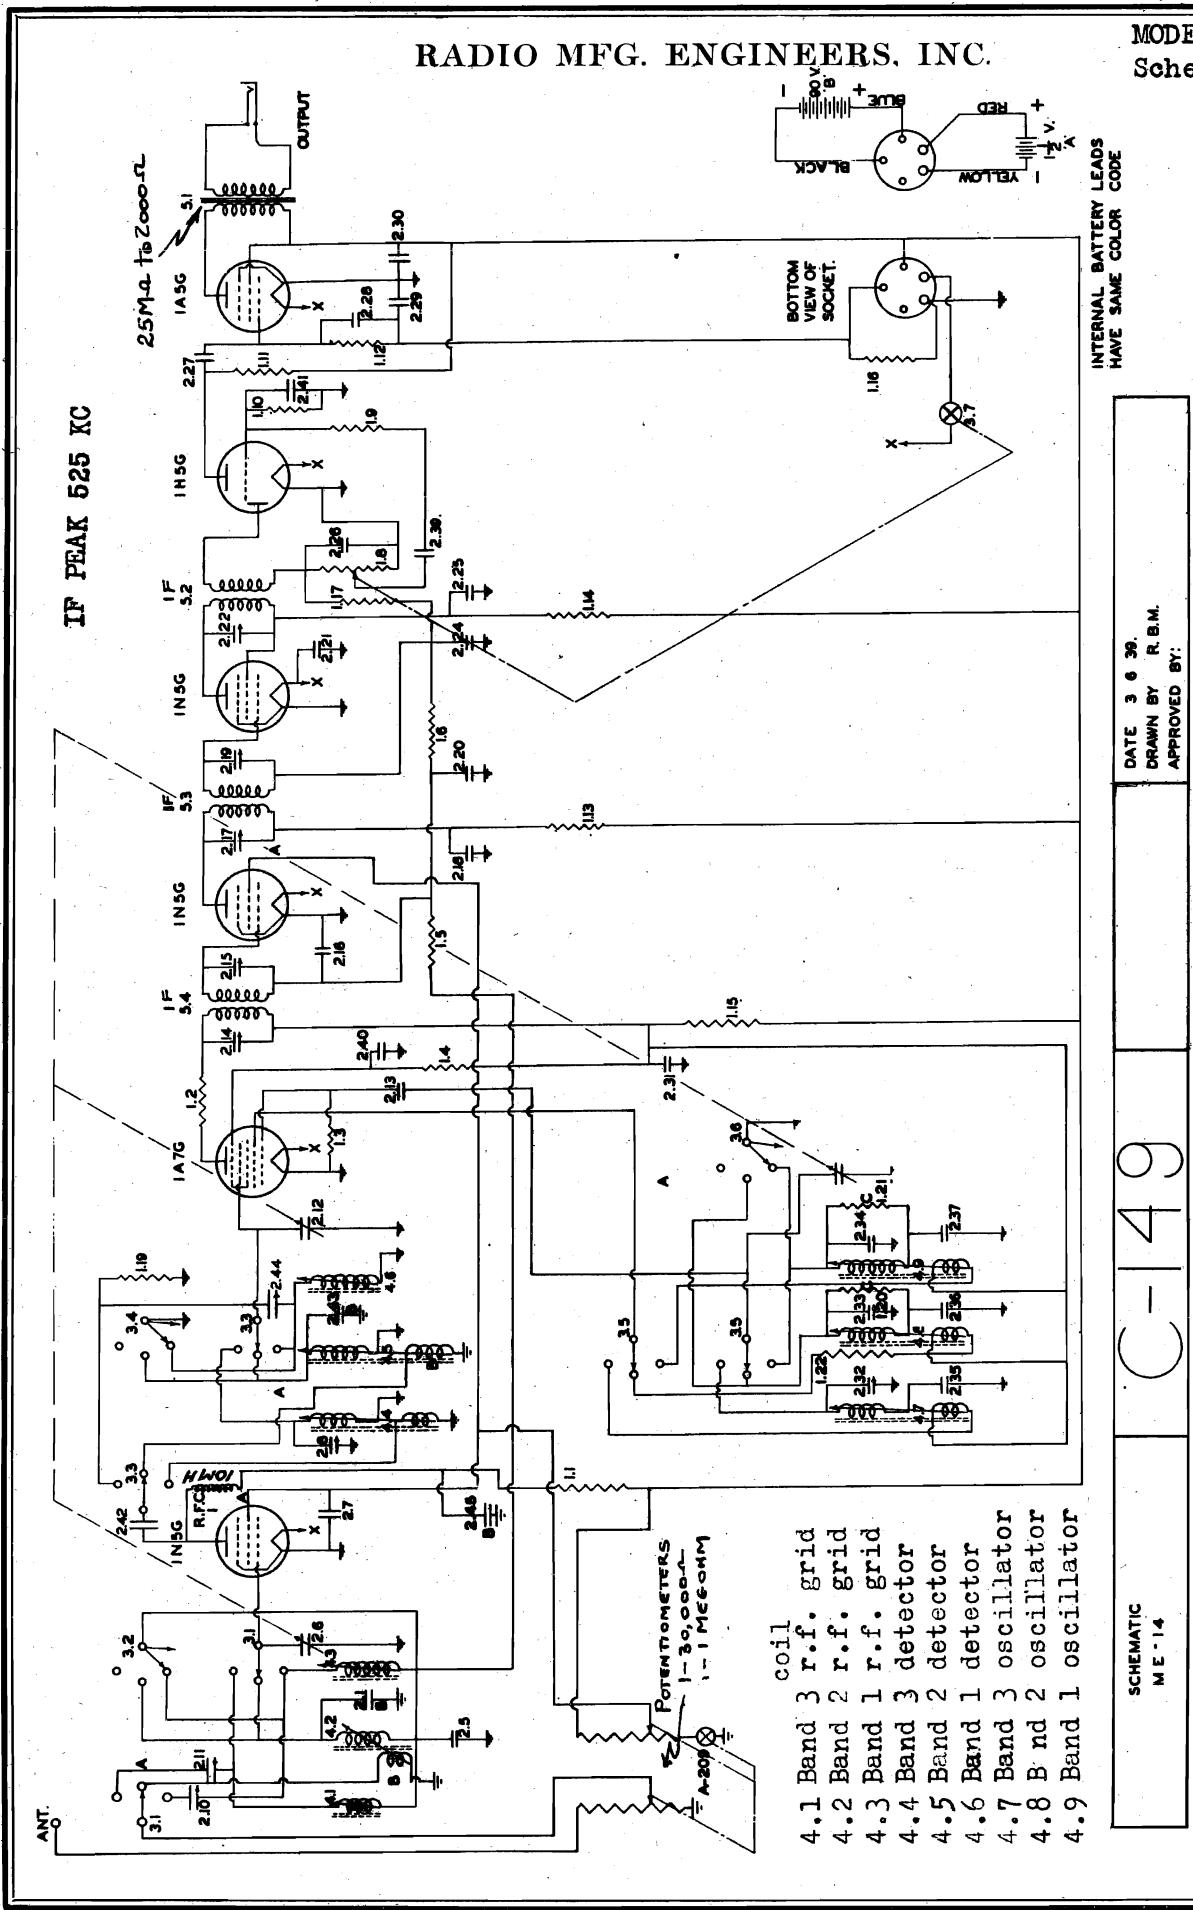

INTERNAL BATTERY LEADS
HAVE SAME COLOR CODE

DATE 3 6 39.
DRAWN BY R. B. M.
APPROVED BY:

C-149

SCHEMATIC
ME-14



- 4.1 Band 3 r.f. grid
- 4.2 Band 2 r.f. grid
- 4.3 Band 1 r.f. grid
- 4.4 Band 3 detector
- 4.5 Band 2 detector
- 4.6 Band 1 detector
- 4.7 Band 3 oscillator
- 4.8 Band 2 oscillator
- 4.9 Band 1 oscillator

The power drawn from the batteries is very small--being .675 watts from the 90 volt "B" battery, represented by a current of 7.5 milliamperes; and a current from a 1.4 volt filament battery of 300 milliamperes.

RADIO MFG. ENGINEERS, Inc.
PEORIA, ILL., U. S. A.
111 Harrison Street

MODEL ME-14
Alignment, Socket
Trimmers, Parts

RADIO MFG. ENGINEERS, INC.

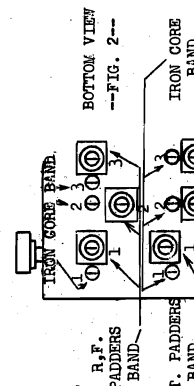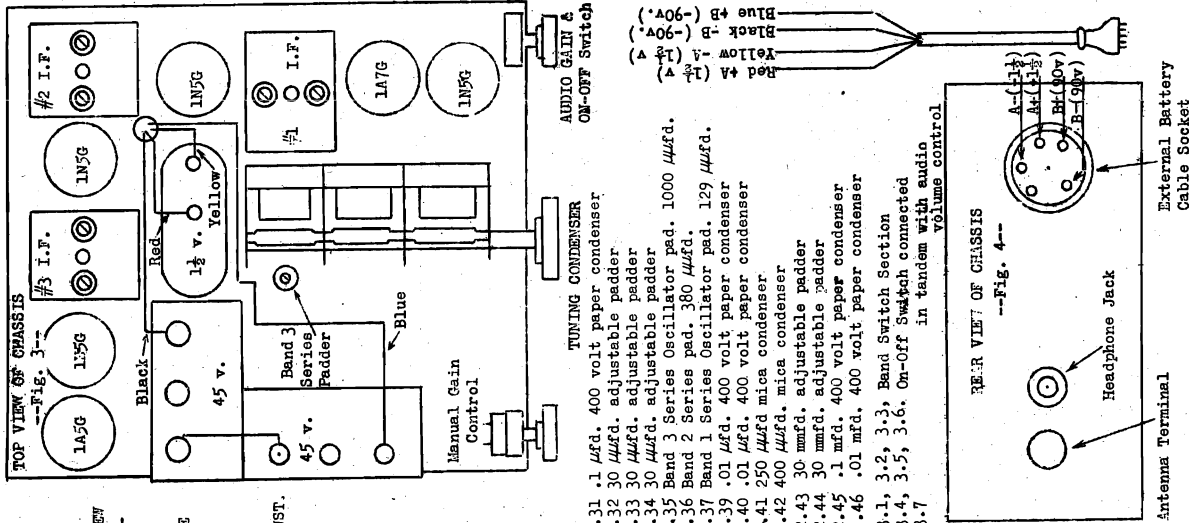


SPECIFICATION

PART CODE	NUMBER	SPECIFICATION
1.1	2000 ohms, 1/3 watt resistor	
1.2	2000 ohms, 1/3 watt resistor	
1.3	250,000 ohms, 1/3 watt resistor	
1.4	100,000 ohms, 1/3 watt resistor	
1.5	250,000 ohms, 1/3 watt resistor	
1.6	100,000 ohms, 1/3 watt resistor	
1.7	250,000 ohms, 1/3 watt resistor	
1.8	5000 ohms, 1/3 watt resistor	
1.9	250,000 ohms, 1/3 watt resistor	
1.10	250,000 ohms, 1/3 watt resistor	
1.11	250,000 ohms, 1/3 watt resistor	
1.12	2000 ohms, 1/3 watt resistor	
1.13	2000 ohms, 1/3 watt resistor	
1.14	2000 ohms, 1/3 watt resistor	
1.15	2000 ohms, 1/3 watt resistor	
1.16	500 ohms, 1/2 watt resistor	
1.17	1 megohm, 1/3 watt resistor	
1.18	50,000 ohms, 1/3 watt resistor	
1.19	100,000 ohms, 1/3 watt resistor	
1.20	50,000 ohms, 1/3 watt resistor	
1.21	100,000 ohms, 1/3 watt resistor	
1.22	1,000 ohms, 1/3 watt resistor	
2.1	304μfd adjustable padder	
2.5	1 μfd, 400 volt paper condenser	
2.7	1 μfd, 400 volt paper condenser	
2.8	30 μfd, adjustable padder	
2.10	30 μfd, adjustable padder	
2.11	30 μfd, adjustable padder	
2.13	100 μfd, mica condenser	
2.14	I.F. Amplifier Trans. Adj. Trimmer	
2.15	I.F. Amplifier Trans. Adj. Trimmer	
2.16	deleted	
2.17	I.F. Amplifier Trans. Adj. Trimmer	
2.18	1 μfd, 400 volt paper condenser	
2.19	I.F. Amplifier Trans. Adj. Trimmer	
2.21	1 μfd, 400 volt paper condenser	
2.22	I.F. Amplifier Trans. Adj. Trimmer	
2.24	1 μfd, 400 volt paper condenser	
2.25	1 μfd, 400 volt paper condenser	
2.26	250 μfd, mica condenser	
2.27	1 μfd, 400 volt paper condenser	
2.28	250 μfd, mica condenser	
2.29	1 μfd, 200 volt paper condenser	
2.30	1 μfd, 200 volt paper condenser	

- TUNING CONDENSER**
- 2.31 1 μfd, 400 volt paper condenser
 - 2.32 30 μfd, adjustable padder
 - 2.33 30 μfd, adjustable padder
 - 2.34 30 μfd, adjustable padder
 - 2.35 Band 3 Series Oscillator pad, 1000 μfd.
 - 2.36 Band 1 Series pad, 380 μfd.
 - 2.37 Band 1 Series Oscillator pad, 129 μfd.
 - 2.39 .01 μfd, 400 volt paper condenser
 - 2.40 .01 μfd, 400 volt paper condenser
 - 2.41 250 μfd, mica condenser
 - 2.42 400 μfd, mica condenser
 - 2.43 30 mmfd, adjustable padder
 - 2.44 30 mmfd, adjustable padder
 - 2.45 1 mfd, 400 volt paper condenser
 - 2.46 .01 mfd, 400 volt paper condenser

- REAR VIEW OF CHASSIS**
- 3-1, 3-2, 3-3, Band Switch Section in tandem with audio volume control
 - 3-4, 3-5, 3-6, On-Off Switch connected
 - 3-7

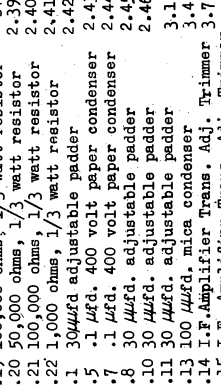

The unit includes 6 tubes and is a superheterodyne type receiver, providing both manual and automatic volume control; coverage of the entire frequency range in three selective positions of the band switch, and an audio output of 100 milliwatts. 100 milliwatts of audio power is also sufficient to operate a small loudspeaker. However, the unit is primarily designed for headphone operation and a jack is provided on the rear apron of the chassis for the insertion of a standard headphone plug. The output impedance of this phone circuit carries no direct current through it, since it is the secondary of a transformer and it is designed to supply a 2000 ohm load. If a loud-speaker is used, a suitable transformer should be used with it to match it to the output of the receiver.

SERVICE NOTES

The intermediate frequency used in the ME-14 receiver is 525 kilocycles. Alignment can be achieved by inserting a signal of 525 kilocycles. By connecting a test oscillator generating 525 kilocycles (modulated) to the grid of the first detector tube, the intermediate frequency transformers labeled No. 1, No. 2, and No. 3 I.F. (See Figure 3) can be adjusted to maximum reading on an audio output meter connected directly across the headphones, or across a special plug inserted in the headphone jack. Alignment is made on a given signal of 525 kilocycles for maximum reading on the output meter. It is essential that the input signal put into the first detector tube be not more than 200 microvolts, since the automatic volume control will hold all variations constant if the signals are of this order or higher. If it is impossible to cut down the energy delivered by the test oscillator, by means of adjustments on the test oscillator itself, the "Manual Gain" control may be of some assistance, although its range insofar as controlling circuits behind the first detector is rather limited. About 10 volts of audio should be obtained for optimum adjustment purposes, and the output of the signal generator, or test oscillator, should be lowered to a point where about 10 volts are obtained for alignment at the optimum peak adjustments. This, of course, means that the "Audio Gain" control should be set for maximum audio output.

Distorted signals having a very broken and rough characteristic are usually due to the fact that the filament battery is below its required voltage and needs replacement. The sensitivity of the instrument will, of course, fall off at the same time and the combination of the two conditions can be used as an indication that the filament battery has served its purpose.

RADIO FREQUENCY ALIGNMENT


All of the controls for radio frequency alignment, except the series padder for low frequency calibration of Band 3, are available from the bottom of the chassis. In Figure 3 it will be seen that the oscillator padder, used for adjustment of the low frequency calibration of Band 3, is located near the center of the chassis between the "B" batteries and the last section of the variable condenser. The capacity of this condenser is increased with counterclockwise rotation of the screw-driver with which it is adjusted. Counterclockwise rotation decreases the frequency, and clockwise rotation increases the frequency.

For recalibrating the instrument is is only necessary to make sure that the pointer is set properly with respect to the rotors of the variable condenser, and this is done by setting the rotors at full mesh and having the pointer, at the same time, set to the horizontal line on the left end of the calibrated scale. Under these conditions and with frequencies of accurately known value the following alignment frequencies and their respective adjusters are listed as follows:


- Band 1 .2 megacycles, Band 1 Oscillator Series Padder (See Figure 2)
 - Band 1 .4 megacycles, Band 1 Oscillator Parallel Padder (See Figure 2)
 - Band 2 700 kilocycles, use Band 2 Oscillator Series Padder (See Fig. 2)
 - Band 2 1200 kilocycles, use Band 2 Oscillator Parallel Padder (See Fig. 2)
 - Band 3 2 megacycles, use Band 3 Series Padder, (See Figure 3)
 - Band 3 4 megacycles, use Band 3 Oscillator Parallel Padder (See Fig. 2)
- After the calibration has been established by means of these adjustments, the respective bands are lined up, insofar as their radio frequency circuits are concerned, by adjustment of the respective Band padders for the radio frequency grid and the detector grid. Figure 2 shows the detector and r.f. padder for each band. Adjustments are to be made on a given modulated signal with an output meter across the headphones and adjustments left at the position giving maximum output meter reading.

RADIO MFG. ENGINEERS, INC.

MODEL DB-20, Late
MODEL DB-20 Batt.
Schematics

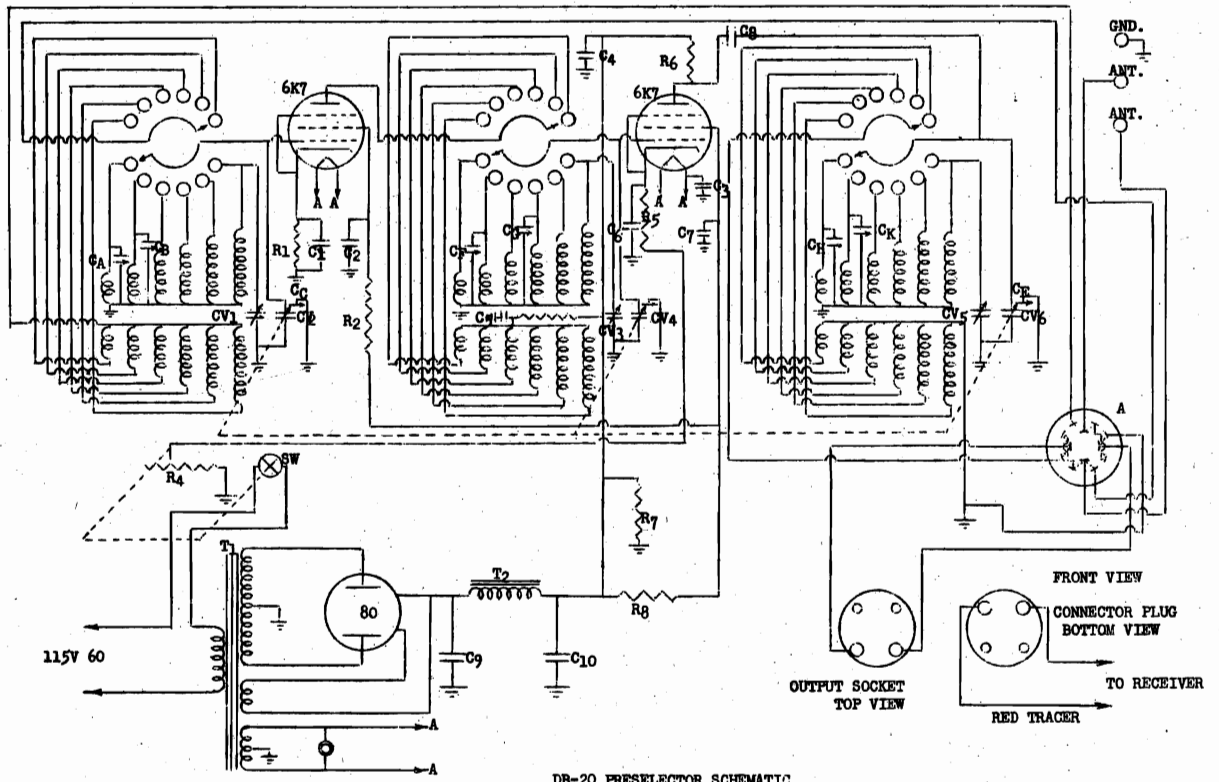

DB-20 PRESELECTOR SCHEMATIC

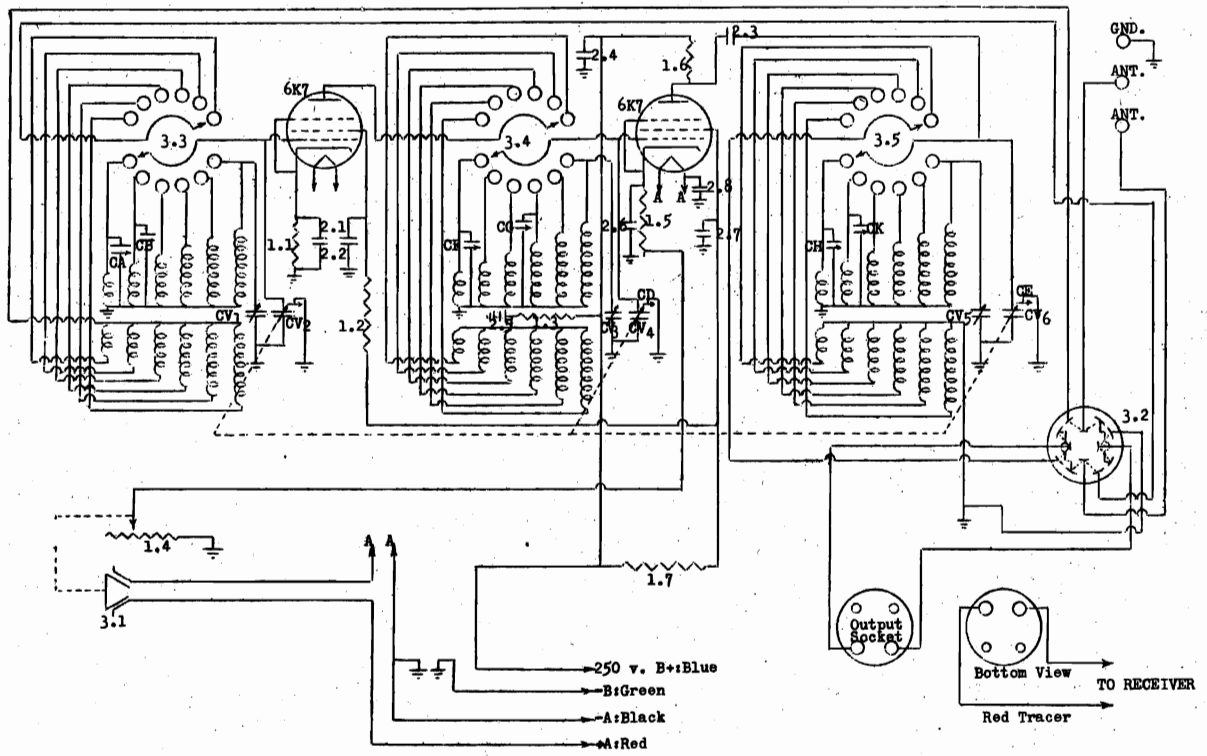

DB-20 BATTERY OPERATED SCHEMATIC

MODEL DB-20, Late
MODEL DB-20 Batt.
Alignment, Trimmers
Voltage

RADIO MFG. ENGINEERS, INC.

The RME DB-20 Preselector is a compact efficient design of a straightforward radio frequency amplifier cascade with a specified input and output impedance. The input impedance is of a low value varying between 200 and 350 ohms over the frequency range covered by the tuning elements of the instrument. The output impedance varies over the same range in the same manner so that the insertion of this amplifier between the antenna and the RME-69 receiver incurs no mismatch in the coupling system and provides an increase in selectivity and gain due to its insertion.

The adjustment of the amplifier is calibrated on a scale in as close a manner as it is possible to calibrate such an instrument and tuning of the instrument should be done so that the setting of the indicator on the DB-20 scale is very close to the frequency being used. One check on this method is to set the tuning control of the amplifier to a position which gives a maximum meter reading on a given signal when used in conjunction with the RME-69 or any other receiver having a tuning indicator. In the absence of the tuning indicator background noise or signal strength may be used as an indication of optimum setting of the preamplifier and this will compensate for small variations which are bound to occur in the calibration of the instrument.

One side of the output circuit of the DB-20 is grounded and it is essential that the proper wire of the output cable be connected to the antenna post of the receiver with which it is used in order to provide proper operation for the combination. The high side or the ungrounded lead of the output cable is marked with a red tracer and this should be normally connected to the antenna terminal which would be used in the connection of a Marconi Antenna against ground in normal receiver operation without the DB-20. On the RME-69 receiver this is the outside terminal of the three-terminal input strip marked A - A - G. The other lead, which is a plain black wire, is to be connected to the middle antenna terminal and a ground jumper can be used to connect, A (center) to G on the terminal strip. In the case of a receiver being used with the DB-20 which has only a two-terminal input, that is antenna and ground, the black wire connects, of course, to the ground and the red tracer wire to the antenna terminal. A reversal of these leads will cause inefficient operation and probably no operation at all even when the antenna switch is thrown so that the antenna is connected directly to the receiver. This can be a source of trouble when poor operation is experienced. A change-over switch is provided and consists merely of a four pole double throw switch indicated in Fig. 1 so that when it is thrown to the left the antenna is connected to the DB-20 and the DB-20 connected to the receiver input terminal. When the switch is thrown to the right the antenna is connected directly to the receiver and the DB-20 circuits are entirely removed from the picture.

PROCEDURE FOR ALIGNMENT OF THE RADIO FREQUENCY CIRCUIT

As an indicating device for alignment changes the meter on the RME-69 receiver can be used to indicate maximum signal being supplied the receiver from the DB-20. In the case of other communication receivers the same method may be used with their respective carrier level or R meter indication. In case the alignment is made with a receiver without carrier indicating devices an output meter can be used in the regular manner in which it is used for the alignment of receivers, but in this case, of course, it will be necessary to use a modulated signal input to the DB-20 to supply an audio component which can be used to operate the output meter.

All adjustments described should be adjusted to and left set at maximum meter readings be it carrier amplitude indicator or output as indicated on the output meter.

First set the receiver to 1000 Kc. and tune the DB-20 to 1000 Kc. which will be indicated on the main tuning dial and the band in which will be found 1000 Kc. is provided by setting the switch to position one (1). Set the pointer of the DB-20 on 1 Mc. reading of the scale and supply 1 Mc. signal input to the antenna terminal to the DB-20 setting the selector switch on the DB-20 (Fig. 1) to the left position. When in this position adjust C₁, C₂ and C₃ for maximum meter reading.

Then switch to band two and three successively and check the setting at 2, 3, 4 and 5 megacycles. These frequencies, of course, will be checked by placing the band switch in the proper position required for tuning to these frequencies. The receiver, of course, must also be adjusted to these frequencies simultaneously with the DB-20.

The calibration for these frequencies will be found to be dependent on the settings of C₁, C₂ and C₃ which are made for 1000 Kc. on band one and will be in adjustment if band one is properly aligned.

Next turn the switch to position four and feed a signal of 7 Mc. into the receiver and adjust the tuning control of the DB-20 so that it sets on 7 Mc. Under these conditions check the setting of C₄ for peak output. (Fig. 2).

Next set the band switch on position five and insert a signal of 14 Mc. into the receiver adjusting the tuning control of the DB-20 to 14 Mc. under these conditions adjust C₅, C₆ and C₇ for maximum output.

Next set the band switch to position six and set the tuning indicator to 30 Mc. on the scale and insert a signal of 30 Mc. into the DB-20. This condition obtained adjust C₈, C₉ and C₁₀ for maximum output.

During all of these settings and adjustments, of course, the receiver should be set to the same frequency as the DB-20 so that it will be able to receive the output of the DB-20 at the proper frequency.

The adjustments just described will assure maximum output due to alignment of the RF circuit in the DB-20.

The voltages to be expected at points indicated on the schematic diagram of Figure 13 are as follows:

- 1 to ground (volume control set to minimum) 26.6 volts.
- 1 to ground (volume control set to maximum) 3.4 volts.
- 2 to ground 265 volts
- 3 to ground 100 volts
- 4 to ground 3.4 volts
- 5 to ground 333 volts
- 6 to ground 285 volts
- 7 to ground 123 volts
- 8 to ground 333 volts
- 9 to ground 380 volts

A to A 6.6 volts at 115 volts line voltage AC

The following continuity checks should be made:

	Band (1)	Band (2)	Band (3)	Band (4)	Band (5)	Band (6)
11 to ground	3.8	1.4	0.6	0.2	0.2	0.2 (ohms)
12 to 13	0.2	0.2	0.2	0.2	0.2	0.2 (ohms)
14 to 15	0.2	0.2	0.2	0.2	0.2	0.2 (ohms)
16 to ground	3.8	1.4	0.6	0.2	0.2	0.2 (ohms)
17 to ground	3.8	1.4	0.6	0.2	0.2	0.2 (ohms)

All measurements made with output cable and antenna disconnected and changeover switch in DB-20 position.

Voltages greater or smaller than these values listed by an amount exceeding 15% indicates difficulty in the power circuits of the receiver.

Resistances greater or less by 15% than the resistances listed indicates conditions other than normal in continuity in these circuits.

If the amplifier is dead as evidenced by a loss in signal strength on a given signal when the DB-20 is cut into the circuit the loss being compared with the signal received when the antenna is connected directly to the receiver may be due to a dead tube which is usually due to the fact that the filament is burned and can be ascertained by placing the hand on the tube to see whether or not it is warm or cold. If it is warm, of course, the filament is lit and probably the tube is satisfactory. If the tube is cold the filament is probably open and therefore the tube needs replacing. Of course, tubes can be defective from other reasons which can not be detected in this manner but must be ascertained by checking on a regular tube checker.

Another reason for a dead amplifier may be due to lack of voltage on elements of the tube and can be checked by the voltage check.

Cause of no voltage on the plate or screen of the tube can be due to short circuit in the bypasses of C₇, C₂, C₄, C₈, C₁₀ or C₁ or an open resistor R₆, R₇, R₃ or an open choke T₂ or a burned out 80 rectifier tube or an open circuit in the antenna coil or the output coils of the DB-20 which can be checked by the continuity measurements listed above.

If the amplifier has very little gain (the average gain should be 3R's over that of the receiver itself) it is probably due to misalignment and can be corrected by the procedure described on pages 2 and 3, or there is a defective tube which is not providing all the gain that is standard and the tubes can be checked and replaced by tubes having suitable characteristics.


Additional information regarding special cases of trouble can be obtained from the Radio Mfg. Engineers by listing the details in a letter and writing direct to the factory.

METHOD OF CONNECTION OF THE DB-20 WITH THE RME-69 RECEIVER

The DB-20 unit is housed in a furniture steel crinkle finished cabinet which matches the height and appearance of the cabinet used to house the RME-69 receiver. It is designed to be placed at the left side of the receiver. Figure 1, Sheet 2, shows a sketch of the rear view of the DB-20 placed alongside of the receiver. In order to make sure that the two cabinets are well bonded together, it is advisable to make sure that all paint is cleaned from the adjacent cabinet bottom edges, and the two placed close together on a clean surface copper strip about three inches by ten inches long, or aluminum, or any metal of a non-ferrous kind with a clean surface.

The main factor to consider is that the two cabinets are properly connected to this ground. This prevents the possibility of any feedback due to the antenna of the DB-20 getting close to the output wires of the DB-20 and causing oscillation and also reduces the effect of signal leakage direct to the receiver due to the fact that the units are at a high impedance above ground. When this location and placement of the two units has been achieved, the connections can be made as indicated in Figure 1. The cable and plug indicated in the diagram are furnished with the DB-20 unit. In this twisted pair will be found one black wire and one black wire with red tracer. The black wire with the red tracer should be placed as indicated on the outside antenna post of the RME-69 Receiver. The black wire can be placed on the other antenna post and the ground should be connected to any good ground available. If it is certain that the bond is good, the ground as indicated on the DB-20 will be sufficient for the entire system.

Fig. 1

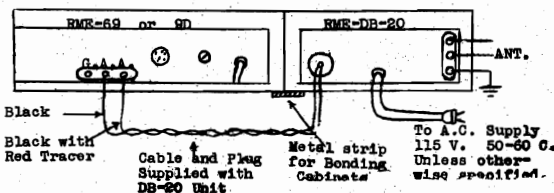

RADIO MFG. ENGINEERS, INC.

MODEL DB-20, Late
MODEL DB-20 Batt.
Trimmers, Chassis
Parts List



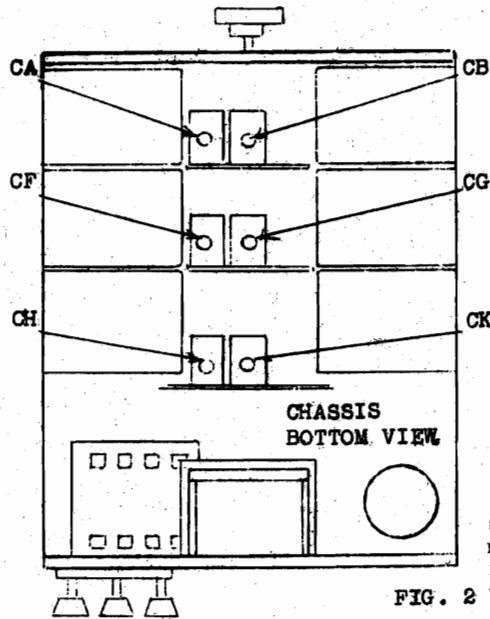


FIG. 2

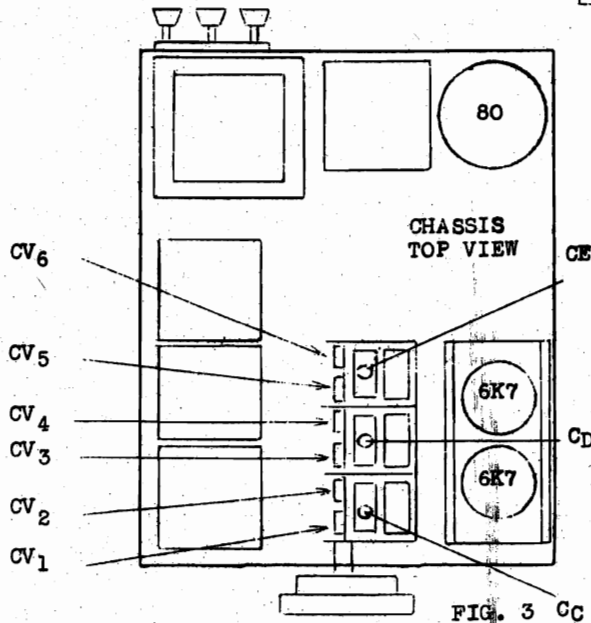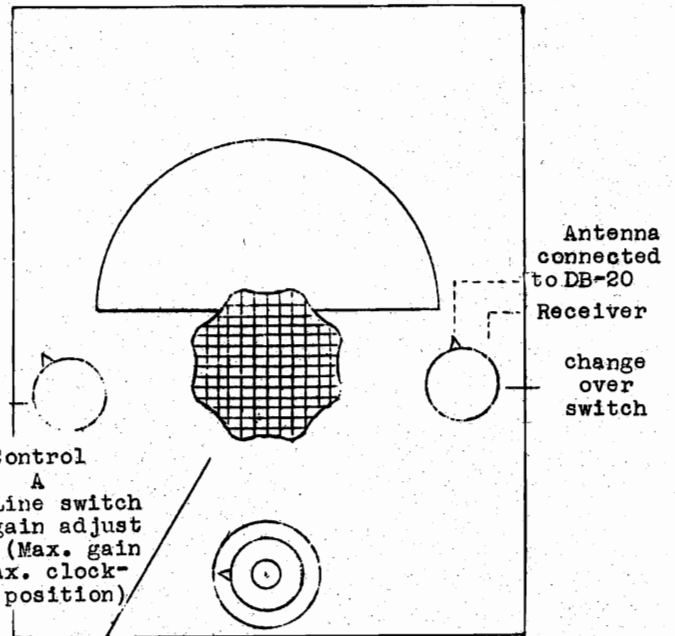

BATTERY OPERATED DB-20 PARTS LIST

RESISTORS

- 1.1.....300 ohm
- 1.2..10,000 ohm
- 1.3..10,000 ohm
- 1.4..30,000 ohm variable
- 1.5.....300 ohm
- 1.6..10,000 ohm
- 1.7..50,000 ohm 1 watt

CONDENSERS

- 2.1..... .01
- 2.2..... .01
- 2.3..... .0001
- 2.4..... .01
- 2.5..... .01
- 2.6..... .01
- 2.7..... .01

- CA 5 - 30 μ fd Adj. padder
- CB 5 - 30 μ fd Adj. padder
- CC Variable condenser trimmers
- CD Variable condenser trimmers
- CE Variable condenser trimmers
- CF 5 - 30 μ fd Adj. padder
- CG 5 - 30 μ fd Adj. padder
- CH 5 - 30 μ fd Adj. padder
- CK 5 - 30 μ fd Adj. padder

PARTS LIST FOR DB-20


- | | |
|------------------------|---------------------------------|
| R1 300 ohm | T1 Power transformer |
| R2 10,000 ohm | T2 Filter choke |
| R3 10,000 ohm | |
| R4 30,000 ohm variable | |
| R5 300 ohm | Ca 5 - 30 μ fd adj. padder |
| R6 10,000 ohm | Cb 5 - 50 μ fd adj. padder |
| R7 15,000 ohm 10 watt | Cf 5 - 30 μ fd adj. padder |
| R8 50,000 ohm 1 watt | Cg 5 - 30 μ fd adj. padder |
| C1 .01 | Ch 5 - 30 μ fd adj. padder |
| C2 .01 | Ck 5 - 50 μ fd adj. padder |
| C3 .002 | |
| C4 .01 | Cv1-6 Variable tuning condenser |
| C5 .01 | |
| C6 .01 | |
| C7 .01 | |
| C8 .0001 | |
| C9 8 μ fd. | |
| C10 12 μ fd. | |
- Cc, Cd, Ce Variable condenser, trimmers

SWITCHES

- 3.1 Line switch
- 3.2 Antenna changeover switch
- 3.3 Band switch section
- 3.4 Band switch section
- 3.5 Band switch section

MODEL DM-30X
Schematic, Voltage

RADIO MFG. ENGINEERS, INC.

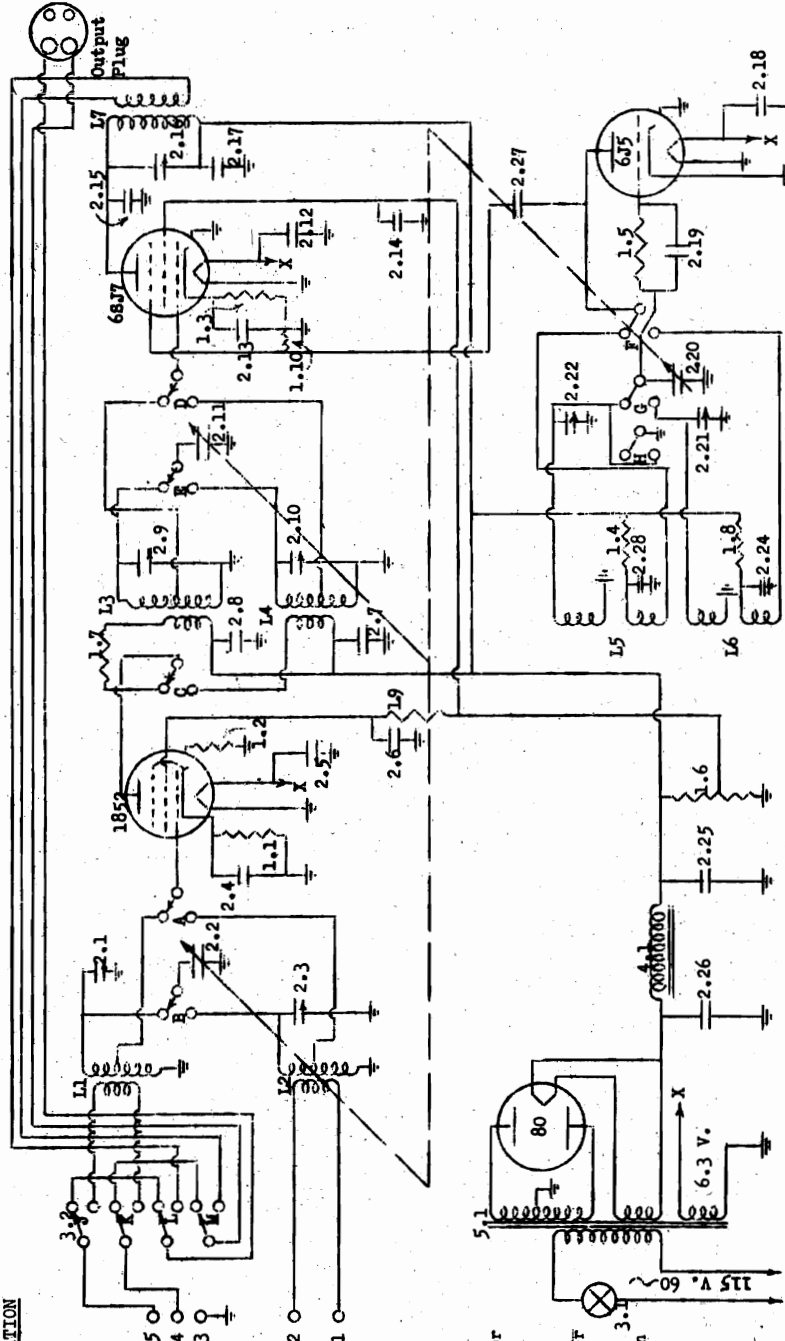

SPECIFICATION

- PART CODE NUMBER**
- 2.1 20 μ fd. condenser
 - 2.2 Tuning condenser
 - 2.3 20 μ fd. condenser
 - 2.4 400 μ fd. condenser
 - 2.5 400 μ fd. condenser
 - 2.6 400 μ fd. condenser
 - 2.7 400 μ fd. condenser
 - 2.8 250 μ fd. condenser
 - 2.9 20 μ fd. condenser
 - 2.10 20 μ fd. condenser
 - 2.11 Tuning Condenser
 - 2.12 400 μ fd. condenser
 - 2.13 400 μ fd. condenser
 - 2.14 400 μ fd. condenser
 - 2.15 50 μ fd. condenser
 - 2.16 30 μ fd. condenser
 - 2.17 .01 μ fd. condenser
 - 2.18 400 μ fd. condenser
 - 2.19 100 μ fd. condenser
 - 2.20 Tuning condenser
 - 2.21 15 μ fd. condenser
 - 2.22 15 μ fd. condenser
 - 2.24 400 μ fd. mica condenser
 - 2.25 15 μ fd. condenser
 - 2.26 10 μ fd. condenser
 - 2.27 50 μ fd. condenser
 - 2.28 .002 μ fd. mica condenser
 - 3.1 S.P.S.T. Switch
 - 3.2 (J,K,L,M) 4-P.D.T. Switch
A,B,C,D,
E,F,G,H.
Band Switch

- 4.1 Choke, 30 henries
- 5.1 Power transformer
 - L1 Band 2 R.F. coil
 - L2 Band 1 R.F. Coil
 - L3 Band 2 Det. coil
 - L4 Band 1 Det. coil
 - L5 Band 2 Osc. coil
 - L6 Band 1 Osc. coil
 - L7 Output Coupling Transformer
1550KC

- 1.1 200 ohm, 1/3 watt resistor
- 1.2 35 ohm, 1/3 watt resistor
- 1.3 5000 ohms, 1/3 watt resistor
- 1.4 10,000 ohm, 1 watt resistor
- 1.5 500 ohm, 1/3 watt resistor
- 1.6 15,000 ohm, 10 watts C.T.
- 1.7 35 ohm, 1/3 watt resistor
- 1.8 10,000 ohm, 1 watt resistor
- 1.9 5000 ohm, 1/3 watt resistor
- 1.10 1000 ohm, 1/3 watt resistor

This unit is in effect a frequency converter and therefore acts as a radio frequency amplifier and mixer tube with its oscillator in an over-all superheterodyne type of circuit. It must be used in connection with a regular receiver capable of tuning to a frequency of 1550 KC. The associated receiver therefore acts as an intermediate frequency amplifier unit and a demodulator and audio amplifier in order to reproduce the output of the expander.


TEST VOLTAGES OF RME DM-30X

- Measurements obtained with 115 v. A.C. line voltage:
- R.F. Amplifier, cathode to ground..... 1 v. - 1.5 v.
 - R.F. Amplifier, plate to ground..... 210 v. - 240 v.
 - R.F. Amplifier, screen to ground..... 110 v. - 125 v.
 - Detector, cathode to ground..... 5 v. - 6 v.
 - Detector, plate to ground..... 210 v. - 240 v.
 - Detector, screen to ground..... 110 v. - 125 v.
 - *Oscillator, plate to ground (oscillating) 125 v. - 140 v.
 - Osc., plate to ground (not oscillating) 110 v. - 120 v.
- Note* This voltage must be measured at "B" plus end of plate coil to prevent application of voltmeter leads from affecting oscillator circuit.


DM-30X S C H E M A T I C

RADIO MFG. ENGINEERS, INC.

MODEL 69 AC Late
MODEL 69AC Late Revised
Schematics

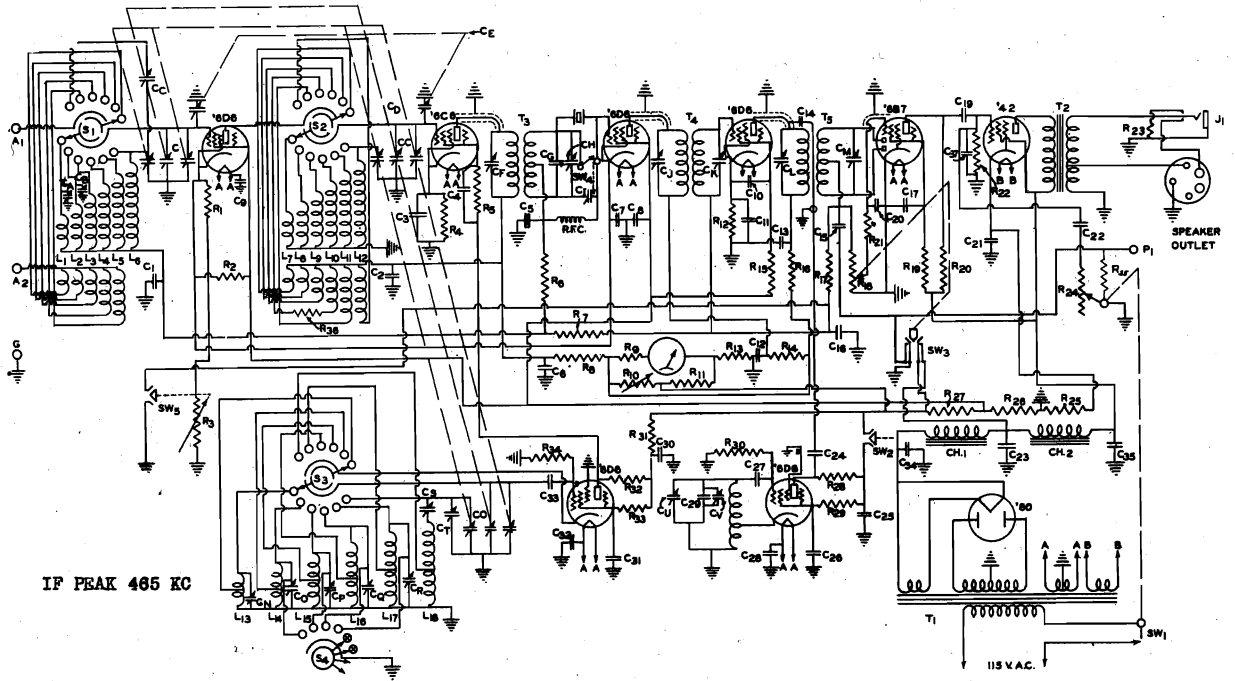

R.M.E. 69 SCHEMATIC CIRCUIT
AC - LATE C-23

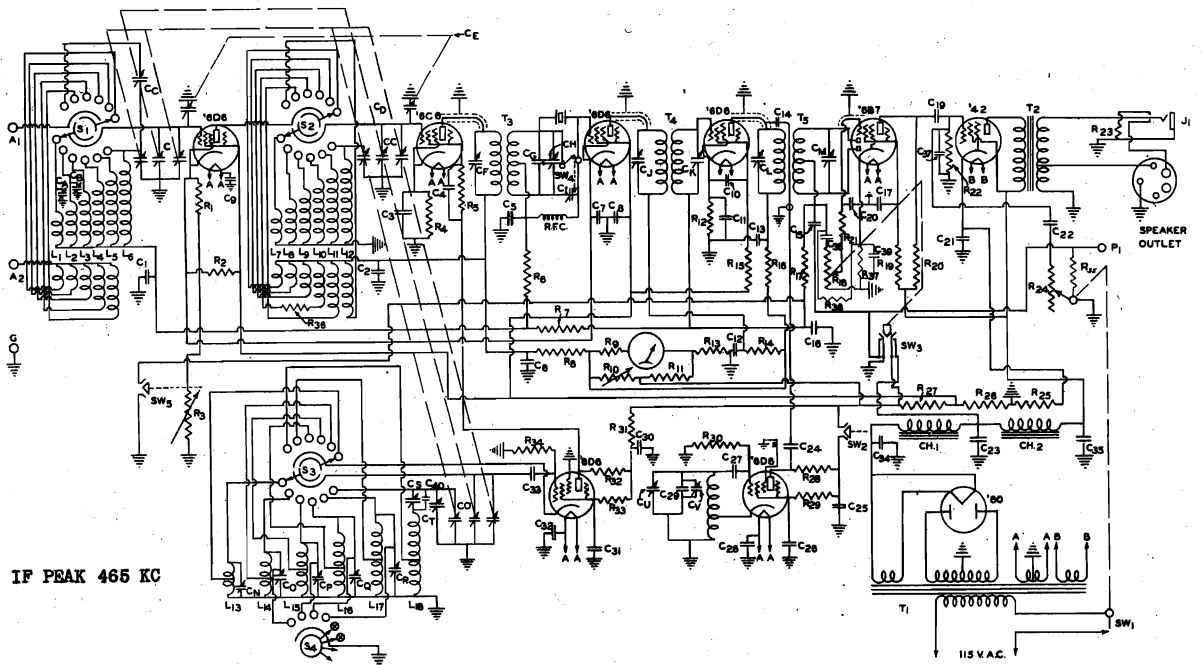


R.M.E. 69 SCHEMATIC CIRCUIT
AC-LATE REVISED C-23


RADIO MFG. ENGINEERS, Inc.
111 HARRISON STREET PEORIA, ILLINOIS

MODEL 69A
 MODEL 69B
 Schematics

RADIO MFG. ENGINEERS, INC.

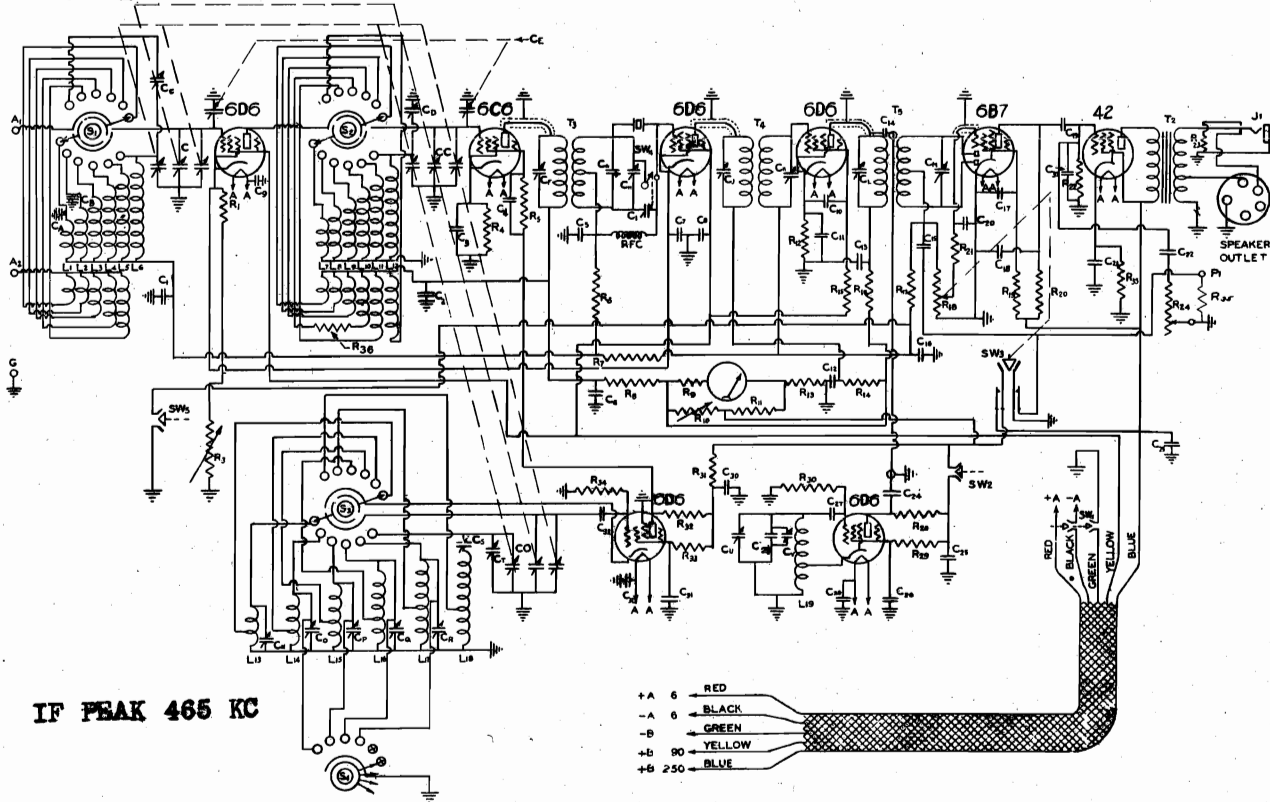

Schematic Diagram of RME 69-B for Battery Operation

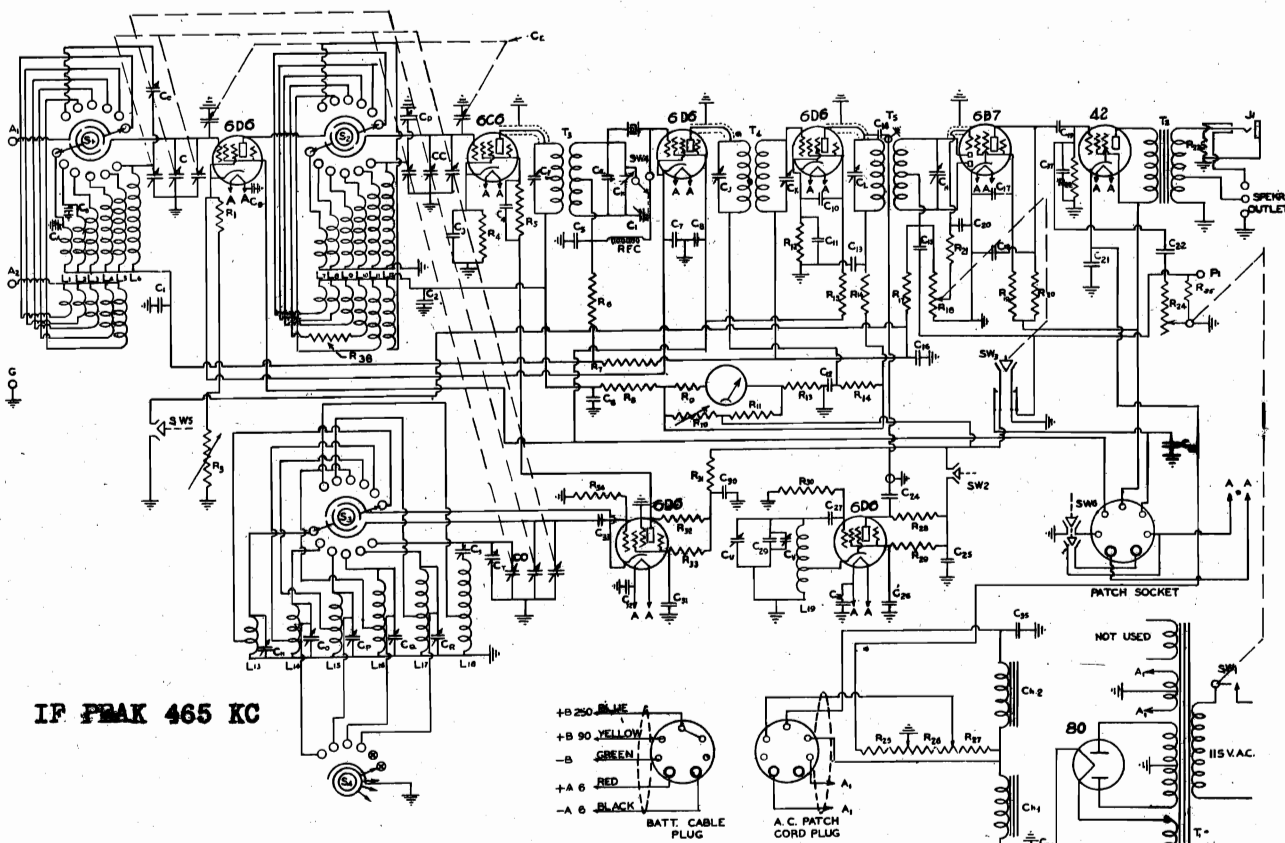


Schematic Diagram of RME 69-A for AC or Battery Operation

RADIO MFG. ENGINEERS, INC.

MODEL 69 Revised
AC or Batt.
Schematic

RADIO MFG. ENGINEERS, Inc.
III HARRISON STREET
PEORIA, ILLINOIS

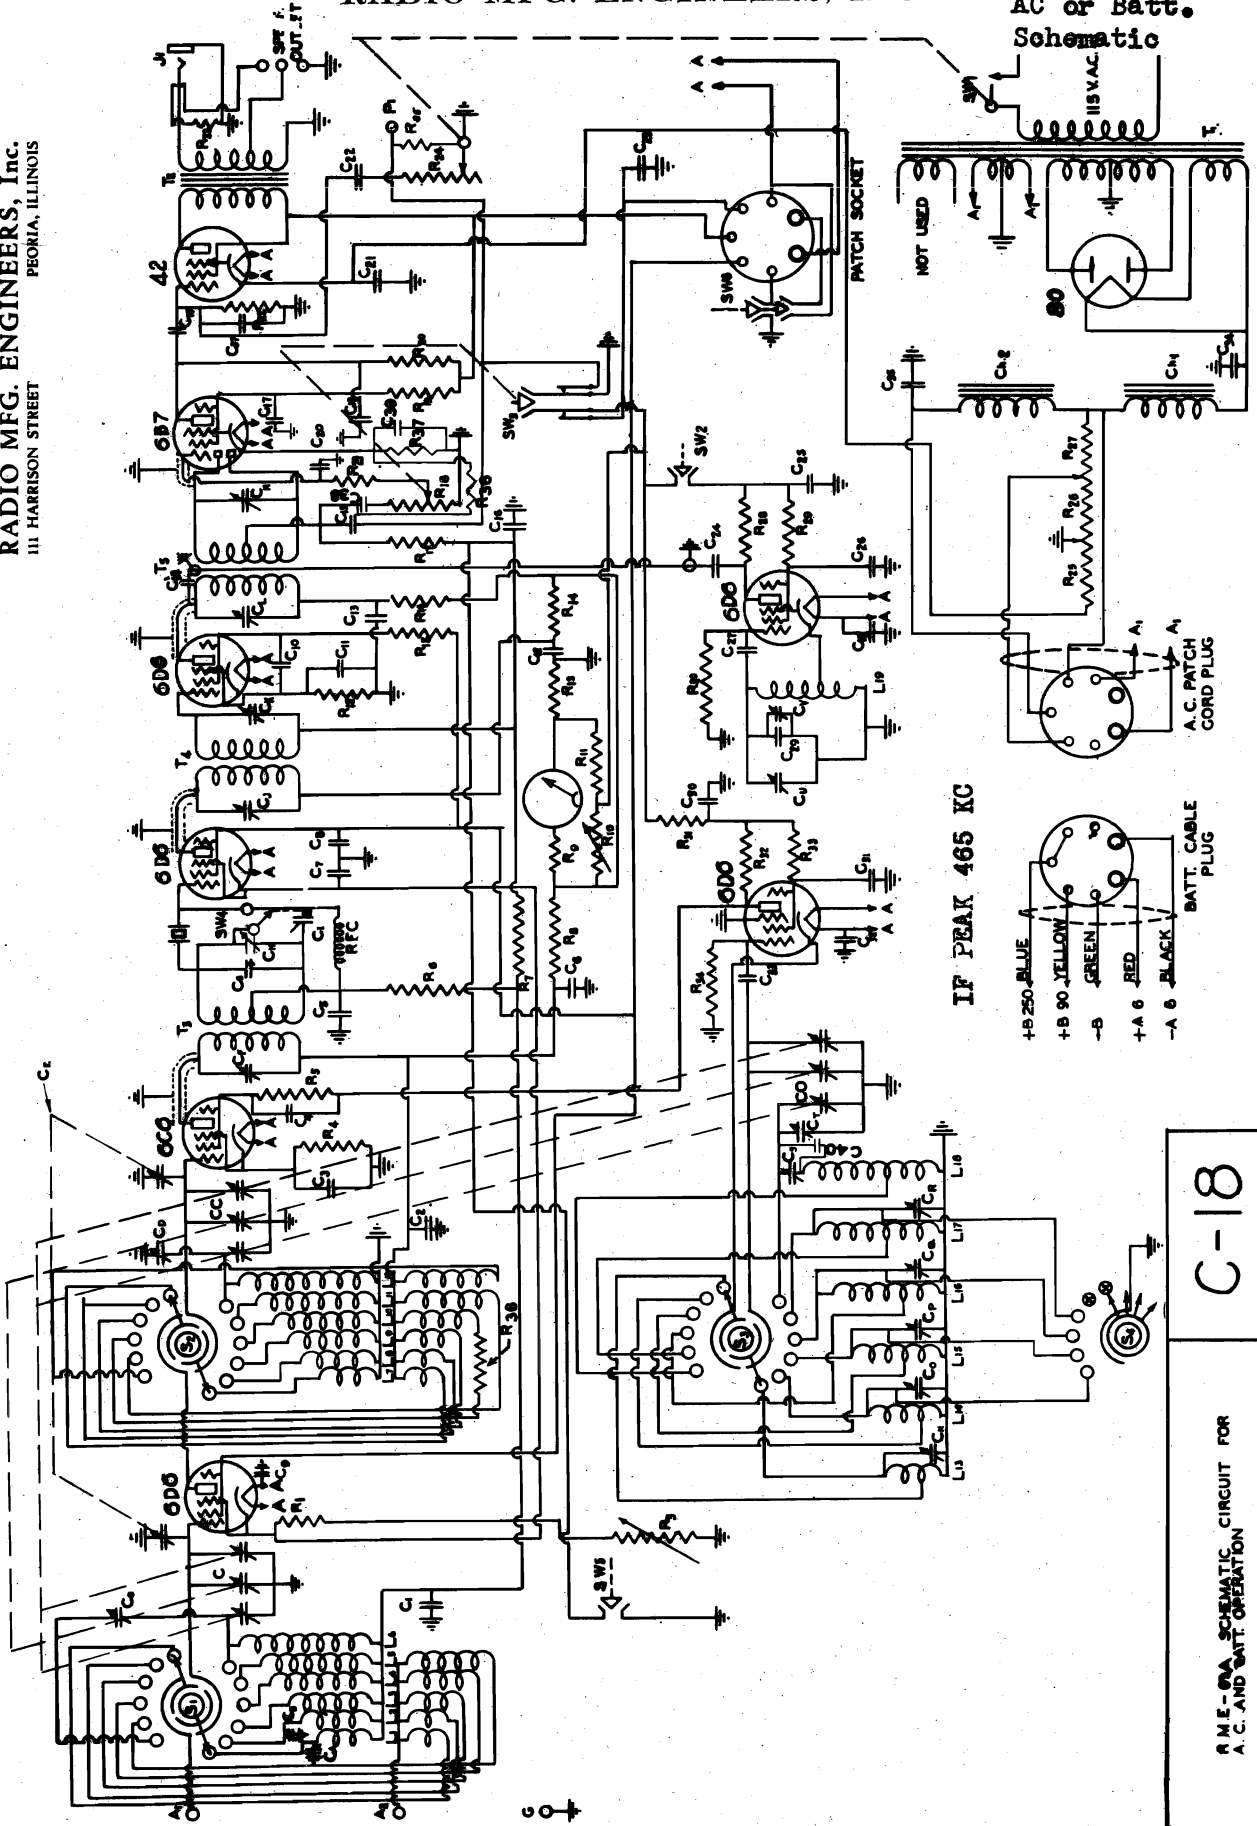

IF PEAK 465 KC

- +B 250 BLUE
- +B 90 YELLOW
- B GREEN
- +A 6 RED
- A 6 BLACK


C-18

RME-69A SCHEMATIC CIRCUIT FOR
A.C. AND BATT. OPERATION

MODEL 69
Notes, Parts

RADIO MFG. ENGINEERS, INC.

The antenna input impedance to an RME-69 Receiver varies in the vicinity of 250 to 350 ohms. The antenna supply should therefore be of the Marconi type which is fed at current maximum to the receiver or of the twisted pair type where impedances of lines involved are in the vicinity of the 250 ohms previously mentioned. For maximum selectivity insofar as the input circuit is concerned, the value of this impedance should be taken into account. Antennae which are supplying signal to the receiver at a high potential point should not be used in conjunction with the RME-69 Receiver because of the great loss in voltage transfer encountered in such a combination. The half-wave doublet type of antenna providing a tuned antenna system for a certain range of frequencies has certain marked directional characteristics. These directional characteristics are evident in the fact that the greatest pick-up occurs in a direction at right angles to the axis of the antenna, forming in effect a Figure 8 pattern in which the lobes are located off the sides of the antenna instead of off the ends.

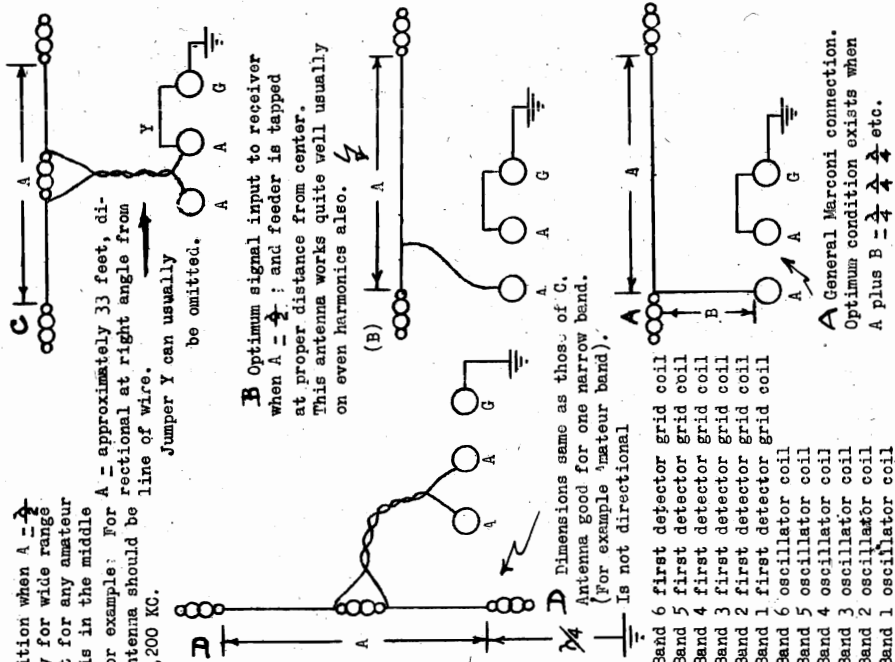

A Optimum condition when A - $\frac{1}{2}$ is in the middle band if A - $\frac{1}{2}$ is in the middle band. Excellent for any amateur freq. Excellent for wide range of the band. For example: For A = approximately 33 feet, diagonal at right angle from 20 meter band antenna should be line of wire. Jumper Y can usually be omitted.

B Optimum signal input to receiver when A - $\frac{1}{2}$ and feeder is tapped at proper distance from center. This antenna works quite well usually on even harmonics also.

C Dimensions same as those of C. Antenna good for one narrow band. (For example 'amateur band'). Is not directional.

D Band 6 first detector grid coil
Band 5 first detector grid coil
Band 4 first detector grid coil
Band 3 first detector grid coil
Band 2 first detector grid coil
Band 1 first detector grid coil
L14 Band 6 oscillator coil
L15 Band 4 oscillator coil
L16 Band 3 oscillator coil
L17 Band 2 oscillator coil
L18 Band 1 oscillator coil

LEGEND OF RESISTORS, CONDENSERS, CHOKES, AND TRANSFORMERS OF RME-69 RECEIVER SCHEMATIC DIAGRAM.

RESISTORS
R34 8 μ fd 450 volt electrolytic.
R35 8 μ fd 450 volt electrolytic.
R37 .00025 μ fd mouldeed mica
C38 .1 μ fd, 400 volts
C39 20 μ fd, 25 volt
C40 400 μ fd, mouldeed mica

CONDENSERS
Ca and Cb 30 μ fd, adjustable mica padders.
Cc 30 μ fd, mica padder.
Cd deleted.
Ce Dual section resonator control, 4 μ fd minimum, 30 μ fd maximum.
Cf, Cg, Cj, Ck, Adjustable trimming condensers in the intermediate frequency transformers.
Cl, Cm, the intermediate frequency transformers.
Ch 25 μ fd midget air padder.
Ci 30 μ fd mica adjustable phasing condenser.
Cn, Co, Cp, Cq 30 μ fd adjustable padders.
Cq 70 μ fd adjustable padder.
Cs .0004 mica condenser shunted by 70 μ fd, mica adjustable trimmer.

INDUCTORS
L1 Band 6 RF grid coil
L4 Band 3 RF grid coil
L5 Band 2 RF grid coil
L6 Band 1 RF grid coil
L7 1 megohm, 1/2 watt
L8 100,000 ohms, 1/2 watt
L9 50,000 ohms, 1/2 watt
L10 25,000 ohms, 1/2 watt
L11 10,000 ohms, 1/2 watt
L12 5,000 ohms, 1/2 watt
L13 1 megohm, 1/2 watt
L14 250,000 ohms, 1/2 watt
L15 100,000 ohms, 1/2 watt
L16 50,000 ohms, 1/2 watt
L17 1 megohm, 1/2 watt
L18 250,000 ohm potentiometer audio level control

TRANSFORMERS
T1 Main power transformer
T2 Audio output transformer to 4,000 ohms and 600 ohms.
T3 First intermediate frequency amplifier transformer.
T4 Second intermediate frequency amplifier transformer.
T5 Third intermediate frequency amplifier transformer.

SWITCHES
SW1 115 volt line switch
SW2 Beat oscillator on and off switch
SW3 Switch operated by control "H" for connecting monitor circuit and opening B supply to amplifier stage.
SW4 Crystal switch for series of for parallel
SW5 Out-off switch for removing AVC action (operated in tandem with R)

OTHER COMPONENTS
S1, S2, S3, S4, Band Change Switch
SW1 115 volt line switch
SW2 Beat oscillator on and off switch
SW3 Switch operated by control "H" for connecting monitor circuit and opening B supply to amplifier stage.
SW4 Crystal switch for series of for parallel
SW5 Out-off switch for removing AVC action (operated in tandem with R)

RESISTORS
R1 200 ohms, 1/2 watt
R2 20,000 ohms, 1 watt
R3 30,000 ohms, variable
R4 5,000 ohms, 1/2 watt
R5 1 megohm, 1/2 watt
R6 250,000 ohms, 1/2 watt
R7 100,000 ohms, 1/2 watt
R8 2,000 ohms, 1/2 watt
R9 500 ohms, 1/2 watt +5%
R10 200 ohms wire wound var.
R meter balance
R11 1,000 ohms, 1/2 watt
R12 800 ohms, 1/2 watt
R13 100,000 ohms, 2 watts
R14 2,000 ohms, 1/2 watt
R15 10,000 ohms, 1/2 watt
R16 2,000 ohms, 1/2 watt
R17 1 megohm, 1/2 watt
R18 250,000 ohm potentiometer audio level control

CONDENSERS
C1 .01 μ fd 400 volts.
C2 .01 μ fd 400 volts.
C3 .01 μ fd 400 volts.
C4 .01 μ fd 400 volts.
C5 .01 μ fd 400 volts.
C6 .1 μ fd 400 volts.
C7 .1 μ fd 400 volts.
C8 .1 μ fd 400 volts.
C9 .002 mouldeed mica condenser.
C10 .01 μ fd 400 volts.
C11 .1 μ fd 400 volts.
C12 .1 μ fd 400 volts.
C13 .1 μ fd 400 volts.
C14 1" of shielded braid wrapped around plate lead of second intermediate frequency amplifier tube. Approximate capacity 10 μ fd.
C15 .00025 μ fd.
C16 .01 μ fd, 400 volts.
C17 .1 μ fd, 400 volts.
C18 .01 μ fd, 400 volts.
C19 .01 μ fd, 400 volts.
C20 .00025 μ fd mouldeed mica condenser.
C21 20 μ fd 25 volt electrolytic.
C22 .01 μ fd 400 volts.
C23 12 μ fd 450 volt electrolytic.
C24 .0001 mouldeed mica condenser.
C25 .01 μ fd 400 volt electrolytic.
C26 .01 μ fd 400 volts.
C27 .0001 μ fd mouldeed mica.
C28 .01 μ fd 400 volt.
C29 .00025 mouldeed \pm 5%.
C30 .1 μ fd 400 volts.
C31 .01 μ fd, 400 volts.
C32 .0001 μ fd, 400 volts.
C33 .0001 μ fd mouldeed \pm 5%.

RADIO MFG. ENGINEERS, INC.

MODEL 69
Voltage


TEST VOLTAGES OBTAINED AT VARIOUS POINTS IN THE RECEIVER CIRCUIT (Measurements made with voltmeter having internal resistance of 1,000 ohms per volt. Instruments with other internal resistances give entirely different readings) Note: Line voltage should be 115 v.

PLACE TEST PRODS BETWEEN	CORRECT VOLTAGE (Switch "H" in toward panel)	CORRECT VOLTAGE (Switch "H" pulled outward fm. panel)
Radio frequency amplifier plate and ground	240 volts	0 volts
Radio frequency amplifier screen and ground	100 "	0 "
Radio frequency amplifier cathode and ground	3.2 "	0 "
First detector plates	240 "	0 "
First detector screen and ground	75 "	0 "
First detector cathode and ground	3.5 "	0 "
First intermediate frequency amplifier plate and ground	250 "	0 "
First intermediate frequency amplifier screen and ground	100 "	0 "
Intermediate frequency amplifier cathode and ground	3.2 "	0 "
(The same voltages apply to the second intermediate frequency amplifier tube elements)		
6B7 plate and ground	115 "	145 "
6B7 screen and ground	25 "	35 "
42 plate and ground	244 "	280 "
42 screen and ground	248 "	290 "
42 cathode and ground	16 "	18 "
80 rectifier filament and ground	258 "	335 "
Oscillator plate and ground	248 "	0 "
Oscillator screen and ground	115 "	0 "
Beat oscillator plate and ground	180 "	210 "
Beat oscillator screen and ground	100 "	130 "
The voltage across R-31	14 "	0 "

These voltages are subject to a fluctuation of plus or minus 15% without indication of material difficulties.

MODEL 70
Chassis, Socket,
Trimmers,
Switch Data

RADIO MFG. ENGINEERS, INC.

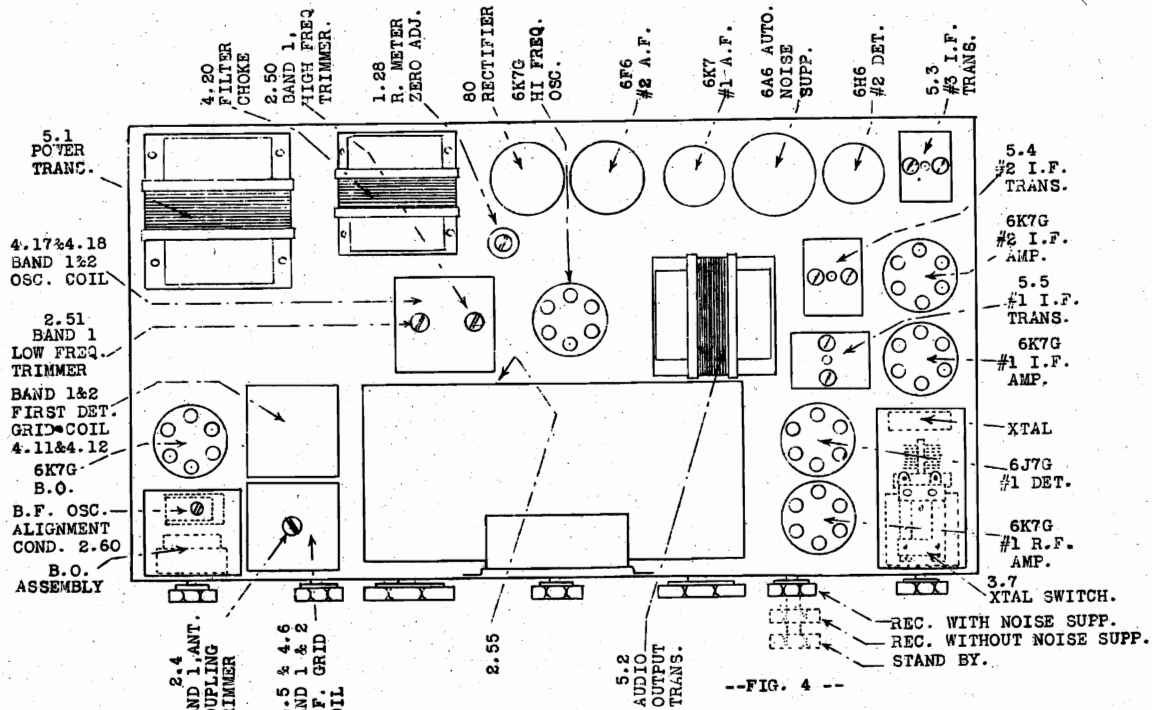

--FIG. 4--

SWITCHES

- 3.1 Band change switch
- 3.2 Band change switch
- 3.3 Band change switch
- 3.4 AVC On-Off
- 3.5 Beat Oscillator
- 3.6 Band change switch
- 3.7 Crystal switch
- 3.8 Noise suppressor and stand-by.
- 3.9 Line switch


INDUCTANCE

- 4.1 Band 6 R.F. Grid coil 4.10
- 4.2 Band 5 R.F. Grid coil 4.11
- 4.3 Band 4 R.F. Grid coil 4.12
- 4.4 Band 3 R.F. Grid coil 4.13
- 4.5 Band 2 R.F. Grid coil 4.14
- 4.6 Band 1 R.F. Grid coil 4.15
- 4.7 Band 6 1st Det. coil 4.16
- 4.8 Band 5 1st Det. coil 4.17
- 4.9 Band 4 1st Det. coil 4.18
- Band 3 1st Det. coil 4.19
- Band 2 1st Det. coil 4.20
- Band 1 1st Det. coil 4.21
- Band 6 Osc. coil
- Band 5 Osc. coil
- Band 4 Osc. coil
- Band 3 Osc. coil
- Band 2 Osc. coil
- Band 1 Osc. coil

TRANSFORMERS

- 5.1 Power transformer
- 5.2 Audio transformer
- 5.3 I.F. Transformer #3
- 5.4 I.F. Transformer #2
- 5.5 I.F. Transformer #1


- BAND 2 OSC. 2.49
- BAND 3 OSC. 2.48
- BAND 4 OSC. 2.47
- BAND 5 OSC. 2.46
- BAND 6 OSC. 2.45
- VOLUME CONTROL 1.19
- BLEEDER RESISTOR

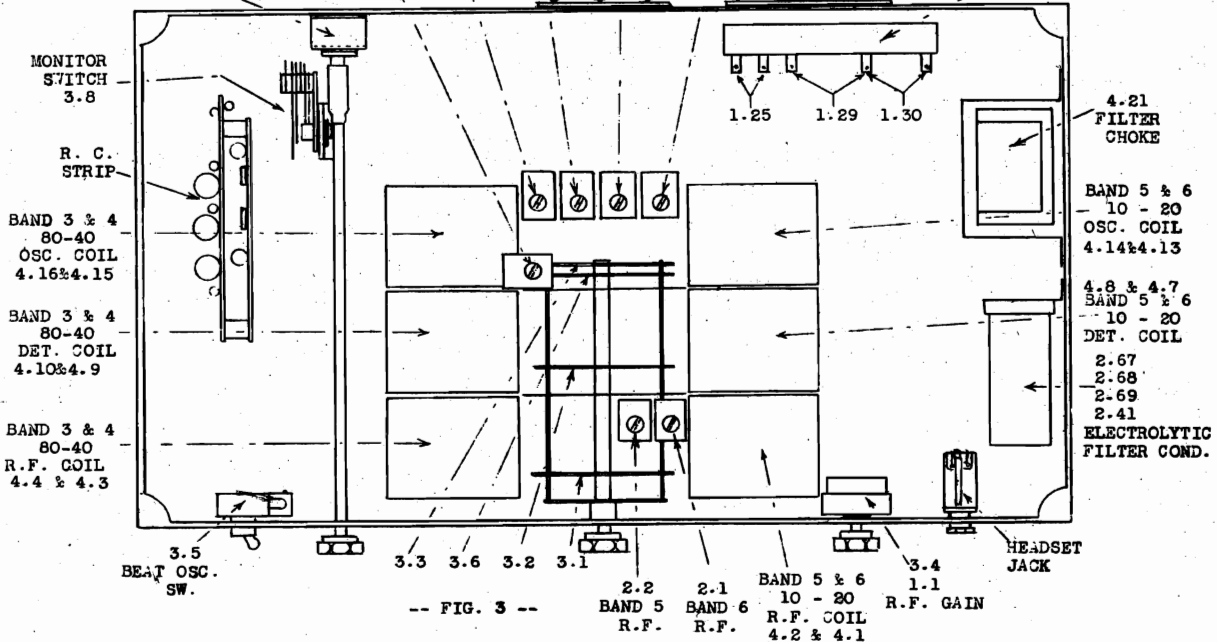

-- FIG. 3 --

RADIO MFG. ENGINEERS, INC.

MODEL 70
Schematic

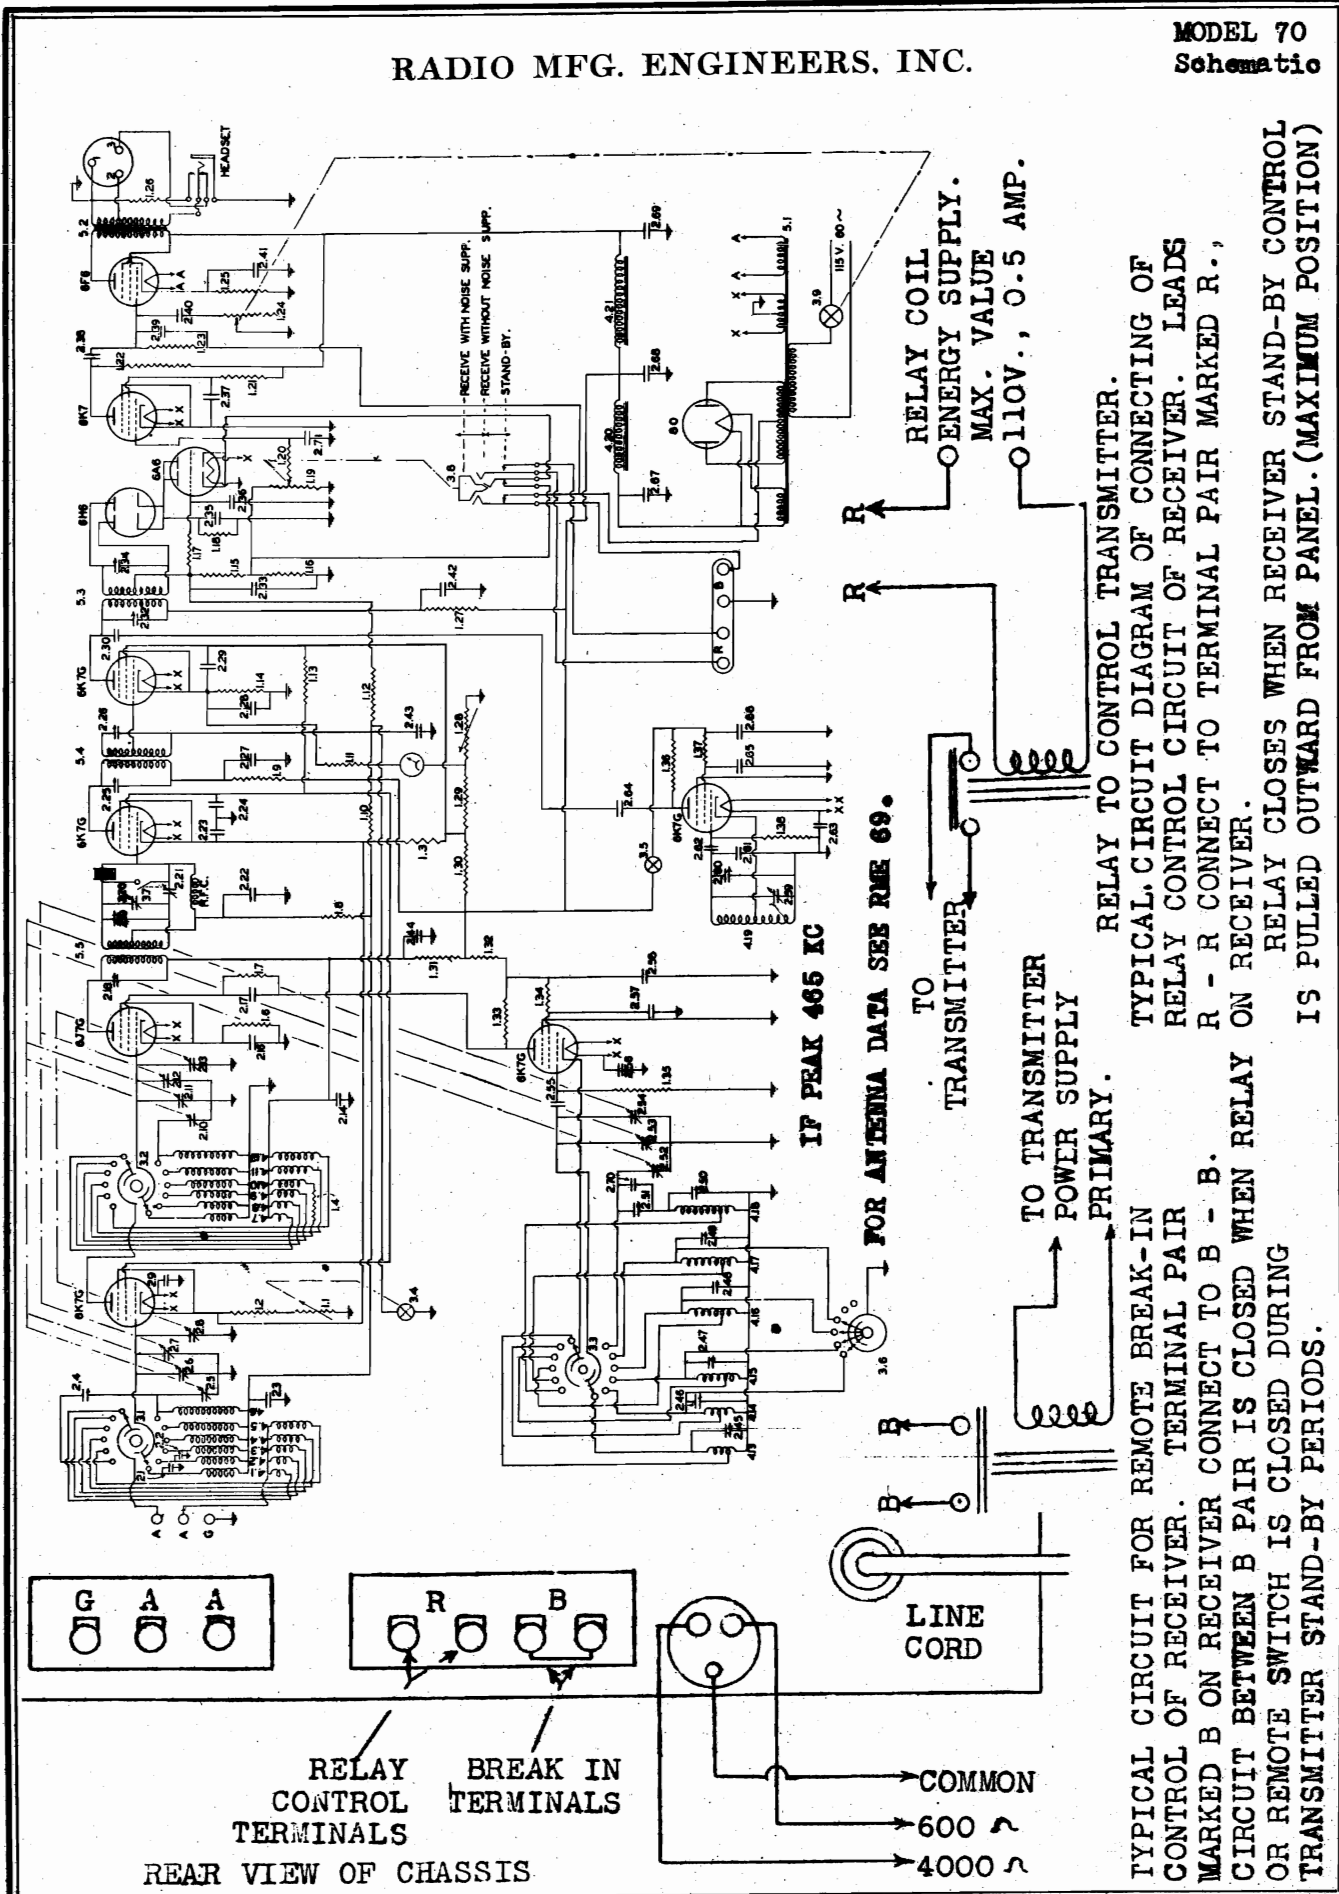

RELAY COIL
ENERGY SUPPLY.
MAX. VALUE
110V., 0.5 AMP.

FOR ANTENNA DATA SEE RME 69.



TO TRANSMITTER

TO TRANSMITTER
POWER SUPPLY
PRIMARY.

RELAY TO CONTROL TRANSMITTER.

TYPICAL CIRCUIT DIAGRAM OF CONNECTING OF
RELAY CONTROL CIRCUIT OF RECEIVER. LEADS
R - R CONNECT TO TERMINAL PAIR MARKED R.,
RELAY CLOSING WHEN RECEIVER STAND-BY CONTROL
IS PULLED OUTWARD FROM PANEL. (MAXIMUM POSITION)


TYPICAL CIRCUIT FOR REMOTE BREAK-IN
CONTROL OF RECEIVER. TERMINAL PAIR
MARKED B ON RECEIVER CONNECT TO B - B.
CIRCUIT BETWEEN B PAIR IS CLOSED DURING
OR REMOTE SWITCH IS CLOSED DURING
TRANSMITTER STAND-BY PERIODS.



RELAY CONTROL
TERMINALS

BREAK IN
TERMINALS

REAR VIEW OF CHASSIS

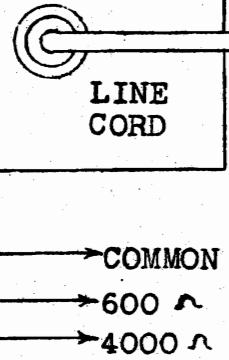

MODEL 70
Voltage
Parts

RADIO MFG. ENGINEERS, INC.

TEST VOLTAGES OBTAINED AT VARIOUS POINTS IN THE RECEIVER CIRCUIT
(Measurements made with voltmeter having internal resistance of
1,000 ohms per volt. Instruments with other internal resistances
give entirely different readings) Note: Line voltage should be 115v.

PLACE TEST PRODS BETWEEN
CORRECT VOLTAGE
(Switch marked Audio level and Standby in toward panel)

Radio frequency amplifier plate and Ground.	240 volts	0 volts
Radio frequency amplifier screen and Ground	100 volts	0 volts
Radio frequency amplifier cathode and Ground	3.2 volts	0 volts
First detector plates	240 volts	0 volts
First detector screen and Ground	75 volts	0 volts
First detector cathode and Ground	3.5 volts	0 volts
First intermediate frequency amplifier screen and Ground	100 volts	0 volts
First intermediate frequency amplifier plate and Ground	250 volts	0 volts
6K7 screen and Ground	115 volts	0 volts
6K7 screen and Ground	25 volts	0 volts
6F6 plate and Ground	244 volts	0 volts
6F6 screen and Ground	248 volts	0 volts
6F6 cathode and Ground	16 volts	0 volts
80 rectifier filament and Ground	258 volts	0 volts
Oscillator plate and Ground	248 volts	0 volts
Oscillator screen and Ground	115 volts	0 volts
Beat oscillator plate and Ground	180 volts	0 volts
Beat oscillator screen and Ground	100 volts	0 volts
The voltage across 1.32	14 volts	0 volts

These voltages are subject to a fluctuation of plus or minus 15% without indication of material difficulties.

RESISTORS

30,000 ohm variable	1.1
150 ohm 1/2 watt	1.2
20,000 ohm 1 watt	1.3
5,000 ohm 1/2 watt	1.4
5,000 ohm 1/2 watt	1.6
1 me.ohm 1/2 watt	1.7
250,000 ohm 1/2 watt	1.8
2,000 ohm 1/2 watt	1.9
100,000 ohm 1/2 watt	1.10
35 ohm 1/2 watt	1.11
1 me.ohm 1/2 watt	1.12
5,000 ohm 1/2 watt	1.13
150 ohm 1/2 watt	1.14
50,000 ohm 1/2 watt	1.15
50,000 ohm 1/2 watt	1.16
1 me.ohm 1/2 watt	1.17
100,000 ohm 1/2 watt	1.18
250,000 ohm volume control	1.19
50,000 ohm 1/2 watt	1.20
1 me.ohm 1/2 watt	1.21
100,000 ohm 1/2 watt	1.22
250,000 ohm 1/2 watt	1.23
1 me.ohm potentiometer	1.24
410 ohm section of bleeder	1.25
5,000 ohm 1/2 watt	1.26
2,000 ohm 1/2 watt	1.27
200 ohm 1 meter pot.	1.28
7,200 ohm bleeder	1.29
6,800 ohm bleeder	1.30
2,000 ohm 1/2 watt	1.31
2,000 ohm 1/2 watt	1.32
2,000 ohm 1/2 watt	1.33
50,000 ohm 1/2 watt	1.34
50,000 ohm 1/2 watt	1.35
10,000 ohm 1/2 watt	1.36
100,000 ohm 1/2 watt	1.37
100,000 ohm 1/2 watt	1.38

CONDENSERS


30 µfd Adj.	2.1
30 µfd Adj.	2.2
.01 µfd 400 volt	2.3
30 µfd Adj.	2.4
Tuning condenser	2.5
Tuning condenser	2.6
Bandspread condenser	2.7
Resonator	2.8
.002 Mica	2.9
.0025 Mica	2.10
Tuning condenser	2.11
Tuning condenser	2.12
Bandspread condenser	2.13
Resonator	2.14
.01 400 volt	2.16

CONDENSERS CONT.

.01 400 volt	2.17
1.5F. Trimmer	2.18
1.5F. Trimmer	2.19
25 µfd variable	2.20
.01 400 volt	2.21
.01 400 volt	2.22
.01 400 volt	2.23
.01 400 volt	2.24
1.5F. Trimmer	2.25
1.5F. Trimmer	2.26
.01 400 volt	2.27
.01 400 volt	2.28
.01 400 volt	2.29
1" of shielded braid--Capacitay approximately 10 µfd.	2.30
1.5F. Trimmer	2.32
.00005 Mica	2.33
1.5F. Trimmer	2.34
.00005 Mica	2.35
.01 400 volt	2.36
.01 400 volt	2.37
.01 600 volt	2.38
.00025 Mica	2.39
.01 400 volt	2.40
40 µfd 25. electrolytic	2.41
.01 400 volt	2.42
.01 400 volt	2.43
.01 400 volt	2.44
30 µfd Adj.	2.45
70 µfd Adj.	2.46
30 µfd Adj.	2.47
30 µfd Adj.	2.48
30 µfd Adj.	2.49
30 µfd Adj.	2.50
.0004 Mica	2.51
Tuning condenser	2.52
Tuning condenser	2.53
Bandspread condenser	2.54
.0001 Mica 5% Tol.	2.55
.0004 Mica	2.56
.01 400 volt	2.57
.01 400 volt	2.58
25 µfd variable	2.59
50 µfd Adj.	2.60
.00025 Mica	2.61
.0001 Mica	2.62
.01 400 volt	2.63
.00025 Mica	2.64
.01 400 volt	2.65
.01 400 volt	2.66
10 µfd 450 V. Elec.	2.67
15 µfd 450 V. Elec.	2.68
15 µfd 450 V. Elec.	2.69
70 µfd Adj.	2.70
.00025 Mica	2.71

REMLER COMPANY, LTD.

MODEL 462
Schematic

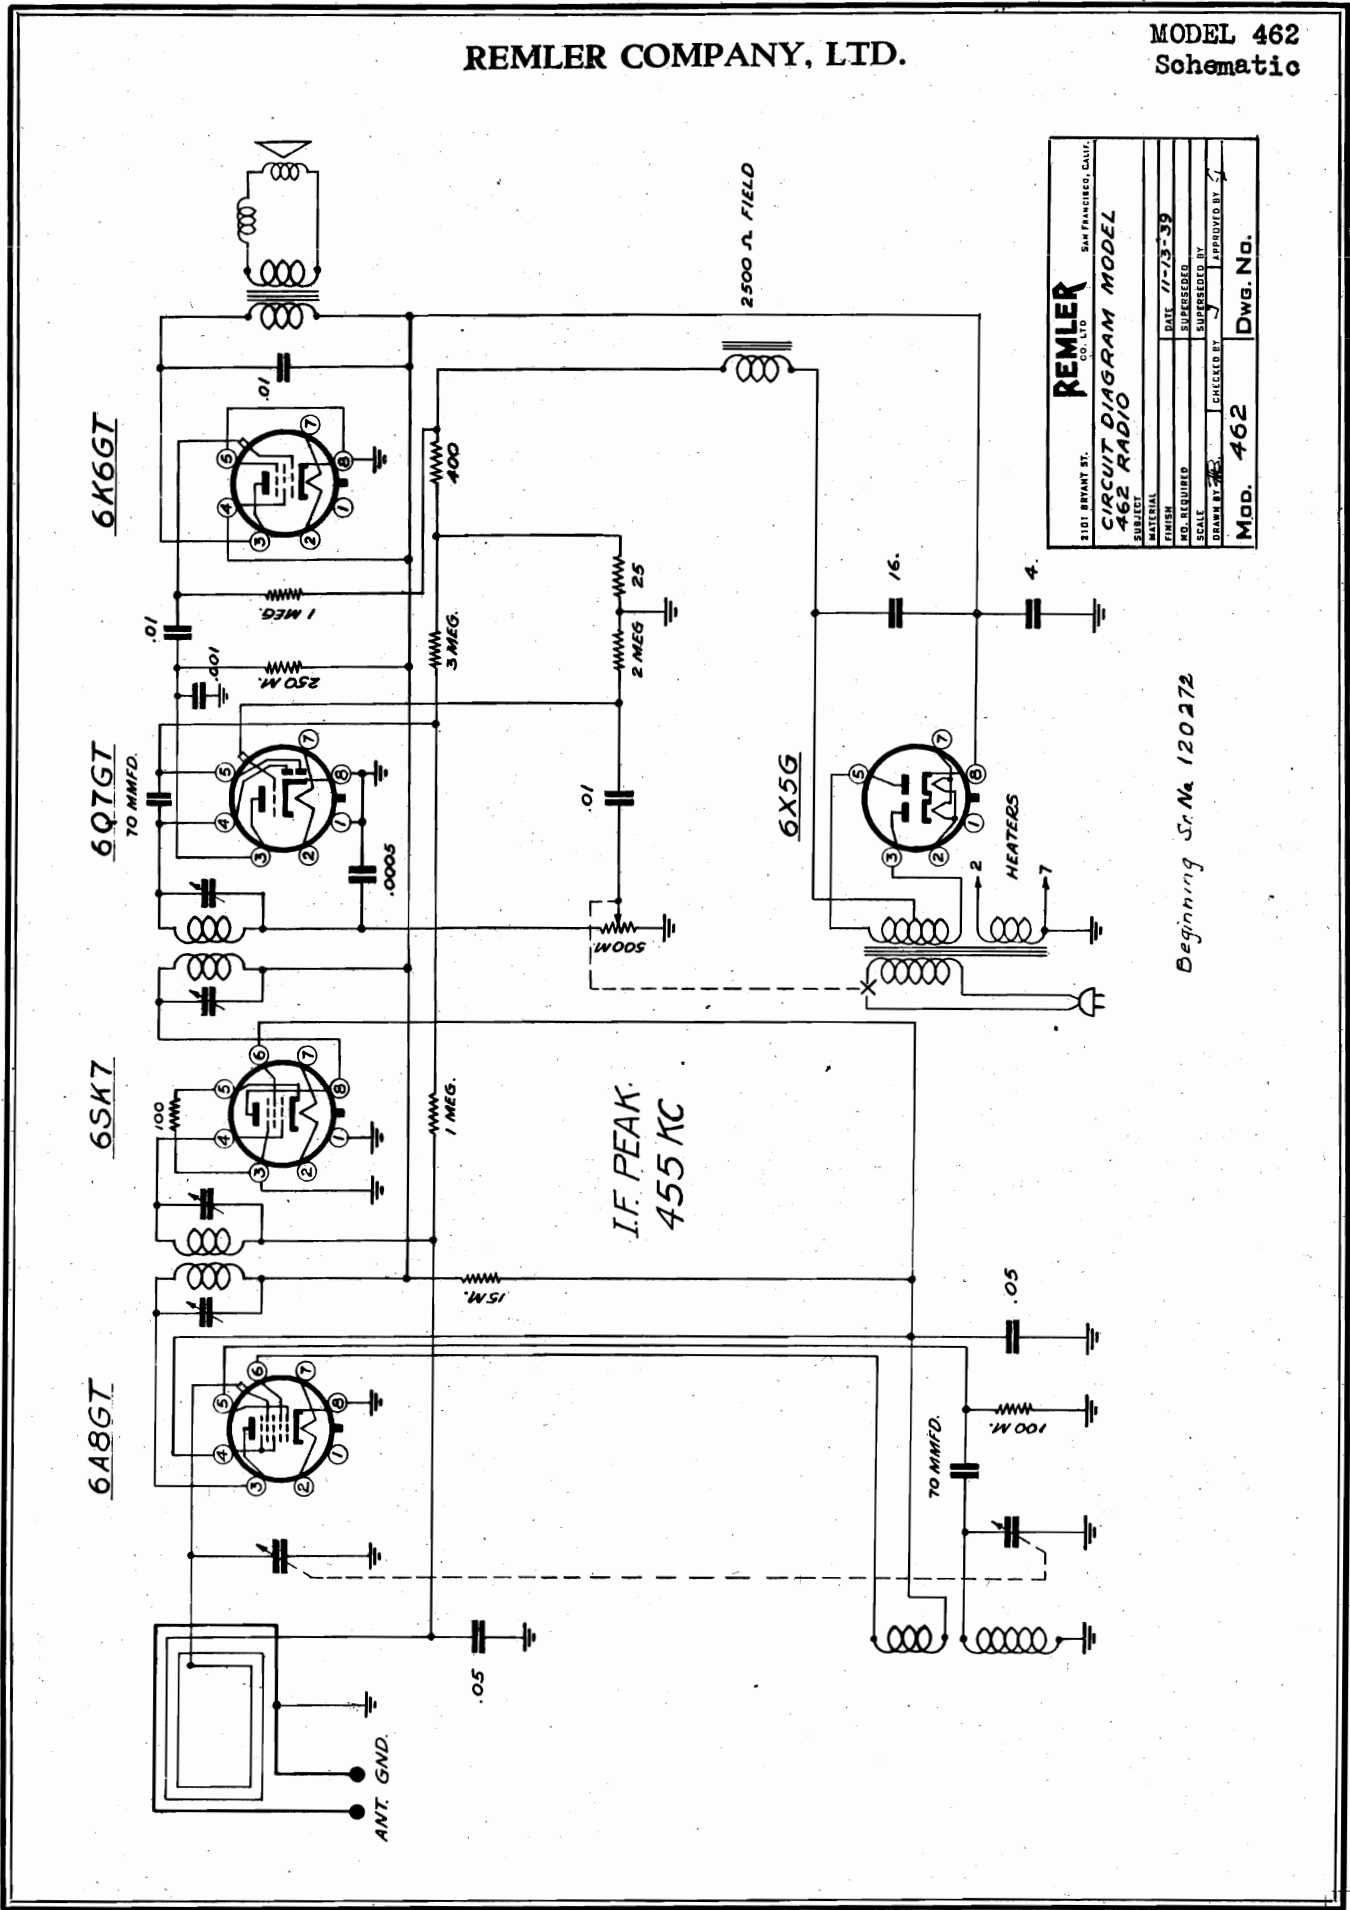


REMLER CO. LTD. SAN FRANCISCO, CALIF.	
CIRCUIT DIAGRAM MODEL 462 RADIO	
SUBJECT	
DATE	11-13-39
DESIGNED BY	
CHECKED BY	
APPROVED BY	
MOD. No.	462
DWG. No.	

Beginning Sr. No. 120272

MODELS 5710, 5711, Ch. 107.450

5710A, 5711A, Ch. 107.450-2

SEARS, ROEBUCK & CO. Schematic, Voltage, Coils

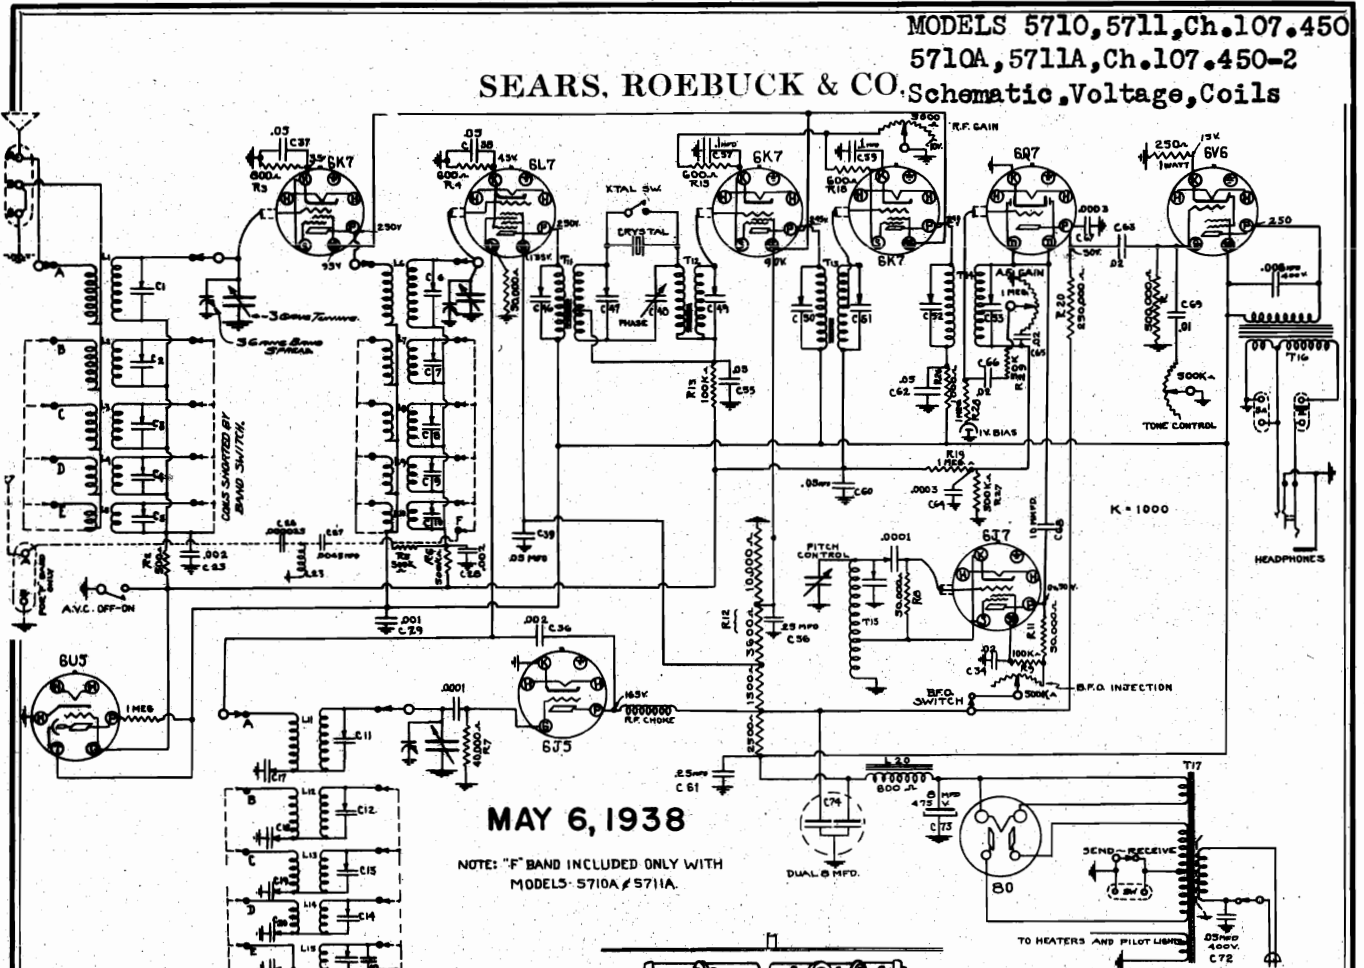

MAY 6, 1938

NOTE: "F" BAND INCLUDED ONLY WITH MODELS 5710A & 5711A.

I.F. = 465 KC.

MODELS - 5710-11	5710A-11A	See Novel 1
DATE - 5-9-37	LIC. # 1231	
DESIGNED -	2400-110-B 29-7/5	

VACUUM SOCKETS ARE VIEWED FROM REAR-SIDE OF CHASSIS. VOLTAGE READINGS AT DESIGNATED SOCKET POINTS ARE TO BE TAKEN WITH A C. LINE OF 117 VOLTS, AND WITH R.F. GAIN CONTROL FULL ON, NO SIGNAL IN ANTENNA.

POWER SUPPLY:
 105 - 120 Volts, 60 Cycle A.C. - 95 Watts
 105 - 135 Volts, 25 Cycle A.C. - 95 Watts

LOUD SPEAKER:
 Type Permanent Magnet Dynamic
 Size Within Separate Case - 8 Inch

POWER OUTPUT:
 Type Single Output
 Undistorted 4 Watts
 Maximum 5 Watts

TUBES AND FUNCTIONS:

- | | |
|----------------------------|--|
| 6K7 1st RF | 6Q7G Second Detector, 1st AF |
| 6L7 Translator | 6V6 Single Output |
| 6J7G Oscillator | 80 Rectifier |
| 6K7 IF Amplifier | 6J7G Beat Frequency Oscillator |
| 6K7 IF Amplifier | 6U5 Tuning Eye |


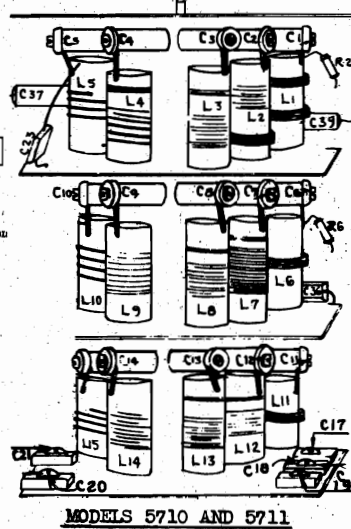


FIG. 2.


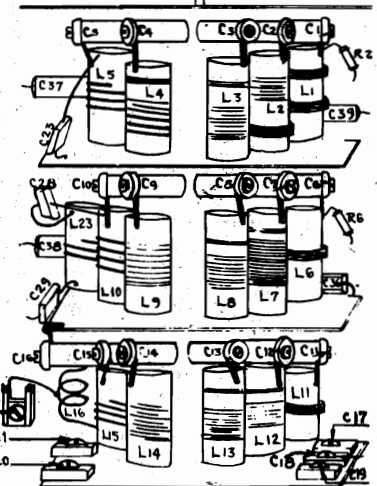


MODELS 5710A AND 5711A

FIG. 3.

Recommended Antenna Equipment:


- Cat. #5567 The Doublet System.
- Cat. #5510 Conventional System.
- Cat. #5575 Conventional System.
- Cat. #5512 Conventional System.

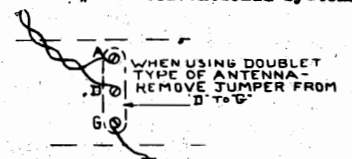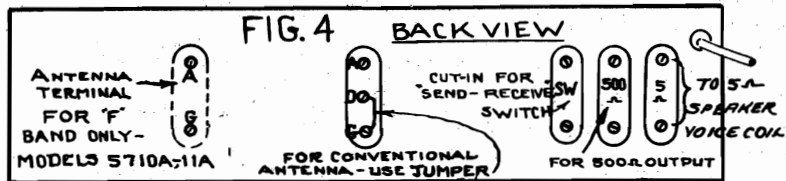


MODEL 5710, 5711, 5710A
5711A

SEARS, ROEBUCK & CO.


Alignment, Trimmers
Socket

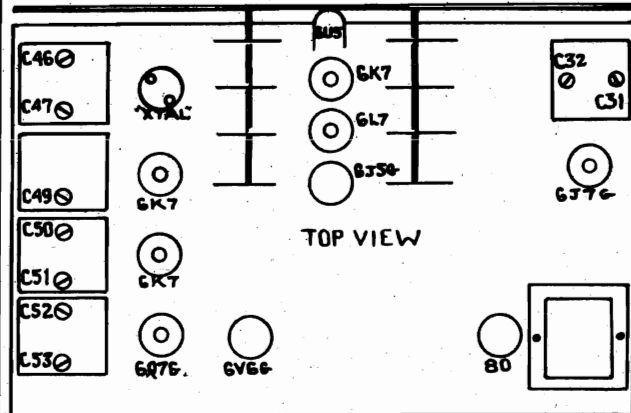

COLOR CODE
OF POWER
TRANS. LEADS

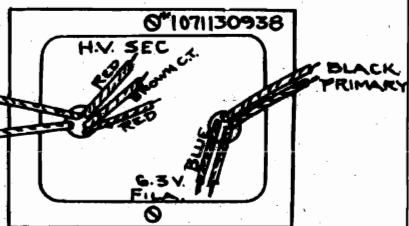

COLOR CODE
OF OUTPUT TRANS. LEADS

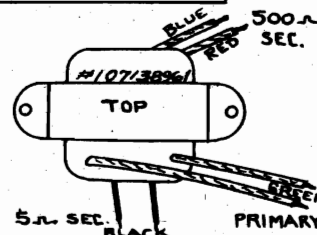

PRELIMINARY:

FIG. 1

Output meter connection.....4,000 ohm or more copper oxide meter across 5 ohm terminals.
Shunt with speaker

Output meter reading to indicate .5 watt.....See chart below

Average sensitivity in microvolts for .5 watt output.....See chart below

Generator ground lead connection. ..Direct to chassis Generator modulation....30%, 400 cycles Position of volume control A.F. gain...Full on R.F. gain....Full on A.V.C. Switch...On Band spread dial set at 100...Min. Capacity

NOTE 1; When aligning the I.F. channel a condenser of .05 MFD. may be used in series with the generator lead.

NOTE 2; When aligning the broadcast band, a 250 MFD. condenser may be used in series with the signal generator.

NOTE 3; When aligning the short wave bands a 400 ohm resistor may be used in series with the signal generator.

POSITION OF VARIABLE AND BAND SW.	GENERATOR FREQ.	GENERATOR CONNECTION	TRIMMER LOCATION	TRIGGER ADJUSTMENTS IN ORDER	TRIMMER FUNCTION	APPROX. MICROVOLTS
Closed "A" Band	465 KC	6L7 Grid	SEE FIG.1	C53, 52, 51 50, 49, 47, 46	I.F.	15
60 MC "F" 40 MC "F"	60 MC 40 MC	A-G Ant. Term. A-G Ant. Term.	MODELS 5710A-11A SEE FIG.3	C16 C22	Osc. Padder	Approx. .10 Approx. 10
36 MC "E" 16 MC "E"	36 MC 16	A-D-G Ant. Term. A-D-G Ant. Term.	SEE FIG.2or3	C15, 10, 5 C21	Osc. Trans. Ant. Padder	Approx. 3 Approx. 3
15 MC "D" 7 MC "D"	15 MC 7 MC	A-D-G Ant. Term. A-D-G Ant. Term.	SEE FIG.2or3	C14, 9, 4 C20	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1
6 MC "C" 3 MC "C"	6 MC 3 MC	A-D-G Ant. Term. A-D-G Ant. Term.	SEE FIG.2or3	C13, 8, 3 C19	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1
2.6MC "B" 1.3MC "B"	2.6 1.3	A-D-G Ant. Term. A-D-G Ant. Term.	SEE FIG.2or3	C12, 7, 2 C18	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1
1.2MC "A" .6 MC "A"	1200 KC 600 KC	A-D-G Ant. Term. A-D-G Ant. Term.	SEE FIG.2or3	C11, 6, 1 C17	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1

NOTE: 4 When using a CRYSTAL, set PHASING CONTROL to almost minimum capacity. See special alignment instructions below for Crystal.


ALIGNMENT INSTRUCTIONS - FOR RECEIVERS EQUIPPED WITH CRYSTALS

- (1) REMOVE CRYSTAL, set crystal phasing condenser to almost minimum capacity and throw "XTAL" switch to "in" position.
- (2) With the 465 KC signal, re-adjust the I.F. Trimmer C-46 - the one nearest the front panel of the receiver - by turning the screw counter-clockwise. The signal now may be slightly weaker than before and sound "off-side". This, however, is a normal condition.
- (3) REPLACE THE CRYSTAL - A very noticeable drop in signal strength may be noted, due to the filtering action of the crystal, and the frequency control of the signal generator must be "rocked" slowly back and forth, until the increase in signal strength indicates the exact frequency of the crystal being used. Now re-align the entire I.F. system to this frequency.
- (4) Adjust "XTAL" phasing condenser for the lowest pitched note possible and re-adjust signal generator frequency. Repeat and continue to repeat this alignment procedure until no further improvement in the alignment can be accomplished.

NOTE: If the "XTAL" switch should now be thrown to another position, an apparent rise in gain will be noticed, which is caused by the addition of higher frequencies and background noise, so it does not mean that the sensitivity of this set is impaired in any way by use of the crystal.

NOTE: 5 THE BEAT FREQUENCY OSCILLATOR is adjusted for the A, B, C, D, Bands with Trimmer C31 and C32. Set pitch control to half capacity. Recheck C31.

MODELS 5727, 5728, Ch. 107, A450
SEARS, ROEBUCK & CO 5750, Chassis 107, A450-S4
Schematic, Voltage

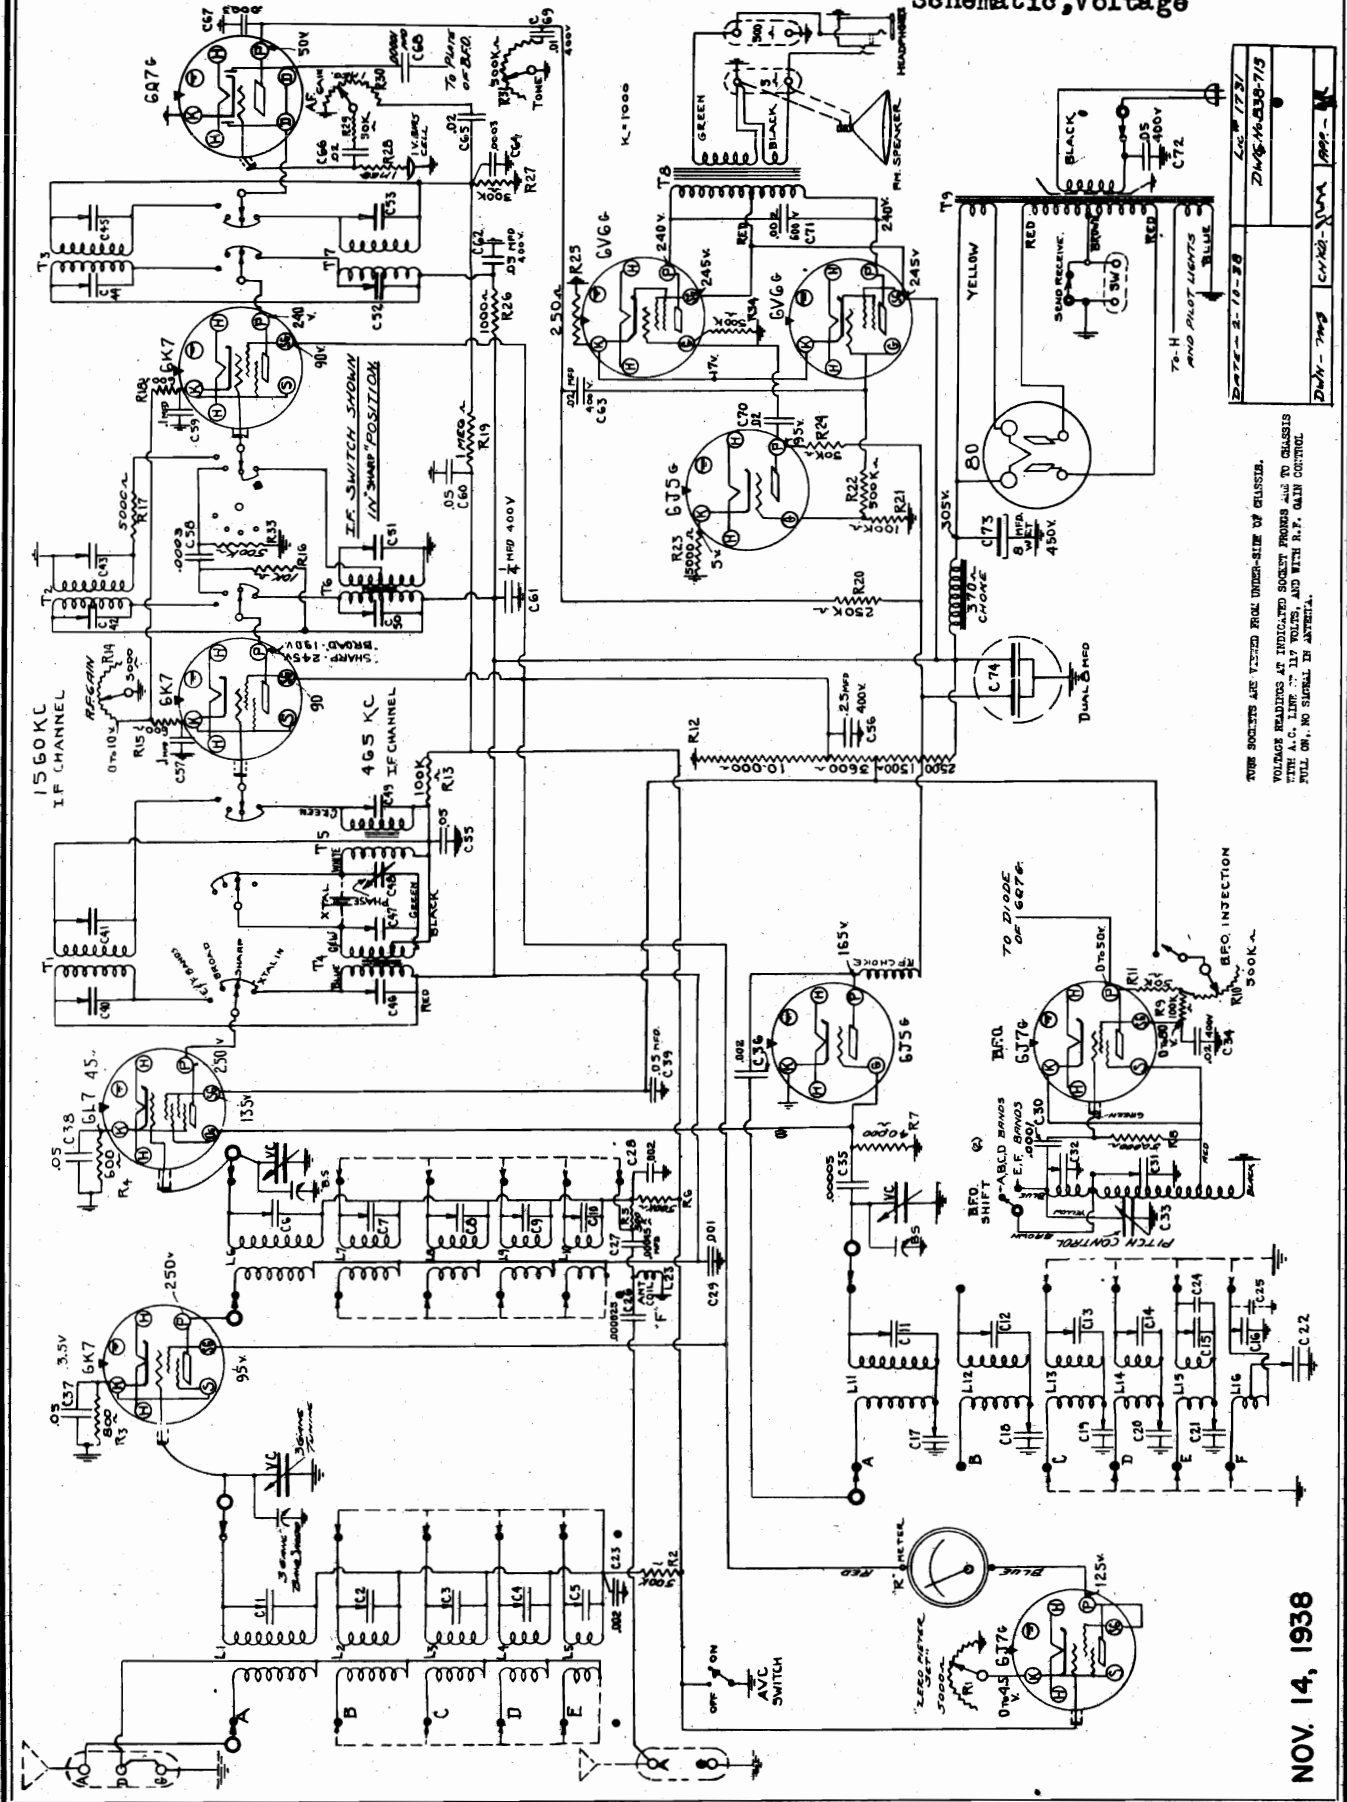

Loc. 1731	270-16-250-713
270-2-10-30	
270-2-10-30	
270-2-10-30	



TUBE SOCKETS ARE VENTED FROM UNDER-SIDE OF GLASS.
VOLTAGE READINGS AT INDICATED SOCKET POINTS ARE TO CHASSIS
WITH A.C. LINE AT 117 VOLTS, AND WITH R.F. GAIN CONTROL
FULL ON, NO SIGNAL IN ANTENNA.

NOV. 14, 1938

MODELS 5727, 5728, 5750

Socket, Trimmers
Chassis Wiring

SEARS, ROEBUCK & CO.

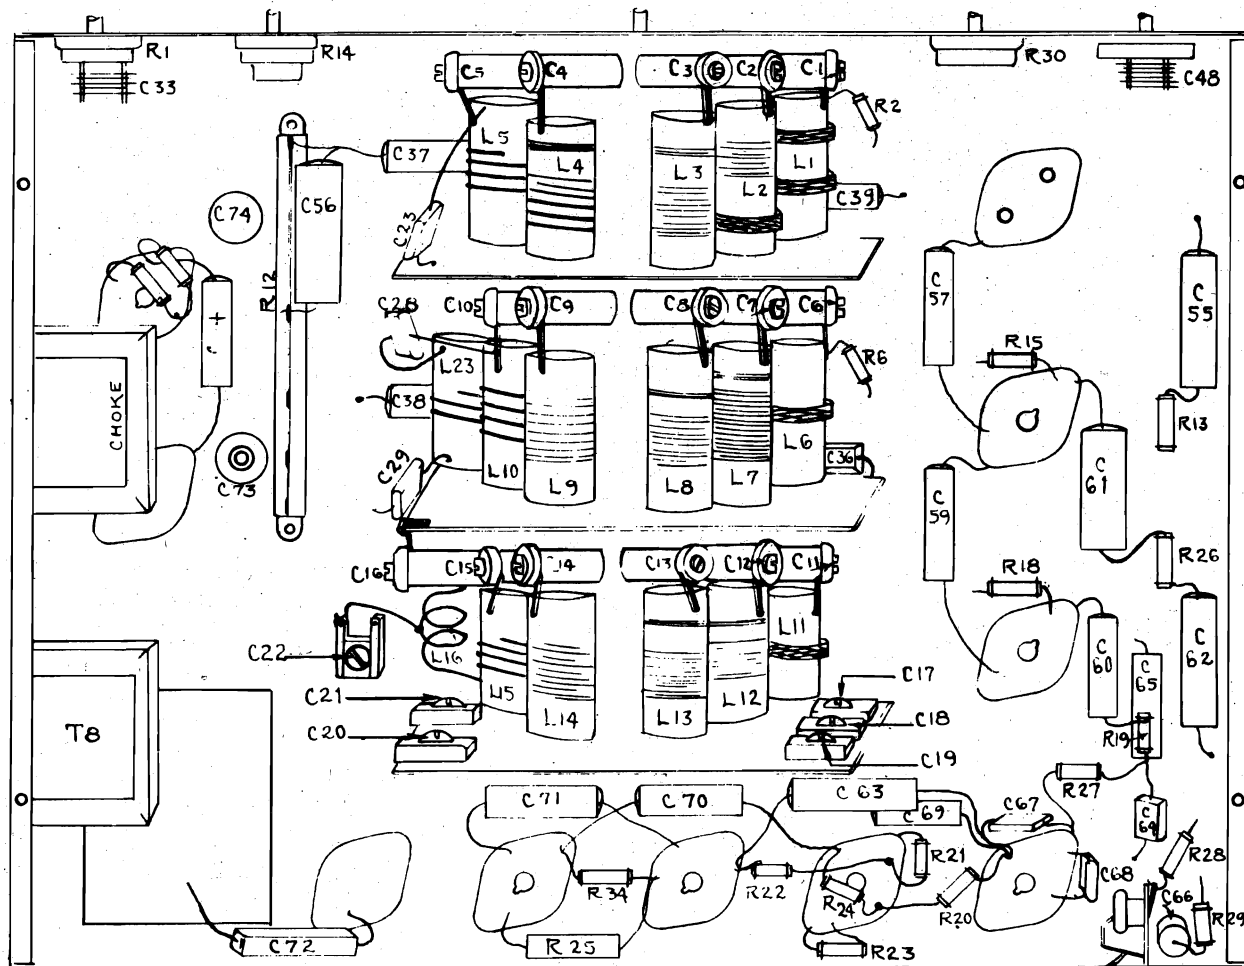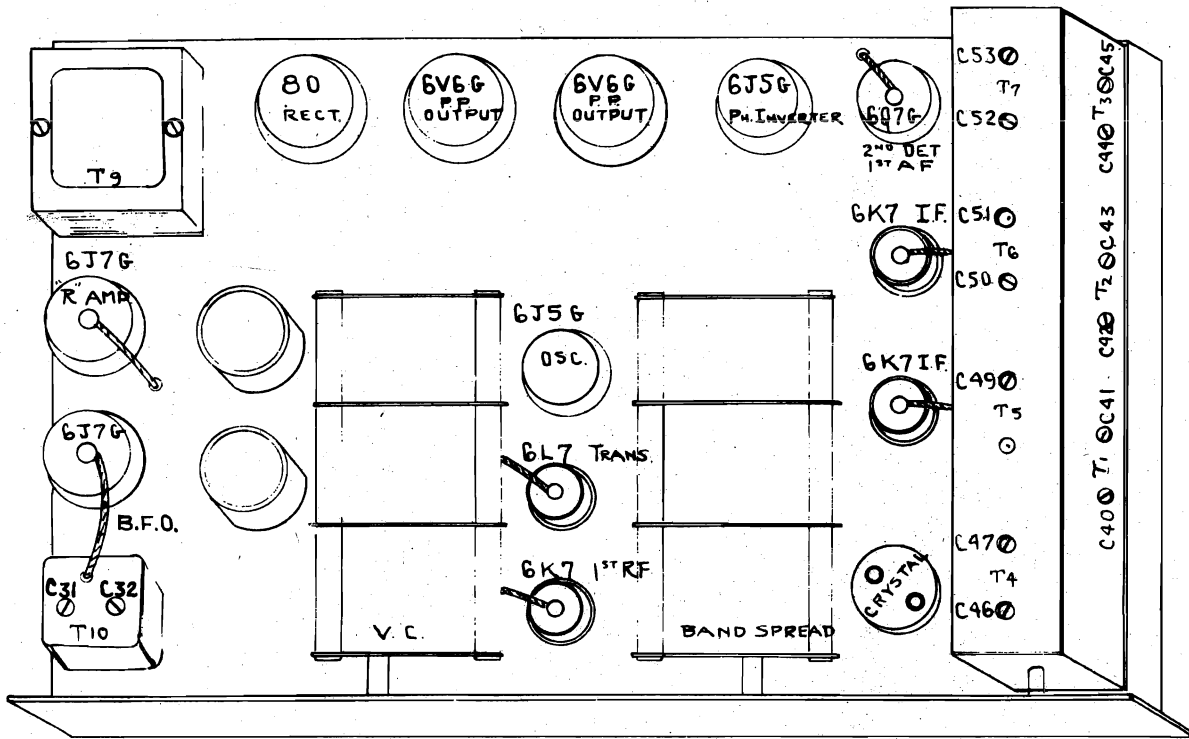

SEARS, ROEBUCK & CO.

MODELS 5727, 5728, 5750
Changes, Transformers
Specifications

SUBJECT: MECHANICAL CHANGES WITH DIAL MECHANISM ON MODELS 5727, 5728 TO ACCOMPLISH A HORIZONTAL TYPE DIAL MOUNTED IN A NEW CABINET, FINISHED GREY. THIS IS KNOWN AS MODEL 5750, FACTORY IDENTIFICATION NUMBER 107.A450-84.

TUBES AND FUNCTIONS:

6K7	1st RF
6L7	Translator
6J5G	Oscillator
6K7	IF Amplifier
6Q7G	Second Detector, 1st AF
6K7	IF Amplifier
6J5G	Phase inverter
6V6G	P. P. Output
6V6G	P. P. Output
80	Rectifier
6J7G	"R" Meter Voltage Amplifier
6J7G	Beat Frequency Oscillator

OPERATING FEATURES:

- A.V.C. with ON-OFF Switch
- Three Gang Electrical Band Spread
- A.F. Gain or Audio Level
- R.F. Gain or Sensitivity
- Tone Control
- "R" Meter Showing Signal Strength
- "R" Meter Zero Adjustment
- Four-position IF Setting:
 - Iron Core Broad 1560 KC
 - Iron Core Sharp 465 KC
 - Crystal Filter-In Position

POWER SUPPLY:

- 105 - 120 Volts, 60 Cycle A.C. - 125 Watts
- 105 - 135 Volts, 25 Cycle A.C. - 125 Watts

FREQUENCY RANGE - 6 BANDS:

Band A55 to 1.2 MC
Band B	1.2 to 2.8 MC
Band C	2.8 to 6.5 MC
Band D	6.5 to 16 MC
Band E	16 to 40 MC
Band F	32 to 65 MC

INTERMEDIATE FREQUENCY = BANDS A, B, C, & D - 465 KC

POWER OUTPUT:

- Type Push Pull Output
- Undistorted 9 Watts
- Maximum 15 Watts


LOUD SPEAKER:

- Type Permanent Magnet Dynamic
- Size Within Separate Case 10 Inch


CHASSIS FEATURES:

- SEND-RECEIVE terminals in rear of chassis for break-in connection.
- RF Stages One
- VARIABLE CONDENSER Three Gang
- ANTENNAE TWO REQUIRED
- HEADPHONE JACK ON FRONT PANEL
- Crystal Phaser.
- Beat Frequency Oscillator, Pitch Control.
- B.F.O. OFF-ON Switch with Injection Control.


COLOR CODE AND LEAD POSITION

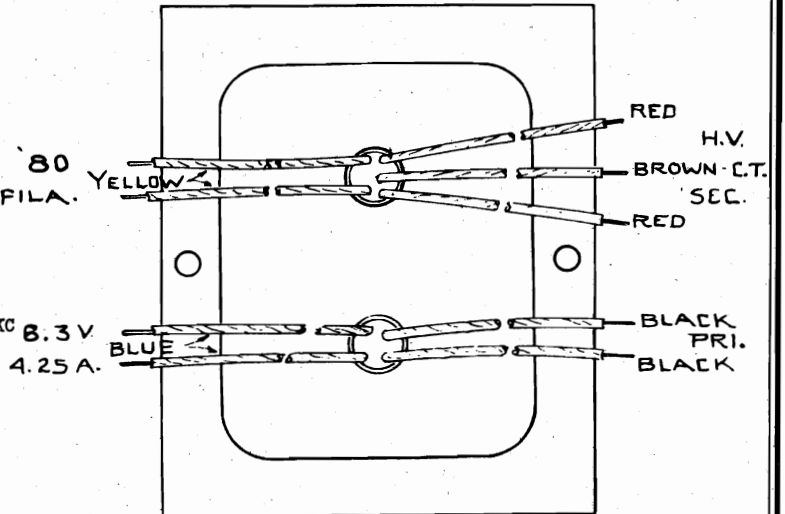

POWER TRANS. 1071046938

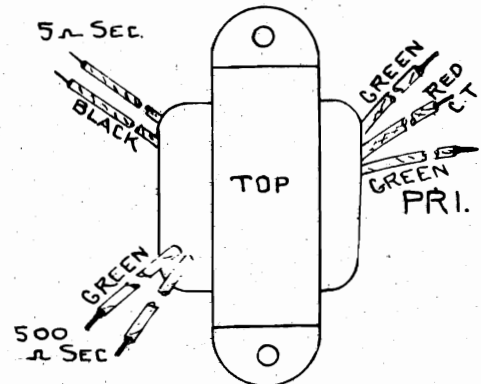


OUTPUT TRANS. 107139961

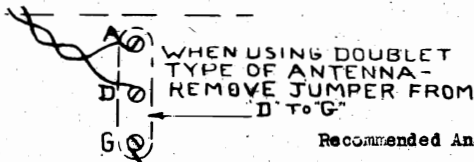

Recommended Antenna Equipment:

- Catalog # 5567 the Doublet System.
- Catalog # 5510 Conventional System.
- Catalog # 5575 Conventional System.
- Catalog # 5512 Conventional System.

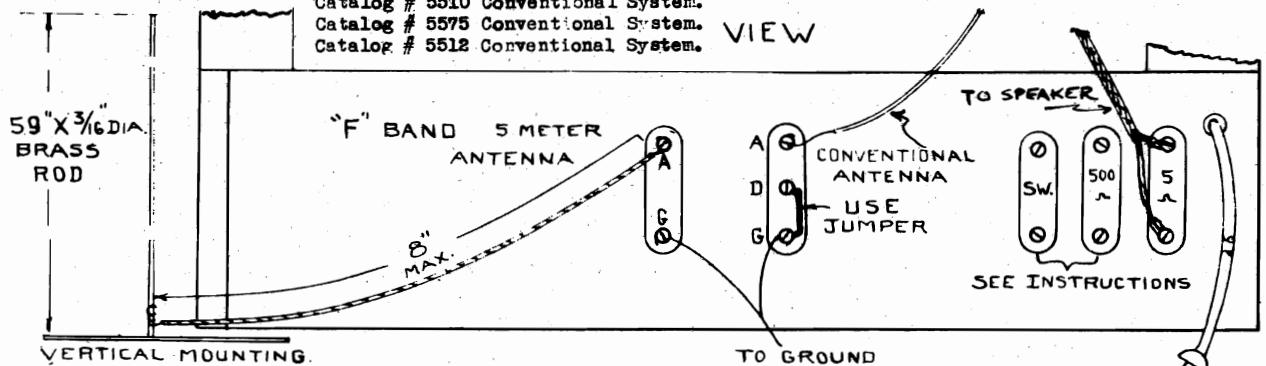

MODELS 5727, 5728, 5750

SEARS, ROEBUCK & CO.

Alignment

This receiver is a 12 tube 6 Band set designed especially for use on the short wave bands. The set was not designed for ordinary broadcast reception although it will cover this band.

This Amateur receiver employs many features as outlined above. Attention must be noted to the Dual I.F. system, the use of the 1560 KC I.F. for use on the "E" and "F" Bands to obtain a higher image response and prevent "garbling" of frequency modulated signals on 5 meters. The 1560 KC I.F. assemblies are designed to give a broad band pass flat top response characteristic.

Note that two antenna systems must be used, one for the "E & F" Bands and one for the "A" "B" "C" & "D" Bands.

PRELIMINARY:

Output meter connection.....4,000 ohm or more copper oxide meter across 5 ohm terminals. Shunt with speaker

Output meter reading to indicate .5 watt.....1.575 V.

Average sensitivity in microvolts for .5 watt output.....See chart below

Generator ground lead connection.....Direct to chassis

Position of volume control R.F. gain.....Full on


Generator modulation.....30%, 400 cycles

A.V.C. Switch.....On

Position of volume control A.F. gain.....Full on

Band spread dial set at 100.....Min. Capacity

NOTE 1 When aligning the two I.F. channels a condenser of .05 Mfd. may be used in series with the generator lead. For the other bands the following circuit is shown with the values that make a universal dummy antenna system for all bands.

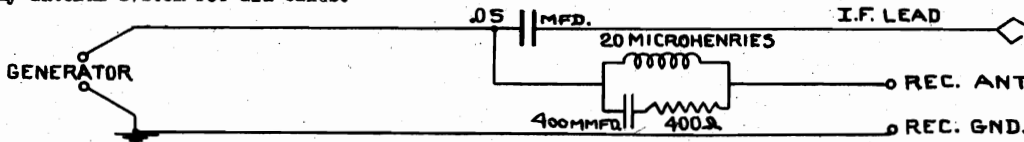

POSITION OF VARIABLE AND BAND SW.	GENERATOR FREQ.	GENERATOR CONNECTION	POSITION OF I.F. BAND SWITCH	TRIMMER ADJUSTMENTS IN ORDER	TRIMMER FUNCTION	APPRGX. MICROVOLTS
Closed "A" Band	465 KC	6L7 Grid	"XTAL" See Note 2	C53, 52, 51 50, 49, 47, 46	I.F.	15
Closed "A" Band	1560 KC	6L7 Grid	"E" & "F"	C45, 44, 43 42, 41, 40	I.F.	15
60 MC "F" 40 MC "F"	60 MC 40 MC	A-G Ant. Term. A-G Ant. Term.	"E" & "F" "E" & "F"	C16 C22	Osc. Padder	Approx. 10 Approx. 10
36 MC "E" 16 MC "E"	36 MC 16	A-D-G Ant. Term. A-D-G Ant. Term.	"E" & "F" "E" & "F"	C15, 10, 5 C21	Osc. Trans. Ant. Padder	Approx. 3 Approx. 3
15 MC "D" 7 MC "D"	15 MC 7 MC	A-D-G Ant. Term. A-D-G Ant. Term.	XTAL or "Sharp" XTAL or "Sharp"	C14, 9, 4 C20	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1
6 MC "C" 3 MC "C"	6 MC 3 MC	A-D-G Ant. Term. A-D-G Ant. Term.	XTAL or "Sharp" XTAL or "Sharp"	C13, 8, 3 C19	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1
2.6MC "B" 1.3MC "B"	2.6 1.3	A-D-G Ant. Term. A-D-G Ant. Term.	XTAL or "Sharp" XTAL or "Sharp"	C12, 7, 2 C18	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1
1.2MC "A" .6 MC "A"	1200 KC 600 KC	A-D-G Ant. Term. A-D-G Ant. Term.	XTAL or "Sharp" XTAL or "Sharp"	C11, 6, 1 C17	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1

NOTE 2: When using a CRYSTAL, set PHASING CONTROL to almost minimum capacity. See special alignment instructions below for Crystal. Align set in "sharp" position if set is without crystal.

ALIGNMENT INSTRUCTIONS - FOR RECEIVERS EQUIPPED WITH CRYSTALS


- (A) REMOVE CRYSTAL, set crystal phasing condenser to almost minimum capacity and throw IF switch to "XTAL" position.
- (B) With the 465 KC signal, re-adjust the I.P. Trimmer C-46 - the one nearest the front panel of the receiver - by turning the screw counter-clockwise. The signal now may be slightly weaker than before and sound "off-side". This, however, is a normal condition.
- (C) REPLACE THE CRYSTAL - A very noticeable drop in signal strength may be noted, due to the filtering action of the crystal, and the frequency control of the signal generator must be "rocked" slowly back and forth, until the increase in signal strength indicates the exact frequency of the crystal being used. Now re-align the entire I.F. system to this frequency.
- (D) Adjust "XTAL" phasing condenser for the lowest pitched note possible and re-adjust signal generator frequency. Repeat and continue to repeat this alignment procedure until no further improvement in the alignment can be accomplished.

NOTE: If the IF switch should now be thrown to another position, an apparent rise in gain will be noticed, which is caused by the addition of higher frequencies and background noise, so it does not mean that the sensitivity of this set is impaired in any way by use of the crystal.

NOTE 3: THE BEAT FREQUENCY OSCILLATOR is adjusted for the A, B, C, D, Bands with Trimmer C31. With models having an "E" & "F" Band B.F.O.—Adjust C32 with dial at 1560 on Band D to 1560 KC. Recheck C31. Set pitch control to half capacity.

SEARS, ROEBUCK & CO.

MODELS 5752, 5753
Chassis 107.440-S1
Schematic, Voltage

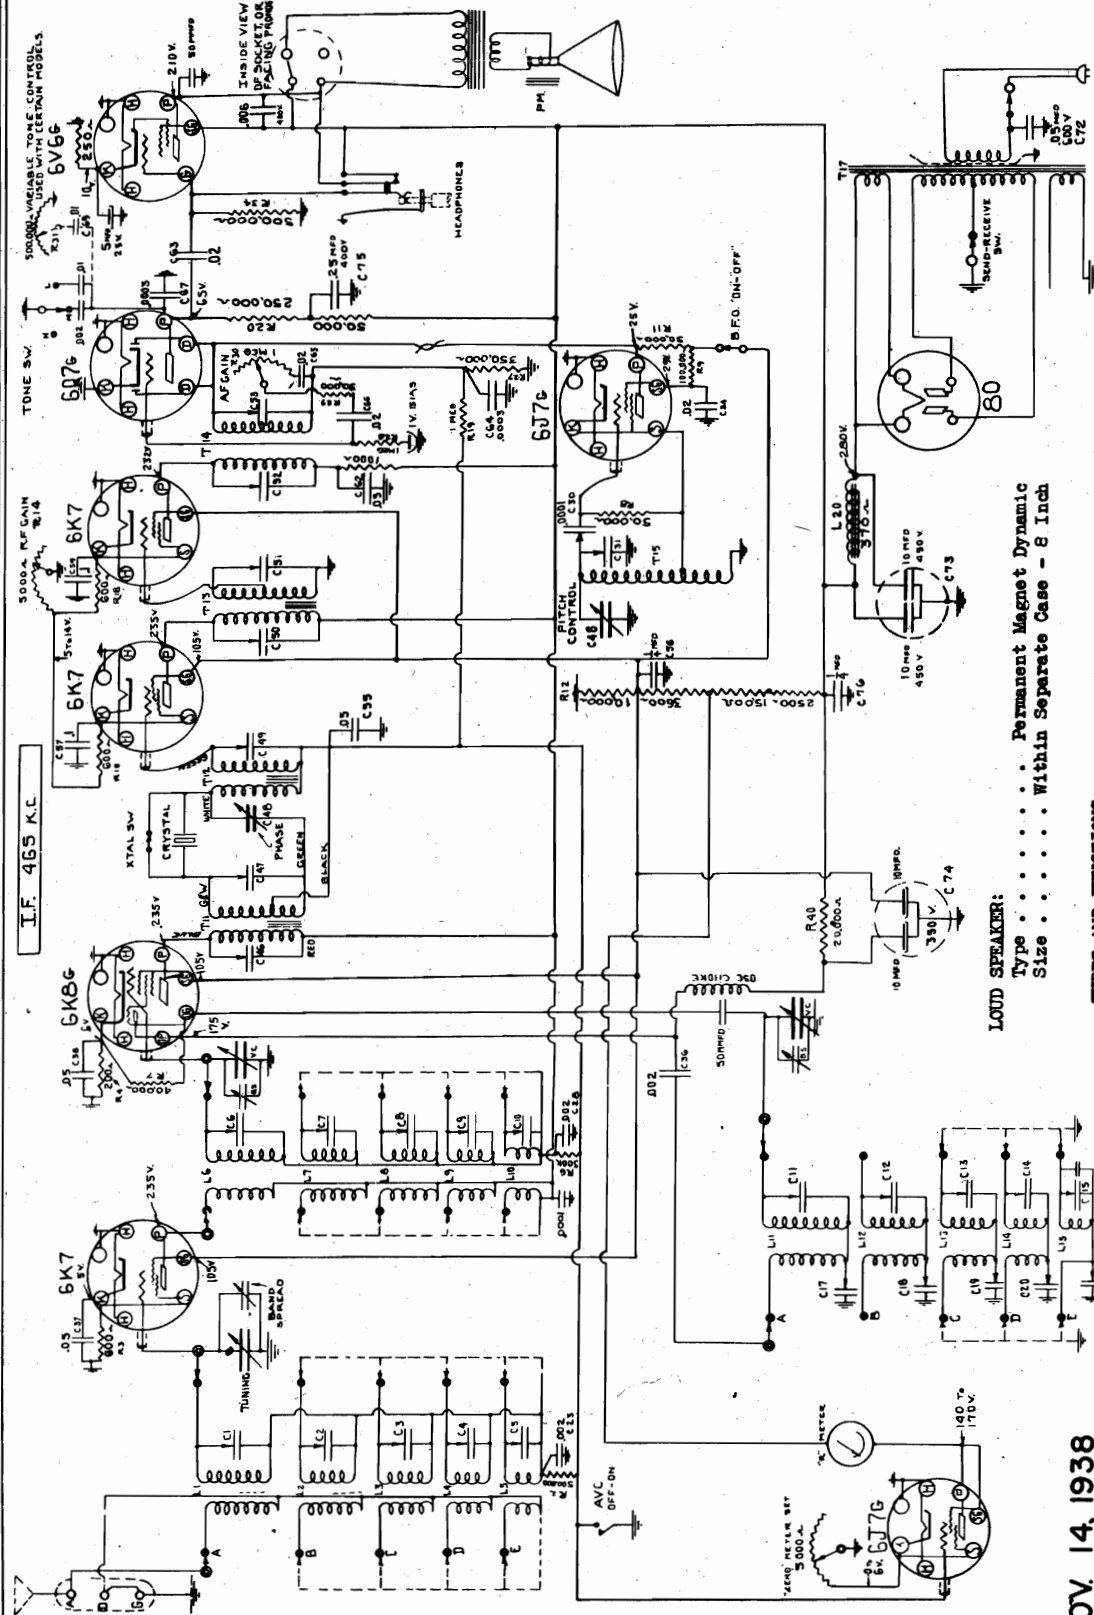

VOLTAGES AS SHOWN TAKEN FROM GROUND WITH:
- LINE VOLTAGE - 118 V.A.C.
- GATE CONTROL ON.
- TUNING COND. FULL CAPACITY

5-7-3-36	2nd Ed. 8-29-75
REVISED	REVISED
BY	BY
7-1-4	7-1-4

LOUD SPEAKER:
Type Permanent Magnet Dynamic
Size Within Separate Case - 8 Inch

TUBES AND FUNCTIONS:
6K7.....1st RF
6K8G.....Translator
6K7.....IF Amplifier
6B7G.....IF Amplifier
6Y6.....Second Detector, 1st AF
6Y6G.....Single Output
80.....Rectifier
6J7G.....Beat Frequency Oscillator
6J7G.....V.T.V.M. for "R" Meter



NOV 14, 1938

POWER SUPPLY:
105 - 120 Volts, 60 Cycle A.C. 85 Watts
105-135 Volts, 25 Cycle A.C. - 85 Watts

POWER OUTPUT:
Type Single Output
Undistorted 4 Watts
Maximum 5 Watts

MODELS 5752, 5753
 Socket, Trimmers
 Chassis

SEARS, ROEBUCK & CO.

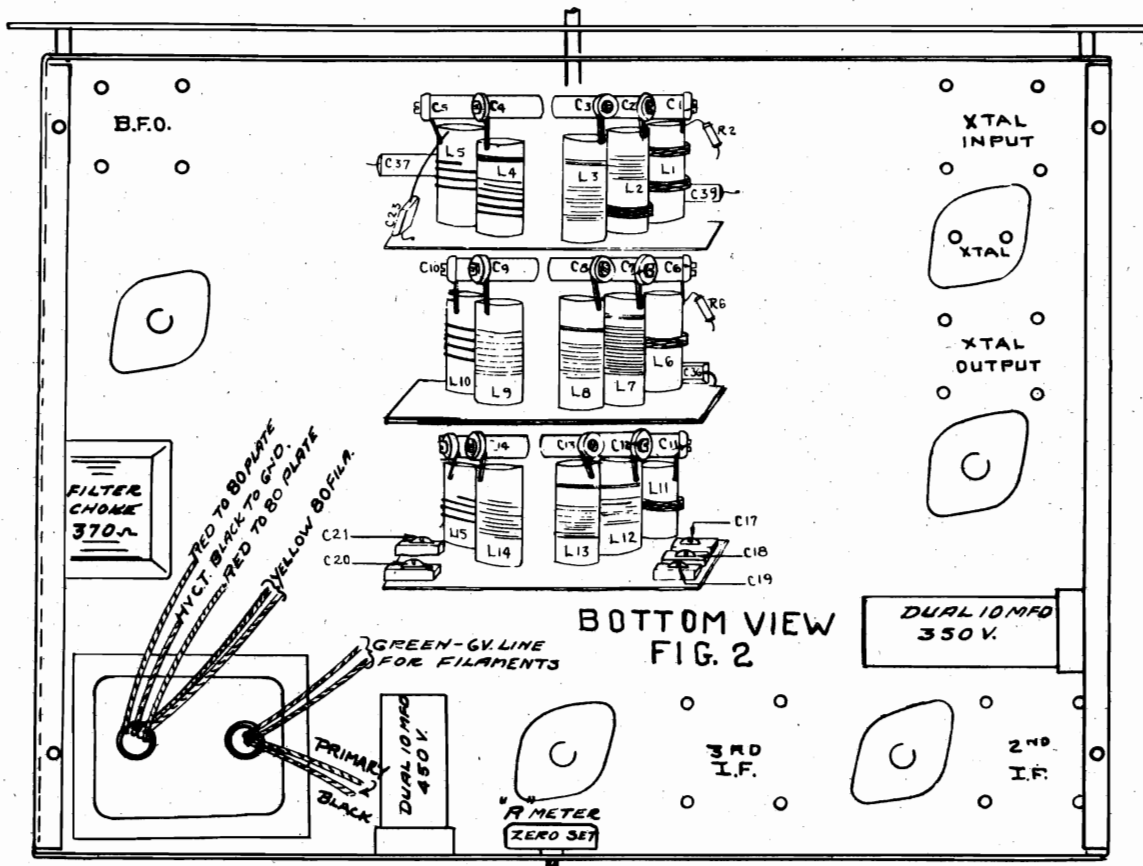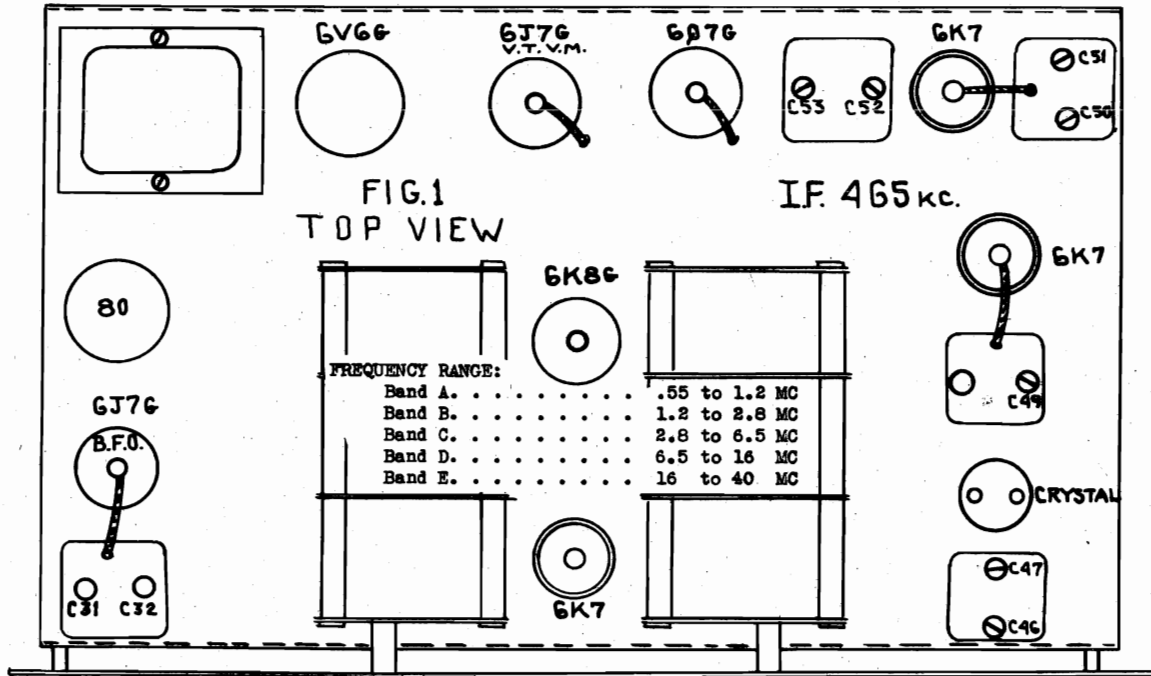

THE THREE TERMINALS - A, D, and G in the middle back of the chassis are for the ANTENNA AND GROUND connections. When using the conventional flat-top and lead-in type of antenna, CONNECT THE LEAD-IN TO THE TERMINAL MARKED "A", being sure that a wire jumper connects from D to G terminals. The G terminal is for the ground connection.

For any DOUBLET TYPE of antenna, remove the shorting jumper from D to G and connect the two leads of the doublet system to A and D.

The "C" terminal is for the ground connection.

SEARS, ROEBUCK & CO.

MODEL 5752, 5753
Alignment

NOTE 1: When aligning the I.F. channel a condenser of .05 MFD. may be used in series with the generator lead.
 NOTE 2: When aligning the broadcast band, a 250 MFD. condenser may be used in series with the signal generator.
 NOTE 3: When aligning the short wave bands a 400 ohm resistor may be used in series with the signal generator.

OPERATING FEATURES:

- A.V.C. with ON-OFF Switch
- Three-Gang Electrical Band Spread
- AF Gain or Audio Level Control
- RF Gain or Sensitivity Control
- Tone Control
- Beat Frequency Osc. Pitch Control
- B.F.O. Switch with Injection Control
- Crystal Phasor
- Send-Receive terminals in rear of Chassis for break-in connection
- IRON CORE IF Stages
- Headphone Jack on Front Panel

ALIGNMENT FREQUENCIES

- Band A 600 and 1200 KC
- Band B 1.5 and 2.6 MC
- Band C 3.0 and 6.0 MC
- Band D 7.0 and 15 MC
- Band E 16 and 36 MC

ALIGNMENT PROCEDURE

- PRELIMINARY:
- Output meter connection.
 - ...4,000 ohm or more copper oxide meter across 5 ohm terminals. Shunt with speaker
 - Output meter reading to indicate .5 watt.....1.575 V.
 - Average sensitivity in microvolts for .5 watt output....See chart
 - Generator ground lead connection.....Direct to chassis
 - Dummy antenna value in series with generator output. See Note 1
 - Connection of generator output lead.....See Chart
 - Generator modulation.....30%, 400 cycles
 - Position of volume control A.F. gain.....Full on
 - Position of volume control R.F. gain.....Full on
 - A.V.C. Switch.....On
 - Band spread dial set at 100.....Min. Capacity

POSITION OF VARIABLE AND BAND SW.	GENERATOR FREQ.	GENERATOR CONNECTION	TRIMMER LOCATION	TRIMMER ADJUSTMENTS IN ORDER	TRIMMER FUNCTION	APPROX. MICROVOLTS
Closed "A" Band	465 KC	6L7 Gr1d	SEE FIG.1	C53, 52, 51 50, 49, 47, 46	I.F.	15
36 MC "E" 16 MC "F"	36 MC 16	A-D-G Ant. Term. A-D-G Ant. Term.	SEE FIG.2	C15, 10, 5 C21	Osc. Trans. Ant. Padder	Approx. 3 Approx. 3
15 MC "D" 7 MC "D"	15 MC 7 MC	A-D-G Ant. Term. A-D-G Ant. Term.	SEE FIG.2	C14, 9, 4 C20	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1
6 MC "C" 3 MC "C"	6 MC 3 MC	A-D-G Ant. Term. A-D-G Ant. Term.	SEE FIG.2	C13, 8, 3 C19	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1
2.6MC "B" 1.5MC "B"	2.6 1.5	A-D-G Ant. Term. A-D-G Ant. Term.	SEE FIG.2	C12, 7, 2 C18	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1
1.2MC "A" .6 MC "A"	1200 KC 600 KC	A-D-G Ant. Term. A-D-G Ant. Term.	SEE FIG.2	C11, 6, 1 C17	Osc. Trans. Ant. Padder	Approx. 1 Approx. 1

NOTE: 4 When using a CRYSTAL, set PHASING CONTROL to almost minimum capacity. See special alignment instructions below for Crystal.

ALIGNMENT INSTRUCTIONS FOR RECEIVERS USING CRYSTALS

THE I.F. STAGES:
 FIRST - With the XTAL switch in the "OUT" position, align the I.F. stages to 465 KC, feeding signal into the grid of the 6L7.

SECOND - FOR RECEIVERS EQUIPPED WITH CRYSTALS:

- (A) REMOVE CRYSTAL, set crystal phasing condenser to almost minimum capacity and throw XTAL switch to "IN" position.
 - (B) With the 465 KC signal re-adjust the I.F. Trimmer - the one nearest the front panel of the receiver - by turning the screw counter-clockwise. The signal now may be slightly weaker than before, and sound "off-side". This, however, is a normal condition.
 - (C) REPLACE THE CRYSTAL - A very noticeable drop in signal strength may be noted, due to the filtering action of the crystal and the frequency control of the signal generator must be "rocked" slowly back and forth, until the increase in signal strength indicates the exact frequency of the crystal being used. Now re-align the entire I.F. system to this frequency.
 - (D) Adjust XTAL phasing condenser for the lowest pitched note possible and re-adjust signal generator frequency. Repeat and continue to repeat this alignment procedure until no further improvement in the alignment can be accomplished.
- NOTE: - If the XTAL switch should now be thrown to the "OUT" position, an apparent rise in gain will be noticed which is caused by the addition of higher frequencies and background noise, so it does not mean that the sensitivity of this set is impaired in any way by use of the crystal.
- NOTE: 5 THE BEAT FREQUENCY OSCILLATOR is adjusted with trimmers C31 and C32. Set pitch control to half capacity. Recheck C31.

MODELS See Below
Tuner, Alignment

SEARS, ROEBUCK & CO.

ALIGNMENT PROCEDURE
For Models: 6025, 6128, 6201, 6231, 6251 Chassis 101.547, -A, -1, -1B; 6208, 6209 Chassis 101.544; 101.544; 6214, 6270 Chassis 101.552, 101.552A, 6056, 6057 Chassis 101.548; 6133, 6141, 6139, 6137, 6202, 6203, 6255, 6252, 6199 Chassis 101.555.

PRELIMINARY:
Output meter connection Across load speaker voice coil
Output meter reading to indicate 500 milliwatts (2) (0.9)(0.7)
Generator ground lead connection Receiver chassis
Dummy antenna value to be in series with generator output See chart below
Connection of generator output lead See chart below
Generator modulation 70%, 400 cycles
Position of Volume Control Fully clockwise
Position of Tone Control HI
Models 6025, 6128, 6201, 6231, 6251 Chassis 101.547, -A, -1, -1B; 6208, 6209 Chassis 101.544; 6214, 6270 Chassis 101.552, 101.552A
Position of Dial Pointer with variable fully closed Horizontal (to fall on first heavy block below 550 kc.)

THE BIAS CELLS:
Models 6056, 6057
CHASSIS 101.548
Do not attempt to test the bias cells with a voltmeter. Ordinarily these cells have an indefinitely long life and should not be the cause of any trouble. The cells must be in their holders in the proper direction so that the polarity of the bias applied to the tubes will be correct. In the zinc shell of the cells is the negative terminal and must connect to the grid. In the zinc shell of the cells is the positive terminal and must connect to the plate. If the cells are removed from the chassis, the diagram shows the correct positions of the cells will be correct. The location of parts diagram shows the correct positions of the cells.

THE FILAMENT CIRCUIT:
Models 6119, 6120, 6126, 6127, 6200, 6250
CHASSIS 101.546, 101.546-1
All of the tube heaters are connected in series. Accordingly, if any one tube burns out, the others will not light. The full line voltage will appear across the heater terminals of the burnt out tube.
Under certain conditions the chassis may be above ground potential when working on the line voltage. Accordingly, appropriate precaution should be taken when working on the chassis, by insulating the chassis completely from ground, etc.

Models 6025, 6128, 6201, 6231, 6251; 6119, 6120, 6126, 6127, 6200, 6250
CHASSIS 101.547, -A, -1, -1B
CHASSIS 101.546, 101.546-1

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER FUNCTION
"AM"	Closed	455 kc	.1 mfd.	1C76 "	T ₂ , T ₃ , T ₁ , E ₁ , T ₁ IF Output IF Input
"AM"	500 kc	455 kc*	.0002 mfd.	Ant. Term. C1* C4*	C1* Wave Trap
"AM"	Open	1750 kc	.0002 mfd.	Ant. Term. C6 C8	C8 Oscillator
"AM"	1400 kc	1400 kc	.0002 mfd.	Ant. Term. C2 C3	C2 Translator
"AM"	500 kc (rook)	500 kc	.0002 mfd.	Ant. Term. C7 C7	C9 Padder
"FOR"	4-15 mc (rook)	4-15 mc	400 ohms	Ant. Term. C4 C1	C3 Translator

SETTING UP:
Each of the push buttons should be set up in the following manner:
1. Make a list of the local stations desired to be set up on the push buttons.
2. Punch out of the call letter sheets the corresponding call letters.
3. Pull the push button knob off of its lever (the push buttons slip off the shaft).
4. Unscrew (turn counter-clockwise) the slotted shaft then exposed two or three turns (use a token or small screw driver).
5. Push the slotted shaft all the way in.
6. Tune in the desired station or station to be set up, making sure to hold the slotted shaft as far in as possible.
7. While holding both the tuning knob and the slotted push button shaft all the way in, securely tighten (turning counter-clockwise) the slotted screw.
8. Check for accuracy by detuning the station and retuning with that push button. If the setting is not accurate, follow the procedure as outlined in points No. 3 to No. 8.
9. Place the proper call letter in the recess in front of the push button, and cover the call letter with one of the clear celluloid discs supplied.
10. Push the push button back into place on the push button lever.
11. Follow the procedure as outlined in points No. 3 to No. 10, inclusive, for each of the remaining buttons.


WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER FUNCTION
"AM"	Closed	455 kc	.1 mfd.	1C76 "	T ₂ , T ₃ , T ₁ , E ₁ IF Output IF Input
"AM"	500 kc	455 kc*	.0002 mfd.	Ant. Term. C1* C1*	C1* Wave Trap
"AM"	1750 kc	1750 kc	.0002 mfd.	Ant. Term. C5	C7 Oscillator
"AM"	1400 kc	1400 kc	.0002 mfd.	Ant. Term. C2	C2 Translator
"AM"	500 kc (rook)	500 kc	.0002 mfd.	Ant. Term. C6	C6 Padder
"FOR"	4-15 mc (rook)	4-15 mc	400 ohms	Ant. Term. C4	C3 Translator

OPERATION:
"Push button stations" will be tuned accurately by pushing the push button all the way to its stop.
NOTE: Push buttons on Model 101.547 chassis are locked and unlocked by turning the button.
ELIMINATING WHISTLE AT 910 KC:
A whistle, due to a beat between the second harmonic (910 kc) of the 455 kc IF and a 910 kc signal may be experienced. In localities where the 910 kc station is one that is frequently listened to, it will be desirable to shift the whistle to some other point where it will not be objectionable. This can be done by shifting the IF frequency of the receiver. Determine at what point between 880 kc and 940 kc the whistle will be least objectionable. Dividing this frequency by two will give the new IF frequency to which the receiver should be aligned. If this procedure is followed, the IF should be realigned at 880/2 or 440 kc. Try to select the new IF frequency as close to 455 kc as possible.
Align the IF at the new frequency and then realign the rest of the receiver as described under "ALIGNMENT PROCEDURE".

IMPORTANT ALIGNMENT NOTES
* The generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading. Instead of the usual maximum setting for the trimmer, the generator should be adjusted to the frequency of the station around 455 kc as known, the generator should be adjusted to the frequency of that station instead of to 455 kc.
Where indicated by the word, "rook", the variable should be rooked back and forth a degree or two while making the adjustment.
The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

SEARS, ROEBUCK & CO.

MODELS 6025, 6201, Ch. 101.547
 6128, 6251, Ch. 101.547-1 and
 Ch. 101.547-A; 6231, Chassis
 101.547-1B
 Schematic, Voltage, Changes

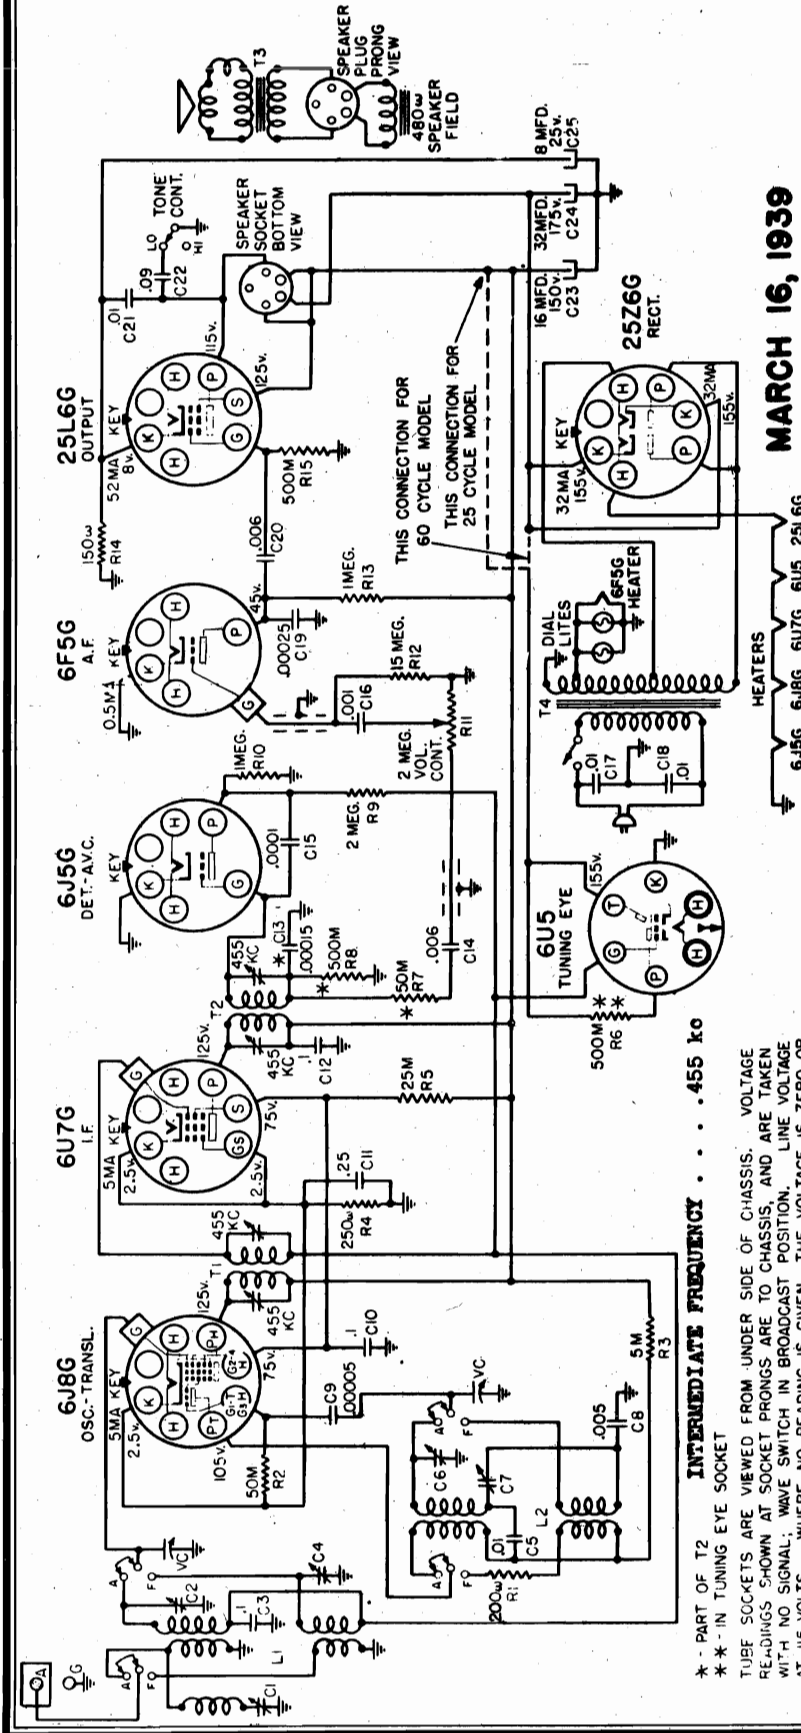

MARCH 16, 1939

INTERMEDIATE FREQUENCY 455 kc
 * - PART OF T2 SOCKET
 ** - IN TUNING EYE SOCKET
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 115 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ. POWER SUPPLY:

All models available 105-125 volts, 25-60 cycle, 50 watts
 LOUD SPEAKER:
 Type Dynamic
 Size 6 inch
 Field coil resistance 480 Ohms

FREQUENCY RANGES:
 Band "AM" 540-1730 kc
 Band "SW" 5.9-18.2 mc
 ALIGNMENT FREQUENCIES:
 Oscil. Ant-Transl.
 Trimmer 1730 kc Padder
 1400 kc 600 kc Automatic Volume Control
 15 mc Push Button Tuning (5 button)
 Tuning Eye Tuning Eye
 CHASSIS FEATURES:
 Number IF stages One
 Condensers in gang Two
 Antenna Conventional
 Built-in IF Wave Trap

CHASSIS IDENTIFIED BY 101.547A:
 Chassis identified by the number 101.547A on the metal plate at the rear of the chassis are the same as 101.547-1 chassis except for a change in the design and part number of the dial escutcheon.
 ADDITION OF SUFFIX "-1B" TO 101.547 CHASSIS:
 Chassis identified by 101.547-1B are the same as 101.547-1A except for a change in the design and part number of the push buttons, push button escutcheon, call letter sheets and covers. Also a new 10" speaker has been used.

FOR ALIGNMENT
 SEE INDEX

CHASSIS 101.547,-1,-A,-1B
 CHASSIS 101.546,-1,-1A
 Socket, Trimmers, Chassis

SEARS, ROEBUCK & CO.

MODELS 6800, 6130, 6136, 6127, 6119, 6850 CHASSIS-101.546, -1, -1A

OPERATING FEATURES:

- Tone Control . . . Two Position
- Automatic Volume Control
- Push Button Tuning (5 button)
- Tuning Eye

CHASSIS FEATURES:

- Number IF stages One
- Antenna Two
- Built-in IF Wave Trap Conventional


MECHANICAL SPECIFICATIONS

OPERATING CONTROLS:


- 1. Upper left knob Volume
- 2. Lower left knob On-off switch & Tone
- 3. Lower right knob Wave band switch
- 4. Upper right knob Station Selector

CONTROL OPERATION:


- Turning right: Volume Increase
- Turning left: "ON", "HI", "LO"
- Turning right: "AM", "SW"
- Tuning ratio: 4:1

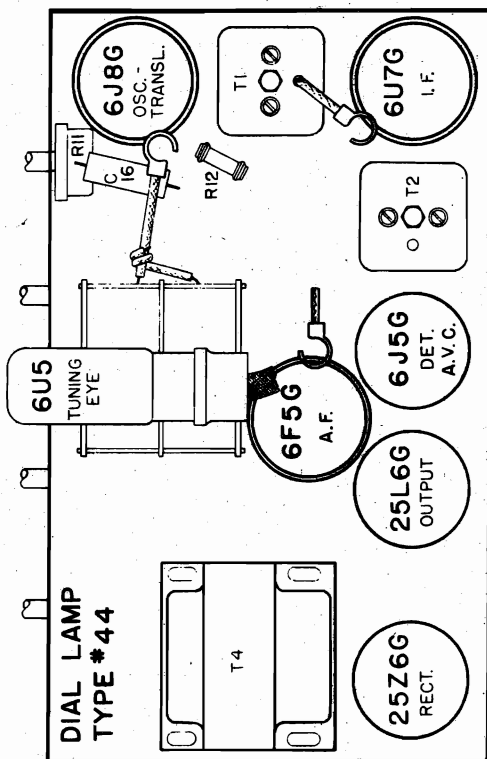

LOCATIONS OF PARTS ON TOP OF CHASSIS.

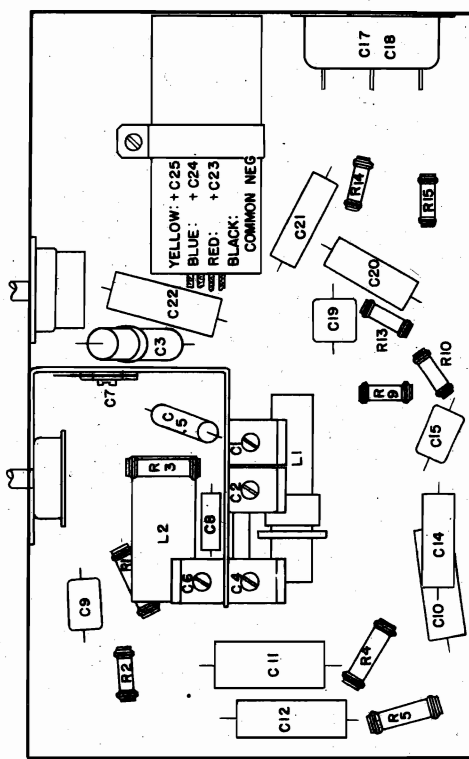


LOCATIONS OF PARTS UNDER CHASSIS

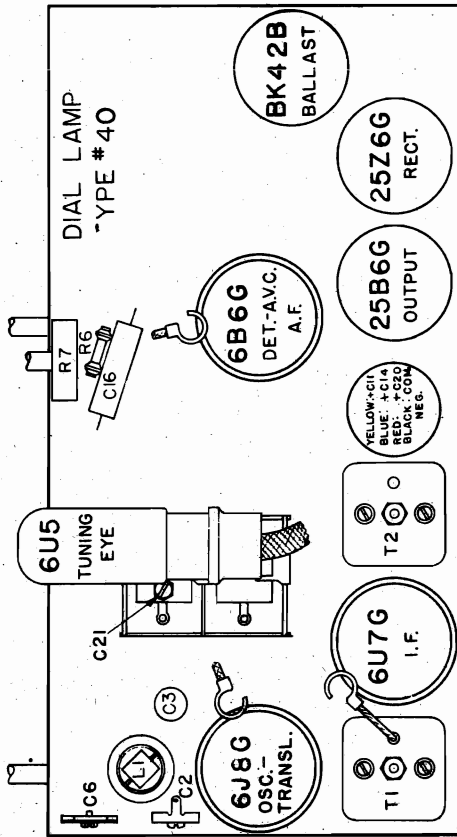

SEARS, ROEBUCK & CO.

MODELS 6056, 6057
 Chassis 101.548
 Schematic, Voltage
 Socket, Trimmers
 Chassis

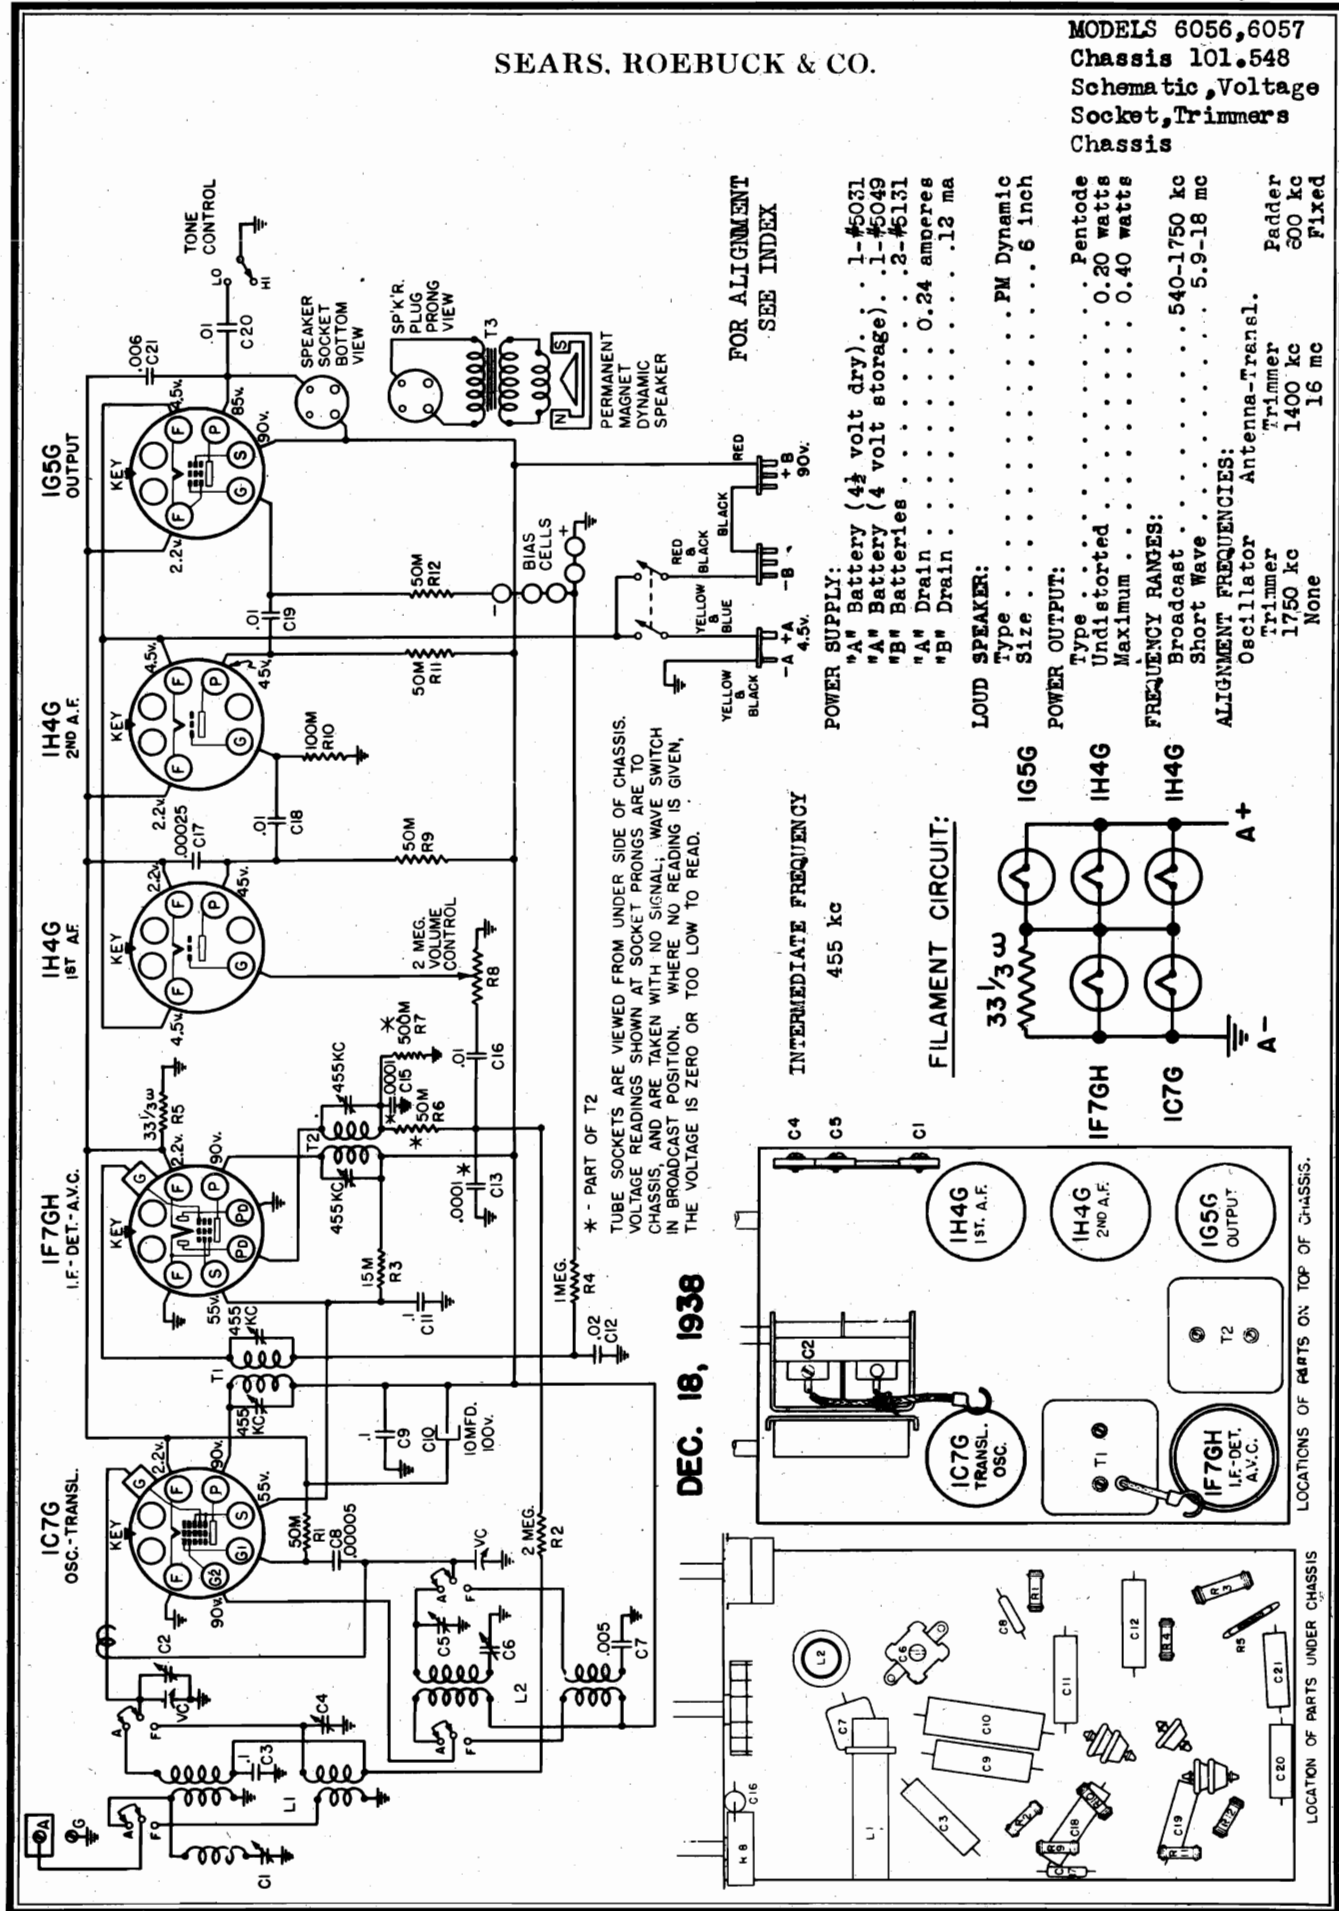

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. WAVE SWITCH IN BROADCAST POSITION. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

FOR ALIGNMENT
 SEE INDEX


- POWER SUPPLY:
 "A" Battery (4 1/2 volt dry) . . . 1-#5031
 "B" Battery (4 volt storage) . . . 1-#5049
 "B" Batteries . . . 2-#6131
 "A" Drain . . . 0.24 amperes
 "B" Drain12 ma

- LOUD SPEAKER:
 Type PM Dynamic
 Size 6 inch


- POWER OUTPUT:
 Type Pentode
 Undistorted 0.20 watts
 Maximum 0.40 watts
- FREQUENCY RANGES:
 Broadcast 540-1750 kc
 Short Wave 5.9-18 mc
- ALIGNMENT FREQUENCIES:
 Oscillator Antenna-Transl.
 Trimmer 1750 kc
 Oscillator 16 mc
 Trimmer 1600 kc
 Fixed None

INTERMEDIATE FREQUENCY
 455 kc


FILAMENT CIRCUIT:

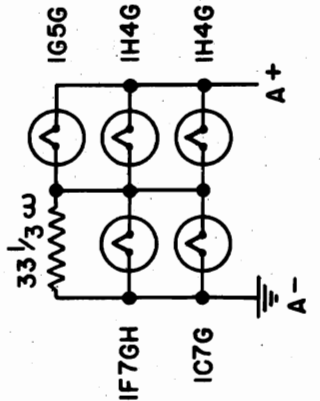

DEC. 18, 1938

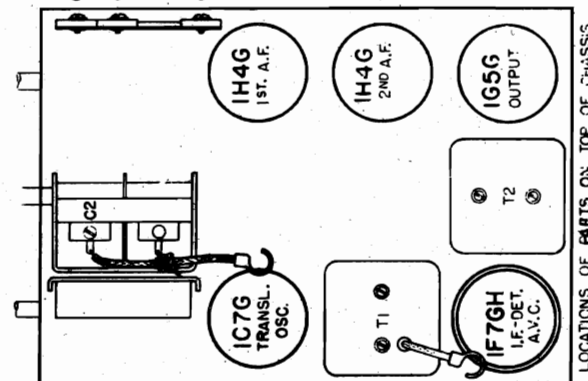

LOCATIONS OF PARTS ON TOP OF CHASSIS.

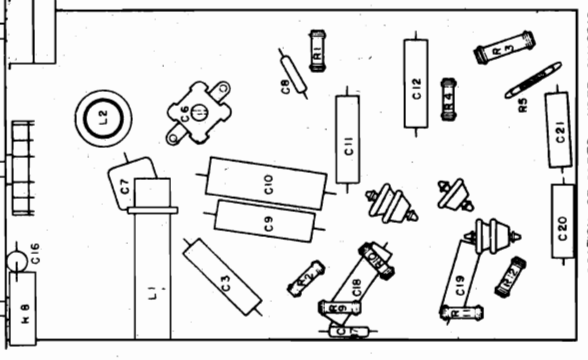


LOCATION OF PARTS UNDER CHASSIS

MODELS 6106, 6107, 6108, 6116
Chassis 109.278

SEARS, ROEBUCK & CO.

Schematic, Voltage, Socket
Alignment, Trimmers

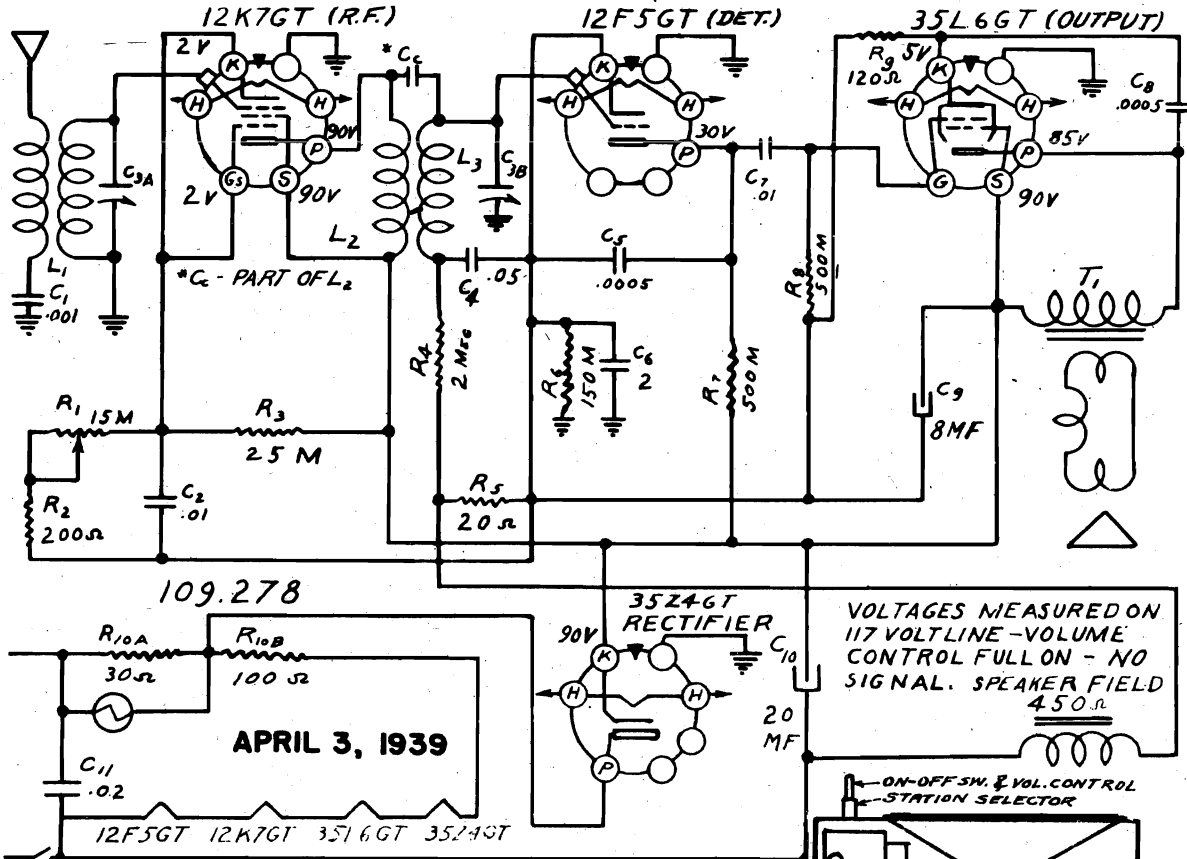

POWER SUPPLY:
105-125 volts, 50-60 cycle or D. C. 25 Watts on 117 volt line.

POWER OUTPUT:
Type.....Beam Power
Undistorted......9 Watt
Maximum.....1.35 Watts

LOUD SPEAKER:
Type.....Dynamic
Size.....3 1/2"
Field Resistance.....450 Ohms

ALIGNMENT PROCEDURE

Either a signal generator or a broadcast signal between 1400 and 1500 kc. may be used.

The antenna of the receiver should be extended as for normal use. Tune in a station between 1400 and 1500 kc. and adjust the trimmers on top of the tuning condenser for maximum signal.

If a signal generator is used, extend the antenna as described above, run a wire from the generator parallel to, but insulated from the antenna. Set the generator to 1720 kc. Turn the tuning condenser all the way to the right (Minimum capacity). Tune in the signal from the generator with the trimmer on the rear section of the tuning condenser. Set the generator at about 1400 kc. Tune in the signal and adjust the trimmer on the front section of the tuning condenser for maximum response.

DEFECT	GENERALLY CAUSED BY	REMEDY
Dead Receiver	No current at outlet Open or short circuit in set	Check outlet for current and be sure power cord plug is making good contact Repair or replace
Poor Sensitivity and Volume	Insufficient antenna pickup Defective tube Receiver out of alignment	Connect to outdoor antenna Replace Follow alignment procedure
Station interference	Receiver located near powerful stations	Do not uncoil all of antenna
Poor tone	Overloading Speaker out of adjustment	Reduce volume control setting Repair or replace
Oscillation	Antenna lead coiled around or near set	Run antenna wire away from set

MODELS 6119,6120,6126,6127
6200,6250,6120A,6230,6250A
Alignment,Changes

SEARS, ROEBUCK & CO.

CHANGES

ADDITION OF TWO 50 OHM 2 WATT RESISTORS TO ELIMINATE FAILURE OF 25Z6G RECTIFIER TUBES AND IN SOME CASES SUBSEQUENT SHORTING OF THE FIRST SECTION OF THE ELECTROLYTIC FILTER CONDENSER.

NOTE: The resistors have been added at the factory when the identification number reads 101.546-1.

Remove the wire connecting pins #4 and #5 of the rectifier tube to pin #7 of the ballast tube. One 50 ohm 2 watt resistor is connected from pin #4 of the rectifier to pin #7 of the ballast tube. The other 50 ohm 2 watt resistor is connected from pin #5 of the rectifier to pin #7 of the ballast tube.

The 50 ohm 2 watt resistors, part number 1012214418, can be obtained from source 101. Connections are shown on schematic diagram, Model 101.546-1.

CHECKING CONDITION OF FILTER ELECTROLYTICS AFTER 25Z6G RECTIFIER TUBE HAS FAILED.

Check the resistance, with the power disconnected from the set, of each filter electrolytic with a DC ohmmeter, reversing the terminals of the ohmmeter on each condenser. A shorted condenser will show very low resistance in both tests.

If, after the resistors are added and a new rectifier tube installed, the set has excessive hum, the voltage across each of the filter electrolytics should be checked. If the voltage across any one of them is more than 30% below the value shown on the schematic, the replacement of this electrolytic should correct the hum. The condenser used to replace the defective section of the electrolytic should be 1012019915. These condensers can be obtained direct from source 101.

Chassis identified by 101.546-1A are the same as 101.546-1 except for a change in the design and part number of the push buttons and call letter sheets.

ALIGNMENT PROCEDURE

PRELIMINARY:

- Output meter connection Across loud speaker voice coil
- Output meter reading to indicate 500 milliwatts1.2 volts
- Dummy antenna value to be in series with generator output See chart below
- Connection of generator output lead See chart below
- Generator modulation 30%, 400 cycles
- Position of Volume Control Fully clockwise
- Position of Tone Control HI
- Position of Dial Pointer with variable fully closed Horizontal

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION
"AM"	Closed	455 kc	.1 mfd.	6J8G Grid	T2, T1	IF Output IF Input
"AM"	600 kc	455 kc*	.0002 mfd.	Ant. Lead	G3*	Wave Trap
"AM"	1400 kc	1400 kc	.0002 mfd.	Ant. Lead	G5, G21	Oscillator Translator
"AM"	600 kc (rock)	600 kc	.0002 mfd.	Ant. Lead	G6	Padder

IMPORTANT ALIGNMENT NOTES

* The generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading instead of the usual maximum reading. If the frequency of an interfering station around 455 kc is known, the generator should be adjusted to the frequency of that station instead of to 455 kc.


Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

There are no trimmer adjustments for the short wave band.

SEARS, ROEBUCK & CO.

MODEL 6130
 Chassis 101.577
 101.577-1
 Schematic, Voltage
 Changes

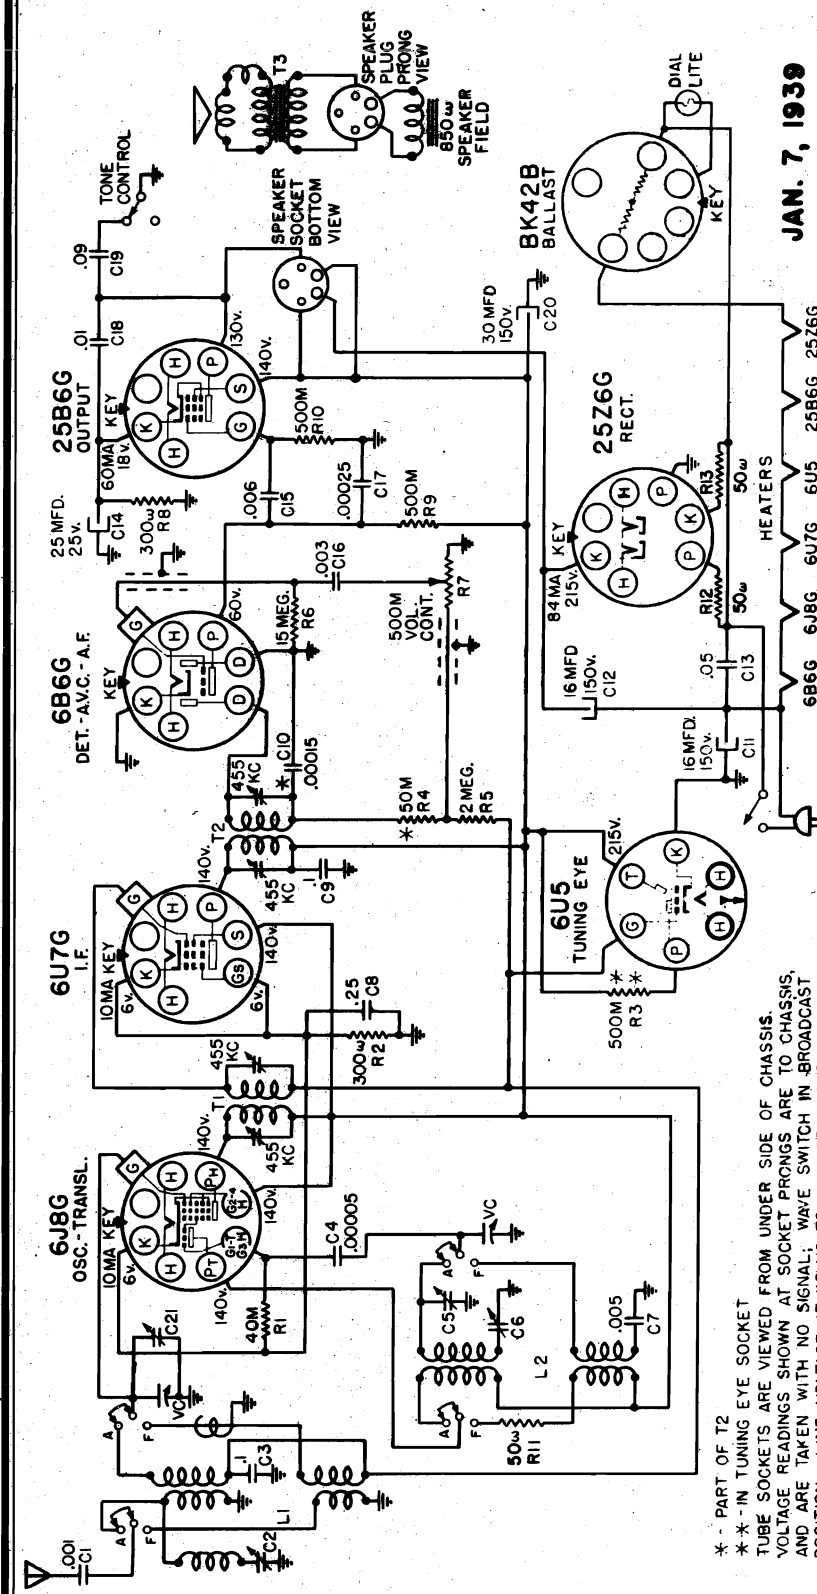

JAN. 7, 1939

INTERMEDIATE FREQUENCY 455 kc

POWER SUPPLY:
 All models available 105-125 volts, 50-60 cycle, 60 watts

FREQUENCY RANGES:
 Band "AM" 540-1730 kc
 Band "FOR" 5.95 mc-18.2 mc

ALIGNMENT FREQUENCIES:
 Oscil. Ant.-Transl. Dynamic
 Trimmer Padder 1400 kc
 Band "AM" 1400 kc
 Band "FOR" None
 Loud Speaker: Type None
 Size 6"
 Field coil resistance 850 ohms
 App. field coil voltage drop 75 V.

POWER OUTPUT:
 Type Beam tube
 Undistorted 2 watts
 Maximum 3 watts

DIFFERENCES BETWEEN 101.557 AND 101.557-1:
 R12 and R13, 50 ohms each, have been added to the 25Z6G plate and cathode circuits of 101.557-1 chassis. (See schematic.) These resistors are to prevent failure of the 25Z6G tube and should be added to 101.557 chassis as described in Bulletins XY5784 and XY5795, dated December 28th 1938. Either filter condenser, C11 or C12, may be damaged by a defective 25Z6G tube and should be checked with an ohmmeter before replacing the tube. A normal condenser will show high resistance when the polarity of the ohmmeter terminals agrees with the polarity of the condenser and will show considerably lower resistance when the ohmmeter terminals are reversed. (Be sure power is off when checking.) If C11 is found damaged, it is not necessary to replace the entire 3-section block. Instead, C11 should be replaced by a new single unit 15 mfd. condenser, part #1012019913. Remove the yellow lead of the original electrolytic and in its place connect the yellow lead of the new condenser. Connect the black lead of the new electrolytic to the same place in the circuit as the black lead of the original electrolytic. If the set has excessive hum, the capacity of C11 and C12 should be checked by shunting a #1012019913 condenser across each of them, observing correct polarity.

THE PUSH BUTTON TUNING MECHANISM:
 Push buttons are locked and unlocked by tightening or loosening the slotted screw, made accessible when the push button knob is pulled off of its plunger. Stations are set up by holding the plunger all the way in and tuning in the desired station. The setting then is locked by securely tightening the slotted screw.

MODEL 6130
Alignment, Trimmers
Socket, Chassis

SEARS, ROEBUCK & CO.

ALIGNMENT PROCEDURE

PRELIMINARY:

Output meter connection Across loud speaker voice coil
 Output meter reading to indicate 500 milliwatts 1.2 volts
 Average sensitivity in microvolts for 500 milliwatts output See chart below
 Dummy antenna value to be in series with generator output See chart below
 Connection of generator output lead See chart below
 Generator modulation 30%, 400 cycles
 Position of Volume Control Fully clockwise
 Position of Tone Control HI
 Position of Dial Pointer with variable fully closed Horizontal


WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"AM"	Closed	455 kc	.1 mfd.	6J8G Grid	T2, T1	IF Output IF Input	70
"AM"	600 kc	455 kc*	.0002 mfd.	Ant. Lead	C3*	Wave Trap	--
"AM"	1400 kc	1400 kc	.0002 mfd.	Ant. Lead	C5, C21	Oscillator Translator	50
"AM"	600 kc(rock)	600 kc	.0002 mfd.	Ant. Lead	C6	Padder	55

* The generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading instead of the usual maximum reading. If the frequency of an interfering station around 455 kc is known, the generator should be adjusted to the frequency of that station instead of to 455 kc.


Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective

There are no trimmer adjustments for the short wave band.

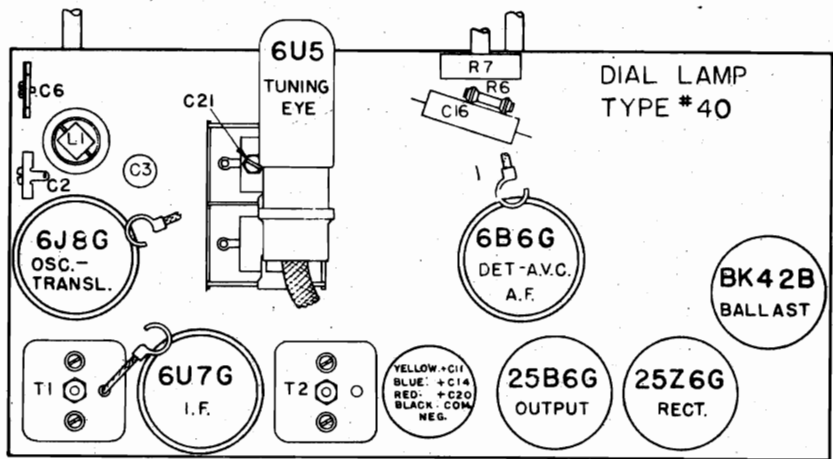


LOCATION OF PARTS ON TOP OF CHASSIS

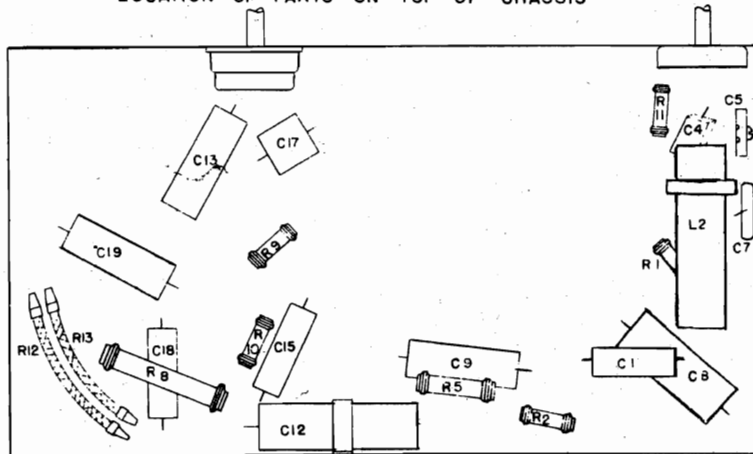

LOCATION OF PARTS UNDER CHASSIS

SEARS. ROEBUCK & CO.


MODELS 6133, 6141, 6139, 6137
6202, 6203, 6253, 6252, 6199
Chassis 101.535
Schematic, Voltage

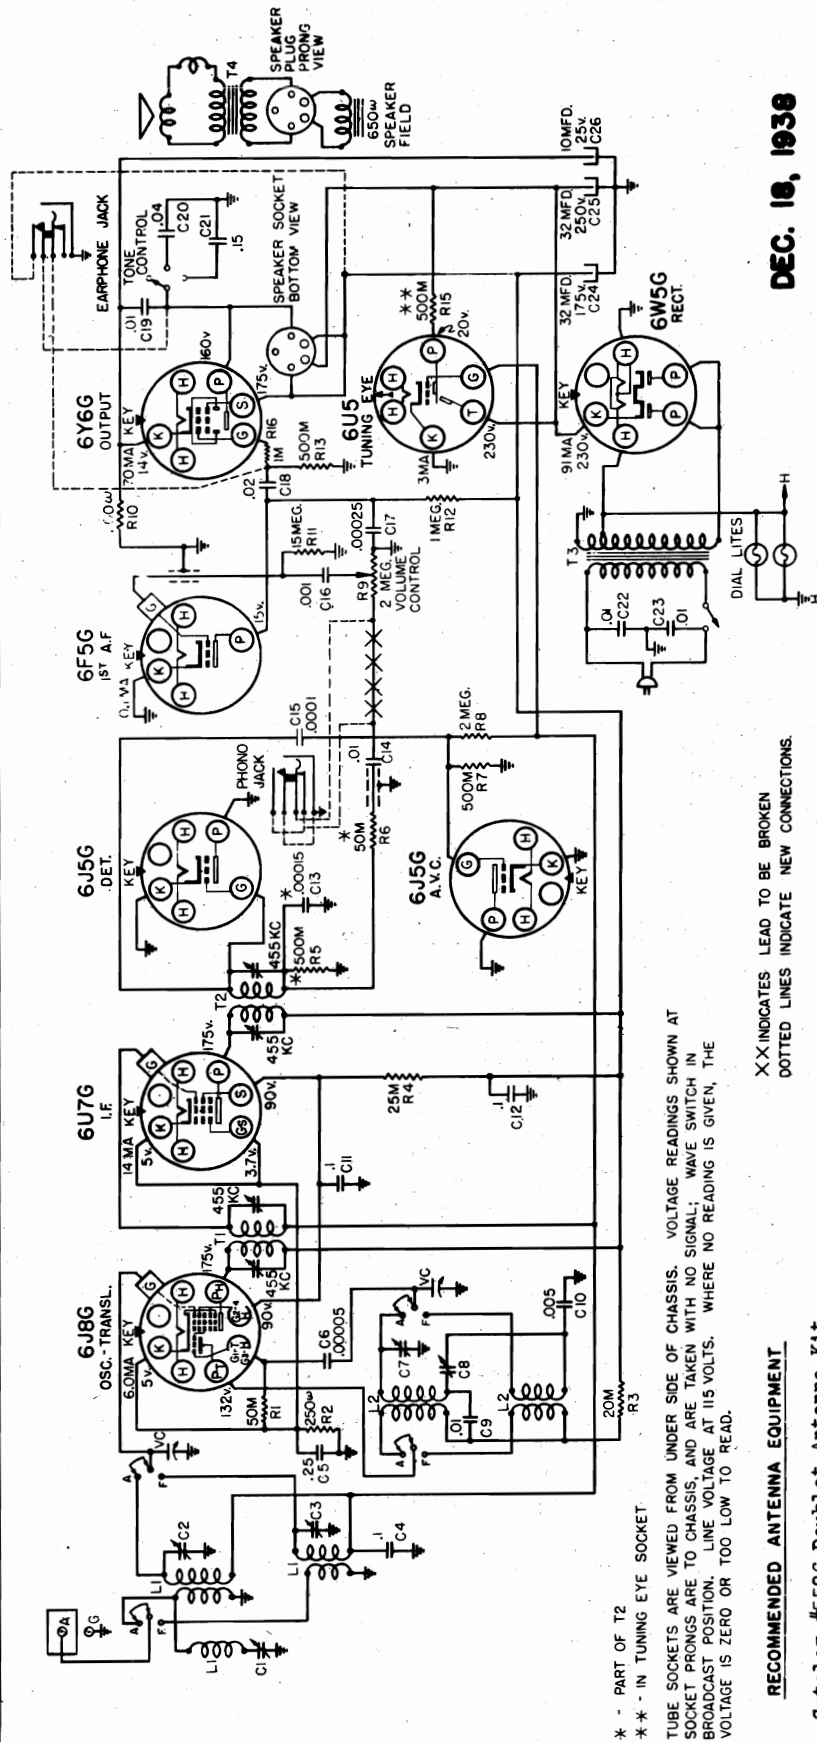

DEC. 10, 1938

INTERMEDIATE FREQUENCY 455 kc

POWER SUPPLY:
All models available 105-125 volts, 50-60 cycle, 75 watts
All models available 105-125 volts, 25 cycle, 90 watts

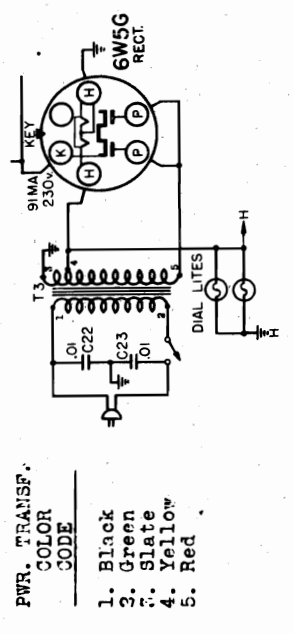

XX INDICATES LEAD TO BE BROKEN
DOTTED LINES INDICATE NEW CONNECTIONS.



RECOMMENDED ANTENNA EQUIPMENT

- Catalog #5586 Doublet Antenna Kit
- " #5587 " " "
- " #5588 Conventional Ant. Kit
- " #5575 " " "



- ALIGNMENT FREQUENCIES:
- Oscill. 540-1730 kc
 - Ant.-Transl. 5.9-16.5 mc
 - Trimmer 1400 kc
 - Band "AM" 15 mc
 - Band "SW" None
- FREQUENCY RANGES:
- Band "AM" 540-1730 kc
 - Band "SW" 5.9-16.5 mc
- POWER OUTPUT:
- Type Tetrode
 - Undistorted 3-1/2 watts
 - Maximum 5 watts
- LOUD SPEAKER:
- Type Dynamic
 - Size 8 and 10 inch
 - Field coil resistance 650 Ohms
 - App. field coil voltage drop 55 Volts

MODELS 6133, 6137, 6139, 6141
 6199, 6202, 6203, 6252, 6253
 MODELS 6155, 6156, 6254
 Socket, Trimmers, Chassis

SEARS, ROEBUCK & CO.

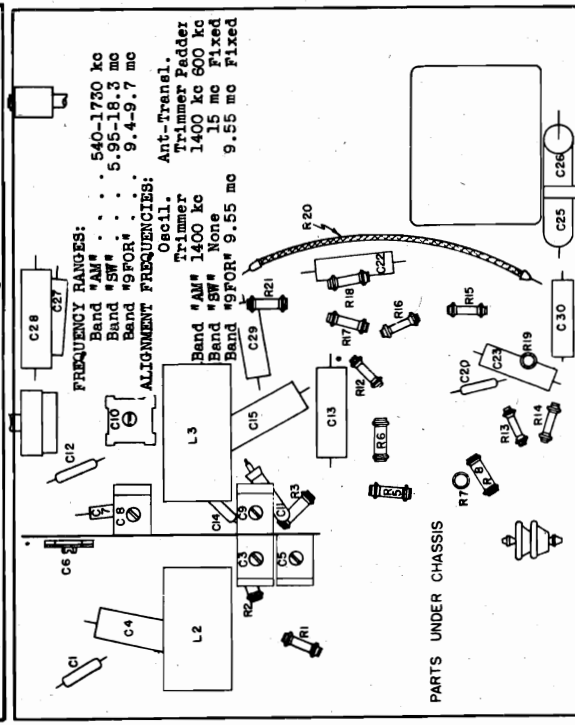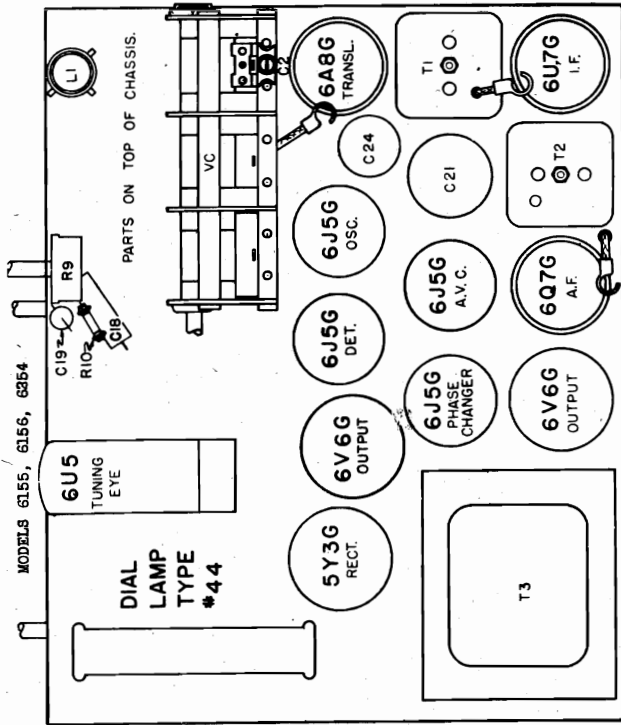


MODELS 6133, 6141, 6139, 6137, 6203, 6202, 6253, 6252, 6199

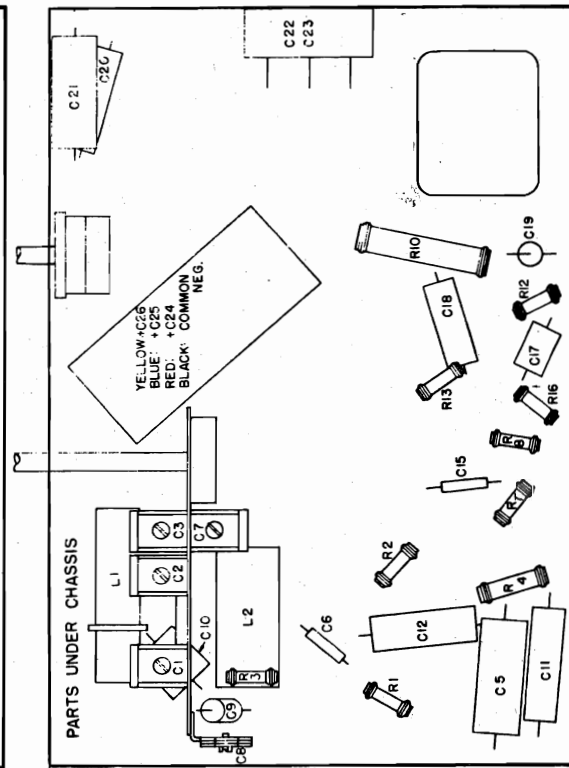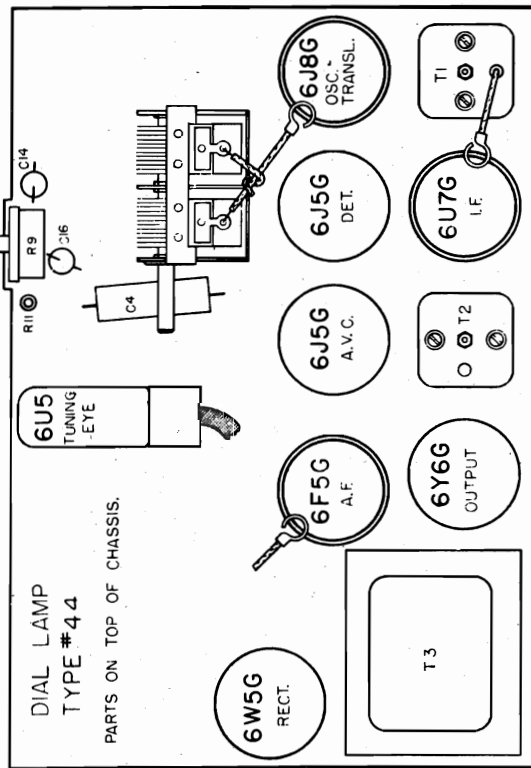

SEARS, ROEBUCK & CO.

MODEL 6151
Chassis 101.556, 101.556-1
Schematic, Voltage, Changes

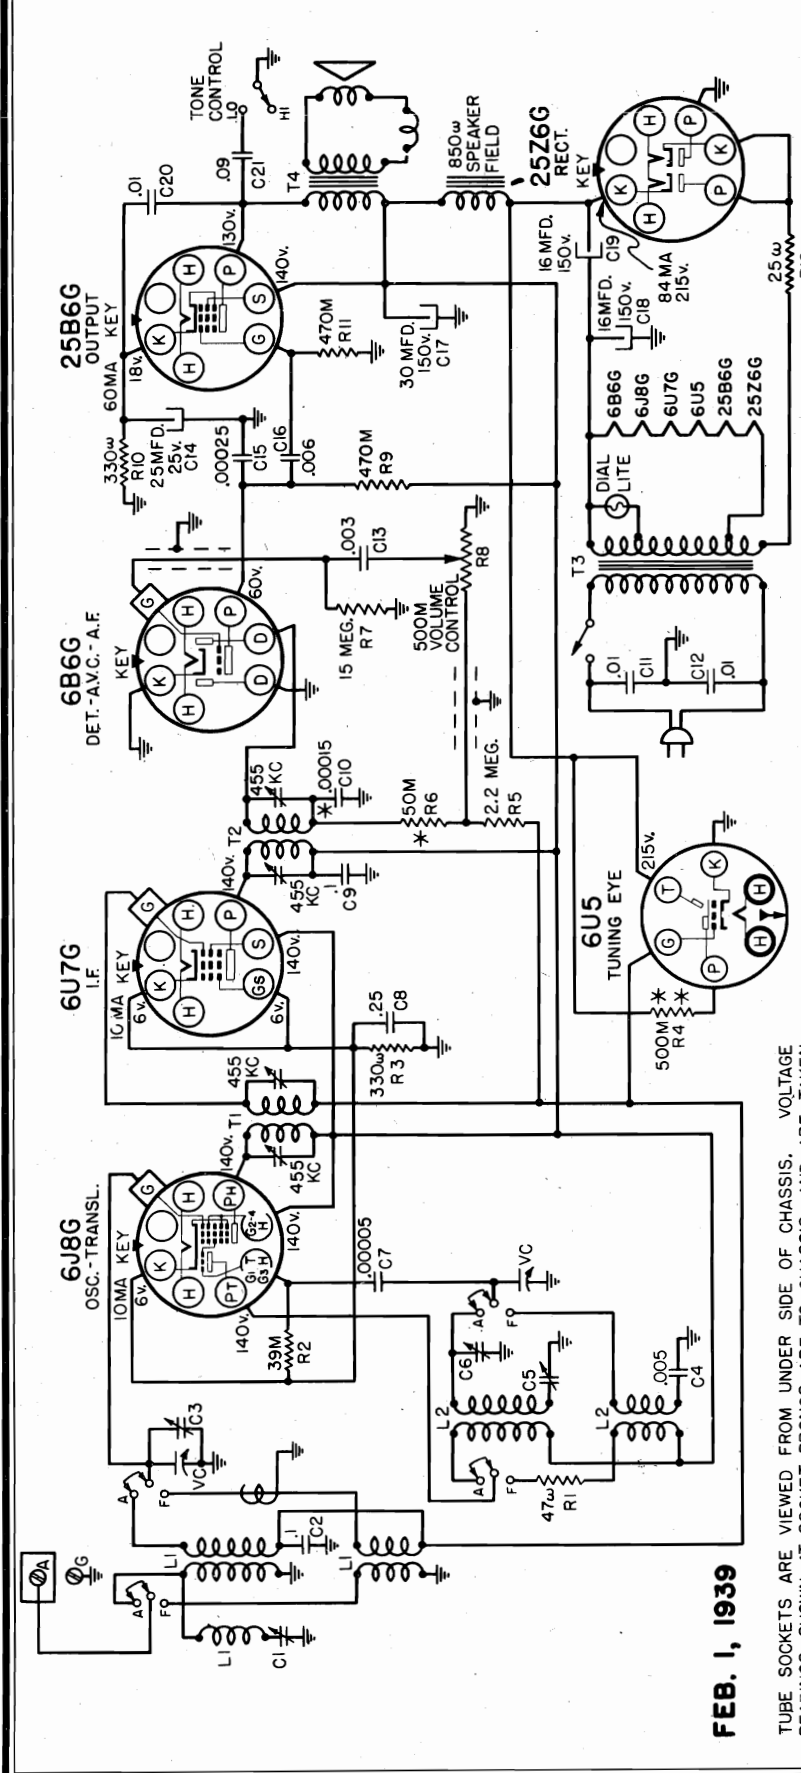

FEB. 1, 1939

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 115 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

DIFFERENCES BETWEEN 101.556 AND 101.556-1:

101.556 is supplied with a 105-125 volt, 50-60 cycle power transformer. This model is intended for domestic use.

101.556-1 is intended for export use and is equipped with a tapped power transformer for 105-125 volt or 210-350 volt, 40-60 cycle power. The illustrations below show the proper jumper connections, found under the chassis, to match the supply voltage (101.556-1 only).

PUSH BUTTON TUNING MECHANISM:



The adjustment for each push button is locked or unlocked by tightening or loosening the slotted screwhead made accessible when the push button knob is pulled off its plunger. Stations are set up by unlocking the mechanism, holding the plunger all the way in and tuning to the desired station, and then securely locking the adjustment.

RECOMMENDED ANTENNA EQUIPMENT:

- Catalog #5586 Doublet; reduces noise on Broadcast and Short Waves.
- Catalog #5587 Doublet; reduces noise on Short Waves.
- Catalog #5588, #5575; Conventional Antennas.

INTERMEDIATE FREQUENCY

455 kc

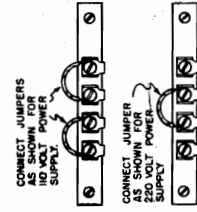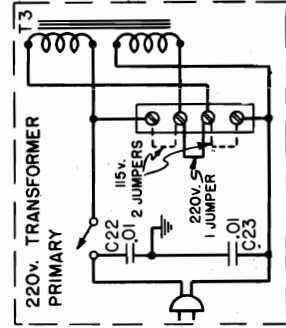

POWER SUPPLY:
101.556 105-125 volts, 50-60 cycle, 45 watts
101.556-1 105-125 volts, 210-250 volts, 40 cycle, 45 watts


POWER OUTPUT:
Type Pentode
Undistorted 3 watts
Maximum 3 watts

LOUD SPEAKER:
Type Dynamic
Size 5-3/8"
App. field coil resistance. 850 ohms

MODELS 6177A, 6178A, 6179A, 6185A,

SEARS, ROEBUCK & CO.

FOR ALIGNMENT SEE INDEX

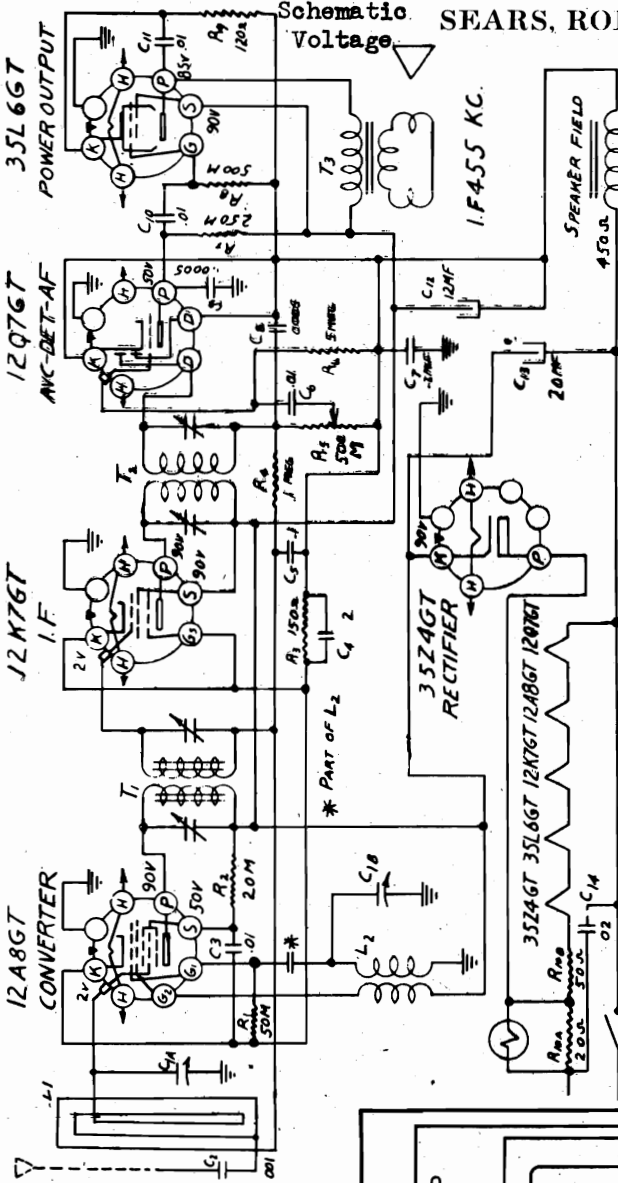

VOLTAGES INDICATED AT SOCKET TERMINALS ARE MEASURED WITH 1000 OHM PER VOLT METER, ON 117V LINE, WITH NO SIGNAL

APRIL 3, 1939

MODELS 6177A, 6178A, 6179A, 6185A (109-279-1) MODEL 6186A (109-279-2)

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA CONNECTION	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"AM"	Closed	455 kc	.1 mfd.	6J8G Grid	T3, T1	IF output	60
"AM"	600 kc	455 kc*	.0003 mfd. Ant. Term.	Ant. Term.	G1*	IF Input	--
"AM"	Fully open	1750 kc	.0002 mfd. Ant. Term.	Ant. Term.	G6	Wave Trap	100
"AM"	1400 kc	1400 kc	.0003 mfd. Ant. Term.	Ant. Term.	G3	Oscillator	50
"AM"	600 kc(rock)	600 kc	.0003 mfd. Ant. Term.	Ant. Term.	G5	Padder	35

IMPORTANT ALIGNMENT NOTES

* The generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading instead of the usual maximum reading. If the frequency of an interfering station around 455 kc is known, the generator should be adjusted to the frequency of that station instead of to 455 kc.

Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.


There are no trimmer adjustments for the short wave band.

CHASSIS 101.556 AND 101.556-1


ALIGNMENT PROCEDURE

PRELIMINARY:

Output meter connection . . . Across loud speaker voice coil
 Output meter reading to indicate 50 milliwatts . . . 0.26 volts
 Average sensitivity in microvolts for 50 milliwatts output . . . See chart below
 Generator modulation 30%, 400 cycles
 Position of Volume Control Fully clockwise
 Position of Tone Control Fully clockwise
 Position of dial pointer with variable fully closed . . . FI
 To fall on block immediately above and between the letters "mc" and "kc".

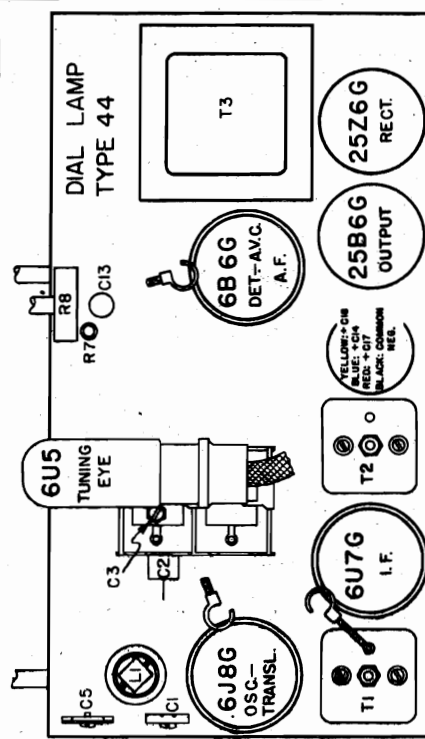


LOCATION OF PARTS ON TOP OF CHASSIS

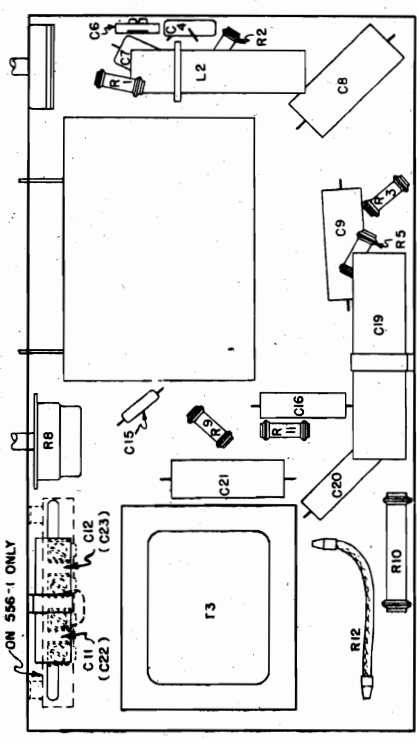

LOCATIONS OF PARTS UNDER CHASSIS

SEARS, ROEBUCK & CO.

MODELS 6155, 6156, 6254
 Chassis 101.549
 Schematic, Voltage
 Changes

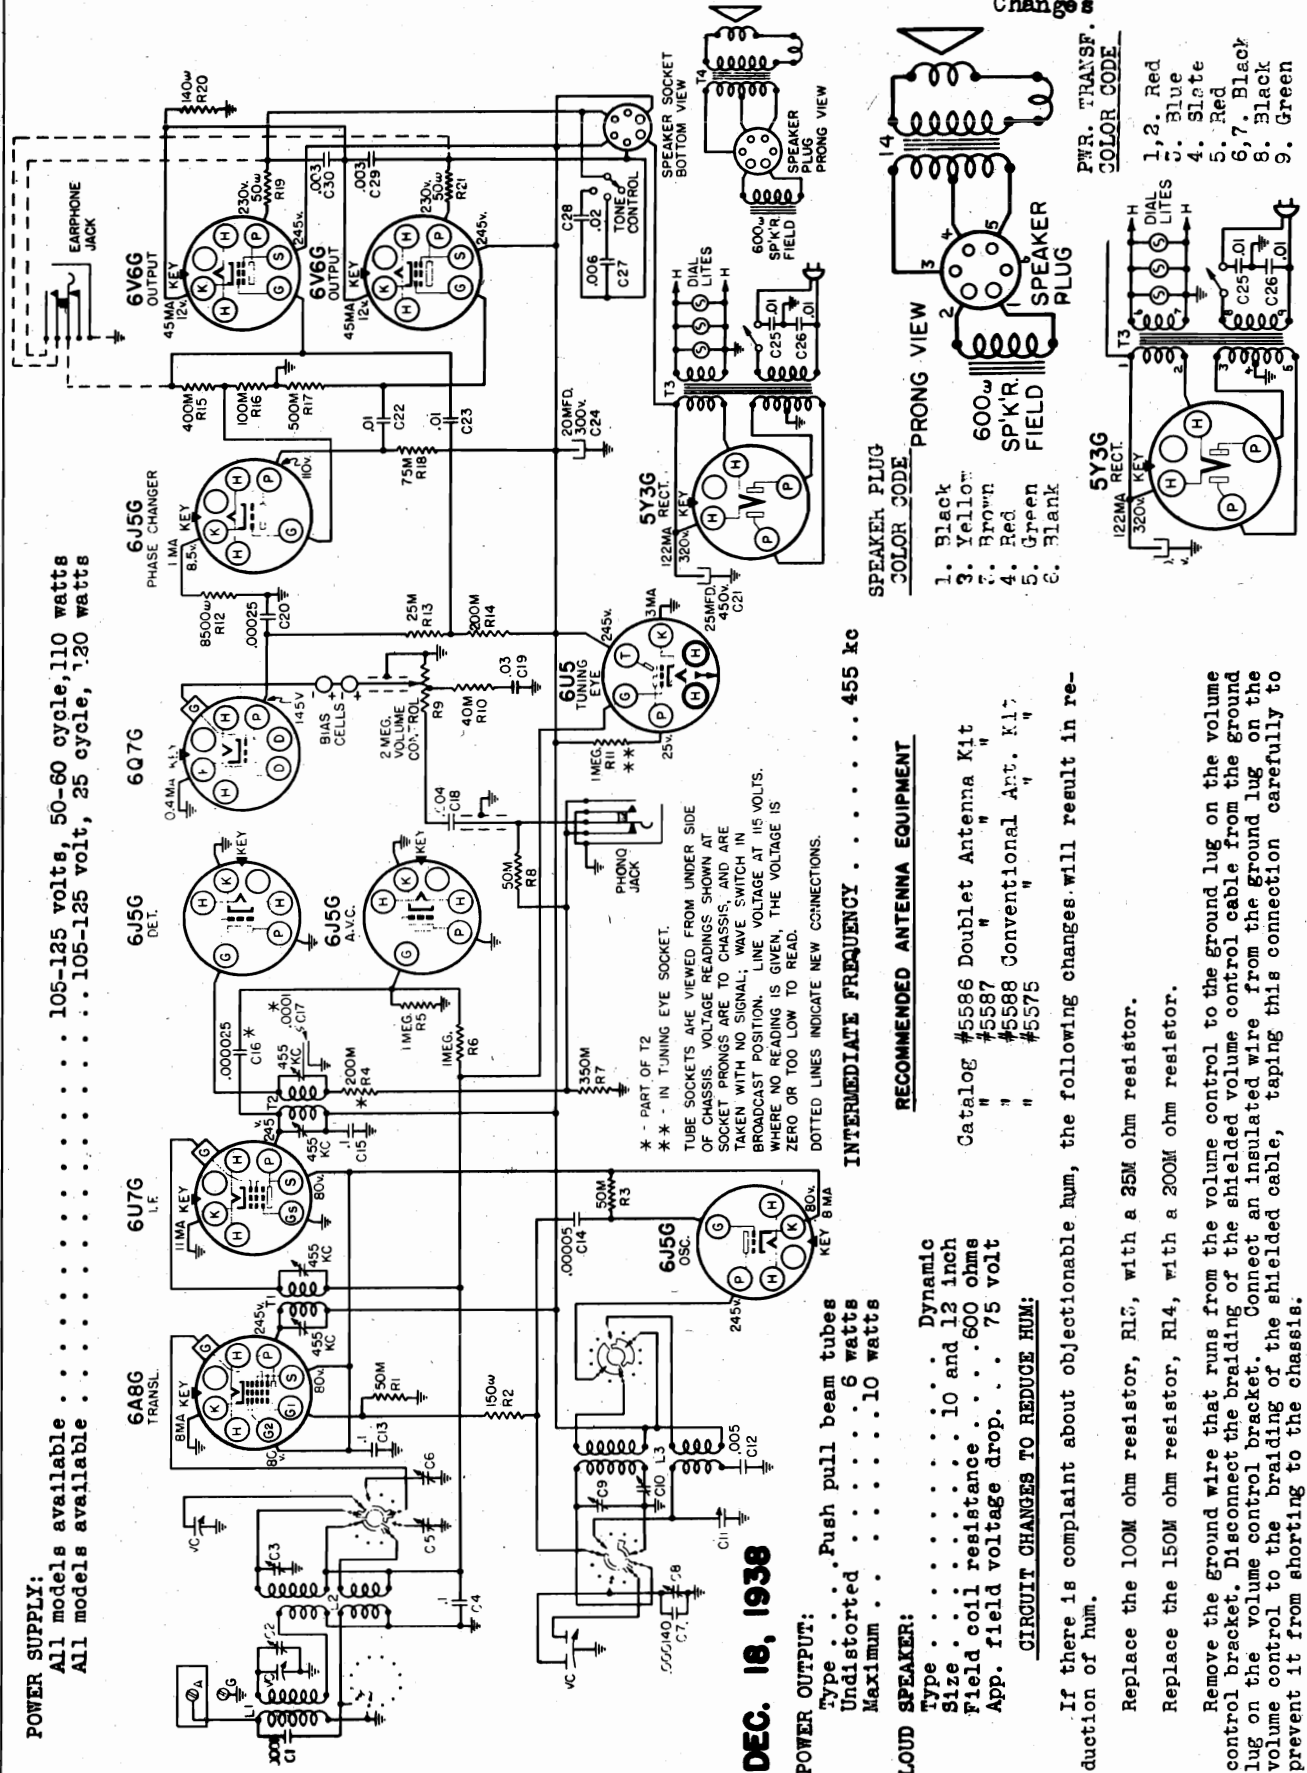

POWER SUPPLY:
 All models available 105-125 volts, 50-60 cycle, 110 watts
 All models available 105-125 volt, 25 cycle, 120 watts

DEC. 18, 1938

POWER OUTPUT:
 Type Push pull beam tubes
 Undistorted 6 watts
 Maximum 10 watts

LOUD SPEAKER:
 Type Dynamic
 Size 10 and 12 inch
 Field coil resistance 600 ohms
 App. field voltage drop 75 volt

CIRCUIT CHANGES TO REDUCE HUM:

If there is complaint about objectionable hum, the following changes will result in reduction of hum.

Replace the 100M ohm resistor, R17, with a 25M ohm resistor.

Replace the 150M ohm resistor, R14, with a 200M ohm resistor.

Remove the ground wire that runs from the volume control to the ground lug on the volume control bracket. Disconnect the braiding of the shielded volume control cable from the ground lug on the volume control bracket. Connect an insulated wire from the ground lug on the volume control to the braiding of the shielded cable, taping this connection carefully to prevent it from shorting to the chassis.

INTERMEDIATE FREQUENCY 455 kc

RECOMMENDED ANTENNA EQUIPMENT

- Catalog #5586 Doublet Antenna Kit
- " #5587 " " "
- " #5588 Conventional Apt. Kit
- " #5575 " " "

SPEAKER PLUG

- COLOR CODE**
- 1. Black
 - 2. Yellow
 - 3. Brown
 - 4. Red
 - 5. Green
 - 6. Blank

PWR. TRANSF.

- COLOR CODE**
- 1, 2. Red
 - 3. Blue
 - 4. Slate
 - 5. Red
 - 6, 7. Black
 - 8. Black
 - 9. Green

MODELS See Below
Alignment

SEARS, ROEBUCK & CO.

ALIGNMENT PROCEDURE

PRELIMINARY: For all Models and Chassis listed in tables below.

Output meter connection Across loud speaker voice coil

Output meter reading to indicate 500 milliwatts 0.86 volt

Generator ground lead connection Receiver chassis

Dummy antenna value to be in series with generator output See chart below

Connection of generator output lead See chart below

Dummy antenna value to be in series with generator output 30%, 400 cycles

Connection of generator output lead See chart below

Generator modulation 30%, 400 cycles

Position of Volume Control Fully clockwise

Position of Tone Control HI

Position of Dial Pointer with variable fully closed To fall in center of block to left of 550 kc mark.

MODELS 6264, 6265 CHASSIS 101.551

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
AM	Closed	455 kc	.1 mfd.	1A7G Grid	T3, T2, T1	If Output If Input	300
AM	500 kc	455 kc*	.0002 mfd.	Ant. Term.	C1*	Wave Trap	--
SW	15 mc (rock)	15 mc	400 ohms	Ant. Term.	C5	Translator	15
9POR	9.55 mc	9.55 mc	400 ohms	Ant. Term.	C6*	Oscillator	50
AM	1400 kc	1400 kc	.0002 mfd.	Ant. Term.	C9, C3, C2	Osc. Trans. Ant.	80
AM	600 kc (rock)	600 kc	.0002 mfd.	Ant. Term.	C10	Padder	10

MODELS 6336, 6436 CHASSIS 101.574

Approximate microvolts input for 500 milliwatts output See chart below

Position of Tone Control Both buttons out

Position of Dial Pointer with variable fully closed On first mark to left of 550 kc calibration mark.

Output meter reading to indicate 500 milliwatts 1.6 volts

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
AM	Closed	455 kc	.1 mfd.	6A8G Grid	T3, T1	If Output If Input	300
AM	500 kc	455 kc*	.0002 mfd.	Ant. Term.	C1*	Wave Trap	--
SW	15 mc (rock)	15 mc	400 ohms	Ant. Term.	C5	Translator	50
9POR	9.55 mc	9.55 mc	400 ohms	Ant. Term.	C6*	Oscillator	50
AM	1400 kc	1400 kc	.0002 mfd.	Ant. Term.	C9, C3, C2	Osc. Trans. Ant.	80
AM	600 kc (rock)	600 kc	.0002 mfd.	Ant. Term.	C10	Padder	10

IMPORTANT ALIGNMENT NOTES

* The generator should be adjusted for high output. The trimmer should be adjusted for minimum reading instead of the usual maximum reading. If the frequency of interfering station around 455 kc is known, the generator should be adjusted to the frequency of that station instead of to 455 kc.

† Repeat the C1 and C2 adjustments until perfect alignment is obtained. This will require going back and forth in these adjustments several times.

** If two peaks can be had, the correct one is with the trimmer screw further out; the other peak is the image.

Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

ALIGNMENT PROCEDURE

PRELIMINARY: For all Models and Chassis listed in tables below.

Output meter connection Across loud speaker voice coil

Output meter reading to indicate 500 milliwatts 0.86 volt

Generator ground lead connection Receiver chassis

Dummy antenna value to be in series with generator output See chart below

Connection of generator output lead See chart below

Generator modulation 30%, 400 cycles

Position of Volume Control Fully clockwise

Position of Tone Control HI

Position of Dial Pointer with variable fully closed Center of block to left of 550 kc calibration mark.

MODELS 6155, 6156, 6264 CHASSIS 101.549

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
AM	Closed	455 kc	.1 mfd.	6A8G Grid	T3, T1	If Output If Input	300
SW	15 mc (rock)	15 mc	400 ohms	Ant. Term.	C5	Translator	15
9POR	9.55 mc	9.55 mc	400 ohms	Ant. Term.	C6*	Oscillator	50
AM	1400 kc	1400 kc	.0002 mfd.	Ant. Term.	C9, C3, C2	Osc. Trans. Ant.	80
AM	600 kc (rock)	600 kc	.0002 mfd.	Ant. Term.	C10	Padder	10

MODELS 6156, 6159, 6192 CHASSIS 101.555, 101.555-1

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
AM	Closed	455 kc	.1 mfd.	6A8G Grid	T3, T1	If Output If Input	300
SW	15 mc (rock)	15 mc	400 ohms	Ant. Term.	C5	Translator	15
9POR	9.55 mc	9.55 mc	400 ohms	Ant. Term.	C6*	Oscillator	50
AM	1400 kc	1400 kc	.0002 mfd.	Ant. Term.	C9, C3, C2	Osc. Trans. Ant.	80
AM	600 kc (rock)	600 kc	.0002 mfd.	Ant. Term.	C10	Padder	10

IMPORTANT ALIGNMENT NOTES

The alignment must be done in the order given.

** Two peaks can be had, one with the trimmer screwed further out than the other. The correct adjustment is with the trimmer screwed further out. The other peak is the image.


Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

Schematic, Voltage
Chassis, Socket
Trimmers

SEARS, ROEBUCK & CO.

MODELS 6158, 6159, 6192
Chassis 101.555
101.555-1

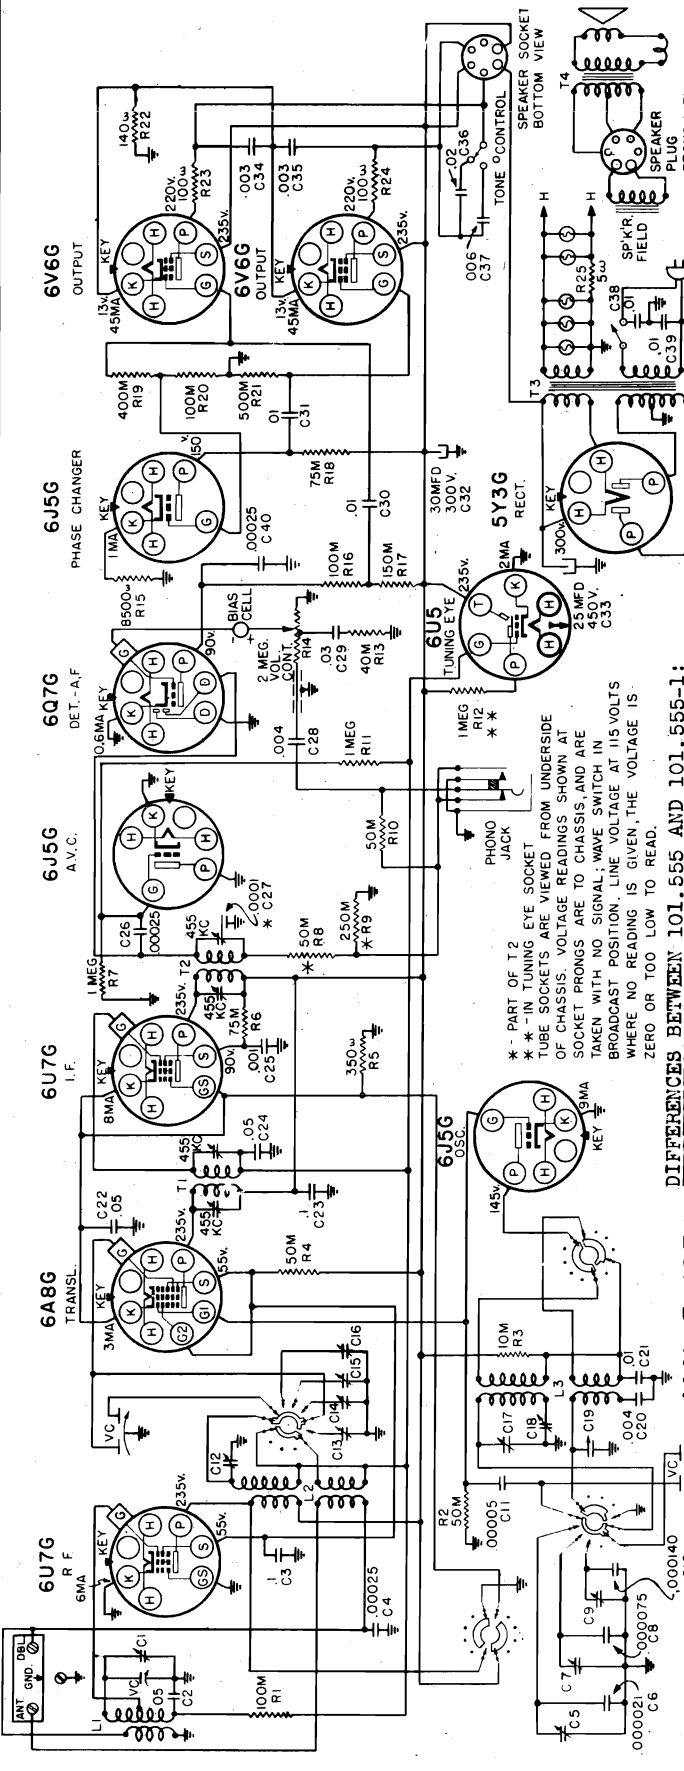

101.555 and 101.555-1 are the same electrically. The differences are in the design (and part numbers) of the escutcheons and knobs, as shown in the parts list. The push button escutcheon for Model 101.555 is removed by taking out the snap-in buttons, made accessible when the volume and tuning knobs are pulled off their shafts. The 101.555-1 push button escutcheon is removed by taking out the screws that hold it and the dial escutcheon.

DIFFERENCES BETWEEN 101.555 AND 101.555-1:

JAN. 5, 1939

INTERMEDIATE FREQUENCY

455 kc


FOR ALIGNMENT
SEE INDEX

FREQUENCY RANGES:

Band "AM"	540-1750 kc
Band "SW"	5.95-18.3 mc
Band "9"	9.4-9.7 mc
Band "11"	11.55-12.1 mc
Band "15"	14.4-15.4 mc

POWER OUTPUT:
Type Push pull beam tubes
Undistorted 6 watts
Maximum 10 watts

LOUD SPEAKER:
Type Dynamic
Size 12 and 15 inch
Field coil resistance 600 ohms
App. field coil voltage drop 65 V.

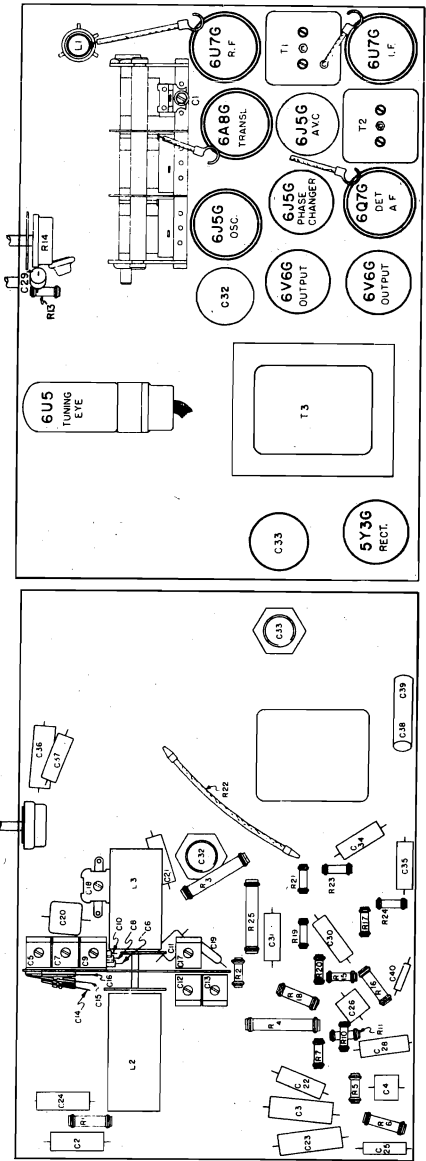


POWER SUPPLY:
All models available 105-125 volts, 50-60 cycle, 105 watts
All models available 105-125 volts, 25 cycle, 115 watts

MODELS 6160, 6161, 6163
6175.Ch.109.199-1

SEARS, ROEBUCK & CO.

Schematic, Voltage
Socket, Trimmers
Alignment

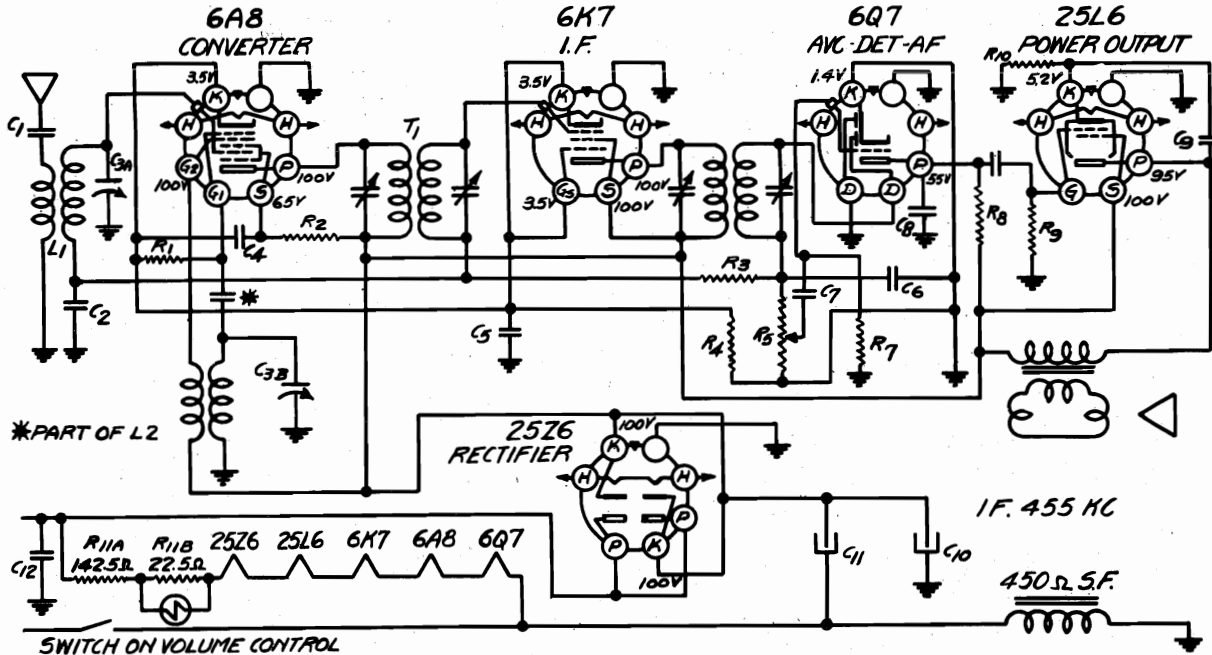


VOLTAGES INDICATED AT SOCKET TERMINALS ARE MEASURED WITH
1000 OHM PER VOLT METER, ON 117V LINE, WITH NO SIGNAL

JAN. 12, 1939

POWER SUPPLY

105-125 Volts 50-60 Cycle or D.C. 43 watts on 117 volt line.

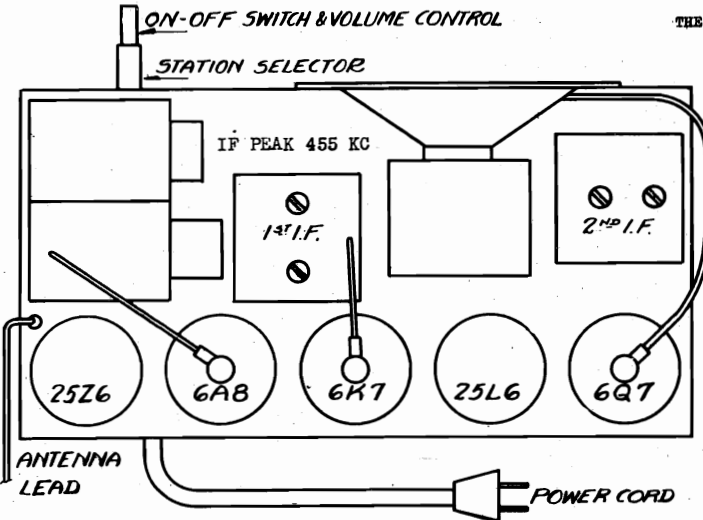

THE LINE CORD MUST NOT BE SHORTENED OR ALTERED IN ANY WAY.

FREQUENCY RANGE

Broadcast and other services 540 to 1720 KC.

ALIGNMENT FREQUENCIES

455 KC., 1720 KC., 1400 KC.

LOUD SPEAKER

Type.....Dynamic
Size.....2 1/2 inch
Field Resistance.....450 ohms

POWER OUTPUT

Type.....Beam Power
Undistorted.....1.2 watt
Maximum.....2 watts

ALIGNMENT PROCEDURE

See Tube Layout Diagram for location of trimmers.

Connect the Signal Generator ground to the receiver chassis thru a .1 mfd. condenser. Using a .05 mfd. condenser (SEE NOTE BELOW) in series with the high side of the generator, apply a 455 KC. signal to the grid of the 6K7 IF amplifier tube and align the 2nd IF transformer. Repeat for the 1st IF transformer, applying the signal to the grid of the 6A8 tube. Using an 85 to 100 mmf. condenser as a "dummy" antenna, turn the tuning condenser to minimum capacity, apply a 1720 KC signal to the antenna and tune in the signal with the oscillator trimmer. Set the generator to 1400 KC., tune in the signal and adjust the antenna trimmer. (The antenna and oscillator trimmers are located on top of the tuning condenser. see the Tube Layout Diagram).

NOTES

If considerable hum appears when the generator is connected to the 6K7 or 6A8 tubes, use a smaller condenser in series with the high side of the generator.
The "dummy antenna" used for aligning the oscillator and antenna should be connected to the receiver end of the antenna.
Use a weak signal from the generator. Strong signals tend to cause improper adjustments.

MECHANICAL SPECIFICATIONS

CONTROLS

Upper Knob.....Tuning
Lower Knob.. On-Off & Volume

CONTROL OPERATION

Direct Drive
Turn right to turn power on and to increase volume.

SEARS, ROEBUCK & CO.

MODEL 6155, 6156, 6254 CHASSIS 101.549

PUSH BUTTON TUNING

SETTING UP:

Leave the radio turned on for about 15 minutes before adjusting the push buttons. This "warming up" period will insure permanent and accurate settings.

1. Make a list of the stations that you want to set up for push button tuning. It is helpful to arrange the stations in the order of their frequency (kilocycles); that is, the station of lowest frequency will be #1, the station of next higher frequency #2, etc. The top left push button can be used for station #1, the lower left one for station #2, the next one for station #3, etc. If you wish, short wave stations that can be tuned in on a SPREAD BAND scale can be set up for push button tuning. The stations selected must give strong and reliable reception.

2. Remove the four screws that hold the plate through which the push buttons protrude, and remove the plate. (This plate is called the "escutcheon".)

3. Push the tuning knob in and turn it so that the dial pointer comes to the left end of the dial. Engage the small screw driver, supplied with the slotted shaft that is between the tuning knob and the push buttons. Unlock the mechanism by pushing the shaft in and unscrewing it (turn counter-clockwise) about four turns. Then remove the screw driver. Use the small screw driver, supplied. Do not use a large handled one because too much force might damage the mechanism.

4. Push the button that you wish to use for your #1 station, all the way in and hold it in firmly. Push the tuning knob in and turn it until your #1 station is tuned in exactly, as indicated by the tuning eye. Be as exact as possible in tuning your station since this will determine how accurately your station will be tuned whenever you use the push button. Then let go of the push button before turning the tuning knob again. If properly done, the tuning eye indication will not change when you let go of the push button.

5. Push in your #2 button. Hold it in firmly and tune in your #2 station accurately. Then let go of the push button; then the tuning knob. Proceed in the same manner for the other stations on your list.

6. After the last station has been set up, lock the mechanism by pushing the slotted shaft in and screwing it (turn clockwise) using the small screw driver, supplied. (Pushing the slotted shaft in will release the dial pointer. The dial pointer will move to the right end of the dial in the slotted shaft's path. Then move the screw driver. If the slotted shaft remains pushed in when the screw driver is removed, turning it back and forth very slightly will release it.)

After locking the mechanism, test the setting of each button by pushing it in. Then see if the station can be tuned still more accurately by using the tuning knob. Increased accuracy of tuning with the knob will be indicated by a narrower shadow of the tuning eye. If you find any stations that have not been correctly set up, unlock the mechanism, as described in Step 3, and readjust the setting. Be sure to lock the mechanism again before tuning any stations.

7. Punch out the call letters of your desired stations from the call letter sheets supplied. Insert the call letters in the recesses in the front of the push buttons. Cover the call letters with the clear celluloid tabs supplied. Replace the escutcheon.

8. You may change your choice of stations at any time by unlocking the mechanism as described in Step 3 and adjusting the button to the new station, as described in Step 4. Then relock the mechanism as described in Step 6. The call letters of the new station should be inserted in the proper push button.

OPERATION:

Push the button, indicated for your desired station, all the way in. Your station then will be tuned in. If you have selected short wave stations for push button tuning, be sure the band switch is turned to the proper band. The button will remain part way in, indicating what station is tuned in, until you push another button or until you push the tuning knob

MODELS 6158, 6159, 6192 CHASSIS 101.555, 101.555-1; 6368 CHASSIS 101.582, 6382 CHASSIS 101.594; 6497 CHASSIS 101.595

PUSH BUTTON TUNING MECHANISM:

The adjustment for each push button is locked or unlocked by tightening or loosening the slotted screws made accessible when the push button knob is pulled off of its plunger. Stations are set up by unlocking the mechanism, tuning in the station, pushing in the plunger (turning clockwise), and locking the mechanism by pushing the slotted shaft in. The slotted shaft is held in place by the screw driver. Locking the adjustment by holding the screw driver lightly in the screw head allows the spring tension to hold the plunger against the screw driver.

MODELS 6133, 6141, 6139, 6137, 6202, 6203, 6253, 6252, 6199 CHASSIS 101.535

CONNECTION OF EARPHONE AND PHONOGRAPH PICKUP JACKS:

Part number 101E195E1 Jack, for connection of earphones or phonograph pick-up, can be ordered directly from source 101. Retail selling price is 75¢.

The schematic diagram on Page 8 shows the connections. If a crystal pick-up is used, a filter composed of a .01 mfd. condenser and a 100M ohm resistor connected in series, should be connected across the pick-up to prevent excessive bass response. This filter will also act as a partial scratch filter.

PUSH BUTTON TUNING



SETTING UP:

Leave the radio turned on for about 15 minutes before adjusting the push buttons. This "warming up" period will insure permanent and accurate settings.

1. Make a list of the stations that you want to set up for push button tuning. It is advisable, but not necessary, to arrange the stations in the order of their frequency (kilocycles); that is, the station of lowest frequency will be #1, the station of next higher frequency #2, etc. The top left push button can be used for station #1, the lower left one for station #2, etc. If you wish, short wave stations that can be tuned in on a SPREAD BAND scale can be set up for push button tuning. The stations selected must give strong and reliable reception.

2. Remove the four screws that hold the plate through which the push buttons protrude, and remove the plate. (This plate is called the "escutcheon".) If your radio is a table model (not a console), remove the snap-in button at the right side of the cabinet. See Fig. 1.

3. Push the tuning knob in and turn it so that the dial pointer comes to the right end of the dial. If your radio is a table model, a key, illustrated in Fig. 2, will be found in the Instruction Leaflet envelope. Insert this key in the hole in the side of the cabinet from which the snap-in button was removed and engage the key with the slot at the end of the tuning mechanism's screws (turn counter-clockwise) the key a few turns, unlocking the mechanism. (A screw driver can be used for unlocking the mechanism instead of the key supplied.)

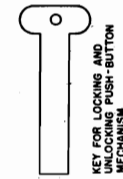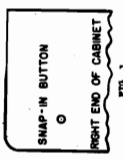

4. Push the button that you wish to use for your #1 station, all the way in and hold it in firmly. Push the tuning knob in and turn it until your #1 station is tuned in exactly. Then let go of the push button. Pushing the tuning knob in will not turn the tuning knob until you have let go of the button. Be as exact as possible in tuning your station since this will determine how accurately your station will be tuned whenever you use the push button.

5. Push in your #2 button. Hold it in firmly and tune in your #2 station accurately. Then let go of the push button and then the tuning knob. Proceed in the same manner for the other stations on your list.

6. When all of the stations have been set up, push the tuning knob in and turn it so that the dial pointer comes to the left end of the dial. Then lock the mechanism by tightening (turning clockwise) the wing nut for console models or by using the key for table models. If yours is a table model, replace the snap-in button in the side of the cabinet.

7. Punch out the call letters of your desired stations from the call letter sheets supplied. Insert the call letters in the celluloid holders at the back of the escutcheon. Be sure to lock the call letters so that they are opposite their respective push buttons. Then replace the escutcheon.

8. You may change your choice of stations at any time by unlocking the mechanism as described in Step 3 and adjusting the button to the new station, as described in Step 4. Then relock the mechanism as described in Step 6. The call letters of the new station should be inserted in the call letter holder in their proper position.

OPERATION:

Push the button, indicated for your desired station, all the way in. Your station then will be tuned in. If you have selected short wave stations for approximate push button tuning, be sure the band switch is turned to the proper band.

MODELS 6177, 6178, 6179
6185, Ch. 109.279
Schematic, Voltage
Alignment, Trimmers

SEARS, ROEBUCK & CO.

Socket, Notes
CHASSIS 109.279-1, -2
Alignment, Trimmers
Socket, Notes

POWER SUPPLY
105-125 Volts 50-60 Cycle or D.C....
..56 watts on 117 volt line.

LOUD SPEAKER
Type.....Dynamic
Size.....3 1/2 inch
Field Resistance.....450 ohms


POWER OUTPUT
Type.....Beam Power
Undistorted.....1.0 watt
Maximum.....1.25 watts

FREQUENCY RANGE
Broadcast and other services 540 to 1720 KC.

ALIGNMENT FREQUENCIES
455 KC., 1720 KC., 1400 KC.

CONTROLS
Upper Knob.....Tuning
Lower Knob.....On-Off & Volume

CONTROL OPERATION
Direct Drive
Turn right to turn power on and to
increase volume.

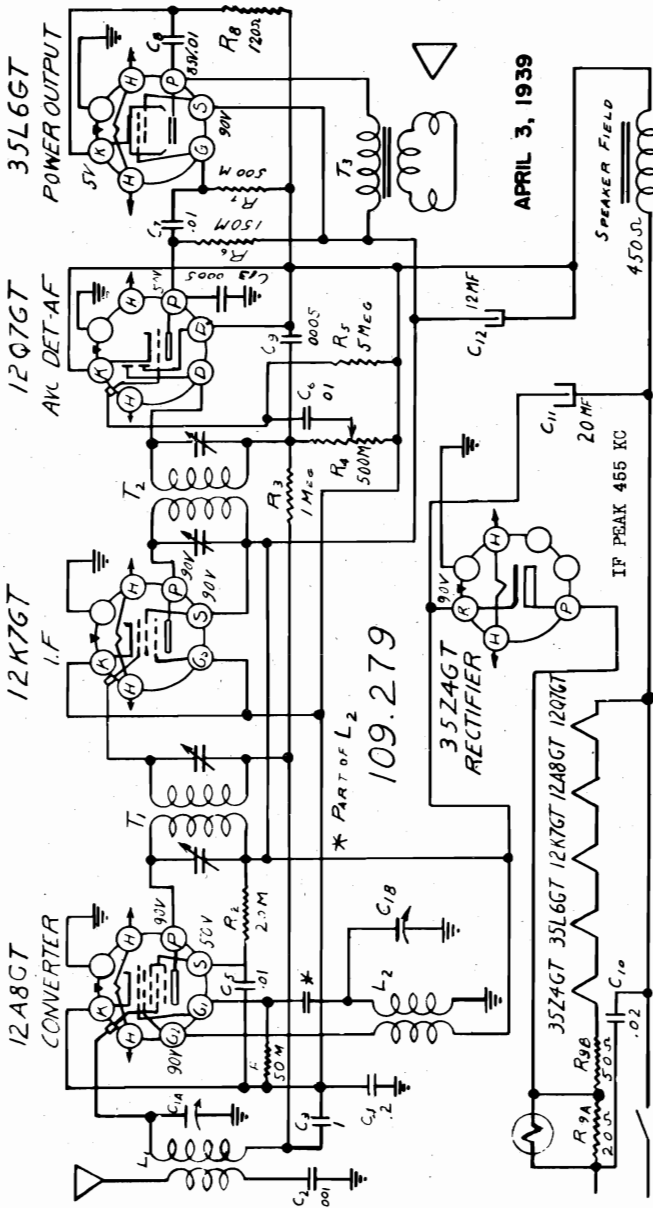

VOLTAGES INDICATED AT SOCKET TERMINALS ARE MEASURED WITH
1000 OHM PER VOLT METER, ON 117V LINE, WITH NO SIGNAL

Connect the signal generator ground to the receiver chassis thru a .1 mfd. condenser. Using a .05 mfd. condenser in series with the high side of the generator, apply a 455 kc signal to the grid of the 12K7GT IF amplifier tube and adjust the 2nd IF transformer. Repeat for the 1st IF transformer, applying the signal to the grid of the 12A8GT tube.

CHASSIS 109.279 ONLY

Using an 85 to 100 mfd. condenser as a dummy antenna, turn the tuning condenser to minimum capacity. Apply 1720 kc. signal to the antenna and turn in the signal with the oscillator trimmer. Set the generator to 1400 kc. tune in the signal with the antenna trimmer. (The antenna and oscillator trimmers are located on top of the tuning condenser.)

CHASSIS 109.279-1 and 109.279-2 ONLY


Turn the tuning condenser all the way to the right (minimum capacity), apply a 1720 kc signal to the grid of the 12A8GT tube and adjust the oscillator trimmer. The antenna trimmer may be adjusted by tuning in a station near 1400 kc and adjusting the antenna trimmer for maximum signal. To align the antenna with signal generator, connect a single turn loop (about a foot square) to the generator in series with a 400 ohm resistor or a 100 mfd. condenser. Place the loop about one foot in back of the receiver, set the generator at 1400 kc. tune in the signal from the generator and adjust the antenna trimmer.

NOTE: ALL MODELS

If considerable hum appears when the signal generator is connected to the receiver, use smaller condenser series with the generator. In some cases it will be necessary to connect the generator ground to B- (athode terminal of the 12Q7GT socket) instead of to the chassis.


Use a weak signal from the generator, strong signals tend to cause improper adjustments.

CHASSIS 109.279,
109.279-1 AND 109.279-2

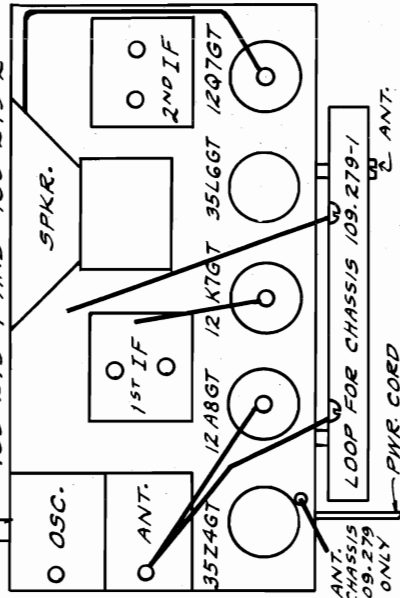


SEARS, ROEBUCK & CO.

MODEL 6190, Ch. 126.209
Schematic, Voltage
Drive Cord Data

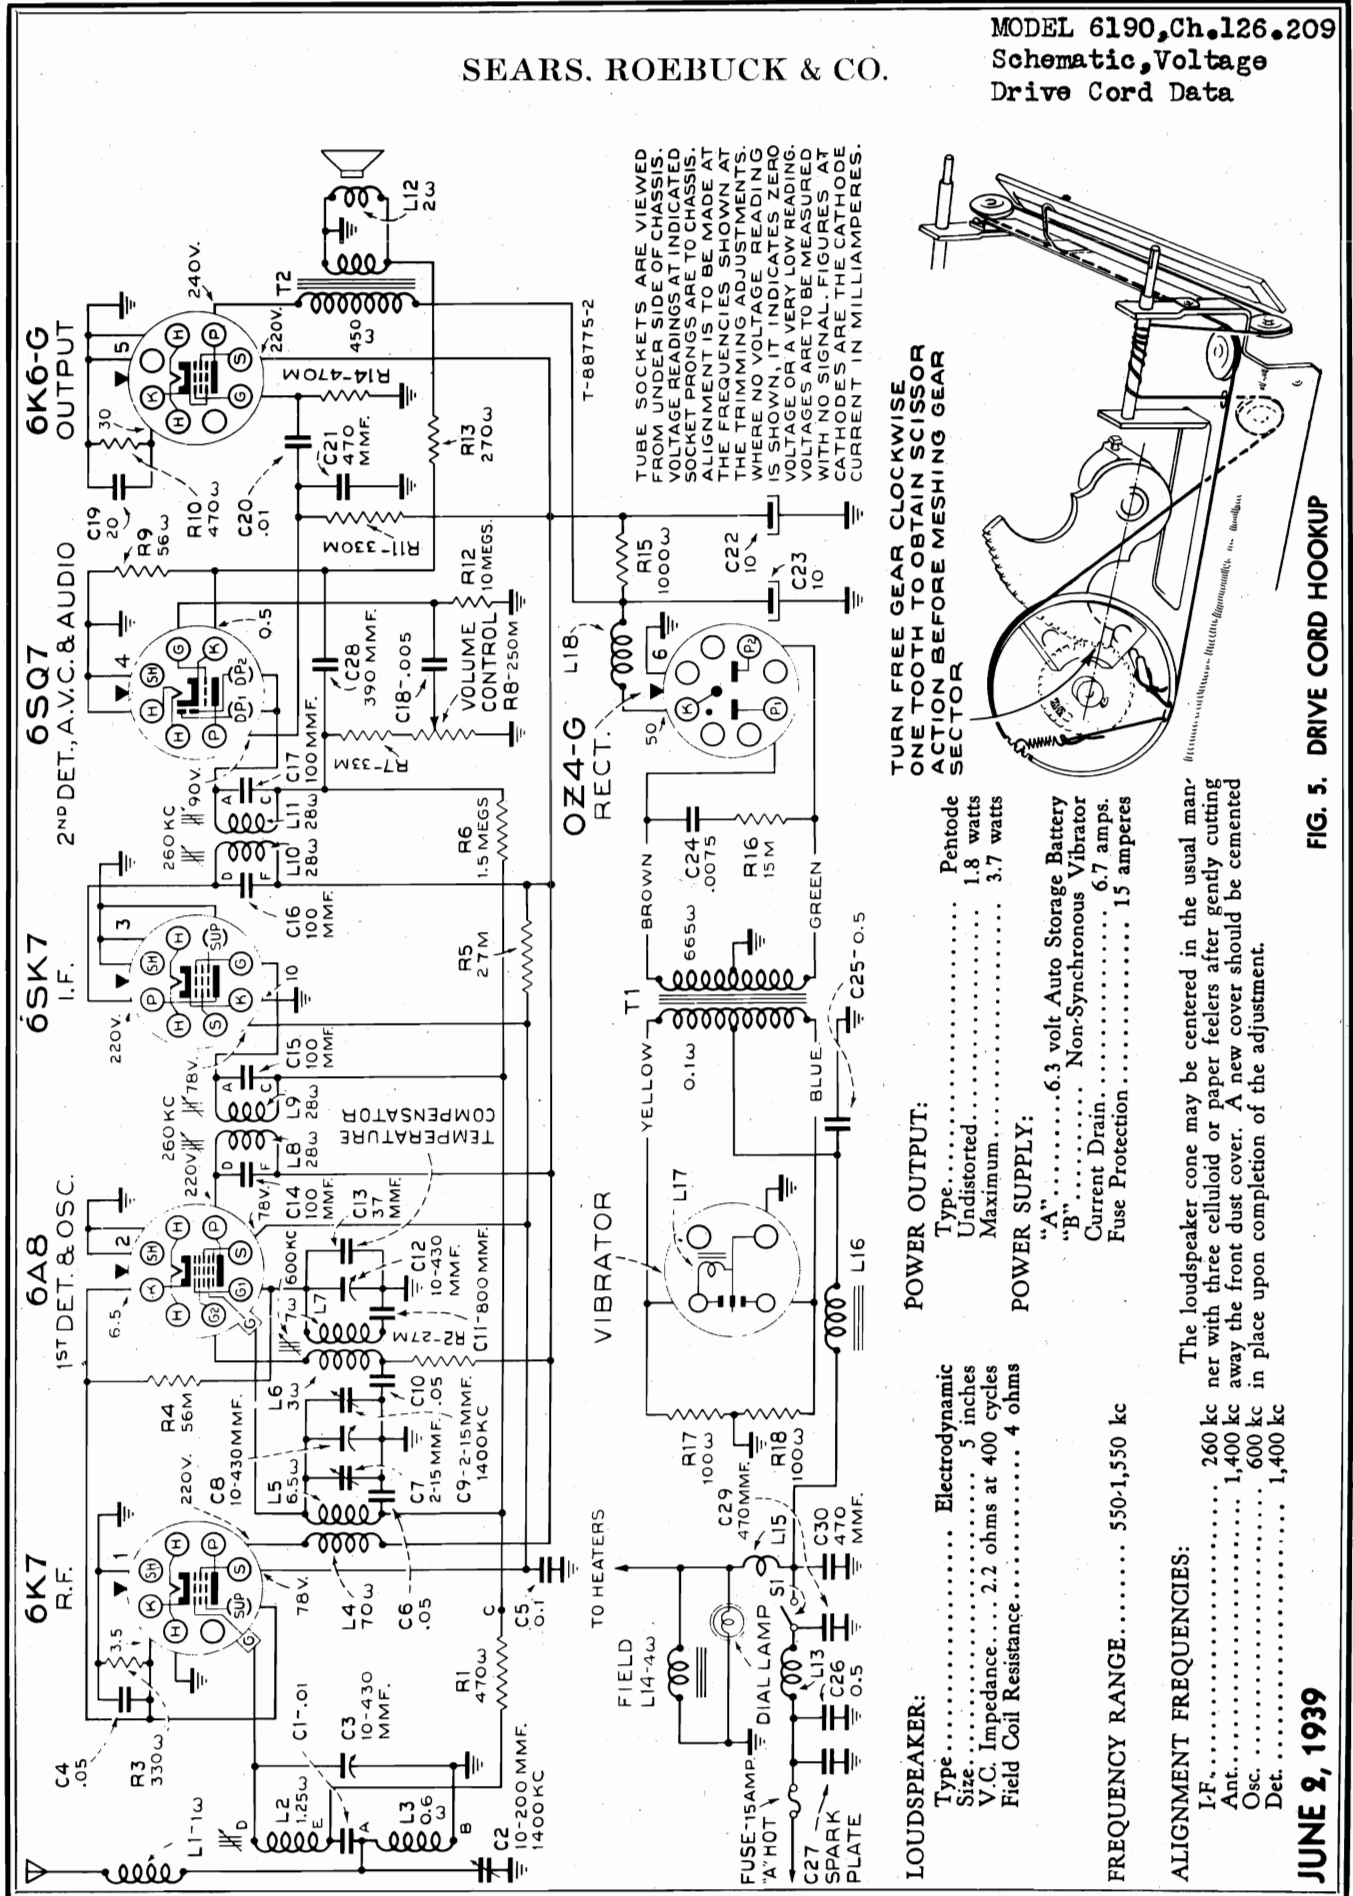

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. ALIGNMENT IS TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMING ADJUSTMENTS. WHERE NO VOLTAGE READING IS SHOWN, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. VOLTAGES ARE TO BE MEASURED WITH NO SIGNAL. FIGURES AT CATHODES ARE THE CATHODE CURRENT IN MILLIAMPERES.

TURN FREE GEAR CLOCKWISE ONE TOOTH TO OBTAIN SCISSOR ACTION BEFORE MESHING GEAR SECTOR

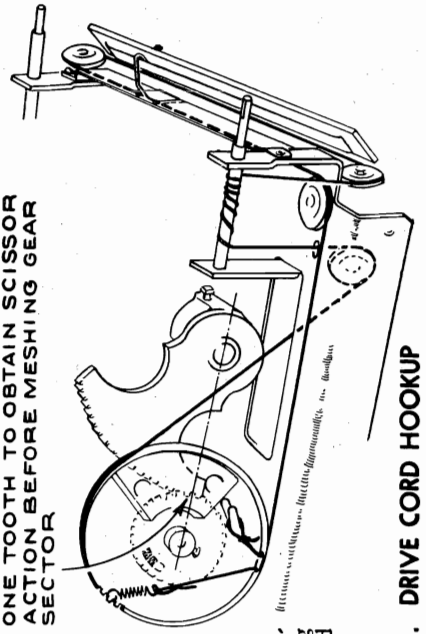

POWER OUTPUT:

Type	Pentode
Undistorted	1.8 watts
Maximum	3.7 watts

POWER SUPPLY:

"A"	.63 volt Auto Storage Battery
"B"	Non-Synchronous Vibrator
Current Drain	6.7 amps.
Fuse Protection	15 amperes

LOUDSPEAKER:

Type	Electrodynamic
Size	5 inches
V.C. Impedance	2.2 ohms at 400 cycles
Field Coil Resistance	4 ohms

FREQUENCY RANGE..... 550-1,550 kc

ALIGNMENT FREQUENCIES:



I.F.	260 kc
Ant.	1,400 kc
Osc.	600 kc
Det.	1,400 kc

The loudspeaker cone may be centered in the usual manner with three celluloid or paper feelers after gently cutting away the front dust cover. A new cover should be cemented in place upon completion of the adjustment.

JUNE 2, 1939

MODEL 6190
Chassis Wiring
Socket, Trimmers

SEARS, ROEBUCK & CO.

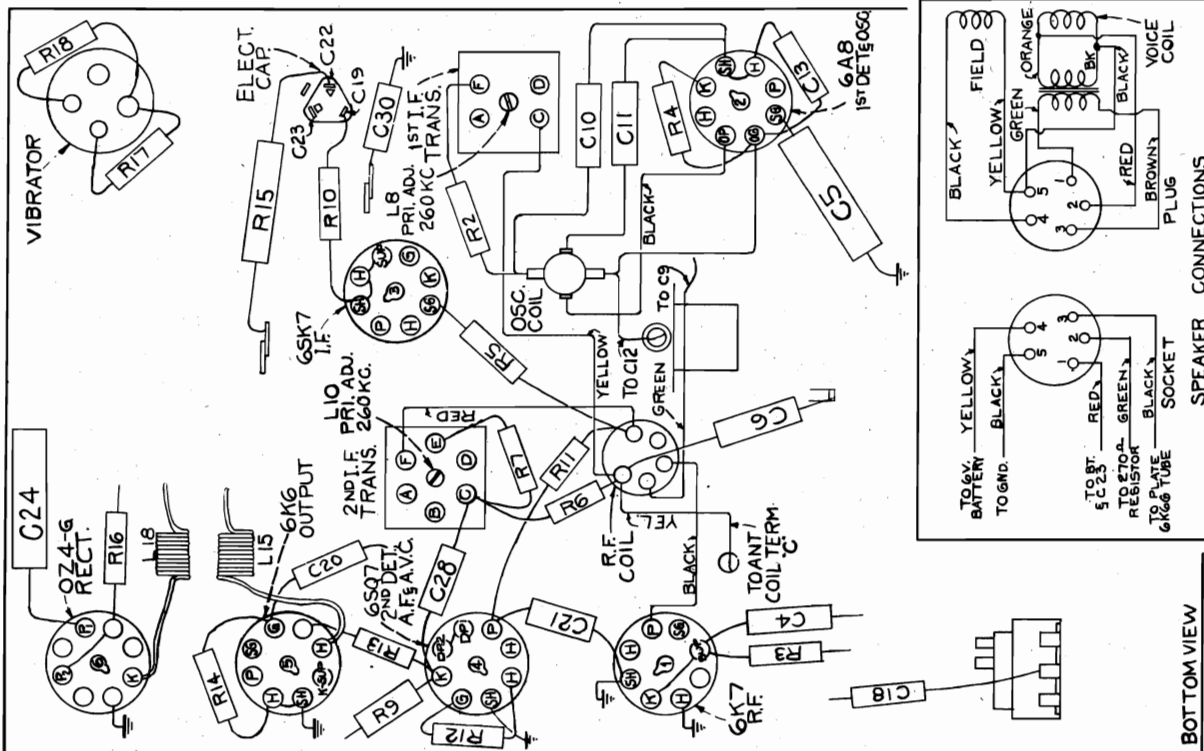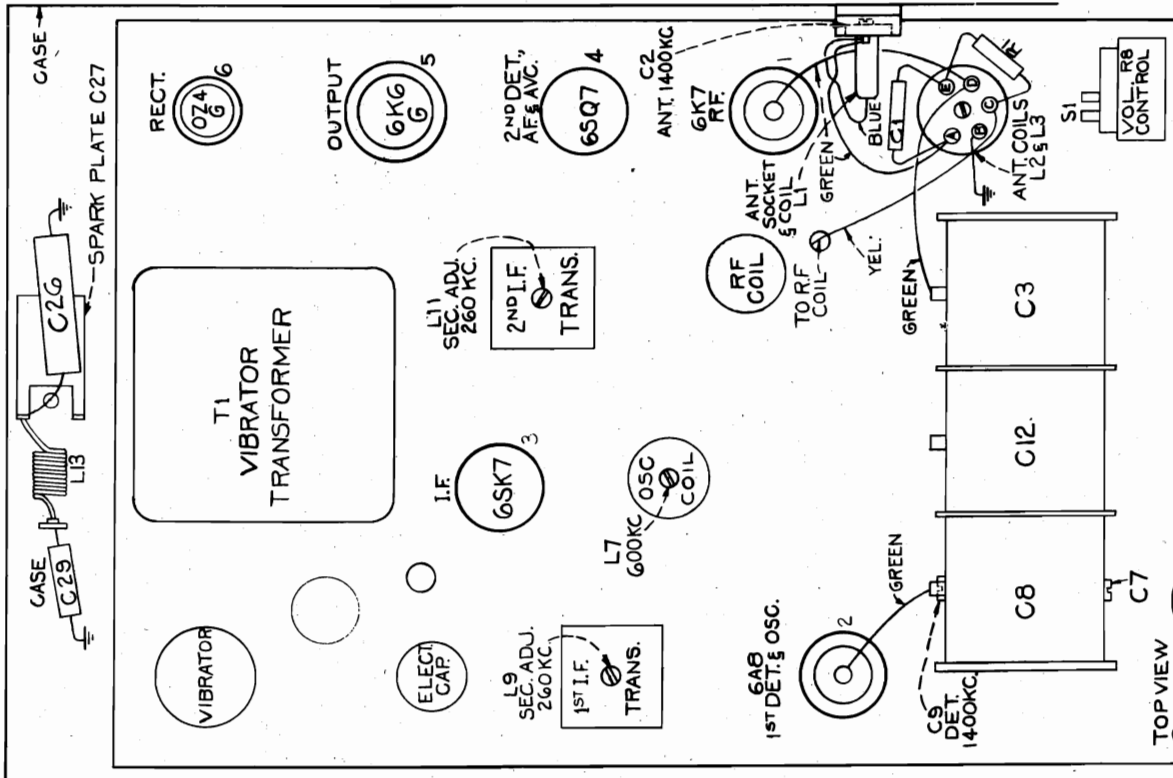

**MODEL 6301
Alignment**

SEARS. ROEBUCK & CO.

**MODEL 6190
Alignment, Tuner
Assembly**

Antenna Filter:

A filter is included in the antenna circuit. Being completely shielded, it prevents radiating ignition interference within the set. It also reduces the possibility of picking up vibrator interference. As shown in Figure 4, the filter unit is mounted inside a steel shell which in turn is welded to the chassis. The shielded antenna lead-in makes contact with the filter unit within the steel shell and is held in place by a bayonet type connector.

Noise Elimination:

The presence of noise is generally due to the high intensity of electrical disturbances from the car ignition system in relation to strength of desired station. The reduction of such noise should be carried out methodically by: (1) increasing effectiveness of the antenna and providing for protection against stray pickup; (2) subduing the interference at its source; and (3) installation of filter devices to prevent transmission of interference into the receiver circuits.

Antenna—Should be located well away from engine compartment to avoid ignition disturbance, and as far as possible from front wheels to eliminate "wheel static." Lead-in should be completely shielded and shield grounded to frame of car at as many points as possible. It is very essential that the antenna be electrically "matched" to the receiver input—this is accomplished by adjustment of the antenna trimmer and the operations explained under "Antenna Circuit."

Ignition—Radio frequency interference is created in the secondary and primary ignition circuits, usually at each point where a repeating contact, or spark, is made. The most prominent sources on the average car are: (a) Distributor—add the suppressor/resistor in the center or common high-voltage lead; also have points cleaned and adjusted, if necessary; (b) Generator—connect an 0.5 mfd. shielded capacitor directly across generator output; also see that commutator is smooth and brushes properly seated for minimum sparking; (c) Gasoline Gauge—on gauges having an electrical contact, an 0.5 mfd. shielded capacitor may be required between the terminal and car frame; (d) Temperature Gauge—where a contacting device is used, interference can be eliminated with an 0.5 mfd. capacitor connected between the circuit and car frame; (e) Spark Plugs—suppressors in leads to spark plugs may possibly be required in extreme cases of interference, on older cars, and in localities where signals are very weak; see that spark plugs are properly adjusted and are not leaky; (f) Ammeter—the supply for the receiver is usually taken from this point; a 0.5 mfd. capacitor from the "hot" lead will prevent passage of interference into the set over this circuit; (g) Dome Light—wiring to the dome light should be shielded; and an 0.5 mfd. capacitor attached between the circuit and car frame, preferably at the point where lead enters the corner post; (h) Wiring—primary and secondary ignition wiring should be physically separated; possible points of poor insulation should be checked, and all connections must be secure.

Car Chassis Bonds—Intermittent electrical connection between members of the car chassis, caused by vibration, will cause noise interference. Flexible bonding connections to the frame will correct this condition. The most sources are: (a) transmission case; (b) muffler; (c) steering column; (d) cylinder head; (e) dash controls; (f) rear springs; (g) brake cables; (h) hood cover; (i) receiver case.

Wheel Static—Interference from this source generally originates in the front wheels, and is related to road surface composition, and atmospheric conditions. Spring devices are available for attachment to the wheels for making a permanent connection between the hub and axle; these should be installed where required. The wheel bearings should be checked for proper adjustment. Patches in tires will frequently cause wheel static; exchange front and rear wheels. Be sure antenna is well separated from wheels of car.

Car Chassis Bonds—Intermittent electrical connection between members of the car chassis, caused by vibration, will cause noise interference. Flexible bonding connections to the frame will correct this condition. The most sources are: (a) transmission case; (b) muffler; (c) steering column; (d) cylinder head; (e) dash controls; (f) rear springs; (g) brake cables; (h) hood cover; (i) receiver case.

Wheel Static—Interference from this source generally originates in the front wheels, and is related to road surface composition, and atmospheric conditions. Spring devices are available for attachment to the wheels for making a permanent connection between the hub and axle; these should be installed where required. The wheel bearings should be checked for proper adjustment. Patches in tires will frequently cause wheel static; exchange front and rear wheels. Be sure antenna is well separated from wheels of car.

Push Button Adjustment:

The push buttons should be adjusted for five favorite stations after the receiver is installed and operating.

Any standard broadcast stations may be chosen. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:

1. Loosen the push buttons one-half turn.
2. Using the tuning control, accurately tune in the first station.
3. With station accurately tuned in, press the first push button fully in and then gently release so as not to jar mechanism.
4. Tighten the push button securely with fingers. Do not force with pliers.
5. Proceed in same manner to adjust the other four push buttons.

Adjustment of Push Button Mechanism:

The mechanism should be adjusted so that when using either manual or push button tuning, it operates positively and without backlash or bind. The following hints will be found helpful in adjusting the mechanism properly.

1. With the gang condenser in full mesh, the sector gear should have the two end teeth fully meshed in the scissor gear, as shown in the illustration.
2. The position of the sector gear on the rocker-plate shaft should be adjusted so that there is clearance between the rocker-plates and the frame of the push button mechanism at both extremities of gang rotation. Thus correct adjustment prevents the rotation of the gang being limited by the rocker plates touching the frame.
3. The drive cord should have 6 1/2 turns around the tuning shaft as shown in the illustration. Three degrees of adjustment of the tension on the drive cord may be obtained by use of the three positions for connecting the drive-cord-tension spring to the drive-cord drum on the condenser shaft as shown.
4. The push-arms, rocker-plate shaft, and pulleys should be lubricated with light grease (sparingly). Care should be taken to keep the lubricant off of the drive cord.

ALIGNMENT PROCEDURE

PRELIMINARY:

Output meter connections..... Across speaker voice coil
Output meter readings to indicate 1 watt..... 1.5 volts
Generator ground lead connections..... To chassis
Dummy antenna value to be in series with generator output..... See chart below
Connection of generator output lead..... See chart below
Generator modulation..... 30%, 400 cycle
Position of Volume Control..... Fully clockwise
Chassis must be in its case when aligning R-F circuit.

Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connections	Adjustment Symbol	Circuit Adjusted	Approx. Microvolts
No Signal	260	.01 mfd.	6SK7 Grid (No. 4 pin)	L-10, L-11	2nd I.F. Trans.	3500; 15,000
No Signal	260	.01 mfd.	6A8 Grid	L-8, L-9	1st I.F. Trans.	500; 600
600 kc	600 kc	100 mmfd.*	Antenna Connector	L-7 ↑	Osc.	1.3
1,400 kc Signal	1,400 kc	100 mmfd.*	Antenna Connector	C9 ↑ C7 ↓ C2 ↑ C1 ↓	Det. Ant.	1
600 kc (rock)	600 kc	100 mmfd.*	Antenna Connector	L-7 ↑	Osc.	1.3
1,400 kc Signal	1,400 kc	100 mmfd.*	Antenna Connector	C9 ↑ C7 ↓ C2 ↑ C1 ↓	Det. Ant.**	1

IMPORTANT ALIGNMENT NOTES

* Make the generator connection through a 100 mmfd. (.0001) capacity inserted at the antenna connector of the receiver. The lead from the signal generator to the 100 mmfd. capacitor may be shielded if desired, but no shielding should be used between capacitor and antenna connector.

† These adjustments should be made with unit enclosed in its shielded case, through holes provided for adjustment purposes.
** Final adjustment of C-2 must be made after the receiver has been installed and the antenna connected. See "Antenna Circuit" in "Service Hints."

Each step of the alignment should be repeated in its original order for greater accuracy. Always keep the output from the generator at its lowest possible value, to prevent the A.V.C. action of the receiver from interfering with accurate alignment.

Alignment adjustment locations are shown on the top and bottom parts location views of chassis. Only the dummy antenna indicated in the chart for any particular frequency should be used. Grid cap leads should remain in place during alignment.

Values shown under "Microvolts" are only approximate.

Antenna Circuit:

It is very important that these instructions be followed when installing the receiver.

The antenna circuit is designed to work with an antenna having a total capacity including the shielded lead-in not to exceed 150 mmfd. If an antenna having a larger capacity is to be used, it will be necessary to add a capacitor in series with the lead from the antenna filter L-1 to the antenna coil terminal ("A"). Where a "Double Under-the-Running Board" type of antenna is to be used having a capacity of approximately 200 mmfd., the capacitor added should be approximately 300 mmfd. The insulated running board type having an approximate capacity of 550 mmfd. will require a capacitor of approximately 150 mmfd. Cars using an insulated steel top of approximately 3,500 mmfd. will require a series capacitor of 120 mmfd.

After installation and with antenna connected, tune in a weak station near 1,400 kc and adjust compensator trimmer C-2 for maximum signal output. This trimmer is accessible by removing plug button near antenna jack on side of receiver. If a maximum (peak) signal output cannot be obtained in the range of the antenna trimmer, the effective capacity should be checked and compensated for by varying series capacity as described above.

FOR MODEL 6301 CHASSIS
126-211.


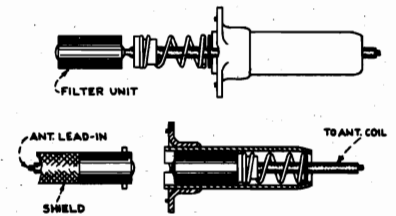


FIG. 4. ANTENNA FILTER

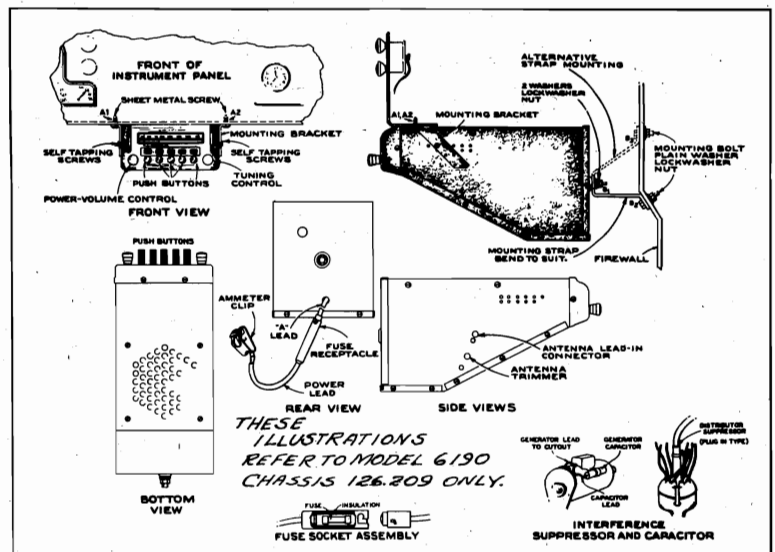


MODELS 6208, 6209
Chassis 101.554
Schematic, Voltage

SEARS, ROEBUCK & CO.

Chassis, Socket
Trimmers, Tuner

FOR ALIGNMENT SEE INDEX

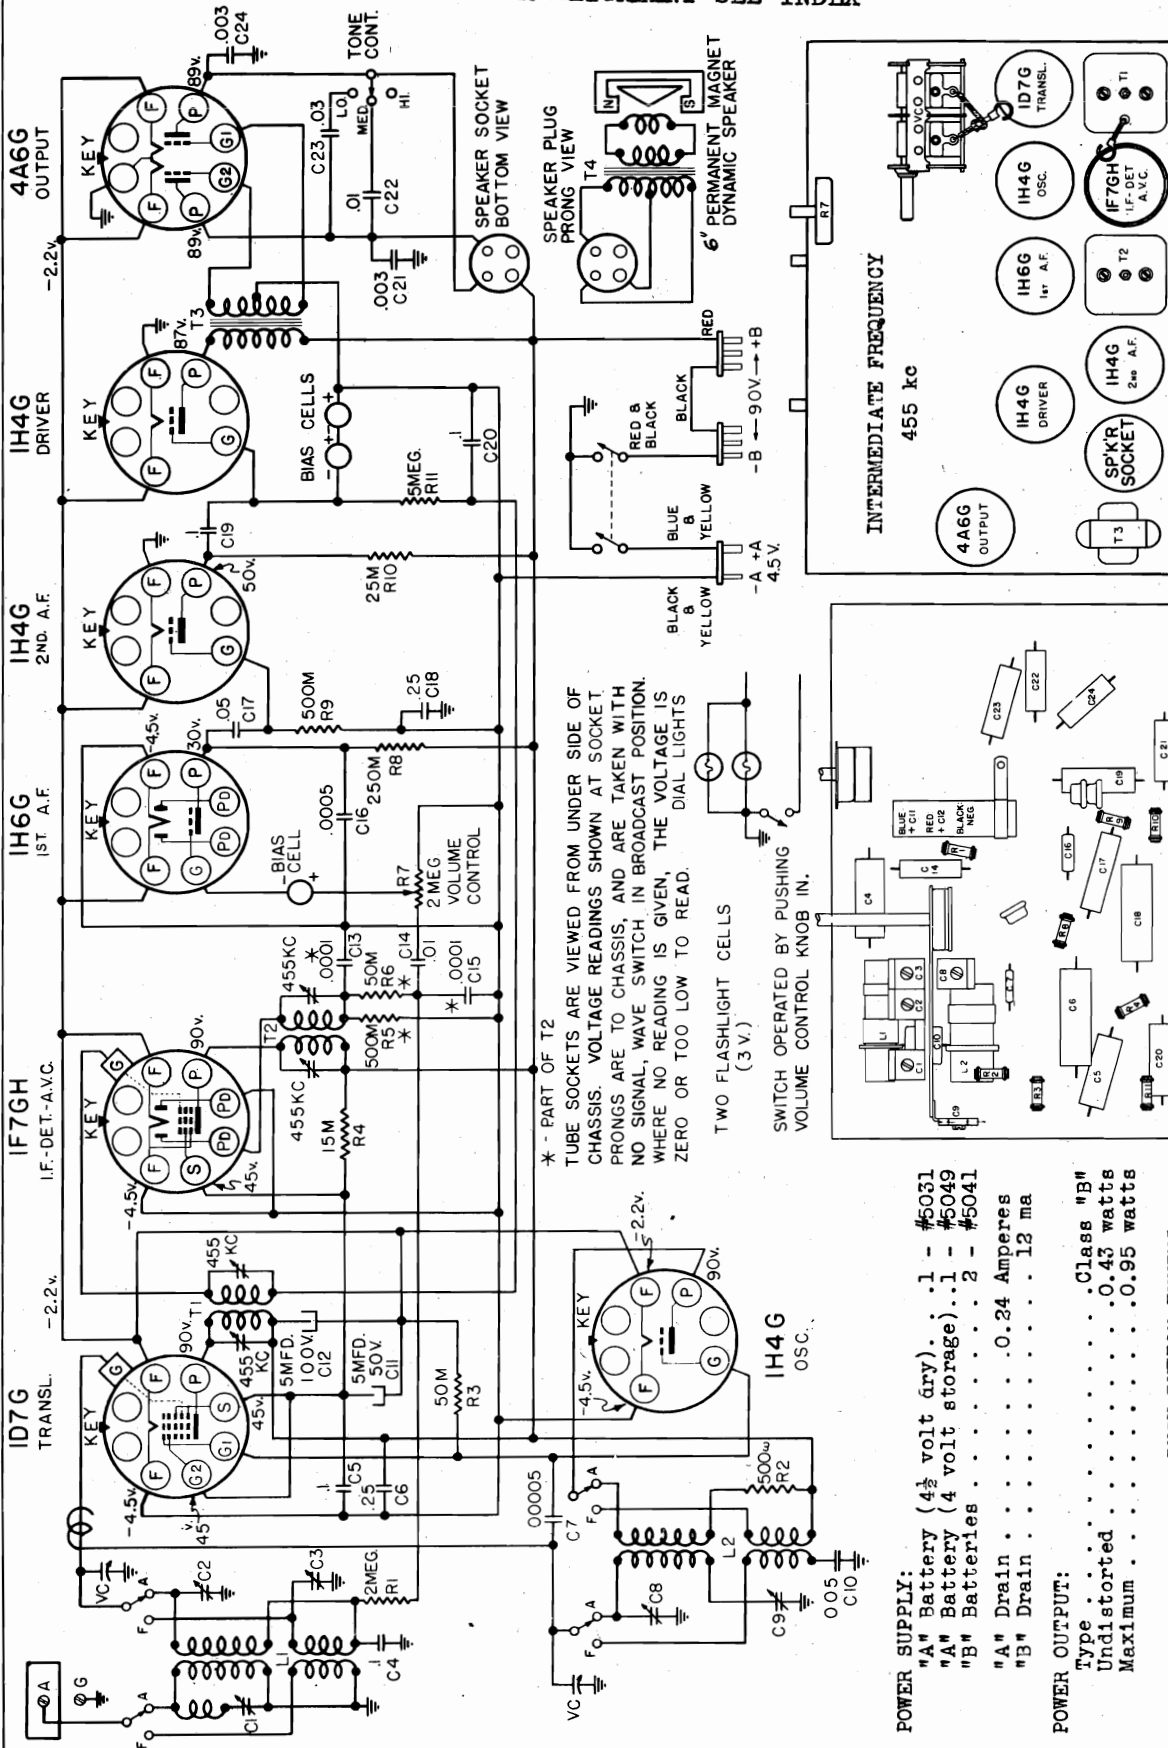

* - PART OF T2
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL, WAVE SWITCH IN BROADCAST POSITION. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

TWO FLASHLIGHT CELLS (3 V.)
SWITCH OPERATED BY PUSHING VOLUME CONTROL KNOB IN.

POWER SUPPLY:

"A" Battery (4½ volt dry) . . . 1 - #5031
 "A" Battery (4 volt storage) . . . 1 - #5049
 "B" Batteries 2 - #5041
 "A" Drain 0.24 Amperes
 "B" Drain 12 ma

POWER OUTPUT:

Type Class "B"
 Undistorted 0.45 watts
 Maximum 0.95 watts

PUSH BUTTON TUNING:


The push button mechanism is locked and unlocked by tightening or loosening the wing nut at the end of the mechanism. (A separate key is supplied in the case of table models instead of the wing nut.) Stations are set up by holding the button all the way in and accurately tuning to the station. Then release the button. After all of the buttons have been set up, lock the mechanism securely to prevent slipping.

JAN. 3, 1939

FOR ALIGNMENT SEE INDEX

SEARS, ROEBUCK & CO.



MODELS 6214, 6270
 Chassis 101.552, 101.552A
 Schematic, Voltage, Chassis
 Socket, Trimmers, Notes

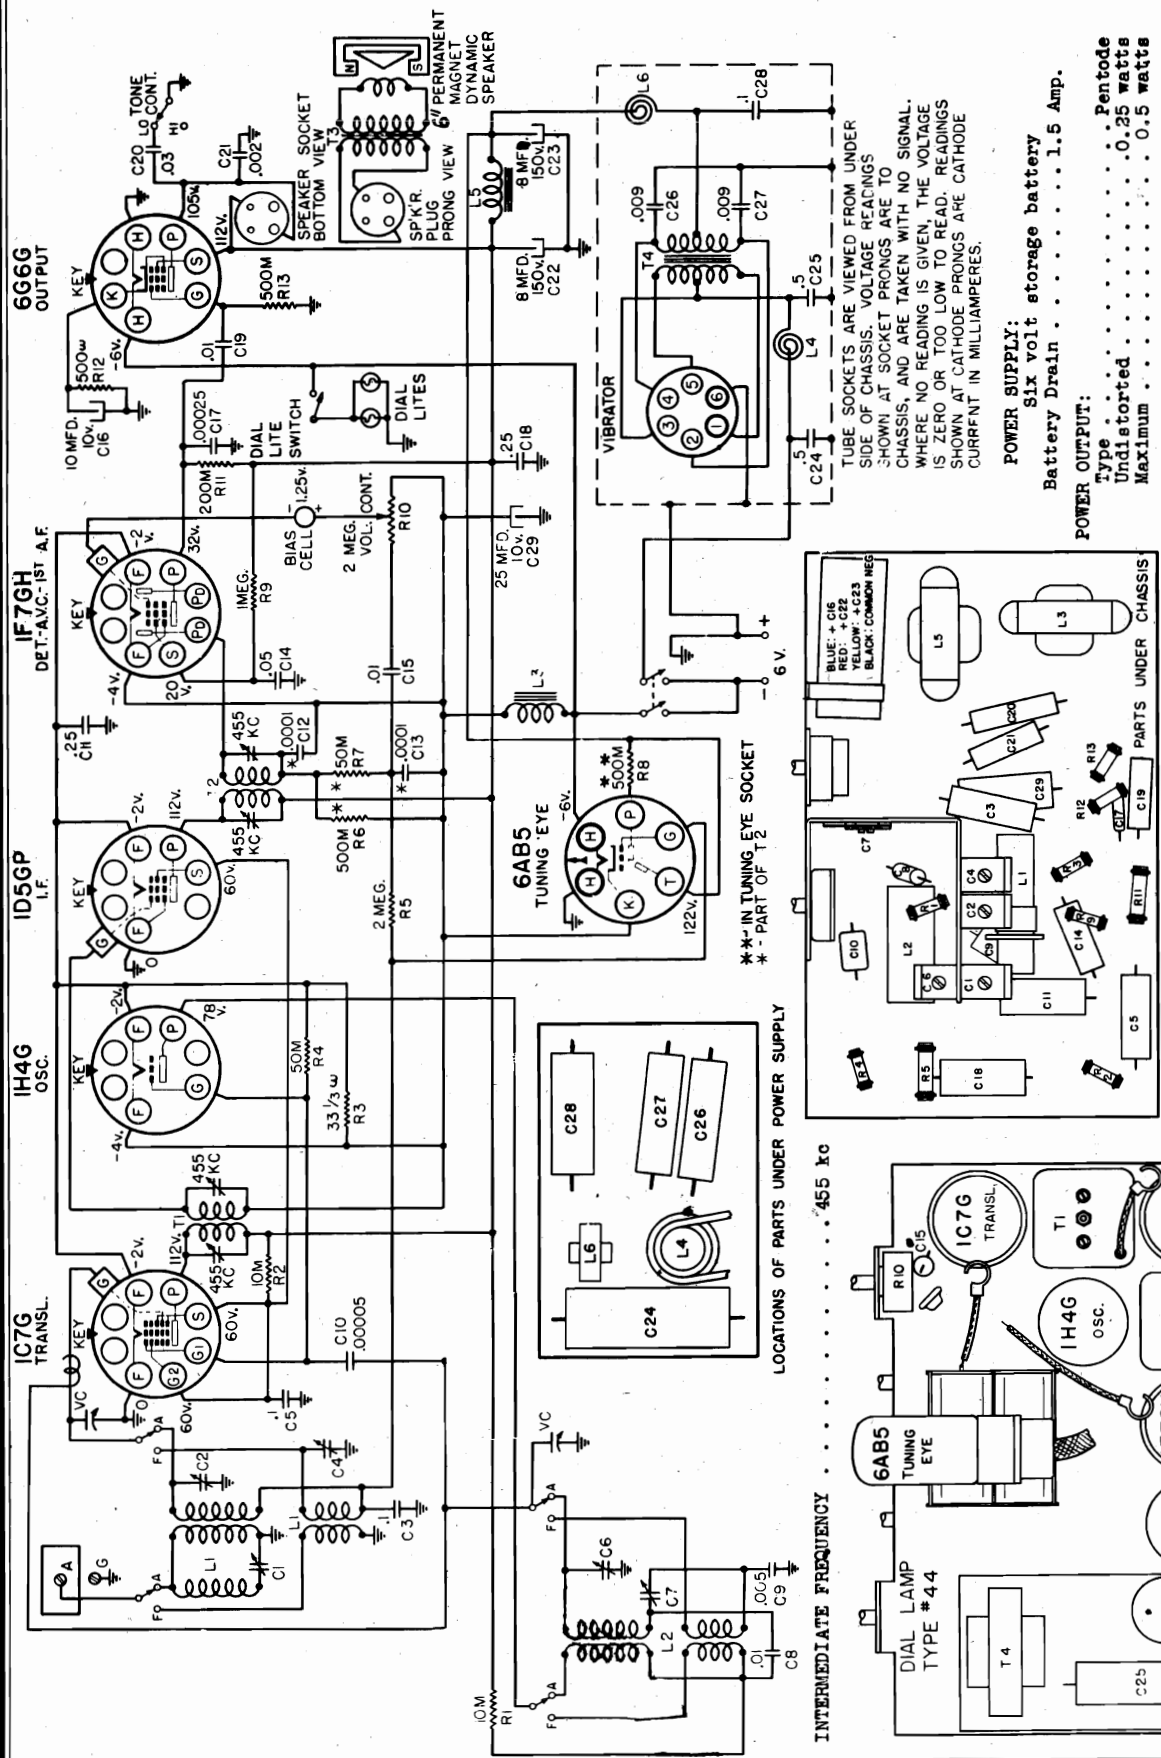

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ. READINGS SHOWN AT CATHODE PRONGS ARE CATHODE CURRENT IN MILLIAMPERES.

POWER SUPPLY:
 Six volt storage battery
 Battery Drain 1.5 Amp.

POWER OUTPUT:
 Type Pentode
 Undistorted 0.25 watts
 Maximum 0.5 watts

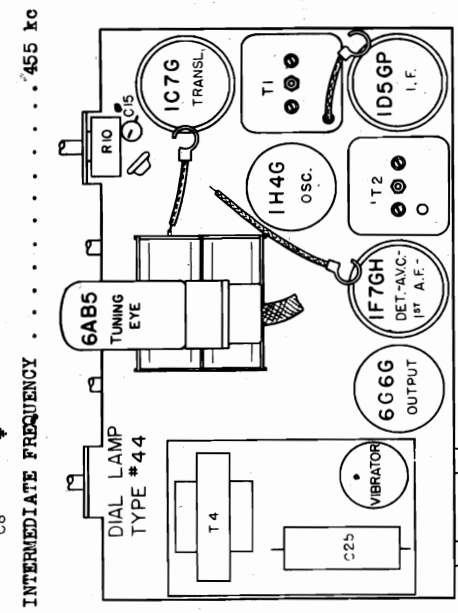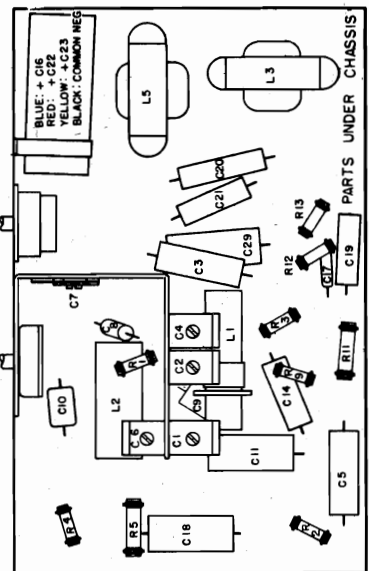

DIFFERENCES BETWEEN 101.552 AND 101.552A:
 Model 552A is the same electrically as Model 552. The differences are in the style (and part numbers) of the dial, escutchions, knobs, call letter sheets, and push button tuning unit. The push buttons on 101.552 chassis are locked and unlocked by turning the button. The buttons on 101.552A chassis are locked and unlocked by pulling the buttons off of the push button plungers.

INTERMEDIATE FREQUENCY 455 kc


LOCATIONS OF PARTS UNDER POWER SUPPLY

LOCATION OF PARTS ON TOP OF CHASSIS

DEC. 30, 1938

MODELS 6218, 6271, 6272
 Chassis 101.553, 101.553A
 Schematic, Voltage, Chassis
 Socket, Trimmers, Notes

SEARS, ROEBUCK & CO.

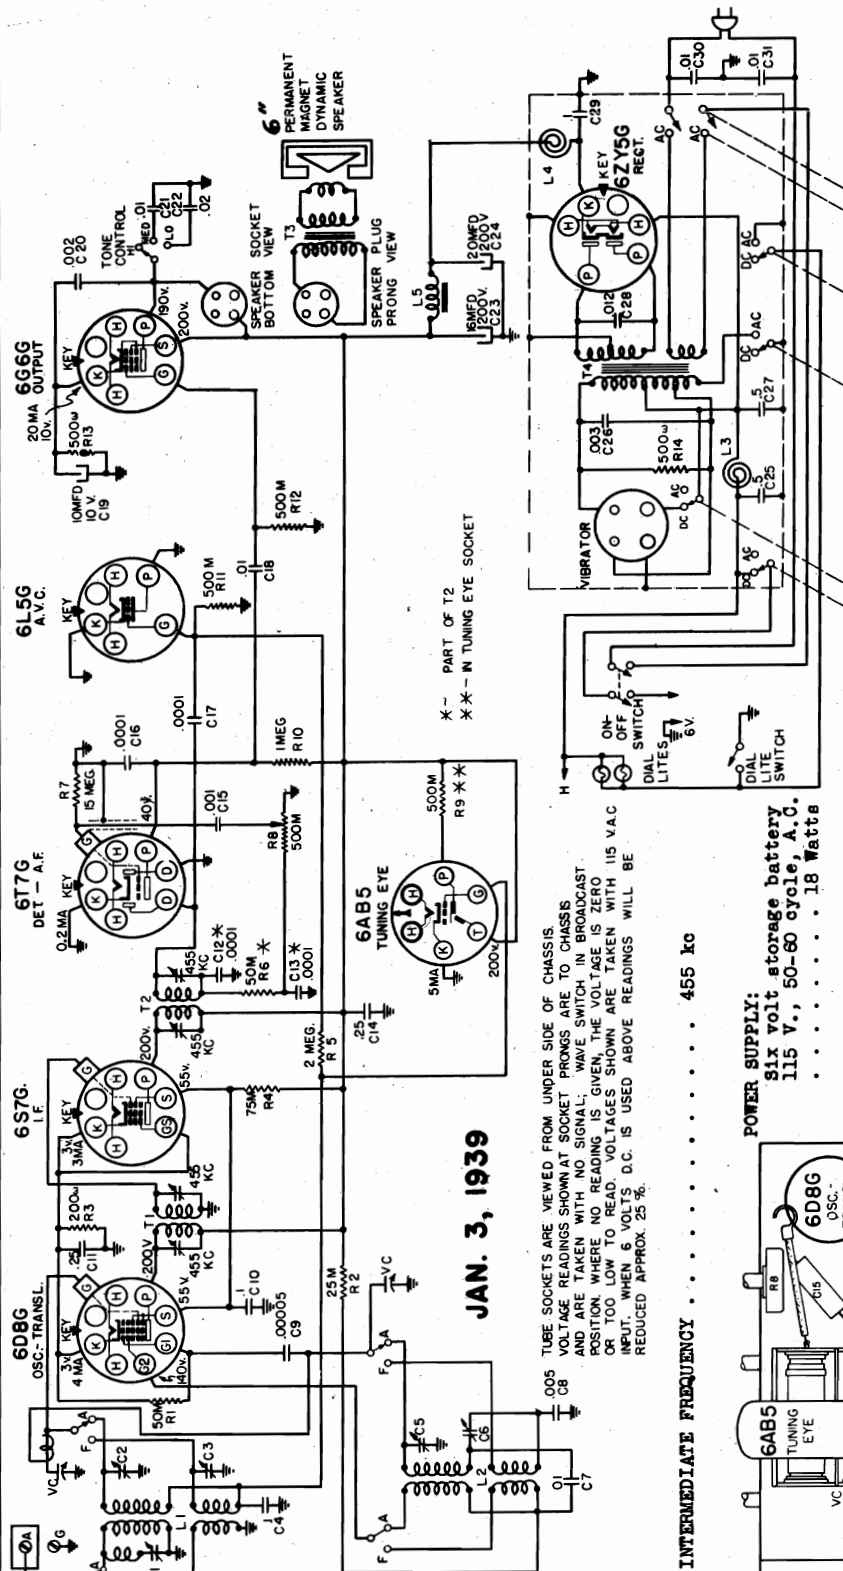

FOR ALIGNMENT SEE INDEX

JAN. 3, 1939


TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS AND ARE TAKEN WITH NO SIGNAL. WAVE SWITCH IN BROADCAST POSITION WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ. VOLTAGES SHOWN ARE TAKEN WITH 115 V.A.C. INPUT. WHEN 6 VOLTS D.C. IS USED ABOVE READINGS WILL BE REDUCED APPROX. 25 %.

INTERMEDIATE FREQUENCY 455 kc

POWER SUPPLY:
 Six volt storage battery
 115 V., 50-60 cycle, A.C.
 1.8 Watts on A.C.;
 0.45 Watts on D.C.;
 0.8 Watts on A.C.;
 1 Watt on D.C.


Battery Drain 2.3 Amperes

POWER OUTPUT:
 Type Pentode
 Unalstorted 0.8 watts on A.C.;
 Maximum 1.8 watts on A.C.;
 0.45 watts on D.C.

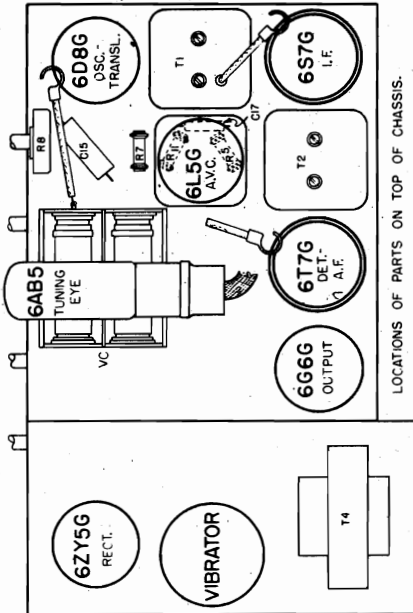

DIFFERENCES BETWEEN 101.553 AND 101.553A:


Model 553A is the same electrically as Model 553. The differences are in the style (and part numbers) of the dial, escutcheons, knobs, call letter sheets, and push button tuning unit. The push buttons on 101.553 chassis are locked and unlocked by turning the button. The push buttons on 101.553A chassis are locked and unlocked by turning the slotted screw, made accessible by pulling the buttons off of the push button plungers.

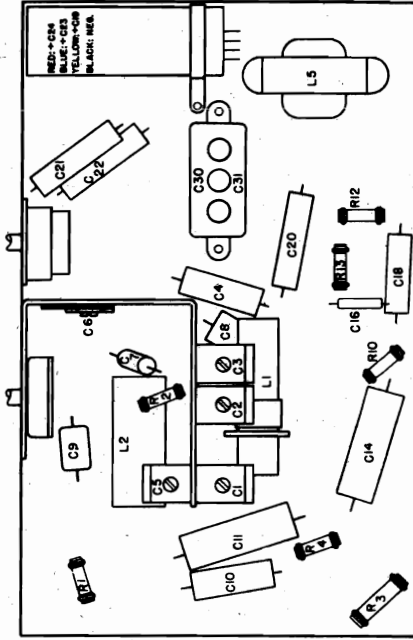

SEARS-ROEBUCK & CO.

MODEL 6225, Ch. 133.333
Schematic, Chassis
Control Data
Trimmers

SCHEMATIC DIAGRAM CHASSIS 133333

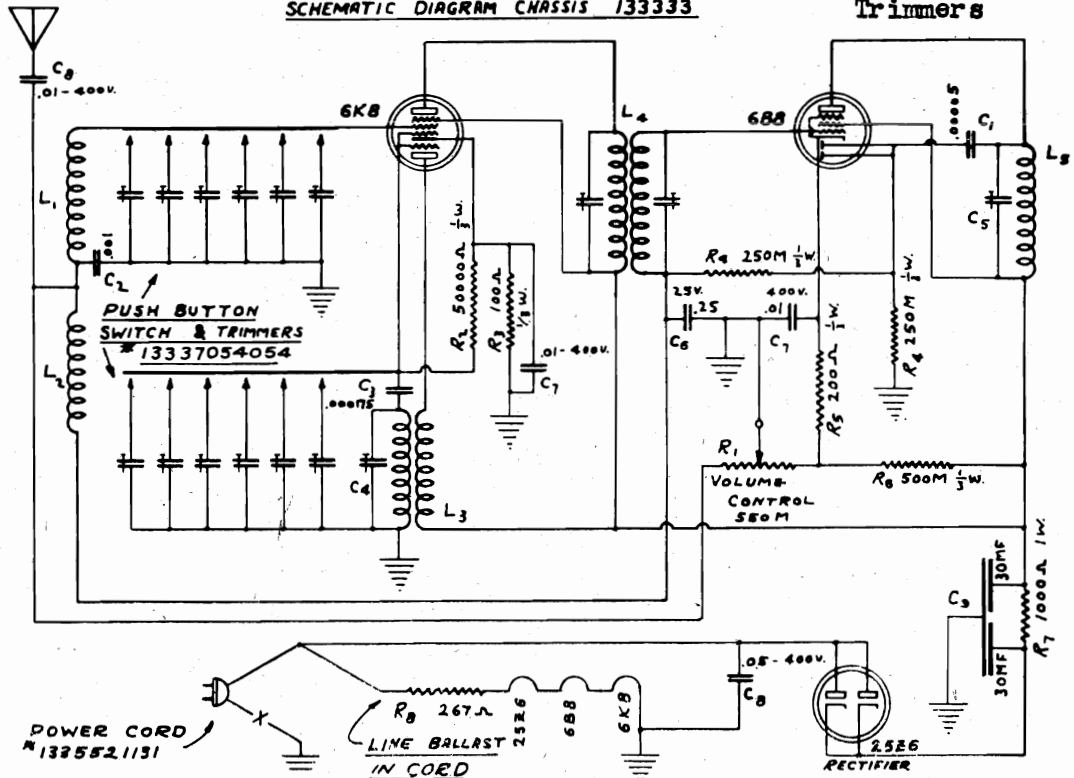

WIRELESS REMOTE CONTROL
MODEL 6225

ELECTRICAL SPECIFICATIONS

TUBES AND FUNCTIONS:

6K8	Oscillator-Mixer
6B8	IF-AVC
25Z6	Rectifier

ALIGNMENT FREQUENCY:

Each button is aligned to desired station.

INTERMEDIATE FREQUENCY: 1570 KC

OPERATING FEATURES:

- Push Button Tuning Only (6 buttons)
- Automatic Volume Control

POWER SUPPLY:

105-125 volts, AC or DC, 25-60 cycle, 40 watts.

FREQUENCY RANGE:

Trimmer No. 1	550 — 1000 KC
Trimmer No. 2	550 — 1000 KC
Trimmer No. 3	600 — 1100 KC
Trimmer No. 4	600 — 1100 KC
Trimmer No. 5	800 — 1450 KC
Trimmer No. 6	1150 — 1500 KC

CHASSIS FEATURES:

- Number IF Stages One
- Antenna Attached
- Special Push Button Switch with ganged trimmers for antenna and oscillator tuning.

MECHANICAL SPECIFICATIONS

OPERATING CONTROLS:

1. 6 Push Buttons
2. 1 Small Knob

CONTROL OPERATION:

1. Push to select station
2. Turn clockwise to turn on and to increase volume.

OUTPUT TRIMMER - C5 (BELOW CHASSIS)

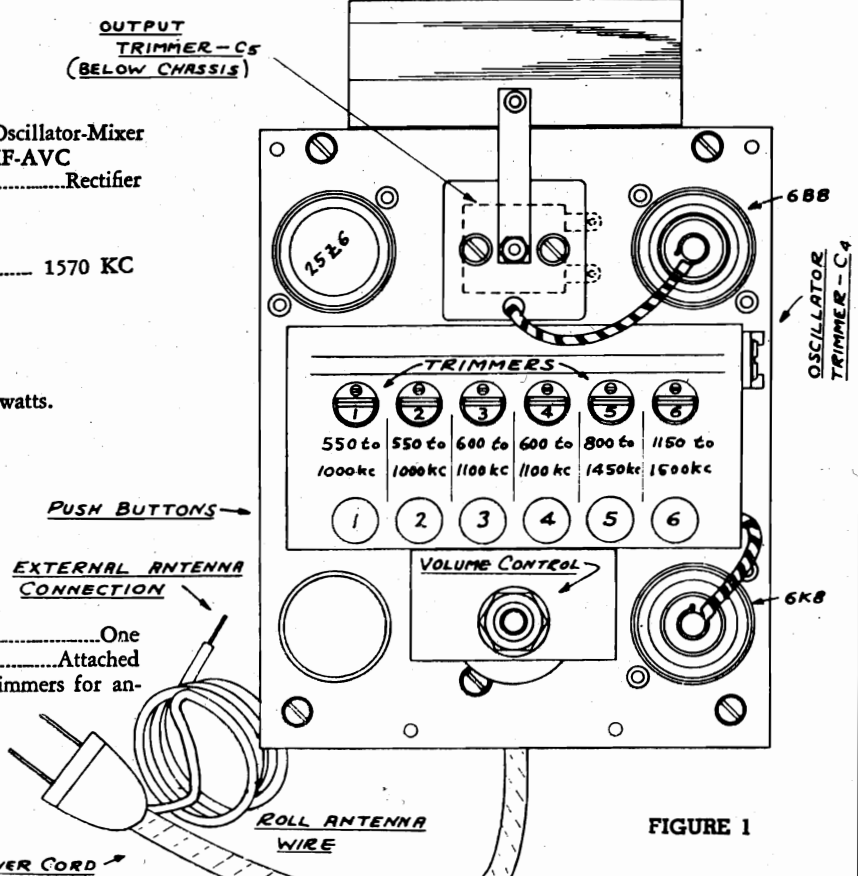


FIGURE 1

DEC. 13, 1938

MODEL 6225, Wireless

SEARS, ROEBUCK & CO.

Remote Control

GENERAL INFORMATION AND SERVICE HINTS

Alignment, Notes, Parts

The Remote Control consists simply of the mixer and IF stages only of a conventional radio. The mixer stage is conventional. The antenna and oscillator circuits are tuned by ganged trimmers which are selected and connected across the coils by means of a push button switch. There is no variable condenser. This mixer stage feeds into an IF transformer tuned to 1570 KC. The signal is further amplified by the pentode section of the 6B8 tube. The plate load of this tube is a large radiating coil, also tuned to 1570 KC. Signal voltage is taken off through a small condenser to feed the diodes and develop AVC voltage for both stages. Thus when the radio with which the Control is used is tuned to 1570 KC it picks up the radiation from the plate coil of the 6B8 and reproduces the program in a normal manner. The volume control is in the cathode circuit of the 6B8 tube, thus controlling the gain of this tube and the RF in the radiating coil. A little current is bled through the volume control so that the tube will be completely cut off at the minimum setting.

Obviously the degree of performance depends not only on the signal fed into the Control but on getting the radio tuned to the exact output frequency of the Control and the amount of coupling between the Control output coil and the radio antenna circuit at a maximum. While under ordinary conditions practically any set-up will be satisfactory, in places where signals are weak or a great deal of noise interference exists, the Control will be much more satisfactory if a lead is brought from the antenna connection of the receiver close to the Control, thus increasing the coupling many times. Under noisy conditions any long outside antennas should be removed from the receiver as they will feed noise into the set on top of the Control signal. An indoor antenna can be arranged in the home which will lie close to the control thus giving good operation and also be very satisfactory for normal use with the radio.

In extremely noisy localities the above method at times will not bring about normal noise-free reception. It then will be necessary to loop the wire that leads from the antenna binding post of the receiver, over the transmitting radiator or coil of the remote tuner. One turn is all that is necessary. After this turn is added, go through the alignment procedure on Page 3.

In some localities it is possible that some station or signal will come in on 1570 KC. This will be received simultaneously with the Control signal and a heterodyne or whistle will result. In such cases the IF system of the Remote Control should be realigned to the nearest frequency to 1570 KC where no trouble is experienced. (See paragraph on alignment.) These IF's can be aligned to any frequency from 1460 to 1700 KC. Also in cases where the radio will not tune as high as 1570 KC the Remote Control can be realigned to a lower frequency.

For best operation the Remote Control should be operated with the volume control near the full on position to insure a good signal strength.

ALIGNMENT PROCEDURE

For alignment the Control should be removed from the cabinet. First remove the four rubber feet which hold the fiber bottom cover in place. Remove the volume control knob but not the push buttons. Finally remove the four wood screws which hold the chassis to the cabinet blocks.

INTERMEDIATES:

Use a standard signal generator with a modulated signal. Set the signal generator to 1570 KC (or the special IF frequency for extraordinary conditions as described above in "Special Helps"). The Control must be aligned in conjunction with a radio receiver as the Control has no audio. An output meter should be connected into this receiver to indicate resonance peaks. A short length of wire should be connected to the antenna post of the receiver. First feed the generator output direct to the radio receiver antenna and carefully tune the radio to this frequency. (Do not change the signal generator setting after the receiver has been tuned to it.) Connect the generator to the antenna of the Control at the end of the power cord and lay the short length of wire next to the large output coil on the Control. Turn the volume control on the Control on full. The volume control on the receiver should be adjusted as necessary to keep the output meter on scale. Keep the signal generator output level low to make the AVC ineffective. Now adjust the IF transformer trimmers to resonance. Finally adjust the output coil trimmer on the bottom of the chassis.

BROADCAST:

Now turn the signal generator to 540 KC. Depress button number one. Turn large trimmer number one in as far as is practical without getting it down so tight that it cannot be tuned accurately. Be careful not to force this screw as the coupling between trimmers can be sheared. With the trimmer in this position back the oscillator coil trimmer to the 540 KC signal. No further broadcast alignment is required as this is done when the buttons are set to their stations.

Schematic Location	Part Number	Description	List Selling Price
L1	1332820851	Antenna coil75
L2	1333020853	Antenna choke30
L3	1332820852	Oscillator coil55
L4	1333203541	I.F. transformer with shield75
L5	13335203551	Output coil50
C1		.00005 mfd. mica condenser15
C2		.001 mfd. mica condenser15
C3		.000175 mfd. mica condenser15
C4	1331701549	Condenser-mica trimmer-working cap.=40 mmf.20
C5	1331701546	Condenser-mica trimmer-working cap.=75 mmf.25
C6		Condenser-.25mfd.-25 volt17
C7		Condenser-.01 mfd.-400 volt13
C8		Condenser-.05 mfd.-400 volt13
C9	1332001482	Condenser-electrolytic-30-30 mfd.75
R1	13324181003	Volume control and switch-550M60
R2		Resistor - 50M - 1/3 watt15
R3		Resistor - 100 ohm 1/3 watt15
R4		Resistor - 250M - 1/3 watt15
R5		Resistor - 200 ohm 1/3 watt15
R6		Resistor - 500M - 1/3 watt15
R7		Resistor - 1000 ohm - 1 watt15
R8		Line ballast - 267 ohm (part of power cord)	

CHASSIS—IDENTIFICATION NUMBER 133.333

HOW TO ORDER PARTS

1. Use Purchase Order Form 5284.
 2. On the Purchase Order always give the following information:
 - (1) PART NUMBER and DESCRIPTION for each part ordered
 - (2) The IDENTIFICATION NUMBER, which is 133.333.
- This number is found on the top of the chassis.

PARTS LIST-SOURCE NO. 133

1335221131	Power cord with resistance65
1335231226	Roll antenna wire10
13337054054	Push button switch and trimmers	4.00
13360363026	Cabinet	3.00
13360363027	Cabinet bottom15
1333905194	Push button knobs20
1333905191	Volume control knobs10
13344053004	Escutcheon plate20
1335925184	Call letter sheets20
1335925445	Instruction sheet03

SEARS-ROEBUCK & CO.

MODEL 6225
Push-Button Data
Notes

SETTING UP THE BUTTONS:

As the Control has no audio system it is necessary to use it in conjunction with a radio when setting push-buttons at any other alignment operations.

Before setting the push buttons it is necessary to tune the radio which is being used exactly to the resonant frequency of the IF channel in the Control. This can be accomplished by the following steps:

(A) Place the Remote Control on or beside the radio with which it is to be used. Disconnect any aerials on the radio and connect a short length of wire which will reach the Remote Control and should be laid very close to the high end of the Remote Control Cabinet. Stretch out the antenna hank on the end of the power cord on the Remote Control.

(B) Plug in the Remote Control and turn the volume control on fully clockwise and leave in this position throughout the entire procedure. Turn on the receiver and turn up the volume until the noise between stations is audible. Allow the radio and the Remote Control to run for at least one quarter hour in order that they may become fully heated. All the buttons on the Remote Control should be released. Do this by slightly depressing any released button.

(C) Tune the receiver to approximately 1570 KC on the broadcast band. Tune back and forth at this point and listen for a point of greatly increased noise level. This spot should be tuned in in the same manner you would tune in a station. You are actually tuning in the *sensitivity noise* of the Remote Control.

In case the Control is also being realigned, a short cut is made possible by tuning the receiver to the signal generator output, without changing the setting at which the Control IF's are aligned.

HOW TO SET UP PUSH BUTTONS:

1. Make a list of station call letters of six nearby powerful broadcast stations that it is desired to set up on the buttons. Arrange the stations in the list in the order of their frequency. That is, the station of lowest frequency will be first; the next higher second, etc. After marking down the frequencies on the chart along side of the station call letters and arranging them in their proper order, number 1, 2, 3, 4, 5 and 6 respectively. Check each frequency with figure 1. A typical list appears below.

Station Call Letters	Frequency	Button No.
WMAQ	670 KC	1
WLW	700 KC	2
WGN	720 KC	3
WENR-WLS	870 KC	4
WHO	1000 KC	5
WCKY	1490 KC	6

Remember that buttons No. 1 and No. 2 will tune only stations with frequencies from 550 to 1000 KC. Similarly buttons No. 3 and No. 4 will only tune stations with frequencies from 600 to 1100 KC. Button No. 5 from 800 to 1450 KC and No. 6 from 1150 to 1500 KC.

2. The Remote Control is shipped with the holes in the escutcheon open, exposing the trimmer adjusting screws. After completing the adjusting procedure, as outlined below, tear out the tabs bearing the proper call letters of the stations set up on each trimmer and button, from the sheet of tabs supplied. These tabs will slip into the recess around the trimmer holes and close them, giving the hole a neat appearance. The trimmers are more easily accessible if the two screws and escutcheon are removed.

3. With the manual dial knob on the receiver find station No. 1 on the list, noting its program.

4. Return the pointer to the control frequency setting near 1570 KC as outlined above.

5. Depress button No. 1 (see figure 1).

6. With a small screw driver turn large trimmer screw No. 1 in or out until the program previously heard is heard again. Tune this station accurately. This can be determined by ear. Rotate the trimmer screw back and forth across the station to find a setting where the tone is deepest and the noise level lowest.

7. Now adjust small screw No. 1, turning it to the right or left until the program is received with maximum volume. If the radio has a tuning eye, the correct setting for this screw is indicated when the sides of the shadow are closest together.

(FOR RECEIVERS WITH PUSH BUTTON TUNING ONLY)

When setting up the control in a home with a receiver with push buttons.

After determining the proper setting of the receiver dial, for Remote Control operation, set up this frequency on the proper push button as outlined in the operating instructions for the receiver. This will simplify the set up procedure for the remaining buttons of the Remote Control. Additionally it will simplify the location of the proper dial setting for Remote Control operation whenever the Remote Control is to be used.

8. Locate the second station on your list on the radio dial, noting its program.

9. Push button No. 1 and tune the radio to the preset frequency of about 1570 KC as outlined in paragraph (C), only this time use the station set on button No. 1 for the 1570 KC reference point, instead of noise.

10. Without changing radio dial press button No. 2 and use procedure outlined in points 6 and 7, only using trimmer screws No. 2.

11. Set up remaining buttons as outlined in points 8, 9, and 10, substituting in point 10 the number of the button and the trimmer screws to be adjusted.

It is best to set the buttons on the stations themselves rather than trying to duplicate their frequencies on a signal generator.

THE ANTENNA:

The antenna wire is supplied with the Control. It is connected through an extra wire in the power cord. It should be uncoiled and extended as far as possible from the Control. In locations remote from broadcasting stations additional pickup can be had by connecting the end of the antenna to a conventional outdoor antenna.

THE FILAMENT CIRCUIT AND POWER SUPPLY:

All of the tubes are connected in series. Accordingly, if any one tube burns out the others will not light. It is necessary to replace only the burned out tube; the others will then light. A resistor is built into the line cord to reduce the voltage for the tube filaments.

The line cord must not be shortened or altered in any way.

CAUTION:

Under no condition should a ground be attached to this Control, also no grounded object should be allowed to come in contact with the chassis.

MODEL 6229 Ch.126.210

MODEL 6233 Ch.126.222

Wireless Record Players

Operation, Notes

SEARS, ROEBUCK & CO.

General Information and Service Hints

This Wireless Record Player is designed to operate in conjunction with any radio receiver having a frequency range which includes 530 to 625 kc.

The output of the crystal pickup, shunted by a 250,000 ohm volume control, a 560,000 ohm resistor and a 0.1 mfd. condenser, is connected to grid No. 1 of the 12A8GT modulator-oscillator tube. The 12A8GT tube acts as a modulated-

oscillator producing a signal whose frequency may be adjusted from 530 to 625 kc by means of the screwdriver adjustment at the rear of the cabinet.

The antenna or output wire is connected thru a coupling condenser to the grid circuit of the oscillator, and run parallel with the power cord. The output is sufficient to permit operation within approximately 20 feet of the radio receiver.

OPERATING PROCEDURE

1. After inserting plug in proper power supply outlet, turn the power-switch-volume control knob on top of cabinet to full clockwise position. Place either 10 or 12 inch record on the turntable, starting the synchronous motor by a clockwise twirl with the hand.

2. Tune the radio receiver to a quiet point between 530-625 kc.

3. Tune the oscillator in the record player to the tuned frequency of the receiver by adjusting the button on the rear of the record player cabinet to obtain peak output on the receiver. Rotating the button to the right decreases the frequency; to the left increases the frequency.

4. Adjust volume control on radio receiver to the highest volume that may be required, and then use the record player volume control for further adjustment.

5. In noisy locations, it may be desirable to leave the record player volume control turned full on, and regulate the radio receiver volume control for the desired level.

6. If there is insufficient volume, or excessive noise, the record player may be coupled to the receiver, by running a piece of insulated wire between the two units; wrap three or four turns of the coupling wire around the antenna lead-in on the radio receiver and connect the other end in the same way to the short wire that projects from the plug on the power cord of the record player.

Hum and Vibration

A small amount of hum when starting, decreasing to a negligible amount while running, is normal. If excessive vibration occurs either at starting or running, it may be due to one of the following:

- (1) Insufficient lubrication in outer bearing or any other failure that will cause the stator to bind.
- (2) Metal and leather washers in improper position, see "Motor Details."
- (3) Leather washer not oiled. When replacing the leather washer, make sure that it is thoroughly soaked in oil.
- (4) Motor not properly supported from motor board. Unless the motor is properly supported from the motor board, vibration will be excessive.
- (5) Burrs on poles of rotor or stator. They should be removed with fine emery cloth.
- (6) Loose laminations of the stator.
- (7) Improper horizontal alignment of the rotor and stator. Correct horizontal alignment is as shown in the motor assembly drawing.

Phonograph Motor Service Data

The synchronous motor used in this instrument is designed to be simple and foolproof. Among its many features are constancy of speed, low power consumption, single moving part, ease of starting, rubber damper, ease of repair, and long life. The parts that may require attention are plainly shown on "Motor Details." The motor is started by turning "on" the power switch and giving the turntable a clockwise spin with the hand. Smooth starting and running will be insured by keeping the bearings well cleaned and oiled.

Rotor Adjustment

Use three shims (22 mil for 60 cycle and 16 mil for 25 cycle motors); spaced equally around the gap between rotor and stator. When rotor is suitably adjusted, securely tighten the three screws which hold the rotor to the turntable. The centering operation is very similar to that done with a dynamic speaker.

*If top of rotor lamination assembly is not flush with top of stator laminations, additional steel washers should be inserted beneath the stator until it is raised to the desired level.

*MODEL 6229 ONLY. Lubrication


Both the rotor and stator have bearing surfaces about the center vertical axis. These bearings and the ball bearing at the bottom of the turntable's shaft should be oiled whenever player is serviced. The leather washer beneath the stator is to be pliable and soaked in light oil.

Removing the Rotor from the Stator

The rotor and turntable assembly simply rests on the ball bearing at the bottom of the vertical bearing, and may be removed by lifting out. Don't turn player upside down without holding turntable.

The damper spring must fit without binding or chattering, in the slot in the stator. The stator must be free to deflect in either direction between the limits of the damper spring. Any binding in the washers or stator bearing which prevents the movement of the stator may cause speed variations in the motor. The damper spring must exert equal force in restoring the stator to its mid-position when the stator is deflected manually in either direction.


Use three 13-mil shims (on 25 and 50 cycle motors, use 16-mil) - MODEL 6233

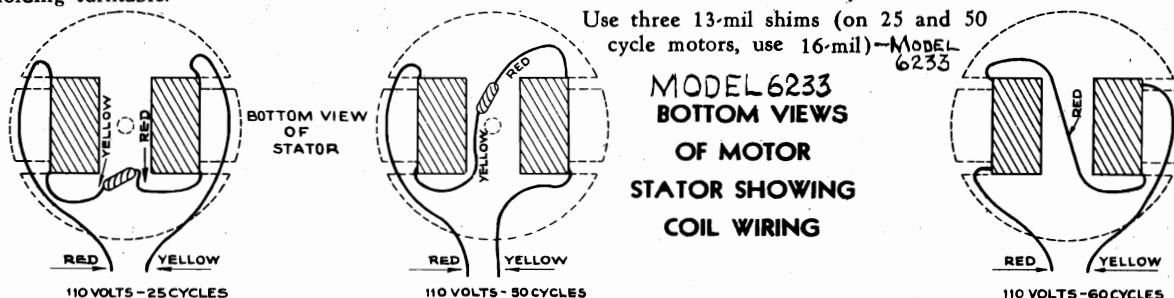

MODEL 6233
BOTTOM VIEWS
OF MOTOR
STATOR SHOWING
COIL WIRING

SEARS, ROEBUCK & CO.


MODEL 6229
Schematic, Voltage
Chassis Wiring

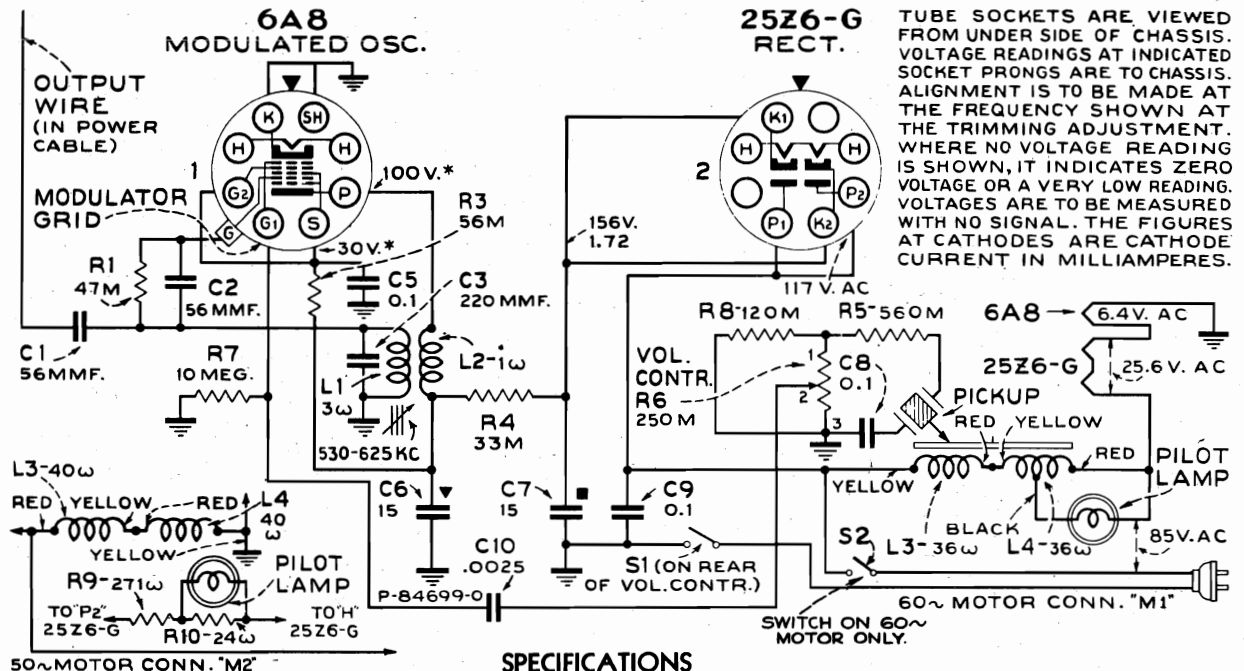

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. ALIGNMENT IS TO BE MADE AT THE FREQUENCY SHOWN AT THE TRIMMING ADJUSTMENT. WHERE NO VOLTAGE READING IS SHOWN, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. VOLTAGES ARE TO BE MEASURED WITH NO SIGNAL. THE FIGURES AT CATHODES ARE CATHODE CURRENT IN MILLIAMPERES.

SPECIFICATIONS

- TUBES AND FUNCTIONS:
 6A8..... Modulator—Oscillator
 25Z6-G..... Half-Wave Rectifier
- DIAL LAMP..... Mazda 47, 6-8 volts, .15 amp.
- FREQUENCY RANGE..... 530-625 kc
- VOLUME CONTROL..... 250,000 ohms—Power Switch—Volume
- CRYSTAL PICKUP
 Impedance..... 100,000 ohms at 1,000 cycles
 Average Output Volts.... 1½ volts at 1,000 cycles with 250,000 ohm load
- POWER SUPPLY
 A-6..... 105-126 volts, 60 cycles, 50 watts
 A-5..... 105-126 volts, 50 cycles, 50 watts
- MOTOR..... 78 r.p.m. Synchronous (manual starting)

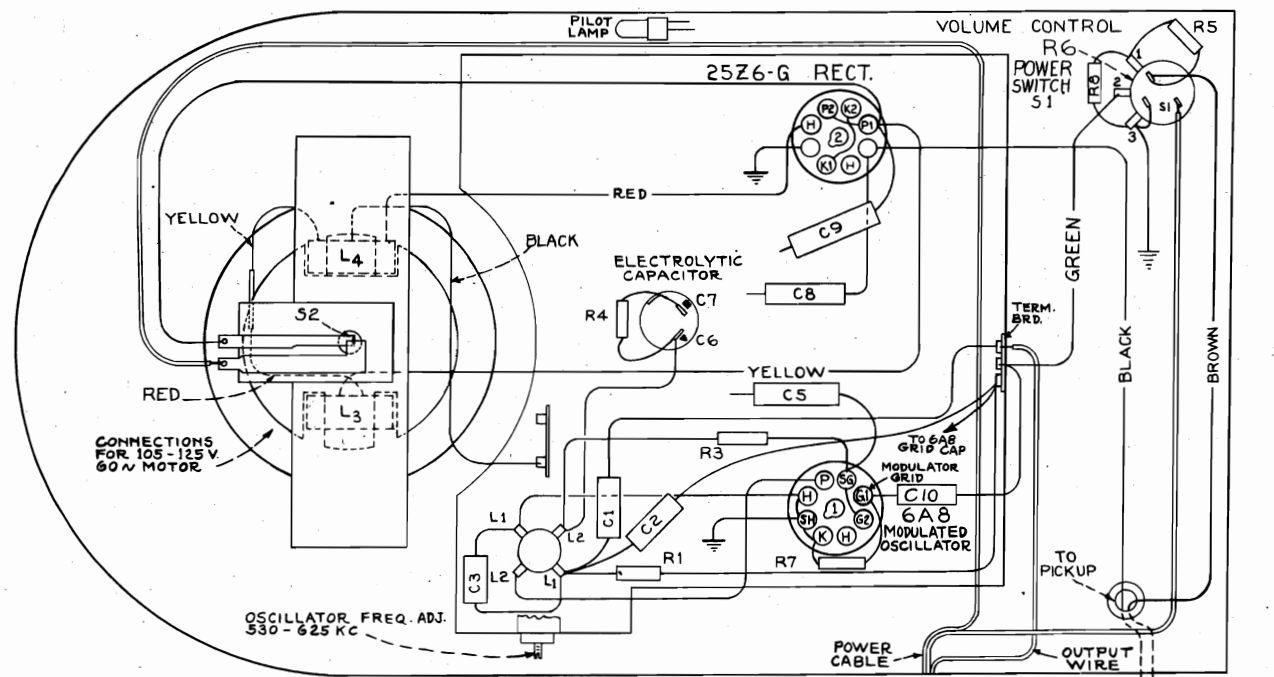


BOTTOM VIEW

JUNE 22, 1939

MODEL 6233
Schematic, Voltage
Chassis Wiring
Motor Details

SEARS, ROEBUCK & CO.

MODEL 6229
Motor Details

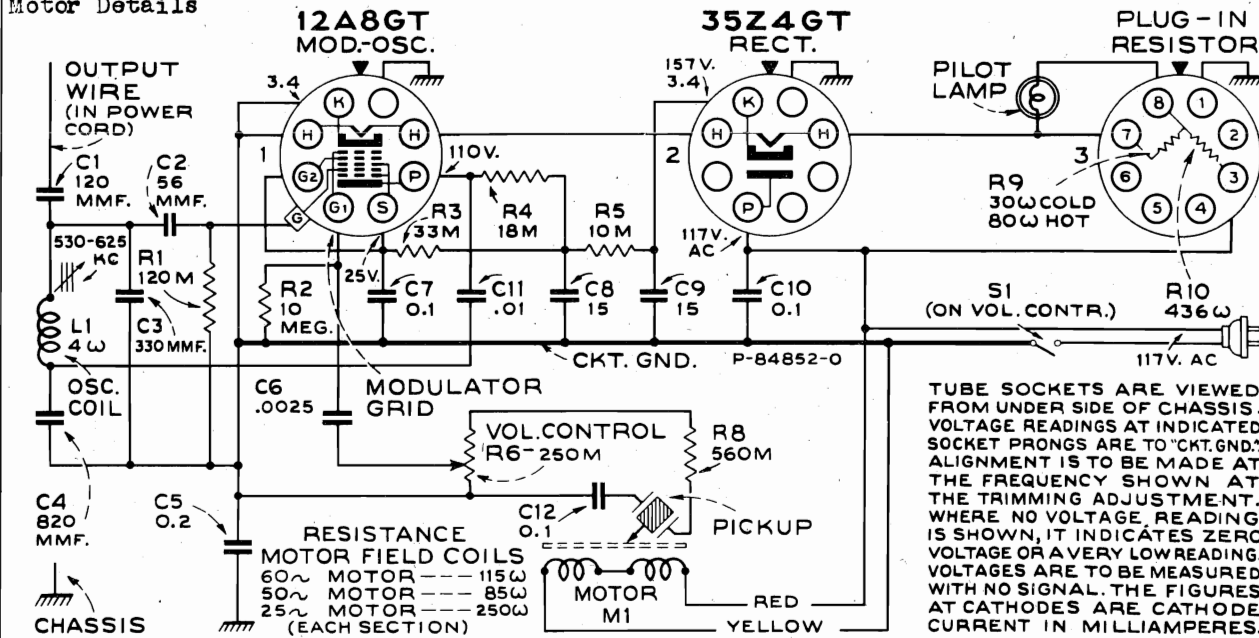


DIAL LAMP Mazda 44, 6.3 volts., 0.25 amp.

FREQUENCY RANGE 530-625 kc

VOLUME CONTROL 250,000 ohms-Power Switch-Volume


MOTOR 78 r.p.m. Synchronous (manual starting)

TURNABLE HELD ON SHAFT BY RETAINING RING AND WASHER

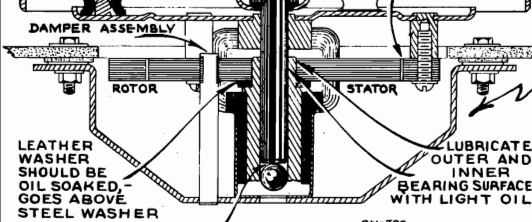

DETAIL OF 25 AND 50 CYCLE TYPE OF MOTOR

DETAIL OF 60 CYCLE TYPE OF MOTOR

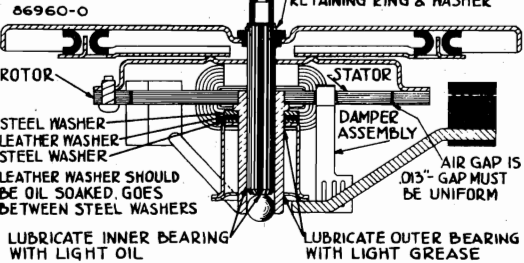

USED ALSO ON THE MODEL 6229

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO "CKT.GND.". ALIGNMENT IS TO BE MADE AT THE FREQUENCY SHOWN AT THE TRIMMING ADJUSTMENT. WHERE NO VOLTAGE READING IS SHOWN, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. VOLTAGES ARE TO BE MEASURED WITH NO SIGNAL. THE FIGURES AT CATHODES ARE CATHODE CURRENT IN MILLIAMPERES.


CRYSTAL PICKUP

Impedance..... 100,000 ohms at 1,000 cycles
Average Output Volts..... 1½ volts at 1,000 cycles with 250,000 ohm load-

POWER SUPPLY

A-6 105-125 volts, 60 cycles, 30 watts
A-5 105-125 volts, 50 cycles, 30 watts
B 105-125 volts, 25 cycles, 30 watts

TUBE, TRIMMER AND PARTS LOCATION
EXPANDED BOTTOM VIEW

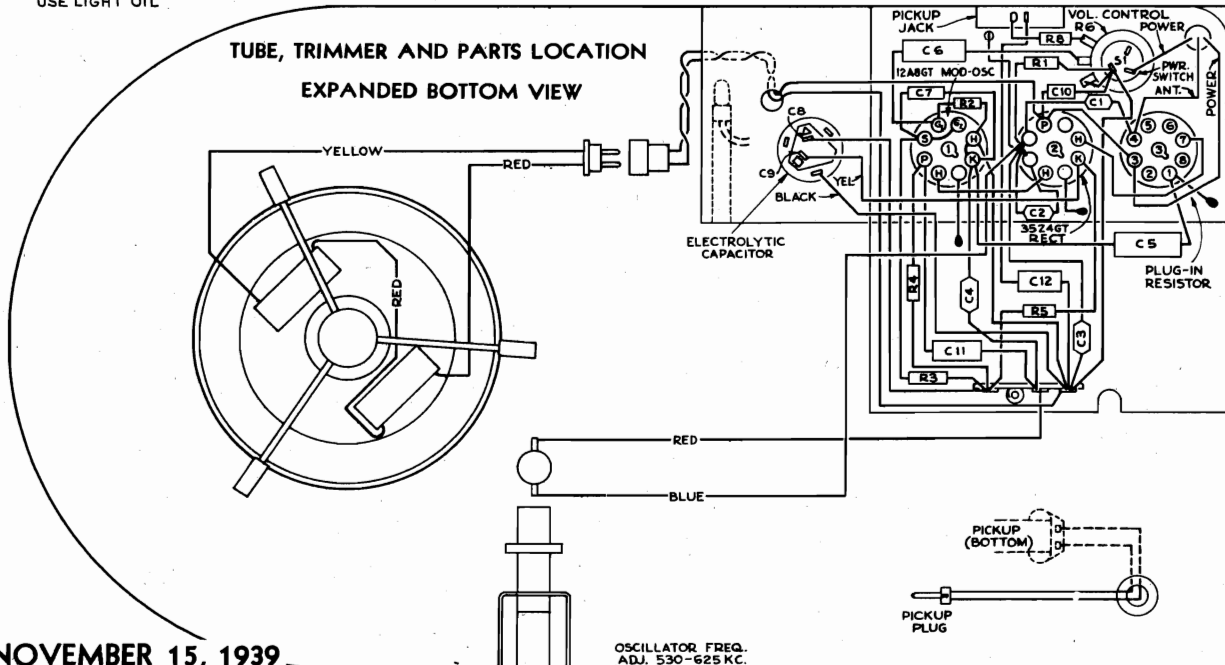


NOVEMBER 15, 1939

OSCILLATOR FREQ. ADJ. 530-625 KC.

SEARS, ROEBUCK & CO.

MODEL 6256, Ch. 109.290
Schematic, Voltage
Socket, Trimmers
Alignment

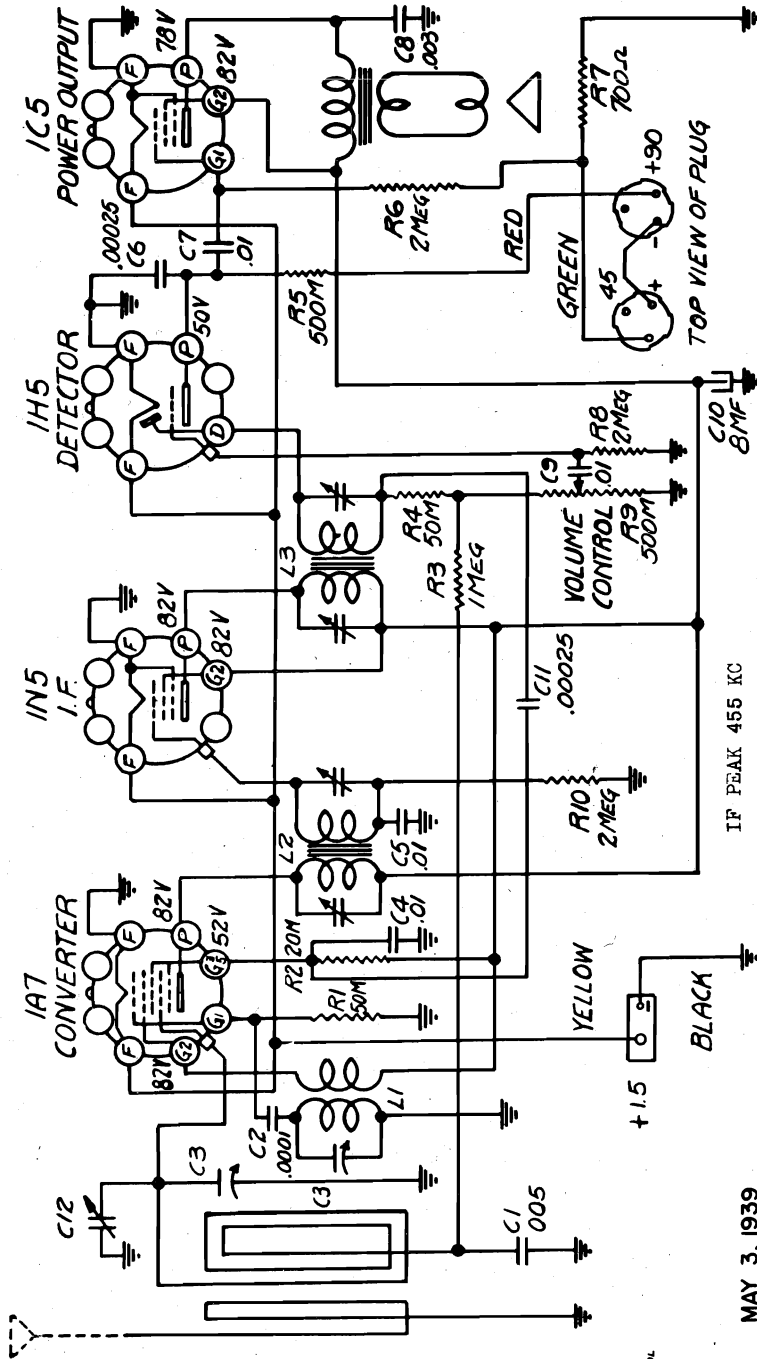

IF ALIGNMENT
Connect the ground side of the signal generator to the chassis. Connect the high side of the generator to the grid of the 1A7 tube thru a .1 mfd. condenser. Connect an output meter or other resonance indicator to either the speaker voice coil or the plate of the output tube. Using a 455 kc. signal and with the volume control full on so that only a very weak signal is necessary, adjust first the 2nd and then the 1st IF transformer for maximum resonance indication.





RF ALIGNMENT
Using the same signal generator connections as for IF alignment, turn the tuning condenser to minimum capacity and adjust the oscillator to 1680 kc. (The oscillator trimmer is on the variable condenser). Slide the shelf and chassis back in the cabinet and place the batteries in their proper position. Connect the signal generator leads to a single loop of wire about eight inches in diameter. Place this loop about one foot from the cabinet in the same plane as the front of the cabinet. Set the signal generator at 1400 kc., tune the receiver until this signal is heard and adjust the trimmer on the back of the variable condenser. The tuning condenser is of the out plate oscillator type and no adjustment is necessary at 600 kc.

ALWAYS USE A WEAK SIGNAL FROM THE GENERATOR. Strong signals tend to cause improper adjustments.

MAY 3, 1939


VOLTAGES MEASURED TO CHASSIS WITH 90VB AND 1.5VA. VOLUME CONTROL OPEN-NO SIGNAL.

ALIGNMENT FREQUENCIES, 455-1680-1400 KC.	
LOUD SPEAKER	
Type.....	P.M. Dynamic
Size.....	5 inch
POWER SUPPLY.....	Batteries
FREQUENCY RANGE.....	540 to 1580 KC.
POWER OUTPUT	
Type.....	Pentode
Undistorted.....	.150 watt
Maximum3 watt

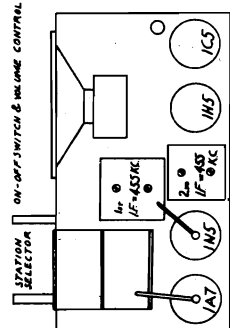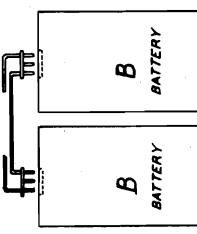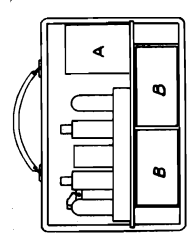

MODEL 6260, Ch. 101, 558
 Schematic, Voltage
 Chassis, Socket, Trimmers

SEARS, ROEBUCK & CO.

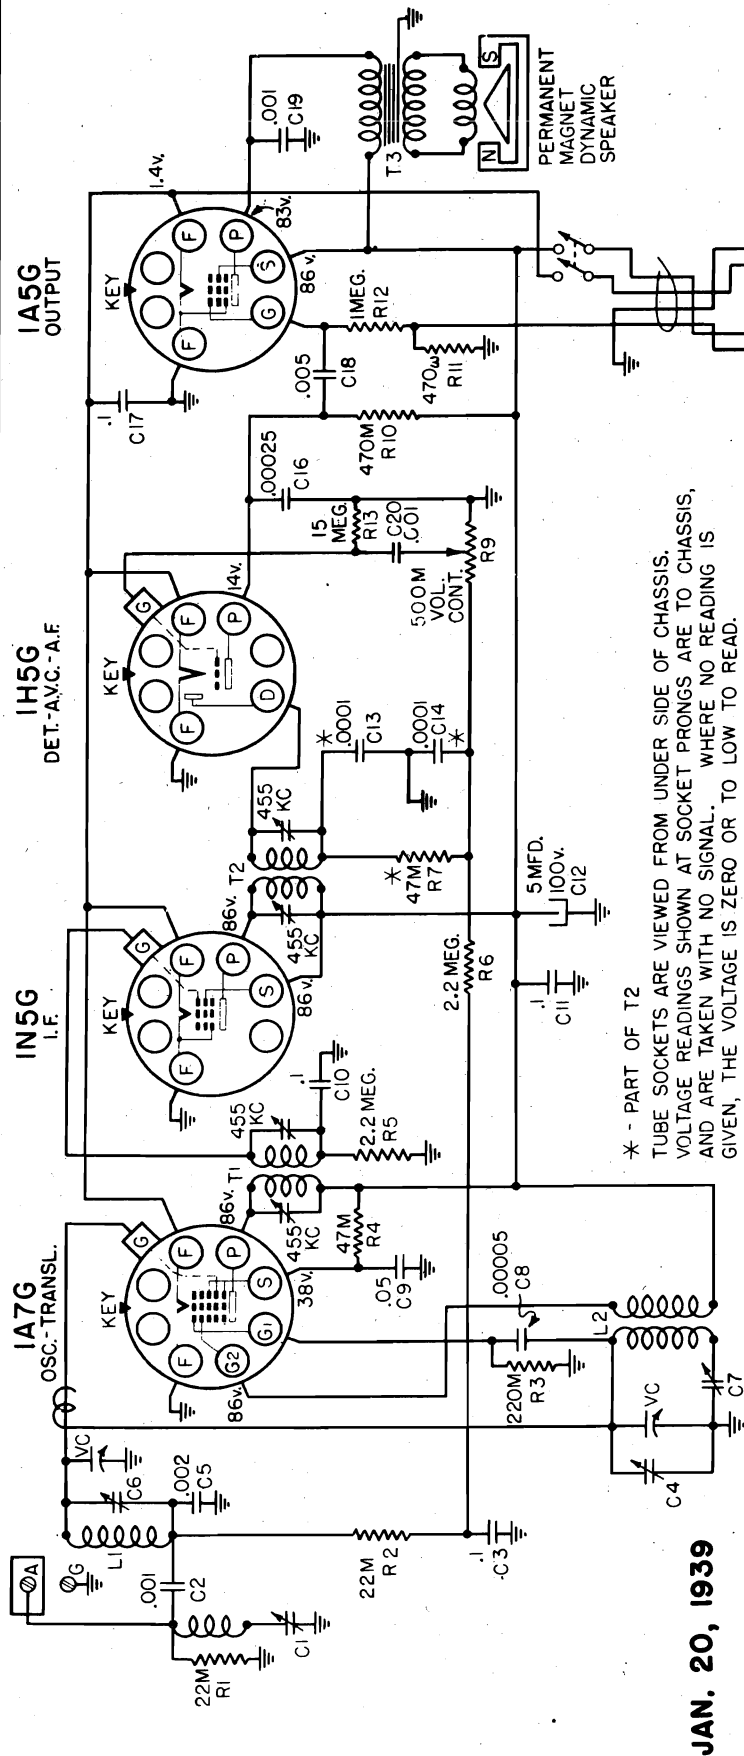

* - PART OF T2
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS.
 VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS,
 AND ARE TAKEN WITH NO SIGNAL. WHERE NO READING IS
 GIVEN, THE VOLTAGE IS ZERO OR TO LOW TO READ.

JAN. 20, 1939

POWER SUPPLY:
 #5060. A-B block (1.4 v. "A", 90 v. "B")
 or
 #734 2 v. Storage "A" battery
 2 - #5041 45 v. "B" battery
 #5070. Acaptor necessary with 2 v. Storage "A"


ALIGNMENT FREQUENCIES:
 Oscillator 1750 kc
 Translator 455 kc
 Trimmer 1400 kc
 Padder 600 kc

LOUD SPEAKER:
 Type PM Dynamic
 Size 5 inch


FREQUENCY RANGE:
 Broadcast 540-1750 kc

INTERMEDIATE FREQUENCY 455 kc

POWER OUTPUT:
 Type Pentode
 Undistorted 0.09 watts
 Maximum 0.17 watts

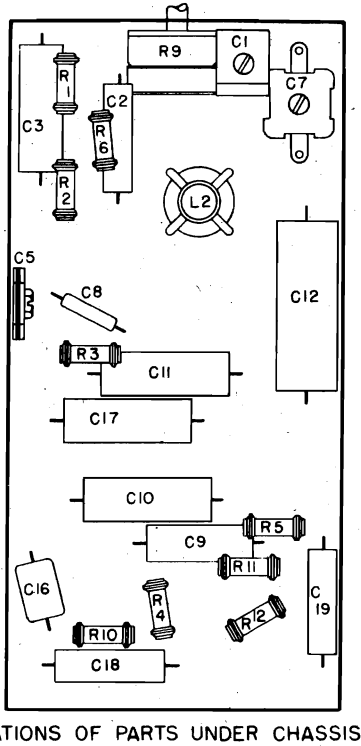

LOCATIONS OF PARTS UNDER CHASSIS

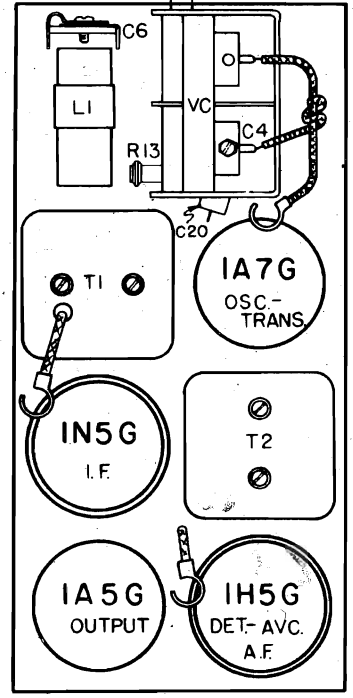


LOCATIONS OF PARTS ON TOP OF CHASSIS

FOR ALIGNMENT
 SEE INDEX


Socket, Trimmers
Tuner

SEARS, ROEBUCK & CO.

MODEL 6261, Ch. 101.561
Schematic, Voltage
Chassis, Alignment

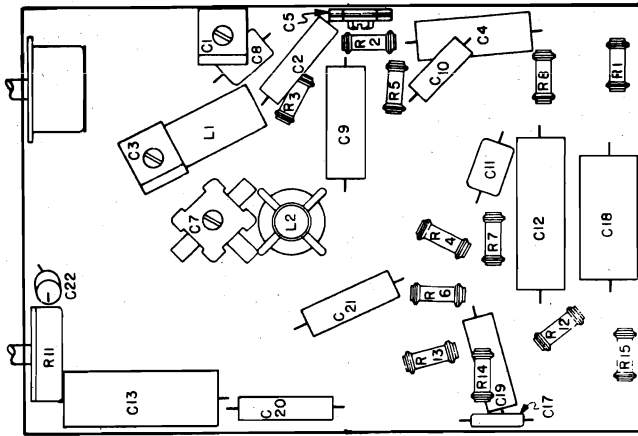

LOCATIONS OF PARTS UNDER CHASSIS

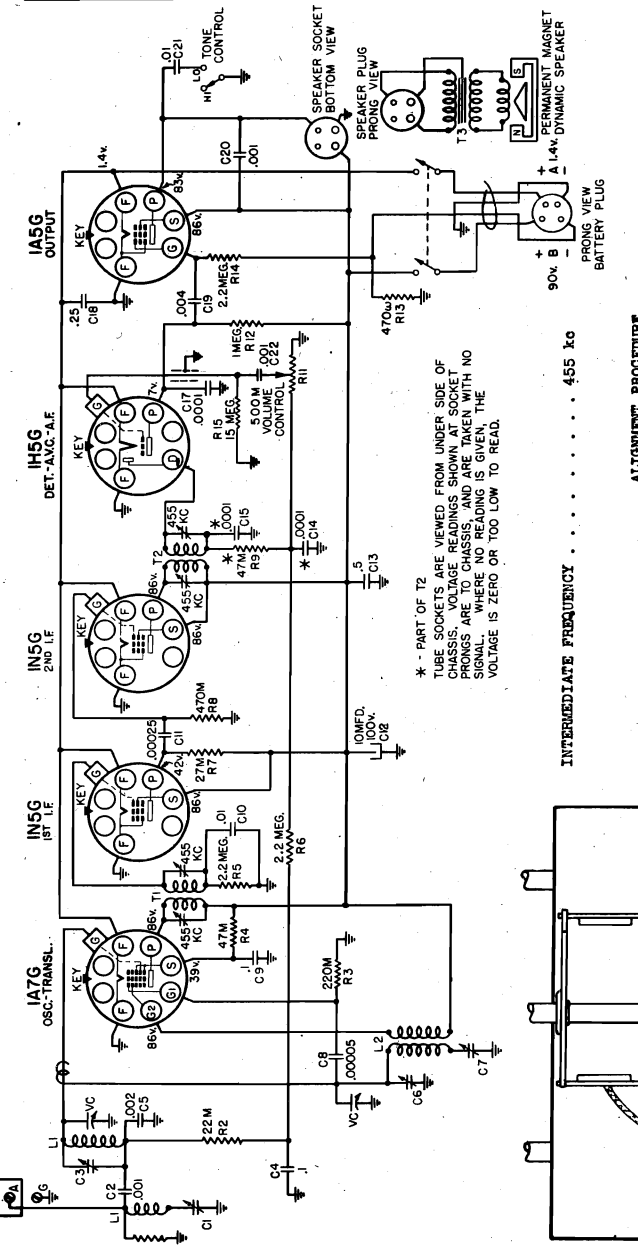

* - PART OF T2
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET CHASSIS, AND ARE TAKEN WITH NO SIGNALS APPLIED TO THE TUNING MECHANISM. THE VOLTAGE IS ZERO OR TOO LOW TO READ.

INTERMEDIATE FREQUENCY 455 kc

ALIGNMENT PROCEDURE

POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER ADJUSTMENTS (IN ORDER SHOWN)	TRIMMER APPROXIMATE FUNCTION	TRIMMER APPROXIMATE MICROVOLTS
Closed	455 kc	.1 mfd.	1A7G Trans-lator Grid	T2, T1	IF	50
800 kc	455 kc	.0002 mfd.	1A5G Grid	C1*	IF Wave Trap	--
1400 kc**	1750 kc	.0002 mfd. Ant. Term.	C6	C6	Oscillator	50
800 kc (rock)	1400 kc	.0002 mfd. Ant. Term.	C3	C3	Trimmer	20
	600 kc	.0002 mfd. Ant. Term.	C7	C7	Padder	20

* The generator should be adjusted to give high output. The trimmer should be adjusted for minimum output meter reading instead of the customary maximum reading. If the frequency of an interfering station near 455 kc is known, the generator and trimmer should be adjusted for the frequency of the interfering station rather than 455 kc.

** Using the dial as a template make a dummy dial of cardboard with only the 1400 kc calibration on it. Slip this dummy dial over the dial board so that the 1400 mark will come at the same position as the 1400 mark on the actual dial and turn the dial pointer to the 1400 kc mark. (The dial pointer should be horizontal when the condenser is fully open or fully meshed.)


The variable should be rocked back and forth a degree or two while making the 600 kc adjustment.

The alignment procedure should be repeated in the original order, step by step, to insure greater accuracy.

Always keep the output power from the generator at its lowest possible value to prevent the AVC of the receiver from interfering with accurate alignment.

PUSH BUTTON TUNING MECHANISM:

The adjustment for each push button is locked or unlocked by tightening or loosening the slotted screwhead made accessible when the push button knob is pulled off of its plunger. Stations are set up by unlocking the mechanism, holding the plunger all the way in and tuning to the desired station, and then securely locking the adjustment.

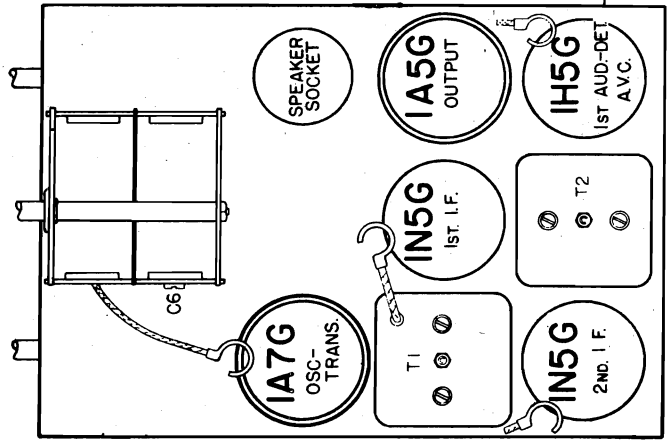

LOCATIONS OF PARTS ON TOP OF CHASSIS


- POWER SUPPLY: A-B block (1.4v. "A", 90v. "B")
 #5060 A-B block (1.4v. "A", 90v. "B")
 #734 or 2v. Storage #A
 #5041 45v. #B battery
 #5071 Adaptor necessary with 2v. Storage #A
 "A" Drain0.35 amperes
 "B" Drain10 ma
 LOUD SPEAKER:
 Type PM Dynamic
 Size 5"
 POWER OUTPUT:
 Undistorted0.09 watts
 Maximum0.17 watts
 FREQUENCY RANGE: 540-1750 kc

- ALIGNMENT FREQUENCIES:
 Oscillator 1750 kc
 Antenna-Transl. 1400 kc
 Trimmer 600 kc
 Padder 600 kc

JAN. 17, 1939

MODEL 6262, Ch. 101.550
Schematic, Voltage
Chassis, Alignment
Socket, Trimmers, Tuner

SEARS. ROEBUCK & CO.

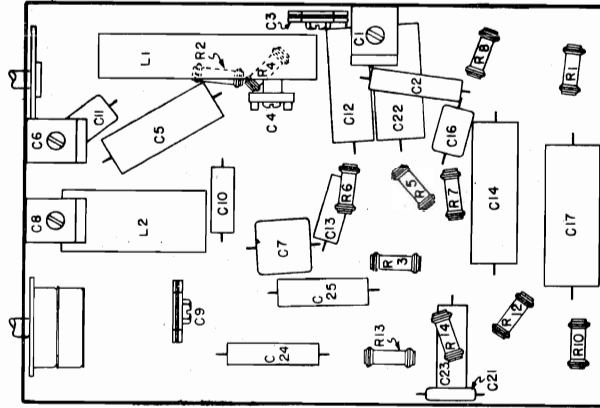

LOCATIONS OF PARTS UNDER CHASSIS

POWER SUPPLY:
#5050 . . . A-B block (1.4v. "A", 90v. "B")
#734 . . . or 2v. Storage "A"
#5041 . . . 45v. Bt. battery with 2 volt
#5071 . . . Adaptor necessary Storage "A"
"A" Drain 0.25 amperes
"B" Drain 10.25 ma


FREQUENCY RANGES:
Broadcast 540-1750 kc
Short Wave 5.95-18.3 mc

ALIGNMENT FREQUENCIES:
Oscillator Antenna-Transel. Padder
Trimmer 1750 kc 1400 kc 600 kc
None 15 mc Fixed

INTERMEDIATE FREQUENCY 455 kc

LOUD SPEAKER:
Type PM Dynamic
Size 6 inch

POWER OUTPUT:
Type Pentode
Undistorted 0.069 watts
Maximum 0.18 watts

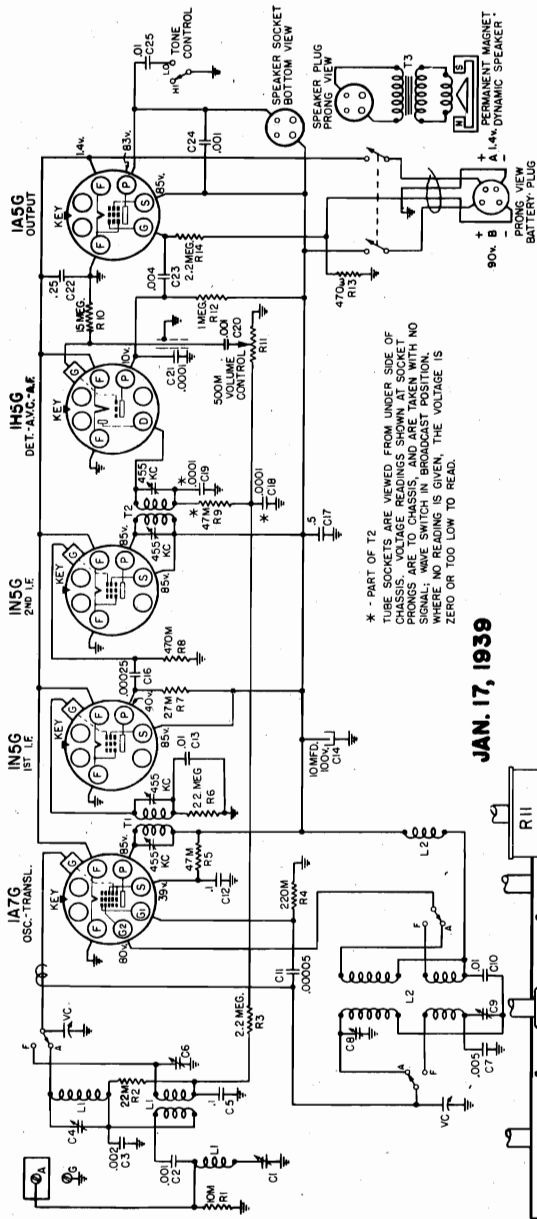

* - PART OF T2
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF
CHASSIS. PINNINGS AND SOCKET PRONGS
ARE TO CHASSIS. TUBE SOCKETS ARE TO TAKE SIGNAL;
WAVE SWITCH IN BROADCAST POSITION. NO
WHERE NO READING IS GIVEN, THE VOLTAGE IS
ZERO OR TOO LOW TO READ.

ALIGNMENT PROCEDURE

Output meter connection Across loud speaker voice coil
Output meter reading indicate 50 milliwatts.
Approximate average sensitivity in microvolts for 50 milliwatts output See para. below
Generator ground lead connection Receiver chassis
Generator modulation 30% 400 cycles
Position of Volume Control Fully clockwise
Position of Tone Control HI
Position of Dial Pointer with variable fully closed Horizontal

TRIMMERS

WAVE BAND POSITION	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER (IN ORDER SHOWN)	FUNCTION	APPROXIMATE MICROVOLTS
"AM" Closed	455 kc	.1 mfd.	1A7G Grid	T2, T1	IF Output	60
"AM" Fully open	1750 kc	.0003 mfd.	Ant. Term.	C1*	Wave Trap	40
"AM" 1400 kc	1400 kc	.0003 mfd.	Ant. Term.	C8	Oscillator	25
"AM" 600 kc(rock)	600 kc	.0003 mfd.	Ant. Term.	C4	Translator	25
"FOR" 15 mc(rock)	15 mc	400 ohms	Ant. Term.	C9	Padder	30
				C6	Translator	30

IMPORTANT ALIGNMENT NOTES


* The Generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading instead of the usual maximum reading. If the frequency of an interfering station around 455 kc is known, the generator should be adjusted to the frequency of that station instead of to 455 kc.

Where indicated by the word, "Rock" the variable should be rocked back and forth a degree or two while making the adjustment.
The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Use the output from the test oscillator at its lowest possible value to make the AVG action of the receiver insensitive.

PUSH BUTTON TUNING MECHANISM

The adjustment for each push button is locked or unlocked by tightening or loosening the slotted screwhead made accessible when the push button knob is pulled off of its plunger. Stations are set up by unlocking the mechanism, holding the plunger all the way in and tuning to the desired station, and then securely locking the adjustment.

JAN. 17, 1939

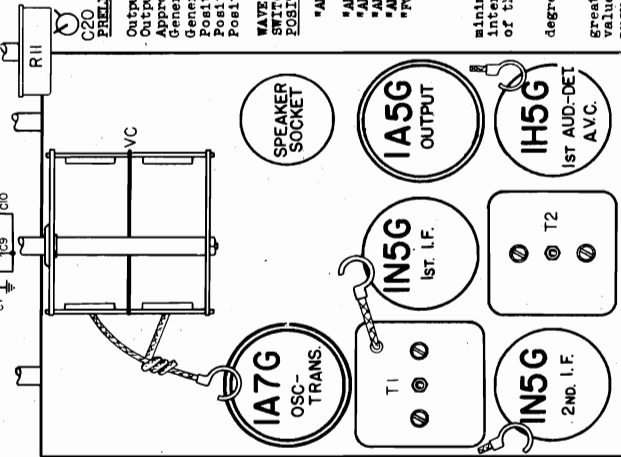

LOCATIONS OF PARTS ON TOP OF CHASSIS

CHASSIS 101.553, A
Alignment

SEARS, ROEBUCK & CO.

MODEL 6263, Ch. 101.562
Schematic, Voltage
Chassis, Alignment
Socket, Trimmers, Tuner


POWER SUPPLY:
#50L1, A-B block (1.4 v. "A", 90 v. "B")
or
#734, #6043, 2 v. Storage "A"
#45, #91, #81, Battery
#6072, Adaptor necessary with 2 v.
Storage "A"
#8* Drain, 0.35 Amperes
#8* Drain,13 ma

LOUD SPEAKER:
Type, PM Dynamic
Size,6 inch



POWER OUTPUT:
Type, Class "B"
Undistorted, 0.41 watts
Maximum, 0.74 watts

FREQUENCY RANGES:
Broadcast, 540-1730 kc
Short Wave, 5.95-13.5 mc

ALIGNMENT FREQUENCIES:
Oscillator, Antenna-Transal., Padder
Trimmer, 1430 kc, 80
None, 1.6 mc, Fixed

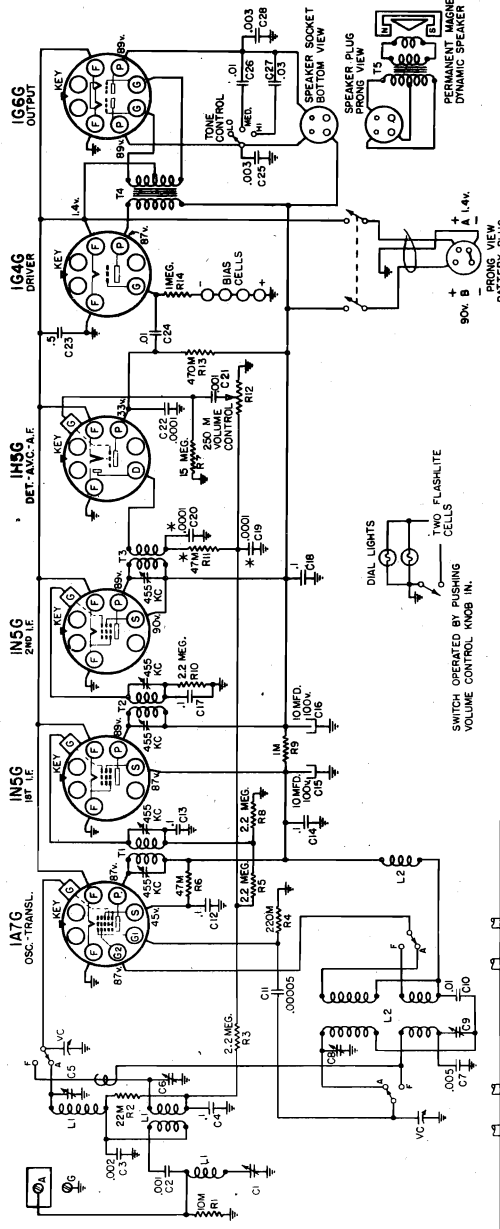

* PART OF T3
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF
CHASSIS. SIGNALS FROM SIGNAL SOCKETS
ARE TO CHASSIS, AND ARE TAKEN WITH NO
SIGNAL. WAVE SWITCH IN BROADCAST POSITION,
WHERE NO READING IS TAKEN, THE VOLTAGE IS
ZERO OR 100 LOW TO READ.

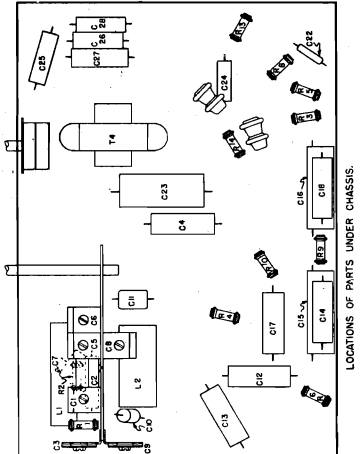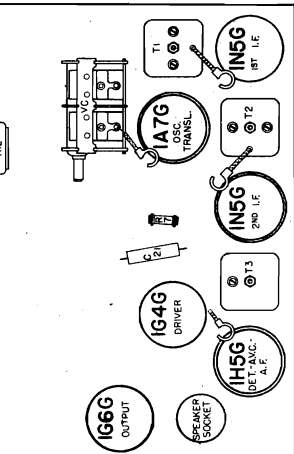

PRELIMINARY:

Output meter connection to indicate 50 millivolts
Output meter reading to indicate 50 millivolts for 50 milliwatt output. See chart below
Generator ground lead connection Receiver chassis
Generator modulation control 30%, 400 cycles
Position of Tone Control Fully clockwise
Position of Wave Control HI
Position of Dial Pointer with variable fully closed To fall in center of heavy block
to left of 550 kc mark.

ALIGNMENT PROCEDURE

Output meter connection to indicate 50 millivolts
Output meter reading to indicate 50 millivolts for 50 milliwatt output. See chart below
Generator ground lead connection Receiver chassis
Generator modulation control 30%, 400 cycles
Position of Tone Control Fully clockwise
Position of Wave Control HI
Position of Dial Pointer with variable fully closed To fall in center of heavy block
to left of 550 kc mark.

WAVE BAND SWITCH POSITION	GENERATOR FREQUENCY	DUMMY ANTENNA	APPROXIMATE FUNCTION	TRIMMER	ADJUSTED CONNECTION
"AM"	455 kc	.1 mfd.	1430 kc	IF Output	20 55
"AM"	500 kc	.0002 mfd.	Ant. Term.	IF Input	80
"AM"	1400 kc	.0002 mfd.	Ant. Term.	IF Input	80
"AM"	600 kc	.0002 mfd.	Ant. Term.	IF Input	80
"FOR"	516 mc	400 ohms	Ant. Term.	IF Input	8 60

INTERMEDIATE FREQUENCY 455 kc
Number of stages, Two
Antenna, In-fang, Two
Built-in IF Wave Trap

CHASSIS FEATURES:
Tone Control, Three position
Automatic Volume Control,
"On-Off" Indicator
Dial FLASH-O-LITE
Push Button Tuning (6 button)

OPERATING FEATURES:
1. Upper left knob Volume increase
2. Lower left knob and dial light
3. Upper right knob Wave Tuning
4. Lower right knob "On-Off" Switch
and Tone

CONTROL OPERATION:
Turning right: Volume increase
Turning right: Pushing Dial Flash-O-Lite
Turning ratio: "AM", "FOR"
Turning ratio: "ON", "HI", "NEED", "LO"

OPERATING FEATURES:
1. Upper left knob Volume increase
2. Lower left knob and dial light
3. Upper right knob Wave Tuning
4. Lower right knob "On-Off" Switch
and Tone


CONTROL OPERATION:
Turning right: Volume increase
Turning right: Pushing Dial Flash-O-Lite
Turning ratio: "AM", "FOR"
Turning ratio: "ON", "HI", "NEED", "LO"

For Models 6218, 6271, 6272, Chassis 101.533, 101.533A
The generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading instead of the usual maximum reading. If the frequency of an interfering station around 485 kc is known, the generator should be adjusted to the frequency of that station instead of to 485 kc.
Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.
The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.
PUSH BUTTON TUNING:
The push button mechanism is locked and unlocked by tightening or loosening the wing nut at the end of the mechanism. (A separate key is supplied in the case of table models instead of the wing nut.) Stations are set up by pulling the button all the way in and accurately locking the mechanism securely to prevent slipping. After all of the buttons have been set up,

JAN. 20, 1939

MODELS 6264, 6265
 Chassis 101.551
 Schematic, Voltage, Socket
 Chassis, Tuner, Trimmers

SEARS, ROEBUCK & CO.

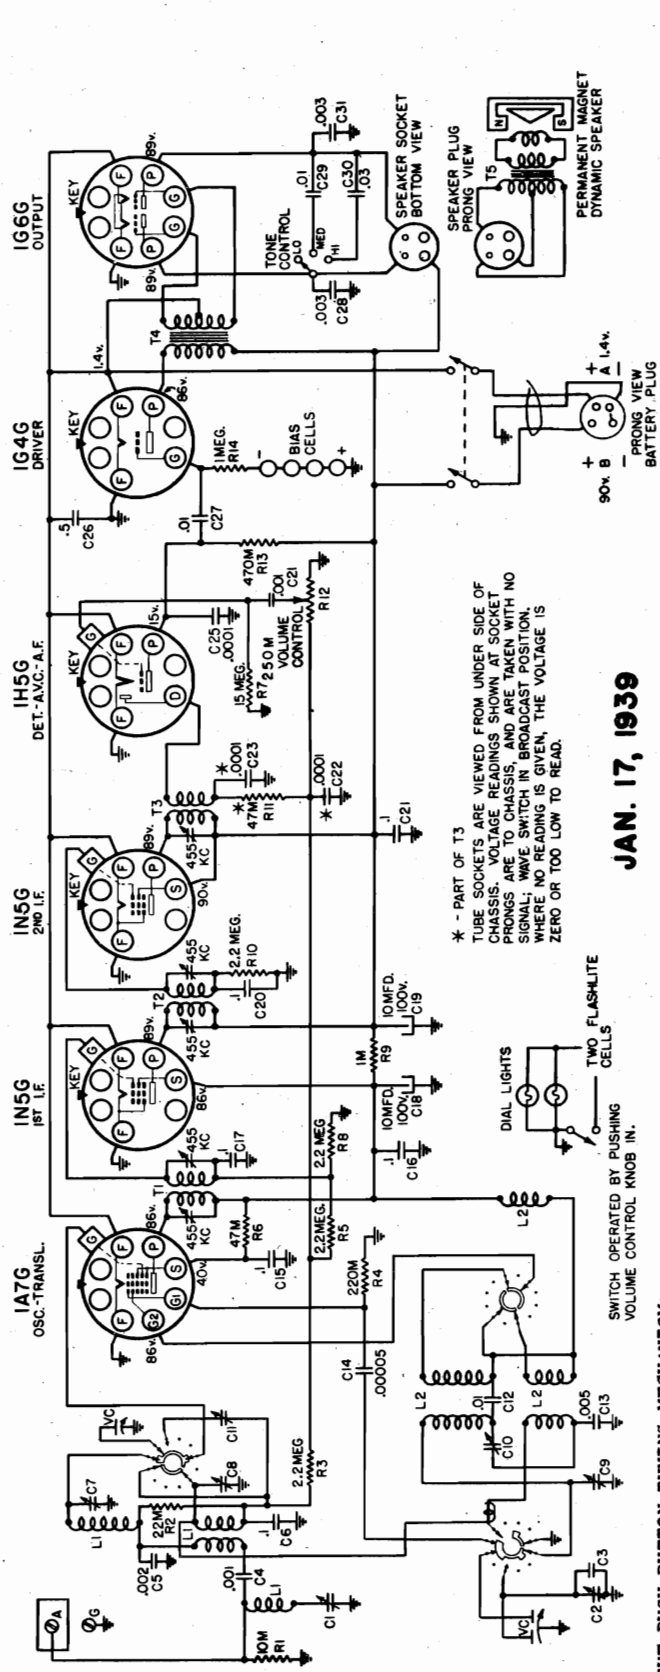

JAN. 17, 1939

* - PART OF T3
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

THE PUSH BUTTON TUNING MECHANISM:

The push button mechanism is locked or unlocked by tightening or loosening the wing nut at the end of the mechanism. (A key, instead of the wing nut, is supplied with table models. Remove the snap-in button at the side of the cabinet and engage the key with the slot at the end of the push button mechanism.) Stations are set up by unlocking the mechanism, holding the button all the way in, tuning to the desired station, and then releasing the button. After all of the buttons have been set, the mechanism should be locked by securely tightening the wing nut.

POWER SUPPLY: A-B block (1.4v. "A", 90v. "B")
 #5061 or
 #754 2v. Storage "A"
 2 - #5043 45v. "B" battery
 #5072 Adaptor necessary with 3v. Storage "A"
 "A" Drain 0.35 amperes
 "B" Drain 12 ma

INTERMEDIATE FREQUENCY
 455 kc


FOR ALIGNMENT
 SEE INDEX

LOUD SPEAKER:

Type PM Dynamic
 Size 6 and 8 inch


POWER OUTPUT:

Type Class "B"
 Undistorted 0.4 watts
 Maximum 0.7 watts

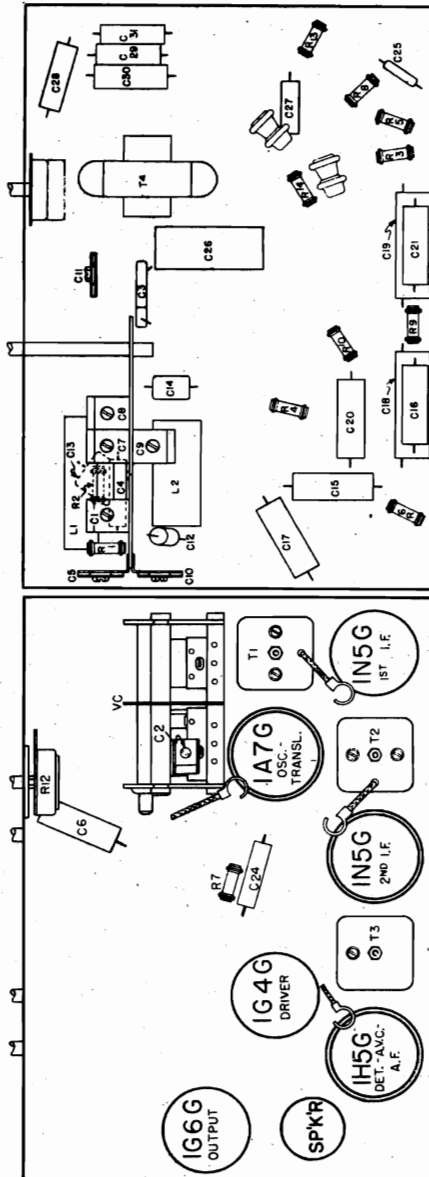

SEARS, ROEBUCK & CO.

MODEL 6266
Ch. 101.563, 101.563-1A
Schematic, Voltage, Chassis
Socket, Trimmers, Alignment

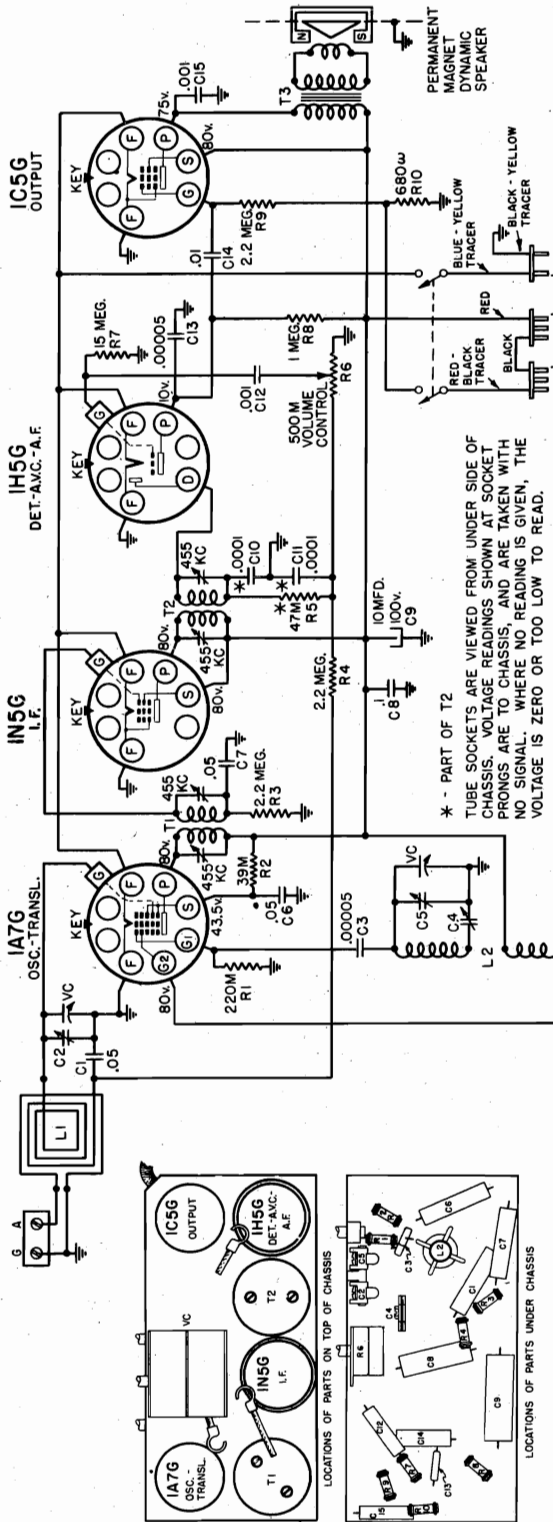

* - PART OF T2
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

ALIGNMENT PROCEDURE

Output meter connections Across loud speaker voice coil
Output meter reading to indicate 50 milliwatts 0.38 volts
Generator ground lead connection To ground
Connection of generator output lead See chart below
Generator modulation 30% 400 cycles
Position of Volume Control Fully on
Position of Dial Pointer with variable fully closed to fall on bar just below 550 kc calibration mark.

POSITION OF VARIABLE	GENERATOR FREQUENCY	GENERATOR CONNECTION	TRIMMER FUNCTION
Closed	455 kc	IA7G Transl. Grid	IF
Fully open	1510 kc	T3, T1	Oscillator
1400 kc	1400 kc	C5	Transistor
500 kc (rock)	500 kc	C2, C4	Padder

The chassis is removed from the case in order to align the IF but the loop antenna must be left connected.
* Run a wire from the output terminal of the signal generator, having it come near the receiver. However, no metallic connection is made between the signal generator and the receiver.

The back cover containing the loop antenna must be in place when making the translator, oscillator, and padder adjustments. Also, the batteries must be in place (instead of making connection to external batteries). The trimmers are accessible from the front of the receiver when the escutcheon is removed, as shown in the illustration.

The variable should be rocked back and forth a degree or two while making the 600 kc adjustment.

Alignment should be done with no connection made to the external antenna and ground terminals, even though an external antenna is normally used with the set.

The alignment procedure should be repeated in the original order, step by step, to insure greater accuracy.

Always keep the output power from the generator at its lowest possible value to prevent the AVC of the receiver from interfering with accurate alignment.

Chassis identified by 101.563-1A use a loop antenna that is wound directly on the back cover of the carrying case. The knob design and part number also have been changed. Should the loop be disconnected from the receiver for any reason, be sure that the colored leads are re-connected to the same terminals as originally, indicated by the paint spot on one of the terminals.


POWER SUPPLY:
"A" Battery (1 1/2 volt) 1 - #5063
Service rating - 150 Hours
"B" Batteries 2 - #5039
Service rating - 200 Hours

POWER OUTPUT:
Type Single Pentode
Undistorted 0.15 watts
Maximum 0.275 watts

LOUD SPEAKERS:
Type PM Dynamic
Size 5 inch

ALIGNMENT FREQUENCIES:
Oscillator 1510 kc
Transistor 1400 kc
Padder 600 kc

FREQUENCY RANGE:
Broadcast 540-1610 kc

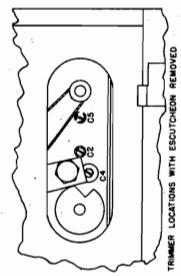


TRIMMER LOCATIONS WITH ESCUTCHEON REMOVED

FEB. 13, 1939

MODEL 6274
Ch.110.391,110.391-1
Schematic,Voltage
Alignment,Batt.Conn.

SEARS, ROEBUCK & CO.

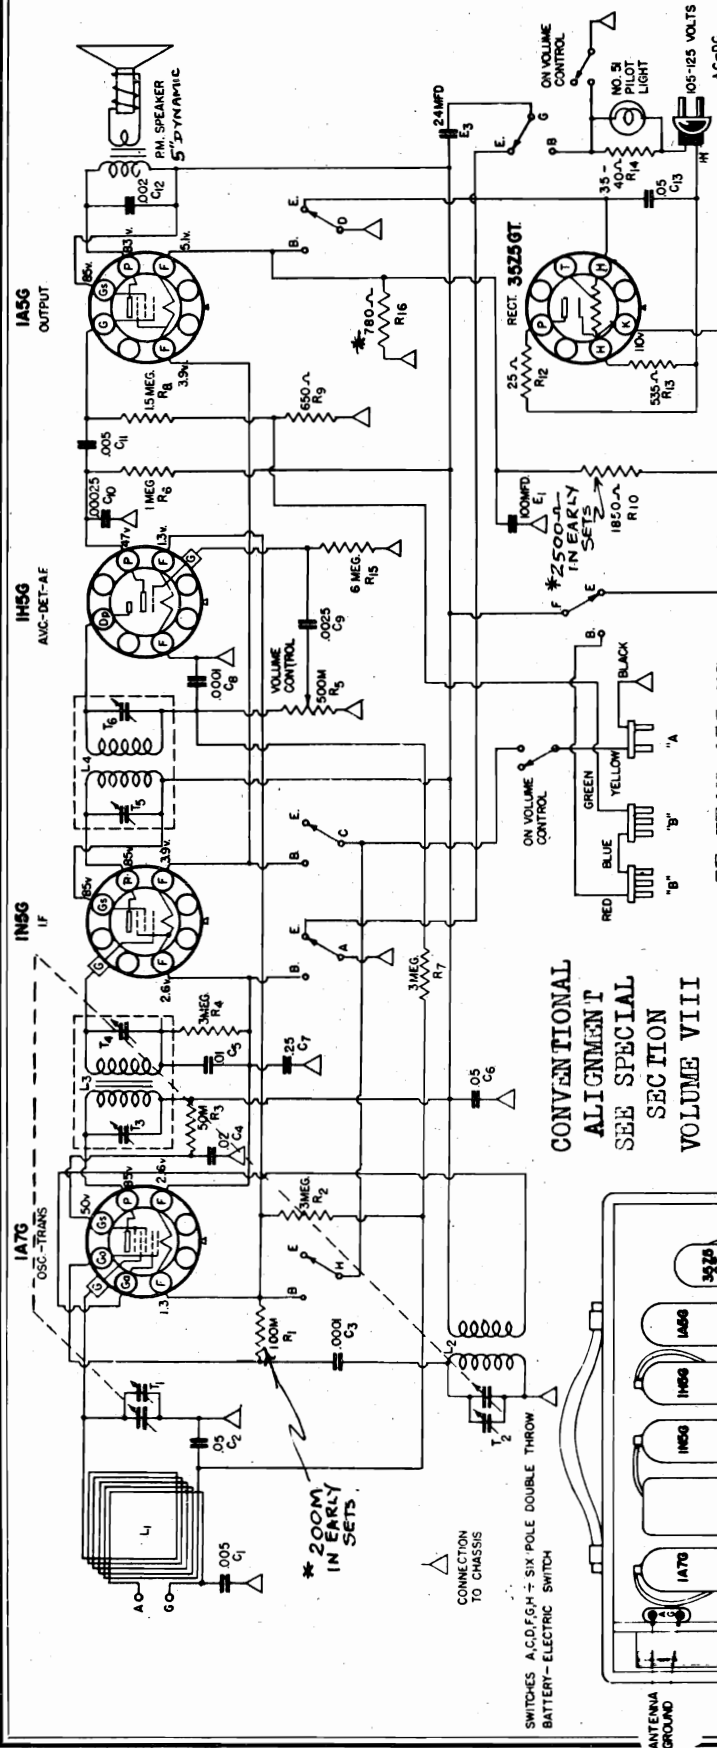

NOVEMBER 15, 1939

* IDENTIFICATION NO. 110.391-1

- (1) Resistors R1 and R10 have been changed.
- (2) Resistor R16 has been added.
- (3) Electrolytic condensers E1 and E2 have been changed.

IF PEAK 455 KC

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII

ALIGNMENT NOTES

The complete assembly of loop mounting and chassis shelf should be removed as a unit in order to align the receiver.

The batteries should be in the proper position when aligning the receiver.

1500 KC Run a wire from the output terminal of the generator, having it come near the receiver. However, no electrical connection is made between the signal generator and the receiver.

FREQUENCY RANGE:

Broadcast 540-1750 KC mins.

POWER OUTPUT:

Type Pentode
Undistorted 100 MW
Maximum 260 MW

Always keep the output power from the generator at its lowest possible value to prevent the avc of the receiver from interfering with accurate alignment.

* CHASSIS, IDENTIFIED BY No. 110.391-1, HAVE UNDERGONE A CIRCUIT CHANGE IN ORDER TO PROTECT THE ELECTROLYTIC CONDENSER FROM EXCESSIVE VOLTAGE SURGES AND TO IMPROVE TUBE OPERATION STABILITY.

TUBE SOCKETS VIEWED FROM TOP SIDE OF CHASSIS
VOLTAGES AT INDICATED SOCKET PRONGS ARE
MEASURED TO CHASSIS WITH THE SWITCH IN THE
ELECTRIC POSITION

REMOVE 2 SCREWS & STRIP TO INSTALL
OR REMOVE BATTERIES

LINE CORD FOR
ELECTRIC OPER-
ATION

REMOVE PLUGS
BEFORE CHANGING
BATTERIES

CONNECTION
TO CHASSIS

SWITCHES A,C,D,F,G,H - SIX POLE DOUBLE THROW
BATTERY-ELECTRIC SWITCH

* 200M
IN EARLY
SETS.

MODEL 6301
Chassis Wiring, Socket
Trimmers

SEARS. ROEBUCK & CO.

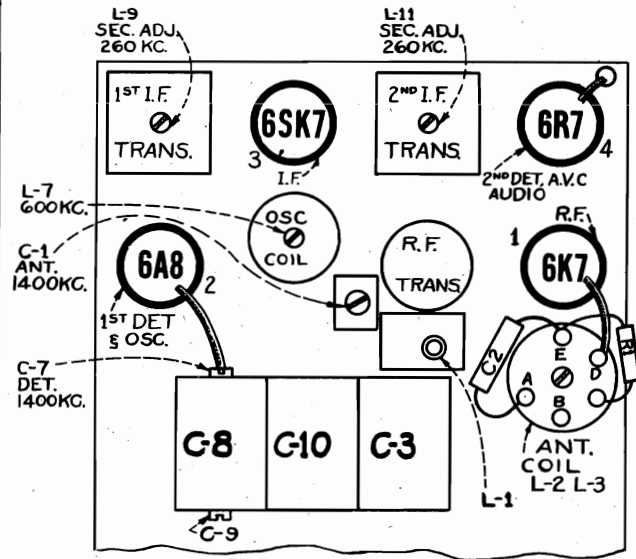


FIG. 1 CONTROL UNIT
TUBE, TRIMMER AND PARTS LOCATION
BOTTOM VIEW

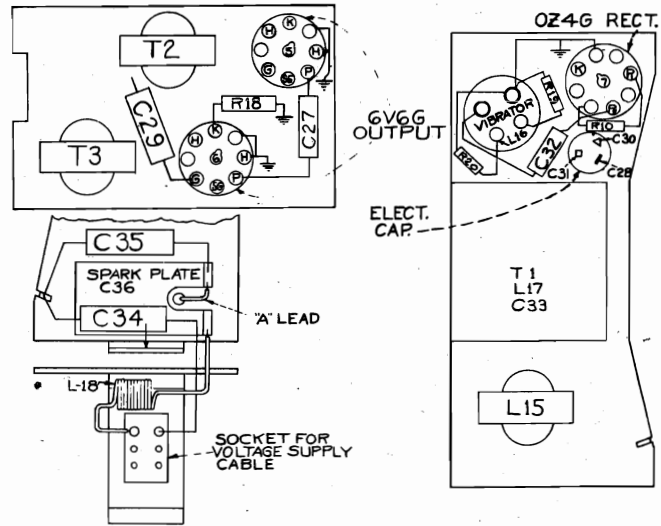


FIG. 2. POWER AND SPEAKER UNIT
TUBE AND PARTS LOCATION
EXPANDED VIEW


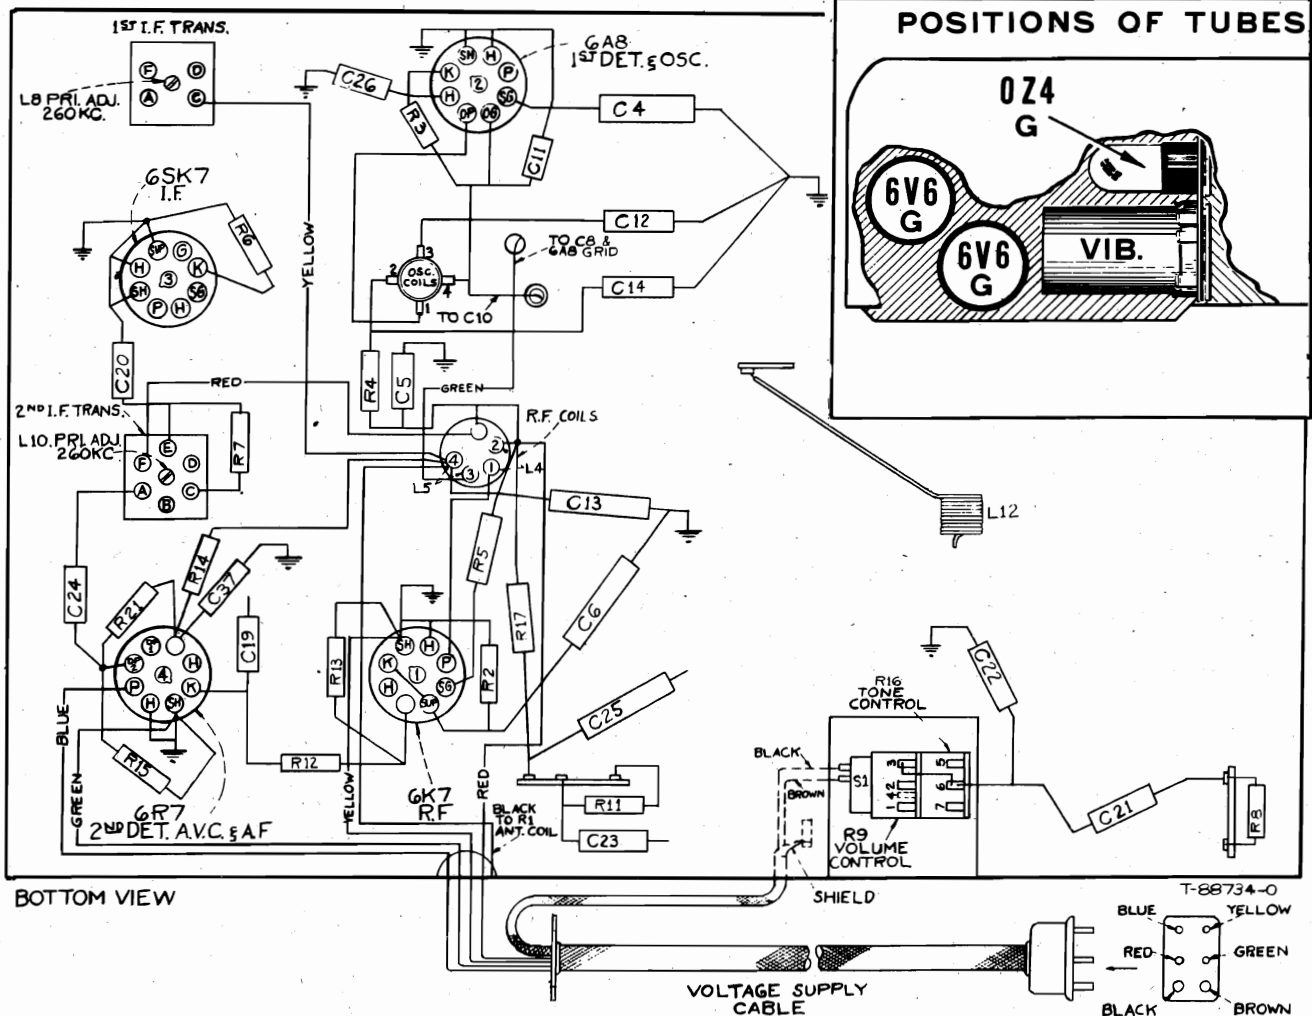


FIG. 3. CONTROL UNIT
TUBE, TRIMMER AND PARTS LOCATION - TOP VIEW

SEARS, ROEBUCK & CO.




MODEL 6302, Ch. 101.598
Schematic, Voltage, Chassis
Socket, Trimmers, Alignment

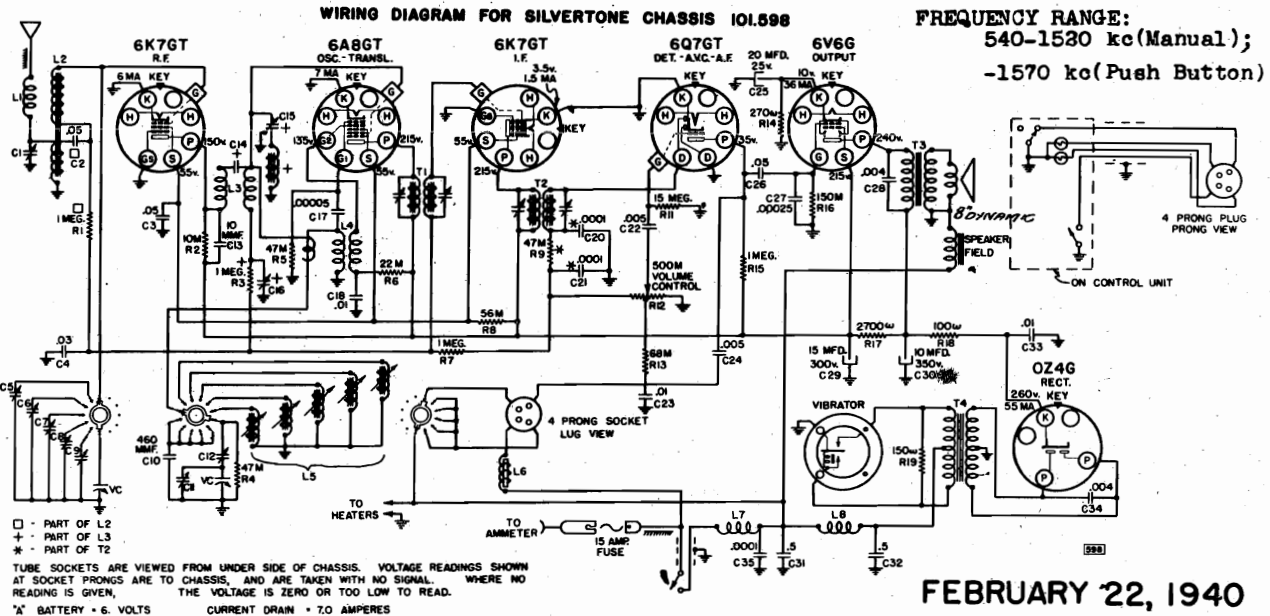

FEBRUARY 22, 1940

INTERMEDIATE FREQUENCY
455 kc

IF PEAK 455 KC
Type Pentode
Undistorted . . . 3.3 watts
Maximum 6 watts

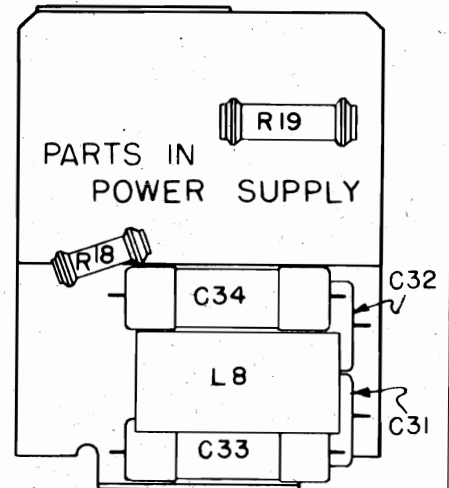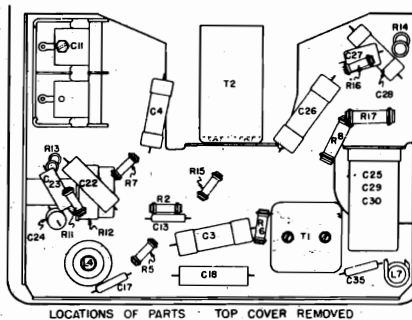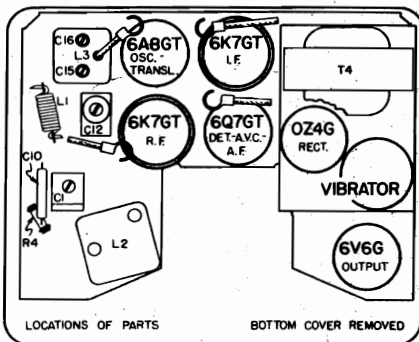

PRELIMINARY:

Output meter connections across loud speaker voice coil Position of Volume Control . Fully on
Output meter reading to indicate 1 watt . . . 0.79 volts Position of Tone Control . . Brilliant

ALIGNMENT PROCEDURE

POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	ADJUSTMENTS (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS FOR 1 W. OUTPUT
Closed	455 kc	.1 mfd.	RF Grid	T2, T1	IF	--
Closed	455 kc	.1 mfd.	RF Grid	C16*	IF Wave Trap	--
Open	1530 kc	**	Ant. Conn.	C11	Oscillator	--
Open	2430 kc	**	Ant. Conn.	C15*	Image Rejector	--
Closed	540 kc	**	Ant. Conn.	C12	Padder	10
Open	1530 kc	**	Ant. Conn.	C11	Oscillator	10
1400 kc	1400 kc	**	Ant. Conn.	C1	Antenna	10
600 kc (rock)	600 kc	**	Ant. Conn.	C12	Padder	10

The receiver must be in its case during alignment (but the covers will be removed).

* The signal generator should be adjusted for high output and the trimmer should be adjusted for minimum response.

** The dummy antenna will consist of a 40 mmfd. condenser connected in series between the generator and the receiver and another 40 mmfd. condenser connected from the receiver antenna connection to the chassis.


The alignment procedure should be repeated in the original order, step by step, to insure greater accuracy.

Always keep the output power from the generator at its lowest possible value to prevent the AVC of the receiver from interfering with accurate alignment, except as noted by (*) above.

Chassis Wiring, Socket Trimmers, Notes

SEARS, ROEBUCK & CO.


MODEL 6303, Ch. 126.223 Schematic, Voltage, Dial

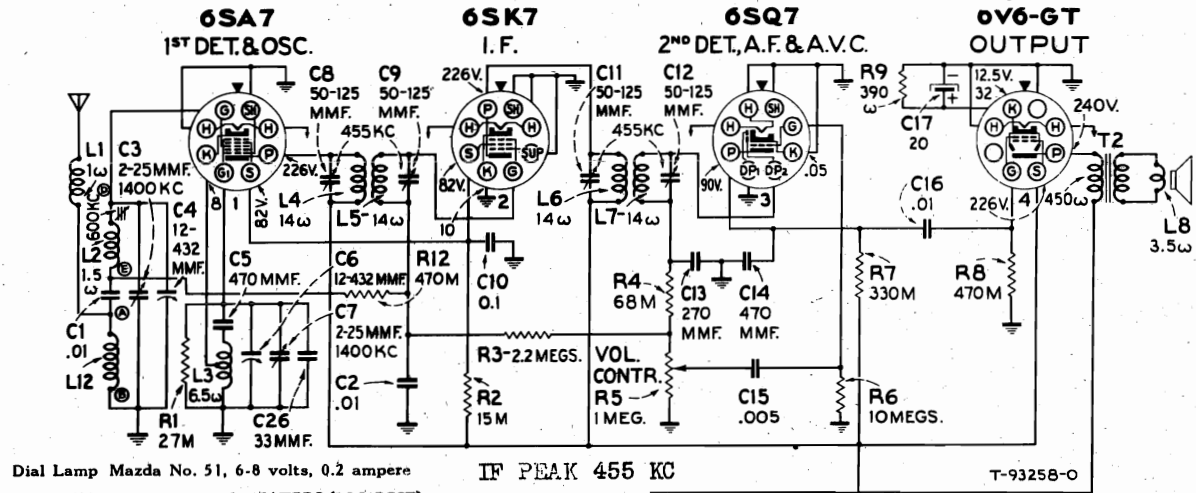

Dial Lamp Mazda No. 51, 6-8 volts, 0.2 ampere

IF PEAK 455 KC

T-93258-O

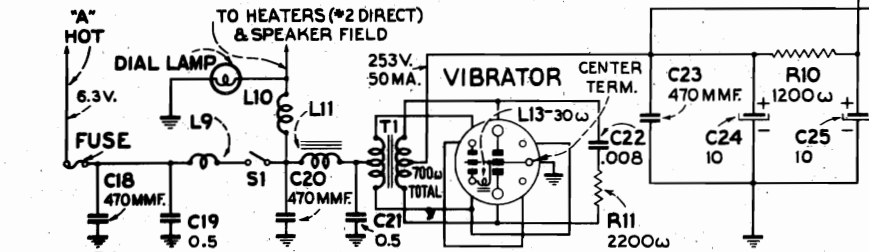


TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. ALIGNMENT IS TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMING ADJUSTMENTS. WHERE NO VOLTAGE READING IS SHOWN, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. VOLTAGES TO BE MEASURED WITH NO SIGNAL. THE FIGURES AT CATHODES ARE CATHODE CURRENT IN MILLIAMPERES.

Antenna Filter:

Frequency Range 550-1,550 kc

A filter is included in the antenna circuit. Being completely shielded, it prevents radiating ignition interference within the set. It also reduces the possibility of picking up vibrator interference. As illustrated, the filter unit is mounted inside a steel shell which in turn is welded to the chassis. The shielded antenna lead-in makes contact with the filter unit within the steel shell and is held in place by a bayonet type connector.

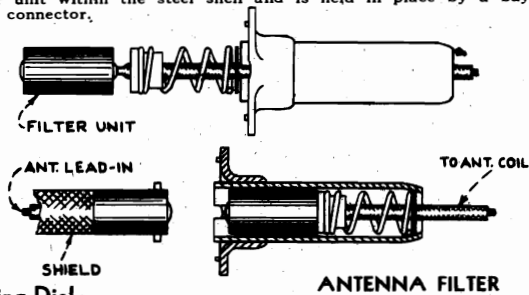

Tuning Dial:


The tuning shaft is connected through a cord drive to a drum on the condenser shaft. This same cord drives the dial indicator by passing over pulleys on the chassis. The complete cord drive assembly and the correct number of turns which the cord should be wrapped around the drive shaft and condenser drum is shown in the "Drive Cord Hookup" illustration.

Antenna Circuit:

It is very important that these instructions be followed when installing the receiver.

The antenna circuit is designed to work with an antenna having a total capacity including the shielded lead-in not to exceed 100 mmf. If an antenna having a larger capacity is to be used, it will be necessary to add a capacitor in series with the lead from the antenna filter L-1 to the antenna coil terminal ("A").

After installation and with antenna connected, tune in a weak station near 1,400 kc and adjust compensator trimmer C-3 for maximum signal output. This trimmer is accessible by removing plug button (see illustration) on side of receiver. If a maximum (peak) signal output cannot be obtained in the range of the antenna trimmer, the effective capacity should be checked and compensated for by varying series capacity as described above.

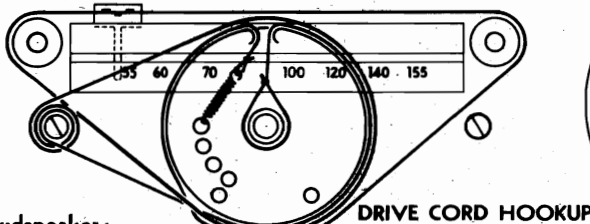



Loudspeaker:

The loudspeaker cone may be centered in the usual manner with three celluloid or paper feelers after gently cutting away the front dust cover. A new cover should be cemented in place upon completion of the adjustment.

Power Supply

"A"	6.3 volt Auto Storage Battery
"B"	Synchronous Vibrator
Current Drain	5.8 amps
Fuse Protection	15 amperes
Power Output	
Type	Beam Power
Undistorted	2.0 watts
Maximum	4.0 watts
Loudspeaker	
Type	Electrodynamic
Size	4-inch
V.C. Impedance	4 ohms at 400 cycles
Field Coil Resistance	4 ohms

FEBRUARY 20, 1940

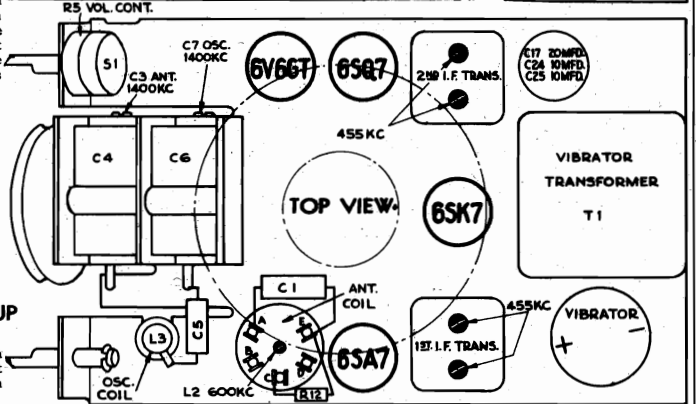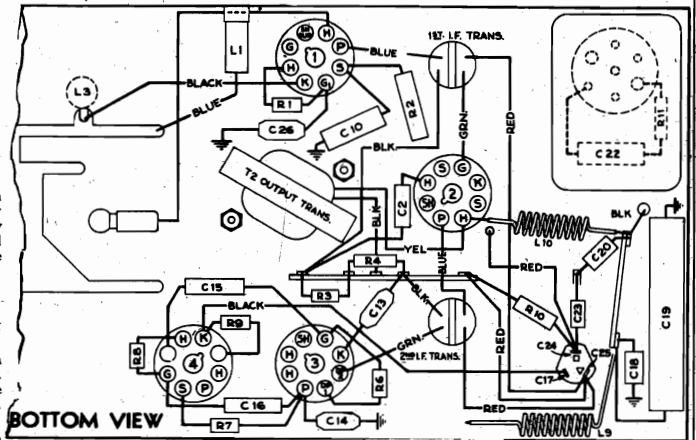

MODEL 6303, Ch. 126.223
Alignment, Noise Notes

SEARS, ROEBUCK & CO.

ALIGNMENT PROCEDURE

PRELIMINARY:


Output meter connections	Across speaker voice coil
Output meter readings to indicate 1 watt	2 volts
Generator ground lead connections	To chassis
Dummy antenna value to be in series with generator output	See chart below
Connection of generator output lead	See chart below
Generator modulation	30%, 400 cycles
Position of Volume Control	Fully clockwise

Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connections	Adjustment Symbol	Circuit Adjusted	Approx. Microvolts
No Signal 550-750 kc	455	.01 mfd.	6SK7 Grid (No. 4 pin)	C11, C12	2nd I.F. Trans.	2,400
No Signal 550-750 kc	455	.01 mfd.	6SA7 Grid (No. 8 pin)	C8, C9	1st I.F. Trans.	55
600 kc Signal	600 kc	100 mmfd.*	Antenna Connector	L2	Ant.	7
1,400 kc	1,400 kc	100 mmfd.*	Antenna Connector	C7 C3	Osc. Ant.	2
600 kc Signal	600 kc	100 mmfd.*	Antenna Connector	L2	Ant.	7
1,400 kc Signal	1,400 kc	100 mmfd.*	Antenna Connector	C3	Ant.**	2

* Make the generator connection through a 100 mmfd. (.0001) capacity inserted at the antenna connector of the receiver. The lead from the signal generator to the 100 mmfd. capacitor may be shielded if desired, but no shielding should be used between capacitor and antenna connector.

** Final adjustment of C3 must be made after the receiver has been installed and the antenna connected. See "Antenna Circuit!"

Each step of the alignment should be repeated in its original order for greater accuracy. Always keep the output from the generator at its lowest possible value, to prevent the A.V.C. action of the receiver from interfering with accurate alignment. Alignment adjustment locations are shown on the top and bottom parts location views of chassis. Only the dummy antenna indicated in the chart for any particular frequency should be used. Values shown under "Microvolts" are only approximate.

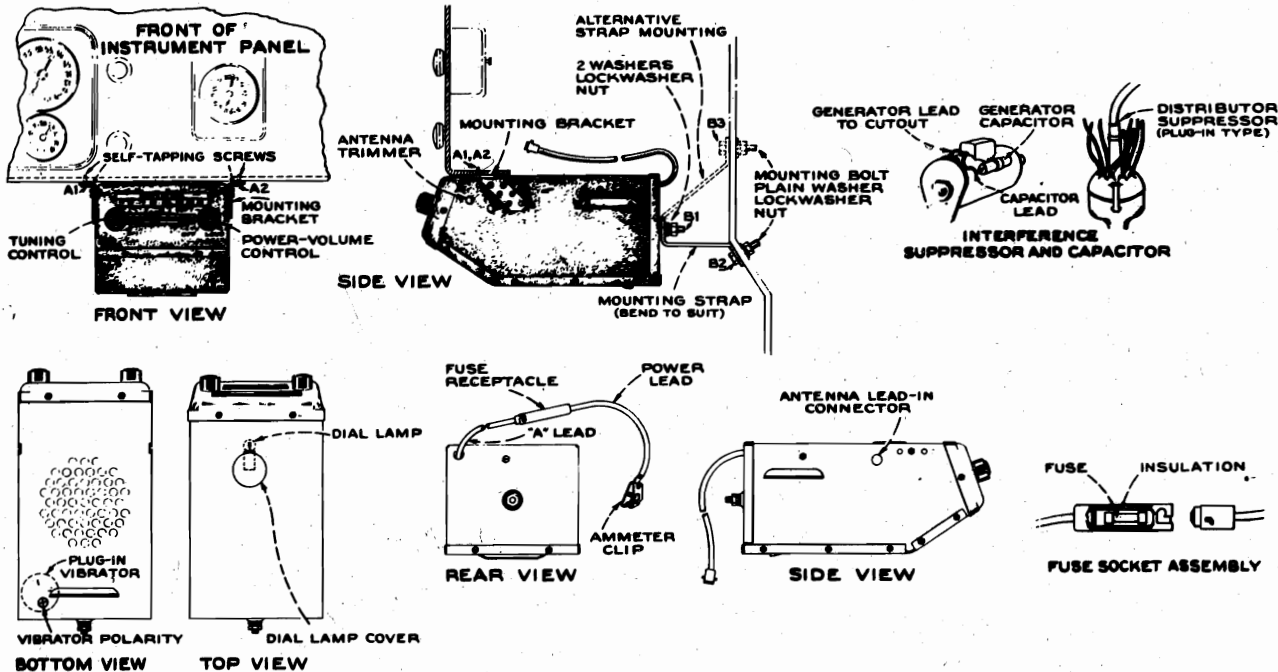

Noise Elimination:

The presence of noise is generally due to the high intensity of electrical disturbances from the car ignition system in relation to strength of desired station. The reduction of such noise should be carried out methodically by: (1) Increasing effectiveness of the antenna and providing for protection against stray pickup; (2) subduing the interference at its source; and (3) installation of filter devices to prevent transmission of interference into the receiver circuits.

Antenna—Should be located well away from engine compartment to avoid ignition disturbance, and as far as possible from front wheels to eliminate "wheel static." Lead-in should be completely shielded and shield grounded to frame of car at as many points as possible. It is very essential that the antenna be electrically "matched" to the receiver input—this is accomplished by adjustment of the antenna trimmer and the operations explained under "Antenna Circuit."

Ignition—Radio frequency interference is created in the secondary and primary ignition circuits, usually at each point where a repeating contact, or spark, is made. The most prominent sources on the average car are: (a) Distributor—add the suppressor-resistor in the center or common high-voltage lead; also have points cleaned and adjusted, if necessary; (b) Generator—connect an 0.5 mfd. shielded capacitor directly across generator output; also see that commutator is smooth and brushes properly seated for minimum sparking; (c) Gasoline Gauge—on gauges having an electrical contact, an 0.5 mfd. shielded capacitor may be required between the terminal and car frame; (d) Temperature Gauge—where a contacting device is used, interference can


be eliminated with an 0.5 mfd. capacitor connected between the circuit and car frame; (e) Spark Plugs—suppressors in leads to spark plugs may possibly be required in extreme cases of interference, on older cars, and in localities where signals are very weak; see that spark plugs are properly adjusted and are not leaky; (f) Ammeter—the supply for the receiver is usually taken from this point; a 0.5 mfd. capacitor from the "hot" lead will prevent passage of interference into the set over this circuit; (g) Dome Light—wiring to the dome light should be shielded; and an 0.5 mfd. capacitor attached between the circuit and car frame, preferably at the point where lead enters the corner post; (h) Wiring—primary and secondary ignition wiring should be physically separated; possible points of poor insulation should be checked, and all connections must be secure.

Car Chassis Bonds—Intermittent electrical connection between members of the car chassis, caused by vibration, will cause noise interference. Flexible bonding connections to the frame will correct this condition. The most sources are: (a) transmission case; (b) muffler; (c) steering column; (d) cylinder head; (e) dash controls; (f) rear springs; (g) brake cables; (h) hood cover; (i) receiver case.

Wheel Static—Interference from this source generally originates in the front wheels, and is related to road surface composition, and atmospheric conditions. Spring devices are available for attachment to the wheels for making a permanent connection between the hub and axle; these should be installed where required. The wheel bearings should be checked for proper adjustment. Patches in tires will frequently cause wheel static; exchange front and rear wheels. Be sure antenna is well separated from wheels of car.

SEARS, ROEBUCK & CO.

MODEL 6320, Ch. 101, 585
Schematic, Voltage, Dial

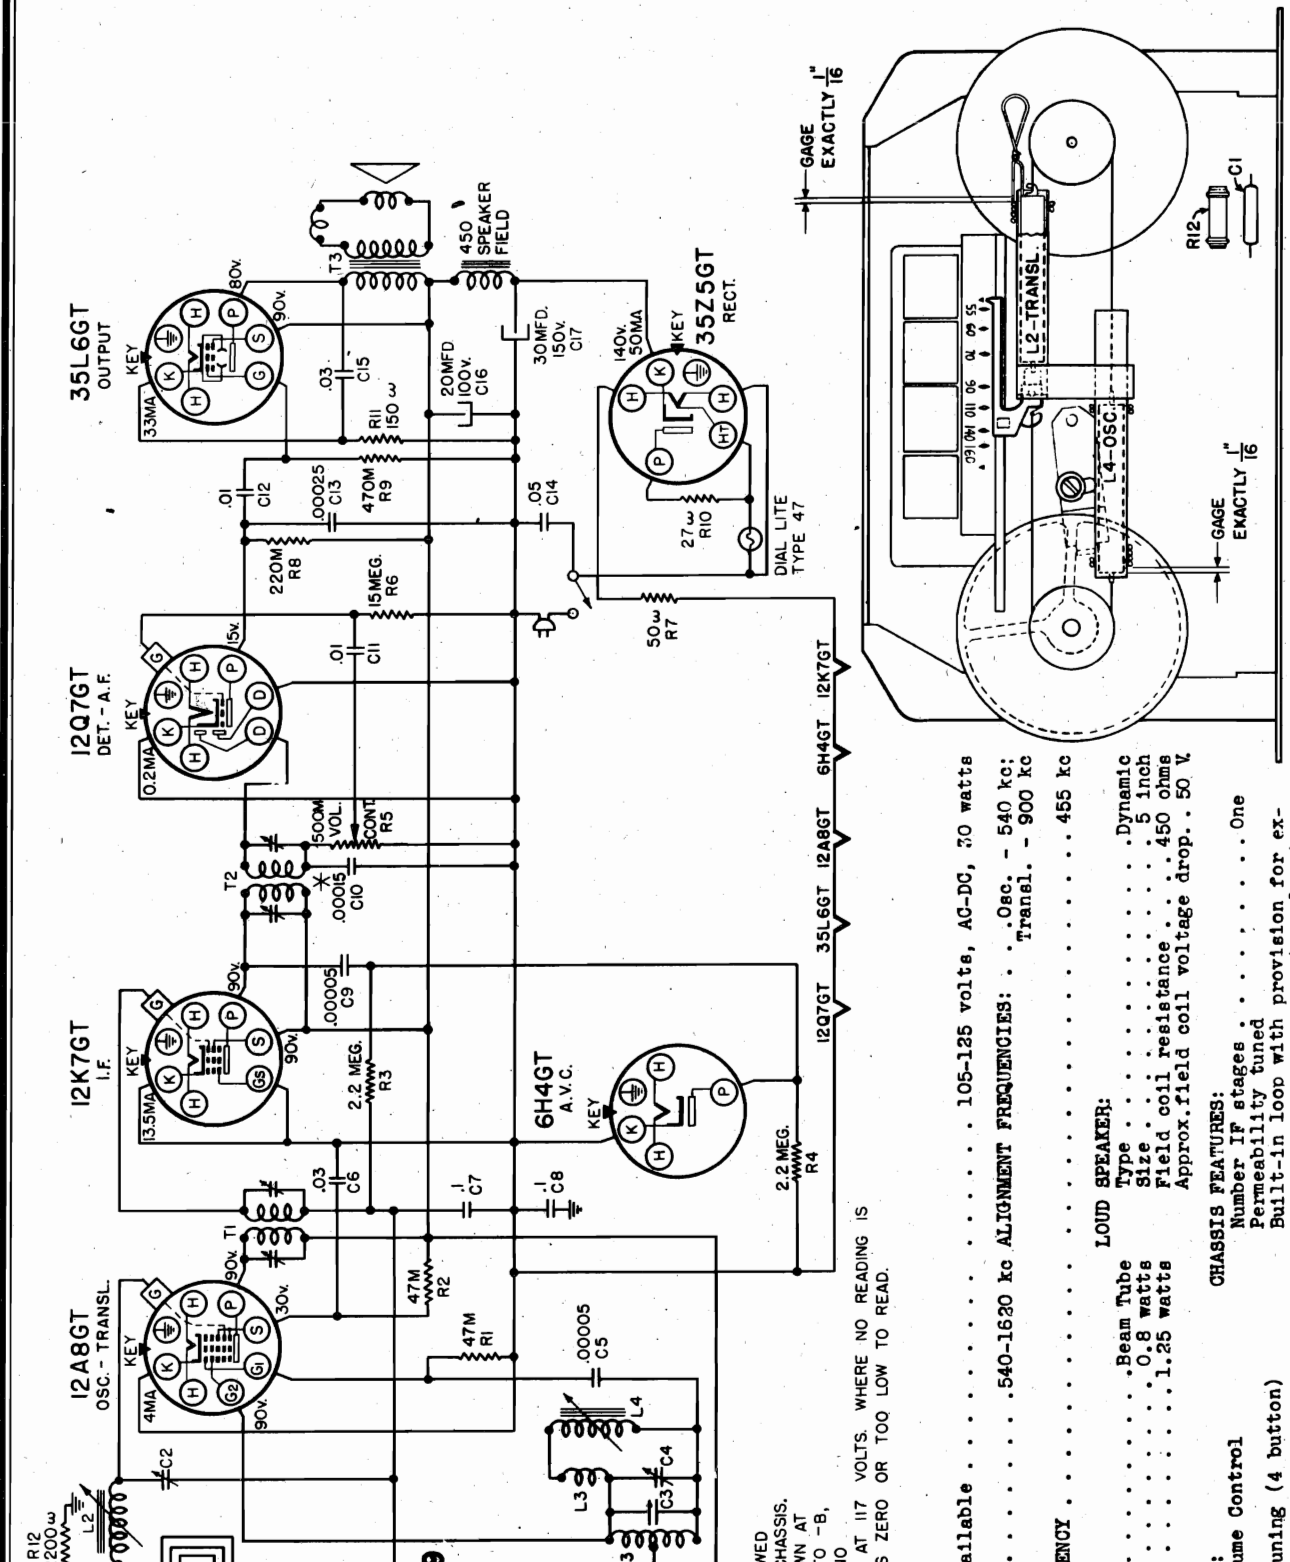

AUG. 23, 1939

* PART OF T2
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO -B, AND ARE TAKEN WITH NO SIGNAL LINE VOLTAGE AT I17 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

- POWER SUPPLY:**
All models available 105-125 volts, AC-DC, 70 watts
- FREQUENCY RANGE** 540-1620 kc ALIGNMENT FREQUENCIES: . . . Osc. - 540 kc; Transl. - 900 kc
- INTERMEDIATE FREQUENCY** 455 kc
- POWER OUTPUT:**
Type Beam Tube
Undistorted 0.8 watts
Maximum 1.25 watts
- LOUD SPEAKER:**
Type Dynamic
Size 5 inch
Field coil resistance 450 ohms
Approx. field coil voltage drop . . . 50 V
- OPERATING FEATURES:**
Automatic Volume Control
AC-DC
Push Button Tuning (4 button)
- CHASSIS FEATURES:**
Number IF stages One
Permeability tuned
Built-in loop with provision for external antenna

MODEL 6320

Chassis, Socket, Trimmers SEARS, ROEBUCK & CO.
Notes, Tuner, Alignment

REMOVING THE CHASSIS FROM THE CABINET:


In addition to the two screws that hold the back of the chassis there is also a screw that holds the speaker frame to the cabinet.

DIAL LIGHT REPLACEMENT:

The dial light socket is attached to a bracket at the rear of the chassis, held with a single screw.

COIL REPLACEMENT:

No regard need be paid to the colors of paint spots on coils or cores. Coils may be replaced individually; however, cores must be replaced in pairs to secure proper matching and are furnished in pairs for service. To replace a coil, cut away the cement from the old coil and remove the coil. Insert the new coil in the bracket and position it so that, when the tuning knob is turned to its low frequency limit, the core will extend exactly 1/16" beyond the end of the coil winding. A gauge, easily made of a piece of wire as illustrated, should be used for determining this dimension. Similarly, when replacing cores, the coil positions must be checked to see that there is exactly 1/16" overlap of the core beyond the end of the coil winding with the tuning knob at the low frequency limit. This is true for both oscillator and translator cores and coils. New coils can be cemented to the bracket with Major's, Du Pont, or equivalent cement.



ELIMINATING HUM MODULATION WHEN USING AN EXTERNAL ANTENNA:

As shown by the Schematic and by the Location of Parts diagram, there is a 2200 ohms resistor, connected from the external antenna clip to chassis. This resistor prevents hum modulation when using an external antenna. If such hum is experienced, examine the chassis to see if this resistor has been incorporated. (The resistor is mounted alongside of the loop antenna connection board as shown in the Location of Parts diagram. It was not incorporated in early production.) If necessary, addition of the resistor will eliminate the complaint.

PUSH BUTTON TUNING:

Each button is set up by loosening the screw (under the call letter tab), tuning in the station, depressing the button and then tightening the screw.


ALIGNMENT PROCEDURE

PRELIMINARY:


Output meter connection Across loud speaker voice coil
Output meter to indicate 50 milliwatts 0.36 volt
Dummy antenna value to be in series with generator output See chart below
Connection of generator ground lead To external ground
Position of Volume Control Fully on

POSITION OF DIAL POINTER	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION
550 kc	455 kc	.1 mfd.	13A8GT Grid	T2, T1	IF
540 kc	540 kc	.0002 mfd.	Ant. Clip	C4	Oscillator
900 kc	900 kc	.0002 mfd.	Ant. Clip	C3	Translator

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

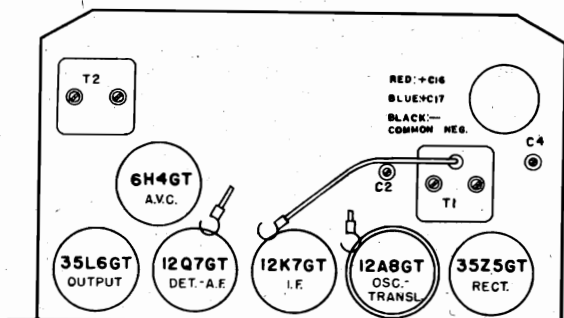

LOCATIONS OF PARTS ON TOP OF CHASSIS

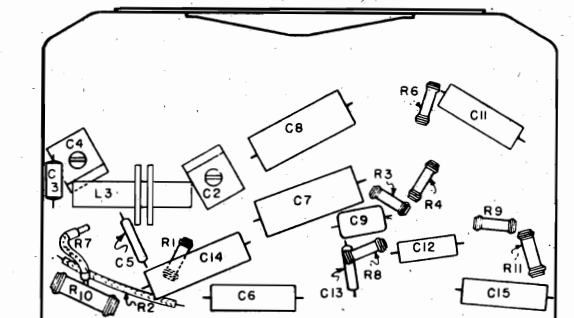


LOCATIONS OF PARTS UNDER CHASSIS

SEARS, ROEBUCK & CO.

MODELS 6321, 6322, 6323, 6421
Ch. 101.571, 101.571-1, -1A, -1B
Schematic, Voltage, Chassis
Socket, Trimmers, Changes

FOR SILVERTONE CHASSIS 101.571

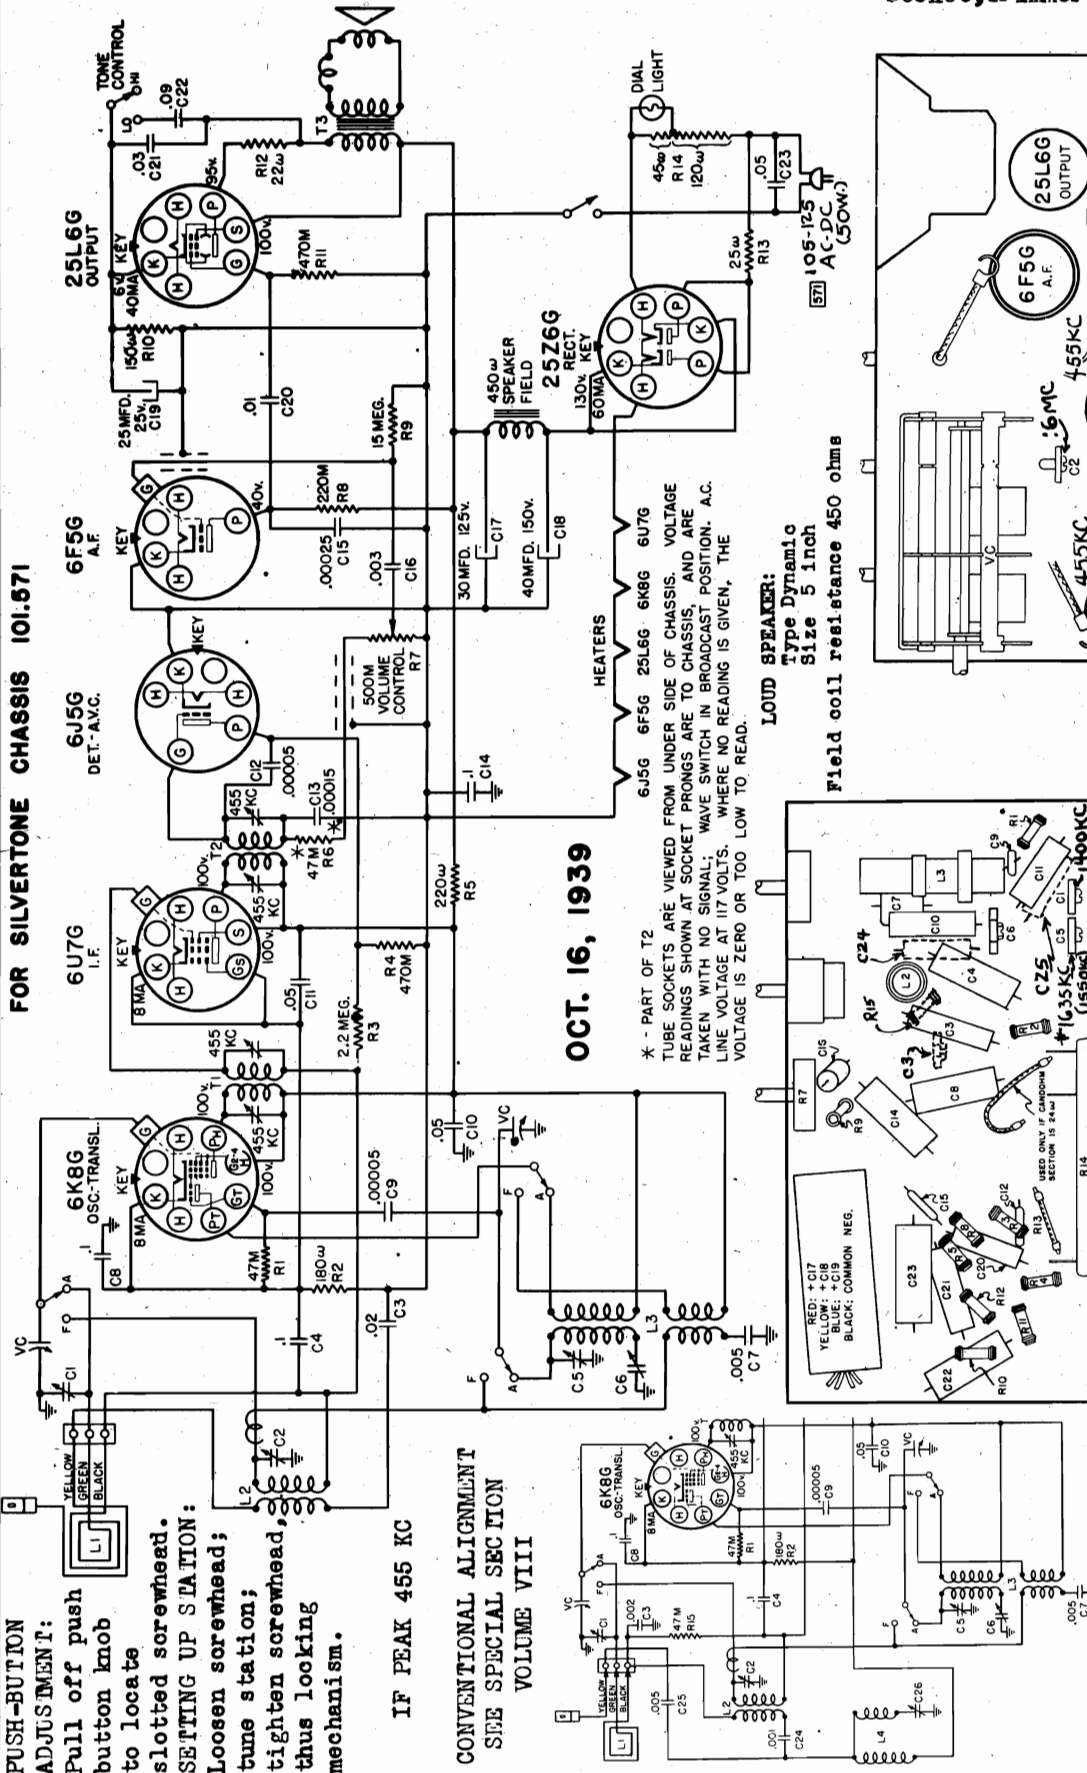

PUSH-BUTTON ADJUSTMENT:
Pull off push button knob to locate slotted screwhead.
SETTING UP STATION:
Loosen screwhead; tune station;
tighten screwhead, thus locking mechanism.


IF PEAK 455 KC

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII

OCT. 16, 1939

* - PART OF T2 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. A.C. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

LOUD SPEAKER:
Type Dynamic
Size 5 inch
Field coil resistance 450 ohms

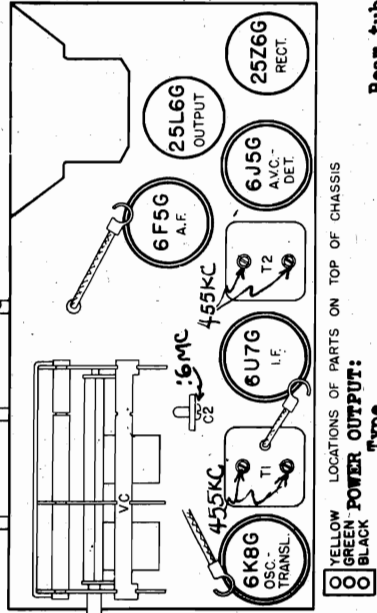


FOR SILVERTONE CHASSIS 101.571-1 PARTS DOTTED USED IN CHASSIS 101.571-1, 101.571-1A, -1B.
ADDITION OF SUFFIX NUMBER -1 TO 101.571 AND 101.571-A, -B CHASSIS:

As shown by the schematic diagram, certain changes have been incorporated in the antenna circuit of this model, including the addition of an I.F. wave trap. Chassis incorporating the changes are identified by the addition of suffix number -1.

* The top frequency for adjusting the broadcast oscillator trimmer with the variable fully open becomes 1550 kc instead of the original 1635 kc.

SEARS. ROEBUCK & CO.

MODELS 6325, 6425
Ch. 101.572
Schematic, Voltage
Jack Installation

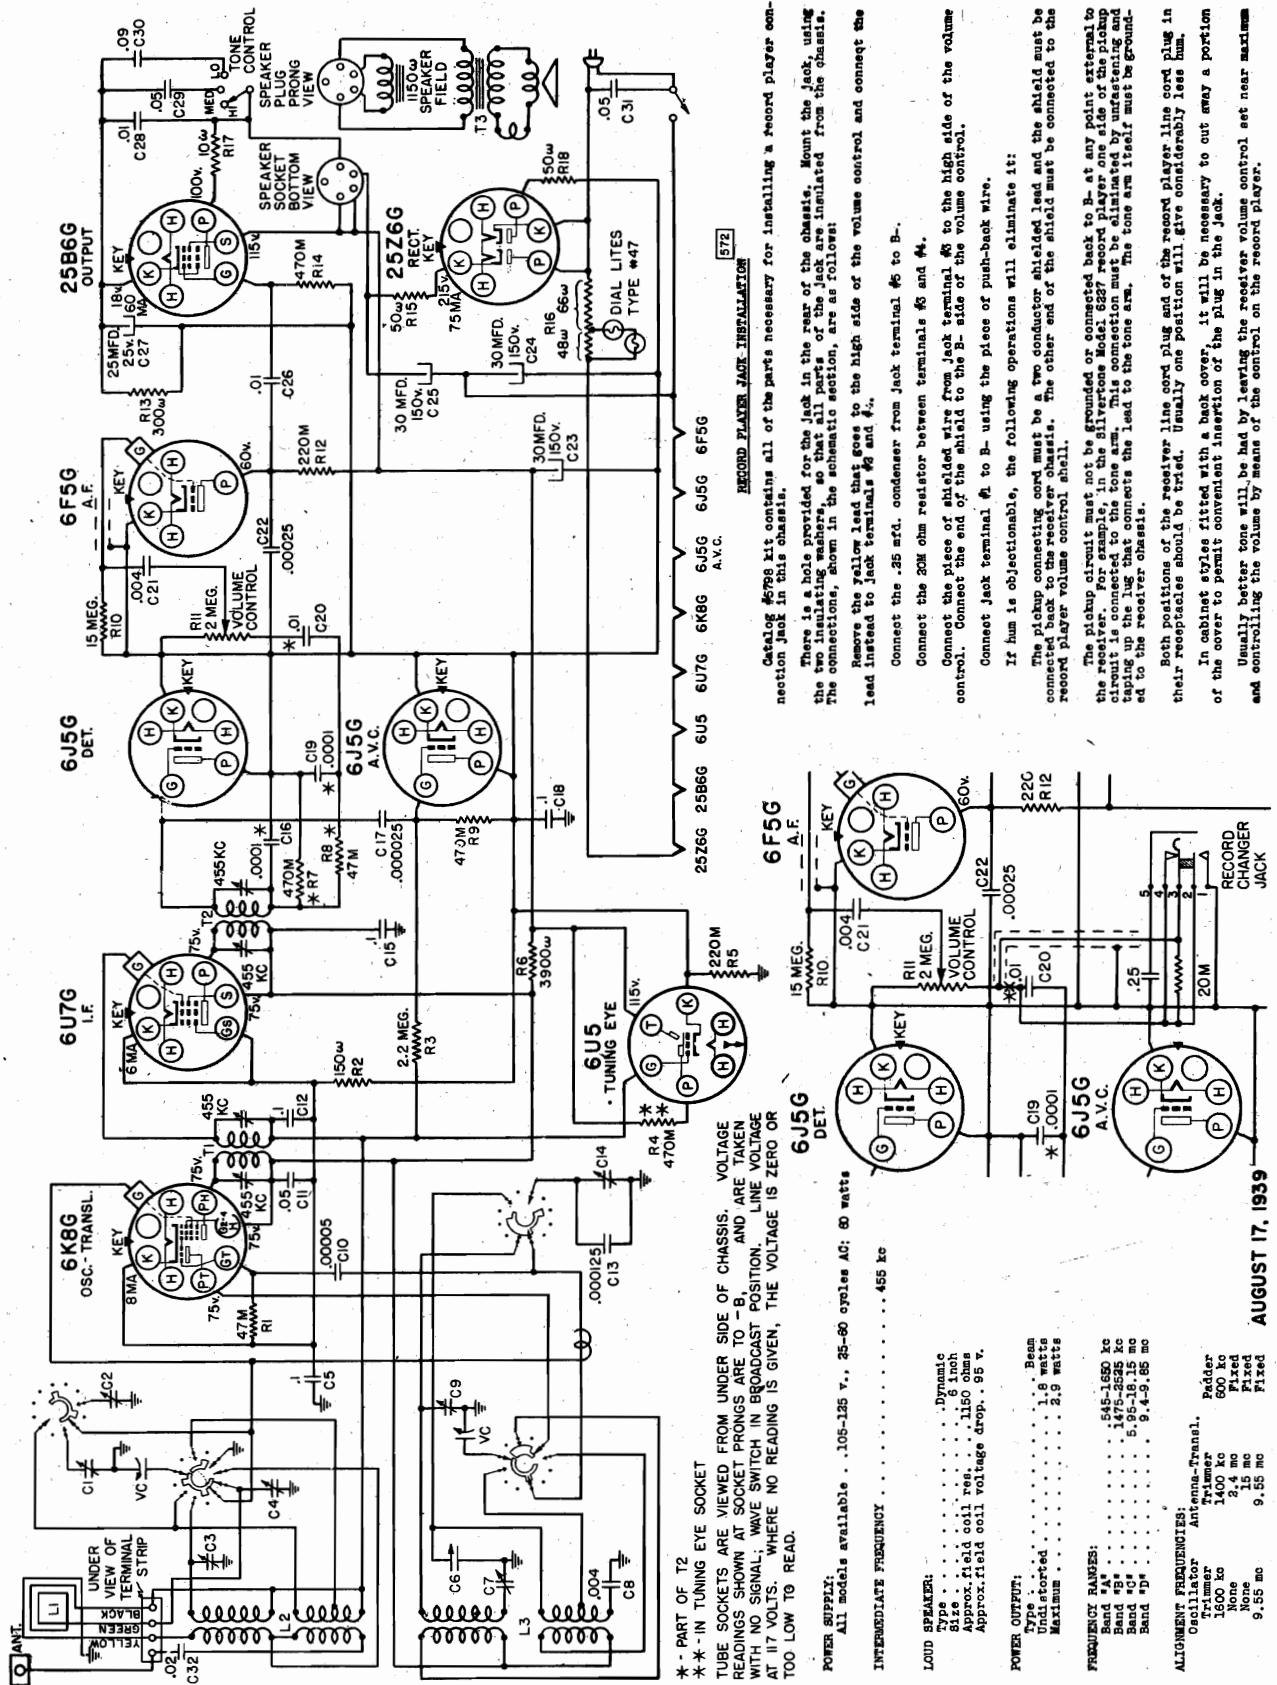

RECORD PLAYER JACK INSTALLATION

Catalog #6796 kit contains all of the parts necessary for installing a record player connection jack in this chassis.

There is a hole provided for the jack in the rear of the chassis. Mount the jack, using the two insulating washers, so that all parts of the jack are insulated from the chassis. The connections, shown in the schematic section, are as follows:

Remove the yellow lead that goes to the high side of the volume control and connect the lead instead to Jack terminals #3 and #4.

Connect the .25 mfd. condenser from Jack terminal #5 to B.

Connect the 20M ohm resistor between terminals #5 and #4.

Connect the piece of shielded wire from Jack terminal #6 to the high side of the volume control. Connect the end of the shield to the B- side of the volume control.

Connect Jack terminal #1 to B- using the piece of push-back wire.

If hum is objectionable, the following operations will eliminate it:

The pickup connecting cord must be a two conductor shielded lead and the shield must be connected back to the receiver chassis. The other end of the shield must be connected to the record player volume control shaft.

The pickup circuit must not be grounded or connected back to B- at any point external to the receiver chassis. In the Silver-tone Model #6327 record player, one side of the pickup circuit is connected to the tone arm. This connection must be eliminated by unfastening and taping up the lug that connects the lead to the tone arm. The tone arm itself must be grounded to the receiver chassis.

Both positions of the receiver line cord plug and of the record player line cord plug in their receptacles should be tried. Usually one position will give considerably less hum.

In cabinet styles fitted with a back cover, it will be necessary to cut away a portion of the cover to permit convenient insertion of the plug in the jack.

Usually better tone will be had by leaving the receiver volume control set near maximum and controlling the volume by means of the control on the record player.

* - PART OF T2
* - IN TUNING EYE SOCKET

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO -B-, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

POWER SUPPLY:
All models available . . . 105-125 v., 25-80 cycles AC; 80 watts

INTERMEDIATE FREQUENCY 465 kc

LOUD SPEAKER:
Type Dynamic
Size 6 inch
Approx. field coil res. 1150 ohms
Approx. field coil voltage drop 95 v.

POWER OUTPUT:
Type Beam
Undistorted 1.8 watts
Maximum 2.9 watts

FREQUENCY RANGES:
Band #1 545-1,650 kc
Band #2 1,125-2,550 kc
Band #3 595-18,15 mc
Band #4 5.95-18.15 mc
Band #5 9.4-9.85 mc


ALIGNMENT FREQUENCIES:
Oscillator Antenna-Transl.
Trimmer 1,400 kc
None 215 mc
None 9.85 mc
Fixed 600 kc
Fixed 9.85 mc

AUGUST 17, 1939

MODELS 6325,6425
Ch.101.572
Alignment,Chassis

SEARS, ROEBUCK & CO.

Socket, Trimmers, Tuner
Chassis 101.572-1
Schematic, Voltage
Alignment Notes

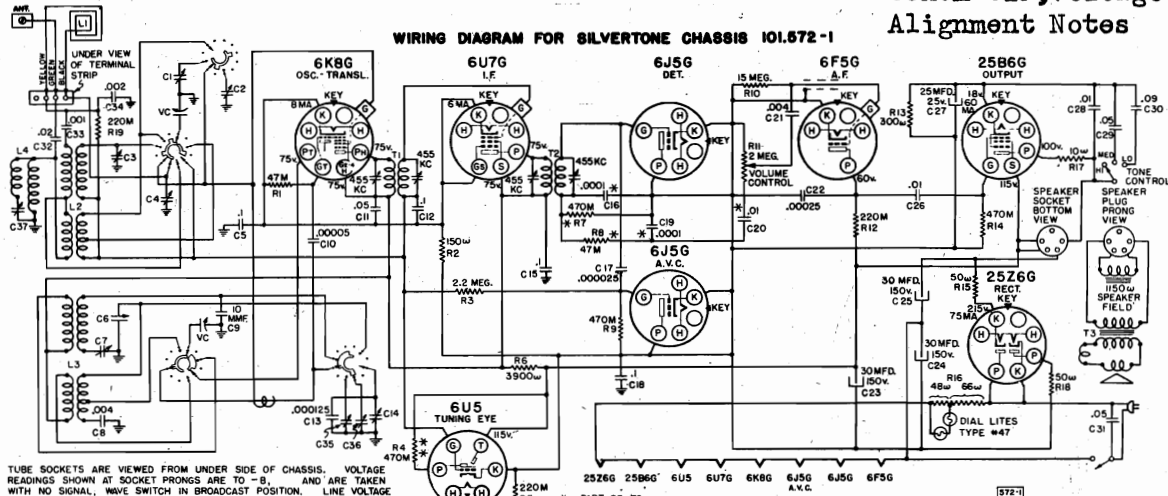

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO -B, AND ARE TAKEN WITH NO SIGNAL, WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.


SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	(IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"A"	Closed	455 kc	.1 mfd.	6K8G Grid	T2, T1	IF	--
"A"	1600 kc	1600 kc	.0002 mfd.	Ant. Term.	C9	Oscillator	300
"A"	1400 kc	1400 kc	.0002 mfd.	Ant. Term.	C4	Translator	35
"A"	600 kc(rock)	600 kc	.0002 mfd.	Ant. Term.	C7	Padder	130
"B"	3.4 mc(rock)	3.4 mc	400 ohms	Ant. Term.	C3	Translator	320
"C"	15 mc(rock)	15 mc	400 ohms	Ant. Term.	C1	Translator	85
"D"	9.55 mc	9.55 mc	400 ohms	Ant. Term.	C14, C2	Osc., Transl.	160

Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.


* If two peaks can be had, the correct adjustment is with the trimmer screw further out. The other peak is the image.

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

PUSH-BUTTON ADJUSTMENT:
Pull off push-button knob to locate slotted screwhead.
SETTING UP STATION:
Loosen screw-head; tune station; tighten screwhead, thus locking mechanism.

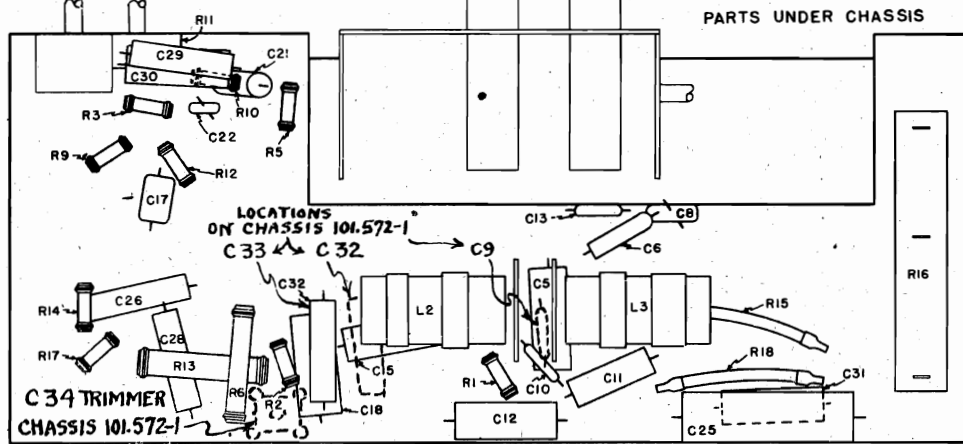


CHASSIS 101.572-1
Top frequency, variable completely open, is 1530 kc. Has wave-trap adjustment C37, to be made with variable at 600 kc and signal at 455 kc. Make this adjustment for min. output reading.

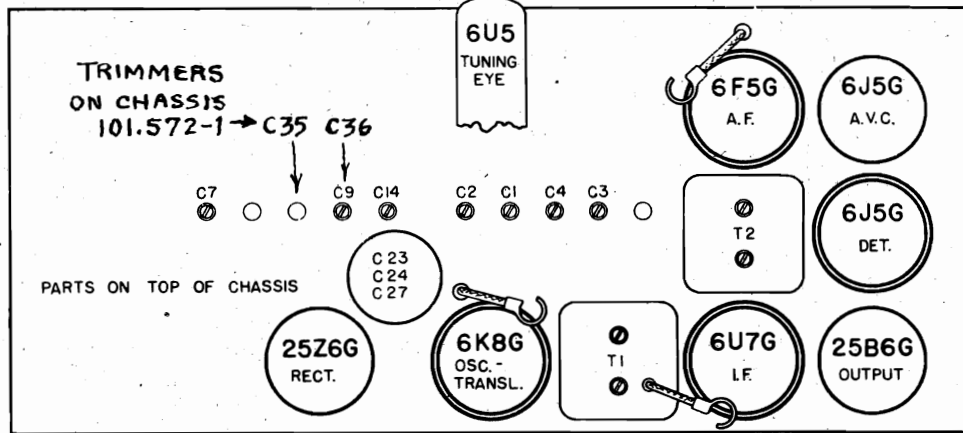

OCT. 2, 1939

SEARS, ROEBUCK & CO.

MODEL 6326, Ch. 110.987
Schematic, Voltage
Alignment, Trimmers
Socket, Notes

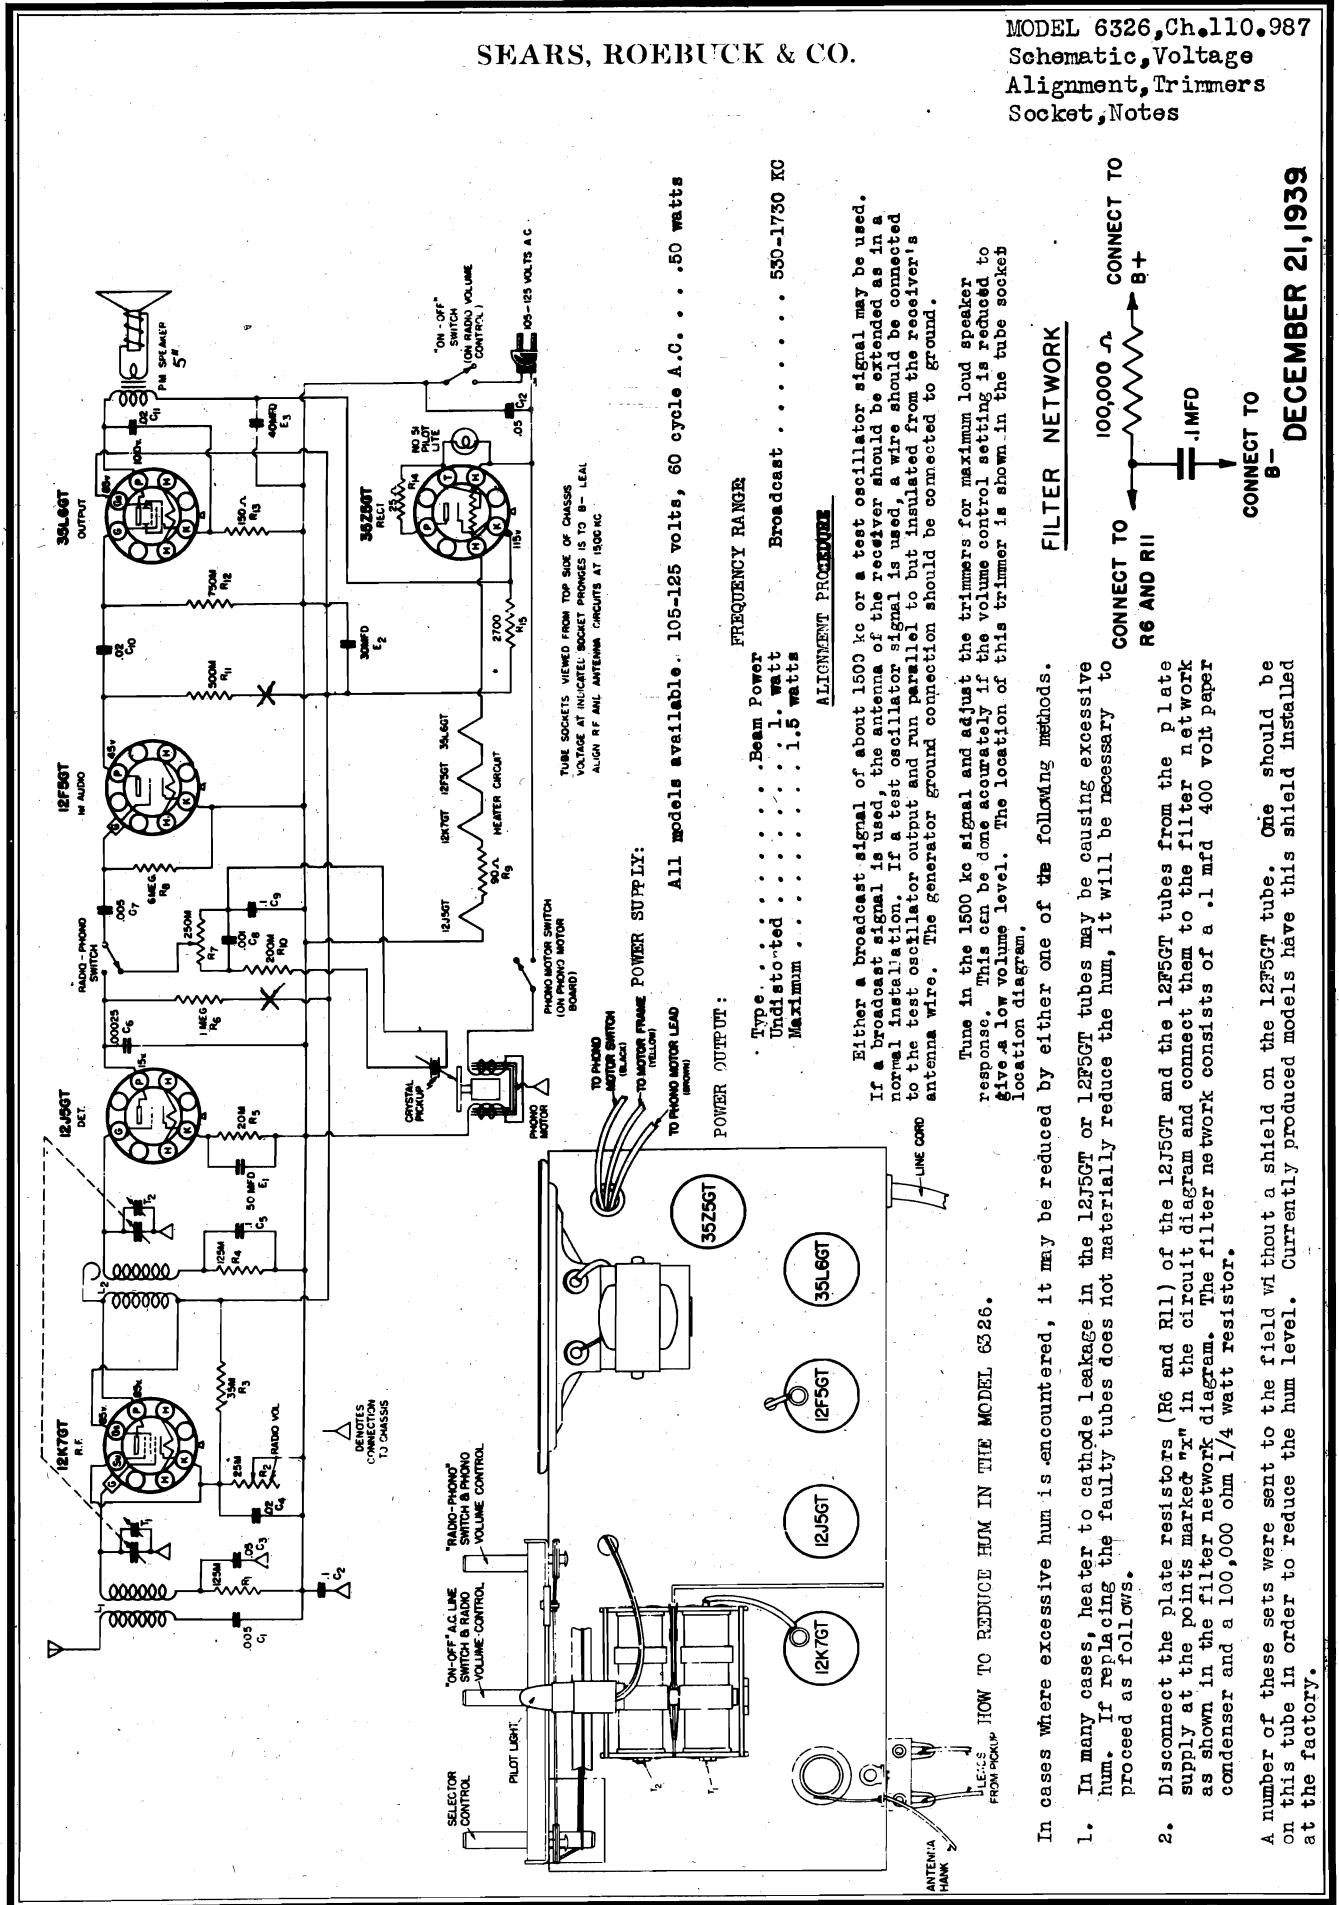

ALL models available. 105-125 volts, 60 cycle A.C.50 watts

FREQUENCY RANGE
Broadcast 550-1730 KC

ALIGNMENT PROCEDURES

Either a broadcast signal of about 1500 kc or a test oscillator signal may be used. If a broadcast signal is used, the antenna of the receiver should be extended as in a normal installation. If a test oscillator signal is used, a wire should be connected to the test oscillator output and run parallel to but insulated from the receiver's antenna wire. The generator ground connection should be connected to ground.

Tune in the 1500 kc signal and adjust the trimmers for maximum loud speaker response. This can be done accurately if the volume control setting is reduced to give a low volume level. The location of this trimmer is shown in the tube socket location diagram.


POWER OUTPUT:
Type Beam Power
Undistorted 1.5 watt
Maximum 1.5 watts

- In cases where excessive hum is encountered, it may be reduced by either one of the following methods.
1. In many cases, heater leakage in the 12J5GT or 12F5GT tubes may be causing excessive hum. If replacing the faulty tubes does not materially reduce the hum, it will be necessary to proceed as follows.
 2. Disconnect the plate resistors (R6 and R11) of the 12J5GT and the 12F5GT tubes from the plate supply at the points marked "x" in the circuit diagram and connect them to the filter network as shown in the filter network diagram. The filter network consists of a .1 mfd 400 volt paper condenser and a 100,000 ohm 1/4 watt resistor.
- A number of these sets were sent to the field without a shield on the 12F5GT tube. One should be on this tube in order to reduce the hum level. Currently produced models have this shield installed at the factory.

DECEMBER 21, 1939

MODEL 6327, Ch. 110, 990
Schematic, Voltage, Socket
Trimmers, Alignment

SEARS, ROEBUCK & CO.

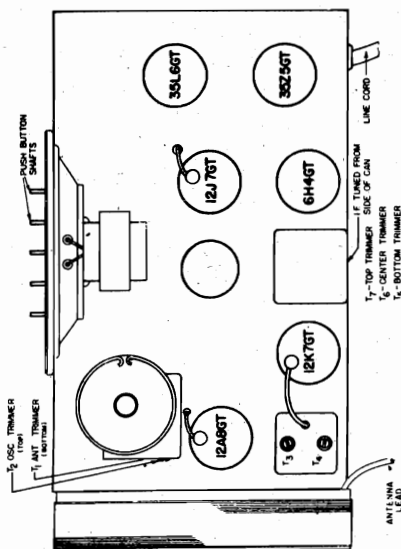

IF PEAK 455 KC

ALIGNMENT PROCEDURE

- Output meter connections. Across primary output transformer
- Output meter reading to indicate 0.050 watt for Weston type 571 output meter on 15 volt scale 10.5 volts
- Dummy antenna value in series with generator output. 100 mmfds.
- Connection of generator ground. B- Bus
- Generator modulation. App. 30% @ 400 cycles
- Position of volume control Fully clockwise

PUSH BUTTON POSITION OF DIAL POINTER	Manual "IN"
" "	1500 kc
" "	455 kc
" "	1500 kc

GENERATOR FREQUENCY	455 kc
GENERATOR CONNECTION	12K7GT, Grid
GENERATOR ADJUSTED	T6, T5, T7
TRIMMERS FUNCTION	I.F.
TRIMMER ADJUSTED	T3, T4
TRIMMER FUNCTION	Osc., R.F.

IMPORTANT ALIGNMENT NOTES

It is advisable to repeat the entire alignment procedure in the original order to insure greater accuracy.


Always keep the output from the test oscillator at its lowest possible value. As the sensitivity is increased by alignment, the generator output should be reduced correspondingly.

*First time T 5 is misaligned by loosening center screw one turn.

**Short oscillator section of variable condenser. Second I.F. alignment must be done twice to secure flat top tuning.

***Connect generator output to a separate radiating loop and pickup 1500 KC signal on receiver.

FOR TUNER SEE INDEX

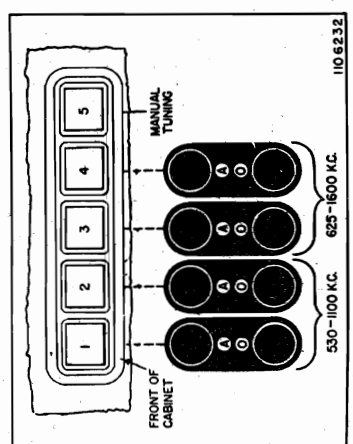

TRIMMER ADJUSTMENT CARD

FREQUENCY RANGE: Broadcast. . . 535-1700 KC


POWER OUTPUT
Type Beam Power
Undistorted 1.0
Maximum 1.5

LOUD SPEAKER:
Type Dynamic
Size 5"
Field P.M.

FEBRUARY 28, 1940

SEARS, ROEBUCK & CO. 6495, Ch. 101.573

MODELS 6335, 6435, 6490
Schematic, Voltage, Tuner
MODEL 6490A, Ch. 101.573-1, -1B
Change in Schematic

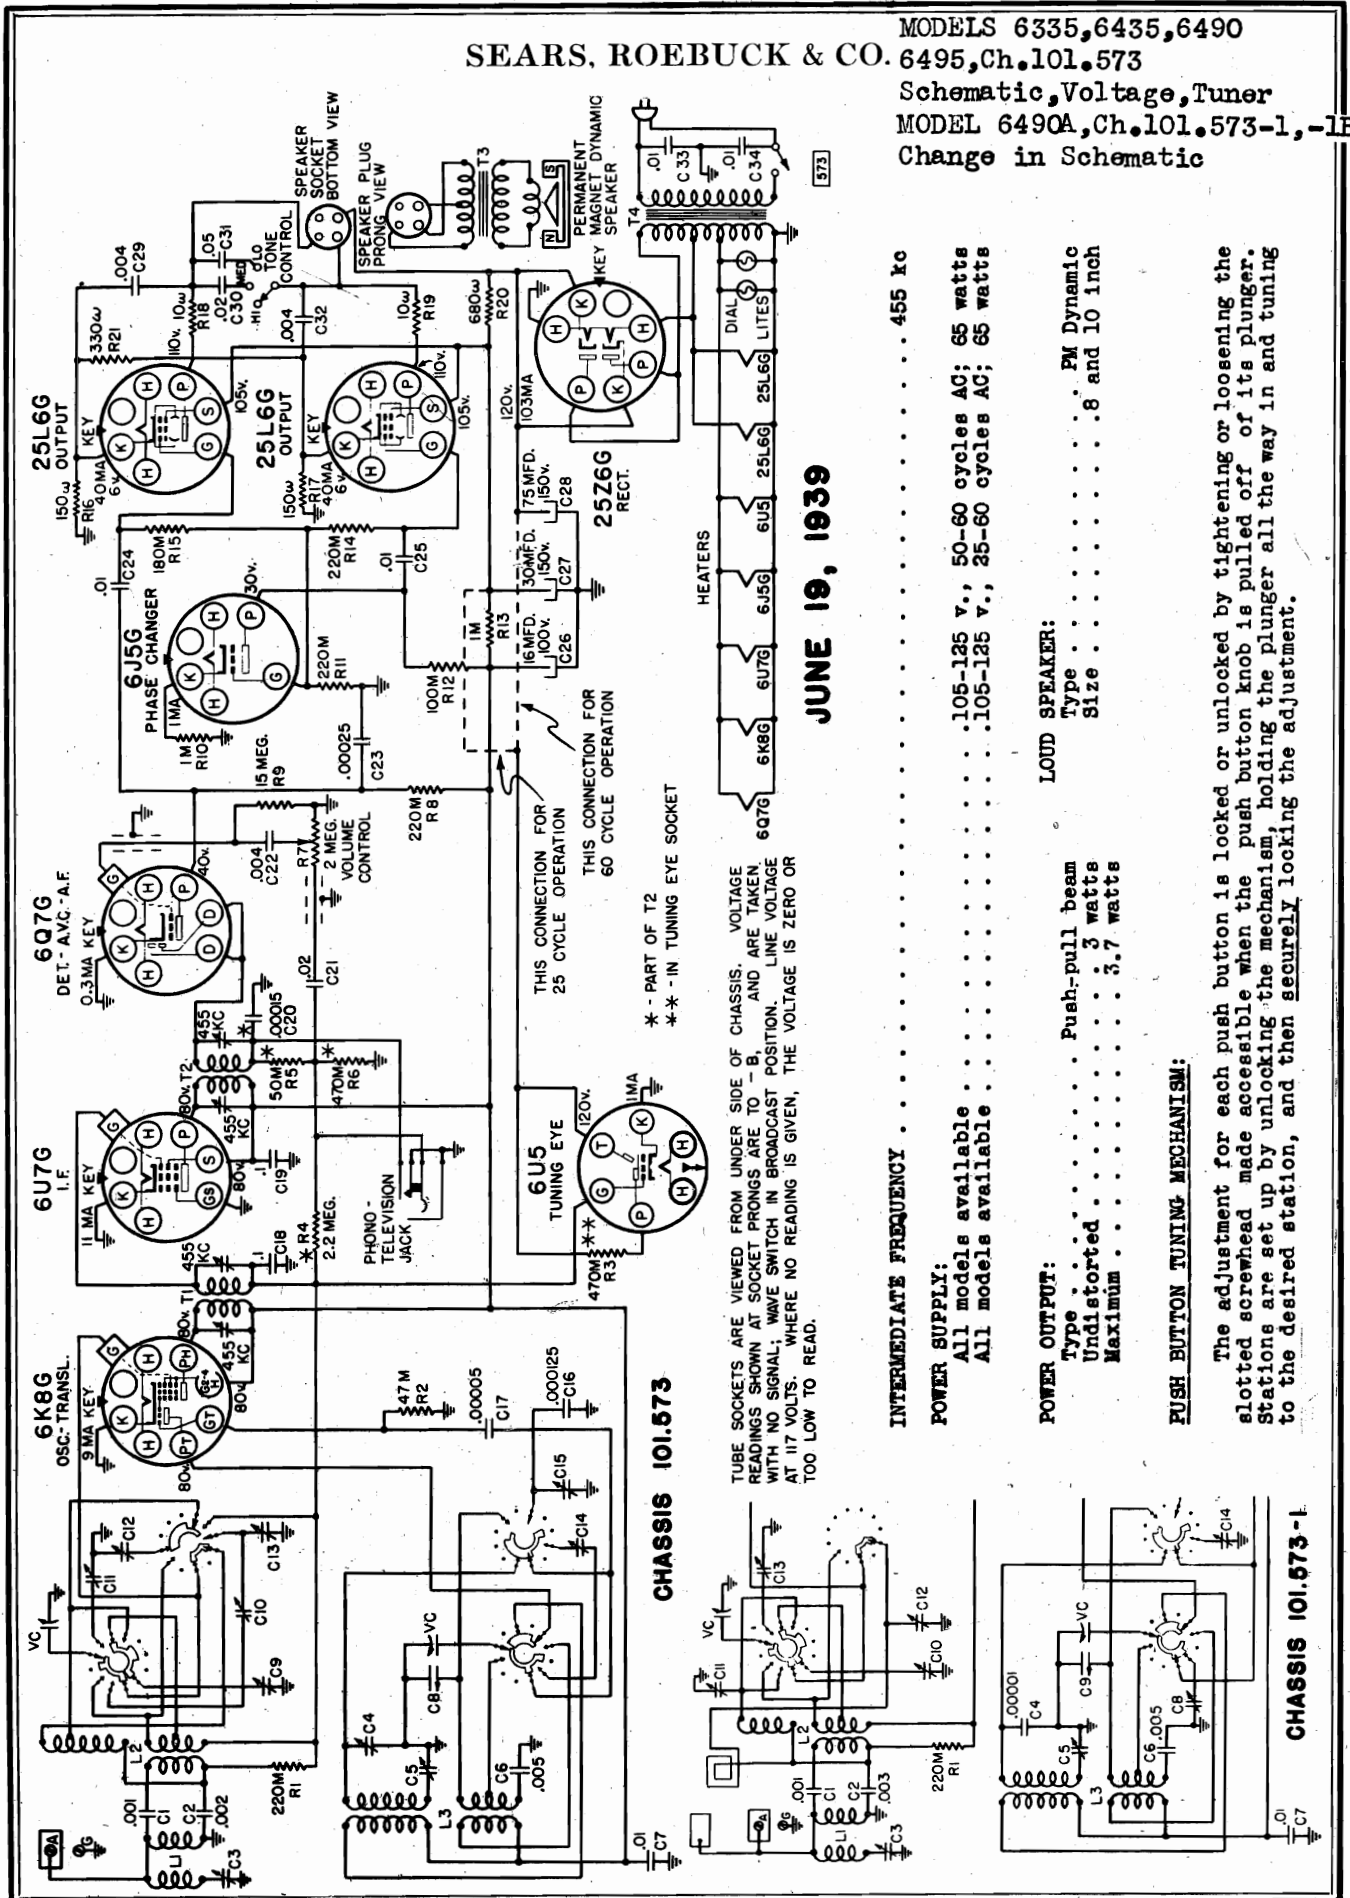

JUNE 19, 1939

INTERMEDIATE FREQUENCY 455 kc

POWER SUPPLY:

All models available 105-125 v., 50-60 cycles AC; 65 watts
All models available 105-125 v., 35-60 cycles AC; 65 watts

POWER OUTPUT:

Type Push-pull beam
Undistorted 3 watts
Maximum 3.7 watts


LOUD SPEAKER:

Type PM Dynamic
Size8 and 10 inch


PUSH BUTTON TUNING MECHANISM:

The adjustment for each push button is locked or unlocked by tightening or loosening the slotted screwhead made accessible when the push button knob is pulled off of its plunger. Stations are set up by unlocking the mechanism, holding the plunger all the way in and tuning to the desired station, and then securely locking the adjustment.

CHASSIS 101.573

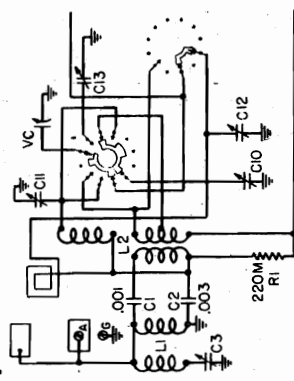


CHASSIS 101.573-1

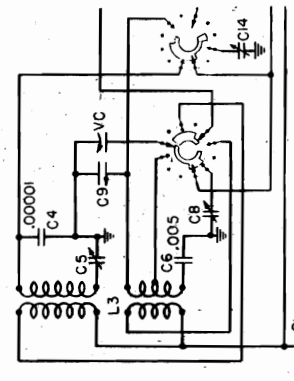

Schematic, Voltage
Chassis, Tuner
Socket, Trimmers

SEARS, ROEBUCK & CO.

MODELS 6336, 6436
Ch.101.574

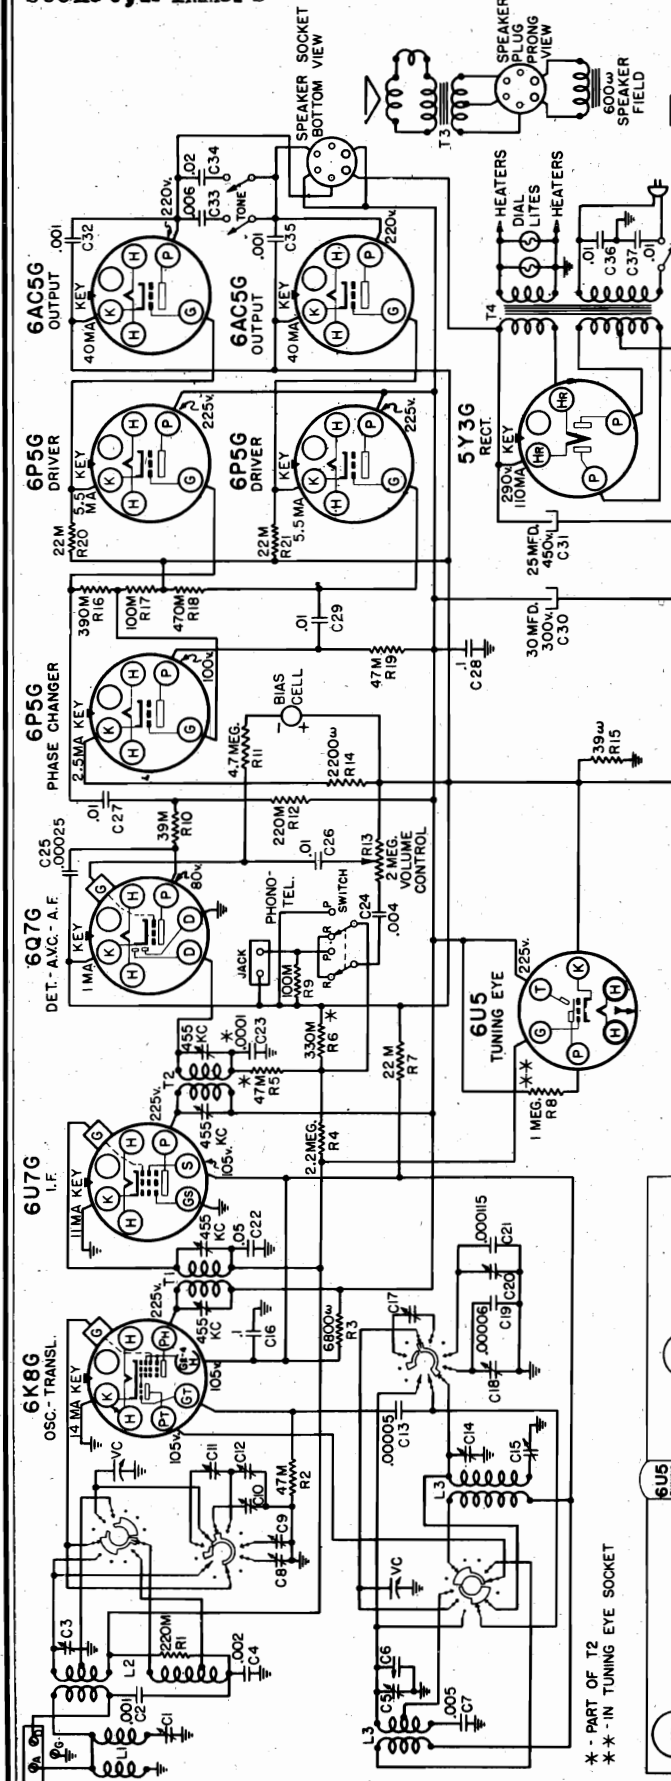

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

INTERMEDIATE FREQUENCY 455 kc

POWER SUPPLY: All models available 105-135 volt AC; 35 and 50-60 cycle; 105 watts



LOUD SPEAKER: Type Dynamic
Size 10 inch
Approx. field coil res. 600 ohms
Approx. field coil voltage drop 65 v

GENERAL INFORMATION & SERVICE HINTS FOR ALIGNMENT
SEE INDEX

PUSH BUTTON TUNING MECHANISM:
The adjustment for each push button is locked or unlocked by tightening or loosening the slotted screwhead made accessible when the push button knob is pulled off of its plunger. Stations are set up by unlocking the mechanism, holding the plunger all the way in and tuning to the desired station, and then securely locking the adjustment.

RECOMMENDED ANTENNA EQUIPMENT:

- Catalog #5523: Greatest pickup and noise reduction.
- Catalog #5523: Less effective pickup and noise reduction than Catalog #5523.
- Catalog #5575: Conventional antenna.

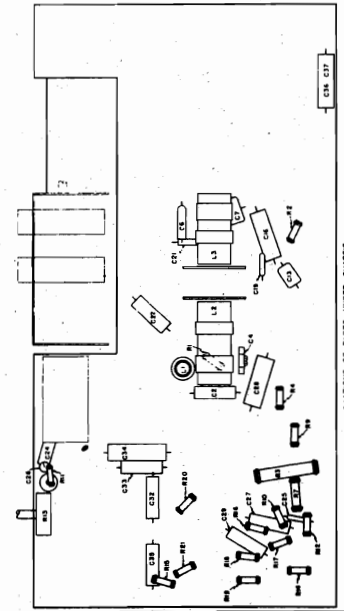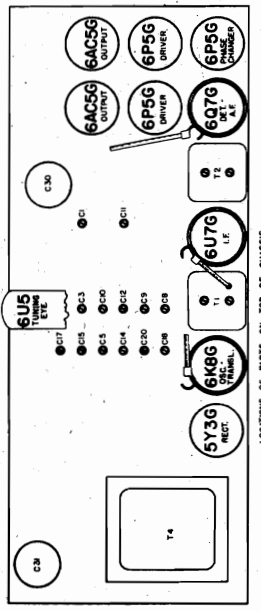

JUNE 19, 1939

MODELS 6336, 6436

Ch. 1Q1.574

SEARS, ROEBUCK & CO.


Circuit Change, Notes

CIRCUIT CHANGE TO IMPROVE TONE WHEN USING CATALOG #6327 RECORD PLAYER.REDUCING MICROPHONICS.

Bass response can be increased and record reproduction tone improved when this receiver is used in conjunction with a Catalog #6327 record player, by inserting the network shown schematically below.

The 100M ohm resistor at present across the phono jack terminals is to be removed. As shown below, the lead going to the high side of the phono jack is to be broken and a 200M ohm resistor shunted by a .0005 mfd. mica condenser is to be inserted in series with it. The 100M ohm and the 1 megohm resistors and the .01 mfd. condenser are to be connected as shown.

Because of the increased bass response, there may be a greater tendency toward microphonics. For this reason, the record player should not be put directly on top of the receiver cabinet.

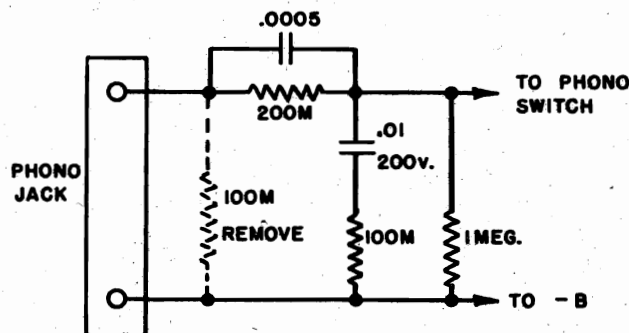REDUCING MICROPHONICS:

1. Be sure that the two shipping bolts and the wood spacer strips have been removed.
2. See that knobs, control shafts, and dial lights or dial mechanism do not touch the cabinet.
3. See that the rubber bumpers at the rear of the chassis do not press on it more than enough to prevent shifting.

Although the foregoing three points are simple, and commonly known, very often insufficient attention is paid to them. It is very important that the points mentioned be very thoroughly checked.

4. Any means of reducing the signal input will help, such as using a shorter antenna or connecting a small mica condenser (.0001 to .0002 mfd.) in series with the antenna lead.

5. All but initial production cabinets have two bracing strips added under the chassis mounting shelf at its ends. A kit, part number 1016041718, can be obtained from source 101 and contains the necessary material and instructions for adding these reinforcing bracing strips.

6. If the predominant microphonic tone is of low frequency, improvement can be had by reducing the capacity of the coupling condensers in the audio amplifier. These are C27 and C29, which should be reduced from .01 mfd. to .006 mfd., 600 v. Both condensers must be changed to avoid unbalancing the push pull circuit. This change will reduce the low frequency response and is not recommended except for extreme cases.

INSTRUCTIONS FOR ADDING BRACING STRIPS, MENTIONED IN PARAGRAPH #5, PRECEDING:

Turn the cabinet upside down. (Be careful to protect the cabinet finish.)

Clamp one of the cleats along the under side-edge of the chassis shelf. The end of the cleat should be against the cabinet back rail.

Using the cleat as a template, drill three 9/32" holes in the chassis mounting shelf. Be careful that none of the dirt from drilling gets into the speaker or chassis.

In the same manner, drill three holes at the other end of the chassis mounting shelf.

Clean off any splinters and bolt the cleats tightly to the underside of the chassis mounting shelf, with the bolt heads on the top side of the shelf. The flat washers go under the nuts.

DIAL AND DRIVE HOOKUP: This is similar to that of Model 6335. In ordering parts use 1014140301 instead of 1014140183; 10154402051 instead of 10154402021 and 1014540331 instead of 1014518245.

MODELS 6337, 6437
 Ch. 101.576; 6437A,
 Ch. 101.576-1

SEARS. ROEBUCK & CO.

Alignment, Trimmers
 Chassis, Socket

The alignment must be done in the order given.



WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"A"	Closed	455 kc	.1 mfd.	6K8G Grid	T3, T1	IF	--
"A"	Fully open	1730 kc	.0002 mfd.	Ant. Term.	C14	Oscillator	--
"A"	1400 kc	1400 kc	.0002 mfd.	Ant. Term.	C1, C9	RF, Transl.	25
"A"	600 kc(rock)	600 kc	.0002 mfd.	Ant. Term.	C15	Padder	35
"B"	5 mc	5 mc	400 ohms	Ant. Term.	C3*	Oscillator	--
"B"	4 mc	4 mc	400 ohms	Ant. Term.	C30	Translator	180
"B"	1.8 mc(rock)	1.8 mc	400 ohms	Ant. Term.	C5	Padder	360
"C"	15 mc	15 mc	400 ohms	Ant. Term.	C24*, C23	Osc. Transl.	60
"D"	6 mc	6 mc	400 ohms	Ant. Term.	C32*	Oscillator	--
"D"	6.2 mc(rock)	6.2 mc	400 ohms	Ant. Term.	C19	Translator	130
"F"	11.7 mc	11.7 mc	400 ohms	Ant. Term.	C28	Oscillator	100
"F"	12.1 mc	12.1 mc	400 ohms	Ant. Term.	C11	Padder	--
"E"	9.6 mc	9.6 mc	400 ohms	Ant. Term.	C30*	Oscillator	--
"E"	9.4 mc(rock)	9.4 mc	400 ohms	Ant. Term.	C18	Translator	145
"E"	9.9 mc	9.9 mc	400 ohms	Ant. Term.	C8	Padder	--
"F"	11.9 mc	11.9 mc	400 ohms	Ant. Term.	C16	Translator	--
"G"	15.1 mc	15.1 mc	400 ohms	Ant. Term.	C25*, C17	Osc. Transl.	100

Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.

*If two peaks can be had, the correct adjustment is with the trimmer screw further out. The other peak is the image.

The C30, C18, C8 adjustments will affect each other so that they must be repeated several times to secure proper alignment and calibration, ALSO C28 and C19 adjustments.


The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

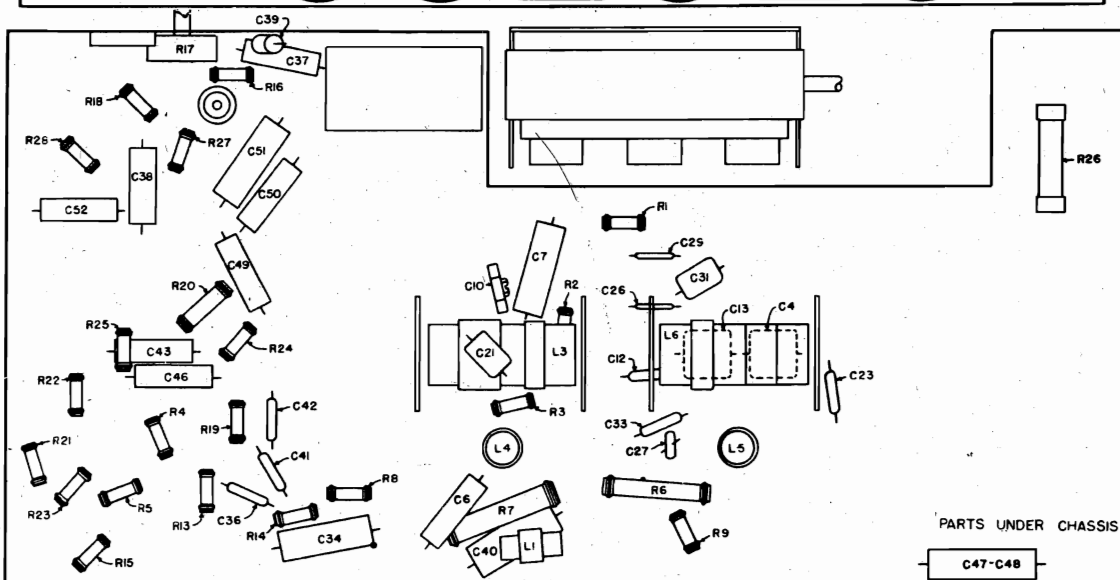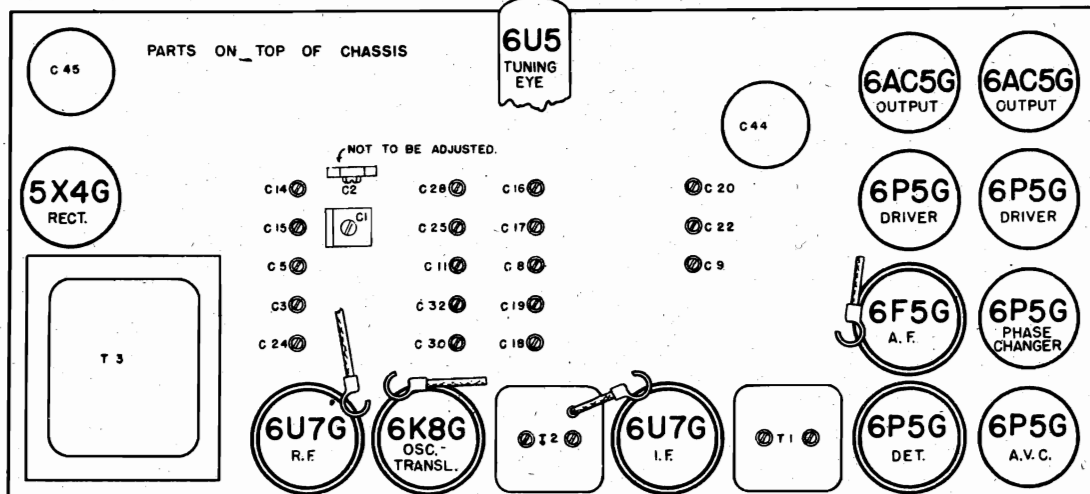

Alignment, Trimmers
 MODELS 6345, Ch. 110.982-2
 6345A, Ch. 110.982-3
 Alignment, Trimmers

SEARS, ROEBUCK & CO.

MODELS 6345, Ch. 110.982,
 6491, 6494, Ch. 110.982-1A
 Schematic, Voltage, Socket

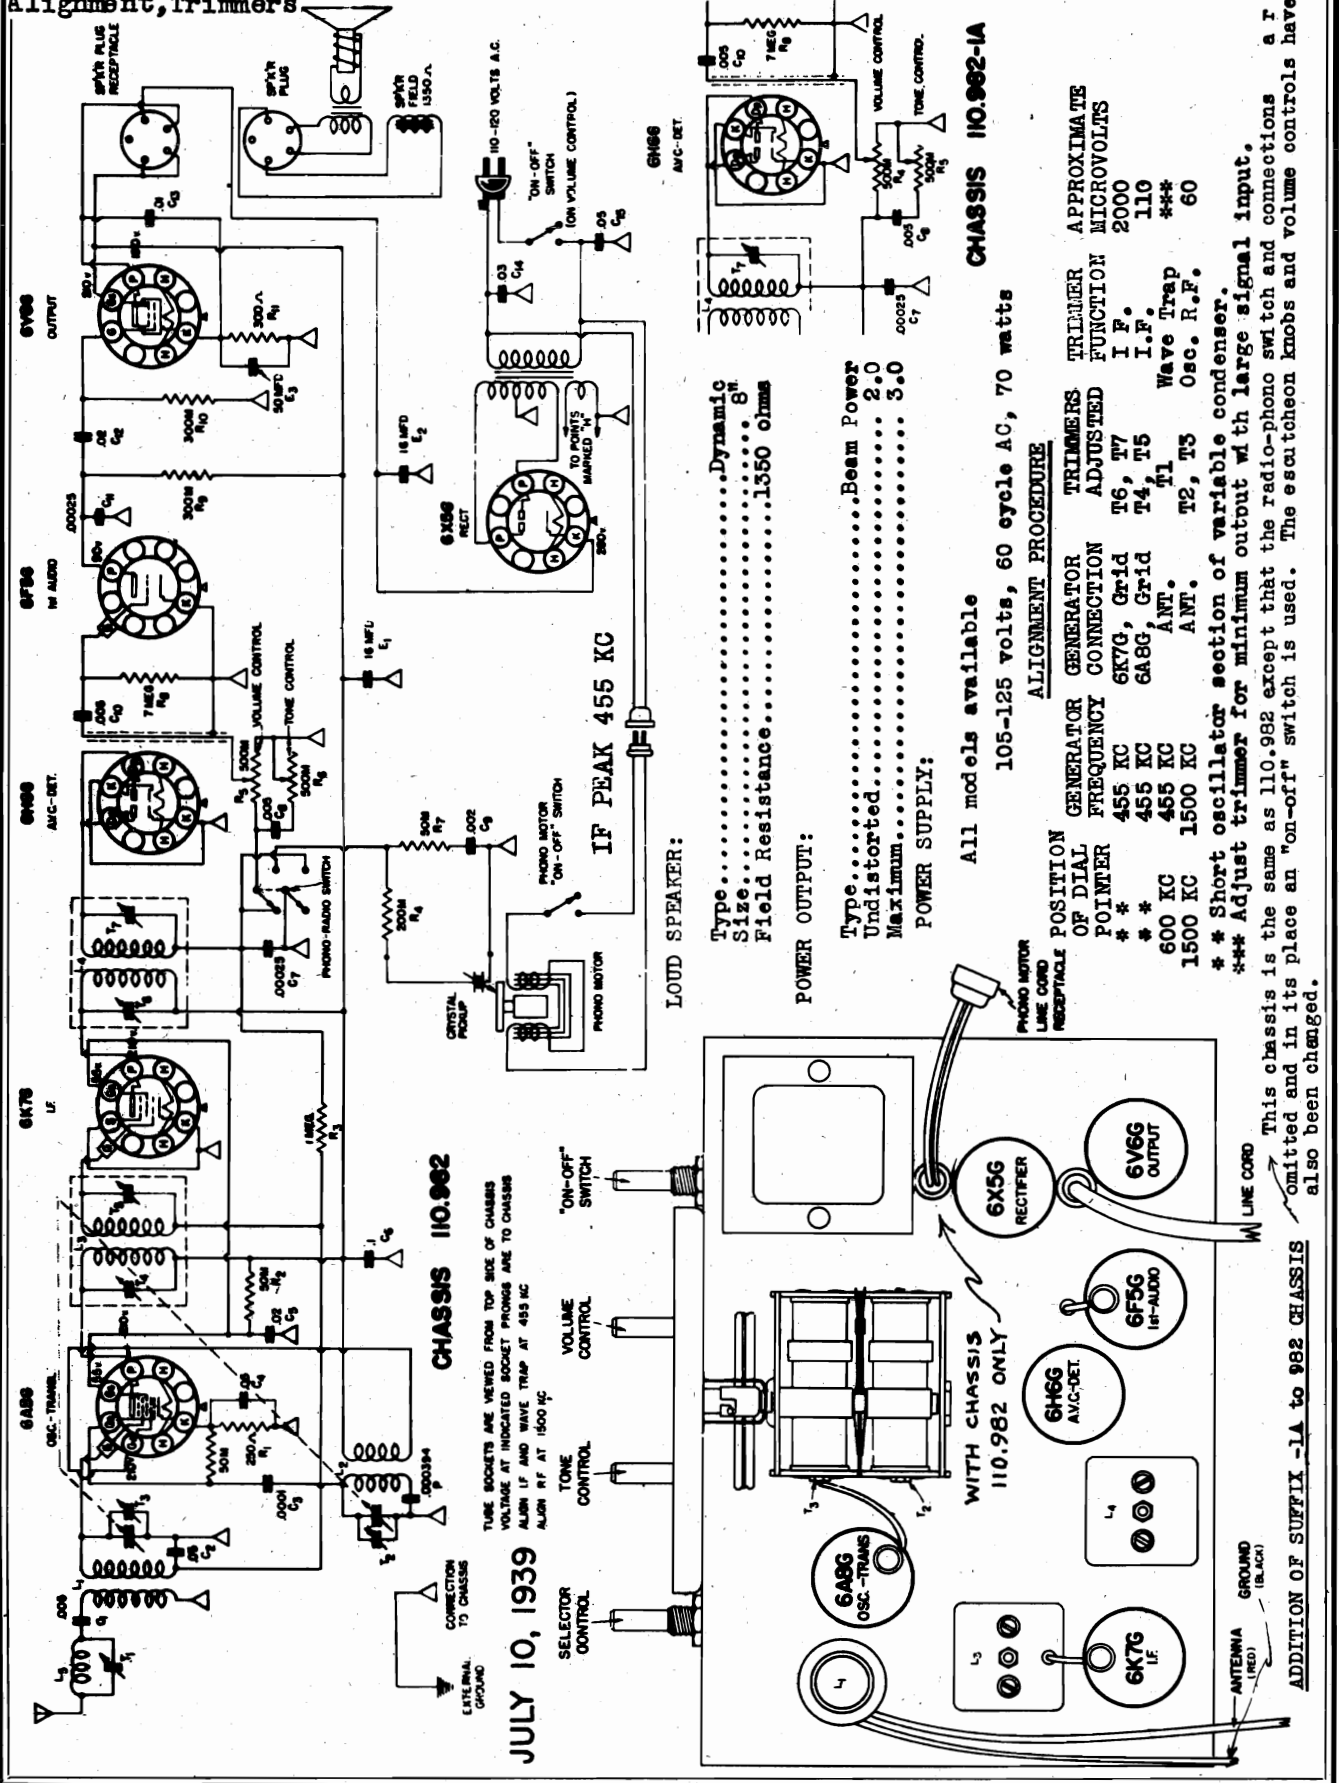

JULY 10, 1939

CHASSIS 110.982

TUBE SOCKETS ARE VIEWED FROM TOP SIDE OF CHASSIS
 VOLTAGE AT INDICATED SOCKET PRONGS ARE TO CHASSIS
 ALIGN I.F. AND WAVE TRAP AT 455 KC
 ALIGN RF AT 1500 KC

Type.....Dynamic
 Size.....8"
 Field Resistance.....1350 ohms

POWER OUTPUT:
 Type.....Beam Power
 Undistorted.....2.0
 Maximum.....3.0

CHASSIS 110.982-1A

All models available 105-125 volts, 60 cycle AC, 70 watts

ALIGNMENT PROCEDURE

POSITION OF DIAL POINTER	GENERATOR FREQUENCY	TRIMMERS ADJUSTED	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
**	455 KC	6K7G, Grid	T6, T7	2000
**	455 KC	6A8G, Grid	T4, T5	110
**	600 KC	455 KC ANT.	T1	***
**	1500 KC	1500 KC ANT.	T2, T3	60

** Short oscillator section of variable condenser.
 *** Adjust trimmer for minimum output with large signal input.

This chassis is the same as 110.982 except that the radio-phonograph switch and connections are omitted and in its place an "on-off" switch is used. The escutcheon knobs and volume controls have also been changed.

MODELS 6345, Ch. 110.982-2,
6345A, Ch. 110.982-3
Schematics, Voltage

SEARS, ROEBUCK & CO.


FOR ALIGNMENT SEE INDEX

CHASSIS IDENTIFIED BY 110.982-2 HAVE HAD A CIRCUIT CHANGE MADE TO DECREASE THE TENDENCY OF THE SET TO BECOME MICROPHONIC AT HIGH LEVELS OF PHONOGRAPH REPRODUCTION.

THE RESISTOR R12 HAS BEEN ADDED.

FOR ELECTRICAL AND MECHANICAL SPECIFICATIONS, GENERAL INFORMATION, ALIGNMENT PROCEDURE ETC.,
See Model 6345, Chassis 110.982.


WIRING DIAGRAM FOR SILVERTONE CHASSIS 110.982-2

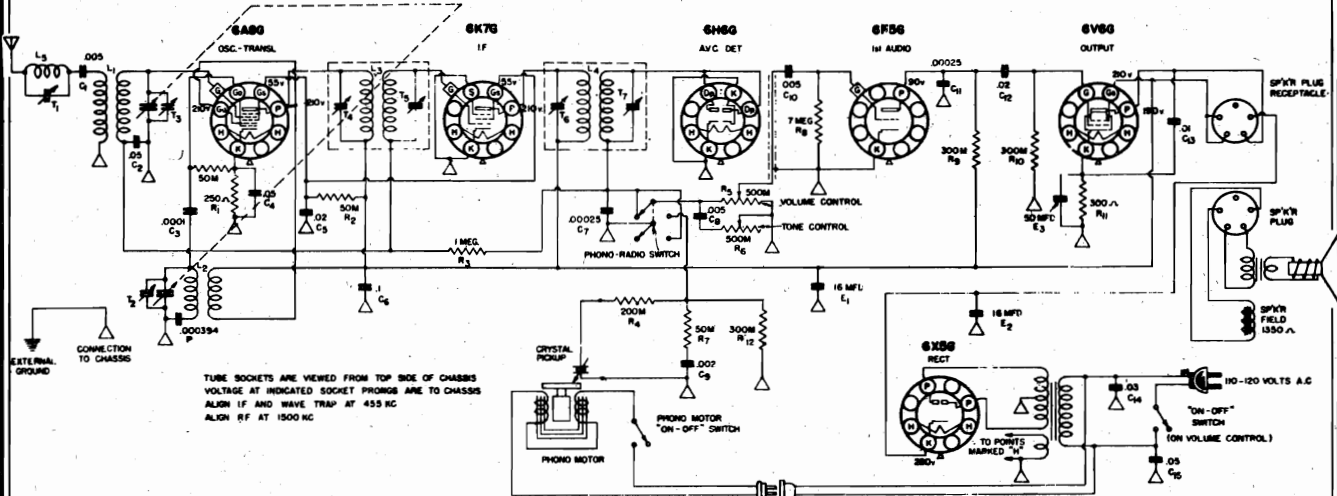

CHASSIS IDENTIFIED BY 110.982-3 HAVE HAD CIRCUIT CHANGES MADE TO INCREASE THE SENSITIVITY IN THE R.F. PORTION OF THE CIRCUIT AS WELL AS TO INCREASE THE AUDIO GAIN AND INCREASE THE UNDISTORTED OUTPUT. THE ELECTROLYTIC CONDENSER E3 HAS BEEN ELIMINATED AND THE PART NUMBERS OF RESISTORS R1, R2, R4, R6, R7, R9, R10 and R12 AS WELL AS CONDENSERS C9, C10, C12, C14, C15 AND OUTPUT I.F. L4 HAVE BEEN CHANGED.


FOR ELECTRICAL AND MECHANICAL SPECIFICATIONS, GENERAL INFORMATION, ALIGNMENT PROCEDURE, ETC.
See Model 6345, Chassis 110.982.

WIRING DIAGRAM FOR SILVERTONE CHASSIS 110.982-3

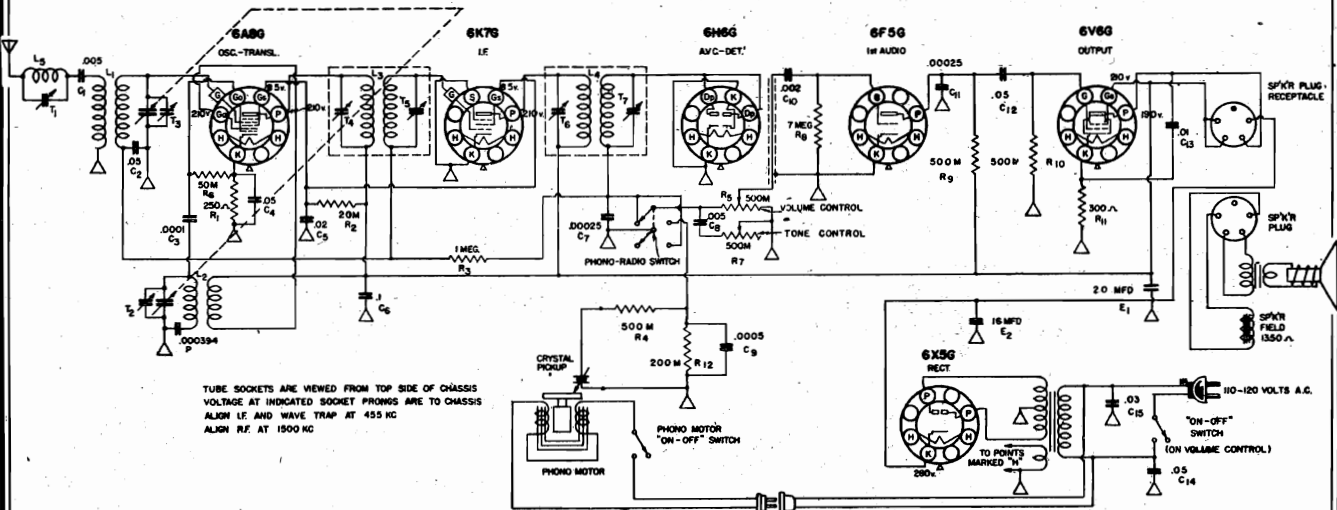

OCTOBER 6, 1939

SEARS. ROEBUCK & CO. MODELS 6346, 6346A, 6446, 6446A
Ch. 101.584, -1, -2, -3, -4, -5
Schematics, Voltages, Changes

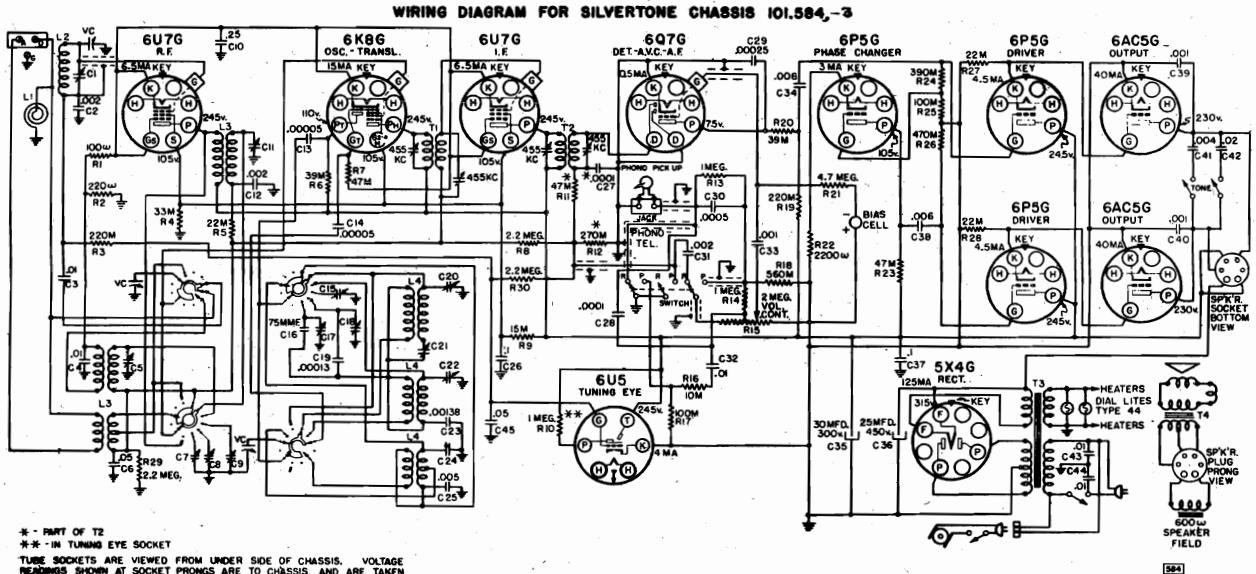

* - PART OF T2
** - IN TUNING EYE SOCKET
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE IS 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

ADDITION OF SUFFIX NUMBERS:

Chassis 101.584-1 (Catalog #6346A) is the same as chassis 101.584 except that it has a built-in loop antenna (in the cabinet) for broadcast reception and a short wave antenna plate for short wave reception (RADIONET Antenna System). Because of the antenna system change, the broadcast band frequency range extends to 1625 kc instead of 1730 kc.

Chassis 101.584-2 is the same as 101.584-1 except that it uses a different tone arm and pickup cartridge, not interchangeable with the ones used in 101.584 and 101.584-1. Accordingly, when ordering either a tone arm or a pickup cartridge, be sure the proper part number is used and the correct chassis number indicated in the order.

POWER SUPPLY:

- All models available 105-135 volts, 60 cycle; 120 watts
- All models available 105-125 volts, 50 cycle; 130 watts
- All models available 105-125 volts, 25 cycle; 130 watts


INTERMEDIATE FREQUENCY 455 kc

POWER OUTPUT:

- Type Push pull direct coupling
- Undistorted 6 watts
- Maximum 10 watts

LOUD SPEAKER:

- Type Dynamic
- Size 13 inch
- Approx. field coil res. 600 ohms
- Approx. field coil voltage drop. 70 v.

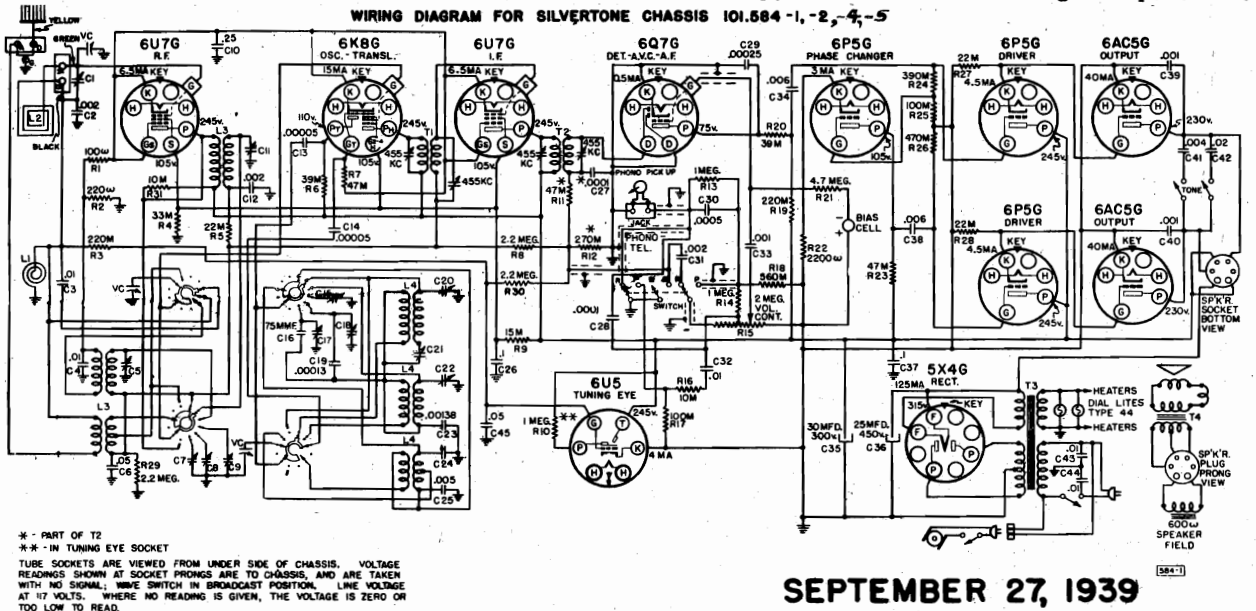


* - PART OF T2
** - IN TUNING EYE SOCKET
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

SEPTEMBER 27, 1939


MODELS 6346, 6346A, 6446, 6446A
Alignment, Chassis, Socket
Trimmers, Dial Drive Data

SEARS, ROEBUCK & CO.

MODELS See Below
Dial Drive Data

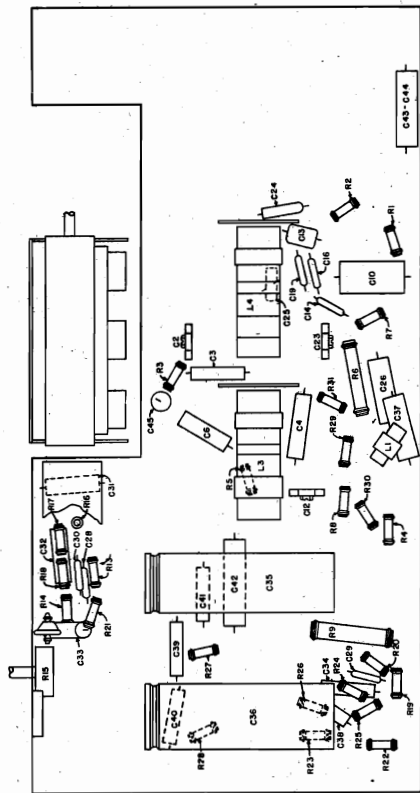


LOCATIONS OF PARTS UNDER CHASSIS 101.584-1, 2, 4, 5.

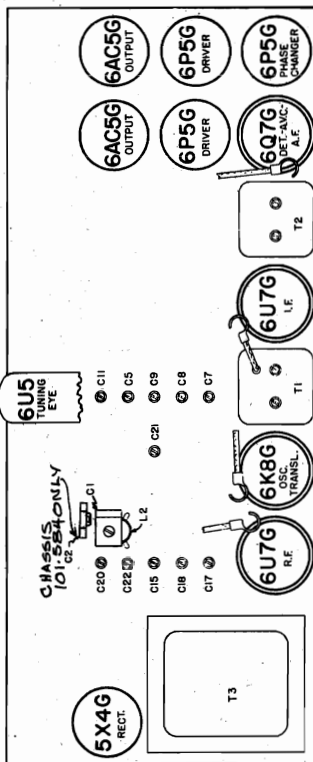

LOCATIONS OF PARTS ON TOP OF CHASSIS 101.584

Before ordering parts for Dial Drive System, check these drawings:

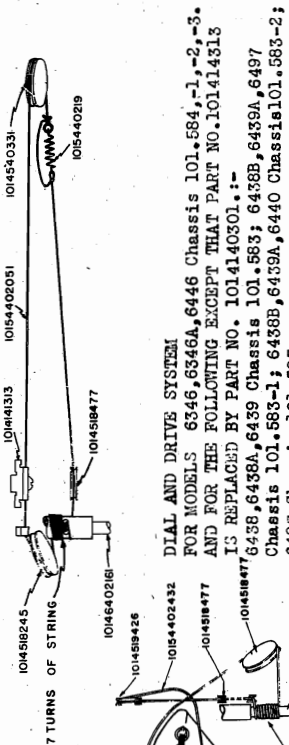

LOCATIONS OF PARTS ON TOP OF CHASSIS 101.584

PRELIMINARY:
Output meter connection Across loud speaker voice coil
Average sensitivity in microvolts for 500 milliwatts output 1.6 volt
Connection of generator output lead see chart below
Dial Drive System see chart below
Dial Drive System see chart below
Generator modulation 30%, 400 cycles
Position of Volume Control Fully clockwise
Position of Tone Control Both buttons out
Position of Dial Pointer with variable fully closed On mark to left of
550 kc calibration

WAVE BAND	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	FUNCTION	APPROXIMATE MICROVOLTS
"A"	Closed	455 kc	1.1 mfd.	T2, T1	IF Oscillator	--
"A"	Open	1750 kc	.0002 mfd.	C20	Reg. Transm.	20
"A"	1400 kc (rock)	1400 kc	.0002 mfd.	C1, C11	Ant. Term.	30
"B"	500 mc	500 mc	400 ohms	C22, C23	Osc. Transm.	150
"C"	18.3 mc	18.3 mc	400 ohms	C22, C23	Oscillator	75
"C"	15 mc (rock)	15 mc	400 ohms	C18, C17	Transm. Ant. Term.	100
"D"	9.55 mc	9.55 mc	400 ohms	C18, C17	Osc. Transm.	100
"E"	11.71 mc	11.71 mc	400 ohms	C17, C7	Osc. Transm.	100


IMPORTANT ALIGNMENT NOTES

The alignment procedure for 101.584-1, -2 is the same as above except that the C20 adjustment is made with the generator at 1625 kc. After the alignment has been completed, the C1 and C11 adjustments should be repeated, using a 1400 kc broadcast signal.

Where indicated by the word, "rock", the variable should be rocked back and forth a degree or two while making the adjustment.

If two peaks can be had, the correct adjustment is with the trimmer screw further out. The other peak is the image.

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

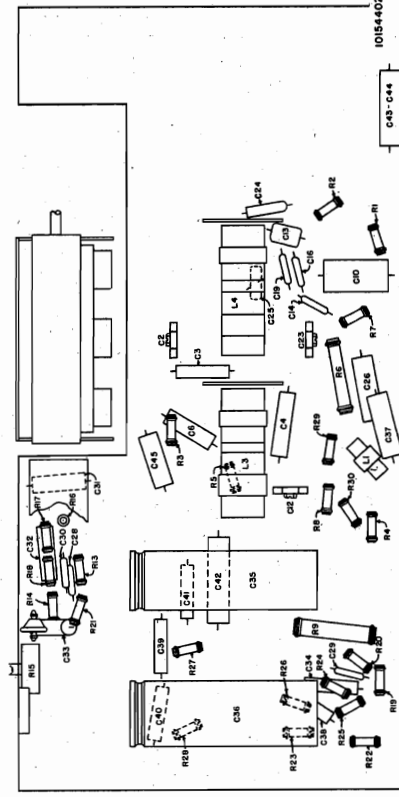

LOCATIONS OF PARTS UNDER CHASSIS 101.584-3.

PUSH BUTTON TUNING MECHANISM:

The adjustment for each push button is locked or unlocked by tightening or loosening the slotted screwhead made accessible when the push button knob is pulled off of its plunger. Stations are set up by unlocking the mechanism, tuning in the station, pushing in the plunger (being careful not to detune the station), releasing the plunger, then securely locking the adjustment by holding the screwdriver lightly in the screw head allowing the spring tension to hold the plunger against the screwdriver.

SEARS. ROEBUCK & CO. MODEL 6447, Ch. 101.590-1 to -5

MODELS 6346, 6346A, 6446, 6446A

Automatic Record Changer

Assembly, Adjustments, Notes

AUTOMATIC RECORD CHANGER


SUMMARY OF OPERATING INSTRUCTIONS:

The Changer plays twelve 10" or ten 12" records. To reload, revolve the two posts slightly, grasping them underneath the Shelf Plates. Turn them back after the played records are removed; they will fall and lock when in proper position. Then place the new records on the Shelf Plates, and push "R" button to put Changer in operation. To play the other size records, turn the knob at top of each post until proper figure is opposite pointer, and press the "10" or "12" button, to agree with pointer setting. To reject a record (or to start a change cycle as for testing purposes) simply press the "R" (Release or Reject) button, at any time while needle is upon a record. To play manually, turn plates out of the way as for reloading, and press "M" button.

OILING:

The Changer should be lubricated once a year with about a dozen drops of Kenmore #9724 seamstress oil at each of the following 6 points. All points can be reached from above, through holes in the mounting plate, as follows:

- No. 1) Three oil holes on motor gear housing. Reach all three through two holes marked "A" on drawing.
- No. 2) Three oil holes on motor gear housing. Reach all three through two holes marked "A" on drawing.
- No. 3) Through holes marked "C", see Fig. 1, and drop the oil directly upon it.
- No. 4) Through hole marked "B", drop the oil upon flat surface of cam. It will distribute itself to proper points.
- No. 5) Through holes marked "D", see Fig. 1, and drop the oil directly upon it.
- No. 6) Through hole marked "E", see Fig. 1, and drop the oil directly upon it.

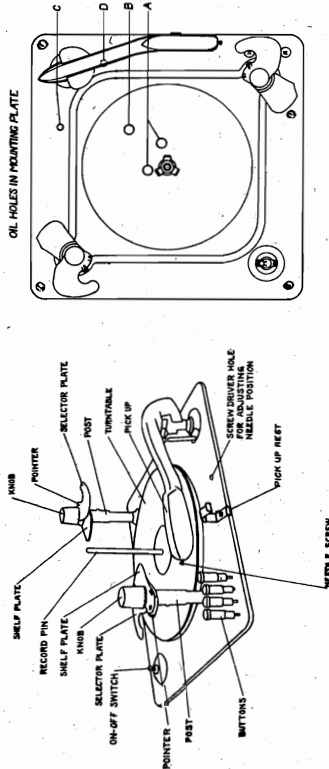

TO CHECK OILING:

If squeaks are heard compare the squeak with and without a load of records; stacked records themselves sometimes squeak against a center pin. See that all five wicks are in position, including three 1/4" wicks in frame of motor. See that each wick is thoroughly saturated (as it may not be if insufficient old oil has become gummy, commonly due to use of low grade oil). If necessary clean gummed-up wicks with kerosene. See that each is saturated with good oil; then, before replacing them, drop a little good oil into the holes.

ADJUSTMENTS:

There are three adjustments that can be made. All are correctly made at the factory, and ordinarily need never be altered. Should it become necessary to remake any of these adjustments, due to accident or tampering, proceed as follows:

A. **ADJUSTING LANDING POSITION OF NEEDLE ON THE RECORD.** (See Top View. This adjustment is made with a screw driver; from above--does not require removing Changer from cabinet.) If needle comes down too far from edge of record, playing of records will not start at their beginning. Turn Needle - Landing Adjusting Screw very slightly counter-clockwise. If needle comes down too close to edge of record, needle may slip off edge of record. Turn the adjusting screw clockwise.

Also see Paragraph 12, following.

B. **ADJUSTING DISTANCE FROM RECORD PIN AT WHICH TRIGGER WILL TRIP AND CHANGE CYCLE WILL BEGIN.** Turn Trip Adjusting Screw 1/8" toward the trigger for earlier tripping, or away from it for later tripping. This Changer does not depend, for automatic tripping, on the records being provided with any special grooves at end; it trips whenever needle comes within a certain distance of record pin. The factory adjustment is for 1-7/8" from center of Record Pin. This is the most generally satisfactory distance; no modern record will then be cut off before playing is finished, and none will fail to trip at end. For certain records of early manufacture, it may not be possible to find an adjustment that will always trip and never cut off.

C. **ADJUSTING HEIGHT TO WHICH PICKUP ARM RISES.** The arm should rise, during the change cycle, high enough so that it clears by only 1/8" the stack of records resting above it. Be careful, before deciding that adjustment is necessary, to check the record at bottom of stack (see photograph) and turn the sleeve to another record. Place the pickup arm on record adjustment is found. Turn the sleeve to another record. Repeat the adjustment. When correct adjustment is found, tighten Locknut again. This dimension may be made 1/4". If the pickup is made to rise too close to the bottom record, the stud may never clear the groove in the cam gear and the arm will keep moving back and forth continually.

REPLACING MOTOR: When mounting replacement motor, it is most important to see that Record Pin is centered between the two Posts of the Changer, that it stands perpendicular to Main Plate 55, and that it has not become bent so as to wobble. Even though the Posts are stout and not easy to bend, it is well to check them also, with a 12" combination square. Lead one corner across the groove in the cam gear, and the other corner across the groove in the motor. The motor should be mounted on equidistant points with the three Grooved Sleeves 51 (spacers) into its frame, and Record Pin is seen to revolve without appreciable wobble (a wobble would indicate that it has been bent in transit from factory) the correct position of Pin midway between the Posts can be accurately checked in this way: Place a single 13" record on the Shelf Plates, press "R" button, and turn turntable forward by hand. Immediately after the Shelf Plates open and let it fall, turn turntable slightly backward, and with other hand support the record between the Shelf Plates; it can then be readily seen whether Record Pin is off center. If it is, remove the Record and Turntable, and loosen slightly the screws or screws nearest the Shelf Plate to which record appeared closest. This will be necessary for permanent repair to insert a shim or two on one or more of the three screws (or change shims from one screw to another). The shims used are shaped like an ordinary washer, cut out at one side (see cut-away view at 58 on photo, showing a shim in place upon one of the Grooved Sleeves). Shims can readily be cut out with shears and punch from thin metal or cardboard. They should be inserted, around proper screws (when screws have been sufficiently loosened) between Motor Frame and the Metal Grooved Sleeve. Do not insert shims next to Rubber Grommet.

TROUBLE SHOOTING:

Cases of failure to operate satisfactorily will generally be found due either to neglect of proper lubrication, or to tampering with the mechanism after it leaves the factory, or to injuries accidentally sustained as by external vibration or by impact of some heavy object. In addition there is always the possibility that any kind of spring may "go dead" (cease to operate without any visible breakage) even though the utmost factory precautions are taken against it--or that setscrews may work loose due to some external vibration. Damage from tampering is likely to take the form of bent parts; never bend any part during examination. Be careful, especially, against bending the Shim 58 from below on Cam Connecting Rod Lift 37 while adjusting. Bending Shim 58, as a result, and even slight bending here might interfere with correct timing of the cycle operations.

Among the principal trouble symptoms to which such causes may give rise, are the following:

1. **MECHANISM IS SLOW IN STARTING, OR STALLS DURING A CHANGE CYCLE, BUT A SLIGHT FORWARD PUSH WITH THE HAND STARTS IT AGAIN.** May be caused by

- a. Failure to lubricate properly. Oil thoroughly, per instructions above.
- b. Loose setscrews.

c. **Weakness of Drive:** line voltage may be abnormally low, or motor windings damaged. If windings are found damaged, remove motor and return it to factory for repair or replacement. See above: "Replacing Motor".

2. **MOTOR FAILS TO RUN, EVEN WHEN IT IS ENTIRELY DISCONNECTED FROM OTHER WIRING AND POWER VOLTAGE IS APPLIED DIRECTLY TO THE TWO ENDS OF ITS WINDINGS.** This indicates trouble in Motor windings. Unless the damage is easily seen and repaired, replace motor, as above described.

3. **MOTOR IS SLOW IN STARTING.**

a. Check oiling, as directed above. It may not have been properly done; old oil may have become gummy.

b. Changer may have been in a very cold place, and may not yet have reached room temperature. Allow it to get warmed up, before concluding that Motor is defective, and proceeding as in Paragraph 2.

4. **SQUEAKS OR OTHER NOISES, DURING PLAYING OF RECORDS.**

a. Check oiling, as directed previously. (If squeaks are heard, they will usually be found to come from the records--not from the mechanism.)

b. See that all setscrews are tight.

c. Examine Motor windings; especially the shading coils (not visible in photos) which encircle a portion of each laminated pole, and make the Motor self-starting. If coils have been jarred loose at any point, they may be tightened accordingly.


5. **CHANGER IS NOISY WHEN IN CYCLE.** Check oiling.

MODELS 6346, 6346A, 6446, 6446A


MODEL 6447

SEARS, ROEBUCK & CO.

Record Changer Notes, Assembly

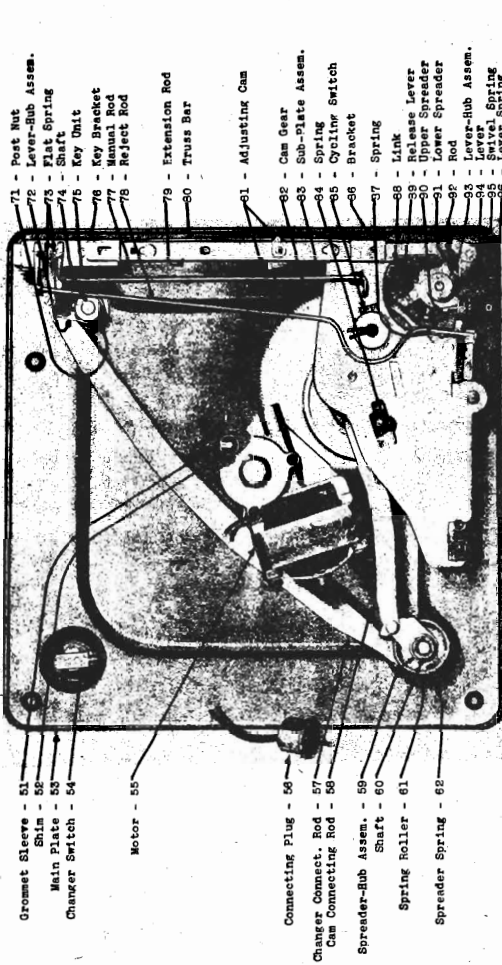


Bottom View

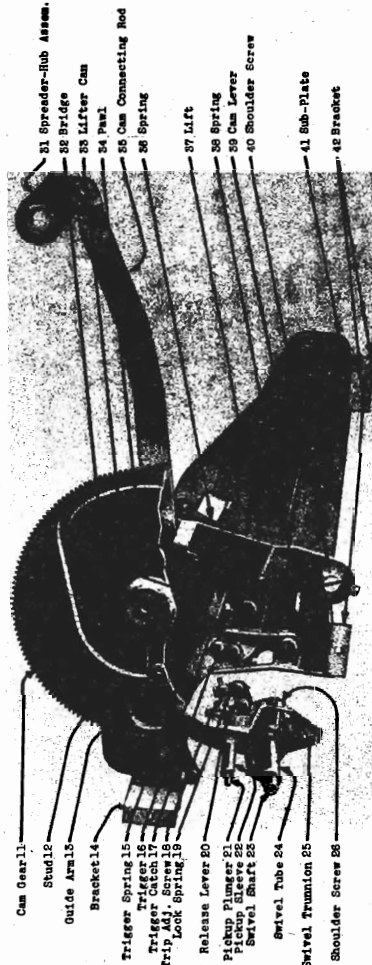


Sub-Plate Assembly

ADDITION OF SUFFIX NUMBER -3 TO 101.584 CHASSIS:

Assemblies identified as 101.584-3 are the same as 101.584 except that they use a different tone arm and pickup cartridge, not interchangeable with the ones used in 101.584. The drawings below illustrate the tone arms and cartridges used in 101.584-1, 2, 3. Be sure to mention the complete identification number including the dash number when ordering these parts.



CARTRIDGE & ARM USED IN 101.584-1



CARTRIDGE & ARM USED IN 101.584-2, -3

6. MOTION OF PICKUP TOWARD RECORD PIN WILL NOT TRIP CHANGER MECHANISM.
 - a. It may be found that, instead of trigger being actuated, there is stretching of Swivel Spring 95 (joining the lug at end of Swivel Spreader 80 and 81), allowing the spreaders to open. Release Lever 90, by bending slightly, the lug on other pickup arm out of its normal position, really, it may "lean" toward center of record. To remedy this, grasp pickup arm and twist it, very slightly, in a clockwise direction, so that it stands vertical, or even leans a little in outward direction.
 - b. If trigger is being properly actuated, probably Cam Lever 89 is binding against Sub-Plate 41. Look for dirt or obstructions; see that rivets are working freely. If the Lever 89 is not working properly, it may be necessary to replace it with one on Cam Gear 82, and if set screws are tight, the change cycle must operate, as Cam Gear Turns.
7. PRESSING "B" BUTTON DOESN'T TRIP CHANGER MECHANISM.
 - a. Check Key Control Unit 75; see whether there is an obstruction or a bent part which prevents "B" button from going clear down to the end of its travel.
 - b. Examine Select Rod 78. If it does not trip, even when properly revolved by complete depressing of "B" button, the rod has probably been bent, and must be restored in same way. Grasp the two ends and twist it slightly.
 - c. If trigger 16 is being properly actuated but without starting a change cycle, see directions above, Paragraph 6-b.
8. PRESSING "M" BUTTON FAILS TO PUT CHANGER MECHANISM OUT OF ACTION 90 AS TO ENABLE MANUAL OPERATION. Check Key Control Unit as in preceding paragraph. First see that button goes clear down; then follow its action through Manual Rod 77.
9. MOTOR STOPS IMMEDIATELY WHEN CHANGER SWITCH IS TURNED OFF DURING A CHANGE CYCLE (instead of continuing to run, as it should, until needle is again upon a record, and then stopping). See Paragraph 6-b.
10. TURNING CHANGER SWITCH OFF FAILS TO STOP CHANGER AT ALL. Either of these two conditions would indicate failure of Cycling Switch 85. Cycling Switch operates normally to short-circuit the manual changer switch (which may be located in position shown at 54, or elsewhere) which it is attached, down against Main Plate. If tendency then appears for needle to jump across record, check angle of needle (see Paragraph 6-a above).
11. CHANGER FAILS TO REPEAT LAST RECORD. See Paragraph 6, above.
12. NEEDLE LANS PROPERLY ON RECORD BUT FAILS TO MOVE OVER INTO RECORD GROOVE. Pickup arm is normally adjusted toward center of records by Lead Spring 97. Should a slight in-crease in record thickness occur, the pickup arm will be bent away from the groove, and which it is attached, down against Main Plate. If tendency then appears for needle to jump across record, check angle of needle (see Paragraph 6-a above).
13. RECORDS FALL UNWELLY UPON TURNABLES. Seldom objectionable, this is due to record pin not being correctly centered between Posts. If necessary, it can be corrected as described above, see "Replacing Motor".
14. LAST RECORD DROPS ON ONE SIDE ONLY. This suggests a Post bent out of perpendicular to the turntable, or a "Repeating Motor". If Post must be straightened, be careful not to bend other part.
15. CHANGER CONTINUES CHANGING. Due to failure of lift 37 to fall back out of engagement with 25, CHANGER CONTINUES CHANGING. This occurs, to find the point where friction or binding is interfering with freedom of motion.
16. RECORDS IS DRIVEN, BUT NOT HEARD OR NOT HEARD WITH PROPER VOLUME. See that Pickup cord is still suspected in pickup, test its output with a vacuum-tube voltmeter. Playing an average record, output should test 1 to 2.5 volts. If pickup cartridge is found not to deliver proper output, remove it and install another.
17. SELECTOR PLATE FAILS TO SEPARATE BOTTOM RECORD FROM STACK. This is due either to a badly warped condition of the record, or to its being of a thickness very considerably different from that of the record immediately preceding it. The proper spacing of the blades to accommodate a maximum variation in thickness and flatness of records, but certain records may be found which are so far out as to be impracticable for use in automatic changers. Improper spacing between blades could also result in jamming or failure of the blades to separate the bottom record from the stack. The proper spacing of the blades in the 10" position is .050-.055"; in the 12" position it is .070-.075". A special long gauge is necessary to measure the spacing between blades. The blades must be bent out of their normal position, and it is extremely unlikely that the blades could become bent out of their proper adjustment since they are very rigid. Adjustment is secured by bending of the blades. IF NECESSARY TO DECREASE THE CHANGER:

Before attempting to remove Sub-Plate Assembly 85, detach Key Control Unit 75 from Main Plate. To do this, start with Control Unit Truss Bar 80. Then take out the screw which holds left end of Adjusting Rod Lever 94, next remove Adjusting Rod 92 and Adjusting Rod Extension 93. Then remove Main Plate, rods 77 and 78 can then, with due care, be extracted without bending. Free the Cam Connecting Rod 59 by loosening set screw holding Spreader and Hub Assembly 59. Sub-Plate Assembly can then be detached without bending parts. In reassembling, reverse the procedure. FAILURE TO PLAY THROUGH THE ENTIRE RECORD WHEN ONLY ONE OR TWO RECORDS ARE ON THE TURNABLE:

If the mechanism fails to play more than the small portion of the record, when only one or two records are on the turnable, it will probably be due to the turnable being shorter than the one furnished and to which the mechanism has been adjusted. The needles used must not be less than 11/16" in length, although they may be of greater length.

REMOVING RUMBLE:

The record changer plate must be completely free in its mounting to avoid excessive rumble. The split nuts on the mounting screws, under the changer plate, should be loosened for three or four turns. The mounting screws themselves should be unloosened for three or four turns, if they may form a thread in the rubber bushings and thereby depress the bushings excessively.

Notes, Assembly Views

SEARS, ROEBUCK & CO MODEL 6447


ADDITION OF SUFFIX NUMBERS -4 AND -5 TO CHASSIS IDENTIFICATION NUMBER 101.590, 101.584:

Chassis identified by the suffix number -4 are the same as those identified by the suffix number -1 except that the record changer unit has certain changes incorporated, as explained below. *same as 101.590-2 in the case of the chassis 101.590).

Chassis identified by the suffix number -5 are the same as those identified by -3 except that the record changer unit has certain changes incorporated; (-3 for chassis 101.590).


The record changer design has been changed so that the adjustment, controlling the distance from the record pin at which the trigger will trip and the change cycle will begin, can be made through a hole in the top plate, marked "AR" in the photograph. Turn the screw head clockwise for earlier tripping; counter-clockwise for later tripping. (The effect is to alter the position of the Cam GJ which strikes the Trigger GP. It may be found that the cam has been revolved through a half turn; in this case, the above directions would apply only after the cam has been returned to the correct position by revolving the screw head half a turn.)

Push Button Assembly "R" AA
 Push Button Assembly "K" AB
 Push Button Assembly "12" AC
 Push Button Assembly "10" AD
 Changer Post AE
 Needle Setscrew AF
 Neoprene Tubing AG
 Drive Pinion Assembly AH
 Pickup Support Bracket Assembly AI
 Needle Landing Adjustment Hole AJ
 Motor Oiling Holes AK
 Oiling Hole AL
 Oiling Hole AM
 Oiling Hole AN
 (3) Sub-Plate Attachment Screws AO
 Lifter Rod Nut (CE) AP
 Swivel Post AQ
 Trip Adjustment Hole AR

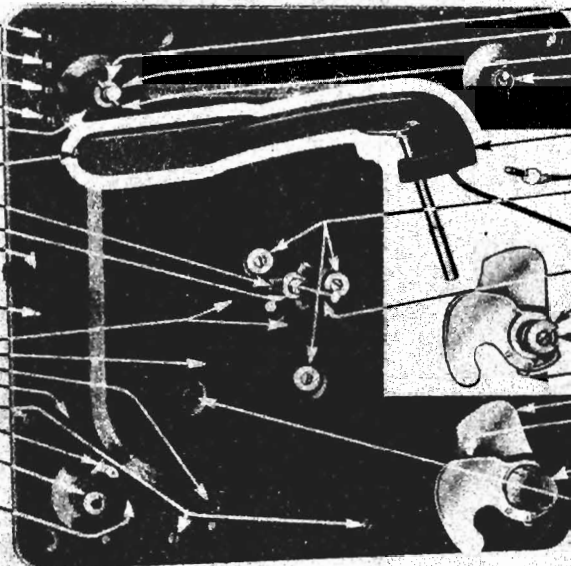


BA Changer Post Washer
 BB Changer Shaft--Front
 Changer Shaft--Rear (Not shown)
 BC Changer Shaft Pin
 BD On-Off Switch
 BE Pickup
 BF Grommet (3 required)
 Washer (3 required)
 BG Record Pin
 BH Changer Plate Washer
 BI Changer Plate Spring
 BJ Pointer
 BK Shelf Plate } Changer Plate
 BL Selector Plate } Assembly (2 reqd)
 BM Changer Cup or Knob (2 reqd)
 BN Cam Gear Screw

Changer Motor EA
 Main Mounting Plate Assm. EB
 Cam Connecting Rod EC
 Changer Shaft Collar ED
 Spreader Hub Assembly EE
 Spring Roller EF
 Changer Spreader Spring EG
 Cycling Switch EH
 Cam Lever Spring EI
 Sub-Plate and Gear Assm. (DI) EJ
 Adjusting Rod Assembly EK
 Cam Connecting Rod Lift (CV) EL
 Cam Connecting Rod Lift Spring EM
 Changer Model Number EN
 Changer Serial Number EO
 Rejection Rod Support EP
 Adjusting Rod Lever Spring EQ
 Pickup Leader Spring (CO) ER
 Pickup Cord ES
 Post Nut ET
 Shakeproof Washer EU
 Male Plug (on end of cord) EV
 Lug on Lever-Hub Assm. EW
 Adjusting Rod EX

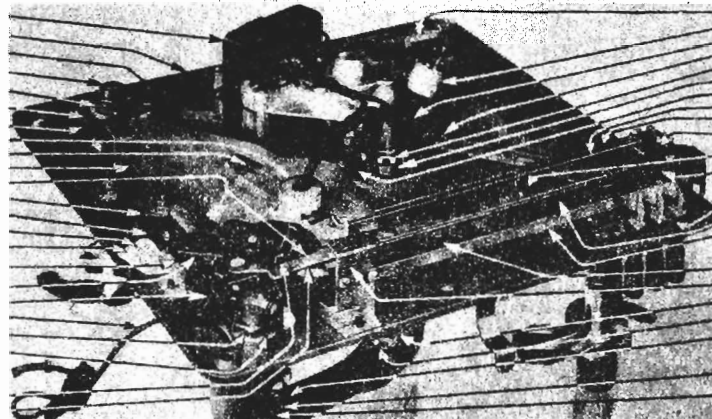

FA On-Off Switch
 FB Male Plug with #7002 Shell
 FC Cord Clamp
 FD Changer Connecting Rod Assm.
 FE This (Assortment)
 FF Grommet Sleeve (3 reqd.)
 FG Idler Gear
 FH Manual Key Rod
 FI Rejection Rod
 FJ Manual and Rejection Rod Spring
 FK Extension Rod
 FL Key Control Bracket
 FM Key Control Unit
 FN Adjusting Rod Spring
 FO Control Unit Truss Bar
 FP Needle Landing Adjusting Cam
 FQ Adjusting Rod Bracket
 FR Pickup Cartridge
 FS Cartridge Clamp
 FT Tone Arm Lift Plate
 FU Hinge Pin Spring
 FV Tone Arm Hinge Pin

Swivel Shaft and Head Assm. . . . CA
 Fibre Washer (2 required) CB
 Lifter Guide CC
 Swivel Guide Arm Assembly CD
 Lifter Rod Nut (AP) CE
 Trunnion Shoulder Screw (2 reqd) CF
 Link CG
 Swivel Tube and Trunnion Assm. CH
 Swivel Guide Arm Spring CI
 Trip Adjusting Cam CJ
 Swivel Spreader Spring CK
 Stop Lever and Trigger Adj. Assm. CL
 Upper Swivel Spreader CM
 Lower Swivel Spreader CN
 Pickup Leader Spring (ER) CO
 Trigger CP
 Pawl Spring CQ
 Cam Lever Spring CR
 Cam Lever CS
 Shoulder Screw CT
 Sub-Plate CU
 Cam Connecting Rod Lift CV

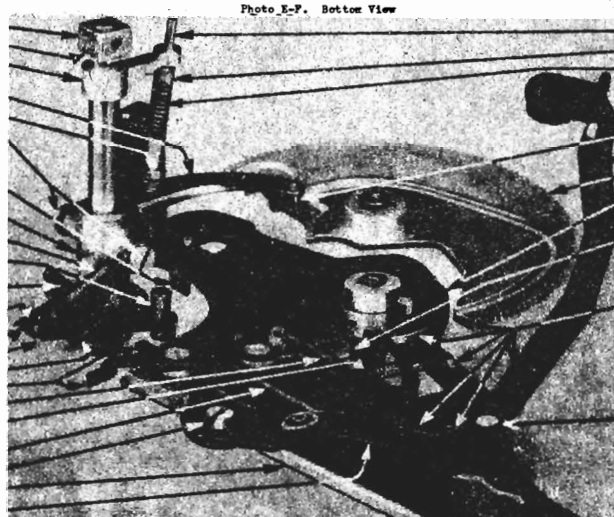

DA Pickup Plunger
 DB Pickup Plunger Sleeve
 DC Pickup Plunger Spring
 DD Stud
 DE Cam Connecting Rod
 DF Cam Gear
 DG Lifter Cam
 DH Pawl
 DI Sub-Plate and Gear Assembly
 DJ Roller


Photo C-D. View of Sub-Plate Assembly, Together with Certain Other Assemblies.

FEB. 28, 1940

MODEL 6329, Ch. 110.989
Schematic, Socket
Trimmers, Alignment

SEARS, ROEBUCK & CO.

WIRING DIAGRAM FOR SILVERTONE CHASSIS 110.989

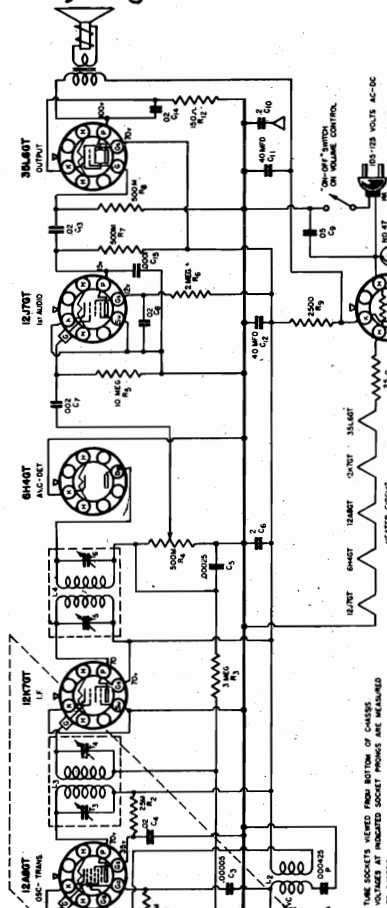


POWER SUPPLY:
All models available.

110-125 volts, 25-60 cycle AC or DC, 30 watts

FREQUENCY RANGE:

Broadcast 535-1700 KC

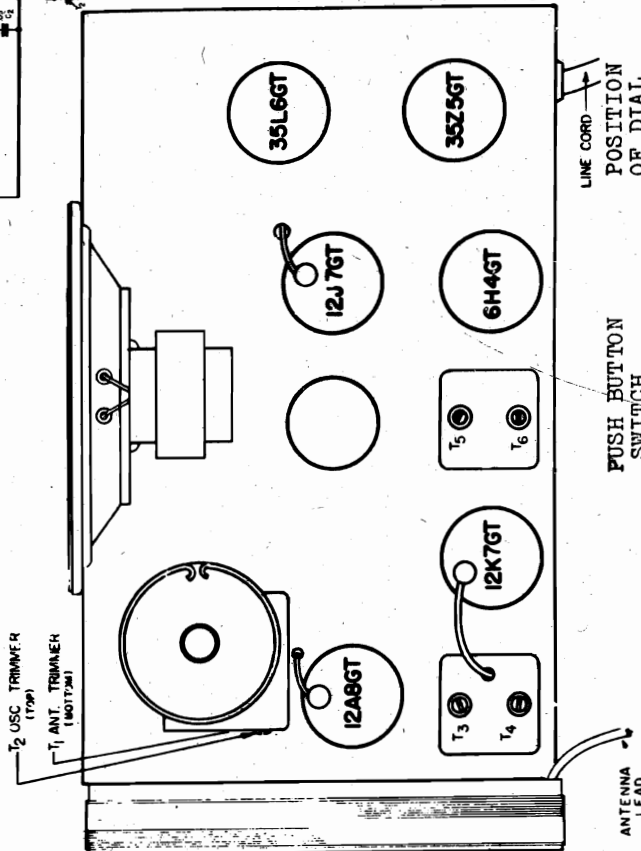

LOUD SPEAKER:
Type . . . Dynamic
Size 5"
Field P. M.

POWER OUTPUT
Type Beam Power
Undistorted 1.0
Maximum 1.5

MARCH 20, 1940

IF PEAK 455 KC

ALIGNMENT PROCEDURE

- Output meter connections Across primary output transformer
- Output meter reading to indicate 0.050 watt for Weston type 571 output meter on 15 volt scale 13.0 Volts
- Dummy antenna value in series with generator output . . 100 mmfds..
- Connection of generator ground. B- Bus
- Generator modulation. App. 50% @ 400 cycles
- Position of volume control. Fully clockwise

GENERATOR FREQUENCY	GENERATOR CONNECTION	TRIMMERS ADJUSTED	TRIMMER FUNCTION
455 kc	12K7GT, Grid	T5, T6	I.F.
455 kc	12A8GT, Grid	T3, T4	I.F.
1500 kc	***	T2, T1	Osc., R.F.

It is advisable to repeat the entire alignment procedure in the original order to insure greater accuracy.

Always keep the output from the test oscillator at its lowest possible value. As the sensitivity is increased by alignment, the generator output should be reduced correspondingly.


** Short oscillator section of variable condenser.

*** Connect generator output to a separate radiating loop and pickup 1500 KC signal on receiver.

Chassis, Alignment
Socket, Trimmers

SEARS, ROEBUCK & CO.

MODELS 6350, 6351, 6352
Ch. 101.580, 101.580-1
Schematic, Voltage

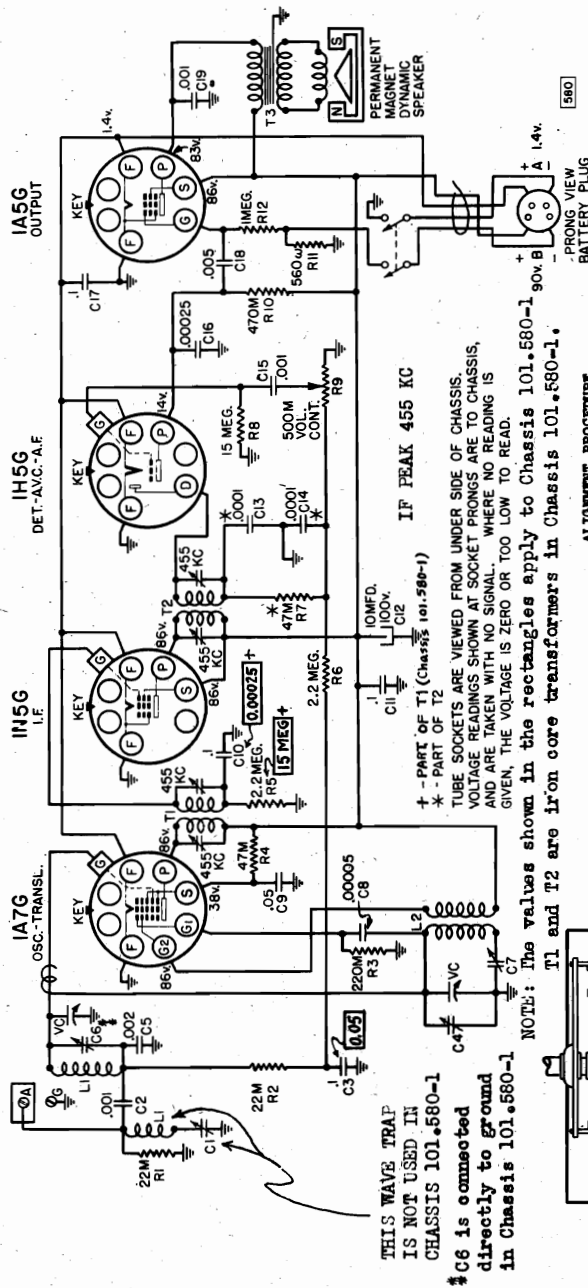

PRELIMINARY:
Output meter connections Across loud speaker voice coil
Output meter reading to indicate 50 milliwatts 0.3 volt
Approximate average sensitivity in microvolts for 50 milliwatts output See chart below
Generator ground lead connection Receiver chassis
Dummy antenna value to be in series with generator output See chart below
Connection of generator output lead See chart below
Generator modulation 30%, 400 cycles
Position of volume control Horizontal (To fall on block
Position of pointer with variable fully closed below 500 kc calibration mark.)

POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
Closed	455 kc	.1 mfd.	IA7G Translator	T2, T1	110
800 kc	455 kc	.0002 mfd.	Ant. Term. Grid	C1*	--
1400 kc	1400 kc	.0002 mfd.	Ant. Term. C6, #4	IF Wave Trap	90
800 kc (rock)	800 kc	.0002 mfd.	Ant. Term. C7	Generator Fadder	90


IMPORTANT ALIGNMENT NOTES

* The generator should be adjusted to give high output. The trimmer should be adjusted for minimum output meter reading instead of the customary maximum reading. If the frequency of an interfering station near 455 kc is known, the generator and trimmer should be adjusted for the frequency of the interfering station rather than 455 kc.

The variable should be rocked back and forth a degree or two while making the 800 kc adjustment.

The alignment procedure should be repeated in the original order, step by step, to insure greater accuracy.


Always keep the output power from the generator at its lowest possible value to prevent the AVC of the receiver from interfering with accurate alignment.

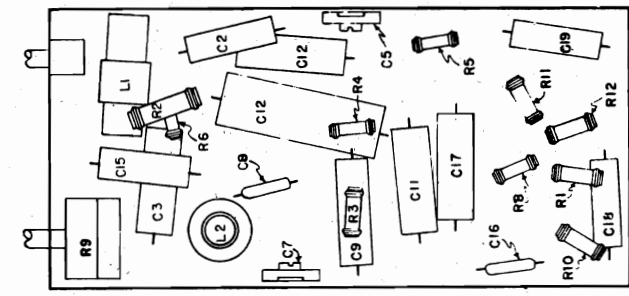

POWER SUPPLY:
#5060 A-B block (1.47, "A", 90v, "B")
or
#734 3v. Storage "A"
#5041 45v. "B" battery
#5070 Adaptor necessary with 2 v. Storage "A"

LOUD SPEAKER:
Type PM Dynamic
Size5 inch


POWER OUTPUT:
Type Pentode
Undistorted 0.09 watts
Maximum 0.17 watts

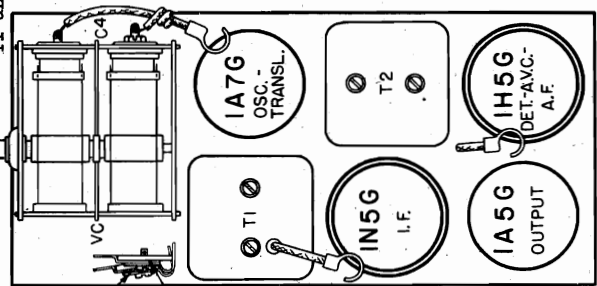

MODELS 6353, 6354, 6355
Ch. 101.577
Schematic, Voltage
Chassis, Alignment
Socket, Trimmers

SEARS, ROEBUCK & CO.

MODEL 6260, Ch. 101.558⁸
Alignment

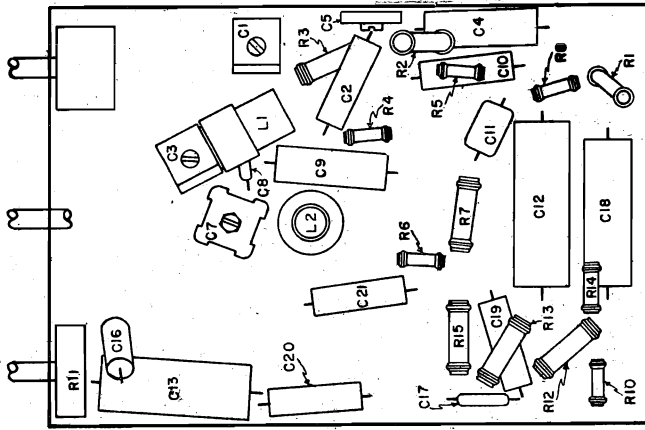

LOCATIONS OF PARTS
UNDER CHASSIS


FREQUENCY RANGE:
Broadcast 545-1750 kc

ALIGNMENT FREQUENCIES:
Oscillator 1750 kc
Antenna-Transl. 1400 kc
Padder 600 kc

POWER OUTPUT:
Type Pentode
Undistorted 0.09 watts
Maximum 0.17 watts
LOUD SPEAKER:
Type PM Dynamic
Size 5 inch

POWER SUPPLY:
#5060 . . . A-B block (1.4v. "A", 90v. "B")
or
#734 2v. Storage "A"
#5041 45v. "B" battery
#6071 Adaptor necessary with
2v. Storage "A"
"A" Drain 0.25 amperes
"B" Drain 10.35 ma

MAY 11, 1939

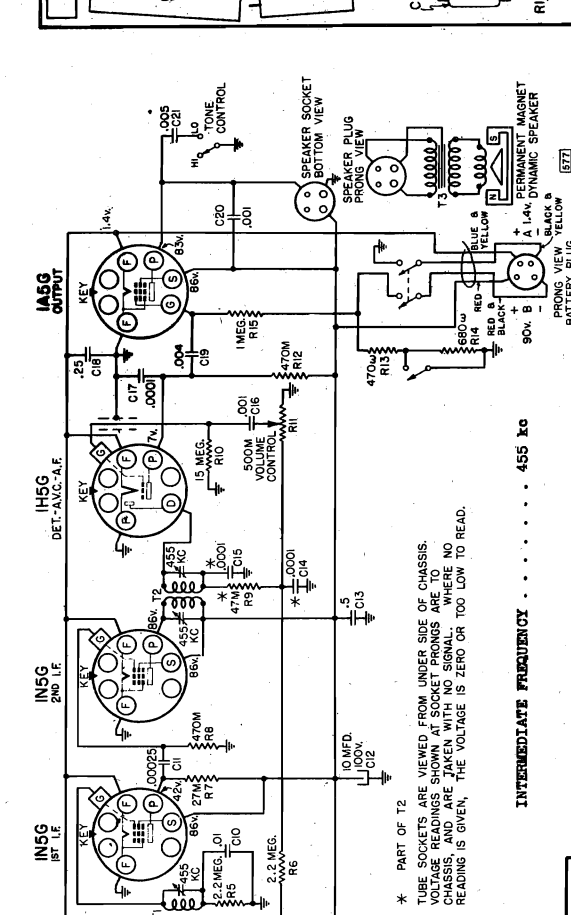


ALIGNMENT PROCEDURE

PRELIMINARY:
Output meter connections Across loud speaker voice coil
Output meter reading to indicate 50 milliwatts See 0.5 volts
Approximate microphone input to indicate 50 milliwatts output See 0.5 volts
Generator Fully on
Position of Volume Control 30%, 400 cycles
Position of Tone Control Fully on
Position of pointer with variable fully closed Horizontal (to fall on block
(For Model 6260 dial pointer should be horizon- below 550 kc calibration mark)
bal when fully open or fully meshed).

POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER ADJUSTMENTS (IN ORDER TO SHOW)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
Closed	455 kc	.1 mfd.	1A7C Trans-lator-Grid	T2, T1, T1	IF	125 85
600 kc	455 kc	.0002 mfd.	Ant. Term.	C1*	IF Wave Trap	12.5 45
Fully open	1400 kc	.0002 mfd.	Ant. Term.	C6	Oscillator	80 25
1400 kc (root)	600 kc	.0002 mfd.	Ant. Term.	C3, C7	Trimmer Padder	80 25

* For 6260, Chassis 101.558 IMPORTANT ALIGNMENT NOTES

The generator should be adjusted to give high output. The trimmer should be adjusted for minimum output meter reading instead of the customary maximum reading. If the frequency of an interfering station near 455 kc is known, the generator and trimmer should be adjusted for the frequency of the interfering station rather than 455 kc.
The variable should be rooked back and forth a degree or two while making the 600 kc adjustment.
The alignment procedure should be repeated in the original order, step by step, to insure greater accuracy.
Always keep the output power from the generator at its lowest possible value to prevent the AWT of the receiver from interfering with accurate alignment.

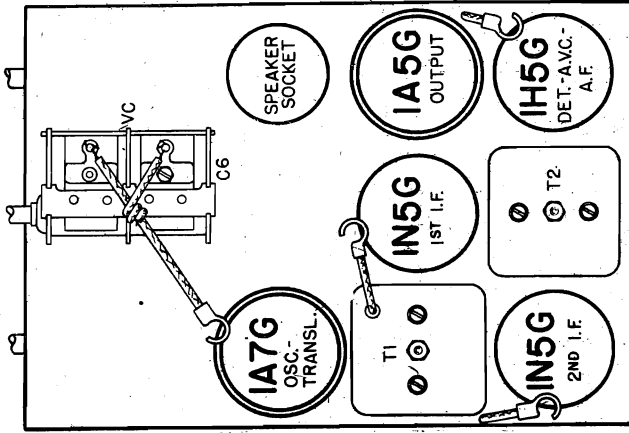


LOCATIONS OF PARTS ON TOP OF CHASSIS

Schematic, Voltage Chassis, Alignment Socket, Trimmers

SEARS, ROEBUCK & CO.

MODELS 6356, 6357, 6358 Ch. 101.578

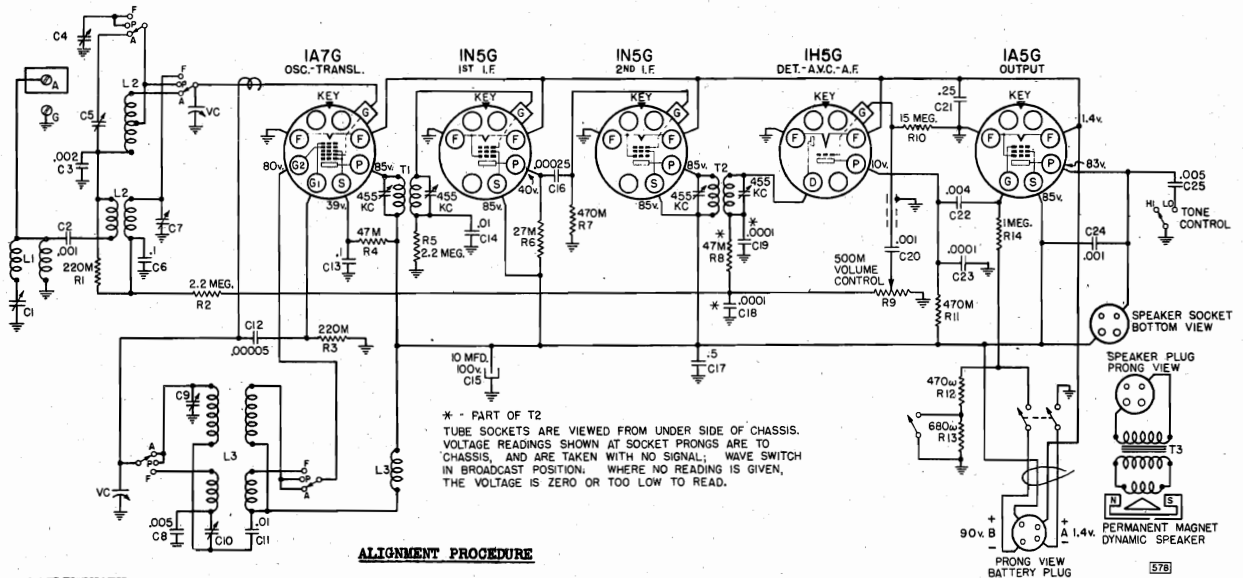

ALIGNMENT PROCEDURE

PRELIMINARY:

Output meter connection Across loud speaker voice coil
 Output meter reading to indicate 50 milliwatts 0.3 volts
 Approximate microvolts input for 50 milliwatts output See chart below
 Generator ground lead connection Fully clockwise
 Generator modulation 30%, 400 cycles
 Position of Volume Control Fully clockwise
 Position of Tone Control HI
 Position of Dial Pointer with variable fully closed Horizontal

FREQUENCY RANGES:
 Broadcast 545-1750 kc
 Police 1455-2650 kc
 Short Wave 5.95-18.2 mc

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"AM"	Closed	455 kc	.1 mfd.	1A7G Grid	T3, T1	IF Output	65
"AM"	600 kc	455 kc*	.0002 mfd.	Ant. Term.	C1*	IF Input	--
"AM"	Fully open	1750 kc	.0002 mfd.	Ant. Term.	C9	Wave Trap	45
"AM"	1400 kc	1400 kc	.0002 mfd.	Ant. Term.	C5	Oscillator	22
"AM"	600 kc(rock)	600 kc	.0002 mfd.	Ant. Term.	C10	Padder	35
"POL"	3.4 mc	3.4 mc	400 ohms	Ant. Term.	C4	Translator	80
"FOR"	15 mc(rock)	15 mc	400 ohms	Ant. Term.	C7	Translator	20

LOUD SPEAKER:
 Type PM Dynamic
 Size 6 inch


POWER OUTPUT:
 Type Pentode
 Undistorted 0.09 watts
 Maximum 0.18 watts

* The generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading instead of the usual maximum reading. If the frequency of an interfering station around 455 kc is known, the generator should be adjusted to the frequency of that station instead of to 455 kc.

Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.


The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

RECOMMENDED ANTENNA EQUIPMENT:
 Catalog #5523, #5522, #5575.

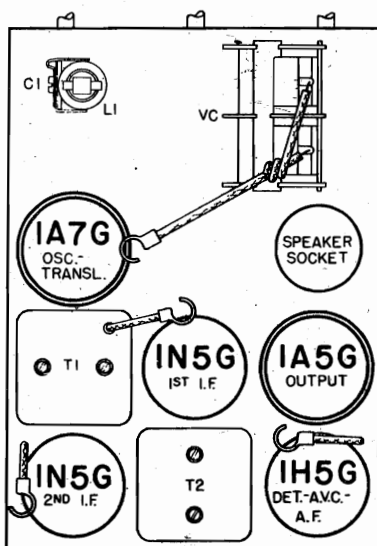

LOCATIONS OF PARTS ON TOP OF CHASSIS

POWER SUPPLY:
 #5060. A-B block (1.4v. "A", 90v. "B")
 or
 #734 2v. Storage "A"
 #5041. 45v. "B" battery
 #5071. Adaptor necessary with 2 volt Storage "A"
 "A" Drain. 0.25 ampere
 "B" Drain. 10.25 ma

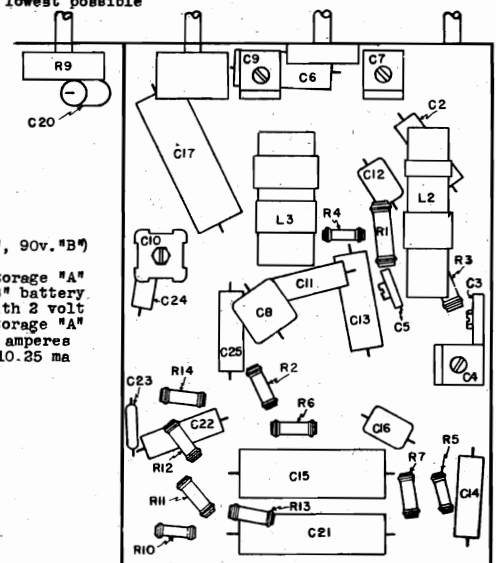

LOCATIONS OF PARTS UNDER CHASSIS


MAY 12, 1939

MODELS 6362, 6363, 6364

Ch. 101.581

Schematic, Voltage, Tuner
Chassis, Socket, Trimmers

SEARS, ROEBUCK & CO.

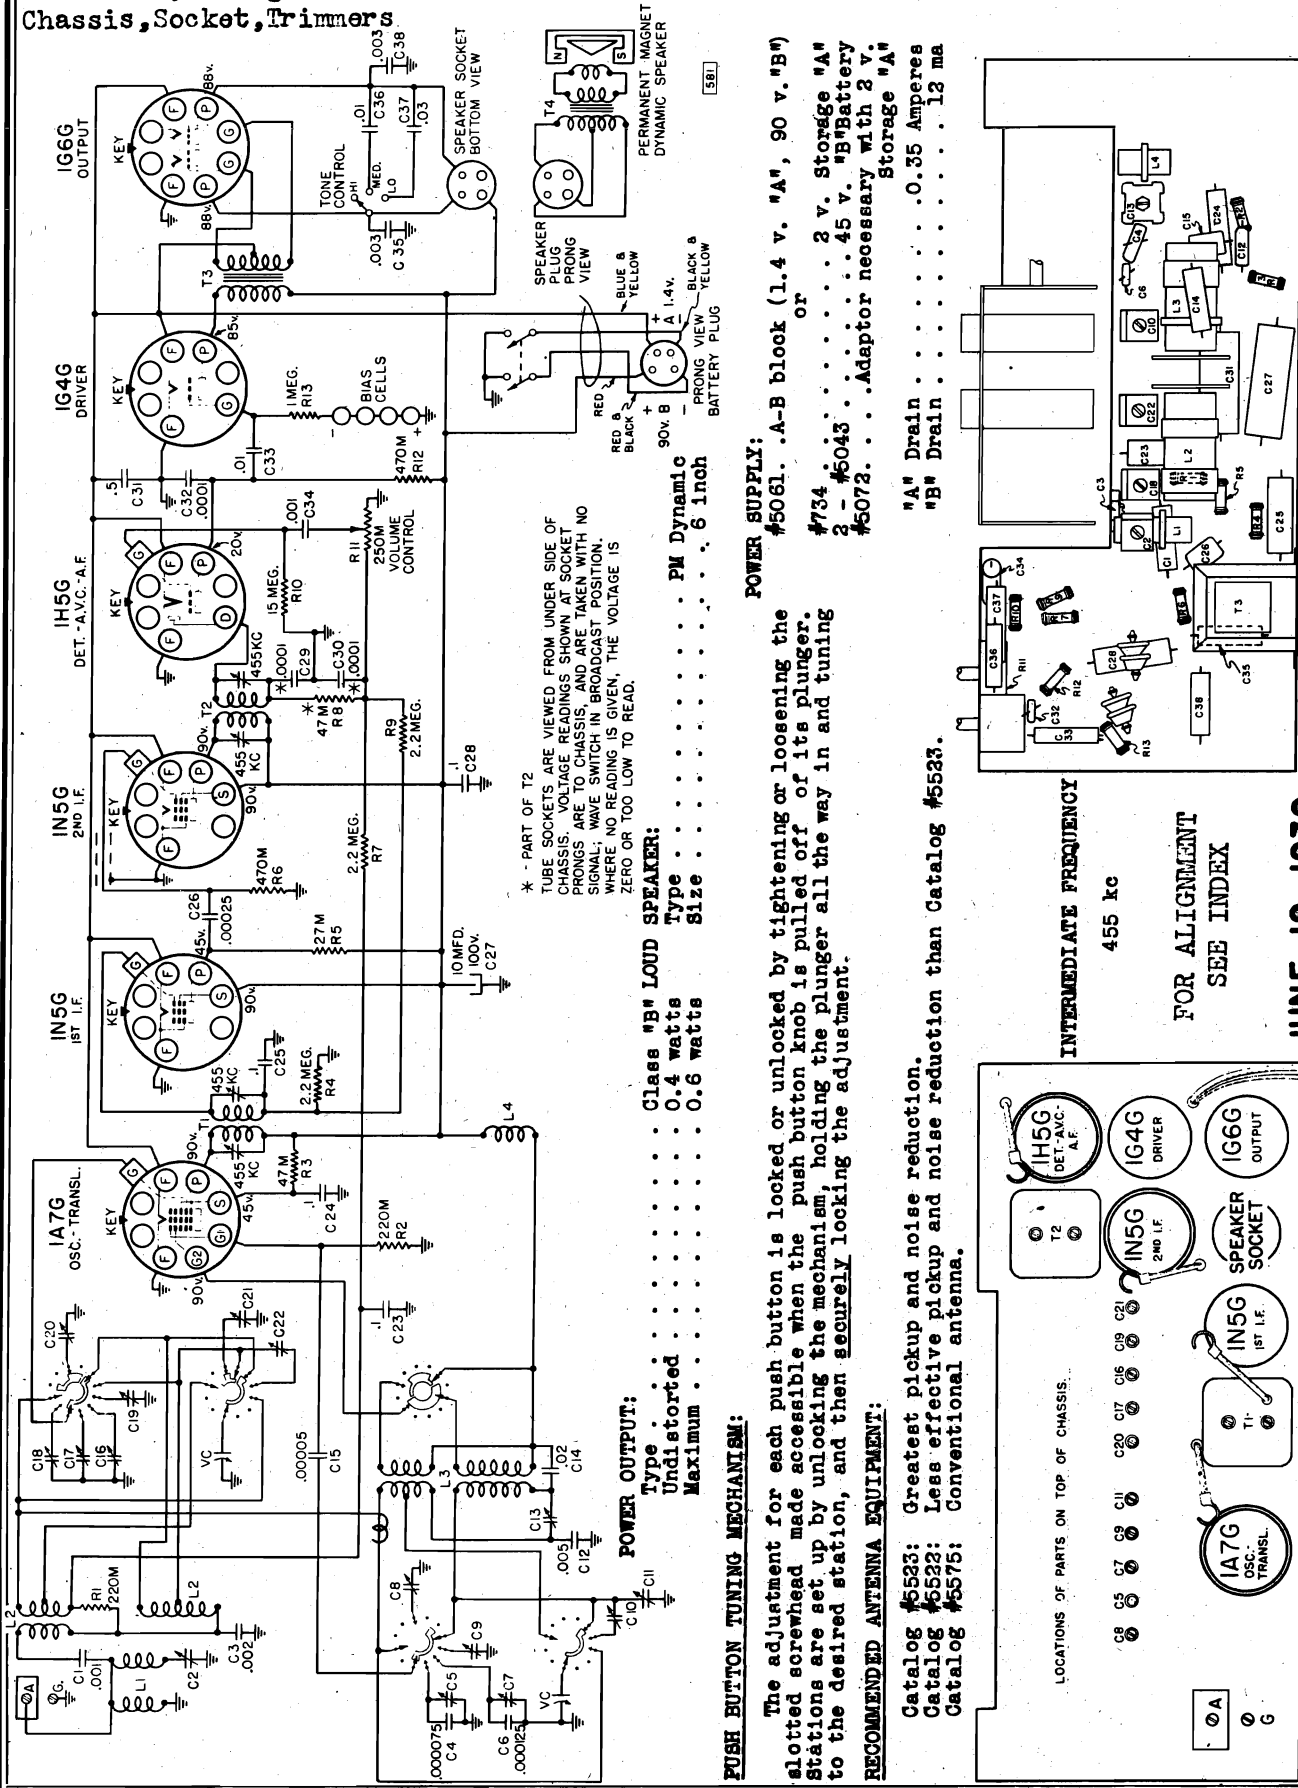

* - PART OF T2
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

POWER OUTPUT:
Type Class "B" LOUD SPEAKER:
Undistorted 0.4 watts
Maximum 0.6 watts

PUSH BUTTON TUNING MECHANISM:



The adjustment for each push button is locked or unlocked by tightening or loosening the slotted screwhead made accessible when the push button knob is pulled off of its plunger. Stations are set up by unlocking the mechanism, holding the plunger all the way in and tuning to the desired station, and then securely locking the adjustment.

RECOMMENDED ANTENNA EQUIPMENT:

- Catalog #5523: Greatest pickup and noise reduction.
- Catalog #5522: Less effective pickup and noise reduction than Catalog #5523.
- Catalog #5575: Conventional antenna.

POWER SUPPLY:

- #5061. .A-B block (1.4 v. "A", 90 v. "B")
- #734. 2 v. Storage "A"
- 2 - #5045.45 v. "B" Battery
- #5072. Adaptor necessary with 2 v. Storage "A"
- "A" Drain 0.35 Amperes
- "B" Drain 13 ma

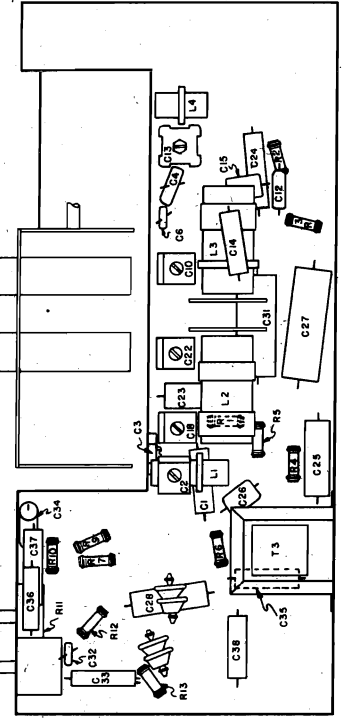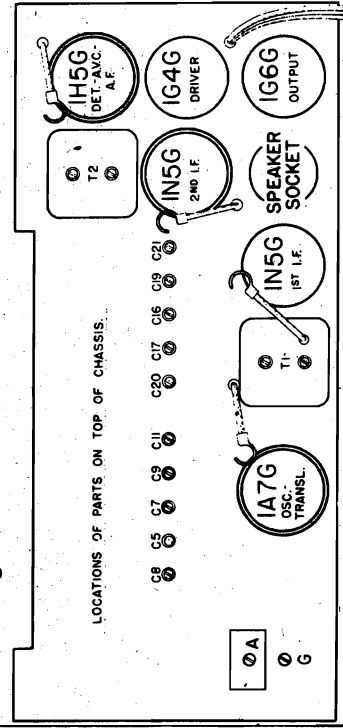


INTERMEDIATE FREQUENCY
455 kc

FOR ALIGNMENT
SEE INDEX

JUNE 19, 1939

SEARS, ROEBUCK & CO. MODELS 6359, 6360, 6361, 6379
 6380, 6381. Ch. 101. 579
 Schematic, Voltage, Chassis
 Socket, Trimmers, Tuner

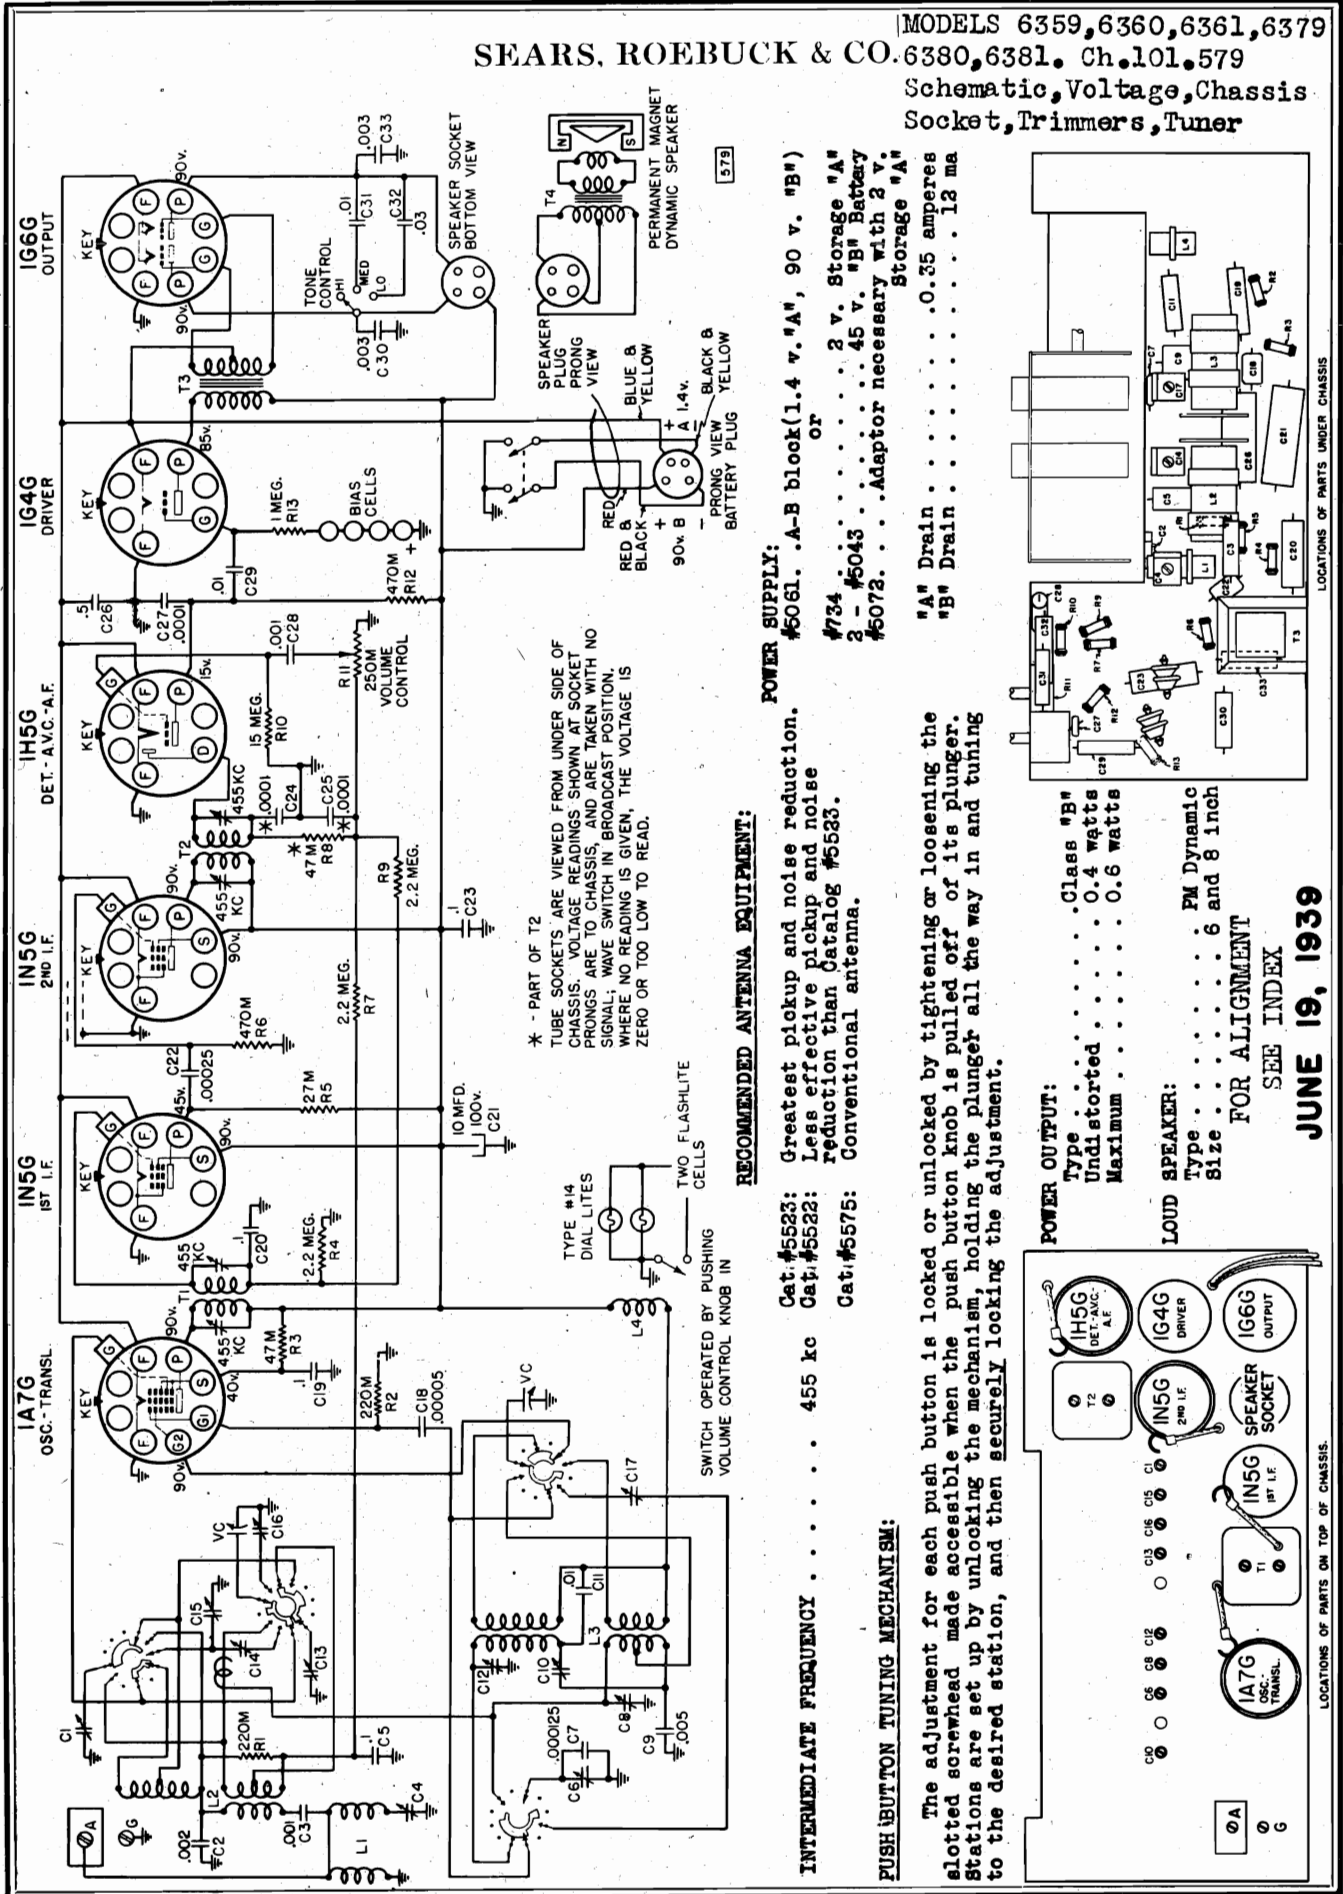

* - PART OF T2
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.



RECOMMENDED ANTENNA EQUIPMENT:

- Cat. #5523: Greatest pickup and noise reduction.
- Cat. #5522: Less effective pickup and noise reduction than Catalog #5523.
- Cat. #5575: Conventional antenna.

PUSH BUTTON TUNING MECHANISM:

The adjustment for each push button is locked or unlocked by tightening or loosening the slotted screwhead made accessible when the push button knob is pulled off of its plunger. Stations are set up by unlocking the mechanism, holding the plunger all the way in and tuning to the desired station, and then securely locking the adjustment.

- POWER SUPPLY:**
- #5061. A-B block (1.4 v. "A", 90 v. "B") or
 - #734 2 v. Storage "A"
 - 2 - #5043 45 v. "B" Battery
 - #5072. Adaptor necessary with 2 v. Storage "A"
- "A" Drain 0.35 amperes
 "B" Drain 13 ma

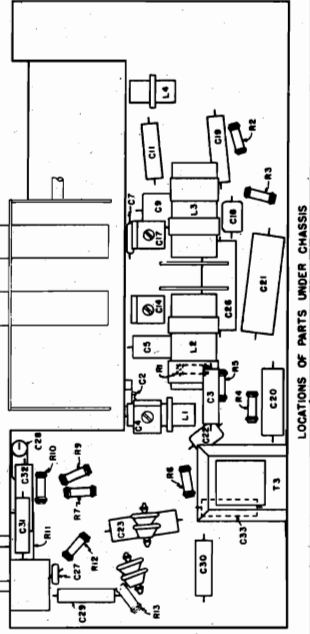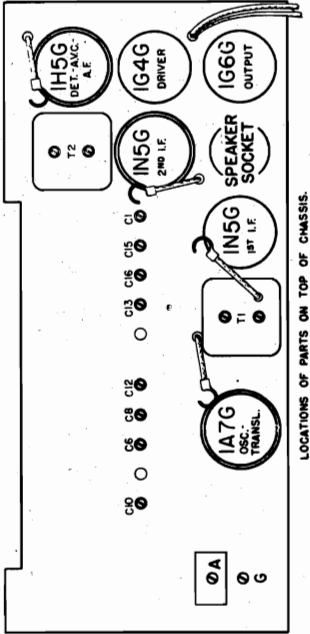

POWER OUTPUT:
 Type Class "B"
 Undistorted 0.4 watts
 Maximum 0.6 watts

LOUD SPEAKER:
 Type PM Dynamic
 Size 6 and 8 inch

FOR ALIGNMENT
 SEE INDEX

JUNE 19, 1939

MODELS See Below
Alignment

SEARS, ROEBUCK & CO.

ALIGNMENT PROCEDURE

PRELIMINARY: For all Models and Chassis listed in the tables below.

Output meter connection Across loud speaker voice coil
Approximate microvolts input for 500 milliwatts output See chart below
Dummy antenna value to be in series with generator output See chart below
Connection of generator output lead See chart below
Generator modulation 30%, 400 cycles
Position of Volume Control Fully clockwise
Position of Tone Control HI
Position of Dial Pointer with variable fully closed At block to left of
550 kc calibration mark 550 kc calibration mark.

MODEL 6441 CHASSIS 101.599

Output meter reading to indicate 500 milliwatts 1.38 volts
Generator ground lead connection To external ground

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"A"	Closed	455 kc	1 mfd.	6K89 Grid	T2, T1	IF	--
"A"	600 kc	455 kc	.0003 mfd.	Ant. Term.	C14	Oscillator	100
"A"	1400 kc	1400 kc	.0003 mfd.	Ant. Clip	C1, C6	Ant. Transl.	35
"A"	800 kc (rook)	800 kc	.0003 mfd.	Ant. Clip	C11	Padder	20
"B"	2.3 mc	2.3 mc	400 ohms	Ant. Term.	C11	Osc. Pad	45
"B"	2.3 mc	2.3 mc	400 ohms	Ant. Term.	C14†	Transl. Pad	45
"C"	18.3 mc	18.3 mc	400 ohms	Ant. Term.	C15†	Oscillator	40
"C"	18.3 mc	18.3 mc	400 ohms	Ant. Term.	C16	Transl.	40
"D"	9.55 mc	9.55 mc	400 ohms	Ant. Term.	C6**, C13	Osc., Transl.	40

MODELS 6439, 6438A, 6439 CHASSIS 101.583; 6438B, 6439A, 6497 CHASSIS 101.583-1
6497 CHASSIS 101598

Output meter reading to indicate 500 milliwatts 1.6 volts
Connection of generator ground lead To chassis

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"A"	Closed	455 kc	1 mfd.	6K89 Grid	T2, T1	IF	--
"A"	Open (790kc)	1400 kc	.0003 mfd.	Ant. Term.	C1, C10†	Oscillator	20
"A"	800 kc (rook)	800 kc	.0003 mfd.	Ant. Term.	C50	Padder	10
"B"	5 mc	5 mc	400 ohms	Ant. Term.	C21, C5	Osc., Transl.	150
"B"	18.3 mc	18.3 mc	400 ohms	Ant. Term.	C14*	Oscillator	75
"C"	9.55 mc	9.55 mc	400 ohms	Ant. Term.	C6	Transl.	50
"D"	11.71 mc	11.71 mc	400 ohms	Ant. Term.	C18*, C7	Osc., Transl.	100

† Repeat the alignment until perfect alignment is obtained. This will require going back and forth in these adjustments several times.

IMPORTANT ALIGNMENT NOTES

- * The generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading instead of the usual maximum reading. If the frequency of an interfering station around 455 kc is known, the generator should be adjusted to the frequency of that station instead of to 455 kc.
- † Repeat the G14 and G15 adjustments until perfect alignment is obtained. This will require going back and forth in these adjustments several times.
- ** If two peaks can be had, the correct one is with the trimmer screw further out; the other peak is the image.
- Where indicated by the word, "Rook", the variable should be rooked back and forth a degree or two while making the adjustment.
- ‡ After the alignment has been completed, the G1 and G10 adjustments should be repeated, using a 1400 kc broadcast signal.

ALIGNMENT PROCEDURE

PRELIMINARY: For all Models and Chassis listed in the tables below.

Output meter connection Across loud speaker voice coil
Approximate microvolts input for 50 milliwatts output See chart below
Generator ground lead connection To chassis
Connection of generator output lead See chart below
Generator modulation 30%, 400 cycles
Position of Volume Control Fully clockwise
Position of Tone Control HI
Position of Dial Pointer with variable fully closed At block to left of
550 kc calibration mark 550 kc calibration mark.

MODELS 6362, 6363, 6364 CHASSIS 101.581

Output meter reading to indicate 50 milliwatts 0.3 volt
Generator ground lead connection To chassis

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"A"	Closed	455 kc	1 mfd.	1A7G Grid	T2, T1	IF	--
"A"	600 kc	455 kc	.0003 mfd.	Ant. Term.	C4*	Wave Trap	55
"A"	1400 kc	1400 kc	.0003 mfd.	Ant. Term.	C13	Oscillator	35
"A"	800 kc (rook)	800 kc	.0003 mfd.	Ant. Term.	C10	Padder	20
"B"	2.3 mc	2.3 mc	400 ohms	Ant. Term.	C17	Osc. Pad	45
"B"	2.3 mc	2.3 mc	400 ohms	Ant. Term.	C14†	Transl. Pad	45
"C"	18.3 mc	18.3 mc	400 ohms	Ant. Term.	C15†	Oscillator	40
"C"	18.3 mc	18.3 mc	400 ohms	Ant. Term.	C16	Transl.	40
"D"	9.55 mc	9.55 mc	400 ohms	Ant. Term.	C6**, C13	Osc., Transl.	40

MODELS 6362, 6363, 6364 CHASSIS 101.581

Output meter reading to indicate 500 milliwatts 1.6 volts
Connection of generator ground lead To chassis

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"A"	Closed	455 kc	1 mfd.	1A7G Grid	T2, T1	IF	--
"A"	600 kc	455 kc	.0003 mfd.	Ant. Term.	C11, C21	Wave Trap	55
"A"	1400 kc	1400 kc	.0003 mfd.	Ant. Term.	C13	Osc. Pad	35
"A"	800 kc (rook)	800 kc	.0003 mfd.	Ant. Term.	C10, C22	Padder	20
"B"	2.3 mc	2.3 mc	400 ohms	Ant. Term.	C17	Osc. Pad	45
"B"	2.3 mc	2.3 mc	400 ohms	Ant. Term.	C18	Transl.	45
"C"	18.3 mc	18.3 mc	400 ohms	Ant. Term.	C19	Oscillator	40
"C"	18.3 mc	18.3 mc	400 ohms	Ant. Term.	C14	Transl.	40
"D"	9.55 mc	9.55 mc	400 ohms	Ant. Term.	C6**, C13	Osc., Transl.	40

MODEL 6368 CHASSIS 101582, MODEL 6362 CHASSIS 101.594

Output meter reading to indicate 500 milliwatts 1.6 volts
Connection of generator ground lead To chassis

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMER (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"A"	Closed	455 kc	1 mfd.	6D89 Grid	T2, T1	IF	--
"A"	600 kc	455 kc	.0003 mfd.	Ant. Term.	C5	Wave Trap	55
"A"	1400 kc	1400 kc	.0003 mfd.	Ant. Term.	C4	Oscillator	35
"A"	800 kc (rook)	800 kc	.0003 mfd.	Ant. Term.	C11	Padder	20
"B"	2.3 mc	2.3 mc	400 ohms	Ant. Term.	C11	Osc. Pad	45
"B"	2.3 mc	2.3 mc	400 ohms	Ant. Term.	C5**	Oscillator	110
"C"	18.3 mc	18.3 mc	400 ohms	Ant. Term.	C6	Transl.	50
"C"	18.3 mc	18.3 mc	400 ohms	Ant. Term.	C7	Oscillator	100
"D"	9.55 mc	9.55 mc	400 ohms	Ant. Term.	C10	Transl.	55

* The generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading instead of the usual maximum reading. If the frequency of an interfering station around 455 kc is known, the generator should be adjusted to the frequency of that station instead of to 455 kc.


† Repeat the G14 and G15 adjustments until perfect alignment is obtained. This will require going back and forth in these adjustments several times.

** If two peaks can be had, the correct one is with the trimmer screw further out; the other peak is the image.

Where indicated by the word, "Rook", the variable should be rooked back and forth a degree or two while making the adjustment.

‡ After the alignment has been completed, the G1 and G10 adjustments should be repeated, using a 1400 kc broadcast signal.

MODELS 6372, 6373
 Chassis 110.991
 Schematic, Voltage
 Socket, Trimmers
 Alignment

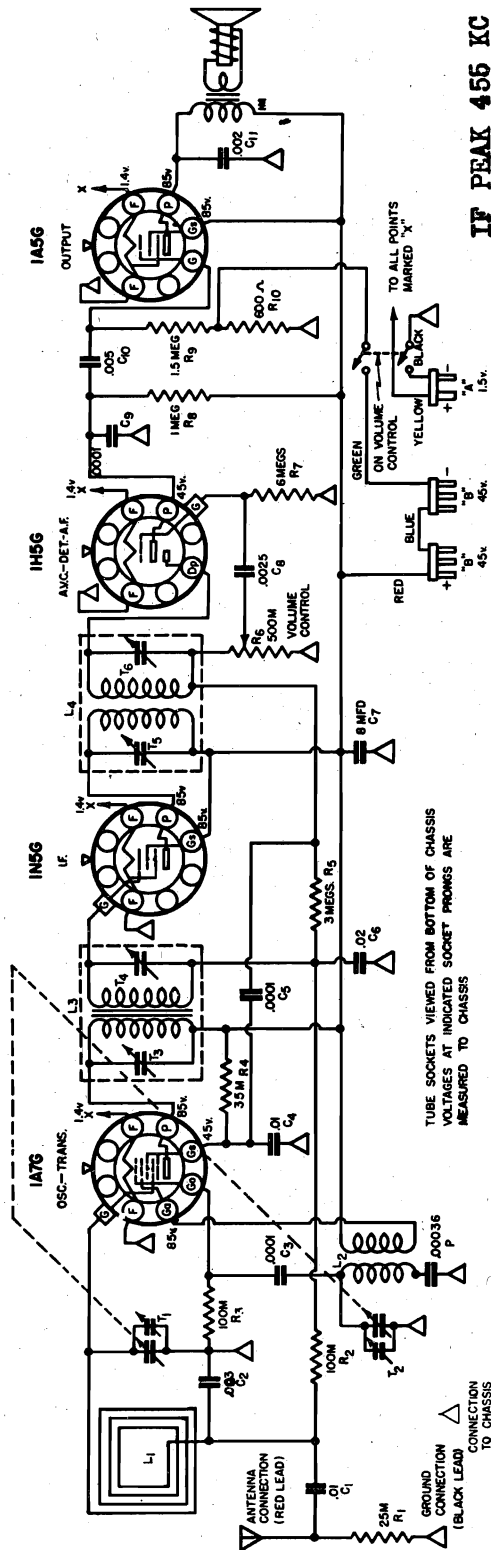

Output meter connections.....Across primary of output transformer
 Generator Ground lead.....To ground
 Connection of generator output lead.....See Chart below
 Generator modulation.....50%, 400 cycles
 Position of Volume Control.....Fully on


POSITION OF VARIABLE	GENERATOR FREQUENCY	GENERATOR CONNECTION	TRIMMER ADJUSTMENTS	TRIMMER FUNCTION
Closed	455 KC	1A7G Grid	T3, T4 T5, T6	I.F.
1500 KC	1500 KC	*	T1, T2	R.F. osc.

The batteries should be in the proper position when aligning the receiver.

* Run a wire from the output terminal of the generator, having it come near the receiver, however, no electrical connection is made between the signal generator and the receiver.

Alignment should be done with no connection made to the external antenna and ground terminals.

Always keep the output power from the generator at its lowest possible value to prevent the AVC of the receiver from interfering with accurate alignment.

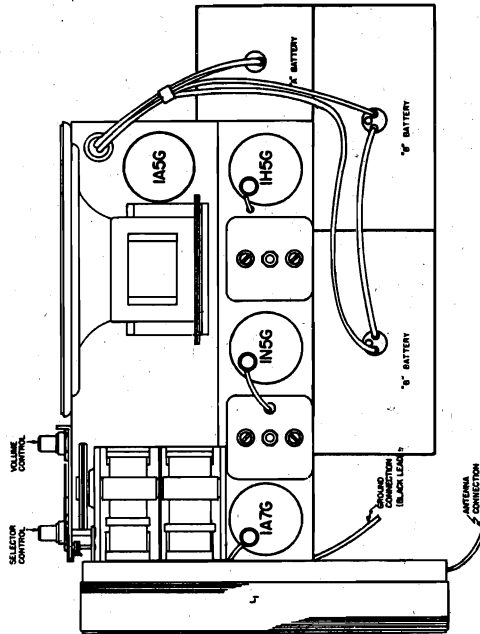

LOUDSPEAKER:

Type.....Dynamic
 Size.....5"
 Field.....P.M.


POWER OUTPUT:

Type.....pentode
 Undistorted.....100 MW
 Maximum.....260 MW

SEARS, ROEBUCK & CO

MODELS 6403, 6404, 6405, 6406
 6492, 6496. Ch. 101.566A to E
 Ch. 101.566-1A to -1E incl.
 Ch. 101.566-2A to -2E incl.
 Schematic, Voltage, Chassis
 Socket, Trimmers

FOR ALIGNMENT SEE INDEX

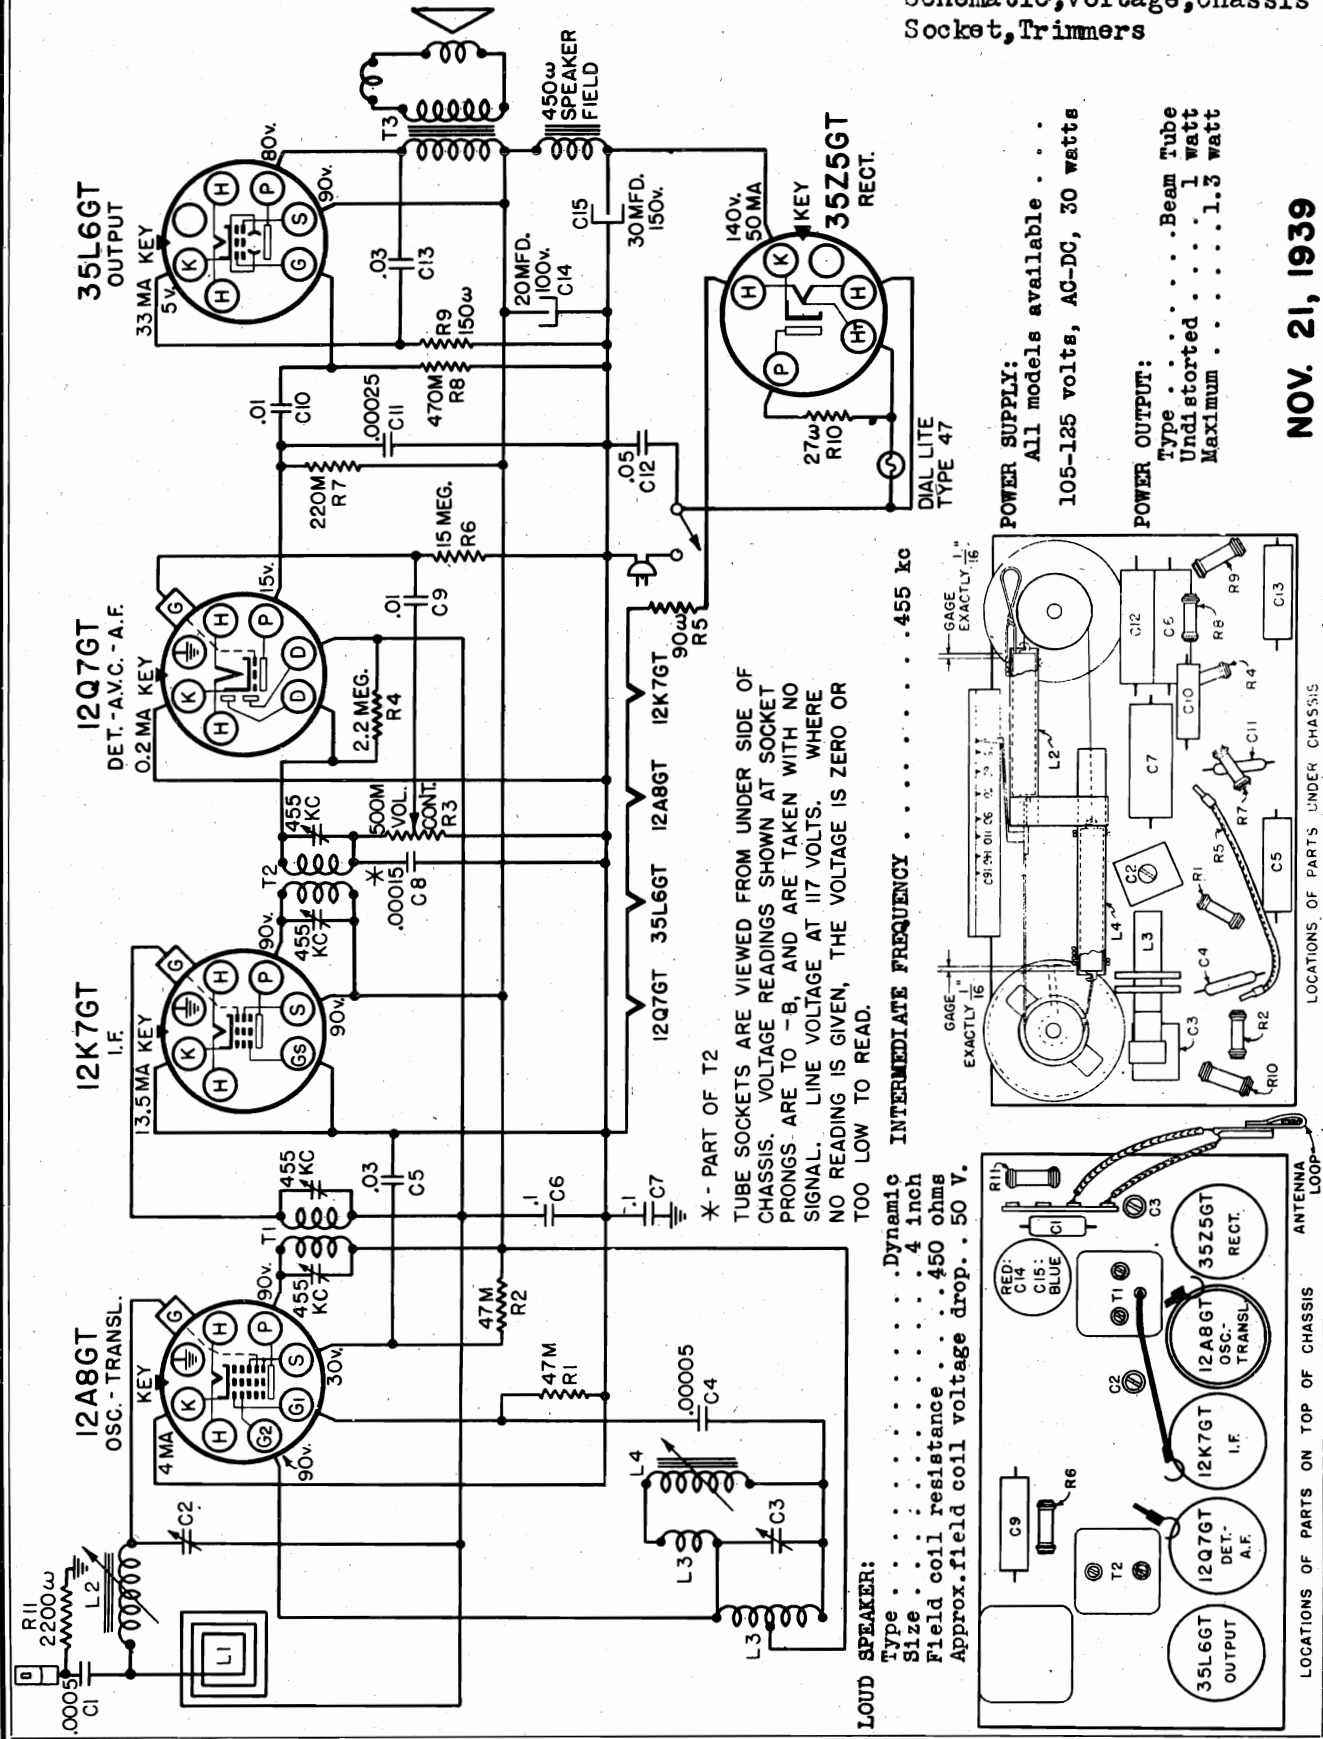

NOV. 21, 1939

**MODELS See Below
Alignment, Notes
MODEL 7230
Notes**

SEARS, ROEBUCK & CO.

GENERAL INFORMATION & SERVICE HINTS

MODELS 6403, 6404, 6405, 6406, 6492, 6496 CHASSIS 101.566 (A, B, C, D, E); 101.566-1, -1A, -1B, -1C, -1D, -1E; 101.566-2, -2A, -2B, -2C, -2D, -2E. --ONLY--

ADDITION OF SUFFIX LETTERS (-A, -B, -C, -D, -E)

Suffix letters have been added to the chassis identification number when the chassis has been used in the various different cabinets.

ADDITION OF SUFFIX NUMBERS -1 AND -2 TO CHASSIS IDENTIFICATION NUMBER:

In order to broaden the selectivity somewhat, chassis identified with the addition of suffix number, -1, have had the connections of the 1st I.F. Transformer reversed so that the blue wire goes to B₂ and the red wire to the 12AS6T plate. Some of these sets also have a 22M ohm resistor in place of the 47M ohm resistor, R₂.

Chassis identified by the addition of suffix number, -2, have a different 1st I.F. Transformer, part number 10135421701, and a different 2nd I.F. Transformer, part number 1012342185, giving a still greater decrease in selectivity. The value of R₂ in these chassis is 22M ohms.

DIAL LIGHT REPLACEMENT:

The dial light can be replaced without removing the chassis from the cabinet by removing the center tube making it possible to pull the dial light socket off of its bracket.

MODELS 6407, 6408, 6409 CHASSIS 101.567 (-A, -B), 101.567-1, (-1A, -1B), 101.567-2 (-2A, -2B) --ONLY--

ADDITION OF SUFFIX LETTERS:

Chassis identified by 101.567 are used in Catalog number 6407, black cabinet. Suffix letter "-A" has been added when the chassis is used in Catalog number 6408, ivory cabinet. Suffix letter "-B" is added when the chassis is used in Catalog number 6409, walnut cabinet.

DIAL LIGHT REPLACEMENT:

The dial light socket is attached to a bracket at the rear of the chassis, held with a single screw.

PUSH BUTTON TUNING:

Each button is set up by loosening the screw (under the call letter "AS"), tuning in the station, depressing the button and then tightening the screw.

NOTE:- THE FOLLOWING INFORMATION APPLIES TO ALL CHASSIS AND MODELS LISTED ABOVE UNDER MODELS 6403, etc. AND MODELS 6407, etc.

THE LOOP ANTENNA:

The loop antenna is directional so that reception may be improved or interference lessened by turning the set to a particular position. In locations where the signal strength is too low to give satisfactory reception from the loop antenna, an outside antenna may be connected to the Fahnestock clip at the end of the lead at the rear of the receiver. **No attempt should be made to use a ground connection.**

REMOVING THE CHASSIS FROM THE CABINET:

In addition to the two screws that hold the back of the chassis there is also a screw that holds the speaker frame to the cabinet.

THE HEATER CIRCUIT:

The heaters of all of the tubes are connected in series. Accordingly, if any one tube burns out, the others will not light. It is necessary to replace only the burnt out tube; the others then will light. The burnt out tube can be located through the fact that the full line voltage will appear across its heater prongs.

POSITION OF POWER CORD PLUG:

On AC, the power cord plug should be tried in both its possible positions in the receptacle and left in the position that gives least hum. On DC, the receiver will work at only one position of the plug in its receptacle.

COIL REPLACEMENT:

No regard need be paid to the colors of paint spots on coils or cores. Coils may be replaced individually; however, cores must be replaced in pairs to secure proper matching and are furnished in pairs for service. To replace a coil, cut away the cement from the old coil and remove the coil. Insert the new coil in the bracket and position it so that, when the tuning knob is turned to its low frequency limit, the core will extend exactly 1/16" beyond the end of the coil winding. A gauge, easily made of a piece of wire as illustrated, should be used for determining this dimension. Similarly, when replacing cores, the coil positions must be checked to see that there is exactly 1/16" overlap of the core beyond the end of the coil winding with the tuning knob at the low frequency limit. This is true for both oscillator and translator cores and coils. New coils can be cemented to the bracket with Major's, Du Pont, or equivalent cement.

ELIMINATING HUM MODULATION WHEN USING AN EXTERNAL ANTENNA:

As shown by the Schematic and by the Location of Parts diagram, there is a 2200 ohm resistor, connected from the external antenna clip to chassis. This resistor prevents hum modulation when using an external antenna. If such hum is experienced, examine the chassis to see if this resistor has been incorporated. (The resistor is mounted alongside of the loop antenna connection board as shown in the Location of Parts diagram. It was not incorporated in early production.) If necessary, addition of the resistor will eliminate the complaint.

ALIGNMENT PROCEDURE

PRELIMINARY:

Output meter connection Across loud speaker voice coil
Output meter to indicate 50 milliwatts 0.56 volt
Dummy antenna value to be in series with generator output See chart below
Connection of generator ground lead To external ground
Position of Volume Control Fully on

POSITION OF DIAL POINTER	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION
550 kc	455 kc	.1 mfd.	12AS6T Grid	T ₂ , T ₁	I.F.
540 kc	540 kc	.0002 mfd.	Ant. Clip	C ₃ *	Oscillator
700 kc; see note A	700 kc	.0002 mfd.	Ant. Clip	C ₂ *	Translator
900 kc; see note B	900 kc	.0002 mfd.	Ant. Clip	C ₂ *	Translator

IMPORTANT ALIGNMENT NOTES:

NOTE A:- Applies only to MODELS 6403, etc as listed above.

NOTE B:- Applies only to MODELS 6407, etc as listed above.

* Adjustment accessible through holes in bottom of cabinet with chassis in cabinet.

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

General Information and Service Hints

MODEL 7230 CHASSIS 126.208

Eliminating Whistle at 910 KC:

A whistle due to a beat between the second harmonic (910 kc) of the 455 kc I.F. and a 910 kc signal may be experienced. In localities where the 910-kc station is one that is frequently listened to, it will be desirable to shift the whistle to some other point where it will not be objectionable. This can be done by shifting the I.F. frequency of the receiver.

Determine at what point between 880 and 940 kc the whistle will be least objectionable. Dividing this frequency by two will give the new I.F. frequency to which the receiver should be aligned. For example, if it is determined that a whistle at 930 kc would not be objectionable, the I.F. should be re-aligned at 930/2 or 465 kc. Try to select the new I.F. frequency as close as possible to 455 kc.

An interfering whistle may also be caused by two stations having a frequency difference equal to the I.F. frequency (455 kc) of the receiver. This will be evidenced by a whistle appearing when the receiver is tuned to either of the stations. It may be further localized by tuning the receiver to each of these stations and then stopping the oscillator, in each case, by grounding the oscillator stator section of the variable tuning condenser C32 (rear section) to chassis. If the whistle, in each case, still persists, it is being caused by the beat between these two stations and may be corrected by shifting the I.F. frequency of the receiver to a frequency other than the difference frequency of the two local or strong signals (stations).

The I.F. amplifier should not be shifted to a frequency higher than 470 kc, nor lower than 440 kc, but should be as close to 455 kc as possible.

Align the I.F. at the new frequency and then re-align the rest of the receiver as described under "ALIGNMENT PROCEDURE."

Loudspeaker:

Centering of the loudspeaker voice-coil is done in the usual manner with three, narrow-paper or celluloid feelers, after first removing the front dust-cover by gently cutting it away. A dust-cover should be cemented back in place upon completion of the adjustment.


Unpacking and Assembly:

Remove the tape which holds the pickup on the pickup rest during shipment. The knobs and turntable parts will be found in a separate package. Assemble the washer, rubber spindle cap, and turntable on the spindle as shown in the diagram. The projections on the washer should fit over the pin in the spindle, and the rubber cap should be pushed down against the washer.

Motor Lubrication:

The phonograph motor should be oiled occasionally by lifting off the turntable and applying a few drops of light machine oil to the spindle.

Before ordering parts for Dial Drive System, check these drawings:

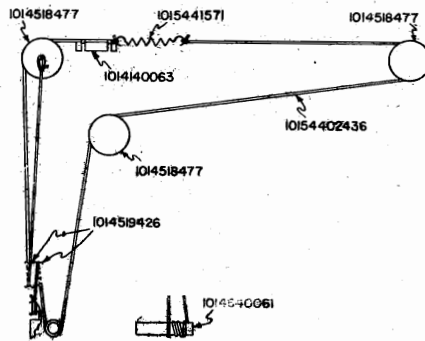


MODEL 6447 CHASSIS 101.590, -1, -2, -3.

SEARS. ROEBUCK & CO.

MODELS 6407, 6408, 6409
 Ch. 101.567, 101.567-A, -B
 101.567-1, -1A, -1B
 101.567-2, -2A, -2B
 Schematic, Voltage, Chassis
 Socket, Trimmers, Drive Cord




FOR ALIGNMENT
 SEE INDEX

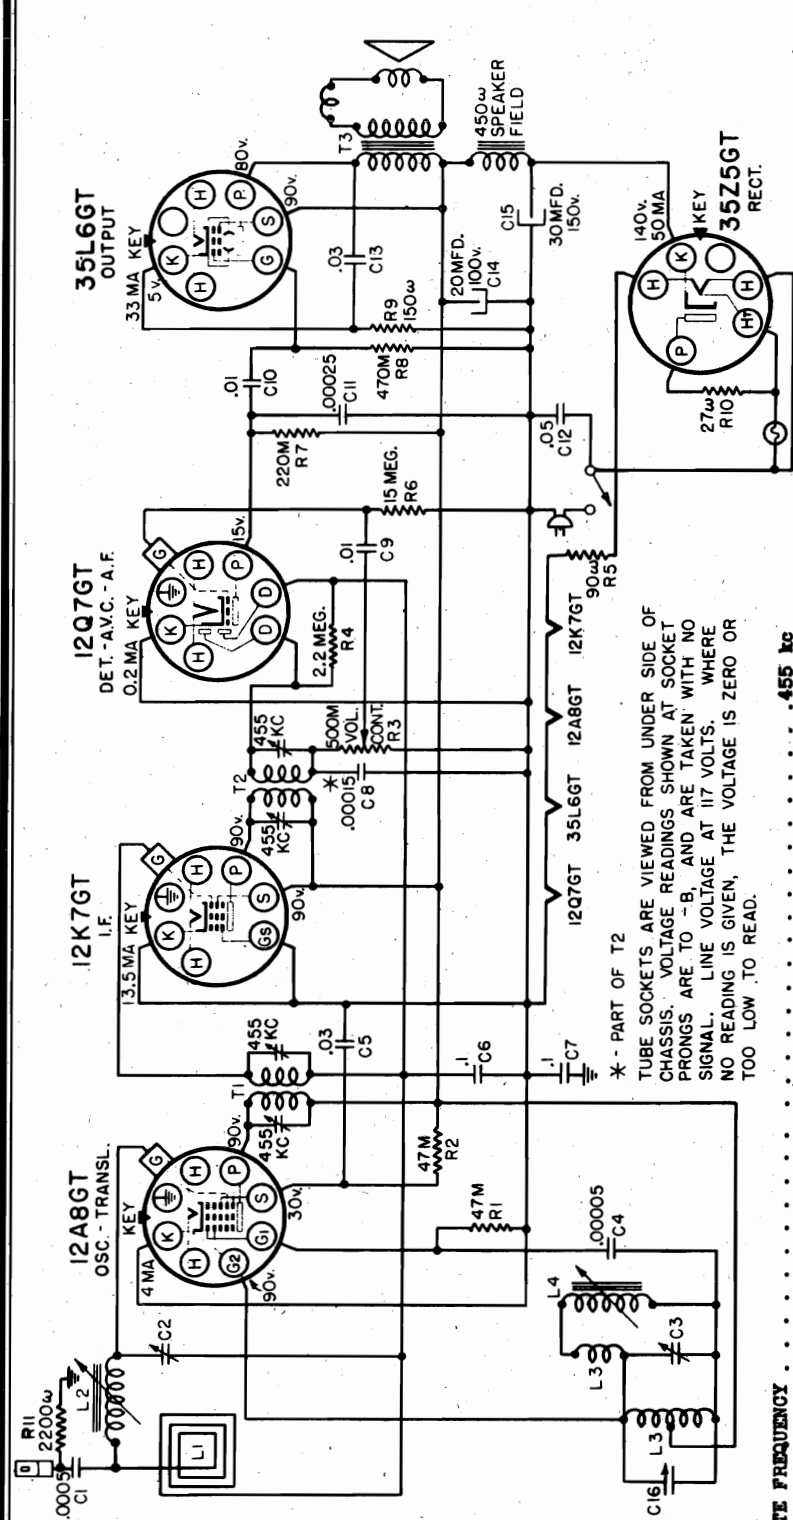

NOV. 21, 1939

* - PART OF T2
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO -B, AND ARE TAKEN WITH NO SIGNAL. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

- INTERMEDIATE FREQUENCY 455 kc
- POWER SUPPLY:
 All models available 105-125 volts, AC-DC, 50 watts
- FREQUENCY RANGE 540-1620 kc
- LOUD SPEAKER:
 Type Dynamic
 Size 4 inch
 Field coil resistance 450 ohms
 Approx. field coil voltage drop 50 V.
- ALIGNMENT FREQUENCIES:
 .05c. - 540 kc
 Transl. - 900 kc
- DYNAMIC POWER OUTPUT:
 Type Beam Tube
 Undistorted 0.8 watts
 Maximum 1.4 watts

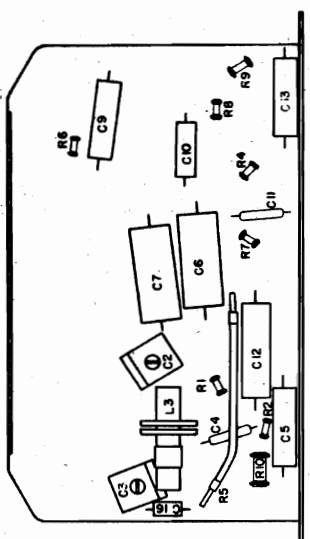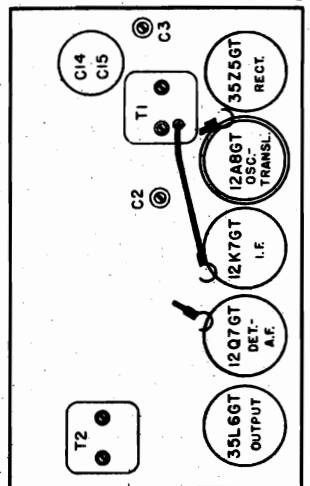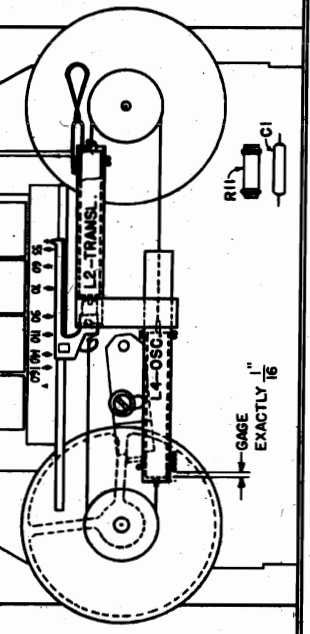

MODELS 6407,6408,6409

Changes to Chassis

SEARS, ROEBUCK & CO.

MODELS 6407A,6408A,6409A

Ch.101.567-3,-3A,-3B

Schematic, Voltage

ADDITION OF SUFFIX NUMBERS -1 AND -2 TO CHASSIS IDENTIFICATION NUMBER:

In order to broaden the selectivity somewhat, chassis identified with the addition of suffix number, -1, have had the connections of the 1st I.F. Transformer reversed so that the blue wire goes to B+ and the red wire to the 12A8GT plate. This decrease in selectivity improves the repeat accuracy of the push button setting. Some of these sets also have a 33M ohm resistor in place of the 47M ohm resistor, R2.



Chassis identified by the addition of suffix number, -3, have a different 1st I.F. Transformer, part number 10133421701, and a different 2nd I.F. Transformer, part number 1013342171, giving a still greater decrease in selectivity and a still further improvement in repeat accuracy of the push button settings. The value of R2 in these chassis is 33M ohms.

SUBJECT: ADDITION OF SUFFIX NUMBER -3 TO CHASSIS IDENTIFICATION NUMBER:

Chassis identified by the addition of suffix number 3 (plus any suffix letter) to the identification number use a 12SK7GT IF tube instead of a 12K7GT. In addition, the positions of the 12Q7GT Detector and 35L6GT Output tubes have been interchanged. The revised Wiring Diagram and Tube Layout are shown in this supplement.

Changes in the parts are as follows:

- Loop antenna changed to 1012842410; retail price 48¢.
- Electrolytic condenser changed to 1012042405; retail price 59¢.
- IF Input Transformer changed to 1013342406; retail price 60¢.
- IF Output Transformer changed to 1013542476; retail price 60¢
- 1M ohm 1/3 watt Resistor, R13, added; retail price 15¢.
- .03 mfd., 200 volt Condenser, C18, added; retail price 7¢.

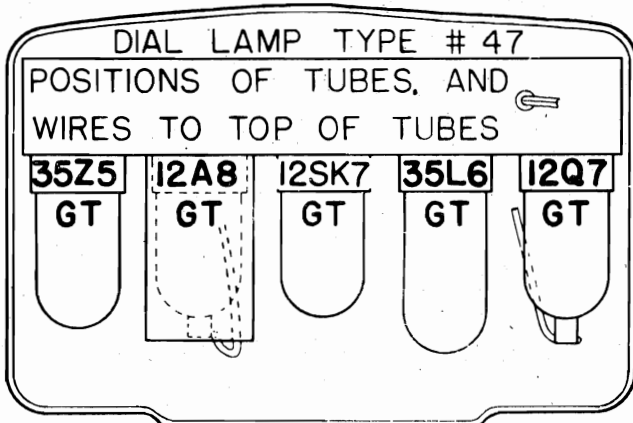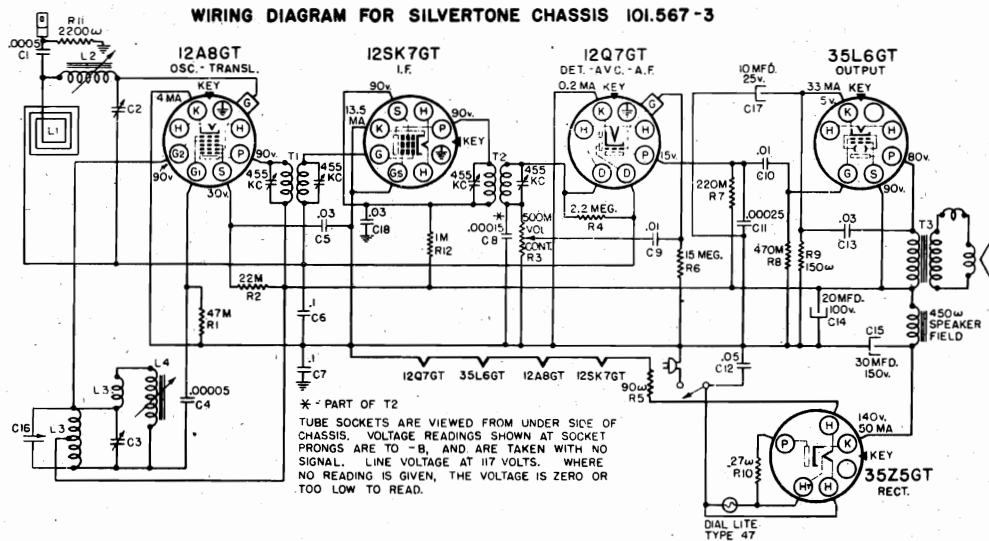

FOR ALIGNMENT
SEE INDEX

FEB. 13, 1940

MODELS 6438B, 6439A, 6440


Chassis 101.583-2

Schematic, Voltage, Chassis

Notes

SEARS, ROEBUCK & CO.

FOR ALIGNMENT
SEE INDEX

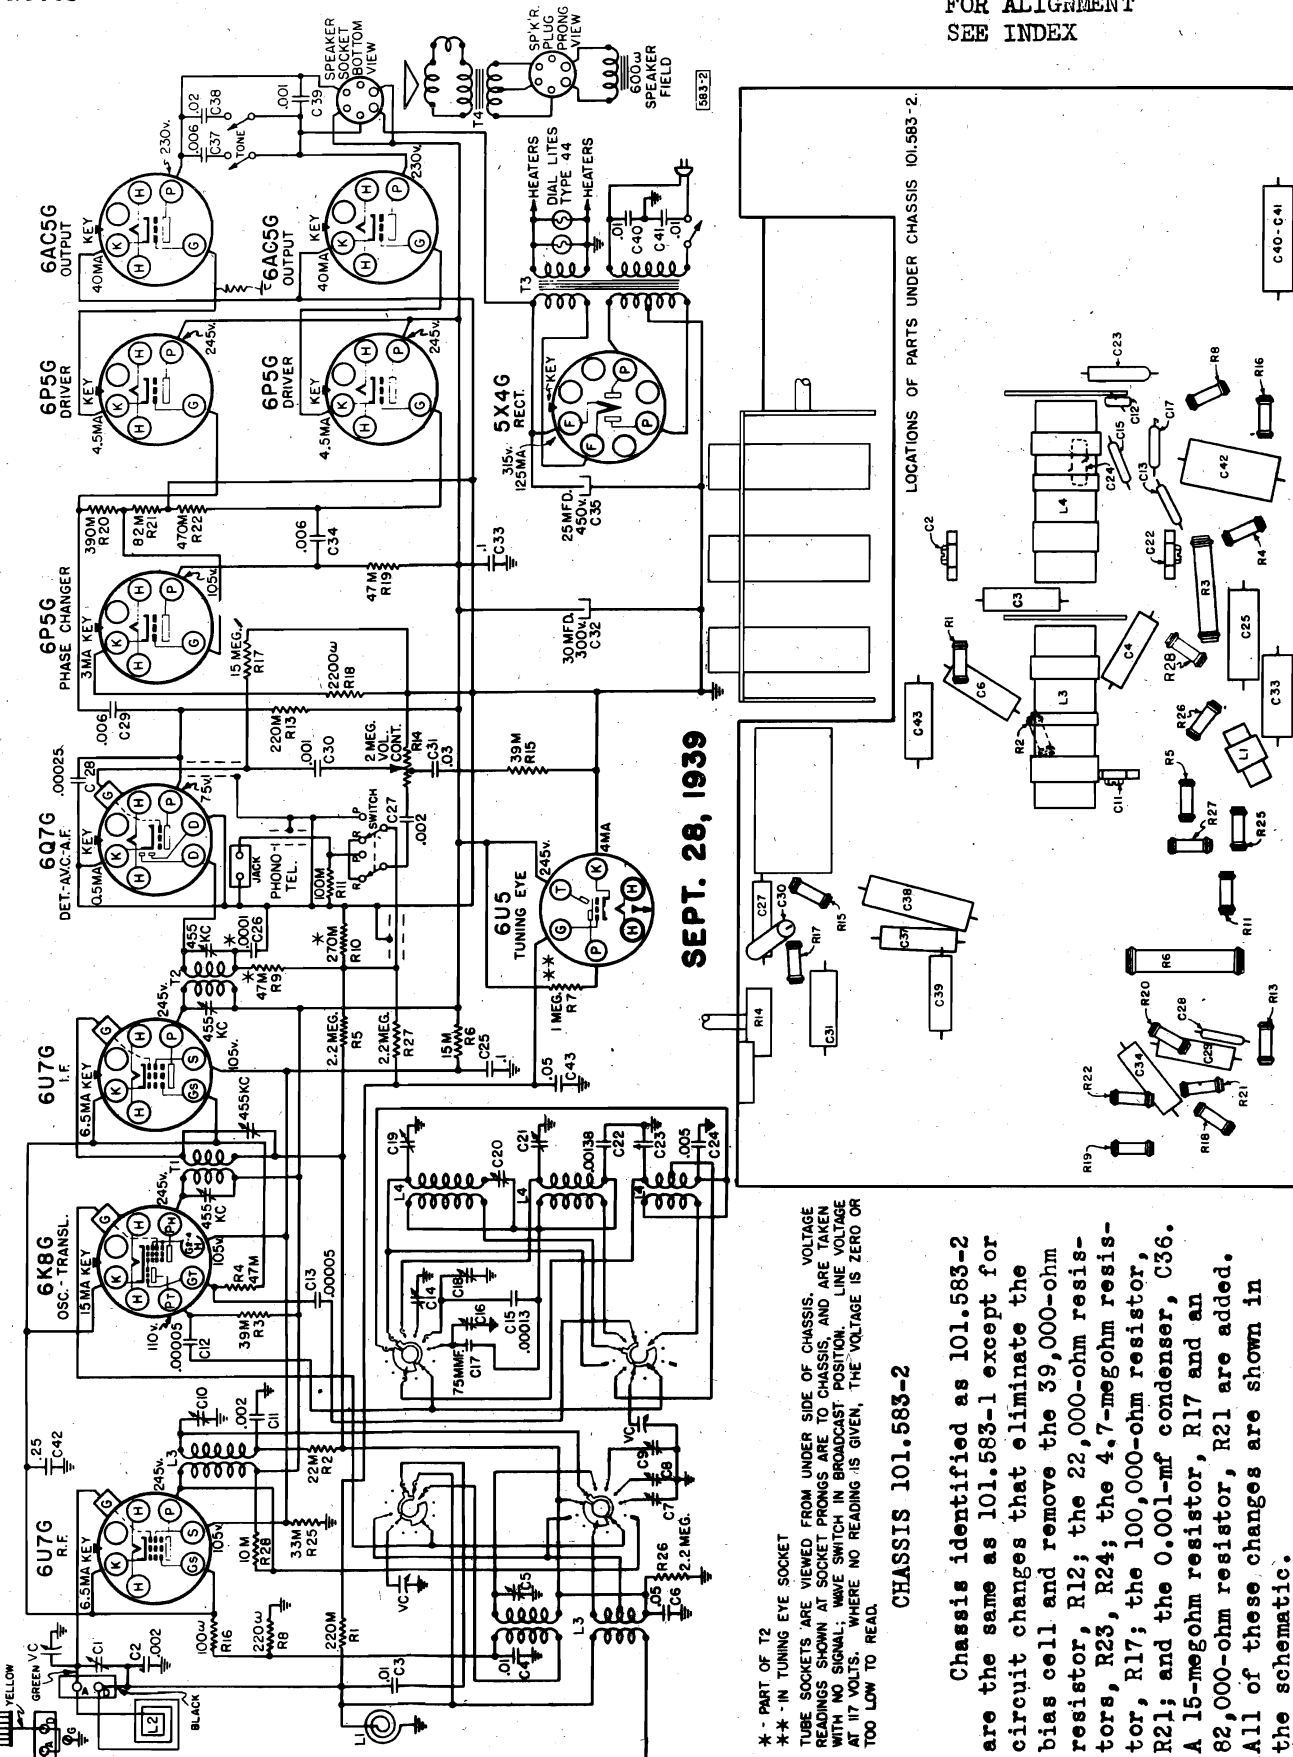

SEPT. 28, 1939

LOCATIONS OF PARTS UNDER CHASSIS 101.583-2.

* - PART OF T2
 ** - IN TUNING EYE SOCKET
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.


CHASSIS 101.583-2

Chassis identified as 101.583-2 are the same as 101.583-1 except for circuit changes that eliminate the bias cell and remove the 39,000-ohm resistor, R12; the 22,000-ohm resistors, R23, R24; the 4.7-megohm resistor, R17; the 100,000-ohm resistor, R21; and the 0.001-mf condenser, C36. A 15-megohm resistor, R17 and an 82,000-ohm resistor, R21 are added. All of these changes are shown in the schematic.


Schematic, Voltage, Chassis
Socket, Trimmers, Alignment
Notes

SEARS, ROEBUCK & CO.


MODELS 6400, 6401, 6402
Ch. 101.565, 101.565-A, -B
MODELS 6400A, 6401A, 6402A
Ch. 101.593, 101.593-A, -B

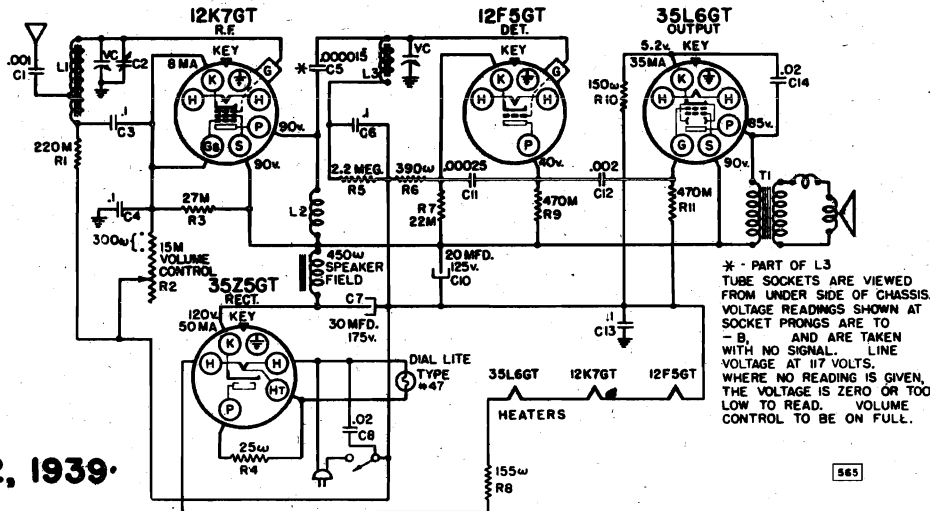

SEPT. 22, 1939

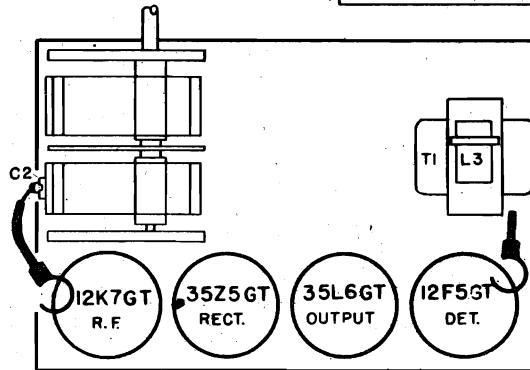

LOCATIONS OF PARTS ON TOP OF CHASSIS

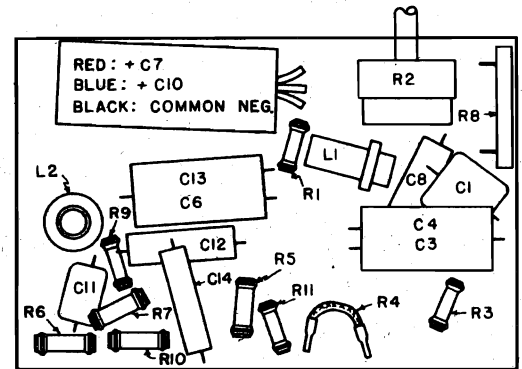

LOCATIONS OF PARTS UNDER CHASSIS

POWER SUPPLY:

All models available 105-125 volts; AC-DC, 30 Watts

POWER OUTPUT:

Type Beam Tube
Undistorted 0.65 watts
Maximum 0.85 watts

LOUD SPEAKER:

Type Dynamic
Size 3-1/2 inch
Field coil resistance . . . 450 ohms
Field coil voltage drop . . 30 volts

ALIGNMENT PROCEDURE

Either a broadcast signal of about 1400 kc or a test oscillator signal may be used. If a broadcast signal is used, the antenna of the receiver should be extended as in a normal installation. If a test oscillator signal is used, a wire should be connected to the test oscillator output and run parallel to but insulated from the receiver's antenna wire.

Tune in the 1400 kc signal and adjust the trimmer of the variable for maximum loud speaker response. This can be done most accurately if the volume control setting is reduced to give low volume level. The variable should be rocked a degree or two during the adjustment.

SUFFIX LETTERS "A" & "B"

101.565 chassis is used in the black cabinet, Catalog #6400. Suffix letter "A" is added to the chassis identification, making it 101.565-A, for the ivory cabinet, Catalog #6401. Suffix letter "B" is added, making the chassis identification 101.565-B, for the walnut cabinet, Catalog #6402.

Chassis 101.593, -A, -B is exactly the same as 101.565, -A, -B described in RL 207, except that it uses a speaker having a higher inductance field to give more satisfactory operation on 25 cycle AC. The field coil resistance is 550 ohms instead of 450 ohms as in the 101.565 speaker.

REDUCING 25 CYCLE DIAL LIGHT FLICKER:

Objectionable 25 cycle flicker of the dial light can be eliminated, at some sacrifice in illumination, by changing the connection of the 25 ohm resistor, R4, to the other side of the dial light socket lead: i.e., change the R4 connection from prong #3 of the 35Z5GT tube to prong #2.

SEARS. ROEBUCK & CO. MODEL 6447, Ch. 101.590,
101.590-1 to 101.590-5
Schematics, Voltage, Notes

ADDITION OF SUFFIX NUMBERS:

Chassis 101.590-1 is the same as 101.590 except that it uses a different tone arm and pickup cartridge, not interchangeable with the ones used in 101.590. Accordingly, when ordering either a tone arm or a pickup cartridge, be sure the proper part number is used and the correct chassis number indicated in the order. 101.590,-1 use a two position tone control.

101.590-2 is the same as 101.590 except for changes in the antenna circuit, including the addition of an I.F. wave trap. A continuously variable tone control is used.

101.590-3 is the same as 101.590-2 except that it uses the same tone arm and pickup that are used in 101.590-1.

POWER SUPPLY:

- All models available 105-125 volts, 60 cycle, AC; 75 watts
- All models available 105-125 volts, 50 cycle, AC; 80 watts
- All models available 105-135 volts, 25 cycle, AC; 90 watts



INTERMEDIATE FREQUENCY 455 kc

POWER OUTPUT:

- Type Direct coupled
- Undistorted 3-1/2 watts
- Maximum 4 watts

LOUD SPEAKER:


- Type Dynamic
- Size 10 inch
- Approx. field coil resistance . . 730 Ohms
- Approx. field coil voltage drop . . 50 v.

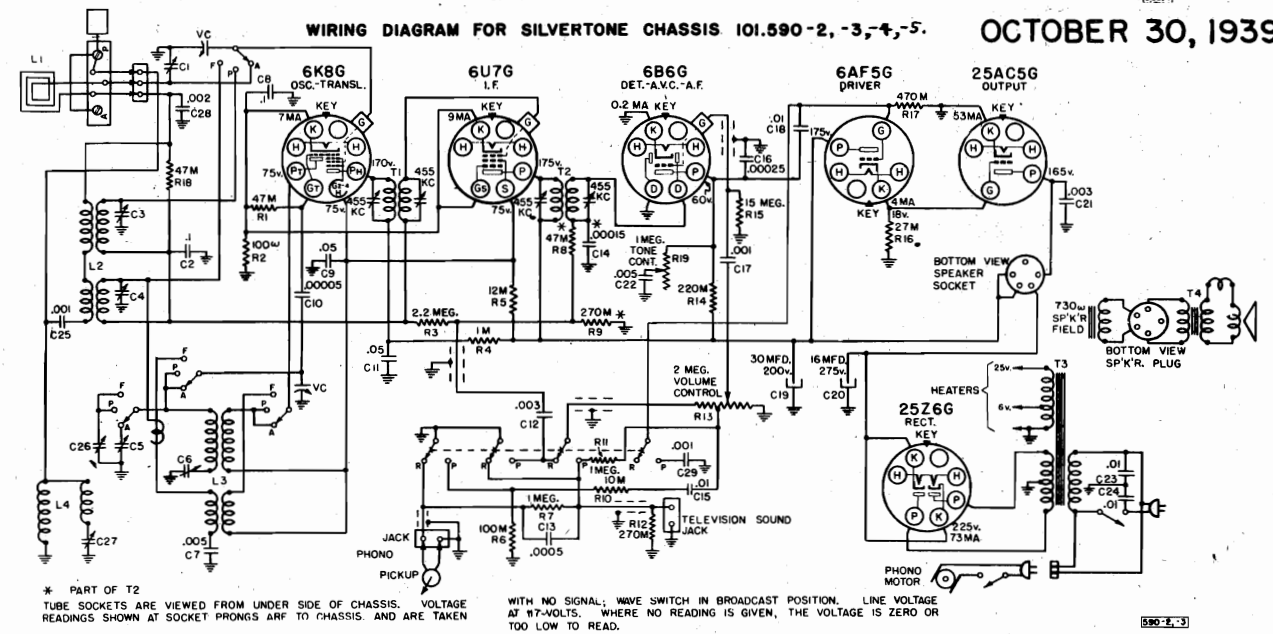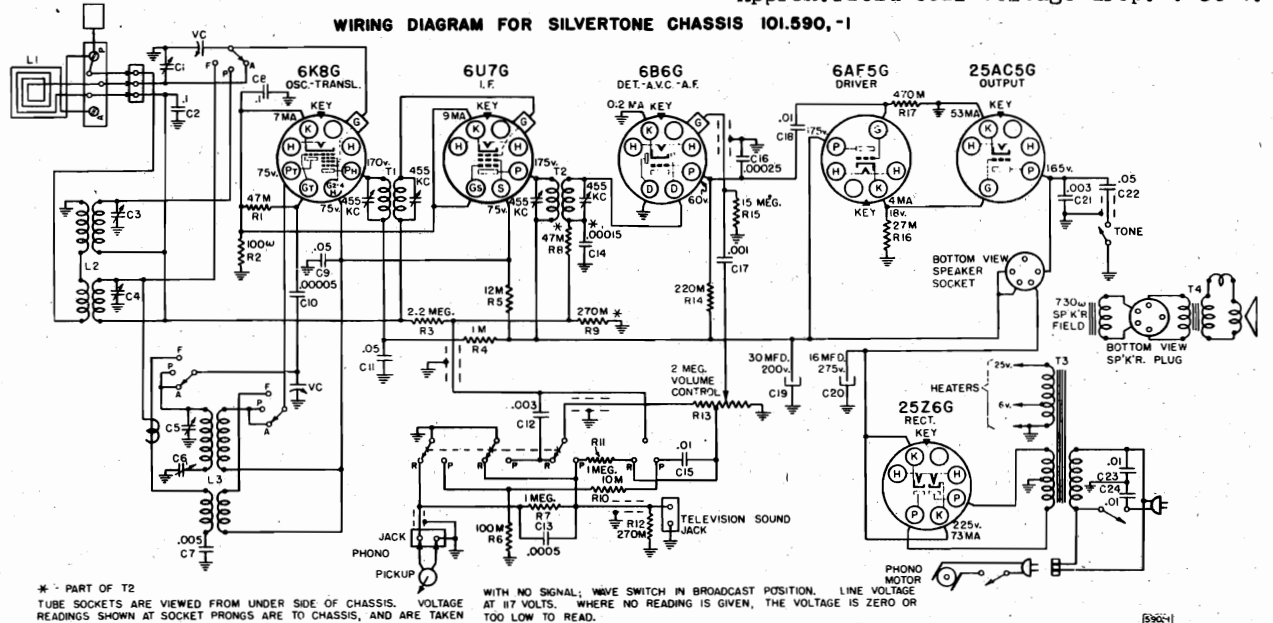


MODEL 6447

Chassis, Socket, Trimmers
Alignment, Tuner

SEARS, ROEBUCK & CO.

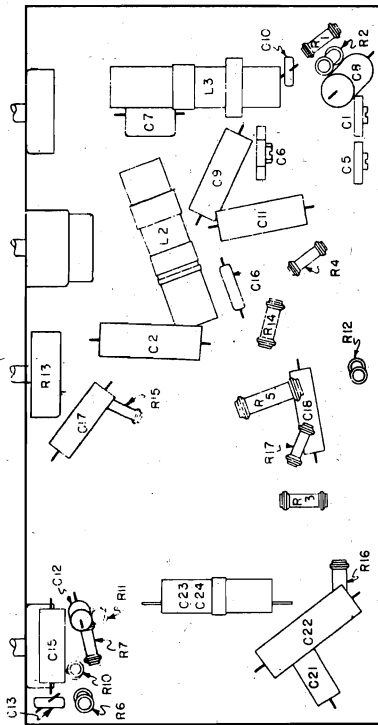

LOCATIONS OF PARTS UNDER CHASSIS 101.590, -1

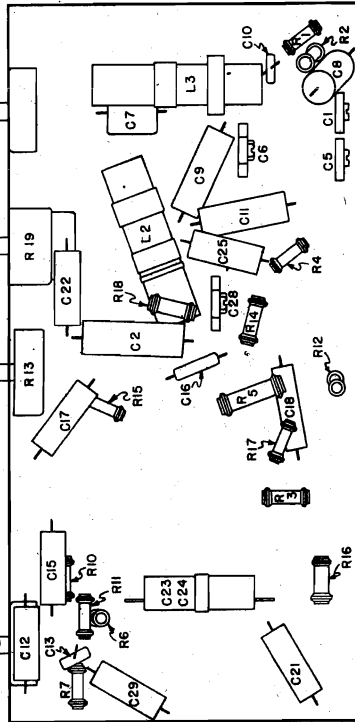

LOCATIONS OF PARTS UNDER CHASSIS 101.590-2, -3, -4, -5.

PUSH BUTTON TUNING MECHANISM:

The adjustment for each push button is locked or unlocked by tightening or loosening the slotted screwhead made accessible when the push button knob is pulled off of its plunger. Stations are set up by unlocking the mechanism, tuning in the station, pushing in the plunger (being careful not to detune the station), releasing the plunger, then securely locking the adjustment by holding the screwdriver lightly in the screw head allowing the spring tension to hold the plunger against the screwdriver.

RECOMMENDED ANTENNA EQUIPMENT:

- Catalog #5523: Greatest pickup and noise reduction.
- Catalog #5522: Less effective pickup and noise reduction than Catalog #5523.
- Catalog #5575: Conventional antenna.

ALIGNMENT PROCEDURE

PRELIMINARY:

Output meter connection Across loud speaker voice coil
 Output meter reading to indicate 500 milliwatts 0.8 volts
 Approximate microvolts input to indicate 500-milliwatts output See chart below
 Connection of generator ground lead Receiver chassis
 Generator modulation 304, 400 cycles
 Position of Volume Control Fully clockwise
 Position of Tone Control Treble (HI)
 Position of Dial Pointer with variable fully closed On mark below 550 kc
 calibration mark.

WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA CONNECTION	GENERATOR CONNECTION	ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"AM"	Closed	455 kc	.1 mfd.	6K8G Grid	T2, T1	IF	--
"AM"	600 kc	455 kc	.0003 mfd. Ant. Clip	C27*	C27*	Wave Trap	--
"AM"	Fully open	1650 kc	.0003 mfd. Ant. Clip	C5	C5	Oscillator	235
"AM"	Fully open	1550 kc	.0003 mfd. Ant. Clip	C25	C25	Oscillator	235
"AM"	1400 kc	1400 kc	.0003 mfd. Ant. Clip	C1	C1	Translator	35
"AM"	600 kc(rock)	600 kc	.0003 mfd. Ant. Clip	C6	C6	Padder	100
"POL"	Fully open	2.55 mc	400 ohms Ant. Clip	C26***	C26***	Oscillator	135
"POL"	2.4 mc	2.4 mc	400 ohms Ant. Clip	C3	C3	Translator	135
"FOR"	.16 mc(rock)	16 mc	400 ohms Ant. Clip	C4	C4	Translator	45

IMPORTANT ALIGNMENT NOTES


* In 101.590-2, -3 only. The generator should be adjusted for high output. The trimmer should be adjusted for minimum output meter reading instead of the usual maximum reading. If the frequency of an interfering station around 455 kc is known, the generator should be adjusted to the frequency of that station instead of to 455 kc.

** 101.590, -1 only. *** 101.590-2, -3 only.

Where indicated by the word, "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVC action of the receiver ineffective.

After the alignment has been completed, the CI adjustment should be repeated on a broadcast signal of about 1400 kc with no external antenna connected to the antenna terminal.

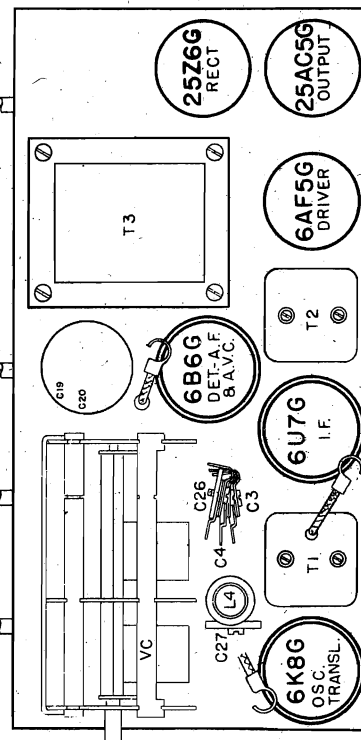

LOCATIONS OF PARTS ON TOP OF CHASSIS 101.590-2, -3, -1*


NOTE: L4, C26 and C27 shown above, are not used on Chassis 101.590-1

YELLOW
GREEN
BLACK

MODELS 6438B, 6439A, 6497
Ch. 101.583-1
Schematic

SEARS, ROEBUCK & CO.



MODEL 6497, Ch. 101.595
Schematic, Voltage, Chassis
Socket, Trimmers

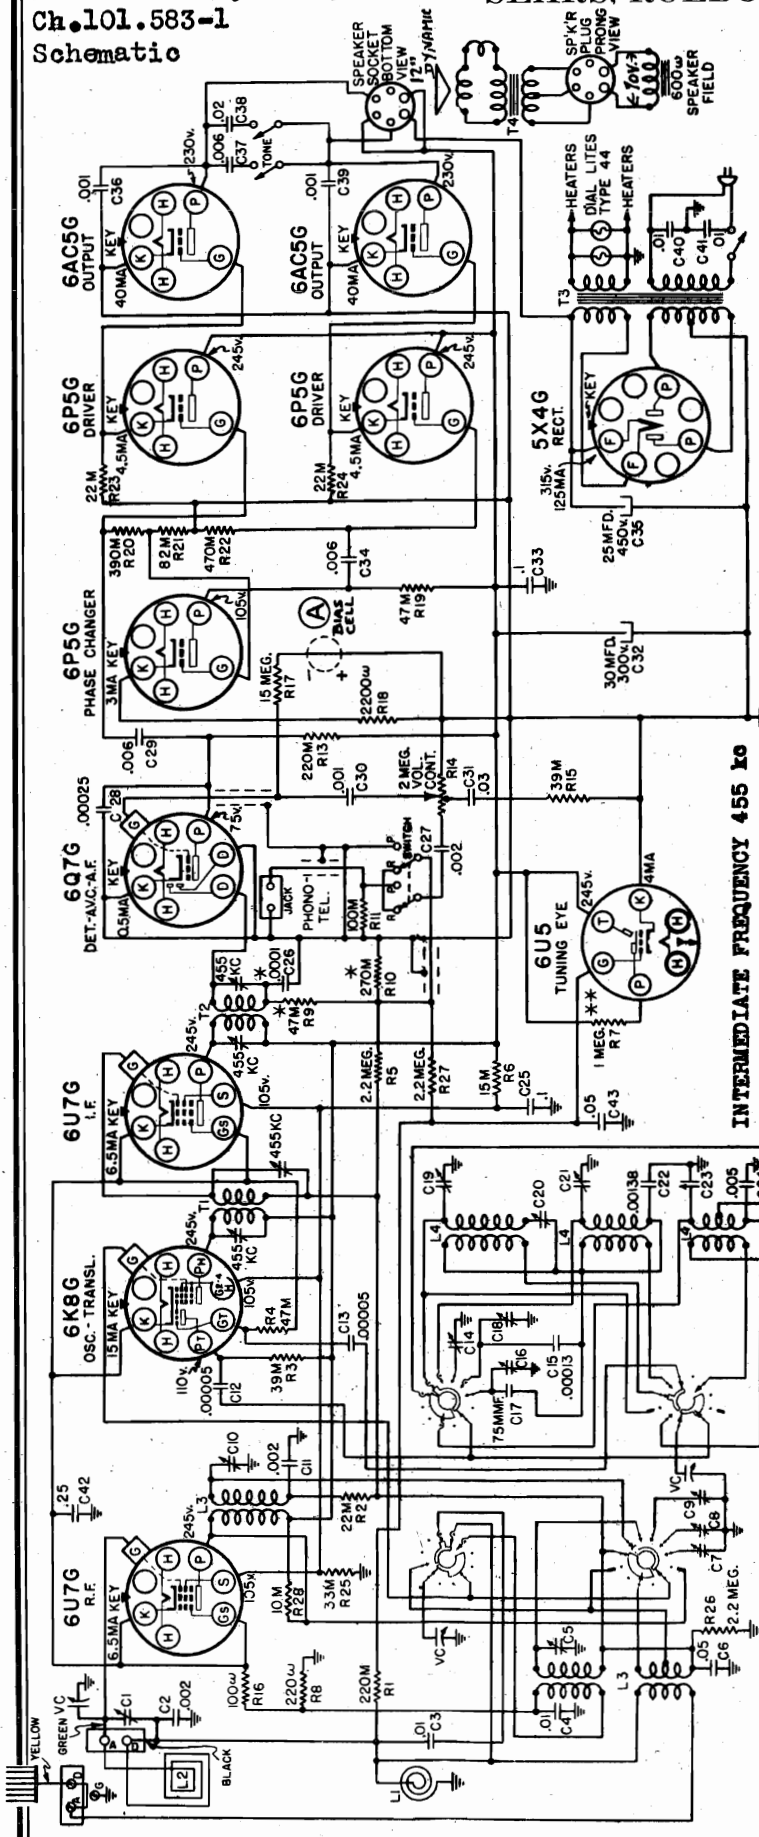

POWER OUTPUT:
Type Push-pull direct coupling
Undistorted 6 watts
Maximum 10 watts

INTERMEDIATE FREQUENCY 455 kc
Schematic for Chassis 101.583-1 is the same as above except that a bias cell is added at A and R17=4.7 MEG, R21=100,000 ohms.


FOR ALIGNMENT SEE INDEX
* - PART OF T2
** - IN TUNING EYE SOCKET
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST POSITION. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

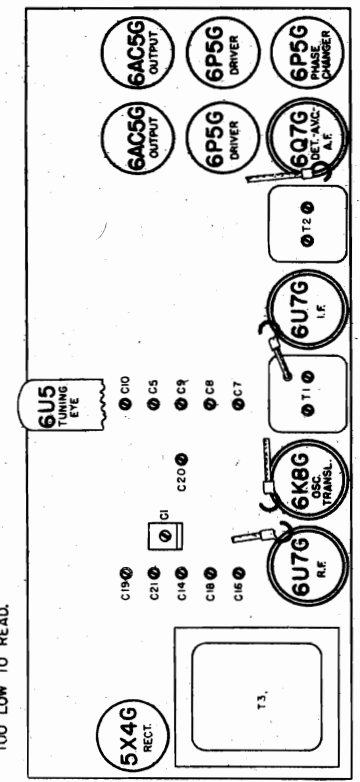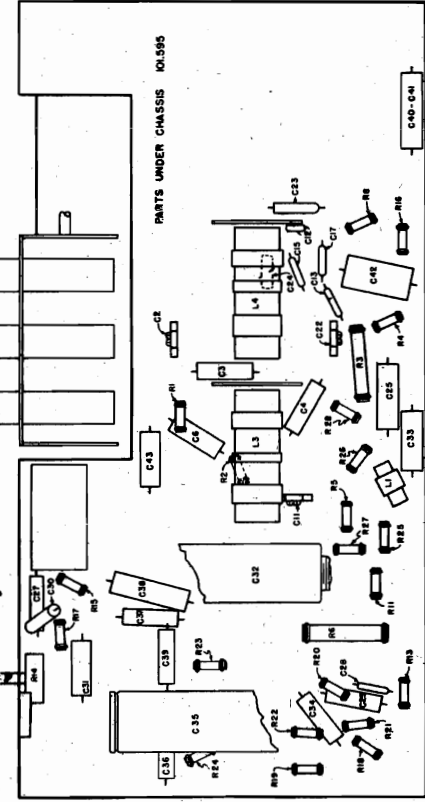

POWER SUPPLY:
All models available 105-125 volts, 50-60 cycles; 105 watts
All models available 105-125 volts, 25-60 cycles; 110 watts

MODEL 7219, Ch. 110.7219
Schematic, Socket, Tuner
Trimmers

SEARS, ROEBUCK & CO.

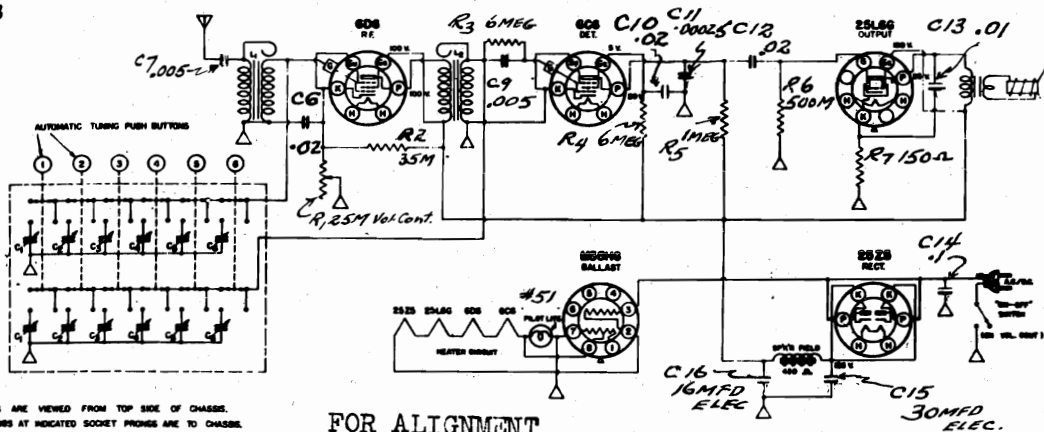

TUBE SOCKETS ARE VIEWED FROM TOP SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. WHERE NO VOLTAGE READING IS SHOWN AT SOCKET PRONG, IT INDICATES A VERY LOW READING. VOLTAGE MEASUREMENTS TAKEN WITH 1000 OHMS PER VOLT METER AND VOLUME CONTROL ON FULL.

FOR ALIGNMENT
SEE INDEX

TUNING RANGE	CAPACITY RANGE
BUTTON NO.1-540-800KC.	C ₁ - 80-400 MMF.
BUTTON NO.2-800-1000KC.	C ₂ - 100-500 MMF.
BUTTON NO.3-600-1000KC.	C ₃ - 100-500 MMF.
BUTTON NO.4-700-1000KC.	C ₄ - 60-300 MMF.
BUTTON NO.5-700-1000KC.	C ₅ - 80-300 MMF.
BUTTON NO.6-900-1000KC.	C ₆ - 30-140 MMF.

LOUD SPEAKER:

Type.....Dynamic
Size.....5"
Field Resistance..... 450 Ohms

POWER OUTPUT:

Type.....Beam Power
Undistorted.....1.25 watts
Maximum.....1.75 watts



APRIL 26, 1939

POWER SUPPLY

All models available.D.C.
or 105-125 volts, 50-60 cycle A.C. 40 watts

FREQUENCY RANGE:

Broadcast540-1600 KC

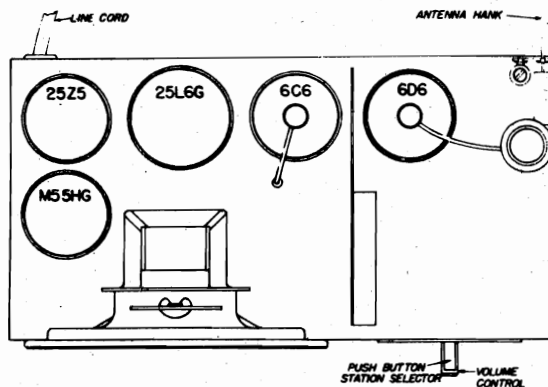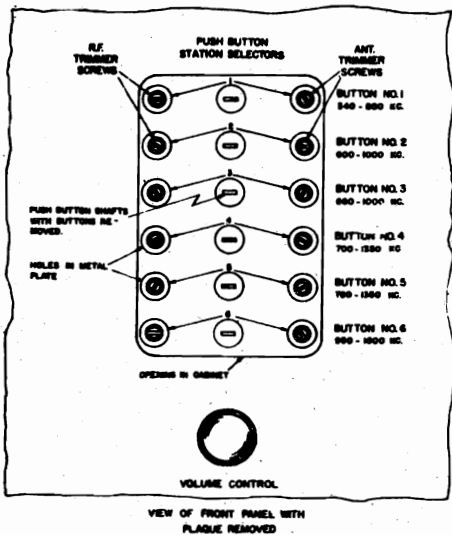

INSTRUCTIONS FOR AUTOMATIC TUNING

Unscrew the wooden plaque through which the push buttons emerge, by removing the screws located at the top and bottom of the plaque.

From the figure shown, determine which pair of trimmer screws have a range including that frequency. For example: The station you might wish to receive may have a transmitting frequency of 590 kc. Since the range of the button No. 1 is 540-800 kc., 590 kc. would be included in this range.

Push that button "IN"

If the frequency of the desired station is higher than that of the station to which it has already been tuned at the factory, turn the Antenna and R.F. trimmer screws to the LEFT slowly until the desired station is heard. If the frequency of the desired station is lower than that of the station to which the trimmers have been adjusted at the factory, turn the trimmer screws to the RIGHT until the station is heard.

Alternately adjust the R.F. and Antenna trimmers, each time giving screws about 1/8 turn, until maximum volume is obtained. This completes the adjustments for one station.


Note: In some cases, it may be desirable to readjust the trimmers slightly for maximum volume after the set has been unpacked. Rough handling in transportation may have disturbed the trimmer settings.

SEARS. ROEBUCK & CO. 7250, Ch. 110.258-1


MODELS 7227, 7243, Ch. 110.258

Schematic, Socket, Trimmers
Voltage


WIRING DIAGRAM FOR SILVERTONE CHASSIS 110.258-1

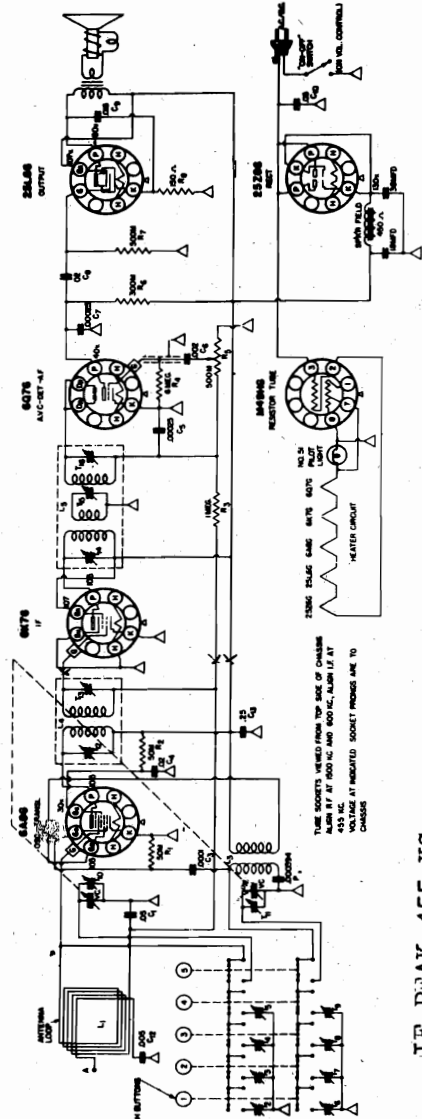


IF PEAK 455 KC

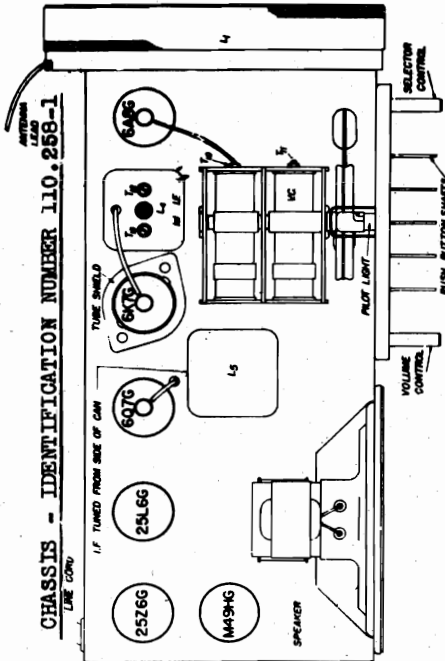


CHASSIS - IDENTIFICATION NUMBER 110.258-1

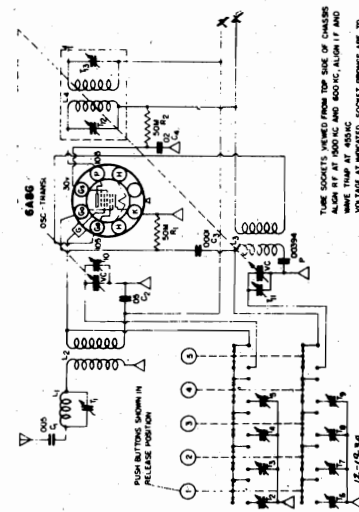

FOR SILVERTONE CHASSIS 110.258

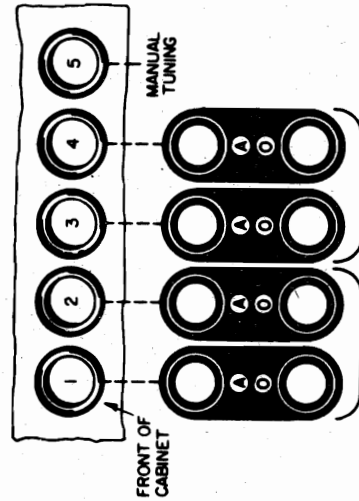

AUTOMATIC TUNING ADJUSTMENTS

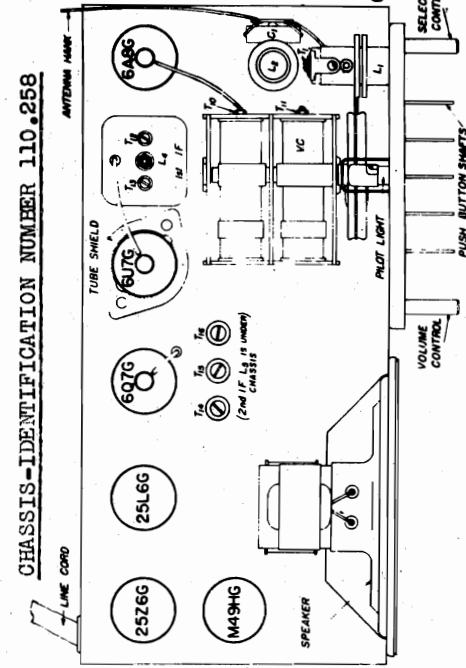

CHASSIS-IDENTIFICATION NUMBER 110.258

POWER SUPPLY: All models available 105-125 volts, 50-60 cycle or DC, 45 watts

POWER OUTPUT: Loud Speaker: Type Dynamic
 Undistorted 1.0
 Maximum 2.4
 Beam Power 5W
 Field Resistance 450 ohms

APRIL 26, 1939

MODELS See Below
Alignment, Tuner

SEARS, ROEBUCK & CO.

MODEL 7807 CHASSIS 113.414
AUTOMATIC TUNING CONTROL ADJUSTMENT

Tune the receiver dial to any desired station. Choose the push button which you wish to control this station. Unscrew the push button one full turn, then depress the button as far as it will go, release the button and turn until tight. The chosen station may always be received by depressing this button.

Remove call letter disc of station from list supplied and insert in button.

Insert celluloid disc.

In a like manner select a station for each of the other buttons and make necessary adjustments for each station.

ALIGNMENT PROCEDURE

Output meter connection Across loud speaker voice coil
Output meter reading to indicate 500 milliwatts 1.2 volts
Generator ground lead connection Receiver chassis
Dummy antenna value in series with generator output See chart below
Connection of generator output lead
Generator modulation 30%, 400 cycles
Position of volume control Fully clockwise
Position of tone control Clockwise
Position of Dial Pointer with variable fully closed Over first heavy line below 550 kc

POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS (IN ORDER)	TRIMMER FUNCTION	APPROX. MICROVOLTS
Open	485 kc.	.1 Mfd.	6S47 Grid	T2, T1	I.F. Output I.F. Input	100
Open	1750 kc.	.0002 Mfd.	External Aerial Terminal	C20	Oscillator	75
1400 kc.	1400 kc.	.0002 Mfd.	External Aerial Terminal	C19	Translator	50
600 kc. (Rock)	600 kc.	.0002 Mfd.	External Aerial Terminal	C3	Padder	50

Where indicated by the word "Rock", the variable should be rocked back and forth a degree or two while making the adjustment.

Generator modulation App. 50% @ 400 cycles
Position of volume control Fully clockwise

NOTE:- In the following table (A) refers to Model 7250 Chassis 110.258-1; (B) refers to Model 7251 Chassis 110.988 and (C) refers to Models 7227, 7243 Chassis 110.258

PUSH BUTTON SWITCH POSITION	POSITION OF DIAL POINTER	GENERATOR FREQUENCY	GENERATOR CONNECTION	TRIMMERS (IN ORDER)	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
Manual "I"	**	455 kc	Grid 6A89, Grid 6A87, Grid 6A86, Grid 6A85, Grid 6A84, Grid 6A83, Grid 6A82, Grid 6A81, Grid 6A80, Grid 6A79, Grid 6A78, Grid 6A77, Grid 6A76, Grid 6A75, Grid 6A74, Grid 6A73, Grid 6A72, Grid 6A71, Grid 6A70, Grid 6A69, Grid 6A68, Grid 6A67, Grid 6A66, Grid 6A65, Grid 6A64, Grid 6A63, Grid 6A62, Grid 6A61, Grid 6A60, Grid 6A59, Grid 6A58, Grid 6A57, Grid 6A56, Grid 6A55, Grid 6A54, Grid 6A53, Grid 6A52, Grid 6A51, Grid 6A50, Grid 6A49, Grid 6A48, Grid 6A47, Grid 6A46, Grid 6A45, Grid 6A44, Grid 6A43, Grid 6A42, Grid 6A41, Grid 6A40, Grid 6A39, Grid 6A38, Grid 6A37, Grid 6A36, Grid 6A35, Grid 6A34, Grid 6A33, Grid 6A32, Grid 6A31, Grid 6A30, Grid 6A29, Grid 6A28, Grid 6A27, Grid 6A26, Grid 6A25, Grid 6A24, Grid 6A23, Grid 6A22, Grid 6A21, Grid 6A20, Grid 6A19, Grid 6A18, Grid 6A17, Grid 6A16, Grid 6A15, Grid 6A14, Grid 6A13, Grid 6A12, Grid 6A11, Grid 6A10, Grid 6A9, Grid 6A8, Grid 6A7, Grid 6A6, Grid 6A5, Grid 6A4, Grid 6A3, Grid 6A2, Grid 6A1	T10, T9, T11, T10	I.F. wave trap	90
"B" only	**	455 kc	Grid 6A89, Grid 6A87, Grid 6A86, Grid 6A85, Grid 6A84, Grid 6A83, Grid 6A82, Grid 6A81, Grid 6A80, Grid 6A79, Grid 6A78, Grid 6A77, Grid 6A76, Grid 6A75, Grid 6A74, Grid 6A73, Grid 6A72, Grid 6A71, Grid 6A70, Grid 6A69, Grid 6A68, Grid 6A67, Grid 6A66, Grid 6A65, Grid 6A64, Grid 6A63, Grid 6A62, Grid 6A61, Grid 6A60, Grid 6A59, Grid 6A58, Grid 6A57, Grid 6A56, Grid 6A55, Grid 6A54, Grid 6A53, Grid 6A52, Grid 6A51, Grid 6A50, Grid 6A49, Grid 6A48, Grid 6A47, Grid 6A46, Grid 6A45, Grid 6A44, Grid 6A43, Grid 6A42, Grid 6A41, Grid 6A40, Grid 6A39, Grid 6A38, Grid 6A37, Grid 6A36, Grid 6A35, Grid 6A34, Grid 6A33, Grid 6A32, Grid 6A31, Grid 6A30, Grid 6A29, Grid 6A28, Grid 6A27, Grid 6A26, Grid 6A25, Grid 6A24, Grid 6A23, Grid 6A22, Grid 6A21, Grid 6A20, Grid 6A19, Grid 6A18, Grid 6A17, Grid 6A16, Grid 6A15, Grid 6A14, Grid 6A13, Grid 6A12, Grid 6A11, Grid 6A10, Grid 6A9, Grid 6A8, Grid 6A7, Grid 6A6, Grid 6A5, Grid 6A4, Grid 6A3, Grid 6A2, Grid 6A1	T11, T10	Osc., R.F.	58 ***
"C" only	**	1500 kc	Ant.	T11, T10	Osc., R.F.	23

IMPORTANT ALIGNMENT NOTES

It is advisable to repeat the entire alignment procedure in the original order to insure greater accuracy.
Always keep the output from the test oscillator at its lowest possible value. As the sensitivity is increased by alignment, the generator output should be reduced correspondingly.
* First time is misaligned by loosening center screw one turn.

MODELS 7250 CHASSIS 110.258-1; 7251 CHASSIS 110.988; 7227, 7243 CHASSIS 110.258
AUTOMATIC TUNING CONTROL ADJUSTMENT 6327 CHASSIS 110.990

Leave the radio turned on for about 15 minutes before adjusting the push buttons. This "warming up" period will insure permanent and accurate settings.

Read the entire procedure through very carefully before attempting to set the push buttons.

1. Make a list of the stations and their frequencies (kilocycles) that you want to set up for push button tuning. It is advisable, but not necessary, to arrange the stations in the order of their frequency (kilocycles); that is, the station of the lowest frequency will be controlled by button No. 1, the station of the next higher frequency by button No. 2, etc.

2. Refer to the diagram underneath the cabinet and see which set of adjustment screws will have a tuning range that includes the frequency of the first station you wish to adjust. The frequency ranges of the adjustment screws are divided into two groups, one group covering from 550 to 1100 kc, the other covering from 625 to 1800 kc.

3. From the same diagram, after finding where the proper pair of adjustment screws are located, trace the dotted line connecting these screws to one of the push buttons. This is the button which, after the adjustments are completed, will tune in the station.

4. Push this button "I".

5. Turn the volume control knob on full (to extreme right) and adjust screw marked "0" until the desired station is heard. If when making this adjustment, a number of stations can be brought in as the screw is turned and it is doubtful which station is the correct one, press button No. 5 (Manual Tuning) "I" and turn the station selector knob to the number on the dial that corresponds to the frequency of the station. Listening to the program being broadcast will identify the station when adjusting screw "0".

6. Adjust the screw marked "A" for maximum volume, retarding the volume control and readjusting if necessary. This completes the adjustments for this particular station.

7. Cut out the station name from the list supplied and glue into face of button.

8. Insert celluloid disc.

9. Proceed in the same manner to adjust the tuning screws for the other stations on your list.

MODELS 7250 CHASSIS 110.258-1; 7251 CHASSIS 110.988; 7227, 7243 CHASSIS 110.258

ALIGNMENT PROCEDURE

Output meter connections Across primary output transformer

Output meter reading to indicate 0.050 watt for Weston type 571 output meter on 15 volt scale 9 volts


Average sensitivity in mw. for 0.050 watt See chart below

Dummy antenna valve in series with generator output 100 mmfd.

Connection of generator ground To chassis

SEARS, ROEBUCK & CO.

MODEL 7228, Ch. 126.206
Schematic Voltage
Dial Drive

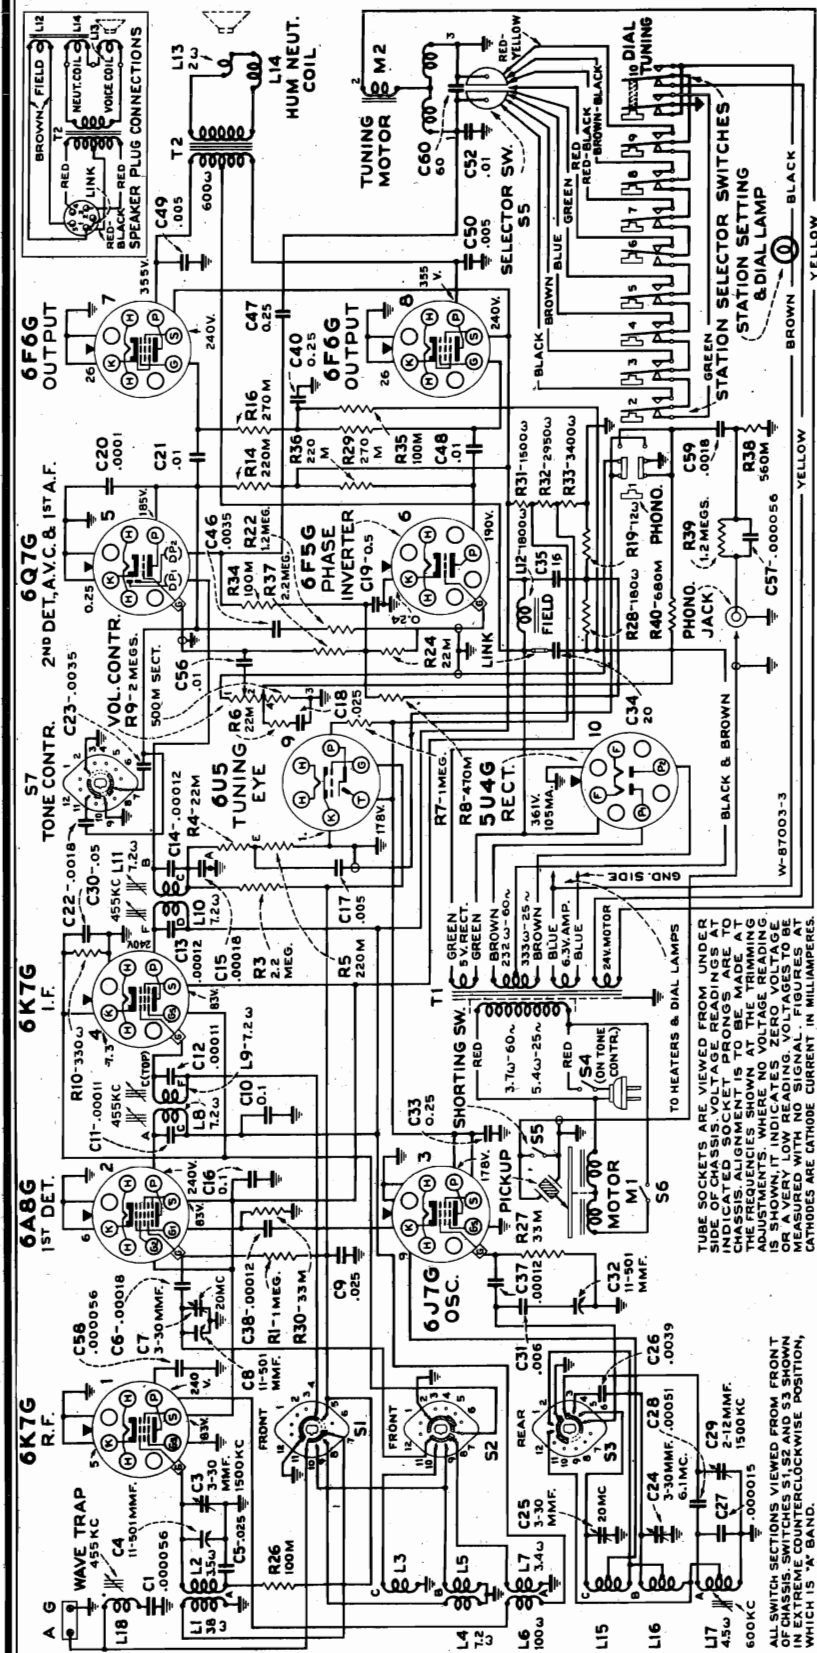

POWER OUTPUT:
Type..... Push-Pull Pentode
Undistorted..... 10 watts
Maximum..... 12 watts


LOUDSPEAKER:
Type..... Electrodynamic
Size..... 12 inches
V.C. Impedance..... 2.25 ohms at 400 cycles first removing the front dust-cover by gently cutting it away.
Field Coil Resistance..... 1,800 ohms A dust-cover should be cemented back in place upon completion of the adjustment.
App. Field Coil Voltage Drop..... 120 volts

PHONOGRAPH:
Type..... Automatic—Manual
Record Capacity..... Eight 10-inch or Seven 12-inch
Turntable Speed..... 78 R.P.M., adjustable
Type of Pickup..... Crystal
Pickup Impedance..... 100,000 ohms at 1,000 cycles

POWER SUPPLY RATINGS AVAILABLE

Radio Only		Total
105-125 volts, 60 cycles	120 watts	150 watts
105-125 volts, 50-60 cycles	120 watts	150 watts
105-125 volts, 25 cycles	120 watts	150 watts

Dial Lamps (Three), Phonograph Compartment Lamp (One)..... 6.3 volts, 0.25 ampere
Pilot Lamp (One)..... 6.3 volts, 0.15 ampere

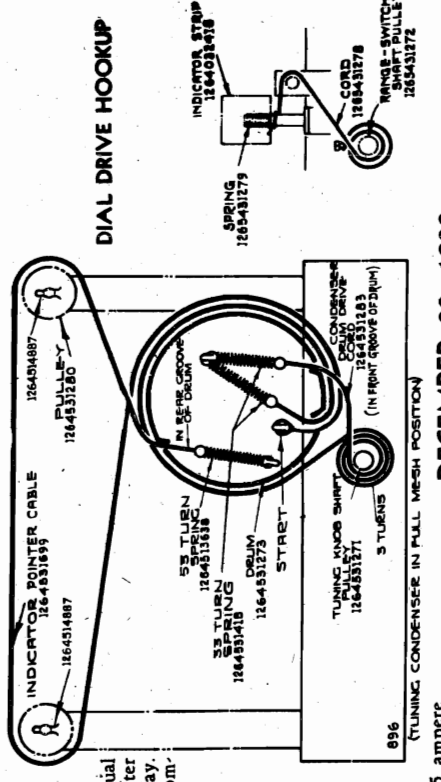

DIAL DRIVE HOOKUP

MODEL 7228

Record Changer

SEARS, ROEBUCK & CO.
Automatic Record Changer

Adjustments, Notes

GENERAL INFORMATION

Before servicing the automatic record changer, inspect the assembly to see that all levers, parts, gears, springs, etc. are in good order and are correctly assembled.

A bind or jam in the mechanism can usually be relieved by rotating the turntable in the reverse direction.

The changer can be conveniently rotated through its change cycle by pushing the index lever to "Reject" and revolving the turntable by hand. Six turntable revolutions are required for one change cycle.

The turntable, spindle, and pinion gear are assembled by means of a 3/32 inch straight pin. This pin may be removed by gently driving with a standard pin punch.

If the record changer or cabinet is not perfectly level, normal operation is likely to be affected.

The 10 and 12 inch records must be absolutely flat for smooth operation when using a mixture of the two sizes.

A shorting switch, located in the pickup head, operates due to pressure when the pickup is placed on the pickup rest.

ADJUSTMENTS

A. Main Lever.—This lever is basically important in that it interlinks the various individual mechanisms which control needle landing, tripping, record separation, etc. One adjustment is provided for the main lever. Rotate the turntable until the changer is out-of-cycle; and adjust rubber bumper bracket (A) so that the roller clears the nose of the cam plate by 1/16 inch.

B. Friction Clutch.—The motion of the tone arm toward the center of the record is transmitted to the trip pawl "22" by the trip lever "7" through a friction clutch "5." If the motion of the pickup is abruptly accelerated or becomes irregular due to swinging in the eccentric groove, the trip finger "7" moves the trip pawl "22" into engagement with the pawl on the main gear, and the change cycle is started. Proper adjustment of the friction clutch "5" occurs when movement of the tone arm causes positive movement of the trip pawl "22" without tendency of the clutch to slip. The friction should be just enough to prevent slippage, and is adjustable by means of screw "B." If adjustment is too tight, the needle will repeat grooves; if too loose, tripping will not occur at the end of the record.

C. Pickup Lift Cable Screw.—During the record change cycle, lever "16" is actuated by the main lever "15" so as to raise the tone arm clear of the record by means of the pickup lift cable. To adjust pickup for proper elevation, stop the changer "in-cycle" at the point where pickup is raised to the maximum height above turntable plate, and has not moved outward; at this point adjust locknuts "C" to obtain 1 inch spacing between needle point and turntable top surface.

D. & E. Needle Landing on Record.—The relation of coupling between the tone arm vertical shaft and lever "20" determines the landing position of the needle on a 10 inch record. Position of eccentric stud "E" governs the landing of the needle on a 12 inch record; this, however, is dependent on the proper 10 inch adjustment.

To adjust for needle landing, place 10 inch record on turntable; push index lever to reject position and return to the 10 inch position; see that pickup locating lever "17" is tilted fully toward turntable; rotate mechanism through cycle until needle is just ready to land on the record; then see that pin "V" on lever "14" is in contact with "Step T" on lever "17." The correct point of landing is 4-11/16 inches from the nearest side of the turntable spindle; loosen the two screws "D" and adjust horizontal position of tone arm to proper dimension, being careful not to disturb levers "14" and "17." Leave approximately 1/32 inch end play between hub of lever "20" and pickup base bearing, and tighten the blunt nose screw "D"; run mechanism through several cycles as a check, then tighten cone pointed screw "D".

After adjusting for needle landing on a 10 inch record, place 12 inch record on turntable; push index lever to reject and return to 12 inch position; rotate mechanism through cycle until needle is just ready to land on the record; the correct point of landing is 5-11/16 inches from nearest side of spindle. If the landing is incorrect, turn stud "E" until the eccentric end adjusts lever "14" to give correct needle landing. The eccentric end of the stud must always be toward the rear of the motor board, otherwise incorrect landing may occur with 10 inch records.

F. & G. Record Separating Knife.—The upper plate (knife) "25" on each of the record posts serves to separate the lower record from the stack and to support the remaining records during the change cycle. It is essential that the spacing between the knife and the rotating record shelf "27" be accurately maintained. The spacing for the 10 inch record is nominally .058 inch, and for the 12 inch record is .075 inch.

To adjust, rotate the knife to the point of minimum

vertical separation from the record shelf and turn screw and locknut "F" to give .055—.061 inch separation. Screw "G" must not be depressed during this adjustment. After setting screw "F" adjust screw "G" so that when its tip is depressed flush with top of record shelf, the vertical spacing between the knife, in its lowest rotational position, and the shelf, is .072—.078 inch.

H. Record Support Shelf.—The record shelf revolves during the change cycle to allow the lower record to drop onto the turntable. Both posts are rotated simultaneously by a gear and rack coupled to the main lever "15," and it is necessary that adjustments be such that the record is released from both shelves at the same instant. To adjust, place a 12 inch record on the turntable, rotate mechanism into cycle to the point where tone arm is at maximum distance outward from turntable; lift record upward until it is in contact with both separating knives, then loosen screws "H" and shift record shelves so that the curved inner edges of the shelves are uniformly spaced at least 1/16 inch from record edge. Tighten the blunt nose screw "H," run mechanism through cycle several times to check action, then tighten cone pointed screw "H".

If record shelves or knives are bent, or not perfectly horizontal, improper operation and jamming of mechanism will occur.

J. Tone Arm Rest Support (not shown).—When the changer is out-of-cycle, the front lower edge of the pickup head should be 5/16 inch above surface of motor board. This may be adjusted by bending the tone arm support bracket, which is associated with the tone arm mounting base, in the required direction.

K. Trip Pawl Stop Pin.—The position of the trip pawl stop pin "K" in relation to the main lever "15" governs the point at which the roller enters the cam. By bending the pin support either toward or away from trip pawl bearing stud, the roller can be made to enter the cam later or earlier, respectively. This adjustment should be made so that the roller definitely clears the cam outer guide as well as the nose of the cam plate.

Lubrication.—Petrolatum or petroleum jelly should be applied to cam, main gear, spindle pinion gear, and gears of record posts.

Light machine oil should be used in the tone arm vertical bearing, record post bearings, and all other bearings of various levers on underside of motor board.

The felt washer between the turntable and spindle bearing should be soaked in light engine oil whenever the turntable is removed, or as required for proper operation.

Do not allow oil or grease to come in contact with, rubber mounting of tone arm base, rubber bumper, or flexible coupling of drive motor.

MISCELLANEOUS SERVICE HINTS

Incorrect adjustment of a particular mechanism of the changer is generally exhibited in a specific mode of improper operation. The following relations between effects on operation and the usual mis-adjustments will enable ready adjustment in most cases.

1. For any irregularity of operation, the adjustment of the main lever "15" should be checked first as in "A".
2. Needle does not land properly on both 10 and 12 inch records—Make complete adjustments "D" and "E".
3. Needle does not land properly on 12 inch record but correct on 10 inch—Effect adjustment "E".
4. Failure to trip at end of record—Increase clutch "5" friction by means of screw "B". Also, see that levers "7" and "12" are free to move without touching each other.
5. Pickup strikes lower record of stack or drags across top record on turntable—Adjust lift cable per adjustment "C".
6. Needle does not track after landing—Friction clutch "5" adjustment "B" may be too tight; bind in tone arm vertical bearing; levers "7" and "12" fouled; or pickup output cable twisted.
7. Cycle commences before record is complete—Record is defective, or adjustment "B" of friction clutch "5" is too tight.
8. Wow in record reproduction—Record is defective; flexible coupling between motor and changer mechanism not correctly assembled; or instrument is not being operated at normal room temperature (65° F).
9. Record knives strike edge of records—Records warped; record edges are rough; or knife adjustments "F" and "G" are incorrect.
10. Record not released properly—Adjust record shelf assemblies in respect to shaft by means of adjustment "H".
11. Needle lands in 10 inch position on 12 inch record or misses record when playing both types mixed—Increase tension of pickup locating lever spring "34".

SEARS. ROEBUCK & CO.

MODEL 7228
Alignment, Trimmers
Socket

ALIGNMENT PROCEDURE

PRELIMINARY:


Output meter connections.....	Across speaker voice coil
Output meter reading to indicate 1.0 watt output.....	1.5 volts
Approximate average sensitivity in microvolts for 1.0 watt output.....	See chart below
Dummy antenna value to be inserted in series with generator output.....	See chart below
Connection of generator output lead.....	See chart below
Connection of generator ground lead.....	To chassis
Generator modulation.....	30%, 400 cycles
Position of Volume Control.....	Fully clockwise
Position of Tone Control.....	Fully clockwise

Calibration Scale on Variable Condenser Drive Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment when chassis is out of cabinet; therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 0° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The surface of the drum must be flush with the end of the gang-condenser shaft. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "0°" mark on the calibration scale when the plates are fully closed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial pointer to the drive cable with variable condenser fully closed and pointer on last calibration mark at 540 kc end of Broadcast "A" band.

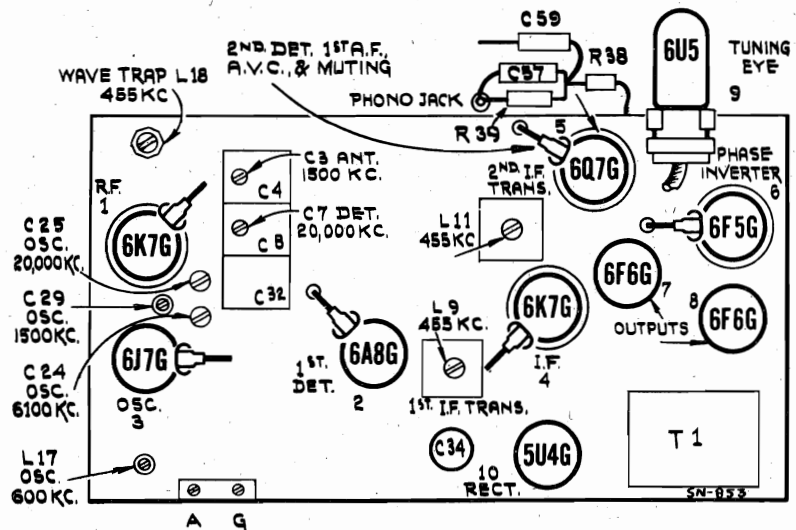

LOCATION OF PARTS AND ALIGNMENT ADJUSTMENTS ON TOP OF CHASSIS

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connection	Trimmers Adjusted (In order shown)	Trimmer Function	Approximate Microvolts
"A"	Low End	455 kc	.001 mfd.	6K7-G I-F Grid	L10, L11	2nd I-F Trans.	7,600
"A"	Low End	455 kc	.001 mfd.	6A8-G Grid	L8, L9	1st I-F Trans.	130
"A"	Low End	455 kc	.0002 mfd.	Ant.	L18	Wave Trap †	—
"C"	20 mc (146°)	20 mc	300 ohms	Ant.	C25	Osc. *	—
"C"	20 mc (146°) (rock)	20 mc	300 ohms	Ant.	C7	Det. **	50
"B"	6.1 mc (139°)	6.1 mc	300 ohms	Ant.	C24	Osc. *	30
"A"	1,500 kc (150.5°)	1,500 kc	.0002 mfd.	Ant.	C29, C3	Osc., Ant.	—
"A"	600 kc (31°) (rock)	600 kc	.0002 mfd.	Ant.	L17	Osc.	3
"A"	1,500 kc (150.5°)	1,500 kc	.0002 mfd.	Ant.	C29, C3	Osc., Ant.	5

IMPORTANT ALIGNMENT NOTES

† Adjust wave-trap for minimum output.

* Use minimum capacity peak if two peaks can be obtained.

** Use maximum capacity peak if two peaks can be obtained.

Where indicated by the word "Rock," the variable tuning condenser should be rocked back and forth a degree or two while making this adjustment.

Each step of the alignment should be repeated in its original order for greater accuracy. Always keep the output from the generator at its lowest possible value to prevent the a-v-c action of the set from interfering with accurate alignment.

Adjustment locations are shown on the top and bottom parts location views of chassis.

Only the dummy antenna indicated in the chart for any particular band should be used. Remove the dummy used for alignment in any other band. Grid cap leads should remain in place during alignment.

Values shown under, "Microvolts," are only approximate.

MODEL 7228

Chassis Wiring,
Tuner Notes

SEARS, ROEBUCK & CO.

Electric Tuning Mechanism

The circuit of the electric tuning mechanism is shown in the schematic diagram, and the mechanical details are illustrated. The action can be understood by following a cycle of operation:

When a station button is pushed in, it completes the 24-volt circuit through the corresponding station-setting contact (push-button adjuster pin), and one-half of the brass selector disc, which is connected to one side of the motor field coil. This energizes the motor, and the rotor is pulled forward, engaging with the gear train that drives the tuning condenser and selector disc. The condenser and disc rotate until the insulation line comes under the particular station-setting contact, and the motor circuit is broken.

Adjustment of Selector Disc:

The brass selector disc is fastened to the rear shaft of the tuning condenser by means of two set-screws. When the condenser is at maximum (plates fully meshed) the insulation line should be horizontal, with the beveled operating-end at the left (viewed from rear).

The selector disc should be set so that the contact-tip plungers in the station-setting contacts project not more than 1/16-inch from the body of the contacts.

Muting Circuit:

When the electric tuning mechanism is in action, the motor-supply voltage is fed into a diode rectifier circuit which applies a high bias to the first-audio amplifier. This prevents audio amplification and makes the set quiet or "mute" while the mechanism is operating.


Lubrication:

Motor bearings and gear bearings; use light machine oil. Gear faces, dial-indicator pulleys and rails; use petroleum jelly.

Selector disc; apply thin film of petroleum jelly.

Tuning Motor Replacement:

Replacements for the tuning motor (No. 1264532434, 25 cycle, and No. 1264532095, 50-60 cycle) are supplied with a spiral thrust spring on the motor shaft. This spring should be removed (with a pair of long-nose pliers) before installing the motor in the chassis.

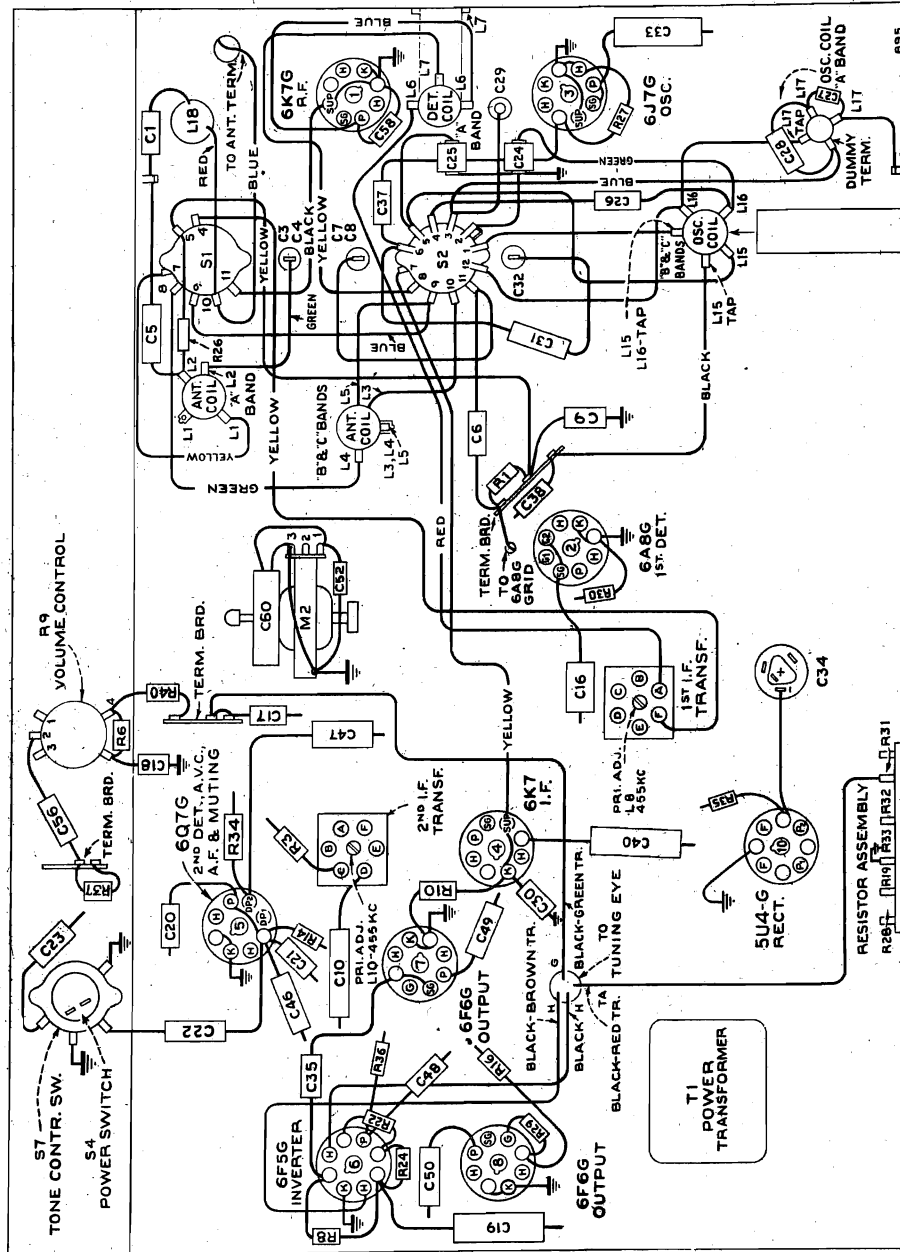

General Information and Service Hints

Having a frequency difference equal to the I.F. frequency (455 kc) of the receiver. This will be evidenced by a whistle appearing when the receiver is tuned to either of the stations. This may be further located by tuning the receiver to each of these stations and then stopping the oscillator, in each case, by grounding the tuning eye section of the tuning eye. In each case, still persists, it is being caused by the whistle between these two stations and may be corrected by shifting the I.F. frequency of the receiver to a frequency other than the difference frequency of the two local or strong signals (stations).

The I.F. amplifier should not be shifted to a frequency higher than 470 kc, nor lower than 440 kc, but should be as close to 455 kc as possible.

Eliminating Whistle at 910 KC.

A whistle due to a beat between the second harmonic (910 kc) of the 455 kc I.F. and a 910 kc signal may be experienced. In localities where the 910 kc station is one that is frequently listened to, it will be desirable to shift the whistle to some other point where it will not be objectionable. This can be done by shifting the I.F. frequency of the receiver. Determine at what point between 880 and 940 kc the whistle will be least objectionable. Dividing this frequency by two will give the new I.F. frequency to which the receiver should be aligned. For example, if it is determined that a whistle at 930 kc would not be objectionable, the I.F. should be re-aligned at 930/2 or 465 kc. Try to select the new I.F. frequency as close as possible to 455 kc.

An interfering whistle may also be caused by two stations

Unpacking:

Align the I.F. at the new frequency and then realign the rest of the receiver as described under "ALIGNMENT PROCEDURE."

Remove bracket "A" securing the pickup and needle mechanism, by removing screw "B". Also remove the red bold pickup, and the cardboard strip on the record posts. The perforation booklet and callletter markers and covers will be found in an envelope in the record wall. The knobs are in an envelope in the start of the chassis. The wooden skids which are bolted to the bottom of the cabinet should also be removed.

MODEL 7230
Alignment, Socket
Trimmers

SEARS, ROEBUCK & CO.

ALIGNMENT PROCEDURE

PRELIMINARY:

Output meter connections..... Across speaker voice coil
 Output meter reading to indicate 1.0 watt output..... 1.5 volts
 Approximate average sensitivity in microvolts for 1.0 watt output..... See chart below
 Dummy antenna value to be inserted in series with generator output..... See chart below
 Connection of generator output lead..... See chart below
 Connection of generator ground lead..... To chassis
 Generator modulation..... 30%, 400 cycles
 Position of Volume Control..... Fully clockwise
 Position of Tone Control..... Fully clockwise
 Position of Dial Pointer with variable tuning condenser fully closed..... To fall on last calibration mark at 540 kc end of "Broadcast" band

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connection	Trimmers Adjusted (In order shown)	Trimmer Function	Approximate Microvolts
Broadcast	Low End	455 kc	0.001 mfd.	6K7-G I-F Grid	L12, L13	2nd I-F Transformer	3,600
Broadcast	Low End	455 kc	0.001 mfd.	6K8 Grid	L10, L11	1st I-F Transformer	55
Broadcast	Low End	455 kc	0.0002 mfd.	Ant.	C1	Wave-Trap†	—
Short Wave	15.2 mc	15.2 mc	300 ohms	Ant.	C3	Osc.*	—
Short Wave	15.2 mc (Rock)	15.2 mc	300 ohms	Ant.	C34	Ant.**	20
Broadcast	1,500 kc	1,500 kc	0.0002 mfd.	Ant.	C6	Osc.	—
Broadcast	600 kc (Rock)	600 kc	0.0002 mfd.	Ant.	L9	Osc.	10
Broadcast	1,500 kc	1,500 kc	0.0002 mfd.	Ant.	C6	Osc.	15

IMPORTANT ALIGNMENT NOTES

- † Adjust wave-trap for minimum output.
- * Use minimum capacity peak if two peaks can be obtained.
- ** Use maximum capacity peak if two peaks can be obtained.


Where indicated by the word "Rock," the variable tuning condenser should be rocked back and forth a degree or two while making this adjustment.

Each step of the alignment should be repeated in its original order for greater accuracy. Always keep the output of the generator at its lowest possible value to prevent the AVC action of the set from interfering with accurate alignment.

Adjustment locations are shown on the top and bottom parts location views of chassis.

Only the dummy antenna indicated in the chart for any particular band should be used. Remove the dummy used for alignment in any other band. Grid cap leads should remain in place during alignment.

Values shown under "Microvolts" are only approximate.

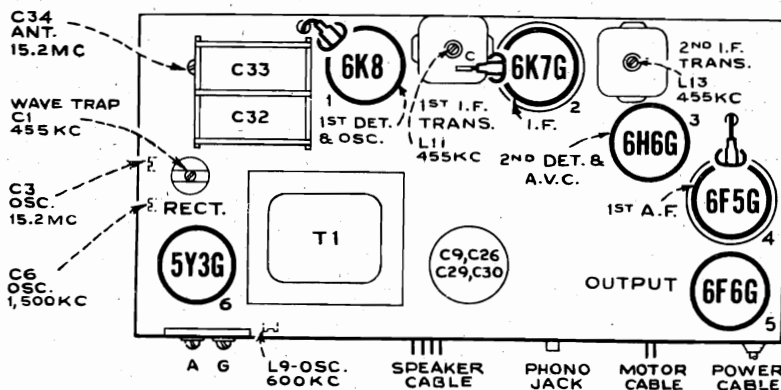


LOCATION OF PARTS AND ALIGNMENT ADJUSTMENTS ON TOP OF CHASSIS

SEARS, ROEBUCK & CO.

MODEL 7230, Ch. 126.208

Schematic, Voltage Dial Drive

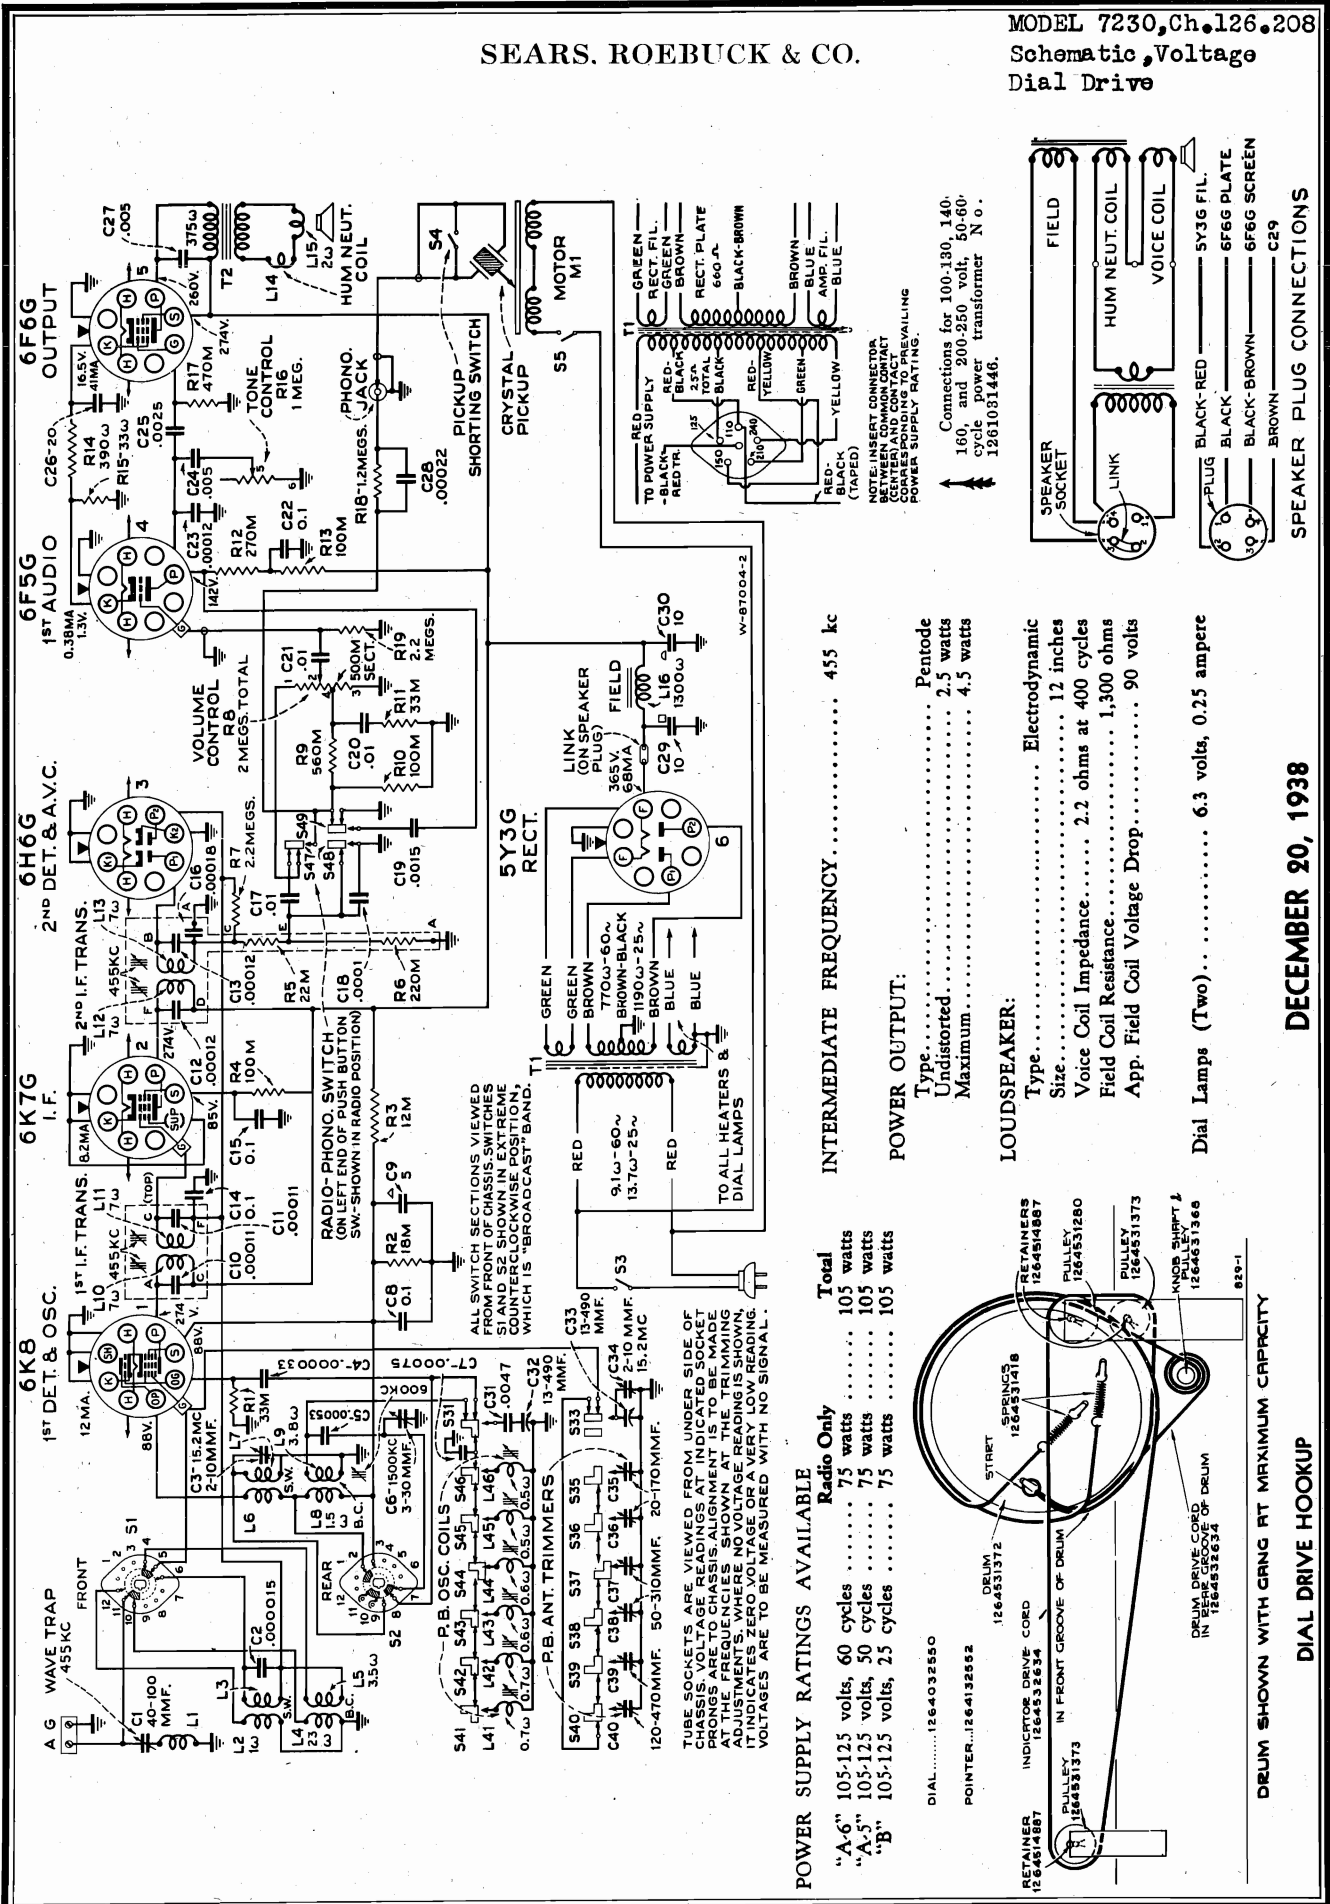

INTERMEDIATE FREQUENCY 455 kc

POWER OUTPUT:

Type..... Pentode
Undistorted..... 2.5 watts
Maximum..... 4.5 watts

LOUDSPEAKER:

Type..... Electrodynamic
Size..... 12 inches
Voice Coil Impedance..... 2.2 ohms at 400 cycles
Field Coil Resistance..... 1,300 ohms
App. Field Coil Voltage Drop..... 90 volts


Dial Lamps (Two)..... 6.3 volts, 0.25 ampere

POWER SUPPLY RATINGS AVAILABLE

Radio Only


Total

"A-6" 105-125 volts, 60 cycles 75 watts 105 watts
"A-3" 105-125 volts, 50 cycles 75 watts 105 watts
"B" 105-125 volts, 25 cycles 75 watts 105 watts

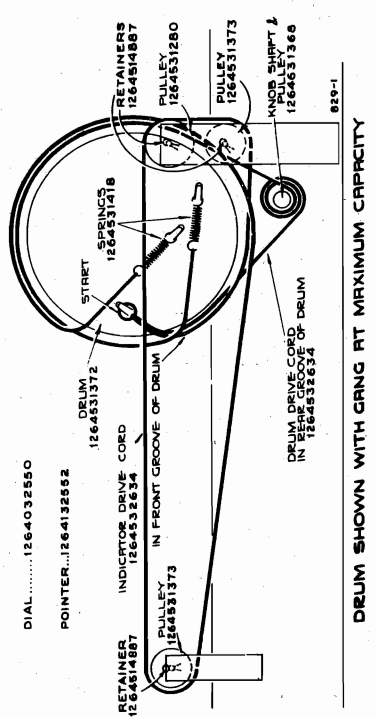


MODEL 7230
Chassis Wiring
Tuner, Terminal Board

SEARS, ROEBUCK & CO.

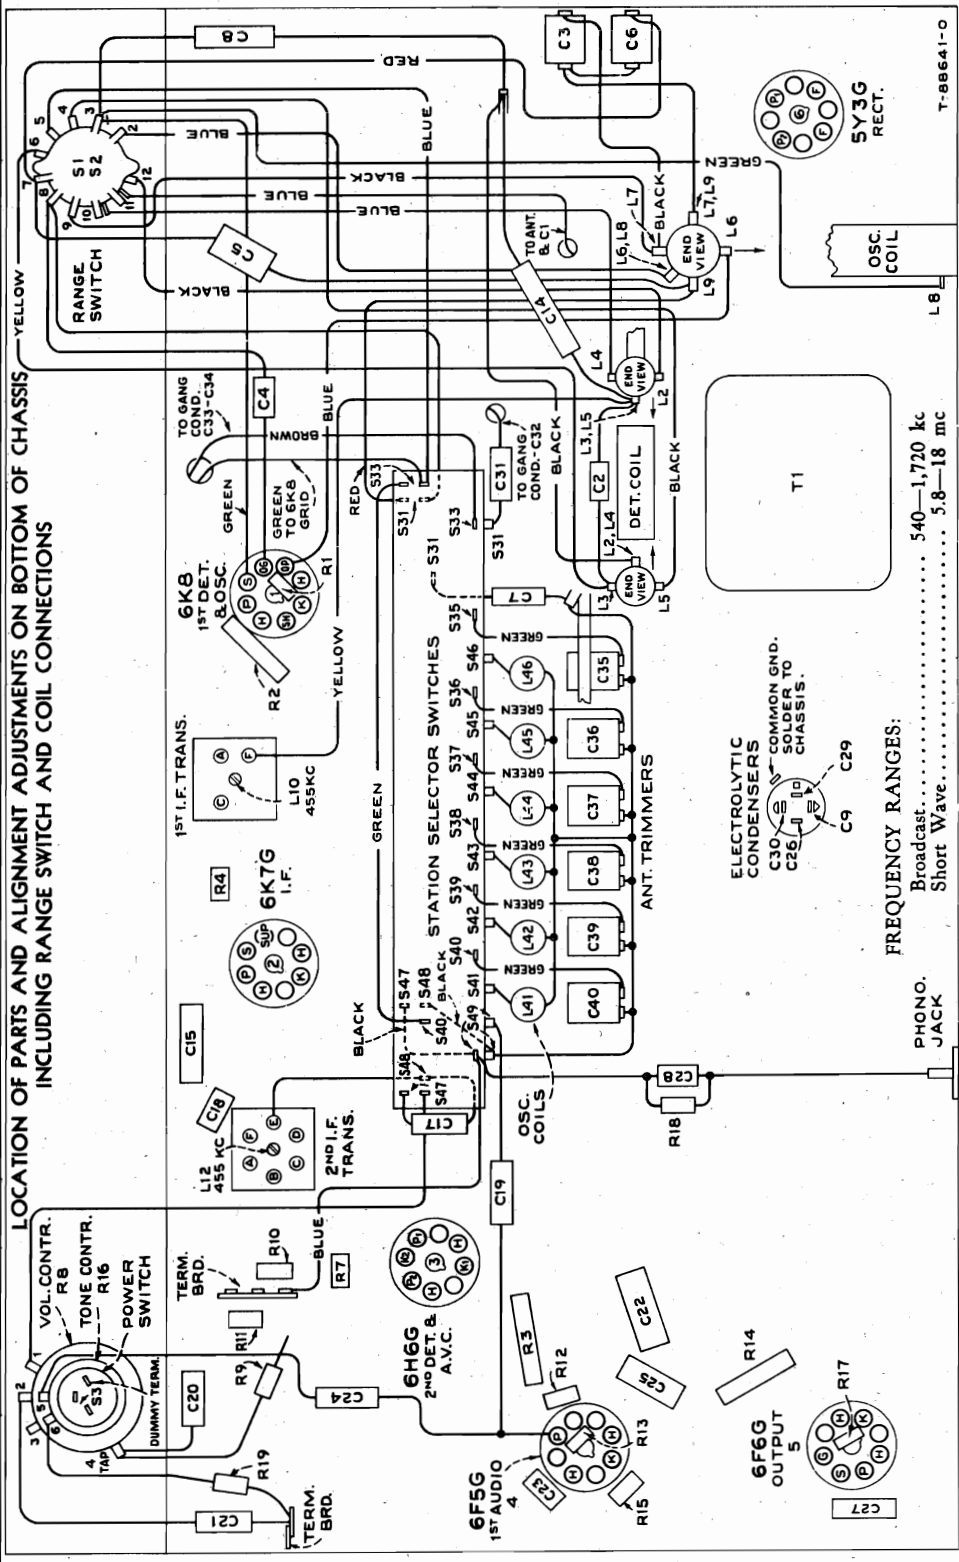

LOCATION OF PARTS AND ALIGNMENT ADJUSTMENTS ON BOTTOM OF CHASSIS INCLUDING RANGE SWITCH AND COIL CONNECTIONS

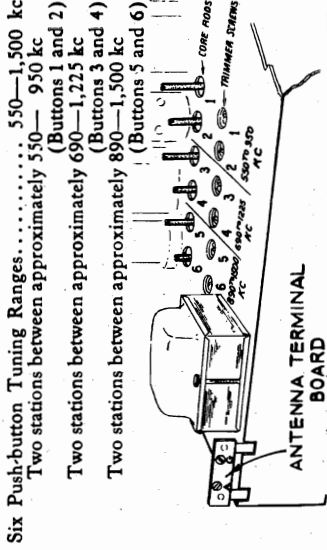

Six Push-button Tuning Ranges..... 550—1,500 kc
Two stations between approximately 550—950 kc (Buttons 1 and 2)
Two stations between approximately 690—1,225 kc (Buttons 3 and 4)
Two stations between approximately 890—1,500 kc (Buttons 5 and 6)

3. Push in station-button No. 1, and adjust No. 1 oscillator core (L41) to receive this station. Screw the core all the way in, to lowest frequency, and then unscrew slowly until the station is received.
4. Adjust No. 1 antenna trimmer (C40) for maximum output on this station.
5. Adjust for each of the remaining five stations in the same manner.
6. Make a final critical adjustment of the oscillator cores, using one or two feet of wire as an antenna to ensure sharp peaking. (NOTE: Clockwise adjustment of the oscillator cores and antenna trimmers tunes the circuits to lower frequencies.)


Adjustments for Push Button Tuning

Each of the six station push buttons connects to a separate magnetite-core oscillator coil and a separate antenna trimmer, both of which must be adjusted to select the desired station when this button is depressed. Use an insulated screw-driver or alignment tool, allowing at least five minutes warm-up period before making adjustments. The regular antenna should be used for the preliminary adjustments. Proceed as follows:

1. Make a list of the six desired stations, arranged in order from low to high frequencies.
2. Push in the dial-tuning (rear) push button, and manually tune in the first station on the list.

SEARS, ROEBUCK & CO.

MODEL 7231, Ch. 105.6H
Schematic, Socket
Trimmers, Alignment

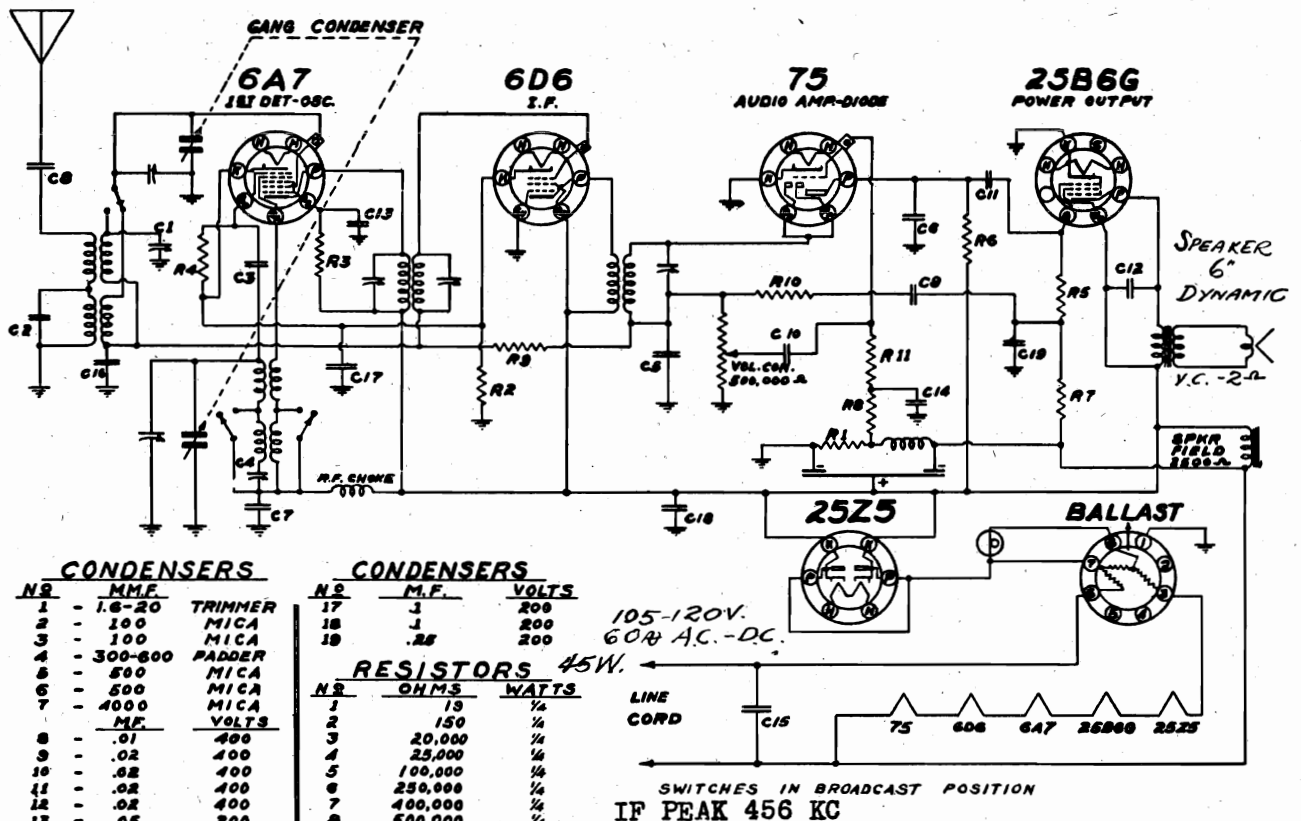

CONDENSERS

NR	M.F.	TRIMMER
1	1.6-20	TRIMMER
2	100	MICA
3	100	MICA
4	300-800	PADDER
5	500	MICA
6	500	MICA
7	4000	MICA
8	.01	M.F. VOLTS
9	.02	400
10	.02	400
11	.02	400
12	.02	400
13	.05	200
14	.05	200
15	.05	400
16	.1	200

CONDENSERS

NR	M.F.	VOLTS
17	1	200
18	1	200
19	.25	200

RESISTORS 45W.

NR	OHMS	WATTS
1	15	1/4
2	150	1/4
3	20,000	1/4
4	25,000	1/4
5	100,000	1/4
6	250,000	1/4
7	400,000	1/4
8	500,000	1/4
9	1 MEG	1/4
10	1 MEG	1/4
11	1 MEG	1/4

105-120V.
60Hz A.C.-D.C.


SWITCHES IN BROADCAST POSITION
IF PEAK 456 KC

POWER OUTPUT:

Type..... Pentode
Undistorted..... 1 watt
Maximum..... 1 1/2 watts

FREQUENCY RANGES :
535 to 1750 KC
5600 to 18100 KC

IF ALIGNMENT -
Generator at 456 KC, connected to the control grid of the 6A7 tube, thru a .05 MFD capacitor. Adjust IF trimmers to peak, they are located; two in transformer can above chassis, and other on front apron of chassis, is the left hand section.

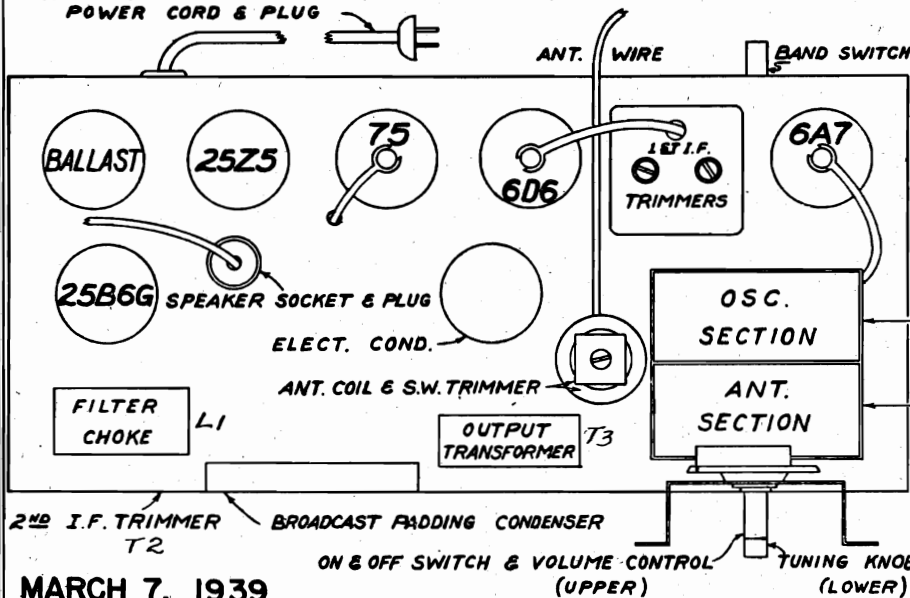


MARCH 7, 1939

BROADCAST BAND ALIGNMENT - Generator at 1400 KC, connected to antenna lead of receiver thru 100 MMFD condenser. Dial at 1400 KC, adjust rear gang condenser trimmer (OSC) to peak, then front section of gang condenser to peak.
Generator at 600 KC, receiver dial at approximately 600 KC, while rocking the variable condenser across signal adjust oscillator padder to maximum peak.
SHORTWAVE BAND - Generator at 600 KC, rotate condenser from high frequency end until generator signal is heard, then peak trimmer on antenna coil. No other shortwave band adjustments required on this receiver. Repeat all adjustments.

MODEL 7232, Ch. 105.6L
Schematic, Socket
Alignment, Trimmers

SEARS, ROEBUCK & CO.

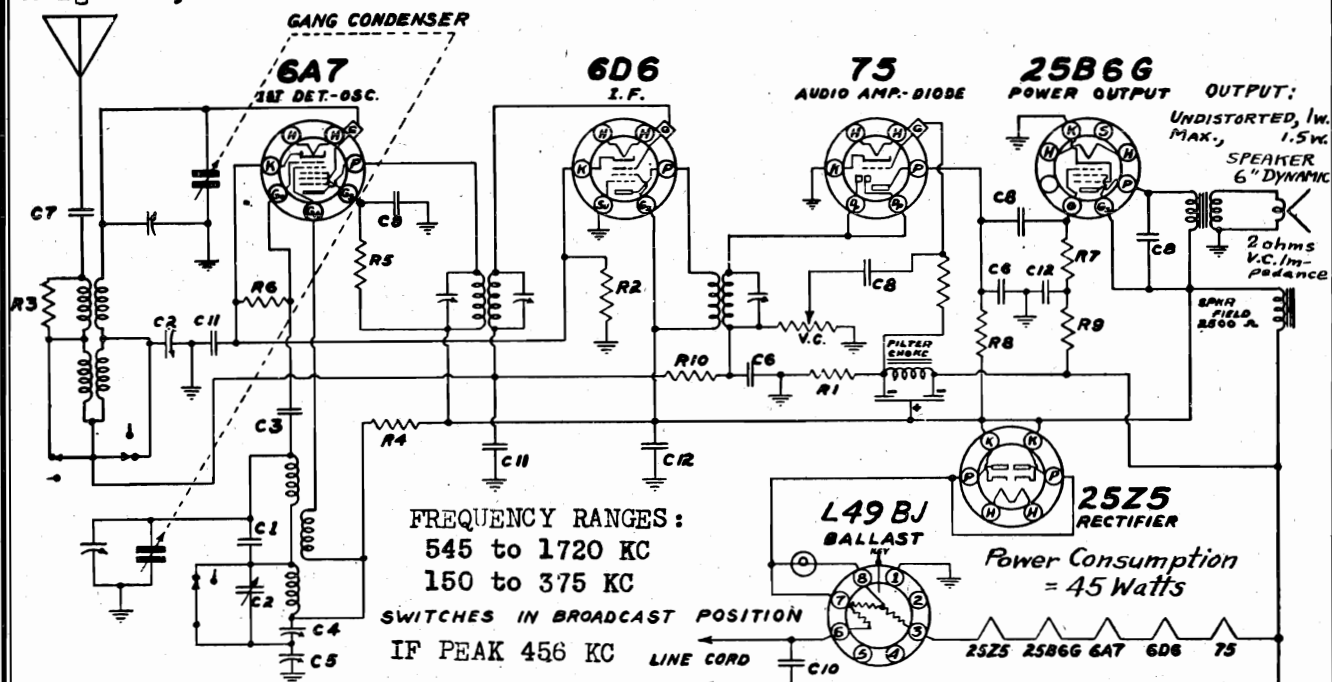

POWER CORD & PLUG

LONG WAVE TRIMMERS
OSC. ANT.

BAND SWITCH


CONDENSERS

NO.	M.M.F.	GIMMIX
C1	10	MICA
C2	30-100	MICA
C3	100	-
C4	100-200	-
C5	300-600	-
C6	500	-
M.F.		
C7	.01	400 V.
C8	.02	400 V.
C9	.05	200 V.
C10	.05	400 V.
C11	.1	200 V.
C12	.25	200 V.

RESISTORS

NO.	OHMS	WATTS
R1	18	
R2	* 300	1/4
R3	8,000	1/4
R4	15,000	1/4
R5	20,000	1/4
R6	25,000	1/4
R7	100,000	1/4
R8	250,000	1/4
R9	400,000	1/4
R10	1,000,000	1/4

V.C. - 1/2 MEG. VOLUME CON.
* TOLERANCE ± 10%

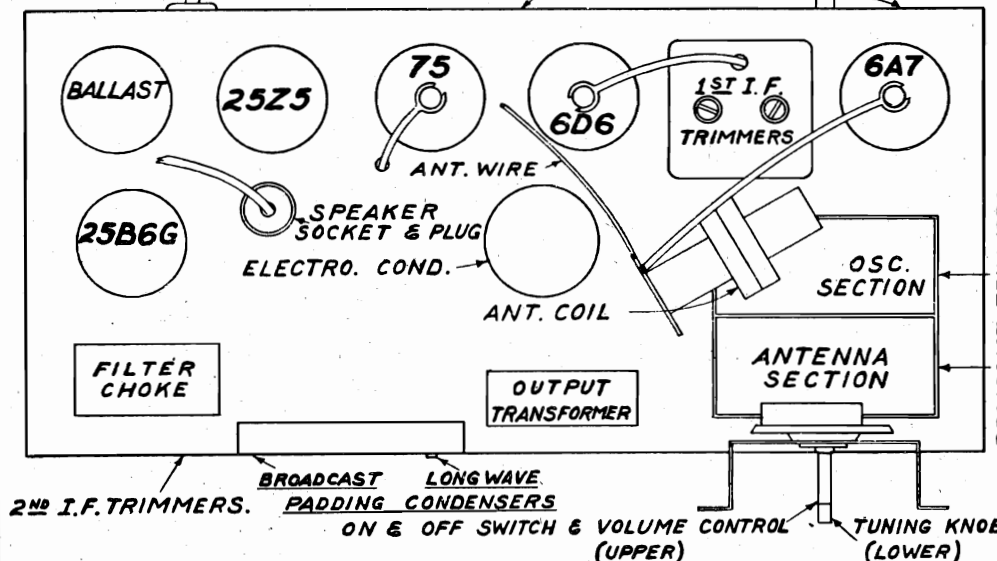

IF ALIGNMENT - Generator at 456 KC, and connected to the control grid of the 6A7 thru a .05 MFD condenser. Align the three IF trimmers to maximum peak. The three trimmers are located as follows : two are located in the IF can on the top of the chassis, the third is located on the front apron of the chassis end is the left hand section.


BROADCAST - Generator at 1400 KC, connected to the antenna thru a 100 MMFD condenser. Dial set at 1400 KC, peak rear trimmer of gang condenser (OSC), then peak front trimmer. Shift generator and dial to 600 KC, while rocking gang condenser peak the oscillator padding condenser for maximum resonance.

LONG WAVE - Generator at 375 KC, peak oscillator trimmer, gang condenser completely open. Generator at 325 KC, peak the antenna trimmer, mounted on longwave antenna coil, after signal has been found by rotation condenser from high frequency end of dial. Pad the oscillator condenser at 160 KC while rocking condenser.

MARCH 7, 1939

SEARS, ROEBUCK & CO,

MODEL 7233, Ch. 105, 6PU
Schematic, Socket
Alignment, Trimmers

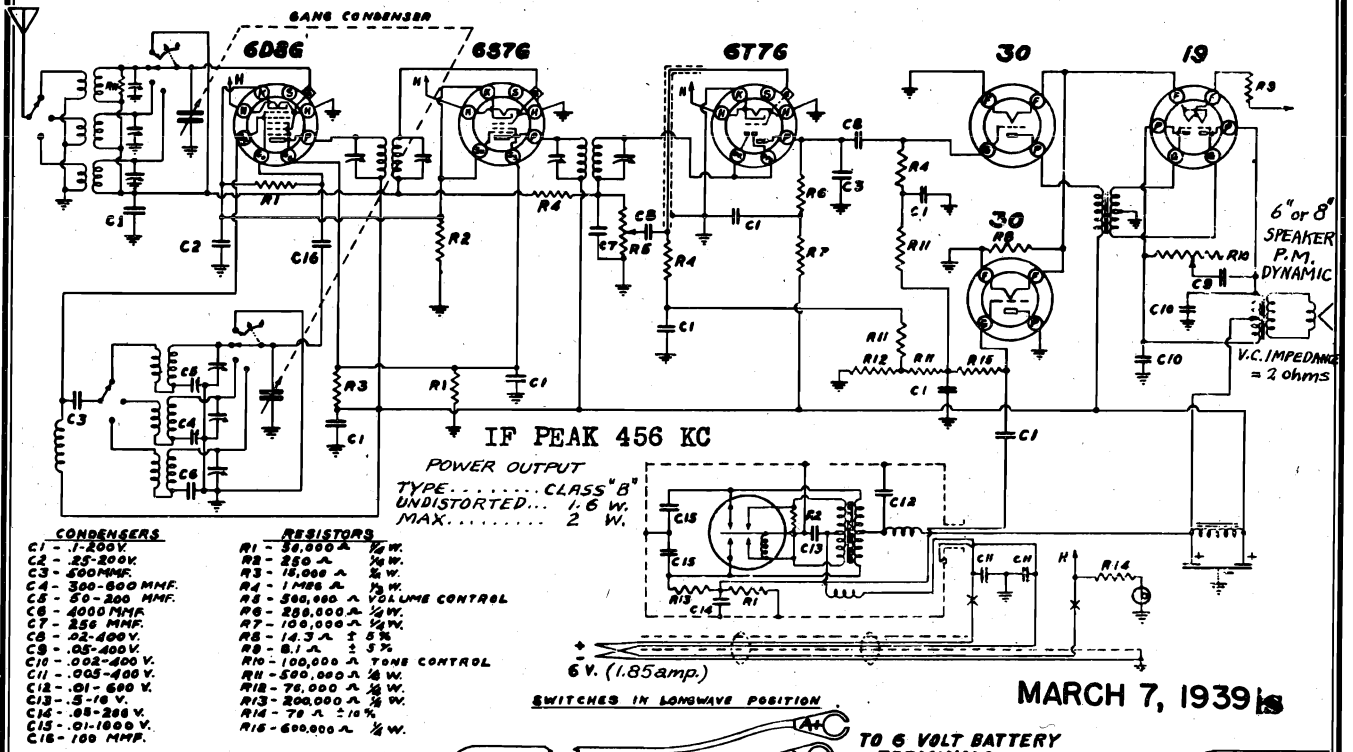

- | CONDENSERS | RESISTORS |
|-------------------|--------------------------------------|
| C1 - 1-200V | R1 - 50,000 Ω 1/2 W. |
| C2 - 25-200V | R2 - 250 Ω 1/2 W. |
| C3 - 500MMF. | R3 - 15,000 Ω 1/2 W. |
| C4 - 300-500 MMF. | R4 - 1 MΩ 1/2 W. |
| C5 - 50-200 MMF. | R5 - 500,000 Ω 1/2 W. VOLUME CONTROL |
| C6 - 400 MMF. | R6 - 250,000 Ω 1/2 W. |
| C7 - 250 MMF. | R7 - 100,000 Ω 1/2 W. |
| C8 - 02-400V. | R8 - 14.3 Ω 5% |
| C9 - 05-400V. | R9 - 8.1 Ω 5% |
| C10 - 005-400V. | R10 - 100,000 Ω TONE CONTROL |
| C11 - 005-400V. | R11 - 500,000 Ω 1/2 W. |
| C12 - 01-600V. | R12 - 70,000 Ω 1/2 W. |
| C13 - 5-16V. | R13 - 200,000 Ω 1/2 W. |
| C14 - 05-200V. | R14 - 70 Ω 1/2 W. |
| C15 - 01-1000V. | R15 - 600,000 Ω 1/2 W. |
| C16 - 100 MMF. | |


FREQUENCY RANGES :
535 to 1730 KC
150 to 380 KC
5.6 to 18.1 MC

IF ALIGNMENT-Generator at 456 KC, connected to control grid of 6D8G thru a .05 MFD condenser, then peak the IF transformer trimmers for maximum response.

BROADCAST BAND - Generator at 1730 KC, the gang condenser out of mesh, peak oscillator trimmer. Dial and Generator at 1400 KC, peak antenna and pre-selector trimmers. Generator and dial at 600 KC, while


rocking variable condenser across signal, peak the oscillator padder to maximum. SHORTWAVE BAND - Generator to 18.1 MC, variable condenser at minimum, peak the S.W. oscillator trimmer. Generator and dial at 16 MC, peak antenna trimmer. No provisions for low frequency padding have been made in this band. Check response at 6 MC.

LONGWAVE BAND - Set gang condenser to minimum and generator to 380 KC, peak the longwave oscillator trimmer, then shift the generator signal to 325 KC, peak the antenna trimmer. Next set the generator to 160 KC, — then peak the longwave oscillator padding condenser to maximum response while rocking variable condenser.

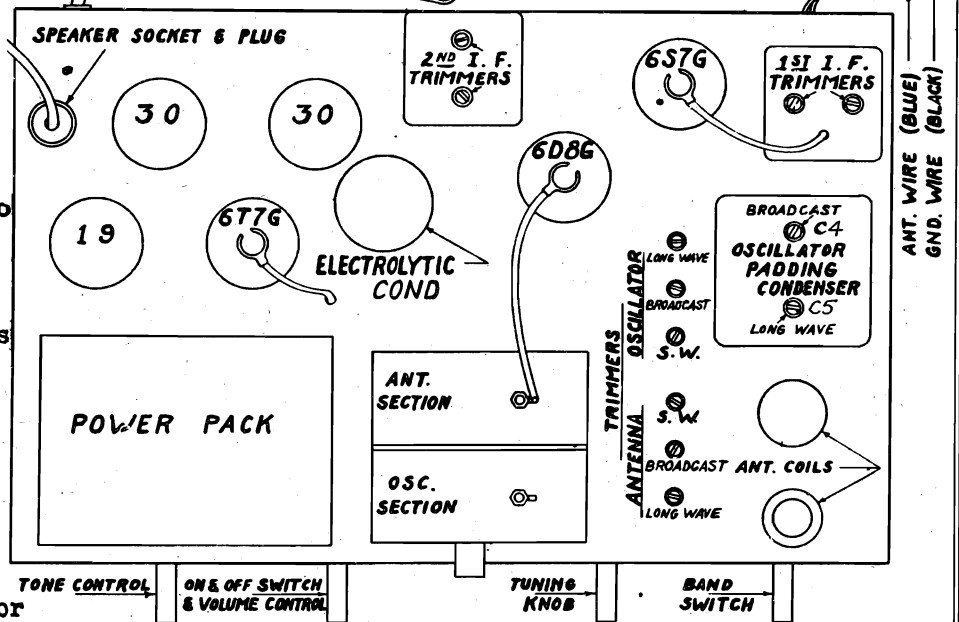

MODEL 7234, Ch. 105.7MU
Schematic, Socket
Alignment, Trimmers


SEARS, ROEBUCK & CO.

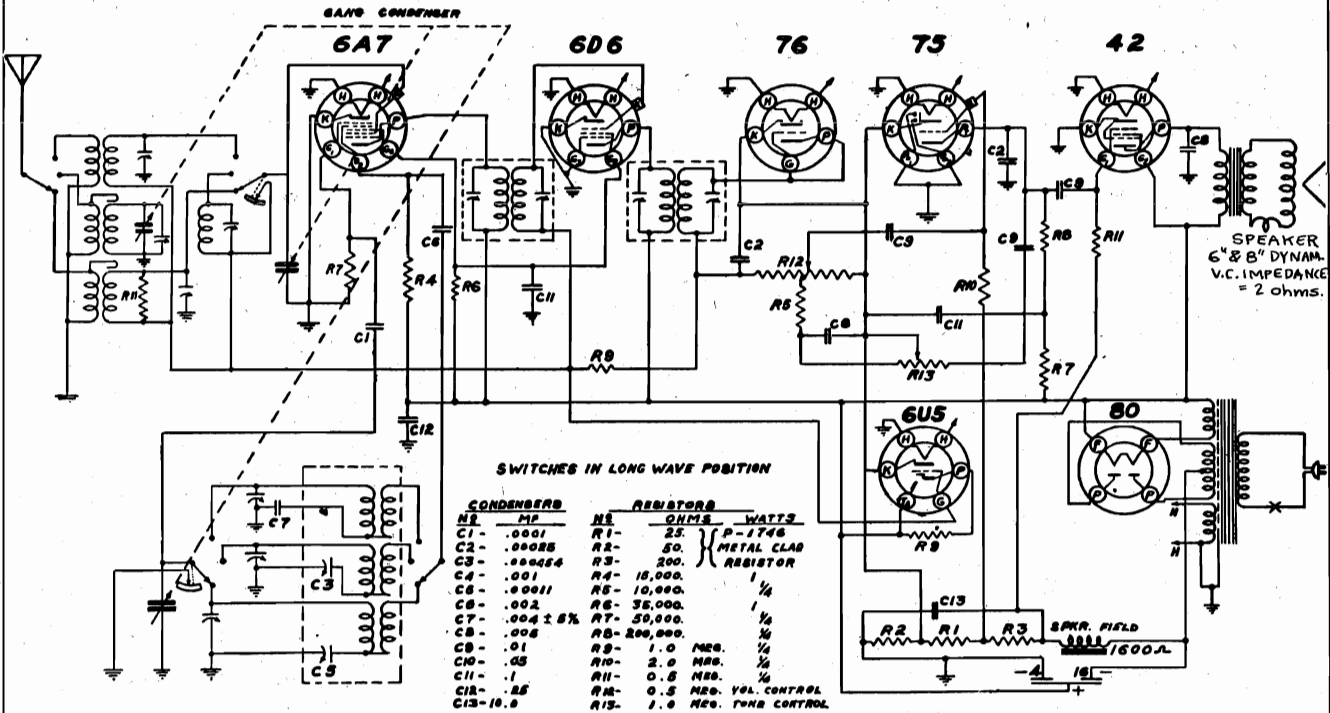

INTERMEDIATE FREQUENCY: 456 kc

SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"AM"	Fully closed	456 kc	.1 mfd	6A7 Grid	T 3 T 2	IF Output IF Input	45
"AM"	Fully open	1730 kc	.0002 mfd	Ant. Lead	C14	Oscillator	
"AM"	1400 kc	1400 kc	.0002 mfd	Ant. Lead	C15 C16	Preselector Antenna	10
"AM"	600 kc (rock)	600 kc	.0002 mfd	Ant. Lead	C3	Padder	8
"SW"	Fully open	18.1 mc	400 ohms	Ant. Lead	C18	Oscillator	
"SW"	16 mc	16 mc	400 ohms	Ant. Lead	C19	Antenna	16
"LW"	Fully open	380 kc	.0002 mfd	Ant. Lead	C20	Oscillator	
"LW"	920 meters	325 kc	.0002 mfd	Ant. Lead	C 21	Antenna	8
"LW"	1875 meters (rock)	160 kc	.0002 mfd	Ant. Lead	C5	Padder	15

POWER SUPPLY: Tapped-105-125-150-230 volts, 60 cycles, 56 watts

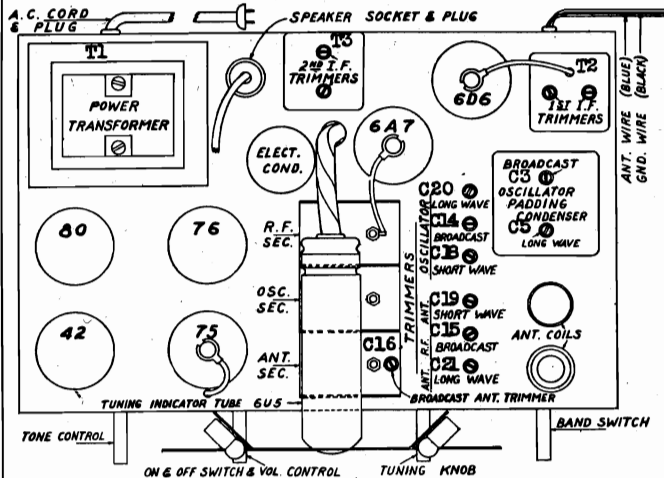

FREQUENCY RANGES:
Band "AM"..... 535 kc-1730 kc
Band "LW"..... 150 kc-380 kc
Band "SW"..... 5.6 mc-18.1 mc


POWER OUTPUT:
Type..... Pentode
Undistorted 2.5 watts
Maximum..... 3.5 watts

UNIVERSAL TRANSFORMER is used. Removing 2 screws and a shield on top of power transformer exposes terminal plate and pin connector. Inserting pin into clip marked with voltage at which set is to be used, permits operation on 105, 125, 150 or 230 volts. For use on AC ONLY.

MARCH 7, 1939

SEARS, ROEBUCK & CO.

MODEL 7235, Ch. 105.8KU
Schematic, Socket
Alignment, Trimmers
42 OUTPUT

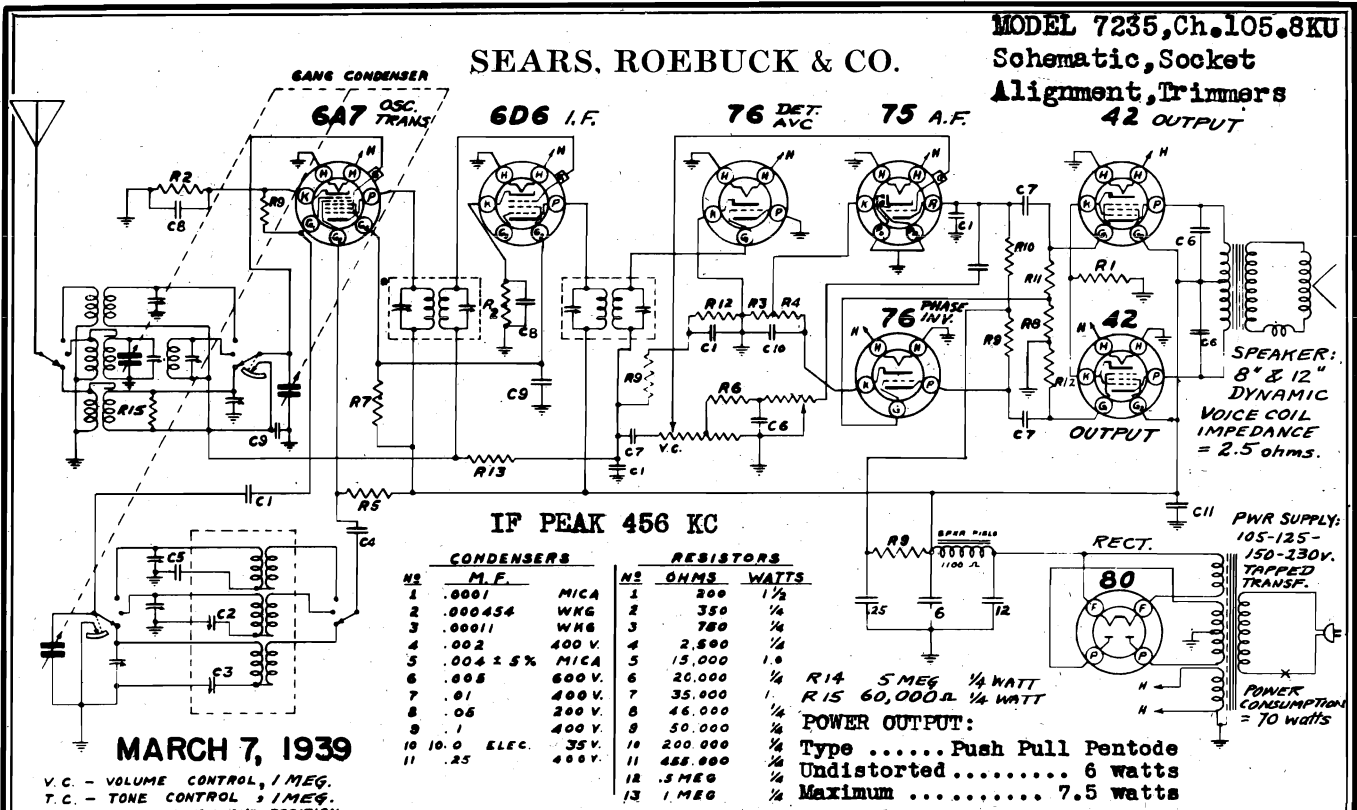

MARCH 7, 1939

V.C. - VOLUME CONTROL, 1/2 MEG.
T.C. - TONE CONTROL, 1/2 MEG.
SWITCHES IN LONG WAVE POSITION.

I.F. ALIGNMENT

With the wave switch in the Broadcast Band and the gang condenser set at minimum. Adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (6A7) through a .05 or .1 mfd. condenser. The ground on the test oscillator can be connected to the chassis ground. Align all four I.F. trimmers to peak or maximum reading on the output meter.


BROADCAST BAND ALIGNMENT

Connect the output of the signal generator to the antenna lead (blue) through a .0002 mfd. mica condenser. Set the gang condenser to minimum and the oscillator to 1730 KC and adjust the "oscillator trimmer" to receive this signal. Make no other adjustments at this frequency. Then set the generator to 1400 KC and tune in this signal by rotating the gang to 1400 on the dial. Adjust the "preselector" and "antenna" trimmer to maximum signal. Set the signal generator to 600 KC and tune in the signal on the receiver. **Note:** approximately the same sensitivity should be noted at this point as was at 1400 KC. The signal strength may sometimes be improved by padding the circuits. This is done by slowly increasing or decreasing the oscillator padding condenser and, at the same time, continuously tuning back and forth across the signal with the receiver until the maximum reading is obtained on the output meter. This adjustment may seem a little complicated but is the easiest way to adjust the oscillator to the preselector of the R.F. section. Return to 1400 KC and again go over the adjustments of this frequency to be certain that they were not put slightly out of alignment when adjustment was made at 600 K.C.

SHORT WAVE BAND ALIGNMENT

The short wave band is adjusted by setting the generator to 18,100 KC and with the gang at minimum, adjust the "short wave oscillator trimmer" to receive the signal. Set the generator at 16,000 KC, tune in the signal and adjust the "short wave antenna" trimmer to give maximum output. As there is no variable low frequency padding condenser on this band, the sensi-

POWER OUTPUT:
Type Push Pull Pentode
Undistorted 6 watts
Maximum 7.5 watts

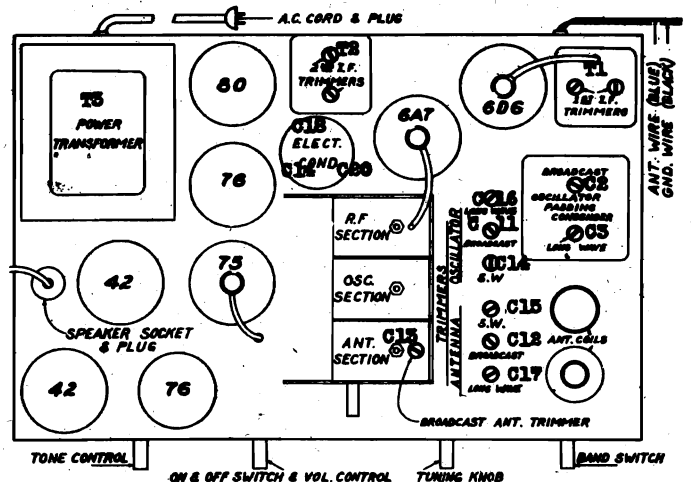

tivity of the receiver should be checked at 6000 KC to determine whether the circuits are in line at this frequency. Should the receiver lack sensitivity at 6000 KC, the antenna and oscillator coils, as well as the .004 mica padding condenser, should be tested for defects as sometimes these components become subject to mechanical or electrical injuries, despite their rugged construction and liberal ratings.

LONG WAVE BAND ALIGNMENT

The long wave band is adjusted by connecting the output of the signal generator through a .0002 Mfd. mica condenser to the blue antenna lead. Then set the gang to minimum and the generator to 380 KC and adjust the long wave oscillator trimmer to receive this signal. Then set the generator to 325 KC and adjust the long wave antenna trimmer to give maximum output. Next set generator to 160 KC and pad the circuits to maximum output. Owing to the nature of the long wave band, the trimmer and padding condensers react upon each other to quite a degree; consequently, several re-adjustments at the trimming and padding positions are required before the circuits are adjusted properly.

MODEL 7235
 MODEL 7236
 MODEL 7425
 Tuner Data

SEARS, ROEBUCK & CO.

MODEL 7235 (CHASSIS 105.8KU); MODEL 7236 (CHASSIS 105.8TU)

THE AUTOMATIC TUNING DIAL


CHOOSING THE STATIONS TO BE USED

The telephone dial has 10 buttons located in a ring within the dial scale. Make a list of 10 of your favorite stations which are tuned in regularly. Shown in Fig. 1A is the approximate frequency range that each button will cover. NOTE: If 2 stations happen to fall within the range of one button, one station will necessarily have to be tuned in with the selector knob.

PROCEDURE FOR ADJUSTING THE TELEPHONE DIAL BUTTONS

- (1) Choose one of the stations out of the list of stations selected and by means of the station selector very carefully tune in this station, noting at the same time the exact pointer location on the dial.
- (2) Now select the proper button for the first station chosen by referring to Fig. 1A and noting the button into whose range the station falls. For example, station WGN with a frequency of 720 KC comes under the button whose frequency ranges from 670-755 KC. Usually the button nearest the tuning point or the bottom of the dial will be the proper button.
- (3) Loosen the button by unscrewing it (not the dial) $\frac{1}{2}$ turn to the left. Now press the button in all the way and rock the dial back and forth a trifle until a click is heard. Do not release the button now but set the pointer to its former location and with the dial in this position, being careful not to move it, proceed to tighten the button by turning it in the opposite direction (to the right). Make sure the button is very securely tightened as it may get out of adjustment.
- (4) From the station call sheet supplied remove the proper station disc and insert into the push button so that the wording is horizontal when the button is at the bottom, and then insert a clear celluloid insert. Follow this same procedure for the remaining buttons.
- (5) If for any reason it is necessary to remove a station call letter disc, the use of a pen knife or any sharp pointed instrument will facilitate the removal.

MODEL 7425 CHASSIS 107.375

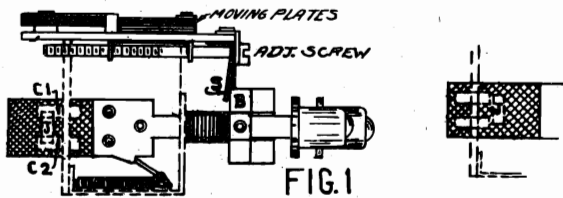

MECHANICAL ACTION OF THE PERM-A-MATIC TUNER

Fig. 1 shows one of the buttons depressed for a station. The trimmer panel assembly (for the antenna circuit) is designed with spring fingers "S" that make contact with cross bar "B" completing the ground circuit of the R.F. Trimmer.

When making the original set-up, the adjusting screw may indicate two positions for resonance. This is due to the possibility of the small amount of play in the screw thread and is of no concern as long as it is set to the exact resonance point.

The jumper contact "J" connects C1 contact to C2 contact with the button "IN". This completes the oscillator circuit for that particular button.

Fig. 2 shows the jumper position with the button "OUT".

Fig. 3 shows the manual OFF-ON button in the "OUT" position.

The "L" shaped sliding contact is the common cathode return circuit and alternates the bias on the 6K8 for manual tuning or on the 6A7 for push button tuning.

Fig. 4 shows the iron core movement within the oscillator coil. Its position is held stationary by the small spring wire across the coil form. The position of this spring must be such that no spring action is apparent from the end of the adjustment stud due to pressure with a screwdriver. Otherwise, when the screwdriver is removed, the core will shift out of position.

The button is held down by action of the latch bar and is released when another key raises the latch bar on its way down.

If it is necessary to replace a coil, mount it in line with the other coils and cement it in place.

FIG. 2

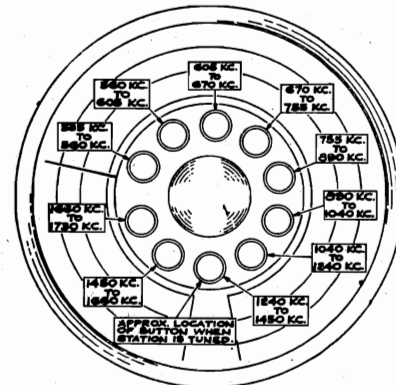


Fig. 1A

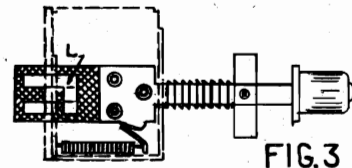


FIG. 3


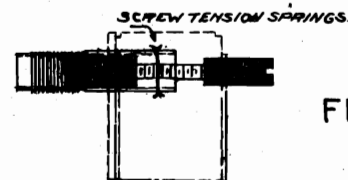


FIG. 4


SEARS. ROEBUCK & CO.

MODELS 7237, 7239
Ch.104.709
Schematic, Voltage

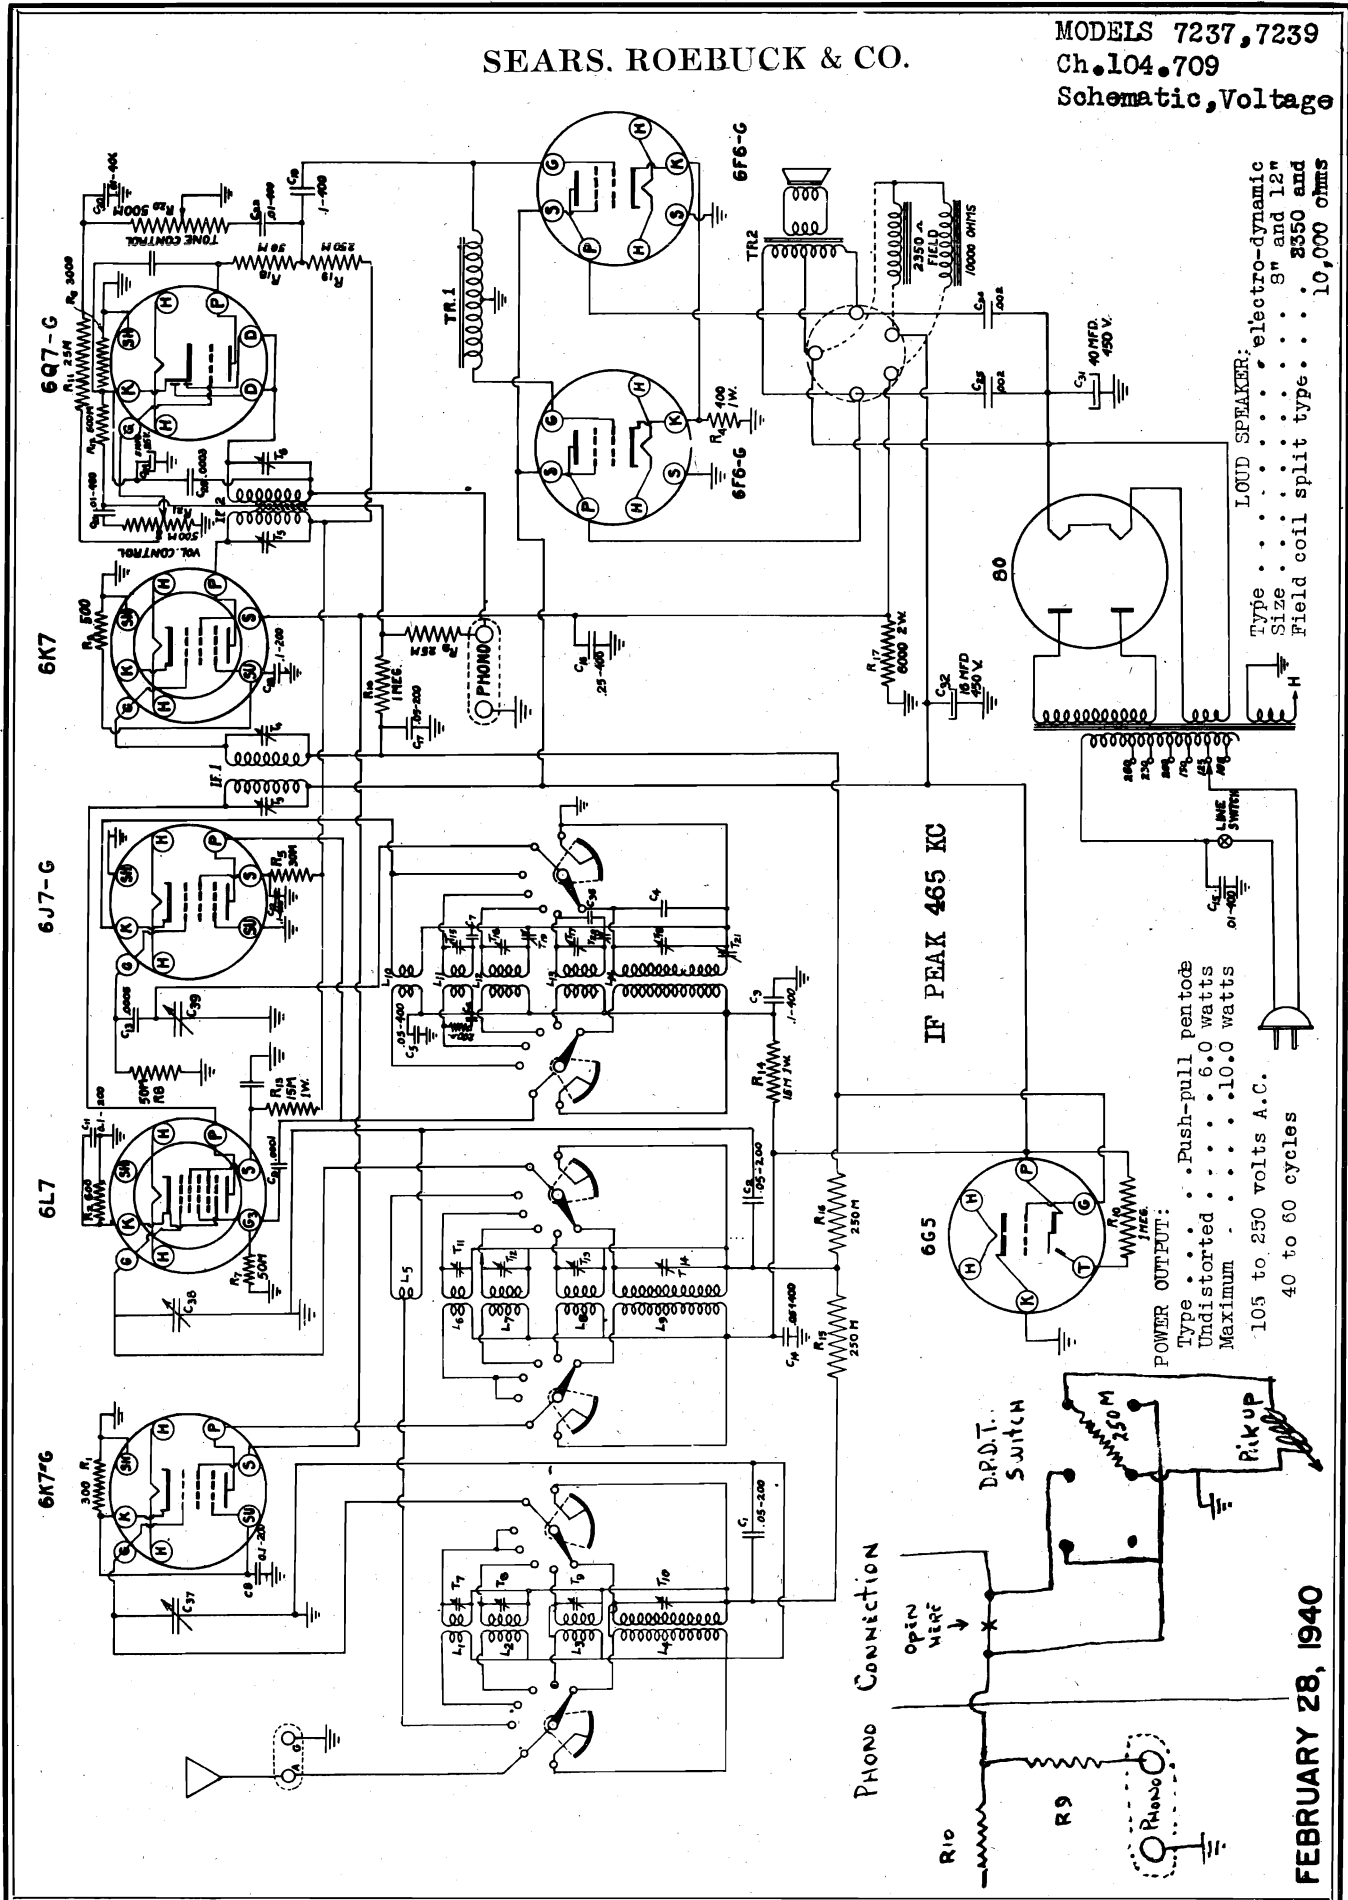

LOUD SPEAKER:
 Type electro-dynamic
 Size 8" and 12"
 Field coil split type 8550 and 10,000 ohms


POWER OUTPUT:
 Type Push-pull pentode
 Undistorted 6.0 watts
 Maximum 10.0 watts
 105 to 250 volts A.C.
 40 to 60 cycles

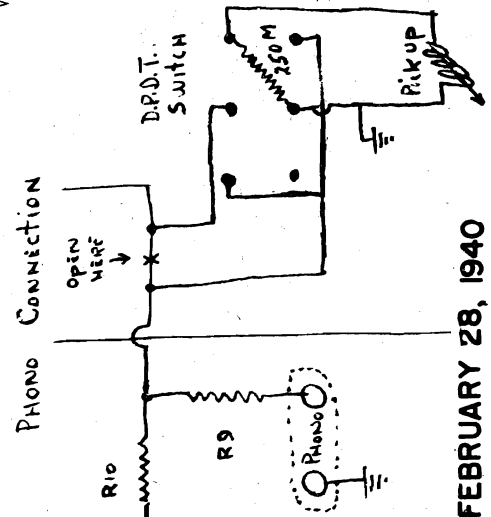

FEBRUARY 28, 1940

SEARS, ROEBUCK & CO.

MODELS 7237, 7239
Voltage, Socket
Trimmers, Coils
Voltage Connections
Alignment Notes

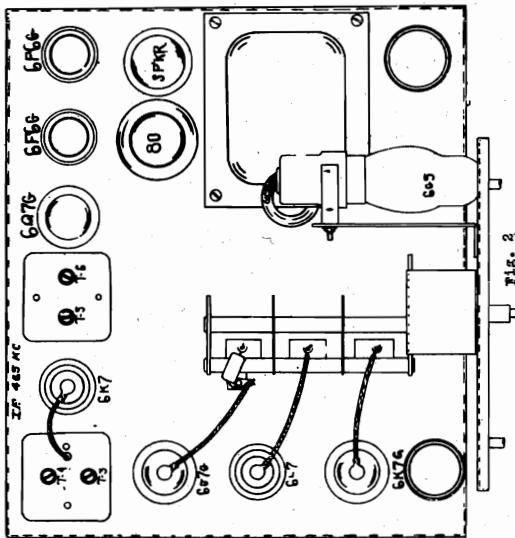

- ALIGNMENT FREQUENCIES:
- Band 1 1600 KC & 600
 - Band 26 MC
 - Band 3 18 MC
 - Band 4 no adjustment
 - Band 5375 KC
- FREQUENCY RANGES:
- Band 1 540-1750 KC
 - Band 2 1.75-6.0 MC
 - Band 3 6.0-18.0 MC
 - Band 4 15.0-40 MC
 - Band 5 750-2100 meters (longwave)

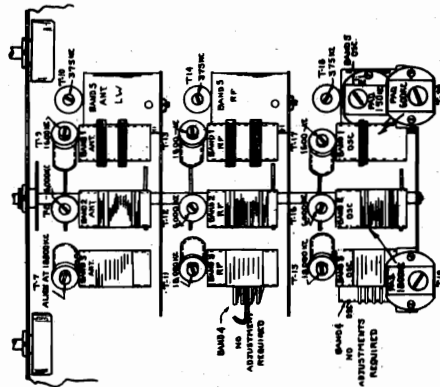


FIG. 3

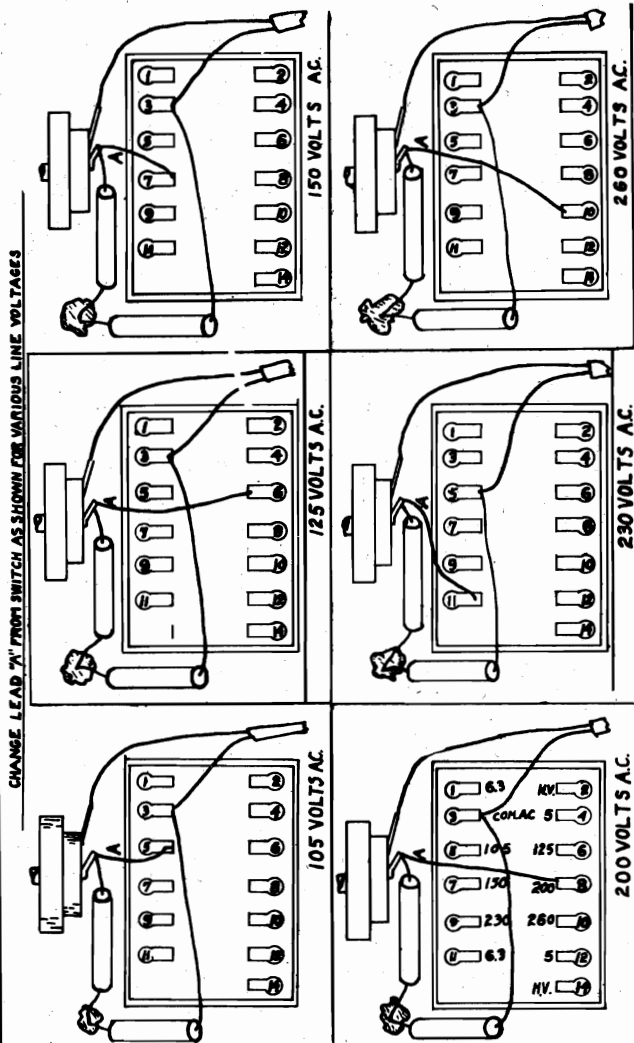


Fig. 1
All Voltages taken from ground with line voltage 115 volts.

TUBE	POSITION	PLATE	SCREEN GRID	CATHODE	FILAMENT
6K7-G	1st. R.F.	250 V.	115 V.	2 V.	6 V.
6L7	Mixer	245 V.	172 V.	5.5 V.	6 V.
6J7-4	Oscillator	195 V.	155 V.	-	6 V.
6K7	I.F.	245 V.	115 V.	3.5 V.	6 V.
6Q7-G	Diode Det.	60 V.	-	1 V.	6 V.
6P6-G	P.P. Audio	325 V.	250 V.	19 V.	6 V.
6P8-G	P.P. Audio	325 V.	250 V.	19 V.	6 V.

IMPORTANT ALIGNMENT NOTES

It is assumed that if an alignment procedure becomes necessary that the serviceman has an oscillator capable of accurately covering the range of the receiver and that a meter output indicator is used.

The I.F. stages are aligned in the usual manner by feeding a 465 KC signal into the grid of the 6L7 tube.

Follow Fig. 2 and Fig. 3 showing trimmer locations and alignment frequency.

Always adjust the oscillator first in any particular band.

Use as low an output as possible from the test oscillator in making the various adjustments.

After trimming at the high frequency end of the dial and adjusting the padding condenser at the other end, always recheck the settings of the trimmer at the high frequency end of the dial.

BEFORE STARTING ALIGNMENT CHECK POSITION OF TUNING HAND AND MAKE CERTAIN THAT IT IS EXACTLY STRAIGHT ACROSS ON THE FIRST CALIBRATION LINE WHEN THE CONDENSERS ARE AT MAXIMUM CAPACITY ROTATION.

MODELS 7241, 7241A
 Ch.109.246
 MODELS 7242, 7242A
 Ch.109.190

SEARS, ROEBUCK & CO.

Automatic Tuner Data

ELECTRIC AUTOMATIC TUNING INSTRUCTIONS

ELECTRIC AUTOMATIC TUNING

The tuning unit consists of three parts. (1) The MASTER SELECTOR. This includes the SELECTOR DRUM, and the SELECTOR PINS. These parts are located on the back of the variable condenser together with their associated brackets and wiring. (2) MOTOR and DRIVE. This assembly consists of an induction motor having a mechanical clutch with magnetic throw out, a train of gears operating directly onto the manual tuning shaft. (3) PUSH BUTTON ASSEMBLY. These buttons are located on the front of the chassis and extend through the escutcheon below the dial.



SETTING UP THE MASTER SELECTOR

List eight local or strong stations according to frequency. Setting up weak or distant stations is not recommended. Call the station nearest the left hand end of the dial (nearest 1600 KC.) the No. 1 Station. Number the other stations similarly going from left to right across the dial. On the back of the receiver will be found the SELECTOR DRUM and the eight CONTACT PINS which determine the point at which the tuner will stop when the buttons are pressed. Figure 1 shows the general layout and relation of the drum and contacts. Figure 2 shows one of the contact pins in detail. Figure 3 shows the arrangement of the contact pins, each pin being numbered according to the system suggested for numbering the stations.

On the SELECTOR DRUM are two pairs of CONTACT RIBBONS. Note that there is a paint dot on the edge of the drum directly opposite the break in the ribbons on the upper half of the drum. This is for locating the approximate position at which a given CONTACT PIN should be set in order to have the DRUM stop for a particular station.

IT IS IMPORTANT THAT THE FOLLOWING STEPS BE FOLLOWED EXACTLY AS OUTLINED:


- (1) Turn the wave switch to the "Broadcast" position. Turn the receiver ON and let it run for at least ten minutes to allow the tubes to reach their final operating temperature.
- (2) Using the MANUAL STATION SELECTOR, tune in the No. 1 station, that is the one nearest the 1600 KC. end of the dial. Watch the tuning tube closely, making certain that the station is tuned in perfectly.
- (3) Attach the SELECTOR LIGHT lead to the No. 1 pin. This lead has a spring clip at the end and will be found clipped to a ground post at the top of the selector bracket. Unless the pin happens to be set exactly the DIAL LIGHTS will glow when the lead is touched to the pin.
- (4) Observe the position of the paint dot on the edge of the DRUM. Grasp the No. 1 pin firmly and slide it toward the paint dot. When the PIN is directly opposite the paint dot the lights will go out indicating that the pin is properly set. To insure the greatest accuracy slide the pin back and forth across the break in the ribbons, leaving it set half way between the points where the lights go out.
- (5) Using similar procedure set up the other seven stations, in each case using the pin bearing the same number as the station being set up.
- (6) Locate the CALL LETTERS of your stations on the printed sheets supplied with the receiver and insert them in the proper pockets above the buttons.
- (7) The only operations necessary to tune in any of the eight stations set up as outlined above are: Turn the receiver ON, allow an interval of time for the tubes to heat and press the button for the station desired HOLDING THE BUTTON DOWN UNTIL THE POINTER STOPS MOVING. Then adjust the tone and volume.

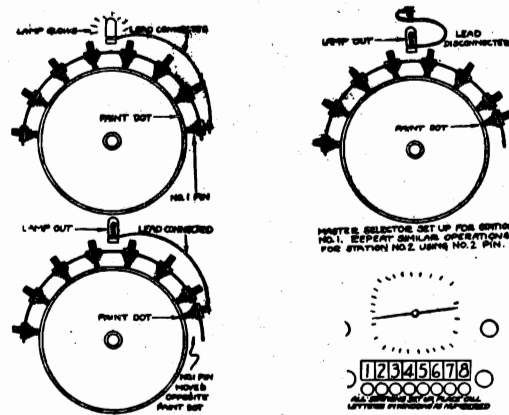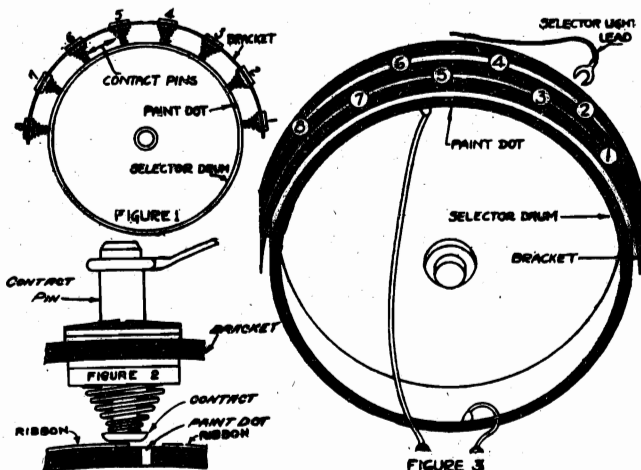

Note that in Chassis 109.190, ten contact pins are provided.

SEARS, ROEBUCK & CO.

MODEL 7236, Ch. 105.8TU
Schematic, Alignment
Trimmers, Socket

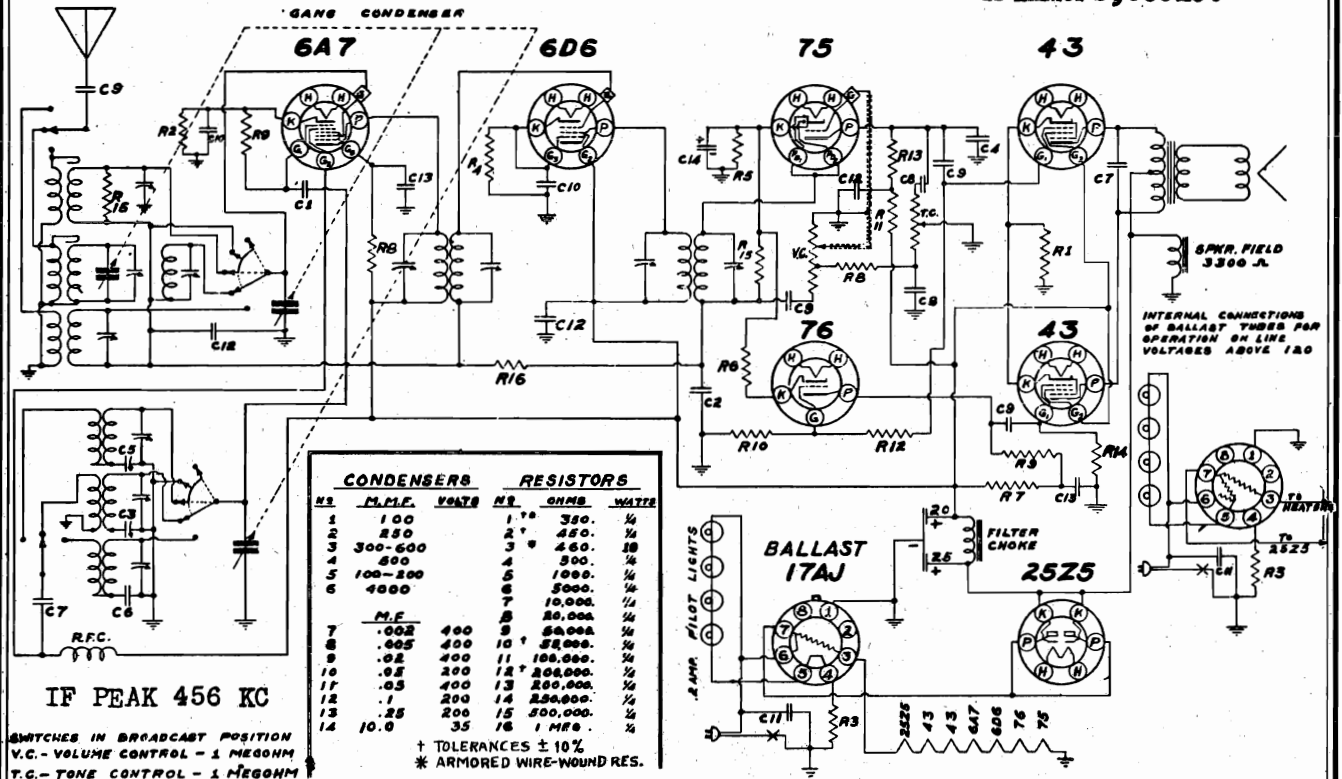

IF PEAK 456 KC
SWITCHES IN BROADCAST POSITION
V.C. - VOLUME CONTROL - 1 MEGOHM
T.C. - TONE CONTROL - 1 MEGOHM

POWER SUPPLY:.....105-125 volts, 60 cycles, AC or DC, 70 watts


WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"AM"	Closed	456 kc	.1 mfd	6A7 Grid	T2 T1	IF Output IF Input	45
"AM"	Fully open	1730 kc	.0002 mfd	Ant. Lead	C 17	Oscillator	
"AM"	1400 kc	1400 kc	.0002 mfd	Ant. Lead	C18 C19	Preselector Antenna	10
"AM"	600 kc(rock)	500 kc	.0002 mfd	Ant. Lead	C3	Padder	8
"SW"	Fully open	18.1 mc	400 ohm	Ant. Lead	C20	Oscillator	
"SW"	16 mc	16 mc	400 ohm	Ant. Lead	C21	Antenna	16
"LW"	Fully open	380 kc	.0002 mfd	Ant. Lead	C22	Oscillator	
"LW"	920 meters	325 kc	.0002 mfd	Ant. Lead	C 23	Antenna	8
"LW"	1875 meters	160 ke (rock)	.0002 mfd	Ant. Lead	C5	Padder	15

For PUSH-BUTTON TUNER, see Index

FREQUENCY RANGES:
Band "AM"..... 535 kc-1750 kc
Band "LW".....150 kc-375 kc
Band "SW".....5.6 mc-18.1 mc

POWER OUTPUT:
Type..... Push Pull Pentode
Undistorted..... 1.8 watts
Maximum.....2.5 watts


LOUD SPEAKER:
Type..... Dynamic
Size 8 and 12 inch
Field coil resistance..... 3000 ohms
Voice coil impedance..... 2.5 ohms

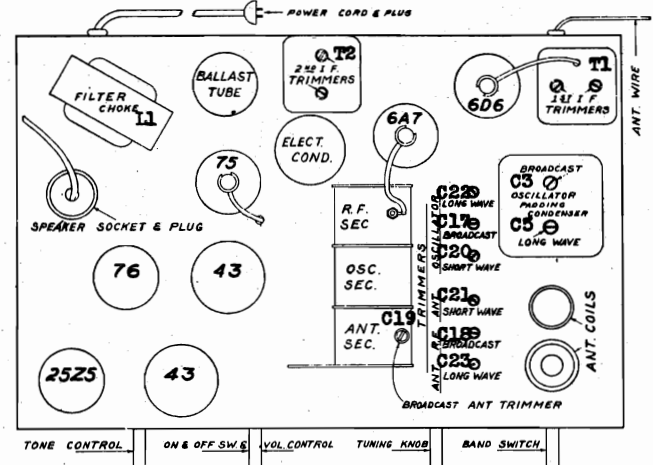

MARCH 7, 1939

MODELS 7242, 7242A
 Ch. 109.190
 Schematic, Socket
 Alignment, Trimmers

SEARS, ROEBUCK & CO.

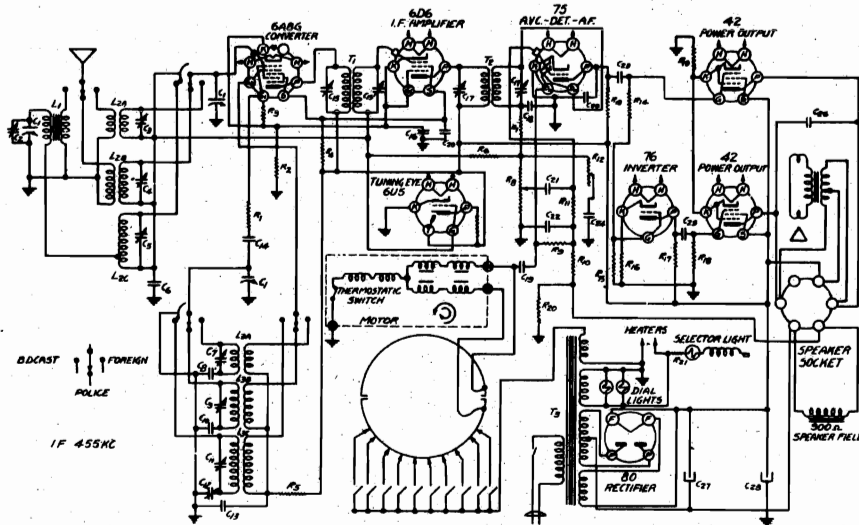



For ELECTRIC AUTOMATIC TUNING, see Index.

POWER SUPPLY: 105-125 volts, 60 cycles
 80 watts

FREQUENCY RANGES: 540 to 1650 KC
 1650 to 5400 KC
 5250 to 16000 KC

POWER OUTPUT: Undistorted = 3 watts
 Maximum = 5 watts

LOUD SPEAKER: Type, Dynamic
 Size, 8-inch
 Field Resistance=900 ohms

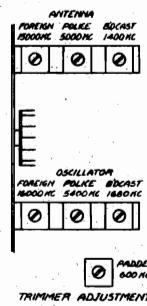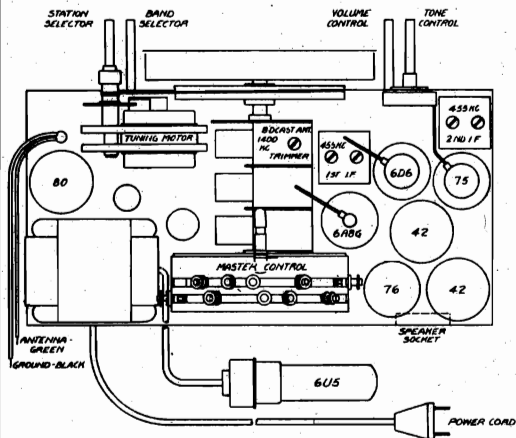

JAN. 5, 1939

ALIGNMENT PROCEDURE

Connect an output meter across the speaker voice coil. The volume control should be set a few degrees back of the maximum volume position. Use a weak signal from the generator. Strong signals tend to cause improper adjustments.

IF. Connect the generator ground to the receiver chassis. Using a .1 mfd. condenser in series with the high side of the generator, apply a 455 KC signal to the grid of the 6D6 IF amplifier tube and align the 2nd IF transformer. Repeat for the 1st IF transformer, applying the signal to the grid of the 6A8G tube. (See tube layout diagram for location of trimmers.)

RF. Using a 200 mmf condenser as a "dummy" antenna. Turn the wave switch to the "Broadcast" position and the tuning condenser to minimum capacity. Feed a 1680 KC signal to the antenna and adjust the broadcast oscillator trimmer for top frequency. Set the generator at about 1400 KC and adjust the broadcast antenna and RF trimmers. Set the generator for 600 KC., tune the receiver to the signal and adjust the padder. The tuning condenser should be rocked back and forth through the signal while varying the padder to assure perfect alignment.

A 400 ohm resistor must be used as a dummy antenna for proper alignment of the short wave bands. Set the wave switch in the center position, adjust the oscillator top frequency to 5400 KC., Then align the antenna trimmer at about 5000 KC. With the wave switch in the extreme right hand position adjust the oscillator top frequency of the high frequency band to 16000 KC., and align the antenna at about 15000 KC. In order to be sure that the top end of the last band is set properly, it is best to screw the oscillator trimmer down tight, then unscrew to the second peak. The antenna trimmer should be screwed down tight then unscrewed to the first peak. This procedure should be followed in order that the oscillator and antenna circuits will be set in the correct relation to each other. It is best to rock the tuning condenser back and forth through the signal while making these adjustments at high frequencies.


MODELS 7251, Ch. 110.988

7246, 7251, Ch. 110.988-1A, -2 SEARS, ROEBUCK & CO.


FOR ALIGNMENT SEE INDEX

Schematics, Socket, Trimmers


WIRING DIAGRAM FOR SILVERTONE CHASSIS 110.988

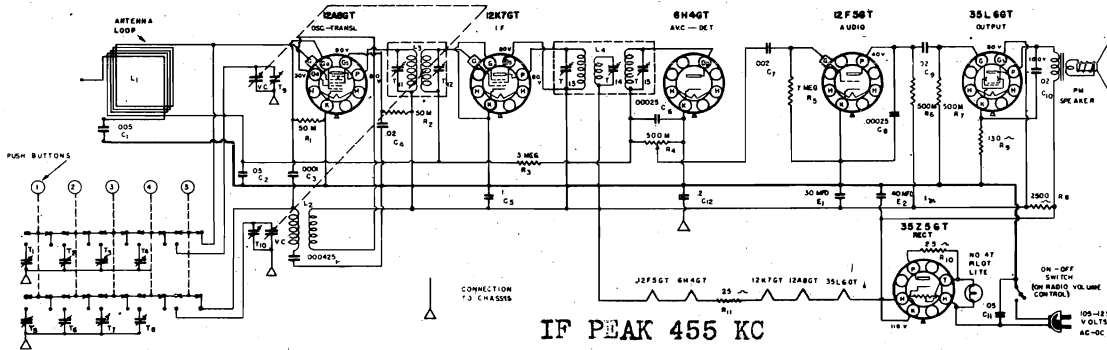

WIRING DIAGRAM FOR SILVERTONE CHASSIS 110.988-1A

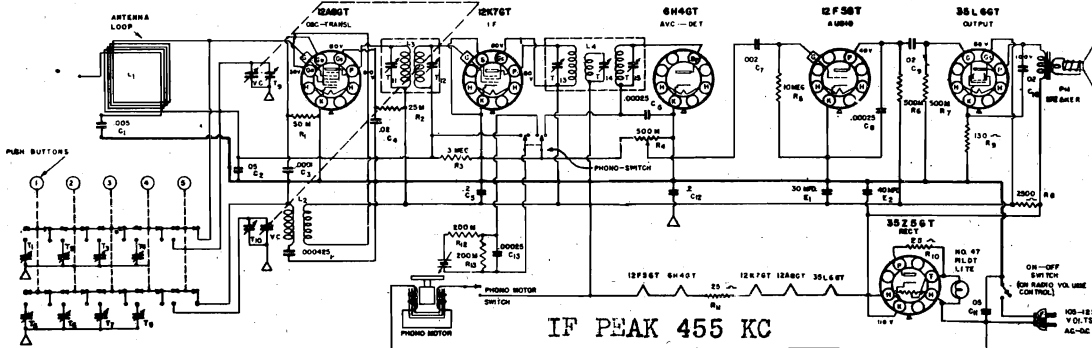

WIRING DIAGRAM FOR SILVERTONE CHASSIS 110.988-2

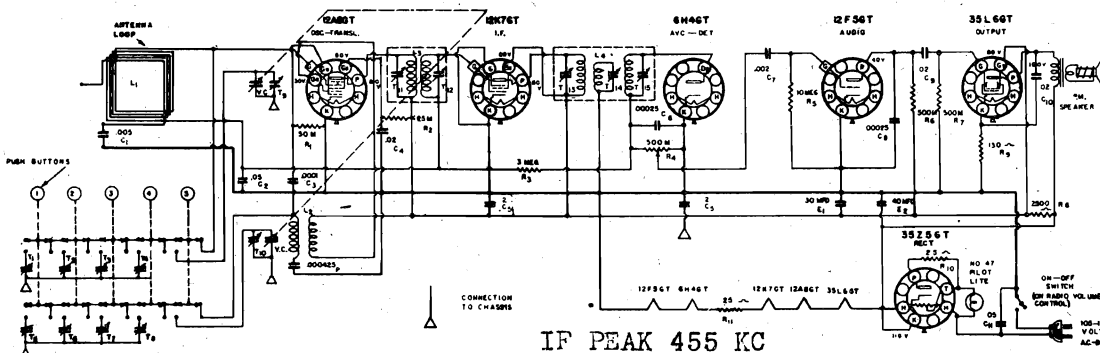

POWER SUPPLY:



All models available
110-125 volts, 25-60 cycle AC or DC, 30 watts

LOUD SPEAKER:

Type.....Dynamic
Size.....5"
Field.....P.M.

POWER OUTPUT:


Type.....Beam Power
Undistorted.....1.0
Maximum.....1.5

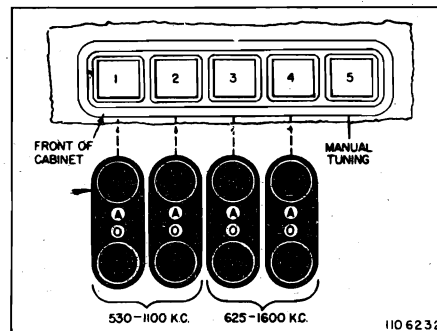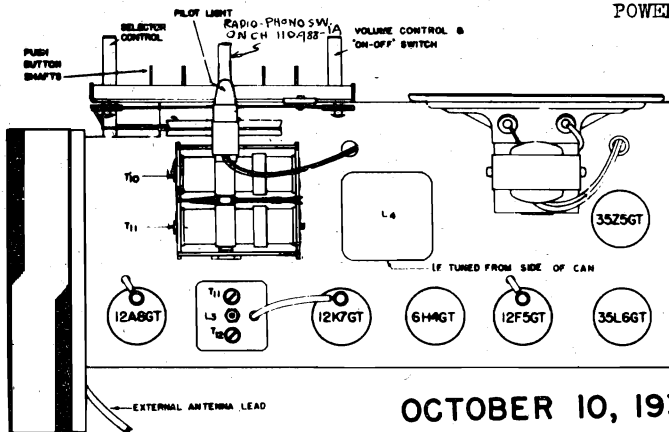


OCTOBER 10, 1939

SEARS, ROEBUCK & CO.

MODEL 7300 (Export)
Ch. 126.216
Schematic, Voltage
Phono. Connections

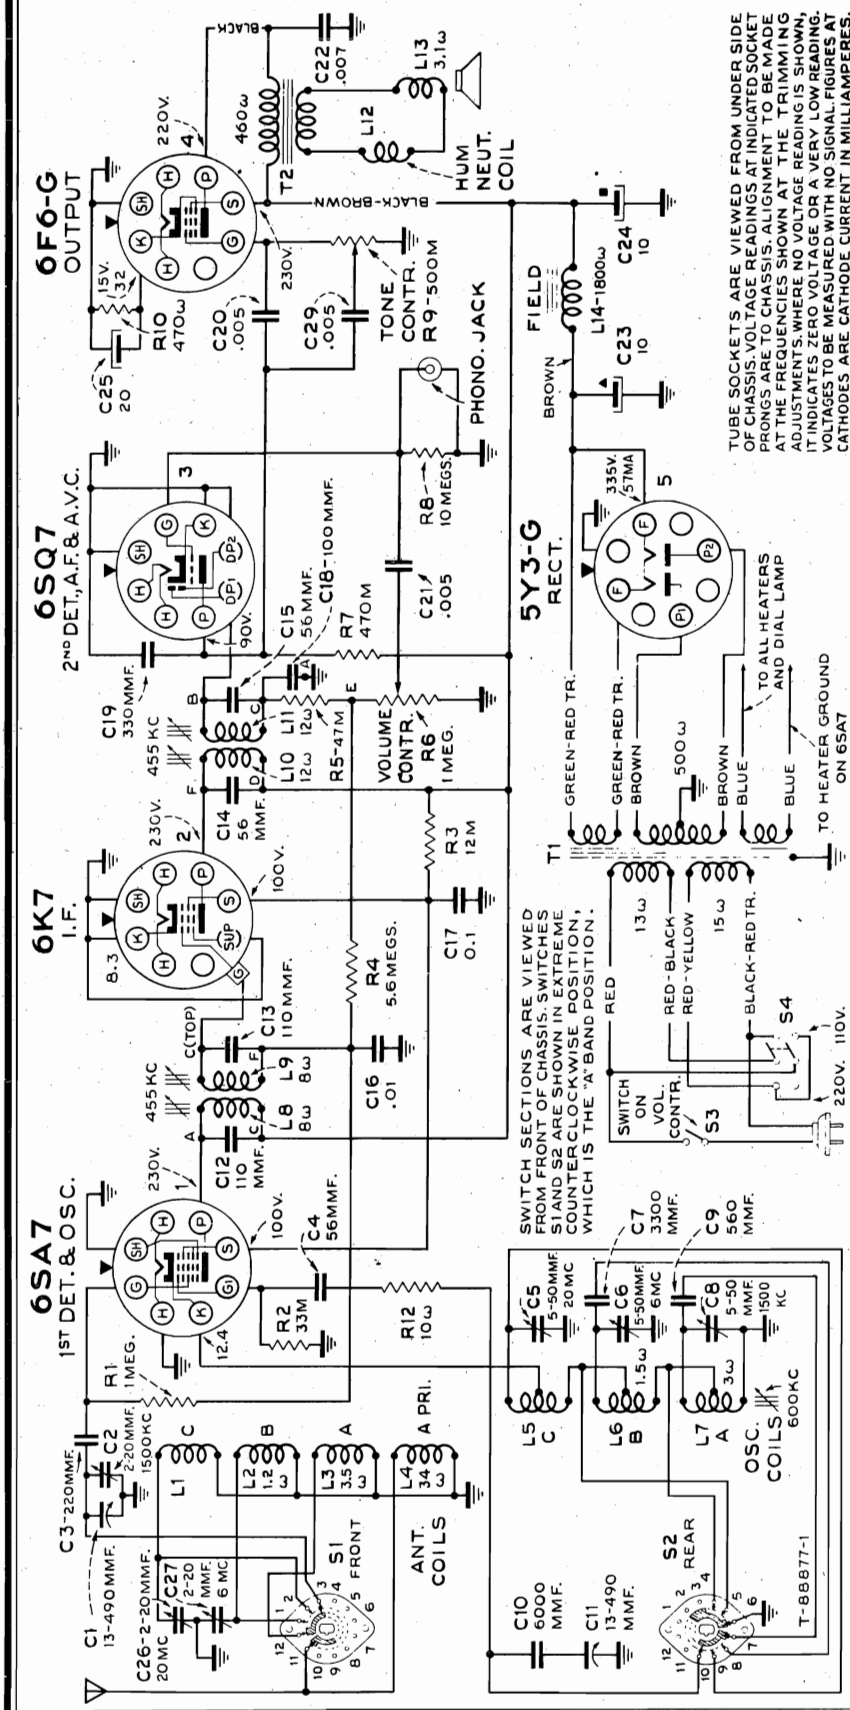

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. ALIGNMENT TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMING ADJUSTMENT S. WHERE NO VOLTAGE READING IS SHOWN, INDICATED FREQUENCY IS TO BE USED. VOLTAGES TO BE MEASURED WITH NO SIGNAL. FIGURES AT CATHODES ARE CATHODE CURRENT IN MILLIAMPERES.

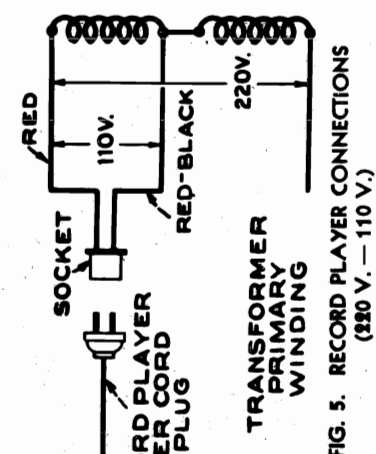

TRANSFORMER PRIMARY WINDING
FIG. 5. RECORD PLAYER CONNECTIONS (220 V. — 110 V.)

AUGUST 7, 1939

FREQUENCY RANGES:
(A) Standard Broadcast... 540-1,720 kc (550-174 m)
(B) Medium Wave... 2.3-7.0 mc (130-42.8 m)
(C) Short Wave... 7.0-22.0 mc (42.0-13.6 m)

INTERMEDIATE FREQUENCY..... 455 kc

ALIGNMENT FREQUENCIES:
Band "A"..... 600 kc (osc.) 1,500 kc (ant., osc.)
Band "B"..... 6 mc (osc., ant.)
Band "C"..... 20 mc (osc., ant.)

Record Player:
A jack is provided on the rear of chassis for connection to a No. 6227 Silvertone Record Player which is supplied only in 100-125 volts, 25, 50 or 60 cycle rating. If receiver is to be used on 220 volts, it will be necessary to connect the Record Player power cord to the 110V. primary section of the Power Transformer as shown in Figure 5.

LOUDSPEAKER:
Type..... 6-inch Electrodynamic
Voice Coil Impedance..... 3.4 ohm at 400 cycles
Field Coil Resistance..... 1,800 ohms
App. Field Coil Voltage Drop..... 100 volts
The loudspeaker cone may be centered in the usual manner with three celluloid or paper feelers after gently cutting away the front dust cover. A new cover should be cemented in place upon completion of the adjustment.

POWER OUTPUT:
Type..... Pentode
Undistorted..... 1.5 watts
Maximum..... 3.3 watts

POWER SUPPLY RATING AVAILABLE:
105-125 volts, 25 cycles, 70 watts
105-125/200-250 volts, 50-60 cycles, 70 watts

Dial Lamp..... Mazda 44, 6.3 volts, 0.25 amp.

MODEL 7300

Chassis Wiring, Socket Trimmers, Dial, Notes

SEARS, ROEBUCK & CO.

Calibration Scale on Variable Condenser Drive Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment when chassis is out of cabinet; therefore, a calibration scale is attached to the rear of the drum which is mounted on the shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 45° mark on the drum scale (see "Dial Drive Drawing") must be in a horizontal position when the plates are fully meshed. The distance from the edge of the chassis to the drum must not exceed 3/8-inch. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "0" mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial pointer to the drive cable with variable condenser fully closed and pointer on last calibration mark at 550 kc end of Broadcast "A" band. The dial pointer has a spring clip for attachment to the cable.

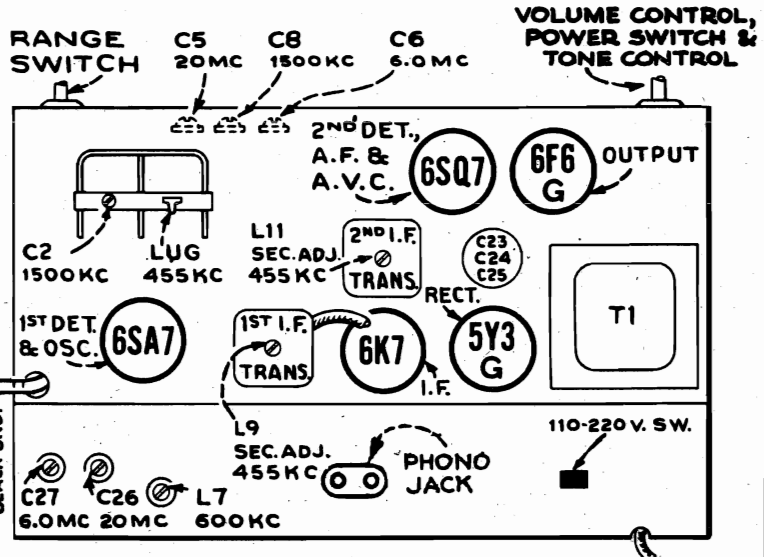


FIG. 1. TUBE, TRIMMER AND PARTS LOCATION

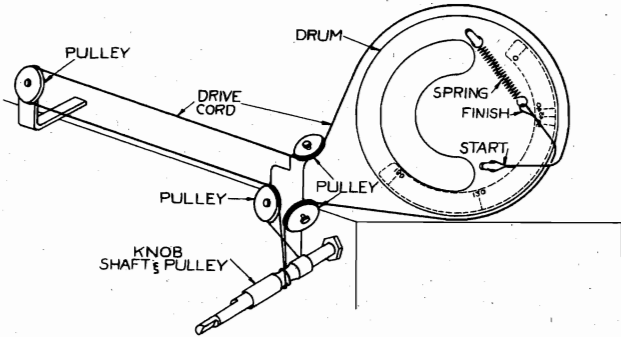


FIG. 2. CONDENSER AND INDICATOR DRIVE CORD

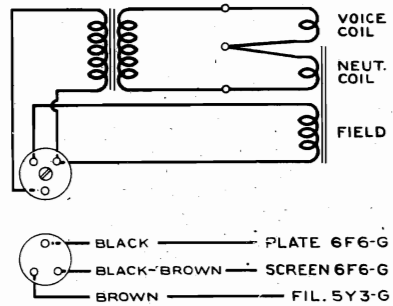


FIG. 3. SPEAKER AND CABLE CONNECTIONS

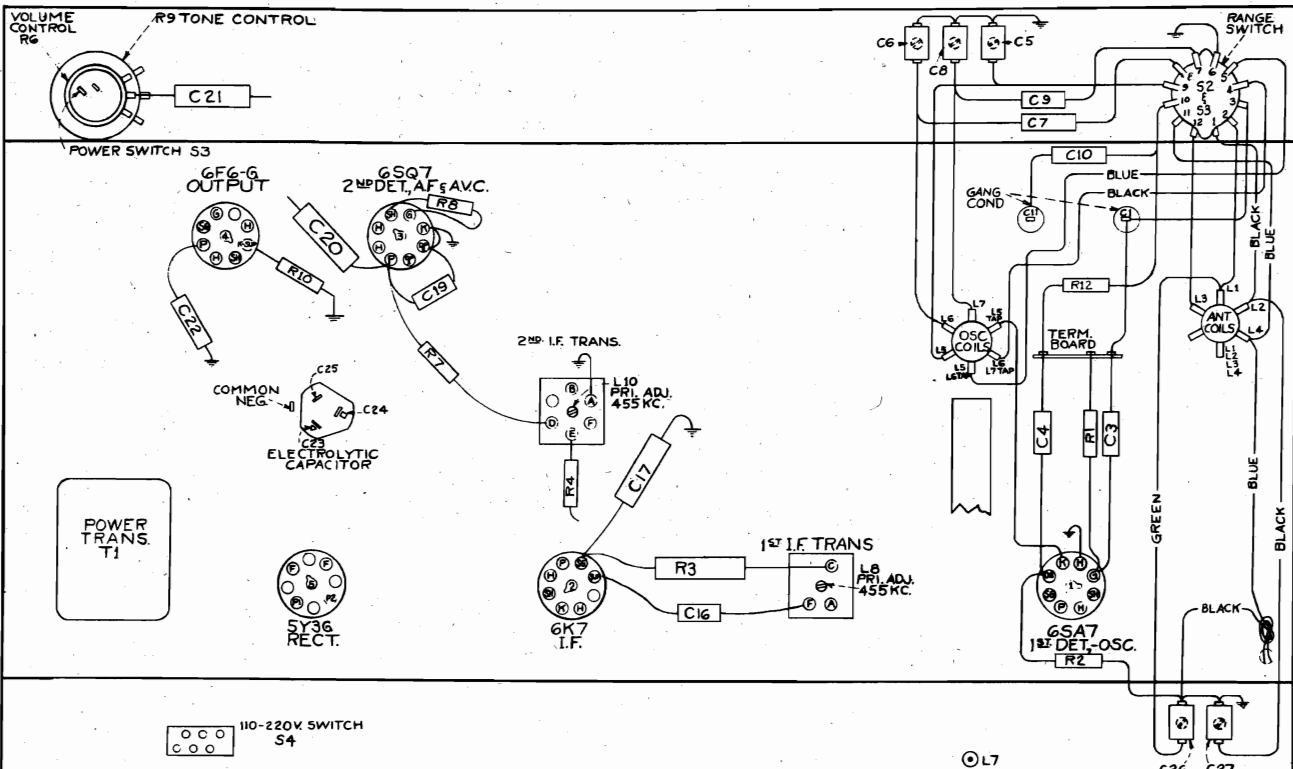


FIG. 4. TUBE, TRIMMER AND PARTS LOCATION—BOTTOM VIEW

SEARS, ROEBUCK & CO.

MODEL 7300
Alignment

ALIGNMENT PROCEDURE


PRELIMINARY:

- Output meter connections..... Across speaker voice coil
- Output meter reading to indicate 1.0 watt output..... 1.6 volts
- Approximate average sensitivity in microvolts for 1.0 watt output..... See chart below
- Dummy antenna value to be inserted in series with generator output..... See chart below
- Connection of generator output lead..... See chart below
- Connection of generator ground lead..... To chassis
- Generator modulation..... 30%, 400 cycles
- Position of Volume Control..... Fully Clockwise
- Position of Tone Control..... Fully Clockwise

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connection	Trimmers Adjusted (In order shown)	Trimmer Function	Approximate Microvolts
"A"	Low End	455 kc	.001 mfd.	6K7 I-F Grid	L10, L11	2nd I-F Trans.	3,500
"A"	Low End	455 kc	.001 mfd.	Tuning Condenser Stator (osc.)	L8, L9	1st I-F Trans.	85
"A"	600 kc (33°) (rock)	600 kc	.0002 mfd.	Ant.	L7	Osc.	15
"A"	1,500 kc (152.4°)	1,500 kc	.0002 mfd.	Ant.	C8, C2	Osc., Ant.	—
"C"	20 mc (155.4°)	20 mc	300 ohms	Ant.	C5	Osc.*	—
"C"	20 mc (155.4°) (rock)	20 mc	300 ohms	Ant.	C26	Ant.	95
"B"	6.0 mc (149°)	6.0 mc	300 ohms	Ant.	C6	Osc.*	15
"B"	6.0 mc (149°)	6.0 mc	300 ohms	Ant.	C27	Ant.	—
"A"	1,500 kc (150.5°)	1,500 kc	.0002 mfd.	Ant.	C29, C3	Osc., Ant.	15

IMPORTANT ALIGNMENT NOTES

*Use minimum capacity peak if two peaks can be obtained.
 Where indicated by the word "Rock," the variable tuning condenser should be rocked back and forth a degree or two while making this adjustment.
 Each step of the alignment should be repeated in its original order for greater accuracy. Always keep the output from the generator at its lowest possible value to prevent the a-v-c action of the set interfering with accurate alignment.
 Adjustment locations are shown on the top and bottom parts location views of chassis.
 Only the dummy antenna indicated in the chart for any particular band should be used. Remove the dummy used for alignment in any other band. Grid cap leads should remain in place during alignment.
 Note.—Oscillator tracks 455 kc above signal on all bands.
 Values shown under, "Microvolts," are only approximate.

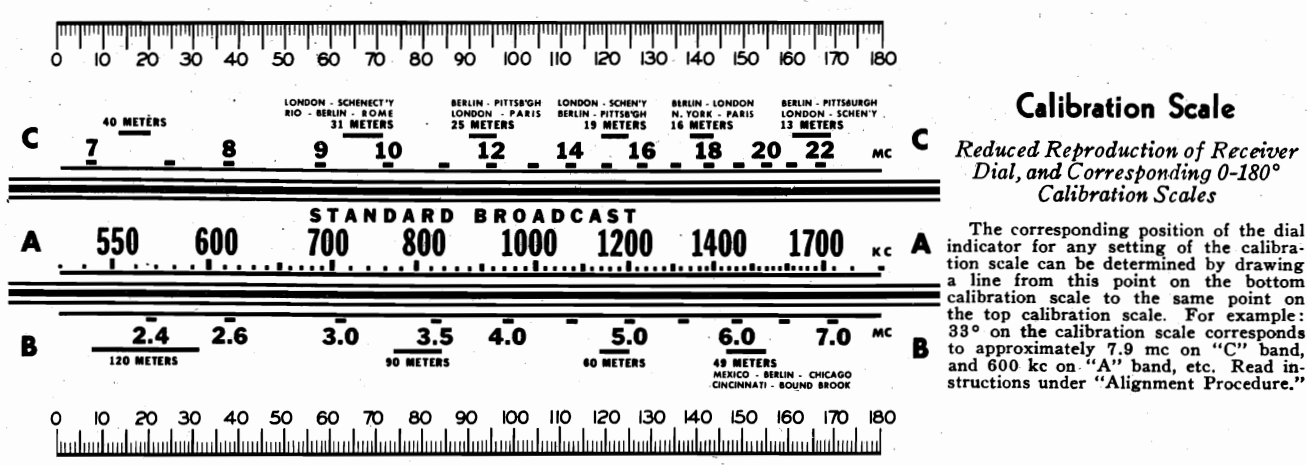

MODEL 7306 (Export)
Ch. 126.218
Schematic, Voltage

SEARS, ROEBUCK & CO.

FOR ALIGNMENT
 SEE INDEX

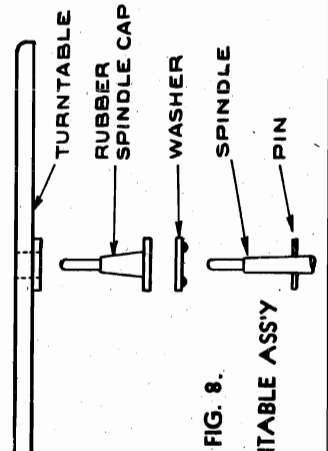
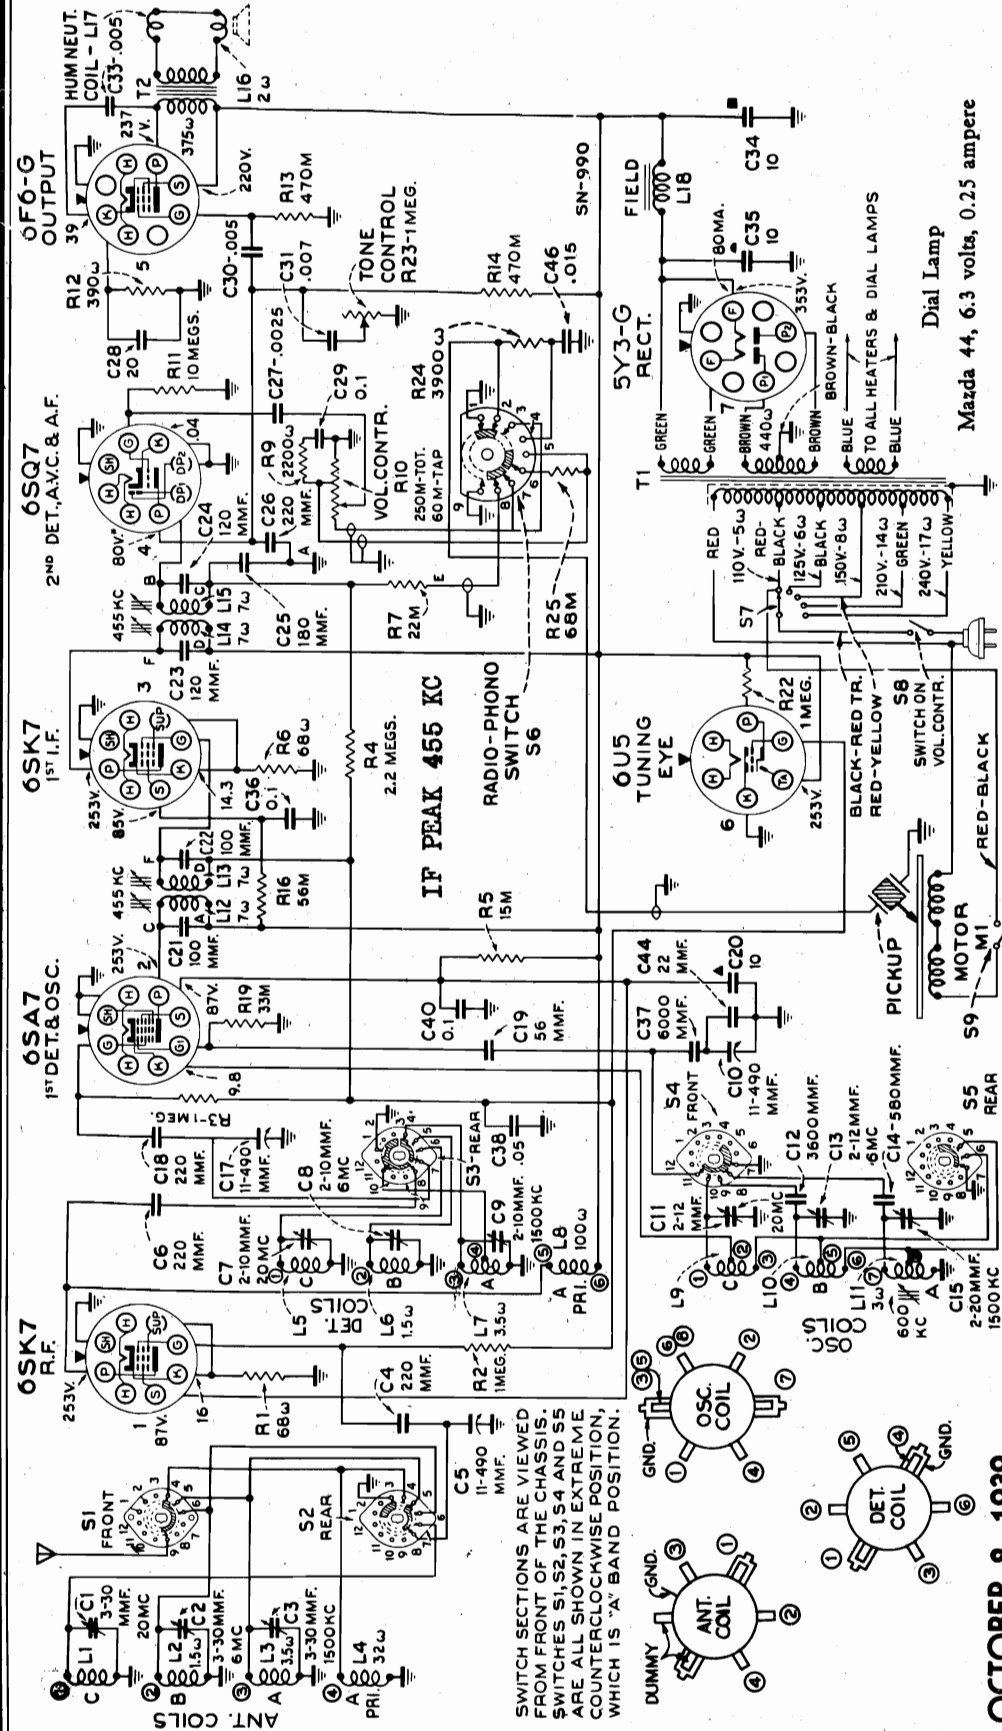


FIG. 8.

WHERE NO VOLTAGE READING IS SHOWN, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. VOLTAGES ARE TO BE MEASURED WITH NO SIGNAL. FIGURES AT CATHODES ARE THE CATHODE CURRENT IN MILLIAMPERES.

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. ALIGNMENT IS TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMING ADJUSTMENTS.

PHONOGRAPH: (Model 7306)

- Type..... Manual
- Motor..... Self-Starting
- Turntable Speed..... 78 R.P.M.
- Pickup..... Crystal, Impedance 100,000 ohms at 1,000 cycles

OCTOBER 2, 1939


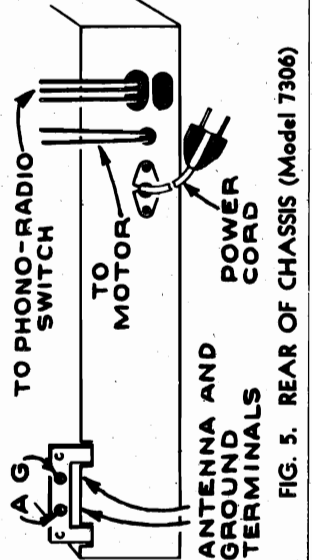


FIG. 5. REAR OF CHASSIS (Model 7306)

SEARS, ROEBUCK & CO.

MODELS 7305, Ch. 126.217,
7307, Ch. 126.220 (Export)
Schematic, Voltage

FOR ALIGNMENT SEE INDEX

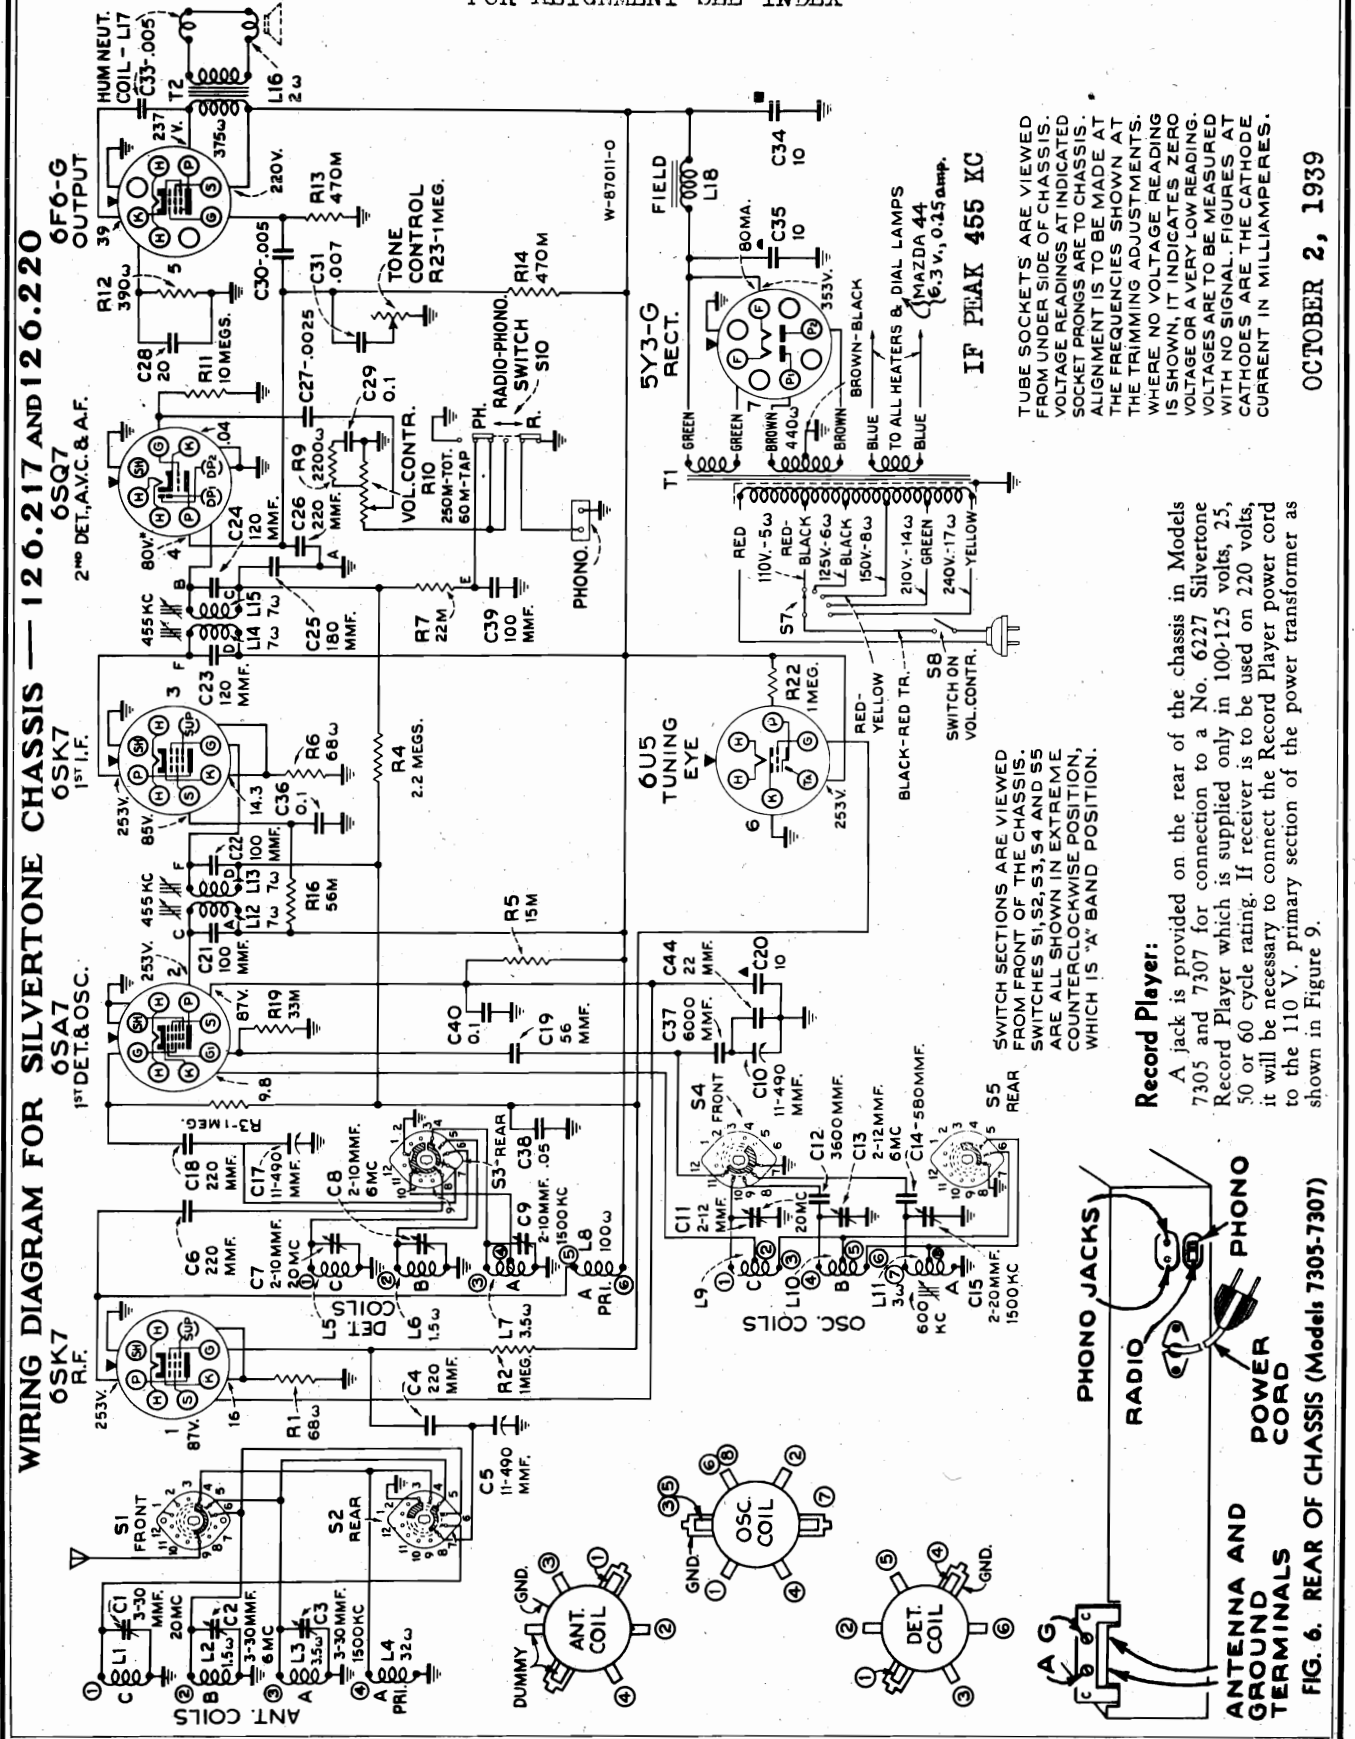

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. ALIGNMENT IS TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMING ADJUSTMENTS. WHERE NO VOLTAGE READING IS SHOWN, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. VOLTAGES ARE TO BE MEASURED WITH NO SIGNAL. FIGURES AT CATHODES ARE THE CATHODE CURRENT IN MILLIAMPERES.

IF PEAK 455 KC

SWITCH SECTIONS ARE VIEWED FROM FRONT OF THE CHASSIS. SWITCHES S1, S2, S3, S4 AND S5 ARE ALL SHOWN IN EXTREME COUNTERCLOCKWISE POSITION, WHICH IS "A" BAND POSITION.

Record Player:

A jack is provided on the rear of the chassis in Models 7305 and 7307 for connection to a No. 6227 Silvertone Record Player which is supplied only in 100-125 volts, 25, 50 or 60 cycle rating. If receiver is to be used on 220 volts, it will be necessary to connect the Record Player power cord to the 110 V. primary section of the power transformer as shown in Figure 9.

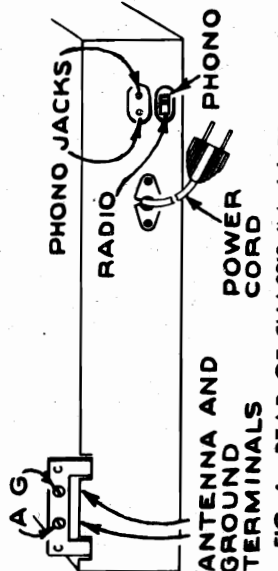


FIG. 6. REAR OF CHASSIS (Models 7305-7307)

OCTOBER 2, 1939

MODELS 7305, 7306, 7307
Chassis Wiring, Socket
Trimmers, Notes

SEARS, ROEBUCK & CO.

Loudspeaker:

The loudspeaker cone may be centered in the usual manner with three celluloid or paper feelers after gently cutting away the front dust cover. A new cover should be cemented in place upon completion of the adjustment.

Calibration Scale on Variable Condenser Drive Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment when chassis is out of cabinet; therefore, a calibration scale is attached to the rear of the drum which is mounted on the shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale (see "Dial Drive Drawing") must be in a vertical position when the plates are fully meshed. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "180°" mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet attach the dial pointer to the drive cable with variable condenser fully closed and pointer on last calibration mark at 550 kc end of Broadcast "A" band. The dial pointer has a spring clip for attachment to the cable.

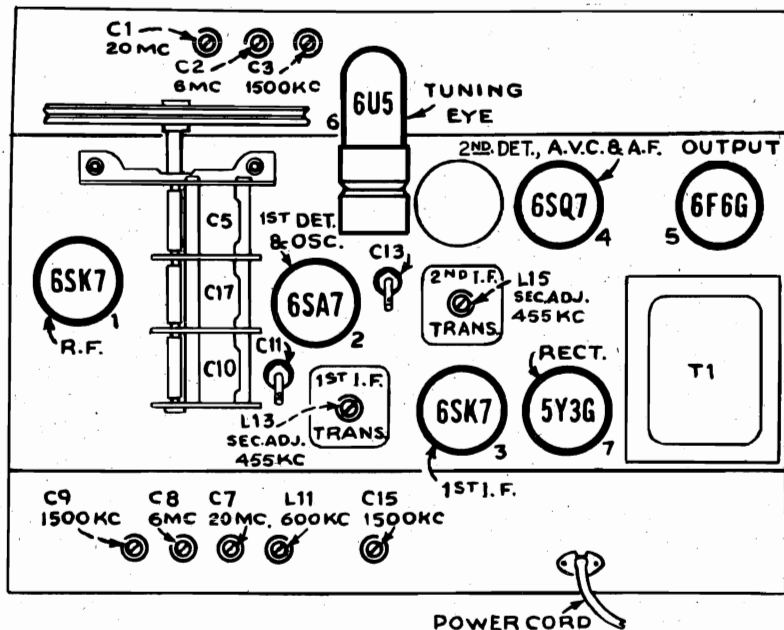


FIG. 1. TUBE, TRIMMER AND PARTS LOCATION

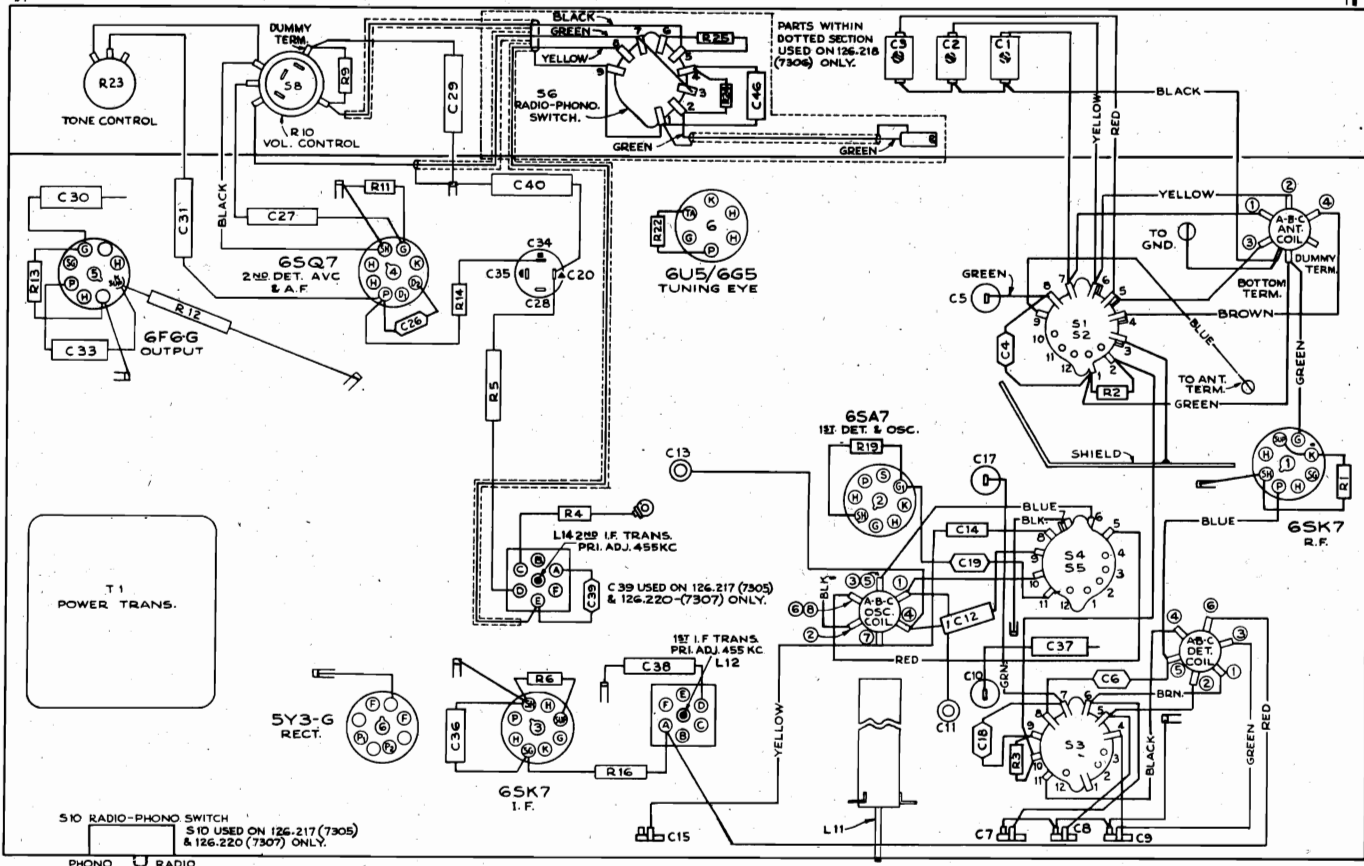


FIG. 2. TUBE, TRIMMER AND PARTS LOCATION—BOTTOM VIEW

SEARS, ROEBUCK & CO.

MODELS 7305, 7306, 7307
Alignment

Model 7305 (126.217) and Model 7307 (126.220) are the same except for the size of speaker. Model 7305 having a 6-inch and Model 7307 a 12-inch electrodynamic speaker.

Model 7306 (126.218) has an 8-inch electrodynamic speaker and is supplied as a radio-phonograph combination.

POWER SUPPLY RATING:

Models 7305 and 7307.....	100-130, 140-160, 195-250 volts, 40 to 60 cycles, 75 watts
Model 7306.....	100-130, 140-160, 195-250 volts, 40 to 60 cycles, 75 watts
Phono Motor.....	20 watts
Total.....	95 watts

CHASSIS FEATURES:

No. R-F Stages (all bands).....	One	Aural-Compensated Volume Control
No. I-F Stages.....	One	Magnetite-Core Adjusted I-F Transformers and Band
Tuning Eye		"A" Low-Frequency Oscillator Tracking
Line Noise Electrostatic Transformer Shield		Jack and Switch for Phonograph Attachment on Models 7305 and 7307

FREQUENCY RANGES:

(A) Standard Broadcast..	540-1,720 kc (550-174 m)
(B) Medium Wave.....	2.3-7.0 mc (130-42.8 m)
(C) Short Wave.....	7.0-22.0 mc (42.0-13.6 m)

ALIGNMENT FREQUENCIES:

Band "A".....	600 kc (osc.) 1,500 kc (osc., det., ant.)
Band "B".....	6 mc (osc., det., ant.)
Band "C".....	20 mc (osc., det., ant.)

INTERMEDIATE FREQUENCY 455 kc

POWER OUTPUT:

Type.....	Pentode
Undistorted.....	2.5 watts
Maximum.....	4.5 watts

LOUDSPEAKER:

	Model 7305	Model 7306	Model 7307
Type—Electrodynamic.....	6-inch	8-inch	12-inch
Voice Coil Impedance at 400 Cycles.....	3.4 ohms	2.2 ohms	2.2 ohms
Field Coil Resistance.....	1,800 ohms	1,060 ohms	1,060 ohms
Approx. Field Coil Voltage Drop.....	130 volts	130 volts	130 volts

PRELIMINARY:

ALIGNMENT PROCEDURE

Output meter connections.....	Across speaker voice coil
Output meter reading to indicate 1.0 watt output.....	1.6 volts
Approximate average sensitivity in microvolts for 1.0 watt output.....	See chart below
Dummy antenna value to be inserted in series with generator output.....	See chart below
Connection of generator output lead.....	See chart below
Connection of generator ground lead.....	To chassis
Generator modulation.....	30%, 400 cycles
Position of Volume Control.....	Fully clockwise
Position of Tone Control.....	Fully clockwise

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connection	Trimmers Adjusted (In order shown)	Trimmer Function	Approximate Microvolts
"A"	Low End	455 kc	.001 mfd.	6SK7 I-F Grid	L14, L15	2nd I-F Trans.	4,600
"A"	Low End	455 kc	.001 mfd.	Tuning Condenser Stator (osc.)	L12, L13	1st I-F Trans.	85
"A"	600 kc (148°) (rock)	600 kc	.0002 mfd.	Ant.	L11	Osc.	2.8
"A"	1,500 kc (28°)	1,500 kc	.0002 mfd.	Ant.	C15, C9, C3	Osc., Det., Ant.	2.1
"B"	6.0 mc (31°)	6.0 mc	300 ohms	Ant.	C13*, C8, C2	Osc., * Det., Ant.	2.1
"C"	20 mc (23°)	20 mc	300 ohms	Ant.	C11*, C7, C1	Osc., * Det., Ant.	4.2

IMPORTANT ALIGNMENT NOTES

*Use minimum capacity peak if two peaks can be obtained.

Where indicated by the word "Rock," the variable tuning condenser should be rocked back and forth a degree or two while making this adjustment.

Each step of the alignment should be repeated in its original order for greater accuracy. Always keep the output from the generator at its lowest possible value to prevent the a-v-c action of the set interfering with accurate alignment.

Adjustment locations are shown on the top and bottom parts location views of chassis.

Only the dummy antenna indicated in the chart for any particular band should be used. Remove the dummy used for alignment in any other band.

Note.—Oscillator tracks 455 kc above signal on all bands.

Values shown under, "Microvolts," are only approximate.

MODELS 7305, 7306, 7307
MODELS 7310, 7312

SEARS, ROEBUCK & CO.

Phonograph Data, Dial

NOTE:—ILLUSTRATIONS MARKED WITH * APPLY ALSO TO MODELS 7310, 7312.

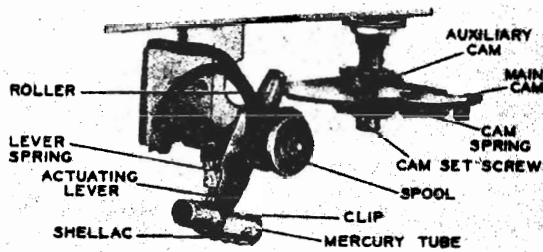


FIG. 4. MERCURY SWITCH MECHANISM (Model 7306) Viewed from front—shown with pickup in rest position

The motor switch is automatic for both starting and stopping, and when properly adjusted, will turn the motor on as the pickup is moved from the pickup rest toward the turntable. The switch should be adjusted so that it will snap into the "off" position when the pickup needle is 1 3/4 inches from the center line of the turntable shaft.



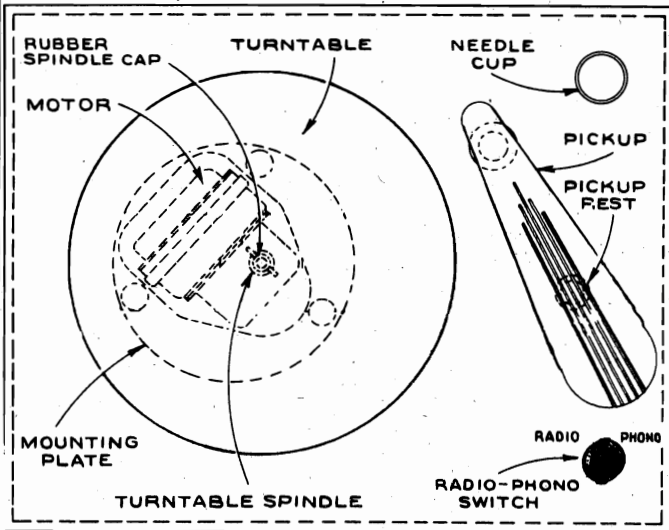



FIG. 3. PHONOGRAPH MOTOR BOARD AND OPERATING CONTROLS (Model 7306)

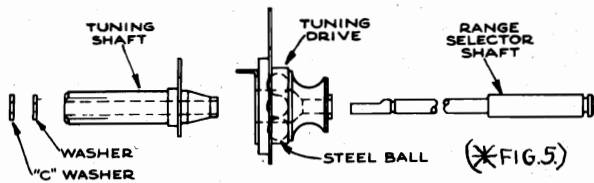


* FIG. 7. PLANETARY TUNING DRIVE ASS'Y

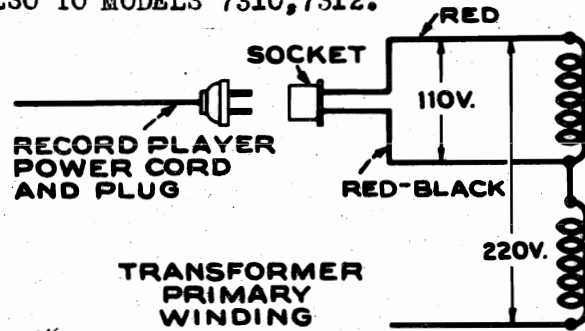

* FIG. 9. RECORD PLAYER CONNECTIONS (* FIG. 8) (220V-110V)

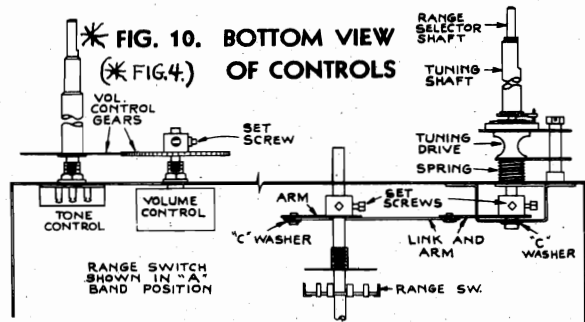


* FIG. 10. BOTTOM VIEW OF CONTROLS (* FIG. 4)

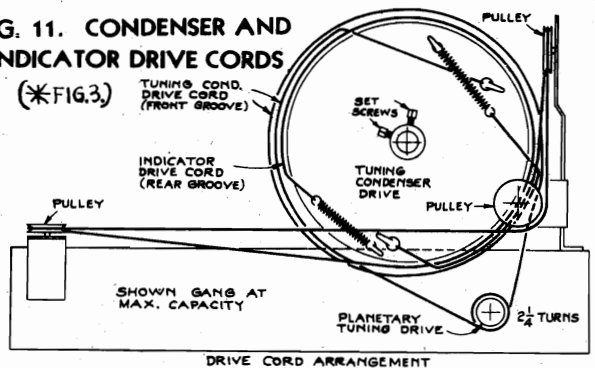




* FIG. 11. CONDENSER AND INDICATOR DRIVE CORDS (* FIG. 3)

FIG. 12. SPEAKER AND CABLE CONNECTIONS

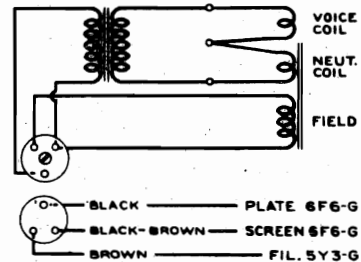


* Calibration Scale
Reduced Reproduction of Receiver Dial, and Corresponding 0-180° Calibration Scales

The corresponding position of the dial indicator for any setting of the calibration scale can be determined by drawing a line from this point on the bottom calibration scale to the same point on the top calibration scale. For example: 32° on the calibration scale corresponds to approximately 7.9 mc on "C" band, and 600 kc on "A" band, etc. Read instructions under "Alignment Procedure."



SEARS, ROEBUCK & CO.

MODELS 7310, Ch. 126.219
7312, Ch. 126.221 (Export)
Schematic, Voltage

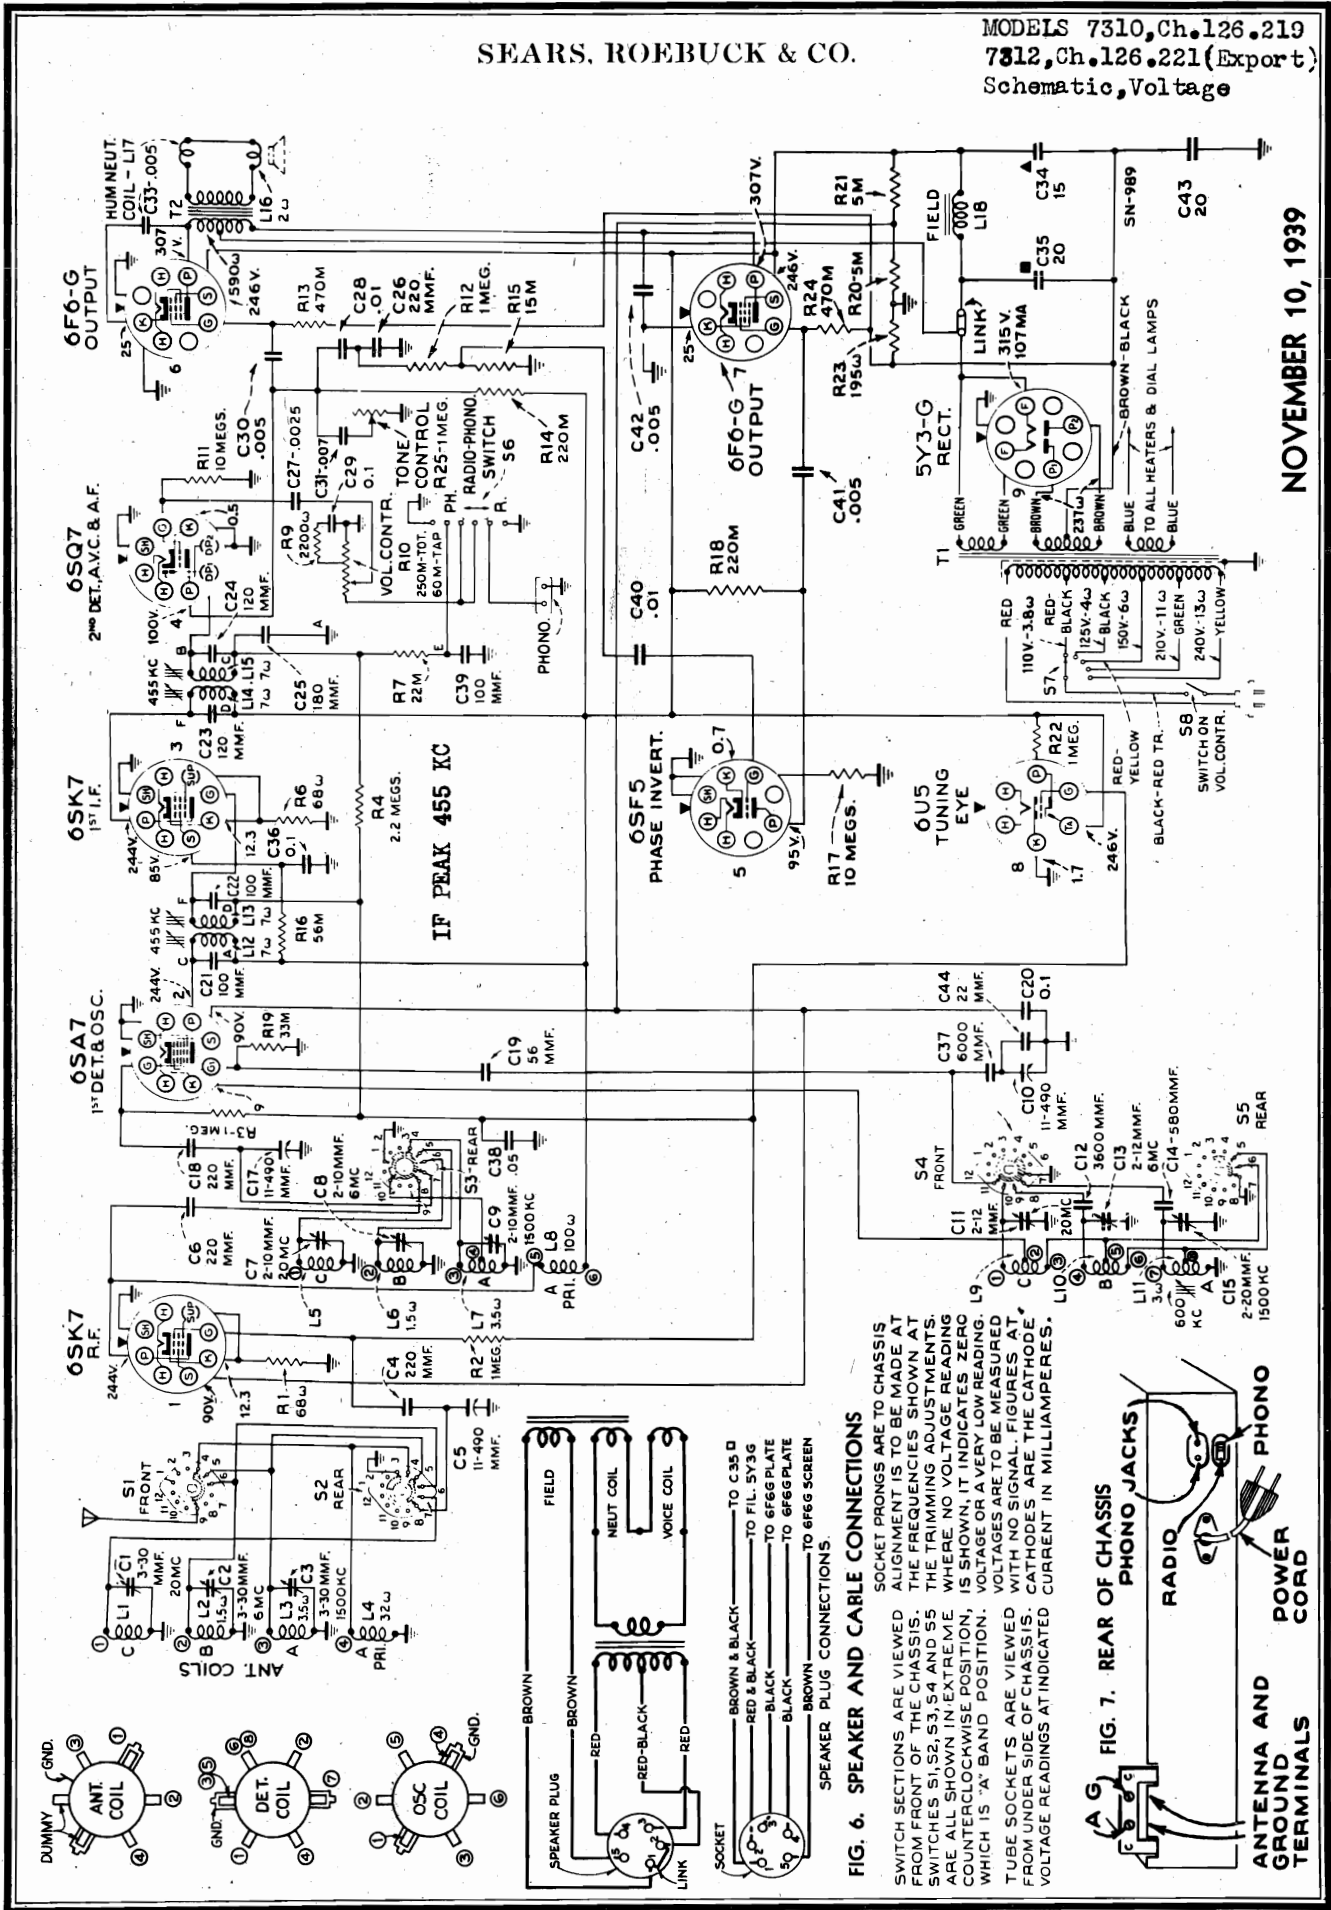

NOVEMBER 10, 1939

FIG. 6. SPEAKER AND CABLE CONNECTIONS.

SWITCH SECTIONS ARE VIEWED FROM FRONT OF THE CHASSIS. THE FREQUENCIES SHOWN AT SWITCHES S1, S2, S3, S4 AND S5 ARE ALL SHOWN IN EXTREME COUNTERCLOCKWISE POSITION, WHICH IS 'A' BAND POSITION. VOLTAGE READINGS AT INDICATED CURRENT IN MILLIAMPERES.

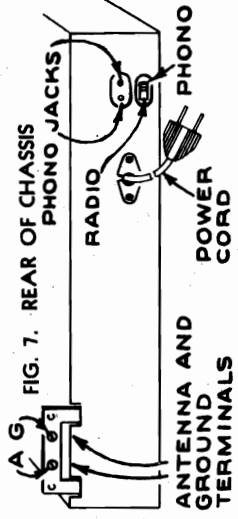


FIG. 7. REAR OF CHASSIS PHONO JACKS

MODELS 7310, 7312

Chassis Wiring, Socket Trimmers, Dial Data

SEARS, ROEBUCK & CO.

General Information and Service Hints

Loudspeaker:

The loudspeaker cone may be centered in the usual manner with three celluloid or paper feelers after gently cutting away the front dust cover. A new cover should be cemented in place upon completion of the adjustment.

Tuning Dial:

The tuning shaft is connected through a cord drive to a drum on the condenser shaft. This same cord drives the dial

indicator by passing over a pulley on the chassis. Figure 3 shows the complete cord drive assembly and the correct number of turns which the cord should be wrapped around the drive shaft and condenser drum.

Record Player:

A jack is provided on the rear of the chassis for connection to a No. 6227 Silvertone Record Player which is supplied only in 100-125 volts, 25, 50 or 60 cycle rating. If receiver is to be used on 220 volts, it will be necessary to connect the Record Player power cord to the 110 V. primary section of the power transformer as shown in Figure 8.

Calibration Scale on Variable Condenser Drive Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment when chassis is out of cabinet; therefore, a calibration scale is attached to the rear of the drum which is mounted on the shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale (see "Dial Drive Drawing") must be in a vertical position when the plates are fully meshed. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "180°" mark on the calibration scale when the plates are fully meshed.

Dial - Indicator Adjustment.—After fastening the chassis in the cabinet attach the dial pointer to the drive cable with variable condenser fully closed and pointer on last calibration mark at 550 kc end of Broadcast "A" band. The dial pointer has a spring clip for attachment to the cable.


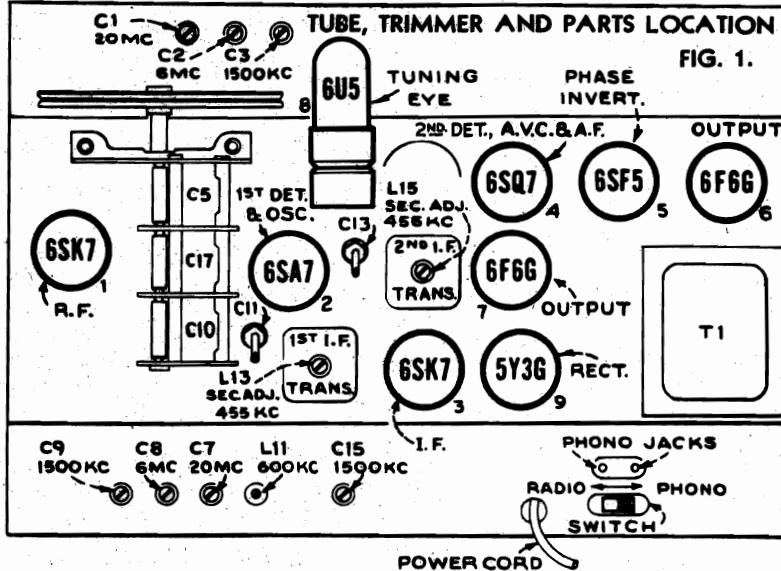


FIG. 2.

BOTTOM VIEW

TUBE, TRIMMER AND PARTS LOCATION

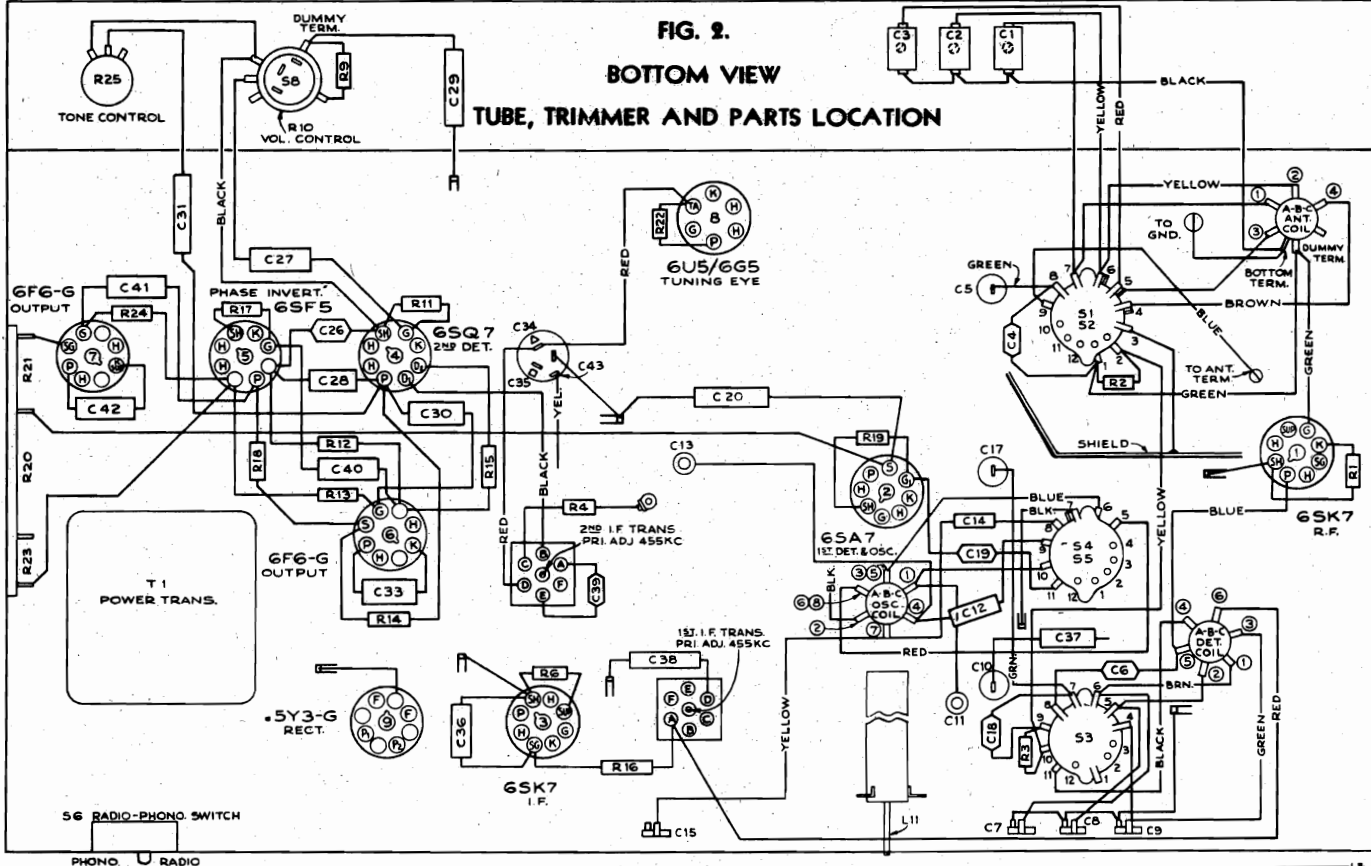

SEARS ROEBUCK & CO.

MODELS 7310, 7312
Alignment

LOUDSPEAKER:	Model 7310	Model 7312
Type—Electrodynamic	8-inch	12-inch
Voice Coil Impedance at 400 Cycles.....	2.2 ohms	2.2 ohms
Field Coil Resistance.....	1,060 ohms	1,060 ohms
Approximate Field Coil Voltage Drop.....	70 volts	70 volts

Note.—The above models are identical except for the size of speaker. Model 7310 has an 8-inch and Model 7312 a 12-inch electrodynamic speaker.

POWER OUTPUT:	FREQUENCY RANGES:
Type.....	(A) Standard Broadcast.. 540-1,720 kc (550-174 m)
Undistorted.....	(B) Medium Wave..... 2.3-7.0 mc (130-42.8 m)
Maximum.....	(C) Short Wave..... 7.0-22.0 mc (42.0-13.6 m)
INTERMEDIATE FREQUENCY..... 455 kc	ALIGNMENT FREQUENCIES:
POWER SUPPLY RATING:	Band "A"... 600 kc (osc.) 1,500 kc (osc., det., ant.)
100-130, 140-160, 195-250 volts,	Band "B"..... 6 mc (osc., det., ant.)
40 to 60 cycles, 95 watts	Band "C"..... 20 mc (osc., det., ant.)

ALIGNMENT PROCEDURE

PRELIMINARY:

Output meter connections.....	Across speaker voice coil
Output meter reading to indicate 1.0 watt output.....	1.48 volts
Approximate average sensitivity in microvolts for 1.0 watt output.....	See chart below
Dummy antenna value to be inserted in series with generator output.....	See chart below
Connection of generator output lead.....	See chart below
Connection of generator ground lead.....	To chassis
Generator modulation.....	30%, 400 cycles
Position of Volume Control.....	Fully clockwise
Position of Tone Control.....	Fully clockwise

LOCATION OF PARTS AND ALIGNMENT ADJUSTMENTS ON TOP OF CHASSIS

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connection	Trimmers Adjusted (In order shown)	Trimmer Function	Approximate Microvolts
"A"	Low End	455 kc	.001 mfd.	6SK7 I-F Grid	L14, L15	2nd I-F Trans.	5,000
"A"	Low End	455 kc	.001 mfd.	Tuning Condenser Stator (osc.)	L12, L13	1st I-F Trans.	100
"A"	1,500 kc (28°)	1,500 kc	.0002 mfd.	Ant.	C15, C9, C3	Osc., Det., Ant.	2
"A"	600 kc (148°) (rock)	600 kc	.0002 mfd.	Ant.	L11	Osc.	2
"B"	6.0 mc (31°)	6.0 mc	300 ohms	Ant.	C13,* C8, C2	Osc.,* Det., Ant.	2
"C"	20 mc (23°)	20 mc	300 ohms	Ant.	C11,* C7, C1	Osc.,* Det., Ant.	2.5

IMPORTANT ALIGNMENT NOTES

* Use minimum capacity peaks if two peaks can be obtained.

Where indicated by the word "Rock," the variable tuning condenser should be rocked back and forth a degree or two while making this adjustment.

Each step of the alignment should be repeated in its original order for greater accuracy. Always keep the output from the generator at its lowest possible value to prevent the a-v-c action of the set interfering with accurate alignment.

Adjustment locations are shown on the top and bottom parts location views of chassis.

Only the dummy antenna indicated in the chart for any particular band should be used. Remove the dummy used for alignment in any other band.

Note.—Oscillator tracks 455 kc above signal on all bands.

Values shown under, "Microvolts," are only approximate.

MODEL 7807, Ch. 113, 414
 Schematic, Voltage
 Chassis, Socket
 Trimmers

SEARS, ROEBUCK & CO.




POWER SUPPLY:
 105 - 120 Volts, 50-60 Cycle A.C. . . . 55 Watts

LOUD SPEAKER:
 Type Dynamic
 Size 6 inch
 Field resistance 1600 ohms

POWER OUTPUT:
 Type Single Pentode
 Undistorted 2.1 Watts
 Maximum 3.9 Watts



FREQUENCY RANGE:
 Broadcast 540-1750 KD

INTERMEDIATE FREQUENCY: 465 KC

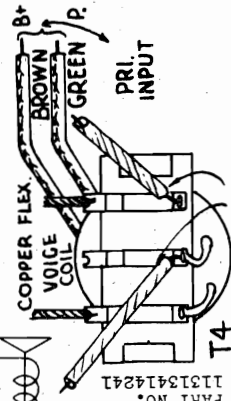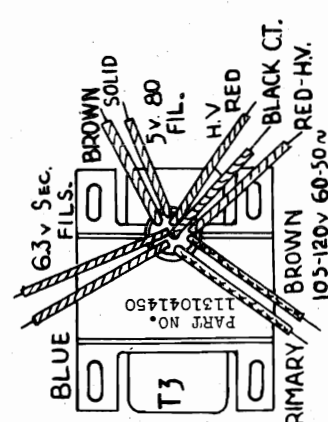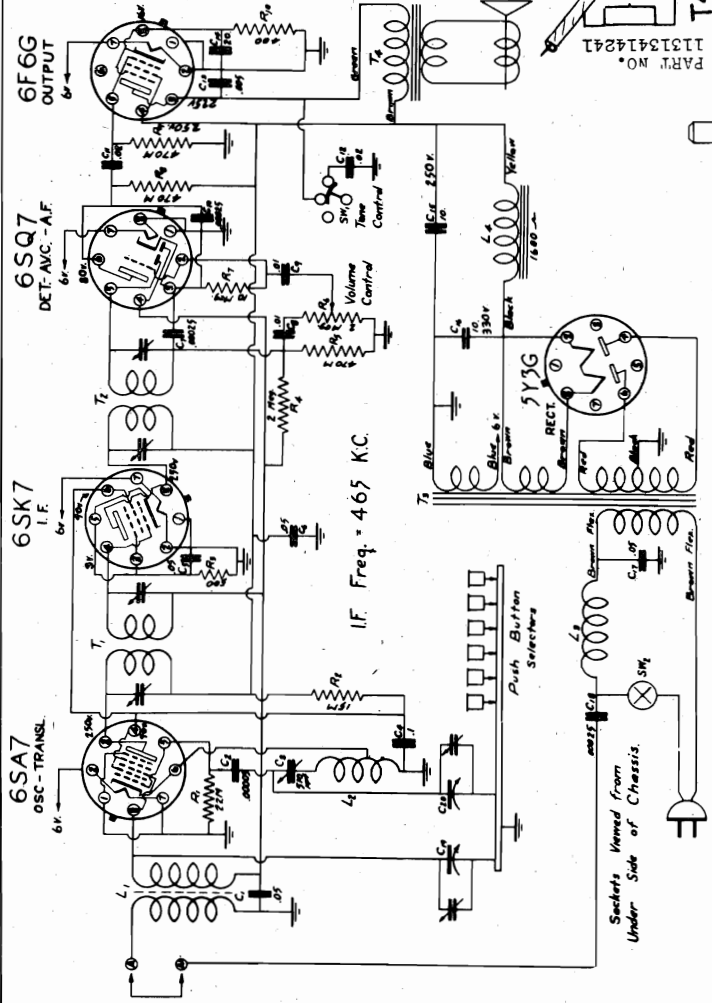

COLOR CODE OUTPUT TRANS. LEADS
 PRIMARY 105-120V 60-50 Hz
 BROWN
 RED-HV.
 BLACK CT.
 H.V. RED
 5V. 80
 FIL.
 BROWN SOLID
 BLUE
 6.3V SEC. FILS.


SEPTEMBER 18, 1939

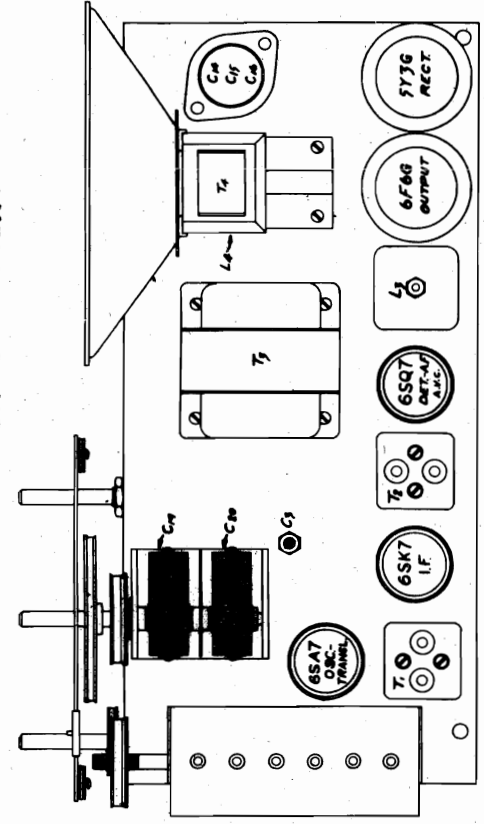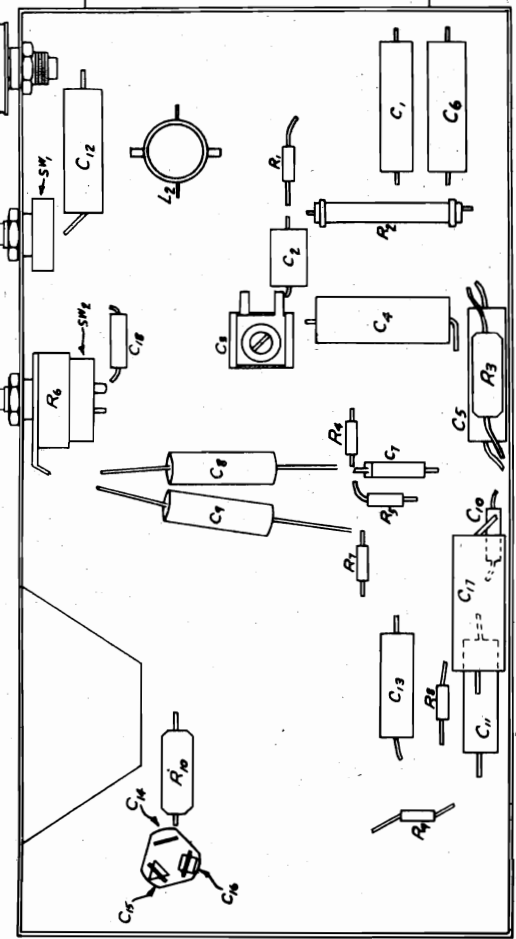

SEARS, ROEBUCK & CO.

MODEL 7245
Ch. 107.375
Schematic, Voltage
Socket, Trimmers

I.F. 465 kc

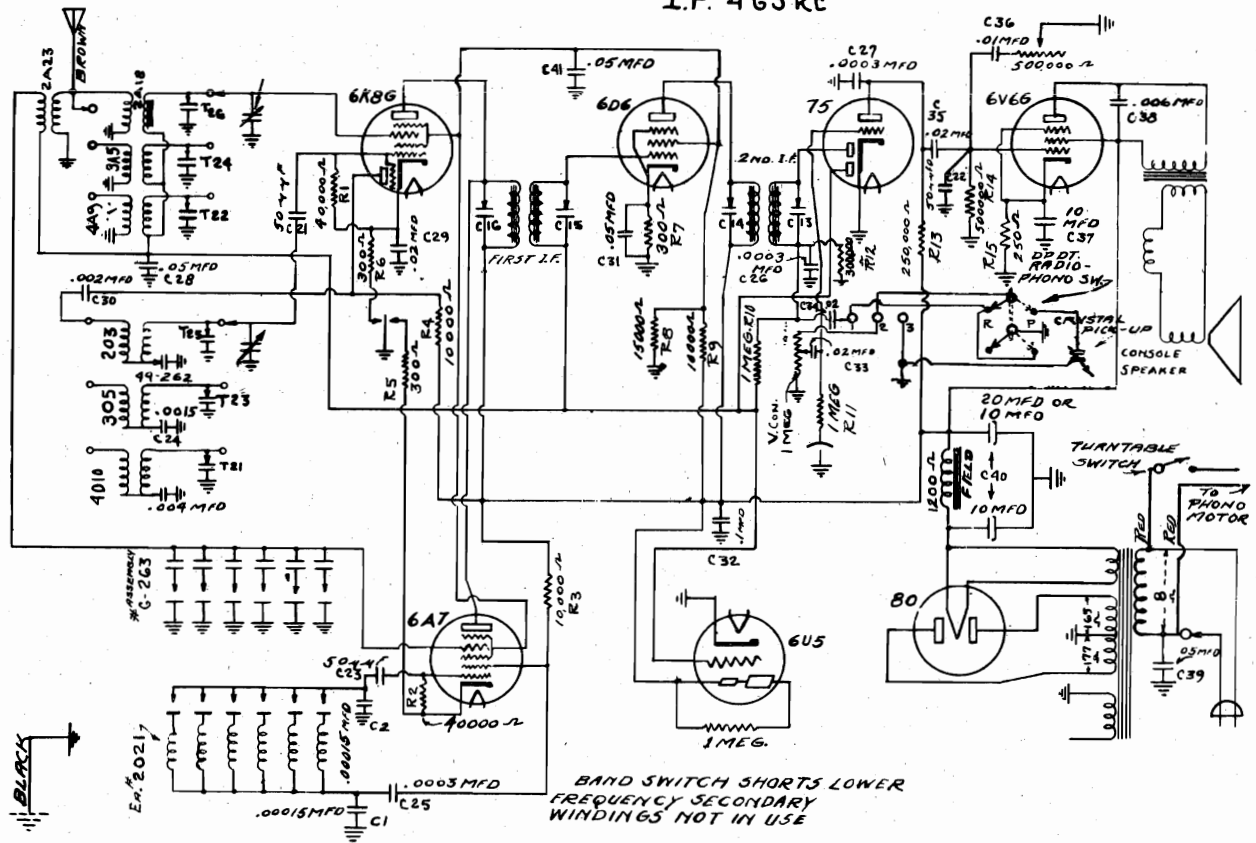

TUBES AND FUNCTIONS:

- 6K8G. Manual tuning 1st Detector
- 6A7. Automatic tuning 1st Detector
- 6D6. I-F Amplifier
- 75. 2nd Detector, AVC, 1st AVC.

- 6U5. Tuning Eye
- 6V6G. Power Output
- 80. Rectifier
- Dial Lamps (2). 6.3 Volts .15 Amps.

POWER SUPPLY RATINGS AVAILABLE AND CONSUMPTION:

	RADIO ONLY	TOTAL
105-125 Volts, 60 Cycles.	60 Watts	90 Watts
105-125 Volts, 50 Cycles.	60 Watts	90 Watts
105-125 Volts, 25 Cycles.	60 Watts	90 Watts

POWER OUTPUT:

- Type. Single Pentode
- Undistorted. 4.5 Watts
- Maximum. 6.5 Watts

PHONOGRAPH:

- Type. Automatic-Manual
- Record Capacity. Eight 10" or Seven 12"
- Speed 78 R.P.M. Constant
- Type of Pickup. Crystal
- Pickup Impedance. 100,000 ohms at 1,000 Cy

LOUDSPEAKER:

- Type. Electrodynamic
- Size. 12 inches
- V.C. Impedance. 4.5 at 400 cycles
- Field Coil Resistance. 1200 ohms
- App. Field Coil Voltage Drop.90 volts


FREQUENCY RANGES:

- Standard Broadcast.540-1720 kc.
- Medium Wave.2.2- 7.5 mc.
- Short Wave.7 - 22 mc.

SOCKET VOLTAGE READINGS

TUBE	FUNCTION	CATHODE	SCREEN GRID	PLATE	OSC. PLATE
6K8G	Mixer	3	95	225	135 V.
6D6	I.F.	3	95	225	-
75	Det AVC	-	-	45	-
6V6G	Output	12	235	225	-
6A7	Push B.	3	95	-	135 V.


Voltages taken from ground with line voltage at 117 V.A.C.
 Drop across speaker field 90 V.

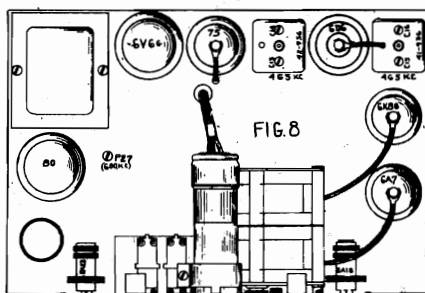

JULY 10, 1939

MODEL 7245
Alignment, Trimmers
Tuner Data

SEARS, ROEBUCK & CO.

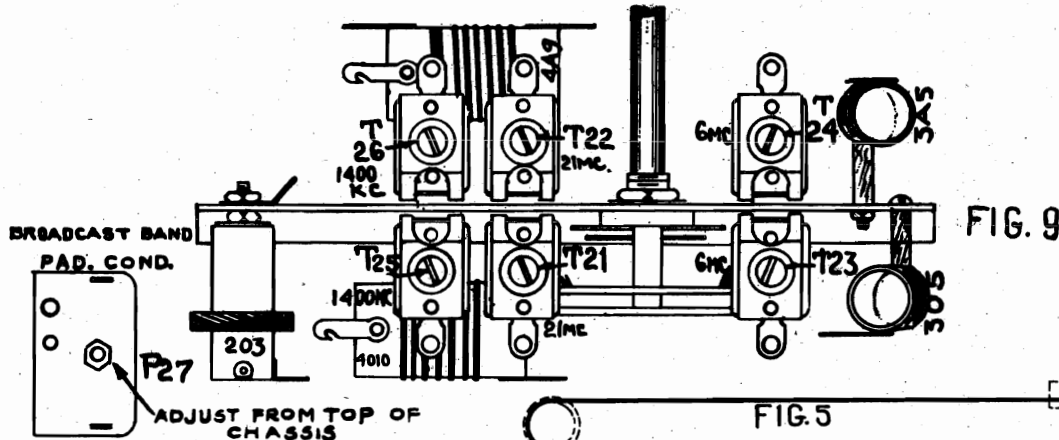

ALIGNMENT PROCEDURE

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connection	Trimmers Adjusted (In order shown)	Trimmer Function
Broadcast	Low End	465 KC	.001 Mfd.	6D6 Grid	C13, C14	2nd IF
Broadcast	Low End	465 KC	.001 Mfd.	6K8G Grid	C15, C16	1st IF
Shortwave	21 MC	21 MC	300 Ohms	Ant.	T21, T22	Osc & Ant
Med. Wave	6 MC	6 MC	300 Ohms	Ant.	T23*, T24	Osc & Ant
Broadcast	1400 KC	1400 KC	.0002 Mfd.	Ant.	T25*, T26	Osc & Ant
Broadcast	600 KC (Rock)	600 KC	.0002 Mfd.	Ant.	P27	Osc & Pad
Broadcast	1400 KC	1400 KC	.0002 Mfd.	Ant.	T25, T26	Osc & Ant

IMPORTANT ALIGNMENT NOTES

*Use minimum capacity peak if two peaks can be obtained. Where indicated by the word "Rock", the variable tuning condenser should be rocked back and forth a degree or two while making this adjustment. Each step of the alignment should be repeated in its original order for greater accuracy. Always keep the output from the generator at its lowest possible value to prevent the a-v-c action of the set from interfering with accurate alignment. Only the dummy antenna indicated in the chart for any particular band should be used. Remove the dummy used for alignment in any other band. Grid cap leads should remain in place during alignment.

SET-UP INSTRUCTIONS FOR PERMA-MATIC AUTOMATIC TUNER
NOTE: DO NOT ATTEMPT ANY ADJUSTMENTS UNTIL THE SET HAS BEEN TURNED ON AT LEAST 20 MINUTES

- Remove the push-button escutcheon by removing a screw at each end of the plate.
- Depress any one of the selector buttons. The correct adjustment screws are always to the RIGHT of the depressed button. Tune in the desired station by turning the black slotted stud (numbered 1 on the illustration below). This varies the iron core position within the oscillator coil.
- Adjust the screw with slotted head for maximum electric eye deflection. This adjustment is numbered 2 in illustration and always the one directly above the station selector adjustment mentioned in above paragraph. If electric eye overlaps on strong stations, adjust for maximum overlap. When making the two adjustments it is possible to obtain a strong deflection of the tuning eye apparently for a station and yet no station is present. THIS IS A NORMAL CONDITION and just means that the two adjustments are not close enough in relation to each other and can be corrected by varying the two adjustment screws.

THERE IS NO FREQUENCY DISCRIMINATION BETWEEN BUTTONS. ANY ONE OF SELECTORS WILL TUNE THE ENTIRE BROADCAST BAND (1600-540 KC).

NOTICE: DO NOT FORCE ANY ADJUSTMENTS if they tighten up in the course of adjustment, either the maximum or minimum has been reached and the adjustment should be made by opposite rotation.

It will be found easier to adjust if the low frequency stations are started on the right side and progress toward high frequency stations to left, IN THE SAME ORDER AS THE TUNING DIAL.

However, the above procedure is not absolutely necessary if there should be some preference for arranging stations otherwise.

AFTER ALL ADJUSTMENTS HAVE BEEN MADE -- GO OVER EACH ADJUSTMENT THE SECOND TIME TO MAKE CERTAIN THEY ARE CORRECT AND TO COMPENSATE FOR SUBSEQUENT ADJUSTMENTS.

It is a big help to tune the desired station in on main dial while making adjustments, in order that the station can be quickly recognized by switching from manual back to button being adjusted.


It is not necessary to lock any of the adjustments as they are automatically locked.

Push out necessary station letter indicator from tab sheet, moisten back, and press into place above the correct button.

NOTICE: Turning station selector screw clock-wise lowers the frequency.

Best results will be had when band switch is in broadcast position when using automatic tuning.

DIAL DRIVE HOOKUP


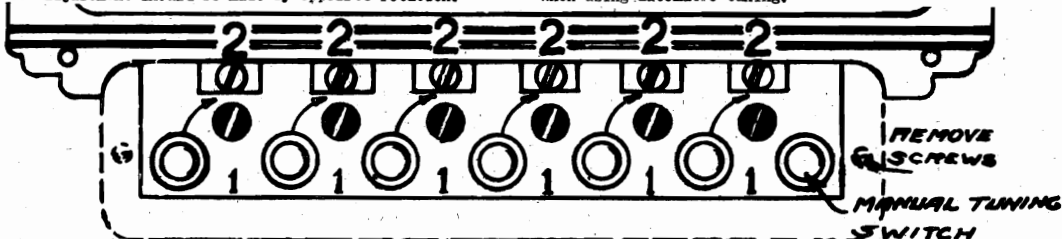


MODEL 1U-194UL
 Socket, Trimmers
 Chassis, Alignment

SENTINEL RADIO CORP.

SENTINEL MODEL 1U-194UL

5 tube A. C. - D. C. Operated Superheterodyne Receiver.

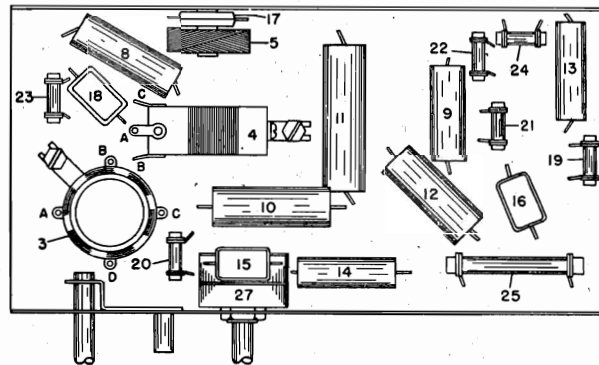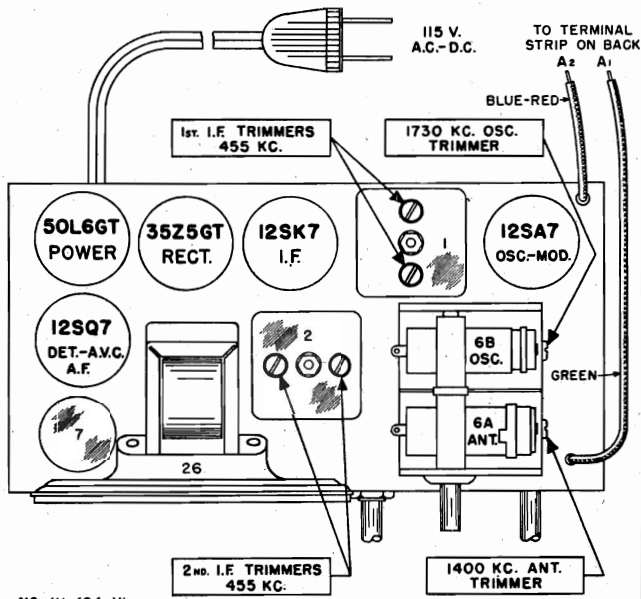

NO. 1U-194-UL

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.


Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis through .01 Mfd. condenser—if too much hum is encountered, leave unconnected.

TEST OSCILLATOR				
Set receiver dial to:	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	Refer to parts layout diagram for location of trimmers mentioned below:
IF. Any point where no interfering signal is received	455 K. C.	.02 MFD condenser	High side to grid terminal of 12SA7 tube	Adjust the second I. F. transformer trimmers for maximum output then adjust each of the first I. F. trimmers for maximum output
1 Exactly 1730 K. C.	Exactly 1730 K. C.	.00025 MFD condenser	Receiver "A1" post	Adjust 1730 K. C. oscillator trimmer for maximum output.
2 Approx. 1400 K. C.	Approx. 1400 K. C.	.00025 MFD condenser	Receiver "A1" post	While rocking gang condenser adjust 1400 K. C. antenna trimmer for maximum output.

SENTINEL RADIO CORP.

MODEL 1U-C-194UL, RC-1U-194UL
Schematic, Voltage

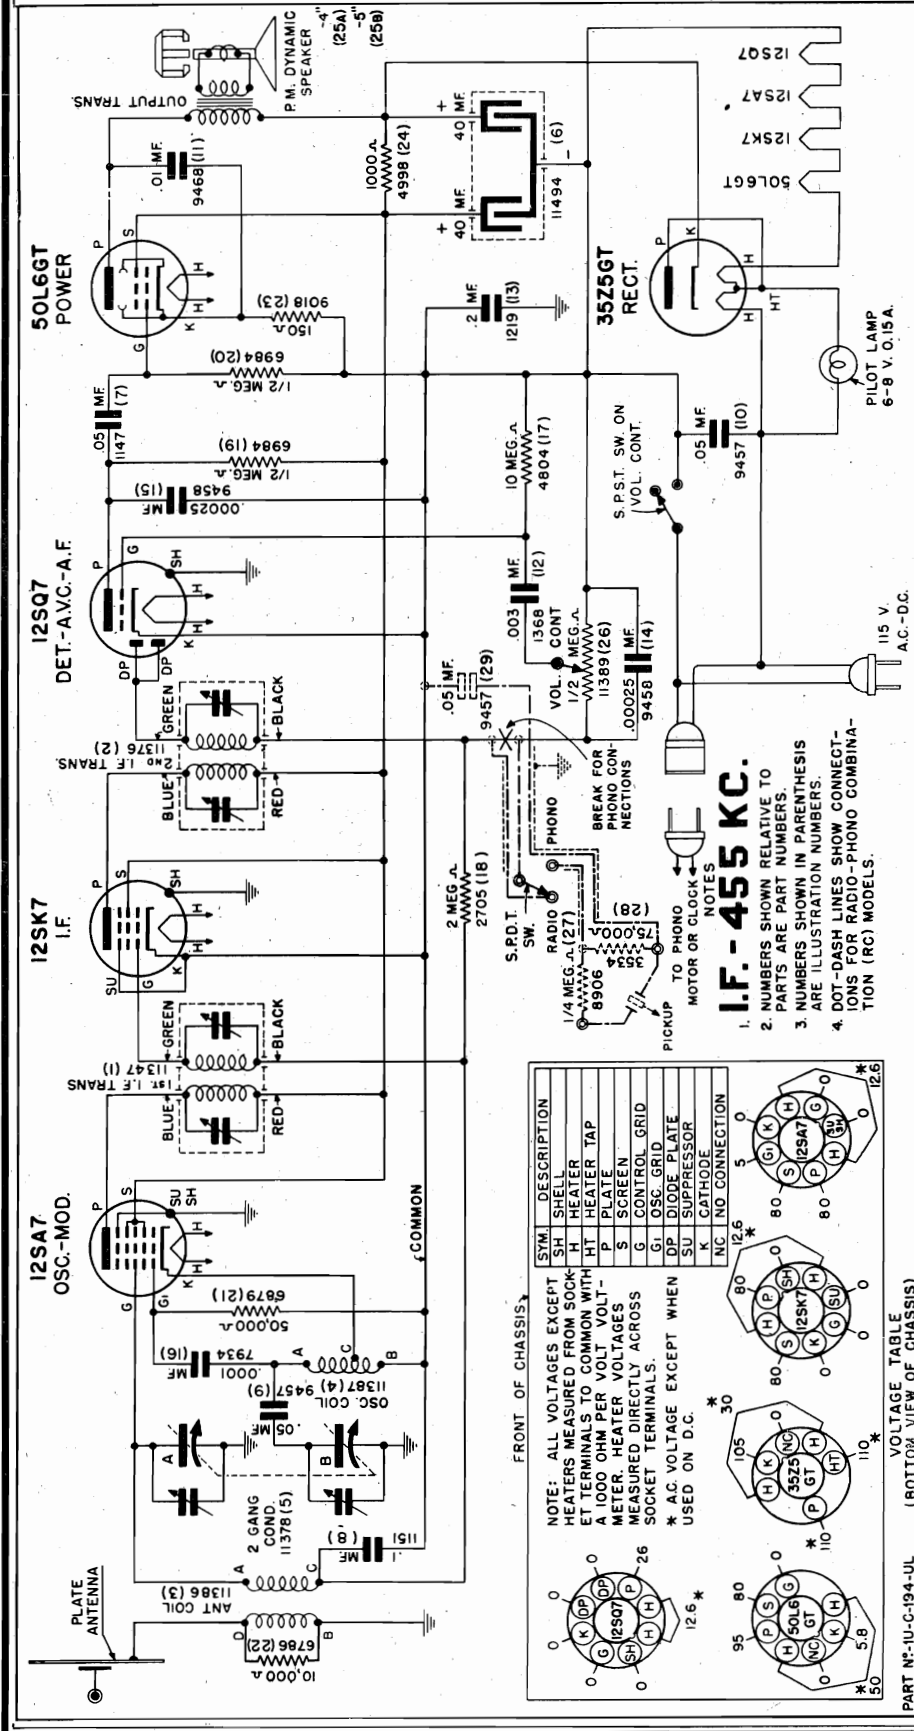

PARTS LIST


Part No.	Description	List Price
1	11347 Coil	.90
2	11376 Coil	.80
3	11386 Coil	.30
4	11379 Coil	.75
5	11494 Oscillator	1.10
6	11494 Tuning eye	1.10
7	11494 Condenser	.19
8	11511 Condenser	.20
9	9457 Tubular .05 Mfd. 400 Volt	.18
10	9457 Tubular .01 Mfd. 400 Volt	.17
11	9468 Tubular .003 Mfd. 400 Volt	.17
12	1368 Tubular .2 Mfd. 400 Volt	.27
13	1219 Mica .00025 Mfd.	.21
14	9458 Mica .0001 Mfd.	.21
15	7934 Mica .001 Mfd.	.19
16	4804 Carbon 10 Megohm 1/2 Watt	.19
17	2705 Carbon 300,000 Ohm 1/2 Watt	.19
18	6984 Resistor	.20
19	6879 Resistor	.21
20	6768 Resistor	.22
21	4998 Resistor	.23
22	11333 Resistor	.25A
23	11334 Resistor	.25B
24	11335 Speaker	2.90
25	11336 P. M. Dynamic 5 in. Volume Control	2.90
26	11337 With S.P.S.T. Switch	.19
27	8906 Resistor	.19
28	3534 Carbon 75,000 Ohm 1/2 Watt	.18
29	10573 Tubular .05 Mfd. 400 Volt	.65
30	10573 "Off-On" Motor Switch	.70
31	2434 "Radio-Phono" Switch	.25
32	11843 Back	.10
33	11403 Bulb	.375
34	11846 Clock	4.00
35	11847 Clock	4.25
36	11851 Clock Face	.25
37	11852 Clock Hand	.19
38	11853 Clock Hand	.19
39	11854 Clock Hand	.19
40	11855 Dial Scale	.21
41	11856 Dial Scale	.21
42	11857 Dial Drive Shaft	.12
43	11858 For Dial-Bronze	.15
44	11859 For Dial and Clock	.22
45	11860 Tuning-Ivory for Clock Motor	.10
46	11861 For Dial with Crystal	.75
47	11862 For Dial with Crystal	.50
48	11863 A.C. Receptacle and Plug for	.45
49	11864 Phono Motor and Clock	4.50
50	11865 115 Volt 50 Cycle with 8 in. Turn-	4.25
51	11866 115 Volt 60 Cycle with 8 in. Turn-	4.25
52	11867 Crystal Pickup and Arm	.25
53	11868 Carbon 500,000 Ohm 1/2 Watt	.19
54	11869 Carbon 10,000 Ohm 1/2 Watt	.19
55	11870 Carbon 100 Ohm 1/2 Watt	.21
56	11871 Carbon 1000 Ohm 1/2 Watt	.21
57	11872 P. M. Dynamic 4 in. Speaker	2.90
58	11873 With S.P.S.T. Switch	.19
59	11874 Carbon 75,000 Ohm 1/2 Watt	.18
60	11875 Tubular .05 Mfd. 400 Volt	.65
61	11876 "Off-On" Motor Switch	.70
62	2434 "Radio-Phono" Switch	.25
63	11843 Back	.10
64	11403 Bulb	.375
65	11846 Clock	4.00
66	11847 Clock	4.25
67	11851 Clock Face	.25
68	11852 Clock Hand	.19
69	11853 Clock Hand	.19
70	11854 Clock Hand	.19
71	11855 Dial Scale	.21
72	11856 Dial Scale	.21
73	11857 Dial Drive Shaft	.12
74	11858 For Dial-Bronze	.15
75	11859 For Dial and Clock	.22
76	11860 Tuning-Ivory for Clock Motor	.10
77	11861 For Dial with Crystal	.75
78	11862 For Dial with Crystal	.50
79	11863 A.C. Receptacle and Plug for	.45
80	11864 Phono Motor and Clock	4.50
81	11865 115 Volt 50 Cycle with 8 in. Turn-	4.25
82	11866 115 Volt 60 Cycle with 8 in. Turn-	4.25
83	11867 Crystal Pickup and Arm	.25
84	11868 Carbon 500,000 Ohm 1/2 Watt	.19
85	11869 Carbon 10,000 Ohm 1/2 Watt	.19
86	11870 Carbon 100 Ohm 1/2 Watt	.21
87	11871 Carbon 1000 Ohm 1/2 Watt	.21
88	11872 P. M. Dynamic 4 in. Speaker	2.90
89	11873 With S.P.S.T. Switch	.19
90	11874 Carbon 75,000 Ohm 1/2 Watt	.18
91	11875 Tubular .05 Mfd. 400 Volt	.65
92	11876 "Off-On" Motor Switch	.70
93	2434 "Radio-Phono" Switch	.25
94	11843 Back	.10
95	11403 Bulb	.375
96	11846 Clock	4.00
97	11847 Clock	4.25
98	11851 Clock Face	.25
99	11852 Clock Hand	.19
100	11853 Clock Hand	.19
101	11854 Clock Hand	.19
102	11855 Dial Scale	.21
103	11856 Dial Scale	.21
104	11857 Dial Drive Shaft	.12
105	11858 For Dial-Bronze	.15
106	11859 For Dial and Clock	.22
107	11860 Tuning-Ivory for Clock Motor	.10
108	11861 For Dial with Crystal	.75
109	11862 For Dial with Crystal	.50
110	11863 A.C. Receptacle and Plug for	.45
111	11864 Phono Motor and Clock	4.50
112	11865 115 Volt 50 Cycle with 8 in. Turn-	4.25
113	11866 115 Volt 60 Cycle with 8 in. Turn-	4.25
114	11867 Crystal Pickup and Arm	.25
115	11868 Carbon 500,000 Ohm 1/2 Watt	.19
116	11869 Carbon 10,000 Ohm 1/2 Watt	.19
117	11870 Carbon 100 Ohm 1/2 Watt	.21
118	11871 Carbon 1000 Ohm 1/2 Watt	.21
119	11872 P. M. Dynamic 4 in. Speaker	2.90
120	11873 With S.P.S.T. Switch	.19
121	11874 Carbon 75,000 Ohm 1/2 Watt	.18
122	11875 Tubular .05 Mfd. 400 Volt	.65
123	11876 "Off-On" Motor Switch	.70
124	2434 "Radio-Phono" Switch	.25
125	11843 Back	.10
126	11403 Bulb	.375
127	11846 Clock	4.00
128	11847 Clock	4.25
129	11851 Clock Face	.25
130	11852 Clock Hand	.19
131	11853 Clock Hand	.19
132	11854 Clock Hand	.19
133	11855 Dial Scale	.21
134	11856 Dial Scale	.21
135	11857 Dial Drive Shaft	.12
136	11858 For Dial-Bronze	.15
137	11859 For Dial and Clock	.22
138	11860 Tuning-Ivory for Clock Motor	.10
139	11861 For Dial with Crystal	.75
140	11862 For Dial with Crystal	.50
141	11863 A.C. Receptacle and Plug for	.45
142	11864 Phono Motor and Clock	4.50
143	11865 115 Volt 50 Cycle with 8 in. Turn-	4.25
144	11866 115 Volt 60 Cycle with 8 in. Turn-	4.25
145	11867 Crystal Pickup and Arm	.25
146	11868 Carbon 500,000 Ohm 1/2 Watt	.19
147	11869 Carbon 10,000 Ohm 1/2 Watt	.19
148	11870 Carbon 100 Ohm 1/2 Watt	.21
149	11871 Carbon 1000 Ohm 1/2 Watt	.21
150	11872 P. M. Dynamic 4 in. Speaker	2.90
151	11873 With S.P.S.T. Switch	.19
152	11874 Carbon 75,000 Ohm 1/2 Watt	.18
153	11875 Tubular .05 Mfd. 400 Volt	.65
154	11876 "Off-On" Motor Switch	.70
155	2434 "Radio-Phono" Switch	.25
156	11843 Back	.10
157	11403 Bulb	.375
158	11846 Clock	4.00
159	11847 Clock	4.25
160	11851 Clock Face	.25
161	11852 Clock Hand	.19
162	11853 Clock Hand	.19
163	11854 Clock Hand	.19
164	11855 Dial Scale	.21
165	11856 Dial Scale	.21
166	11857 Dial Drive Shaft	.12
167	11858 For Dial-Bronze	.15
168	11859 For Dial and Clock	.22
169	11860 Tuning-Ivory for Clock Motor	.10
170	11861 For Dial with Crystal	.75
171	11862 For Dial with Crystal	.50
172	11863 A.C. Receptacle and Plug for	.45
173	11864 Phono Motor and Clock	4.50
174	11865 115 Volt 50 Cycle with 8 in. Turn-	4.25
175	11866 115 Volt 60 Cycle with 8 in. Turn-	4.25
176	11867 Crystal Pickup and Arm	.25
177	11868 Carbon 500,000 Ohm 1/2 Watt	.19
178	11869 Carbon 10,000 Ohm 1/2 Watt	.19
179	11870 Carbon 100 Ohm 1/2 Watt	.21
180	11871 Carbon 1000 Ohm 1/2 Watt	.21
181	11872 P. M. Dynamic 4 in. Speaker	2.90
182	11873 With S.P.S.T. Switch	.19
183	11874 Carbon 75,000 Ohm 1/2 Watt	.18
184	11875 Tubular .05 Mfd. 400 Volt	.65
185	11876 "Off-On" Motor Switch	.70
186	2434 "Radio-Phono" Switch	.25
187	11843 Back	.10
188	11403 Bulb	.375
189	11846 Clock	4.00
190	11847 Clock	4.25
191	11851 Clock Face	.25
192	11852 Clock Hand	.19
193	11853 Clock Hand	.19
194	11854 Clock Hand	.19
195	11855 Dial Scale	.21
196	11856 Dial Scale	.21
197	11857 Dial Drive Shaft	.12
198	11858 For Dial-Bronze	.15
199	11859 For Dial and Clock	.22
200	11860 Tuning-Ivory for Clock Motor	.10
201	11861 For Dial with Crystal	.75
202	11862 For Dial with Crystal	.50
203	11863 A.C. Receptacle and Plug for	.45
204	11864 Phono Motor and Clock	4.50
205	11865 115 Volt 50 Cycle with 8 in. Turn-	4.25
206	11866 115 Volt 60 Cycle with 8 in. Turn-	4.25
207	11867 Crystal Pickup and Arm	.25
208	11868 Carbon 500,000 Ohm 1/2 Watt	.19
209	11869 Carbon 10,000 Ohm 1/2 Watt	.19
210	11870 Carbon 100 Ohm 1/2 Watt	.21
211	11871 Carbon 1000 Ohm 1/2 Watt	.21
212	11872 P. M. Dynamic 4 in. Speaker	2.90
213	11873 With S.P.S.T. Switch	.19
214	11874 Carbon 75,000 Ohm 1/2 Watt	.18
215	11875 Tubular .05 Mfd. 400 Volt	.65
216	11876 "Off-On" Motor Switch	.70
217	2434 "Radio-Phono" Switch	.25
218	11843 Back	.10
219	11403 Bulb	.375
220	11846 Clock	4.00
221	11847 Clock	4.25
222	11851 Clock Face	.25
223	11852 Clock Hand	.19
224	11853 Clock Hand	.19
225	11854 Clock Hand	.19
226	11855 Dial Scale	.21
227	11856 Dial Scale	.21
228	11857 Dial Drive Shaft	.12
229	11858 For Dial-Bronze	.15
230	11859 For Dial and Clock	.22
231	11860 Tuning-Ivory for Clock Motor	.10
232	11861 For Dial with Crystal	.75
233	11862 For Dial with Crystal	.50
234	11863 A.C. Receptacle and Plug for	.45
235	11864 Phono Motor and Clock	4.50
236	11865 115 Volt 50 Cycle with 8 in. Turn-	4.25
237	11866 115 Volt 60 Cycle with 8 in. Turn-	4.25
238	11867 Crystal Pickup and Arm	.25
239	11868 Carbon 500,000 Ohm 1/2 Watt	.19
240	11869 Carbon 10,000 Ohm 1/2 Watt	.19
241	11870 Carbon 100 Ohm 1/2 Watt	.21
242	11871 Carbon 1000 Ohm 1/2 Watt	.21
243	11872 P. M. Dynamic 4 in. Speaker	2.90
244	11873 With S.P.S.T. Switch	.19
245	11874 Carbon 75,000 Ohm 1/2 Watt	.18
246	11875 Tubular .05 Mfd. 400 Volt	.65
247	11876 "Off-On" Motor Switch	.70
248	2434 "Radio-Phono" Switch	.25
249	11843 Back	.10
250	11403 Bulb	.375
251	11846 Clock	4.00
252	11847 Clock	4.25
253	11851 Clock Face	.25
254	11852 Clock Hand	.19
255	11853 Clock Hand	.19
256	11854 Clock Hand	.19
257	11855 Dial Scale	.21
258	11856 Dial Scale	.21
259	11857 Dial Drive Shaft	.12
260	11858 For Dial-Bronze	.15
261	11859 For Dial and Clock	.22
262	11860 Tuning-Ivory for Clock Motor	.10
263	11861 For Dial with Crystal	.75
264	11862 For Dial with Crystal	.50
265	11863 A.C. Receptacle and Plug for	.45
266	11864 Phono Motor and Clock	4.50
267	11865 115 Volt 50 Cycle with 8 in. Turn-	4.25
268	11866 115 Volt 60 Cycle with 8 in. Turn-	4.25
269	11867 Crystal Pickup and Arm	.25
270	11868 Carbon 500,000 Ohm 1/2 Watt	.19
271	11869 Carbon 10,000 Ohm 1/2 Watt	.19
272	11870 Carbon 100 Ohm 1/2 Watt	.21
273	11871 Carbon 1000 Ohm 1/2 Watt	.21
274	11872 P. M. Dynamic 4 in. Speaker	2.90
275	11873 With S.P.S.T. Switch	.19
276	11874 Carbon 75,000 Ohm 1/2 Watt	.18
277	11875 Tubular .05 Mfd. 400 Volt	.65
278	11876 "Off-On" Motor Switch	.70
279	2434 "Radio-Phono" Switch	.25
280	11843 Back	.10
281	11403 Bulb	.375
282	11846 Clock	4.00
283	11847 Clock	4.25
284	11851 Clock Face	.25
285	11852 Clock Hand	.19
286	11853 Clock Hand	.19
287	11854 Clock Hand	.19
288	11855 Dial Scale	.21
289	11856 Dial Scale	.21
290	11857 Dial Drive Shaft	.12
291	11858 For Dial-Bronze	.15
292	11859 For Dial and Clock	.22
293	11860 Tuning-Ivory for Clock Motor	.10
294	11861 For Dial with Crystal	.75
295	11862 For Dial with Crystal	.50
296	11863 A.C. Receptacle and Plug for	.45
297	11864 Phono Motor and Clock	4.50
298	11865 115 Volt 50 Cycle with 8 in. Turn-	4.25
299	11866 115 Volt 60 Cycle with 8 in. Turn-	4.25
300	11867 Crystal Pickup and Arm	.25
301	11868 Carbon 500,000 Ohm 1/2 Watt	.19
302	11869 Carbon 10,000 Ohm 1/2 Watt	.19
303	11870 Carbon 100 Ohm 1/2 Watt	.21
304	11871 Carbon 1000 Ohm 1/2 Watt	.21
305	11872 P. M. Dynamic 4 in. Speaker	2.90
306	11873 With S.P.S.T. Switch	.19
307	11874 Carbon 75,000 Ohm 1/2 Watt	.18
308	11875 Tubular .05 Mfd. 400 Volt	.65
309	11876 "Off-On" Motor Switch	.70
310	2434 "Radio-Phono" Switch	.25

WHEN ORDERING PARTS BE SURE TO ORDER BY PART NUMBER
PRICES ARE SUBJECT TO CHANGE WITHOUT NOTICE.

MODELS 1U-C-194UL
RC-1U-194UL
Socket, Trimmers, Chassis
Alignment

SENTINEL RADIO CORP.

SENTINEL MODEL 1U-C-194UL & RC-1U-194UL
5 tube A. C. - D. C. Operated Superheterodyne Receiver

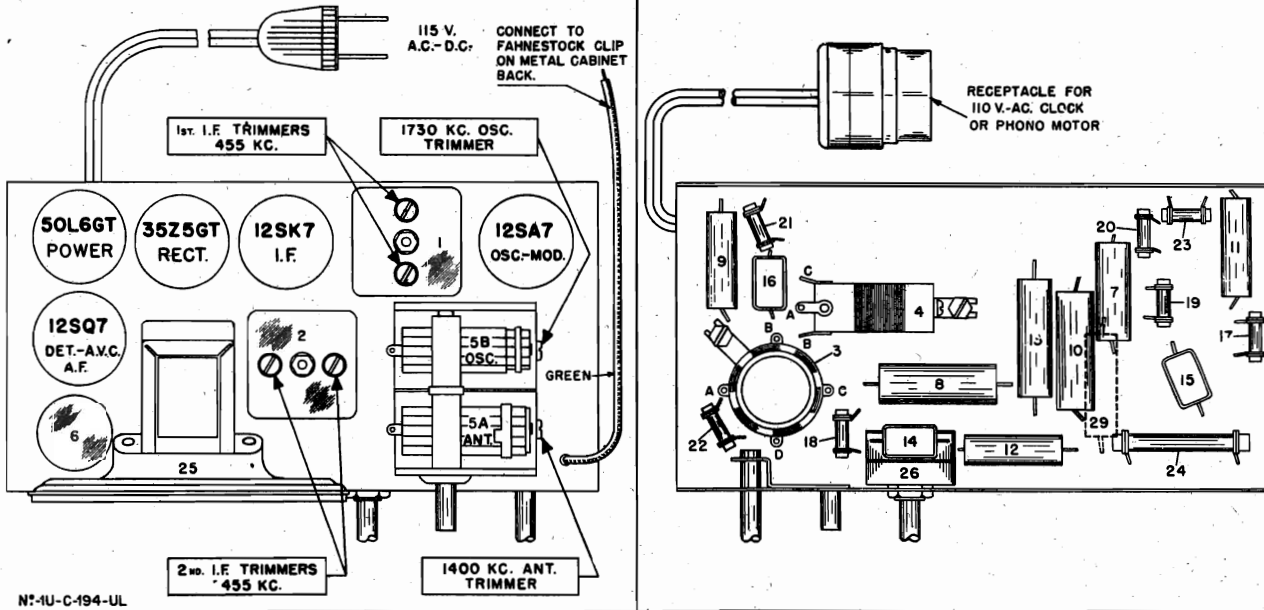

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.


Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis through .01 Mfd. condenser—if too much hum is encountered, leave unconnected.

TEST OSCILLATOR				
Set receiver dial to:	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	Refer to parts layout diagram for location of trimmers mentioned below:
I.F. Any point where no interfering signal is received	455 K. C.	.02 MFD condenser	High side to grid terminal of 12SA7 tube	Adjust the second I. F. transformer trimmers for maximum output then adjust each of the first I. F. trimmers for maximum output
1 Exactly 1730 K. C.	Exactly 1730 K. C.	.00025 MFD condenser	To Metal Cabinet Back	Adjust 1730 K. C. oscillator trimmer for maximum output.
2 Approx. 1400 K. C.	Approx. 1400 K. C.	.00025 MFD condenser	To Metal Cabinet Back	While rocking gang condenser adjust 1400 K. C. antenna trimmer for maximum output.

SENTINEL RADIO CORP.

MODEL 1U-195UL
Schematic, Voltage

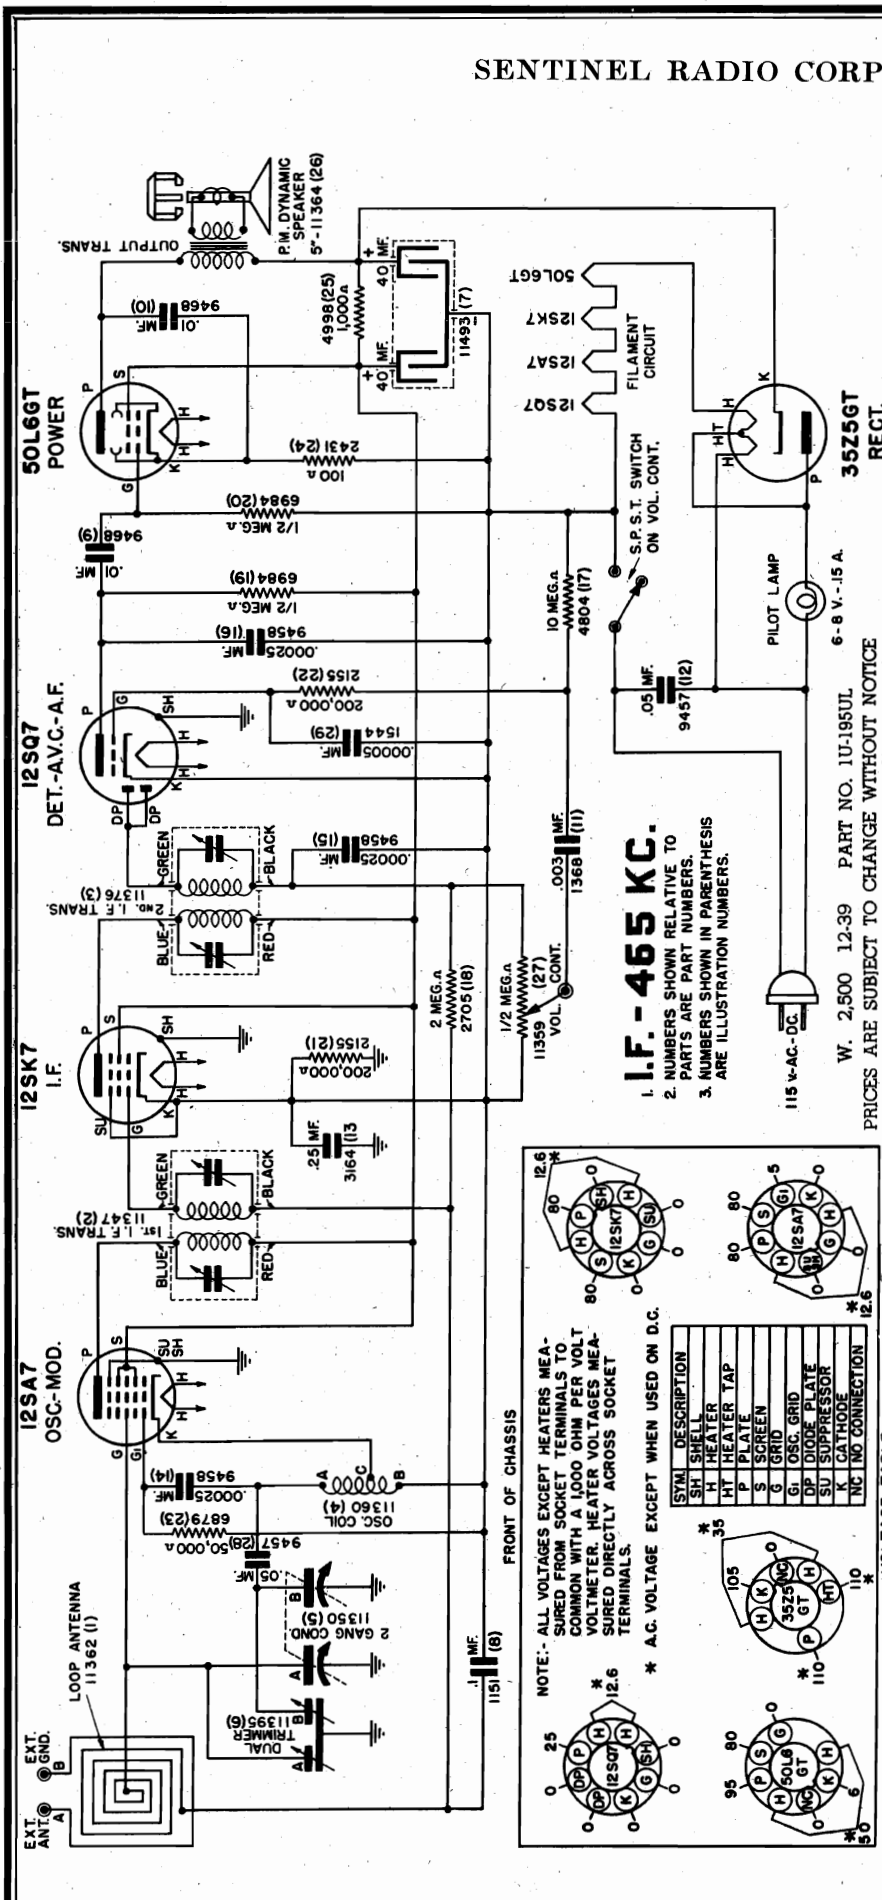

I.F. - 465 KC.
 1. NUMBERS SHOWN RELATIVE TO PARTS ARE PART NUMBERS.
 2. NUMBERS SHOWN IN PARENTHESES ARE ILLUSTRATION NUMBERS.

Part No.	Description	List Price
1	11362 Antenna	.65
2	11367 Coil	.80
3	11376 Coil	.50
4	11360 Coil	3.75
5	11350 Condenser	.30
6	11395 Condenser	1.00
7	11493 Condenser	.20
8	1151 Condenser	.17
9	9468 Condenser	.17
10	1368 Condenser	.17
11	1368 Condenser	.17
12	9457 Condenser	.18
13	1364 Condenser	.26
14	9458 Condenser	.21
15	9458 Condenser	.21
16	9458 Condenser	.21
17	4804 Resistor	.19
18	2705 Resistor	.19
19	6984 Resistor	.19
20	6984 Resistor	.19
21	2155 Resistor	.19
22	2155 Resistor	.19
23	6879 Resistor	.19
24	2431 Resistor	.19
25	4998 Resistor	.21
26	11364 Speaker	3.00
27	11359 Volume Control	.80
28	9457 Condenser	.18
29	1544 Condenser	.21
30	11304 Bulb	.10
31	11354 Dial Scale	.30
32	8184 Dial Cord	.10
33	11352 Dial Shaft	.12
34	11513 Dial Pointer	.15
35	10659 Dial Pointer	.16
36	11357 Dial Crystal	.19
37	11371 Escutcheon	.19
38	11200 Escutcheon	.19
39	11733 Knob	.19
40	11794 Knob	.19
41	11729 Knob	.19
42	11731 Knob	.19
43	11730 Knob	.19
44	11732 Knob	.19
45	Cabinet	2.00
46	Onyx Plastic	4.25

MISCELLANEOUS PARTS

Part No.	Description	List Price
18	2705 Resistor	.19
19	6984 Resistor	.19
20	6984 Resistor	.19
21	2155 Resistor	.19
22	2155 Resistor	.19
23	6879 Resistor	.19
24	2431 Resistor	.19
25	4998 Resistor	.21
26	11364 Speaker	3.00
27	11359 Volume Control	.80
28	9457 Condenser	.18
29	1544 Condenser	.21
30	11304 Bulb	.10
31	11354 Dial Scale	.30
32	8184 Dial Cord	.10
33	11352 Dial Shaft	.12
34	11513 Dial Pointer	.15
35	10659 Dial Pointer	.16

VOLTAGE TABLE (BOTTOM VIEW OF CHASSIS)




Part No.	Description	List Price
1	Loop	.65
2	1st I. F. Transformer	.80
3	2nd I. F. Transformer	.50
4	Oscillator	3.75
5	Tuning Two Gang (pushbutton Mech. Tuner Unit)	.30
6	Dual Trimmer 2-90 Mm.	1.00
7	Tubular Dry Electrolytic 40-40 Mfd. 150 Volts	.20
8	Tubular .1 Mfd. 200 Volt.	.17
9	Tubular .01 Mfd. 400 Volt.	.17
10	Tubular .03 Mfd. 400 Volt.	.17
11	Tubular .05 Mfd. 400 Volt.	.18
12	Tubular .25 Mfd. 400 Volt.	.26
13	Mica .00025 Mfd.	.21
14	Mica .00025 Mfd.	.21
15	Mica .00025 Mfd.	.21
16	Carbon 10 Megohm 1/2 Watt.	.19

MODEL 1U-195UL
 Socket, Trimmers
 Chassis, Alignment

SENTINEL RADIO CORP

SENTINEL MODEL 1U-195UL

5 tube A. C. - D. C. Operated Superheterodyne Receiver

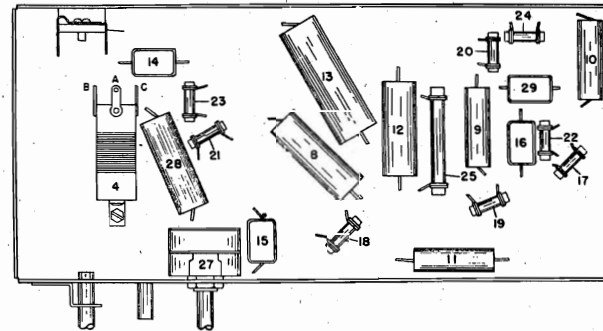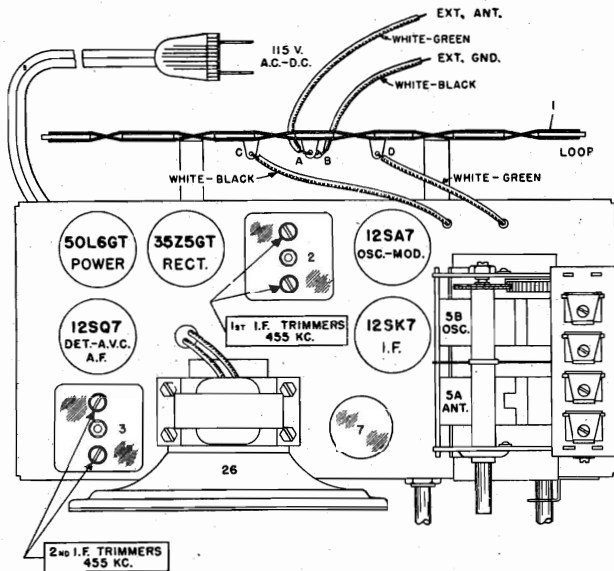

NO. 1U-195-UL

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
 - (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- IMPORTANT: BEFORE ALIGNING, PLACE LOOP ANTENNA IN THE SAME APPROXIMATE POSITION IN THE BACK OF CHASSIS IT WILL BE IN WHEN THE SET IS IN THE CABINET AND THE BACK ATTACHED.**

When adjusting 1720 kilocycle oscillator trimmer and 1400 kilocycle antenna trimmer, do not connect test oscillator to loop.

Couple test oscillator to receiver loop by:



- (a) Make a loop consisting of five to ten turns of No. 20 to 30 size wire wound on a three inch form and attach across output of test oscillator.
- (b) Place test oscillator loop near set loop—**BE SURE THAT NEITHER MOVES WHILE ALIGNING.**
DO NOT ATTACH LOW SIDE OF TEST OSCILLATOR TO RECEIVER—LEAVE UNCONNECTED.

Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below—and:
	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. Any point where no interfering signal is received	455 K. C.	.02 MFD condenser	High side to grid terminal of 12SA7 tube DO NOT REMOVE CAP	Adjust the second I. F. transformer trimmers for maximum output—then adjust each of the first I.F. trimmers for maximum output.
1 Exactly 1730 K. C.	Exactly 1730 K. C.	None	Use small loop to couple test oscillator to receiver loop	Adjust 1730 K. C. oscillator trimmer for maximum output.
2 Approx. 1400 K. C.	Exactly 1400 K. C.	None	Use small loop to couple test oscillator to receiver loop	Adjust 1400 K. C. antenna trimmer for maximum output.

MODEL 168B
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

TWO BAND—FIVE TUBE
1½ Volt—Battery Operated Superheterodyne Receiver

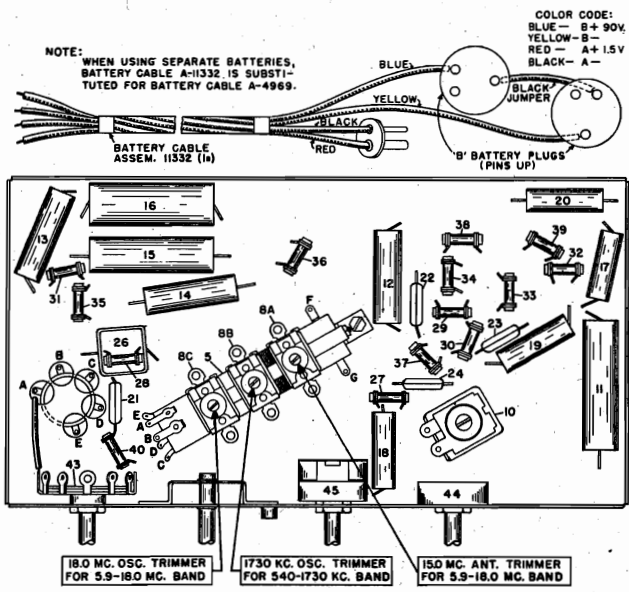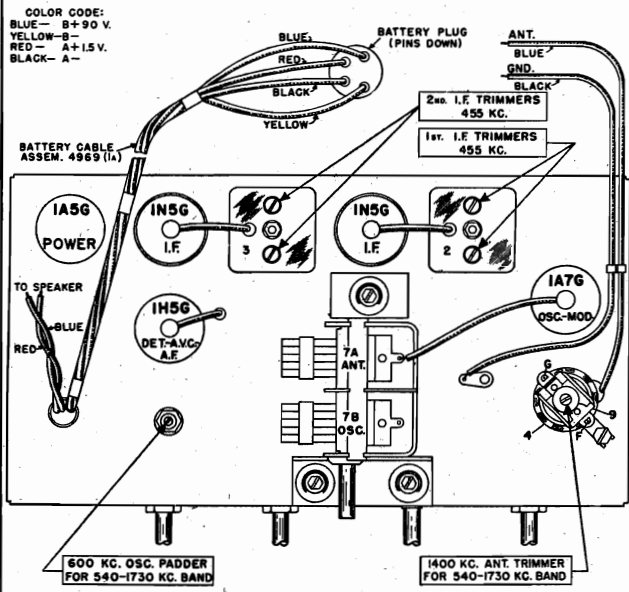


ALIGNMENT PROCEDURE

- o Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.
- Before starting alignment:
 - (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
 - (b) Use an accurately calibrated test oscillator with some type of output measuring device.
 - (c) Have ground lead of test oscillator attached to chassis.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. Alignment use any band position	Any point where no interfering signal is received	Exactly 455 K.C.	.02 Mfd. condenser	High Side to grid cap of 1A7G tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1730 to 540 K.C. Band	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver blue antenna lead	Adjust 1730 K.C. oscillator trimmer for maximum output.
	2 Approx. 1400 K.C.	Exactly 1400 K.C.	.00025 Mfd. condenser	Receiver blue antenna lead	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver blue antenna lead	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
5.9 to 18 M.C. Band	1 Exactly 18 M.C.	Exactly 18 M.C.	400 Ohm carbon resistor	Receiver blue antenna lead	Adjust 18 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Exactly 15 M.C.	Exactly 15 M.C.	400 Ohm carbon resistor	Receiver blue antenna lead	While rocking gang condenser adjust 15 M.C. antenna trimmer for maximum output.

SENTINEL RADIO CORP.

MODEL 175B
Schematic, Voltage

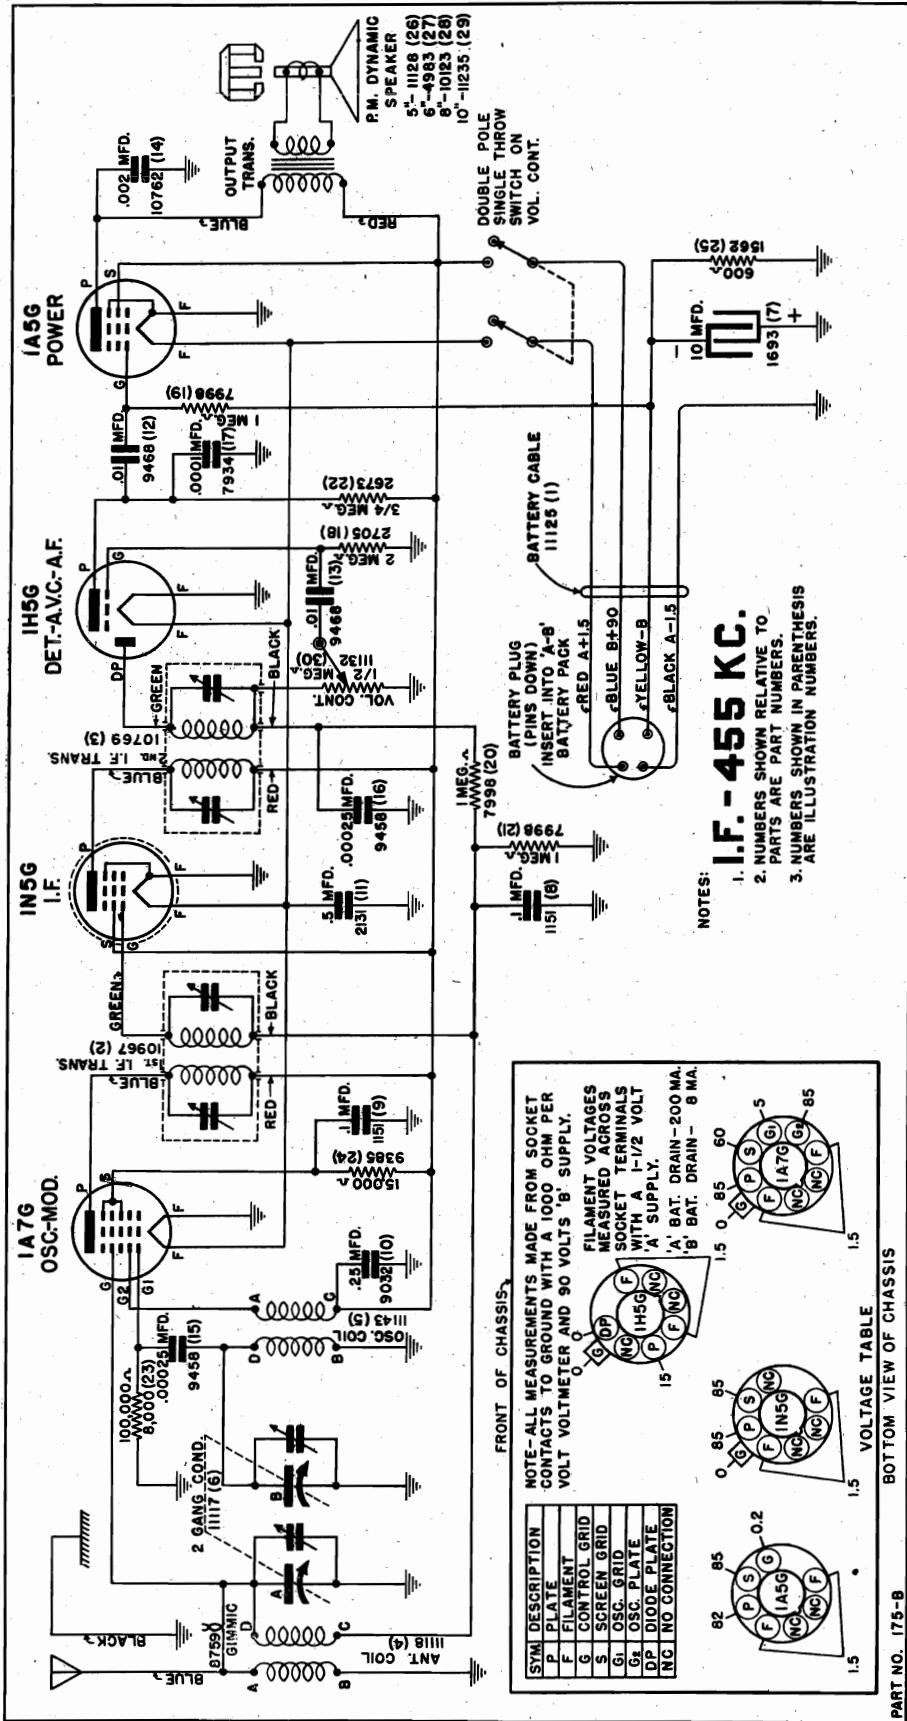

I.F. - 455 KC.
 1. NUMBERS SHOWN RELATIVE TO PARTS ARE PART NUMBERS.
 2. NUMBERS SHOWN IN PARENTHESIS ARE ILLUSTRATION NUMBERS.

Part No.	Description	List Price
11108	Bulb	.07
11121	Dial Scale	.40
8184	Dial Cord	.10
11127	Dial Shaft	.15
11628	Dial Indicator	.15
11627	Dial Pointer	.30
11140	Dial Crystal	1.25
4978	Dial Escutcheon	.06
1027	Knob	.10
11145	Knob	.10

Part No.	Description	List Price
9468	Condenser Tubular .01 Mid. 400 Volt.	.17
10762	Condenser Tubular .0025 Mid. 400 Volt.	.19
9458	Condenser Mica .0025 Mid.	.21
7934	Condenser Mica .0025 Mid.	.21
2705	Resistor Carbon 2 Megohm 1/2 Watt	.19
7998	Resistor Carbon 1 Megohm 1/2 Watt	.19
7998	Resistor Carbon 1 Megohm 1/2 Watt	.19
2673	Resistor Carbon 750,000 Ohm 1/2 Watt	.19
8000	Resistor Carbon 100,000 Ohm 1/2 Watt	.19
9385	Resistor Carbon 15,000 Ohm 1/2 Watt	.19
1562	Resistor Carbon 600 Ohm 1/2 Watt	.19
11128	Speaker P. M. Dynamic 6 in.	4.00
4983	Speaker P. M. Dynamic 10 in.	4.25
11235	Speaker P. M. Dynamic 10 in.	7.50
11132	Volume Control with "off-on" Switch	.95

Part No.	Description	List Price
1(c) 11125	Battery (With 4 Prong Plug)	.25
1(b) 11332	Battery (With 2-3 Prong and 1-2 Prong Plug)	.37
2	1st I. F. Transformer	1.10
3	2nd I. F. Transformer	.55
4	Antenna	.45
5	Oscillator	2.00
6	Tuning (2 Gang)	.75
7	Condenser Tubular Dry Elec. 10 Mid. 25 V. D. C.	.20
8	Condenser Tubular 1 Mid. 200 Volt.	.20
9	Condenser Tubular .25 Mid. 200 Volt.	.25
10	Condenser Tubular .5 Mid. 200 Volt.	.35
11	Condenser Tubular 1 Mid. 200 Volt.	.55
12	Condenser Tubular .01 Mid. 400 Volt.	.17

PARTS LIST



W. 4M 9-39 PART NO. 175B

PRICES ARE SUBJECT TO CHANGE WITHOUT NOTICE

MODEL 175B
 Socket, Trimmers
 Chassis, Alignment

SENTINEL RADIO CORP.

**4 TUBE — 1½ VOLT BATTERY OPERATED
 SUPERHETERODYNE RECEIVER**

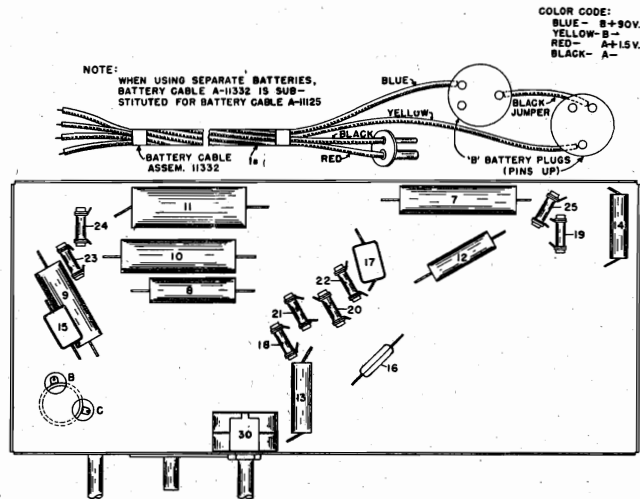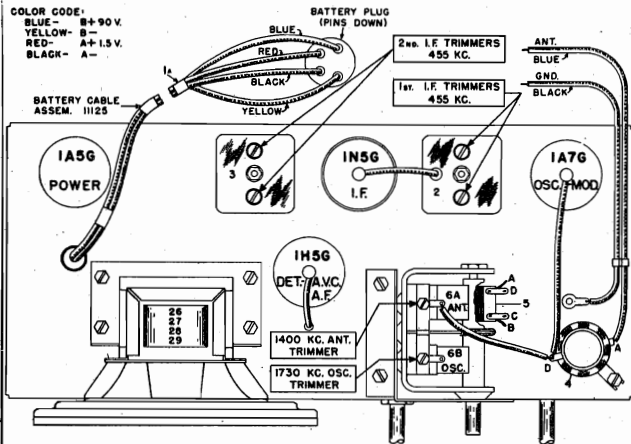

NO. 175-B

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.


Before starting alignment:

- (a) Check tuning dial adjustment by tuning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.

TEST OSCILLATOR				
Set receiver dial to:	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	Refer to parts layout diagram for location of trimmers mentioned below:
I.F. Any point where no interfering signal is received	455 K. C.	.02 MFD. condenser	High side to grid terminal of 1A7G tube DO NOT REMOVE CAP.	Adjust each of the second I. F. transformer trimmers for maximum output—then adjust each of the first I. F. trimmers for maximum output.
1 Exactly 1730 K. C.	Exactly 1730 K. C.	.00025 MFD. condenser	Receiver blue antenna lead	Adjust 1730 K. C. oscillator trimmer for maximum output.
2 Approx. 1400 K. C.	Exactly 1400 K. C.	.00025 MFD. condenser	Receiver blue antenna lead	While rocking gang condenser adjust 1400 K. C. antenna trimmer for maximum output.

SENTINEL MODEL 175B

SENTINEL RADIO CORP.

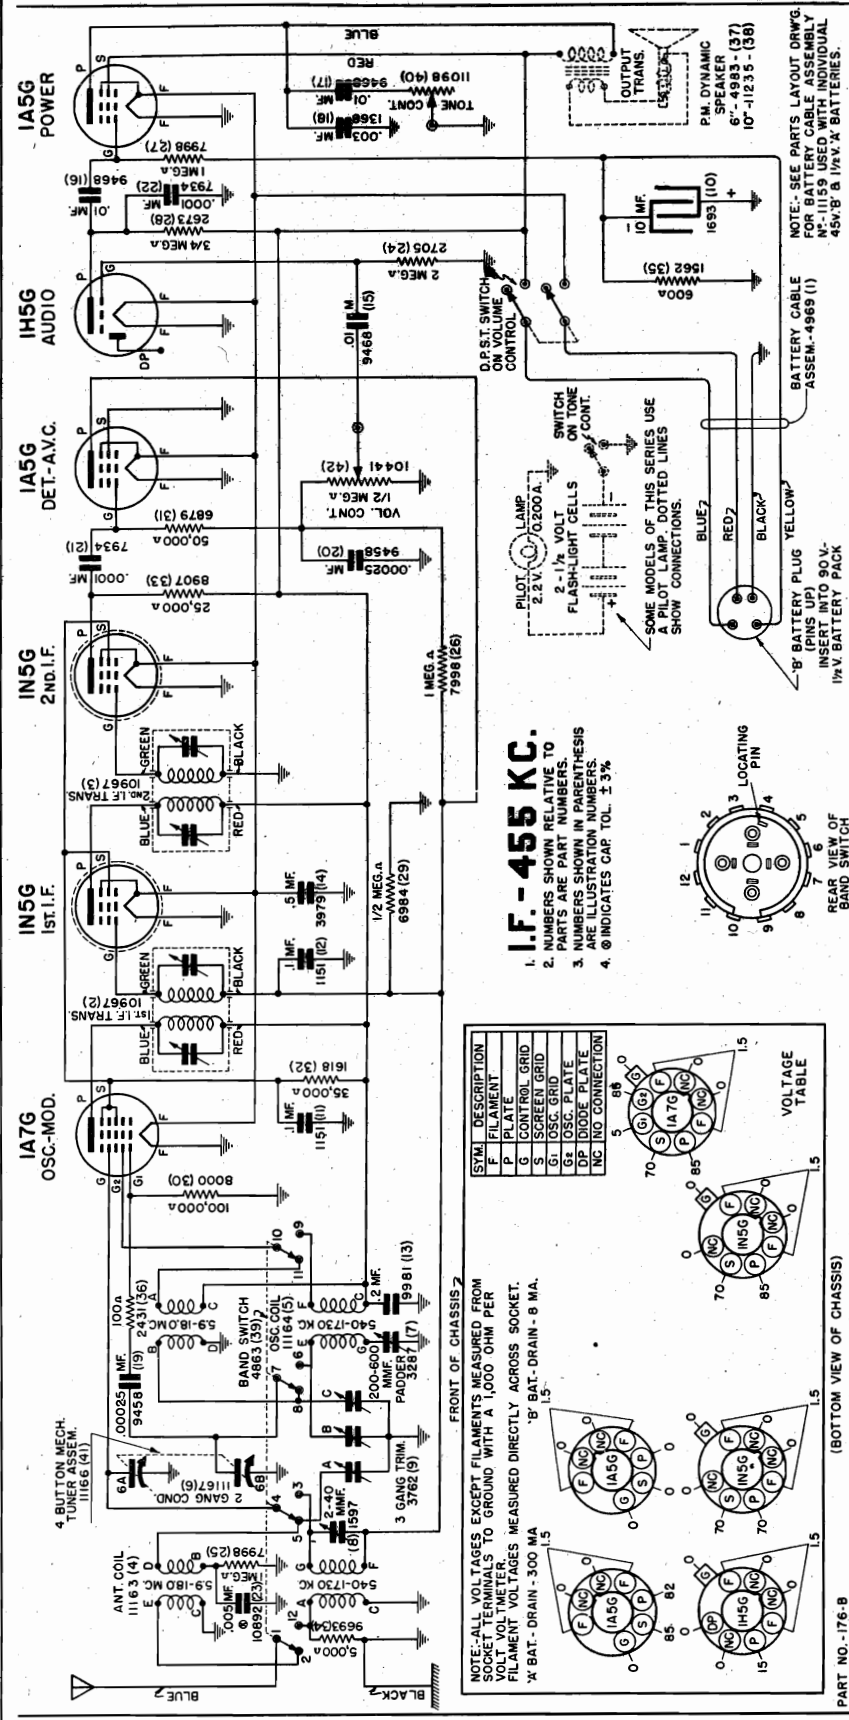

PARTS LIST

Part No.	Description	Part No.	Description	Part No.	Description
1A	4969 Cable	21	Mica .0001 Mid.	11184	Cord
1B	11159 Cable	22	Mica .0001 Mid.	11185	Dial Scale
2	10967 Coil	23	Mica .005 Mid. ± 3%	11173	Dial Assembly
3	10967 Coil	24	2705 Resistor	11193	Dial Pointer
4	11163 Coil	25	7998 Resistor	11198	Escutcheon
5	11164 Coil	26	7998 Resistor	11199	Escutcheon
6	11167 Condenser	27	7998 Resistor	11199	Escutcheon
7	3287 Condenser	28	2573 Resistor	11199	Escutcheon
8	1597 Condenser	29	6994 Resistor	11200	Escutcheon
9	3762 Condenser	30	8000 Resistor	11200	Escutcheon
10	1683 Condenser	31	6879 Resistor	11201	Escutcheon
11	1151 Condenser	32	1818 Resistor	4958	Knob
12	1151 Condenser	33	9907 Resistor	4960	Knob
13	3981 Condenser	34	1582 Resistor	4961	Knob
14	3979 Condenser	35	2431 Resistor	3487	Knob
15	9468 Condenser	36	4983 Speaker	3	Prong "A"
16	9468 Condenser	37	11235 Switch	4	Prong "B"
17	9468 Condenser	38	11098 Tone Control	10	Prong "AB"
18	9468 Condenser	39	11166 Tuner Unit	10	Prong "A"
19	9468 Condenser	40	10441 Volume Control	10	Prong "B"
20	9468 Condenser	41	10441 Volume Control	10	Prong "AB"
		42	10441 Volume Control	10	Prong "A"
				10	Prong "B"
				10	Prong "AB"

MISCELLANEOUS PARTS

12"	18 lb. Drive Cord	.10
11184	Dial Scale	.55
11173	Dial Assembly	.75
11193	Dial Pointer	.16
11198	Escutcheon	1.25
11199	Escutcheon	1.25
11200	Escutcheon	.35
11201	Escutcheon	.35
4958	Knob	.12
4960	Knob	.12
4961	Knob	.12
3487	Knob	.10
3	Prong "A"	.10
4	Prong "B"	.10
10	Prong "AB"	.10
10	Prong "A"	.10
10	Prong "B"	.10
10	Prong "AB"	.10
11197	Dial Spring	.16
4589	Dial Spring	.04
11185	Dial Shaft	.35

REAR VIEW OF BAND SWITCH

NOTE: ALL VOLTAGES EXCEPT FILAMENTS MEASURED FROM SOCKET TERMINALS TO GROUND WITH A 1,000 OHM PER FILAMENT VOLTAGES MEASURED DIRECTLY ACROSS SOCKET.

ANT. COIL 11163 (4)
OSC. COIL 11164 (5)
1ST I.F. TRANS. 10967 (2)
2ND I.F. TRANS. 10967 (3)
3 GANG TRIM. PADDER 3287 (7) 9981 (13)
4 BUTTON MECH. TUNER ASSEM. 11166 (41)
5 ANT. COIL 11163 (4)
6 OSC. COIL 11164 (5)
7 1ST I.F. TRANS. 10967 (2)
8 2ND I.F. TRANS. 10967 (3)
9 3 GANG TRIM. PADDER 3287 (7) 9981 (13)
10 4 BUTTON MECH. TUNER ASSEM. 11166 (41)
11 1ST I.F. TRANS. 10967 (2)
12 2ND I.F. TRANS. 10967 (3)



NOTE: SEE PARTS LAYOUT DRWG. FOR BATTERY CABLE ASSEMBLY. MS-11159 USED WITH INDIVIDUAL 45X B & 1 1/4 V. BATTERIES.

MODEL 176B
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

SENTINEL MODEL 176B
 TWO BAND—SIX TUBE

1½ Volt—Battery Operated Superheterodyne Receiver

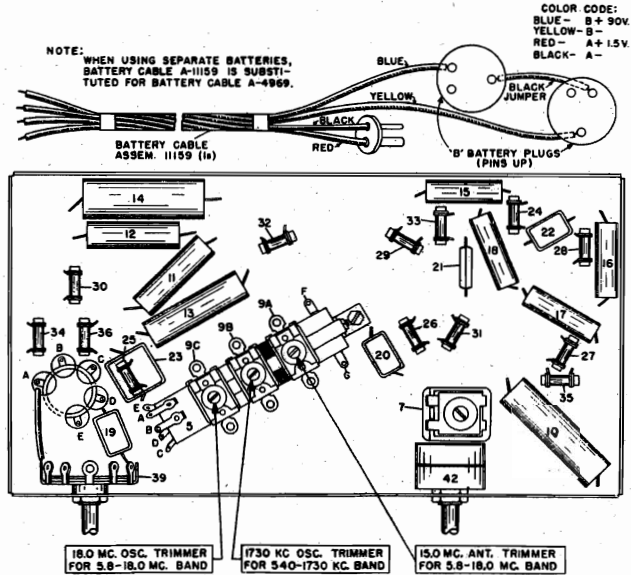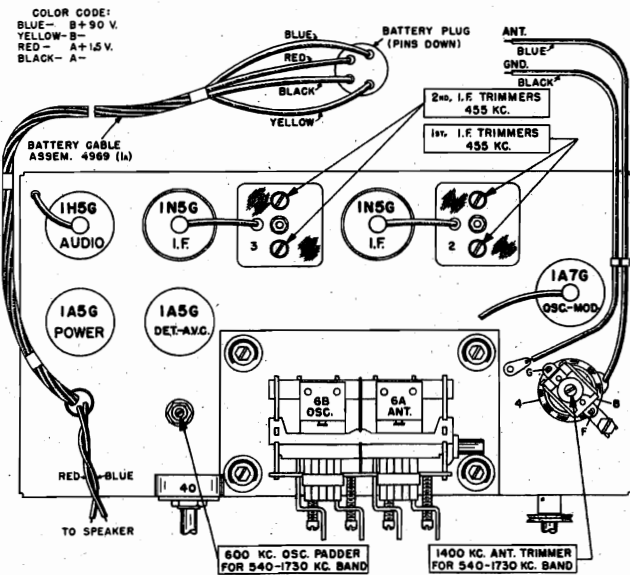

NO. 176-B

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.



Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. Alignment use any band position	Any point where no interfering signal is received	Exactly 455 K.C.	.02 Mfd. condenser	High Side to grid cap of 1A7G tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1730 to 540 K.C. Band	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver blue antenna lead	Adjust 1730 K.C. oscillator trimmer for maximum output.
	2 Approx. 1400 K.C.	Exactly 1400 K.C.	.00025 Mfd. condenser	Receiver blue antenna lead	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver blue antenna lead	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
5.8 to 18 M.C. Band	1 Exactly 18 M.C.	Exactly 18 M.C.	400 Ohm carbon resistor	Receiver blue antenna lead	Adjust 18 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 15 M.C.	Exactly 15 M.C.	400 Ohm carbon resistor	Receiver blue antenna lead	While rocking gang condenser adjust 15 M.C. antenna trimmer for maximum output.

SENTINEL RADIO CORP.

MODEL 180XL
Schematic, Voltage

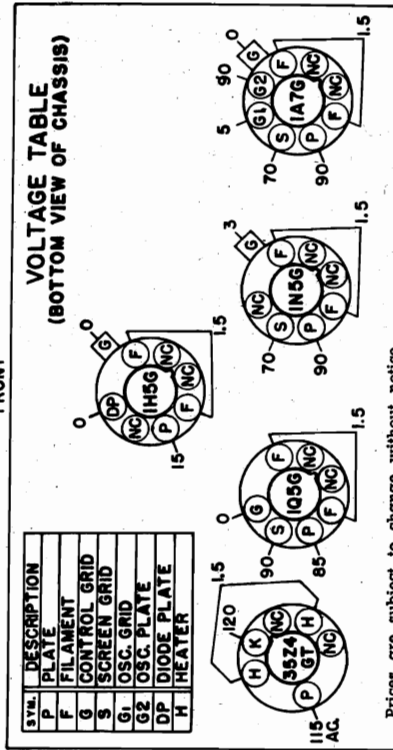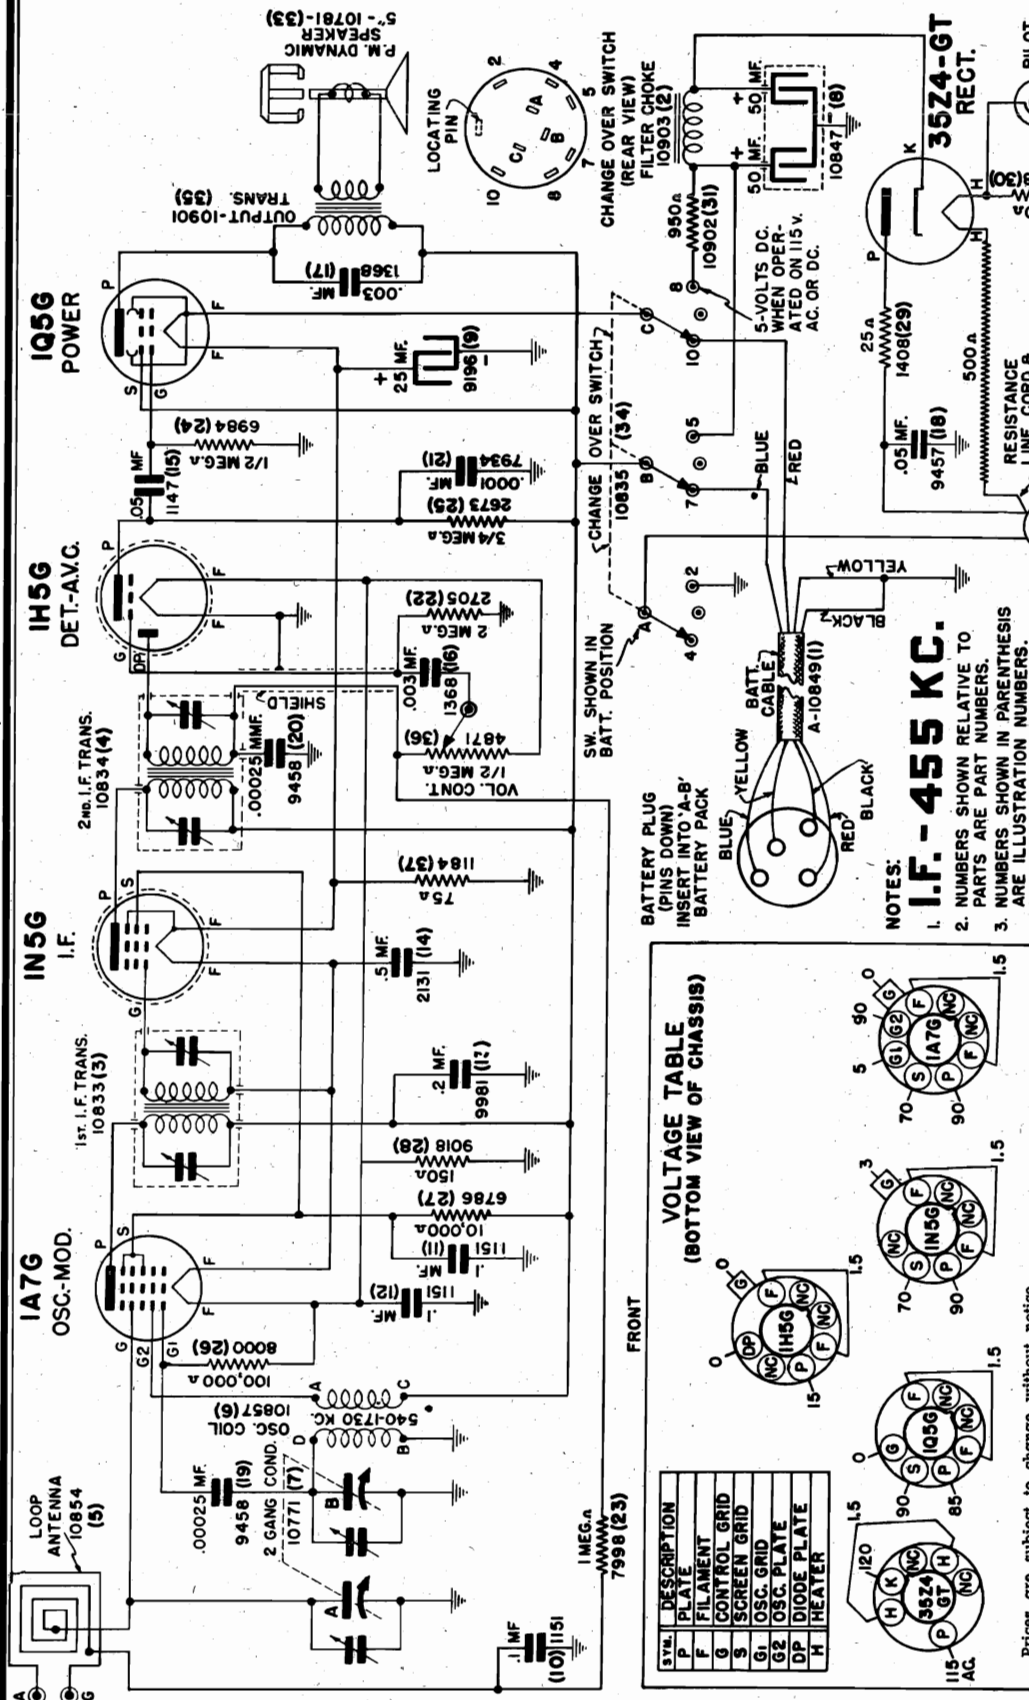

NOTES:
 1. I.F. - 455 KC.
 2. NUMBERS SHOWN RELATIVE TO PARTS ARE PART NUMBERS.
 3. NUMBERS SHOWN IN PARENTHESIS ARE ILLUSTRATION NUMBERS.
 4. ON EARLY MODELS 25 MF. COND. (9) WAS TWO 10 MF. COND. IN PARALLEL.


Illus. Part No.	Description	List Price
1	Battery	.30
2	Cable	.85
3	Choke	1.45
4	Cell	1.45
5	Coil	1.60
6	Coil	1.60
7	Coil	1.60
8	Coil	1.60
9	Condenser	1.10
10	Condenser	.94
11	Condenser	.20
12	Condenser	.20
13	Condenser	.20
14	Condenser	.29
15	Condenser	.55
16	Condenser	.30
17	Condenser	.17
18	Condenser	.18
19	Condenser	.21
20	Condenser	.21
21	Condenser	.21
22	Condenser	.19
23	Condenser	.19
24	Condenser	.19
25	Condenser	.19
26	Condenser	.19
27	Condenser	.19
28	Condenser	.19
29	Condenser	.19
30	Resistor	.17
31	Resistor	.22
32	Resistor	.65
33	Resistor	.90
34	Resistor	.60
35	Resistor	.325
36	Resistor	.80
37	Resistor	.19
38	Resistor	1.50
39	Resistor	.22
40	Resistor	.350
41	Resistor	.65
42	Resistor	.90
43	Resistor	.60
44	Resistor	.325
45	Resistor	.80
46	Resistor	.19
47	Resistor	1.50
48	Resistor	.22
49	Resistor	.350
50	Resistor	.65
51	Resistor	.90
52	Resistor	.60
53	Resistor	.325
54	Resistor	.80
55	Resistor	.19
56	Resistor	1.50
57	Resistor	.22
58	Resistor	.350
59	Resistor	.65
60	Resistor	.90
61	Resistor	.60
62	Resistor	.325
63	Resistor	.80
64	Resistor	.19
65	Resistor	1.50
66	Resistor	.22
67	Resistor	.350
68	Resistor	.65
69	Resistor	.90
70	Resistor	.60
71	Resistor	.325
72	Resistor	.80
73	Resistor	.19
74	Resistor	1.50
75	Resistor	.22
76	Resistor	.350
77	Resistor	.65
78	Resistor	.90
79	Resistor	.60
80	Resistor	.325
81	Resistor	.80
82	Resistor	.19
83	Resistor	1.50
84	Resistor	.22
85	Resistor	.350
86	Resistor	.65
87	Resistor	.90
88	Resistor	.60
89	Resistor	.325
90	Resistor	.80
91	Resistor	.19
92	Resistor	1.50
93	Resistor	.22
94	Resistor	.350
95	Resistor	.65
96	Resistor	.90
97	Resistor	.60
98	Resistor	.325
99	Resistor	.80
100	Resistor	.19
101	Resistor	1.50
102	Resistor	.22
103	Resistor	.350
104	Resistor	.65
105	Resistor	.90
106	Resistor	.60
107	Resistor	.325
108	Resistor	.80
109	Resistor	.19
110	Resistor	1.50
111	Resistor	.22
112	Resistor	.350
113	Resistor	.65
114	Resistor	.90
115	Resistor	.60
116	Resistor	.325
117	Resistor	.80
118	Resistor	.19
119	Resistor	1.50
120	Resistor	.22
121	Resistor	.350
122	Resistor	.65
123	Resistor	.90
124	Resistor	.60
125	Resistor	.325
126	Resistor	.80
127	Resistor	.19
128	Resistor	1.50
129	Resistor	.22
130	Resistor	.350
131	Resistor	.65
132	Resistor	.90
133	Resistor	.60
134	Resistor	.325
135	Resistor	.80
136	Resistor	.19
137	Resistor	1.50
138	Resistor	.22
139	Resistor	.350
140	Resistor	.65
141	Resistor	.90
142	Resistor	.60
143	Resistor	.325
144	Resistor	.80
145	Resistor	.19
146	Resistor	1.50
147	Resistor	.22
148	Resistor	.350
149	Resistor	.65
150	Resistor	.90
151	Resistor	.60
152	Resistor	.325
153	Resistor	.80
154	Resistor	.19
155	Resistor	1.50

MODEL 180XL
 Socket, Trimmers
 Alignment, Chassis


SENTINEL RADIO CORP.

PORTABLE - BATTERY OR 110 VOLTS, DC-AC 50-60 CYCLES

Bottom View of Chassis

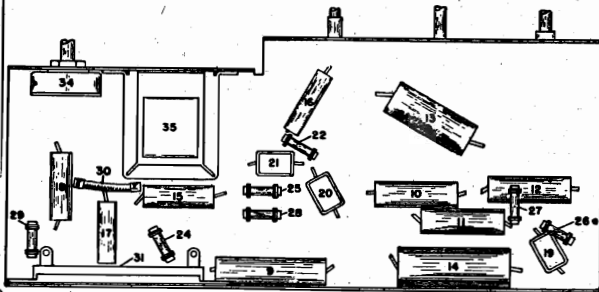

Top View of Chassis

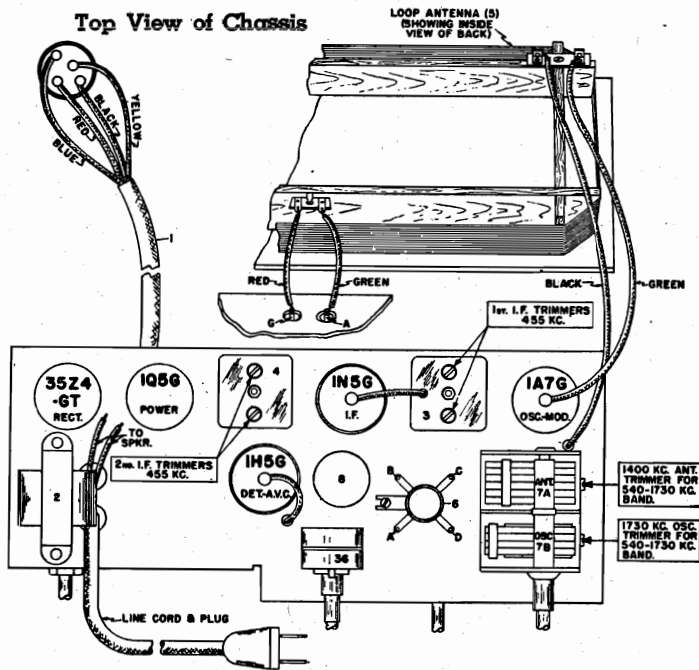

ALIGNMENT PROCEDURE

Follow procedure carefully and in the order given—read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment, check tuning dial adjustment by: turn gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial indicator must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.

Use an accurately calibrated test oscillator with some type of output measuring device.

BEFORE ALIGNING, PLACE LOOP ANTENNA AND THE "A" AND "B" BATTERY-PACK IN THE SAME APPROXIMATE POSITION IN THE BACK OF CHASSIS THAT THEY WILL BE IN WHEN THE SET IS IN THE CABINET AND THE CABINET BACK CLOSED.

When adjusting 1730 kilocycle oscillator trimmer and 1400 kilocycle antenna trimmer, do not connect test oscillator to terminals on bottom of cabinet back.


Couple test oscillator to receiver loop by:

- a) Make a loop consisting of five to ten turns of No. 20 to 30 size wire wound on a three inch form and attach across output of test oscillator.
- b) Place test oscillator loop near set loop—BE SURE THAT NEITHER MOVES WHILE ALIGNING.

Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below—and:
	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. Any point where no interfering signal is received	455 K. C.	.02 MFD condenser	High side to g.i.d terminal of 1A7G tube Low side to chassis DO NOT REMOVE CAP	Adjust the second I. F. transformer trimmers for maximum output—then adjust each of the first I. F. trimmers for maximum output.
(1) Exactly 1730 K. C.	Exactly 1730 K. C.	None	Use small loop to couple test oscillator to receiver loop	Adjust 1730 K. C. oscillator trimmer for maximum output.
(2) Approx. 1400 K. C.	Exactly 1400 K. C.	None	Use small loop to couple test oscillator to receiver loop	Adjust 1400 K. C. antenna trimmer for maximum output.

SENTINEL RADIO CORP.

MODEL 181BL
Schematic, Voltage

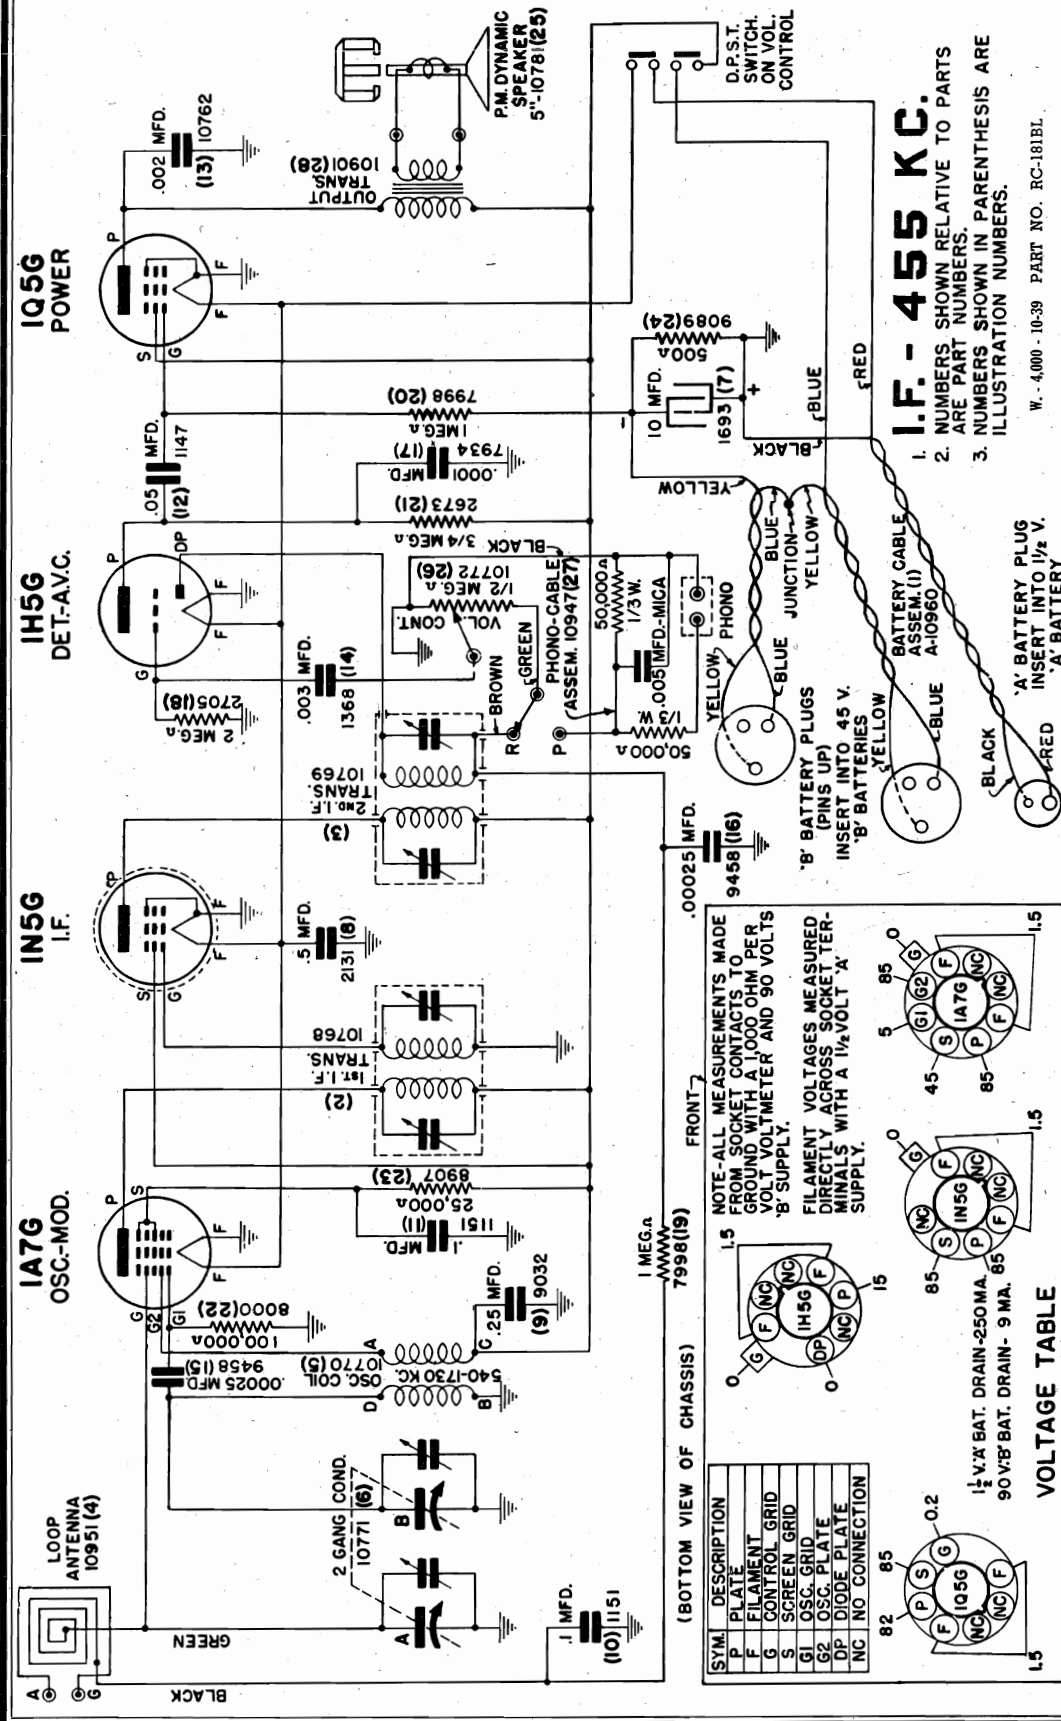

I.F. - 455 KC.
 1. NUMBERS SHOWN RELATIVE TO PARTS ARE PART NUMBERS.
 2. NUMBERS SHOWN IN PARENTHESIS ARE ILLUSTRATION NUMBERS.

W. - 4,000 - 10-39 PART NO. RC-181BL

Part No.	Description	List Price
1	10960 Cable	.95
2	10768 Coil	.15
3	10769 Coil	.16
4	10951 Loop	.65
5	62 Osc. Plate	.12
6	10771 Condenser	.12
7	1693 Condenser	5.50
8	2131 Condenser	.20
9	9032 Condenser	.25
10	1151 Condenser	.55
11	1151 Condenser	.55
12	1147 Condenser	.55
13	10762 Condenser	1.10
14	1368 Condenser	1.75
15	9458 Condenser	1.85
16	17954 Condenser	1.85
17	2705 Resistor	1.65
18	7998 Resistor	1.65
19	7998 Resistor	1.65
20	2673 Resistor	.75
21	8007 Resistor	.55
22	8007 Resistor	.55
23	8009 Resistor	.25
24	8009 Resistor	.25
25	10781 Speaker	.20
26	10772 Volume Control	.90
27	10947 Cable	.90
28	10901 Transformer	.35
29	10920 Dial Scale	.15
30	3814 Dial Drive Cord	.15
31	10777 Dial Pointer	.65
32	10853 Dial Escutcheon	.12
33	4958 Knob	.12
34	4959 Knob	.12
35	10594 Phono Motor	5.50
36	10955 Pickup	5.25

VOLTAGE TABLE

NOTE - ALL MEASUREMENTS MADE FROM SOCKET CONTACTS TO GROUND WITH A 1,000 OHM PER VOLT VOLTMETER AND 90 VOLTS 'B' SUPPLY.

FILAMENT VOLTAGES MEASURED DIRECTLY ACROSS SOCKET TERMINALS WITH A 1/2 VOLT 'A' SUPPLY.

SYM.	DESCRIPTION	1.5	85
P	PLATE		
F	FILAMENT		
G	CONTROL GRID		
S	SCREEN GRID		
G1	OSC. GRID		
G2	OSC. PLATE		
NC	DIODE PLATE		
DP	NO CONNECTION		

1 1/2 V X BAT. DRAIN-250 MA. 85
 90 V B' BAT. DRAIN-9 MA. 85


PARTS LIST

PRICES ARE SUBJECT TO CHANGE WITHOUT NOTICE.

Illus. No.	Part No.	Description	List Price
1	10960	Cable	.95
2	10768	Coil	.15
3	10769	Coil	.16
4	10951	Loop	.65
5	62	Osc. Plate	.12
6	10771	Condenser	.12
7	1693	Condenser	5.50
8	2131	Condenser	.20
9	9032	Condenser	.25
10	1151	Condenser	.55
11	1151	Condenser	.55
12	1147	Condenser	.55
13	10762	Condenser	1.10
14	1368	Condenser	1.75
15	9458	Condenser	1.85
16	17954	Condenser	1.85
17	2705	Resistor	1.65
18	7998	Resistor	1.65
19	7998	Resistor	1.65
20	2673	Resistor	.75
21	8007	Resistor	.55
22	8007	Resistor	.55
23	8009	Resistor	.25
24	8009	Resistor	.25
25	10781	Speaker	.20
26	10772	Volume Control	.90
27	10947	Cable	.90
28	10901	Transformer	.35
29	10920	Dial Scale	.15
30	3814	Dial Drive Cord	.15
31	10777	Dial Pointer	.65
32	10853	Dial Escutcheon	.12
33	4958	Knob	.12
34	4959	Knob	.12
35	10594	Phono Motor	5.50
36	10955	Pickup	5.25

MODEL 181BL
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

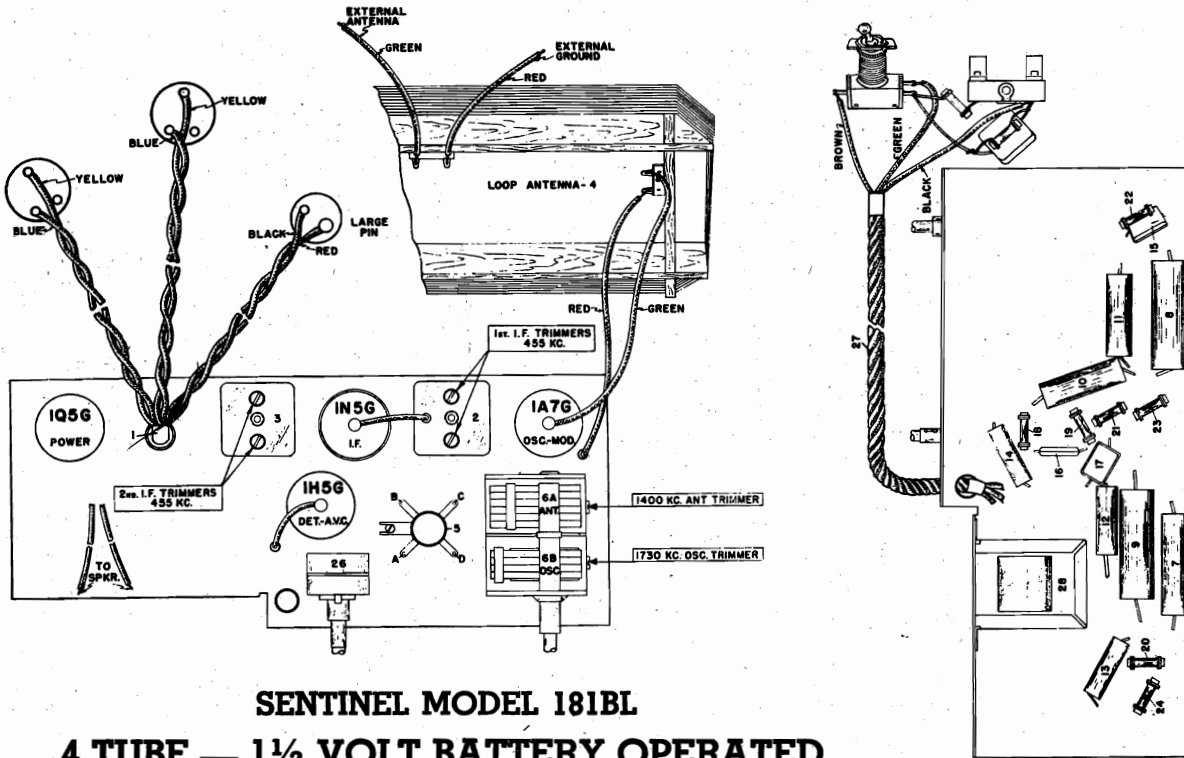

SENTINEL MODEL 181BL

4 TUBE — 1½ VOLT BATTERY OPERATED

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by tuning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.

Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	



I.F. Any point where no interfering signal is received	455 K. C.	.02 MFD. condenser	High side to grid terminal of 1A7G tube DO NOT REMOVE CAP.	Adjust each of the second I. F. transformer trimmers for maximum output—then adjust each of the first I. F. trimmers for maximum output.
---	-----------	--------------------	---	--

1 Exactly 1730 K. C.	Exactly 1730 K. C.	.00025 MFD. condenser	Receiver blue antenna lead	Adjust 1730 K. C. oscillator trimmer for maximum output.
2 Approx. 1400 K. C.	Exactly 1400 K. C.	.00025 MFD. condenser	Receiver blue antenna lead	While rocking gang condenser adjust 1400 K. C. antenna trimmer for maximum output.

MODELS 184U, 184UE
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

SENTINEL MODEL 184U and 184UE—THREE BAND—FIVE and SIX TUBE
A. C. Operated Superheterodyne Receiver

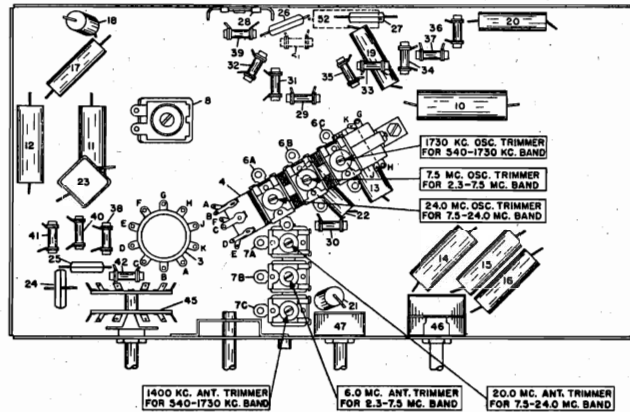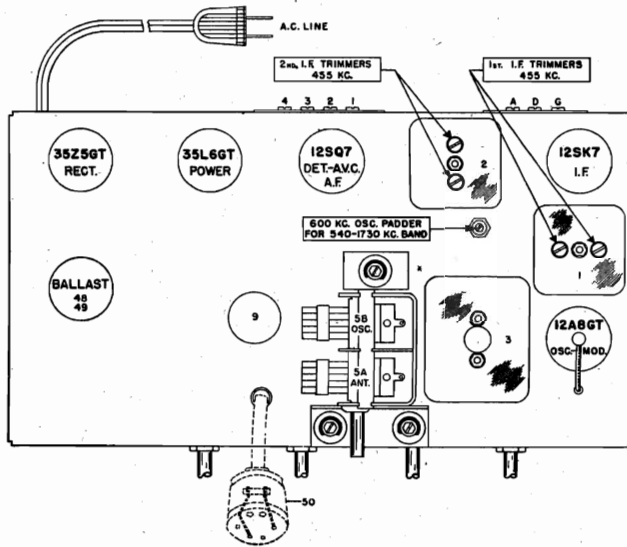

NO. 184-U(ET)

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:


- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I.F. ALIGNMENT use any band position	Any point where no interfering signal is received.	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 12A8GT Do not remove cap	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1730 TO 540 K.C. BAND	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	Adjust 1730 K.C. oscillator trimmer for maximum output.
	2 Approx. 1400 K.C.	Approx. 1400 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
2.3 TO 7.5 M.C. BAND	1 Exactly 7.5 M.C.	Exactly 7.5 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 7.5 M.C. oscillator trimmer for maximum output.
	2 Approx. 6 M.C.	Exactly 6 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 6 M.C. antenna trimmer for maximum output.
7.5 TO 24 M.C. BAND	1 Exactly 24 M.C.	Exactly 24 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 24 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 20 M.C.	Approx. 20 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 20 M.C. antenna trimmer for maximum output.

MODELS 185A, 185AE
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

**SENTINEL MODEL 185A and 185AE—THREE BAND—FIVE and SIX TUBE
 A. C. Operated Superheterodyne Receiver**

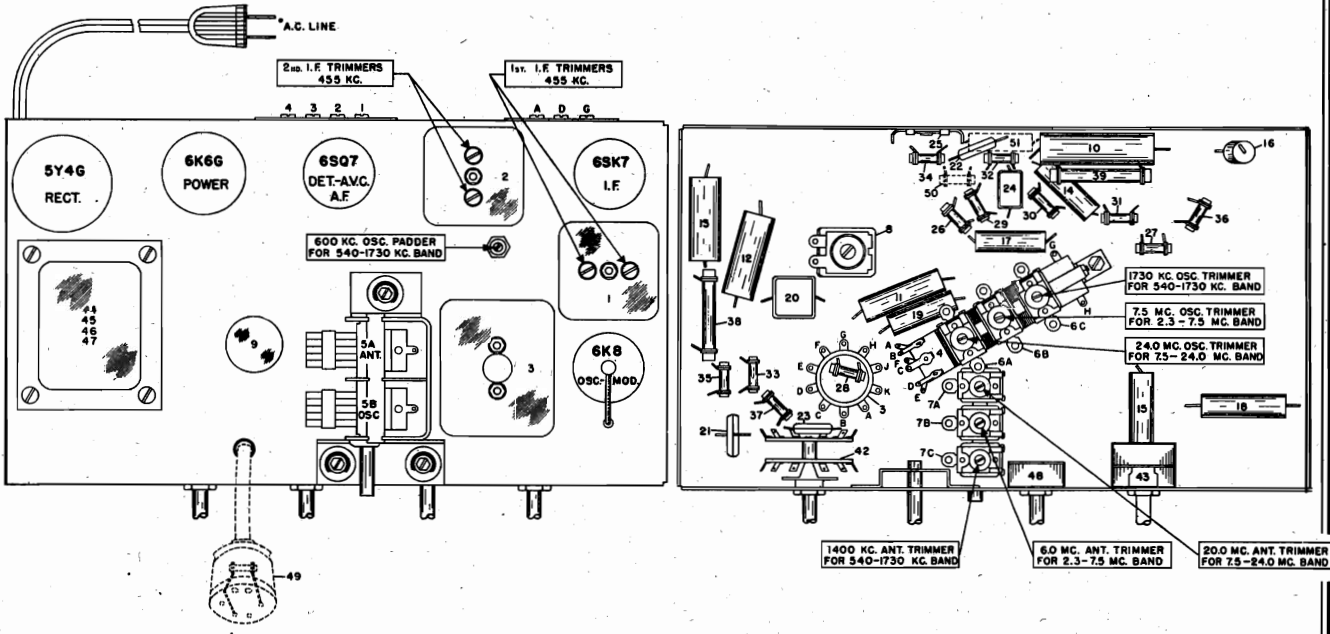

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.



Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I.F. ALIGNMENT use any band position	Any point where no interfering signal is received.	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 6K8 tube. Do not remove cap	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1730 TO 540 K.C. BAND	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	Adjust 1730 K.C. oscillator trimmer for maximum output.
	2 Exactly 1400 K.C.	Exactly 1400 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
2.3 TO 7.5 M.C. BAND	1 Exactly 7.5 M.C.	Exactly 7.5 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 7.5 M.C. oscillator trimmer for maximum output.
	2 Approx. 6. M.C.	Exactly 6. M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 6 M.C. antenna trimmer for maximum output
7.5 TO 24 M.C. BAND	1 Exactly 24 M.C.	Exactly 24 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 24 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use—is tuned in.
	2 Approx. 20 M.C.	Approx. 20 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 20 M.C. antenna trimmer for maximum output.

MODELS 186B, 186BE
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

TWO BAND—FIVE and SIX TUBE

6 Volt Battery Operated Superheterodyne Receiver

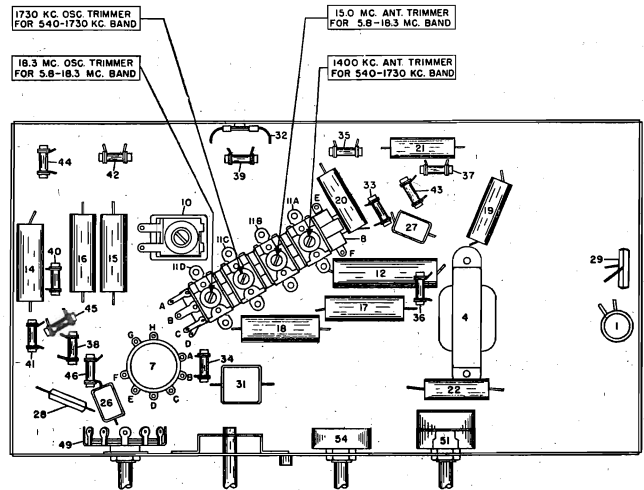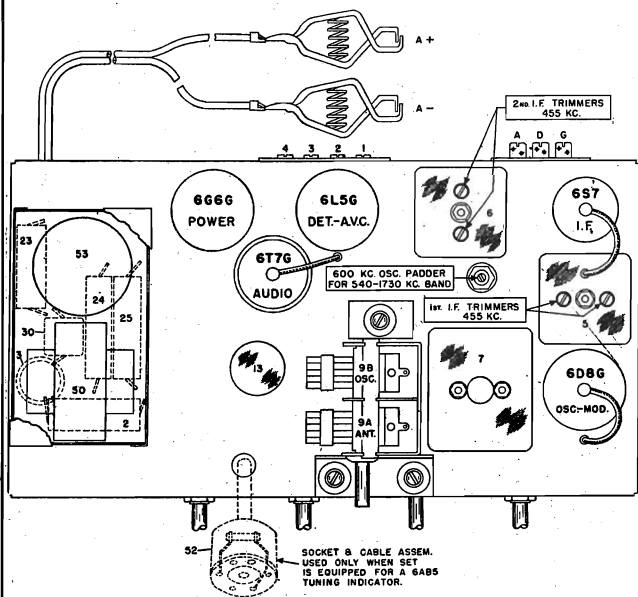

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. alignment use any band position	Any point where no interfering signal is received	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 6D8G tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1730 to 540 K. C. Band	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver "A" antenna post	Adjust 1730 K.C. oscillator trimmer for maximum output.
	2 Approx. 1400 K.C.	Approx. 1400 K.C.	.00025 Mfd. condenser	Receiver "A" antenna post	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver "A" antenna post	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
5.8 to 18.3 M. C. Band	1 Exactly 18.3 M.C.	Exactly 18.3 M.C.	400 Ohm carbon resistor	Receiver "A" antenna post	Adjust 18.3 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 15 M.C.	Approx. 15 M.C.	400 Ohm carbon resistor	Receiver "A" antenna post	While rocking gang condenser adjust 15 M.C. antenna trimmer for maximum output.

Television Connections:—The audio amplifier and loud speaker of this receiver can be used to amplify the sound output of a television receiver not equipped with an audio amplifier and speaker—just connect the sound channel output of the television receiver (from the second detector) to the No. 3 and No. 4 terminals on back of receiver and attach a single pole double throw switch.


Phonograph Connections:—Phonograph records may be electrically reproduced through the receiver loud speaker by connecting the leads of the phonograph pickup to the No. 3 and No. 4 terminals and using either an electrical or hand wound spring operated phonograph motor. The pickup should be of the high impedance type and a single pole double throw switch must be connected as shown in diagram. To operate—place switch in phono position—set pickup needle on record and adjust radio volume control to desired amount of volume.

When shipped from factory a jumper wire is attached to terminals 1 and 2. If receiver is not to be used for phono or television operation, leave the jumper wire in this position. When receiver is used for either phono or television sound operation, remove jumper wire.

SENTINEL MODELS 186B and 186BE



SENTINEL RADIO CORP.

MODEL 189L
Schematic, Voltage

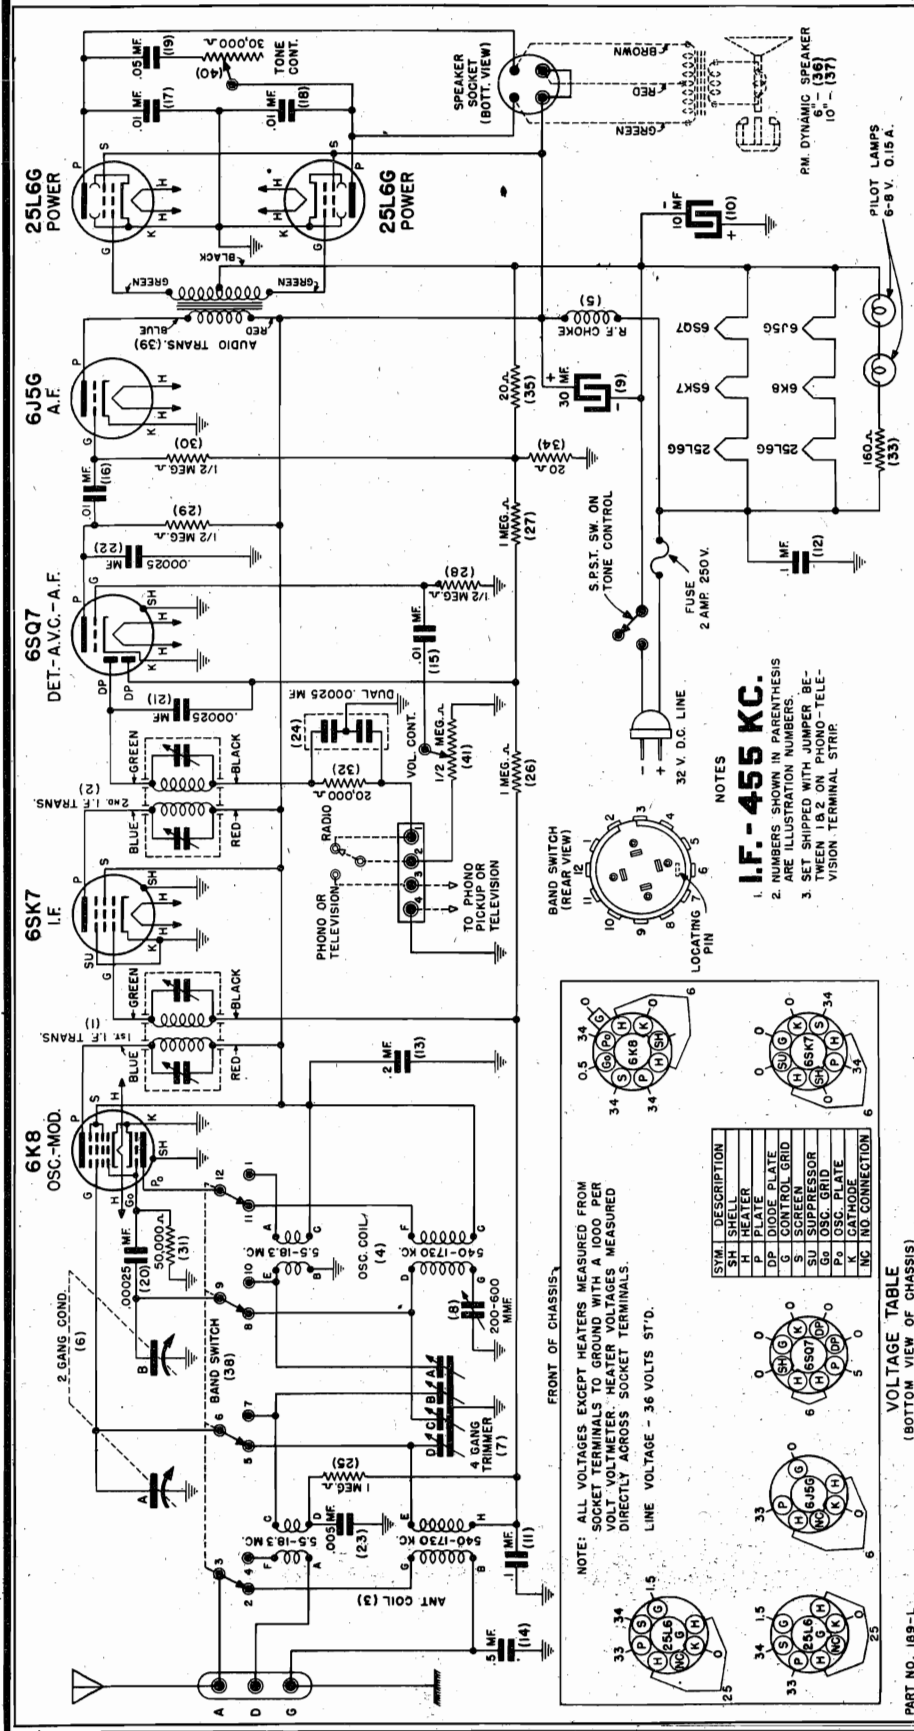

I.F. - 455 KC.

- NOTES
 1. NUMBERS SHOWN IN PARENTHESES ARE ILLUSTRATION NUMBERS.
 2. SET SHIPPED WITH JUMPER BETWEEN 1 & 2 ON PHONO-TELEVISION TERMINAL STRIP.

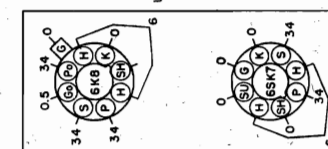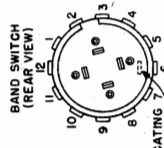

SYM.	DESCRIPTION
H	HEATER
P	PLATE
DP	DIODE PLATE
G	CONTROL GRID
S	SUPPRESSOR
GO	OSC. GRID
Po	OSC. PLATE
K	CATHODE
NC	NO CONNECTION

NOTE: ALL VOLTAGES EXCEPT HEATERS MEASURED FROM SOCKET TERMINALS TO GROUND WITH A 1000 PER VOLT VOLTMETER. HEATER VOLTAGES MEASURED DIRECTLY ACROSS SOCKET TERMINALS.
 LINE VOLTAGE - 36 VOLTS STD.

PART NO. 189-L VOLTAGE TABLE (BOTTOM VIEW OF CHASSIS)

Part No.	Description	List Price
1	Coil	.15
2	Coil	.10
3	Coil	.10
4	Coil	.10
5	Coil	.10
6	Coil	.10
7	Coil	.10
8	Coil	.10
9	Coil	.10
10	Coil	.10
11	Coil	.10
12	Coil	.10
13	Coil	.10
14	Coil	.10
15	Coil	.10
16	Coil	.10
17	Coil	.10
18	Coil	.10
19	Coil	.10
20	Coil	.10
21	Coil	.10
22	Coil	.10
23	Coil	.10
24	Coil	.10
25	Coil	.10
26	Coil	.10
27	Coil	.10
28	Coil	.10
29	Coil	.10
30	Coil	.10
31	Coil	.10
32	Coil	.10
33	Coil	.10
34	Coil	.10
35	Coil	.10
36	Coil	.10
37	Coil	.10
38	Coil	.10
39	Coil	.10
40	Coil	.10
41	Volume Control	.80
42	Block	.15
43	Bulb	.10
44	Block	.10
45	Block	.10
46	Block	.10
47	Block	.10
48	Block	.10
49	Block	.10
50	Block	.10
51	Block	.10
52	Block	.10
53	Block	.10
54	Block	.10
55	Block	.10
56	Block	.10
57	Block	.10
58	Block	.10
59	Block	.10
60	Block	.10
61	Block	.10
62	Block	.10
63	Block	.10
64	Block	.10
65	Block	.10
66	Block	.10
67	Block	.10
68	Block	.10
69	Block	.10
70	Block	.10
71	Block	.10
72	Block	.10
73	Block	.10
74	Block	.10
75	Block	.10
76	Block	.10
77	Block	.10
78	Block	.10
79	Block	.10
80	Block	.10
81	Block	.10
82	Block	.10
83	Block	.10
84	Block	.10
85	Block	.10
86	Block	.10
87	Block	.10
88	Block	.10
89	Block	.10
90	Block	.10
91	Block	.10
92	Block	.10
93	Block	.10
94	Block	.10
95	Block	.10
96	Block	.10
97	Block	.10
98	Block	.10
99	Block	.10
100	Block	.10



PARTS LIST

PRICES ARE SUBJECT TO CHANGE WITHOUT NOTICE.
 WHEN ORDERING PARTS BE SURE TO ORDER BY PART NUMBER

MODEL 189L
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

SENTINEL MODEL 189L
TWO BAND—SIX TUBE
32 Volt Operated Superheterodyne Receiver

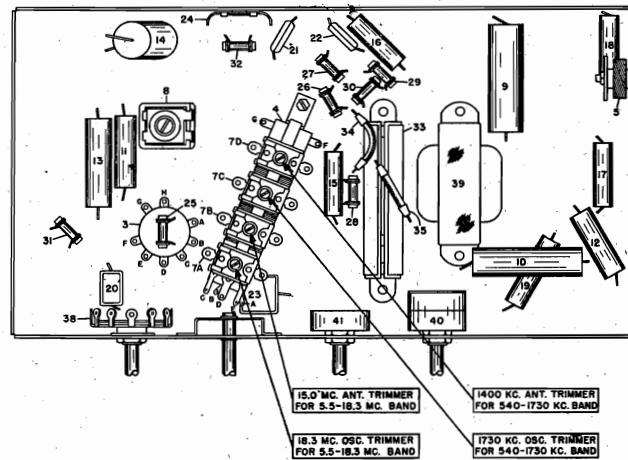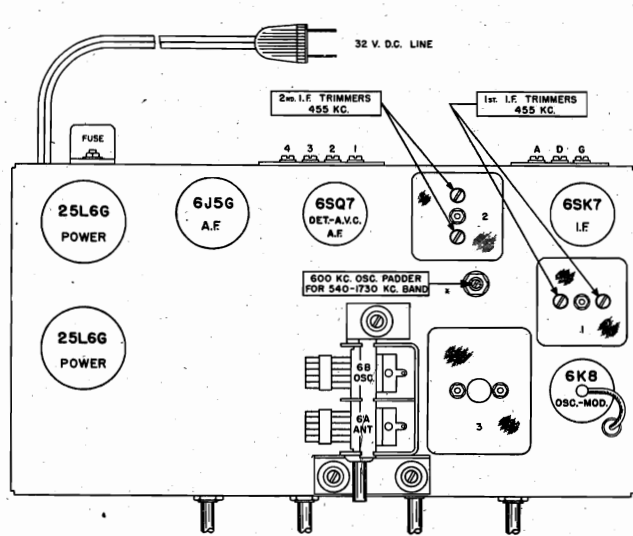

NO. 189-L

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to "G" Post.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. alignment use any band position	Any point where no interfering signal is received	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 6K8 tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1730 to 540 K. C. Band	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver "A" antenna post	Adjust 1730 K. C. oscillator trimmer for maximum output.
	2 Approx. 1400 K.C.	Approx. 1400 K.C.	.00025 Mfd. condenser	Receiver "A" antenna post	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver "A" antenna post	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
5.5 to 18.3 M. C. Band	1 Exactly 18.3 M.C.	Exactly 18.3 M.C.	400 Ohm carbon resistor	Receiver "A" antenna post	Adjust 18.3 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 15 M.C.	Approx. 15 M.C.	400 Ohm carbon resistor	Receiver "A" antenna post	While rocking gang condenser adjust 15 M.C. antenna trimmer for maximum output.


Television Connections:—The audio amplifier and loud speaker of this receiver can be used to amplify the sound output of a television receiver not equipped with an audio amplifier and speaker—just connect the sound channel output of the television receiver (from the second detector) to the No. 3 and No. 4 terminals on back of receiver and attach a single pole double throw switch.

Phonograph Connections:—Phonograph records may be electrically reproduced through the receiver loud speaker by connecting the leads of the phonograph pickup to the No. 3 and No. 4 terminals and using either an electrical or hand wound spring operated phonograph motor. The pickup should be of the high impedance type and a single pole double throw switch must be connected as shown in diagram. To operate—place switch in phono position—set pickup needle on record and adjust radio volume control to desired amount of volume.

When shipped from factory a jumper wire is attached to terminals 1 and 2. If receiver is not to be used for phono or television operation, leave the jumper wire in this position. When receiver is used for either phono or television sound operation, remove jumper wire.

SENTINEL RADIO CORP.



MODELS 190A, 190AE
Schematic, Voltage

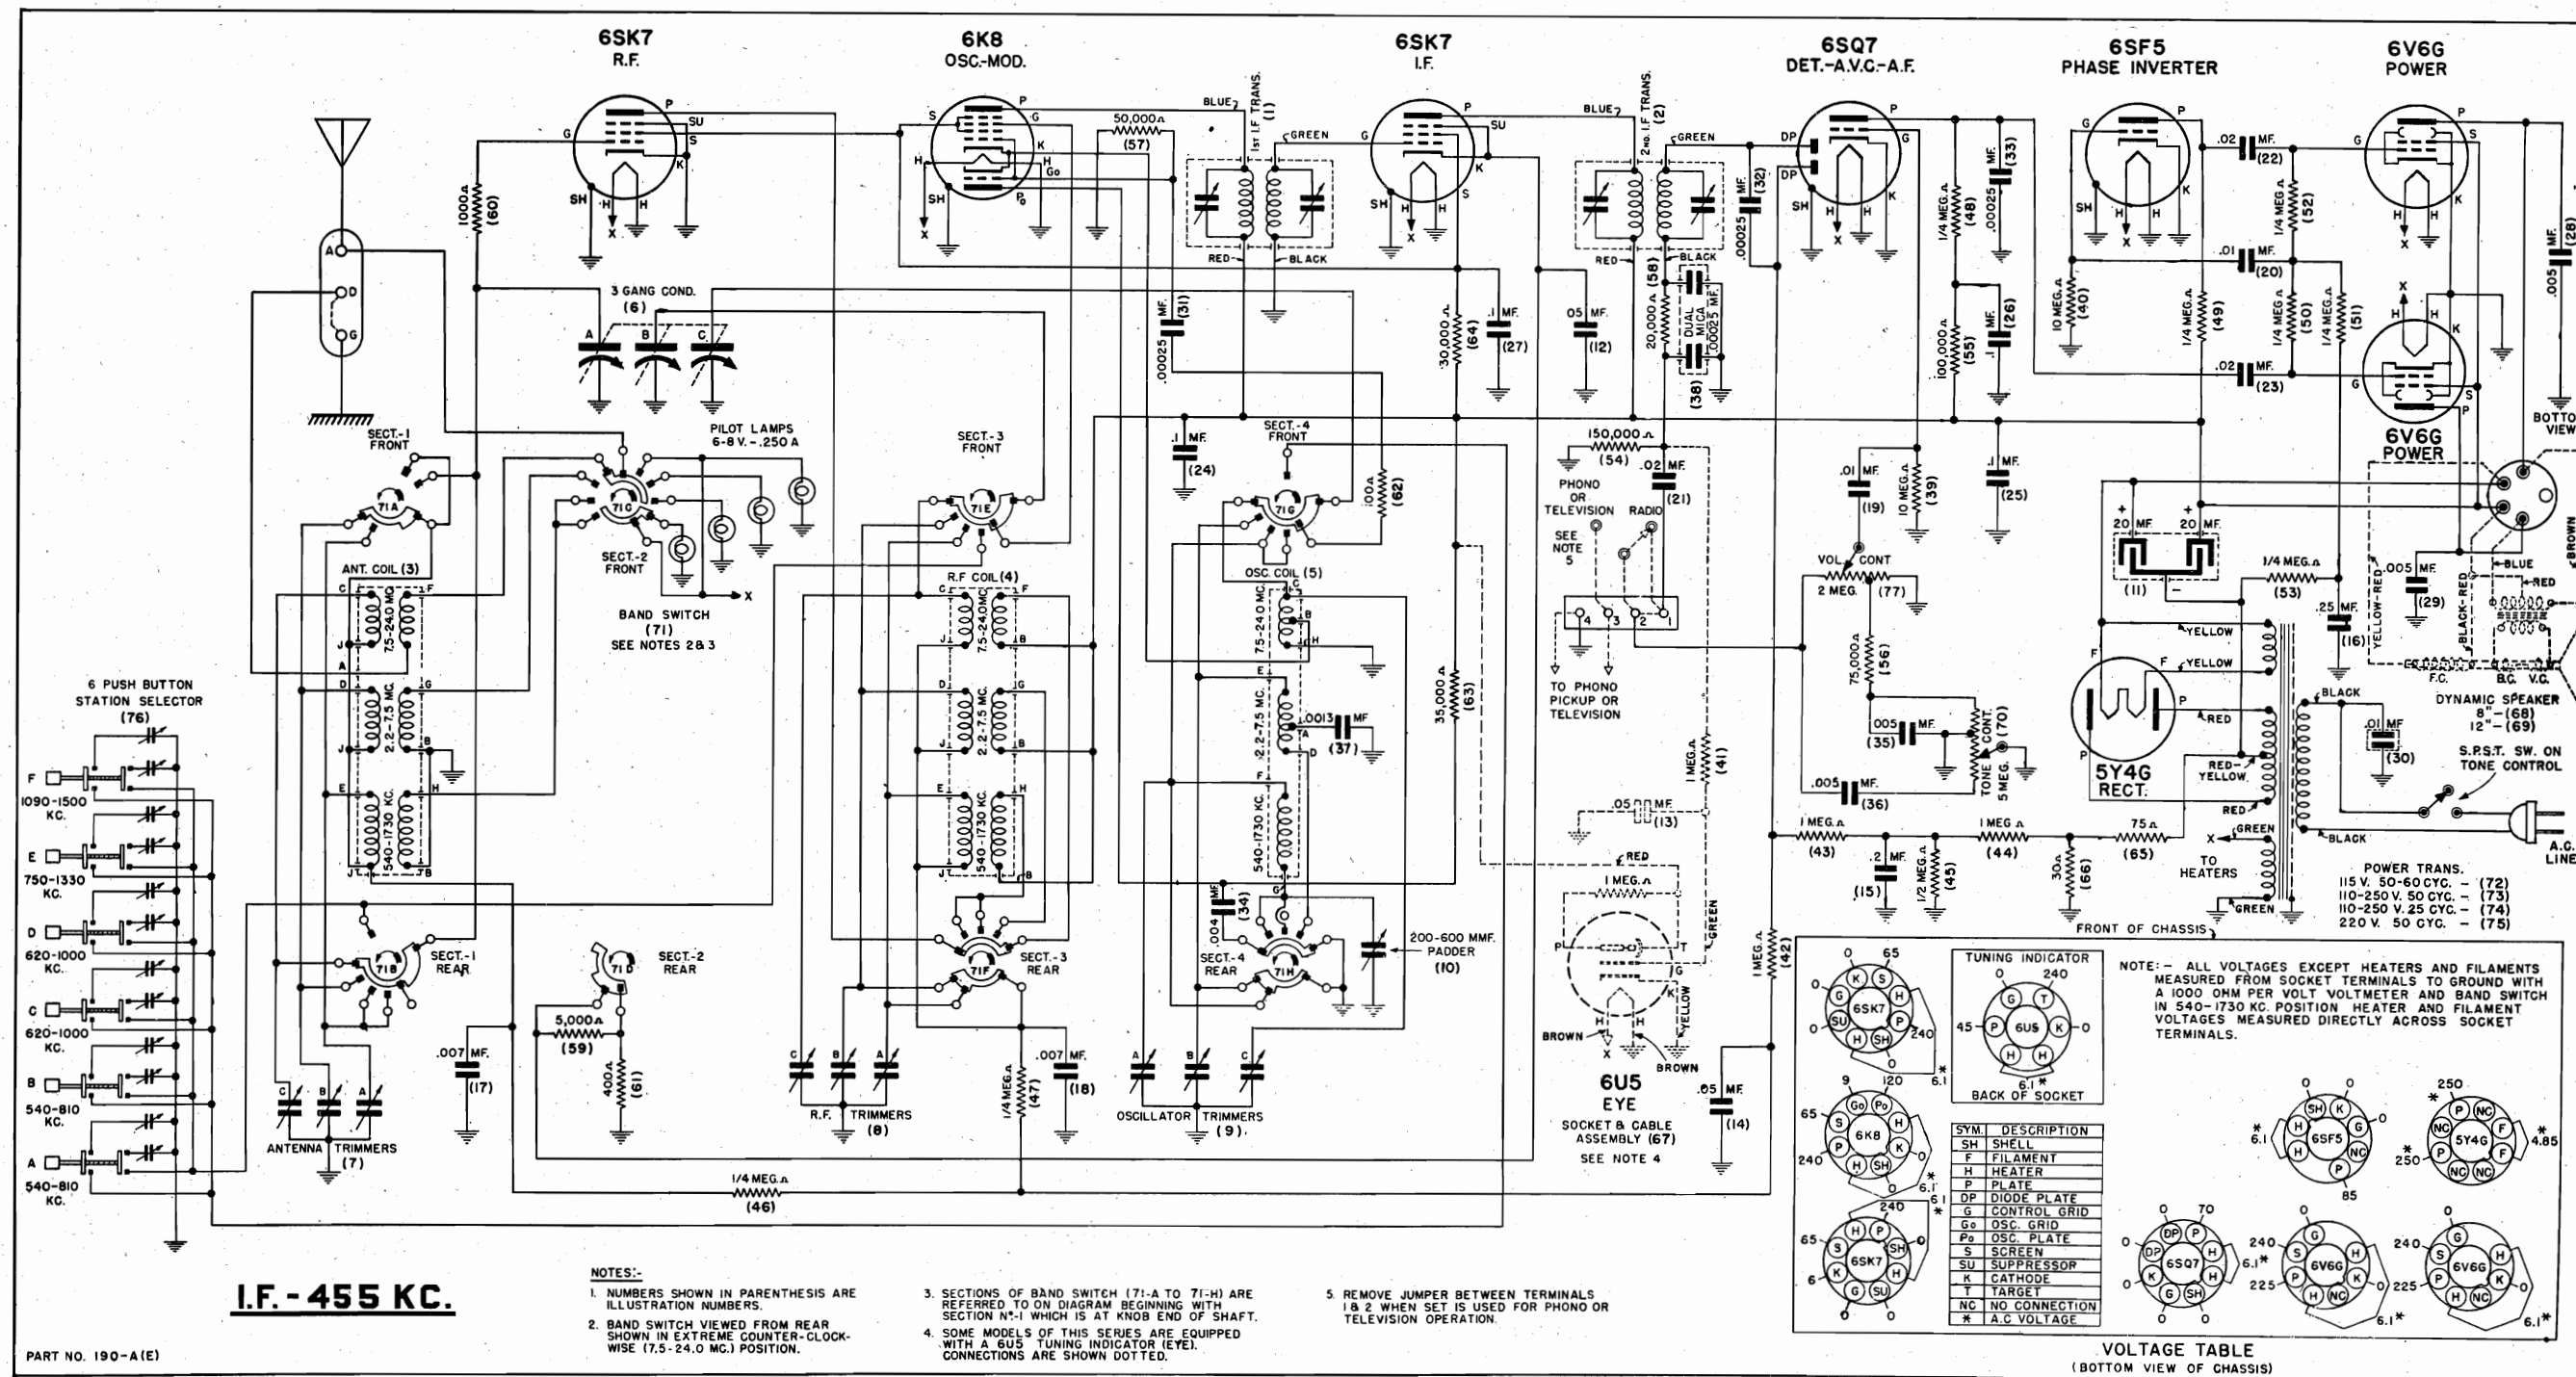

SENTINEL RADIO CORP.

MODELS 190A, 190AE
Socket, Trimmers
Alignment, Chassis

SENTINEL MODEL 190A and 190AE—THREE BAND—EIGHT and NINE TUBE
AC Operated Superheterodyne Receiver

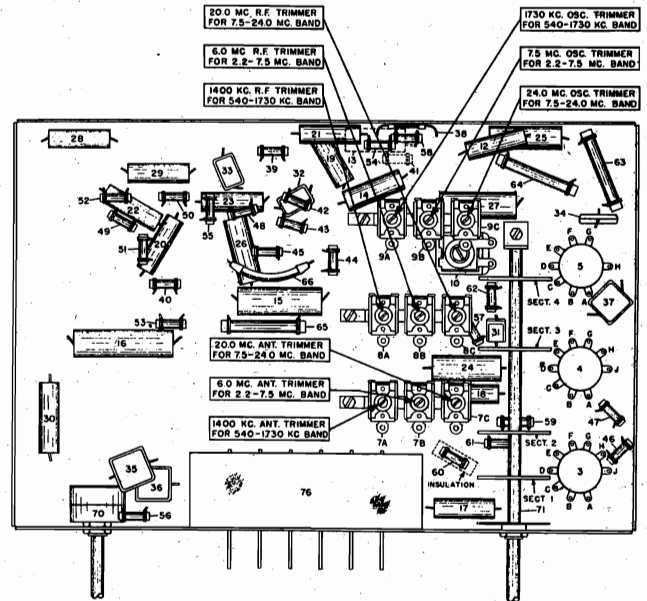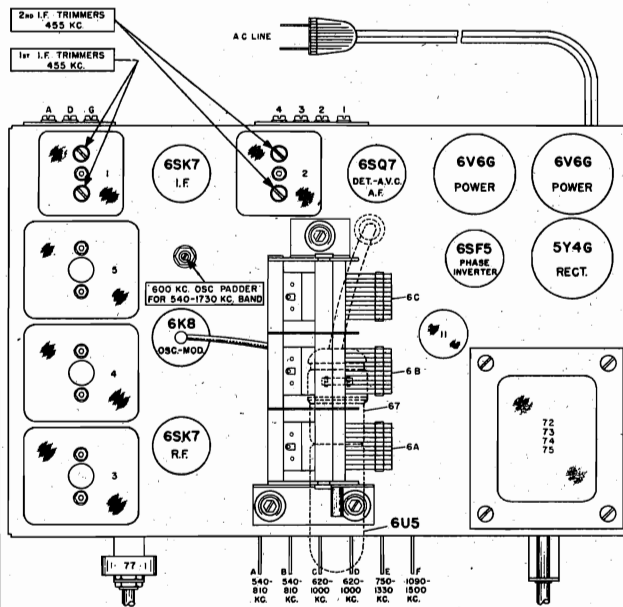

NO. 190-A (E)

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:



- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I.F. ALIGNMENT use any band position	Any point where no interfering signal is received.	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 6K8 tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1730 TO 540 K.C. BAND	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	Adjust 1730 K.C. oscillator trimmer for maximum output.
	2 Approx. 1400 K.C.	Exactly 1400 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 1400 K.C. antenna and R.F. trimmers for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
2.2 TO 7.5 M.C. BAND	1 Exactly 7.5 M.C.	Exactly 7.5 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 7.5 M.C. oscillator trimmer for maximum output.
	2 Approx. 6. M.C.	Exactly 6. M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 6 M.C. antenna and R.F. trimmers for maximum output.
7.5 TO 24 M.C. BAND	1 Exactly 24 M.C.	Exactly 24 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 24 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 20 M.C.	Approx. 20 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 20 M.C. antenna and R.F. trimmers for maximum output.

MODELS 191B, 191BE
Socket, Trimmers
Alignment, Chassis

SENTINEL RADIO CORP.

SENTINEL MODEL 191B and 191BE—THREE BAND—SIX and SEVEN TUBE
6 Volt Battery Operated Superheterodyne Receiver

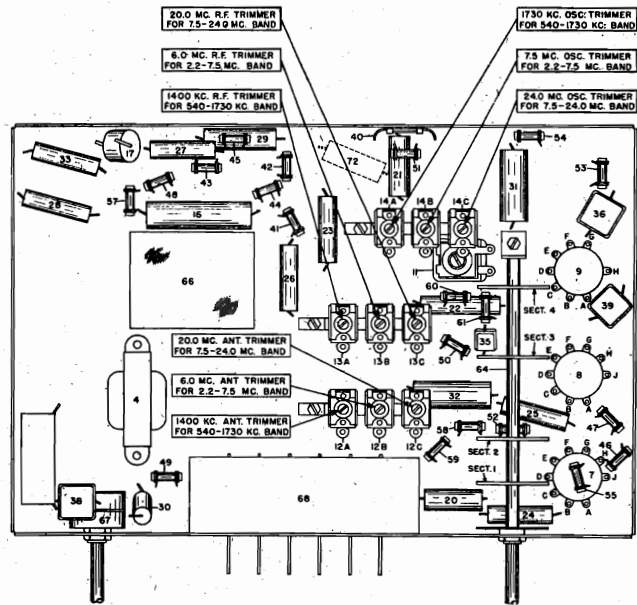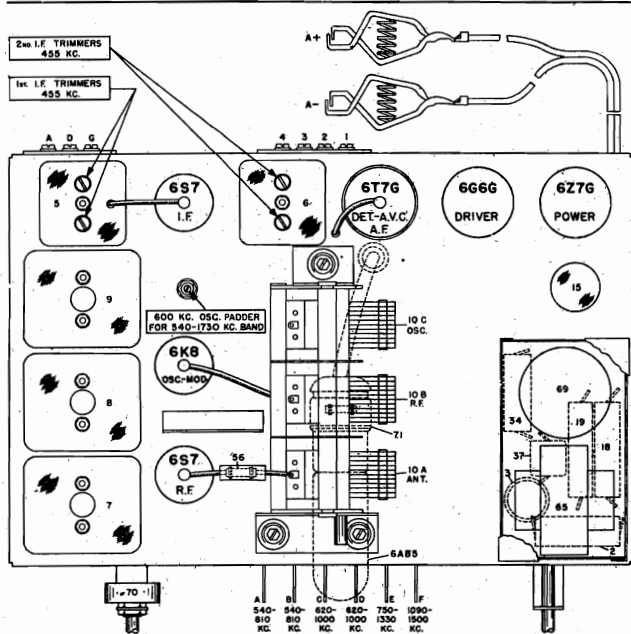

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.



- Before starting alignment:
- Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
 - Use an accurately calibrated test oscillator with some type of output measuring device.
 - Have ground lead of test oscillator attached to chassis.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:	
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator: consisting of:	Attach output of test oscillator to:		
I.F. ALIGNMENT use any band position	Any point where no interfering signal is received.	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 6K8 tube. Do not remove cap	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.	
	1730 TO 540 K.C. BAND	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	Adjust 1730 K.C. oscillator trimmer for maximum output.
		2 Approx. 1400 K.C.	Exactly 1400 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 1400 K.C. antenna and R.F. trimmers for maximum output
3 Approx. 600 K.C.		Approx. 600 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.	
2.2 TO 7.5 M.C. BAND	1 Exactly 7.5 M.C.	Exactly 7.5 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 7.5 M.C. oscillator trimmer for maximum output.	
	2 Approx. 6. M.C.	Exactly 6. M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 6 M.C. antenna and R.F. trimmers for maximum output	
7.5 TO 24 M.C. BAND	1 Exactly 24 M.C.	Exactly 24 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 24 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.	
	2 Approx. 20 M.C.	Approx. 20 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 20 M.C. antenna and R.F. trimmers for maximum output	

MODEL 194UL
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

5 tube A. C. - D. C. Operated Superheterodyne Receiver

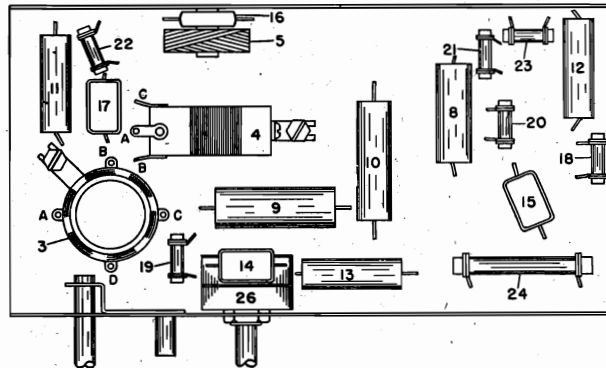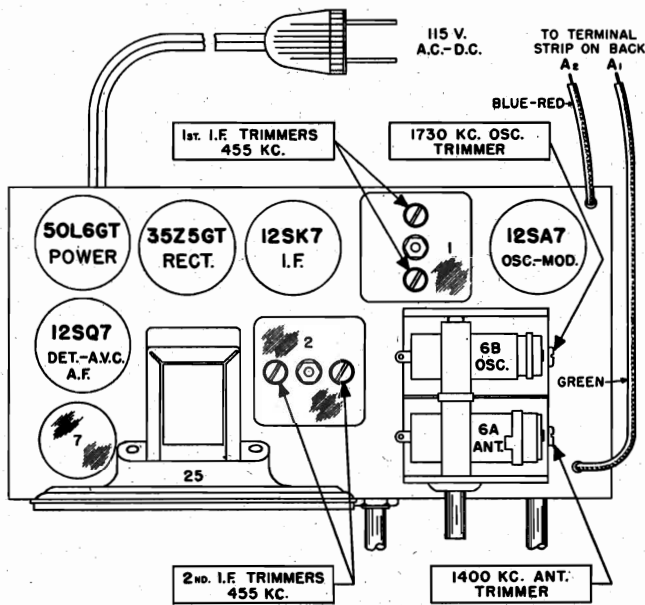

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to gang condenser frame.


TEST OSCILLATOR				
Set receiver dial to:	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	Refer to parts layout diagram for location of trimmers mentioned below:

I.F. Any point where no interfering signal is received	455 K. C.	.02 MFD condenser	High side to grid terminal of 12SA7 tube DO NOT REMOVE CAP.	Adjust the second L F. transformer trimmer for maximum output then adjust each of the first I.F. trimmers for maximum output
---	-----------	-------------------	--	--

1	Exactly 1730 K. C.	Exactly 1730 K. C.	.00025 MFD condenser	Receiver "A1" post	Adjust 1730 K. C. oscillator trimmer for maximum output.
2	Approx. 1400 K. C.	Approx. 1400 K. C.	.00025 MFD condenser	Receiver "A1" post	While rocking gang condenser adjust 1400 K. C. antenna trimmer for maximum output.

SENTINEL RADIO CORP.

MODEL 195UL
Schematic, Voltage

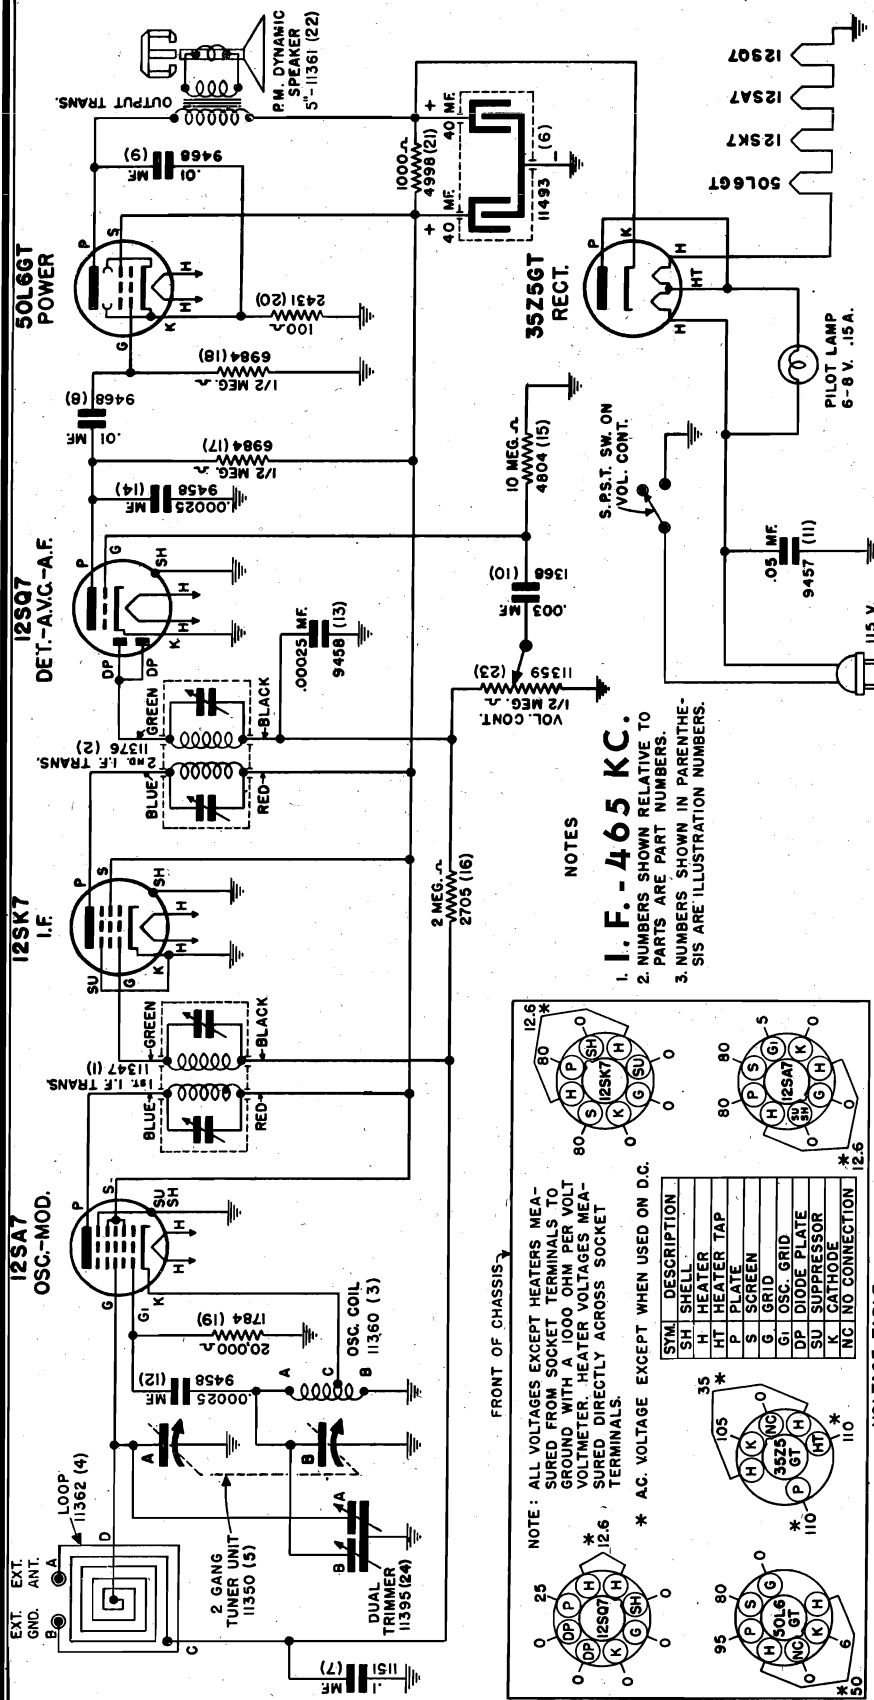


NOTES

1. I. F. - 465 KC.

2. NUMBERS SHOWN RELATIVE TO PARTS ARE PART NUMBERS.

3. NUMBERS SHOWN IN PARENTHESIS ARE ILLUSTRATION NUMBERS.

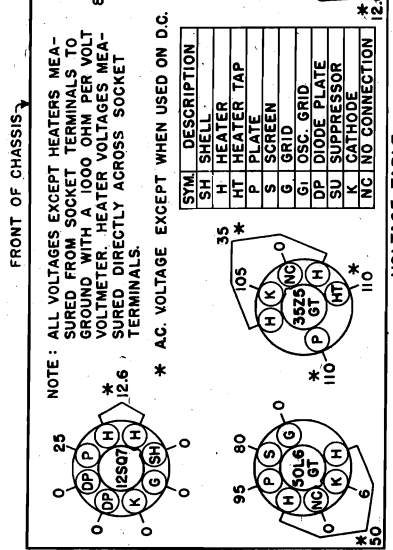

PARTS LIST

Part No.	Description	List Price
1	11347 Coil	.90
2	11376 Coil	.80
3	11360 Coil	.50
4	11362 Antenna Loop	.65
5	11350 Condenser Tuning (Two Gang) Push Button Mech. Tuner Unit	3.75
6	11493 Condenser Tubular .1 Mfd. 40-40 Mfd.	1.00
7	1151 Condenser Tubular .1 Mfd. 200 Volt	.20
8	9468 Condenser Tubular .01 Mfd. 400 Volt	.17
9	1368 Condenser Tubular .003 Mfd. 400 Volt	.17
10	9457 Condenser Tubular .05 Mfd. 400 Volt	.18
11	9458 Condenser Mica .00025 Mfd.	.21
12	9458 Condenser Mica .00025 Mfd.	.21
13	9458 Condenser Mica .00025 Mfd.	.21
14	4804 Resistor Carbon 10 Megohm 1/2 Watt	.19
15	2705 Resistor Carbon 2 Megohm 1/2 Watt	.19
16	6984 Resistor Carbon 500,000 Ohm 1/2 Watt	.19
17	6984 Resistor Carbon 500,000 Ohm 1/2 Watt	.19
18	6984 Resistor Carbon 500,000 Ohm 1/2 Watt	.19
19	1784 Resistor Carbon 20,000 Ohm 1/2 Watt	.19
20	2431 Resistor Carbon 100 Ohm 1/2 Watt	.19
21	4998 Resistor Carbon 1,000 Ohm 1/2 Watt	.19
22	11361 Speaker P. M. Dynamic 5 in.	2.70
23	11359 Volume Control With S.P.S.T. Switch	.80
24	11395 Condenser Dual Trimmer 2.40 Mmf.	.30
25	2155 Resistor Carbon 200,000 Ohm 1/2 Watt	.19
Part No.	Description	List Price
11371	Escutcheon For Dial Used With Wood Cabinet Only	.75
11200	Escutcheon For Pushbutton Used With Wood Cabt. Only	.35
10208	Knob Bakelite Tuning for Wood Cabinet	.12
11372	Knob Bakelite Push Button for Wood Cabinet	.10
11563	Knob Bakelite Tuning for Walnut Plastic Cabinet	.10
11595	Knob Bakelite Push Button for Plastic Cabinet	.10
11564	Knob Bakelite Tuning for Onyx Cabinet	.10
11596	Knob Bakelite Push Button for Onyx Cabinet	.10
	Walnut Plastic Cabinet	2.00
	Onyx Plastic Cabinet	4.25

MISCELLANEOUS PARTS




6-8 Volt .150 Ampere Dial Light Bulb	11304	.10
No. 47 Bayonet Base		
Calibrated Scale		.30
Dial Drive Cord	8184	.10
Dial Shaft	11352	.12
For Dial Pointer	11513	.15
Dial Pointer	10639	.16
For Dial Used With Bakelite Cabinet Only	11357	.16

PRICES ARE SUBJECT TO CHANGE WITHOUT NOTICE. W4M 9-39

MODEL 195UL
Socket, Trimmers
Alignment, Chassis

SENTINEL RADIO CORP.

5 tube A. C. - D. C. Operated Superheterodyne Receiver

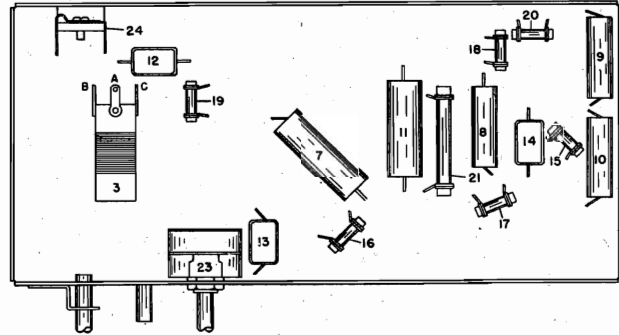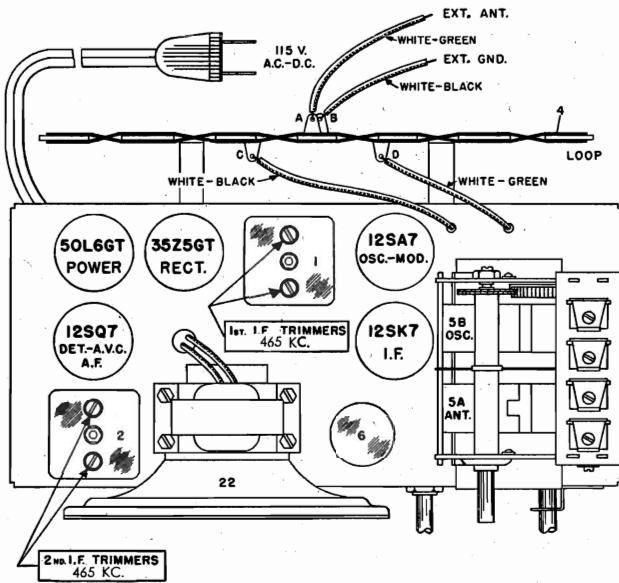

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
IMPORTANT: BEFORE ALIGNING, PLACE LOOP ANTENNA IN THE SAME APPROXIMATE POSITION IN THE BACK OF CHASSIS IT WILL BE IN WHEN THE SET IS IN THE CABINET AND THE BACK ATTACHED.

When adjusting 1730 kilocycle oscillator trimmer and 1400 kilocycle antenna trimmer, do not connect test oscillator to loop.


Couple test oscillator to receiver loop by:

- (a) Make a loop consisting of five to ten turns of No. 20 to 30 size wire wound on a three inch form and attach across output of test oscillator.
- (b) Place test oscillator loop near set loop—**BE SURE THAT NEITHER MOVES WHILE ALIGNING.**
DO NOT ATTACH LOW SIDE OF TEST OSCILLATOR TO RECEIVER—LEAVE UNCONNECTED.

Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below—and:
	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. Any point where no interfering signal is received	465 K. C.	.02 MFD condenser	High side to grid terminal of 12SA7 tube DO NOT REMOVE CAP	Adjust the second I. F. transformer trimmers for maximum output—then adjust each of the first I.F. trimmers for maximum output.
1 Exactly 1730 K. C.	Exactly 1730 K. C.	None	Use small loop to couple test oscillator to receiver loop	Adjust 1730 K. C. oscillator trimmer for maximum output.
2 Approx. 1400 K. C.	Exactly 1400 K. C.	None	Use small loop to couple test oscillator to receiver loop	Adjust 1400 K. C. antenna trimmer for maximum output.

SENTINEL RADIO CORP.

MODEL 197X
Schematic, Voltage

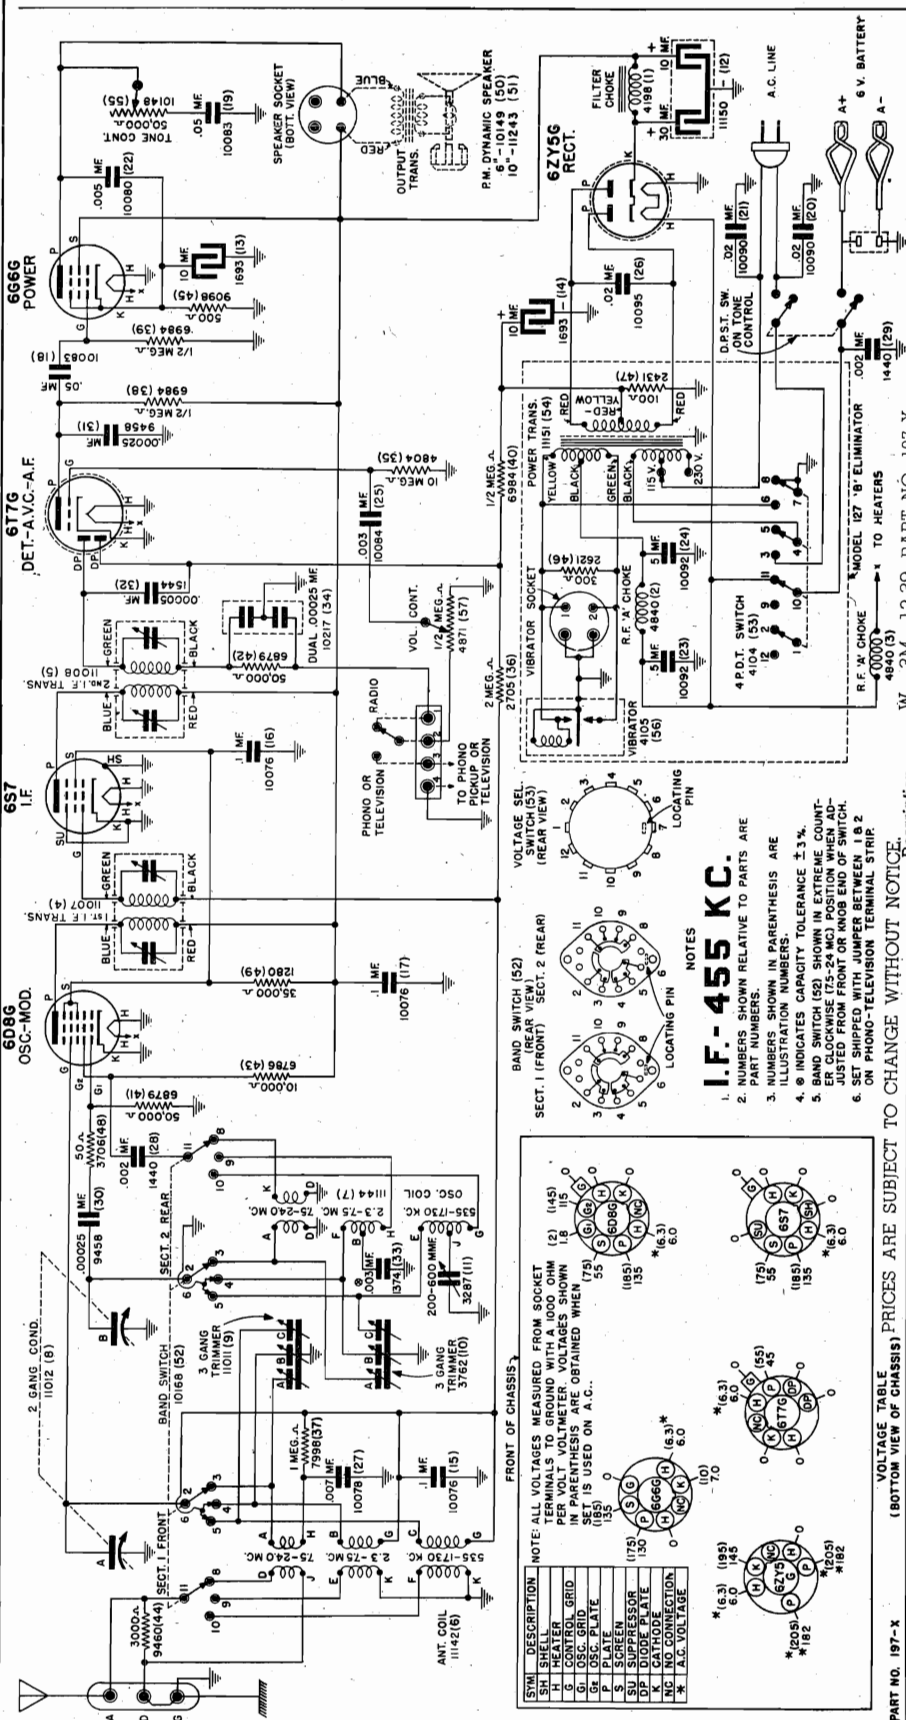


SYMBOL	DESCRIPTION
SH	SHELL
H	HEATER
G	CONTROL GRID
GL	CONTROL GRID LEAK
BI	BIAS
P	PLATE
S	SCREEN
SU	SUPPRESSOR
K	CATHODE
NC	NO CONNECTION
A.C.	A.C. VOLTAGE

NOTE: ALL VOLTAGES MEASURED FROM SOCKET PER VOLT VOLTMETER WITH RESISTOR SET IN POSITION AS SHOWN WHEN SET IS USED ON A.C.

I.F. - 455 KC.

1. PART NUMBERS SHOWN IN PARENTHESES ARE ILLUSTRATION NUMBERS.
2. BAND SWITCH (S2) SHOWN IN EXTREME COUNTER CLOCKWISE (75-24 MC) POSITION WHEN ADJUSTED FROM FRONT OR KNOB END OF SWITCH.
3. SET SHIPPED WITH JUMPER BETWEEN 1 & 2 ON PHONO-TELEVISION TERMINAL STRIP.



VOLTAGE TABLE (BOTTOM VIEW OF CHASSIS) PRICES ARE SUBJECT TO CHANGE WITHOUT NOTICE. PART NO. 197-X

Part No.	Description	Last Price
1	4198 Choke	\$.95
2	4840 Choke	.18
3	11007 Coil	.125
4	11008 Coil	.125
5	11142 Coil	.75
6	11144 Coil	.65
7	11012 Condenser	1.75
8	11011 Condenser	.47
9	3287 Condenser	.40
10	3762 Condenser	1.00
11	1150 Condenser	1.45
12	1150 Dry Electrolytic 10-30 Mid. 250 Volt	1.00
13	1150 Dry Electrolytic 10 Mid. 25 Volt	.75
14	1076 Tubular .01 Mfd. 200 Volt	.19
15	1076 Tubular .05 Mfd. 400 Volt	.19
16	1076 Tubular .02 Mfd. 400 Volt	.19
17	1076 Tubular .005 Mfd. 400 Volt	.19
18	10083 Condenser	.17
19	10090 Condenser	.25
20	10092 Condenser	.25
21	10092 Condenser	.25
22	10092 Condenser	.25
23	10092 Condenser	.25
24	10092 Condenser	.25
25	10094 Condenser	.17
26	10078 Condenser	.25
27	10078 Condenser	.25
28	1440 Mica .002 Mid.	.20
29	1440 Mica .002 Mid.	.20
30	9458 Mica .0025 Mid.	.21
31	9458 Mica .0025 Mid.	.21
32	1544 Mica .0005 Mid.	.21
33	1374 Mica .003 Mid. ± 3%	.24
34	10217 Condenser	.24
35	4804 Resistor	.19
36	2705 Resistor	.19
37	7998 Resistor	.19
38	6984 Resistor	.19
39	6984 Resistor	.19
40	6984 Resistor	.19
41	6979 Resistor	.19
42	6979 Resistor	.19
43	6979 Resistor	.19
44	6979 Resistor	.19
45	6979 Resistor	.19
46	2621 Resistor	.19
47	2431 Resistor	.19
48	3706 Resistor	.19
49	1280 Resistor	.19
50	10149 Speaker	5.00
51	11243 Speaker	7.00
52	10168 Switch	1.30
53	4104 Switch	.20
54	11151 Transformer	.19
55	10148 Tone Control	.21
56	4105 Vibrator	.21
57	4871 Volume Control	.24
58	4840 (3) R.F. A.C. CHOKE	.20
59	10092 (24) 5 MF	.20
60	4840 (2) 5 MF	.20
61	10092 (24) 5 MF	.20
62	4840 (2) 5 MF	.20
63	10092 (24) 5 MF	.20
64	4840 (2) 5 MF	.20
65	10092 (24) 5 MF	.20
66	4840 (2) 5 MF	.20
67	10092 (24) 5 MF	.20
68	4840 (2) 5 MF	.20
69	10092 (24) 5 MF	.20
70	4840 (2) 5 MF	.20
71	10092 (24) 5 MF	.20
72	4840 (2) 5 MF	.20
73	10092 (24) 5 MF	.20
74	4840 (2) 5 MF	.20
75	10092 (24) 5 MF	.20
76	4840 (2) 5 MF	.20
77	10092 (24) 5 MF	.20
78	4840 (2) 5 MF	.20
79	10092 (24) 5 MF	.20
80	4840 (2) 5 MF	.20
81	10092 (24) 5 MF	.20
82	4840 (2) 5 MF	.20
83	10092 (24) 5 MF	.20
84	4840 (2) 5 MF	.20
85	10092 (24) 5 MF	.20
86	4840 (2) 5 MF	.20
87	10092 (24) 5 MF	.20
88	4840 (2) 5 MF	.20
89	10092 (24) 5 MF	.20
90	4840 (2) 5 MF	.20
91	10092 (24) 5 MF	.20
92	4840 (2) 5 MF	.20
93	10092 (24) 5 MF	.20
94	4840 (2) 5 MF	.20
95	10092 (24) 5 MF	.20
96	4840 (2) 5 MF	.20
97	10092 (24) 5 MF	.20
98	4840 (2) 5 MF	.20
99	10092 (24) 5 MF	.20
100	4840 (2) 5 MF	.20


- MISCELLANEOUS PARTS
- 11304 Bulb
 - 2262 Clamp
 - 11017 Dial Shaft
 - 8184 Dial Cord
 - 11693 Dial Spring
 - 11022 Dial Scale
 - 11246 Dial Pointer
 - 11198 Escutcheon
 - 11199 Escutcheon
 - 10030 Knob
 - 10032 Knob
 - 10068 Knob
 - 10069 Knob

MODEL 197X
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

SENTINEL MODEL 197X
 TWO BAND—FIVE TUBE

115 Volt A. C. or 6 Volt Battery Operated Superheterodyne Receiver

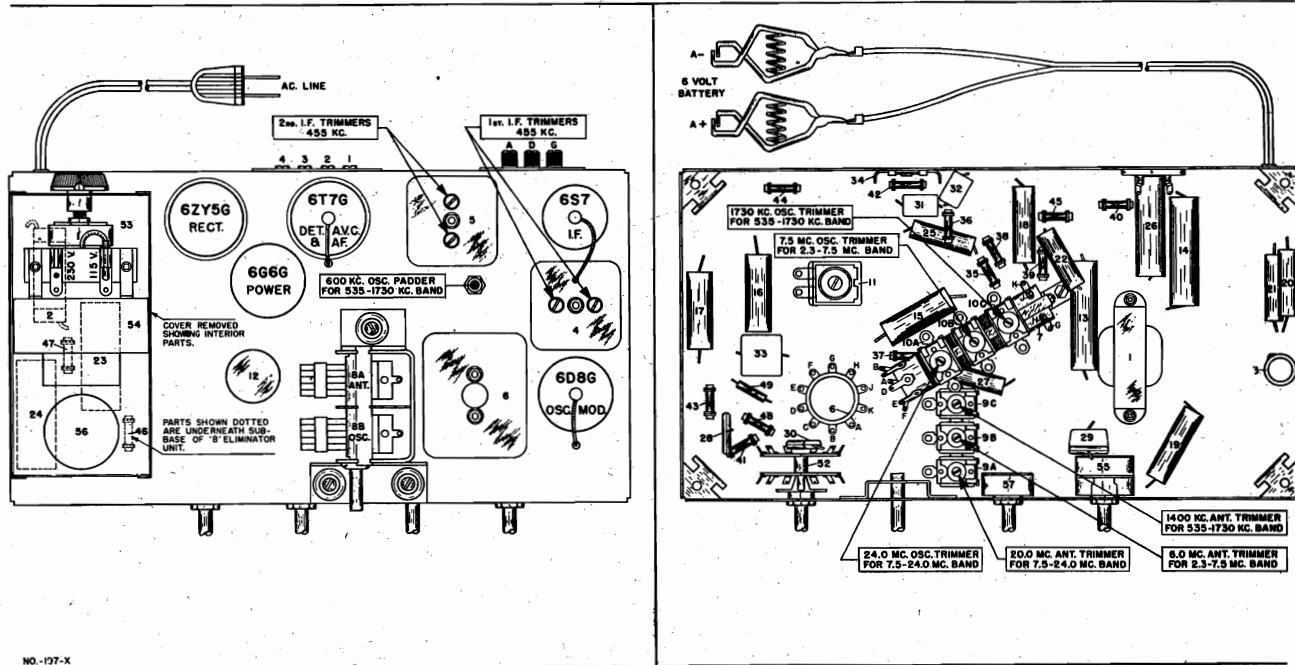

NO. 197-X

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator, consisting of:	Attach output of test oscillator to:	
I.F. ALIGNMENT use any band position	Any point where no interfering signal is received.	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 6D8G tube. Do not remove cap	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1730 TO 540 K.C. BAND	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	Adjust 1730 K.C. oscillator trimmer for maximum output.
	2 Approx. 1400 K.C.	Approx. 1400 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
2.3 TO 7.5 M.C. BAND	1 Exactly 7.5 M.C.	Exactly 7.5 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 7.5 M.C. oscillator trimmer for maximum output.
	2 Approx. 6. M.C.	Approx. 6. M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 6 M.C. antenna trimmer for maximum output.
7.5 TO 24 M.C. BAND	1 Exactly 24 M.C.	Exactly 24 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 24 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 20 M.C.	Approx. 20 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 20 M.C. antenna trimmer for maximum output.

THIS RECEIVER CAN BE OPERATED WITH A SIX VOLT STORAGE BATTERY OF FROM 115 TO 230 VOLT 50 TO 60 CYCLE CURRENT.



FOR AC OPERATION obtain from the Electric Supply Company the voltage and current rating of the local Electric Service and — — remove top cover from power unit and insert metal tipped lead into proper terminal socket that will be found underneath top cover of power unit. Place voltage selector switch knob in "115—230" position and plug set power cord plug into house lighting outlet.

FOR SIX VOLT BATTERY OPERATION attach battery cable leads to six volt storage battery and place voltage selector switch knob to "6 V."

MODELS 198A, 198AE
Socket, Trimmers
Alignment, Chassis

SENTINEL RADIO CORP.

TWO BAND—SEVEN and EIGHT TUBE
A. C. Operated Superheterodyne Receiver

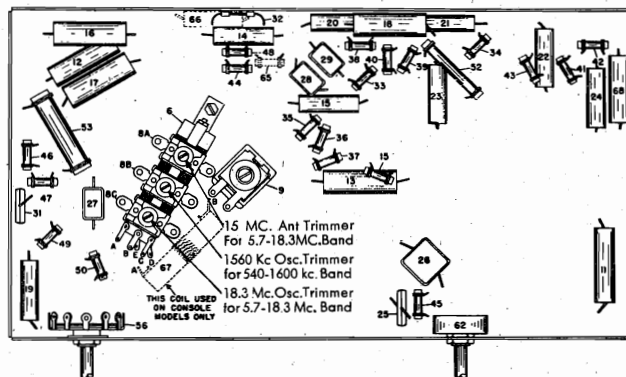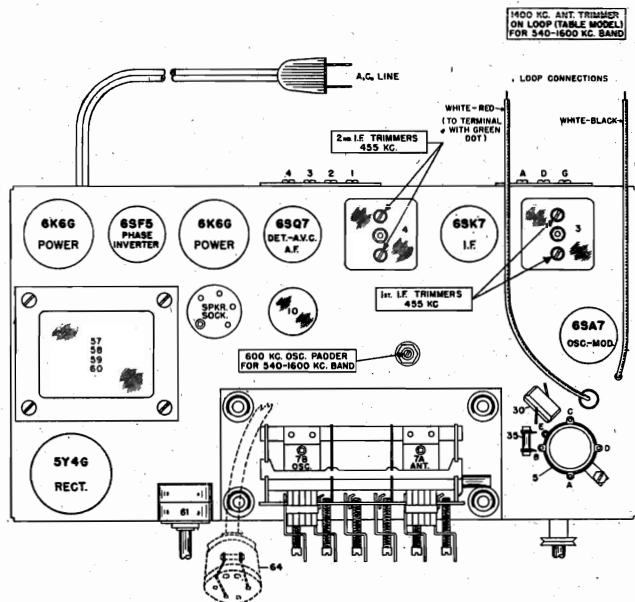

NO. 108-A(12)

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
IMPORTANT: BEFORE ALIGNING, PLACE LOOP ANTENNA IN THE SAME POSITION IT WILL BE IN WHEN THE SET IS IN THE CABINET.

When adjusting 1600 or 1560 kilocycle oscillator trimmer and 1400 kilocycle antenna trimmer, do not connect test oscillator to loop.


Couple test oscillator to receiver loop by:

- (a) Make a loop consisting of five to ten turns of No. 20 to 30 size wire wound on a three inch form and attach across output of test oscillator.
- (b) Place test oscillator loop near set loop—**BE SURE THAT NEITHER MOVES WHILE ALIGNING.**

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test Oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. alignment use any band position	Any point where no interfering signal is received	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 6SA7 tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
540 to 1600 K.C. Band	1 Exactly 1500 K.C.	Exactly 1560 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	Adjust 1530 K. C. oscillator trimmer for maximum output
	2 Approx. 1400 K.C. Table Model only.	Approx. 1400 K.C. Table Model Only	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
5.7 to 18.3 M. C. Band	1 Exactly 18.3 M.C.	Exactly 18.3 M.C.	400 Ohm carbon resistor	Use Small Loop to couple test oscillator to receiver loop	Adjust 18.3 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 15 M.C.	Approx. 15 M. C.	400 Ohm	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 15 M.C. antenna trimmer for maximum output


SENTINEL RADIO CORP.

MODELS 199A, 199AE
Schematic, Voltage

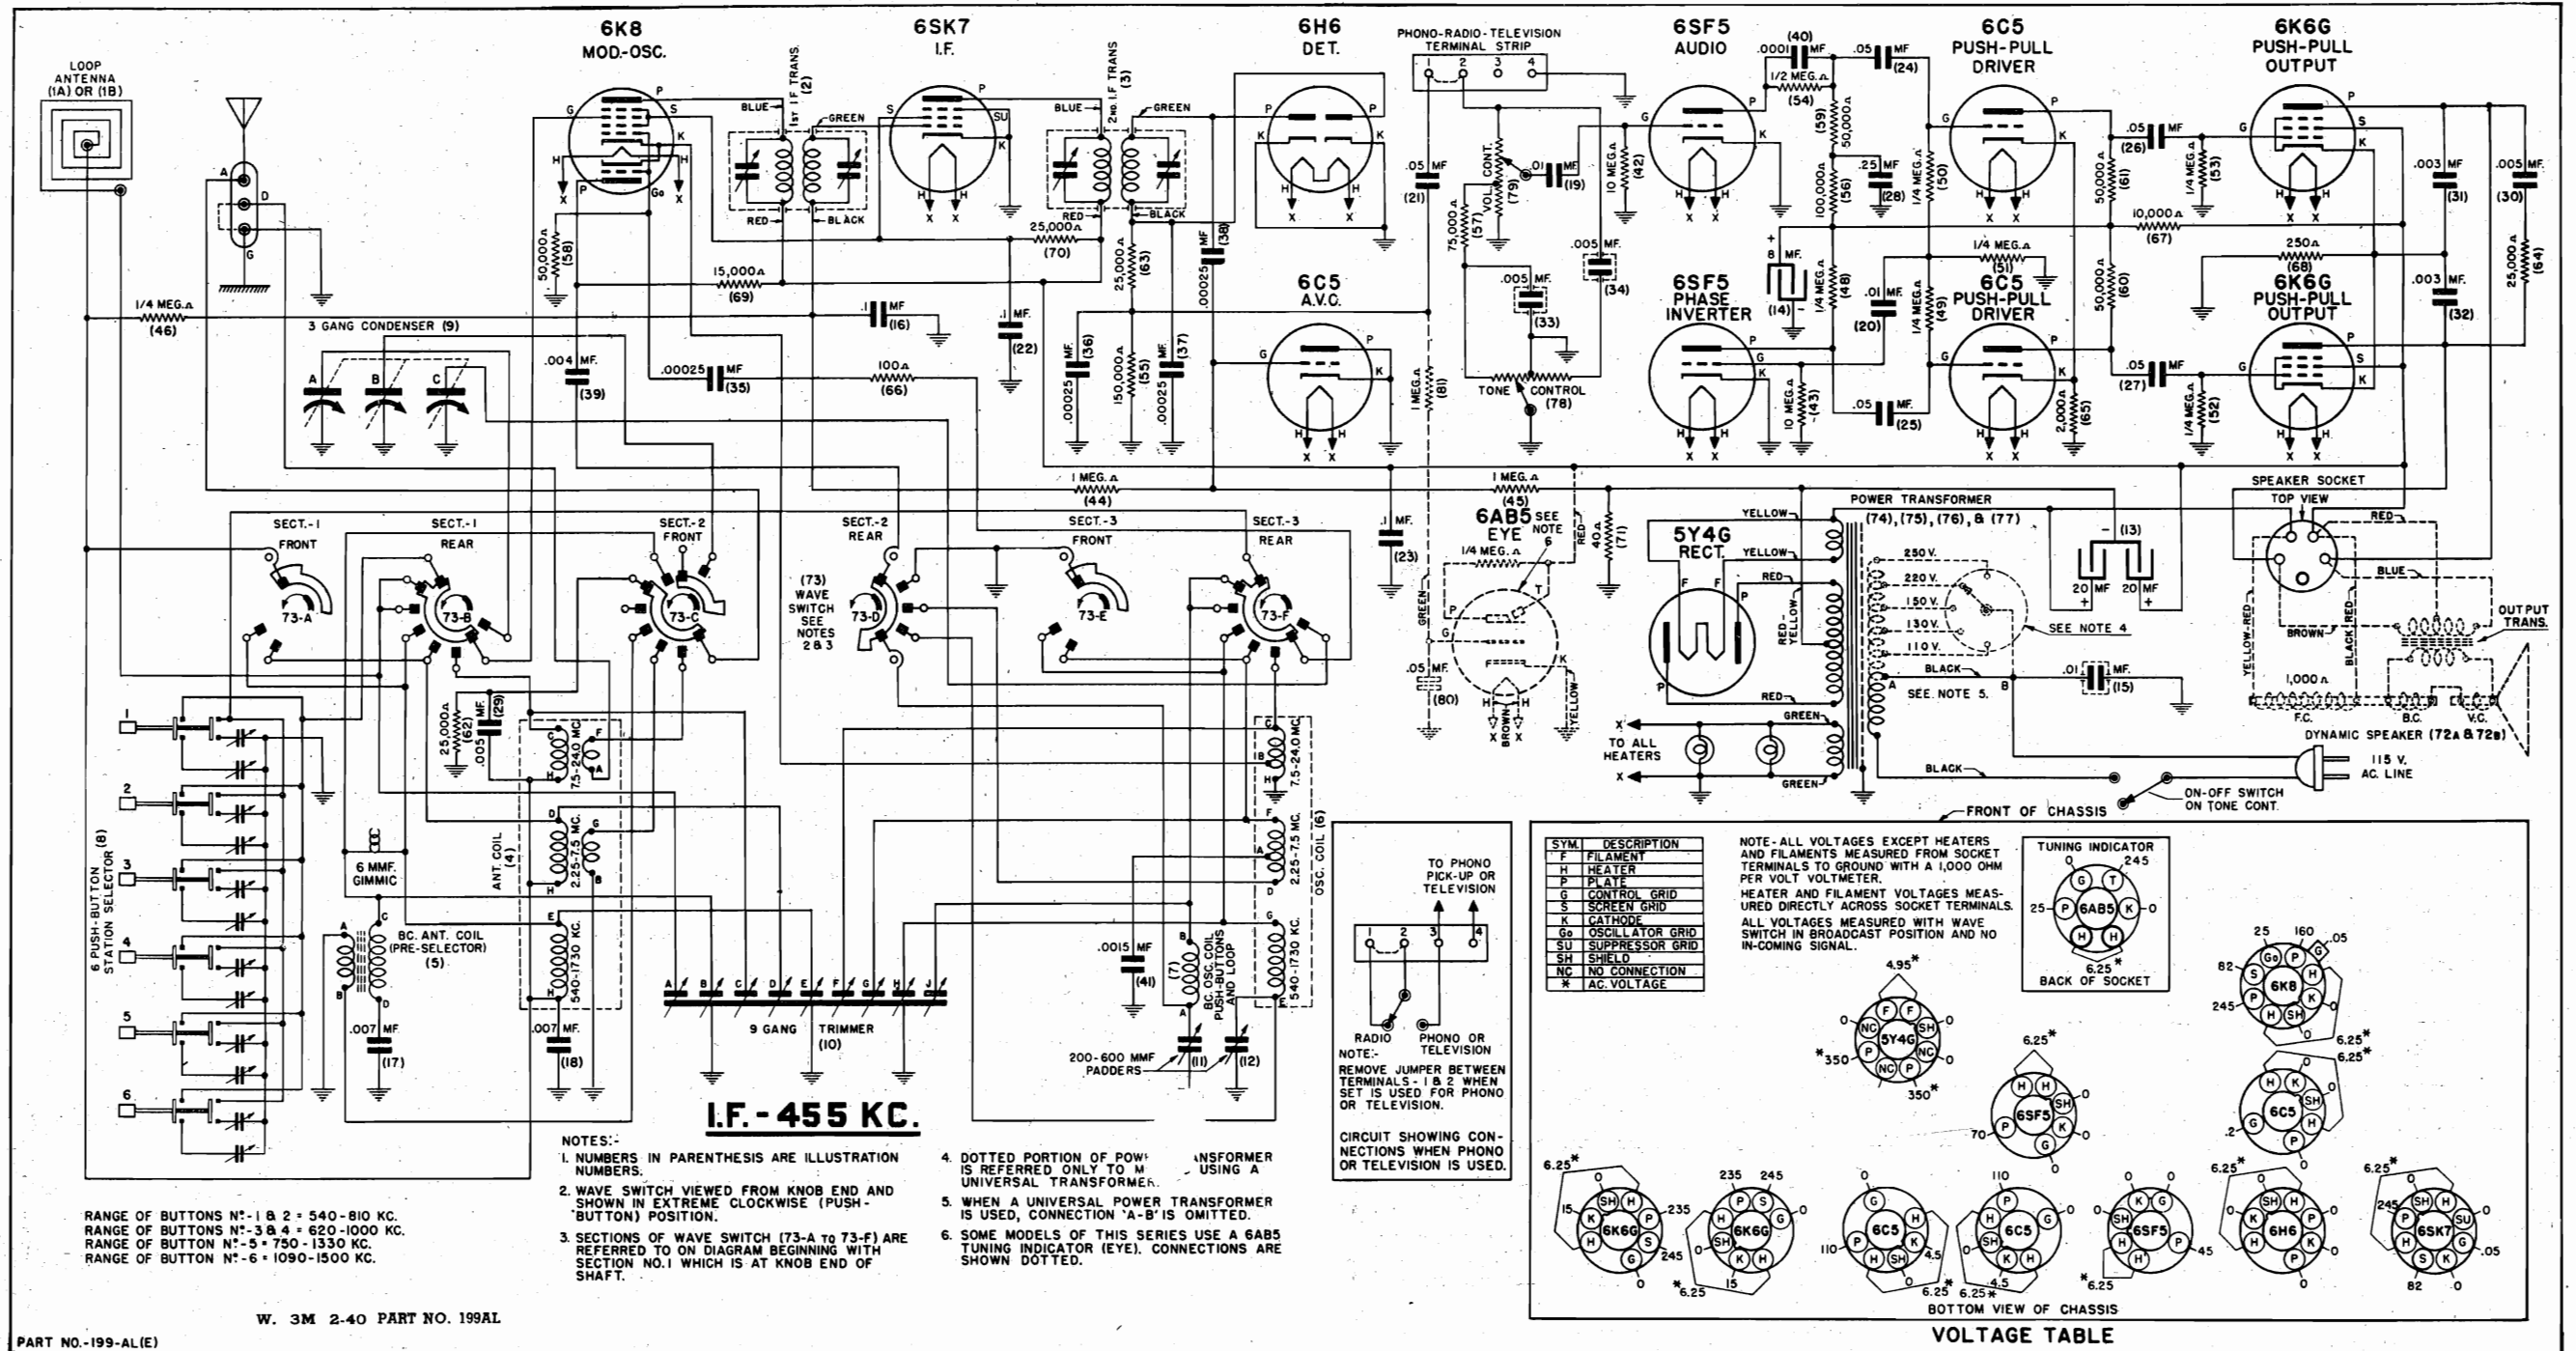

SENTINEL RADIO CORP.

MODELS 199A, 199AE
Socket, Trimmers
Alignment, Chassis

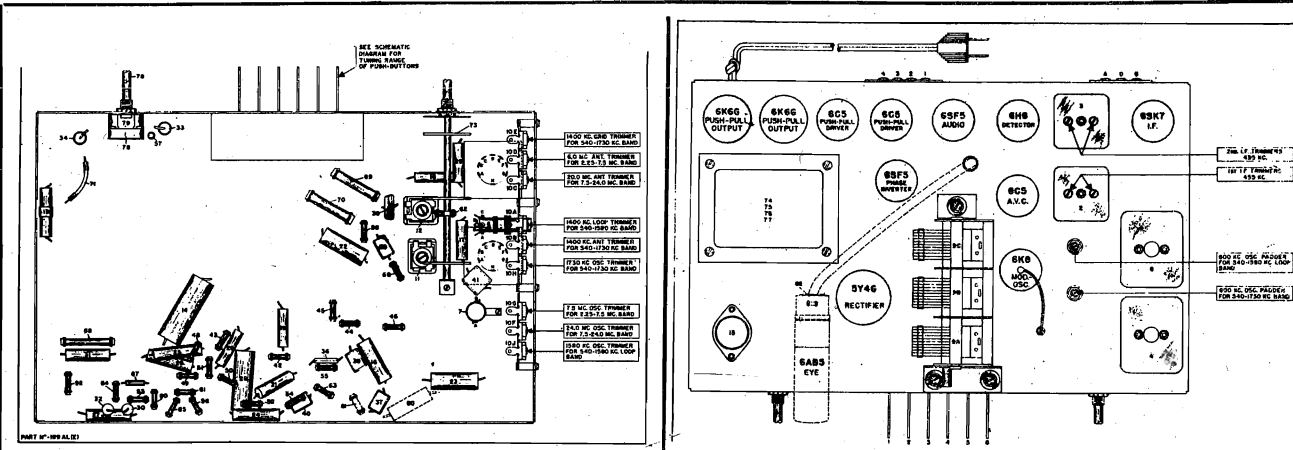

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.

IMPORTANT: BEFORE ALIGNING, PLACE LOOP ANTENNA IN THE SAME POSITION IT WILL BE IN WHEN THE SET IS IN THE CABINET.

When adjusting 600 or 1580 kilocycle loop oscillator trimmers and 1400 kilocycle loop antenna trimmer, do not connect test oscillator to "A" post.


Couple test oscillator to receiver loop by:

- (a) Make a loop consisting of five to ten turns of No. 20 to 30 size wire wound on a three inch form and attach across output of test oscillator.
- (b) Place test oscillator loop near set loop—BE SURE THAT NEITHER MOVES WHILE ALIGNING.
- (c) Place band switch in next to maximum right hand position.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. alignment use any band position	Any point where no interfering signal is received	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 6K8 tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1580 to 540 K.C. Band Using Loop Aerial	1 Exactly 1580 K.C.	Exactly 1580 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	Adjust 1580 K. C. oscillator trimmer for maximum output
	2 Approx. 1400 K.C.	Approx. 1400 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 1400 K.C. loop antenna trimmer for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 600 K.C. loop oscillator padder for maximum output.
1730 TO 540 K.C. BAND USING REGULAR AERIAL	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	Adjust 1730 K.C. oscillator trimmer for maximum output.
	2 Approx. 1400 K.C.	Approx. 1400 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 1400 K.C. antenna and grid trimmers for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver antenna "A" post	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
2.25 TO 7.5 M.C. BAND	1 Exactly 7.5 M.C.	Exactly 7.5 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 7.5 M.C. oscillator trimmer for maximum output.
	2 Approx. 6. M.C.	Approx. 6. M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 6 M.C. antenna trimmer for maximum output.
7.5 TO 24 M.C. BAND	1 Exactly 24 M.C.	Exactly 24 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	Adjust 24 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 20 M.C.	Approx. 20 M.C.	400 Ohm carbon resistor	Receiver antenna "A" post	While rocking gang condenser adjust 20 M.C. antenna trimmer for maximum output.

MODEL 160BL
Schematic, Voltage, Chassis
Alignment, Socket, Trimmers

SENTINEL RADIO CORP.

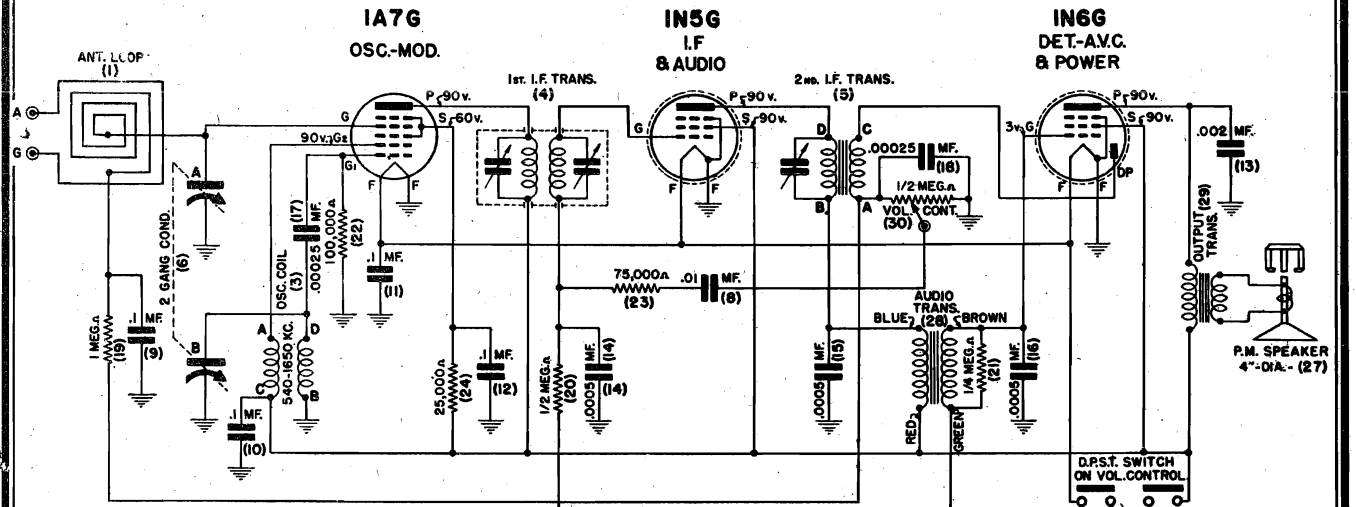


LEGEND

SYM.	DESCRIPTION
P	PLATE
F	FILAMENT
G	CONTROL GRID
S	SCREEN GRID
O	OSC. GRID
A	ANODE GRID
DP	DIODE PLATE

NOTE
VOLTAGE READING AT SOCKET PRONGS ARE TO CHASSIS USING A 1,000 OHM PER VOLT VOLTMETER.

WHERE NO READING IS GIVEN THE VOLTAGE IS ZERO OR TOO LOW TO READ.
1 1/2 V. 'A' BAT.-DRAIN-150 MA.
90V. 'B' BAT.-DRAIN-6.8 MA.

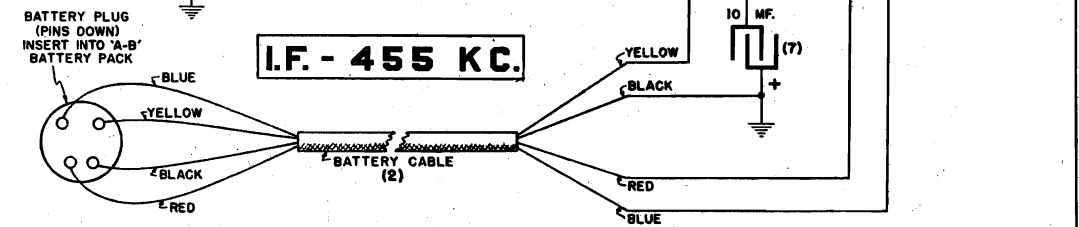

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment, check tuning dial adjustment by: turn gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial indicator must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.

BEFORE ALIGNING, PLACE LOOP ANTENNA AND THE "A" AND "B" BATTERY-PACK IN THE SAME APPROXIMATE POSITION IN THE BACK OF CHASSIS THAT THEY WILL BE IN WHEN THE SET IS IN THE CABINET AND THE CABINET BACK CLOSED.

When adjusting 1650 kilocycle oscillator trimmer and 1400 kilocycle antenna trimmer, do not connect test oscillator to terminals on bottom of cabinet back.


Couple test oscillator to receiver loop by:

- a) Make a loop consisting of five to ten turns of No. 20 to 30 size wire wound on a three inch form and attach across output of test oscillator.
- b) Place test oscillator loop near set loop—BE SURE THAT NEITHER MOVES WHILE ALIGNING.

Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below—and:
	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. Any point where no interfering signal is received	455 K. C.	.02 MFD condenser	High side to grid terminal of IA7G tube Low side to chassis DO NOT REMOVE CAP.	Adjust the second I. F. transformer trimmer for maximum output—then adjust each of the first I.F. trimmers for maximum output.
(1) Exactly 1650 K. C.	Exactly 1650 K. C.	None	Use small loop to couple test oscillator to receiver loop	Adjust 1650 K. C. oscillator trimmer for maximum output.
(2) Approx. 1400 K. C.	Exactly 1400 K. C.	None	Use small loop to couple test oscillator to receiver loop	Adjust 1400 K. C. antenna trimmer for maximum output

3 TUBE PORTABLE



1 1/2 Volt Battery

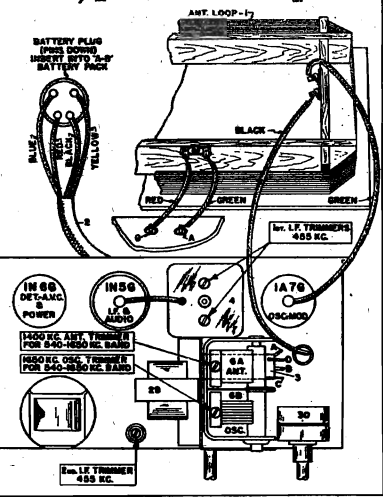

MODEL 200X
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

Five Tube - Two Band
 Battery or 110 Volts, DC-AC 50-60 Cycles
 Superheterodyne Receiver

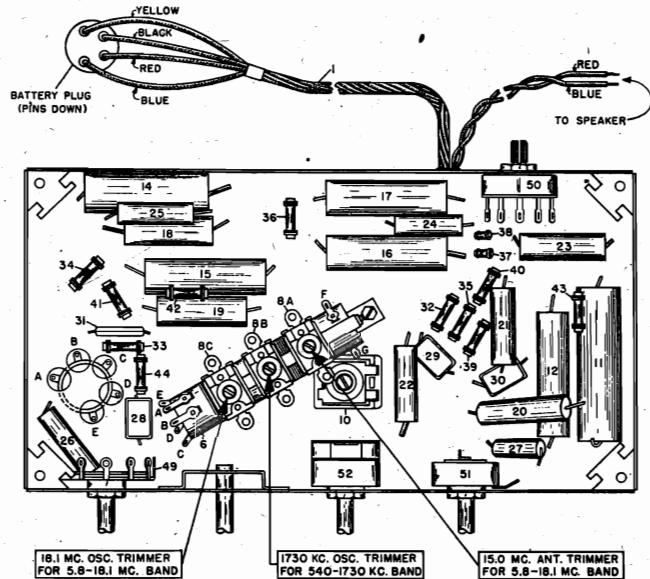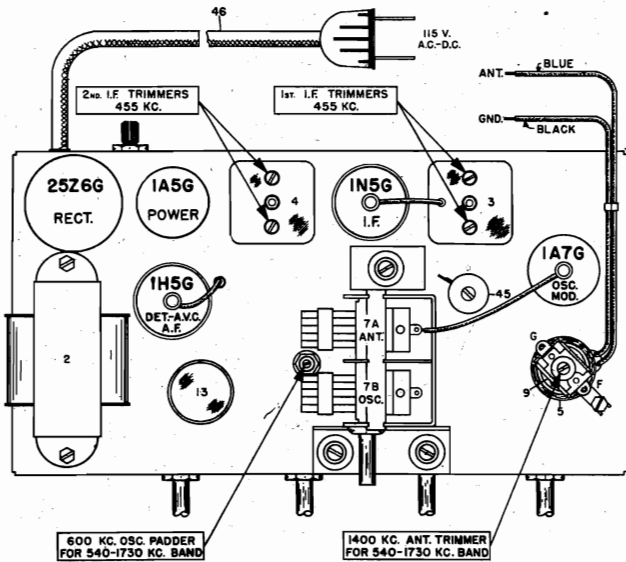

NO. 200-X

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.


Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. Alignment use any band position	Any point where no interfering signal is received	Exactly 455 K.C.	.02 Mfd. condenser	High Side to grid cap of 1A7G tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1730 to 540 K.C. Band	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver blue antenna lead	Adjust 1730 K.C. oscillator trimmer for maximum output. While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output. While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
	2 Approx. 1400 K.C.	Exactly 1400 K.C.	.00025 Mfd. condenser	Receiver blue antenna lead	
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver blue antenna lead	
5.8 to 18.1 M.C. Band	1 Exactly 18.1 M.C.	Exactly 18.1 M.C.	400 Ohm carbon resistor	Receiver blue antenna lead	Adjust 18.1 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use—is tuned in. While rocking gang condenser adjust 15 M.C. antenna trimmer for maximum output.
	2 Approx. 15 M.C.	Exactly 15 M.C.	400 Ohm carbon resistor	Receiver blue antenna lead	

SENTINEL RADIO CORP.

MODEL 201XL
Schematic, Voltage

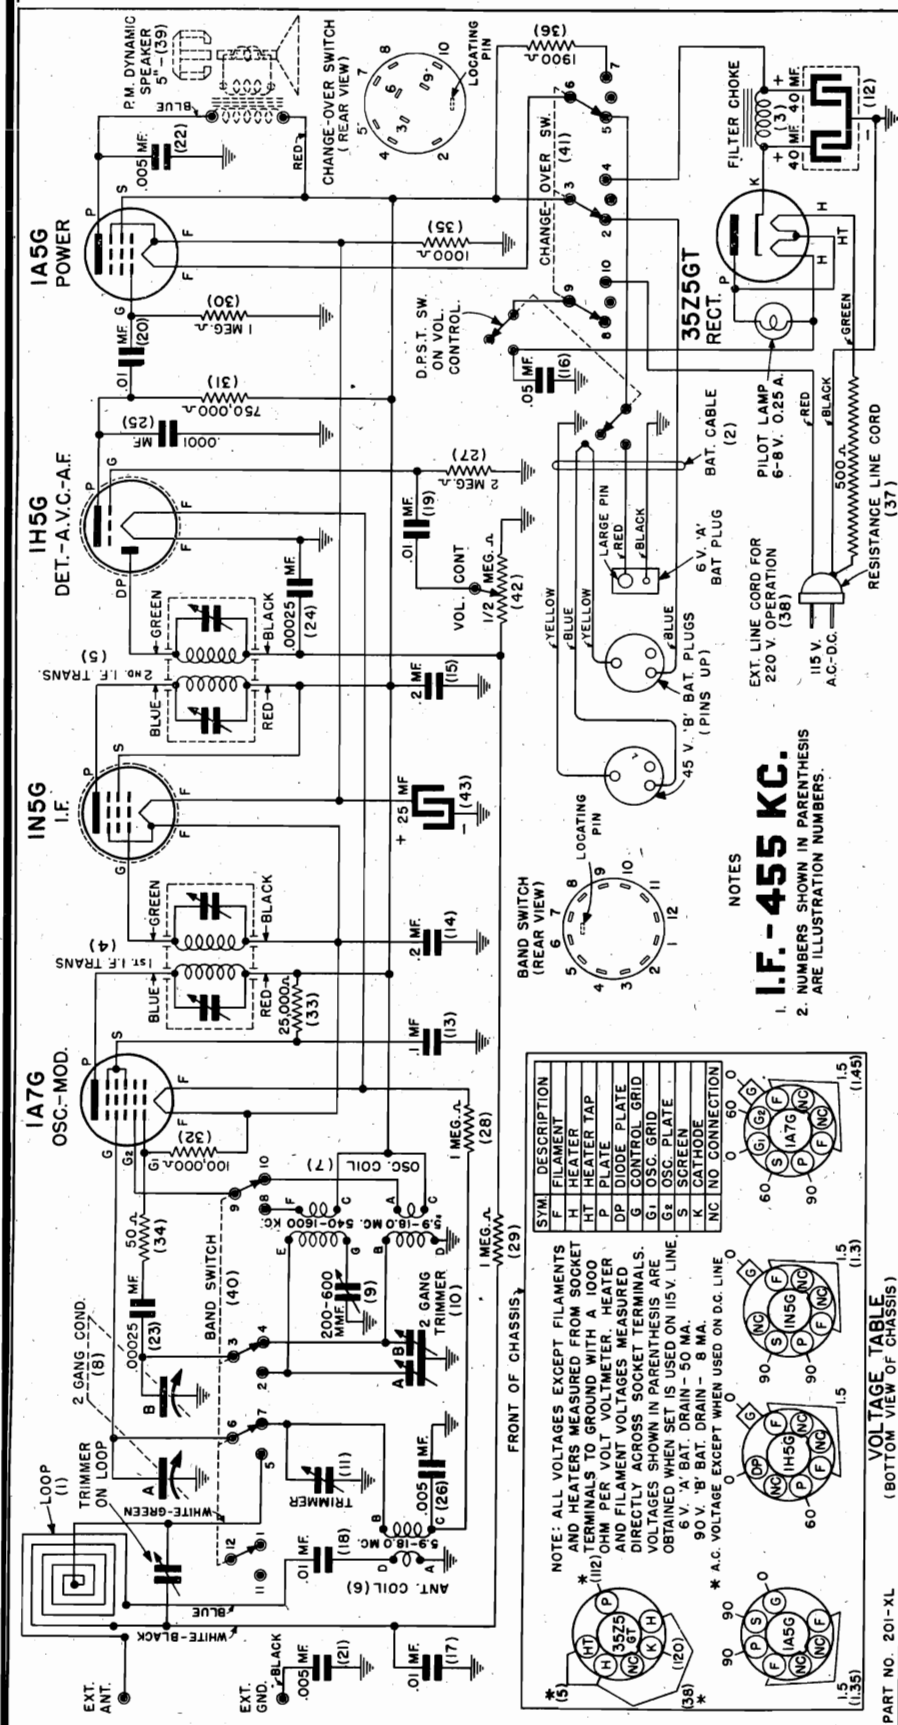

I.F. - 455 KC.
1. NUMBERS SHOWN IN PARENTHESIS ARE ILLUSTRATION NUMBERS.

FRONT OF CHASSIS (29)

SYM	DESCRIPTION	ILLUS. PART NO.	LIST PRICE
F	FILAMENT	21	10080
H	HEATER	22	10080
HT	HEATER TAP	23	9458
P	PLATE	24	9458
DP	DIODE PLATE	25	9394
G	CONTROL GRID	26	9394
GL	OSC. GRID	27	2702
GL2	OSC. PLATE	28	7989
S	SCREEN	29	7989
K	CATHODE	30	2573
NC	NO CONNECTION	31	8000
0	0	32	8000
60	60	33	8907
90	90	34	3706
1.5	1.5	35	11694
1.5	1.5	36	11672
1.5	1.5	37	10851
1.5	1.5	38	10962
1.5	1.5	39	11680
1.5	1.5	40	11681

NOTE: ALL VOLTAGES EXCEPT FILAMENTS AND HEATERS MEASURED FROM SOCKET *1/22 TERMINALS TO GROUND WITH A 1000 OHM PER VOLT VOLTMETER. HEATER AND FILAMENT VOLTAGES MEASURED DIRECTLY ACROSS SOCKET TERMINALS. VOLTAGES SHOWN IN PARENTHESIS ARE OBTAINED WHEN SET IS USED ON IISV. LINE. 90 V. 'A' BAT. DRAIN - 50 MA. 6 V. 'B' BAT. DRAIN - 8 MA. * A.C. VOLTAGE EXCEPT WHEN USED ON D.C. LINE

VOLTAGE TABLE (BOTTOM VIEW OF CHASSIS)

PARTS LIST

Illus. Part No.	Description	Illus. Part No.	List Price
1	11677 Antenna	10282	.10
2	11677 Cable	11687	.85
3	10632 Choke	11689	.50
4	4792 Coil	11648	.20
5	4792 Coil	8184	.10
6	11665 Coil	10777	.16
7	11660 Coil	11519	.75
8	3287 Condenser	10853	.65
9	11395 Condenser	4958	.12
10	11395 Condenser	4959	.12
11	1597 Condenser	4961	.10
12	11493 Condenser	11642	.10
13	10076 Condenser	11046	.10
14	10096 Condenser	10884	.10
15	10077 Condenser		
16	10088 Condenser		
17	10088 Condenser		
18	10088 Condenser		
19	10088 Condenser		
20	10088 Condenser		
21	10080 Condenser		
22	10080 Condenser		
23	9458 Condenser		
24	9458 Condenser		
25	9394 Condenser		
26	9394 Condenser		
27	2702 Resistor		
28	7989 Resistor		
29	7989 Resistor		
30	2573 Resistor		
31	8000 Resistor		
32	8000 Resistor		
33	8907 Resistor		
34	3706 Resistor		
35	11694 Resistor		
36	11672 Resistor		
37	10851 Resistor		
38	10962 Resistor		
39	11680 Switch		
40	11681 Switch		
1	Loop		
2	Battery With 2-3 Prong 'B' Plugs and 1-2 Prong 'A' Plug		
3	Filter		
4	1st I.F. Transformer		
5	2nd I.F. Transformer		
6	Oscillator		
7	Tuning Two Gang		
8	Padder 340-460 Mmf.		
9	Trimmer 3-45 Mmf.		
10	Dry Electrolytic 40-40 Mfd. 150 Volt D. C. Wkg.		
11	Tubular .1 Mfd. 200 Volt		
12	Tubular .2 Mfd. 200 Volt		
13	Tubular .05 Mfd. 200 Volt		
14	Tubular .01 Mfd. 400 Volt		
15	Tubular .01 Mfd. 400 Volt		
16	Tubular .01 Mfd. 400 Volt		
17	Tubular .01 Mfd. 400 Volt		
18	Tubular .01 Mfd. 400 Volt		
19	Tubular .01 Mfd. 400 Volt		
20	Tubular .01 Mfd. 400 Volt		
1	11677 Antenna		
2	11677 Cable		
3	10632 Choke		
4	4792 Coil		
5	4792 Coil		
6	11665 Coil		
7	11660 Coil		
8	3287 Condenser		
9	11395 Condenser		
10	11395 Condenser		
11	1597 Condenser		
12	11493 Condenser		
13	10076 Condenser		
14	10096 Condenser		
15	10077 Condenser		
16	10088 Condenser		
17	10088 Condenser		
18	10088 Condenser		
19	10088 Condenser		
20	10088 Condenser		
21	10080 Condenser		
22	10080 Condenser		
23	9458 Condenser		
24	9458 Condenser		
25	9394 Condenser		
26	9394 Condenser		
27	2702 Resistor		
28	7989 Resistor		
29	7989 Resistor		
30	2573 Resistor		
31	8000 Resistor		
32	8000 Resistor		
33	8907 Resistor		
34	3706 Resistor		
35	11694 Resistor		
36	11672 Resistor		
37	10851 Resistor		
38	10962 Resistor		
39	11680 Switch		
40	11681 Switch		
1	Loop		
2	Battery With 2-3 Prong 'B' Plugs and 1-2 Prong 'A' Plug		
3	Filter		
4	1st I.F. Transformer		
5	2nd I.F. Transformer		
6	Oscillator		
7	Tuning Two Gang		
8	Padder 340-460 Mmf.		
9	Trimmer 3-45 Mmf.		
10	Dry Electrolytic 40-40 Mfd. 150 Volt D. C. Wkg.		
11	Tubular .1 Mfd. 200 Volt		
12	Tubular .2 Mfd. 200 Volt		
13	Tubular .05 Mfd. 200 Volt		
14	Tubular .01 Mfd. 400 Volt		
15	Tubular .01 Mfd. 400 Volt		
16	Tubular .01 Mfd. 400 Volt		
17	Tubular .01 Mfd. 400 Volt		
18	Tubular .01 Mfd. 400 Volt		
19	Tubular .01 Mfd. 400 Volt		
20	Tubular .01 Mfd. 400 Volt		


PRICES ARE SUBJECT TO CHANGE WITHOUT NOTICE.

WHEN ORDERING PARTS BE SURE TO ORDER BY PART NUMBER

MODEL 201XL
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

Two Band
 Battery or 110 Volts, DC-AC 50-60 Cycles
 Superheterodyne Receiver

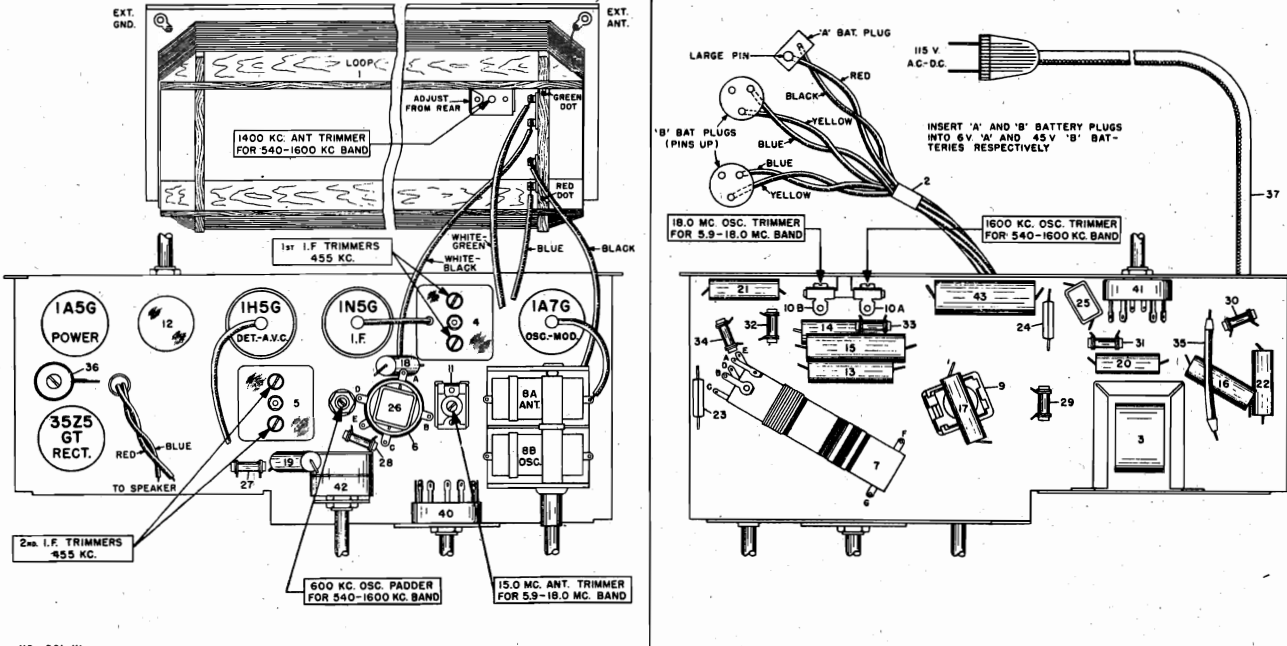

NO. 201-XL

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
 - (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- IMPORTANT: BEFORE ALIGNING, PLACE LOOP ANTENNA IN THE SAME POSITION IT WILL BE IN WHEN THE SET IS IN THE CABINET.

When adjusting 1600 kilocycle oscillator trimmer and 1400 kilocycle antenna trimmer, do not connect test oscillator to loop.

Couple test oscillator to receiver loop by:

- (a) Make a loop consisting of five to ten turns of No. 20 to 30 size wire wound on a three inch form and attach across output of test oscillator.
- (b) Place test oscillator loop near set loop—BE SURE THAT NEITHER MOVES WHILE ALIGNING.


Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test Oscillator frequency to	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. alignment use any band position	Any point where no interfering signal is received	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 1A7 G tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1600 to 540 K.C. Band	1 Exactly 1600 K.C.	Exactly 1600 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	Adjust 1600 K. C. oscillator trimmer for maximum output
	2 Approx. 1400 K.C.	Approx. 1400 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
5.9 to 18 M.C. Band	1 Exactly 18 M. C.	Exactly 18 M. C.	400 Ohm carbon resistor	High side to "Ext. Ant." Lug. Low side to "Ext. GND" Lug	Adjust 18 M. C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 15 M.C.	Approx. 15 M.C.	400 Ohm	High side to "Ext. Ant." Lug. Low side to "Ext. GND" Lug	While rocking gang condenser adjust 15 M.C. antenna trimmer for maximum output

MODEL 202BL
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

SENTINEL MODEL 202BL
 TWO BAND—FIVE TUBE

Battery Operated Superheterodyne Receiver

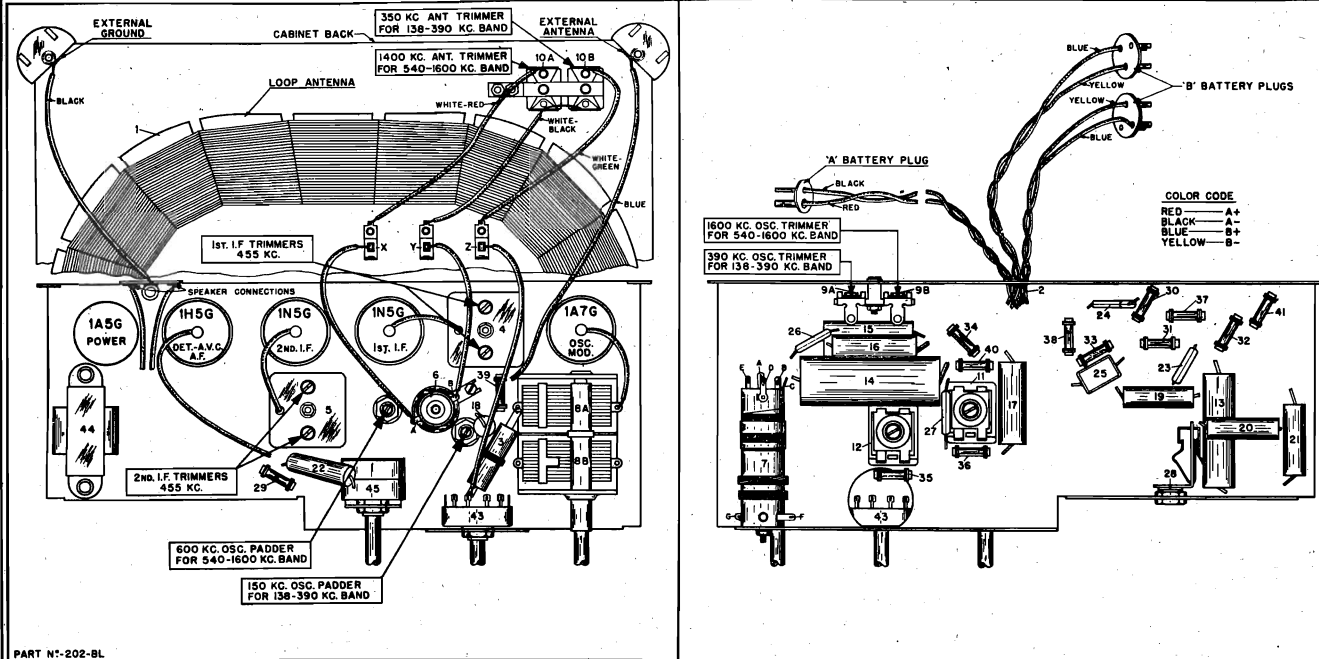

PART N°-202-BL

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
IMPORTANT: BEFORE ALIGNING, PLACE LOOP ANTENNA IN THE SAME POSITION IT WILL BE IN WHEN THE SET IS IN THE CABINET.

When adjusting trimmers, do not connect test oscillator to loop.

Couple test oscillator to receiver loop by:

- (a) Make a loop consisting of five to ten turns of No. 20 to 30 size wire wound on a three inch form and attach across output of test oscillator.
- (b) Place test oscillator loop near set loop—**BE SURE THAT NEITHER MOVES WHILE ALIGNING.**

BE SURE TO ALIGN 138-390 K.C. BAND FIRST—ALWAYS REALIGN 1600-540 K.C. BAND AFTERWARDS.



Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test Oscillator frequency to	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. alignment use any band position	Any point where no interfering signal is received	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid of 1A7G Tube Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
138 to 390 K. C. Band	1 Exactly 390 K.C.	Exactly 390 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	Adjust 390 K.C. oscillator trimmer for maximum output.
	2 Approx. 350 K.C.	Approx. 350 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	Adjust 350 K.C. antenna trimmer for maximum output.
	3 Approx. 150 K.C.	Approx. 150 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 150 K.C. oscillator padder for maximum response.
1600 to 540 K.C. Band	1 Exactly 1600 K.C.	Exactly 1600 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	Adjust 1600 K. C. oscillator trimmer for maximum output
	2 Approx. 1400 K.C.	Approx. 1400 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.

MODEL 203UL
Socket, Trimmers
Alignment, Chassis

SENTINEL RADIO CORP.

TWO BAND—SIX TUBE

A. C.—D. C. Operated Superheterodyne Receiver

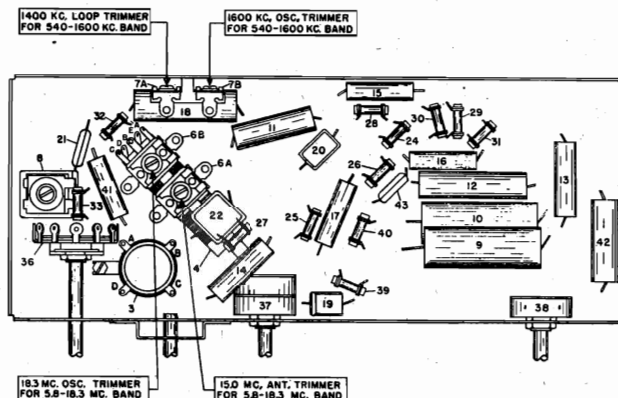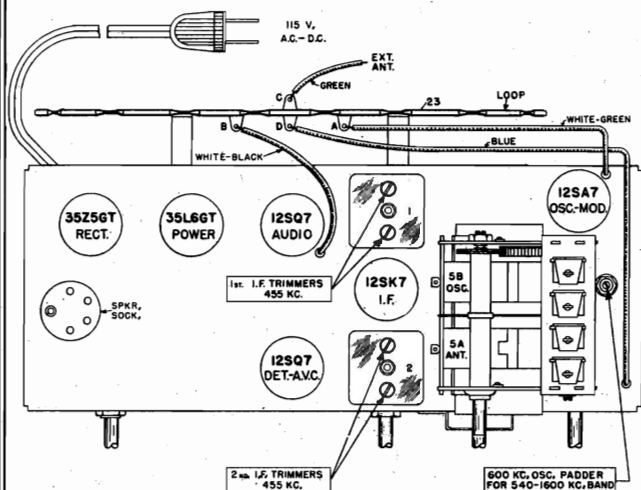

NO. 203-UL

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
 - (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- IMPORTANT: BEFORE ALIGNING, PLACE LOOP ANTENNA IN THE SAME POSITION IT WILL BE IN WHEN THE SET IS IN THE CABINET.**

When adjusting 1600 kilocycle oscillator trimmer and 1400 kilocycle antenna trimmer; do not connect test oscillator to loop.


Couple test oscillator to receiver loop by:

- (a) Make a loop consisting of five to ten turns of No. 20 to 30 size wire wound on a three inch form and attach across output of test oscillator.
- (b) Place test oscillator loop near set loop—**BE SURE THAT NEITHER MOVES WHILE ALIGNING.**

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test Oscillator frequency to	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. alignment use any band position	Any point where no interfering signal is received.	Exactly 455 K.C.	.02 Mfd. condenser	High side to grid cap of 12SA7 tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1600 to 540 K.C. Band	1 Exactly 1600 K.C.	Exactly 1600 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	Adjust 1600 K. C. oscillator trimmer for maximum output
	2 Approx. 1400 K.C.	Approx. 1400 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output
	3 Approx. 600 K.C.	Approx. 600 K.C.	None	Use Small Loop to couple test oscillator to receiver loop	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output.
5.8 to 18.3 M.C. Band	1 Exactly 18.3 M.C.	Exactly 18.3 M.C.	400 Ohm carbon resistor	High side to Green Ant. Lead, Low side to frame of gang condenser	Adjust 18.3 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 15 M.C.	Approx. 15 M.C.	400 Ohm	High side to Green Ant. Lead, Low side to frame of gang condenser	While rocking gang condenser adjust 15 M.C. antenna trimmer for maximum output

SENTINEL RADIO CORP.

MODELS 204A, 204AE
Schematic, Voltage

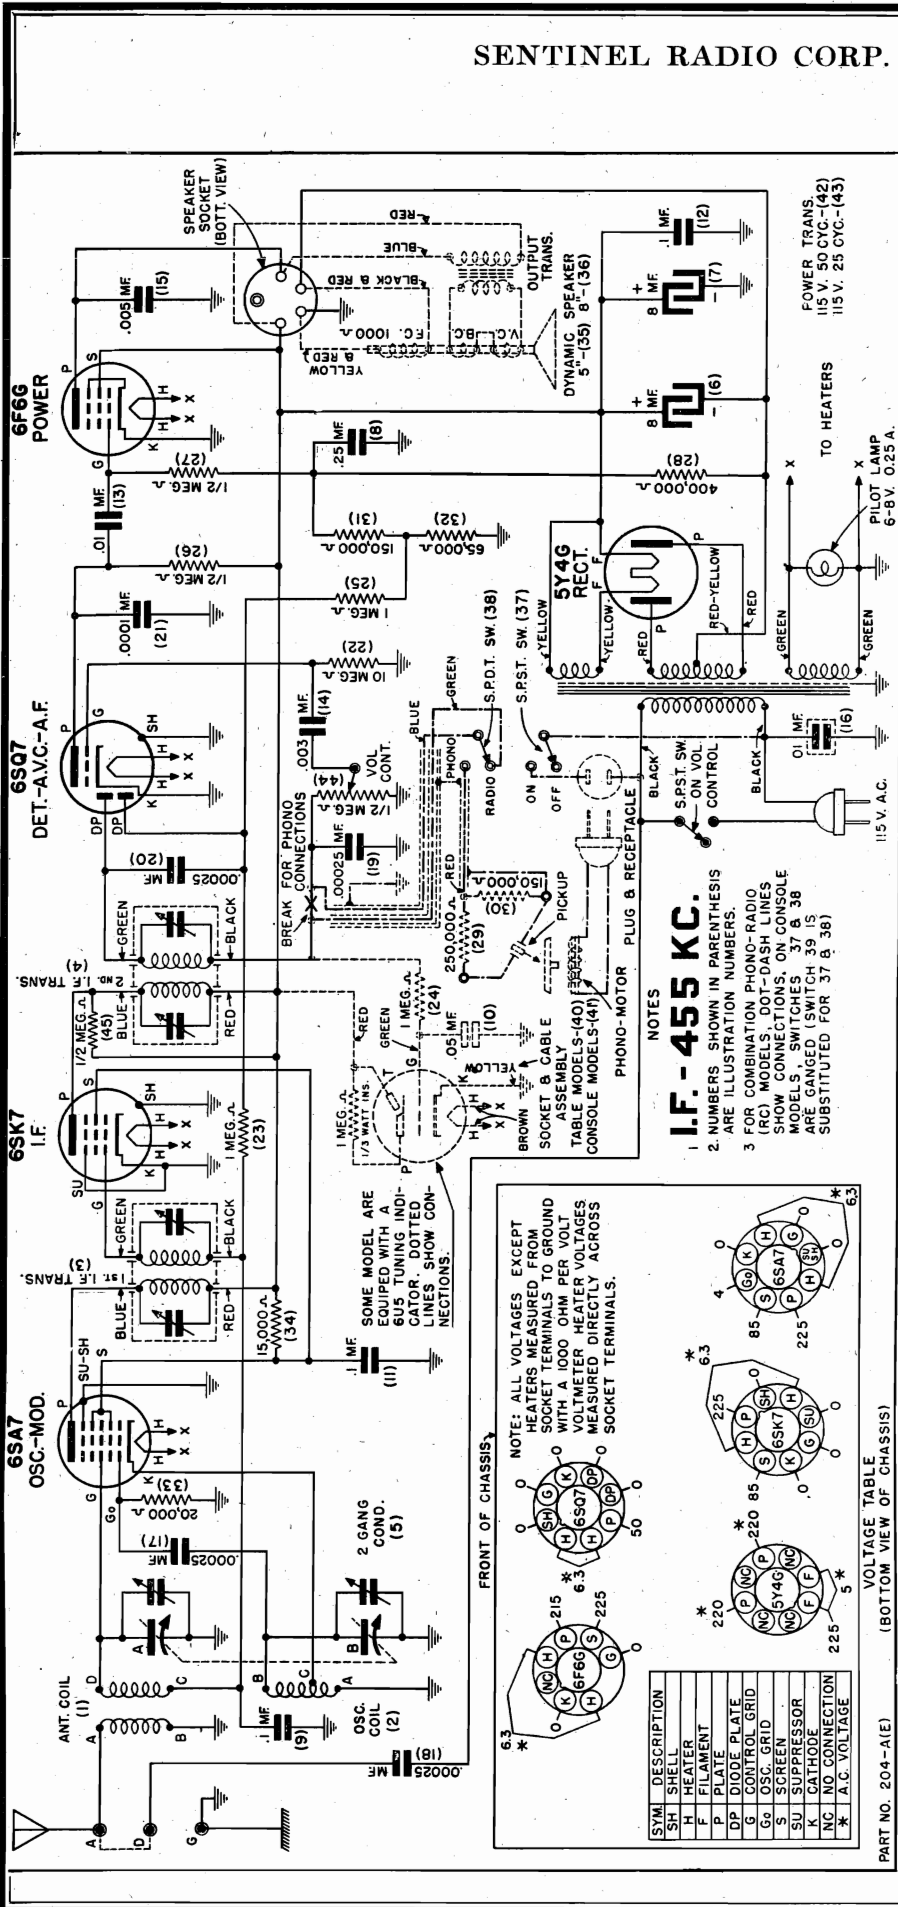

I.F. - 455 KC.

1. I.F. - 455 KC.
2. NUMBERS SHOWN IN PARENTHESIS ARE ILLUSTRATION NUMBERS.
3. FOR COMBINATION PHONO-RADIO SHOW CONNECTIONS: ON CONSOLE MODELS SWITCHES 37 & 38 ARE GANGED (SWITCH 39 IS SUBSTITUTED FOR 37 & 38)

NOTE: ALL VOLTAGES EXCEPT HEATERS MEASURED FROM SOCKET TERMINALS TO GROUND WITH A 1000 OHM PER VOLT VOLTMEETER HEATER VOLTAGES MEASURED DIRECTLY ACROSS SOCKET TERMINALS.


PARTS LIST

Part No.	Description	List Price
1	Antenna	.70
2	Coil	.20
3	Oscillator	1.20
4	1st I. F. Transformer	1.20
5	2nd I. F. Transformer	2.00
6	Dry Electrolytic 8 Mid.-350 Volt	.55
7	Dry Electrolytic 8 Mid.-350 Volt	.55
8	Tubular .25 Mid. 200 Volt	.20
9	Tubular .05 Mid. 200 Volt	.20
10	Tubular .1 Mid. 400 Volt	.20
11	Tubular .1 Mid. 400 Volt	.20
12	Tubular .01 Mid. 400 Volt	.17
13	Tubular .03 Mid. 600 Volt	.17
14	Tubular .05 Mid. 600 Volt	.18
15	Tubular .01 Mid. 220 Volt	.30
16	Tubular .0025 Mid. Mica	.21
17	Tubular .0025 Mid. Mica	.21
18	Tubular .0025 Mid. Mica	.21
19	Tubular .0001 Mid. Mica	.21
20	Tubular .0001 Mid. Mica	.21
21	Resistor 10 Megohm 1/2 Watt	.19
22	Resistor 10 Megohm 1/2 Watt	.19
23	Resistor 7998	.24
24	Resistor 7998	.24
25	Resistor 7998	.24
26	Resistor 6884	.25
27	Resistor 6884	.25
28	Resistor 3133	.26
29	Resistor 8906	.28
30	Resistor 3418	.30
31	Resistor 3418	.30
32	Resistor 11599	.32
33	Resistor 1784	.34
34	Resistor 4599	.34
35	Resistor 11278	.36
36	Speaker	.36
37	Switch 10573	.37
38	Switch 2434	.38
39	Switch 10472	.39
40	Socket & Cable For 8U5 Tuning Eye Incl. Socket and Assembly	.45
41	Socket & Cable For 8U5 Tuning Eye Incl. Socket and Assembly	.65
42	Transformer 115 Volt 50 Cycle	.65
43	Transformer 115 Volt 25 Cycle	.85
44	Volume Control	.85
45	Resistor 6984	.19
46	Carbon 500,000 Ohm 1/2 Watt	.19
47	Carbon 500,000 Ohm 1/2 Watt	.19
48	Carbon 250,000 Ohm 1/2 Watt	.19
49	Carbon 150,000 Ohm 1/2 Watt	.19
50	Carbon 150,000 Ohm 1/2 Watt	.19
51	Carbon 65,000 Ohm 1/2 Watt	.19
52	Carbon 20,000 Ohm 1/2 Watt	.19
53	Carbon 15,000 Ohm 1/2 Watt	.19
54	Electro-Dynamic 5"	.22
55	S.P.S.T. (On-Off) Used with Phono Model Having Tuning Eye	3.00
56	S.P.D.T. (Rad-Phono) Used with Phono Model Having Tuning Eye	.65
57	Radio-Phono (Used with Phono Model For 8U5 Tuning Eye)	1.00
58	Resistor 10 Megohm 1/2 Watt	.19
59	Resistor 10 Megohm 1/2 Watt	.19
60	Resistor 10 Megohm 1/2 Watt	.19
61	Resistor 10 Megohm 1/2 Watt	.19
62	Resistor 10 Megohm 1/2 Watt	.19
63	Resistor 10 Megohm 1/2 Watt	.19
64	Resistor 10 Megohm 1/2 Watt	.19
65	Resistor 10 Megohm 1/2 Watt	.19
66	Resistor 10 Megohm 1/2 Watt	.19
67	Resistor 10 Megohm 1/2 Watt	.19
68	Resistor 10 Megohm 1/2 Watt	.19
69	Resistor 10 Megohm 1/2 Watt	.19
70	Resistor 10 Megohm 1/2 Watt	.19
71	Resistor 10 Megohm 1/2 Watt	.19
72	Resistor 10 Megohm 1/2 Watt	.19
73	Resistor 10 Megohm 1/2 Watt	.19
74	Resistor 10 Megohm 1/2 Watt	.19
75	Resistor 10 Megohm 1/2 Watt	.19
76	Resistor 10 Megohm 1/2 Watt	.19
77	Resistor 10 Megohm 1/2 Watt	.19
78	Resistor 10 Megohm 1/2 Watt	.19
79	Resistor 10 Megohm 1/2 Watt	.19
80	Resistor 10 Megohm 1/2 Watt	.19
81	Resistor 10 Megohm 1/2 Watt	.19
82	Resistor 10 Megohm 1/2 Watt	.19
83	Resistor 10 Megohm 1/2 Watt	.19
84	Resistor 10 Megohm 1/2 Watt	.19
85	Resistor 10 Megohm 1/2 Watt	.19
86	Resistor 10 Megohm 1/2 Watt	.19
87	Resistor 10 Megohm 1/2 Watt	.19
88	Resistor 10 Megohm 1/2 Watt	.19
89	Resistor 10 Megohm 1/2 Watt	.19
90	Resistor 10 Megohm 1/2 Watt	.19
91	Resistor 10 Megohm 1/2 Watt	.19
92	Resistor 10 Megohm 1/2 Watt	.19
93	Resistor 10 Megohm 1/2 Watt	.19
94	Resistor 10 Megohm 1/2 Watt	.19
95	Resistor 10 Megohm 1/2 Watt	.19
96	Resistor 10 Megohm 1/2 Watt	.19
97	Resistor 10 Megohm 1/2 Watt	.19
98	Resistor 10 Megohm 1/2 Watt	.19
99	Resistor 10 Megohm 1/2 Watt	.19
100	Resistor 10 Megohm 1/2 Watt	.19
101	Resistor 10 Megohm 1/2 Watt	.19
102	Resistor 10 Megohm 1/2 Watt	.19
103	Resistor 10 Megohm 1/2 Watt	.19
104	Resistor 10 Megohm 1/2 Watt	.19
105	Resistor 10 Megohm 1/2 Watt	.19
106	Resistor 10 Megohm 1/2 Watt	.19
107	Resistor 10 Megohm 1/2 Watt	.19
108	Resistor 10 Megohm 1/2 Watt	.19
109	Resistor 10 Megohm 1/2 Watt	.19
110	Resistor 10 Megohm 1/2 Watt	.19
111	Resistor 10 Megohm 1/2 Watt	.19
112	Resistor 10 Megohm 1/2 Watt	.19
113	Resistor 10 Megohm 1/2 Watt	.19
114	Resistor 10 Megohm 1/2 Watt	.19
115	Resistor 10 Megohm 1/2 Watt	.19
116	Resistor 10 Megohm 1/2 Watt	.19
117	Resistor 10 Megohm 1/2 Watt	.19
118	Resistor 10 Megohm 1/2 Watt	.19
119	Resistor 10 Megohm 1/2 Watt	.19
120	Resistor 10 Megohm 1/2 Watt	.19
121	Resistor 10 Megohm 1/2 Watt	.19
122	Resistor 10 Megohm 1/2 Watt	.19
123	Resistor 10 Megohm 1/2 Watt	.19
124	Resistor 10 Megohm 1/2 Watt	.19
125	Resistor 10 Megohm 1/2 Watt	.19
126	Resistor 10 Megohm 1/2 Watt	.19
127	Resistor 10 Megohm 1/2 Watt	.19
128	Resistor 10 Megohm 1/2 Watt	.19
129	Resistor 10 Megohm 1/2 Watt	.19
130	Resistor 10 Megohm 1/2 Watt	.19
131	Resistor 10 Megohm 1/2 Watt	.19
132	Resistor 10 Megohm 1/2 Watt	.19
133	Resistor 10 Megohm 1/2 Watt	.19
134	Resistor 10 Megohm 1/2 Watt	.19
135	Resistor 10 Megohm 1/2 Watt	.19
136	Resistor 10 Megohm 1/2 Watt	.19
137	Resistor 10 Megohm 1/2 Watt	.19
138	Resistor 10 Megohm 1/2 Watt	.19
139	Resistor 10 Megohm 1/2 Watt	.19
140	Resistor 10 Megohm 1/2 Watt	.19
141	Resistor 10 Megohm 1/2 Watt	.19
142	Resistor 10 Megohm 1/2 Watt	.19
143	Resistor 10 Megohm 1/2 Watt	.19
144	Resistor 10 Megohm 1/2 Watt	.19
145	Resistor 10 Megohm 1/2 Watt	.19
146	Resistor 10 Megohm 1/2 Watt	.19
147	Resistor 10 Megohm 1/2 Watt	.19
148	Resistor 10 Megohm 1/2 Watt	.19
149	Resistor 10 Megohm 1/2 Watt	.19
150	Resistor 10 Megohm 1/2 Watt	.19
151	Resistor 10 Megohm 1/2 Watt	.19
152	Resistor 10 Megohm 1/2 Watt	.19
153	Resistor 10 Megohm 1/2 Watt	.19
154	Resistor 10 Megohm 1/2 Watt	.19
155	Resistor 10 Megohm 1/2 Watt	.19
156	Resistor 10 Megohm 1/2 Watt	.19
157	Resistor 10 Megohm 1/2 Watt	.19
158	Resistor 10 Megohm 1/2 Watt	.19
159	Resistor 10 Megohm 1/2 Watt	.19
160	Resistor 10 Megohm 1/2 Watt	.19
161	Resistor 10 Megohm 1/2 Watt	.19
162	Resistor 10 Megohm 1/2 Watt	.19
163	Resistor 10 Megohm 1/2 Watt	.19
164	Resistor 10 Megohm 1/2 Watt	.19
165	Resistor 10 Megohm 1/2 Watt	.19
166	Resistor 10 Megohm 1/2 Watt	.19
167	Resistor 10 Megohm 1/2 Watt	.19
168	Resistor 10 Megohm 1/2 Watt	.19
169	Resistor 10 Megohm 1/2 Watt	.19
170	Resistor 10 Megohm 1/2 Watt	.19
171	Resistor 10 Megohm 1/2 Watt	.19
172	Resistor 10 Megohm 1/2 Watt	.19
173	Resistor 10 Megohm 1/2 Watt	.19
174	Resistor 10 Megohm 1/2 Watt	.19
175	Resistor 10 Megohm 1/2 Watt	.19
176	Resistor 10 Megohm 1/2 Watt	.19
177	Resistor 10 Megohm 1/2 Watt	.19
178	Resistor 10 Megohm 1/2 Watt	.19
179	Resistor 10 Megohm 1/2 Watt	.19
180	Resistor 10 Megohm 1/2 Watt	.19
181	Resistor 10 Megohm 1/2 Watt	.19
182	Resistor 10 Megohm 1/2 Watt	.19
183	Resistor 10 Megohm 1/2 Watt	.19
184	Resistor 10 Megohm 1/2 Watt	.19
185	Resistor 10 Megohm 1/2 Watt	.19
186	Resistor 10 Megohm 1/2 Watt	.19
187	Resistor 10 Megohm 1/2 Watt	.19
188	Resistor 10 Megohm 1/2 Watt	.19
189	Resistor 10 Megohm 1/2 Watt	.19
190	Resistor 10 Megohm 1/2 Watt	.19
191	Resistor 10 Megohm 1/2 Watt	.19
192	Resistor 10 Megohm 1/2 Watt	.19
193	Resistor 10 Megohm 1/2 Watt	.19
194	Resistor 10 Megohm 1/2 Watt	.19
195	Resistor 10 Megohm 1/2 Watt	.19
196	Resistor 10 Megohm 1/2 Watt	.19
197	Resistor 10 Megohm 1/2 Watt	.19
198	Resistor 10 Megohm 1/2 Watt	.19
199	Resistor 10 Megohm 1/2 Watt	.19
200	Resistor 10 Megohm 1/2 Watt	.19
201	Resistor 10 Megohm 1/2 Watt	.19
202	Resistor 10 Megohm 1/2 Watt	.19
203	Resistor 10 Megohm 1/2 Watt	.19
204	Resistor 10 Megohm 1/2 Watt	.19
205	Resistor 10 Megohm 1/2 Watt	.19
206	Resistor 10 Megohm 1/2 Watt	.19
207	Resistor 10 Megohm 1/2 Watt	.19
208	Resistor 10 Megohm 1/2 Watt	.19
209	Resistor 10 Megohm 1/2 Watt	.19
210	Resistor 10 Megohm 1/2 Watt	.19
211	Resistor 10 Megohm 1/2 Watt	.19
212	Resistor 10 Megohm 1/2 Watt	.19
213	Resistor 10 Megohm 1/2 Watt	.19
214	Resistor 10 Megohm 1/2 Watt	.19
215	Resistor 10 Megohm 1/2 Watt	.19
216	Resistor 10 Megohm 1/2 Watt	.19
217	Resistor 10 Megohm 1/2 Watt	.19
218	Resistor 10 Megohm 1/2 Watt	.19
219	Resistor 10 Megohm 1/2 Watt	.19
220	Resistor 10 Megohm 1/2 Watt	.19
221	Resistor 10 Megohm 1/2 Watt	.19
222	Resistor 10 Megohm 1/2 Watt	.19
223	Resistor 10 Megohm 1/2 Watt	.19
224	Resistor 10 Megohm 1/2 Watt	.19
225	Resistor 10 Megohm 1/2 Watt	.19
226	Resistor 10 Megohm 1/2 Watt	.19
227	Resistor 10 Megohm 1/2 Watt	.19
228	Resistor 10 Megohm 1/2 Watt	.19
229	Resistor 10 Megohm 1/2 Watt	.19
230	Resistor 10 Megohm 1/2 Watt	.19
231	Resistor 10 Megohm 1/2 Watt	.19
232	Resistor 10 Megohm 1/2 Watt	.19
233	Resistor 10 Megohm 1/2 Watt	.19
234	Resistor 10 Megohm 1/2 Watt	.19
235	Resistor 10 Megohm 1/2 Watt	.19
236	Resistor 10 Megohm 1/2 Watt	.19
237	Resistor 10 Megohm 1/2 Watt	.19
238	Resistor 10 Megohm 1/2 Watt	.19
239	Resistor 10 Megohm 1/2 Watt	.19
240	Resistor 10 Megohm 1/2 Watt	.19
241	Resistor 10 Megohm 1/2 Watt	.19
242	Resistor 10 Megohm 1/2 Watt	.19
243	Resistor 10 Megohm 1/2 Watt	.19
244	Resistor 10 Megohm 1/2 Watt	.19
245	Resistor 10 Megohm 1/2 Watt	.19
246	Resistor 10 Megohm 1/2 Watt	.19
247	Resistor 10 Megohm 1/2 Watt	.19
248	Resistor 10 Megohm 1/2 Watt	.19
249	Resistor 10 Megohm 1/2 Watt	.19
250	Resistor 10 Megohm 1/2 Watt	.19
251	Resistor 10 Megohm 1/2 Watt	.19
252	Resistor 10 Megohm 1/2 Watt	.19
253	Resistor 10 Megohm 1/2 Watt	.19
254	Resistor 10 Megohm 1/2 Watt	.19
255	Resistor 10 Megohm 1/2 Watt	.19
256	Resistor 10 Megohm 1/2 Watt	.19
257	Resistor 10 Megohm 1/2 Watt	.19
258	Resistor 10 Megohm 1/2 Watt	.19
259	Resistor 10 Megohm 1/2 Watt	.19
260	Resistor 10 Megohm 1/2 Watt	.19
261	Resistor 10 Megohm 1/2 Watt	.19
262	Resistor 10 Megohm 1/2 Watt	.19
263	Resistor 10 Megohm 1/2 Watt	.19
264	Resistor 10 Megohm 1/2 Watt	.19
265	Resistor 10 Megohm 1/2 Watt	.19
266	Resistor 10 Megohm 1/2 Watt	.19
267	Resistor 10 Megohm 1/2 Watt	.19
268	Resistor 10 Megohm 1/2 Watt	.19
269	Resistor 10 Megohm 1/2 Watt	.19
270	Resistor 10 Megohm 1/2 Watt	.19
271	Resistor 10 Megohm 1/2 Watt	.19
272	Resistor 10 Megohm 1/2 Watt	.19
273	Resistor 10 Megohm 1/2 Watt	.19
274	Resistor 10 Megohm 1/2 Watt	.19
275	Resistor 10 Megohm 1/2 Watt	.19
276	Resistor 10 Megohm 1/2 Watt	.19
277	Resistor 10 Megohm 1/2 Watt	.19
278	Resistor 10 Megohm 1/2 Watt	.19
279	Resistor 10 Megohm 1/2 Watt	.19
280	Resistor 10 Megohm 1/2 Watt	.19
281	Resistor 10 Megohm 1/2 Watt	.19
282	Resistor 10 Megohm 1/2 Watt	.19
283	Resistor 10 Megohm 1/2 Watt	.19
284	Resistor 10 Megohm 1/2 Watt	.19
285	Resistor 10 Megohm 1/2 Watt	.19
286	Resistor 10 Megohm 1/2 Watt	.19
287	Resistor 10 Megohm 1/2 Watt	.19
288	Resistor 10 Megohm 1/2 Watt	.19
289	Resistor 10 Megohm 1/2 Watt	.19
290	Resistor 10 Megohm 1/2 Watt	.19
291	Resistor 10 Megohm 1/2 Watt	.19
292	Resistor 10 Megohm 1/2 Watt	.19
293	Resistor 10 Megohm 1/2 Watt	.19
294	Resistor 10 Megohm 1/2 Watt	.19
295	Resistor 10 Megohm 1/2 Watt	.19
296	Resistor 10 Megohm 1/2 Watt	.19
297	Resistor 10 Megohm 1/2 Watt	.19
298	Resistor 10 Megohm 1/2 Watt	.19
299	Resistor 10 Megohm 1/2 Watt	.19
300	Resistor 10 Megohm 1/2 Watt	.19
301	Resistor 10 Megohm 1/2 Watt	.19
302	Resistor 10 Megohm 1/2 Watt	.19
303	Resistor 10 Megohm 1/2 Watt	.19
304	Resistor 10 Megohm 1/2 Watt	.19
305	Resistor 10 Megohm 1/2 Watt	.19
306	Resistor 10 Megohm 1/2 Watt	.19
307	Resistor 10 Megohm 1/2 Watt	.19
308	Resistor 10 Megohm 1/2 Watt	.19
309	Resistor 10 Megohm	

MODELS 204A, 204AE
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

5 and 6 tube A. C. Operated Superheterodyne Receiver

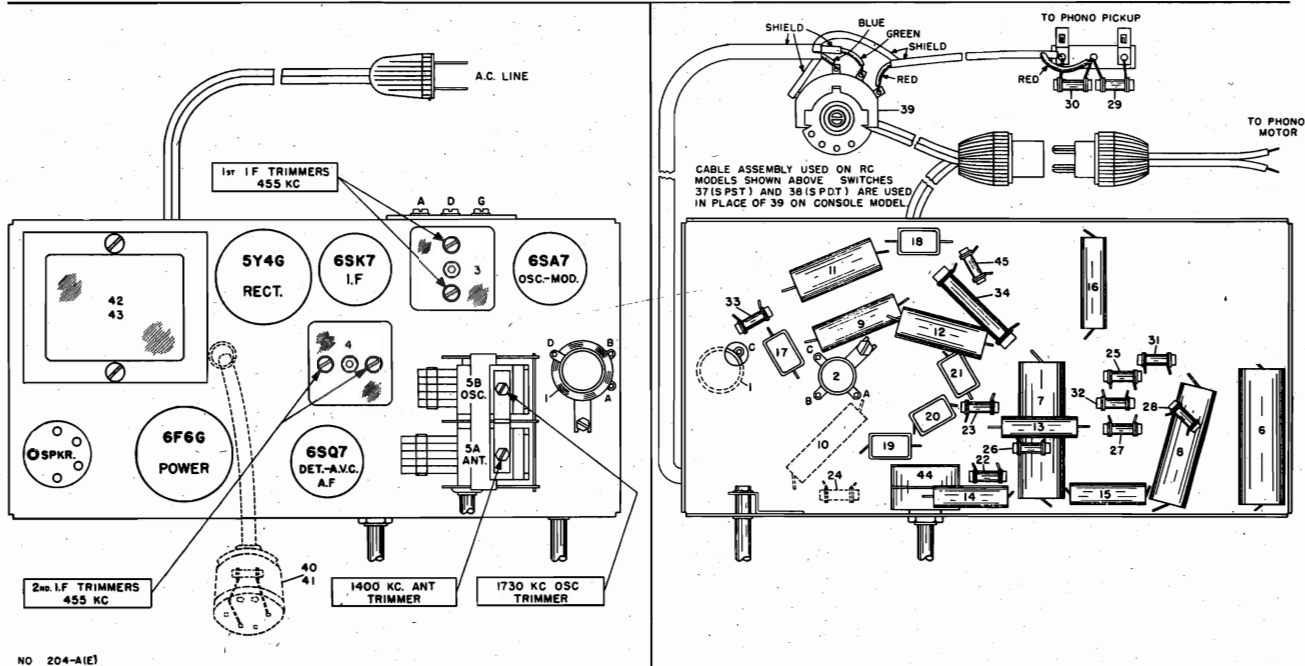

NO 204-A(E)

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.



Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to gang condenser frame.

TEST OSCILLATOR				
Set receiver dial to:	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	Refer to parts layout diagram for location of trimmers mentioned below:
I.F. Any point where no interfering signal is received	455 K. C.	.02 MFD condenser	High side to grid terminal of 6SA7 tube DO NOT REMOVE CAP.	Adjust the second I. F. transformer trimmers for maximum output then adjust each of the first I. F. trimmers for maximum output
1 Exactly 1730 K. C.	Exactly 1730 K. C.	.00025 MFD condenser	Receiver "A" post	Adjust 1730 K. C. oscillator trimmer for maximum output.
2 Approx. 1400 K. C.	Approx. 1400 K. C.	.00025 MFD condenser	Receiver "A" post	While rocking gang condenser adjust 1400 K. C. antenna trimmer for maximum output.

SENTINEL RADIO CORP.

MODEL 205BL
Schematic, Voltage

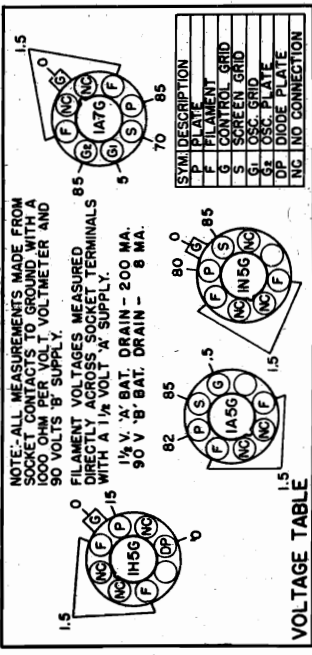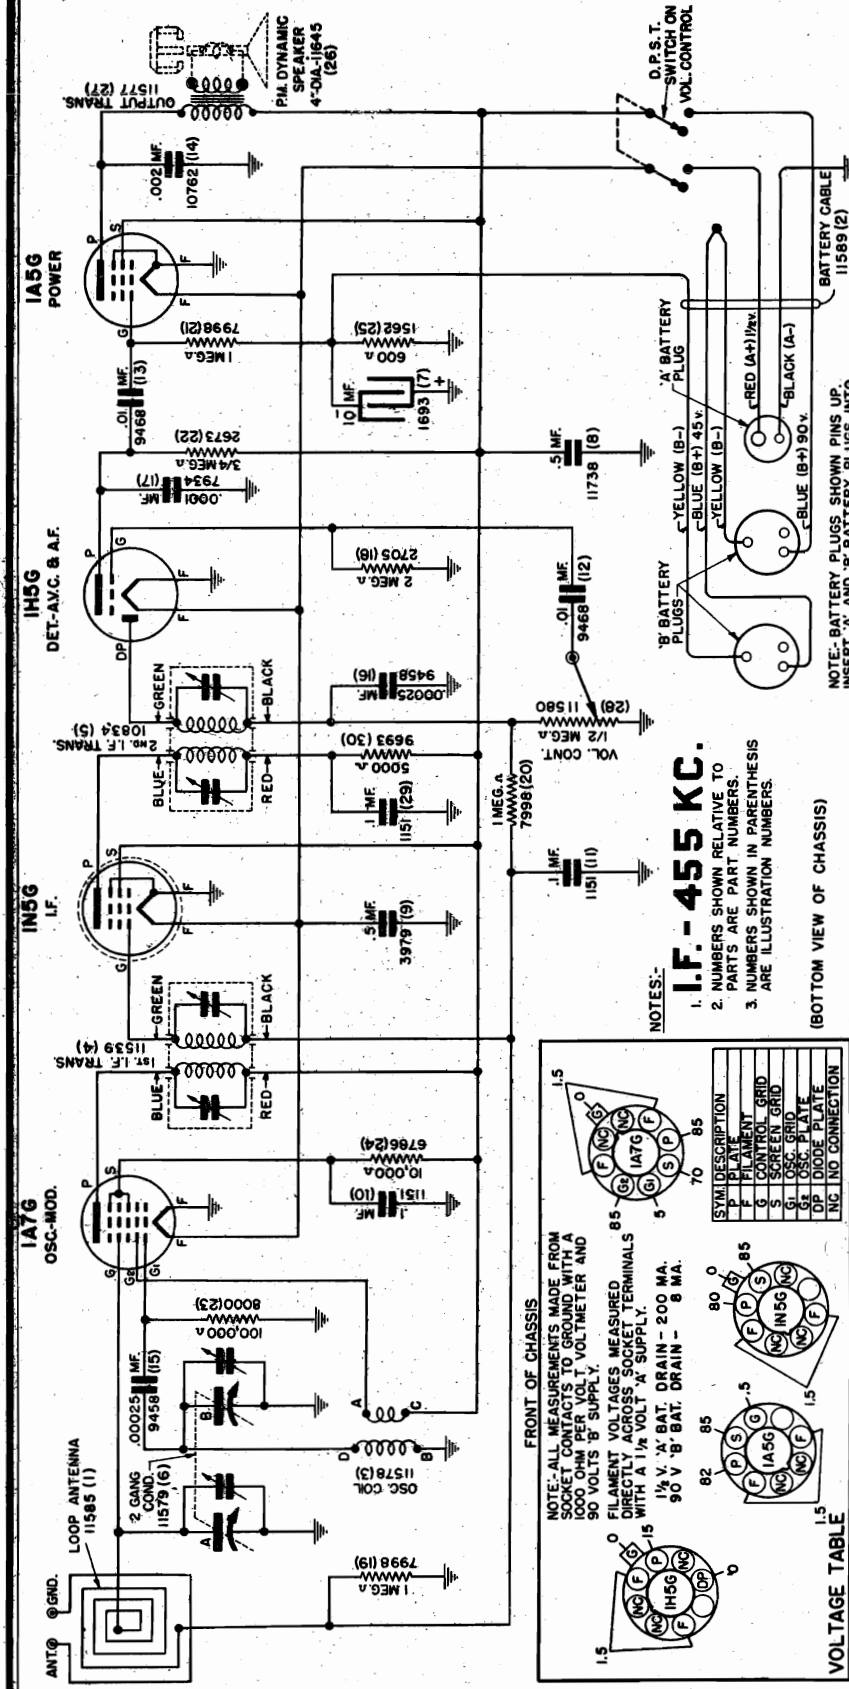

I.F. - 455 KC.
 1. NUMBERS SHOWN RELATIVE TO PARTS ARE PART NUMBERS.
 3. NUMBERS SHOWN IN PARENTHESES ARE ILLUSTRATION NUMBERS.

(BOTTOM VIEW OF CHASSIS)

NOTE: BATTERY PLUGS SHOWN PINS UP. INSERT 'A' AND 'B' BATTERY PLUGS INTO 1 1/2 V. 'A' AND 45 V. 'B' BATTERIES RESPECTIVELY.

Illus. Part No.	Description	List Price
1	Antenna Loop	.90
2	Battery Complete with Plugs.....	.45
3	Oscillator	.60
4	1st I. F. Transformer.....	1.50
5	2nd I. F. Transformer.....	1.45
6	Tuning Two Gang.....	1.95
7	Tubular Dry Electrolytic 10 Mfd.	.75
8	Tubular .5 Mfd. 100 Volt	.35
9	Tubular .5 Mfd. 200 Volt	.40
10	Tubular .1 Mfd. 200 Volt	.20
11	Tubular .1 Mfd. 200 Volt	.20
12	Tubular .01 Mfd. 400 Volt	.17
13	9468 Condenser	.17
14	10762 Condenser	.19
15	9458 Condenser	.19
16	9458 Condenser	.21
17	7934 Condenser	.21
18	2705 Resistor	.21
19	7998 Resistor	.19
20	7998 Resistor	.19
21	7998 Resistor	.19
22	2673 Resistor	.19
23	8000 Resistor	.19
24	5786 Resistor	.19
25	1562 Resistor	.19
26	11645 Speaker	2.50
27	11577 Transformer Output	1.00
28	11580 Volume Control With S.T.D.P. Switch.....	.85
29	1151 Condenser	.20
30	9693 Resistor	.19




MISCELLANEOUS PARTS

Illus. Part No.	Description	List Price
11642	Battery Plug 3 Prong "B"	.10
10351	Battery Plug 2 Prong "A"	.10
	Cabinet Complete with No. 11622 Back and Loop	4.50
11622	Cabinet Back Complete with Loop.....	1.50
3814	Dial Cord 18 in. of 30 lb. Cord.....	.35
11620	Dial Scale Calibrated Scale.....	.04
11693	Dial Spring Cord Tension Spring.....	.20
11696	Dial Pointer White Lacquer Finish.....	.20
11583	Dial Crystal Mottled Walnut Tenite.....	.08

MODEL 205BL
 Socket, Trimmers
 Alignment, Chassis

SENTINEL RADIO CORP.

4 tube 1 1/2 Volt Portable Superheterodyne Receiver

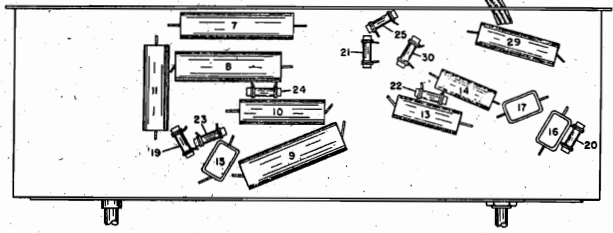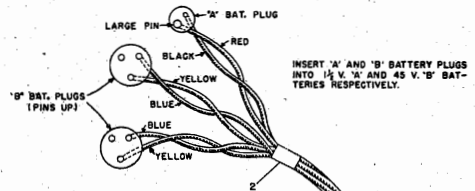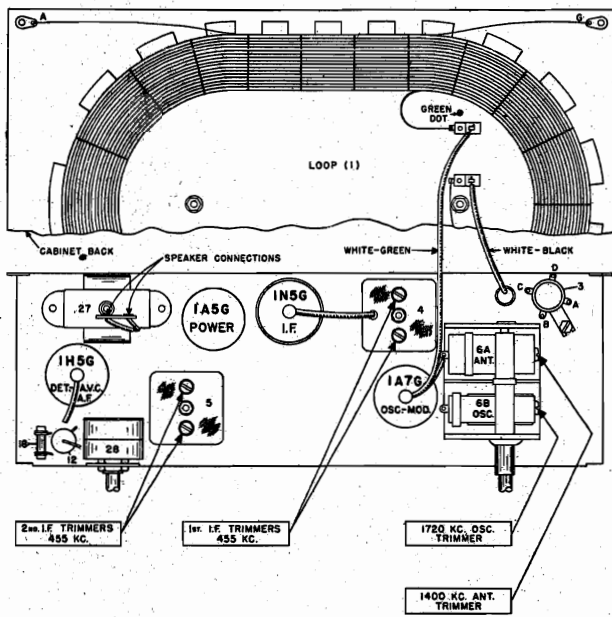

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.

IMPORTANT: BEFORE ALIGNING, PLACE LOOP ANTENNA IN THE SAME POSITION IN THE BACK OF CHASSIS IT WILL BE IN WHEN THE SET IS IN THE CABINET.

When adjusting 1720 kilocycle oscillator trimmer and 1400 kilocycle antenna trimmer, do not connect test oscillator to loop.

Couple test oscillator to receiver loop by:


- (a) Make a loop consisting of five to ten turns of No. 20 to 30 size wire wound on a three inch form and attach across output of test oscillator.
- (b) Place test oscillator loop near set loop—BE SURE THAT NEITHER MOVES WHILE ALIGNING.

Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below—and:
	Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. Any point where no interfering signal is received	455 K. C.	.02 MFD condenser	High side to grid terminal of 1A7G tube DO NOT REMOVE CAP	Adjust the second I. F. transformer trimmers for maximum output—then adjust each of the first I.F. trimmers for maximum output.
1 Exactly 1720 K. C.	Exactly 1720 K. C.	None	Use small loop to couple test oscillator to receiver loop	Adjust 1720 K. C. oscillator trimmer for maximum output.
2 Approx. 1400 K. C.	Exactly 1400 K. C.	None	Use small loop to couple test oscillator to receiver loop	Adjust 1400 K. C. antenna trimmer for maximum output.

MODELS 206A, 206AE, RC206A
RC206AE
Socket, Trimmers, Chassis
Alignment

SENTINEL RADIO CORP.

TWO BAND—FIVE and SIX TUBE
A. C. Operated Superheterodyne Receiver

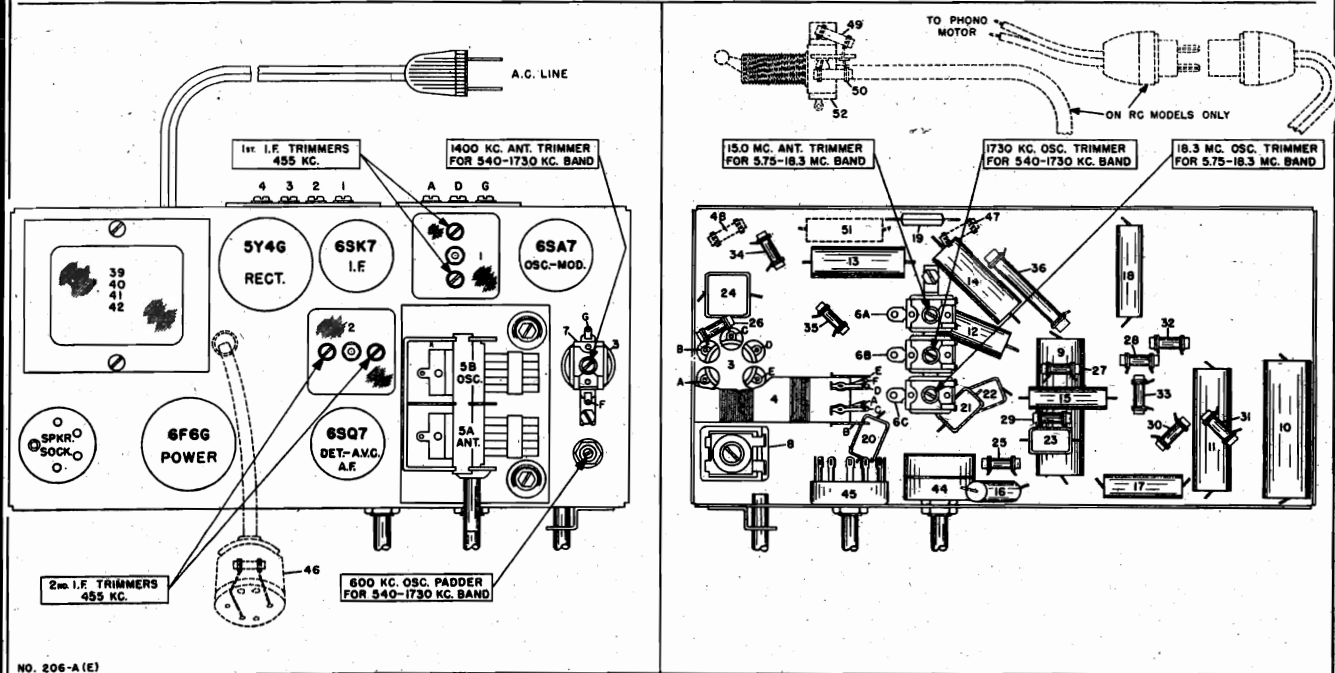

NO. 206-A(E)

ALIGNMENT PROCEDURE

Be sure to follow procedure carefully and in the order given—otherwise the receiver will be insensitive and the dial calibration incorrect. For alignment procedure read tabulations from left to right. If more than one adjustment is required on any one band, make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move needle to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) Have ground lead of test oscillator attached to chassis.

Place band switch for operation on:	Set receiver dial to:	TEST OSCILLATOR			Refer to parts layout diagram for location of trimmers mentioned below:
		Adjust test oscillator frequency to:	Use dummy antenna in series with output of test oscillator consisting of:	Attach output of test oscillator to:	
I. F. alignment use any band position	Any point where no interfering signal is received	Exactly 455 K.C.	.02 Mfd. condenser.	High side to grid cap of 6SA7 tube. Do not remove cap.	Adjust each of the second I.F. transformer trimmers for maximum output—then adjust each of the first I.F. transformer trimmers for maximum output.
1730 to 540 K. C. Band	1 Exactly 1730 K.C.	Exactly 1730 K.C.	.00025 Mfd. condenser	Receiver "A" antenna post	Adjust 1730 K.C. oscillator trimmer for maximum output.
	2 Approx. 1400 K.C.	Approx. 1400 K.C.	.00025 Mfd. condenser	Receiver "A" antenna post	While rocking gang condenser adjust 1400 K.C. antenna trimmer for maximum output.
	3 Approx. 600 K.C.	Approx. 600 K.C.	.00025 Mfd. condenser	Receiver "A" antenna post	While rocking gang condenser adjust 600 K.C. oscillator padder for maximum output
5.75 to 18.3 M.C. Band	1 Exactly 18.3 M.C.	Exactly 18.3 M.C.	400 Ohm carbon resistor	Receiver "A" antenna post	Adjust 18.3 M.C. oscillator trimmer for maximum output—be sure to use proper peak. If more than one peak is noticed, back off trimmer to minimum capacity, then screw down trimmer (add capacity) until the second peak—which is the proper one to use is tuned in.
	2 Approx. 15 M.C.	Approx. 15 M.C.	400 Ohm carbon resistor	Receiver "A" antenna post	While rocking gang condenser adjust 15 M.C. antenna trimmer for maximum output.

Television Connections:—The audio amplifier and loud speaker of this receiver can be used to amplify the sound output of a television receiver not equipped with an audio amplifier and speaker—just connect the sound channel output of the television receiver (from the second detector) to the No. 3 and No. 4 terminals on back of receiver and attach a single pole double throw switch.



Phonograph Connections:—Phonograph records may be electrically reproduced through the receiver loud speaker by connecting the leads of the phonograph pickup to the No. 3 and No. 4 terminals and using either an electrical or hand wound spring operated phonograph motor. The pickup should be of the high impedance type and a single pole double throw switch must be connected as shown in diagram. To operate—place switch in phono position—set pickup needle on record and adjust radio volume control to desired amount of volume.

When shipped from factory a jumper wire is attached to terminals 1 and 2. If receiver is not to be used for phono or television operation, leave the jumper wire in this position. When receiver is used for either phono or television sound operation, remove jumper wire.

SENTINEL MODELS 206A, 206AE, RC206A, and RC206AE

SETCHELL CARLSON, INC.

MODEL 330
MODEL 588
Schematics

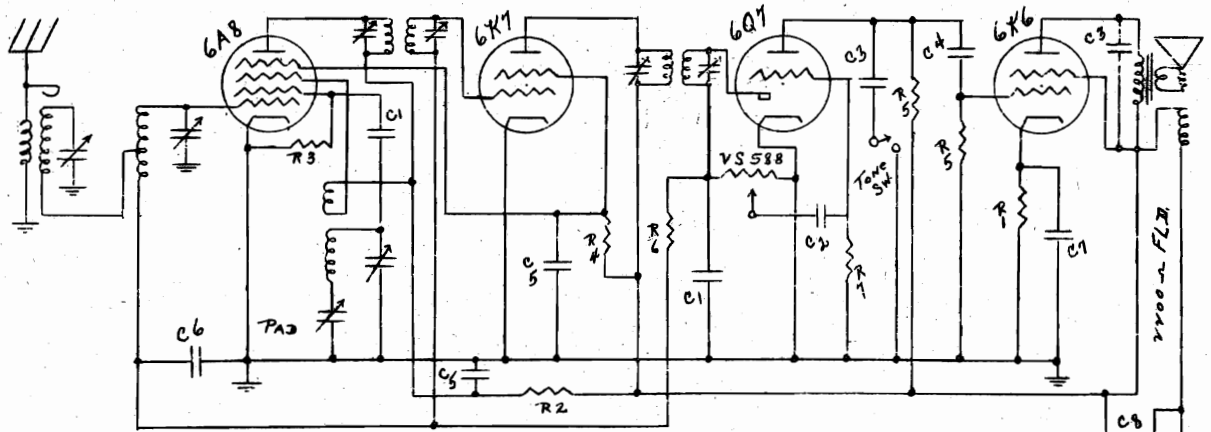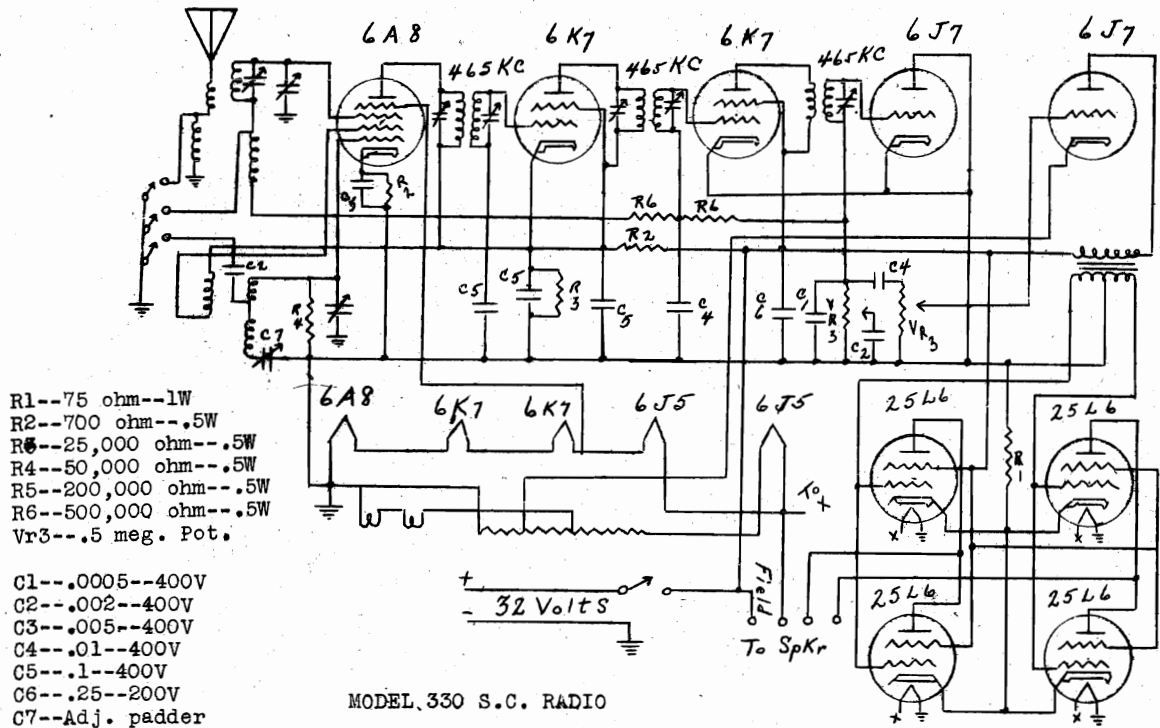

IF = 456


Condensers

- Resistors*
- R1-600 ohm 2 Watt
 - R4-10,000 ohm 1/2 Watt
 - R3-25,000 " " "
 - R4-50,000 " " "
 - R5-500,000 " " "
 - R6-1 Meg " " "
 - R7-15 Meg " " "
 - 6B588-1/2 Meg Central & Sld.
- Condensers*
- C1-.0005-800 Volts
 - C2-.001-800 Volts
 - C3-.004-800 Volts
 - C4-.01-400 Volts
 - C5-.05-400 Volts
 - C6-.1-400 Volts
 - C7-10-25 Volts
 - C8-8X8-450 Volts

Model #588

MODELS 401, 405
 MODELS 407, 408, 4017
 Schematics

SETCHELL CARLSON. INC.

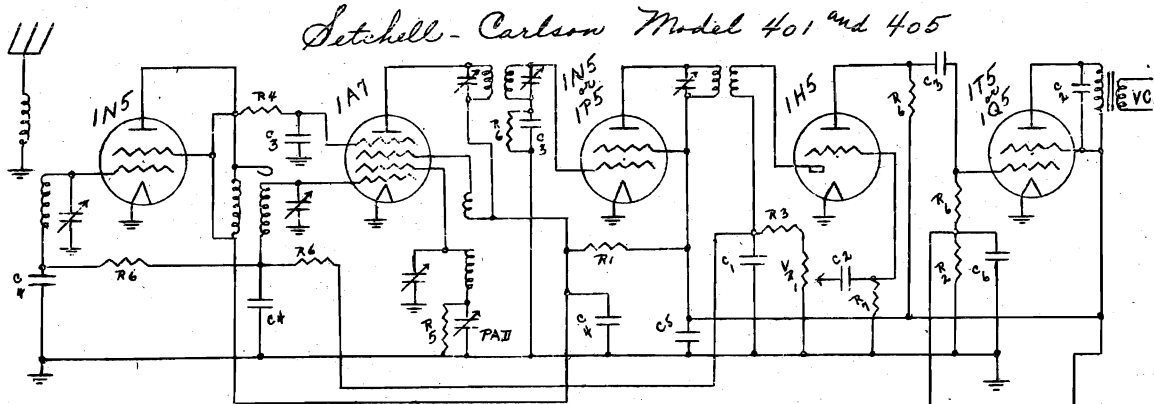


Satchell-Carlson Model 401 and 405

IF = 175 K.C.

- Resistors**
- R1- 400 ohm 1/2 Watt
 - R2- 800 ohm 2 Watt
 - R3- 75,000 " 1/2 Watt
 - R4- 50,000 " " "
 - R5- 100,000 " " "
 - R6- 1 Meg. " " "
 - R7- 15 Meg. " " "
 - VR1- 1/2 Meg. Vol. Control

- Capacitors**
- C1-.0001 Micro Cond.
 - C2-.001- 800 Volt "
 - C3-.01- 400 " "
 - C4-.1- 400 " "
 - C5- 1 Mfd. 400 " "
 - C6- 10 " 75 " "

Satchell-Carlson--Models 407- 4017- 408

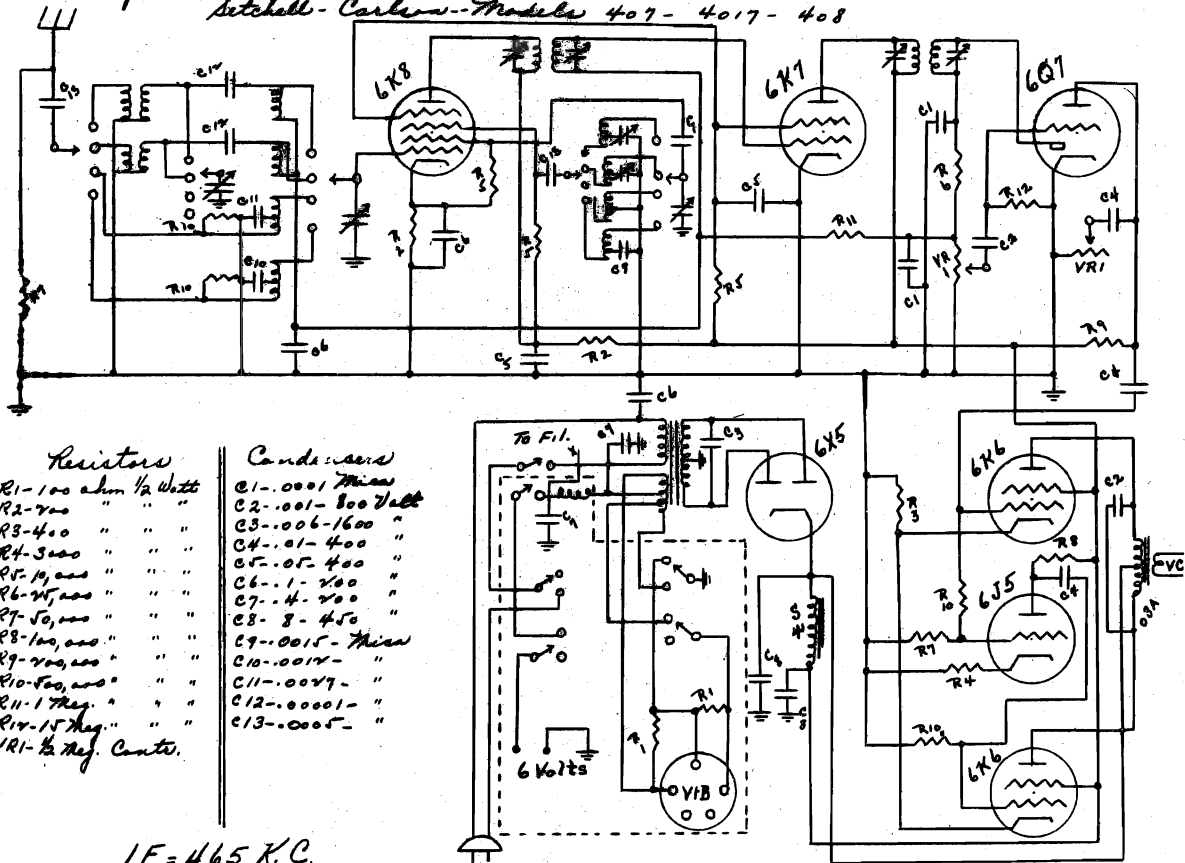


- Resistors**
- R1- 100 ohm 1/2 Watt
 - R2- 700 " " "
 - R3- 400 " " "
 - R4- 3000 " " "
 - R5- 10,000 " " "
 - R6- 25,000 " " "
 - R7- 50,000 " " "
 - R8- 100,000 " " "
 - R9- 200,000 " " "
 - R10- 500,000 " " "
 - R11- 1 Meg. " " "
 - VR1- 1/2 Meg. Cont.

- Capacitors**
- C1-.0001 Micro
 - C2-.001- 800 Volt
 - C3-.006- 1600 "
 - C4-.01- 400 "
 - C5-.05- 400 "
 - C6-.1- 400 "
 - C7-.4- 400 "
 - C8- 8- 450 "
 - C9-.0015- Micro
 - C10-.0014- "
 - C11-.0007- "
 - C12-.0001- "
 - C13-.0005- "

IF = 465 K.C.

MODEL A-219
MODEL A-221
Schematics

SKY-CHIEF RADIO CORP.

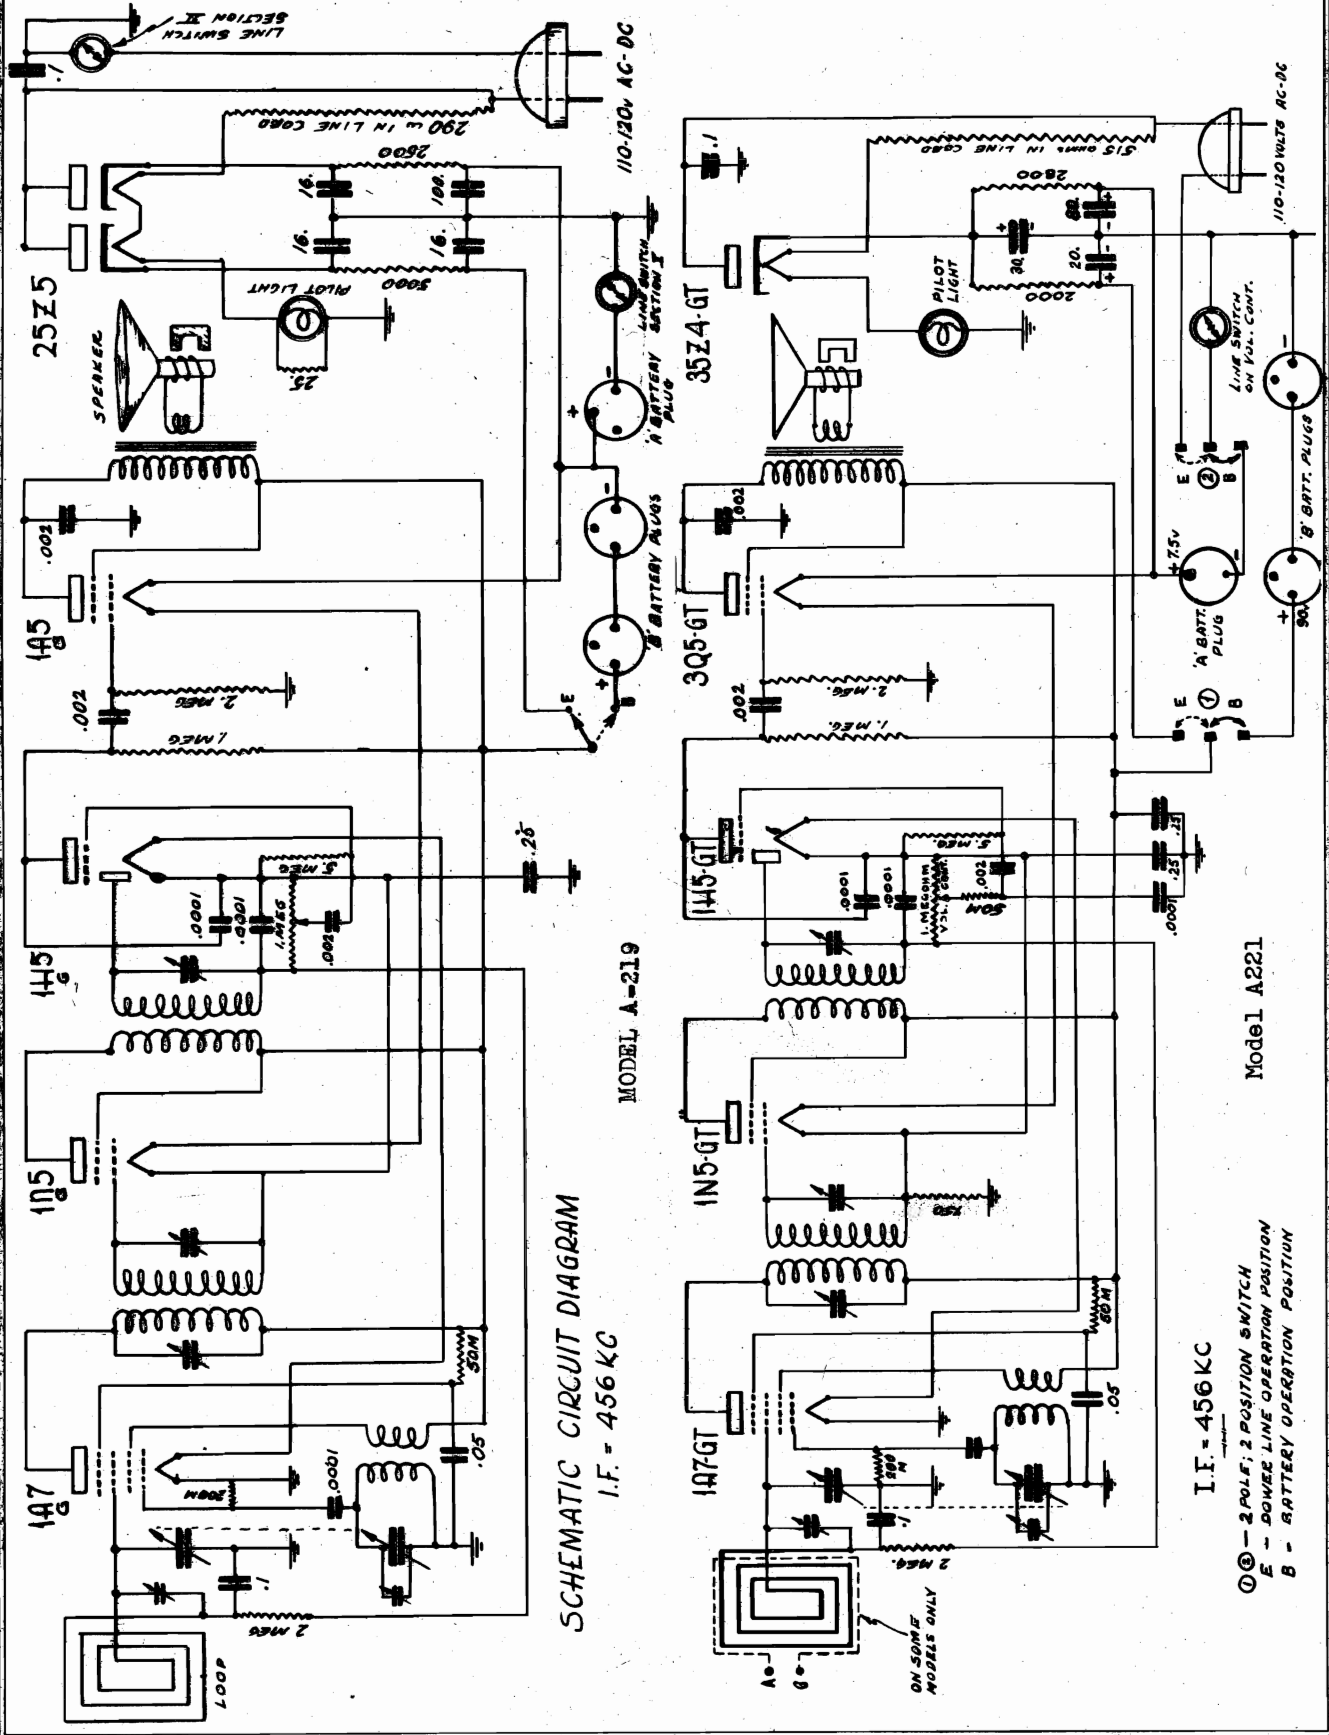


SCHEMATIC CIRCUIT DIAGRAM
MODEL A-219
I.F. = 456 KC

Model A221
I.F. = 456 KC
Ⓞ - 2 POLE; 2 POSITION SWITCH
E - POWER LINE OPERATION POSITION
B - BATTERY OPERATION POSITION

MODEL KU-9
Noise Notes

SONORA RADIO & TELEV., CORP.

MODEL AU-10
Chassis AU
Schematic, Socket, Trimmers
Alignment, Noise Notes

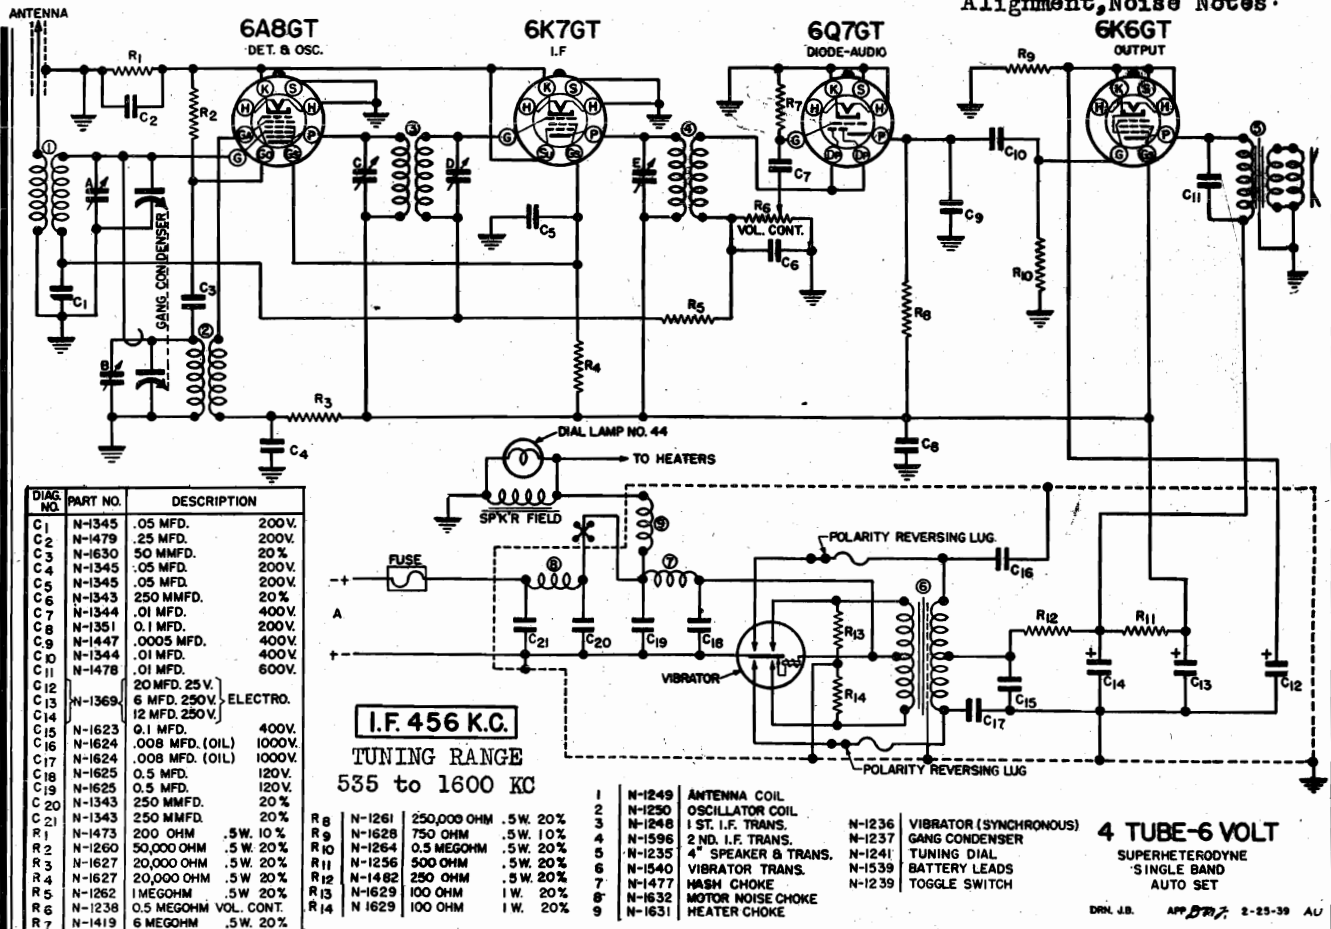

I.F. 456 K.C.
TUNING RANGE
535 to 1600 KC

MOTOR NOISE ELIMINATION

1. Ground the antenna lead-in shield at one or more points to the cowl or any other metal surface in contact with the lead-in.
 2. Move the battery lead around to a point of least noise pick-up and fasten in place with tying cord or tape.
 3. Bond together the throttle rod, choke rod and any metal tubing with a piece of copper braid and ground to the fire wall. This should be done on the engine side.
 4. Bond steering post to firewall.
 5. Bond hood, side panel and other protective covering for engine if it is not making a positive contact to the body.
- In extreme cases, a distributor resistor and generator condenser will reduce noise interference to a minimum. These parts are available at your dealer.



From the standpoint of motor noise, the whip type antenna recommended has been found to be the most satisfactory. It is advisable to use this type antenna even if the car is equipped with a built-in antenna.

I. F. ALIGNMENT. With the gang condenser set at minimum, adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (6A8G) through a .05 or .1 mfd. condenser. The ground on the test oscillator should be connected to the chassis ground. Align all three trimmers to peak or maximum reading on the output meter.

ANT. AND OSC. ALIGNMENT. Connect the antenna to the generator through a 65 MMF dummy* and set the dial and generator at 1600 KC (gang at minimum capacity). Align the BC oscillator trimmer for maximum output. Set the test oscillator at 1400 KC and tune in the signal with the dial and adjust the antenna trimmer for maximum output.


Next set the test oscillator at 600 KC and tune in the signal with the dial to check the sensitivity at this point.

*If the antenna is aligned using a whip antenna shielded lead use a 30 MMF dummy antenna.

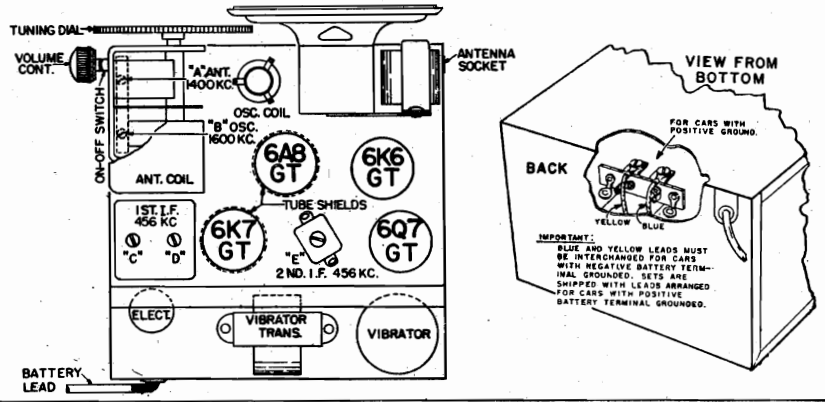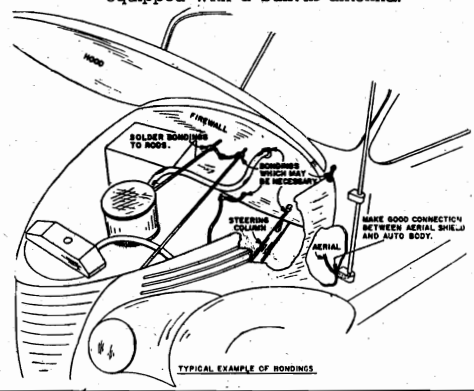

CHASSIS BE, BS

Schematic, Socket, Trimmer SONORA RADIO & TELEV.. CORP.
Alignment

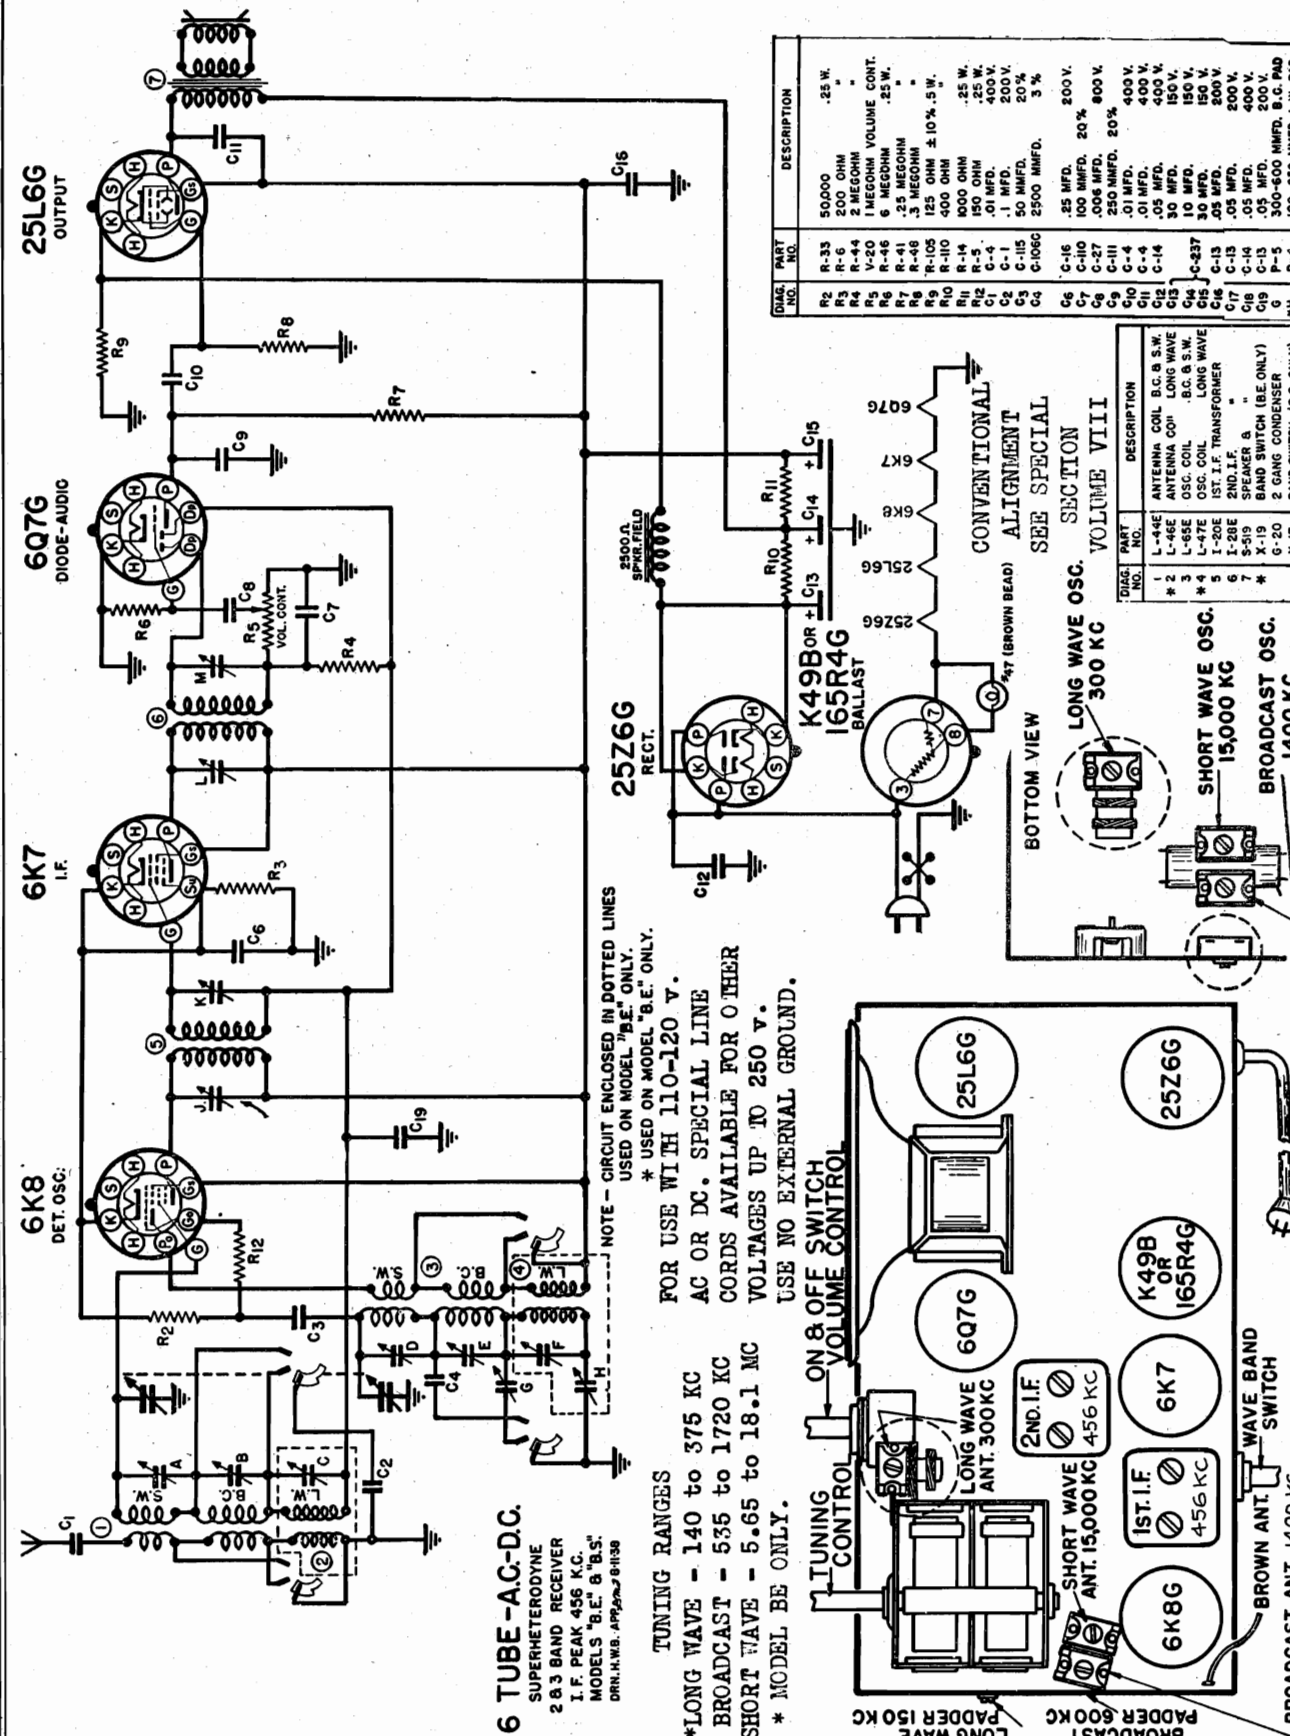


6 TUBE - AC-D.C.
SUPERHETERODYNE
2B3 BAND RECEIVER
I.F. PEAK 456 KC.
MODELS "B.E." & "B.S."
DRN. N.W.B. APP. 2-2 8-1-38

TUNING RANGES
*LONG WAVE - 140 to 375 KC
BROADCAST - 535 to 1720 KC
SHORT WAVE - 5.65 to 18.1 MC
* MODEL BE ONLY.

NOTE - CIRCUIT ENCLOSED IN DOTTED LINES
USED ON MODEL "B.E." ONLY.
* USED ON MODEL "B.S." ONLY.
FOR USE WITH 110-120 V.
AC OR DC. SPECIAL LINE
CORDS AVAILABLE FOR OTHER
VOLTAGES UP TO 250 V.
USE NO EXTERNAL GROUND.


DIAG. NO.	PART NO.	DESCRIPTION
R2	R-33	50,000 .25 W.
R3	R-6	200 OHM -
R4	R-44	2 MEGOHM -
R5	V-20	1 MEGOHM VOLUME CONT.
R6	R-46	6 MEGOHM .25 W.
R7	R-41	.25 MEGOHM -
R8	R-48	.3 MEGOHM -
R9	R-105	125 OHM ± 10% .5 W.
R10	R-100	400 OHM -
R11	R-14	1000 OHM .25 W.
R12	C-5	50 OHM .45 W.
C1	C-1	1 MFD. 200 V.
C2	C-1	1 MFD. 200 V.
C3	C-15	50 MMFD. 3%
C4	G-106G	2500 MMFD.
C5	C-16	.25 MFD. 200 V.
C6	C-10	100 MMFD. 20%
C7	C-27	.005 MFD. 800 V.
C8	C-11	250 MMFD. 20%
C9	C-4	.01 MFD. 400 V.
C10	C-4	.01 MFD. 400 V.
C11	C-14	.05 MFD. 400 V.
C12	C-14	30 MFD. 150 V.
C13	C-337	10 MFD. 150 V.
C14	C-13	.05 MFD. 200 V.
C15	C-13	.05 MFD. 200 V.
C16	C-13	.05 MFD. 200 V.
C17	C-13	.05 MFD. 200 V.
C18	C-13	.05 MFD. 200 V.
C19	P-5	300-600 MMFD. B.C. PAD
G	P-4	100-250 MMFD. L.W. PAD

DIAG. NO.	PART NO.	DESCRIPTION
1	L-44E	ANTENNA COIL B.C. & S.W.
2	L-46E	ANTENNA COIL B.C. & S.W.
3	L-65E	OSC. COIL B.C. & S.W.
4	L-47E	OSC. COIL LONG WAVE
5	L-20E	1ST. I.F. TRANSFORMER
6	S-20E	SHIELDER B.
7	X-16	BAND SWITCH (BE ONLY)
8	X-19	2 GANG CONDENSER
9	G-20	BAND SWITCH (B.S. ONLY)
10	X-17	BAND SWITCH (B.S. ONLY)

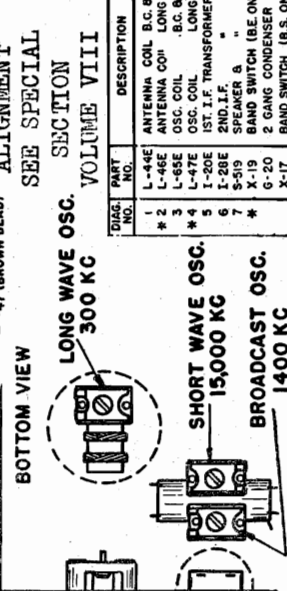


CHASSIS BJI
Schematic, Socket
Alignment, Trimmers

SONORA RADIO & TELEV.. CORP.

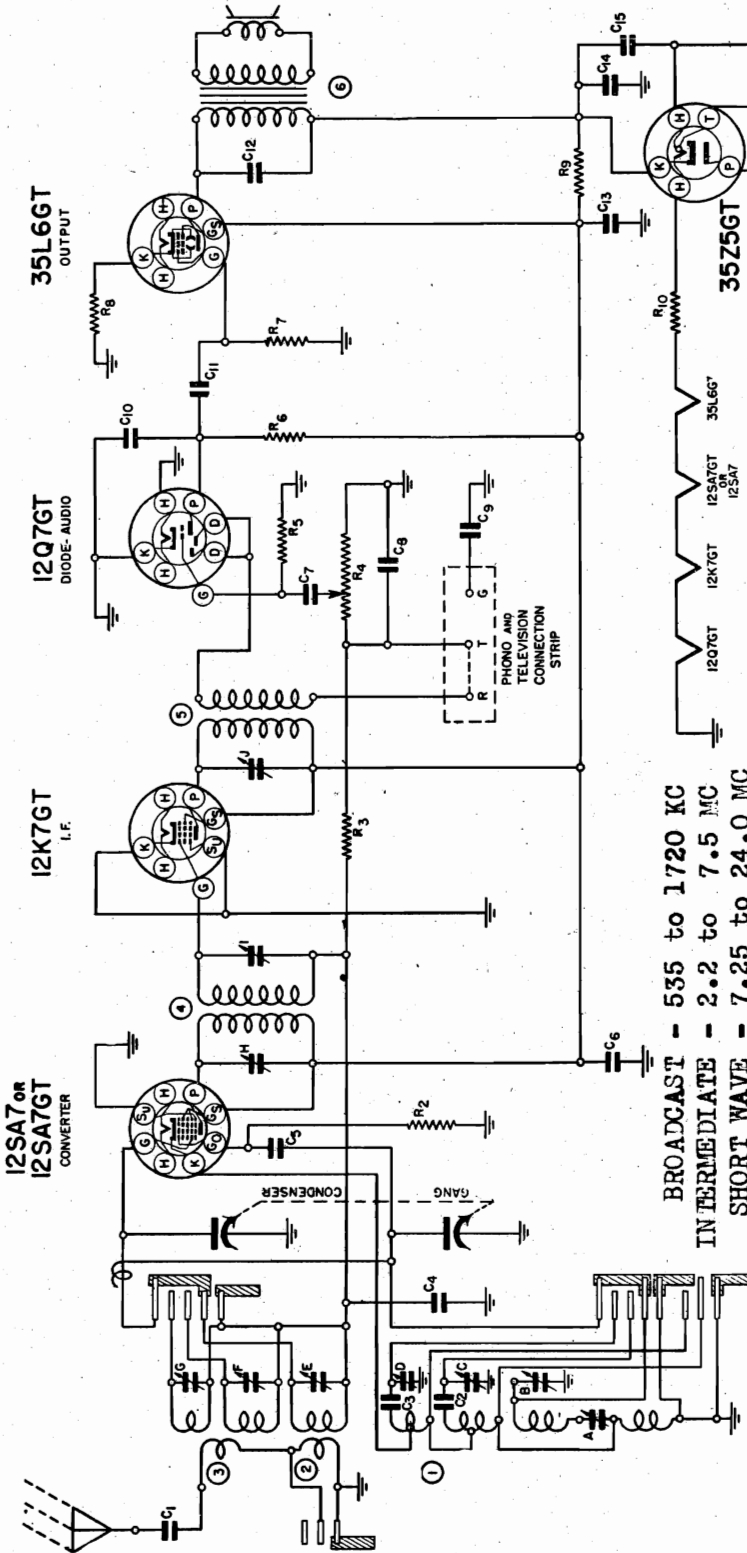

BROADCAST - 535 to 1720 KC
IN INTERMEDIATE - 2.2 to 7.5 MC
SHORT WAVE - 7.25 to 24.0 MC

117 V. A.C.-D.C. LINE
NO. 47 PILOT LAMP
SWITCH ON VOLUME CONTROL
I.F. 456 KC.
5 TUBE A.C.-D.C. SUPERHETERODYNE THREE BAND
DRAWN W.F. APR. 27, 1939
AUG. 10, '39

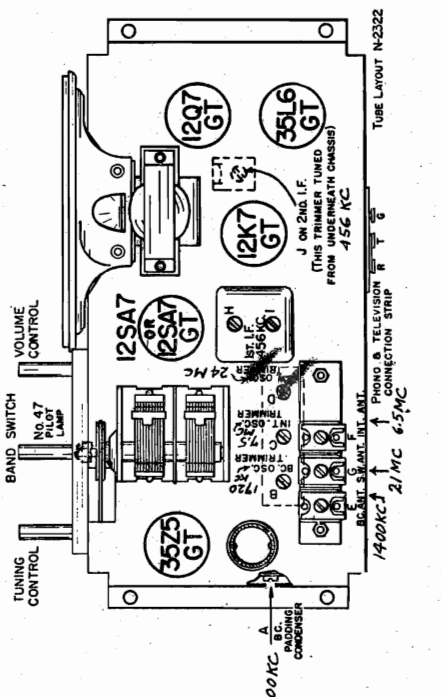

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. PART NO.	DESCRIPTION
R1	N-1614	50 OHM	N-4447	.0005 MFD.
R2	N-1527	20,000 OHM	N-1344	.01 MFD.
R3	N-1252	1 MEGOHM	N-1376	.02 MFD.
R4	N-2255	5 MEGOHM	N-2005	150 V. ELT. LYTC.
R5	N-1571	10 MEGOHM	N-1346	.03 MFD.
R6	N-1264	2 MEGOHM		
R7	N-1264	250 OHM		
R8	N-1287	2000 OHM		
R9	N-1616	80 OHM		
R10				
C1	N-1344	.01 MFD.		
C2	N-2255	5000 MMFD.		
C3	N-1528	4000 MMFD.		
C4	N-1545	.05 MFD.		
C5	N-1551	.01 MFD.		
C6	N-1551	.01 MFD.		
C7	N-1574	100 MMFD.		
C8	N-1574	100 MMFD.		
C9				
A	N-2202	BC. PADDING CONDENSER		
B	N-2202	BC. OSC. TRIMMING COND.		
C	N-2316	INT. B. OSC. TRIM. COND.		
D		SW. OSC. TRIM. COND.		
E		INT. ANT. TRIM. COND.		
F		SW. ANT. TRIM. COND.		
G		SW. ANT. TRIM. COND.		
1	N-2309	OSCILLATOR COIL		
2	N-2332	BC. ANTENNA COIL		
3	N-2316	INT. & SW. ANT. COIL		
4	N-2316	INT. & SW. ANT. COIL		
5	N-2316	INT. & SW. ANT. COIL		
6	N-2316	INT. & SW. ANT. COIL		
7	N-2316	INT. & SW. ANT. COIL		
8	N-2316	INT. & SW. ANT. COIL		
9	N-2316	INT. & SW. ANT. COIL		
10	N-2316	INT. & SW. ANT. COIL		



USE 100-MMF DUMMY FOR BROADCAST ALIGNMENT
CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII

BJI-TJI

CHASSIS KD
Battery Data

SONORA RADIO & TELEV., CORP.

MODEL KB-73, Ch. KB
Schematic, Socket
Trimmers, Alignment
Battery Data

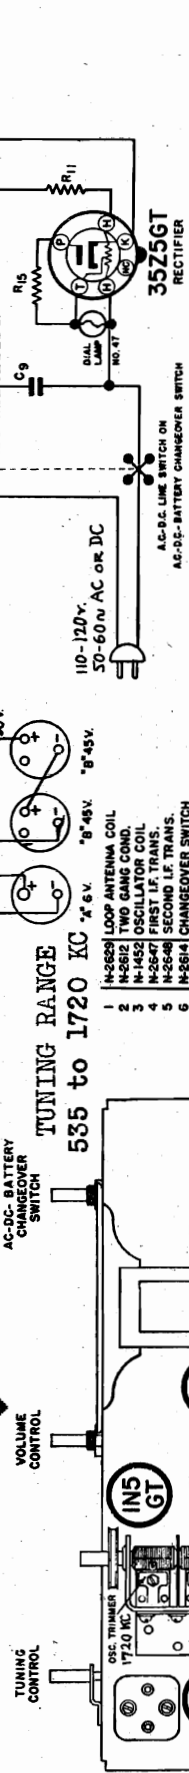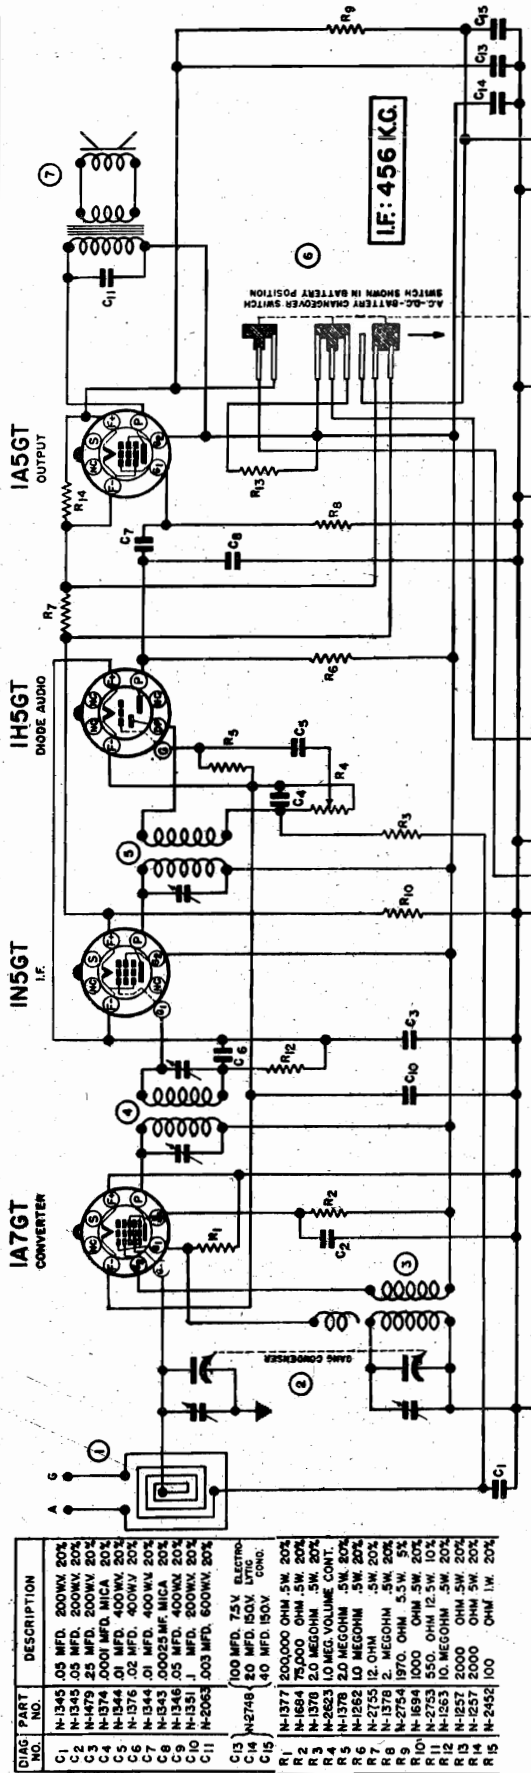

The following batteries will give approximately 250 to 300 hours life and are installed according to Figure 1. One "A" battery and two "B" batteries are required.

SUPPLIER 6 Volt "A" Battery (10 3/4" x 3 3/4" x 1 1/2") 747
Eveready
The following batteries will give approximately 100 to 125 hours of life and are installed according to Figure 2. Use a third clamp to anchor the center battery. One "A" battery and two "B" batteries are required.

SUPPLIER 6 Volt "A" Battery (Approx. 2 3/8" x 2 3/8" x 4")
Ray-O-Vac
General Dry Battery
Marathon

TUNING RANGE 535 to 1720 KC * 5.5 V. * 8.45 V. * 8.45 V. * 8.45 V.
1 N-2651 LOOP ANTENNA COIL
2 N-2652 TWO GANG COND.
3 N-2653 OSCILLATOR COIL
4 N-2654 SECOND I.F. TRANS.
5 N-2655 SECOND I.F. TRANS.
6 N-2656 CHANGE OVER SWITCH
7 N-2747 5" PM. SPEAKER & TRAN.



CONVENTIONAL ALIGNMENT SECTION
SEE SPECIAL VOLUME VIII

5 TUBE BATTERY & 110-120V. AC-DC SUPERMETERODYNE

The following combined "AB" pack will give approximately 150 hours of life. The clamp arrangement is illustrated in Fig. 1. (The same clamp arrangement applies to either a pack or the type of "A" and "B" batteries illustrated.)

SUPPLIER Combined "A" and "B" battery in one unit AB694
Ray-O-Vac
The following batteries will give approximately 250 to 300 hours of life and are installed according to Figure 2. One "A" battery and two "B" batteries are required.

SUPPLIER 6 Volt "A" Battery (Approx. 3 1/8" x 2 3/4" x 5 1/4")
Eveready
Burgess
Ray-O-Vac
General Dry Battery
Marathon
Usclite
Bond

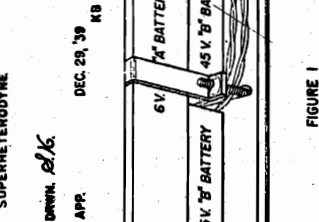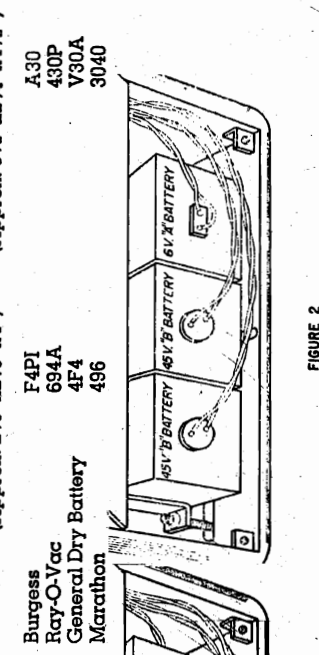


DIAG. PART NO.	DESCRIPTION
C1	N-1345 .05 MFD. 200KV. 20%
C2	N-1345 .05 MFD. 200KV. 20%
C3	N-1479 .25 MFD. 200KV. 20%
C4	N-1374 .0001 MFD. MICA 20%
C5	N-1374 .0001 MFD. MICA 20%
C6	N-1374 .01 MFD. 400KV. 20%
C7	N-1344 .02 MFD. 400KV. 20%
C8	N-1343 .00025 MFD. MICA 20%
C9	N-1346 .05 MFD. 200KV. 20%
C10	N-1351 .1 MFD. 400KV. 20%
C11	N-2063 .003 MFD. 600KV. 20%
C13	100 MFD. 75 V. ELECTRO.
C14	N-2748 20 MFD. 150V. LTRC. COND.
C15	40 MFD. 150V. COND.
R1	N-1377 200,000 OHM. 5W. 20%
R2	N-1684 75,000 OHM. 5W. 20%
R3	N-1378 2.0 MEGOHM. 5W. 20%
R4	N-2653 10 MEG. VOLUME CONT.
R5	N-1378 2.0 MEGOHM. 5W. 20%
R6	N-1378 2.0 MEGOHM. 5W. 20%
R7	N-1378 2.0 MEGOHM. 5W. 20%
R8	N-1378 2.0 MEGOHM. 5W. 20%
R9	N-2754 1970. OHM. 5.5W. 5%
R10	N-1694 1,000. OHM. 5W. 20%
R11	N-2753 550. OHM. 12.5W. 10%
R12	N-1263 10. MEGOHM. 5W. 20%
R13	N-1257 2,000. OHM. 5W. 20%
R14	N-1257 2,000. OHM. 5W. 20%
R15	N-2452 100. OHM. 1W. 20%

MODEL KD-75, Ch. KD
Schematic, Socket
Trimmers, Alignment

SONORA RADIO & TELEV., CORP.

KD

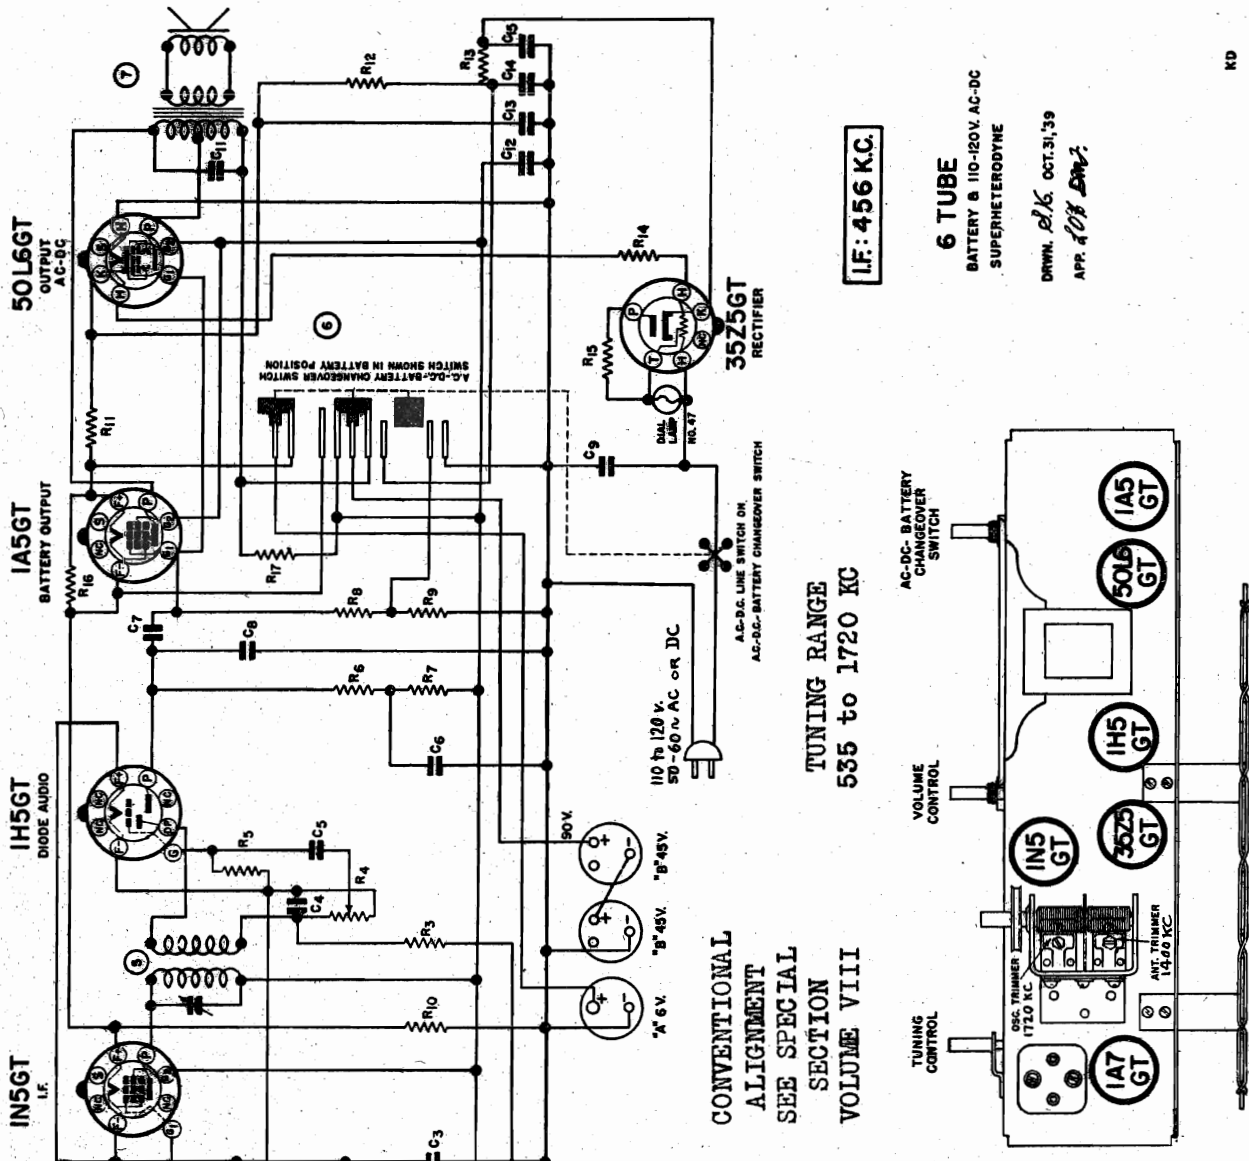


FOR BATTERY DATA SEE INDEX.

DIAG. NO.	PART NO.	DESCRIPTION	QIAC. NO.	PART NO.	DESCRIPTION	
C1	N-1346	.05 MFD. 200WV. 20%	R1	N-1377	200,000 OHM .5W. 20%	
C2	N-1345	.05 MFD. 200WV. 20%	R2	N-1664	75,000 OHM .5W. 20%	
C3	N-1379	.25 MFD. 200WV. 20%	R3	N-1378	2.0 MEGOHM .5W. 20%	
C4	N-1374	.0001 MFD. MICA	R4	N-2623	1.0 MEG. VOLUME CONT.	
C5	N-1344	.01 MFD. 400WV. 20%	R5	N-1378	2.0 MEGOHM .5W. 20%	
C6	N-1343	.05 MFD. 200WV. 20%	R6	N-1262	1.0 MEGOHM .5W. 20%	
C7	N-1344	.01 MFD. 400WV. 20%	R7	N-1778	100,000 OHM .5W. 20%	
C8	N-1343	.05 MFD. 200WV. 20%	R8	N-1264	500,000 OHM .5W. 20%	
C9	N-1346	.05 MFD. 200WV. 20%	R9	N-1694	1000 OHM .5W. 20%	
C10	N-1351	.001 MFD. 200WV. 20%	R10	N-1852	1.0 MEGOHM .5W. 20%	
C11	N-2623	1.0 MEG. 150V. BATTERY	R11	N-2712	50 OHM .5W. 10%	
C12	N-2627	100 MFD. 75V. CAPACITOR	R12	N-2713	50 OHM .5W. 10%	
C13	N-1376	20 MFD. 150V. COND.	R13	N-2717	250 OHM .5W. 10%	
C14	N-1376	40 MFD. 150V. COND.	R14	N-2714	50 OHM .5W. 20%	
C15	N-1376	80 MFD. 150V. COND.	R15	N-1247	2000 OHM .5W. 20%	
C16	N-1376	.02 MFD. 400WV. 20%	R16	N-1776	1500 OHM .5W. 20%	
				R17	N-1776	1500 OHM .5W. 20%
				R18	N-1419	6. MEGOHM .5W. 20%
1	N-2659	LOOP ANTENNA COIL				
2	N-2612	TWO GANG COND.				
3	N-1452	OSCILLATOR COIL				
4	N-2647	FIRST I.F. TRANS.				
5	N-2648	SECOND I.F. TRANS.				
6	N-2614	CHANGEOVER SWITCH				
7	N-2624	5" P.M. SPEAKER & TRAN.				

SONORA RADIO & TELEV., CORP.


MODEL KE-78, Ch. KE
Schematic, Socket
Alignment, Trimmers

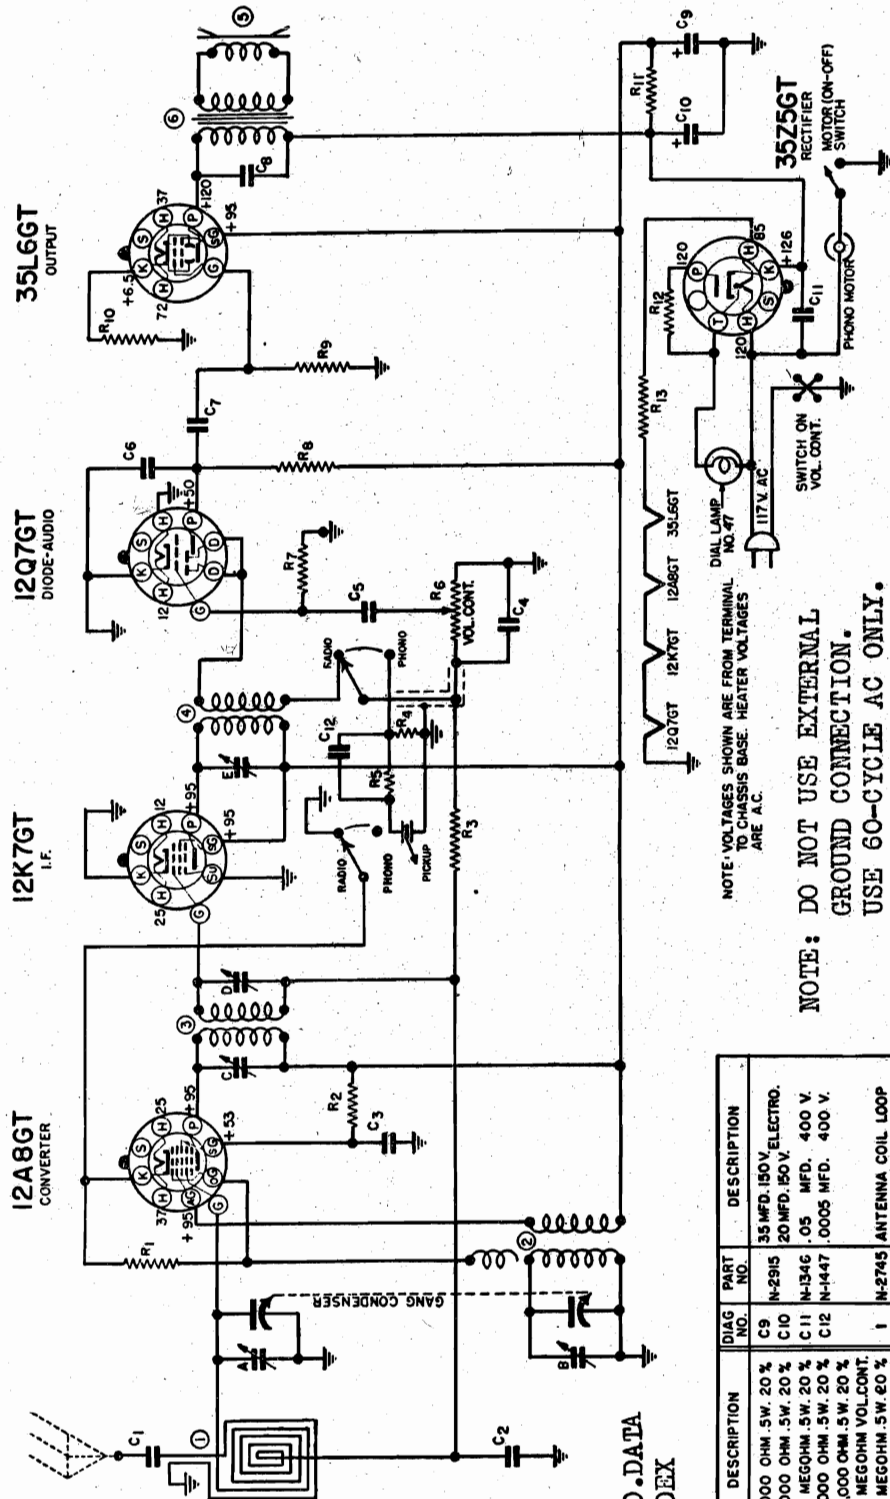

FOR PHONO DATA
SEE INDEX

NOTE: VOLTAGES SHOWN ARE FROM TERMINAL TO CHASSIS BASE. HEATER VOLTAGES ARE A.C.

NOTE: DO NOT USE EXTERNAL GROUND CONNECTION. USE 60-CYCLE AC ONLY.

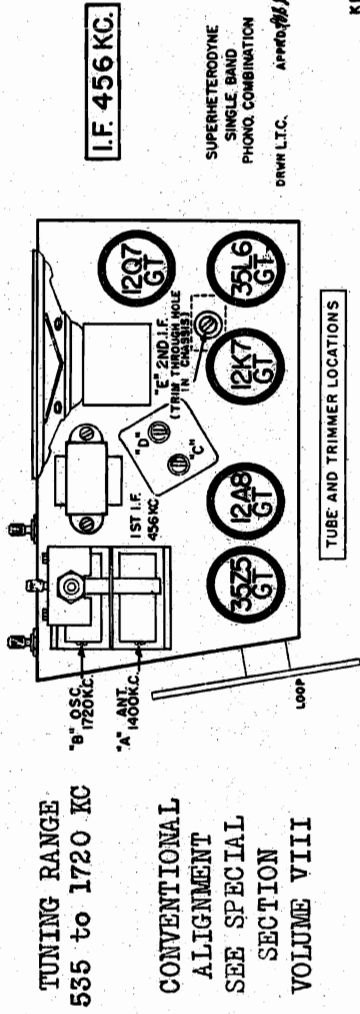

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
R1	N-1260	50,000 OHM .5W. 20 %	C9	N-2915	35 MFD. 150 V. ELECTRO.
R2	N-1627	20,000 OHM .5W. 20 %	C10	N-1346	20 MFD. 150 V. ELECTRO.
R3	N-1262	1 MEGOHM .5W. 20 %	C11	N-1346	.05 MFD. 400 V.
R4	N-1653	300,000 OHM .5W. 20 %	C12	N-1447	.0005 MFD. 400 V.
R5	N-1696	400,000 OHM .5W. 20 %			
R6	N-2876	.5 MEGOHM VOL. CONT.			
R7	N-1263	10 MEGOHM .5W. 20 %	1	N-2745	ANTENNA COIL LOOP
R8	N-1377	200,000 OHM .5W. 20 %	2	N-1462	OSCILLATOR COIL
R9	N-1264	500,000 OHM .5W. 20 %	3	N-2598	1ST I.F. TRANSFORMER
R10	N-1616	250 OHM .5W. 10 %	4	N-2890	2ND I.F. TRANSFORMER
R11	N-1617	250 OHM .5W. 10 %	5	N-2914	4" P.M. SPEAKER
R12	N-1614	50 OHM .5W. 20 %	6	N-2952	OUTPUT TRANSFORMER
R13	N-1618	80 OHM 2 W. 10 %	E	N-2649	END I.F. TRIMMING COND.
C1	N-1344	.01 MFD. 400 V.	N-2875	N-2094	2 GANG CONDENSER
C2	N-1345	.05 MFD. 200 V.	N-2877	N-2094	MOTOR ON-OFF SWITCH
C3	N-1345	.05 MFD. 200 V.	N-2877	N-2877	RADIO-PHONO SWITCH
C4	N-1374	.0001 MFD. MICA	N-2821	N-2821	PHONO MOTOR & TURNABLE
C5	N-1344	.0001 MFD. 400 V.	N-2832	N-2832	CRYSTAL PICK-UP
C6	N-1447	.0005 MFD. 400V.			
C7	N-1344	.01 MFD. 400V.			
C8	N-1376	.02 MFD. 400V.			

CHASSIS KE, TB, TF, TJF, TNF
Phonograph Data

SONORA RADIO & TELEV., CORP.

PHONOGRAPH OPERATION**TJF, TNF ONLY**

(b) Slide the "Radio-Phono" switch to the phono position.

(c) Place the selected record upon the turntable and press the motor starting switch.

This will place the record in motion.

TB ONLY

MOTOR STARTING SWITCH AND AUTOMATIC STOP—The motor starting switch is operated by the lever which comes from underneath the turntable at the right. Pressing the lever to the rear starts the motor. The arm projecting above the turntable to the rear and to the right of the turntable is the automatic stop switch. The automatic stop switch is adjustable and should be adjusted to stop the motor when the pick-up needle travels the last record groove (nearest the center). This can be done by moving the release arm to a position where it just touches the side of the pick-up arm when the needle is in the last groove and with the motor running.

TURNTABLE — Before attempting to operate the phonograph, loosen the three screws which hold the motor in place about two full turns to float the motor free in the rubber mountings. Place the turntable on the spindle and apply a slight pressure to the turntable and it will snap into the correct position. Be certain that the cabinet rests squarely on a flat surface so that the turntable is level and rotates in a true horizontal plane.

KE, TJF, TNF ONLY

MOTOR SWITCH. (Small Button located on top of cabinet underneath cover)—The radio set must first be turned on before this switch will operate. Push the switch once to turn on the motor. Push the switch again to turn off the motor.

TURNTABLE—Gently place the turntable on the motor spindle and carefully place the rubber tired drive wheel inside the turntable flange. **DO NOT FORCE**

TURNTABLE OVER DRIVE WHEEL. Be certain that the cabinet rests squarely on a flat surface so that the turntable is level and rotates in a true horizontal plane.

ALL TYPES

PICKUP—The pickup is the new crystal type. To insert a needle, raise the pickup arm to a vertical position, loosen the needle holder screw on the front, insert a needle to its full depth, tighten up the needle holder screw and lower pickup arm to its non-playing position outside the record and slip into the pick-up rest holder. When commencing to play, remove pickup from holder, lift and place gently the point of the needle on the smooth outer rim of the record and slide into the first groove of the record.

NOTE: In case a hum comes from the speaker when your hand is on the pick-up, reverse the power plug in the power outlet receptacle.

PLAYING RECORDS

(a) Turn on the volume control and "on-off" switch on the receiver.

FOR (b), (c) SEE BELOW

(d) Lift pickup and lower the needle point gently to the smooth outer rim of the record and slide into the first groove of the record.

(e) Adjust volume to proper level by rotation of the volume control knob. Adjust tone control for best reproduction. If record and needle scratch noise is objectionable the tone control may be used to subdue or eliminate by adjustment of the tone to the left, the position that favors "Bass" response. After the selection is completed, lift the pickup, swing the arm to the right beyond the edge of the record and lower and affix to the arm rest bracket.

(f) When you have finished playing, lift pickup and place in its rest position and remove record from turntable. Never leave pickup with needle resting on record or on turntable.

KE, TB, TF ONLY

(b) Turn the "Radio-Phono" switch to the phono position.

(c) Place the selected record upon the turntable and move the starting lever forward. This will place the record in motion.

TF ONLY

MOTOR. The motor is a strong mechanical type hand wound spring motor. Insert the crank in the hole at the right. When the motor is fully wound the phonograph will play two full ten-inch records before re-winding is required.

TURNTABLE. To start turntable move the brake lever forward. To stop turntable pull lever toward you. Speed may be regulated by the control arm. For correct pitch adjust this speed to 78 revolutions per minute.

WARNING: Do not forget to turn off radio set when through playing records or the battery will run down. Battery life is appreciably shortened by continuous operation over long periods of time.

RECORD HOLDER. Eight ten-inch records may be carried in the record holder in the cabinet lid. To remove record holding clamp turn it ninety degrees. Place records in lid, replace clamp, sliding it up tight against records before turning it.

SERVICE**KE, TB ONLY**

As the phonograph motor is the only moving part it is the only part of your phono-attachment that will require any attention. The motor requires oiling once every six months. Remove the turntable and apply 3 or 4 drops of Number 10 S.A.E. Oil in each of the three oil wells on the top of the motor. These oil wells are below the mounting plate and are in a straight line about one inch apart.

TF ONLY

SERVICE. The phonograph motor will require oiling once every three months. Apply 3 or 4 drops of Number 10 S. A. E. oil to the turntable bearings, to the bearings at each end of the governor shaft, to the felt pad on the governor brake, and to the gears and bearings on the gear shafts.


TJF, TNF ONLY

The motor requires oiling once every year.

Remove the turntable and detach the motor by removing the 3 wood screws. Apply 2 or 3 drops of Number 10 S.A.E. Oil in each of the felt wicks around the bearings.

SONORA RADIO & TELEV. CORP.

MODEL KU-9, Ch. KU
Schematic, Socket
Alignment, Trimmers


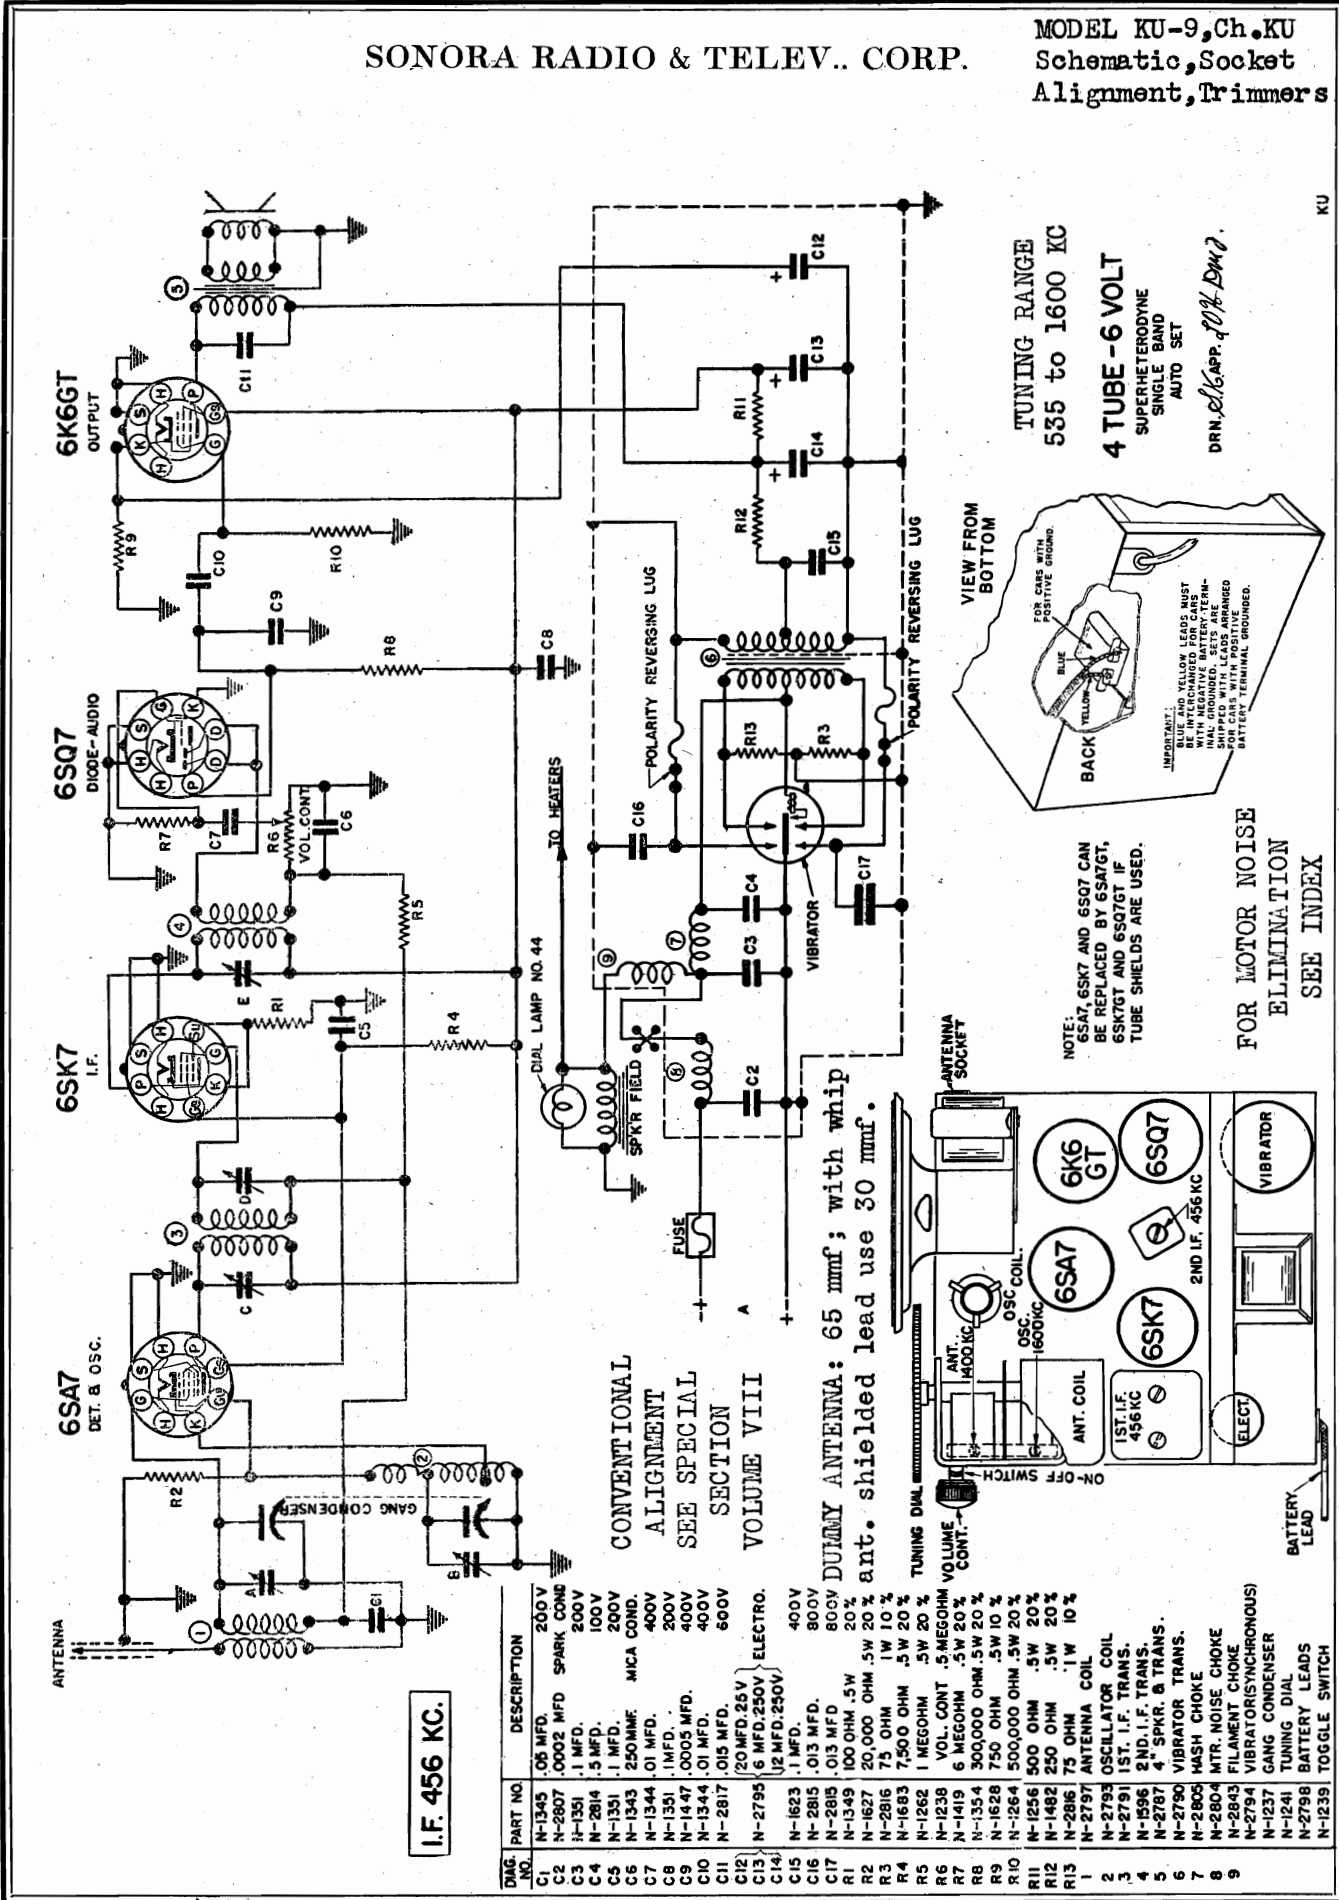


I.F. 456 KC.

DIAG. NO.	PART NO.	DESCRIPTION
C1	N-1345	.05 MFD. 200V
C2	N-2807	.0002 MFD SPARK COND
C3	N-1351	.1 MFD. 200V
C4	N-2814	.5 MFD. 100V
C5	N-1351	.1 MFD. 200V
C6	N-1343	250 MMF. MICA COND.
C7	N-1344	.01 MFD. 400V
C8	N-1351	.1 MFD. 200V
C9	N-1447	.0005 MFD. 400V
C10	N-1344	.01 MFD. 400V
C11	N-2817	.015 MFD. 600V
C12	N-2795	20 MFD. 25V ELECTRO.
C13	N-1264	6 MFD. 250V
C14	N-1264	12 MFD. 250V
C15	N-1623	.1 MFD.
C16	N-2815	.013 MFD. 800V
C17	N-2815	.013 MFD. 800V
R1	N-1349	100 OHM .5W 20%
R2	N-1627	20,000 OHM .5W 20%
R3	N-2816	75 OHM 1W 10%
R4	N-1683	7,500 OHM .5W 20%
R5	N-1262	1 MEGOHM .5W 20%
R6	N-1238	VOL. CONT .5 MEGOHM
R7	N-1419	6 MEGOHM .5W 20%
R8	N-1354	300,000 OHM .5W 20%
R9	N-1628	750 OHM .5W 10%
R10	N-1264	500,000 OHM .5W 20%
R11	N-1256	500 OHM .5W 20%
R12	N-1482	250 OHM .5W 20%
R13	N-2816	75 OHM .1W 10%
1	N-2797	ANTENNA COIL
2	N-2793	OSCILLATOR COIL
3	N-2791	1ST. I.F. TRANS.
4	N-1596	2ND. I.F. TRANS.
5	N-2787	4 SPKR. & TRANS.
6	N-2790	VIBRATOR CHoke
7	N-2805	MTR. NOISE CHOKE
8	N-2804	FILAMENT CHOKE
9	N-2794	VIBRATOR(SYNCHRONOUS)
	N-1237	GANG CONDENSER
	N-1241	BATTERY DIAL
	N-2798	BATTERY LEADS
	N-1239	TOGGLE SWITCH

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII

DUMMY ANTENNA: 65 mmf; with whip
ant. shielded lead use 30 mmf.

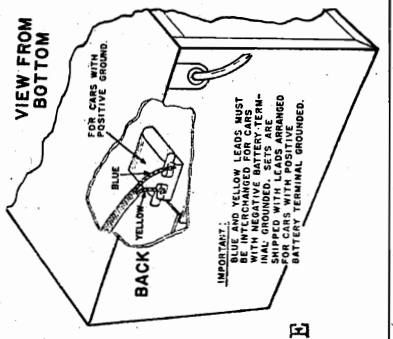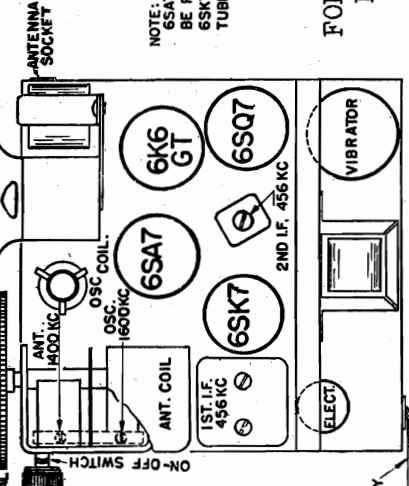

TUNING RANGE
535 to 1600 KC


4 TUBE -6 VOLT
SUPERHETERODYNE
SINGLE BAND
AUTO SET

DRN. 2/16/APP. 10/4/DM?

NOTE:
6SA7, 6SK7 AND 6SQ7 CAN
BE REPLACED BY 6SA7GT,
6SK7GT AND 6SQ7GT IF
TUBE SHIELDS ARE USED.


FOR MOTOR NOISE
ELIMINATION
SEE INDEX

CHASSIS P
 MODEL TP-108, Ch. TP SONORA RADIO & TELEV., CORP.
 Schematics, Socket Trimmers

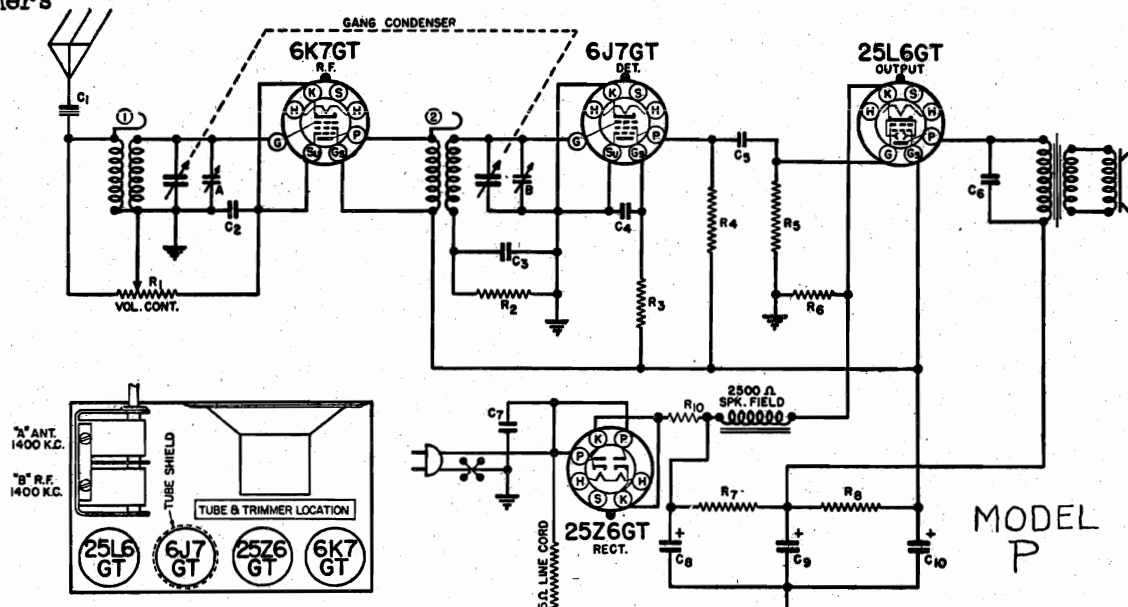

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	N-1344	.01 MFD. 400 V.	R1	V-23	25,000 OHM VOL.
C2	N-1345	.05 MFD. 200 V.	R2	N-1418	3.5 MEG. .5 W.
C3	N-1345	.05 MFD. 200 V.	R3	N-1419	6 MEG. .5 W.
C4	N-1344	.01 MFD. 400 V.	R4	N-1262	1 MEG. .5 W.
C5	N-1344	.01 MFD. 400 V.	R5	N-1264	5 MEG. .5 W.
C6	N-1344	.01 MFD. 400 V.	R6	N-1416	125 OHM ±10% .5 W.
C7	N-1346	.05 MFD. 400 V.	R7	N-1420	125 OHM 1 W.
C8	N-1344	.01 MFD. 150WV.	R8	N-1417	3,000 OHM .5 W.
C9	C-233	8 MFD. 150WV.	R9	N-1415	30 OHM 1.0 W.
C10	S-300	6 MFD. 150WV.	R10	N-1251	25 OHM 1 W.
	G-25	GANG CONDENSER	I	L-110	ANTENNA COIL
			2	L-111	R.F. COIL

OPERATES ON 110-120 V., 50-60~ AC or DC
 DO NOT CONNECT TO EXTERNAL GROUND.

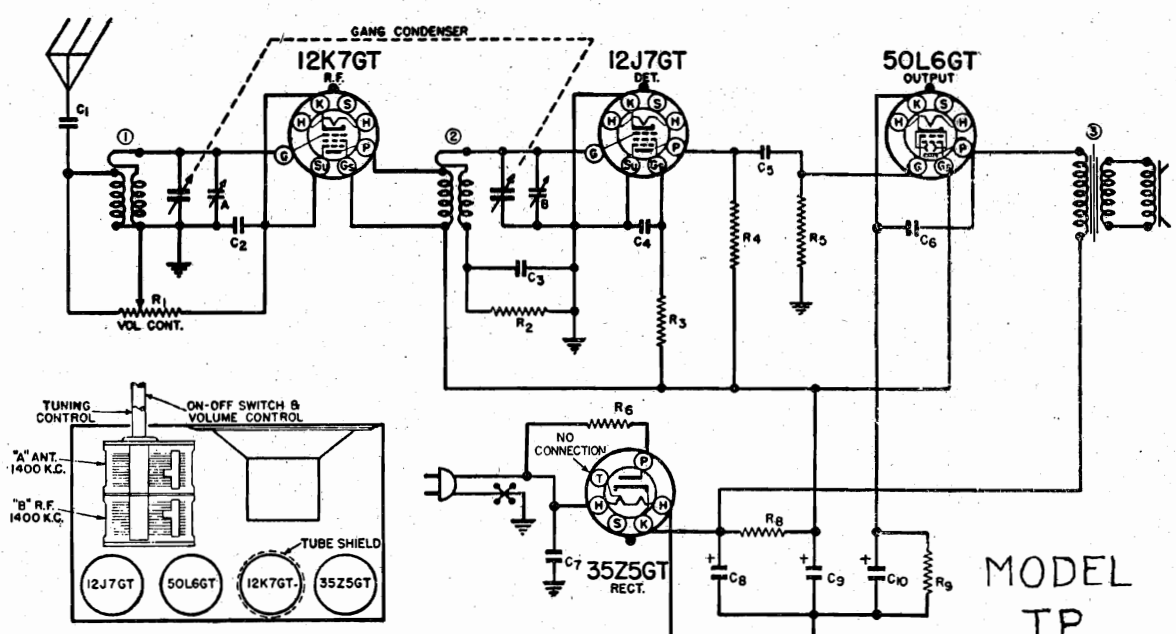


DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	N-1344	.01 MFD. 400 V.	R1	N-1537	25,000 OHM VOL.
C2	N-1345	.05 MFD. 200 V.	R2	N-1418	3.5 MEG. 20% .5 W.
C3	N-1345	.05 MFD. 200 V.	R3	N-1835	6 MEG. 20% .5 W.
C4	N-1344	.01 MFD. 400 V.	R4	N-1262	1 MEG. 20% .5 W.
C5	N-1344	.01 MFD. 400 V.	R5	N-1264	5 MEG. 20% .5 W.
C6	N-1344	.01 MFD. 400 V.	R6	N-1614	50 OHM 20% .5 W.
C7	N-1346	.05 MFD. 400 V.	R7	N-1618	80 OHM 10% 2 W.
C8	N-1850	25 MFD. 150V.	R8	N-1417	3,000 OHM 20% .5 W.
C9	N-1850	10 MFD. 150V. ELECT.	R9	N-1718	250 OHM 10% .5 W.
C10	N-1850	20 MFD. 25 V.	R10	N-1790	ANTENNA COIL
	N-1401	GANG CONDENSER	2	N-1791	R.F. COIL
	N-1847		3	N-2047	SPEAKER & TRANS.

OPERATES ON 110-120V, 50-60~ AC or DC
 DO NOT CONNECT TO EXTERNAL GROUND

SONORA RADIO & TELEV., CORP.

CHASSIS PL
Schematic, Socket
Trimmers, Alignment

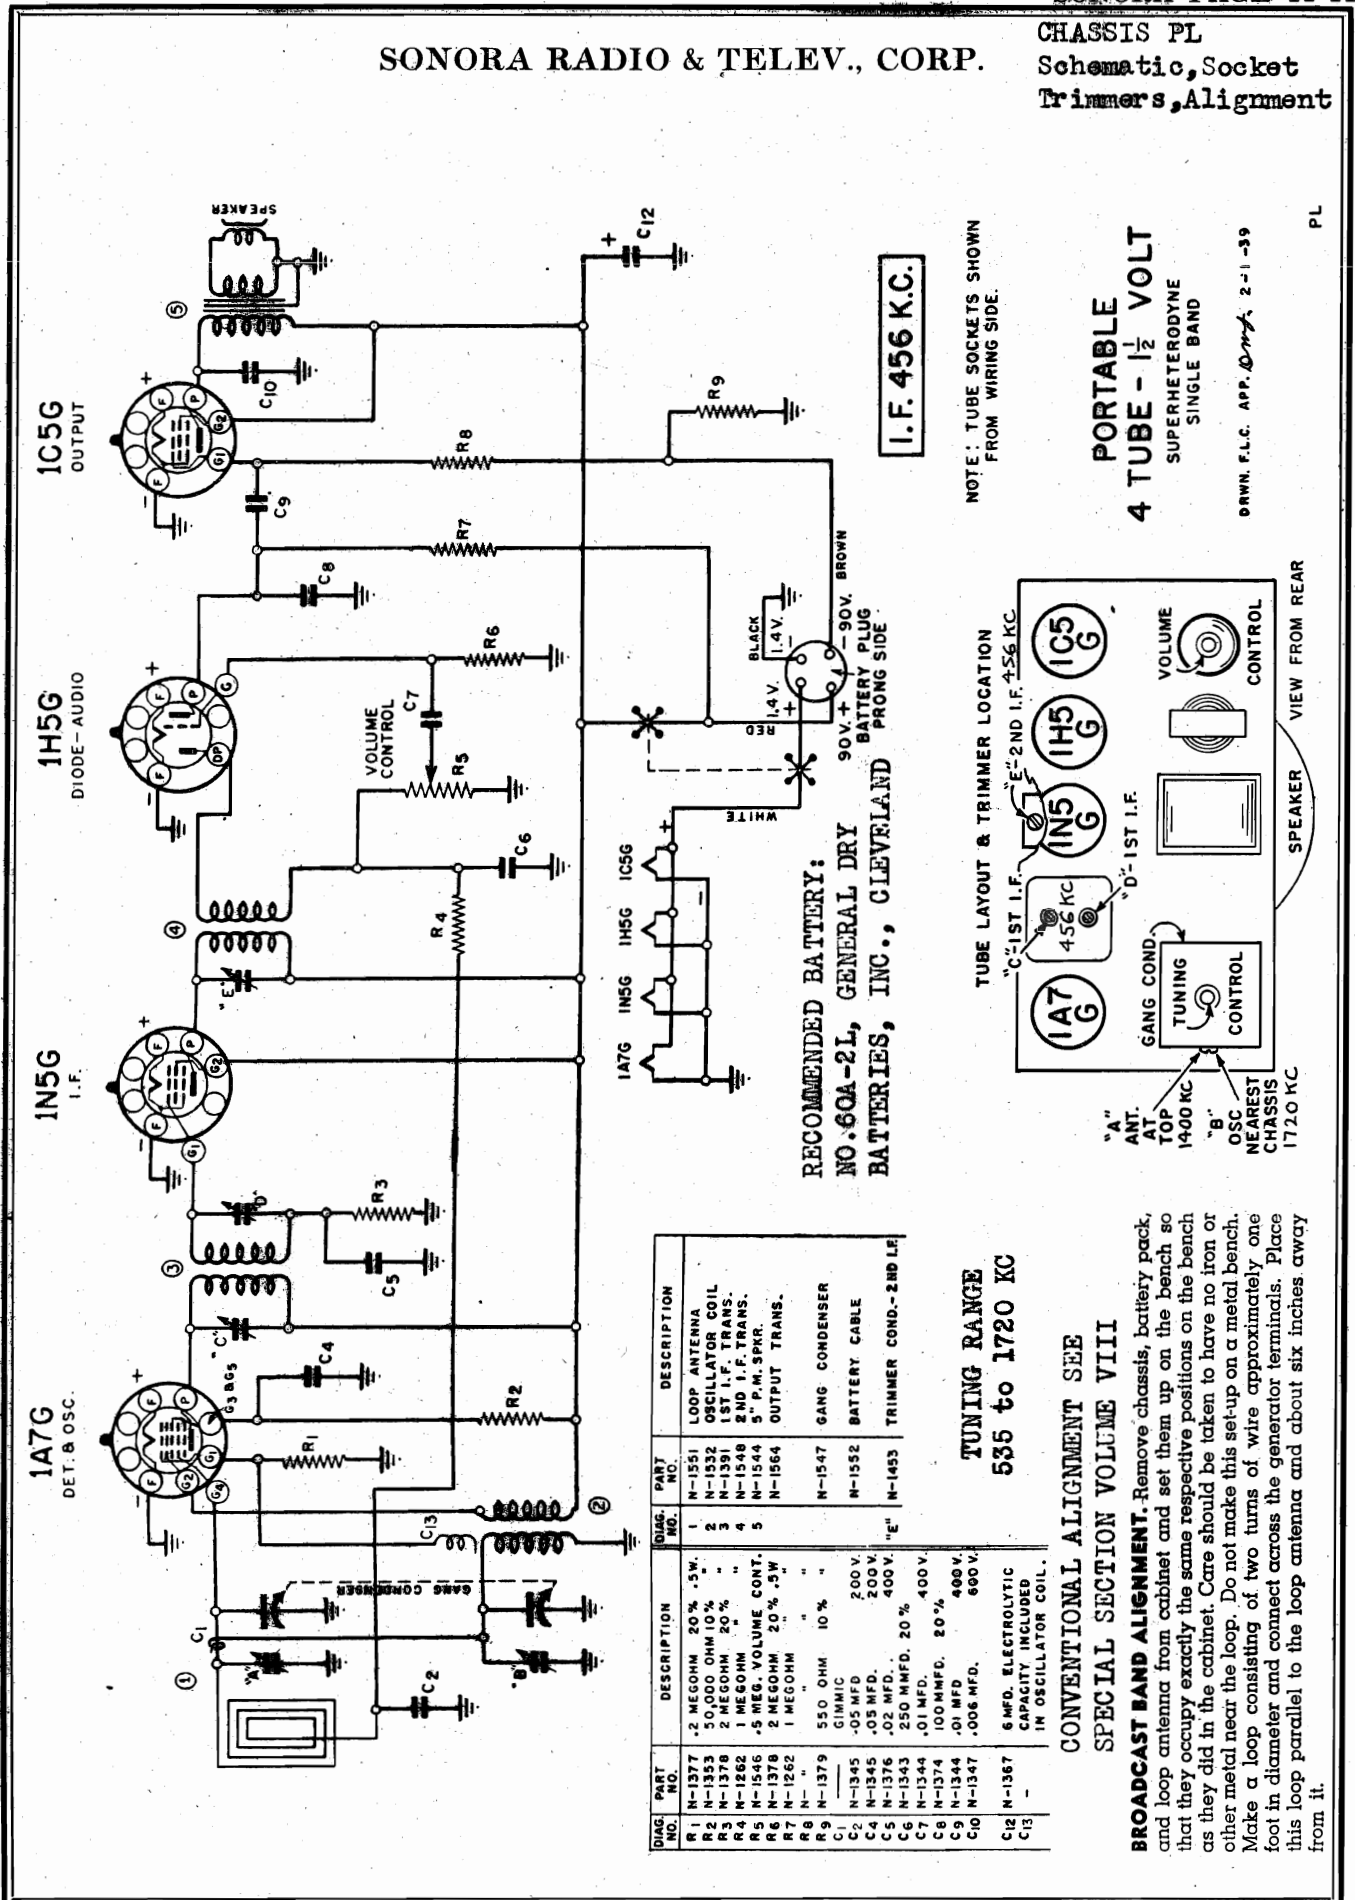

I.F. 456 K.C.


NOTE: TUBE SOCKETS SHOWN FROM WIRING SIDE.

PORTABLE
4 TUBE - 1 1/2 VOLT
SUPERHETERODYNE
SINGLE BAND

DRWN. F.L.C. APP. 10/27/35 2-1-39

PL

RECOMMENDED BATTERY:
NO. 60A-2L, GENERAL DRY
BATTERIES, INC., CLEVELAND

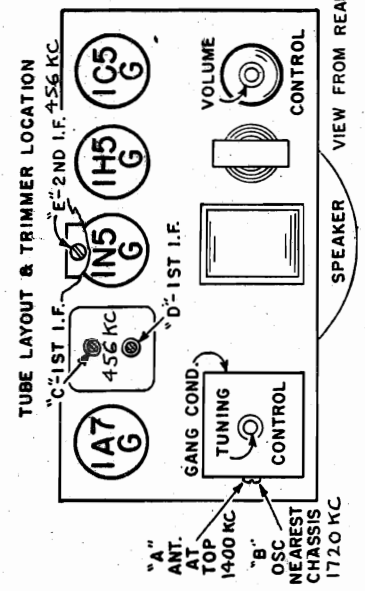

DIAG. NO.	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
R1	N-1377	2 MEGOHM 20% .5W.	N-1551	LOOP ANTENNA
R2	N-1353	50,000 OHM 10% "	N-1552	OSCILLATOR COIL
R3	N-1358	1 MEGOHM 20% "	N-1553	1ST I.F. TRANS.
R4	N-1262	1 MEGOHM 20% "	N-1548	2ND I.F. TRANS.
R5	N-1546	.5 MEG. VOLUME CONT.	N-1544	5 P.M. SPAR.
R6	N-1378	2 MEGOHM 20% .5W	N-1564	OUTPUT TRANS.
R7	N-1262	1 MEGOHM "		
R8	N-1379	550 OHM 10% "	N-1547	GANG CONDENSER
R9	N-1345	GIMMICK	N-1552	BATTERY CABLE
C1	N-1345	.05 MFD. 200V.	N-1453	TRIMMER COND.-2ND I.F.
C2	N-1345	.05 MFD. 200V.		
C3	N-1376	.03 MFD. 200V.		
C4	N-1376	.02 MFD. 400V.		
C5	N-1343	250 MMFD. 20% "		
C6	N-1344	.01 MFD. 400V.		
C7	N-1374	100 MMFD. 20% "		
C8	N-1344	.01 MFD. 400V.		
C9	N-1344	.01 MFD. 400V.		
C10	N-1347	.006 MFD. 600V.		
C12	N-1367	5 MFD. ELECTROLYTIC CAPACITY INCLUDED IN OSCILLATOR COIL.		
C13	-			


TUNING RANGE
535 to 1720 KC

SPECIAL SECTION ALIGNMENT SEE
CONVENTIONAL ALIGNMENT VOLUME VIII

BROADCAST BAND ALIGNMENT. Remove chassis, battery pack, and loop antenna from cabinet and set them up on the bench so that they occupy exactly the same respective positions on the bench as they did in the cabinet. Care should be taken to have no iron or other metal near the loop. Do not make this set-up on a metal bench. Make a loop consisting of two turns of wire approximately one foot in diameter and connect across the generator terminals. Place this loop parallel to the loop antenna and about six inches away from it.

SONORA RADIO & TELEV., CORP.

CHASSIS SL
Schematic, Socket
Alignment, Trimmers

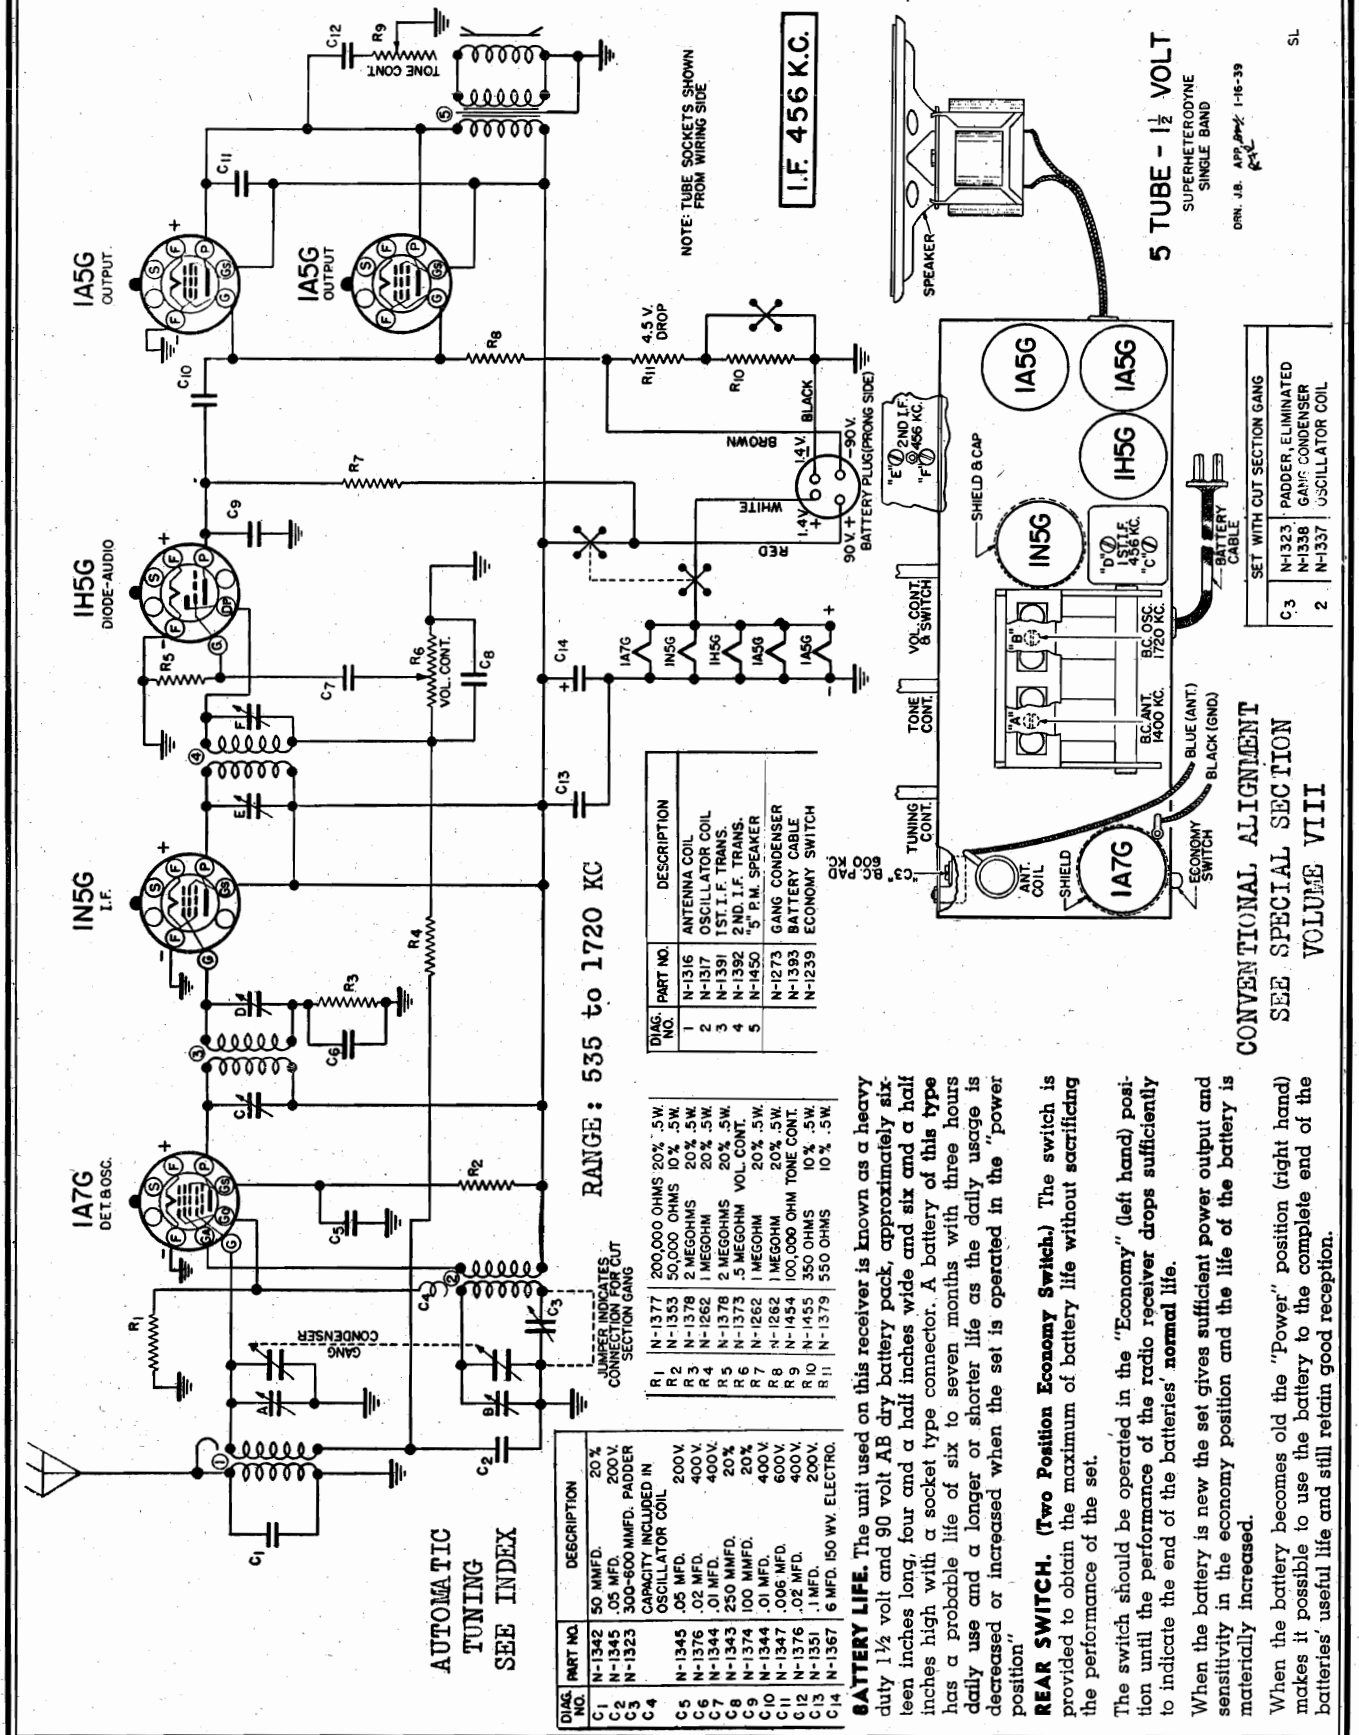

DIAG. NO.	PART NO.	DESCRIPTION
C1	N-1342	.05 MFD. 20%
C2	N-1345	200V. 10%
C3	N-1323	300-600 MMFD. PADDER
C4		CAPACITY INCLUDED IN OSCILLATOR COIL
C5	N-1345	.05 MFD. 200V.
C6	N-1376	.02 MFD. 400V.
C7	N-1344	.01 MFD. 400V.
C8	N-1343	250 MMFD. 20%
C9	N-1374	100 MMFD. 20%
C10	N-1344	.01 MFD. 400V.
C11	N-1347	.006 MFD. 600V.
C12	N-1376	.02 MFD. 400V.
C13	N-1351	1 MFD. 200V.
C14	N-1367	6 MFD. 150 WV. ELECTRO.

DIAG. NO.	PART NO.	DESCRIPTION
1	N-1316	ANTENNA COIL
2	N-1317	OSCILLATOR COIL
3	N-1391	1ST I.F. TRANS.
4	N-1392	2ND I.F. TRANS.
5	N-1450	5" P.M. SPEAKER
	N-1273	GANG CONDENSER
	N-1393	BATTERY CABLE
	N-1239	ECONOMY SWITCH

BATTERY LIFE. The unit used on this receiver is known as a heavy duty 1 1/2 volt and 90 volt AB dry battery pack, approximately six inches long, four and a half inches wide and six and a half inches high with a socket type connector. A battery of this type has a probable life of six to seven months with three hours daily use and a longer or shorter life as the daily usage is decreased or increased when the set is operated in the "power position".

REAR SWITCH. (Two Position Economy Switch.) The switch is provided to obtain the maximum of battery life without sacrificing the performance of the set.

The switch should be operated in the "Economy" (left hand) position until the performance of the radio receiver drops sufficiently to indicate the end of the batteries' normal life.

When the battery is new the set gives sufficient power output and sensitivity in the economy position and the life of the battery is materially increased.


When the battery becomes old the "Power" position (right hand) makes it possible to use the battery to the complete end of the batteries' useful life and still retain good reception.

SET WITH CUT SECTION GANG	
C3	N-1323 PADDER, ELIMINATED
2	N-1338 GANG CONDENSER
	N-1337 OSCILLATOR COIL

CHASSIS SM
Schematic, Socket
Alignment, Trimmers, Tuner

SONORA RADIO & TELEV. CORP.

CHASSIS QA, SL, SM, TC, TD
TL, TM, TR, TT, TW, TWU, TX
TY, TYI
Automatic Tuner Data

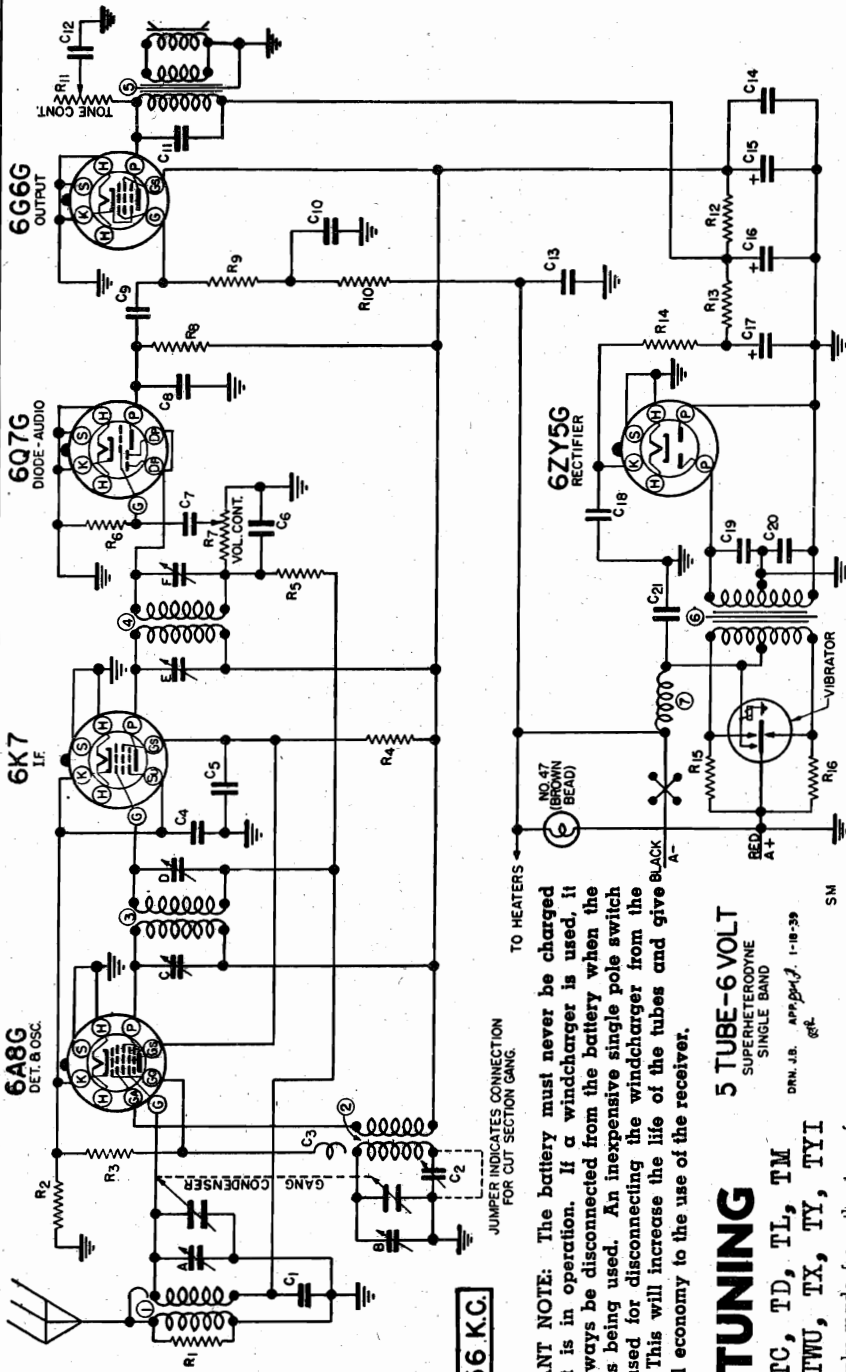


I.F. 456 K.C.

IMPORTANT NOTE: The battery must never be charged while set is in operation. If a windcharger is used, it should always be disconnected from the battery when the receiver is being used. An inexpensive single pole switch can be used for disconnecting the windcharger from the battery. This will increase the life of the tubes and give additional economy to the use of the receiver.

5 TUBE-6 VOLT
SUPERHETERODYNE
SINGLE BAND
DRN. J.R. APP. 8/4/34 I-18-39

CONVENTIONAL ALIGNMENT SEE
SPECIAL SECTION VOLUME VIII

DIAG. NO.	PART NO.	DESCRIPTION
R 8	N-1261	250,000 OHMS 20% .5W.
R 9	N-1264	.5 MEGOHMS 20% .5W.
R 10	N-1260	50,000 OHMS 20% .5W.
R 11	N-1454	100,000 OHM TONE CONT.
R 12	N-1256	500 OHMS 20% .5W.
R 13	N-1482	250 OHMS 20% .5W.
R 14	N-1482	250 OHMS 20% .5W.
R 15	N-1498	50 OHMS 20% 1W.
R 16	N-1498	50 OHMS 20% 1W.
1	N-1461	ANTENNA COIL
2	N-1317	OSCILLATOR COIL
3	N-1318	1ST. I.F. TRANS.
4	N-1319	2ND. I.F. TRANS.
5	N-1472	5" P.M. SPEAKER & TRANS.
6	N-1476	POWER TRANS.
7	N-1477	"A" CHOKE
	N-1273	GANG CONDENSER
	N-1485	BATTERY CABLE
	N-1431	VIBRATOR (NON-SYNCHRO.)

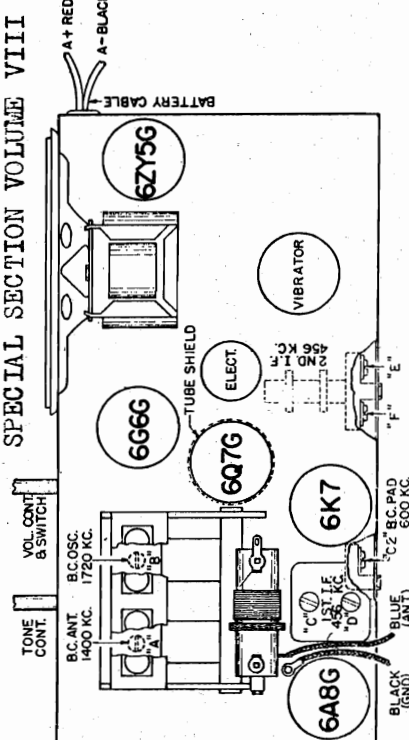

AUTOMATIC TUNING

For Chassis QA, SL, SM, TC, TD, TL, TM, TR, TT, TW, TWU, TX, TY, TYI

ADJUSTMENT. All adjustments are simply made from the top of the cabinet without the use of tools since the push-button knobs serve this purpose.

To make adjustments, turn each knob to the left about 1 complete turn. The knob is knurled to provide a positive grip for this purpose. With the knob turned free, tune to any desired station with the manual tuning control. Depress the push button knob as far as possible and turn to the right to tighten adjustment. Meanwhile, hold the manual tuning control in position to the station tuned. Be sure the push button knob is held down in position while being tightened.

After the stations are adjusted it is advisable to check each button to assure sufficient tightening.

To assure accurate adjustment, the volume control should be set at a moderate level and the station tuned in slowly to a point of maximum volume and clarity.


It is not necessary to follow any particular sequence of stations since each button is adjustable to any station.

With each button definitely set and securely tightened to the selected stations, the tuner is ready for operation.

DIAG. NO.	PART NO.	DESCRIPTION
C 1	N-1345	.05 MFD. 200V.
C 2	N-1323	300-600 MMFD. PADDER CAPACITY INCLUDED IN OSCILLATOR COIL
C 3	N-1479	.25 MFD. 200V.
C 4	N-1351	.1 MFD. 20%
C 5	N-1374	100 MMFD. 20%
C 6	N-1347	.006 MFD. 600V.
C 7	N-1343	250 MMFD. 20%
C 8	N-1344	.01 MFD. 400V.
C 9	N-1345	.05 MFD. 200V.
C 10	N-1347	.006 MFD. 600V.
C 11	N-1376	.02 MFD. 400V.
C 12	N-1471	.5 MFD. 50 V.
C 13	N-1351	.1 MFD. 200V.
C 14	N-1468	20 MFD. 150V. ELECTRO. 10 MFD. 250V.
C 15	N-1478	.01 MFD. 600V.
C 16	N-1480	.01 MFD. (OIL) 1000V.
C 17	N-1480	.01 MFD. (OIL) 1000V.
C 18	N-1471	.5 MFD. 50 V.
C 19	N-1471	.5 MFD. 50 V.
C 20	N-1471	.5 MFD. 50 V.
C 21	N-1471	.5 MFD. 50 V.
R 1	N-1259	15,000 OHMS 20% .5W.
R 2	N-1473	200 OHMS 10% .5W.
R 3	N-1260	50,000 OHMS 20% .5W.
R 4	N-1474	25,000 OHMS 20% .5W.
R 5	N-1378	2 MEGOHMS 20% .5W.
R 6	N-1263	10 MEGOHMS 20% .5W.
R 7	N-1320	1 MEGOHM VOL. CONT. SET WITH CUT SECTION GANG
C 2	N-1323	PADDER, ELIMINATED
2	N-1337	GANG CONDENSER OSCILLATOR COIL

SONORA RADIO & TELEV., CORP. CHASSIS TB
Schematic, Socket, Trimmers Alignment

FOR PHONO DATA
SEE INDEX

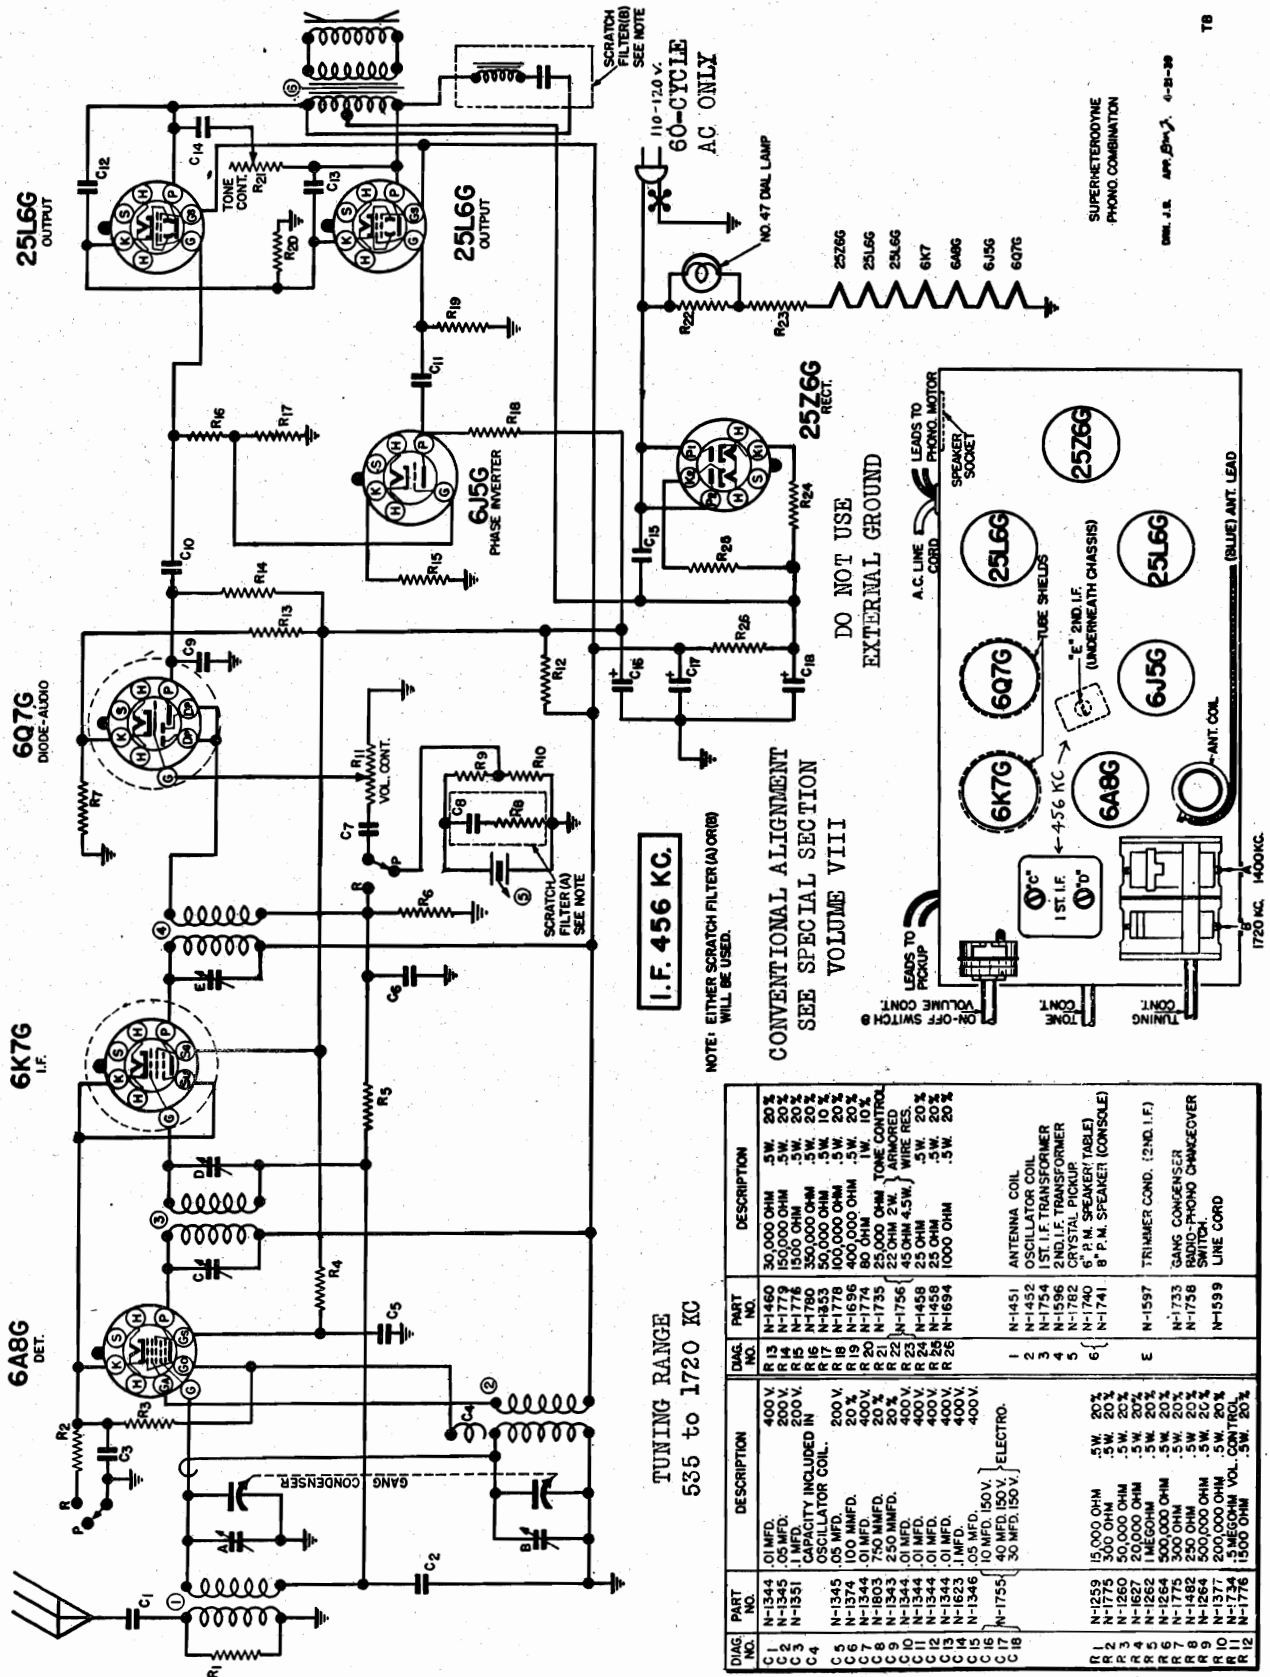


I.F. 456 KC.

NOTE: EITHER SCRATCH FILTER (A OR B) WILL BE USED.

CONVENTIONAL ALIGNMENT
SEE SPECIAL ALIGNMENT
VOLUME VIII

DO NOT USE
EXTERNAL GROUND

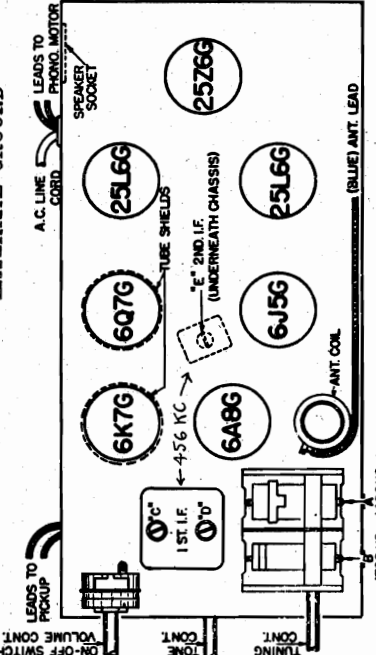


TUNING RANGE
535 to 1720 KC

DIAG. NO.	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
C1	N-1344	.01 MFD.	N-1460	30,000 OHM .5W. 20%
C2	N-1345	.05 MFD.	N-1779	150,000 OHM .5W. 20%
C3	N-1351	1 MFD.	N-1776	150,000 OHM .5W. 20%
C4	N-1351	1 MFD.	N-1776	150,000 OHM .5W. 20%
C5	N-1345	.05 MFD.	N-1779	150,000 OHM .5W. 20%
C6	N-1345	.05 MFD.	N-1779	150,000 OHM .5W. 20%
C7	N-1344	.01 MFD.	N-1774	80 OHM .1W. 10%
C8	N-1344	.01 MFD.	N-1774	80 OHM .1W. 10%
C9	N-1343	750 MMFD.	N-1756	25 OHM 2W. ARMORED
C10	N-1343	750 MMFD.	N-1458	45 OHM 4.5W. WIRE RES.
C11	N-1344	.01 MFD.	N-1489	25 OHM .5W. 20%
C12	N-1344	.01 MFD.	N-1489	25 OHM .5W. 20%
C13	N-1344	.01 MFD.	N-1694	1000 OHM .5W. 20%
C14	N-1623	.1 MFD.		
C15	N-1346	.05 MFD. 150V.		
C16	N-1346	.05 MFD. 150V.		
C17	N-755	30 MF. 150V. ELECTRO.		
C18	N-755	30 MF. 150V. ELECTRO.		
R1	N-1259	15,000 OHM .5W. 20%	N-1451	ANTENNA COIL
R2	N-1775	300 OHM .5W. 20%	N-1452	OSCILLATOR COIL
R3	N-1260	50,000 OHM .5W. 20%	N-1754	1ST. I.F. TRANSFORMER
R4	N-1627	20,000 OHM .5W. 20%	N-1596	2ND. I.F. TRANSFORMER
R5	N-1262	1 MEGOHM .5W. 20%	N-1782	CRYSTAL PICKUP
R6	N-1264	500,000 OHM .5W. 20%	N-1740	6" P.M. SPEAKER (TABLE)
R7	N-1482	250 OHM .5W. 20%	N-1741	8" P.M. SPEAKER (CONSOLE)
R8	N-1264	500,000 OHM .5W. 20%		
R9	N-1377	200,000 OHM .5W. 20%		
R10	N-1774	1500 OHM .5W. 20%		
R11	N-1774	1500 OHM .5W. 20%		
R12	N-1774	1500 OHM .5W. 20%		

MODEL TF-39, Ch. TF
Schematic, Socket
Trimmers, Alignment

SONORA RADIO & TELEV., CORP.

FOR PHONO. DATA
SEE INDEX

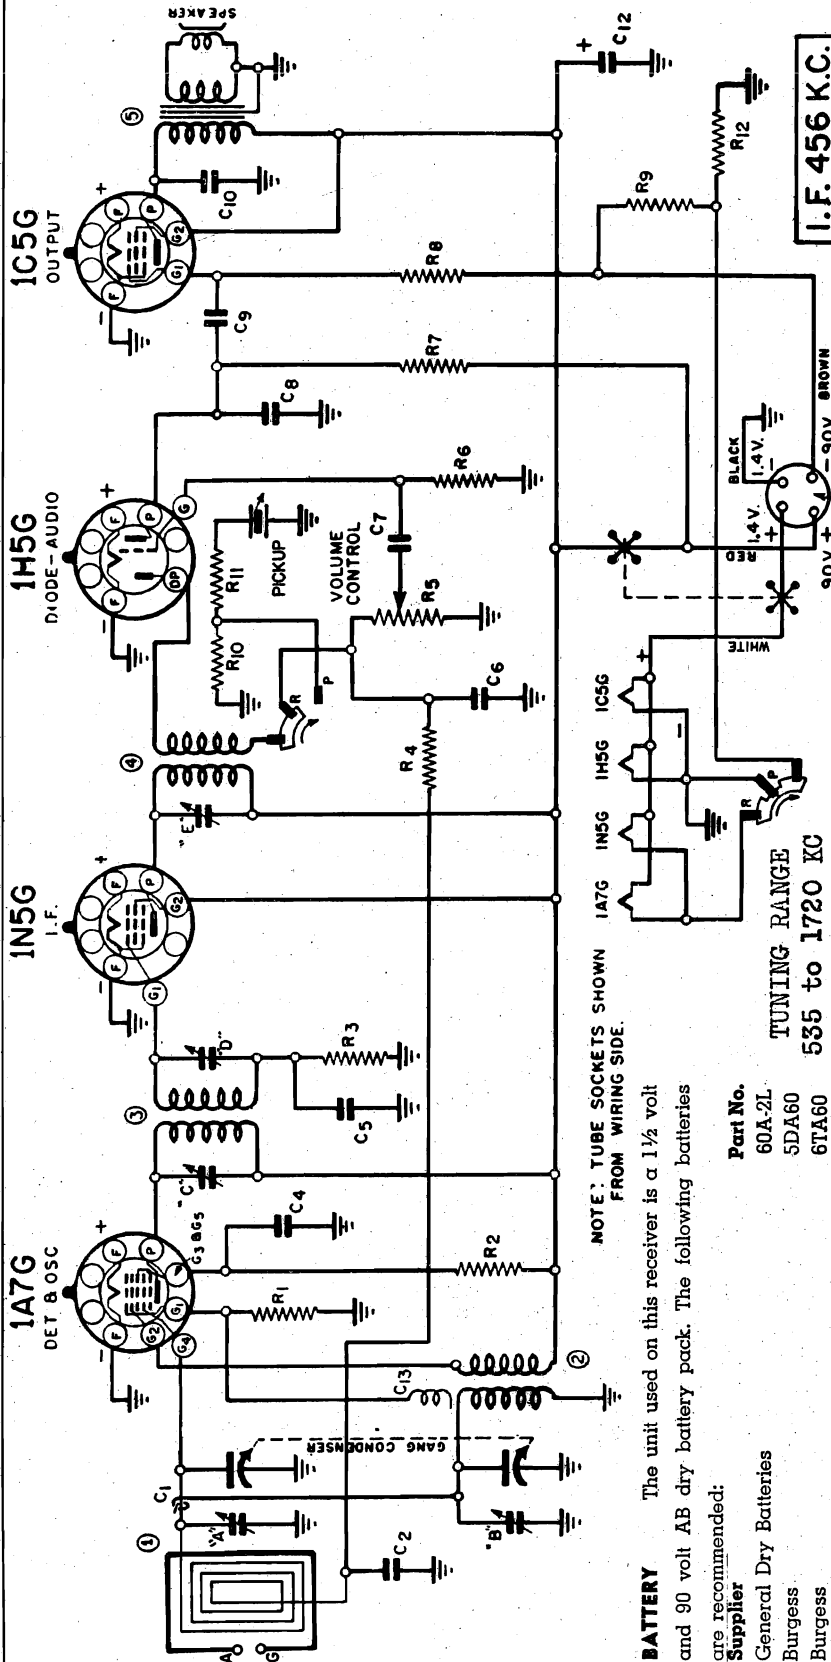

CONNECT TO GENERATOR 2-TURN LOOP APPROX. 1 FOOT IN DIAM. PLACE THIS PARALLEL TO RECEIVER LOOP, ABOUT 6 INCHES AWAY FROM IT. TUBE LAYOUT & TRIMMER LOCATION

CONVENTIONAL ALIGNMENT:
"C" - 1ST I.F. 456 KC - E - 2ND I.F. 1400 KC
"A" ANT. AT TOP OF CHASSIS NEAREST 1720 KC
"B" OSC. NEAREST 1720 KC
"D" - 1ST I.F. RADIO-PHONO SWITCH
"E" - 2ND I.F. VOLUME CONTROL

DIAG. NO.	PART NO.	DESCRIPTION
R1	N-1377	2 MEGOHM 20% .5W.
R2	N-1353	50,000 OHM 10% "
R3	N-1378	2 MEGOHM 20% "
R4	N-1262	1 MEGOHM 20% .5W.
R5	N-1738	.5 MEG. VOLUME CONT.
R6	N-1378	2 MEGOHM 20% .5W.
R7	N-1262	1 MEGOHM 20% .5W.
R8	N-1377	2 MEGOHM 20% .5W.
R9	N-1661	650 OHM 10% "
R10	N-1929	65,000 OHM 20% "
R11	N-1779	150,000 OHM 20% "
R12	N-1844	300 OHM 10% "
C1	N-1345	GIMMICK 200V
C2	N-1345	.05 MFD. 200V
C3	N-1345	.05 MFD. 400V
C4	N-1345	.05 MFD. 400V
C5	N-1345	.05 MFD. 400V
C6	N-1344	.01 MFD. 20% 400V.
C7	N-1374	100 MFD. 20% 400V.
C8	N-1374	100 MFD. 20% 400V.
C9	N-1344	.01 MFD. 400V.
C10	N-1347	.006 MFD. 600V.
C12	N-1367	6 MFD. ELECTROLYTIC CAPACITY INCLUDED IN OSCILLATOR COIL.

DIAG. PART NO.	DESCRIPTION
1	N-1804 LOOP ANTENNA
2	N-1452 OSCILLATOR COIL
3	N-1391 1ST I.F. TRANS.
4	N-1548 2ND I.F. TRANS.
5	N-1507 5" P.M. SPKR. B TRANS.
	N-1737 GANG CONDENSER
	N-1552 BATTERY CABLE
	N-1453 TRIMMER COND.-2ND I.F.
	N-1883 RADIO-PHONO SWITCH


BATTERY The unit used on this receiver is a 1 1/2 volt and 90 volt AB dry battery pack. The following batteries are recommended:
Supplier
General Dry Batteries
Burgess
Burgess

Part No.
60A-2L
5DA60
6TA60

INDIVIDUAL "A" AND "B" BATTERIES.
A hook-up harness consisting of three plugs and a socket is required. This hook-up harness is not furnished with the receiver and should be purchased when obtaining separate A and B batteries.

1 1/2 Volt A Battery 45 Volt B Battery
(2 1/2" x 2 1/2" x 4") (2 1/2" x 4 1/8" x 5")
Eveready No. 742 No. 762
Burgess No. 4FAPI No. B 30 PI
Ray-O-Vac No. P94A No. P 5303
General Dry Battery No. 4HI No. V-30-B


Use one "A" battery and two "B" batteries with the hook-up harness. Clamp down the batteries with support strap.

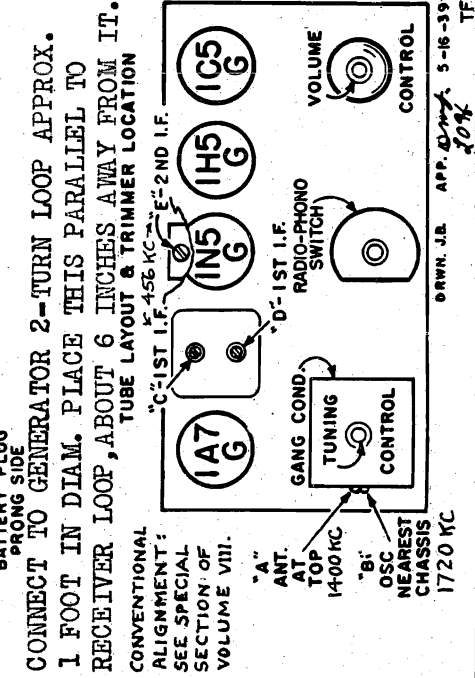

ORW. J.B. APP. 5-16-39
10%

SONORA RADIO & TELEV. CORP.

MODEL TH-46
Chassis TH, Early, Late
Schematic, Socket
Alignment, Trimmers

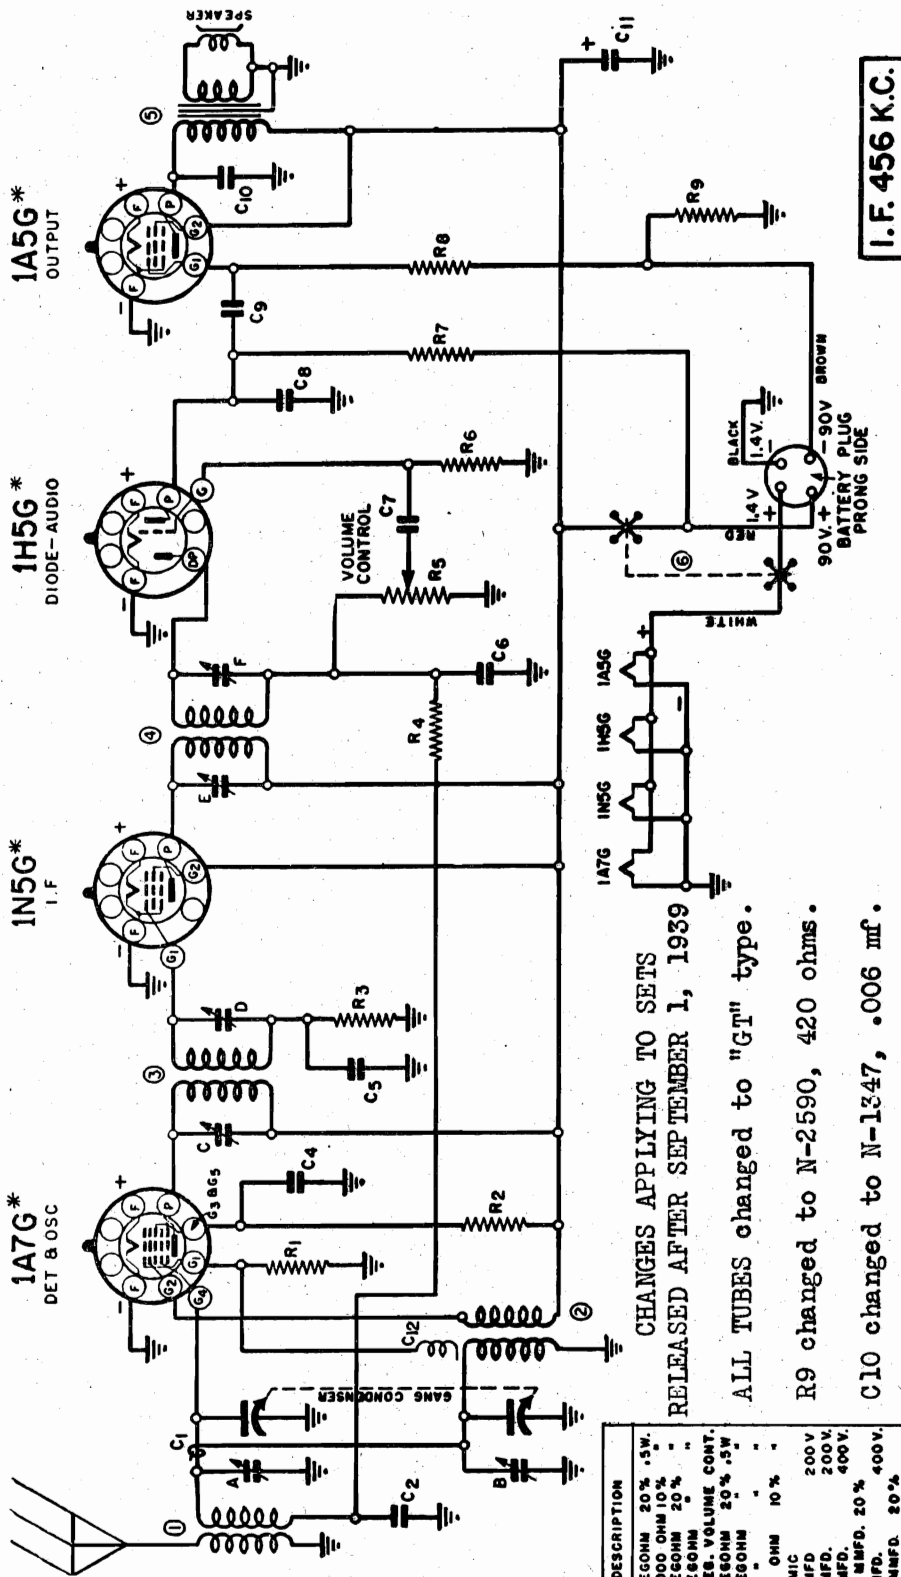

I.F. 456 K.C.

NOTE: TUBE SOCKETS SHOWN FROM WIRING SIDE.


4 TUBE - 1 1/2 VOLT SUPERHETERODYNE SINGLE BAND

DRWN. J.B. APP. *[Signature]* 5-16-39

TH

CHANGES APPLYING TO SETS RELEASED AFTER SEPTEMBER 1, 1939
ALL TUBES changed to "GT" type.
R9 changed to N-2590, 420 ohms.
C10 changed to N-1347, .006 mf.
5 changed to Part No. N-2588.

TUBE LAYOUT & TRIMMER LOCATION

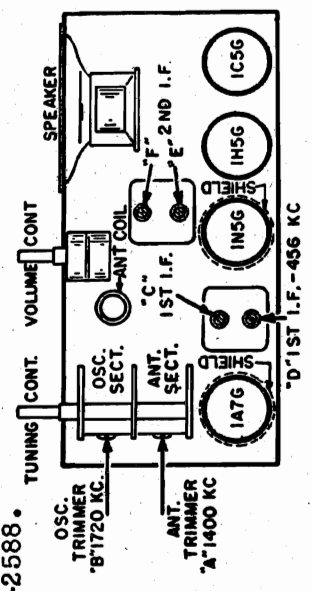

TUNING RANGE
535 to 1720 KC

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII


DIAG. NO.	PART NO.	DESCRIPTION
R1	N-1377	.2 MEGOHM 20% .5W.
R2	N-1353	50,000 OHM 10% .
R3	N-1378	2 MEGOHM 20% .
R4	N-1262	1 MEGOHM .
R5	N-2056	.5 MEG. VOLUME CONT.
R6	N-1378	2 MEGOHM 20% .5W.
R7	N-1262	1 MEGOHM .
R8	N-1378	2 MEGOHM 20% .5W.
R9	N-2064	600 OHM 10% .
C1	N-1345	GINNIC
C2	N-1345	200V
C3	N-1345	200V
C4	N-1345	.05 MFD.
C5	N-1374	.02 MFD.
C6	N-1344	250 MFD. 20% 400V.
C7	N-1374	.01 MFD.
C8	N-1374	100 MFD. 20% 400V.
C9	N-1344	.01 MFD.
C10	N-2063	.003 MFD. 400V.
C11	N-1387	5 MFD. ELECTROLYTIC CAPACITY INCLUDED
C12	-	ANTENNA COIL
1	N-1451	ANTENNA COIL
2	N-1452	OSCILLATOR COIL
3	N-1591	1ST I.F. TRANS.
4	N-1509	2ND I.F. TRANS.
5	N-1507	5" P.M. SPKR & TRANS.
6	N-2061	BATTERY SWITCH
N-1856	-	GANG CONDENSER
N-1395	-	BATTERY CABLE

* SEE "CHANGES"

SONORA RADIO & TELEV. CORP.

CHASSIS T1F
Schematic, Socket
Alignment, Trimmers

FOR PHONO.
DATA SEE
INDEX

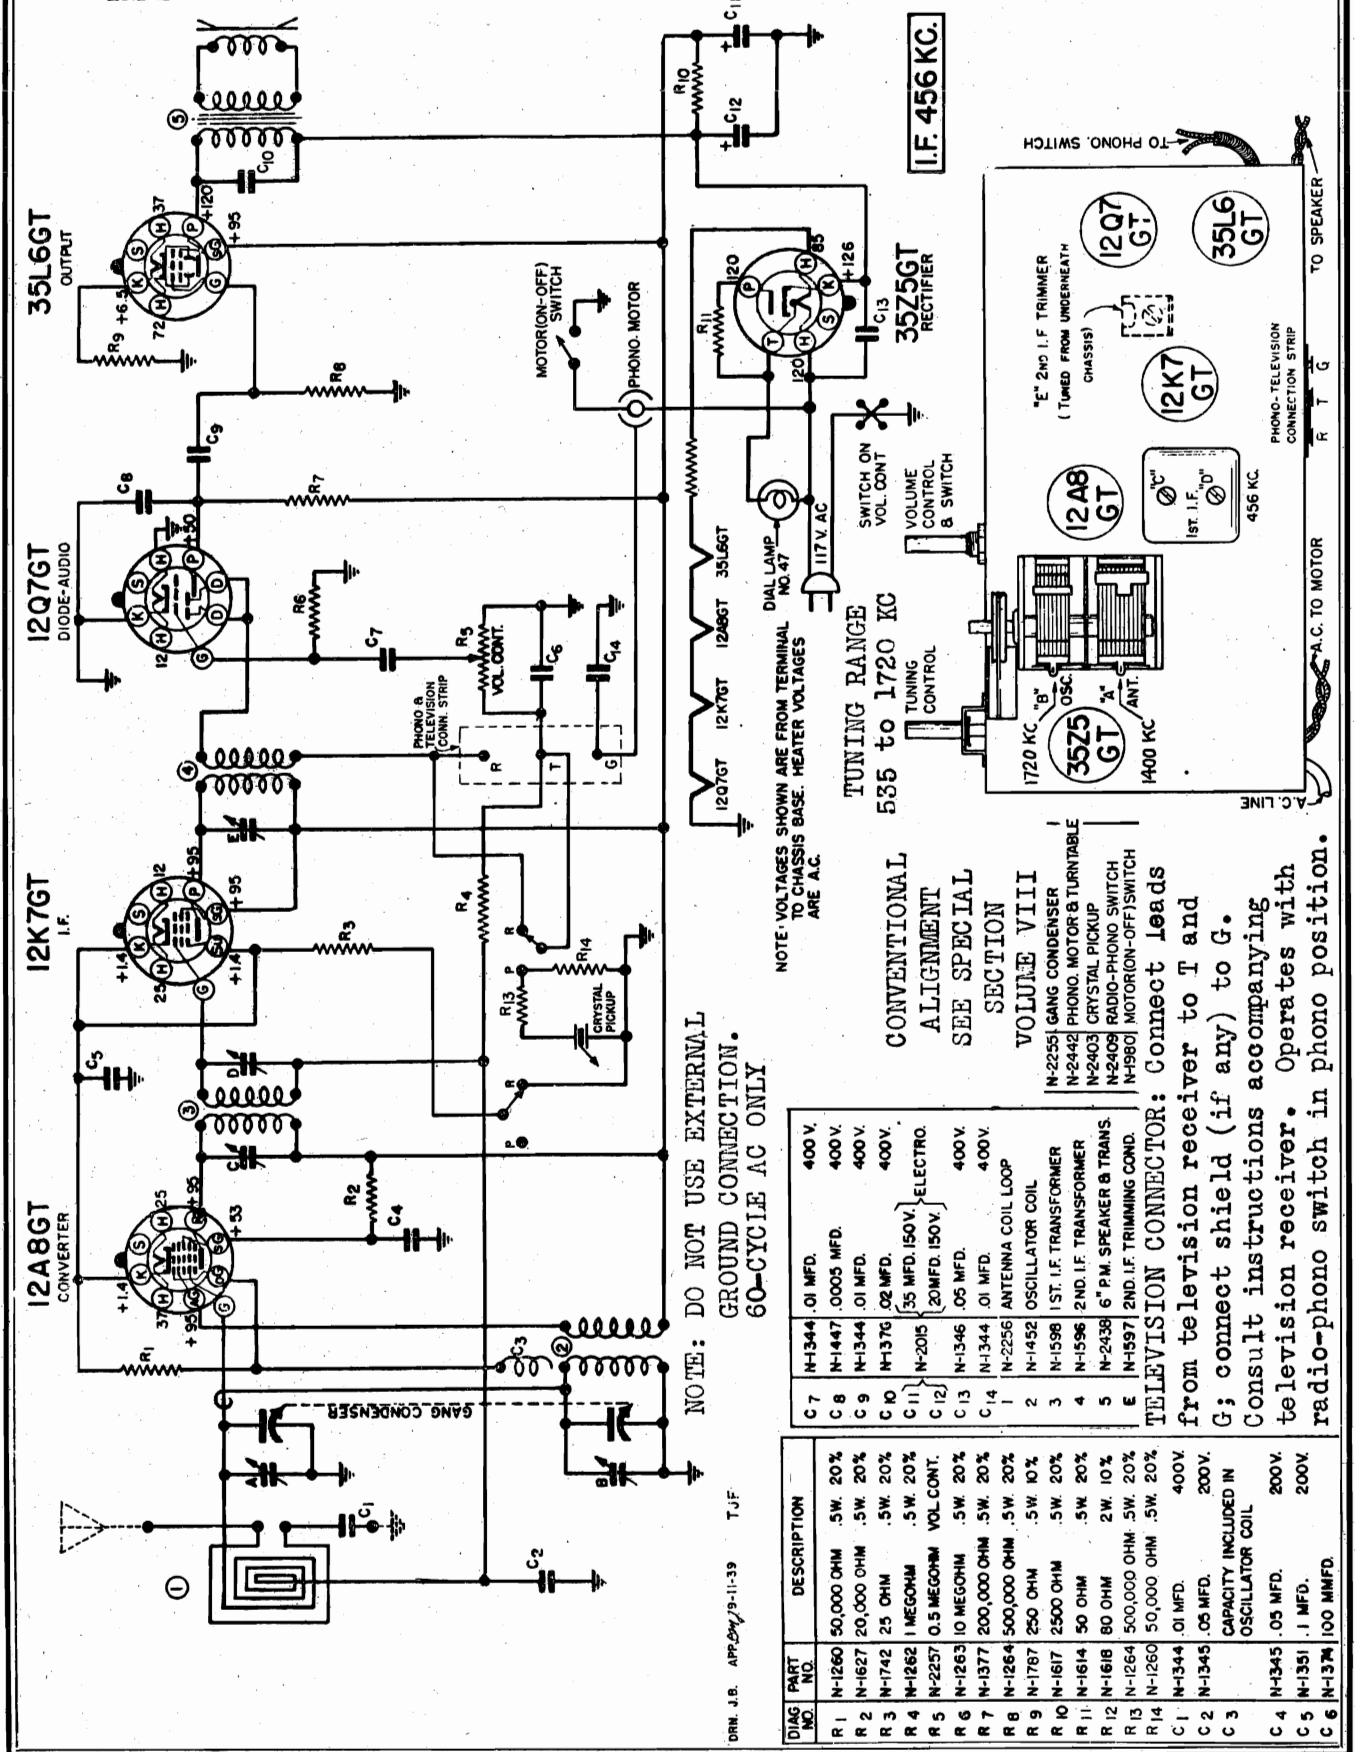

NOTE: VOLTAGES SHOWN ARE FROM TERMINAL TO CHASSIS BASE. HEATER VOLTAGES ARE A.C.

TUNING RANGE 535 to 1720 KC

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION

VOLUME VIII

N-2251 GANG CONDENSER

N-2442 PHONO MOTOR & TURNABLE

N-2403 CRYSTAL PICKUP

N-2409 RADIO-PHONO SWITCH

N-1980 MOTOR(OFF) SWITCH


TELEVISION CONNECTOR: Connect leads from television receiver to T and G; connect shield (if any) to G. Consult instructions accompanying television receiver. Operates with radio-phonograph switch in phono position.

DIAG. NO.	PART NO.	DESCRIPTION
R 1	N-1260	50,000 OHM .5W. 20%
R 2	N-1627	20,000 OHM .5W. 20%
R 3	N-1742	25 OHM .5W. 20%
R 4	N-1262	1 MEGOHM .5W. 20%
R 5	N-2257	0.5 MEGOHM VOL. CONT.
R 6	N-1263	10 MEGOHM .5W. 20%
R 7	N-1377	200,000 OHM .5W. 20%
R 8	N-1264	500,000 OHM .5W. 20%
R 9	N-1787	250 OHM .5W. 10%
R 10	N-1617	2500 OHM .5W. 20%
R 11	N-1614	50 OHM .5W. 20%
R 12	N-1618	80 OHM 2W. 10%
R 13	N-1264	500,000 OHM .5W. 20%
R 14	N-1260	50,000 OHM .5W. 20%
C 1	N-1344	.01 MFD. 400V.
C 2	N-1345	.05 MFD. 200V.
C 3		CAPACITY INCLUDED IN OSCILLATOR COIL
C 4	N-1345	.05 MFD. 200V.
C 5	N-1351	.1 MFD.
C 6	N-1374	100 MMFD.
C 7	N-1344	.01 MFD. 400V.
C 8	N-1447	.0005 MFD. 400V.
C 9	N-1344	.01 MFD. 400V.
C 10	N-1376	.02 MFD. 400V.
C 11	N-2015	35 MFD. 150V. ELECTRO.
C 12		20 MFD. 150V.
C 13	N-1346	.05 MFD. 400V.
C 14	N-1344	.01 MFD. 400V.
1	N-2256	ANTENNA COIL LOOP
2	N-1452	OSCILLATOR COIL
3	N-1598	1ST. I.F. TRANSFORMER
4	N-1596	2ND. I.F. TRANSFORMER
5	N-2438	6" P.M. SPEAKER & TRANS.
E	N-1597	2ND. I.F. TRIMMING COND.

DRN. J.B. APP. 9-11-39 T1F

MODEL TK-44, Ch. TK
 CHASSIS TKE, TPE
 Schematics, Socket
 Trimmers


SONORA RADIO & TELEV., CORP.

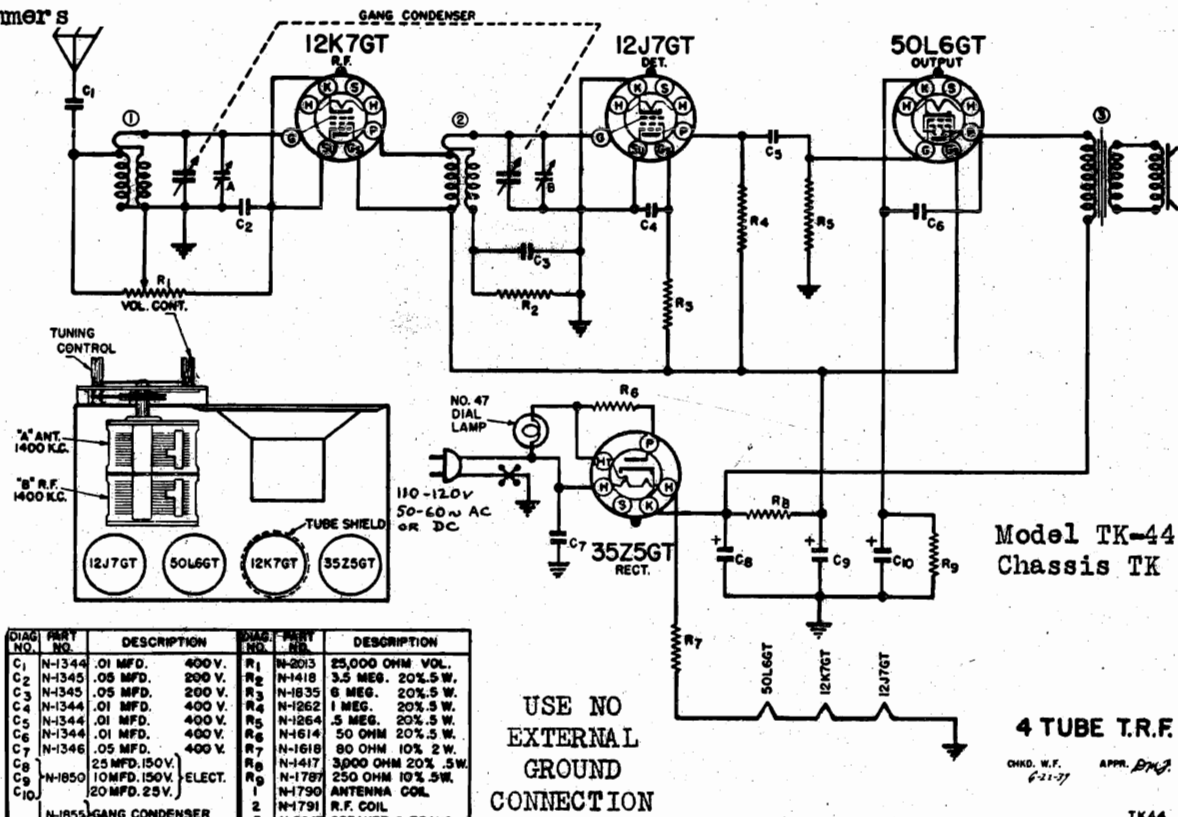

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	N-1344	.01 MFD. 400V.	R1	N-2013	25,000 OHM VOL.
C2	N-1345	.05 MFD. 200V.	R2	N-1418	3.5 MEG. 20% .5 W.
C3	N-1345	.05 MFD. 200V.	R3	N-1835	6 MEG. 20% .5 W.
C4	N-1344	.01 MFD. 400V.	R4	N-1262	1 MEG. 20% .5 W.
C5	N-1344	.01 MFD. 400V.	R5	N-1264	.5 MEG. 20% .5 W.
C6	N-1344	.01 MFD. 400V.	R6	N-1614	50 OHM 20% .5 W.
C7	N-1346	.05 MFD. 400V.	R7	N-1618	80 OHM 10% 2 W.
C8	N-1850	25 MFD. 150V.	R8	N-1417	3000 OHM 20% .5 W.
C9	N-1850	10 MFD. 150V. ELECT.	R9	N-1787	250 OHM 10% .5 W.
C10	N-1850	20 MFD. 25V.	R10	N-1790	ANTENNA COIL
	N-1855	GANG CONDENSER	2	N-1791	R.F. COIL
			3	N-2047	SPEAKER & TRANS.

USE NO
 EXTERNAL
 GROUND
 CONNECTION

Model TK-44
 Chassis TK
 4 TUBE T.R.F.
 CHKD. W.F. APPR. *B.K.J.*
 6-21-37
 TK44

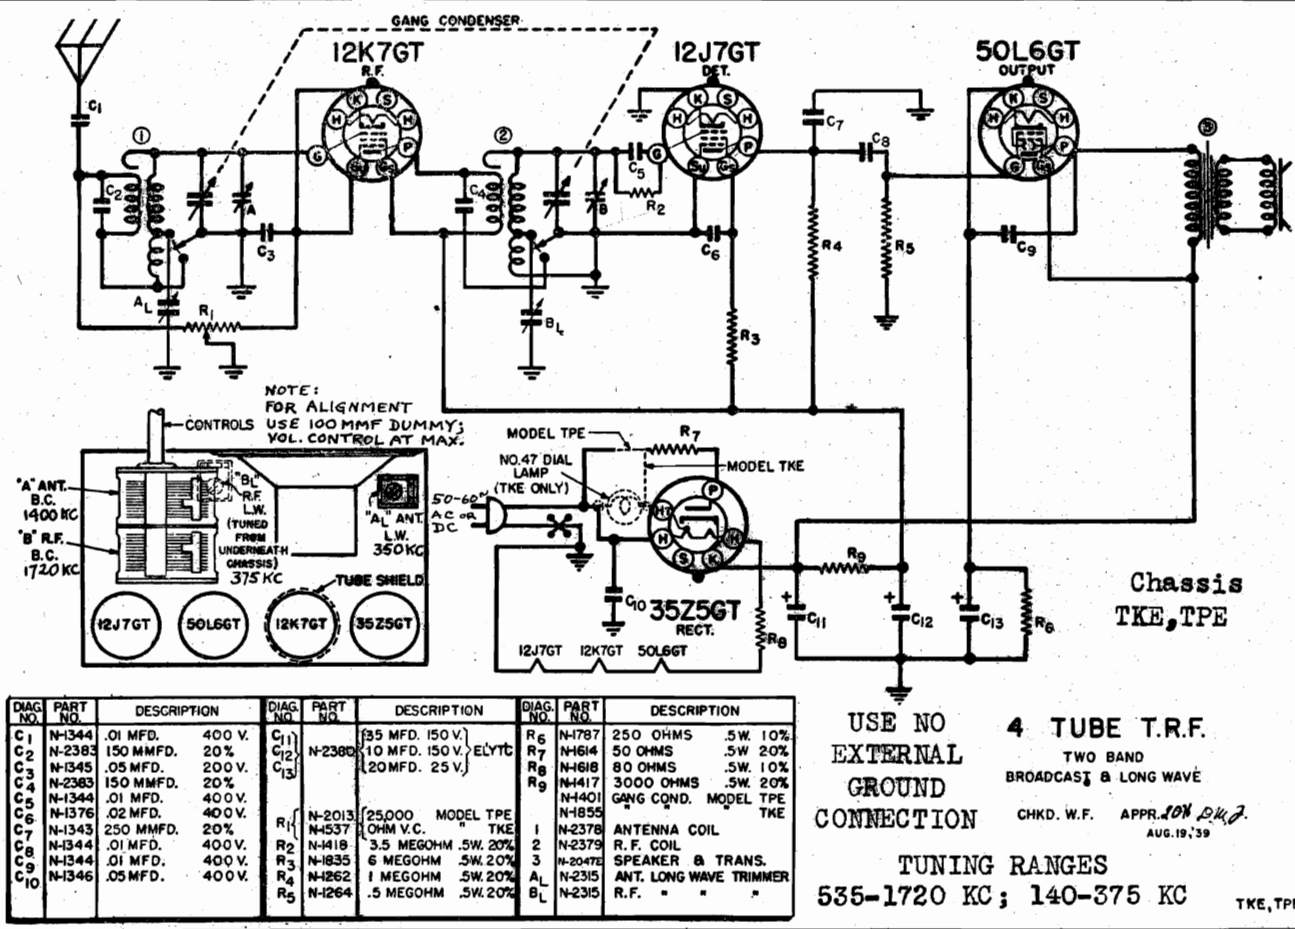

NOTE:
 FOR ALIGNMENT
 USE 100 MMF DUMMY;
 VOL. CONTROL AT MAX.

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	N-1344	.01 MFD. 400V.	C11		[.35 MFD. 150V.]	R5	N-1787	250 OHMS .5W 10%
C2	N-2383	150 MMFD. 20%	C12	N-2380	10 MFD. 150V. ELYTC	R7	N-1418	50 OHMS .5W 20%
C3	N-1345	.05 MFD. 200V.	C13		[20 MFD. 25V.]	R8	N-1618	80 OHMS .5W 10%
C4	N-2383	150 MMFD. 20%				R9	N-1417	3000 OHMS .5W 20%
C5	N-1344	.01 MFD. 400V.					N-1401	GANG COND. MODEL TPE
C6	N-1376	.02 MFD. 400V.	R1	N-2013	25,000 OHM MODEL TPE		N-1855	GANG COND. MODEL TKE
C7	N-1343	250 MMFD. 20%	R11	N-537	1 OHM V.C. TKE	1	N-2378	ANTENNA COIL
C8	N-1344	.01 MFD. 400V.	R2	N-1418	3.5 MEGOHM .5W 20%	2	N-2379	R.F. COIL
C9	N-1344	.01 MFD. 400V.	R3	N-1835	6 MEGOHM .5W 20%	3	N-2047E	SPEAKER & TRANS.
C10	N-1346	.05 MFD. 400V.	R4	N-1262	1 MEGOHM .5W 20%	AL	N-2315	ANT. LONG WAVE TRIMMER
			R5	N-1264	.5 MEGOHM .5W 20%	BL	N-2315	R.F. " " "

USE NO
 EXTERNAL
 GROUND
 CONNECTION


4 TUBE T.R.F.
 TWO BAND
 BROADCAST & LONG WAVE
 CHKD. W.F. APPR. *B.K.J.*
 AUG. 19, '39

TUNING RANGES
 535-1720 KC; 140-375 KC

TKE, TPE

SONORA RADIO & TELEV., CORP.

CHASSIS TL
Schematic, Socket
Trimmers, Alignment

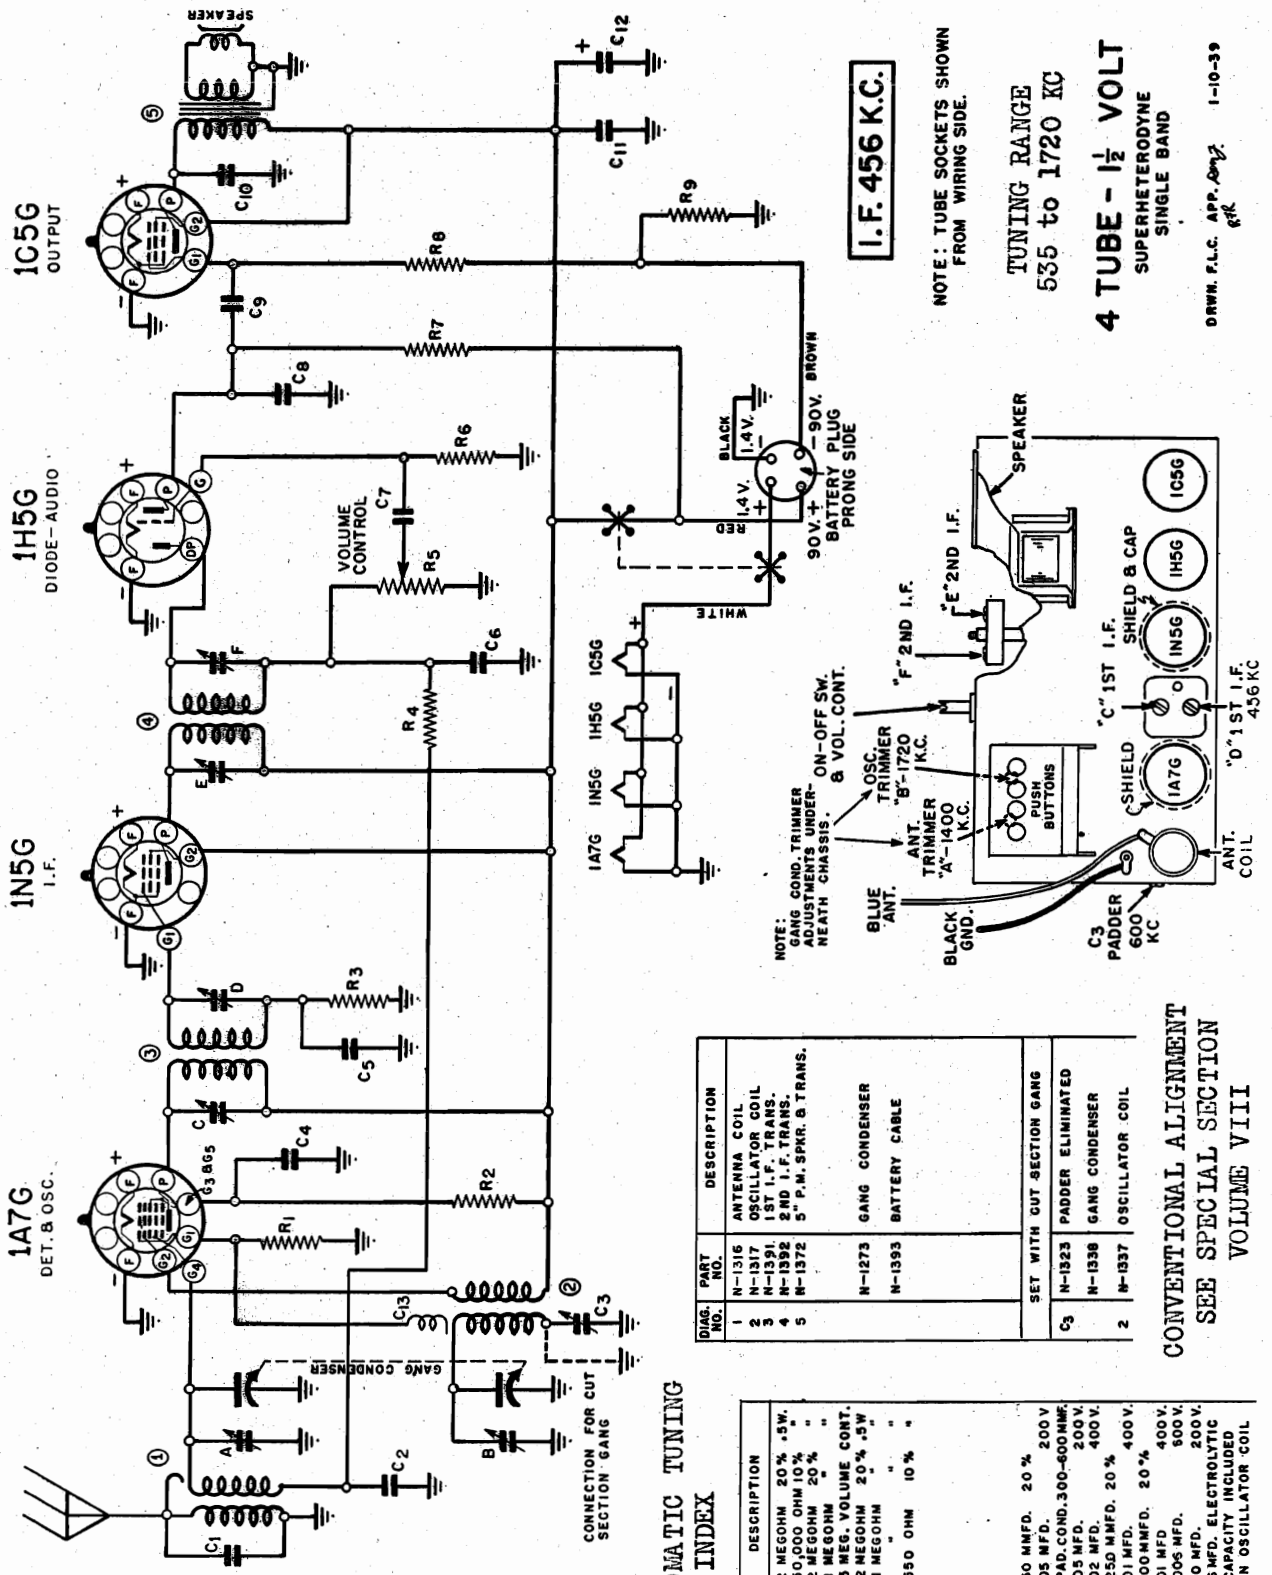

NOTE: TUBE SOCKETS SHOWN FROM WIRING SIDE.


TUNING RANGE
535 to 1720 KC

4 TUBE - 1 1/2 VOLT
SUPERHETERODYNE
SINGLE BAND

DRWN. F.L.C. APP. 10-27
gfk 1-10-39

TL

NOTE: GANG COND. TRIMMER ADJUSTMENTS UNDER-NEATH CHASSIS.
OSC. TRIMMER
ANT. TRIMMER "A"-1400 K.C.
ANT. TRIMMER "B"-1720 K.C.
ON-OFF SW. & VOL. CONT.

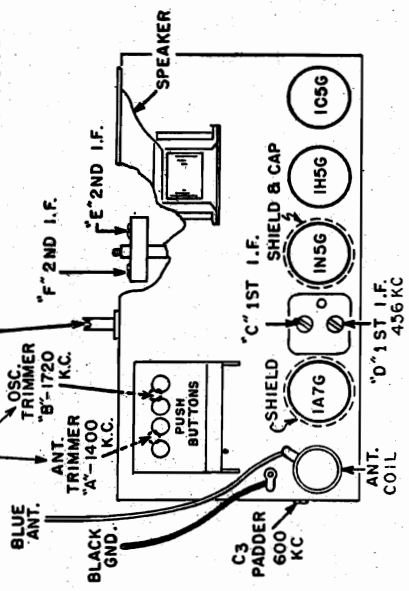


FOR AUTOMATIC TUNING
SEE INDEX

DIAG. NO.	PART NO.	DESCRIPTION
R 1	N-1377	.2 MEGOHM 20% ±5W.
R 2	N-1353	50,000 OHM 10% "
R 3	N-1378	2 MEGOHM 20% "
R 4	N-1262	1 MEGOHM 20% "
R 5	N-1373	.5 MEG. VOLUME CONT.
R 6	N-1378	2 MEGOHM 20% ±5W.
R 7	N-1262	1 MEGOHM " "
R 8	N- "	" "
R 9	N-1375	550 OHM 10% "
C 1	N-1342	50 MMFD. 20% 200V
C 2	N-1345	.05 MFD. "
C 3	N-1325	PAD.COND. 300-600MMF.
C 4	N-1345	.05 MFD. 200V.
C 5	N-1376	.02 MFD. 400V.
C 6	N-1343	250 MMFD. 20% "
C 7	N-1344	.01 MFD. 400V.
C 8	N-1374	100 MMFD. 20% "
C 9	N-1344	.01 MFD. 400V.
C 10	N-1347	.005 MFD. 500V.
C 11	N-1351	.10 MFD. 200V.
C 12	N-1367	6 MMFD. ELECTROLYTIC CAPACITY INCLUDED IN OSCILLATOR COIL

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII

CHASSIS TM
Schematic, Socket
Alignment, Trimmers

SONORA RADIO & TELEV., CORP.

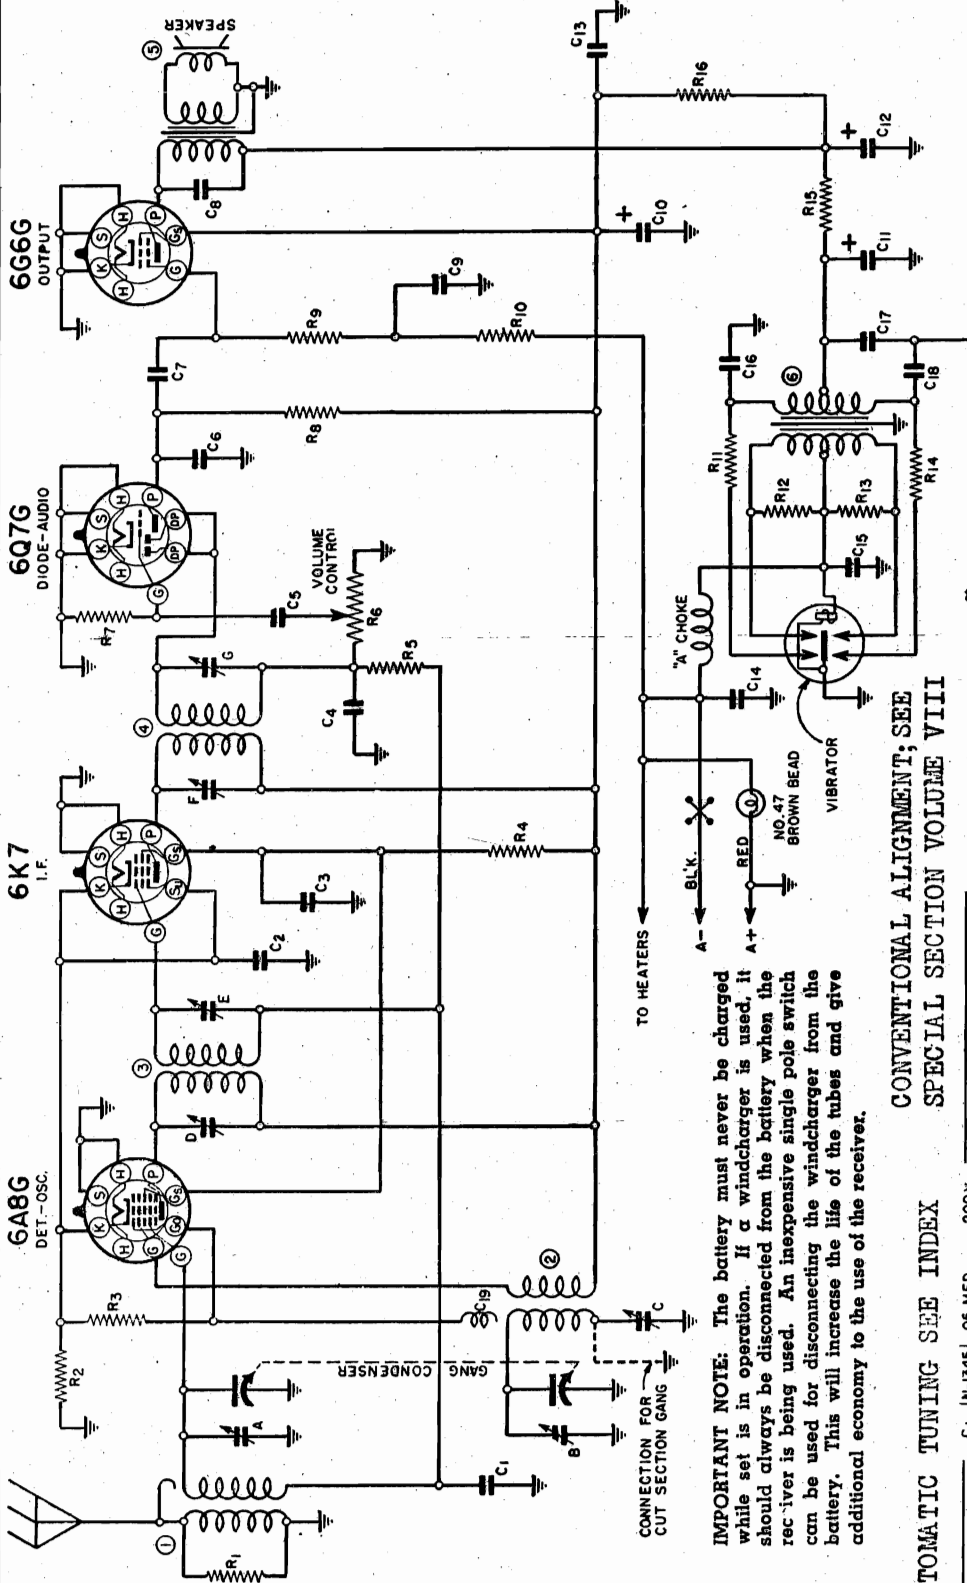


I.F. 456 KC.

NOTE: TUBE SOCKETS SHOWN FROM WIRING SIDE.

4 TUBE 6 VOLT SUPERHETERODYNE SINGLE BAND

DRWN. F.L.C. APP. 1-19-39

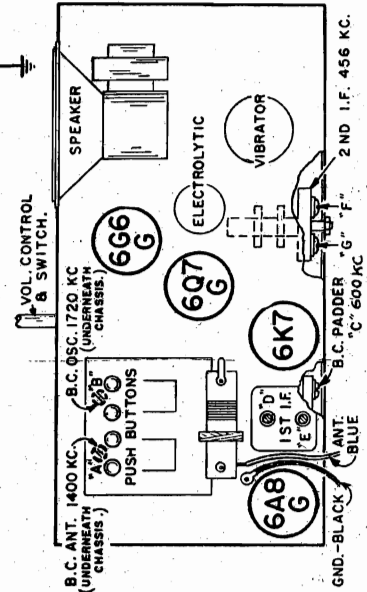

CONVENTIONAL ALIGNMENT; SEE SPECIAL SECTION VOLUME VIII


IMPORTANT NOTE: The battery must never be charged while set is in operation. If a windcharger is used, it should always be disconnected from the battery when the receiver is being used. An inexpensive single pole switch can be used for disconnecting the windcharger from the battery. This will increase the life of the tubes and give additional economy to the use of the receiver.

FOR AUTOMATIC TUNING SEE INDEX


DIAG. NO.	PART NO.	DESCRIPTION	VAL.
C1	N-1345	.05 MFD.	200 V.
C2	N-1479	.25 MFD.	"
C3	N-1351	.10 MFD.	"
C4	N-1374	100 MMFD.	600 V.
C5	N-1347	.006 MFD.	600 V.
C6	N-1343	250 MMFD.	400 V.
C7	N-1344	.01 MFD.	600 V.
C8	N-1347	.006 MFD.	200 V.
C9	N-1345	.05 MFD.	200 V.
C10	N-1468	20 MFD.	150 V.
C11	N-1479	10 MFD.	250 V.
C12	N-1351	.10 MFD.	150 V.
C13	N-1471	.5 MFD.	200 V.
C14	N-1471	.5 MFD.	50 V.
C15	N-1471	.5 MFD.	50 V.
C16	N-1480	.01 MFD. (OIL)	1000 V.
C17	N-1478	.01 MFD. (OIL)	600 V.
C18	N-1480	.01 MFD. (OIL)	1000 V.
C19		CAPACITY INCLUDED IN OSCILLATOR COIL.	
R1	N-259	15,000 OHM .5 W.	
R2	N-473	200 OHM "	
R3	N-250	50,000 OHM "	
R4	N-474	25,000 OHM "	
R5	N-1378	2.0 MEGOHM "	
R6	N-1320	1.0 MEG. VOL. CONT.	
R7	N-1263	10.0 MEGOHM .5 W.	
R8	N-1261	250,000 OHM "	
R9	N-1264	.5 MEG. "	
R10	N-1260	50,000 OHM "	
R11	N-256	500 OHM "	
R12	N-506	75 OHM I.W.	
R13	N-1506	75 OHM I.W.	
R14	N-1256	500 OHM .5 W.	
R15	N-1482	250 OHM "	
R16	N-1256	500 OHM "	

SONORA RADIO & TELEV., CORP.

CHASSIS TNE
Schematic, Socket
Alignment, Trimmers

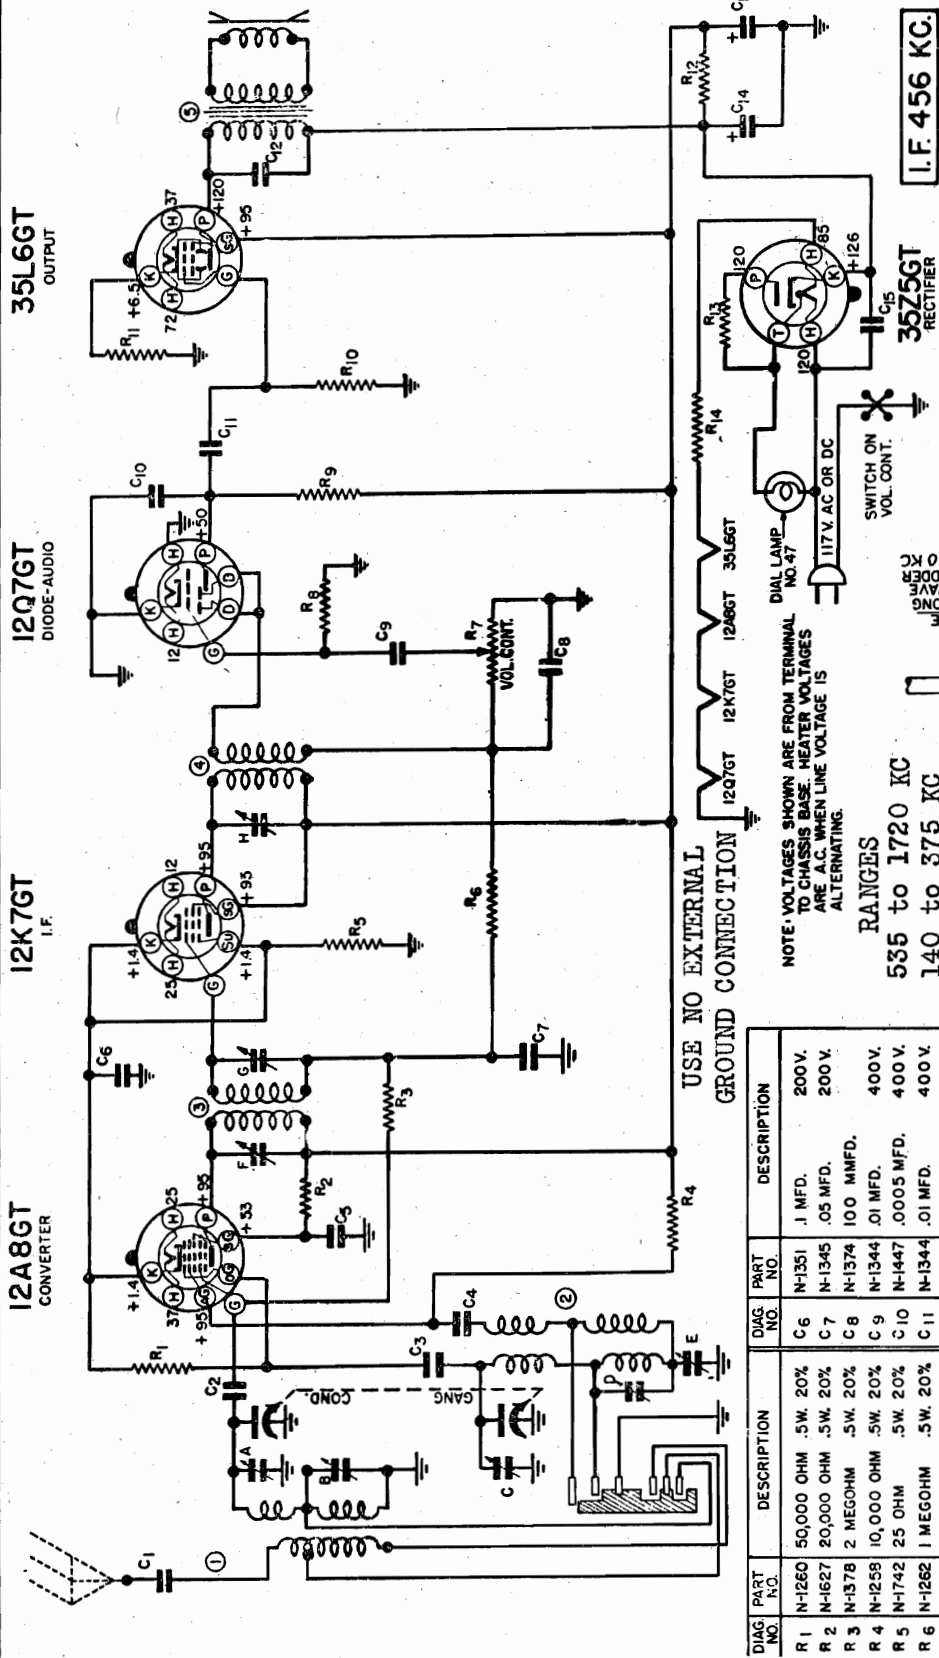

5 TUBE AC-DC
SUPERHETERODYNE
TWO BAND
LONG WAVE & BROADCAST
CHKD. W.F. APR. 10, 39
AUG. '39

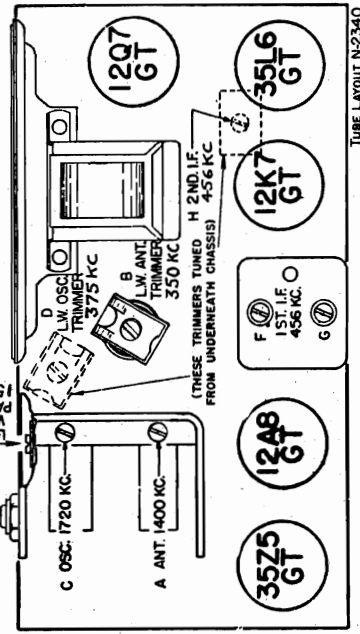

USE NO EXTERNAL
GROUND CONNECTION

NOTE: VOLTAGES SHOWN ARE FROM TERMINAL
TO CHASSIS BASE. HEATER VOLTAGES
ARE A.C. WHEN LINE VOLTAGE IS
ALTERNATING.

RANGES
535 to 1720 KC
140 to 375 KC


CONVENTIONAL
ALIGNMENT
SEE SPECIAL
SECTION
VOLUME VIII.
NOTE: Use a
100-mmf dummy
for BC and LW
alignment.

DIAG. PART NO.	DESCRIPTION	DIAG. PART NO.	DESCRIPTION
R1	50,000 OHM .5W. 20%	N-1351	1. MFD. 200V.
R2	20,000 OHM .5W. 20%	N-1345	.05 MFD. 200V.
R3	2 MEGOHM .5W. 20%	N-1374	10.0 MMFD.
R4	10,000 OHM .5W. 20%	N-1344	.01 MFD.
R5	25 OHM .5W. 20%	N-1447	.0005 MFD. 400V.
R6	1 MEGOHM .5W. 20%	N-1344	.01 MFD. 400V.
R7	.5 MEGOHM VOL. CONT.	N-1376	.02 MFD. 400V.
R8	10 MEGOHM .5W. 20%	N-1366	(15 MFD. 150V.)
R9	2 MEGOHM .5W. 20%	N-1366	(30 MFD. 150V.)
R10	.5 MEGOHM .5W. 20%	N-1346	.05 MFD. 400V.
R11	250 OHM .5W. 10%	N-2342	ANTENNA COIL
R12	2500 OHM .5W. 20%	N-2343	OSCILLATOR COIL
R13	50 OHM .5W. 20%	N-1598E	1ST. I.F. TRANSFORMER
R14	80 OHM 2W. 10%	N-1598E	2ND. I.F. TRANSFORMER
C1	.01 MFD. 400V.	N-2074E	4" P.M. SPEAKER & TR.
C2	.0005 MFD. 400V.	N-2315	L.W. ANT. TRIMMER
C3	50 MMFD.	N-1597	L.W. OSC. TRIMMER
C4	.01 MFD. 400V.	N-1342	L.W. PADDER
C5	.05 MFD. 200V.	N-1597	2ND. I.F. TRIMMER
		N-1343	GANG CONDENSER

MODELS TNF-60, TNF-68
 Chassis TNF
 Schematic, Socket
 Alignment, Trimmers

SONORA RADIO & TELEV. CORP.

TNF

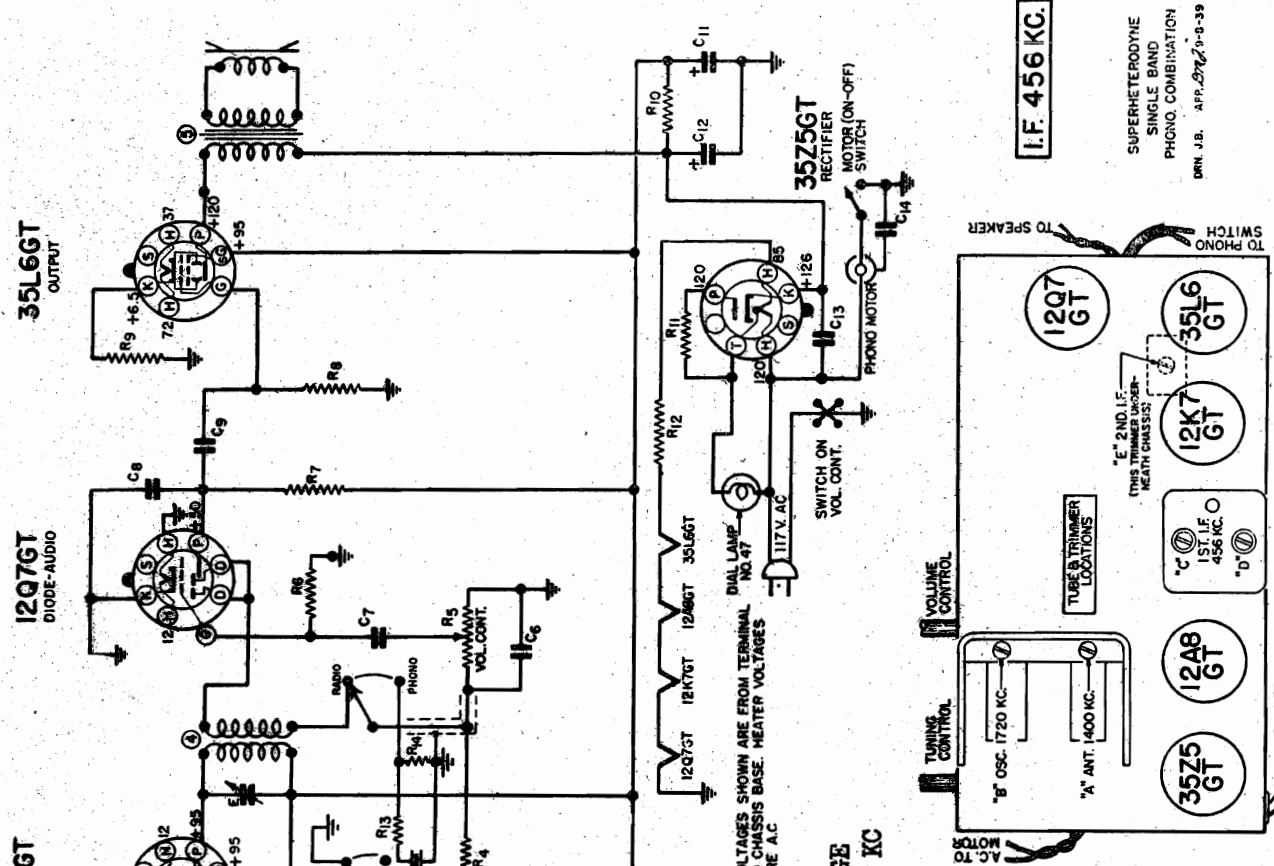


I.F. 456 KC.

SUPERHETERODYNE
 SINGLE BAND
 PHONO COMBINATION
 DRN. J.B. APP. 2/27/39-0-39

TUNING RANGE
 535 to 1720 KC

NOTE: DO NOT USE EXTERNAL
 GROUND CONNECTION.
 USE 60-CYCLE AC ONLY.

NOTE: VOLTAGES SHOWN ARE FROM TERMINAL
 TO CHASSIS BASE. HEATER VOLTAGES
 ARE A.C.

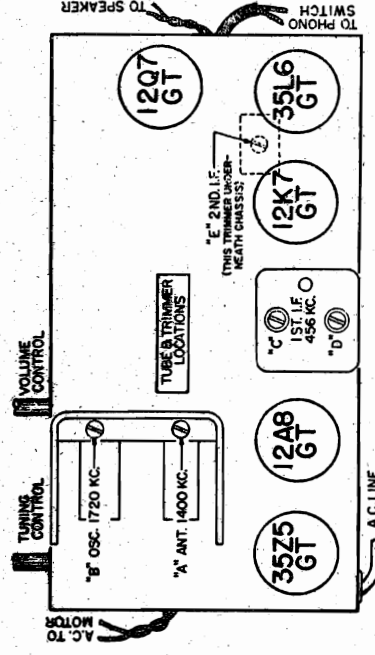


CONVENTIONAL
 ALIGNMENT
 SEE SPECIAL
 SECTION
 VOLUME VIII

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
R 1	N-1260	80,000 OHM .5W. 20%	C 7	N-1344	.01 MFD. 400V.
R 2	N-1627	20,000 OHM .5W. 20%	C 8	N-1447	.0005 MFD. 400V.
R 3	N-1742	25 OHM .5W. 20%	C 9	N-1344	.01 MFD. 400V.
R 4	N-1262	1 MEGOHM .5W. 20%	C 10	N-1376	.02 MFD. 400V.
R 5	N-2070	0.5 MEGOHM VOL. CONT.	C 11	N-2015	.35 MFD. 150V. ELECTRO.
R 6	N-1263	10 MEGOHM .5W. 20%	C 12	N-1346	.05 MFD. 400V.
R 7	N-1377	200,000 OHM .5W. 20%	C 13	N-1834	.002 MFD. 600V.
R 8	N-1264	500,000 OHM .5W. 20%	1	N-1594	ANTENNA COIL LOOP
R 9	N-1616	250 OHM .5W. 10%	2	N-1432	OSCILLATOR COIL
R 10	N-1617	2500 OHM .5W. 20%	3	N-1598	1ST. I.F. TRANSFORMER
R 11	N-1614	50 OHM .5W. 20%	4	N-1596	2ND. I.F. TRANSFORMER
R 12	N-1619	80 OHM 2W. 10%	5	N-2389	5\"/>

SONORA RADIO & TELEV., CORP.

MODEL TR-53, Ch. TR
Schematic, Socket
Alignment, Trimmers

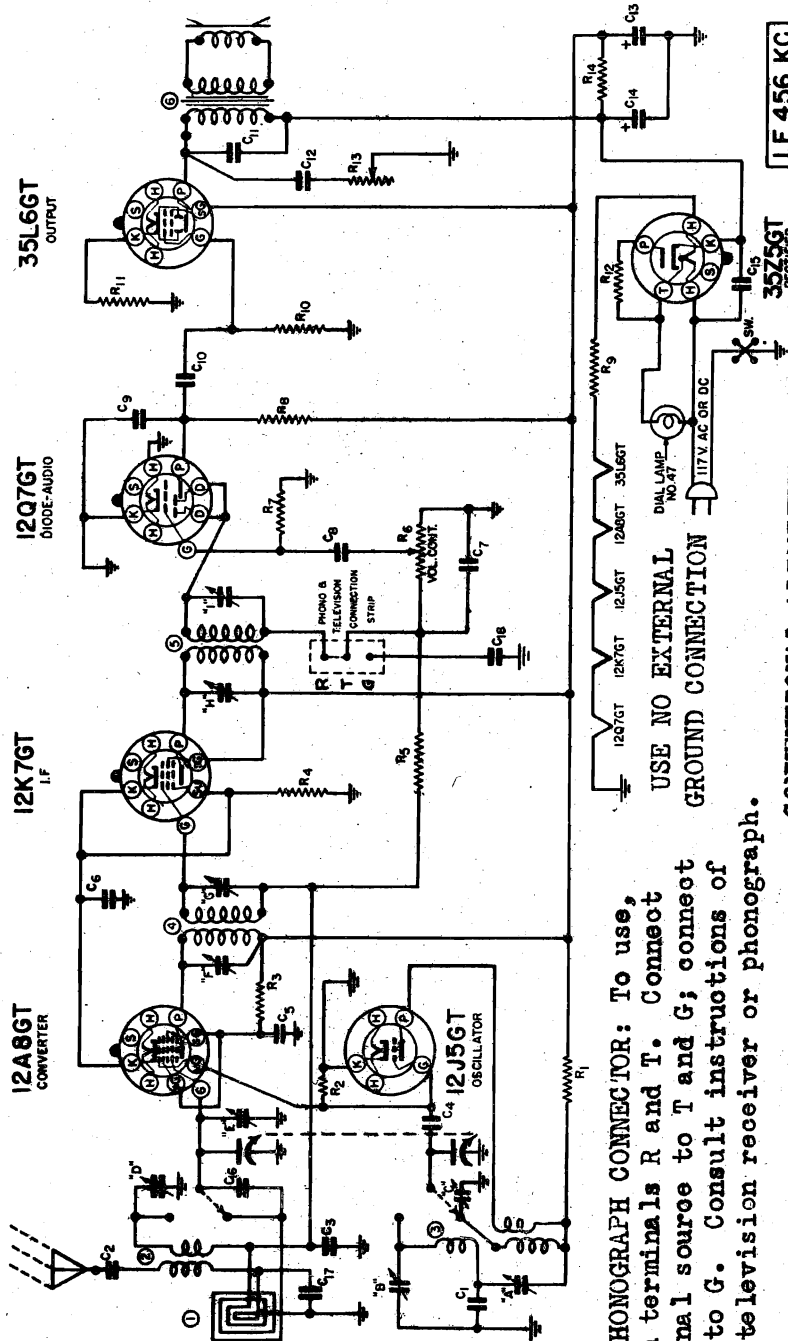

I.F. 456 KC.


TUNING RANGES
535 to 1720 KC
5.65 to 18.3 MC

6 TUBE AC-DC.
SUPERHETERODYNE
TWO BAND
BWA. N.E. AMP. 5/14/34

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII



TELEVISION and PHONOGRAPH CONNECTOR: To use, remove link from terminals R and T. Connect leads from external source to T and G; connect shield (if any) to G. Consult instructions of manufacturer of television receiver or phonograph.

FOR
AUTOMATIC
TUNING
SEE INDEX

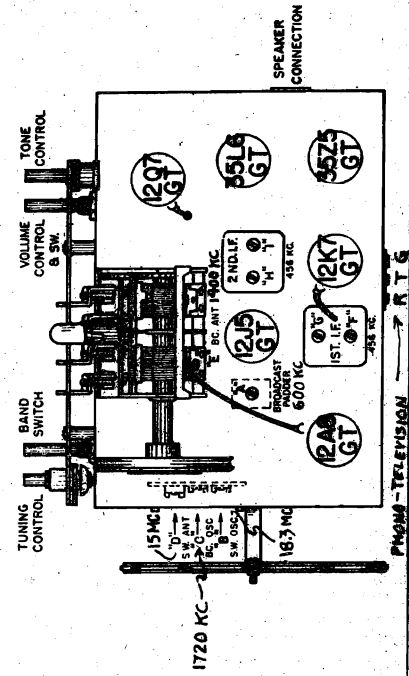


DIAG. PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
R 1	N-1258 10,000 OHM .5W. 20%	C 8	N-1344 .01 MFD. 400V.
R 2	N-1260 50,000 OHM .5W. 20%	C 9	N-1447 .0005 MFD. 400V.
R 3	N-1460 30,000 OHM .5W. 20%	C 10	N-1344 .01 MFD. 400V.
R 4	N-2206 25 OHM .5W. 10%	C 11	N-1344 .01 MFD. 400V.
R 5	N-1262 1 MEGOHM .5W. 20%	C 12	N-1346 .05 MFD. 400V.
R 6	N-2163 .5 MEGOHM VOL. CONT.	C 13	N-2206 {20 MFD. 150V.} E.L.T.C.
R 7	N-1263 10 MEGOHM .5W. 20%	C 14	N-1346 .05 MFD. 400V.
R 8	N-1377 .2 MEGOHM .5W. 20%	C 15	N-1346 .05 MFD. 400V.
R 9	N-2195 40 OHM 1W. 10%	C 16	N-1897 25 MMFD.
R 10	N-1264 .5 MEGOHM .5W. 20%	C 17	N-1897 25 MMFD.
R 11	N-1787 250 OHM .5W. 10%	C 18	N-1544 .01 MFD. 400V.
R 12	N-1614 50 OHM .5W. 20%		N-2154 ANTENNA COIL LOOP
R 13	N-2157 25,000 OHM TONE CONT.	2	N-2090 BAND 2 ANTENNA COIL
R 14	N-1617 2500 OHM .5W. 20%	3	N-2098 OSC. COIL
C 1	N-1890 BAND 2 P.A. 0.004MFD. 5%	4	N-2159 1ST. I.F. TRANSFORMER
C 2	N-1344 .01 MFD. 400V.	5	N-2160 2ND. I.F. TRANSFORMER
C 3	N-1345 .05 MFD. 200V.	6	N-2153 6" P.A. SPKR. & TRANS.
C 4	N-1342 .50 MMFD. BROADCAST PADDER	"A"	N-2205 BROADCAST PADDER
C 5	N-1345 .05 MFD. 200V. SHORT W. OSC. TRIMMER	"B"	N-2155 SHORT W. OSC. TRIMMER
C 6	N-2215 .15 MFD. 800V. BROADCAST OSC. TRIM.	"C"	N-2156 SHORT W. ANT. TRIMMER
C 7	N-1374 100 MMFD.	"D"	

MODEL TT-64, Ch. TT
 MODEL TW-49, Ch. TW, TWU SONORA RADIO & TELEV. CORP.
 Schematics, Socket
 Alignment, Trimmers

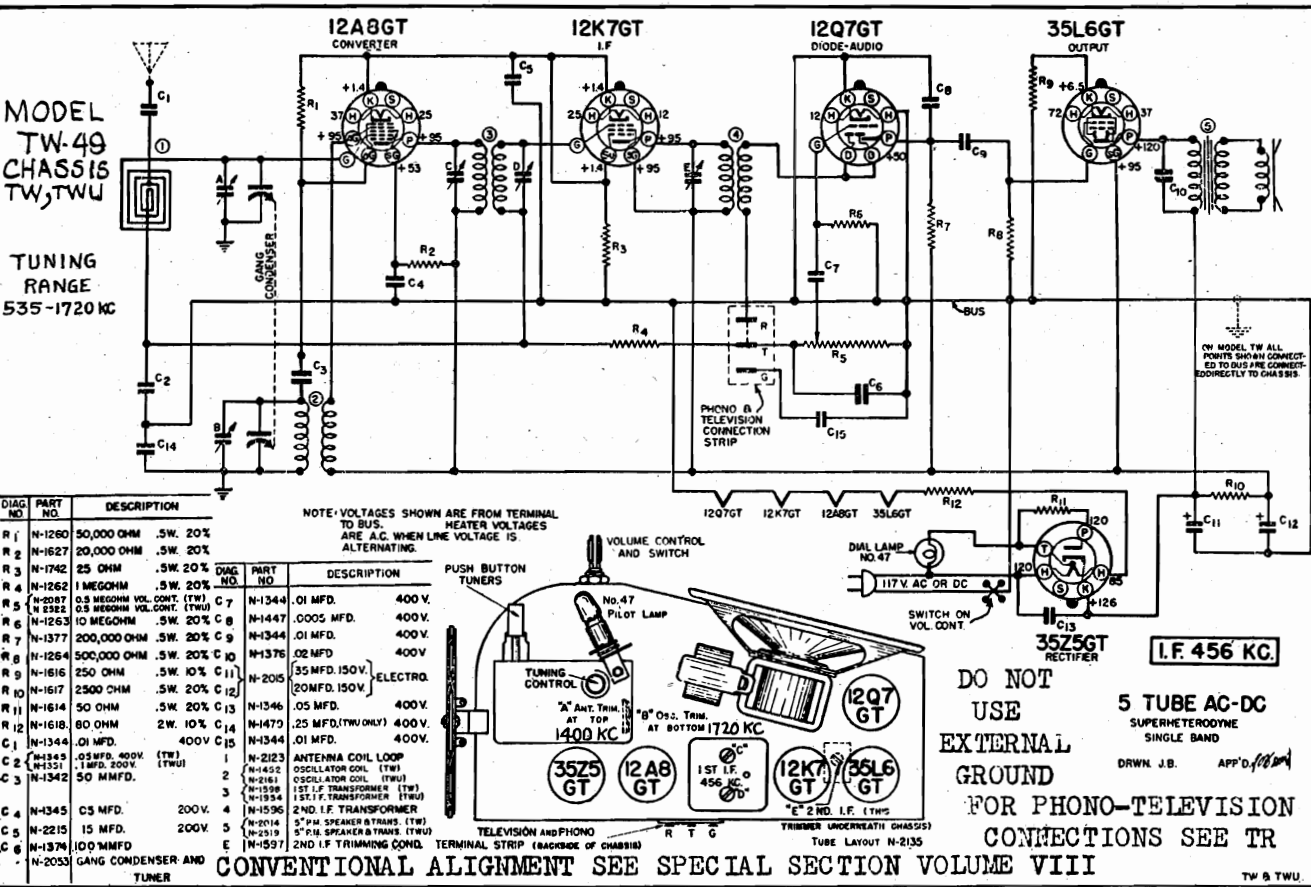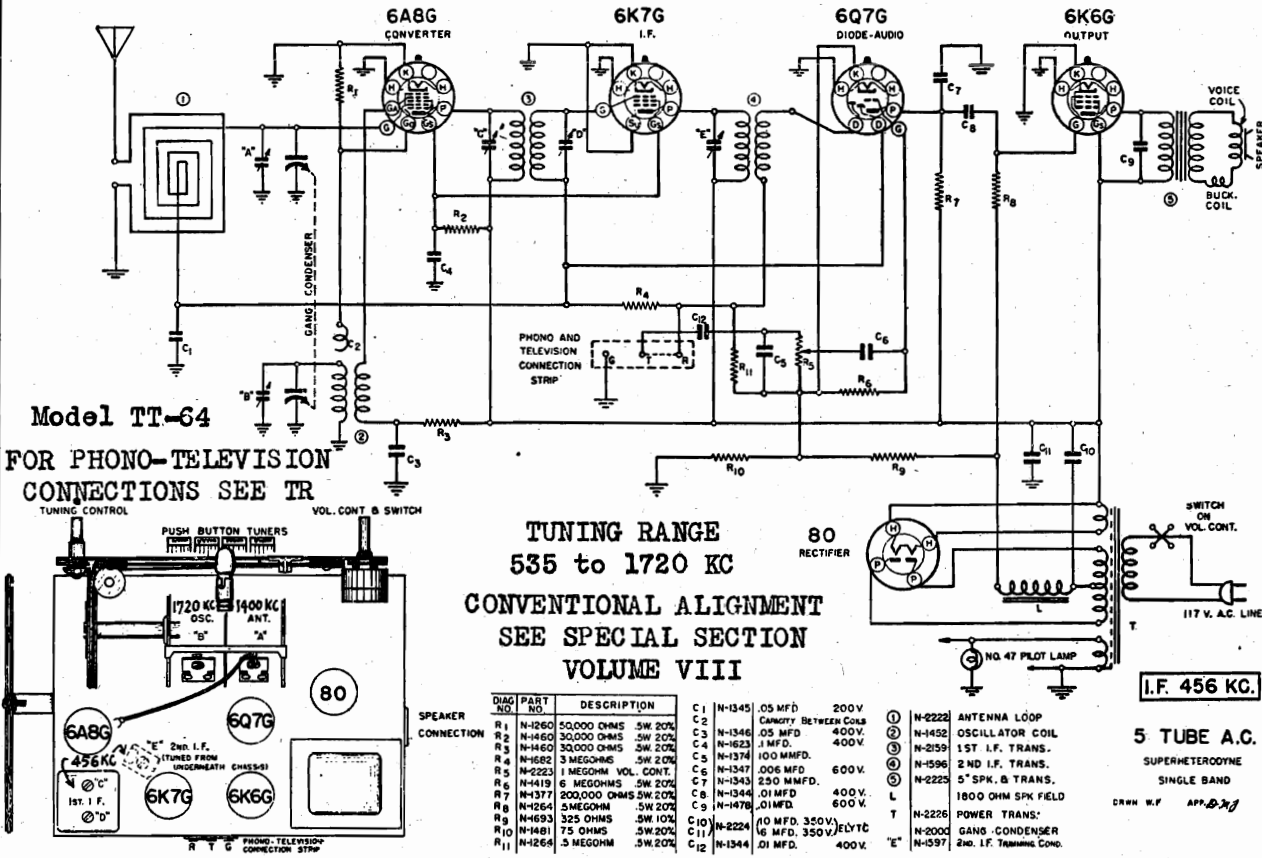

SONORA RADIO & TELEV., CORP.

MODELS TX-53, TX-58
 Chassis TX
 Schematic, Socket
 Alignment, Trimmers

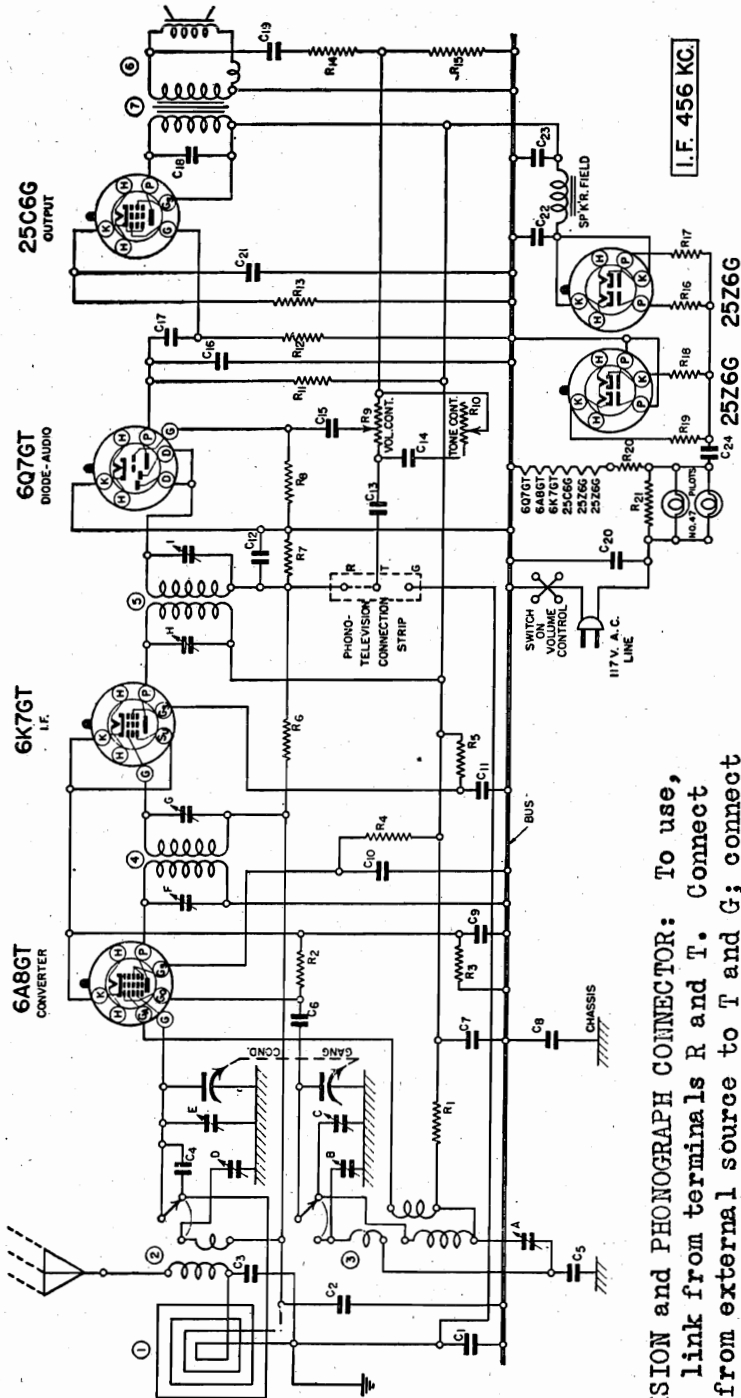

CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION
 VOLUME VIII

TUNING RANGES
 535 to 1720 KC
 5.65 to 18.3 MC


6 TUBE A.C.
 SUPERHETERODYNE
 TWO BAND

Drawn W.F. App. 11/1/39
 AUG 11, 39 SEPT 16, 39

TELEVISION and PHONOGRAPH CONNECTOR: To use, remove link from terminals R and T. Connect leads from external source to T and G; connect shield (if any) to G. Consult instructions of manufacturer of television receiver or phonograph.

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
R1	N-627	20000 OHM 5W 20%	C10	N-1345	0.05 MFD. 200V. 20%
R2	N-1260	50000 OHM 5W 20%	C11	N-1345	0.05 MFD. 200V. 20%
R3	N-1460	30000 OHM 5W 20%	C12	N-1344	100 MFD. 400V. 20%
R4	N-2455	40000 OHM 5W 20%	C13	N-2450	0.02 MFD. 400V. 20%
R5	N-1262	1 MEG OHM 5W 20%	C14	N-1344	0.01 MFD. 400V. 20%
R6	N-1264	0.5 MEG OHM 5W 20%	C15	N-1343	250 MFD. 400V. 20%
R7	N-1264	0.5 MEG OHM 5W 20%	C16	N-1343	250 MFD. 400V. 20%
R8	N-241	0.5 MEG OHM 5W 20%	C17	N-1346	0.01 MFD. 400V. 20%
R9	N-241	0.5 MEG OHM 5W 20%	C18	N-1346	0.01 MFD. 400V. 20%
R10	N-241	0.5 MEG OHM 5W 20%	C19	N-1351	0.1 MFD. 200V. 20%
R11	N-1261	25 MEG OHM 5W 20%	C20	N-1346	0.05 MFD. 400V. 20%
R12	N-1264	0.5 MEG OHM 5W 20%	C21	N-2437	20 MFD. 25V. ELECT.
R13	N-2451	75 OHM 1W 10%	C22	N-2437	30 MFD. 250V. COND.
R14	N-2452	500 OHM 1W 10%	C23	N-2436	30 MFD. 150V.
R15	N-1473	200 OHM 1W 20%	C24	N-2436	30 MFD. 150V.
R16	N-2452	100 OHM 1W 20%			
R17	N-2452	100 OHM 1W 20%			
R18	N-2451	75 OHM 1W 20%			
R19	N-2451	75 OHM 1W 20%			
R20	N-2451	75 OHM 1W 20%			
R21	N-2298	17 OHM WIRE RES.			
C1	N-1344	0.01 MFD. 400V. 20%			
C2	N-1897	25 MFD. 200V. 20%			
C3	N-1897	25 MFD. 200V. 20%			
C4	N-1897	25 MFD. 200V. 20%			
C5	N-1897	25 MFD. 200V. 20%			
C6	N-1897	25 MFD. 200V. 20%			
C7	N-1342	50 MFD. 200V. 20%			
C8	N-1351	0.1 MFD. 200V. 20%			
C9	N-1479	2.5 MFD. 200V. 20%			


FOR TUNER
 SEE INDEX

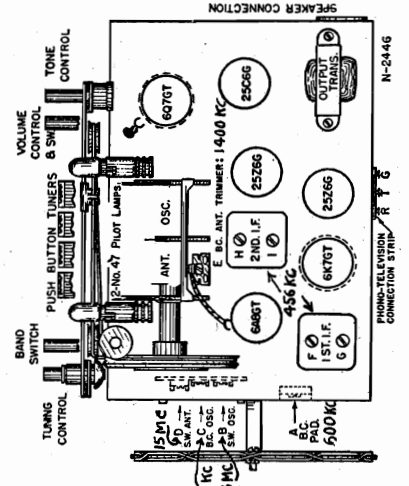

SPARKS WITHINGTON CO.

MODELS 520, 520M
Schematic, Voltage

Alignment, Trimmers
Socket

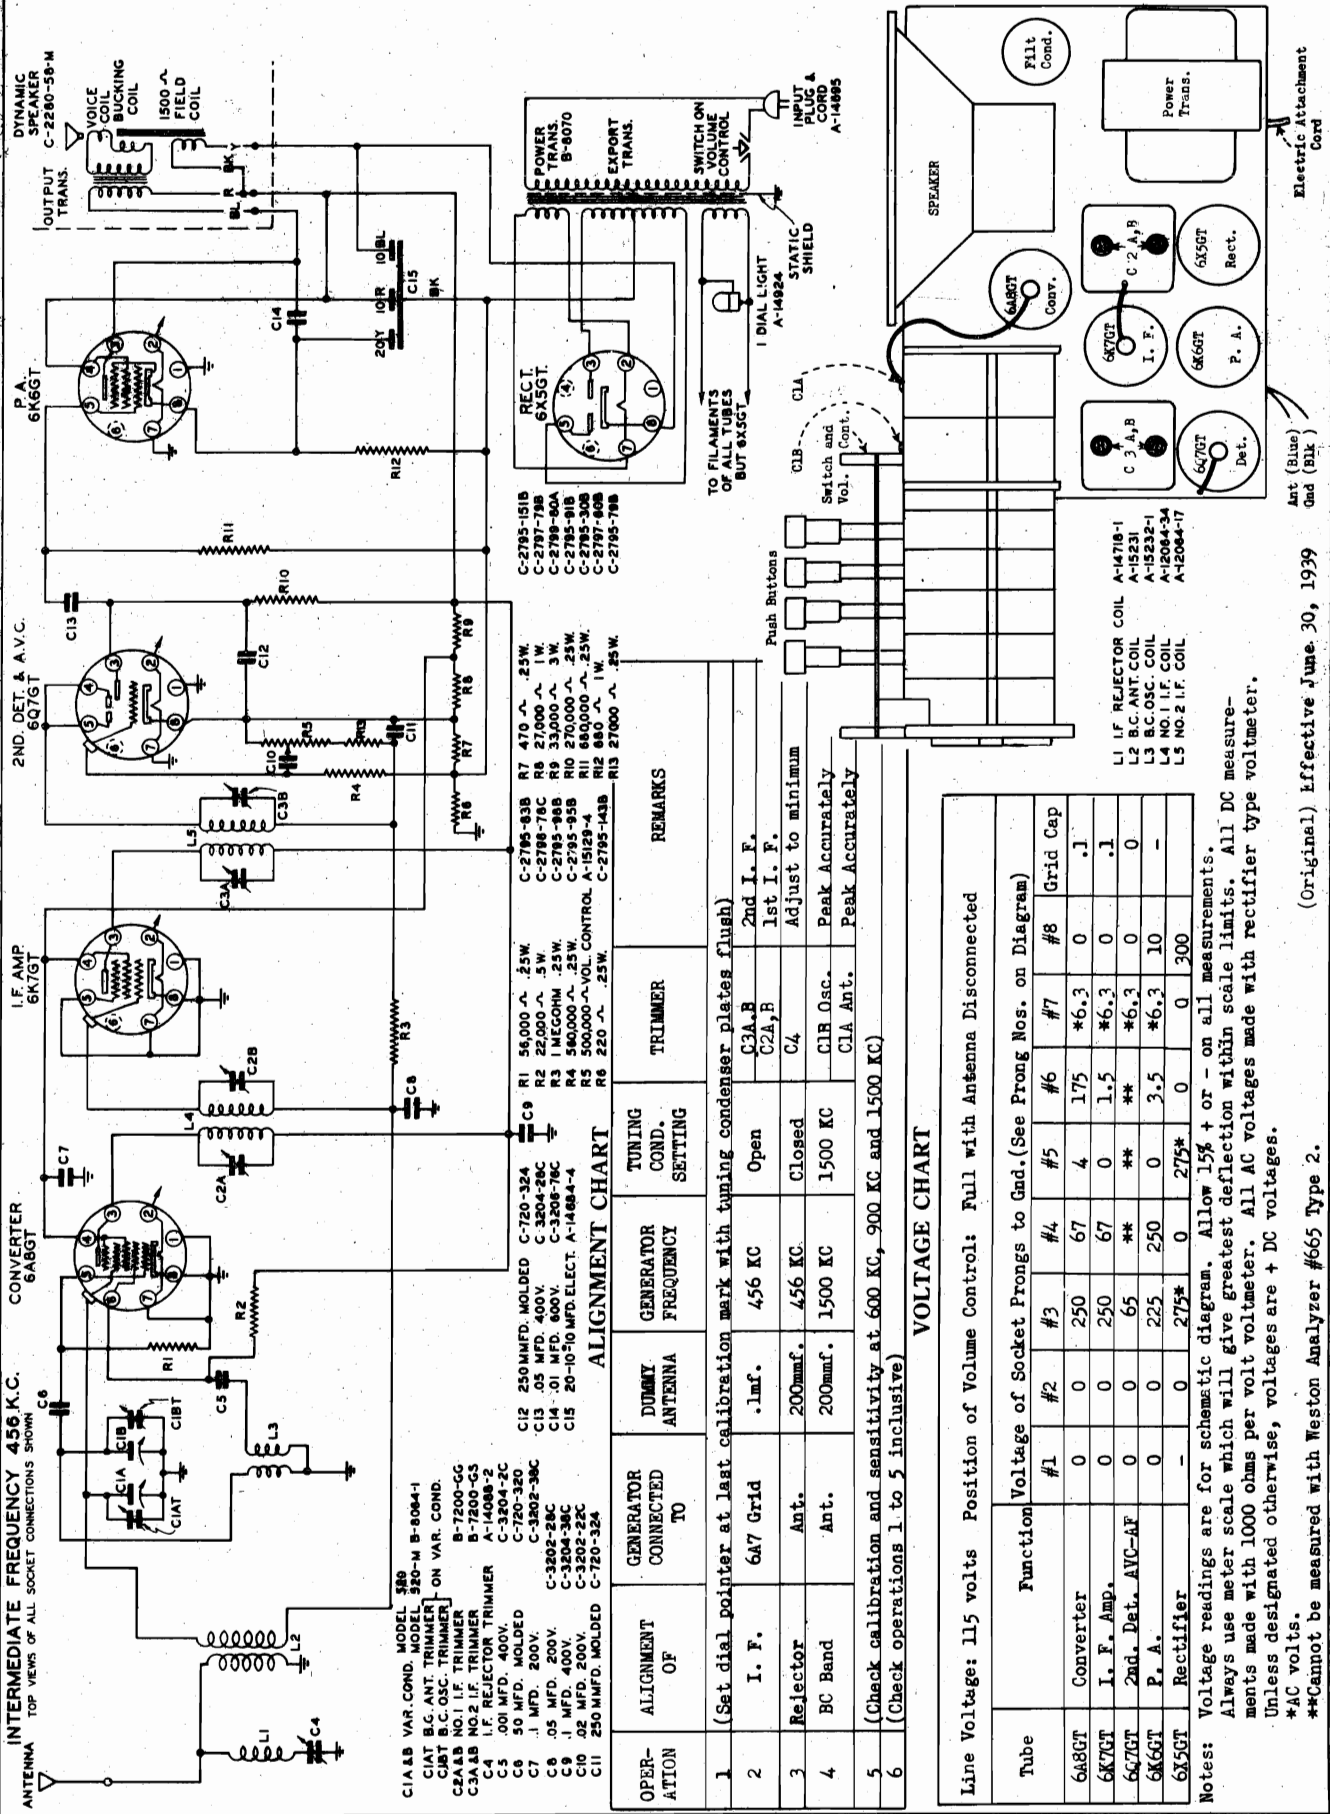

ALIGNMENT CHART

OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	TUNING COND. SETTING	TRIMMER	REMARKS
1	I. F.	6A7 Grid	.1mf.	456 KC	Open	C3A, B C2A, B	2nd I. F. 1st I. F.
2	Reflector	Ant.	200mmf.	456 KC	Closed	C4	Adjust to minimum
3	BC Band	Ant.	200mmf.	1500 KC	1500 KC	C1R, Osc. C1A, Ant.	Peak Accurately Peak Accurately
4							
5							
6							

VOLTAGE CHART

Line Voltage: 115 volts Position of Volume Control: Full with Antenna Disconnected


Tube	Function	#1	#2	#3	#4	#5	#6	#7	#8	Grid Cap
6A8GT	Converter	0	0	250	67	4	175	*6.3	0	.1
6K7GT	I. F. Amp.	0	0	250	67	0	1.5	*6.3	0	.1
6G7GT	2nd. Det., AVC-AF	0	0	65	**	**	**	*6.3	0	0
6X5GT	P. A.	0	0	225	250	0	3.5	*6.3	10	-
6X5GT	Rectifier	-	0	275*	0	275*	0	0	300	-

Notes: Voltage readings are for schematic diagram. Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages are + DC voltages.
*AC volts.
**Cannot be measured with Weston Analyzer #665 Type 2.

MODEL 530X


Schematic, Voltage, Socket Alignment, Trimmers

SPARKS. WITHINGTON CO.

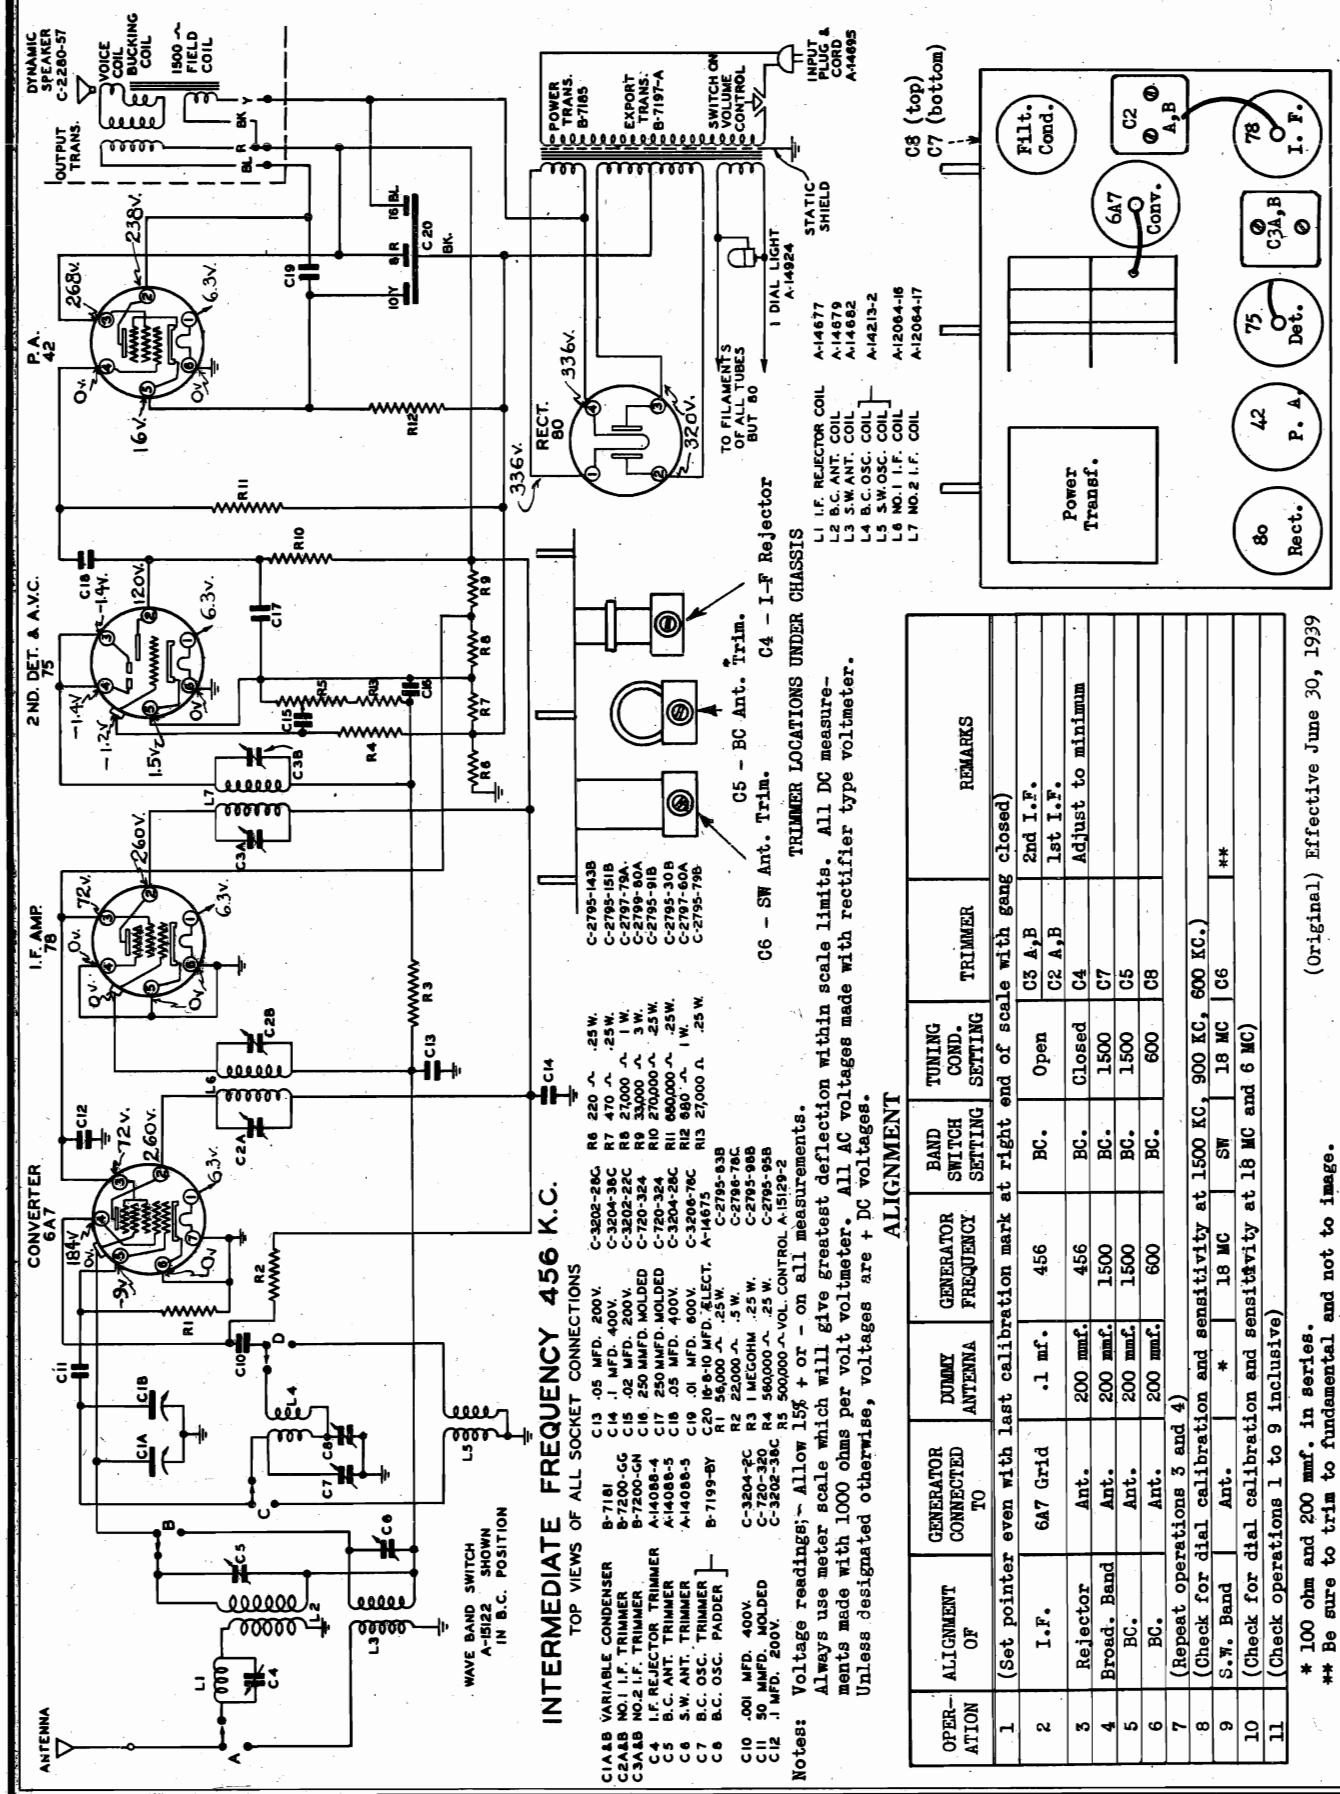

SPARKS WITHINGTON CO.

MODEL 540LK
Schematic, Voltage, Socket
Alignment, Trimmers

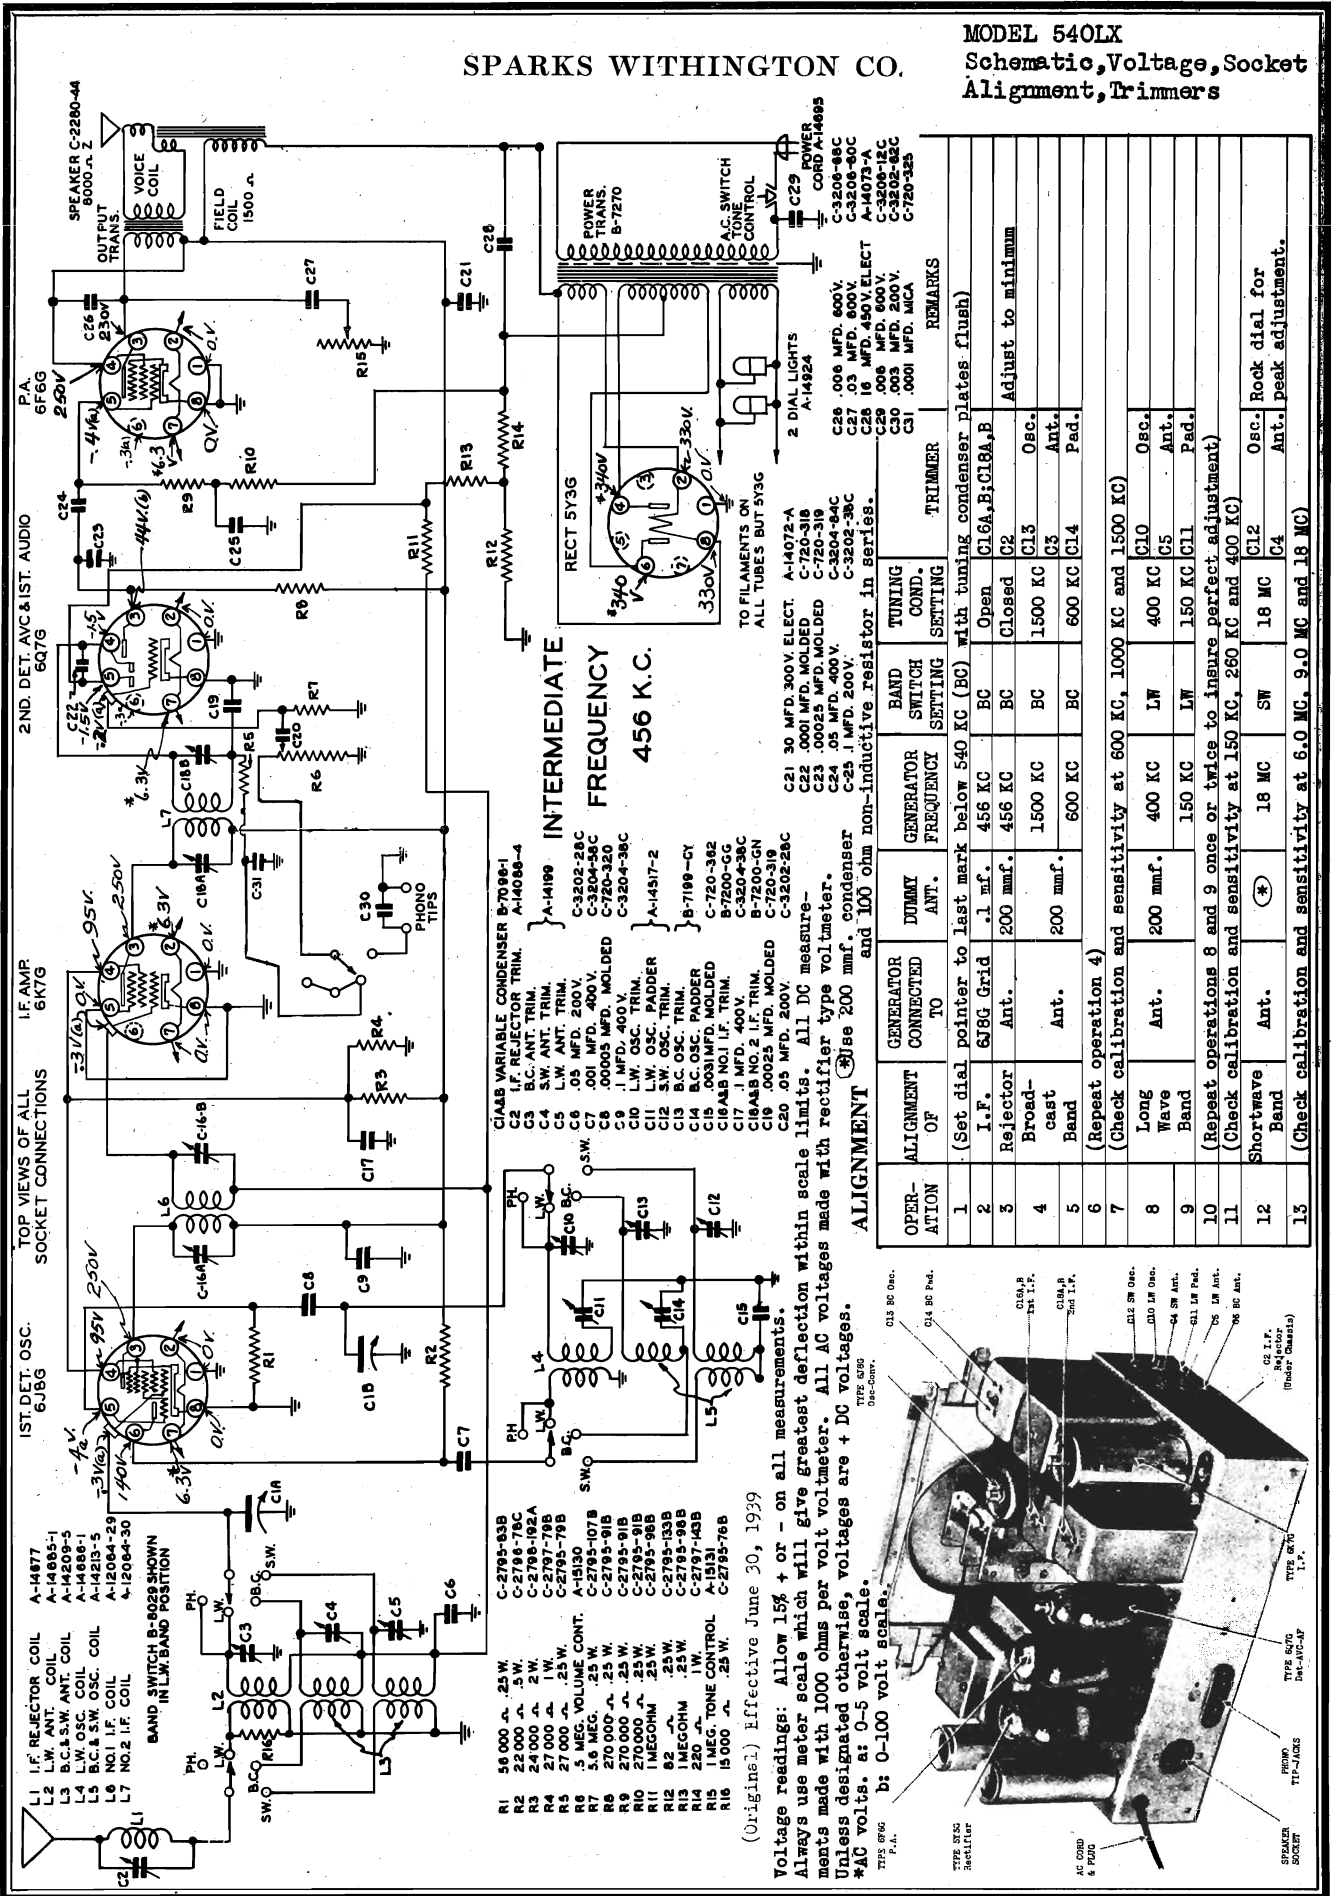


INTERMEDIATE
FREQUENCY
456 K.C.

- C1A8 VARIABLE CONDENSER B-7090-1
- C2 I.F. REJECTOR TRIM. A-14088-4
- C3 B.C. ANT. TRIM.
- C4 S.W. ANT. TRIM.
- C5 L.W. ANT. TRIM.
- C6 .05 MFD. 200V.
- C7 .0005 MFD. MOLDED C-3204-38C
- C8 .0005 MFD. MOLDED C-3204-38C
- C9 .0005 MFD. MOLDED C-3204-38C
- C10 L.W. OSC. TRIM.
- C11 L.W. OSC. PADDER A-14517-2
- C12 S.W. OSC. TRIM.
- C13 B.C. OSC. TRIM.
- C14 B.C. OSC. PADDER B-7109-CY
- C15 .00031 MFD. MOLDED B-7200-CG
- C16 .00031 MFD. MOLDED B-7200-CG
- C17 .1 MFD. 400V. B-7200-GN
- C18A8 NO. 2 I.F. TRIM. B-7200-GN
- C19 .00025 MFD. MOLDED C-3202-38C
- C20 .05 MFD. 200V. C-3202-28C

ALIGNMENT and 100 ohm non-inductive resistor in series.


OPER-ALIGNED ACTION	GENERATOR CONNECTED TO	DUMMY ANT.	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING COND. SETTING	TRIMMER	REMARKS
1	(Set dial pointer to last mark below 540 KC (BC) with tuning condenser plates flush)						
2	I.F.	.1 mf.	456 KC	BC	Open	C16A, B; C18A, B	Adjust to minimum
3	Rejector	200 mmf.	456 KC	BC	Closed	C2	
4	Broad-cast		1500 KC	BC	1500 KC	C13	Osc.
5	Band	200 mmf.	600 KC	BC	600 KC	C3, C14	Ant. Pad.
6	(Repeat operation 4)						
7	(Check calibration and sensitivity at 600 KC, 1000 KC and 1500 KC)						
8	Long Wave Band	200 mmf.	400 KC	LW	400 KC	C10	Osc.
9	Band		150 KC	LW	150 KC	C5	Ant. Pad.
10	(Repeat operations 8 and 9 once or twice to insure perfect adjustment)						
11	(Check calibration and sensitivity at 150 KC, 260 KC and 400 KC)						
12	Shortwave Band		18 MC	SW	18 MC	C12	Osc.
13	(Check calibration and sensitivity at 6.0 MC, 9.0 MC and 18 MC)					C4	Ant. peak adjustment.

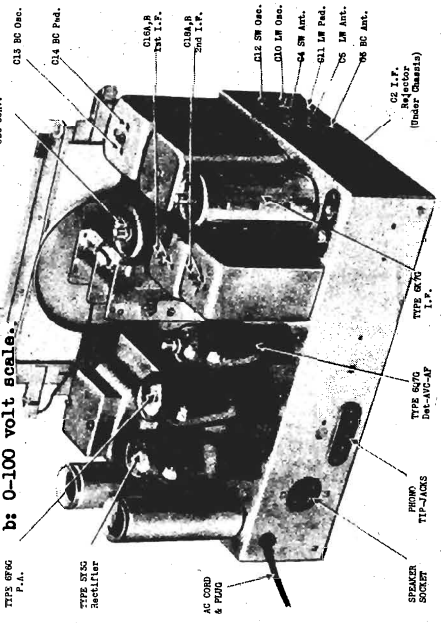

(Original) Effective June 30, 1939
Voltage readings: Allow 15% or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages are + DC voltages. Unless designated otherwise, voltages are + DC voltages. *AC volts. at 0-5 volt scale. b: 0-100 volt scale.

MODEL 570M

Schematic, Voltage, Socket Alignment, Trimmers

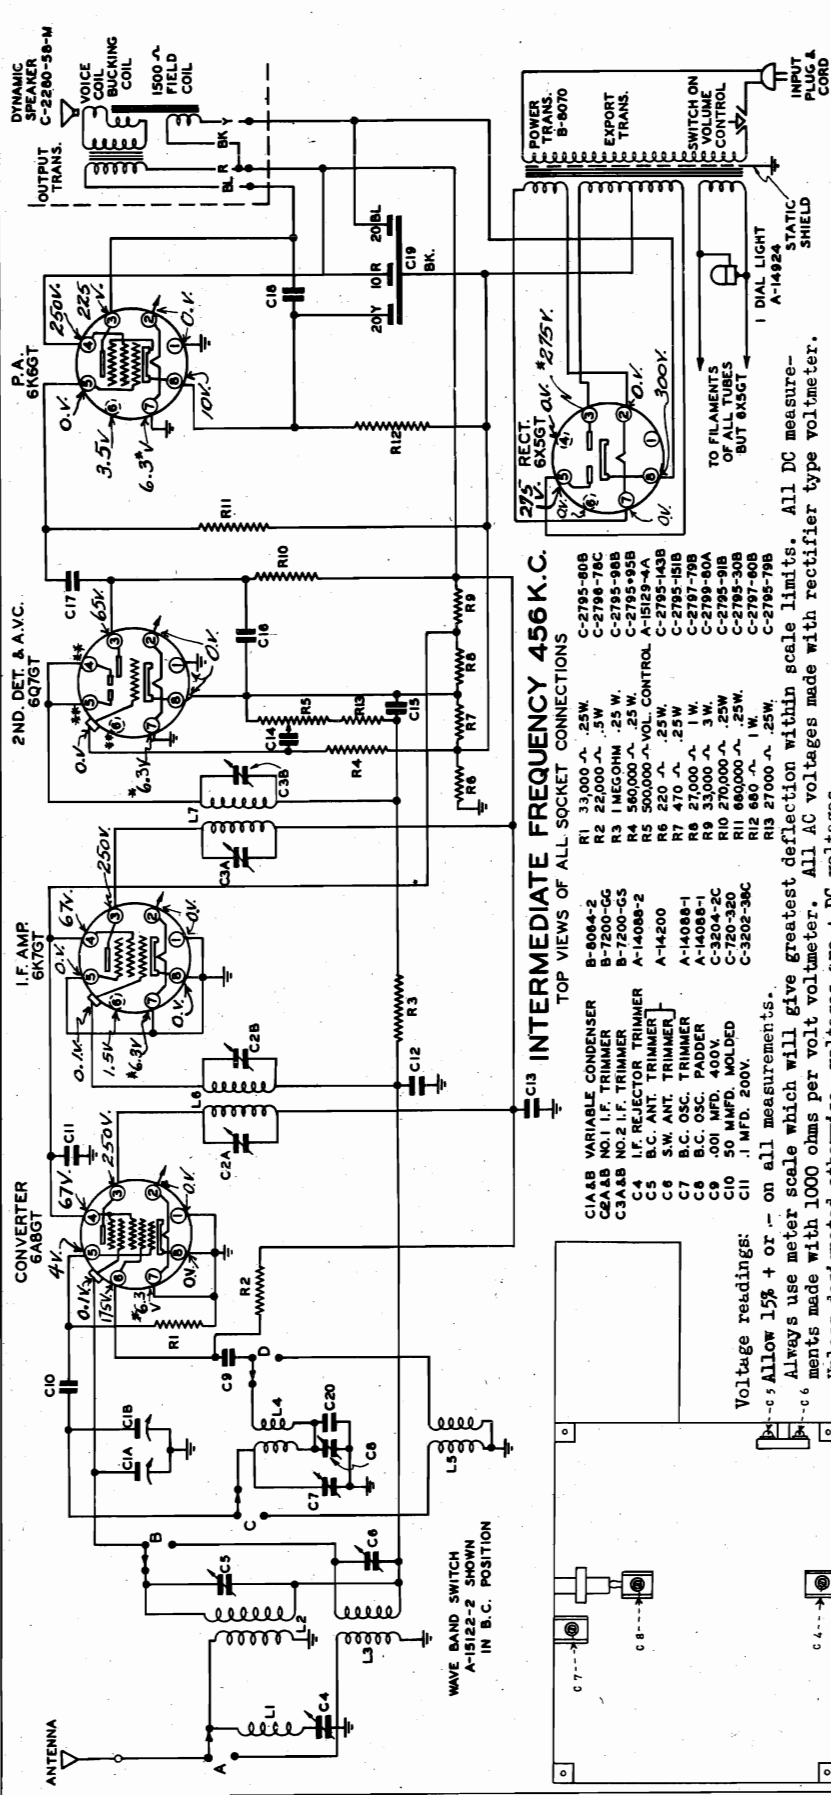

INTERMEDIATE FREQUENCY 456 K.C.


- TOP VIEWS OF ALL SOCKET CONNECTIONS
- R1 33,000 Ω . 25W
 - R2 22,000 Ω . 5W
 - R3 1 MEGOHM .25 W.
 - R4 560,000 Ω . 25 W.
 - R5 500,000 Ω . VOL. CONTROL
 - R6 220 Ω . 25W
 - R7 470 Ω . 25W
 - R8 27,000 Ω . 1W.
 - R9 33,000 Ω . 3W.
 - R10 270,000 Ω . 25W
 - R11 660,000 Ω . 25W
 - R12 680 Ω . 1W.
 - R13 27,000 Ω . 25W
 - R14 27,000 Ω . 25W
- C1A,B VARIABLE CONDENSER B-8064-2
 C1A,B NO.2 I.F. TRIMMER B-7200-56
 C1A,B NO.1 I.F. TRIMMER B-7200-55
 C5 I.F. REJECTOR TRIMMER A-14088-2
 C6 S.W. ANT. TRIMMER A-14200
 C7 S.W. ANT. TRIMMER A-14200
 C8 B.C. OSC. TRIMMER A-14088-1
 C9 B.C. OSC. PADDER A-14088-1
 C10 .001 MFD. 400V C-3204-2C
 C11 50 MMFD. MOLDED C-720-320
 C12 .1 MFD. 200V C-3202-38C
- L1 150 OHM ANTENNA COIL A-15122-2
 L2 B.C. ANT. COIL A-15231
 L3 S.W. ANT. COIL A-14662-5
 L4 S.W. OSC. COIL A-15232
 L5 S.W. OSC. COIL A-15233
 L6 NO.1 I.F. COIL A-12064-34
 L7 NO.2 I.F. COIL A-12064-17

Voltage readings: C-5; Allow 1% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages are + DC voltages. *AC volts. **Cannot be measured with Weston Analyzer #665 Type 2. (Original) Effective June 30, 1939

ALIGNMENT CHART


OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING COND. SETTING	TRIMMER	REMARKS
1	(Set dial pointer at last calibration mark with tuning condenser plates flush)							
2	I. F.	6A7 Grid.	.1 mf.	456 KC	BC	Open	C3 A,B	2nd I. F.
3	Rejector	Ant.	200mmf.	456 KC	BC	Closed	C2 A,B	1st. I. F.
4	Broad-cast Band	Ant.	200mmf.	1500 KC	BC	1500 KC	C7	Adjust to minimum Peak Accurately
5	(Repeat operation 4)			600 KC	BC	600 KC	C5	Peak Accurately
6	(Check calibration and sensitivity at 600 KC, 900 KC and 1500 KC)							
7	S. W. Band	Ant.		18 MC	SW	18 MC	C6	**
8	(Check calibration and sensitivity at 18 MC and 6 MC)							
9	(Check operations 1 to 9 inclusive)							
10	100 ohm and 200mmf in series							

** Rock tuning condenser while trimming for maximum output.

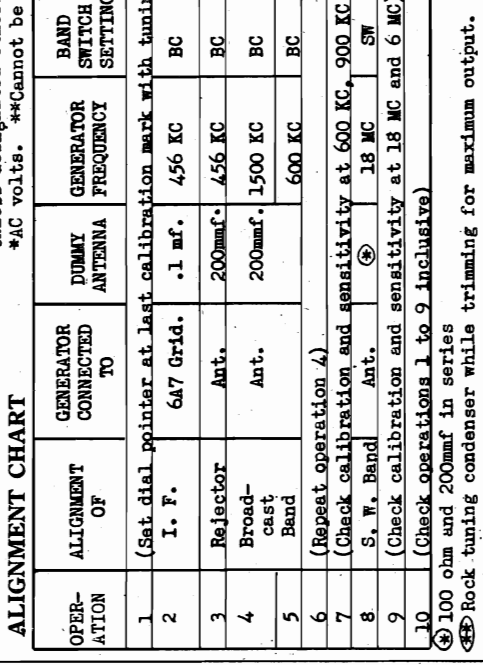

SPARKS WITHINGTON CO.

MODEL 590-1
Schematic, Changes

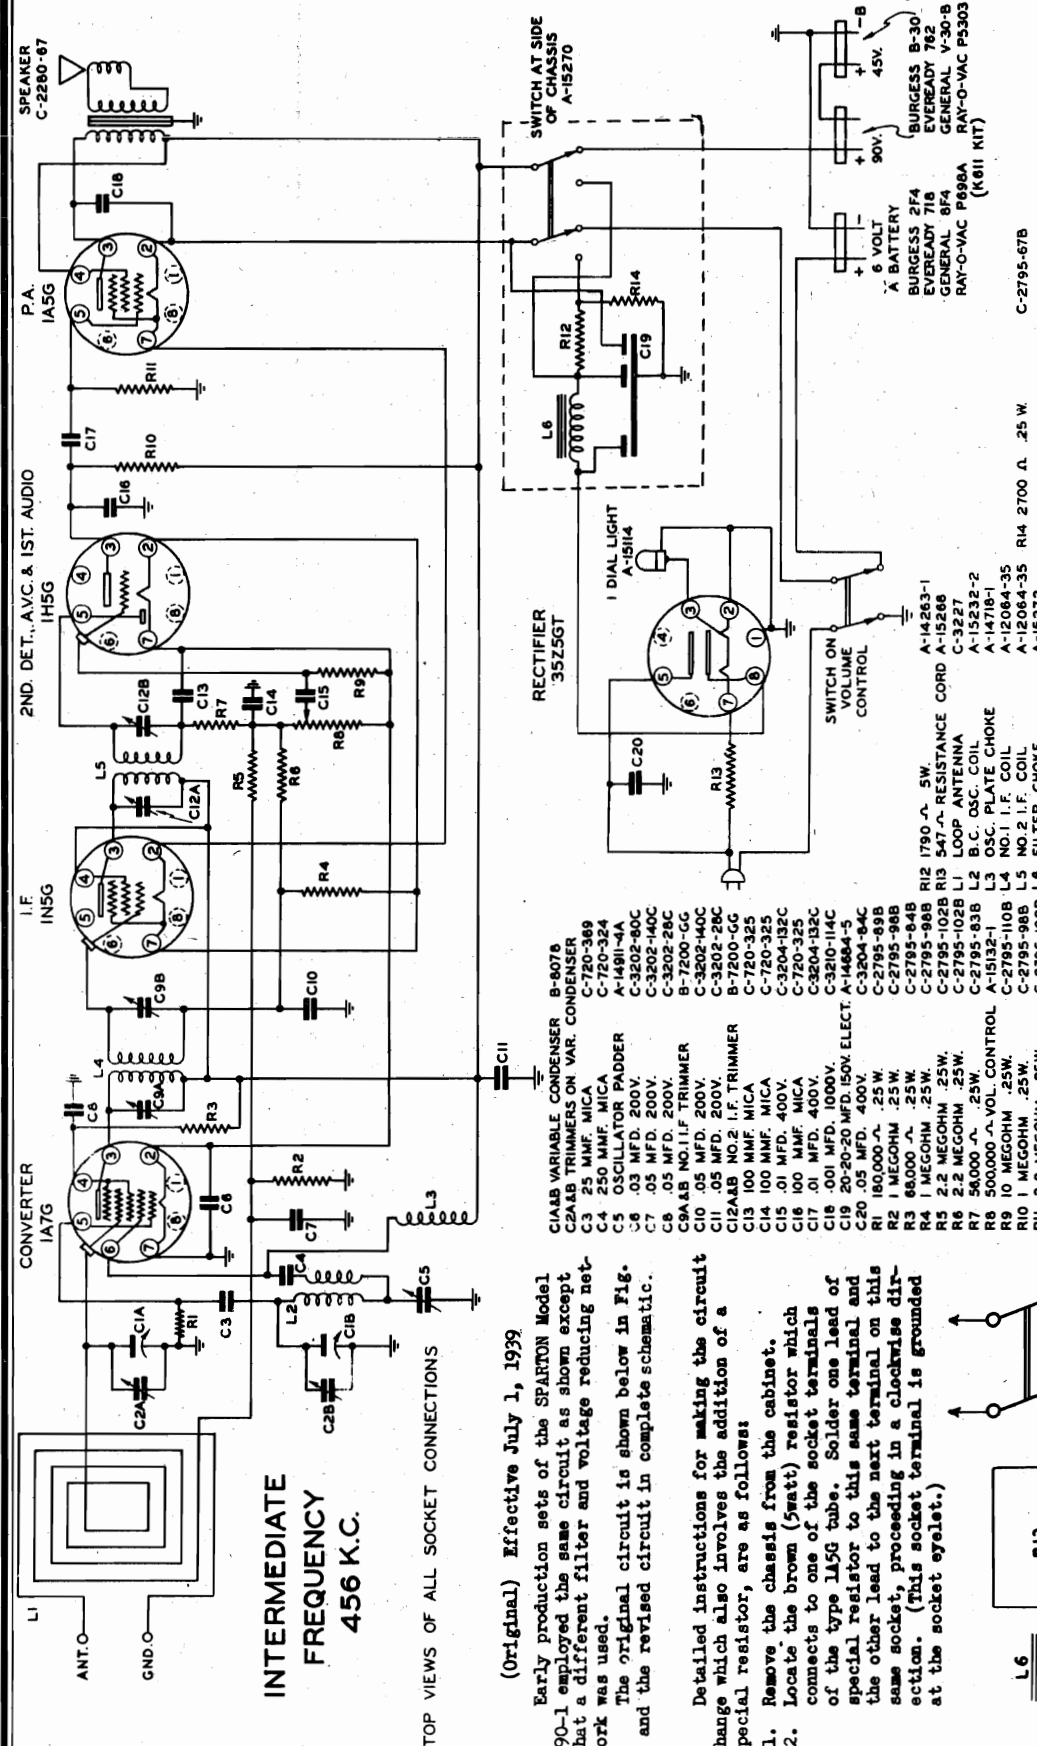


(Original) Effective July 1, 1939

Early production sets of the SPARTON Model 590-1 employed the same circuit as shown except that a different filter and voltage reducing network was used.

The original circuit is shown below in Fig. 1 and the revised circuit in complete schematic.

Detailed instructions for making the circuit change which also involves the addition of a special resistor, are as follows:

1. Remove the chassis from the cabinet.
2. Locate the brown (5 watt) resistor which connects to one of the socket terminals of the type 1A5G tube. Solder one lead of special resistor to this same terminal and the other lead to the next terminal on this same socket, proceeding in a clockwise direction. (This socket terminal is grounded at the socket eyelet.)

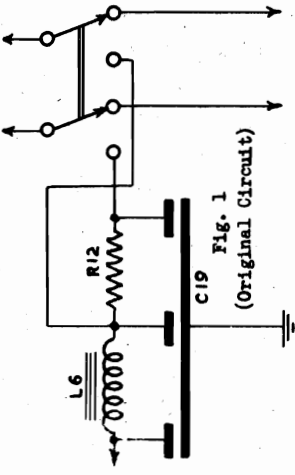

3. Clip off excess (unused) wire from resistor leads and be sure resistor (and resistor leads) do not touch other wires or parts of chassis.

5. Follow this wire to the point where it connects to the change-over (transfer) switch. Unsolder the yellow and black wire at this connection and connect it to the middle switch terminal. (The middle terminal already has another yellow and black wire as well as a condenser lead covered with black insulation connected to it. Do not disturb these connections.)
6. All soldered connections should be made clearly and carefully.
7. Install chassis in cabinet.

(First Revision)

Effective July 19, 1939

MODEL 590-1
Alignment, Voltage
Trimmers, Socket

SPARKS WITHINGTON CO.

VOLTAGE CHART

Receiver Operated on: AC Supply
Line Voltage: 117 Volts

Volume Control on Full
Dial Tuned to Quiet Channel

TUBE	FUNCTION	Voltage of Socket Prongs to Gnd. (See Prong Nos. on Schematic Diagram)									
		No.1	No.2	No.3	No.4	No.5	No.6	No.7	No.8	Grid Cap	
1A7G	Converter	90	1.5	92	28	0	90	0	90	0	
1N5G	I. F. Amplifier	0	4.4	92	92	0	6	2.8	0	0	
1H5G	Det. AVC. Audio	0	2.8	0*	0	0	0	1.5	0	0	
1A5G	P. A.	0	5.8	88	92	0	0	4.4	5.8	-	
35Z5GT	Rectifier	0	0	1.8	0	120	0	28	152	-	


Notes: Voltage and resistance readings are for schematic diagram Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All measurements made with Weston Selective Analyzer No. 665, Type 2. (1000 ohms per volt)

*Cannot be measured with Weston Selective Analyzer No. 665, Type 2.

ALIGNMENT CHART


OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	TUNING CONDENSER SETTING	TRIMMER	REMARKS
1	(Set pointer parallel with horizontal lines when condenser plates are flush)						
2	I. F.	1A7G Grid	.1 mf.	456KC	Open	C 12 A & B	2nd I. F.
3	Broadcast Band	Separate Loop*	*	1500KC	1500KC	C 9 A & B	1st I. F.
						C 2B Oac.	Peak Accurately*
4				600KC	600KC	C 2A Ant.	Peak Accurately*
						C 5 Pad.	Peak Accurately*
5	(Repeat operation 3)						
6	(Check calibration and sensitivity at 600 KC, 900 KC and 1500 KC)						
7	(Check operations 1 to 6 inclusive)						

*Preliminary alignment of antenna and oscillator adjustments may be made with chassis out of cabinet. Final alignment must be made with chassis installed in cabinet and with back cover snapped shut. For final alignment it is recommended that an extra Model 590-1 Loop Antenna (Part No. C-3327) be obtained. Connect generator "Ant" to loop terminal marked "Grid" and generator "Gnd" to loop terminal marked "AVC". With back cover of set snapped shut, place the extra loop directly in back of the Model 590-1 being aligned so that it will be parallel with the loop inside the set and from one to three feet distant. The antenna trimmer, oscillator trimmer and oscillator padder can be reached by removing glove buttons in top of cabinet. (See chassis diagram.)

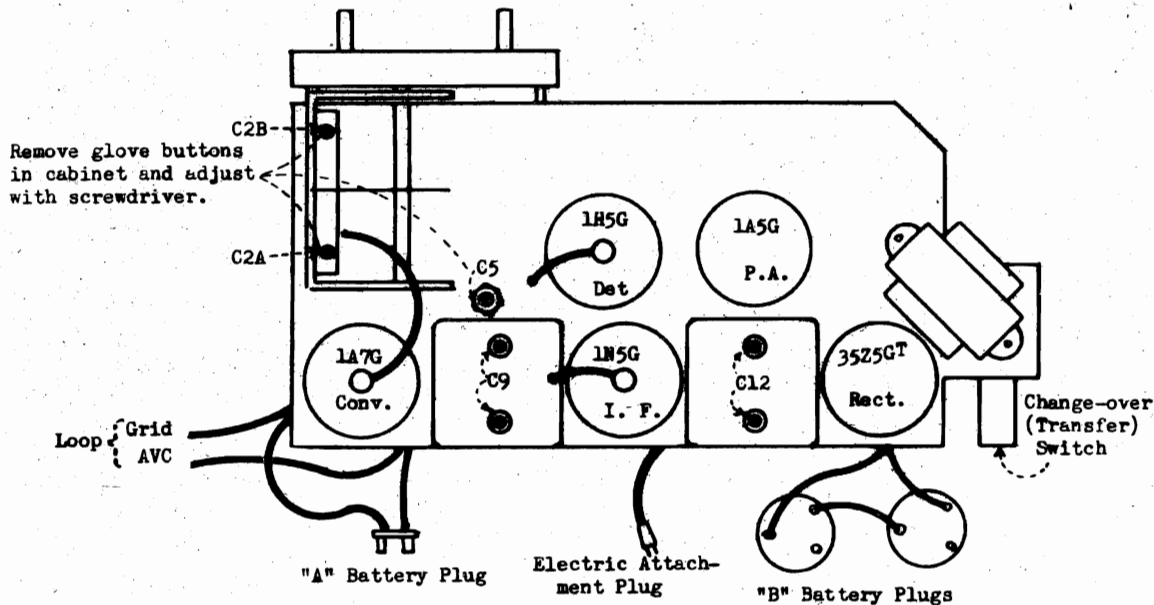

SPARKS WITHINGTON CO.

MODEL 58CX
Schematic, Voltage, Socket
Alignment, Trimmers

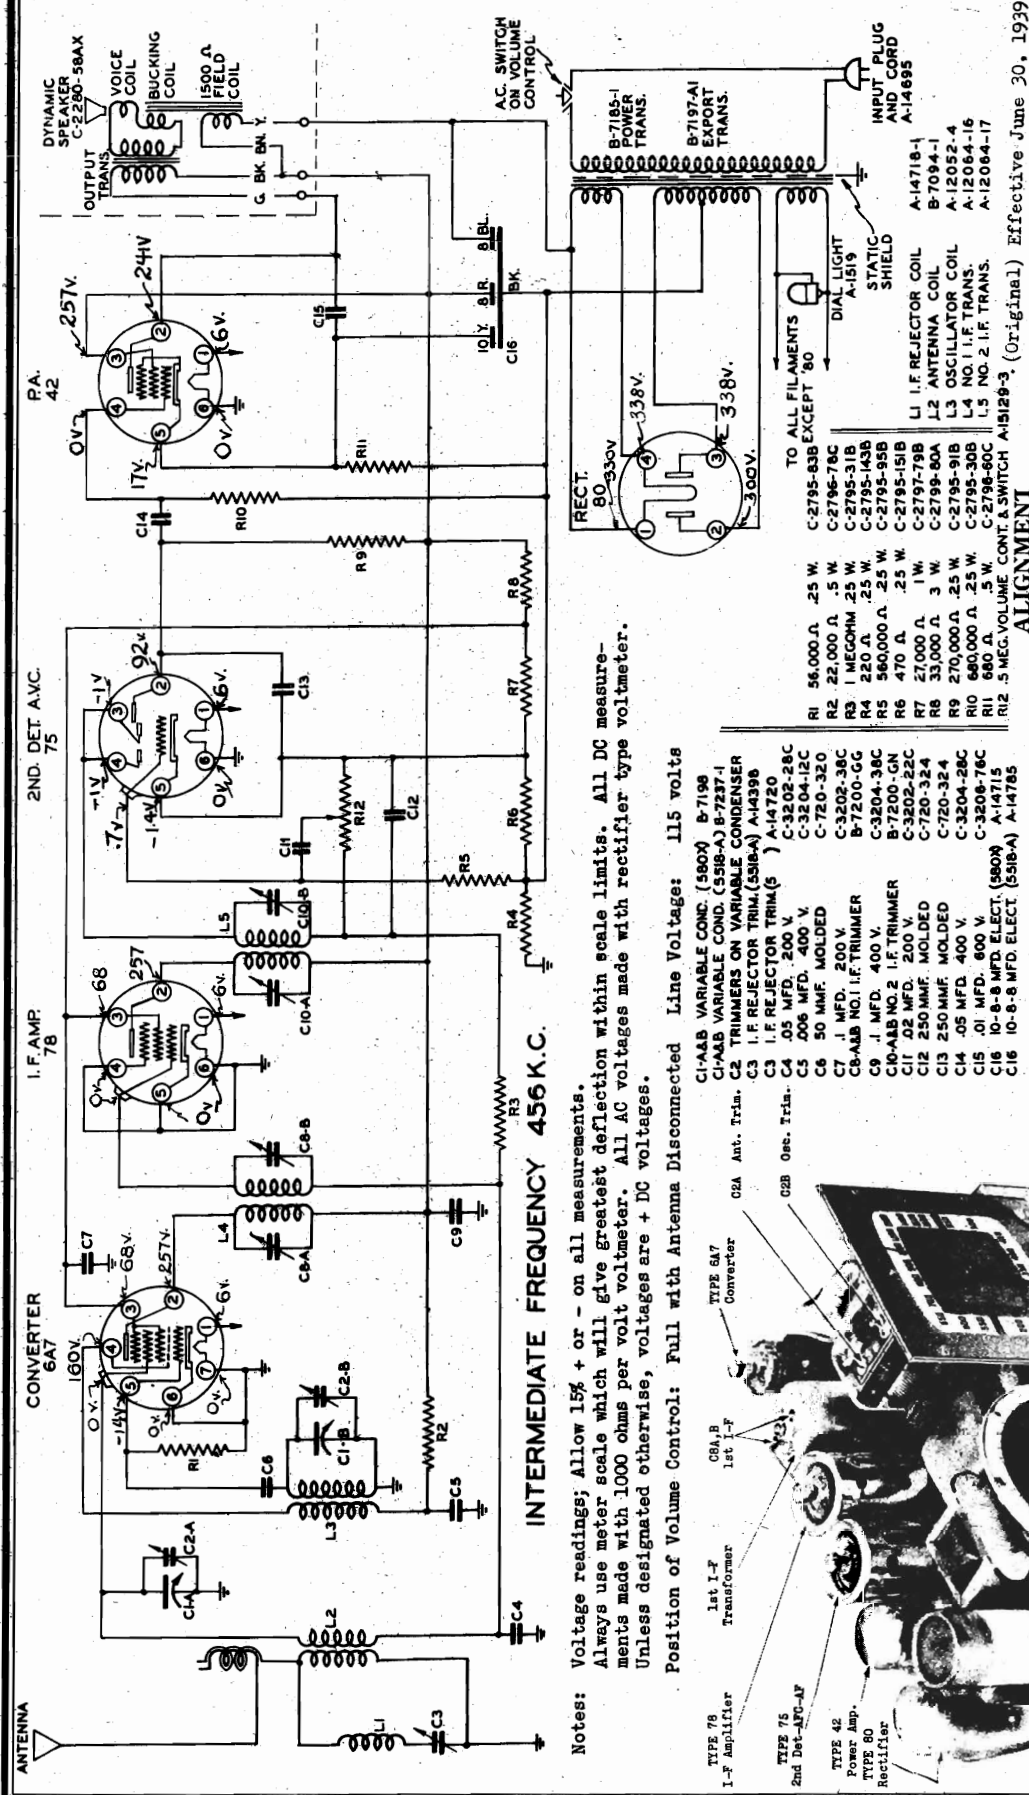


INTERMEDIATE FREQUENCY 456 K.C.

Notes: Voltage readings; Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages are + DC voltages.

Position of Volume Control: Full with Antenna Disconnected

- Line Voltage: 115 volts
- C1-AAB VARIABLE COND. (580X) B-7198
 - C1-AB VARIABLE COND. (5818-A) B-7237-1
 - C2 TRIMMERS ON VARIABLE CONDENSER
 - C3 I.F. REJECTOR TRIM (5818-A) A-14398
 - C3 I.F. REJECTOR TRIM (5) A-14720
 - C4 .05 MFD. 200 V. C-3202-28C
 - C5 .005 MFD. 400 V. C-3204-12C
 - C6 50 MMF. MOLDED
 - C7 .1 MFD. 200 V. C-3202-36C
 - C8-ABB NO.1 I.F. TRIMMER B-7200-GG
 - C9 .1 MFD. 400 V. C-3204-36C
 - C10-ABB NO.2 I.F. TRIMMER B-7200-GN
 - C11 .02 MFD. 200 V. C-3202-22C
 - C12 250 MMF. MOLDED C-720-32A
 - C13 250 MMF. MOLDED C-720-32A
 - C14 .05 MFD. 400 V. C-3204-28C
 - C15 .01 MFD. 600 V. C-3208-76C
 - C16 10-8 MFD. ELECT. (580X) A-14715
 - C16 10-8 MFD. ELECT. (5818-A) A-14715


OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	TUNING COND. SETTING	TRIMMER	REMARKS
1	(Set dial pointer to end of scale with condenser gang closed)						
2	I.F.	6A7 Grid	.1 mf.	456	Closed	C10 A,B	(2nd I.F.)
3	Rejector Band	Ant.	150 mmf.	456	Closed	C8 A,B	(1st I.F.)
4	Broadcast	Ant.	150 mmf.	1500		C2 A	Adjust to min.
5	(Check for dial reading and sensitivity at 600 kc., 1000 kc.)					C2 B	Adj. Sec.
6	(Check operations 1 to 5 inclusive)						

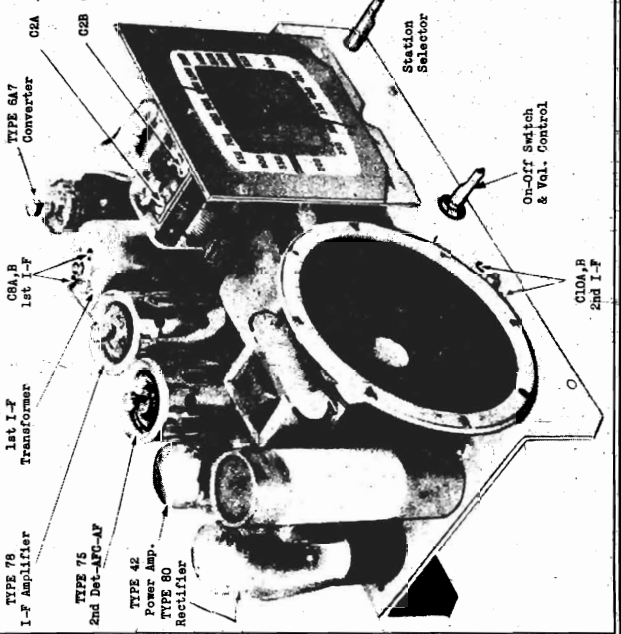

ALIGNMENT Effective June 30, 1939

MODELS 620M, 690M
Schematic, Voltage, Socket
Alignment, Trimmers

SPARKS WITHINGTON CO.

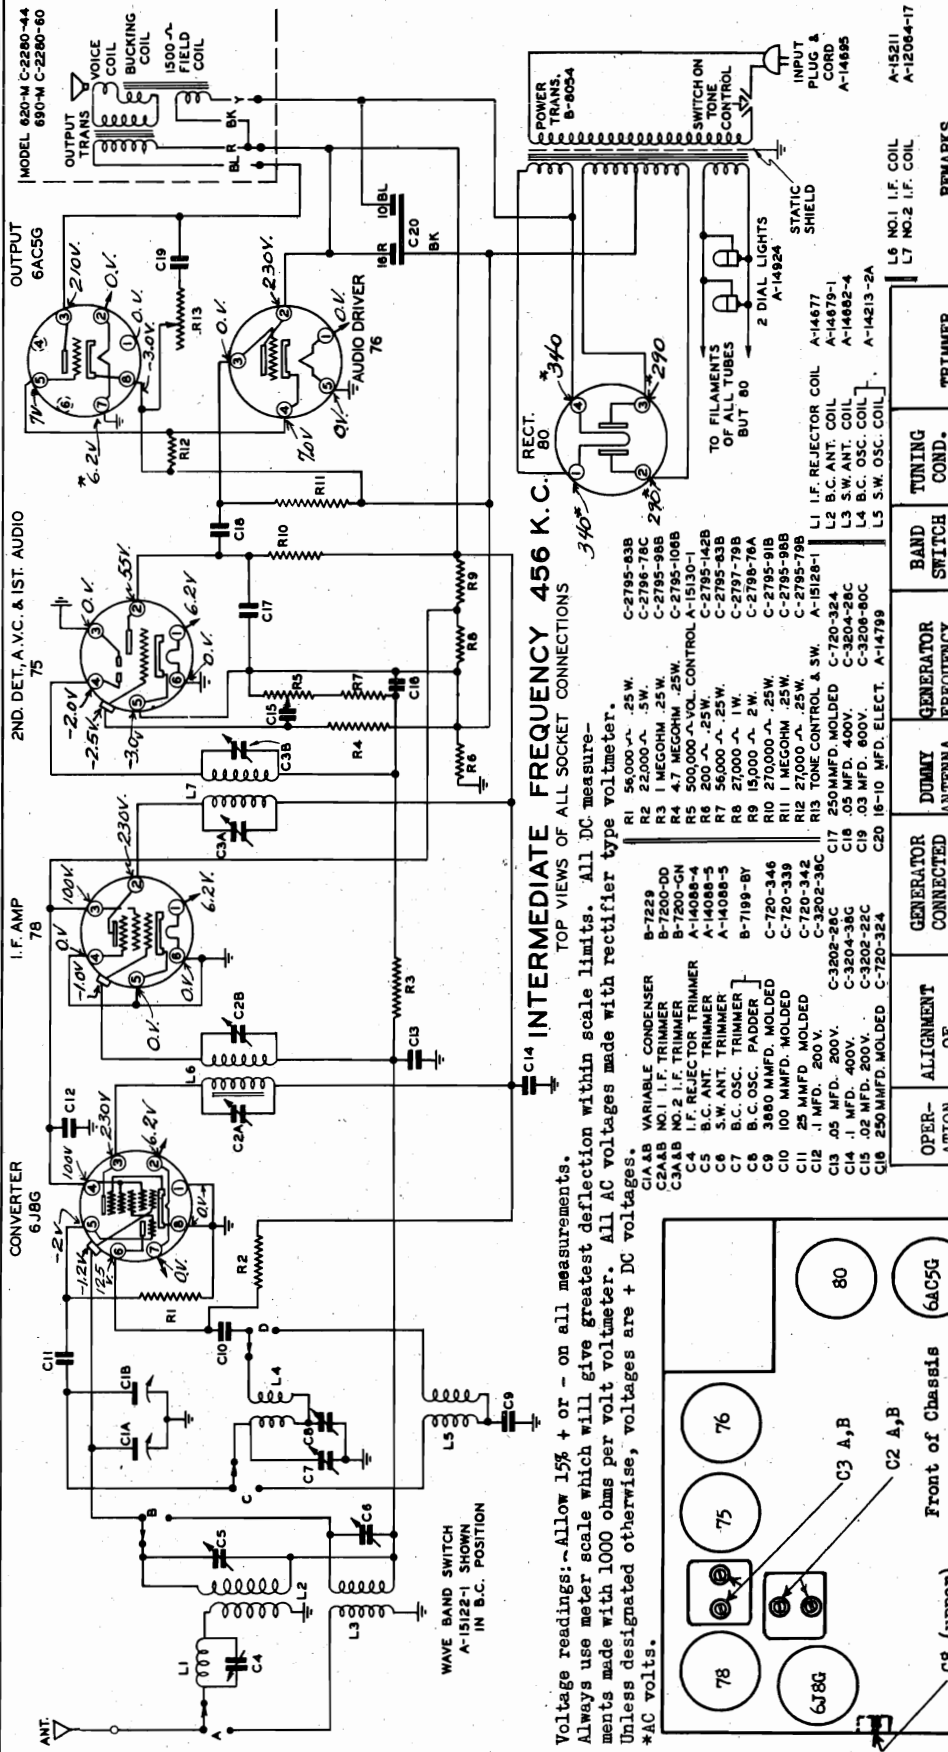


INTERMEDIATE FREQUENCY 456 K.C.

TOP VIEWS OF ALL SOCKET CONNECTIONS
Voltage readings: Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages are + DC voltages. Unless designated otherwise, voltages are + DC voltages. *AC volts.

OPERATION OF GENERATOR CONNECTED TO DUMMY ANTENNA

OPERATION	ALIGNMENT OF GENERATOR TO	DUMMY ANTENNA	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING COND. SETTING	TRIMMER	REMARKS
1	(Set dial pointer to last mark on scale when condenser plates are flush)						
2	I.F.	6J8G Grid	.1 mf.	456 KC	BC	Open	2nd I-F transformer
3	Reflector	Ant.	200 mmf.	456 KC	BC	Closed	1st I-F transformer
4	Broad-cast	Ant.	1500 KC	1500 KC	BC	C70sc trim	Adjust to minimum Peak accurately
5	Band	Ant.	600 KC	600 KC	BC	C5 Ant trim	Peak accurately
6	(Repeat operations 5 and 6)					C8 Osc pad.	Peak accurately
7	(Check calibration and sensitivity at 600 KC, 1000 KC and 1500 KC)						
8	S.W. Band	Ant.	* 18 MC	SW	18 MC	C6 Ant. trim	**
9	(Check calibration and sensitivity at 6 MC and 18 MC)						
10	(Check operations 1 to 11 inclusive)						
11	(Check operations 1 to 11 inclusive)						
12	(Check operations 1 to 11 inclusive)						



Trimmer Locations under Chassis


Front of Chassis (top view)

Front of Chassis (bottom view)

*100 ohm and 200 mmf. in series.
**Rock variable condenser slightly while adjusting for maximum output. (Original) Effective June 30, 1939

MODELS 640LX, 740LX, 740LX-PA
SPARKS WITHINGTON CO. Schematic

SPARTON SUPERHETERODYNE MODELS 640LX, 740LX & 740LX-PA
INTERMEDIATE FREQUENCY 456 K.C.
TOP VIEWS OF ALL SOCKET CONNECTIONS

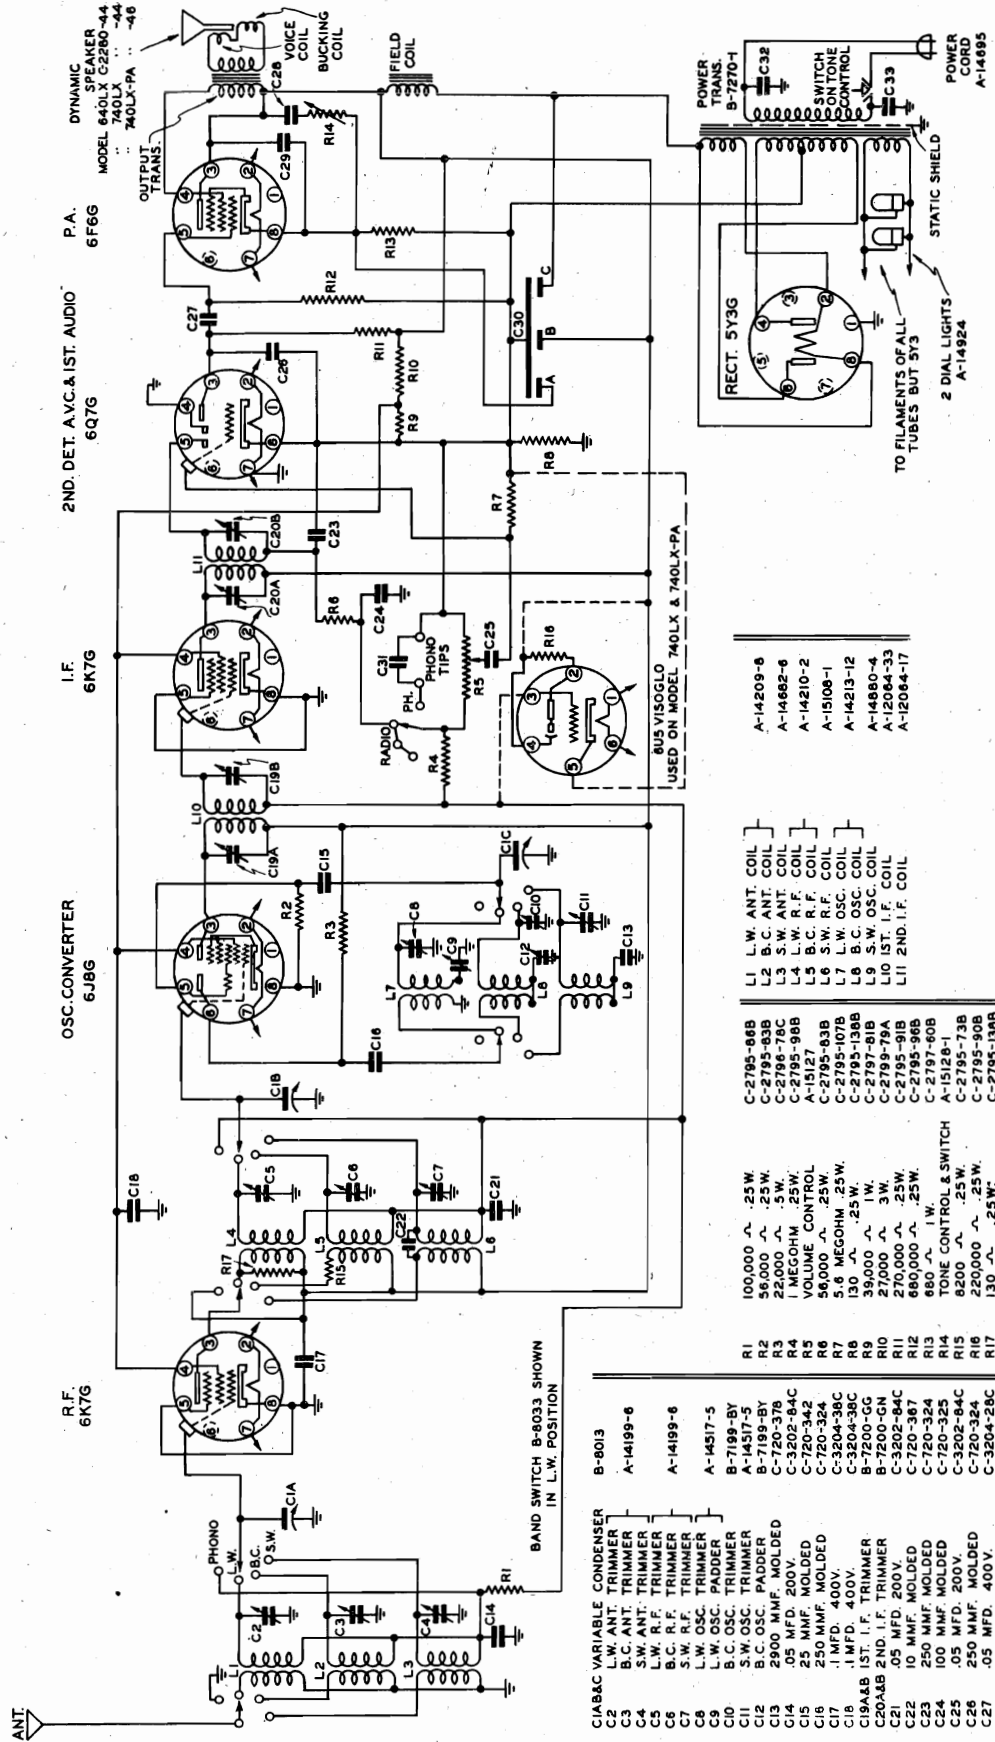

- LI L.W. ANT. COIL
- L2 B.C. ANT. COIL
- L3 S.W. ANT. COIL
- L4 L.W. R.F. COIL
- L5 B.C. R.F. COIL
- L6 S.W. R.F. COIL
- L7 L.W. OSC. COIL
- L8 S.W. OSC. COIL
- L9 S.W. OSC. COIL
- L10 1ST. I.F. COIL
- L11 2ND. I.F. COIL

- C-2795-86B
- C-2795-83B
- C-2796-78C
- C-2795-98B
- A-15127-83B
- C-2795-83B
- C-2795-136B
- C-2797-81B
- C-2799-79A
- C-2795-91B
- C-2795-96B
- C-2797-60B
- A-15128-1
- C-2795-73B
- C-2795-90B
- C-2795-136B

- 100,000 μ .25W.
- 56,000 μ .25W.
- 22,000 μ .5W.
- MEG OHM .25W.
- 50,000 μ .25W.
- 5.6 MEG OHM .25W.
- 130 μ .25W.
- 39,000 μ 1W.
- 27,000 μ 3W.
- 270,000 μ .25W.
- 680,000 μ .25W.
- 680 μ 1W.
- 8200 μ .25W.
- 8200 μ .25W.
- 220,000 μ .25W.
- 130 μ .25W.

- R1 B-8013
- A-14199-6
- A-14199-6
- A-14517-5
- B-7199-BY
- A-14517-5
- B-7199-BY
- C-3200-38C
- C-3200-38C
- C-720-32A
- C-720-32A
- C-3204-38C
- C-3204-38C
- B-7200-GG
- B-7200-GN
- C-3202-84C
- C-720-387
- C-720-324
- C-3202-84C
- C-720-324
- C-3204-28C
- C-3206-80C
- C-3206-118C
- A-14684-2
- C-7202-35C
- C-720-347
- C-720-347

- CIABAC VARIABLE CONDENSER
- C2 L.W. ANT. TRIMMER
- C3 B.C. ANT. TRIMMER
- C4 S.W. ANT. TRIMMER
- C5 L.W. R.F. TRIMMER
- C6 B.C. R.F. TRIMMER
- C7 S.W. R.F. TRIMMER
- C8 L.W. OSC. TRIMMER
- C9 B.C. OSC. TRIMMER
- C10 S.W. OSC. TRIMMER
- C11 2000 MUF. MOLDED
- C12 250 MUF. MOLDED
- C13 25 MUF. MOLDED
- C14 250 MUF. MOLDED
- C15 .1 MFD. 400V.
- C16 .1 MFD. 400V.
- C17 .1 MFD. 400V.
- C18 .1 MFD. 400V.
- C19AAB 1ST. I.F. TRIMMER
- C20AAB 2ND. I.F. TRIMMER
- C21 .05 MFD. 200V.
- C22 10 MUF. MOLDED
- C23 250 MUF. MOLDED
- C24 100 MUF. MOLDED
- C25 .05 MFD. 200V.
- C26 250 MUF. MOLDED
- C27 .05 MFD. 400V.
- C28 .03 MFD. 600V.
- C29 .03 MFD. 600V.
- C30 .03 MFD. 600V.
- C31 .008 MFD. MOLDED
- C32 .008 MFD. MOLDED
- C33 .008 MFD. MOLDED

(Original) Effective September 1, 1939

MODELS 640LX, 740LX
740LX-PA

SPARKS WITHINGTON CO.
VOLTAGE CHART

MODELS 640SX, 740SX
740SX-PA
Voltage, Alignment, Trimmers

Line Voltage: 115 volts
Position of Band Switch: Broadcast

Position of Volume Control: Full with Antenna Disconnected
Position of Radio-Phono Switch: Radio



Tube	Function	Voltage of Socket Prongs to Gnd. See Prong Nos. on Schematic Diagram								
		No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 7	No. 8	Grid Cap
6K7G	R-F Amp.	0	0	230	90	0	-	6.3*	0	.1
6J8G	Osc. Converter	0	0	275	90	.2	135	6.3*	0	1.25
6K7G	I. F. Amplifier	0	0	275	90	0	-	6.3*	0	1.25
6Q7G	2nd Det. AVC AF.	0	0	50	1.	0	3	6.3*	3.5	3
6F6G	Power Amplifier	0	0	255	275	**	3.5	6.3*	20	-
5Y3G	Rectifier	0	375	-	350*	-	350*	-	375	-
6U5	Viso-Glo	0	150	.5	300	4	6.3*	-	-	-

Notes: Voltage readings are for schematic diagram. Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages in table are + DC voltages.
*AC volts. **Cannot test with Weston Analyzer No. 665 Type 2.


ALIGNMENT CHART

OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING COND. SETTING	TRIMMER	Adjust all Trimmers for Maximum Output	
1	(Set pointer even with last calibration mark when condenser plates are flush.)								
2	I. F.	6J8G	.1 mf	456 KC	BC	Open	C20 A,B C19, A,B	2nd I. F. 1st I. F.	
3	Broadcast Band	Ant.	200 mmf	1400 KC	BC	1400KC	C8 FOR "SX" C5 "SX" C2 MODELS	C10 FOR "LX" C6 "LX" C3 MODELS	BC Oscillator BC R.F. BC Antenna
4				600 KC	BC	600KC	C9	C12	BC Padder
5	(Repeat operation 3)								
6	(Check calibration and sensitivity at 600 KC, 900 KC and 1400 KC)								
7	1st SW Band	Ant.	100 ohm 200 mmf series	6. MC	1 SW	6. MC	C10 C6 C3	1SW Oscillator 1SW R-F 1SW Antenna	
8	(Check calibration and sensitivity at 2.5MC and 6.MC.)								
9	2nd SW Band	Ant.	100 ohm 200 mmf series	21 MC	2 SW	21. MC	C11 C7 C4	2SW Oscillator 2SW R-F 2SW Antenna	
10	(Check calibration and sensitivity at 7.5 MC, 18. MC and 21. MC)								
11	(Check operation 1 to 10 inclusive.)								
7	Long Wave Band	Ant.	200 mmf	400KC	LW	400KC	C8 C5 C2	LW Oscillator LW R-F LW Antenna	
8				150KC	LW	150KC	C9	LW Padder	
9	(Repeat operation 7)								
10	(Check calibration and sensitivity at 400 KC, 300 KC and 150 KC)								
11	Short Wave Band	Ant.	100 ohm 200 mmf series	18 MC	SW	18 MC	C11 C7 C4	SW Oscillator SW R-F SW Antenna	
12	(Check calibration and sensitivity at 6. MC, 9. MC and 18. MC)								
13	(Check operation 1 to 12 inclusive.)								


"SX" Models
"LX" Models

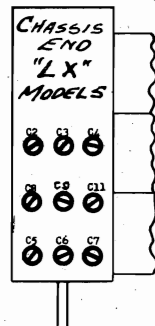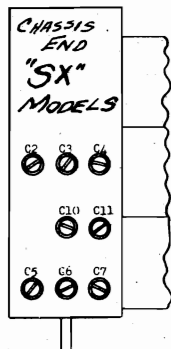

** LOCATION OF TRIMMERS C10 AND C12 IN "LX" MODELS

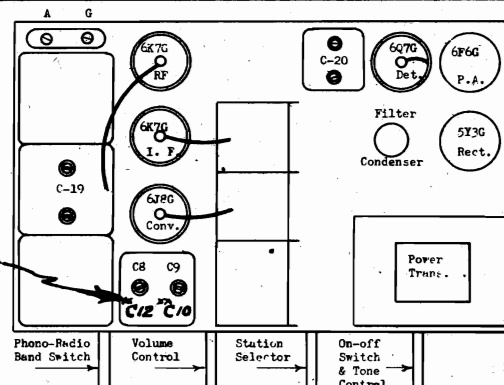

MODELS 640SX, 740SX, 740SX-PA
 SPARKS WITHINGTON CO. Schematic

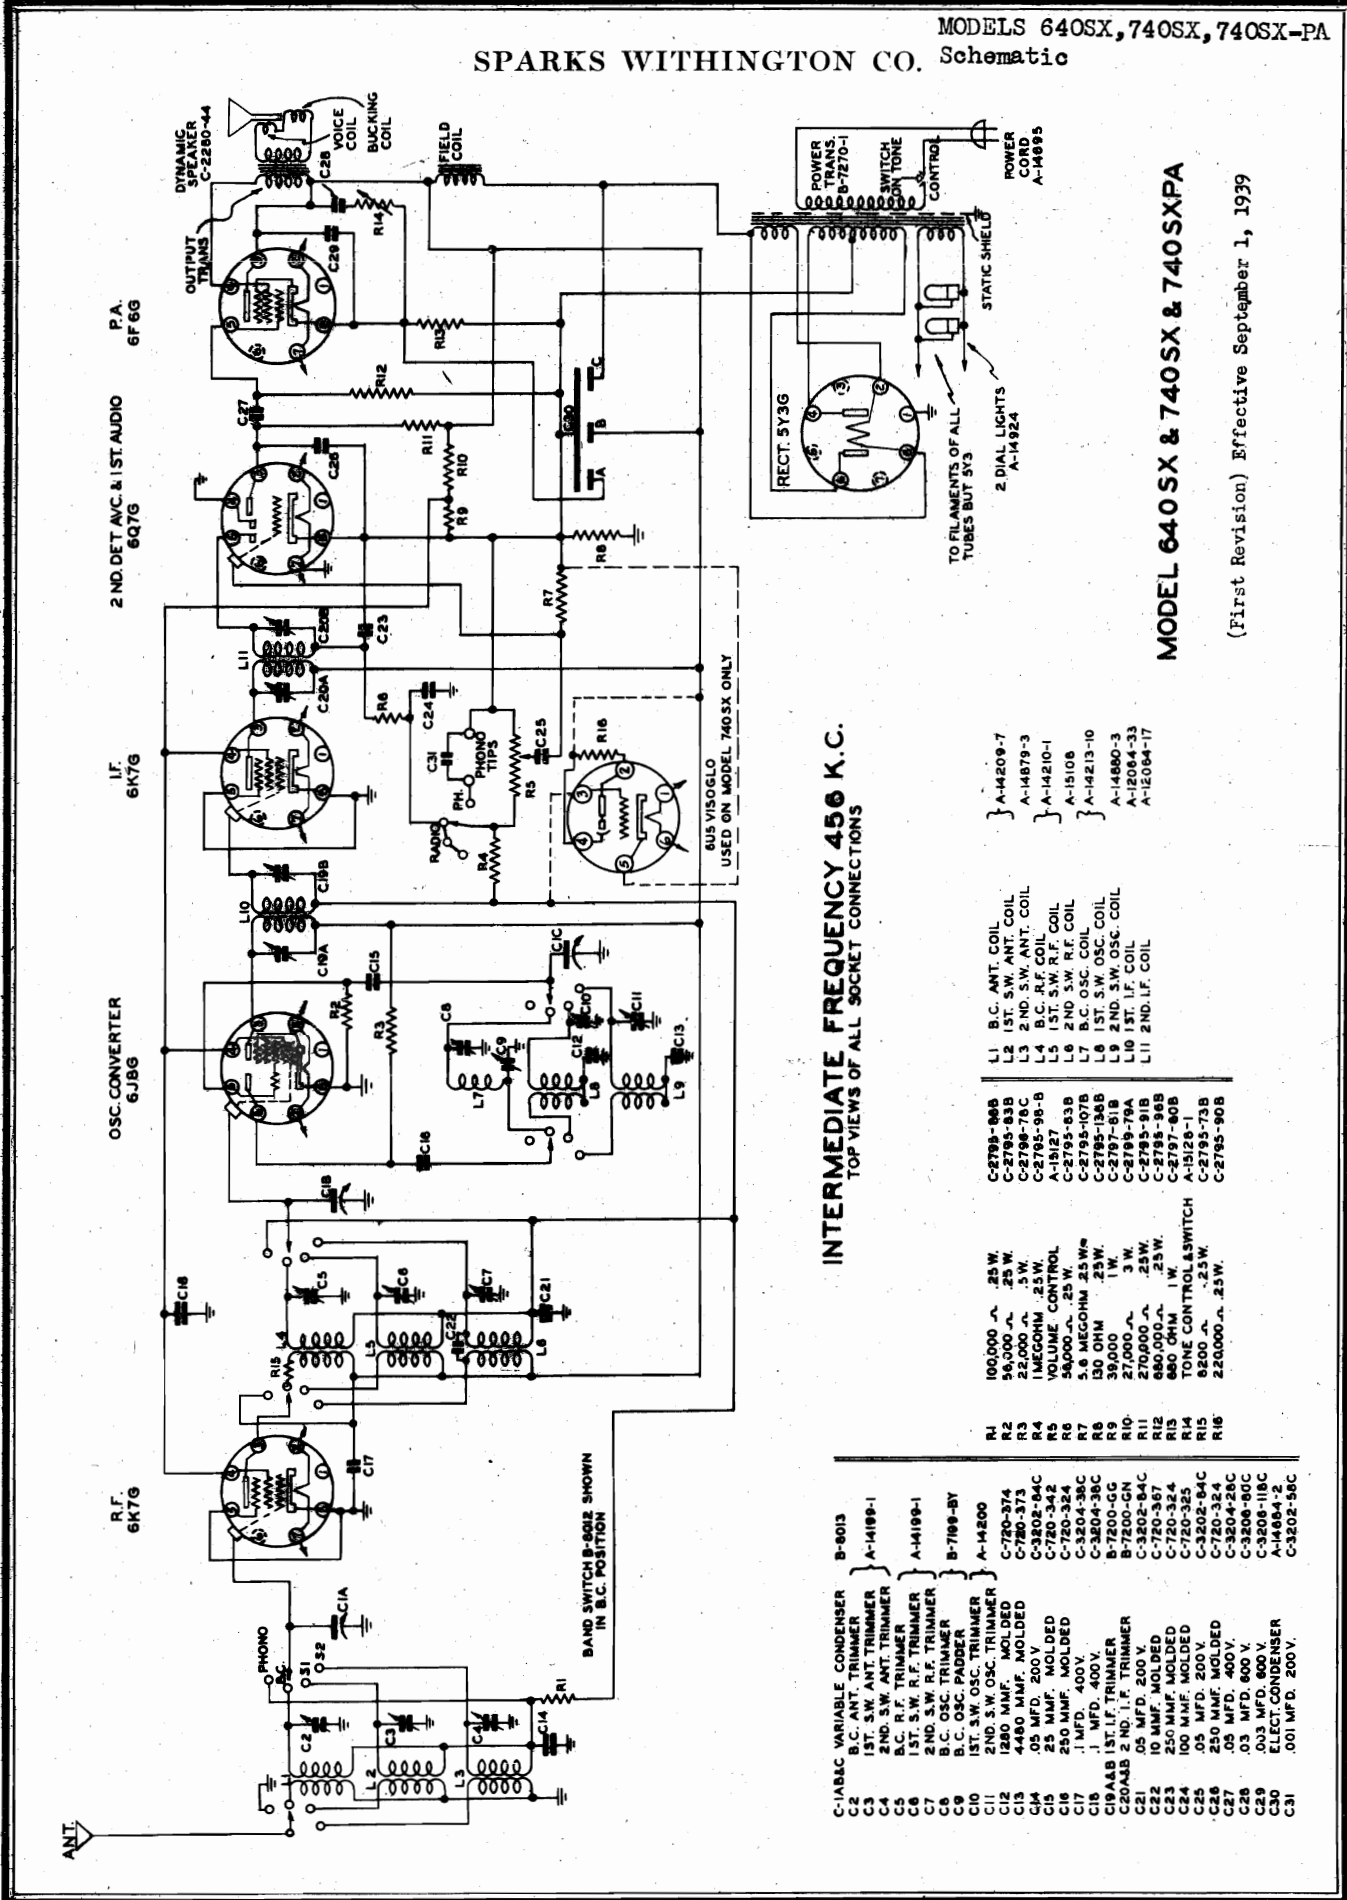

INTERMEDIATE FREQUENCY 456 K.C.
 TOP VIEWS OF ALL SOCKET CONNECTIONS

- C-1A B.C. VARIABLE CONDENSER
- C-2 B.C. ANT. TRIMMER
- C-3 1ST. S.W. ANT. TRIMMER
- C-4 2ND. S.W. ANT. TRIMMER
- C-5 B.C. R.F. TRIMMER
- C-6 1ST. S.W. R.F. TRIMMER
- C-7 2ND. S.W. R.F. TRIMMER
- C-8 B.C. OSC. TRIMMER
- C-9 B.C. OSC. PADDER
- C-10 1ST. S.W. OSC. TRIMMER
- C-11 2ND. S.W. OSC. TRIMMER
- C-12 480 MMF. MOLDED
- C-13 480 MMF. MOLDED
- C-14 .05 MFD. 200 V.
- C-15 .25 MAF. MOLDED
- C-16 250 MMF. MOLDED
- C-17 .1 MFD. 400 V.
- C-18 .1 MFD. 400 V.
- C-19 AAB 1ST. I.F. TRIMMER
- C-20 AAB 2 ND. I.F. TRIMMER
- C-21 .05 MFD. 200 V.
- C-22 10 MMF. MOLDED
- C-23 250 MMF. MOLDED
- C-24 100 MMF. MOLDED
- C-25 .05 MFD. 200 V.
- C-26 250 MMF. MOLDED
- C-27 .05 MFD. 400 V.
- C-28 .03 MFD. 600 V.
- C-29 100 MMF. ELECT. CONDENSER
- C-30 .001 MFD. 200 V.
- C-31 .001 MFD. 200 V.

- R-1 100,000 Ω .25 W.
- R-2 56,000 Ω .25 W.
- R-3 22,000 Ω .25 W.
- R-4 1 MEG OHM .25 W.
- R-5 500,000 Ω .25 W.
- R-6 500,000 Ω .25 W.
- R-7 5.6 MEG OHM .25 W.
- R-8 30 OHM .25 W.
- R-9 39,000 Ω .25 W.
- R-10 270,000 Ω .25 W.
- R-11 850,000 Ω .25 W.
- R-12 850,000 Ω .25 W.
- R-13 850 OHM .1 W.
- R-14 8200 Ω .25 W.
- R-15 8200 Ω .25 W.
- R-16 220,000 Ω .25 W.

- L-1 B.C. ANT. COIL
- L-2 1ST. S.W. ANT. COIL
- L-3 2ND. S.W. ANT. COIL
- L-4 B.C. R.F. COIL
- L-5 1ST. S.W. R.F. COIL
- L-6 2ND. S.W. R.F. COIL
- L-7 1ST. S.W. OSC. COIL
- L-8 2ND. S.W. OSC. COIL
- L-9 1ST. I.F. COIL
- L-10 2ND. I.F. COIL
- L-11 2ND. I.F. COIL


- A-14209-7
- A-14879-3
- A-14210-1
- A-15106
- A-14213-10
- A-14800-3
- A-14204-33
- A-14204-17

MODEL 640SX & 740SX & 740SXPA
 (First Revision) Effective September 1, 1939

MODEL 660M

Schematic, Voltage, Socket Alignment, Trimmers


SPARKS WITHINGTON CO.

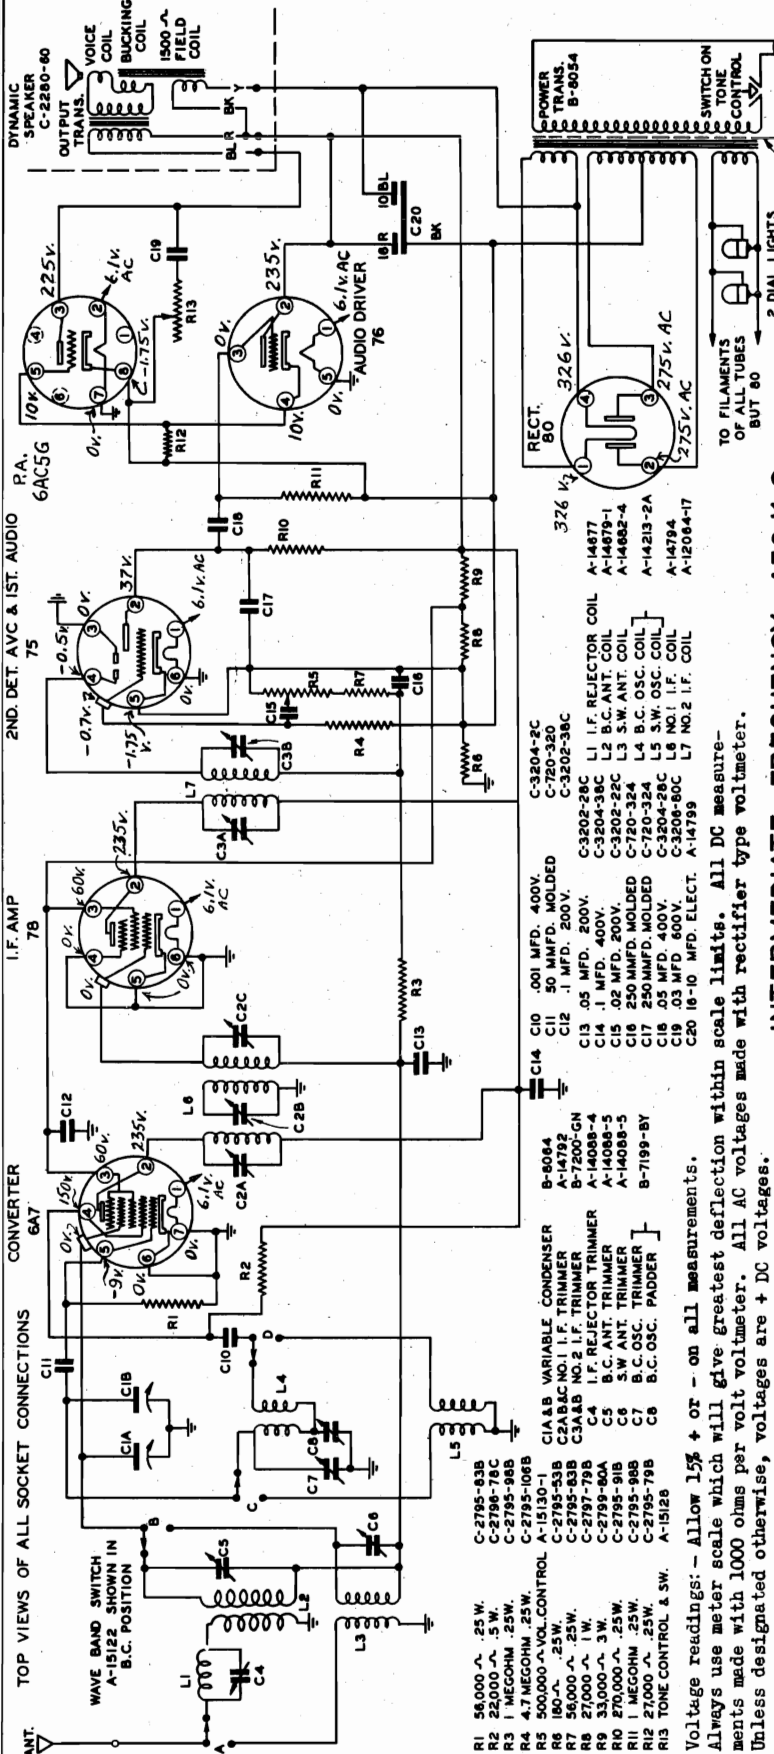

INTERMEDIATE FREQUENCY 456 K.C.

ALIGNMENT

OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA FREQUENCY	GENERATOR SWITCH SETTING	BAND SWITCH SETTING	TUNING COND. SETTING	TRIMMER	REMARKS
1	(Set dial pointer to last mark on scale when condenser plates are flush)							
2	I.F.	6A7 Grid	.1 mf.	456 KC	BC	Open	C2A, B, C2A, B, C C2B (Transfer)	Adjust to approx. peak Detune by tightening 1/2 t.
3	Reflector	Ant.	200 mmf.	456 KC	BC	Open	C4	Peak accurately*
4	Broad-cast Band	Ant.	200 mmf.	1500 KC	BC	1500 KC	C7 BC osc trim	Adjust to minimum Peak accurately
5	(Repeat operations 7 and 8)						C5 BC ant trim	Peak accurately
6	(Check calibration and sensitivity at 600 KC, 1000 KC and 1500 KC)						C8 BC osc pad.	Peak accurately
7	S.W. Band	Ant.	* 18 MC	SW	18 MC	C6 SW ant trim**		
8	(Check calibration and sensitivity at 6.0 MC and 18 MC)							
9	(Check operations 1 to 13 inclusive)							
10	*100 ohm non-inductive resistor and 200 mmf. condenser in series. (Original) Effective July 1, 1939							

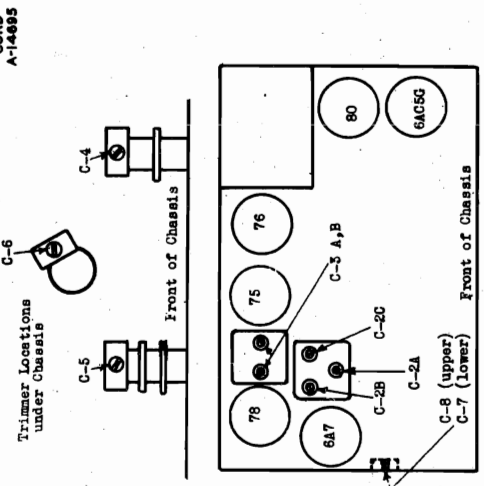

Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages are + DC voltages.


Volume readings: - Allow 15% + or - on all measurements.
Voltage readings: - Allow 15% + or - on all measurements.
Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages are + DC voltages.

SPARKS WITHINGTON CO.

MODELS 670-6L, 670-6S
Schematic, Voltage, Socket

SPARTON SUPERHETERODYNE MODELS 670-6S & 670-6L
INTERMEDIATE FREQUENCY 456 K.C.

TOP VIEWS OF ALL SOCKET CONNECTIONS

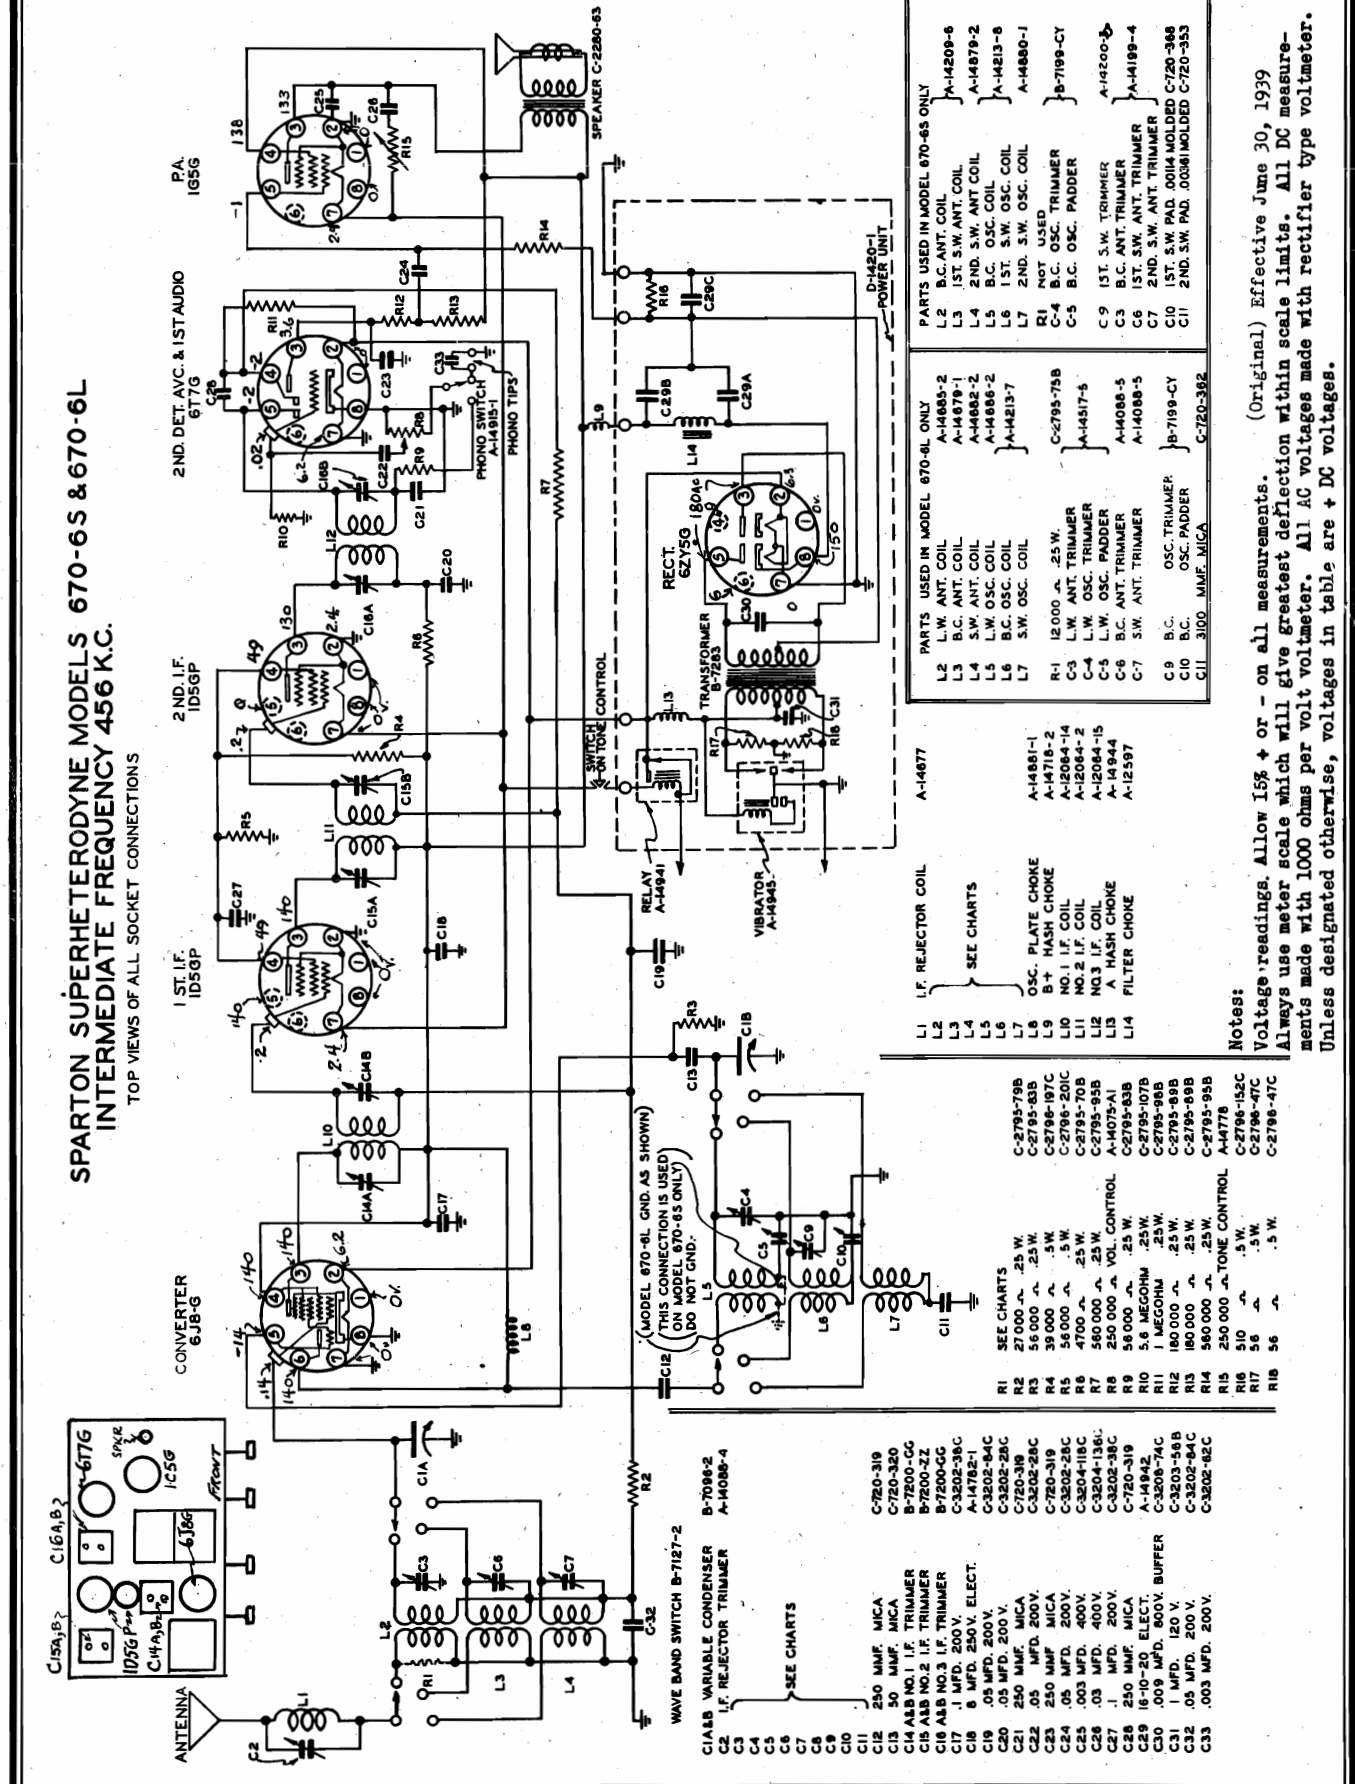

PARTS USED IN MODEL 670-6L ONLY		PARTS USED IN MODEL 670-6S ONLY	
L2	L.W. ANT. COIL	L2	B.C. ANT. COIL
L3	B.C. ANT. COIL	L3	1ST S.W. ANT. COIL
L4	S.W. ANT. COIL	L4	2ND S.W. ANT. COIL
L5	L.W. OSC. COIL	L5	B.C. OSC. COIL
L6	B.C. OSC. COIL	L6	1ST S.W. OSC. COIL
L7	S.W. OSC. COIL	L7	2ND S.W. OSC. COIL
R-1	12000 Ω .25W	R1	NOT USED
C-3	L.W. ANT. TRIMMER	C-4	B.C. OSC. TRIMMER
C-4	L.W. OSC. TRIMMER	C-5	B.C. OSC. PADDER
C-5	L.W. OSC. PADDER	C-9	1ST S.W. TRIMMER
C-6	B.C. ANT. TRIMMER	C-6	1ST S.W. ANT. TRIMMER
C-7	S.W. ANT. TRIMMER	C-7	2ND S.W. ANT. TRIMMER
C-9	B.C. OSC. TRIMMER	C-10	1ST S.W. PAD. .001M MOLDED
C-10	B.C. OSC. PADDER	C-11	2ND S.W. PAD. .003M MOLDED
C-11	3000 MMF. MICA	C-720-382	

IF REJECTOR COIL		SEE CHARTS	
L1	A-14877	L7	A-14891-1
L2		L8	A-14718-2
L3		L9	A-12064-14
L4		L10	A-12064-2
L5		L11	A-12064-15
L6		L12	A-14944
L7		L13	A-12597
L8	OSC. PLATE CHOKE	L14	
L9	B+ HASH CHOKE		
L10	NO.1 I.F. COIL		
L11	NO.2 I.F. COIL		
L12	NO.3 I.F. COIL		
L13	A HASH CHOKE		
L14	FILTER CHOKE		

SEE CHARTS	
R1	27000 Ω .25W
R2	56000 Ω .25W
R3	39000 Ω .5W
R4	56000 Ω .5W
R5	47000 Ω .25W
R6	560000 Ω .25W
R7	250000 Ω .25W
R8	56000 Ω .25W
R9	5.6 MEGOHM .25W
R10	1 MEGOHM .25W
R11	180000 Ω .25W
R12	180000 Ω .25W
R13	560000 Ω .25W
R14	250000 Ω .25W
R15	250000 Ω .25W
R16	50 Ω .5W
R17	56 Ω .5W
R18	56 Ω .5W

SEE CHARTS	
C1	250 MMF. MICA
C2	50 MMF. MICA
C3	A1B NO.1 I.F. TRIMMER
C4	B-7200-GG
C5	A1B NO.2 I.F. TRIMMER
C6	B-7200-ZZ
C7	A1B NO.3 I.F. TRIMMER
C8	C-3202-38C
C9	A-14782-1
C10	C-3202-84C
C11	C-3202-28C
C12	C-720-319
C13	C-720-320
C14	C-720-319
C15	C-3202-28C
C16	C-3202-28C
C17	C-3204-116C
C18	C-3202-38C
C19	C-720-319
C20	A-14942
C21	C-3202-74C
C22	C-3203-56B
C23	C-3202-84C
C24	C-3202-84C
C25	C-3202-82C

Notes:
Voltage readings. Allow 15% + or - on all measurements. (Original) Effective June 30, 1939
Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages in table are + DC voltages.

MODELS 670-6L, 670-6S
Alignment, Trimmers

SPARKS WITHINGTON CO.

670-6S

ALIGNMENT

OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING COND. SETTING	TRIMMER	REMARKS
1	(Set dial pointer to last calibrated mark below 550 KC)							
2	I.F.	6J9C Grid Cap	.1 mf.	456 KC	BC	(Open)	C16 A&B	3rd I.F.T.
3	Reflector Ant.		200 mmf.	456 KC	BC	(Open)	C15 A&B	2nd I.F.T.
4	Broad-cast Band		200 mmf.	1500 KC	BC	1500 KC	C14 A&B	1st I.F.T.
5	Band		200 mmf.	600 KC	B.C.	600 KC	C2	Adj. to minimum
6	(Repeat operation 4)						C4 Osc.	
7	(Check calibration and sensitivity at 600 KC, 1000 KC, & 1500 KC)						C5 Ant.	
8	1st short wave Band		*	7.0 MC	1 SW	7.0 MC	C6 Ant.	
9	(Check calibration and sensitivity at 2.5 MC, 4.0 MC & 7.0 MC)						C7 Ant.	
10	2nd SW Band		*	21.0 MC	2 SW	21.0 MC		**
11	(Check calibration and sensitivity at 7.0 MC, 15 MC & 21 MC)							

* 200 mmf. condenser and 100 ohm non-inductive resistor in series.
** Rock dial while trimming.
If dial reading is off calibration, some adjustment may be made by moving the oscillator condenser lead toward or away from the chassis base plate.


670-6L

ALIGNMENT


OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING COND. SETTING	TRIMMER	REMARKS
1	(Set dial pointer to last calibrated mark below 550 KC)							
2	I.F.	6J9C Grid Cap	.1 mf.	456 KC	BC	(Open)	C16 A&B	3rd I.F.T.
3	Reflector Ant.		200 mmf.	456 KC	BC	(Open)	C15 A&B	2nd I.F.T.
4	Broad-cast Band		200 mmf.	1500 KC	BC	1500 KC	C14 A&B	1st I.F.T.
5	Band		200 mmf.	600 KC	BC	600 KC	C2	Adj. to minimum
6	(Repeat operation 4)						C9 Osc.	
7	(Check calibration and sensitivity at 600 KC, 1000 KC and 1500 KC)						C6 Ant.	
8	Long-Wave Band		200 mmf.	400 KC	LW	400 KC	C10 Pad.	
9	(Repeat operation 8)						C5 Ant.	
10	(Repeat operation 9)						C4 Osc.	
11	(Repeat operations 8, 9 and 10 if necessary, to insure accurate alignment)						C3 Ant.	
12	(Check calibration and sensitivity at 150 KC, 260 KC and 400 KC)						C5 Pad.	
13	Short Wave Band		*	18 MC	SW	18 MC	C7 Ant.	Rock dial
14	(Check calibration and sensitivity at 6 MC, 15 MC and 18 MC)							

* 200 mmf. condenser and 100 ohm non-inductive resistor in series.

MODEL 670-6S CHASSIS BOTTOM

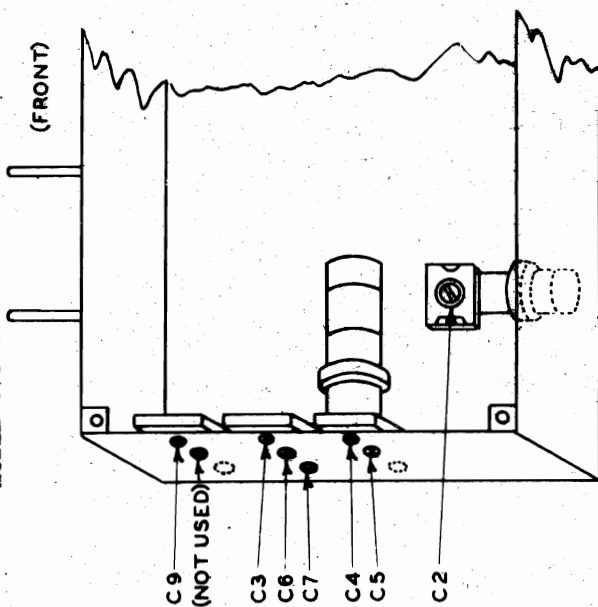


MODEL 670-6L CHASSIS BOTTOM

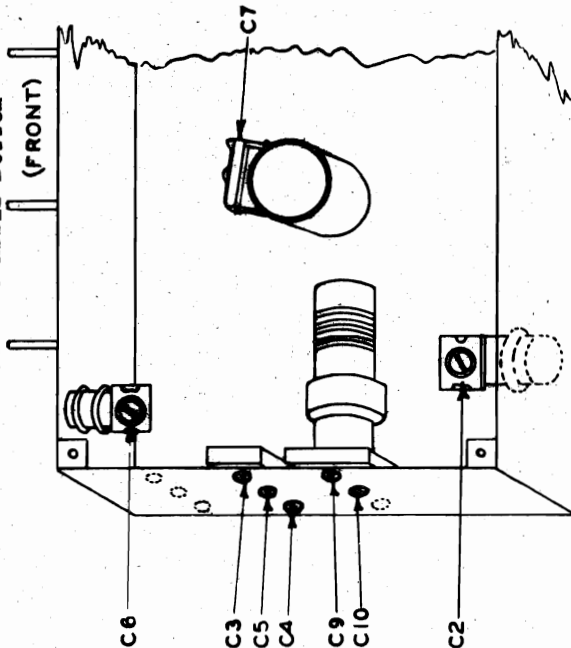

SPARKS WITHINGTON CO.

MODEL 760PS
Schematic, Voltage, Socket
Alignment, Trimmers

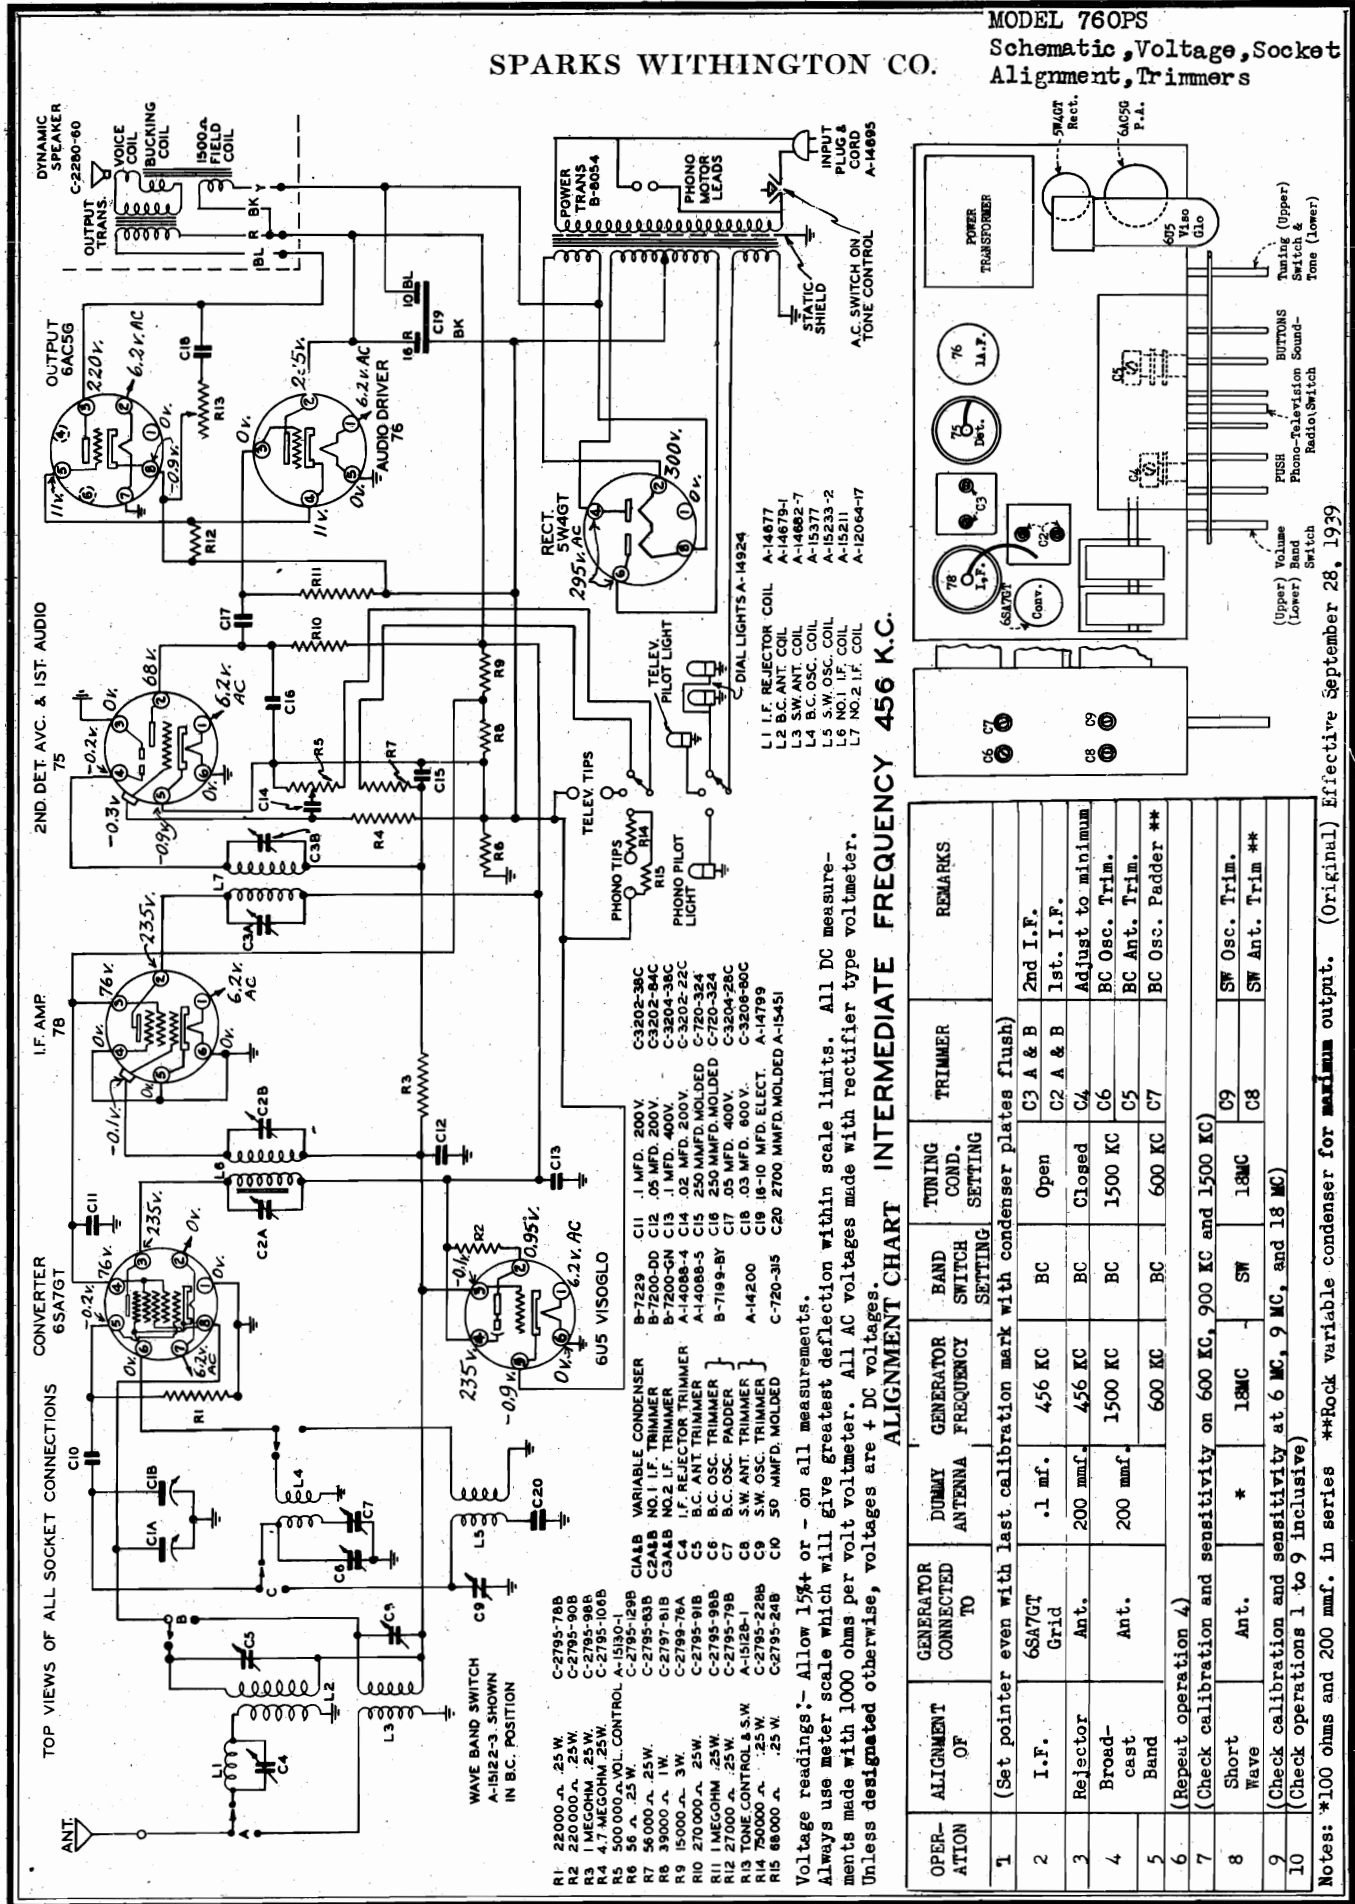

© John F. Rider, Publisher



ALIGNMENT CHART INTERMEDIATE FREQUENCY 456 K.C.

OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING COND. SETTING	TRIMMER	REMARKS
1	(Set pointer even with last calibration mark with condenser plates flush)							
2	I.F.	6SA7GT Grid	.1 mf.	456 KC	BC	Open	C3 A & B	2nd I.F.
3	Rejector	Ant.	200 mmf.	456 KC	BC	Closed	C2 A & B	1st. I.F.
4	Broad-cast Band	Ant.	200 mmf.	1500 KC	BC	1500 KC	C4	Adjust to minimum BC Osc. Trim.
5	(Repeat operation 4)			600 KC	BC	600 KC	C5	BC Ant. Trim.
6	(Check calibration and sensitivity on 600 KC, 900 KC and 1500 KC)						C7	BC Osc. Padder **
7	(Check calibration and sensitivity at 6 MC, 9 MC, and 18 MC)		*	18MC	SW	18MC	C9	SW Osc. Trim.
8	(Check calibration and sensitivity at 6 MC, 9 MC, and 18 MC)						C8	SW Ant. Trim **
9	(Check operations 1 to 9 inclusive)							
10	(Check operations 1 to 9 inclusive)							

Notes: *100 ohms and 200 mmf. in series **Rock variable condenser for maximum output. (Original) Effective September 28, 1939


MODEL 880
Alignment, Socket
Trimmers

SPARKS WITHINGTON CO.

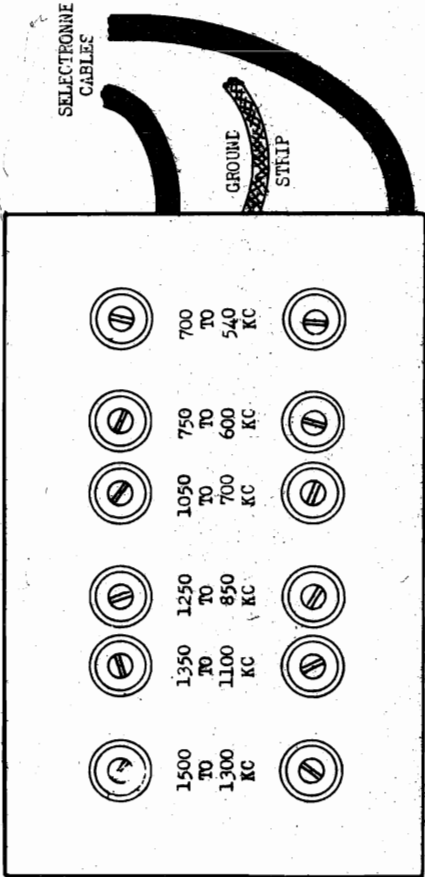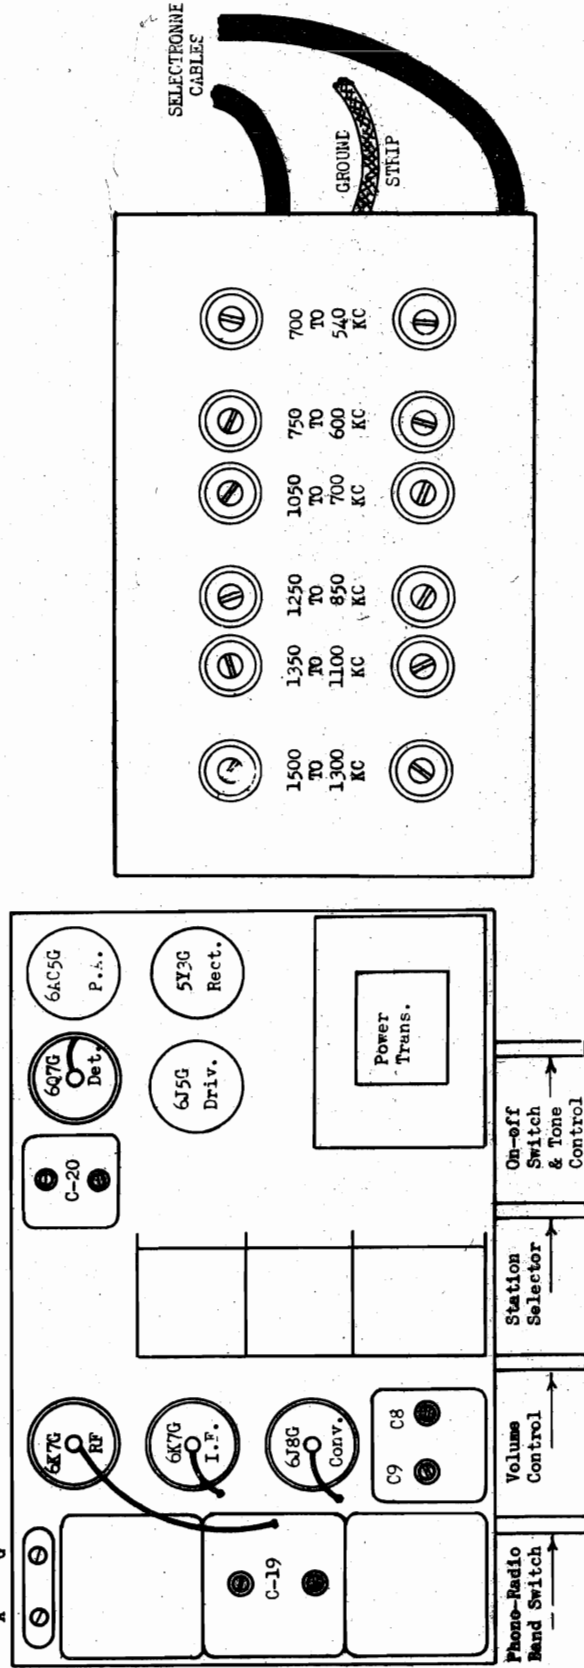

ALIGNMENT CHART

OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	BAND SWITCH SETTING	TUNING COND. SETTING	TRIMMER	ADJUST FOR MAX. OUTPUT
1	(Set dial pointer to dots at low frequency end of dial.)						
2	I. F.	6K7G	.1mf	BC*	Open	C20 A & B C19 A & B	2nd I. F. 1st I. F.
3	I. F. Rej.	Ant.	200 mmf	BC**	Closed	C C30	Adjust for Minimum
4	Broad-Cast Band	Ant.	200 mmf	BC*	1500 KC	C8	Osc. Trimmer
				BC*	600 KC	C5	RF Trimmer
5				BC*	600 KC	C2	Ant. Trimmer
6	(Repeat operation 4)					C9	Osc. Padder
7	(Check calibration and sensitivity at 600 KC, 900 KC and 1500 KC)						
8	1st Short Wave Band	Ant.	200 mmf 100 ohm series	1 SW	6.0 MC	C10	Osc. Trimmer
						C6	RF Trimmer
9	(Check calibration and sensitivity at 6.0 MC, 4.0 MC and 2.5 MC)					C3	Ant. Trimmer
10	2nd Short Wave Band	Ant.	200 mmf 100 ohm series	2 SW	21 MC	C11	Osc. Trimmer
						C7	RF Trimmer
11	(Check calibration and sensitivity at 21.0 MC, 15.0 MC, 6.0 MC)					C4	Ant. Trimmer
12	(Check operations 1 to 11 inclusive)						

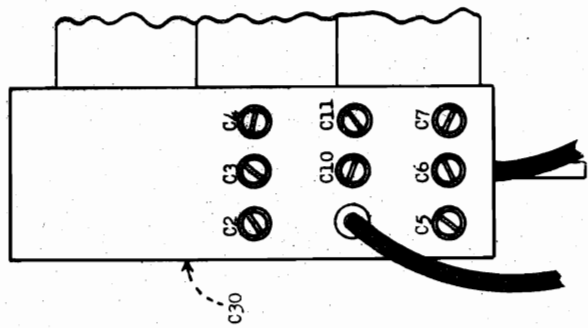


*Band switch must be turned for manual tuning of Broadcast Band.
**Band switch must be turned for automatic (Selectronne) tuning.

CABLES TO SELECTRONNE

MODELS 940LX, 940SX
Schematic

SPARKS WITHINGTON CO.

SCHEMATIC DIAGRAM
SPARTON SUPERHETERODYNE MODEL 940-SX & 940-LX

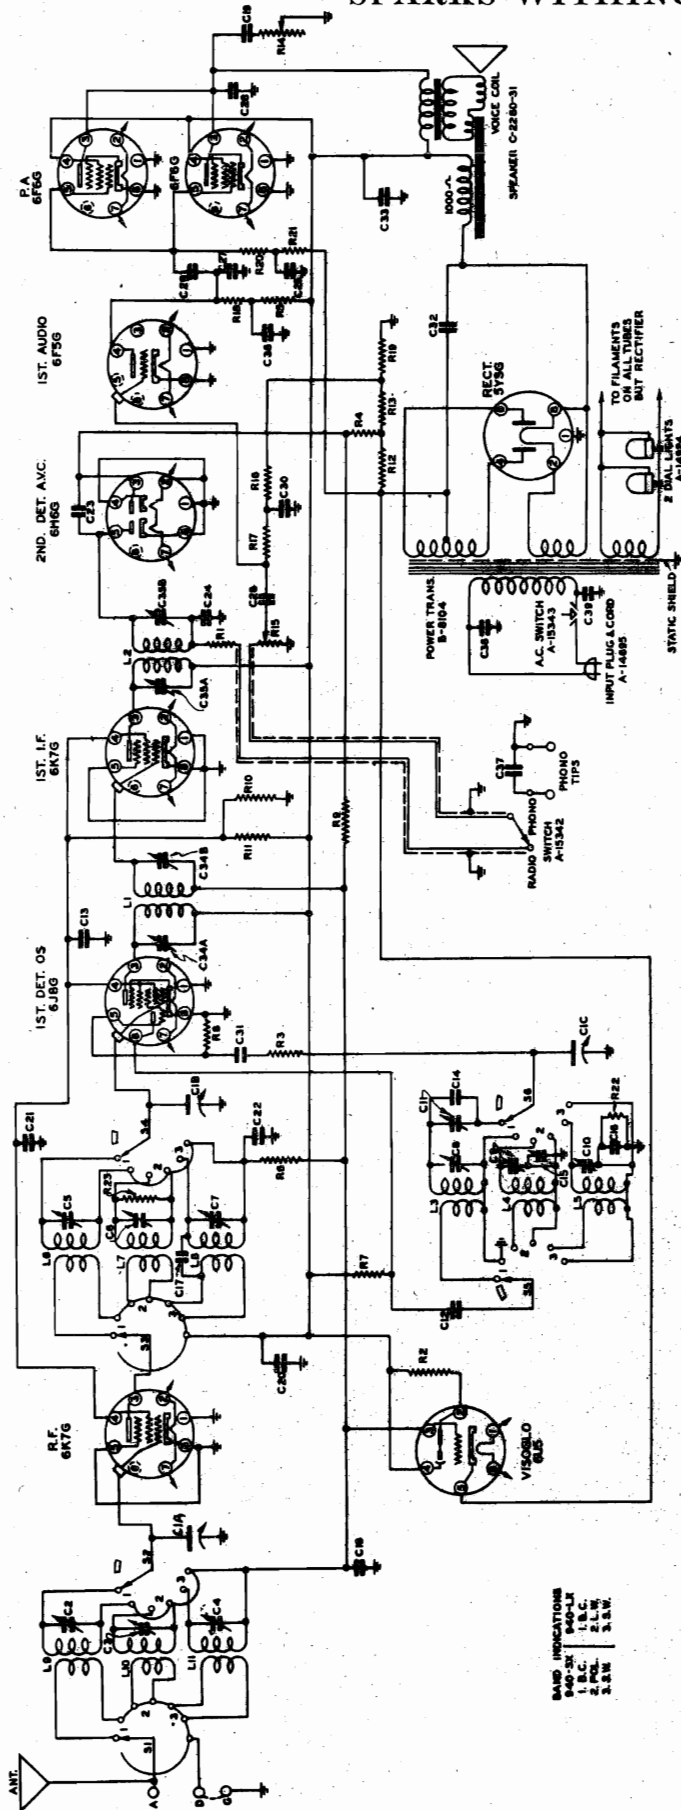

INTERMEDIATE FREQUENCY CONNECTIONS
TOP VIEW OF ALL SOCKET CONNECTIONS

BAND INDICATIONS		PARTS USED IN MODEL 940-SX ONLY		PARTS USED IN MODEL 940-LX ONLY	
840-3K	840-LX	C15	.00171 MFD. MOLDED	C15	L.W. OSC. PADDER
R1	50000 Ω .25W	C16	.00385 MFD. MOLDED	C16	C-720-348
R2	10000 Ω .25W	R22	50000 Ω .25W	R22	C-2785-848
R3	10000 Ω .25W	R23	100000 Ω .25W	R23	C-2785-868
R4	10000 Ω .25W				
R5	10000 Ω .25W				
R6	10000 Ω .25W				
R7	22000 Ω .25W				
R8	50000 Ω .25W				
R9	10000 Ω .25W				
R10	10000 Ω .25W				
R11	10000 Ω .25W				
R12	10000 Ω .25W				
R13	10000 Ω .25W				
R14	10000 Ω .25W				
R15	10000 Ω .25W				
R16	10000 Ω .25W				
R17	10000 Ω .25W				
R18	10000 Ω .25W				
R19	10000 Ω .25W				
R20	10000 Ω .25W				
R21	10000 Ω .25W				
R24	10000 Ω .25W				
R25	10000 Ω .25W				
C1	500 P.F. VARIABLE				
C2	500 P.F. VARIABLE				
C3	500 P.F. VARIABLE				
C4	500 P.F. VARIABLE				
C5	500 P.F. VARIABLE				
C6	500 P.F. VARIABLE				
C7	500 P.F. VARIABLE				
C8	500 P.F. VARIABLE				
C9	500 P.F. VARIABLE				
C10	500 P.F. VARIABLE				
C11	500 P.F. VARIABLE				
C12	500 P.F. VARIABLE				
C13	500 P.F. VARIABLE				
C14	500 P.F. VARIABLE				
C15	500 P.F. VARIABLE				
C16	500 P.F. VARIABLE				
C17	500 P.F. VARIABLE				
C18	500 P.F. VARIABLE				
C19	500 P.F. VARIABLE				
C20	500 P.F. VARIABLE				
C21	500 P.F. VARIABLE				
C22	500 P.F. VARIABLE				
C23	500 P.F. VARIABLE				
C24	500 P.F. VARIABLE				
C25	500 P.F. VARIABLE				

(Original) Effective July 1, 1939

MODELS 940LX, 940SX

Alignment, Voltage
Socket, Trimmers

SPARKS WITHINGTON CO.

VOLTAGE CHART

Line Voltage: 125 Volts
Voltage Tap: 115-135

Position of Volume Control: Full with Antenna Disconnected
Band Switch - Broadcast



Tube	Function	Voltage of Socket Prongs to Gnd. (See Prong Nos. on Schematic Diagram)								
		No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 7	No. 8	Grid Cap
6K7G	R.F.	-	-	240	94	-	-	*6	-	**
6J8G	Converter	-	-	240	94	**	137	*6	-	**
6K7G	I.F.	-	-	240	94	-	-	*6	-	**
6H6G	2nd. Det. A.V.C.	-	-	*	-	**	-	*6	-	-
6F5G	1st A.F.	-	*6	-	**	-	-	-	-	**
6F6G	P.A.	-	*6	235	240	**	-	-	-	-
6F6G	P.A.	-	*6	235	240	**	-	-	-	-
5Y3G	Rect.	-	340	-	355	-	355	-	340	-
6U5	Viso-Glo	*6	**	**	240	-3.1	-	-	-	-

Notes: Voltage readings are for schematic diagram. Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages in table are + DC voltages. *AC volts. **Cannot be measured with 1000 ohms per volt voltmeter. Bias for 6F6G can be measured from B- to Gnd.

ALIGNMENT CHART

OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING COND. SECTION	TRIMMER	ADJUST FOR MAX. OUTPUT
1	(Set pointer even with last calibration mark when condenser plates are flush.)							
2	I. F.	6J8G Grid	.1 mf.	456 KC	BC	Open	C-35A&B C-34A&B	2nd I. F. 1st I. F.
3	Broad-cast Band	Ant.	200 mmf.	1500 KC	BC	1500 KC	C-8	Osc. Trimmer
				600 KC	BC	600 KC	C-5 C-2	R. F. Trimmer Ant. Trimmer
4							C11*	Osc. Padder
5	(Repeat operation 3)							
6	Long Wave Band	Ant.	200 mmf.	400 KC	LW	400 KC	C9	Osc. Trimmer
				150 KC	LW	150 KC	C6	RF Trimmer
							C3	Ant. Trimmer
8	(Repeat operation 6)							
9	Short Wave Band	Ant.	100 ohms 200 mmf. series	18 MC	SW	18 MC	C-10	Osc. Trimmer
							C-7	RF Trimmer
							C-4*	Ant. Trimmer
10	(Check calibration and sensitivity at 6. MC., 9 MC., and 18 Mc.)							
11	(Check operations 1 to 10 inclusive)							
6	1st Short Wave Band (Police)	Ant.	100 ohm 200 mmf series	7 MC	1st SW	7 MC	C9	Osc. Trimmer
							C6	RF Trimmer
							C3*	Ant. Trimmer
7	(Check calibration and sensitivity at 7 MC and 2.5 MC.)							
8	2nd Short Wave Band	Ant.	100 ohm 200 mmf series	21 MC	2nd SW	21 MC	C10	Osc. Trimmer
							C7	RF Trimmer
							C4*	Ant. Trimmer
9	(Check calibration and sensitivity at 8 MC. and 21 MC)							
10	(Check operations 1 to 9 inclusive.)							

*Rock dial while adjusting for maximum output.

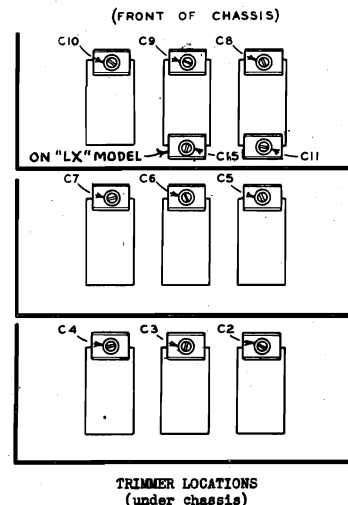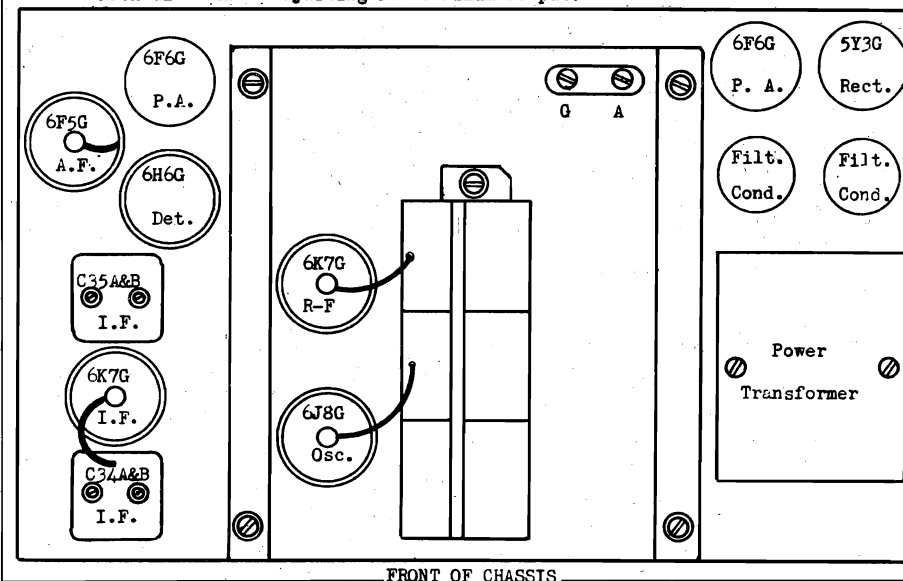


MODEL 1160
Voltage Alignment
Socket, Trimmers

SPARKS WITHINGTON CO.

ALIGNMENT CHART
(see note)

Viso-Glo Tube in socket
AFC switch "OFF"

OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	BAND SWITCH SETTING	TUNING COND. SETTING	TRIMMER	
1	I. F.	Conv. Grid.	.1 mf.	456	BC	Open	C47 A, B C48 A, B C49 A	
2	Discrim.	Conv. Grid.	.1 mf.	456	BC	Open	C8 Osc. C5 RF C2 Ant.	
3	Broadcast Band	Ant.	200 mmf.	1500	BC	1500		
4		Ant.	200 mmf.	600	BC	600	C11 Pad	
5	(Repeat operation 3)							
6	(Check calibration and sensitivity 1500 KC, 900 KC and 600 KC) *							
7	1st Short Wave	Ant.	100 ohm 200 mmf. series	6 MC.	1st S.W.	6 MC.	C9 Osc. C5 RF C5 Ant.	
8		Ant.	200 mmf.	1.95 MC.	1st S.W.	1.95 MC.	C12 Pad	
9	(Repeat operation 7)							
10	(Check calibration and sensitivity at 6 MC. and 1.95 MC.)							
11	2nd Short-Wave Band	Ant.	100 ohm 200 mmf. series	18 MC.	2nd S.W.	18 MC.	C10 Osc. C7 R.F. C4 Ant.	
12		Ant.		6 MC.	2nd S.W.	6 MC.	C13 Pad	
13	(Repeat operation 11)							
14	(Check calibration and sensitivity at 18 MC. and 6 MC.)							
15	(Check operations 1 to 14 inclusive)							

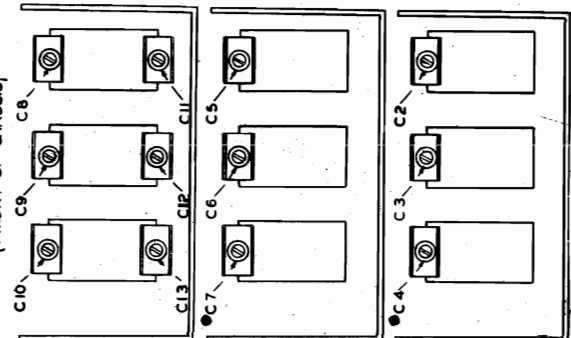


* Check AFC by connecting generator to converter grid cap and tuning generator and receiver to 1500 KC. Note output meter reading with AFC switch "off". Switch AFC "on" and if output changes appreciably, touch up discriminator trimmer until there is no change in sensitivity.

NOTE: Check to see that dial pointer is parallel to horizontal lines on dial when variable condenser rotor plates are fully meshed with stator plates.

TRIMMER LOCATIONS
(Under Chassis)

Rock dial slightly while adjusting

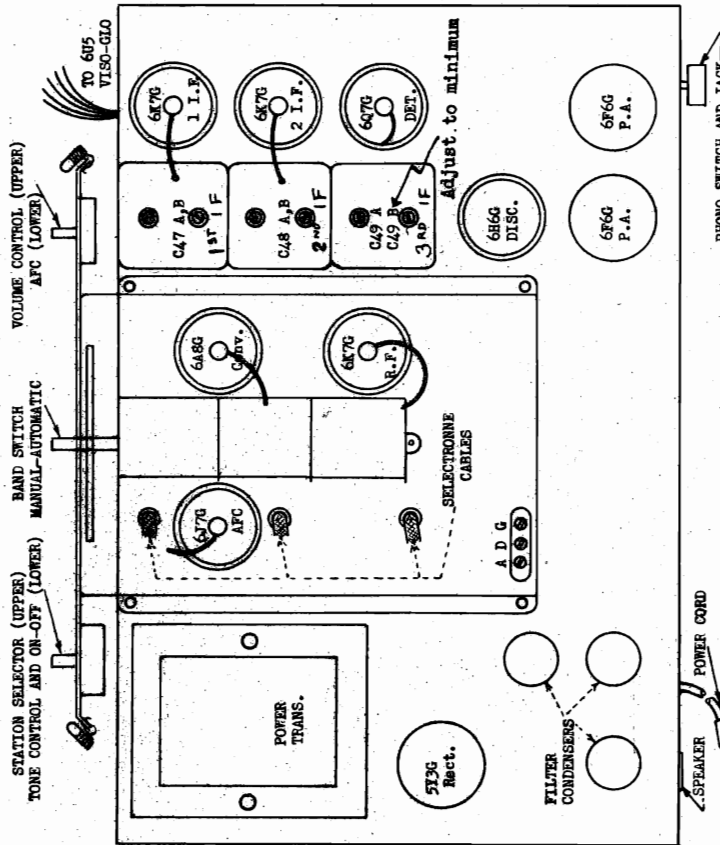

VOLTAGE CHART

Tube	Function	Voltage of Socket Prongs to End. (See Prong Nos. on Schematic Diagram)												
		No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 7	No. 8	Grid Cap				
6K7G	R-F Amp.	0	0	260	62	0	0	6.2*	0	-0.2				
6A8G	Converter	0	0	260	112	-0.2	150	6.2*	0	-0.1				
6K7G	1st I-F Amp.	0	6.2*	260	60	0	0	0	0	**				
6K7G	2nd I-F Amp.	0	6.2*	260	60	0	0	0	0	2.7	0			
6B6G	Discriminator	0	6.2*	**	0	**	-	0	0	0	0			
6A7G	Det-AVC-1st Audio	0	6.2*	46	**	**	0	0	0	6.2*	0	**		
6F6G	Power Amp.	0	6.2*	240	260	-0.8	0	0	0	0	0	-		
6F6G	Power Amp.	0	6.2*	240	260	-0.8	0	0	0	0	0	-		
5Y3G	Rectifier	-	390*	-	370*	-	370*	-	390*	-	-	-		
6E5	Viso-Glo	6.2	**	**	260	-3.4	0	-	-	-	-	-		



Notes: Voltage and resistance readings are for schematic diagram. Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All measurements made with Weston Selective Analyzer No. 665, Type 2.

* AC volts.
** Cannot be measured with Weston Selective Analyzer No. 665, Type 2.

(Original) Effective June 30, 1939

MODEL 128B
Chassis, Socket
Trimmers

SPIEGEL INC.

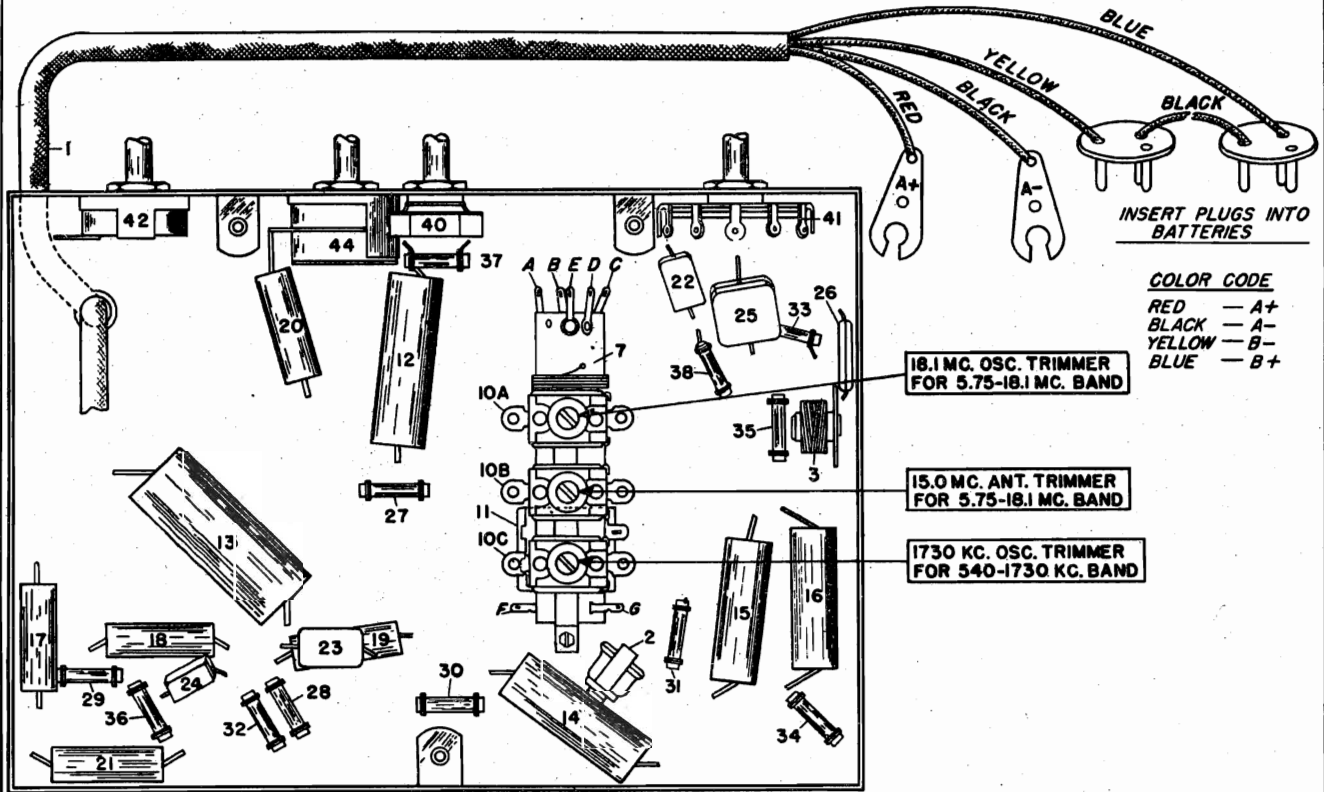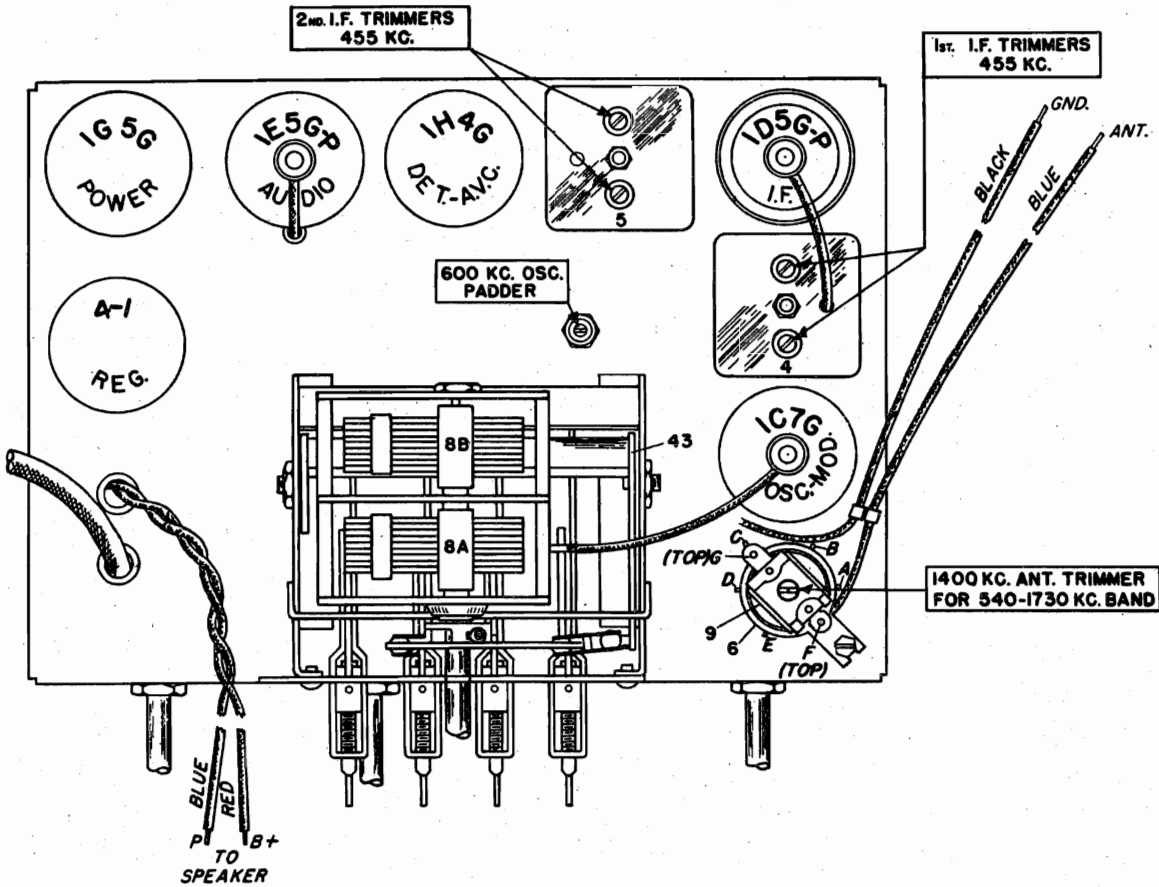


SPIEGEL INC.

MODELS 142, 154, 6602, 6650
 Chassis 725
 Schematic, Socket, Trimmers
 Alignment

A good ground connection to a water pipe or other metallic conductor entering into the ground for some distance is ESSENTIAL.



IF PEAK 456 KC

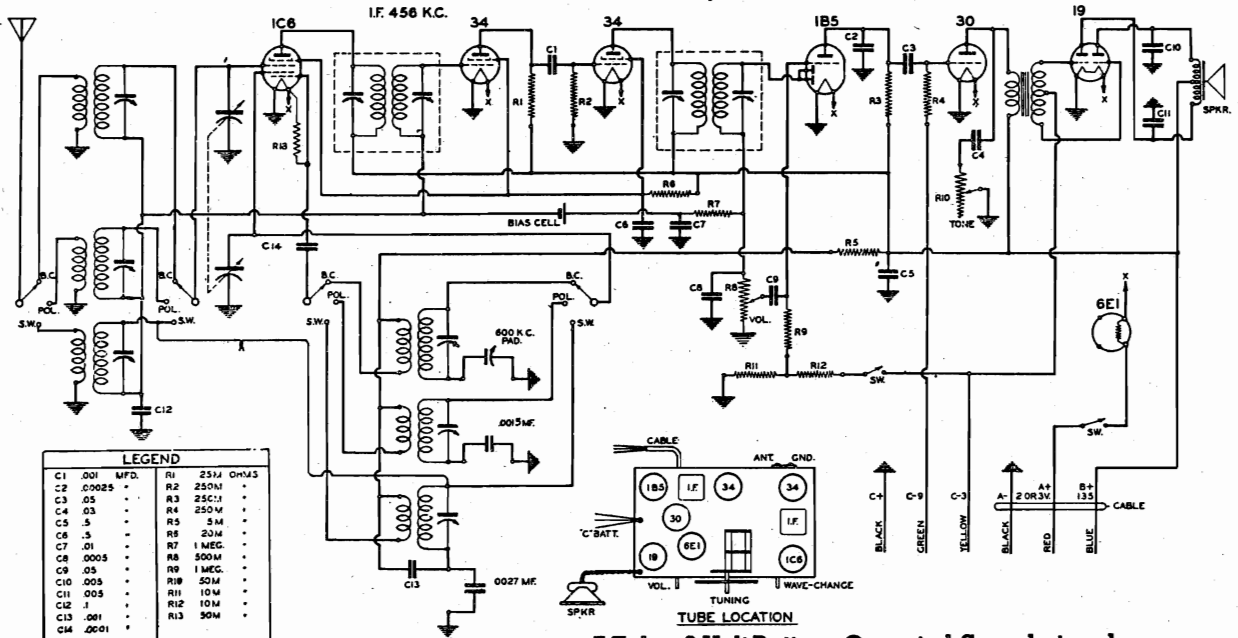

LEGEND

C1 .001 MFD.	R1 250 OHMS
C2 .00025 . . .	R2 250Ω
C3 .05	R3 25C.1
C4 .03	R4 250M
C5 .5	R5 2M
C6 1	R6 20M
C7 .01	R7 1 MEC.
C8 .0005	R8 500M
C9 .05	R9 1 MEC.
C10 .005	R10 50M
C11 .005	R11 10M
C12 .1	R12 10M
C13 .001	R13 50M
C14 .0001 . . .	

7-Tube, 2-Volt Battery Operated Superheterodyne

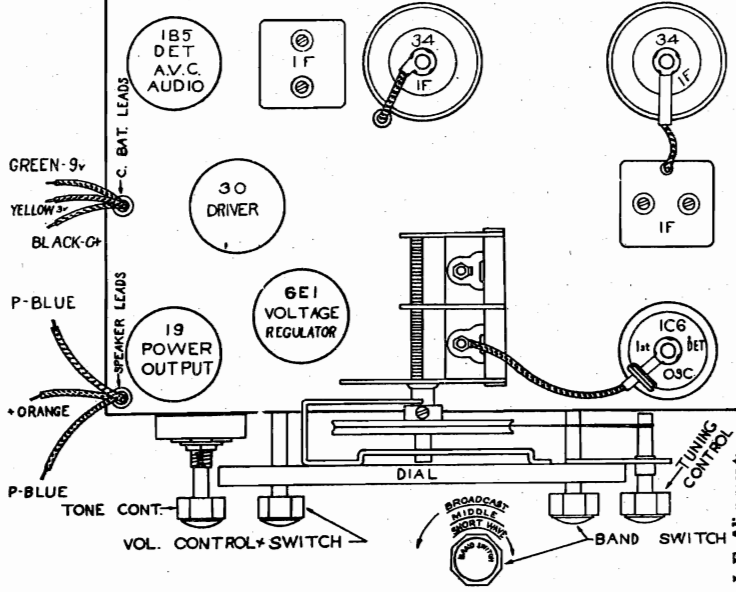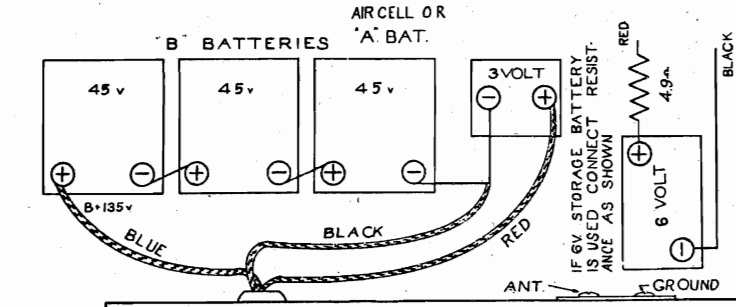

I. F. Alignment: Connect the oscillator through a .1 condenser to the grid of the 1C6 tube and set the oscillator to 456 kilocycles. Peak each I. F. stage to resonance as indicated by maximum output on the output meter.

R. F. Alignment: With the wave change switch in the broadcast position, set the oscillator to 1700 kilocycles and connect in series with a .00025 condenser to the antenna of the receiver. Rotate the variable condenser to the 1700 setting of the dial and adjust the trimmer condenser of the broadcast oscillator to resonance. This trimmer is located on the right side of the chassis, second position from the front. Reset the test oscillator to 1400 kilocycles and adjust antenna trimmer located under the chassis. Now set oscillator to 600 kilocycles and adjust padder located on top of the chassis. Check alignment at 1000 kilocycles.


For aligning the police band, set test oscillator to 5 megacycles and switch to the police band position on the set. With the condenser rotated to this frequency setting as indicated on the dial, adjust oscillator trimmer located on the right side of the chassis, first position from the front. Now adjust antenna trimmer located on the front of the chassis, left position, to resonance.

The short wave band is aligned by setting the condenser to 18 megacycles and adjust the oscillator trimmer located on the right side of the chassis, third position from the front to resonance with an 18 megacycle signal from the test oscillator. Turn dial to 16 M. C. and adjust antenna trimmer through right hand hole in front of chassis, rocking variable condenser slightly back and forth to get maximum peak.

MODELS 1008, 1009, Ch. 8A5 (1939)
 2012, 2013, Ch. 8A5 (1938)
 MODELS 2006, 2007, Ch. 1T
 Schematics, Alignment


SPIEGEL INC.

25-2149

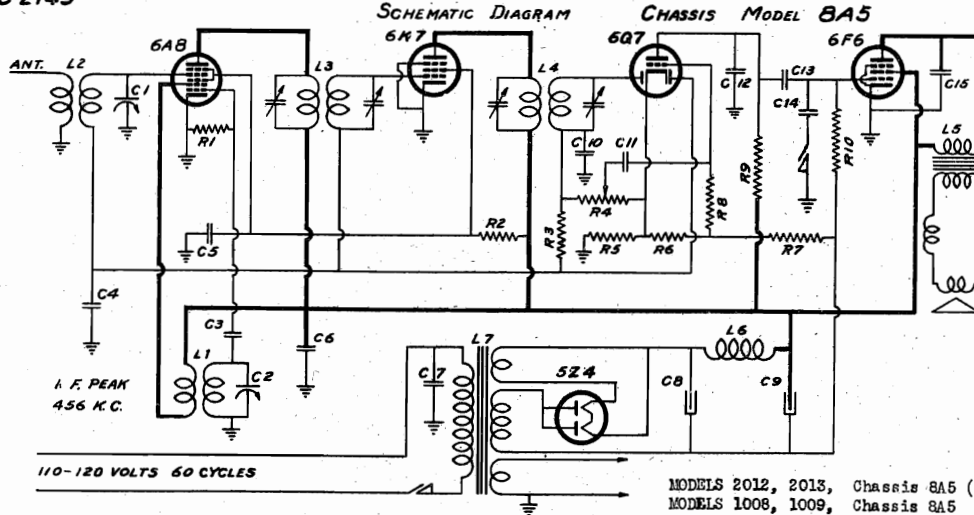

MODELS 2012, 2013, Chassis 8A5 (1938)
 MODELS 1008, 1009, Chassis 8A5 (1939)

CHASSIS LAYOUT

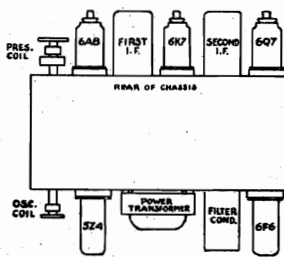

CODE OF SCHEMATIC DIAGRAM


- | | | |
|--|---|--|
| RESISTORS | CONDENSERS | COND. (Cont.) |
| R1 85-898 50,000 Ohm 1/4 Watt Resistor | C1, L7 75-2007 Two Omg Variable Condenser | C7 75-2003 .01 Mfd. 400 V. Paper Cond. |
| R2 85-1042 25,000 Ohm 1/4 Watt Resistor | C8 75-2002 .00005 Mfd. Mica Condenser | C8 18-2008 8 Mfd. 250 V. Electro. Cond. |
| R3 85-926 1 Meg Ohm 1/4 Watt Resistor | C9 75-2008 6 Mfd. 350 V. Electro. Cond. | C9 18-2009 6 Mfd. 350 V. Electro. Cond. |
| R4 18-2007 500,000 Ohm Vol. Cont. & Switch | C10 75-2007 .0005 Mfd. Mica Condenser | C10 75-2007 .0005 Mfd. Mica Condenser |
| R5 80 Ohm | C11 75-2006 .1 Mfd. 200 V. Paper Cond. | C11 75-2006 .1 Mfd. 200 V. Paper Cond. |
| R6 85-2018 80 Ohm | C12 75-2014 .001 Mfd. 400 V. Paper Cond. | C12 75-2014 .001 Mfd. 400 V. Paper Cond. |
| R7 240 Ohm | C13 75-2006 .1 Mfd. 200 V. Paper Cond. | C13 75-2006 .1 Mfd. 200 V. Paper Cond. |
| R8 85-928 500,000 Ohm 1/4 Watt Resistor | C14 75-2008 .01 Mfd. 400 V. Paper Cond. | C14 75-2008 .01 Mfd. 400 V. Paper Cond. |
| R9 85-924 250,000 Ohm 1/4 Watt Resistor | C15 75-2008 .004 Mfd. 500 V. Paper Cond. | C15 75-2008 .004 Mfd. 500 V. Paper Cond. |
| R10 85-928 500,000 Ohm 1/4 Watt Resistor | | |

ALIGNMENT FREQUENCIES
 1400 KC, 1000 KC and 600 KC
 FOR CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION OF VOLUME VIII

MODELS 2006 and 2007 - Chassis 1T

ALIGNMENT PROCEDURE: The alignment of this receiver requires the use of a test oscillator that covers a frequency range from 540 to 4000 KC. For exact alignment an output meter should be connected across the output transformer on the speaker. A dummy antenna of approximately 180 mmfd. should be used and connected to antenna with aerial coil left ungrounded.


Adjust oscillator to 1400 KC. Turn knob controlling dial to 1400 on the dial. Rotate adjustment screws on tuning condenser until maximum output is produced. (with Volume Control at maximum). Reset oscillator to 1000 KC and finally to 600 KC and check. The receiver should check OK at these points for alignment. It is only necessary to re-adjust at one point on the dial due to the original alignment at the factory.

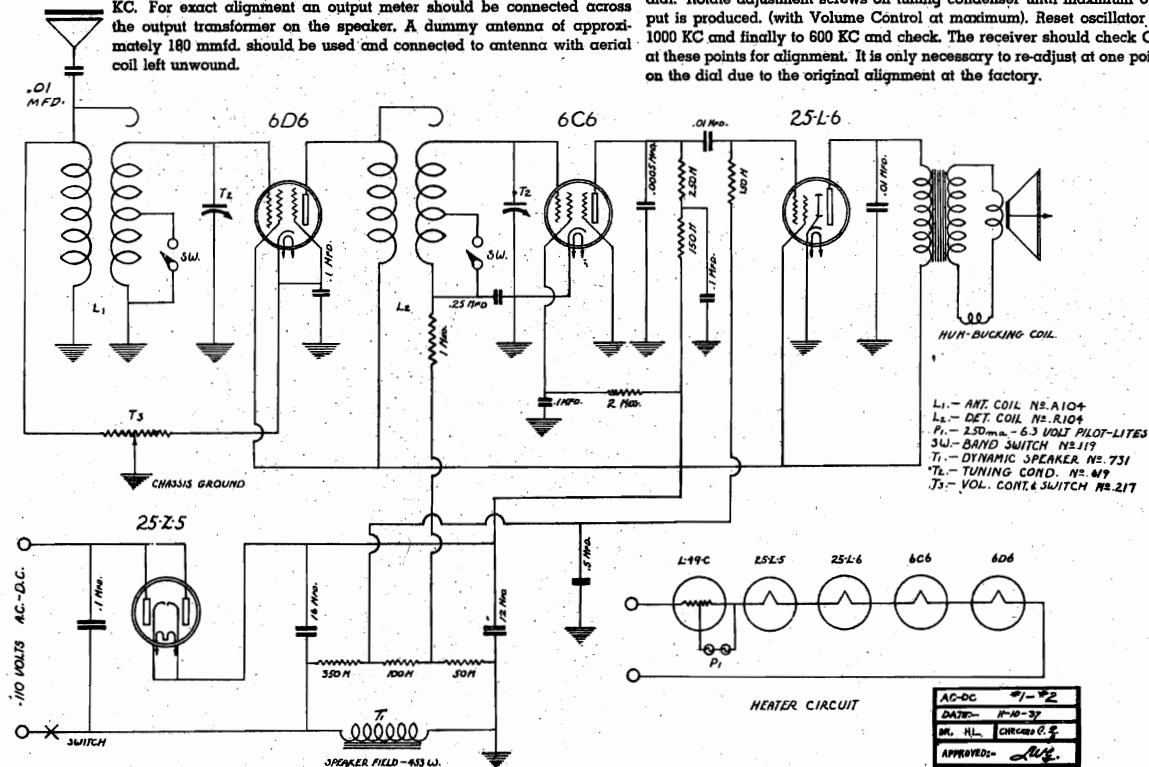

SPIEGEL INC.

MODELS 1204 to 1207 incl.
Chassis 80B
Schematic, Voltage, Socket

The 5E1 Voltage Regulator, which is used to maintain the filament voltage on the receiver tubes at the correct value of approximately 2 volts (in order to adapt the receiver to operation on a 3 volt dry "A" battery or Alrcell battery) automatically takes care of the normal change to discharge battery voltage variations.

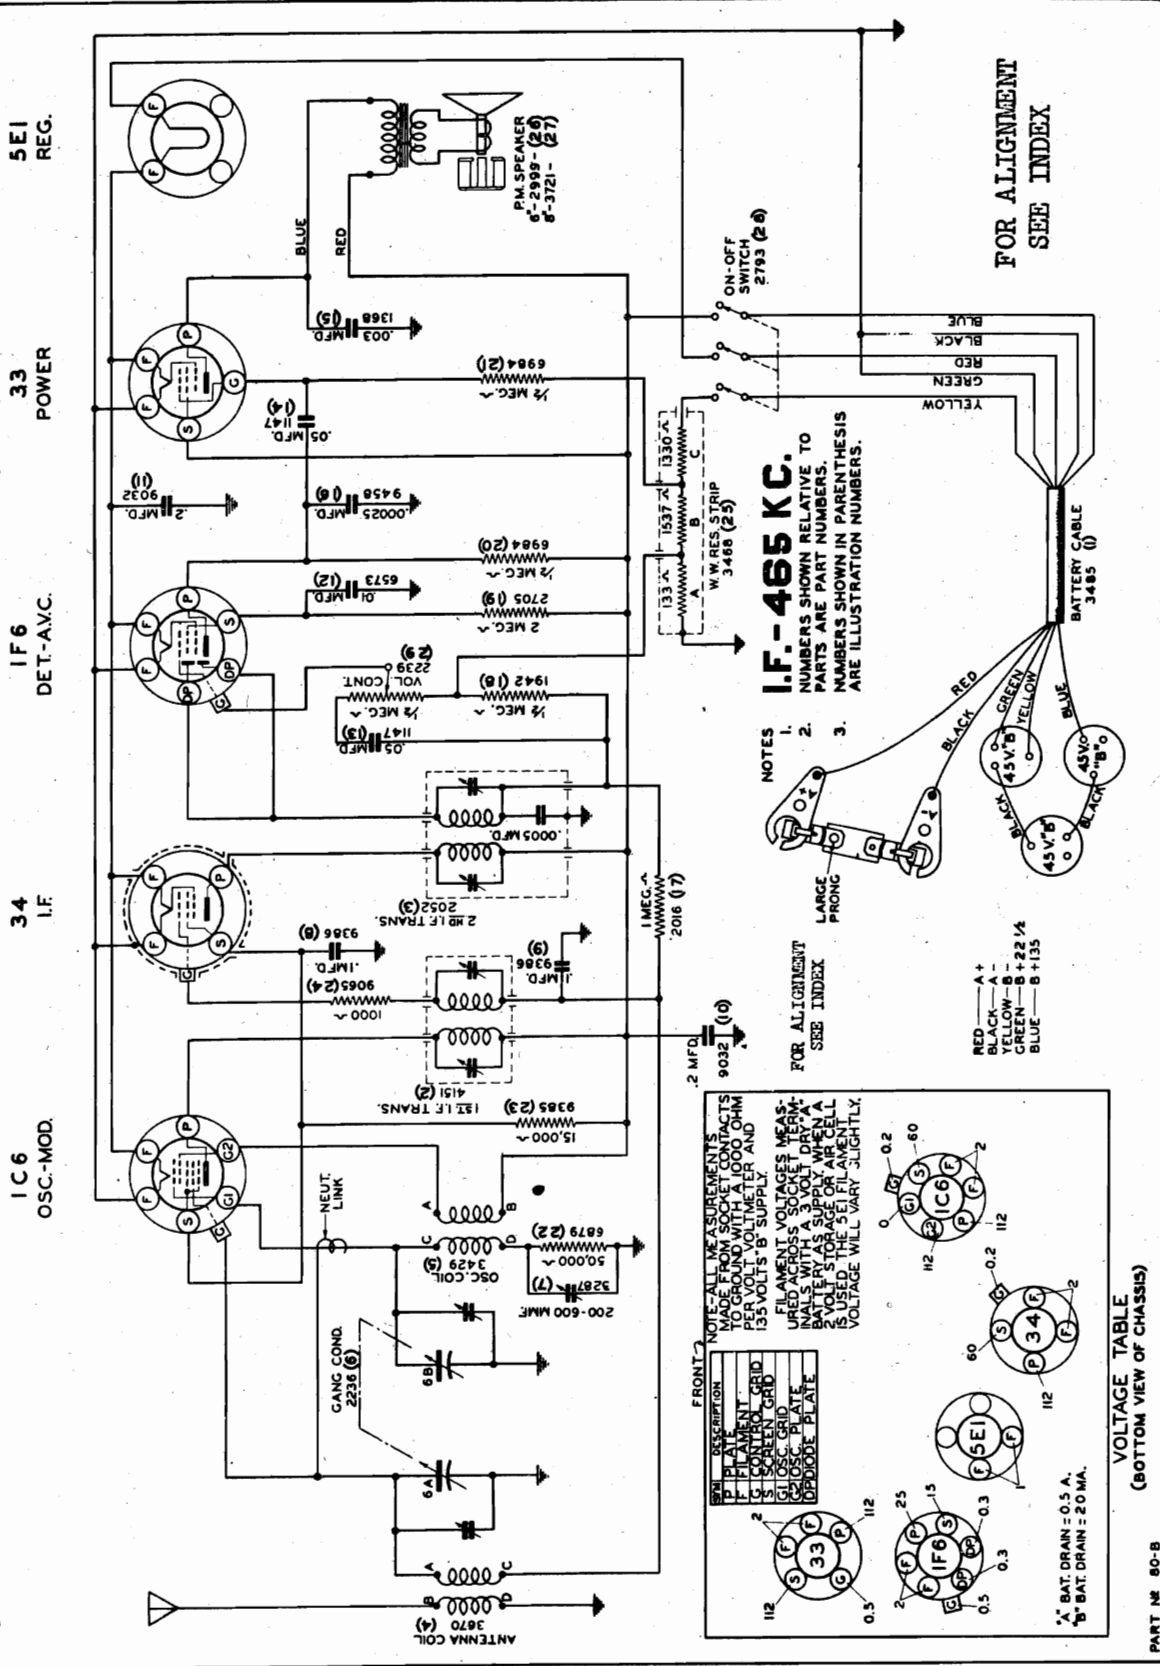


MODELS 2006, 2007, 4040
Chassis 6A

SPIEGEL INC.

Schematic, Socket
Trimmers, Alignment

Six Tube 6 Volt Battery 110-120 Volt AC Superheterodyne

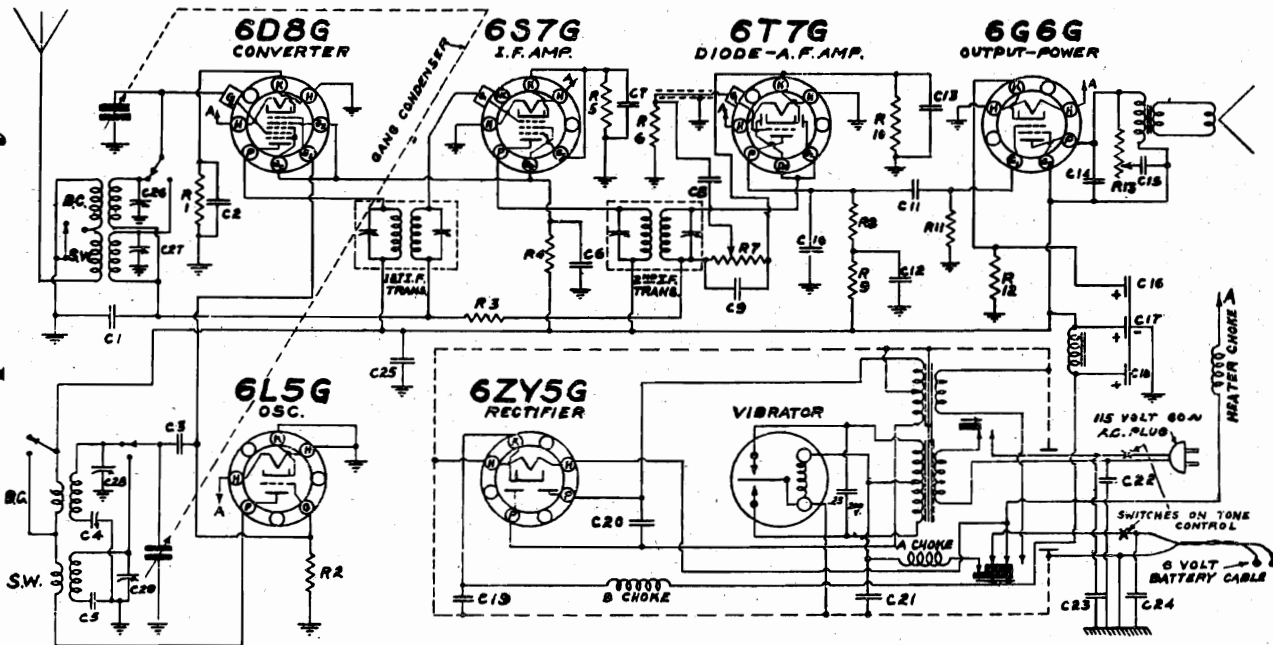


CONDENSERS				RESISTORS			
NR	CAPACITY	TYPE	NR	OHMS	WATTS	SPL. TOL.	
1	.05 Mfd.	200V.	13	1,500	1/4	± 10%	
2	.05 Mfd.	200V.	14	50,000	1/4		
3	100 Mfd.	MICA	15	1,000,000	1/4		
4	300-500 μmf.	"	16	30,000	1/4		
5	4000 μmf.	"	17	1,000	1/4	± 10%	
6	.1 Mfd.	200V.	18	200V.	1/4	(VOL. CONT.)	
7	.05 "	200V.	19	500,000	1/4		
8	.01 "	400V.	20	500,000	1/4		
9	250 μmf.	MICA	21	10V.	1/4	± 10%	
10	.250 "	"	22	400V.	1/4		
11	.01 Mfd.	400V.	23	500,000	1/4	± 10%	
12	.1 "	200V.	25	100,000	1/4	(TONE CONT.)	

IF PEAK 456 KC

BAND SWITCH IN BROADCAST POSITION.
POWER SWITCH IN BATTERY POSITION.
I.F. - 456 K.C.
C26 TO C29 - 2 TO 20 μmf. TRIMMERS

**SCHEMATIC DIAGRAM
6A**

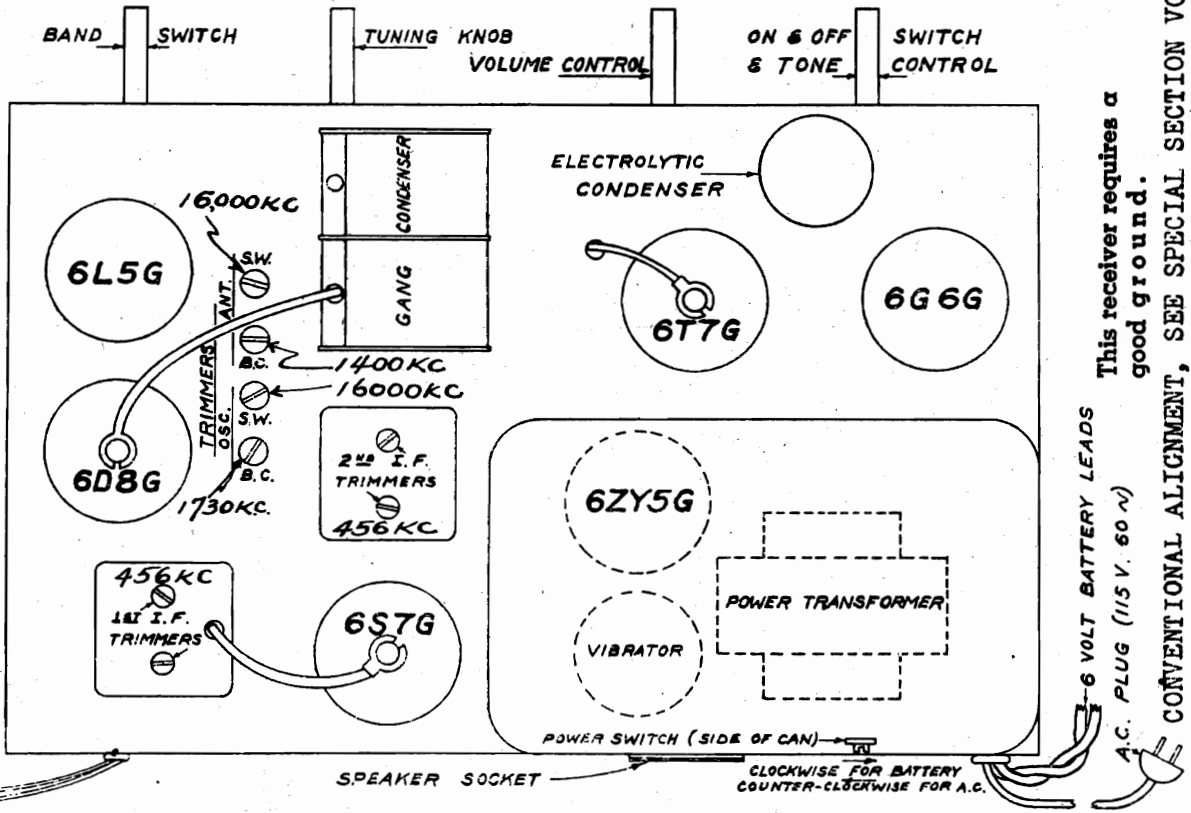


This receiver requires a good ground.

CONVENTIONAL ALIGNMENT, SEE SPECIAL SECTION VOL. VIII

6 VOLT BATTERY LEADS
A.C. PLUG (115 V. 60 ~)

SPiegel INC.

MODELS 2014, 2015, 2016
Chassis 5A
Schematic, Socket, Tuner
Alignment, Trimmers

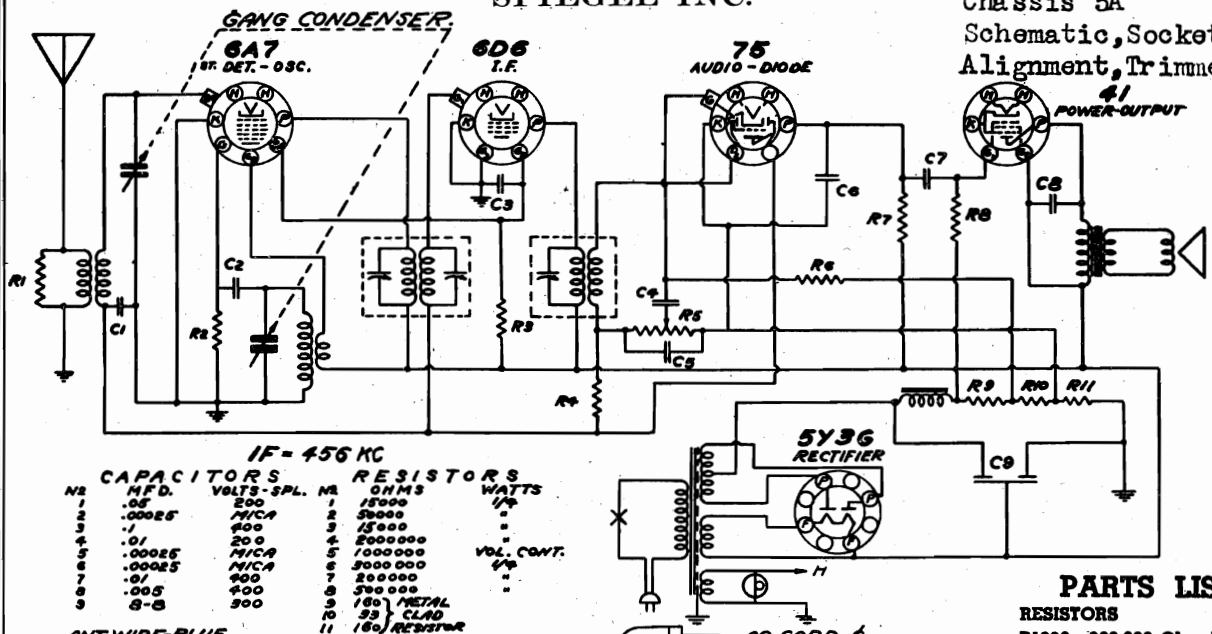

IF = 456 KC

CAPACITORS			RESISTORS		
NZ	MFD.	VOLTS-SPL.	NZ	OHMS	WATTS
1	.05	200	1	15000	1/4
2	.00025	MICA	2	50000	1/4
3	.1	400	3	15000	1/4
4	.01	200	4	200000	1/4
5	.00025	MICA	5	1000000	1/4
6	.00025	MICA	6	3000000	1/4
7	.01	400	7	200000	1/4
8	.005	400	8	300000	1/4
9	5-8	500	9	150 METAL	1/4
			10	33 CLAD	1/4
			11	150 RESISTOR	1/4

PARTS LIST


- RESISTORS**
- P1220 200,000 Ohm 1/4 Watt
 - P417 50,000 Ohm 1/4 Watt
 - P258 15,000 Ohm 1/4 Watt
 - P137 500,000 Ohm 1/4 Watt
 - P1114 2,000,000 Ohm 1/4 Watt
 - P2438 Candohm Resistor

- CONDENSERS**
- P164 .01 Mfd. 400 Volt
 - P1322 .005 Mfd. 600 Volt
 - P334 .05 Mfd. 400 Volt
 - P148 .05 Mfd. 200 Volt
- MICA CONDENSERS**
- P817 .00025
- ELECTROLYTIC CONDENSERS**
- P2397 Dual 8 Mfd. 300 W.V.

- ADJUSTABLE CONDENSERS**
- P2411 Gang Condenser
- TRANSFORMERS AND COILS**
- P2395 110 V. Power Transformer
 - P2396 125 V. Power Transformer
 - P2391 Output Transformer
 - P1506 1st I.F. Transformer
 - P2394 2nd I.F. Transformer
 - P2412 Oscillator Coil
 - P2393 Antenna Coil

ANT. WIRE-BLUE
GRD. WIRE-BLACK

AC CORD &
PLUG

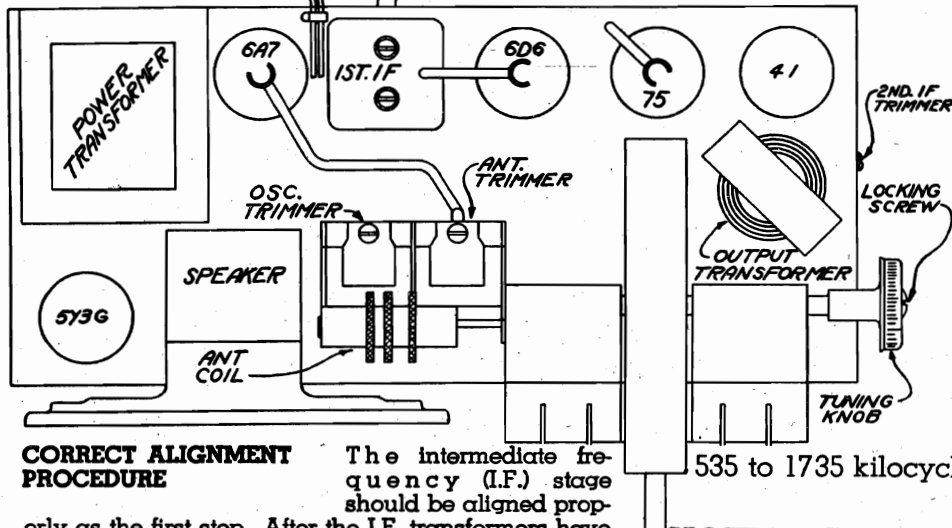

CORRECT ALIGNMENT PROCEDURE

The intermediate frequency (I.F.) stage should be aligned properly as the first step. After the I.F. transformers have been properly adjusted and peaked, the Broadcast Band alignment should be the next procedure.

I.F. ALIGNMENT

Adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (6A7) through a .05 or .1 mfd. condenser. The ground on the test oscillator can be connected to the chassis ground. Align all three I.F. trimmers to peak or maximum reading on the output meter.

BROADCAST BAND ALIGNMENT

Adjust the oscillator to 1730 KC and connect the output to the antenna lead (Blue) through a .0002 mfd. mica condenser. Set the gang condenser to minimum capacity and adjust the gang condenser trimmer (oscillator) to receive this signal. After this has been carefully done, the next step is to set the generator to 1400 KC and after tuning in the signal adjust the antenna trimmer to peak. This is all that is necessary for the alignment unless the plates of the gang condenser have been bent out of shape. In case of bent plates, set the test oscillator and the receiver to 600 KC and bend the plates into the position for maximum output.

PROCEDURE FOR SETTING UP AND OPERATING AUTOMATIC PUSH BUTTONS

Select four strong local stations tuned in regularly. Now loosen **Locking Screw** (see chassis layout) several turns with a coin or a screw driver and press in any one of the four push buttons. Holding the button down, tune in any one of four selected stations by rotating the tuning knob (side knob) slowly back and forth until the signal is cleared.

Release the push button and press in another button and hold down, tuning in another favorite station with tuning knob. Follow the same procedure for the remaining stations. Now hold tuning knob (side knob) securely and with coin or screw driver, tighten locking screw. This screw holds all stations in adjustment.

In order to change any station already set up, to another, hold tuning knob securely, loosen locking screw and select the new station as explained above. Tear the correct station call letter tabs from the set of sheets supplied and push them into rectangular windows above each push button.

The automatic push button dial is now set up for quick tuning.

MODELS 2056, 2057
Chassis 645
Schematic, Voltage






SPIEGEL INC.

Socket, Trimmers
Alignment

VOLTAGE DIAGRAM

- F - FILAMENT
- H - HEATER
- P - PLATE
- K - CATHODE
- G1 - OSC. GRID
- G2 - OSC. PLATE
- Gc - CONTROL GRID
- Dp - DIODE PLATE
- Sg - SCREEN GRID
- Su - SUPPRESSOR


VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMETER
ALL VOLTAGES EXCEPT HEATERS MEASURED TO GROUND
(BOTTOM VIEW OF CHASSIS)

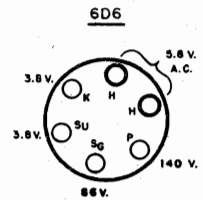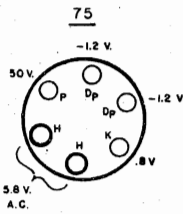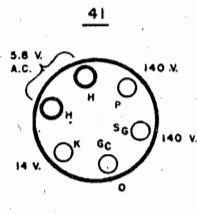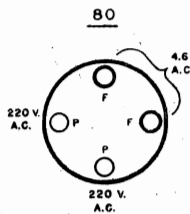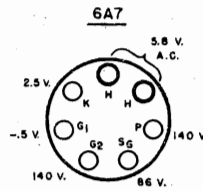

FOR
CONVENTIONAL
ALIGNMENT
SEE
SPECIAL
SECTION OF
VOLUME
VIIII

FOR
TUNER DATA
SEE
VOLUME X
PAGE 10-8

645

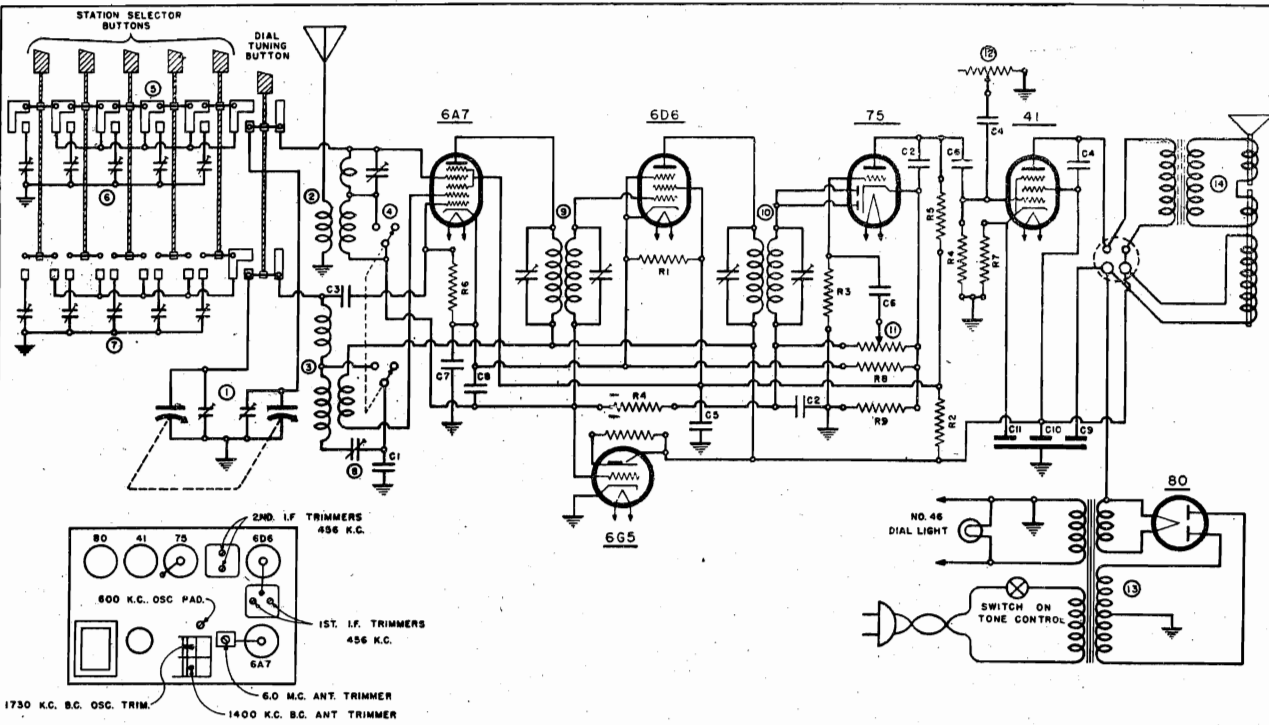


PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	645
R1 617	25,000 OHM 1/2 W CARBON RES.	C1 15-101	.00148 MFD. MICA CONDENSER #5%	1 19-113	2 GANG CONDENSER	
R2 6105	10,000 - - - - -	C2 1804	.00025 - - - - -	2 10-196	ANTENNA COIL	
R3 6017	1 MEG. - - - - -	C3 1501	.0001 - - - - -	3 10-147	OSCILLATOR COIL	
R4 6018	500,000 - - - - -	C4 1651	.004 - - - - -	4 69-108	WAVE SWITCH	
R5 6056	200,000 - - - - -	C5 1607	05 - - - - -	5 69-115	6 BUTTON PUSH-BUTTON SWITCH	
R6 6028	40,000 - - - - -	C6 1603	01 - - - - -	6 20-106	ANT. TRIMMER STRIP	
R7 6052	800 - - - - -	C7 1614	25 - - - - -	7 20-107	OSC. - - - - -	
R8 60-151	160 - - - - -	C8 1622	05 - - - - -	8 20-100	8C OSC. PADDING TRIMMER	
R9 60-150	51 - - - - -	C9 18-102	8 - - - - -	9 10-194	1ST. I.F. TRANSFORMER	
		C10	4 - - - - -	10 10-195	2ND. I.F. - - - - -	
		C11	4 - - - - -	11 24-105	VOLUME CONTROL	
				12 26-106	TONE CONTROL WITH SWITCH	
				13 80-104	POWER TRANSFORMER	
				14	SPEAKER	

SPIEGEL INC.

MODELS 2104 to 2107
 Chassis 1095B
 MODELS 4510, 4556
 Chassis 1091B
 Automatic Tuner
 Assembly, Data

SERVICE NOTES for "AUTOMATIC-TUNE" WHEEL DIAL

DIAL MECHANISM

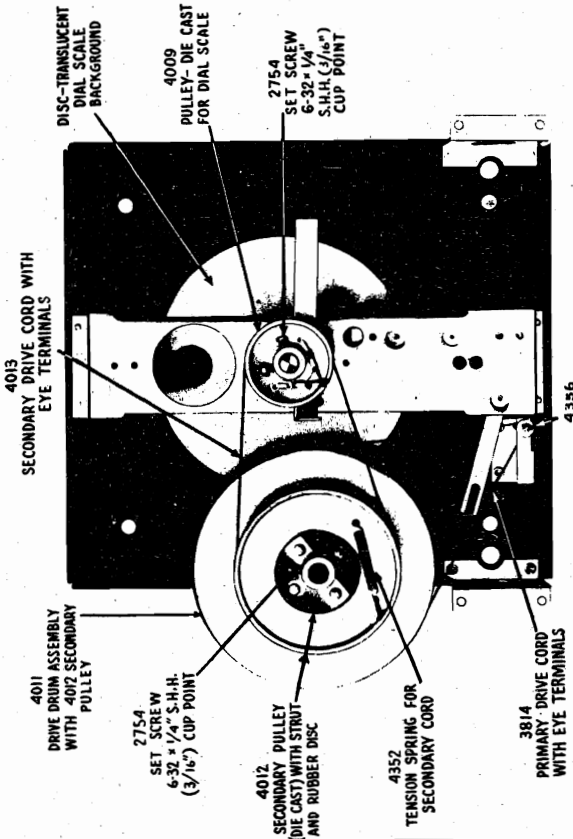


WHEN INSTALLING PART No. 4000 GLASS ASSEMBLY WITH No. 4005 SHAFT ATTACHED carefully follow procedure in order given:


- Insert No. 4005 shaft into main bushing attached to the cadmium plated bracket on back of dial face.
- Place steel spacer washer and brass tension spring in order named over end of No. 4005 shaft.
- Place the small die cast primary pulley No. 4009 on shaft—do not tighten No. 2754 set screws.
- Loosen the two set screws in brass spacer collar on the No. 4005 shaft.
- Adjust brass spacer collar—by sliding collar on shaft—so that there will be approximately 1/8" clearance between the bottom of metal tab holder and the face plate. Firmly retighten brass collar and No. 2754 die cast pulley set screws. Failure to provide proper clearance will result in scratches on dial face and the dial mechanism will not operate freely.

TO INSTALL No. 3814 PRIMARY DRIVE CORD:

- Looking at back of dial, wrap dial cord twice around No. 4355 drive shaft in CLOCKWISE direction.
 - Hook No. 3462 tension spring into loops at end of dial cord.
- NEVER LOOSEN THE FOUR SCREWS THAT HOLD THE CADMIUM PLATED BRACKET TO DIAL FACE—OTHERWISE THE MAIN BUSHING WILL BE THROWN OUT OF CENTER.

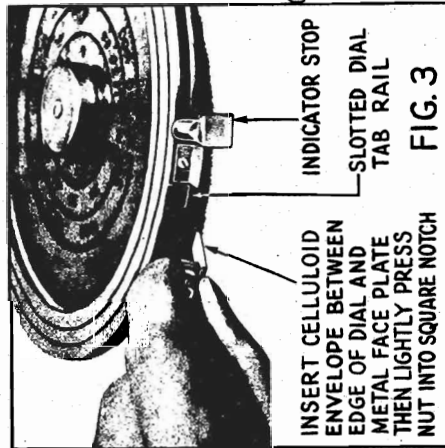

INSERT CELLULOID ENVELOPE BETWEEN EDGE OF DIAL AND METAL FACE PLATE THEN LIGHTLY PRESS NUT INTO SQUARE NOTCH

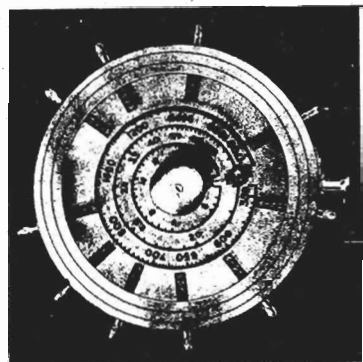

While an "AUTOMATIC-TUNE" tab may be set for distant stations, the "AUTOMATIC-TUNE" tab should be set for "AUTOMATIC-TUNE" are strong nearby or local stations. AFTER IT IS DETERMINED WHAT STATIONS YOU WISH TO AUTOMATICALLY OBTAIN TUNING, THE "AUTOMATIC-TUNE" TAB SHOULD BE SET TO THE STATIONS AND SET STATION TABS BY:

- Lay station call letter tab sheet on flat surface and with a razor or sharp knife cut out desired tab.
- To illustrate the proper setting of station paper strip and metal tab holder the receiver is shipped from the factory with WGN 720 kilocycles. Carefully note that the station call letter tab appears directly below the 720 kilocycle calibration on the face of the dial and that the knurled indicator stop on the dial is directly below the WGN call letter tab.
- If station WGN is not one of the selected stations or if a tab is to be set for a station which operates on a frequency less than 720 kilocycles, remove WGN celluloid envelope and station call letter paper.
- Loosen tab holder by grasping knurled end of metal tab with finger tips and turn one or two turns to the left.
- Slide the metal holder tab to square notch attached to dial rail—adjacent to permanently attached tab stop—and pull outward on tab until it is pulled free from tab holder rail.
- Slide the celluloid envelope out of the metal holder.

- INSERT CELLULOID ENVELOPE INTO A METAL TAB HOLDER BY:
 - Hold end of celluloid envelope to radio metal knurled tab holder and insert celluloid into metal frame.
 - Gently push celluloid inward until curved end of envelope touches edge of celluloid envelope tab frame.
 - Arrange tabs in numerical order according to station frequency.
- SET THE METAL TAB HOLDERS ON DIAL BY: (See Fig. 3)
 - Set the first metal tab holder for the station with the lowest frequency. Loosen the knurled tab holder and set the least number of kilocycles—and then set the next station tab for the selected station operating on the next lowest frequency, continuing on in this way until a tab has been set for all of the selected stations.
 - Carefully tune in the station which broadcasts on the lowest frequency—least number of kilocycles.
 - Insert celluloid envelope between edge of dial and metal face plate—lightly press nut on end of knurled tab into square notch in slotted dial rail—then slide tab holder along rail until the knurled tab is underneath the indicator stop on the dial. The indicator stop on the dial will now be directly below the indicator line on the face of the dial.
 - Tighten tab holders as much as possible without moving dial by turning knurled tab to the right—then swing dial so knurled tab is away from indicator stop on the dial and firmly tighten so it fits it. DO NOT USE PLIERS TO TIGHTEN.
- REPLACE EACH SELECTED STATION CELLULOID ENVELOPE BY:
 - Hold celluloid envelope with curved end up.
 - Place station call letter paper strip inside of celluloid envelope with printed call letters upward.


REPLACING No. 4000 DIAL GLASS SCALE ASSEMBLY

As it requires special tools to properly set part No. 4005 shaft assembly on part No. 4000 glass scale—we will ship all orders for No. 4000 glass scales with the No. 4005 shaft assembled on the glass scale.

MODELS 2104 to 2107
MODELS 4510,4556
Push-Button Tuner
Assembly,Notes,Parts

SPIEGEL INC.

SERVICE NOTES for PUSH BUTTON DIAL

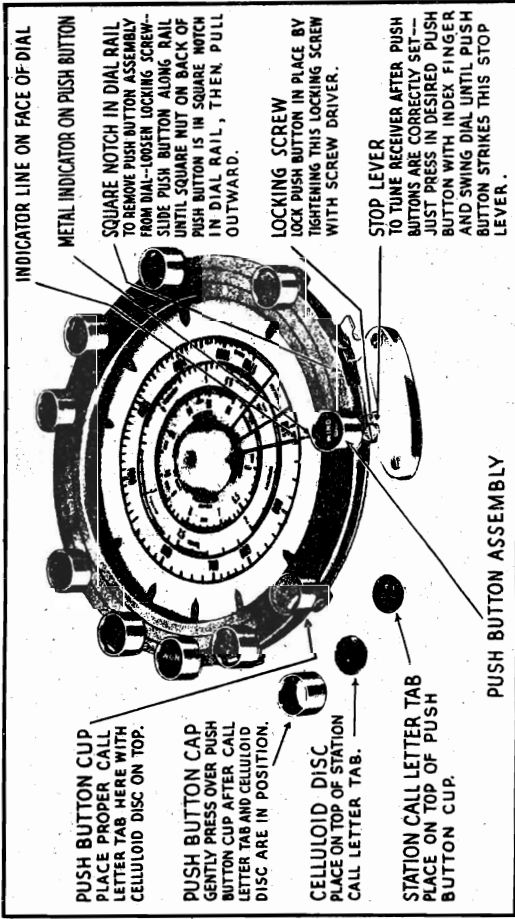

INDICATOR LINE ON FACE OF DIAL
METAL INDICATOR ON PUSH BUTTON
SQUARE NOTCH IN DIAL RAIL
TO REMOVE PUSH BUTTON ASSEMBLY
FROM DIAL—LOOSEN LOCKING SCREW—
SLIDE PUSH BUTTON ALONG RAIL
UNTIL SQUARE NUT ON BACK OF
PUSH BUTTON IS IN SQUARE NOTCH
IN DIAL RAIL, THEN PULL
OUTWARD.
LOCKING SCREW
LOCK PUSH BUTTON IN PLACE BY
TIGHTENING THIS LOCKING SCREW
WITH SCREW DRIVER.
STOP LEVER
TO TUNE RECEIVER AFTER PUSH
BUTTONS ARE CORRECTLY SET—
JUST PRESS IN DESIRED PUSH
BUTTON WITH INDEX FINGER
AND SWING DIAL UNTIL PUSH
BUTTON STRIKES THIS STOP
LEVER.

PUSH BUTTON CUP
PLACE PROPER CALL
LETTER TAB HERE WITH
CELLULOID DISC ON TOP.
PUSH BUTTON CAP
GENTLY PRESS OVER PUSH
BUTTON CUP AFTER CALL
LETTER TAB AND CELLULOID
DISC ARE IN POSITION.
CELLULOID DISC
PLACE ON TOP OF STATION
CALL LETTER TAB.
STATION CALL LETTER TAB
PLACE ON TOP OF PUSH
BUTTON CUP.
PUSH BUTTON ASSEMBLY

PARTS LIST

COMPLETE PUSH BUTTON DIAL ASSEMBLY LESS ESCUTCHEON

Part No.	Description	List Price
211	Dial Assembly Used With Model 78B Complete Assembly Less Escutcheon.....	\$12.75
212	Dial Assembly Used With Model 78BE Complete Assembly Less Escutcheon.....	12.75
208	Dial Assembly Used With Model 82A Complete Assembly Less Escutcheon.....	12.75
209	Dial Assembly Used With Model 82AE & 86AE Complete Assembly Less Escutcheon.....	12.75
210	Dial Assembly Used With Model 91B & 95B Complete Assembly Less Escutcheon.....	12.25

MISCELLANEOUS PARTS USED IN ABOVE ASSEMBLIES

4047	Cup	Push Button	.15
4046	Celluloid Disc	Station Call Letter Cover	.05
3814	Cord	Primary Drive Cord	.15
4013	Cord	Secondary Drive Cord	.15
4041	Cup Assembly	Push Button—With Clip and Compression Spring	.15
3995	Band Indicator Assem.	For Model 78BE/78B-91B-95B	.75
3992	Band Indicator Assem.	For Model 82AE/82A-86AE	.75
4011	Drive Drum Assem. with	4012 Secondary Pulley and Rubber Disc Coupler	1.25
4355	Drive Shaft		.12
4027	Disc	Translucent Dial Scale Background for Model 78BE	.50
3994	Disc	Translucent Dial Scale Background for Model 82AE & 86AE	.55
4024	Disc	Translucent Dial Scale Background for Model 82A	.55
4029	Disc	Translucent Dial Scale Background for Model 91B, 95B & 78B	.50
3771	Escutcheon	For Cabinet—All Models	1.00
4040	Hub Cap		.15
4009	Pulley	Dial Scale Drive (Die Cast)	.45
4039	Plate	Slide Stop	.10
4000	Scale	Calibrated Glass Scale With 4005 Shaft Assem.	2.75
8071	Screw	For Hub Cap 3/48 x 1/4" O.H.I.M.	.005
2754	Screw	For Pulley 6/32 x 1/4" S.H.H. Cup Point	.01
4037	Slide Stop	Push Button Stop	.10
4356	Spring Lock	For Drive Shaft	.01
4352	Spring Tension	For Secondary Cord	.07
3462	Spring Tension	For Primary Cord	.07

Prices are subject to change without notice.
When ordering parts be sure to mention part number and order all parts from:

Printed in U.S.A.

FROM ONE TO TEN STATIONS OPERATING ON FREQUENCIES SEPARATED BY FORTY KILOCYCLES OR MORE MAY BE AUTOMATICALLY TUNED BY PROPERLY SETTING PUSH BUTTONS.

IT IS A SIMPLE MATTER TO "AUTOMATIC TUNE" AFTER THE STATION PUSH BUTTONS HAVE BEEN PROPERLY SET—JUST PLACE INDEX FINGER INTO THE PUSH BUTTON HAVING CALL LETTERS OF THE DESIRED STATION AND TURN DIAL UNTIL THE STATION DIAL STOPS AT WHICH POINT THE DESIRED STATION SHOULD BE PROPERLY TUNED IN AND THE METAL INDICATOR ATTACHED TO THE PUSH BUTTON SHOULD POINT TO THE STATION NAME ON FACE OF DIAL. If reception is slightly better, turn dial a few tenths of a degree when tuning weak stations—return for maximum clarity by using conventional tuning knob.

WHILE A PUSH BUTTON MAY BE SET FOR DISTANT WEAK STATIONS, BETTER RESULTS WILL BE OBTAINED IF THE STATIONS SELECTED FOR "AUTOMATIC PUSH BUTTON TUNING" ARE STRONG NEARBY OR LOCAL STATIONS.

AFTER IT IS DETERMINED WHAT STATIONS YOU WISH TO "AUTOMATIC PUSH BUTTON TUNE" OBTAIN THE FREQUENCY USED AND CALL LETTERS OF THESE STATIONS AND SET PUSH BUTTONS BY:

To illustrate the proper installation and setting of the Push Buttons, the receiver is shipped from the factory with a Push Button properly set for station WGN, Chicago, 720 kilocycles. If the frequency is not one of the selected stations, remove call letters by:

- Grasp cap section of Push Button between fingers and gently pull outward until it is clear of dial.
- Carefully remove the station call letter tab and celluloid disc.

AFTER THE TEN PUSH BUTTONS HAVE BEEN PROPERLY SET THEY WILL NOT REQUIRE FURTHER ATTENTION—EXCEPT WHEN MOVED FROM THEIR POSITION OR WHEN AN ADDITIONAL TAB IS INCLUDED WHICH WOULD DISTURB THE POSITION OF THE OTHER TABS.

SET STATION PUSH BUTTON BY:

- Gently press desired round paper station call letter tabs out of station tab slot.
- Always set the first push button for the desired station frequency. Then set the next push button for the selected station operating on the next lowest frequency, continuing on in this manner until a Push Button has been set for all of the desired stations.
- Loosen Push Button locking screw and remove caps on all Push Buttons by grasping cap between fingers and gently pulling outward—then remove celluloid discs.
- Carefully tune in the station which broadcasts on the lowest frequency—insert number of kilocycles.
- Slide the Push Button nearest to the low frequency end of dial scale—without moving dial—until metal indicator line on the face of the dial—then with a small screw driver firmly lock Push Button in place by tightening Push Button locking screw.
- Place printed paper station call letter tab, having call letters of station tuned in—on top of Push Button cap. Gently press station call letter tab into station cap and gently press Push Button cap firmly down over Push Button cup.
- Next set a Push Button for the desired station operating on the next lowest frequency in the same manner as above and continue on in this way until all the Push Buttons have been properly set.


SPIEGEL INC.

MODELS 2104 to 2107
MODELS 4510, 4556
Drive Cord Data


TO INSTALL No. 4013 SECONDARY DRIVE CORD:

The dial mechanism picture shows and refers to eye terminals on drive cord—these were used in early production. Loops made by knots in the cords are now used to attach cord to lugs in the No. 4009 die cast pulley and to the No. 4352 & 3462 tension springs.

- (a) Looking at the front of the dial rotate dial scale COUNTER-CLOCKWISE until dial stop is reached.
- (b) Loosen the two No. 2754 set screws in small die cast pulley No. 4009.
- (c) Looking at front of dial turn the small die cast pulley so that the cut out in pulley will be towards the left and approximately in line with the upper edge of the dial light bracket. This bracket which is only used in six volt battery and 110 volt AC models is shown mounted on the cadmium plated dial face plate bracket in dial mechanism picture.
- (d) Hook No. 4352 tension spring in dial cord loop.
- (e) Turn No. 4011 drum so that the hole in the No. 4012 large die cast pulley—through which the secondary drive cord is pulled—is towards the top of face plate. This will bring the hole approximately in line with the left hand edge (looking at back of dial) of face plate.

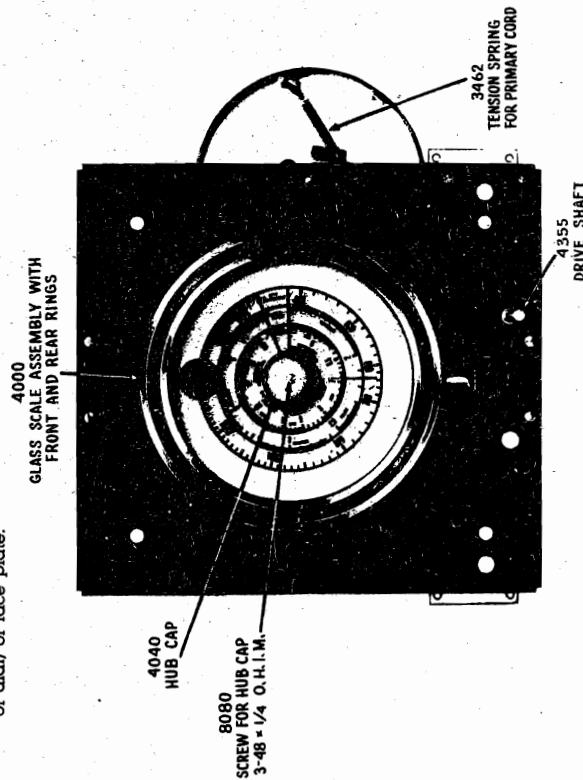

- (f) Take long end of No. 4013 secondary drive cord—measured from knot at spring to end of cord—then looking at the front of dial, wrap cord one complete turn CLOCKWISE around the No. 4009 small die cast pulley. The other end of the cord (short end) is placed on bottom half of secondary and primary die cast pulleys.
- (g) Firmly tighten No. 2754 set screws in small die cast pulley.

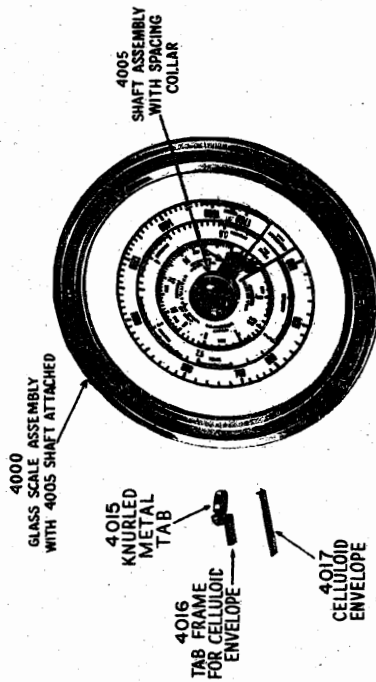

COMPLETE WHEEL DIAL ASSEMBLY LESS ESCUTCHEON

Part No.	Part Name	Description	Last Price
205	Dial Assembly	Used With Model 78B Complete Assembly Less Escutcheon.....	\$12.75
206	Dial Assembly	Used With Model 78BE Complete Assembly Less Escutcheon.....	12.75
201	Dial Assembly	Used With Model 82A Complete Assembly Less Escutcheon.....	12.75
204	Dial Assembly	Used With Model 82AE & 86AE Complete Assembly Less Escutcheon.....	12.75
		Used With Model 91B & 95B Complete Assembly Less Escutcheon.....	12.25

MISCELLANEOUS PARTS USED IN ABOVE ASSEMBLIES

4016	Celluloid Envelope	Station Call Letter Cover.....	.05
3814	Cord	Primary Drive Cord.....	.15
4013	Cord	Secondary Drive Cord.....	.15
3985	Band Indicator Assen.	For Model 78BE; 78B-91B-95B.....	.75
3982	Band Indicator Assen.	For Model 82AE-82A-86AE.....	.75
4011	Drive Drum Assen.	with 4012 Secondary Pulley and Rubber Disc Coupler.....	1.25
4355	Drive Shaft12
4027	Disc50
3984	Disc	Translucent Dial Scale Background for Model 78BE.....	.55
4024	Disc	Translucent Dial Scale Background for Model 82AE & 86AE.....	.55
4029	Disc	Translucent Dial Scale Background for Model 82A.....	.50
3771	Escutcheon	For Cabinet—All Models.....	1.00
4017	Frame	Metal Holder for Celluloid Envelope.....	.05
4040	Hub Cap15
4015	Knurled Tab05
4009	Pulley	Dial Scale Drive (Die Cast).....	.45
4000	Scale	Calibrated Glass Scale With 4005 Shaft Assen.....	2.75
8071	Screw	For Hub Cap 3-48 x 1/4" O.H.I.M.....	.005
2754	Screw	For Pulley 6-32 x 1/4" S.H.H. Cup Point.....	.01
4356	Spring Lock	For Drive Shaft.....	.01
4352	Spring Tension	For Secondary Cord.....	.07
3462	Spring Tension	For Primary Cord.....	.07


Prices are subject to change without notice.

MODELS 2222, 2223, 2224, 2225

Chassis 25

Schematic, Alignment

SPIEGEL INC.

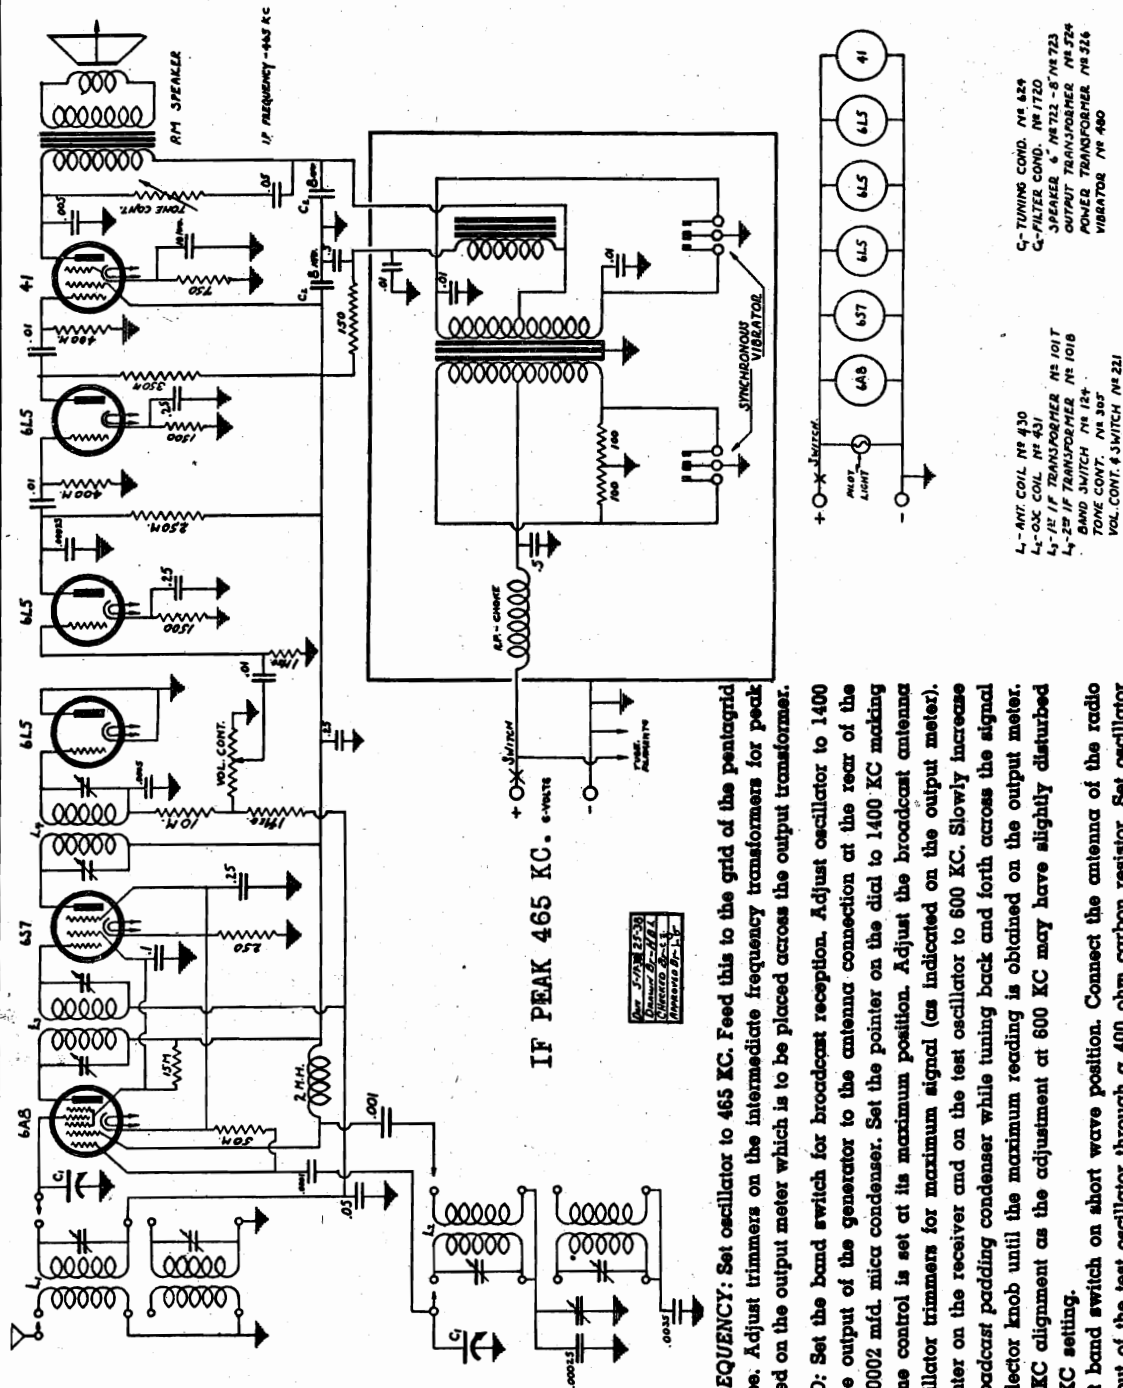

IF PEAK 465 KC. ±4%



INTERMEDIATE FREQUENCY: Set oscillator to 465 KC. Feed this to the grid of the pentagrid (6A7) converter tube. Adjust trimmers on the intermediate frequency transformers for peak readings as indicated on the output meter which is to be placed across the output transformer.

BROADCAST BAND: Set the band switch for broadcast reception. Adjust oscillator to 1400 KC and connect the output of the generator to the antenna connection at the rear of the chassis through a .0002 mfd. mica condenser. Set the pointer on the dial to 1400 KC making sure that the volume control is set at its maximum position. Adjust the broadcast antenna and broadcast oscillator trimmers for maximum signal (as indicated on the output meter). Re-set the dial pointer on the receiver and on the test oscillator to 600 KC. Slowly increase or decrease the broadcast padding condenser while tuning back and forth across the signal with the station selector knob until the maximum reading is obtained on the output meter. Re-check the 1400 KC alignment as the adjustment at 600 KC may have slightly disturbed the original 1400 KC setting.

SHORT WAVE: Set band switch on short wave position. Connect the antenna of the radio receiver to the output of the test oscillator through a 400 ohm carbon resistor. Set oscillator and receiver dial at 15 megacycles. Adjust the short wave antenna and short wave oscillator trimming condensers for maximum output as indicated by readings on the output meter. No other adjustments are necessary for aligning this band.

It is advisable to check the sensitivity at 6000 KC to determine whether the circuits are properly aligned. Should the receiver lack sensitivity at this frequency check the .0035 mica condenser for short circuit.


- L- ANT. COIL NR 430
- L- OX. COIL NR 431
- L- 1/2 IF TRANSFORMER NR 1017
- L- 2/2 IF TRANSFORMER NR 1018
- BAND SWITCH NR 124
- TRIMMER NR 307
- VOL. CONT. & SWITCH NR 221
- C- TUNING COND. NR 429
- C- FILTER COND. NR 1720
- SPEAKER 6" NR 722 - 8 NR 723
- OUTPUT TRANSFORMER NR 274
- POWER TRANSFORMER NR 216
- VIBRATOR NR 480

This receiver is designed to operate over two tuning ranges.
 from 540 K.C. to 1730 and
 from 5800 K.C. to 18000 K.C.

Schematic, Voltage Socket

SPIEGEL INC.

MODELS 4000, 4020 Chassis 1098AE

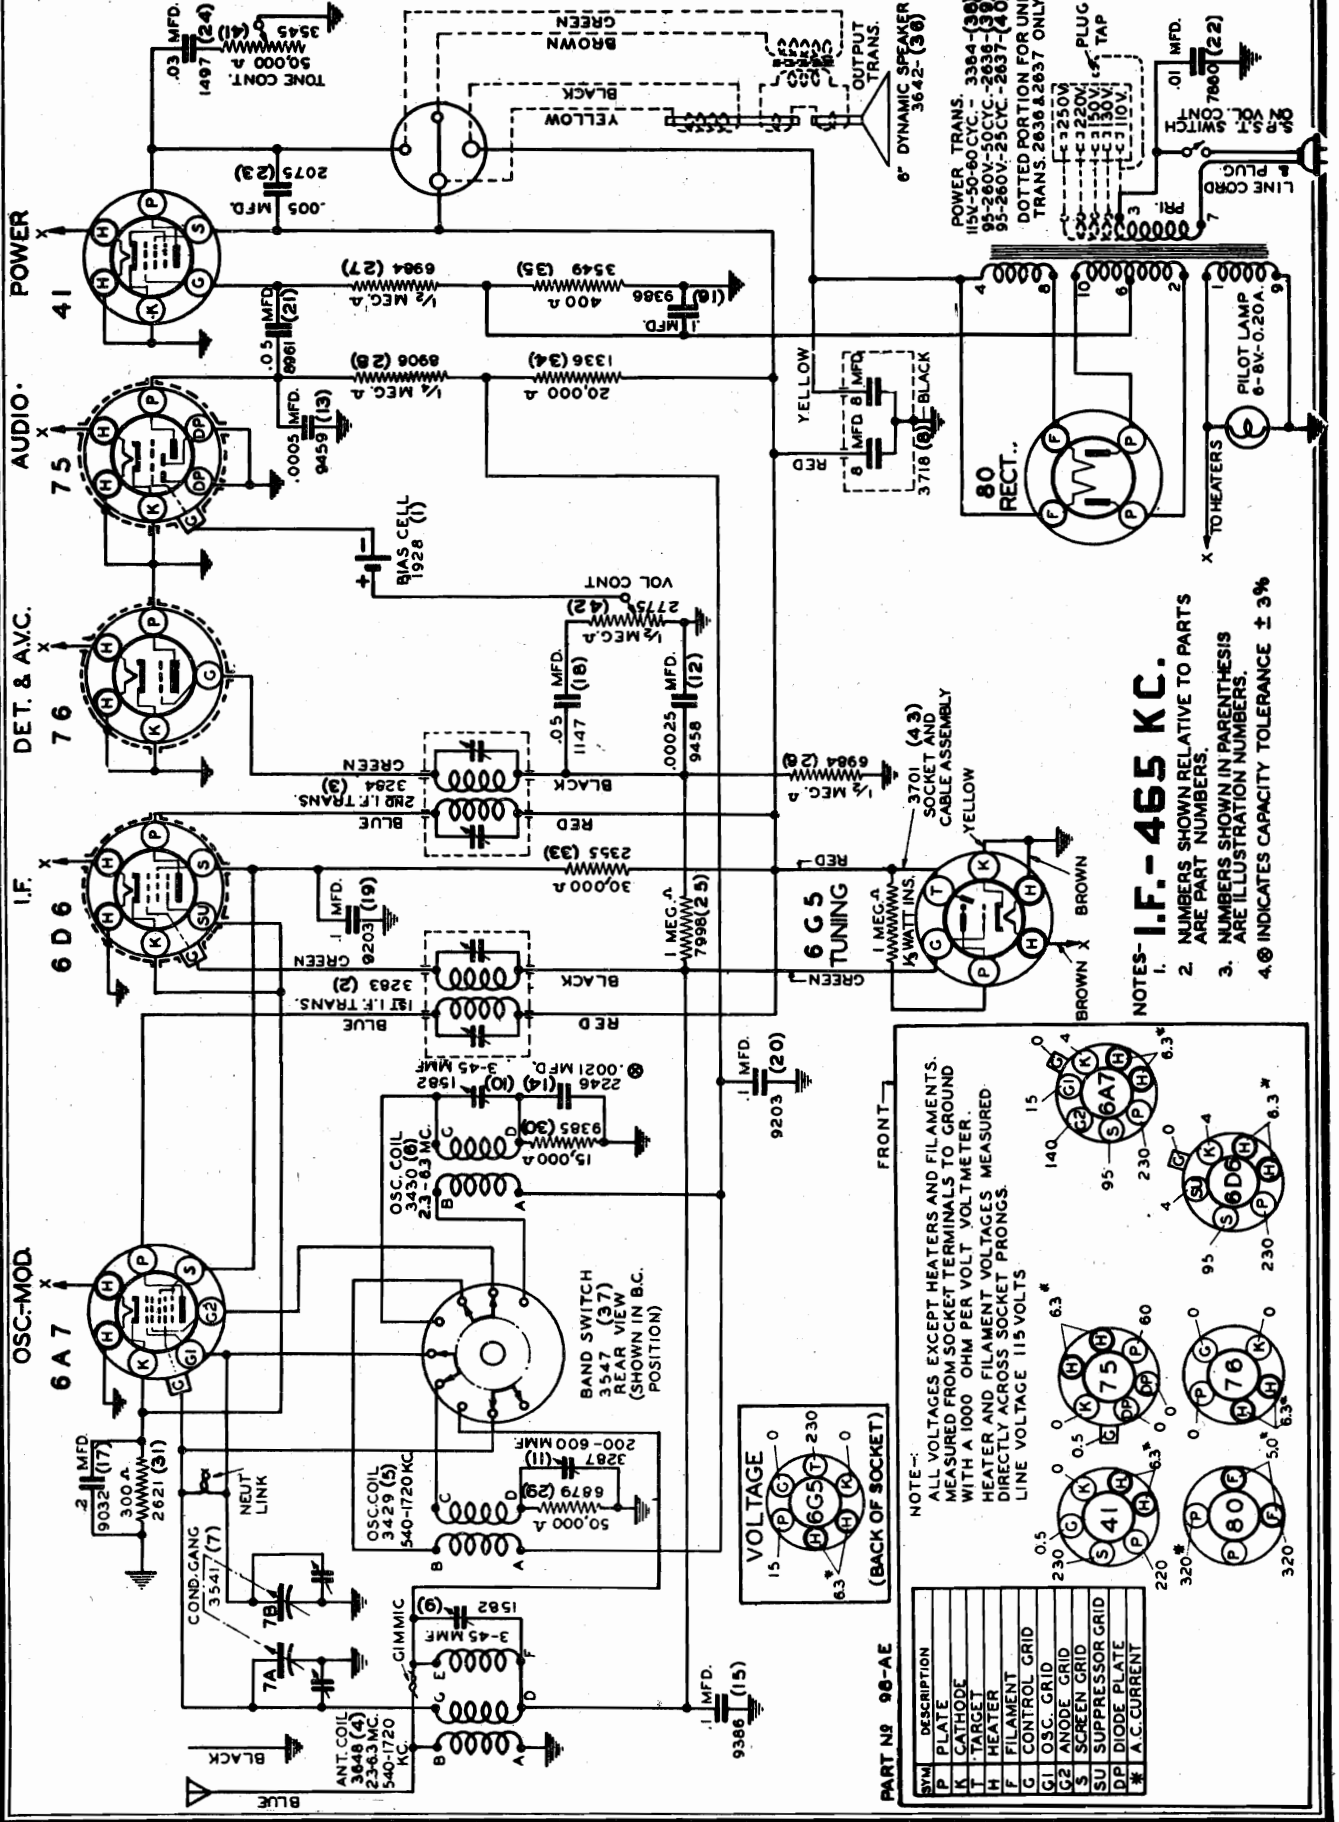



POWER TRANS.
115V-50-60 CYC. - 3384-(36)
95-260V-50 CYC. - 2638-(38)
95-260V-25 CYC. - 2637-(40)
DOTTED PORTION FOR UNIV.
TRANS. 2636 & 2637 ONLY

8" DYNAMIC SPEAKER
3642-(36)

PLUG TAP
250V
220V
110V
115V
100V
90V
80V
70V
60V
50V
40V
30V
20V
10V

LINE CORD
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100

- NOTES- I.F. - 465 KC.**
1. NUMBERS SHOWN RELATIVE TO PARTS ARE PART NUMBERS.
 2. NUMBERS SHOWN IN PARENTHESIS ARE ILLUSTRATION NUMBERS.
 3. NUMBERS SHOWN IN PARENTHESIS ARE ILLUSTRATION NUMBERS.
 4. Ⓢ INDICATES CAPACITY TOLERANCE ± 3%

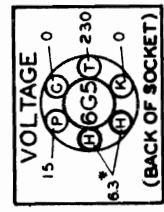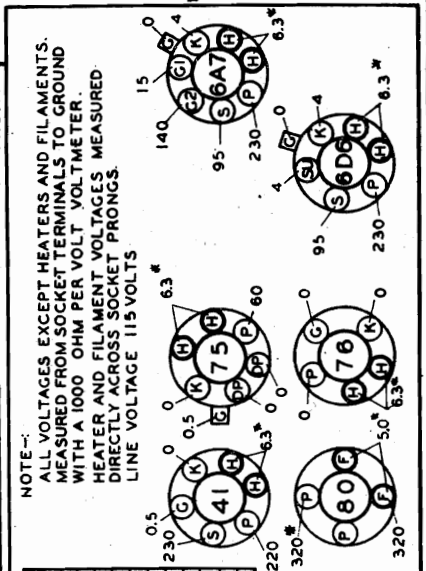



NOTE- ALL VOLTAGES EXCEPT HEATERS AND FILAMENTS MEASURED FROM SOCKET TERMINALS TO GROUND WITH A 1000 OHM PER VOLT VOLTMETER. HEATER AND FILAMENT VOLTAGES MEASURED DIRECTLY ACROSS SOCKET PRONGS LINE VOLTAGE 115 VOLTS

PART NO 98-AE

SYM	DESCRIPTION
P	PLATE
K	CATHODE
T	TARGET
H	HEATER
F	FILAMENT
G	CONTROL GRID
G1	OSC. GRID
G2	ANODE GRID
S	SCREEN GRID
SU	SUPPRESSOR GRID
DP	DIODE PLATE
*	A.C. CURRENT

MODELS 4000, 4020
 Chassis 1098AE
 Chassis, Socket
 Alignment, Trimmers

SPIEGEL INC.

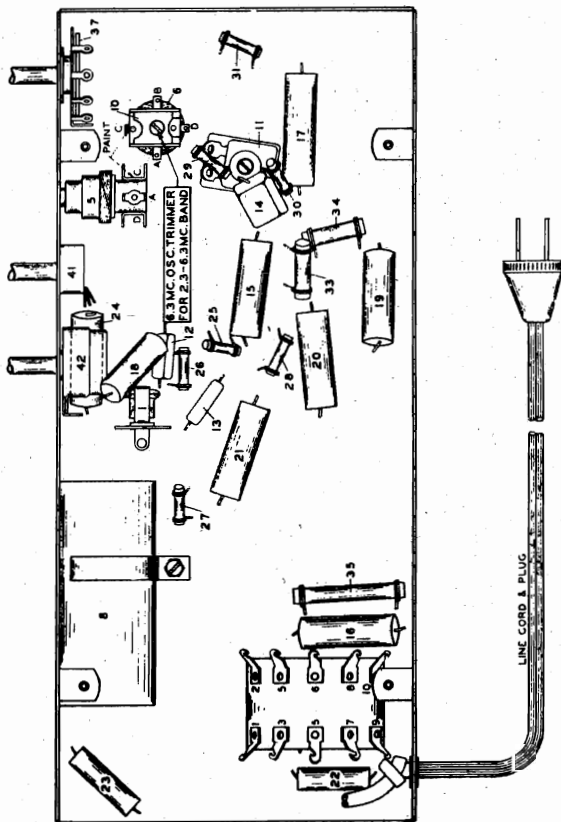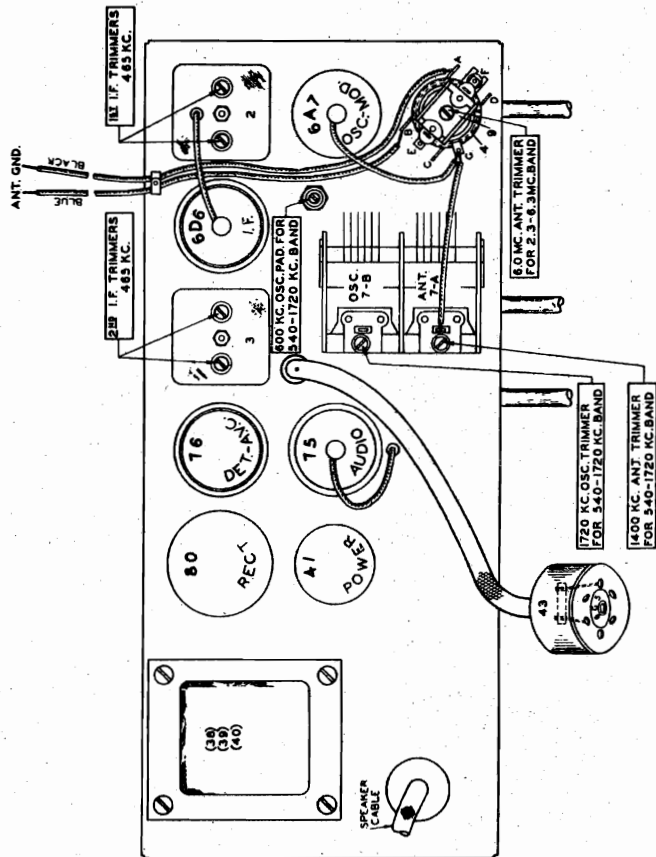

ALIGNMENT PROCEDURE:

Lack of sensitivity, selectivity or poor tone quality may be due to any one or a combination of causes such as weak or defective tubes or speaker; open or grounded bias resistor, bypass condenser, inadequate or excessively long antenna, etc. Never attempt to realign set until all other possible sources of trouble have been first thoroughly investigated and definitely proven not to be the cause.

NOTE: BE SURE TO FOLLOW PROCEDURE CAREFULLY WHEN ALIGNING, OTHERWISE THE RECEIVER WILL BE INSENSITIVE AND THE DIAL CALIBRATION WILL BE INCORRECT.

IT IS ABSOLUTELY NECESSARY THAT AN ACCURATELY CALIBRATED TEST OSCILLATOR WITH SOME TYPE OF OUTPUT MEASURING DEVICE BE USED WHEN ALIGNING THE RECEIVER.

ALIGNING I.F. STAGE AT 465 KILOCYCLES:

- Connect the ground lead of the test oscillator to the chassis or set ground lead. Connect the other lead of the test oscillator to the grid cap of the 6A7 tube through a .02 Mfd. series condenser. **DO NOT REMOVE GRID CLIP.**
- Set test oscillator to **EXACTLY 465 kilocycles** and turn receiver volume control on full.
- Peak each of the second I.F. transformer trimmers.
- Peak each of the first I.F. transformer trimmers.
 To assure most accurate trimmer setting repeat above adjustment several times always using lowest possible test oscillator output consistent with readable output meter scale deflection.

ALIGNING 1720-540 KILOCYCLE BAND:


- Remove test oscillator lead from grid of the 6A7 tube and attach it to the receiver antenna lead through a .00025 Mfd. series condenser.
- Check tuning dial adjustment by turning gang condenser until plates touch maximum capacity stop (completely in mesh), at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If the dial needle does not point exactly to the last line move needle to correct position.
- Set receiver dial and test oscillator frequency to **EXACTLY 1720 kilocycles.**
- Bring in 1720 KC test oscillator signal to maximum output by adjusting the trimmer condenser mounted on top of the oscillator section of the gang condenser. Looking at the front of the receiver the rear section of the gang condenser is the oscillator section.
- Tune receiver dial and set test oscillator frequency to **EXACTLY 1400 kilocycles:**
- Adjust trimmer on top of the front section gang condenser (antenna section) for maximum 1400 kilocycle test signal response.
- Tune receiver dial and set test oscillator frequency to approximately 600 kilocycles.
- While rocking the tuning condenser back and forth adjust 600 KC oscillator padder condenser which is accessible through the hole in the top of the chassis adjacent to the gang condenser for maximum 600 kilocycle signal response.

ALIGNING 2.3-6.3 MEGACYCLE BAND:

- Replace .00025 Mfd. Test oscillator antenna lead series condenser with a 400 ohm resistor.
- Adjust band selector switch for 2.3-6.3 megacycles band operation, tune receiver dial and set test oscillator frequency to **EXACTLY 6.3 megacycles.**
- Bring in 6.3 megacycle test oscillator signal to maximum output by adjusting 6.3 M.C. oscillator trimmer on top of coil located underneath chassis.
- Tune receiver dial and test oscillator frequency to **EXACTLY 6 megacycles**, and adjust 6 M.C. antenna trimmer which is mounted on coil located on top of chassis for maximum sensitivity.


SPIEGEL INC.

MODELS 4402, 4410
Chassis 562
Schematic, Voltage
Alignment, Socket

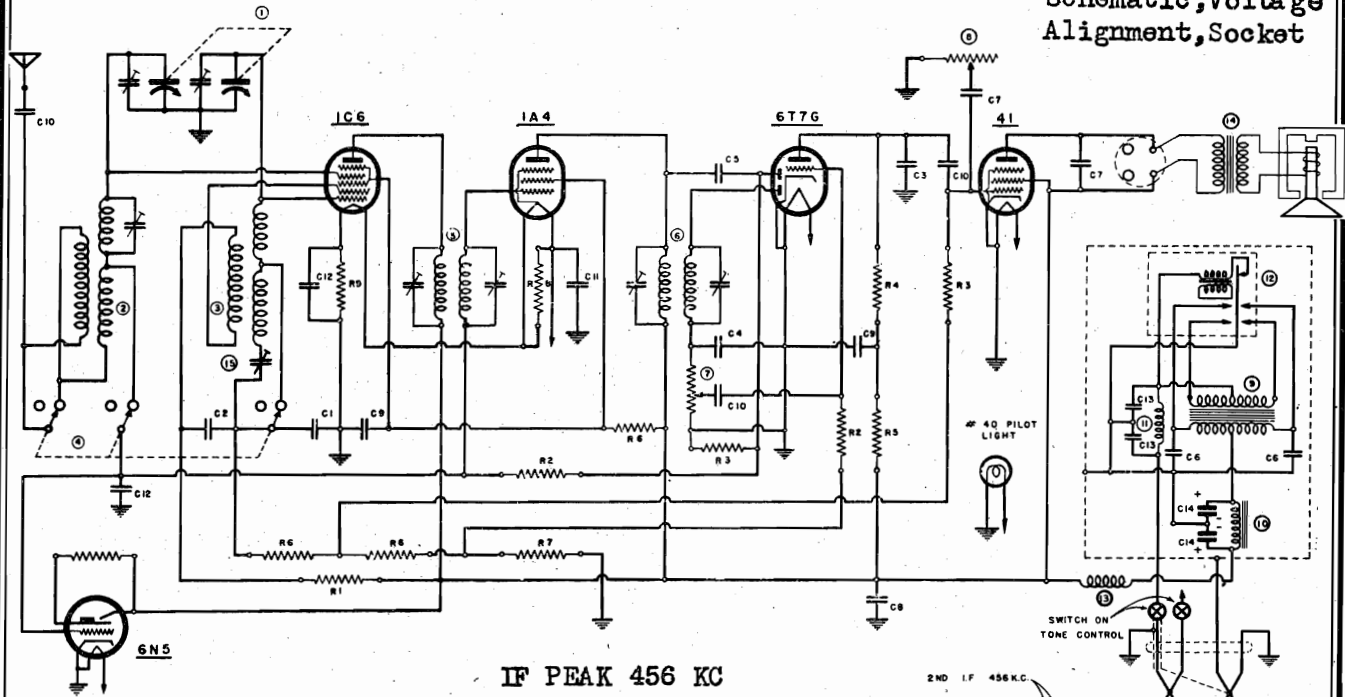




IF PEAK 456 KC

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
R1 6120	20,000 OHM 1/2 WATT CARBON RES.	C1 1509C	.002 MFD. MICA ± 5%	1 10-113	2-GANG VARIABLE CONDENSER
R2 6017	1 MEG. 1/3	C2 1500	.001	2 10-123	ANTENNA COIL
R3 6015	500,000	C3 1504	.00025	3 10-124	OSCILLATOR COIL
R4 6024	250,000	C4 1501	.0001	4 69-111	WAVE SWITCH
R5 6026	100,000	C5 1503	.00005	5 10-185	1ST IF TRANSFORMER
R6 6027	25,000	C6 1604	01	6 10-186	2ND IF
R7 60-142	4000	C7 1611	.006	7 24-105	VOLUME CONTROL
R8 60-108	33 1/2	C8 1616	.25	8 26-107	1ST IF TRANSFORMER WITH SWITCH
R9 60-181	16 2/3	C9 1601	.1	9 80-130	POWER TRANSFORMER
		C10 1603	.01	10 3307	FILTER CHOKE
		C11 1614	.25	11 33-200	R.F. CHOKES
		C12 1600	.1	12 3407	VIBRATOR
		C13 1655	.5	13 33-204	R.F. CHOKE
		C14 1845	DUAL 8	14	SPEAKER
				15 20-100	B.C. OSC. PADDING CONDENSER

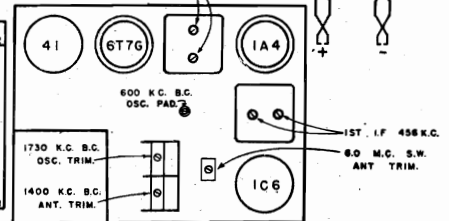

VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMETER
ALL VOLTAGES EXCEPT HEATERS MEASURED TO GROUND.


- F --- FILAMENT
- H --- HEATER
- K --- CATHODE
- SU --- SUPPRESSOR
- GS --- SCREEN GRID
- G1 --- OSC. GRID
- G2 --- OSC. PLATE
- G --- CONTROL GRID
- DP --- DIODE PLATE
- P --- PLATE

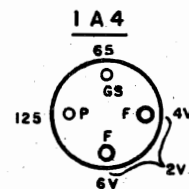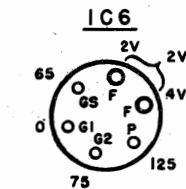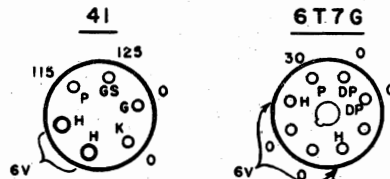

IF ALIGNMENT - Set test oscillator at 456 KC and adjust trimmers for maximum output. **BROADCAST ALIGNMENT** - At 1730 KC, adjust BC oscillator for maximum output. At 1400 KC adjust Antenna trimmer for maximum output. At 600 KC, adjust BC oscillator for maximum output. **SHORT WAVE ALIGNMENT** - Feed 6 MC signal to antenna thru .00025 MF and adjust SW trimmer at 6 MC. BC alignment is thru .00025 MF cond.

MODEL 4534, Chassis 10M
Schematic, Voltage
Alignment

SPIEGEL INC.

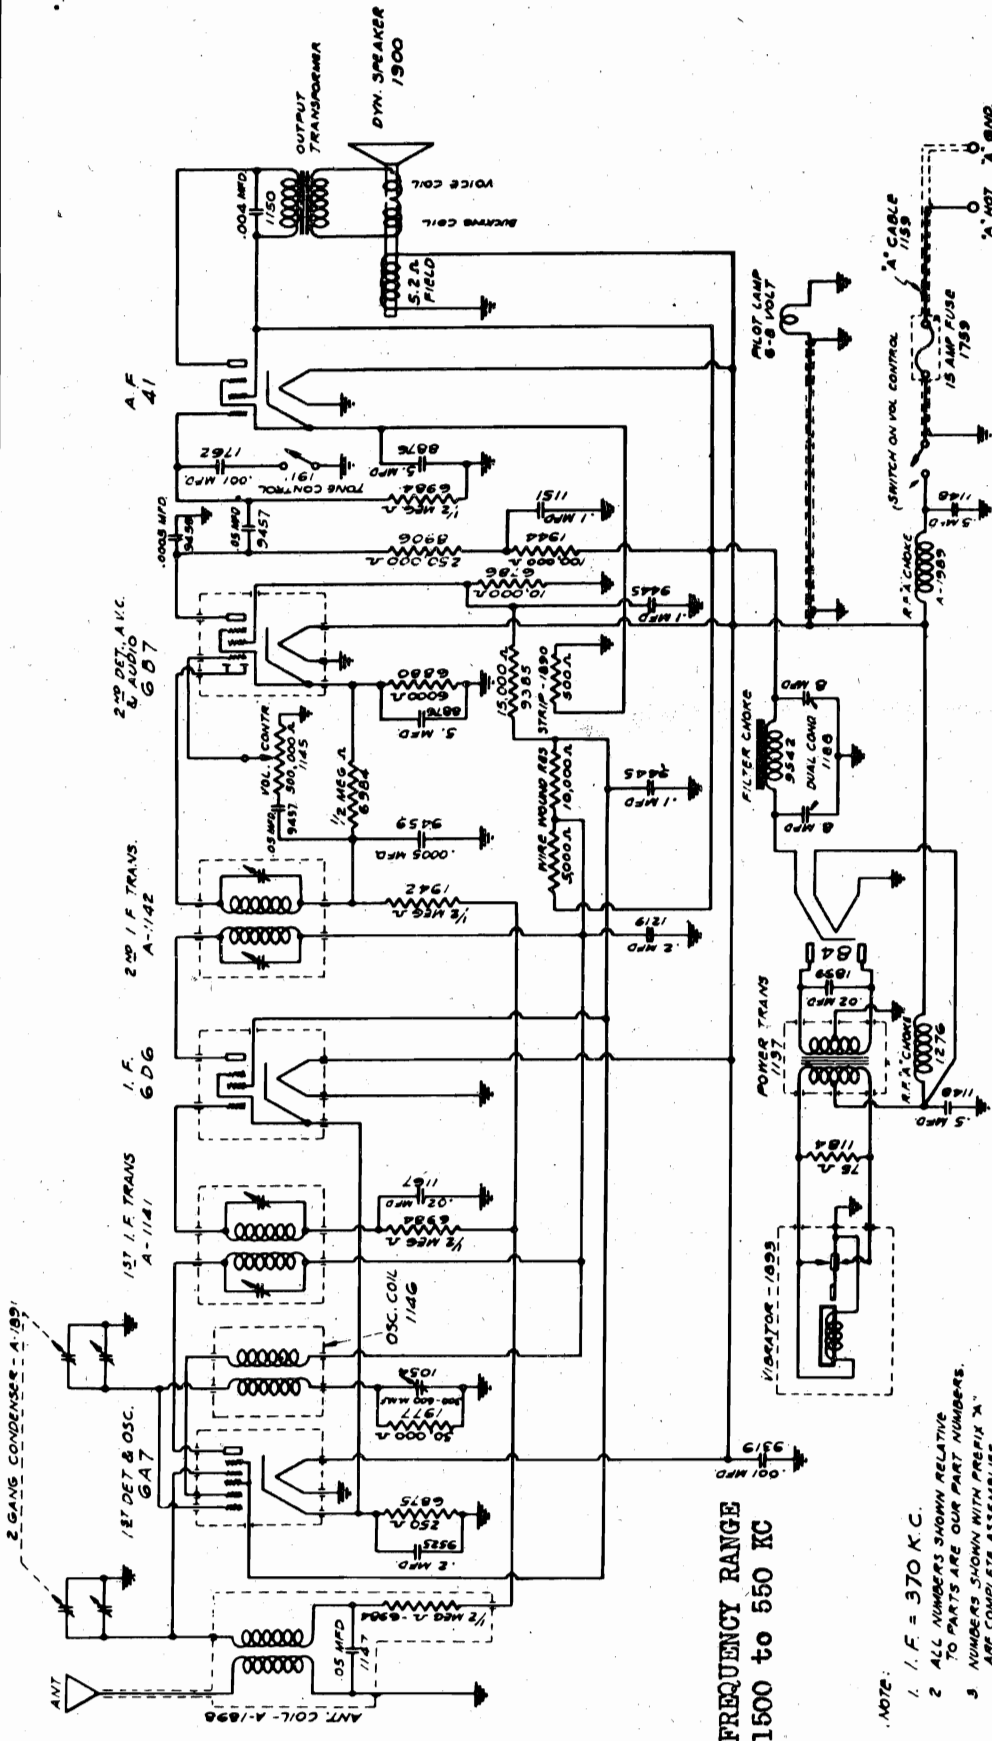

FREQUENCY RANGE
1500 to 550 KC

- NOTE:
1. I. F. = 370 K.C.
 2. ALL NUMBERS SHOWN RELATIVE TO PARTS ARE OUR PART NUMBERS.
 3. NUMBERS SHOWN WITH PREFIX "A" ARE COMPLETE ASSEMBLIES.

ALIGNMENT FREQUENCIES




IF 370 KC
Os. & Ant. 1400 KC
Padder 600 KC
CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOL. VIII

TUBE TYPE	TUBE POSITION	FILAMENT VOLTS	PLATE VOLTS	CATHODE VOLTS	SCREEN VOLTS	GRID No.1	GRIDS No. 3&5	
6A7	- OSC. & MOD.	6	180	3.6	-	180	75	
6D6	- I-F	6	180	3.6	-	75	-	
6B7	- 2nd Det & AVC	6	32 *	1.9	-	30*	-	
41	- OUTPUT	6	220	15	-	230	-	
84	- RECTIFIER	6	-	230	-	-	-	
			TOTAL "A" VOLTAGE	TOTAL "A" CURRENT				5.9 AMP



* Comparative voltage only.

SPIEGEL INC.

MODELS 5104, 5152
Chassis 1075B
Schematic, Voltage, Chassis
Alignment, Socket, Trimmers

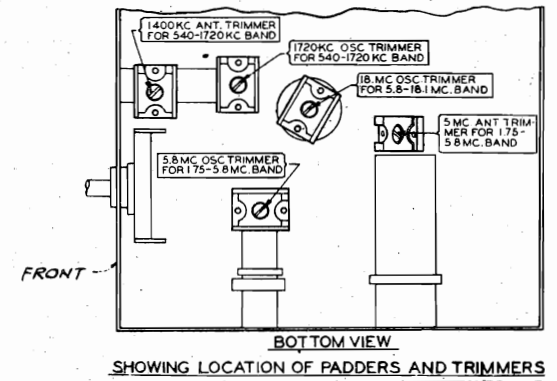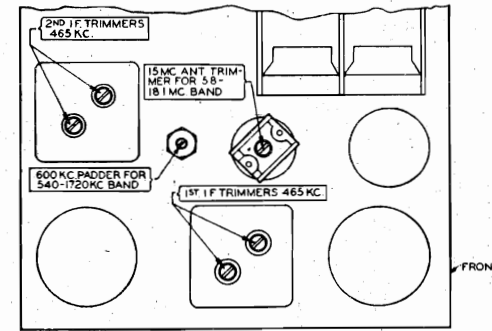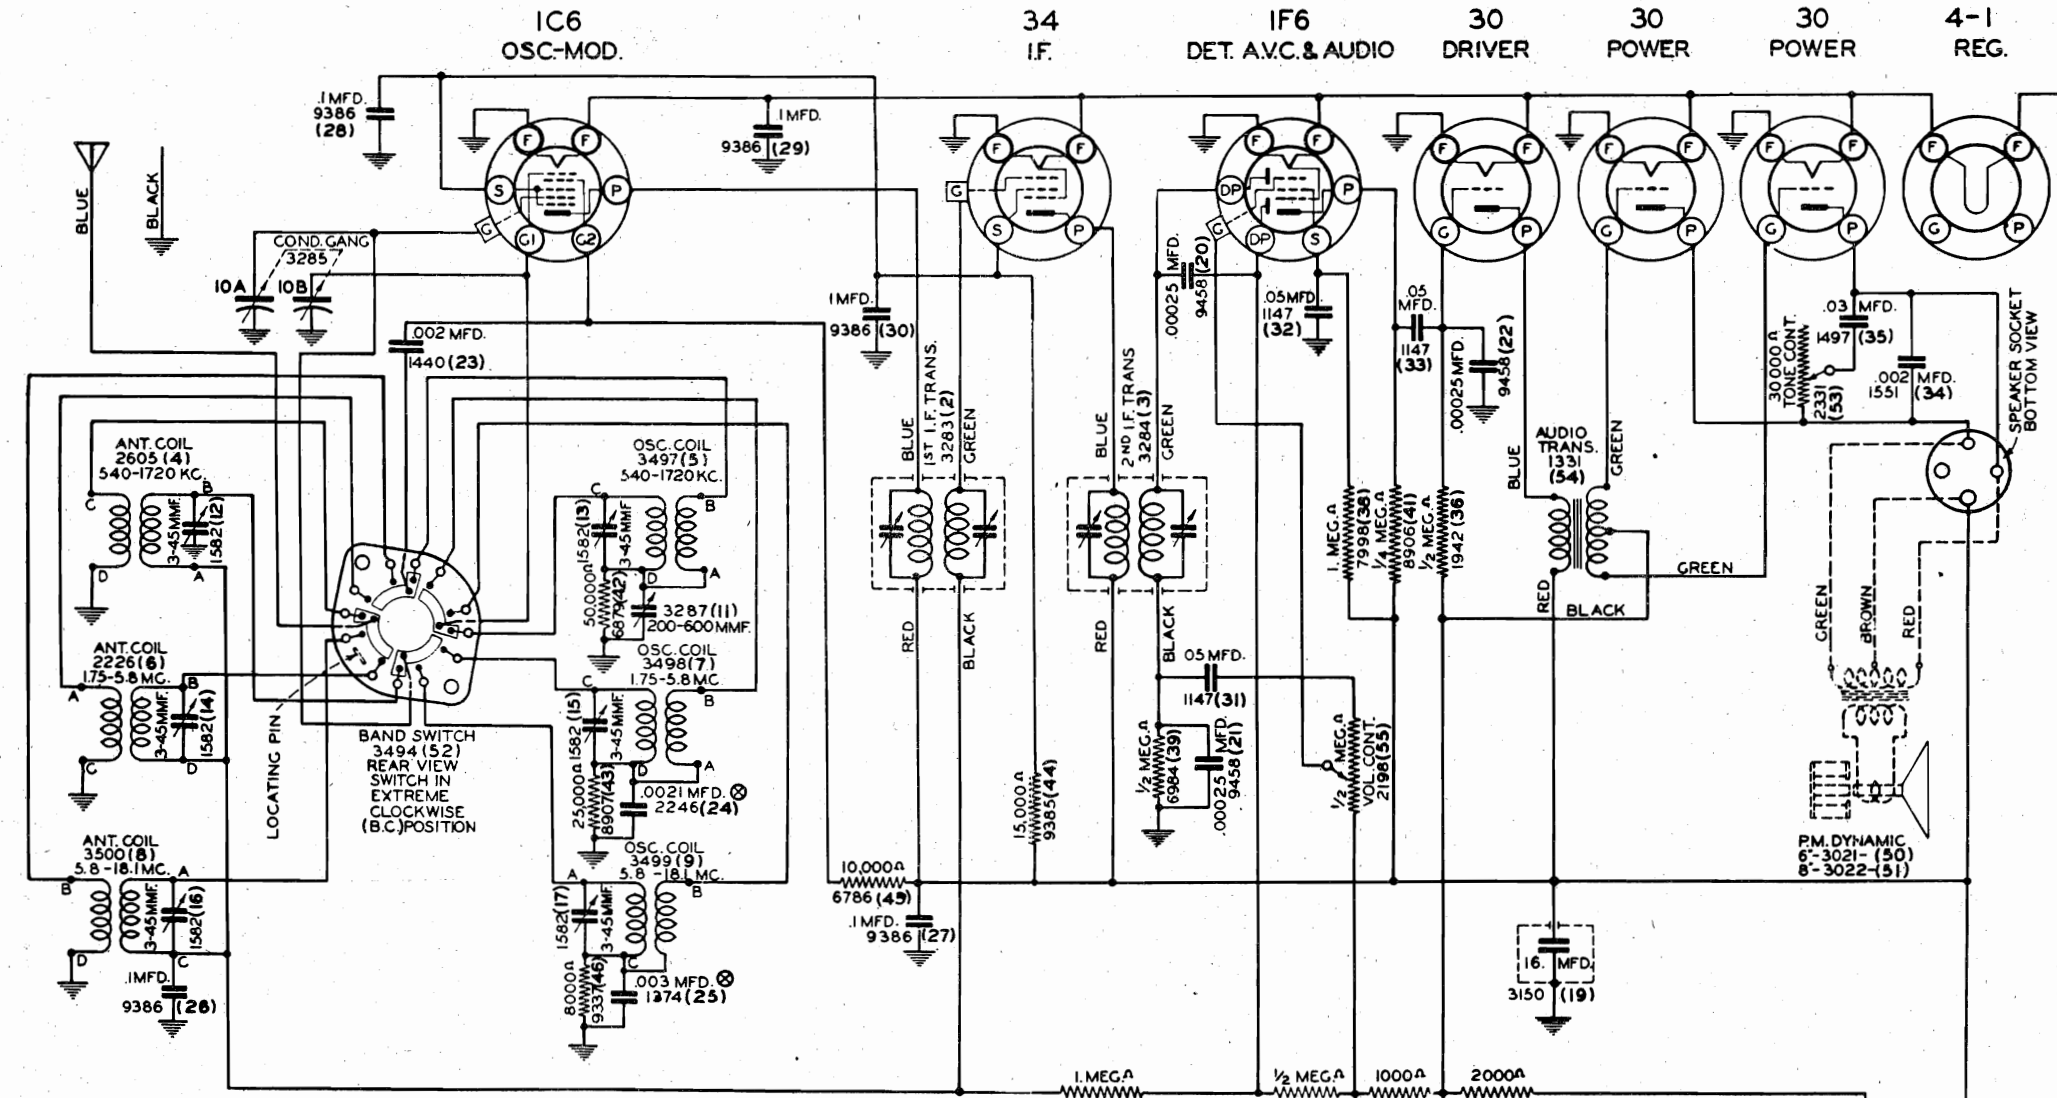

ALIGNMENT
IF ALIGNMENT :- Set test osc. at 465 KC and adjust IF stages, thru .02 Condenser.
AT 1720-540 KC BAND thru .00025 Cond. :-
 At 1720 KC adjust Osc. trim. at maximum.
 At 1400 KC adj. Ant. trim. for max. sig.
 At 600 KC adj. Osc. padder for max. sig.
AT 1.75- 5.8 MC BAND:-thru 400 OHM resistor
 Test. osc. at 5.8 MC, adj. osc. trimmer for maximum response. At 5 MC adjust Ant. trimmer for maximum sensitivity.
AT 5.8 - 18.1 BAND THRU 400 OHM RESISTOR.
 At 18 MC adjust. Osc. trim. max. output. Fundamental and not Image peak is used for 18 MC alignment. Back off trim, to minimum, then add capacity until FIRST PEAK (fundamental) is tuned in. Screwing down trim. too much brings in IMAGE.
For check:- Set test osc. at 18 MC, increasing output; set dial at 17 MC; vary dial to left and right of 17 Mc. If correct fundamental peak was used in alignment at 18 MC, then test osc. signal will be heard at 17 MC. of dial setting. At 15 MC adjustment, Ant. trimmer for maximum signal.
 Repeat all adjustments for final check.

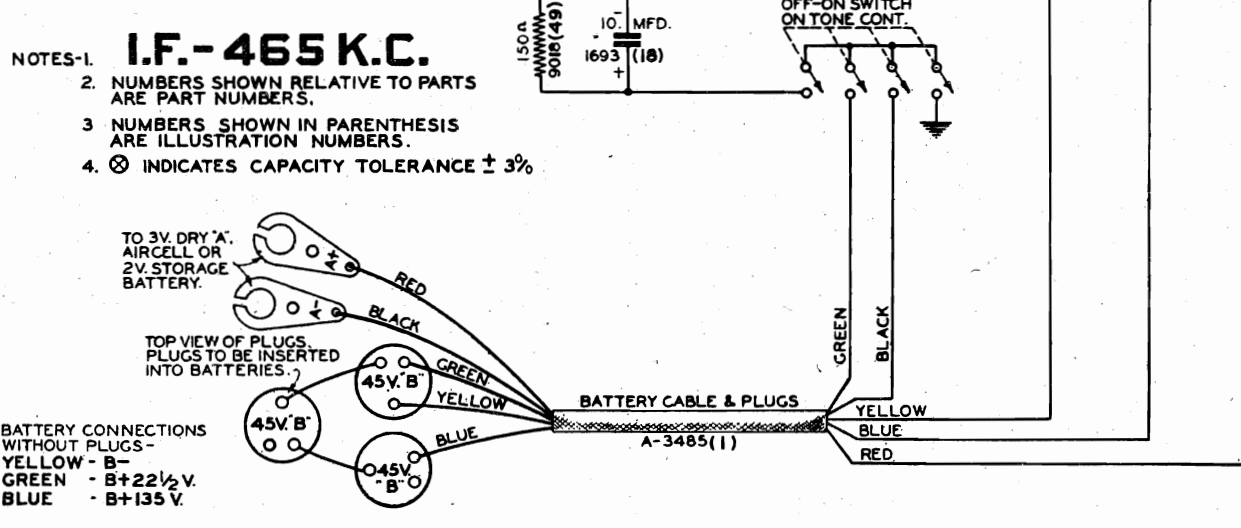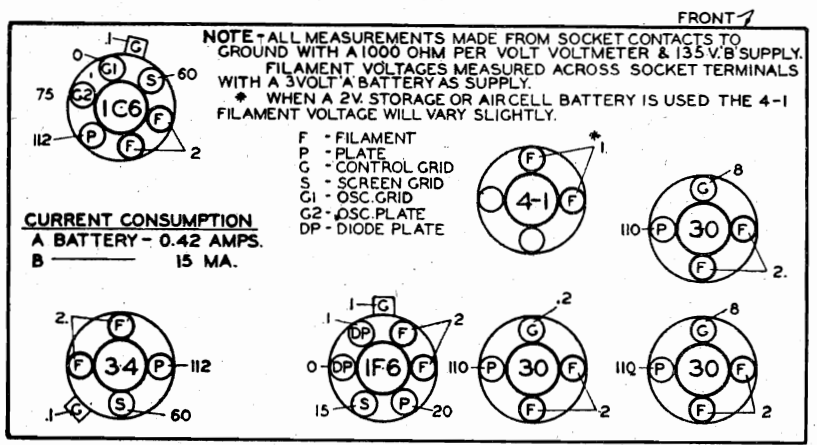


SPiegel INC.

MODEL 6606, Chassis 525
Schematic, Socket, Trimmers
Alignment


IF 456 K.C.

The frequency range covered by this receiver is as follows: Broadcast band 537 KC to 1730 KC. The short wave band covers a range of 2.2 megacycles to 6.4 megacycles and either of these bands are selected at will by a flip of the band change switch. To the left for broadcast—To the right for short wave.

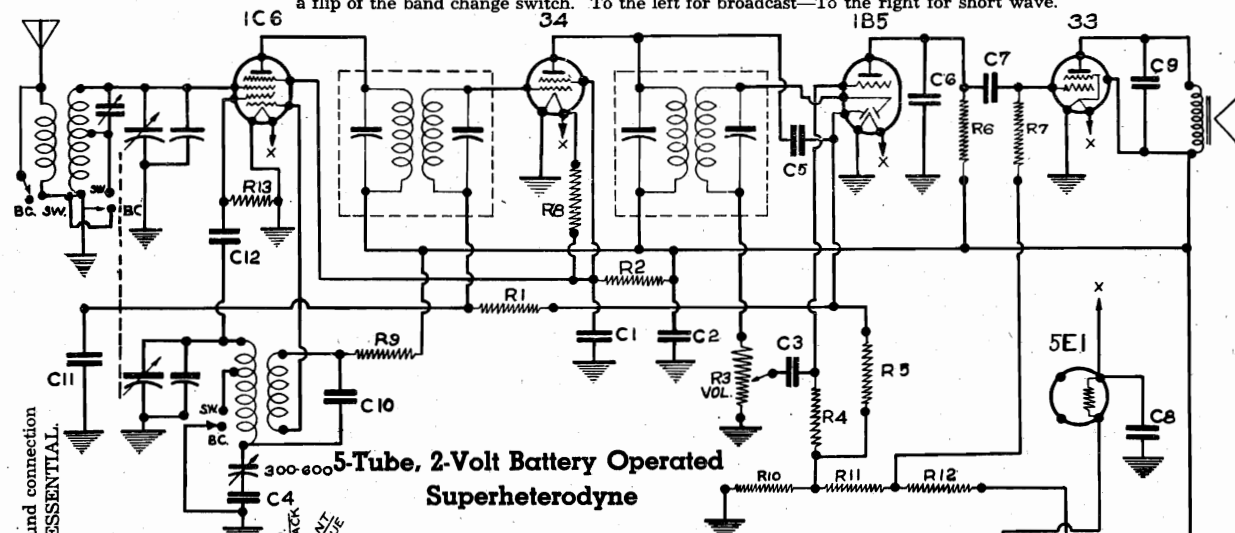


5-Tube, 2-Volt Battery Operated
Superheterodyne

R1	1 MEG. OHMS	C1	.1	MFD.
R2	15 M	C2	.1	
R3	500 M	C3	.05	
R4	1 MEG.	C4	.002	
R5	1 MEG.	C5	.00025	
R6	250 M	C6	.00025	
R7	500 M	C7	.05	
R8	50 M	C8	.25	
R9	50 M	C9	.01	
R10	400	C10	.001	
R11	4500	C11	.1	
R12	2 M	C12	.0001	
R13	50 M			

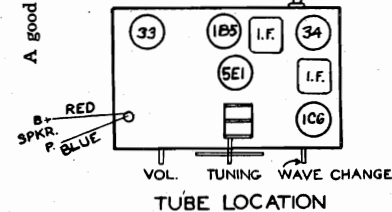

TUBE LOCATION

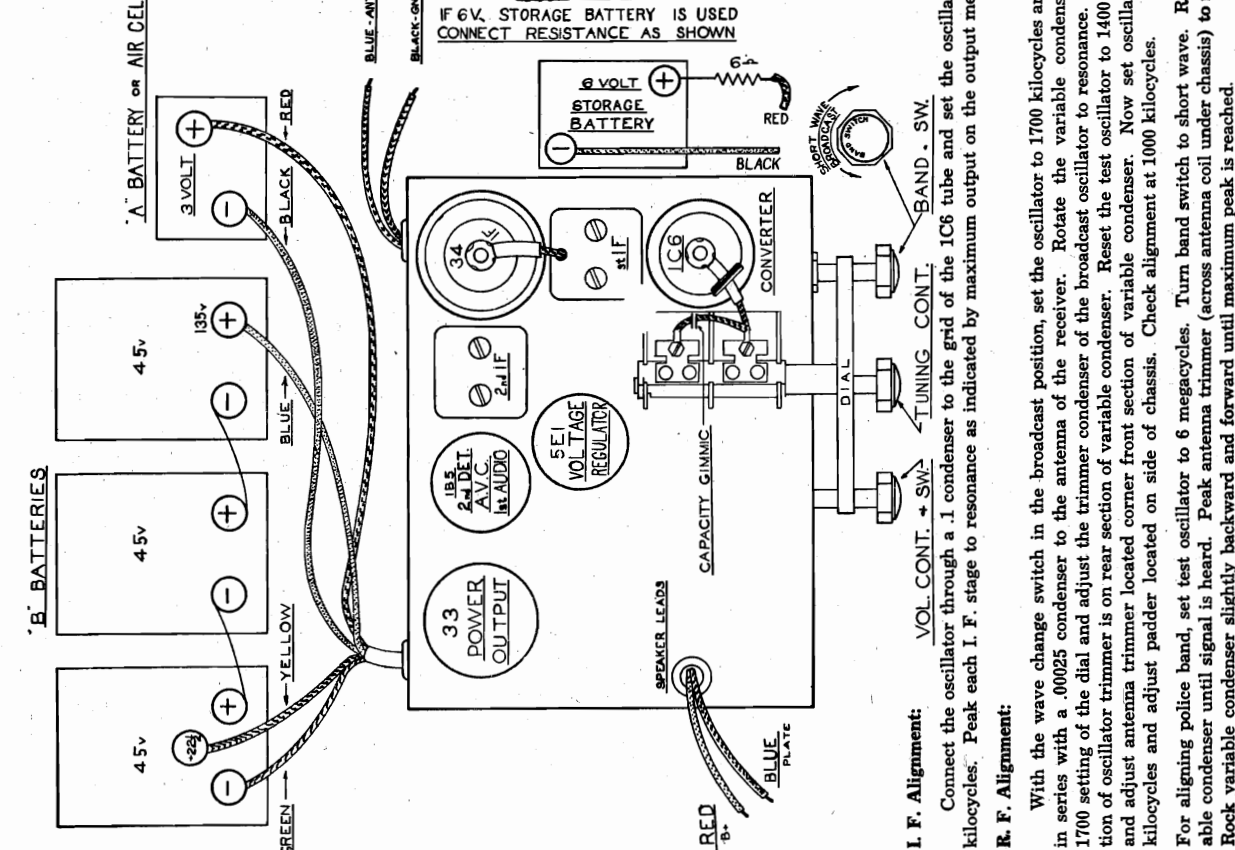

I. F. Alignment: Connect the oscillator through a .1 condenser to the grid of the 1C6 tube and set the oscillator to 456 kilocycles. Peak each I. F. stage to resonance as indicated by maximum output on the output meter.

R. F. Alignment: With the wave change switch in the broadcast position, set the oscillator to 1700 kilocycles and connect in series with a .00025 condenser to the antenna of the receiver. Rotate the variable condenser to the 1700 setting of the dial and adjust the trimmer condenser of the broadcast oscillator to resonance. The location of oscillator trimmer is on rear section of variable condenser. Reset the test oscillator to 1400 kilocycles and adjust antenna trimmer located corner front section of variable condenser. Now set oscillator to 600 kilocycles and adjust paddler located on side of chassis. Check alignment at 1000 kilocycles.


For aligning police band, set test oscillator to 6 megacycles. Turn band switch to short wave. Rotate variable condenser until signal is heard. Peak antenna trimmer (across antenna coil under chassis) to maximum. Rock variable condenser slightly backward and forward until maximum peak is reached.

MODELS 5004, 5005, 5056
Chassis 701

SPiegel INC.


Schematic, Voltage
Alignment, Trimmers
Socket

A good ground materially aids in the reception of distant stations.

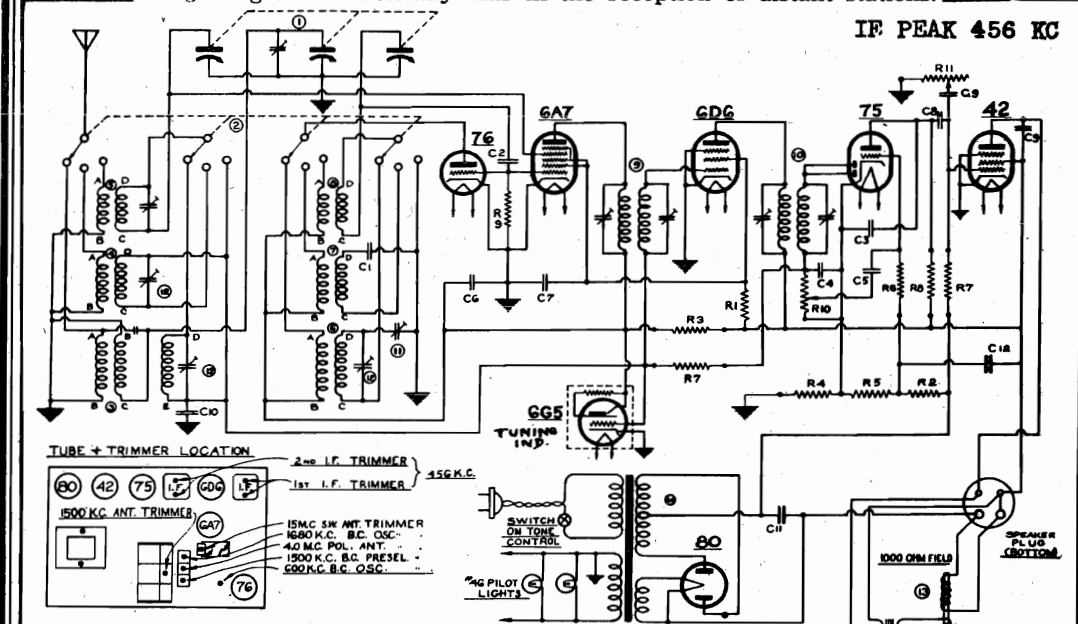


CIRCUIT DATA

PART No.	DESCRIPTION	PART No.	DESCRIPTION
1500C	0008 MFD. MICAF	R7	80000 OHMS 1/2 W
1503	0007 MFD. MICAF	R8	250 000
1504	0008 MFD. MICAF	R9	50000
1505	0008 MFD. MICAF	R10	50000
1506	0008 MFD. MICAF	R11	25-101 500000 TONE CONTR
1507	0008 MFD. MICAF	R12	15-100 50000
1508	0008 MFD. MICAF	R13	15-100 50000
1509	0008 MFD. MICAF	R14	15-100 50000
1510	0008 MFD. MICAF	R15	15-100 50000
1511	0008 MFD. MICAF	R16	15-100 50000
1512	0008 MFD. MICAF	R17	15-100 50000
1513	0008 MFD. MICAF	R18	15-100 50000
1514	0008 MFD. MICAF	R19	15-100 50000
1515	0008 MFD. MICAF	R20	15-100 50000
1516	0008 MFD. MICAF	R21	15-100 50000
1517	0008 MFD. MICAF	R22	15-100 50000
1518	0008 MFD. MICAF	R23	15-100 50000
1519	0008 MFD. MICAF	R24	15-100 50000
1520	0008 MFD. MICAF	R25	15-100 50000
1521	0008 MFD. MICAF	R26	15-100 50000
1522	0008 MFD. MICAF	R27	15-100 50000
1523	0008 MFD. MICAF	R28	15-100 50000
1524	0008 MFD. MICAF	R29	15-100 50000
1525	0008 MFD. MICAF	R30	15-100 50000
1526	0008 MFD. MICAF	R31	15-100 50000
1527	0008 MFD. MICAF	R32	15-100 50000
1528	0008 MFD. MICAF	R33	15-100 50000
1529	0008 MFD. MICAF	R34	15-100 50000
1530	0008 MFD. MICAF	R35	15-100 50000
1531	0008 MFD. MICAF	R36	15-100 50000
1532	0008 MFD. MICAF	R37	15-100 50000
1533	0008 MFD. MICAF	R38	15-100 50000
1534	0008 MFD. MICAF	R39	15-100 50000
1535	0008 MFD. MICAF	R40	15-100 50000
1536	0008 MFD. MICAF	R41	15-100 50000
1537	0008 MFD. MICAF	R42	15-100 50000
1538	0008 MFD. MICAF	R43	15-100 50000
1539	0008 MFD. MICAF	R44	15-100 50000
1540	0008 MFD. MICAF	R45	15-100 50000
1541	0008 MFD. MICAF	R46	15-100 50000
1542	0008 MFD. MICAF	R47	15-100 50000
1543	0008 MFD. MICAF	R48	15-100 50000
1544	0008 MFD. MICAF	R49	15-100 50000
1545	0008 MFD. MICAF	R50	15-100 50000
1546	0008 MFD. MICAF	R51	15-100 50000
1547	0008 MFD. MICAF	R52	15-100 50000
1548	0008 MFD. MICAF	R53	15-100 50000
1549	0008 MFD. MICAF	R54	15-100 50000
1550	0008 MFD. MICAF	R55	15-100 50000
1551	0008 MFD. MICAF	R56	15-100 50000
1552	0008 MFD. MICAF	R57	15-100 50000
1553	0008 MFD. MICAF	R58	15-100 50000
1554	0008 MFD. MICAF	R59	15-100 50000
1555	0008 MFD. MICAF	R60	15-100 50000
1556	0008 MFD. MICAF	R61	15-100 50000
1557	0008 MFD. MICAF	R62	15-100 50000
1558	0008 MFD. MICAF	R63	15-100 50000
1559	0008 MFD. MICAF	R64	15-100 50000
1560	0008 MFD. MICAF	R65	15-100 50000
1561	0008 MFD. MICAF	R66	15-100 50000
1562	0008 MFD. MICAF	R67	15-100 50000
1563	0008 MFD. MICAF	R68	15-100 50000
1564	0008 MFD. MICAF	R69	15-100 50000
1565	0008 MFD. MICAF	R70	15-100 50000
1566	0008 MFD. MICAF	R71	15-100 50000
1567	0008 MFD. MICAF	R72	15-100 50000
1568	0008 MFD. MICAF	R73	15-100 50000
1569	0008 MFD. MICAF	R74	15-100 50000
1570	0008 MFD. MICAF	R75	15-100 50000
1571	0008 MFD. MICAF	R76	15-100 50000
1572	0008 MFD. MICAF	R77	15-100 50000
1573	0008 MFD. MICAF	R78	15-100 50000
1574	0008 MFD. MICAF	R79	15-100 50000
1575	0008 MFD. MICAF	R80	15-100 50000
1576	0008 MFD. MICAF	R81	15-100 50000
1577	0008 MFD. MICAF	R82	15-100 50000
1578	0008 MFD. MICAF	R83	15-100 50000
1579	0008 MFD. MICAF	R84	15-100 50000
1580	0008 MFD. MICAF	R85	15-100 50000
1581	0008 MFD. MICAF	R86	15-100 50000
1582	0008 MFD. MICAF	R87	15-100 50000
1583	0008 MFD. MICAF	R88	15-100 50000
1584	0008 MFD. MICAF	R89	15-100 50000
1585	0008 MFD. MICAF	R90	15-100 50000
1586	0008 MFD. MICAF	R91	15-100 50000
1587	0008 MFD. MICAF	R92	15-100 50000
1588	0008 MFD. MICAF	R93	15-100 50000
1589	0008 MFD. MICAF	R94	15-100 50000
1590	0008 MFD. MICAF	R95	15-100 50000
1591	0008 MFD. MICAF	R96	15-100 50000
1592	0008 MFD. MICAF	R97	15-100 50000
1593	0008 MFD. MICAF	R98	15-100 50000
1594	0008 MFD. MICAF	R99	15-100 50000
1595	0008 MFD. MICAF	R100	15-100 50000

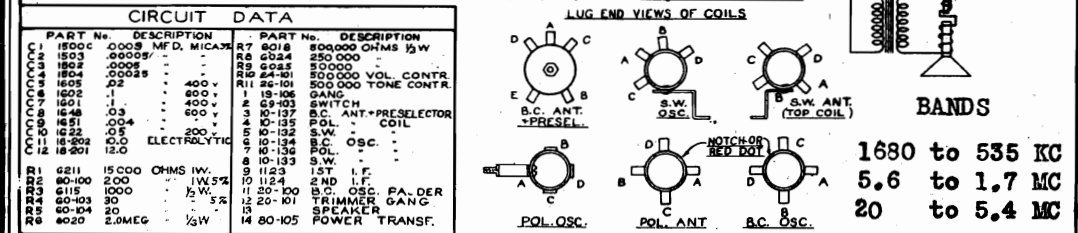

FILAMENT VOLTAGES MEASURED ACROSS SOCKET. ALL OTHER VOLTAGES MEASURED TO GROUND WITH 1000 OHM PER VOLT VOLTMETER.

Socket	Voltage
80 RECT.	310 DC
42 A.F.	5.8 AC
75 A.V.C.	5.8 AC
6D6 I.F.	5.8 AC
76 OSC.	210
6A7 MOD.	80

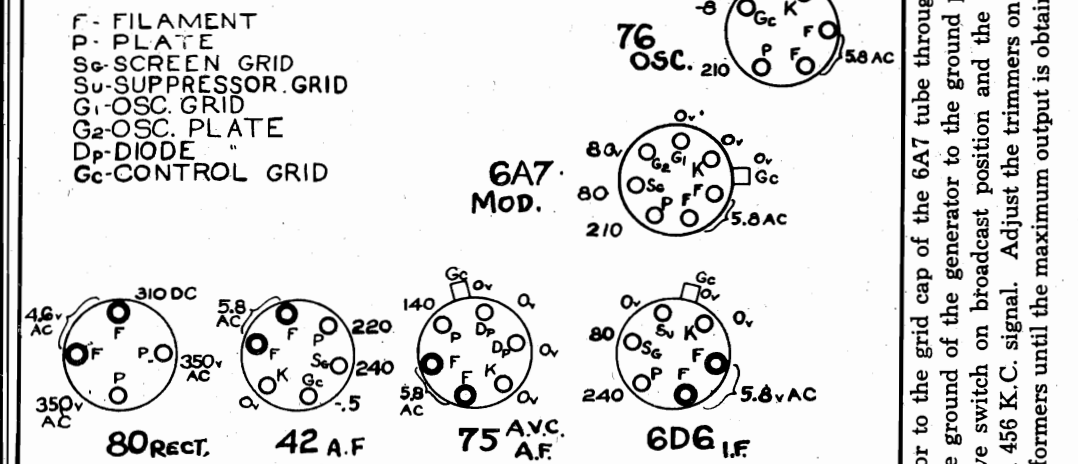

ALIGNMENT PROCEDURE

The equipment required for re-aligning this receiver is an output meter and a modulated source of radio frequency (a signal generator or microvolter). This source of radio frequency must be accurately calibrated in frequency and must have a method of varying the output.

All alignments must be made with the volume control turned full on and with the signal input from the generator reduced to as low a value as possible while still giving a sufficient output to be easily read on the output meter.

Connect the output meter, through a .5 M.F. condenser and a resistance of such a value as to make the total meter resistance approximately 7000 ohms, to the two small pins of the speaker plug. The output meter remains connected during the entire alignment procedure.


1. Connect the signal generator to the grid cap of the 6A7 tube through a 1 M.F. condenser. Connect the ground of the generator to the ground post of the receiver. With the wave switch on broadcast position and the dial set to about 1000 K.C., feed in a 456 K.C. signal. Adjust the trimmers on top of the first and second I.F. transformers until the maximum output is obtained. This aligns the I.F.
2. Leaving the wave switch on broadcast position turn the dial to the extreme high frequency end. Feed a 1680 K.C. signal to the receiver antenna post through a .00025 M.F. mica condenser. Adjust the 1680 K.C. broadcast oscillator trimmer for maximum output. Set the generator to 1500 K.C. and tune in this signal on the receiver. Then adjust the 1500 K.C. broadcast antenna trimmer and the 1500 K.C. broadcast preselector trimmer for maximum output. Set the generator to 600 K.C. and adjust the 600 K.C. broadcast oscillator pad to maximum output while tuning the receiver back and forth across the signal from the generator. This completes the alignment of the broadcast band.

The police band is aligned by feeding 4.0 M.C. signal to the receiver antenna lead through the .00025 condenser. Turn the wave switch to the center position and tune the receiver to this signal. Adjust the 4.0 M.C. police antenna trimmer for best output.

The short wave band is aligned in the same way using a 15 M.C. signal and adjusting the 15 M.C. short wave antenna trimmer after having turned the wave switch to the right hand position.


SPIEGEL INC.

MODEL 6700, Chassis 68B
Schematic, Voltage
Socket, Trimmers

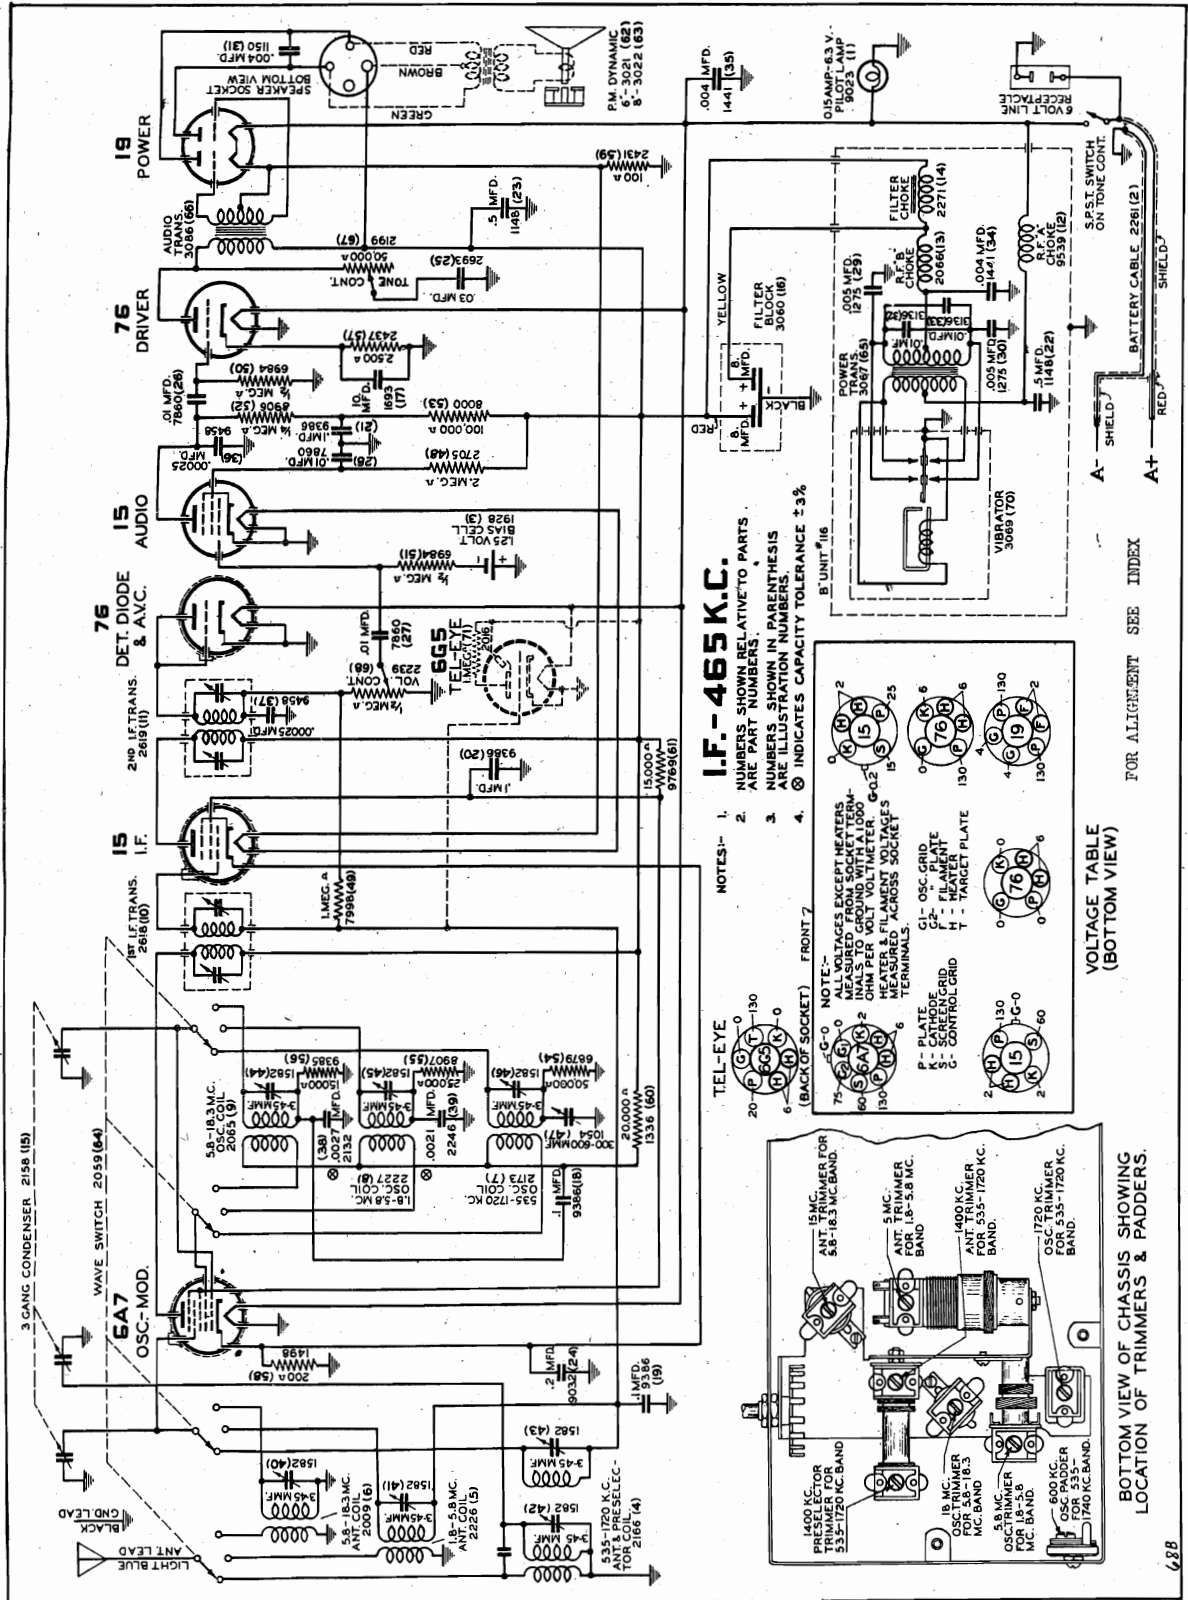



MODELS 6714, 6758
Chassis 600
Schematic, Alignment
Socket, Trimmers

SPIEGEL INC.

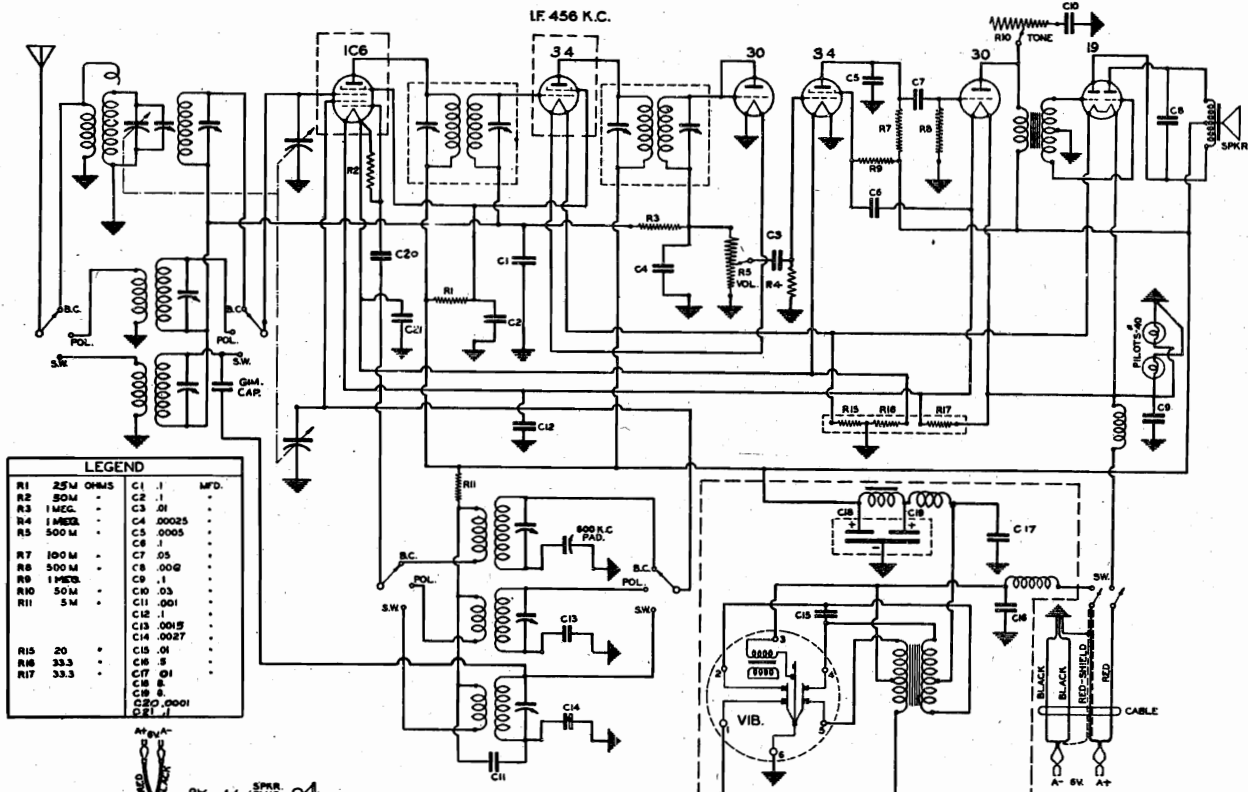


**6-Tube, 6-Volt Superheterodyne
Battery Receiver**

BANDS	SWITCH
537 to 1730 KC	LEFT
1.8 to 5.7 MC	CENTER
5.7 to 18.3 MC	RIGHT

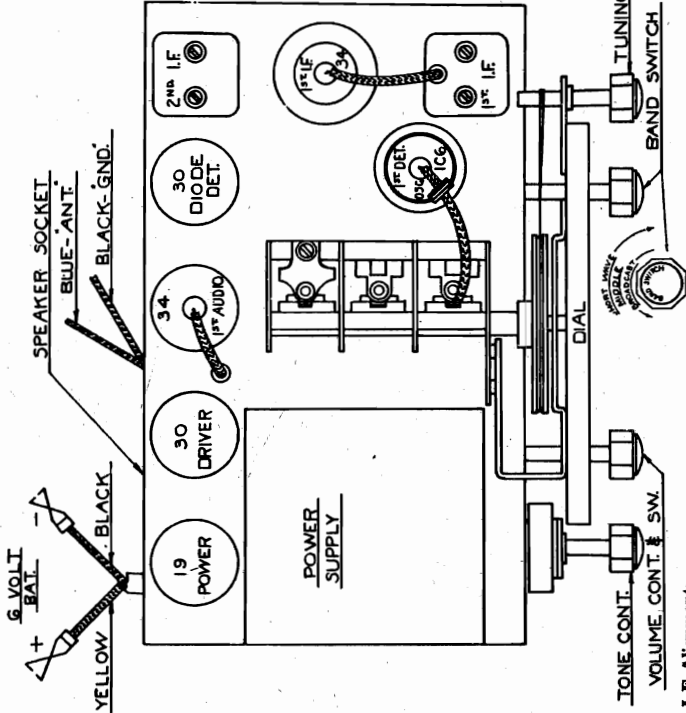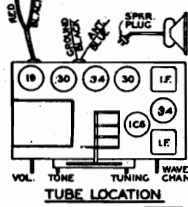

A good ground connection to a water pipe or other metallic conductor entering into the ground for some distance is ESSENTIAL.
WARNING: IF WINDCHARGER IS USED DO NOT OPERATE SET WITH CHARGER CONNECTED.

Warning: Place Storage Battery in such a position that clips on Battery Cable may be fastened directly to Battery Terminals. Do not add any additional wire length to cables as this will make the set hum.

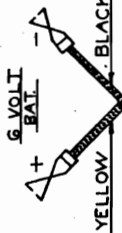



I. F. Alignment:
Connect the oscillator through a .1 condenser to the grid of the 1C6 tube and set the oscillator to 456 kilocycles. Peak each I. F. stage to resonance as indicated by maximum output on the output meter.

R. F. Alignment:
With the wave change switch in the broadcast position, set oscillator to 1700 kilocycles and connect in series with a .00025 condenser to the antenna of the receiver. Rotate the variable condenser to the 1700 setting of the dial and adjust the trimmer condenser of the broadcast oscillator to resonance. This trimmer is located on the right side of the chassis, second position from the front. Reset the test oscillator to 1400 kilocycles and adjust antenna trimmer located on top of rear section of variable condenser. Peak detector trimmer located across prospector coil under chassis. Now set oscillator to 600 kilocycles and adjust paddler located on top of the chassis. Check alignment at 1000 kilocycles.

For aligning the police band, set test oscillator to 5 megacycles and switch to the police band position on the set. With the condenser rotated to this frequency setting as indicated on the dial, adjust oscillator trimmer located on the right side of the chassis, first position from the front. Now adjust antenna trimmer located on the front of the chassis, left position, to resonance.
The short wave band is aligned by setting the condenser to 18 megacycles and adjust the oscillator trimmer located on the right side of the chassis, first position from the front to resonance with an 18 megacycle signal from the test oscillator. Turn dial to 16 M. C. Set test oscillator to 16 M. C. and adjust antenna trimmer through right hand hole in front of chassis, rocking variable condenser slightly back and forth to get maximum peak.

STEWART-WARNER CORP. Chassis 01-5H

Schematic, Voltage

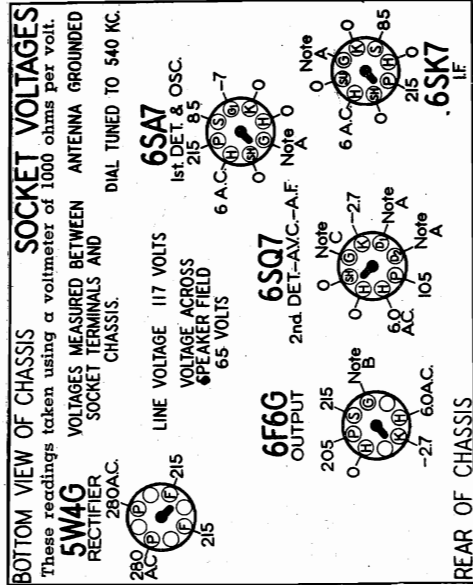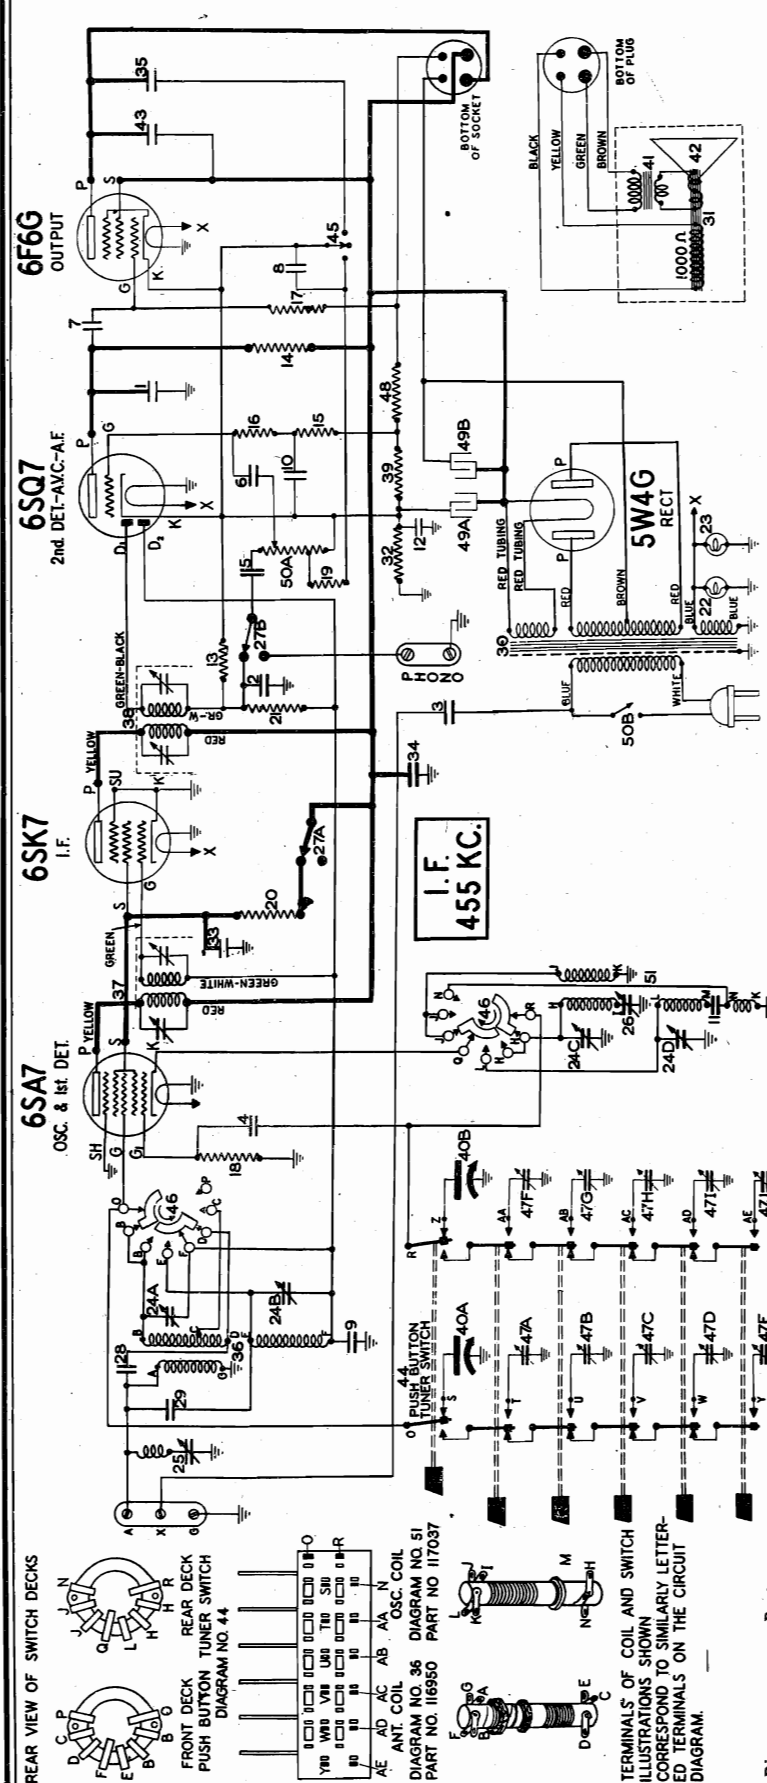

REAR OF CHASSIS

NOTE B: The bias on the control grid of the 6F6G tube is -18 volts measured across resistors No. 39 and 48.

NOTE C: The bias on the control grid of the 6SQ7 tube is -4 volts measured across resistor No. 39.

NOTE A: The bias on the control grids of the 6SA7 and 6SK7 tubes and on the diode plates of the 6SQ7 tube is -2.7 volts measured across resistor No. 32.

Diagram Number	Description	Part Number
33-34	Condenser—1 mfd. 600 volt.	116625
35	Condenser—.02 mfd. 600 volt.	116893
36	Coil—antenna	116890
37	Transformer—1st I.F.	116954
38	Transformer—2nd I.F.	116955
39	Resistor—25 ohms 1 watt wire wound	116967
40A-40B	Condenser—variable gang	116896
41	Transformer—output for M-115059 speaker	M-117091
42	Cone & Voice coil assembly for M-115059 speaker	M-117092
43	Condenser—.002 mfd. 600 volt.	117022
44	Switch—push button	117024
45	Tone control	117025
46	Range switch	117026
47A to 47J	Trimmer condenser—gang	117027
48	Resistor—300 ohms 1 watt.	117032
49A-49B	Condenser—dual electrolytic—Section A, 10 mfd.—Section B, 15 mfd.	117034
50A-50B	Volume control with on-off switch.	117035
51	Coil—oscillator	117037
52	Resistor—carbon 1 megohm 1/4 watt.	110554
53	Resistor—carbon 470,000 ohms 1/4 watt.	110559
54	Resistor—carbon 33,000 ohms 1/4 watt	110566
55	Resistor—carbon 15,000 ohms 1 watt	110568
56	Resistor—carbon 3.3 meg. 1/4 watt	110580
57	Lamp—6.3 volt—25 amps.	110629
58	Condenser—trimmer (4 section).	112792
59	Coil—wave trap (with trimmer).	112796
60	Condenser—padder (530 to 630 mmfd.)	112799
61	Switch—radio—phono (D.P.T.)	114141
62	Condenser—mica 15 mmfd.	114969
63	Transformer—power	114999
64	Speaker—8" electro-dynamic	M-115059
65	Resistor—150 ohms—1/4 watt.	116077

CHASSIS 01-5H
CHASSIS 02-4A
Alignment, Trimmers
Socket, Notes

STEWART-WARNER CORP.

ALIGNMENT EQUIPMENT & PROCEDURE 02-4A


- FOR ALIGNMENT an output meter and an accurately calibrated signal generator are required.
1. Connect the output meter across the voice coil or between the plate of the 1CG7 output tube and ground through a 0.1 Mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
 2. Connect the ground lead of the signal generator to the chassis.
 3. Turn the volume control to the maximum volume position and keep it in this position while aligning. The loop antenna should always be connected.
 4. With the gang condenser in full mesh, set the dial pointer in a horizontal position. If the pointer is incorrectly set, it is merely necessary to loosen the set screw on the dial drum, move the pointer to the horizontal position with the gang in full mesh, and tighten the set screw.

ALIGNMENT PROCEDURE FOR 01-5H CHASSIS

1. Connect the output meter across the voice coil or between the plate of the 6X6 output tube and ground in series with a .1 Mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the "G" terminal of the chassis. **NOTE:** Remove the connector from between the "A" and "X" terminals.
3. Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure.
4. Turn the dial knob to the last mark on the low frequency end of the dial scale. If the pointer is incorrectly set, it is only necessary to loosen the set screws on the dial drive drum and push the gang condenser in full mesh, with the pointer properly set, then tighten the set screws.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Mica Condenser	Front Lug Condenser	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	1-2	2nd I.F.	Adjust for maximum output. Then repeat adjustment.
200 MFD. Mica Condenser	"A" Terminal	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	3-4	1st I.F.	Adjust for maximum output. Then repeat adjustment.
200 MFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	1500 KC (250' from right Dial Plate end)	5	Where Top	Adjust for maximum output.
200 MFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	Tune To 1500 KC (Generator Signal)	6	Broadcast Oscillator (Shunt)	Adjust for maximum output.
200 MFD. Mica Condenser	"A" Terminal	600 KC	Broadcast	Tune To 600 KC (Generator Signal)	7	Broadcast Antenna	Adjust for maximum output.
400 OHM Carbon Resistor	"A" Terminal	14 MC	Foreign	14 MC (250' from right Dial Plate end)	8	Broadcast Oscillator (Series Fed)	Adjust for maximum output. tuning trimmer and retaining receiver dial until maximum output is obtained.
400 OHM Carbon Resistor	"A" Terminal	14 MC	Foreign	14 MC (250' from right Dial Plate end)	9	Foreign Oscillator (Shunt)	Adjust for maximum output. tuning trimmer and retaining receiver dial until maximum output is obtained.
400 OHM Carbon Resistor	"A" Terminal	14 MC	Foreign	14 MC	10	Foreign Antenna	Adjust for maximum output. tuning trimmer and retaining receiver dial until maximum output is obtained.

REPLACING TUNING AND POINTER DRIVE CARDS

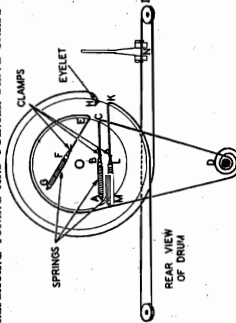

MISCELLANEOUS PARTS

Part No.	Description	List Price
117028	Coil letter tabs and instruction sheets.	.50, .45
114855	Clamp for dial cord.	.01
112798	Chip-wave trap, mig.	.01
85321	Connector for internal antenna.	.01
117057	Cord-drive.	.15
117051	Dial scale and escutcheon.	.175
82948	Eyelet-for dial cord.	.02
118598	Escutcheon for push buttons.	.30
118552	Pin for push buttons.	.02
117056	Plug-4 prong for speaker.	.02
117282	Pulley-dial cord drive.	.25
117019	Push button-pilot light.	.04
81145	Retaining ring-for drive shaft.	.50
82042	Screw-shock absorber.	.15
82824	Screw-self tapping 8 x 1/4.	.35
114856	Screw-special head-for mig. escutcheon.	.01
114814	Screw-special head-for mig. escutcheon.	.15

USING AN OUTSIDE ANTENNA

An outside antenna may be connected to this radio to provide better signal pick-up on weak stations. When this is done, a ground connection should also be used. The antenna and ground wires should be brought in through the hole provided in the bottom of the cabinet, and connected to the terminals marked "ANT." and "GND." on the inside of the cabinet back.

When using an outside antenna, a weak signal near 1500 KC should be used in and trimmer No. 6 adjusted for maximum volume. If it is impossible to get a proper peak on this trimmer, check the connections of the white and green-white wires to see if they are reversed.

REAR OF CABINET BACK




INSTALLATION OF BATTERIES

The following 1 1/2 volt "A" batteries will fit the spaces provided: Eveready No. 743 or Ray-O-Vac No. 986A.

"B" batteries of the proper size are Eveready No. 727 or No. 482 or Ray-O-Vac No. 8830P. Where long life is desired, the Eveready No. 482 is especially recommended.

To install the batteries, first slide the "B" batteries into place as shown in the drawing below, and connect a three pronged plug to each one. Slide the "A" battery into place as shown and connect the two pronged plug to it. Fasten the battery supporting block as shown and secure it with a washer and wing nut.

CAUTION: Do not attempt to install or remove the "B" batteries unless the battery plugs are disconnected. When replacing the cabinet back be sure to connect the plugs to the proper receptacles on the loop as shown in the drawing, otherwise improper operation may result.

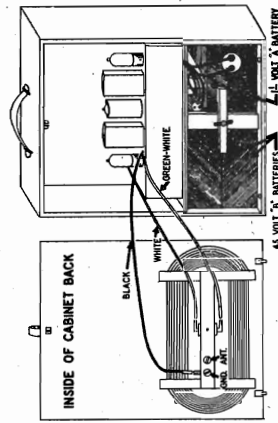

STEWART-WARNER CORP.

CHASSIS 01-6A, 010-6AX, 01-6B, 010-6BX, 01-6D, 010-6DX
Schematic, Voltage, Socket, Phono. Schematic




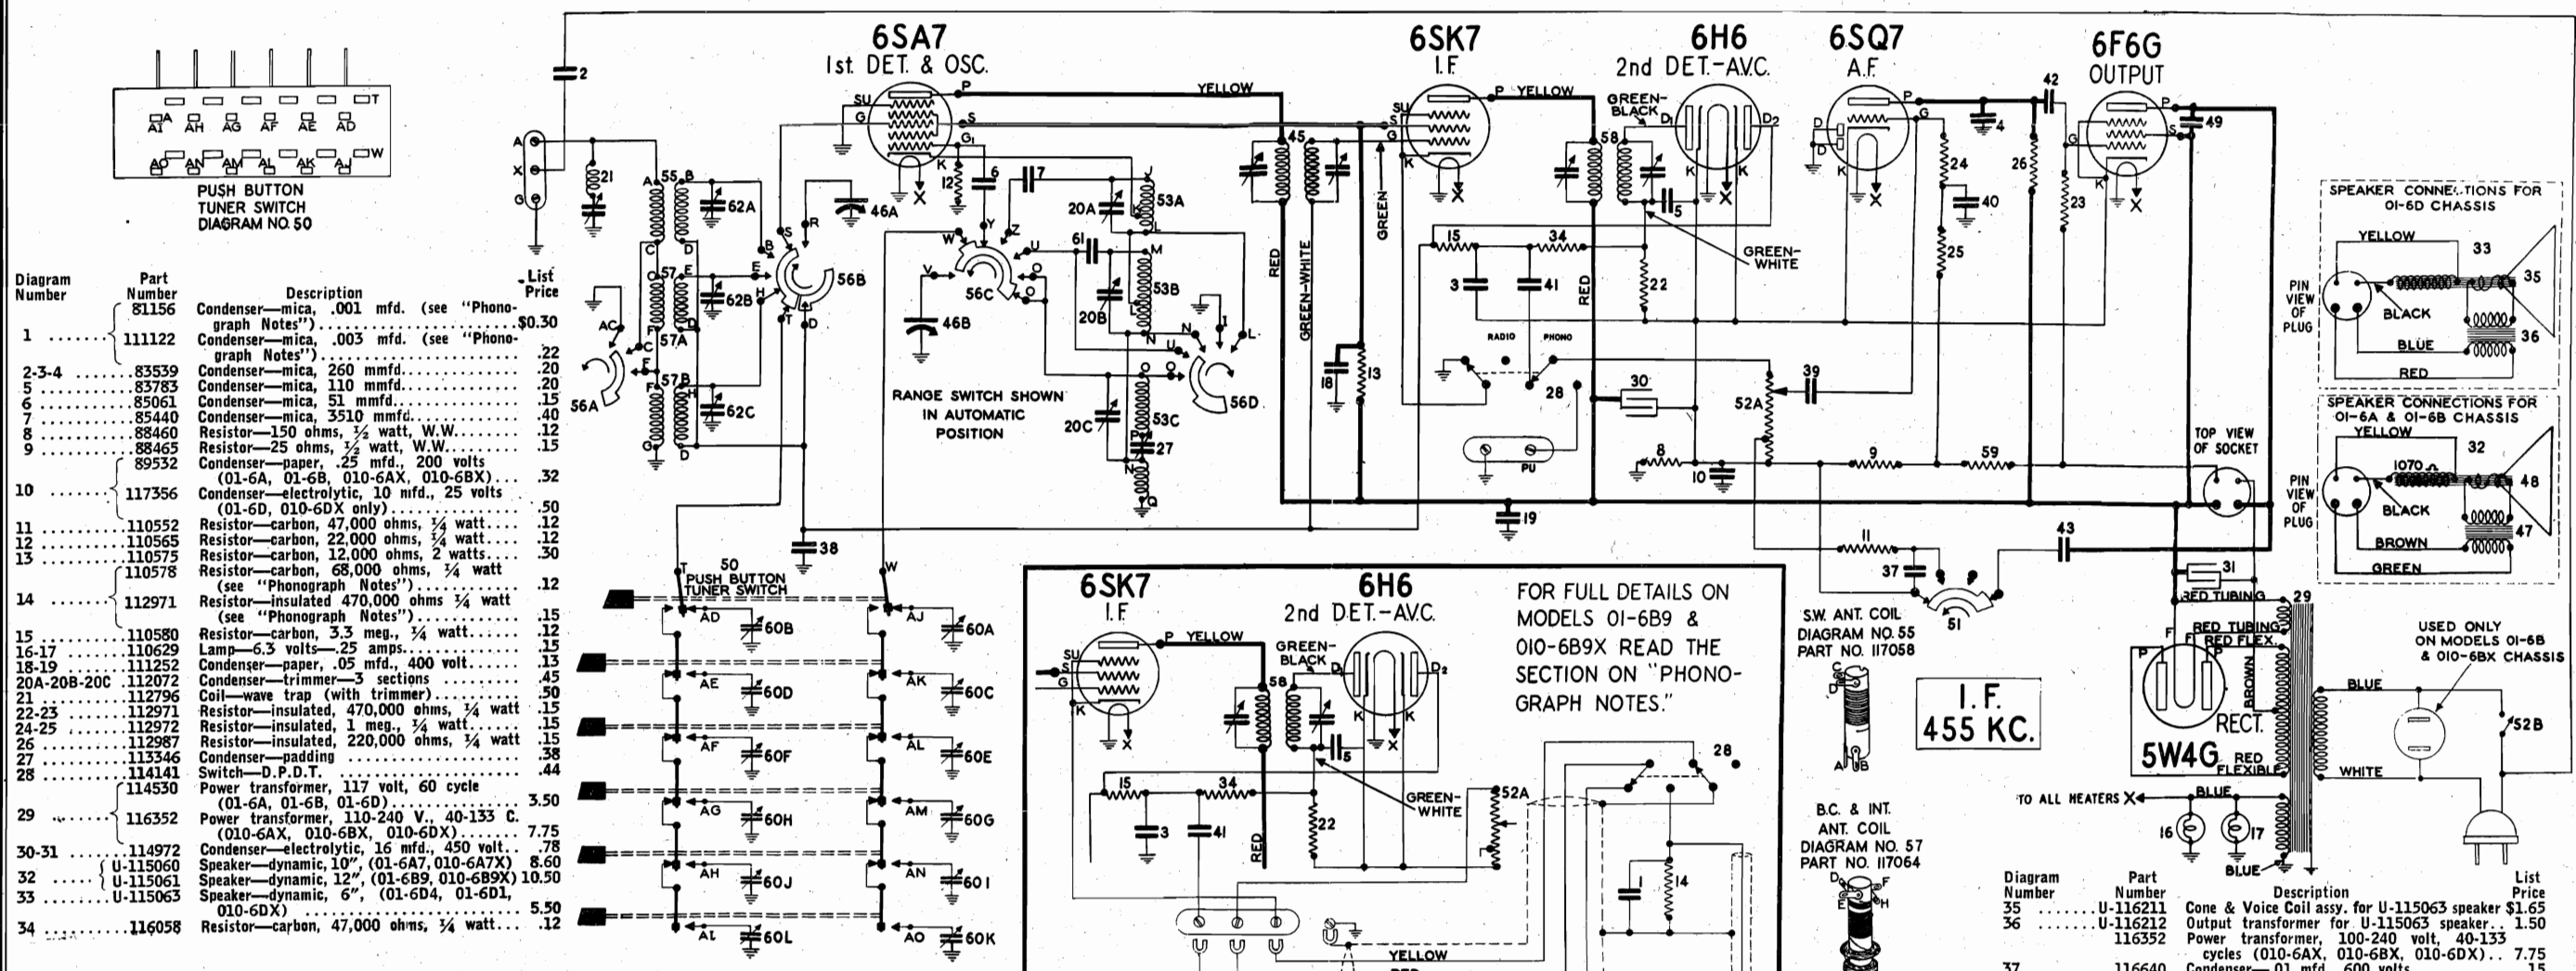


Diagram Number	Part Number	Description	List Price
1	111122	Condenser—mica, .001 mfd. (see "Phonograph Notes")	\$0.30
2-3-4	83539	Condenser—mica, .003 mfd. (see "Phonograph Notes")	.22
5	83783	Condenser—mica, 260 mmfd.	.20
6	85061	Condenser—mica, 110 mmfd.	.20
7	85440	Condenser—mica, 51 mmfd.	.15
8	88460	Condenser—mica, 3510 mmfd.	.40
9	88465	Resistor—150 ohms, 1/2 watt, W.W.	.12
	89532	Resistor—25 ohms, 1/2 watt, W.W.	.15
10	117356	Condenser—paper, 25 mfd., 200 volts (01-6A, 01-6B, 010-6AX, 010-6BX)	.32
	117556	Condenser—electrolytic, 10 mfd., 25 volts (01-6D, 010-6DX only)	.50
11	110552	Resistor—carbon, 47,000 ohms, 1/4 watt	.12
12	110565	Resistor—carbon, 22,000 ohms, 1/4 watt	.12
13	110575	Resistor—carbon, 12,000 ohms, 2 watts	.30
	110578	Resistor—carbon, 68,000 ohms, 1/4 watt (see "Phonograph Notes")	.12
14	112971	Resistor—insulated 470,000 ohms 1/4 watt (see "Phonograph Notes")	.15
15	110580	Resistor—carbon, 3.3 meg., 1/4 watt	.12
16-17	110629	Lamp—6.3 volts—25 amps.	.15
18-19	111252	Condenser—paper, .05 mfd., 400 volt.	.13
20A-20B-20C	112072	Condenser—trimmer—3 sections	.45
21	112796	Coil—wave trap (with trimmer)	.50
22-23	112971	Resistor—insulated, 470,000 ohms, 1/4 watt	.15
24-25	112972	Resistor—insulated, 1 meg., 1/4 watt	.15
26	112987	Resistor—insulated, 220,000 ohms, 1/4 watt	.15
27	113346	Condenser—padding	.38
28	114141	Switch—D. P. D. T.	.44
	114530	Power transformer, 117 volt, 60 cycle (01-6A, 01-6B, 01-6D)	3.50
29	116352	Power transformer, 110-240 V., 40-133 C. (010-6AX, 010-6BX, 010-6DX)	7.75
30-31	114972	Condenser—electrolytic, 16 mfd., 450 volt.	.78
	U-115060	Speaker—dynamic, 10", (01-6A7, 010-6A7X)	8.60
	U-115061	Speaker—dynamic, 12", (01-6B9, 010-6B9X)	10.50
	U-115063	Speaker—dynamic, 6", (01-6D4, 01-6D1, 010-6DX)	5.50
34	116058	Resistor—carbon, 47,000 ohms, 1/4 watt	.12

RADIO-PHONO SWITCH IN RADIO POSITION DIAL TUNED TO 540 KC

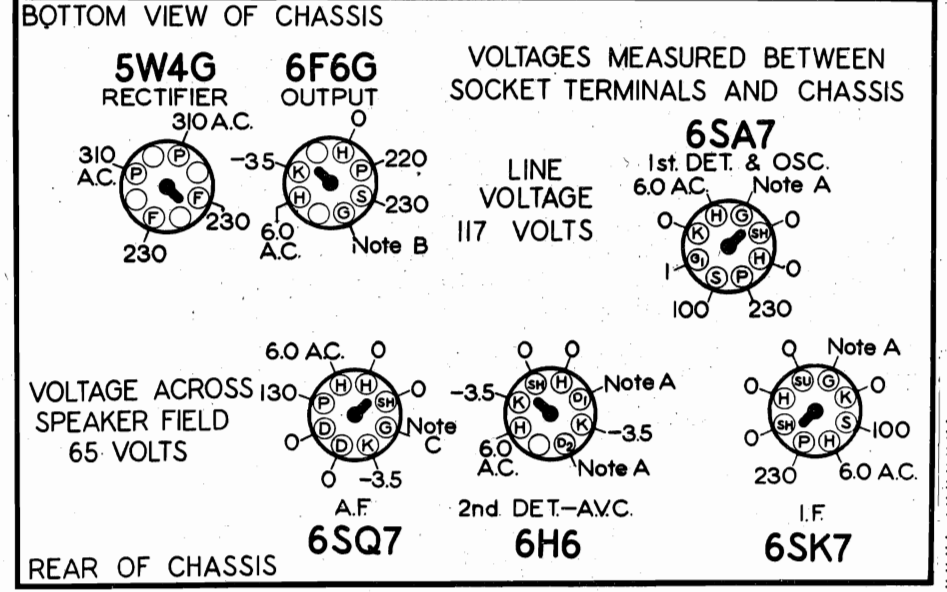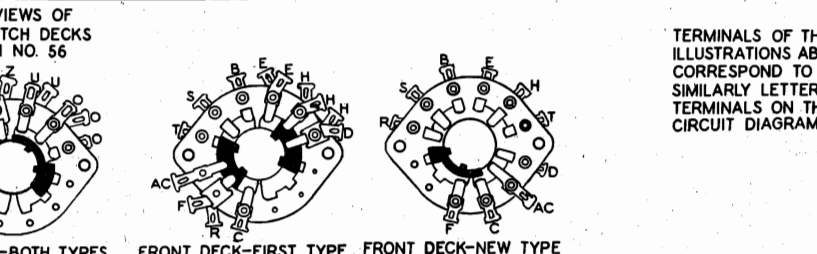

These readings were taken, using a high resistance voltmeter of 1000 ohms per volt.
NOTE A: The bias on the control grids of the 6SK7 and 6SA7 tubes and on the diode plates of the 6H6 tube is -2.7 volts measured across resistor No. 8.
NOTE B: The bias on the control grid of the 6F6G tube is -16 volts, measured across resistors No. 9 and 59.
NOTE C: The bias on the control grid of the 6SQ7 tube is -1.4 volts measured across resistor No. 9.

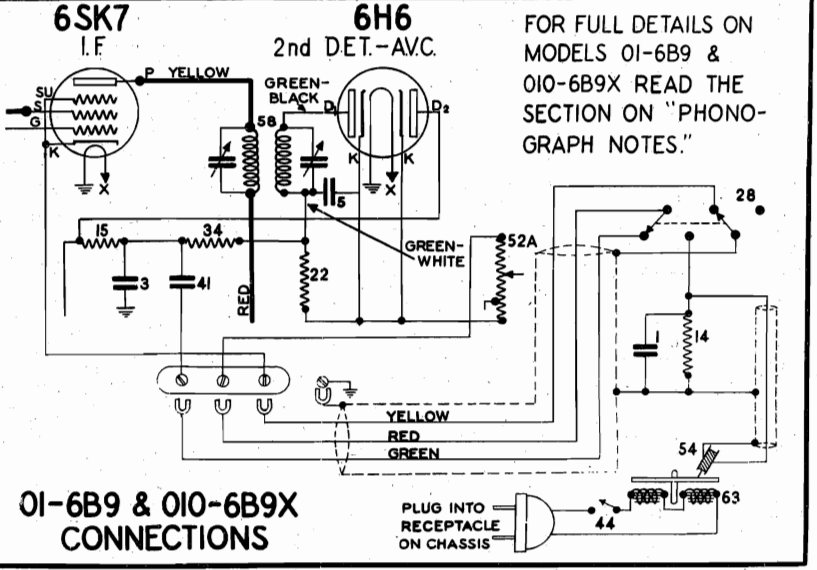

MISCELLANEOUS PARTS

Part Number	Description	List Price
117009	Call tabs and instruction sheets for 01-6A sets	\$0.45
117010	Call tabs and instruction sheets for 01-6B sets	.50
117534	Call tabs and instruction sheets for 01-6D sets	.45
114955	Clamp—for dial cord	.01
112745	Clip—coil mounting	.01
112798	Clip—for mounting wave trap	.01
85321	Connector—for internal antenna	.01
116948	Cord—dial (6 ft. lengths)	.18
117057	Cord—drive (3 ft. lengths)	.15
111973	Cushion—rubber rest for back of chassis (01-6A7, 010-6A7X)	.06
117028	Dial plate & pulley assembly (01-6A, 01-6B)	1.00
117194	Dial plate & pulley assembly (01-6D)	.85
117042	Dial scale and escutcheon (01-6A, 01-6B)	1.50
117198	Dial scale and escutcheon (01-6D)	1.25
117029	Drive drum and bushing	.50
116998	Escutcheon for push buttons	.30
88348	Eyelet—for dial cord	Per Doz. .05
116773	Knob—tuning or volume	.10
116952	Pin for push buttons	.02
117036	Pointer assembly (01-6A, 01-6B)	.28
117195	Pointer assembly (01-6D)	.32
116999	Push buttons	.08
116165	Receptacle for 2 prong plug	.50
117019	Reflector—for pilot lights	.04
81145	Retaining ring—for drive shaft	Per C. .50
114148	Rotor—for power transformer switch (010-6AX, 010-6BX, 010-6DX)	.85

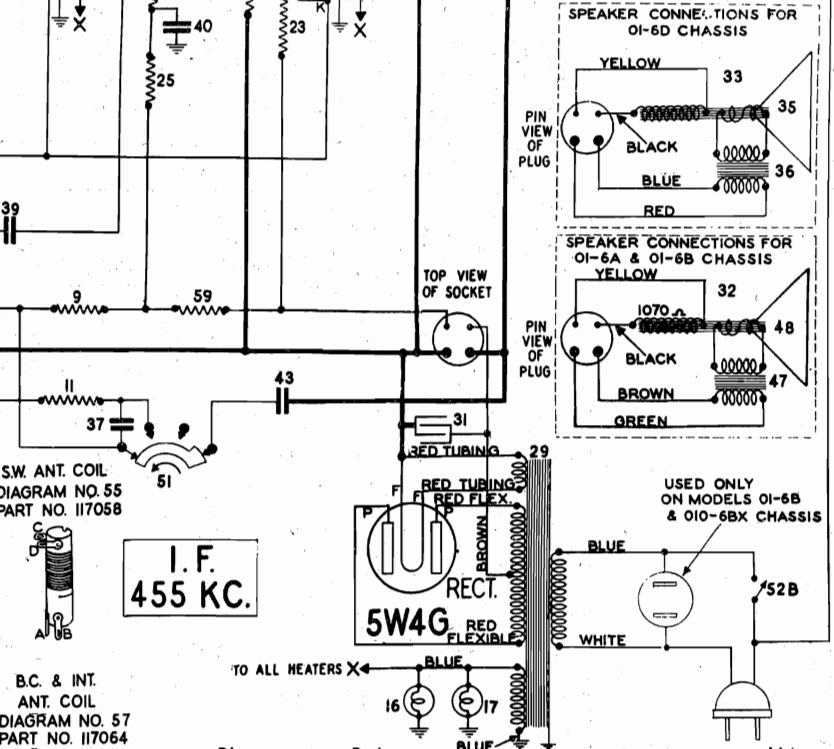


Diagram Number	Part Number	Description	List Price
35	U-116211	Cone & Voice Coil Assy. for U-115063 speaker	\$1.65
36	U-116212	Output transformer for U-115063 speaker	1.50
	116352	Power transformer, 100-240 volt, 40-133 cycles (010-6AX, 010-6BX, 010-6DX)	7.75
37	116640	Condenser—.01 mfd., 600 volts	.15
38-39-40	116819	Condenser—.05 mfd., 600 volts	.20
41-42-43	116893	Condenser—.02 mfd., 600 volts	.15
44	116942	On-Off Phono switch (01-6B9, 010-6B9X)	.25
	116954	Transformer—1st I.F. (01-6A, 01-6B, 01-6D)	1.20
45	117523	Transformer—1st I.F. (010-6AX, 010-6BX, 010-6DX)	1.35
46A-46B	116996	Condenser—variable gang	3.30
47	U-117004	Output transformer for U-115060 & U-115061 speakers	2.50
48	U-117005	Cone & Voice coil Assy. for U-115060 speaker	2.50
	U-117071	Cone & Voice coil Assy. for U-115061 speaker	2.30
49	117022	Condenser—.002 mfd., 600 volt.	.15
50	117024	Switch—push button	2.80
51	117025	Tone control switch	.60
52A-52B	117035	Volume control with switch—1 meg.	1.00
53A-53B-53C	117039	Coil—oscillator (with trimmers)	2.15
54	117053	Phono pickup arm with arm rest and mtg. nut (01-6B9, 010-6B9X)	7.25
55	117058	Coil—antenna S.W.	.50
56A to 56D	117062	Range switch	1.90
57A-57B	117064	Coil—antenna, B.C. & Pol. or Int.	1.00
	117071	Coil & Voice coil Assy. for U-115061 speaker	2.30
	117072	Transformer—2nd I.F. (01-6A, 01-6B, 01-6D)	1.20
	117580	Transformer—2nd I.F. (010-6AX, 010-6BX, 010-6DX)	1.20
59	117075	Resistor—300 ohms 1 watt W.W.	.16
60A to 60L	117081	Push button trimmer gang condenser Assy.	5.20
61	117113	Condenser—mica, 1760 mmfd.	.30
	117356	Condenser—electrolytic, 10 mfd., 25 volt (01-6D, 010-6DX only)	.50
62	117450	Condenser—trimmer—3 section	.40
	117523	Transformer—1st I.F. (010-6AX, 010-6BX, 010-6DX)	1.35
	117580	Transformer—2nd I.F. (010-6AX, 010-6BX, 010-6DX)	1.20
63		See Phonograph parts list.	

RANGE SWITCH
 Two types of range switches were used in these receivers. Both switches are electrically identical, although the contacts are arranged differently on the front decks of the two types. The rear decks of both switches are identical. Illustrations of both types of switch decks adjacent to the circuit diagram show the connections to the various lugs, as they correspond to lettered terminals on the circuit diagram. Coil and push button tuner switch drawings give the same information regarding connections.

CHASSIS 01-6A, 010-6AX, 01-6B, 010-6BX, 01-6D, 010-6DX
Alignment, Trimmers, Phono. Notes, Drive Cord Data

STEWART-WARNER CORP.

MODELS 01-6C9, 010-6C9X
Alignment, Trimmers, Drive Cord, Tuner, Notes

ALIGNMENT EQUIPMENT & PROCEDURE


FOR ALIGNMENT: An output meter and an accurately calibrated signal generator are required.

1. Connect the output meter across the voice coil or between the plate of the 6F6-G output tube and ground in series with a .1 mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the "G" terminal or the chassis.
3. Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure. Remove the connector from between the "A" and "X" terminals.
4. The pointer should be at the following distances with the gang condenser in full mesh:
01-6D & 010-6DX CHASSIS: 2 3/8 inches from the LEFT end of the dial plate.
01-6A, 010-6AX, 01-6B, & 010-6BX CHASSIS: 1 3/4 inches from the LEFT end of the dial plate.

NOTE: When aligning models 01-6B9 and 010-6B9X, make the following connections at the phonograph terminal strip on the rear of the chassis near the center:
Ground the right hand terminal (the one nearest the push button trimmers).
Connect the center and left hand terminals together.


Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output To Receiver	Signal Generator Frequency	Band Switch Position	Pointer Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Front Lug on Gang Condenser	455 KC	Broadcast	Any Point Where It Does Not Affect the Signal	1-2 3-4	2nd I.F. 1st I.F.	Adjust for Maximum Output. Then Repeat Adjustment.
200 MMFD. Mica Condenser	Antenna Terminal "A"	455 KC	Broadcast	Any Point Where It Does Not Affect the Signal	5	Wave Trap	Adjust for Minimum Output, using a strong generator signal.
200 MMFD. Mica Condenser	Antenna Terminal "A"	1500 KC	Broadcast	*1500 KC	6	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mica Condenser	Antenna Terminal "A"	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	7	Broadcast Detector	Adjust for Maximum Output.
200 MMFD. Mica Condenser	Antenna Terminal "A"	600 KC	Broadcast	Tune to 600 KC Generator Signal	8	Broadcast Oscillator (Series)	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.
400 OHM Carbon Resistor	Antenna Terminal "A"	6 MC	Intermediate	*6 MC	9	Intermediate Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 5.1 MC. If Image does not appear, Realign at 6 MC with Trimmer Screw farther out. Recheck Image.
400 OHM Carbon Resistor	Antenna Terminal "A"	6 MC	Intermediate	Tune to 6 MC Generator Signal	10	Intermediate Antenna	Adjust for Maximum Output.
400 OHM Carbon Resistor	Antenna Terminal "A"	20 MC	Foreign	*20 MC	11	Foreign Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was obtained by Tuning in Image at Approx. 19.1 MC. If Image does not appear, Realign at 20 MC with Trimmer Screw farther out. Recheck Image.
400 OHM Carbon Resistor	Antenna Terminal "A"	20 MC	Foreign	Tune to 20 MC Generator Signal	12	Foreign Antenna	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is obtained.

*For pointer settings at these frequencies, see "Alignment Points"

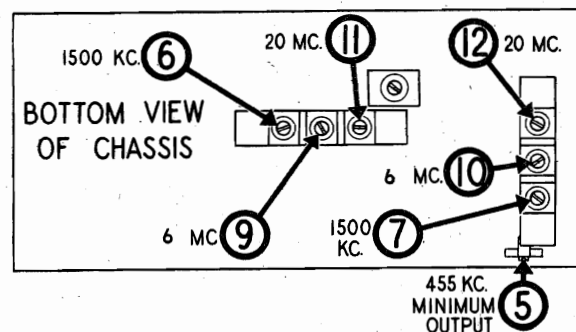

TONE CONTROL CIRCUIT CHANGES

The tone control circuit used in most receivers of this model is shown in the circuit diagram on the reverse side of this sheet. Chassis employing this type of tone control circuit are stamped with the letter "S" on the chassis.
To the right of the circuit diagram is shown a tone control circuit used in some early receivers. Note the important differences both in the set itself and in the push button circuit. A few receivers incorporate a tone control circuit differing from both circuits illustrated. In these cases, it is suggested that the serviceman revise these earlier circuits so as to convert them to the tone control circuit illustrated at the right of the receiver circuit diagram.

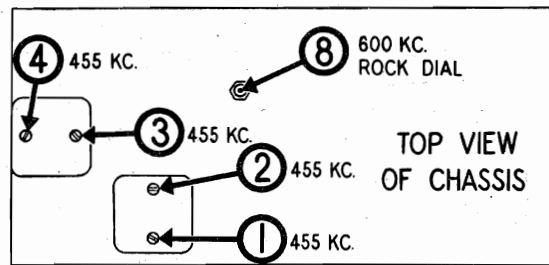


In some chassis, Resistor No. 31 was 22,000 ohms instead of 47,000 ohms. If this lower value resistor is replaced by the 47,000 ohm unit, an improvement in tone will result, especially noticeable on higher volume.

IMPORTANT: Servicemen are cautioned not to interchange radio chassis indiscriminately in these receivers. The tone control circuit of an early receiver will not operate with a chassis of the later type (Stamped "S") and vice versa. Should it be necessary to interchange chassis and tone control assemblies, change the connections of the switch or of the set to conform to the circuit diagram.

PHONOGRAPH PICK-UP CIRCUIT CHANGES

Some of the earlier chassis of this model did not include the 220,000 ohm resistor or the 0.001 mfd. condenser, which are shown connected across the pick-up. If either of these units are missing, or are of a value different from that specified, the insertion of the proper units will improve the tone when records are being played.

Chassis 01-6A, 010-6AX, 01-6B DIAL CORD REPLACEMENT
01-6C, 010-6CX, 010-6BX

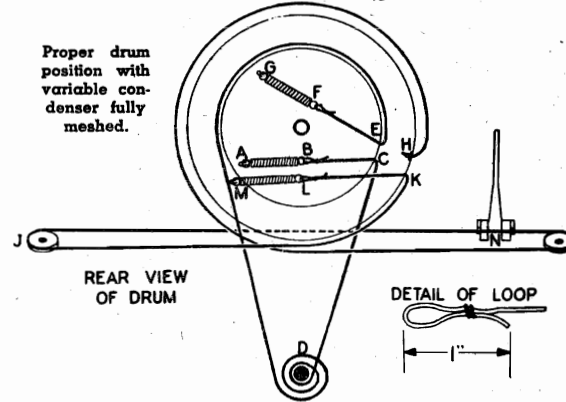

TO REPLACE THE TUNING DRIVE CORD

1. 19 3/4 inches of dial drive cord (part No. 117057) are required. Make a one-inch loop in each end of this cord, using a dial cord clip, (part No. 114955) (See sketch above for detail of loop). A knot may be tied if a slightly smaller loop is made.
2. Fasten one end of a tension spring (part No. 113177) to the loop at point B and the other end of the spring to tab A.
3. Pass the other end of the dial cord through hole C in the inner drum and
4. Make two and a half turns of the cord about tuning shaft D.
5. Continue the cord clockwise (rear view) about the inner drum and pass it through hole E.
6. Fasten a tension spring, (part No. 113177) to the other loop of the cord at point F and fasten the spring to the tab G.

TO REPLACE THE POINTER DRIVE CORD

1. 37 inches of pointer drive cord, (part No. 116948) are required. Fasten an eyelet (part No. 88348) at a point one-half inch from one end of this cord.
2. Pass the other end of the cord outward through hole H in the larger drum.
3. Fashion a one-inch loop at outer end of the pointer cord, (See detail of loop in illustration), using a dial cord clip (part No. 114955), or tie a knot using a smaller loop.
4. Continue the cord counter-clockwise (rear view) around the larger drum and around the rear of pulley I from the rear to the front.
5. Go from pulley I around the front of pulley J and counter-clockwise (rear view) around the larger drum to hole K.
6. Pass the loop through hole K and fasten it to one end of a tension spring (part No. 113177) at point L, the other end of the spring being fastened to point M.
7. Clip the dial pointer to the cord. With the drum in the position shown, and with the gang condenser in full mesh, fasten the pointer so that it is at a point 1 3/8 inches from the left end of the brown dial plate (front view).

PHONOGRAPH NOTES

On early releases of model 01-6B9, a 220,000 ohm resistor was connected across the phonograph pickup at the "PHONO-RADIO" switch. In order to eliminate needle scratch on these sets, a 68,000 ohm resistor and a .003 mfd. condenser were substituted for the 220,000 ohm resistor. These were connected as shown in the circuit diagram and are included on the parts list under diagram numbers 1 and 14.

On all late releases a pickup with different cushioning was used, and the values of the resistor and condenser were changed to 470,000 ohms and .001 mfd. These values are also included under diagram numbers 1 and 14.

If "growling" is encountered during phonograph operation, the chassis mounting bolts should be checked to see that they are loose enough to allow the chassis to float on its rubber cushions.

If the set is of the early type using the 220,000 ohm resistor, the substitution of the 68,000 ohm resistor and .003 mfd. condenser described above may help to reduce "growling."


RANGE SWITCH

Two types of range switches were used in this receiver. Both switches are electrically identical, although the contacts are arranged differently on the front decks of the two types. The rear decks of both switches are identical. Illustrations of both types of switch decks adjacent to the circuit diagram show the connections to the various lugs, as they correspond to lettered terminals on the circuit diagram. Coil and push button tuner switch drawings give the same information regarding connections.

SETTING UP PUSH BUTTONS

1. Always allow set to warm up thoroughly before attempting to set up the push buttons. Fifteen minutes will suffice.
2. Set must be connected to a good antenna system, preferably the antenna on which it is to operate.
3. On the bottom of the chassis, as viewed from rear of cabinet will be seen six pairs of adjusting screws, which are used to adjust the push button trimmers to the selected stations. The larger of the two screws in each case adjust BOTH the oscillator and antenna trimmers, while the smaller screw is a vernier adjustment on the antenna trimmer.
4. The frequency range of the trimmers is indicated on the sticker adjacent to the trimmer adjusting screws. Select six local stations whose frequencies fall within the tuning range of the individual trimmers.

MODELS 01-6D & 010-6DX

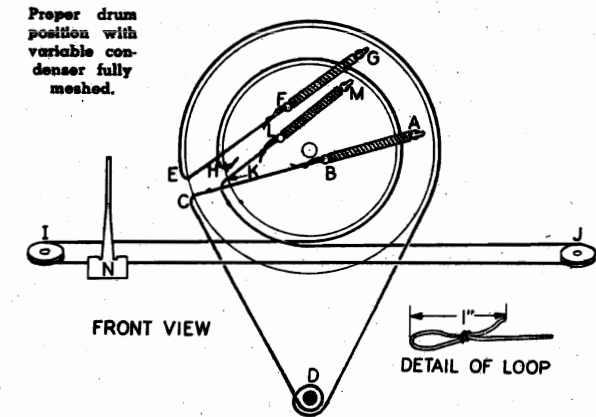

TO REPLACE THE TUNING DRIVE CORD

1. 25 1/2 inches of dial drive cord (part No. 117057) are required. Make a one-inch loop in each end of this cord, using a dial cord clip, (part No. 114955) (See sketch above for detail of loop). A knot may be tied if a slightly smaller loop is made.
2. Fasten one end of a tension spring (part No. 113177) to the loop at point B and the other end of the spring to tab A.
3. Pass the other end of the dial cord through hole C in the outer drum.
4. Make one and a half turns of the cord about tuning shaft D.
5. Continue the cord counter-clockwise about the outer drum and pass it through hole E.
6. Fasten a tension spring, (part No. 113177) to the other loop of the cord at point F and fasten the spring to the tab G.

TO REPLACE THE POINTER DRIVE CORD

1. 34 1/2 inches of pointer drive cord, (part No. 116948) are required. Fasten an eyelet (part No. 88348) at a point one-half inch from one end of this cord.
2. Pass the other end of the cord outward through hole H in the smaller drum.
3. Fashion a one-inch loop at outer end of the pointer cord, (See detail of loop in illustration), using a dial cord clip (part No. 114955), or tie a knot using a smaller loop.
4. Continue the cord clockwise around the smaller drum and around pulley I from the rear to the front.
5. Go from pulley I around the front of Pulley J and clockwise around the smaller drum to hole K.
6. Pass the loop through hole K and fasten it to one end of a tension spring (part No. 113177) at point L, the other end of the spring then being fastened to point M.
7. Clip the dial pointer to the cord. With the drum in the position shown, and with the gang condenser in full mesh, fasten the pointer so that it is at a point 2 3/8 inches from the left end of the brown dial plate.

ALIGNMENT POINTS

Frequency	Pointer Distance in Inches from Right End of Brown Dial Plate	
	Models 01-6A, 010-6AX, 01-6B, 010-6BX	Models 01-6D & 010-6DX
1500 KC	2-5/16"	3"
6 MC.	2-3/8"	2-15/16"
20 MC.	2-3/16"	2-7/8"

5. Label the push buttons with the call letters of the selected stations, assigning the lowest frequency station to the extreme left hand button and the highest frequency station to the extreme right hand button.
6. Turn the range switch to "B" and manually tune in the station you wish to set up on the extreme left hand button.
7. Turn the range switch to "A" and push in the left hand button. Using a small screwdriver, adjust the large screw of the No. 1 trimmer until the station you had previously tuned in manually is again heard. Adjust this screw to the point where the program is heard with the deepest tone.
8. Insert the screwdriver in the small screw of this trimmer and turn it until the station is heard with deepest tone. Now again check the setting of the larger adjusting screw, making sure it is adjusted to the point of deepest tone.
9. The set-up for this button is now complete. Set up the remaining buttons in a similar manner.
10. In some instances it may be necessary to reset the trimmer after several months, as they may drift due to heat, humidity, etc. Do not adjust trimmers too tightly or too loosely. Whenever possible, select stations that will fall well within the frequency ranges specified on the trimmers.

SETTING THE DIAL POINTER

Since the dial scale is printed on the escutcheon glass, the serviceman will not know whether the pointer is set correctly unless the set is in place in the cabinet. With the gang condenser in full mesh, the dial pointer should be at a point 1 3/8 inches from the left end of the brown dial plate. If the pointer is not set correctly, loosen the two set screws holding the dial drum to the condenser shaft. Then hold the condenser in full mesh and move the dial drum until the pointer reaches the proper point, then tighten the set screws.
When replacing the chassis in the cabinet, be sure it is in the position giving most accurate dial calibration.

STEWART-WARNER CORP.

MODEL 01-6C9, Ch. 01-6C
Notes, Parts

3. Set Index and Record Reject Lever to "MANUAL" position.
 4. Proceed as in steps 5, 6 and 7 under "AUTOMATIC OPERATION."
- When you have finished playing, be sure that the turntable has stopped and the pickup is in the rest position over the needle gauge plate. Never leave pickup with needle resting on a record or on the turntable.
5. Throw the Motor Switch to "ON." This is the left hand knob on the front of the cabinet. The turntable should commence to revolve.
 6. When turntable has attained speed, lift pickup and lower gently on to the record so that the needle point enters the outside groove.
 7. Close the lid of the cabinet to eliminate mechanical reproduction of sound by the needle. Adjust the radio tone control button giving the most pleasing tone. The whole series of records will now play without further attention, and the last record will repeat until the Motor Switch is turned off. Allow the record-changing mechanism to complete its cycle before the turntable is stopped. Then lift the pickup, swing the arm to the right beyond the edge of the record and lower it onto the pickup rest with pickup over needle gauge plate. The record player is then ready for reloading, or for manual operation.

NOTE.—A bind or a jam in the mechanism can usually be relieved by rotating the turntable by hand in the reverse direction.

- Record Holder Shelves.**—To place a record on the turntable or to remove records, raise the record holder shelves and swing clear of outer edge of record. Also push back vertical lever adjacent to the rear record holder. You now have clear access to the turntable. Before loading the magazine for Automatic Operation swing the record holder shelves back into position.
- Automatic Operation**
1. Push the button marked "ON," and turn RADIO-PHONO to PHONO.
 2. See that pickup is over needle gauge plate with needle properly in place. If not, complete "cycle" as explained in the second paragraph under "OPERATING INSTRUCTIONS."
 3. With Index and Record Reject Lever at "MANUAL" swing the record holder shelves out of the way and place the first of the series of records on the turntable. Swing the record holder shelves back into the position where they drop down slightly and snap into place. Then put the remainder on the records (up to seven 10-inch or six 12-inch records) on the record holder posts (as shown in Figure 1). The records should be arranged in the desired order with the desired selection face up and the last selection on top.
 4. Set the Index and Record Reject Lever to the proper position. (See INDEX AND RECORD REJECT LEVER.)
- Manual Operation**
- To play records manually:
1. Proceed as in steps 1 and 2, under "AUTOMATIC OPERATION."
 2. Place record on turntable with desired selection up wards.

PARTS LIST



Diagram No.	Part No.	DESCRIPTION
OPERATING MECHANISM	1	S-14209 Bumper—Main lever rubber bumper (early type only)
	2	S-31181 Guide—Pickup lift cable guide (coil spring 80T)
	3	S-31134 Bracket—Pickup locating lever-mounting bracket
	4	S-8408 Clutch—Trip lever friction clutch assembly
	5	S-31121 Ganger—Trip lever friction finger assembly
	6	S-31123 Guide—Main lever spring guide
	11	S-31114 Lever—Index lever assembly (early type)
	12	S-33992 Lever—Index lever assembly (late type)
	13	S-31137 Lever—Index lever tension spring lever
	14	S-31138 Lever—Index lever tension spring lever
	15	S-31113 Lever—Main lever assembly (early type)
	16	S-33985 Lever—Main lever assembly (late type)
	18	S-31140 Lever—Pickup lift cable lever and spring assembly
	17	S-31135 Lever—Pickup locating lever assembly (late type)
	18	S-34002 Lever—Pickup locating lever assembly (late type)
	18	S-31130 Lever—Record separator elevating lever complete
	19	S-31132 Lever—Pickup mounting lever
20	S-31116 Lever—Trip lever assembly	
21	S-31131 Lever—Trip regulator lever	
22	S-31132 Roller—Pickup roller	
23	S-31124 Roller—Record post drive pin	
24	S-14207 Roller—Pickup lift cable roller and bracket assembly	
PICKUP AND ARM ASSEMBLIES	S-33096 Arm—Pickup arm—less crystal cartridge, needle screw, pivot arm and cable (early type)	
	S-34778 Arm—Pickup arm—less crystal cartridge, needle screw, pivot arm and cable (late type)	
	S-31106 Cable—Pickup arm lift cable and clips	
	S-31105 Crystal—Pickup crystal cartridge and needle screw (early type)	
	S-31114 Crystal—Pickup crystal cartridge and needle screw (late type)	
	S-31180 Damper—Viscous damper for crystal armature (late type)	
	S-31183 Damper—Viscous damper for crystal armature (late type)	
	S-31180 Screw—Pickup needle screw	
	S-31181 Shaft—Pickup motor arm and shaft assembly	
	MOTORBOARD ASSEMBLIES	S-31149 Base—Tone arm mounting base
		S-9848 Cup—Used needle cup, rest, and lid complete (early type)
		S-33909 Cup—Used needle cup, rest, and lid complete (late type)
		S-33977 Escutcheon—Index escutcheon (early type)
		S-33979 Escutcheon—Index escutcheon (late type)
		S-31150 Mounting—Pickup arm base rubber mounting
		S-31155 Spring—Needle cup lid tension spring
		MISCELLANEOUS ASSEMBLIES
S-33983 Damper—Motor spindle rubber drive sleeve and metal damper plate		
S-33986 Separator—Record separator knife (early type)		
S-34775 Separator—Record separator knife and cap (late type)		
S-31122 Shaft—Record separator post shaft (early type)		
S-33988 Shaft—Record separator post shaft (late type)		
S-33989 Shaft—Record post shaft assembly (early type)		
S-44190 Spring—Pickup locating lever short spring or locating lever pawl tension spring (16 turns, 180-in. O.D., 19/32-in. lg.)		
S-31136 Sp.—180-in. O.D., 15/16-in. lg. spring (35 turns, 190-in. O.D., 15/16-in. lg.)		
S-8466 Spring—Pickup lift cable tension spring (30 turns, 195-in. O.D., 1-in. lg.)		
S-31127 Spring—Trip separator pressure spring (5 turns, 190-in. O.D., 1-in. lg.)		
S-44191 Spring—Trip detaining lever tension spring (15 turns, 190-in. O.D., 1-in. lg.)		
S-31976 Spring—Pickup locating lever tension spring (14 turns, 230-in. O.D., 37/32-in. lg.)		
S-33436 Spring—Locating lever tension spring (16 turns, 109-in. O.D., 37/32-in. lg.)		
S-32980 Gear—Back gear for front lift-hand record post		
S-32978 Gear—Can and drive gear (early type)		
S-33987 Can—Can and drive gear (late type)		
S-33982 Spring—Main lever tension spring (18 turns, 180-in. O.D., 1 1/2-in. lg.)		
S-31117 Screw—Special screw to adjust friction clutch tension		
S-32976 Switch—Motor control switch		
S-33976 Spring—Can pawl tension spring on main gear (12 turns, 190-in. O.D., 4-3/64-in. lg.)		
S-31470 Springs—Record mounting springs, screw (4 mounting)		
S-33981 Turntable—Complete (early type)		
S-33991 Turntable—Complete (late type)		
S-31128 Washer—"C" washer for top of record post		
MOTOR ASSEMBLIES		
S-33955 Coil—Field coil and laminations for 50-cycle motor		
S-33954 Coil—Field coil and laminations for 60-cycle motor		
S-33960 Gear—Motor spindle gear and pin		
S-33972 Motor—Motor complete, 50-cycle, 110 volts AC		
S-33971 Motor—Motor complete, 60-cycle, 110 volts AC		
S-33956 Spindle—Motor spindle complete with three gear for 50-cycle motor		
S-33957 Spindle—Turntable spindle complete with three gear for 60-cycle motor		

Parts which are not identical are marked with asterisks. Parts which are not identical are marked with asterisks. Refer to the first paragraph, "OLD TYPE" or "NEW TYPE."

- Cautions**
1. Never use force to start or stop the motor or any part of the record-changing mechanism or pickup arm.
 2. The use of records which have become "tripped" or damaged through improper care may cause the mechanism to jam and damage the instrument. In addition, records which become warped will slide off another when playing, resulting in unsatisfactory reproduction.
 3. This instrument is NOT RECOMMENDED for playing 10-inch and 12-inch records in mixed sequence. If the user desires this service he must be familiar with the Record Reject Lever and the Index and Record Reject Lever. The Record Reject Lever should be set at "10" and the pickup should be down on the record on a 10-inch diameter unless the Turntable Switch is turned off. Any jamming of the mechanism under these conditions indicates that the records used are not perfectly flat or that their edges are not sufficiently smooth to permit normal operation of the separator in dropping each record in sequence onto the turntable.
- Controls and Moving Mechanism**
- Index and Record Reject Levers.**—This lever is located near the right front corner of the motorboard with its index plate marked for four positions—"MANUAL," "12," "10," and "REJECT." When you desire to change record selections manually, this lever should be set in the "MANUAL" position. With the lever in the "12" position, the mechanism is set to play a series of 12-inch records automatically. If you play either a series of 10-inch records or a series of 12-inch records mixed, the lever should be set at the "10" position.
- To reject a record being played, or to start the record-changing cycle in case the record just played does not have the standard record stopping groove, simply push the lever up and swing outwards and the next record will drop down. Upon releasing the lever, it will automatically return to the "10" position. If you are playing a series of 12-inch records, the lever should be returned to the "12" position after rejecting a record. Keep the lever in its "MANUAL" position when not actually playing records automatically.
- Turntable Switch.**—The switch located just in front of the Index and Record Reject Lever is used to start or stop the motor. NEVER LEAVE THIS SWITCH IN THE "ON" POSITION AT ALL TIMES.
- Pickup and Top-Loading Needle Socket.**—The pickup is the new crystal type, with a hole in the top for insertion of needles. When not playing records, the pickup arm should be moved out to the right beyond the turntable and placed at rest on the support with the pickup over the needle gauge plate. The edge of the pickup in the early type record player must be in the groove provided for the outer edge of the record. The pickup must be in this position to change needles.
- To insert a needle initially, loosen the needle screw on the front of the pickup, place needle in hole at top so that it drops down against the needle gauge plate and then tighten up the needle screw.
- Needle Ejector.**—The extending tab on the needle gauge plate of the needle box operates the needle ejector. To change a needle, place pickup in rest position, loosen needle screw and press the extending tab on the needle gauge plate to drop the used needle into the box below. Release tab, allowing the needle gauge plate to swing back, and then insert a new needle in the pickup as described above.
- The used needle box may be taken out and emptied by first lifting the pickup of its rest and allowing it to float upwards at the front and lower it. Then tilt the box upwards at front and lower it into the hole with the lug on back of the box in the slot in the motorboard. Slide the lug under the motorboard and push the box in place. Replace the pickup on its rest.

STEWART-WARNER CORP.

MODELS 05-5L1 to 05-5L9
Chassis 05-5L
Schematic, Voltage, Socket

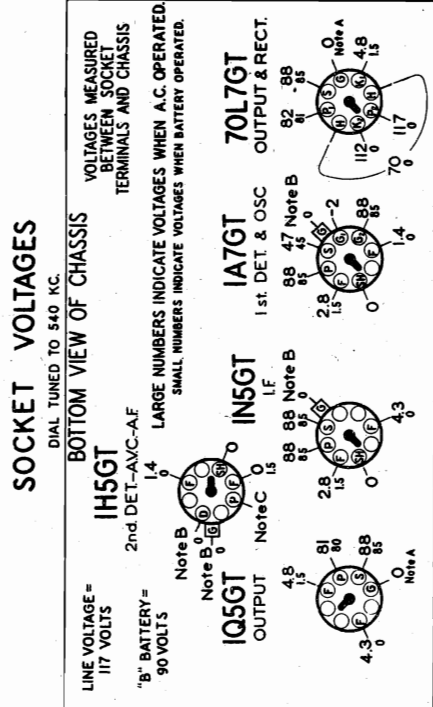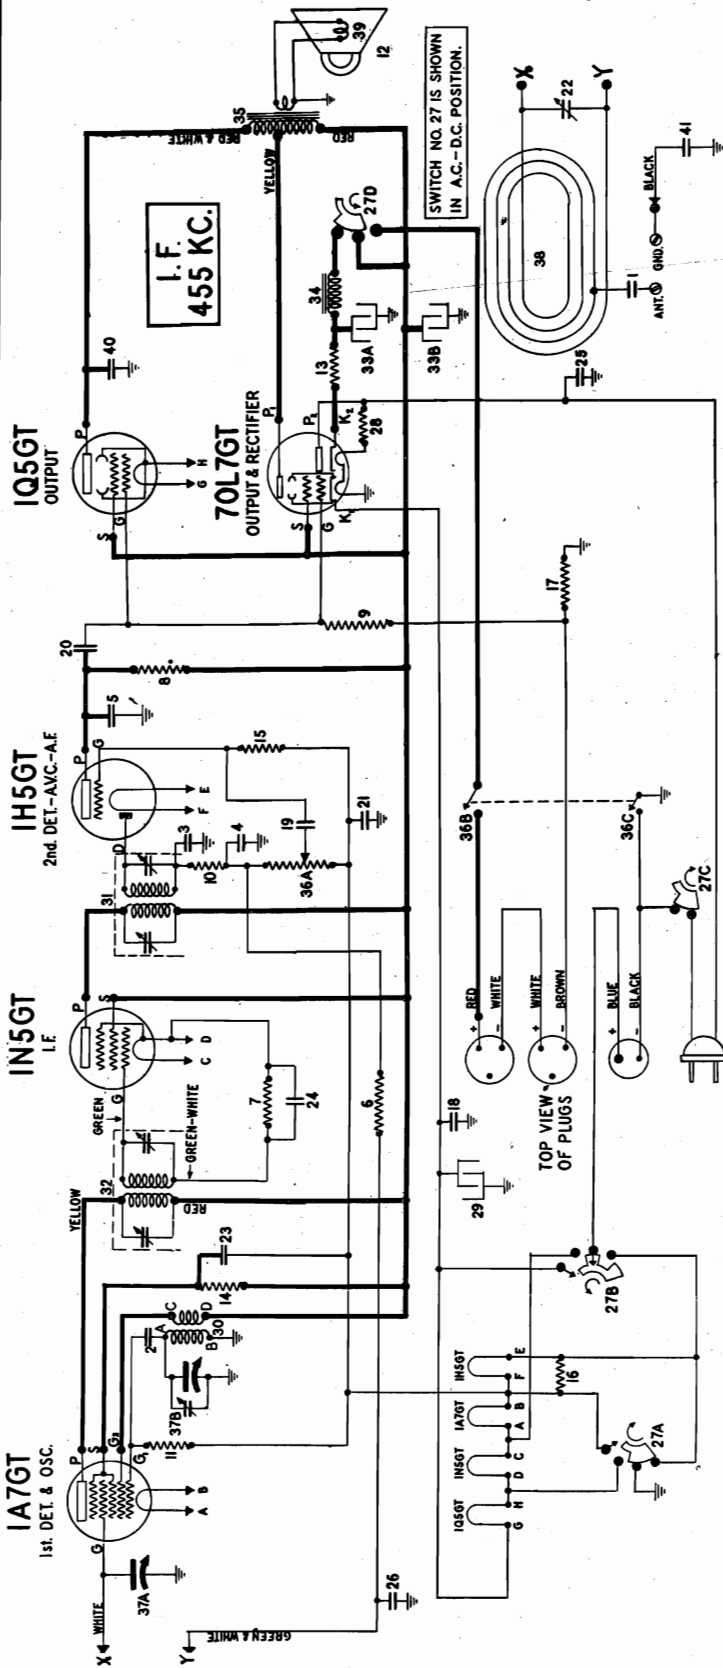

SOCKET VOLTAGES
DIAL TUNED TO 540 KC.
BOTTOM VIEW OF CHASSIS
VOLTAGES MEASURED BETWEEN SOCKET TERMINALS AND CHASSIS

LINE VOLTAGE = 117 VOLTS
"B" BATTERY = 90 VOLTS

LARGE NUMBERS INDICATE VOLTAGES WHEN A.C. OPERATED.
SMALL NUMBERS INDICATE VOLTAGES WHEN BATTERY OPERATED.

NOTE A: The 1Q5GT grid bias during battery operation is -5 volts measured across resistor 17.

NOTE B: During A.C.-D.C. operation these elements are slightly positive with respect to chassis. This voltage cannot be measured properly on ordinary meters.

NOTE C: Due to the high resistance of resistor 8, only a small voltage will be read on a meter having a resistance of 1,000 ohms per volt.


Diagram Number	Part Number	Description
1	83539	Condenser—mica, 260 mmf.
2-3-4	83783	Condenser—mica, 110 mmf.
5	85394	Condenser—mica, 510 mmf.
6-7	110570	Resistor—carbon, 2.2 meg., 1/4 watt.
8-9	112971	Resistor—470,000 ohms, 1/4 watt.
10	112986	Resistor—100,000 ohms, 1/4 watt.
11	112987	Resistor—insulated, 220,000 ohms, 1/4 watt
12	R-115069	Speaker—P.M. dynamic (5 in.)
13	116013	Resistor—50 ohms, 1 watt, W.W.
14	116058	Resistor—insulated, 47,000 ohms, 1/4 watt
15	116071	Resistor—33 meg., 1/10 watt.
16	116095	Resistor—220 ohms, 1/4 watt.
17	116097	Resistor—insulated, 400 ohms, 1/4 watt.
18	116625	Condenser—.1 mfd., 600 volts.
19-20	116640	Condenser—.01 mfd., 600 volts.
21	116706	Condenser—.2 mfd., 600 volts.
22	116781	Condenser—trimmer
23-24-25-26	116819	Switch—A.C.-D.C. Battery
27A TO 27D	117719	Switch—A.C.-D.C. Battery
28	117720	Resistor—360 ohms, 7.26 watts
29	117730	Condenser—100 mfd., 10 volt electrolytic.
30	117741	Coil—oscillator
31	117742	Transformer—2nd I.F.
32	117743	Transformer—1st I.F.
33A-33B	117759	Condenser—dual 20 mfd., 150 volt.
34	117881	Filter—choke
35	117891	Transformer—output
36A-36B-36C	117897	Volume control—1 megohm (with switch)
37A-37B	117902	Condenser—tuning
38	117914	Loop antenna
39	R-118003	Cone & voice coil for R-115069 speaker.
40-41	118194	Condenser—.006 mfd., 600 volts.

Par. Number
 117708 Battery cable
 117795 Battery retaining block
 117837 Cabinet and back
 112745 Clip—coil mounting
 113019 Clip—dial scale retaining
 113178 Cord—dial (supplied in 4 ft. lengths)
 117802 Dial scale
 117772 Knob (A.C.-D.C. Battery)
 117895 Knob—volume
 118732 Knob—tuning
 116488 Loop terminal strip with trimmer and contacts
 Nut—8-32 wing nut.
 Plate—"Stewart-Warner"
 Plate—"A.C.-D.C. & BATT."
 Plate—"OFF—VOLUME"
 Plate—"TUNING"
 Plug—3 prong male.
 Plug—2 prong male.
 Pointer assembly
 Retaining ring—for drive shaft
 Screw—self tapping 8x1/4
 Screw—special No. 8-32x1 1/4
 Shield—tube
 Socket (metal base) (small)
 Spring—for dial cord tension.
 Tuning shaft
 Washer—paper for back of knobs
 Window, dial

NOTE
TERMINALS OF COIL SHOWN IN ILLUSTRATION ABOVE SHOULD CORRESPOND TO SIMILARLY LETTERED TERMINALS ON THE CIRCUIT DIAGRAM.

STEWART-WARNER CORP.

MODELS 01-6E1 to 01-6E9
Chassis 01-6E
Schematic


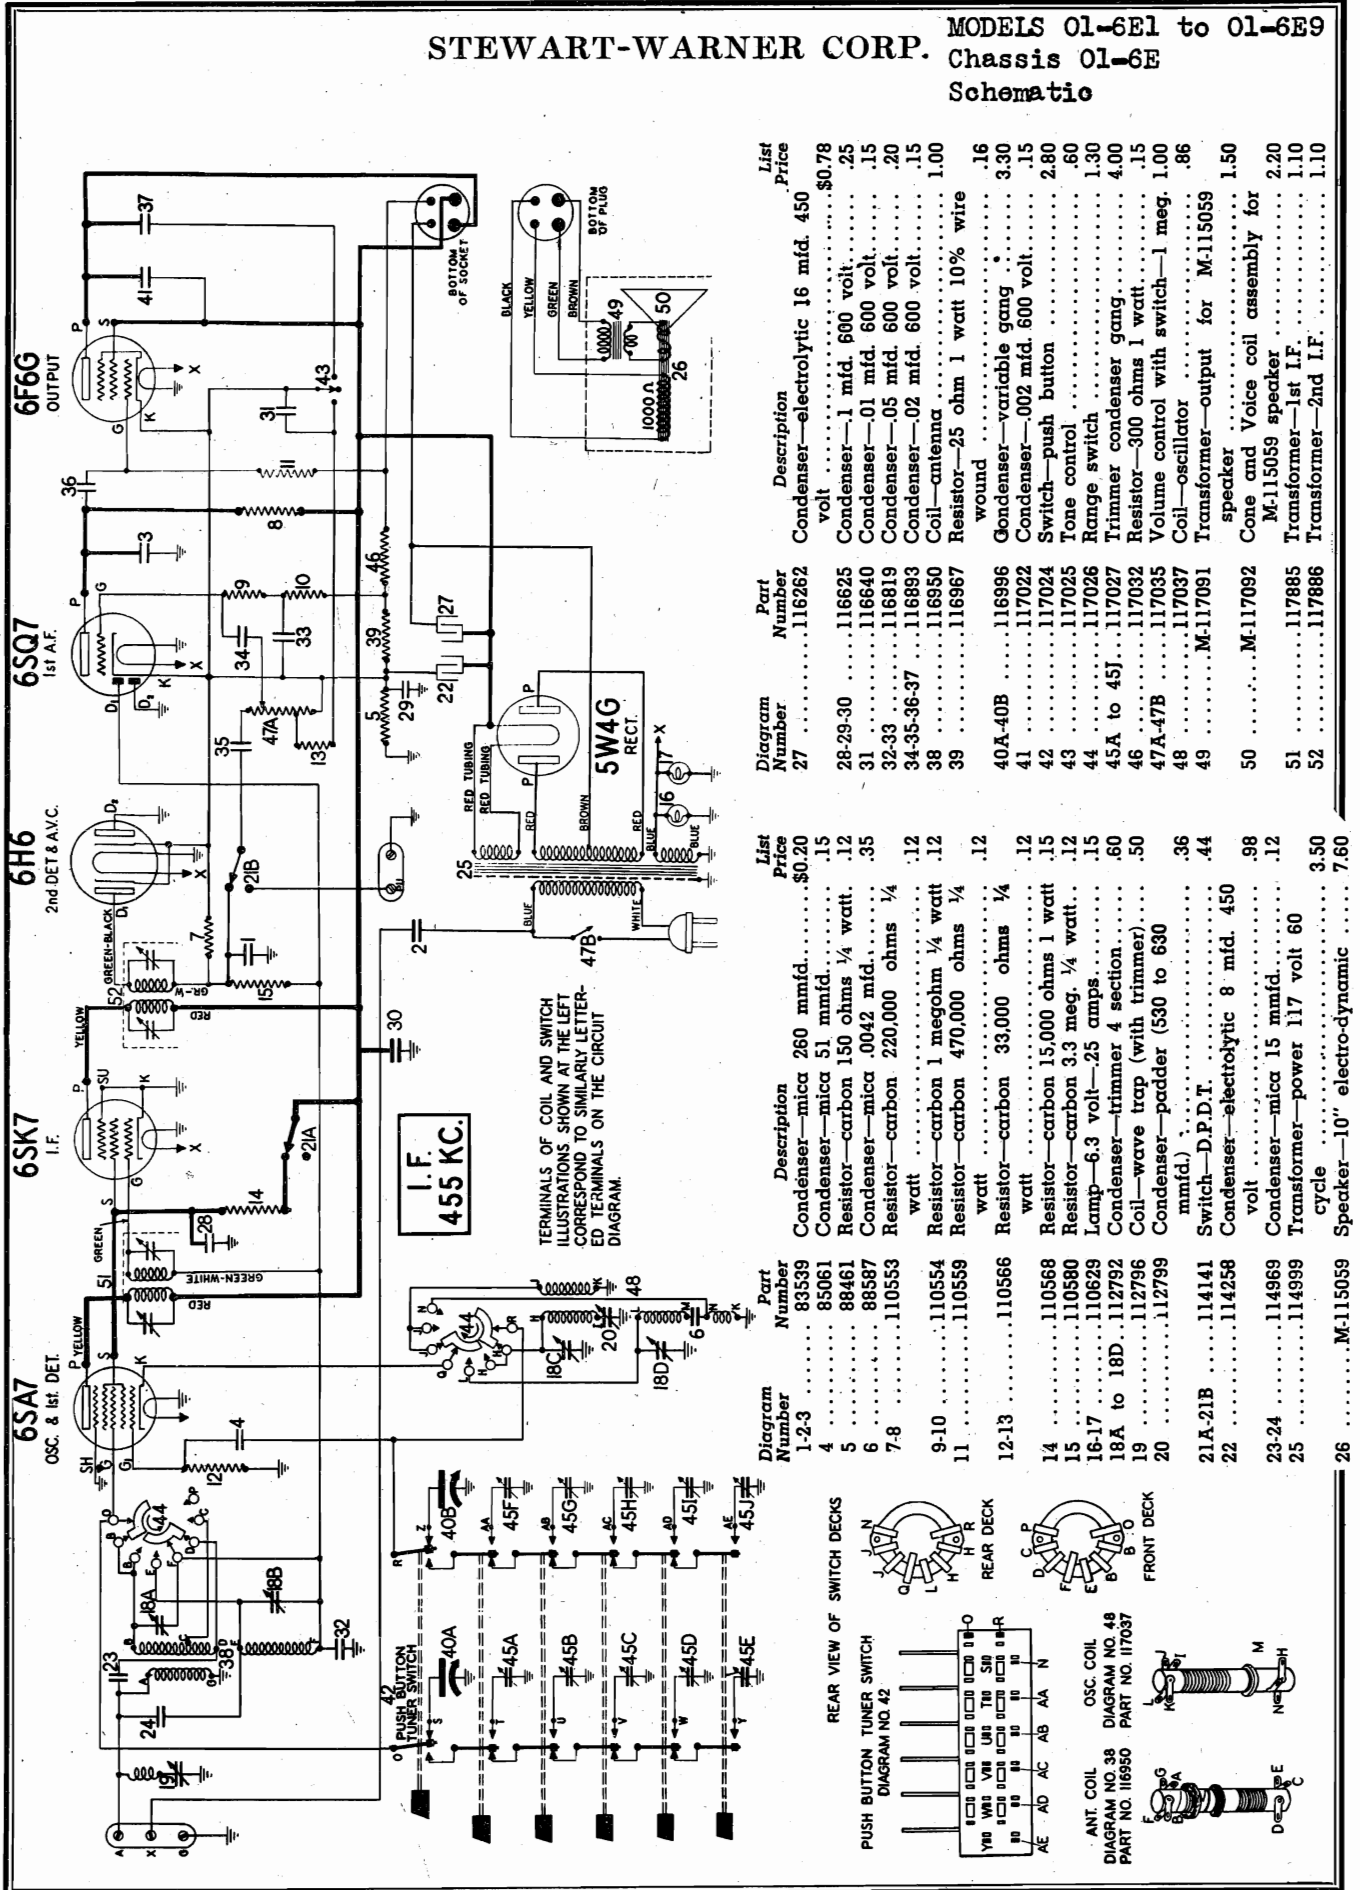


MODELS 01-6E1 to 01-6E9
Alignment, Voltage
Trimmers, Socket

STEWART-WARNER CORP.

1. Connect the output meter across the voice coil or between the plate of the 6F6G output tube and ground in series with a .1 mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the "G" terminal or the chassis. NOTE: Remove the connector from between the "A" and "X" terminals.
3. Turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure.
4. With the gang condenser in full mesh, set the pointer at a point $1\frac{3}{8}$ " from the left flange of the brown dial plate. This point corresponds to the last mark on the low frequency end of the dial scale. If the pointer is incorrectly set, it is only necessary to loosen the set screws on the dial drive drum and push the gang condenser in full mesh, with the pointer properly set, then retighten the set screws.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output To Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Front Lug of Gang Condenser	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	1-2	2nd I.F.	Adjust for maximum output. Then repeat adjustment.
					3-4	1st I.F.	
200 MMFD. Mica Condenser	"A" Terminal	455 KC	Broadcast	Any Point Where It Does Not Affect The Signal	5	Wave Trap	Adjust for minimum output using a strong generator signal.
200 MMFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	1500 KC (2 $\frac{3}{8}$ " from right Dial Plate end)	6	Broadcast Oscillator (Shunt)	Adjust for maximum output.
200 MMFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	Tune To 1500 KC Generator Signal	7	Broadcast Antenna	Adjust for maximum output.
200 MMFD. Mica Condenser	"A" Terminal	600 KC	Broadcast	Tune to 600 KC Generator Signal	8	Broadcast Oscillator (Series Pad)	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.
400 OHM Carbon Resistor	"A" Terminal	14 MC	Foreign	14 MC (2-7/16" from right Dial Plate end)	9	Foreign Oscillator (Shunt)	Adjust for maximum output. Check to see if proper peak was obtained by tuning in image at approx. 13.1 MC. If image does not appear realign at 14 MC. with trimmer screw farther out. Recheck image.
400 OHM Carbon Resistor	"A" Terminal	14 MC	Foreign	14 MC	10	Foreign Antenna	Adjust for maximum output. Try to increase output by detuning trimmer and retuning receiver dial until maximum output is obtained.

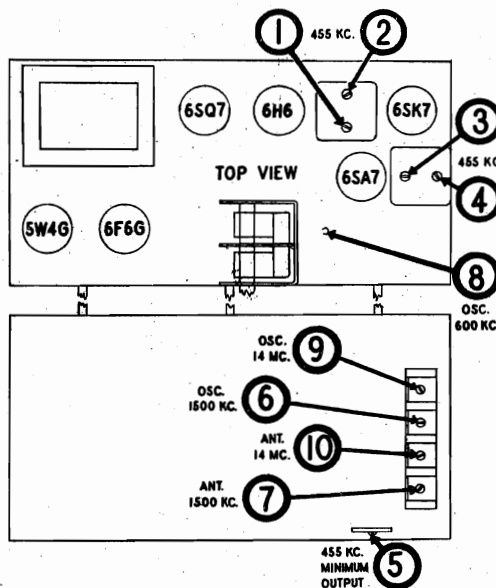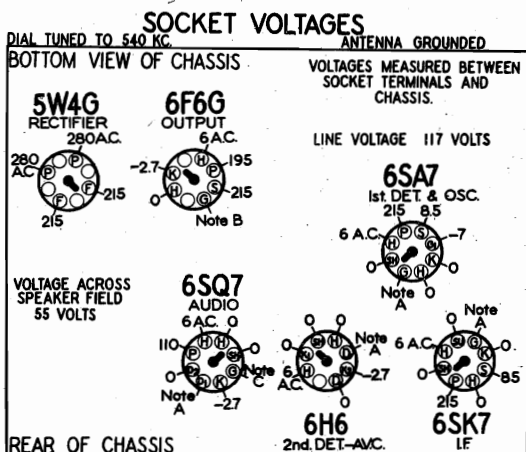

STEWART-WARNER CORP. MODELS 01-6G1, 01-6G4-1 to 01-6G4-5 inc. Ch. 01-6G 01-6G1-Z, 01-6G4-1-Z to 01-6G4-5-Z inc. Ch. 01-6G-Z Schematic

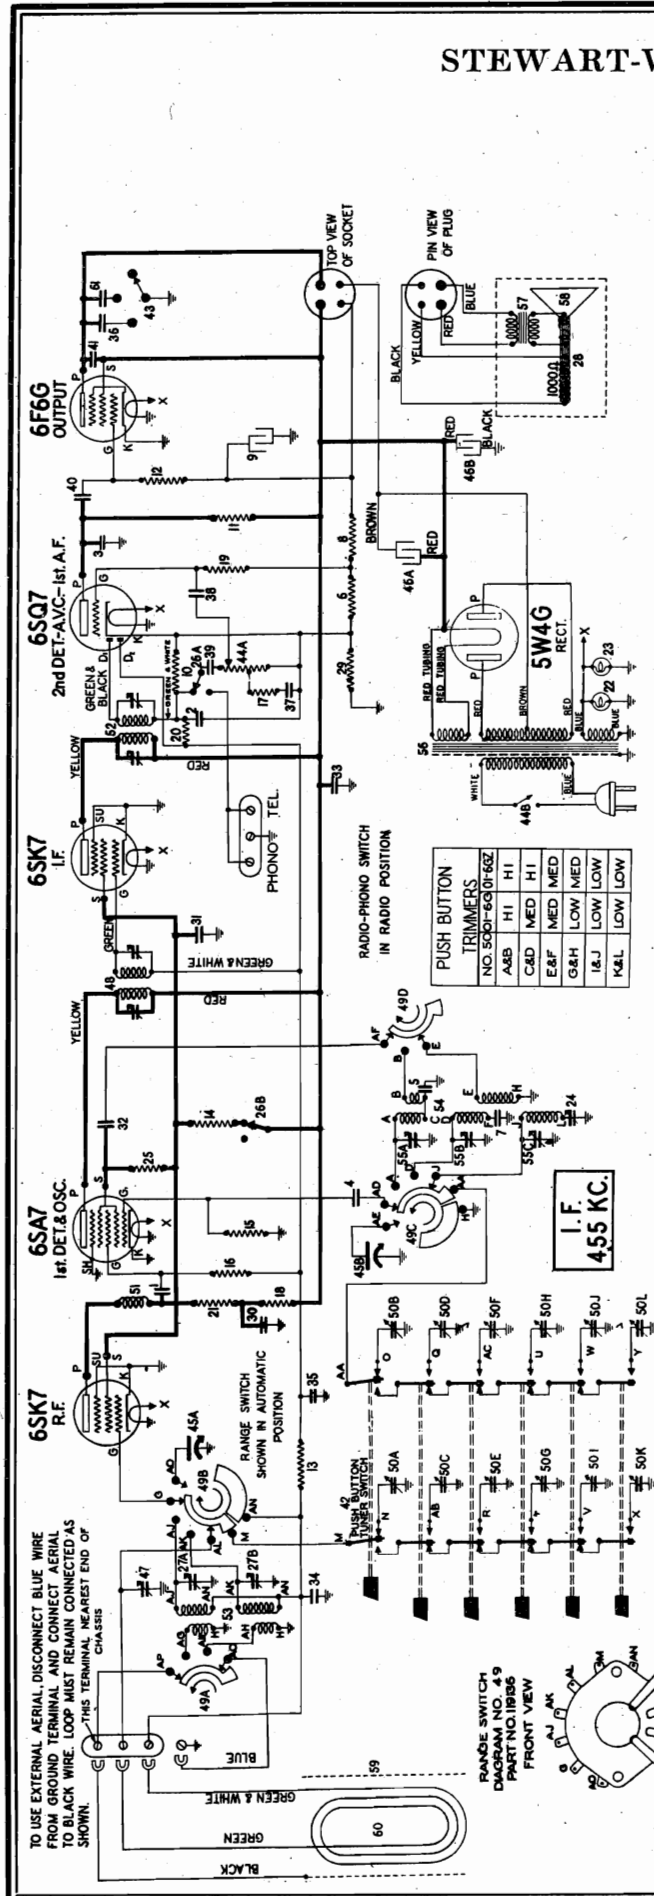


Diagram Number	Part Number	Description	List Price
1-2-3	83539	Condenser—mica 260 mmfd.	\$0.20
4	85061	Condenser—mica 51 mmfd.	.15
5	85440	Condenser—mica .00351 mfd. 3%	.40
6	88465	Resistor—wire wound 25 ohms 1/2 watt.	.15
7	89275	Condenser—mica .002 mfd.	.16
8	89762	Resistor—wire wound 220 ohms 1 watt.	.40
9	110377	Condenser—electrolytic 10 mfd.—35 volts	.24
10-11-12	110553	Resistor—carbon 220,000 ohms 1/4 watt.	.12
13	110559	Resistor—carbon 470,000 ohms 1/4 watt.	.12
14	110561	Resistor—carbon 15,000 ohms 2 watts.	.30
15-16	110564	Resistor—carbon 100,000 ohms 1/4 watt.	.12
17	110565	Resistor—carbon 22,000 ohms 1/4 watt.	.12
18	118805	Resistor—carbon 10,000 ohms 1/4 watt.	.12
19	110570	Resistor—carbon 2.2 meg. 1/4 watt.	.12
20	110580	Resistor—carbon 3.3 meg. 1/4 watt.	.12
21	110588	Lamp—6.3 volt .25 amps.	.36
22-23	110629	Condenser—paper (530 to 630 mmfd.)	.12
24	112978	Resistor—insulated, 470 ohms 1/4 watt.	.14
25	113095	Switch—D.P.D.T. (Radio-Phono)	.44
26A-26B	114141	Condenser—2 section trimmer	.40
27A-27B	114937	Speaker—dynamic 6 in.	4.95
28	U-115086	Resistor—wire wound 50 ohms 1/2 watt (10%)	.15
29	116275	Condenser—.1 mfd. 600 volt.	.25
30-31	116625	Condenser—.01 mfd. 600 volt.	.15
32	116640	Condenser—.2 mfd. 600 volt.	.35
33	116706	Condenser—.05 mfd. 600 volt.	.20
34-35	116819	Condenser—.02 mfd. 600 volt.	.15
36-37-38-39-40	116893	Condenser—.002 mfd. 600 volt.	.15
41	117024	Switch—push button.	2.80
42	117025	Tone control switch.	.60
43	117025	Volume control wiper switch—1 meg.	1.00
44A-44B	117035	Volume control wiper switch—1 meg.	1.00
45A-45B	117527	Condenser—gung	3.25
46A-46B	118421	Condenser—electrolytic 10-15 mfd. 450 volts	1.50
47	118431	Condenser—trimmer	.22
48	119024	Transformer—2nd I.F.	1.10
49A to 49C	119042	Transformer—1st I.F.	1.10
50A to 50L	119662	Range switch	1.45
51	119663	Condenser—push button trimmer (low)	.24
52	119663	Condenser—push button trimmer (Med.)	.24
53	119663	Condenser—push button trimmer (HI)	.24
54	119138	Coil—compensating	.25
55	119147	Transformer—2nd I.F.	1.10
56	55A-55B-55C	Coil—antenna	1.10
57	119149	Coil—oscillator	1.10
58	119349	Condenser—trimmer 3 section.	.45
59	119349	Transformer—power	4.20
60	119347	Transformer—output for U-115086 speaker	1.10
61	119347	Cone & Voice coil for U-115086 speaker	1.65
62	119347	Shield for loop antenna	.45
63	119347	Cabinet back and loop antenna complete	2.00
64	119347	01-6G1 & 01-6G1-Z	2.00
65	119347	Cabinet back and loop antenna complete	2.00
66	119347	01-6G4-1 & 01-6G4-1-Z	2.00
67	119347	Cabinet back and loop antenna complete	2.00
68	119347	01-6G4-2 & 01-6G4-2-Z	2.00
69	119347	Cabinet back and loop antenna complete	2.00
70	119347	01-6G4-3 & 01-6G4-3-Z	2.00
71	119347	Cabinet back and loop antenna complete	2.00
72	119347	01-6G4-4 & 01-6G4-4-Z	2.00
73	119347	Cabinet back and loop antenna complete	2.00
74	119347	01-6G4-5 & 01-6G4-5-Z	2.00
75	119347	Cabinet back and loop antenna complete	2.00
76	119347	01-6G4-Z & 01-6G4-Z-Z	2.00
77	119347	Cabinet back and loop antenna complete	2.00
78	119347	Condenser—.006 mfd. 600 volt.	.14


ELECTRICAL PARTS

Diagram Number	Part Number	Description	List Price
1	3500-6G1-6GZ	PUSH BUTTON TRIMMERS	
A&B	HI HI		
C&D	MED HI		
E&F	MED MED		
G&H	LOW MED		
I&J	LOW LOW		
K&L	LOW LOW		
1	3500-6G1-6GZ	Condenser—mica 260 mmfd.	\$0.20
2	3500-6G1-6GZ	Condenser—mica 51 mmfd.	.15
3	3500-6G1-6GZ	Condenser—mica .00351 mfd. 3%	.40
4	3500-6G1-6GZ	Resistor—wire wound 25 ohms 1/2 watt.	.15
5	3500-6G1-6GZ	Condenser—mica .002 mfd.	.16
6	3500-6G1-6GZ	Resistor—wire wound 220 ohms 1 watt.	.40
7	3500-6G1-6GZ	Condenser—electrolytic 10 mfd.—35 volts	.24
8	3500-6G1-6GZ	Resistor—carbon 220,000 ohms 1/4 watt.	.12
9	3500-6G1-6GZ	Resistor—carbon 470,000 ohms 1/4 watt.	.12
10	3500-6G1-6GZ	Resistor—carbon 15,000 ohms 2 watts.	.30
11	3500-6G1-6GZ	Resistor—carbon 100,000 ohms 1/4 watt.	.12
12	3500-6G1-6GZ	Resistor—carbon 22,000 ohms 1/4 watt.	.12
13	3500-6G1-6GZ	Resistor—carbon 10,000 ohms 1/4 watt.	.12
14	3500-6G1-6GZ	Resistor—carbon 2.2 meg. 1/4 watt.	.12
15	3500-6G1-6GZ	Resistor—carbon 3.3 meg. 1/4 watt.	.12
16	3500-6G1-6GZ	Lamp—6.3 volt .25 amps.	.36
17	3500-6G1-6GZ	Condenser—paper (530 to 630 mmfd.)	.12
18	3500-6G1-6GZ	Resistor—insulated, 470 ohms 1/4 watt.	.14
19	3500-6G1-6GZ	Switch—D.P.D.T. (Radio-Phono)	.44
20	3500-6G1-6GZ	Condenser—2 section trimmer	.40
21	3500-6G1-6GZ	Speaker—dynamic 6 in.	4.95
22	3500-6G1-6GZ	Resistor—wire wound 50 ohms 1/2 watt (10%)	.15
23	3500-6G1-6GZ	Condenser—.1 mfd. 600 volt.	.25
24	3500-6G1-6GZ	Condenser—.01 mfd. 600 volt.	.15
25	3500-6G1-6GZ	Condenser—.2 mfd. 600 volt.	.35
26	3500-6G1-6GZ	Condenser—.05 mfd. 600 volt.	.20
27	3500-6G1-6GZ	Condenser—.02 mfd. 600 volt.	.15
28	3500-6G1-6GZ	Switch—push button.	2.80
29	3500-6G1-6GZ	Tone control switch.	.60
30	3500-6G1-6GZ	Volume control wiper switch—1 meg.	1.00

NO.	SECTION	TRIMMER
A&B	HI	HI
C&D	MED	HI
E&F	MED	MED
G&H	LOW	MED
I&J	LOW	LOW
K&L	LOW	LOW

I.F. 455 KC.

TO USE EXTERNAL AERIAL, DISCONNECT BLUE WIRE FROM GROUND TERMINAL AND CONNECT AERIAL TO BLACK WIRE. LOOP MUST REMAIN CONNECTED AS SHOWN.

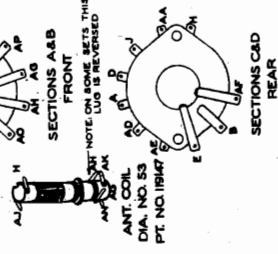

OSCILLATOR COIL
DIAGRAM NO. 54
PART NO. 11949

NOTE
TERMINALS OF COIL SHOWN IN
LETTERS TO CORRESPOND TO
SIMILARLY LETTERED TERMINALS
ON THE CIRCUIT DIAGRAM



CHASSIS 01-6G, 01-6G-Z
Alignment, Voltage, Socket
Trimmers


STEWART-WARNER CORP.

1. Connect the output meter across the voice coil or from the plate of the 6F6G output tube to ground through a .1 mfd. condenser. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the receiver chassis AND REMOVE THE BLUE WIRE FROM THE CHASSIS TERMINAL.
3. Turn the volume control to the maximum position and keep it in this position throughout the alignment procedure.
4. Set the pointer 2 1/8" from left end of brown dial plate with condenser gang in full mesh.
5. The loop must be connected as indicated in circuit diagram at all times, and must be in the same relative position it occupies when the set is in the cabinet.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Lug on Front Section of Gang Cond.	455 KC	Broadcast	Any Point Where It Does Not Affect the Signal	1-2	2nd I.F.	Adjust for Maximum Output. Then repeat Adjustment.
					3-4	1st I.F.	
200 MMFD. Mica Condenser	Black Loop Wire	1500 KC	Broadcast	1500 KC 2 7/8" from right end of dial plate	5	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mica Condenser	Black Loop Wire	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	6*	Broadcast Antenna	Adjust for Maximum Output.
200 MMFD. Mica Condenser	Black Loop Wire	600 KC	Broadcast	Tune to 600 KC Generator Signal	7	Broadcast Oscillator (Series Pad)	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.
400 OHM Carbon Resistor	Black Loop Wire	5 MC	Intermediate	5 MC 2-13/16" from right end of dial plate	8	Intermediate Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 4.1 MC. If Image does not appear, Realign at 5 MC, with Trimmer Screw farther out. Recheck Image.
400 OHM Carbon Resistor	Black Loop Wire	5 MC	Intermediate	Tune to 5 MC Generator Signal	9	Intermediate Antenna	Adjust for Maximum Output.
400 OHM Carbon Resistor	Black Loop Wire	16 MC	Foreign	16 MC 2-15/16" from right end of dial plate	10	Foreign Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 15.1 MC. If Image does not appear, Realign at 16 MC, with Trimmer Screw farther out. Recheck Image.
400 OHM Carbon Resistor	Black Loop Wire	16 MC	Foreign	Tune to 16 MC Generator Signal	11	Foreign Antenna	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.


*NOTE: Realign trimmer No. 6 after set is in cabinet by connecting blue wire to ground terminal, placing range switch in broadcast position, and adjusting for maximum output on a weak signal at approximately 1500 KC.

RADIO-PHONO SWITCH IN RADIO POSITION NO SIGNAL CONDITION

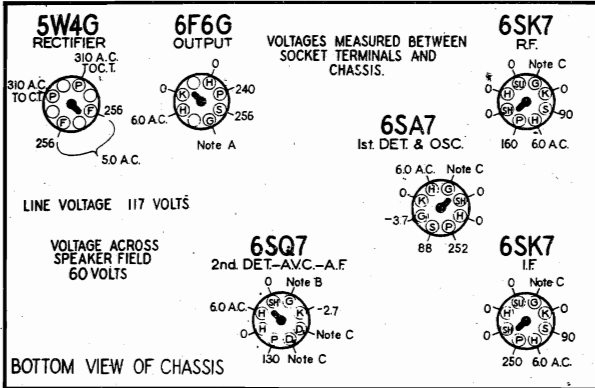

- NOTE A:** Bias on 6F6G output tube is —18 volts measured across resistors 29, 6 and 8.
NOTE B: Bias on 6SQ7 grid is —1.5 volts measured across resistor 6.
NOTE C: Bias on diode plates, 6SK7 I.F., 6SA7 DET., and 6SK7 R.F. is —3 volts measured across resistor 29.


Part Number	Description	List Price
119317	Call letter tabs and instruction sheets.	\$0.45
114955	Clamp—for dial cord.	.01
112745	Clip—coil mounting.	.01
117057	Cord—dial drive (supplied in 2 foot lengths).	.15
116948	Cord—pointer drive (supplied in 6 ft. lengths).	.18
117029	Drive drum and bushing.	.50
88348	Eyelet—for dial cord.	Per Dz. .05
119202	Escutcheon and dial (01-6G1 & 01-6G1-Z).	.90
119373	Escutcheon and dial (01-6G4 & 01-6G4-Z).	.90
119209	Escutcheon and P. B. Assembly (01-6G1 & 01-6G1-Z).	1.15
116953	Escutcheon and P. B. Assembly (01-6G4 & 01-6G4-Z).	.90
119210	Escutcheon for push buttons (01-6G1 & 01-6G1-Z).	.30
116998	Escutcheon for push buttons (01-6G4 & 01-6G4-Z).	.30
119167	Knob (01-6G1 & 01-6G1-Z).	.10
116773	Knob (01-6G4 & 01-6G4-Z).	.10

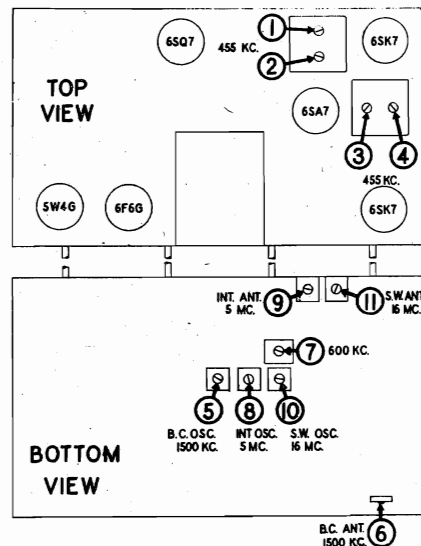

CABINET BACKS

119332	Cabinet Back only (01-6G1 & 01-6G1-Z).	\$1.80
119351	Cabinet Back only (01-6G4-1 & 01-6G4-1-Z).	.15
119348	Cabinet Back only (01-6G4-2 & 01-6G4-2-Z) (01-6G4-3 & 01-6G4-3-Z) (01-6G4-5 & 01-6G4-5-Z).	.15
119353	Cabinet Back only (01-6G4-4 & 01-6G4-4-Z).	.20
116952	Pin for push buttons.	.02
117195	Pointer.	.32
119211	Push button (01-6G1 & 01-6G1-Z).	.10
116998	Push button (01-6G4 & 01-6G4-Z).	.08
117019	Reflector—for pilot light.	.04
81145	Retaining ring—for drive shaft.	Per C. .50

STEWART-WARNER CORP. MODELS 01-6K1, Ch. 01-6K
01-6M9, Ch. 01-6M
Schematic, Voltage

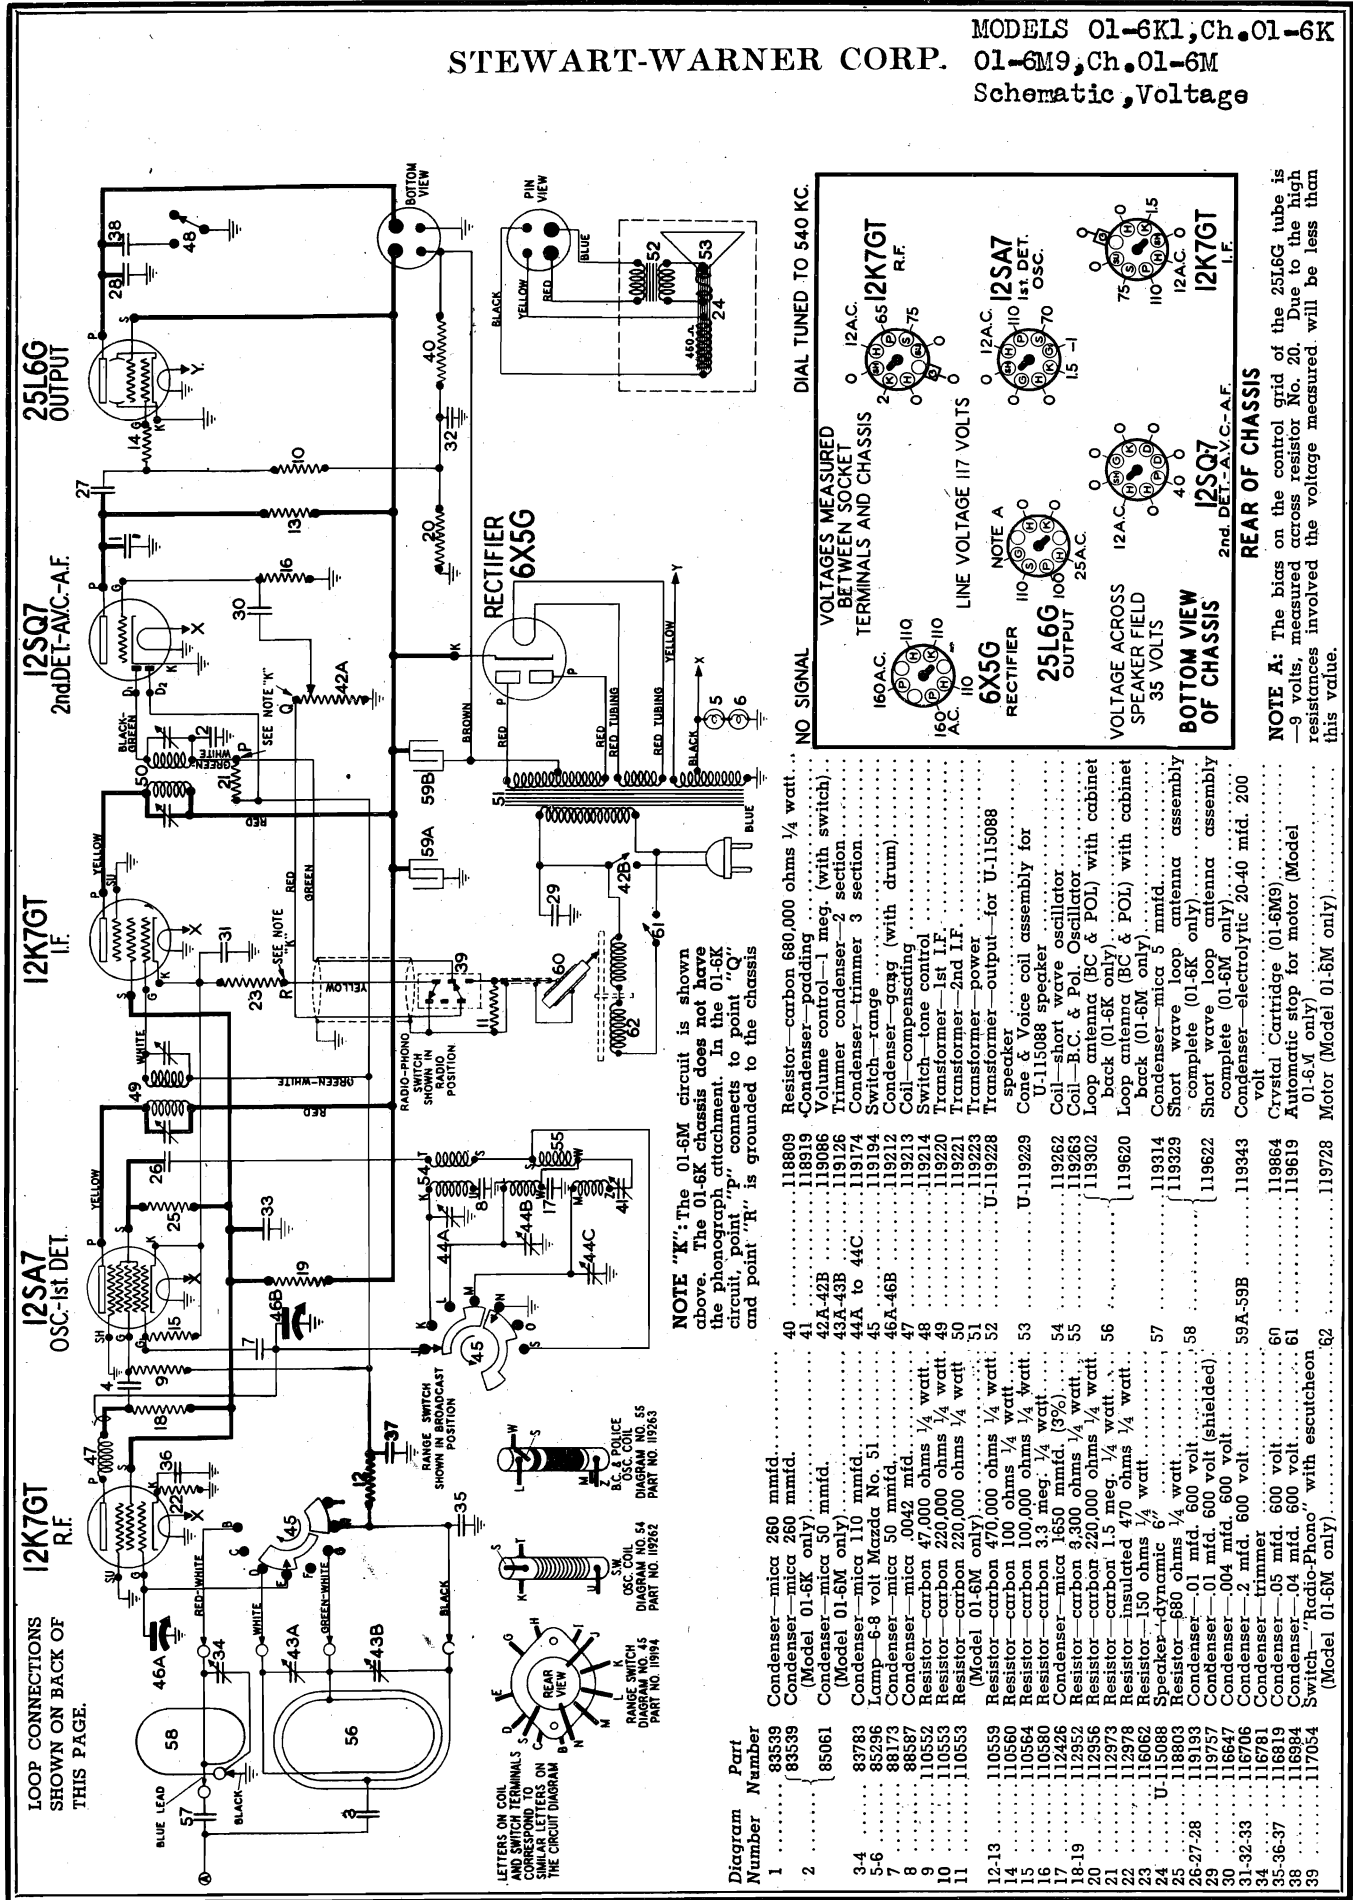





LOOP CONNECTIONS SHOWN ON BACK OF THIS PAGE.

12SA7 OSC. 1st DET.

12K7GT IF.

12SQ7 2nd DET.-A.V.C.-A.F.

25L6G OUTPUT

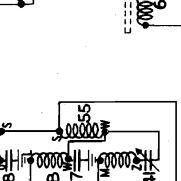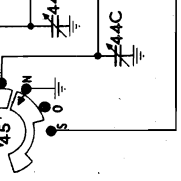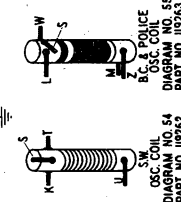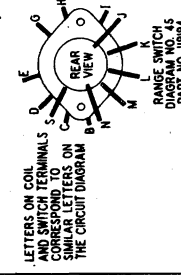


NOTE "K": The 01-6M circuit is shown above. The 01-6K chassis does not have the phonograph attachment. In the 01-6K circuit, point "p," connects to point "Q," and point "R," is grounded to the chassis

Diagram Number	Part
1	Condenser—mica 260 mmfd.
2	Condenser—mica 260 mmfd. (Model 01-6K only)
3-4	Condenser—mica 50 mmfd. (Model 01-6M only)
5-6	Condenser—mica 110 mmfd.
7	Lamp—6.8 volt Mazda No. 51
8	Condenser—mica 50 mmfd.
9	Condenser—mica .0042 mfd.
10	Resistor—carbon 47,000 ohms 1/4 watt.
11	Resistor—carbon 220,000 ohms 1/4 watt. (Model 01-6M only)
12-13	Resistor—carbon 470,000 ohms 1/4 watt.
14	Resistor—carbon 100 ohms 1/4 watt.
15	Resistor—carbon 100,000 ohms 1/4 watt.
16	Resistor—carbon 3.3 meg. 1/4 watt.
17	Resistor—carbon 1650 mmfd. (3%)
18-19	Resistor—carbon 6,300 ohms 1/4 watt.
20	Resistor—carbon 220,000 ohms 1/4 watt.
21	Resistor—carbon 1.5 meg. 1/4 watt.
22	Resistor—insulated 470 ohms 1/4 watt.
23	Resistor—150 ohms 1/4 watt.
24	Speaker—dynamic 6"
25	Resistor—860 ohms 1/4 watt.
26-27-28	Condenser—01 mfd. 600 volt.
29	Condenser—01 mfd. 600 volt (shielded).
30	Condenser—.004 mfd. 600 volt
31	Condenser—2 mfd. 600 volt
32-33	Condenser—trimmer
34	Condenser—.05 mfd. 600 volt.
35-36-37	Condenser—.04 mfd. 600 volt.
38	Switch—"Radio-Phono" with escutcheon (Model 01-6M only)
39	Motor (Model 01-6M only)
40	Resistor—carbon 680,000 ohms 1/4 watt.
41	Condenser—padding
42A-42B	Volume control—1 meg. (with switch)
43A-43B	Trimmer condenser—2 section
44A to 44C	Condenser—trimmer 3 section
45	Switch—range
46A-46B	Condenser—gang (with drum)
47	Coil—compensating
48	Switch—tone control
49	Transformer—1st I.F.
50	Transformer—2nd I.F.
51	Transformer—power
52	Transformer—output—for U-115088 speaker
53	Cone & Voice coil assembly for U-115088 speaker
54	Coil—short wave oscillator
55	Coil—B.C. & Pol Oscillator
56	Loop antenna (BC & POL) with cabinet back (01-6K only)
57	Loop antenna (BC & POL) with cabinet back (01-6M only)
58	Condenser—mica 5 mmfd.
59A-59B	Short wave loop antenna assembly complete (01-6K only)
60	Short wave loop antenna assembly complete (01-6M only)
61	Condenser—electrolytic 20-40 mfd. 200 volt
62	Crystal Cartridge (01-6M9) Automatic stop for motor (Model 01-6M only)

DIAL TUNED TO 540 KC.

NO SIGNAL

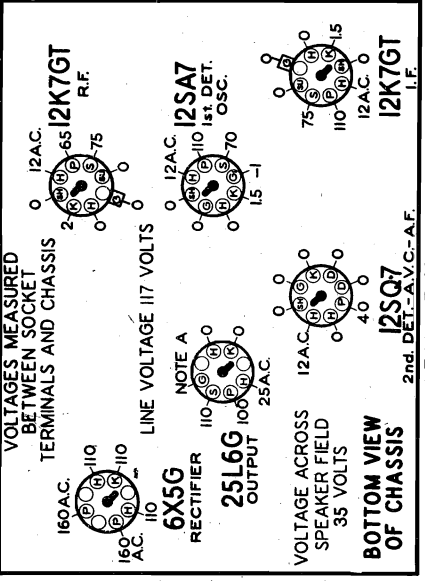

NOTE A: The bias on the control grid of the 25L6G tube is —9 volts, measured across resistor No. 20. Due to the high resistances involved the voltage measured will be less than this value.

CHASSIS 01-6K, 01-6M
Alignment, Trimmers, Socket

STEWART-WARNER CORP.

ALIGNMENT PROCEDURE FOR 01-6K AND 01-6M CHASSIS

1. Connect the output meter across the voice coil or between the plate of the 25L6G output tube and ground in series with a .1 mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
2. If a dummy antenna is used, connect the ground lead of the signal generator to the chassis. The information in the table below assumes a dummy antenna will be used when aligning this receiver.
If no dummy is to be used omit the connection from generator ground to the chassis. Then connect an unshielded lead to the output terminal of the signal generator and place the lead near the loops of the receiver, and make no connection to the antenna terminal on the rear of the cabinet.
3. Turn the volume control to the maximum clockwise position and keep it in this position throughout the entire alignment procedure.
4. With the gang condenser in full mesh, set the pointer so that its position is horizontal.


Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output To Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Position	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Grid of 12K7GT R.F. Tube	455 KC	Broadcast	Any Point Where It Does Not Affect Signal	1-2	2nd I.F.	Adjust for maximum output. Then repeat adjustment.
					3-4	1st I.F.	
200 MMFD. Mica Condenser	Antenna Terminal	1500 KC	Broadcast	1500 KC	5	Broadcast Oscillator (Shunt)	Adjust for maximum output.
200 MMFD. Mica Condenser	Antenna Terminal	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	10	Broadcast Antenna	Place broadcast loop antenna in same position relative to chassis as it occupies when in cabinet. Adjust for maximum output.
200 MMFD. Mica Condenser	Antenna Terminal	600 KC	Broadcast	Tune to 600 KC Generator Signal	6	Broadcast Oscillator (Series)	Adjust for maximum output. Try to increase output by detuning trimmer and returning receiver dial until maximum output is obtained.
400 OHM Carbon Resistor	Antenna Terminal	5 MC	Intermediate	5 MC	7	Intermediate Oscillator (Shunt)	Adjust for maximum output. Check to see if proper peak is obtained by tuning in image at approx. 4.1 MC. If image does not appear realign at 5 MC with trimmer screw farther out. Recheck image.
400 OHM Carbon Resistor	Antenna Terminal	16 MC	Foreign	16 MC	8	Foreign Oscillator (Shunt)	Adjust for maximum output. Check to see if proper peak is obtained by tuning in image at approx. 15.1 MC. If image does not appear realign at 16 MC with trimmer screw farther out. Recheck image.

Before making the following adjustments, install the chassis and both loops in the cabinet

400 OHM Carbon Resistor	Antenna Terminal	5 MC	Intermediate	Tune to 5 MC Generator Signal	9	Intermediate Antenna	Adjust for maximum output. Try to increase output by detuning trimmer and returning receiver dial until maximum output is obtained.
200 MMFD. Mica Condenser	Antenna Terminal	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	10	Broadcast Antenna	Adjust for maximum output. Try to increase output by detuning trimmer and returning receiver dial until maximum output is obtained.
400 OHM Carbon Resistor	Antenna Terminal	16 MC	Foreign	Tune to 16 MC Generator Signal	11	Foreign Antenna	Adjust for maximum output. Try to increase output by detuning trimmer and returning receiver dial until maximum output is obtained.




DIAL AND MISCELLANEOUS PARTS

Part No.	Description	List Price
119304	Cabinet back (back only) Model 01-6K	\$.20
119621	Cabinet back (back only) Model 01-6M	.22
117117	Cable—for connecting motor (01-6M only)	.38
114955	Clamp—for dial cord	.01
113019	Clip—dial scale retaining	.01
112745	Clip—coil mounting	.01
116948	Cord—dial drive (supplied in 6 ft. lengths)	.18
119618	Phono Pick-up arm (Model 01-6M only)	5.85
119274	Dial scale	.26
119208	Escutcheon—dial	.80
117806	Idler wheel with rubber rim (01-6M9)	.60
119167	Knob	.10
84571	Needle cup (Model 01-6M)	.10
110496	Plug—4 prong—for speaker	.12
116983	Pointer	.16
81145	Retaining ring—for drive shaft	Per C. 50
117807	Rubber rim for idler wheel (01-6M9)	.12
83624	Screw—self tapping 8 x 1/4	.01
112874	Screw—No. 10 x 1 1/2 chassis mtg.	.01
119218	Screw for mounting escutcheon	.02
119204	Shaft—tuning	.10
85427	Socket—octal base (standard)	.15
110501	Socket—4 prong (for speaker)	.16
111008	Socket—dial lamp (grounded side)	.12
113122	Socket—dial lamp (ungrounded side)	.12
111090	Spacer—steel	.02
114968	Spring—dial cord tension	.03
119729	Turntable (Model 01-6M)	1.50
117816	Turntable shaft (01-6M9)	.35
110829	Washer—flat steel, for mtg. chassis	.01
116530	Washer (paper) for back of knobs	.005

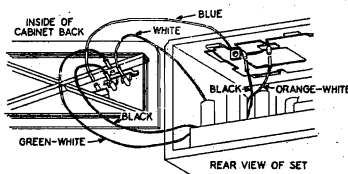

NOTE

If this receiver is to be used with an outside aerial, it is recommended when aligning the receiver that the signal generator be connected to the antenna terminal through the dummy antenna shown in the table above. If the set is to be used without an external aerial, it is preferable to make adjustments on Trimmers No. 6, 9, 10 and 11 with no connection to the antenna terminal, and with an unshielded wire from the signal generator output placed near the receiver loop. When making the initial adjustment of Trimmers No. 10 and No. 6 the loops should be placed in their approximately correct position with respect to the chassis. Otherwise the adjustment of Trimmer No. 6 may be incorrect.

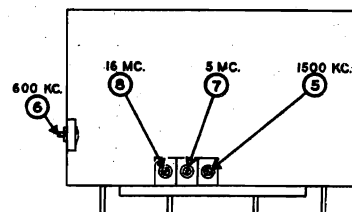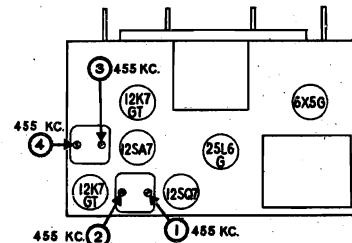

Schematic, Voltage

STEWART-WARNER CORP.

MODELS 01-8A1 to 01-8A9
Chassis 01-8A


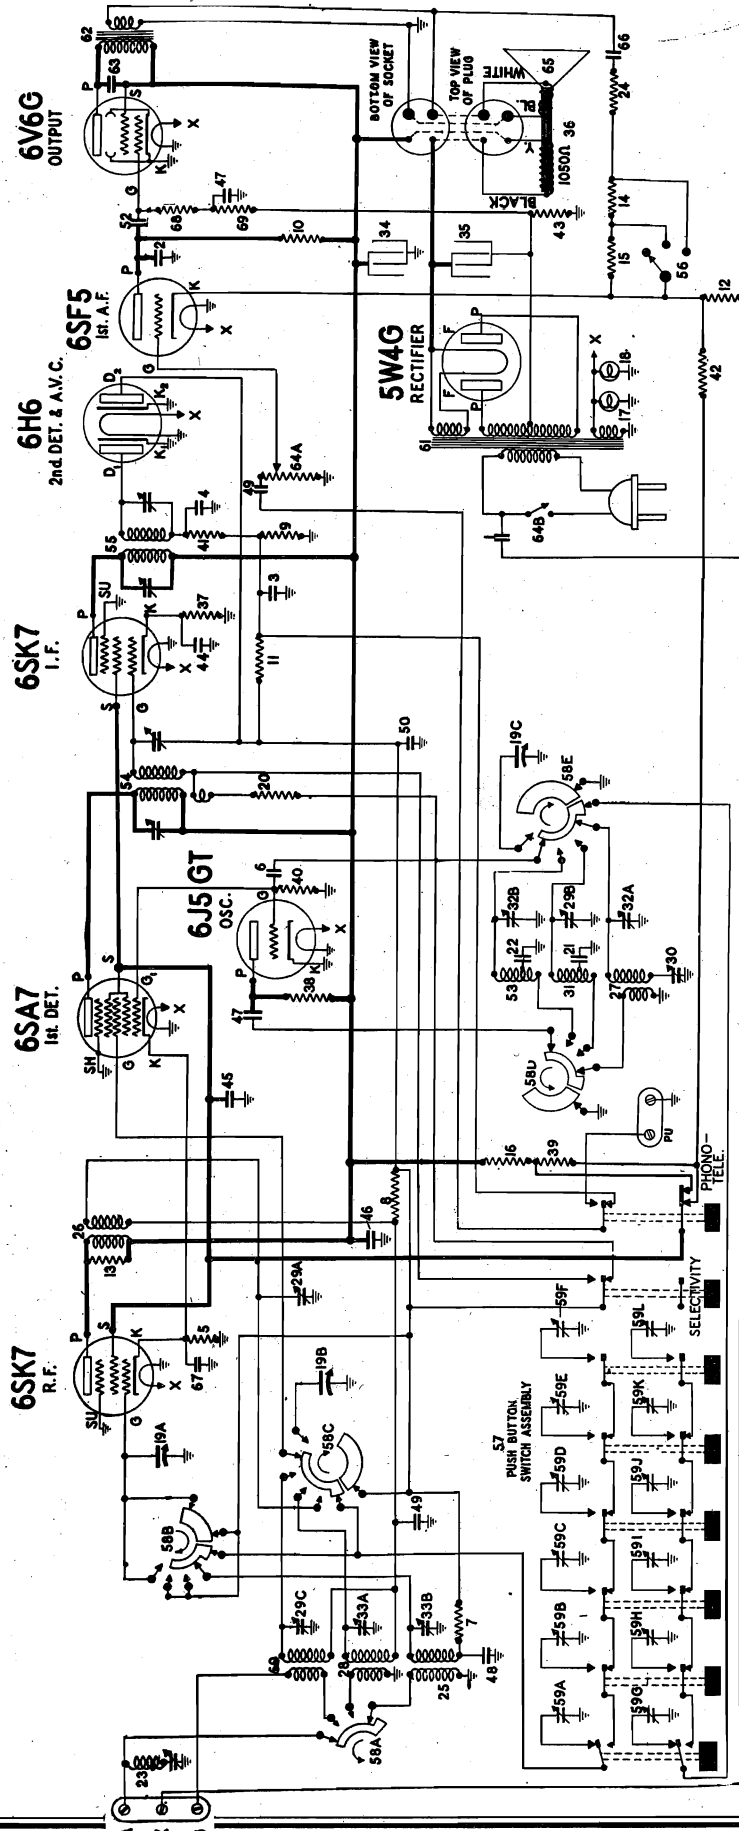


Diagram Number	Part Number	Description
1-2	83539	Condenser—mica 260 mmfd.
3-4	83783	Condenser—mica 110 mmfd.
5	84979	Resistor—250 ohms 1/2 watt
6	85081	Condenser—mica 51 mmfd.
7-8-9-10	110583	Resistor—carbon 220,000 ohms 1/4 watt
11	110584	Resistor—carbon 1 megohm 1/4 watt
12	110556	Resistor—330 ohms 1/4 watt
13-14	110573	Resistor—carbon 2,200 ohms 1/4 watt
15	110587	Resistor—3,900 ohms 1/4 watt
16	110595	Resistor—carbon 12,000 ohms 3 watts
17-18	110629	Lamp—6.3 volt—25 amps
19A-19B-19C	110936	Condenser—variable gang
20	110975	Resistor—wire wound 33 ohms 1/2 watt
21	112426	Condenser—mica 1650 mmfd.
22	112427	Condenser—mica 4050 mmfd.
23	112796	Coil—wave trap with trimmer
24	112978	Resistor—470 ohms 1/4 watt
25	113285	Coil—R.F. (B.C.)
26	113286	Coil—R.F. (B.C.)
27	113287	Coil—Oscillator (B.C.)
28	113288	Coil—Antenna (Police)
29A-29B-29C	113320	Condenser—trimmer—3 section
30	113346	Condenser—padding
31	113412	Coil—oscillator (Police)
32A-32B	114937	Condenser—trimmer—2 section
33A-33B	114937	Condenser—trimmer—2 section
34-35	114972	Condenser—electrolytic—16 mfd. 450 volt
36	U-115071	Speaker—12" electro dynamic
37	116015	Resistor—400 ohms 1/2 watt wire wound
38-39	116055	Resistor—carbon 22,000 ohms 1/4 watt
40-41	116055	Resistor—carbon 22,000 ohms 1/4 watt insulated
42	116086	Resistor—18,000 ohms 1 watt
43	116094	Resistor—220 ohms 2 watts wire wound
44-45-46	116625	Condenser—01 mfd. 600 volt
47	116640	Condenser—01 mfd. 600 volt
48-49-50	116819	Condenser—02 mfd. 600 volt
51-52	116893	Condenser—05 mfd. 600 volt
53	117330	Coil—short wave oscillator
54	117616	Transformer—1st I.F.
55	117618	Transformer—2nd I.F.
56	117678	Switch—tone control
57	117694	Push button switch
58A to 58E	117787	Range switch
59A to 59L	117788	Condenser—trimmer gang
60	117819	Coil—short wave antenna
61	117830	Transformer—power
62	118144	Transformer—output
63	118194	Transformer—006 mfd. 600 volt
64A-64B	118198	Volume control 1 meg. (with switch)
65	U-118202	Cone & Voice coil for U-115071 speaker
66-67	118206	Condenser—25 mfd. 600 volt
68-69	110553	Resistor—carbon 220,000 ohms 1/4 watt

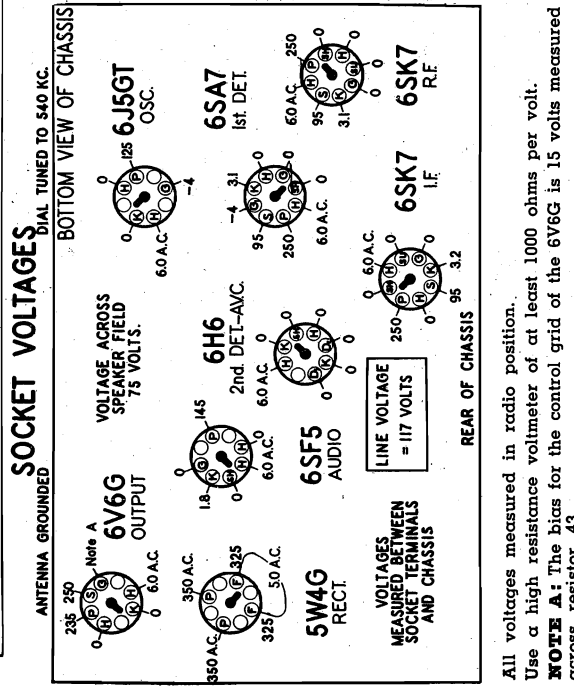

CHASSIS 01-8A
CHASSIS 01-8B
Alignment, Socket
Trimmers

STEWART-WARNER CORP.

ALIGNMENT PROCEDURE FOR 01-8B CHASSIS

1. Connect the output meter across the voice coil or from the plate of the 6V6G output tube to ground through a .1 mfd. condenser. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the receiver chassis and remove the connector from between the "G" and "X" terminals.
3. Turn the volume control to the maximum position and keep it in this position throughout the alignment procedure.
4. Push in the "Selectivity" button and keep it pushed in. Check the pointer to see that it is correctly set.
5. The loop must be connected as indicated in circuit diagram at all times.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator to Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Lug on Middle Section of Gang Cond.	455 KC	Broadcast	Any Point Where It Does Not Affect the Signal	1-2	2nd LF.	Adjust for Maximum Output. Then repeat Adjustment.
200 MMFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	1500 KC	3-4	1st LF.	Adjust for Maximum Output.
200 MMFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	5	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mica Condenser	"A" Terminal	600 KC	Broadcast	Tune to 600 KC Generator Signal	6	Broadcast Detector	Adjust for Maximum Output.
400 OHM Carbon Resistor	"A" Terminal	5 MC	Intermediate	Tune to 5 MC Generator Signal	7	Broadcast Antenna	Adjust for Maximum Output.
400 OHM Carbon Resistor	"A" Terminal	5 MC	Intermediate	Tune to 5 MC Generator Signal	8	Broadcast Oscillator (Series)	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 4.1 MC. If Image is Present, Turn Trimmer Screw further out. Recheck Image.
400 OHM Carbon Resistor	"A" Terminal	16 MC	Foreign	Tune to 16 MC Generator Signal	9	Intermediate Antenna	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 15.1 MC. If Image is Present, Turn Trimmer Screw further out. Recheck Image.
400 OHM Carbon Resistor	"A" Terminal	16 MC	Foreign	Tune to 16 MC Generator Signal	10	Foreign Oscillator	Adjust for Maximum Output. Try to Increase Output by Turning Trimmer and Receiving Receiver Dial until Maximum Output is Obtained.
400 OHM Carbon Resistor	"A" Terminal	16 MC	Foreign	Tune to 16 MC Generator Signal	11	Foreign Antenna	Adjust for Maximum Output. Try to Increase Output by Turning Trimmer and Receiving Receiver Dial until Maximum Output is Obtained.
400 OHM Carbon Resistor	"A" Terminal	16 MC	Foreign	Tune to 16 MC Generator Signal	12	Foreign Antenna	Adjust for Maximum Output. Try to Increase Output by Turning Trimmer and Receiving Receiver Dial until Maximum Output is Obtained.

NOTE: Realign trimmer No. 7 after set is in cabinet by connecting "Y" and "G" together, placing range switch in broadcast position, and adjusting for maximum output on a weak signal at approximately 1500 KC.


ALIGNMENT PROCEDURE FOR 01-8A CHASSIS

1. Connect the output meter across the voice coil or from the plate of the 6V6G output tube to ground through a .1 mfd. condenser. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the receiver chassis and remove the connector from between the "A" and "X" terminals.
3. Turn the volume control to the maximum position and keep it in this position throughout the alignment procedure.
4. Push in the "Selectivity" button and keep it pushed in. Check the pointer to see that it is correctly set.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator to Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Lug on Middle Section of Gang Cond.	455 KC	Broadcast	Any Point Where It Does Not Affect the Signal	1-2	2nd LF.	Adjust for Maximum Output. Then repeat Adjustment.
200 MMFD. Mica Condenser	"A" Terminal	455 KC	Broadcast	Any Point Where It Does Not Affect the Signal	3-4	1st LF.	Adjust for Minimum Output. Using a Strong Generator Signal.
200 MMFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	1500 KC	5	Wave Trap	Adjust for Maximum Output.
200 MMFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	6	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mica Condenser	"A" Terminal	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	7	Broadcast Detector	Adjust for Maximum Output.
200 MMFD. Mica Condenser	"A" Terminal	600 KC	Broadcast	Tune to 600 KC Generator Signal	8	Broadcast Antenna	Adjust for Maximum Output. Try to Increase Output by Turning Trimmer and Receiving Receiver Dial until Maximum Output is Obtained.
400 OHM Carbon Resistor	"A" Terminal	6 MC	Intermediate	Tune to 6 MC Generator Signal	9	Intermediate Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 5.1 MC. If Image is Present, Turn Trimmer Screw further out. Recheck Image.
400 OHM Carbon Resistor	"A" Terminal	6 MC	Intermediate	Tune to 6 MC Generator Signal	10	Intermediate Antenna	Adjust for Maximum Output.
400 OHM Carbon Resistor	"A" Terminal	20 MC	Foreign	Tune to 20 MC Generator Signal	11	Foreign Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 19.1 MC. If Image is Present, Turn Trimmer Screw further out. Recheck Image.
400 OHM Carbon Resistor	"A" Terminal	20 MC	Foreign	Tune to 20 MC Generator Signal	12	Foreign Antenna	Adjust for Maximum Output. Try to Increase Output by Turning Trimmer and Receiving Receiver Dial until Maximum Output is Obtained.
400 OHM Carbon Resistor	"A" Terminal	20 MC	Foreign	Tune to 20 MC Generator Signal	13	Foreign Antenna	Adjust for Maximum Output. Try to Increase Output by Turning Trimmer and Receiving Receiver Dial until Maximum Output is Obtained.

MISCELLANEOUS PARTS

Part Number	Description	List Price
114022	Bracket & Pulley Assembly—right hand	\$0.34
114023	Bracket & Pulley Assembly—left hand	.44
117012	Coil taps and instructions	.44
114855	Clamp for dial scale	.01
117455	Clamp for dial cord	.01
117456	Clamp for dial cord	.01
117457	Clamp for dial cord	.01
117458	Clamp for dial cord	.01
117459	Clamp for dial cord	.01
117460	Clamp for dial cord	.01
117461	Clamp for dial cord	.01
117462	Clamp for dial cord	.01
117463	Clamp for dial cord	.01
117464	Clamp for dial cord	.01
117465	Clamp for dial cord	.01
117466	Clamp for dial cord	.01
117467	Clamp for dial cord	.01
117468	Clamp for dial cord	.01
117469	Clamp for dial cord	.01
117470	Clamp for dial cord	.01
117471	Clamp for dial cord	.01
117472	Clamp for dial cord	.01
117473	Clamp for dial cord	.01
117474	Clamp for dial cord	.01
117475	Clamp for dial cord	.01
117476	Clamp for dial cord	.01
117477	Clamp for dial cord	.01
117478	Clamp for dial cord	.01
117479	Clamp for dial cord	.01
117480	Clamp for dial cord	.01
117481	Clamp for dial cord	.01
117482	Clamp for dial cord	.01
117483	Clamp for dial cord	.01
117484	Clamp for dial cord	.01
117485	Clamp for dial cord	.01
117486	Clamp for dial cord	.01
117487	Clamp for dial cord	.01
117488	Clamp for dial cord	.01
117489	Clamp for dial cord	.01
117490	Clamp for dial cord	.01
117491	Clamp for dial cord	.01
117492	Clamp for dial cord	.01
117493	Clamp for dial cord	.01
117494	Clamp for dial cord	.01
117495	Clamp for dial cord	.01
117496	Clamp for dial cord	.01
117497	Clamp for dial cord	.01
117498	Clamp for dial cord	.01
117499	Clamp for dial cord	.01
117500	Clamp for dial cord	.01
117501	Clamp for dial cord	.01
117502	Clamp for dial cord	.01
117503	Clamp for dial cord	.01
117504	Clamp for dial cord	.01
117505	Clamp for dial cord	.01
117506	Clamp for dial cord	.01
117507	Clamp for dial cord	.01
117508	Clamp for dial cord	.01
117509	Clamp for dial cord	.01
117510	Clamp for dial cord	.01
117511	Clamp for dial cord	.01
117512	Clamp for dial cord	.01
117513	Clamp for dial cord	.01
117514	Clamp for dial cord	.01
117515	Clamp for dial cord	.01
117516	Clamp for dial cord	.01
117517	Clamp for dial cord	.01
117518	Clamp for dial cord	.01
117519	Clamp for dial cord	.01
117520	Clamp for dial cord	.01
117521	Clamp for dial cord	.01
117522	Clamp for dial cord	.01
117523	Clamp for dial cord	.01
117524	Clamp for dial cord	.01
117525	Clamp for dial cord	.01
117526	Clamp for dial cord	.01
117527	Clamp for dial cord	.01
117528	Clamp for dial cord	.01
117529	Clamp for dial cord	.01
117530	Clamp for dial cord	.01
117531	Clamp for dial cord	.01
117532	Clamp for dial cord	.01
117533	Clamp for dial cord	.01
117534	Clamp for dial cord	.01
117535	Clamp for dial cord	.01
117536	Clamp for dial cord	.01
117537	Clamp for dial cord	.01
117538	Clamp for dial cord	.01
117539	Clamp for dial cord	.01
117540	Clamp for dial cord	.01
117541	Clamp for dial cord	.01
117542	Clamp for dial cord	.01
117543	Clamp for dial cord	.01
117544	Clamp for dial cord	.01
117545	Clamp for dial cord	.01
117546	Clamp for dial cord	.01
117547	Clamp for dial cord	.01
117548	Clamp for dial cord	.01
117549	Clamp for dial cord	.01
117550	Clamp for dial cord	.01
117551	Clamp for dial cord	.01
117552	Clamp for dial cord	.01
117553	Clamp for dial cord	.01
117554	Clamp for dial cord	.01
117555	Clamp for dial cord	.01
117556	Clamp for dial cord	.01
117557	Clamp for dial cord	.01
117558	Clamp for dial cord	.01
117559	Clamp for dial cord	.01
117560	Clamp for dial cord	.01
117561	Clamp for dial cord	.01
117562	Clamp for dial cord	.01
117563	Clamp for dial cord	.01
117564	Clamp for dial cord	.01
117565	Clamp for dial cord	.01
117566	Clamp for dial cord	.01
117567	Clamp for dial cord	.01
117568	Clamp for dial cord	.01
117569	Clamp for dial cord	.01
117570	Clamp for dial cord	.01
117571	Clamp for dial cord	.01
117572	Clamp for dial cord	.01
117573	Clamp for dial cord	.01
117574	Clamp for dial cord	.01
117575	Clamp for dial cord	.01
117576	Clamp for dial cord	.01
117577	Clamp for dial cord	.01
117578	Clamp for dial cord	.01
117579	Clamp for dial cord	.01
117580	Clamp for dial cord	.01
117581	Clamp for dial cord	.01
117582	Clamp for dial cord	.01
117583	Clamp for dial cord	.01
117584	Clamp for dial cord	.01
117585	Clamp for dial cord	.01
117586	Clamp for dial cord	.01
117587	Clamp for dial cord	.01
117588	Clamp for dial cord	.01
117589	Clamp for dial cord	.01
117590	Clamp for dial cord	.01
117591	Clamp for dial cord	.01
117592	Clamp for dial cord	.01
117593	Clamp for dial cord	.01
117594	Clamp for dial cord	.01
117595	Clamp for dial cord	.01
117596	Clamp for dial cord	.01
117597	Clamp for dial cord	.01
117598	Clamp for dial cord	.01
117599	Clamp for dial cord	.01
117600	Clamp for dial cord	.01
117601	Clamp for dial cord	.01
117602	Clamp for dial cord	.01
117603	Clamp for dial cord	.01
117604	Clamp for dial cord	.01
117605	Clamp for dial cord	.01
117606	Clamp for dial cord	.01
117607	Clamp for dial cord	.01
117608	Clamp for dial cord	.01
117609	Clamp for dial cord	.01
117610	Clamp for dial cord	.01
117611	Clamp for dial cord	.01
117612	Clamp for dial cord	.01
117613	Clamp for dial cord	.01
117614	Clamp for dial cord	.01
117615	Clamp for dial cord	.01
117616	Clamp for dial cord	.01
117617	Clamp for dial cord	.01
117618	Clamp for dial cord	.01
117619	Clamp for dial cord	.01
117620	Clamp for dial cord	.01
117621	Clamp for dial cord	.01
117622	Clamp for dial cord	.01
117623	Clamp for dial cord	.01
117624	Clamp for dial cord	.01
117625	Clamp for dial cord	.01
117626	Clamp for dial cord	.01
117627	Clamp for dial cord	.01
117628	Clamp for dial cord	.01
117629	Clamp for dial cord	.01
117630	Clamp for dial cord	.01
117631	Clamp for dial cord	.01
117632	Clamp for dial cord	.01
117633	Clamp for dial cord	.01
117634	Clamp for dial cord	.01
117635	Clamp for dial cord	.01
117636	Clamp for dial cord	.01
117637	Clamp for dial cord	.01
117638	Clamp for dial cord	.01
117639	Clamp for dial cord	.01
117640	Clamp for dial cord	.01
117641	Clamp for dial cord	.01
117642	Clamp for dial cord	.01
117643	Clamp for dial cord	.01
117644	Clamp for dial cord	.01
117645	Clamp for dial cord	.01
117646	Clamp for dial cord	.01
117647	Clamp for dial cord	.01
117648	Clamp for dial cord	.01
117649	Clamp for dial cord	.01
117650	Clamp for dial cord	.01
117651	Clamp for dial cord	.01
117652	Clamp for dial cord	.01
117653	Clamp for dial cord	.01
117654	Clamp for dial cord	.01
117655	Clamp for dial cord	.01
117656	Clamp for dial cord	.01
117657	Clamp for dial cord	.01
117658	Clamp for dial cord	.01
117659	Clamp for dial cord	.01
117660	Clamp for dial cord	.01
117661	Clamp for dial cord	.01
117662	Clamp for dial cord	.01
117663	Clamp for dial cord	.01
117664	Clamp for dial cord	.01
117665	Clamp for dial cord	.01
117666	Clamp for dial cord	.01
117667	Clamp for dial cord	.01
117668	Clamp for dial cord	.01
117669	Clamp for dial cord	.01
117670	Clamp for dial cord	.01
117671	Clamp for dial cord	.01
117672	Clamp for dial cord	.01
117673	Clamp for dial cord	.01
117674	Clamp for dial cord	.01
117675	Clamp for dial cord	.01
117676	Clamp for dial cord	.01
117677	Clamp for dial cord	.01
117678	Clamp for dial cord	.01
117679	Clamp for dial cord	.01
117680	Clamp for dial cord	.01
117681	Clamp for dial cord	.01
117682	Clamp for dial cord	.01
117683	Clamp for dial cord	.01
117684	Clamp for dial cord	.01
117685	Clamp for dial cord	.01
117686	Clamp for dial cord	.01
117687	Clamp for dial cord	.01
117688	Clamp for dial cord	.01
117689	Clamp for dial cord	.01
117690	Clamp for dial cord	.01
117691	Clamp for dial cord	.01
117692	Clamp for dial cord	.01
117693	Clamp for dial cord	.01
117694	Clamp for dial cord	.01
117695	Clamp for dial cord	.01
117696	Clamp for dial cord	.01
117697	Clamp for dial cord	.01
117698	Clamp for dial cord	.01
117699	Clamp for dial cord	.01
117700	Clamp for dial cord	.01

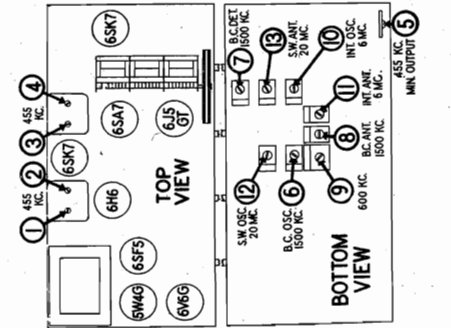

MODELS 01-8C7, 01-8C7-Z


Alignment, Socket, Trimmers
Drive Cord Data

STEWART-WARNER CORP.

1. Connect the output meter across the voice coil or from the plate of the 6F6G output tube to ground through a .1 mfd. condenser. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the receiver chassis and REMOVE THE BLUE WIRE FROM THE CENTER SCREW ON ANTENNA TERMINAL STRIP.
3. Turn the volume control to the maximum position and keep it in this position throughout the alignment procedure.
4. Check the pointer to see that it is correctly set to 540 KC with gang in full mesh.
5. The loop must be connected as indicated in circuit diagram at all times.
6. With some signal generators it may be found that reducing the input to a useable value is impossible using the dummy antennas recommended below. In such cases the signal generator may be disconnected entirely from the set and the R. F. lead of the signal generator placed in the vicinity of the loop. On the S. W. position the shield wire (black) may be disconnected from set and input fed to center terminal.


Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Lug on Rear Section of Gang Cond.	455 KC	Broadcast	Any Point Where It Does Not Affect the Signal	1-2	2nd I.F.	Adjust for Maximum Output. Then repeat Adjustment.
					3-4	1st I.F.	
200 MMFD. Mica Condenser	Center Screw on Antenna Terminal Strip	1500 KC	Broadcast	1500 KC	5	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mica Condenser	Center Screw on Antenna Terminal Strip	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	6*	Broadcast Antenna	Adjust for Maximum Output.
200 MMFD. Mica Condenser	Center Screw on Antenna Terminal Strip	600 KC	Broadcast	Tune to 600 KC Generator Signal	7	Broadcast Oscillator (Series)	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.
400 OHM Carbon Resistor	Center Screw on Antenna Terminal Strip	16 MC	Foreign	16 MC	8	Foreign Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 15.1 MC. If Image does not appear, Realign at 16 MC, with Trimmer Screw farther out. Recheck Image.
400 OHM Carbon Resistor	Center Screw on Antenna Terminal Strip	16 MC	Foreign	Tune to 16 MC Generator Signal	9	Foreign Antenna	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.

*NOTE: Realign trimmer No. 6 after set is in cabinet by connecting blue wire to center screw on antenna terminal strip, placing range switch in broadcast position, and adjusting for maximum output on a weak signal at approximately 1500 KC.

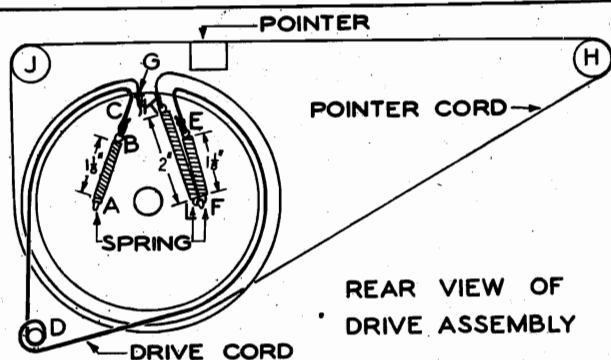

- TO REPLACE THE TUNING DRIVE CORD**
1. Make a loop in one end of the dial drive cord (Part No. 117057) and fasten a spring (Part No. 113177) to this loop.
 2. Fasten the spring to tab A and pass the cord through hole C in the rear of the drum.
 3. Make one and one half turns of the cord about tuning shaft D.
 4. Continue the cord around the drum through the other hole in the rear of the drum and form a loop at E. Fasten a spring (Part No. 113177) to the loop and adjust the loop to give the approximate dimension indicated.
 5. Fasten the spring to tab F.


- TO REPLACE THE POINTER DRIVE CORD**
1. Fasten an eyelet (Part No. 88348) at a point one-half inch from one end of the cord (Part No. 116948) and pass the cord through hole G in the front of the drum.
 2. Continue the cord around the drum and around pulley H.
 3. Go from pulley H to pulley J and around the drum through hole K in the front of the drum.
 4. Fasten a spring (Part No. 113177) at this point by forming a loop in the cord.
 5. Adjust the loop so that the spring is extended to 2 inches.
 6. Fasten the spring to tab L.

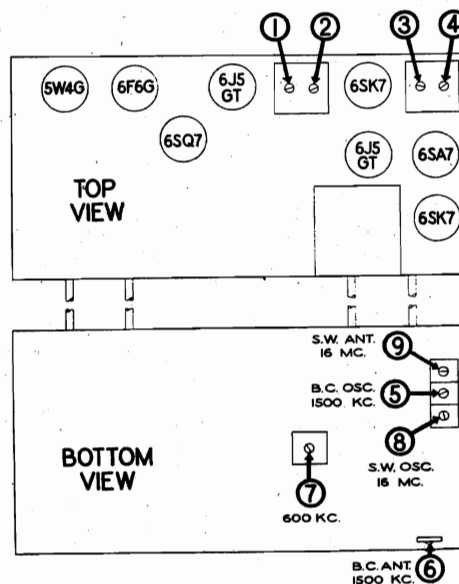

7. The condenser should be one quarter meshed (or at an angle of 45°) when the drum is in the indicated position.
8. Cement the pointer to the pointer drive cord so that it reads 540 KC with the gang in full mesh.

STEWART-WARNER CORP.

MODELS 01-9A7, Ch. 01-9A; 01-9A7-Z, Ch. 01-9A-Z
Schematic, Voltage

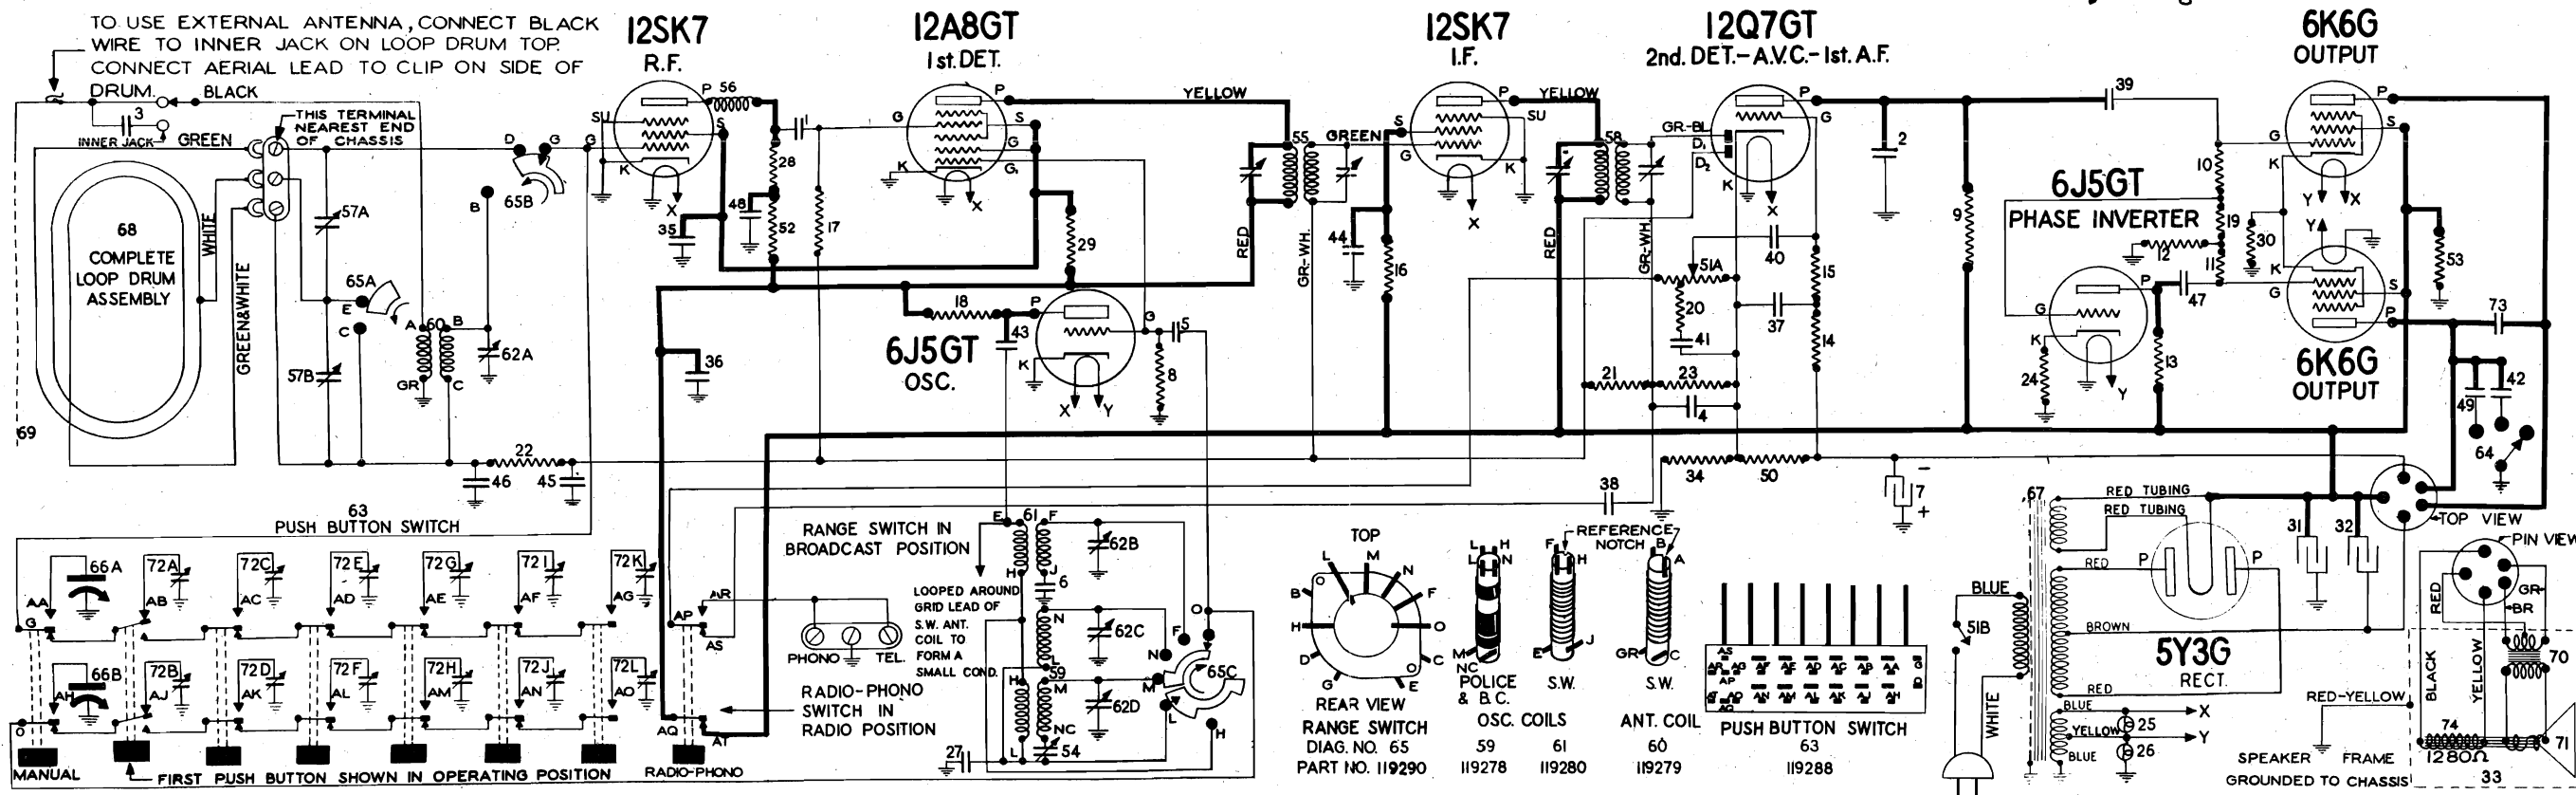


PUSH BUTTON TRIMMER RANGES

TRIMMER CONDENSERS	01-9A RANGE	01-9A-Z RANGE
72L & 72K	540 KC. to 1000 KC.	540 KC. to 1000 KC.
72J & 72I	540 KC. to 1000 KC.	540 KC. to 1000 KC.
72H & 72G	540 KC. to 1000 KC.	750 KC. to 1375 KC.
72F & 72E	750 KC. to 1375 KC.	750 KC. to 1375 KC.
72D & 72C	750 KC. to 1375 KC.	980 KC. to 1550 KC.
72B & 72A	980 KC. to 1550 KC.	980 KC. to 1550 KC.

VOLUME ON FULL WITH NO SIGNAL DIAL TUNED TO 540 KC.

Diagram Number	Part Number	Description	List Price	Diagram Number	Part Number	Description	List Price
1-2	83539	Condenser—mica 260 mmfd.	\$0.20	50	117395	Resistor—20 ohms 1 watt.	.16
3-4	83783	Condenser—mica 110 mmfd.	.20	51A-51B	118669	Volume control—1 meg. (with switch)	1.40
5	85061	Condenser—mica 51 mmfd.	.15	52	118805	Resistor—carbon 10,000 ohms 1 watt.	.12
6	88587	Condenser—mica .0042 mfd.	.35	53	118808	Resistor—27,000 ohms 3 watts.	.22
7	110377	Condenser—electrolytic 10 mfd. 35 volt.	.80	54	118919	Condenser—padding	.40
8	110552	Resistor—carbon 47,000 ohms 1/4 watt.	.12	55	119042	Transformer—1st I.F.	1.10
9 to 13	110553	Resistor—carbon 220,000 ohms 1/4 watt.	.12	56	119138	Coil—compensating	.25
14-15	110554	Resistor—carbon 1 megohm 1/4 watt.	.12	57A-57B	119275	Condenser—trimmer (for loop) 2 section.	.30
16-17	110564	Resistor—carbon 100,000 ohms 1/4 watt.	.12	58	119277	Transformer—2nd I.F.	1.10
18	110565	Resistor—carbon 22,000 ohms 1/4 watt.	.12	59	119278	Coil—B.C. & Police Oscillator.	.60
19-20	110566	Resistor—carbon 33,000 ohms 1/4 watt.	.12	60	119279	Coil—short wave antenna.	.62
21	110580	Resistor—carbon 3.3 meg. 1/4 watt.	.12	61	119280	Coil—short wave oscillator.	.62
22-23	110584	Resistor—carbon 330,000 ohms 1/4 watt.	.12	62A to 62D	119283	Condenser—trimmer (4 section).	.60
24	110573	Resistor—carbon 2,200 ohms 1/4 watt.	.12	63	119288	Switch—push button	2.50
25-26	110629	Lamp—6.3 volt .25 amps.	.15	64	119289	Switch—tone	.60
27	112426	Condenser—mica 1650 mmfd. (3%)	.30	65A to 65C	119290	Switch—range	1.00
28	112952	Resistor—carbon 3,300 ohms 1/4 watt.	.10	66A-66B	119291	Condenser—variable tuning	2.90
29	112998	Resistor—insulated 22,000 ohms 2 watts.	.20	67	119381	Transformer—power	5.40
30	114334	Resistor—wire wound 360 ohms 2 watts (10%)	.20	68	119391	Loop Antenna—complete	3.20
31-32	114972	Condenser—electrolytic 16 mfd. 450 volt.	.78	69	119392	Loop Antenna—shield	1.00
33	R-115089	Speaker—dynamic (12")	10.00	70	R-119512	Transformer—output for R-115089 speaker.	1.55
34	116479	Resistor—wire wound 33 ohms 3 watts.	.20	71	R-119513	Cone & voice coil for R-115089 speaker.	2.20
35 to 37	116625	Condenser—.1 mfd. 600 volt.	.25	72A	119662	Condenser—P. B. Trimmer (Low) 540 to 1000 KC.	.24
38 to 43	116640	Condenser—.01 mfd. 600 volt.	.15	72L	119663	Condenser—P. B. Trimmer (Med.) 750 to 1375 KC.	.24
44 to 48	116819	Condenser—.05 mfd. 600 volt.	.20		119664	Condenser—P. B. Trimmer (Hi) 980 to 1550 KC.	.24
49	116984	Condenser—.04 mfd. 600 volt.	.20	73	117022	Condenser—.002 mfd. 600 volt.	.15
	117022	Condenser—.002 mfd. 600 volt.	.15	74	R-119767	Field Coil—for R-115089 speaker.	2.50

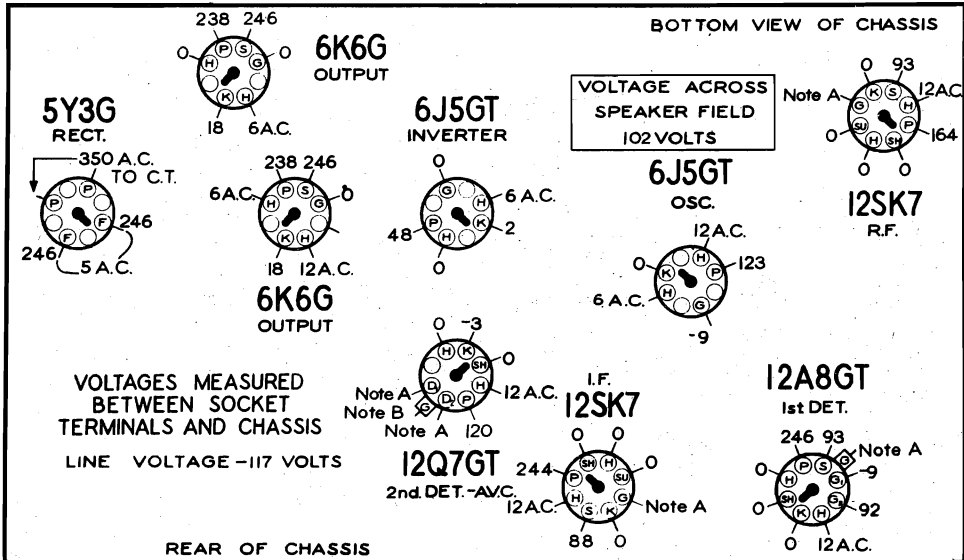

USE A HIGH RESISTANCE VOLTMETER OF AT LEAST 1000 OHMS PER VOLT.
NOTE A: The bias on the 12SK7 R.F., 12A8GT 1st Det., 12SK7 I.F., and the diode plates of the 12Q7GT 2nd Det. is -3 volts measured across resistor No. 34.
NOTE B: Bias on the grid of the 12Q7GT 1st Audio is -1.8 volts measured across resistor No. 50.

CHASSIS 01-9A, 01-9A-Z
Alignment, Trimmers, Socket, Loop, Drive Cord



STEWART-WARNER CORP.

ALIGNMENT PROCEDURE FOR 01-9A & 01-9A-Z CHASSIS

1. Connect the output meter across the voice coil or from plate to plate of the 6K6G output tubes through a .1 mfd. condenser. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the receiver chassis and change the black wire from the outer to the inner clip on top of the loop drum.
3. Turn the volume control to the maximum position and keep it in this position throughout the alignment procedure.
4. Push in the Manual button and keep it pushed in.
5. The loop must be connected as indicated in circuit diagram at all times.
6. With some signal generators, it may be found that the signal cannot be reduced to a useable value using the dummy antennas recommended below. In such cases the signal generator may be disconnected entirely from the set and the R. F. lead of the signal generator placed in the vicinity of the loop. On the Short Wave position the shield wire (black) may be disconnected from its jack and the output of the signal generator connected to the black wire through a 400 ohm resistor.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD. Condenser	Lug on Front Section of Gang Cond.	455 KC	Broadcast	Any Point Where It Does Not Affect the Signal	1-2 3-4	2nd I.F. 1st I.F.	Adjust for Maximum Output. Then repeat Adjustment.
400 OHM Carbon Resistor	Clip on Side of Loop Drum	5 MC	Intermediate	5 MC	5	Intermediate Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 4.1 MC. If Image does not appear, Realign at 5 MC, with Trimmer Screw farther out. Recheck Image.
400 OHM Carbon Resistor	Clip on Side of Loop Drum	5 MC	Intermediate	Tune to 5 MC Generator Signal	6*	Intermediate Antenna	*Adjust for Maximum Output.
200 MMFD. Mica Condenser	Clip on Side of Loop Drum	1500 KC	Broadcast	1500 KC	7	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mica Condenser	Clip on Side of Loop Drum	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	8*	Broadcast Antenna	*Adjust for Maximum Output.
200 MMFD. Mica Condenser	Clip on Side of Loop Drum	600 KC	Broadcast	Tune to 600 KC Generator Signal	9	Broadcast Oscillator (Series Padder)	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.
400 OHM Carbon Resistor	Clip on Side of Loop Drum	16 MC	Foreign	16 MC	10	Foreign Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 15.1 MC. If Image does not appear, Realign at 16 MC, with Trimmer Screw farther out. Recheck Image.
400 OHM Carbon Resistor	Clip on Side of Loop Drum	16 MC	Foreign	Tune to 16 MC Generator Signal	11	Foreign Antenna	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.

*Realign trimmer No. 6 on 5 MC, then trimmer No. 8 on 1500 KC, after set is in cabinet.

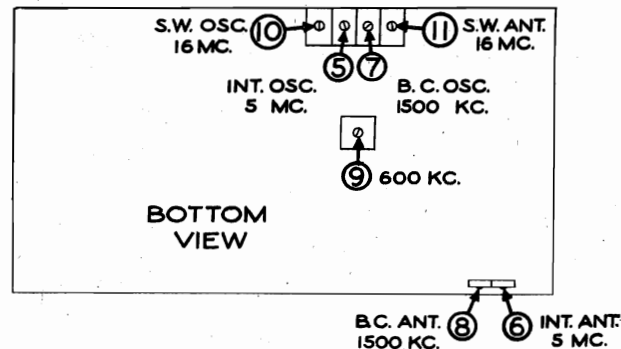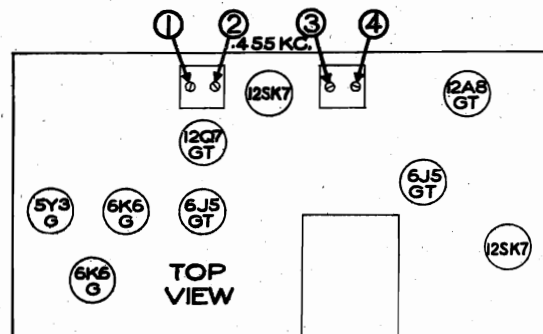

NOTES FOR 01-9A and 01-9A-Z CHASSIS

AUDIO HOWLS

For proper operation this chassis must be allowed to float on the rubber cushions on which it is mounted. If this is not done the set may howl when receiving strong signals. Loosen the four bolts holding down the chassis and remove the two wood strips which support the chassis during shipment. Make sure that neither the control knobs, their shafts nor any part of the dial mechanism touches the front panel or the set may still howl.

The speaker frame must be grounded to the chassis by the red and yellow wire provided. Reaction between the speaker and loop may otherwise result.


TO SET POINTER

The pointer should be set to 540 K.C. on the dial scale when the tuning condenser is in full mesh. Cement pointer to cord at this point and allow to dry before moving.

TO SET DRUM ON CONDENSER SHAFT.

With the tuning condenser plates in the horizontal (half mesh) position, the holes in the drum should be at the top. To change position of drum, loosen set screws.

REPLACING THE DRIVE CORDS

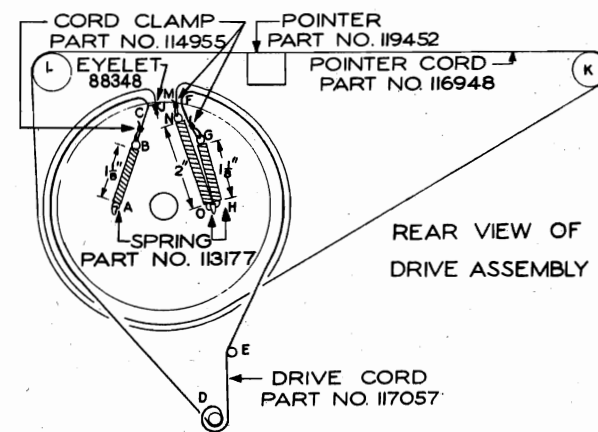

TO REPLACE DIAL DRIVE CORD

1. Make a one inch loop in end of cord (Part No. 117057) using a dial cord clip (Part No. 114955).
2. Fasten a tension spring (Part No. 113177) to tab A and one end of the cord to the spring at point B.
3. Pass the other end of the dial cord through hole C on the rear of the drum.
4. Make one and one half turns of the cord about tuning shaft D.
5. Continue the cord clockwise by E to hole F in the rear of the drum.
6. The cord length should be adjusted so that the springs will be stretched to approximately the dimension indicated. Fasten a tension spring (Part No. 113177) to the cord by forming a new loop at G and then fastening spring to tab H.


TO REPLACE THE POINTER DRIVE CORD

1. Fasten an eyelet (Part No. 88348) at a point one-half inch from one end of the cord (Part No. 116948).
2. Pass cord through hole J at the front of the drum.
3. Continue cord counter-clockwise around drum and around pulley K.
4. From pulley K go over pulley L and around front of drum through hole M.
5. The length of cord should be adjusted until the spring is stretched to approximately the length indicated. Fasten a spring with a loop and clip as indicated, to the cord.
6. Fasten spring to tab O.

MISCELLANEOUS PARTS


Part Number	Description	List Price
119376	Call Tabs and Instructions	\$0.38
114955	Clamp for dial cord	.01
110140	Clip-grid	.01
112745	Clip-coil mounting	.01
116948	Cord-pointer drive (supplied in 6 ft. lengths)	.18
117057	Cord-drive (supplied in 2 ft. lengths)	.15
111973	Cushion-rubber rest for back of chassis	.06
119330	Dial scale	.35
113402	Drum-dial cord drive	.56
119215	Escutcheon-dial	1.30
119216	Escutcheon & P. B. Assembly	1.25
119217	Escutcheon for push buttons	.40
88348	Eyelet-for dial cord	Per Dz. .05
119167	Knob	.10
119323	Pilot Light assembly (single wire)	.18
119325	Pilot Light assembly (double wire)	.20
117758	Pin-for push button	.02
119452	Pointer	.14
119211	Push button	.10
81145	Retaining ring-for drive shaft	Per C .50
113463	Rubber bushing-chassis Mtg.	.03
83624	Screw-self tapping 8 x 1/4	.01
85040	Screw-No. 6 Hex. Hd.	Per C .35
119218	Screw-Escutcheon Mtg.	.02
85827	Set Screw-8-32 Square Head	.02
85427	Socket-octal base (standard)	.15
114876	Socket-octal base (special)	.15
117704	Socket-for speaker 5 prong	.13
111090	Spacer-steel	.02
112874	Screw-No. 10 x 1 1/2 chassis Mtg.	.01
113177	Spring-dial cord tension	.09
117458	Spring for push button	.05
84412	Terminal strip-phonograph	.03
118606	Tuning shaft	.18
110829	Washer-flat steel, for mtg. chassis	.01
111456	Washer-spring washer for tuning shaft	Per C .50
116530	Washer (paper) for back of knobs	.005

LOOP CONNECTIONS

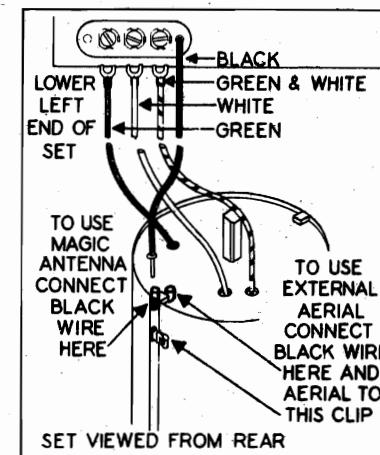

Schematic, Voltage


STEWART-WARNER CORP. MODELS 01-8B1 to 01-8B9 inc. Chassis 01-8B

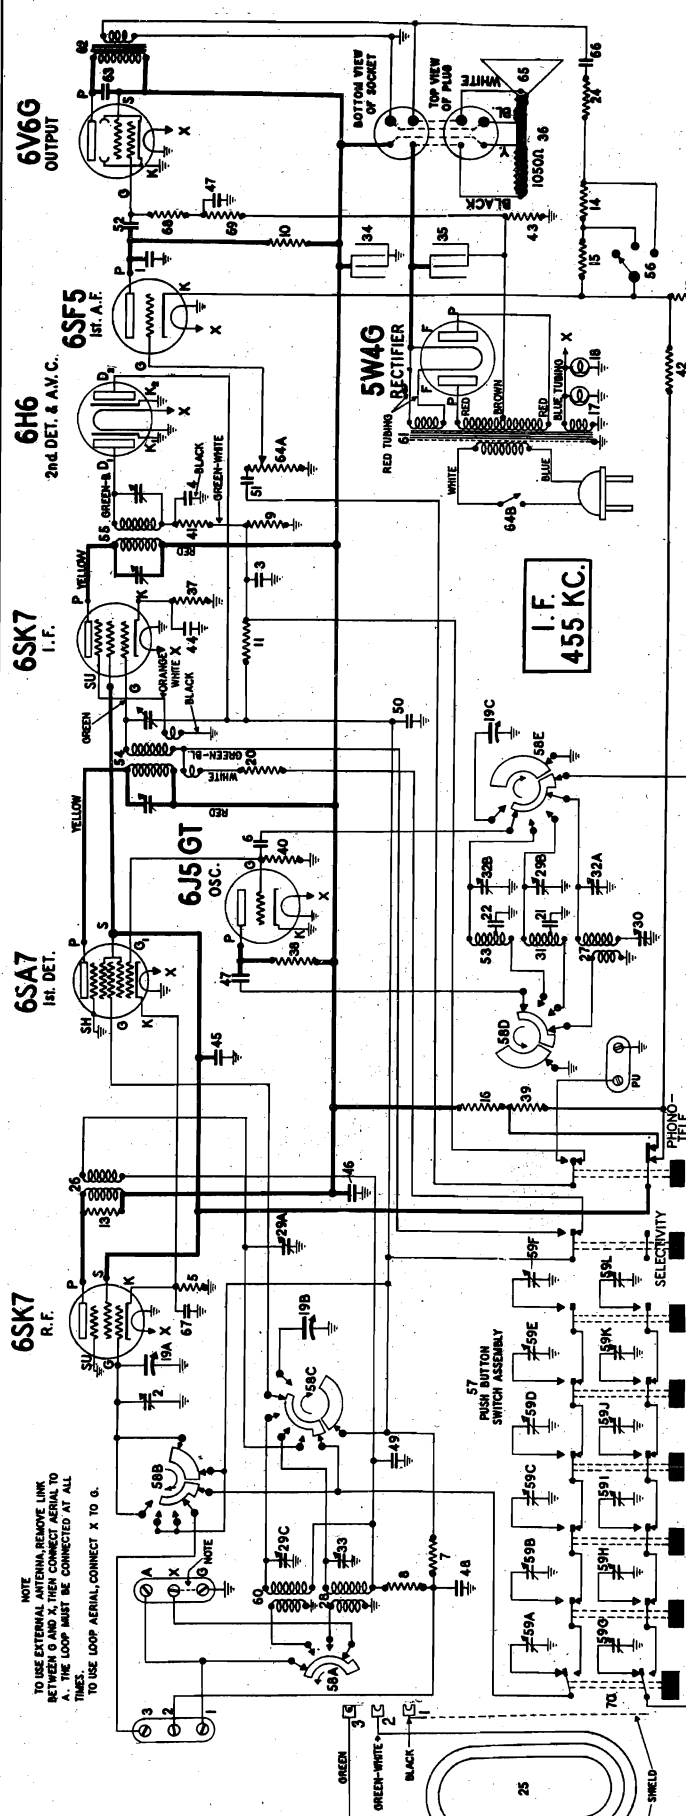


FOR ALIGNMENT SEE INDEX

Diagram Number	Part Number	Description
1	83539	Condenser—mica 260 mmd.
2	111043	Condenser—trimmer (single section)
3-4	83783	Condenser—mica 110 mmd.
5	84979	Resistor—250 ohms 1/2 watt W.W.
6	85061	Condenser—mica 51 mmd.
7-8-9-10	110553	Resistor—carbon 220,000 ohms 1/4 watt
11	110554	Resistor—carbon 1 megohm 1/4 watt
12	110556	Resistor—carbon 330 ohms 1/4 watt
13	110557	Resistor—carbon 4,700 ohms 1/4 watt
14	110586	Resistor—carbon 2,200 ohms 1/4 watt
15	110587	Resistor—carbon 3,900 ohms 1/4 watt
16	110585	Resistor—carbon 12,000 ohms 3 watts
17-18	110629	Lamp—6.3 volt—25 amps
19A-19B-19C	110743	Condenser—variable gang
20	110975	Resistor—wire wound 33 ohms 1/2 watt 58A to 58E
21	111043	Trimmer condenser (single section)
22	111043	Condenser—mica 00113 mmd.
23	1118679	Resistor—mica 4050 mmd. (3%)
24	112427	Resistor—insulated 470 ohms 1/4 watt
25	112978	Loop antenna complete
26	118596	Coil—broadcast R.F.
27	118586	Coil—broadcast oscillator
28	118589	Coil—police antenna
29A-29B-29C	113320	Condenser—trimmer—3 section
30	113346	Condenser—padding
31	118877	Coil—police oscillator
32A-32B	114937	Trimmer condenser 2 section
33	111043	Trimmer condenser (single section)
34-35	114972	Condenser—electrolytic 16 mfd. 450 volt
36	U-115071	Speaker—12" dynamic
		Condenser—mica 260 mmd.
		Condenser—trimmer (single section)
		Condenser—mica 110 mmd.
		Resistor—250 ohms 1/2 watt W.W.
		Condenser—mica 51 mmd.
		Resistor—carbon 220,000 ohms 1/4 watt
		Resistor—carbon 1 megohm 1/4 watt
		Resistor—carbon 330 ohms 1/4 watt
		Resistor—carbon 4,700 ohms 1/4 watt
		Resistor—carbon 2,200 ohms 1/4 watt
		Resistor—carbon 3,900 ohms 1/4 watt
		Resistor—carbon 12,000 ohms 3 watts
		Lamp—6.3 volt—25 amps
		Condenser—variable gang
		Resistor—wire wound 33 ohms 1/2 watt 58A to 58E
		Trimmer condenser (single section)
		Condenser—mica 00113 mmd.
		Resistor—mica 4050 mmd. (3%)
		Resistor—insulated 470 ohms 1/4 watt
		Loop antenna complete
		Coil—broadcast R.F.
		Coil—broadcast oscillator
		Coil—police antenna
		Condenser—trimmer—3 section
		Condenser—padding
		Coil—police oscillator
		Trimmer condenser 2 section
		Trimmer condenser (single section)
		Condenser—electrolytic 16 mfd. 450 volt
		Speaker—12" dynamic
		Resistor—wire wound—400 ohms 1/2 watt
		Resistor—carbon 22,000 ohms 1/2 watt
		Resistor—insulated 47,000 ohms 1/2 watt
		Resistor—carbon 18,000 ohms 3/4 watt
		Resistor—220 ohms 2 watts W.W.
		Condenser—1 mfd. 600 volt
		Condenser—.01 mfd. 600 volt
		Condenser—.05 mfd. 600 volt
		Coil—short wave oscillator
		Transformer—1st I.F.
		Transformer—2nd I.F.
		Switch—tone control
		Push button switch
		Range switch
		Condenser—trimmer gang
		Coil—short wave antenna
		Transformer—power
		Transformer—output
		Condenser—.006 mfd. 600 volts
		Volume control with switch
		Cone & Voice coil for U-115071 speaker
		Condenser—.25 mfd. 600 volts
		Resistor—220,000 ohms 1/4 watt
		Shield for loop antenna (also see No. 118636)
		Transformer—1st I.F.
		Transformer—2nd I.F.
		Loop antenna complete (with shield)

SOCKET VOLTAGES

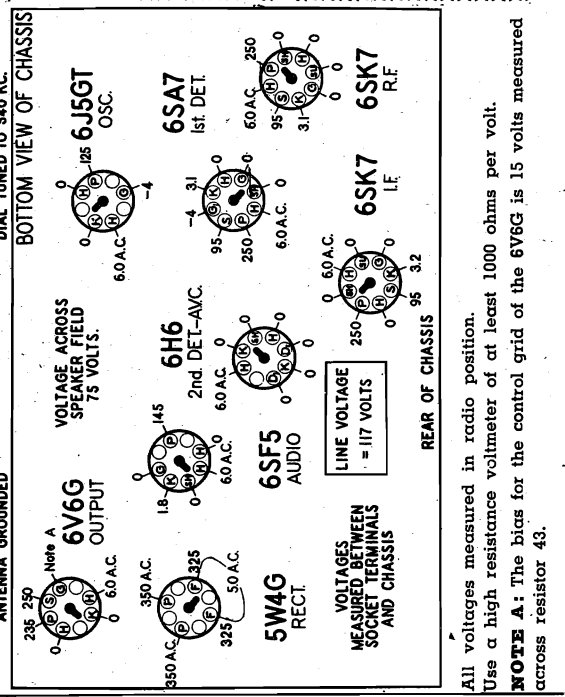

MODELS 02-4A1 to 02-4A9
 Chassis 02-4A inc. STEWART-WARNER CORP.
 Schematic, Voltage

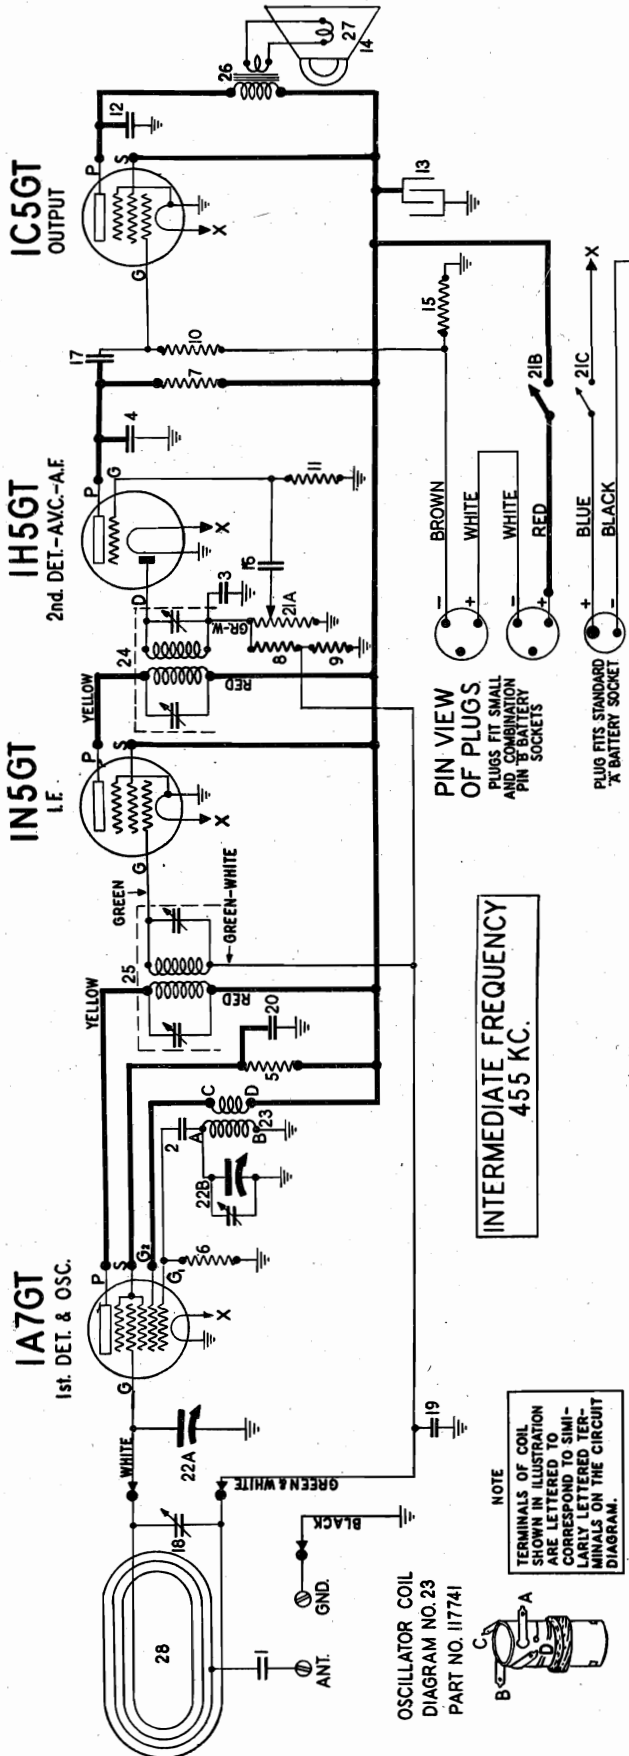


ELECTRICAL PARTS

Diagram Number	Part Number	Description
1	83539	Condenser—mica, 260 mmfd.
2-3-4	85061	Condenser—mica, 51 mmfd.
5	110522	Resistor—carbon, 47,000 ohms, 1/4 watt
6	110553	Resistor—carbon, 220,000 ohms, 1/4 watt
7	110554	Resistor—carbon, 1 megohm, 1/4 watt
8-9-10	110570	Resistor—carbon, 2.2 meg., 1/4 watt
11	110580	Resistor—carbon, 3.3 meg., 1/4 watt
12	113035	Condenser—Ceramic Tube, .006 mid., 117715
13	113118	Condenser—Electrolytic—8 / mid., 150 volt
14	U-115068	Speaker—P.M. Dynamic (4 in.)
15	116061	Resistor—800 ohm, 1/4 watt
16-17	116640	Condenser—.01 mid., 600 volt
18	116781	Trimmer Condenser
19-20	116819	Condenser—.05 mid., 600 volt
21A-21B-21C	117706	Volume Control—1 meg., with switch.
22A-22B	117707	Condenser—Tuning
23	117741	Coil—Oscillator
24	117742	Transformer—2nd I.F.
25	117743	Transformer—1st I.F.
26	117782	Transformer—Output
27	U-118280	Cone & Voice Coil Assembly for U-115068 Speaker
28	117914	Loop Antenna

MISCELLANEOUS PARTS

Part Number	Description
117770	Battery retaining Block
117927	Button—"Off" Marker
116399	Cable—for Batteries
117836	Cabinet & Back
112745	Clip—Coil Mounting
113178	Cord—Dial (Supplied in 4 ft. lengths)
117715	Drive Drum and pointer assembly
117800	Dial scale
117894	Knob—volume
117895	Knob—tuning
118732	Loop terminal strip with trimmer & contacts
116397	Plug—2 prong Male
116398	Plug—3 prong Male
116488	Nut—8-32 Wing Nut
81145	Retaining Ring—for drive shaft
85040	Screw—No. 6 Hex. Hd.
113191	Screw—Special No. 8-32 x 1 1/2
117716	Shield—Tube
116690	Socket (octal base) small
111981	Spring—for dial cord tension
117709	Tuning Shaft



SOCKET VOLTAGES
 DIAL TUNED TO 540 KC.

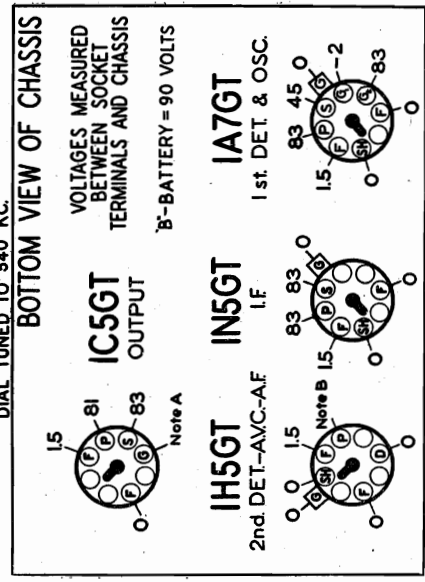

Schematic, Voltage

STEWART-WARNER CORP. Chassis 03-5A

inc.

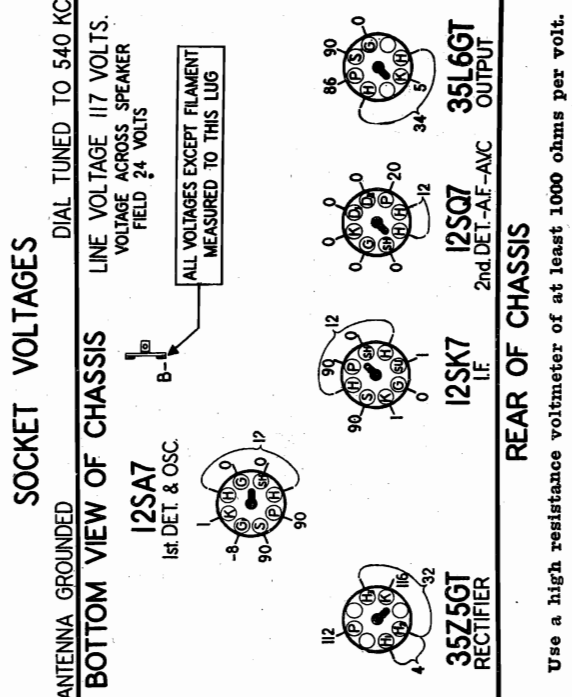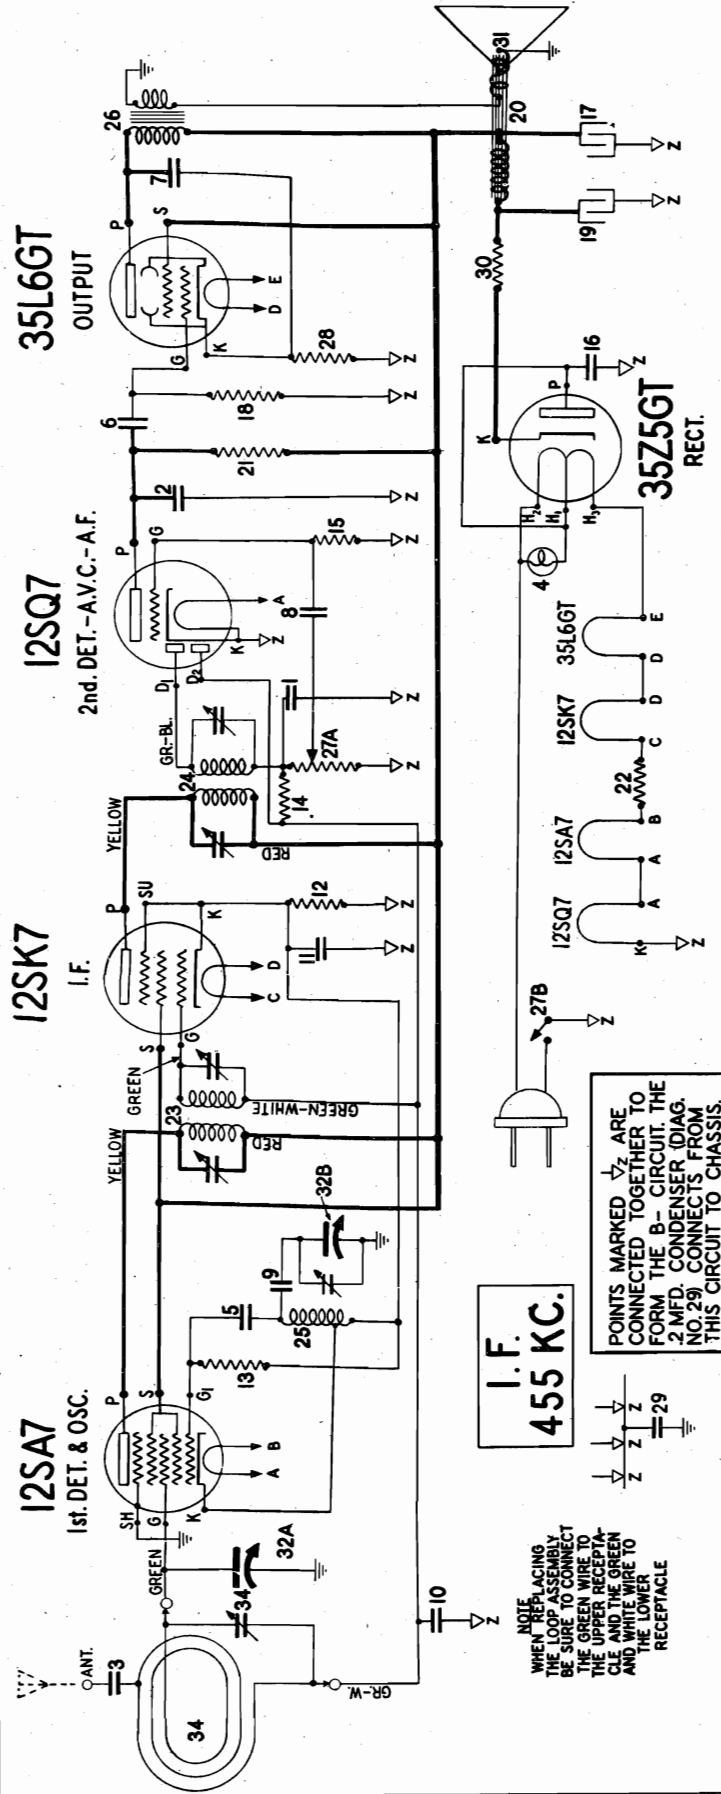

SOCKET VOLTAGES

ANTENNA GROUNDED

DIAL TUNED TO 540 KC.

LINE VOLTAGE 117 VOLTS.

VOLTAGE ACROSS SPEAKER FIELD 24 VOLTS

ALL VOLTAGES EXCEPT FILAMENT MEASURED TO THIS LUG

12SA7 1st DET. & OSC.

12SK7 I.F.

35L6GT OUTPUT

35Z5GT RECTIFIER

2nd DET.-AF-AVC

REAR OF CHASSIS

Use a high resistance voltmeter of at least 1000 ohms per volt.

I.F. 455 KC.

POINTS MARKED WITH A Z ARE CONNECTED TOGETHER TO FORM THE B-CIRCUIT. THE .2 MFD. CONDENSER (DIAG. NO. 29) CONNECTS FROM THIS CIRCUIT TO CHASSIS.

NOTE: WHEN REPLACING THE LOOP ASSEMBLY BE SURE TO CONNECT THE GREEN WIRE TO THE UPPER RECEPTACLE AND THE GREEN AND WHITE WIRE TO THE LOWER RECEPTACLE

Diagram Number	Part Number	Description
1-2	U-115055	Speaker—electro dynamic
3	83539	Condenser—mica, 260 mmfd.
4	83783	Condenser—mica, 110 mmfd.
5	85296	Lamp—dial, 6 to 8 volt (mazda #51)
6-7	85394	Condenser—mica, 510 mmfd.
8-9	88030	Condenser—paper, .02 mfd., 400 volt
10	88189	Condenser—paper, .05 mfd., 200 volt
11	88193	Condenser—paper, .25 mfd., 150 volt
12	110560	Resistor—carbon, 100 ohms, 1/4 watt
13	110565	Resistor—22,000 ohms, 1/4 watt
14-15	110580	Resistor—carbon, 3.3 meg., 1/4 watt
16	111252	Condenser—paper, .05 mfd., 400 volt
17	112898	Condenser—electrolytic, 16 mfd., 150 volt
18	112971	Resistor—insulated 470,000 ohms, 1/4 watt
19	113472	Condenser—electrolytic 40 mfd., 150 volt
20	U-115055	Speaker—electro dynamic
21	116067	680,000 ohm, 1/4 watt—20% insulated
22	116527	Resistor—100 ohms—10% 3 watt W.W.
23	116667	Transformer—1st I.F.
24	116672	Transformer—2nd I.F.
25	116674	Coil—oscillator
26	U-116676	Transformer—output for U-115055 speaker
27A-27B	116691	Volume control with switch.
28	116702	Resistor—140 ohms—10% 1/2 watt W.W.
29	116706	Condenser—0.2 mfd., 600 volt.
30	116752	Resistor—33 ohms, 1 watt W.W.
31	U-116727	Cone & Voice Coil Assem. for U-115055 speaker
32A-32B	116755	Condenser—2 gang
33	116775	Loop antenna
34	116781	Condenser—trimmer for loop ant. assembly

CHASSIS 03-5A
CHASSIS 05-5L
Alignment, Trimmers
Socket

STEWART WARNER CORP.

SERVICE DATA for MODEL 03-5A CHASSIS SERVICE DATA for MODEL 05-5L CHASSIS

ALIGNMENT PROCEDURE

- FOR ALIGNMENT:** An output meter and an accurately calibrated signal generator are required.
1. Connect the output meter across the voice coil; or, using a condenser in series, connect between the plate of the 3516GT output tube and B on shown on the voltage chart. The more sensitive type should be connected across the voice coil.
 2. Connect the ground lead of the signal generator to the B lug (shown on the voltage chart) through a 25 mfd. condenser and keep it connected in this manner throughout the entire alignment procedure. Failure to do this may have serious results, as one side of the power line may be grounded in the signal generator, or hum may be introduced throughout the entire alignment procedure.
 3. Turn the volume control to the maximum volume position and leave it in this position throughout the entire alignment procedure.
 4. **TO CALIBRATE THE DIAL:**—Remove the chassis from the cabinet and set it on a flat surface (insulated from ground). With the gang in full mesh, the last dial division (just below 53) on the low frequency end, should be exactly 4% inches above the table surface. If this is not the case, release the set screw in the collar which connects the gang condenser shaft with the tuning unit, and holding the gang in full mesh, turn the dial until the last division is exactly 4% inches above the table surface. Now re-tighten the set screw in the collar. Repeat this procedure on the other side until the last division on the ruler (when measured vertically from table surface) is to be used on the dial indicator for all calibration and alignment.

Now remove the output meter and signal generator connections and replace the set in the cabinet. Replace the cabinet back and MAKE SURE THAT THE GREEN WIRE GOES TO THE UPPER RECEPTACLE OF THE LOOP AND THE GREEN-WHITE WIRE TO THE LOWER RECEPTACLE. Place the antenna lead from the signal generator near the back of the cabinet and turn the output up until the 1500 KC signal is weakly heard. Adjust trimmer No. 6 for maximum output by ear.

Dummy Ant. in Series with Signal Generator	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
200 MMFD. Condenser	Green wire of "Ant." Terminal (to be connected)	455 KC.	Any point where it does not affect the signal	1-2	2nd I.F.	Adjust for maximum output. Then repeat adjustment.
200 MMFD. Condenser	"Ant." Terminal	1500 KC.	1500 KC	3-4	1st I.F.	Adjust for maximum output.
200 MMFD. Condenser	"Ant." Terminal	1500 KC.	Tune to 1500 KC Generator Signal	5	Broadcast Oscillator (Shunt)	Adjust for maximum output.
				6	Broadcast Antenna (Shunt)	Adjust for maximum output below.

Now disconnect the output meter and signal generator leads and replace the chassis and batteries in the cabinet being sure to connect the loop. Bring the antenna lead of the signal generator near the loop until the 1500 KC. signal is heard weakly and re-adjust trimmer No. 6 for maximum output by ear.

ALIGNMENT PROCEDURE

1. Connect the output meter across the voice coil of the speaker or between the plate of the 105GT output tube and chassis through a .1 mfd. condenser, depending on the type of meter. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the chassis through a .25 mfd. condenser.
3. Turn the "A.C.-D.C.-Battery" switch to "A.C.-D.C." or "Battery" depending upon the source of power being used.
4. Turn the volume control to the maximum volume position and keep it in this position while aligning. The loop antenna must be connected.
5. With the gang condenser in full mesh, the dial pointer should be in the horizontal position. If the pointer is in excess, hold the gang in full mesh and move the pointer to the correct position by hand.



Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
200 MMFD. Condenser	Control Grid of 1A7GT	455 KC.	Any Point Where It Does Not Affect Signal	1-2	2nd I.F.	Adjust for maximum output. Then repeat adjustment.
200 MMFD. Condenser	"Ant." Terminal	1500 KC.	1500 KC.	3-4	1st I.F.	Adjust trimmer for maximum output.
200 MMFD. Condenser	"Ant." Terminal	1500 KC.	Tune to 1500 KC Generator Signal	5	Broadcast Oscillator (Shunt)	Adjust for maximum output.
				6	Broadcast Antenna	Adjust for maximum output.

Now disconnect the output meter and signal generator leads and replace the chassis and batteries in the cabinet being sure to connect the loop. Bring the antenna lead of the signal generator near the loop until the 1500 KC. signal is heard weakly and re-adjust trimmer No. 6 for maximum output by ear.

INSTALLATION OF BATTERIES

Two Eveready No. 462 "B" Batteries and one Eveready No. 745 "A" Battery are required for battery operation. To install the batteries proceed as follows:

1. If the power cord plug is connected to a power outlet disconnect it.
2. Remove the cabinet back.
3. Remove the three wires from the clips on the inside of the cabinet back.
4. Place the "A" battery in the bottom of the case and connect the two pronged plug to it.
5. Connect the three pronged plugs to the "B" batteries and slide them UNDER the "A" battery into the positions shown in the figure below.
6. Fasten the battery retaining block as shown, slide it against the batteries until REASONABLY tight, and tighten the wing nut.
7. Replace the cabinet back, being sure to connect the three wires to the proper clips as shown in the figure below. Improper operation will result if this is not done.

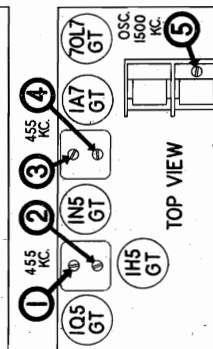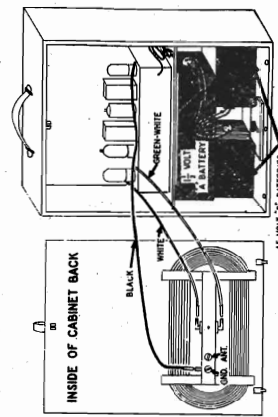


USING AN EXTERNAL ANTENNA

An external antenna may be connected to this radio to provide better signal pickup on weak stations. If the radio is being operated on A.C. or D.C. power lines, do not use a ground. If hum is encountered when operating from A.C. lines, the antenna should be connected to a ground. When the radio is operated from batteries and an external antenna is used, a ground must be used to obtain satisfactory pickup. After an external antenna has been connected, a weak signal near 1500 KC should be tuned in, and trimmer No. 6 adjusted for maximum volume. It is impossible to get a good reception of the weak station if the connections of the wires and the respective wires to see that the antenna is connected as shown in the drawing to the right. Please note that this drawing is slightly different from the one on the back cover of the receiver.



MISCELLANEOUS PARTS

- | Part Number | Description | Price |
|-------------|---|--------|
| 11524 | 1/2" brass washers | \$1.00 |
| 11525 | 1/4" brass washers | \$1.00 |
| 11526 | Collar—connecting between tuner unit and gang condenser shaft | \$1.00 |
| 11527 | Clutch spring—for tuner (on cone shaft) | \$1.00 |
| 11528 | 1/4" brass washers | \$1.00 |
| 11529 | 1/4" brass washers | \$1.00 |
| 11530 | 1/4" brass washers | \$1.00 |
| 11531 | 1/4" brass washers | \$1.00 |
| 11532 | 1/4" brass washers | \$1.00 |
| 11533 | 1/4" brass washers | \$1.00 |
| 11534 | 1/4" brass washers | \$1.00 |
| 11535 | 1/4" brass washers | \$1.00 |
| 11536 | 1/4" brass washers | \$1.00 |
| 11537 | 1/4" brass washers | \$1.00 |
| 11538 | 1/4" brass washers | \$1.00 |
| 11539 | 1/4" brass washers | \$1.00 |
| 11540 | 1/4" brass washers | \$1.00 |
| 11541 | 1/4" brass washers | \$1.00 |
| 11542 | 1/4" brass washers | \$1.00 |
| 11543 | 1/4" brass washers | \$1.00 |
| 11544 | 1/4" brass washers | \$1.00 |
| 11545 | 1/4" brass washers | \$1.00 |
| 11546 | 1/4" brass washers | \$1.00 |
| 11547 | 1/4" brass washers | \$1.00 |
| 11548 | 1/4" brass washers | \$1.00 |
| 11549 | 1/4" brass washers | \$1.00 |
| 11550 | 1/4" brass washers | \$1.00 |
| 11551 | 1/4" brass washers | \$1.00 |
| 11552 | 1/4" brass washers | \$1.00 |
| 11553 | 1/4" brass washers | \$1.00 |
| 11554 | 1/4" brass washers | \$1.00 |
| 11555 | 1/4" brass washers | \$1.00 |
| 11556 | 1/4" brass washers | \$1.00 |
| 11557 | 1/4" brass washers | \$1.00 |
| 11558 | 1/4" brass washers | \$1.00 |
| 11559 | 1/4" brass washers | \$1.00 |
| 11560 | 1/4" brass washers | \$1.00 |
| 11561 | 1/4" brass washers | \$1.00 |
| 11562 | 1/4" brass washers | \$1.00 |
| 11563 | 1/4" brass washers | \$1.00 |
| 11564 | 1/4" brass washers | \$1.00 |
| 11565 | 1/4" brass washers | \$1.00 |
| 11566 | 1/4" brass washers | \$1.00 |
| 11567 | 1/4" brass washers | \$1.00 |
| 11568 | 1/4" brass washers | \$1.00 |
| 11569 | 1/4" brass washers | \$1.00 |
| 11570 | 1/4" brass washers | \$1.00 |
| 11571 | 1/4" brass washers | \$1.00 |
| 11572 | 1/4" brass washers | \$1.00 |
| 11573 | 1/4" brass washers | \$1.00 |
| 11574 | 1/4" brass washers | \$1.00 |
| 11575 | 1/4" brass washers | \$1.00 |
| 11576 | 1/4" brass washers | \$1.00 |
| 11577 | 1/4" brass washers | \$1.00 |
| 11578 | 1/4" brass washers | \$1.00 |
| 11579 | 1/4" brass washers | \$1.00 |
| 11580 | 1/4" brass washers | \$1.00 |
| 11581 | 1/4" brass washers | \$1.00 |
| 11582 | 1/4" brass washers | \$1.00 |
| 11583 | 1/4" brass washers | \$1.00 |
| 11584 | 1/4" brass washers | \$1.00 |
| 11585 | 1/4" brass washers | \$1.00 |
| 11586 | 1/4" brass washers | \$1.00 |
| 11587 | 1/4" brass washers | \$1.00 |
| 11588 | 1/4" brass washers | \$1.00 |
| 11589 | 1/4" brass washers | \$1.00 |
| 11590 | 1/4" brass washers | \$1.00 |
| 11591 | 1/4" brass washers | \$1.00 |
| 11592 | 1/4" brass washers | \$1.00 |
| 11593 | 1/4" brass washers | \$1.00 |
| 11594 | 1/4" brass washers | \$1.00 |
| 11595 | 1/4" brass washers | \$1.00 |
| 11596 | 1/4" brass washers | \$1.00 |
| 11597 | 1/4" brass washers | \$1.00 |
| 11598 | 1/4" brass washers | \$1.00 |
| 11599 | 1/4" brass washers | \$1.00 |
| 11600 | 1/4" brass washers | \$1.00 |
| 11601 | 1/4" brass washers | \$1.00 |
| 11602 | 1/4" brass washers | \$1.00 |
| 11603 | 1/4" brass washers | \$1.00 |
| 11604 | 1/4" brass washers | \$1.00 |
| 11605 | 1/4" brass washers | \$1.00 |
| 11606 | 1/4" brass washers | \$1.00 |
| 11607 | 1/4" brass washers | \$1.00 |
| 11608 | 1/4" brass washers | \$1.00 |
| 11609 | 1/4" brass washers | \$1.00 |
| 11610 | 1/4" brass washers | \$1.00 |
| 11611 | 1/4" brass washers | \$1.00 |
| 11612 | 1/4" brass washers | \$1.00 |
| 11613 | 1/4" brass washers | \$1.00 |
| 11614 | 1/4" brass washers | \$1.00 |
| 11615 | 1/4" brass washers | \$1.00 |
| 11616 | 1/4" brass washers | \$1.00 |
| 11617 | 1/4" brass washers | \$1.00 |
| 11618 | 1/4" brass washers | \$1.00 |
| 11619 | 1/4" brass washers | \$1.00 |
| 11620 | 1/4" brass washers | \$1.00 |
| 11621 | 1/4" brass washers | \$1.00 |
| 11622 | 1/4" brass washers | \$1.00 |
| 11623 | 1/4" brass washers | \$1.00 |
| 11624 | 1/4" brass washers | \$1.00 |
| 11625 | 1/4" brass washers | \$1.00 |
| 11626 | 1/4" brass washers | \$1.00 |
| 11627 | 1/4" brass washers | \$1.00 |
| 11628 | 1/4" brass washers | \$1.00 |
| 11629 | 1/4" brass washers | \$1.00 |
| 11630 | 1/4" brass washers | \$1.00 |
| 11631 | 1/4" brass washers | \$1.00 |
| 11632 | 1/4" brass washers | \$1.00 |
| 11633 | 1/4" brass washers | \$1.00 |
| 11634 | 1/4" brass washers | \$1.00 |
| 11635 | 1/4" brass washers | \$1.00 |
| 11636 | 1/4" brass washers | \$1.00 |
| 11637 | 1/4" brass washers | \$1.00 |
| 11638 | 1/4" brass washers | \$1.00 |
| 11639 | 1/4" brass washers | \$1.00 |
| 11640 | 1/4" brass washers | \$1.00 |
| 11641 | 1/4" brass washers | \$1.00 |
| 11642 | 1/4" brass washers | \$1.00 |
| 11643 | 1/4" brass washers | \$1.00 |
| 11644 | 1/4" brass washers | \$1.00 |
| 11645 | 1/4" brass washers | \$1.00 |
| 11646 | 1/4" brass washers | \$1.00 |
| 11647 | 1/4" brass washers | \$1.00 |
| 11648 | 1/4" brass washers | \$1.00 |
| 11649 | 1/4" brass washers | \$1.00 |
| 11650 | 1/4" brass washers | \$1.00 |
| 11651 | 1/4" brass washers | \$1.00 |
| 11652 | 1/4" brass washers | \$1.00 |
| 11653 | 1/4" brass washers | \$1.00 |
| 11654 | 1/4" brass washers | \$1.00 |
| 11655 | 1/4" brass washers | \$1.00 |
| 11656 | 1/4" brass washers | \$1.00 |
| 11657 | 1/4" brass washers | \$1.00 |
| 11658 | 1/4" brass washers | \$1.00 |
| 11659 | 1/4" brass washers | \$1.00 |
| 11660 | 1/4" brass washers | \$1.00 |
| 11661 | 1/4" brass washers | \$1.00 |
| 11662 | 1/4" brass washers | \$1.00 |
| 11663 | 1/4" brass washers | \$1.00 |
| 11664 | 1/4" brass washers | \$1.00 |
| 11665 | 1/4" brass washers | \$1.00 |
| 11666 | 1/4" brass washers | \$1.00 |
| 11667 | 1/4" brass washers | \$1.00 |
| 11668 | 1/4" brass washers | \$1.00 |
| 11669 | 1/4" brass washers | \$1.00 |
| 11670 | 1/4" brass washers | \$1.00 |
| 11671 | 1/4" brass washers | \$1.00 |
| 11672 | 1/4" brass washers | \$1.00 |
| 11673 | 1/4" brass washers | \$1.00 |
| 11674 | 1/4" brass washers | \$1.00 |
| 11675 | 1/4" brass washers | \$1.00 |
| 11676 | 1/4" brass washers | \$1.00 |
| 11677 | 1/4" brass washers | \$1.00 |
| 11678 | 1/4" brass washers | \$1.00 |
| 11679 | 1/4" brass washers | \$1.00 |
| 11680 | 1/4" brass washers | \$1.00 |
| 11681 | 1/4" brass washers | \$1.00 |
| 11682 | 1/4" brass washers | \$1.00 |
| 11683 | 1/4" brass washers | \$1.00 |
| 11684 | 1/4" brass washers | \$1.00 |
| 11685 | 1/4" brass washers | \$1.00 |
| 11686 | 1/4" brass washers | \$1.00 |
| 11687 | 1/4" brass washers | \$1.00 |
| 11688 | 1/4" brass washers | \$1.00 |
| 11689 | 1/4" brass washers | \$1.00 |
| 11690 | 1/4" brass washers | \$1.00 |
| 11691 | 1/4" brass washers | \$1.00 |
| 11692 | 1/4" brass washers | \$1.00 |
| 11693 | 1/4" brass washers | \$1.00 |
| 11694 | 1/4" brass washers | \$1.00 |
| 11695 | 1/4" brass washers | \$1.00 |
| 11696 | 1/4" brass washers | \$1.00 |
| 11697 | 1/4" brass washers | \$1.00 |
| 11698 | 1/4" brass washers | \$1.00 |
| 11699 | 1/4" brass washers | \$1.00 |
| 11700 | 1/4" brass washers | \$1.00 |

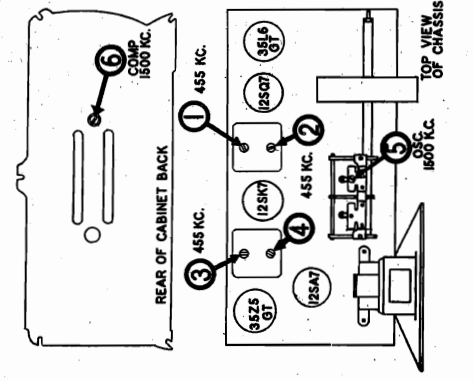

STEWART-WARNER CORP.

MODEL Senior Varsity
CHASSIS 03-5B, 07-5B
Schematic, Voltage

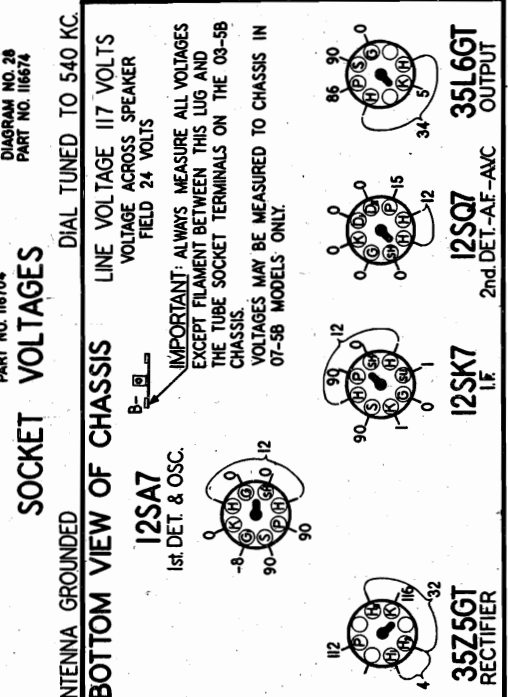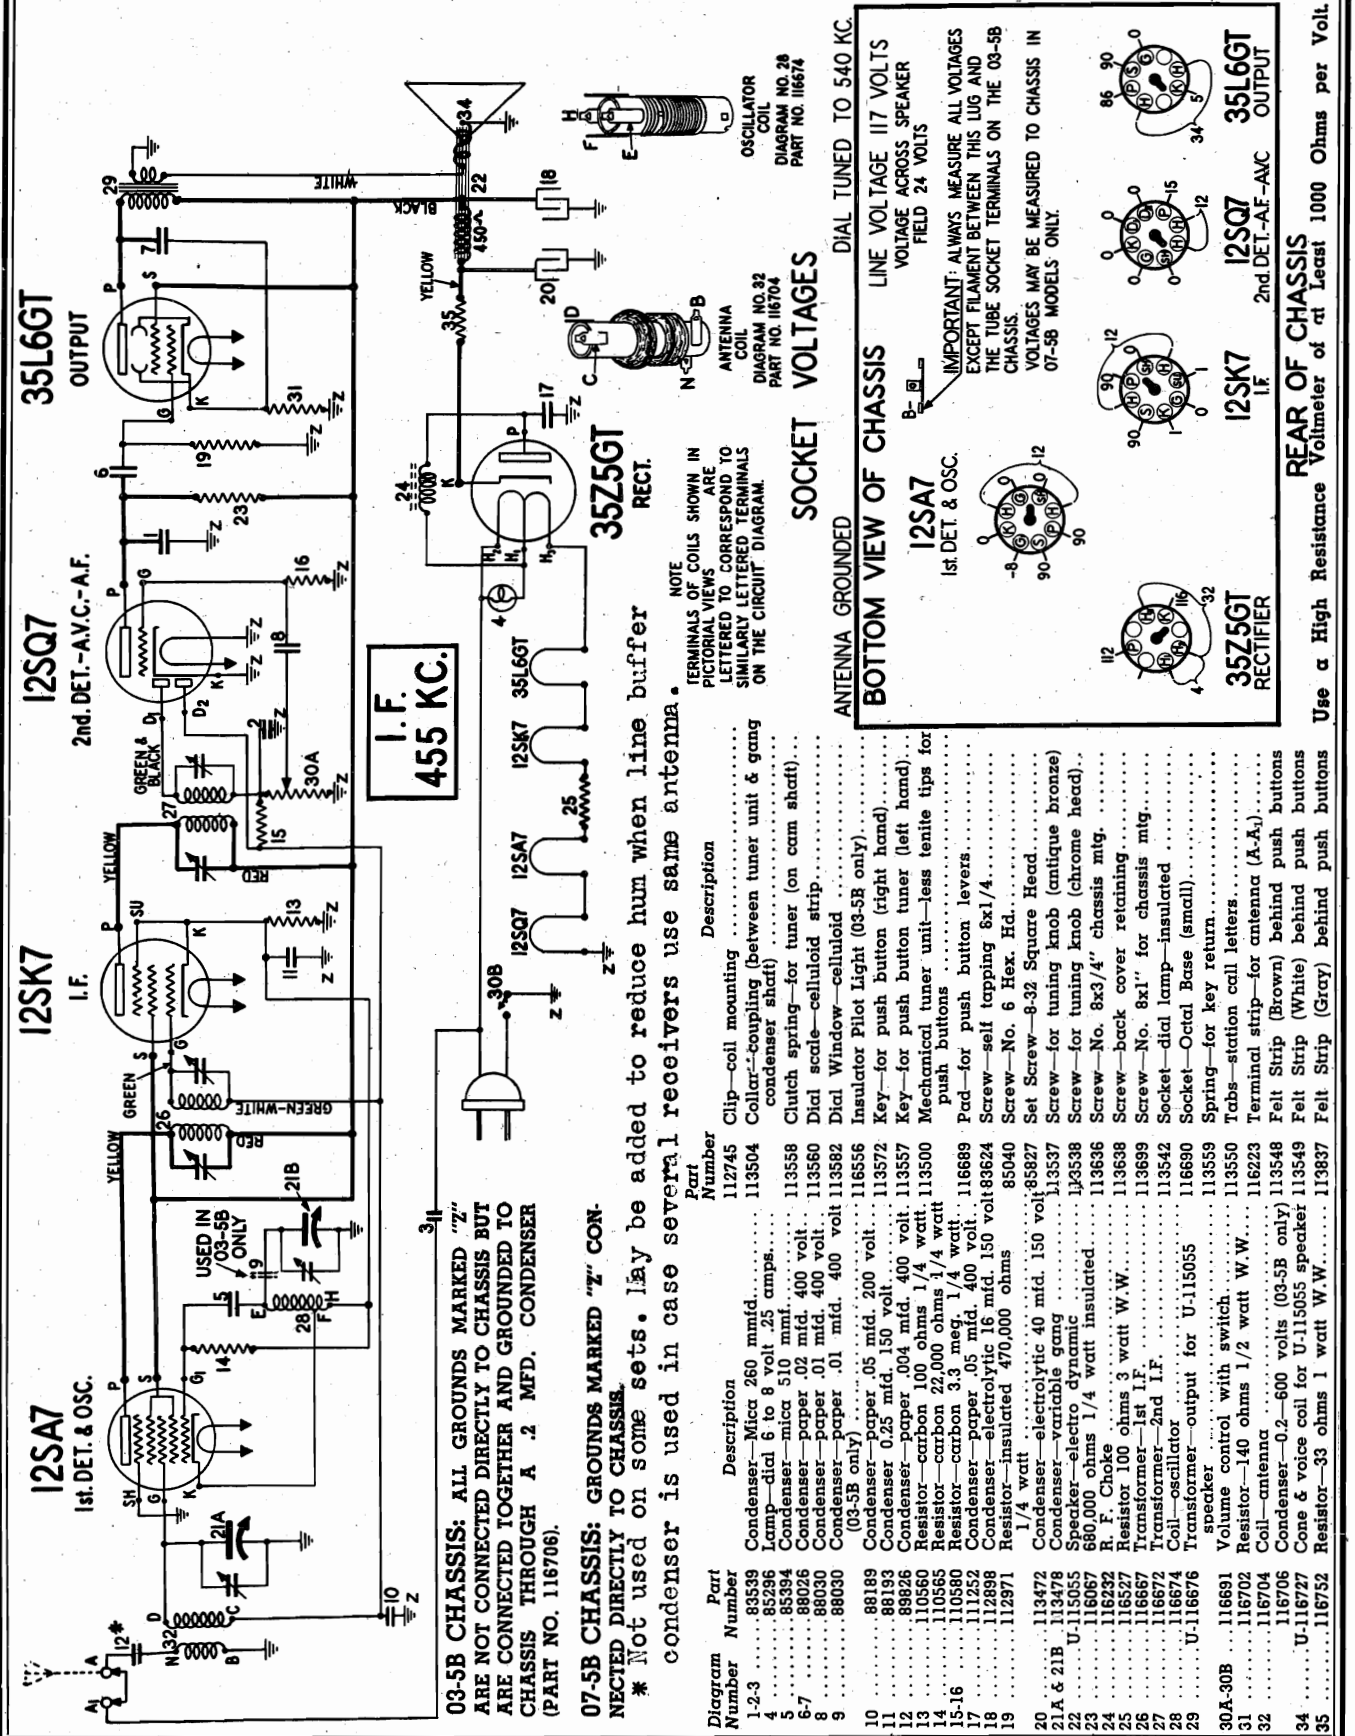

SOCKET VOLTAGES
ANTENNA GROUNDED
DIAL TUNED TO 540 KC.

12SA7
1st DET. & OSC.

12SK7
I.F.

12SQ7
2nd DET.-A.V.C.-A.F.

35L6GT
OUTPUT

35Z5GT
RECTIFIER

35L6GT
OUTPUT

12SK7
I.F.

12SQ7
2nd DET.-A.V.C.-A.F.

35L6GT
OUTPUT

35Z5GT
RECTIFIER

REAR OF CHASSIS
Use a High Resistance Voltmeter of at Least 1000 Ohms per Volt.

Diagram Number	Part Number	Description
1	83539	Condenser—mica 260 mmfd.
2	85296	Lamp—dial 6 to 8 volt 25 amps.
3	85394	Condenser—mica 510 mmfd.
4	88026	Condenser—paper 02 mfd. 400 volt.
5	88030	Condenser—paper 01 mfd. 400 volt.
6	88030	Condenser—paper .01 mfd. 400 volt.
7	88189	Condenser—paper .05 mfd. 200 volt.
8	88193	Condenser .025 mfd. 150 volt.
9	89826	Condenser—paper .004 mfd. 400 volt.
10	110560	Resistor—carbon 100 ohms 1/4 watt.
11	110585	Resistor—carbon 22,000 ohms 1/4 watt.
12	110580	Resistor—carbon 3.3 meg. 1/4 watt.
13	111252	Condenser—paper .05 mfd. 400 volt.
14	112898	Condenser—electrolytic 16 mfd. 150 volt.
15	112971	Resistor—insulated 470,000 ohms 1/4 watt.
16	113472	Condenser—electrolytic 40 mfd. 150 volt.
17	113478	Condenser—variable gang
18	U-115055	Speaker—electro dynamic
19	116087	R. F. Choke
20	116292	Resistor 100 ohms 3 watt W.W.
21	116527	Transformer—1st I.F.
22	116872	Transformer—2nd I.F.
23	116874	Coil—oscillator
24	U-116676	Transformer—output for U-115055 speaker
25	116691	Volume control with switch.
26	116702	Resistor—140 ohms 1/2 watt W.W.
27	116704	Coil—antenna
28	116706	Condenser—0.2—600 volts (03-5B only)
29	U-116727	Cone & voice coil for U-115055 speaker
30	116752	Resistor—33 ohms 1 watt W.W.
31	112745	Clip—coil mounting
32	113504	Collar—coupling (between tuner unit & gang condenser shaft)
33	113558	Clutch spring—for tuner (on cam shaft)
34	113560	Dial scale—celluloid strip
35	113582	Dial Window—celluloid
36	116556	Insulator Pilot Light (03-5B only)
37	113572	Key—for push button tuner (right hand)
38	113557	Key—for push button tuner (left hand)
39	113500	Mechanical tuner unit—less tenite tips for push buttons
40	116889	Pad—for push button levers
41	836624	Screw—self tapping 8x1/4
42	85040	Screw—No. 6 Hex. Hd.
43	85827	Set Screw—8-32 Square Head
44	113537	Screw—for tuning knob (antique bronze)
45	143538	Screw—for tuning knob (chrome head)
46	113636	Screw—No. 8x3/4" chassis mtg.
47	113638	Screw—back cover retaining
48	113699	Screw—No. 8x1" for chassis mtg.
49	113542	Socket—dial lamp—insulated
50	116690	Socket—Octal Base (small)
51	113559	Spring—for key return
52	113550	Tab—station call letters
53	116223	Terminal strip—for antenna (A-A ₁)
54	113548	Felt Strip (Brown) behind push buttons
55	113549	Felt Strip (White) behind push buttons
56	113837	Felt Strip (Gray) behind push buttons



03-5B CHASSIS: ALL GROUNDS MARKED "Z" ARE NOT CONNECTED DIRECTLY TO CHASSIS BUT ARE CONNECTED TOGETHER AND GROUNDED TO CHASSIS THROUGH A .2 MFD. CONDENSER (PART NO. 116706).

07-5B CHASSIS: GROUNDS MARKED "Z" CONNECTED DIRECTLY TO CHASSIS.


* Not used on some sets. May be added to reduce hum when line buffer condenser is used in case several receivers use same antenna.

MODEL A-6S, Ch. 07-32
Schematic, Voltage, Socket
Trimmers, Alignment

STEWART WARNER CORP.

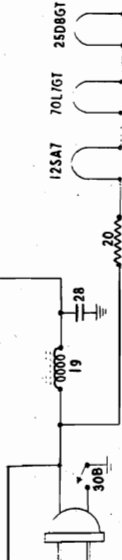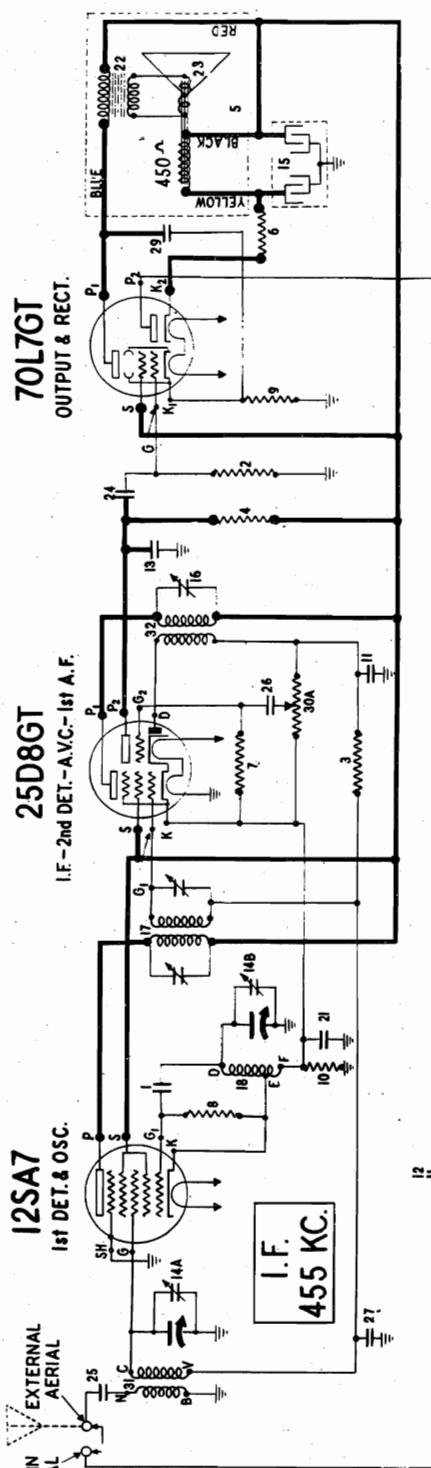


GANG CONDENSER TRIMMER
There are three trimmers located on the gang condenser used in this receiver. Two of these trimmers are shown in the trimmer location diagram which is shown on this page, and are marked No. 4 and No. 5. The third trimmer is located on the back of the gang condenser and has been adjusted at the factory so that further adjustment should be unnecessary. If this trimmer has been tampered with, however, it may be necessary to adjust it so that a satisfactory peck can be secured on trimmer No. 4.

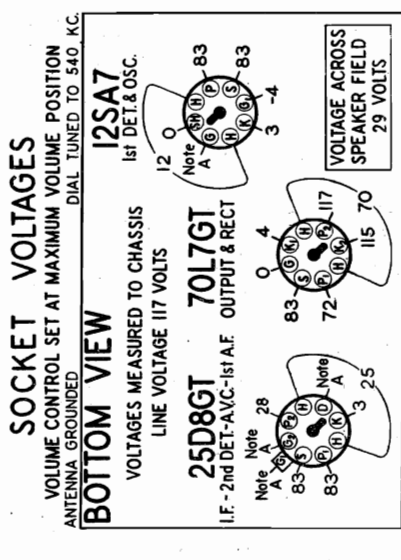

SOCKET VOLTAGES
VOLUME CONTROL SET AT MAXIMUM VOLUME POSITION
ANTENNA GROUND

REAR OF CHASSIS
NOTE A: Due to the high resistance of resistors No. 3, No. 7, and No. 30A, only a very slight deflection will be obtained on a meter having a resistance of 1000 ohms per volt.

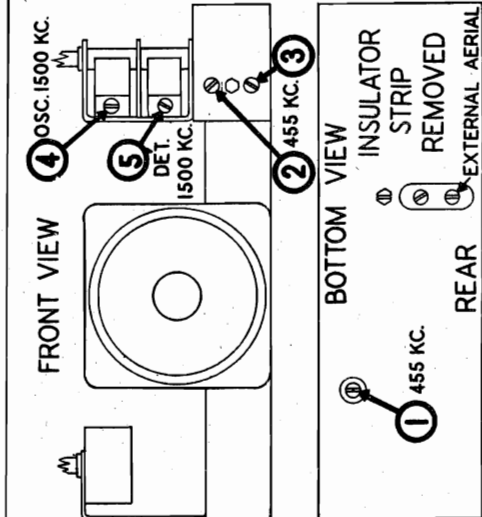

- FRONT VIEW**
④ OSC. 1500 KC.
⑤ DET. 1500 KC.
② 455 KC. (3)
- BOTTOM VIEW**
INSULATOR STRIP REMOVED
① 455 KC. EXTERNAL AERIAL
- REAR VIEW**
- 116637—Cabinet—(walnut)
 - 116657—Cabinet—(sprayed ivory)
 - 112745—Clip—coil mounting
 - 85321—Connector—for internal antenna
 - 116576—Insulator—fibre for base (inside)
 - 117101—Insulator—fibre for base (outside)
 - 116532—Knob—volume control (red)
 - 116533—Knob—tuning (red)
 - 116886—Knob—volume control (ivory)
 - 116887—Knob—tuning (ivory)
 - 116584—Rubber foot for bottom of cabinet
 - 116629—Screw—No. 8-32 x 1 1/2 Bind H.M.S.
 - 116630—Screw—No. 8-32 x 1 1/2 Bind H.M.S.
 - 116615—Socket—small octal
 - 116583—Terminal Strip—(for antenna)
 - 116592—Tube Shield

For ALIGNMENT
See Stewart-Warner Page 10-2

Diagram Number	Part Number	Description
1	83783	Condenser—mica, 110 mml.
2	112971	Resistor—insulated, 470,000 ohms, 1/4 watt
3	112972	Resistor—insulated, 1 megohm, 1/4 watt
4	112987	Resistor—insulated, 220,000 ohms, 1/4 watt
5	R-115053	Specker—dynamic 3"
6	116013	Resistor—50 ohm, 1 watt
7	116050	Resistor—insulated, 10 megohm, 1/4 watt
8	116059	Resistor—insulated, 22,000 ohm, 1/4 watt
9	116064	Resistor—insulated, 100 ohm 1/2 watt.
10	116069	Resistor—insulated, 100 ohm, 1/4 watt.
11-12-13	116224	Condenser—mica, 260 mmd.
14A-14B	116578	Condenser—2 gang tuning
15	116587	Condenser—electrolytic, Dual 20 mfd. 150 volt
16	116599	Condenser—trimmer for 2nd I.F.
17	116605	Transformer—1st I.F.
18	116609	Coil—oscillator
19	116616	Coil—R. F. Choke
20	116618	Resistor—65 ohms, 2 watts, Wire Wound
21	116625	Condenser—1 mfd., 600 volt
22	R-116633	Transformer—output for R-115053 speaker
23	R-116635	Cone & Voice coil assembly for R-115053 speaker
24	116640	Condenser—.01 mfd., 600 volt
25-26	116647	Condenser—.004 mfd., 600 volt
27	116819	Condenser—.05 mfd., 600 volt
28-29	116893	Condenser—.02 mfd., 600 volt
30A-30B	117088	Volume control (500,000 ohms—with switch)
31	117093	Coil—antenna
32	117097	Transformer—2nd I.F.

CHASSIS 03-5C, 01-5D
 CHASSIS 07-5B, 03-5B
 Alignment, Trimmers
 Socket, Notes

STEWART-WARNER CORP.

SERVICE DATA FOR MODEL 07-5B and 03-5B CHASSIS

ALIGNMENT PROCEDURE

FOR ALIGNMENT: An output meter and an accurately calibrated signal generator are required.

1. Connect the output meter across the voice coil or, using a .1 mid. condenser in series, connect as follows: MODEL 03-5B: Between the 3516GT plate and B—terminal shown on voltage chart. MODEL 07-5B: Between the 3516GT plate and chassis.
2. Connect the ground lead of the signal generator to the chassis of the receiver through a .25 mid. condenser and keep it connected in this manner throughout the entire alignment procedure. Failure to do this may have serious results as one side of the power line may be grounded in the signal generator. If oscillation or hum occurs in the model 03-5B, connect the ground lead of the signal generator through a .25 mid. condenser to B— as shown on the Voltage Chart.
3. Remove the connector between terminals A and A₁, also turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure.
4. TO CALIBRATE THE DIAL: Remove the chassis from the cabinet and set it on a flat surface (insulated from ground). With the gang condenser in full mesh, the last dial division (just below 53) on the low frequency end should be exactly 4% inches above the table surface. If the dial is not in this position with the gang in full mesh, it is necessary to re-set the dial. Loosen the set screw in the outer shell which connects the gang condenser shaft with the tuning unit with the correct position and tighten the screw. The 4% inch division on the ruler (when measured vertically from the table surface) is to be used as the dial indicator for all calibrations and alignment.

SERVICE DATA FOR MODEL 01-5D CHASSIS

ALIGNMENT PROCEDURE

FOR ALIGNMENT: An output meter and an accurately calibrated signal generator are required.


1. Connect the output meter across the voice coil, or using a .1 mid. condenser in series connect between the 3516GT tube plate and B— as shown on the voltage chart.
2. Connect the ground lead of the signal generator through a .25 mid. condenser to B— as shown on the voltage chart.
3. Remove the connector between terminals A and A₁, turn the volume control to maximum position and place the band switch in the broadcast position. On the 01-5D chassis the "Phono" cable must also be plugged in, and the "Radio" "Phono" switch placed in the "Radio" position.
4. With the gang condenser in full mesh, the pointer should be in a horizontal position. If it is not, it should be moved to this position before alignment.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
1. Mid. Condenser	Trimmer lug on large section of variable condenser	455 KC.	Any Point Where it Affects the Signal	1-2	2nd I.F.	Adjust for Maximum Output. Then Repeat Adjustment.
200 MMFD. Mic. Condenser	"A" Terminal	455 KC.	Any Point Where it Affects the Signal	3-4	1st I.F.	Adjust for Minimum Output of Strong Generator Signal.
200 MMFD. Mic. Condenser	"A" Terminal	1500 KC.	1500 KC.	5	Wave Trap Used Only On Chassis Marked "WT"	Adjust for Maximum Output.
200 MMFD. Mic. Condenser	"A" Terminal	1500 KC.	Tune to 1500 KC. Generator Signal	6	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mic. Condenser	"A" Terminal	1500 KC.	1500 KC. Generator Signal	7	Broadcast Antenna (Shunt)	Adjust for Maximum Output.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
200 MMFD. Mic. Condenser	Trimmer lug on large section of variable condenser	455 KC	Any point where it does not affect the signal	1-2	1st I.F. And I.F.	Adjust for Maximum Output. Then repeat adjustment.
200 MMFD. Mic. Condenser	Antenna Terminal A	1500 KC	1500 KC	3-4	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mic. Condenser	Antenna Terminal A	1500 KC	Tune to 1500 KC. Generator Signal	5	Broadcast Antenna (Shunt)	Adjust for Maximum Output.
200 MMFD. Mic. Condenser	Antenna Terminal A	1500 KC	1500 KC. Generator Signal	6	Broadcast Antenna (Shunt)	Adjust for Maximum Output.

DIAL AND MISCELLANEOUS PARTS

Part No.	Description	List Price
112745	Clip—coil mounting	\$0.01
113019	Clip—dial scale retaining	.01
112738	Clip—for mtg. wave trap coil (used on WT model)	.01
85321	Connector for built-in antenna	.10
118800	Dial cord	.10
118773	Knob—tuning or volume	.10
118916	Pointer assembly	.04
118165	Receptacle—2 prong for Phono motor (01-5D & 01-5D-WT)	.50
81145	Spring—for dial cord tension	.03
82824	Screw—self tapping 8x4	.01
85040	Screw—No. 6 Hex. Head	.35
118758	Shaft—tuning	.12
118890	Socket—octal base	.12
118793	Socket—for pilot light	.25
114271	Socket—for tuning Phono motor (01-5D & 01-5D-WT)	.17
111981	Spring—for dial cord tension	.03
118223	Terminal strip—for antenna (A-A)	.12
118530	Washer—(paper) for back of knobs	.065
118514	Window—dial	Per C.
118414	Window—dial	Per C.

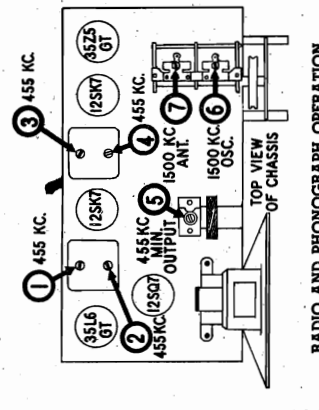

RADIO AND PHONOGRAPH OPERATION

These radios are equipped with a police band covering the quantities from about 2120 Kc. to 2350 Kc. To use this band, push the switch located on the back of the chassis to the position marked POLICE.

A Built-in Line Antenna is incorporated in all models and will generally give satisfactory results in localities where powerful broadcast stations are located. To use this built-in antenna, terminals A and A₁ on the back of the chassis must be connected together. When aligning the set the jumper connecting terminals A and A₁ should be removed. This will prevent picking up signals which may interfere with the alignment procedure.


The Model 01-5D receiver is equipped with a phonograph turntable and crystal pickup unit. This receiver can be operated on A.C. only when the phonograph unit is used. Attempts to operate the phonograph unit on D.C. will damage it. The 03-5C chassis however may be operated on either A.C. or D.C. of the proper voltage.

HOW TO SET UP PUSH BUTTON TUNER

1. Connect the set to a good antenna system and allow it to operate for at least 15 minutes before setting up buttons.
2. Select four nearby powerful stations to which you wish to set up the buttons. Any button may be set to any desired station.
3. Hold the tuning knob and turn the screw in its center clockwise until the needle points to the station you wish to tune.
4. Hold the button, you wish to set, down firmly and tune in the station to be set to that button. Be sure to tune in the station accurately. Release the push button. The rest of the buttons may be set up in the same manner.
5. To check the tuning knob, hold the knob firmly while tightening this screw.
6. The push buttons should now be labeled with their proper call letters in the space provided above the push buttons.
7. Call letter sheets are provided with your receiver. In placing the push button tuner, be sure to push the buttons in every day down, otherwise the desired station will not be tuned in.

MISCELLANEOUS PARTS

Part No.	Description	List Price
116989	Walnut	.275
116731	Ivory (sprayed)	4.30
116710	Walnut	.14
116723	Ivory	.14
113989	Walnut and color—9/16"	.06
113922	Ivory—3/16"	.06
113551	Ivory	.30
114711	Walnut	.26
113574	Ivory	.18
114712	Walnut	.18
113529	Ivory	.05
114710	Walnut	.05

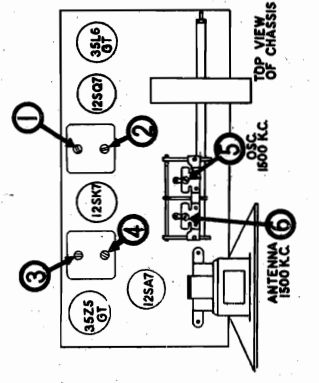

BUILT-IN ANTENNA SYSTEM

The Built-in Antenna incorporated in this receiver will generally give very satisfactory results in localities where powerful broadcast stations exist. This Built-in Antenna will function when terminals A and A₁ on the back of the chassis are connected together. In cases where noises are excessive or greater sensitivity is desired, remove the jumper connecting terminals A and A₁ and connect an external antenna to terminal A.

When aligning this receiver, the jumper connecting terminals A and A₁ should be removed. This will prevent picking up signals which might interfere with the alignment procedure. When the I.F. channel is being aligned, the gang condenser should be set at a point where no interfering signal will be received.

CHASSIS 03-5E, 03-5J
Alignment, Voltage
Trimmers, Socket

STEWART WARNER CORP.

ALIGNMENT PROCEDURE

1. Connect the output meter across the voice coil or using a .1 mfd. condenser in series, connect from the 35L6GT output tube plate to B— as shown on bottom view of chassis.
2. Connect the ground lead of the signal generator through a .25 MFD condenser to the B— lug as shown on bottom view of chassis.
3. Turn the volume control to maximum position and push the "Broadcast" button in.
4. The pointer should be in a horizontal position when the gang condenser is in full mesh. If it is not, it will be necessary to remove the dial window by pushing out the clips holding it in place and setting the pointer to the correct position. Be sure that the dial face is in the correct position when this is done.
5. On the 03-5E chassis, remove connector between A and A₁.
6. On the 03-5J chassis, connect the loop making sure the wires are connected to their proper clips on the loop terminal strip and make sure A is connected to A₁.




Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
200 MMFD. Mica Condenser	Stator lug on large section of variable condenser	455 KC	Any point where it does not affect signal	1-2	2nd I.F.	Adjust for maximum output. Then repeat adjustment.
				3-4	1st I.F.	
200 MMFD. Mica Condenser	Antenna Terminal "A"	455 KC	Any point where it does not affect signal	5 Used on 03-5E-WT only	Wave Trap	Adjust for minimum output using a strong generator signal.
200 MMFD. Mica Condenser	Antenna Terminal "A"	1500 KC	1500 KC	6	Broadcast Oscillator (Shunt)	Adjust for maximum output.

On the 03-5E and 03-5E-WT Chassis only, proceed with this step:

200 MMFD. Mica Condenser	Antenna Terminal "A"	1500 KC	Tune to 1500 KC Generator Signal	7 03-5E and 03-5E-WT only	Broadcast Antenna (Shunt)	Adjust for maximum output.
--------------------------	----------------------	---------	----------------------------------	------------------------------	---------------------------	----------------------------

On the 03-5J chassis, remove the output meter leads, replace the chassis in the cabinet and replace the cabinet back and loop assembly being sure to connect the loop properly as shown below. Replace connector between terminal A and A₁. Then make the following adjustment.

Place lead from Sig. Generator close to the loop.	1500 KC	Tune to 1500 KC Generator Signal	8 03-5J only	Broadcast Antenna (Shunt)	Adjust for maximum output by ear.
---	---------	----------------------------------	-----------------	---------------------------	-----------------------------------

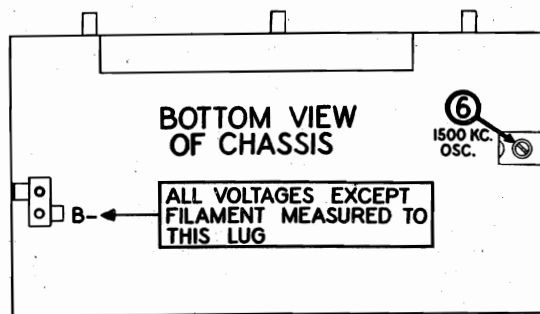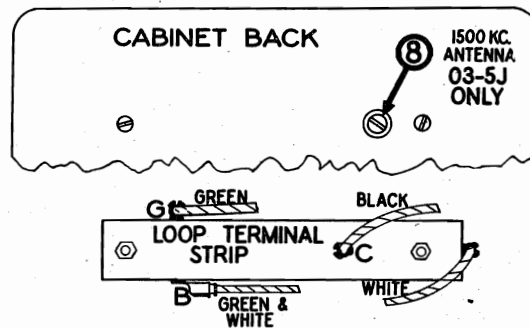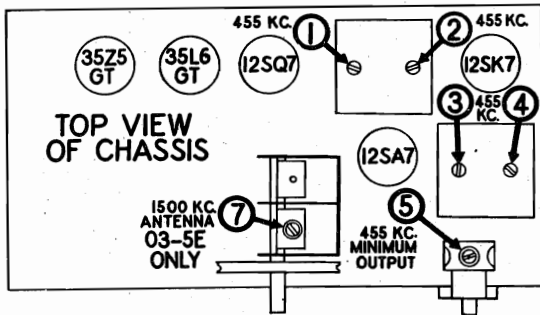


ANTENNA SYSTEM

A built-in line antenna is incorporated in the 03-5E chassis models. The 03-5J uses a loop antenna. Both sets have terminals so that an external antenna may be used. To connect an external antenna to either of these sets, remove the connector between A and A₁ and connect the antenna to the terminal marked A. Do not make any connection to the terminal marked A₁.

It should not be necessary to change the setting of the trimmer on the 03-5J cabinet back when connecting or removing an external antenna if the set has been properly aligned.

SOCKET VOLTAGES

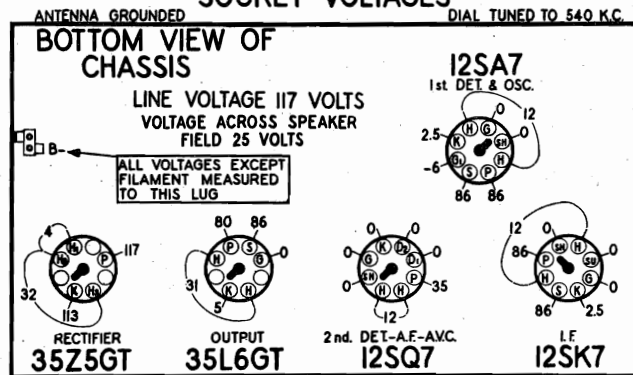


REAR OF CHASSIS

Use a high resistance Voltmeter of at least 1000 ohms per volt.

STEWART-WARNER CORP.



MODELS O3-5K1 to O3-5K9
Magician, Ch. O3-5K
Schematic

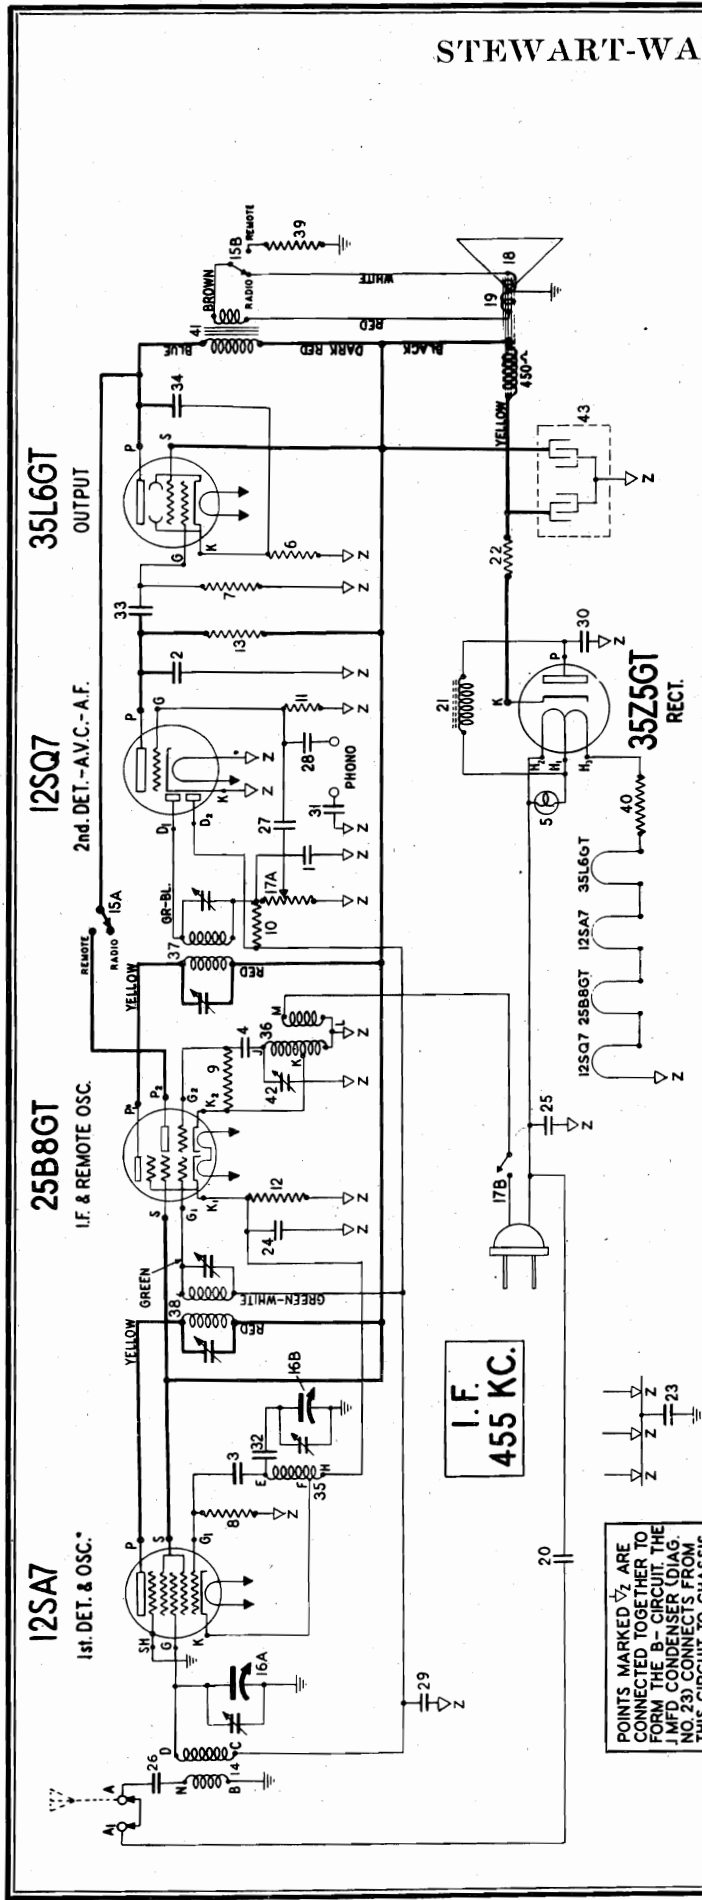

ELECTRICAL PARTS

Diagram Number	Part Number	Description	List Price
1-2	83539	Condenser—mica, 260 mmfd.	\$.20
3-4	83783	Condenser—mica, 110 mmfd.	.20
5	85296	Lamp—dial, 6 to 8 volt, .15 amps.	.16
6	88460	Resistor—wire wound, 150 ohms, 1/2 watt	.12
7	110559	Resistor—carbon, 470,000 ohms, 1/4 watt	.12
8	110565	Resistor—carbon, 22,000 ohms, 1/4 watt	.12
9	110566	Resistor—carbon, 33,000 ohms, 1/4 watt	.12
10-11	110580	Resistor—carbon, 3.3 meg., 1/4 watt	.12
12	110590	Resistor—carbon, 180 ohms, 1/4 watt	.12
13	110591	Resistor—carbon, 680,000 ohms, 1/4 watt	.12
14	113449	Coil—antenna	.78
15A-15B	114141	Switch D.P.D.T.	.44
16A-16B	114870	Condenser—variable gang	2.85
17A-17B	114879	Volume control—1 megohm; with switch	.96
18	R-114886	Cone and voice coil for R-115066 speaker	1.00
19	R-115066	Speaker—dynamic, 4 inch (with output trans.)	\$.43
20	116224	Condenser—mica, 260 mmfd., 500 volt	.15
21	116232	R. F. Choke	.48
22	116479	Resistor—wire wound, 33 ohms, 3 watts	.20
23-24	116625	Condenser—1 mfd., 600 volt	.25
25	116640	Condenser—.01 mfd., 600 volt	.15
26-27-28	116647	Condenser—.004 mfd., 600 volt	.15
29-30-31	116819	Condenser—.05 mfd., 600 volt	.20
32-33-34	116893	Condenser—.02 mfd., 600 volt	.15
35	117352	Coil—oscillator	.38
36	117359	Coil—for remote control oscillator	.60
37	117384	Transformer—2nd I.F.	1.10
38	117385	Transformer—1st I.F.	1.25
39	117394	Resistor—5 ohm, 1 watt, W.W.	.16
40	117395	Resistor—20 ohm, 1 watt, W.W.	.16
41	R-117484	Transformer—output for R-115066 speaker	1.50
42	117558	Condenser—trimmer, 50 mmfd. max. cap.	.25
43	117559	Condenser—electrolytic, 30-30 mfd., 150 volt	1.20

POINTS MARKED 1/2 ARE CONNECTED TOGETHER TO FORM THE B-C CIRCUIT. THE I.M.F.D. CONDENSER (DIAG. NO. 23) CONNECTS FROM THIS CIRCUIT TO CHASSIS.

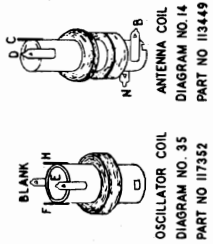

NOTE
TERMINALS OF COILS SHOWN IN PICTORIAL VIEWS ABOVE, ARE TO BE LETTERED TO CORRESPOND TO SIMILARLY LETTERED TERMINALS ON THE CIRCUIT DIAGRAM


MODELS 03-5K1 to 03-5K9
Alignment, Voltage, Socket
Trimmers, Notes

STEWART-WARNER CORP.

ALIGNMENT PROCEDURE

1. Connect the output meter across the voice coil or, using a .1 mfd. condenser in series, connect between the 35L6GT plate and B— terminal shown on voltage chart.
2. Connect the ground lead of the signal generator to the chassis of the receiver through a .25 mfd. condenser and keep it connected in this manner throughout the entire alignment procedure. Failure to do this may have serious results as one side of the power line may be grounded in the signal generator. If oscillation or hum occurs, connect the ground lead of the signal generator through a .25 mfd. condenser to B— as shown on the Voltage Chart.
3. Remove the connector between terminals A and A₁, also turn the volume control to the maximum volume position and keep it in this position throughout the entire alignment procedure.
4. Push the black sliding button on the rear of the chassis to the left (viewed from the rear). This is the position labeled "RADIO."

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
200 MMFD. Mica Condenser	Trimmer lug on front section of variable condenser	455 KC.	Any point where it does not affect the signal	1-2 3-4	2nd I.F. 1st I.F.	Adjust for Maximum Output. Then repeat adjustment.
200 MMFD. Mica Condenser	Antenna Terminal "A"	1500 KC.	1500 KC.	5	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mica Condenser	Antenna Terminal "A"	1500 KC.	Tune to 1500 KC. Generator Signal	6	Broadcast Antenna (Shunt)	Adjust for Maximum Output.

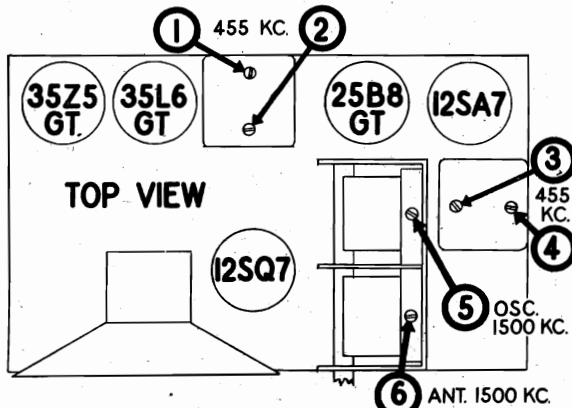

REMOTE OPERATION

The Stewart-Warner "Magician," in addition to being a high grade radio receiver, can be used to control one or more radios in the home. This is accomplished by using the triode section of the 25B8GT tube as a radio frequency oscillator and modulating the output of this oscillator with the audio frequency output of the 35L6GT tube. The D. P. D. T. switch (diagram No. 15) located on the rear of the chassis, switches the output of the 35L6GT to the speaker in the "RADIO" position, and to the remote oscillator in the "REMOTE" position.

The modulated radio frequency signal of the remote oscillator, is coupled to the power line by means of the coil, diagram No. 36. Any radio receiver in the home with a line antenna can tune in this signal. Any station tuned in with the "Magician" will be heard on the controlled receiver. The volume may be controlled with the volume control on the "Magician."

The volume control on the controlled receiver should be set to between one half and three quarters of the maximum volume position. Usually it should be turned up as far as possible without encountering excessive hum. Frequently operation can be improved or hum and noise reduced by reversing the power line plugs of the "Magician" or the controlled receiver.

The frequency of the remote oscillator can be varied from approximately 540 to 800 KC. by means of the trimmer on the back of the chassis. The frequency is set to 540 KC. at the factory, but sometimes it may be desirable to change this slightly by adjusting the slotted screw located on the back of the chassis. This adjustment must be changed if the controlled receiver does not tune to 540 KC., or if there is a station you wish to hear near 540 or 1080 KC. It is also useful for reducing whistles, although it is perfectly normal for the controlled receiver to whistle when the "Magician" is tuned to its own control frequency or to a harmonic of that frequency.

Phonograph operation may be had on either direct or remote operation by connecting the leads from a record playing to the "PHONO" terminals, turning the volume control to minimum volume position with current on, and controlling the volume by means of the volume control on the record player.

LINE ANTENNA ADAPTER


Any type of radio may be controlled by the "Magician," but if it does not have a line antenna, a Stewart-Warner Line Antenna Attachment Unit (Part No. 117643) should be used. The Line Antenna Attachment Unit allows any standard receiver to operate either with or without an external antenna. The Line Antenna Attachment Unit is also useful in isolating other radios which have a large buffer condenser and thus effectively short circuit the remote control signal on the power-line. A Line Antenna Attachment Unit connected to each radio in the home will improve remote operation to a great extent.

FOR ADJUSTMENT OF TRIMMER ON BACK OF CHASSIS, REFER TO FOURTH PARAGRAPH, UNDER HEADING "REMOTE OPERATION."

MISCELLANEOUS PARTS

Part Number	Description	List Price
117405	Back—cabinet for 03-5K3.....	\$0.08
117412	Back—cabinet for 03-5K1.....	.08
114950	Cabinet for 03-5K1 (Walnut).....	2.00
116338	Cabinet for 03-5K3 (Ivory).....	2.75
112745	Clip—coil mounting.....	.01
85321	Connector—for internal antenna.....	.01
113565	Decal. (Stewart-Warner).....	.02
117414	Decal. (Magician).....	.06
116556	Insulator—pilot light.....	.10
114867	Knob—volume for 03-5K3 (Red).....	.08
114973	Knob—tuning for 03-5K3 (Red).....	.45
114933	Knob—volume for 03-5K1 (Walnut).....	.12
114975	Knob—tuning for 03-5K1 (Walnut).....	.45
116485	Pad—asbestos.....	.03
85040	Screw—No. 6 Hex. Hd.....	Per. C .35
83624	Screw—No. 8 Hex. Hd.....	.01
116592	Shield—tube.....	.10
114876	Socket—octal base.....	.15
114982	Socket—for dial lamp.....	.20
117383	Terminal Strip (A-A ₁ , and Phono).....	.26
117411	Trimount Stud.....	.01


SOCKET VOLTAGES

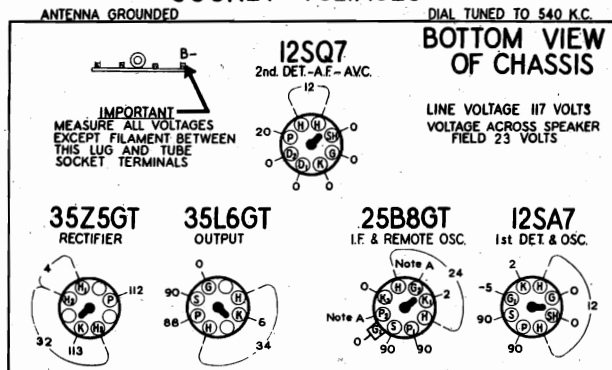

REAR OF CHASSIS


NOTE A: With switch No. 15 in "REMOTE" position, there will be a small negative voltage on G₂ and a positive reading of 88 volts on P₂.
Use a High Resistance Voltmeter of at Least 1000 Ohms per Volt

STEWART-WARNER CORP. Ch. 03-5R1, 03-5R3 to 03-5R6
 Ch. 03-5R; 07-5R1, 07-5R3 to 07-5R6
 Chassis 07-5R
 Schematic, Voltage

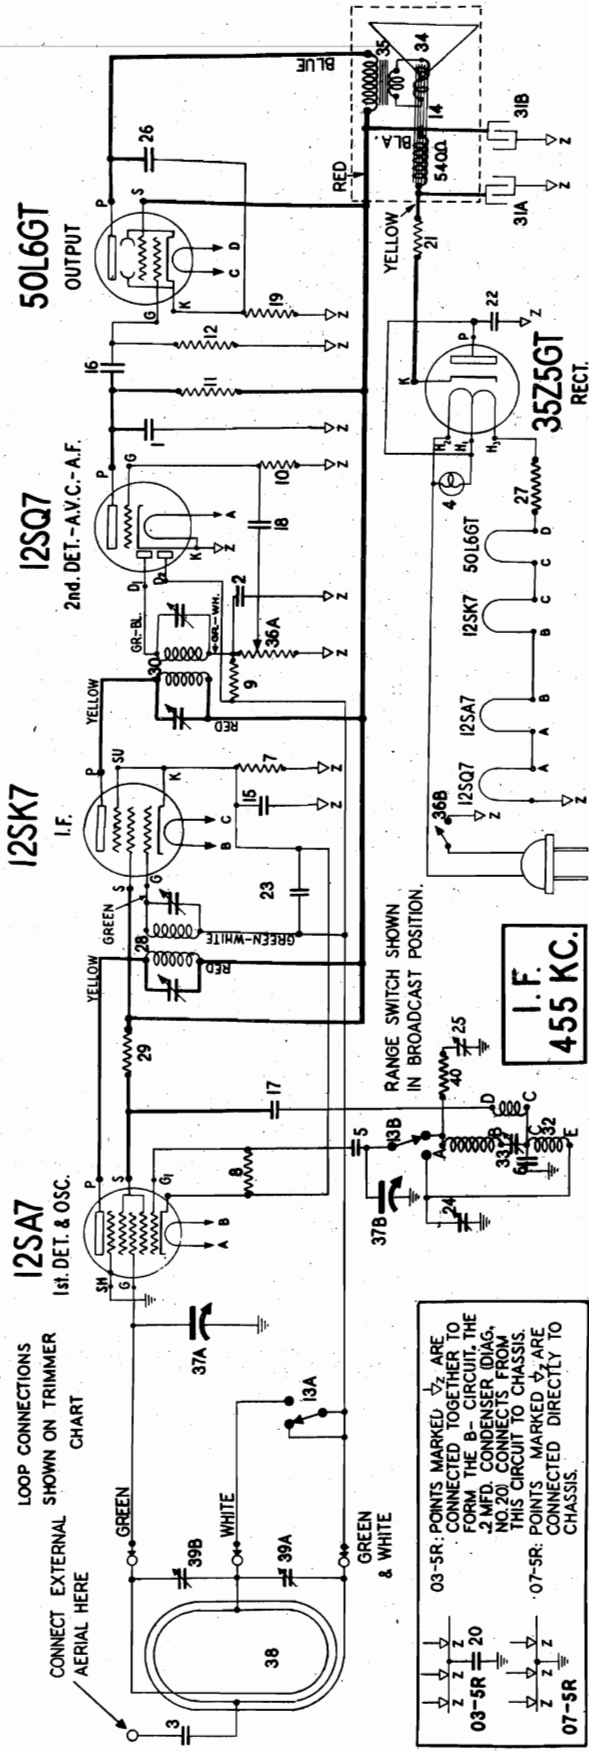

ELECTRICAL PARTS

Diagram Number	Part Number	Description	List Price
1-2	85539	Condenser—mica 250 mmf.	.20
3	85783	Condenser—mica 110 mmf.	.20
4	85783	Camp bulb—dial (magna 31)	.16
5	85526	Condenser—mica 1000 mmf.	.15
6	89273	Condenser—mica 1002 mmf.	.12
7	110556	Resistor—330 ohms 1/2 watt	.12
8	110560	Resistor—carbon 100 ohms 1/2 watt	.12
9-10	110580	Resistor—carbon 100,000 ohms 1/2 watt	.12
11	110591	Resistor—carbon 3.3 meg 1/2 watt	.12
12	112993	Resistor—carbon 680,000 ohms 1/2 watt	.12
13A-13B	114141	Switch—D.P.D.T.	.44
14	R-115081	Speaker—dynamic (4")	4.25
15	116825	Condenser—1 mid. 600 volt	.25
16-17	116840	Condenser—.01 mid. 600 volt	.15
18	116847	Condenser—.004 mid. 600 volt	.15
19	116702	Resistor—140 ohms 1/2 watt Wire Wound	.12
20	116706	Condenser—.2 mid. 600 volt (Omitted on 07-5R)	.35
21	116752	Resistor—35 ohms 1 watt Wire Wound	.15
22-23	116819	Condenser—.05 mid. 600 volt	.20
24-25	116879	Condenser—trimmer 5 to 50 mmfd.	.15
26	116883	Condenser—.02 mid. 600 volt	.15
27	117995	Resistor—20 ohms 1 watt	.16
28	118614	Transformer—1st I.F.	1.10
29	118803	Resistor—(insulated)—680 ohms 1/2 watt	.12
30	118903	Transformer—2nd I.F.	1.10
31A-31B	118911	Condenser—Electrolytic—20—20 mid., 150 Volts	.75
32A-32B-32C	119653	Coil—oscillator (chassis not stamped with letter on back)	\$.052
33	119784	Coil—oscillator (chassis stamped with "S" on back)	.52
34	118919	Condenser—padding	.40
35	R-118959	Cone & Voice coil for R-115081 speaker	1.50
36A-36B	119413	Volume control—1 meg. (with switch)	1.00
37A-37B	119005	Loop antenna (variable tuning with drum)	2.70
	119119	Loop antenna (chassis stamped with "S" on back)	.75
38	119786	Loop antenna assembly, without trimmers (03-5R4 to 03-5R6) (07-5R4 to 07-5R6) (chassis stamped "S" on back)	.75
	119309	Loop antenna (03-5R1 & 07-5R1) (03-5R3 & 07-5R3) chassis not stamped with letter	.80
	119769	Loop antenna (03-5R1 & 07-5R1) (03-5R3 & 07-5R3) (chassis stamped "S" on back)	.80
	119122	Loop trimmers complete with antenna bracket (03-5R4 to 03-5R6) (07-5R4 to 07-5R6) only	.65
39A-39B	119126	Trimmer—variable (03-5R1 to 03-5R3) (07-5R1 to 07-5R3) only	.35
40	110556	Resistor—330 ohms 1/2 watt	.12
	119653	Oscillator coil (for chassis not stamped with letter on back)	.52
	119784	Oscillator coil (for chassis stamped "S" on back)	.52

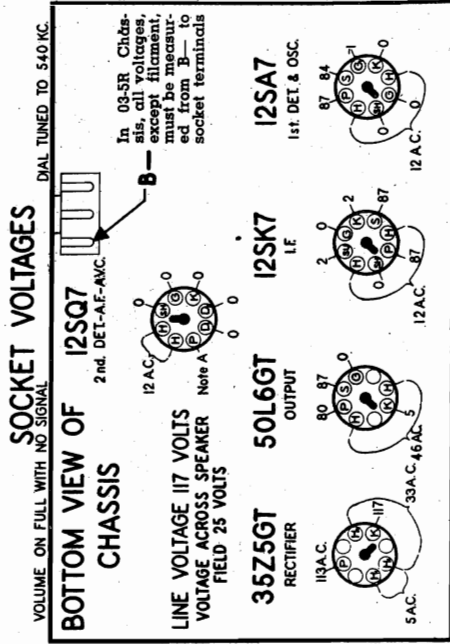

SOCKET VOLTAGES
 VOLUME ON FULL WITH NO SIGNAL
 DIAL TUNED TO 540 KC.

REAR OF CHASSIS
 Use a High Resistance Voltmeter of at Least 1000 Ohms per Volt.
NOTE A: Only a small voltage will be indicated on this plate when using a meter of 1000 ohms per volt.

LOOP CONNECTIONS SHOWN ON TRIMMER CHART
 CONNECT EXTERNAL AERIAL HERE

03-5R: POINTS MARKED WITH Z ARE CONNECTED TOGETHER TO FORM THE B—CIRCUIT. THE 2 MFD. CONDENSER DIAG. NO. 20, CONNECTS FROM THIS CIRCUIT TO CHASSIS.

07-5R: POINTS MARKED WITH Z ARE CONNECTED DIRECTLY TO CHASSIS.

MODELS 03-5R1, 03-5R3 to 03-5R6

07-5R1, 07-5R3 to 07-5R6

STEWART-WARNER CORP.

Alignment, Trimmers, Socket

ALIGNMENT PROCEDURE FOR 03-5R and 07-5R CHASSIS

FOR ALIGNMENT: An output meter and an accurately calibrated signal generator with a tuning range from 455 KC to 7 MC are required.

1. Connect the output meter across the voice coil or, using a .1 mfd. condenser in series, connect as follows:
 MODEL 03-5R: Between the 50L6GT plate and B— terminal shown on voltage chart.
 MODEL 07-5R: Between the 50L6GT plate and chassis.
2. Connect the ground lead of the signal generator to the chassis of the receiver through a .25 mfd. condenser and keep it connected in this manner throughout the entire alignment procedure. Failure to do this may have serious results as one side of the power line may be grounded in the signal generator. If oscillation or hum occurs in the model 03-5R, connect the ground lead of the signal generator through a .25 mfd. condenser to B— as shown on the Voltage Chart.
3. Turn the volume control to the maximum volume position and keep it in this position throughout the alignment procedure.
4. Be sure the loop is connected as shown below and that IT IS IN THE SAME RELATIVE POSITION IT OCCUPIES WHEN IN THE CABINET.
5. The pointer should be set to 540 KC with gang in full mesh.


Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
200 MMFD. Condenser	Lug on Rear Section of Gang Cond.	455 KC	Broadcast	Any Point Where It Does Not Affect the Signal	1-2	2nd I.F.	Adjust for Maximum Output. Then Repeat Adjustment.
					3-4	1st I.F.	
400 OHM Carbon Resistor	External Aerial Terminal	6 MC	Foreign	6 MC	5	Foreign Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 5.1 MC. If Image does not appear, Realign at 6 MC, with Trimmer Screw farther out. Recheck Image.
400 OHM Carbon Resistor	External Aerial Terminal	6 MC	Foreign	Tune to 6 MC Generator Signal	6*	Foreign Antenna	Adjust for Maximum Output.
200 MMFD. Mica Condenser	External Aerial Terminal	1500 KC	Broadcast	1500 KC	7	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mica Condenser	External Aerial Terminal	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	8*	Broadcast Antenna	Adjust for Maximum Output.
200 MMFD. Mica Condenser	External Aerial Terminal	600 KC	Broadcast	Tune to 600 KC Generator Signal	9	Broadcast Oscillator (Series)	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.

*NOTE: After chassis and loop are in cabinet, realign trimmer No. 6 at 6 MC. then trimmer No. 8 at 1500 KC. The generator lead placed near the loop will usually give sufficient signal.

FASTENING DIAL WINDOW

If the dial window on a plastic cabinet comes loose, it can easily be fastened in place with speaker cement after removing the chassis from cabinet.

Before fastening the window, it is advisable to roughen the surface of the cabinet with a file or rough sandpaper so that the cement will adhere properly.

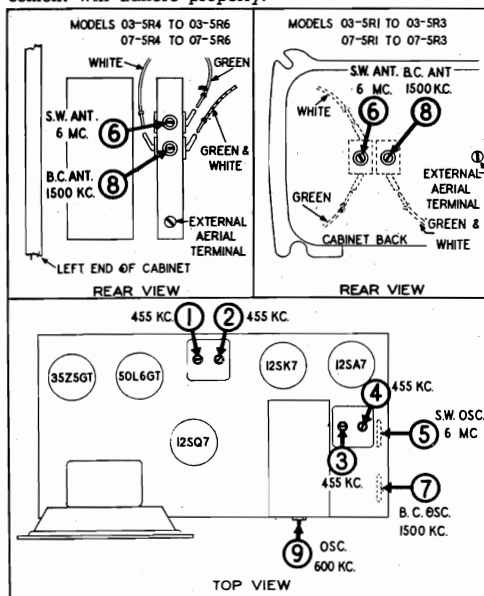

MISCELLANEOUS PARTS LIST

Part No.	Description	List Price
112745	Clip—coil mounting	\$.01
116948	Cord—dial (supplied in 6 ft. lengths)	.18
118990	Dial scale (Chassis not stamped with letter on back)	.07
119771	Dial scale (Chassis stamped "S" on back)	.07
119047	Dial window	.15
119011	Pointer	.06
83624	Screw—self tapping 8x1/4	.01
85040	Screw—No. 6 Hex. Hd.	Per C
118953	Shaft—tuning	.15
116690	Socket—small octal base	.12
119008	Socket—pilot light	.22
111981	Spring—for dial cord tension	.03

CABINETS

119036	Cabinet (walnut) complete with dial window (03-5R1, 07-5R1)	2.25
119038	Cabinet (ivory) complete with dial window (03-5R3, 07-5R3)	3.00
119150	Cabinet (03-5R4, 07-5R4)	7.20
119151	Cabinet (03-5R5, 07-5R5)	9.60
119152	Cabinet (03-5R6, 07-5R6)	9.60

CABINET BACKS

119384	Cabinet back (walnut) with ant. term. and trimmers (03-5R1, 07-5R1)	.90
119385	Cabinet back (ivory) with ant. term. and trimmer (03-5R3, 07-5R3)	.90
119172	Cabinet back only (03-5R4, 07-5R4)	1.30
119173	Cabinet back only (03-5R5, 07-5R5)	1.30

KNOBS


119013	Knob (walnut) (03-5R1, 07-5R1)	.10
119058	Knob (red) (03-5R3, 07-5R3)	.10
119175	Knob (tan) (03-5R4, 07-5R4) (03-5R5, 07-5R5) (03-5R6, 07-5R6)	.10

STEWART WARNER CORP.

MODELS 03-551, 03-552

Chassis 03-5S


Schematic, Voltage

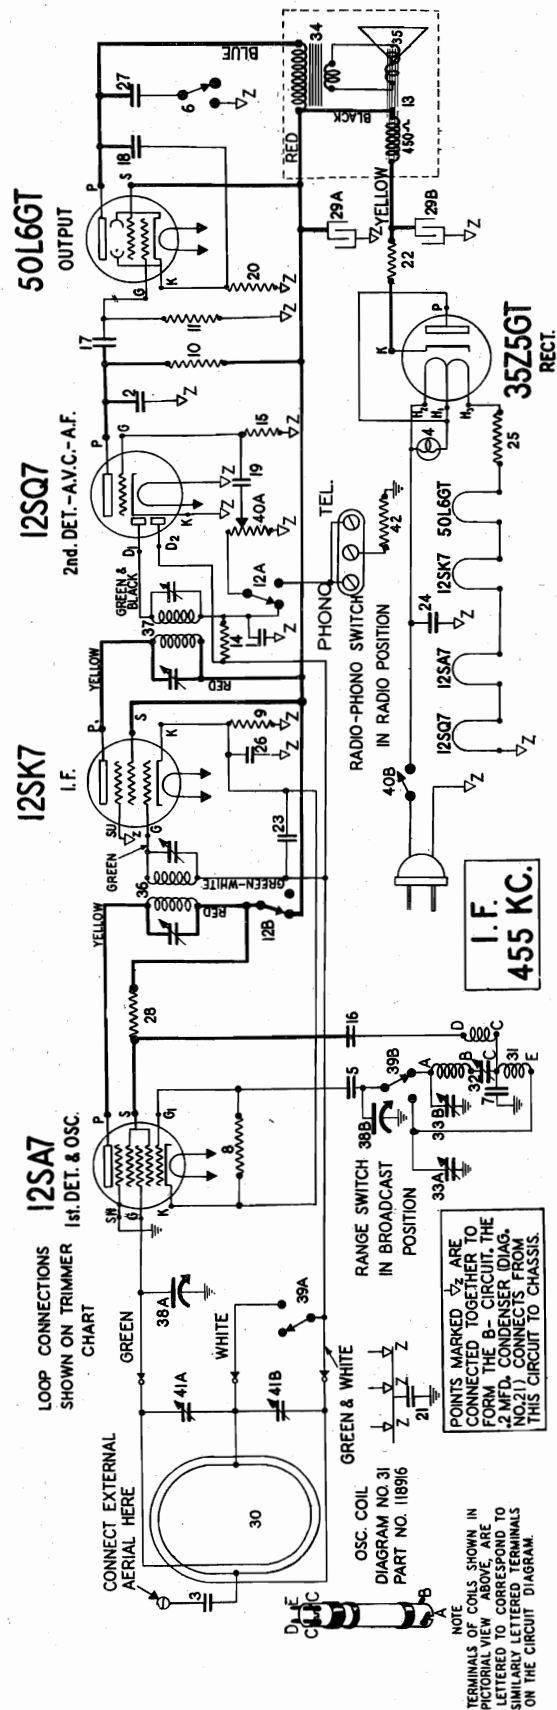

ELECTRICAL PARTS

Diagram Number	Part Number	Description	List Price
1-2	83539	Condenser—mica 260 mmfd.	\$.20
3	83783	Condenser—mica 110 mmfd.	.20
4	85296	Lamp—dial 6 to 8 volt (Mazda 51)	.16
5	85563	Condenser—mica 26 mmfd.	.15
6	88054	Switch—tone control.	.30
7	89275	Condenser—mica .002 mfd.	.40
8	110552	Resistor—carbon 47,000 ohms 1/4 watt	.12
9	110560	Resistor—carbon 100 ohms 1/4 watt	.12
10	110591	Resistor—carbon 680,000 ohms 1/4 watt.	.12
11	112993	Resistor—carbon 470,000 ohms 1/10 watt.	.12
12A-12B	114141	Switch—D.P.D.T. (Radio-Phono)	.44
13	R-115085	Speaker—dynamic (5")	4.00
14-15	116090	Resistor—insulated 3.3 megohms 1/4 watt.	.15
16-17-18	116640	Condenser—.01 mfd. 600 volt.	.15
19	116647	Condenser—.004 mfd. 600 volt.	.15
20	116702	Resistor—140 ohms 1/2 watt wire wound	.12
21	116706	Condenser—2 mfd. 600 volt.	.35
22	116752	Resistor—33 ohms 1 watt wire wound	.15
23-24	116819	Condenser—.05 mfd. 600 volt.	.20
25	117395	Resistor—20 ohms 1 watt.	.16
26	118206	Condenser—25 mfd. 600 volts.	.35
27	118487	Condenser—.07 mfd. 600 volts.	.25
28	118803	Resis or—insulated 680 ohms 1/4 watt	.12
29A-29B	118911	Condenser—electrolytic—20-20 mfd. 150 volt.	.75
30	118915	Cabinet back and loop antenna complete (03-551)	1.65
	119145	Cabinet back and loop antenna complete (03-552)	1.65
31	118916	Coil—oscillator	.52
32	118919	Condenser—padding	.40
33A-33B	118920	Trimmer strip (2 sect.)	.30
34	R-118995	Transformer—output for R-115085 speaker	1.00
35	R-118999	Cone & Voice coil for R-115085 speaker	1.70
36	119042	Transformer—1st I.F.	1.10
37	119081	Transformer—2nd I.F.	1.00
38A-38B	119094	Gang condenser & push button unit	3.80
39A-39B	119085	Range switch.	.50
40A-40B	119086	Volume control—1 meg. (with switch)	1.00
41A-41B	119126	Condenser—trimmer for loop antenna	.35
42	110553	Resistor—220,000 ohms 1/4 watt (on underwriters' approved sets only).	.12

SOCKET VOLTAGES

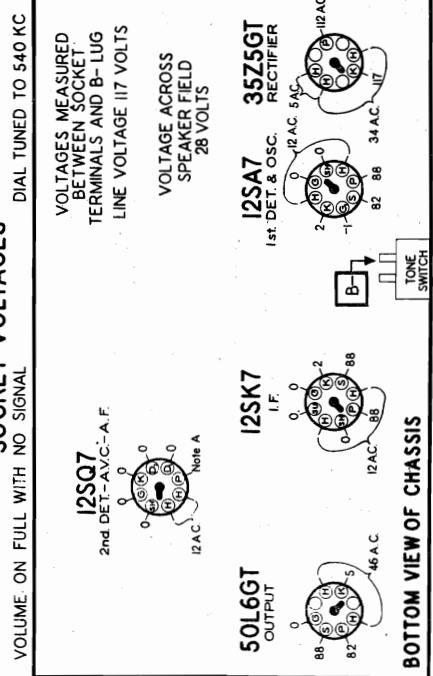

REAR OF CHASSIS

Use a High Resistance Voltmeter of at Least 1000 Ohms per Volt.
 NOTE A: The reading on this plate will be small because of the high resistance of resistor No. 10.

MODELS 03-5S1, 03-5S2
Alignment, Socket, Trimmers


STEWART-WARNER CORP.

ALIGNMENT PROCEDURE FOR 03-5S CHASSIS

1. Connect the output meter across the voice coil or from the plate of the 50L6GT output tube to B— through a .1 mfd. condenser. (The more sensitive type should be connected across the voice coil.)
2. Connect the ground lead of the signal generator to the receiver chassis through a .25 mfd. condenser.
3. Turn the volume control to the maximum volume position and keep it in this position throughout the alignment procedure.
4. Be sure the loop is properly connected at all times, AND THAT IT IS IN THE SAME RELATIVE POSITION TO THE CHASSIS AS WHEN IN THE CABINET.
5. Set the dial pointer to read 540 KC. with the gang in full mesh.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Band Switch Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
.1 MFD Condenser	Green Wire Lead to Loop	455 KC	Broadcast	Any Point Where It Does Not Affect the Signal	1-2	2nd I.F.	Adjust for Maximum Output. Then Repeat Adjustment.
					3-4	1st I.F.	
400 OHM Carbon Resistor	Antenna Terminal on Cabinet Back	6 MC	Foreign	6MC	5	Foreign Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 5.1 MC. If Image does not appear, Realign at 6 MC, with Trimmer Screw farther out. Recheck Image.
400 OHM Carbon Resistor	Antenna Terminal on Cabinet Back	6 MC	Foreign	Tune to 6MC Generator Signal	6*	Foreign Antenna	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.
200 MMFD. Mica Condenser	Antenna Terminal on Cabinet Back	1500 KC	Broadcast	1500 KC	7	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mica Condenser	Antenna Terminal on Cabinet Back	1500 KC	Broadcast	Tune to 1500 KC Generator Signal	8*	Broadcast Antenna	Adjust for Maximum Output.
200 MMFD. Mica Condenser	Antenna Terminal on Cabinet Back	600 KC	Broadcast	Tune to 600 KC Generator Signal	9	Broadcast Oscillator (Series Pad)	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.

*After chassis and loop are in cabinet, realign trimmer No. 6 at 6 MC, then trimmer No. 8 at 1500 KC., using a weak signal. The signal generator lead placed near the loop will usually give sufficient signal.

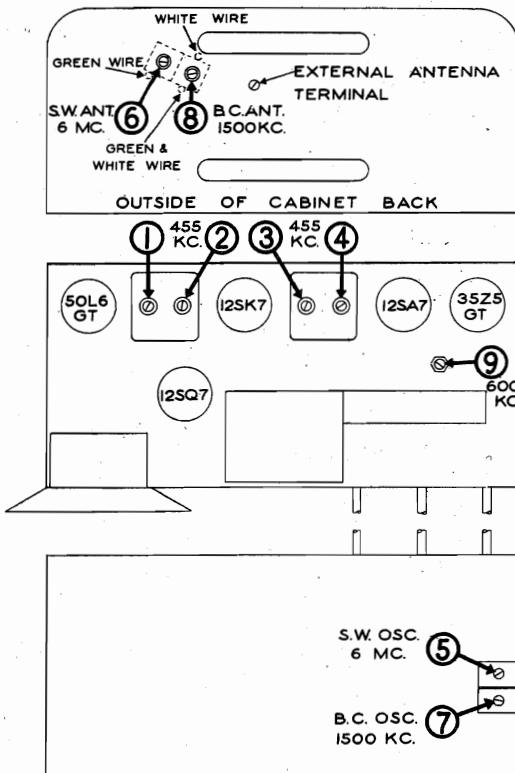

MISCELLANEOUS PARTS

Part Number	Description	List Price
118915	Cabinet Back assembly complete (03-5S1).....	\$1.65
119145	Cabinet Back assembly complete (03-5S2).....	1.65
119129	Call tabs & instruction sheets.....	.40
112745	Clip—coil mounting.....	.01
112764	Clip—dial scale retaining.....	.01
113178	Cord—dial—(supplied in 4 ft. lgths).....	.30
119090	Dial scale.....	.12
119044	Escutcheon—push button.....	.38
118913	Knob—Range switch, tuning, or volume.....	.10
118929	Pointer shaft & pulley.....	.12
119088	Pointer.....	.12
119089	Push button.....	.12
84214	Retaining ring for shafts or dial drum.....	.02
81145	Retaining ring for drive shaft.....	Per C .50
113672	Rubber grommet (on tuning shaft).....	.02
83624	Screw—self tapping 8x1/4.....	.01
85040	Screw—No. 6 Hex. Hd.....	Per C .35
114914	Screw for mounting escutcheon.....	Per Dz .15
116690	Socket—small octal base.....	.12
116793	Socket—for pilot light.....	.40
113177	Spring—dial cord tension.....	.09
119187	Spring for push button tuner.....	.05
119186	Strap (fabric), including rivets, and washers for push button tuner.....	.08
84412	Terminal strip—(Phono-Tele.).....	.03
118931	Tuning shaft.....	.15
111456	Washer—spring washer.....	Per C .50
116530	Washer for back of knobs.....	.005
116414	Window for dial.....	.25

STEWART-WARNER CORP. MODELS 03-6J1, Ch. 03-6J;
 03-6J1-Z, Ch. 03-6J-Z
 03-6L7, Ch. 03-6L
 03-6L7-Z, Ch. 03-6L-Z
 Schematic

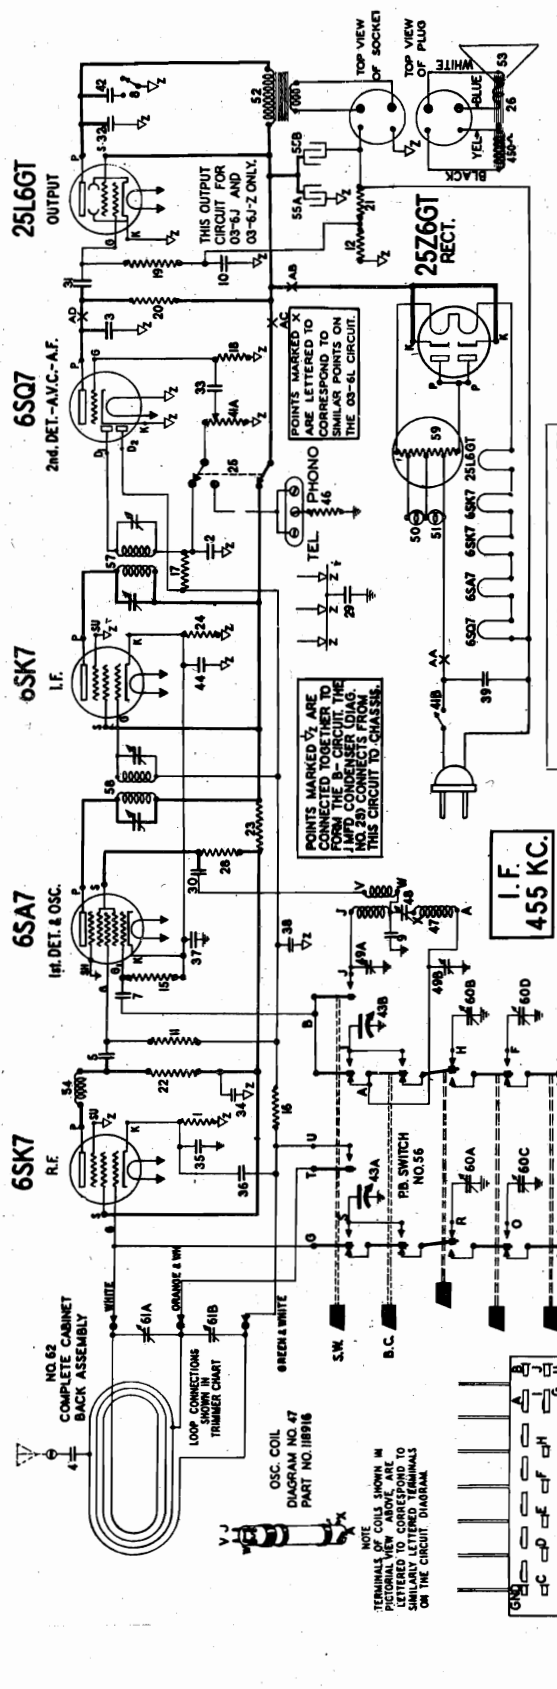



Diagram Number	Part Number	Description	Price
1	67981	Resistor-carbon 400 ohms 1/4 watt	\$.025
2-3	83539	Condenser-mica 260 mmfd.	.20
4-5	83783	Condenser-mica 110 mmfd.	.20
6	110559	Resistor-carbon 470,000 ohms 1/4 watt	.12
7	85061	Condenser-mica 51 mmfd.	.15
8	88054	Switch-tone	.30
9	89275	Condenser-mica .002 mfd.	.40
10	1110377	Condenser-10 mfd. 35 volt (03-6L & 03-6L-Z only)	.80
11	116625	Condenser-1 mfd. 600 volt (03-6J & 03-6J-Z only)	.25
12	110552	Resistor-carbon 47,000 ohms 1/4 watt	.12
13-14	110553	Resistor-carbon 220,000 ohms 1/4 watt (03-6L & 03-6L-Z only)	.12
15	110564	Resistor-carbon 100,000 ohms 1/4 watt	.12
16	110559	Resistor-carbon 470,000 ohms 1/4 watt	.12
17-18	110580	Resistor-carbon 3 meg. 1/4 watt	.12
19	110584	Resistor-carbon 330,000 ohms 1/4 watt (03-6J & 03-6J-Z only)	.12
20-21	110591	Resistor-carbon 680,000 ohms 1/4 watt (03-6J & 03-6J-Z only)	.12
22	112852	Resistor-carbon 3,300 ohms 1/4 watt	.10
23	112964	Resistor-carbon 1,500 ohms 1/4 watt	.15
24	112994	Resistor-carbon 220 ohms 1/4 watt	.44
25	114141	Switch-D.P.D.T.	.12
26	R-115083	Speaker-dynamic (5") (03-6J & 03-6J-Z only)	4.00
27	M-115087	Speaker-dynamic (8") (03-6L7 & 03-6L7-Z)	7.50
28	116068	Resistor-carbon 680 ohms 1/4 watt	.12
29	116825	Condenser-.01 mfd. 600 volt	.15
30-31-32	116840	Condenser-.004 mfd. 600 volt	.15
33	116847	Condenser-.2 mfd. 600 volt	.35
34	116706	Condenser-.05 mfd. 600 volt	.20
35 to 39	116819	Loop antenna & trimmer assembly	1.65

PUSH BUTTON TRIMMER RANGES

DIAGRAM NO.	03-6J & 03-6L	03-6J-Z & 03-6L-Z
60A-60B	HIGH	HIGH
60C-60D	MED.	HIGH
60E-60F	LOW	MED.
60G-60H	LOW	MED.
60I-60J	LOW	LOW

SEE PARTS LIST BELOW FOR RANGES IN KILOCYCLES

40	Condenser-.05 mfd. 600 volt (03-6L & 03-6L-Z only)	\$.20
41A-41B	Volume control-1 megohm (with switch)	1.10
42	Condenser-.04 mfd. 600 volts	.20
43A-43B	Condenser-tuning (with drum)	3.00
44	Condenser-.25 mfd. 600 volts	.35
45	Condenser-.5 mfd. 150 volts (03-6L & 03-6L-Z only)	.50
46	Resistors-220,000 ohms 1/4 watt (on Under-writers' approved sets)	.12
47	Coil-oscillator	.52
48	Condenser-podding	.40
49A-49B	Trimmer strip (2 section)	.30
50-51	Lamp-dial 6.3 volts 25 amps	.15
52	Transformer-output (03-6J & 03-6J-Z only)	1.00
53	Cone & Voice coil for R-115083 speaker	1.70
54	Coil-R.F.	1.28
55A-55B	Condenser-electrolytic-20-40 mfd. 150 volt	1.00
56	Switch-push button	3.00
57	Transformer-1st I.F.	1.15
58	Transformer-2nd I.F.	1.10
59	Ballast tube	.75
60A-60J	Push button trimmer (Low 540 to 1000 KC)	.24
	Push button trimmer (Med. 750 to 1375 KC)	.24
	Push button trimmer (High 980 to 1550 KC)	.24
61A-61B	Trimmer condenser-2 section	.35
62	Cabinet back & loop antenna assembly (03-6J1 & 03-6J1-Z)	1.95
	Loop antenna & trimmer assembly (03-6L7 & 03-6L7-Z)	1.65

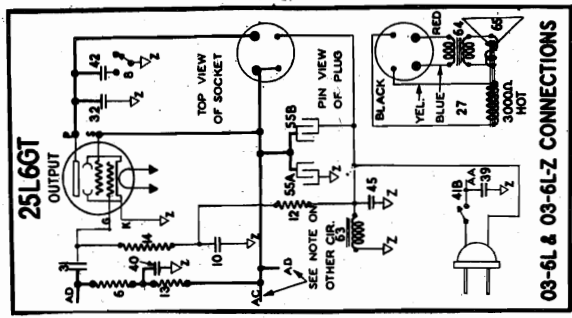

MODELS 03-6J1, 03-6J1-Z, 03-6L7, 03-6L7-Z STEWART-WARNER CORP.

Alignment, Voltage, Trimmers

Socket 03-6J, 03-6J-Z, 03-6L, and 03-6L-Z CHASSIS

ALIGNMENT PROCEDURE


FOR ALIGNMENT: An output meter and an accurately calibrated signal generator are required.

1. Connect the output meter across the voice coil, or using a .1 mfd. condenser in series connect between the 25L6GT tube plate and B— as shown on the voltage chart.
2. Connect the ground lead of the signal generator through a .25 mfd. condenser to B— as shown on the voltage chart.
3. Connect the loop antenna to the radio, being sure to connect the wires to the proper receptacles on the loop antenna as shown in drawing below.
4. With the gang condenser in full mesh, the pointer should be in a horizontal position. If it is not, it should be moved to this position before alignment.

Dummy Ant. in Series with Sig. Gen.	Connection of Sig. Generator Output to Receiver	Signal Generator Frequency	Push Button Position	Receiver Dial Setting	Trimmer Number	Trimmer Description	Type of Adjustment
200 MMFD. Mica Condenser	Lug on Rear Section of Variable Condenser	455 KC	"Broadcast" Button Pushed In	Any Point Where It Does Not Affect the Signal	1-2	2nd I.F.	Adjust for Maximum Output. Then repeat adjustment.
					3-4	1st I.F.	
200 MMFD. Mica Condenser	External Aerial Terminal	6 MC	"Short Wave" Button Pushed In	6 MC	5	Short Wave Oscillator	Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 5.1 MC. If Image does not appear, Realign at 6 MC, with Trimmer Screw farther out. Recheck Image.
200 MMFD. Mica Condenser	External Aerial Terminal	6 MC	"Short Wave" Button Pushed In	Tune to 6 MC Generator Signal	6*	Short Wave Antenna	Adjust for Maximum Output.
200 MMFD. Mica Condenser	External Aerial Terminal	1500 KC	"Broadcast" Button Pushed In	1500 KC	7*	Broadcast Oscillator (Shunt)	Adjust for Maximum Output.
200 MMFD. Mica Condenser	External Aerial Terminal	1500 KC	"Broadcast" Button Pushed In	Tune to 1500 KC Generator Signal	8	Broadcast Antenna	Adjust for Maximum Output.
200 MMFD. Mica Condenser	External Aerial Terminal	600 KC	"Broadcast" Button Pushed In	Tune to 600 KC Generator Signal	9*	Broadcast Oscillator (Series)	Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.

*NOTE: When making these adjustments, the loop should be in the same relative position to the chassis as when mounted in the cabinet. Adjustments 6 & 8 should be repeated after the set and loop have been replaced in the cabinet.


VOLUME ON FULL WITH NO SIGNAL DIAL TUNED TO 540 KC.

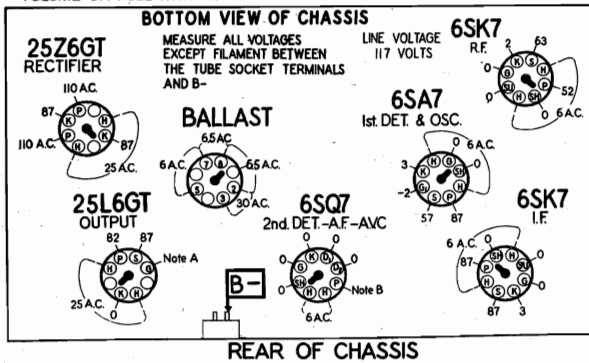

These readings taken using a voltmeter of 1000 ohms per volt.

NOTE A: The bias on the 25L6GT grid is: on 03-6J chassis: -4 volts measured across resistor No. 12; on 03-6L chassis: -5 volts measured across choke No. 63.

NOTE B: Due to the high resistance of resistors No. 20, 6, and 13, only a small voltage will be read at the plate of the 6SQ7 when using a voltmeter having a resistance of 1000 ohms per volt.

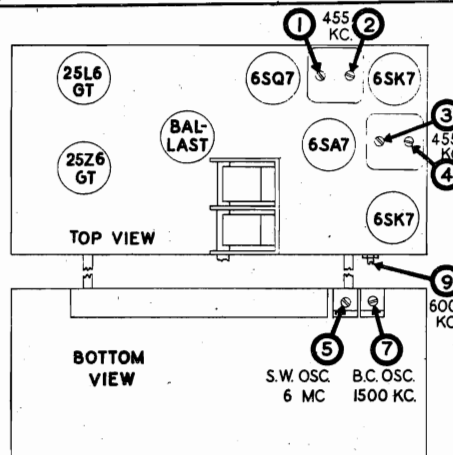



Part Number	Description	List Price
119168	Cabinet—plastic for 03-6J1 & 03-6J1-Z.....	\$7.20
119143	Cabinet back & loop assembly (03-6J1 & 03-6J1-Z)....	1.95
119145	Cabinet back & loop assembly (03-6L7 & 03-6L7-Z)....	1.65
119171	Call tabs & instructions.....	.35
114955	Clamp—for dial cord.....	.01
112745	Clip—coil mounting.....	.01
112794	Clip—dial scale retaining.....	.01
116948	Cord—dial drive (supplied in 6 ft. lengths).....	.18
119261	Cover plate for trimmer hole (03-6L7 & 03-6L7-Z)....	.15

119120	Dial scale.....	.25
116810	Dial window (03-6J1 & 03-6J1-Z).....	.35
119208	Dial escutcheon (03-6L7 & 03-6L7-Z).....	.80
119166	Knob—push button.....	.08
119167	Knob—tuning or volume.....	.08
116902	Plate for trimmer hole (03-6J1 & 03-6J1-Z).....	.12
116883	Pointer.....	.16
81145	Retaining ring—for drive shaft.....	Per C .50

MODEL R-1781
Alignment, Trimmers, Socket

STEWART-WARNER CORP.

CHASSIS 01-6G, 01-6G-Z
Drive Cord Data

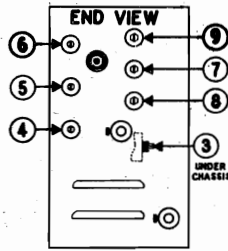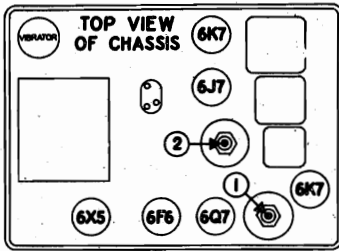

TRIMMER LOCATIONS

Trimmer Number	Alignment Frequency
1	252 KC.
2	252 KC.
3	252 KC.
4	800 KC.
5	600 KC.
6	600 KC.
7	1400 KC.
8	1400 KC.
9	1400 KC.

ALIGNMENT

The equipment necessary for proper alignment of this receiver consists of a good modulated oscillator, a sensitive output meter and an insulated screw driver.

The test oscillator must be accurately calibrated and its output must be adjustable to give a very weak signal which will not actuate the A.V.C. of the receiver. The insulated screw driver should be made of fibre or bakelite although a small metal blade inserted at the tip is permissible. A long blade in an insulated handle is not suitable and will prevent accurate adjustment.

An output meter with a full scale reading of four volts or less is desirable so that it can be connected directly across the voice coil terminals of the speaker. Any A.C. voltmeter with such a range will be satisfactory. If your output meter is not equipped with such a low scale, it should be connected from the plate of the output tube to chassis.

During alignment, the volume control should be turned full on and the receiver case should be in place. The front cover can be removed to permit the connection of the output meter. Keep rear cover in place.

I.F. ALIGNMENT

- 1- (a) Set the test oscillator to exactly 252 KC.
- (b) Connect the output terminal of the oscillator to the grid of the 6J7 tube through a .1 to .5 mfd. condenser. Do not remove the grid lead from the tube.
- (c) Connect the grounded output lead of the oscillator to the receiver case.
- (d) Turn the gang condenser of the receiver to any point where it has no tuning effect on the 252 KC. signal.
- (e) Adjust trimmers 1, 2 and 3 for maximum output. Trimmer No. 3 is located under the chassis but can be reached through a hole in the rear cover.
- (f) Repeat the adjust of trimmers 1, 2 and 3.

R.F. CALIBRATION AND ALIGNMENT

This receiver employs an unusual circuit which allows the antenna, the R.F. and the oscillator circuits to be adjusted near the low frequency end of the dial in addition to the high frequency end. To get maximum sensitivity and accurate dial calibration, the following procedure must be followed exactly.

2- Low Frequency Alignment.

- (a) Connect the output of the test oscillator to the antenna socket of the receiver through a 200 mfd. (.0002 mfd.) mica condenser. This condenser must not be omitted or alignment will be incorrect.
 - (b) Connect the control head to the receiver, then turn the tuning knob until the variable condenser plates are in full mesh.
- Adjust the dial calibration so that the dial pointer is on the last dial calibration mark below 550 KC. The relative position of the control head, the control shaft, and the receiver must remain unchanged until the alignment is completed.

(c) Turn the tuning knob until the dial pointer indicates that the set is tuned to 600 KC.

(d) Set the test oscillator at exactly 600 KC.

(e) Adjust trimmer No. 4 for maximum output. The adjustment of this trimmer must be made with an insulated screw driver having no more than a small metal tip.

(f) Return the receiver to the oscillator signal.

(g) Adjust trimmers 5 and 6 for maximum output.

3- High Frequency Alignment.

- (a) Tune the receiver to exactly 1400 KC. on the tuning dial.
- (b) Adjust the test oscillator to exactly 1400 KC.
- (c) Adjust trimmer No. 7 for maximum output.
- (d) Carefully tune the receiver to the 1400 KC. oscillator signal.
- (e) Adjust trimmers 8 and 9 for maximum output.

4- Final Adjustment.

(a) Repeat operations 2 (c) to (g) and 3 (a) to (e) in the same order until no further improvement in output can be made. Adjustments must be repeated at least once and if the set is badly out of alignment, a second repetition is necessary.

ANTENNA COMPENSATOR AJUSTMENT

The antenna compensator must be adjusted after the installation of the receiver has been completed in order to match the receiver to the antenna. If this adjustment is made for an old under-car aerial, care must be taken that the aerial and its insulators are clean and free from mud or slush which would alter the capacity and resistance. More accurate adjustment is possible if the aerial and its insulators are washed and allowed to dry before attempting adjustment.


The adjustment is to be made as follows:

- (a) Carefully tune the receiver to some fairly weak signal between 550 and 650 KC.
- (b) Remove the chrome plated button adjacent to the antenna jack. (Covering trimmer No. 8).
- (c) Adjust the antenna compensator, trimmer No. 6 for maximum volume. Carefully retune the receiver to the signal, then again adjust the compensator.

Do not attempt to adjust any of the other trimmers on stations at this time or the entire alignment will be upset since an oscillator must be used for all adjustments except the antenna compensator.

Note: If you do not get a peak when adjusting this trimmer and if the car has a built-in antenna of unusually high capacity such as an insulated running board or insulated metal roof, it will be necessary to insert a special plug-in adapter in series with the antenna lead. These adapters are made in two types and can be obtained from United Motors Service Stations. For aerials having a capacity between 400 and 900 micro-microfarads (insulated running boards), the adapter United Motors Part No. 7231410 (marked with red band) should be used. For aerials between 900 and 2,000 micro-microfarads (metal roof tops) their Part No. 1210915 should be used.

REPLACING DIAL CORDS
01-6G & 01-6G-Z

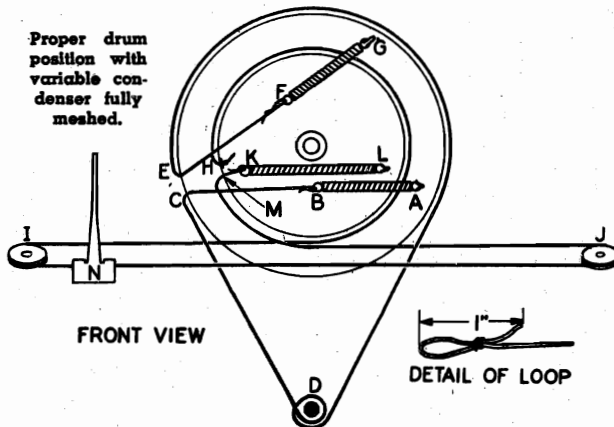

TO REPLACE THE TUNING DRIVE CORD


1. 25½ inches of dial drive cord (part No. 117057) are required. Make a one-inch loop in each end of this cord, using a dial cord clip, (part No. 114955) (See sketch above for detail of loop). A knot may be tied if a slightly smaller loop is made.
2. Fasten one end of a tension spring (part No. 113177) to the loop at point B and the other end of the spring to tab A.
3. Pass the other end of the dial cord through hole C in the outer drum.
4. Make one and a half turns of the cord about tuning shaft D.
5. Continue the cord counter-clockwise about the outer drum and pass it through hole E.
6. Fasten a tension spring (part No. 113177) to the other loop of the cord at point F and fasten the spring to the tab G.

TO REPLACE THE POINTER DRIVE CORD

1. 34¼ inches of pointer drive cord, (part No. 116948) are required. Fasten an eyelet (part No. 88348) at a point one-half inch from one end of this cord.
2. Pass the other end of the cord outward through hole H in the smaller drum.
3. Fashion a one-inch loop at outer end of the pointer cord (See detail of loop in illustration), using a dial cord clip (part No. 114955), or tie a knot using a smaller loop.
4. Continue the cord clockwise around the smaller drum and around pulley I from the rear to the front.
5. Go from pulley I around the front of pulley J and clockwise around the smaller drum to hole M.
6. Pass the loop through hole M and fasten it to one end of a tension spring (part No. 113177) at point K, the other end of the spring then being fastened to point L.
7. Clip the dial pointer to the cord. With the drum in the position shown, and with the gang condenser in full mesh, fasten the pointer so that it is at a point 2¼" from the left end of the brown dial plate.

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 400H, 400HB
400N, 400NB, 400S,
400SB
Schematic, Chassis
Wiring

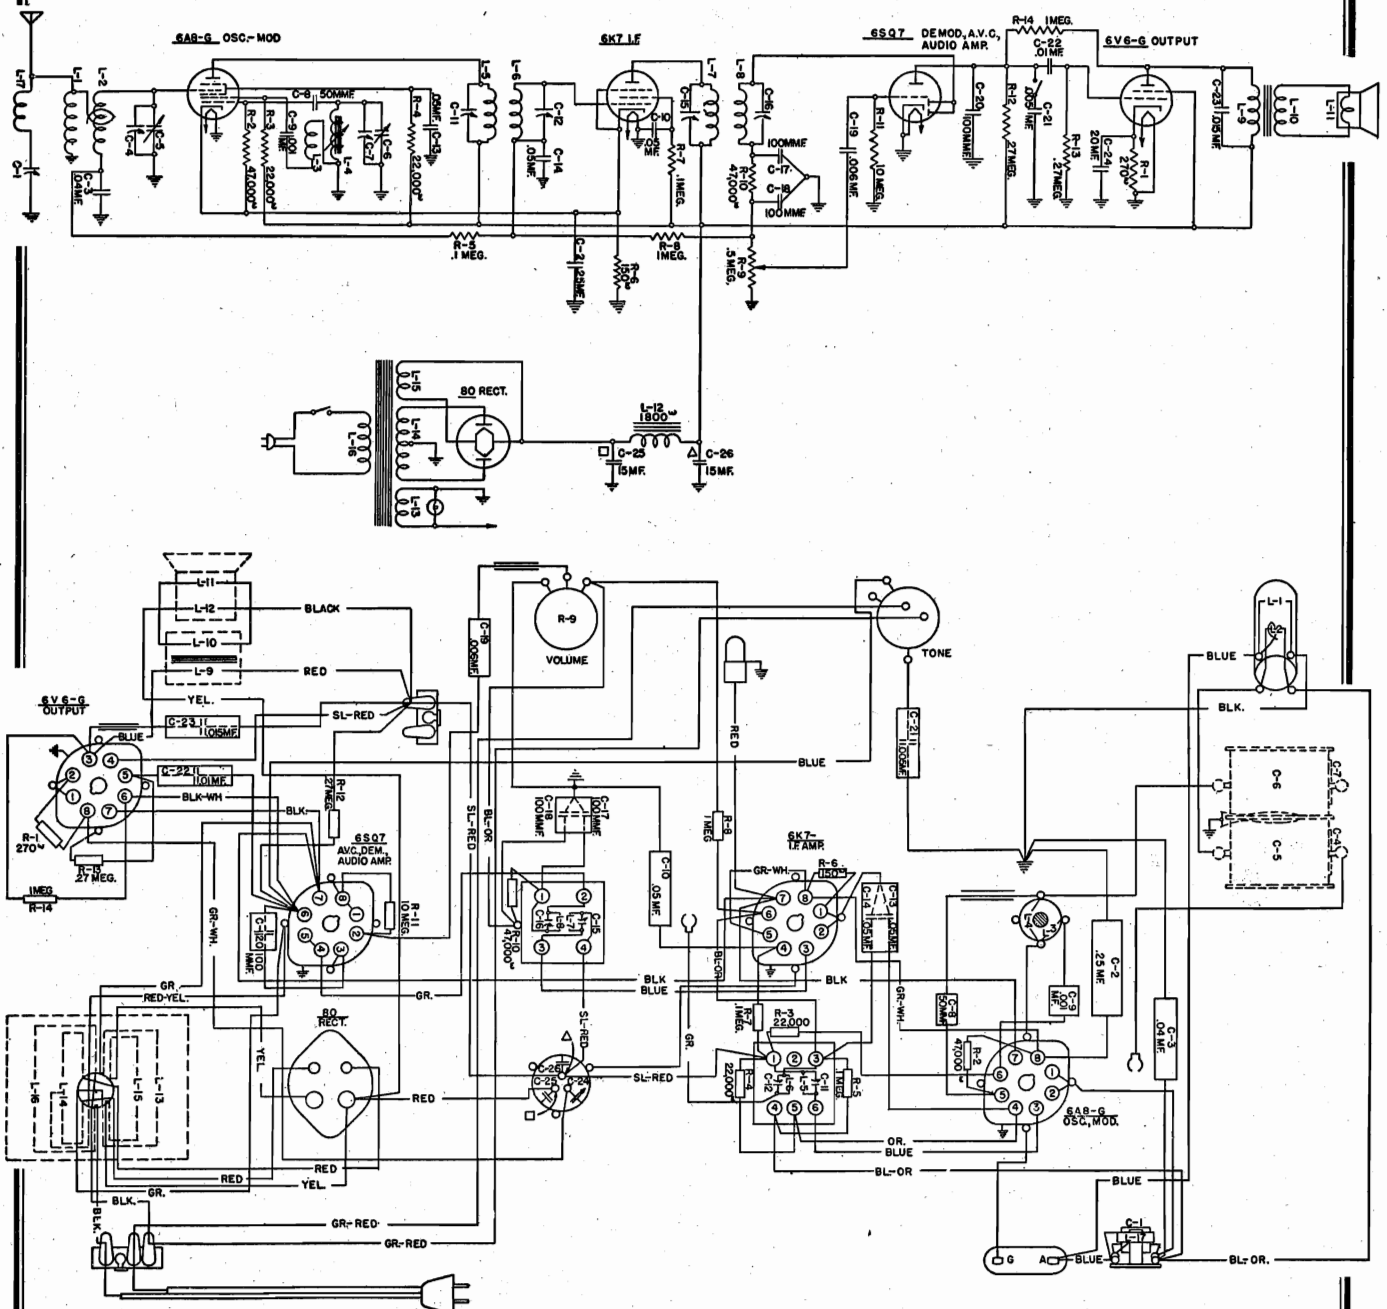

IDENTIFICATION TABLE

Model	Input Power Frequency	Chassis	Cabinet	Speaker
400-H	50-60 Cycles	30107	30109	30137
400-HB	25-60 Cycles	30108	30109	30137
400-N	50-60 Cycles	30107	30547	30137
400-NB	25-60 Cycles	30108	30547	30137
400-S	50-60 Cycles	30107	30548	30137
400-SB	25-60 Cycles	30108	30548	30137


Input Power Rating 37 Watts
 Intermediate Frequency 455 Kilocycles
 Speaker Voice Coil Impedance at 400 Cycles Approximately 5 Ohms
 Speaker Field Coil Resistance 1800 Ohms

MODELS 400H, 400HB
400N, 400NB, 400S
400SB

STROMBERG-CARLSON TEL. MFG. CO.

MODEL 405H
Alignment

Alignment, Voltage,
Socket, Trimmers
Resistance

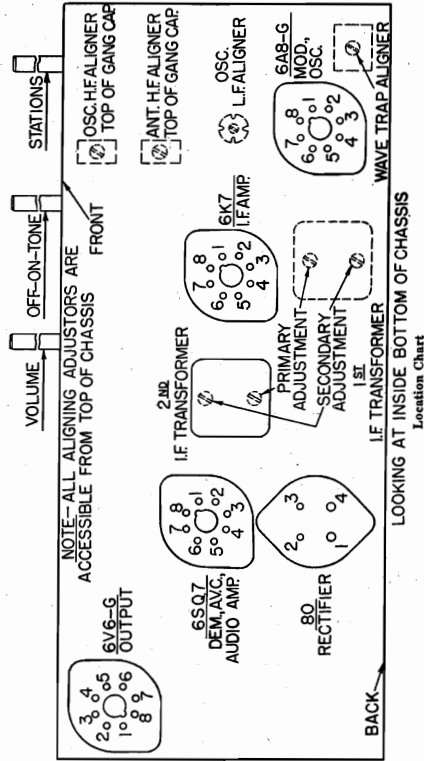

Aligning Procedure (follow this order exactly)

I. Dial Pointer Adjustment
With the plates of the gang tuning capacitor fully engaged, set the dial pointer directly on the upper black line at the low frequency end of the dial.

II. Intermediate Frequency Adjustments

1. Tune set to extreme low frequency position. (.54 megacycles on dial scale).
2. Connect the ground terminal of the signal generator to the ground binding post of the receiver.
3. Introduce a modulated signal of 455 kilocycles, using a 0.1 microfarad capacitor in series with the lead from the signal generator to the grid cap of the 6A8G tube. (Do not remove the grid clip from this tube.)
4. Adjust the I. F. Aligners for maximum output in the following order:
 - a. Secondary of Second I. F. Transformer.
 - b. Primary of Second I. F. Transformer.
 - c. Secondary of First I. F. Transformer.
 - d. Primary of First I. F. Transformer.

III. Wave Trap Adjustment

1. Tune set to 1,000 kilocycles.
2. Leave the ground terminal of the signal generator connected to the ground binding post of the receiver.
3. Introduce a fairly strong modulated signal of 455 kilocycles to the antenna binding post using a 200 minif. capacitor in series with the lead from the signal generator.
4. Adjust the wave trap aligner for minimum signal.

IV. Radio Frequency Adjustments

- (Leave the signal generator connected in the same way as for the wave trap alignment.)
1. Set the signal generator's frequency and the receiver's tuning dial to 0.6 megacycles.
 2. Adjust the iron core in the oscillator coil for maximum signal.
 3. Set the signal generator's frequency and the receiver's tuning dial to 1.5 megacycles.
 4. Adjust the two aligning capacitors on the variable capacitor for maximum signal and repeat operation 2.
 5. Reset both the signal generator's frequency and the receiver's tuning dial to 0.6 megacycles and repeat operation 2.
 6. Reset both the signal generator's frequency and the receiver's tuning dial to 1.5 megacycles and repeat operation 4.

NOTE. Operation 5 and 6 may be repeated as often as necessary to obtain maximum sensitivity.

Take all D. C. voltage readings on the 500 volt scale except where an asterisk appears. Take all readings with chassis operating and tuned to 1000 Kc.—no signal. Use a line voltage of 120 volts or make allowance for the variation. Read from indicated socket terminals to chassis base. A. C. Voltages are indicated by italics.

Tube	Circuit	Terminals of Sockets								Heater Voltages Between Heater Terminals		
		1	2	3	4	5	6	7	8	Socket Terminal Numbers	Volts A. C.	
6A8G	Mod.—Osc.	0	0	+175	+82	—	+100	6.3	+2*	2-7	6.3	
6K7	I. F. Amp.	0	0	+175	+65	+2*	—	6.3	+2*	2-7	6.3	
6S07	Dem.—A. V. C. —Audio	—	0	0	0	0	+75	6.3	0	7-8	6.3	
6V6G	Output	—	0	0	+160	+175	0	+75	6.3	+8*	2-7	6.3
80	Rectifier	—	+265	255	+265	—	—	5	—	1-4	5	

*Read on lowest possible scale of voltmeter.

CONTINUITY TEST

CAUTION: Remove all tubes and disconnect the receiver from the power supply before making continuity test.

Use a good meter capable of measuring accurately up to several megohms. The resistances given are often approximate, owing to Electrolytic Capacitors in the circuit. When this is the case, be sure to reverse the test leads and read the highest resistance. Read from indicated terminals to chassis base except when an asterisk appears.

Tube	Circuit	Cap	1	2	3	4	5	6	7	8
6A8G	Mod.—Osc.	1.5M	S	S	*1800†	*24000†	47000†	24000†	S	150†
6K7	I. F. Amp.	1.5M	S	S	*1800†	*100000†	150†	1.5M	S	150†
6S07	Dem.—A. V. C. —Audio	—	S	10M	S	500000†	500000†	*250000†	S	S
6V6G	Output	—	S	S	*2200†	*1800†	300000†	*250000†	S	270†

†M—Megohms; †—ohms; M—megohms; S—short; O—open. *These readings should be made from indicated terminals to terminal No. 1 of the rectifier socket (type 89 tube).

Other Tests Not Shown on Chart

Antenna terminal to chassis base; 70 ohms.
Ground terminal to chassis base; "short".
Between terminals of A. C. plug; "open" with A. C. switch open; 17 ohms with A. C. switch closed.
R. F. coil tests, measured directly across R. F. coil terminals (see wiring diagram on Page 5 for location of R. F. coil terminals): L1—70 ohms; L2—4 ohms; L3—3 ohms; L4—4 ohms; L17—70 ohms.

ALIGNING INFORMATION

NEVER REALIGN UNLESS ABSOLUTELY NECESSARY.

Use a good modulated signal generator (test oscillator) with variable output voltage and a sensitive output meter across the voice coil of the speaker.

Always align using the smallest possible input from the signal generator (except when wave trap adjustments are made). A strong signal makes adjustments inaccurate.

Always have receiver volume control "full on".

Never align with tone control in bass position.


See Location Chart above for location of all the aligning adjustment screws.

STROMBERG-CARLSON TEL. MFG. CO.

MODEL 402
Chassis 30990
Schematic
Chassis Wiring


CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION OF
VOLUME VIII.

Intermediate Frequency 455 Kilocycles
Permanent Magnet Speaker Voice Coil
Impedance at 400 Cycles.....
Approximately 2.5 Ohms

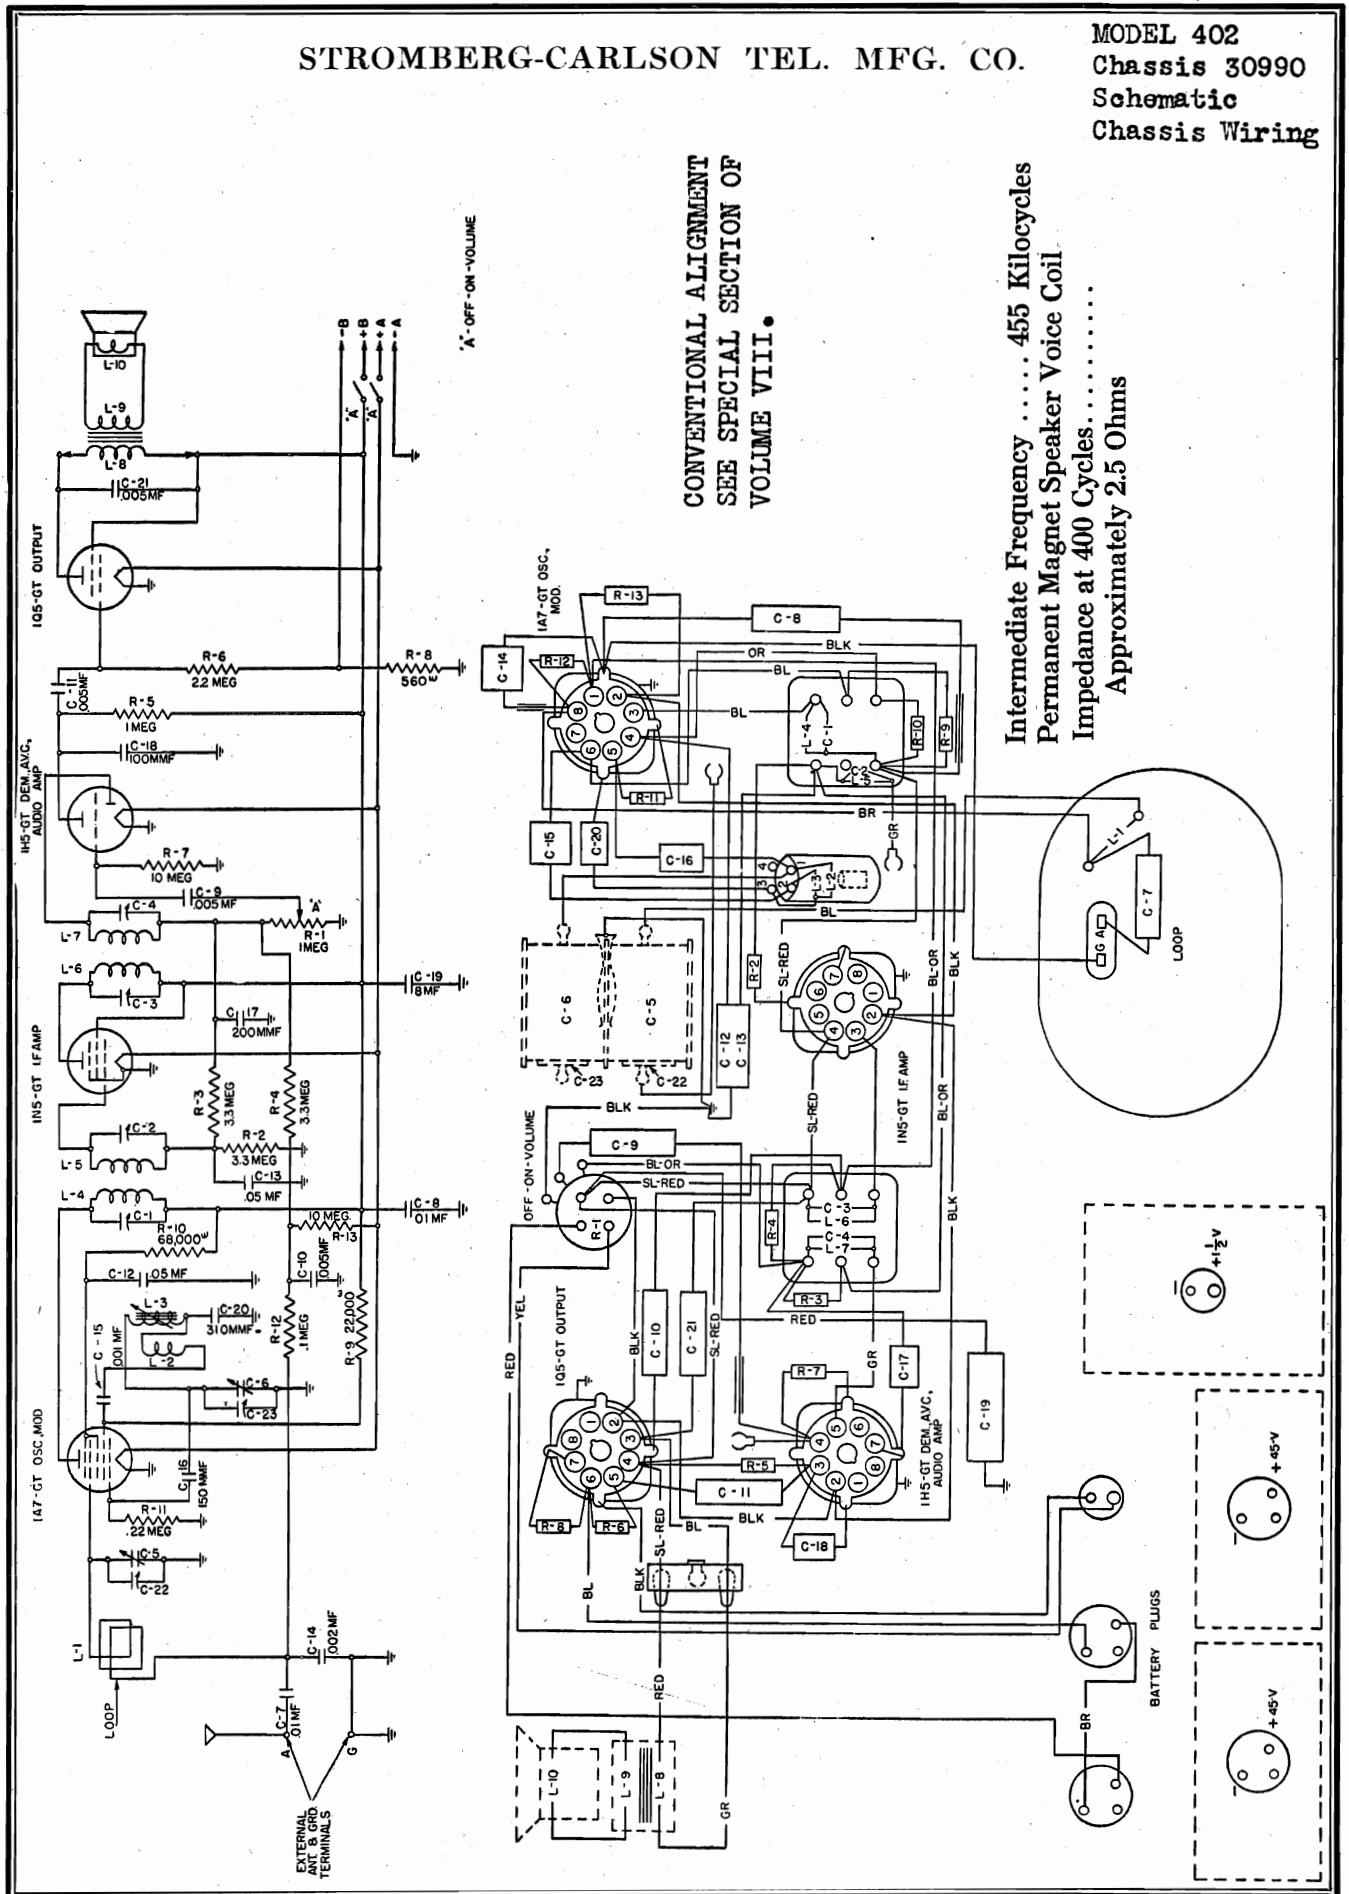


MODEL 402
Voltage, Socket
Trimmers, Chassis
Resistance

STROMBERG-CARLSON TEL. MFG. CO.

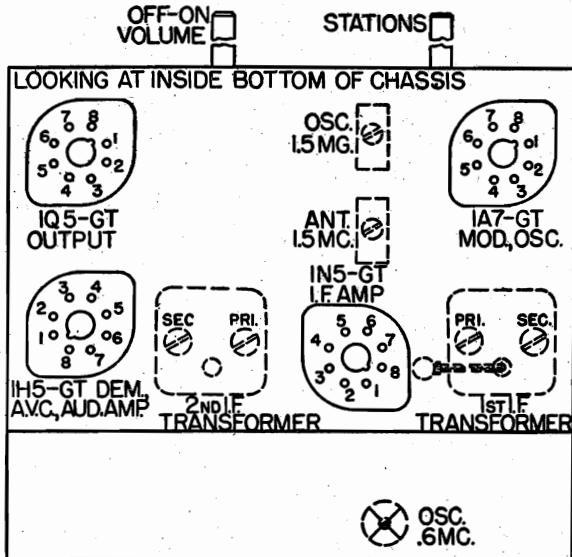

Location Chart

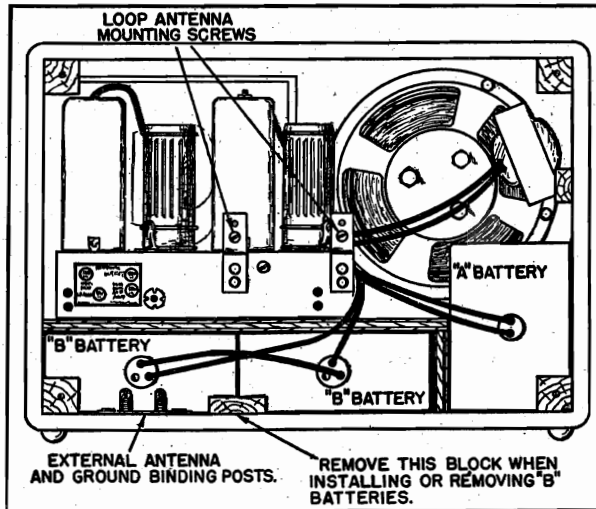

View Showing Installation of Batteries (With Back of Cabinet and Loop Antenna Removed)

Tube	Circuit	Cap	Terminals of Sockets								Heater Voltages Between Heater Terminals	
			1	2	3	4	5	6	7	8	Socket Terminal Numbers	Volts
1A7GT	Mod.—Osc.	0	0	+1.4*	+84	+35	-3*	+58	0	0	2-7	+1.4*
1N5GT	I. F. Amp.	0	0	+1.4*	+84	+84	0	0	0	0	2-7	+1.4*
1H5GT	Dem.—A. V. C. —Audio	0	0	+1.4*	+30	0	0	0	0	0	2-7	+1.4*
1Q5GT	Output	—	0	+1.4*	+82	+84	0	+5.5*	0	0	2-7	+1.4*

*Read on lowest possible scale of voltmeter.

CONTINUITY TEST

CAUTION: Remove all tubes and disconnect the receiver from the batteries before making continuity test.

Use a good meter capable of measuring accurately up to several megohms.

The resistances given are often approximate, owing to Electrolytic Capacitors in the circuit. When this is the case, be sure to reverse the test leads and read the highest resistance.

Read from indicated terminals to chassis base except when an asterisk appears.

Tube	Circuit	Cap	TERMINALS OF SOCKETS							
			1	2	3	4	5	6	7	8
1A7GT	Mod.—Osc.	4M	4M	10M	1M	1M	22000Ω	1M	S	4M
1N5GT	I. F. Amp.	1.5M	0	10M	1M	1M	0	0	S	0
1H5GT	Dem.—A. V. C. —Audio	10M	0	10M	3M	10M	800000Ω	0	S	0
1Q5GT	Output	—	0	10M	1M	1M	2.2M	500Ω	S	0

Symbols used are as follows: Ω—ohms; M—megohms; S—short; 0—open.

Other Tests Not Shown on Chart


Antenna terminal to chassis base; "open".

Ground terminal to chassis base; "short".

R. F. coil tests, measured directly across R. F. coil terminals (see wiring diagram for location of R. F. coil terminals): L1—.8 ohm; L2—7 ohms; L3—3 ohms.

STROMBERG-CARLSON TEL. MFG. CO.

MODEL 405H
Schematic
Chassis Wiring

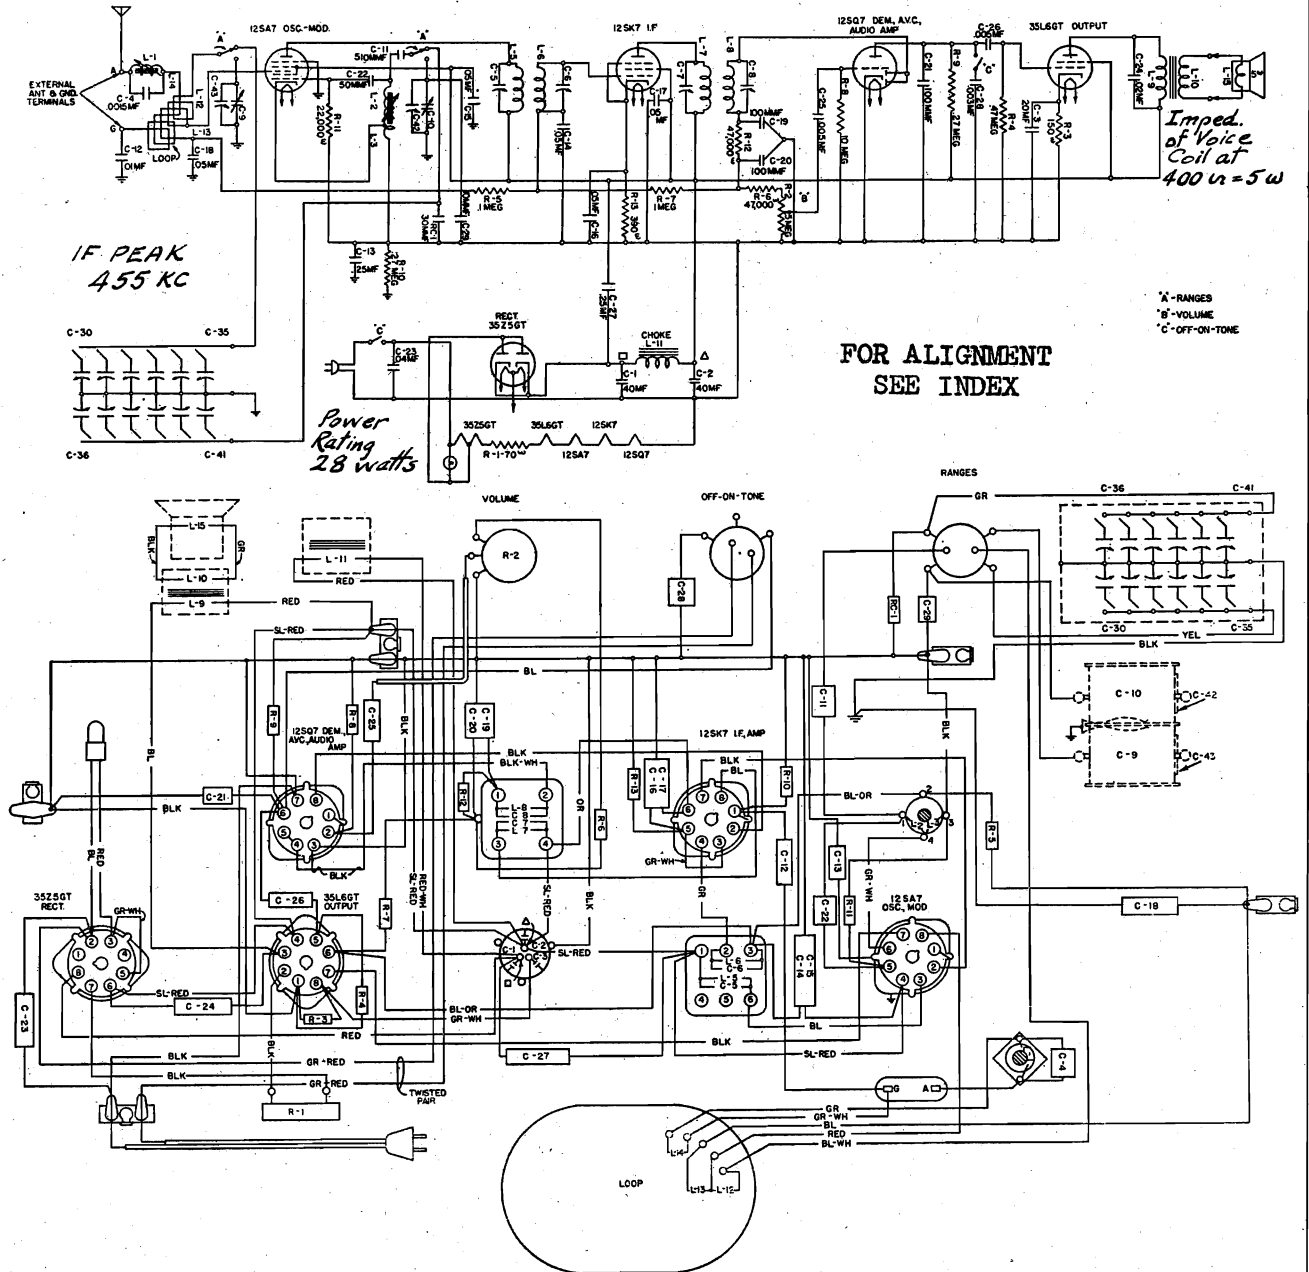

SPECIAL INSTRUCTIONS


To connect an external antenna and ground or to examine or replace tubes, it is necessary to unscrew the thumb screw located at the right hand side of the loop antenna, and the loop can then be swung outward on its hinge.

Always screw the loop antenna in its proper position when operating the receiver.

For Tuner Data, see that of Model 420 which is the same with the exception of item 2. In the case of Model 405-H, this should read "The stations should be arranged according to frequency with the highest frequency at the top and the lowest frequency at the bottom."

MODEL 405H
Voltage, Socket
Trimmers, Resistance

STROMBERG-CARLSON TEL. MFG. CO.

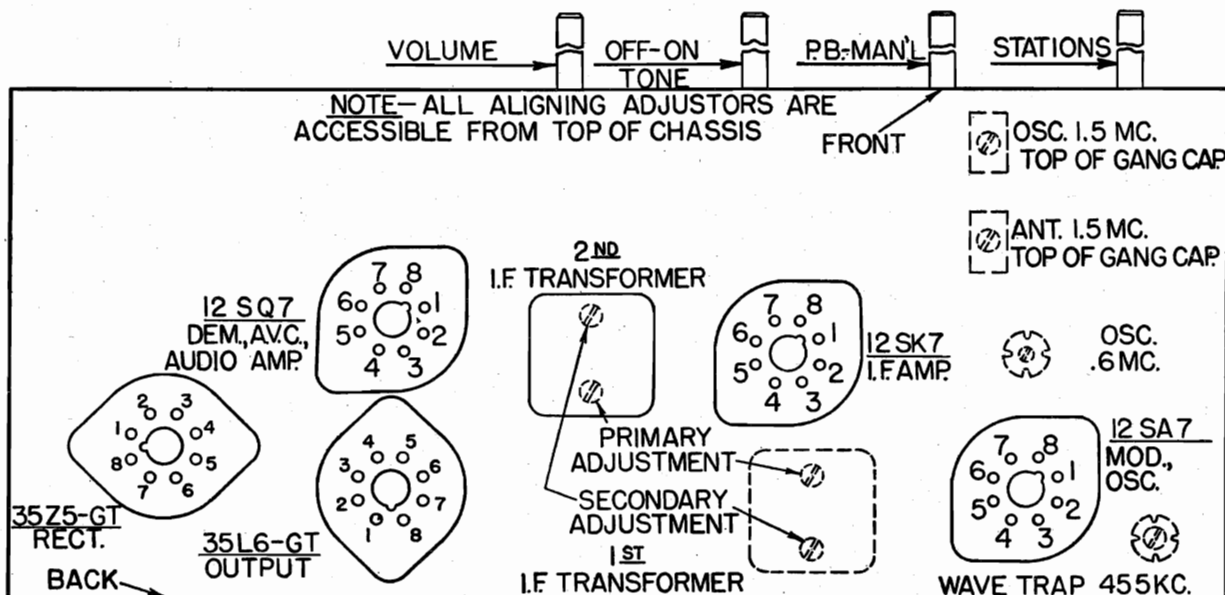

LOOKING AT INSIDE BOTTOM OF CHASSIS

A. C. Voltages are indicated by italics; when the receiver is operated from a D. C. power supply, D. C. voltages will be obtained in place of A. C. voltages shown.

Tube	Circuit	Cap	Terminals of Sockets								Heater Voltages Between Heater Terminals	
			1	2	3	4	5	6	7	8	Socket Terminal Numbers	Volts A. C.
12SA7	Mod.—Osc.	—	0	25	+110	+110	-30	0	38	0	2-7	12
12SK7	I. F. Amp.	—	0	12	+3*	0	+3*	+110	25	+110	2-7	12
12SQ7	Dem.—A. V. C. —Audio	—	0	0	0	0	0	+40	0	12	7-8	12
35L6GT	Output	—	0	75	+100	+110	0	—	38	+7*	2-7	35
35Z5GT	Rectifier	—	—	120	+115	—	+115	—	+85	+118	2-7	35

CONTINUITY TEST

CAUTION: Remove all tubes, disconnect the receiver from the power supply and short the high side of the C-1 Capacitor (Red, Red-white wires) and the heavy bus wire to the chassis base before making continuity test.

Use a good meter capable of measuring accurately up to several megohms.

The resistances given are often approximate, owing to Electrolytic Capacitors in the circuit. When this is the case, be sure to reverse the test leads and read the highest resistance.

Read from indicated terminals to chassis base except when an asterisk appears.

R. F. coil tests, measured directly across R. F. coil terminals (see wiring diagram for location of R. F. coil terminals): L1—1.5 ohms; L2—4 ohms; L3—3 ohms; L12—.2 ohm; L13—.3 ohm; L14—"short".


TERMINALS OF SOCKETS										
Tube	Circuit	Cap	1	2	3	4	5	6	7	8
12SA7	Mod.—Osc.	—	S	O	130 Ω	130 Ω	22000 Ω	S	O	1.5M
12SK7	I. F. Amp.	—	S	O	390 Ω	1.5M	390 Ω	390 Ω	O	150 Ω
12SQ7	Dem.—A. V. C. —Audio	—	S	10M	S	600000 Ω	600000 Ω	270000 Ω	S	O
35L6GT	Output	—	S	O	200 Ω	130 Ω	550000 Ω	1.5M	O	150 Ω
35Z5GT	Rectifier	—	O	O	O	O	O	130 Ω	O	S

Symbols used are as follows: Ω —ohms; M—megohms; S—short; O—open.

Schematics

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 410H, 410HB
410J, 410JB, 410T,
410TB, 411PF, 411PFB
411PT, 411PTB

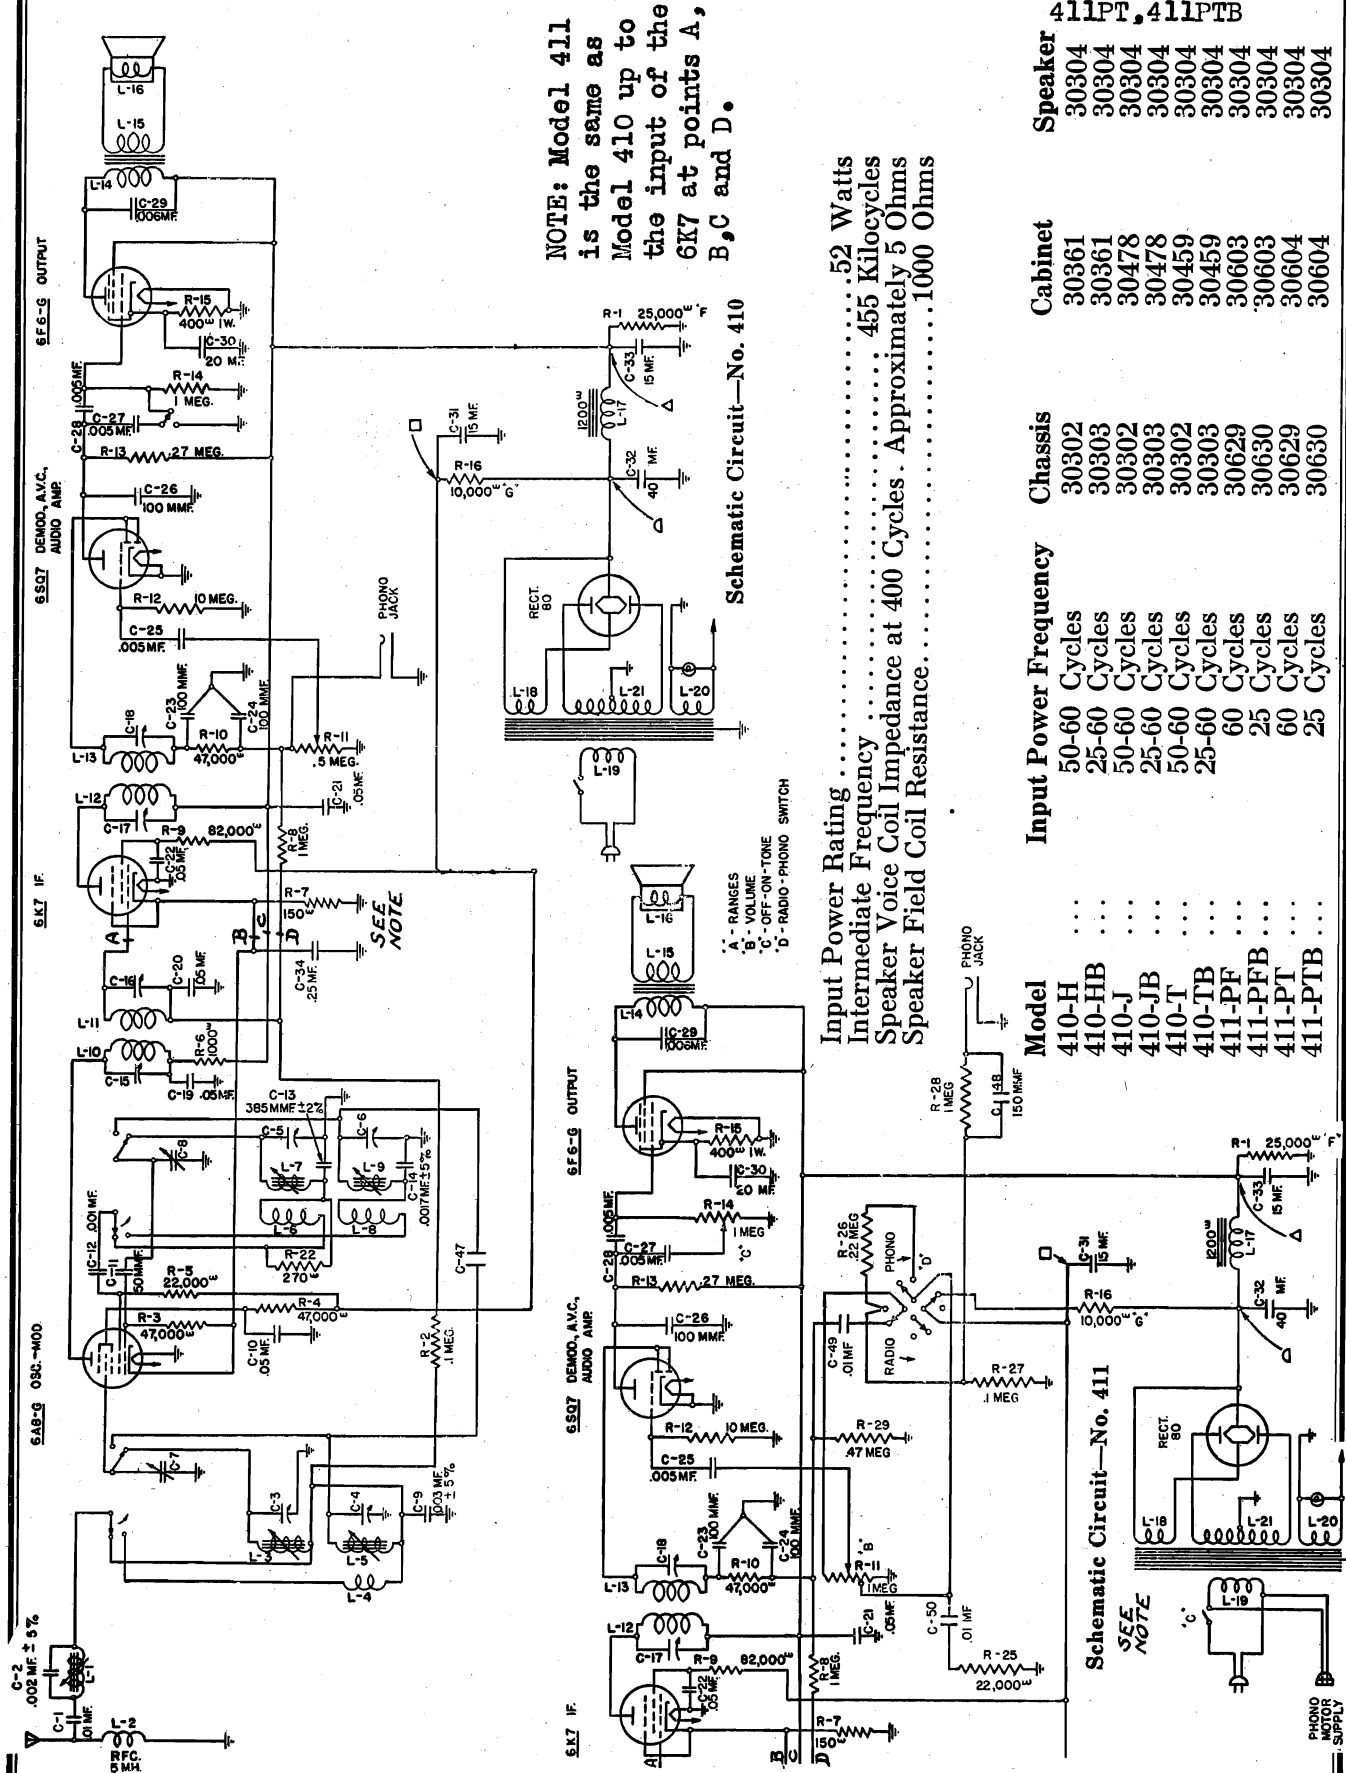

NOTE: Model 411
is the same as
Model 410 up to
the input of the
6K7 at points A,
B, C and D.

Schematic Circuit—No. 410

Schematic Circuit—No. 411

Input Power Rating52 Watts
Intermediate Frequency 455 Kilocycles
Speaker Voice Coil Impedance at 400 Cycles . Approximately 5 Ohms
Speaker Field Coil Resistance.....1000 Ohms

Model	Input Power Frequency Cycles	Chassis	Cabinet	Speaker
410-H	50-60	30302	30361	30304
410-HB	25-60	30303	30361	30304
410-J	50-60	30302	30478	30304
410-JB	25-60	30303	30478	30304
410-T	50-60	30302	30459	30304
410-TB	25-60	30303	30459	30304
411-PF	60	30629	30603	30304
411-PFB	25	30630	30603	30304
411-PT	60	30629	30604	30304
411-PTB	25	30630	30604	30304

A - RANGES
B - VOLUME
C - OFF-ON-TONE
D - RADIO-PHONO SWITCH


SEE NOTE

SEE NOTE

MODELS 410CH, 410HB
410J, 410JB, 410T
410TB

STROMBERG-CARLSON TEL. MFG. CO.

Chassis Wiring
Phono Data

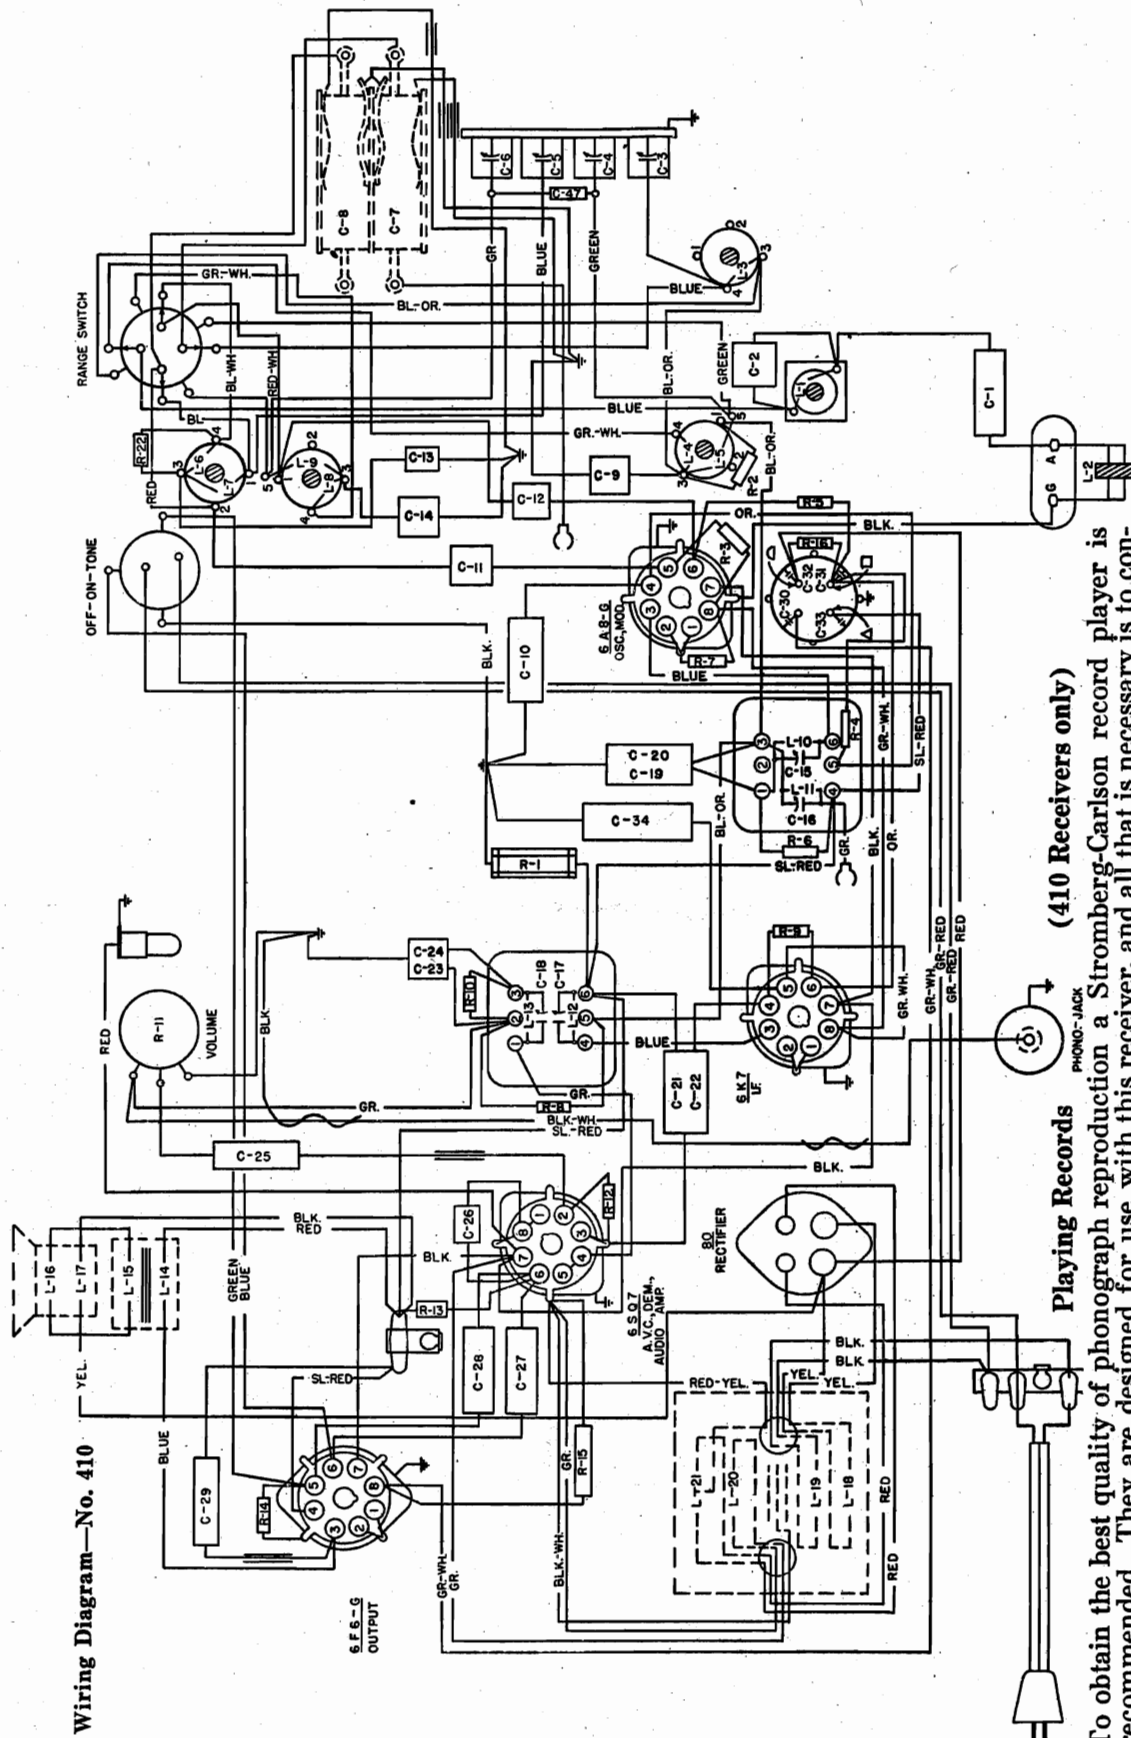

Wiring Diagram—No. 410

(410 Receivers only)


Playing Records

To obtain the best quality of phonograph reproduction a Stromberg-Carlson record player is recommended. They are designed for use with this receiver, and all that is necessary is to connect the record player to the single prong socket provided in the chassis, tune the receiver to a quiet place on the dial scale and proceed to operate. The volume may be controlled with the volume control at the receiver, or (if such is provided) with the volume control on the record player.

A low impedance pick-up may also be used, but a matching transformer must be placed between the phonograph pick-up and the chassis.

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 411PF, 411PFB
411PT, 411PTB
Chassis Wiring
Dial Lamp Note

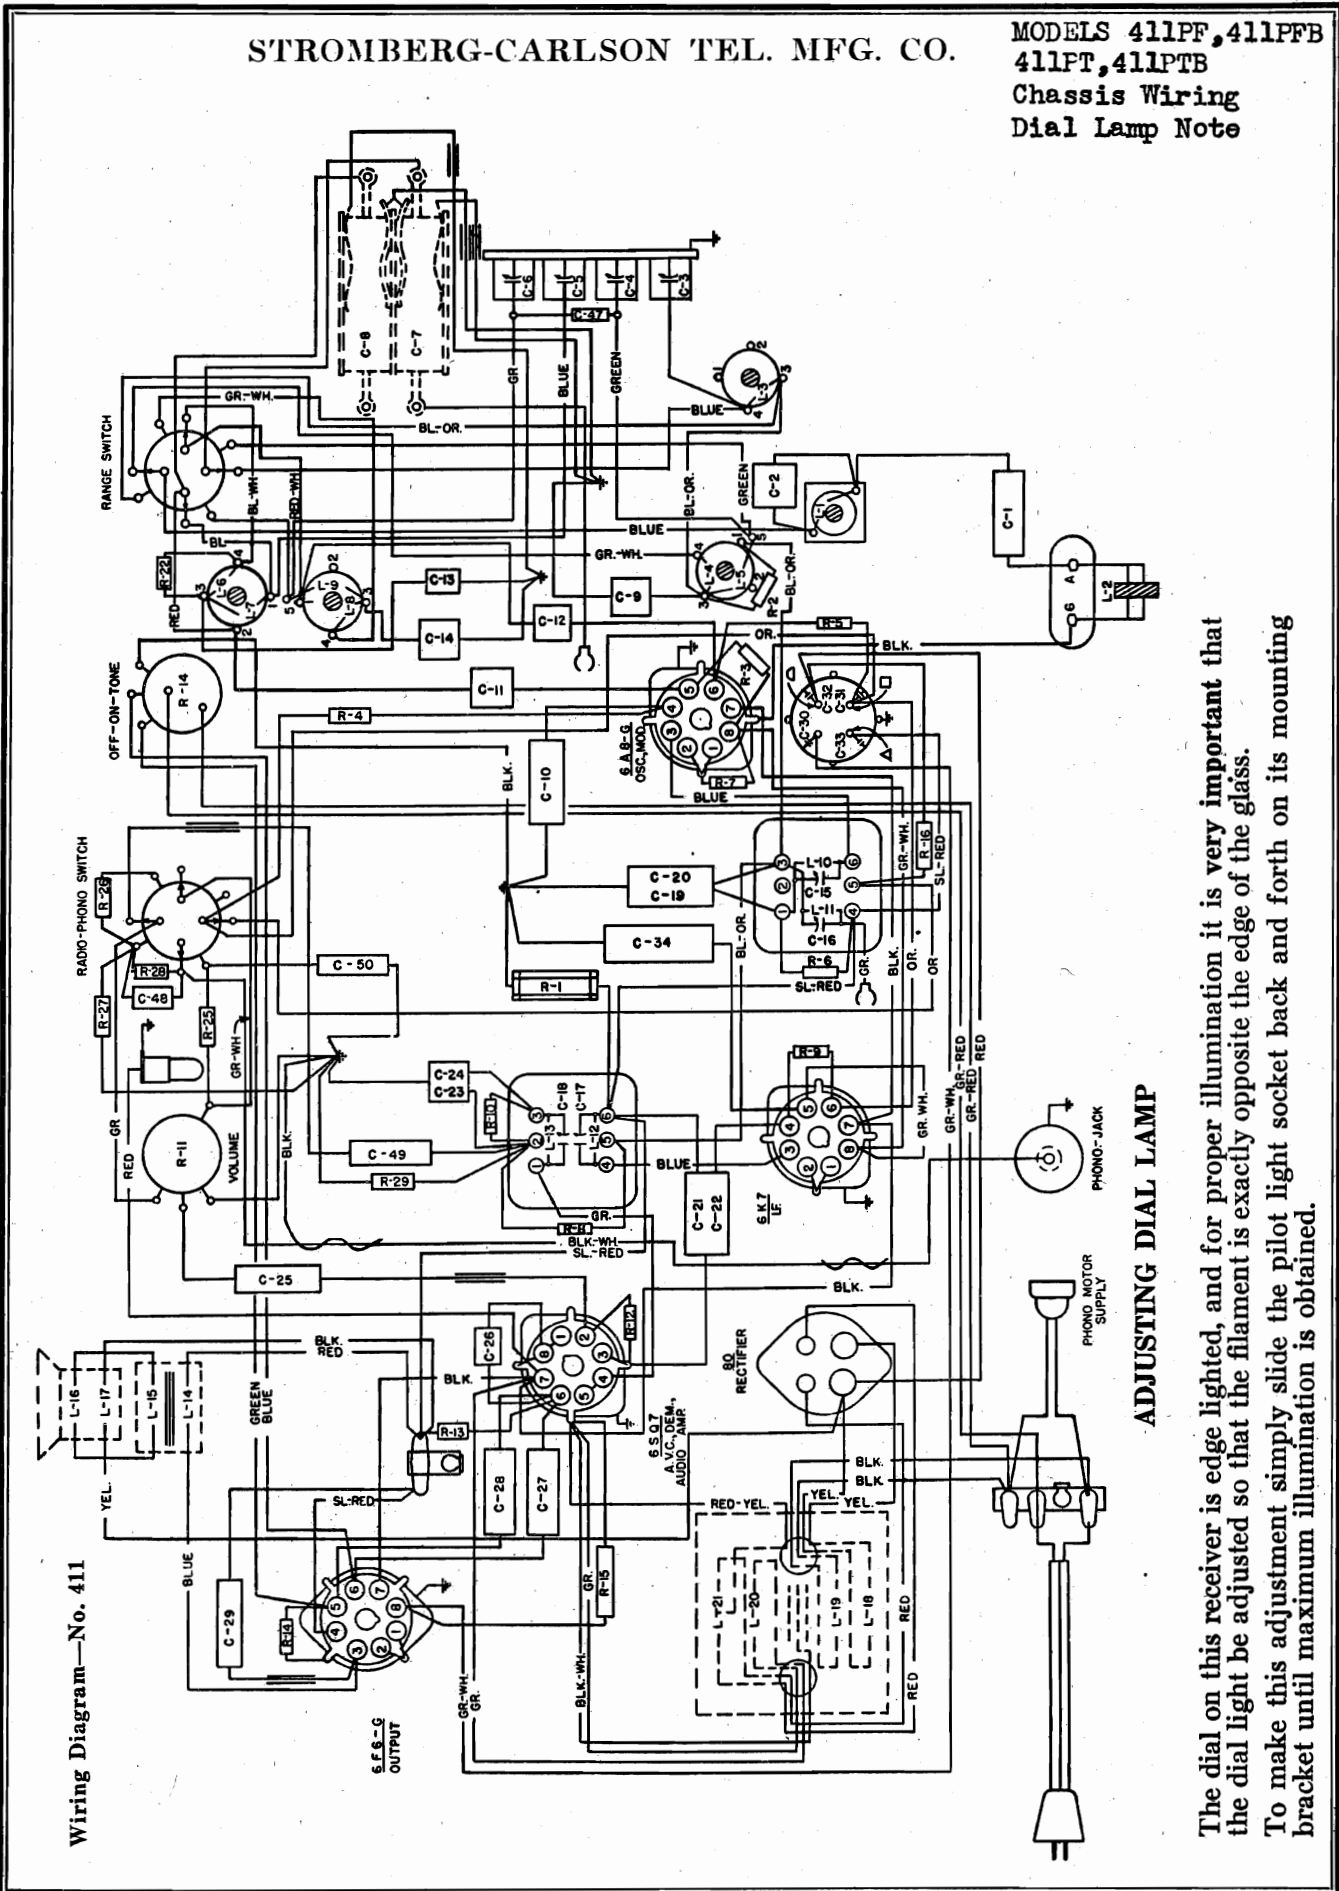

Wiring Diagram—No. 411


ADJUSTING DIAL LAMP

The dial on this receiver is edge lighted, and for proper illumination it is very important that the dial light be adjusted so that the filament is exactly opposite the edge of the glass. To make this adjustment simply slide the pilot light socket back and forth on its mounting bracket until maximum illumination is obtained.

MODELS 41OH, 41OHB
41OJ, 41OJB, 41OT
41OTB, 411PF, 411PFB
411PT, 411PTB

STROMBERG-CARLSON TEL. MFG. CO.

Voltage, Socket
Trimmers
Resistance

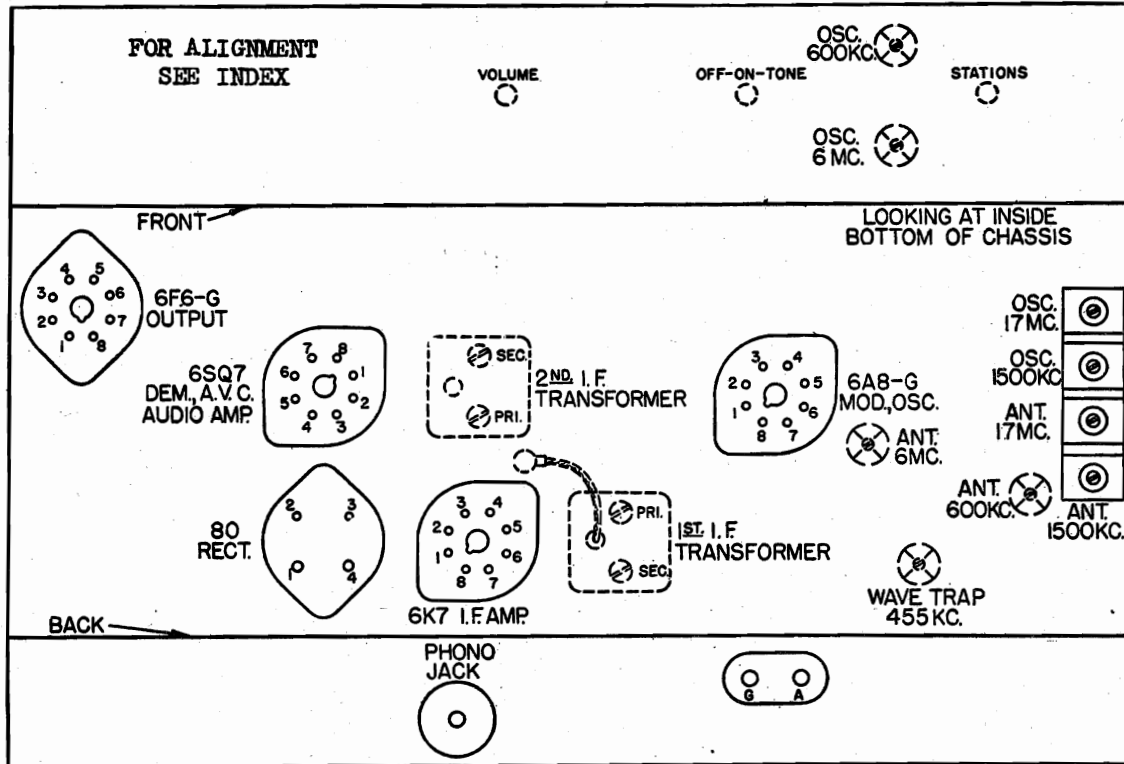

Tube	Circuit	Cap	Terminals of Sockets								Heater Voltages Between Heater Terminals	
			1	2	3	4	5	6	7	8	Terminal Numbers	Volts A. C.
6A8G	Mod.—Osc.	0	0	0	+260	+100	—	+180	6.5	+3*	2-7	6.5
6K7	I. F. Amp.	0	0	0	+260	+100	+3*	+270	6.5	+3*	2-7	6.5
6SQ7	Dem.—A. V. C. —Audio	—	0	—	0	—	—	+100	6.5	0	7-8	6.5
6F6G	Output	—	0	0	+240	+260	—	—	6.5	+15	2-7	6.5
80	Rectifier	—	+330	315	315	+330	—	—	—	—	1-4	5

*Read on lowest possible scale of voltmeter.

TERMINALS OF SOCKETS											
Tube	Circuit	Cap	1	2	3	4	5	6	7	8	
6A8G	Mod.—Osc.	1.5M	S	S	26,000Ω	85,000Ω	50,000Ω	60,000Ω	S	150Ω	
6K7	I. F. Amp	1.5M	S	S	25,000Ω	110,000Ω	150Ω	35,000Ω	S	150Ω	
6SQ7	Dem.—A. V. C. —Audio	—	S	10M	S	550,000Ω	550,000Ω	300,000Ω	S	S	
6F6G	Output	—	S	S	25,000Ω	25,000Ω	1M	*	S	400Ω	
80	Rectifier	—	26,000Ω	250Ω	250Ω	26,000Ω	—	—	—	—	

Symbols used on chart are as follows: Ω—ohms; M—megohms; S—short; O—open.

* Tone control in "Treble" position—1 megohm.
Tone control in "Bass" position—"short".

Other Tests Not Shown on Chart

Antenna terminal to chassis base—70 ohms.
Ground terminal to chassis base—"short".
Phono terminal to chassis base—500,000 ohms.

Between terminals of AC plug:

AC switch open—"open".
AC switch closed—8 ohms.

Terminals of AC plug to chassis base—"open".

R. F. coil tests measured directly across R. F. coil terminals with range switch set in Standard Broadcast Position (A Range).

L3—3 ohms; L4—"short"; L5—"short"; L6—.5 ohm; L7—4 ohms; L8—.1 ohm; L9—"short".

MODELS 412H, 412HB
Voltage, Socket
Trimmers
Resistance

STROMBERG-CARLSON TEL. MFG. CO.

IDENTIFICATION TABLE

Model	Input Power Frequency	Chassis	Cabinet	Speaker
412-H	50-60 Cycles	30346	30589	30602
412-HB	25-60 Cycles	30347	30589	30602

SPECIFICATIONS

Standard 50-60 Cycles; also available 25-60 Cycles
 Type of Circuit Superheterodyne
 Tuning Ranges 0.54 to 1.7 Mc.; 2.3 to 7.6 Mc.; 7.6 to 23 Mc.

CONTINUITY TEST

CAUTION: Remove all tubes and disconnect the receiver from the power supply and short C2 (16 mf. capacitor) to chassis base before making continuity test. Be sure to remove the "short" after continuity tests have been completed.

Use a good meter capable of measuring accurately up to several megohms. The resistances given are often approximate, owing to electrolytic capacitors in the circuit. When this is the case, be sure to reverse the test leads and read the highest resistance. Read from the indicated terminals to chassis base unless otherwise specified.

TERMINALS OF SOCKETS

Tube	Circuit	Cap	1	2	3	4	5	6	7	8
6A8	Modulator	1.6M	S	S	10I	60000I	47000I	60000I	S	150I
6J5	Oscillator	—	S	S	20000I	O	47000I	O	S	S
6K7	I.F. Amp.	1.5M	S	S	10I	80000I	150I	10000I	S	150I
6B8	Dem.-A. V. C. Audio	10M	S	S	500000I	500000I	500000I	3M	S	60I
6K6G	Output	—	S	S	340I	S	1.3M	260000I	S	S
80	Rectifier	—	1200I	420I	420I	1200I	—	—	—	—

Symbols used on chart are as follows: I—ohms; M—megohms; S—short; O—open.


Other Tests Not Shown on Chart

Antenna terminal to chassis base:

- Range switch set to standard broadcast position..... 50 ohms
- Range switch set to medium wave position..... "short"
- Range switch set to short wave position..... "short"
- Ground terminal to chassis base..... "short"
- Between terminals of A. C. plug:
- A. C. switch open..... "open"
- A. C. switch closed..... 8 ohms
- Terminals of A. C. plug to chassis base:
- Phono terminals to chassis base:
- Terminal nearest to the top of the chassis..... "short"
- Terminal nearest to the bottom of the chassis..... 1 megohm

R. F. coil tests measured directly across R. F. coil terminals with range switch set in standard broadcast position. (See wiring diagram on Page 6 for location of coil terminals.)

L6—1.5 ohms; L7—1 ohm; L8—50 ohms; L9—3 ohms; L11—2 ohm; L12—2 ohm; L13—1 ohm; L14—short; L15—6 ohm; L16—4 ohms; L17—2 ohm; L18—2 ohm; L19—2 ohm; L20—short.

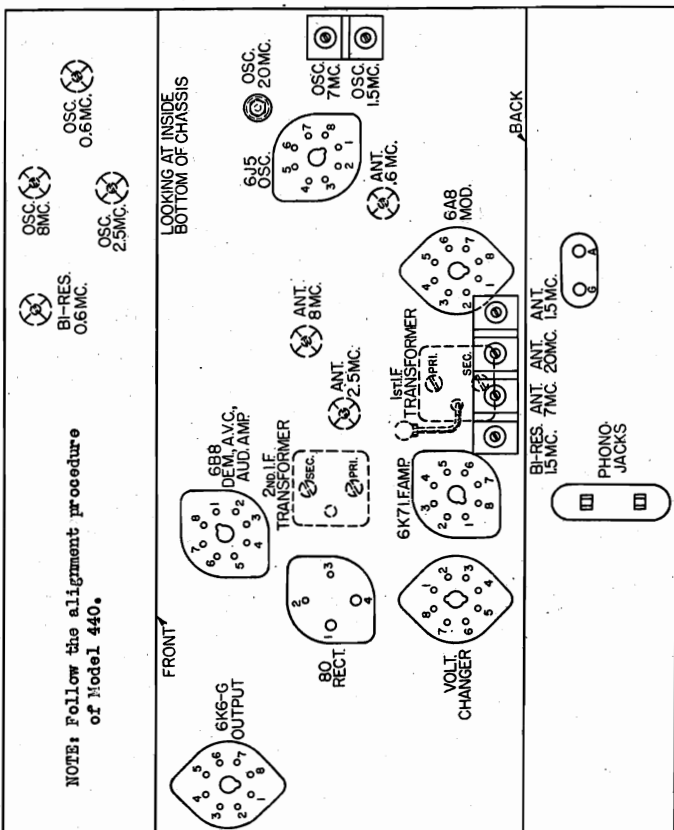

Location Chart

NORMAL VOLTAGE READINGS

Take all readings with chassis operating and tuned to approximately 1000 Kc.—no signal. Use a line voltage of 120 volts, or make allowance for any slight variation. Use a good high resistance voltmeter having a resistance of at least 1000 ohms per volt. Take all D. C. readings on the 500 volt scale except when an asterisk appears. A. C. voltages are indicated by italics.


Tube	Circuit	Cap	Terminals of Sockets					Heater Voltages Between Heater Terminals				
			1	2	3	4	5	6	7	8	Sockets Terminal Numbers	Volts A. C.
6A8	Modulator	0	0	0	+255	+90	-10	+90	6.3	+2*	2-7	6.3
6J5	Oscillator	—	0	0	+150	—	-10	—	6.3	0	2-7	6.3
6K7	I. F. Amp.	0	0	0	+255	+100	+2*	—	6.3	+2*	2-7	6.3
6B8	Dem.-A. V. C. Audio	0	0	0	+60	0	0	+15	6.3	0	2-7	6.3
6K6G	Output	—	0	0	+235	+255	-1	—	6.3	—	—	—
80	Rectifier	—	+345	350	+345	—	—	—	—	—	1-4	5

*Read on lowest possible scale of voltmeter.

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 420H, 420HB,
420L, 420LB, 420PL,
420PLB, 420PR, 420PRB
Schematics

Input Power Rating57 Watts
Intermediate Frequency 455 Kilocycles
Speaker Voice Coil Impedance at 400 Cycles..... Approximately 1.5 Ohms
Speaker Field Coil Resistance..... 1650 Ohms

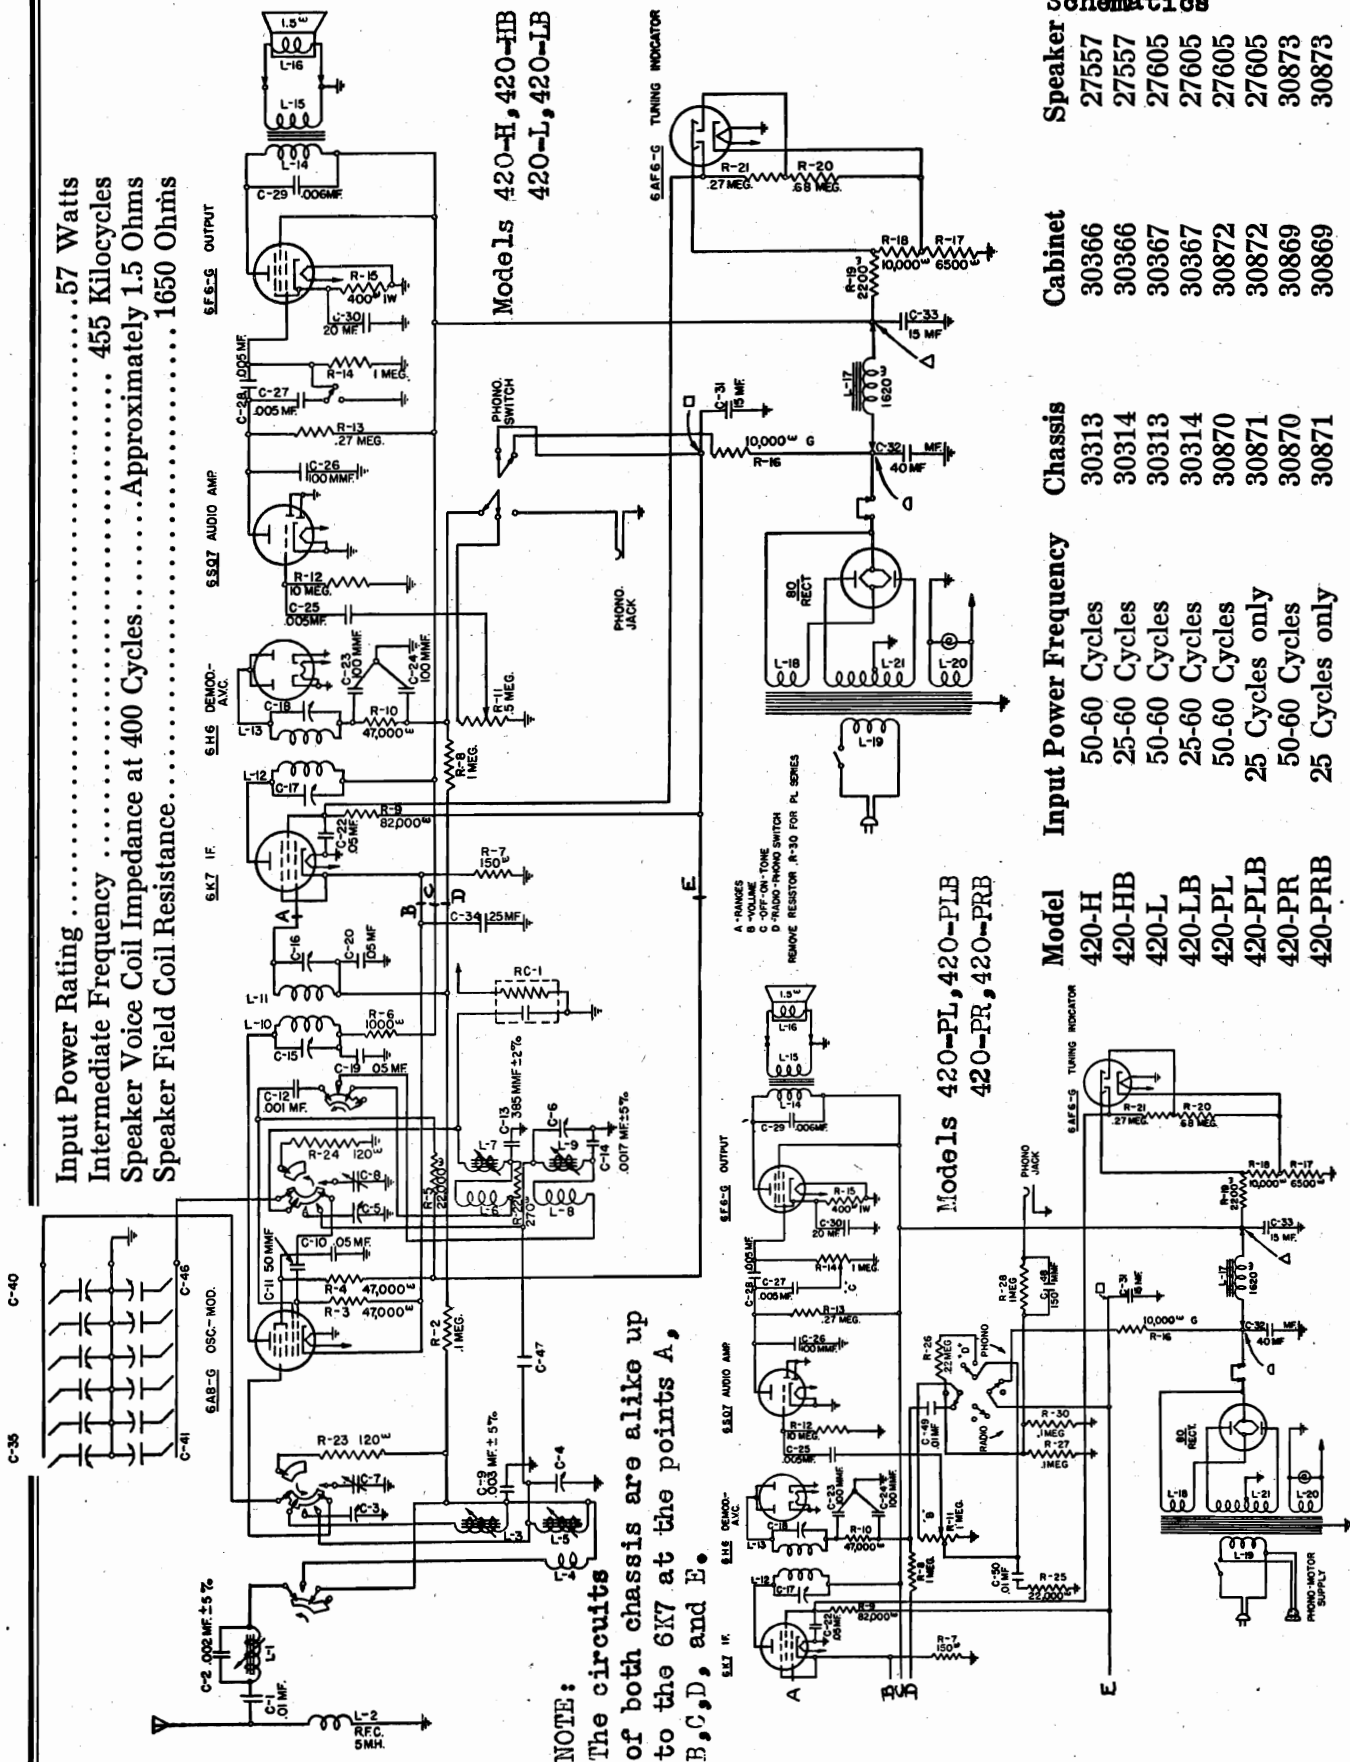

NOTE:
The circuits
of both chassis are alike up
to the 6K7 at the points A,
B, C, D, and E.

Speaker
27557
27557
27605
27605
27605
30873
30873

Cabinet
30366
30366
30367
30367
30872
30872
30869
30869

Chassis
30313
30314
30313
30314
30870
30871
30870
30871


Input Power Frequency
50-60 Cycles
25-60 Cycles
50-60 Cycles
25-60 Cycles
50-60 Cycles
25 Cycles only
50-60 Cycles
25 Cycles only

Model
420-H
420-HB
420-L
420-LB
420-PL
420-PLB
420-PR
420-PRB

Models 420-PL, 420-PLB
420-PR, 420-PRB

MODELS 420H, 420HB
420L, 420LB
Chassis Wiring

STROMBERG-CARLSON TEL. MFG. CO.

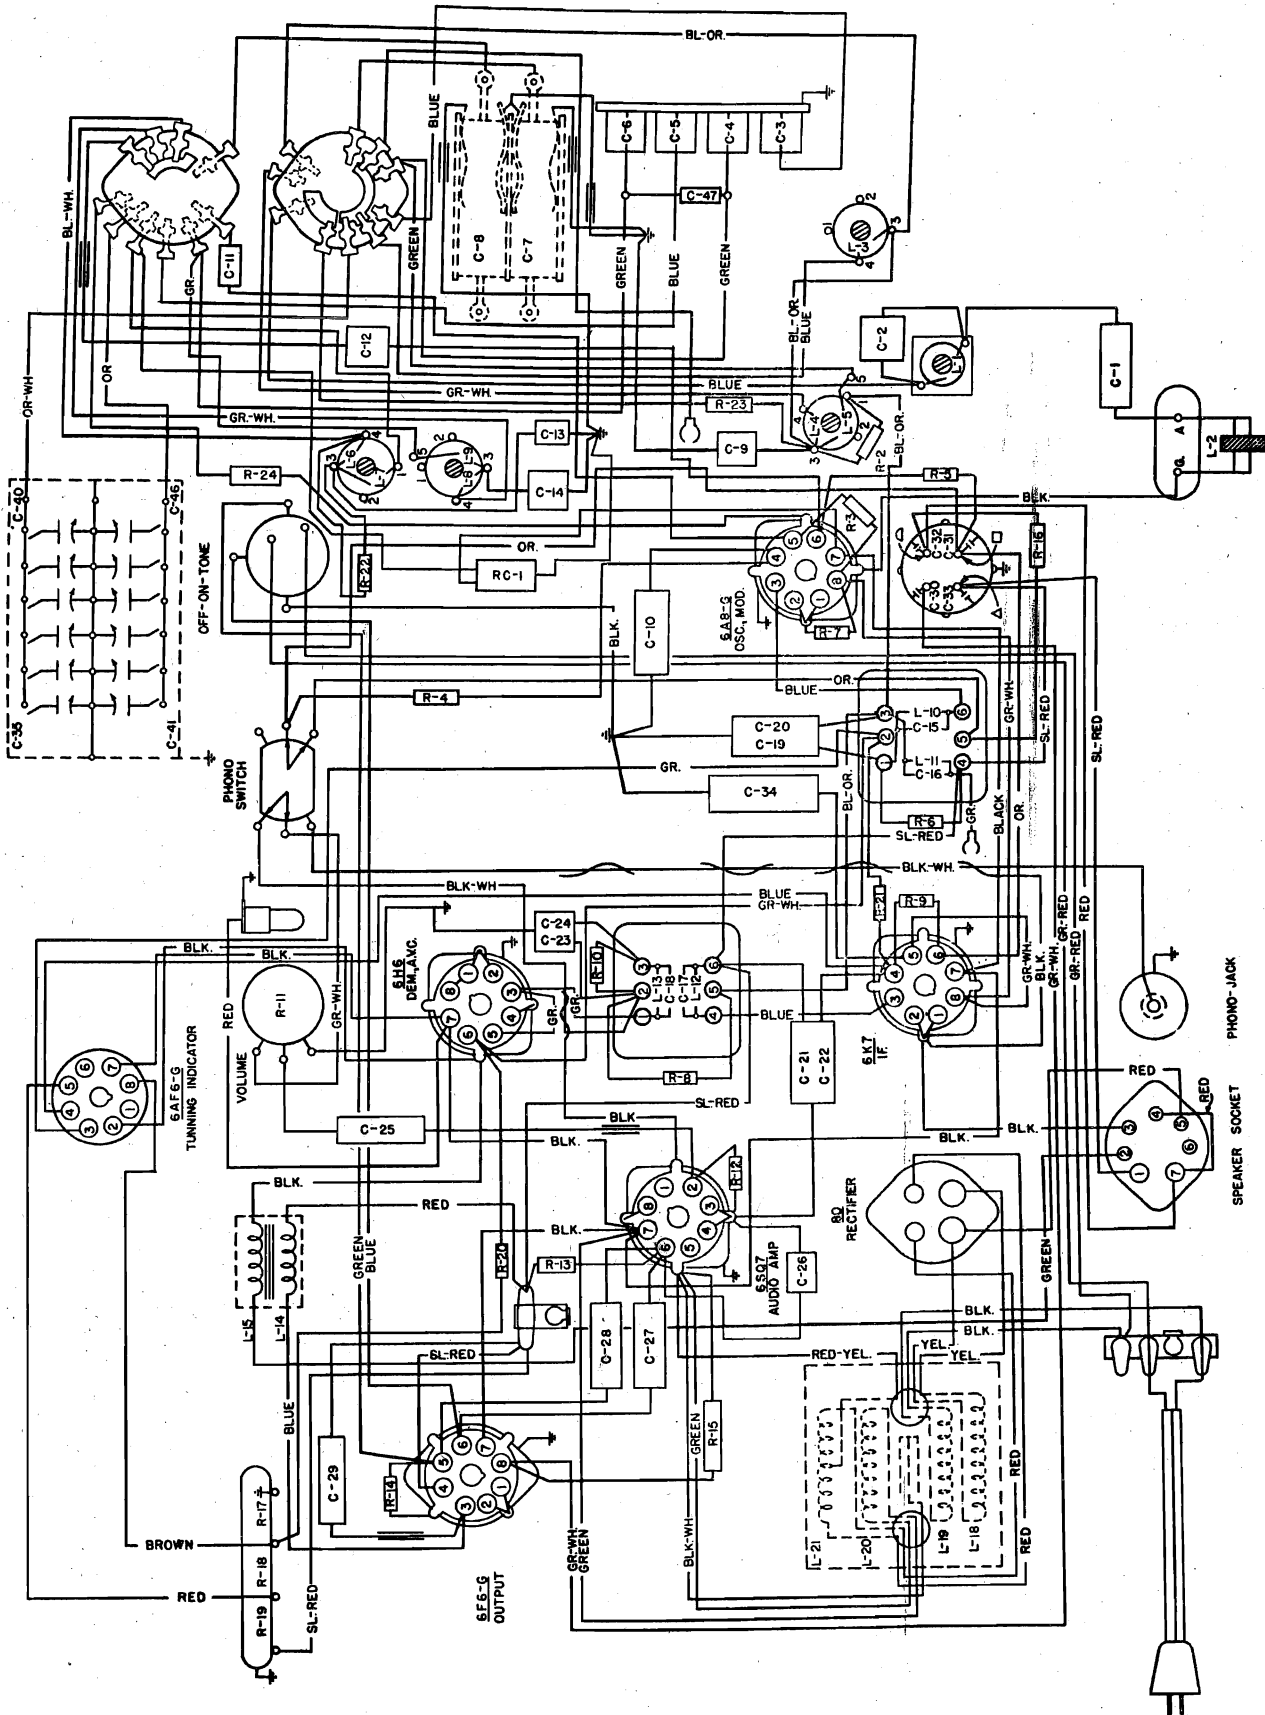

MODELS 42CH, 42OHB
42OL, 42OLB, 42OPL
42OPLB, 42OPR, 42OPRB
Voltage, Tuner
Resistance

STROMBERG-CARLSON TEL. MFG. CO.

MODEL 405H
MODEL 430
Tuner Data

OTHER TESTS NOT SHOWN ON CHART

Radio-Phono Switch Set To	Phono Position	Phono Position
Note	Radio Position	Phono Position
A	1.8M	O
B	80,000Ω	1M
C	50,000Ω	1M
D	1.5M	O
E	100,000Ω	1M
F	25,000Ω	1M
G	550,000Ω	O
H	550,000Ω	O

Phonograph jack terminal to chassis base.
Radio Phonograph switch in Radio position "open".
Radio Phonograph switch in Phonograph position 500,000 ohms.
Antenna terminal to chassis base 70 ohms.
Ground terminal to chassis base "short".
Between terminals of A. C. plug "open" with A. C. switch open, 7 ohms with A. C. switch closed. Terminals of A. C. plug to chassis base "open".
Front terminal of Push Button Unit (orange-white wire) to chassis base.
Radio Phonograph switch in Radio position 1.8M.
Radio Phonograph switch in Phono position "open".
Rear terminal of Push Button Unit (orange wire) to chassis base Range switch in Push Button position "open".
Range switch in Standard Broadcast position (A Band) 120 ohms.
Range switch in Short Wave position (C Band) 120 ohms.
R. F. coil tests measured directly across R. F. coil terminals with Range switch set in standard broadcast position (A Band): L3-3 ohms, L4-2 ohms, L5-"short", L6-2 ohms, L7-4 ohms, L8-2 ohms, L9-"short".

INSTRUCTIONS FOR SETTING UP PUSH BUTTONS

IMPORTANT: The stations selected should be the local or favorite stations which give good reception at all times.

Set up stations in the daytime to avoid unnecessary interference.

Allow the set to run for about twenty minutes before setting up stations.

Always use the tuning indicator unit when setting up stations in order to determine when the station is exactly in tune.

1. Remove the push button escutcheon by removing the screws and pulling downward and outward.
2. Put the call letters of the selected stations in place above the push buttons. The stations should be arranged according to frequency with the highest frequency at the right and the lowest frequency at the left, just as on the dial. (The call letters will be found inside the envelope stapled inside or underneath the cabinet.)
3. Tune in manually the highest frequency station to be set up and note carefully the program being transmitted.
4. Turn the range switch to the push button position and push the highest frequency button, then adjust the large screw over this button until the desired program is heard. (If the proper adjusting screw cannot be reached it will be necessary to turn the station selector control until the screw is accessible through one of the holes in the pulley.)
5. After the large screw is carefully adjusted, adjust the small vernier screw for maximum closing of the tuning indicator. (Be sure the large adjusting screw does not move while turning the vernier screw.)
6. Set up the other five stations in the same manner.
7. Recheck the adjustment of each adjusting screw.

NORMAL VOLTAGE READINGS

Take all readings with chassis operating and tuned manually to 1000 Kc.—no signal.
Use a line voltage of 120 volts, or make allowance for the variation.
Use a good high resistance voltmeter having a resistance of at least 1000 ohms per volt.
Take all D. C. readings on the 500 volt scale except when an asterisk appears.
Read from indicated terminals to chassis base.
See location chart on Page 4 for position of terminals.
A. C. voltages are indicated by italics.
To measure voltages of 6AF6G tube remove the metal cover on the tuning indicator socket and read from indicated terminals.

Tube	Circuit	Cap	Terminals of Sockets								Heater Voltages Between Heater Terminals		
			1	2	3	4	5	6	7	8	Sockets Numbered	Volts A.C.	
6A8G	Mod.—Osc.	0	0	+255	+99	—	+175	6.3	+2.5*	2-7	6.3		
6K7	I. F. Amp.	0	0	+257	+85	+2.5*	+255	6.3	+2.5*	2-7	6.3		
6H6	Dem.—A. V. C.	—	0	—	0	—	+60	6.3	0	2-7	6.3		
6SQ7	Audio Amp.	—	0	—	0	0	+95	6.3	0	7-8	6.3		
6F6G	Output	—	0	+245	+257	—	—	6.3	+16	2-7	6.3		
6AF6G	Tuning Ind.	—	0	+80	+115	+230	—	6.3	+100	2-7	6.3		
80	Rectifier	—	+365	350	350	+365	—	—	—	1-4	5		

*Read on lowest possible scale of voltmeter.

CONTINUITY TEST

CAUTION: Remove all tubes and disconnect the receiver from the power supply before making continuity test.
Use a good meter capable of measuring accurately up to several megohms.
The resistances given are often approximate, owing to electrolytic capacitors in the circuit.
When this is the case, be sure to reverse the test leads and read the highest resistance.
Read from indicated terminals to chassis base unless otherwise specified.
See location Chart on Page 4 for position and numbering of terminals.

Tube	Circuit	Cap	TERMINALS OF SOCKETS							
			1	2	3	4	5	6	7	8
6A8G	Mod.—Osc.	A	S	S	20000Ω	B	50000Ω	C	S	150Ω
6K7	I. F. Amp.	D	S	S	18000Ω	E	150Ω	F	S	150Ω
6H6	Dem.—A. V. C.	—	S	S	G	S	H	280000Ω	S	S
6SQ7	Audio Amp.	—	S	10M	S	S	S	280000Ω	S	S
6F6G	Output	—	S	S	19000Ω	19000Ω	1M	1M	S	400Ω
6AF6G	Tuning Ind.	—	O	S	250000Ω	10000Ω	15000Ω	O	S	6000Ω
80	Rectifier	—	19000Ω	150Ω	19000Ω	—	—	—	—	—
Speaker Socket	—	—	19000Ω	S	S	800000Ω	O	O	800000Ω	—

Symbols used on chart are as follows: Ω—ohms; M—megohms; S—short; O—open.

MODELS 42CH, 42OHB
42OL, 42OLB, 42OPL
42OPLB, 42QPR, 42OPRB
Alignment, Socket
Trimmers

STROMBERG-CARLSON TEL. MFG. CO. MODELS 410, 411
MODELS 430
Alignment

5. Adjust the I. F. Aligners for maximum output in the following order:

- A. Secondary of second I. F. transformer.
- B. Primary of second I. F. transformer.
- C. Secondary of first I. F. transformer.
- D. Primary of first I. F. transformer.

III. Radio frequency adjustments.

Short Wave Range (C Band)

1. Replace the 0.1 microfarad capacitor in series with the output lead of the signal generator with a 400 ohm carbon type resistor, and connect it to the antenna terminal of the chassis.
2. Set the range switch to the short-wave range position (C Band).
3. Set the signal generator frequency and the receiver tuning dial to 6 megacycles.
4. Adjust the 6 megacycles oscillator and antenna (iron cores) for maximum signal.
5. Set the signal generator frequency and the receiver tuning dial to 17 megacycles.
6. Adjust the 17 megacycles oscillator and antenna aligning capacitors for maximum signal.
7. Repeat operations three and four.
8. Repeat operations five and six.

Standard Broadcast Range (A Band)

1. Replace the 400 ohm carbon type resistor in series with the output lead from the signal generator with a 200 micro-microfarad capacitor.
2. Set the range switch to the Standard Broadcast Range (A Band).
3. Set the signal generator frequency and the receiver tuning dial to 600 Kc.
4. Adjust the 600 Kc. oscillator and antenna (iron cores) for maximum signal.
5. Set the signal generator frequency and the receiver tuning dial to 1500 Kc.
6. Adjust the 1500 Kc. oscillator and antenna aligning capacitors for maximum signal.
7. Repeat operation three and four.
8. Repeat operation five and six.


IV. Wave Trap Adjustment.

(Leave the receiver connected in the same manner as when adjusting the Standard Broadcast Range ("A" Band)).

1. Tune set to 1000 Kc.
2. Set the signal generator frequency to 455 Kc. and introduce a fairly strong modulated signal to the receiver.
3. Adjust the wave trap aligner for minimum signal.

ADJUSTING DIAL LAMP

The dial on this receiver is edge lighted, and for proper illumination it is very important that the dial light be adjusted so that the filament is exactly opposite the edge of the glass. To make this adjustment simply slide the pilot light socket back and forth on its mounting bracket until maximum illumination is obtained.

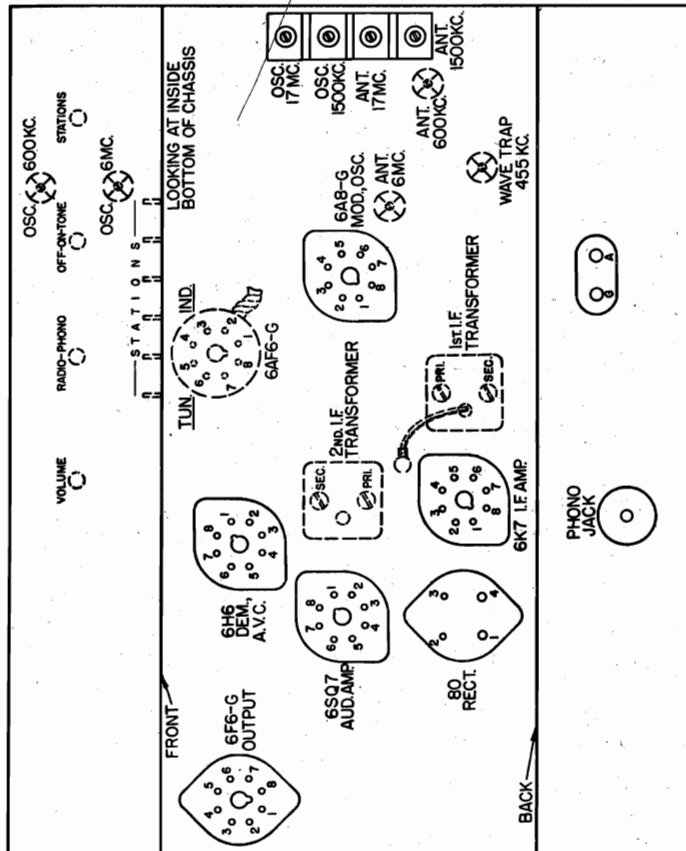

Location Chart

ALIGNING INFORMATION

Always have receiver volume control full on. Never align with tone control in "Bass" position. See location chart above for location of all the aligning adjustment screws.

I. Dial pointer adjustment.


With the plates of the gang tuning capacitor fully engaged, set the dial pointer directly on the vertical line located at the extreme low frequency end of the short wave band.

II. Intermediate frequency adjustments.

1. Set the range switch to Standard Broadcast position.
2. Tune set to extreme low frequency end of the dial.
3. Connect the ground terminal of the signal generator to the ground terminal of the chassis.
4. Introduce a modulated signal of 455 Kilocycles to the grid cap of the 6A8G Tube, using a 0.1 microfarad capacitor in series with the output lead of the signal generator. (Do not remove the grid clip from this tube.)

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 43CH, 43CHB
43OL, 43OLB, 43OM
43OMB, 43OPL, 43OPLB
43OPF, 43OPFB
Schematic

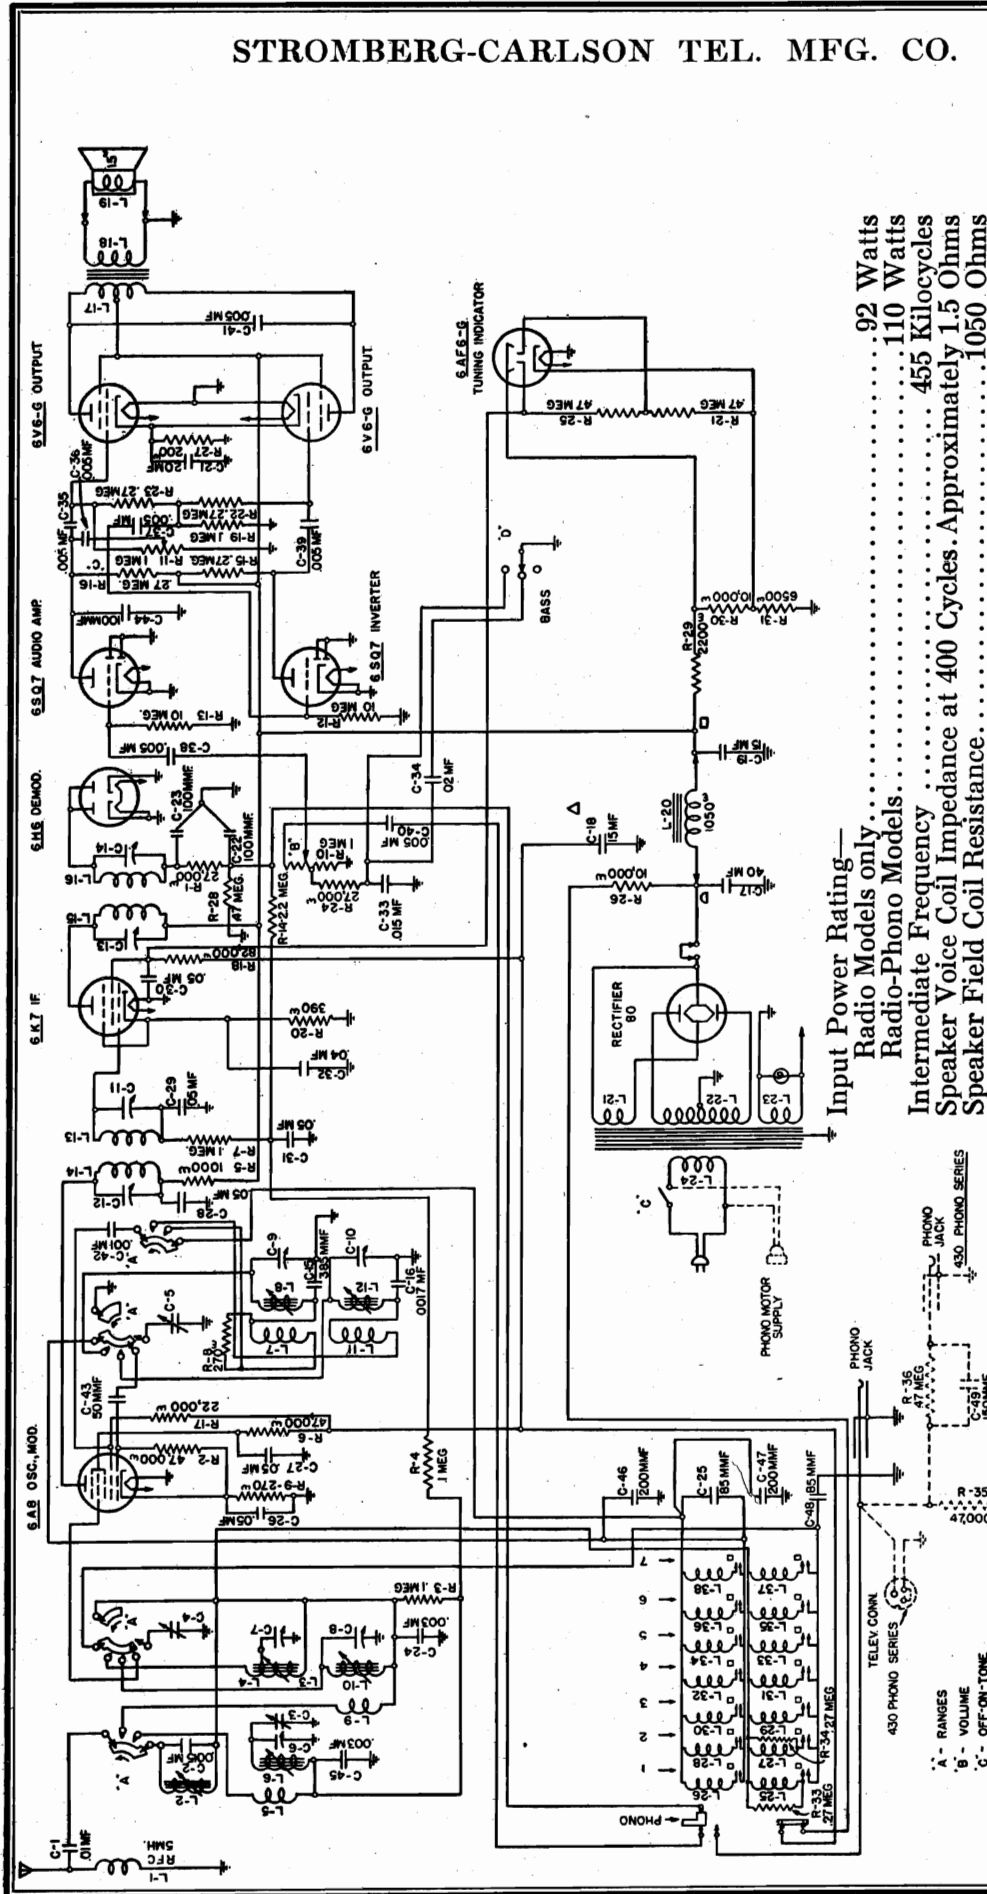

Input Power Rating—
Radio Models only.....92 Watts
Radio-Phono Models.....110 Watts
Intermediate Frequency.....455 Kilocycles
Speaker Voice Coil Impedance at 400 Cycles. Approximately 1.5 Ohms
Speaker Field Coil Resistance.....1050 Ohms

Model	Input Power Frequency	Chassis	Cabinet	Speaker
430-H	50-60 Cycles	30317	30457	30358
430-HB	25-60 Cycles	30318	30457	30358
430-L	50-60 Cycles	30317	30104	27834
430-LB	25-60 Cycles	30318	30104	27834
430-M	50-60 Cycles	30317	30105	30359
430-MB	25-60 Cycles	30318	30105	30359
430-PL	50-60 Cycles	30867	30993	26170
430-PLB	25 Cycles only	30868	30993	26170
430-PF	50-60 Cycles	30867	30866	26171
430-PFB	25 Cycles only	30868	30866	26171

FOR ALIGNMENT AND
TUNER DATA, SEE INDEX

MODELS 430H, 430HB, 430L, 430LB, 430M, 430MB, 430PL, 430PLB, 430PF, 430PFB
STROMBERG-CARLSON TEL. MFG. CO. Voltage, Socket Trimmers, Resistance

- A. Push in any pre-set station button;**
 Set range switch to Push Button position..... 2.8 megohms
 Set range switch to "A" range position..... 2.8 megohms
 Set range switch to "C" range position..... 2.8 megohms
- Push buttons in normal position (all buttons out);**
 Set range switch to Push Button position..... "open"
 Set range switch to "A" range position..... 2.8 megohms
 Set range switch to "C" range position..... 2.8 megohms
- B. Push in "Phono" button..... 200,000 ohms**
C. Push in "Phono" button..... 70,000 ohms
D. Push in "Phono" button..... 50,000 ohms
E. 6V6 Tube Socket nearest to the front of the chassis 100,000 ohms

- Other Tests Not Shown on Chart**
 Antenna terminal to chassis base..... 75 ohms
 Ground terminal to chassis base..... "short"
 Phono terminal to chassis base..... "open"
 Test between terminals of A.C. plug;
 A.C. switch open..... "open"
 A.C. switch closed..... 5 ohms
 Terminals of A.C. plug to chassis base..... "open"
 R. F. tests measure directly across R. F. coil terminals with range switch in broadcast position ("A" range); L3—.8 ohm; L4—.8 ohm; L5—.1 ohm; L6—.3 ohms; L7—.3 ohm; L8—.4 ohms; L9—.1 ohm; L10—"short"; L11—.1 ohm; L12—"short".

NORMAL VOLTAGE READINGS

Take all readings with chassis operating and tuned manually to 1000 Kc.—no signal.
 Use a line voltage of 120 volts, or make allowance for the variation.
 Use a good high resistance voltmeter having a resistance of at least 1000 ohms per volt.
 Take all D. C. readings on the 500 volt scale except when an asterisk appears.
 Read from indicated terminals to chassis base.
 See location chart for position of terminals.
 A. C. voltages are indicated by italics.
 To measure voltages of 6AF6G tube remove the metal cover on the tuning indicator socket and read from indicated terminals.

Tube	Circuit	Cap	Terminals of Sockets								Heater Voltages Between Heater Terminals	
			1	2	3	4	5	6	7	8	Socket Terminal Numbers	Volts A. C.
6A8	Mod.—Osc.	0	0	0	+250	+110	-8*	+173	6.5	+3*	2-7	6.5
6K7	I. F. Amp.	0	0	0	+253	+108	+3.5*	-	6.5	+3.5*	2-7	6.5
6H6	Dem.—A. V. C.	-	0	0	0	0	0	6.5	0	2-7	6.5	
6SQ7	Audio Amp.	-	0	0	0	0	+108	6.5	0	2-7	6.5	
6SQ7	Audio Inv.	-	0	0	0	0	+108	6.5	0	2-7	6.5	
6V6G	Output	-	0	0	+250	+254	0	-	6.5	+14.5	2-7	6.5
6V6G	Output	-	0	0	+250	+254	0	-	6.5	+14.5	2-7	6.5
6AF6G	Tuning Ind.	-	+90	-	+220	+110	+52	6.5	0	2-7	6.5	
80	Rectifier	-	+382	375	375	+382	-	-	-	1-4	5	
	Speaker Socket	-	-	-	+382	0	0	+382	+382	-	-	-


*Read on lowest possible scale of voltmeter.

CONTINUITY TEST

CAUTION: Remove all tubes and disconnect the receiver from the power supply before making continuity test.
 Use a good meter capable of measuring accurately up to several megohms.
 The resistances given are often approximate, owing to electrolytic capacitors in the circuit.
 When this is the case, be sure to reverse the test leads and read the highest resistance.
 Read from indicated terminals to chassis base unless otherwise specified.
 See location chart for position and numbering of terminals.

Tube	Circuit	Cap	1	2	3	4	5	6	7	8
6A8	Mod.—Osc.	A	S	S	20000Ω	B	48000Ω	C	S	270Ω
6K7	I. F. Amp.	3M	S	S	19000Ω	D	390Ω	20000Ω	S	390Ω
6H6	Dem.—A. V. C.	-	S	S	50000Ω	S	50000Ω	20000Ω	S	S
6SQ7	Audio Amp.	-	S	10M	S	S	S	300000Ω	S	S
6SQ7	Audio Inv.	-	S	10M	S	S	S	300000Ω	S	S
6V6	Output (E)	-	S	S	16000Ω	16000Ω	270000Ω	100000Ω	S	200Ω
6V6	Output	-	S	S	16000Ω	16000Ω	400000Ω	0	S	200Ω
80	Rectifier	-	19000Ω	100Ω	120Ω	19000Ω	-	-	-	-
6AF6G	Tun. Ind.	-	0	S	270000Ω	100000Ω	16000Ω	0	S	6500Ω
	Speaker Socket	-	100000Ω	Greater	S	S	0	Greater	0	16000Ω


Symbols used on chart are as follows: ¶—ohms; M—megohms; S—short; O—open.

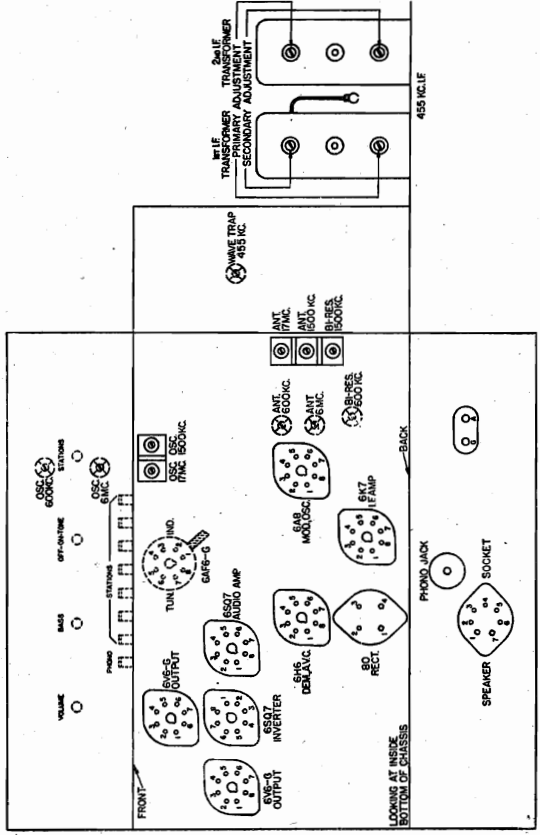

Location Chart

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 425H, 425HB
Schematic, Voltage

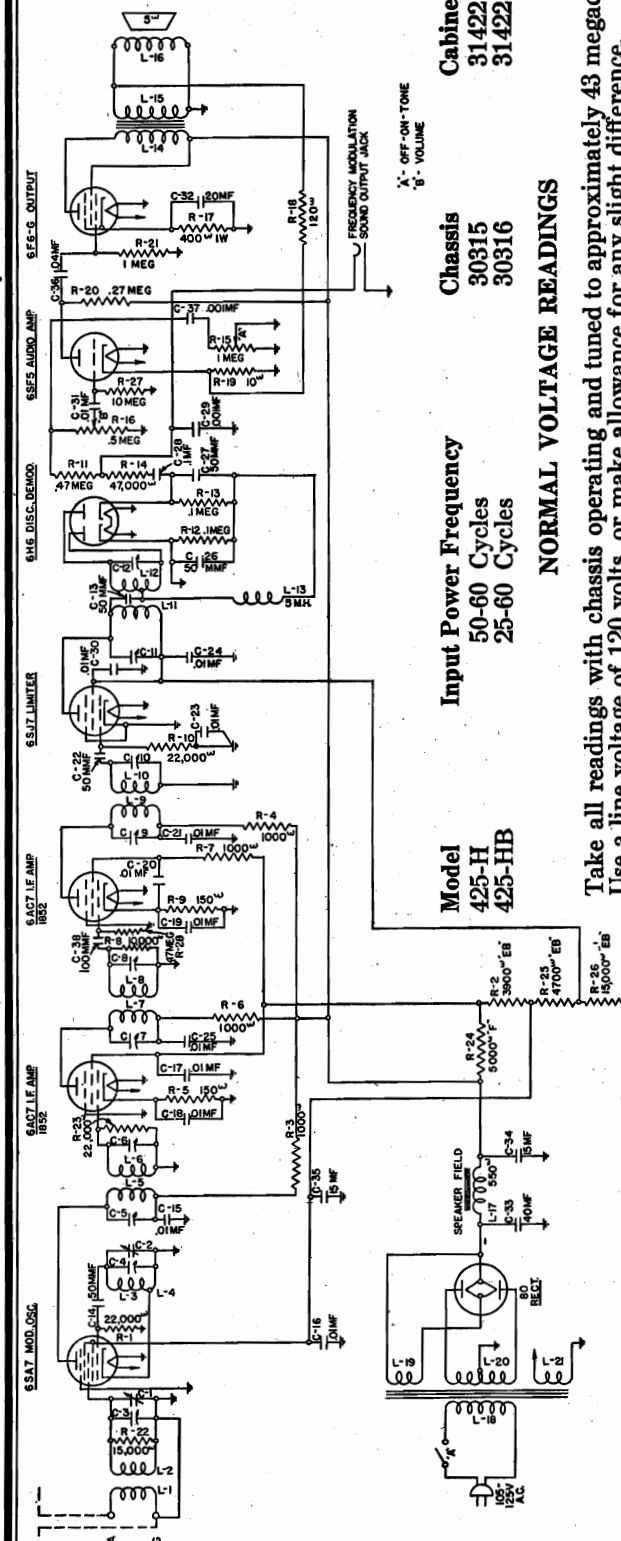

Model
425-H
425-HB

Input Power Frequency
50-60 Cycles
25-60 Cycles

Chassis
30315
30316

Cabinet
31422
31421

Speaker
31451
31451

NORMAL VOLTAGE READINGS

Take all readings with chassis operating and tuned to approximately 43 megacycles—no signal. Use a line voltage of 120 volts, or make allowance for any slight difference.

Use a good high resistance voltmeter having a resistance of at least 1000 ohms per volt. Take all D. C. readings on the 500 volt scale except when an asterisk appears. Read from indicated terminals to chassis base. See location chart for position of terminals.

A. C. voltages are indicated by italics.

Tube	Circuit	Terminals of Sockets								Heater Voltages Between Heater Terminals			
		1	2	3	4	5	6	7	8	Socket Terminal Numbers	Volts A. C.		
6SA7	Osc. and Mod.	—	0	0	+240	+90	0	0	6.3	0	2-7	6.3	
6AC7 (1852)	1st I. F. Amp.	—	0	0	0	0	+2*	+148	6.3	+230	2-7	6.3	
6AC7 (1852)	2nd I. F. Amp.	—	0	0	0	0	0	+2*	+145	6.3	2-7	6.3	
6S7	Limiter	—	0	0	0	0	0	0	+50	6.3	2-7	6.3	
6H6	Demod. (Discr.)	—	0	0	0	0	0	-10*	0	6.3	0	2-7	6.3
6SF5	Audio Amp.	—	0	0	0	0	0	+90	+245	6.3	0	2-7	6.3
6F6G	Output	—	0	0	+230	+245	0	0	6.3	+15*	2-7	6.3	
80	Rectifier	—	+300	310	310	+300	—	—	—	—	1-4	5	


SPECIFICATIONS

- Voltage Rating 105 to 125 Volts
- Type of Circuit Frequency Modulation—Superheterodyne
- Tuning Range
40 to 44 Megacycles (40,000 to 44,000 Kilocycles)
- Input Power Rating (120 Volt line) 79 Watts
- Intermediate Frequency 2.1 Megacycles (2100 Kilocycles)
- Speaker Voice Coil Impedance at 400 Cycles Approximately 5 Ohms
- Speaker Field Coil Resistance Approximately 550 Ohms

*Read on lowest possible scale of voltmeter.

MODELS 425H, 425HB
Chassis Wiring

STROMBERG-CARLSON TEL. MFG. CO.

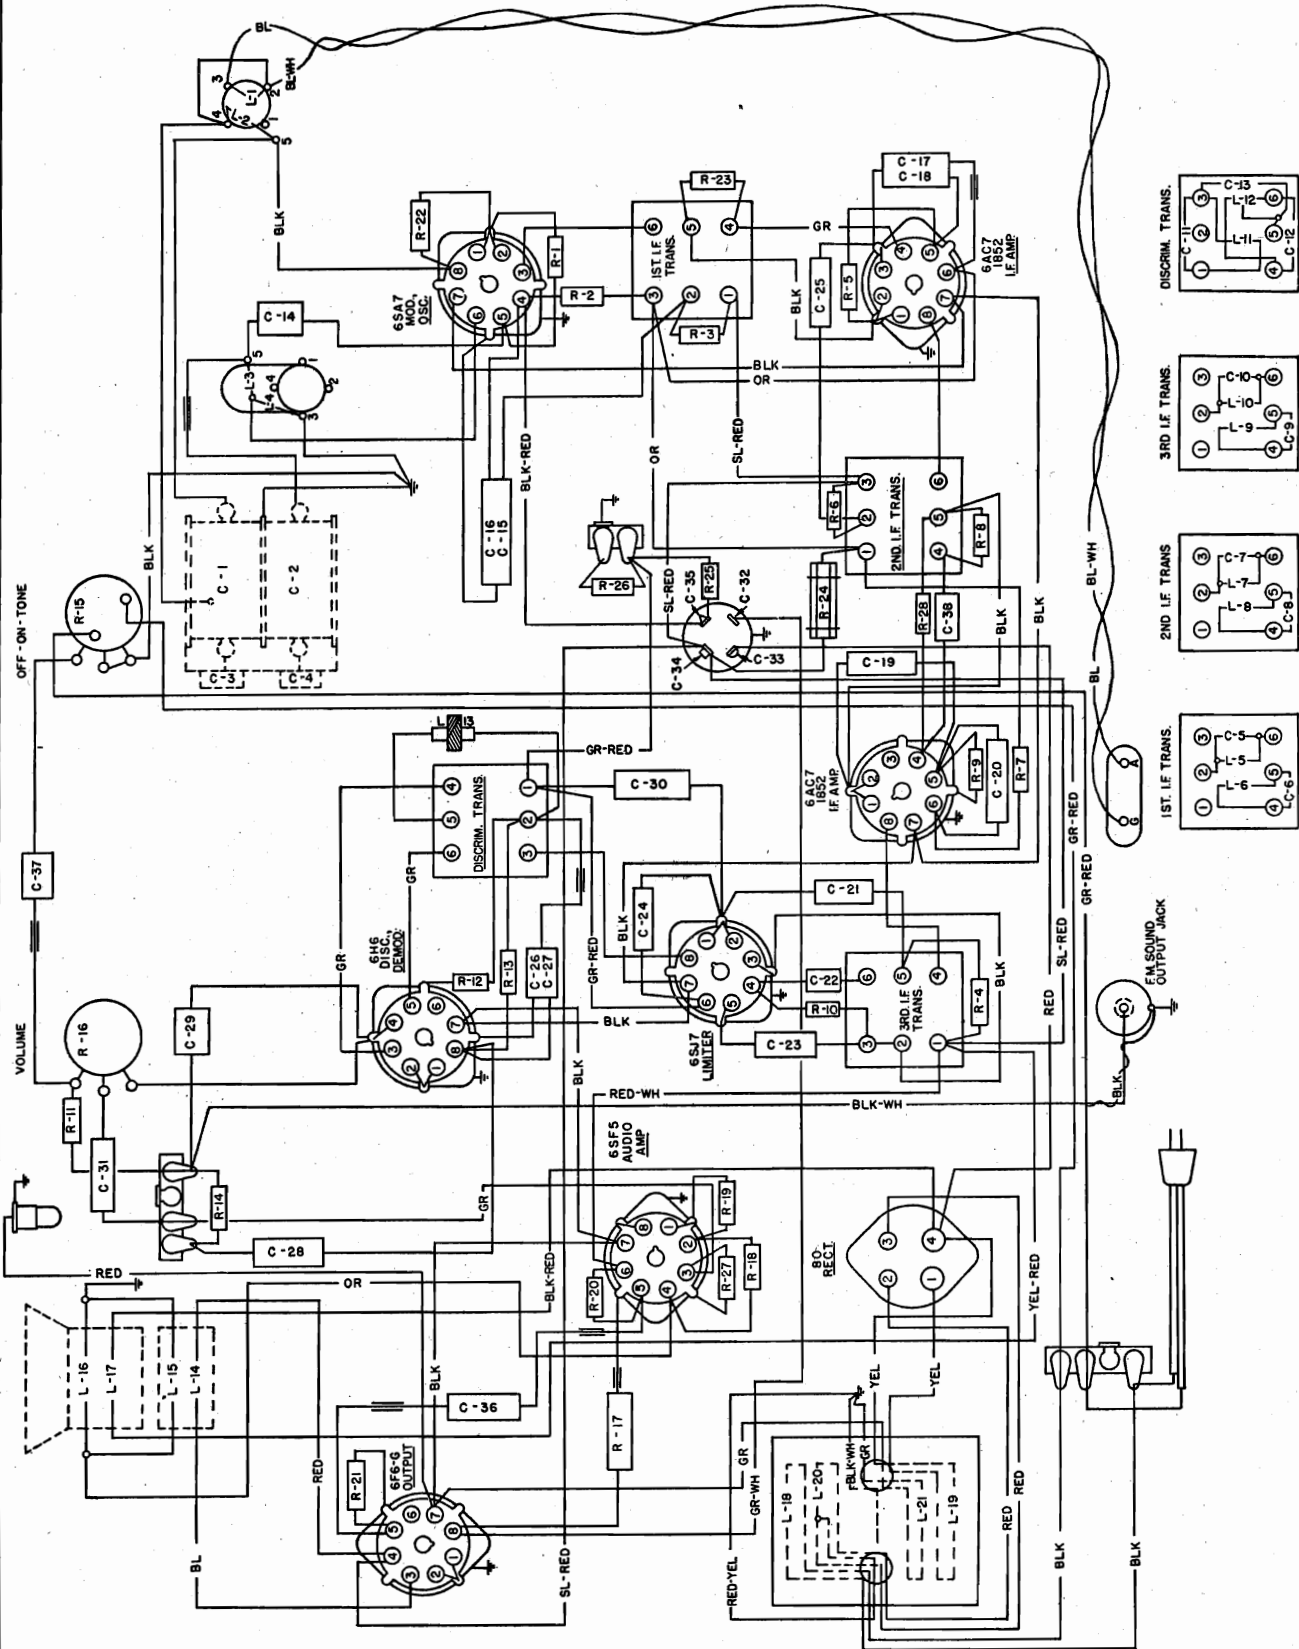

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 425H, 425HB
Socket, Trimmers
Resistance

CONTINUITY TEST

CAUTION: Remove all tubes and disconnect the receiver from the power supply before making continuity test.

Use a good ohmmeter capable of measuring accurately up to several megohms.

The resistances given are often approximate, owing to Electrolytic Capacitors in the circuit. When this is the case, be sure to reverse the test leads and read the highest resistance. Read from indicated terminals to chassis base.

TERMINALS OF SOCKETS										
Tube	Circuit	Cap	1	2	3	4	5	6	7	8
6SA7	Osc. and Mod.	—	S	S	30000Ω	20000Ω	20000Ω	S	S	S
6AC7 (1852)	1st I. F. Amp.	—	S	S	S	2Ω	150Ω	27000Ω	S	30000Ω
6AC7 (1852)	2nd I. F. Amp.	—	S	S	S	500000Ω	150Ω	30000Ω	S	30000Ω
6SJ7	Limitter	—	S	S	S	20000Ω	S	18000Ω	S	18000Ω
6H6	Demod. (Discr.)	—	S	S	90000Ω	S	90000Ω	O	S	180000Ω
6SF5	Audio Amp.	—	S	10Ω	10M	S	300000Ω	30000Ω	S	S
6F6G	Output	—	S	S	30000Ω	30000Ω	1M	O	S	400Ω
80	Rectifier	—	100Ω	30000Ω	30000Ω	100Ω	—	—	—	—



Symbols used are as follows: Ω—ohms; M—megohms; S—short; O—open.

Other Tests Not Shown on Chart

- Antenna terminal to chassis base "short"
- Ground terminal to chassis base "short"
- F. M. Sound Output Jack to chassis base 1 megohm
- Terminals of A. C. plug to chassis base . . "open"
- Between terminals of A. C. plug:
A. C. switch open "open"
A. C. switch closed 6 ohms

R. F. coil tests measured directly across R. F. coil terminals. (See wiring diagram for location of R. F. coil terminals.)

L1—.2 ohm, L2—"short", L3—"short", L4—"short", L13—55 ohms.

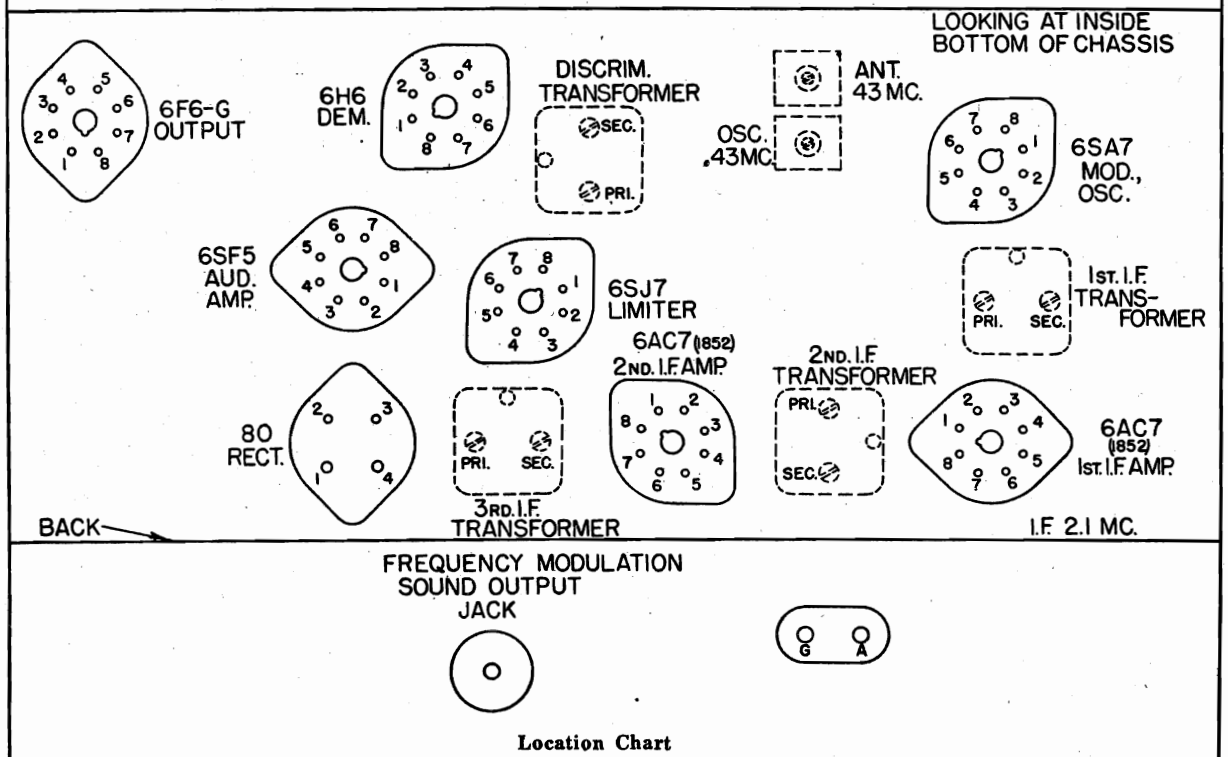

Location Chart

MODELS 425H, 425HB Alignment, Notes

STROMBERG-CARLSON TEL. MFG. CO.

4. Introduce an unmodulated signal of 2100 kilocycles to the grid (terminal No. 4) of the 6S17 limiter tube using a 0.1 microfarad capacitor in series with the output lead of the signal generator. (Approximately one volt signal is necessary.)
5. Adjust the primary of the discriminator transformer for maximum reading of the microammeter.
6. Remove the microammeter and the one megohm resistor from the junction of R-12 and R-13 resistors and connect them across the whole discriminator load (from the high side of the R-13 to ground.)
7. Adjust the secondary of the discriminator transformer for "O" reading of the microammeter.

II. Intermediate Frequency Adjustments.

Important: All intermediate frequency adjustments are made using the same unmodulated signal of 2100 kilocycles. Each I. F. stage must be adjusted independently and in the order given. Do not make any overall adjustments after the previous stage is aligned.

1. Disconnect the jumper wire from the low side of the limiter grid resistor (R-10) and connect the microammeter directly to this wire without using the one megohm resistor.
2. Connect the output lead from the signal generator with the 0.1 microfarad capacitor in series to the grid of the 6AC7 second I. F. tube (Terminal No. 4).
3. Adjust the secondary of the third I. F. transformer for maximum reading of the microammeter.
4. Adjust the primary of the third I. F. transformer for maximum reading of the microammeter.
5. Connect the output lead from the signal generator with the 0.1 microfarad capacitor in series to the grid of the 6AC7 first I. F. tube (Terminal No. 4).
6. Adjust the secondary of the second I. F. transformer for maximum reading of the microammeter.
7. Adjust the primary of the second I. F. transformer for maximum reading of the microammeter.
8. Disconnect the black wire to the antenna coil from the grid terminal of the 6SA7 modulator tube (terminal No. 8) and connect the output lead from the signal with the 0.1 microfarad capacitor in series to this terminal.
9. Adjust the secondary of the first I. F. transformer for maximum reading of the microammeter.
10. Adjust the primary of the first I. F. transformer for maximum reading of the microammeter.

III. Radio Frequency Adjustments.

(Leave the signal generator connected to the grid of the 6SA7 tube in the same manner as when adjusting the first I. F. transformer.)

1. Set the signal generator frequency and the receiver tuning dial to 43 megacycles.
 2. Adjust the oscillator aligning capacitor located on top of the gang capacitor unit for maximum reading of the microammeter.
 3. Remove the output lead and the 0.1 microfarad capacitor in series with it from the grid of the 6SA7 tube and resolder in its original position the black wire which was removed from this terminal.
 4. Replace the 0.1 microfarad capacitor in series with the output lead from the signal generator with a 100 ohm carbon type resistor and connect it to the antenna terminal of the receiver.
 5. Adjust the antenna aligning capacitor located on top of the gang capacitor unit for maximum reading of the microammeter and, at the same time, rotate the gang tuning capacitor back and forth through resonance to obtain maximum reading on the microammeter.
- IMPORTANT:** Do not go back and touch up any adjustments previously made. If the receiver is not in proper alignment after completing the adjustments outlined above, go back and start over again and follow the instructions through to the finish.
6. Re-solder the jumper wire to the low side of the limiter grid resistor (R-10).

Using the 425 Receiver as a Converter

This receiver may be used as a converter so that the audio system of a good high fidelity receiver of the ordinary amplitude modulation type may be utilized to provide the type of high fidelity reception only possible with frequency modulation.

It is only necessary to connect the single pin jack on the back of the chassis (labeled Frequency Modulation Sound Output Jack) to the Phono Input of any other receiver or sound system by means of the cord provided.

In this way, the speaker of the 425 Receiver will act as a "tweeter" or treble speaker and the speaker system of the amplitude modulation receiver will serve as the bass speaker. The balance between the two speakers can be controlled by operating the two volume controls.

ACCESSORIES

Antenna

The proper antenna for frequency modulation reception will depend upon the distance from the stations which it is desired to receive. In some locations, a simple single wire antenna will be suitable but for best results, the Stromberg-Carlson No. 5-A Antenna Adapter used in conjunction with the No. 5 Antenna to which the amplitude modulation receiver is connected is recommended.

It may also be necessary to utilize a horizontal dipole type of antenna in some locations.

Playing Records

To obtain the best quality of phonograph reproduction, a Stromberg-Carlson record player is recommended. If this set is used as a converter, the phonograph should be attached to the amplitude modulation receiver in the regular way. (The installation of a simple switch will eliminate plugging and unplugging.)

If this set is used as a receiver, the sound output jack may be readily converted to a phonograph in put jack by removing the black-white wire which comes from this jack from the terminal block to which it is connected and connecting it to the high side of the volume control (this is the terminal on the volume control to which resistor R-11 is attached).

After this has been done, it is only necessary to plug in a record player, tune to a quiet place on the dial and proceed to operate.

Adjusting Dial Lamp

One dial lamp is used to illuminate the dial on the No. 425 Receiver. To adjust the dial lamp for proper illumination of the dial, slide the lamp socket back and forth on its mounting bracket until maximum illumination is obtained.

ALIGNING INFORMATION

General

Never Realign Unless Absolutely Necessary.

All aligning adjustments are carefully made at the factory with special equipment which is designed for aligning frequency modulation receivers. The limitations of commercial oscillators and other ordinary test equipment are such that alignment should not be attempted in the field unless absolutely necessary.

If alignment is attempted, it will not be successful unless the instructions which follow are adhered to exactly.

The following equipment will be required:

1. A good signal generator with variable output voltage. (All adjustments are made using an unmodulated signal.)
2. A good center "O" microammeter with 100 divisions on each side of "O".

Always have receiver volume control full on.


See location chart for location of aligning adjustment screws.

I. Discriminator Adjustment.

1. Tune the set to the extreme high frequency end of the dial (44.5 megacycles).
2. Connect the center "O" microammeter with a one megohm resistor in series across one half of the discriminator load (from ground to the junction of the two 100,000 ohm resistors R-12 and R-13).
3. Connect the ground terminal of the signal generator to the ground terminal of the chassis.



STROMBERG-CARLSON TEL. MFG. CO.

MODEL 435M
Schematic(A.M.)
Chassis Wiring

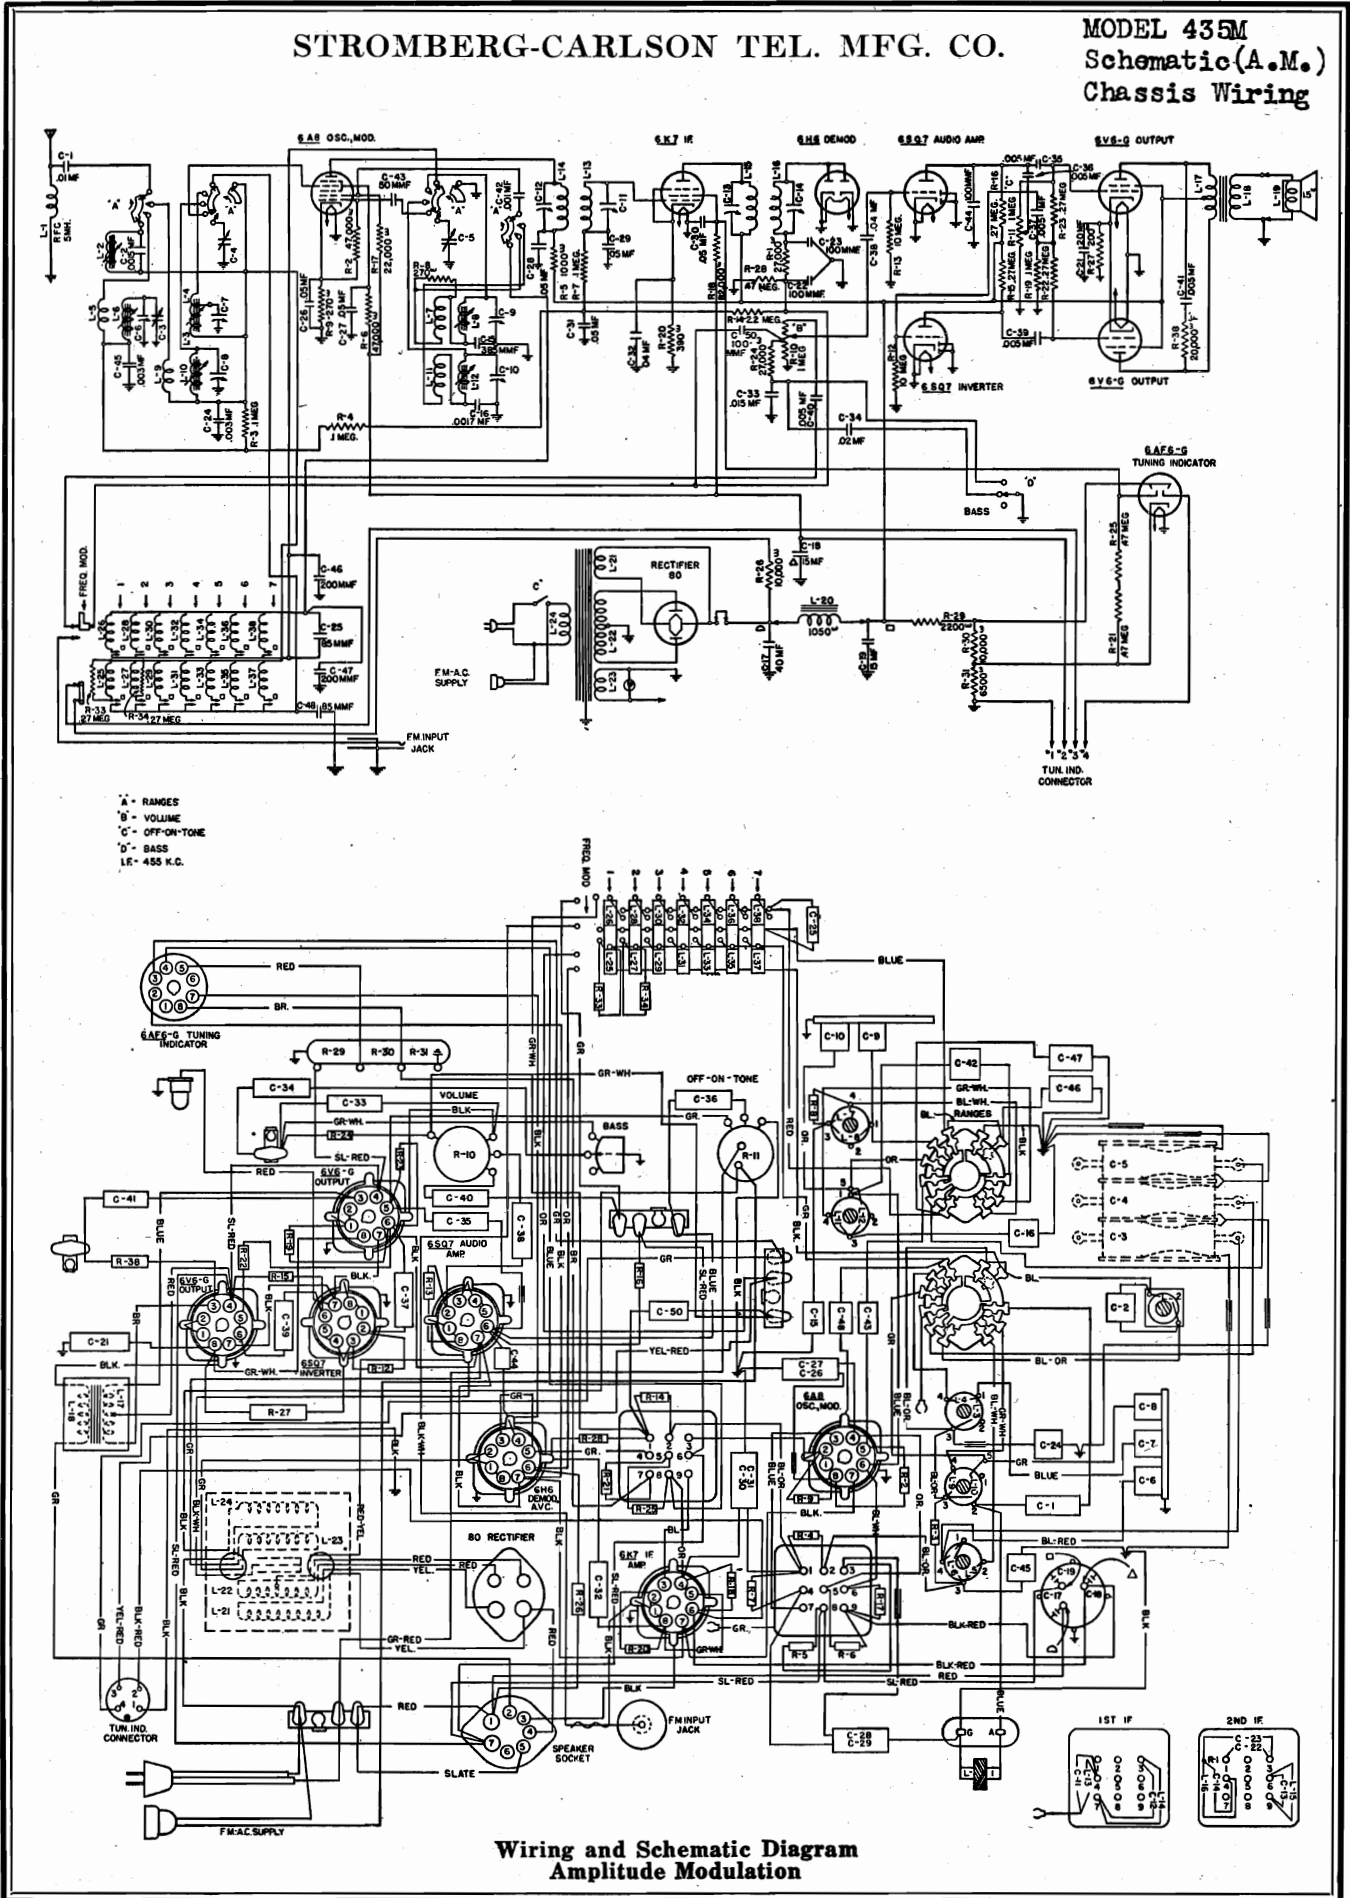

MODEL 435M
Schematic (F.M.)
Chassis Wiring


STROMBERG-CARLSON TEL. MFG. CO.

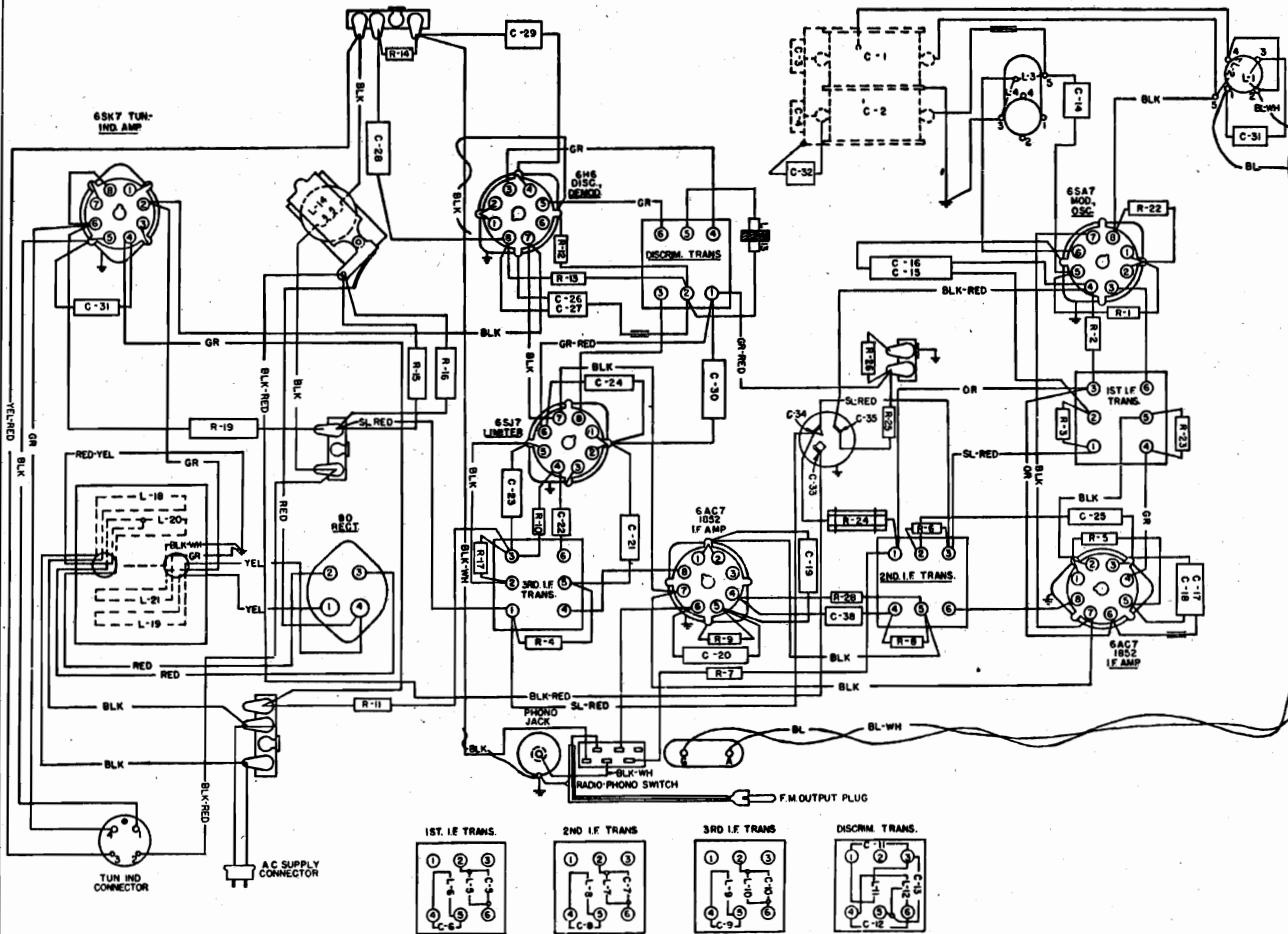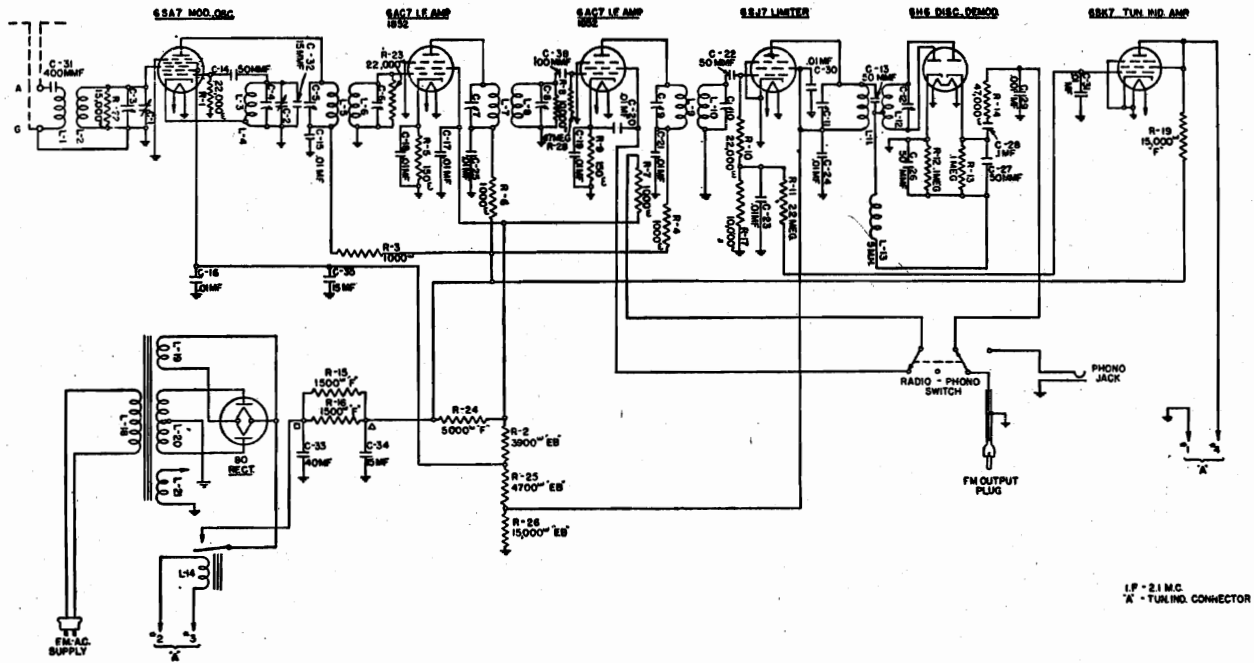


Wiring and Schematic Diagram
Frequency Modulation

STROMBERG-CARLSON TEL. MFG. CO.

MODEL 435M
Socket, Trimmers
A.M. and F.M.
Notes

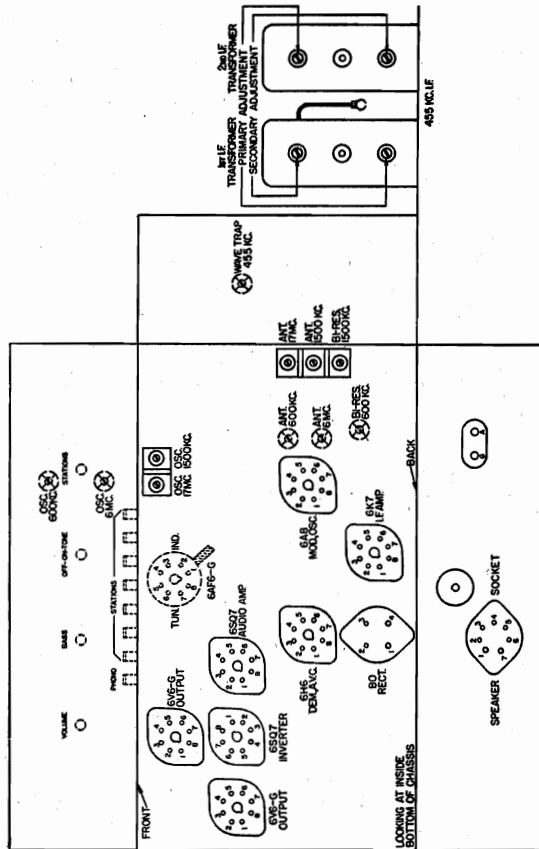

Location Chart (Amplitude Modulation)

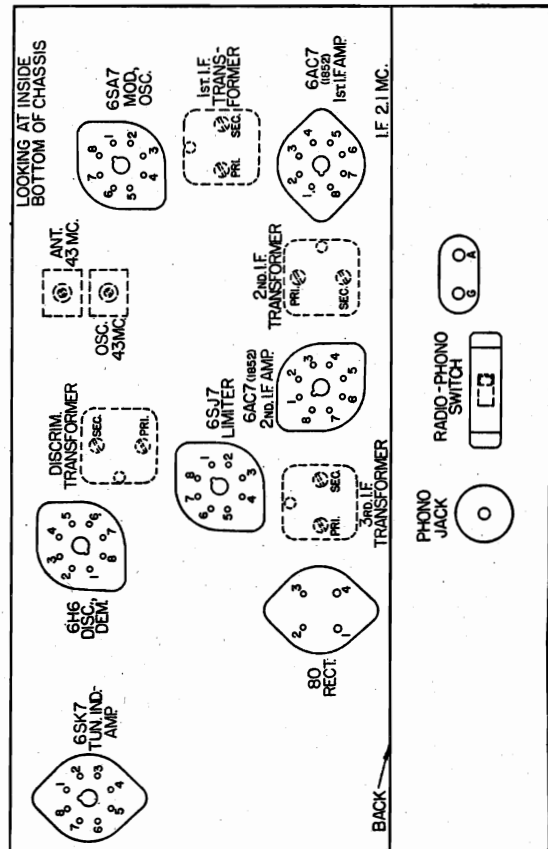

Location Chart—(Frequency Modulation)

IDENTIFICATION TABLE


Model 435-M	Input Power Frequency 50-60 Cycles	Chassis 31481 Amp. Mod. 31482 Freq. Mod.	Cabinet 31840	Speaker 30359
SPECIFICATIONS				
Tuning Ranges..... { Frequency Modulation 40 to 44 Mc. (40,000 to 44,000 Kc.) Short Wave 3.5 to 18 Mc. (3,500 to 18,000 Kc.) Standard Broadcast 54 to 1.7 Mc. (540 to 1,700 Kc.)				
Voltage Rating..... Superheterodyne with Electric Tuning				
Input Power Rating..... 140 Watts				
Intermediate Frequency..... { 455 Kilocycles (Amplitude Modulation) 2.1 Megacycles (Frequency Modulation)				
Speaker Voice Coil Impedance at 400 Cycles..... Approximately 1.5 Ohms				
Speaker Field Coil Resistance..... Approximately 1650 Ohms				

ACCESSORIES

ANTENNA. For best results use a Stromberg-Carlson antenna as shown. Antennas should be erected as high as possible and should be erected as high as possible to receive the desired frequency modulated stations with best results.

For average reception, a single straight wire antenna may be used for both amplitude and frequency modulation.

The various types of antennas should be connected to the No. 435 Receiver as follows:

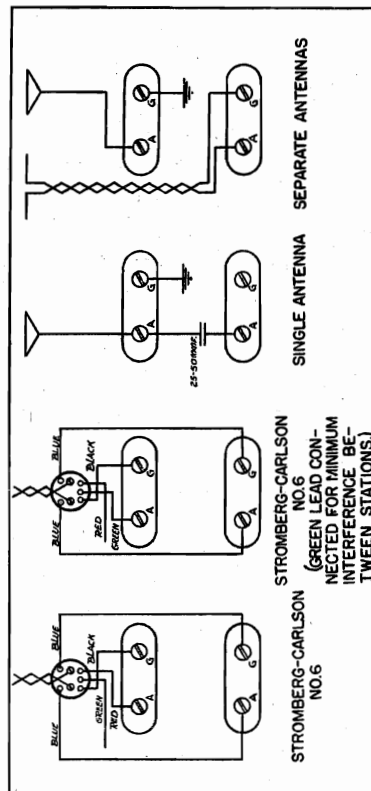

PLAYING RECORDS. To obtain the best quality of reproduction, use a Stromberg-Carlson record player as recommended. They are designed for use with this receiver and all that is necessary is to connect the record player to the single prong socket switch located on the back of the chassis to "Phono" position, put in the frequency needed to convert the volume and tone may be controlled with the controls at the receiver or (if such is provided), the volume control on the record player may be used.

A low impedance pick-up may be used, but a matching transformer must be placed between the phonograph pick-up and the chassis.

HEADSET ATTACHMENT. Headphones can be very simply attached to this receiver. Ask for Pc. No.

28308 Headset Package Assembly, which comes complete with headphones and installation instructions. CARE OF CABINET. The finish of Stromberg-Carlson Cabinets should be protected by using Stromberg-Carlson Cabinet Polish regularly. It is available in pint cans, designated as Pc. No. 28601.

Nicks and scratches of most kinds can be repaired quickly and easily by proper use of the Pc. No. 28962 Touch-Up Kit. Complete instructions are provided with each kit.

TOOLS. Stromberg-Carlson can supply all the tools required for working on these sets. For example: SD-23 Phillips Head Screwdriver No. 24608 Aligning Tool

Also pliers, cutters, screwdrivers, etc.

MODEL 435M Alignment

STROMBERG-CARLSON TEL. MFG. CO.

ALIGNING INFORMATION

NEVER REALIGN UNLESS ABSOLUTELY NECESSARY

GENERAL. All aligning adjustments are carefully made at the factory with special equipment which is designed for aligning frequency modulation receivers. The limitations of commercial oscillographs and other ordinary test equipment are such that alignment should not be attempted in the field unless absolutely necessary.

If alignment is attempted, it will not be successful unless the instructions which follow are adhered to exactly.

The following equipment will be required:

1. A good signal generator with variable output voltage. (All adjustments of the frequency modulation range are made using an unmodulated signal.)
2. A good center "O" microammeter with 100 divisions on each side of "O".

Always have receiver volume control full on.

See location chart on Page 5 for location of aligning adjustment screws.

Important. Before proceeding to align the frequency modulation chassis of this receiver tune the receiver to 43 megacycles and mark this point with a pencil on the large pulley of the frequency modulation chassis. Carefully remove the drive cord from this pulley noting the relation of the point marked with the setting of the variable capacitor.

I. Discriminator Adjustment. (Frequency Modulation)

1. Tune the set to the extreme high frequency plates of variable capacitor all the way in.
2. Connect the center "O" microammeter with a one megohm resistor in series across one half of the discriminator load (from ground to the junction of the two 100,000 ohm resistors R-12 and R-13).
3. Connect the ground terminal of the signal generator to the ground terminal of the chassis.
4. Introduce an unmodulated signal of 2100 kilocycles to the grid (terminal No. 4) of the 6SJ7 limiter tube using a 0.1 microfarad capacitor in series with the output lead of the signal generator. (Approximately one volt signal is necessary.)
5. Adjust the primary of the discriminator transformer for maximum reading of the microammeter.
6. Remove the microammeter and the one megohm resistor from the junction of R-12 and R-13 resistors and connect them across the whole discriminator load (from the high side of the R-13 to ground).
7. Adjust the secondary of the discriminator transformer for "O" reading of the microammeter.

II. Intermediate Frequency Adjustments. (Frequency Modulation)

Important: All intermediate frequency adjustments are made using the same unmodulated signal of 2100 kilocycles. Each I. F. stage must be adjusted independently and in the order given. Do not make any overall adjustments after the previous stage is aligned.

1. Disconnect the jumper wire from the low side of the limiter grid resistor (R-10) and connect the microammeter directly to this wire without using the one megohm resistor.
2. Connect the output lead from the signal generator with the 0.1 microfarad capacitor in series to the grid of the 6AC7 second I. F. tube (Terminal No. 4).
3. Adjust the secondary of the third I. F. transformer for maximum reading of the microammeter.
4. Adjust the primary of the third I. F. transformer for maximum reading of the microammeter.
5. Connect the output lead from the signal generator with the 0.1 microfarad capacitor in series to the grid of the 6AC7 first I. F. tube (Terminal No. 4).
6. Adjust the secondary of the second I. F. transformer for maximum reading of the microammeter.
7. Adjust the primary of the second I. F. transformer for maximum reading of the microammeter.
8. Disconnect the black wire to the antenna coil from the grid terminal of the 6SA7 modulator tube (terminal No. 8) and connect the output lead from the signal generator with the 0.1 microfarad capacitor in series to this terminal.
9. Adjust the secondary of the first I. F. transformer for maximum reading of the microammeter.

10. Adjust the primary of the first I. F. transformer for maximum reading of the microammeter.

III. Radio Frequency Adjustments. (Frequency Modulation)

(Leave the signal generator connected to the grid of the 6SA7 tube in the same manner as when adjusting the first I. F. transformer.)

1. Set the signal generator frequency and the receiver tuning dial to 43 megacycles.
2. Adjust the oscillator aligning capacitor located on top of the gang capacitor unit for maximum reading of the microammeter.
3. Remove the output lead and the 0.1 microfarad capacitor in series with it from the grid of the 6SA7 tube and resolder in its original position the black wire which was removed from this terminal.
4. Replace the 0.1 microfarad capacitor in series with the output lead from the signal generator with a 100 ohm carbon type resistor and connect it to the antenna terminal of the receiver.
5. Adjust the antenna aligning capacitor located on top of the gang capacitor unit for maximum reading of the microammeter and, at the same time, rotate the gang tuning capacitor back and forth through resonance to obtain maximum reading on the microammeter.

IMPORTANT: Do not go back and touch up any adjustments previously made. If the receiver is not in proper alignment after completing the adjustments outlined above, go back and start over again and follow the instructions through to the finish.

6. Re-solder the jumper wire to the low side of the limiter grid resistor (R-10).

IV. Intermediate Frequency Adjustments. (Amplitude Modulation)

1. Set the range switch to Standard Broadcast position.
2. Tune set to extreme low frequency end of the dial.
3. Connect the ground terminal of the signal generator to the ground terminal of the chassis.
4. Introduce a modulated signal of 455 Kilocycles to the grid cap of the 6A8 Tube, using a 0.1 microfarad capacitor in series with the output lead of the signal generator. (Do not remove the grid clip from this tube.)
5. Adjust the I. F. Aligners for maximum output in the following order:
 - A. Secondary of second I. F. transformer.
 - B. Primary of second I. F. transformer.
 - C. Secondary of first I. F. transformer.
 - D. Primary of first I. F. transformer.

V. Radio Frequency Adjustments. (Amplitude Modulation)

Short Wave Range (C Band)

1. Replace the 0.1 microfarad capacitor in series with the output lead of the signal generator with a 400 ohm carbon type resistor, and connect it to the antenna terminal of the chassis.
2. Set the range switch to the short-wave range (C Band).
3. Set the signal generator frequency and the receiver tuning dial to 6 megacycles.
4. Adjust the 6 megacycles oscillator and antenna (iron cores) for maximum signal.
5. Set the signal generator frequency and the receiver tuning dial to 17 megacycles.
6. Adjust the 17 megacycles oscillator and antenna aligning capacitors for maximum signal.
7. Repeat operations three and four.
8. Repeat operations five and six.

Standard Broadcast Range (A Band)

1. Replace the 400 ohm carbon type resistor in series with the output lead from the signal generator with a 200 micro-microfarad capacitor.
2. Set the range switch to the Standard Broadcast Range (A Band).
3. Set the signal generator frequency and the receiver tuning dial to 600 Kc.
4. Adjust the 600 Kc. oscillator, Bi-Resonator and antenna (iron cores) for maximum signal.
5. Set the signal generator frequency and the receiver tuning dial to 1500 Kc.
6. Adjust the 1500 Kc. oscillator, Bi-Resonator and antenna aligning capacitors for maximum signal.
7. Repeat operations three and four.
8. Repeat operations five and six.

VI. Wave Trap Adjustment.

(Leave the receiver connected in the same manner as when adjusting the Standard Broadcast Range (A Band)).

1. Tune set to 1000 Kc.
2. Set the signal generator frequency to 455 Kc. and introduce a fairly strong modulated signal to the receiver.
3. Adjust the wave trap aligner for minimum signal.

FEATURES

SPECIAL CIRCUITS. A tuning indicator having two apertures is used in this receiver. One aperture will operate when tuning stations in the standard broadcast and short-wave ranges and the other aperture will operate when tuning stations in the frequency modulation range. Stations should be tuned for maximum closing of the tuning indicator.

Iron core coils are used in the standard broadcast and short-wave ranges to provide greater accuracy of alignment. In addition a thermal drift compensator is included in the circuit. The audio system employs a special inverter push-pull circuit designed to provide excellent fidelity. The power transformer has an electro-static shield to reduce line noises to a minimum and the chassis is thoroughly shielded throughout.

AUTOMATIC TUNING. An adjustable iron core coil type of automatic tuning is employed and the stations may be easily located by properly utilizing the concentric adjusting screws provided. A special tool identified as SD-70 Screwdriver will help materially in setting up the automatic tuning.

MANUAL TUNING. Important. When tuning stations manually in the Standard Broadcast or Short Wave ranges be sure that the push button designated "Freq. Mod." is not pushed in.

PHONOGRAPH OPERATION. A jack is provided on the back of the chassis into which a record player may be plugged and a switch is provided next to it for switching from "Radio" to "Phonograph".

TELEVISION. Switching to phonograph also makes the audio amplifier and loud speaker available for use with television receivers designed for this type of sound reproduction.

REMOVING THE CHASSIS FROM CABINET

Do not remove the chassis from the shelves; instead, remove the chassis and shelf assembly by taking out the six wood screws from the top shelf and the four

wood screws from the bottom shelf, thus removing chassis and shelves as a unit.

ADJUSTING DIAL LAMP

The dial on this receiver is edge lighted, and for proper illumination it is very important that the dial light be adjusted so that the filament is exactly opposite the edge of the glass.

To make this adjustment simply slide the pilot light socket back and forth on its mounting bracket until maximum illumination is obtained.

STROMBERG-CARLSON TEL. MFG. CO.

MODEL 435M
Tuner, Voltage
Resistance

CONTINUITY TEST

Remove all tubes and disconnect the receiver from the power supply before making continuity test. Test speaker socket with speaker left out. Leave speaker plug in socket for all other tests of the amplitude modulation chassis. Use a good meter capable of measuring up to several megohms. See location chart for position and numbering of terminals.

Tube	Circuit	TERMINALS OF SOCKETS							
		1	2	3	4	5	6	7	8
6A8	Mod. and Osc.	3M	S	200000	200000	48000	200000	S	270
6K7	I. F. Amp.	3M	S	19000	200000	380	200000	S	390
6H6	Dem.—A. V. C.	—	S	500000	S	500000	20000	S	S
6S07	Audio Amp.	—	S	10M	S	S	300000	S	S
6S07	Audio Inv.	—	S	10M	S	S	300000	S	S
6V6G	Output (A)	—	S	16000	16000	270000	100000	S	200
6V6G	Output	—	S	16000	16000	400000	0	S	200
6AF6G	Tun. Ind.	—	O	S	0	200000	16000	O	S
80	Rectifier	—	19000	100	120	19000	—	—	—
—	Speaker Socket	—	Greater	S	S	O	Greater	O	16000

Tube	Circuit	TERMINALS OF SOCKETS							
		1	2	3	4	5	6	7	8
6A8	Mod. and Osc.	0	0	+250	+110	-8*	+173	6.3	+3*
6K7	I. F. Amp.	0	0	+253	+108	+4*	—	6.3	+4*
6H6	Dem. and A. V. C.	—	0	0	0	0	0	0	6.3
6S07	Audio Amp.	—	0	0	0	0	0	+108	6.3
6S07	Audio Inv.	—	0	0	0	0	0	+108	6.3
6V6G	Output	—	0	0	+250	+254	0	—	6.3
6V6G	Output	—	0	0	+250	+254	0	—	6.3
6AF6G	Tuning Indicator	—	—	0	+52	+110	+220	—	6.3
80	Rectifier	—	+382	575	575	+382	—	—	—
—	Speaker Socket	—	—	+382	0	0	+382	+382	—

Remove all tubes and disconnect the receiver from the power supply before making continuity test. Test speaker socket with speaker left out. Leave speaker plug in socket for all other tests of the amplitude modulation chassis. Use a good meter capable of measuring up to several megohms. See location chart for position and numbering of terminals.

Take all readings with chassis operating and tuned manually to 1000 kc. or 45 mc.—no signal. Use a line voltage of 120 volts, or make allowance for the variation. Use a good high resistance voltmeter having a resistance of at least 1000 ohms per volt. Take all D. C. readings on the 500 volt scale except when an asterisk appears.

INSTRUCTIONS FOR SETTING UP PUSH BUTTONS

- Turn in manually the highest frequency station to be set up and note carefully the program being transmitted.
- Turn the range switch to the push button position and push the highest frequency button.
- Using a very small screwdriver adjust the slot in the inner screw until it coincides with the slot in the outer screw.
- Using a larger screwdriver, adjust both screws at the same time until the desired station is tuned in as well as possible.
- Using the small screwdriver again, adjust the small inner screw for maximum closing of the tuning indicator. (Be sure the outer screw does not move while adjusting the inner screw.)
- Operate stations 5, 6 and 7 can be greatly simplified by using the double screwdriver designed to fit both of these screws at the same time.
- Set up the other stations in the same manner.
- Recheck the adjustment of each adjusting screw.

NORMAL VOLTAGE READINGS

Read from indicated terminals to chassis base. See location chart on Page 5 for position of terminals. A. C. voltages are indicated by italics. To measure voltages of 6AF6G tube remove the metal cover on the tuning indicator socket and read from indicated terminals.


AMPLITUDE MODULATION CHASSIS

Tube	Circuit	TERMINALS OF SOCKETS							
		1	2	3	4	5	6	7	8
6A8	Mod. and Osc.	0	0	+250	+110	-8*	+173	6.3	+3*
6K7	I. F. Amp.	0	0	+253	+108	+4*	—	6.3	+4*
6H6	Dem. and A. V. C.	—	0	0	0	0	0	0	6.3
6S07	Audio Amp.	—	0	0	0	0	0	+108	6.3
6S07	Audio Inv.	—	0	0	0	0	0	+108	6.3
6V6G	Output	—	0	0	+250	+254	0	—	6.3
6V6G	Output	—	0	0	+250	+254	0	—	6.3
6AF6G	Tuning Indicator	—	—	0	+52	+110	+220	—	6.3
80	Rectifier	—	+382	575	575	+382	—	—	—
—	Speaker Socket	—	—	+382	0	0	+382	+382	—

*Read on lowest possible scale of voltmeter 5 volts AC between terminals 1 and 4 of rectifier sockets (No. 80 tube)

STROMBERG-CARLSON TEL. MFG. CO.


MODELS 450M, 450MB
Schematic

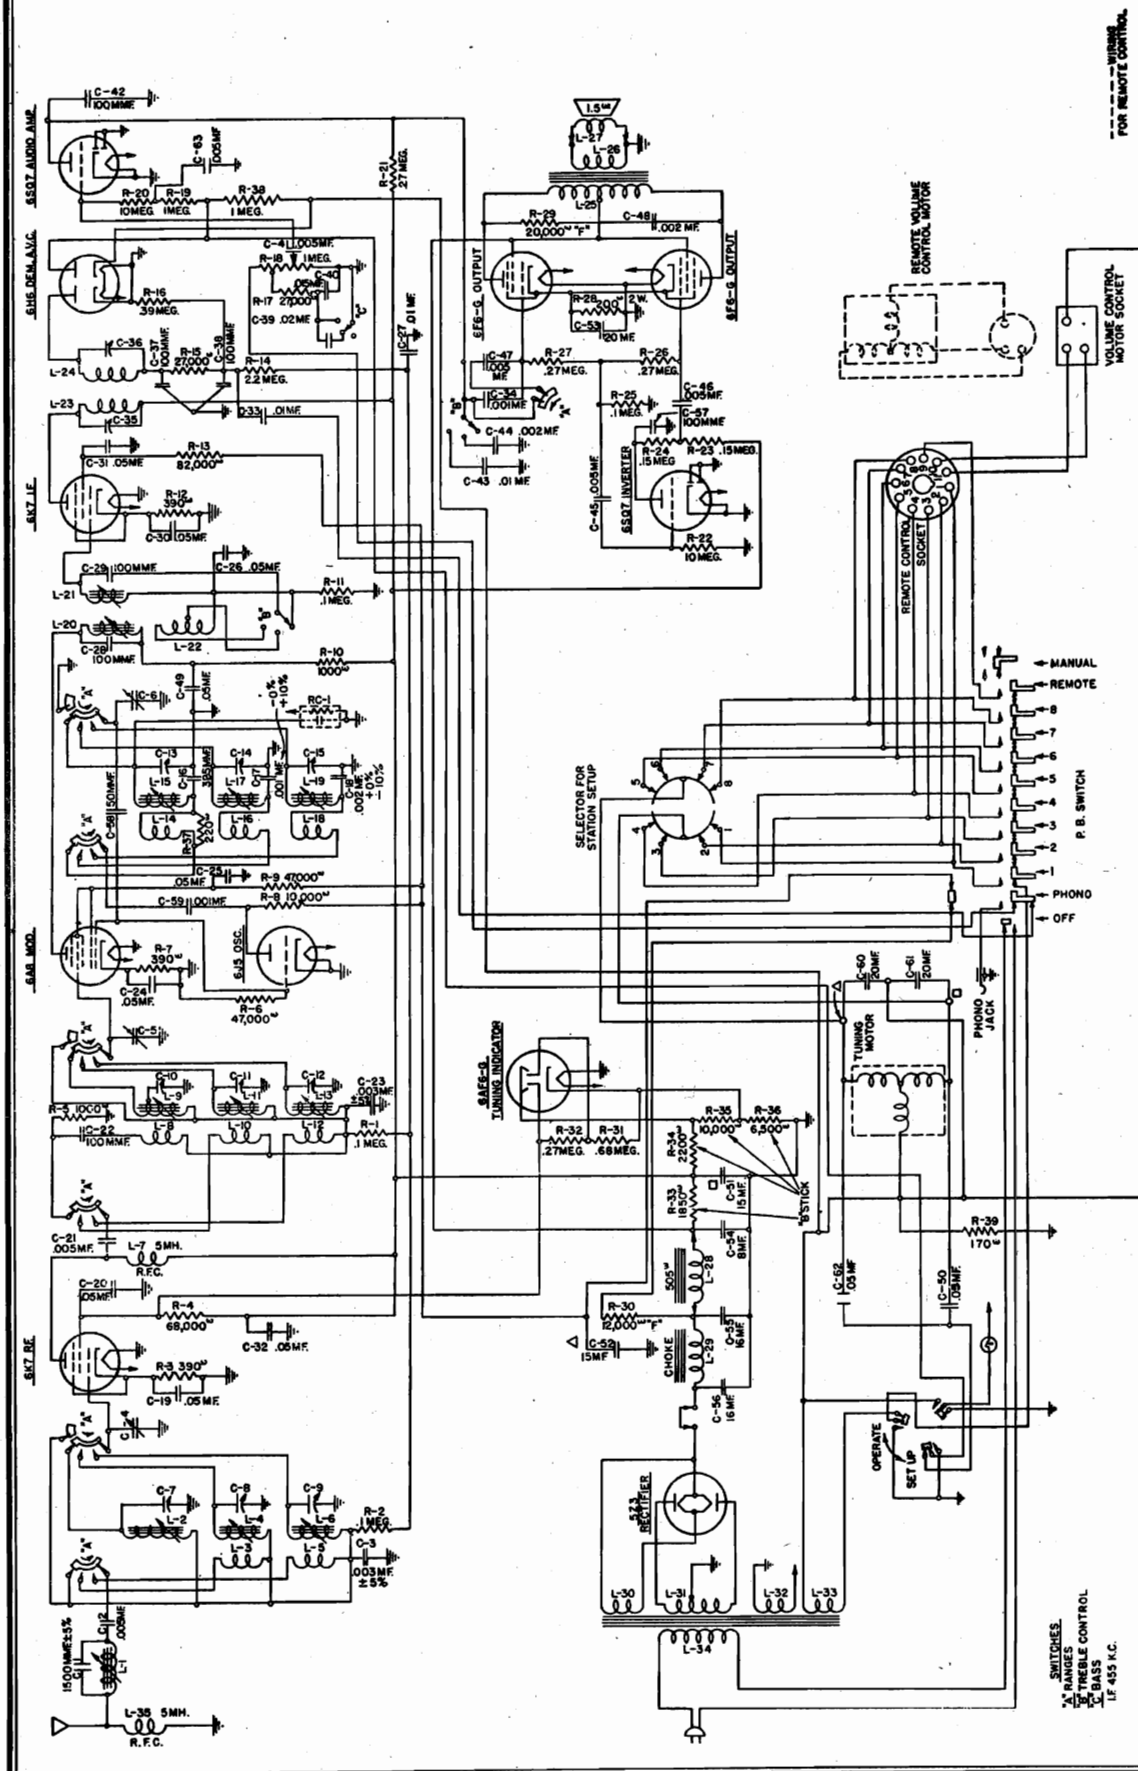

Input Power Rating.....120 Watts
 Intermediate Frequency.....455 Kilocycles
 Speaker Voice Coil Impedance at 400 Cycles.....Approximately 1.5 Ohms
 Speaker Field Coil Resistance.....505 Ohms

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 440M, 440MB
Schematic

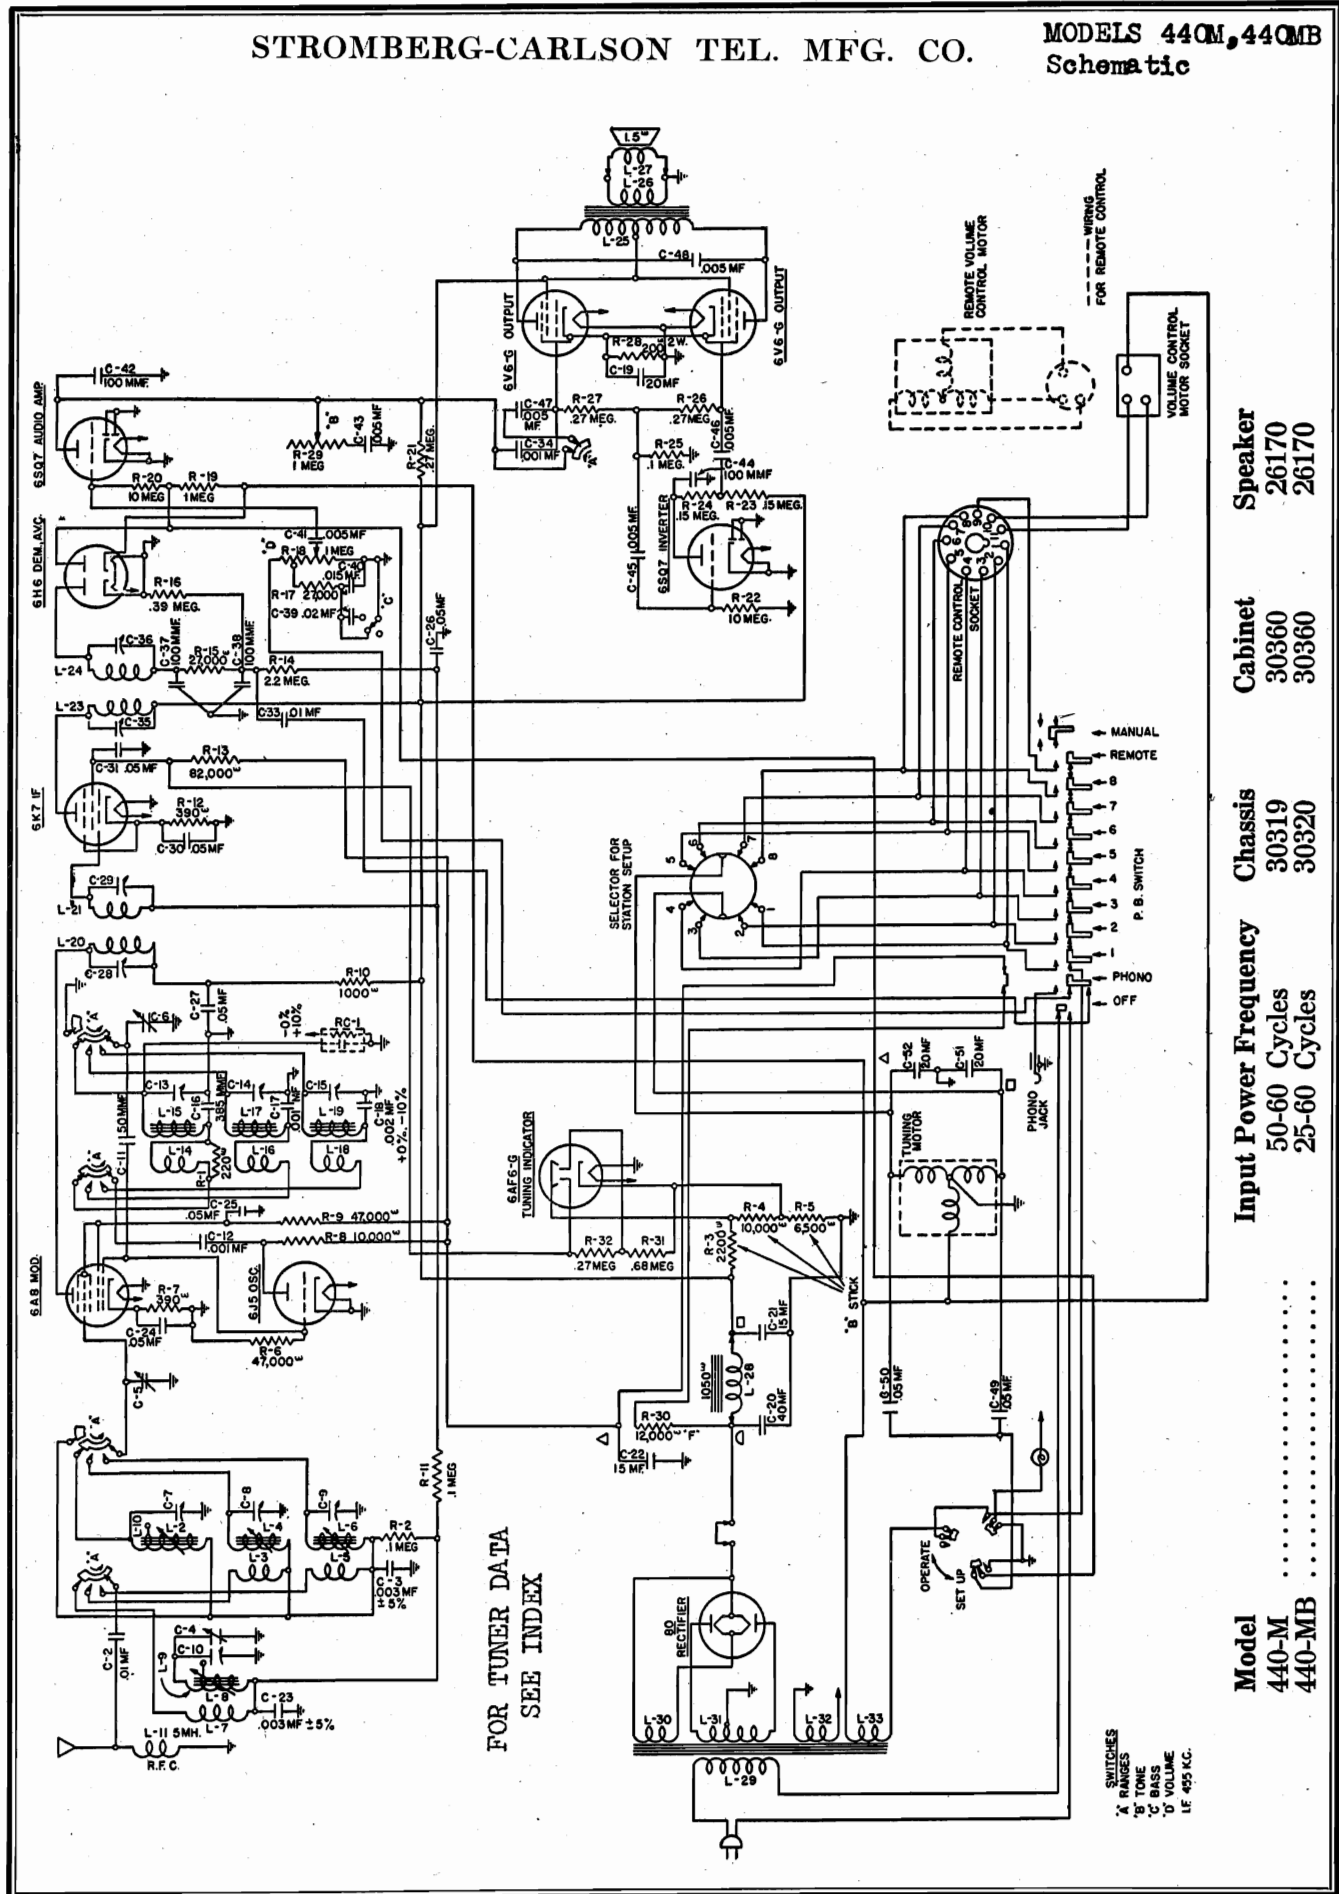

Model	Input Power Frequency	Chassis	Cabinet	Speaker
440-M	50-60 Cycles	30319	30360	26170
440-MB	25-60 Cycles	30320	30360	26170

MODELS 450M, 450MB
Tuner Data

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 440M, 440MB
Voltage Resistance
Tuner Data


INSTRUCTIONS FOR SETTING UP PUSH BUTTONS
IMPORTANT: The stations selected should be the local or favorite stations which give good reception at all times.
 Set up stations in the daytime to avoid unnecessary interference.
 Allow the set to run for about twenty minutes before setting up stations.
 Always use the tuning indicator unit when setting up stations in order to determine when the station is exactly in tune.
 1. Put the call letters of the selected stations in place above the push buttons. The stations should be arranged according to frequency with the highest frequency at the right and the lowest frequency at the left, just as on the dial. (The call letters will be found inside the envelope stapled inside or underneath the cabinet).
 2. Set the "Treble" control in normal position.
 3. Turn the set-up switch (located on the base just back of the brush and commutator assembly) to the set-up position. (The slot in the screw should point toward "set-up").
 4. Push the button of the highest frequency station to be set up (button No. 3) and then tune in that station manually. Be sure the station is exactly "in tune" by tuning carefully and watching the cathode ray indicator.
 5. Slide the brush to which the blue wire is connected until it is over the slot in the commutator. Then adjust it very carefully until the pilot light goes out. This indicates exact adjustment.
 6. Repeat operations 4 and 5 for each station. Work from right to left or from the higher to the lower frequencies in accordance with the table below.

Push Button No. Purpose Color of wire on brush

1	Manual	Blue
2	Remote	Orange
3	Highest frequency station	Green
4	Next lower frequency station	Brown
5	Next lower frequency station	Slate
6	Next lower frequency station	Red
7	Next lower frequency station	Black
8	Next lower frequency station	Blue White
9	Next lower frequency station	Black
10	Next lower frequency station	Blue White
11	Phonograph	Black
12	Off	Blue White

See diagram

7. Turn the set-up switch back to the "Operate" position.
 8. Check the operation of all the push buttons to be sure that each has been accurately set up. If it is necessary to readjust any of the buttons, follow the procedure given above.

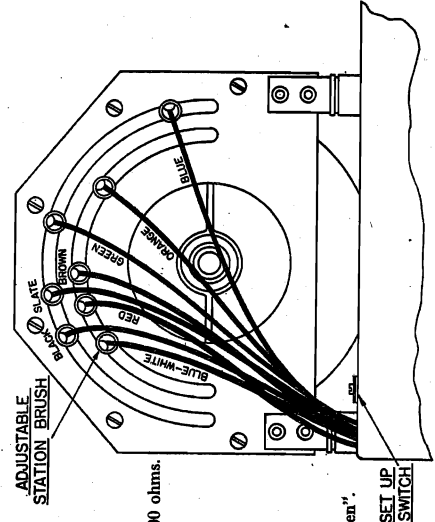

Showing Adjustable Station Brushes and Set Up Switch.

NORMAL VOLTAGE READINGS
 Take all readings with chassis operating and tuned manually to 1000 Kc.—no signal.
 Use a line voltage of 120 volts, or make allowance for the variation.
 Use a good high resistance voltmeter having a resistance of at least 1000 ohms per volt.
 Take all D. C. readings on the 500 volt scale except when an asterisk appears.
 A. C. voltages are indicated by italics.
 To measure voltages of 6AF6G tube remove the metal cover on the tuning indicator socket and read from indicated terminals.

Tube	Circuit	Terminals of Sockets										
		1	2	3	4	5	6	7	8			
6A3	Modulator	0	0	+260	+95	—	+95	6.5	6.5	+2*	2-7	6.5
6B5	Oscillator	—	0	+160	—	—	+230	6.5	0	—	2-7	6.5
6K7	I. F. Amp.	0	0	+260	+95	+3*	+230	6.5	+3*	—	2-7	6.5
6H6	Dem.—A. V. C.	—	0	—	—	—	—	6.5	0	—	2-7	6.5
6SQ7	Audio Amp.	—	0	0	0	0	+100	6.5	0	—	7-8	6.5
6S07	Audio Inv.	—	0	0	0	0	+95	6.5	0	—	7-8	6.5
6V6	Output	—	0	+255	+260	—	—	6.5	+14*	—	2-7	6.5
6V6	Output	—	0	+255	+260	—	—	6.5	+14*	—	2-7	6.5
6AF6G	Tun. Ind.	—	0	+70	+100	+230	—	6.3	+100	—	2-7	6.3
80	Rectifier	—	+380	385	+380	—	—	—	—	—	1-4	5
—	Speaker	—	—	—	—	—	—	—	—	—	—	—
—	Socket	—	+380	0	0	+380	+380	—	+265	—	—	—

*Read on lowest possible scale of voltmeter.

CAUTION: Remove all tubes and disconnect the receiver from the power supply before making continuity test.
 Use a good meter capable of measuring accurately up to several megohms.
 The resistances given are often approximate, owing to electrolytic capacitors in the circuit.
 When this is the case, be sure to reverse the test leads and read the highest resistance.

TERMINALS OF SOCKETS

Tube	Circuit	Cap	1	2	3	4	5	6	7	8
6A3	Modulator	2.7 M.	S	S	20,000Ω	80,000Ω	47,000Ω	80,000Ω	S	390Ω
6B5	Oscillator	—	S	S	41,000Ω	31,000Ω	47,000Ω	31,000Ω	S	S
6K7	I. F. Amp.	2.5 M.	S	S	19,000Ω	A	390Ω	B	S	390Ω
6H6	Dem.—A. V. C.	—	S	S	C	3†	410,000Ω	I. M.	S	S
6SQ7	Audio Amp.	—	S	10 M.	S	S	S	290,000Ω	S	S
6S07	Audio Inv.	—	S	10 M.	S	S	S	320,000Ω	S	S
6V6G	Output	—	S	S	17,000Ω	17,000Ω	370,000Ω	100,000Ω	S	200Ω
6V6G	Output	—	S	S	17,000Ω	17,000Ω	370,000Ω	100,000Ω	S	200Ω
6AF6G	Tun. Ind.	—	O	S	250,000Ω	150,000Ω	16,000Ω	—	O	6,500Ω
80	Rectifier	—	17,000Ω	110Ω	120Ω	17,000Ω	—	—	—	—
—	Speaker	—	8,000Ω	S	S	O	8,000Ω	O	20,000Ω	—

Other tests not shown on chart
 Test from phono jack on back of chassis base;
 Push "Phono" button in—1 megohm.
 Push "Manual" button in—"open".
 Antenna terminal to chassis base—70 ohms.
 Ground terminal to chassis base—"short".
 Test between terminals of A. C. plug;
 Push "On" button in—3 ohms
 Push "Manual" button in—"open".
 Terminals of A. C. plug to chassis base—"open".


R. F. coil tests measured directly across R. F. coil terminals with range switch set in standard position (A Band).
 L1—1 ohm, L2—1.5 ohms, L3—2 ohm, L4—2 ohms, L5—1 ohm, L6—"short", L7—1 ohm, L8—2 ohms, L9—1.5 ohms, L10—2 ohm, L11—2 ohm, L12—2 ohm, L13—2 ohm, L14—5 ohm, L15—4 ohms, L16—2 ohm, L17—3 ohm, L18—2 ohm, L19—"short".

Symbols used are as follows: Ω—ohms; M—megohms; S—short; O—open.

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 455M, 455MB
455PL, 455PLB
Schematic

105 to 125 Volts
Voltage Rating
Type of Circuit
Superheterodyne with Electric Tuning

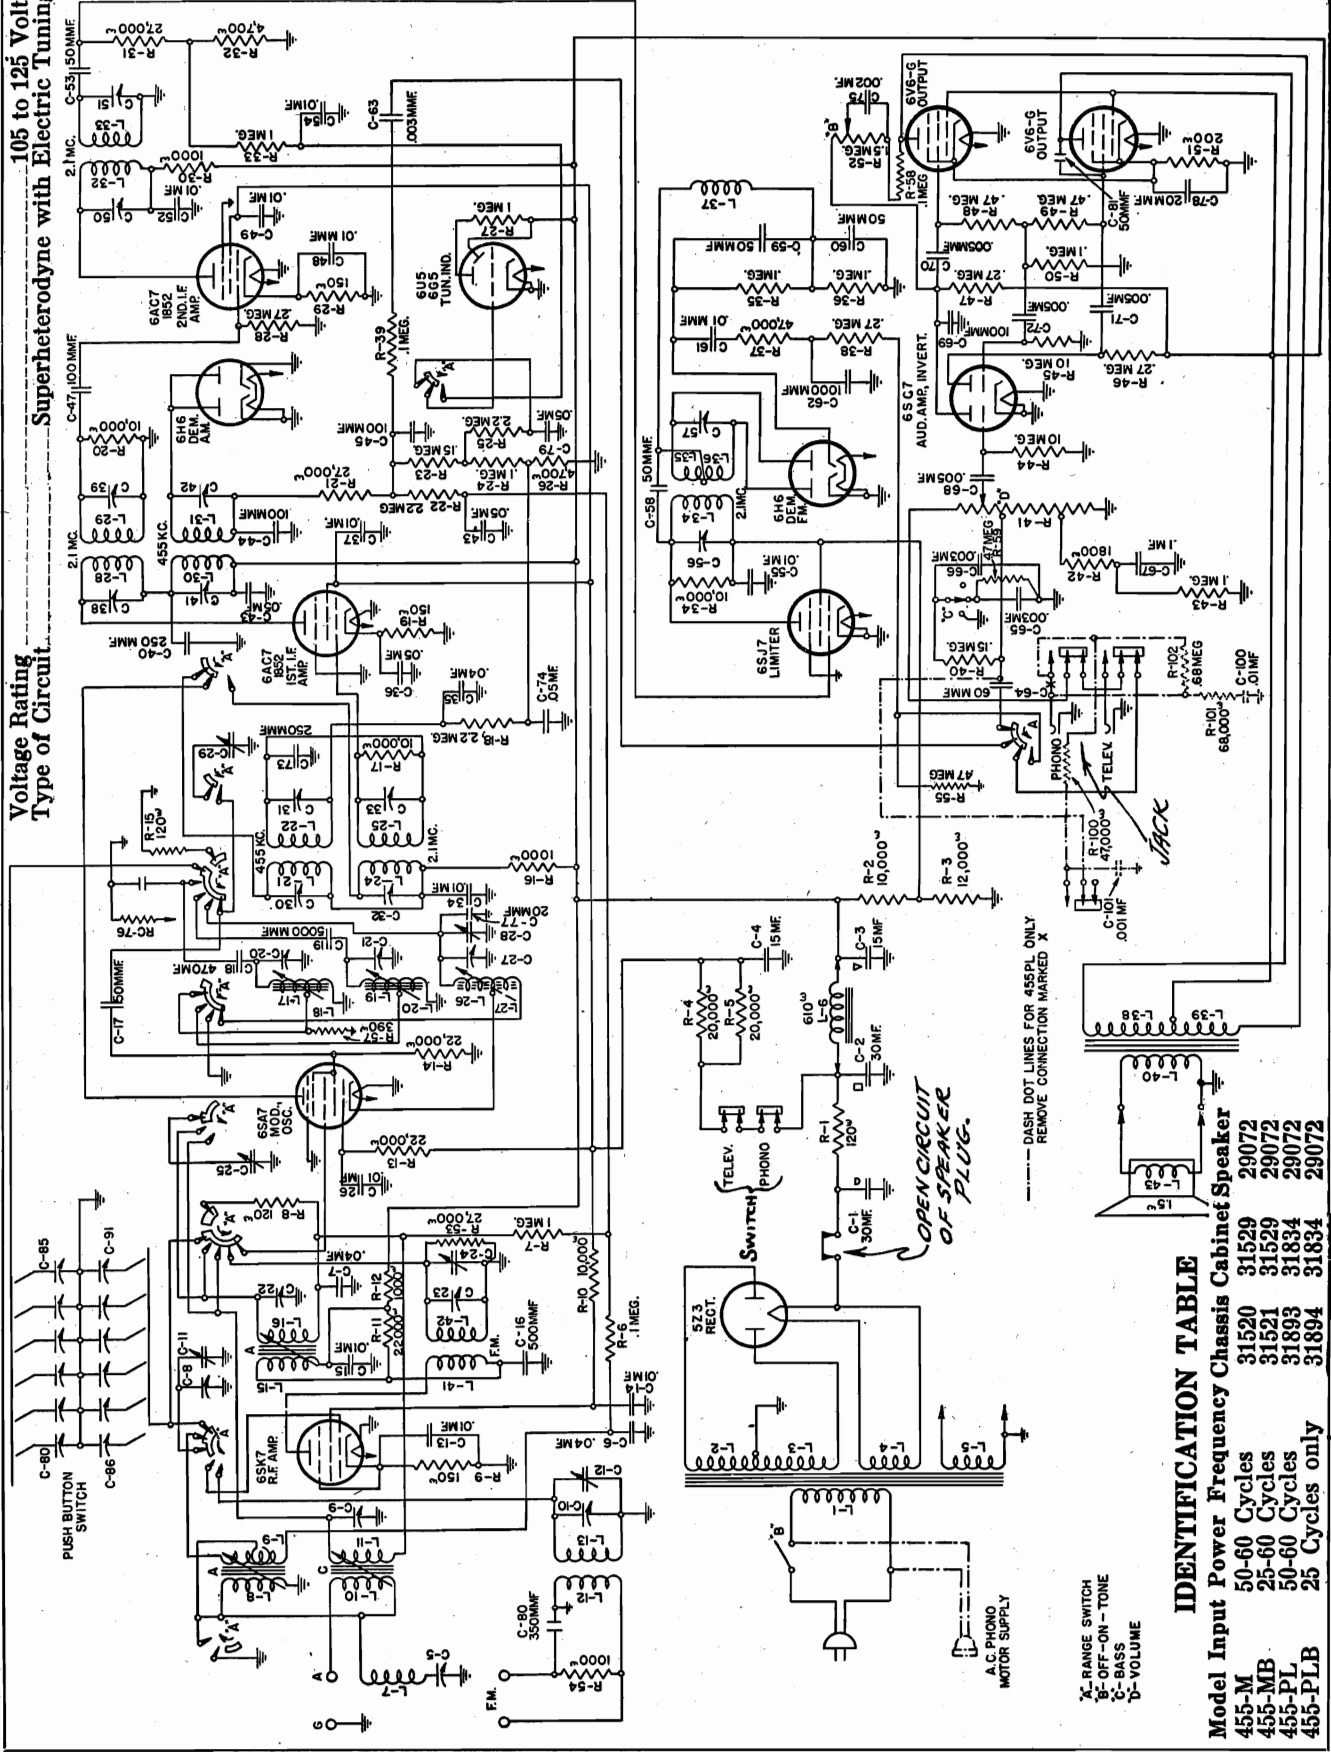


IDENTIFICATION TABLE

Model	Input Power	Frequency Cycles	Chassis Cabinet Speaker
455-M	50-60	29072	31529
455-MB	25-60	29072	31521
455-PL	50-60	29072	31893
455-PLB	25 Cycles only	29072	31894


STROMBERG-CARLSON TEL. MFG. CO.

MODELS 455M, 455MB
455PL, 455PLB
Alignment, Trimmers
Socket, Notes

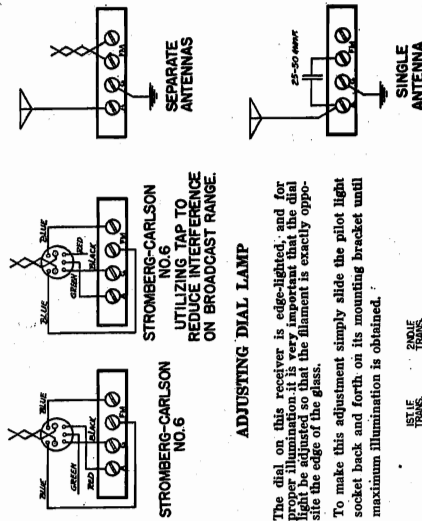


- Set the signal generator frequency and the receiver tuning dial to 600 kilocycles.
- Adjust the 600 kilocycle "oscillator", "R. F." signal, "Antenna" iron cores for maximum signal.
- Set the signal generator frequency and the receiver tuning dial to 1500 kilocycles.
- Adjust the 1500 kilocycle "oscillator", "R. F." and "Antenna" aligning capacitors for maximum signal.
- Repeat operations 3 and 4.

- VI. Wave trap adjustment.** (Leave the receiver connected to the standard broadcast range (A Band) circles.)
- Set the receiver's tuning dial to 1000 kilocycles and introduce a fairly strong modulated signal to the receiver.
 - Adjust the wave trap aligner for minimum signal.
- IMPORTANT:** Do not go back and touch up any adjustments previously made. If the receiver is to be used for frequency modulation, the adjustments outlined above, go back and start over again and follow the instructions through to the finish.

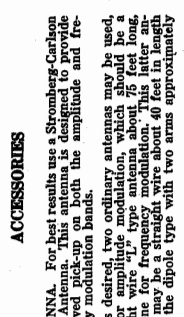

Location Chart

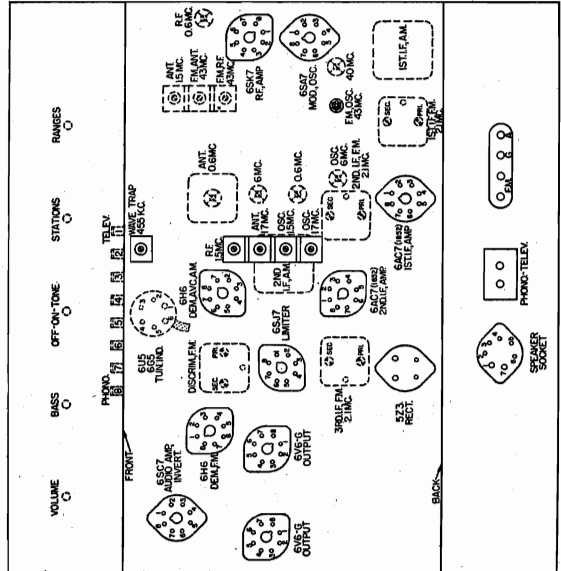

- III. Radio frequency adjustments (Frequency Modulation)**
- Set the signal generator frequency and the receiver tuning dial to 40 megacycles.
 - Replace the 0.1 microfarad capacitor in series with the output lead from the signal generator with a 100 ohm resistor and connect it to the antenna and ground terminal strip.
 - Connect the ground lead to the other F. M. terminal on the antenna and ground terminal strip.
 - Adjust the "oscillator" 40 megacycles core aligner for maximum signal.
 - Set the signal generator frequency and the receiver tuning dial to 43 megacycles.
 - Adjust the oscillator shunt aligner for maximum signal.
 - Adjust the R. F. and antenna aligners for maximum signal on the "0" to 200 microammeter reading the center "0" microammeter dial slightly back and forth.
 - Remove both meters from the circuits and re-adjust the 4700 ohm resistor R-32 in its original position to terminal No. 2 on the third I. F. transformer.

- IV. Intermediate frequency adjustments (Amplitude Modulation)**
- Adjustment of second I. F. transformer:
- Set the range switch to standard broadcast position.
 - Turn the volume control "full on".
 - Replace the 100 ohm resistor in series with the output lead from the signal generator with a 0.1 microfarad capacitor and connect it to the 6A7 first I. F. tube (Terminal No. 4).
 - Connect the ground terminal of the signal generator to the ground terminal of the receiver.
 - Adjust the 6A7 grid I. F. capacitor for maximum signal in the following order:
 - Primary of second I. F. transformer.
 - Secondary of second I. F. transformer.
- Adjustment of first I. F. transformer:
- Connect the output lead from the signal generator with the 0.1 microfarad capacitor in series with the 6A7 grid I. F. tube (Terminal No. 3).
 - Adjust the first I. F. transformer aligner for maximum signal in the following order:
 - Primary of first I. F. transformer.
 - Secondary of first I. F. transformer.

- V. Radio Frequency adjustments (Amplitude Modulation)**
- Short Wave Range (C Band)
- Replace the 0.1 microfarad capacitor in series with the output lead of the signal generator with the 0.1 microfarad capacitor in series with the 6A7 grid I. F. tube (Terminal No. 3) on the back of the chassis.
 - Set the range switch to the short-wave range position (C Band).
 - Set the signal generator frequency and the receiver tuning dial to 17 megacycles and "antenna" iron cores for maximum signal.
 - Adjust the 6 megacycle "oscillator" and "antenna" iron cores for maximum signal.
 - Set the signal generator and the receiver tuning dial to 17 megacycles.
 - Adjust the 17 megacycles "oscillator" and "antenna" aligning capacitors for maximum signal.
 - Repeat operations 3 and 4.
- Standard Broadcast Range (A Band)
- Replace the 400 ohm resistor in series with the output lead of the signal generator with a 200 micro-microfarad capacitor.
 - Set the range switch to the standard broadcast range (A Band).

- II. Intermediate frequency adjustments (Frequency Modulation)**
- Important:** All intermediate frequency adjustments are made using the same unmodulated signal. The signal generator should be adjusted independently and in the order given. Do not make any overall adjustments after the previous stage is aligned.
- Disconnect the ground side of the limiter 500 ohm resistor (R-32) and connect the "0" to ground.
 - Connect the output lead from the signal generator with the 0.1 microfarad capacitor in series to the grid (Terminal No. 4) of the 6A7 second I. F. tube.
 - Adjust the secondary of the third I. F. transformer for maximum reading of the microammeter.
 - Adjust the primary of the third I. F. transformer for maximum reading of the microammeter.
 - Connect the output lead from the signal generator to the grid (Terminal No. 4) of the 6A7 first I. F. tube.
 - Adjust the secondary of the second I. F. transformer for maximum reading of the microammeter.
 - Adjust the primary of the second I. F. transformer for maximum reading of the microammeter.
 - Connect the output lead from the signal generator to the grid (Terminal No. 4) of the 6A7 modulator tube.
 - Adjust the secondary of the first I. F. transformer for maximum reading of the microammeter.
 - Adjust the primary of the first I. F. transformer for maximum reading of the microammeter.

ACCESSORIES

ANTENNA. For best results use a Stromberg-Carlson No. 6 Antenna. This antenna is designed to provide improved pick-up on both the amplitude and frequency modulation bands.

If it is desired, two ordinary antennas may be used, one for amplitude modulation, which should be a dipole type with two arms about 40 feet in length, and one for frequency modulation. This latter antenna may be a straight wire about 40 feet in length or of the dipole type with two arms approximately 20 feet in length.

PLAYING RECORDS. To obtain the best quality of phonograph reproduction a Stromberg-Carlson record player is recommended. They are designed for use with this receiver. The record player should be connected to the record player to the single prong socket provided in the chassis and proceed to operate. The volume and tone may be controlled with the controls at the record player. The volume control on the record player may be used.

A low impedance pick-up may also be used, but a matching transformer must be connected between the phonograph pick-up and the chassis.


HEADSET ATTACHMENT. Headphones can be very simply attached to this receiver. Use No. 28383 Headset Package Assembly, which comes complete with headphones and installation instructions. CARE OF CABINET. The finish of Stromberg-Carlson Cabinets should be protected by using Stromberg-Carlson cabinet polish which is available in print cans designated as Pc No. 286001.

Nicks and scratches of most kinds can be repaired quickly and easily by proper use of the Pc No. 28982 touch-up kit. Complete instructions are provided with the kit.

TOOLS. Stromberg-Carlson can supply all the tools required for working on these sets. For example: No. 24608 Aligning Tool No. 24609 Phillips Head Screwdriver. Also pliers, cutters, screwdrivers, etc.

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 480M, 480MB
Schematic

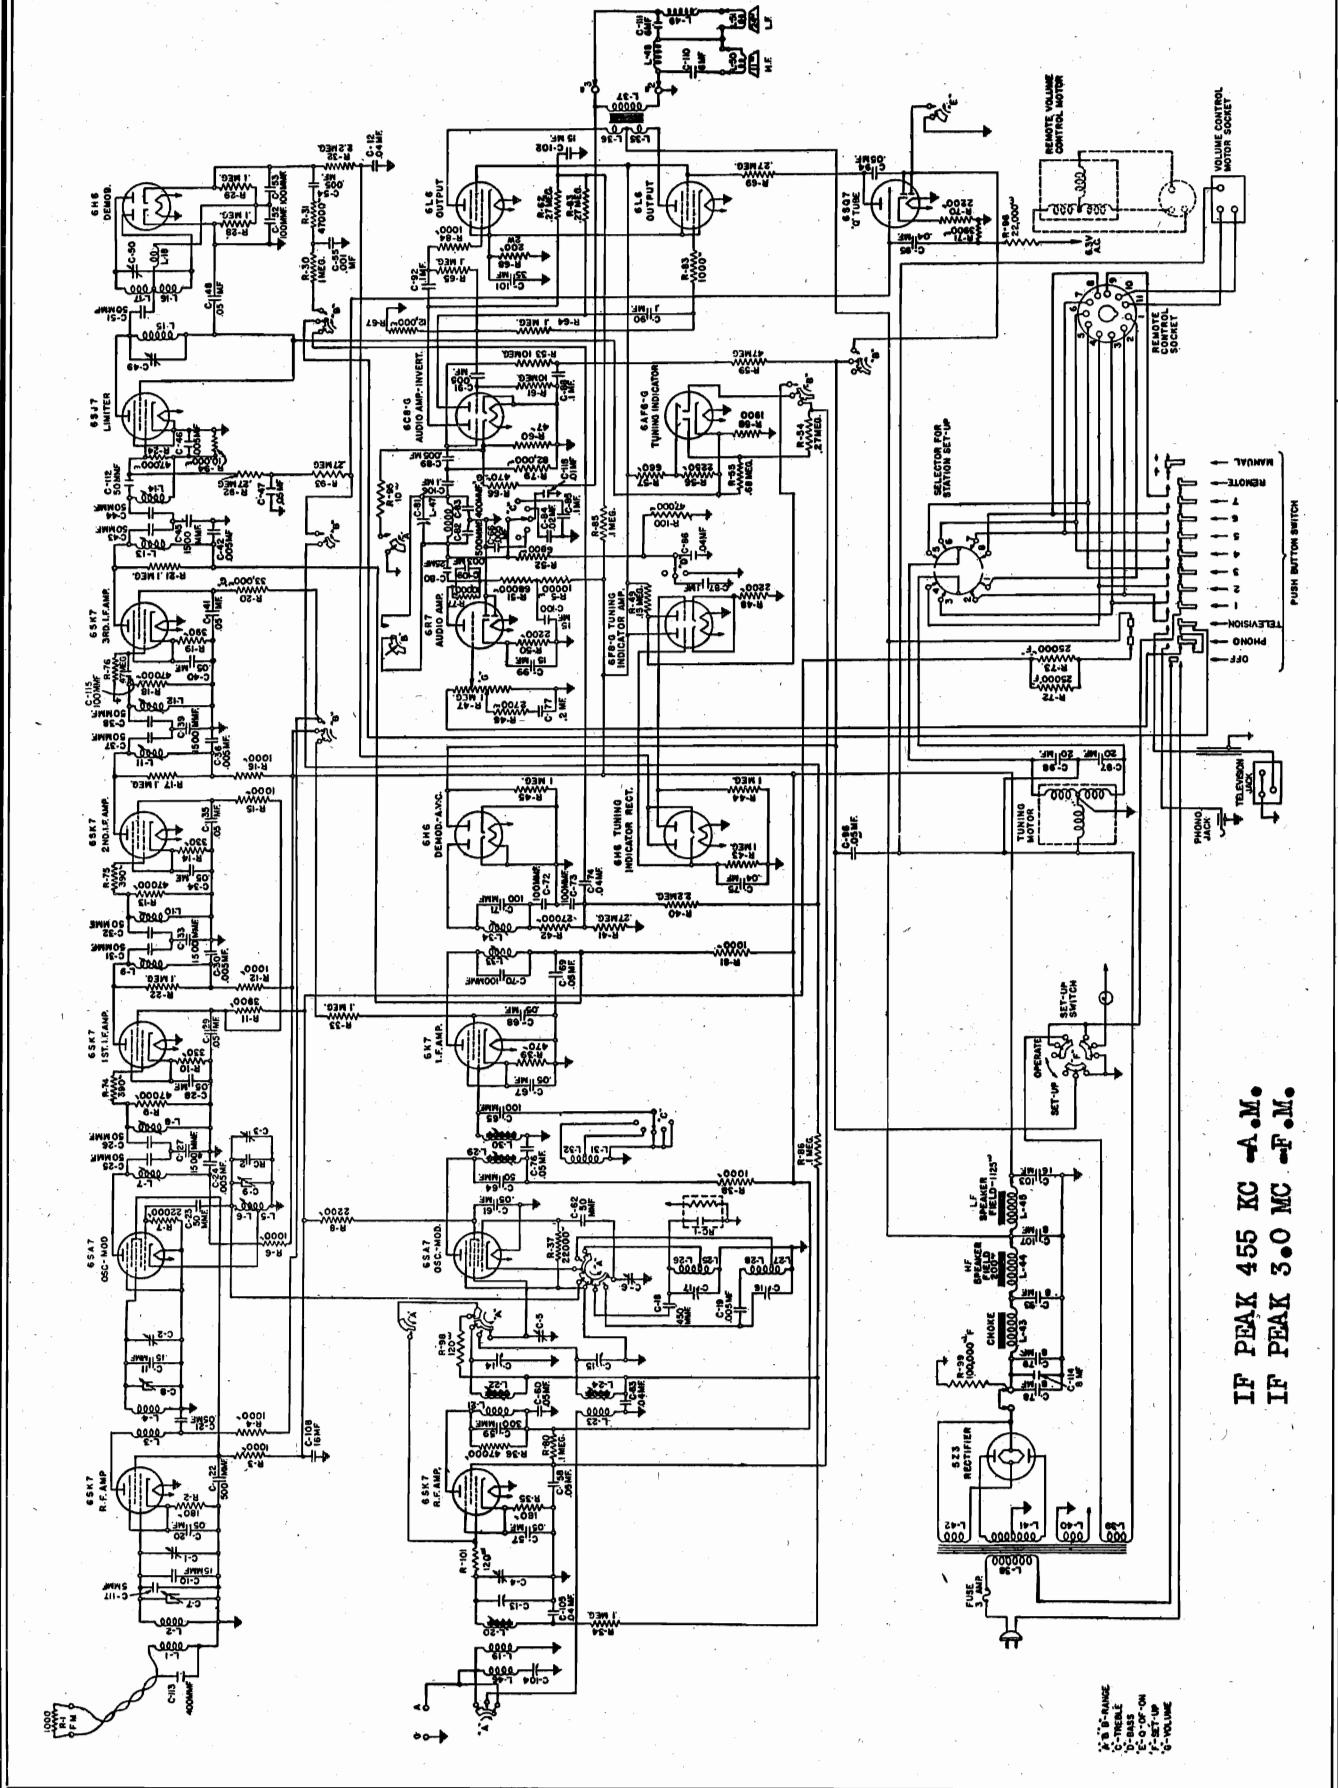

IF PEAK 455 KC -A.M.
IF PEAK 3.0 MC -F.M.

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 48CM, 48CMB
Chassis Wiring, Notes

FEATURES

GENERAL. This is a twenty-tube, three gang, three range receiver designed for the reception of both amplitude and frequency modulated stations and is equipped with a dual coaxial speaker system. It is capable of reproducing without distortion an audio frequency range of at least 10,000 cycles.

The chassis is of the fortified type with bails provided for ease in handling and servicing. Automatic tuning is accomplished by means of a motor drive controlled by a commutator and brush assembly and the dial is of the slide rule type, edge-lighted for clear visibility without glare. Separate treble and bass controls are provided to make accurate adjustment of the tone possible.

REMOTE CONTROL. Remote selection of stations is accomplished by simply plugging the remote control unit into the socket provided on the back of the chassis. This unit enables the user to select any one of eight favorite stations which have been previously set up on the electric tuning system of the receiver.

FREQUENCY MODULATION: The "Armstrong Wide-Swing Frequency Modulation System" used in this receiver is an outstanding development in radio.

The Federal Communications Commission has established five channels between 40 and 44 megacycles for frequency modulated transmitting stations. Since this is a comparatively high frequency, the distance over which reception is possible is limited.

SPEAKER SYSTEM. A coaxial dual speaker system is used in this receiver. The low frequency speaker owes much of its effectiveness to the unusually large field structure with a subsequently increased magnetic flux in the air gap. The treble speaker with its back completely enclosed is mounted directly in front of the bass speaker; both speakers are connected by means of a frequency dividing network to the receiver at an impedance of 24 ohms. The Acoustical Labyrinth is used in conjunction with this speaker system and the complete system is capable of providing a relatively even response to all tones from 65 to more than 10,000 cycles per second.

SPECIAL CIRCUITS. A tuning indicator having two apertures is used with this receiver. For tuning stations on the standard broadcast and short-wave range, one aperture is for strong signals and the other for weak signals. One aperture will close with a signal of approximately 100,000 microvolts and the other will not close even with a two volt signal. Stations on the frequency modulation range should be tuned for maximum closing of both apertures.

Iron core coils are used in the broadcast and short-wave ranges to provide greater accuracy of alignment. The audio system employs a special inverter push-pull circuit designed to provide excellent fidelity, and the chassis is thoroughly shielded throughout with an electro-statically shielded power transformer.

AUTOMATIC TUNING. Twelve push buttons are provided from right to left; their operation is as follows:


- | | |
|---------------------------|----------------------|
| 1. Manual Control | 10. Television Sound |
| 2. Remote Control | 11. Phonograph |
| 3-9. Pre-set Stations (7) | 12. "Off" Switch |

Pushing any button (except the "off" button) turns the set on and tuning is accomplished by means of an electric motor, driving the regular variable capacitor to a pre-set point.

Set up is very easily accomplished by means of a switch which causes the pilot light to go out when the brush is properly located.

TELEVISION. A socket is provided on the back of the chassis into which a television receiver may be plugged and a push button is provided on the front of the chassis for switching to television so that the audio amplifier and speaker system employed in this receiver are available for use with television receivers designed for this type of sound reproduction.

PHONOGRAPH OPERATION. A jack is provided on the back of the chassis into which a record player may be plugged and a push button is provided on the front of the chassis for switching from "Radio" to "Phonograph".

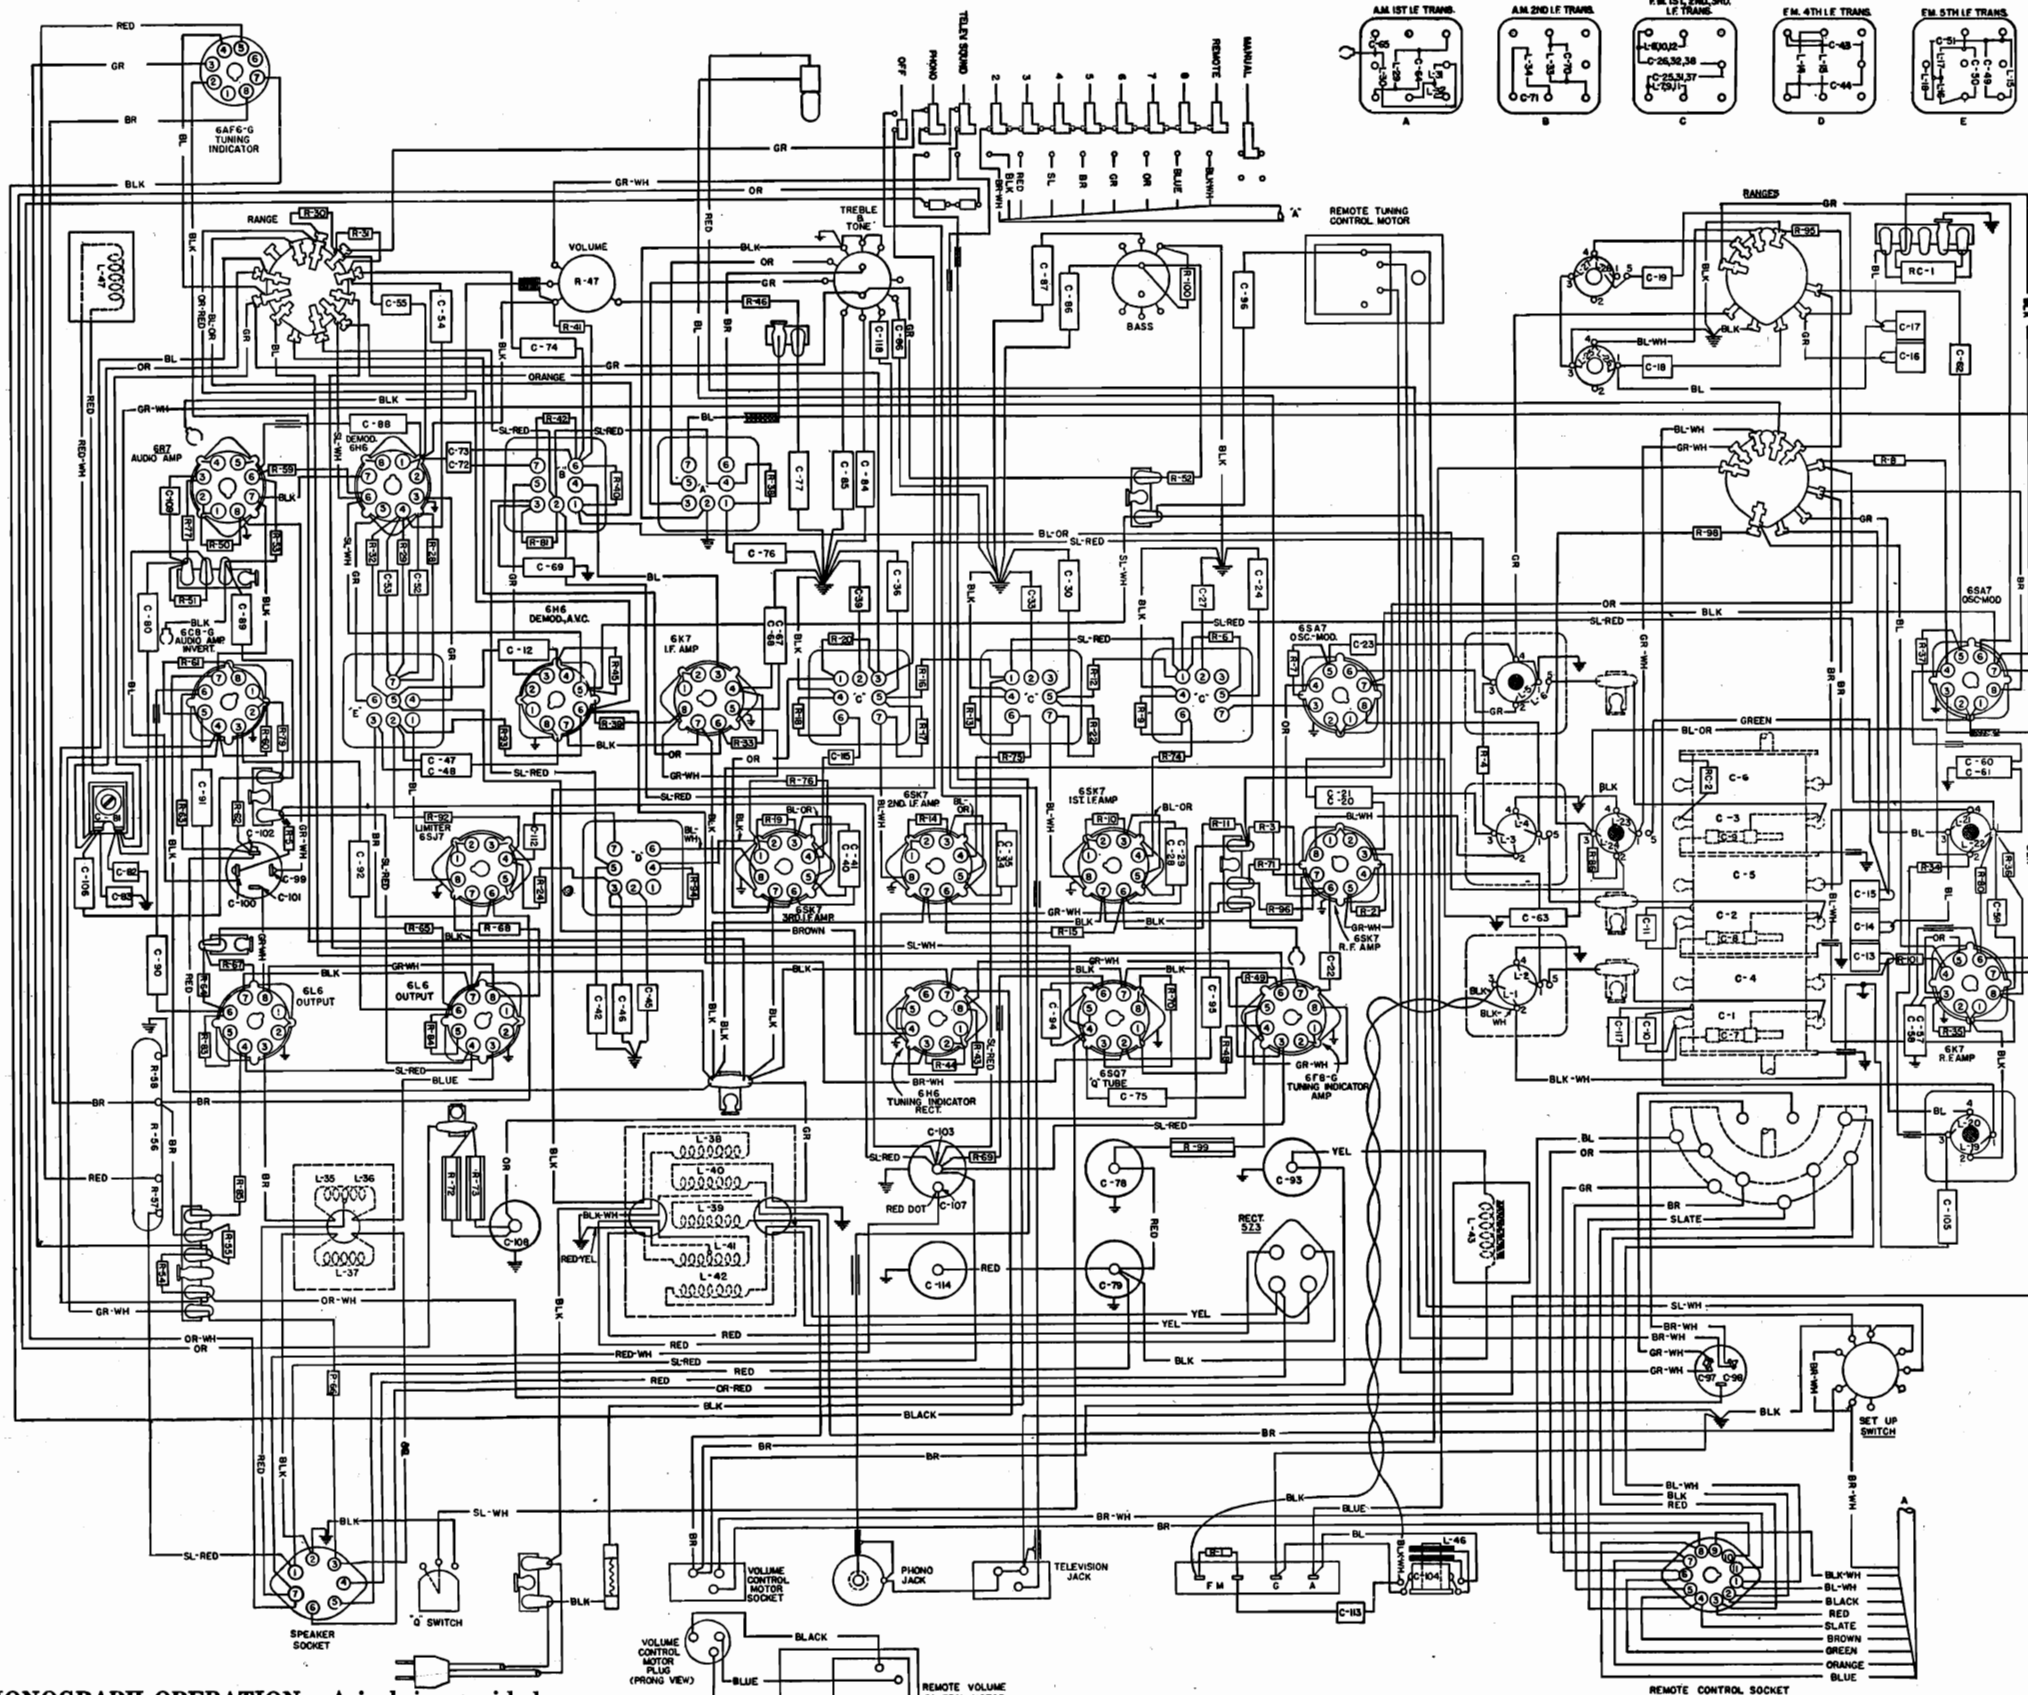

Wiring Diagram

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 480M, 480MB Alignment

- 1. Connect the output lead from the signal generator with it to the grid of the 6SA7 Modulator Tube. (Terminal No. 4).

- 4. Set the attenuator on the standard signal generator for maximum output.

IDENTIFICATION TABLE with columns for Model, Input Power, Frequency, Chassis, Cabinet, Speaker, and various terminal values.

SPECIFICATIONS

Tuning Ranges: Frequency Modulation 40 to 44 Mc. (40,000 to 44,000 Kc.) Standard Broadcast 54 to 57 Mc. (540 to 570 Kc.)

ALIGNING INFORMATION NEVER REALIGN UNLESS ABSOLUTELY NECESSARY

GENERAL: All aligning adjustments are carefully made at the factory with special equipment which is designed for aligning frequency modulation receivers.

ALIGNING PROCEDURE (follow this order exactly)

- 1. Dial pointer adjustment. With the plates of the tuning capacitor fully engaged, set the dial pointer to the extreme low frequency end of the dial scale.

III. Discriminator adjustment (Frequency Modulation)

- Note: Be sure the frequency of both signal generators are the same.

VII. Wave trap adjustment.

- 1. Set the receiver's tuning dial to 1000 kilocycles.

VII. Wave trap adjustment.

- 1. Set the receiver's tuning dial to 1000 kilocycles.

MODELS 480M, 480MB Voltage, Resistance

STROMBERG-CARLSON TEL. MFG. CO.

ADJUSTING DIAL LAMP

The dial on this receiver is edge-lighted, and for proper illumination it is very important that the dial light be adjusted so that the filament is exactly opposite the edge of the glass.

To make this adjustment simply slide the pilot light socket back and forth on its mounting bracket until maximum illumination is obtained.

NORMAL VOLTAGE READINGS

Take all voltage readings with chassis operating and tuned manually to 1000 kilocycles or 43 megacycles—no signal.

Use a line voltage of 125 volts or make allowance for any slight variation:

Use a good high resistance voltmeter having a resistance of at least 1000 ohms per volt. Take all D. C. readings on the 500 volt scale except when an asterisk appears. Read from indicated terminals to chassis base. See location chart for position of terminals.

A. C. voltages are indicated by italics.

Table with columns: Tube, Circuit, Range Switch, Cap, and terminals 1-8. Rows include 6SK7, 6SA7, 6SK7, 6SK7, 6SK7, 6SJ7, 6H6, 6SQ7, 6H6, 6F8G, 6SK7, 6SA7, 6K7, 6H6, 6R7, 6C8G, 6L6G, 6L6G, 5Z3, 6AF6G, and Speaker Socket.

*Read on lowest possible scale of voltmeter.

**Read on 100 volt scale of voltmeter.

CONTINUITY TEST

Remove all tubes and disconnect the receiver from the power supply before making continuity test.

pieces of bus wire and shorting together terminals 1, 4 and 7 and terminals 4 and 5 of the speaker socket. (See location chart for position and numbering of terminals.) Caution: Be sure to remove the two shorting wires when the continuity test is completed.

Table with columns: Tube, Circuit, Cap, and terminals 1-8. Rows include 6SK7, 6SA7, 6SK7, 6SK7, 6SK7, 6SJ7, 6H6, 6SQ7, 6H6, 6R7, 6C8G, 6L6G, 6L6G, 5Z3, 6AF6G, and Speaker Socket.

Symbols used on chart are as follows: Ω—ohms; M—megohms; S—short; O—open.

Use a good meter capable of measuring up to several megohms.

The resistances given are often approximate owing to electrolytic capacitors in the circuit. When this is the case, be sure to reverse the test leads and read the highest resistance.

Read from indicated terminals to chassis base unless otherwise specified.

See location chart for position and numbering of terminals.

- A. Push in any "Pre-set Station" Button... 18,000 Ohms
Push in "Phono" Button... 300,000 Ohms
Push in "Television" Button... 300,000 Ohms

STROMBERG-CARLSON TEL. MFG. CO.

MODELS 480M, 480MB
Tuner Data

INSTRUCTIONS FOR SETTING UP PUSH BUTTONS

IMPORTANT: The stations selected should be local or favorite stations which give good reception at all times. Frequency Modulated Stations, as well as Amplitude Modulation Stations, may be set up on the push buttons by simply using the appropriate button determined by the position of the Frequency Modulated Station on the dial.


Set up stations in the daytime to avoid unnecessary interference.

Allow the set to run for about twenty minutes before setting up stations.

Always use the tuning indicator unit when setting up stations in order to determine when the station is exactly in tune.

Seven stations may be set up for push buttons located on the front of the receiver and eight stations may be set up on the remote control unit. The same seven stations which were set up for the buttons on the front of the receiver must also be used on the remote control unit and the eighth station which is chosen for the remote control unit must be of a lower frequency than any of the other stations which have been set up.




- Put the call letters of the selected stations in place above the push buttons. The stations should be arranged according to frequency with the highest frequency at the right and the lowest frequency at the left, just as on the dial. (The call letters will be found inside the envelope stapled inside or underneath the cabinet).
- Remove the metal escutcheon and transparent strip from the remote control unit. Put the station call
- Set the "Treble" control in normal position.
- Turn the set-up switch (located on the base just back of the brush and commutator assembly) to the set-up position. (The slot in the screw should point toward "set-up").
- Push the button of the highest frequency station to be set up (button No. 3) and then tune in that station manually. Be sure the station is exactly "in tune" by tuning carefully and watching the cathode ray indicator.
- Slide the brush to which the blue wire is connected until it is over the slot in the commutator. Then adjust it very carefully until the pilot light goes out. This indicates exact adjustment.
- Repeat operations 4 and 5 for each station. Work from right to left or from the higher to the lower frequencies in accordance with the table below:
- Turn the set-up switch back to the "Operate" position.
- Check the operation of all the push buttons to be sure that each has been accurately set up. If it is necessary to readjust any of the buttons, follow the procedure given above.

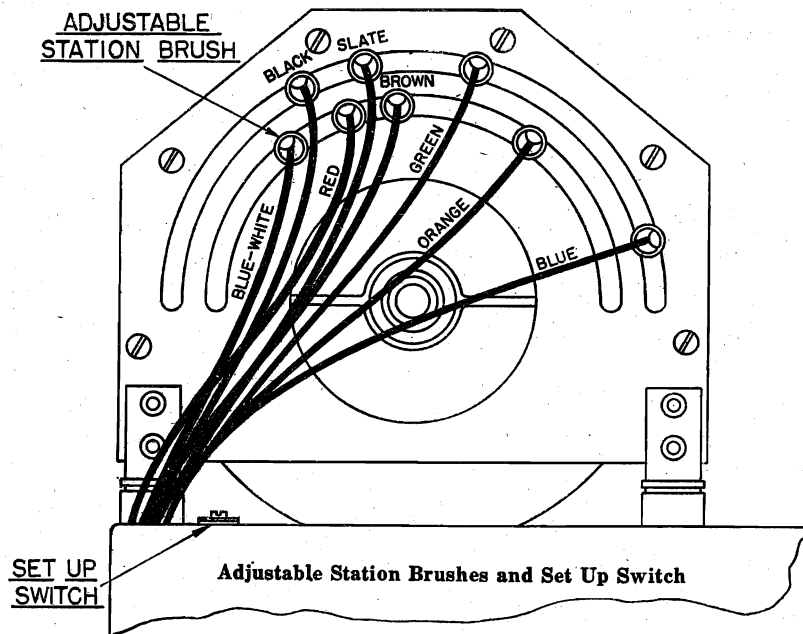

Push Button No.	Purpose	Color of wire on brush
1	Manual	—
2	Remote	—
3	Highest frequency station	Blue
4	Next lower frequency station	Orange
5	Next lower frequency station	Green
6	Next lower frequency station	Brown
7	Next lower frequency station	Slate
8	Next lower frequency station	Red
9	Lowest frequency station on receiver	Black
10	Telev. button on receiver Lowest frequency button on remote control unit	Blue White
11	Phonograph	
12	Off	

See diagram of adjustable brushes and set-up switch.

MODEL 7-Tube AC-DC TRAV-LER RADIO & TELEVISION CORP. MODEL 5-Tube TRF
 Superhet. Schematic, Socket Alignment, Trimmers

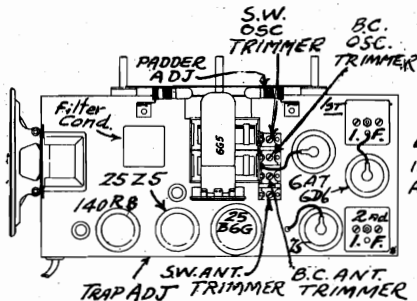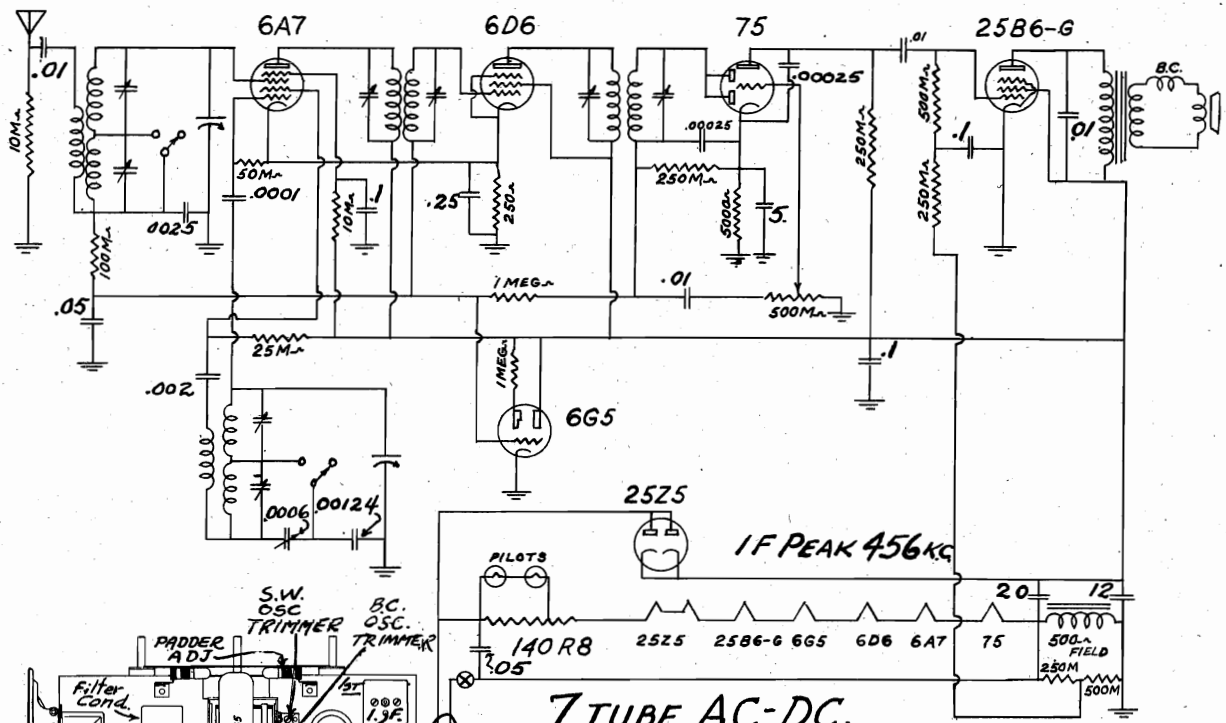
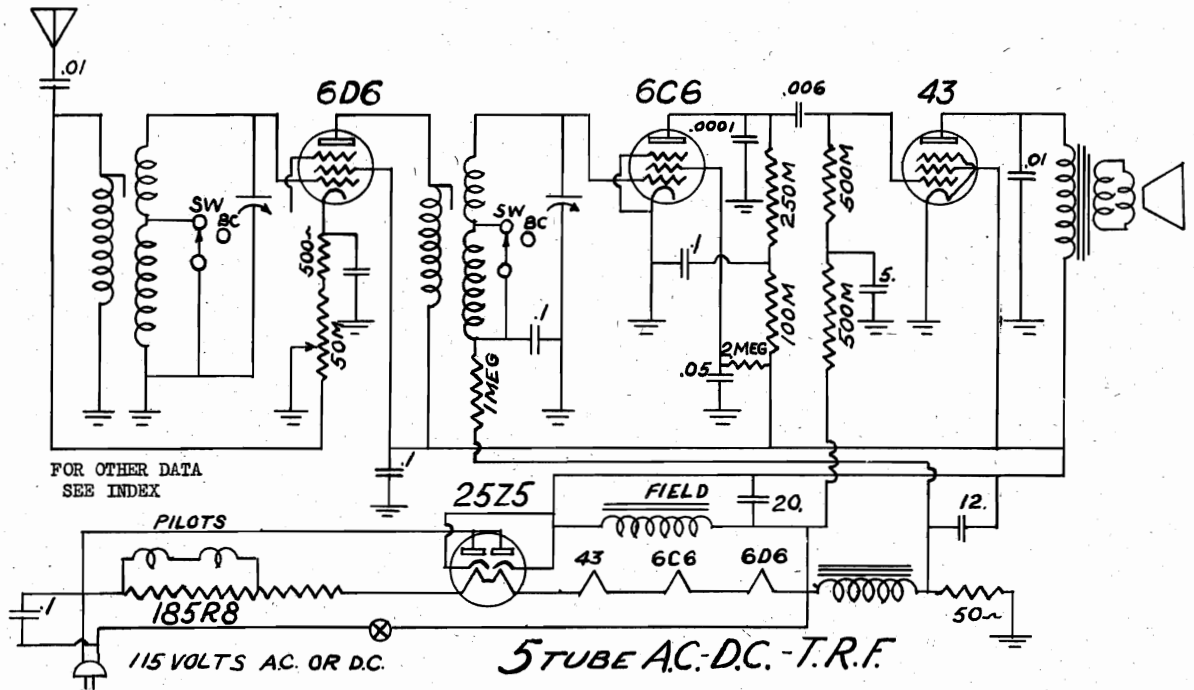


ALIGNMENT; I.F. at 456 KC. Using a .00025 condenser as a dummy antenna, adjust B.C. Osc. trimmer at 1700 KC, B.C. Ant. Trimmer at 1400 KC, Padder at 600 KC. Using a 400 ohm resistor as dummy, at 6 M.C. adjust SW Osc. and then SW Ant. trimmers to resonance.

MODEL 336 MODEL 620
 MODEL 621 MODEL 720
 Socket, Trimmers

TRAV-LER RADIO & TELEV. CORP

MODEL 336 MODEL 539M
 MODEL 570B MODEL 576
 MODEL 801 Tuner Data

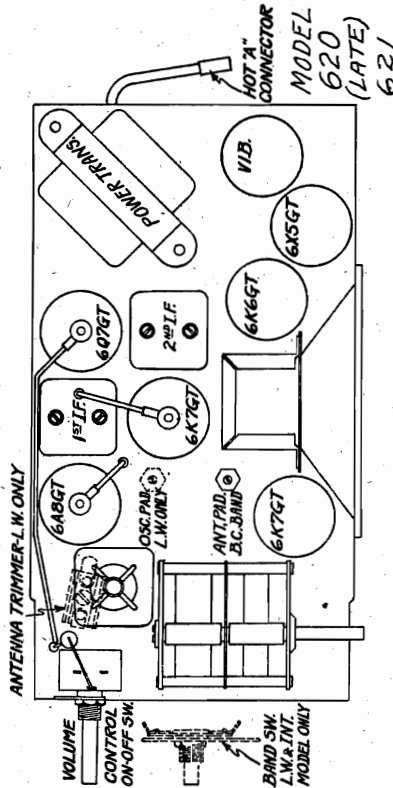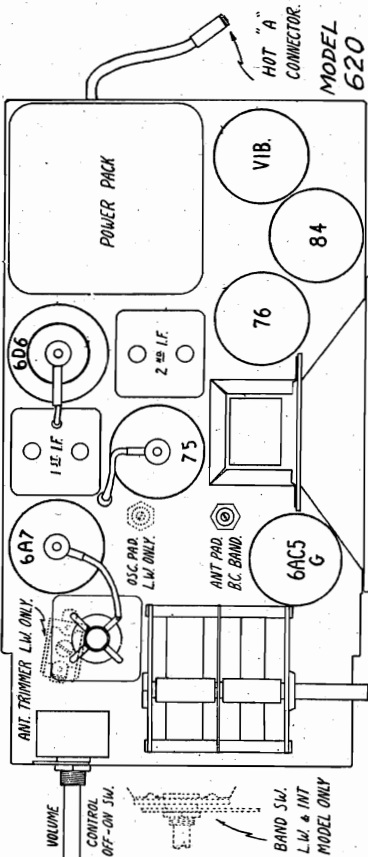

PUSH BUTTON OPERATION

Applies to Models 336, 539M, 570B, 576, 576B, 801.



Six Push Button Station Selectors are incorporated in this receiver. Each button may be adjusted to select any station or frequency in the Broadcast Band. To adjust each button, perform the following operations:

1. Tune in a desired station with the Selector knob.
2. Twist the Push Button you want set up for this station, to the left about one full turn to loosen the mechanism.
3. Push this button in as far as it will go, while still holding the Selector knob firmly so the station will not be detuned.
4. With the button pressed all the way in, twist it to the right until it is tight and then release it.

Follow this procedure with the other five buttons, setting each for a different station.

Now, when any Push Button is pressed, the station for which that button is set, should appear perfectly tuned in. If it is not perfectly tuned, repeat the above procedure until satisfactory results are obtained.


Select the Call Letter Tabs to correspond to the stations the buttons are set for, and insert them in places provided above each button.

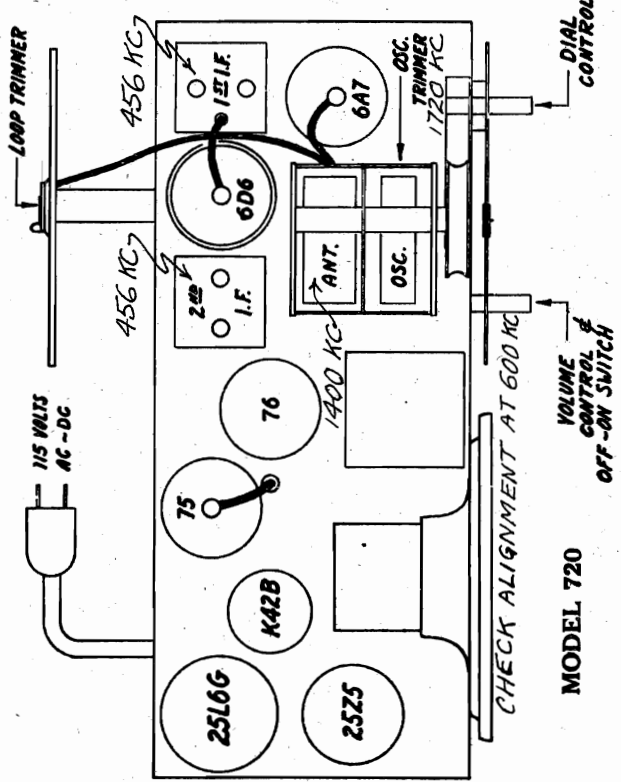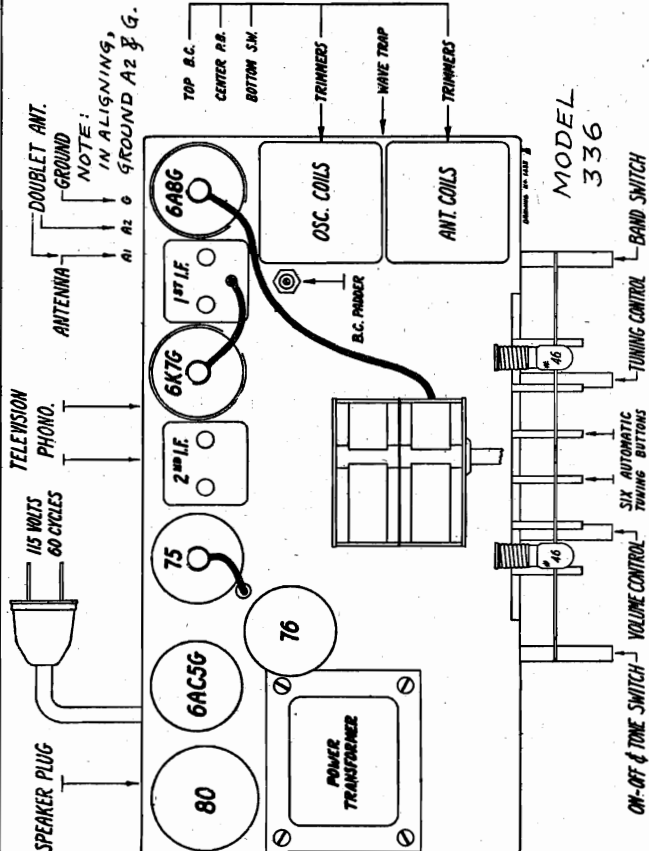

DRAWING NO. 1292 B

MODEL 539M

Schematic, Alignment TRAV-LER RADIO & TELEV. CORP.

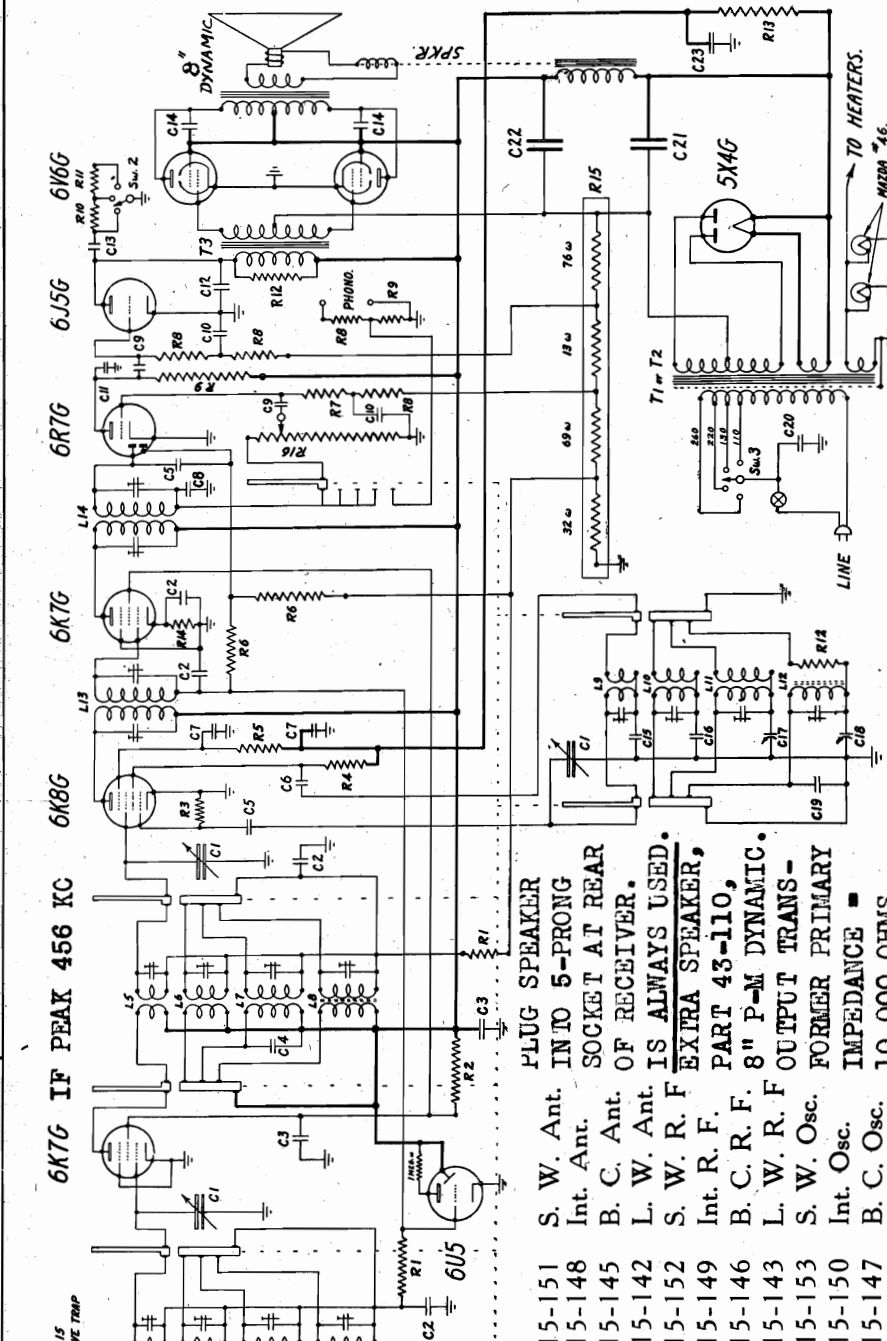


- FOR TUNER SEE INDEX
- CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII.
I.F. signal on 6K8G grid thru 0.1 mf.
Dial at 1720 KC. Peak at 456 KC.
- | | | |
|------------------|----------|---------|
| TRIM | OSC. ** | CHECK |
| DUMMY * ANT., RF | OSC. ** | CHECK |
| LONG WAVE | 200 MMF | 320 KC |
| BROADCAST | 200 MMF | 1400 KC |
| SHORT WAVE | 400 OHMS | 22 MC |
| | | 24.5 MC |
| | | 8 MC |
- * Use Standard All Wave Dummy if available.
** With variable condenser fully open.

C1	10-62	Tuning Condenser
C2	6-12	.05
C3	6-26	.1
C4	8-19	.00003
C5	8-13	.00005
C6	6-36	.003
C7	6-14	.05
C8	8-8	.0001
C9	6-3	.01
C10	6-24	.1
C11	8-10	.00025
C12	8-1	.001
C13	6-11	.03
C14	6-53	.003
C15	8-47	.0087
C16	8-7	.0018
C17	9-27	B.C. Pad.
C18	9-14	L.W. Pad.
C19	8-33	.00005
C20	6-4	.01
C21	7-49	25 mfd.
C22	7-51	20 mfd.
C23	7-66	16 mfd.
R1	3-5	250K Ω /4 W.
R2	3-169	75K Ω /2 W.
R3	3-4	50K Ω /4 W.
R4	3-8	25K Ω /2 W.
R5	3-170	30K Ω 1 W.
R6	3-2	2K Ω /4 W.
R7	3-6	1K Ω /4 W.
R8	3-1	500K Ω /4 W.
R9	3-17	100K Ω /4 W.
R10	3-3	5K Ω /4 W.
R11	3-14	10K Ω /4 W.
R12	3-29	25K Ω /4 W.
R13	3-168	12K Ω 1 W.
R14	3-13	300 Ω /4 W.
R15	4-15	Resistor Strip
R16	5-54	500K Ω Volume Control
L1	15-151	S. W. Ant.
L2	15-148	Int. Ant.
L3	15-145	B. C. Ant.
L4	15-142	L. W. Ant.
L5	15-152	S. W. R. F.
L6	15-149	Int. R. F.
L7	15-146	B. C. R. F.
L8	15-143	L. W. R. F.
L9	15-153	S. W. Osc.
L10	15-150	Int. Osc.
L11	15-147	B. C. Osc.
L12	15-144	L. W. Osc.
L13	16-39	I. F. Input
L14	16-40	I. F. Output
L15	16-53	Wave Trap.
T1	11-53	Power Trans. 50-60 Cy. 110 to 260 V.
T2	11-52	Power Trans. 115 V. 60 Cy.
T3	12-18	A. F. Tran. P. P. Input
Sw1	14-53	Wave Switch.
Sw2	14-48	Tone Switch.
Sw3	14-56	Line Voltage Switch
Spkr	43-93	Speaker 850 Ω Field.

MODEL 620 Early
MODELS 620 Late, 621




TRAV-LER RADIO & TELEV. CORP Schematics, Alignment

Schematics

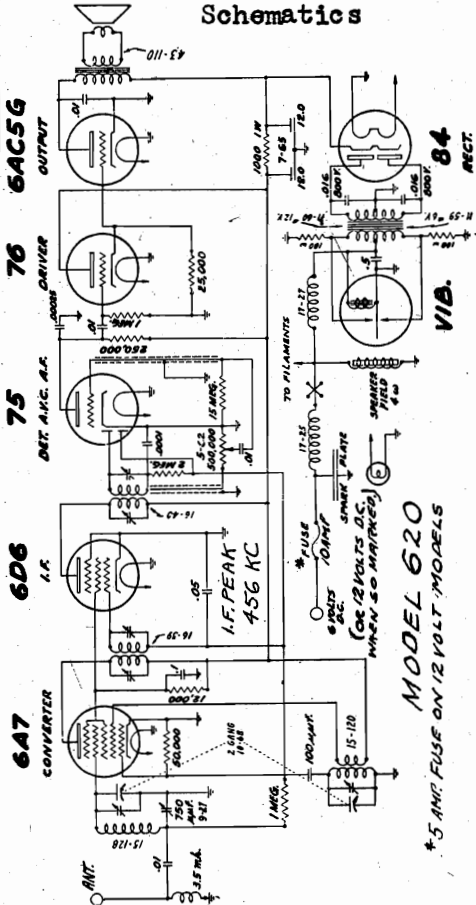

ALIGNMENT FOR MODELS 555, 555BT, 556, 556BT, 1555, 1555BT.
Peak IF trimmers at 456 KC. B.C. Shunt Osc. - 1400 KC,
B.C. Pad - 600 KC. Check at 1400 KC, then with back
B.C. Pad - 600 KC. Check at 1400 KC, B.C. Pad at
600 KC. Check at 1400 K.C. (2 BAND SETS - SW Trimmers at 16ME.)

The batteries are installed in the compartment below the radio chassis and are accessible by removing the four screws which hold the back of the cabinet in place. The batteries include one 1.5 volt "A" plug-in type, (Ever-Ready No. 742 or equivalent) and two 45 volt "B" plug-in type, (Ever-Ready No. 762 or equivalent).

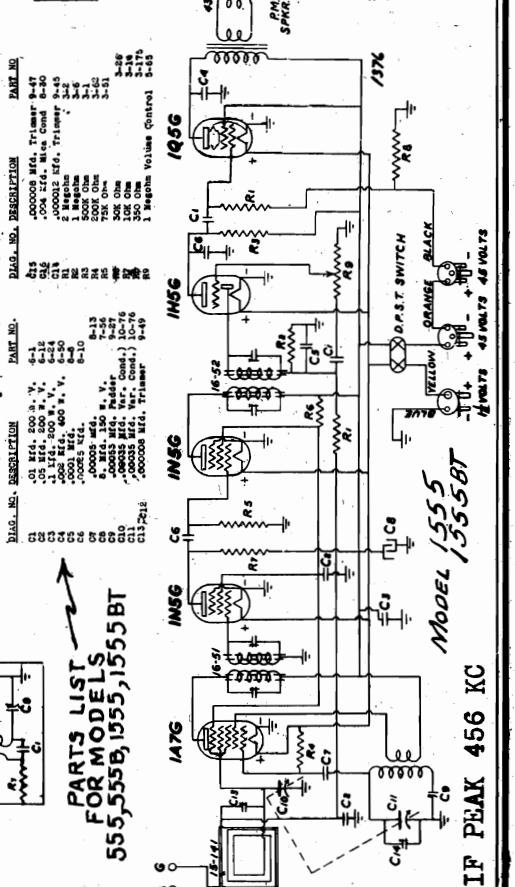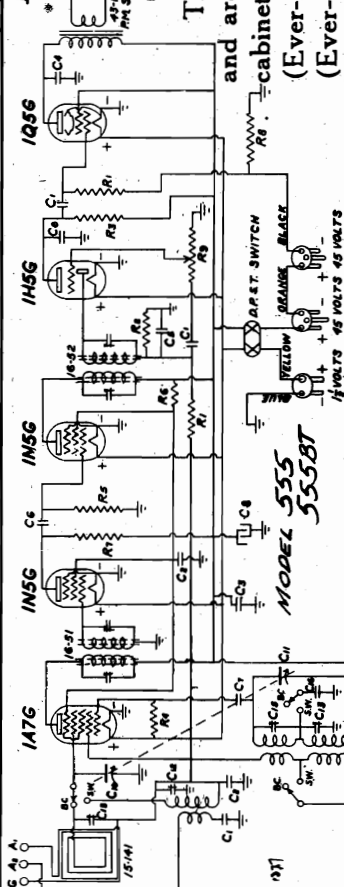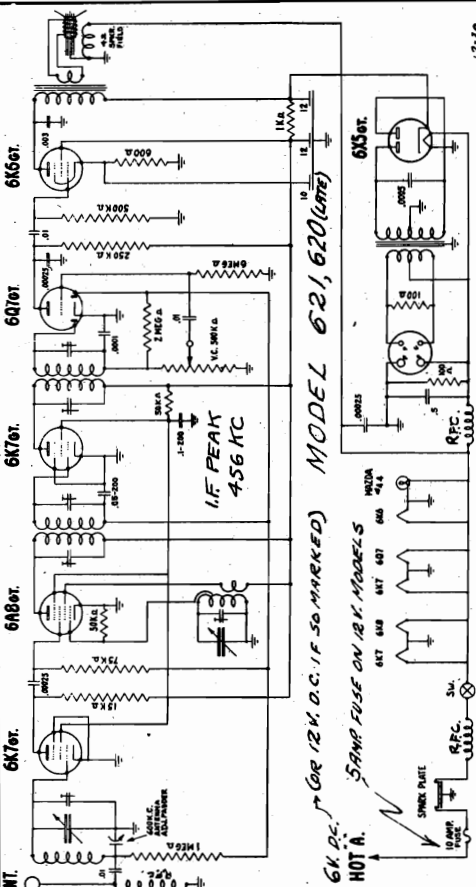


PARTS LIST FOR MODELS 555, 555BT, 1555, 1555BT

DIAG. PART NO.	PART NO.	DESCRIPTION	QTY.
C1	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C2	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C3	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C4	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C5	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C6	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C7	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C8	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C9	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C10	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C11	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C12	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C13	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C14	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C15	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C16	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C17	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C18	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C19	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C20	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C21	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C22	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C23	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C24	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C25	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C26	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C27	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C28	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C29	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C30	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C31	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C32	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C33	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C34	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C35	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C36	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C37	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C38	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C39	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C40	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C41	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C42	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C43	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C44	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C45	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C46	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C47	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C48	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C49	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C50	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C51	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C52	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C53	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C54	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C55	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C56	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C57	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C58	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C59	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C60	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C61	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C62	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C63	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C64	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C65	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C66	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C67	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C68	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C69	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C70	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C71	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C72	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C73	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C74	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C75	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C76	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C77	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C78	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C79	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C80	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C81	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C82	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C83	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C84	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C85	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C86	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C87	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C88	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C89	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C90	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C91	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C92	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C93	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C94	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C95	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C96	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C97	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C98	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C99	500000 MFD. 50 V.	500000 MFD. 50 V.	1
C100	500000 MFD. 50 V.	500000 MFD. 50 V.	1





MODELS 576, 576B
Schematic, Socket
Alignment, Trimmers

TRAV-LER RADIO & TELEV. CORP. MODEL 720 MODEL 801
Schematic Schematic
Chassis, Alignment

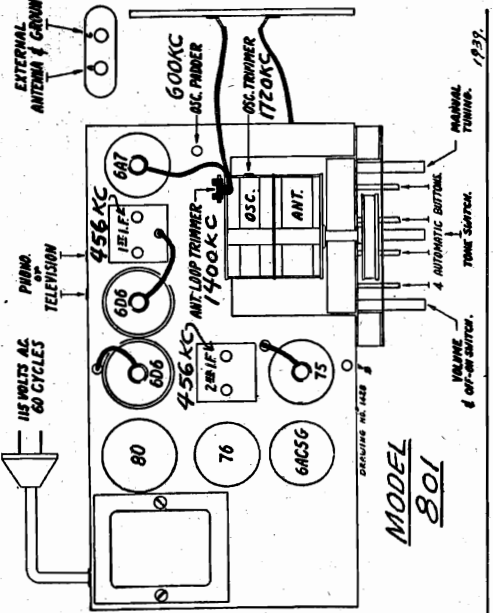

ALIGNMENT FREQUENCIES

(Use standard all wave dummy antenna if available)
 IF - 456 KC. B.C. Osc. - 1720 KC, B.C.
 Band Pass - 1400 KC., B.C. Ant. - 1400 KC.
 B.C. Pad - 600 KC. Check band at 1400 KC.
 INT. - Osc. - 6.6 MC, Ant. - 6.0 MC; Check
 BAND at 2.2 MC. S.W. Osc. - 24.5 MC;
 576, 576B. Ant. - 22 MC. Check Band at 8 MC.
 S.W. Doublet Antenna: - Connect to A1
 and A2; Connect G to Ground.

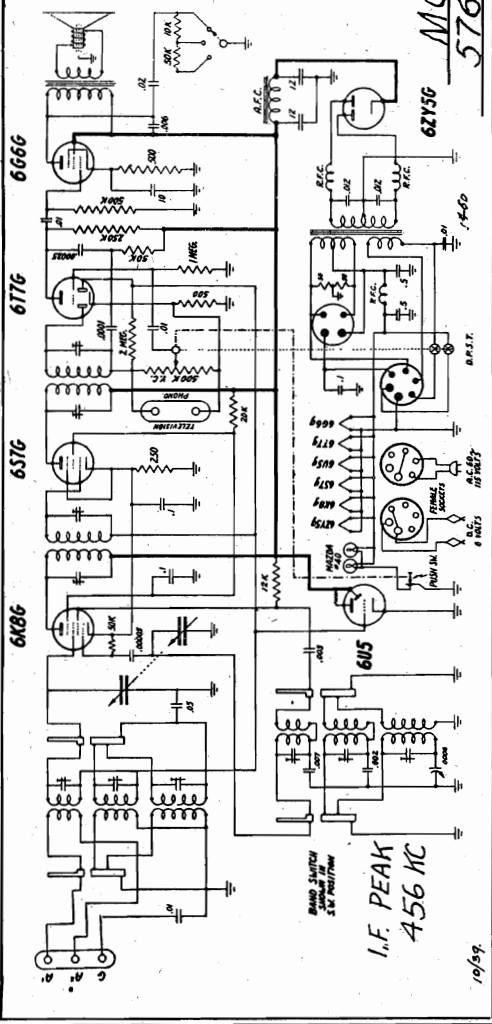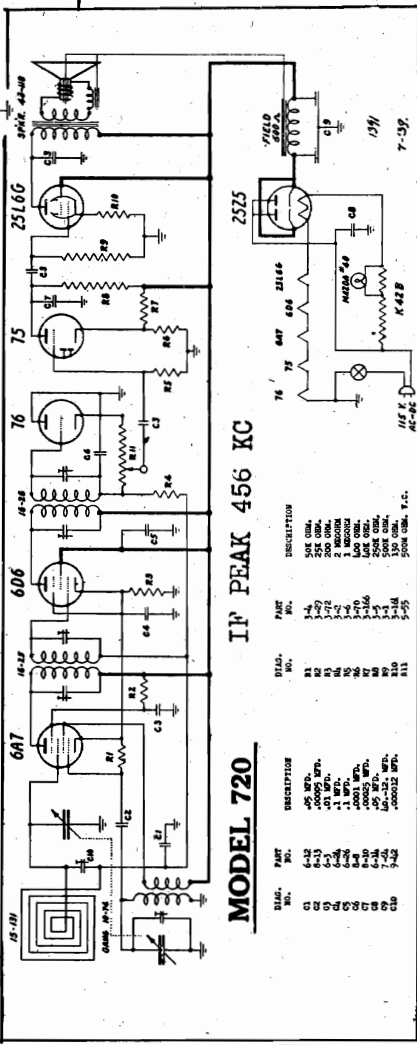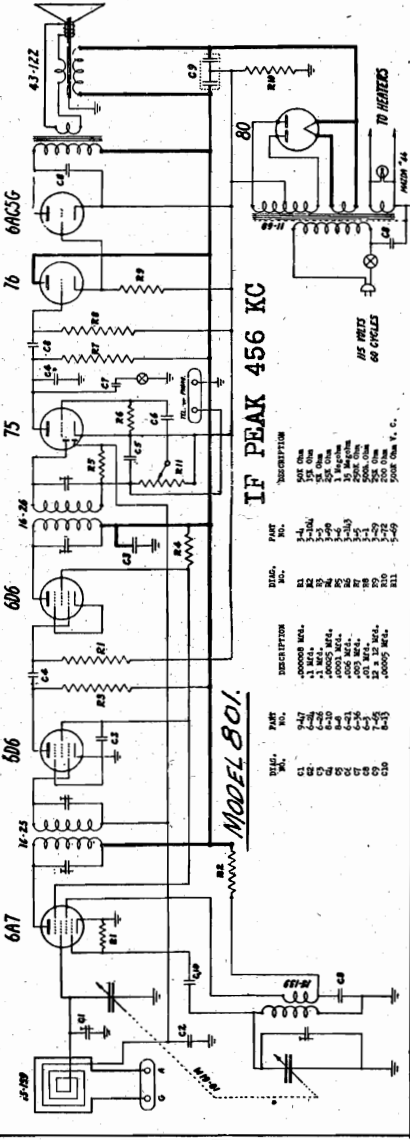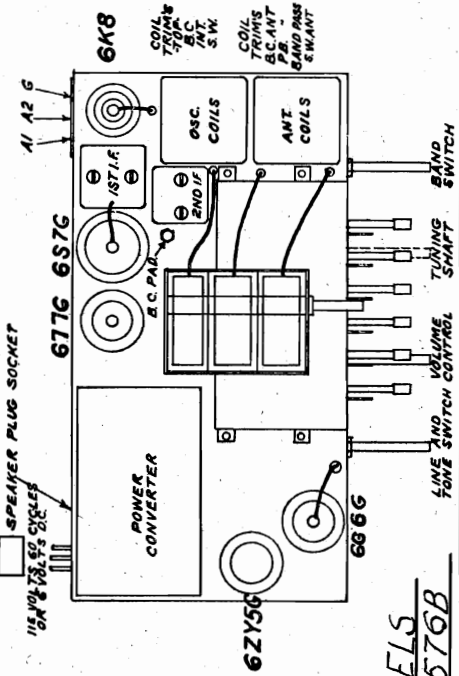

MODELS 570B, 576
576B
Conversion Data
MODELS 620, 621
Alignment, Tuner

TRAV-LER RADIO & TELEV. CORP.

MODELS 620, 621
TECHNICAL INSTRUCTIONS

ANTENNA CONNECTION
 The shielded antenna lead supplied with the radio is plugged into the receptacle provided in the underside of the radio. The other end is connected to the lead from the antenna and taped so the connection cannot touch the cable shield or any metal part of the car. If the automobile has a built-in antenna, the lead should be found behind the dash, extending from the right or left-hand corner post. It is important that this lead be cut and connected to the shielded set lead as close to the corner post as possible, to eliminate antenna pickup of motor noise.

On cars where it is necessary to install an antenna, a "fish-pole" type, an "over-the-roof" type, or a "under-the-running board" type, may be used. Two antennas, one mounted under each running board, are recommended for the best reception, as the noise on the radio will increase as the size of the antenna decreases.

The lead from the antenna should be shielded, direct, and as short as is practical. It should not be twisted around any part of the car, and should not lead thru the motor compartment. All connections should be clean, tight, soldered, and insulated with tape. The antenna must never touch any part of the car.

ANTENNA MATCHING ADJUSTMENT
 As the sizes and types of antennas vary considerably, it is necessary to adjust the radio to "match" the antenna used. To do this, tune in a station, accurately, at roughly 600 kilocycles, reduce the volume of the set, pry out the plug on the underside of the set, insert a screw driver, and turn for maximum output. Replace the plug when this has been accomplished, and the radio is ready to operate efficiently on any station.

MOTOR NOISE ELIMINATION
 To eliminate motor noise, a condenser and a suppressor are supplied with the radio. The condenser is mounted on the generator with its lead connected to the terminal of the generator output on the generator side rather than on the battery side. The heavy insulated lead in the center of the distributor cap is pulled out, the suppressor inserted in its place, and the heavy lead inserted in the end of the suppressor.

This, with the antenna installed properly will eliminate motor noise in most cars. In some of the older cars it may be necessary to install a condenser similar to the generator condenser, bolted to the dash or a good ground, with the lead connected to the ammeter with the set battery lead. When a built-in roof antenna is used, a condenser should be connected to the dome light lead where it passes through the right or left hand post to the roof. The condenser should be bolted to grounded metal.

PUSH BUTTON ADJUSTMENT
 Six push button station selectors are incorporated in this receiver, and each may be set to select any frequency or station within the range of the set. To adjust each button, follow these instructions.

1. With the set in operation, tune in any station the push button is to be set for, with the right hand tuning knob.
2. Keep a firm grip on the tuning knob so the station will not be detuned, and turn the push button about one turn to the left to loosen the mechanism. Press the button all the way in and turn it to the right until it is tight.

Repeat these operations with the other five buttons, setting each for a different station. Insert the correct call letter tab into the space provided in the panel, just above the push buttons.

A good output meter should be used in all alignment adjustments. This meter should be of the high resistance A.C. type, with a low range scale of 25 or 3 volts. The leads are connected across the voice coil terminals of the speaker.

I. F. ALIGNMENT
 Set the variable condenser at minimum capacity, (dial pointer at 1560 K.C.). Connect the two leads from a good, modulated signal generator, the ground lead to the radio chassis and the other lead through a 1 mfd. condenser, to the grid cap of the 6A7, with the tube's grid lead still in place. Connect the leads from a fully charged 6 volt storage battery to the receiver chassis and battery lead, the polarity being reversible.

With the set in operation and the volume control full on, set the signal generator to 456 K.C. and increase its output until the signal is heard in alignment.

Return the dial and generator setting to 1400 K.C. and check for alignment.

R. F. ALIGNMENT
 With the variable condenser still full open, set the generator at 1560 K.C. Connect the generator lead to the antenna lead through a .0001 mfd. condenser as dummy antenna. Adjust the oscillator trimmer for maximum output. Set the receiver dial and the generator to 1400 K.C. so the signal comes through, and adjust the antenna trimmer for maximum output.

Set the receiver dial and generator to 600 K.C. and adjust the oscillator padder for maximum output by rocking the variable condenser (with the tuning knob) as the padder is adjusted.


Return the dial and generator setting to 1400 K.C. and check for alignment.

① 1560 for 620 (1940), 621.

② 6A8GT in

INSTRUCTIONS FOR POWER LINE CONVERSION OF BATTERY MODELS 570B, 576, 576B


WARNING
 These radios must never be used on a D.C. power line at either 115 or 230 volts, or on any A.C. power line frequency, except 50 or 60 cycles. Any attempt to do so will result in a burned out transformer.

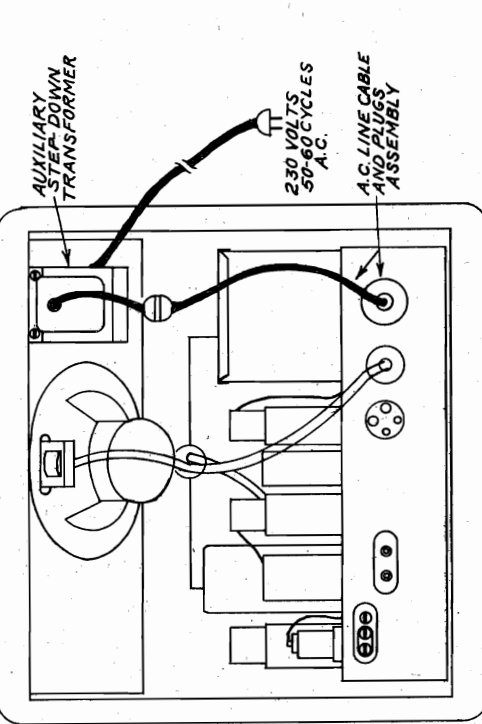


The standard battery model radios, are equipped with a special type power transformer so that these radios may be operated from either a 6 volt storage battery, or a 115 volt, 50 or 60 cycles A.C. power line.

To adapt these radios to operate from a 230 volt, 50 or 60 cycles A.C. power line, a special auxiliary step-down transformer has been developed. This transformer, Part Number 11-62, is used to reduce 230 volts to 115 volts, for normal operation. Under no circumstances may either of these models be used to operate from 230 volts A.C. without this step-down transformer.

The auxiliary transformer is mounted inside the radio cabinet on the speaker board with 1/2 inch wood screws. The cable and plugs assembly supplied with the radio for 115 volts A.C. line operation, is connected to the power plug at the rear of the radio, and the other end plugged into the female receptacle provided on the auxiliary transformer. The male plug on the long transformer cable is then plugged into a 230 volts A.C. outlet.

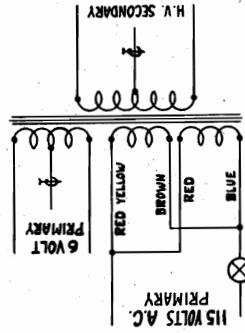

115 VOLT PRIMARY CONNECTIONS

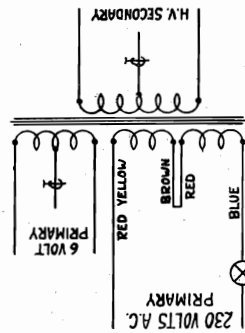


230 VOLT PRIMARY CONNECTIONS

ULTRAMAR MFG. CORP.

MODEL 826
MODEL 857
Schematics, Voltage


I.F. = 465 KC

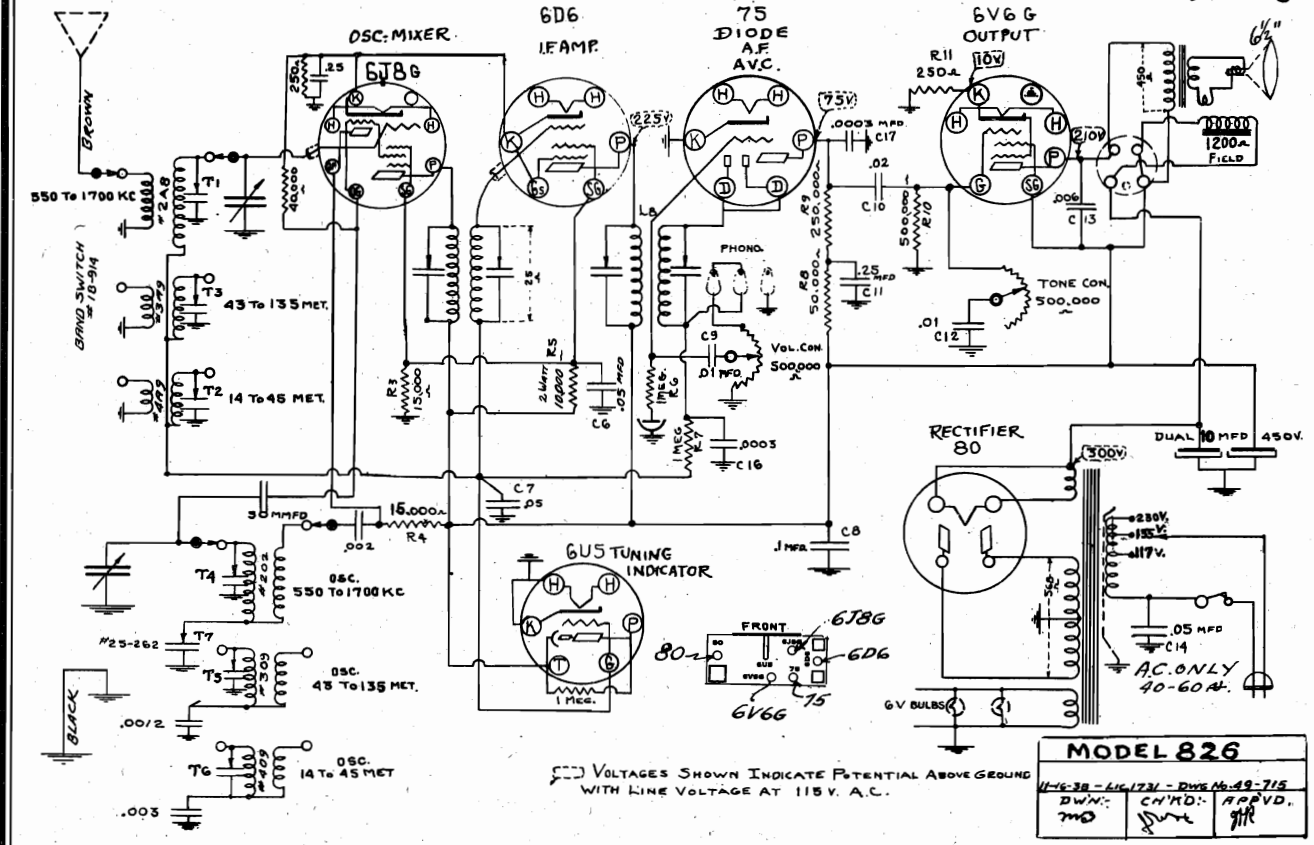

VOLTAGES SHOWN INDICATE POTENTIAL ABOVE GROUND WITH LINE VOLTAGE AT 115 V. A.C.

MODEL 826		
11-16-38 - 116-1731 - DWG No. 49-715	DWN:	CHK'D:
7MB	SWH	APR

I.F. 465 KC

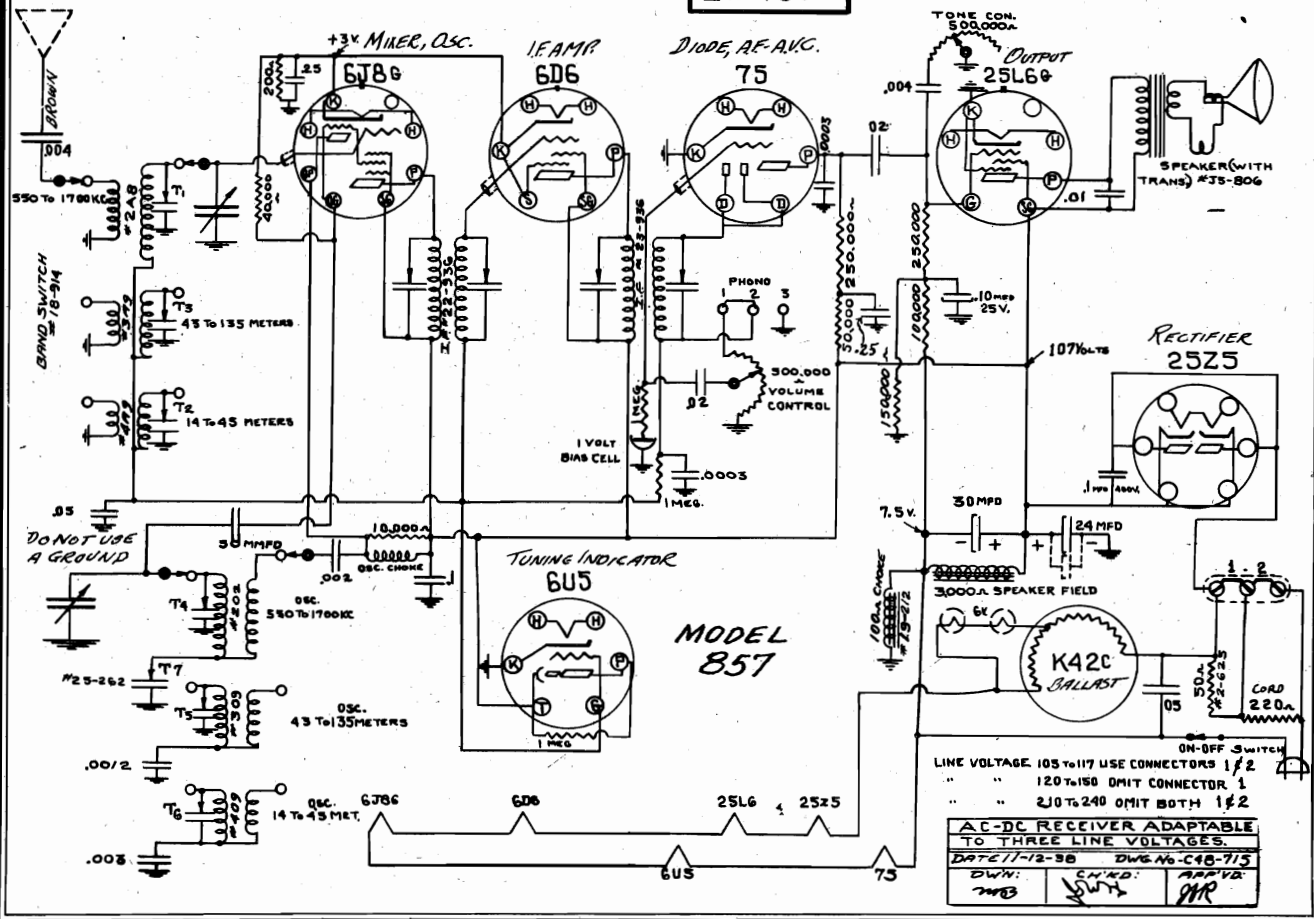

ON-OFF SWITCH
LINE VOLTAGE 105 TO 117 USE CONNECTORS 1 & 2
" " 120 TO 150 OMIT CONNECTOR 1
" " 230 TO 240 OMIT BOTH 1 & 2

AC-DC RECEIVER ADAPTABLE TO THREE LINE VOLTAGES.		
11-16-38 - 116-1731 - DWG No. 48-715	DWN:	CHK'D:
7MB	SWH	APR

MODEL 826

MODEL 857


Alignment, Trimmers

Phono. Data

ULTRAMAR MFG. CORP.

THE ADAPTATION OF THE SET FOR USE WITH PHONOGRAMS
MODELS 826, 857.

Out of the back of the chassis there extends three lugs labeled "Phono" 1-2-3. For phonograph use, the jumper is removed and the pick-up leads from the pick-up are connected to Nos. 1 and 2 terminals, with the overall wire shield grounded to No. 3 terminal. A single pole double throw switch may be used to change from Radio to "Phono". See Fig. 2.

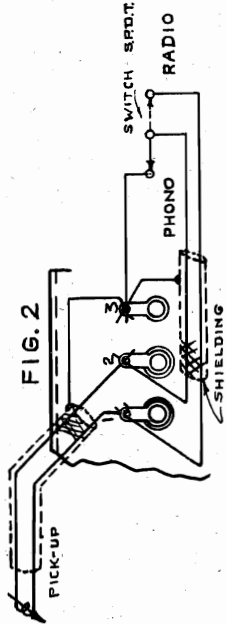


NOTE:

With certain models, the chassis is floated on cushion rubber. In shipment the chassis is tightened on corner wood strips. To release, loosen the four bottom screws, remove strips and let chassis float free.

ALIGNMENT MODELS 826, 857.

No change should be made with the I.F. or R.F. adjustments unless it is certain that such adjustments are necessary.

The following instructions are given with the assumption that the service station has the proper generator, means of measuring the output and proper input connections. The following circuit is recommended for the input from the signal generator.



See that the dial hand is straight across when the condenser is at full capacity.

After aligning the four trimmers of the IF system to 465 KC, refer to Fig. 3 showing the position of the R.F. trimmer and the frequency to which they are to be adjusted. Although the dial is calibrated in meters, there will be found on the dial extra points representing the frequency in kilocycles corresponding to the trimmer adjustments as shown in Fig. 3.

NOTES:

Always peak the oscillator circuit first and recheck after the antenna circuit is adjusted.

Be certain the alignment is not made at an image frequency.

Seal trimmers after final adjustment.

The normal voltages are shown on the schematic circuit taken from the various points to ground.

MODEL 826

The intermediate frequency stages are tuned to 465 KC and have a sensitivity of about 27 microvolts. (for 50 milliwatt output)

The maximum output is rated at about 5 watts, and 3.5 watts undistorted.

MODEL 857

The intermediate frequency stages are tuned to 465 KC and have a sensitivity of about 27 microvolts. (for 50 milliwatt output)

The maximum output is rated at about 4-1/2 watts, and 2.4 watts undistorted.

The three line voltage ranges are obtained by use of the resistance cord, an extra resistor within the chassis, and the Ballast tube. See schematic diagram. The Ballast tube also provides necessary voltage for the two pilot lights connected in series.


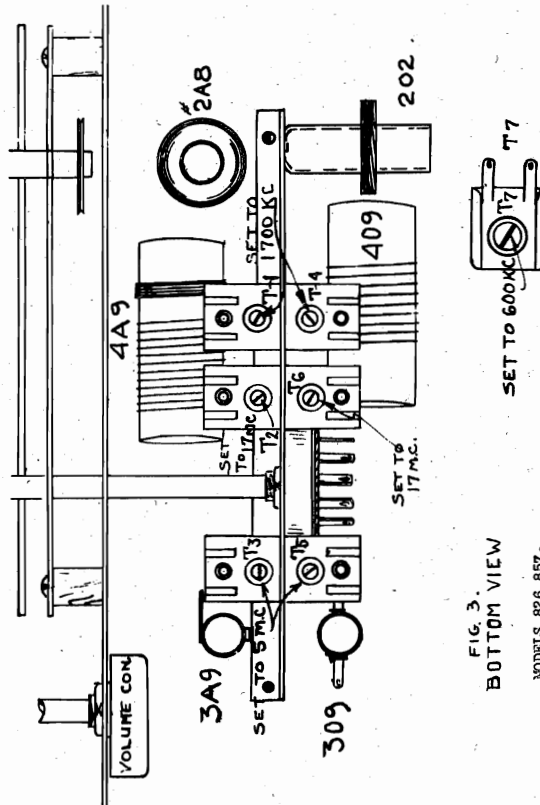


FIG. 3.
BOTTOM VIEW

MODELS 826, 857.

ULTRAMAR MFG. CORP.

MODELS 366, 376
Schematic, Voltage, Socket
Alignment, Trimmers

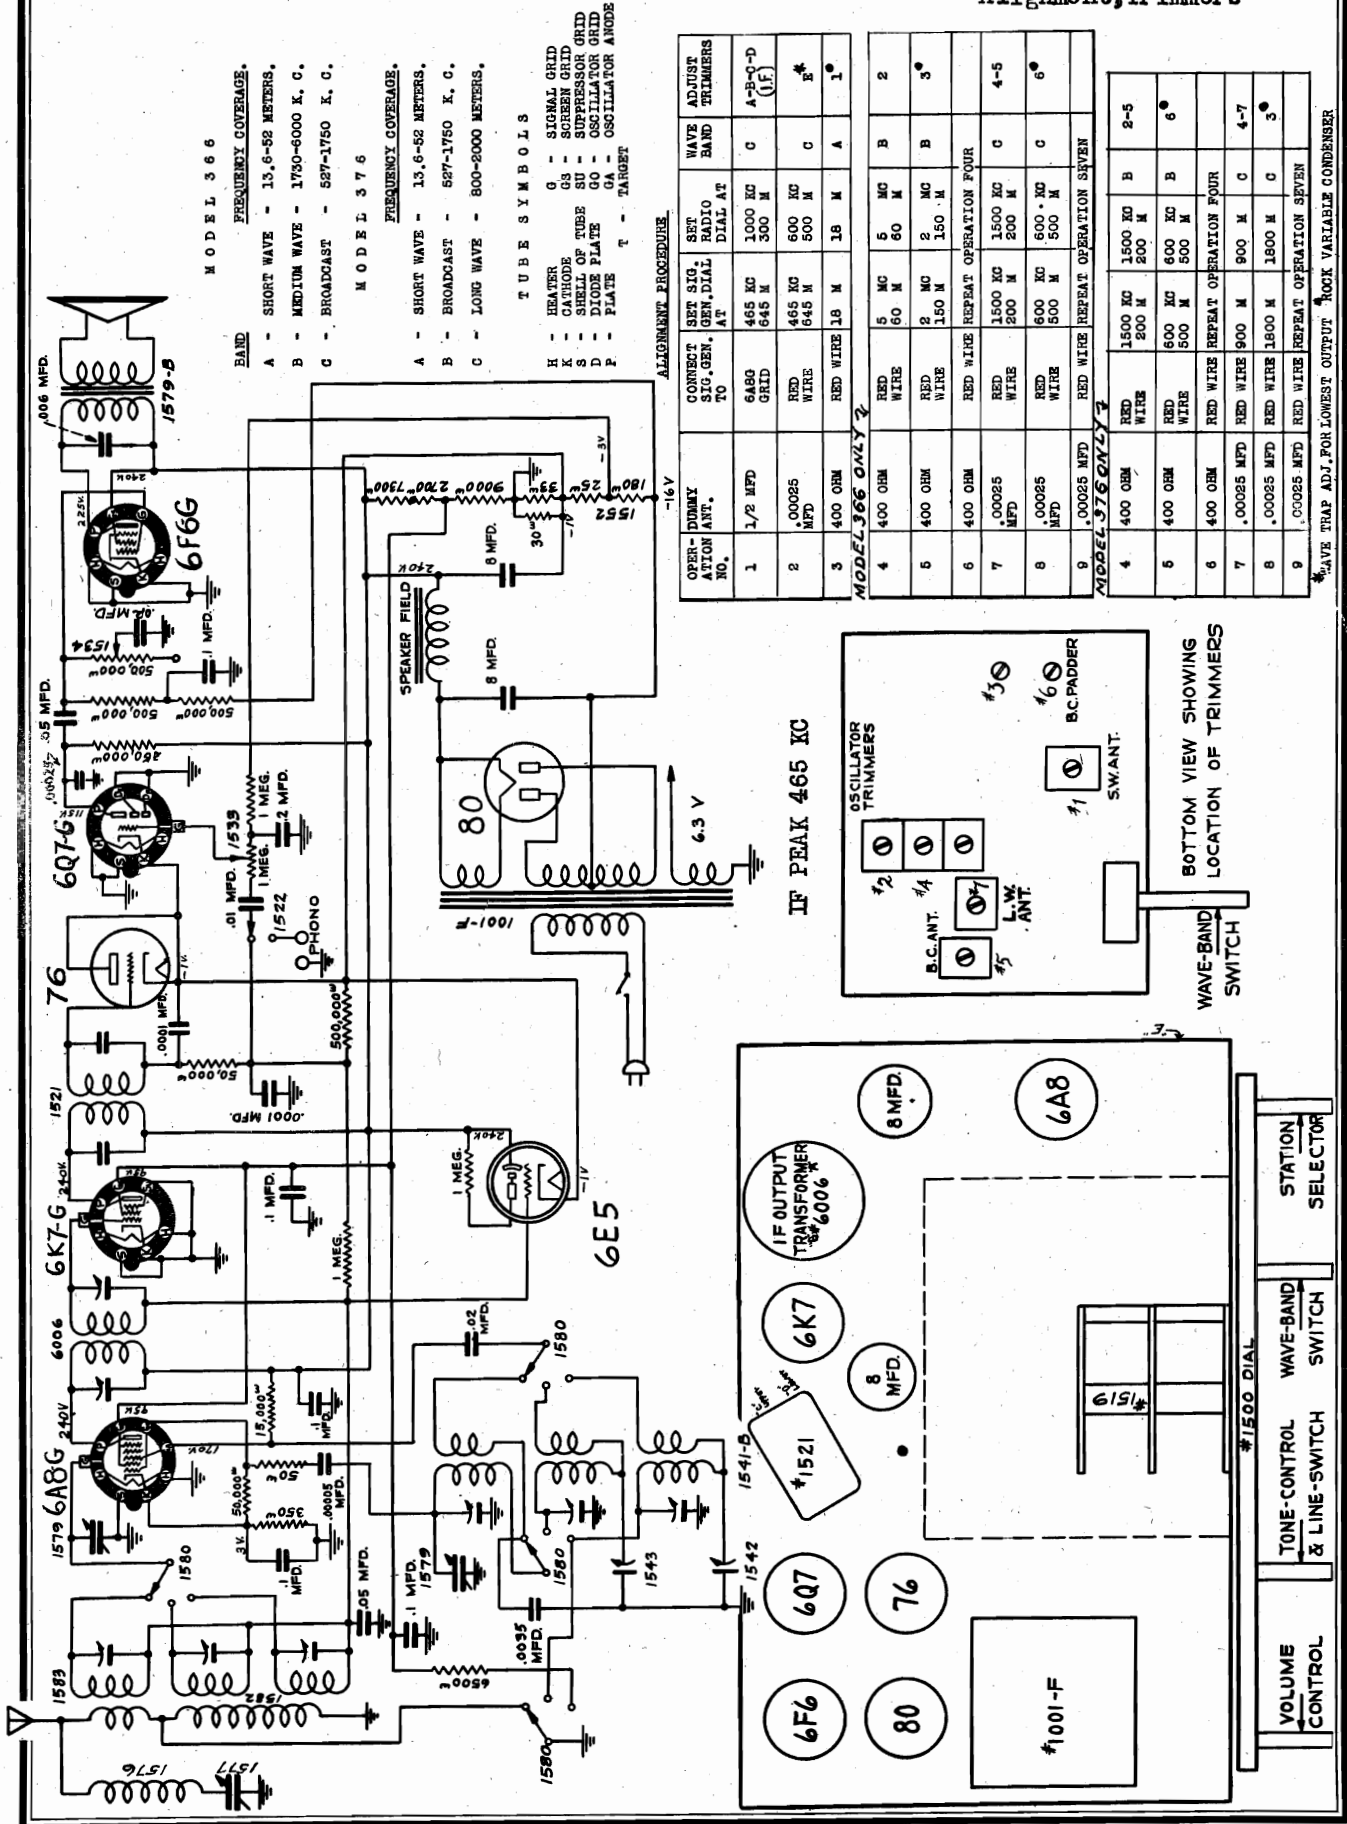

MODEL 366

FREQUENCY COVERAGE.

BAND	FREQUENCY COVERAGE.
A	SHORT WAVE - 13.6-52 METERS.
B	MEDIUM WAVE - 1750-6000 K. C.
C	BROADCAST - 527-1750 K. C.

MODEL 376

FREQUENCY COVERAGE.



A	SHORT WAVE - 13.6-52 METERS.
B	BROADCAST - 527-1750 K. C.
C	LONG WAVE - 800-2000 METERS.

TUBE SYMBOLS

- H - HEATER
- K - SCREEN GRID
- L - SHIELD OF TUBE
- M - DIODE PLATE
- N - PLATE
- O - OSCILLATOR ANODE
- P - TARGET
- Q - SIGNAL GRID
- QA - SCREEN GRID
- SA - SUPPRESSOR GRID
- SO - OSCILLATOR GRID
- TA - TARGET


ALIGNMENT PROCEDURE.

OPER- ACTION NO.	DIMMY ANT. NO.	CONNECT TO	SET SIG. GEN. AT	RADIO DIAL AT	SET DIAL AT	WAVE BAND	ADJUST TRIMMERS
1	1/2 MFD	6ABG GRID	465 KC	1000 KC	300 M	C	A-B-O-D (IF)
2	.00025 MFD	RED WIRE	465 KC	500 KC	300 M	C	E*
3	400 OHM	RED WIRE	18 M	18 M	18 M	A	1*
MODEL 366 ONLY							
4	400 OHM	RED WIRE	5 MC	60 M	5 MC	B	2
5	400 OHM	RED WIRE	2 MC	2 MC	150 M	B	3*
6	400 OHM	RED WIRE	REPEAT OPERATION FOUR				
7	.00025 MFD	RED WIRE	1500 KC	1500 KC	200 M	C	4-5
8	.00025 MFD	RED WIRE	600 KC	600 KC	500 M	C	6*
9	.00025 MFD	RED WIRE	REPEAT OPERATION SEVEN				
MODEL 376 ONLY							
4	400 OHM	RED WIRE	1500 KC	1500 KC	200 M	B	2-5
5	400 OHM	RED WIRE	600 KC	600 KC	500 M	B	6*
6	400 OHM	RED WIRE	REPEAT OPERATION FOUR				
7	.00025 MFD	RED WIRE	900 M	900 M	900 M	C	4-7
8	.00025 MFD	RED WIRE	1800 M	1800 M	1800 M	C	3*
9	.00025 MFD	RED WIRE	REPEAT OPERATION SEVEN				

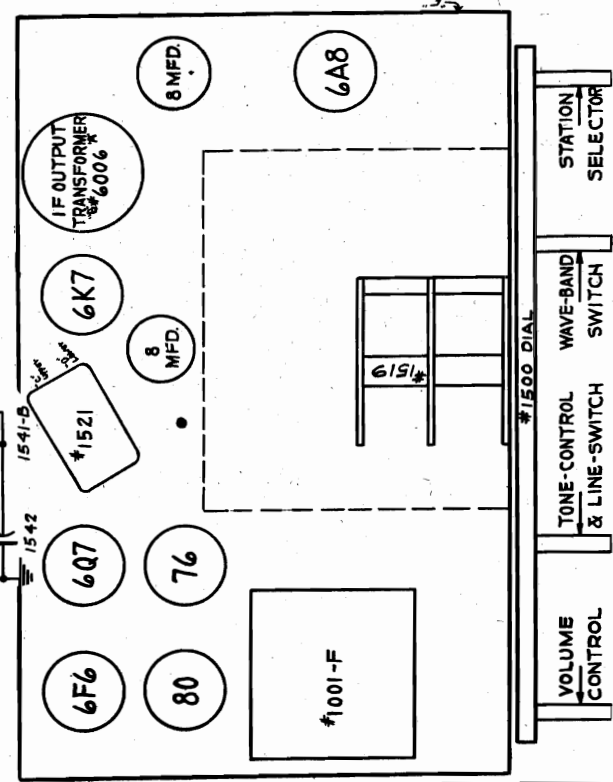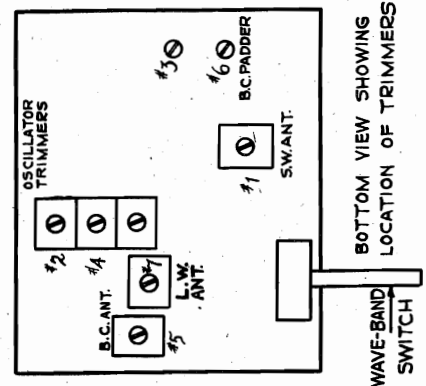


UNITED MOTORS SERVICE INC.

MODEL R1150
Alignment
MODELS R1151, R1152
Voltage, Chassis
Socket, Trimmers

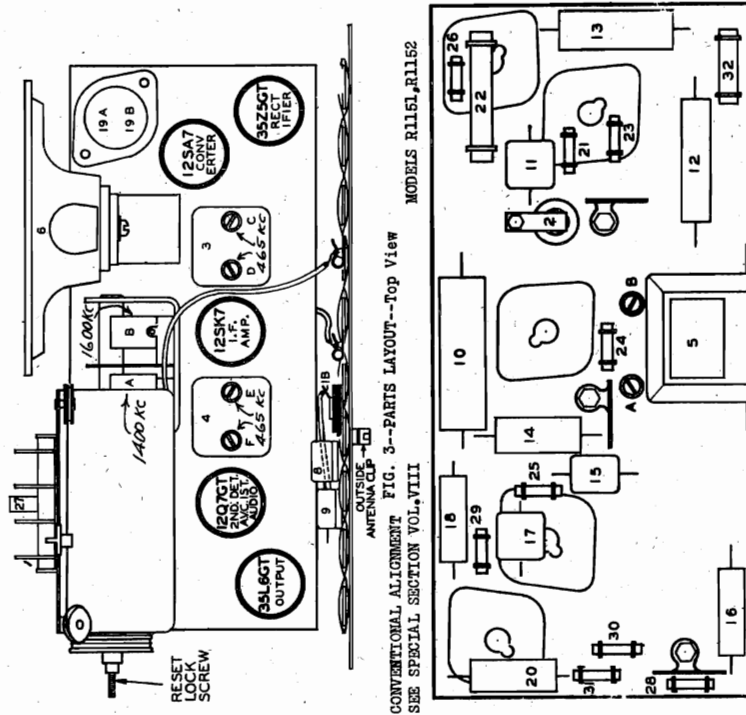

CONVENTIONAL ALIGNMENT FIG. 3--PARTS LAYOUT--Top View
MODELS R1151, R1152
SEE SPECIAL SECTION VOL. VIII

FIG. 4--PARTS LAYOUT--Bottom View

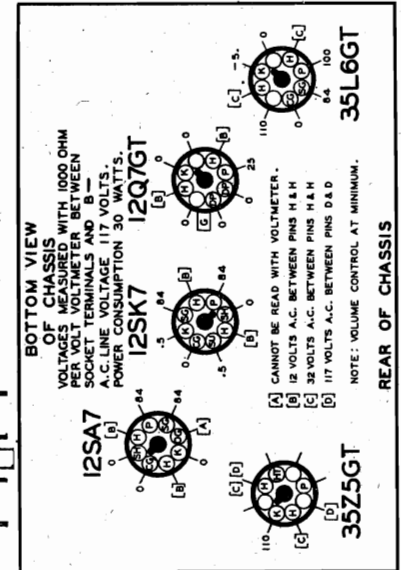

BOTTOM VIEW
OF CHASSIS
VOLTAGES MEASURED WITH 1000 OHM
MULTIMETER. ALL VOLTAGES
SOCKET TERMINALS AND B
A.C. LINE VOLTAGE 117 VOLTS.
POWER CONSUMPTION 30 WATTS.

- [A] CANNOT BE READ WITH VOLTMETER.
 - [B] 12 VOLTS A.C. BETWEEN PINS H & H
 - [C] 32 VOLTS A.C. BETWEEN PINS H & H
 - [D] 17 VOLTS A.C. BETWEEN PINS D & D
- NOTE: VOLUME CONTROL AT MINIMUM.

CIRCUIT ALIGNMENT MODEL R1150

If realignment is found necessary, the circuits can be properly adjusted only by using a calibrated test oscillator or a signal generator and an output meter. The chassis should be removed from the cabinet for alignment.

1. Aligning I-F Stages at 465 Kilocycles
 - (a) Connect the ground lead of the signal generator to the antenna plate of the receiver through a .1 mfd. condenser.
 - (b) Connect the signal lead of the signal generator to the antenna output tube.
 - (c) Connect the output meter from plate to screen grid of the 35L6GT output tube.
 - (d) Adjust the trimmers on the 2nd I-F coil and then the 1st I-F coil (illus. C-D-E-F, Fig. 4) for maximum output.

2. Aligning at 1720 Kilocycles

- (a) Leave the signal generator leads connected as before.
- (b) Rotate the tuning control knob to the high frequency end of the dial. (Iron cores should extend 1 9/32" from edge of windings.)
- (c) Set the signal generator to exactly 1720 K.C.
- (d) Adjust the oscillator trimmer (illus. B, Fig. 5) for maximum output.
- (e) Disconnect the signal lead of the signal generator from the back plate and connect to the antenna terminal of the receiver through a .0002 mfd. condenser.
- (f) Adjust the antenna trimmer (illus. A, Fig. 5) for maximum output.

3. Aligning at 1400 Kilocycles

- (a) Set the signal generator to 1400 K.C.
- (b) Rotate the tuning control knob until this signal is tuned in with maximum output.
- (c) Adjust the position of the antenna coil (Fig. 2) until maximum output is obtained.

NOTE: (A.) To adjust the position of the antenna or oscillator coils, insert one edge of the blade of a screwdriver in the hole in the chassis plate and engage the blade in the gear teeth of the coil form (Fig. 2).

(d) Repeat the adjustment of the antenna trimmer at 1720 K.C. and the antenna coil at 1400 K.C. until no further increase in output can be obtained.

REAR OF CHASSIS

UNITED MOTORS SERVICE INC.

MODEL R1153
Schematic

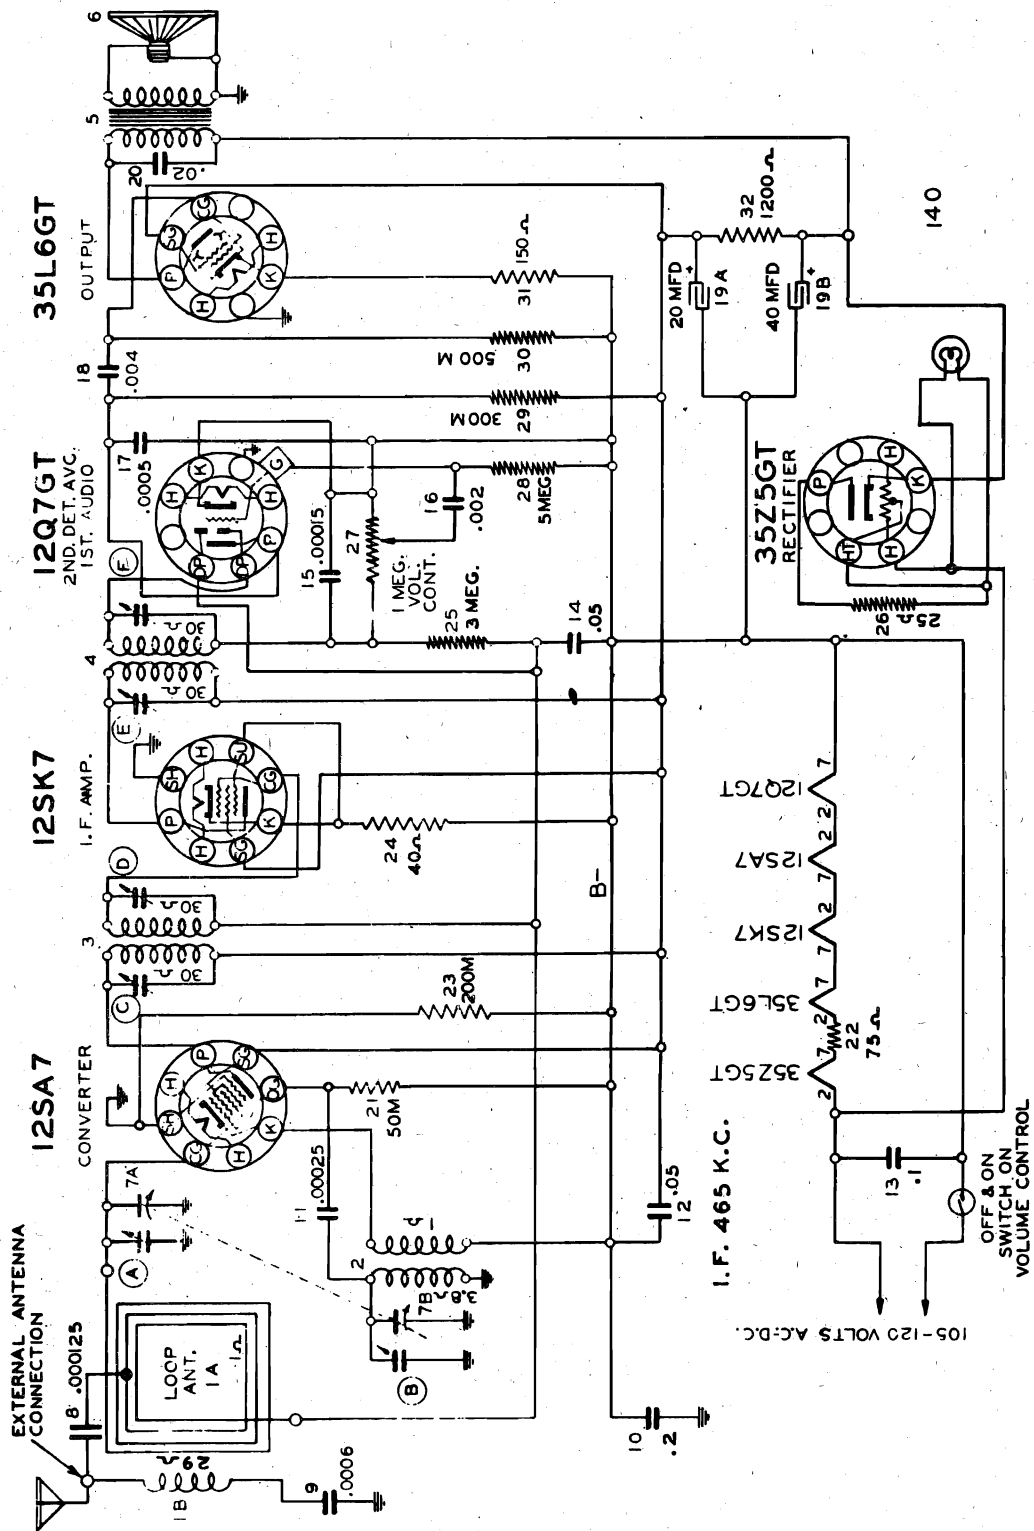


Fig. 2--DELCO MODEL R-1153 CIRCUIT DIAGRAM

Delco R-1153

Date: 9-27-39

MODEL R1153
Voltage, Chassis
Socket, Trimmers
Alignment

UNITED MOTORS SERVICE INC.

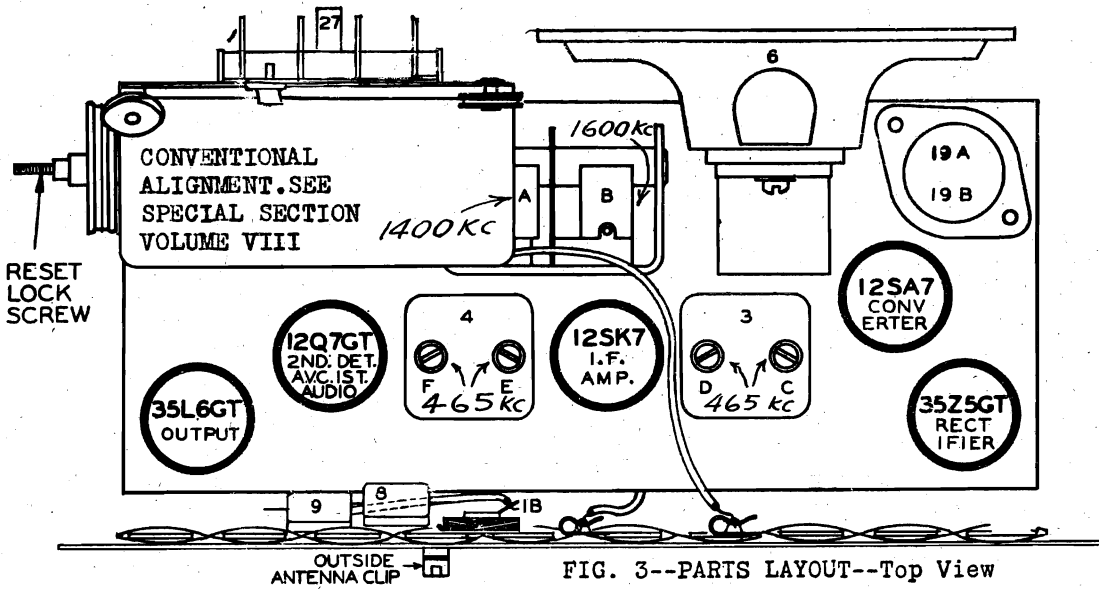


FIG. 3--PARTS LAYOUT--Top View


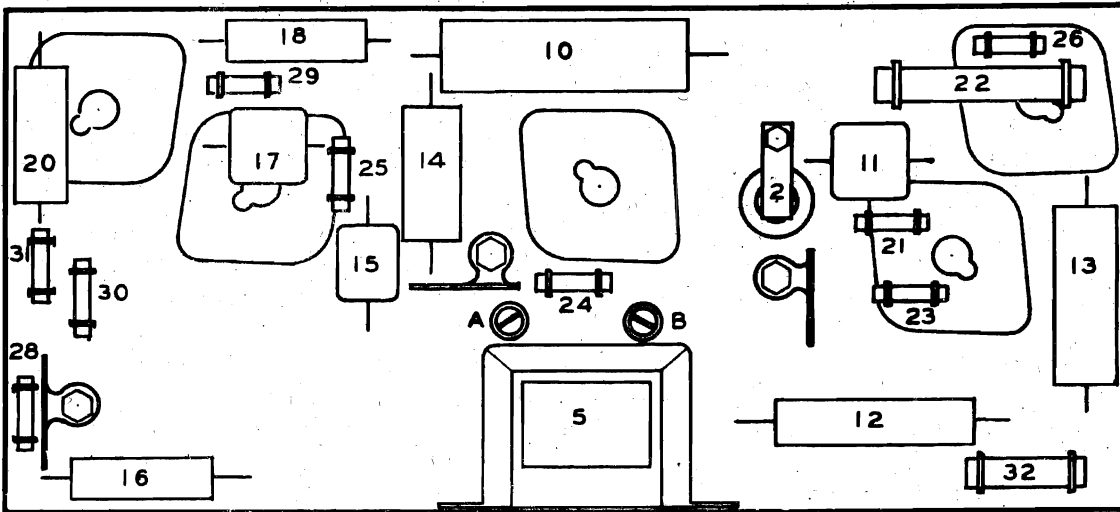


FIG. 4--PARTS LAYOUT--Bottom View

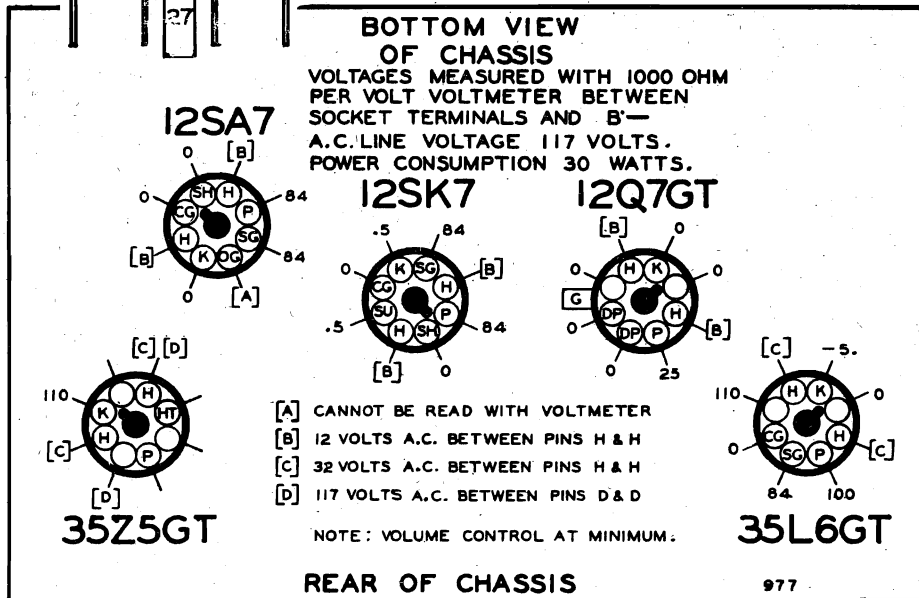

CONVENTIONAL ALIGNMENT SEE SPEC. SECTION VOLUME VIII.

MODELS R1154, R1155
Voltage, Chassis
Socket, Trimmers
Alignment

UNITED MOTORS SERVICE INC.

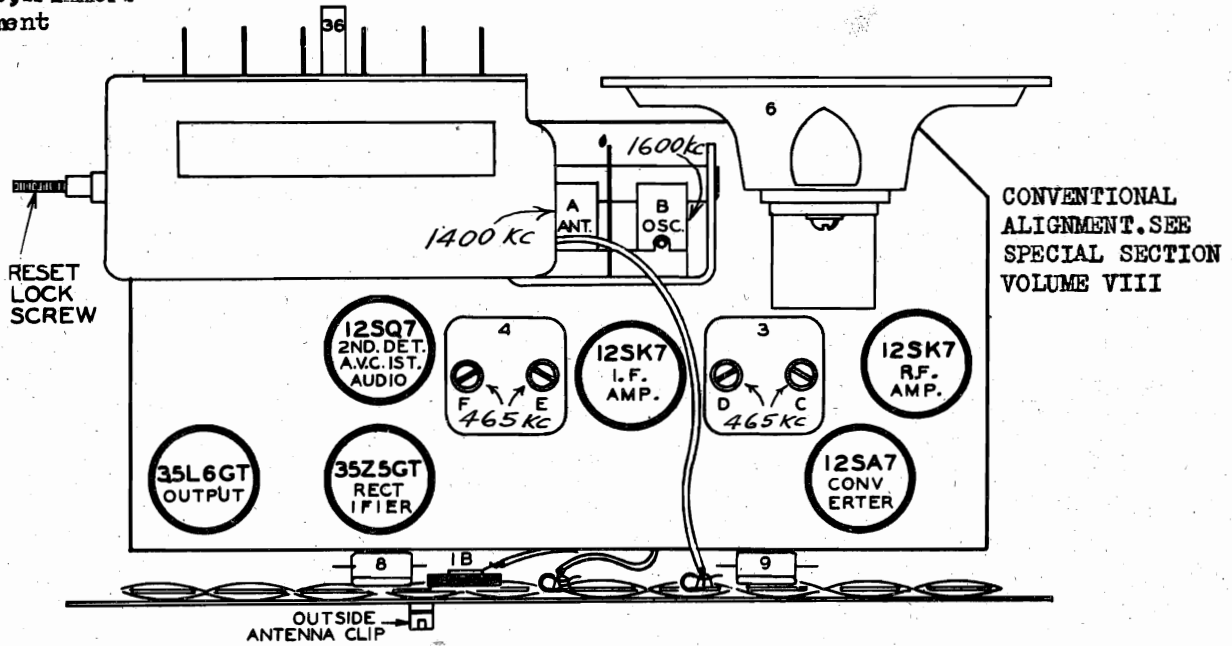


FIG. 3--PARTS LAYOUT--Top View


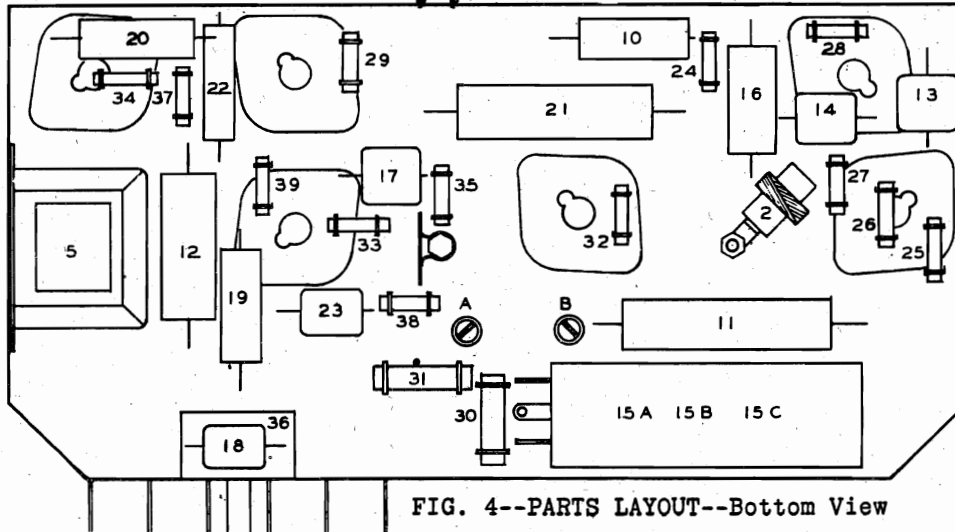


FIG. 4--PARTS LAYOUT--Bottom View

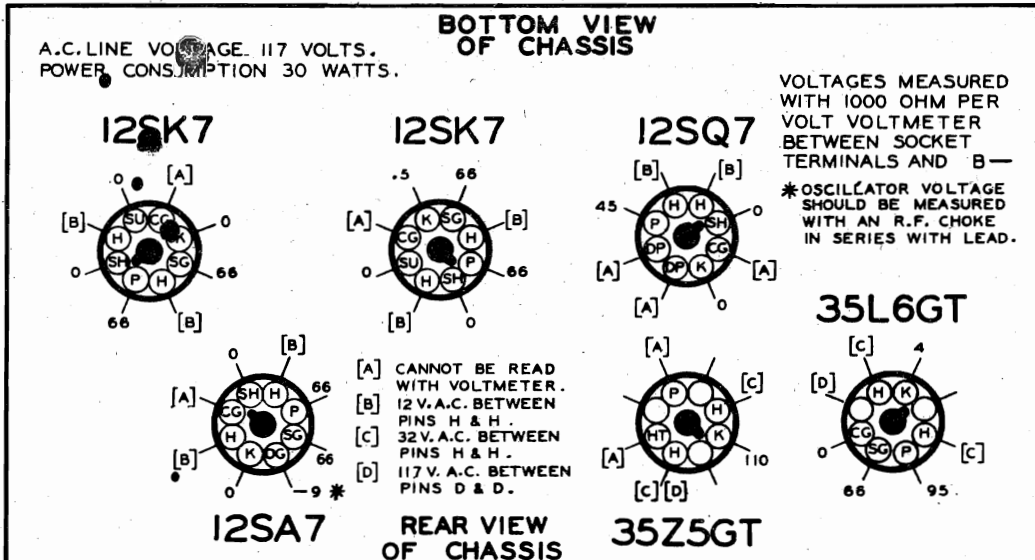

**MODEL R1156
Alignment
Trimmers**

UNITED MOTORS SERVICE INC.

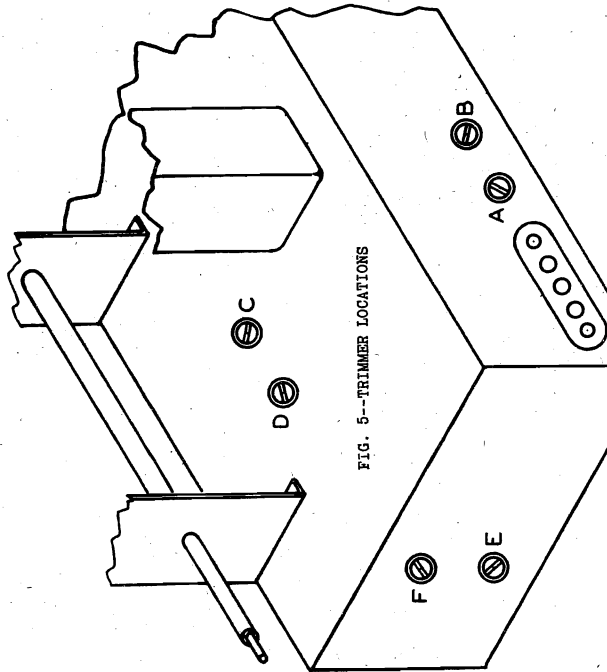


FIG. 5--TRIMMER LOCATIONS

1. Aligning I-F Stages at 465 Kilocycles
 - (a) Connect the ground lead of the signal generator to the B-terminal of the receiver. (Pin #6, 35L6GT tube)
 - (b) Connect the signal lead of the signal generator to the grid of the 12SK7 I-F tube through a 1. mfd. condenser.
 - (c) Connect the output meter across the primary of the output transformer.
 - (d) Leave the loop connected to the radio and held in back of the chassis in the same position and distance from the chassis as when both units are mounted in the cabinet.
 - (e) Set the signal generator to exactly 465 K.C.
 - (f) With the band switch in the Broadcast position, the volume control on full and the rotor plates of the condenser gang completely out of mesh, adjust the trimmers on the second I-F coil (Illus. I & J, Fig. 3) for maximum output.
 - (g) Connect the signal lead of the signal generator to the grid of the 12SA7 tube.
 - (h) Adjust the trimmers on the first IF coil (Illus. G & H, Fig. 3) for maximum output.
2. Aligning at 4050 Kilocycles
 - (a) Connect the signal lead of the signal generator to the antenna clip of the receiver through a .002 mfd. condenser.
 - (b) Connect the ground lead of the signal generator to the ground clip of the receiver.
 - (c) Set the signal generator to exactly 4050 K.C.
 - (d) With the band switch in the short wave position and the rotor plates of the condenser gang completely out of mesh, adjust the short wave oscillator trimmer (Illus. C, Fig. 5) for maximum output.
3. Aligning at 3500 Kilocycles
 - (a) Leave the signal generator connected the same as before.
 - (b) Set the signal generator to 2500 K.C.
 - (c) Rotate the shaft of the tuning condenser gang until this signal is tuned in with maximum output.
 - (d) Adjust the short wave antenna trimmer (Illus. B, Fig. 5) for maximum output.
4. Aligning at 1650 Kilocycles
 - (a) Set the signal generator to 1650 K.C.
 - (b) Rotate the shaft of the tuning condenser gang until this signal is tuned in with maximum output.
 - (c) Adjust the short wave oscillator series pad (Illus. F, Fig. 5) while rocking the rotor plates of the condenser gang back and forth through the signal until maximum output is obtained.
5. Aligning at 1550 Kilocycles
 - (a) Change the band switch to Broadcast position.
 - (b) Set the signal generator to exactly 1550 K.C.
 - (c) With the rotor plates of the condenser gang completely out of mesh, adjust the broadcast oscillator trimmer (Illus. D, Fig. 5) for maximum output.
6. Aligning at 1400 Kilocycles
 - (a) Set the signal generator to 1400 K.C.
 - (b) Rotate the rotor plates of the condenser gang until this signal is tuned in with maximum output.
 - (c) Adjust the Broadcast antenna trimmer (Illus. A, Fig. 5) for maximum output.
7. Aligning at 600 Kilocycles
 - (a) Set the signal generator to 600 K.C.
 - (b) Rotate the rotor plates of the condenser gang until this signal is tuned in with maximum output.
 - (c) Adjust the Broadcast oscillator series pad (Illus. E, Fig. 5) while rocking the rotor plates of the condenser gang back and forth through the signal until maximum output is obtained.

NOTE: After each band is completed, repeat the procedure as a final check.

UNITED MOTORS SERVICE INC.

MODEL R1156
Voltage, Chassis
Socket, Trimmers


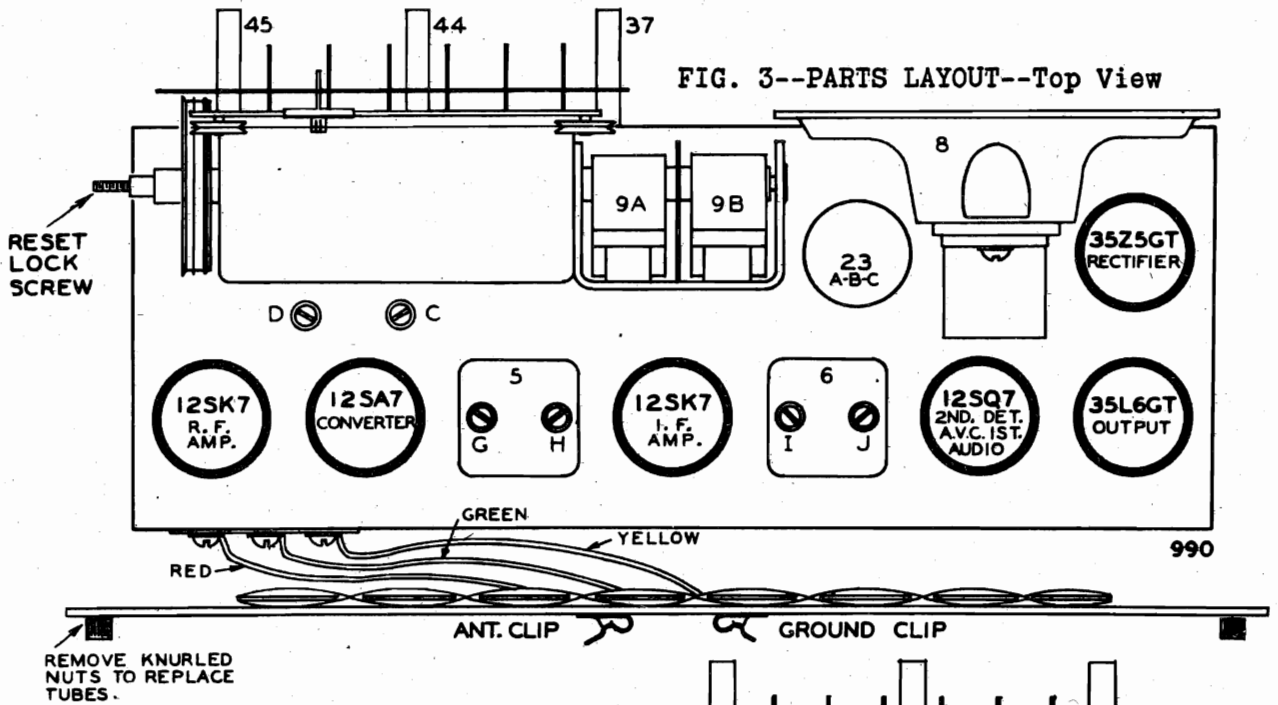


FIG. 3--PARTS LAYOUT--Top View



FIG. 4--PARTS LAYOUT--Bottom View


BOTTOM VIEW OF CHASSIS

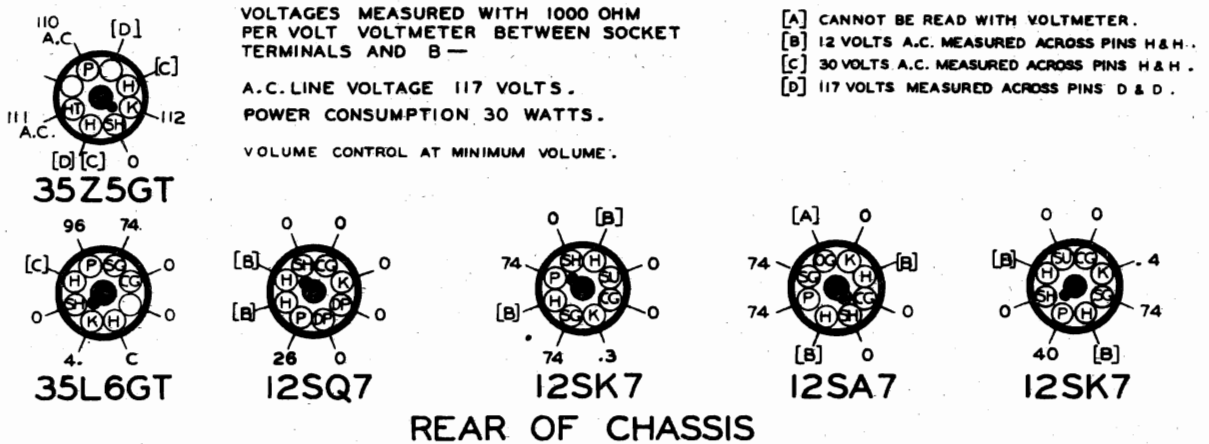

REAR OF CHASSIS

MODEL R1160
Chassis, Socket
Trimmers

UNITED MOTORS SERVICE INC.

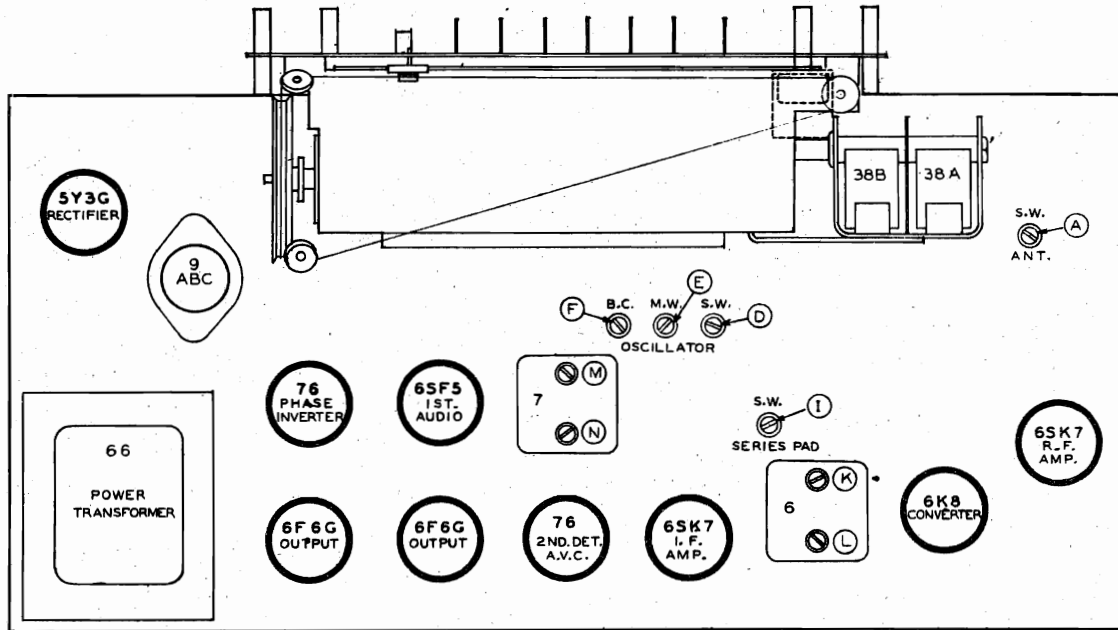

SPEAKER SOCKET PHONO CONNECTOR (BELOW) PHONO SWITCH
FIG. 3--PARTS LAYOUT--Top View

FIG. 4--REAR VIEW OF CHASSIS






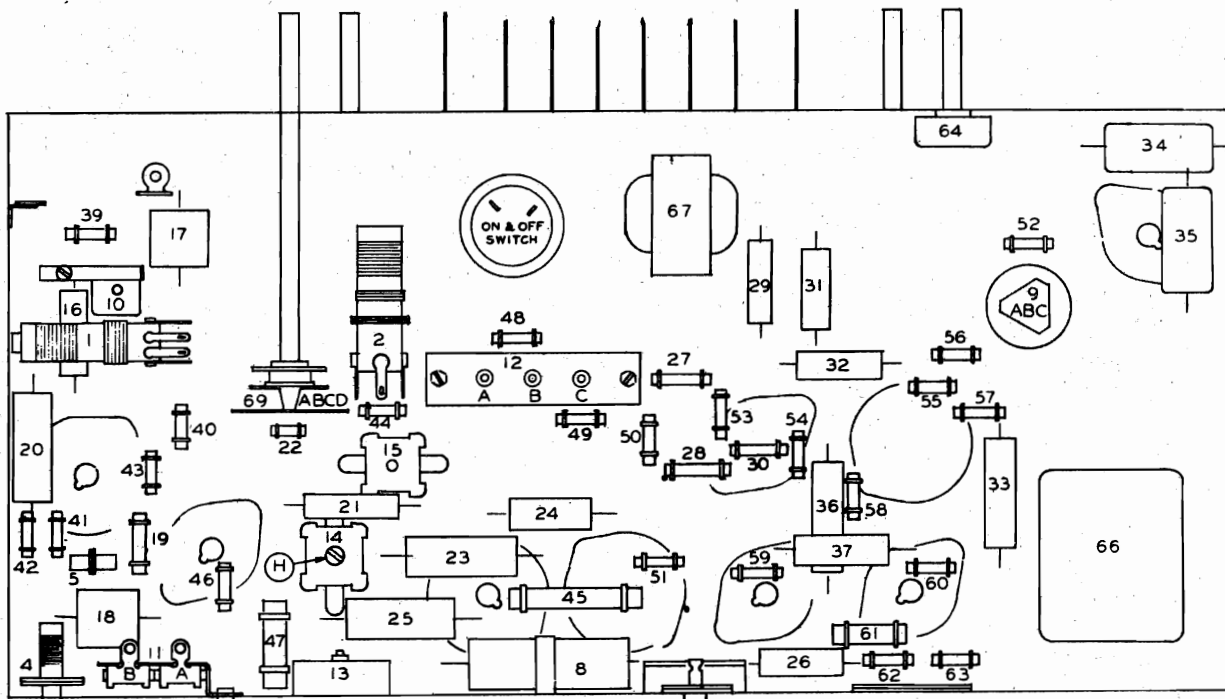


FIG. 5--PARTS LAYOUT--Bottom View



MODEL R1157
 Chassis, Socket
 Alignment, Trimmers

UNITED MOTORS SERVICE INC.

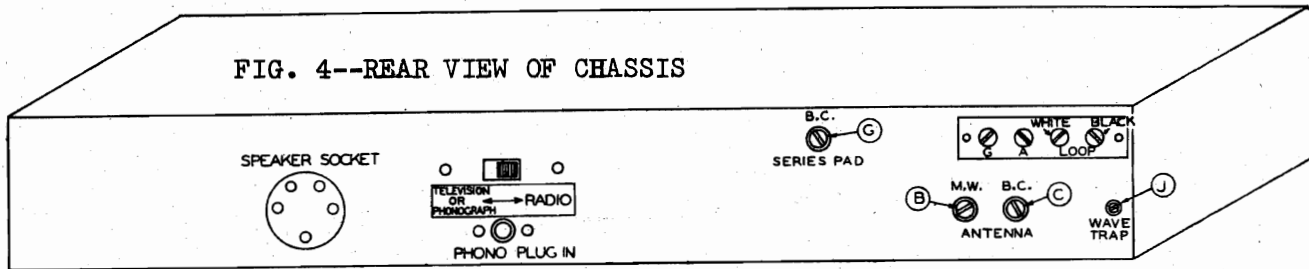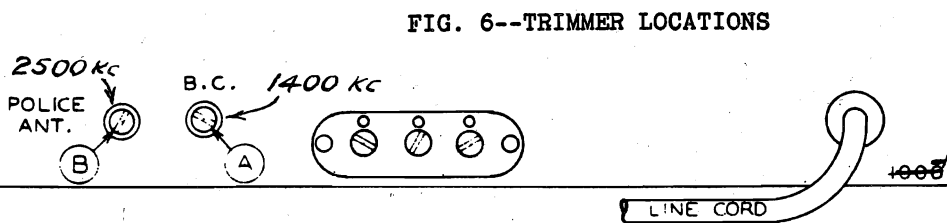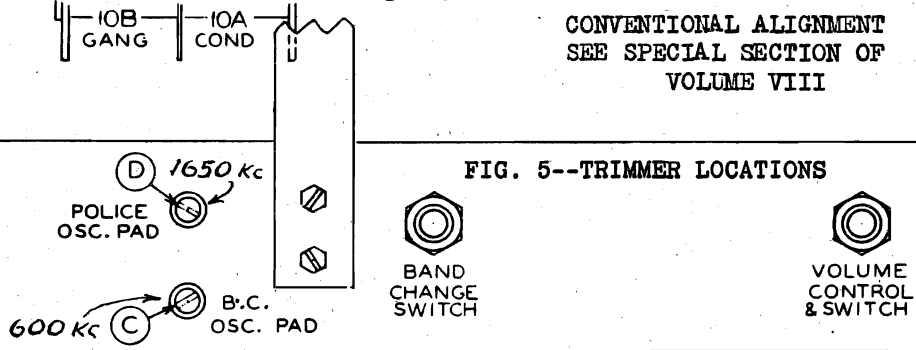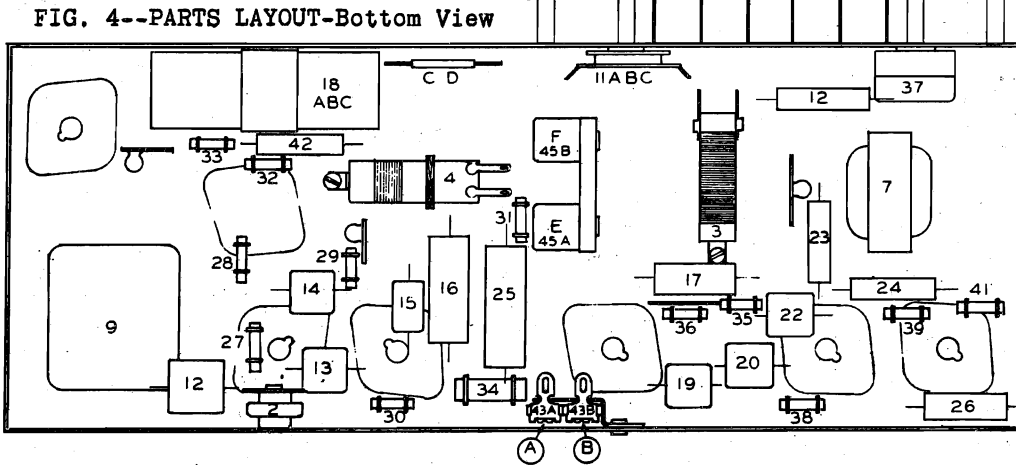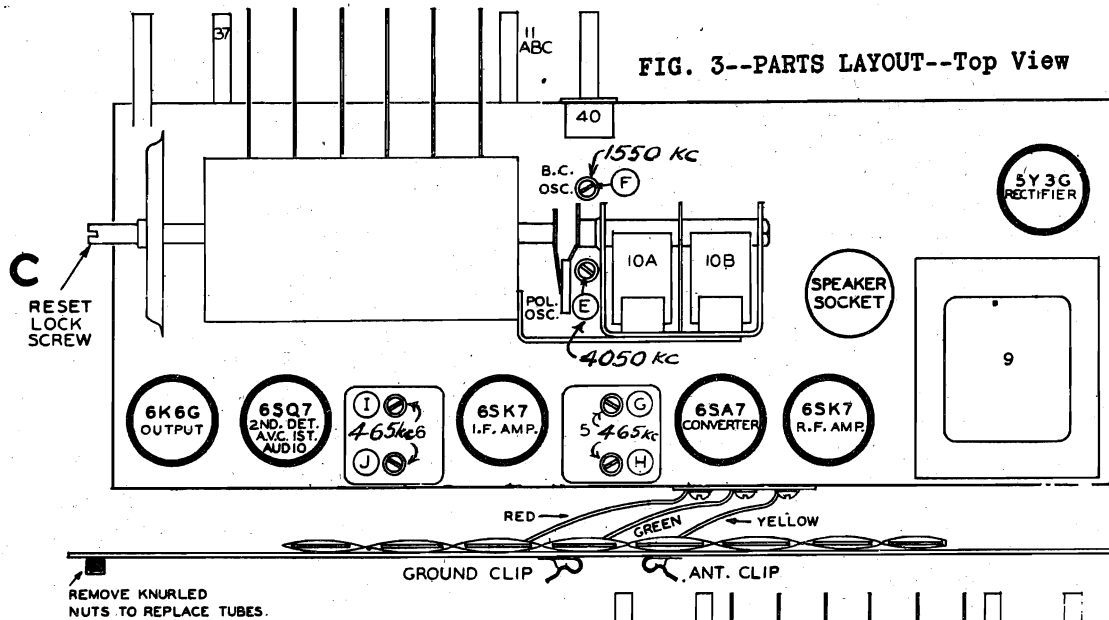

UNITED MOTORS SERVICE

MODEL R1400
Schematic
Chassis

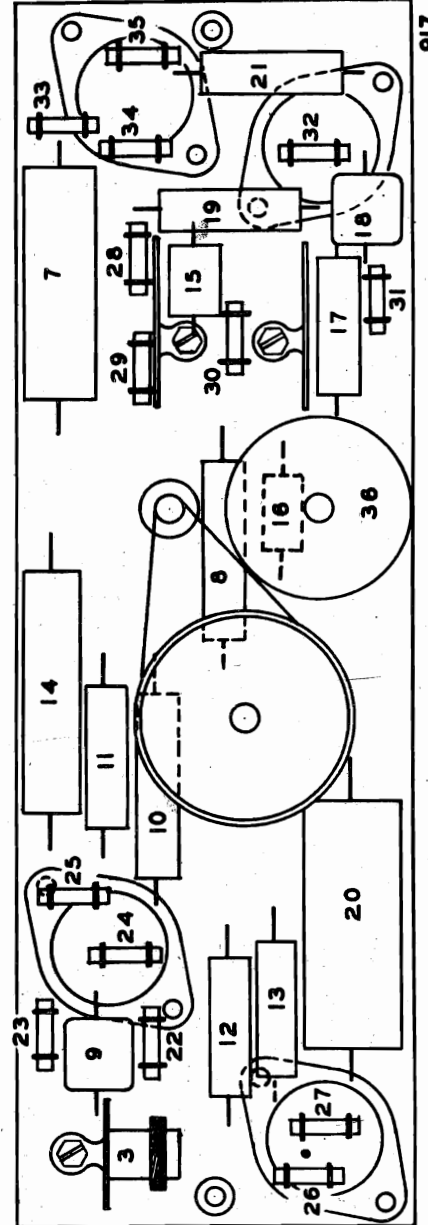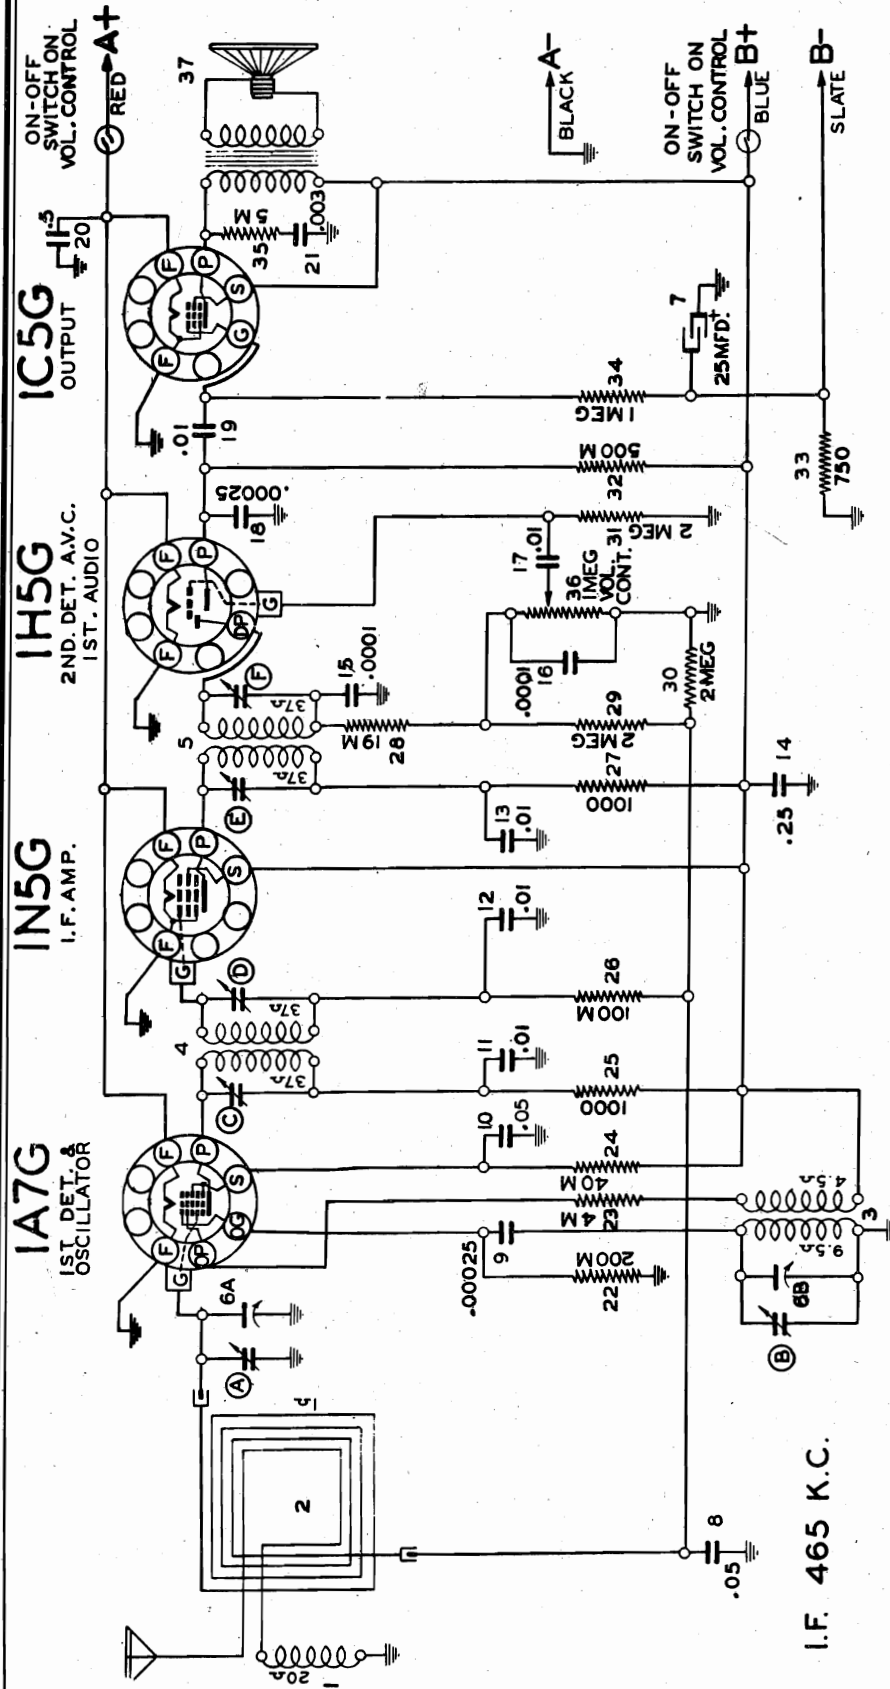

I.F. 465 K.C.

Delco Model R-1400

Date: 7-12-39

MODEL RL400
Voltage, Socket
Alignment, Trimmers

UNITED MOTORS SERVICE INC.

1. Aligning I-F Stages at 465 Kilocycles--

Set the signal generator to exactly 465 K.C.

Adjust the I-F trimmers C-D-E-F (Illus. 4 and 5, Fig. 4) for maximum output, using the lowest output from the signal generator which will give a readable indication on the output meter, not to exceed 50 milliwatts.

2. Aligning at 1650 Kilocycles

(a) Leave all connections the same as for I-F alignment.

(b) Set the signal generator to exactly 1650 K.C.

(c) Adjust the oscillator trimmer condenser (Illus. B, Fig. 2), for maximum output.

3. Aligning at 1400 Kilocycles

NOTE: This adjustment MUST be made with set and loop mounted and firmly attached in cabinet.

(a) Remove the 1 megohm resistor and connect loop leads to the loop antenna. (Check these clips to make sure that contacts are clean and tight.)

(b) Remove signal lead of the signal generator from the grid of the 1A7G tube and place in a position where the signal can be picked up by the loop antenna. (The signal lead of the signal generator may be connected to the metal carrier pins of the case handle and the ground lead connected to the chassis mounting screw.)

(c) Set the signal generator to 1400 K.C.

(d) Adjust the loop trimmer (Illus. "A", Fig. 2) for maximum output.

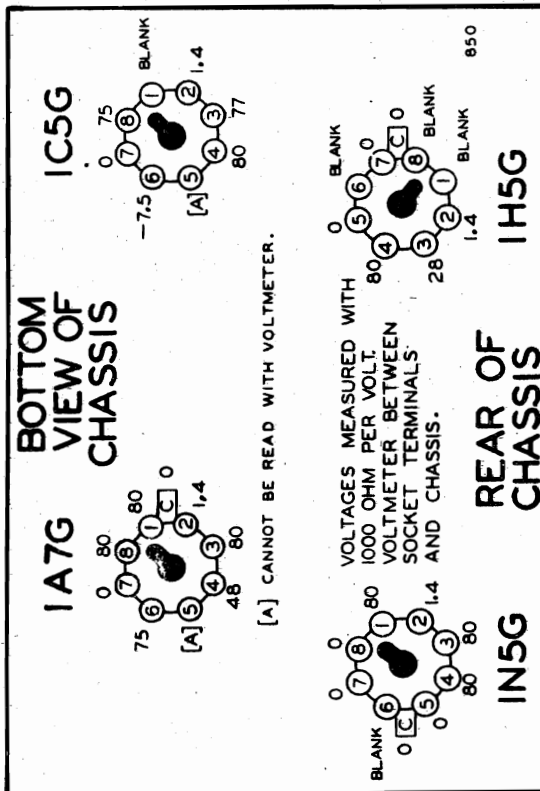


FIG. 1--TUBE SOCKET VOLTAGES





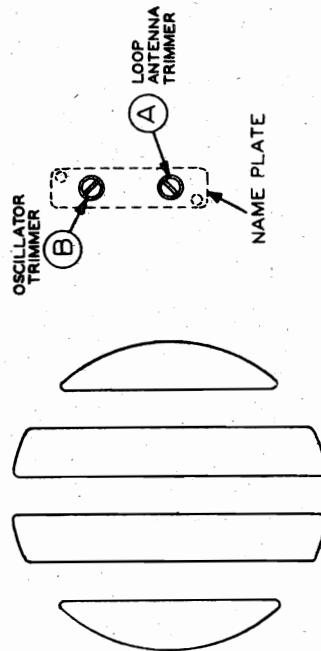


FIG. 2--TRIMMER LOCATIONS

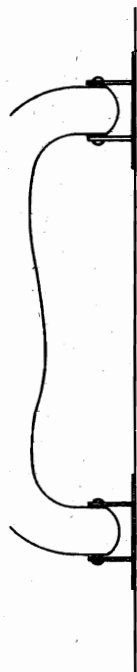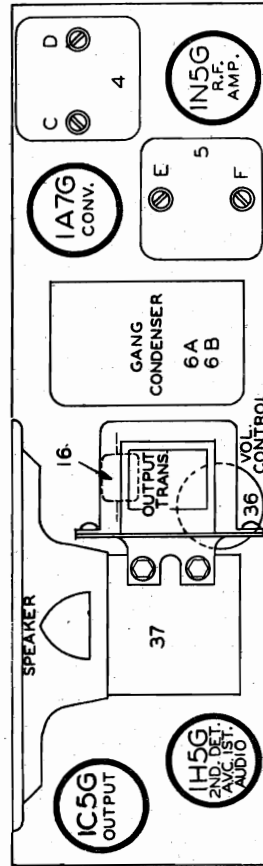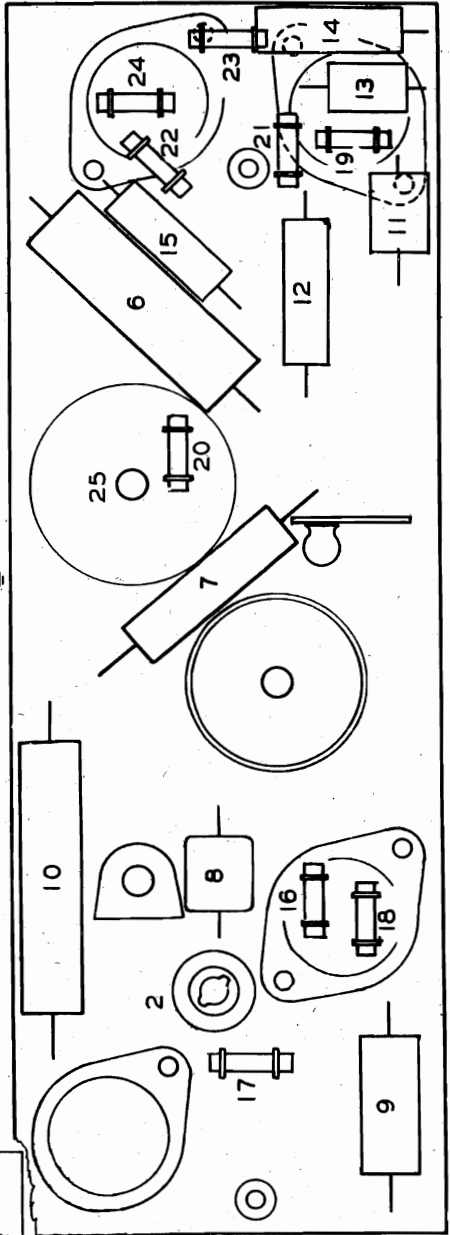

UNITED MOTORS SERVICE INC.

MODELS R1401, R1402
Schematic, Chassis

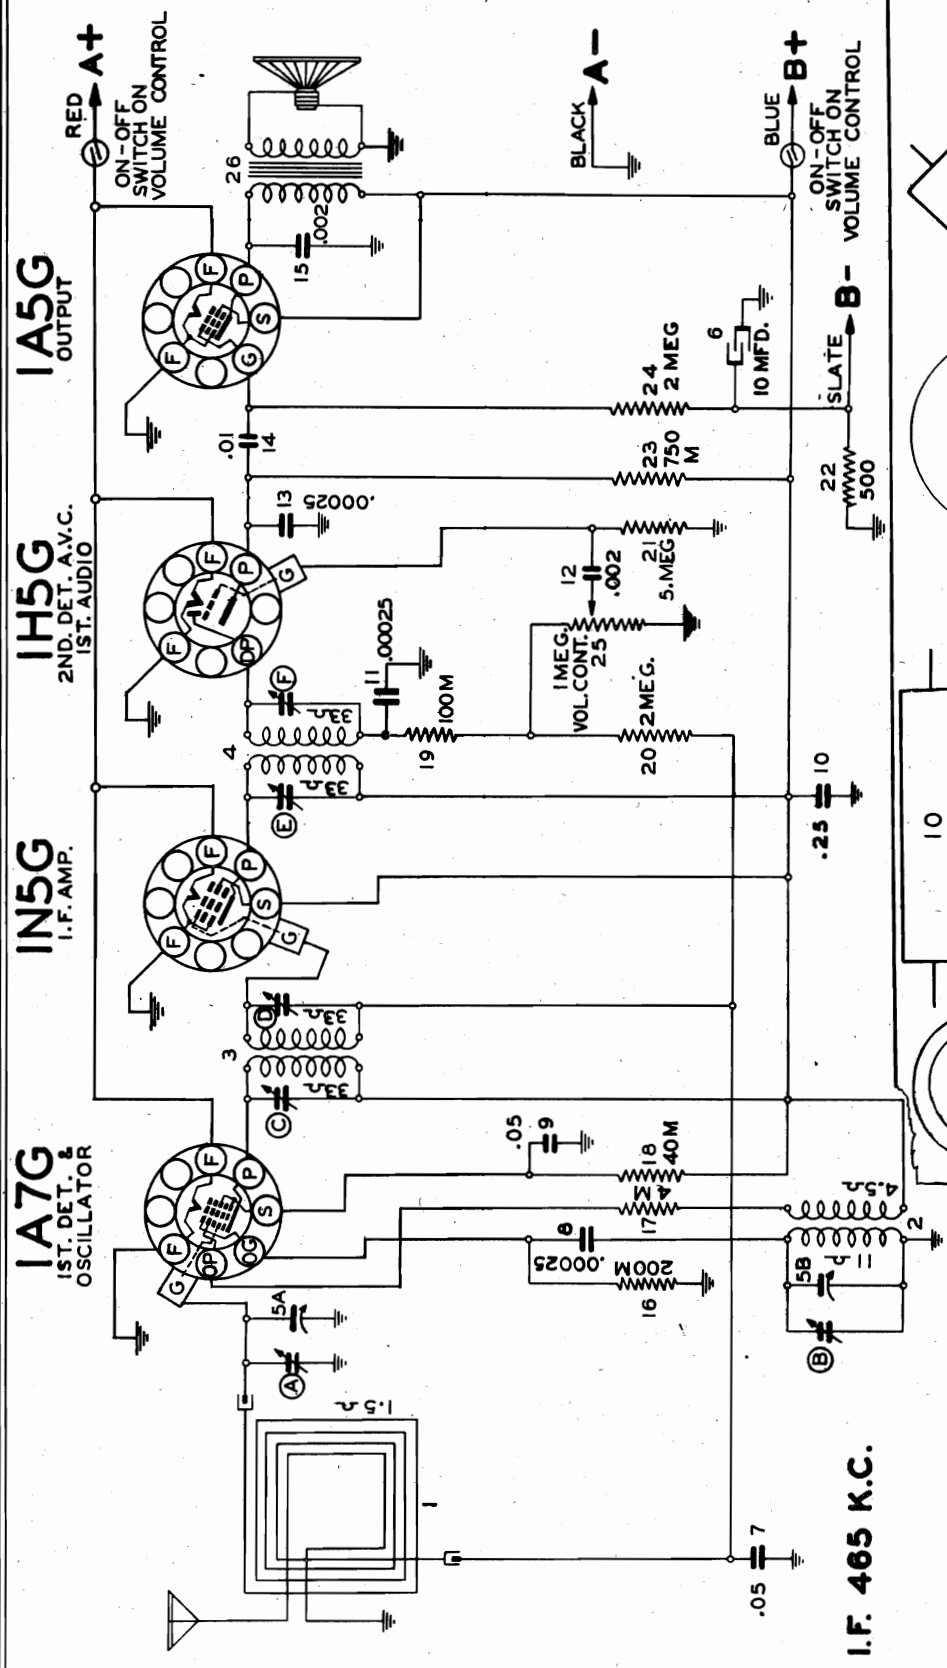


Delco Models R-1401-2

Date: 7-21-39

MODELS R1401, R1402
Voltage, Socket
Alignment, Trimmers

UNITED MOTORS SERVICE INC.

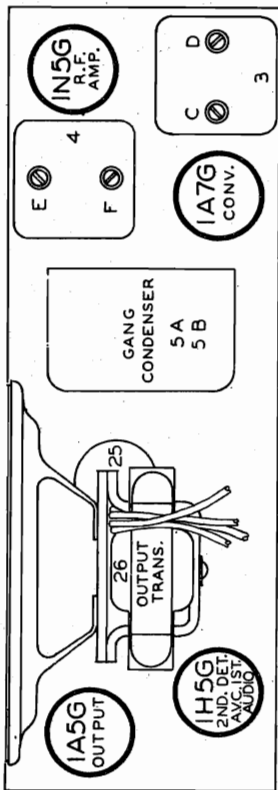

1. Aligning I-F Stages at 465 Kilocycles-

Set the signal generator to exactly 465 K.C.

Adjust the I-F trimmers C-D-E-F (illus. 3 and 4, Fig. 4) for maximum output, using the lowest output from the signal generator which will give a readable indication on the output meter, not to exceed 50 milliwatts.

2. Aligning at 1650 Kilocycles

(a) Leave all connections the same as for I-F alignment.

(b) Set the signal generator to exactly 1650 K.C.

(c) Adjust the oscillator trimmer condenser (illus. "B", Fig. 2), for maximum output.

3. Aligning at 1400 Kilocycles

NOTE: This adjustment MUST be made with set and loop mounted and firmly attached in cabinet.

(a) Remove the 1 megohm resistor and connect loop leads to the loop antenna. (Check these clips to make sure that contacts are clean and tight.)

(b) Remove signal lead of the signal generator from the grid of the 1A7G tube and place in a position where the signal can be picked up by the loop antenna. (The signal lead of the signal generator may be connected to the metal carrier pins of the case handle and the ground lead connected to the chassis mounting screw.)

(c) Set the signal generator to 1400 K.C.

(d) Adjust the loop trimmer (illus. "A", Fig. 2) for maximum output.

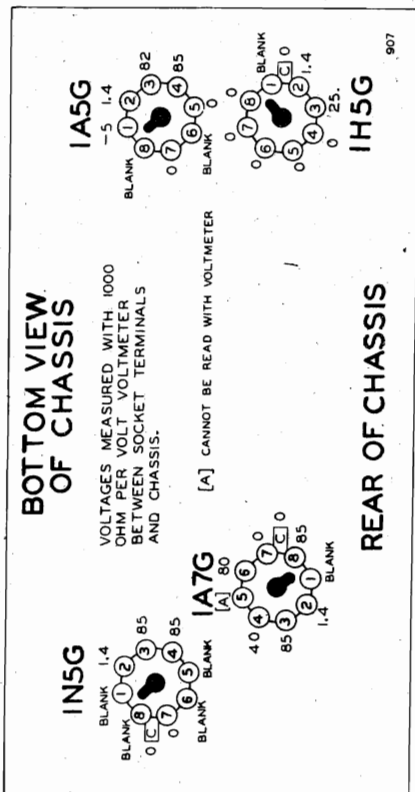


FIG. 1--TUBE SOCKET VOLTAGES


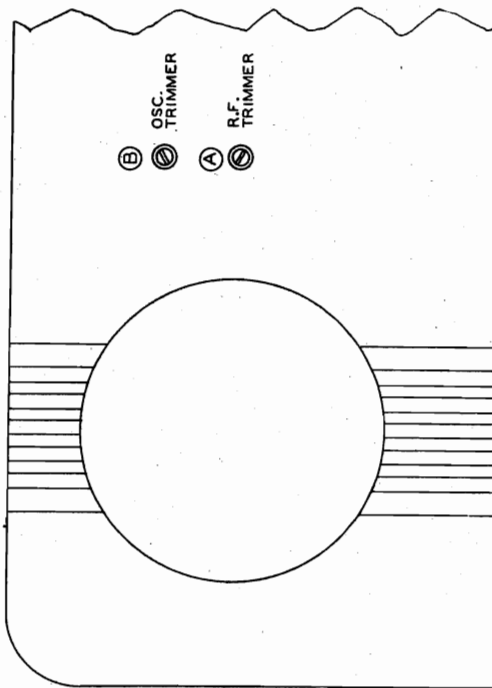


FIG 2--TRIMMER LOCATIONS

WALGREEN CO.

MODEL 22U-73
Schematic, Voltage, Socket
Alignment, Trimmers

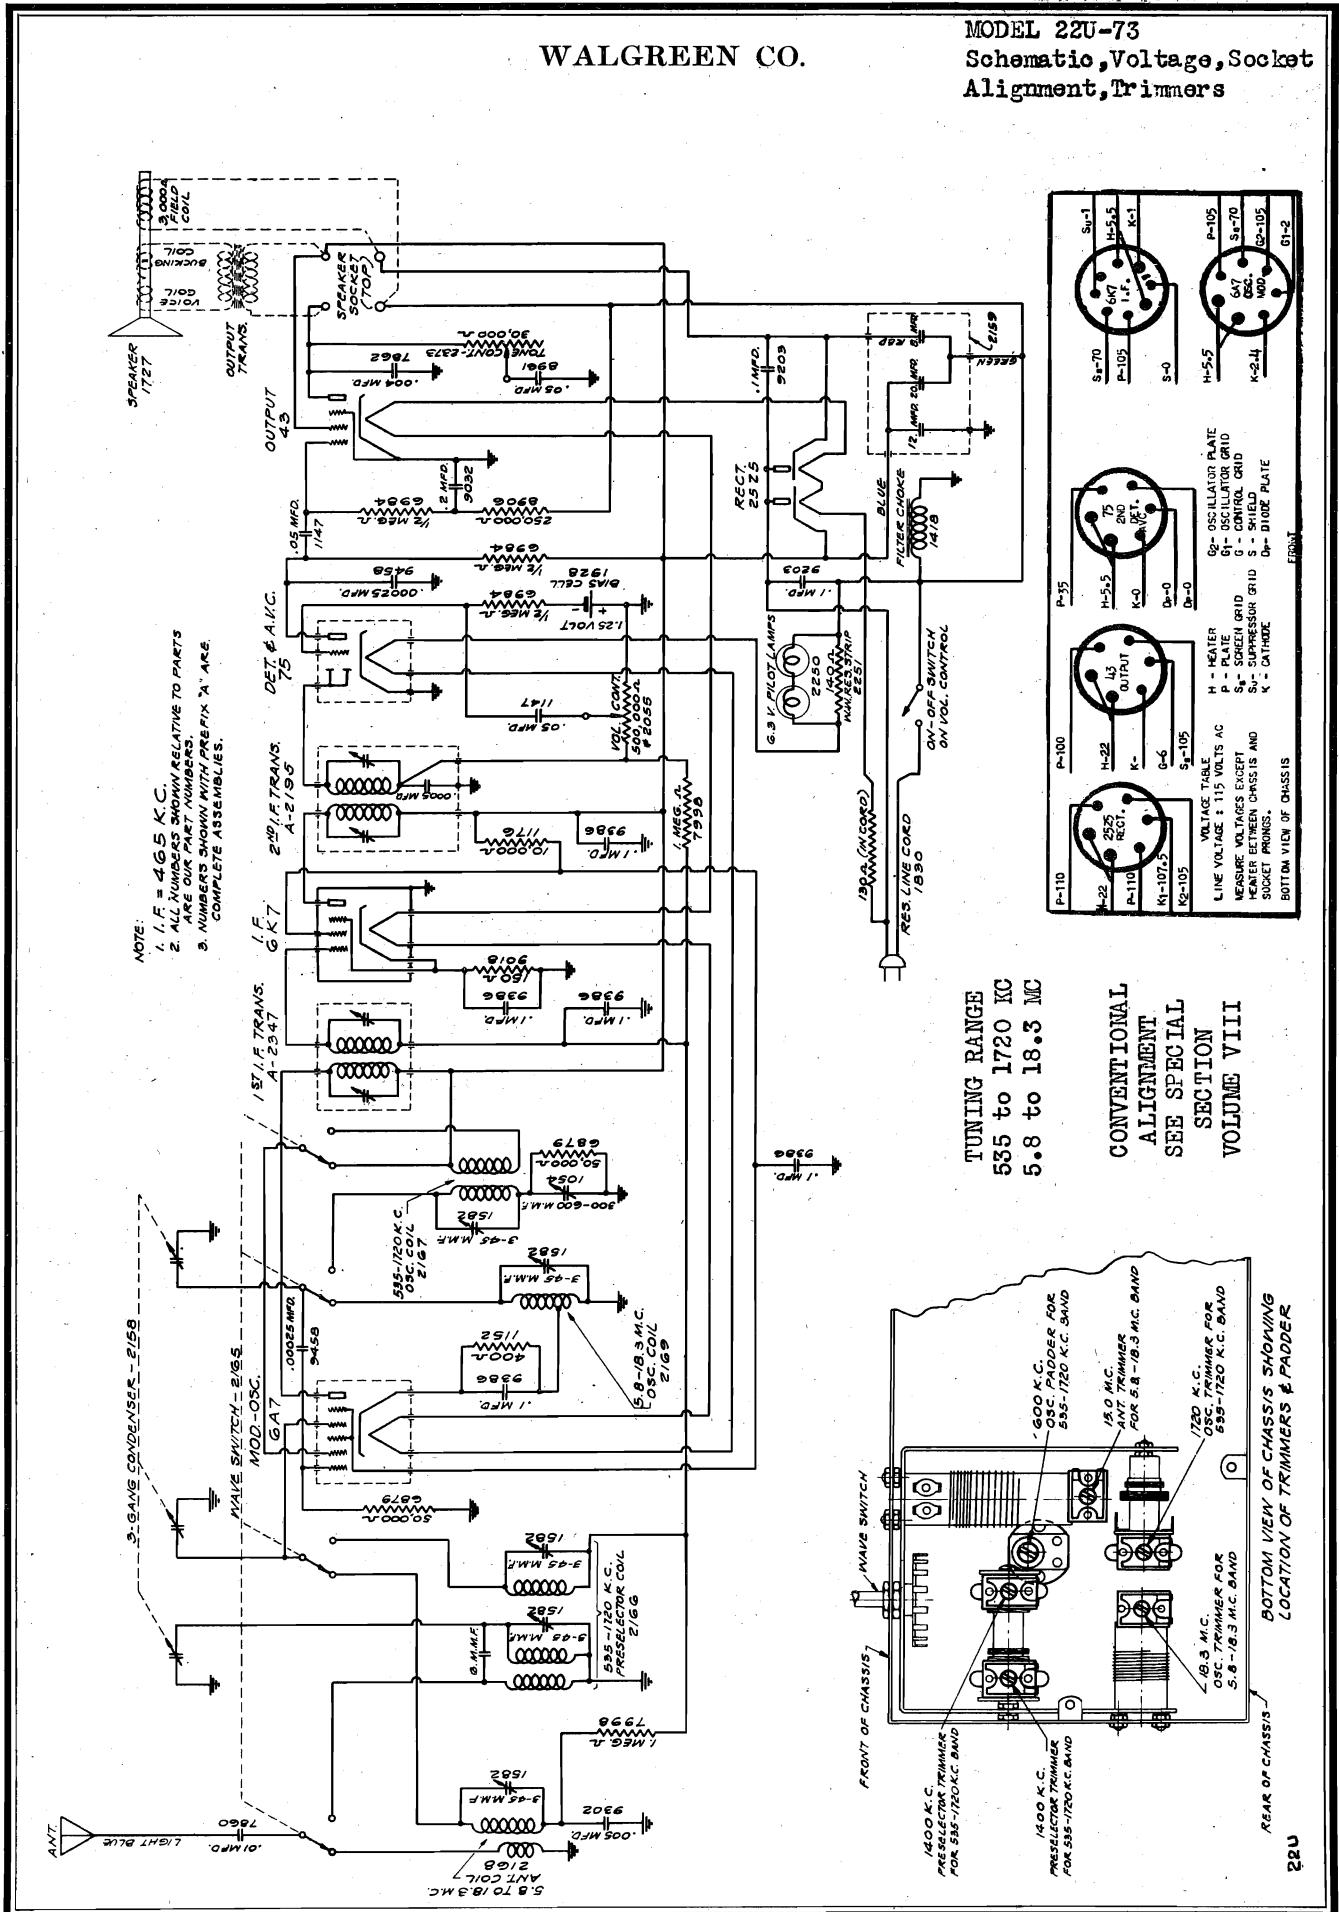


WALGREEN CO.

MODEL B-66-RIS
Schematic, Voltage, Socket
Alignment, Trimmers
MODEL 200
Schematic

ALIGN AT
1500 KC

MODEL 200

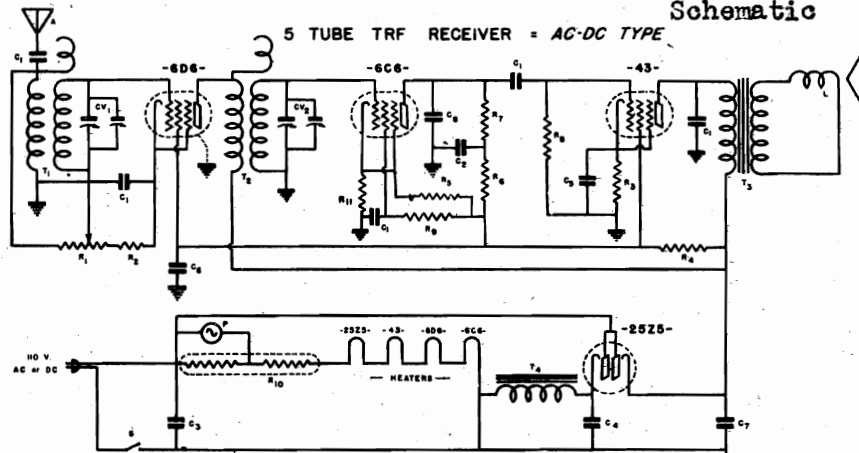


LEGEND	PART NO.	DESCRIPTION
C ₁	211	.01 MFD 400V. TUBULAR CONDENSER
C ₂	216	.018 MFD 400V. TUBULAR CONDENSER
C ₃	210	.1 MFD 400V. TUBULAR CONDENSER
C ₄	316	4 MFD 175 W.V. ELECTROLYTIC COND.
C ₅	316	5 MFD 25 W.V. ELECTROLYTIC COND.
C ₆	316	8 MFD 150 W.V. ELECTROLYTIC COND.
C ₇	316	14 MFD 175 W.V. ELECTROLYTIC COND.
C ₈	401	.00025 MICA CONDENSER
CV ₁₋₂	621	2 GANG VARIABLE CONDENSER

LEGEND	PART NO.	DESCRIPTION
R ₁	2006	10,000 OHM VOLUME CONTROL
R ₂	—	275 OHM (Minimum on Volume Control)
R ₃	104	600 OHM 1/2 WATT CARBON RESISTOR
R ₄	108	5,000 OHM 1/2 WATT CARBON RESISTOR
R ₅	111	25,000 OHM 1/2 WATT CARBON RESISTOR
R ₆	142	51,000 OHM 1/2 WATT CARBON RESISTOR
R ₇	116	250,000 OHM 1/2 WATT CARBON RESISTOR
R ₈	117	500,000 OHM 1/2 WATT CARBON RESISTOR
R ₉	120	3 MEGOHM 1/2 WATT CARBON RESISTOR
R ₁₁	105	1000 OHM 1/2 WATT CARBON RESISTOR


LEGEND	PART NO.	DESCRIPTION
R ₁₀	2903	L-55-B BALLAST TUBE
T ₁	1213	ANTENNA COIL
T ₂	1312	R F COIL
T ₃	809	SPEAKER OUTPUT TRANSFORMER
T ₄	809	SPEAKER FIELD (2500 ohms)
S	—	LINE SWITCH ON VOLUME CONTROL
P	2902	MAZDA #46 PILOT LIGHT
A	2400	INDOOR ANTENNA HANK
L	809	5" DYNAMIC SPEAKER

FILAMENT VOLTAGES MEASURED ACROSS SOCKET.
ALL OTHER VOLTAGES MEASURED TO GROUND
WITH 1000-OHMS-PER-VOLT METER.

MODEL
B-66-RIS

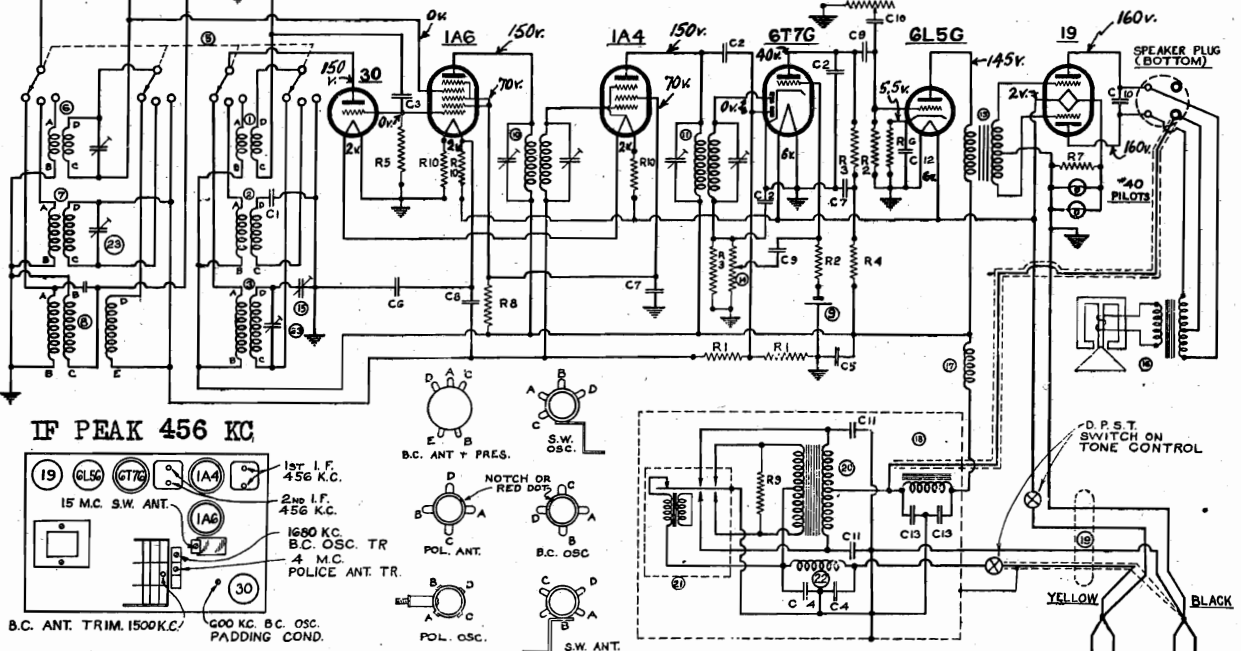

IF PEAK 456 KC

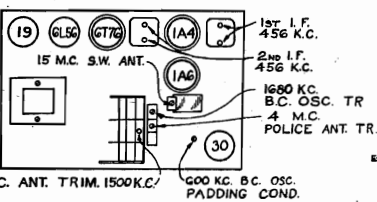

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII


PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION		
C1	1500C	.001	MFD. MICA 5%	R1	6017	1 MEG OHM 1/3 W.	I	10-138	S.W. OSC. COIL
C2	1504	.00025	"	R2	6018	.15 "	2	10-138	POLICE OSC. COIL
C3	1510	.000025	"	R3	6024	.25 "	3	10-134	B.C. OSC. COIL
C4	1655	.25	" 150V "	R4	6028	100,000 "	4	15-106	3 GANG CONDENSER
C5	1616	.25	" 400V "	R5	6025	50,000 "	5	69-103	WAVE SWITCH
C6	1814	.25	" 200V "	R6	6006	1500 "	6	10-132	S.W. ANT. COIL
C7	1401	.1	" 400V "	R7	6007	200 "	7	10-135	POLICE ANT. COIL
C8	1800	.1	" 200V "	R8	6117	25,000 1/2 W.	8	10-137	B.C. ANT. & PRESEL. CL.
C9	1803	.01	" 400V "	R9	6101	100 "	9	4800	BIAS CELL
C10	1811	.01	" 600V "	R10	60-102	33 1/3 "	10	1133	1ST I.F. TRANSFORMER
C11	1604	.01	" 600V "				11	1134	2ND I.F. TRANSFORMER
C12	18-100	10 M.F.D.	25V. ELECTROLYTIC				12	28-102	TONE CONTROL
C13	1848	6 "	150V "				13	8010	PUSH-PULL AUDIO TRANS.

TUNING RANGE
535 to 1680 KC
1.7 to 5.6 MC
5.4 to 20 MC

MODEL 209
MODEL 410
Schematics, Socket

WALGREEN CO.


4 TUBE T.R.F. RECEIVER AC-DC TYPE

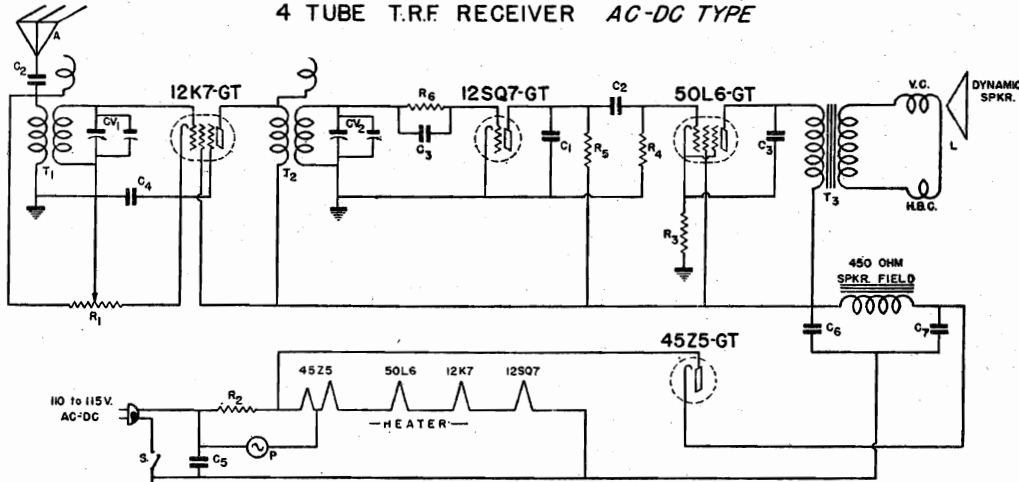


DIA. NO.	PART NO.	DESCRIPTION
R ₁	2032	25,000 OHM VOLUME CONTROL
R ₂		10 OHM 1/4 WATT CARBON RESIST.
R ₃		150 OHM 1/4 WATT CARBON RESIST.
R ₄		1 MEGOHM 1/4 WATT CAR. RESIST.
R ₅		1 MEGOHM 1/4 WATT CARBON RESIST.
R ₆		3 MEGOHM 1/4 WATT CAR. RESIST.
P		MAZDA #47 PILOT LIGHT
S		LINE SWITCH ON VOLUME CONT.
A		ANTENNA WIRE
L	8336	DYNAMIC SPEAKER

DIA. NO.	PART NO.	DESCRIPTION
C ₁		.00025 MFD. 600V. TUB. COND.
C ₂		.01 MFD. 400 V. TUBULAR COND.
C ₃		.02 MFD. 400 V. TUBULAR COND.
C ₄		.05 MFD. 200 V. TUBULAR COND.
C ₅		.05 MFD. 400 V. TUBULAR COND.
C ₆	IN 343	10 MFD. 150 V. TUBULAR COND.
C ₇	IN 343	30 MFD. 150 V. TUBULAR COND.
CV ₁₋₂	628C	2 GANG VARIABLE COND.
T ₁	A-10	ANTENNA COIL
T ₂	R-10	R.F. COIL
T ₃	IN 8336	SPEAKER TRANSFORMER

MODEL 410

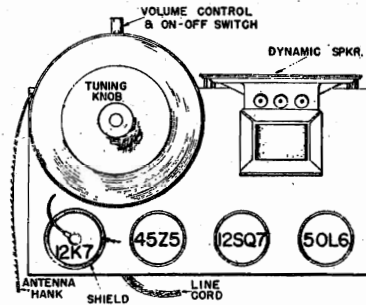


2 TUBE T.R.F. RECEIVER AC-DC TYPE

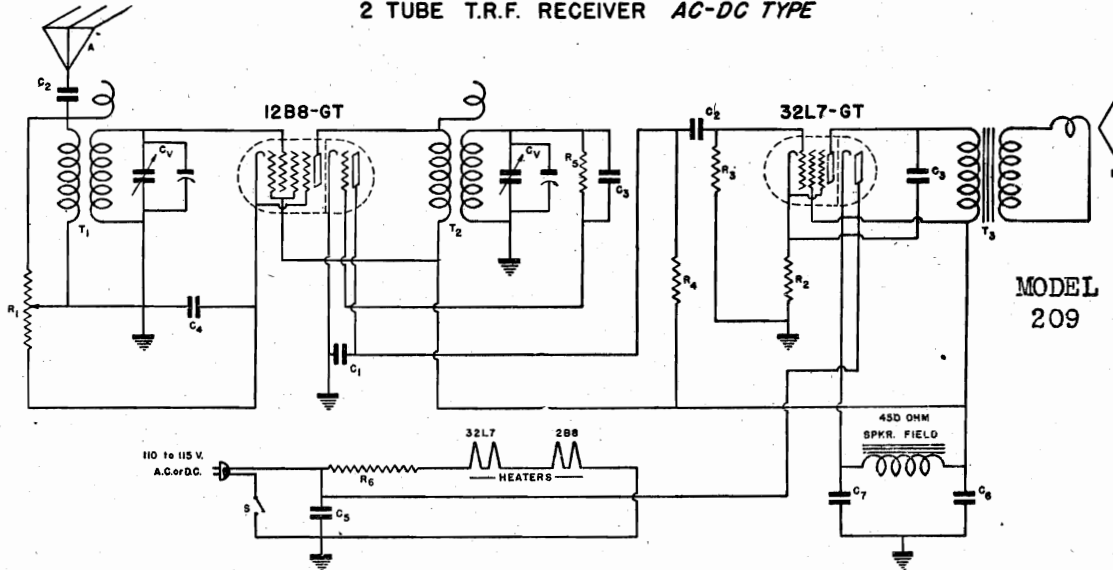


LEGEND	OUR PART NO.	DESCRIPTION
C ₁		.00025 MFD. 600V. TUBULAR CONDENSER
C ₂		.01 MFD. 400 V. TUBULAR CONDENSER
C ₃		.02 MFD. 400 V. TUBULAR CONDENSER
C ₄		.05 MFD. 200 V. TUBULAR CONDENSER
C ₅		.05 MFD. 400 V. TUBULAR CONDENSER
C ₆	IN 344	10 MFD. 150 V. ELECTROLYTIC CONDENSER
C ₇	IN 344	30 MFD. 150 V. ELECTROLYTIC CONDENSER
CV	628-D	2 GANG VARIABLE CONDENSER
A		AERIAL WIRE
L	833	DYNAMIC SPEAKER

LEGEND	OUR PART NO.	DESCRIPTION
R ₁	2031	10,000 OHM VOLUME CONTROL
R ₂		150 OHM 1/4 WATT CARBON RESISTOR
R ₃		500,000 OHM 1/4 WATT CARBON RESISTOR
R ₄		1 MEGOHM 1/4 WATT CARBON RESISTOR
R ₅		3 MEGOHM 1/4 WATT CARBON RESISTOR
R ₆	1816	240 OHM RESISTANCE LINE CORD
T ₁	A-10	ANTENNA COIL
T ₂	R-10	R.F. COIL
T ₃	ON 833	SPEAKER TRANSFORMER
S		LINE SWITCH ON VOLUME CONTROL

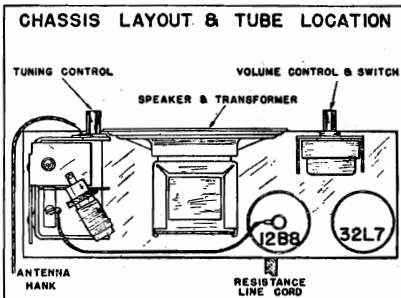


WALGREEN CO.

MODEL 250
Schematic
Socket

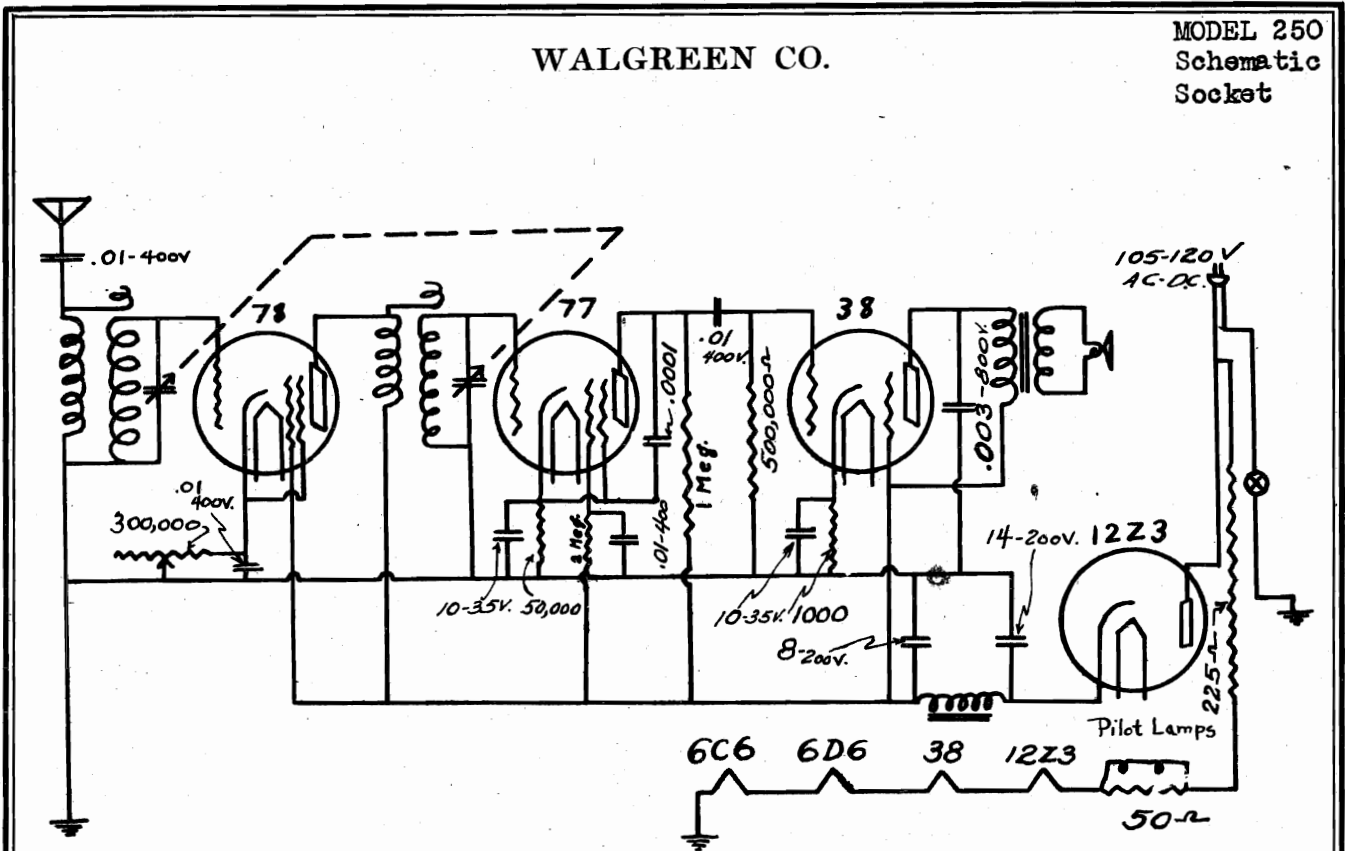


To balance set, remove chassis from cabinet then turn the condenser all the way up and adjust detector stage trimmer condenser to about 1720 kc and align RF stage for maximum gain.

Cordehm No. W55

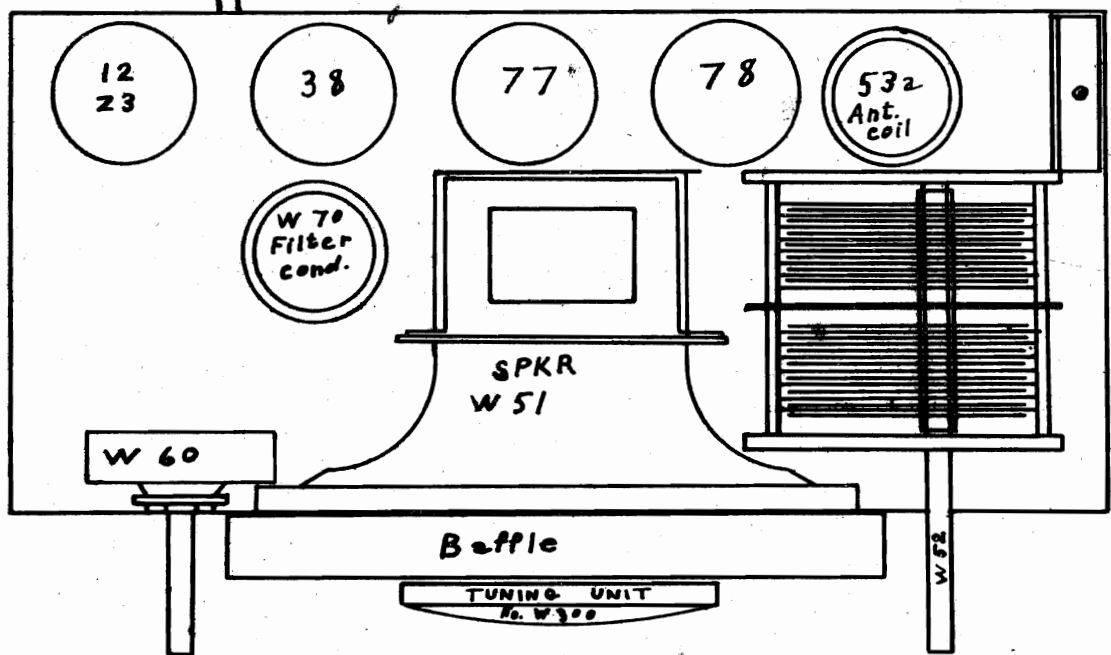

MODEL 252P
Schematic

WALGREEN CO.

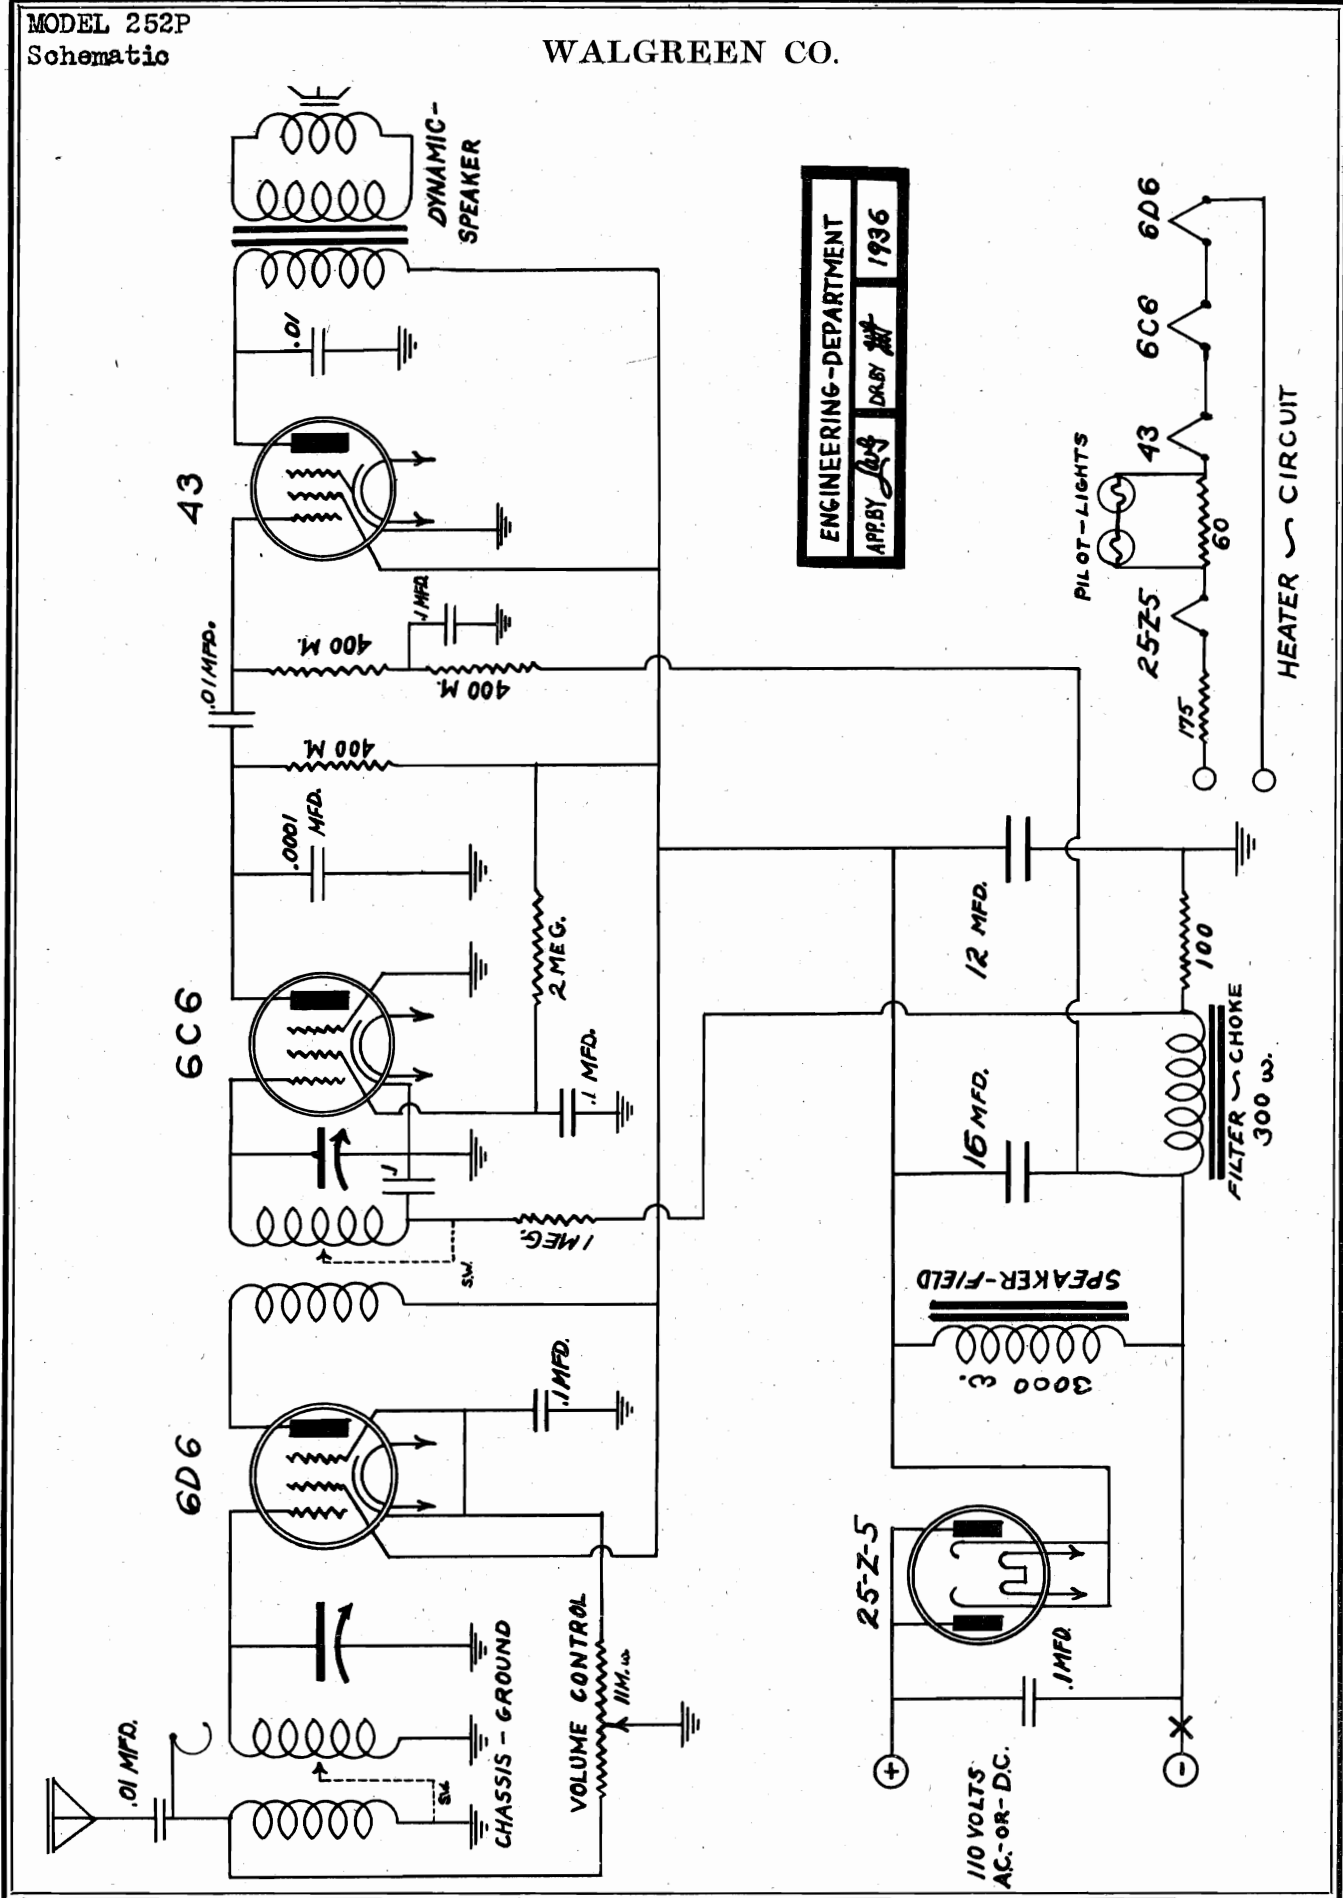


MODEL 400(Late)
Schematic, Voltage
Socket, Trimmers
MODEL 502
Schematic, Socket
Alignment, Trimmers

WALGREEN CO.



CIRCUIT DIAGRAM MODEL 502

5 TUBE A.C. SUPERHETERODYNE
BROADCAST & POLICE BANDS IF

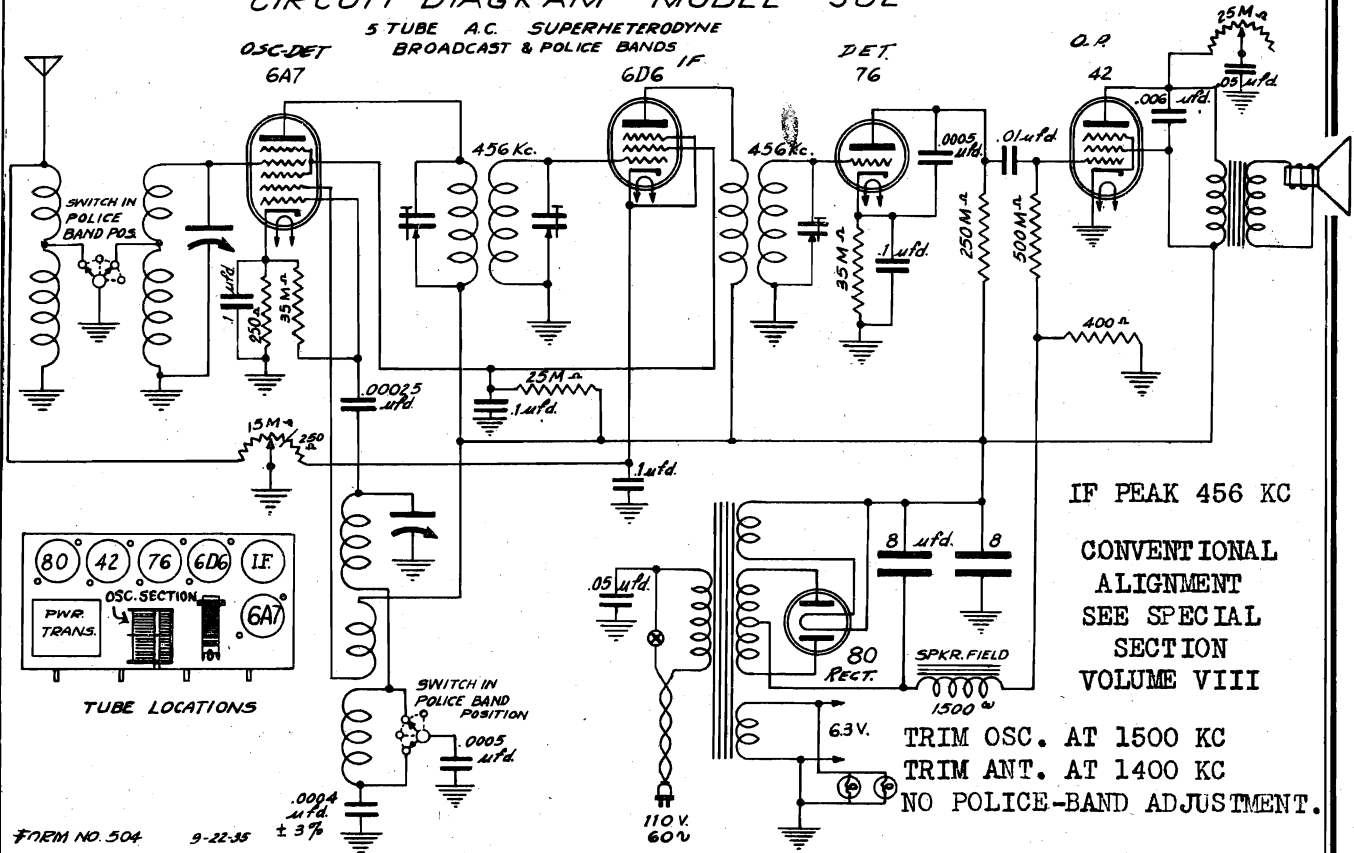

FORM NO. 504 9-22-35 ± 3%

MODEL 400 (LATE)

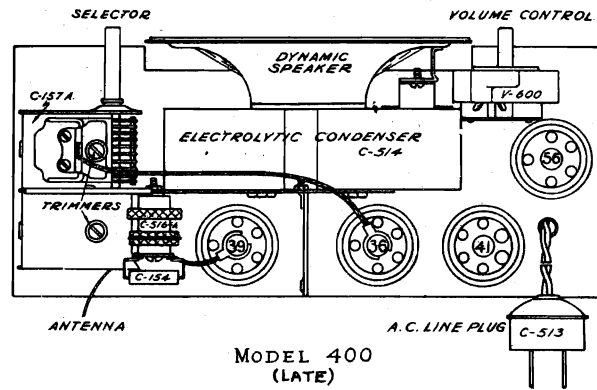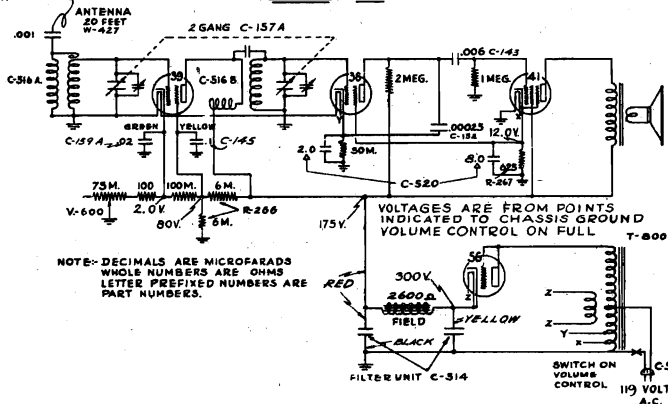


Model 400 Radio Receiver.
USE ONLY ON 105-115 VOLTS
ALTERNATING CURRENT—45 WATTS

WALGREEN CO.

MODELS 404B, 404I
MODELS 409, 419
Schematics, Socket
Trimmers


4 TUBE T.R.F. RECEIVER AC-DC TYPE

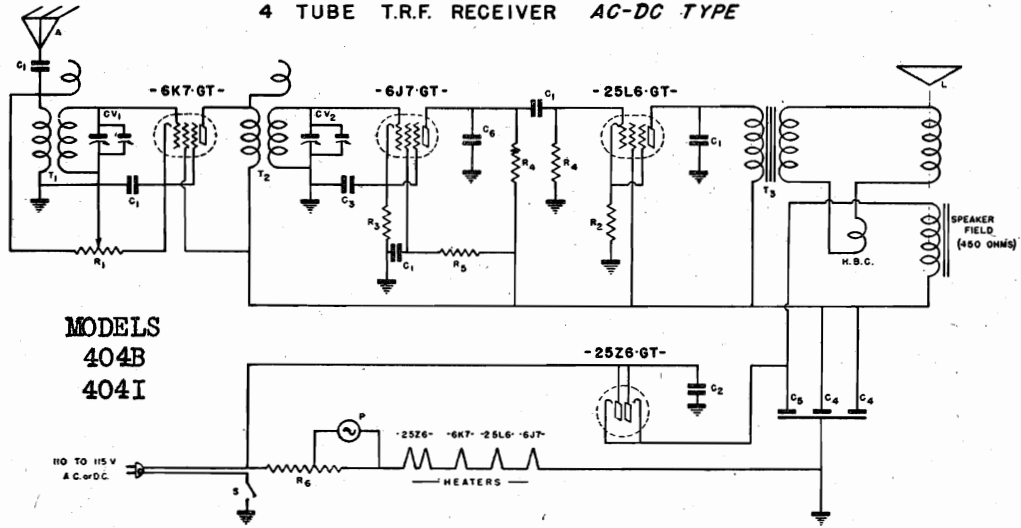


MODELS
404B
404I

LEGEND	OUR PART NO.	DESCRIPTION
C ₁	—	.01 MFD. 400 V. TUBULAR CONDENSER
C ₂	—	.02 MFD. 400 V. TUBULAR CONDENSER
C ₃	—	.25 MFD. 25 V. TUBULAR CONDENSER
C ₄	1N 336	10 MFD 150 WV ELECTROLYTIC COND.
C ₅	1N 336	20 MFD. 150 W.V. ELECTROLYTIC COND.
C ₆	—	.00025 MICA CONDENSER
CV ₁₋₂	22B-A	2 GANG VARIABLE CONDENSER
T ₁	A-10	ANTENNA COIL
T ₂	R-10	R F COIL
T ₃	1N 823	SPEAKER TRANSFORMER

LEGEND	OUR PART NO.	DESCRIPTION
R ₁	202B	10,000 OHM VOLUME CONTROL
R ₂	—	150 OHM 1/2 WATT CARBON RESISTOR
R ₃	—	25,000 OHM 1/2 WATT CARBON RESISTOR
R ₄	—	500,000 OHM 1/2 WATT CARBON RESISTOR
R ₅	—	2 MEGOHM 1/2 WATT CARBON RESISTOR
R ₆	1B1-A	210 OHM RESISTANCE LINE CORD
S	—	LINE SWITCH ON VOLUME CONTROL
P	—	MAZDA #4 PILOT LIGHT
A	—	ANTENNA HANK
L	823	DYNAMIC SPEAKER


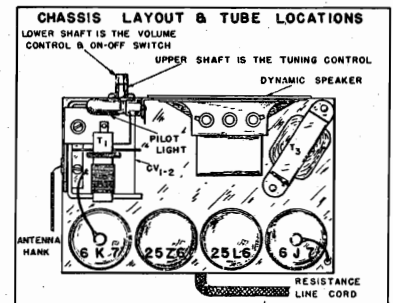


4 TUBE SUPERHETERODYNE RECEIVER - BATTERY OPERATED

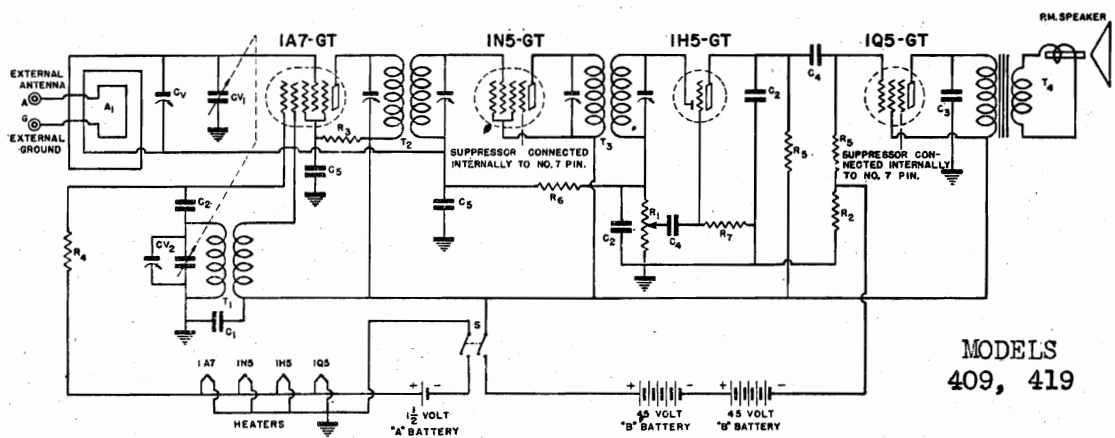


MODELS
409, 419

DIAG. PART NO.	DESCRIPTION
CV ₁	51B 2 TO 40 MMFD. TRIMMING CONDENSER
CV ₂	64B 2 GANG VARIABLE CONDENSER
C ₁	— 10 MFD. 200 V. ELECTROLYTIC CONDENSER
C ₂	— .00025 MFD. 800 V. TUBULAR CONDENSER
C ₃	— .002 MFD. 800 V. TUBULAR CONDENSER
C ₄	— .01 MFD. 400 V. TUBULAR CONDENSER
C ₅	— .05 MFD. 200 V. TUBULAR CONDENSER
A ₁	3015-A ANTENNA LOOP
T ₁	O-5 OSCILLATOR COIL
T ₂	I-3 INPUT I.F. TRANSFORMER
T ₃	O-3 OUTPUT I.F. TRANSFORMER
T ₄	635-A PERMANENT MAGNET SPEAKER
S	— SWITCH ON VOLUME CONTROL
R ₁	20090 500,000 OHM VOLUME CONTROL
R ₂	— 550 OHM 1/2 WATT CARBON RESISTOR-10%
R ₃	— 50,000 OHM 1/2 WATT CARBON RESISTOR
R ₄	— 250,000 OHM 1/2 WATT CARBON RESISTOR
R ₅	— 500,000 OHM 1/2 WATT CARBON RESISTOR
R ₆	— 2 MEGOHM 1/2 WATT CARBON RESISTOR
R ₇	— 3 MEGOHM 1/2 WATT CARBON RESISTOR

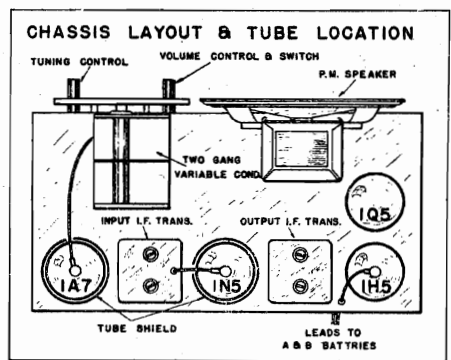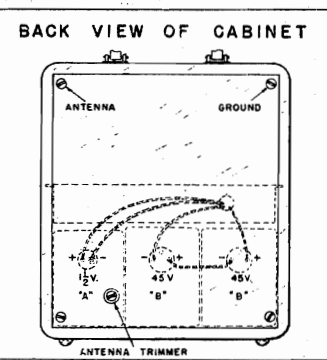


MODEL 510 AC (Early)
Schematic, Socket
Alignment, Trimmers

WALGREEN CO.

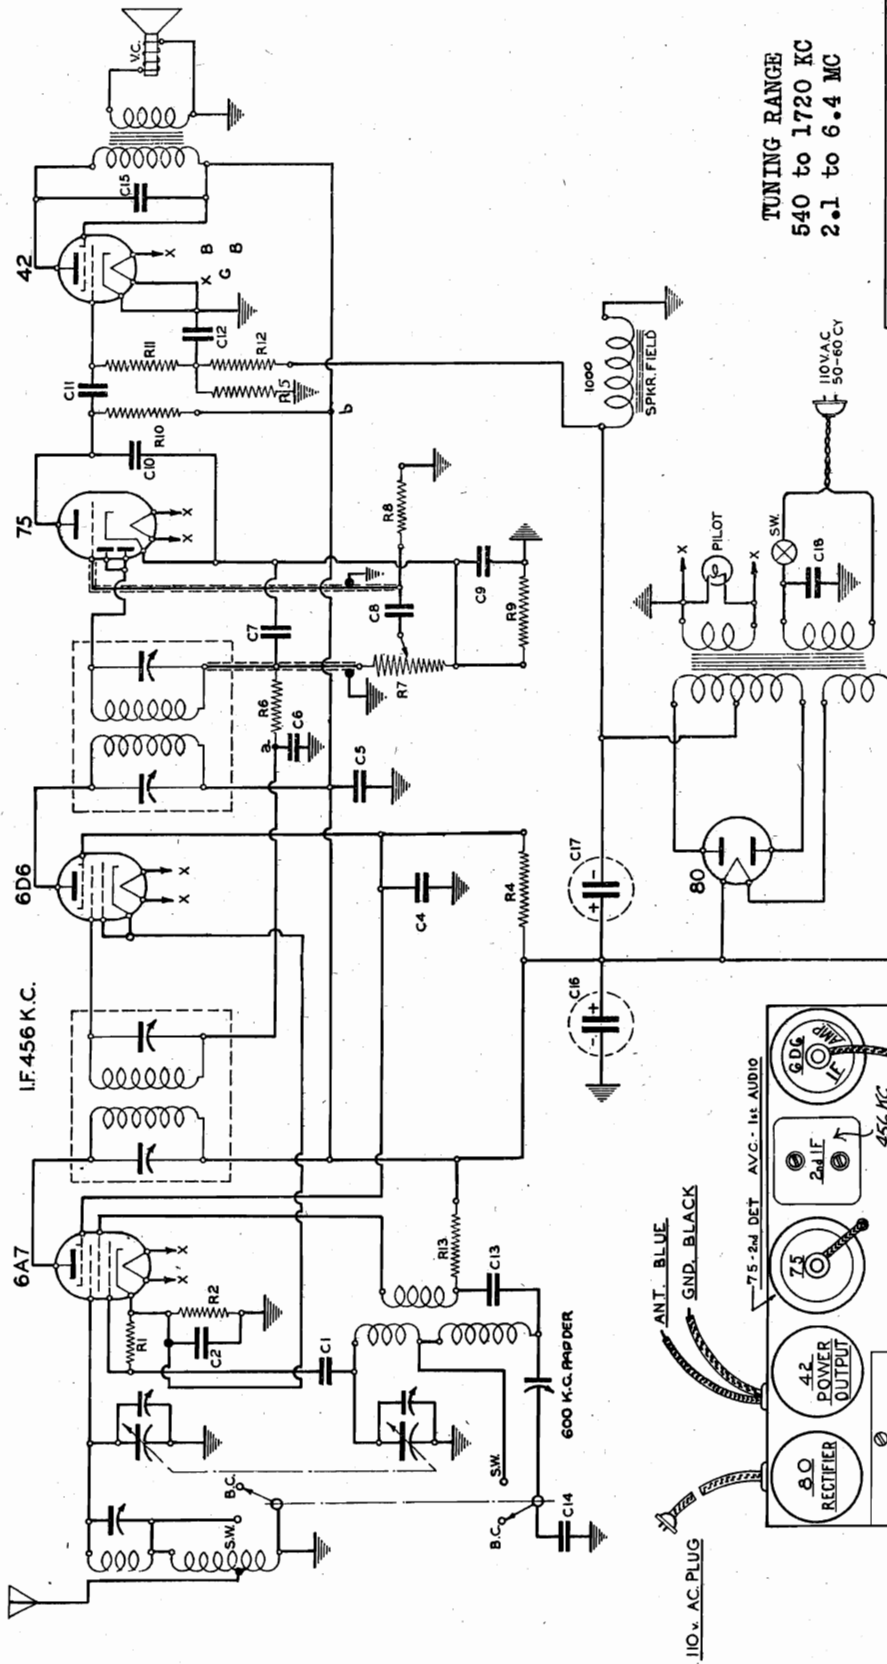


TUNING RANGE
540 to 1720 KC
2.1 to 6.4 MC

LEGEND		50M OHMS/25M	
C1	.0001	R1	330
C2	.25	R2	5M
C4	.1	R3	25M
C5	.05	R4	1W
C6	.0025	R5	250M
C7	.00025	R6	IMEC.
C8	.01	R7	500M
C9	.1	R8	IMEC.
C10	.00025	R9	4500
C11	.01	R10	250M
C12	.01	R11	500M
C13	.001	R12	1MEG.
C14	.002	R13	10M
C15	.004		
C16	.8		
C17	.8		
C18	.1		

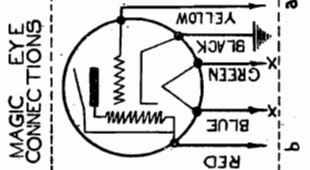


CONVENTIONAL
ALIGNMENT
SEE SPECIAL
SECTION
VOLUME VIII

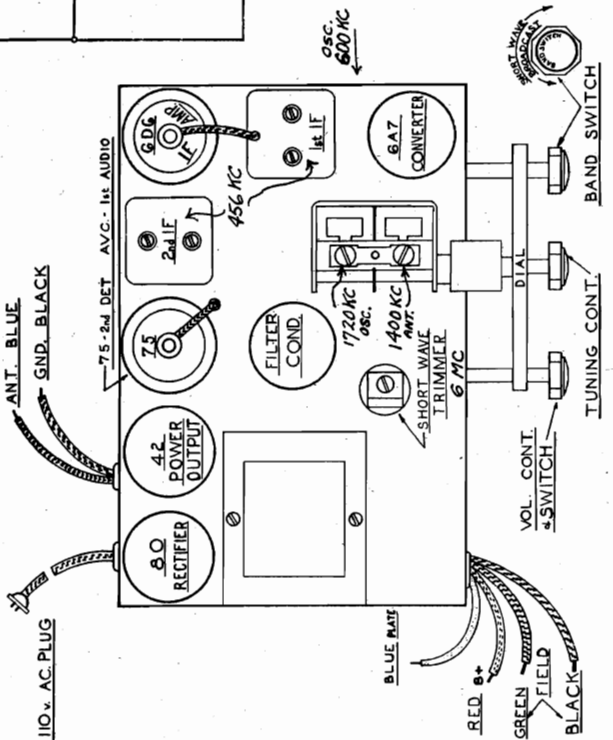


WALGREEN CO.

MODEL 510 AC-DC (Late)
 MODEL 529
 Schematics, Socket
 Trimmers, Alignment

5 TUBE SUPERHETERODYNE RECEIVER AC-DC TYPE

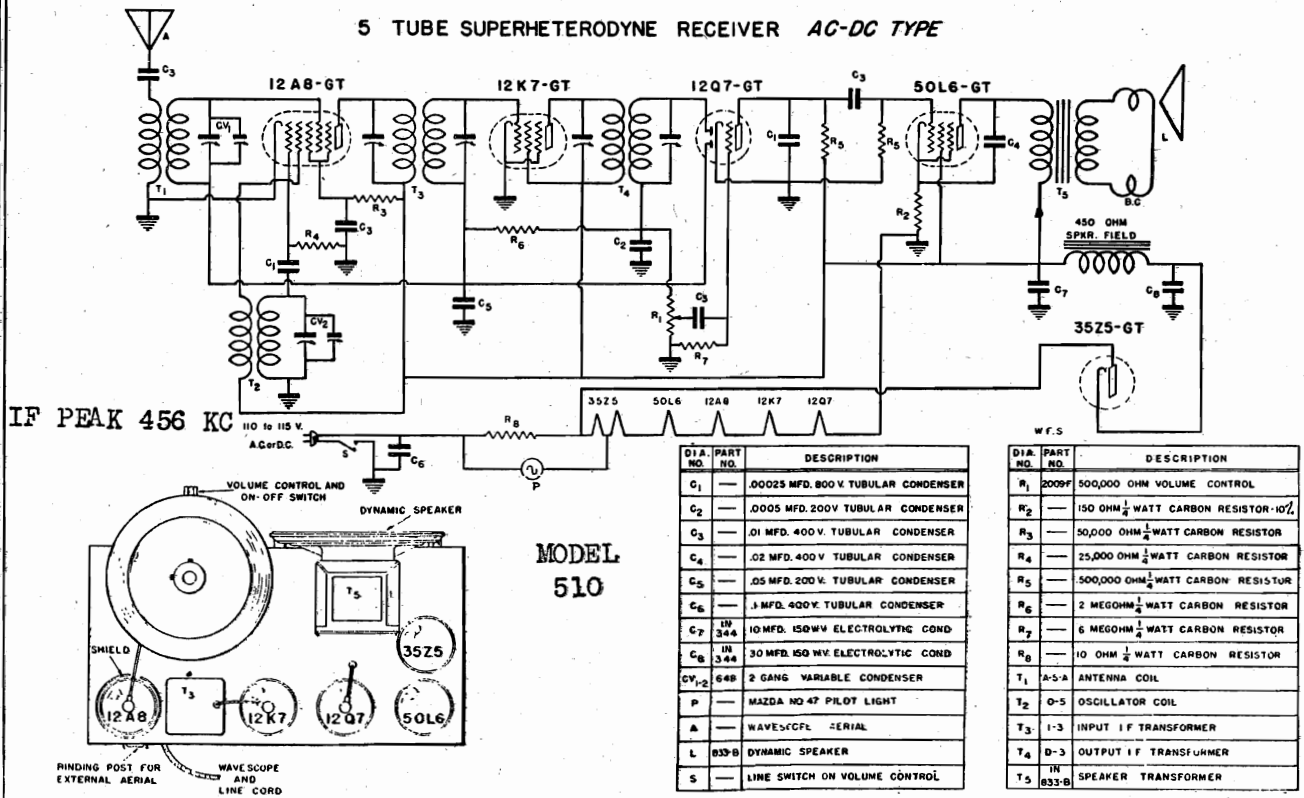


110 VOLT AC-DC OR BATTERY OPERATED

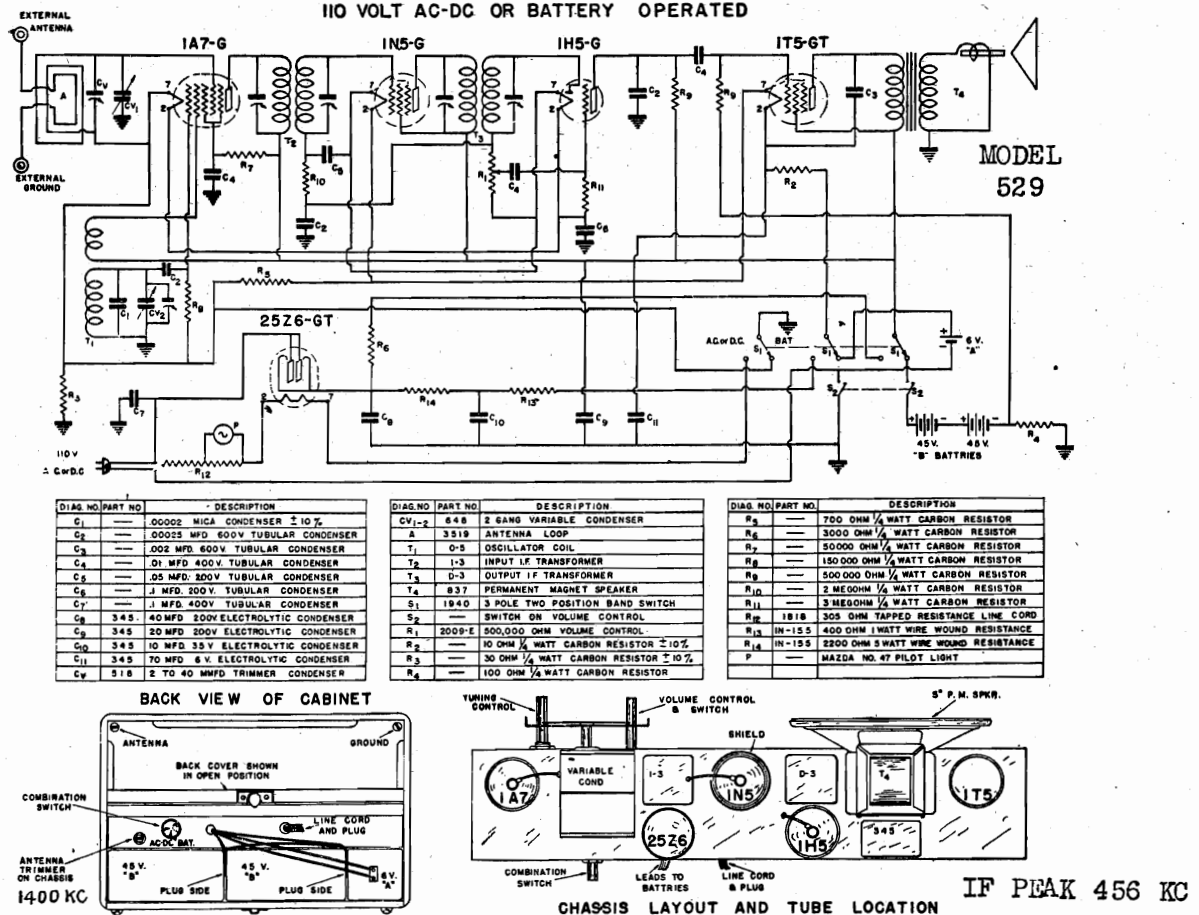


MODEL 542
Schematic, Socket
Trimmers, Tuner

WALGREEN CO.

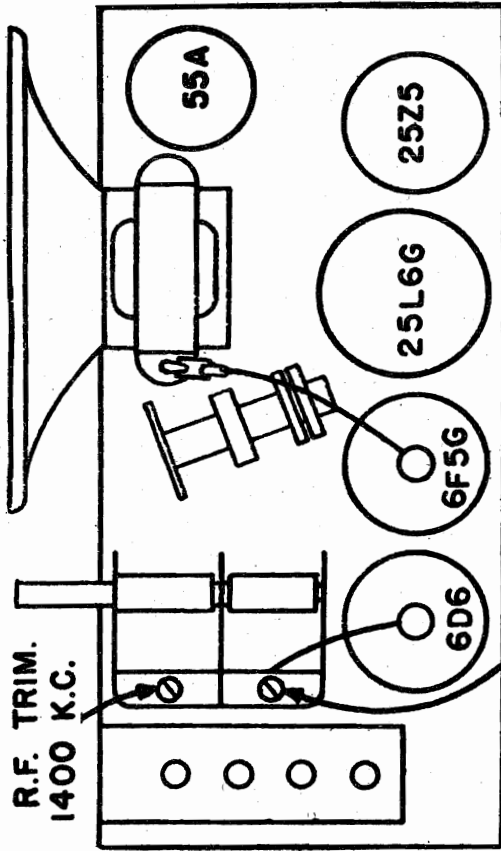

This receiver is a 5 tube AC/DC current operated T.R.F.

CONVENTIONAL
ALIGNMENT SEE
SPEC. SECTION
VOL. VIII

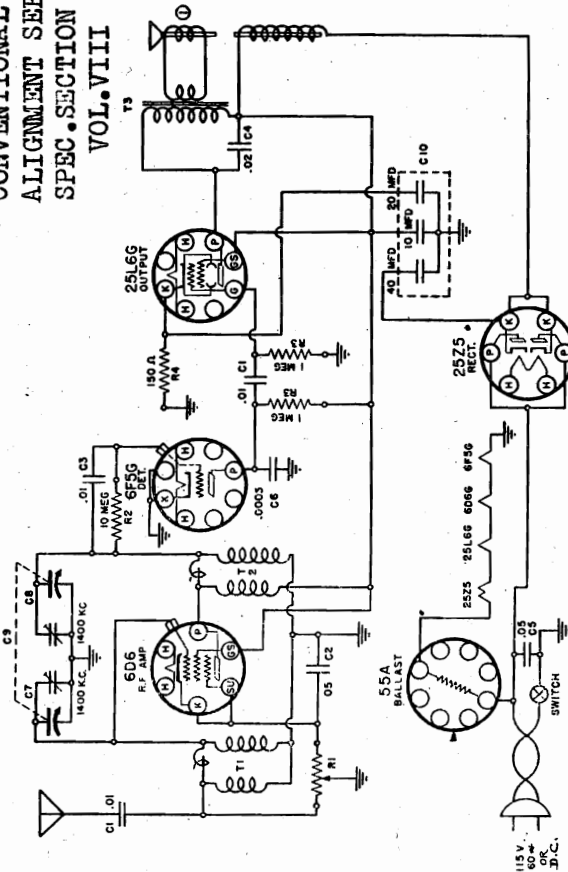

INSTRUCTIONS FOR
SETTING UP PUSH BUTTONS

After receiver is installed and antenna and ground properly connected, plug line cord into a convenient outlet. Then turn the volume control to about the center of rotation. This will turn the receiver on and put it in an operating condition. Time must be allowed for the tubes to heat up before stations can be tuned in. This time is approximately one-half minute.

The automatic tuning feature of your radio makes it possible to set up 6 favorite American broadcast stations and tune them in quickly with the automatic tuner. Choose stations for push-button operation heard with good volume at all times.

Cut the call letters of your 6 selected stations from the list supplied with your receiver and slip them into the Tab Holder from the top, with the clear celluloid in front of the call letters to protect them. Arrange the call letters in the Tab Holder from right to left. Have the call letters of the lowest frequency station at the extreme right and work progressively to the left so that the highest frequency call letters will be at the extreme left.

Follow the procedure outlined below, in order to adjust the push-buttons properly:

1. By means of the Station Selector Knob tune in WITH THE RIGHT HAND AS ACCURATELY AS POSSIBLE the station having the lowest frequency—that is, your selected station which is tuned in nearest the right-hand side of the dial.

2. After the station has been tuned in accurately with the right hand, continue to hold it in its exact position firmly, and with the left hand loosen the Push-Button to be set up for that station by unscrewing the Push-Button about one turn to the left (counter-clockwise).

3. Continuing to hold the Station Selector Knob in its exact position, PUSH THE PUSH-BUTTON IN ALL THE WAY with the left hand.

4. After the Push-Button has been depressed all the way, tighten it gently toward the right (clockwise). Release Push-Button slowly and when in normal position grip button and tighten firmly.

The Push-Button tuning system is now correctly set up for your first selected station of lowest frequency and the Call Letter Tab for this station should be at the extreme right of the Call Letter Holders.

Follow through with this same procedure, setting up the other 5 stations in the order of their frequency—that is, the second station set up will be second lowest in frequency and the third station set up will be third lowest in frequency.

Carefully check each Push-Button for the accuracy of the setting. If, when tuning in any station with its Automatic Push-Button it does not have equal volume or clarity to that obtained with manual tuning, this may indicate the automatic adjustment for that station was not made accurately. Should there be any inaccuracy in any one of the Push-Button adjustments, correction can be made by repeating the above procedure for that button only. Do not reset those Push-Buttons that are accurately adjusted.


No further adjustments are necessary to operate your radio automatically or manually. To receive any one of your four selected stations for automatic operation, merely push in ALL THE WAY the Button set up for that station.

This receiver is made to cover from 1750K. C. to 535K. C.

CODE	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
1604	01 MFD.	COND. TUBULAR	542	24-127	VOLUME CONTROL & SWITCH
1622	.05 MFD.	200 V.	R1	60-193	10 MEGOHM 1/2 W. RESISTOR
16-119	.01 MFD.	400 V.	R2	60-193	10 MEGOHM 1/2 W. RESISTOR
16-120	.02 MFD.	400 V.	R3	60-184	150 OHMS
16-121	.0005 MFD.	400 V.	R4	60-184	150 OHMS
15-112	.0005 MFD.	MICA CONDENSER	T1	10-249	ANTENNA COIL
19-135	ANTENNA	VARIABLE COND.	T2	10-250	R.F. COIL
C10	19-135	OCCILLATOR VARIABLE COND.	T3	10-250	OUTPUT TRANSFORMER
18-234	FILTER	CONDENSER 20 MF. 25 WV.	I	79-251	SPEAKER

WALGREEN CO.

MODEL 750
Schematic, Voltage
Socket

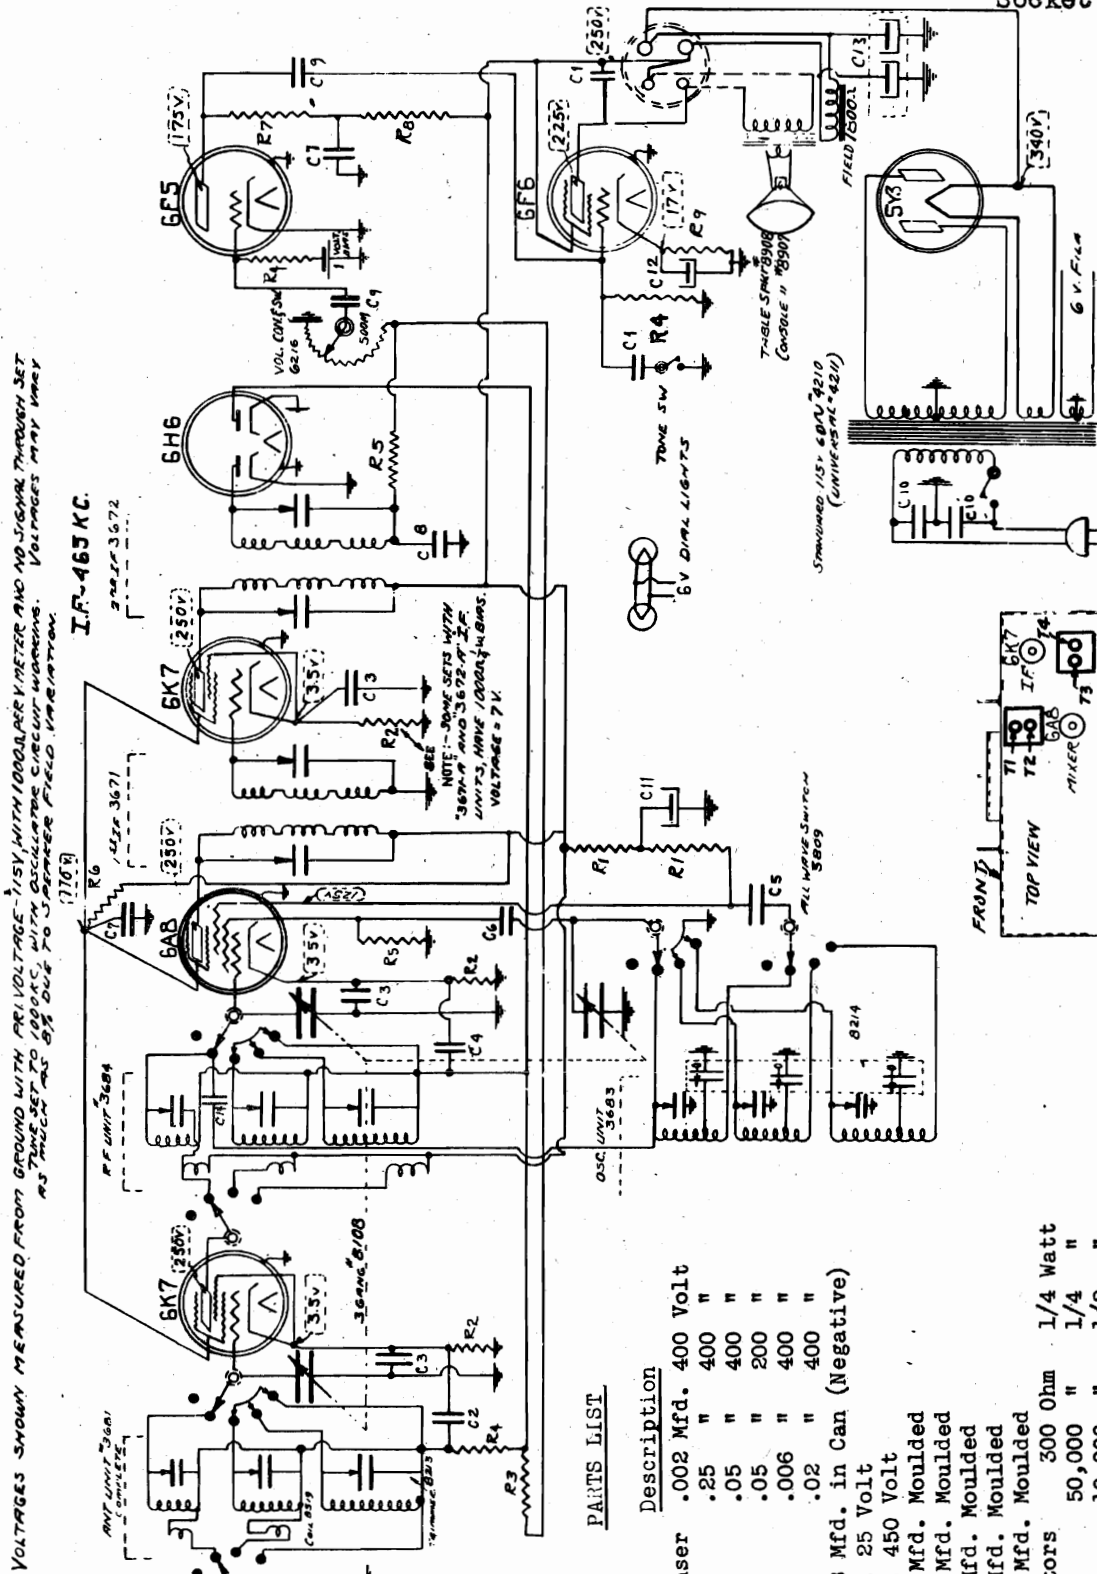

VOLTAGES SHOWN MEASURED FROM GROUND WITH A.C. VOLTAGE - 115V. WITH 1000 PER V METER AND NO SIGNAL THROUGH SET. TUNE SET TO 1000 KC. WITH OSCILLATOR CIRCUIT WARMING. VOLTAGES MAY VARY AS MUCH AS 5% DUE TO VARIANCE FIELD IRRADIATION.

I.F. - 465 KC.

300P 3672

350V

350V

350V

350V

350V

350V


350V

350V

NOTE - BOMB SETS WITH 3672 AND 3672 I.F. UNITS, HAVE 1000 KC. I.F. VOLTAGE = 7V.

PARTS LIST

Part No.	Description	Quantity	Power
3516 (C2)	Condenser .002 Mfd. 400 Volt	1	1/4 Watt
2758 (C7)	" .25 " 400 "	1	1/4 "
2757 (C10)	" .05 " 400 "	1	1/2 "
2183 (C9)	" .05 " 200 "	1	1/2 "
3515 (C1)	" .006 " 400 "	1	1/4 "
3517 (C9)	" .02 " 400 "	1	1/4 "
3004 (C13)	Dual 8 Mfd. in Can (Negative)	1	1 "
3003 (C12)	5 Mfd. 25 Volt	1	1/2 "
8814 (C11)	4 Mfd. 450 Volt	1	1/2 "
8304 (C8)	.0003 Mfd. Moulded	1	1/4 "
8305X (C4)	.0025 Mfd. Moulded	1	1/4 "
2287X (C5)	.002 Mfd. Moulded	1	1/4 "
287 (C14)	.002 Mfd. Moulded	1	1/2 "
2366 (C6)	.0001 Mfd. Moulded	1	1 "
1836 (R5)	Resistors 300 Ohm	1	1/2 "
1843 (R2)	" 50,000 "	1	1/4 "
3349 (R1)	" 10,000 "	1	1/2 "
1890 (R9)	" 500 "	1	1/4 "
3328 (R4)	" 500,000 "	1	1/4 "
3335 (R3)	" 1 meg "	1	1/4 "
3344 (R8)	" 25,000 "	1	1/2 "
2650 (R6)	" 25,000 "	1	1 "
1824 (R7)	" 250,000 "	1	1/2 "

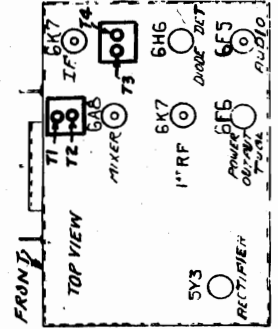

10-1-35

MODEL 750
Alignment
Trimmers, Chassis

WALGREEN CO

IV THE BROADCAST BAND

1. Turn wave band switch all the way to left and dial hand set to 1400 KC (the top scale).
2. Peak oscillator trimmer T11 to 1400 KC and RF circuit trimmers T12 and T13 to same frequency.
3. Set dial hand to 550 KC and adjust oscillator padding condenser P-3 to 550 KC.
4. Recheck dial at 1400 KC as in number (1) and (2).
5. Points in the middle of the dial may be checked and if necessary the plates of the front section of variable condenser may be bent for alignment.

V NOTES.

1. Seal all trimmers after their final adjustment.
2. Be sure that the settings are being made to the true fundamental signal from the oscillator and not on a harmonic or image frequency.
3. Refer to the schematic for the voltages at the tube sockets.

THE I. F. STAGES

The I.F.'s are aligned by the usual system of feeding the intermediates frequency of 465KC into the grid of the 6A7 tube.

The two trimmers in each of the I.F. cans should be very carefully peaked to resonance as they are very critical and will greatly affect the performance of the set. These are trimmers number T1, T2, T3, T4. (See pictorial diagram).

The sensitivity of the I.F. stages will be 30 microvolts or better.

Always use as low an output as possible from the test oscillator in making the various adjustments.

II ALIGNMENT OF SHORTWAVE BAND 5.5 TO 18 M.C.

First check the position of the dial hand by rotating the condenser shaft to the left to full capacity. At this point the dial hand should be straight across in line with the lines dividing the scale in half. If the hand is off position it can be lined up by removing dial glass and setting hand with screw in center of dial.

1. Set the test oscillator to 17 megacycles.
2. Turn wave band switch all the way to right for highest S.W. band, and set dial hand to 17 M.C.
3. Peak trimmer condenser T5 of the oscillator coil (See pictorial) to resonance with 17 M.C. fed into antenna.
4. Adjust antenna and RF coil trimmers T6 and T7 to same frequency after the above mentioned oscillator trimmer has been set.
5. Turn dial hand to 6 M.C. on the same band and peak padding condenser P-1 to 6 M.C.

III SHORTWAVE BAND 1.7 TO 5.5 M.C.

1. Set band switch to this band and dial hand to 5 M.C.
 2. Peak trimmer T8 to 5 M.C.
 3. Peak antenna and RF trimmer to T9 and T10 to 5 M.C.
 4. Rotate dial to 1.7 M.C. and adjust padding condenser P-2 1.7 M.C.
- NOTE: After adjusting the two high bands at 17 megacycles and 5 megacycles the test oscillator input to antenna should be increased and receiver dial advanced to .9 megacycle lower and note if test oscillator signal is heard.

In case there is no response the oscillator trimmers have been pulled down too tightly. The trimmers should be released until this condition exists then go back to original point of alignment - reduce antenna input voltage and correct the trimmer adjustment.


EXAMPLE: The receiver has been adjusted to 17 megacycles. Tune receiver to approximately 16.9 M.C.

Increase oscillator signal by "opening up" the attenuator. Move the dial back and forth at 16.9 M.C.

If no signal is heard, let oscillator trimmer off until it is heard at 16.9 M.C.


Reduce signal voltage from generator, go back to 17 M.C. and slightly correct this last trimmer adjustment.

The same applies to the 5 M.C. adjustment.

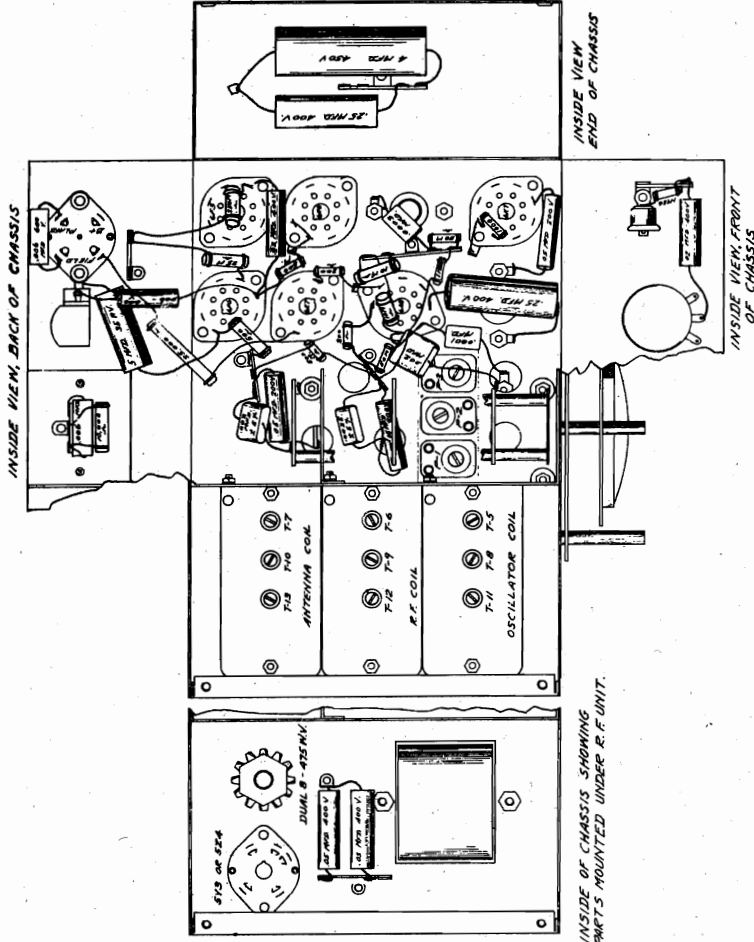

WALGREEN CO.

MODELS 600, 650
Schematic, Alignment
Socket, Trimmers

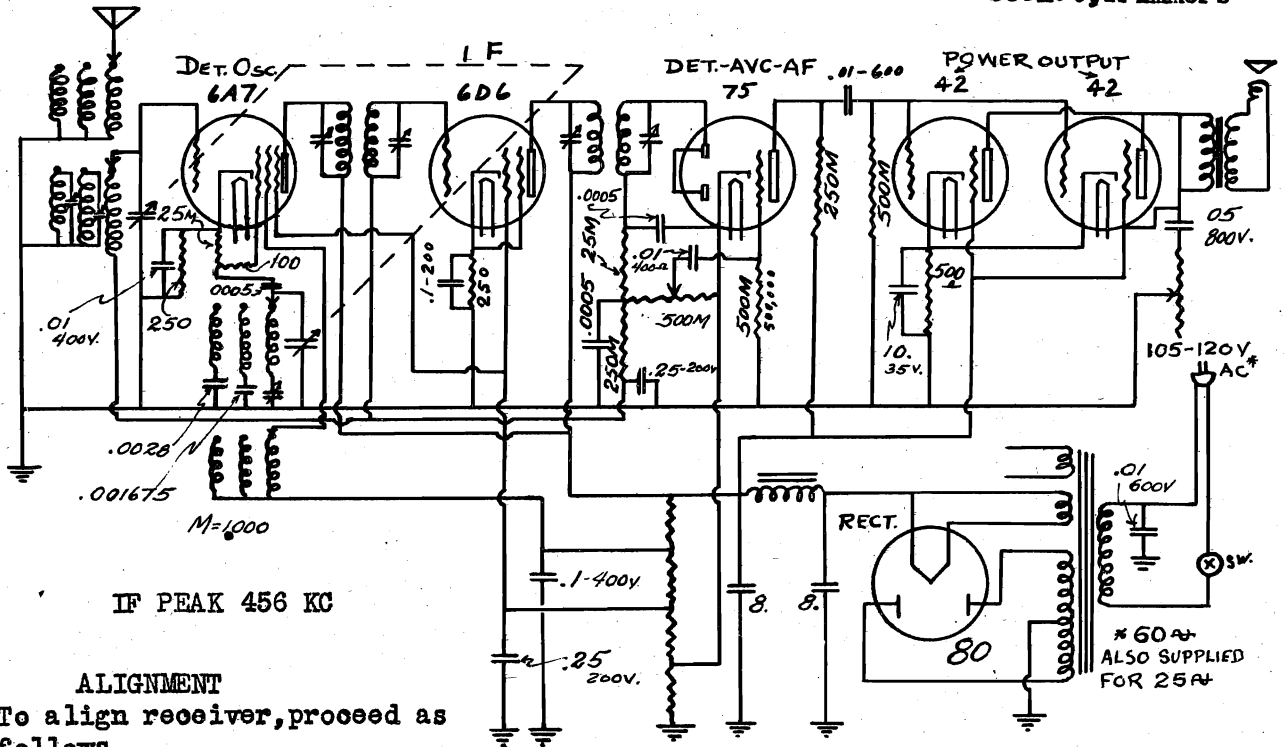

IF PEAK 456 KC


ALIGNMENT

To align receiver, proceed as follows,

1. Apply 456 KC note to control grid of 6A7 and peak IF transformers for maximum gain.
2. Apply 4000 KC note to antenna wire; set band switch to second band and align trimmer on oscillator section of variable condenser to track with 4000 KC on dial
3. Turn band switch to broadcast band; apply 1500 KC note to antenna wire, adjust trimmer of RF section of variable condenser for maximum gain.
4. Apply 600 KC note to antenna, adjust padder condenser for maximum gain, swinging condenser back and forth across 600 KC signal.
5. Check 1400 KC signal for alignment.
6. Turn band switch to second band; check 4000 KC signal for alignment and adjust trimmer on antenna coil for greatest gain at 4000 KC.
7. Turn band switch to last band and adjust trimmer on antenna coil for greatest noise on 12 megacycles.



RANGES:-

This receiver covers
540 - 1720 kilocycles
1720- 5000 kilocycles
5.5- 16 megacycles

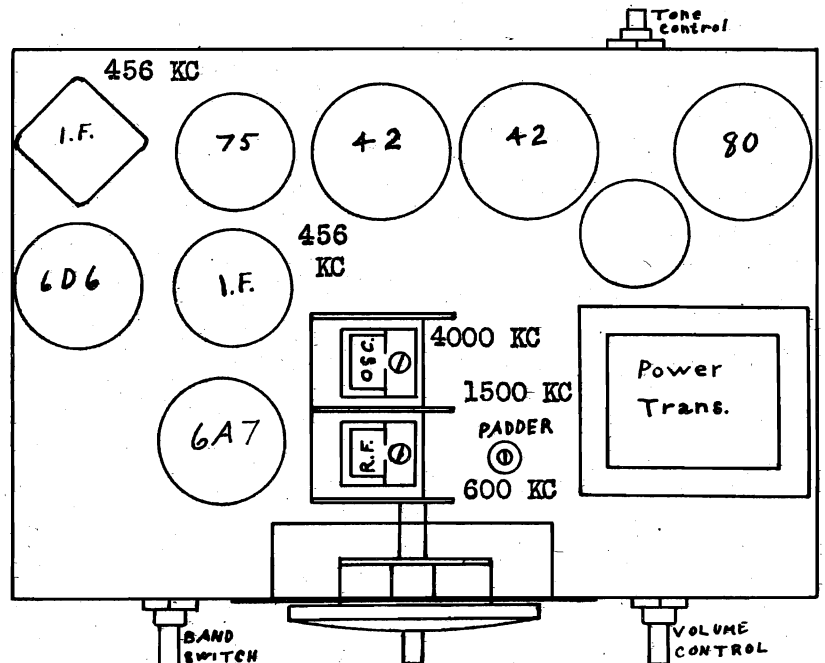

MODEL 901
Schematic, Alignment
Socket, Trimmers

WALGREEN CO.

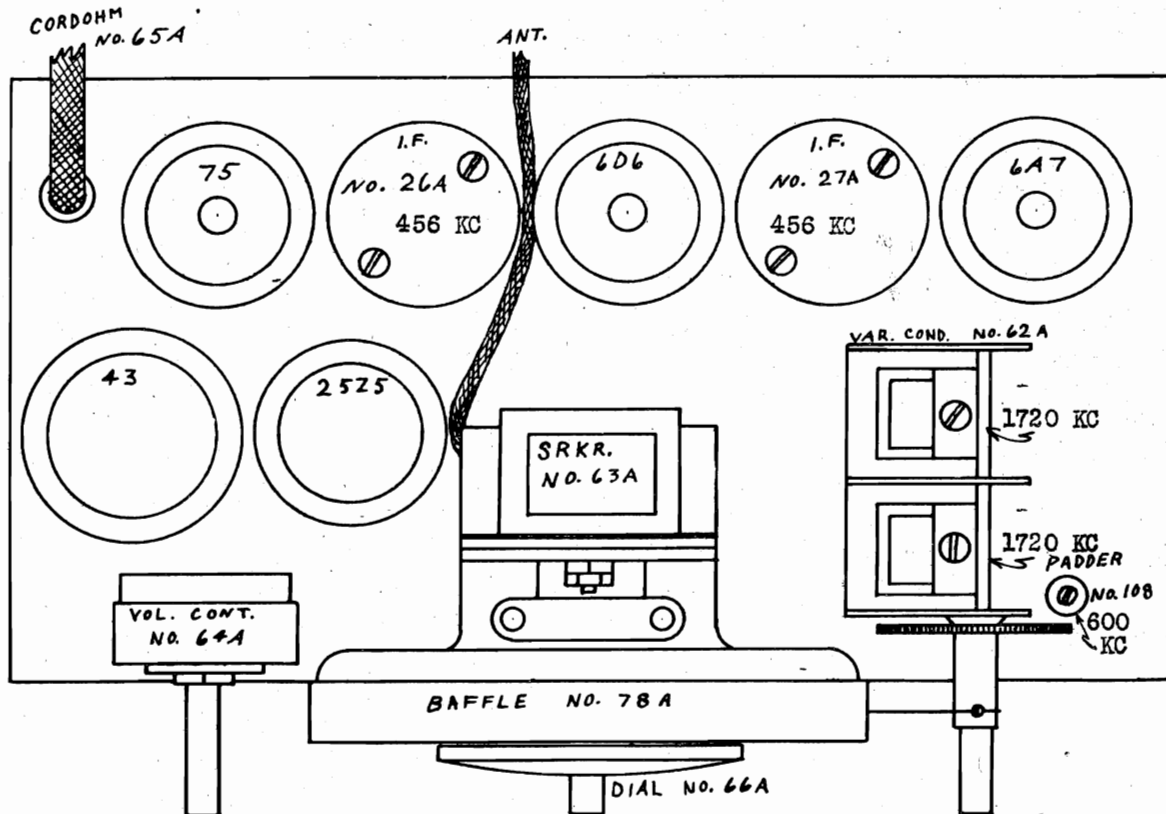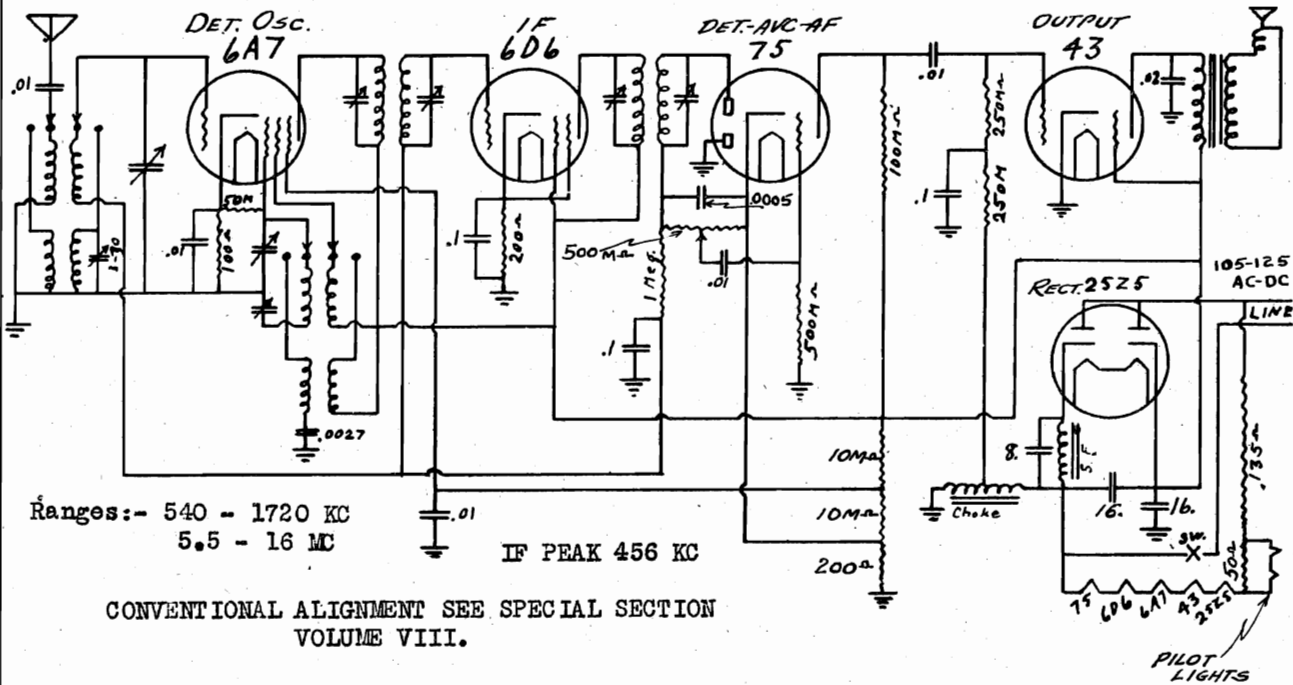

Check alignment at 1400 KC. To align short wave band, adjust trimmer underneath chassis for greatest noise level around the 25 meter band.

6-14-35-F.W.

Schematics, Sockets, Voltage Alignment, Trimmers


WARWICK MFG. CORP. MODELS 0-30, 0-300 to 0-309
MODELS 0-40, 0-407

This receiver covers a frequency range from 540 Kilocycles to 1760 Kilocycles (K.C.).

Model No. 0-30



Model No. 0-300 to 0-309, Inclusive

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII

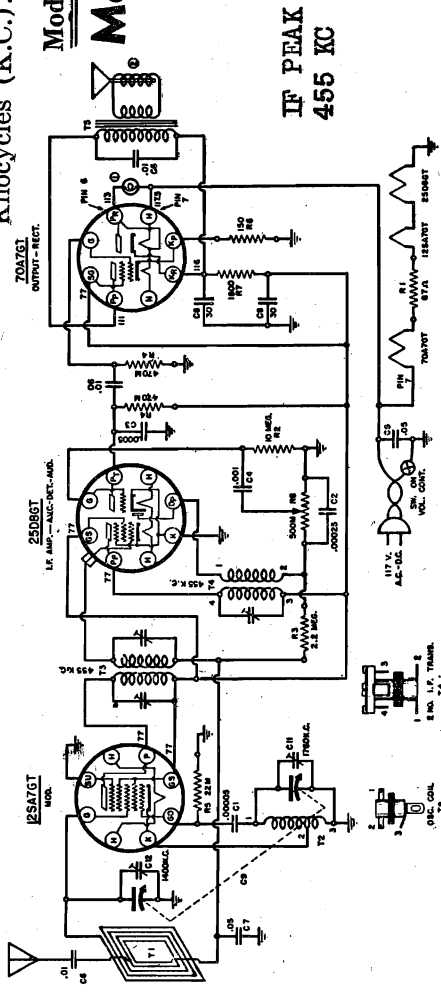

IF PEAK
455 KC

CODE	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
C1	1503	.0005 MFD. MICA CONDENSER	81	40-338	T1	82-4	ANTENNA LOOP
C2	1504	.0005 MFD. MICA CONDENSER	82	40-339	T2	82-2	OSCILLATOR
C3	1505	.0005 MFD. MICA CONDENSER	83	40-340	T3	82-281	5" SPEAKER
C4	1506	.0005 MFD. MICA CONDENSER	84	40-341	T4	82-281	5" SPEAKER
C5	1507	.0005 MFD. MICA CONDENSER	85	40-342	T5	78-270	5" SPEAKER
C6	1508	.0005 MFD. MICA CONDENSER	86	40-343	T6	78-270	5" SPEAKER
C7	1509	.0005 MFD. MICA CONDENSER	87	40-344	T7	78-270	5" SPEAKER
C8	1510	.0005 MFD. MICA CONDENSER	88	40-345	T8	78-270	5" SPEAKER
C9	1511	.0005 MFD. MICA CONDENSER	89	40-346	T9	78-270	5" SPEAKER
C10	1512	.0005 MFD. MICA CONDENSER	90	40-347	T10	78-270	5" SPEAKER
C11	1513	.0005 MFD. MICA CONDENSER	91	40-348	T11	78-270	5" SPEAKER
C12	1514	.0005 MFD. MICA CONDENSER	92	40-349	T12	78-270	5" SPEAKER
C13	1515	.0005 MFD. MICA CONDENSER	93	40-350	T13	78-270	5" SPEAKER
C14	1516	.0005 MFD. MICA CONDENSER	94	40-351	T14	78-270	5" SPEAKER
C15	1517	.0005 MFD. MICA CONDENSER	95	40-352	T15	78-270	5" SPEAKER
C16	1518	.0005 MFD. MICA CONDENSER	96	40-353	T16	78-270	5" SPEAKER
C17	1519	.0005 MFD. MICA CONDENSER	97	40-354	T17	78-270	5" SPEAKER
C18	1520	.0005 MFD. MICA CONDENSER	98	40-355	T18	78-270	5" SPEAKER
C19	1521	.0005 MFD. MICA CONDENSER	99	40-356	T19	78-270	5" SPEAKER
C20	1522	.0005 MFD. MICA CONDENSER	100	40-357	T20	78-270	5" SPEAKER
C21	1523	.0005 MFD. MICA CONDENSER	101	40-358	T21	78-270	5" SPEAKER
C22	1524	.0005 MFD. MICA CONDENSER	102	40-359	T22	78-270	5" SPEAKER
C23	1525	.0005 MFD. MICA CONDENSER	103	40-360	T23	78-270	5" SPEAKER
C24	1526	.0005 MFD. MICA CONDENSER	104	40-361	T24	78-270	5" SPEAKER
C25	1527	.0005 MFD. MICA CONDENSER	105	40-362	T25	78-270	5" SPEAKER
C26	1528	.0005 MFD. MICA CONDENSER	106	40-363	T26	78-270	5" SPEAKER
C27	1529	.0005 MFD. MICA CONDENSER	107	40-364	T27	78-270	5" SPEAKER
C28	1530	.0005 MFD. MICA CONDENSER	108	40-365	T28	78-270	5" SPEAKER
C29	1531	.0005 MFD. MICA CONDENSER	109	40-366	T29	78-270	5" SPEAKER
C30	1532	.0005 MFD. MICA CONDENSER	110	40-367	T30	78-270	5" SPEAKER
C31	1533	.0005 MFD. MICA CONDENSER	111	40-368	T31	78-270	5" SPEAKER
C32	1534	.0005 MFD. MICA CONDENSER	112	40-369	T32	78-270	5" SPEAKER
C33	1535	.0005 MFD. MICA CONDENSER	113	40-370	T33	78-270	5" SPEAKER
C34	1536	.0005 MFD. MICA CONDENSER	114	40-371	T34	78-270	5" SPEAKER
C35	1537	.0005 MFD. MICA CONDENSER	115	40-372	T35	78-270	5" SPEAKER
C36	1538	.0005 MFD. MICA CONDENSER	116	40-373	T36	78-270	5" SPEAKER
C37	1539	.0005 MFD. MICA CONDENSER	117	40-374	T37	78-270	5" SPEAKER
C38	1540	.0005 MFD. MICA CONDENSER	118	40-375	T38	78-270	5" SPEAKER
C39	1541	.0005 MFD. MICA CONDENSER	119	40-376	T39	78-270	5" SPEAKER
C40	1542	.0005 MFD. MICA CONDENSER	120	40-377	T40	78-270	5" SPEAKER
C41	1543	.0005 MFD. MICA CONDENSER	121	40-378	T41	78-270	5" SPEAKER
C42	1544	.0005 MFD. MICA CONDENSER	122	40-379	T42	78-270	5" SPEAKER
C43	1545	.0005 MFD. MICA CONDENSER	123	40-380	T43	78-270	5" SPEAKER
C44	1546	.0005 MFD. MICA CONDENSER	124	40-381	T44	78-270	5" SPEAKER
C45	1547	.0005 MFD. MICA CONDENSER	125	40-382	T45	78-270	5" SPEAKER
C46	1548	.0005 MFD. MICA CONDENSER	126	40-383	T46	78-270	5" SPEAKER
C47	1549	.0005 MFD. MICA CONDENSER	127	40-384	T47	78-270	5" SPEAKER
C48	1550	.0005 MFD. MICA CONDENSER	128	40-385	T48	78-270	5" SPEAKER
C49	1551	.0005 MFD. MICA CONDENSER	129	40-386	T49	78-270	5" SPEAKER
C50	1552	.0005 MFD. MICA CONDENSER	130	40-387	T50	78-270	5" SPEAKER
C51	1553	.0005 MFD. MICA CONDENSER	131	40-388	T51	78-270	5" SPEAKER
C52	1554	.0005 MFD. MICA CONDENSER	132	40-389	T52	78-270	5" SPEAKER
C53	1555	.0005 MFD. MICA CONDENSER	133	40-390	T53	78-270	5" SPEAKER
C54	1556	.0005 MFD. MICA CONDENSER	134	40-391	T54	78-270	5" SPEAKER
C55	1557	.0005 MFD. MICA CONDENSER	135	40-392	T55	78-270	5" SPEAKER
C56	1558	.0005 MFD. MICA CONDENSER	136	40-393	T56	78-270	5" SPEAKER
C57	1559	.0005 MFD. MICA CONDENSER	137	40-394	T57	78-270	5" SPEAKER
C58	1560	.0005 MFD. MICA CONDENSER	138	40-395	T58	78-270	5" SPEAKER
C59	1561	.0005 MFD. MICA CONDENSER	139	40-396	T59	78-270	5" SPEAKER
C60	1562	.0005 MFD. MICA CONDENSER	140	40-397	T60	78-270	5" SPEAKER
C61	1563	.0005 MFD. MICA CONDENSER	141	40-398	T61	78-270	5" SPEAKER
C62	1564	.0005 MFD. MICA CONDENSER	142	40-399	T62	78-270	5" SPEAKER
C63	1565	.0005 MFD. MICA CONDENSER	143	40-400	T63	78-270	5" SPEAKER
C64	1566	.0005 MFD. MICA CONDENSER	144	40-401	T64	78-270	5" SPEAKER
C65	1567	.0005 MFD. MICA CONDENSER	145	40-402	T65	78-270	5" SPEAKER
C66	1568	.0005 MFD. MICA CONDENSER	146	40-403	T66	78-270	5" SPEAKER
C67	1569	.0005 MFD. MICA CONDENSER	147	40-404	T67	78-270	5" SPEAKER
C68	1570	.0005 MFD. MICA CONDENSER	148	40-405	T68	78-270	5" SPEAKER
C69	1571	.0005 MFD. MICA CONDENSER	149	40-406	T69	78-270	5" SPEAKER
C70	1572	.0005 MFD. MICA CONDENSER	150	40-407	T70	78-270	5" SPEAKER
C71	1573	.0005 MFD. MICA CONDENSER	151	40-408	T71	78-270	5" SPEAKER
C72	1574	.0005 MFD. MICA CONDENSER	152	40-409	T72	78-270	5" SPEAKER
C73	1575	.0005 MFD. MICA CONDENSER	153	40-410	T73	78-270	5" SPEAKER
C74	1576	.0005 MFD. MICA CONDENSER	154	40-411	T74	78-270	5" SPEAKER
C75	1577	.0005 MFD. MICA CONDENSER	155	40-412	T75	78-270	5" SPEAKER
C76	1578	.0005 MFD. MICA CONDENSER	156	40-413	T76	78-270	5" SPEAKER
C77	1579	.0005 MFD. MICA CONDENSER	157	40-414	T77	78-270	5" SPEAKER
C78	1580	.0005 MFD. MICA CONDENSER	158	40-415	T78	78-270	5" SPEAKER
C79	1581	.0005 MFD. MICA CONDENSER	159	40-416	T79	78-270	5" SPEAKER
C80	1582	.0005 MFD. MICA CONDENSER	160	40-417	T80	78-270	5" SPEAKER
C81	1583	.0005 MFD. MICA CONDENSER	161	40-418	T81	78-270	5" SPEAKER
C82	1584	.0005 MFD. MICA CONDENSER	162	40-419	T82	78-270	5" SPEAKER
C83	1585	.0005 MFD. MICA CONDENSER	163	40-420	T83	78-270	5" SPEAKER
C84	1586	.0005 MFD. MICA CONDENSER	164	40-421	T84	78-270	5" SPEAKER
C85	1587	.0005 MFD. MICA CONDENSER	165	40-422	T85	78-270	5" SPEAKER
C86	1588	.0005 MFD. MICA CONDENSER	166	40-423	T86	78-270	5" SPEAKER
C87	1589	.0005 MFD. MICA CONDENSER	167	40-424	T87	78-270	5" SPEAKER
C88	1590	.0005 MFD. MICA CONDENSER	168	40-425	T88	78-270	5" SPEAKER
C89	1591	.0005 MFD. MICA CONDENSER	169	40-426	T89	78-270	5" SPEAKER
C90	1592	.0005 MFD. MICA CONDENSER	170	40-427	T90	78-270	5" SPEAKER
C91	1593	.0005 MFD. MICA CONDENSER	171	40-428	T91	78-270	5" SPEAKER
C92	1594	.0005 MFD. MICA CONDENSER	172	40-429	T92	78-270	5" SPEAKER
C93	1595	.0005 MFD. MICA CONDENSER	173	40-430	T93	78-270	5" SPEAKER
C94	1596	.0005 MFD. MICA CONDENSER	174	40-431	T94	78-270	5" SPEAKER
C95	1597	.0005 MFD. MICA CONDENSER	175	40-432	T95	78-270	5" SPEAKER
C96	1598	.0005 MFD. MICA CONDENSER	176	40-433	T96	78-270	5" SPEAKER
C97	1599	.0005 MFD. MICA CONDENSER	177	40-434	T97	78-270	5" SPEAKER
C98	1600	.0005 MFD. MICA CONDENSER	178	40-435	T98	78-270	5" SPEAKER
C99	1601	.0005 MFD. MICA CONDENSER	179	40-436	T99	78-270	5" SPEAKER
C100	1602	.0005 MFD. MICA CONDENSER	180	40-437	T100	78-270	5" SPEAKER

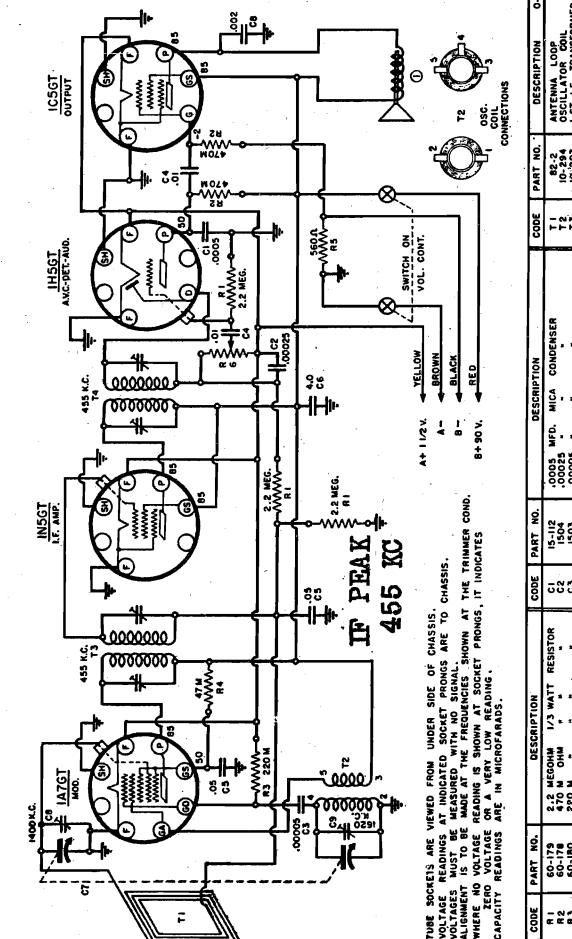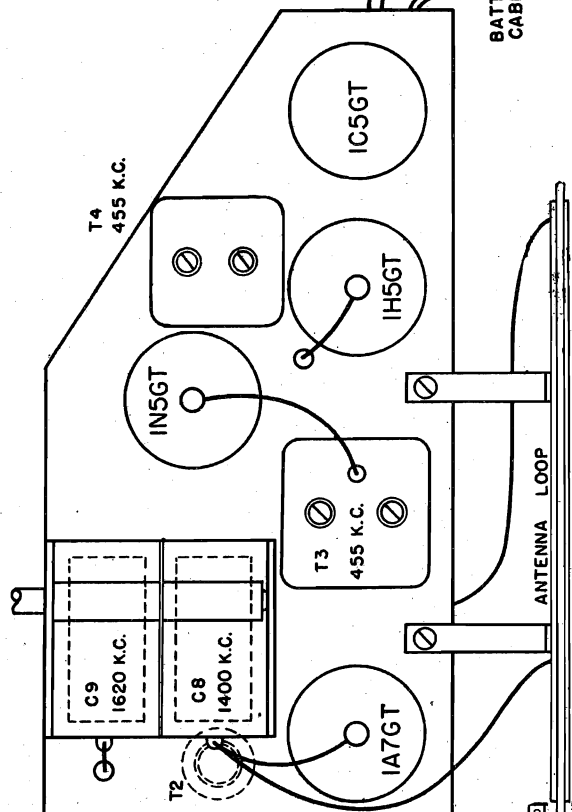

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII


MODEL 0-40, 0-407.
This receiver is made to cover the standard broadcast band from 1620 K.C. to 535 K.C.

MODELS 0-43, 0-430 to 0-439
 MODELS 0-44, 0-440 to 0-449
 MODELS 0-62, 0-620 to 0-629
 Schematics, Socket, Trimmers
 Alignment, Voltage


WARWICK MFG. CORP.

Model No. 0-44
Model No. 0-440 to 0-449, Inclusive
Model No. 0-48 0-430 to 0-439, Incl.

CONVENTIONAL
 ALIGNMENT
 SEE SPECIAL
 SECTION
 VOLUME VIII

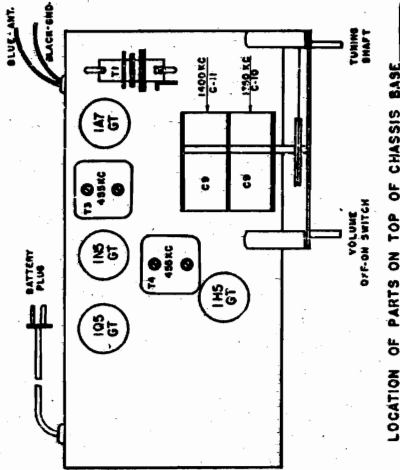


LOCATION OF PARTS ON TOP OF CHASSIS BASE

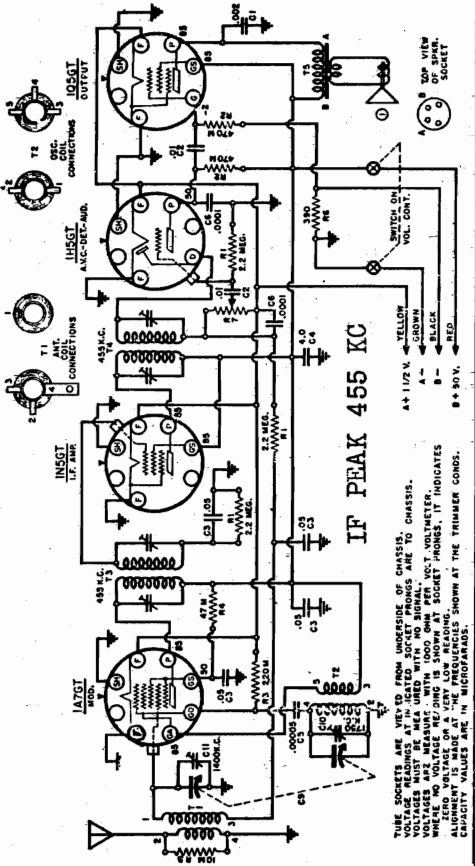

CODE	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
R1	60-178	2.2 MEG OHM	T1	10-244	ANTENNA TRANSFORMER
R2	60-178	270M OHM	T2	10-341	OSCILLATOR
R3	60-177	47K	T3	10-342	1ST I.F.
R4	60-177	47K	T4	10-343	2ND I.F.
R5	60-211	300	T5	79-297	5" P.M. SPEAKER
R6	60-211	300			
R7	84-145	VOLUME CONTROL			


THE SOCKETS ARE VIEWED FROM UNDERSIDE OF CHASSIS. VOLTAGES MUST BE MEASURED WITH NO SIGNAL. VOLTAGES NOT MEASURED WITH 100 OHM PER 100 FT. VOLTMETER. ZERO VOLTAGE OF A VERY LOW READING. SIGNAL INDICATES CREDIBILITY VALUES ARE IN MICROAMPS.

MODEL NO. 0-620 TO 0-629, INCLUSIVE
 Model No. 0-62

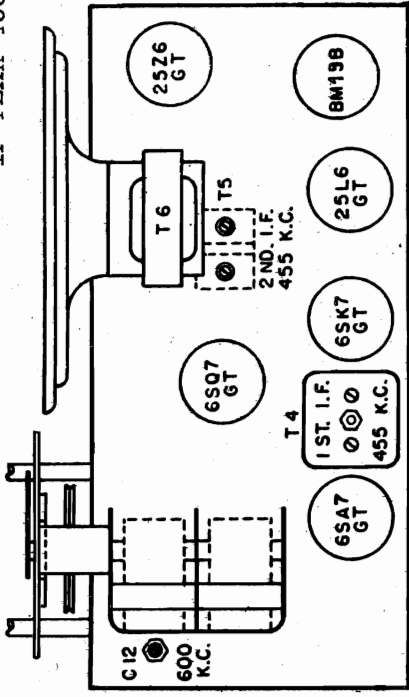

CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION
 VOLUME VIII

BAND SW.
 117 V. A.C.-D.C.
 Bands
 540 K.C. to 1750 K.C.
 2.2 to 7 megacycles.

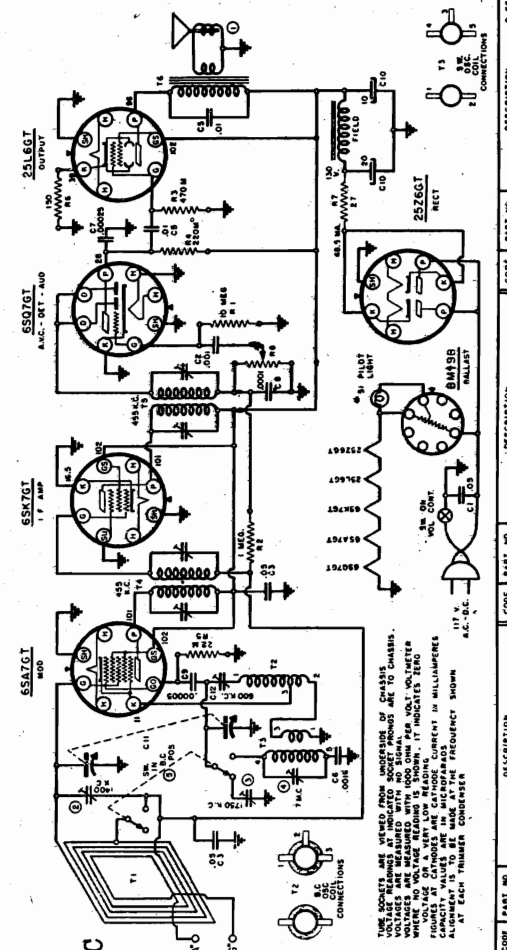



CODE	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
R1	60-178	2.2 MEG OHM	T1	10-244	ANTENNA TRANSFORMER
R2	60-178	270M OHM	T2	10-341	OSCILLATOR
R3	60-177	47K	T3	10-342	1ST I.F.
R4	60-177	47K	T4	10-343	2ND I.F.
R5	60-211	300	T5	79-297	5" P.M. SPEAKER
R6	60-211	300			
R7	84-145	VOLUME CONTROL			

CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION
 VOLUME VIII

BAND SW.
 117 V. A.C.-D.C.
 Bands
 540 K.C. to 1750 K.C.
 2.2 to 7 megacycles.

MODEL 9-21 Phono.Osc.
 Schematic,Notes
 MODEL 0-51 MODEL 0-70
 MODEL 0-75 MODEL 0-80
 MODEL 10-70 Tuner Data

WARWICK MFG. CORP.

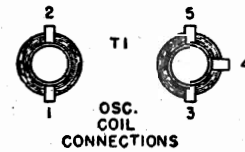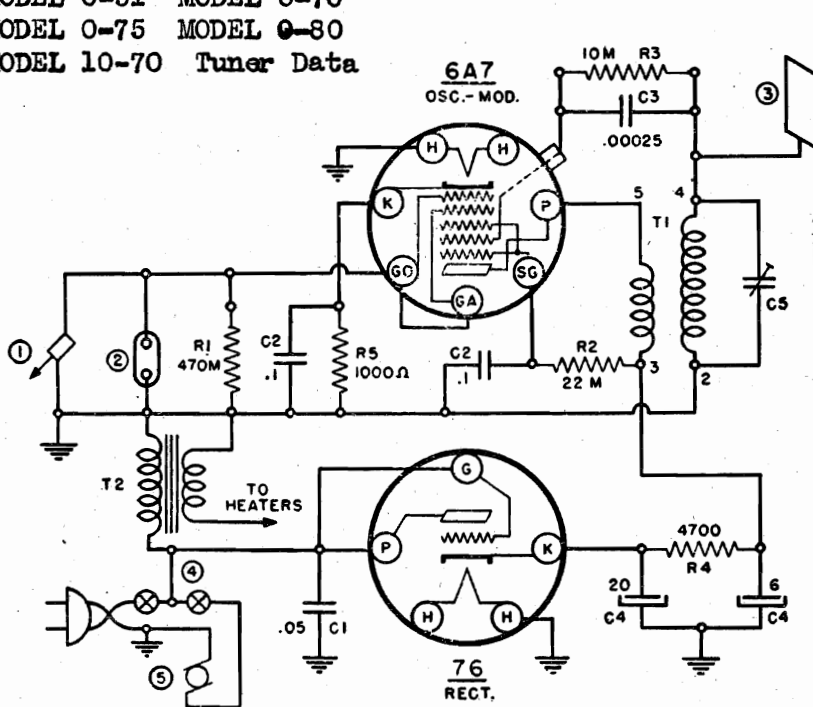

CODE	PART NO.	DESCRIPTION	9-21
C1	1607	.05 MFD. 400V. TUB. COND.	
C2	16-115	.1 " 200V. " "	
C3	1504	.00025 MFD. MICA " "	
C4	18-241	20 X 6 MFD. 150V. ELECT.	
C5	20-119	3 PLATE TRIMMER	
T1	10-240	OSCILLATOR TRANS	
T2	80-170	FILAMENT TRANS.	
5	59-1	PHONOGRAPH MOTOR	

CODE	PART NO.	DESCRIPTION
R1	60-178	470M. OHM 1/3 W. RES.
R2	60-185	22 M. " " " "
R3	60-215	10 M. " " " "
R4	60-189	4700 " " " "
R5	60-217	1000 " " " "
1	83-130	PICKUP
2	12-1	MICROPHONE TERMINAL
3	82-1	ANTENNA PLATE
4	69-129	SWITCH (DUAL)

PHONO-OSCILLATOR

DESCRIPTION

This unit is a Two Tube Phono-Oscillator. The tubes used are a 6A7 as an oscillator and a 76 as a power rectifier.

This unit should be operated between 1500 K.C. and 1700 K.C. and is so designed that the playing of a record on the unit makes it possible that you receive this same recording from any radio set within a nearby vicinity.

ADJUSTING PUSH BUTTONS FOR MODELS 0-51, 0-70, 0-75, 0-80, and 10-70.

Cut the call letters of your four selected stations from the list supplied with your receiver and slip them into the top of the Push-Buttons, with the clear celluloid on top of the call letters to protect them. Arrange the call letters in the buttons from left to right, having the lowest frequency station (that is, the station closest to 600 K.C. at the left and work progressively towards the right, so that the highest frequency station is toward the right.

Follow the procedure outline below, in order to adjust the push-buttons properly:

1. By means of the tuning knob, tune in with the right hand as accurately as possible the desired station having the lowest frequency.
2. Continuing to hold the tuning control knob in its exact position with the right hand, loosen with the left hand the push-button to be set up for that station, (the one farthest toward the left) by unscrewing the push-button about one turn to the left (counter-clockwise).
3. Push the push-button in all the way, and then tighten it gently toward the right (clockwise). Release push-button slowly and when in normal position grip button and tighten firmly.

The push-button tuning system is now correctly set up for your first selected station of lowest frequency.



Follow through with this same procedure, setting up the other three stations in the order of their frequency, that is, the second station set up will be second lowest in frequency, etc.

MODEL 0-60,
MODEL 10-70

WARWICK MFG. CORP. Schematics, Voltage, Socket Alignment, Trimmers

This model has been designed to cover the standard broadcast band and the first police band from 538 K.C. to 1720 K.C. The dial scale is calibrated directly in kilocycles (less the final 0). Standard broadcast stations are listed in kilocycles in most station lists.

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII.
Note: Adjust antenna trimmer to 1400KC, see schematic.

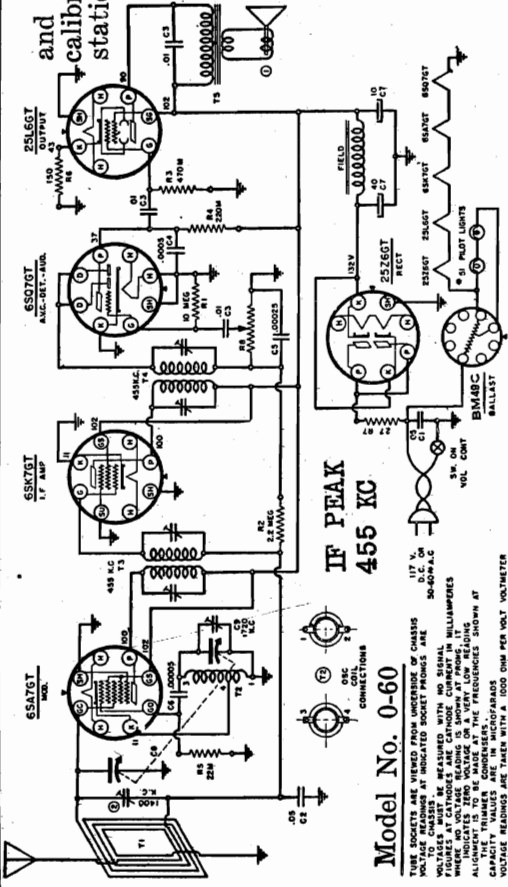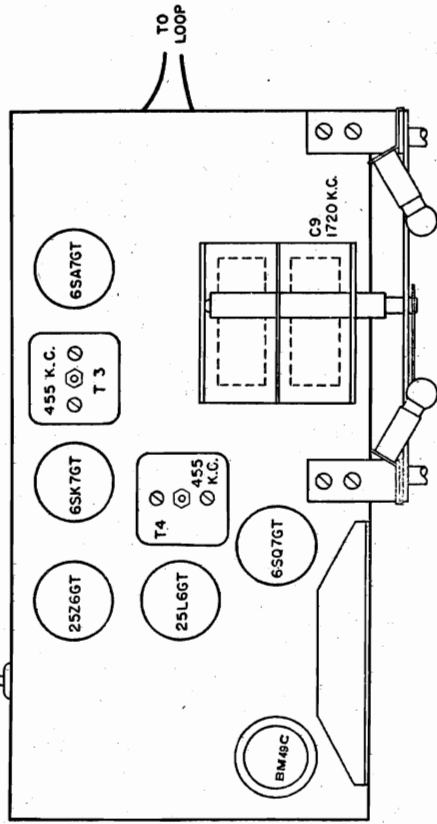

Model No. 0-60


THE SOCKETS ARE VIEWED FROM UNDERNEATH OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET POINTS ARE TAKEN WITH THE SET TUNED TO A STATION IN THE BROADCAST BAND. VOLTAGE READINGS AT OTHER POINTS ARE TAKEN WITH THE SET TUNED TO A STATION IN THE POLICE BAND. VOLTAGE READINGS AT OTHER POINTS ARE TAKEN WITH THE SET TUNED TO A STATION IN THE POLICE BAND. VOLTAGE READINGS AT OTHER POINTS ARE TAKEN WITH THE SET TUNED TO A STATION IN THE POLICE BAND.

CODE	PART NO.	DESCRIPTION	Q-48
C1	1627	10 MFD. 50V. TUBULAR COND.	1
C2	1628	2.2 MFD. 50V. TUBULAR COND.	1
C3	1629	0.001 MFD. 50V. TUBULAR COND.	1
C4	1630	0.001 MFD. 50V. TUBULAR COND.	1
C5	1631	0.001 MFD. 50V. TUBULAR COND.	1
C6	1632	0.001 MFD. 50V. TUBULAR COND.	1
C7	1633	0.001 MFD. 50V. TUBULAR COND.	1
C8	1634	0.001 MFD. 50V. TUBULAR COND.	1
C9	1635	0.001 MFD. 50V. TUBULAR COND.	1
C10	1636	0.001 MFD. 50V. TUBULAR COND.	1
C11	1637	0.001 MFD. 50V. TUBULAR COND.	1
C12	1638	0.001 MFD. 50V. TUBULAR COND.	1
C13	1639	0.001 MFD. 50V. TUBULAR COND.	1
C14	1640	0.001 MFD. 50V. TUBULAR COND.	1
C15	1641	0.001 MFD. 50V. TUBULAR COND.	1
C16	1642	0.001 MFD. 50V. TUBULAR COND.	1
C17	1643	0.001 MFD. 50V. TUBULAR COND.	1
C18	1644	0.001 MFD. 50V. TUBULAR COND.	1
C19	1645	0.001 MFD. 50V. TUBULAR COND.	1
C20	1646	0.001 MFD. 50V. TUBULAR COND.	1
C21	1647	0.001 MFD. 50V. TUBULAR COND.	1
C22	1648	0.001 MFD. 50V. TUBULAR COND.	1
C23	1649	0.001 MFD. 50V. TUBULAR COND.	1
C24	1650	0.001 MFD. 50V. TUBULAR COND.	1
C25	1651	0.001 MFD. 50V. TUBULAR COND.	1
C26	1652	0.001 MFD. 50V. TUBULAR COND.	1
C27	1653	0.001 MFD. 50V. TUBULAR COND.	1
C28	1654	0.001 MFD. 50V. TUBULAR COND.	1
C29	1655	0.001 MFD. 50V. TUBULAR COND.	1
C30	1656	0.001 MFD. 50V. TUBULAR COND.	1
C31	1657	0.001 MFD. 50V. TUBULAR COND.	1
C32	1658	0.001 MFD. 50V. TUBULAR COND.	1
C33	1659	0.001 MFD. 50V. TUBULAR COND.	1
C34	1660	0.001 MFD. 50V. TUBULAR COND.	1
C35	1661	0.001 MFD. 50V. TUBULAR COND.	1
C36	1662	0.001 MFD. 50V. TUBULAR COND.	1
C37	1663	0.001 MFD. 50V. TUBULAR COND.	1
C38	1664	0.001 MFD. 50V. TUBULAR COND.	1
C39	1665	0.001 MFD. 50V. TUBULAR COND.	1
C40	1666	0.001 MFD. 50V. TUBULAR COND.	1
C41	1667	0.001 MFD. 50V. TUBULAR COND.	1
C42	1668	0.001 MFD. 50V. TUBULAR COND.	1
C43	1669	0.001 MFD. 50V. TUBULAR COND.	1
C44	1670	0.001 MFD. 50V. TUBULAR COND.	1
C45	1671	0.001 MFD. 50V. TUBULAR COND.	1
C46	1672	0.001 MFD. 50V. TUBULAR COND.	1
C47	1673	0.001 MFD. 50V. TUBULAR COND.	1
C48	1674	0.001 MFD. 50V. TUBULAR COND.	1
C49	1675	0.001 MFD. 50V. TUBULAR COND.	1
C50	1676	0.001 MFD. 50V. TUBULAR COND.	1
C51	1677	0.001 MFD. 50V. TUBULAR COND.	1
C52	1678	0.001 MFD. 50V. TUBULAR COND.	1
C53	1679	0.001 MFD. 50V. TUBULAR COND.	1
C54	1680	0.001 MFD. 50V. TUBULAR COND.	1
C55	1681	0.001 MFD. 50V. TUBULAR COND.	1
C56	1682	0.001 MFD. 50V. TUBULAR COND.	1
C57	1683	0.001 MFD. 50V. TUBULAR COND.	1
C58	1684	0.001 MFD. 50V. TUBULAR COND.	1
C59	1685	0.001 MFD. 50V. TUBULAR COND.	1
C60	1686	0.001 MFD. 50V. TUBULAR COND.	1
C61	1687	0.001 MFD. 50V. TUBULAR COND.	1
C62	1688	0.001 MFD. 50V. TUBULAR COND.	1
C63	1689	0.001 MFD. 50V. TUBULAR COND.	1
C64	1690	0.001 MFD. 50V. TUBULAR COND.	1
C65	1691	0.001 MFD. 50V. TUBULAR COND.	1
C66	1692	0.001 MFD. 50V. TUBULAR COND.	1
C67	1693	0.001 MFD. 50V. TUBULAR COND.	1
C68	1694	0.001 MFD. 50V. TUBULAR COND.	1
C69	1695	0.001 MFD. 50V. TUBULAR COND.	1
C70	1696	0.001 MFD. 50V. TUBULAR COND.	1
C71	1697	0.001 MFD. 50V. TUBULAR COND.	1
C72	1698	0.001 MFD. 50V. TUBULAR COND.	1
C73	1699	0.001 MFD. 50V. TUBULAR COND.	1
C74	1700	0.001 MFD. 50V. TUBULAR COND.	1
C75	1701	0.001 MFD. 50V. TUBULAR COND.	1
C76	1702	0.001 MFD. 50V. TUBULAR COND.	1
C77	1703	0.001 MFD. 50V. TUBULAR COND.	1
C78	1704	0.001 MFD. 50V. TUBULAR COND.	1
C79	1705	0.001 MFD. 50V. TUBULAR COND.	1
C80	1706	0.001 MFD. 50V. TUBULAR COND.	1
C81	1707	0.001 MFD. 50V. TUBULAR COND.	1
C82	1708	0.001 MFD. 50V. TUBULAR COND.	1
C83	1709	0.001 MFD. 50V. TUBULAR COND.	1
C84	1710	0.001 MFD. 50V. TUBULAR COND.	1
C85	1711	0.001 MFD. 50V. TUBULAR COND.	1
C86	1712	0.001 MFD. 50V. TUBULAR COND.	1
C87	1713	0.001 MFD. 50V. TUBULAR COND.	1
C88	1714	0.001 MFD. 50V. TUBULAR COND.	1
C89	1715	0.001 MFD. 50V. TUBULAR COND.	1
C90	1716	0.001 MFD. 50V. TUBULAR COND.	1
C91	1717	0.001 MFD. 50V. TUBULAR COND.	1
C92	1718	0.001 MFD. 50V. TUBULAR COND.	1
C93	1719	0.001 MFD. 50V. TUBULAR COND.	1
C94	1720	0.001 MFD. 50V. TUBULAR COND.	1
C95	1721	0.001 MFD. 50V. TUBULAR COND.	1
C96	1722	0.001 MFD. 50V. TUBULAR COND.	1
C97	1723	0.001 MFD. 50V. TUBULAR COND.	1
C98	1724	0.001 MFD. 50V. TUBULAR COND.	1
C99	1725	0.001 MFD. 50V. TUBULAR COND.	1
C100	1726	0.001 MFD. 50V. TUBULAR COND.	1
C101	1727	0.001 MFD. 50V. TUBULAR COND.	1
C102	1728	0.001 MFD. 50V. TUBULAR COND.	1
C103	1729	0.001 MFD. 50V. TUBULAR COND.	1
C104	1730	0.001 MFD. 50V. TUBULAR COND.	1
C105	1731	0.001 MFD. 50V. TUBULAR COND.	1
C106	1732	0.001 MFD. 50V. TUBULAR COND.	1
C107	1733	0.001 MFD. 50V. TUBULAR COND.	1
C108	1734	0.001 MFD. 50V. TUBULAR COND.	1
C109	1735	0.001 MFD. 50V. TUBULAR COND.	1
C110	1736	0.001 MFD. 50V. TUBULAR COND.	1
C111	1737	0.001 MFD. 50V. TUBULAR COND.	1
C112	1738	0.001 MFD. 50V. TUBULAR COND.	1
C113	1739	0.001 MFD. 50V. TUBULAR COND.	1
C114	1740	0.001 MFD. 50V. TUBULAR COND.	1
C115	1741	0.001 MFD. 50V. TUBULAR COND.	1
C116	1742	0.001 MFD. 50V. TUBULAR COND.	1
C117	1743	0.001 MFD. 50V. TUBULAR COND.	1
C118	1744	0.001 MFD. 50V. TUBULAR COND.	1
C119	1745	0.001 MFD. 50V. TUBULAR COND.	1
C120	1746	0.001 MFD. 50V. TUBULAR COND.	1
C121	1747	0.001 MFD. 50V. TUBULAR COND.	1
C122	1748	0.001 MFD. 50V. TUBULAR COND.	1
C123	1749	0.001 MFD. 50V. TUBULAR COND.	1
C124	1750	0.001 MFD. 50V. TUBULAR COND.	1
C125	1751	0.001 MFD. 50V. TUBULAR COND.	1
C126	1752	0.001 MFD. 50V. TUBULAR COND.	1
C127	1753	0.001 MFD. 50V. TUBULAR COND.	1
C128	1754	0.001 MFD. 50V. TUBULAR COND.	1
C129	1755	0.001 MFD. 50V. TUBULAR COND.	1
C130	1756	0.001 MFD. 50V. TUBULAR COND.	1
C131	1757	0.001 MFD. 50V. TUBULAR COND.	1
C132	1758	0.001 MFD. 50V. TUBULAR COND.	1
C133	1759	0.001 MFD. 50V. TUBULAR COND.	1
C134	1760	0.001 MFD. 50V. TUBULAR COND.	1
C135	1761	0.001 MFD. 50V. TUBULAR COND.	1
C136	1762	0.001 MFD. 50V. TUBULAR COND.	1
C137	1763	0.001 MFD. 50V. TUBULAR COND.	1
C138	1764	0.001 MFD. 50V. TUBULAR COND.	1
C139	1765	0.001 MFD. 50V. TUBULAR COND.	1
C140	1766	0.001 MFD. 50V. TUBULAR COND.	1
C141	1767	0.001 MFD. 50V. TUBULAR COND.	1
C142	1768	0.001 MFD. 50V. TUBULAR COND.	1
C143	1769	0.001 MFD. 50V. TUBULAR COND.	1
C144	1770	0.001 MFD. 50V. TUBULAR COND.	1
C145	1771	0.001 MFD. 50V. TUBULAR COND.	1
C146	1772	0.001 MFD. 50V. TUBULAR COND.	1
C147	1773	0.001 MFD. 50V. TUBULAR COND.	1
C148	1774	0.001 MFD. 50V. TUBULAR COND.	1
C149	1775	0.001 MFD. 50V. TUBULAR COND.	1
C150	1776	0.001 MFD. 50V. TUBULAR COND.	1
C151	1777	0.001 MFD. 50V. TUBULAR COND.	1
C152	1778	0.001 MFD. 50V. TUBULAR COND.	1
C153	1779	0.001 MFD. 50V. TUBULAR COND.	1
C154	1780	0.001 MFD. 50V. TUBULAR COND.	1
C155	1781	0.001 MFD. 50V. TUBULAR COND.	1
C156	1782	0.001 MFD. 50V. TUBULAR COND.	1
C157	1783	0.001 MFD. 50V. TUBULAR COND.	1
C158	1784	0.001 MFD. 50V. TUBULAR COND.	1
C159	1785	0.001 MFD. 50V. TUBULAR COND.	1
C160	1786	0.001 MFD. 50V. TUBULAR COND.	1
C161	1787	0.001 MFD. 50V. TUBULAR COND.	1
C162	1788	0.001 MFD. 50V. TUBULAR COND.	1
C163	1789	0.001 MFD. 50V. TUBULAR COND.	1
C164	1790	0.001 MFD. 50V. TUBULAR COND.	1
C165	1791	0.001 MFD. 50V. TUBULAR COND.	1
C166	1792	0.001 MFD. 50V. TUBULAR COND.	1
C167	1793	0.001 MFD. 50V. TUBULAR COND.	1
C168	1794	0.001 MFD. 50V. TUBULAR COND.	1
C169	1795	0.001 MFD. 50V. TUBULAR COND.	1
C170	1796	0.001 MFD. 50V. TUBULAR COND.	1
C171	1797	0.001 MFD. 50V. TUBULAR COND.	1
C172	1798	0.001 MFD. 50V. TUBULAR COND.	1
C173	1799	0.001 MFD. 50V. TUBULAR COND.	1
C174	1800	0.001 MFD. 50V. TUBULAR COND.	1
C175	1801	0.001 MFD. 50V. TUBULAR COND.	1
C176	1802	0.001 MFD. 50V. TUBULAR COND.	1
C177	1803	0.001 MFD. 50V. TUBULAR COND.	1
C178	1804	0.001 MFD. 50V. TUBULAR COND.	1
C179	1805	0.001 MFD. 50V. TUBULAR COND.	1
C180	1806	0.001 MFD. 50V. TUBULAR COND.	1
C181	1807	0.001 MFD. 50V. TUBULAR COND.	1
C182	1808	0.001 MFD. 50V. TUBULAR COND.	1
C183	1809	0.001 MFD. 50V. TUBULAR COND.	1
C184	1810	0.001 MFD. 50V. TUBULAR COND.	1
C185	1811	0.001 MFD. 50V. TUBULAR COND.	1
C186	1812	0.001 MFD. 50V. TUBULAR COND.	1
C187	1813	0.001 MFD. 50V. TUBULAR COND.	1
C188	1814	0.001 MFD. 50V. TUBULAR COND.	1
C189	1815	0.001 MFD. 50V. TUBULAR COND.	1
C190	1816	0.001 MFD. 50V. TUBULAR COND.	1
C191	1817	0.001 MFD. 50V. TUBULAR COND.	1
C192	1818	0.001 MFD. 50V. TUBULAR COND.	1
C193	1819	0.001 MFD. 50V. TUBULAR COND.	1
C194	1820	0.001 MFD. 50V. TUBULAR COND.	1
C195	1821	0.001 MFD. 50V. TUBULAR COND.	1
C196	1822	0.001 MFD. 50V. TUBULAR COND.	1
C197	1823	0.001 MFD. 50V. TUBULAR COND.	1
C198	1824	0.001 MFD. 50V. TUBULAR COND.	1
C199	1825	0.001 MFD. 50V. TUBULAR COND.	1
C200	1826	0.001 MFD. 50V. TUBULAR COND.	1
C201	1827	0.001 MFD. 50V. TUBULAR COND.	1
C202	1828	0.001 MFD. 50V. TUBULAR COND.	1
C203	1829	0.001 MFD. 50V. TUBULAR COND.	1
C204	1830	0.001 MFD. 50V. TUBULAR COND.	1
C205	1831	0.001 MFD. 50V. TUBULAR COND.	1
C206	1832	0.001 MFD. 50V. TUBULAR COND.	1
C207	1833	0.001 MFD. 50V. TUBULAR COND.	1
C208	1834	0.001 MFD. 50V. TUBULAR COND.	1
C209	1835	0.001 MFD. 50V. TUBULAR COND.	1
C210			

WARWICK MFG. CORP.

MODEL O-65
 MODEL O-67
 Schematics, Voltage, Socket
 Alignment, Trimmers


Model No. 0-67
 540 K. C. to 1750 K. C.
 CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION
 VOLUME VIII

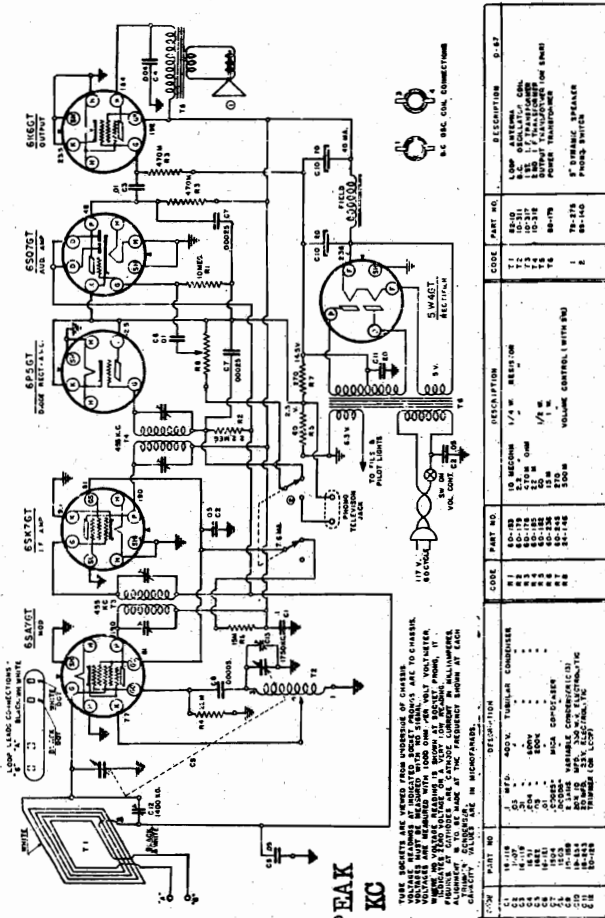

IF PEAK
 455 KC


CODE	PART NO.	DESCRIPTION	DESCRIPTION	CODE	PART NO.	DESCRIPTION
C1	80-100	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T1	80-100	6X5 GT
C2	80-101	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T2	80-101	6S07 GT
C3	80-102	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T3	80-102	6SK7 GT
C4	80-103	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T4	80-103	6K6 GT
C5	80-104	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T5	80-104	6S07 GT
C6	80-105	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T6	80-105	6SA7 GT
C7	80-106	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T7	80-106	6P5 GT
C8	80-107	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T8	80-107	5W4 GT
C9	80-108	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T9	80-108	600K.C. C II
C10	80-109	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T10	80-109	600K.C. C II

Model No. 0-65
 540 to 1650 K. C.
 CONVENTIONAL ALIGNMENT
 SEE SPECIAL SECTION
 VOLUME VIII

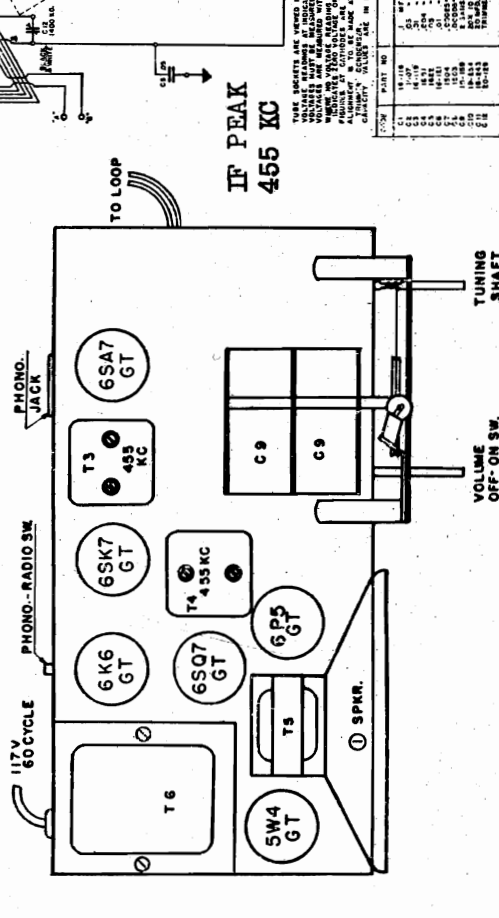


IF PEAK
 455 KC

CODE	PART NO.	DESCRIPTION	DESCRIPTION	CODE	PART NO.	DESCRIPTION
C1	80-100	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T1	80-100	6X5 GT
C2	80-101	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T2	80-101	6S07 GT
C3	80-102	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T3	80-102	6SK7 GT
C4	80-103	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T4	80-103	6K6 GT
C5	80-104	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T5	80-104	6S07 GT
C6	80-105	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T6	80-105	6SA7 GT
C7	80-106	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T7	80-106	6P5 GT
C8	80-107	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T8	80-107	5W4 GT
C9	80-108	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T9	80-108	600K.C. C II
C10	80-109	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T10	80-109	600K.C. C II

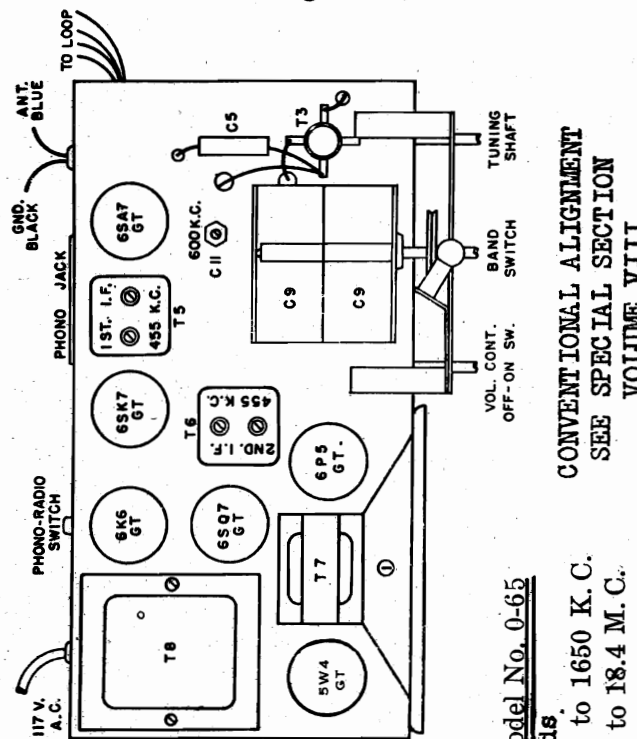

Model No. 0-65
 Bands
 540 to 1650 K. C.
 5.7 to 18.4 M. C.

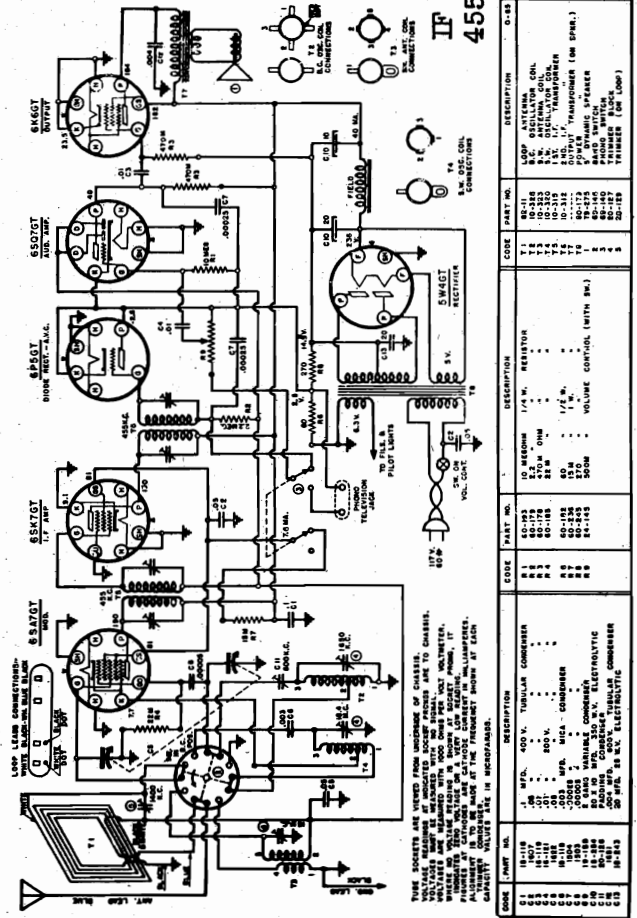

CODE	PART NO.	DESCRIPTION	DESCRIPTION	CODE	PART NO.	DESCRIPTION
C1	80-100	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T1	80-100	6X5 GT
C2	80-101	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T2	80-101	6S07 GT
C3	80-102	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T3	80-102	6SK7 GT
C4	80-103	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T4	80-103	6K6 GT
C5	80-104	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T5	80-104	6S07 GT
C6	80-105	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T6	80-105	6SA7 GT
C7	80-106	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T7	80-106	6P5 GT
C8	80-107	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T8	80-107	5W4 GT
C9	80-108	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T9	80-108	600K.C. C II
C10	80-109	50 MFD. 50V. TUBULAR CONDENSER	10 MEGOHM 1/4 W. RESISTOR	T10	80-109	600K.C. C II


WARWICK MFG. CORP.

MODEL 0-72
MODEL 0-73
Schematics, Voltage, Socket
Alignment, Trimmers


This model has been designed to cover three separate frequency bands from 540 K.C. to 1650 K.C., 2.22 M.C. to 7 M.C. and from 7.77 M.C. to 24 M.C.

CONVENTIONAL ALIGNMENT


SEE SPECIAL SECTION VOLUME VIII

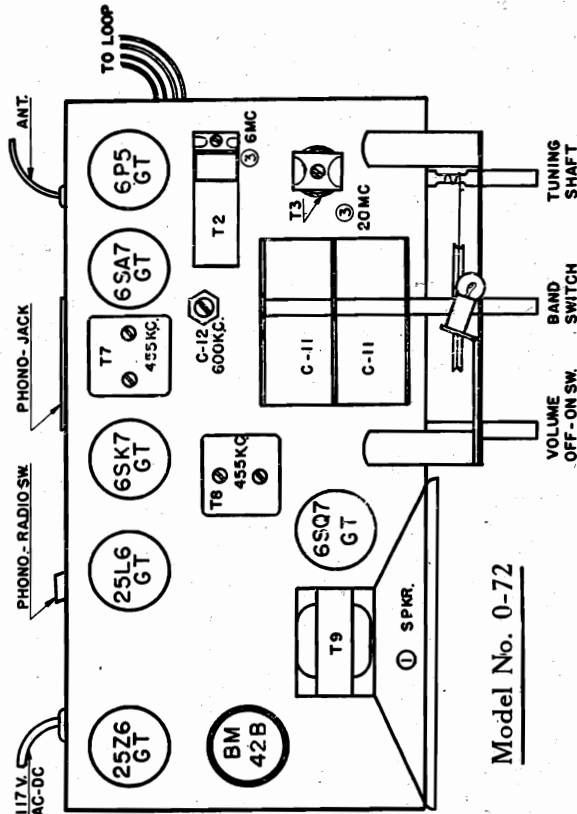

Model No. 0-72

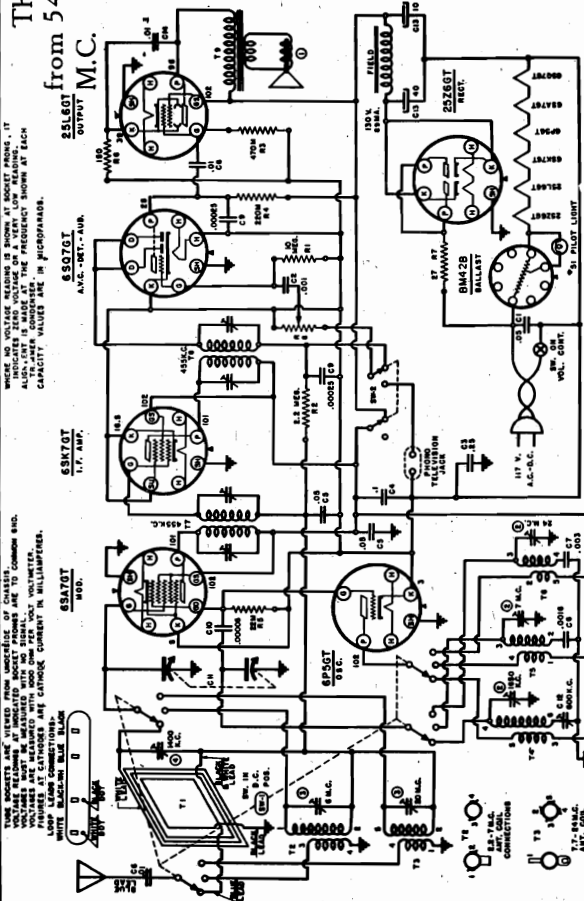

CODE	PART NO.	DESCRIPTION	QTY	DESCRIPTION	QTY	DESCRIPTION	QTY	
G1	6P5	6P5 VACUUM TUBE	1	6P5	6P5 VACUUM TUBE	1	6P5	6P5 VACUUM TUBE
G2	6SA7	6SA7 VACUUM TUBE	1	6SA7	6SA7 VACUUM TUBE	1	6SA7	6SA7 VACUUM TUBE
G3	6SK7	6SK7 VACUUM TUBE	1	6SK7	6SK7 VACUUM TUBE	1	6SK7	6SK7 VACUUM TUBE
G4	2526	2526 VACUUM TUBE	1	2526	2526 VACUUM TUBE	1	2526	2526 VACUUM TUBE
G5	T7	T7 455KC	1	T7	T7 455KC	1	T7	T7 455KC
G6	T8	T8 455KC	1	T8	T8 455KC	1	T8	T8 455KC
G7	T9	T9	1	T9	T9	1	T9	T9
G8	BM42B	BM42B	1	BM42B	BM42B	1	BM42B	BM42B
G9	C-11	C-11	1	C-11	C-11	1	C-11	C-11
G10	C-12	C-12 600KC	1	C-12	C-12 600KC	1	C-12	C-12 600KC
G11	T2	T2	1	T2	T2	1	T2	T2
G12	T3	T3 20MC	1	T3	T3 20MC	1	T3	T3 20MC
G13	SPKR	SPKR	1	SPKR	SPKR	1	SPKR	SPKR

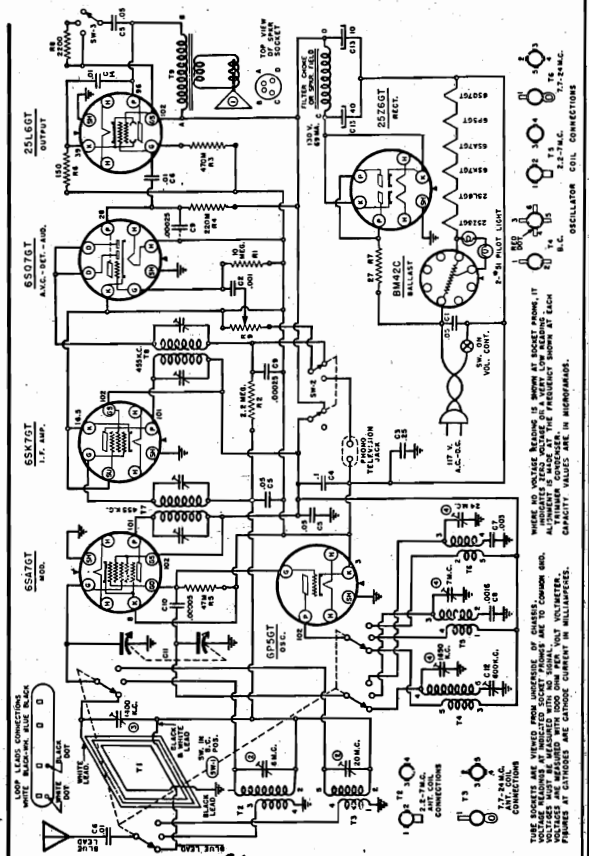


Model No. 0-73

Bands
540 K.C. to 1650 K.C.
2.22 M.C. to 7 M.C.
7.77 M.C. to 24 M.C.

CONVENTIONAL ALIGNMENT

SEE SPECIAL SECTION VOLUME VIII

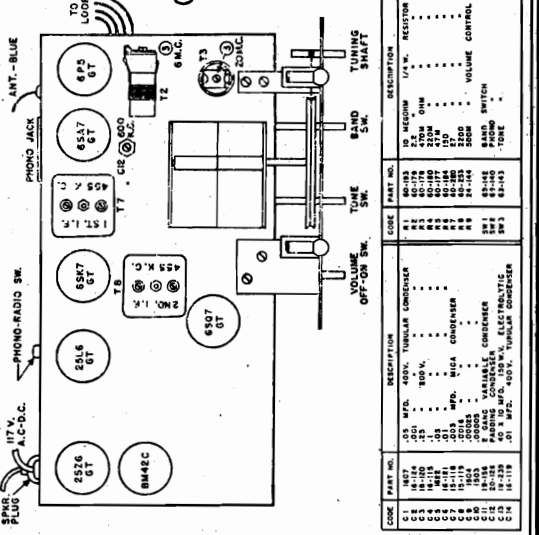


CODE	PART NO.	DESCRIPTION	QTY	DESCRIPTION	QTY	DESCRIPTION	QTY	
G1	6P5	6P5 VACUUM TUBE	1	6P5	6P5 VACUUM TUBE	1	6P5	6P5 VACUUM TUBE
G2	6SA7	6SA7 VACUUM TUBE	1	6SA7	6SA7 VACUUM TUBE	1	6SA7	6SA7 VACUUM TUBE
G3	6SK7	6SK7 VACUUM TUBE	1	6SK7	6SK7 VACUUM TUBE	1	6SK7	6SK7 VACUUM TUBE
G4	2526	2526 VACUUM TUBE	1	2526	2526 VACUUM TUBE	1	2526	2526 VACUUM TUBE
G5	T7	T7 455KC	1	T7	T7 455KC	1	T7	T7 455KC
G6	T8	T8 455KC	1	T8	T8 455KC	1	T8	T8 455KC
G7	T9	T9	1	T9	T9	1	T9	T9
G8	BM42C	BM42C	1	BM42C	BM42C	1	BM42C	BM42C
G9	C-11	C-11	1	C-11	C-11	1	C-11	C-11
G10	C-12	C-12 600KC	1	C-12	C-12 600KC	1	C-12	C-12 600KC
G11	T2	T2	1	T2	T2	1	T2	T2
G12	T3	T3 20MC	1	T3	T3 20MC	1	T3	T3 20MC
G13	SPKR	SPKR	1	SPKR	SPKR	1	SPKR	SPKR


MODEL 0-74
MODEL 0-75

WARWICK MFG. CORP.


Schematics, Voltage, Socket
Alignment, Trimmers

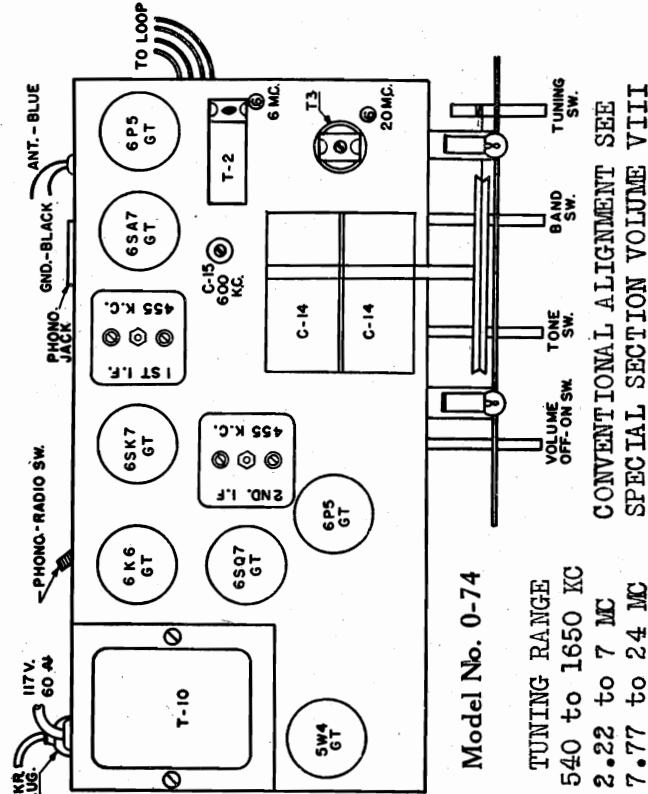

Model No. 0-74
TUNING RANGE
540 to 1650 KC
2.22 to 7 MC
7.77 to 24 MC

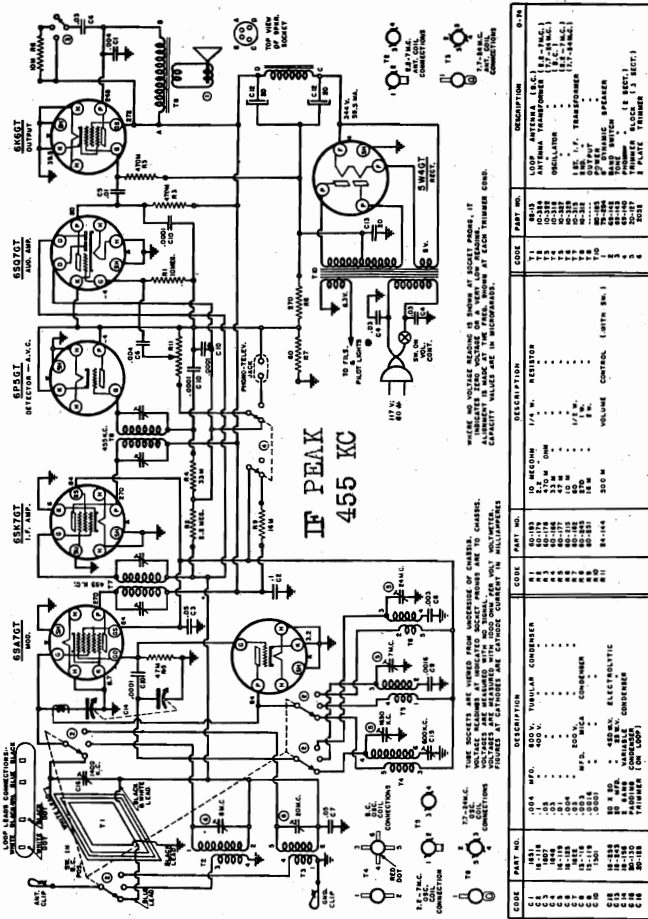

CODE	PART NO.	DESCRIPTION	QTY.
C1	00193	10 MEG. CAP.	1
C2	00194	10 MEG. CAP.	1
C3	00195	10 MEG. CAP.	1
C4	00196	10 MEG. CAP.	1
C5	00197	10 MEG. CAP.	1
C6	00198	10 MEG. CAP.	1
C7	00199	10 MEG. CAP.	1
C8	00200	10 MEG. CAP.	1
C9	00201	10 MEG. CAP.	1
C10	00202	10 MEG. CAP.	1
C11	00203	10 MEG. CAP.	1
C12	00204	10 MEG. CAP.	1
C13	00205	10 MEG. CAP.	1
C14	00206	10 MEG. CAP.	1
C15	00207	10 MEG. CAP.	1
C16	00208	10 MEG. CAP.	1
C17	00209	10 MEG. CAP.	1
C18	00210	10 MEG. CAP.	1
C19	00211	10 MEG. CAP.	1
C20	00212	10 MEG. CAP.	1
C21	00213	10 MEG. CAP.	1
C22	00214	10 MEG. CAP.	1
C23	00215	10 MEG. CAP.	1
C24	00216	10 MEG. CAP.	1
C25	00217	10 MEG. CAP.	1
C26	00218	10 MEG. CAP.	1
C27	00219	10 MEG. CAP.	1
C28	00220	10 MEG. CAP.	1
C29	00221	10 MEG. CAP.	1
C30	00222	10 MEG. CAP.	1
C31	00223	10 MEG. CAP.	1
C32	00224	10 MEG. CAP.	1
C33	00225	10 MEG. CAP.	1
C34	00226	10 MEG. CAP.	1
C35	00227	10 MEG. CAP.	1
C36	00228	10 MEG. CAP.	1
C37	00229	10 MEG. CAP.	1
C38	00230	10 MEG. CAP.	1
C39	00231	10 MEG. CAP.	1
C40	00232	10 MEG. CAP.	1
C41	00233	10 MEG. CAP.	1
C42	00234	10 MEG. CAP.	1
C43	00235	10 MEG. CAP.	1
C44	00236	10 MEG. CAP.	1
C45	00237	10 MEG. CAP.	1
C46	00238	10 MEG. CAP.	1
C47	00239	10 MEG. CAP.	1
C48	00240	10 MEG. CAP.	1
C49	00241	10 MEG. CAP.	1
C50	00242	10 MEG. CAP.	1
C51	00243	10 MEG. CAP.	1
C52	00244	10 MEG. CAP.	1
C53	00245	10 MEG. CAP.	1
C54	00246	10 MEG. CAP.	1
C55	00247	10 MEG. CAP.	1
C56	00248	10 MEG. CAP.	1
C57	00249	10 MEG. CAP.	1
C58	00250	10 MEG. CAP.	1
C59	00251	10 MEG. CAP.	1
C60	00252	10 MEG. CAP.	1
C61	00253	10 MEG. CAP.	1
C62	00254	10 MEG. CAP.	1
C63	00255	10 MEG. CAP.	1
C64	00256	10 MEG. CAP.	1
C65	00257	10 MEG. CAP.	1
C66	00258	10 MEG. CAP.	1
C67	00259	10 MEG. CAP.	1
C68	00260	10 MEG. CAP.	1
C69	00261	10 MEG. CAP.	1
C70	00262	10 MEG. CAP.	1
C71	00263	10 MEG. CAP.	1
C72	00264	10 MEG. CAP.	1
C73	00265	10 MEG. CAP.	1
C74	00266	10 MEG. CAP.	1
C75	00267	10 MEG. CAP.	1
C76	00268	10 MEG. CAP.	1
C77	00269	10 MEG. CAP.	1
C78	00270	10 MEG. CAP.	1
C79	00271	10 MEG. CAP.	1
C80	00272	10 MEG. CAP.	1
C81	00273	10 MEG. CAP.	1
C82	00274	10 MEG. CAP.	1
C83	00275	10 MEG. CAP.	1
C84	00276	10 MEG. CAP.	1
C85	00277	10 MEG. CAP.	1
C86	00278	10 MEG. CAP.	1
C87	00279	10 MEG. CAP.	1
C88	00280	10 MEG. CAP.	1
C89	00281	10 MEG. CAP.	1
C90	00282	10 MEG. CAP.	1
C91	00283	10 MEG. CAP.	1
C92	00284	10 MEG. CAP.	1
C93	00285	10 MEG. CAP.	1
C94	00286	10 MEG. CAP.	1
C95	00287	10 MEG. CAP.	1
C96	00288	10 MEG. CAP.	1
C97	00289	10 MEG. CAP.	1
C98	00290	10 MEG. CAP.	1
C99	00291	10 MEG. CAP.	1
C100	00292	10 MEG. CAP.	1
C101	00293	10 MEG. CAP.	1
C102	00294	10 MEG. CAP.	1
C103	00295	10 MEG. CAP.	1
C104	00296	10 MEG. CAP.	1
C105	00297	10 MEG. CAP.	1
C106	00298	10 MEG. CAP.	1
C107	00299	10 MEG. CAP.	1
C108	00300	10 MEG. CAP.	1
C109	00301	10 MEG. CAP.	1
C110	00302	10 MEG. CAP.	1
C111	00303	10 MEG. CAP.	1
C112	00304	10 MEG. CAP.	1
C113	00305	10 MEG. CAP.	1
C114	00306	10 MEG. CAP.	1
C115	00307	10 MEG. CAP.	1
C116	00308	10 MEG. CAP.	1
C117	00309	10 MEG. CAP.	1
C118	00310	10 MEG. CAP.	1
C119	00311	10 MEG. CAP.	1
C120	00312	10 MEG. CAP.	1
C121	00313	10 MEG. CAP.	1
C122	00314	10 MEG. CAP.	1
C123	00315	10 MEG. CAP.	1
C124	00316	10 MEG. CAP.	1
C125	00317	10 MEG. CAP.	1
C126	00318	10 MEG. CAP.	1
C127	00319	10 MEG. CAP.	1
C128	00320	10 MEG. CAP.	1
C129	00321	10 MEG. CAP.	1
C130	00322	10 MEG. CAP.	1
C131	00323	10 MEG. CAP.	1
C132	00324	10 MEG. CAP.	1
C133	00325	10 MEG. CAP.	1
C134	00326	10 MEG. CAP.	1
C135	00327	10 MEG. CAP.	1
C136	00328	10 MEG. CAP.	1
C137	00329	10 MEG. CAP.	1
C138	00330	10 MEG. CAP.	1
C139	00331	10 MEG. CAP.	1
C140	00332	10 MEG. CAP.	1
C141	00333	10 MEG. CAP.	1
C142	00334	10 MEG. CAP.	1
C143	00335	10 MEG. CAP.	1
C144	00336	10 MEG. CAP.	1
C145	00337	10 MEG. CAP.	1
C146	00338	10 MEG. CAP.	1
C147	00339	10 MEG. CAP.	1
C148	00340	10 MEG. CAP.	1
C149	00341	10 MEG. CAP.	1
C150	00342	10 MEG. CAP.	1
C151	00343	10 MEG. CAP.	1
C152	00344	10 MEG. CAP.	1
C153	00345	10 MEG. CAP.	1
C154	00346	10 MEG. CAP.	1
C155	00347	10 MEG. CAP.	1
C156	00348	10 MEG. CAP.	1
C157	00349	10 MEG. CAP.	1
C158	00350	10 MEG. CAP.	1
C159	00351	10 MEG. CAP.	1
C160	00352	10 MEG. CAP.	1
C161	00353	10 MEG. CAP.	1
C162	00354	10 MEG. CAP.	1
C163	00355	10 MEG. CAP.	1
C164	00356	10 MEG. CAP.	1
C165	00357	10 MEG. CAP.	1
C166	00358	10 MEG. CAP.	1
C167	00359	10 MEG. CAP.	1
C168	00360	10 MEG. CAP.	1
C169	00361	10 MEG. CAP.	1
C170	00362	10 MEG. CAP.	1
C171	00363	10 MEG. CAP.	1
C172	00364	10 MEG. CAP.	1
C173	00365	10 MEG. CAP.	1
C174	00366	10 MEG. CAP.	1
C175	00367	10 MEG. CAP.	1
C176	00368	10 MEG. CAP.	1
C177	00369	10 MEG. CAP.	1
C178	00370	10 MEG. CAP.	1
C179	00371	10 MEG. CAP.	1
C180	00372	10 MEG. CAP.	1
C181	00373	10 MEG. CAP.	1
C182	00374	10 MEG. CAP.	1
C183	00375	10 MEG. CAP.	1
C184	00376	10 MEG. CAP.	1
C185	00377	10 MEG. CAP.	1
C186	00378	10 MEG. CAP.	1
C187	00379	10 MEG. CAP.	1
C188	00380	10 MEG. CAP.	1
C189	00381	10 MEG. CAP.	1
C190	00382	10 MEG. CAP.	1
C191	00383	10 MEG. CAP.	1
C192	00384	10 MEG. CAP.	1
C193	00385	10 MEG. CAP.	1
C194	00386	10 MEG. CAP.	1
C195	00387	10 MEG. CAP.	1
C196	00388	10 MEG. CAP.	1
C197	00389	10 MEG. CAP.	1
C198	00390	10 MEG. CAP.	1
C199	00391	10 MEG. CAP.	1
C200	00392	10 MEG. CAP.	1

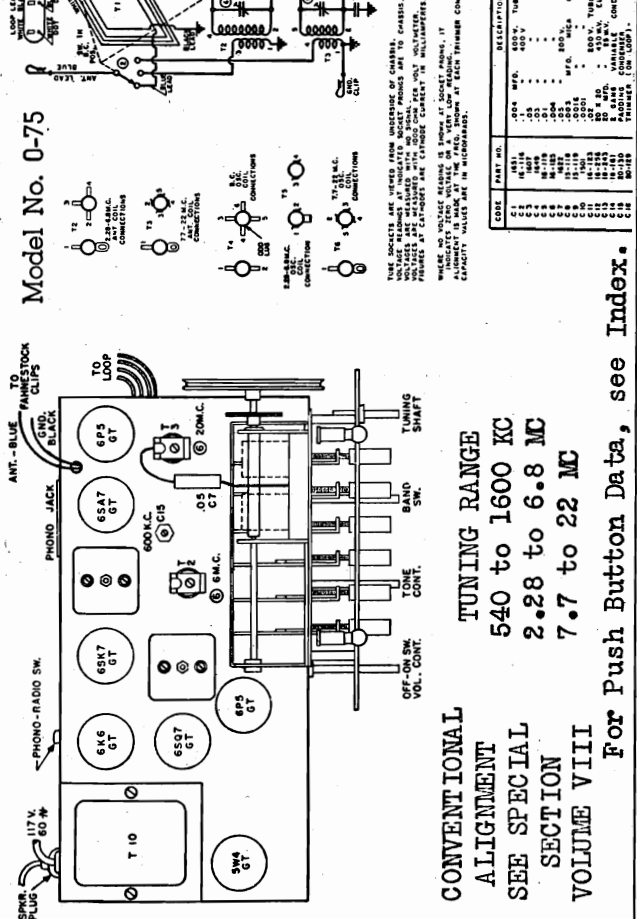

Model No. 0-75
TUNING RANGE
540 to 1600 KC
2.28 to 6.8 MC
7.7 to 22 MC

CODE	PART NO.	DESCRIPTION	QTY.
C1	00193	10 MEG. CAP.	1
C2	00194	10 MEG. CAP.	1
C3	00195	10 MEG. CAP.	1
C4	00196	10 MEG. CAP.	1
C5	00197	10 MEG. CAP.	1
C6	00198	10 MEG. CAP.	1
C7	00199	10 MEG. CAP.	1
C8	00200	10 MEG. CAP.	1
C9	00201	10 MEG. CAP.	1
C10	00202	10 MEG. CAP.	1
C11	00203	10 MEG. CAP.	1
C12	00204	10 MEG. CAP.	1
C13	00205	10 MEG. CAP.	1
C14	00206	10 MEG. CAP.	1
C15	00207	10 MEG. CAP.	1
C16	00208	10 MEG. CAP.	1
C17	00209	10 MEG. CAP.	1
C18	00210	10 MEG. CAP.	1
C19	00211	10 MEG. CAP.	1
C20	00212	10 MEG. CAP.	1
C21	00213	10 MEG. CAP.	1
C22	00214	10 MEG. CAP.	1
C23	00215	10 MEG. CAP.	1
C24	00216	10 MEG. CAP.	1
C25	00217	10 MEG. CAP.	1
C26	00218	10 MEG. CAP.	1
C27	00219	10 MEG. CAP.	1
C28	00220	10 MEG. CAP.	1
C29	00221	10 MEG. CAP.	1
C30	00222	10 MEG. CAP.	1
C31	00223	10 MEG. CAP.	1
C32	00224	10 MEG. CAP.	1
C33	00225	10 MEG. CAP.	1
C34	00226	10 MEG. CAP.	1
C35	00227	10 MEG. CAP.	1
C36	00228	10 MEG. CAP.	1
C37	00229	10 MEG. CAP.	1
C38	00230	10 MEG. CAP.	1
C39	00231	10 MEG. CAP.	1
C40	00232	10 MEG. CAP.	1
C41	00233	10 MEG. CAP.	1
C42	00234	10 MEG. CAP.	1
C43	00235	10 MEG. CAP.	1
C44	00236	10 MEG. CAP.	1
C45	00237	10 MEG. CAP.	1
C46	00238	10 MEG. CAP.	1
C47	00239	10 MEG. CAP.	1
C48	00240	10 MEG. CAP.	1
C49	00241	10 MEG. CAP.	1
C50	00242	10 MEG. CAP.	1
C51</			


WARWICK MFG. CORP.

MODEL 0-76
MODEL 0-78
Schematics, Voltage, Socket
Alignment, Trimmers

Model No. 0-78

This model has been designed to cover two separate frequency bands, a broadcast band from 540 K. C. to 1650 K. C. and a short wave band from 5.7 to 18.4 M.C.

CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII

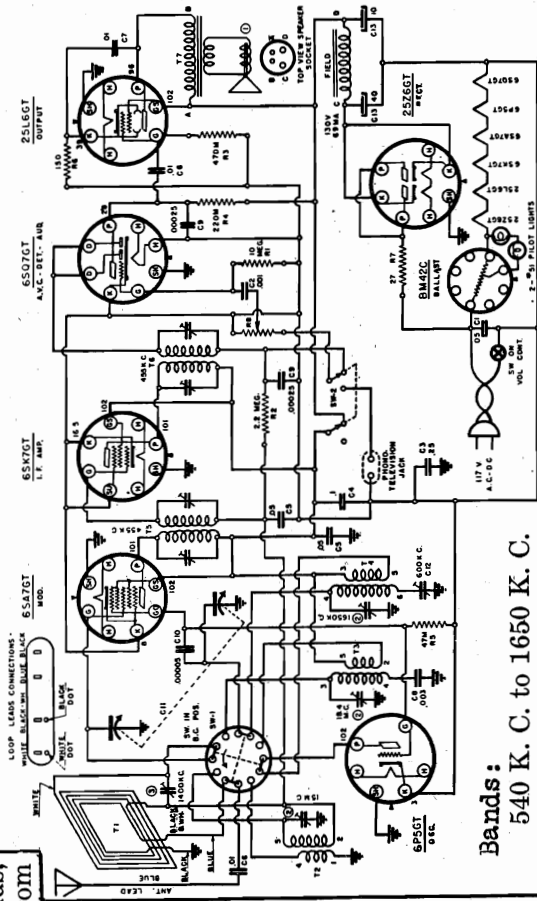

Bands:
540 K. C. to 1650 K. C.
5.7 to 18.4 M.C.

IF PEAK 455 KC

WHERE NO VOLTAGE READINGS IS SHOWN AT SOCKET PRONG, IT INDICATES ZERO VOLTAGE OR A VERY LOW RESISTANCE. VOLTAGES ARE MEASURED WITH 500 OHM PER VOLT METER. FIGURES AT CATHODES ARE CATHODE CURRENT IN MILLIAMPERES. CAPACITANCE VALUES ARE IN MICROFARADS.

CODE	PART NO.	DESCRIPTION	CODE	PART NO.	DESCRIPTION
R1	50-178	10 MEG OHM	T1	10-323	10 MEG OHM
R2	50-179	10 MEG OHM	T2	10-323	10 MEG OHM
R3	50-180	10 MEG OHM	T3	10-323	10 MEG OHM
R4	50-181	10 MEG OHM	T4	10-323	10 MEG OHM
R5	50-182	10 MEG OHM	T5	10-323	10 MEG OHM
R6	50-183	10 MEG OHM	T6	10-323	10 MEG OHM
R7	50-184	10 MEG OHM	T7	10-323	10 MEG OHM
R8	50-185	10 MEG OHM	T8	10-323	10 MEG OHM
R9	50-186	10 MEG OHM	T9	10-323	10 MEG OHM
R10	50-187	10 MEG OHM	T10	10-323	10 MEG OHM
R11	50-188	10 MEG OHM	T11	10-323	10 MEG OHM
R12	50-189	10 MEG OHM	T12	10-323	10 MEG OHM
R13	50-190	10 MEG OHM	T13	10-323	10 MEG OHM
R14	50-191	10 MEG OHM	T14	10-323	10 MEG OHM
R15	50-192	10 MEG OHM	T15	10-323	10 MEG OHM
R16	50-193	10 MEG OHM	T16	10-323	10 MEG OHM
R17	50-194	10 MEG OHM	T17	10-323	10 MEG OHM
R18	50-195	10 MEG OHM	T18	10-323	10 MEG OHM
R19	50-196	10 MEG OHM	T19	10-323	10 MEG OHM
R20	50-197	10 MEG OHM	T20	10-323	10 MEG OHM
R21	50-198	10 MEG OHM	T21	10-323	10 MEG OHM
R22	50-199	10 MEG OHM	T22	10-323	10 MEG OHM
R23	50-200	10 MEG OHM	T23	10-323	10 MEG OHM
R24	50-201	10 MEG OHM	T24	10-323	10 MEG OHM
R25	50-202	10 MEG OHM	T25	10-323	10 MEG OHM
R26	50-203	10 MEG OHM	T26	10-323	10 MEG OHM
R27	50-204	10 MEG OHM	T27	10-323	10 MEG OHM
R28	50-205	10 MEG OHM	T28	10-323	10 MEG OHM
R29	50-206	10 MEG OHM	T29	10-323	10 MEG OHM
R30	50-207	10 MEG OHM	T30	10-323	10 MEG OHM
R31	50-208	10 MEG OHM	T31	10-323	10 MEG OHM
R32	50-209	10 MEG OHM	T32	10-323	10 MEG OHM
R33	50-210	10 MEG OHM	T33	10-323	10 MEG OHM
R34	50-211	10 MEG OHM	T34	10-323	10 MEG OHM
R35	50-212	10 MEG OHM	T35	10-323	10 MEG OHM
R36	50-213	10 MEG OHM	T36	10-323	10 MEG OHM
R37	50-214	10 MEG OHM	T37	10-323	10 MEG OHM
R38	50-215	10 MEG OHM	T38	10-323	10 MEG OHM
R39	50-216	10 MEG OHM	T39	10-323	10 MEG OHM
R40	50-217	10 MEG OHM	T40	10-323	10 MEG OHM
R41	50-218	10 MEG OHM	T41	10-323	10 MEG OHM
R42	50-219	10 MEG OHM	T42	10-323	10 MEG OHM
R43	50-220	10 MEG OHM	T43	10-323	10 MEG OHM
R44	50-221	10 MEG OHM	T44	10-323	10 MEG OHM
R45	50-222	10 MEG OHM	T45	10-323	10 MEG OHM
R46	50-223	10 MEG OHM	T46	10-323	10 MEG OHM
R47	50-224	10 MEG OHM	T47	10-323	10 MEG OHM
R48	50-225	10 MEG OHM	T48	10-323	10 MEG OHM
R49	50-226	10 MEG OHM	T49	10-323	10 MEG OHM
R50	50-227	10 MEG OHM	T50	10-323	10 MEG OHM
R51	50-228	10 MEG OHM	T51	10-323	10 MEG OHM
R52	50-229	10 MEG OHM	T52	10-323	10 MEG OHM
R53	50-230	10 MEG OHM	T53	10-323	10 MEG OHM
R54	50-231	10 MEG OHM	T54	10-323	10 MEG OHM
R55	50-232	10 MEG OHM	T55	10-323	10 MEG OHM
R56	50-233	10 MEG OHM	T56	10-323	10 MEG OHM
R57	50-234	10 MEG OHM	T57	10-323	10 MEG OHM
R58	50-235	10 MEG OHM	T58	10-323	10 MEG OHM
R59	50-236	10 MEG OHM	T59	10-323	10 MEG OHM
R60	50-237	10 MEG OHM	T60	10-323	10 MEG OHM
R61	50-238	10 MEG OHM	T61	10-323	10 MEG OHM
R62	50-239	10 MEG OHM	T62	10-323	10 MEG OHM
R63	50-240	10 MEG OHM	T63	10-323	10 MEG OHM
R64	50-241	10 MEG OHM	T64	10-323	10 MEG OHM
R65	50-242	10 MEG OHM	T65	10-323	10 MEG OHM
R66	50-243	10 MEG OHM	T66	10-323	10 MEG OHM
R67	50-244	10 MEG OHM	T67	10-323	10 MEG OHM
R68	50-245	10 MEG OHM	T68	10-323	10 MEG OHM
R69	50-246	10 MEG OHM	T69	10-323	10 MEG OHM
R70	50-247	10 MEG OHM	T70	10-323	10 MEG OHM
R71	50-248	10 MEG OHM	T71	10-323	10 MEG OHM
R72	50-249	10 MEG OHM	T72	10-323	10 MEG OHM
R73	50-250	10 MEG OHM	T73	10-323	10 MEG OHM
R74	50-251	10 MEG OHM	T74	10-323	10 MEG OHM
R75	50-252	10 MEG OHM	T75	10-323	10 MEG OHM
R76	50-253	10 MEG OHM	T76	10-323	10 MEG OHM
R77	50-254	10 MEG OHM	T77	10-323	10 MEG OHM
R78	50-255	10 MEG OHM	T78	10-323	10 MEG OHM
R79	50-256	10 MEG OHM	T79	10-323	10 MEG OHM
R80	50-257	10 MEG OHM	T80	10-323	10 MEG OHM
R81	50-258	10 MEG OHM	T81	10-323	10 MEG OHM
R82	50-259	10 MEG OHM	T82	10-323	10 MEG OHM
R83	50-260	10 MEG OHM	T83	10-323	10 MEG OHM
R84	50-261	10 MEG OHM	T84	10-323	10 MEG OHM
R85	50-262	10 MEG OHM	T85	10-323	10 MEG OHM
R86	50-263	10 MEG OHM	T86	10-323	10 MEG OHM
R87	50-264	10 MEG OHM	T87	10-323	10 MEG OHM
R88	50-265	10 MEG OHM	T88	10-323	10 MEG OHM
R89	50-266	10 MEG OHM	T89	10-323	10 MEG OHM
R90	50-267	10 MEG OHM	T90	10-323	10 MEG OHM
R91	50-268	10 MEG OHM	T91	10-323	10 MEG OHM
R92	50-269	10 MEG OHM	T92	10-323	10 MEG OHM
R93	50-270	10 MEG OHM	T93	10-323	10 MEG OHM
R94	50-271	10 MEG OHM	T94	10-323	10 MEG OHM
R95	50-272	10 MEG OHM	T95	10-323	10 MEG OHM
R96	50-273	10 MEG OHM	T96	10-323	10 MEG OHM
R97	50-274	10 MEG OHM	T97	10-323	10 MEG OHM
R98	50-275	10 MEG OHM	T98	10-323	10 MEG OHM
R99	50-276	10 MEG OHM	T99	10-323	10 MEG OHM
R100	50-277	10 MEG OHM	T100	10-323	10 MEG OHM
R101	50-278	10 MEG OHM	T101	10-323	10 MEG OHM
R102	50-279	10 MEG OHM	T102	10-323	10 MEG OHM
R103	50-280	10 MEG OHM	T103	10-323	10 MEG OHM
R104	50-281	10 MEG OHM	T104	10-323	10 MEG OHM
R105	50-282	10 MEG OHM	T105	10-323	10 MEG OHM
R106	50-283	10 MEG OHM	T106	10-323	10 MEG OHM
R107	50-284	10 MEG OHM	T107	10-323	10 MEG OHM
R108	50-285	10 MEG OHM	T108	10-323	10 MEG OHM
R109	50-286	10 MEG OHM	T109	10-323	10 MEG OHM
R110	50-287	10 MEG OHM	T110	10-323	10 MEG OHM
R111	50-288	10 MEG OHM	T111	10-323	10 MEG OHM
R112	50-289	10 MEG OHM	T112	10-323	10 MEG OHM
R113	50-290	10 MEG OHM	T113	10-323	10 MEG OHM
R114	50-291	10 MEG OHM	T114	10-323	10 MEG OHM
R115	50-292	10 MEG OHM	T115	10-323	10 MEG OHM
R116	50-293	10 MEG OHM	T116	10-323	10 MEG OHM
R117	50-294	10 MEG OHM	T117	10-323	10 MEG OHM
R118	50-295	10 MEG OHM	T118	10-323	10 MEG OHM
R119	50-296	10 MEG OHM	T119	10-323	10 MEG OHM
R120	50-297	10 MEG OHM	T120	10-323	10 MEG OHM
R121	50-298	10 MEG OHM	T121	10-323	10 MEG OHM
R122	50-299	10 MEG OHM	T122	10-323	10 MEG OHM
R123	50-300	10 MEG OHM	T123	10-323	10 MEG OHM
R124	50-301	10 MEG OHM	T124	10-323	10 MEG OHM
R125	50-302	10 MEG OHM	T125	10-323	10 MEG OHM
R126	50-303	10 MEG OHM	T126	10-323	10 MEG OHM
R127	50-304	10 MEG OHM	T127	10-323	10 MEG OHM
R128	50-305	10 MEG OHM	T128	10-323	10 MEG OHM
R129	50-306	10 MEG OHM	T129	10-323	10 MEG OHM
R130	50-307	10 MEG OHM	T130	10-323	10 MEG OHM
R131	50-308	10 MEG OHM	T131	10-323	10 MEG OHM
R132	50-309	10 MEG OHM	T132	10-323	10 MEG OHM
R133	50-310	10 MEG OHM	T133	10-323	10 MEG OHM
R134	50-311	10 MEG OHM	T134	10-323	10 MEG OHM
R135	50-312	10 MEG OHM	T135	10-323	10 MEG OHM
R136	50-313	10 MEG OHM	T136	10-323	10 MEG OHM
R137	50-314	10 MEG OHM	T137	10-323	10 MEG OHM
R138	50-315	10 MEG OHM	T138	10-323	10 MEG OHM
R139	50-316	10 MEG OHM	T139	10-323	10 MEG OHM
R140	50-317	10 MEG OHM	T140	10-323	10 MEG OHM
R141	50-318	10 MEG OHM	T141	10-323	10 MEG OHM
R142	50-319	10 MEG OHM	T142	10-323	10 MEG OHM
R143	50-320	10 MEG OHM	T143	10-323	10 MEG OHM
R144	50-321	10 MEG OHM	T144	10-323	10 MEG OHM
R145	50-322	10 MEG OHM	T145	10-323	10 MEG OHM
R146	50-323	10 MEG OHM	T146	10-323	10 MEG OHM
R147	50-324	10 MEG OHM	T147	10-323	10 MEG OHM
R148	50-325	10 MEG OHM	T148	10-323	10 MEG OHM
R149	50-326	10 MEG OHM	T149	10-323	10 MEG OHM
R150	50-327	10 MEG OHM	T150	10-323	10 MEG OHM
R151	50-328	10 MEG OHM	T151	10-323	10 MEG OHM
R152	50-329	10 MEG OHM	T152	10-323	10 MEG OHM
R153	50-330	10 MEG OHM	T153	10-323	10 MEG OHM
R154	50-331	10 MEG OHM	T154	10-323	10 MEG OHM
R155	50-332	10 MEG OHM	T155	10-323	10 MEG OHM
R156	50-333	10 MEG OHM	T156	10-323	10 MEG OHM
R157	50-334	10 MEG OHM	T157	10-323	10 MEG OHM
R158	50-335	10 MEG OHM	T158	10-323	10 MEG OHM
R159	50-336	10 MEG OHM	T159	10-323	10 MEG OHM
R160	50-337	10 MEG OHM	T160	10-323	10 MEG OHM
R161	50-338	10 MEG OHM	T161	10-323	10 MEG OHM
R162	50-339	10 MEG OHM	T162	10-323	10 MEG OHM
R1					

WARWICK MFG. CORP.

MODELS 9-41, 9-44, 406
Schematic, Voltage, Socket
Alignment, Trimmers

Location	Part No.	Description	Selling Price Each
L3	1011232128	Cable-Battery	.45
L2	101373509	Caps-Grid Small	Doz. .10
L1	1012739257	Drum & Lever Assem.	.40
	1014052127	Knob-Tuning, Ivory or Cream & Tan	.15
	1014052132	Knob-Volume, Ivory or Cream & Tan	.15
	101318901	Lamp-Pilot No. 40	.15
	1012739248	Lever-Driver	.05
	1012739247	Link-Connecting	.05
	1011633218	Choke-Filament	.20
	1011610246	Choke-R.F. (B)	.20
	1011633217	Choke-Vibrator	.20
	101373516	Clamps-Battery	.20
	1012216127	Condenser-Buffer .004 mfd. 1000V	.25
		Condenser-.05 mfd. 400V Tub.	.25
		Condenser-.004 mfd. 400V Tub.	.25
		Condenser-.001 mfd. 400V Tub.	.25
		Condenser-.5 mfd. 200V Tub.	.25
		Condenser-.25 mfd. 200V Tub.	.25
		Condenser-.1 mfd. 200V Tub.	.25
		Condenser-.05 mfd. 200V Tub.	.25
		Condenser-.0005 mfd. Mica	.25
		Condenser-.00025 mfd. Mica	.25
		Condenser-.0001 mfd. Mica	.25
	1012118286	Condenser-Electrolytic 40x16 mfd. 200V	1.00
	1012019132	Condenser-Variable C14 & C15	2.05
	1012524124	Control-Volume 500M ohm	.75
1	T5	1015179256 Speaker-5" P. M. with Output Transformer	5.00
	1012770110	Spring-Drive	.05
	1012670111	Spring-Ribbon	.05
	1012770105	Spring-String	.05
T1	1011810239	Transformer-Antenna	.45
T2	1011810240	Transformer-Oscillator	.30
T3	1015510253	Transformer-1st I.F.	1.25
T4	1015710252	Transformer-2nd I.F.	.80
T6	1016580160	Transformer-Power, Vib.	1.75
	1013722112	Tripoints-Back Panel	Doz. .15
	1013722103	Tripoints-Ribbon	Doz. .15
	10127957	Tuner-4 Button	1.20
2	1016234103	Vibrator	4.00
	10128866	Washers-"C"	Doz. .10

*When ordering Speaker output transformer refer to number stamped on speaker frame.

1012752131 Push Button & Stems, Cream & Tan or Ivory

R1 Resistors-10 meg ohm 1/3W

R2 Resistors-1 meg ohm 1/3W

R3 Resistors-220M ohm 1/3W

R4 Resistors-47M ohm 1/3W

R5 Resistors-22M ohm 1/3W


R6 Resistors-15M ohm 1/3W

R7 Resistors-100 ohm 1/3W

R8 Resistors-1500 ohm 1/2W

R9 Resistors-220 ohm 1/2W

PRICES ARE SUBJECT TO CHANGE WITHOUT NOTICE

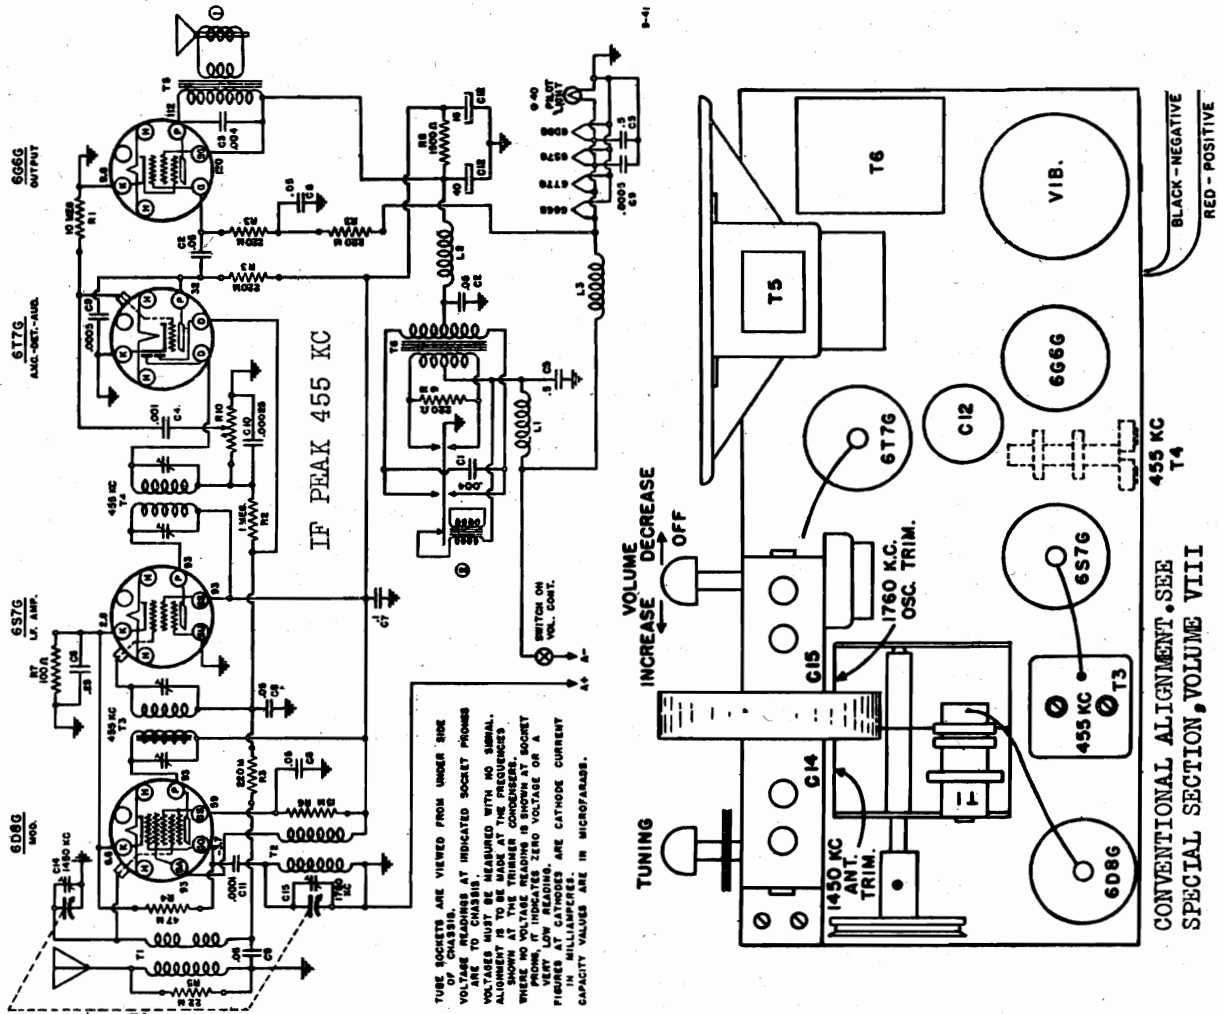

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. PIN NUMBERS AS INDICATED SOCKET PINNING VOLTAGES MUST BE MEASURED WITH NO SIGNAL. ALIGNMENT IS TO BE MADE AT THE FREQUENCIES WHERE NO VOLTAGE READING IS SHOWN AT SOCKET POINTS. "0" INDICATES ZERO VOLTAGE OR A VERY LOW READING. CAPACITANCE VALUES ARE IN MICROFARADS. CAPACITY VALUES ARE IN MILLIFARADS.

TUNING
INCREASE
VOLUME DECREASE
OFF

CONVENTIONAL ALIGNMENT. SEE SPECIAL SECTION, VOLUME VIII

FOR SETTING UP PUSH BUTTONS - SEE INDEX

MODELS 9-41, 9-44, 406


MODEL 9-42 MODELS 9-61, 9-63, 630, 631

WARWICK MFG. CORP.

MODELS 9-51, 9-52, 9-54, 542


Schematic, Voltage, Socket Trimmers, Tuner

Tuner Data

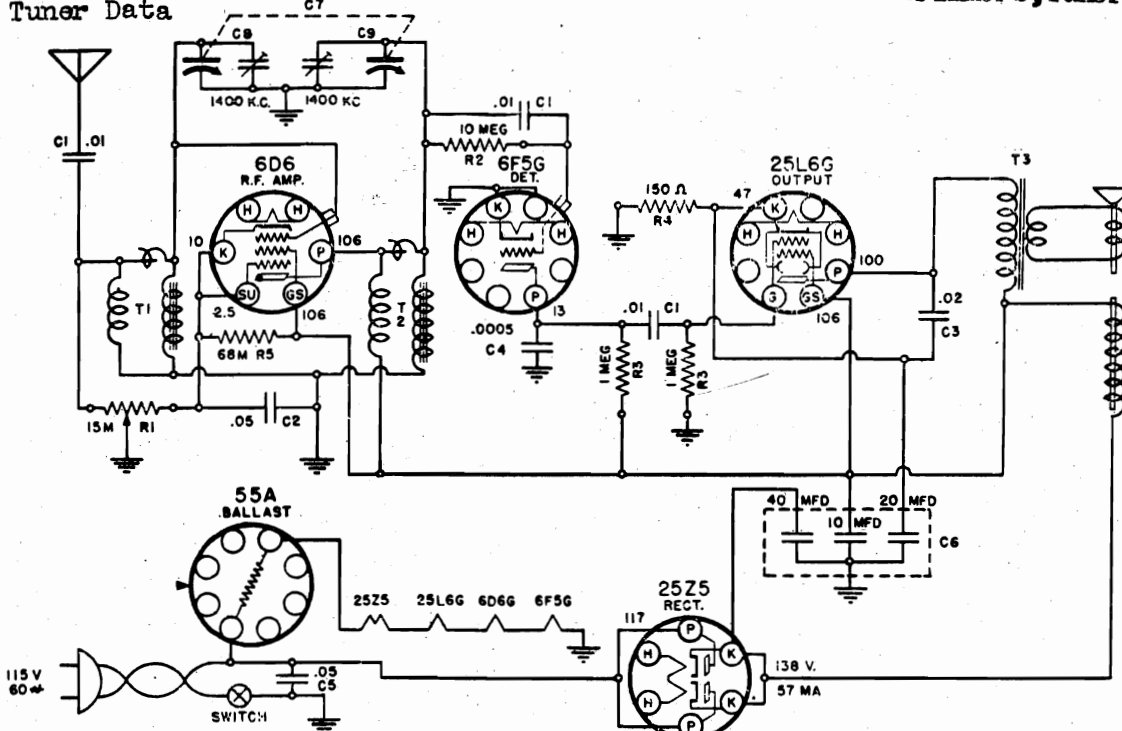


A ground connection is of no importance and therefore has been eliminated WHERE NO VOLTAGE READING IS SHOWN AT SOCKET PRONGS, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. ALIGNMENT IS TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMER CONDENSERS. CAPACITY VALUES ARE IN MICROFARADS.

R.F. TRIM. 1400 K.C.

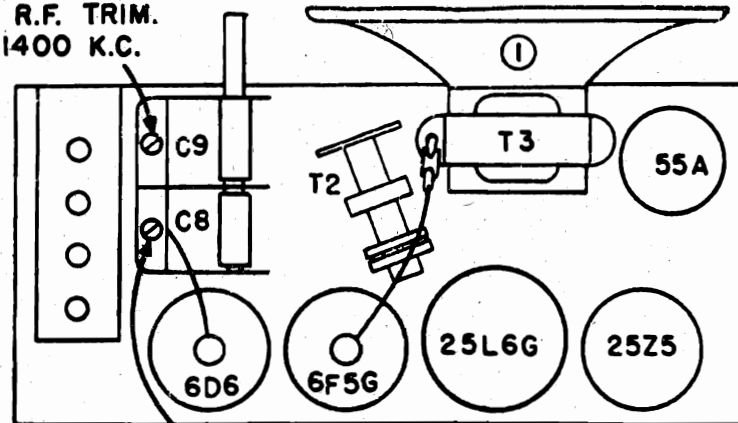

ANT. TRIM. 1400 K.C.

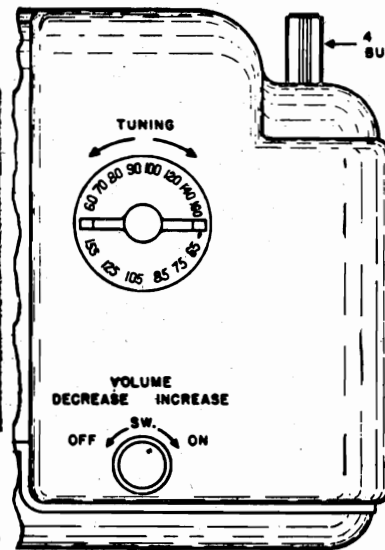

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS WITH A 1000 OHM PER VOLT VOLTMETER. VOLTAGES MUST BE MEASURED WITH NO SIGNAL. FIGURES AT CATHODES ARE CATHODE CURRENT IN MILLIAMPERES.


PUSH BUTTON DATA for MODELS 9-41, 9-44, 406; 9-42; 9-61, 9-63, 9-64, 630, 631; 9-51, 9-52, 9-54, 542(1938):

SETTING PUSH-BUTTONS



1. By means of the Station Selector Knob, tune in WITH THE RIGHT HAND AS ACCURATELY AS POSSIBLE the station having the highest frequency—that is, your selected station which is tuned in nearest number 160 on the Station Selector Knob.
 2. After the station has been tuned in accurately with the right hand, continue to hold it in its exact position firmly, and with the left hand loosen the Push-Button to be set up for that station by unscrewing the Push-Button about one turn to the left (counter-clockwise).
 3. Continuing to hold the Station Selector Knob in its exact position, PUSH THE PUSH-BUTTON IN ALL THE WAY with the left hand.
 4. After the Push-Button has been depressed all the way, tighten it gently toward the right (clockwise). Release Push-Button slowly and when in normal position grip button and tighten firmly.
- The Push-Button tuning system is now correctly set up for your first selected station of highest frequency and the Call Letter Tab for this station should be in the Push-button nearest the rear of the receiver.
- Follow through with this same procedure, setting up the other 3 stations in the order of their frequency—that is, the second station set up will be second highest in frequency and the third station set up will be third highest in frequency.
- Carefully check each Push-Button for the accuracy of its setting. If, when tuning in any station with its Automatic Push-Button it does not have equal volume or clarity to that obtained with manual tuning, this may indicate the automatic adjustment for that station was not made accurately. Should there be any inaccuracy in any one of the Push-Button adjustments, correction can be made by repeating the above procedure for that button only. Do not reset those Push-Buttons that are accurately adjusted.
- No further adjustments are necessary to operate your radio automatically or manually. To receive any one of your selected stations for automatic operation, merely push in ALL THE WAY the Button set up for that station.
- To receive all other stations in the regular manner turn the tuning knob to the frequency of the station desired.

WARWICK MFG. CORP.

MODEL 9-42
Schematic, Voltage, Socket
Alignment, Trimmers

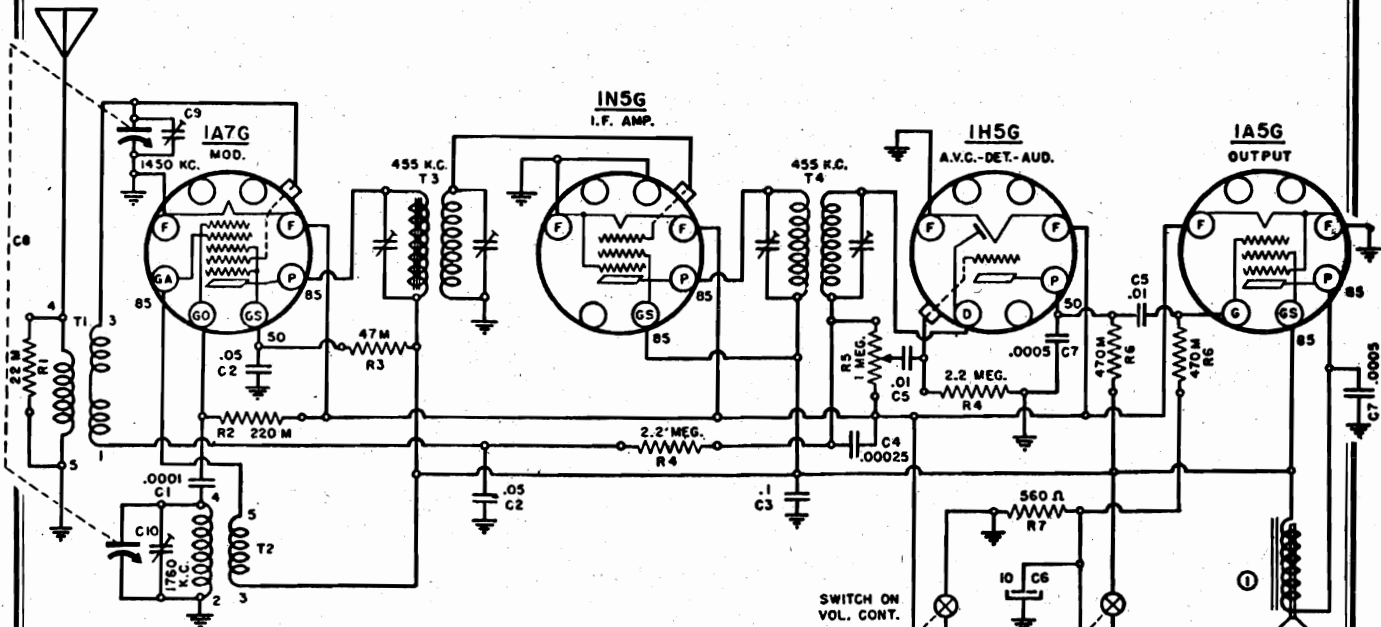


TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. VOLTAGES MUST BE MEASURED WITH NO SIGNAL. ALIGNMENT IS TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMER COND. WHERE NO VOLTAGE READING IS SHOWN AT SOCKET PRONG, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. CAPACITY VALUES ARE IN MICROFARADS.

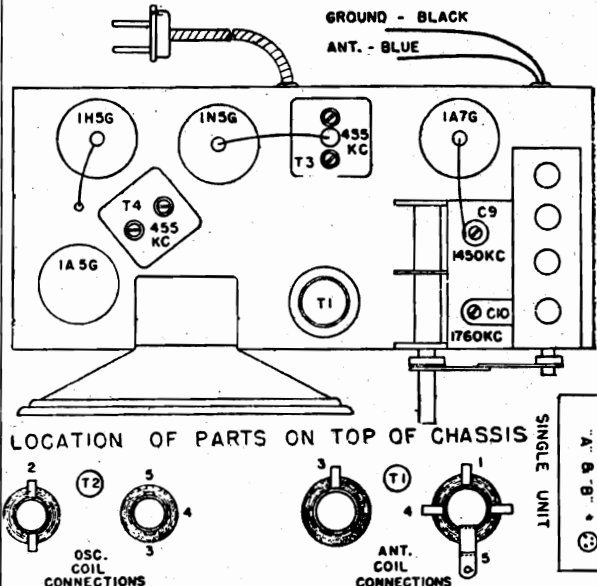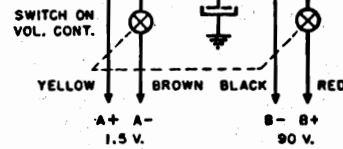

IF PEAK 455 KC

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII

FOR PUSH BUTTON DATA - SEE INDEX

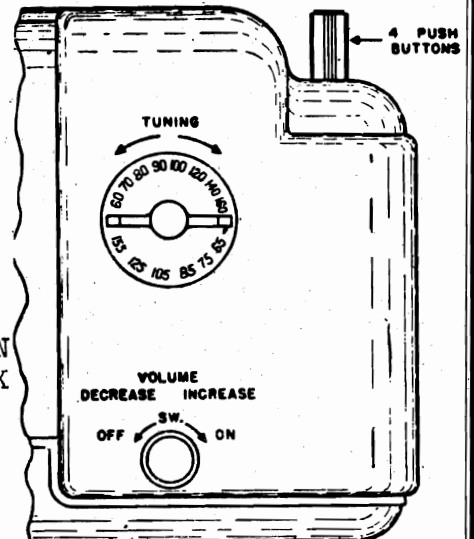

Part No.	Description	Price Each
1011242184	Cabinet—Molded, Walnut	2.65
1011323130	Cable—Battery	.62
101373509	Clips—Grid	Doz. .15
C1	Condenser—.0001 mfd. Mica	.25
C2	Condenser—.05 mfd. 200 V. Tub.	.25
C3	Condenser—.1 mfd. 200 V. Tub.	.25
C4	Condenser—.00025 mfd. Mica	.25
C5	Condenser—.01 mfd. 400 V. Tub.	.25
C6	1012118235 Condenser—Elec. 10 mfd. 35 Volts.	.50
C7	Condenser—.0005 mfd. Mica	.25
C8	1012019134 Condenser—Variable C9 and C10.	.80
R5	1012524126 Control—Volume 1 meg ohm	.90
	101374710 Grommet—Rubber 3/8"	Doz. .20
	101374700 Grommet—Rubber 1/4"	Doz. .20
	1014067367 Knob—Tuning, Ivory or Cream & Tan	.38
	1014052116 Knob—Volume, Ivory or Cream & Tan	.15

1012752129	Knob—(Push Button) & Stem, Ivory or Cream and Tan	.15
	Resistor—22 M ohm 1/3 W	.20
	Resistor—220 M ohm 1/3 W	.20
	Resistor—47 M ohm 1/3 W	.20
	Resistor—2.2 meg ohm 1/3 W	.20
	Resistor—470 M ohm 1/3 W	.20
	Resistor—560 ohm 1/3 W	.20
10151179260	Speaker—5" Permanic	2.40
1012770109	Spring	.05
1011810258	Transformer—Antenna	.75
1011810257	Transformer—Oscillator	.75
1015510251	Transformer—1st I.F.	1.50
1015710259	Transformer—2nd I.F.	1.25
1013722112	Tri-points—Back panel	Doz. .15
101289956	Tuner	1.30


ALL PRICES ARE SUBJECT TO CHANGE WITHOUT NOTICE

MODELS 9-61, 9-63, 9-64
630, 631



WARWICK MFG. CORP.

Schematic, Voltage, Socket
Alignment, Trimmers

FOR TUNER DATA, SEE INDEX

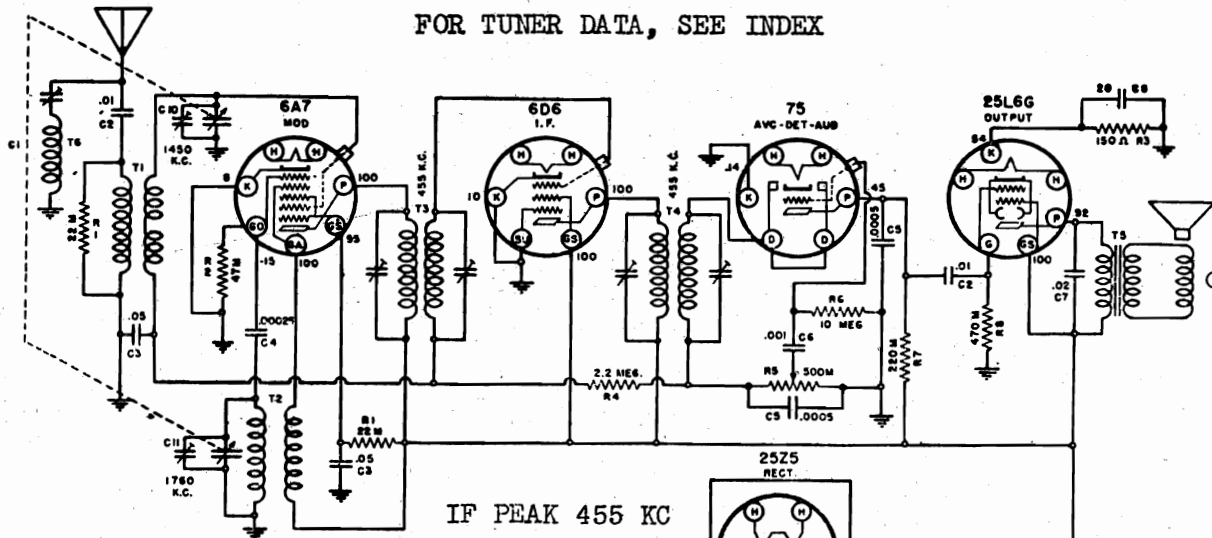

NOTES
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. VOLTAGES MUST BE MEASURED WITH NO SIGNAL. ALIGNMENT IS TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMER CONDENSERS. WHERE NO VOLTAGE READING IS SHOWN AT SOCKET PRONG, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. FIGURES AT CATHODES ARE CATHODE CURRENT IN MILLIAMPERES. CAPACITY VALUES ARE IN MICROFARADS.

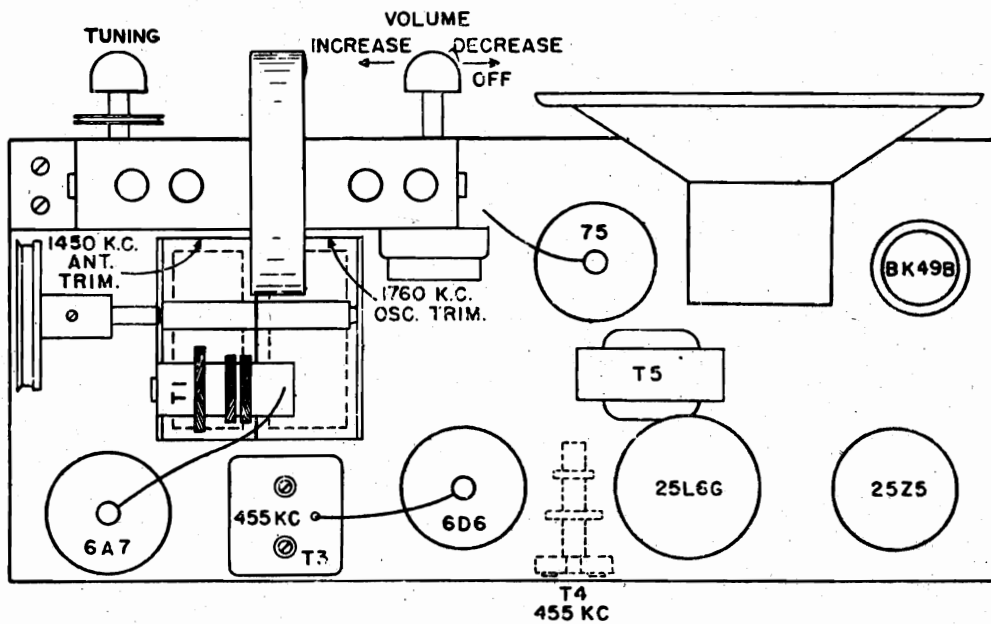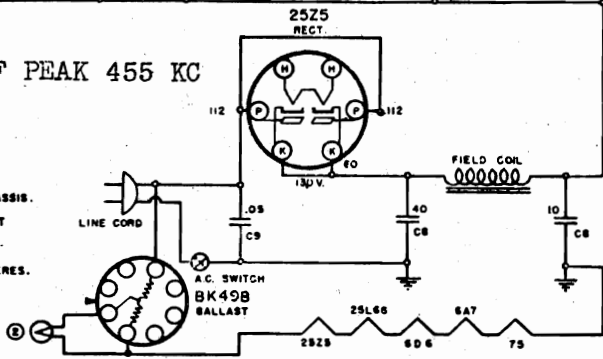

FOR CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII


POWER SUPPLY

The receiver is designed for operation from 105-130 volt Alternating Current (A.C.) supply or a 105-130 volt Direct Current (D.C.) supply. Never connect the receiver to any supply having a higher voltage than that specified on the sticker. If you are not sure of the power supply voltage at your home, your Power Company will furnish the information.

When using a D.C. supply allow sufficient time for tubes to warm up (approximately 1½ minutes), and if at that time the receiver does not operate, remove the line cord plug from the socket and reverse. Replace plug in the reverse position and allow tubes to warm up, at which time the receiver will operate.

WARWICK MFG. CORP.

MODEL 9-627
Schematic, Voltage, Socket
Alignment, Trimmers, Notes

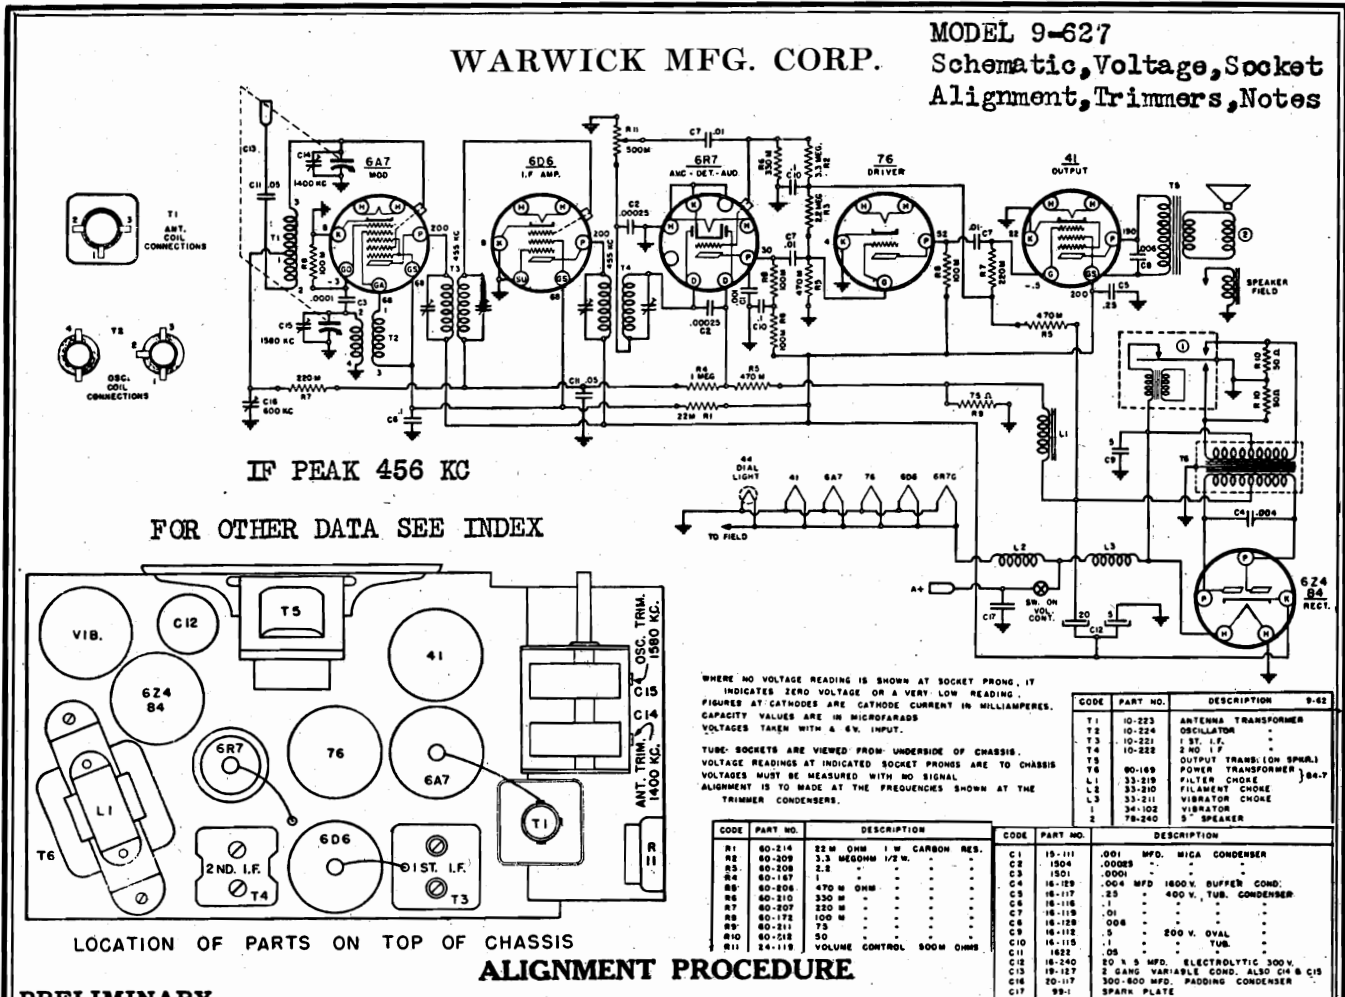

PRELIMINARY

- Output Meter Connections Across Loud Speaker Voice Coil
- Output Meter Reading to Indicate 1 Watt. 1.85 Volts
- Generator Ground Lead Connection Receiver Chassis
- Dummy Antenna Value to Be in Series with Generator Output See Chart Below
- Connection of Generator Output Lead See Chart Below
- Generator Modulation 30%, 400 Cycles
- Position of Volume Control Fully On

Position of Variable	Generator Frequency	Dummy Antenna	Generator Connections	Trimmer Adjustment (In Order Shown)	Trimmer Function
Closed	455 Kc.	.1 mfd.	6A7 Grid	T3 T4	I. F.
Fully Open	1580 K. C.	.0002 mfd.	Antenna Conn.	C15	Osc. Trimmer
1400 K.C.	1400 K.C.	.0002 mfd.	Antenna Conn.	C14	Ant. Trimmer
600 K. C.	600 K. C.	.0002 mfd.	Antenna Conn.	C16	Antenna Padder

The variable condenser should be at 600 k.c. for antenna adjustment.

The alignment procedure should be repeated in the original order, step by step, to insure greater accuracy. A final adjustment of antenna padder condenser C16 is always made after the receiver is installed in the car, in order to match the car antenna.

Always keep the output power from the generator at its lowest possible value to prevent the A.V.C. of the receiver from interfering with accurate alignment.

THE AMMETER LEAD

The ammeter cable (See "H" in Fig. 1) has a spring clip at one end and a fuse receptacle at the other. Compress the spring clip and slide it over the ammeter stud on the back of the car's ammeter. When the clip is released it will spring out and grip the stud securely. (See fig. 1.) (The cable clip may be connected to either stud of the ammeter. If connected to one stud, the current taken by the radio will register on the ammeter. If connected to the other stud, it will not register.) In a few cars such as the first models of the Ford V-8 the ammeter does not have terminals. In such cases the spring clip should be fastened to any available terminal behind the dash which is connected to the ungrounded side of the battery at all times. Some terminals will be so connected only when the ignition or light switches are turned "On." Insert the fibre sleeve and fuse (See "J" and "K" in Fig. 1) in the other end of the ammeter cable. The black wire coming from the radio receiver has a plug at its end which should be inserted into the fuse receptacle after the fuse sleeve and fuse have been inserted.

THE GENERATOR CONDENSER

The Generator Condenser should be mounted to the generator frame by means of any one of the generator assembly bolts. Scrape all dirt and paint away so that a clean metal to metal contact is made. The flexible lead from the Generator Condenser should be connected to the output terminal of the generator.

MODEL 9-627
 Assembly Notes
 Tuner Data

WARWICK MFG. CORP.

ANTENNA

Insert the single prong of the antenna cable (See "G" in Fig. 1) into its receptacle located on the bottom of the receiver case and near the front left hand corner. Note that the other end of this cable has a white covered wire protruding from its end and a bright metal pigtail. The white covered inner-wire and the bright metal pigtail are to be connected to the car's antenna in the following manner:

If an antenna was located coming from the corner post of the car, it will probably have an inner wire covered with the metal braid. (If it has a plug at its end, cut off the plug). Scrape clean and solder the white wire of the receiver's antenna lead to the inner wire of the car antenna lead. Be certain these inner wires do not at any time touch the outer shield. (See Fig. 5.)

After the connection is cleaned and connected, cover the joint carefully with tape. (See Fig. 6.)

Connect the pigtail of the receiver's antenna wire to the pigtail braid of the car's antenna lead-in. Wrap pig-tails and solder together using rosin core solder. **IMPORTANT**—Make certain when bolting soldered pigtail ends to car that the section is scraped clean and a good chassis ground. (See Fig. 7.)

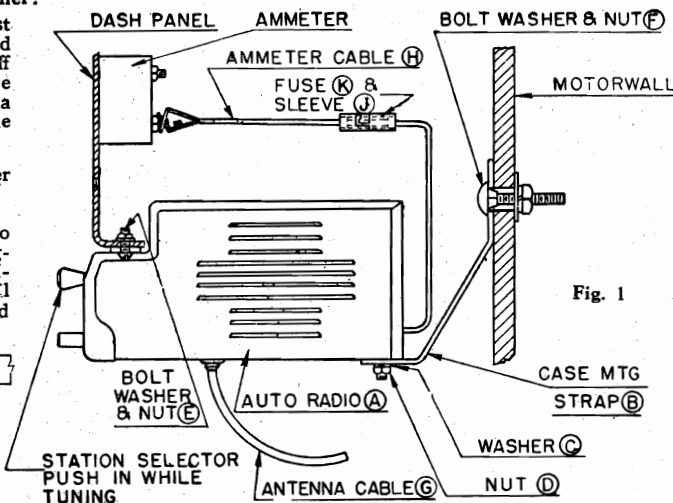
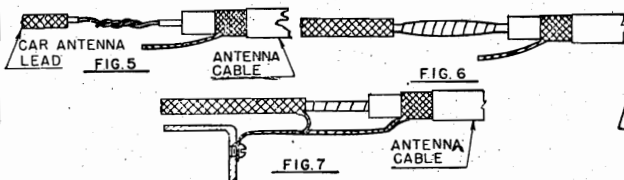


Fig. 1

If the lead-in from the car antenna is not shielded, it is advisable to do so to overcome motor noise. Slip a shielded loom over the entire length of the car antenna lead-in. In some cases where a roof antenna is used, the lead-in is brought down through a corner post of the car frame at the end of the windshield (See Figure 2). If the radio antenna cable is long enough to be inserted several inches into the corner post, connect antenna lead-in and the radio antenna cable as shown in Figures 5, 6 and 7, and after taping, insert the splice and all the unshielded portion of the lead-in up into the corner post. If this cannot be done, this type of lead-in should be covered with a shielded loom several inches into the corner post. Connect the lead-in and shielding as illustrated in Figures 5, 6 and 7. The other end of the shielding at the car antenna should be grounded. To eliminate crackling and noisy reception due to antenna lead-in pick-up, the shielded antenna lead-in should be either insulated from chassis (or car body) or grounded at interval points, leading from the radio antenna cable to the car antenna. Be sure to use car chassis or grounded section of body only for grounding.

THE DISTRIBUTOR SUPPRESSOR

To install the distributor suppressor, cut the CENTER lead from the distributor cap in two, as close as possible to the distributor cap. Screw the Distributor Suppressor to one end of the cut cable and then to the other end leading to the distributor cap.

SETTING PUSH-BUTTONS

1. By means of the Station Selector Knob, tune in WITH THE RIGHT HAND AS ACCURATELY AS POSSIBLE the station having the lowest frequency—that is, your selected station which is tuned in nearest the right-hand side of the dial.
2. After the station has been tuned in accurately with the right hand, continue to hold it in its exact position firmly, and with the left hand loosen the Push-Button to be set up for that station by unscrewing the Push-Button about one turn to the left (counter-clockwise).

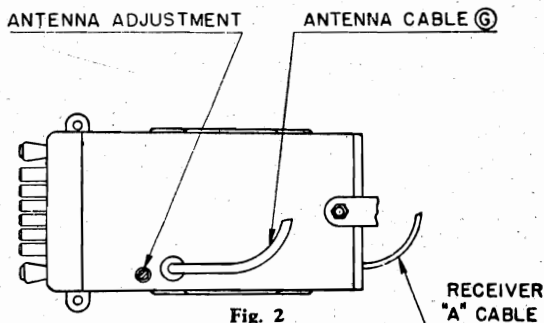


Fig. 2

3. Continuing to hold the Station Selector Knob in its exact position, PUSH THE PUSH-BUTTON IN ALL THE WAY with the left hand.

4. After the Push-Button has been depressed all the way, tighten it gently toward the right (clockwise). Release Push-Button slowly and when in normal position grip button and tighten firmly.

The Push-Button tuning system is now correctly set up for your first selected station of lowest frequency and the Call Letter Tab for this station should be at the extreme right of the Call Letter Holder.

Follow through with this same procedure, setting up the other 5 stations in the order of their frequency—that is, the second station set up will be second lowest in frequency and the third station set up will be third lowest in frequency.

Carefully check each Push-Button for the accuracy of its setting. If, when tuning in any station with its Automatic Push-Button it does not have equal volume or clarity to that obtained with manual tuning, this may indicate the automatic adjustment for that station was not made accurately. Should there be any inaccuracy in any one of the Push-Button adjustments, correction can be made by repeating the above procedure for that button only. Do not reset those Push-Buttons that are accurately adjusted.


No further adjustments are necessary to operate your auto radio automatically or manually. To receive any one of your six selected stations for automatic operation, merely push in ALL THE WAY the Button set up for that station. To receive all other stations in the regular manner, push in the Station Selector Knob and turn it to the frequency of the station desired.

IMPORTANT: ANTENNA ADJUSTMENT

The antenna adjustment control is located close to the antenna cable receptacle as shown in Figure 2. To make the adjustment first, remove plug button from bottom of case by inserting a screwdriver between case and plug button, then tune in a weak station with full volume at or very close to 600 kilocycles (60) on the dial. Second, insert a small screwdriver into the antenna adjustment screw shown in Figure 2 and turn the screwdriver either to the left or right until the volume of the station is at its maximum point. While adjusting the antenna adjustment screw it is advisable to vary the station selector knob a degree or two to obtain the best adjustment. Now insert plug button into case. The receiver is now balanced and no further radio electrical adjustments are necessary.

WELLS-GARDNER & CO.

MODEL 1A17
Schematic, Voltage, Socket
Sensitivity, Coils

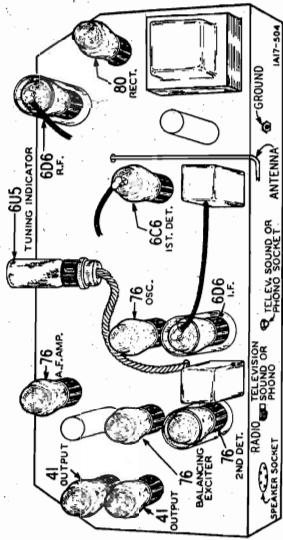






Sensitivity (For 0.5 Watt Output)
 B Range 2.0 Microvolts Average
 C Range 3.0 Microvolts Average
 D Range 8.0 Microvolts Average

Power Consumption - 80 Watts (At 117 volts 60 cycles)
 Power Output 5.0 Watts Undistorted
 Selectivity - 32 KC Broad at 1000 times Signal
 Intermediate Frequency 456 KC.
 Speaker 10" Electro-Dynamic

Dial Lamps

The dial lamps used are of the bayonet pin type (bulb No. 51). To replace any lamp, first turn the radio off. Then pull the clip off and replace the lamp.

RANGE B 528 TO 1,800 MICROCYCLES.
 RANGE C 1,585 TO 5,400 MICROCYCLES.
 RANGE D 5,280 TO 18,300 MICROCYCLES.

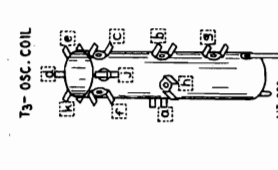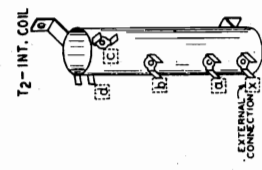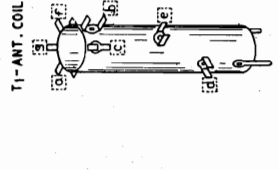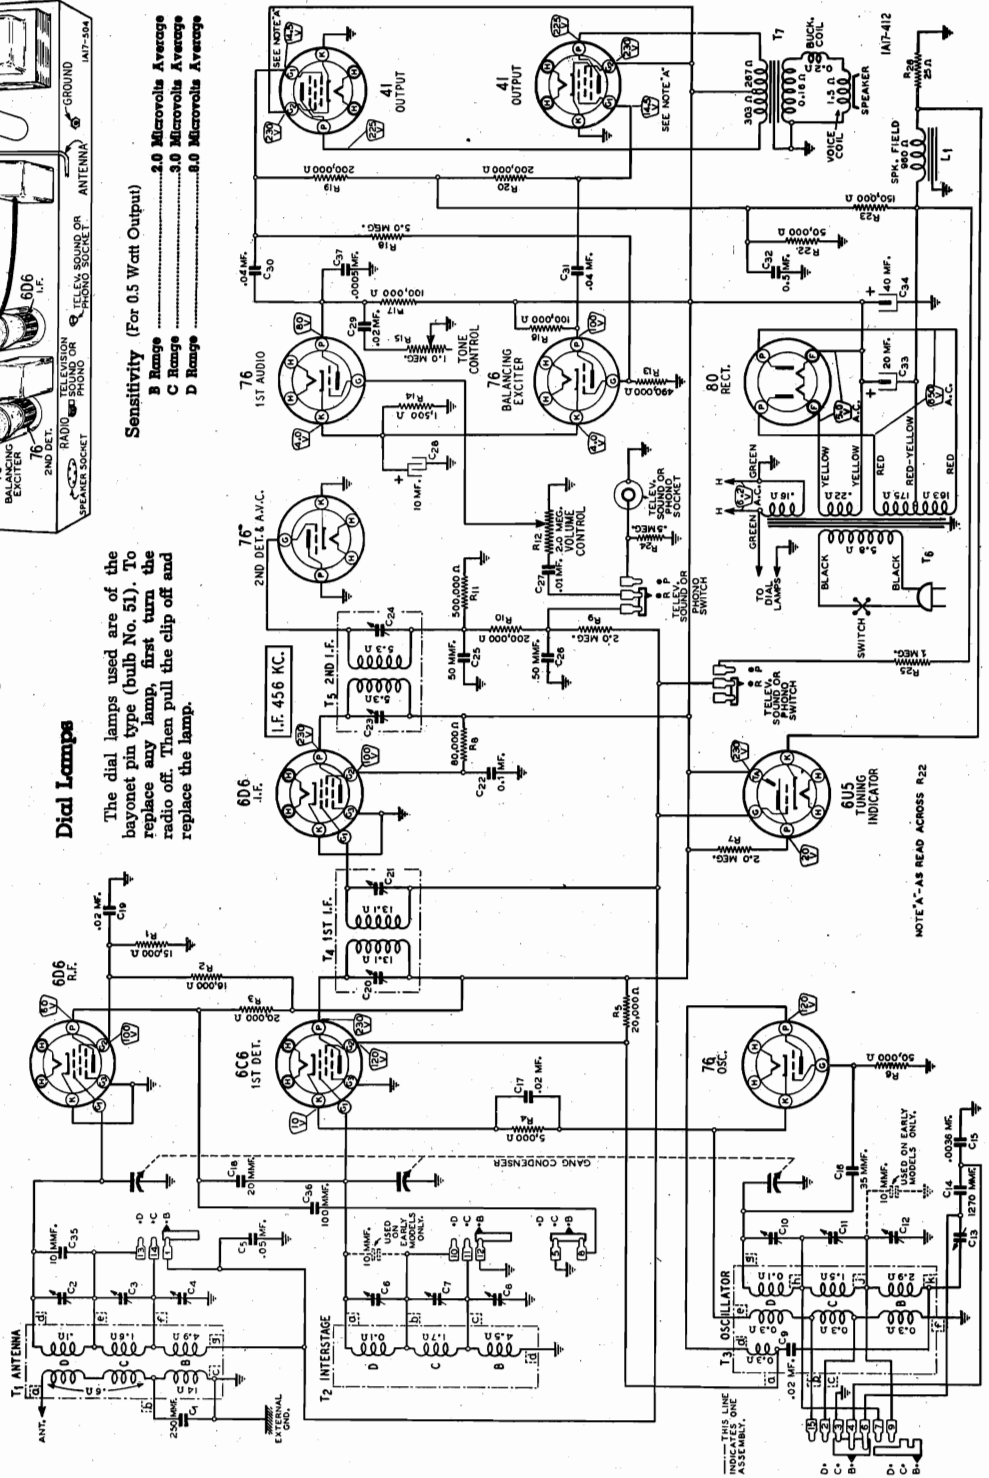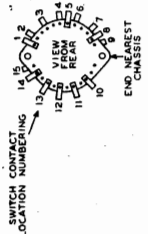

COIL TERMINALS

THIS LINE INDICATES ONE ASSEMBLY.
 C, C, B, B, D, D, S, S

NOTE: "A" AS READ ACROSS R32

**MODEL 1A17
Alignment, Trimmers
Drive Cord Data**


WELLS-GARDNER & CO.

Drive Cord Replacement

Tie a knot with a small loop at one end of the new drive cord. Slide a 1 1/4 inch length of fabric tubing on the cord. The free end of the drive cord should be tied to the tension spring in such a manner that there is a distance of 5/8 inch between the knots.

Turn the gang condenser to full open position. Place the looped end of the drive cord over the hook on condenser drive drum A—See illustration. Bring the cord up through the slot in the drum rim and pass to the right (from back of chassis) and around pulley B. Then bring the cord to the left and over pulley C. See that the fabric tubing is now between pulleys B and C. Continue cord down to control shaft D and wind 3 1/2 turns counter-clockwise (from back of chassis) on shaft D. Bring cord up to and over pulley E. Bring cord down to top of drive drum A and wind one turn clockwise around the drum rim.

Pass the remaining drive cord and tension spring through the slot in the drum. Place free end of

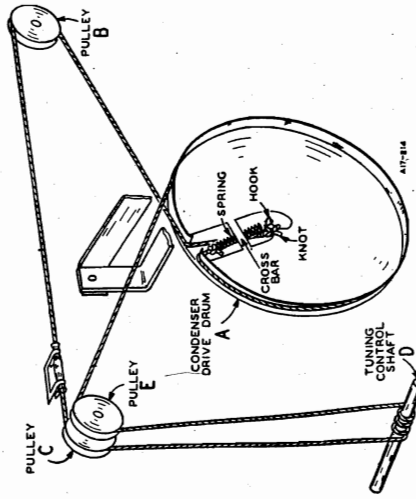

spring over the hook on the condenser drive drum. **ATTACHING DIAL POINTER**—Tune in a 1500 KC signal. Move the pointer to the 1500 KC mark on the dial and clamp it tightly over the fabric tubing on the cord.

Volume Control—Maximum. Antenna Shorted to Ground. Readings taken with 1000 ohm-per-volt meter. Plate and screen voltages are read on 500 volt scale.

age indicated is between the socket terminal and ground. These voltages are read under the following conditions: Line Voltage—117.

Voltages at Sockets
The voltages at sockets are shown on the schematic circuit diagram. Unless otherwise specified, the volt-

ALIGNMENT PROCEDURE

The following equipment is required for aligning: An All Wave Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed. Output Indicating Meter—Non-Metallic Screwdriver. Dummy Antennas—.1 mf., 200 mmf., and 400 ohms.

Volume Control—Maximum All Adjustments. Connect Radio Chassis to Ground Post of Signal Generator with a Short Heavy Lead. Allow Chassis and Signal Generator to "Heat Up" for several minutes. **IMPORTANT**—Follow procedure in the order shown.

SIGNAL GENERATOR FREQUENCY SETTING	CONNECTION AT RADIO	DUMMY ANTENNA	BAND SWITCH SETTING	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
I. F. 486 KC	Grid of 1st Det.	.1 mf.	B Range	Turn Rotor to Full Open	2nd I.F. (C23) & (C24) 1st I.F. (C20) & (C21)
RANGE D 18,300 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Full Open	Oscillator Range D (C10)
15,000 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Max. Output	Ant. Range D (C2) Int. Range D (C6) Rock Rotor—See Note A
RANGE C 5400 KC	Antenna Lead	400 Ohm	C Range	Turn Rotor to Full Open	Oscillator Range C (C11)
5000 KC	Antenna Lead	400 Ohm	C Range	Turn Rotor to Max. Output	Antenna Range C (C3) Int. Range C (C7)
RANGE B 1600 KC	Antenna Lead	200 mmf.	B Range	Turn Rotor to Full Open	Oscillator Range B (C12)
1400 KC	Antenna Lead	200 mmf.	B Range	Turn Rotor to Max. Output Set Indicator to 1400 KC— See Note B	Ant. Range B (C4) Int. Range B (C8)
600 KC	Antenna Lead	200 mmf.	B Range	Turn Rotor to Max. Output	600 KC (C13) Rock Rotor—See Note A


Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.

After each range is completed, repeat the procedure as a final check.

NOTE A—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.

NOTE B—If the pointer is not at 1400 KC on the dial, loosen the 2 clamps which hold the pointer assembly on the cord, move the pointer to the 1400 KC mark, and tighten the clamps.

CAUTION—When aligning the short wave bands, be sure NOT to adjust at the image frequency. This can be checked as follows: Let us say the signal generator is set for 5000 KC. The signal will then be heard at 5000 KC on the dial of the radio. The image signal which we desire will be heard at 4500 KC, or 4988 KC on the dial. It may be necessary to increase the input sig-

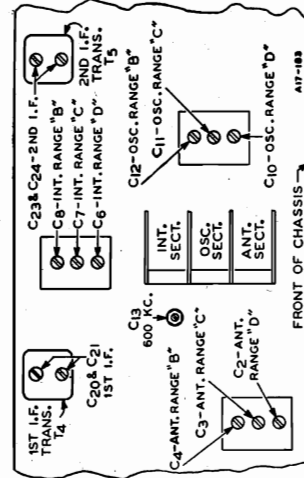



WELLS-GARDNER & CO.

MODEL 1A29 (Early)
Schematic, Voltage, Socket, Sensitivity

Power Consumption - 100 Watts (At 117 volts 60 cycles)
 Power Output - 9 Watts Undistorted
 10 Watts Maximum
 Selectivity - 26 KC Broad at 1000 times Signal
 (Sharp)
 Intermediate Frequency - 456 KC
 Speaker - 12" Electro-Dynamic

Tuning Frequency Range
 B Range..... 528 to 1730 KC
 C Range..... 2200 to 7000 KC
 D Range..... 7000 to 22000 KC

Sensitivity (For 0.5 Watt output)
 B Range..... 1.0 Microvolt Average
 C Range..... 1.0 Microvolt Average
 D Range..... 3.0 Microvolts Average

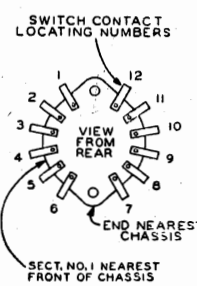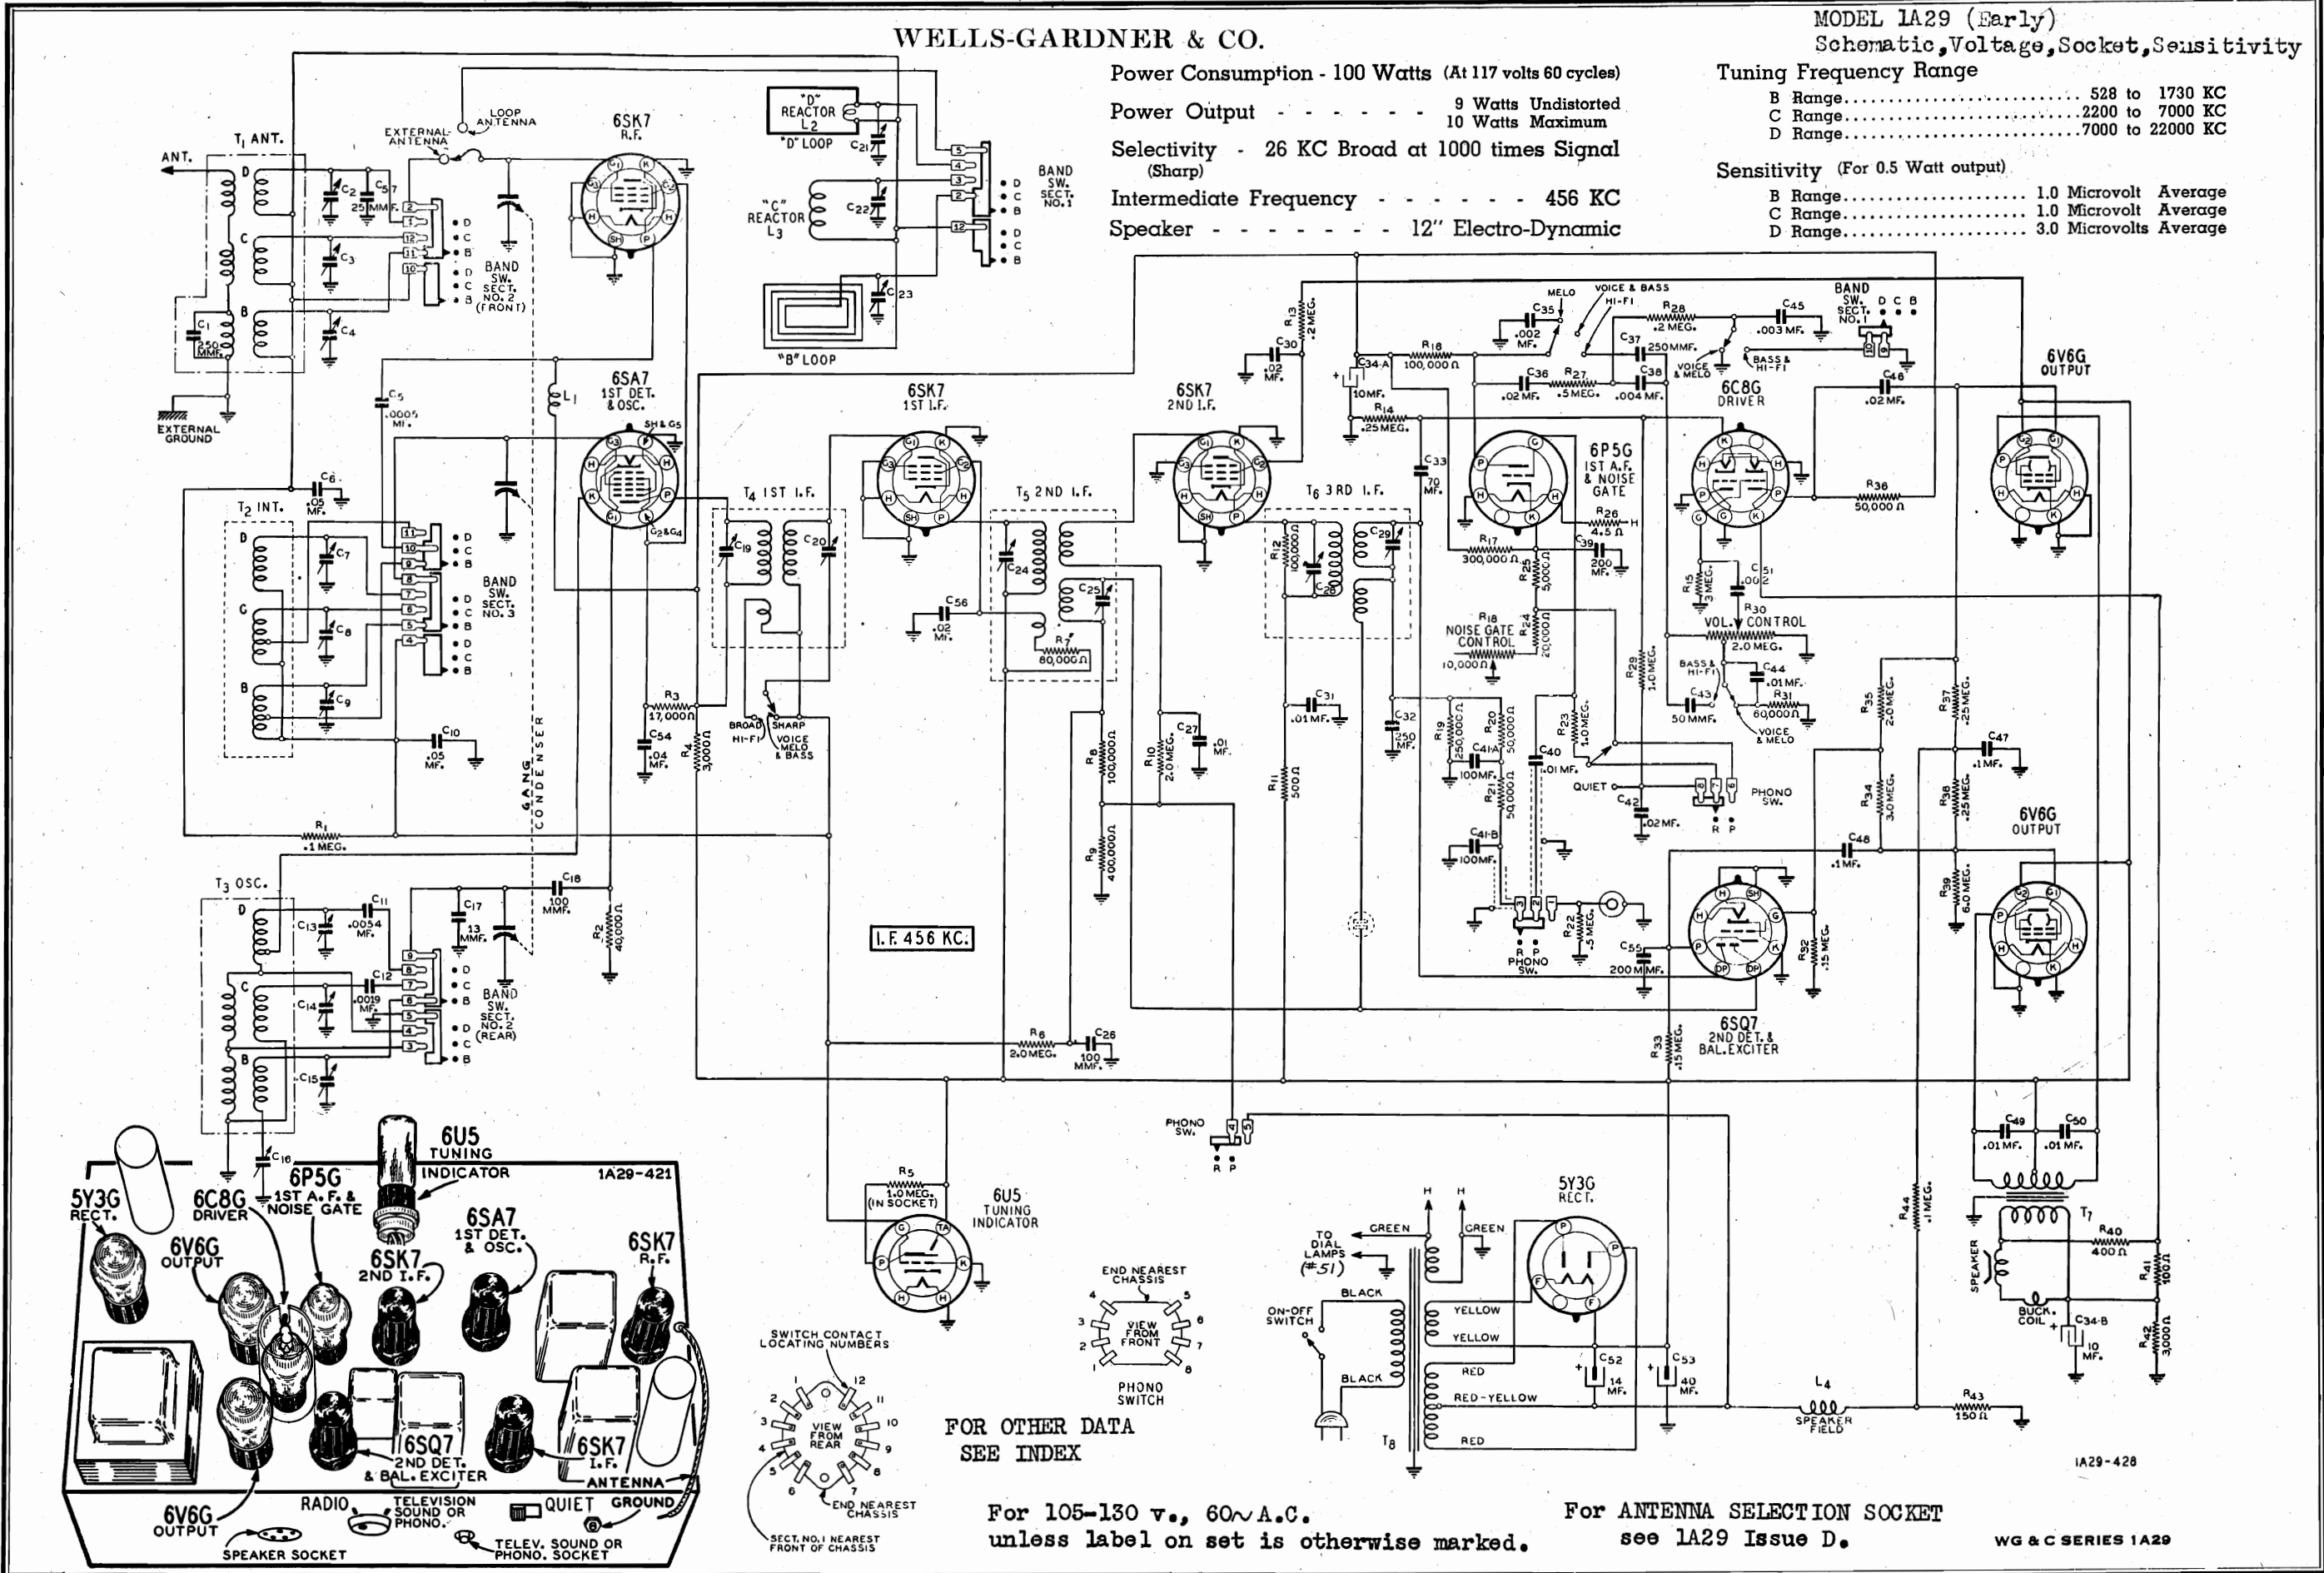

FOR OTHER DATA
SEE INDEX


For 105-130 v., 60~A.C.
unless label on set is otherwise marked.

For ANTENNA SELECTION SOCKET
see 1A29 Issue D.

WG & C SERIES 1A29

MODEL 1A29, Issue D
Schematic, Voltage, Socket, Sensitivity
Antenna, Coil Data

WELLS-GARDNER & CO.


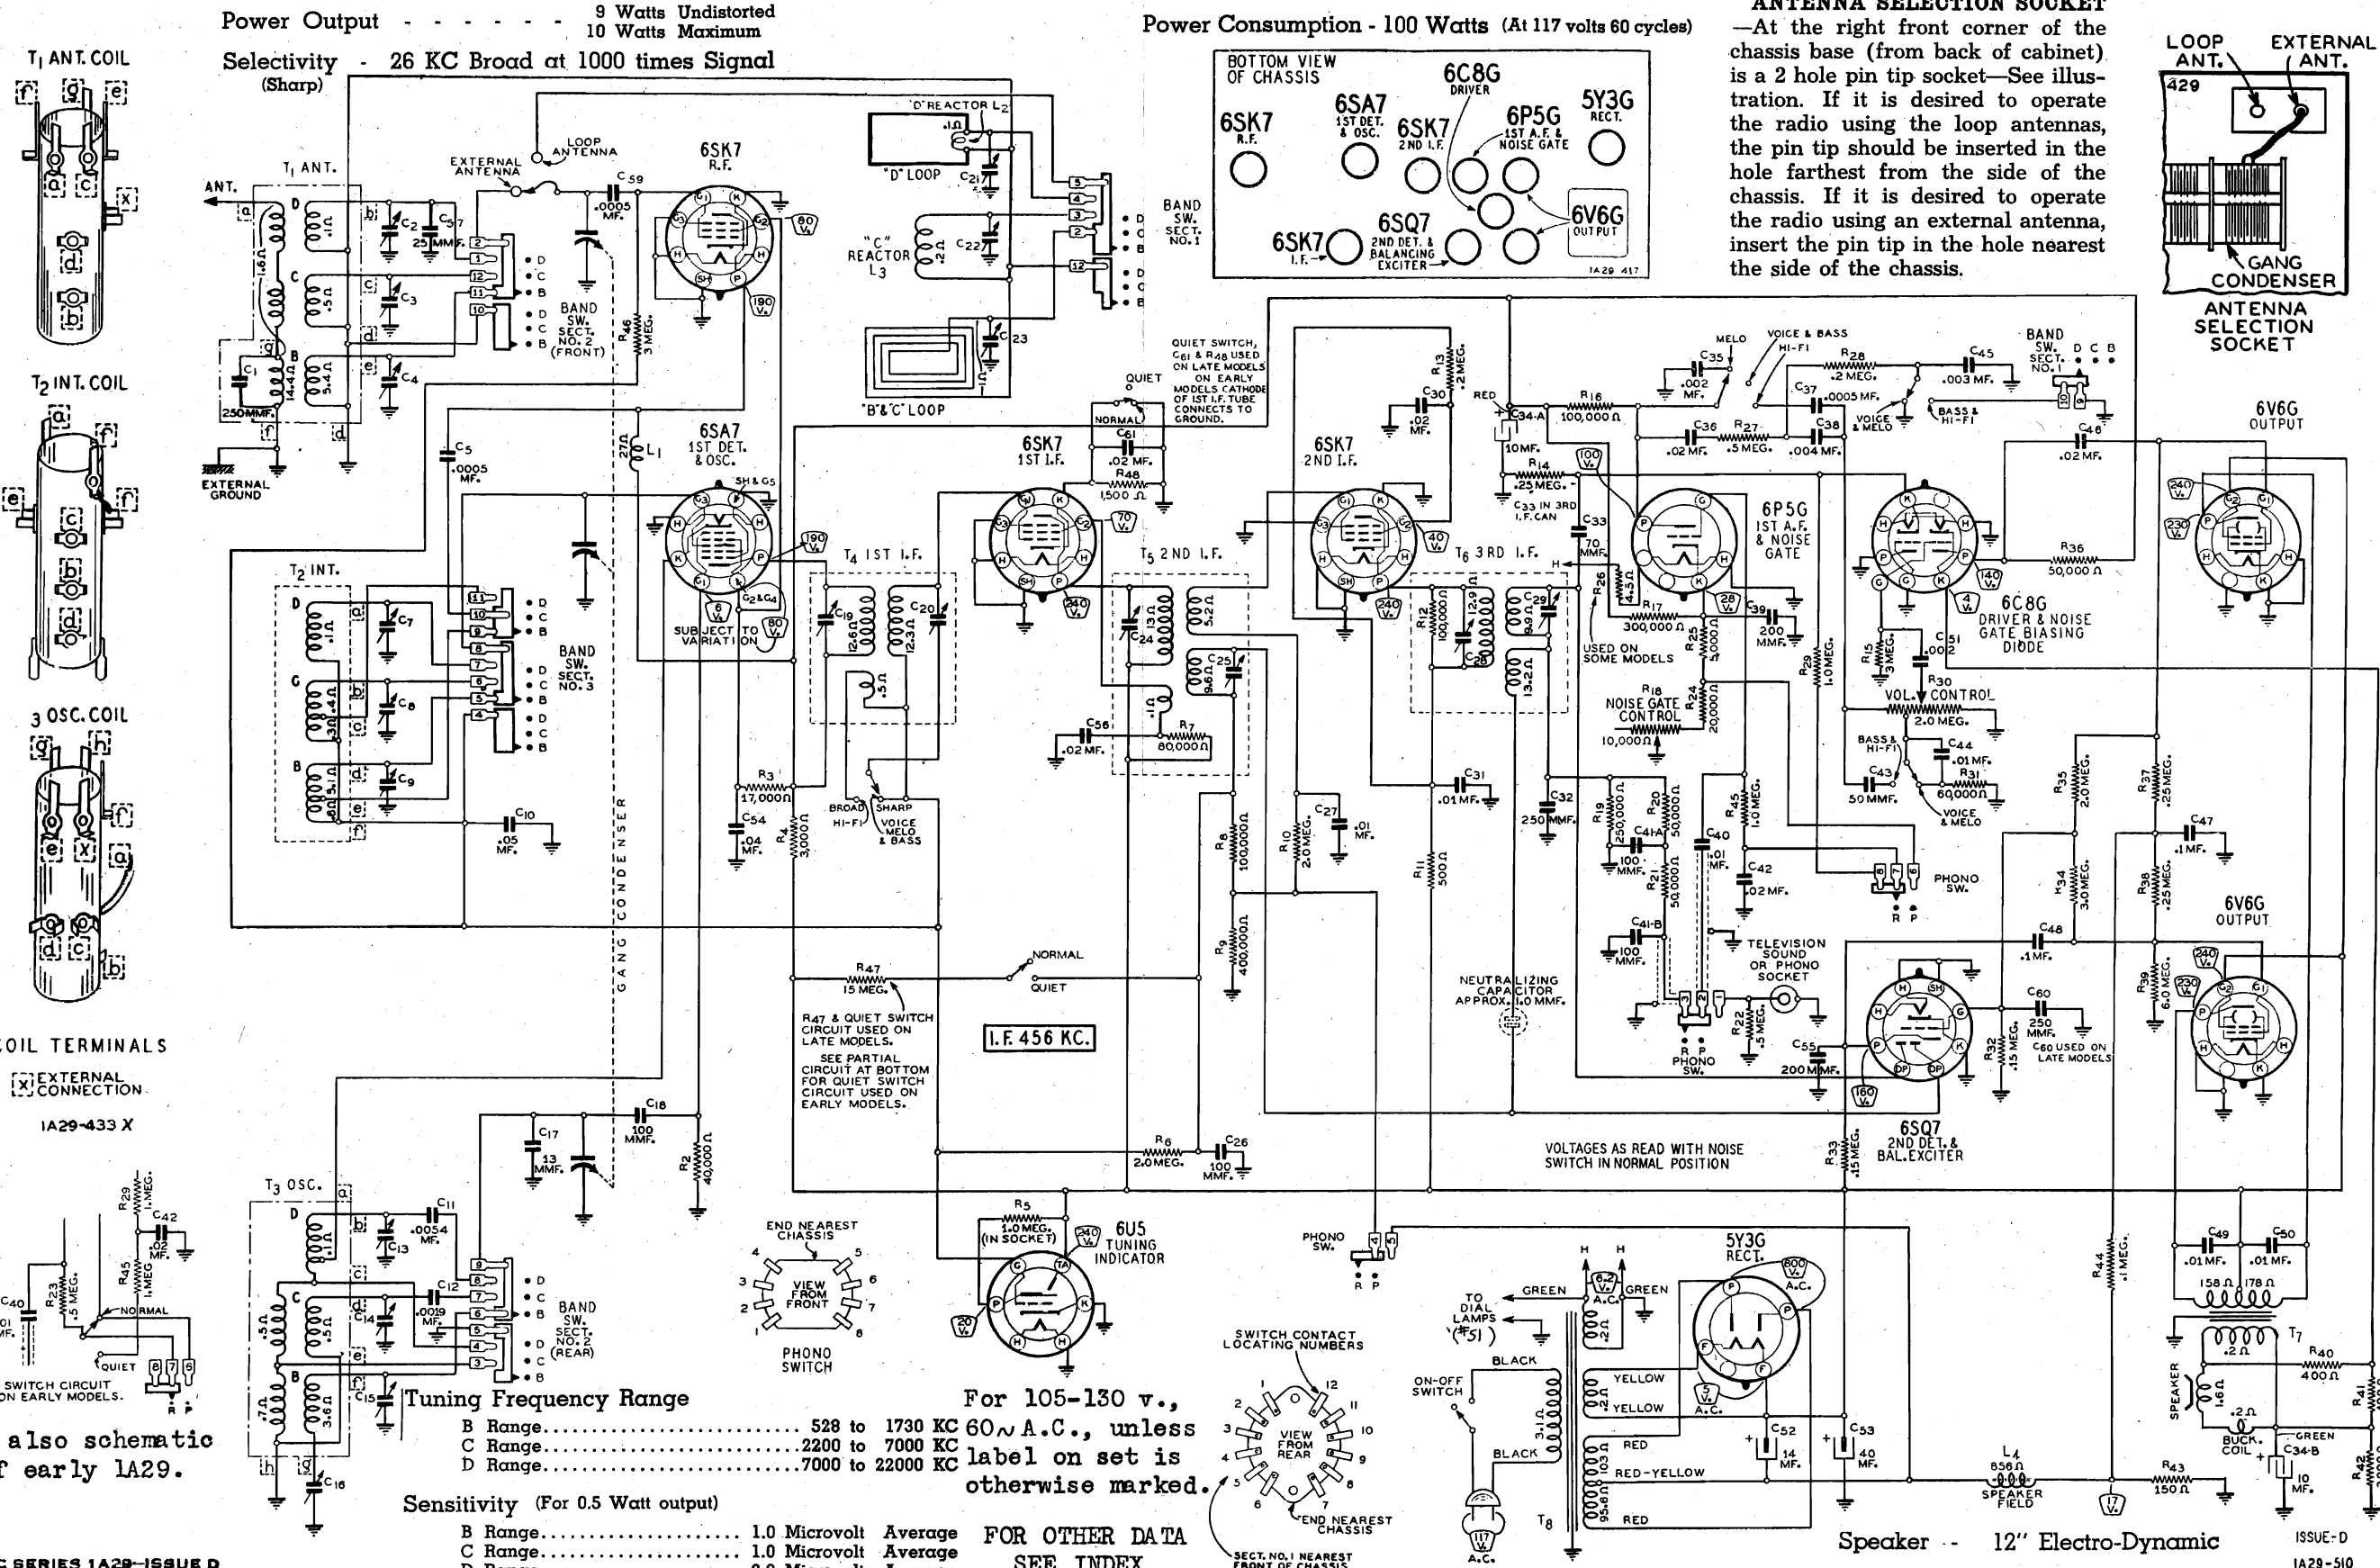


Power Output - - - - - 9 Watts Undistorted
10 Watts Maximum

Selectivity - 26 KC Broad at 1000 times Signal
(Sharp)

Power Consumption - 100 Watts (At 117 volts 60 cycles)

ANTENNA SELECTION SOCKET
—At the right front corner of the chassis base (from back of cabinet) is a 2 hole pin tip socket—See illustration. If it is desired to operate the radio using the loop antennas, the pin tip should be inserted in the hole farthest from the side of the chassis. If it is desired to operate the radio using an external antenna, insert the pin tip in the hole nearest the side of the chassis.

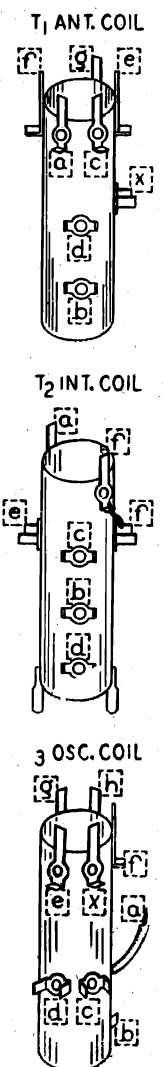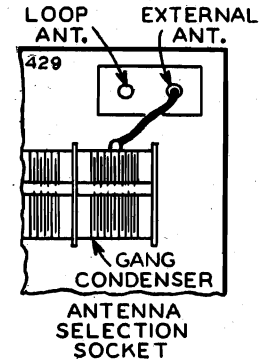

COIL TERMINALS
[X] EXTERNAL CONNECTION.
1A29-433 X

See also schematic of early 1A29.

Tuning Frequency Range





B Range..... 528 to 1730 KC
C Range..... 2200 to 7000 KC
D Range..... 7000 to 22000 KC

Sensitivity (For 0.5 Watt output)

B Range..... 1.0 Microvolt Average
C Range..... 1.0 Microvolt Average
D Range..... 3.0 Microvolts Average

For 105-130 v., 60~A.C., unless label on set is otherwise marked.

FOR OTHER DATA SEE INDEX

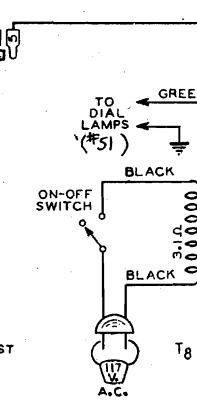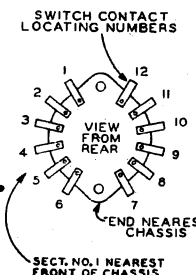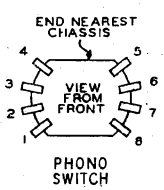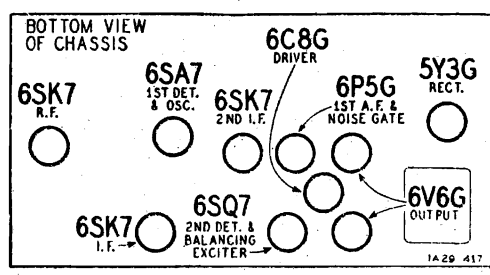

Speaker - 12" Electro-Dynamic

ISSUE-D
1A29-510

WELLS-GARDNER & CO.

MODEL 1A29, Issues B, C, D
Changes in Chassis
MODEL 8A30 Record Changer
Notes

Series 1A29 CHANGES MADE FOR "B" ISSUE SETS Sept. 8, 1939
TO REDUCE HUM MODULATION.

In order to reduce hum modulation, the following circuit changes have been made. These changes are shown schematically on the back of this sheet. Models on which these changes have already been made can be identified by the Chassis Number 1A29-2B or 1A29-3B.

Resistor R1, 400,000 Ohms, in series with the AVC connection to the antenna coil, has been removed from the circuit.

The AVC line is no longer connected to the antenna coil at terminal "D." Instead, this terminal is connected to ground. The bypass condenser C6, .05 mf., formerly connected between the same terminal and ground, has been removed from the circuit.

The AVC line which formerly connected to the "D" terminal of the antenna coil and C6, is now connected through a 3 megohm resistor R46 to G1 of the 6SK7 R.F. tube.

G1 of the 6SK7 R.F. tube, which was formerly connected directly to the stator of the gang condenser, is now connected to this point through a .0005 mf. condenser C59.

Series 1A29 CHANGES MADE FOR ISSUE "C" Sept. 26, 1939

In order to obtain Underwriters' approval, the issue letter will be advanced to "C" when the following changes are made:

A cardboard shield is used with the electrolytic condenser which is insulated from the chassis.

The tube socket clip tension is reduced.

A wiring change was made to remove high voltage from pin No. 1 on the 6V6G tube socket. A terminal strip has been added to eliminate the use of the pin connection for this purpose.

Series 1A29 CHANGES FOR "D" ISSUE October 27, 1939

The following changes are made in the "D" issue of this model:

Condenser C37 is changed from 250 mmf. to 500 mmf. to add high frequencies in the high fidelity position.

The noise gate switch has been eliminated so that the noise gate circuit functions all of the time.

The Quiet switch, however, is still continued at the same position on the back panel of the chassis. When this switch is in the quiet position, two circuits are affected in the following manner:

The 6SK7 1st I.F. tube is biased with a 1500 ohm resistor connected between cathode and ground to reduce sensitivity.

A positive voltage secured from the B+ line through a 15 Megohm resistor is applied to the AVC diode circuit. Under no signal conditions, this leads the AVC diode circuit, effectively short circuiting both the signal and AVC secondaries of the 2nd I.F. transformer (T5 in schematic).

When a signal of predetermined intensity is received, the voltage developed in the AVC circuit offsets this positive voltage. The signal is amplified through the transformer and normal reception is obtained.

The effect of the circuits mentioned above, with the switch in the quiet position, is to reduce sensitivity and to "squelch" all signals, both noise and station, until a signal of a certain intensity or greater is received.

Series 1A29 DISTORTION February 21, 1940

Reference is made to a distortion in this model which manifests itself as a rasping sound and is heard on a signal of moderate volume. This may be an overload condition caused by a signal of high modulation.

It can be corrected by changing the signal diode load resistor, R19, from 250,000 ohms to 125,000 ohms.

Series 8A30 SERVICING AUTOMATIC RECORD CHANGER November 20, 1939
IF LANDING POSITION OF NEEDLE IS NOT CONSTANT
OR PICKUP ARM CANNOT BE ADJUSTED TO SET
NEEDLE DOWN IN STARTING GROOVE OF RECORD

In the first production of the automatic record changer, the pickup arm may display the following symptoms:

1. After the pickup arm has been set for the correct landing position, the needle does not lower consistently to the starting groove of a record during the playing of any one size of records.
2. The needle lowers so far away from the starting groove of the record that turning the needle landing adjusting screw does not bring the needle to the starting groove.

In early production, the pickup lead was permitted to hang down directly below the foot of the pickup. In such instances, the lead may become entangled with the rotating mechanism for the pickup arm. This will produce either one of the above actions.

To remedy the condition, clamp the pickup lead to the bracket - See Fig. 1, leaving enough slack in the lead to permit free action of the pickup arm. That portion of the lead under the clamp should be covered with tape.

The clamping arrangement consists of a small clamp, a No. 6 shakeproof lockwasher, and a 6-32 shakeproof self-tapping machine screw. On request, these items will be supplied free of charge by the factory.

IF PICKUP ARM DOES NOT SET NEEDLE DOWN IN STARTING GROOVE OF BOTH 10" AND 12" RECORDS

It may be found that any one setting of the needle landing adjusting screw will not cause the phono pickup arm to set the needle down in the starting groove for both 10" and 12" records.

This condition may be remedied as follows: Set the automatic record changer for 10" record operation. Turn the needle landing adjusting screw so that the pickup arm sets the needle down in the starting groove of a 10" record.

Replace the 10" record with a 12" record and set the automatic record changer for 12" record operation. Start the mechanism. Note the landing position of the needle.

MODEL 1A29
 MODEL 8A30
 MODEL 8A31
 Alignment, Trimmers

WELLS-GARDNER & CO.

ALIGNMENT PROCEDURE

SIGNAL GENERATOR FREQUENCY SETTING	CONNECTION AT RADIO	DUMMY ANTENNA	BAND SWITCH SETTING	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
I. F.					1A29 ONLY
456 KC	Grid of 1st Det.	.1 mf.	B Range See Note A	Turn Rotor to Full Open	1st I.F. (C19) & (C20) 2nd I.F. (C24) & (C25) 3rd I.F. (C28) & (C29) 1st I.F. (C17) & (C18) 2nd I.F. (C24) & (C25)
RANGE B					Oscillator Range B (C15)
1730 KC	Antenna Lead	200 mmf.	B Range	Turn Rotor to Full Open	
1500 KC	Antenna Lead	200 mmf.	B Range	Turn Rotor to Max. Output Set Indicator to 1500 KC— See Note B	Ant. Range B (C4) Int. Range B (C9)
600 KC	Antenna Lead	200 mmf.	B Range	Turn Rotor to Max. Output	600 KC (C43) (C16 on 1A29) Rock Rotor—See Note C
RANGE C					
7000 KC	Antenna Lead	400 Ohm	C Range	Turn Rotor to Full Open	Oscillator Range C (C14)
6000 KC	Antenna Lead	400 Ohm	C Range	Turn Rotor to Max. Output	Antenna Range C (C3) Int. Range C (C8)
RANGE D					
22,000 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Full Open	Oscillator Range D (C13)
21,000 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Max. Output	Ant. Range D (C2) Int. Range D (C7) Rock Rotor—See Note C
LOOP RANGE B					
1500 KC See Note D	None—See Note D		B Range	Turn Rotor to Max. Output	Loop Trimmer (C23) See Note E
LOOP RANGE C					
6000 KC See Note D	None—See Note D		C Range	Turn Rotor to Max. Output	Loop Trimmer (C22) See Note E
LOOP RANGE D					
21,000 KC See Note D	None—See Note D		D Range	Turn Rotor to Max. Output	Loop Trimmer (C21) Rock Rotor—See Note C

Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.

After each range is completed, repeat the procedure as a final check.

NOTE A—For all adjustments, with the exception of the 3 loop range adjustments, the pin tip should be in the external antenna hole of the Antenna Selection Socket—See illustration on page one.

NOTE B—If the pointer is not at 1500 KC on the dial remove pointer from drive cord. Tune in a 1500 KC signal. Set pointer at the







1500 KC mark on the dial scale. Attach pointer to drive cord.

NOTE C—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.

NOTE D—Re-install set in cabinet. Connect a loop approximately one foot in diameter across the antenna and ground posts of the signal generator. Place signal generator so that this loop is between 3 and 10 feet from loop in cabinet. Insert pin tip in loop antenna hole of Antenna Selection Socket—See illustration on schematic page.

Note E (CONSOLE MODELS)—Turn knob of loop until output is maximum.

CAUTION—When aligning the short wave bands, be sure NOT to adjust at the image frequency. This can be checked as follows: Let us say the signal generator is set for 5000 KC. The signal will then be heard at 5000 KC on the dial of the radio. The image signal, which is much weaker, will be heard at 5000 less 912 KC, or 4088 KC on the dial. It may be necessary to increase the input signal to hear the image.

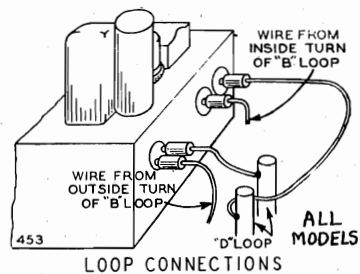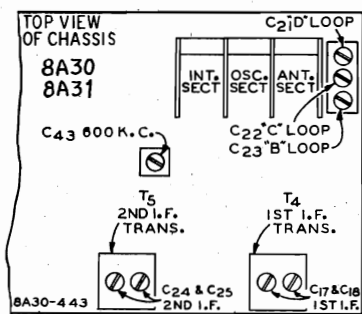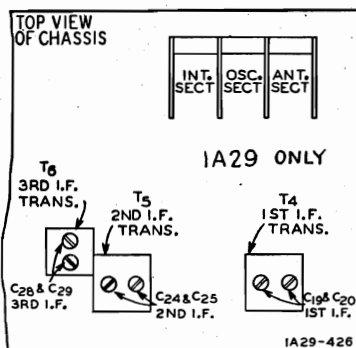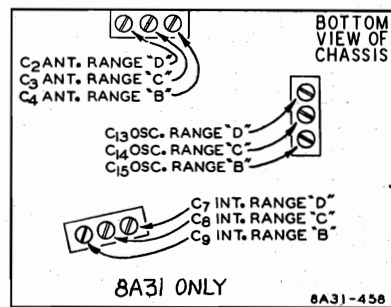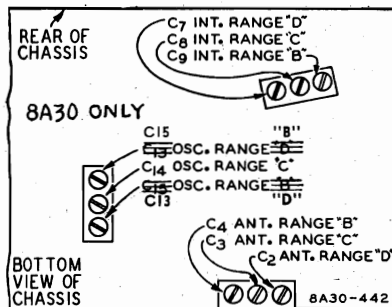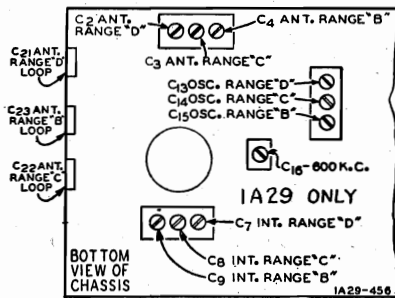

WELLS-GARDNER & CO.

MODEL 1A29 MODEL 6A27
 MODELS 6A26, 6A26S
 MODEL 6D1 MODEL 8A30
 MODEL 8A31 Tuner Data

Procedure for Setting the Station Buttons

ALL MODELS

There are 6 buttons on the automatic tuning dial by means of which 6 stations may be set for quick tuning.

It is better to list the station with the lowest kilocycle number first, the station with the next higher kilocycle number next, and so on.

Any button may be used for any station you can receive, although it will be more convenient to set the stations so that the kilocycle numbers decrease from left to right.

Setting a Station Button

6A26, 6A26S, 6A27, 6D1

At the right side of the cabinet (from the front) will be seen a cap which covers a hole in the cabinet—See illustration. Pry off this cap being careful not to scratch the cabinet. Removal of the cap will expose a large locking screw. Using a screwdriver, loosen the mechanism by turning this screw in a counter-clockwise direction. The screw will turn easily until the dial pointer stops moving. Then exert a slight amount of additional pressure and continue to turn the screw about one and one-half complete turns.

1A29 ONLY

Turn the tone and selectivity control to any of the sharp positions.

1A29, 8A30, 8A31

Turn the manual tuning knob so that the pointer moves toward 1700 KC until the stop is reached.


At the right side of the escutcheon (from the front) will be seen a cap which covers a hole in the escutcheon—See illustration. Pull off this cap.

At the end of the tube in back of the hole in the escutcheon is the locking screw. Using a small handle screwdriver, unlock the mechanism by turning this screw several turns in a counter-clockwise direction.


ALL MODELS

Select the first station from the list you have prepared, and carefully tune in this station by means of the manual tuning knob using the tuning eye as a guide.

With one hand, hold the manual tuning knob to prevent it from turning and with the other hand, push one of the station buttons shown in the illustration *all the way down*. It will go down easily at first and then a firm gentle pressure must be applied to push it down the rest of the way. It is better to start with the left hand button.

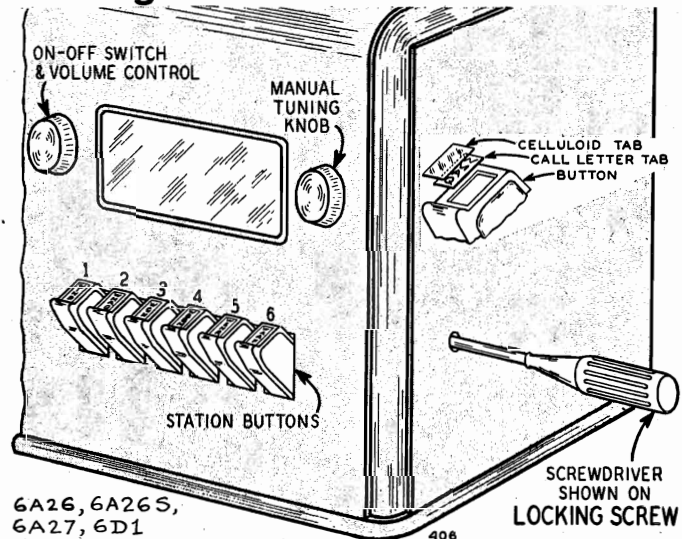

6A26, 6A26S,
6A27, 6D1

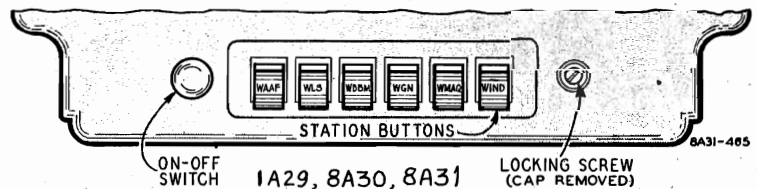

Hold *this* button all the way down. With the other hand, see whether or not this station is still accurately tuned in by moving the tuning knob a slight amount back and forth while observing the tuning eye. *Be sure to hold the button all the way down.*

Release the button after the station is tuned in.

Carefully tune in the second station on your list. Then hold the tuning knob and push the second button slowly and firmly all the way down. Check for accurate tuning.

Proceed in the same manner to set any additional stations on your list on the remaining station buttons.

6A26, 6A26S, 6A27, 6D1

After all the will be necessary to lock the mechanism so that the settings will not change. Do this by turning the locking screw in a clockwise direction until it is tight. It will turn easily until the dial pointer stops moving. Then additional pressure must be exerted. Tighten firmly but not excessively. Replace the cap over the hole.

Remove the correct station call letter tab from the sheets supplied by bending the sheet back and forth at the score mark until the tab can be broken off. Press this tab all the way to the bottom of the space provided in the button. Cover the call letter tab with a celluloid tab, pressing this in until it snaps into place.


1A29, 8A30, 8A31

After all the stations are set, it will be necessary to lock the mechanism so that the settings will not change. Turn the manual tuning knob so that the pointer moves toward 1700 KC until the stop is reached. Then, with the **SMALL HANDLE** screwdriver, turn the locking screw in a clockwise direction until it is tight. Tighten the locking screw firmly but not excessively to avoid stripping the threads. Replace the cap over the hole.

Insert a celluloid reinforcement tab half way in the slot at the front of the first station button.

Remove the correct station call letter tab for this button from the sheet supplied by bending the sheet back and forth at the score marks. Place the call letter tab in front of the celluloid reinforcement tab and insert it in slot. Push both tabs all

the way in the button slot. Follow the same procedure for inserting the station call letter tabs in any other buttons.

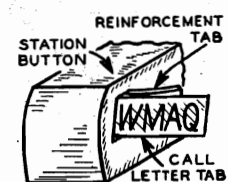

ALL MODELS

If at any time you wish to change the setting of a button from one station to another, repeat the above procedure. Changing the setting of one button will not affect the setting of any of the other buttons.

MODEL 1A29 MODEL 8A30
 MODEL 8A31
 Drive Cord, Phono. Data
 MODEL 5A25S
 Drive Cord Data

WELLS-GARDNER & CO.


MODELS 6A26, 6A26S
 MODEL 6A27 MODEL 6D1
 Phonograph Data

Television Sound or Phonographs Connections


FOR MODELS 1A29 (Barly), 1A29 Issue D, 6A26, 6A26S, 6A27, 6D1, 8A30, 8A31.

If Television programs ever become available in your community, the audio amplifier and speaker of this radio may be used to reproduce

For Models 6A26, 6A26S



For Models 6A27, 6D1.



BACK PANEL OF CHASSIS

Television sound in conjunction with any "Television Picture Receiver and Sound Converter." Phonograph records may also be played through the radio.

On the back panel of the chassis base is a switch and a socket for a single shielded pin tip at which connections are made. The connector on the cable from a television receiver or from a phono pickup can be inserted in the socket. (The cable connector must be a single shielded pin tip type, Part No. M88.)


When phonograph or television sound reproduction is desired, the switch should be moved to the "Phono-Television Sound" position. For radio reception, the switch should be in the "Radio" position.

*For Model 1A29 Issue D use Part No. 6A224.

the plate circuit of the 6P5G noise gate tube and insert a microammeter in series. On the back panel of the chassis near the noise gate switch will be seen an adjusting screw. This is the adjustment for variable resistance R18. Rotate this screw until the plate current is between 5 and 10 microamperes.

ALTERNATE METHOD—Turn band switch to B range. Use external antenna connection and short circuit antenna lead. Noise switch should be in the normal position. Turn the gang condenser to the completely closed position. Turn the noise gate control screw (R18) in a clockwise direction as far as it will go. All of the resistance will be in the circuit. Then turn the screw until tube noise starts to come through.

Disconnect antenna lead from ground and connect it to an external antenna. Tune in a weak station. If signal appears to be distorted, decrease the resistance by turning the adjusting screw in a counter-clockwise direction until the distortion is eliminated.

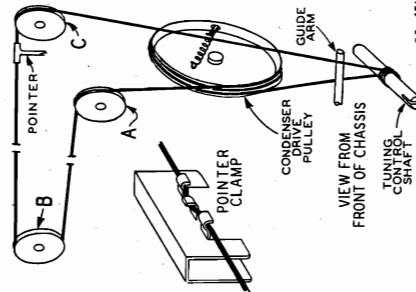


FOR MODELS 8A-30, 8A31.

Turn gang condenser to completely closed position. Remove any twists in doubled cord. Pass one portion of cord over pulleys A and B as shown in illustration. Then wind 3 1/2 turns counter-clockwise (from rear of chassis) around tuning control shaft—See illustration.

Loop 1/2 turn around bottom half of drive pulley. Continue cord over pulley D. Pull remaining portion of cord and place over pulley C.

Dial Pointer Attachment—Tune in a station of known frequency. Set the pointer at this frequency on the dial scale and secure pointer to cord—See illustration.

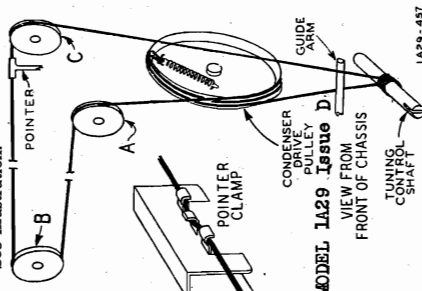

Adjusting Audio Noise Gate Control

MODEL 1A29 Issue D.

CAUTION—Ordinarily the setting of the noise gate control should not be changed unless the 6P5G tube is replaced.

To adjust this control, use external antenna connection and short circuit the antenna lead. The noise switch on back panel of the chassis should be in the normal position. Turn the gang condenser to the completely closed position. Open

Wind 1/4 turn in a clockwise direction (from right side of chassis) around condenser drive pulley. Wind cord over pulleys A, B, and C as shown. Wind 4 1/2 turns in a clockwise direction (from front of chassis) around tuning control shaft. Turns should progress toward the chassis.


Wind 1 1/4 turns in a clockwise direction (from right side of chassis) around condenser drive pulley. This front should be at left side (from front of chassis) of pulley groove. Pass cord through hole in pulley rim. Secure tension spring to cord loop. Knot other end of cord to free end to hook on drive pulley. Replace guide arm.

Dial Pointer Attachment—Tune in a signal of known frequency. Set the pointer at this frequency on the dial scale. Secure pointer to cord—See illustration.

MODEL 5A25S

Drive Cord Replacement

Remove dial lamp socket and bracket from dial mounting plate.

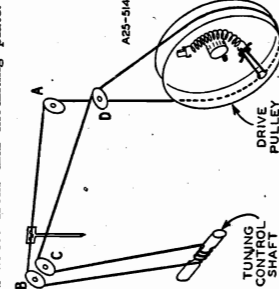

Remove tension spring from pulley. Double new drive cord and knot both ends to same loop on tension spring. There should be a distance of 13 inches between knot and looped end of cord.

Secure other end of spring to hook on pulley. Thread looped end of cord, starting from inside of drive pulley, through hole in rim of drive pulley.

MODEL 1A29 Issue D

Drive Cord Replacement

Turn gang condenser to completely closed position. Remove 5Y3G tube from socket. Remove guide arm from front of chassis—See illustration.

Use a drive cord approximately 70 inches in length. Tie a large knot with a small loop at one end of the new drive cord. Thread other end of cord up through hole in rim of condenser drive pulley. Pull cord through hole until large knot is flush against pulley rim.

Wind 3/4 turn in a clockwise direction (from right side of chassis) around condenser drive pulley. Wind cord over pulleys A, B, and C as shown. Wind 3 1/2 turns in a clockwise direction (from front of chassis) around tuning control shaft. Turns should progress toward the chassis.

Wind 1/4 turn in a clockwise direction (from right side of chassis) around condenser drive pulley. This turn should be at left side (from front of chassis) of pulley groove. Pass cord through hole in pulley rim. Secure tension spring to cord loop. Knot other end of cord to free end to hook on drive pulley. Replace 5Y3G tube. Replace guide arm.

Dial Pointer Attachment—Tune in a signal of known frequency. Set the pointer at this frequency on the dial scale. Secure pointer to cord—See illustration.

MODELS 8A30, 8A31.


Drive Cord Replacement

Use a drive cord approximately 70 inches in length. Tie a large knot with a small loop at one end of the new drive cord. Thread other end of cord up through hole in rim of condenser drive pulley. Pull cord through hole until large knot is flush against pulley rim.

Turn gang condenser to completely closed position. Remove guide arm from front of chassis—See illustration.

WELLS-GARDNER & CO.

MODEL 5A25S
Schematic, Voltage, Socket
Alignment, Trimmers
Sensitivity

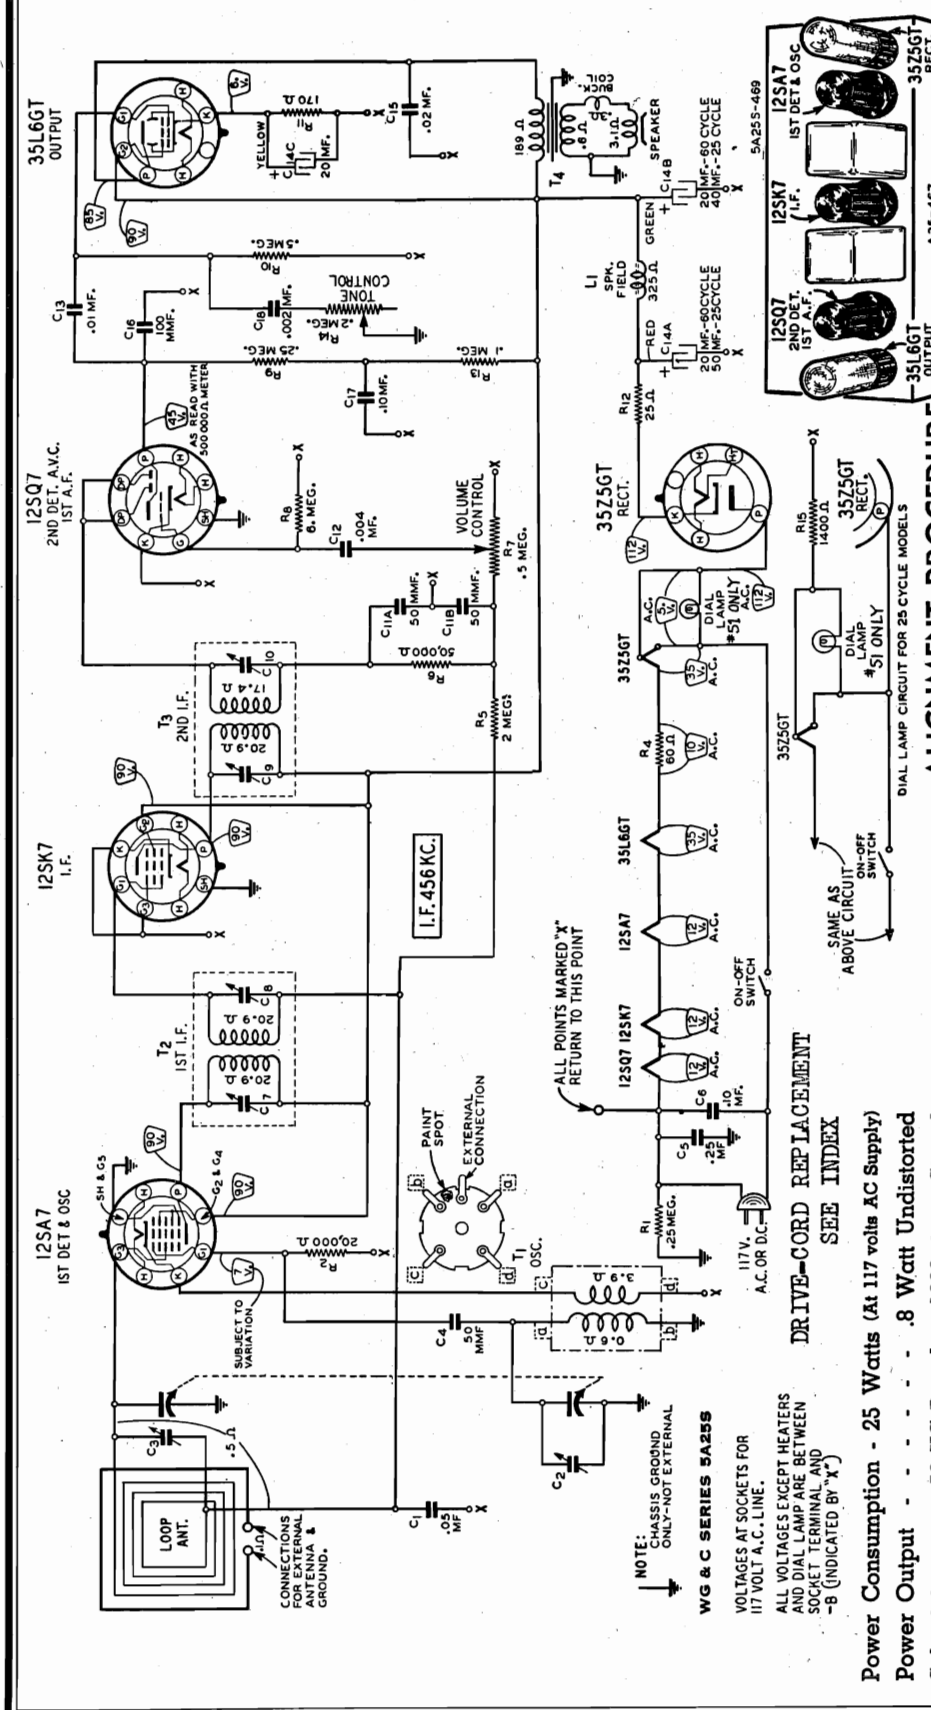

ALIGNMENT PROCEDURE


GENERATOR*	FEED INTO	DUMMY	GANG	ADJUST
456 KC	Signal Grid	.1 mf.	Turn Rotor to full open	1st I.F. (C7) & (C8) 2nd I.F. (C9) & (C10)
1730 KC	Signal Grid of 1st Det.	.1 mf.	Turn Rotor to full open	Oscillator (C2)
1500 KC	None—See Note		Turn Rotor to max. output	Antenna (C3)

NOTE—Connect a loop approximately one foot in diameter across the antenna and ground posts of the signal generator. Secure the back in place on the cabinet. Place radio approximately 3 feet from loop so as to pick up signal. Radio should not be in proximity to any metal [metal bench, etc.]

DRIVE-CORD REPLACEMENT
SEE INDEX



WG & C SERIES 5A25S
VOLTAGES AT SOCKETS FOR 117 VOLT A.C. LINE.
ALL VOLTAGES EXCEPT HEATERS AND DIAL LAMP ARE BETWEEN SOCKET TERMINAL AND -B (INDICATED BY 'X')

Power Consumption - 25 Watts (At 117 volts AC Supply)
Power Output - .8 Watt Undistorted
Selectivity - 50 KC Broad at 1000 times Signal
Intermediate Frequency - 456 KC
Speaker - 5" Electro Dynamic
Tuning Frequency Range - 528 to 1730 KC
Sensitivity - 50 Microvolts per Meter Average
 (For .05 Watt Output)

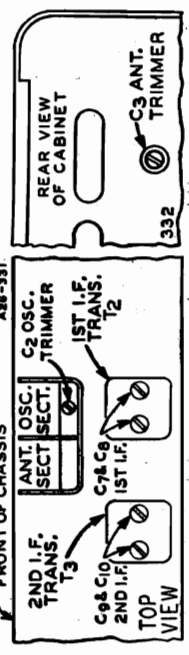

WELLS-GARDNER & CO., INC.

MODELS 6A26, 6A26S
Schematic, Voltage, Socket
Sensitivity, Notes

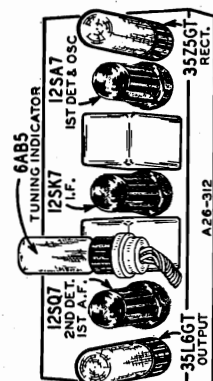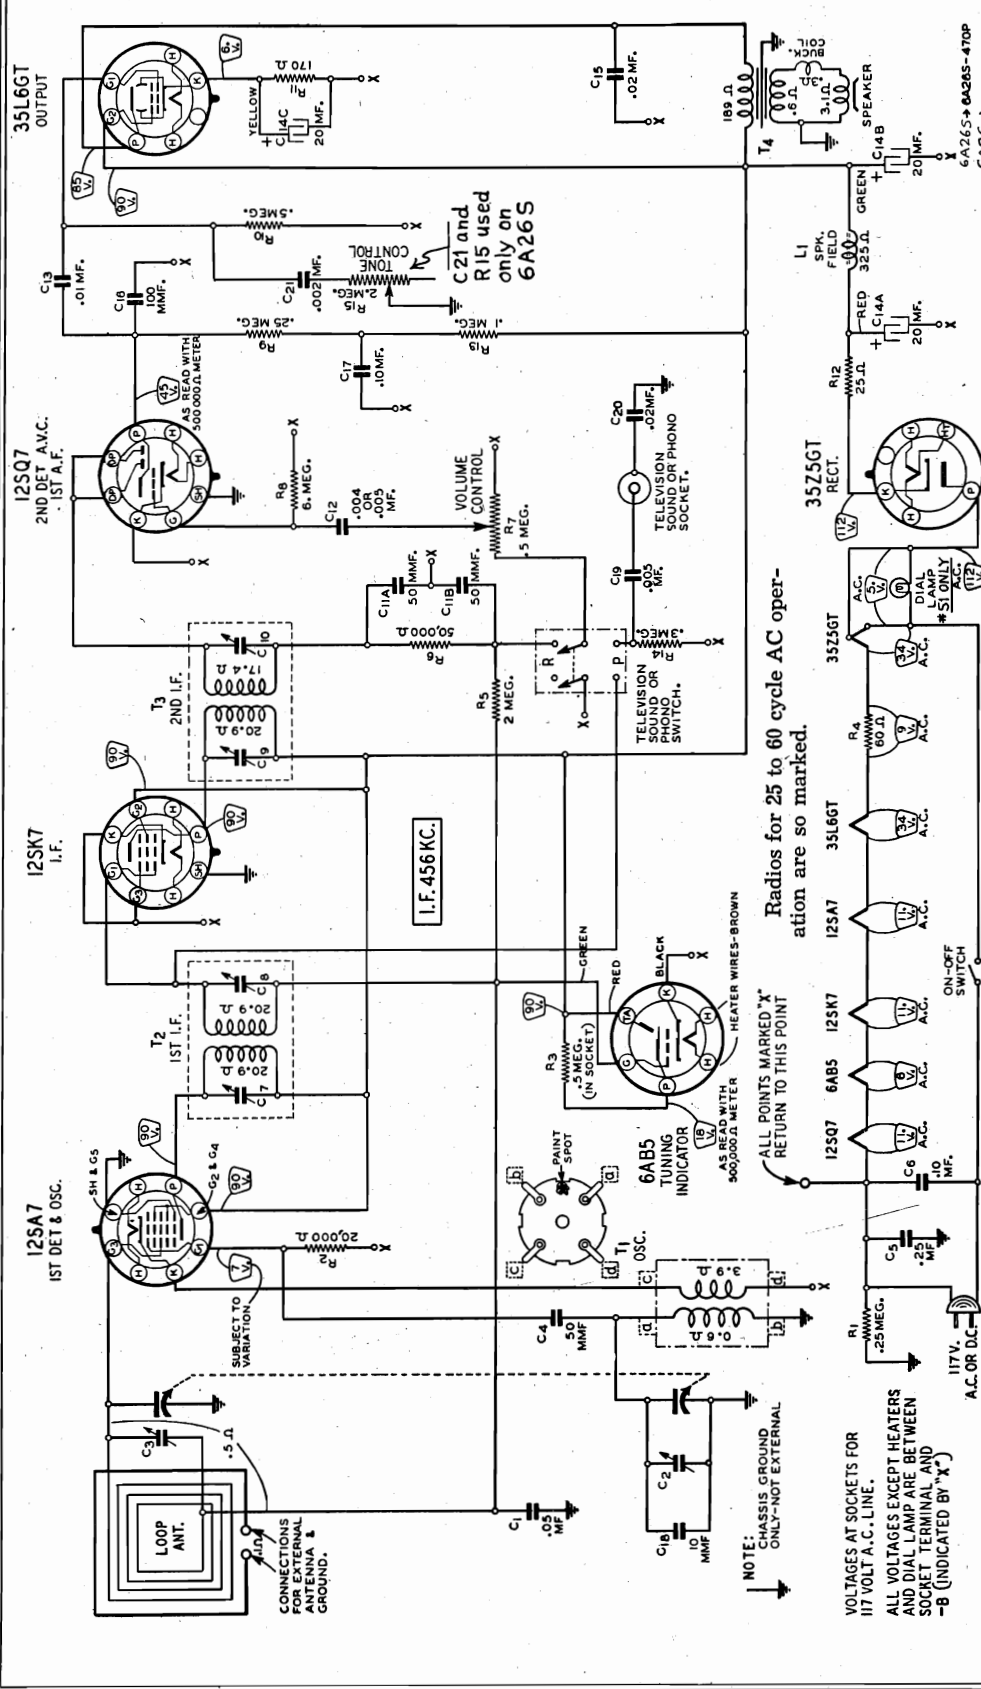

TO REDUCE MODULATION HUM:
 Insulate dial-lamp clip from mounting bracket.
 Return condenser C1 to B- (point X on schematic) instead of to chassis ground.
 Dress lead from condenser C12 to volume control as far as possible from heater leads.
 Use ground connection with external antenna.
DISTORTION and BLOCKING:
 Check whether resistor R10 has open circuited due to loose pigtail connection to resistor proper.

- WG & C SERIES 6A26 WG & C SERIES 6A26S
- Power Consumption - 28 Watts (At 117 volts AC Supply)
 - Power Output - .8 Watt Undistorted
 - Selectivity - 50 KC Broad at 1000 times Signal
 - Intermediate Frequency - 456 KC
 - Speaker - 5" Electro Dynamic
 - Tuning Frequency Range - 528 to 1730 KC
 - Sensitivity - 40 Microvolts per Meter Average (For .05 Watt Output)

FOR OTHER DATA
SEE INDEX

MODELS 6A26, 6A26S
 MODEL 6A27
 MODEL 6D1
 Alignment, Trimmers

WELLS-GARDNER & CO.


ALIGNMENT PROCEDURE: 6A26, 6A26S

Connect Ground Post of Signal Generator to B—(12SK7—Prong No. 3) in Chassis.

SIGNAL GENERATOR		DUMMY ANTENNA	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM (See Trimmer Illustration)
FREQUENCY SETTING	CONNECTION AT RADIO			
456 KC	Signal Grid of 1st Det. Connect at Stator of Large Gang Section.	.1 mf.	Turn Rotor to full open	1st I.F. (C7) & (C8) 2nd I.F. (C9) & (C10)
1730 KC	Signal Grid of 1st Det.	.1 mf.	Turn Rotor to full open	Oscillator (C2)
1500 KC	None—See Note		Turn Rotor to max. output	Antenna (C3)

NOTE—Connect a loop approximately one foot in diameter across the antenna and ground posts of the signal generator. Secure the back in place on the cabinet. Place radio approximately 3 feet from loop so as to pick up signal. Radio should not be in proximity to any metal (metal bench, etc.).

CALIBRATION—If it is necessary to calibrate the radio, remove the radio from the cabinet. Tune in an 800 KC signal. If the pointer is not at 800 KC on the dial, loosen the 2 clamps which hold the pointer assembly on the cord, move the pointer to the 800 KC mark, and

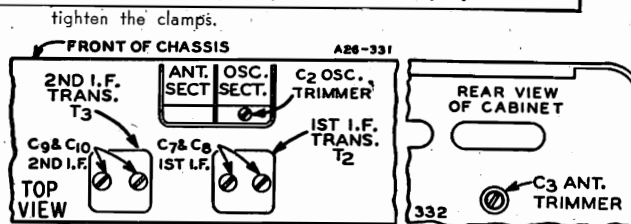

ALIGNMENT PROCEDURE: 6A27, 6D1

Remove Jumper on Loop Antenna for All Adjustments.

Connect Ground Post of Signal Generator to B—(12SK7—Prong No. 3) in Chassis.






SIGNAL GENERATOR		DUMMY ANTENNA	BAND SWITCH SETTING	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM (See Trimmer Illustrations)
FREQUENCY SETTING	CONNECTION AT RADIO				
I. F.					
456 KC	Signal Grid of 1st Det. Connect at Stator of Large Gang Section.	.1 mf.	B Range	Turn Rotor to full open	1st I.F. (C11) & (C12) 2nd I.F. (C13) & (C14)
RANGE B					
1730 KC	Signal Grid of 1st Det.	.1 mf.	B Range	Turn Rotor to full open	Oscillator Range B (C4)
1500 KC	Red Antenna Screw at Back of Loop	.1 mf.	B Range	Turn Rotor to max. output	Antenna Range B (C6)—See Illustration below.
600 KC	Same as Above	.1 mf.	B Range	Turn Rotor to max. output	600 KC (C8) Rock Rotor—See Note A
RANGE C (6A27 ONLY)					
6500 KC	Same as Above	.1 mf.	C Range	Turn Rotor to full open	Oscillator Range C (C5)
6000 KC	Same as Above	.1 mf.	C Range	Turn Rotor to max. output	Ant. Range C (C1) Rock Rotor—See Note A
RANGE D (6D1 ONLY)					
12,200 KC	Same as Above	.1 mf.	D Range	Turn Rotor to full open	Oscillator Range D (C3)
11,000 KC	Same as Above	.1 mf.	D Range	Turn Rotor to max. output	Ant. Range D (C2) Rock Rotor—See Note A

Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.

After each range is completed, repeat the procedure as a final check.


NOTE A—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.

CAUTION—When aligning the short wave bands be sure NOT to adjust at the image frequency.

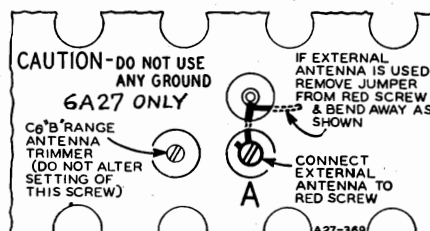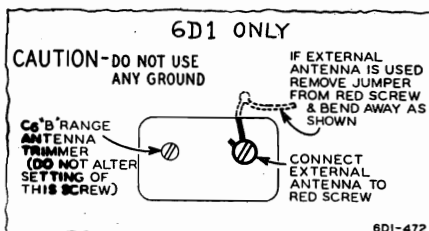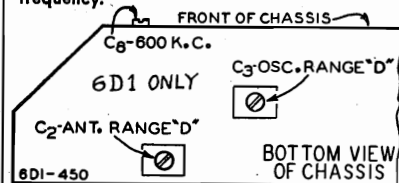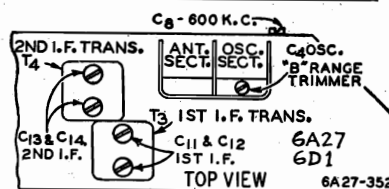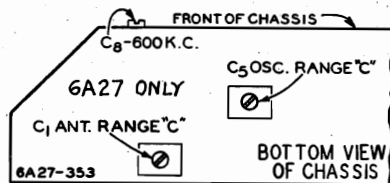

MODEL 6B7 (Early)
Schematic, Voltage, Socket
Sensitivity
MODEL 6B7, Issues B, C, D
Socket Layout

WELLS-GARDNER & CO.

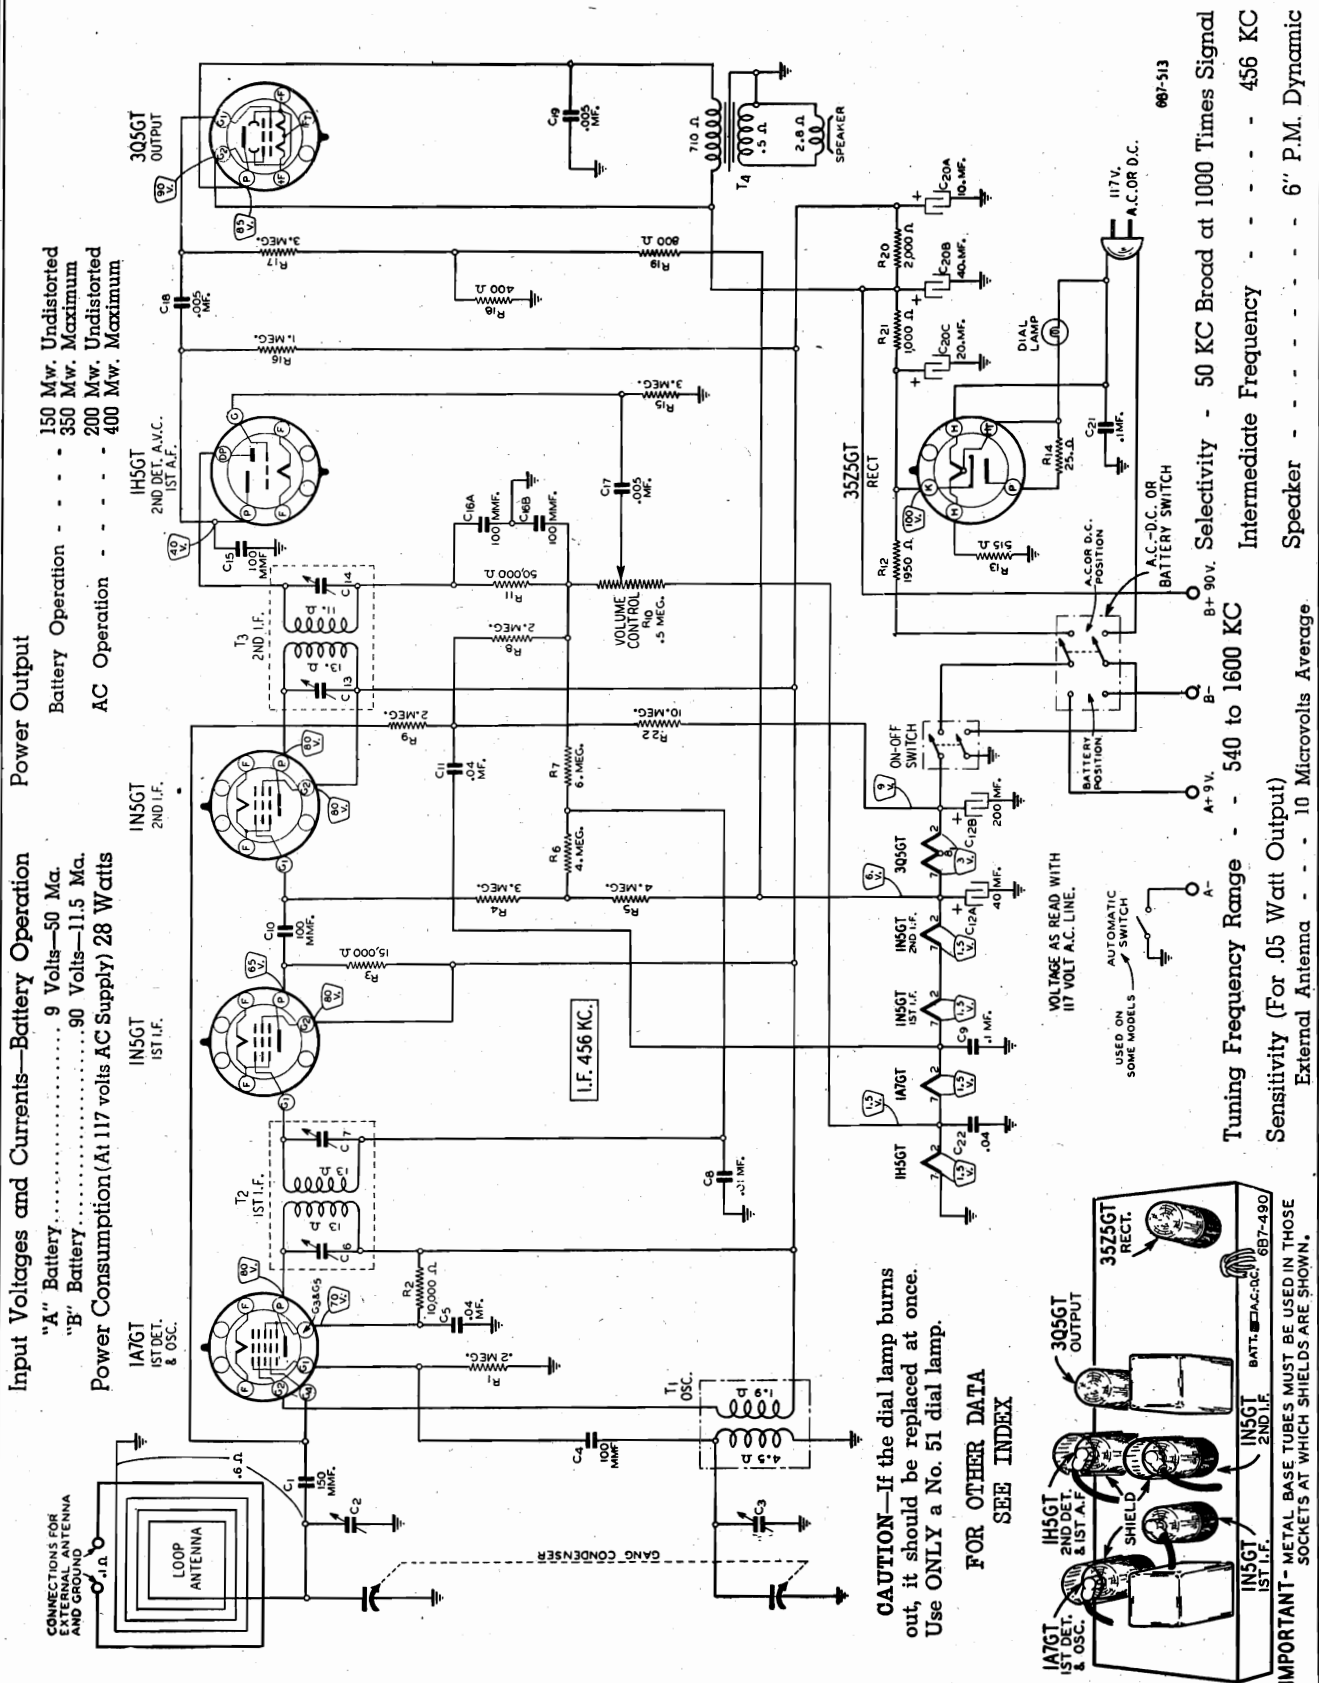

Power Output

Input Voltages and Currents—Battery Operation

Battery Operation
150 Mw. Undistorted
350 Mw. Maximum
AC Operation
200 Mw. Undistorted
400 Mw. Maximum

"A" Battery 9 Volts—50 Ma.
"B" Battery 90 Volts—11.5 Ma.
Power Consumption (At 117 volts AC Supply) 28 Watts


CONNECTIONS FOR
CENTER ANTENNA
AND GROUND

LOOP
ANTENNA

GANG CONDENSER

CAUTION—If the dial lamp burns
out, it should be replaced at once.
Use ONLY a No. 51 dial lamp.

FOR OTHER DATA
SEE INDEX

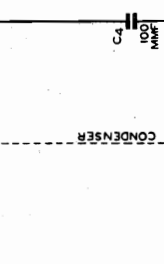

IMPORTANT—METAL BASE TUBES MUST BE USED IN THOSE
SOCKETS AT WHICH SHIELDS ARE SHOWN.

Tuning Frequency Range - - - 540 to 1600 KC
Selectivity - 50 KC Broad at 1000 Times Signal
Intermediate Frequency - - - - - 6" P.M. Dynamic
Speaker - - - - - 6" P.M. Dynamic

Sensitivity (For .05 Watt Output)
External Antenna - - - 10 Microvolts Average

VOLTAGE AS READ WITH
117 VOLT A.C. LINE.


USED ON
AUTOMATIC
SWITCH
SOME MODELS

WELLS-GARDNER & CO.


MODEL 6B7, Issues C, D
6B7-3, 6B7-4
Schematic, Voltage

687-582

FOR OTHER DATA SEE INDEX.

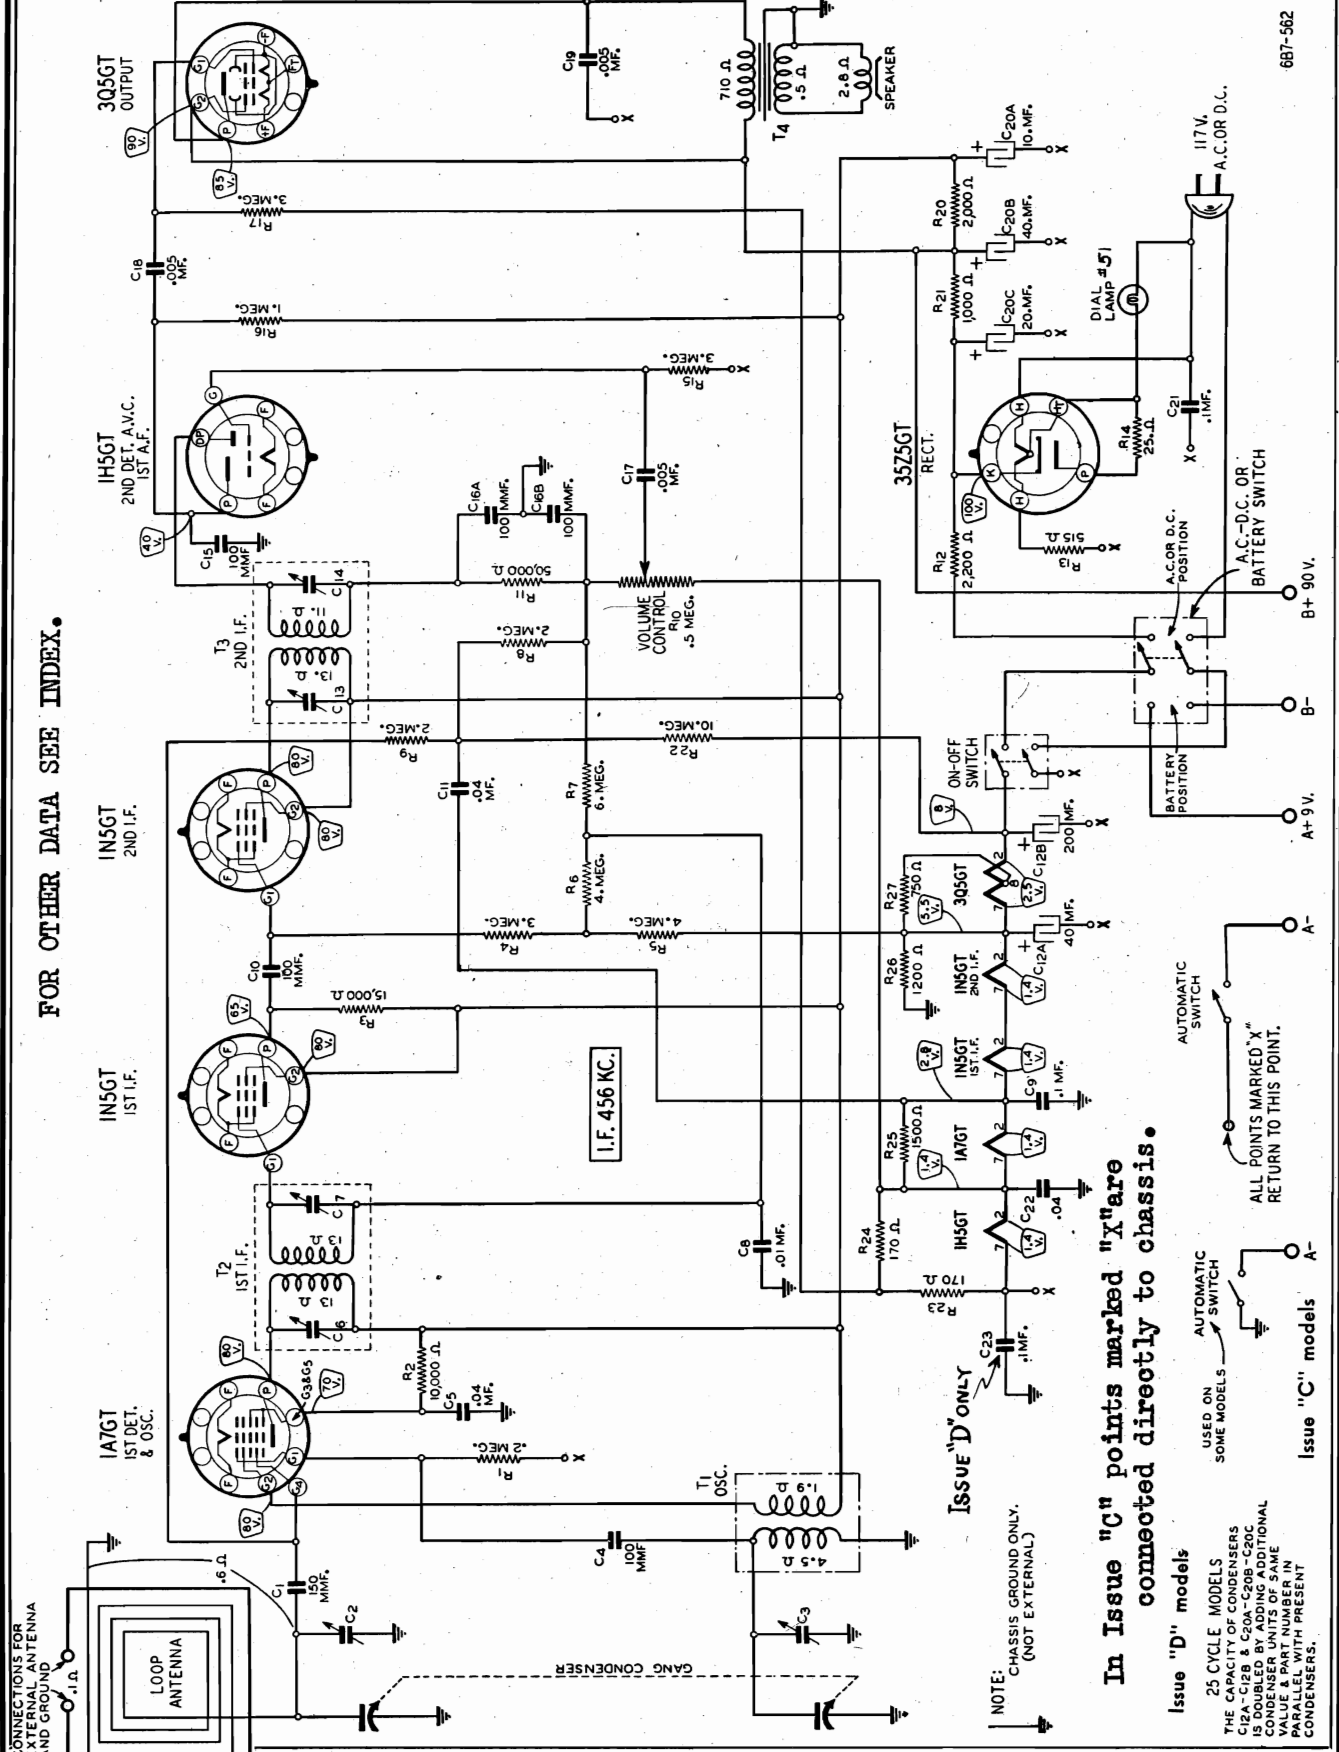

CONNECTIONS FOR EXTERNAL ANTENNA AND GROUND




In Issue "C" points marked "X" are connected directly to chassis.

Issue "D" models
25 CYCLE MODELS
THE CAPACITY OF CONDENSERS C12A-C12B & C20A-C20B-C20C IS DOUBLED BY ADDING ADDITIONAL CONDENSER UNITS OF SAME VALUE IN PARALLEL WITH PRESENT CONDENSERS.

NOTE: CHASSIS GROUND ONLY. (NOT EXTERNAL)

Issue "D" ONLY

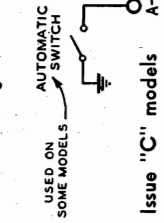

ALL POINTS MARKED "X" RETURN TO THIS POINT.

Issue "C" models

Issue "D" models

MODELS 6B7, Issues B, C, D
6B7-3, 6B7-4

WELLS-GARDNER & CO.

Alignment, Trimmers, Changes
Notes

ALIGNMENT PROCEDURE

The following equipment is required for aligning:
A Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed.
Output Indicating Meter—Non-Metallic Screwdriver.
Dummy Antenna—.1 mf.

Volume Control—Maximum All Adjustments.
Connect Radio Chassis to Ground Post of Signal Generator with a Short Heavy Lead.
Allow Chassis and Signal Generator to "Heat Up" for several minutes.

SIGNAL GENERATOR FREQUENCY SETTING	CONNECTION AT RADIO	DUMMY ANTENNA	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
485 KC	Signal Grid of 1st Det. (Top Cap)	.1 mf.	Turn Rotor to full open	(See Trimmer Illustration below and Illustration of Back—Page 1)
1400 KC	Signal Grid of 1st Det.	.1 mf.	Turn Rotor to full open	1st I.F. (C3) & (C7) 2nd I.F. (C15) & (C14)
1800 KC	None—See Note A	Turn Rotor to max. output	Oscillator (C3)	Antenna (C2)

Series 6B7

CHANGES MADE FOR ISSUE "B"
To satisfy Underwriter's requirements, the chassis issue will become "B" when several changes in the routing of wires and the arrangement of parts in the chassis have been made.

Chassis with these changes have had the 6 lug terminal strip 4A98 removed.

PROLONGING TUBE LIFE
CHANGES FOR ISSUE "C"

To compensate for variations in tube characteristics as well as high line voltages, the following changes have been made in the filament series circuit to reduce the voltages across the tube filaments and to prolong tube life.

Resistor R12, which is in series with the filament series, has been changed from 1950 ohms to 2200 ohms.

There was unequal emission from the 2 sections of the filament of the 3Q5GT output tube. This caused unequal voltages across the 2 sections of the filament and shortened the tube life. There is now a 750 ohm resistor (R27) across one section which equalizes the currents through both portions.




The four 1½ volt tube filaments were shunted with 1200 ohms - Resistors R19 - 800 ohms and R18 400 ohms (See old schematic). The connecting point between these 2 resistors established the grid (bias) voltage for the output tube. These 4 tubes are now shunted by one 1200 ohm Resistor R26.

The 1A7GT 1st Detector Filament is now shunted with a 1500 ohm resistor - R25.

The 1H5GT 2nd Detector Filament is now shunted with 340 ohms - Resistors R24 and R23 in series. The connecting point between these 2 resistors establishes the grid (bias) voltage for the output tube.

NOTE A—Chassis must be in cabinet. Connect a loop approximately one foot in diameter across the antenna and ground posts of the signal generator. The back of the cabinet must be in place. Place radio approx. 3 feet from loop so as to pick up signal. Radio should not be in proximity to any metal (metal bench, etc.).

CALIBRATION (For models with pointer in front of dial scale)—To obtain dial scale calibration, tune in an 800 KC signal. The pointer should be at the 800 KC mark on the dial. If it is not, hold the pulley at the back of the dial and loosen the pointer screw. Set the pointer at the 800 KC mark. Hold the pointer and retighten the pointer screw.

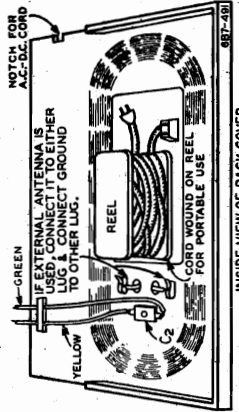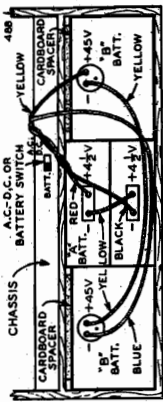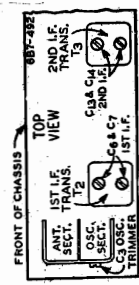

Removing Chassis from Cabinet

Take out the 2 screws, one at each side on the outside of the cabinet. Grasp the chassis shelf at each rear corner and edge it away from the cabinet front until the chassis shelf and chassis slide easily out of the cabinet.
To remove the shelf from the chassis, take out the bolt and the 2 screws at the bottom of the shelf.

Using Radio Without Batteries—The radio may be used without batteries when it is operated on A.C. D.C. If this is done, tape the prongs of the battery plugs to prevent them from accidentally touching each other, and place the plugs and cables in the battery compartment.

Caution

The metal chassis is connected to one side of the line through a 10 mfd. condenser. Both AC and DC power lines are generally grounded on one side. If the side of the line not connected to the metal chassis through this condenser is grounded and the metal chassis comes in contact with an external ground, this condenser will be connected across the line and there will be an increase in hum.

Therefore, in any service work on the chassis, keep it on a wood or other insulated surface to avoid contact with ground. The person working on the set should avoid getting in contact with any ground.

Series 6B7-3, 6B7-4 CHANGES MADE FOR ISSUE "D" March 11, 1940

To satisfy additional Underwriters requirements, the chassis has been isolated from the AC-DC line except for a connection through a .1 mf. condenser - See schematic. On these models the battery wires are held by a clamp located under the chassis shelf. On previous issues this clamp was above the shelf. The battery compartment cardboard filler, have been made smaller to clear the above mentioned clamp.

On chassis with the above changes incorporated, the issue letter becomes "D."

All voltages on this issue chassis except the heaters and dial lamp are measured between socket terminal and B- (indicated by "X") - See schematic



WELLS-GARDNER & CO.

PHONOGRAPH COMBINATION RADIO

WITH PUSH BUTTON TUNING AND AUTOMATIC RECORD CHANGER

MODEL 8A30

Schematic, Voltage, Socket, Sensitivity
Antenna Data, Coils

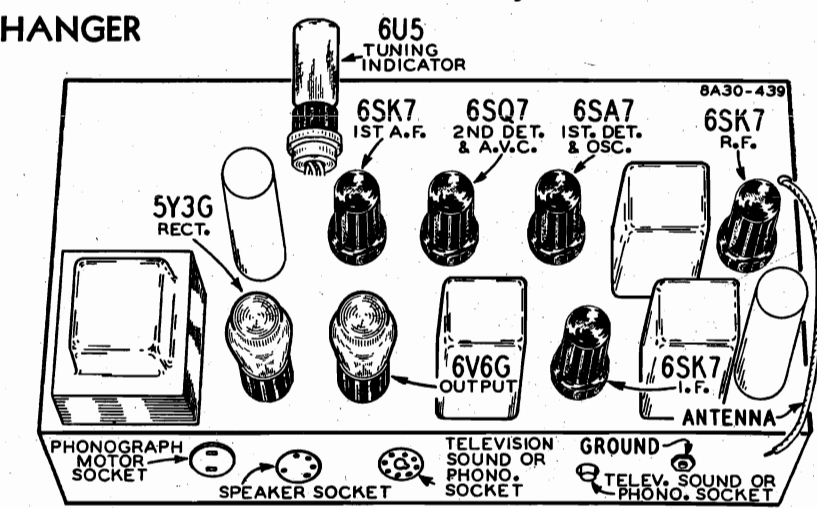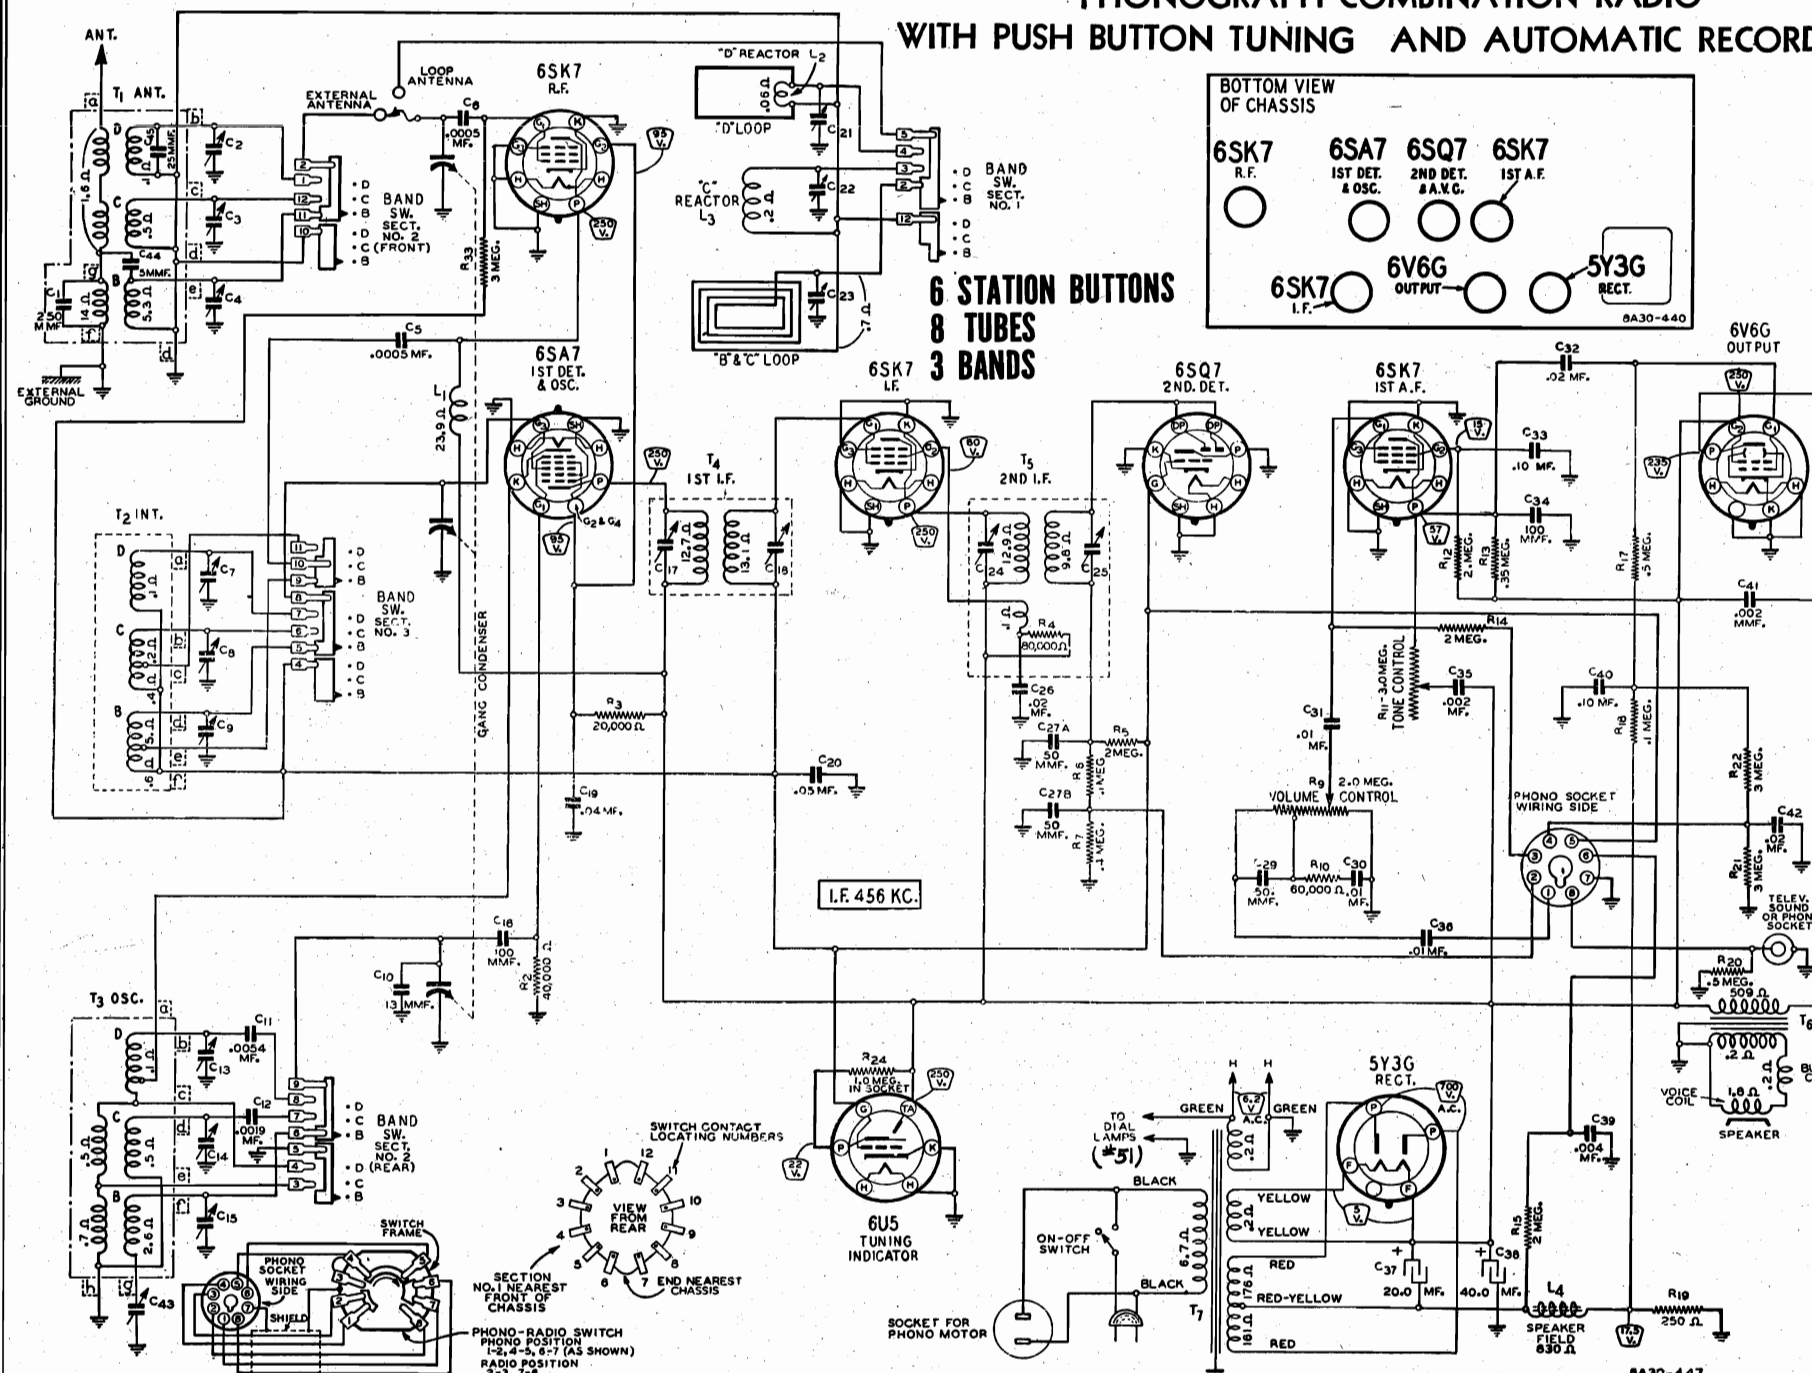

Antenna and Ground


Two loop antennas are incorporated in the speaker chamber and may be used for broadcast band and short wave reception. For the reception of local or nearby stations, an outside antenna is usually not required. The use of the loop antenna may, in some locations, provide best broadcast band operation.

In general, however, more stations will be heard and noise will sometimes be reduced by using an outside antenna.

For best reception of short wave stations, an outside antenna is recommended.


A white wire will be found coming out of the chassis. Connect this wire to the outside antenna lead.

On the back panel of the chassis base is a screw (marked GND) under which the ground wire should be fastened.

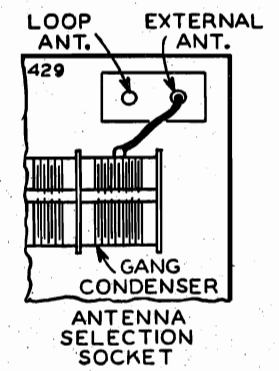

ANTENNA SELECTION SOCKET

At the right front corner of the chassis base (from back of cabinet) is a 2 hole pin tip socket—See illustration. If it is desired to operate the radio using the loop antennas, the pin tip should be inserted in the hole farthest from the side of the chassis. If it is desired to operate the radio using an external antenna, insert the pin tip in the hole nearest the side of the chassis. The socket may be reached after removing the four wing nuts holding the cover over the opening in the cabinet back.

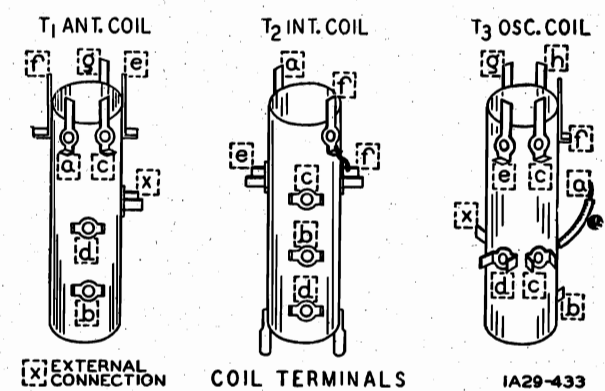

SPECIFICATIONS

Power Consumption 71 Watts (At 117 volts 60 cycles)
88 Watts (Phonograph Operating)

Power Output - - - - - 4.0 Watts Undistorted
5.0 Watts Maximum

Selectivity - - 30 KC Broad at 1000 times Signal

Intermediate Frequency - - - - - 456 KC

Speaker - - - - - 10" Electro-Dynamic

Receivers of this model which are to be used on 25 cycle, 230 volt, or other service are so marked on label.

Tuning Frequency Range

B Range..... 528 to 1730 KC

C Range..... 2200' to 7000 KC

D Range..... 7000 to 22000 KC

Sensitivity (For 0.5 Watt output)

B Range..... 1.0 Microvolt Average

C Range..... 1.0 Microvolt Average

D Range..... 3.0 Microvolts Average

FOR OTHER DATA
SEE INDEX

Important—A good antenna and ground are essential for best operation of this radio. Connections should be clean and tight. Do not use an old outside antenna as in most cases it will be unsatisfactory.

Voltages at Sockets

Line Voltage—117.

Volume Control—Maximum.

Antenna Shorted to Ground.

Readings taken with 1000 ohm-per-volt meter. Plate and screen voltages are read on 500 volt scale.

WELLS-GARDNER & CO.

MODEL 8A30, Automatic Record Changer Assembly, Adjustments

Automatic Record Changer

(Patents Pending)

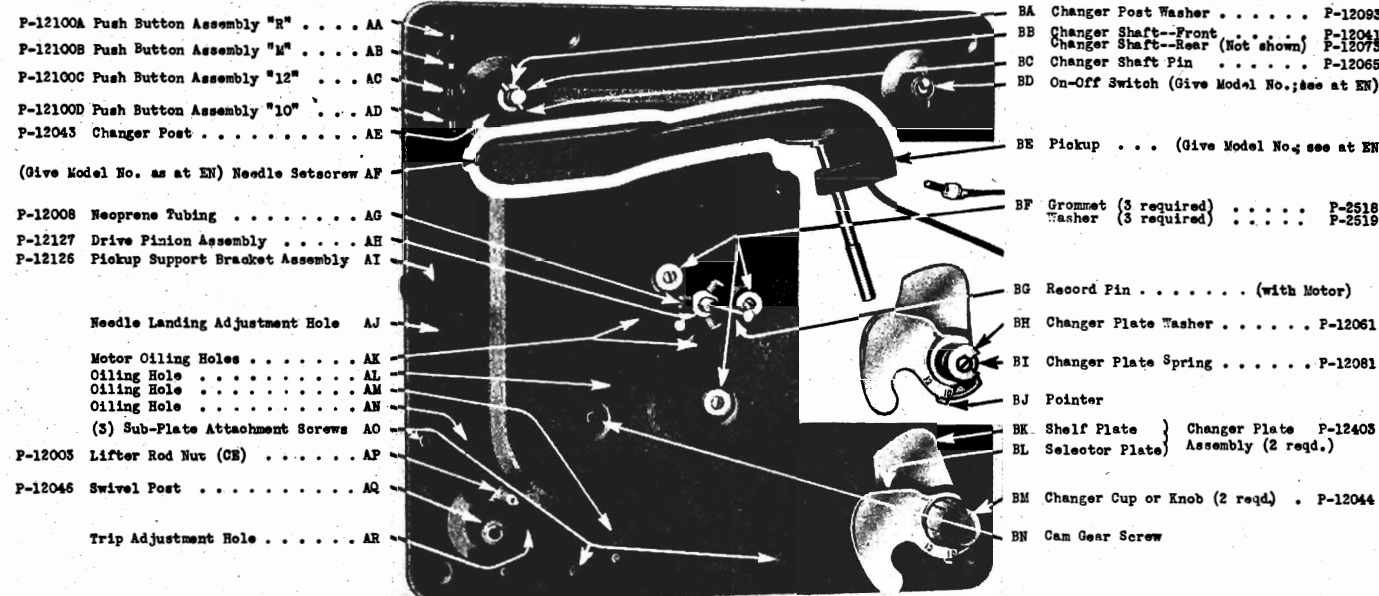


PHOTO A-B. Top View.

For the Service Man

This Manual is designed for the use of the service mechanic only, and is intended to facilitate as far as possible his work of caring for the Changer mechanism, whether he is called in for the purpose of assuring its continued satisfactory operation, or to remedy some difficulty which has appeared. For his convenience, the "Operating Instructions," supplied to user by the factory, may be summarized as follows:

The Changer plays twelve 10" or ten 12" records. . . . To reload, revolve the two posts slightly, grasping them underneath the Shelf Plates. Turn them back after the played records are removed; they will fall and lock when in proper position. Then place the new records on the Shelf Plates, and push "R" button to put Changer in operation. . . . To play the other size records, turn the knob at top of each post until proper figure is opposite pointer, and press the "10" or "12" button, to agree with pointer setting. . . . To reject a record (or to start a change cycle as for testing purposes) simply press the "R" (Release or Reject) button, at any time while needle is upon a record. . . . To play manually, turn plates out of the way as for reloading, and press "M" button.

(What are here called the "plates" of the Changer are frequently known among mechanics as "blades"--a name best avoided when talking with users because it may convey to some an exaggerated impression of danger in the movement of these parts).

Illustrations

The three photos illustrate all vital parts of the Changer. Letters are used alphabetically, to refer to points on the photos; thus, Motor Oiling Holes "AK" are found by simply glancing down Column A (left side of Photo A-B) to letters AK. Reference letters must NOT be used for ordering parts; order only by the factory numbers. Where no number is given, part cannot be separately supplied; order the Assembly containing it.

Oiling (reprinted from Operating Instructions)

The Changer should be lubricated once a year with about a dozen drops of a good light machine oil at each of the following 6 points. All points can be reached from above, through holes in the mounting plate, as follows:

- No. 1) Three oil holes on motor gear housing. Reach all three through two holes AK.
- No. 2)
- No. 3)
- No. 4 Through hole marked AL, drop the oil upon flat surface of cam. It will distribute itself to proper points.
- No. 5 Through hole marked AM, see felt wick, and drop the oil directly upon it.
- No. 6 Through hole marked AN, see felt wick, and drop the oil directly upon it.

To Check Oiling

If squeaks are heard compare the squeak with and without a load of records; any stack of wax records in motion is likely to squeak a little against a pin through their center. See that all five wicks are in position, including three 1/4" round wicks in frame of Motor, one washer-shaped wick ("No. 5") on Lift CV, and one ("No. 6") on Cam Lever CS. See that each wick is thoroughly saturated (as it may not be if insufficient oil or too heavy oil has been used). Lift out all three motor wicks, with tweezers; see if old oil has become gummy (commonly due to use of low-grade oil or low-viscosity oil). If necessary, clean gummed-up wicks with kerosene. See that each is saturated with good oil; then, before replacing them, drop a little good oil into the holes. The gearbox of the Motor is packed with a semi-fluid grease at the factory, and it should never be necessary to take it apart for lubrication purposes.

General Description of the Change Cycle

An automatic record player for records of two sizes has three principal duties to perform. These duties are here performed by three mechanisms, interconnected and built together but largely separate in their operation.

(1) The record-changing mechanism--brought into operation originally by the contact of Lifter Cam DG with Pawl DH--is the simplest of the three. It is driven by the cam groove (not visible) on under side (in Photo C-D) of Cam Gear DF. As Cam Lever CS is forced, by the Pawl, out underneath Lift CV (which is shown revolved to the right for visibility) the Lift rises and forces roller DJ into the under groove in Cam Gear. The motion is transferred to Rear Changer Shaft (at ED) through Cam Connecting Rod DE (EC), thence through Changer Connecting Rod FD to Front Changer Shaft BB.

(2) The pickup-operating mechanism--likewise brought into operation originally by the cam-and-pawl action upon Cam Lever CS--is driven in part by the groove in upper (visible) side of Cam Gear DF. As Cam Lever is forced out, at the beginning of the change cycle, against Link CG, it causes the Link to push upward upon Pickup Plunger DA, thus lifting needle from record. The same pressure upon Link CG works, through Guide Arm CD, to force Stud DD down into the groove on the Cam Gear. This rotates the pickup arm, while Pickup Plunger DA holds it up off of record. It is rotated first out beyond the turntable until Selector Plates BL have dropped the next record, then rotated back to proper position to start playing.

(3) The mechanism for bringing needle into correct starting position must operate accurately for both 10" and 12" records. Partly due to this requirement, the starting position is not determined by the cam action. The upper groove on Cam Gear is designed so that it, acting alone, would carry the needle farther back toward record pin than would ever be desirable as a starting adjustment. Travel of pickup arm toward Record Pin is then stopped, at proper point for lowering onto the record, by action of Lever Hub CL. The stopping takes place as lug EW (upon the Lever Hub) strikes the shoulder on Rod EX. This enables the entire mechanism

rotated by cam action on Guide Arm CD to travel on past the proper point of rotation for record-starting, while the pickup arm itself, which is held rigid to Lever Hub CL, is accurately stopped at proper record-starting point.

Correct adjustment for starting position of needle requires therefore only correct adjustment of Rods EX and FK; the radial difference of 1 inch between correct starting position for 10" and 12" records is taken care of by exact dimensioning, at the factory, of surfaces at right end of Rod FK which stop against the "10" and "12" key stems. Due to this, when Adjusting Cam at FP is turned (as directed below under Adjustment A) the starting position of needle is simultaneously altered for both 10" and 12" records.

Adjustments

There are three adjustments that can be made. Except on certain early Changers (See B, below), ALL THREE CAN BE MADE FROM ABOVE: CHANGER NEED NOT BE REMOVED FROM CABINET. All adjustments are correctly made at the factory, and ordinarily need never be altered. Should it become necessary to readjust, due to accident or tampering, proceed as follows:

A. ADJUSTING LANDING POSITION OF NEEDLE ON THE RECORD. If needle comes down on the sound track, playing of records will not start at their beginning. Insert screwdriver through hole AJ. Turn screw head on Needle Landing Adjusting Cam FP very slightly counter-clockwise. If needle comes down too close to outer edge of record, or out beyond edge of record, turn Adjusting Cam clockwise.

The factory adjustment of needle landing is 1/8" in from outer edge of record. Compare also Paragraph 12 below.

B. ADJUSTING DISTANCE FROM RECORD PIN AT WHICH TRIGGER WILL TRIP AND CHANGE CYCLE WILL BEGIN. Insert screwdriver through hole AR. Turn screw head on Trip Adjusting Cam CJ clockwise for earlier tripping, or counter-clockwise for later tripping. (Effect is to alter position of the Cam which strikes Trigger CP. It may be found that Cam has been revolved through a half-turn; in this case, above directions would apply only after Cam has been returned to correct position by revolving screw head one-half turn).

On some models of this Changer no hole will be found in Main Plate at AR. To make the adjustment on these Changers, access must be had to the under-side of the mechanism. Instead of Cam CJ, there will be found a Trip Adjustment Screw, so placed that its end strikes the trigger directly. For earlier tripping, turn this Screw clockwise; for later tripping turn it counter-clockwise.

This Changer does not depend, for automatic tripping, on the records being provided with any special grooves at end; it trips whenever needle comes within a certain distance of Record Pin. The factory adjustment is for 1 1/4" to 1-7/8" from center of Record Pin. This is the most generally satisfactory distance; no modern record will then be cut off before playing is finished, and none will fail to trip at end. For certain records of

MODEL 8A30, Automatic Record Changer
Assembly Views, Adjustments

WELLS-GARDNER & CO.

- P-12123 Swivel Shaft and Head Assem. . . . CA
- P-2522 Fibre Washer (2 required) CB
- P-12048 Lifter Guide CC

- P-12111 Swivel Guide Arm Assembly CD
- P-12003 Lifter Rod Nut (AP) CE
- P-12072 Trunnion, Shoulder Screw (2 reqd) CF

- Link CG

- P-12701 Swivel Tube and Trunnion Assem. CH
- P-12087 Swivel Guide Arm Spring CI
- Trip Adjusting Cam CJ

- P-12089 Swivel Spreader Spring CK
- P-12703 Stop Lever and Trigger Adj. Assem. CL

- P-12026 Upper Swivel Spreader CM
- P-12027 Lower Swivel Spreader CN
- P-12099 Pickup Leader Spring (ER) CO
- Trigger CP
- P-12084 Pawl Spring CQ
- P-12085 Cam Lever Spring CR

- Cam Lever CS
- P-12007 Shoulder Screw CT
- Sub-Plate CU
- Cam Connecting Rod Lift CV

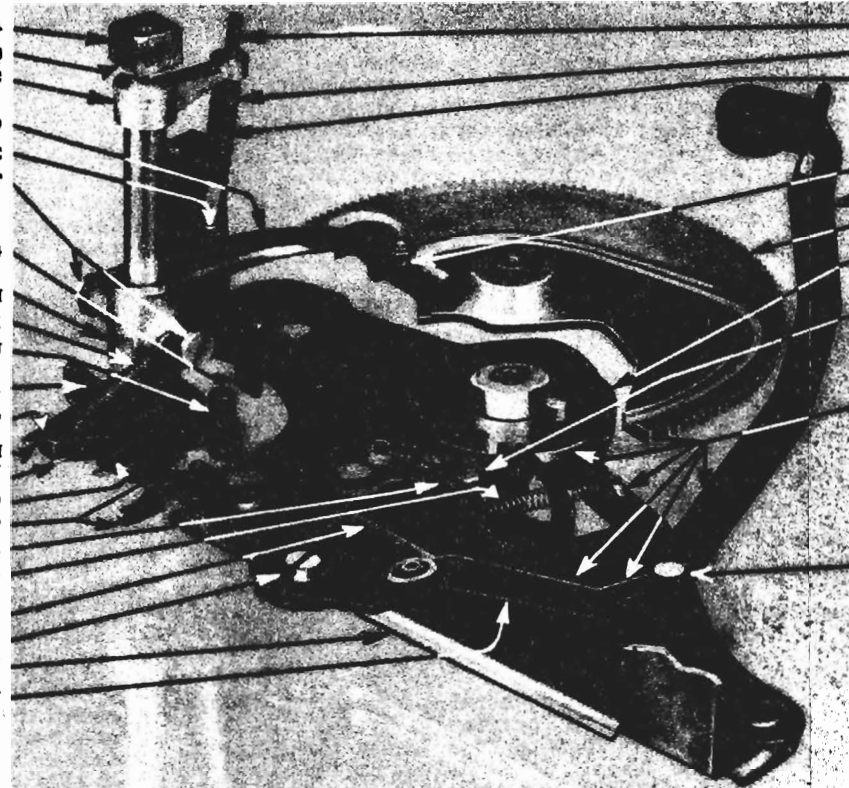


Photo C-D. View of Sub-Plate Assembly, Together with Certain Other Assemblies

- DA Pickup Plunger P-12096
- DB Pickup Plunger Sleeve P-12096
- DC Pickup Plunger Spring P-12097

- DD Stud
- DE Cam Connecting Rod
- DF Cam Gear
- DG Lifter Cam

- DH Pawl

- DI Sub-Plate and Gear Assembly . . . P-12709

- DJ Roller

early manufacture, it may be impossible to find an adjustment that will always trip and never cut off, but these may always be played manually.

C. ADJUSTING HEIGHT TO WHICH PICKUP ARM RISES. The arm should rise, during the change cycle, high enough so that it clears by only 1/4" the record above it, next to be played. (Be careful, before deciding that readjustment is necessary, to see that the record at bottom of stack is not a warped one.) To make this adjustment, loosen Lock-Nut AP (CE) and turn Pickup Sleeve DB to lengthen or shorten Pickup Plunger DA. However, if Pickup is made to rise too close to bottom record, Stud DD may never clear the groove in Cam Gear. In making this adjustment, therefore, care must be taken to see that Pickup arm does not keep moving back and forth continuously (due to Stud DD remaining in engagement with groove). When correct adjustment is found, tighten Lock Nut securely.

Replacing Motor

The service mechanic may be called upon to adapt the Changer to a different power supply. For this purpose, or in case of any serious fault within Motor, remove entire Motor EA (with Record Pin and connecting gear drive) from the Changer, and replace it with a suitable new Motor. (In ordering a replacement Motor, specify the power supply and give Model Number at EN; also make and model number of phono-radio or other type of installation.)

When mounting replacement Motor, it is most important to see that Record Pin is centered between the two Posts of the Changer, that it stands perpendicular to Main Plate EB, and that it has not become bent. When the new Motor has been attached, with three screws through Grommet Sleeves FF into its frame, and Record Pin is seen to revolve without appreciable wobble (a wobble would indicate that it has been bent in transit from factory) the correct position of Pin

- (Give Model No. as at EN) . Changer Motor EA
- (Give Model No.) . Main Mounting Plate Assem. EB
- Cam Connecting Rod EC
- P-12400 Changer Shaft Collar ED
- Spreader Hub Assembly EE
- P-12045 Spring Roller EF
- P-12088 Changer Spreader Spring EG
- Cycling Switch EH
- P-12085 Cam Lever Spring EI
- P-12709 Sub-Plate and Gear Assem. (DI) . . . EJ
- P-12116 Adjusting Rod Assembly EK
- Cam Connecting Rod Lift (CV) EL
- P-12083 Cam Connecting Rod Lift Spring . . . EM
- Changer Model Number EN
- Changer Serial Number EO
- P-12505 Rejection Rod Support EP
- P-12084 Adjusting Rod Lever Spring EQ
- P-12099 Pickup Leader Spring (CO) ER
- (Give Model No. as at EN) Pickup Cord ES
- P-12053 Post Nut ET
- #1228 Shakeproof Washer EU
- M-93 Male Plug (on end of cord) EV
- Lug on Lever-Hub Assem. EW
- Adjusting Rod EX

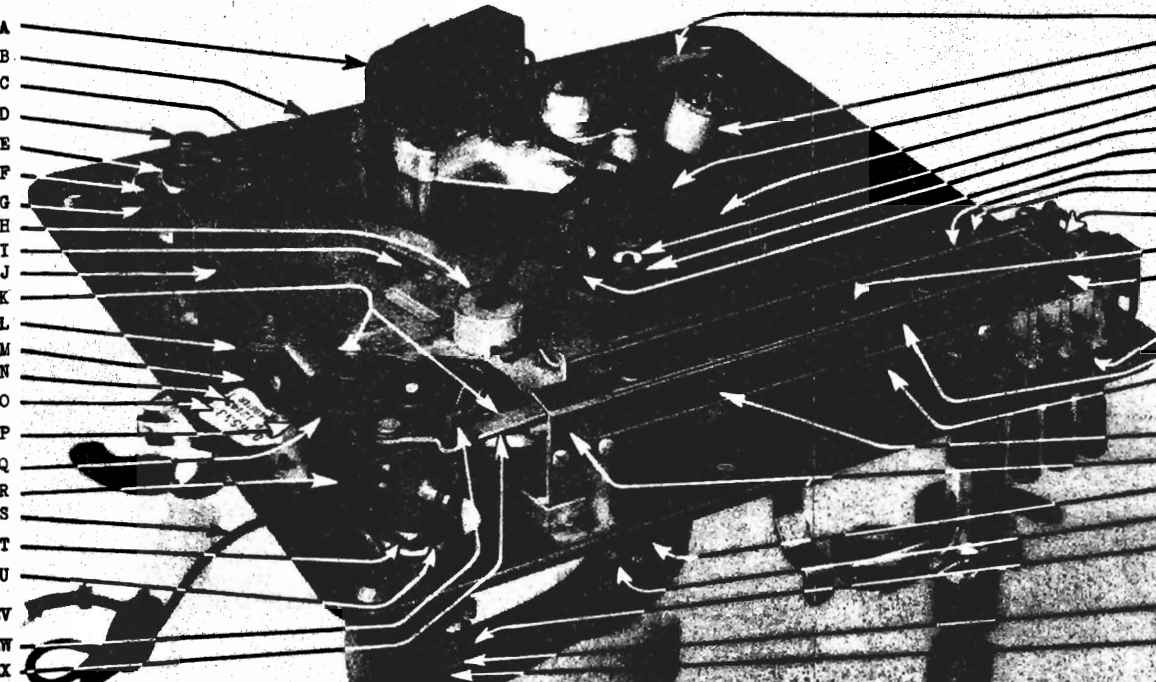


Photo E-F. Bottom View

- FA On-Off Switch (Give Model No.; see at EN)
- FB Male Plug with #7002 Shell M-21
- FC Cord Clamp 292-S
- FD Changer Connecting Rod Assem. . . . P-12122
- FE Shim (Assortment) P-1397
- FF Grommet Sleeve (3 reqd.) P-12059
- FG Idler Gear
- FH Manual Key Rod P-12077
- FI Rejection Rod P-12510
- FJ Manual and Rejection Rod Spring P-12090

- FK Extension Rod
- FL Key Control Bracket P-12038

- FM Key Control Unit P-12079
- FN Adjusting Rod Spring P-12087
- FO Control Unit Truss Bar P-12094

- FP Needle Landing Adjusting Cam
- FQ Adjusting Rod Bracket P-12036
- FR Pickup Cartridge (Give Model No. as at EN)
- FS Cartridge Clamp P-2218
- FT Tone Arm Lift Plate P-2223

- FU Hinge Pin Spring P-2235
- FV Tone Arm Hinge Pin P-2234

midway between the Posts can be accurately checked in this way: Place a single 12" record on the Shelf Plates BK, press "R" button, and turn Turntable forward by hand. Immediately after the Shelf Plates open and let it fall, turn Turntable slightly backward, and with other hand support the record between the Shelf Plates; it can then be readily seen whether Record Pin is off center. If it is, remove the record and Turntable, and loosen slightly the screw or screws BF nearest the Shelf Plate to which record appeared closest. This should improve evenness of operation. However, unless the unevenness was slight, it will be necessary for a permanent repair to insert a shim or two on one or more of the three screws (or change shims from one screw to another). The shims used are shaped like an ordinary washer, cut out at one side (see cut-away view at FE, showing a shim in place upon one of the Grommet Sleeves). Shims can readily be cut out with shears and punch from thin metal or cardboard--or an assortment of shims of different thicknesses can be had from factory (order "Assortment of P-1397 Shims"). They should be inserted, around proper screws (when screws have been sufficiently loosened) between Motor Frame and the metal Grommet Sleeve. Do not insert shims next to rubber grommet.

WELLS-GARDNER & CO.

MODEL 8A30 Record Changer
Service Notes


the rest of the mechanism from Assembly DE. Then remove the three screws AO, which hold Sub-plate Assembly DI to Main Plate EB. Also remove Screw BN, which holds Cam Gear DF. Pull off the four Key Control Buttons. Remove, then, the two screws that hold Key Control Unit FM to Main Plate. Now remove Control Unit FM, and the four screws which support it. Remove out five Rod Bracket Rods. This means taking out five Rods. Remove Flat Spring EJ, by taking out one screw. The Rods FH and FI can then, with due care, be extracted without bending. Free the Cam Connecting Rod Assembly DE, by loosening setscrew holding Spreader Hub EE to Rear Changer Shaft. In reassembling, reverse the procedure, taking care to get all springs properly connected as shown in the photos, without stretching any of them.

Replacement Parts

When spare parts or sub-assemblies are required, order them direct from the factory, by factory number and name as given on photos, --not by reference letters. Where no number is given, order by full and exact description. All parts carry serial numbers, as seen at EO, and Kodex numbers, as seen at FO. Parts shown in above photographs, but not given numbers, are furnished only in assemblies as shown with factory numbers.

Handy Reference

Shops having frequent occasion to service this Changer can obtain on request a second copy of this manual, for posting, both sides visible, above bench.

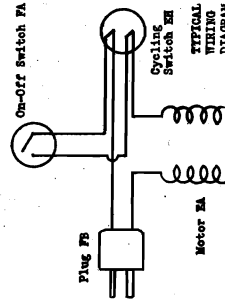

to short-circuit the manual On-Off Switch (which may be located in position shown at FA or elsewhere) during change cycle only. Such damage to Cycling Switch (not likely to occur) would necessitate returning either the Sub-plate Assembly or the entire Changer to factory.

11. CHANGER FAILS TO REPEAT LAST RECORD. See Paragraph 6, above.

12. NEEDLE LANDS PROPERLY ON RECORD BUT FAILS TO MOVE OVER INTO RECORD GROOVE. Pickup arm is normally impelled toward center of records by Lead Spring ER. Should a slight increase in its tension be found necessary, this can be easily obtained by bending the lug, to which it is attached, down against Main Plate. If tendency then appears for needle to jump across record, check angle of needle (see Paragraph 6-a above).

13. RECORDS FALL UNWELLY UPON TURNABLE. Seldom objectionable (some unevenness may even be advantageous) this is due to Record Pin not being correctly centered between Changer Posts. If necessary, it can be corrected as described above; see "Replacing Motor." "

14. LAST RECORD DROPS ON ONE SIDE ONLY. This suggests Changer Post bent out of verticality. Check Post and Main Plate. If Post is bent, straighten it. Replacing Motor. If Post must be straightened, be careful not to bend other parts.

15. CHANGER CONTINUES CYCLING. Probably due to failure of Lift CV to be drawn back out of engagement with Cam Gear. Check the various rivets at which motion-occurs, to find the point where friction or binding is interfering with freedom of motion.

16. RECORD IS DRIVEN, BUT NOT HEARD, OR NOT HEARD WITH PROPER VOLUME. See that Pickup cord is plugged in. Check amplifier and speaker and connections to them, thoroughly. If then trouble is still suspected in pickup, test its output with a vacuum-tube voltmeter. Playing an average record, output should test about 2 volts if pickup is rigidly fixed to cam groove in standard magnetic type. If pickup cartridge is found not to deliver proper output, remove it and install another.

17. SELECTOR PLATE FAILS TO SEPARATE FROM RECORD FROM SPACK. This is due either to a badly warped condition of the record, or to its being of a thickness very considerably different from those in standard Shelf Plates (is such as to accommodate a maximum variation in thickness and flatness of records, but certain records may be found which are so far out as to be impracticable for use in automatic changers.

If Necessary to Disassemble the Changer

First detach the entire changer mechanism (except Changer Connecting Rod Assembly FD and Cam Connecting Rod Assembly DE, also seen at EO) from Main Plate EB. To do this, first take out Shoulder Screw CI, to free

defective, and proceeding as in Paragraph 2 above.

4. SQUEAKS OR OTHER NOISES, DURING PLAYING OF RECORDS.

a. Check oiling, as directed above. (If squeaks remain, the oil usually will be found to come from the records--not from the mechanism).

b. See that all setscrews are tight.

6. CHANGER IS NOISY WHEN IN CYCLE. Check oiling.

6. MOTION OF PICKUP TOWARD RECORD PIN WILL NOT TRIP CHANGER MECHANISM.

a. (Only on models not having Trip Adjustment Hole AR) It may be found that, instead of trigger being actuated, there is stretching of Swivel Spring CR, allowing the spreaders to open. Increase tension of the Spring, by bending slightly the lug on either Spreader. If this increased tension causes needle to jump across the record, needle may be a little toward center of record. To remedy this, grasp Pickup arm and twist it, very slightly, in a clockwise direction (looking from needle end) so that it stands vertical, or even leans a little in outward direction.

b. If trigger is being properly actuated, probably Cam Lever CS is binding against setscrew that holds it to Main Plate. Check setscrew for obstruction. If the lever works freely on their rivets. If the lever engages the Pawl so that Lift CV forces roller IN up into the under groove on Cam Gear, and if setscrews are tight, the change cycle must operate, as Cam Gear turns.

7. PRESSING "R" BUTTON DOESN'T TRIP CHANGER MECHANISM.

a. Check Key Control Unit FM: see whether there is an obstruction or a heat sink which prevents "R" button from going clear down to the end of its travel.

b. Examine Reject Rod FI. If it does not trip, even when properly revolved by complete depressing of "R" button, the rod has probably bent, and must be returned to normal way. EXAMINE END SHIELD AND SHAFT AT SLIGHTLY.

c. If Trigger CP is being properly actuated but without starting a change cycle, see directions above, Paragraph 6-b.

8. PRESSING "M" BUTTON FAILS TO PUT CHANGER MECHANISM OUT OF ACTION SO AS TO ENABLE MANUAL OPERATION. First see that button goes clear down, then follow its action through Manual Rod FH.

9. MOTOR STOPS IMMEDIATELY WHEN CHANGER SWITCH IS TURNED OFF DURING A CHANGE CYCLE (instead of continuing to run, as it should, until needle is again upon a record, and then stopping). Or--

10. TURNING ON-OFF SWITCH FAILS TO STOP CHANGER AT ALL. Either of these two conditions would indicate failure of Cycling Switch EH. Cycling Switch operates normally

Before tightening screws, drop Drive Pinion Assembly AH into mesh with Idler Gear (but not make sure they mesh upon drive pin). Then tighten Drive Pinion and Idler Gear screws. Work freely together and do not bind. If necessary, loosen screws again, and shift until proper tooth clearance is obtained. Then tighten screws, and test, as above directed, the centering of Record Pin between Changer Posts.

In wiring up, consult wiring diagram for parts and installation. See only Under Frame section, especially where connections to legs, as shown on Bottom View photo.

Trouble Shooting

Cases of failure to operate satisfactorily will generally be found due either to neglect of proper lubrication, or to tampering with the mechanism after it leaves the factory, or to tampering with it after it has been taken apart. In addition there is always the possibility that any kind of spring may "go dead" (cease to operate without any visible breakage) even though the utmost factory precautions are taken against it--or that setscrews may work loose due to some external vibration. For tightening setscrews, a No. 3 size Allen (hexagon) wrench is recommended. The setscrews which are secured on the holes or rivets provided for setting on tampering is likely to take the form of heat parts; never bend any part during examination. Be careful, especially, never to push upward from below on Cam Connecting Rod Lift CV while mechanism is operating; bending may result, and even slight bending here might interfere with correct timing of the cycle operations. Among the principal trouble symptoms to which causes may give rise, are the following:

1. MECHANISM IS SLOW IN STARTING, OR SPALLS DURING A CHANGE CYCLE, BUT A SLIGHT FORWARD PUSH WITH THE HAND STARTS IT AGAIN. May be caused by

a. Failure to lubricate properly. Oil thoroughly, per instructions above.
b. Loose setscrews: line voltage may be abnormally low, or motor windings damaged. If windings are found damaged, remove motor and return it to factory for repair or replacement. See above: "Replacing Motor."

2. MOTOR FAILS TO RUN, EVEN WHEN IT IS ENTIRELY DISCONNECTED FROM OTHER WIRING AND PROPER VOLTAGE IS APPLIED DIRECTLY TO THE WINDINGS OF THIS WINDING. This indicates trouble in Motor itself. The setscrews which are easily seen and repaired, replace Motor, as above described.


3. MOTOR IS SLOW IN STARTING.

a. Check oiling, as directed above. It may not have been properly done; old oil may have become rummy.

b. Changer may have been in a very cold place, and may not yet have reached room temperature. Let it stand for some time to get warmed up before concluding that Motor is


MODEL W403
Schematic, Alignment
Socket, Trimmers

WESTERN AIR PATROL

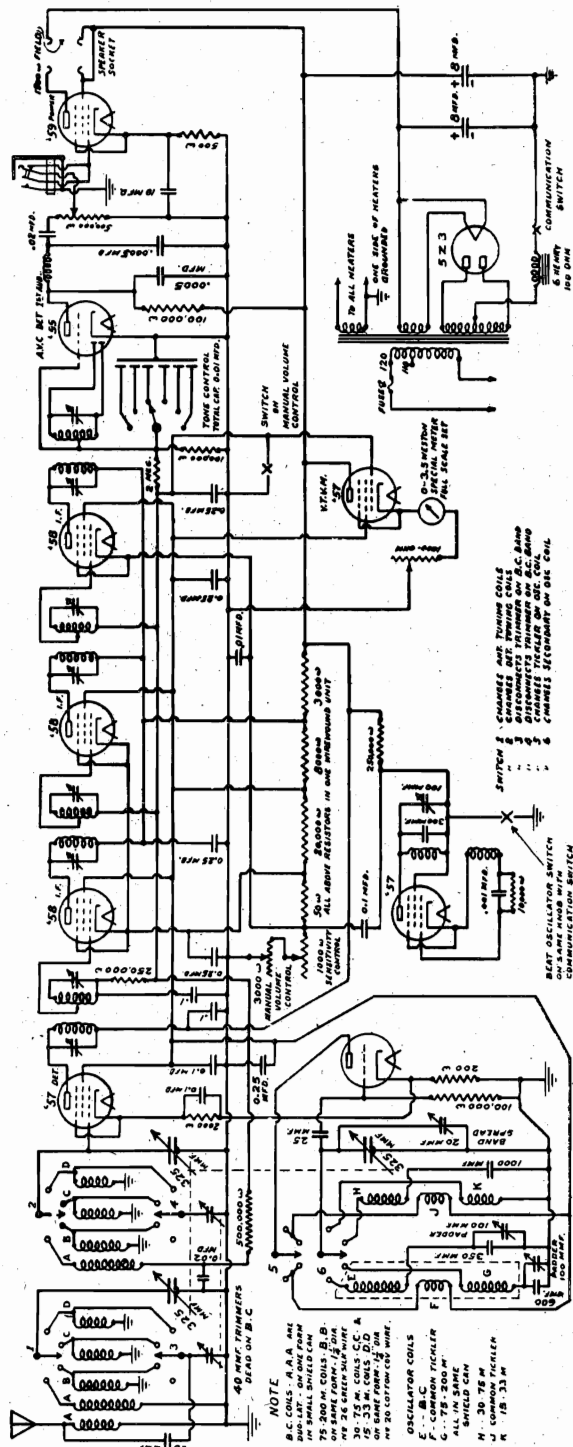

- A - "B" on and off, Beat Oscillator
- B - Push, Tone Control, Normal
- C - Volume Control, Power Switch
- D - Push, Band Change, Normal
- E - Short-Wave Trimmer, two gang
- F - Band Indicator
- G - Heavy 18-gauge Chromium Plated Chassis
- H - First Detector
- I - First I. F. Tube
- J - B. C. and 75 Meter Oscillator
- K - Three Stages I. F.
- L - Second I. F. Tube
- M - Third I. F. Tube
- N - High Frequency Oscillator Tube
- O - Beat Oscillator Control
- P - Second Detector and AVC Tube
- Q - Beat Oscillator Tube
- R - Vacuum Tube Volt Meter
- S - Output Tube
- T - Heavy Duty Power Supply
- U - Moisture-proof Filter
- V - Rectifier Tube
- W - Patterson Velvet Tuning Dials
- X - Manual Control Mounts Here
- Y - Sensitivity, "R" Meter Adjustments
- Z - Three-gang Condenser, Rubber Mounted

To rebalance the receiver does not require any equipment. The meter will indicate the exact resonance point of the I.F. trimmers and also the condenser gang. Proceed as follows: Set band spread dial at "O," then tune in a station on the high frequency end of the Broadcast band (any station around 1400 K.C. is okay). Next, adjust the trimmer on the condenser section nearest the dial until the station reads exactly on its known K.C. Now, tune in a station in around 600 K.C. and be careful to be on the exact center of the carrier. All of the above operations must be made with the manual control in off position. Next, turn the sensitivity control toward minimum so that the meter reads about R-9. Now, adjust each of the eight I.F. trimmers very carefully until the meter swings the farthest to the right. You probably will not be able to increase the gain more than 1.5-R. It should not be necessary to turn any trimmer more than 1/8 of a turn.

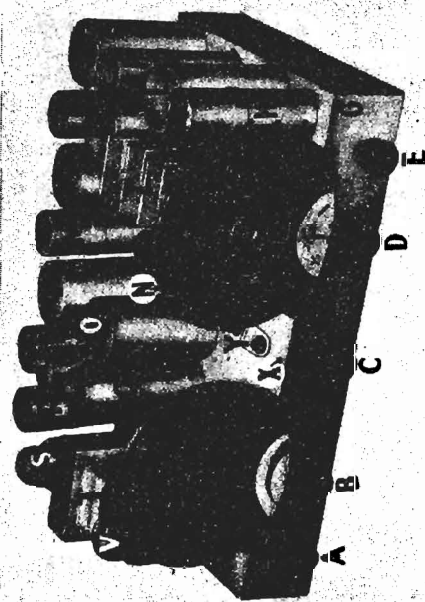

PR-10 Chassis

WESTERN AIR PATROL

MODEL W409
Schematic
Socket

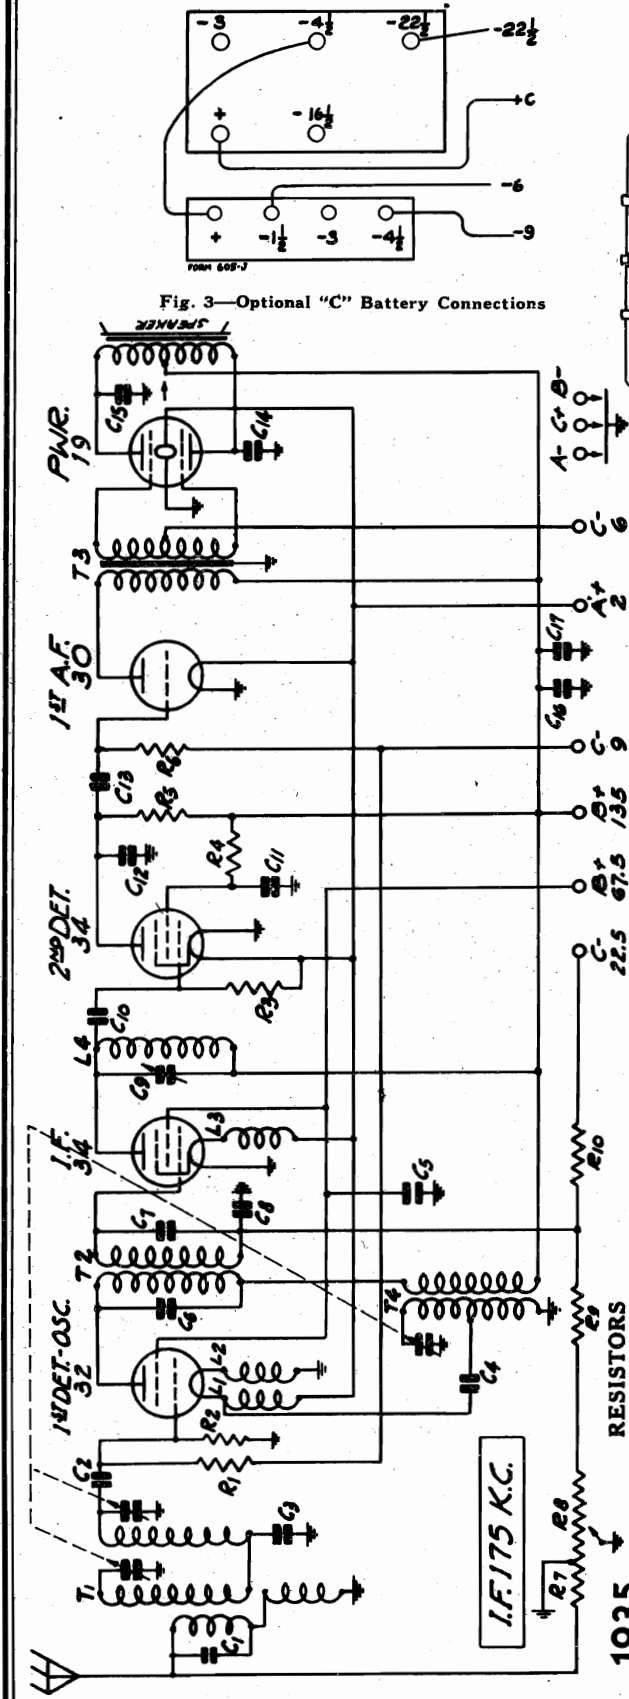


Fig. 3—Optional "C" Battery Connections

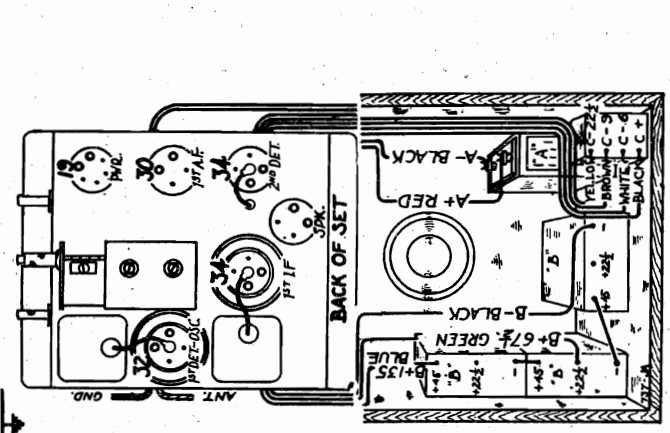


Fig. 2—Tube Arrangement and Battery Connections.

Fig. 1—Schematic Circuit Diagram.

MISCELLANEOUS

Part No.	ITEM
P-2131	No. 32 Socket.
P-1645	No. 34 Socket.
P-1644	No. 30 Socket.
P-1833	No. 19 Socket.
P-1640	Speaker Socket.
P-20406-A	Tube Shield for 34 and 32 Tubes.
P-20786	Audio Input Transformer T3
P-50586-D	Double Tuned Ant. Trans. Assem. Comp. with resistors and condensers T1 less can.
P-5188	Can for above Assem.
P-40482	1st I.F. Coil and Can Assem. T2
P-5199	Oscillator Coil and Can Assem. T4
P-5187	2nd I.F. Coil and Can Assem. L4
P-5172	Double Filament Reactor L1, L2
P-5189	Single Filament Reactor L3
P-30342-A	Grid Cap Only
P-2060	Knob, plain
P-2122	Knob, Arrow Indicator.
P-1441-A	Double Insulated Terminal Strip.
P-1786	Five Lug Terminal Strip.
P-1831	On-Off Switch
P-20711	Gang Condenser Shields
P-10272	Rubber Chassis Cushions
P-70743	Antenna and Ground Wire
P-70709	"B" Battery Wire Assem.
P-10719	"A" Battery Wire Assem.
P-10772	"C" Battery Wire Assem.
P-2124	Speaker 6
P-2126	Speaker 8

Part No.	Resistance	Wattage	Type
P-A94505 R1	5 Megohm	0.2	Carbon
P-A94105 R2	1 Megohm	0.2	Carbon
P-A94205 R3	2 Megohm	0.2	Carbon
P-B94104 R4	100,000 Ohm	0.5	Carbon
P-B94403 R5	40,000 Ohm	0.5	Carbon
P-A95105 R6	1 Megohm	0.2	Carbon
P-96001 R7	3,000 Ohm		Volume Control
P-A94901 R8	60,000 Ohm		Wire Wound
P-A94901 W R9	900 Ohm	0.2	Carbon
P-A94652 R10	6,500 Ohm	0.2	Carbon
*P-A94108 R1	10 Megohm	0.2	Carbon
*P-A94208 R2	2 Megohm	0.2	Carbon

*These resistors were used on first models.

CONDENSERS

Part No.	Capacity	Voltage	Type
P-81812 C1	200 mfmf		Wire—Part of Ant. Assem
P-81801 C2	35 mfmf		Wire—Part of Ant. Assem.
P-80862 C3	0.05 mf	200V	Tubular
P-80862 C4	0.05 mf	200V	Tubular
P-80862 C5	0.05 mf	200V	Tubular
P-81806 C6	70 mfmf		Wire
P-81804 C7	45 mfmf	200V	Wire
P-80862 C8	0.05 mf	200V	Tubular
P-1685 C9	70 + 30 mfmf		I. F. Trimmer
P-81800 C10	50 mfmf	200V	Wire
P-81045 C11	0.25 mf	600V	Tubular
P-80863 C12	0.004 mf	600V	Tubular
P-80898 C13	0.006 mf	600V	Tubular
P-80969 C14	0.01 mf	400V	Dual Tubular
P-80864 C15	0.01 mf	400V	Tubular
P-80868 C16	0.1 mf	200V	Tubular
P-81036 C17	4.0 mf	150V	Electrolytic
			3 Gang Condenser

MODEL W409

Circuit Data, Voltage Alignment, Resistance

WESTERN AIR PATROL

Circuit

This receiver is designed to operate from a battery power supply the values of which are shown in Fig. 1. All of the tubes used are of the 2 volt type. The receiver is designed to operate at a very low current drain from the batteries and still have a very satisfactory quality of output.

The circuit has a preselector stage incorporating 2 tuned circuits for image rejection. This couples into the type 32 first detector-oscillator tube through a combination of inductive coupling in T1 and capacitive coupling through C3. In Fig. 1 the two coils to the right of the 32 1st detector tube are the primary and secondary of the 1st I. F. transformer while below this tube are the oscillator coils. The oscillating circuit is tuned by the oscillator section of the gang condenser and is always resonant at a frequency of 175 K. C. above the frequency to which the R. F. circuit is tuned.

One stage of I. F. amplification is employed using a 34 tube. Fixed condensers tune the primary and secondary of the first I. F. transformer. A second I. F. unit of the impedance coupled type is provided in which the inductance L4 is tuned by a trimmer condenser C9. The volume control is of the variable antenna input and I. F. bias type. Referring to Fig 1 it will be noted that one end of the volume control strip is connected to the antenna and the other end is connected to resistor R9. Also note that the volume control strip is tapped. Bias voltage for the 34 I. F. tube is obtained from a potentiometer consisting of resistors R9, R10 and the 60,000 ohm section of the volume control R8 which resistors are connected across the 22 1/2 volt "C" battery.

As the slider of the volume control is moved away from the antenna end, the signal input to the antenna stage is increased. The bias voltage of the I. F. tube is not affected until the tap is reached. As the slider moves from this point to the end of the strip the I. F. bias is decreased, thus increasing the sensitivity. When this happens the plate current goes up and more battery current is used.

A 34 tube is used as the 2nd detector or demodulator. Demodulation takes place in the grid circuit of this tube.

Resistance coupling is used between the 2nd detector and the 1st audio stage which uses a 30 tube. The 1st audio stage is transformer coupled to the output stage. Class "B" amplification is employed in the output stage which uses a type 19 tube. This consists of two output tubes in one envelope. A magnetic reproducer is used.

A 3 pole switch controls all three sources of battery supply.

Condenser Alignment

Misalignment or mistracking of condensers generally manifests itself as broad tuning and lack of volume at portions or all of the broadcast band. The receivers are all properly aligned at the factory with precision instruments and realignment should not be attempted unless all other possible causes of the faulty operation have first been investigated and unless the service technician has the proper equipment. A signal generator that will provide accurately calibrated signals over the broadcast band and at the intermediate frequency, and an output meter are required for indicating the effect of adjustments.

First set the signal generator to a frequency of 175 K. C. Connect the antenna lead of the signal generator to the grid of the 1st detector thru a .05 mfd. condenser. The ground lead from the signal generator goes to the ground lead of the receiver. Adjust trimmer condenser C9 on the back panel of the chassis until maximum output is obtained. **A non-metallic screw driver should be used in making this adjustment as the I. F. trimmer is at B+ potential.**

Next set the signal generator for 1730 K. C. Turn the rotor to the full open position. The antenna lead from the signal generator is in this instance connected to the antenna lead of the receiver. Adjust the trimmer of the oscillator section of the 3 gang condenser until maximum output is obtained. The oscillator section is the one with the cut plate rotor.

Then set the signal generator for 1400 K. C. and turn the rotor until maximum output is obtained. Adjust the other two trimmers on the gang condenser for maximum output.

To obtain dial scale calibration tune in an 800 K. C. signal and set the dial pointer at that mark on the dial scale. When calibrated in this manner, the setting will be approximately correct at both ends of the scale.

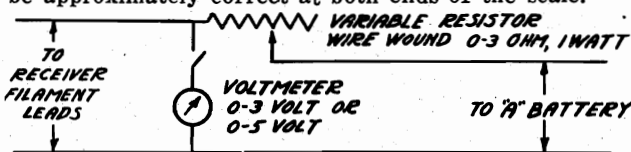


Fig. 4—Using Voltage Regulator with 3 Volt "A" Battery
The use of the cut plate type of condenser eliminates the necessity of a 600 K. C. padder and no adjustment at this frequency, therefore, is required.

D. C. Resistance of Windings

Following are the D.C. resistances of the various windings in the chassis.

Part No.	Item	Code	D. C. Resistance in Ohms
P-5168	Double Tuned Ant. Coil Pri.....	T1	19.2
	Double Tuned Ant. Coil Sec. (Preselector)	T1	3.2
	Double Tuned Ant. Coil Sec. (1st Det.)	T1	3.2
P-5199	1st I.F. Coil Pri.....	T2	90.0
	1st I.F. Coil Sec.....	T2	116.0
P-50586-D	Audio Input Trans. Pri.....	T3	1010.
	Audio Input Trans. Sec. Cent. Tap to outside end	T3	648.
	Audio Input Trans. Sec. Cent. Tap to inside end	T3	588.
P-5187	Oscillator Coil, Grid Winding.....	T4	4.1
	Oscillator Coil, Plate Winding.....	T4	10.4
P-5172	Double Filament Reactor Assem.....	L1	.61
	Double Filament Reactor Assem.....	L2	.61
P-5189	Single Filament Reactor Assem.....	L3	.61
P-5188	2nd I.F. Reactor Coil.....	L4	52.1
P-2124	6" Magnetic Speaker, Center Tap to outside end		272.
	6" Magnetic Speaker, Center Tap to inside end		225.
P-2125	8" Magnetic Speaker (same as P-2124)		

VOLTAGES AT SOCKETS

Volume Control at Maximum—Antenna Shorted to Ground
B+135 Volts
Voltages to Chassis

Type of Tube	Function	Across Filament	Plate to Cath.	Screen to Cath.	Grid to Cath.	Normal Plate M. A.
32	1st Det. & Osc.	2.0	135	67.5	7.5 ⁽¹⁾⁽²⁾	2.5
34	I. F.	2.0	135	67.5	2.5 ⁽³⁾	2.8
34	2nd Det.	2.0	50	40 ⁽¹⁾	0	1.8
30	1st Audio	2.0	135		9 ⁽⁴⁾	3.0
19	Output	2.0	135		6	1.8
						Total

- (1) With 250,000 ohm meter.
- (2) Subject to variation due to oscillatory current.
- (3) With 25,000 ohm meter.
- (4) As read at "C" battery.

Voltages

Check the voltages at the sockets to see if correct values are being delivered to the tubes. The antenna and ground should be disconnected and the antenna and ground leads from the set connected together. The volume control should be turned to the right or maximum position.

The voltage chart gives the voltages with all tubes in, the speaker connected and the set in operating condition. These voltages are typical of the sets but will vary slightly with variations in individual receivers, tubes, test equipment used and battery voltages.

WESTERN AIR PATROL

MODEL W416
Schematic

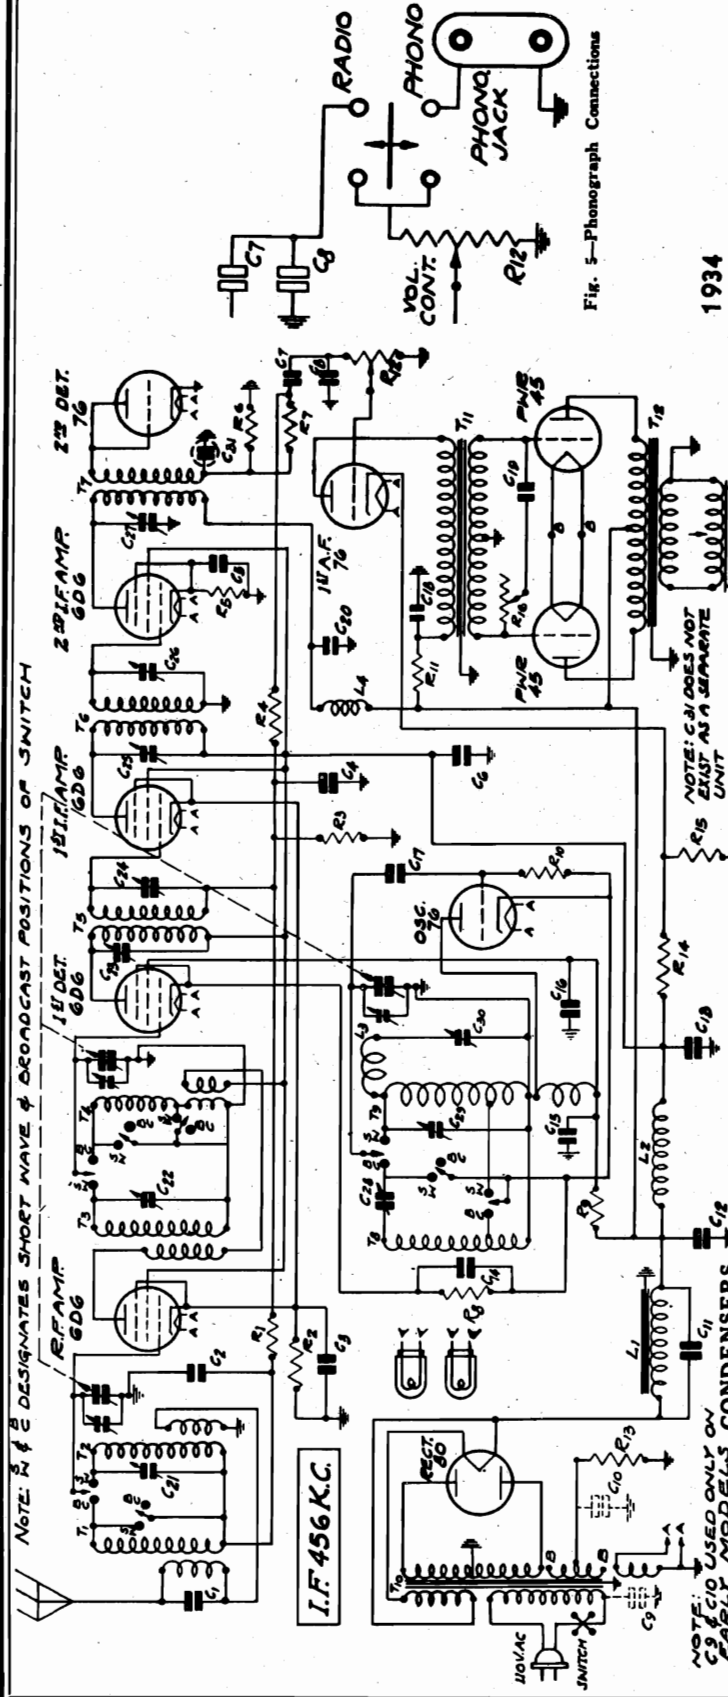


Fig. 5-Phonograph Connections

1934

- Cans for the above coils
- P-40433 1st I.F. Coil & Can Assembly T5
 - P-5184 2nd I.F. Coil & Can Assembly T6
 - H. F. Oscillator Tracking Coil L3
 - P-5190 I.F. Plate Isolating Reactor L4
 - P-5151 A.C. Cord & Plug
 - P-70702 Single Insulated Terminal Strip
 - P-1421 Double Insulated Terminal Strip
 - P-2060 Small Knob
 - P-2062 Large Knob
 - P-2082 Grid Cap only
 - P-30342A Small Pointer
 - P-30456 Large Double End Pointer
 - P-20912 Pilot Light Bulb
 - P-2012 Rubber Mounting Feet
 - P-10272 Glass Crystal
 - P-10320 Crystal Retaining Ring
 - P-20875 8" Dynamic Speaker Mantel L2
 - P-2152 10" Dynamic Speaker Console L2
 - P-1968 Three Position Band Change Switch
 - P-2101 Condenser Shield
 - P-20905 8" Black Drive Cord (V.C. or T.C. Ind.)
 - P-2126 29" Black Drive Cord (Cond. Drive)
 - P-20911 Bottom Shield
 - P-1011A Phono-Radio Switch
 - P-1193 Phono Jack
 - P-2025 No. 80 Socket
 - P-1643 No. 45 Socket
 - P-2022 No. 76 Socket
 - P-1885 No. 6D6 Socket
 - P-1637 Speaker Socket
 - P-40434 Tube Shield—Aluminum (for earlier models)
 - P-40424 Tube Shield—Aluminum (for earlier models)

- P-40433
- P-5184
- P-5190
- P-70702
- P-1421
- P-2060
- P-2062
- P-30342A
- P-30456
- P-20912
- P-2012
- P-10272
- P-10320
- P-20875
- P-2152
- P-1968
- P-2101
- P-20905
- P-2126
- P-20911
- P-1193
- P-2025
- P-1643
- P-2022
- P-1885
- P-1637
- P-40434
- P-40424

- RESISTORS
- | Part No. | Code | Resistance | Watts | Type |
|----------|------|-------------|-------|---------------------------|
| P-A93204 | R1 | 200,000 ohm | 2 | Carbon |
| P-98023 | R2 | 150 ohm | 5 | Flex. Wire Wound |
| P-A95105 | R3 | 1 megohm | 2 | Carbon |
| P-A95205 | R4 | 2 megohm | 2 | Carbon |
| P-98024 | R5 | 400 ohm | 5 | Flex. Wire Wound |
| P-A94304 | R6 | 300,000 ohm | 2 | Carbon |
| P-A94252 | R7 | 100,000 ohm | 2 | Carbon |
| P-A95104 | R8 | 30,000 ohm | 2.0 | Carbon |
| P-98022 | R9 | 30,000 ohm | 2.0 | Carbon |
| P-A5104 | R10 | 100,000 ohm | 1.0 | Carbon |
| P-C94303 | R11 | 30,000 ohm | 1.0 | Carbon |
| P-96005 | R12 | 2 megohm | 3.0 | Volume Control and Switch |
| | R13 | 780 ohm | 1.4 | Armored Wire Wound |
| P-98006 | R14 | 6000 ohm | 1.4 | Armored Wire Wound |
| | R15 | 460 ohm | 2 | Tone Control |
| P-97003 | R16 | 3 megohm | 2 | Tone Control |

- NOTE: C41 DOES NOT EXIST AS A SEPARATE UNIT
- RESISTORS
- NOTE: C41 DOES NOT EXIST AS A SEPARATE UNIT

- Fig. 1—Schematic Circuit Diagram
- | Part No. | Code | Type | Volts | Capacity |
|----------|------|------------------------|---------------|-----------|
| P-80919 | C1 | Moulded | 250 | 50 mmfd. |
| P-80862 | C2 | Tubular | 200V. | .05 mid. |
| P-80888 | C3 | Tubular | 200V. | .25 mid. |
| P-80862 | C4 | Tubular | 200V. | .05 mid. |
| P-80862 | C5 | Tubular | 200V. | .05 mid. |
| P-80888 | C6 | Tubular | 200V. | .25 mid. |
| P-80862 | C7 | Tubular | 200V. | .05 mid. |
| P-81005 | C8 | Moulded | 600V. | .01 mid. |
| P-80997 | C9 | Condenser in metal can | 200V. | .15 mid. |
| P-80888 | C10 | Tubular | 200V. | .15 mid. |
| P-80988 | C11 | Wet Electrolytic | 400V. | 16.0 mid. |
| P-81039 | C12 | Dry Electrolytic | 150V. | 6.0 mid. |
| P-81018 | C13 | Dry Electrolytic | 300V. | 2.0 mid. |
| P-80862 | C14 | Tubular | 200V. | .05 mid. |
| P-80864 | C15 | Moulded | 200V. | .10 mid. |
| P-81005 | C16 | Moulded | 600V. | .05 mid. |
| P-80863 | C17 | Tubular | 600V. | .04 mid. |
| P-81041 | C18 | Tubular | 200V. | 1.0 mid. |
| P-2102 | C19 | Ant. S.W. Trimmer | 3-40 mmfd. | |
| P-2103 | C20 | 1st Det. S.W. Trimmer | 3-40 mmfd. | |
| P-2103 | C21 | Dual Trimmer | 200±50 mmfd. | |
| P-2103 | C22 | Part of I.F. Assem. | 200±50 mmfd. | |
| P-2103 | C23 | Part of I.F. Assem. | 200±50 mmfd. | |
| P-1685 | C24 | 3rd I.F. Coil Trimmer | 70±30 mmfd. | |
| P-2112 | C25 | 600 K.C. Trimmer | 300-500 mmfd. | |
| P-2112 | C26 | Osc. S.W. Trimmer | 70±30 mmfd. | |
| P-1685 | C27 | 6000 K.C. Trimmer | 70±30 mmfd. | |
| P-81027 | C28 | Three Gang Condenser | 3-40 mmfd. | |
| P-81027 | C29 | Three Gang Condenser | 3-40 mmfd. | |
| P-81027 | C30 | Three Gang Condenser | 3-40 mmfd. | |

MODEL W831

Schematic, Voltage, Socket Alignment, Trimmers

WESTERN AIR PATROL

VOLTAGES AT SOCKETS
Antenna Shorted to Ground
"A" Battery — 2 Volts

Tube	Function	Across Filament	Plate No. Ground	Screen No. Ground	Control Grid
ID7G	1st Det.-Osc.	2.0	87(1)	64	3.5(2)
ID5G	I.F.	2.0	87	64	3.5(2)
IH6G	2nd Det.-1st Audio	2.0	32(3)		1.25(4)
IF5G	Power	2.0	82	87	3.5(2)

- (1) Anode Grid (G2) to ground
- (2) As read across R4 and R7
- (3) As read on 100 volt scale (1000 ohm per volt meter). Subject to variation.
- (4) As read across R7

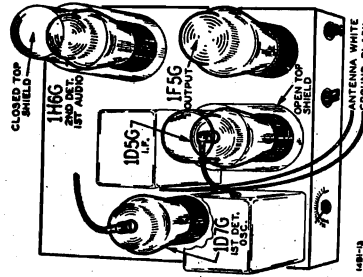


Fig. 2 - Tube Arrangement

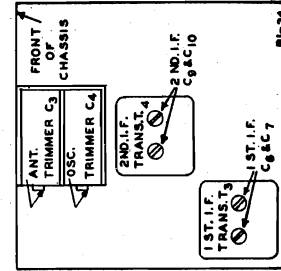


Fig. 3 - Trimmer Location

Intermediate Frequency 456 KC.
Speaker 6" Dynamic
Tuning Frequency Range 598 to 1730 KC.
Sensitivity 40 Microvolts

Input Voltages and Currents
"A" Battery 2 Volts—3 Amperes
"B" Battery 90 Volts—11.5 to 15 Ma.
Power Output 135 Milliwatts Undistorted
Selectivity 40 KC Broad at 1000 Times Signal

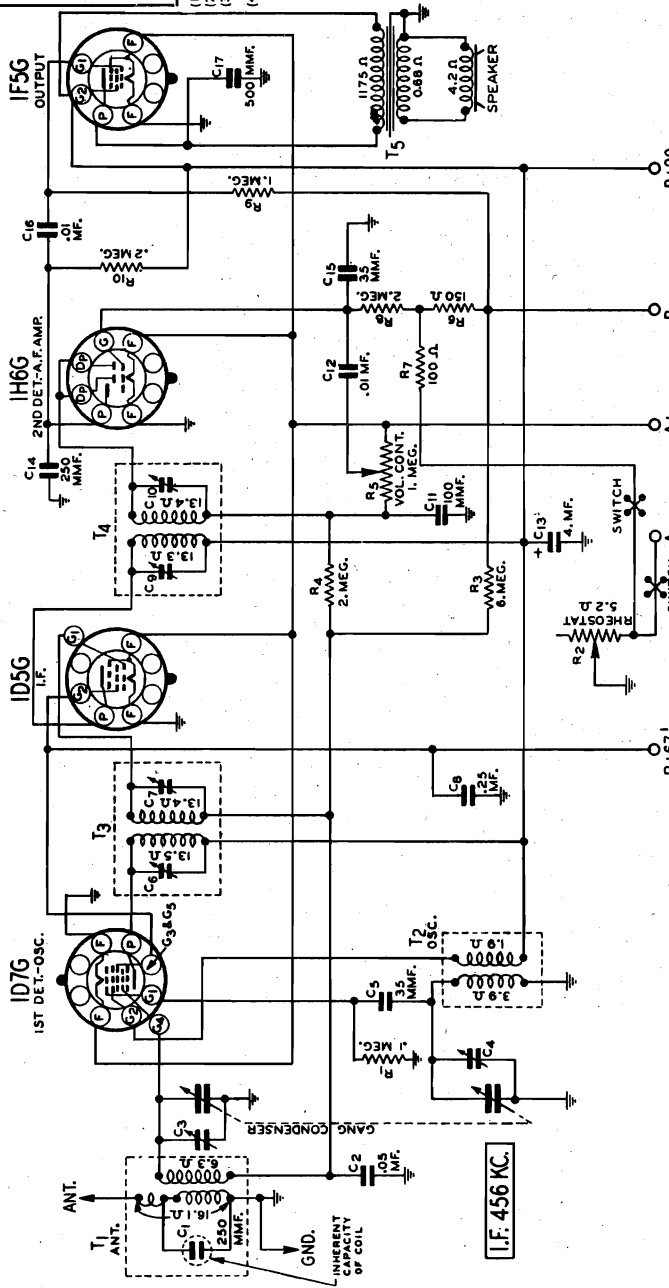


Fig. 1 - Schematic Circuit Diagram

ALIGNMENT PROCEDURE

STEP (Follow Order as Given)	DUMMY ANTENNA	SIGNAL GENERATOR FREQUENCY SETTING	CONNECTION AT RADIO	TRIMMERS ADJUSTED See Illustration	INITIAL STEPS	PROCEDURE	ADJUSTMENT
I. F.	.1 mf.	456 KC	Grid of 1st Det.	2nd I. F. (C9) & (C10) 1st I. F. (C6) & (C7)	Turn rotor to full open	Adjust to Maximum Output	
1730 KC Adj.	200 mmf.	1730 KC	Antenna Lead	Osc. (C4)	Turn rotor to full open	Adjust to Maximum Output	
1500 KC Adj.	200 mmf.	1500 KC	Antenna Lead	Ant. (C3)	Turn Rotor to Max. Output	Adjust to Maximum Output	

Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.

Loosen the pointer screw and remove the chassis from the cabinet. Loosen the pointer screw and set the pointer so that it will be at the 800 KC mark. Tighten the pointer screw and replace the chassis in the cabinet. If the pointer is not at the 800 KC mark another adjustment will be necessary.

NOTE—To obtain dial scale calibration, tune in an 800 KC signal. The pointer should be at the 800 KC mark on the dial. If it is not, note

1938

MODEL W493

Voltage, Socket, Trimmers Alignment

WESTERN AIR PATROL

Standard and Short Wave Battery Radio

6 Tube - 2 Band

Tubes

The tubes used in this receiver are of the 2 volt series. All of them are of the filament or directly heated types. All of them have a 2 volt filament and should not be connected to a power supply not intended for this type of tube. Maximum filament voltage range is 1.8 to 2.0 volts. Operation of the tubes at under or over this value will be injurious to the tubes and may affect operation of the receiver.

VOLTAGES AT SOCKETS					
Volume Control at Maximum			Antenna Shorted to Ground		
Type of Tube	Function	Across Filament	Plate to Ground	Screen to Ground	Grid to Ground
1C6	1st Det.-Osc.	2.0	90 90(1)	60	6(2)
34	I.F.	2.0	90	60	6(2)
1B5	2nd Det.-1st A.F.	2.0	30(3)		1.5(4)
30	2nd A.F.	2.0	90		4.0(5)
30	Power	2.0	90		6

- (1) Anode Grid to ground.
- (2) As read at "C" Battery.
- (3) As read with 500,000 ohm meter.
- (4) As read from negative end of R11 to ground.
- (5) As read from negative end of R10 to ground.

Alignment Procedure

Correct alignment is extremely important in connection with all wave receivers. The receivers are all properly aligned at the factory with precision instruments and re-alignment should not be attempted unless all other possible causes of the faulty operation have first been investigated and unless the service technician has the proper equipment.

A signal generator that will provide an accurately calibrated signal at 456, 1730, 1500, 600, 16,000, 15,000 and 6000 KC and an output indicating meter are required. It will be practically impossible to align the receiver if unsatisfactory apparatus is used.

Use a non-metallic screwdriver for the adjustments. The complete procedure is as follows:

I. F. Adjustment

Set the signal generator for a signal of 456 KC. Connect the output of the signal generator through a .1 mf. condenser to the grid of the 1st detector.

Connect the ground lead of the radio to the ground post of the signal generator.

Turn the band switch to the Range B position (standard wave band).

Turn the volume control to the maximum position. Attenuate the signal from the signal generator to prevent the levelling-off action of the AVC.

Then adjust the four I.F. trimmers until maximum output is obtained. The adjusting screws for these condensers are reached from the top of the chassis, and the location is shown in Fig. 7.

Range B Alignment

After the procedure for the alignment of each range, as explained below, is completed, it is advisable to repeat the procedure as a final check.

1730 KC Adjustment

Set the signal generator for 1730 KC.

Turn the rotor of the tuning condenser to the full open position.

Keep the band switch in the standard wave position.

Connect the antenna lead of the radio through a 200 mmf. condenser to the output of the signal generator.

For this and all subsequent adjustments keep the volume control at the maximum position and attenuate the signal from the signal generator to prevent AVC action.

Adjust the oscillator Range B trimmer (C8) until

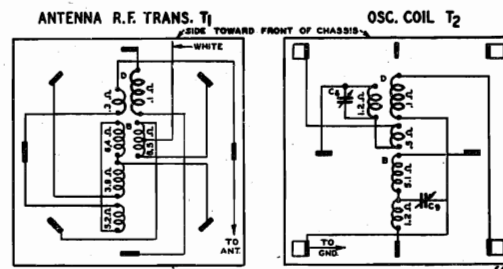


Fig. 8—R.F. and Oscillator Coil Base Terminal Arrangement and D.C. Resistance of Windings

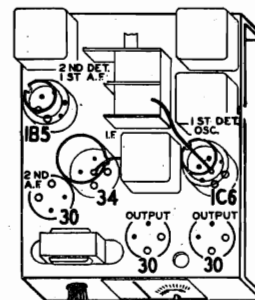


Fig. 9—Tube Arrangement

maximum output is obtained. The location of this trimmer is shown in Fig. 7.

1500 KC Adjustment

Set the signal generator for 1500 KC.

Turn the rotor of the tuning condenser carefully until maximum output is obtained.

Loosen the pointer screw and set the pointer at the 1500 KC mark on the standard wave band scale. Retighten the screw.

Adjust the antenna Range B trimmer (C2) to maximum.

Do not change the setting of the oscillator Range B trimmer.

600 KC Adjustment

Set the signal generator for 600 KC.

Turn the tuning condenser rotor until maximum output is obtained.

Turn the rotor slowly back and forth at the same time adjusting the 600 KC trimmer (C9) until the peak of greatest intensity is obtained. See Fig. 7 for location of this trimmer.

Range D Adjustment

CAUTION—When aligning the short wave band be sure NOT to adjust at the image frequency. This can be checked as follows: Let us say the signal generator is set for 15,000 KC. The signal will then be heard at 15,000 on the dial of the radio. The image signal, which is much weaker, will be heard at 15,000 less 912 KC, or 14,088 KC. It may be necessary to increase the input signal to hear the image.

16,000 KC Adjustment

Set the signal generator for 16,000 KC.

Connect the antenna lead of the radio through a 400 ohm resistor to the output of the signal generator.

Turn the rotor of the tuning condenser to the full open position.

Turn the band switch to the Range D position (short wave band).

Adjust the oscillator Range D trimmer (C7) until maximum output is obtained. See Fig. 7 for location of this trimmer.

15,000 KC Adjustment

Set the signal generator for 15,000 KC.

Turn the rotor of the tuning condenser carefully until maximum output is obtained.

Adjust the antenna Range D trimmer (C1) to maximum. When adjusting this trimmer, it will be necessary at the same time to turn the tuning condenser rotor slowly back and forth until the peak of greatest intensity is obtained.

Do not change the setting of the oscillator Range D trimmer.

6000 KC Adjustment

Set the signal generator for 6000 KC.

Turn the tuning condenser rotor until maximum output is obtained.

Turn the rotor slowly back and forth at the same time adjusting the 6000 KC (C6) trimmer until the peak of greatest intensity is obtained. See Fig. 7 for location of this trimmer.



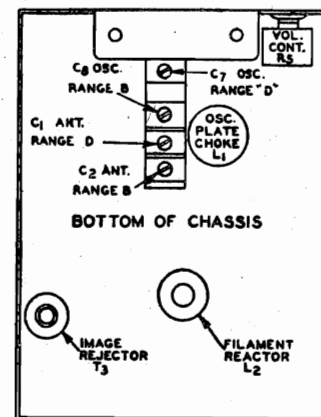



Fig. 7—Location of Trimmers

WESTERN AUTO SUPPLY CO. Schematic, Socket Alignment, Trimmers

MODELS D699, D724 (1938)

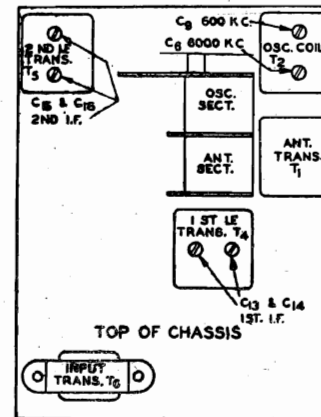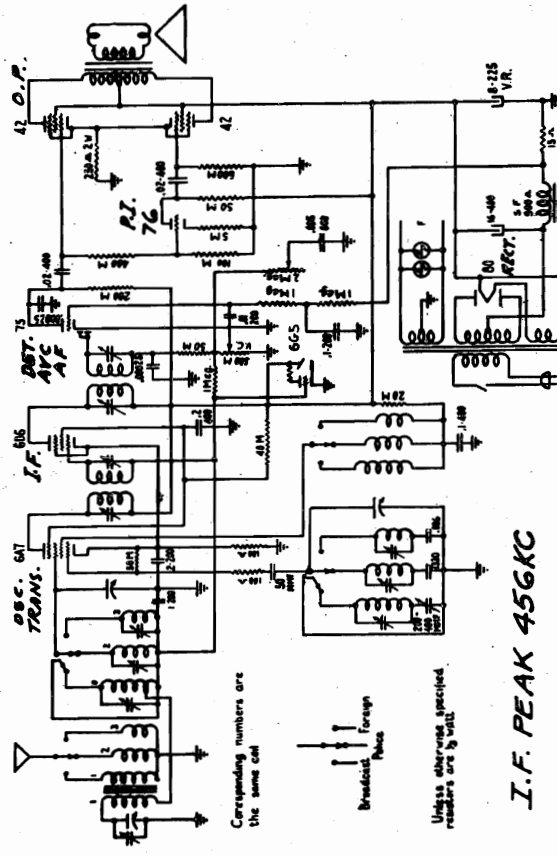

I.F. PEAK 456KC

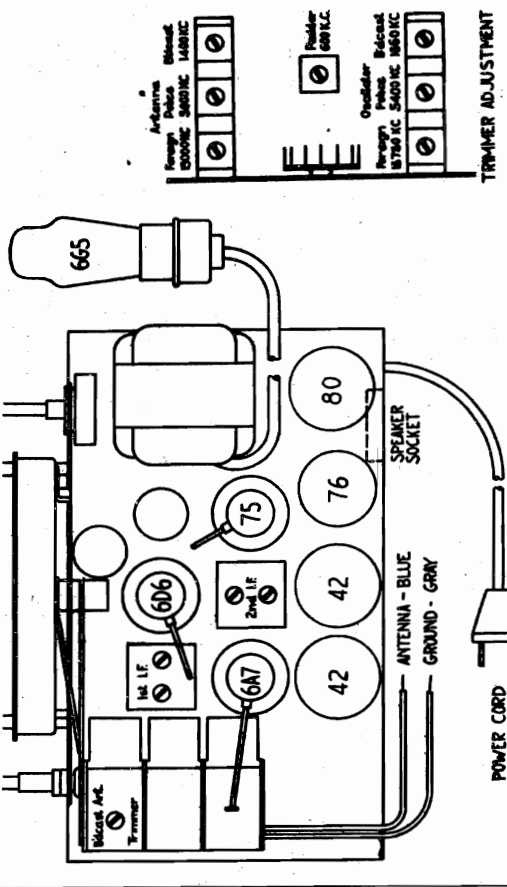

I. F. Alignment

The I.F. frequency of this receiver is 456 K.C. For realignment, use the following procedure.

It is necessary to use an accurately calibrated signal generator. Couple the signal generator to the grid of the 6A7 tube with a tenth microfarad condenser in series with the "high" lead of the signal generator. Connect the ground side of the signal generator to the chassis. Set the signal generator to 456 K.C. Be sure the wave switch of the set is in the broadcast position and the volume control set at maximum. Attenuate the signal generator so that the signal is just audible in the speaker. If an output meter is used, it should be connected across the voice coil terminals of the speaker. Use 1/2 volt as standard output.

Adjust the 2nd I.F. transformer first. Each screw should be adjusted for maximum output. After number two I.F. has been adjusted, number one I.F. should be adjusted for maximum output. After both transformers have been adjusted, it is necessary to recheck No. 2 transformer and then recheck No. 1.

Set TUBE LAYOUT for location of I.F. and R.F. trimmers and paddler. (See above diagram for location of trimmers.) Using 200 mmf condenser in series with the generator, feed 1660 kc to antenna lead and adjust broadcast oscillator trimmer for top frequency. Set generator to 1400 kc, tune receiver and adjust the two antenna trimmers. Set generator to 600 kc, tune receiver to signal and adjust paddler. The tuning condenser should be rocked back and forth through the signal while the paddler is being set in order to secure perfect alignment.

Using 400 ohm resistor in series with generator, set band selector in center position, set generator to 5400 kc and adjust oscillator trimmer for top frequency. Set generator to 5000 kc, tune receiver to signal and adjust antenna trimmer.

Turn band selector to extreme clockwise position. Using 400 ohm resistor in series with generator, set oscillator top frequency for 15,750 kc—screw trimmer down tight, then unscrew to second peak. Set generator to 15,000 kc, tune receiver to signal and adjust antenna trimmer—Screw trimmer down tight, then unscrew to first peak, rocking the tuning condenser back and forth through the signal while the adjustment is being

Part No.	Req.	Description	Part No.	Req.	Description
2163	1	Cable, Drive, Approx. 20"	3353	1	Resistor, 2 W., 250 Ohm
3351	1	Cond. 8 MF. 225 V. Reg. Wet El.	2689	2	Resistor, 1/3 W., 100 Ohm
3774		Schematic Diagram	2883	1	Resistor, 1/3 W., 5 M.
3775		Tube Sticker	2882	1	Resistor, 1/3 W., 15 Ohm
2560	1	Condenser, Padder	2881	1	Resistor, 1/3 W., 400 M.
2597	4	Condenser, Trimmer, 1-10	2880	1	Resistor, 1/3 W., 100 M.
1611	1	Condenser, Trimmer, 5-35	636	1	Switch, Band
3157	1	Condenser, Trimmer	2724	1	Coil, Antenna
1286	1	Condenser, Mica, .00025	2837	1	Coil, Oscillator
2780	1	Condenser, Mica, .00005	2845	1	Coil, B. C. Antenna
2741	1	Condenser, Mica, 1330	3343	1	Transformer, Power
2872	1	Variable Condenser	3344	1	Transformer, 1st I.F.
576	2	Condenser, .02, 400 V., Paper	3345	1	Transformer, 2nd I.F.
572	2	Condenser, .1, 200 V., Paper	9375	1	Cond. Elec. 16 MF., 400 V
565	1	Condenser, .01, 200 V., Paper	2908	1	Spring, Drive Cable
581	1	Cond., .005, 600 V., Paper	3374	1	Indicator
2792	1	Condenser, .2, 200 V., Paper	2378	1	Pointer
2793	1	Cond., .006, 600 V., Paper	2726	1	Control, Vol. & Switch
3352	1	Condenser, .2, 400 V., Paper	2737	1	Control, Tone
575	1	Condenser, .1, 400 V., Paper	1732	1	A. C. Cord
624	2	Resistor, 1/3 W., 1 Meg.	3778	1	Book, Instruction
2731	1	Resistor, 1/3 W., 500 M.	2897	1	Escutchion Tuning Tube
2730	1	Resistor, 1/3 W., 200 M.	2981	1	Tuning Tube Cable
631	2	Resistor, 1/3 W., 50 M.	3710	1	Speaker, 8"
617	1	Resistor, 1/3 W., 20 M.	3377	1	Escutchion

made. Above procedure for alignment at 15,000 kc must be followed exactly to insure proper tracking. A dead spot at about 12,000 kc will result if antenna and oscillator circuits are not set in proper relation to each other.


MODEL D716(1938-9)
Schematic, Socket
Trimmers, Alignment

WESTERN AUTO SUPPLY CO.

Seven Tube Combination 6 Volt Battery and 110-120 Volt AC 60 Cycle Dual Wave Superheterodyne

ALIGNMENT:

FOLLOW PROCEDURE OF D709 (1938) BUT USE 18.100 AND 6000 KC FOR S.W.

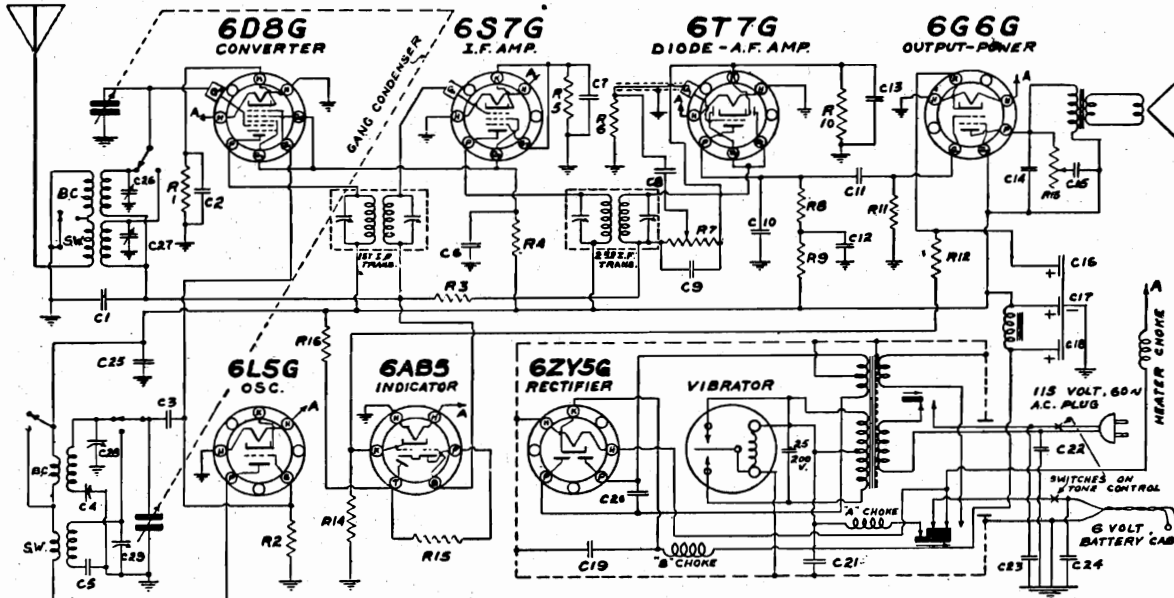


IF PEAK 456 KC

CONDENSERS			
N ^o	CAPACITY	TYPE	N ^o CAPACITY TYPE
1	.05 Mfd.	200 V.	4 .005 MM 600 V.
2	.05 Mfd.	200 V.	15 .05 " 400 V.
3	.05 Mfd.	200 V.	16 .5 " 25 V.
4	50 μmf.	MICA	17 B. " 200 V.
5	300-600 μmf.	MICA	18 B. " 200 V.
6	4000 μmf.	M. ± 25%	19 .01 " 600 V.
7	.1 Mfd.	200 V.	20 .015 " 1000 V.
8	.05 " "	200 V.	21 .5 " 10 V.
9	.01 " "	400 V.	22 .05 " 400 V.
10	2.50 μmf.	MICA	23 .01 " 600 V.
11	.250 " "	"	24 .5 " 10 V.
12	.1 " "	400 V.	25 .1 " 200 V.
13	.5 " "	200 V.	* OIL TYPE

RESISTORS			
N ^o	OHMS	WATTS	SPL. TOL.
1	1500	1/4	± 10%
2	40,000	1/4	± 10%
3	1,000,000	1/4	± 10%
4	30,000	1/4	± 10%
5	1,500	1/4	± 10%
6	1,000,000	1/4	(VOL. CONT.)
7	500,000	1/4	± 10%
8	500,000	1/4	± 10%
9	200,000	1/4	± 10%
10	10,000	1/4	± 10%
11	500,000	1/4	± 10%
12	325	1/4	± 10%
13	100,000	1/4	(TONE CONT.)

14 110 1/4 ± 10%
15 250,000 1/4 ± 10%
16 15,000 1/4 ± 10%
BAND SWITCH IN BROADCAST POSITION
POWER SWITCH IN BATTERY POSITION.
I. F. - 456 K.C.
C26 TO C29, 2-20 μmf TRIMMERS.

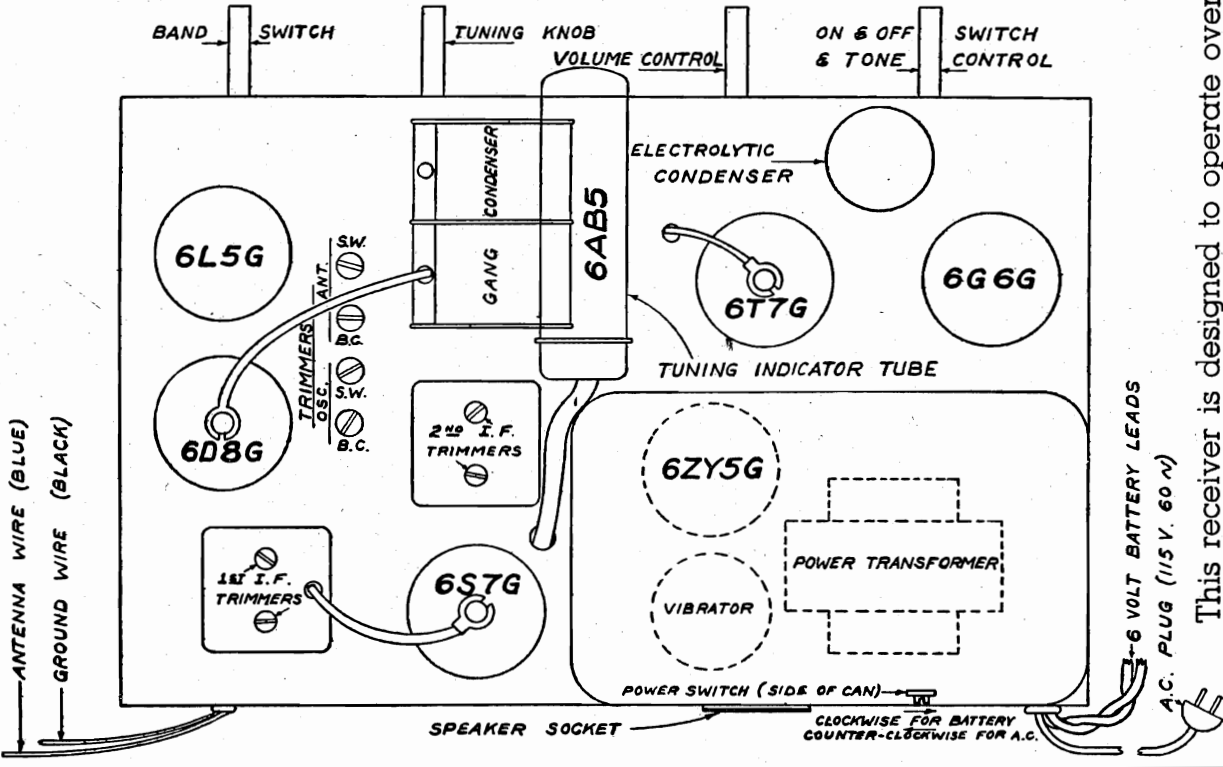

This receiver requires a good ground.


This receiver is designed to operate over two tuning ranges; from 535 to 1730 Kilocycles (KC) (173.4 to 561 meters), and from 5650 to 18,100 Kilocycles (KC) (16.5 to 53 Meters).

WESTERN AUTO SUPPLY CO.

MODEL D717(1937)
Schematic, Voltage
Alignment, Trimmers
Socket, Tuner

Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.

All voltages as indicated on diagram are measured with 115 volts on the primary of the power transformer.

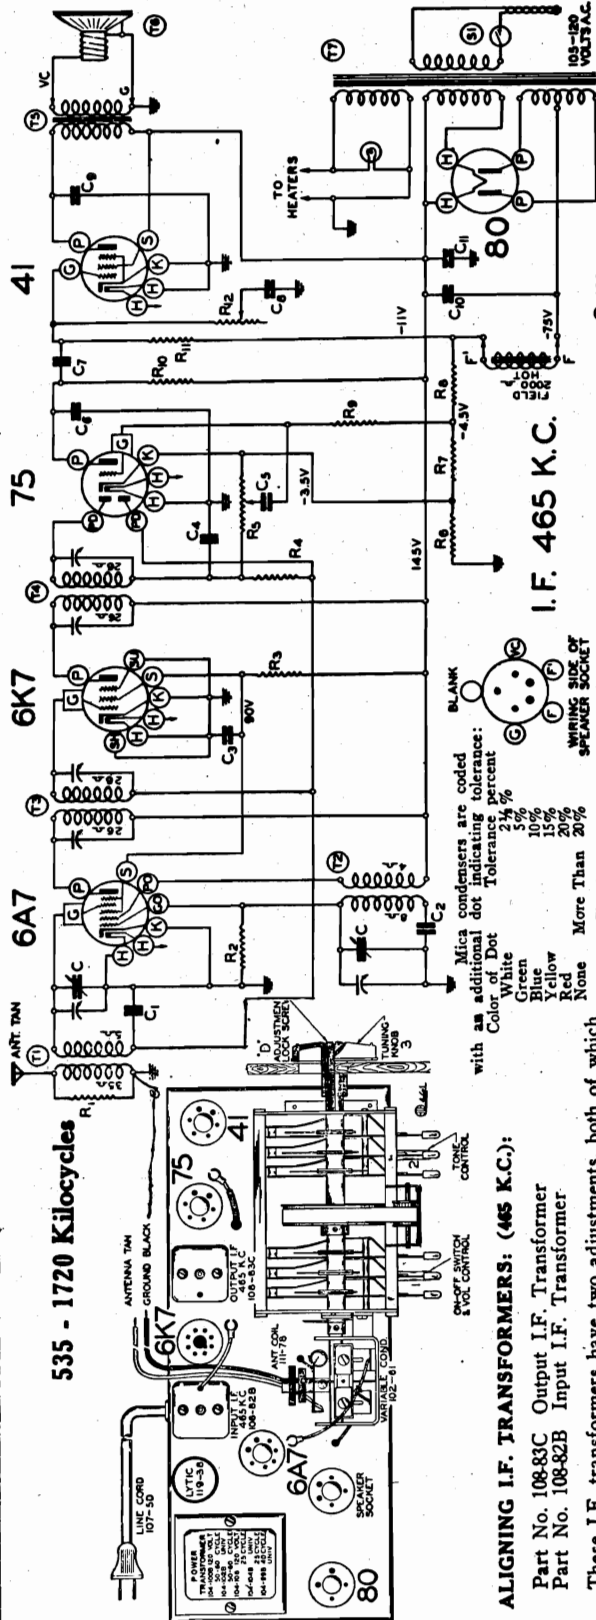

PROCEDURE FOR SETTING THE "PRESTO-MATIC" LEVERS:

There are six levers on the dial by means of which six stations may be selected. Press down any one of the six "Presto-matic" levers. Holding it down, tune in by means of knob No. 3 any one of your favorite stations. Turn the tuning knob very slowly back and forth until the signal is clearest. The station will then be accurately tuned in.

Release the lever and press down any other "Presto-matic" lever and again hold it down, tune in by means of knob No. 3 another favorite station.

When you have selected all your favorite stations, hold tuning knob No. 3 securely and with a coin or a screw driver, tighten the special locking screw ("D") in the center of the tuning knob, (See Fig. 1).

This screw will lock in place all the stations you have selected on the "Presto-matic" levers. (Note: Locking Screw "D" is loose when radio is shipped from factory).

If you should desire to change any station you selected to another, hold tuning knob No. 3 securely, loosen locking screw ("D") and select the new station as explained.

- SPEAKER**
114-97 T6 Five Inch Dynamic Speaker (Field 2000 Ohm)
- MISCELLANEOUS**
101-59 R12 Tone Control and Switch (1 Meg Ohm)
101-94 CR3, S1 Volume Control and Switch (1 Meg Ohm)
102-82 CR5, S1 Two Gang Variable Capacitor
105-65 T3 Output Transformer (For Speaker)
107-5D Line Cord and Plug
108-108 Wood Knob (Spring Type)
128-128 Special Tuning Knob

- CONDENSERS**
Description
05 x 200 Volt Tubular
.01 x 400 Volt Tubular
.005 x 600 Volt Tubular
.02 x 400 Volt Tubular
.004 x 600 Volt Tubular
.1 x 400 Volt Tubular (with Brackets)
5MFD x 200 v.w.; 5MFD x 250 v.w.
.0005 Electrolytic Mica Filter
.0001 Mica - Type MT - 20%
.0003386 Mica Compression Type Padder
- RESISTORS**
100 Ohm - 33 Ohm - 200 Ohm
Metal Clad Resistor
3 Meg Ohm - 1/3 Watt - 20%
200K Ohm - 1/3 Watt - 20%
20K Ohm - 1/3 Watt - 20%
10M Ohm - 1/3 Watt - 20%
60M Ohm - 1/3 Watt - 20%
15M Ohm - 1/3 Watt - 20%
- COILS**
Input I.F. Coil Assembly Complete
Output With Can Assembly Complete
Output With Coil Assembly Complete
Oscillator Coil Assembly Complete
Antenna Coil Assembly Complete
- SOCKETS**
Six Prong Socket - Marked "41"
Six Prong Socket - Marked "41"
Seven Prong Socket - Marked "6A7"
Five Prong Socket - Marked "6K7"
Five Prong Socket - Marked "75"
Eight Prong Octal Socket - Marked "6K7"
- TRANSFORMERS**
Power Transformer 50/60 Cycle
Universal 50/60 Cycle Transformer
Power Transformer 25/60 Cycle - 105-115 Volts
Universal 25/60 Cycle Transformer
Universal 40/60 Cycle Transformer

ALIGNING I.F. TRANSFORMERS: (465 K.C.):
Part No. 108-83C Output I.F. Transformer
Part No. 108-82B Input I.F. Transformer


These I.F. transformers have two adjustments, both of which are accessible from the top of chassis (see Fig. 1).

- With volume control full on (the extreme right of its rotation), and with the variable condenser set to approximately 1400 kilocycles, make the following adjustments:
 - Connect external oscillator set at 465 kilocycles, in series with .1 mfd. condenser, to the control grid cap of the type 6K7 tube, and adjust the output I.F. transformer (No. 108-83C) to resonance.
 - Move oscillator output clip from grid of 6K7 to grid of 6A7 and adjust input I.F. transformer (No. 108-82B) to resonance.
 - With oscillator still connected to 6A7, readjust output I.F. transformer (108-83C) if necessary.

- R.F. ALIGNMENT: (535-1720 K.C.)**
- With gang condenser in its minimum capacity position, plates entirely out of mesh, connect an external oscillator in series with a 200 mfd. condenser to the antenna lead and chassis ground and make the following adjustments:
 - With external oscillator set at 1720 kilocycles, adjust oscillator trimmer to resonance. This adjustment is on the top of rear section of variable gang condenser. (See Fig. 1).
 - Reset external oscillator to 1400 kilocycles, rotate condenser, pick up oscillator signal and adjust antenna trimmer to resonance. (Top of front section of gang condenser).
 - Check sensitivity at 600 and 1000 kilocycles.


MODEL S720
Schematic, Voltage
Socket, Trimmers

WESTERN AUTO SUPPLY CO.

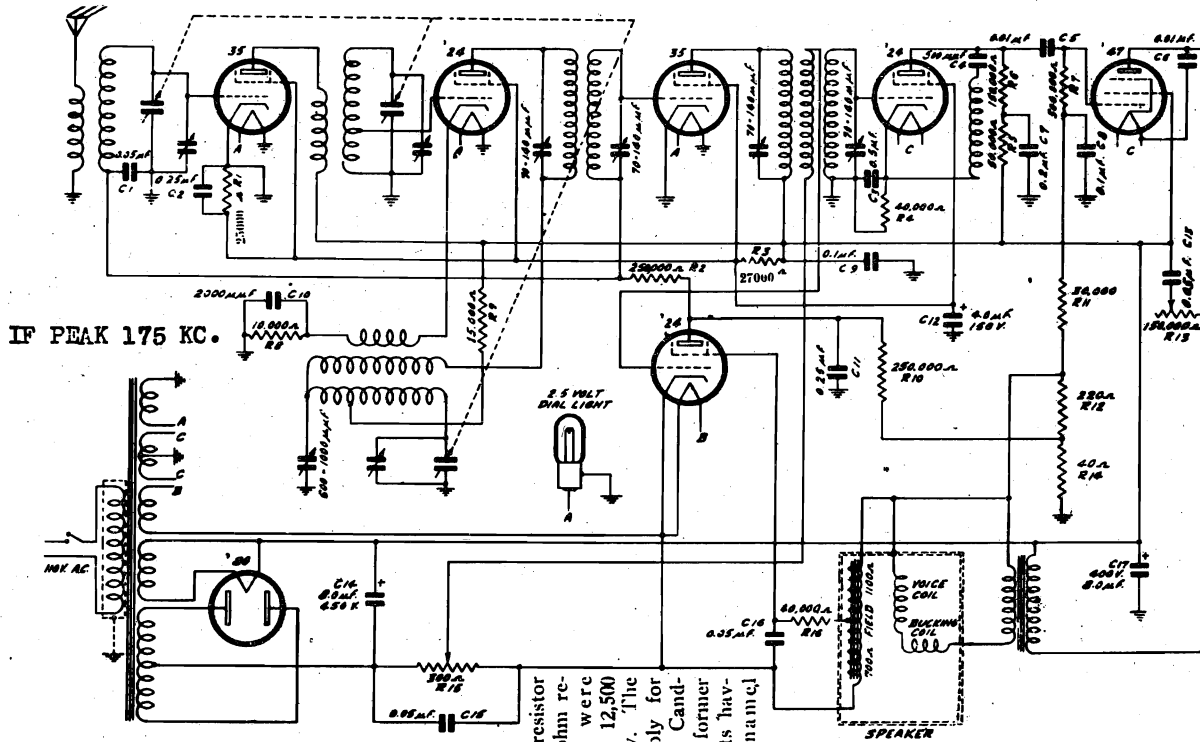

TURN THE VOLUME CONTROL ALL THE WAY ON, CONNECT THE ANTENNA AND GROUND LEADS TOGETHER AND TURN THE GANG CONDENSER PLATES ALL THE WAY OUT. CHECK THE LINE VOLTAGE.

R1—25,000 ohm resistor and R3—27,000 ohm resistor formerly were 9,000 ohms and 12,500 ohms respectively. The latter values apply for all sets having Cand-ohm units; the former values for all sets having vitreous enamel units.

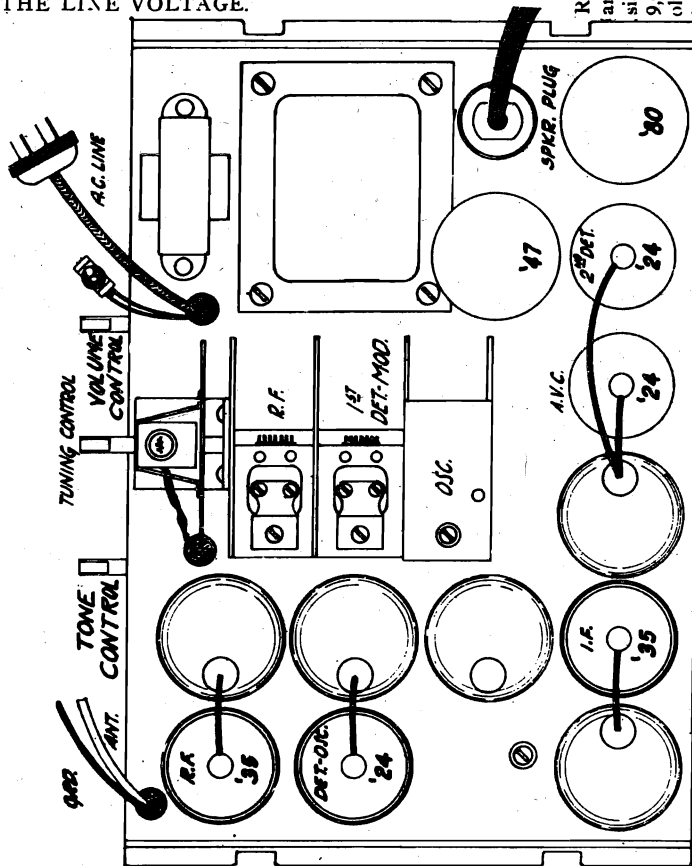


The voltages shown are measured to the cathode of the heater type tubes and to filament of the '47 Pentode.

TUBE	CIRCUIT	LINE VOLTAGE				
		90 V.	100 V.	110 V.	120 V.	130 V.
R.F. '35	Screen-Grid Plate	70 192	78 213	85 234	92 256	100 277
Det.-Mod. '24	Screen-Grid Plate	70 192	78 213	85 234	92 256	100 277
I.F. '35	Screen-Grid Plate	70 192	78 213	85 234	92 256	100 277
2nd Detector '24	Screen-Grid Plate	70 154	78 171	85 187	92 204	100 221
Audio '47	Accelerating Grid Plate	199 181	221 200	244 220	267 240	289 260
A. V. C. '24	Grid Screen-Grid	12.3 34.5	13.7 38.5	15.1 42	16.5 46	17.8 50
Rectifier '80	Plate to Plate Current (both plates)	308 52.3 MA	342 58.1 MA	376 64 MA	410 69.7 MA	445 75.5 MA

WESTERN AUTO SUPPLY CO.

MODEL D729 (1937)
 MODEL D730 (1938-9)
 Schematics, Socket
 Trimmers, Alignment

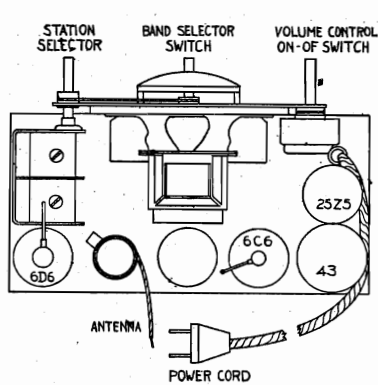


Ranges

540 and 1600 K.C.
 75 to 200 meters

Tubes

- 1—No. 6D6 R. F. Amplifier
- 1—No. 6C6 Detector
- 1—No. 43 Power Output
- 1—No. 25Z5 Rectifier


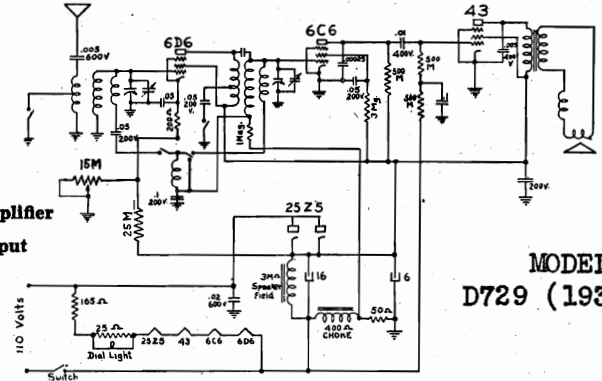


MODEL D729 (1937)

MODEL D729 (1937)

If this receiver should fail to operate when connected to direct current, reverse the attachment plug in the light socket.

This receiver is designed to operate on 105 to 125 volts, direct or alternating current.

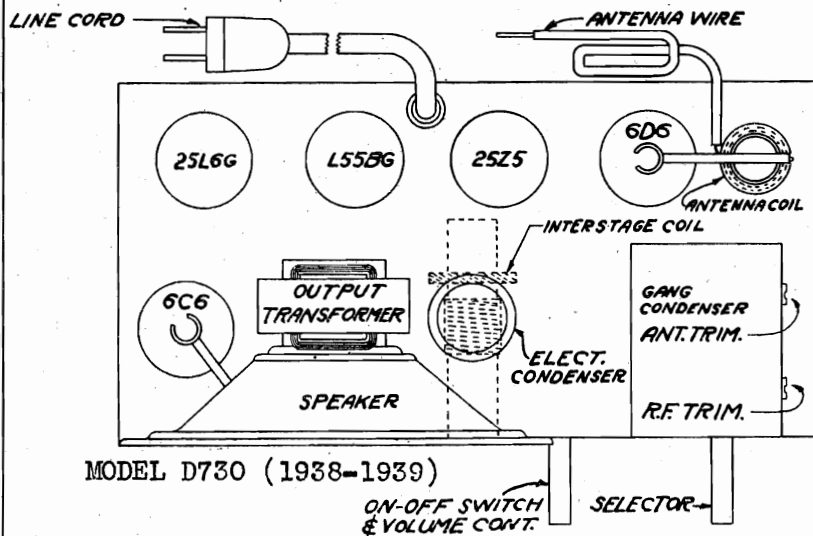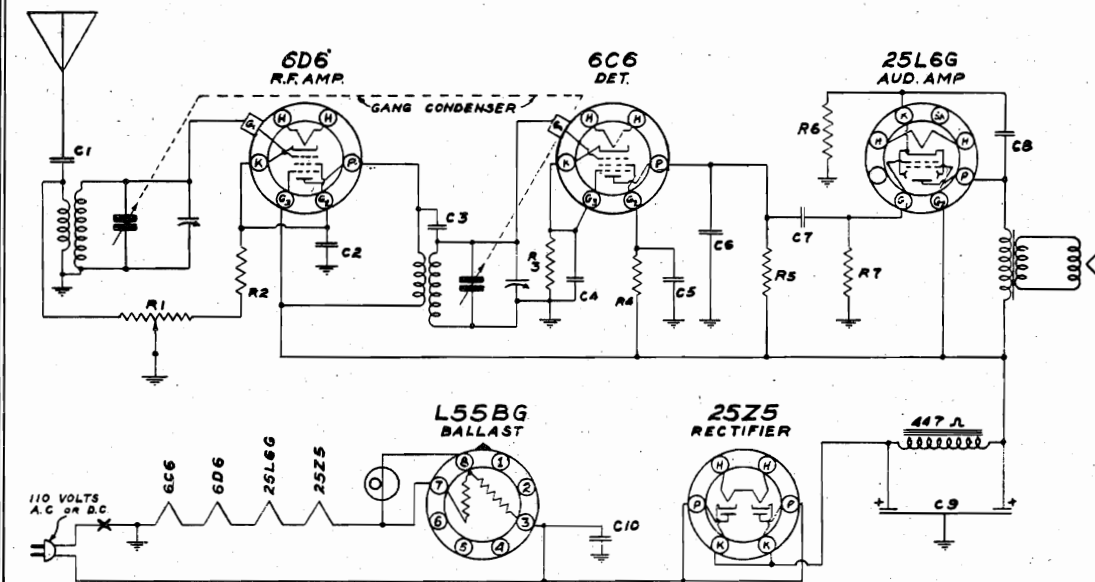

MODEL D730 (1938-1939)

ALIGNMENT DATA AND SERVICING

Connect a signal generator to the antenna lead of the receiver through a 100 Mmf. condenser. Set the dial pointer at 1400 KC. Set the generator at 1400 KC. Now adjust the antenna and RF trimmers of the gang condenser to maximum output.

CONDENSERS

NO.	CAPACITY	TYPE
C1	.002 MFD.	400V.
C2	.1	200V.
C3	1.5 MFD.	GIMMIK
C4	.25 MFD.	200V.
C5	.1	200V.
C6	.0002	600V.
C7	.01	400V.
C8	.02	400V.
C9	16.0-16.0	150V. ELECT.


RESISTORS

NO.	OHMS R.	WATTS	VOL. CONT.
R1	75,000		
R2	250	1/4	
R3	25,000	1/4	
R4	2,000,000	1/4	
R5	500,000	1/4	
R6	110	1/2	WIRE WOUND
R7	500,000	1/4	

C10 .1 MFD. 400V.

WESTERN AUTO SUPPLY CO.

MODEL D731(1935)
Schematic, Voltage
Socket, Trimmers
Alignment

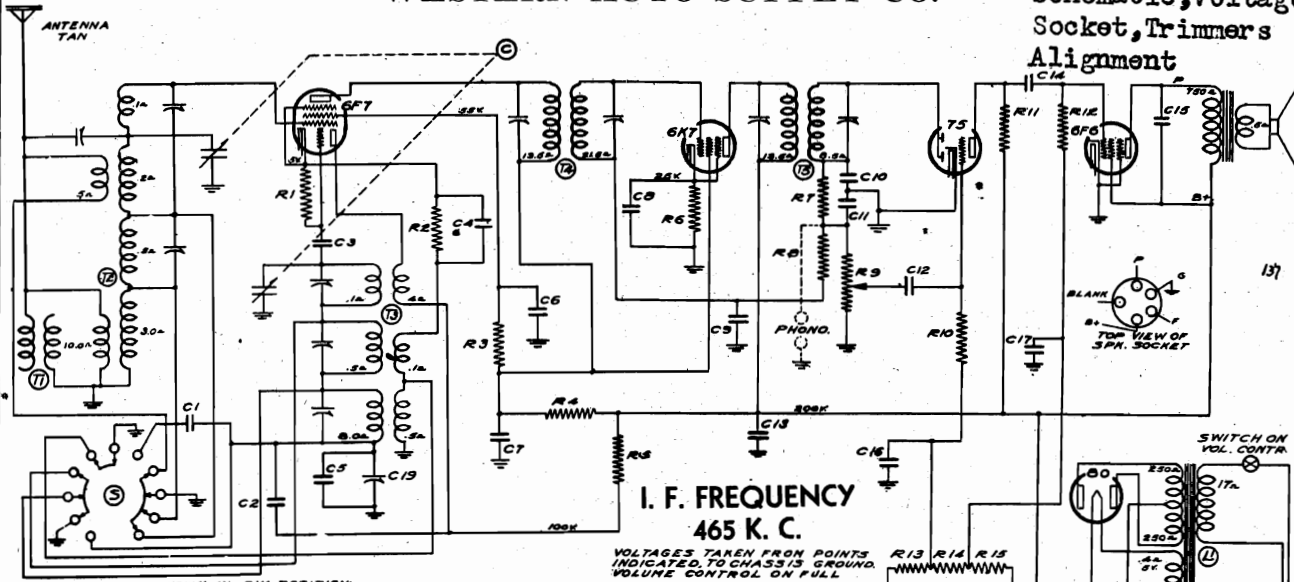

I. F. FREQUENCY
465 K. C.

VOLTAGES TAKEN FROM POINTS
INDICATED, TO CHASSIS GROUND.
VOLUME CONTROL ON FULL

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION VOLUME VIII

No.	Part No.	RESISTORS
R1.	130-12	50M Ohm—1/4 Watt—20%—20 V. Carbon
R2.	130-39	700 Ohm—1/4 Watt—20%—20 V. Carbon
R3.	130-20	100M Ohm—1/4 Watt—20%—50 V. Carbon
R4.	130-44	25M Ohm—1/4 Watt—20%—150 V. Carbon
R5.	130-42	20M Ohm—1/4 Watt—20%—100 V. Carbon
R6.	130-32	250 Ohm—1/4 Watt—20%—10 V. Wire Wound
R7.	130-12	50M Ohm—1/4 Watt—20%—20 V. Carbon
R8.	130-3	500M Ohm—1/4 Watt—20%—100 V. Carbon
R9.	101-18	500M Ohm Volume Control
R10.	130-19	1 meg Ohm—1/4 Watt—20%—100 V. Carbon
R11.	130-11	250M Ohm—1/4 Watt—10%—100 V. Carbon
R12.	130-11	250M Ohm—1/4 Watt—10%—100 V. Carbon
R13.	130-48	15M Ohm—1/4 Watt—10%—20 V. Carbon
R14.	130-47	180M Ohm—1/4 Watt—10%—100 V. Carbon
R15.	130-46	800M Ohm—1/4 Watt—10%—100 V. Carbon

No.	Part No.	CONDENSERS
C1.	129-23	.002 Mica—MW—5%
C2.	100-20	.1 x 120 V.—25%
C3.	129-5	.0001 Mica—MT—20%
C4.	100-20	.1 x 200 V.—25%
C5.	129-24	.00038—MT—5%
C6.	118-1	.1 x 200 V.—Dual Plus 50%; Minus 10%
C7.	118-1	.1 x 200 V.—Dual Plus 50%; Minus 10%
C8.	118-1	.1 x 200 V.—Dual Plus 50%; Minus 10%
C9.	118-1	.1 x 200 V.—Dual Plus 50%; Minus 10%
C10.	129-51	.000125—Mica MT—20%
C11.	129-51	.000125—Mica MT—20%
C12.	100-22	.05 x 200 V.—25%
C13.	103-7	.8 mfd x 300 V. Electrolytic
C14.	100-11	.01 x 400 V.—25%
C15.	100-19	.006 x 600 V.—25%
C16.	118-1	.1 x 200 V.—Dual Plus 50%; Minus 10%
C17.	118-1	.1 x 200 V.—Dual Plus 50%; Minus 10%
C18.	103-6	.8 mfd. x 350 V. Electrolytic
C19.	124-5	B. C. Series Pad J-3-S.

No.	Part No.	MISCELLANEOUS
T1.	105-10	Antenna Choke Coil
T2.	111-27	Antenna Coil
T3.	110-22	Oscillator Coil
T4.	108-38A	Input I.F. Transformer
T5.	108-40	Output I.F. Transformer
C	102-12	Two Gang Variable Cond.
S	125-6	Wave Change Switch
L1.	104-14A	Power Transformer 50/60 Cycle
L1.	104-18	Power Transformer 25 Cycle
L1.	114-11	Speaker—Field Resistance 1550 Ohms
L1.	104-17	Power Trans. Universal 50/60 Cycle
L1.	104-41	Power Trans. Universal 25 Cycle.

Transformers are available and chassis are sometimes equipped with universal transformers for operation on 40 and 60 cycles and with primary taps for 108, 125, 150, 220 and 250 volts (see instructions) and also sometimes equipped with 25 cycle transformers with 105-115 volt. or 220 volt primaries, not universals.


Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt. These voltages are clearly indicated on the circuit diagrams

IN ORDER TO PREVENT SIGNAL FROM ACTING UPON AVC AND AFFECTING ACCURACY OF VOLTAGE MEASUREMENTS, AERIAL AND GROUND LEADS SHOULD BE SHORT CIRCUITED WHILE MAKING MEASUREMENTS.

All voltages are to be measured with 119 volts on the primary of the power transformer.

Resistances of coils and transformer windings are indicated in ohms on schematic circuit diagrams.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

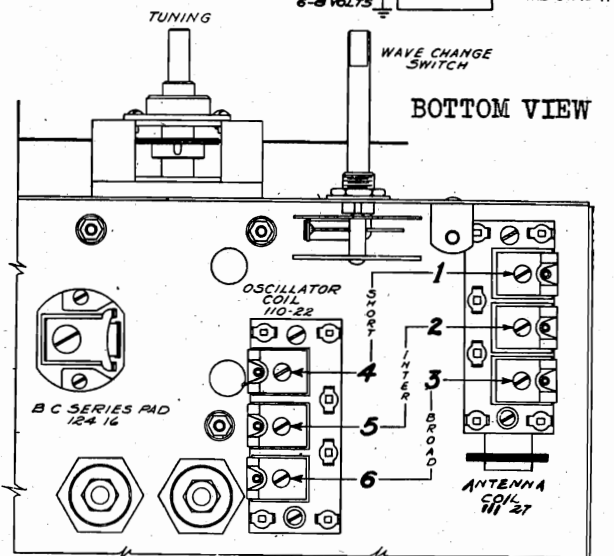

ALIGNMENT FREQUENCIES

Intermediate Frequency 465 KC
Adjust output then input transformers

Broadcast Band
Adjust trimmer number 6 at 1720 KC
Adjust trimmer number 3 at 1400 KC.
Adjust series pad at 600 KC

Tracking and sensitivity check- 1000 KC

Short wave Band
Adjust trimmer number 4 at 18 MC
Adjust trimmer number 1 at 18 MC
Tracking and sensitivity check- 9 MC

Intermediate Band
Adjust trimmer number 5 at 7 MC
Adjust trimmer number 2 at 7 MC
Tracking and sensitivity check-2.5 MC



MODEL D731(1938-9)
5-Lever Model

WESTERN AUTO SUPPLY CO.

FOR TUNER DATA
SEE INDEX

Frequency Range — 535 - 1720 Kilocycles

I. F. FREQUENCY 470 KILOCYCLES

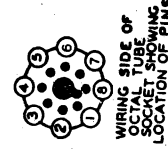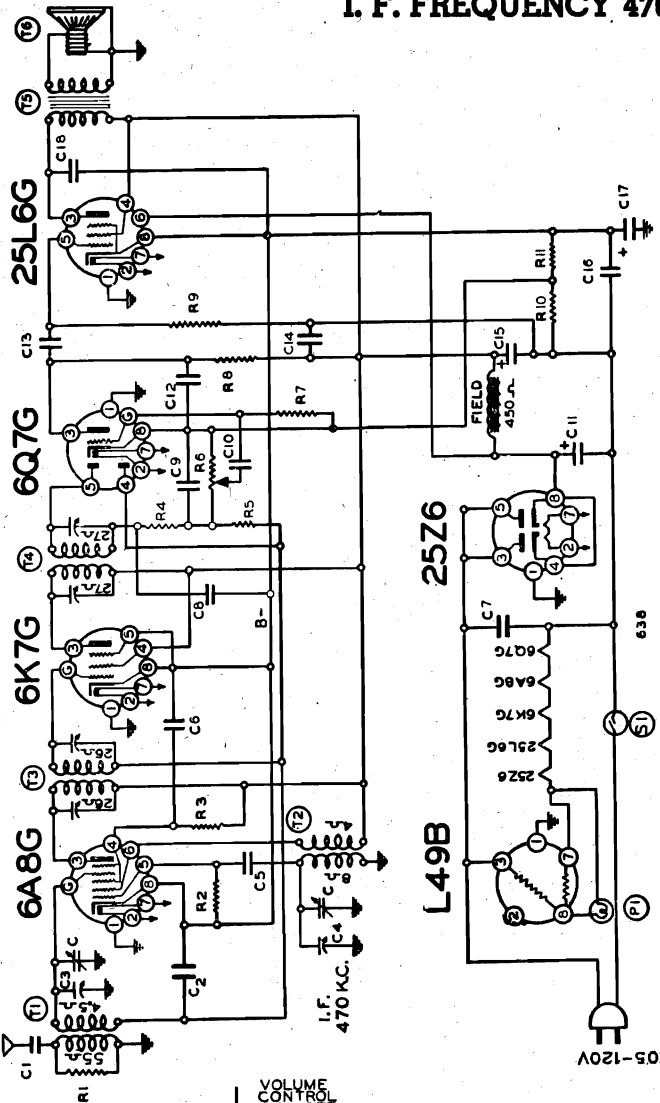

WIRING SIDE OF SOCKET TUBE SOCKET SHOWING LOCATION OF PINS

Code No.	Part No.	Description
C10	10011	.01 x 400 v.
C11	11953C	30 mid. lytic
C12	12912	.0025 mica
C13	10011	.01 x 400 v.
C14	1009	.05 x 200 v.
C15	11953C	30 mid. lytic
C16	11953C	40 mid. lytic
C17	10091	.15 x 400 v.
C18	10067	.025 x 400 v.

NOTE:—C11, 15 and 16—One unit for 60 cycle Use 11953C (30 mid. 30 mid. 40 mid.) C11, 15 and 16—One unit for 25 cycle Use 11962C (60 mid. 60 mid. 40 mid.)

Code No.	Part No.	Description
R1	13017	10M ohm— $\frac{1}{2}$ w.
R2	13012	50M ohm— $\frac{1}{2}$ w.
R3	130149	15M ohm— $\frac{1}{2}$ w.
R4	13012	50M ohm— $\frac{1}{2}$ w.
R5	13017	10M ohm— $\frac{1}{2}$ w.
R6	10117	3 megohm— $\frac{1}{2}$ w.
R7	130225	15 megohm— $\frac{1}{2}$ w.
R8	13010	50M ohm— $\frac{1}{2}$ w.
R9	13021	250M ohm— $\frac{1}{2}$ w.
R10	13021	75 ohm— $\frac{1}{2}$ w.
R11	130174	50 ohm— $\frac{1}{2}$ w.

CONDENSERS

Code No.	Part No.	Description
C1	10284	2 gang variable condenser
C2	1292	.0005 mica
C3	10026	.02 x 400 v.
C4	10026	Antenna Trimmer—on gang
C5	12912	Oscillator Trimmer—on gang
C6	1009	.05 x 200 v.
C7	1001	.1 x 400 v.
C8	1295	.0001 mica
C9	1295	.0001 mica

PARTS

Code No.	Part No.	Description
T1	111108	Antenna Coil complete
T2	11073	Oscillator Coil complete
T3	10862F	Input I. F.—470 kc. complete
T4	10863F	Output I. F.—470 kc. complete
T5	10560	Output Transformer
T6	114116E	5 inch Dynamic Speaker (450 ohm field)
S1		Off-on switch on volume control
P1	10794	T-44 Pilot Light

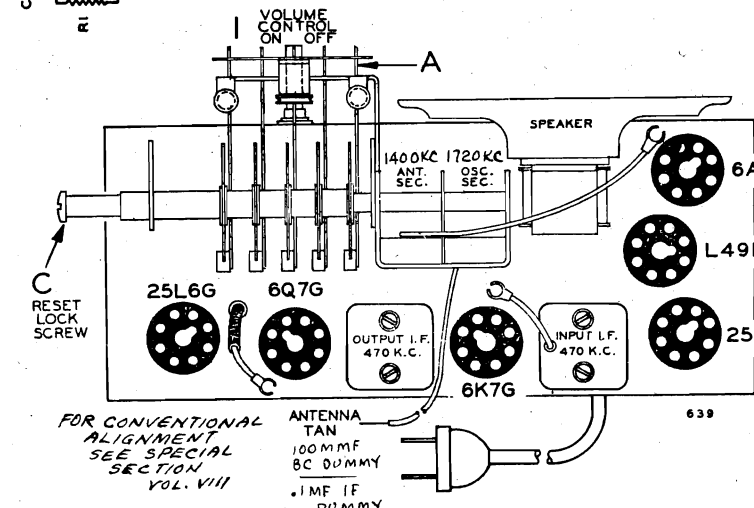


FIG. 1 — TOP VIEW

TUBES:
The tube complement of this chassis consists of the following:
The type and function of each tube is as follows:
1—Type 6A8G Pentagrid Mixer, First Detector—oscillator.


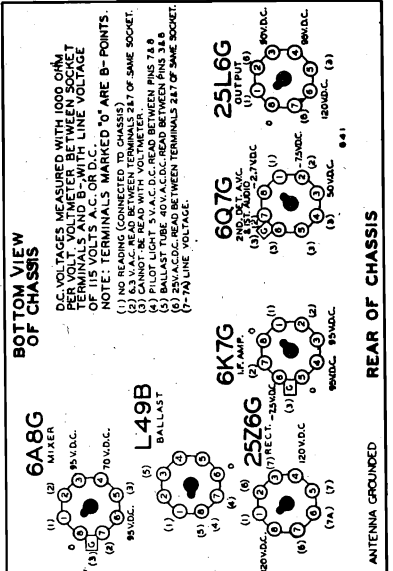


FIG. 3

MODEL D731(1938-9)

4-Lever Model
Schematic, Voltage
Socket, Trimmers

WESTERN AUTO SUPPLY CO.

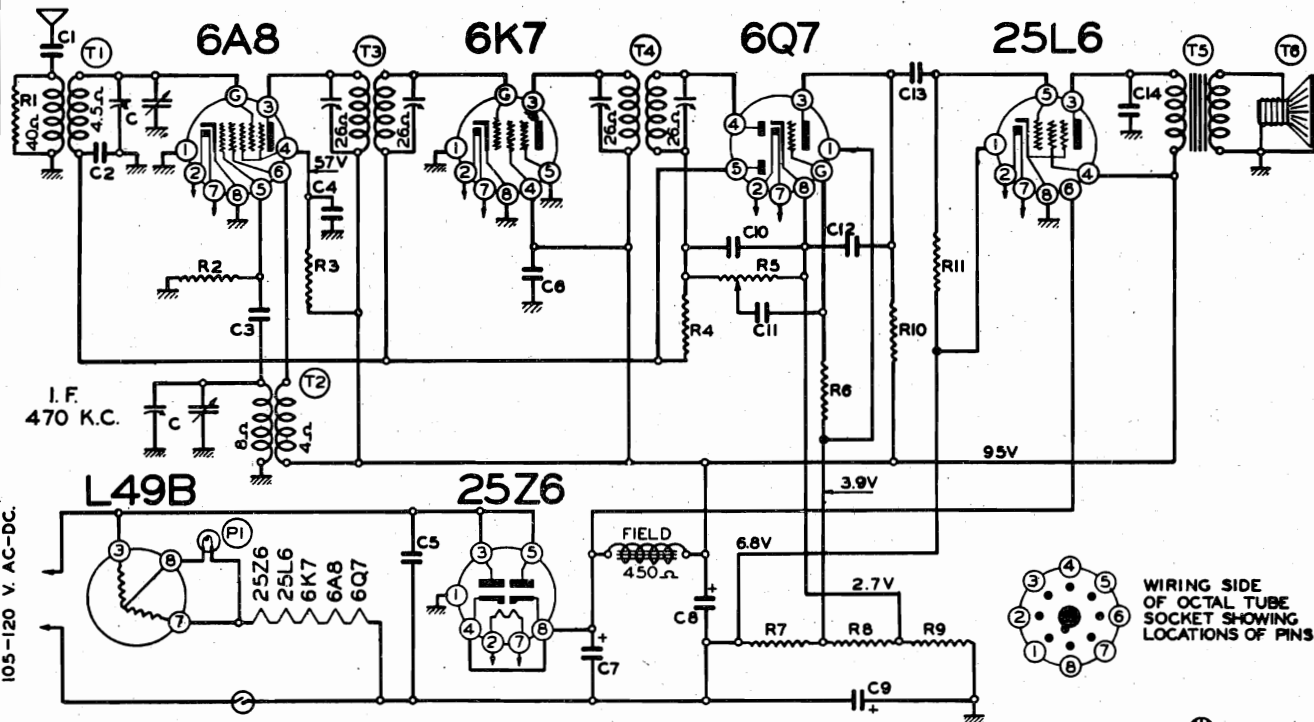

Frequency Range —
530 - 1720 Kilocycles

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII

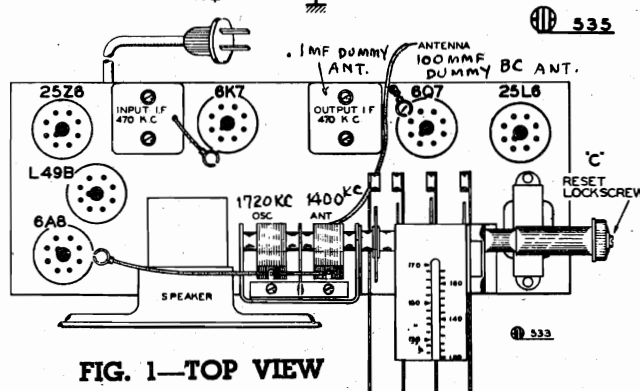


FIG. 1—TOP VIEW

LIST OF REPAIR PARTS (No. 175500 and up)

Part No.	Circuit Diagram Reference	Description	List Price Each
CONDENSERS			
1001	C5	.1 x 400 Volt Tubular Condenser.....	.25
1009	C2, C4	.05 x 200 Volt Tubular Condenser.....	.25
10011	C11, C13	.01 x 400 Volt Tubular Condenser.....	.25
10020	C6	.1 x 200 Volt Tubular Condenser.....	.25
10067	C14	.025 x 400 Volt Tubular Condenser.....	.25
11953	C7, C8, C9	30MFD-30MFD-40MFD Lytic Filter Condenser.....	1.50
1292	C1	.0005 Mica Type Condenser-20%.....	.25
1295	C10	.0001 Mica Type Condenser-20%.....	.25
12912	C3, C12	.00025 Mica Type Condenser-20%.....	.25
RESISTORS			
13011	R11	250M Ohm-1/4 Watt Resistor-20%.....	.20
13012	R2	50M Ohm-1/4 Watt Resistor-20%.....	.20
13019	R6	1 Meg. Ohm-1/4 Watt Resistor-20%.....	.20
13021	R1	20M Ohm-1/4 Watt Resistor-20%.....	.20
130100	R10	150M Ohm-1/4 Watt Resistor-20%.....	.20
130149	R3	15M Ohm-1/4 Watt Resistor-20%.....	.20
130170	R4	3 Meg. Ohm-1/4 Watt Resistor-25%.....	.20
130174	R7, R9	50 Ohm-1/4 Watt Resistor-10%.....	.20
130215	R8	25 Ohm-1/4 Watt Resistor-10%.....	.20
COILS			
10882F	T4	Input I. F. Coil Assembly Complete with Can.....	1.25
10883F	T3	Output I. F. Coil Assembly Complete with Can.....	1.25
11073	T2	Oscillator Coil Assembly Complete.....	.50
11192B	T1	Antenna Coil Assembly Complete.....	.60

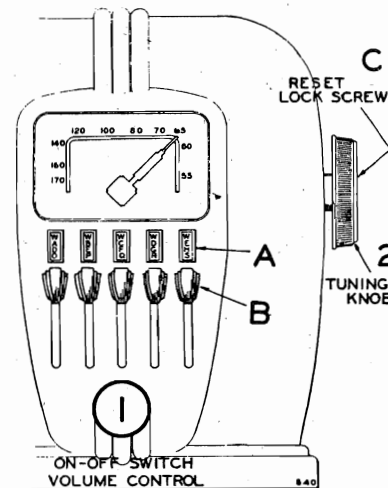


FIG. 2.—FRONT VIEW
FOR SETTING PUSH BUTTONS
SEE INDEX

WESTERN AUTO SUPPLY CO.

MODELS D731(1938-9)
4 and 5-Lever Models
Alignment, Tuner Data

PROCEDURE FOR SETTING THE AUTOMATIC LEVERS:

There are four ^{OR FIVE} levers on the dial by means of which stations may be selected, (See "B" Fig. 2) **see note**

Make a list of local stations you tune in regularly; any number up to and including four.

Punch out from the set of station call letter tabs supplied, the call letters of the stations you have selected.

Above each automatic tuner lever an opening in the cabinet is provided for inserting the call letter tabs, (See "A" Fig. 2).

Insert the call letter tabs in the rectangular openings in the cabinet above each of the automatic tuner levers. One of the small celluloid tabs supplied should be snapped into place over each of the station call letter tabs.

Press DOWN ALL THE WAY any one of the automatic tuner levers. Holding it down FIRMLY, tune in by means of the tuning knob (No. 2) the station indicated on the station call letter tab above this lever. Turn the tuning knob very slowly back and forth (while still holding lever in downward position) until the signal is clearest. The station will then be accurately tuned in. Release the lever.

Press down another automatic tuner lever. Holding it down FIRMLY, carefully tune in the station indicated on the call letter tab above this lever. Release this lever.

Follow this procedure until you have selected all of your favorite stations.

Now rotate the tuning knob (No. 2) to the right (clockwise) as far as it will turn, and with a coin (half dollar), tighten the special locking screw ("C") in the center of the tuning knob, (See Fig. 1).

It is VERY IMPORTANT that this locking screw is turned until it is ABSOLUTELY TIGHT.

This screw will lock in place all the stations you have selected on the automatic tuner levers. (Note: Locking screw "C" is loose when radio is shipped from factory).

If you should desire to change any station you selected to another, hold the tuning knob No. 2 securely and with a coin loosen the locking screw "C" one or two turns; select the new station as explained. Be sure to retighten the locking screw, otherwise the stations you have selected will not stay adjusted to the levers.

The automatic dial is now set up for quick tuning.

- 1—Type 6A8G Pentagrid Mixer, First Detector-oscillator.
- 1—Type 6K7G Remote Cut-Off Pentode, I.F. Amplifier(470 K.C.)
- 1—Type 6Q7G Duplex-Diode Triode Second Detector, A.V.C. and First Audio.
- 1—Type 25L6G Beam Output Amplifier.
- 1—Type 25Z6G High Vacuum Rectifier.
- 1—Type L49B Ballast Tube.

SERVICE NOTES:

Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt.

All voltages as indicated on diagram are measured with 117 volt A.C. or D.C. line.

Resistances of coil windings are indicated in ohms on the schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating which is known to be good, until the defective unit is located.

Excessive hum, stuttering, low volume and a reduction in all D.C. voltages is usually caused by a shorted electrolytic condenser; open by-pass condensers frequently cause oscillation and distorted tone.

ALIGNING INSTRUCTIONS:

CAUTION:—No aligning adjustments should be attempted without first thoroughly checking over all other possible causes of trouble, such as poor installations, open or grounded antenna systems, low line voltages, defective tubes, condensers and resistors. In order to properly align this chassis, an oscillator (generator) is absolutely necessary. No aligning adjustments should be attempted with the chassis in the cabinet.

All adjustments should be made with a non-metallic screw driver.

RESONANCE INDICATOR:

Use as a resonance indicator an output meter connected across the primary of the speaker input transformer or by means of an adapter between the plate and screen terminals of the type 25L6G output tube. Maximum deflection of the meter indicates resonance. Use only enough signal to get a readily readable output. A low range output meter or the low scale of a multi-range meter should be used.

ALIGNING I.F. TRANSFORMERS: (470 K.C.):

- Part No. 108-83F Output I.F. Transformer
 - Part No. 108-82F Input I.F. Transformer
- These I.F. transformers have two adjustments, both of which are accessible from the top of chassis (see Fig. 1).
1. With volume control full on (the extreme right of its rotation), and with the variable condenser set to approximately 1400 kilocycles, make the following adjustments:
 - (a) Connect external oscillator set at 470 kilocycles, in series with .1 mfd. condenser, to the control grid cap of the type 6K7G tube, and adjust the output I.F. transformer (No. 108-83F) to resonance.
 - (b) Move oscillator output clip from grid of 6K7G to grid of 6A8G and adjust input I.F. transformer (No. 108-82F) to resonance.
 - (c) With oscillator still connected to 6A8G, readjust output I.F. transformer (108-83F) if necessary.

R.F. ALIGNMENT: (530-1720 K.C.)

1. With gang condenser in its minimum capacity position, plates entirely out of mesh, connect an external oscillator in series with a 100 mmf. condenser to the antenna lead and chassis ground and make the following adjustments:
 - (a) With external oscillator set at 1720 kilocycles, adjust oscillator trimmer to resonance. This adjustment is on the top of rear section of variable gang condenser. (See Fig. 1).
 - (b) Re-set external oscillator to 1400 kilocycles, rotate condenser, pick up oscillator signal and adjust antenna trimmer to resonance. (Top of front section of gang condenser).
 - (c) Check sensitivity at 600 and 1000 kilocycles.

NOTE:

For arrangement of levers for 5 lever model see Fig. 2 on schematic page for 5 lever model.

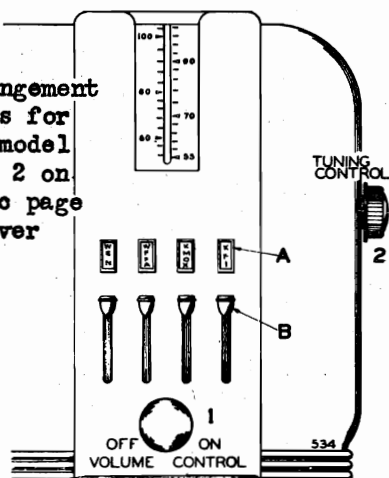


FIG. 2—FRONT VIEW




DESCRIPTION:

The tube complement of this chassis consists of the following octal base glass tubes which are interchangeable with metal tubes.

The type and function of each tube is as follows:

MODEL D734(1935)
Schematic, Voltage
Socket, Trimmers


WESTERN AUTO SUPPLY CO.

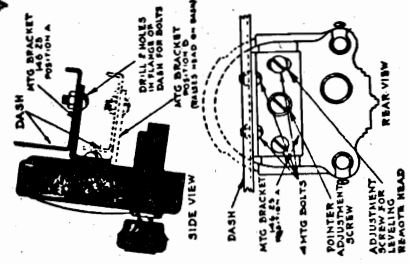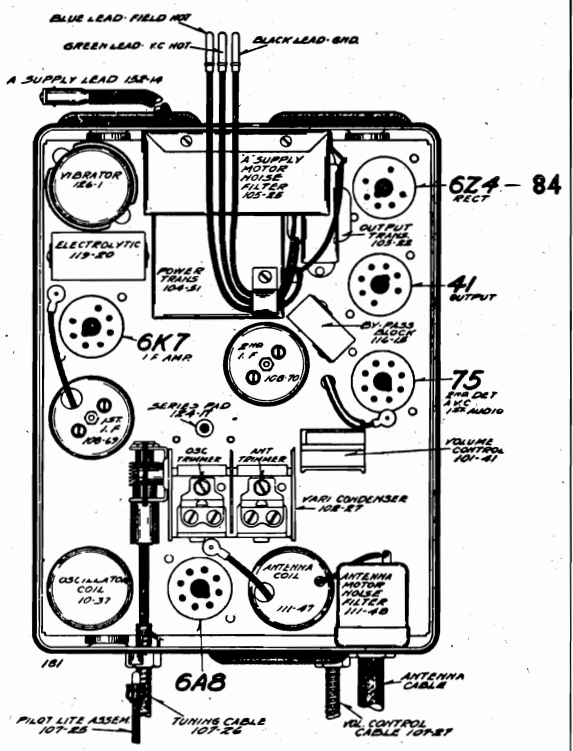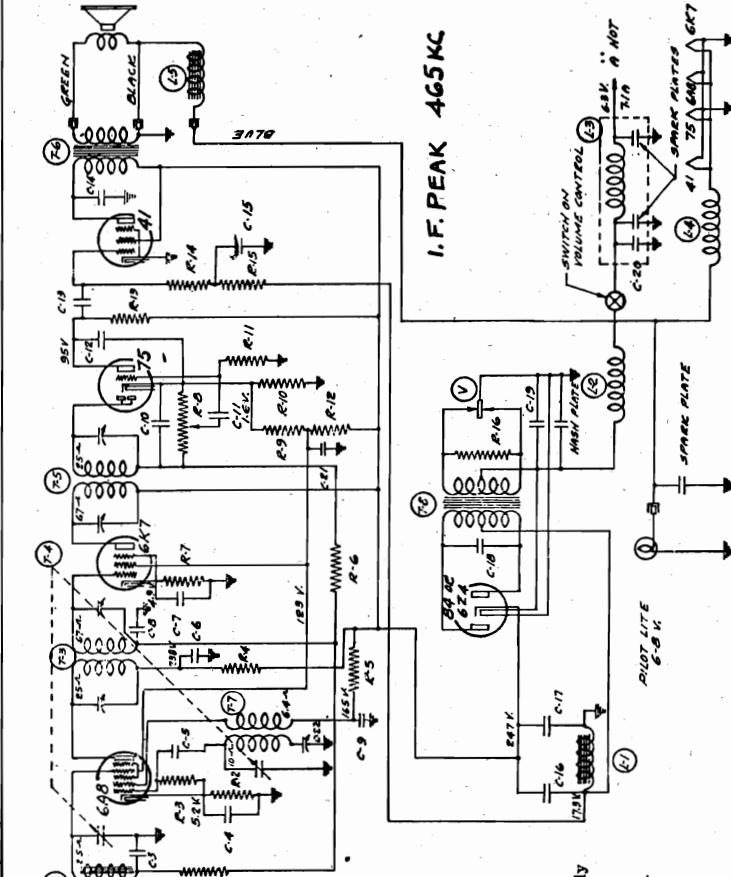

- PARTS**
- T1 111-48 Antenna Filter Coil Assembly
 - T2 111-47 Antenna Coil Assembly
 - T3 108-69 Input I.F. Coil—465 K.C.
 - T4 102-27 Two Gang Variable Conden- ser
 - T5 108-70 Output I.F. Coil—465 K.C.
 - T6 105-22 Output Transformer
 - T7 110-37 Oscillator Coil Assembly
 - T8 104-51 Power Transformer
 - L1 105-23 Filter Choke
 - L2 105-19 "A" Choke
 - L3 105-25 "A" Filter Assembly
 - L4 105-24 "A" Choke
 - L5 114-34 5 1/2" Speaker (Field resist- ance 4 ohms)
- V**
- Vibrator
 - STEERING POST MOUNTING
 - STEERING POST
 - MOUNTING STRAP 144-12
 - MOUNTING BRACKET 144-6
 - VOLUME SHAFT
 - PILLOT LEAD
 - SELECTOR SWAPT COMPLETE
 - REMOTE HEAD

- CONDENSERS**
- C1 129-3 .00002 Mica—"0"—20%
 - C2 129-49 .00008 Mica—"0"—5%
 - C3 100-9 .05x200 Volt
 - C4 100-6 .25x200 Volt
 - C5 129-21 .0002 Mica—"MT"—"0"—20%
 - C6 100-1 .1 x400 Volt 50%—10%
 - C7 100-33 .1 x200 Volt 50%—10%
 - C8 100-9 .05x200 Volt 25%—25%
 - C9 100-1-B .1 x400 Volt 50%—10%
 - C10 129-12 .00025 Mica—"MT"—"0"—20%
 - C11 100-9 .05 x200 Volt 25%—25%
 - C12 129-5 .0001 Mica—"MT"—"0"—20%
 - C13 116-15 .05 x400 Volt
 - C14 116-15 .007x800 Volt
 - C15 100-33 .1x200 Volt 50%—10%
 - C16 119-20 8.0 Mfd. Electrolytic Conden- ser—350 Working Volts
 - C17 119-20 4.0 Mfd. Electrolytic Conden- ser—350 Working Volts
 - C18 100-36 .01x1400 Volt—10%
 - C19 100-35 .5 x 200 Volt 50%—10%
 - C20 100-35 .5 x 200 Volt 50%—10%
 - C21 100-33 .1 x 200 Volt 50%—10%
 - C22 124-17 Single Padder J-4-S
- NOTE: C-13 and C-14 in one unit—part number 116-15.

- RESISTORS**
- R1 130-20 100M Ohm—1/2 Watt—20%
 - R2 130-79 50 Volt—Carbon
 - R3 130-94 400 Ohm—1/2 Watt—10%
 - R4 130-94 10 Volt—Carbon
 - R5 130-94 50M Ohm—1/2 Watt—10%
 - R6 130-94 10 Volt—Carbon—Ins.
 - R7 130-23 2M Ohm—1/2 Watt—20%
 - R8 130-42 20M Ohm—1/2 Watt—20%
 - R9 130-42 100 Volt—Carbon—Ins.
 - R10 130-68 1 Meg Ohm—1/2 Watt—10%
 - R11 130-79 20 Volt—Carbon
 - R12 130-79 400 Ohm—1/2 Watt—10%
 - R13 101-41 500M Ohm—Volume Control and Switch
 - R14 130-106 50M Ohm—1/2 Watt—10%
 - R15 130-101 100 Volt—Carbon—Ins.
 - R16 130-101 600 Ohm—1/2 Watt—10%
 - R17 130-88 1 Meg Ohm—1/2 Watt—10%
 - R18 130-95 20 Volt—Carbon
 - R19 130-95 12M Ohm—1/2 Watt—10%
 - R20 130-95 100 Volt—Carbon
 - R21 130-3 500M Ohm—1/2 Watt—20%
 - R22 130-3 100 Volt—Carbon
 - R23 130-5 300M Ohm—1/2 Watt—20%
 - R24 130-5 10 Volt—Carbon
 - R25 130-45 250M Ohm—1/2 Watt—20%
 - R26 130-45 20 Volt—Carbon—Ins.
 - R27 130-84 200 Ohm—1/2 Watt—20%
 - R28 130-84 10 Volt—Carbon—Ins.

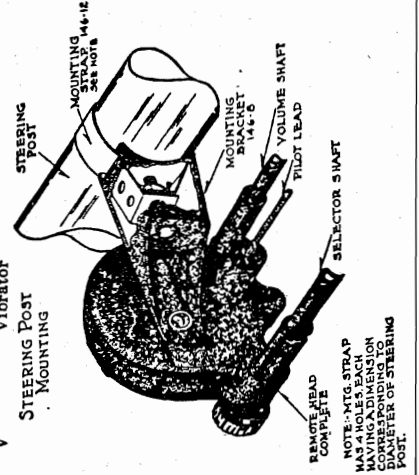

WESTERN AUTO SUPPLY CO.


MODEL D737(1935)
Schematic

Power Consumption - - 6.5 Amperes at 6.3 Volts
Power Output - - - - 3 Watts Undistorted

Tuning Frequency Range - - - - 530-1650 KC

Sept. 1935

Osc. trimmer adjusted at 1650 kc. with condenser full open.
1st det. and antenna trimmers adjusted at 1400 kc.

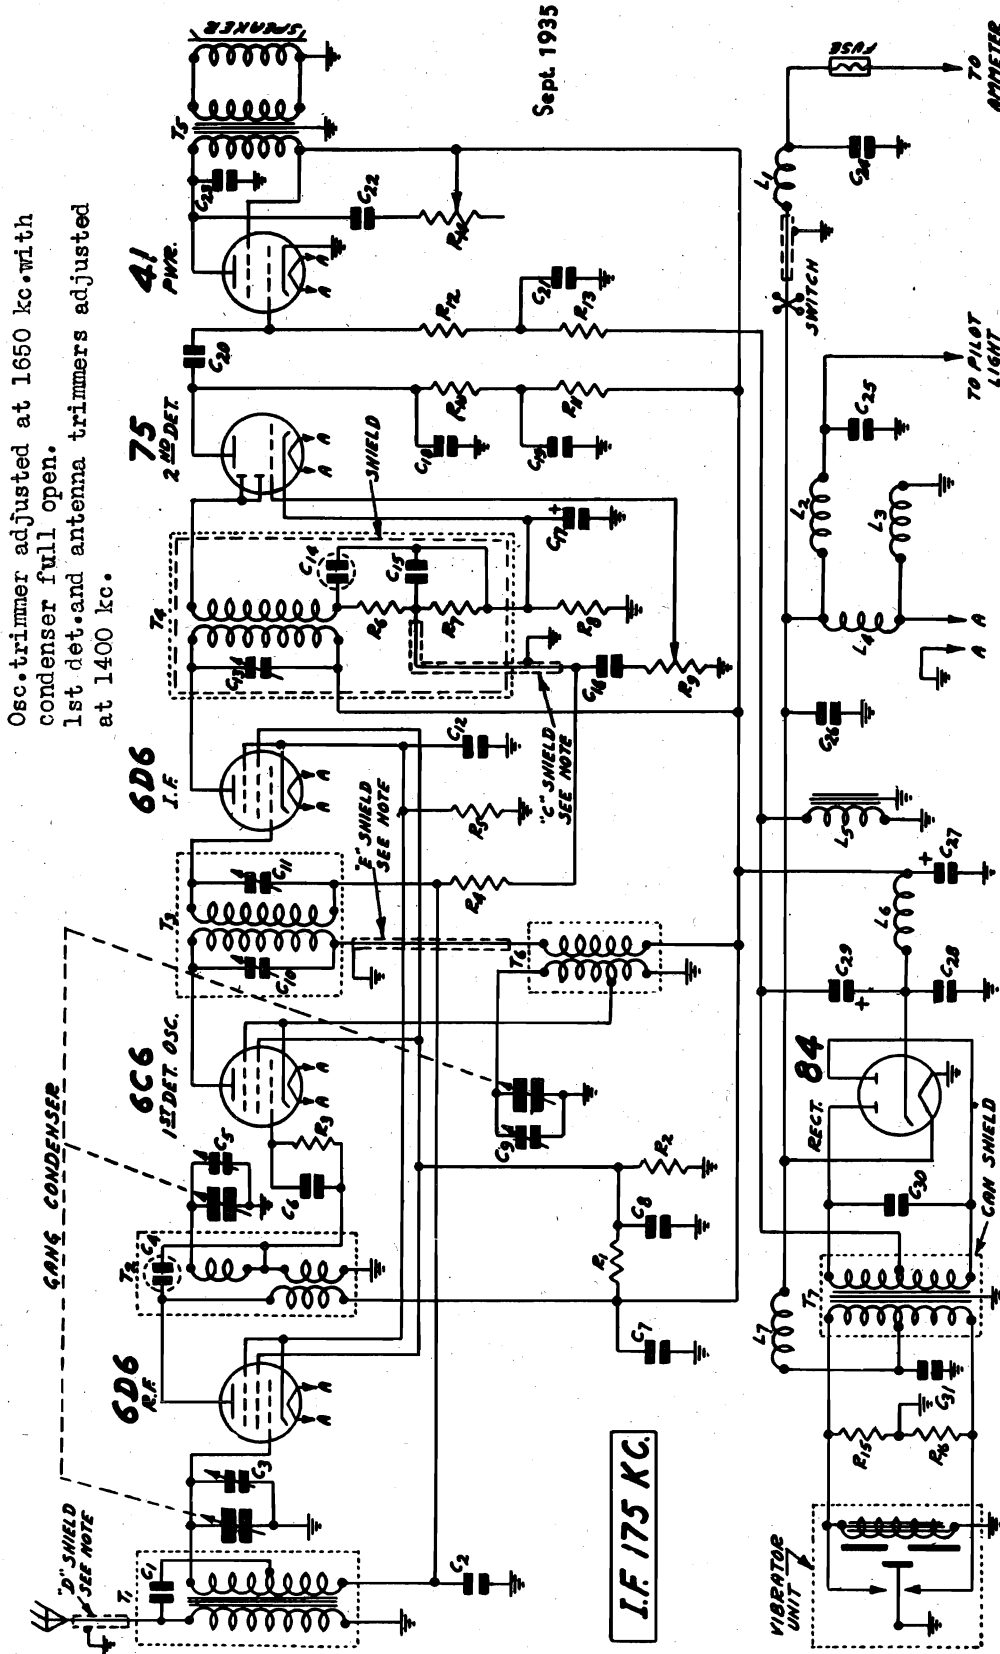

I.F. 175 KC.

GROUPS OF CIRCUIT ELEMENTS ENCLOSED IN DOTTED RECTANGLES COMPRISE DISTINCT MECHANICAL ASSEMBLIES.
CIRCUIT ELEMENTS ENCLOSED IN DOTTED CIRCLES DO NOT EXIST AS DISTINCT UNITS BUT OCCUR AS A RESULT OF THE MUTUAL POSITION OF OTHER CIRCUIT ELEMENTS ON THEIR PARTS.

- C 1 21 mf.
- C 2 .05 mf. 180 V.
- C 3 3 Gang Trimmer
- C 4 40 mf.
- C 5 250 mf.
- C 6 200 mf.
- C 7 .01 mf. 360 V.
- C 8 .10 mf. 360 V.
- C 9 .10 mf. 180 V.
- C 10 50 mf.
- C 11 70-150 mf. } One Unit
- C 12 .10 mf. 180 V.
- C 13 70-150 mf.
- C 14 250 mf.
- C 15 250 mf.
- C 16 .01 mf. 360 V.
- C 17 250 mf.
- C 18 250 mf.
- C 19 .10 mf. 360 V.
- C 20 .01 mf. 360 V.
- C 21 .25 mf. 180 V.
- C 22 .02 mf. 600 V.
- C 23 .002 mf. 600 V.
- C 24 .50 mf. 180 V.
- C 25 2000 mf.
- C 26 2000 mf.
- C 27 .01 mf. 360 V.
- C 28 .0075 mf. 360 V.
- C 29 .50 mf. 25 V. } Electrolytic Block
- C 30 .50 mf. 25 V.
- C 31 5.0 mf. 350 V.
- C 32 8.0 mf. 350 V.
- R 1 17000 ohm 1.0 W.
- R 2 20000 ohm 1.0 W.
- R 3 .50 Megohm 2 W.
- R 4 1.0 Megohm 2 W.
- R 5 350 ohm 2 W.
- R 6 5000 ohm 2 W.
- R 7 5000 ohm 2 W.
- R 8 600 ohm 2 W.
- R 9 2.0 Megohm 2 W.
- R 10 15000 ohm 2 W.
- R 11 5000 ohm 2 W.
- R 12 50 Megohm 2 W.
- R 13 100000 ohm 2 W.
- R 14 150000 ohm 2 W.
- R 15 50 ohm .5 W.
- R 16 50 ohm .5 W.
- T 1 Antenna Trans.
- T 2 R. F. Inverter Trans.
- T 3 24 L. F. Trans.
- T 4 24 L. F. Trans.
- T 5 Output Trans.
- T 6 Osc. Inductor
- T 7 Power Trans.
- L 1 Motor Noise Reactor
- L 2 Pilot Light Reactor
- L 3 Speaker Field 5.3
- L 4 Filament Reactor
- L 5 "B" Reactor
- L 6 "B" Reactor
- L 7 Vibrator Reactor

MODEL D737-C (1936)
Voltage, Resistance
Coils, Antenna Data

WESTERN AUTO SUPPLY CO.

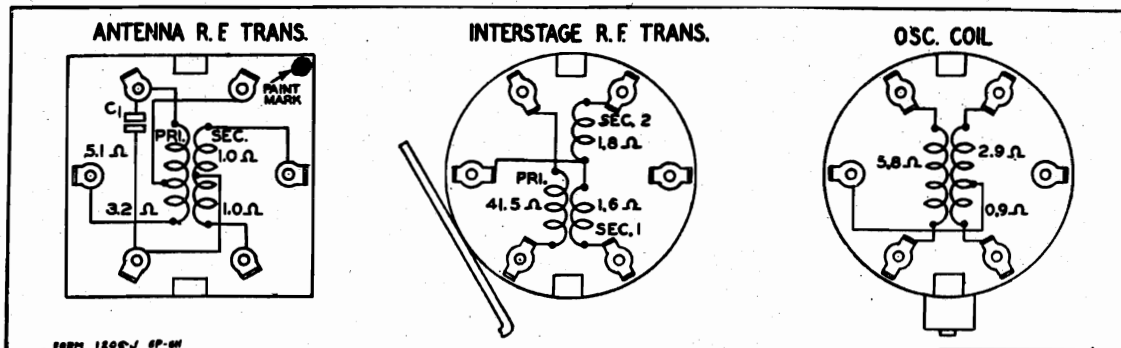


Fig. 3—R. F. and Oscillator Coil Base Terminal Arrangement and D. C. Resistance of Windings

D. C. Resistance of Windings

Following are the D. C. resistances of the various windings in the chassis. The values given below will vary slightly in different sets.

Code	Winding	D. C. Resistance in Ohms
T1	Antenna Transformer	
	Primary Winding	5.1
	Long Portion	3.2
	Short Portion	1.0
	Secondary Winding—Either Portion	1.0
T2	Interstage Transformer	41.5
	Primary Winding	1.6
	No. 1	1.8
	No. 2	1.8
T3	1st I. F. Transformer	
	Primary Winding	88.0
	Secondary Winding	87.0
T4	2nd I. F. Transformer	
	Primary Winding	43.0
	Secondary Winding	48.2

Code	Winding	D. C. Resistance in Ohms
T5	Dynamic Speaker	
	Output Transformer	
	Primary	416.6
	Secondary	Small
L3	Speaker Field	5.3
	Speaker Voice Coil	Small
T6	Oscillator Coils	
	Grid Coil	
	Long Portion	2.9
	Short Portion	0.9
	Plate Coil	5.8
T7	Power Transformer	
	Primary Winding	
	Center Tap to Inside	Small
	Center Tap to Outside	Small
	Secondary Winding	
	Center Tap to Inside	200.0
	Center Tap to Outside	200.0
L1	Motor Noise Reactor	Small
L4	Filament Reactor	.22
L5	Filter Choke	300.0
L6	R. F. "B" Plate Reactor	4.0
L7	Vibrator Filter Reactor	Small

VOLTAGES AT SOCKETS

Antenna Disconnected Battery 6 Volts Under Load

Type of Tube	Function	Across Heater	Plate to Ground	Screen to Ground	Cathode to Ground	Cathode Current M. A.
6D6	R. F. Amp.	5.6	245	105	5.2	7.5
6C6	1st Det. Osc.	5.6	245	105	0	2.9
6D6	I. F. Amp.	5.6	245	105	5.2	7.5
75	2nd Det.	5.8	120 ⁽¹⁾		1.4	0.14
41	Power	5.8	235	245	15.0 ⁽²⁾	30.0
84	Rectifier	5.8				52.0

(1) With 250,000 Ohm Meter
(2) Read Across Filter Choke

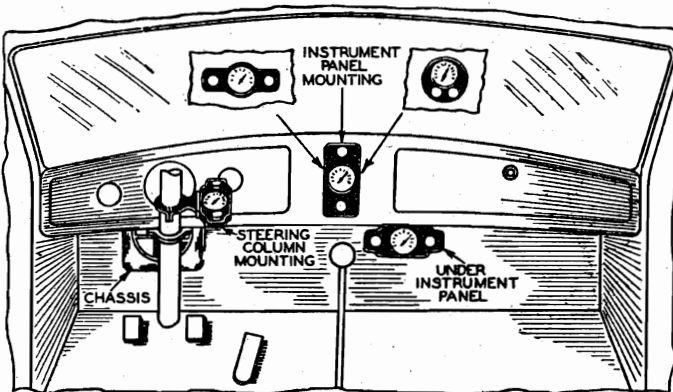


Fig. 1—Various Control Head Mountings

Antenna

IMPORTANT—If the car antenna is of high capacity (600 mmf. or higher) insert the antenna plug with the mark on the HC side—See Fig. 10. If it is a low capacity antenna, insert the plug with the mark on the LC side.

The General Motors cars have steel roofs, and a running board or other under car antenna must be used. These are low capacity antennas. The Chrysler motor cars (except Plymouth) have a steel roof separated from the body proper, which is used as an antenna. These are high capacity antennas. Other cars without steel roofs such as Ford and Plymouth have a built-in roof antenna which is of low capacity.

If a running board or under-car antenna is used, it must be one which is covered with a suitable insulation, to prevent short circuiting in wet weather.

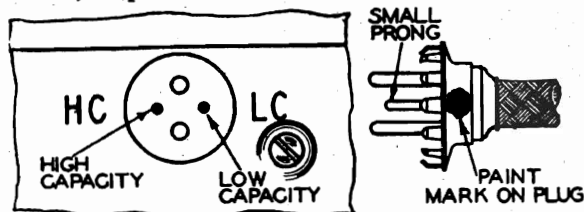


Fig. 10—Antenna Plug Insertion

WESTERN AUTO SUPPLY CO.

MODEL D737-C (1936)
Alignment, Noise Data
Notes

Alignment and Calibration

Misalignment or mistacking of condensers generally manifests itself as broad tuning and lack of volume at portions or all of the standard wave band. The receivers are all properly aligned at the factory with precision instruments and realignment should not be attempted unless all other possible causes of the faulty operation have first been investigated and unless the service technician has the proper equipment.

A signal generator that will provide accurately calibrated signals over the standard wave band and at the intermediate frequency, and an output meter are required for indicating the effect of adjustments. The complete procedure is as follows:

I. F. Adjustment

Set the signal generator for a signal of 175 KC. Connect the antenna lead of the signal generator thru a 01 mf. condenser to the stator of the I.F. detector section of the tuning condenser. (See Fig. 2 for location of this section.) This can be done by pushing a wire or conductor between the stator blades or by extending an insulated wire thru the hole in the shield over the stator and pushing the wire thru the hole in the lug which extends up from the insulated stator assembly.

Connect the ground lead of the signal generator to the chassis ground.

Short out the oscillator section of the tuning condenser.

Set the volume control at the maximum position. Attenuate the signal from the signal generator to prevent the levelling-off action of the AVC.

Then adjust the three I.F. trimmers until maximum output is obtained. The location of these trimmers is shown in Fig. 2.

1650 KC Adjustment

Set the signal generator for 1650 KC. Turn the rotor of the tuning condenser to the full open position.

If a low capacity antenna is used connect the shielded antenna lead from the chassis through a 170

mf. condenser to the antenna post of the signal generator. (If high capacity, use 1700 mf.)

For this and all subsequent adjustments keep the volume control at the maximum position and attenuate the signal from the signal generator to prevent AVC action.

Adjust the trimmer of the oscillator section of the three gang condenser until maximum output is obtained—see Fig. 2 for location of this trimmer.

1400 KC Adjustment

Set the signal generator for 1400 KC. Turn the rotor of the tuning condenser carefully until maximum output is obtained.

Adjust the I.F. detector and antenna trimmers for maximum output.

Do not change the setting of the oscillator trimmer.

Adjusting Antenna Trimmer

After the receiver is installed and the car antenna is connected it will be necessary to adjust the antenna trimmer. Tune in a weak signal between 1200 and 1400 KC with the volume control about three-fourths on. Remove the cover of the chassis case. The antenna trimmer is on the center tuning condenser section—see Fig. 2. Turn the adjusting screw of this condenser up or down until maximum output is obtained. CAUTION—Do not turn any of the other trimmer adjusting screws for this adjustment.

Calibrating the Receiver

To calibrate the receiver, tune in a station of known frequency. At the back of the control head is the calibration screw. Remove the pilot lamp assembly. Insert a fine blade screwdriver and turn this screw until the pointer on the dial scale is at the frequency of the station being received. The knob must be held during this adjustment.

If the control head is inaccessible it may be calibrated by setting the pointer from the front. Remove the crystal by inserting a knife blade under the lower edge. Loosen the pointer screw, set the pointer and retighten.

Suppression of Ignition and Generator Noise

The two units mentioned below must be used in every case:

Distributor Suppressor—Remove the high tension lead to the distributor. Insert a distributor suppressor and connect the wire to the other end of the suppressor (see Fig. 13). If this is not practical, cut the high tension lead close to the distributor and use a wood screw end type distributor suppressor in this wire.

Generator Condenser—The generator condenser is installed at the cut-out as shown in Fig. 13. The lead from the condenser goes to the terminal on the cut-out.

In some of the new cars the cut-out relay is on the front of the dash or in some other location. It will be most convenient to mount this generator condenser at the relay.

Withdraw Antenna Cable Plug

Turn on the receiver and start the engine. If motor noise is heard, proceed as follows:

electrical connection is made between the spark plugs, suppressors and plug wires.

Then Reinsert Antenna Cable Plug

If motor noise is heard when the antenna cable is reconnected, proceed as follows until the noise is satisfactorily reduced:

Dome Light Lead—To determine the amount of noise due to the dome light lead, disconnect this lead at the ammeter, block, or where it is connected, coil it up, and tuck it as far as possible up in the column at which it comes down. Then, with the engine running, ground the end of this wire. If this is found to reduce the noise noticeably, interference is being radiated by the dome light lead. Reconnect the dome light lead and try a .25 or .5 mfd. condenser from the connecting point of the lead to ground. If this does not cure the noise, disconnect the lead and encase it in braided copper shield from the point where it leaves the column post to the point of connection. Keep the lead as far away as possible from car ignition wires and ground the shield.

If the noise due to the dome light lead still persists, disconnect this lead and remove it from the front corner post, at which point it is generally run down. Run the lead down one of the side posts in back of the door and direct to the storage battery. If done in this manner this lead should be fused.

Bonding Cables—Try grounding to the dash all cables and tubing which pass through it, such as oil lines, gas lines, etc. By means of a file, contact can be established between any of the lines and the dash, in order to determine whether such a ground will reduce the noise. To bond the cables to the dash, clean the point of contact, wrap a length of braided shield around the cable and solder the connection. Then solder the end of the shielding to the dash or ground it under a screw head if one is convenient.

Sufficient play should be left in the bonding shielding so that movement of the cables or tubing will not loosen this shielding from the dash.

Making Final Adjustments and Bolting Chassis in Place

Battery Cable

The battery connection is made at the ammeter. The end of the battery cable with the connecting lug is secured to one of the posts at the back of the ammeter in the instrument panel.

The other end of the battery cable has a fuse receptacle with bayonet fitting. Insert the fuse shield and fuse into the receptacle and connect it to the bayonet pin connector in the end of the battery lead coming from the chassis case as shown in Fig. 11.

Fuse

A 20 ampere automobile fuse is used in the battery cable. This fuse is placed in an insulating shield and is in the receptacle provided for it at the chassis end of the battery cable. CAUTION—Be sure the fuse shield is on the fuse before the latter is inserted in the receptacle. If a fuse blows, do not replace it without first investigating the cause.

Bolting Chassis in Place

Place the nuts and flat washers on the mounting bolts and put the chassis in place on the dash, extend-

High and Low Tension Leads—In some cases, the high and low tension leads between the coil and distributor are run close together. In some cars they are in the same conduit. If this is the case, remove the low tension lead from this conduit. In any event, keep the high and low tension leads as far apart from each other as possible. Shield and ground the shield of the low tension lead, if separating the two leads is not sufficient.

Steering Column, Etc.—It is possible for the steering column, foot pedals and brake lever to carry interference to the back of the dash at which point it may affect the radio receiver. See if each of these items are well grounded to the frame of the car. By means of a file or a braided shielding jumper, contact can be established between any of these items and the frame in order to determine whether such a ground will reduce the noise. A piece of one inch braided shielding should be used if such a ground is necessary and this shielding may be grounded under a screw head, nut or may be soldered in position.

Grounding Engine and Other Parts—The engine must, in every case, be well grounded to the frame of the car. If it is not, use a very heavy braided lead for this purpose, similar to a storage battery ground lead. In like manner it may be necessary to check the grounding of the metal dash, instrument panel, radiator and hood to the frame of the automobile.

Weak Pick-up—Noise, on occasion, may be due to weak pick-up caused by the automobile being in a shielded location or by a faulty antenna system. The action of the automatic volume control, due to the low pick-up, causes the set to operate at its maximum sensitivity, thereby increasing noisy reception, due both to external pick-up and internal conditions.

Loose Parts in Car—Noisy operation is also caused in some instances by loose parts in the car body or frame. These loose parts rubbing together affect the grounding and cause noise, due to the rubbing or wiping action. Tightening up the frame and body at all points and in some cases, the use of a copper jumper will eliminate noise of this nature.

Making Final Adjustments and Bolting Chassis in Place

ing the mounting bolts through the drilled holes in the dash. On one of the mounting bolts assemble the extra shakeproof lockwasher as shown in Fig. 9. Then complete the assembly to the dash as illustrated.

After the chassis is in place, secure the flexible shafts and electrical cables into position at the nearest convenient point.

Advancing Generator Charging Rate

The installation of the automobile radio imposes an additional drain on the car storage battery. This can be compensated for by advancing the charging rate of the car generator. Check the state of charge of the storage battery about a week after the installation of the automobile radio is made and have the charging rate adjusted accordingly.

Readjusting Flexible Shafts

When the receiver is in position on the dash, loosen the flexible shaft casing set screws on the chassis. Allow the casing to position itself so that it does not bind. Then retighten the set screws.

MODELS D-740, S740 (1934)
(Mallory Vibrator 296)

WESTERN AUTO SUPPLY CO.

Schematic, Voltage, Socket
Alignment, Trimmers

ALIGNMENT

1. Connect output meter across voice coil of speaker.
2. Set volume control on full.
3. Set tone control to bass position.
4. Connect dial light.

(A) I. F. Adjustment


1. Connect a .1 mfd. condenser in series with antenna lead of test oscillator.
2. Set test oscillator to 175 K. C.
3. Connect test oscillator to grid of 1st I. F. tube #6 (see Fig. #2) and adjust #7 to maximum output.
4. Connect test oscillator to grid of 1st Det. #12 and adjust condensers #4 and 5 to maximum output.
5. Repeat the above adjustments for accuracy.

(B) Oscillator Adjustment


1. Set test oscillator to 1500 K. C.
2. Connect test oscillator leads to grid of 1st Det. #12.
3. Set gang condenser to 1500 K. C. as follows:
 - (a) Open gang to fullest extent.
 - (b) Close slowly to the thickness of a thin cardboard strip or approximately .015 thousands of an inch.
4. Peak oscillator condenser #3 on end of gang.

(C) R. F. Adjustment

1. Set test oscillator to 1400 K. C.
2. Change antenna condenser in oscillator lead from .1 mfd. to .0002 mfd., and connect test oscillator to antenna lead of set.
3. Set condenser gang at 1400 K. C.
4. Peak condensers #1 and 2 on gang.
5. Do not touch oscillator trimmer #3 at 1400 K.C. setting of gang.

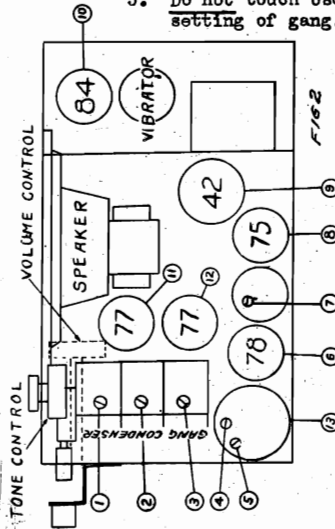

- #1 RF Trimmer Condenser
- #2 1st Det. Trimmer Cond.
- #3 Osc. Trimmer Cond.
- #4
- #5 1st IF Trimmer Cond.
- #6 IF Amplifier
- #7 2nd IF Trimmer Cond.
- #8 2nd Det. AVC & AF Amplifier
- #9 Power Output
- #10 Rectifier
- #11 RF Amplifier
- #12 Det. and Osc.
- #13 1st IF & Osc. Coil

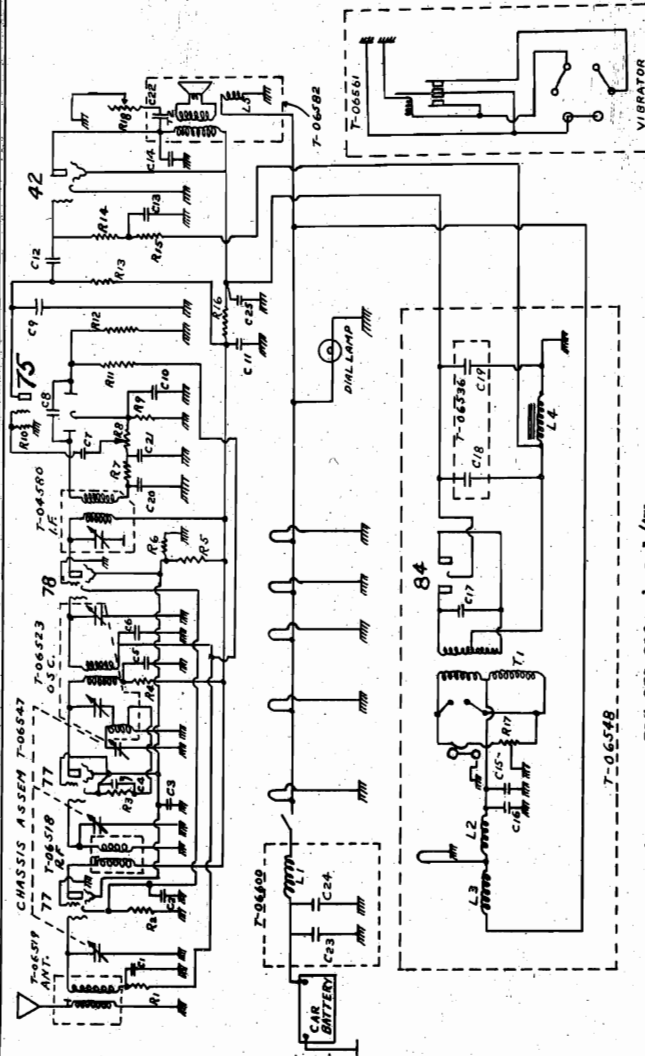


Component	Value
R1	100,000 ohms 1/4 W
R2	500 "
R3	7600 "
R4	2000 "
R5	40,000 "
R6	75,000 "
R7	50,000 "
R8	1/2 meg. Vol. Control
R9	5000 ohms 1/4 W
R10	1 meg. "
R11	1/2 meg. "
R12	100,000 "
R13	250,000 "
R14	250,000 ohms 1/4 W
R15	250,000 ohms 1/4 W
R16	4,000 " 1 W
R17	200 Center tapped
R18	1/2 meg. Tone Control
T1	Power Trans.
T2	Output Trans.
L1	Filter Choke
L2	" "
L3	" "
L4	Power "
L5	Field Coil
C1	.05 mfd. 2 ply
C2	.25 " "
C3	.25 " "
C4	.002 " 4 ply
C5	.05 " 3 ply
C6	.05 " 2 ply
C7	.005 " 3 ply
C8	100 mmfd. mica
C9	.002 mfd. 4 ply
C10	.5 " 2 ply
C11	.005 " 3 ply
C12	.005 " 2 ply
C13	.1 " 2 ply
C14	.005 mfd. 3 ply
C15	.5 " 2 ply
C16	.5 " 2 ply
C17	.02 " 4 ply
C18	6. mfd. "
C19	10. " "
C20	10 mmfd. mica
C21	100 " "
C22	.05 mfd. 3 ply
C23	.001 mica
C24	.5 mfd. 2 ply
C25	.001 mica

Tube	Use	Fil.	Plate	Screen	Cathode	Bias
77	RF	5.5	179	79	2.9	
77	Det. Osc.	5.5	178	79	4.3 to 8.4	
76	IF	5.5	179	79	2.9	
75	2nd Det. AVC	5.5	113			
42	AF	5.5	201	217	1.2	15.0

The above readings were taken from ground or metal of chassis to socket terminals and will vary slightly with different types of voltmeters used.

WESTERN AUTO SUPPLY CO.

MODEL D739
Schematic, Voltage
Socket, Trimmers
Assembly

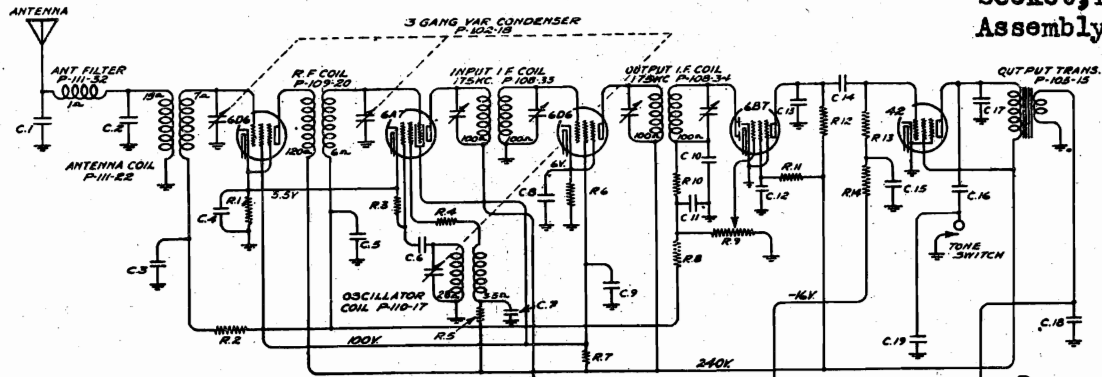


CONDENSERS		RESISTORS	
No.	Value	No.	Value
C.1:-	20 MMF MICA	R.1:-	500
C.2:-	20 MMF MICA	R.2:-	100M
C.3:-	.01x400V.	R.3:-	50M
C.4:-	.1x200V.	R.4:-	3500
C.5:-	.05x200V.	R.5:-	20M
C.6:-	100 MMF MICA	R.6:-	1500
C.7:-	.1x200V.	R.7:-	25M
C.8:-	.1x200V.	R.8:-	500M
C.9:-	.1x200V.	R.9:-	1 Meg. Vol. Control P-101-21
C.10:-	100 MMF MICA	R.10:-	100M
C.11:-	100 MMF MICA	R.11:-	1 MEG.
C.12:-	.1x200V.	R.12:-	250M
C.13:-	100 MMF MICA	R.13:-	301M
C.14:-	.01x400V.	R.14:-	301M
		R.15:-	100
		R.16:-	100
C.15:-	.25x400V.		
C.16:-	.025x400V.		
C.17:-	.015x400V.		
C.18:-	500 MMF MICA		
C.19:-	500 MMF MICA		
C.20:-	500 MMF MICA		
C.21:-	2000 MMF MICA		
C.22:-	.5 MFD.x120V.		
C.23:-	8 MFD.x300V.		
C.24:-	.01x400V.		
C.25:-	.01x1400V.		
C.26:-	8 MFD.x300V.		
C.27:-	.5 MFD.x120V.		




NOTE:
C.4 and C.9 are in one unit P-118-1.
C.7 and C.8 are in one unit P-118-17.
C.26 and C.23 are in one unit P-119-17.
R.16 and R.15 are in one unit P-106-6.
Numbers prefixed by letter "P" are part numbers.
Voltages taken from points indicated to chassis ground. Vol. control on full, no signal.

Serial No. 60001 and up.

IF PEAK 175 KC.

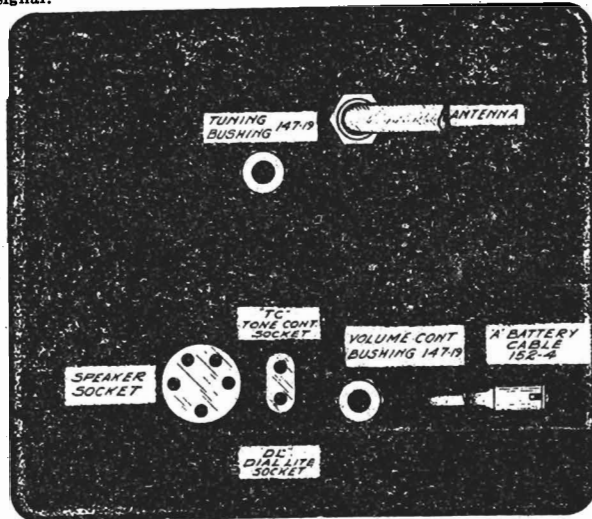

STEERING POST MOUNTING

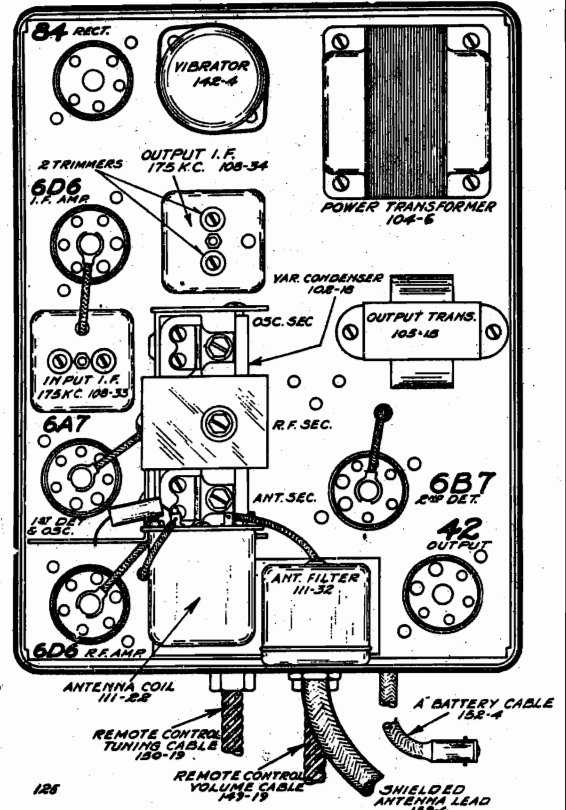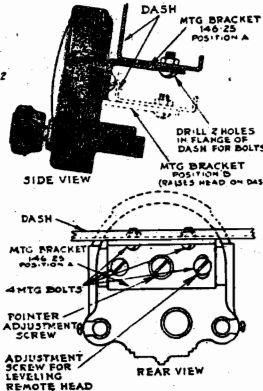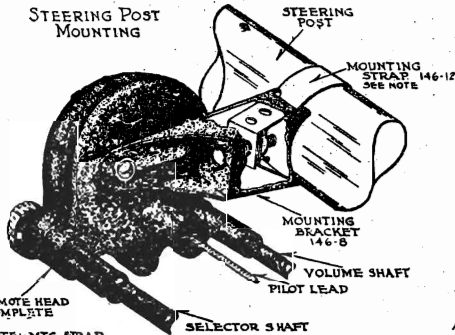

MODEL D739

Alignment, Notes
Parts

WESTERN AUTO SUPPLY CO.

DUMMY ANTENNAS:

The dummy antennas referred to in the following instructions are:
 "I.F. Dummy" —A 1 mfd. condenser connected in series with the test oscillator output lead.
 "Broadcast Dummy"—A 200 mmfd. condenser connected in series with the output lead of the test oscillator.

RESONANCE INDICATOR:

Use as a resonance indicator an output meter connected across the primary of the speaker input transformer, or by means of an adapter between the plate and the screen of the type 42 output tube. Maximum deflection of the meter indicates resonance. Use only enough signal to get a readily readable output. A low range output meter or the low scale of a multi-range meter should be used.

I.F. ALIGNMENT:

1. With variable condenser in its minimum capacity position (plates entirely out of mesh) and with volume control full on, connect test oscillator set at 175 K.C., in series with I.F. dummy antenna, to the grid cap of the type 6A7 tube.
2. Adjust trimmer condensers of both input (108-33) and output (108-34) I.F. transformers to resonance with oscillator. See top view for location of these transformers. There are two adjustments on each and they are accessible from the top of the transformer shield and should be adjusted with an insulated screw driver.

BROADCAST ALIGNMENT:

1. With variable condenser in its minimum capacity position, connect test oscillator set at 1550 K.C. and in series with broadcast dummy, to the antenna lead of receiver.
2. Adjust oscillator trimmer of variable condenser to resonance (this adjustment is on the end section of the three gang condenser—see top view).
3. Shift test oscillator to 1400 K.C. and pick up signal by rotating condenser and adjust R.F. (center) and antenna (front) trimmers to resonance, see top view.

- (a) Check for sensitivity at 1000, 800 and 600 K.C. by setting test oscillator to these frequencies and picking up the signal by rotating variable condenser. Under no circumstances bend plates of oscillator section, bend R.F. and antenna plates only if absolutely necessary.

SERVICE NOTES:

Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt. These voltages are clearly indicated on the circuit diagram.

In order to prevent signal from acting upon A.V.C. and affecting accuracy of voltage measurements, aerial and ground leads should be short circuited while making measurements.

All voltages are to be measured with 6.3 volts input to receiver. Resistances of coils and transformer windings are indicated in ohms on schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

Failure to operate, noisy or weak reception is usually due to defective tubes, the tubes making poor contact with sockets or grid clips making poor contact with the caps of the tubes. Tubes may be checked very easily by replacing with other tubes which are known to be good. If fuse blows out frequently and insulating sleeve has been properly placed over fuse, the trouble is probably in the vibrator, it should be replaced. Do not attempt to make any adjustments on the vibrators.

REPAIR PARTS

Serial No. 60001 and up

When ordering parts, always specify part and model number as well as serial number of chassis.

Part No.	Description	List Price Ea.	Part No.	Description	List Price Ea.
CONDENSERS					
	Unless otherwise listed, all single section tubular paper by-pass condensers	.25	123-1	All Sockets	.10
	Unless otherwise listed, all dual section tubular paper by-pass condensers	.50		Dome Lite Filter	.90
	Unless otherwise listed, all molded mica condensers	.25		Plate Antenna	3.50
119-17	Dial 5 mfd. electrolytic filter condenser	2.25	112-30	Selector Control Shaft	.20
148-1	.5 Mfd. Generator Condenser	.50	112-41	Idler Gear	.15
148-3	.5 Mfd. Ammeter Condenser	.40	112-42	Pointer Shaft	.05
148-5	.5 Mfd. x 120 Volt Condenser	.50	112-85	Volume Control Shaft	.10
148-6	Special Ford Ignition Coil Condenser	.60	112-45	Bezel (Crystal Retainer)	.15
			112-46	Celluloid Dial Crystal	.15
			112-48	Pointer Shaft Gear	.05
			112-96	Celluloid dial	.25
			113-13	6-8 Volt, T-51 Bulb Bayonet Base	.10
105-12	"A" Choke - 28 Turns No. 12 Wire	.10	116-14	6-8 volt, T-51 frosted glass bayonet lamp	.13
105-14	"A" Choke - 37 Turns No. 12 Wire	.10	116-9	Pilot Light Assembly	.45
108-33	Input I.F. Transformer Complete with Shield	1.50	116-11	Tone Control Assembly Unit Complete	.35
108-34	Output I.F. Transformer Complete with Resistors and Condensers, Mounted in Shield	2.50	131-5	Black Bakelite Remote Control Knobs	.15
109-20	R.F. Coil Complete - Less Shield	1.00	146-8	Die Cast Remote Control Mounting Bracket	.30
110-17	Oscillator Coil Complete with Bracket	.75	146-12	Steering Column Strap	.15
111-22	Antenna Coil Complete - Less Shield	1.00	148-25	Dash Mounting Bracket	.15
111-32	Antenna Filter Assembly Complete with Shield and Antenna Cable	1.50	147-3	Selector Control Bushing for 112-39 Shaft	.10
			147-4	Volume Control Bushing for 112-43 Shaft	.10
			149-25	Flexible Volume Control Cable - 24"	1.50
			150-25	Flexible Selector Control Cable - 24"	1.50
			151-7	Remote Control Head complete with Steering Column Bracket	5.00
106-6	Unless otherwise listed, all carbon resistors	.20		Dash Mounting Kit (specify make and year of car)	1.25
168-2	200 Ohm Center Tapped Resistor	.25	151-8	Special General Motors Control Head	7.00
168-3	Distributor Suppressor	.40		Dash Mounting Kits for 1935 Chevrolet and Pontiac for use with 151-8 head	1.50
	Cable Type Suppressor	.40		Dash Mounting Kits for 1935 Oldsmobile for use with 151-8 head	1.75
				Vibrators can be reconditioned at a cost of \$3.00 each, if the old unit is returned.	
				All resistors are RMA color coded - specify value and/or resistor number (per schematic diagram) and model number.	
				When ordering condensers, specify part number, model number and/or capacitor (per schematic diagram) and model number.	
				Mica condensers are coded with an additional dot indicating tolerance:	
				Tolerance Percent	Color of Dot
				2 1/2%	White
				5%	Green
				10%	Blue
				15%	Yellow
				20%	Red
				More Than 20%	None.
				All prices quoted are list and are subject to the usual trade discounts. Shipments are F.O.B. our Factory. When remitting in advance, please include postage.	
				WE CANNOT SUPPLY SPEAKER PARTS CONES, TRANSFORMERS OR FIELDS SEPARATELY. WE CAN REPLACE OR REPAIR A DAMAGED SPEAKER FOR \$2.00 NET. IF IT IS RETURNED TO OUR FACTORY TRANSPORTATION CHARGES PREPAID.	
				PRICES SUBJECT TO CHANGE WITHOUT NOTICE.	
				BRC - CHICAGO	


WESTERN AUTO SUPPLY CO Schematic MODELS S743, D743-W (1935)

Power Output - 3 Watts Maximum
 Sensitivity - 1.5 Microvolts Absolute
 Frequency Range - 530 to 1650 KC
 Speaker - 6 Inch Dynamic
 Power Consumption - 5.75 Amperes at 6 Volts

I.F. 175 KC.

PRICES SUBJECT TO CHANGE WITHOUT NOTICE

April, 1935

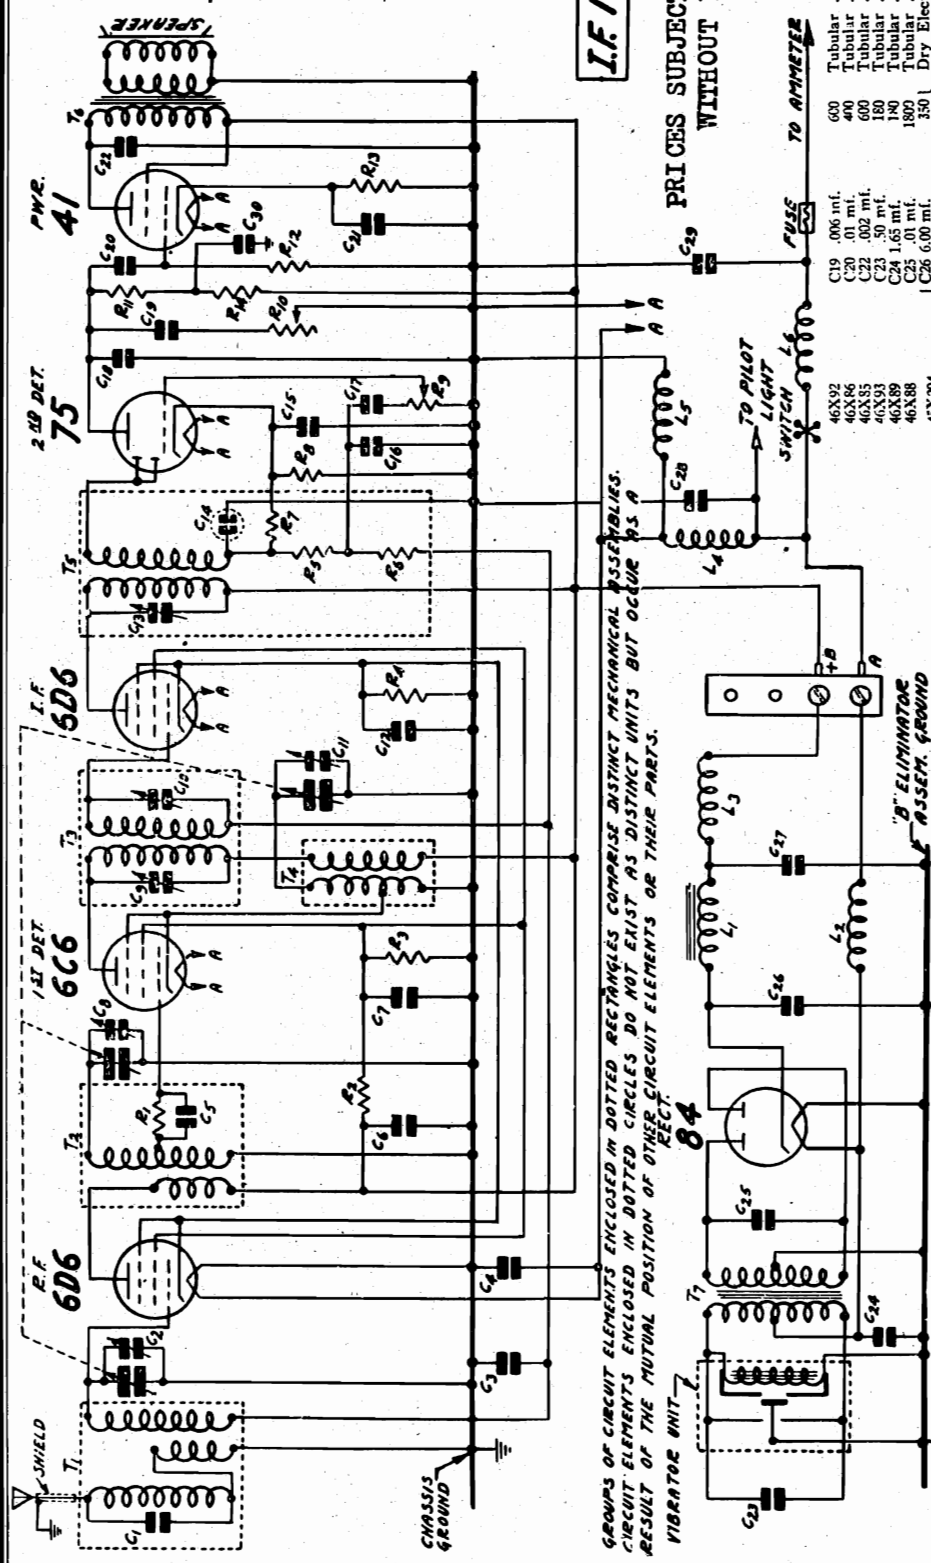

GROUPS OF CIRCUIT ELEMENTS ENCLOSED IN DOTTED RECTANGLES COMPRISE DISTINCT MECHANICAL ASSEMBLIES. CIRCUIT ELEMENTS ENCLOSED IN DOTTED CIRCLES DO NOT EXIST AS DISTINCT UNITS BUT OCCUR AS A RESULT OF THE MUTUAL POSITION OF OTHER CIRCUIT ELEMENTS OR THEIR PARTS.

Code	Description	Old Part No.	New Part No.	List Price
T1	Output Transformer	50632	47X34	.15
T2	Antenna Trimmer-Part of Gang Condenser	180	46X86	.15
T3	1st I.F. Trimmer-Part of Gang Condenser	180	46X85	.15
T4	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T5	1st I.F. Trimmer-Part of Gang Condenser	180	46X89	.15
T6	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T7	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T8	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T9	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T10	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T11	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T12	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T13	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T14	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T15	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T16	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T17	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T18	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T19	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T20	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T21	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T22	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T23	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T24	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T25	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T26	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T27	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T28	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T29	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T30	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T31	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T32	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T33	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T34	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T35	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T36	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T37	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T38	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T39	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T40	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T41	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T42	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T43	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T44	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T45	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T46	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T47	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T48	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T49	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T50	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T51	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T52	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T53	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T54	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T55	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T56	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T57	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T58	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T59	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T60	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T61	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T62	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T63	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T64	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T65	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T66	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T67	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T68	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T69	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T70	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T71	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T72	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T73	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T74	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T75	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T76	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T77	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T78	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T79	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T80	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T81	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T82	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T83	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T84	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T85	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T86	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T87	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T88	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T89	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T90	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T91	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T92	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T93	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T94	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T95	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T96	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T97	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T98	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T99	1st I.F. Trimmer-Part of Gang Condenser	180	46X88	.15
T100	2nd I.F. Trimmer-Part of Gang Condenser	180	46X88	.15

MODELS S743, D743-W (1935)
 Alignment, Voltage, Socket WESTERN AUTO SUPPLY CO.
 Trimmers, Resistance

Remove chassis from case.
 Establish ground connection between chassis and power supply.
 Reconnect A and B wires from power supply to chassis.
 Set the signal generator for a signal of 175 KC.
 Connect the antenna lead of the signal generator thru a .05 mf. condenser to the stator of the 1st detector (middle) section of the tuning condenser. This can be done by pushing a wire or conductor between the stator plates or by extending an insulated wire thru the hole in the shield over the stator and pushing the wire thru the hole in the lug which extends up from the insulated stator assembly.
 Connect the ground lead of the signal generator to the chassis ground.
 Short out the oscillator section of the tuning condenser.
 Set the volume control at the maximum position.
 Attenuate the signal from the signal generator to prevent the levelling off action of the A.V.C.
 Then adjust the three I.F. trimmers until maximum output is obtained. The location of these trimmers are shown in Fig. 2.

1650. KC. Adjustment

Set the signal generator for 1650 KC.
 Turn the rotor of the tuning condenser to the full open position.
 Connect the shielded antenna lead from the chassis through a 250 mmf. condenser to the antenna post of the signal generator.
 For this and all subsequent adjustments keep the volume control at the maximum position and attenuate the signal from the signal generator to prevent A. V. C. action.
 Adjust the trimmer of the oscillator section of the three gang condenser until maximum output is obtained—see Fig. 2 for location of this trimmer.

1400 K C. Adjustment

Set the signal generator for 1400 KC.
 Turn the rotor of the tuning condenser carefully until maximum output is obtained.
 Adjust the 1st detector and antenna trimmers for maximum output.
 Do not change the setting of the oscillator trimmer.

Voltages at Sockets						
Antenna Disconnected - Voltage at Battery 6.1						
Type of Tube	Function	Across Heater	Plate to Ground	Screen to Ground	Cath. to Ground	Normal Plate M.A.
6D6	R. F.	5.8	218	100	5.2	5.8
6C6	1st Det. and Osc.	5.8	218	100		2.0
6D6	I. F.	5.8	218	100	5.2	5.8
75	2nd Det. & 1st A. F.	5.8	160 (1)		1.4	2.8
41	Output	5.8	210	220	16.0	16.0
84	Rectifier	5.8				20.0 per plate

Speaker Field ... 1.15 Amperes "B" Unit 3.98 Amperes
 Chassis 1.50 Amperes Pilot Lamp 0.1 Amperes

(1) Measured on 1000 V. Scale (1000 Ohms. per volt)

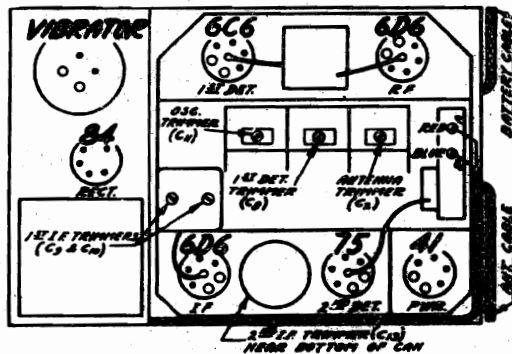


Fig. 2—Tube Arrangement and Trimmers

Adjusting Antenna Trimmer

After the receiver is installed and the car antenna is connected it will be necessary to adjust the antenna trimmer. Tune in a weak signal between 1200 and 1400 KC. with the volume control about three-fourths on. Remove the cover of the chassis case. The antenna trimmer is the trimmer condenser closest to the terminal strip—see Fig. 2. Turn the adjusting screw of this condenser up or down until maximum output is obtained. CAUTION—Do not turn any of the other trimmer adjusting screws for this adjustment.

Calibrating the Receiver

After installing the receiver in the car, it will be necessary to calibrate the control unit. Tune in a station of known frequency at about the center of the dial. At the back of the control unit is a calibration screw—See Fig. 4 in the installation manual enclosed with each receiver. Remove the pilot light assembly.

The calibration screw will be seen at the bottom of the receptacle from which the pilot light assembly is withdrawn. Insert a screwdriver and turn this screw until the pointer on the dial scale is at the frequency of the station being received. The knob must be held during this adjustment.

Voltages At Sockets

On the voltage chart are given the voltages at the sockets with all tubes in and the set in operating condition. The antenna should be disconnected.

The voltages can be read with the chassis in the case, by means of an analyzer plug.

If the chassis unit is taken out of the case all of the socket terminals can easily be reached under the chassis with test prods.

If the chassis is taken out, a jumper wire must be connected from the chassis base to the metal wall of the "B" power unit, in order to complete the ground circuit.

D. C. Resistance of Windings

Following are the D. C. resistances of the various windings in the chassis.

New Part No.	ITEM	Code	D. C. Resistance in Ohms
9A368-6S	Antenna Trans. Primaries in Series	T1	6.3
	Antenna Trans. Secondary	T1	2.5
9A369-6S	R.F. Interstage Trans. Pri.	T2	4.5
	R.F. Interstage Trans. Sec.	T2	
	(Center Tap to inside)		1.8
	(Center Tap to ground)		1.3
9A371-6S	1st I.F. Trans. Primary	T3	58.
9A370-6S	1st I.F. Trans. Secondary	T3	58.
	Oscillator Cathode Coil (Total)	T4	3.
	Oscillator Plate Coil	T4	6.
9A372-6S	2nd I.F. Trans. Primary	T5	46.
	2nd I.F. Trans. Secondary	T5	46.
9A373-6S	Output Trans. Primary	T6	440.
	Output Trans. Sec. and Voice coil in parallel	T6	4
9A372-6S	Power Trans. Primary	T7	3
	Power Trans. Secondary	T7	500.
9A374-6S	Filter Choke	L1	300.
9A268-6S	Filter Choke	L1	300.
9A375-6S	Filter Choke	L1	300.
12A62A	Filter Choke	L1	300.
9A375-6S	Filter Choke	L1	300.
	Motor Noise Choke	L6	Small
	Speaker Field		5.
	Pilot Light Choke Assembly		Small
	R.F. "B" Choke		3.5
	Filament Reactor		Small
	Speaker Field		5.
	Motor Noise Choke		Small


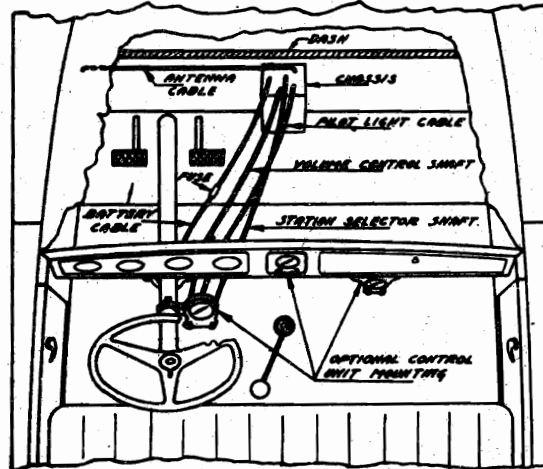


Fig. 1—General Mounting Position

WESTERN AUTO SUPPLY CO.

MODEL D743(1936)
Schematic, Voltage
Socket, Trimmers
Batt. Connections

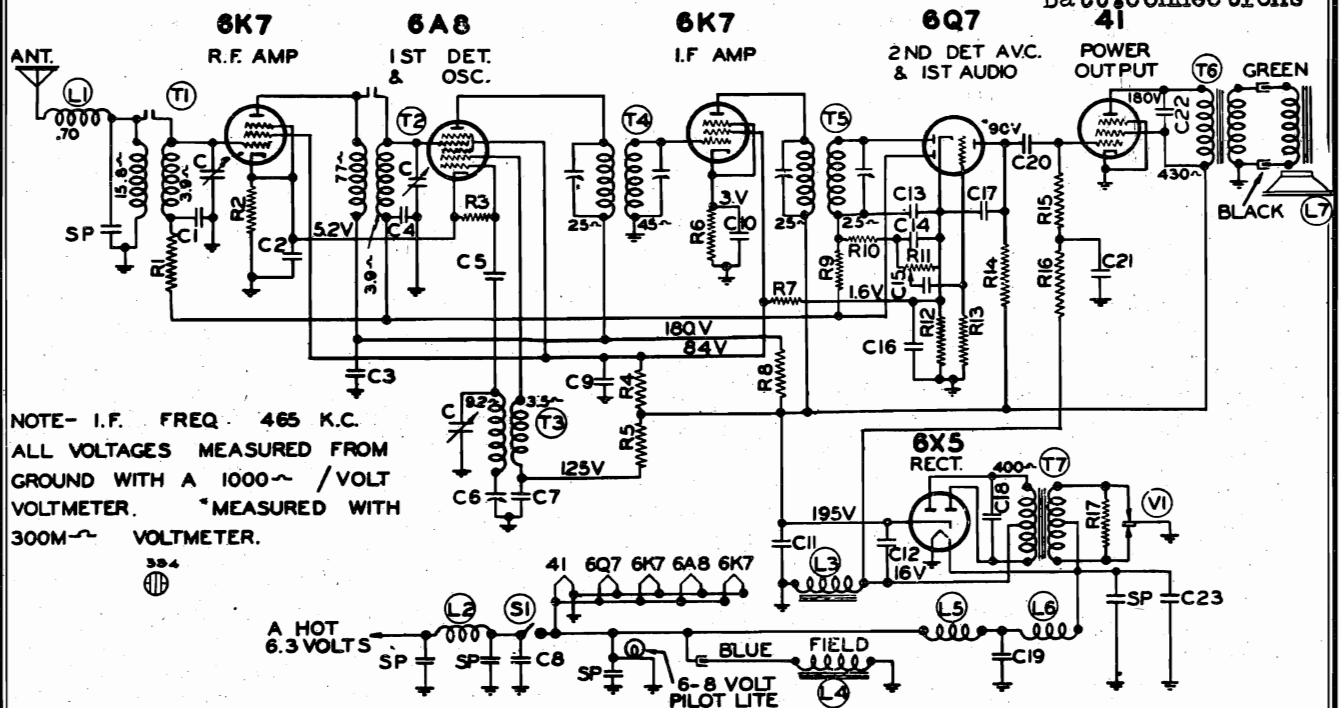

NOTE- I.F. FREQ. 465 K.C.
ALL VOLTAGES MEASURED FROM
GROUND WITH A 1000~ /VOLT
VOLTMETER. *MEASURED WITH
300M~ VOLTMETER.

No. Part No. Description

CONDENSERS		
C	102-26	3 Gang Variable Condenser
C1	100-63	.05 x 200v. 50 - 10%
C2	100-63	.1 x 200v. 50 - 10%
C3	100-13	.05 x 400v. 25%
C4	100-22	.05 x 200v. 25%
C5	129-12	.00025 Mica - 20%
C6	124-37	Series Pad
C7	100-20	.1 x 200 v. 25%
C8	100-31	.5 x 120 v. 10 50%
C9	100-62	.25 x 200 v. 50 - 10%
C10	100-20	.1 x 200 v. 25%
C11	119-37	8 mfd. lytic 300 wv.
C12	119-37	4 mfd. lytic 300 wv.
C13	129-5	.0001 Mica 20%
C14	129-5	.0001 Mica 20%
C15	100-11	.01 x 400 v. 25%
C16	100-11	.01 x 400 v. 25%
C17	129-5	.0001 Mica 20%
C18	100-58	.005 x 1200 v. 20 - 10%
C19	100-31	.5 x 120 v. - 10 50%
C20	100-11	.01 x 400 v. 25%
C21	100-62	.25 x 200 v. 50 - 10%
C22	100-54	.006 x 600 v. 25%
C23	100-31	.5 x 120 v. - 10 50%
SP		Spark Plate


RESISTORS		
R1	130-20	100M - 1/3 w. - 20%
R2	130-54	500 ohm - 1/3 w. - 20%
R3	130-12A	50M ohm - 1/3 w. insulated 20%
R4	130-165	15M ohm - 1 w. - 20%
R5	130-131A	20M ohm - 1/2 w. - insulated -10%
R6	130-24	400 ohm - 1/3 w. - 20%
R7	130-139A	40M ohm - 1/3 w. Insulated -20%
R8	130-31A	1500 ohm - 1/3 w. insulated -20%
R9	130-19	1 megohm - 1/3 w. - 20%
R10	130-52	50M ohm - 1/3 w. - 20%
R11	101-41	500M ohm - Volume Control
R12	130-153	700 ohm - 1/3 w. - 20%
R13	130-19	1 megohm - 1/3 w. - 20%
R14	130-11A	250M - 1/3 w. Insulated - 20%
R15	130-5A	300M ohm - 1/3 w. insulated -20%
R16	130-11A	250M ohm - 1/3 w. insulated -20%
R17	130-84	200 ohm - 1/3 w. insulated - 20%

PARTS		
T1	111-71	Antenna Coil Complete
T2	109-35	R.F. Coil Complete
T3	110-57	Oscillator Coil Complete
T4	108-96B	Input I.F. Complete
T5	108-98	Output I. F. Complete
T6	105-37	Output Transformer
T7	104-82	Power Transformer
L1	111-76	Antenna Filter Choke
L2	105-26	"A" Choke
L3	105-46	"B" Filter Choke, 335 ohm
L4		Speaker Field, 4 ohm
L5	105-24	"A" Choke
L6	105-19	"A" Choke
L7	114-59	Dynamic Speaker
S1		Switch on Volume Control
V1	126-1	Vibrator

CONNECTIONS TO BATTERY

The battery cable, number 107-82, (red wire with fuse receptacle at one end and terminal lug at other end) must be connected to battery terminal of ammeter. At the same time connect ammeter capacitor, number 148-3, to battery terminal of ammeter, other end of condenser to any convenient grounded screw on back of instrument panel. Make certain that insulating sleeve is slipped over fuse when fuse is placed in receptacle, before connecting to short battery cable from receiver.

When connected properly, the discharge due to current drawn by the receiver should not indicate on the ammeter. This is important, since if improperly connected, as shown by the deflection of ammeter, additional motor interference may be encountered.

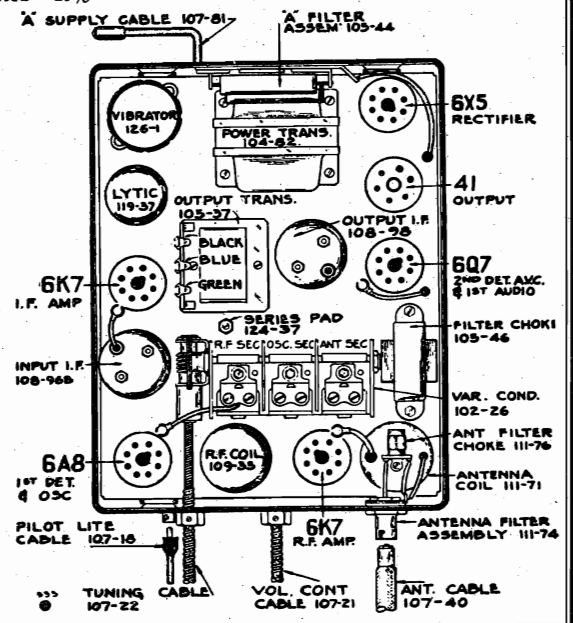

MODEL D743(1936)
Alignment, Notes

WESTERN AUTO SUPPLY CO.

SERVICE NOTES

Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt. These voltages are clearly indicated on the circuit diagram.

In order to prevent signal from acting upon A.V.C. and affecting accuracy of voltage measurements, aerial and ground leads should be short circuited while making measurements.

All voltages are to be measured with 6.3 volts input to receiver. Resistances of coils and transformer windings are indicated in ohms on schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

DESCRIPTION

Model No. 661 is a six-tube superheterodyne receiver having a tuning range of 530 K.C. to 1550 K.C., operates from a 6.0 volt storage battery and uses the automotive type 6.3 volt tubes. The "B" supply is obtained from a vibrator with a tube rectifier.

The I.F. frequency used is 465 K.C., the R.F. end of the receiver consisting of a high gain iron core antenna coil which gives high signal to noise ratio and an R.F. stage especially designed to give high image rejection and high I.F. attenuation. The I.F. transformers are designed to give high gain and selectivity and yet to have a broad nose for ease of tuning and hi-fidelity response. They are of the air core type and wound with solid wire to give minimum drift and variation of gain due to climatic changes.

This receiver has been carefully designed to facilitate servicing, the top and bottom covers are both removable and are fastened in place by spring clips, self tapping screws and trimount buttons.

DUMMY ANTENNAS

The dummy antennas referred to in the following instructions are:

- "I.F. Dummy" —A .5 mfd. condenser connected in series with the test oscillator output lead.
- "Broadcast Dummy"—A 175 mmfd. condenser connected in series with the output lead of the test oscillator.

RESONANCE INDICATOR

Use as a resonance indicator an output meter connected across the primary of the speaker input transformer, or by means of an adapter between the plate and screen terminals of the type 41 output tube. Maximum deflection of the meter indicates resonance. Use only enough signal to get a readily readable output. A low range output meter or the low scale of a multi-range meter should be used.



I.F. ALIGNMENT: (465 K.C.)

1. With variable condenser in its minimum capacity position (plates entirely out of mesh) and with volume control full on, connect test oscillator set at 465 K.C. in series with I.F. dummy antenna, to grid of 6K7 I.F. tube.
2. Adjust trimmer condensers of output I.F. transformer No. 108-98 to resonance with oscillator.
3. Move test oscillator connection to grid of 6A8 tube and adjust trimmer condensers of input I.F. transformer No. 108-96B to resonance with oscillator. See top view for location of these transformers. There are two adjustments on each and they are accessible from the top of the transformer shield and should be adjusted with an insulated screw driver.

BROADCAST ALIGNMENT



1. With variable condenser in its minimum capacity position, connect test oscillator set at 1550 K.C. in series with broadcast dummy to the antenna lead of receiver.
2. Adjust oscillator trimmer of variable condenser to resonance. (This adjustment is on the middle section of the three-gang condenser—see top view, Fig. 2).
3. Shift test oscillator to 1400 K.C. and pick up signal by rotating condenser and adjust R.F. and antenna trimmers to resonance (see top view, Fig. 2).
4. Re-set test oscillator to 600 K.C. and rotate variable condenser to and fro, at the same time adjusting series pad for maximum gain. This adjustment is accessible from the top of chassis—see top view.
5. Go back and check 1400 K.C. If adjustment is made here, check 600 K.C. again.
6. Check for sensitivity at 1000 K.C. by setting test oscillator to this frequency and picking up the signal by rotating variable condenser. Under no circumstances bend plates of variable condenser sections to correct tracking.

WIRING CONNECTIONS AND ASSEMBLY

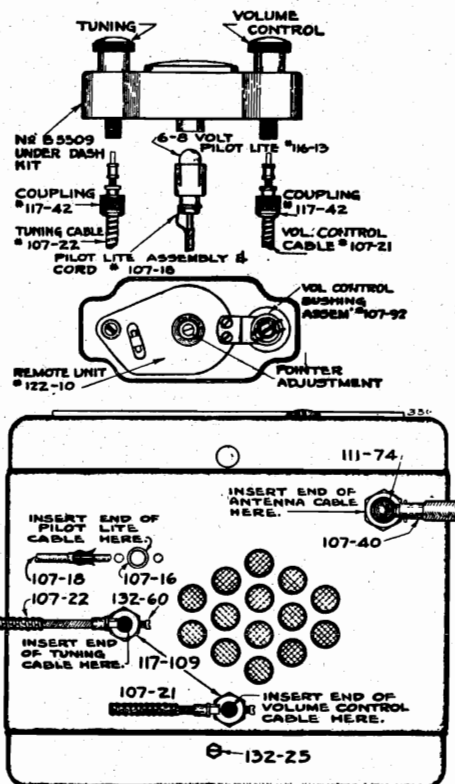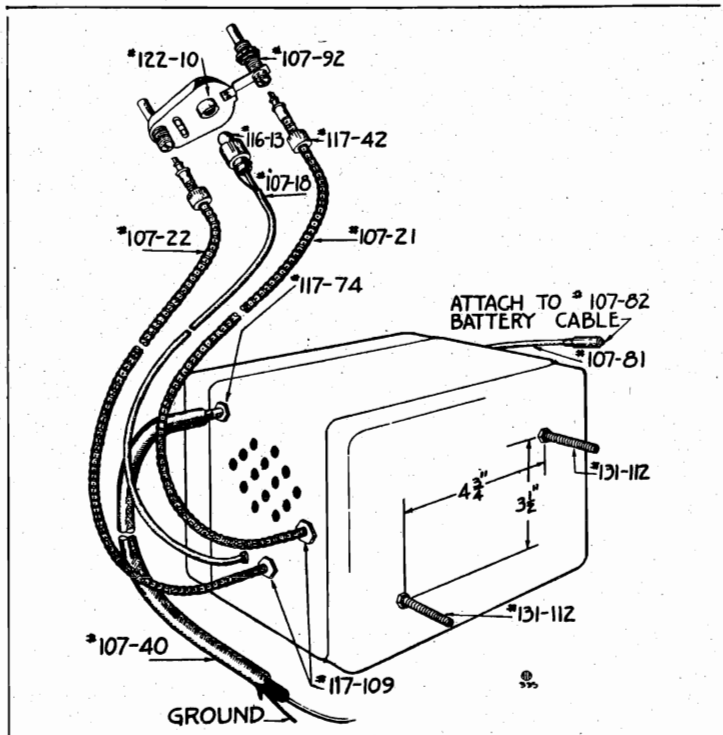

MODEL D744(1936)
Schematic, Voltage
Socket, Trimmers

WESTERN AUTO SUPPLY CO.

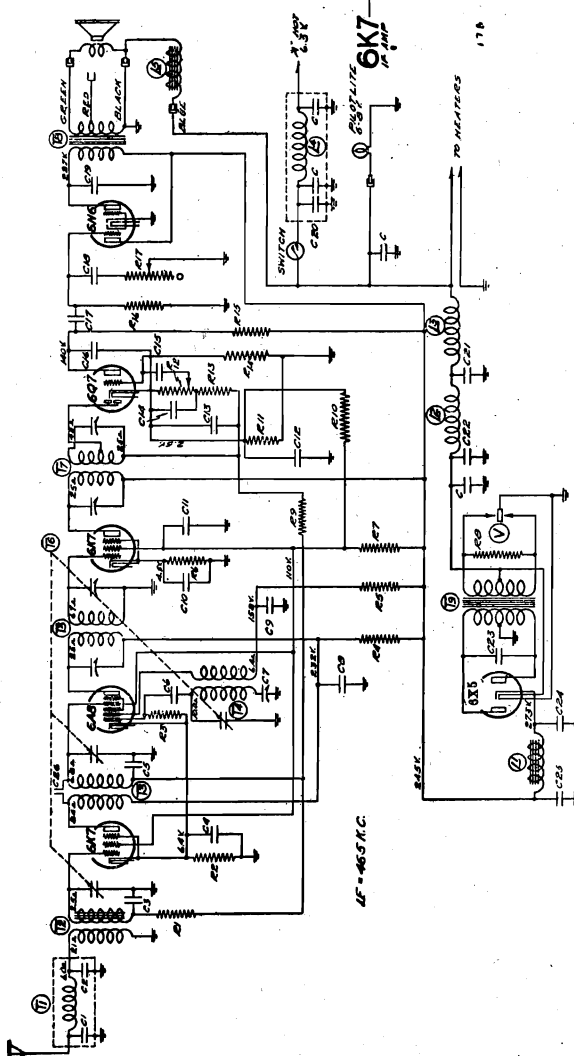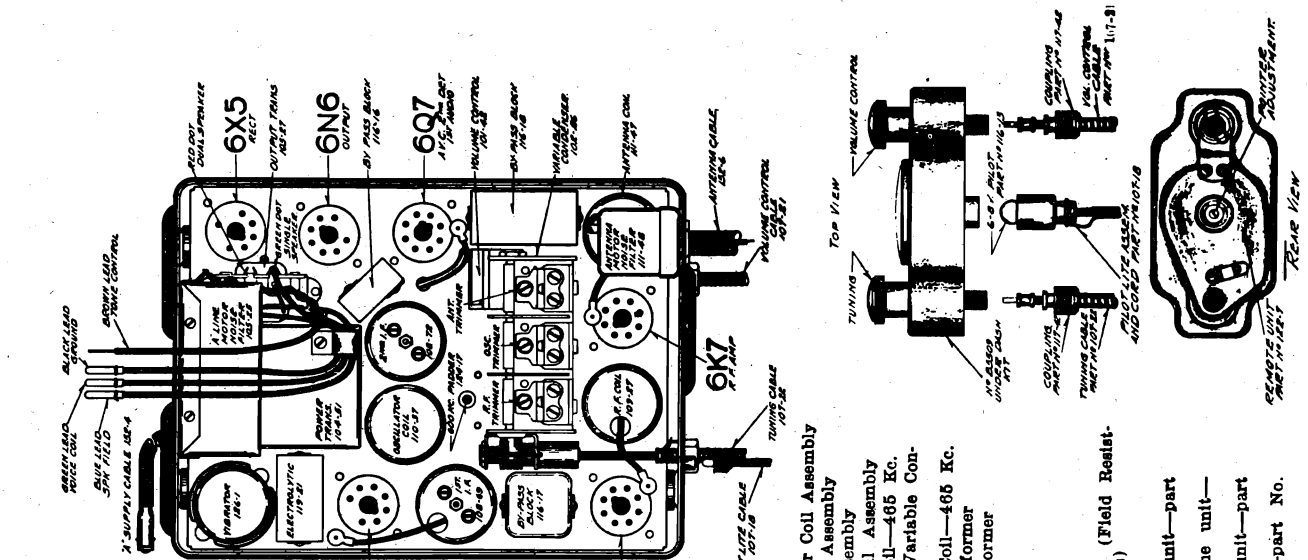

PARTS

T1 111-48 Antenna Filter Coil Assembly
 T2 111-47 Antenna Coil Assembly
 T3 109-27 R.F. Coil Assembly
 T4 110-37 Oscillator Coil Assembly
 T5 108-69 Input I.F. Coil—465 Kc.
 T6 102-26 Three Gang Variable Condenser
 T7 108-72 Output L.F. Coil—466 Kc.
 T8 105-27 Output Transformer
 T9 104-51 Power Transformer
 L1 105-23 Filter Choke
 L2 105-19 "A" Choke
 L3 105-24 "A" Choke
 L4 105-26 "A" Choke
 L5 114-34 5 1/2" Speaker (Field Resistor—4 Ohms)
 V 126-1 Vibrator

C3, C4, C9, C15, in one unit—part No. 116-18.
 C5, C8, C10, C11, in one unit—part No. 116-17.
 C12, C17, C19, in one unit—part No. 116-16.
 C24, C25, in one unit—part No. 119-21.


CONDENSERS

No.	Part No.	Description	RESISTORS
R1	130-20	100M Ohm - 1/4 Watt	C1 129-3 Spark Plugs
R2	130-99	20% - 50 Volt - Carbon	C2 129-49 .00002 Mica - "O" - 20%
R3	130-94	300 Ohm - 1/2 Watt - 20%	C3 116-18 .05 x 200 Volt
R4	130-88	50M Ohm - 1/4 Watt - 10%	C4 116-18 .25 x 200 Volt
R5	130-42	1500 Ohm - 1/4 Watt	C5 116-17 .05 x 200 Volt
R6	130-70	20M Ohm - 1/4 Watt - 20%	C6 129-21 .0002 Mica - MT - "O" - 20%
R7	130-95	10 Volt - Carbon	C7 124-17 Single Padder J-4-S
R8	130-97	12M Ohm - 1/2 Watt - 10%	C8 116-17 .1 x 400 Volt
R9	130-3	200 Ohm - 1/4 Watt - 10%	C9 116-18 .1 x 200 Volt
R10	130-108	500 Ohm - 1/4 Watt - 10%	C10 116-17 .1 x 200 Volt
R11	130-107	10 Volt - Carbon	C11 116-16 .05 x 200 Volt
R12	101-42	20M Ohm - 1/4 Watt - 20%	C12 116-16 .10 x 200 Volt
R13	130-22	5M Ohm - 1/4 Watt - 20%	C13 129-5 .0001 Mica - MT - "O" - 20%
R14	130-68	1 Meg Ohm - 1/4 Watt - 10%	C14 129-2 .0005 Mica - MT - "O" - 20%
R15	130-9	200M Ohm - 1/4 Watt - Carbon	C15 116-18 .02 x 200 Volt
R16	130-3	20% - 20 Volt - Carbon	C16 129-5 .0001 Mica - MT - "O" - 20%
R17	101-45	1 Meg Ohm - Tone Control	C17 116-16 .05 x 400 Volt
			C18 100-37 .003 x 600 Volt - 10%
			C19 116-16 .01 x 800 Volt
			C20 100-35 .5 x 200 Volt - 50% - 10%
			C21 100-35 .5 x 200 Volt - 50% - 10%
			C22 100-35 .5 x 200 Volt - 50% - 10%
			C23 100-36 .01 x 1400 Volt - 10%
			C24 119-21 8.0 mfd. Lytic Cond. 350 Working Volts
			C25 119-21 4.0 mfd. Lytic Cond. 350 Working Volts
			C26 5.0 mfd. Gimmick

MODEL D744(1936)
Alignment, Assembly

WESTERN AUTO SUPPLY CO.

Notes

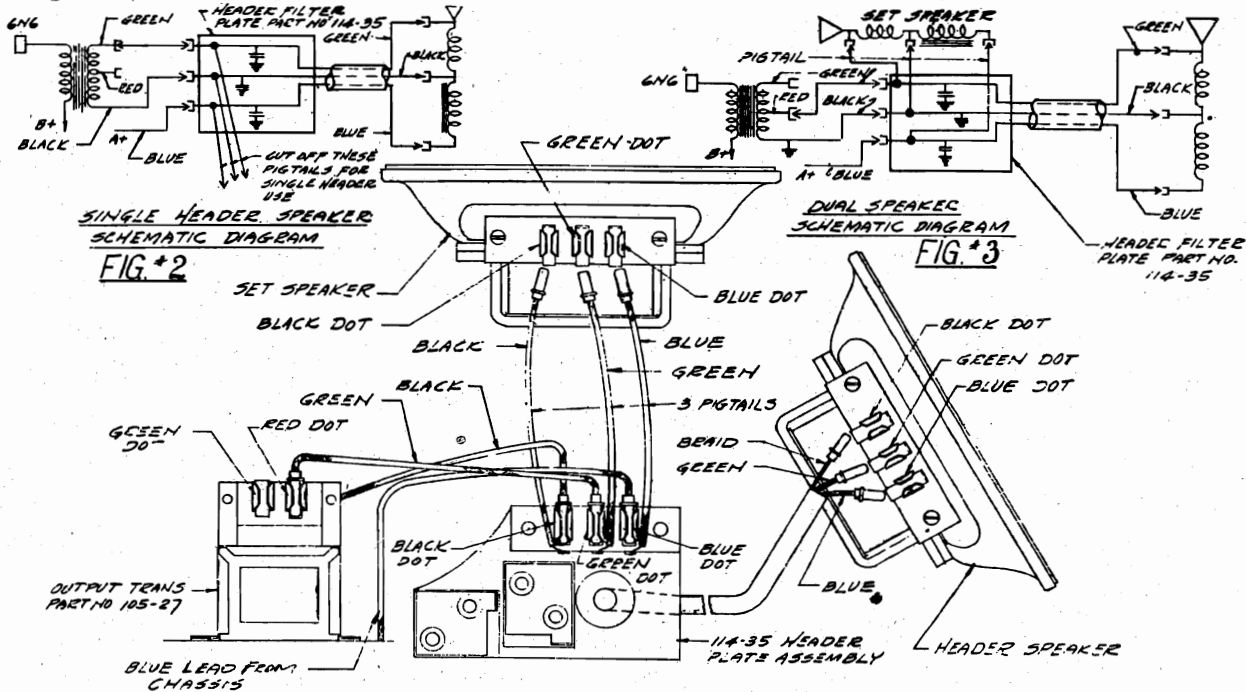

NO SPARK PLUG SUPPRESSORS ARE REQUIRED

DESCRIPTION:

Model No. 666 is a six-tube superheterodyne receiver having a tuning range of 530 K.C. to 1550 K.C., operates on a 6.0 volt storage battery and uses the automotive type 6.3 volt tubes. The "B" supply is obtained from a vibrator with a tube rectifier.

The I.F. frequency used is 165 K.C., the R.F. end of the receiver consisting of a high gain iron core antenna coil which gives high signal to noise ratio and an R.F. stage especially designed to give high image rejection and high I.F. attenuation. The I.F. transformers are designed to give high gain and selectivity and yet to have a broad nose for ease of tuning and hi-fidelity response. They are of the air core type and wound with solid wire to give minimum drift and variation of gain due to climatic changes.

The receiver is so designed that it may be used as either a single or two unit installation. Taps are provided on the output transformer to a pin jack terminal board, a red dot distinguishing dual speaker tap and green dot for single speaker operation.

For complete details see illustration and Header speaker data chart.

Dash kits for the remote control head are available for 1936 cars drilled for dash plates.

This receiver has been carefully designed to facilitate servicing, the top and bottom covers are both removable and are fastened in place by spring clips, self tapping screws and trimmount buttons.

All adjustments are accessible and any part replaceable without removing the chassis from the case.

TUBE COMPLEMENT

- 1—Type No. 6K7—Remote Cut-off Pentode as an R.F. Amplifier
- 1—Type No. 6A8—Pentagrid Converter (composite first detector and oscillator)
- 1—Type No. 6K7—Remote Cut-off Pentode as an I.F. Amplifier (465 K.C.)
- 1—Type No. 6Q7—Duplex Diode Triode Second Detector, A.V.C. and First Audio
- 1—Type No. 6N6—Twin Triode Output Amplifier
- 1—Type No. 6X5—High Vacuum Rectifier

The tube complement consists of the latest "Metal-Glass" tubes which are interchangeable with metal tubes.

Cars with floating power must have the motor bonded to the bulkhead and again to the frame to provide a direct path for the high frequency interference developed in the ignition system. $\frac{5}{8}$ " copper braid will be necessary, SMALL DIAMETER WIRE WILL NOT DO. Bond flexible shaft leads, such as free wheeling, choke wires, etc., which pick up motor noise and reradiate it into the car. Free wheeling cables should be grounded at the point at which they go through the fire wall of the car. In extreme cases it has been found necessary to ground the steering column.

I.F. ALIGNMENT

1. With variable condenser in its minimum capacity position (plates entirely out of mesh) and with volume control full on, connect test oscillator set at 465 K.C. in series with I.F. dummy antenna, to grid of 6K7 I.F. tube.
2. Adjust trimmer condensers of output I.F. transformer No. 108-72 to resonance with oscillator.
3. Move test oscillator connection to grid of 6A8 tube and adjust trimmer condensers of input I.F. transformer No. 108-69 to resonance with oscillator. See top view for location of these transformers. There are two adjustments on each and they are accessible from the top of the transformer shield and should be adjusted with an insulated screw driver.

BROADCAST ALIGNMENT


1. With variable condenser in its minimum capacity position, connect test oscillator set at 1550 K.C. in series with broadcast dummy to the antenna lead of receiver.
2. Adjust oscillator trimmer of variable condenser to resonance. (This adjustment is on the middle section of the three-gang condenser—see top view).
3. Shift test oscillator to 1400 K.C. and pick up signal by rotating condenser and adjust R.F. and antenna trimmers to resonance (see top view).
4. Re-set test oscillator to 600 K.C. and rotate variable condenser to 600 K.C. Adjust series pad rocking gang condenser to and fro at the same time adjusting series pad for maximum gain. This adjustment is accessible from the top of chassis (see top view).
5. Go back and check 1400 K.C. If adjustment is made here, check 600 K.C. again.
6. Check for sensitivity at 1000 K.C. by setting test oscillator to this frequency and picking up the signal by rotating variable condenser. Under no circumstances bend plates of variable condenser sections to correct tracking.

Make certain that the instrument panel has a ground connection to the frame of the car.

NOTE—Where ignition coils are mounted in motor compartments a .5 mfd cond (148-1 or 148-3) connected between primary coil terminal and receiver mounting bolt will often reduce motor noise.

WESTERN AUTO SUPPLY CO.

MODEL D744 (1937)
Schematic, Voltage
Socket, Trimmers
Batt. Connections

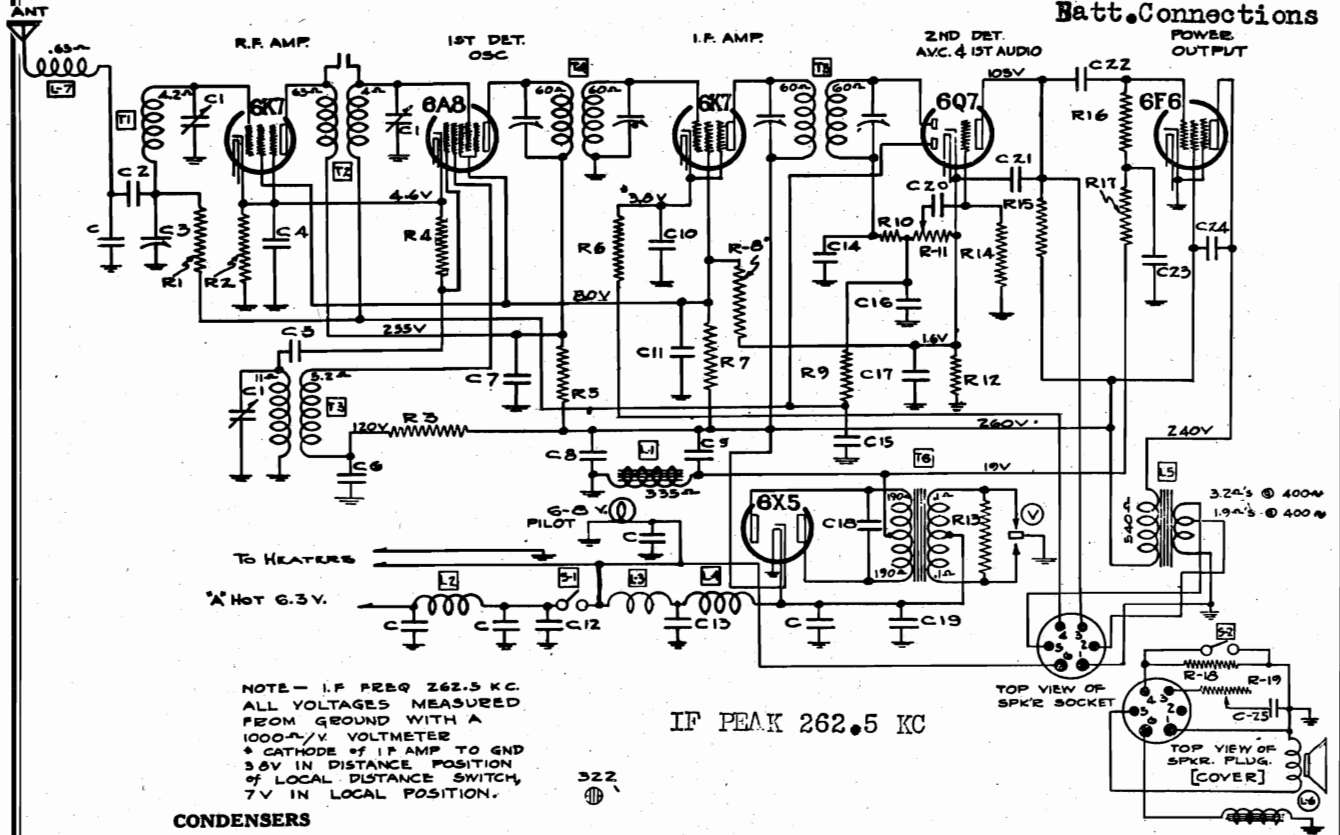

NOTE - I.F. FREQ 262.5 KC
ALL VOLTAGES MEASURED
FROM GROUND WITH A
1000- Ω /V VOLTMETER
* CATHODE OF I.F. AMP TO GND
3.5V IN DISTANCE POSITION
OF LOCAL DISTANCE SWITCH,
7V IN LOCAL POSITION.

IF PEAK 262.5 KC

CONDENSERS

C	Spark Plate
C1	102-45 3 Gang Condenser
C2	129-73 .002 Mica - MW-W - 10%
C3	124-36 Series Pad
C4	116-20 .1 x 200 v. - 20%
C5	129-12 .00025 Mica - MT - 20%
C6	116-19 .1 x 400 - 20%
C7	116-19 .1 x 400 - 20%
C8	119-34 8. mfd. - 350 W v.
C9	119-34 4 mfd. 350 W v.
C10	116-19 .05 x 200 v. - 20%
C11	116-20 .25 x 200 v. - 20%
C12	100-31 .5 x 120 v. - 10-50% - Braid leads
C13	100-31 .5 x 120 v. - 10-50%
C14	129-5 .0001 Ceramicon - 20%
C15	116-19 .05 x 200 v. - 20%
C16	129-5 .0001 Ceramicon - 20%
C17	116-20 .02 x 200 - 20%
C18	100-36 .01 x 1400 v. - 20% - 10% "A"
C19	100-31 .5 x 120 v. - 10% - 50%
C20	116-20 .02 x 200 - 20%
C21	129-5 .0001 Ceramicon - 20%
C22	100-55 .01 x 400 - 25%
C23	100-48 .25 x 200 - 20%
C24	100-54 .006 x 600 - 25%
C25	100-11 .01 x 400 - 25%

C4, C11, C17, C20	All in Block 116-20
C7, C6, C10, C15	All in Block 116-19

RESISTORS

R1	130-141	250M ohm - 1/3 w. Insulated
R2	130-54	500 ohm - 1/3 w.
R3	130-138	50M ohm - 1/2 w. Insulated
R4	130-52	50M ohm - 1/3 w.
R5	130-137	1500 ohm - 1/3 w. Insulated
R6	130-154	1000 ohm - 1/3 w. Insulated
R7	130-143	30M ohm - 1.2 w.
R8	130-139	40M ohm - 1/3 w. Insulated
R9	130-19	1 meg - 1/3 w.
R10	130-162	50M ohm - 1/3 w. Insulated
R11	101-73	250M ohm - Volume Control
R12	130-153	700 ohm - 1/3 w.
R13	130-84	200 ohm - 1/3 w.

R14	130-19	1 meg ohm - 1/3 w.
R15	130-11	250M ohm - 1/3 w.
R16	130-5	300M ohm - 1/3 w.
R17	130-11	250M ohm - 1/3 w.
R18	130-161	4000 ohm - 1/3 w. Insulated
R19	101-45	Tone Control 1 Meg ohm.


PARTS

L7	111-76	Antenna Filter Choke Assem
T1	111-73	Antenna Coil Complete
T2	109-36	R.F. Coil Complete
T3	110-59	Oscillator Coil Complete
T4	108-101	I.F. Input
T5	108-102	I.F. Output
T6	104-83	Power Transformer
L1	105-39	Filter Choke (335 ohms)
L2	105-26	"A" Choke
L3	105-24	"A" Choke
L4	105-19	"A" Choke
L5	105-40	Output transformer
L6	114-62	Speaker. Dynamic
S1		Switch on Volume Control
S2	125-28	Sensitivity switch.

CONNECTIONS TO BATTERY

The battery cable, number 107-82, (red wire with fuse receptacle at one end and terminal lug at other end) must be connected to battery terminal of ammeter. At the same time connect ammeter capacitor, number 148-3, to battery terminal of ammeter, other end of condenser to any convenient grounded screw on back of instrument panel. Make certain that insulating sleeve is slipped over fuse when fuse is placed in receptacle, before connecting to short battery cable from receiver.

When connected properly, the discharge due to current drawn by the receiver should not indicate on the ammeter. This is important, since if improperly connected, as shown by the deflection of ammeter, additional motor interference may be encountered.

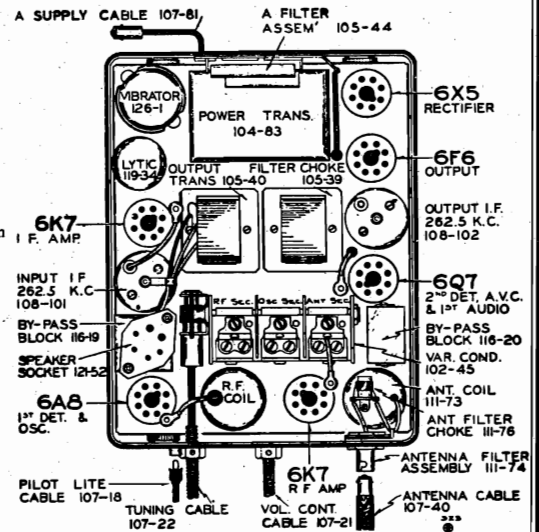

MODEL D744(1937)
Alignment, Notes
SERVICE NOTES

WESTERN AUTO SUPPLY CO.

Assembly

Voltages taken from different points of circuit to chassis are measured with volume control full on, all tubes in their sockets and speaker connected, with a volt meter having a resistance of 1000 ohms per volt. These voltages are clearly indicated on the circuit diagram.

In order to prevent signal from acting upon A.V.C. and affecting accuracy of voltage measurements, aerial and ground leads should be short circuited while making measurements.

All voltages are to be measured with 6.3 volts input to receiver. Resistances of coils and transformer windings are indicated in ohms on schematic circuit diagram.

To check for open by-pass condensers, shunt each condenser with another condenser of the same capacity and voltage rating, which is known to be good, until the defective unit is located.

DESCRIPTION

Model No. 667 is a six-tube superheterodyne receiver having a tuning range of 530 K.C. to 1550 K.C., operates from a 6.0 volt storage battery and uses the automotive type 6.3 volt tubes. The "B" supply is obtained from a vibrator with a tube rectifier.

The I.F. frequency used is 262.5 K.C., the R.F. end of the receiver consisting of a high gain iron core antenna coil which gives high signal to noise ratio and an R.F. stage especially designed to give high image rejection and high I.F. attenuation. The I.F. transformers are designed to give high gain and selectivity and yet to have a broad nose for ease of tuning and hi-fidelity response. They are of the air core type and wound with solid wire to give minimum drift and variation of gain due to climatic changes.

This receiver has been carefully designed to facilitate servicing, the top and bottom covers are both removable and are fastened in place by spring clips, self tapping screws and trimount buttons.

DUMMY ANTENNAS

The dummy antennas referred to in the following instructions are:

- "I.F. Dummy" — A 5 mfd. condenser connected in series with the test oscillator output lead.
- "Broadcast Dummy" — A 175 mmfd. condenser connected in series with the output lead of the test oscillator.

CITY-COUNTRY SWITCH

This switch is located on the chassis cover.

City—While driving in the city or close to broadcasting stations, it is best to turn the knob to the "city" position for least noise.

Country—When driving in the country, or when listening to distant stations, best results are obtained with the knob turned to the "country" position. In this position the sensitivity is at a maximum.

RESONANCE INDICATOR

Use as a resonance indicator an output meter connected across the primary of the speaker input transformer, or by means of an adapter between the plate and screen terminals of the type 6F6 output tube. Maximum deflection of the meter indicates resonance. Use only enough signal to get a readily readable output. A low range output meter or the low scale of a multi-range meter should be used.



I.F. ALIGNMENT: (262.5 K.C.)

1. With variable condenser in its minimum capacity position (plates entirely out of mesh) and with volume control full on, connect test oscillator set at 262.5 K.C. in series with I.F. dummy antenna, to grid of 6K7 I.F. tube.
2. Adjust trimmer condensers of output I.F. transformer No. 108-102 to resonance with oscillator.
3. Move test oscillator connection to grid of 6A8 tube and adjust trimmer condensers of input I.F. transformer No. 108-101 to resonance with oscillator. See top view for location of these transformers. There are two adjustments on each and they are accessible from the top of the transformer shield and should be adjusted with an insulated screw driver.

BROADCAST ALIGNMENT

1. With variable condenser in its minimum capacity position, connect test oscillator set at 1550 K.C. in series with broadcast dummy to the antenna lead of receiver.
2. Adjust oscillator trimmer of variable condenser to resonance. (This adjustment is on the middle section of the three-gang condenser—see top view, Fig. 2).
3. Shift test oscillator to 1400 K.C. and pick up signal by rotating condenser and adjust R.F. and antenna trimmers to resonance (see top view, Fig. 2).
4. Re-set test oscillator to 600 K.C. and rotate variable condenser to 600 K.C. Adjust series pad in the antenna circuit, rocking gang condenser to and fro at the same time adjusting series pad for maximum gain. This pad is mounted on the side of the antenna can.
5. Go back and check 1400 K.C. If adjustment is made here, check 600 K.C. again.
6. Check for sensitivity at 1000 K.C. by setting test oscillator to this frequency and picking up the signal by rotating variable condenser. Under no circumstances bend plates of variable condenser sections to correct tracking.

WIRING CONNECTIONS AND ASSEMBLY



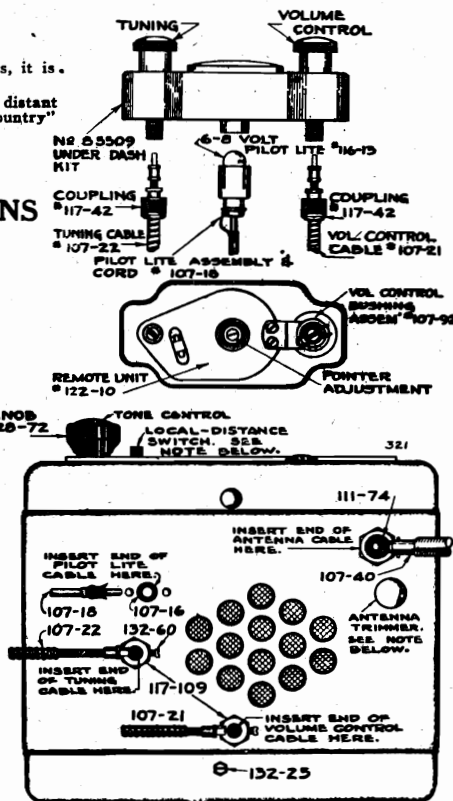
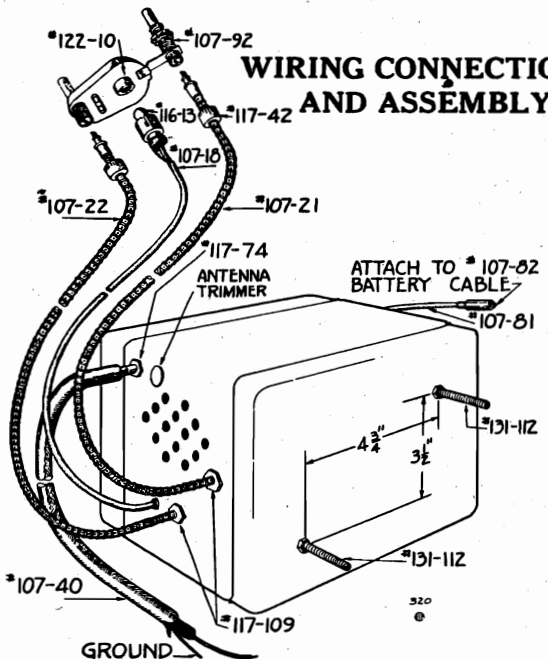


ADJUSTING ANTENNA TRIMMER
 Tune in a weak signal at approximately 600 KC with the volume control about three-fourths on. Turn the adjusting screw of the antenna trimmer up or down until maximum output is obtained. See Fig. 1 for location of this trimmer.

DIAL ADJUSTMENT
 Tune set to some station of a known frequency (between 800 and 1200 K.C.), hold selector knob, then remove pilot light assembly from back of remote head and with a screw driver adjust the slotted screw through this opening and in this way adjust the dial pointer to the correct frequency setting.

WESTERN AUTO SUPPLY CO.

MODEL D745 (1936)
Schematic, Socket
Trimmers, Coils

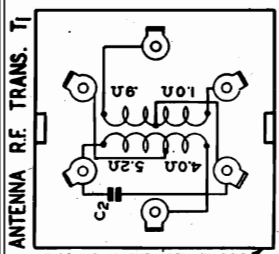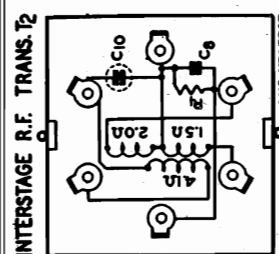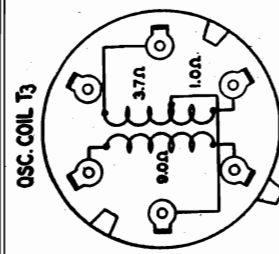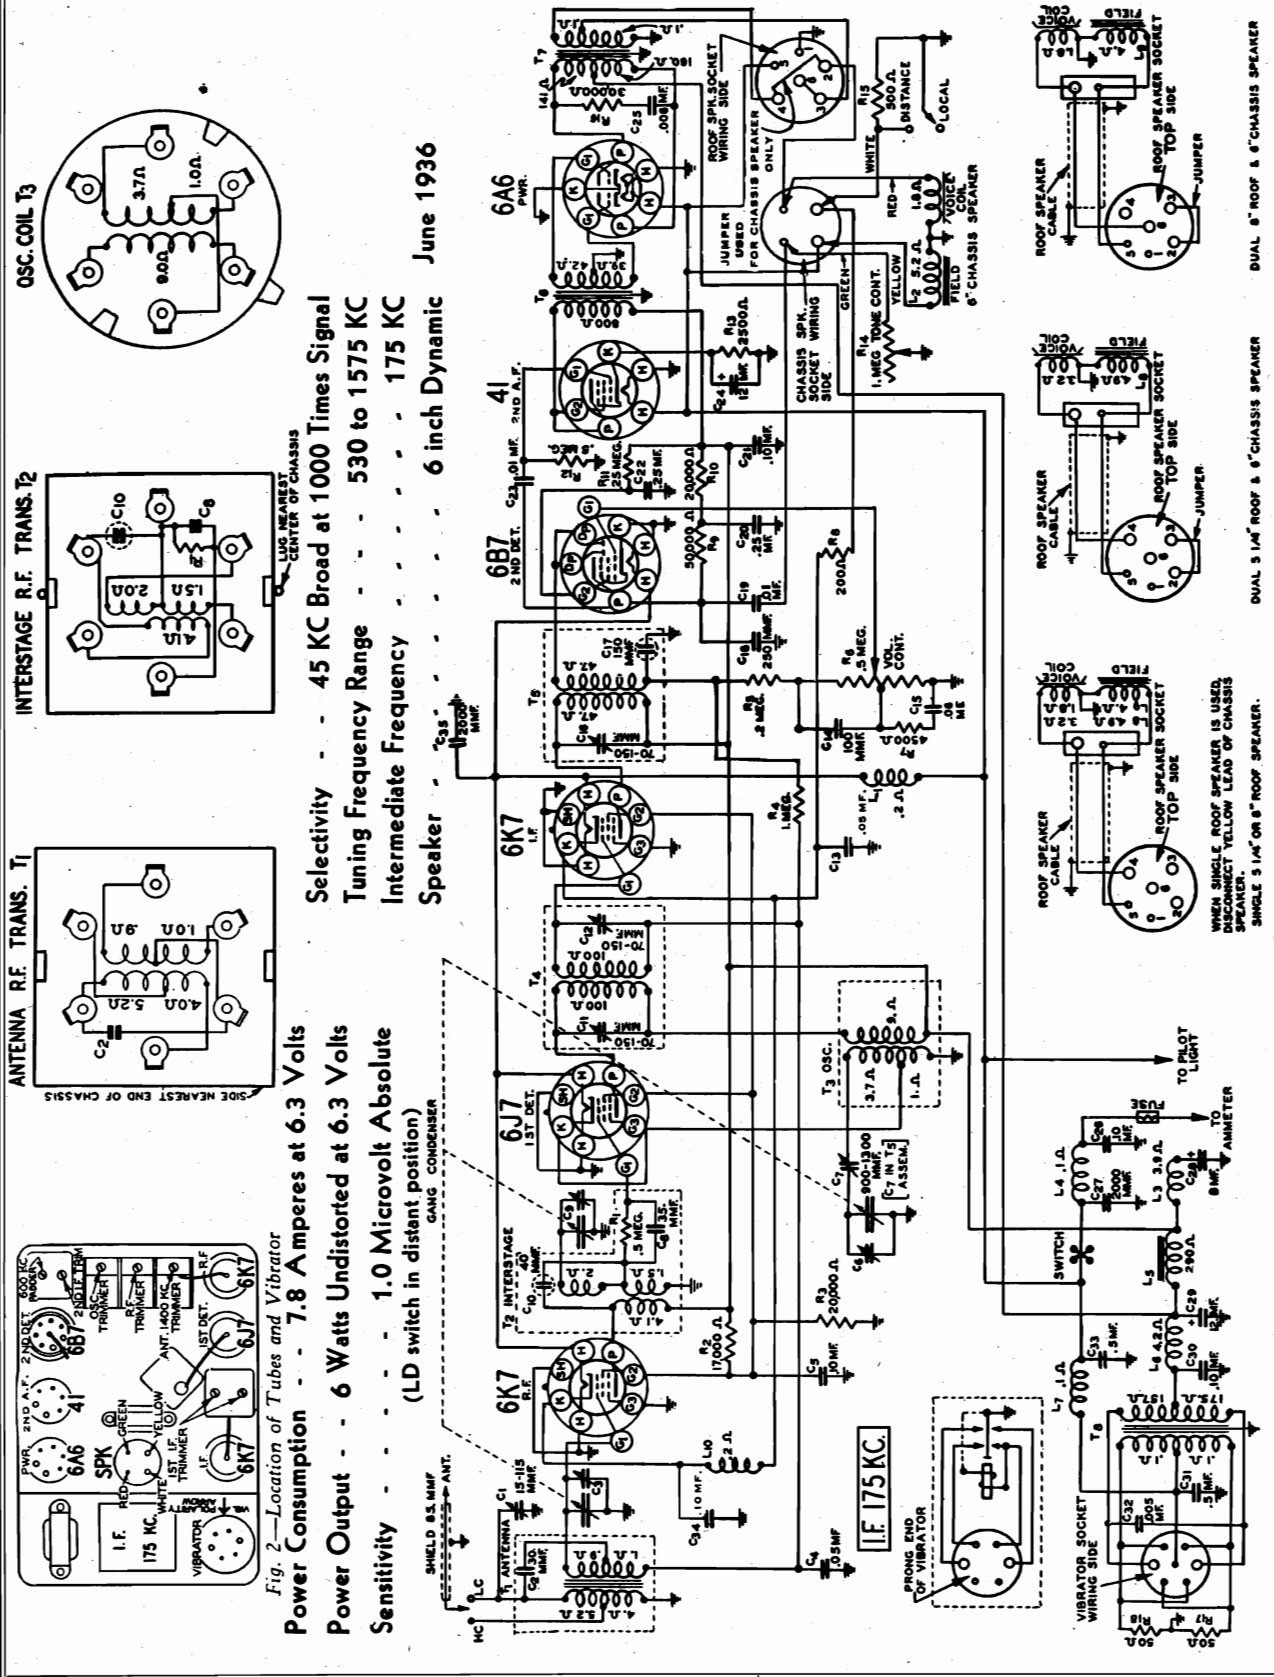

Selectivity - - 45 KC Broad at 1000 Times Signal
Tuning Frequency Range - - 530 to 1575 KC
Intermediate Frequency - - 175 KC
Speaker - - 6 inch Dynamic

Power Consumption - - 7.8 Amperes at 6.3 Volts
Power Output - - 6 Watts Undistorted at 6.3 Volts
Sensitivity - - 1.0 Microvolt Absolute
(LD switch in distant position)



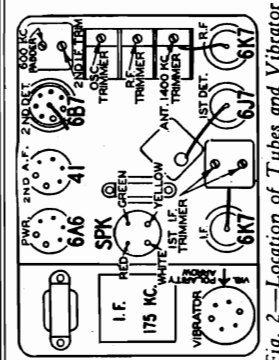



Fig. 2—Location of Tubes and Vibrator

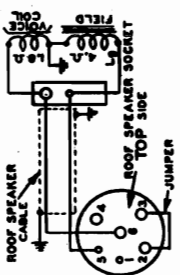

DUAL 8" ROOF & 6" CHASSIS SPEAKER

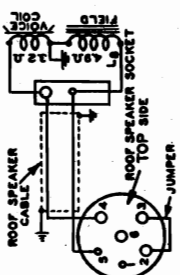

DUAL 5 1/4" ROOF & 6" CHASSIS SPEAKER

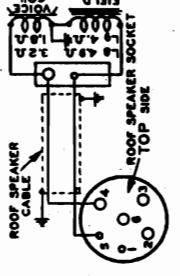

WHEN SINGLE ROOF SPEAKER IS USED, DISCONNECT YELLOW LEAD OF CHASSIS SPEAKER.

MODEL D745 (1936)
Voltage, Alignment
Notes, Parts

WESTERN AUTO SUPPLY CO.


Replacement Parts

There is a large letter on the chassis which identifies the set as to major part changes. When ordering parts please be sure to mention the series number and this large letter.

Part No.	Description	List Price
P-10A32	47 Tube Socket	.15
P-10A33	47 Tube Socket	.15
P-10A34	47 Tube Socket	.15
P-10A35	47 Tube Socket	.15
P-10A36	47 Tube Socket	.15
P-10A37	47 Tube Socket	.15
P-10A38	47 Tube Socket	.15
P-10A39	47 Tube Socket	.15
P-10A40	47 Tube Socket	.15
P-10A41	47 Tube Socket	.15
P-10A42	47 Tube Socket	.15
P-10A43	47 Tube Socket	.15
P-10A44	47 Tube Socket	.15
P-10A45	47 Tube Socket	.15
P-10A46	47 Tube Socket	.15
P-10A47	47 Tube Socket	.15
P-10A48	47 Tube Socket	.15
P-10A49	47 Tube Socket	.15
P-10A50	47 Tube Socket	.15
P-10A51	47 Tube Socket	.15
P-10A52	47 Tube Socket	.15
P-10A53	47 Tube Socket	.15
P-10A54	47 Tube Socket	.15
P-10A55	47 Tube Socket	.15
P-10A56	47 Tube Socket	.15
P-10A57	47 Tube Socket	.15
P-10A58	47 Tube Socket	.15
P-10A59	47 Tube Socket	.15
P-10A60	47 Tube Socket	.15
P-10A61	47 Tube Socket	.15
P-10A62	47 Tube Socket	.15
P-10A63	47 Tube Socket	.15
P-10A64	47 Tube Socket	.15
P-10A65	47 Tube Socket	.15
P-10A66	47 Tube Socket	.15
P-10A67	47 Tube Socket	.15
P-10A68	47 Tube Socket	.15
P-10A69	47 Tube Socket	.15
P-10A70	47 Tube Socket	.15
P-10A71	47 Tube Socket	.15
P-10A72	47 Tube Socket	.15
P-10A73	47 Tube Socket	.15
P-10A74	47 Tube Socket	.15
P-10A75	47 Tube Socket	.15
P-10A76	47 Tube Socket	.15
P-10A77	47 Tube Socket	.15
P-10A78	47 Tube Socket	.15
P-10A79	47 Tube Socket	.15
P-10A80	47 Tube Socket	.15
P-10A81	47 Tube Socket	.15
P-10A82	47 Tube Socket	.15
P-10A83	47 Tube Socket	.15
P-10A84	47 Tube Socket	.15
P-10A85	47 Tube Socket	.15
P-10A86	47 Tube Socket	.15
P-10A87	47 Tube Socket	.15
P-10A88	47 Tube Socket	.15
P-10A89	47 Tube Socket	.15
P-10A90	47 Tube Socket	.15
P-10A91	47 Tube Socket	.15
P-10A92	47 Tube Socket	.15
P-10A93	47 Tube Socket	.15
P-10A94	47 Tube Socket	.15
P-10A95	47 Tube Socket	.15
P-10A96	47 Tube Socket	.15
P-10A97	47 Tube Socket	.15
P-10A98	47 Tube Socket	.15
P-10A99	47 Tube Socket	.15
P-10A00	47 Tube Socket	.15

600 KC Adjustment

Set the signal generator for 600 KC. Connect the output of the signal generator through a .05 mf. condenser to the control grid of the 6K7 R.F. tube. Turn the tuning condenser rotor until maximum output is obtained. Then turn the tuning condenser rotor back and forth, at the same time adjusting the 600-KC padder (see Fig. 2) until the peak of greatest intensity is obtained. Re-connect the output of the signal generator to the shielded antenna lead through a 150 mmf. condenser (15000 mmf. if antenna is high capacity). Adjust the 600 KC antenna trimmer to maximum. This trimmer is reached from the outside of the case.

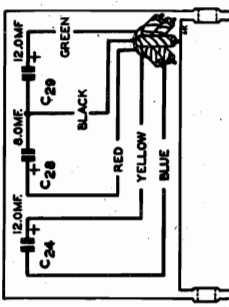

Adjusting Antenna 600 KC Trimmer
After the receiver is installed and the car antenna is connected, it will be necessary to adjust the antenna trimmer. Tune in a weak signal at approximately 600 KC with the volume control about three-fourths on. Turn the adjusting screw of the antenna 600 KC trimmer up or down until maximum output is obtained. See Fig. 3 for location of this trimmer. As shown in this illustration, the antenna plug is inserted in one of two ways, depending on whether the car has a high or low capacity antenna. Full instructions are in the installation manual packed with each radio.

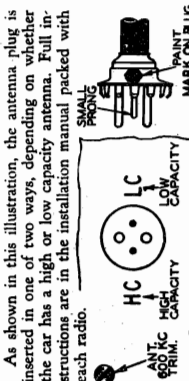


Fig. 3—Antenna Plug Insertion

Calibrating the Radio
To calibrate the radio, tune in a station of known frequency. At the back of the control head is the calibration screw. Remove the pilot lamp assembly. Insert a fine blade screwdriver and turn this screw until the pointer on the dial scale is at the frequency of the station being received. The knob must be held during this adjustment. If the control head is inaccessible it may be calibrated by setting the pointer from the front. Remove the crystal by inserting a knife blade under the lower edge. Loosen the pointer screw, set the pointer and retighten.

6 Tube Synchronous Vibrator Automobile Radio

VOLTAGES AT SOCKETS		L-D Switch in Distinct Position	
Antenna Plug Withdrawn			
Type of Tube	Function	Plate to Ground	Cathode to Ground
6K7	R.F.	5.6	260
6I7	1st Det.	5.6	260
6K7	I.F.	5.6	260
6B7	2nd Det.	5.6	55
41	2nd A.F.	5.7	255
6A6	Pwr.	5.7	275

I. F. Adjustment
Set the signal generator for a signal of 175 KC. Connect the output of the signal generator through a .05 mf. condenser to the anode of the R.F. inter-stage section of the tuning condenser. (See Fig. 2 for location of this section.) Connect the ground lead of the signal generator to the chassis ground. Turn the Local Distance switch to the Distance position and keep it in this position for all adjustments.

Set the volume control at the maximum position. Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC. Then adjust the three I.F. trimmers until maximum output is obtained. The location of these trimmers is shown in Fig. 2.

1575 KC Adjustment
Set the signal generator for 1575 KC. Turn the rotor of the tuning condenser to the full open position.

If a low capacity antenna is used, connect the shielded antenna lead from the chassis through a 150 mmf. condenser to the antenna post of the signal generator. (If high capacity, use 1500 mmf.) The antenna plug must be correctly inserted, dependent on the capacity of the antenna used.

For this and all subsequent adjustments keep the volume control at the maximum position and attenuate the signal from the signal generator to prevent AVC action. Adjust the trimmer of the oscillator section of the three gang condenser until maximum output is obtained—see Fig. 2 for location of this trimmer.

1400 KC Adjustment
Set the signal generator for 1400 KC. Turn the rotor of the tuning condenser carefully until maximum output is obtained.

Adjust the R.F. interstage and antenna 1400 KC trimmers for maximum output. Do not change the setting of the oscillator trimmer.


Part No.	Description	List Price
P-10A32	Vibrator Unit	1.10
P-10A33	Chassis Case Only	1.10
P-10A34	Spring Clamp Bar	.10
P-10A35	Spring Clamp Bar	.10
P-10A36	Local Distance Switch	.10
P-10A37	Local Distance Switch Knob	.10
P-10A38	Local Distance Switch Knob	.10
P-10A39	Local Distance Switch Knob	.10
P-10A40	Local Distance Switch Knob	.10
P-10A41	Local Distance Switch Knob	.10
P-10A42	Local Distance Switch Knob	.10
P-10A43	Local Distance Switch Knob	.10
P-10A44	Local Distance Switch Knob	.10
P-10A45	Local Distance Switch Knob	.10
P-10A46	Local Distance Switch Knob	.10
P-10A47	Local Distance Switch Knob	.10
P-10A48	Local Distance Switch Knob	.10
P-10A49	Local Distance Switch Knob	.10
P-10A50	Local Distance Switch Knob	.10
P-10A51	Local Distance Switch Knob	.10
P-10A52	Local Distance Switch Knob	.10
P-10A53	Local Distance Switch Knob	.10
P-10A54	Local Distance Switch Knob	.10
P-10A55	Local Distance Switch Knob	.10
P-10A56	Local Distance Switch Knob	.10
P-10A57	Local Distance Switch Knob	.10
P-10A58	Local Distance Switch Knob	.10
P-10A59	Local Distance Switch Knob	.10
P-10A60	Local Distance Switch Knob	.10
P-10A61	Local Distance Switch Knob	.10
P-10A62	Local Distance Switch Knob	.10
P-10A63	Local Distance Switch Knob	.10
P-10A64	Local Distance Switch Knob	.10
P-10A65	Local Distance Switch Knob	.10
P-10A66	Local Distance Switch Knob	.10
P-10A67	Local Distance Switch Knob	.10
P-10A68	Local Distance Switch Knob	.10
P-10A69	Local Distance Switch Knob	.10
P-10A70	Local Distance Switch Knob	.10
P-10A71	Local Distance Switch Knob	.10
P-10A72	Local Distance Switch Knob	.10
P-10A73	Local Distance Switch Knob	.10
P-10A74	Local Distance Switch Knob	.10
P-10A75	Local Distance Switch Knob	.10
P-10A76	Local Distance Switch Knob	.10
P-10A77	Local Distance Switch Knob	.10
P-10A78	Local Distance Switch Knob	.10
P-10A79	Local Distance Switch Knob	.10
P-10A80	Local Distance Switch Knob	.10
P-10A81	Local Distance Switch Knob	.10
P-10A82	Local Distance Switch Knob	.10
P-10A83	Local Distance Switch Knob	.10
P-10A84	Local Distance Switch Knob	.10
P-10A85	Local Distance Switch Knob	.10
P-10A86	Local Distance Switch Knob	.10
P-10A87	Local Distance Switch Knob	.10
P-10A88	Local Distance Switch Knob	.10
P-10A89	Local Distance Switch Knob	.10
P-10A90	Local Distance Switch Knob	.10
P-10A91	Local Distance Switch Knob	.10
P-10A92	Local Distance Switch Knob	.10
P-10A93	Local Distance Switch Knob	.10
P-10A94	Local Distance Switch Knob	.10
P-10A95	Local Distance Switch Knob	.10
P-10A96	Local Distance Switch Knob	.10
P-10A97	Local Distance Switch Knob	.10
P-10A98	Local Distance Switch Knob	.10
P-10A99	Local Distance Switch Knob	.10
P-10A00	Local Distance Switch Knob	.10

Part No.	Description	List Price
P-10A32	Vibrator Unit	1.10
P-10A33	Chassis Case Only	1.10
P-10A34	Spring Clamp Bar	.10
P-10A35	Spring Clamp Bar	.10
P-10A36	Local Distance Switch	.10
P-10A37	Local Distance Switch Knob	.10
P-10A38	Local Distance Switch Knob	.10
P-10A39	Local Distance Switch Knob	.10
P-10A40	Local Distance Switch Knob	.10
P-10A41	Local Distance Switch Knob	.10
P-10A42	Local Distance Switch Knob	.10
P-10A43	Local Distance Switch Knob	.10
P-10A44	Local Distance Switch Knob	.10
P-10A45	Local Distance Switch Knob	.10
P-10A46	Local Distance Switch Knob	.10
P-10A47	Local Distance Switch Knob	.10
P-10A48	Local Distance Switch Knob	.10
P-10A49	Local Distance Switch Knob	.10
P-10A50	Local Distance Switch Knob	.10
P-10A51	Local Distance Switch Knob	.10
P-10A52	Local Distance Switch Knob	.10
P-10A53	Local Distance Switch Knob	.10
P-10A54	Local Distance Switch Knob	.10
P-10A55	Local Distance Switch Knob	.10
P-10A56	Local Distance Switch Knob	.10
P-10A57	Local Distance Switch Knob	.10
P-10A58	Local Distance Switch Knob	.10
P-10A59	Local Distance Switch Knob	.10
P-10A60	Local Distance Switch Knob	.10
P-10A61	Local Distance Switch Knob	.10
P-10A62	Local Distance Switch Knob	.10
P-10A63	Local Distance Switch Knob	.10
P-10A64	Local Distance Switch Knob	.10
P-10A65	Local Distance Switch Knob	.10
P-10A66	Local Distance Switch Knob	.10
P-10A67	Local Distance Switch Knob	.10
P-10A68	Local Distance Switch Knob	.10
P-10A69	Local Distance Switch Knob	.10
P-10A70	Local Distance Switch Knob	.10
P-10A71	Local Distance Switch Knob	.10
P-10A72	Local Distance Switch Knob	.10
P-10A73	Local Distance Switch Knob	.10
P-10A74	Local Distance Switch Knob	.10
P-10A75	Local Distance Switch Knob	.10
P-10A76	Local Distance Switch Knob	.10
P-10A77	Local Distance Switch Knob	.10
P-10A78	Local Distance Switch Knob	.10
P-10A79	Local Distance Switch Knob	.10
P-10A80	Local Distance Switch Knob	.10
P-10A81	Local Distance Switch Knob	.10
P-10A82	Local Distance Switch Knob	.10
P-10A83	Local Distance Switch Knob	.10
P-10A84	Local Distance Switch Knob	.10
P-10A85	Local Distance Switch Knob	.10
P-10A86	Local Distance Switch Knob	.10
P-10A87	Local Distance Switch Knob	.10
P-10A88	Local Distance Switch Knob	.10
P-10A89	Local Distance Switch Knob	.10
P-10A90	Local Distance Switch Knob	.10
P-10A91	Local Distance Switch Knob	.10
P-10A92	Local Distance Switch Knob	.10
P-10A93	Local Distance Switch Knob	.10
P-10A94	Local Distance Switch Knob	.10
P-10A95	Local Distance Switch Knob	.10
P-10A96	Local Distance Switch Knob	.10
P-10A97	Local Distance Switch Knob	.10
P-10A98	Local Distance Switch Knob	.10
P-10A99	Local Distance Switch Knob	.10
P-10A00	Local Distance Switch Knob	.10

Part No.	Description	List Price
P-10A32	Vibrator Unit	1.10
P-10A33	Chassis Case Only	1.10
P-10A34	Spring Clamp Bar	.10
P-10A35	Spring Clamp Bar	.10
P-10A36	Local Distance Switch	.10
P-10A37	Local Distance Switch Knob	.10
P-10A38	Local Distance Switch Knob	.10
P-10A39	Local Distance Switch Knob	.10
P-10A40	Local Distance Switch Knob	.10
P-10A41	Local Distance Switch Knob	.10
P-10A42	Local Distance Switch Knob	.10
P-10A43	Local Distance Switch Knob	.10
P-10A44	Local Distance Switch Knob	.10
P-10A45	Local Distance Switch Knob	.10
P-10A46	Local Distance Switch Knob	.10
P-10A47	Local Distance Switch Knob	.10
P-10A48	Local Distance Switch Knob	.10
P-10A49	Local Distance Switch Knob	.10
P-10A50	Local Distance Switch Knob	.10
P-10A51	Local Distance Switch Knob	.10
P-10A52	Local Distance Switch Knob	.10
P-10A53	Local Distance Switch Knob	.10
P-10A54	Local Distance Switch Knob	.10
P-10A55	Local Distance Switch Knob	.10
P-10A56	Local Distance Switch Knob	.10
P-10A57	Local Distance Switch Knob	.10
P-10A58	Local Distance Switch Knob	.10
P-10A59	Local Distance Switch Knob	.10
P-10A60	Local Distance Switch Knob	.10
P-10A61	Local Distance Switch Knob	.10
P-10A62	Local Distance Switch Knob	.10
P-10A63	Local Distance Switch Knob	.10
P-10A64	Local Distance Switch Knob	.10
P-10A65	Local Distance Switch Knob	.10
P-10A66	Local Distance Switch Knob	.10
P-10A67	Local Distance Switch Knob	.10
P-10A68	Local Distance Switch Knob	.10
P-10A69	Local Distance Switch Knob	.10
P-10A70	Local Distance Switch Knob	.10
P-10A71	Local Distance Switch Knob	.10
P-10A72	Local Distance Switch Knob	.10
P-10A73	Local Distance Switch Knob	.10
P-10A74	Local Distance Switch Knob	.10
P-10A75	Local Distance Switch Knob	.10
P-10A76	Local Distance Switch Knob	.10
P-10A77	Local Distance Switch Knob	.10
P-10A78	Local Distance Switch Knob	.10
P-10A79	Local Distance Switch Knob	.10
P-10A80	Local Distance Switch Knob	.10
P-10A81	Local Distance Switch Knob	.10
P-10A82	Local Distance Switch Knob	.10
P-10A83	Local Distance Switch Knob	.10
P-10A84	Local Distance Switch Knob	.10
P-10A85	Local Distance Switch Knob	.10
P-10A86	Local Distance Switch Knob	.10
P-10A87	Local Distance Switch Knob	.10
P-10A88	Local Distance Switch Knob	.10
P-10A89	Local Distance Switch Knob	.10
P-10A90		

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR120
Schematic, Voltage

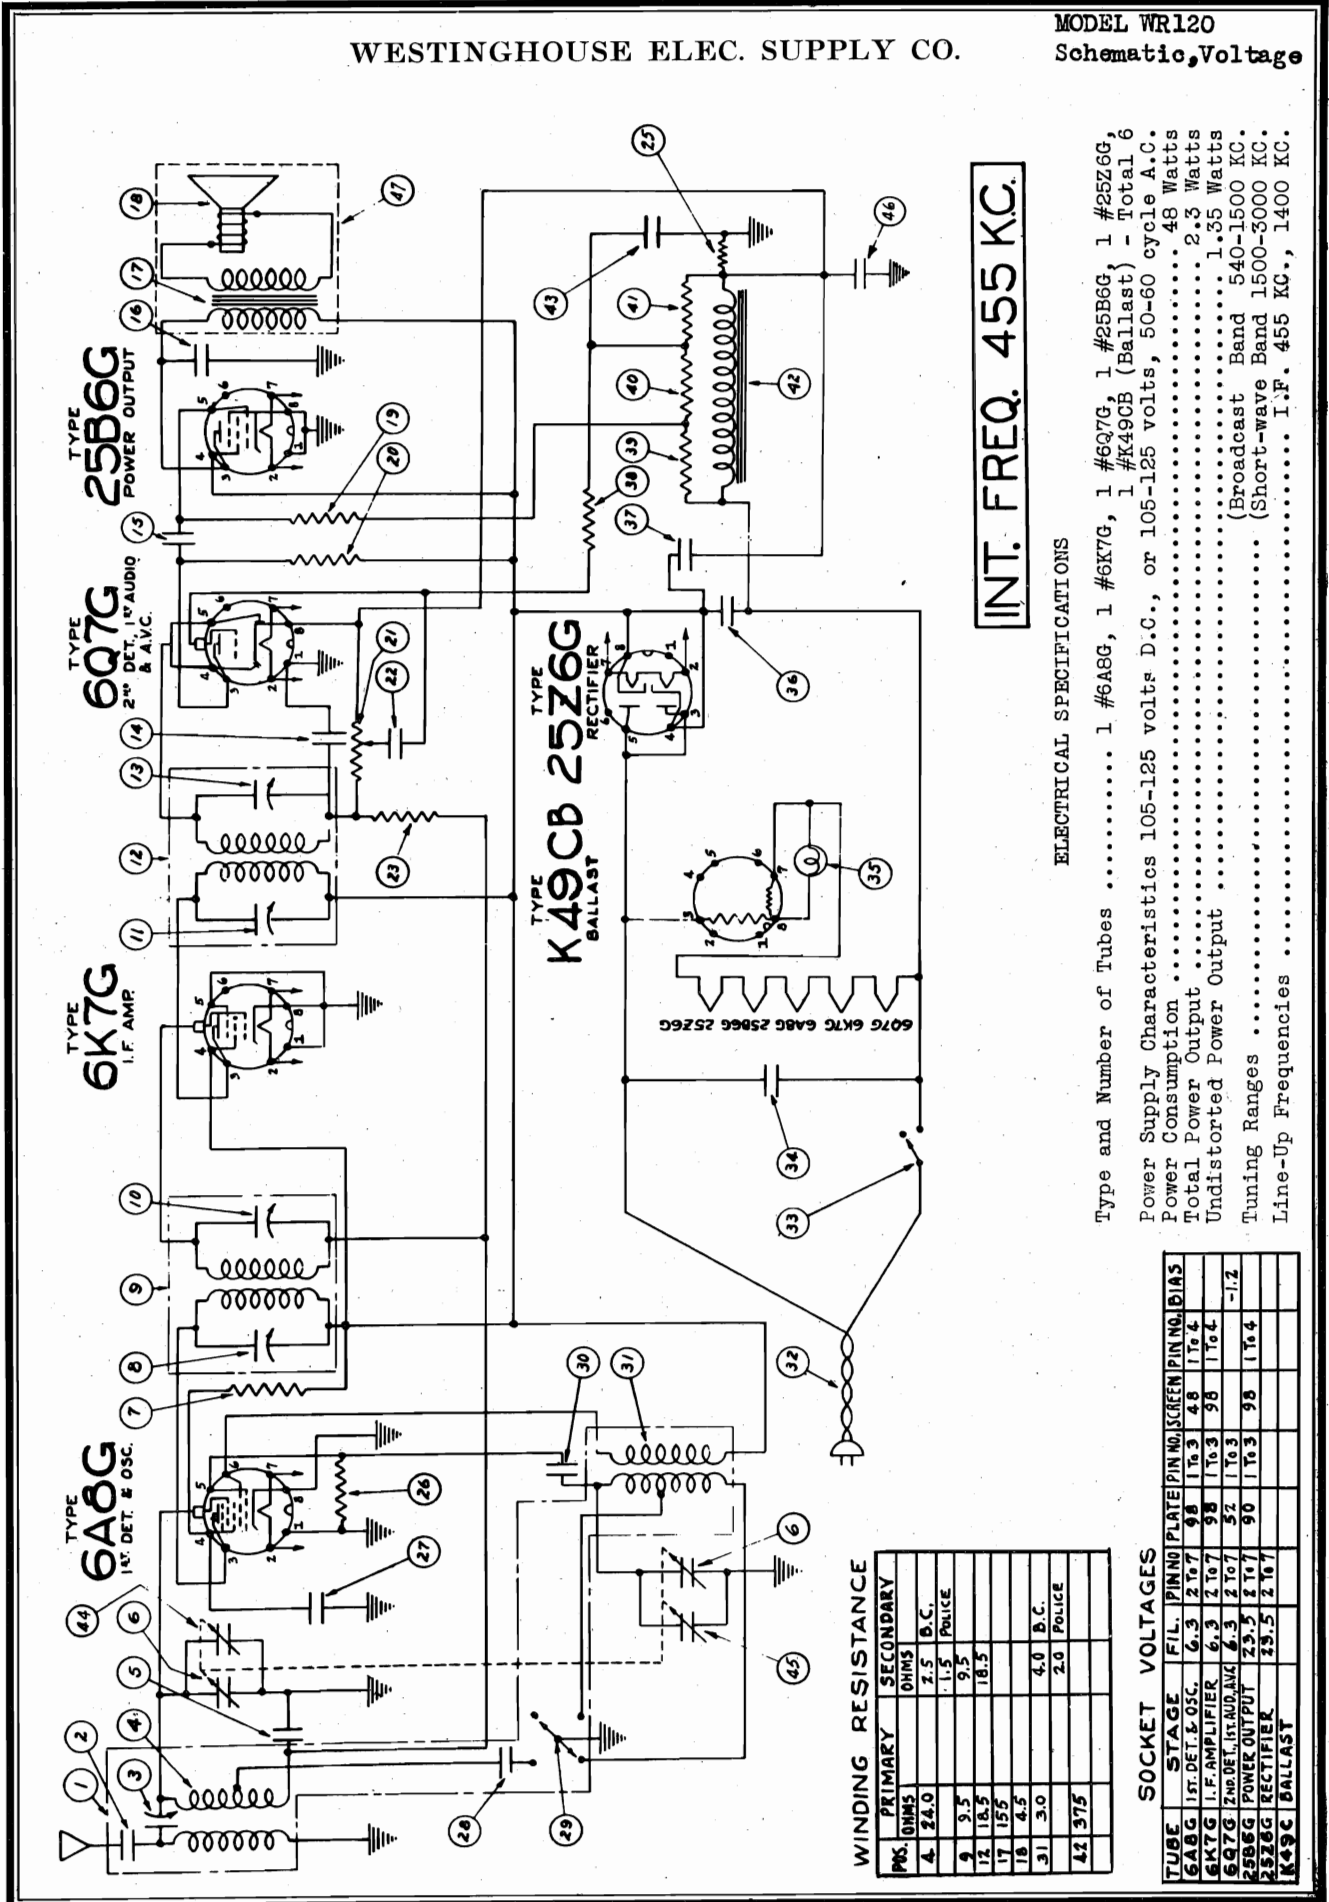

INT. FREQ. 455 KC.

ELECTRICAL SPECIFICATIONS

Type and Number of Tubes 1 #6A8G, 1 #6K7G, 1 #6Q7G, 1 #25B6G, 1 #25Z6G,
1 #K49CB (Ballast) - Total 6
Power Supply Characteristics 105-125 volts D.C., or 105-125 volts, 50-60 cycle A.C.
Power Consumption 48 Watts
Total Power Output 2.3 Watts
Undistorted Power Output 1.35 Watts
(Broadcast Band 540-1500 KC.
(Short-wave Band 1500-3000 KC.
Line-Up Frequencies I.F. 455 KC., 1400 KC.

WINDING RESISTANCE

PKS.	PRIMARY	SECONDARY
4	24.0	2.5 D.C.
9	9.5	1.5 POLICE
12	18.5	9.5
17	15.5	18.5
18	4.5	4.0 D.C.
31	3.0	2.0 POLICE
42	37.5	

SOCKET VOLTAGES

TUBE	STAGE	FIL.	PIPING	PLATE	PIV	SCREEN	PIV	NO. BIAS
6A8G	1st. DET. & OSC.	6.3	2 7 7	98	110.3	48	110.4	
6K7G	I.F. AMPLIFIER	6.3	2 10 7	98	110.3	98	110.4	-1.2
6Q7G	2nd DET. 1st AUDIO & A.V.C.	6.3	2 10 7	52	110.3			
25B6G	POWER OUTPUT	25.5	2 11 7	90	110.3	98	110.4	
25Z6G	RECTIFIER	25.5	2 16 7					
K49CB	BALLAST							

MODEL WR120

Alignment, Parts

WESTINGHOUSE ELEC. SUPPLY CO.

GENERAL DESCRIPTION

This model is a five-tube (plus a ballast tube), two-band superheterodyne receiver, designed to operate over the standard broadcast band, extending from 540 to 1500 KC., and a short-wave band extending from 1500 to 3000 KC.

The receiver uses a type 6A8G tube as a first detector-oscillator, a type 6K7G as an I.F. amplifier, a type 6Q7G as a second detector, A.V.C., and first audio, a type 25B6G as an output, a type 25Z6G as a rectifier and a K49CB as a ballast tube.

LINE-UP CAPACITOR ADJUSTMENTS

To properly align the circuits of this receiver, it is essential to use a high grade modulated test oscillator, the output of which can be continuously varied and reduced sufficiently to prevent overload as the individual circuits of the receiver are brought into alignment. A conventional output meter should be connected across the terminals of the speaker voice coil to indicate when the individual circuits are correctly aligned. The sensitivity of the meter must be sufficient to give satisfactory reading with low input signals.

Before attempting to align the receiver, the service man should familiarize himself with the general layout of the chassis, location of the various tubes and alignment condensers.

ALIGNMENT OF I.F. (455 KC.)

1. Set the volume control to maximum position and wave-change switch to standard broadcast band.

2. Connect the output meter across the voice coil terminals of the speaker.

3. Set the test oscillator to 455 KC., and adjust its output to produce a measurable reading on the output meter when the test signal is applied to the grid of the type 6A8G first detector-oscillator tube through a 0.5 mfd. blocking condenser.

4. Adjust the four trimmer condensers on the top of the two I.F. coils (square housings) to maximum output.

ALIGNMENT OF OSCILLATOR AND R.F.

1. Check the pointer setting to be sure that it is exactly horizontal when the tuning condenser is completely closed.

2. Set the test oscillator and dial indicator to 1400 KC., and adjust the oscillator trimmer condenser (rear section of gang) to maximum output.

3. Apply the test signal to coil end of the antenna cable through a .0001 mfd. blocking condenser and adjust trimmer condenser (front section of gang) to maximum output.

4. Check sensitivity over the band.

5. Turn wave-change switch to the short-wave band and check the sensitivity over scale.

TRAP ALIGNMENT

This receiver is provided with a tuned trap which can be adjusted from the bottom without removing the receiver from the cabinet. This trimmer does not need to be adjusted unless there is code interference, in which case, adjustment is made to eliminate the undesired signal.

SERVICE PARTS LIST

Dia. #	Part #	Description of Parts	List Price
1	RC 95298	Composite coil	\$ 2.35
2	CW 6-005	.005 mfd., 600 V. condenser	.15
3		Trimmer condenser - part of RC 95298	
4		Preselector coil - part of RC 95298	
5	SA 105327	.05 mfd., 200 V. dual condenser	.30
6	CG 9562	Variable condenser	3.00
7	RE 3333	33,000 ohm, 1/2 W. resistor	.10
8		Trimmer condenser - 80-200 mmf. - part of IC 95107	
9	IC 95107	1st I.F. coil - 455 KC.	1.50
10		Trimmer condenser - 80-200 mmf. - part of IC 95107	
11		Trimmer condenser - 35-130 mmf. - part of IC 95108	
12	IC 95108	2nd I.F. coil - 455 KC.	1.20
13		Trimmer condenser - 35-130 mmf. - part of IC 95108	
14	CM 956	.0025 mfd. mica condenser	.20
15	CW 6-005	.005 mfd., 600 V. condenser	.15
16	CW 6-005	.005 mfd., 600 V. condenser	.15
17	TR 9588	Output transformer	1.35
18	DM 9512	Diaphragm and coil assembly	1.50
19	RE 4743	470,000 ohm, 1/2 W. resistor	.10
20	RE 2243	220,000 ohm, 1/2 W. resistor	.10
21	VR 9549	Volume control	.80
22	CW 6-005	.005 mfd., 600 V. condenser	.15
23	RE 4743	470,000 ohm, 1/2 W. resistor	.10
25	RE 1003	10 ohm, 1/2 W. resistor	.10
26	RE 4733	47,000 ohm, 1/2 W. resistor	.10
27		.05 mfd., 200 V. dual condenser - part of SA 105327	
28	CW 6-005	.005 mfd., 600 V. condenser	.15
29	SW 9576	Wave-change switch	.35
30	CM 9513	.0001 mfd. mica condenser	.10
31		Oscillator coil assembly - part of RC 95298	
32	CB 9512	Line cable	.50
33		On-off switch - part of VR 9549	
34	CW 4-05	.05 mfd., 400 V. condenser	.15
35	LP 951	Dial lamp - 6-8 V.	.20
36	CE 9559	40 mfd., 150 V. electrolytic condenser	.75
37	CE 9560	30 mfd., 150 V. electrolytic condenser	.75
38	RE 4743	470,000 ohm, 1/2 W. resistor	.10
39	RE 4743	470,000 ohm, 1/2 W. resistor	.10
40	RE 4743	470,000 ohm, 1/2 W. resistor	.10
41	RE 6833	68,000 ohm, 1/2 W. resistor	.10
42		Field coil - part of SK 9567	
43	CW 2-25	.25 mfd., 200 V. condenser	.20
44		Trimmer condenser - part of CG 9562	
45		Trimmer condenser - part of CG 9562	
46	CW 2-10	.1 mfd., 200 V. condenser	.15
47	SK 9567	Speaker	4.00

MISCELLANEOUS

Part #	Description of Parts	List Price
CV 95229	Celluloid cover for dial	.35
DS 9589	Celluloid dial scale	.70
FA 9519	Silk grill cloth	.15
FP 101869	Felt foot (4 used)	.05
IS 95216	Rubber pulley on drive shaft	.05
KA 9583	Cabinet	
KL 105344	"Hank" antenna cable	.20
KN 95127	Knob (3 used)	.12
NT 958	3/8" Pal nut for volume and switch	.05
PL 95112	Dial supporting plate	.25
PR 97160	Cord for dial drive	Per Yard
PU 9529	Dial drive pulley assembly	.25
SI 9571	Dial indicator pointer	.20
SP 9551	Spring for dial drive cord	.05
SP 9553	Spring clip for celluloid dial cover	.05
SO 956	Octal base tube socket (6 used)	.20
SO 9529	Dial light socket assembly	.15
TU 95170	Insulation tube for electrolytic condenser	.05

PRICES SUBJECT TO CHANGE WITHOUT NOTICE

MODEL WR140

Alignment, Parts


WESTINGHOUSE ELEC. SUPPLY CO.

PARTS LIST		Part #	Description of Parts	List Price
1	RC	95296	.00005 mfd. mica condenser - part of RC 95296	\$.15
2	RC	95296	Trimmer condenser 100-200 mmf. - part of RC 95296	\$.15
3	RC	95296	Trap coil assembly	1.25
4	RC	95356	Presselector coil assembly	1.60
5	CG	9565	Trimmer condenser 4-25 mmf. - part of RC 95356	3.75
6	IC	95109	1st I.F. coil - 455 KC.	1.20
7	IC	95110	Trimmer condenser - part of IC 95109	1.20
8	IC	95110	2nd I.F. coil - 455 KC.	1.20
9	IC	95110	Trimmer condenser - part of IC 95110	1.20
10	RE	1083	1 meg. 1/2 W. resistor	.10
11	RE	2243	220,000 ohm, 1/2 W. resistor	.10
12	RE	4745	.005 mfd., 600 V. condenser	.15
13	RE	4745	470,000 ohm, 1/2 W. resistor	.10
14	RE	4745	.01 mfd., 400 V. condenser	.15
15	RE	4745	.1 mfd., 200 V. condenser	.15
16	TR	9588	Output transformer	2.00
17	DM	9537	Speaker diaphragm	1.75
18	SK	9596	Speaker	.55
19	SK	9595	Tone control	.15
20	CV	6-001	.001 mfd., 600 V. condenser	.15
21	VR	9547	Volume control - .5 meg.	.80
22	CV	6-005	.005 mfd., 600 V. condenser	.15
23	RE	4733	47,000 ohm, 1/2 W. resistor	.10
24	RE	1083	1 meg. 1/2 W. resistor	.10
25	CV	9513	100 mmf. mica condenser	.10
26	CV	9513	.1 mfd., 200 V. condenser	.15
27	CV	9513	.1 mfd., 200 V. condenser	.15
28	CV	9513	.1 mfd., 200 V. condenser	.15
29	CV	9513	.1 mfd., 200 V. condenser	.15
30	CV	9513	.1 mfd., 200 V. condenser	.15
31	CV	9513	.1 mfd., 200 V. condenser	.15
32	CV	9513	.1 mfd., 200 V. condenser	.15
33	CV	9513	.1 mfd., 200 V. condenser	.15
34	CV	9513	.1 mfd., 200 V. condenser	.15
35	CV	9513	.1 mfd., 200 V. condenser	.15
36	CV	9513	.1 mfd., 200 V. condenser	.15
37	SW	9574	Wave-change switch	.70
38	SW	9574	Trimmer condenser 4-35 mmf. - part of RC 95301	.15
39	CV	2-10	1 mfd., 200 V. condenser	.15
40	CV	2-10	1 mfd., 200 V. condenser	.15
41	CV	2-10	1 mfd., 200 V. condenser	.15
42	CV	2-10	1 mfd., 200 V. condenser	.15
43	CV	2-10	1 mfd., 200 V. condenser	.15
44	CV	2-10	1 mfd., 200 V. condenser	.15
45	CV	2-10	1 mfd., 200 V. condenser	.15
46	CV	2-10	1 mfd., 200 V. condenser	.15
47	CV	2-10	1 mfd., 200 V. condenser	.15
48	CV	2-10	1 mfd., 200 V. condenser	.15
49	CV	2-10	1 mfd., 200 V. condenser	.15
50	CV	2-10	1 mfd., 200 V. condenser	.15
51	CV	2-10	1 mfd., 200 V. condenser	.15
52	CV	2-10	1 mfd., 200 V. condenser	.15
53	CV	2-10	1 mfd., 200 V. condenser	.15
54	CV	2-10	1 mfd., 200 V. condenser	.15
55	CV	2-10	1 mfd., 200 V. condenser	.15
56	CV	2-10	1 mfd., 200 V. condenser	.15
57	CV	2-10	1 mfd., 200 V. condenser	.15
58	CV	2-10	1 mfd., 200 V. condenser	.15
59	CV	2-10	1 mfd., 200 V. condenser	.15
60	CV	2-10	1 mfd., 200 V. condenser	.15
61	CV	2-10	1 mfd., 200 V. condenser	.15
62	CV	2-10	1 mfd., 200 V. condenser	.15
63	CV	2-10	1 mfd., 200 V. condenser	.15
64	CV	2-10	1 mfd., 200 V. condenser	.15
65	CV	2-10	1 mfd., 200 V. condenser	.15

- Set the test oscillator and dial indicator at 1500 KC., and adjust the oscillator trimmer (the rear trimmer on the coil fastened to the back plate of the chassis).
 - Set the test oscillator and dial pointer to 600 KC.
 - Adjust the oscillator lag condenser (on the base near the antenna coil) for maximum output at the same time rocking the gang condenser.
 - Reset test oscillator and dial pointer to 1500 KC., and recheck operation #2.
 - Connect the test oscillator to the blue antenna lead through a .0002 mfd. condenser and adjust the antenna trimmer (the bottom condenser on the coil on the top of the chassis).
 - Check sensitivity and calibration over the scale.
- ALIGNMENT OF THE SHORT-WAVE BAND**
- Turn the wave-change switch to the short-wave position.
 - Set the test oscillator and dial pointer to 15,000 KC., and adjust the short-wave oscillator trimmer (the trimmer on the inside end of the coil on the back plate of the chassis). Two positions may be found. Use the one with the least capacity, that is, with the trimmer screw farthest out.
 - Adjust the short-wave antenna trimmer (the top condenser on the coil on the top of the chassis).
 - Check sensitivity and calibration over the scale.
- BROADCAST BAND**
- Check the pointer setting to be sure that it is exactly horizontal when the tuning condenser is completely closed.
- TRAP ALIGNMENT**
- This receiver is provided with a tuned trap (the upright coil under the chassis) which is adjusted to eliminate a signal at the I.F. frequency (455 KC.) applied to the antenna. If there is code interference which is known to originate near the 455 KC. channel, this trimmer may be adjusted to minimize the undesired signal.
- | | | |
|----------|-------------------------------|------|
| KN 95151 | Knob - large (set screw type) | .12 |
| PL 95115 | Escutcheon dial plate | 1.50 |
| PL 95128 | Dial supporting plate | .50 |
| PR 97160 | Dial drive cord Per Yard | .05 |
| PU 9544 | Dial drive pulley | .40 |
| SC 953 | Felt foot and mounting screw | .05 |
| SH 9550 | Dial drive shaft | .20 |
| SI 9575 | Dial pointer | .20 |
| SO 9569 | Octal tube socket (5 used) | .35 |
| SP 9551 | Dial cord spring | .05 |
- BROADCAST BAND**
- | | | |
|-----------|-------------------------------|-------|
| BA 9525 | Speaker baffle | \$.05 |
| CV 954 | Tube shield | .10 |
| CV 9532 | 1st I.F. coil cover | .25 |
| CV 95233 | 2nd I.F. coil cover | .25 |
| CV 95261 | Base plate | 1.25 |
| DP 9585 | Dial scale | 1.25 |
| FS 108003 | Felt knob washer | .05 |
| IS 95216 | Rubber drive bushing | .05 |
| KA 9593 | Cabinet | .12 |
| KN 95128 | Knob - small (push-on type) | .12 |
| KN 95129 | Knob - large (push-on type) | .12 |
| KN 95150 | Knob - small (set screw type) | .12 |
- GENERAL DESCRIPTION**
- This model is a five-tube (plus ballast tube), A.C.-D.C., two-band superheterodyne receiver designed to operate over the standard broadcast band, extending from 535-1720 KC., and a short-wave band extending from 5800-17,500 KC.
- LINE-UP CAPACITOR ADJUSTMENTS**
- To properly align the circuits of this receiver, it is essential to use a high grade modulated test oscillator, the output of which can be continuously varied and reduced sufficiently to prevent overload as the individual circuits of the receiver are brought into alignment. A conventional output meter should be connected across the terminals of the speaker voice coil to indicate when the individual circuits are correctly aligned. The sensitivity of the meter must be sufficient to give satisfactory readings with low input signals.
- Before attempting to align the receiver, the service man should familiarize himself with the general layout of the chassis, location of the various tubes and alignment condensers.
- ALIGNMENT OF I.F. (455 KC.)**
- Set the volume control to maximum position, the wave-change switch to standard broadcast band and the dial pointer to approximately 600 KC.
 - Connect the output meter across the voice coil terminals of the speaker.
 - Set the test oscillator to 455 KC., and adjust its output to produce a measurable reading on the output meter when the test signal is applied to the grid of the first detector-oscillator tube through a 0.5 mfd. blocking condenser.
 - Adjust the four I.F. trimmer condensers underneath the chassis (under the square coil housings) to maximum output.

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR150
Early, Late
Schematic, Voltage
Alignment, Socket
Trimmers, Notes

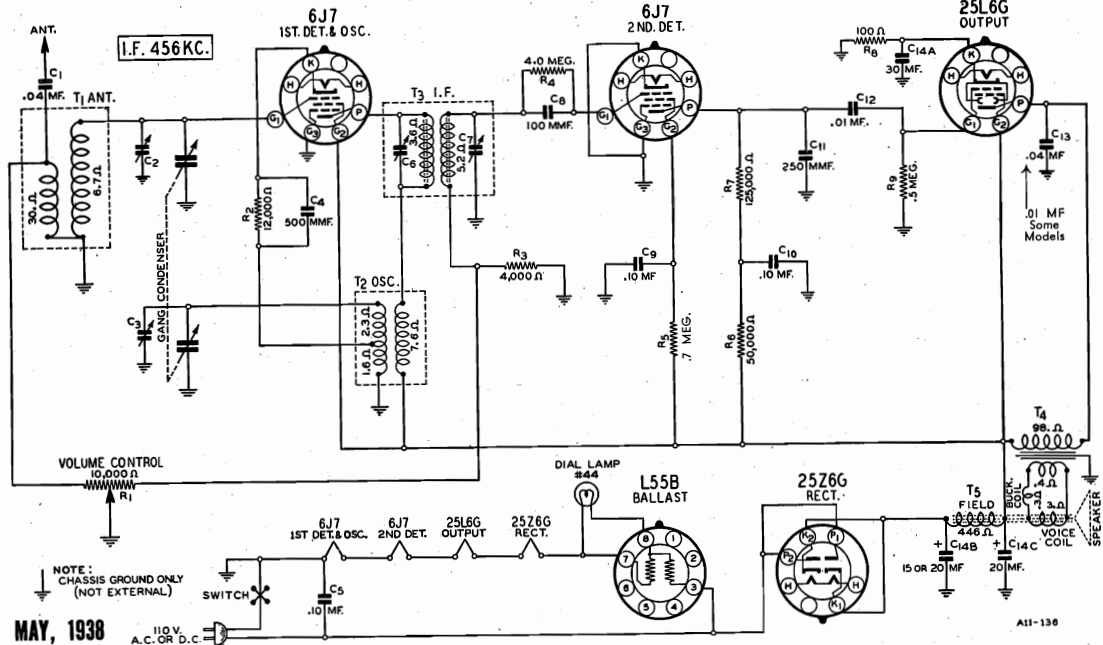

MAY, 1938

CIRCUIT

This radio, popularly known as an AC-DC set, is, as the name implies, built to operate from either a 117 volt AC or DC power supply.

An R.F. transformer with tuned secondary feeds into a 6J7 tube which functions as the 1st detector and oscillator. The oscillating circuit is resonant at 456 KC above the frequency to which the R.F. transformer secondary is tuned.

The output of this tube is fed through an iron core I.F. transformer into another 6J7 tube which functions as the 2nd detector.

The volume control is of the variable antenna input and I.F. gain type.

Resistance coupling is used between the 2nd detector and the output stage which uses a 25L6G tube.

A 25Z6G rectifier tube is used. For AC operation, the filter unit consists of the rectifier tube, filter condensers and the speaker field which serves as a choke. For DC operation, the rectifier tube acts as a low resistance series resistor.

The heaters of the 4 tubes and the ballast tube are in series across the line. The dial lamp is in parallel with one section of the ballast tube resistance.

CAUTION—The metal chassis is connected to one side of the line through the switch. Both AC and DC power lines are generally grounded on one side. If the side of the line not connected to the metal chassis is grounded, and the metal chassis comes in contact with an external ground, a line short circuit will result.

In any service work, therefore, on the AC-DC chassis, keep it on a wood or other insulated surface to avoid contacts with ground.

The person working on the set should avoid coming in contact with any ground.


Pilot Lamp—Use ONLY a No. 44 dial lamp. This lamp draws .25 amperes at 6.3 volts.

25 Cycle Models—For 25 cycle operation, the 3 section electrolytic condenser is replaced by one with values as shown:

C14A	30 mf.	25	Dry Electrolytic—
C14B	15 or 20 mf.	200	10 CYCLE MODELS
C14C	20 mf.	120	
C14A	30 mf.	25	Dry Electrolytic—
C14B	60 mf.	200	25-40 CYCLE MODELS
C14C	30 mf.	200	

DISTORTION—Early Models—If distortion is encountered at medium or low volume levels in the early models, change the 5 megohm 2nd detector screen series resistor (R 5) to a .7 megohm resistor.

- Speaker - - - - - 5" Dynamic
- Tuning Frequency Range - - - - - 530 to 1730 KC
- Sensitivity - - - - - 180 Microvolts Average
- Power Consumption - 48 Watts (At 117 volts AC Supply)
- Power Output - - - - - .8 Watts Undistorted
- Selectivity - - - - - 30 KC Broad at 100 times Signal
- Intermediate Frequency - - - - - 456 KC

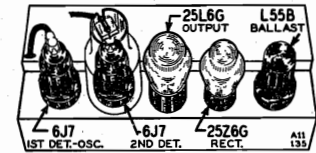

ALIGNMENT PROCEDURE

Volume Control—Maximum All Adjustments. Allow Chassis and Signal Generator to "Heat Up" for Several Minutes.

SIGNAL GENERATOR FREQUENCY SETTING	CONNECTION AT RADIO	DUMMY ANTENNA	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM (See Illustration)
456 KC	Grid of 1st Det.	.1 mf.	Turn rotor to full open	I.F. (C6) & (C7)
1730 KC	Antenna Lead	200 mmf.	Turn rotor to full open	Oscillator (C3)
1500 KC	Antenna Lead	200 mmf.	Turn rotor to max. output	Antenna (C2)

The following equipment is required for aligning:
Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed.
Output Indicating Meter; Non-Metallic Screwdriver.
Dummy Antennas—.1 mf. and 200 mmf.

NOTE—To obtain dial scale calibration, tune in an 800 KC signal. The pointer should be at the 800 KC mark on the dial. If it is not, loosen the pointer screw, set the pointer at the 800 KC mark and retighten the pointer screw.

VOLTAGES AT SOCKETS FOR 117 VOLT AC LINE


See Note Below Regarding Voltages when Operated on DC
Volume Control Maximum—Antenna Lead Grounded—Readings taken with 1000 Ohm-per-volt Meter.

TUBE	FUNCTION	Voltage Between Socket Prong and Ground (Unless Otherwise Indicated)							
		Prong No. 1	Prong No. 2	Prong No. 3	Prong No. 4	Prong No. 5	Prong No. 6	Prong No. 7	Prong No. 8
6J7	1st Det. & Osc.		6.3(1)	98	98			6.3(1)	6.0
6J7	2nd Det.		6.3(1)	10	13			6.3(1)	
25L6G	Output.		24(1)	92	98			24(1)	5
25Z6G	Rectifier.		24(1)	117(2)	125	117(2)		24(1)	125
L55B	Ballast.			56.6(3)				56.6(3)	4.5(4)

- (1) AC voltage across terminals 2 and 7.
- (2) AC voltage to ground.
- (3) AC voltage across terminals 3 and 7.
- (4) AC voltage across terminals 7 and 8.

DC OPERATION—Filament and ballast tube voltages will be the same as AC (for 117 volt line). The plate, screen and bias voltages will be slightly lower than those


shown above. When operated on DC, the rectifier tube acts as a low resistance series resistor with a drop of approximately 6 volts between plate and cathode.

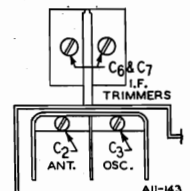

CAUTION—In any service work on the AC-DC chassis, keep it on a wood or other insulated surface to avoid contacts with ground.

MODELS WR165W, WR165I
WR165M

WESTINGHOUSE ELEC. SUPPLY CO. Schematic, Voltage Alignment, Socket Trimmers, Lead Dress

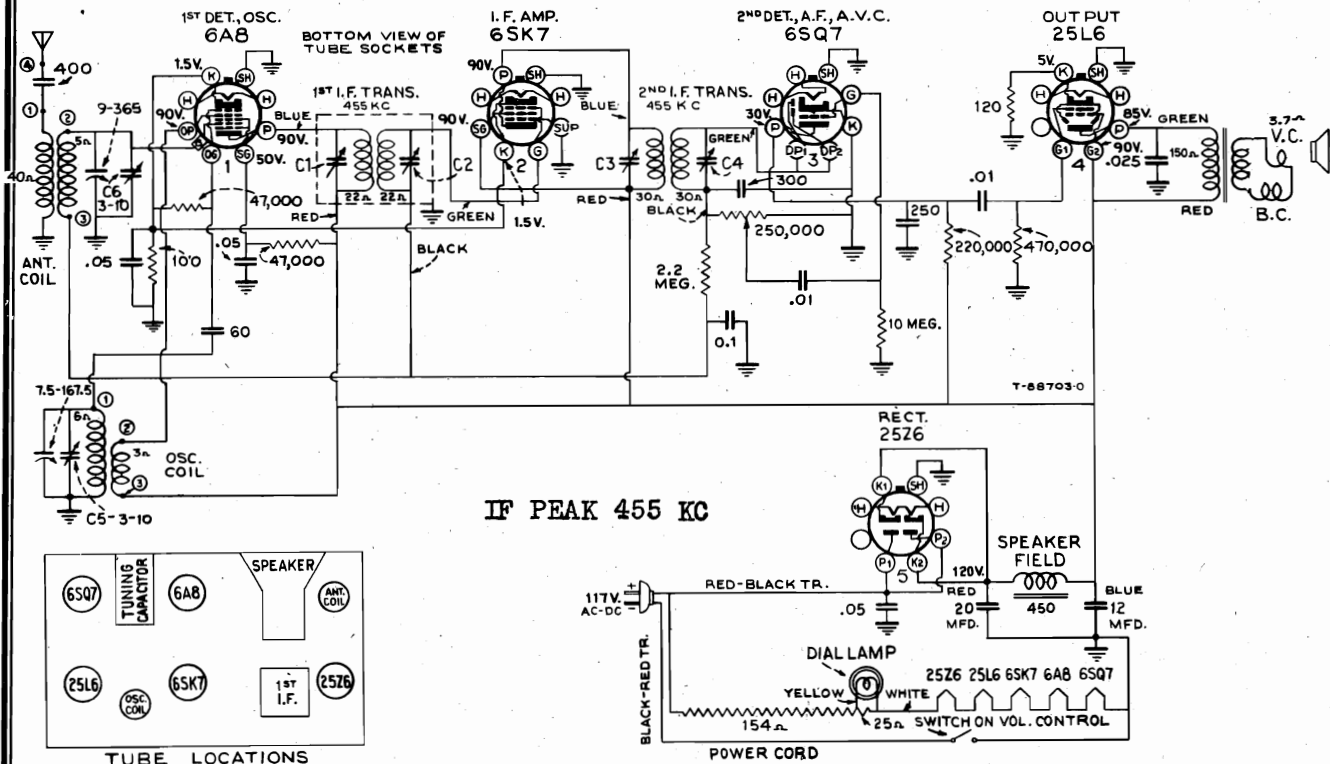

Electrical and Mechanical Specifications

FREQUENCY RANGE..... 530-1,720 kc
INTERMEDIATE FREQUENCY..... 455 kc

WR-165-W, Molded plastic cabinet, walnut finish, with ivory dial and walnut knobs.

WR-165-I, Molded ivory plastic cabinet with ivory dial and red knobs.

WR-165-M, Solid mahogany wood cabinet, maple finish, with ivory dial and walnut knobs.

POWER SUPPLY RATINGS

A-C Rating..... 105-125 volts, 50-60 cycles, 50 watts
D-C Rating..... 105-125 volts, direct current, 50 watts

POWER OUTPUT (125 volt, 60 cycle supply)

Undistorted..... 1.5 watts
Maximum..... 2.0 watts

LOUDSPEAKER


Type..... 4-inch Electrodynamic

Dial Lamp (1)..... Mazda 47, 6.3 volts, .15 amp.

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible. The antenna should be rolled up and kept at least one foot from chassis during alignment.

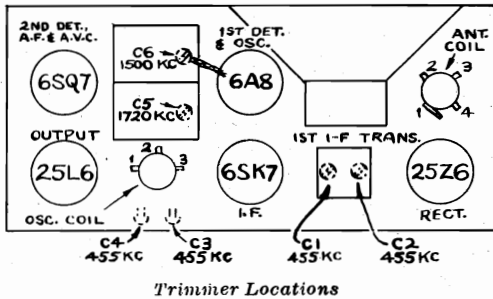

Trimmer Locations

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	6A8 1st-Det. grid cap, in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal.	C6 (antenna)

Precautionary Lead Dress


1. Dress 1st I-F plate and grid leads against chassis and away from each other. Dress plate lead from 6SK7 close to chassis.
2. Dress electrolytic capacitor against rear apron.
3. Keep leads away from adjusting screws to allow easy access.
4. Dress output plate lead along front apron and away from 6A8.
5. Dress parts at ends of chassis to clear cabinet bosses.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

Resistor in Power Cord.—The power cord contains a resistor which becomes warm during operation.

Antenna.—The set is equipped with length of antenna wire. Do not connect the antenna to ground. If an outdoor antenna is used, it should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.


WESTINGHOUSE ELEC. SUPPLY CO. MODEL WR152
 MODEL WR166A
 Schematics, Voltage

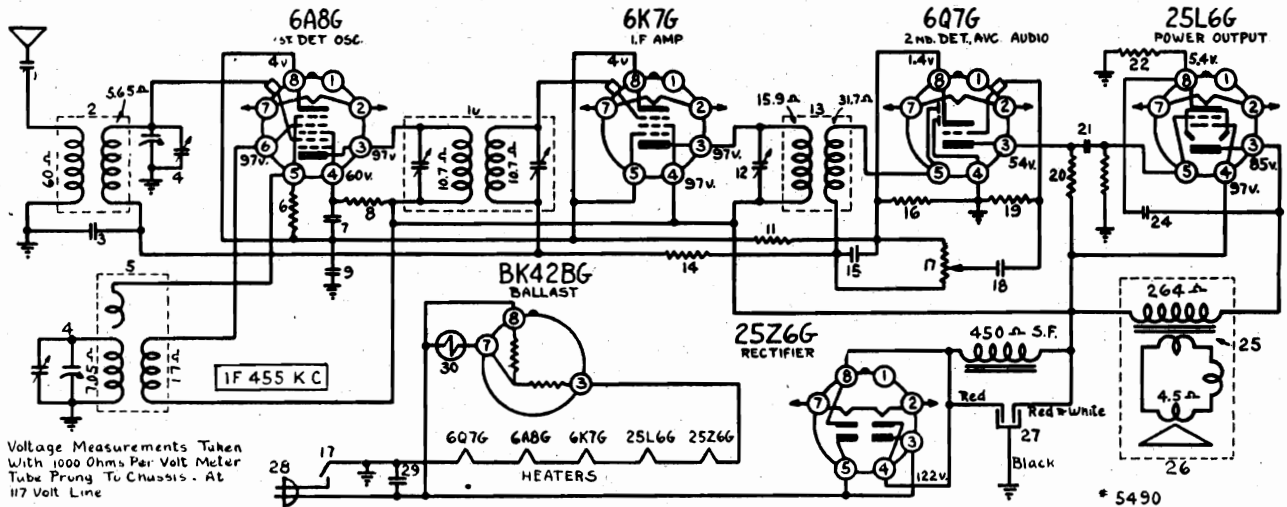

Readings should hold within $\pm 20\%$.

MODEL - W R 152

- Power Supply.....105—125 volts, DC or 50—60 cycles AC
- Tuning Range.....540—1720 K.C.
- Line up Frequencies.....I.F. 455 K.C., 1720 K.C., 1400 K.C.
- Power Output.....Two watts

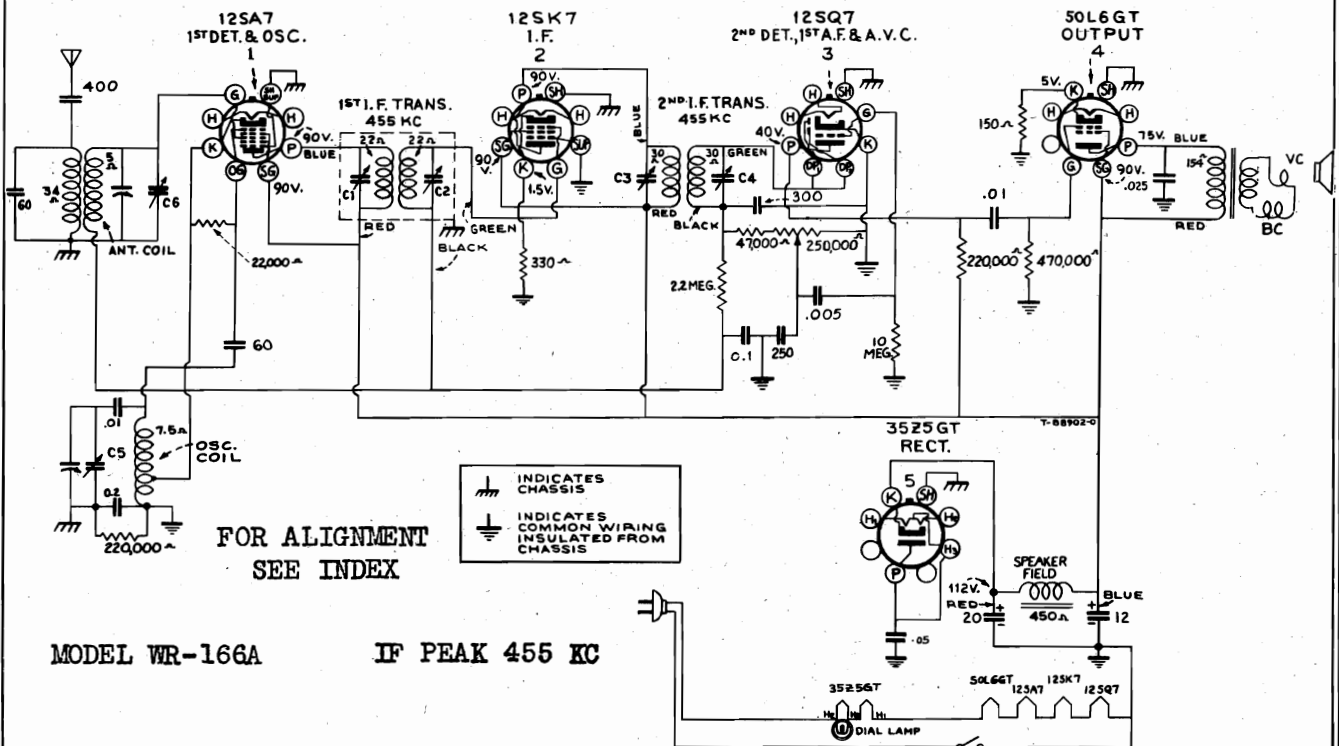

MODEL WR-166A IF PEAK 455 KC

- FREQUENCY RANGE..... 540-1,720 kc
- INTERMEDIATE FREQUENCY..... 455 kc
- POWER OUTPUT (125 volt, 60 cycle supply)
 - Undistorted..... 0.5 watts
 - Maximum..... 1.25 watts
- LOUDSPEAKER
 - Type..... 4-inch Electrodynamic
- Dial Lamp (1)..... Mazda 47, 6.3 volts, .15 amp.
- POWER SUPPLY RATINGS
 - A-C Rating.....105-125 volts, 50-60 cycles, 30 watts
 - D-C Rating.....105-125 volts, direct current, 30 watts

MODEL WR152

Alignment, Chassis
Socket, Trimmers, Parts

WESTINGHOUSE ELEC. SUPPLY CO.

D530	Dial Lamp, .15 amp., 6.3 volt, Mazda No. 40.....	.10
D3268	8 Prong Tube Socket.....	.10
D4395	Drive Cable, 9 in.....	.10
D2908	Drive Cable Spring.....	.10
D5488	Dial Scale.....	.30
D5489	Pointer.....	.15
D5493	Knob.....	.05
D5503	Dial Escutcheon.....	.30
D3333	Escutcheon Screws, set of 4.....	.05

PRICES SUBJECT TO CHANGE WITHOUT NOTICE

Alignment Procedure

Connect a high impedance AC voltmeter across the voice coil terminals of the loud speaker. The volume control should be set a few degrees back of maximum volume position. Always use a weak signal from the signal generator, strong signals tend to cause improper adjustment.

See Fig. 1 and 2 for location of all trimmers.

IF: Connect the generator ground to receiver chassis through a .1 mf condenser. Using a .1 mf condenser in series with the high side of the generator, apply a 455 K.C. signal to the grid of the 6K7G I.F. amplifier tube, and align transformer Trimmer No. 12 (Fig. 1) to maximum output. Next connect generator to the grid of the 6A8G tube and align both trimmers of transformer No. 1 (Fig. 2) for maximum output.

RF: Connect the high side of the generator to the antenna through a 100 mmf. condenser. Turn the variable condenser to minimum capacity, feed a 1720 K.C. signal in from the generator and adjust oscillator trimmer (Fig. 2) for top frequency. Next tune the receiver to about 1400 K.C., feed in signal from generator and adjust the antenna trimmer (Fig. 2) for maximum output.

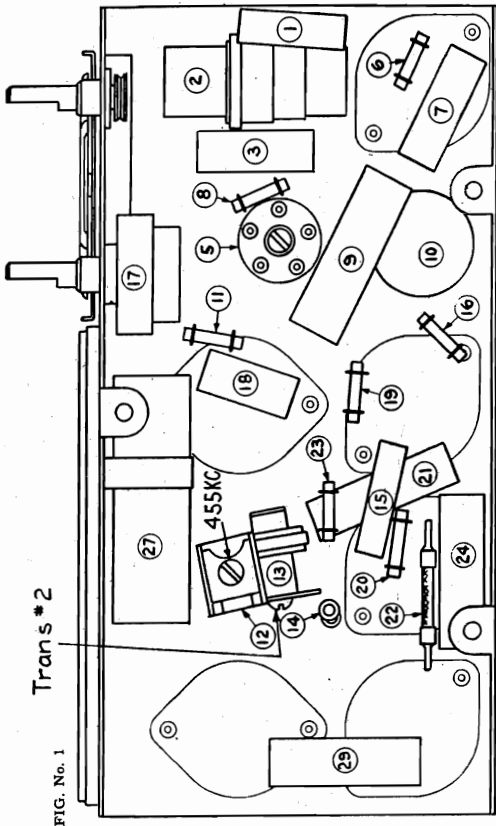


FIG. No. 1

DIAGRAM NO.	PART NO.	DESCRIPTION OF PARTS	LIST PRICE
1	D3137	.001 mf.—400 v. Condenser.....	.15
2	D5497	Antenna Coil Assembly.....	1.00
3	D580	.05 mf.—200 v. Condenser.....	.15
4	D5485	Variable Condenser inc. Trimmers.....	1.75
5	D4875	Oscillator Coil Assembly.....	1.00
6	D631	50,000 ½ watt Resistor.....	.15
7	D580	.05 mf.—200 v. Condenser.....	.15
8	D617	20,000 ½ watt Resistor.....	.15
9	D2792	2 mf.—200 v. Condenser.....	.15
10	D2972	1 St. I.F. Transformer Assembly.....	2.00
11	D2605	200 ohm ½ watt Resistor.....	.15
12	D1611	5—35 mmf. Trimmer Condenser.....	.15
13	D5004	2 nd. I.F. Transformer Assembly.....	1.00
14	D624	1 meg. ½ watt Resistor.....	.15
15	D4810	.0005 mf.—400 v. Condenser.....	.15
16	D2689	100 ohm ½ watt Resistor.....	.15
17	D5486	½ meg. Volume Control and ON-OFF Switch.....	1.25
18	D565	.01 mf.—200 v. Condenser.....	.15
19	D624	1 meg. ½ watt Resistor.....	.15
20	D598	200,000 ohm ½ watt Resistor.....	.15
21	D2600	.02 mf.—600 v. Condenser.....	.15
22	D4813	120 ohm ½ watt Flexohm Resistor.....	.15
23	D615	½ meg. ½ watt Resistor.....	.15
24	D5500	.04 mf.—600 v. Condenser.....	.15
25	D5484T	Output Transformer.....	1.00
26	D5484	Speaker, 5 in., complete.....	3.00
27	D5499	16—20 mf. CCCW 150 WV Condenser.....	1.00
28	D1732	Line Cord and Plug.....	.25
29	D5500	.04 mf.—600 v. Condenser.....	.15

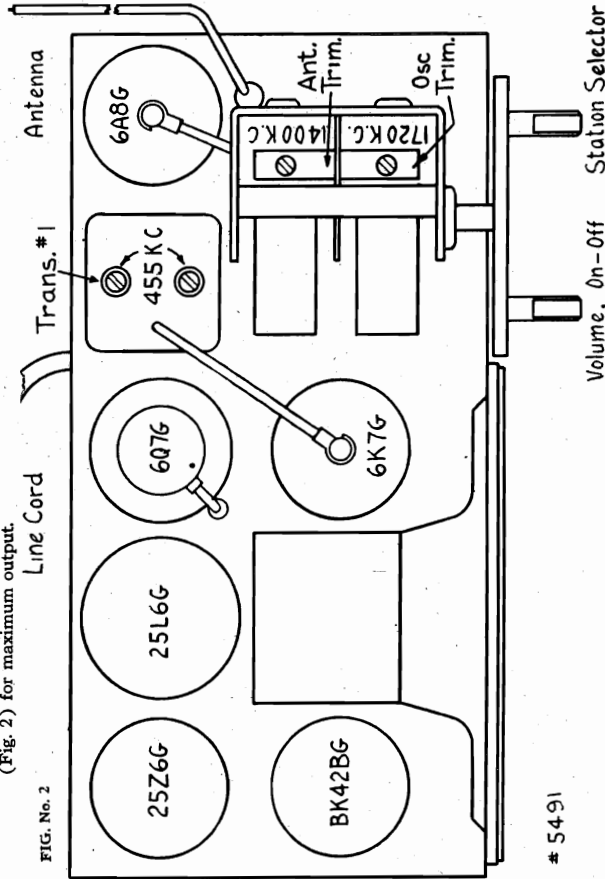


FIG. No. 2


5491

Volume, On-Off Station Selector


MODEL WR475
Schematic, Socket
Trimmers, Alignment

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR162
Schematic, Voltage
Alignment, Socket
Trimmers, Dial Data


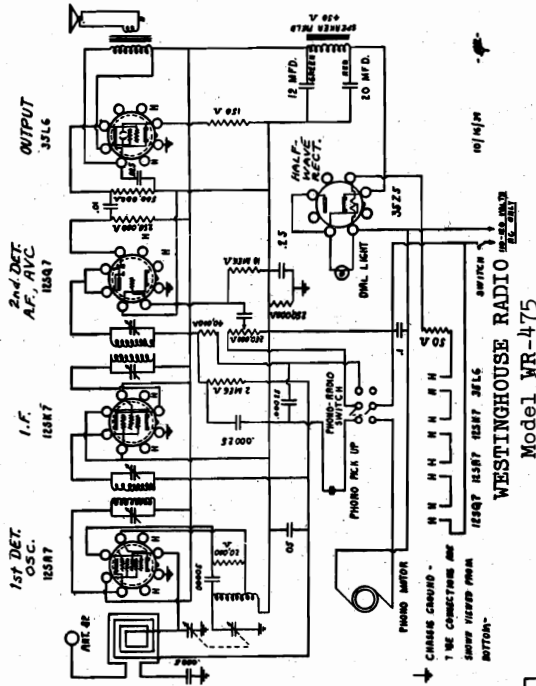


Frequency Range.....540-1,720 kc
Intermediate Frequency.....455 kc

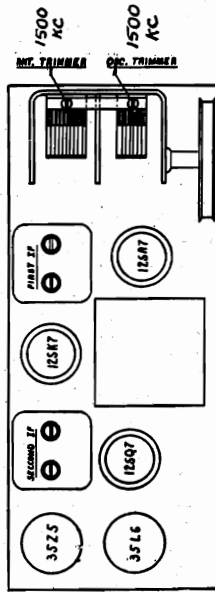


CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII

Dial Lamp (1).....Mazda 47, 6-8 Volt, .15 amp.
Power Supply Ratings
105-125 Volts, 60 cycles, Radio 30 Watts and
Phonograph motor 30 watts.
LOUDSPEAKER
Type.....4-inch electro dynamic
Voice-coil impedance.....3.2 ohms at 400 cycles
Power Output (125 volt, 60 cycle supply)
Undistorted......0.5 watts
Maximum.....1.2 watts
PHONOGRAPH.....Synchronous (Self starting)
Records.....10-inch and 12-inch, 78 r.p.m.
Pickup, crystal, 200,000 ohms at 1,000 c.p.s.
Average output of pickup.....2½ volts at 1,000 c.p.s.

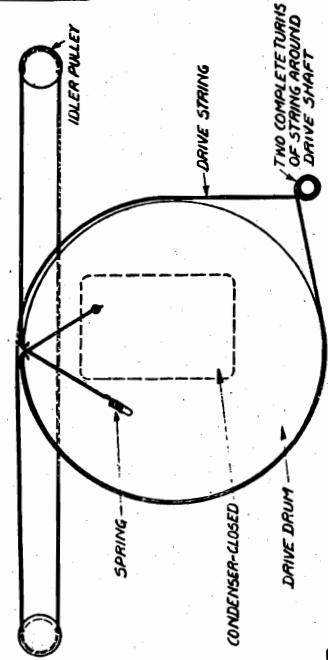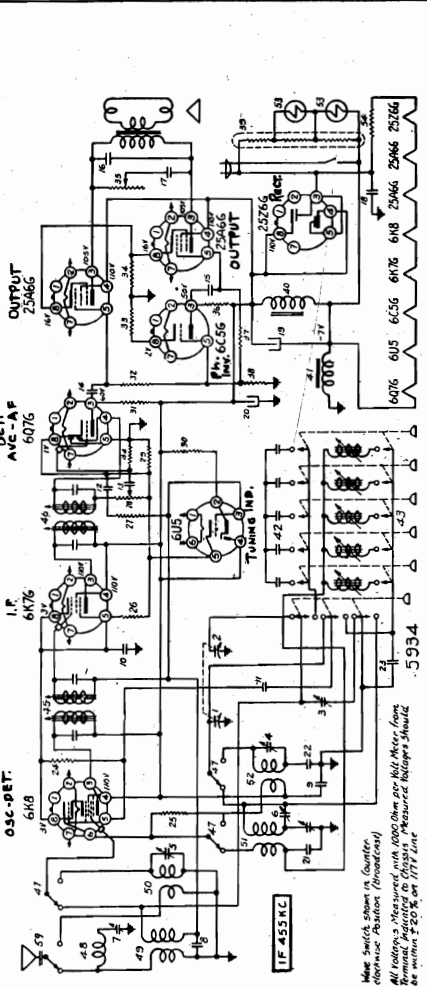

WR162
CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII

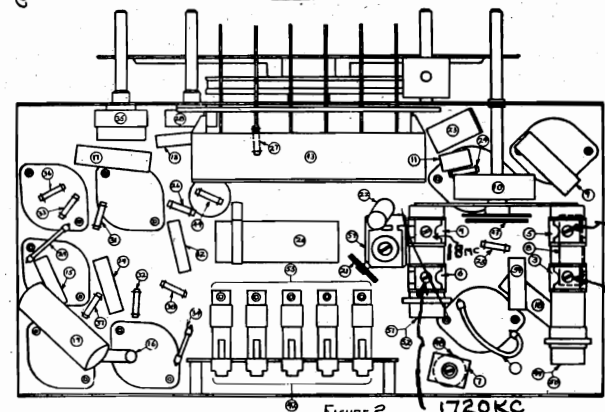

MODEL WR162
MODEL WR262
Parts Lists

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR-262

DIAGRAM NO.	PART NO.	DESCRIPTION OF PARTS	LIST PRICE
1, 2	D-5531	410 MMF Variable Condenser	.26
3, 4, 5	D-5562	1-10 MMF Trimmer	.20
6	D-3157	3-35 MMF Trimmer	.20
7	D-3272	10-140 MMF Trimmer	.25
8, 9, 68	D-572	1 MF 200V Condenser	.15
10	D-2792	2 MF 200V Condenser	.15
11	D-2780	50 MMF Mica Condenser	.20
12, 13	D-4810	.0005 MF 400V Condenser	.15
14, 15	D-576	.02 MF 400V Condenser	.15
16	D-2695	.003 MF 600V Condenser	.15
17	D-5563	.03 MF 600V Condenser	.15
18	D-3155	.003 MF 800V Condenser	.15
19	D-2793	.006 MF 600V Condenser	.15
20	D-5565	.0005 MF Special Condenser	.20
21	D-5564	270 MMF Special Condenser	.25
22	D-5553	8 MF 200 V.V., 20 MF 35 W.V.— Electrolytic Condenser	1.00
23	D-598	20,000 ohm 1/3 W. Resistor	.15
24	D-4530	30,000 ohm 1/3 W. Resistor	.20
25	D-636	40,000 ohm 1/3 W. Resistor	.15
26, 27	D-2689	100 ohm 1/3 W. Resistor	.15
28, 29, 35	D-624	1 Megohm 1/3 W. Resistor	.15
30	D-598	200,000 ohm 1/3 W. Resistor	.15
31	D-615	500,000 ohm 1/3 W. Resistor	.15
32	D-3533	250 ohm 2 W. Resistor	.20
33	D-5576	500,000 ohm Volume Control	1.00
34	D-5575	100,000 ohm Tone Control and ON-OFF Switch	1.25
36	D-631	50,000 ohm 1/3 W. Resistor	.15
37	D-5101	16 MF 225 W.V. Reg. Electrolytic Condenser	1.00
38	D-3285	100,000 ohm 1/3 W. Resistor	.15
40	D-2560	400 MMF Padder Condenser	1.00
41	D-634	500 ohm 1/3 W. Resistor	.15
42	D-563	.05 MF 400V Condenser	.35
43	D-2688	60,000 ohm 1/3 W. Resistor	.15
44	D-603	100,000 ohm 1/3 W. Resistor	.15
45	D-5548	First I.F. Assembly	2.20
46	D-5549	Second I.F. Assembly	2.20
47	D-5550	Power Transformer	3.60
48	D-5567-T	Output Transformer	1.10
49	D-5567	6-inch Speaker	3.75
50	D-1732	Line Cord and Plug	.25
51	D-5557	Push Button Oscillator Coils— Low Frequency	.60
52	D-5558	Medium Frequency	.60
53	D-5559	High Frequency	.60
54	D-5542	Trimmer Condenser Assembly For Push Buttons	1.35
55	D-5551	Band Switch	.80
56	D-5544	Push Button Switch	2.75
57	D-530	Dial Lamps, 6.3 V., 15 amp., Mazda No. 40	1.10
58	D-5554	Antenna Coil Assembly	1.65
59	D-5555	Oscillator Coil Assembly	1.50
60	D-5556	Wave Trap Coil	.30
61	D-2163	Dial Drive Cable, 36"	.10
62	D-5560	Dial Pointer	.15
63	D-2981	Tuning Tube Cable and Socket	.60
64	D-3268	8-prong Octal Tube Socket	.10
65	D-5569	Dial Escutcheon	1.90
66	D-5573	Tuning Tube Escutcheon	.60

MODELS WR-162 and WR-262

Electrical Specifications

Power Supply.....105-125 volts, 60 cycles A.C.—unless otherwise specified.
Tuning Range.....540 to 1720, 5800 to 18,000 K.C.
Line up Frequencies.....I.F. 455 K.C., 1720 K.C., 1400 K.C., 600 K.C., 18,000 K.C., 17,000 K.C.
Power Output.....Three watts

MODEL WR-162

PARTS LIST


DIAGRAM NO.	PART NO.	DESCRIPTION OF PARTS	LIST PRICE
1, 2	D-5531	Variable Condenser	.26
3, 4, 5	D-5562	1-10 MMF Trimmer	.20
59	D-824	.002 MF 600V Condenser	.15
6	D-3157	3-35 MMF Trimmer	.20
7	D-3272	30-140 MMF Trimmer	.25
8, 9, 10	D-572	1 MF 200V Condenser	.15
11	D-2780	50 MMF Mica Condenser	.20
12	D-4810	.0005 MF 400V Condenser	.15
13	D-568	.01 MF 400V Condenser	.15
14, 15	D-576	.02 MF 400V Condenser	.15
16	D-3138	.001 MF 800V Condenser	.15
19	D-5780	20 MF 150V Electrolytic Condenser	1.00
17, 18	D-2600	.02 MF 600V Condenser	.15
19	D-5780	20 MF 150 V Electrolytic Condenser	2.00
20	D-5968	45 MF 150V Electrolytic Condenser	1.25
21	D-5565	500 MMF Special 3% Tolerance	.20
22	D-2793	.006 MF 600V 5% Condenser	.15
23	D-5564	270 MMF Special 2% Tolerance	.25
24	D-631	50,000 ohm 1/3 Watt Resistor	.15
25	D-617	20,000 ohm 1/3 watt Resistor	.15
26	D-3004	150,000 ohm 10% 1/3 watt Resistor	.15
27, 44	D-624	1. Megohm 1/3 watt Resistor	.15
28	D-5576	500,000 ohm Volume Control	1.00
29	D-3808	50 ohm 3/4 watt Resistor	.20
31, 32	D-2730	200,000 ohm 1/3 watt Resistor	.15
33	D-2883	5,000 ohm 1/3 watt Resistor	.15
34	D-3937	500 ohm 1/2 watt Resistor	.20
35	D-5575	100,000 ohm Tone Control and Switch	1.25
36	D-2880	100,000 ohm 1/3 watt 10% Resistor	.15
37	D-602	250,000 ohm 1/3 watt Resistor	.15
38	D-2688	60,000 ohm 1/3 watt Resistor	.15
39	D-5938	Ballast Lamp	1.00
48	D-5556	Wave Trap Coil	.30
49, 50	D-5554	Antenna Coil	1.65
51, 52	D-5555	Oscillator Coil	1.50
45	D-5548	1st IF Transformer	2.20
46	D-5549	2nd IF Transformer	2.20
47	D-5551	Wave Switch	.80
41	D-4295	Filter Choke, 130 Ohm	1.25
42	D-5542	5 Gang Trimmer	1.35
43	D-4301	35 ohm 4 watt Resistor	.30
54	D-5544	Push Button Switch	2.75
43	D-5574	Push Button Coil Assembly	3.00

(These coils cannot be furnished separately)

MODEL WR166A
Socket, Trimmers
Alignment
MODEL 166L
Alignment, Lead Dress

WESTINGHOUSE ELEC. SUPPLY CO. **WR166B, WR166C, WR166G, WR166I, WR166R, WR166W**

Schematic, Socket, Voltage
Alignment, Trimmers, Lead Dress

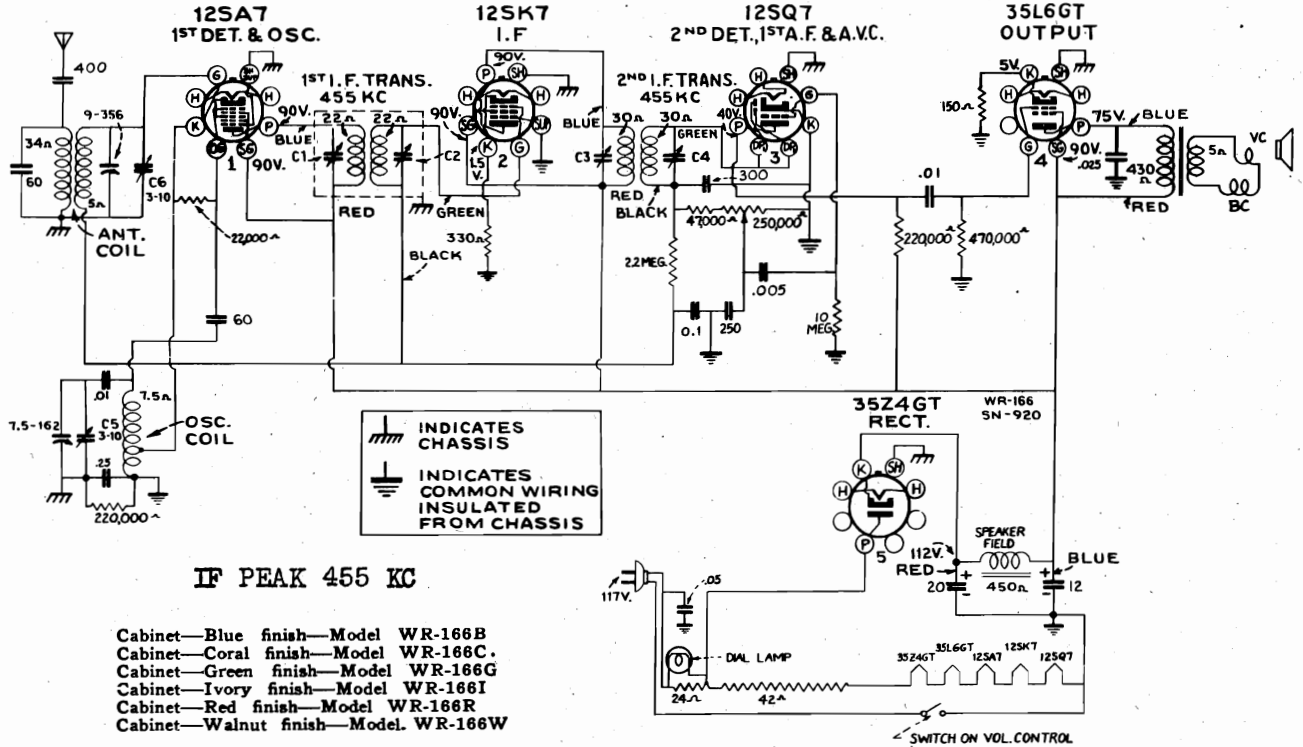

IF PEAK 455 KC

- Cabinet—Blue finish—Model WR-166B
- Cabinet—Coral finish—Model WR-166C.
- Cabinet—Green finish—Model WR-166G
- Cabinet—Ivory finish—Model WR-166I
- Cabinet—Red finish—Model WR-166R
- Cabinet—Walnut finish—Model WR-166W

Electrical and Mechanical Specifications

FREQUENCY RANGE..... 530-1,720 kc
 Dial Lamp (1)..... Mazda 47, 6.3 volts, .15 amp.
 POWER SUPPLY RATINGS
 A-C Rating..... 105-125 volts, 50-60 cycles, 30 watts
 D-C Rating..... 105-125 volts, direct current, 30 watts

INTERMEDIATE FREQUENCY..... 455 kc
 POWER OUTPUT (125 volt, 60 cycle supply)
 Undistorted..... .075 watts
 Maximum..... 1.5 watts
 LOUDSPEAKER
 Type..... 4-inch Electrodynamic

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Precautionary Lead Dress


1. Dress 1st I-F plate and grid leads against chassis and away from each other. Dress plate lead from 12SK7 close to chassis.
2. Dress electrolytic capacitor against rear apron.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

Antenna.—The set is equipped with a length of antenna wire. Do not connect the antenna to ground. If an outdoor antenna is used, it should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal	C6 (antenna)

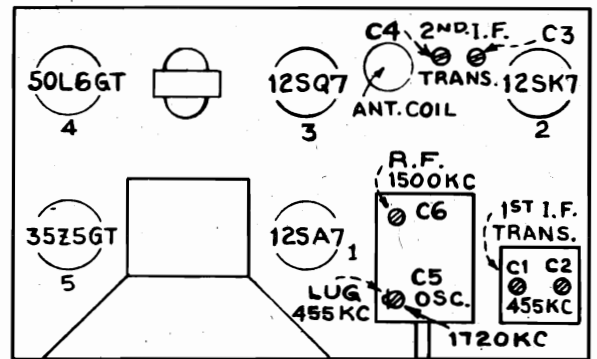




TUBE AND TRIMMER LOCATIONS

NOTE: 35L6GT is used in No.4 socket in Model WR-166.

MODELS WR168, WR168A

Schematic, Voltage, Socket Alignment, Trimmers Load Dress, Dial Data

WESTINGHOUSE ELEC. SUPPLY CO.

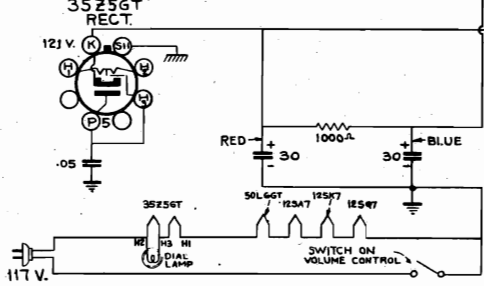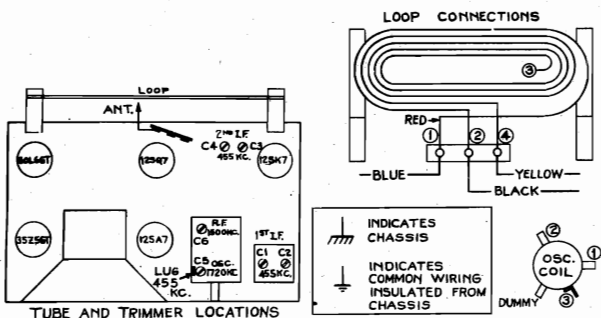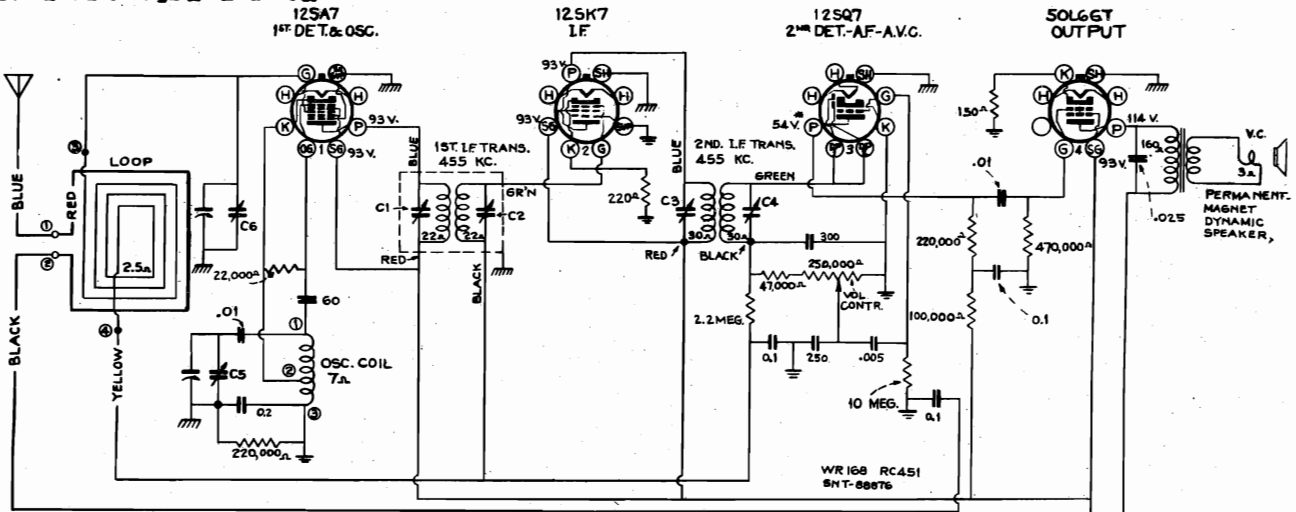


POWER OUTPUT (125 volt, 60 cycle supply)
 Undistorted 0.75 watts
 Maximum 1.5 watts

LOUDSPEAKER:
 Type 5-inch permanent magnet dynamic

Calibration Marks.—The tuning dial is fastened in the cabinet and can not be used for reference during alignment. Therefore calibration marks corresponding to dial readings of 600 kc, and 1,500 kc have been stamped in the plate on the front of the chassis as shown in the accompanying drawing. These marks are used for reference during alignment.

Dial Indicator Adjustment.—With the gang condenser in full mesh, the indicator should point to the extreme left mark on the dial scale.

WITH CONDENSERS FULLY MESHED, AND DRUM IN POSITION SHOWN, INDICATOR SHOULD COINCIDE WITH THIS LINE.

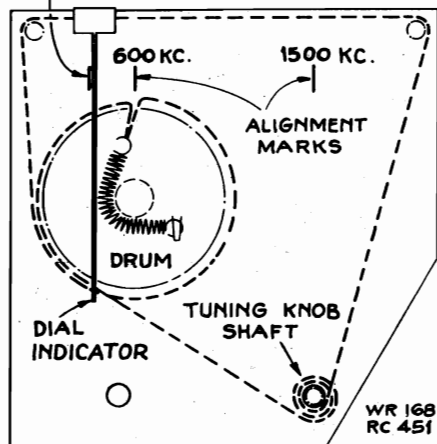

Dial Drive Hookup and Alignment Marks

Models WR-168 and WR-168A are identical with the exception of the cabinet and dial scale.

FREQUENCY RANGE 530-1,720 kc
 INTERMEDIATE FREQUENCY 455 kc
 Dial Lamp (1) Mazda 51, 7.5 volts, 0.2 amp.

POWER SUPPLY RATINGS
 A-C Rating 105-125 volts, 50-60 cycles, 30 watts
 D-C Rating 105-125 volts, direct current 30 watts

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the "ANT" terminal on rear of cabinet. It should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.


Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. loop in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	1,500 kc cal. mark	C6 (antenna)

Precautionary Lead Dress.—1. The oscillator grid lead, R-F grid lead and diode plate lead should be kept separated, as far as possible.
 2. Dress blue 1st I-F lead under volume control close to chassis.
 3. Dress blue 2nd I-F lead close to chassis and behind 12SK7 socket.

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR168B
MODEL WR262
Schematics, Voltage
Socket, Trimmers

MODEL WR-168B

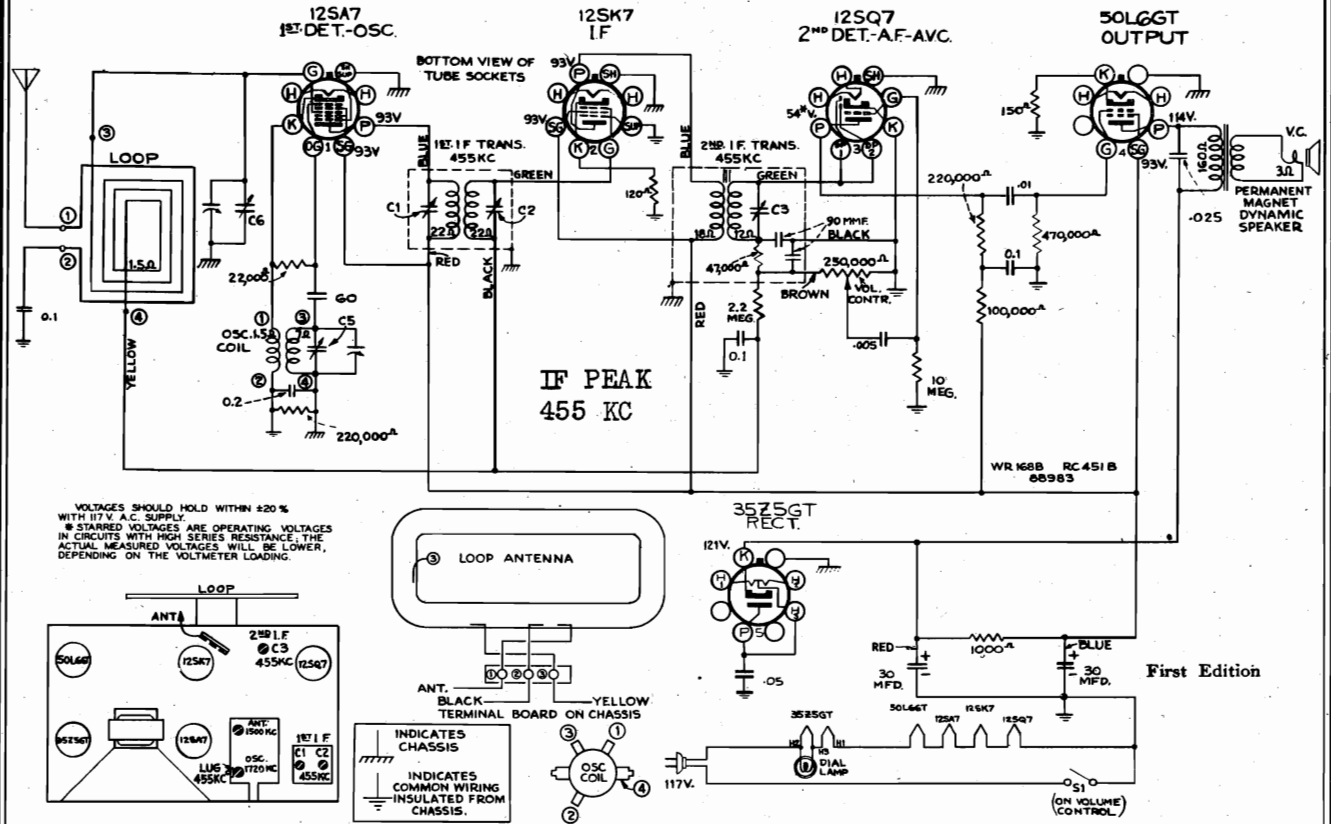


VOLTAGES SHOULD HOLD WITHIN ±20% WITH 117V. A.C. SUPPLY.
★ STARRED VOLTAGES ARE OPERATING VOLTAGES IN CIRCUITS WITH HIGH SERIES RESISTANCE. THE ACTUAL MEASURED VOLTAGES WILL BE LOWER, DEPENDING ON THE VOLTMETER LOADING.

For SPECIFICATIONS, ALIGNMENT, LEAD DRESS and DIAL DRIVE DATA, see MODEL WR-168.

MODEL - WR 262

FOR SPECIFICATIONS AND PARTS
SEE INDEX
FOR STRINGING DRIVE DRUM
SEE MODEL WR-162
CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII
IF PEAK 455 KC

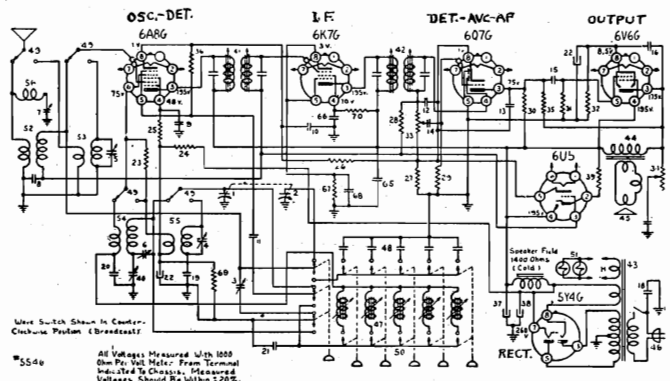

All Voltages Measured With 1000 Ohm Per Volt Meter From Terminal Indicated To Chassis. Measured Voltages Should Be Within ±20%.

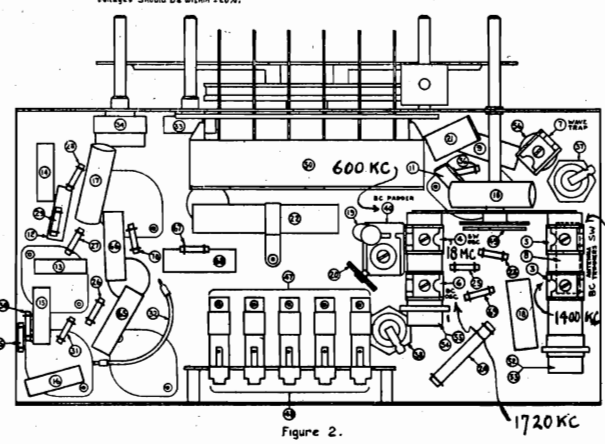


Figure 2.


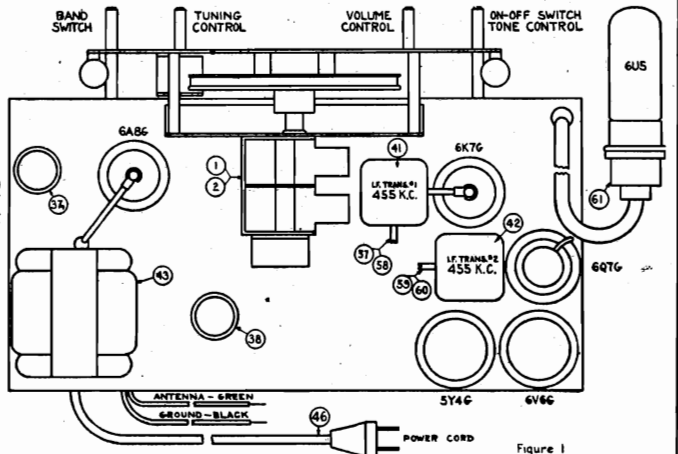


Figure 1

MODEL WR169

Schematic, Voltage Alignment, Trimmers WESTINGHOUSE ELEC. SUPPLY CO.
Socket, Tuner

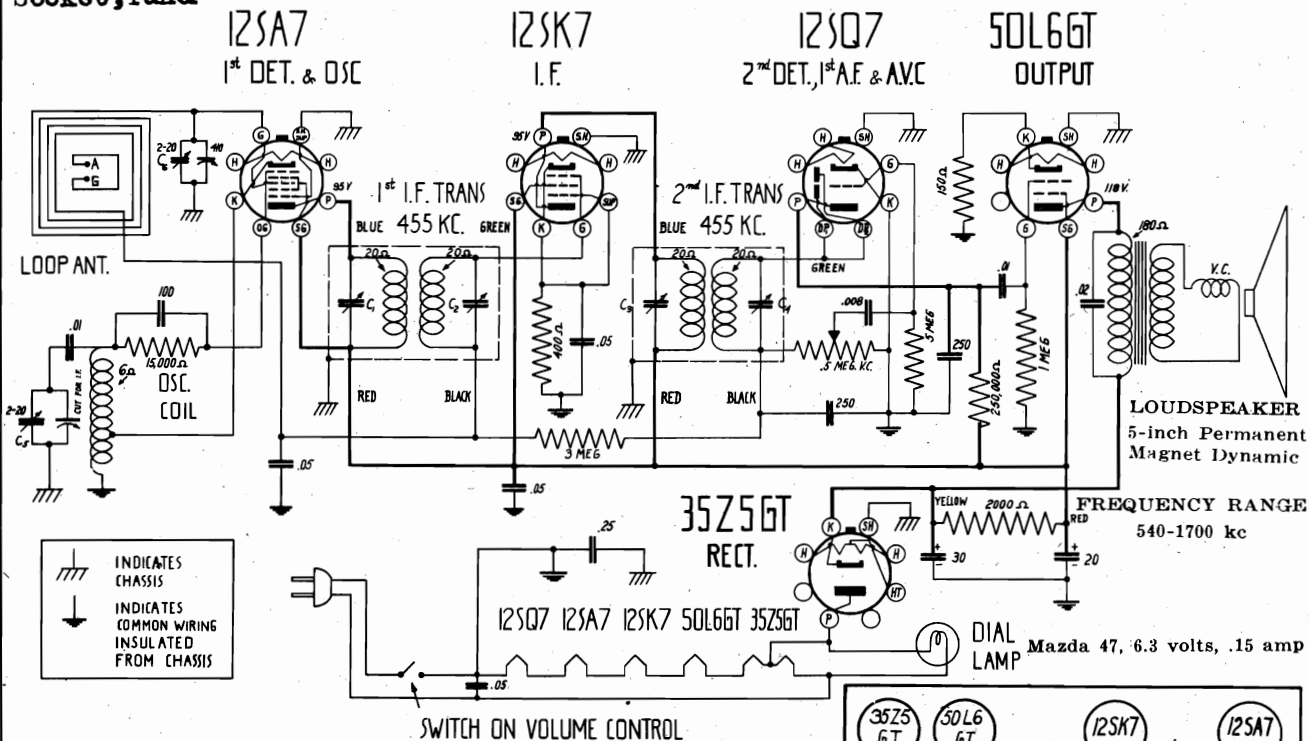

POWER OUTPUT (125 volt, 60 cycle supply)
 Undistorted 1.0 watts
 Maximum 1.75 watts

POWER SUPPLY RATINGS
 A-C Rating 105-125 volts, 40-60 cycles, 30 watts
 D-C Rating 105-125 volts, direct current, 30 watts

Tube Changing

The tubes can be changed by removing the back and taking off the wing nuts which hold the loop antenna in place. The loop antenna may then be detached from the back of the chassis.

Alignment Procedure

Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.


Test Oscillator

Connect the low side of the test oscillator to the binding post on the loop antenna marked "GND."

Steps	Connect high side of test-oscillator to—	Tune test-osc. to—	Adjust dial pointer to—	Adjust the fol. lowing for max. peak output—
1	Binding post marked "ANT."	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2		1,700 kc	Right end of scale (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal	C6 (antenna)

Important

When aligning the receiver, it is important to keep the loop antenna attached to the receiver by means of the wing nuts. Keep metallic objects away from the loop. Keep the output signal from the test-oscillator as low as possible during alignment of the receiver.

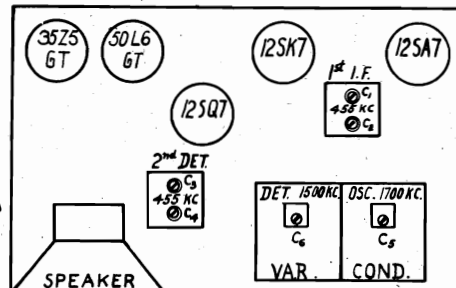

TUBE LOCATIONS AND ALIGNMENT SCREW POSITIONS

Push Button Adjustment

The five buttons above the two control knobs are the push button knobs. To adjust any one of these knobs to the desired station, proceed as follows. Pull out the square knob. Loosen up the adjusting screw by turning it one or two complete turns counterclockwise. The screw should not be loosened more than two turns as it may come out. Tune in the desired station with the tuning control. Replace the screw driver blade in the adjusting screw slot and push the screw in as far as it will go. Hold the screw driver in this position and at the same time readjust the tuning knob to be sure the station is tuned to exact resonance. Tighten the screw while holding the tuning control so that the station setting doesn't shift. Replace the knob with the proper station tab placed in the recess.

Power-Supply Polarity.—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c reversal of the plug may reduce hum.

Loop Antenna

This receiver is equipped with a loop antenna which makes the use of an outside aerial unnecessary. In some locations additional radio pick-up may be desired. To accomplish this, an antenna may be attached to the binding post marked "ANT." on the back of the cabinet. A ground wire should be connected to the binding post marked "GND."

Since the loop antenna has a directional effect, it may be found necessary at times to turn the receiver for best reception.

MODEL WR224

Alignment, Parts

WESTINGHOUSE ELEC. SUPPLY CO.

ELECTRICAL SPECIFICATIONS

Type and Number of Tubes 1 #6A8C 1 #6K7, 1 #6Q7G, 1 #6V6G, 1 #5Y3G - Total 5
 Power Supply Characteristics 105-125 volts, 50-60 cycle A.C.
 Power Consumption 4 Watts
 Total Power Output 2.25 Watts
 Undistorted Power Output 4 Watts
 Tuning Ranges (Broadcast Band 535 to 1,720 KC.
 (Short-wave Band 5,900 to 17,000 KC.
 Lane-Up Frequencies I.F. 455 KC., 600 KC., 1500 KC., 15,500 KC.

GENERAL DESCRIPTION

This model is a five-tube, alternating current, two-band superheterodyne receiver designed to operate over the standard broadcast band, extending from 535 to 1720 KC., and a short-wave band, extending from 5800 to 17,000 KC.

LINE-UP CAPACITOR ADJUSTMENTS

To properly align the circuits of this receiver, it is essential to use a high grade modulated test oscillator, the output of which can be continuously varied and reduced sufficiently to prevent overload as the individual circuits of the receiver are brought into alignment. A conventional output meter should be connected across the terminals of the speaker voice coil to indicate when the individual circuits are correctly aligned. The sensitivity of the meter must be sufficient to give satisfactory readings with low input signals.

Before attempting to align the receiver, the service man should familiarize himself with the general layout of the chassis location of the various tubes and alignment condensers.

ALIGNMENT OF I.F. (455 KC.)

1. Set the volume control to maximum position, the wave-change switch to standard and broadcast band, and the dial pointer to approximately 600 KC.
2. Connect the output meter across the voice coil terminals of the speaker.
3. Set the test oscillator to 455 KC., and adjust its output to produce a measurable reading on the output meter when the test signal is applied to the grid of the first detector-oscillator tube through a 0.5 mfd. blocking condenser.
4. Adjust the four I.F. trimmer condensers underneath the chassis (under the square coil housings) to maximum output.

ALIGNMENT OF OSCILLATOR AND R.F.

1. Check the pointer setting to be sure that it is exactly horizontal when the tuning condenser is completely closed.

PARTS LIST

Dia. #	Part #	Description of Parts	List Price
1	CM 9546	.0005 mfd. mica condenser	.15
2	WC 95296	Wave trap coil assembly	1.25
3	RC 95300	Antenna coil assembly	1.60
4	RC 95300	Trimmer condenser - part of RC 95300	
5	RC 95300	Trimmer condenser - part of RC 95300	
6, 32, 33, 47	SW 9574	Switch (wave-change)	.70
7	CG 9565	Variable condenser	3.75
8	IC 95109	Trimmer condenser - part of IC 95109	
9	IC 95109	1st I.F. coil assembly (455 KC.)	1.20
10	IC 95110	Trimmer condenser - part of IC 95110	
11	IC 95110	Trimmer condenser - part of IC 95110	
12	IC 95110	2nd I.F. coil assembly (455 KC.)	1.20
13	IC 95110	Trimmer condenser - part of IC 95110	
14	CG 6-005	.005 mfd., 600 V. condenser	.15
15	SW 9572	Switch (tone control)	.40
16	CW 6-01	.01 mfd., 600 V. condenser	.15
17	DM 9526	.05 mfd., 600 V. condenser	.15
18	DM 9526	Speaker diaphragm assembly	1.50
19	RE 4753	47,000 ohm, 1/2 W. resistor	.10
20	RE 3353	.0001 mfd. mica condenser	.10
21	RE 3353	33,000 ohm, 1/2 W. resistor	.10
22	RE 3353	1-.1 mfd., 400 V. dual condenser	.30
23	CM 9513	.0001 mfd. mica condenser	.10
24	RE 2243	220,000 ohm, 1/2 W. resistor	.10
25	CW 4-10	1 mfd., 400 V. condenser	.12
26	RE 271412	270 ohm, 1 W. resistor	.12
27	RE 4743	470,000 ohm, 1/2 W. resistor	.10
28	TR 95141	Output transformer	1.50
30	SK 9572	Speaker condenser - part of RC 95300	4.75
31	RE 1053	Trimmer condenser - part of RC 95301	.10
32	RE 4723	1 meg., 1/2 W. resistor	.10
33	RE 1003	47,000 ohm, 1/2 W. resistor	.10
34	RE 1003	18 ohm, 1/2 W. resistor	.10
35	VR 9553	Volume control, 1/2 meg.	1.00
36	RE 1805	18 ohm, 1/2 W. resistor	.10
37	RE 1805	Trimmer condenser (225-700 mmf.)	.35
38	CS 9585	Trimmer condenser - part of RC 95301	.25
39	CM 959	.002 mfd. mica condenser	.15
40	CM 6-005	.005 mfd., 600 V. condenser	.15
41	RE 225413	22,000 ohm, 1 W. resistor	.12
42	CE 9568	8 mfd., 450 V. electrolytic condenser	.70
43	RE 1033	10,000 ohm, 1/2 W. resistor	.10
44	CE 9562	18 mfd., 300 V. electrolytic condenser	.80
45	CE 9554	Speaker field coil (not serviced separately)	.85
46	LP 9510	18 mfd., 450 V. electrolytic condenser	.15
47	LP 9510	Dial lamp - 6.3 V., .25 amp.	.85
48	CB 9512	Switch - part of VR 9553	.50
49	TR 95128	Line cable assembly	5.00
50	TR 95131	Power transformer - 105-125 V., 50-60 cycle	6.00
51	TR 95131	Trimmer condenser - part of RC 95296	
52	RE 1033	10,000 ohm, 1/2 W. resistor	.10
53	RC 95301	.005 mfd., 600 V. condenser	.15
54	CW 2-02	Oscillator coil assembly	1.50
55	CM 9546	.02 mfd., 200 V. condenser	.15
56	CM 2-05	.00005 mfd. mica condenser	.15
57	CM 9525	.05 mfd., 200 V. condenser	.30
58	CM 9525	.0027 mfd. mica condenser	.15
59	CW 6-001	.001 mfd., 600 V. condenser	.15
60	RE 4743	470,000 ohm, 1/2 W. resistor	.10
61	RE 1033	10,000 ohm, 1/2 W. resistor	.10

ELECTRICAL SPECIFICATIONS

Type and Number of Tubes 1 #6A8C 1 #6K7, 1 #6Q7G, 1 #6V6G, 1 #5Y3G - Total 5
 Power Supply Characteristics 105-125 volts, 50-60 cycle A.C.
 Power Consumption 4 Watts
 Total Power Output 2.25 Watts
 Undistorted Power Output 4 Watts
 Tuning Ranges (Broadcast Band 535 to 1,720 KC.
 (Short-wave Band 5,900 to 17,000 KC.
 Lane-Up Frequencies I.F. 455 KC., 600 KC., 1500 KC., 15,500 KC.

GENERAL DESCRIPTION

This model is a five-tube, alternating current, two-band superheterodyne receiver designed to operate over the standard broadcast band, extending from 535 to 1720 KC., and a short-wave band, extending from 5800 to 17,000 KC.

LINE-UP CAPACITOR ADJUSTMENTS

To properly align the circuits of this receiver, it is essential to use a high grade modulated test oscillator, the output of which can be continuously varied and reduced sufficiently to prevent overload as the individual circuits of the receiver are brought into alignment. A conventional output meter should be connected across the terminals of the speaker voice coil to indicate when the individual circuits are correctly aligned. The sensitivity of the meter must be sufficient to give satisfactory readings with low input signals.

Before attempting to align the receiver, the service man should familiarize himself with the general layout of the chassis location of the various tubes and alignment condensers.

ALIGNMENT OF THE SHORT-WAVE BAND

1. Turn the wave-change switch to the short-wave position.
2. Set the test oscillator and dial pointer to 15,500 KC., and adjust the short-wave oscillator trimmer (the trimmer on the inside end of the coil on the back plate of the chassis). Two positions may be found. Use the one which the least capacity, that is, with the trimmer screw farthest out.
3. Adjust the short-wave antenna trimmer (the top condenser on the coil on the top of the chassis).
4. Check sensitivity and calibration over the scale.

TRAP ALIGNMENT

This receiver is provided with a tuned trap (the upright coil under the chassis) which is adjusted to eliminate a signal at the I.F. frequency (455 KC.) applied to the antenna. If there is code interference which is known to originate near the 455 KC. channel, this trimmer may be adjusted to minimize the undesired signal.

Runs A, B, C, etc.
Socket, Trimmers
Drive Cord, Notes

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR258
MODEL WR260

General Description

Model WR-258 is a five-tube, a-c, superheterodyne receiver employing push-button tuning for five stations in the broadcast band. The tuning range covers standard broadcast and state police calls. Features of this receiver are: Automatic volume control, magnetically tuned i-f transformers, magnetically tuned oscillator coils for each push button, 6-to-1

ratio vernier tuning, illuminated slide-rule dial, and a 5-inch dust-proofed dynamic speaker.

Model WR-260 employs all features of the WR-258 and in addition has a tuning band covering from 1,550 to 3,500 kc for aviation and police reception. It also has a two-point tone control.

Electrical Specifications

FREQUENCY RANGE (Model WR-258)
Broadcast..... 540-1,720 kc

FREQUENCY RANGES (Model WR-260)
Broadcast..... 540-1,550 kc
Police..... 1,550-3,500 kc

Five Electric Tuning Positions..... 550-1,500 kc
(Runs A and B,
1 station between approximately 550-980 kc
2 stations between approximately 650-1,080 kc
2 stations between approximately 850-1,500 kc

(Runs C and above,
2 stations between approximately 550-980 kc
1 station between approximately 650-1,080 kc
2 stations between approximately 850-1,500 kc

Pilot Lamp (1)..... Mazda No. 44, 6.3 volts, 0.25 ampere

POWER SUPPLY RATINGS


Rating A..... 105-125 volts, 50-60 cycles, 50 watts
Rating B..... 105-125 volts, 25-60 cycles, 50 watts

POWER OUTPUT


Undistorted..... 1.0 watt
Maximum..... 1.5 watts

LOUDSPEAKER


Type..... 5-inch Electrodynamic
Voice Coil Impedance..... { 84326-2 4.4 ohms at 400 cycles
84377-1 3.4 ohms at 400 cycles

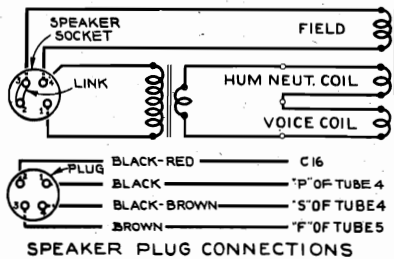

WR-260 Loudspeaker Wiring

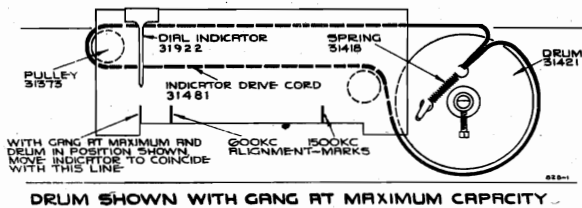


WR-258 Arrangement of Pointer Drive Cord

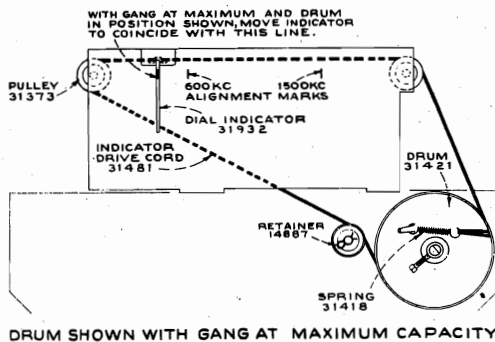


WR-260 Arrangement of Pointer Drive Cord

Refer to "Alignment Procedure" for explanation of the "calibration marks" shown in this drawing.

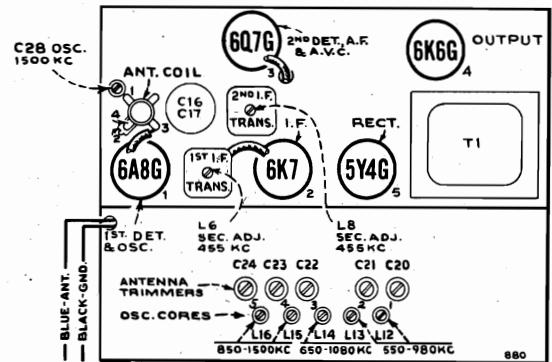


WR-258 Tube and Trimmer Locations

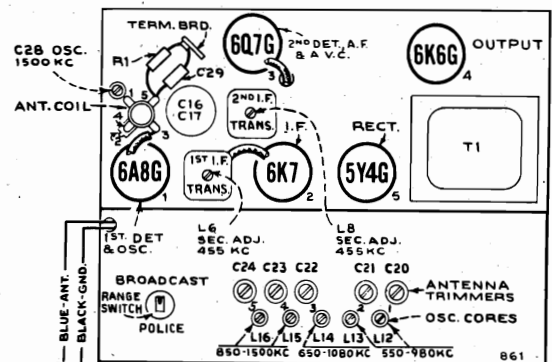

WR-260 Tube and Trimmer Locations



MODEL WR258 (All Runs)
Schematic, Voltage WESTINGHOUSE ELEC. SUPPLY CO.
Chassis Wiring
Lead Dress

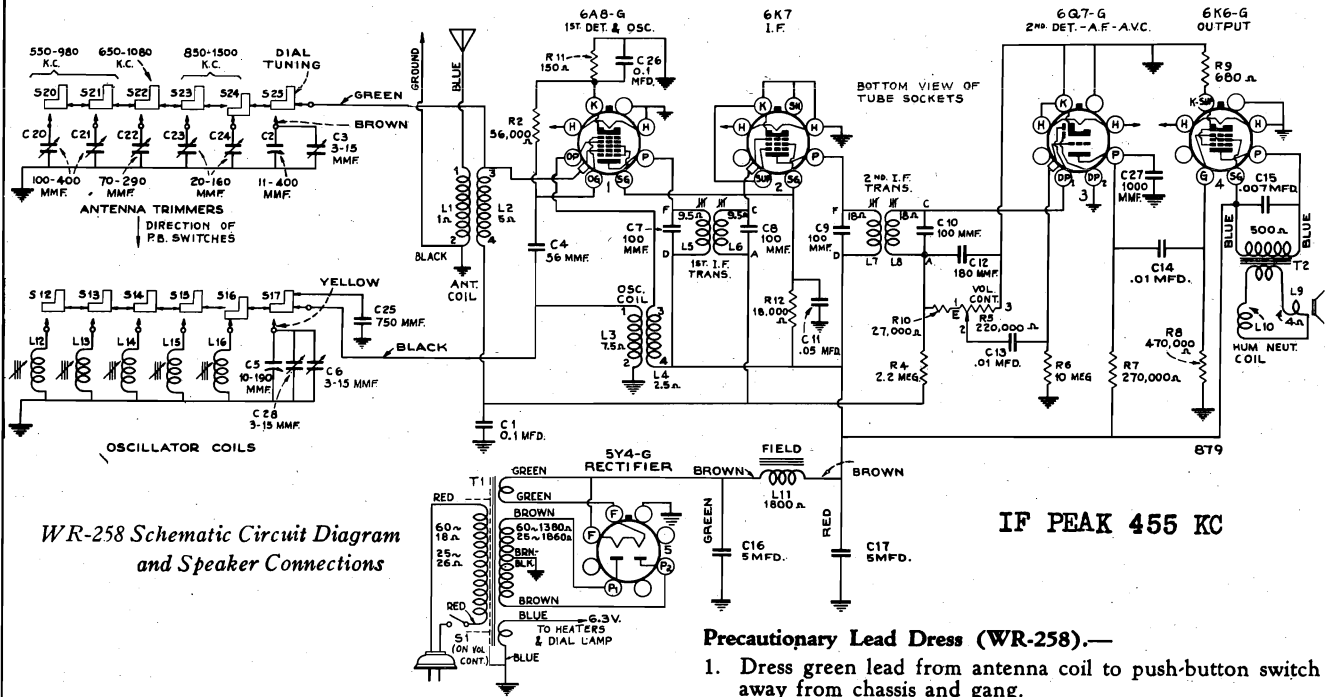

WR-258 Schematic Circuit Diagram and Speaker Connections

Precautionary Lead Dress (WR-258).—

1. Dress green lead from antenna coil to push-button switch away from chassis and gang.
2. Dress green leads on push-button unit close to coils and away from adjustment screws.
3. Dress power cord and transformer primary leads toward left end of chassis.
4. Dress C27 close to chassis and clear of gang rotor.

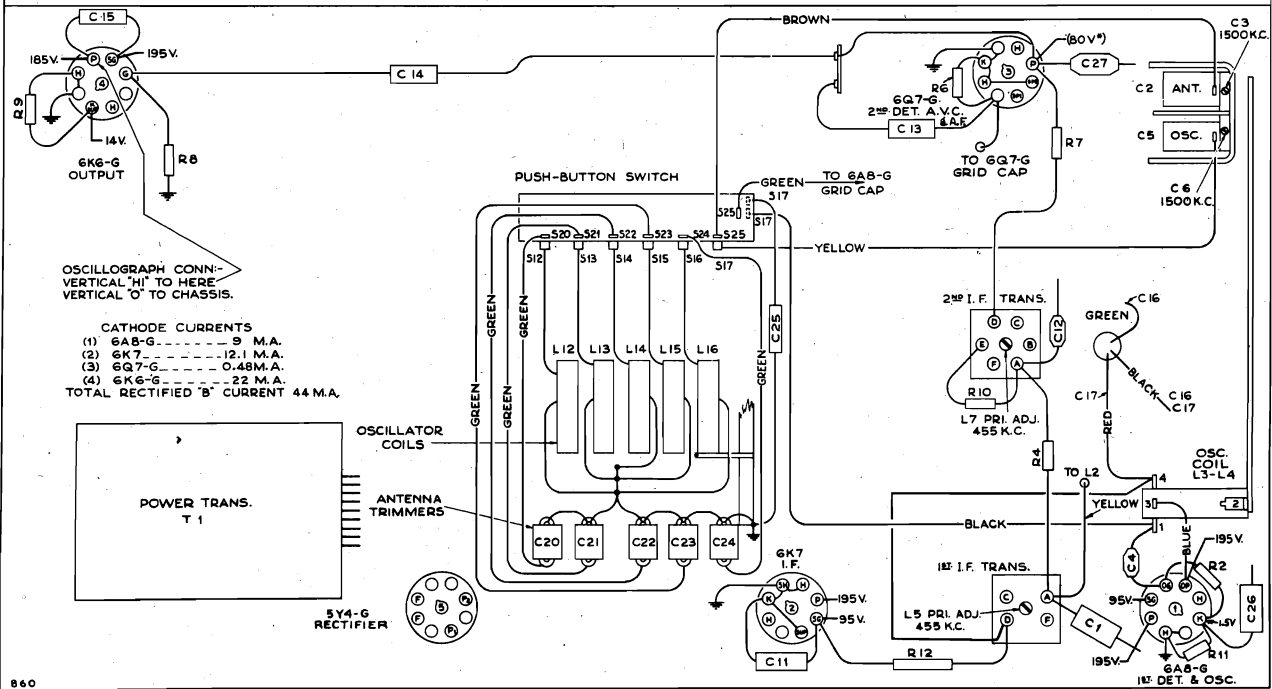

WR-258 Bottom View of Chassis Showing Socket Voltages, Parts Location, and R-F Wiring

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within approximately $\pm 20\%$ with 117-volt a-c supply.


NOTE: Values with star () are operating voltages in circuits with high series-resistance. These voltages will be

lower when measured with a voltmeter drawing current through the circuit. Exact voltage may be measured with a vacuum-tube voltmeter if desired. The other values will not be affected by measuring with an ordinary high-resistance voltmeter.

Chassis Wiring
Lead Dress

WESTINGHOUSE ELEC. SUPPLY CO MODEL WR260(All Runs) Schematic, Voltage




IF PEAK 455 KC

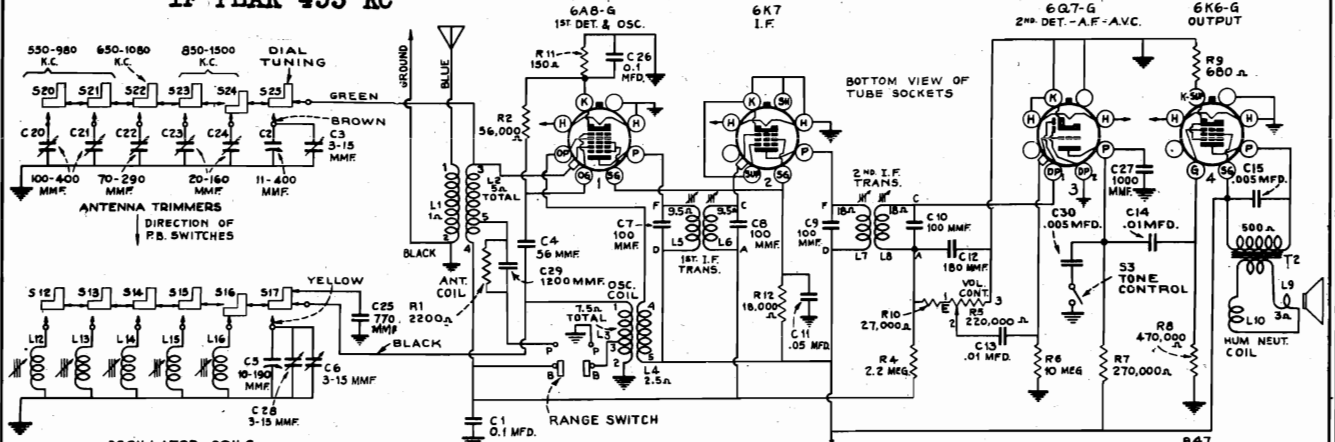

WR-260 Schematic Circuit Diagram

Precautionary Lead Dress (WR-260).—

1. Dress green lead from antenna coil to push-button switch away from chassis and gang.
2. Dress green leads on push-button unit close to coils and away from adjustment screws.
3. Dress power cord and transformer primary leads toward left end of chassis.
4. Dress C27 close to chassis and clear of gang rotor.
5. Keep bus lead from oscillator coil to range switch as short and direct as possible.
6. Dress leads from range switch away from oscillator coil.
7. Dress R1 and C29 away from antenna coil.

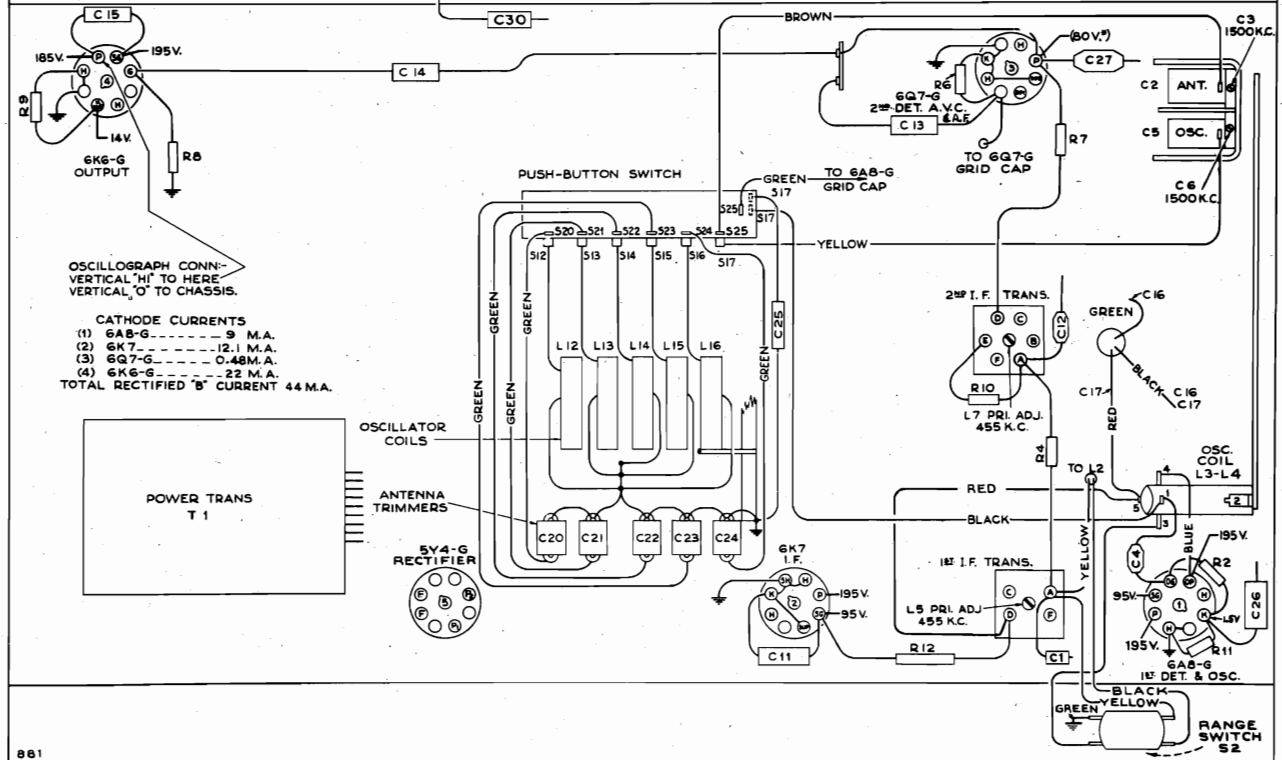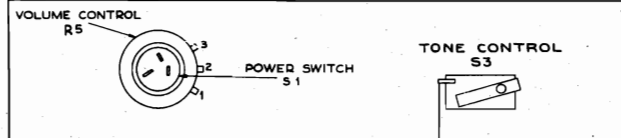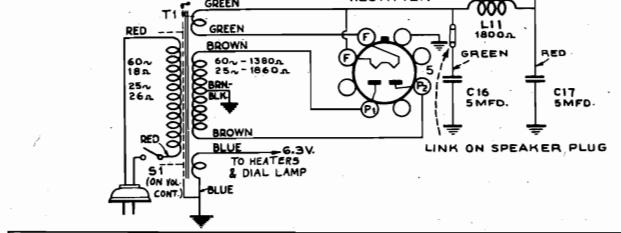

WR-260 Bottom View of Chassis Showing Socket Voltages, Parts Location, and R-F Wiring

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within approximately $\pm 20\%$ with 117-volt a-c supply.

NOTE: Values with star () are operating voltages in circuits with high series-resistance. These voltages will be


lower when measured with a voltmeter drawing current through the circuit. Exact voltage may be measured with a vacuum-tube voltmeter if desired. The other values will not be affected by measuring with an ordinary high-resistance voltmeter.

MODEL WR258
MODEL WR260

WESTINGHOUSE ELEC. SUPPLY CO.

Runs A, B, C, etc.
Alignment, Tuner

Adjustments for Electric Tuning

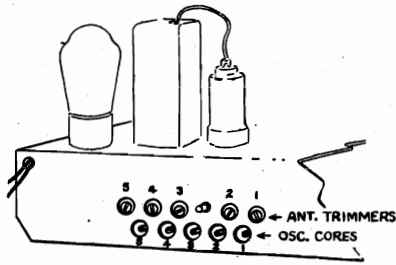

Nos. 1, 2*—Approximately 550-980 kc.
No. 3—Approximately 650-1,080 kc.
Nos. 4, 5—Approximately 850-1,500 kc.

Push Button Adjustments

* NOTE: On runs A and B, the range of No. 2 push button is approx. 650 to 1,080 kc. C21 is 70-290 mmfd. Use Part No. 31416 capacitor bank and Part No. 31384 coil (L13) for replacements. On runs C and above, the range of No. 2 push button is approx. 550 to 980 kc. C21 is 100-400 mmfd. Use Part No. 32066 capacitor bank and Part No. 31415 coil (L13) for replacements. The run letter is stamped on rear apron of chassis after code number—examples: 8T29B, 8023C, etc., also the letters "MOD" are stamped on rear apron of runs C or later.

These models have six push buttons. The right-hand button connects the gang condenser for dial tuning. The other five buttons are for electric tuning of five different stations in the standard-broadcast range. The station buttons connect to separate magnetically tuned oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool. Allow at least five minutes warm-up period before making adjustments. Use a regular antenna for the preliminary adjustments. The procedure is as follows:

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing. Turn the receiver volume control to maximum.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.


Calibration Marks.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment. Therefore calibration marks corresponding to dial readings of 600 kc and 1,500 kc have been stamped in the plate on the front of the chassis, as shown in the accompanying drawing. These marks are used for reference during alignment.

Drum and Dial Indicator Adjustment.—As the first step in r-f alignment, check the position of the drum on the front shaft of the gang condenser. With the gang at maximum

1. Make a list of the five desired stations, arranged in order from low to high frequencies.
2. Push in the dial-tuning (right-hand) button, and manually tune in the first station on the list. On Model WR-260, set range switch on rear of set to "Broadcast" position (switch up).
3. Push in station-button No. 1 (left-hand) and adjust No. 1 oscillator core (L12) to receive this station. Screw the core all the way in, to lowest frequency, and then unscrew slowly until the station is received.
4. Adjust No. 1 antenna trimmer (C20) for maximum output on this station.
5. Adjust for each of the remaining four stations in the same manner.

(Clockwise adjustment of oscillator cores and antenna trimmers tunes the circuits to lower frequencies.)

6. Make a final careful adjustment of the oscillator cores and antenna trimmers, using one or two feet of wire as an antenna to ensure sharp peaking.

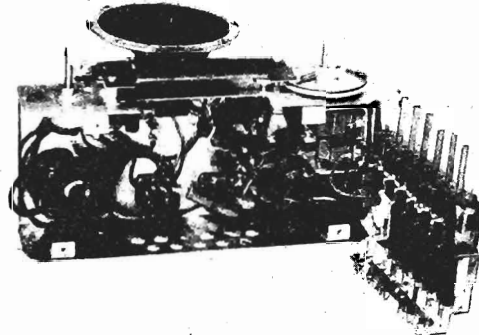

The Push-Button Assembly is fastened to the chassis by only two screws, and may be quickly and easily swung out for convenient access to the sockets and other parts, as shown in the above illustration.

(full mesh) the drum set-screw should be pointing in the direction shown in the drawing. With the drum in this position, and the gang at maximum, move the dial indicator along the drive cord to coincide with the left-hand line as shown. The indicator is held to the drive cord by means of spring clips.

After completion of alignment, and after the chassis has been fastened in the cabinet, turn the gang to maximum and note whether the dial indicator is at the left-hand end mark on the dial; if it is not, loosen the drum set-screw (which is accessible through a slot in the bottom of the cabinet), turn the drum slightly so that the indicator is at this mark, and then tighten the set-screw.

After completion of alignment, seal the i-f core-adjustment screws with household cement.

The dial tuning (right hand) push button must be pushed in for steps 1 to 3, inclusive.


On Model WR-260, set range switch to "Broadcast" position (switch up) and tone control clockwise.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	Quiet point between 550-750 kc	L7 and L8 (2nd I-F Trans.)
2	6A8-G grid cap, in series with .01 mfd.	455 kc		L5 and L6 (1st I-F Trans.)
3	Antenna lead (blue) in series with 200 mmf.	1,500 kc	1,500 kc calibration mark	C6 (osc.)† C3 (ant.)
4	Follow "Adjustments for Electric Tuning."			

† The oscillator section of the gang condenser has two trimmers, one on top, accessible through a hole in the chassis, and the other on bottom. It may be necessary to adjust both of these trimmers to secure a peak on 1,500 kc.

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR270
Schematic, Voltage
Phono Data

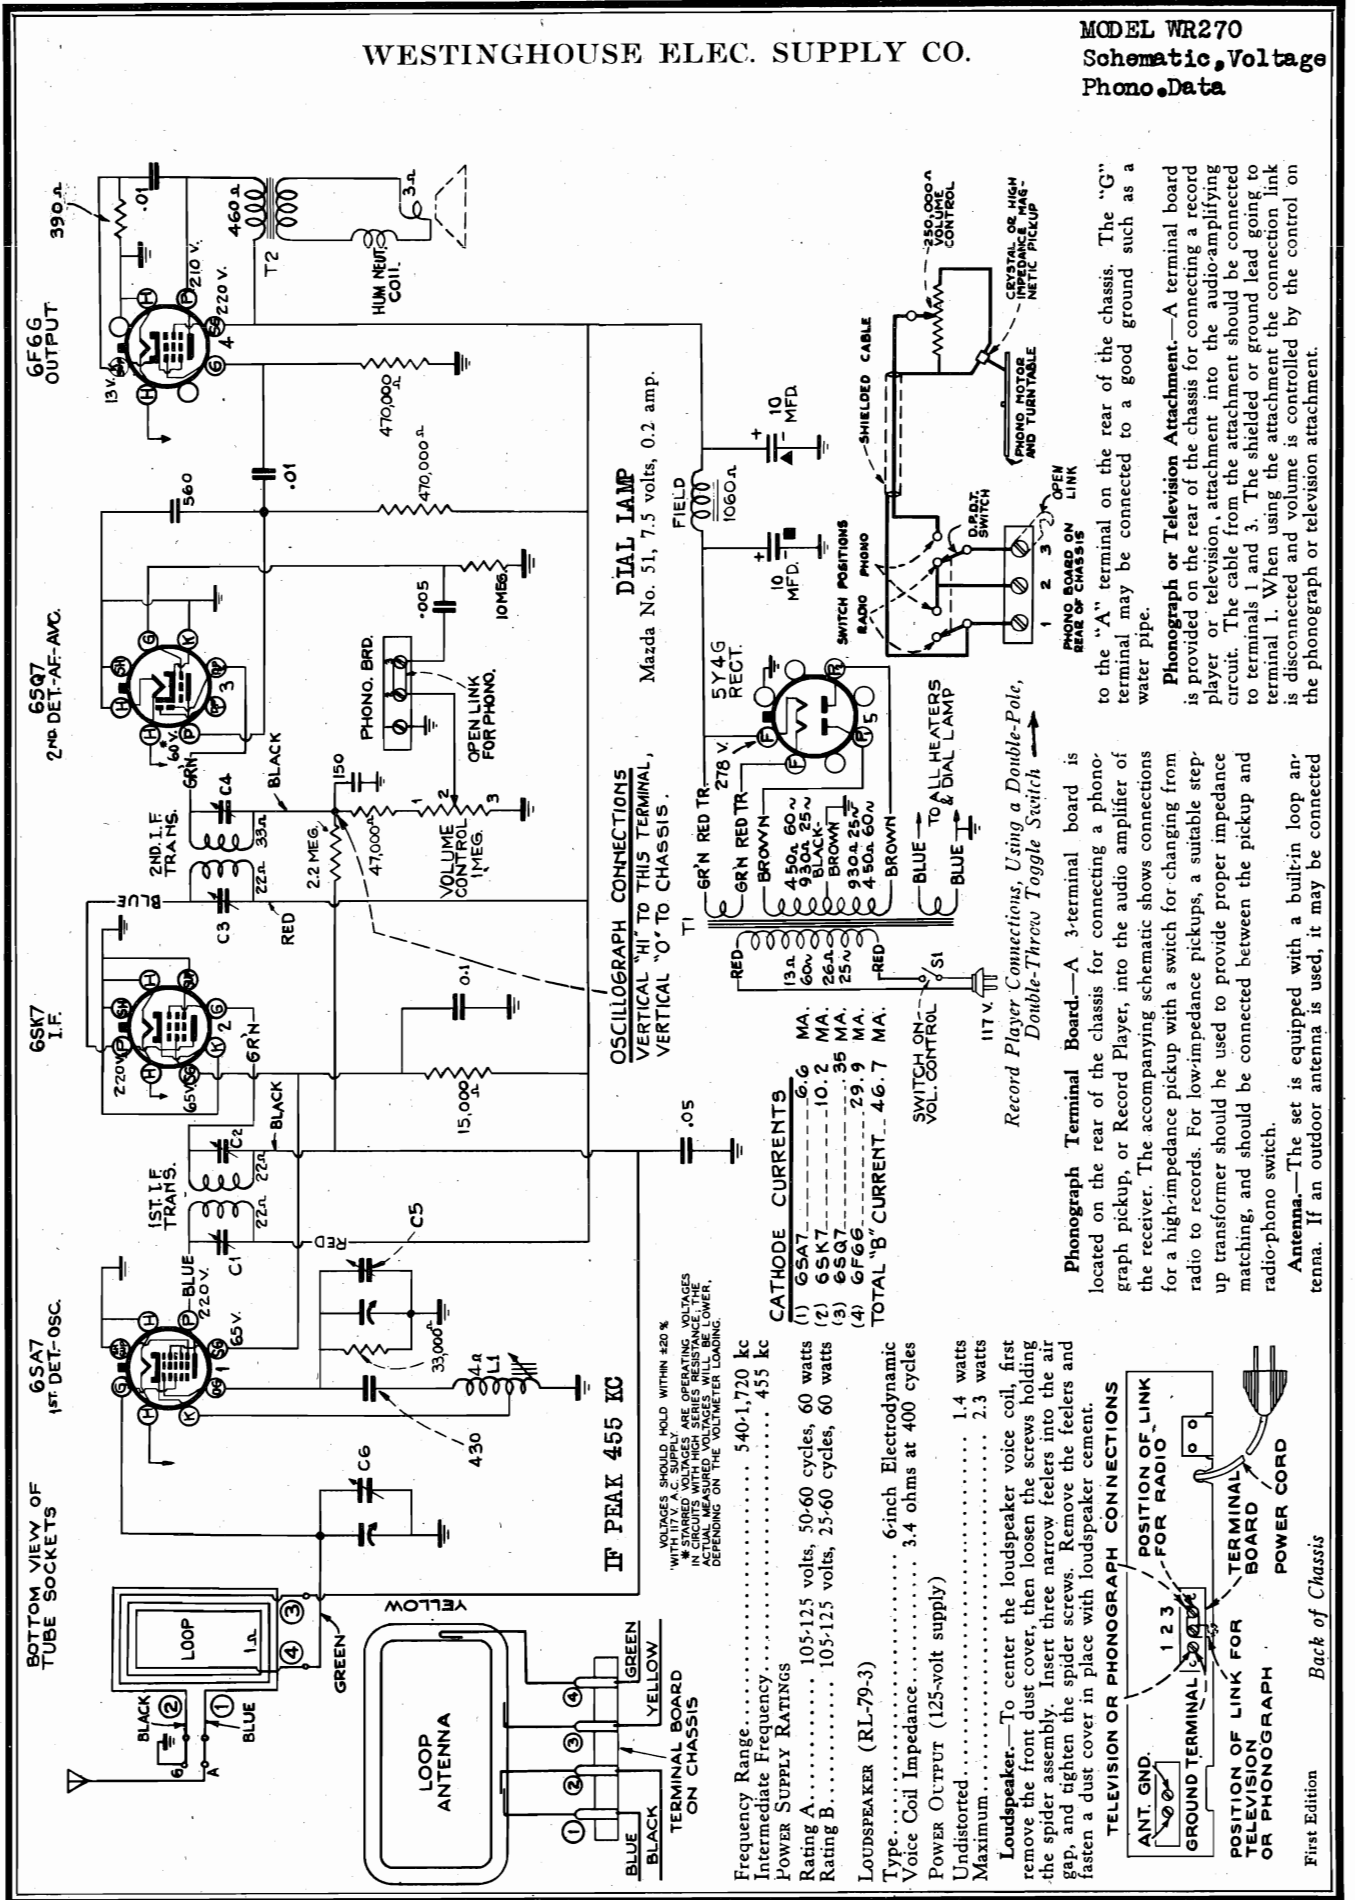

MODEL WR270
Alignment, Socket
Trimmers, Tuner
Lead Dress

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR170
Tuner Data

Alignment Procedure


Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown on the schematic drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test Oscillator.—For all alignment operations, connect the low side of the test oscillator to the receiver chassis, and keep the oscillator output as low as possible to avoid a-v-c action.

Calibration Marks.—The tuning dial is fastened in the cabinet and can not be used for reference during alignment. Therefore calibration marks have been stamped in the plate on the front of the chassis as shown in the accompanying drawing. These marks are used for reference during alignment.

Dial Indicator Adjustment.—With the gang condenser in full mesh, the indicator should point to the extreme left (low frequency) mark on the dial scale.

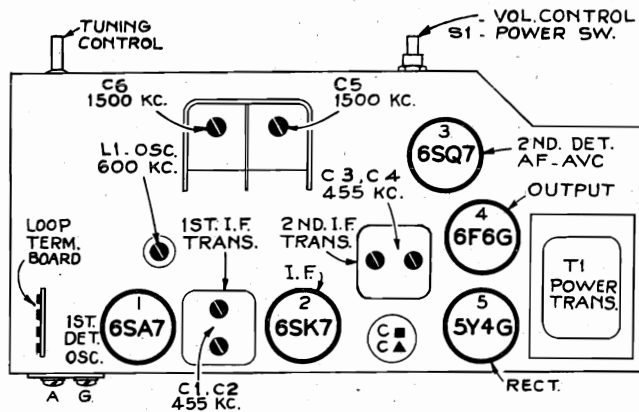

Tube and Trimmer Locations

Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	Antenna Terminal	455 kc	Quiet Point between 1,720-1,500 kc	C3 and C4 (2nd I-F Trans.)
2				C1 and C2 (1st I-F Trans.)
3	Ant. terminal in series with 200 mmfd.	1,500 kc	1,500 kc calibration mark	C5 (osc.) C6 (ant.)
4		600 kc	600 kc calibration mark	L1 (osc.)*
5	Repeat step 3.			

Note.—Oscillator tracks above signal.

* Rock gang condenser slightly while adjusting L1.

PRECAUTIONARY LEAD DRESS.—


1. Power cord leads must be dressed away from 6SQ7 socket, and toward end of chassis.
2. Green lead 2nd I.F. to 6SQ7 must be dressed against base.

3. Blue lead 2nd I.F. to 6SK7 must be dressed close to base.
4. Green and blue leads from 1st I.F. transformer must be dressed close to base.
5. Green lead from gang to 6SA7 socket must be dressed toward side apron away from other parts.

Adjustments for Push-Button Tuning

The push-buttons should be adjusted for six favorite stations after the receiver has been operating for a brief warm-up period. Each button may be set up to any standard broadcast station. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:

1. Loosen the push buttons by turning counter-clockwise about one turn from their tight position so they turn freely.
2. Check to be sure the link connection on back of chassis is in "Radio" position (connected between terminals 2 and 3).
3. Press in push-button No. 1 (left) as far as it will go without undue pressure, hold in, retune station with manual control if necessary for best reception, and then carefully tighten up the button. Do not tighten more than 1/4 turn after the screw begins to grip or damage to the-mechanism may result.
4. Proceed in a similar manner for the remainder of the push-buttons.
5. Insert the station marker tabs in the recesses above the push-buttons.

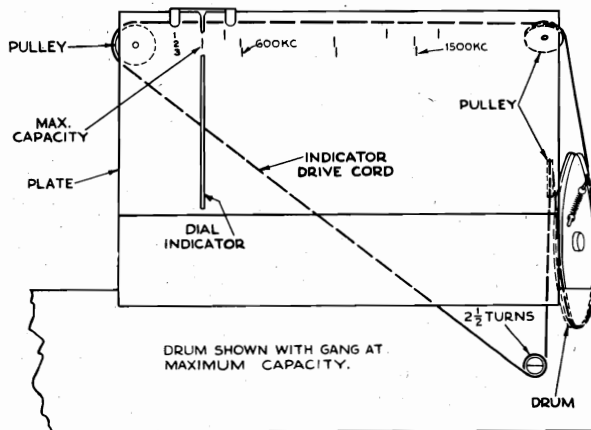


Dial-Indicator and Drive Mechanism

Refer to "Alignment Procedure" for explanation of the "calibration marks" shown in this drawing.

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR170
Schematic, Voltage
Alignment, Trimmers
Socket, Phono, Data
 50L6GT
 OUTPUT

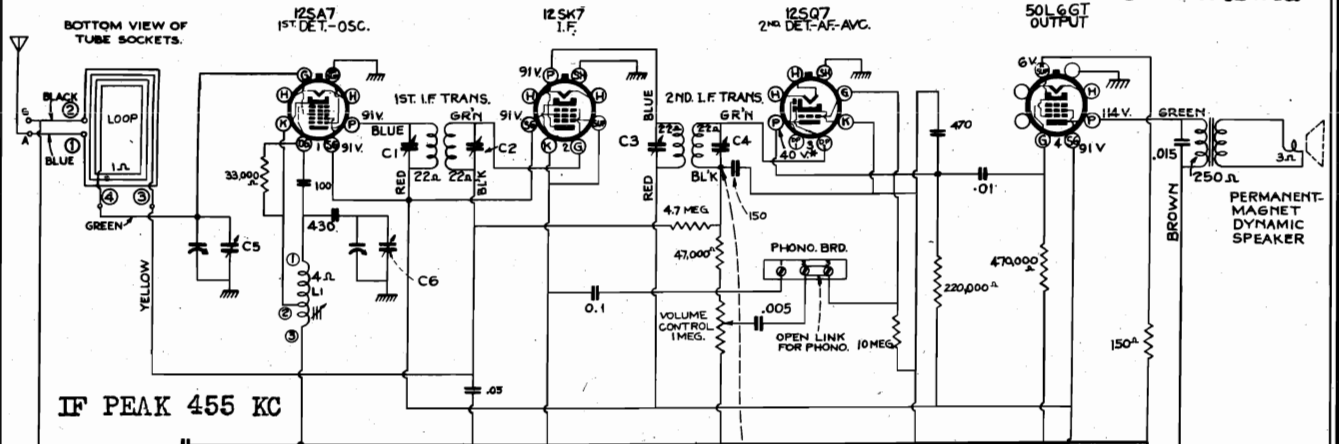



POWER SUPPLY RATINGS:
 A-C Rating . 105-125 volts, 50-60 cycles, 35 watts
 D-C Rating . 105-125 volts, direct current, 35 watts

LOUDSPEAKER (84737#2)
 Type 6-inch permanent magnet dynamic
 Voice Coil Impedance 4 ohms at 400 cycles


FREQUENCY RANGE 540-1,720 kc
INTERMEDIATE FREQUENCY 455 kc

CATHODE CURRENTS
 (1) 12SA7 10.2 MA.
 (2) 12SK7 16.9 MA.
 (3) 12SQ7 0.14 MA.
 (4) 50L6GT 40.6 MA.
TOTAL "B" CURRENT 68 MA.



OSCILLOGRAPH CONNECTIONS
 VERTICAL "HI" TO THIS TERMINAL
 VERTICAL "0" TO GROUND BINDING POST

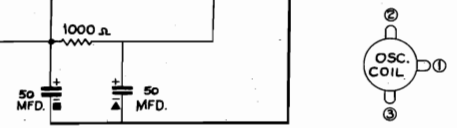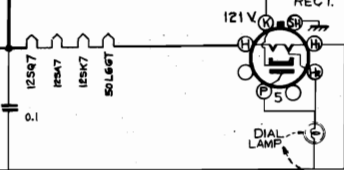

POWER OUTPUT (125 volts, 60 cycle supply)
 Undistorted 0.8 watts
 Maximum 1.4 watts

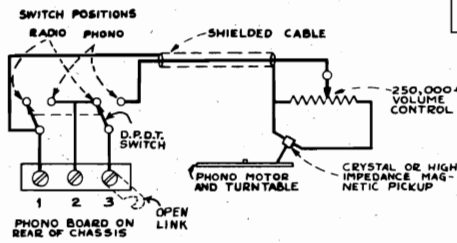


Mazda No. 51, 7.5 volt, 0.2 amp.

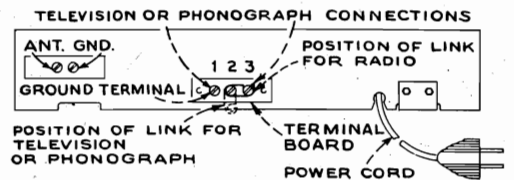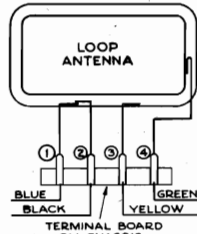


Back of Chassis

Record Player Connections, Using a Double-Pole, Double-Throw Toggle Switch

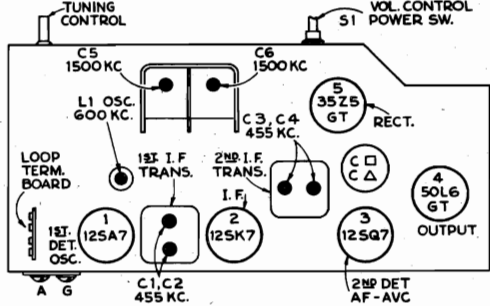

Tube and Trimmer Locations

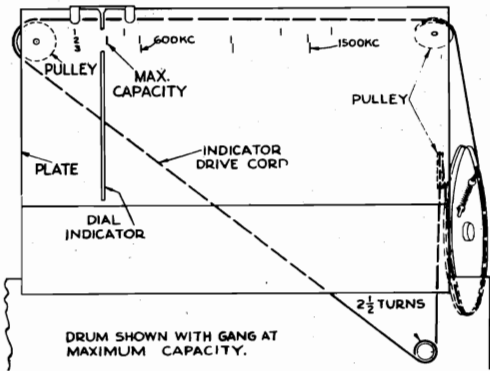

Dial-Indicator and Drive Mechanism

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown on the schematic drawing.

Output Meter Alignment.—If this method is used, connect the output meter across the voice coil, and turn the receiver volume control to maximum.

Test Oscillator.—For all alignment operations, connect the low side of the test oscillator to the receiver ground binding post, and keep the oscillator output as low as possible to avoid a-v-c action.

Calibration Marks.—The tuning dial is fastened in the cabinet and can not be used for reference during alignment. Therefore calibration marks have been stamped in the plate on the front of the chassis as shown in the accompanying drawing. These marks are used for reference during alignment.


Dial Indicator Adjustment.—With the gang condenser in full mesh, the indicator should be set 1/16 inch to the left of the extreme left (low frequency) mark on the dial scale.

Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn radio dial to	Adjust the following for maximum peak output
1	Ant. terminal	455 kc	Quiet Point	C3 and C4 (2nd I-F trans.)
2	Ant. terminal	1,720-1,500 kc	between 1,720-1,500 kc	C1 and C2 (1st I-F trans.)
3	Ant. terminal in series with 200 mmfd.	1,500 kc	1,500 kc calibration mark	C6 (osc.) C5 (ant.)
4		600 kc	600 kc calibration mark	L1 (osc.) (Rock in)
5	Repeat step 3.			

NOTE.—Oscillator tracks above signal.

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR366
Chassis Wiring
Voltage

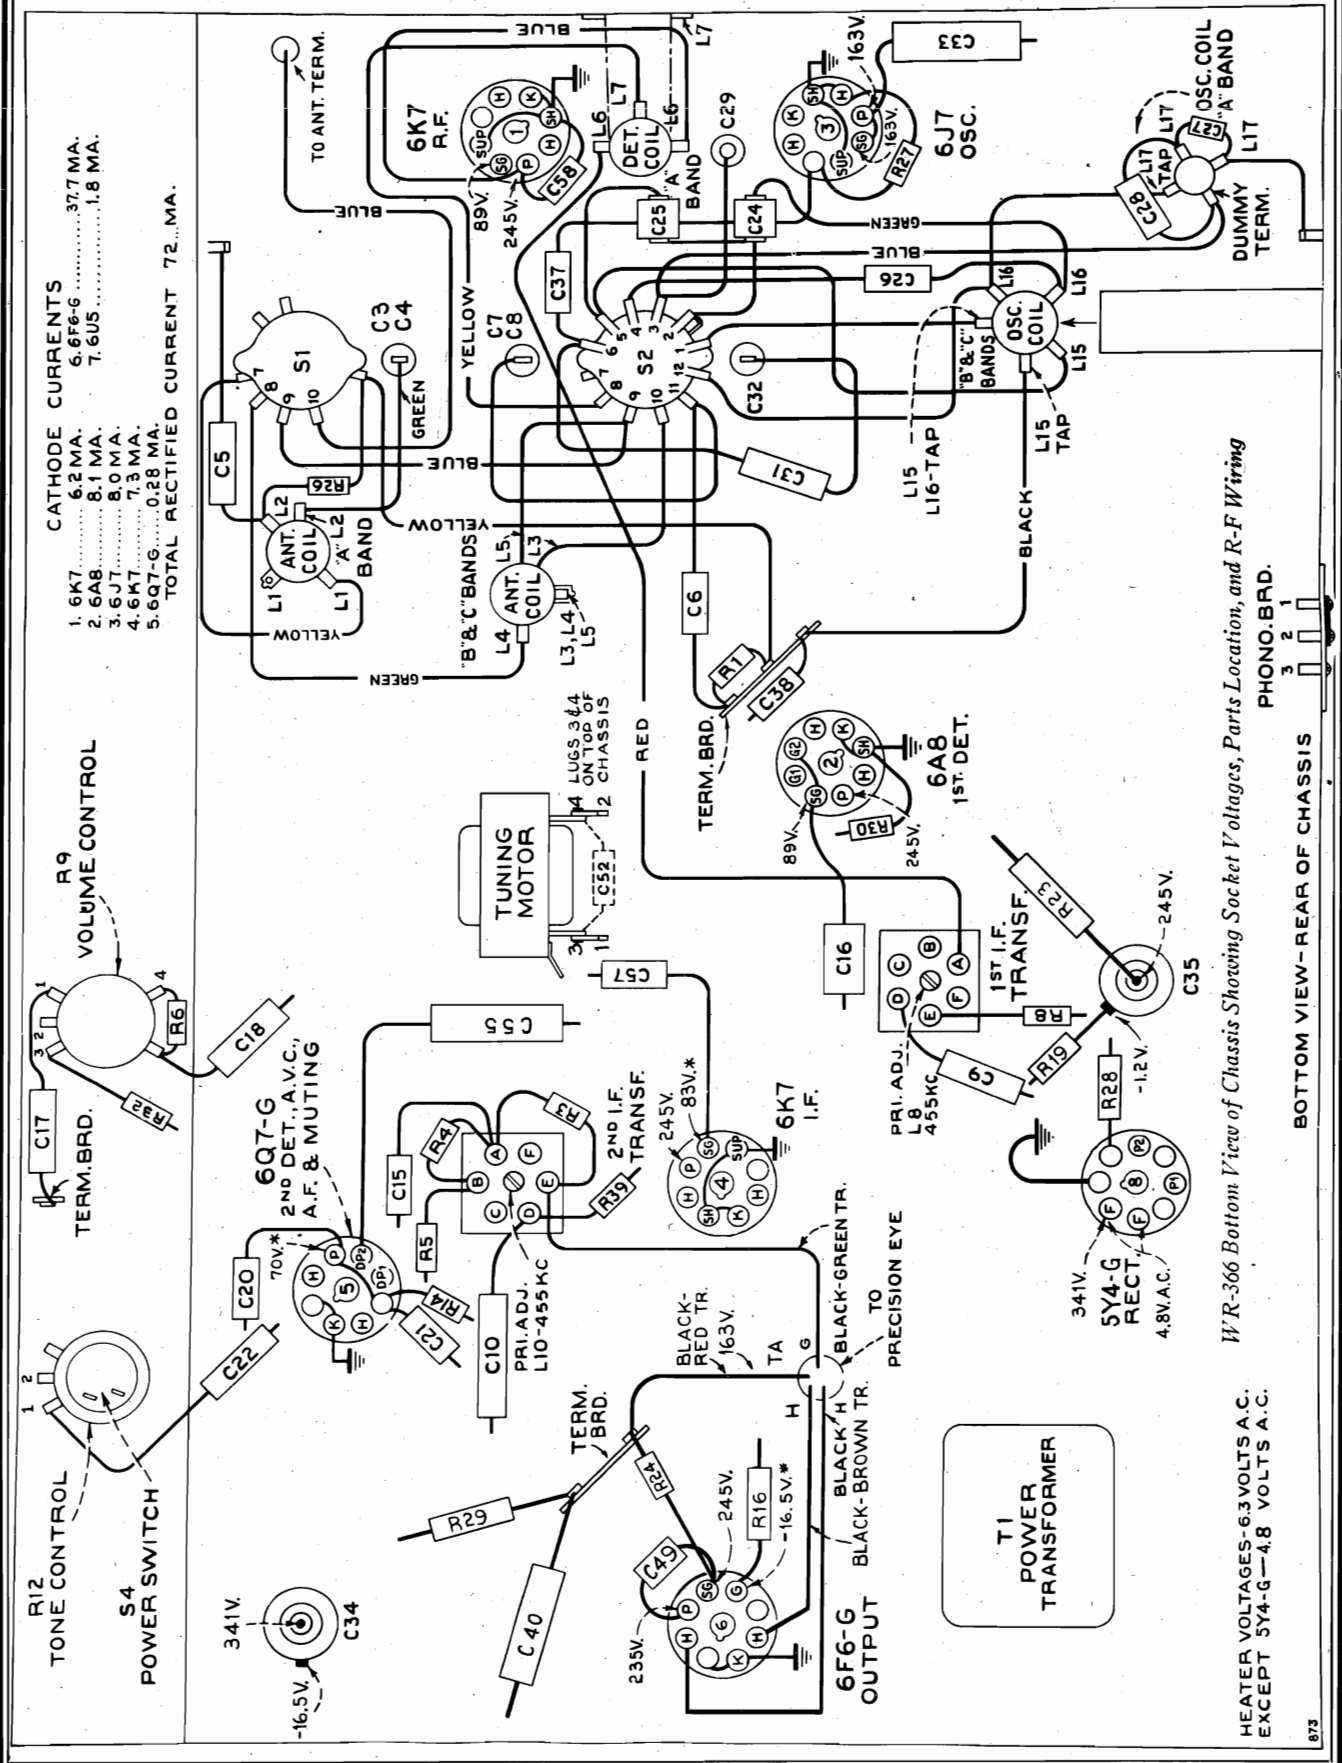

WR-366 Bottom View of Chassis Showing Socket Voltages, Parts Location, and R-F Wiring

PHONO.BRD.

BOTTOM VIEW-REAR OF CHASSIS

MODEL WR366

MODEL WR368

Socket, Trimmers

Drive Cord Data

WESTINGHOUSE ELEC. SUPPLY CO.

Electrical Specifications

FREQUENCY RANGES

"Standard Broadcast" (A)..... 540-1,720 kc
 "Medium Wave" (B)..... 2.3-7 mc
 "Short Wave" (C)..... 7-22 mc

R-F ALIGNMENT FREQUENCIES

"Short Wave" (C)..... 20 mc (osc., ant.)
 "Medium Wave" (B)..... 6.1 mc (osc.)
 "Standard Broadcast" (A). 600 kc (osc.), 1,500 kc (osc., ant.)

Intermediate Frequency..... 455 kc

TUBE COMPLEMENT (WR-366)

- (1) RCA-6K7..... R-F Amplifier
- (2) RCA-6A8..... First Detector
- (3) RCA-6J7..... Heterodyne Oscillator
- (4) RCA-6K7..... I-F Amplifier
- (5) RCA-6Q7-G..... 2nd Det., 1st A.F., A.V.C.
- (6) RCA-6F6-G..... Power Output
- (7) RCA-6U5..... Precision Eye
- (8) RCA-5Y4-G..... Rectifier

TUBE COMPLEMENT (WR-368)

- (1) RCA-6K7..... R-F Amplifier
- (2) RCA-6A8..... First Detector
- (3) RCA-6J7..... Heterodyne Oscillator
- (4) RCA-6K7..... I-F Amplifier
- (5) RCA-6Q7-G..... 2nd Det., 1st A.F., A.V.C.
- (6) RCA-6F5..... Phase Inverter
- (7) RCA-6F6-G..... Power Output
- (8) RCA-6F6-G..... Power Output
- (9) RCA-6U5..... Precision Eye
- (10) RCA-5U4-G..... Rectifier

Pilot Lamps (3)..... Center, Mazda No. 47, 6-8 V., 0.15 amp.; Sides, Mazda No. 44, 6.3 V., 0.25 amp.

POWER SUPPLY RATINGS

Rating A..... 105-125 volts, 50-60 cycles, 80 watts (WR-366), 120 watts (WR-368)
 Rating B..... 105-125 volts, 25-30 cycles, 80 watts (WR-366), 120 watts (WR-368)

POWER OUTPUT WR-366 WR-368

Undistorted..... 2.5 watts 10 watts
 Maximum..... 5 watts 12 watts

LOUDSPEAKER


Type..... 12-inch Electrodynamic
 Voice Coil Impedance..... 2.2 ohms at 400 cycles

General Description


Model WR-366 is an eight-tube, three-band, superheterodyne receiver employing electric motor tuning for nine broadcast stations and a Precision Eye for precise manual tuning. The tuning ranges cover the standard broadcast band, Municipal and State Police bands, and the American and Foreign short-wave broadcast bands. Among its features are: Continuously variable tone control, illuminated slide-rule

dial, automatic volume control, magnetically-tuned i-f transformers, r-f amplifier stage, phonograph terminal board, separate oscillator tube, and bass compensation.


The Model WR-368 is a ten-tube, three-band, superheterodyne receiver with all of the features of the WR-366 and in addition employing push-pull output with a phase inverter and a power output of 12 watts.

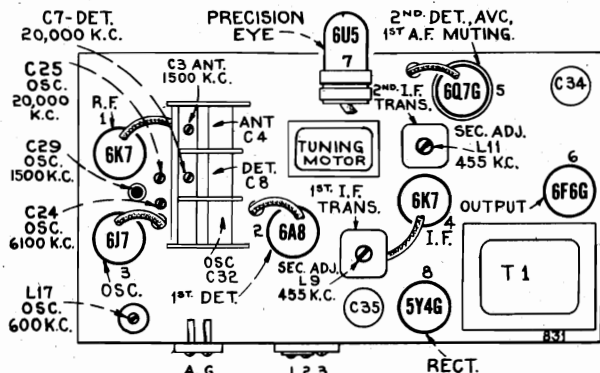



WR-366 Tube and Trimmer Locations

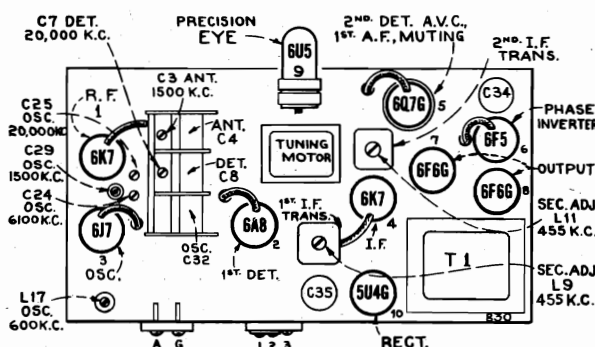

WR-368 Tube and Trimmer Locations

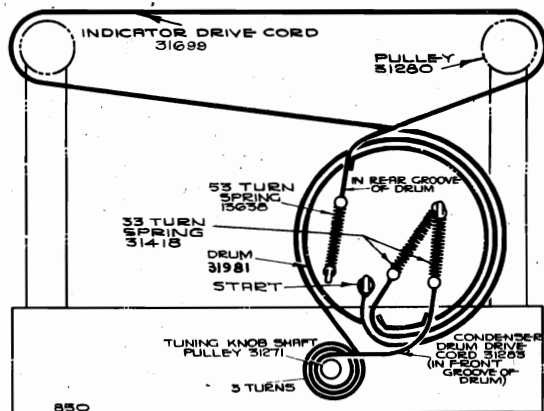

Drive Cord Arrangement for Tuning Condenser and Dial Indicator

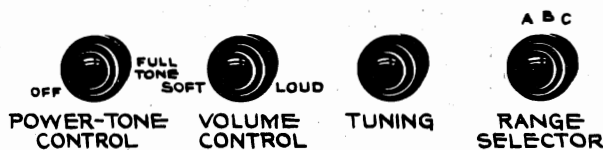

Location of Controls

**Tuner Assembly
Data, Part 1**

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR366
MODEL WR368
MODEL WR370

Electric Tuning Mechanism

The circuit of the electric tuning mechanism is shown in the schematic diagram, and the mechanical details are illustrated.

The action can be understood by following a cycle of operation:

When a station button is pushed in, it completes the 24-volt circuit through the corresponding station-setting contact and one-half of the brass selector disc, which is connected to one side of the motor field coil. This energizes the motor, and the rotor is pulled forward, engaging with the gear train that drives the tuning condenser and selector disc. The condenser and disc rotate until the insulation line comes under the particular station-setting contact, and the motor circuit is broken. Inertia carries the insulation line past the station-setting contact which then makes contact to the other half of the disc. This completes the circuit to the other side of the motor field coil, causing the motor to reverse. The floating flywheel is still turning in the original direction and therefore slows down the reversal movement of the motor; as a result the selector disc is moved slowly back until the insulation line is under the station-setting contact, when the circuit is broken and the mechanism stops.

consistency of operation depends mainly on the flywheel friction adjustment, however, in some cases the selector disc and station setting contacts are involved. The following suggestions may be helpful where excessive pointer oscillation is experienced.

Oscillation on Certain Buttons Only


- (1) Check contact tip of selector assembly for loose fit in body. See that nose of contact is not burned nor distorted out of correct shape. Replace tip if necessary; do not attempt to file the tips.
- (2) Clean the insulating gap of selector disc, being sure to remove all metal particles and metallic fragments from beveled edges of the brass. Each contact should be checked to assure that clearance exists (approx. .010-in) between it and the disc when stopped in position on the station.
- (3) Inspect the insulating gap to see that it has not changed shape due to bending or warping. Replace the disc if cleaning and adjustment fail to give correct operation.

Oscillation of Tuning Mechanism

The principal of operation necessitates that the mechanism go through several quick reversals on arriving at the desired station frequency and before reaching a dead stop. Three of four reversals are normal. The number of reversals and

Oscillation On All Buttons

- (1) Slow oscillation indicates friction adjustment of flywheel is too tight. Loosen set screw in flywheel slightly.
- (2) Rapid oscillation indicates friction adjustment is too loose. Tighten set screw in flywheel slightly.

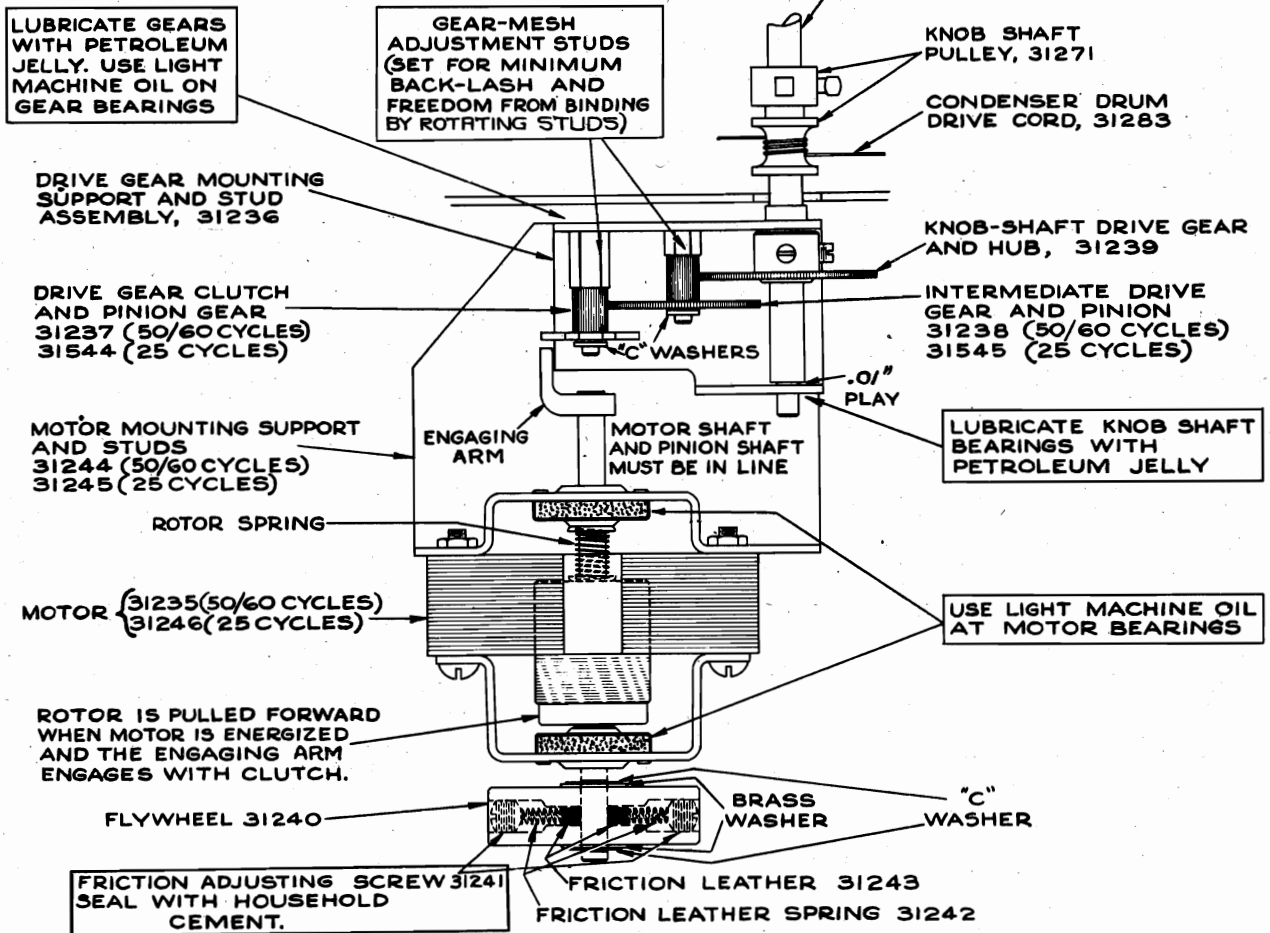

There must be 1/32-inch clearance between the end of the engaging arm and the face of the intermediate gear when the motor is in its full forward position.

Motor and Gear Mechanism

MODEL WR366
 MODEL WR368
 MODEL WR370

WESTINGHOUSE ELEC. SUPPLY CO.

Data, Part 2
 Tuner, Notes

- (3) If definite adjustment cannot be reached, remove spring from behind flywheel set screw and increase its length by stretching; replace and make the necessary adjustments. Install a new spring if necessary.
- (4) See that leather friction pad is not binding in its hole, and that it is saturated with lubricant. "Neats-Foot" oil should be used for this purpose.
- (5) Incorrect balance of the flywheel sometimes prevents correct adjustment. The standard service replacement flywheel Part No. 31240 may be used to definitely eliminate this cause.
- (6) The number of oscillations varies somewhat with line voltage. Avoid making adjustments at very low (105v) or very high (125v) voltages. Adjustments made at 115-118 volts provide good operation of the rated range.
- (7) Stability of adjustment is slightly better if made after a brief run-in period.

Adjustment of Selector Disc

The brass selector disc is fastened to the rear shaft of the tuning condenser by means of two set-screws. When the condenser is at maximum (plates fully meshed) the insulation line should be horizontal, with the beveled operating end at the left (viewed from rear).

The selector disc should be set so that the contact-tip plungers in the station-setting contacts project not more than 1/16-in. from the body of the contacts.

Muting Circuit

When the electric tuning mechanism is in action, the motor-supply voltage is fed into a diode rectifier circuit which applies a high bias to the first-audio amplifier. This prevents audio amplification and makes the set quiet or "mute" while the mechanism is operating.


Lubrication

Motor bearings and gear bearings; use light machine oil.
 Gear faces; use "Pure Oil No. 611" or petroleum jelly.
 Dial indicator pulleys and rails; use "Castordag" or petroleum jelly.


Selector disc; apply thin film of petroleum jelly.
 Friction leather on flywheel; apply "neats-foot" oil. When replacing leather, soak it for at least 24 hours in neats-foot oil, and insert in flywheel while dripping.

Push Button Adjustments

Push buttons which stick in the escutcheon may be corrected by centering the rubber retainer-bumper in the rear of the buttons and cementing the rubber in place with plasticon. If the buttons do not lock in place, the chassis may be too far back in the cabinet or the latch bar spring may be out of place.

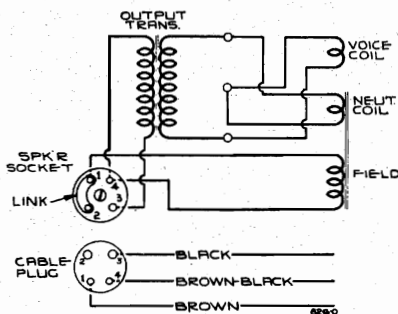


WR-366 Loudspeaker Wiring

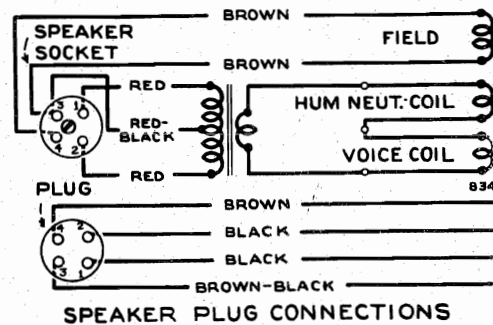


WR-368 Loudspeaker Wiring

Removing Speaker from Cabinet.—Hold the nuts, located between the speaker and baffle, with a pair of long-nose pliers while removing the speaker nuts. Normal shrinkage of the wood baffle may loosen the nuts so that the screws will otherwise turn while removing the speaker.

Centering the Speaker Voice-Coil.—The speaker voice-coil may be centered in the normal manner by using three narrow feelers to obtain equal spacing of the air-gap. The dust cover must be removed before centering. This may be done by gently cutting it free from the cone, being careful not to cut or damage the cone while doing so. After adjustment, a dust cover should be carefully cemented in place to prevent entrance of foreign material.

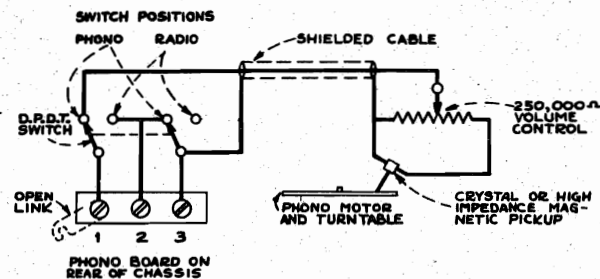

Phonograph Connections, Using a Double-Pole, Double-Throw Switch

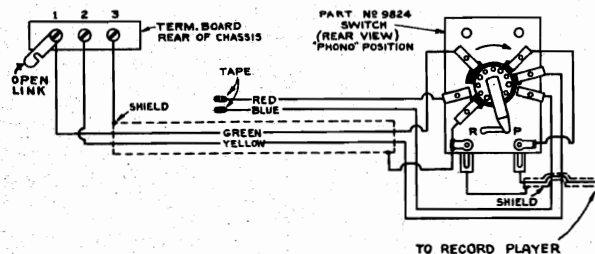

Model WR-366 Model WR-368
 Phonograph Connections, Using a Part No. 9824 Switch

Phonograph Terminal Board.—A 3-terminal board is located on the rear of the chassis for connecting a phonograph pickup, or Record Player, into the audio amplifier of the receiver. The upper diagram shows connections for a high-impedance pickup with a switch for changing from radio to records. For low-impedance pickups, a suitable step-up transformer should be used to provide proper impedance matching, and should be connected between the pickup and radio-phono switch. The volume control is optional since the radio volume control may be used to control record volume. The lower diagram shows Part No. 9824 switch and cable, and connections from cable to the phono terminal board. The pickup leads connect to terminals on the switch as shown.

MODEL WR370
Tuner Adjustments

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR366
MODEL WR368
Alignment
Tuner Adjustments

ALIGNMENT PROCEDURE

Cathode-Ray Alignment is the preferable method. Connect vertical "Hi" input to terminal No. 2 on phono board and vertical "0" to terminal No. 3.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Dial-Indicator Adjustment.—Before aligning this receiver it is essential to slide the indicator pointer along the drive cable until it points to the lowest frequency mark on "A" band, (520 kc) with the gang condenser fully meshed.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"A" band, Quiet Point between 550-750 kc	L10, L11 (2nd I-F Transformer)
2	6A8 det. grid cap, in series with .01 mfd.	455 kc		L8, L9 (1st I-F Transformer)
3	Antenna Terminal in series with 300 ohms.	20 mc	20 mc "C" band	C25 (osc.)* C7 (det.)†
4	Antenna Terminal in series with 300 ohms.	6.1 mc	6.1 mc "B" band	C24 (osc.)**
5	Antenna Terminal in series with 200 mmf.	1,500 kc	1,500 kc "A" band	C29 (osc.) C3 (ant.)
6	Antenna Terminal in series with 200 mmf.	600 kc	600 kc "A" band	L17 (osc.)
7	Antenna Terminal in series with 200 mmf.	1,500 kc	1,500 kc "A" band	C29 (osc.)

* Use minimum capacity peak if two peaks can be obtained. Check to determine that the correct peak has been used by turning to 19.09 mc, at which point a weaker signal should be received.

** Use minimum capacity peak if two peaks can be obtained. Check to determine that the correct peak has been used by turning to 5.19 mc, at which point a weaker signal should be received.

† Rock gang condenser and use maximum capacity peak if two peaks can be obtained with C7.


Note that oscillator tracks above (higher frequency) signal on all bands.

ADJUSTMENTS FOR ELECTRIC TUNING


Push buttons No. 1 to 9 are electric tuning station buttons. The right hand push button is for dial tuning.

1. Make a list of the desired nine stations, arranged in order from low to high frequencies.
2. Turn range selector to "A" band, turn power on, and allow a few minutes for warming up.
3. Press down the "dial-tuning" (right-hand) button.*
4. Manually tune in the first station on the list, using the Precision Eye for accurate tuning.
5. Hold down the "dial-tuning" button, and press down station button No. 1 (left). Both buttons will stay down, central dial lamp will light brightly or dully, depending on which side of the disc the contact is located. Move station-setting contact No. 1 to the insulating line on the disc at rear of gang. When the contact is correctly centered on the insulating line, the central dial lamp will go out.
6. Press down any other button in order to release the dial-tuning button and station button No. 1. Then press down station button No. 1 again. The electric tuning mechanism will function to tune in the station, and the central dial lamp will stay on.
7. Repeat this process for the remaining stations.

* WR-370 → Turn Fidelity Control maximum counter-clockwise.



Component Parts of Station-Setting Contact

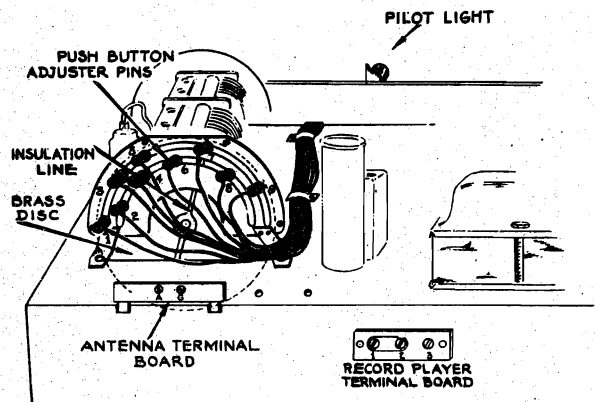


Station Button	Color of Lead To Station-Setting Contact
No. 1	Green-yellow
No. 2	Black
No. 3	Brown
No. 4	Blue
No. 5	Green
No. 6	Red
No. 7	Red-black
No. 8	Brown-black
No. 9	Red-yellow

Station-Setting Contacts and Selector Disc

MODEL WR368
Chassis Wiring
Voltage

WESTINGHOUSE ELEC. SUPPLY CO.

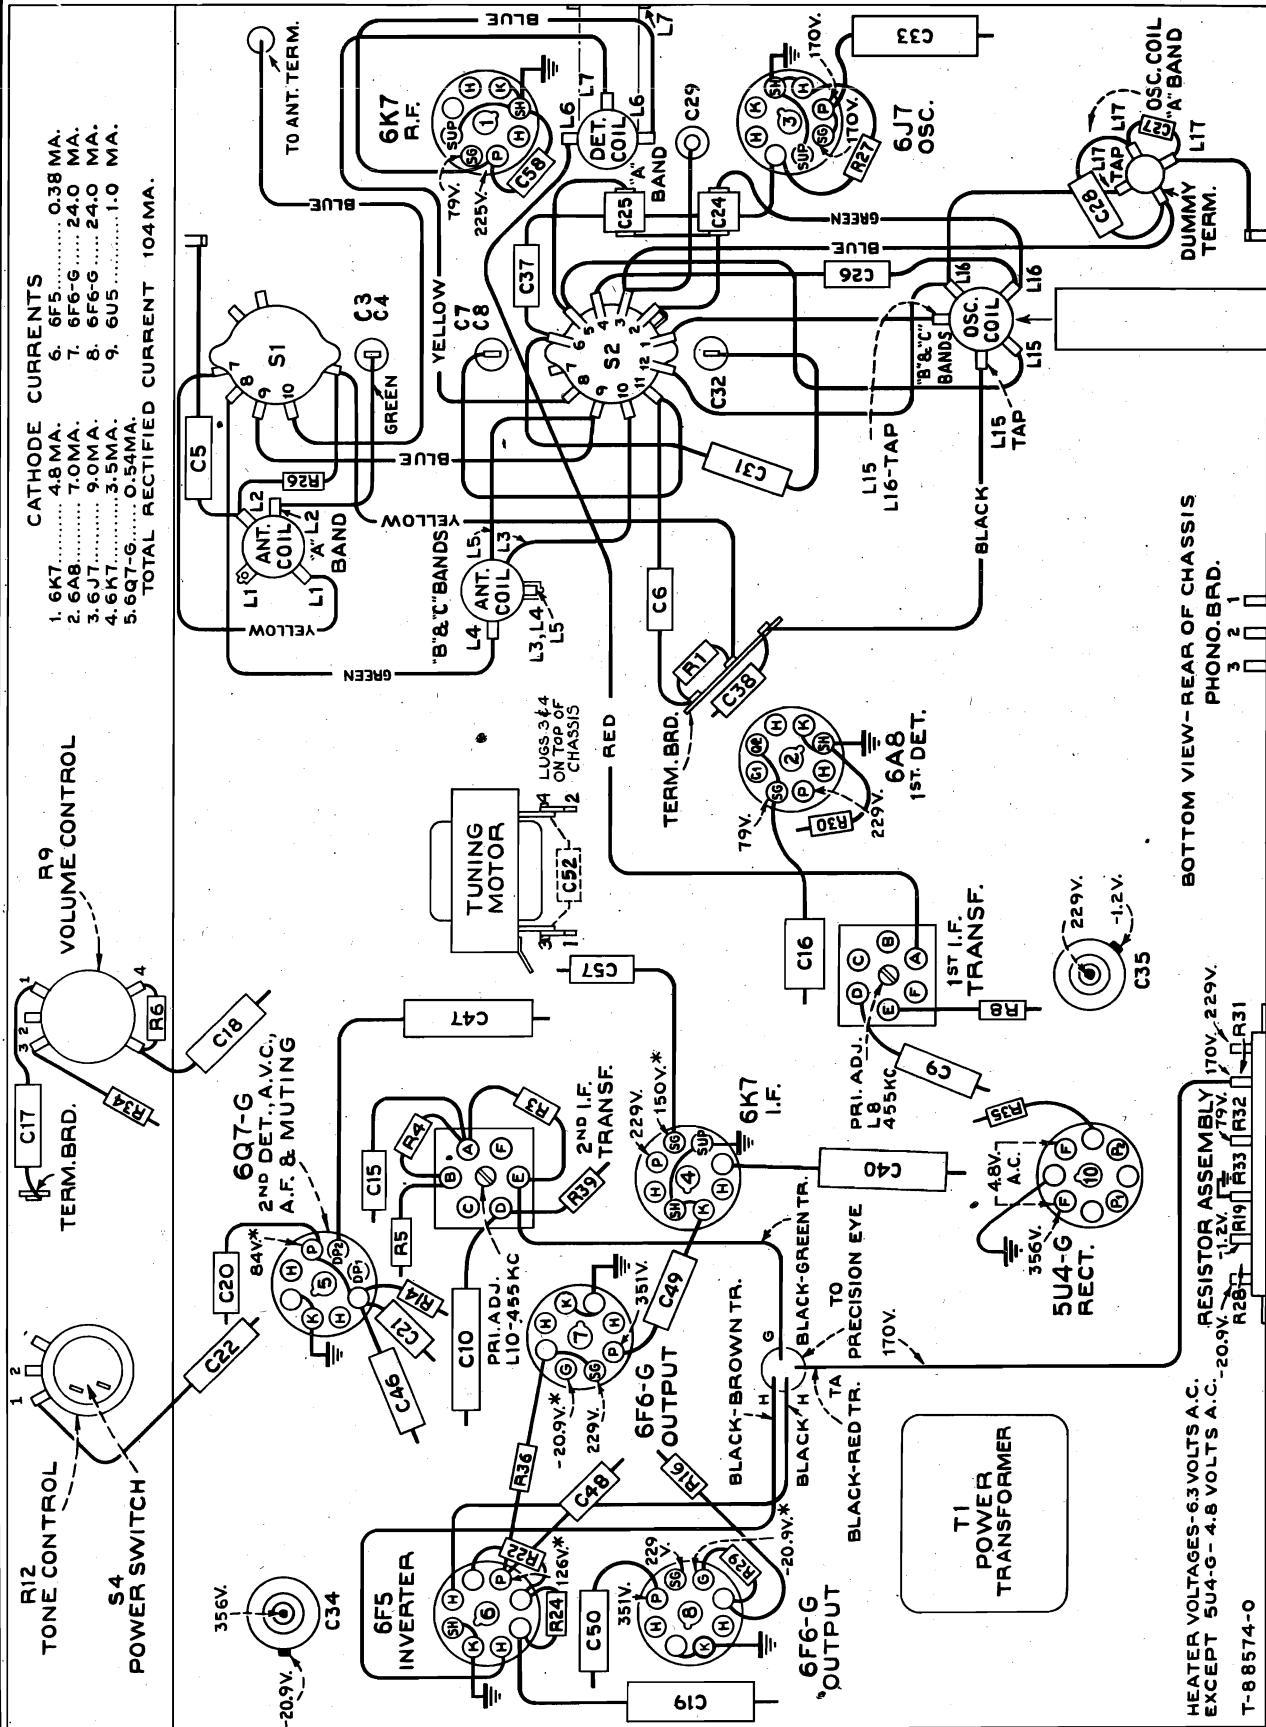

CATHODE CURRENTS

1. 6K7	4.8 MA.	6. 6F5	0.38 MA.
2. 6A8	7.0 MA.	7. 6F6-G	24.0 MA.
3. 6J7	9.0 MA.	8. 6F6-G	24.0 MA.
4. 6K7	3.5 MA.	9. 6U5	1.0 MA.
5. 6Q7-G	0.54 MA.		

TOTAL RECTIFIED CURRENT 104 MA.

BOTTOM VIEW-REAR OF CHASSIS
 PHONO.BRD.

WR-368 Bottom View of Chassis Showing Socket Voltages, Parts Location, and R-F Wiring

HEATER VOLTAGES-6.3 VOLTS A.C.
 EXCEPT 5U4-G- 4.8 VOLTS A.C.-20.9V.
 T-88574-0

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR368

Schematic Load Dress

* NOTE: Values with star (*) are operating voltages in circuits with high series-resistance. These voltages will be lower when measured with a voltmeter drawing current through the circuit. Exact voltage may be measured with a vacuum-tube voltmeter if desired. The other values will not be affected by measuring with an ordinary high-resistance voltmeter.

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within approximately ±20% with 117-volt a-c supply.

607-G A.V.C.
2ND DET. A.V.C.
B. MUTING

6F6-G OUTPUT

6F5 INVERTER

6F6-G OUTPUT

6G5 PRECISION EYE

6U4-G RECT.

6J7 OSC.

6K7 R.F.

6A8 1ST DETECTOR

PHONO BRD.

IF PEAK 455 KC

TUNING MOTOR


SELECTOR SW.

STATION SELECTOR SWITCHES

STATION SELECTOR & DIAL LAMP

PRECAUTIONARY Lead Dress.


1. Leads from the oscillator section of the range switch to 3. The leads from the power transformer and the power transformer and the power transformer should be kept together and dressed away from other parts as short as possible and dressed away from other parts and wiring.
2. The leads on C31 connecting between the range switch and the oscillator section of the gang should be made as short as possible.
3. The leads from the power transformer and the power transformer should be kept together and dressed away from other parts as short as possible and dressed away from other parts and wiring.
4. The .005 capacitor (C50) from the plate of tube No. 8 be affected by measuring with an ordinary high-resistance voltmeter.
5. The yellow lead connecting to the transformer motor with set tuned to quiet point and volume control at minimum. Values should hold within approximately ±20% with 117-volt a-c supply.

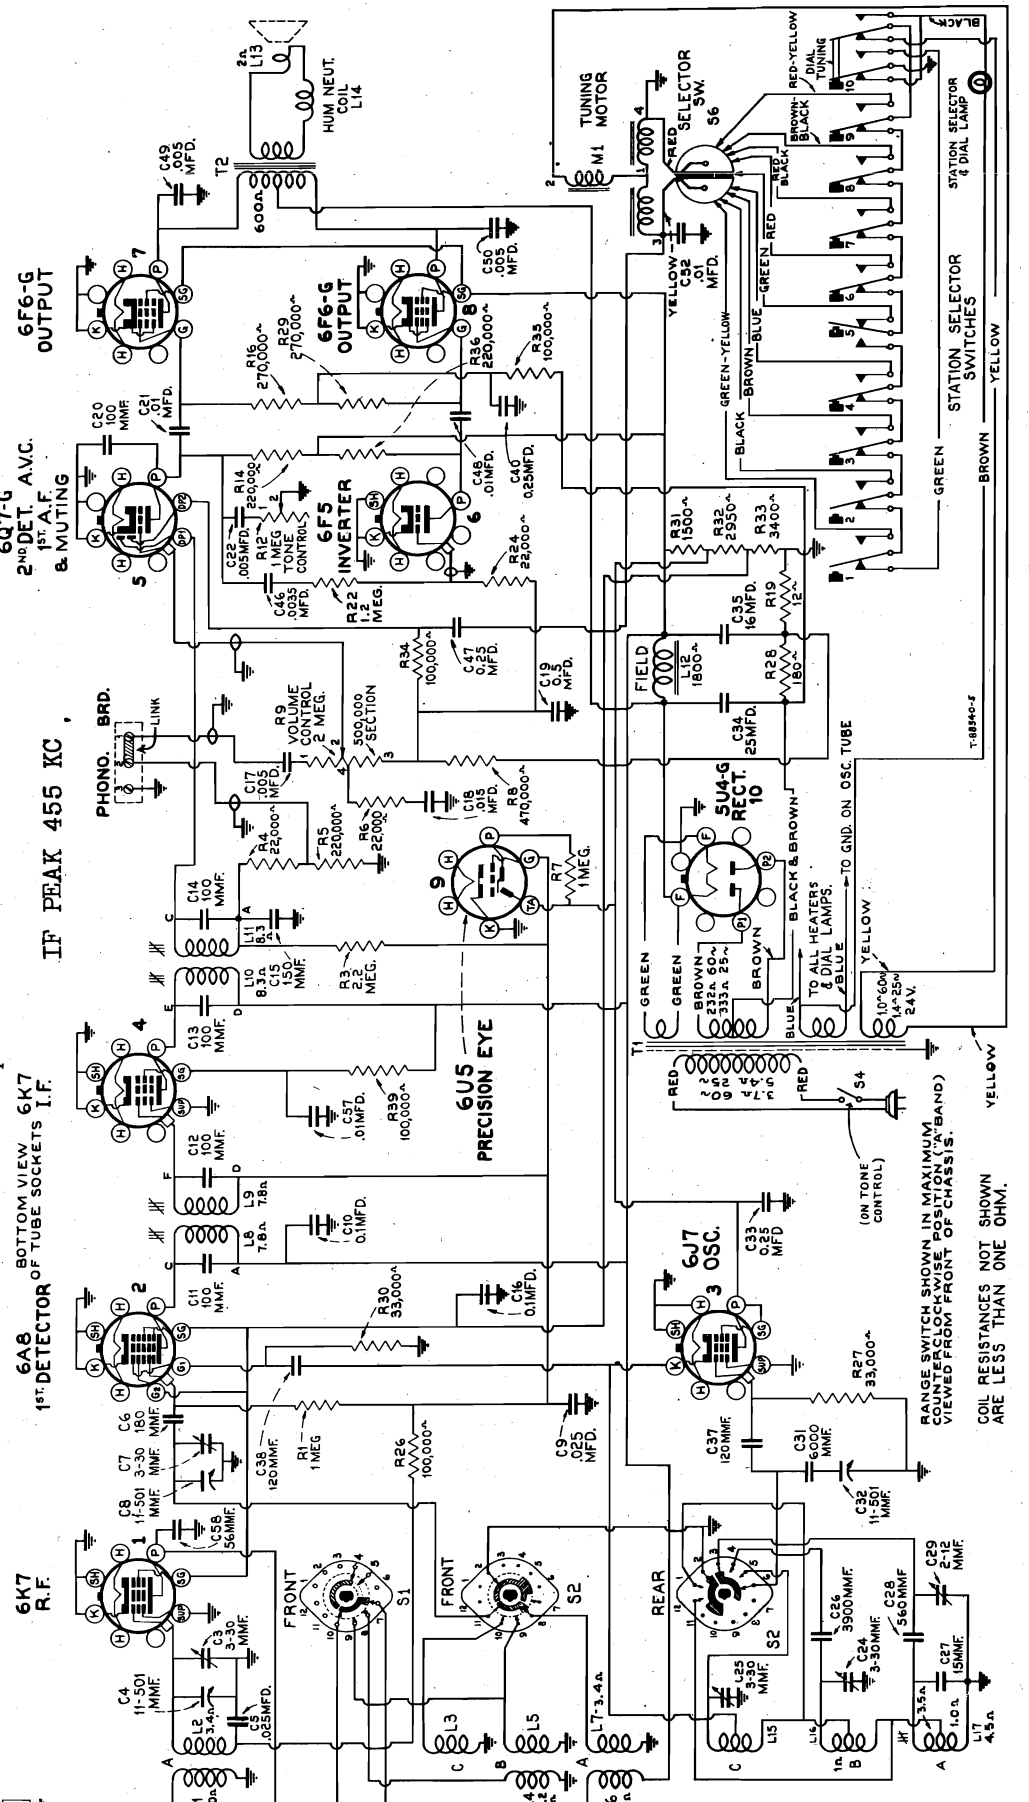

WR-368 Schematic Circuit Diagram

MODEL WR370
Chassis Wiring
Voltage, Lead Dress

WESTINGHOUSE ELEC. SUPPLY CO.

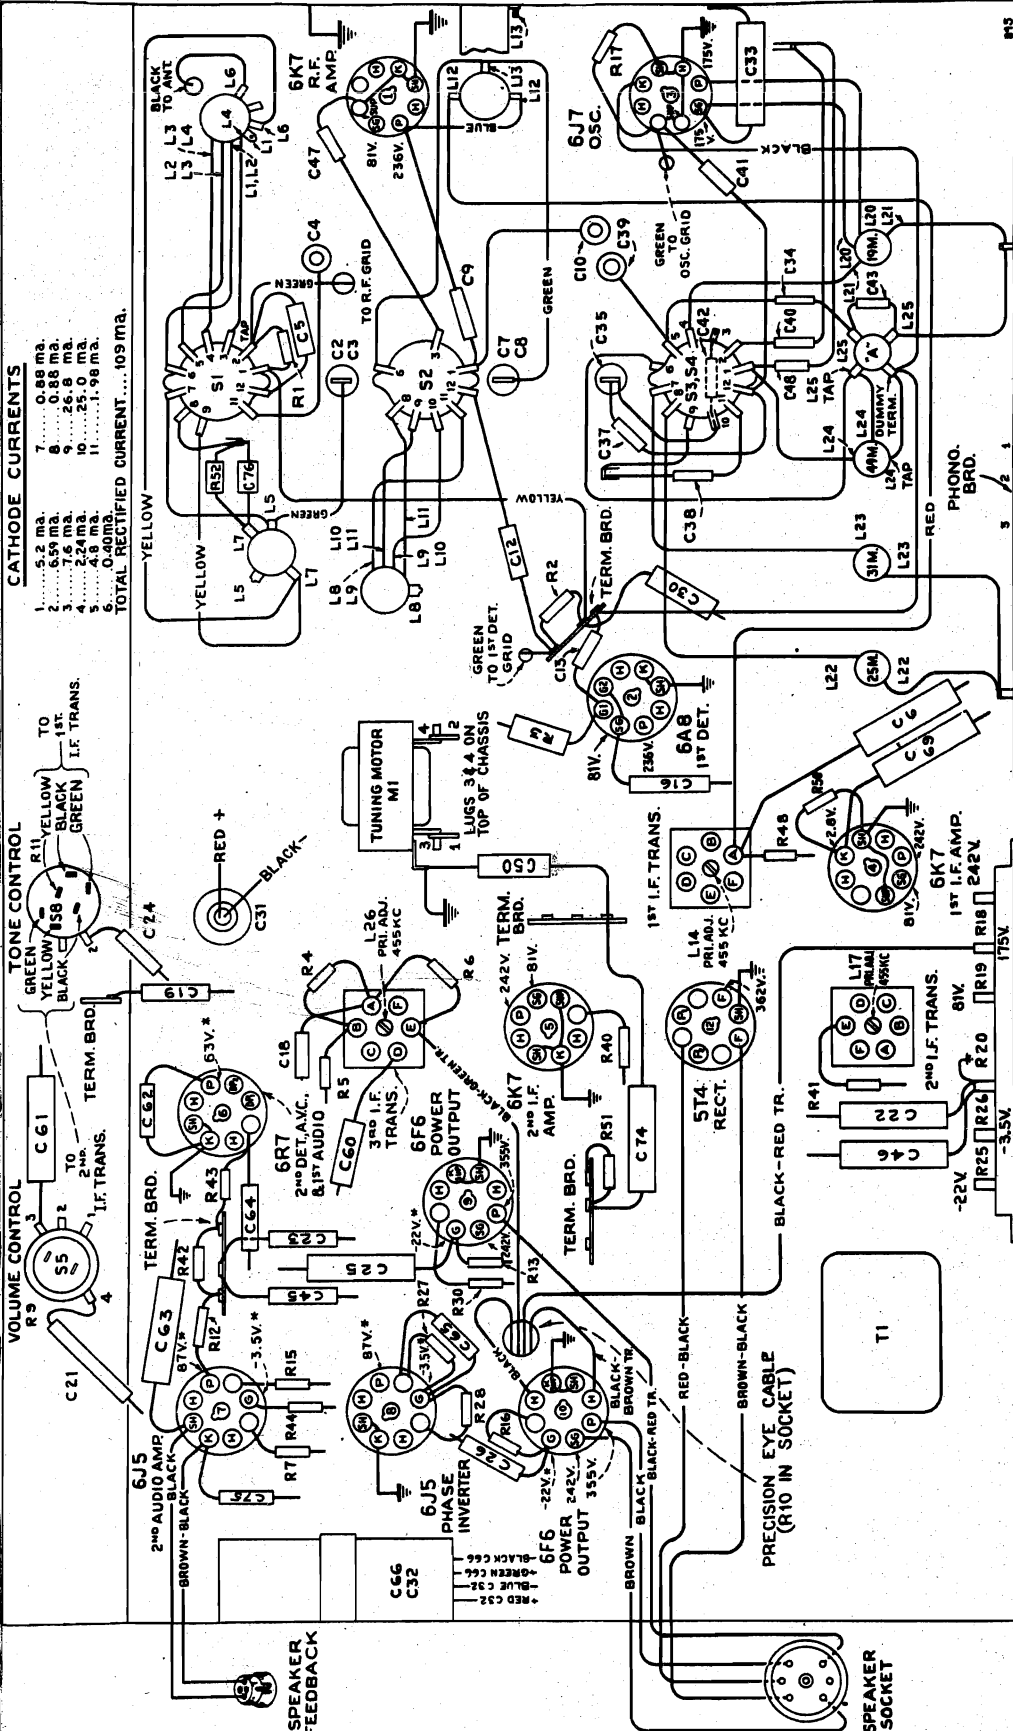

CATHODE CURRENTS

1	5.2 ma.	7	0.88 ma.
2	6.49 ma.	8	0.88 ma.
3	7.5 ma.	9	26.8 ma.
4	2.24 ma.	10	25.0 ma.
5	4.8 ma.	11	1.98 ma.
6	0.40 ma.		

TOTAL RECTIFIED CURRENT...1.09 ma.

ALL HEATER VOLTAGES 5.3 VOLTS EXCEPT 5T4-5.0 VOLTS
 * NOTE: Values with star (*) are operating voltages in circuits with high series-resistance. These voltages will be lower when measured with a voltmeter drawing current through the circuit. Exact voltage may be measured with a vacuum-tube voltmeter if desired. The other values will not be affected by measuring with an ordinary high-resistance voltmeter.
 Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within approximately ±20% with 117-volt a-c supply.

- Precautionary Lead Dress—**
- (1) Leads on spread-band antenna and r-f coils and trimming capacitors should be kept short as possible and separated from each other.
 - (2) Keep black lead from L25 away from C38 and L24.
 - (3) Keep black lead from L25 to cathode lug on 6J7 away (5) from chassis and adjacent parts.
 - (4) The power cord lead and the primary lead of the transformer which connect to the power switch should be twisted together, and kept away from Volume Control terminals.
 - (5) Keep C13 away from the 6A8 control grid lead and from the chassis.
 - (6) The three leads from the first i-f transformer to fidelity switch should be twisted and kept short but away from adjacent parts. The same applies to the leads from second i-f transformer to fidelity switch.

MODEL WR370

Alignment, Trimmers

WESTINGHOUSE ELEC. SUPPLY CO.

Socket, Notes

Cathode-Ray Alignment is the preferable method. Connect vertical "Hi" input to terminal No. 2 on phono board and vertical "0" to terminal No. 3.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale on Indicator-Drive-Cord Drum.—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment, therefore a calibration scale is attached to the rear of the indicator-drive-cord drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.


As the first step in r-f alignment, check the position of the drum. The "0" mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

To determine the corresponding frequency for any setting of the calibration scales, refer to the accompanying drawing which shows the dial with 0-180° calibration scales drawn at top and bottom.

Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "0" mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

Spread-Band Alignment.—The most satisfactory method of aligning or checking the spread-band ranges is on actual reception of short-wave stations of known frequency, by adjusting the core of the oscillator coil for each band so that these stations come in at the correct points on the dial.

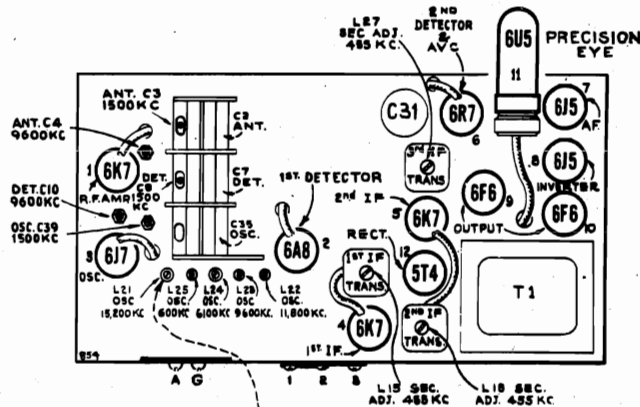

CAUTION: THIS ADJ. SCREW MUST PROJECT AT LEAST 3/4" FROM TOP OF CHASSIS TO PREVENT SHORTING +B.

Tube and Trimmer Locations

In exceptional cases, when the set is being serviced in a location where the noise level is high enough to prevent reception of short-wave stations, a test-oscillator may be used for alignment, but an extremely high degree of accuracy is required in the frequency settings of the test-oscillator, as a slight error will produce considerable inaccuracy on the spread-band dials. The frequency settings of the test-oscillator may be checked by one or both of the following methods:

1. Determine the exact dial settings of the test-oscillator (for frequencies at or close to the specified alignment frequencies) by zero-beating the test-oscillator against short-wave stations of known frequency.
2. Use harmonics of the standard-broadcast range of a test-oscillator, first checking the frequency settings on this range by means of a crystal calibrator, or by zero-beating against standard broadcast stations.

When a test oscillator is employed for spread-band alignment, a final check should be made on actual reception of short-wave stations of known frequency, and the core of the oscillator coil for each band should be re-adjusted so that the stations come in at the correct points on the dial.


Steps	Connect the high side of test-oscillator to—	Tune Test-Oscillator to—	Range Selector	Set Tuning Gang to—	Adjust the following for max. peak output
1	Turn Fidelity Control to Maximum Counter-clockwise position.				
2	6K7 2nd I-F grid cap in series with .01 mfd.	455 kc	"A"	Quiet Point between 550-750 kc	L26, L27 (3rd I-F transformer)
3	6K7 1st I-F grid cap in series with .01 mfd.	455 kc	"A"	Quiet Point between 550-750 kc	L17, L18 (2nd I-F transformer)
4	6A8 1st-det. grid cap in series with .01 mfd.	455 kc	"A"		L14, L15 (1st I-F transformer)
5	Antenna Terminal in series with 200 mmf.	1,500 kc	"A"	1,500 kc (151.5°)	C39 (osc.) C8 (det.) C3 (ant.)
6	Antenna Terminal in series with 200 mmf.	600 kc	"A"	600 kc (30.0°)	L25 (osc.)
7	Antenna Terminal in series with 200 mmf.	1,500 kc	"A"	1,500 kc (151.5°)	C39 (osc.)
8	Antenna Terminal in series with 300 ohms.	6,100 kc	"49M"	6,100 kc (106°)	L24 (osc.)*
9	Antenna Terminal in series with 300 ohms.	9,600 kc	"31M"	9,600 kc (102°)	L23 (osc.)** C10 (det.) C4 (ant.)
10	Antenna Terminal in series with 300 ohms.	11,800 kc	"25M"	11,800 kc (90.0°)	L22 (osc.)**
11	Antenna Terminal in series with 300 ohms.	15,200 kc	"19M"	15,200 kc (78.0°)	L21 (osc.)**

* Use maximum inductance peak (plunger in) if two peaks can be obtained.

** Use minimum inductance peak (plunger out) if two peaks can be obtained.

Note that oscillator tracks above signal frequency on all bands except "49M," where it tracks below.

WESTINGHOUSE ELEC. SUPPLY CO. MODEL WR468L
Schematics, Voltage

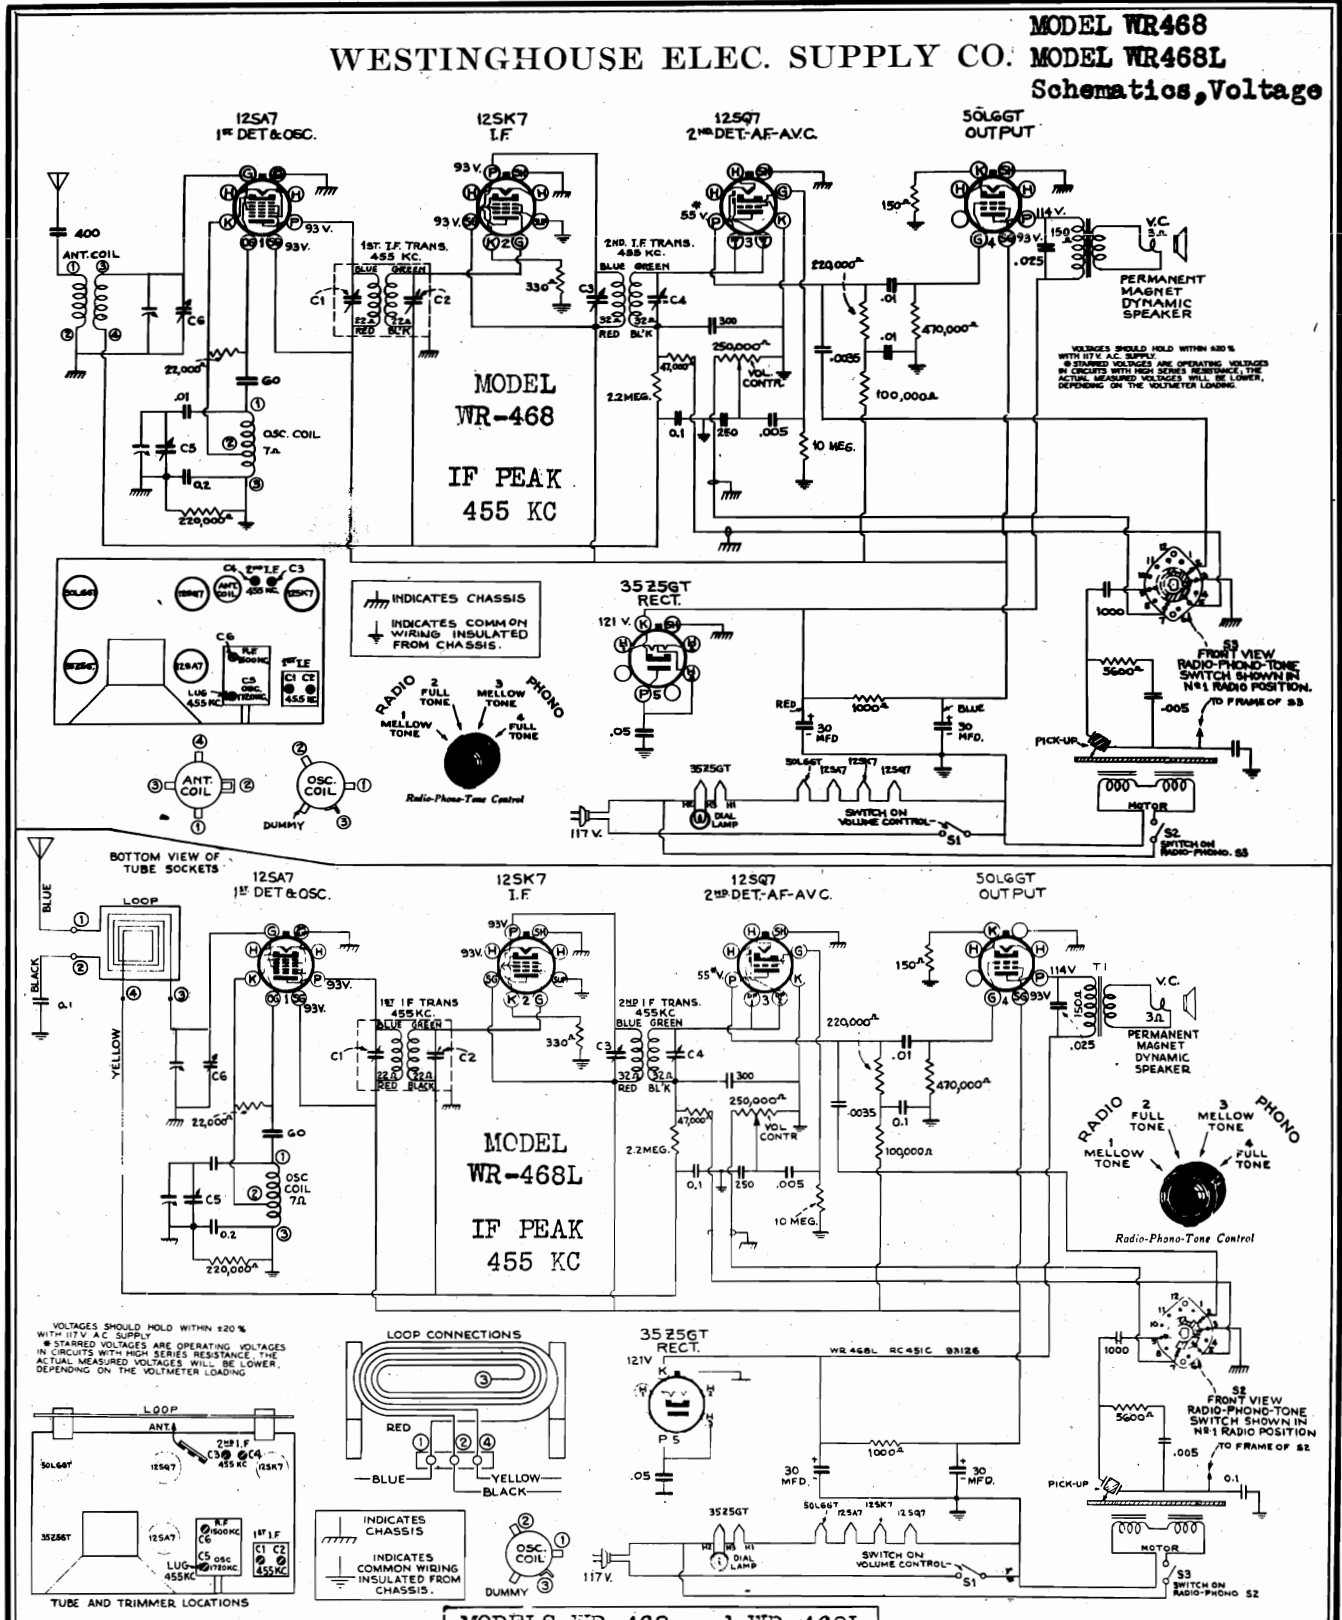

MODELS WR-468 and WR-468L

FREQUENCY RANGE	540-1,720 kc
POWER OUTPUT (125 volt, 60 cycle supply)	
Undistorted	.75 watts
Maximum	1.3 watts
LOUDSPEAKER	
Type	5-inch Permanent Magnet Dynamic Voice-Coil Impedance
	3.4 ohms at 400 cycles
PHONOGRAPH	Synchronous (manual starting)
Records	10-inch and 12-inch, 78 r.p.m.
Pickup	Crystal, 100,000 ohms at 1,000 c.p.s.
Average Output of Pickup	1½ volts at 1,000 c.p.s. across ½ meg. load

Dial Lamp (1)..... Mazda 51, 7.5 volts, 0.2 amp.

POWER SUPPLY RATINGS First Edition
A-6..... 105-125 volts, 60 cycles, 40 watts
WR-468


Antenna.—The set is equipped with length of antenna wire. Do not connect the antenna to ground. If an outdoor antenna is used, it should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.
WR-468L

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it should be connected to the blue antenna lead on the rear of the chassis.


MODELS WR166L
WR166LB, WR166LC
WR166LG, WR166LI
WR166LR, WR166LW

WESTINGHOUSE ELEC. SUPPLY CO.

Schematic, Voltage
Socket, Trimmers
MODELS WR468, WR468L
Alignment, Phono.
Lead Dress

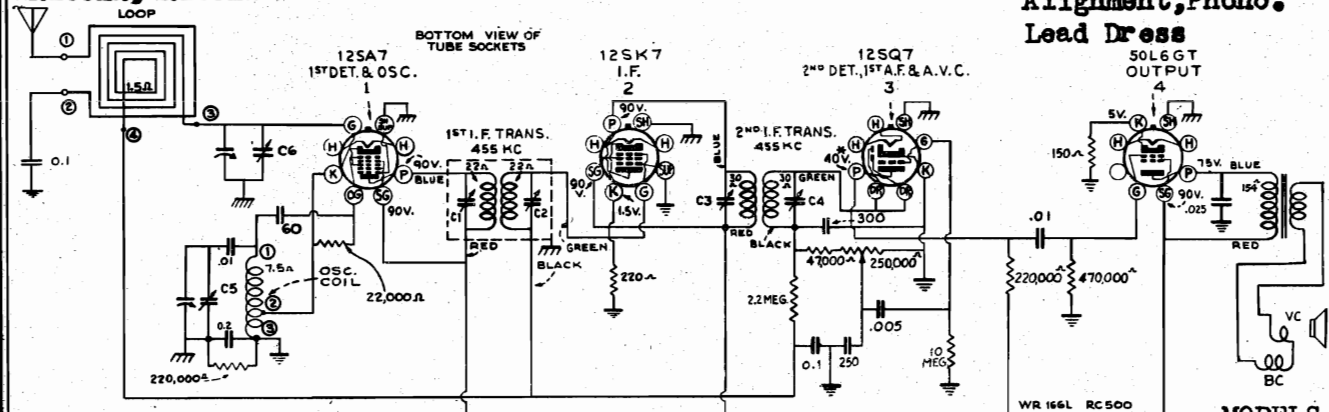


VOLTAGES SHOULD HOLD WITHIN ±20% WITH 117V. A.C. SUPPLY. * STARTED VOLTAGES ARE OPERATING VOLTAGES IN CIRCUITS WITH HIGH SERIES RESISTANCE. THE ACTUAL MEASURED VOLTAGES WILL BE LOWER, DEPENDING ON THE VOLTMETER LOADING.




INDICATES CHASSIS
INDICATES COMMON WIRING INSULATED FROM CHASSIS

IF PEAK 455 KC

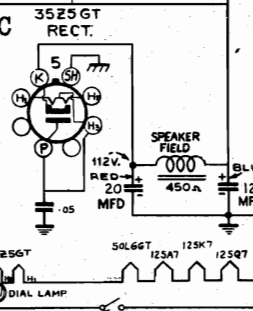

Mazda 51, 7.5 volts, 0.2 amp.

MODELS
WR-166L
WR-166LB
WR-166LC
WR-166LG
WR-166LI
WR-166LR
WR-166LW

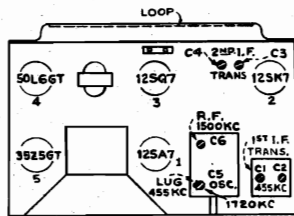

POWER SUPPLY RATINGS

A-C Rating. 105-125 volts, 50-60 cycles, 30 watts
D-C Rating. 105-125 volts, direct current, 30 watts

Antenna.—The set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the "ANT." terminal on rear of cabinet. It should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

FREQUENCY RANGE. 540-1,720 kc
INTERMEDIATE FREQUENCY. 455 kc
POWER OUTPUT (125 volt, 60 cycle supply)
Undistorted. 0.5 watts
Maximum. 1.25 watts
LOUDSPEAKER
Type. 4-inch Electrodynamic

Alignment Procedure


WR-468, WR-468L

Precautionary Lead Dress


Output Meter Alignment.—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

1. Dress 1st I-F plate and grid leads against chassis and away from each other. Dress plate lead from 12SK7 close to chassis.
2. Dress electrolytic capacitor against chassis apron.

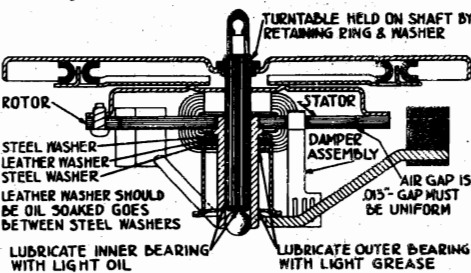

Cross Section of Motor Assembly

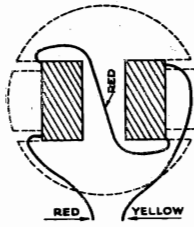

Motor Coil Assembly and Connections

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal	C6 (antenna)

Power Supply.—Although this model employs an ac-dc chassis, it is not suitable for use on dc, as this would damage the motor.

5. The damper spring must fit without binding or chattering in the slot in the stator. The stator must be free to deflect in either direction between the limits of the damper spring. The damper spring must exert approximately equal force in restoring the stator to its mid-position when the stator is deflected manually in each direction.

Removing Rotor.—The rotor and turntable assembly simply rests on the ball bearing at bottom of vertical bearing. Remove by lifting up.

Rotor Adjustment.—Loosen the three screws that hold the rotor to the turntable, insert three 13-mil shims at equal distances around the gap between the rotor and stator, and then carefully tighten the three screws.

Lubrication.—Oiling points are indicated in the diagram.


Phonograph Service Data

The motor is started by turning the radio-phono tone control to either 3rd or 4th position clockwise and giving the turntable a clockwise spin with the hand. Smooth starting and running will be insured by keeping the bearings well cleaned and oiled.


Hum and Vibration.—A small amount of hum when starting, decreasing to a negligible amount when running, is normal. If excessive vibration occurs it may be due to:

1. Insufficient lubrication, or any failure that will cause binding.
2. Leather washer not oiled. (Check to make certain that the leather and steel washers are in the proper position.)
3. Motor not properly supported from motor board.
4. Burrs on poles of rotor or stator. Remove with fine emery cloth.

WESTINGHOUSE ELEC. SUPPLY CO. MODEL WR502 Schematic, Voltage

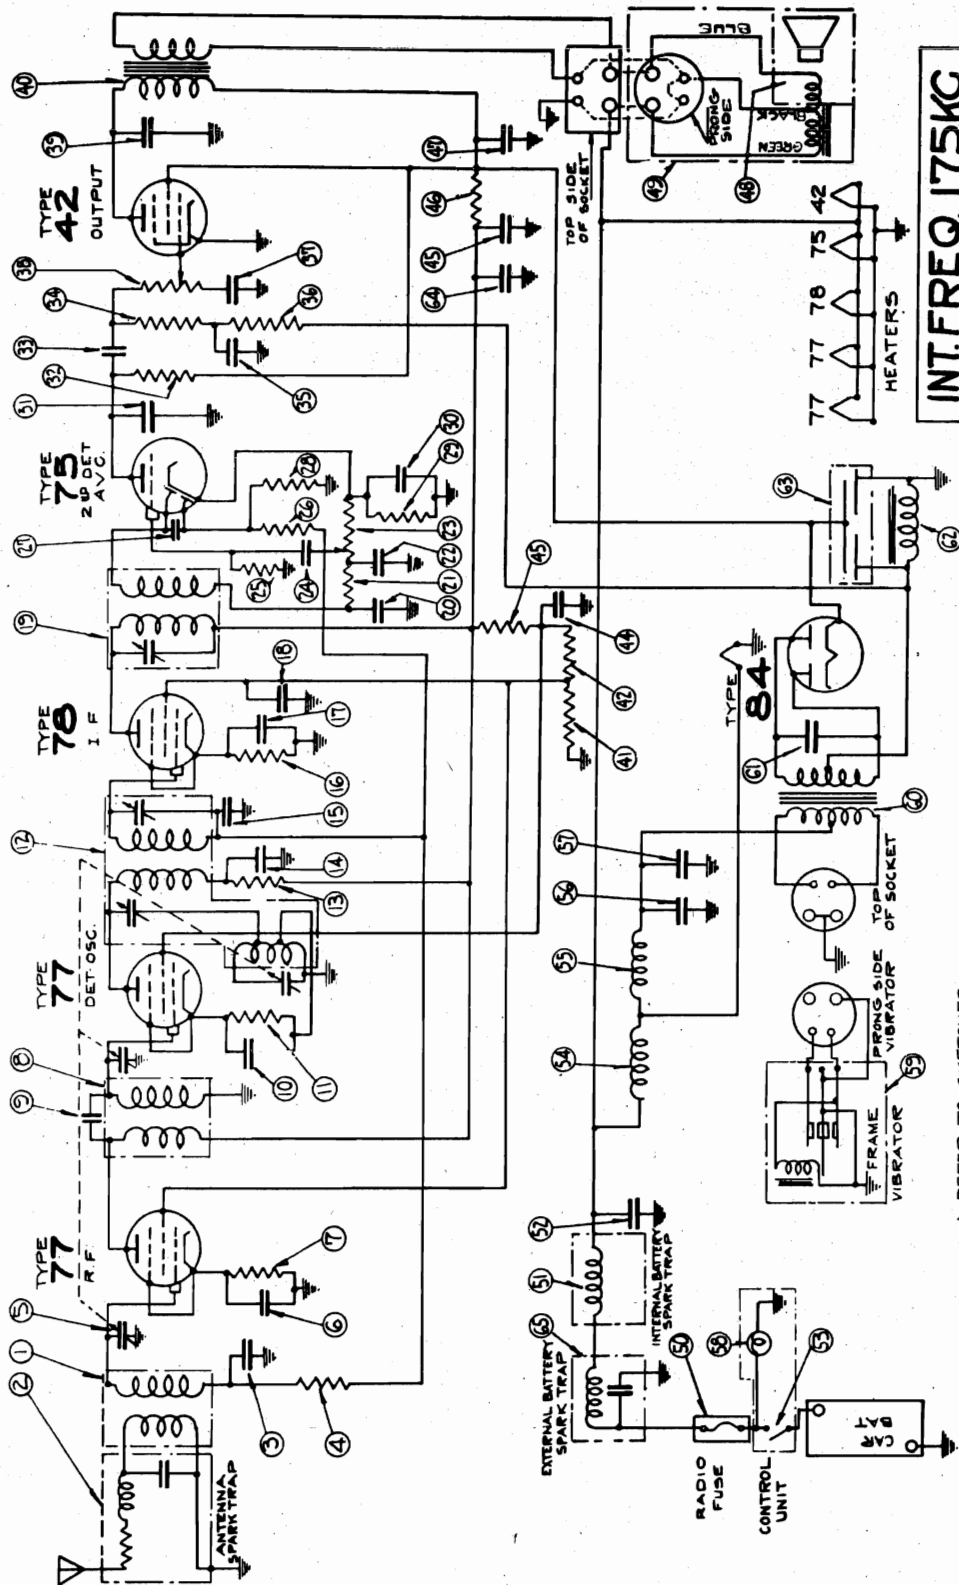

INT. FREQ. 175KC

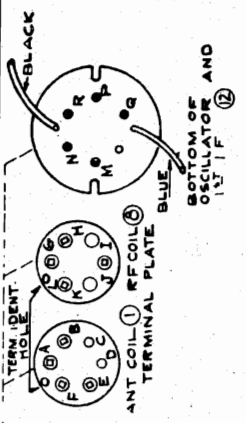

NOTE: ALL VOLTAGE READINGS WITH A VOLT METER HAVING A RESISTANCE OF 1000 Ω PER VOLT.

TUBE	STAGE	WINDING	RESISTANCE	PLATE	CATH.	SCREEN	RESISTANCE
77	DET. OSC.	60	18G	18	18	18	84
75	2 ND DET. AVC.	60	18G	18	18	18	84
42	OUTPUT	60	18G	18	18	18	84

* REFER TO SKETCHES

PART FUNCTION	WINDING	RESISTANCE	PRIMARY IDENT	SECONDARY IDENT	RESISTANCE
1	ANT. COIL	2.1 Ω	A to B	2.5 Ω	E to F
2	RF COIL	12 Ω	L to G	4 Ω	H to J
3	OSCILLATOR	6 Ω	M to P	7 Ω	Q to R
4	2 ND I.F.	90 Ω	RED to BLUE	8 Ω	BLACK to GREEN
5	OUTPUT	550 Ω	GREEN to BROWN	86 Ω	GREEN to BLACK
6	CHOKE	32.5 Ω	BLACK to GND.	86 Ω	BLACK to BLUE

MODEL WR502
Service Data
Vibrator Adjustments
WESTINGHOUSE ELEC. SUPPLY CO.
MODEL WR 503
Service Notes
ELECTRICAL SPECIFICATIONS

Type and Number of Tubes	2 #77, 1 #78, 1 #75, 1 #42, 1 #84 - Total 6
Battery Current (6.3 Volt Battery)	6.5 Amperes
Tuning Range	540 to 1600 K.C.
Maximum Undistorted Output	3.0 Watts
Maximum Output	4.0 Watts
Line-Up Frequencies	I.F. 175 K.C., 1400 K.C., 1600 K.C.

GENERAL DESCRIPTION

The Model WR 502 Car-Radio has been designed, manufactured, and tested with special regard for the requirements of automobile radio. The electrical, mechanical and acoustical features of the set have been decided upon after extensive tests in automobiles to determine the proper requirements for greatest satisfaction.

The Model WR 502 receiver is a single-unit compact radio chassis, power pack, and speaker with a separate remote control. The set is contained in a cylindrical housing and is provided with many features which result in improved tone quality, attractive appearance, mechanical stability and desirable service features.

CIRCUIT DESCRIPTION

The circuit is of the superheterodyne type, using a type 77 tube as an R.F. amplifier, a type 77 as a combined first detector-oscillator, a type 78 as an I.F. amplifier, a type 75 used as a combination second detector, A.V.C., and first audio amplifier, a type 42 as an output amplifier, and a type 84 as a rectifier in the power supply.

The Model WR 502 is equipped with three spark traps: an internal, tuned spark trap in the battery circuit to assist in the suppression of ignition interference; an external spark trap, connected in series with the battery cable; and an antenna spark trap, provided in the antenna circuit. These spark traps make the installation of auxiliary suppression equipment unnecessary in most cars.

SERVICE DATA

TROUBLES THAT CAN BE LOCATED AND REMEDIED WITHOUT REMOVING THE RECEIVER FROM THE HOUSING OR CAR

DIAL LIGHT DOES NOT LIGHT

Dial light may be loose in socket, broken or burned out. Socket on end of lead in rear of control head can be pulled straight out.

FUSE BLOWN

Check the fuse in the container on the receiver ammeter feed lead.

SET INOPERATIVE AND TUBES DO NOT LIGHT

Remove the speaker cover and disconnect the speaker plug. Remove the vibrator, all the tubes, and disconnect the dial light cable from the chassis. Check with an ohmmeter from "Hot A" side of battery cable (male bayonet connector inside the fuse-container housing) to ground. Should this show an open circuit when the line switch is closed, obviously a tube or the vibrator is shorted and these parts can be checked separately to determine which is defective. On the other hand, if the ohmmeter shows a closed circuit, the chassis should be removed from the housing and checked.

INSENSITIVE OR WEAK

Check the car antenna for poor connections and grounds. Also check tubes and the receiver alignment.

INTERMITTENT RECEPTION

This is usually caused by a poor connection from the set antenna lead to the car antenna lead-in, and this joint should always be checked when intermittent reception occurs.

MICROPHONIC OR INTERMITTENT

Tap each tube lightly with a small piece of wood or an insulated screw driver handle. The offending tube when tapped will usually howl very loudly if microphonic or will give intermittent results if defective.

LOW POWER OUTPUT

Check tubes and the vibrator. Usually caused by the latter.

RECEPTION CUTS OFF AT CERTAIN SETTINGS OF DIAL-SCALE POINTER

This condition is usually caused by some foreign metallic substance shorting a section of the condenser gang. These particles are often too small to be seen but can be removed by blowing them out with an air pressure hose or an ordinary hand pump. Great care must be taken not to destroy the thin mica insulators assembled under the trimmers on top of the condenser gang.

POOR TONE QUALITY

Foreign material is apt to become lodged between the speaker voice coil and the field core. This hampers the movement of the speaker diaphragm. As the rear of the speaker is open, this space can be blown out clean with an air hose.

BUZZING SOUND IN SPEAKER

This can be remedied in many cases by the method described above. It can also be caused by a loose winding on the voice coil. In such a case the turns of this winding should be carefully pushed together, and a thin coating of collodion or coil cement should be applied to hold the windings in place.

RATTLES

Check receiver for loose cover thumb screws, tube shield, and housing screws. Rattles seemingly in the radio receiver, are often traced to loose parts in the bulkhead or dashboard of the car.

VIBRATOR NOISE

(Be sure that this is checked with the car engine OFF and the antenna disconnected.) Check the spring contact on the receiver housing and cover, and particularly the vibrator top spring. Clean and adjust the vibrator according to the instructions given in another section of these service notes.

SET INOPERATIVE TUBES LIGHT AND VIBRATOR BUZZES

A. Check the B voltage (approximately 240 volts) from the middle terminal of the electrolytic filter condenser to ground on the chassis. This point is easily reached with the speaker cover removed. If no voltage or low voltage is observed, test the vibrator and 84 rectifier tube. If voltage is still incorrect, the receiver should be removed from the housing.

B. With the speaker plugged in, remove the clip from the grid of the 75 tube and touch the clip to the grid cap of the 75 tube several times in succession. A clicking noise should be heard in the speaker. This is a practical test for the audio amplifier and speaker. If this clicking noise is not heard, the 75 and 42 tubes should be tested and the voltage checked at the plates of these tubes. The speaker should be checked with a volt-ohmmeter by testing across the prongs of the speaker plug for continuity. While making this test, the cable should be moved back and forth to show up any possible intermittent open circuit in the speaker cable. Check the voice coil and field coil for resistance.

If the audio and speaker are still dead, the chassis should be removed from the housing.

If the audio and speaker are working correctly, test the remaining tubes and check the voltage at each socket.

In the event that the chassis has to be removed from the car for repairs, this can easily be done as follows: Disconnect all external cables and the flexible shafts from the receiver. Remove the speaker cover and pull out the speaker plug. Remove the screws around the outside of the housing and pull the chassis straight out, being careful not to damage the antenna cable. The chassis can be removed in many cars in this manner without the necessity of unbolting the chassis housing from the car.

LOCATING TROUBLE IN CHASSIS

To locate a short, open or defective unit which causes low or no "B" voltage, isolate the power pack from the receiver section by disconnecting the two red leads (coming from the receiver section) from each end of the 5000-ohm resistor, #46, in the power pack. Check the voltage from the input side of the resistor to ground, which should be approximately 250 volts. If this voltage is incorrect, the trouble is definitely in the power pack and all component parts should be checked.

Conversely, if the voltage reading proves to be correct, the trouble is in the receiver section and all its parts should be checked.

In locating a short or open in the filament circuit, the power pack can be disconnected from the filament supply of the receiver section by removing the red wire on the top terminal of the "off" and "on" switch connected to the 42 tube. This will connect only the power pack in the filament circuit and if the short or open no longer exists, it will prove that the trouble is in the receiver section.

WEAK OR INSENSITIVE AFTER RE-ALIGNMENT

Check coils and associated circuits in the deficient "stage" of the receiver for proper resistance values.

LOW POWER OUTPUT WITH B VOLTAGE CORRECT

Check the speaker field coil, voice coil and associated audio circuit for resistance continuity and defective condensers.

All riveted component parts can be removed by merely punching out the rivets with a small diameter straight side punch. Replacement parts can be secured with small machine screws and nuts.

In changing the power transformer, it is necessary only to remove the four drive screws, two located directly over the resistor and condenser strip and the other two in back of the condenser gang on the power pack shield. In replacing the power transformer be sure to tighten the screws securely and replace the shield braid bond or vibrator noise will be present.


INSTRUCTIONS FOR ADJUSTING VIBRATOR
MODEL WR-502 ONLY.

After the vibrator has been in use for some time, it may refuse to start operating. This is an indication of worn Tungsten contact points; but, since a reserve of Tungsten has been provided, a simple adjustment can be made to prolong the life of the vibrator.

1. Remove the vibrator unit from its housing by removing the tension spring with a pair of round nosed pliers.

2. Remove the rubber sock, being careful not to bend the wires at the soldered connections.

3. Lay the vibrator on a piece of white paper so that when viewed from above it appears exactly as shown in Fig. 1.

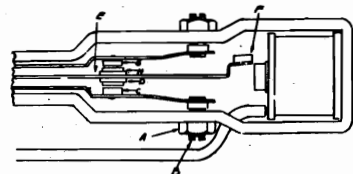
Figure No. 1

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR502
Alignment, Socket
Trimmers, Parts

4. Loosen lock nut "A" and turn screw "B" clockwise until .005" of light can be seen between contacts "C" and "D". If the contact points are somewhat roughened, light cannot be seen across their entire diameter, even though they are correctly re-spaced, that is within .005" of touching each other.

5. A simple check on the correctness of the spacing adjustment is obtained by pressing lightly against the center of the reed with a small nail in the direction and location shown by arrow "E". When the reed is thus moved so as to close contacts "C" and "D", the weight "F" on the free end of the reed should move 1/64" from its "at rest" position. This check should be made after lock nut "A" has been firmly retightened.

6. Do not readjust the spacing between contacts "G" and "H" unless the tungsten is nearly all worn away. In this case, re-adjustment may be made the same as for contacts "C" and "D".

7. In re-inserting the vibrator into its rubber sock, be very careful to turn the "flats" of the sock hole so that they are parallel to the flat side of the vibrator frame. This provides ample space in the sock for the free movement of the reed. Make certain that the slot in the prong terminal plate engages the small projection on the inside edge of the housing. Then replace the tension spring. THESE INSTRUCTIONS DO NOT APPLY TO ANY OTHER TYPES OF VIBRATORS.

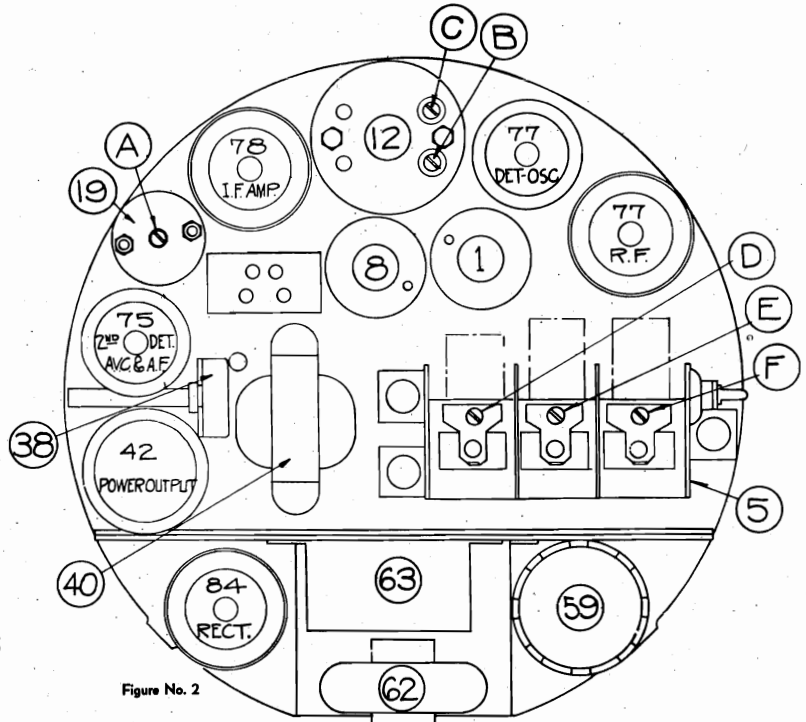


Figure No. 2

LINE-UP CAPACITOR ADJUSTMENTS

All the adjustable capacitors, commonly called trimmer condensers, are very accurately adjusted at the factory and will not need any further adjustment unless a coil or I.F. transformer is changed or the adjustments are tampered with in the field. Therefore, DO NOT attempt to change the setting of any of the trimmer condensers unless it is definitely known that adjustment is necessary, and a high grade modulated test oscillator is available. In such a case, proceed as follows, referring to Fig. #2.

1. Set test oscillator to 175 K.C.
2. Set condenser gang to approximately 600 K.C. This will be at a point where the condenser plates are nearly all in mesh.
3. Connect output meter across voice coil of speaker. This may be done by connecting one lead of the output meter to the blue lead of the speaker terminal strip and the other lead to the frame of the chassis. The impedance of the voice coil is 3. ohms.
4. Apply test signal to grid of 78 I.F. tube through a .5 mfd. blocking condenser and adjust trimmer "A" to maximum output reducing output of test oscillator as required.
5. Apply test signal to grid of 77 first detector-oscillator and adjust trimmers "B" and "C" to maximum output.
6. Set test oscillator to 1600 K.C. and rotate condenser gang until the plates are wide open. Place a piece of paper (approximately .015" thick) between the rotor and stator plates at the bottom of the gang and close the rotor down to this spacing. This is the exact setting of the condenser gang for the receiver oscillator at 1600 K.C. and should be carefully set as the resultant alignment of the receiver is directly dependent upon it.
7. Adjust trimmer "D" to maximum output and then remove the paper gauge.
8. Set test oscillator and condenser gang to 1400 K.C.
9. Apply test signal to grid of 77 R.F. tube and adjust trimmer "E" to maximum output.
10. Apply test signal to antenna lead through a .0002 mfd. condenser and adjust trimmer "F" to maximum output.
11. Check sensitivity at several points.

Part #	Description	Price
CH 9592	Chassis assembly -----	\$
CU 9517	Tuning unit (less shafts) -----	2.75
SK 955	Speaker -----	5.50
NUTS		
FP 106639	Thumb nut for antenna and battery cable -----	.10
NT 104935	Nut for mounting studs -----	.05
SCREWS & STUDS		
FP 104892	Thumb screws on housing cover -----	.05
FP 106571	Mounting studs -----	.05
SC 1026 CA	Self-tapping screw (#6 x 1 inch long) -----	.05
SC 101700	Self-tapping screw (#7 x 1/4 inch long) -----	.05
SOCKETS		
SA 104617	Tube socket - 6 prong -----	.20
SA 104616	Tube socket - 5 prong -----	.15
SO 953	Tube socket - 4 prong -----	.15
BE 956	Base for tube shield -----	.05
CV 954	Tube shield - long -----	.10
CV 9516	Tube shield - short -----	.10
WASHERS, BUSHINGS & SPACERS		
WA 2-12 CA	Mounting washer -----	.05
WA 7-10	Mounting lock washer -----	.05
IS 1002	Rubber bushing for variable condenser -----	.05
FP 104086	Spacer for speaker plug -----	.05
SR 953	Spacer for variable condenser rubber bushing -----	.05
SPEAKER PARTS (SK 955)		
CL 9513	Speaker field coil -----	1.10
DM 951	Diaphragm and voice coil assembly -----	1.25
FA 958	Silk speaker grill cloth -----	.15
CB 9528	Speaker cable with 4 prong plug -----	.45
SA 107279	Cover for speaker plug -----	.10
SA 107278	Speaker plug -----	.10
MISCELLANEOUS		
SH 9537	Variable condenser shaft with pinion -----	.50
KT 956	Spark plug suppressor kit -----	2.60
DS 956	Dial indicator disc -----	.35
SW 9541	Switch assembly complete with cables -----	1.95
SP 958	Spring base for vibrator -----	.20
FP 106425	Cover for female section of antenna connector -----	.05
SH 9535	Drive shafts (2 used) -----	1.60
SA 106754	Coil suppressor -----	.45
SA 105300	Condenser -----	.80
FP 105426	Bushing and ferrule for antenna and fuse connectors -----	.05
PP 105427	Spring in antenna and fuse connector -----	.05
IS 105428	Insulation washer for fuse and antenna connectors -----	.05
FP 105429	Fuse container -----	.05
IS 105430	Insulation tube in fuse container -----	.05
FP 105431	Male section of antenna connector -----	.05
FP 79381	Clamp for spark trap and antenna cables -----	.05
KN 9531	Knob for tone control -----	.10
GE 9512	Split gear on variable tuning condenser -----	.50

PRICES SUBJECT TO CHANGE WITHOUT NOTICE

MODEL WR502
Chassis, Parts

WESTINGHOUSE ELEC. SUPPLY CO.

Diag. #	Part #	Description	Price
1	RC 95128	Antenna coil	.75
2	CC 958	Antenna spark trap	1.80
3	SA 106886	.05 mfd., 200 V. condenser	.15
4	SA 105278	100,000 ohm, 1/4 W. resistor	3.75
5	CG 9542	3 gang condenser	.20
6	SA 106386	.05 mfd., 200 V. condenser	.15
7	SA 105264	500 ohm, 1/4 W. resistor	.20
8	RC 95130	R.F. coil	.95
9		Twisted wire	.20
10	SA 103852	.002 mfd., 600 V. condenser	.15
11	SA 105247	7500 ohm, 1/4 W. resistor	2.20
12	RC 95132	Composite coil	.15
13	SA 105245	2000 ohm, 1/4 W. resistor	.20
14	SA 102492	.05 mfd., 400 V. condenser	.20
15	SA 106386	.05 mfd., 200 V. condenser	.15
16	SA 105270	2500 ohm, 1/4 W. resistor	.20
17	SA 102497	.25 mfd., 200 V. condenser	.20
18	CW 951	1. mfd., 200 V. condenser	1.50
19	IC 951	I.F. coil	.10
20	CM 9513	.0001 mfd. mica condenser	.15
21	SA 105276	50,000 ohm, 1/4 W. resistor	.10
22	CM 9513	.0001 mfd. mica condenser	.10
23	VR 9524	Volume control	.85
24	SA 103659	.005 mfd., 400 V. condenser	.20
25	SA 105281	1 meg., 1/4 W. resistor	.15
26	SA 105246	1/2 meg., 1/4 W. resistor	.15
27	CM 9513	.0001 mfd. mica condenser	.10
28	SA 105246	1/2 meg., 1/4 W. resistor	.15
29	SA 105249	5000 ohm, 1/4 W. resistor	.15
30	SA 102497	.25 mfd., 200 V. condenser	.20
31	SA 103852	.002 mfd., 600 V. condenser	.20
32	SA 105278	100,000 ohm, 1/4 W. resistor	.15
33	SA 103659	.005 mfd., 400 V. condenser	.20
34	SA 105279	1/4 mfd., 1/4 W. resistor	.15
35	CW 951	1 mfd., 200 V. condenser	.20
36	SA 105279	1/4 mfd., 1/4 W. resistor	.15
37	SA 106403	.001 mfd., 600 V. condenser	.20
38	VR 9525	Tone control	.75
39	CW 952	.005 mfd., 600 V. condenser	.20
40	TR 952	Output transformer	1.15
41	SA 105277	75,000 ohm, 1/4 W. resistor	.15
42	SA 105274	20,000 ohm, 1/4 W. resistor	.15
43	SA 105274	20,000 ohm, 1/4 W. resistor	.15
44	SA 102492	.05 mfd., 400 V. condenser	.20
45	SA 102496	.25 mfd., 400 V. condenser	.20
46	SA 107572	5000 ohm, 1 W. resistor	.20
47	CM 951	.001 mfd. mica condenser	1.25
48	DM 951	Speaker diaphragm	5.50
49	SK 955	Speaker	.05
50	FU 951	Fuse (20 amperes)	.35
51	RC 9512	Filter choke	.15
52	CM 953	.00005 mfd. mica condenser	1.10
53	SW 9539	Switch assembly complete less cables	.20
54	SA 105452	Filter choke	.20
55	SA 105452	Filter choke	.35
56	CW 958	.5 mfd., 200 V. condenser	.35
57	CW 958	.5 mfd., 200 V. condenser	.20
58	LP 956	Pilot light - (6 V.-.20 amperes)	3.75
59	VI 951	Vibrator	3.50
60	TR 953	Power transformer	2.60
61	SA 106604	.008 mfd., 1600 V. condenser	.95
62	TR 951	"B" choke	2.60
63	CE 951	6 and 10 mfd. electrolytic condenser	.25
64	CM 951	.001 mfd. mica condenser	1.65
65	CC 954	Spark trap	

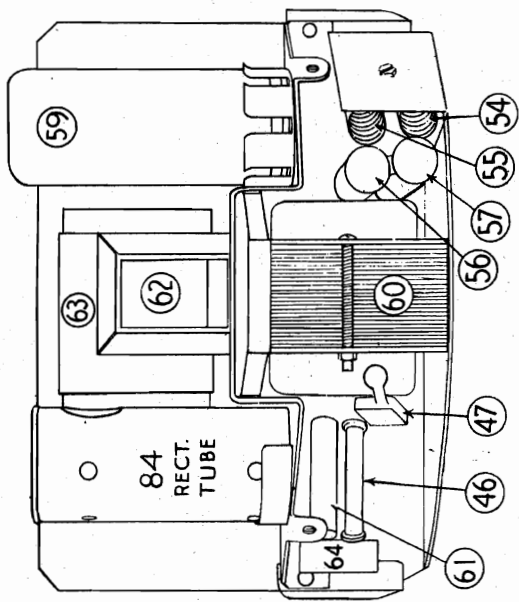


Figure No. 3



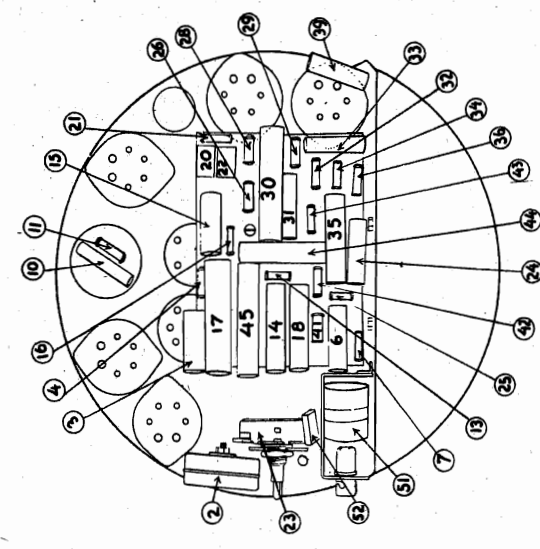


Figure No. 4

PRICES SUBJECT TO CHANGE
WITHOUT NOTICE

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR503
Schematic
Voltage

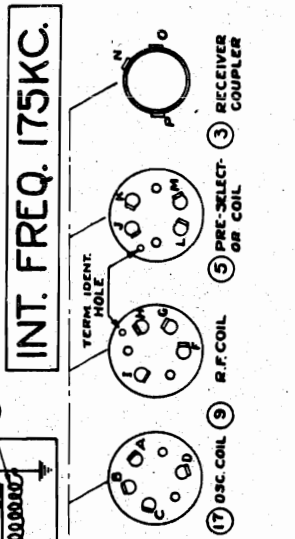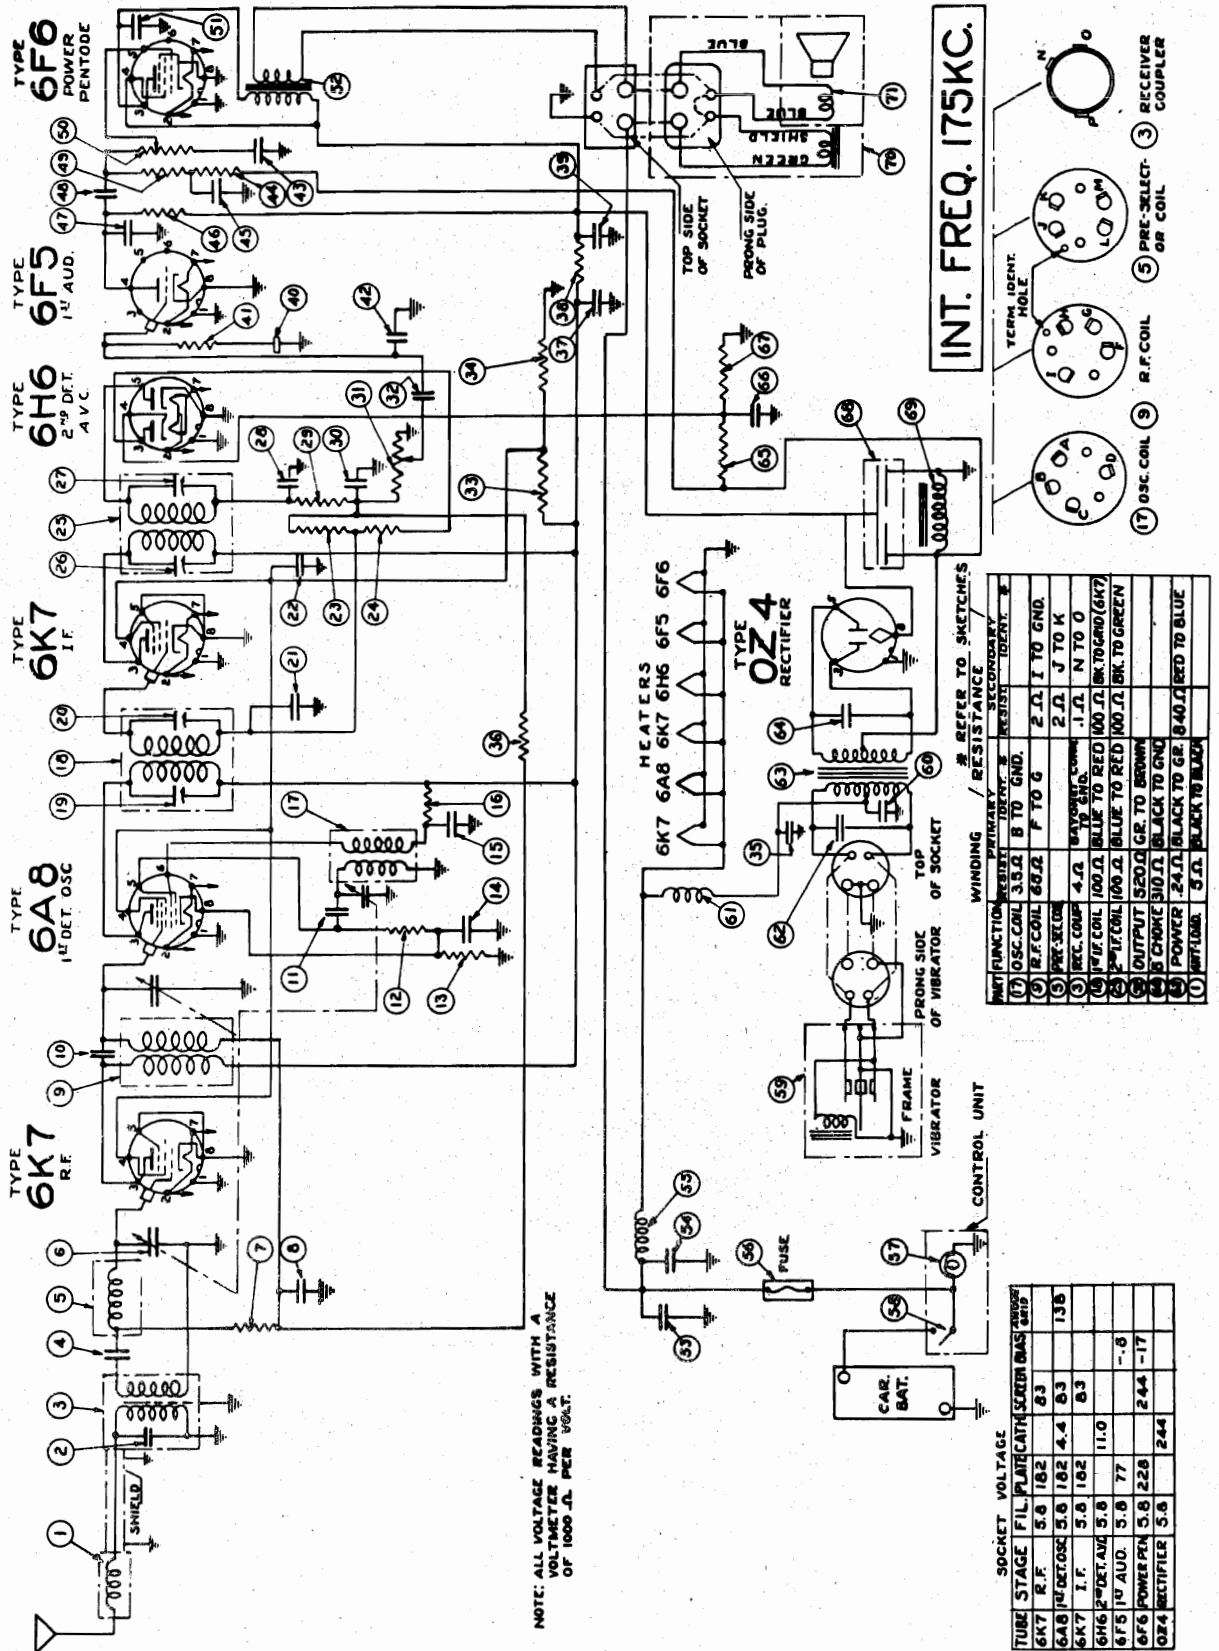

REFER TO SKETCHES

WINDING	PRIMARY IDENT.	RESIST.	SECONDARY IDENT.
(17) OSC. COIL	3.3 Ω	B TO GND.	
(9) R.F. COIL	60 Ω	F TO G	
(5) PRE-SELECT.	2 Ω	I TO GND.	
(3) PRE-SELECT. OR COIL	1 Ω	J TO K	
(5) R.F. COIL	4 Ω	N TO O	
(17) I.F. COIL	100 Ω	BLUE TO RED	100 Ω BK. TO GND. (6K7)
(25) P-TAP COIL	100 Ω	BLUE TO RED	100 Ω BK. TO GREEN
(5) OUTPUT	520 Ω	GR. TO BROWN	
(5) CHOK	310 Ω	BLACK TO GND.	
(5) POWER	24 Ω	BLACK TO GR.	640 Ω RED TO BLUE
(1) INT. FREQ.	5 Ω	BLACK TO BLACK	

TUBE STAGE	FIL.	PLATE	CATH.	SCREEN	BIAS	GRID
6K7 R.F.	5.8	182				83
6A8 1st DET. OSC.	5.8	182			4.4	13B
6K7 I.F.	5.8	182				83
6H6 2nd DET. AUD.	5.8	77			-5	-5
6F6 POWER PENT.	5.8	228			2.44	-17
OZ4 RECTIFIER	5.8				2.44	

NOTE: ALL VOLTAGE READINGS WITH A VOLTMETER HAVING A RESISTANCE OF 1000 Ω PER VOLT.

MODEL WR503

Alignment
Parts

WESTINGHOUSE ELEC. SUPPLY CO.

Dis. #	Part #	Description	List Prices
1	RC 95147	Antenna loading coil - part of RC 95155	1.20
2	SA 106277	.00075 mfd. condenser - part of RC 95147	.80
3	RC 95149	Receiver coupler	3.75
4	CG 9557	.01 mfd., 400 V. condenser	1.0
5	CG 9557	Preselector coil	1.0
6	SA 106277	Variable condenser assembly	1.25
7	SA 106277	100,000 ohm, 1/4 W. resistor	1.0
8	SA 106277	.05 mfd., 200 V. condenser	1.0
9	SA 106277	.0001 mfd., mica condenser	1.0
10	SA 106277	.0001 mfd., mica condenser	1.0
11	SA 106277	.0001 mfd., mica condenser	1.0
12	SA 106277	50,000 ohm, 1/4 W. resistor	1.0
13	SA 106277	500 ohm, 1/4 W. resistor	1.0
14	SA 106277	.05 mfd., 200 V. condenser	1.0
15	SA 106277	.01 mfd., 400 V. condenser	1.0
16	SA 106277	10,000 ohm, 1/4 W. resistor	1.0
17	RC 95155	Oscillator coil assembly	1.75
18	IC 9555	1st I.F. coil	1.0
19	SA 106277	30-100 mfd. condenser - part of IC 9555	1.0
20	SA 106277	30-100 mfd. condenser - part of IC 9555	1.0
21	SA 106277	.05 mfd., 200 V. condenser	1.0
22	SA 106277	.01 mfd., 400 V. condenser	1.0
23	SA 106277	1/2 meg., 1/4 W. resistor	1.0
24	SA 106277	2nd I.F. coil	1.0
25	SA 106277	30-100 mfd. condenser - part of IC 9555	1.0
26	SA 106277	30-100 mfd. condenser - part of IC 9555	1.0
27	SA 106277	.0001 mfd. mica condenser	1.0
28	SA 106277	.0001 mfd. mica condenser	1.0
29	SA 106277	.0001 mfd. mica condenser	1.0
30	SA 106277	.0001 mfd. mica condenser	1.0
31	SA 106277	.0001 mfd. mica condenser	1.0
32	SA 106277	.0001 mfd. mica condenser	1.0
33	SA 106277	.0001 mfd. mica condenser	1.0
34	SA 106277	.0001 mfd. mica condenser	1.0
35	SA 106277	.0001 mfd. mica condenser	1.0
36	SA 106277	.0001 mfd. mica condenser	1.0
37	SA 106277	.0001 mfd. mica condenser	1.0
38	SA 106277	.0001 mfd. mica condenser	1.0
39	SA 106277	.0001 mfd. mica condenser	1.0
40	SA 106277	.0001 mfd. mica condenser	1.0
41	SA 106277	.0001 mfd. mica condenser	1.0
42	SA 106277	.0001 mfd. mica condenser	1.0
43	SA 106277	.0001 mfd. mica condenser	1.0
44	SA 106277	.0001 mfd. mica condenser	1.0
45	SA 106277	.0001 mfd. mica condenser	1.0
46	SA 106277	.0001 mfd. mica condenser	1.0
47	SA 106277	.0001 mfd. mica condenser	1.0
48	SA 106277	.0001 mfd. mica condenser	1.0
49	SA 106277	.0001 mfd. mica condenser	1.0
50	SA 106277	.0001 mfd. mica condenser	1.0
51	SA 106277	.0001 mfd. mica condenser	1.0
52	SA 106277	.0001 mfd. mica condenser	1.0
53	SA 106277	.0001 mfd. mica condenser	1.0
54	SA 106277	.0001 mfd. mica condenser	1.0
55	SA 106277	.0001 mfd. mica condenser	1.0
56	SA 106277	.0001 mfd. mica condenser	1.0
57	SA 106277	.0001 mfd. mica condenser	1.0
58	SA 106277	.0001 mfd. mica condenser	1.0
59	SA 106277	.0001 mfd. mica condenser	1.0
60	SA 106277	.0001 mfd. mica condenser	1.0
61	SA 106277	.0001 mfd. mica condenser	1.0
62	SA 106277	.0001 mfd. mica condenser	1.0
63	SA 106277	.0001 mfd. mica condenser	1.0
64	SA 106277	.0001 mfd. mica condenser	1.0
65	SA 106277	.0001 mfd. mica condenser	1.0
66	SA 106277	.0001 mfd. mica condenser	1.0
67	SA 106277	.0001 mfd. mica condenser	1.0
68	SA 106277	.0001 mfd. mica condenser	1.0
69	SA 106277	.0001 mfd. mica condenser	1.0
70	SA 106277	.0001 mfd. mica condenser	1.0
71	SA 106277	.0001 mfd. mica condenser	1.0

PRICES SUBJECT TO CHANGE WITHOUT NOTICE

ELECTRICAL SPECIFICATIONS

Type and Number of Tubes..... 1#6A8, 2#6K7, 1#6B6, 1#6F5, 1#6F6, 1#6Z4 - Total 7
 Battery Current (6.3 Volt Battery)..... 6.5 Amperes
 Tuning Range..... 540 to 1600 K.C.
 Maximum Undistorted Output..... 3.0 Watts
 Maximum Output..... 4.0 Watts
 Line-Up Frequencies..... I.F. 175 K.C., 1400 K.C., 1600 K.C.

GENERAL DESCRIPTION

The Model WR-503 Westinghouse All-Metal Tube Car-Radio is a seven tube superheterodyne receiver which has been designed, manufactured and tested with special consideration for the requirements of automobile radio. The electrical, mechanical and acoustical features of this set have been developed only after extensive tests in automobiles to determine the proper requirements for greatest satisfaction.

CIRCUIT DESCRIPTION

The circuit is of the superheterodyne type, employing a type 6K7 tube as a R.F. amplifier, a type 6A8 as a combined first detector-oscillator, a type 6K7 as an I.F. amplifier, a type 6H6 used as a combination second detector and A.V.C., a type 6F5 tube as a first audio amplifier, a type 6F6 as an output amplifier, and a type 6Z4 as a rectifier in the power supply.

The Model WR-503 is equipped with two spark traps: an internal tuned spark trap in the battery circuit to assist in the suppression of ignition interference; and an antenna spark trap provided in the antenna circuit. The use of these spark traps makes the installation of additional suppression equipment unnecessary in most cars.

LINE-UP CAPACITOR ADJUSTMENTS

All the adjustable capacitors, commonly called trimmer capacitors, are very accurately adjusted at the factory and will not need any further adjustment unless a coil or I.F. transformer is changed or the adjustments tampered with in the field. Therefore, DO NOT attempt to change the setting of any of the trimmer capacitors unless it is definitely known that adjustment is necessary, and a high grade modulated test oscillator and an output meter are available. Then proceed as follows, referring to Figs. 1 and 2. NOTE: Before aligning the gang-condenser trimmers, the bottom of the gang condenser, at the necessary points, must be secured with rubber plugs from the bottom of the receiver housing. The setting of the trimmer on the top of the gang condenser should NOT BE DISTURBED.

1. Set test oscillator to 175 K.C.
2. Set gang condenser to approximately 600 K.C. This will be at a point where the condenser plates are nearly all in mesh.

3. Connect output meter across voice coil of speaker. This may be done by connecting one lead of the output meter to the blue lead of the speaker terminal strip and the other lead to the frame of the chassis. The impedance of the voice coil is 3.0 ohms.
4. Apply test signal to grid cap of 6K7 I.F. tube through a .5 mfd. blocking condenser and adjust trimmers #26 and #27 to maximum output, reducing output of test oscillator as required.

5. Apply test signal to grid cap of 6A8 first detector-oscillator and adjust trimmers #19 and #20 to maximum output.
6. Set test oscillator to 1600 K.C. and rotate gang condenser until the plates are wide open. Place a piece of paper (approximately .015" thick) between the rotor and stator plates at the top of the gang and close the rotor setting of the gang condenser. This is the exact setting of the gang condenser for the receiver oscillator at 1600 K.C. and should be carefully set as the result of this adjustment if the receiver is dependent upon it.

7. Adjust trimmer "A" to maximum output and then remove the paper gauge.
8. Set test oscillator and gang condenser to 1400 K.C.

9. Apply test signal to grid cap of 6K7 R.F. tube and adjust trimmer "B" to maximum output.

10. Apply test signal to antenna lead thru a .0002 mfd. condenser and adjust trimmer "C" to maximum output.

11. Check sensitivity at several points.

SERVICE DATA


TROUBLES THAT CAN BE LOCATED AND REMEDIED WITHOUT REMOVING THE RECEIVER FROM THE HOUSING OR CAR. SEE MODEL WR-502.

LOCATING TROUBLE IN CHASSIS

SEE MODEL WR-502.


WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR503
Chassis, Socket
Trimmers

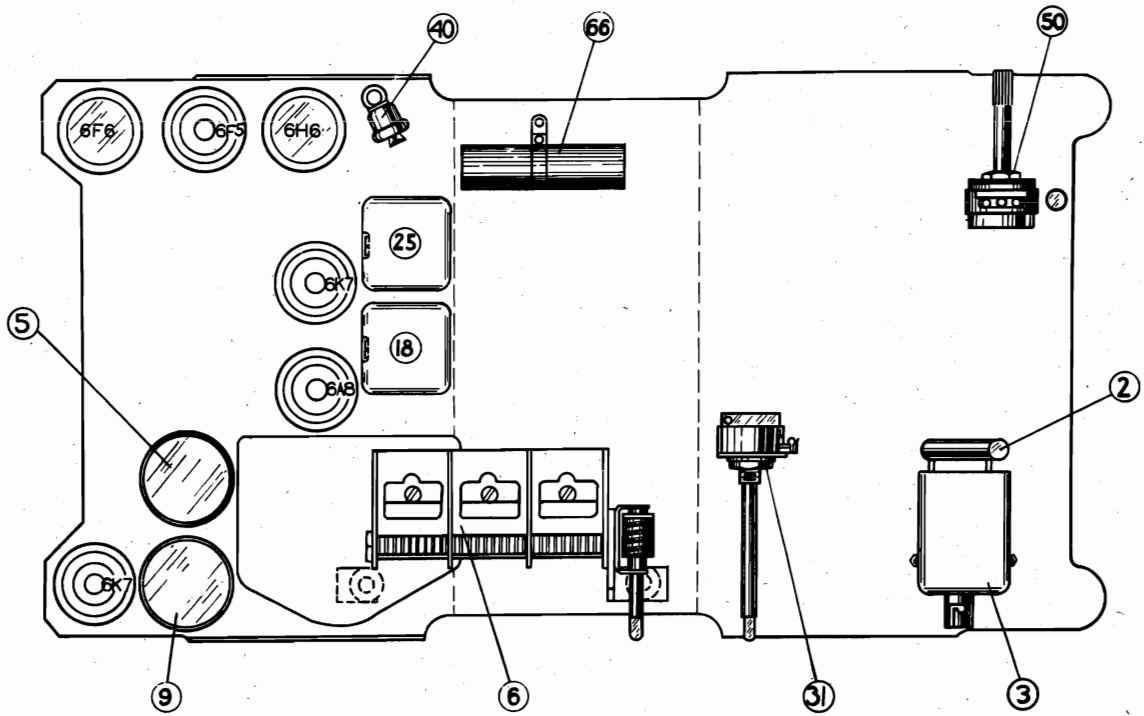

OUTSIDE VIEW OF CHASSIS WITH END BASE PLATES OPENED OUT

Figure No. 1

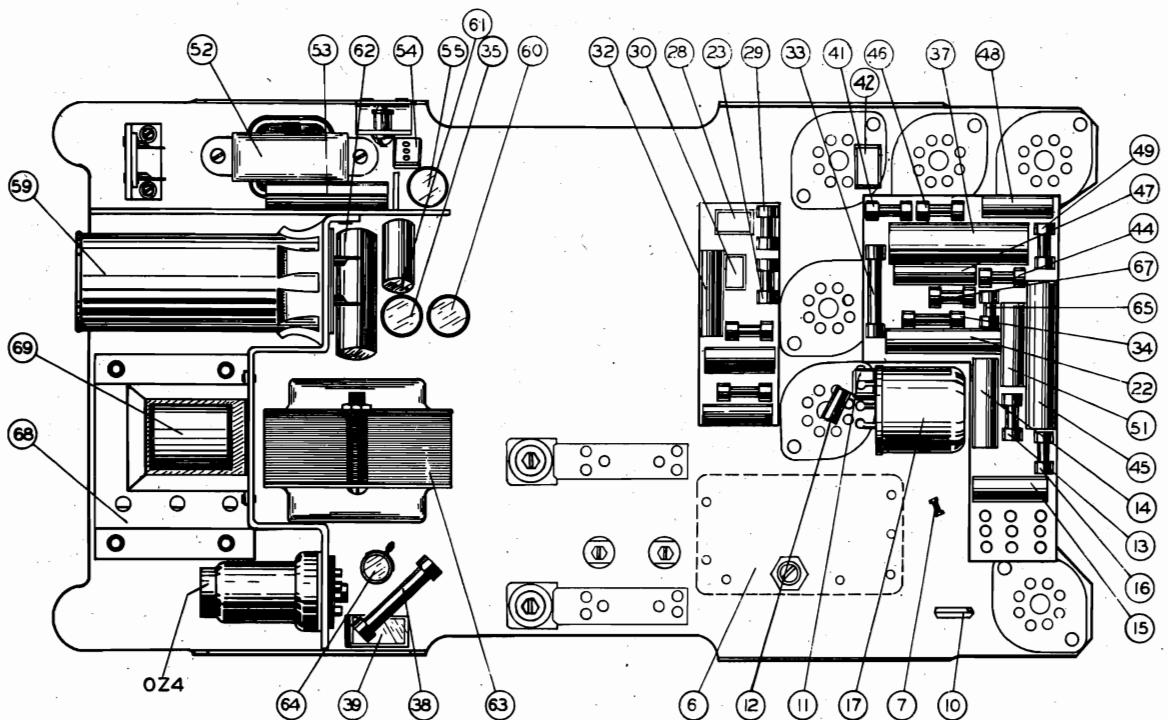

INSIDE VIEW OF CHASSIS WITH END BASE PLATES OPENED OUT


Figure No. 2

MODELS WR675, WR675A

Schematic, Voltage WESTINGHOUSE ELEC. SUPPLY CO.

Socket, Trimmers

Alignment

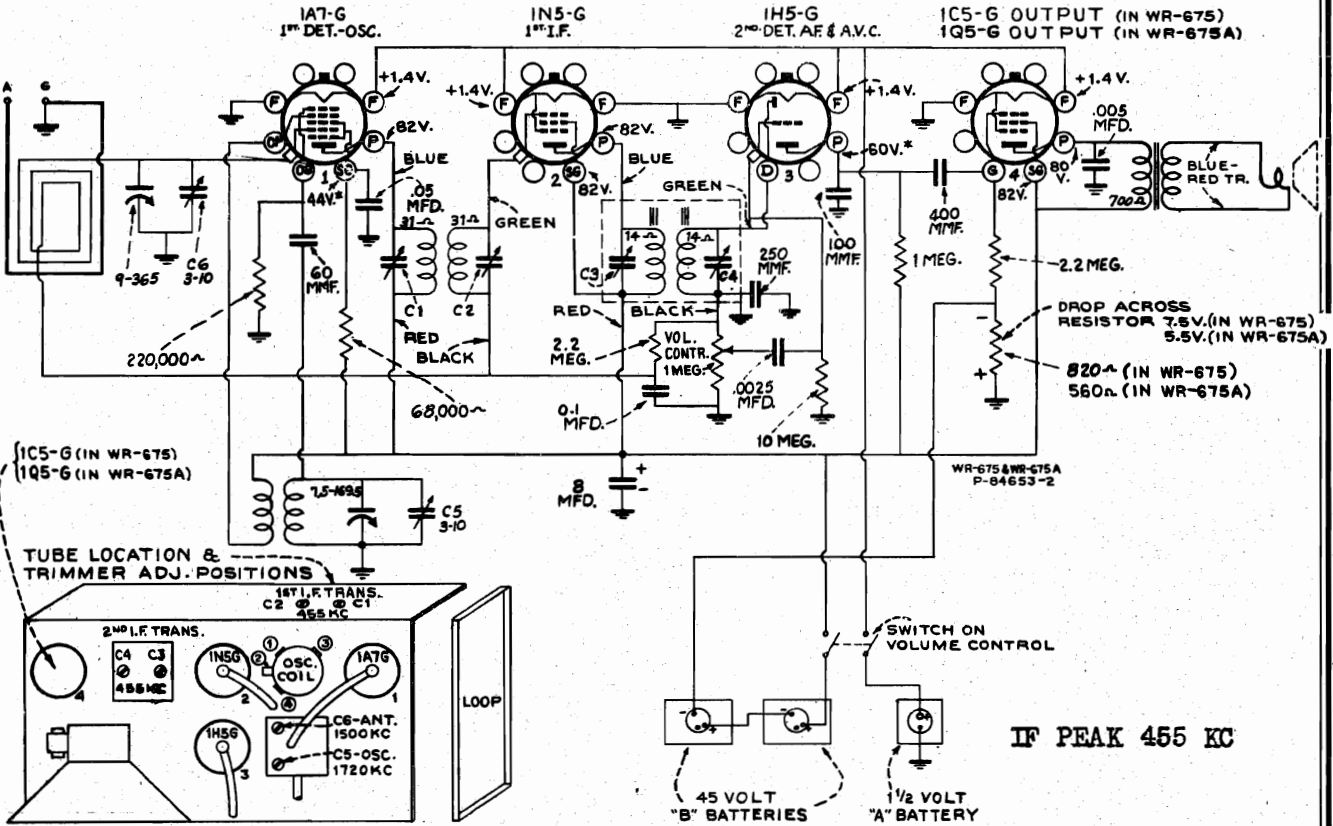

Note: Values with star (*) are operating voltages. Values not starred are actual measured voltages. Measurements are made to chassis unless otherwise indicated, with set tuned to quiet point. Values should hold within approximately ± 20% with rated battery voltage.

Frequency Range..... 550-1,720 kc
 Intermediate Frequency..... 455 kc
BATTERIES REQUIRED
 "A," one 1.5 volt dry plug-type "A," 2½-in. x 3¼-in. x 5½-in.
 (Eveready No. 741 or equivalent)
 "B," two 45 volt dry plug-type "B," 2½-in. x 4-in. x 5½-in.
 (Eveready No. 762 or equivalent)

Alignment Procedure

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-oscillator.—For all alignment operations, keep the output as low as possible to avoid a-v-c action. Connect low side of oscillator to ground terminal on bottom of set.


Pre-setting Dial.—With gang condenser in full mesh, the pointer should be at calibration mark above "55" on dial.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	1A7G 1st-Det. grid cap, in series with .01 mfd.	455 kc	Quiet point at 550 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna terminal thru 220 mmf. capacitor	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal	C6 (antenna)

CURRENT CONSUMPTION
 "A," 0.24 ampere—"B," 9.0 milliamperes
POWER OUTPUT
 Undistorted..... 0.10 watt
 Maximum..... 0.21 watt
LOUDSPEAKER
 Type..... 5-inch permanent-magnet dynamic
 Voice-coil Impedance..... 3.2 ohms at 400 cycles

Precautionary Lead Dress.—The spiral shield on the I.F. grid lead should be brought as close as possible to the grid cap.

Antenna.—An antenna and ground may be connected to "A" and "G" at bottom of cabinet. If total length of antenna and lead-in is more than 150 feet, connect a 300 mmf capacitor in series with lead-in.

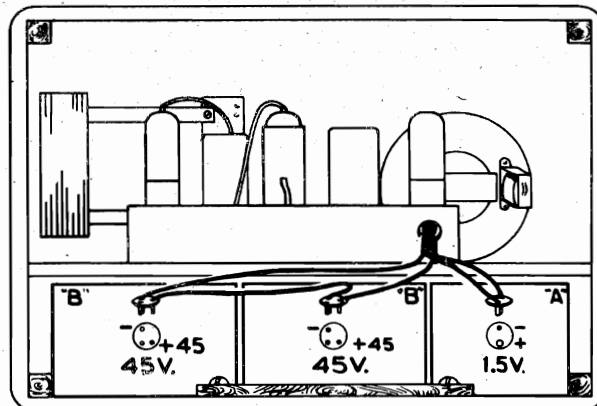

MODEL WR610

Alignment
Parts

WESTINGHOUSE ELEC. SUPPLY CO.

21	CW 4-10	1 mfd., 400 V. condenser	.15
22	RE 4713	470 ohm, 1/2 W. resistor	.10
23	RE 4733	47,000 ohm, 1/2 W. resistor	.10
24	IC 95122	1st I.F. coil assembly	1.75
25-26	RE 4733	Trimmer condenser 80-200 mmf. - part of IC 95122	.10
27	RE 4713	470 ohm, 1/2 W. resistor	.10
28	RE 4733	47,000 ohm, 1/2 W. resistor	.10
29	CW 9557	105 mfd., 400 V. condenser	.30
30	IC 95123	I.F. coil assembly (diode)	2.25
31	VR 9560	Volume control - .5 meg.	1.10
32	RE 4733	470 ohm, 1/2 W. resistor	.10
33	RE 1053	1 meg., 1/2 W. resistor	.10
34	RE 1053	1 meg., 1/2 W. resistor	.10
35	RE 1053	1 meg., 1/2 W. resistor	.10
36-37	IC 95125	I.F. coil assembly 30-100 mmf. - part of IC 95123	.10
38	VR 9560	Volume control - .5 meg.	1.10
39	RE 4733	470 ohm, 1/2 W. resistor	.10
40	RE 1053	1 meg., 1/2 W. resistor	.10
41	RE 1053	1 meg., 1/2 W. resistor	.10
42	RE 1053	1 meg., 1/2 W. resistor	.10
43	RE 1053	1 meg., 1/2 W. resistor	.10
44	CW 4-02	20,000 ohm, 1/2 W. resistor	.10
45	CW 4-02	20,000 ohm, 1/2 W. resistor	.10
46	RE 4743	470,000 ohm, 1/2 W. resistor	.10
47	RE 4743	470,000 ohm, 1/2 W. resistor	.10
48	CV 4-02	.02 mfd., 400 V. condenser	.15
49	CW 6-002	.002 mfd., 500 V. condenser	.15
50	RE 1023	1000 ohm, 1/2 W. resistor	.10
51	VR 9559	Tone control - 20,000 ohm	.75
52	TR 95157	Output transformer	2.00
53	DM 9535	Diaphragm assembly	2.75
54	SK 9569	Speaker assembly	8.00
55	VI 9512	Vibrator	4.25
56	RE 9550	40 mfd., 25 V. electrolytic condenser	.75
57	RE 9528	8 mfd., 250 V. electrolytic condenser	1.25
58	RE 9528	8 mfd., 250 V. electrolytic condenser	1.25
59	CE 9573	8 mfd., 250 V. electrolytic condenser	.75
60	CW 4-10	1 mfd., 400 V. condenser	.15
61-62	RE 3903	39 ohm, 1/2 W. resistor	.10
63	CW 2-50	.5 mfd., 200 V. condenser	.25
64	PP 952	Power pack assembly (not serviced complete)	.10
65	RE 6803	68 ohm, 1/2 W. resistor	.40
66	CW 9539	.02-.02 mfd., 1000 V. condenser	.10
67	CW 9513	.05 mfd., 200 V. condenser	.10
68	RE 6803	68 ohm, 1/2 W. resistor	.10
69	TR 95106	Power transformer	1.50
70-71	LP 9516	Dial lamp - 6.3 V., .15 Amp.	.20
72	RC 95288	Choke	.25
73	CB 9556	On-off switch - part of WR 9560	.80
74	CW 2-50	.5 mfd., 200 V. condenser	.25
75	CV 9528	20,000 ohm, 1/2 W. resistor	.10
76	CV 9528	20,000 ohm, 1/2 W. resistor	.10
77	CV 9519	500 mfd., mica condenser	.20
78	CW 4-25	.25 mfd., 400 V. condenser	.10
79	RE 2233	220,000 ohm, 1/2 W. resistor	.20
80	RE 2233	220,000 ohm, 1/2 W. resistor	.20
81	CW 4-25	.25 mfd., 400 V. condenser	.10
82-83-84	RE 1013	100 ohm, 1/2 W. resistor	.10

BE 956	Tube shield base	
EK 95182	Electrolytic condenser bracket (large)	
EK 95283	Electrolytic condenser bracket (small)	
CV 954	Tube shield	
CV 9524	I.F. coil cover	
CV 9526	I.F. coil cover	
PP 105003	Part seals	
IS 1002	Rubber bumper knob	
IS 95123	Rubber bushing (dial bracket)	
IS 95228	Rubber mounting bushing (power pack and chassis)	
IS 95233	Rubber mounting bushing (power pack and chassis)	
KA 95115	Cabinet (5 used)	
KN 95129	Knob (wave-change - 1 used)	
KN 95151	Knob (wave-change - 1 used)	
PI 95116	Dial escutcheon plate	
PL 95130	Dial plate	
PR 97160	Dial drive cord	
PU 9535	Dial drive pulley	
NI 958	Dial drive cord spring	

- the dial pointer to make sure that it is exactly horizontal.
- Set the test oscillator and dial pointer to 1800 KC.
- With the oscillator still connected to the grid of the detector-oscillator tube, adjust the broadcast oscillator trimmer #14.
- Connect the test oscillator to the Bk antenna lead through a .0002 condenser.
- Adjust the antenna trimmer #9.
- Turn the test oscillator and dial pointer to 600 KC.
- Adjust the oscillator series (lag) condenser #15. This is accomplished by turning the gang condenser slightly to the right until the series (lag) condenser until a maximum is reached.
- Recheck operation #3 and #5.
- Check calibration and sensitivity over the scale.

SHORT-WAVE BAND ADJUSTMENTS

- Turn the wave-change switch to the short-wave position.
- Set the test oscillator and dial pointer to 17 MC. (17,000 KC.).
- Adjust the oscillator trimmer #13. Two positions on the trimmer condenser will be found. The one with the least capacity or with the plates farthest out should be used.
- Adjust the antenna trimmer condenser #5.

WAVE TRAP ADJUSTMENTS

This receiver is provided with a wave trap and the trimmer condenser #3 on this coil should be adjusted to minimize a 455 KC. signal applied to the antenna.

Under actual operating conditions, this trimmer may be adjusted slightly to minimize interfering signals which are known to be on or near the 455 KC. channel.

GENERAL DESCRIPTION

This model is a four-tube, two-band super-heterodyne receiver designed to be operated with only a six-volt storage battery. The receiver employs a type 6BQ6 tube as a detector and first detector, a type 6AV6 tube as a detector-oscillator tube, a type 6X4 tube as a detector-oscillator tube, a type 6AV6 tube as a combined second detector, A.V.C. first audio amplifier, and a type 6K6G tube as an audio output amplifier. The power for this model is supplied by a six-volt storage battery. The plate voltage is secured by the use of a combined vibrator and mechanical rectifier built as a part of the chassis.

LINE-UP CAPACITOR ADJUSTMENTS

To properly align this receiver, it is essential to use a high grade modulated test signal. This signal is fed into the receiver through the R.F. signal lead or it will cause the A.V.C. to function, making proper alignment difficult. The sensitivity of the output meter must be sufficient to give satisfactory reading with a low input signal. Before attempting to align the chassis, the service man should familiarize himself with the general layout of the chassis, the location of the tubes and the various alignment condensers.

I.F. ADJUSTMENTS (455 KC.)


- Connect the receiver to the storage battery by connecting the red lead to the positive terminal and the black lead to the negative terminal of the battery.
- Set the volume control to the maximum position, the tone control to the treble position, the wave-change switch to the broadcast band position and the dial indicator to approximately 600 KC.
- Set the test oscillator to 455 KC. and apply the test signal to the grid of the type 6BQ6 detector-oscillator tube through a .5 mfd. condenser.

BROADCAST BAND ADJUSTMENTS

- With the gang condenser closed, check

WESTINGHOUSE ELEC. SUPPLY CO.

MODEL WR677
Schematic

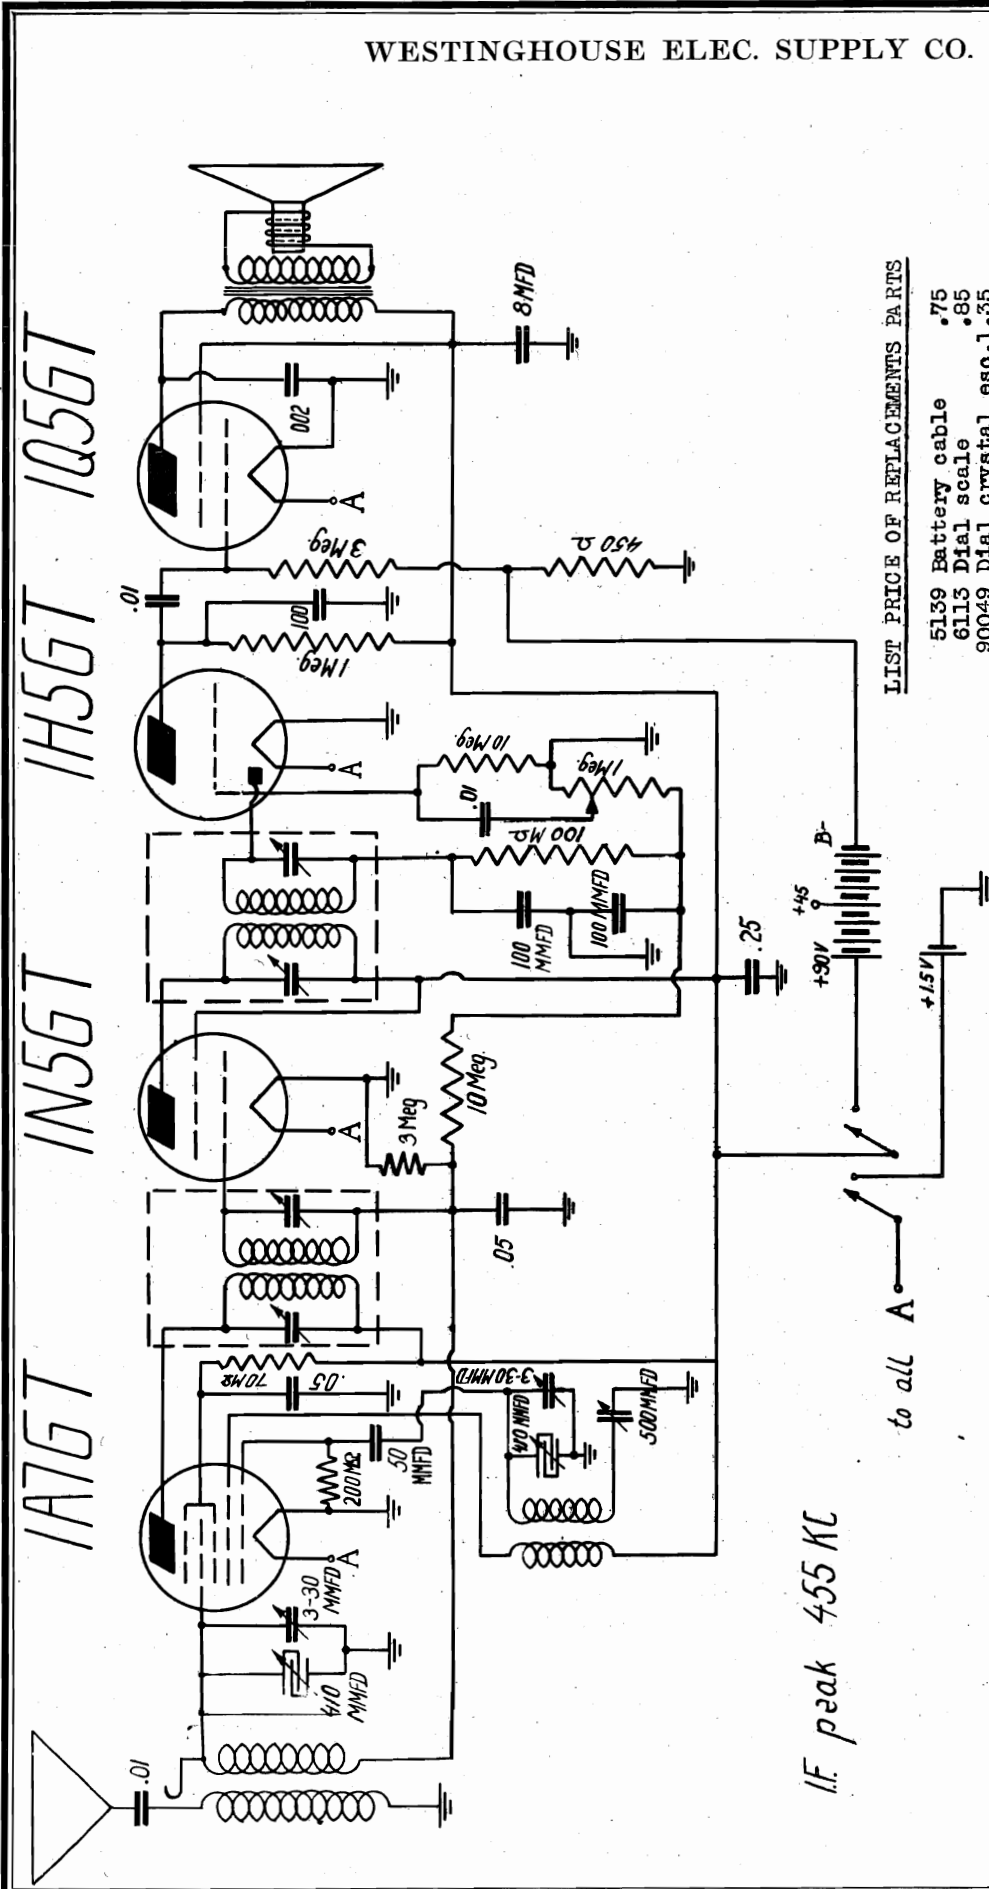

1A7G7 1N5GT 1H5GT 1Q5GT

LIST PRICE OF REPLACEMENTS PARTS

5139 Battery cable	.75
6113 Dial scale	.85
90049 Dial crystal	1.35
7254 Speaker	5.50
8819 Knob	.10
9944 Drive drum	.15
9945 Drive spring	.08
9943 Pointer	.30
1481 Antenna coil	.50
1515 Oscillator coil	.50
1496A I.F. Coil	1.25
1497A Second detector coil	1.25
2422A Two gang Var. cond.	2.50
2463 8 mfd. elect.	.70
3480 comb. vol. cont.	1.00

PRICES SUBJECT TO CHANGE WITHOUT NOTICE

I.F. peak 455 KC


This is a battery operated superheterodyne receiver with full automatic volume control. It is designed to function with an "A" supply of 1.5 volts and a "B" supply of 90 volts. The broadcast range coverage is 530-1650 kilocycles. The battery recommended is the EVEREADY #748, BURGESS #17GD60, RAY-O-VAC #AB82, or the equivalent. A permanent magnet dynamic speaker is used in this receiver.

TUBES

R C A - 1A7GT (1), R C A - 1N5GT (1), R C A - 1H5GT (1), R C A - 1Q5GT (1). See diagram on label under cabinet for location of tubes.

WESTINGHOUSE ELEC. INTERNATIONAL CO.

MODEL WR315
Schematic Alignment
ADJUSTMENT OF I.F., CONTROL
OSCILLATOR AND DISCRIMINATOR

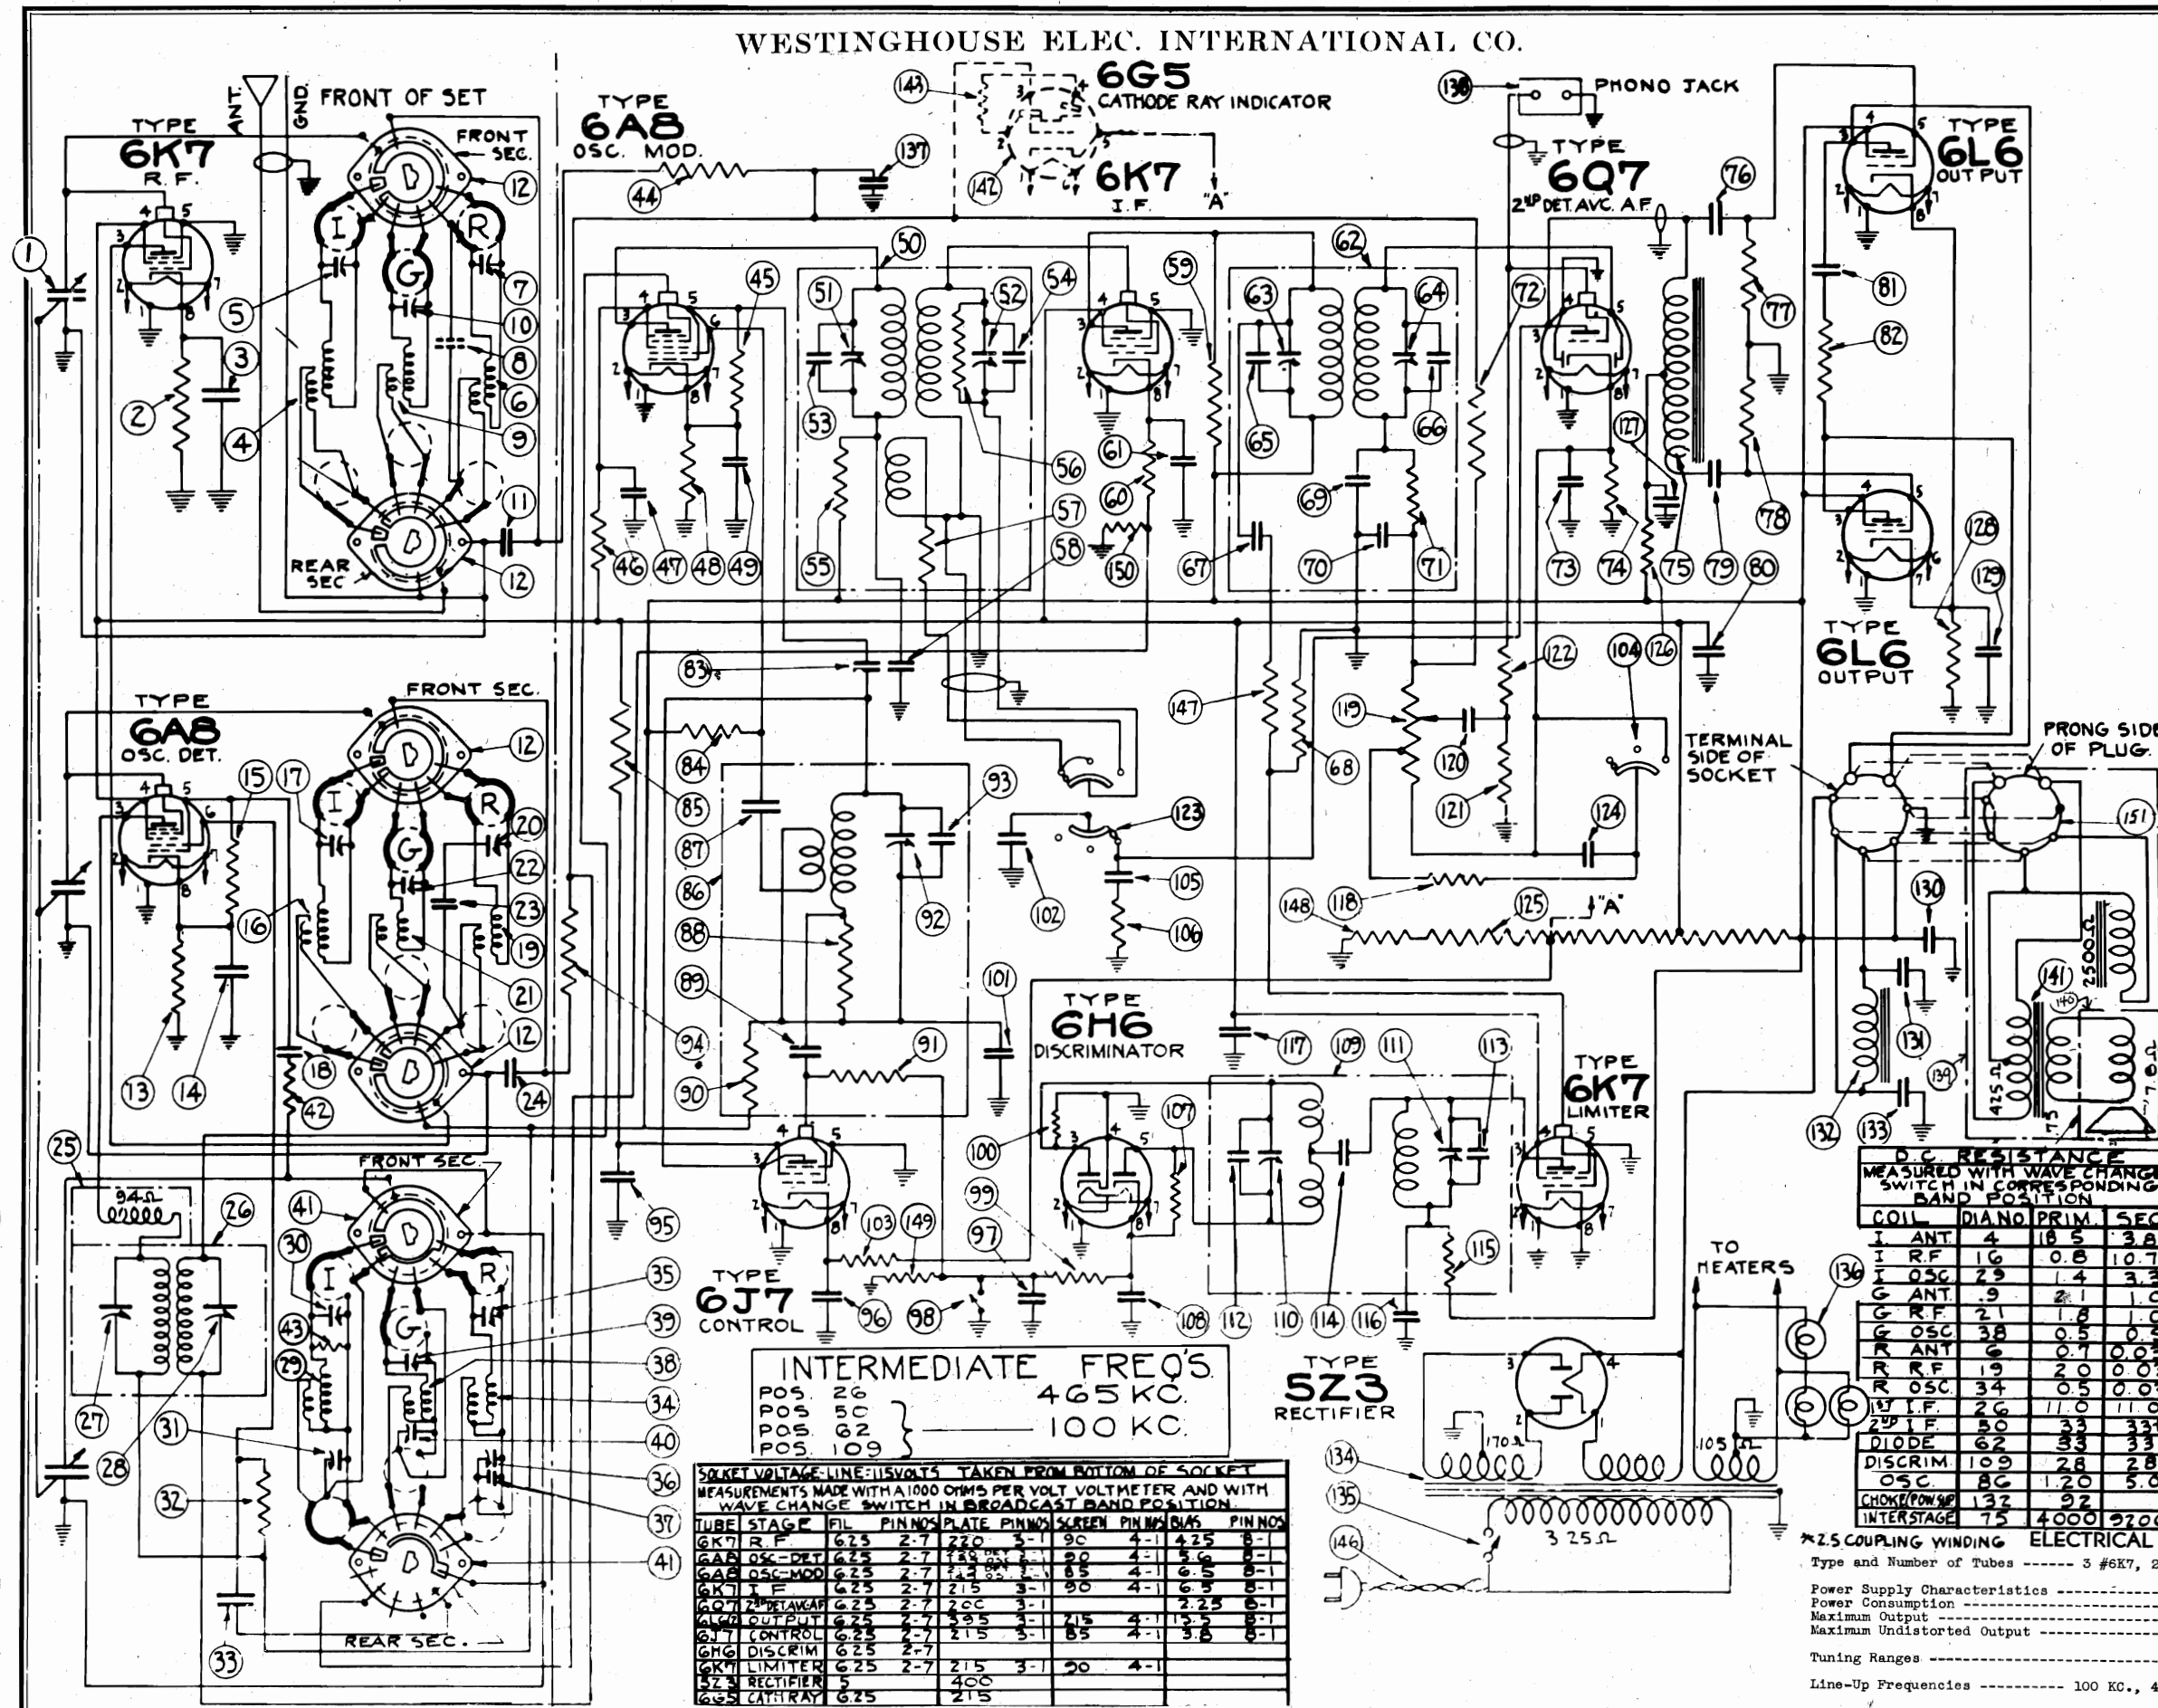

1. Set the volume control on full and turn the bass control to the bass position (position immediately after set is turned).
2. Connect the output meter across the voice coil of the speaker.
3. Set the test oscillator to 100 KC., and adjust the output to give a readable deflection on the output meter when the signal is applied to the grid of the 6K7 I.F. amplifier tube through a 0.5 mfd. blocking condenser.
4. Connect a 10,000ohm resistor across the primary winding of the third I.F. coil #62. This should be connected to terminals marked "A" and "B" in Figure #2.
5. Adjust trimmer #64 to maximum output, reducing the output of the test oscillator as required.
6. Remove the 10,000 ohm resistor from the primary of I.F. coil #62 and connect across the secondary winding from terminals marked "C" and "D".
7. Adjust trimmer #65 to maximum output, reducing the output of the test oscillator as required. Remove 10,000 ohm resistor.
8. Turn switch #98 to the left-hand position (viewed from rear of chassis).
9. Set the output of the test oscillator to a high level.
10. Connect a 0 to 5 microammeter across resistor #149 and adjust trimmer condenser #111 to maximum swing of the microammeter, keeping the output of the signal generator set to a point which will give a deflection of approximately 5 microamperes when condenser #111 is tuned to maximum deflection. WHEN THE SIGNAL GENERATOR IS SET TO THIS OUTPUT, DO NOT ALTER THE OUTPUT OF THE SIGNAL GENERATOR UNTIL THE ALIGNMENT OF THE DISCRIMINATOR CIRCUIT IS COMPLETED.
11. Adjust trimmer #110 until the microammeter reading is reduced exactly to zero.
12. Turn switch #98 to the right-hand position and proceed with the alignment of the I.F.
13. Apply the test signal to the grid of the 6A8 oscillator-modulator tube.
14. Connect the 10,000 ohm resistor across the primary of I.F. coil #50 by connecting it to the terminals marked "E" and "F" in Figure #2.
15. Adjust trimmer #52 to maximum output, reducing the output of the test oscillator as required.
16. Remove the 10,000 ohm resistor and connect across the secondary of I.F. transformer #50. Connect to terminals marked "G" and "H".
17. Adjust trimmer #51 to maximum output, reducing the output of the test oscillator as required.
18. Remove the 10,000 ohm resistor.
19. Set the test oscillator to 465 KC., and adjust the control oscillator trimmer #92 to maximum output.
20. Apply the test signal to the grid of the type 6A8 oscillator-detector tube.
21. Connect the 10,000 ohm resistor across the primary of I.F. transformer #26 by connecting it to the points marked "J" and "K" in Figure #2.
22. Adjust trimmer #28 to maximum output, reducing the output of the test oscillator as required.
23. Remove the 10,000 ohm resistor and connect across the secondary of the I.F. transformer #26 by connecting it to the points marked "L" and "M" in Figures #1 and #2.
24. Adjust trimmer #27 to maximum output, reducing the output of the test oscillator as required. Remove the 10,000 ohm resistor.

INTERMEDIATE FREQ'S

POS. 26	465 KC.
POS. 50	
POS. 62	
POS. 109	100 KC.

SOCKET VOLTAGE LINE-VOLTS TAKEN FROM BOTTOM OF SOCKET
MEASUREMENTS MADE WITH A 1000 OHMS PER VOLT VOLTMETER AND WITH WAVE CHANGE SWITCH IN BROADCAST BAND POSITION

TUBE STAGE	FILE	PINNO	PLATE	PINNO	SCREEN	PINNO	DIAS	PINNO
6K7 R.F.	625	2-7	220	3-1	9C	4-1	425	8-1
6A8 OSC-DET.	625	2-7	220	3-1	9C	4-1	425	8-1
6A8 OSC-MOD.	625	2-7	220	3-1	9C	4-1	425	8-1
6K7 I.F.	625	2-7	215	3-1	9C	4-1	425	8-1
6Q7 2 ND DET. AVC. AF.	625	2-7	200	3-1	9C	4-1	225	8-1
6L6 OUTPUT	625	2-7	395	3-1	215	4-1	135	8-1
6J7 CONTROL	625	2-7	215	3-1	85	4-1	3.8	8-1
6H6 DISCRIM.	625	2-7						
6K7 LIMITER	625	2-7	215	3-1	20	4-1		
5Z3 RECTIFIER	5		400					
6G5 CATH. RAY	625		215					

D.C. RESISTANCE MEASURED WITH WAVE CHANGE SWITCH IN CORRESPONDING BAND POSITION

COIL	DIAG.	PRIM.	SEC.
I ANT	4	18.5	3.8
I RF	16	0.8	10.7
I OSC	29	1.4	3.3
G ANT	9	2.1	1.0
G RF	21	1.8	1.0
G OSC	38	0.5	0.9
R ANT	6	0.7	0.03
R RF	19	2.0	0.03
R OSC	34	0.5	0.03
M I.F.	26	11.0	11.0
2 ND I.F.	50	33	337
DIODE	62	33	33
DISCRIM	109	28	28
OSC	8C	120	5.0
CHOK (POWER)	132	92	
INTERSTAGE	75	4000	3200

*25 COUPLING WINDING ELECTRICAL SPECIFICATIONS continued

Type and Number of Tubes ----- 3 #6K7, 2 #6A8, 1 #6Q7, 2 #6L6, 1 #6H6, 1 #6J7, 1 #5Z3, 1 #6G5 - Total 12

Power Supply Characteristics ----- 105 to 125 volt, 50 to 60 cycle A.C.

Power Consumption ----- 125 Watts

Maximum Output ----- 21 Watts


Maximum Undistorted Output ----- 12.5 Watts

Tuning Ranges ----- (White Band - 525 to 1,000 KC.
(Green Band - 1750 to 6,000 KC.
(Red Band - 5800 to 18,500 KC.)



Line-Up Frequencies ----- 100 KC., 465 KC., 1600 KC., 570 KC., 5500 KC., 1900 KC., 17,000 KC., and 6000 KC.

WILCOX-GAY CORP.

MODELS 7G5, 7GB5
Schematic, Socket
Trimmers

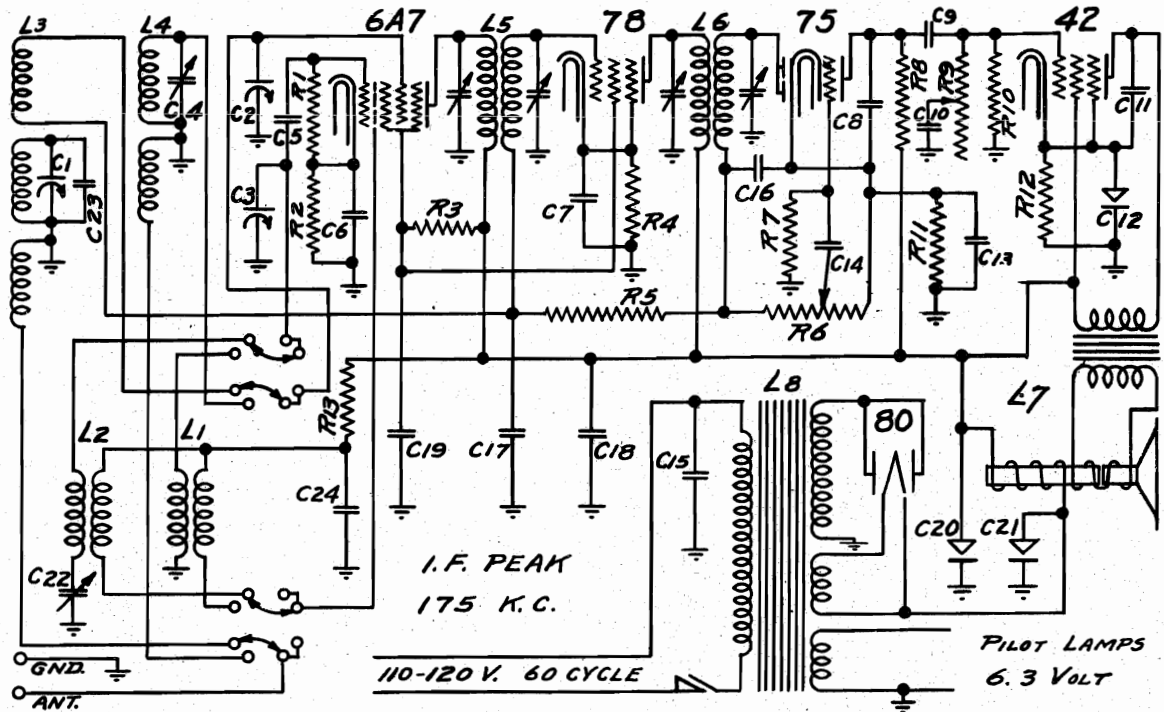

25-2124

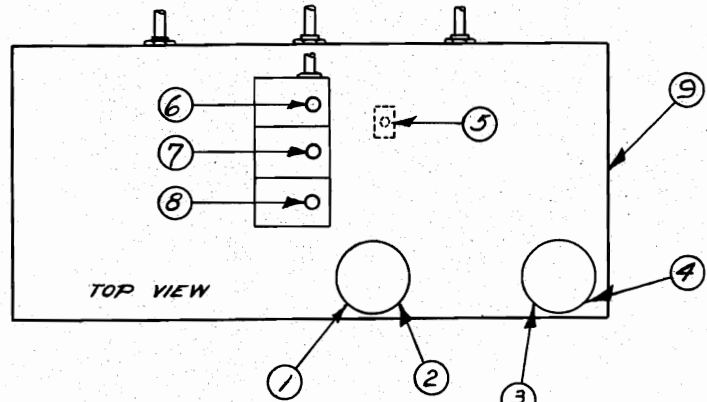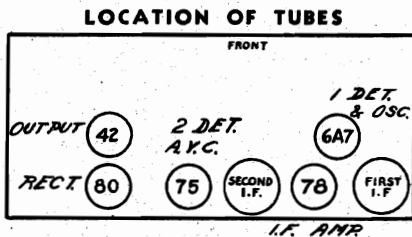

FOR VOLTAGE and ALIGNMENT
SEE INDEX

CODE	PART NO.	RESISTORS
R1	53-941	20,000 Ohm Type M Resistor
R2	53-2014	200 Ohm Type M Resistor
R3	53-1042	25,000 Ohm Type M Resistor
R4	53-1062	250 Ohm Wirewound Resistor
R5	53-926	1 Meg Ohm Type M Resistor
R6	19-2007	500,000 Ohm Volume Control & Switch
R7	53-925	500,000 Ohm Type M Resistor
R8	53-924	250,000 Ohm Type M Resistor
R9	19-2009	250,000 Ohm Tone Control
R10	53-925	500,000 Ohm Type M Resistor
R11	53-919	5,000 Ohm Type M Resistor
R12	53-1063	500 Ohm Wirewound Resistor
R13	53-920	10,000 Ohm Type M Resistor

CODE	PART NO.	CONDENSERS (Cont'd.)
C12	18-928	25 Mfd. 25 V. Dry Elect. Condenser
C13	75-2006	.1 Mfd. 200 V. Paper Condenser
C14	75-2006	.1 Mfd. 200 V. Paper Condenser
C15	75-2003	.01 Mfd. 400 V. Paper Condenser
C16	76-307	.0005 Mfd. Mica Condenser
C17	75-2006	.1 Mfd. 200 V. Paper Condenser
C18	75-2012	.5 Mfd. 400 V. Paper Condenser
C19	75-2006	.1 Mfd. 200 V. Paper Condenser
C20	18-2006	16 Mfd. 250 W. V. Elect. Condenser
C21	18-2006	12 Mfd. 325 W. V. Elect. Condenser
C22	78-2031	600-1350 Mmfd. Trimmer Condenser
C23	76-2005	.00001 Mfd. Mica Condenser
C24	75-2003	.01 Mfd. 400 V. Paper Condenser

CODE	PART NO.	CONDENSERS
C1, C2, C3	77-2011	3 Gang Tuning Condenser
C4	78-2010	3-30 Mmfd. Trimmer Condenser
C5	76-2002	.00005 Mfd. Condenser
C6	75-2006	.1 Mfd. 200 V. Paper Condenser
C7	75-2006	.1 Mfd. 200 V. Paper Condenser
C8	76-265	.001 Mfd. Mica Condenser
C9	75-2006	.1 Mfd. 200 V. Paper Condenser
C10	75-2003	.01 Mfd. 400 V. Paper Condenser
C11	75-2001	.002 Mfd. 600 V. Paper Condenser

CODE	PART NO.	INDUCTANCES
L1	17-2149	Foreign Band Oscillator Coil Assembly
L2	17-2160	Broadcast Oscillator Coil Assembly
L3	17-2151	Broadcast Preselector Coil Assembly
L4	17-2152	Foreign Band Preselector Coil Assembly
L5	68-2031	First I. F. Transformer Assembly
L6	68-2042	Second I. F. Transformer Coil Assembly
L7	64-2045	5" Speaker, 1500 Ohm Field, 42 Tube Trans.-7G5
L7	64-2046	6 1/2" Speaker, 1500 Ohm Field, 42 Tube Trans.-7GB5
L8	80-2009	Power Transformer for 110-120 V. 60 Cycle

MODELS 7G5,7GB5
 MODEL 7J7
 MODEL 7K7
 Alignment, Voltage

WILCOX-GAY CORP.

MODEL 7J7 - 7K7

TUBE	CIRCUIT	PLATE TO GROUND	SCREEN TO GROUND	CATHODE TO GROUND	2 PLATE TO GROUND	2 GRID TO GROUND
78	R-F Amplifier	290	90	3.8		
6A7	1st Det. & Osc.	290	90	3.6	180	- 18
78	I-F Amplifier	290	90	3.7		
78	I-F Amplifier	260	90	3.4		
75	2nd Det. & AVC	145		15.		
42	Power Output	275	290	20.		
80	Rectifier					

B+ Voltage 290 V. - Speaker Field Drop 85 V.
 Meter 1000 ohms per volt - 750 volt Scale

SIGNAL GENERATOR CONNECTION	SIGNAL GENERATOR FREQUENCY	DIAL POSITION	WAVE BAND SWITCH POSITION	TRIMMER NUMBER	OUTPUT SIGNAL
-----------------------------	----------------------------	---------------	---------------------------	----------------	---------------

Connect a 100,000 ohm resistor from plate of 2nd I-F tube to gnd. Remove grid clip from 6A7

Control Grid of 6A7	456 KC	1400 KC	Broadcast (Left)	1	Max. 1
" " " "	" "	" "	" "	2,3,4,5,6 ²	Max.

Disconn. 100,000 ohm resistor and DO NOT make any other adj. of I-F Amp. Conn. Grid Clip to 6A7.

*Antenna & Ground Post	1400 KC	1400 KC	Broadcast (Left)	7,8,9	Max.
" " " "	600 "	600 "	" "	10 ³	Max.
" " " "	5 MC	5 MC	Police (Center)	11,12,13	Max.
" " " "	2 "	2 "	" "	14	Max.
" " " "	15 "	15 "	Foreign (Right)	15,16,17 ⁴	Max.

Volume Control in "Full On" position at all times.

(*) Connect a standard dummy antenna between signal generator and receiver.

NOTES - (1) Maintain a midscale reading on output meter across primary of output transformer by adjustment of the signal generator. (2) Repeat above procedure and critically trim each adjustment to absolute resonance to insure perfect alignment. The I.F. sensitivity should be from 15 to 25 microvolts. (3) Investigate ganging of trimmers No. 7, 8, 9 and 10 at 600 KC, 800 KC, 1000 KC, 1200 KC and 1400 KC and any discrepancy of ganging or scale tracking should be corrected by bending slotted side plates of the variable condenser. (4) Investigate ganging of trimmers 15, 16, and 17 at 10 MC and 6 MC to ascertain whether or not the circuits are tracked.

MODEL 7G5 - 7GB5

TUBE	CIRCUIT	PLATE TO GROUND	SCREEN TO GROUND	CATHODE TO GROUND	2- PLATE TO GROUND	2 GRID TO GROUND
6A7	1st Det. & Osc.	205	72	2.4	155	- 6.5
78	I-F Amplifier	205	72	2.		
75	2nd Det. & AVC	72		1.3		
42	Power Output	190	207	14		
80	Rectifier					

B+ Voltage 207 - Speaker Field Voltage 70
 Line Voltage was 120 - Meter 1000 ohms per volt

SIGNAL GENERATOR CONNECTION	SIGNAL GENERATOR FREQUENCY	DIAL POSITION	WAVE BAND SWITCH POSITION	TRIMMER NUMBER	OUTPUT SIGNAL
-----------------------------	----------------------------	---------------	---------------------------	----------------	---------------

Remove Grid Clip from 6A7.


Control Grid of 6A7	175 KC	1400 KC	Broadcast (Left)	1,2,3,4 ²	Max. 1
---------------------	--------	---------	------------------	----------------------	--------

Connect Grid Clip to 6A7.



*Antenna & Ground Post	600 "	600 "	" "	5	Max. 1
" " " "	1400 "	1400 "	" "	6,7,8	Max. 1
" " " "	600 "	600 "	" "	5	Max. 1
" " " "	15 MC	15 MC	Foreign (Right)	9	Max. 1

WILCOX-GAY CORP.

MODEL 7J7
Schematic, Socket
Trimmers

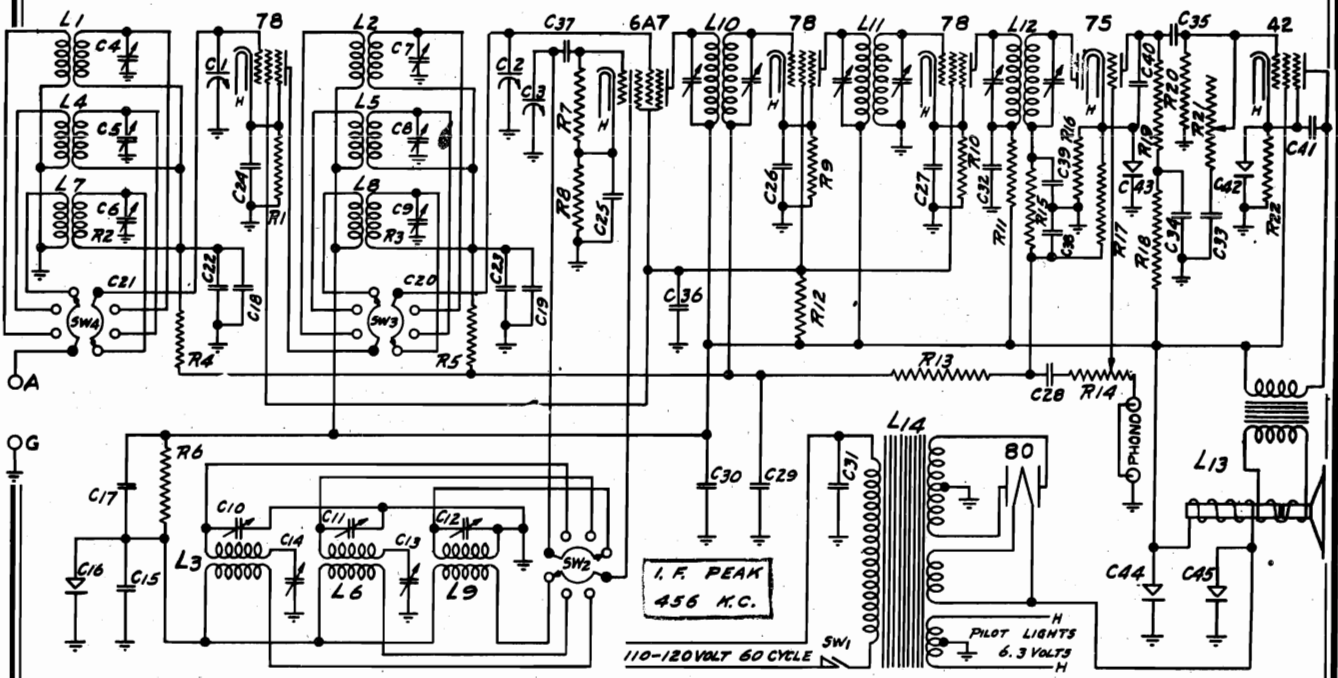

LOCATION OF TUBES

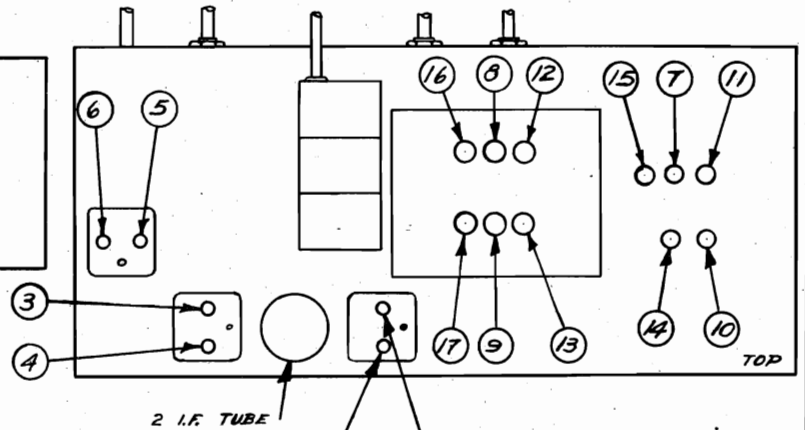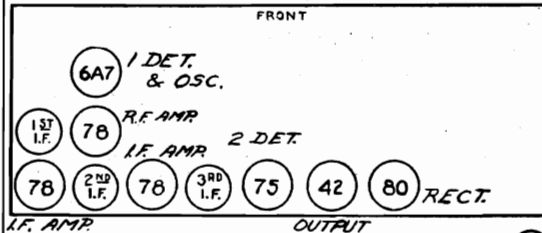

FOR ALIGNMENT AND VOLTAGE
DATA SEE INDEX

CODE	PART NO.	RESISTORS
R1	53-1063	800 Ohm Wirewound Resistor
R4	53-923	100,000 Ohm Type M Resistor
R5	53-923	100,000 Ohm Type M Resistor
R6	53-941	80,000 Ohm Type M Resistor
R7	53-941	20,000 Ohm Type M Resistor
R8	53-1068	250 Ohm Wirewound Resistor
R9	53-1063	800 Ohm Wirewound Resistor
R10	53-1068	800 Ohm Wirewound Resistor
R11	53-919	5,000 Ohm Type M Resistor
R12	53-195	25,000 Ohm Type J Resistor
R13	53-926	1 Meg Ohm Type M Resistor
R14	19-2008	500,000 Ohm Volume Control
R15	53-898	50,000 Ohm Type M Resistor
R16	53-925	500,000 Ohm Type M Resistor
R17	53-919	5,000 Ohm Type M Resistor
R18	53-923	100,000 Ohm Type M Resistor
R19	53-924	250,000 Ohm Type M Resistor
R20	53-925	500,000 Ohm Type M Resistor
R21	19-2009	850,000 Ohm Tone Control
R22	53-1063	500 Ohm Wirewound Resistor

CODE	PART NO.	CONDENSERS (Cont'd.)
C31	75-2003	.01 Mfd. 400 V. Paper Condenser
C32	75-2003	.01 Mfd. 400 V. Paper Condenser
C33	75-2003	.01 Mfd. 400 V. Paper Condenser
C34	75-2007	.1 Mfd. 400 V. Paper Condenser
C35	75-2007	.1 Mfd. 400 V. Paper Condenser
C36	75-2007	.1 Mfd. 400 V. Paper Condenser
C37	75-2002	.00005 Mfd. Mica Condenser
C38	76-2801	.0001 Mfd. Mica Condenser
C39	76-2301	.001 Mfd. Mica Condenser
C40	76-255	.001 Mfd. Mica Condenser
C41	75-2002	.004 Mfd. 500 V. Paper Condenser
C42	18-928	25 Mfd. 25 V. Electrolytic Condenser
C43	18-928	25 Mfd. 25 V. Electrolytic Condenser
C44	18-2005	12 Mfd. 325 W. V. Elect. Condenser
C45	18-721	8 Mfd. 450 W. V. Elect. Condenser

CODE	PART NO.	CONDENSERS
C1, C2, C5	77-3011	3 Gang Tuning Condenser
C4, C6, C8	78-2030	3-50 Mfd. 3 Gang Trimmer Cond.
C7, C8, C9	78-2030	3-50 Mfd. 3 Gang Trimmer Cond.
C10, C11, C12	78-2030	3-50 Mfd. 3 Gang Trimmer Cond.
C13, C14	78-2028	600 and 1600 Mfd. 2 Gang Trimmer Cond.
C15	75-2003	.01 Mfd. 400 V. Paper Condenser
C16	18-2004	4 Mfd. 450 W. V. Electrolytic Condenser
C17	76-662	.002 Mfd. Mica Condenser
C18	76-662	.002 Mfd. Mica Condenser
C19	76-662	.002 Mfd. Mica Condenser
C22	75-2005	.1 Mfd. 200 V. Paper Condenser
C23	75-2005	.1 Mfd. 200 V. Paper Condenser
C24	75-2005	.1 Mfd. 200 V. Paper Condenser
C25	75-2005	.1 Mfd. 200 V. Paper Condenser
C26	75-2005	.1 Mfd. 200 V. Paper Condenser
C27	75-2005	.1 Mfd. 200 V. Paper Condenser
C28	75-2005	.1 Mfd. 200 V. Paper Condenser
C29	75-2005	.1 Mfd. 200 V. Paper Condenser
C30	75-2012	.5 Mfd. 400 V. Paper Condenser






CODE	PART NO.	INDUCTANCES
L1	17-2163	Broadcast Antenna Coil Assembly
L2	17-2165	Broadcast R. F. Coil Assembly
L3	17-2176	Broadcast Oscillator Coil Assembly
L4	17-2168	Police Band Antenna Coil Assembly
L5	17-2169	Police Band R. F. Coil Assembly
L6	17-2177	Police Band Oscillator Coil Assembly
L7	17-2171	Foreign Band Antenna Coil Assembly
L8	17-2172	Foreign Band R. F. Coil Assembly
L9	17-2178	Foreign Band Oscillator Coil Assembly
L10	68-2049	First I. F. Transformer Assembly
L11	68-2049	Second I. F. Transformer Assembly
L12	68-2050	Third I. F. Transformer Assembly
L13	64-2050	8" Speaker, 1000 Ohm Field, 42 Tube Trans.
L14	80-2022	110-120 V. 60 Cycle Power Transformer

CODE	PART NO.	SWITCHES
SW1	66-2014	Power Line Off-On Switch
SW2	66-2015	Front Panel of Band Switch
SW3	66-2015	Center Panel of Band Switch
SW4	66-2015	Rear Panel of Band Switch

Wireless Record Players
Schematics, Notes

WILCOX-GAY CORP.

MODEL A61
MODEL A63
MODEL A64

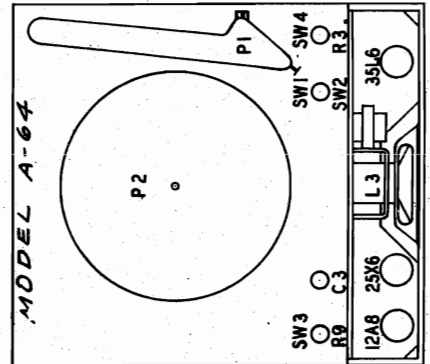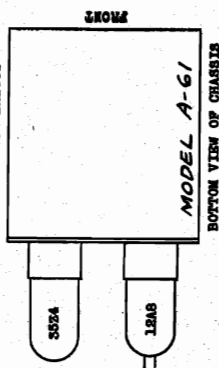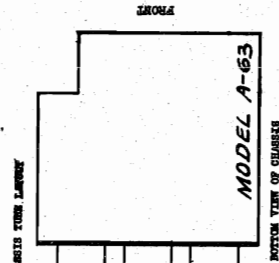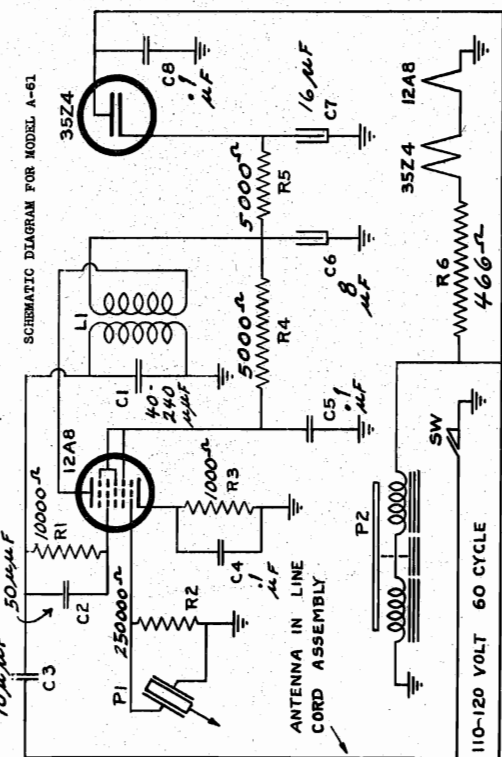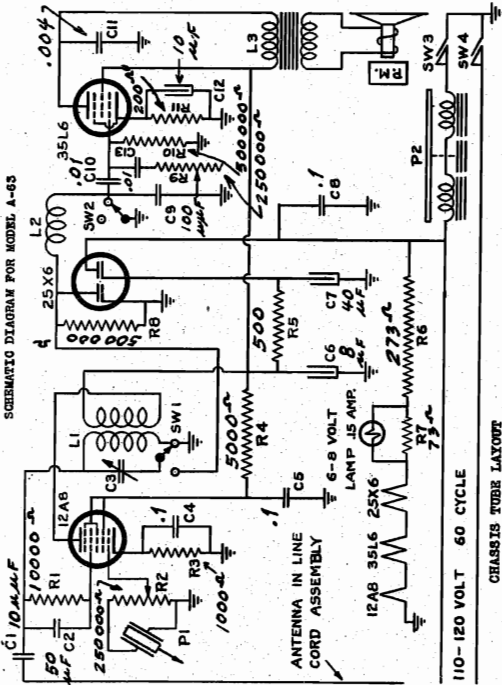

The radio receiver should now be turned on, and first, it should be ascertained whether the motor runs at 560 r.p.m. If not, the motor speed should be adjusted by turning the motor speed control knob clockwise until the motor speed is 560 r.p.m. and a place selected that is free from a radio station. The volume and tone controls should be adjusted as usual.

To place the unit in operation, the motor switch and volume control should be turned to its maximum right hand position, the tone control turned to its maximum left hand position, and the motor switch and tone control turned on so that the table will rotate. The "Remote-Phono" switch should then be turned to "Remote" position.

A new needle should be placed in the pickup arm and the arm set gently on the outside of the record.

To the left of the motor control knob is a small metal cap. This should be pried up with the screw driver furnished for adjustment. The screw driver should be inserted into the screw immediately below the hole thus opened. This adjustment should be made in the direction until the record is heard to play from the record player. The tone control knob should be turned clockwise until the record player is tuned exactly to the radio station. The motor speed control knob should be turned to its maximum right hand position. At any subsequent time the record player may be tuned in at this dial position on the receiver.

The volume control should be operated mainly on the receiver, however, if it is more convenient to bring about this control at the record player, the right hand control may be used, otherwise it should always be left in its maximum position.

When it is desired to operate the record player when radio interference is extremely high, it may be necessary to connect a wire from the tone control knob to the plug of the record player, to the antenna of the radio receiver. To make a metallic connection at this point, but simply wrap the wire around the signal intensity to counter-rotate four turns. This will provide sufficient signal intensity to operate the record player.

In case it is difficult to find a cleared channel, or if noise is present, the player may be moved closer to the radio set or its antenna to overcome these conditions.

Change needles regularly for best results.

Be sure to tune your set accurately to the record player and don't overlook the necessity of having a cleared channel for operation.

This combination record player and phonograph unit is designed to reproduce all current brand of records through any radio receiver, or through the unit itself. It is simply a matter of connecting the unit to the antenna wires, and the clarity and faithfulness of the reproduction will depend on the quality of the radio receiver. With the use of the "Remote-Phono" switch it can also receive reproduction is not desired or when the unit is used as a radio receiver.

On the front of the record player toward the right hand side will be noted three knobs. The knob farthest to the right is the "Master" volume control. Turned to the right a slight click will be heard, and the pilot light will be seen to have become lighted under the tone arm. The remainder of the right hand knob increases volume and is related to the control purposes. Rotated to the right, it initially be set to the maximum right hand position so that the maximum volume of the record player is obtainable. The control farthest to the left is the "Motor" switch and tone control and operates the table. This knob should be turned to the right when it is desired that the table revolve, and turned to the left when it is desired that the table stop. The "Phono" switch, when turned to "Phono" position, adjusts the unit for use as a radio receiver, and when turned to "Remote" position, the adjustment is such that the unit itself will reproduce the record being played.

*NOTES SIMILAR FOR
MODEL A-61

WILCOX-GAY CORP.



MODELS A70, A81, A82
Chassis 9J9
Schematic, Switch Data

CHASSIS MODEL 9J9

MODEL A-70



SCHEMATIC DIAGRAM

25-2170

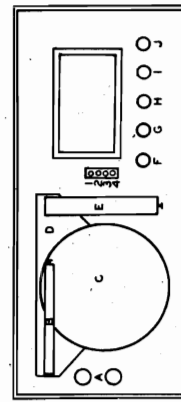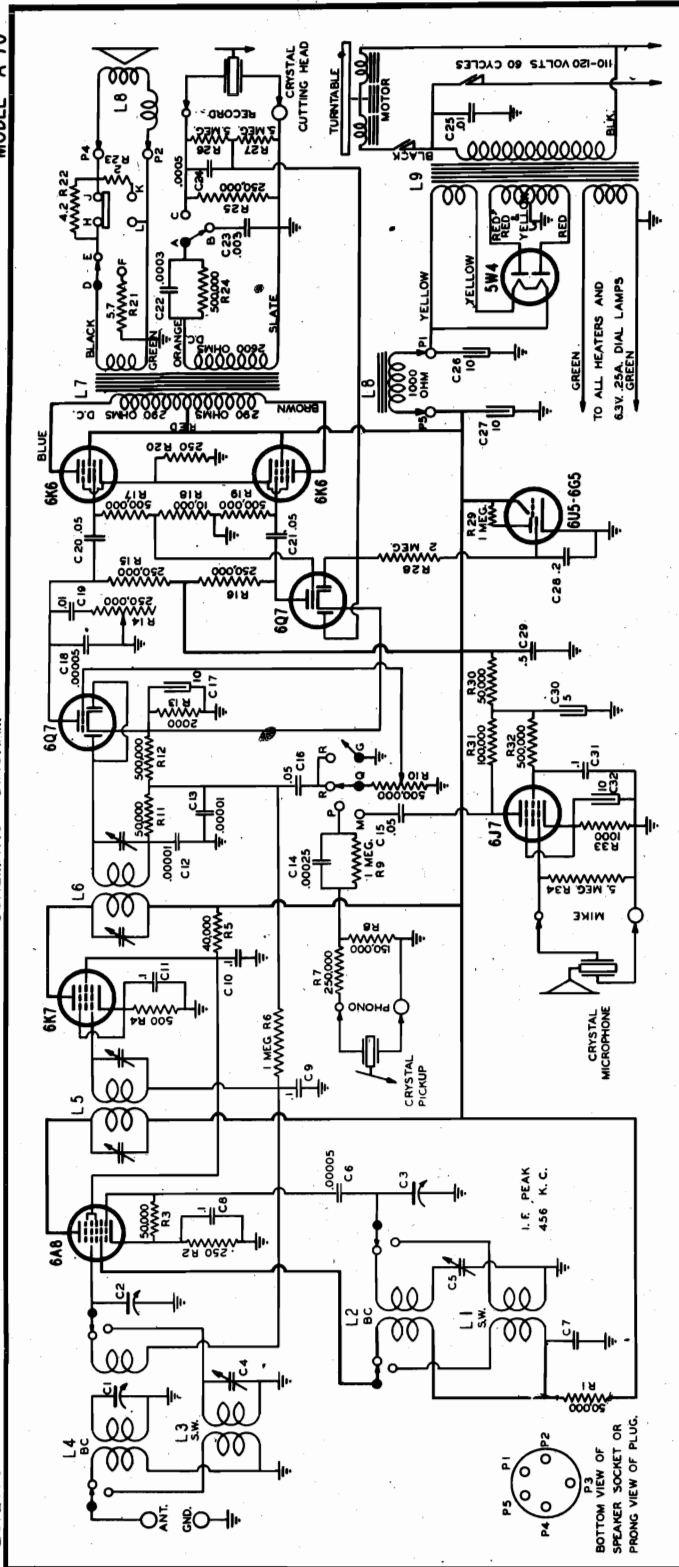

- A—NEEDLE CUPS ... B—PHONO ARM ASSEMBLY ... C—TURN-TABLE ... D—MOTOR & ARM PLATE ... E—CUTTER ARM ASSEMBLY ... F—MOTOR CONTROL ... G—MASTER SWITCH & VOLUME CONTROL ... H—TONE CONTROL ... I—BAND SWITCH ... J—TUNING CONTROL.
- 1—TO USE AS PHONOGRAPH
- 2—TO USE AS PUBLIC ADDRESS
- 3—TO RECORD MICROPHONE
- 4—TO RECORD RADIO


- 1 OPENS Q-R, CLOSES Q-P, R-G
 - 2 OPENS Q-R, CLOSES Q-M
 - 3 OPENS Q-R, D-E, A-B
CLOSES Q-M, D-F, A-C
 - 4 FIRST POS. OPENS A-B, CLOSES A-C
REMAINS CLOSED H-J
 - 4 SECOND POS. OPENS H-J, CLOSES K-L
REMAINS CLOSED A-C
- TO USE RADIO ONLY—ALL PLUNGERS UP
CIRCUITS CLOSED Q-P, D-E, A-B, H-J
CIRCUITS OPEN Q-P, D-F, A-C, K-L, Q-M, G-R

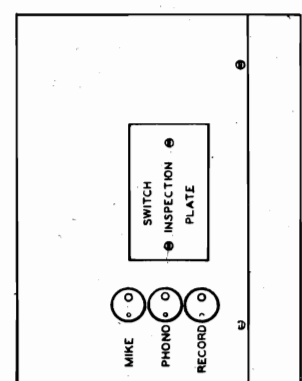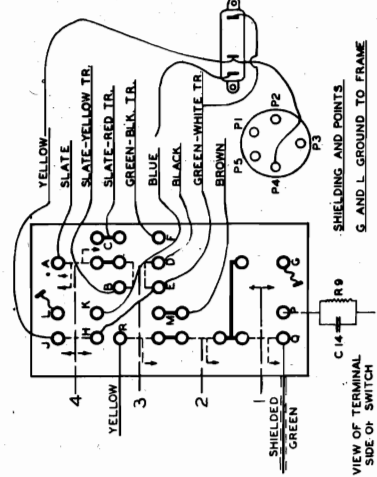

DATE DEC. 12, '39

MODELS A70, A81, A82
 Chassis 9J9
 Chassis, Voltage


WILCOX-GAY CORP.

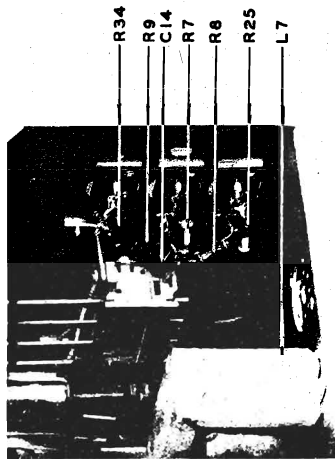

MODEL No. A70-A81-A82
 DATE 1-17-40

CHASSIS 9J9

PARTS LAYOUT -

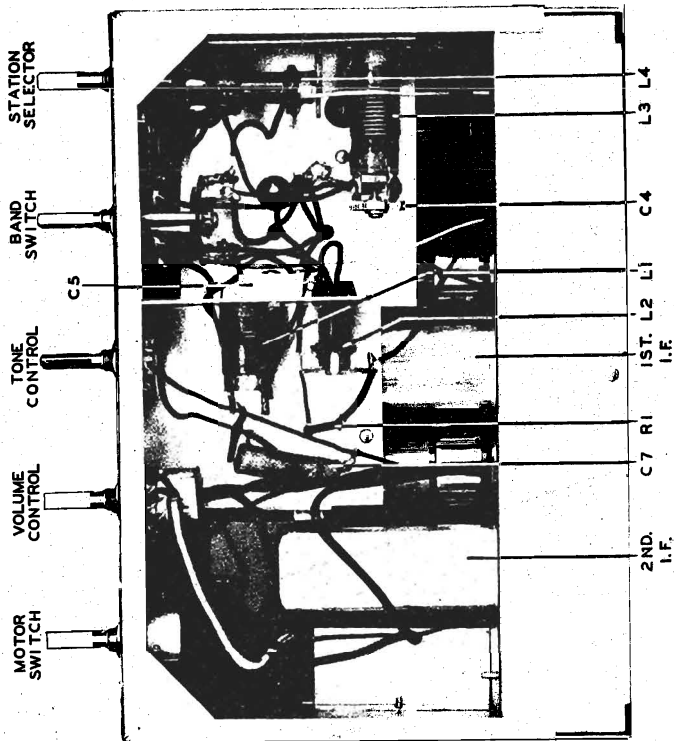


VOLTAGE CHART

MODEL A-70 RECORDIO - Line Voltage 115 V. - P1 to Gnd. 360 V. - P5 to Gnd. 260 V. P1 to P5 (spr. field) 100 V. - Aerial disconnected. All voltages measured against chassis ground except as noted.

TUBE	POSITION	PLATE	SCREEN	CATHODE
6A8	1st Det.	260	80	2.8
6K7	L.F.	260	80	3.8
6Q7	2nd Det.	100*		1.8
	Osc.	260	80	3.8
	L.F.	260	80	1.8
	2nd Det.	100*		1.8
	6J7	Miles Amp.	35 to 60*	35*
	6K6	Output	250	260
	6K6	Output	250	17.5

* Not actual voltages due to large values of resistance in circuit between supply voltage and point of measurement. These voltages may vary considerably, depending upon the resistance of voltmeter used.

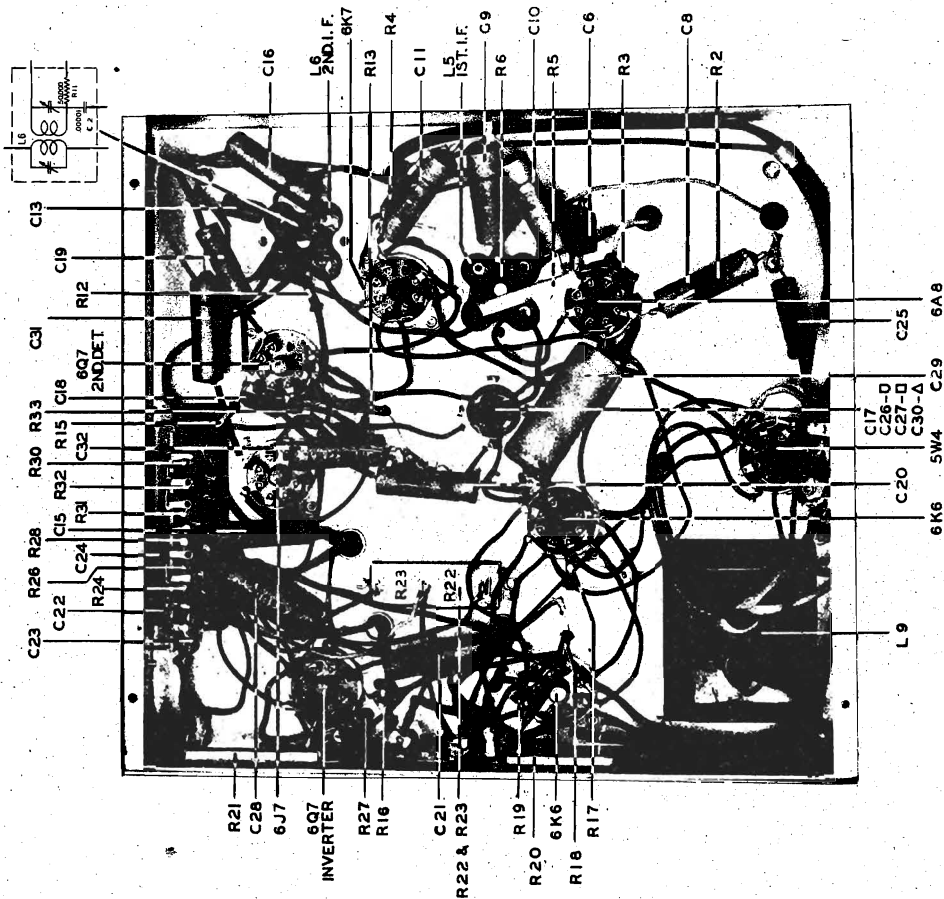

WILCOX-GAY CORP.

MODELS A70, A81, A82

MODEL A72

Recorder Adjustments

FOLLOWER ARM AND LATERAL FEED SCREW ADJUSTMENT

The follower arm assembly shown in FIGURE 7, consists of a steel channel, at one end of which is attached the pivot post, and at the other end a flat phosphor bronze spring, with a portion of the spring bent at a right angle to form the knife-edge tongue which engages the lateral feed screw.

The worm of the turn-table spindle engages the pinion at the end of the lateral feed screw within the gear housing, and as the feed screw revolves, the knife-edge tongue follows the spiral grooves of the feed screw, causing the follower arm to be moved laterally toward the center of the assembly.

The recording arm assembly is mounted at the upper end of the follower arm pivot post, so that as the follower arm moves in a horizontal plane beneath the recorder assembly mounting plate, the recording arm is caused to move laterally above the mounting plate, in the same direction and at the same rate of travel.

The lateral movement of the recording arm, as related to the rotation of the turn-table is such that 109 grooves per inch are cut into the record surface.

ADJUSTMENT OF PIVOT POST HEIGHT

The recording arm assembly is mounted on the upper end of the pivot post, and held in correct position by means of the two hex-head set screws as illustrated in FIGURE 8.

The end of the pivot post should be flush with the bushing on the top side of the arm platform (FIGURES 4, 7, and 8) and when the recording arm is lowered to its horizontal position, a small gap should exist between the pivot post bushings X and Y, FIGURE 4. A few drops of light lubricating oil applied to the pivot post between the bushings will provide smooth movement in the raising and lowering of the recording arm.

FOLLOWER ARM HORIZONTAL ADJUSTMENT

Before tightening the hex-head set screws, note that the recording arm is in correct position with respect to the follower arm, so that as the follower arm touches the follower arm stop, the cutting stylus will rest on the outside black line near the center of the record. This will provide a maximum playing time of approximately 2-1/5 minutes for the 6 1/2 inch disc, 3-1/2 minutes for the 8 inch, and 5 minutes for the 10 inch disc.

NOTE: Removal of the straddle plate will allow for greater ease in making the above adjustments.

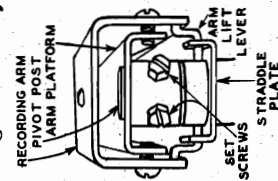


FIG. 8

In the event any adjustment is made which necessitates resetting the hex-head set screws, it is recommended that a check is made as to the height of the recording arm above the record surface and an adjustment of the arm height made if necessary,

FOLLOWER ARM VERTICAL ADJUSTMENT

With the recording arm lowered to a position so that the bottom of the nose of the arm is 2 inches above the turn-table, the tongue of the phosphor bronze spring should just clear the lateral feed screw.

The adjustment for this height may be accomplished by slightly bending up or down, as required, the flat part of the follower arm near the riveted end of the phosphor bronze spring.

PHOSPHOR BRONZE SPRING ADJUSTMENT

As the recording arm is lowered to recording position, it will be noted that the follower arm is also lowered, causing the phosphor bronze spring tongue to become firmly seated in the bottom of the spiral groove of the lateral feed screw.

The pressure of the phosphor bronze spring, bearing against the lateral feed screw should be sufficiently great so that the knife-edge tongue will not have a tendency to climb out of the grooves in the feed screw, which would result in unevenly spaced grooves cut into the record surface. In extreme cases of insufficient spring pressure bearing against the lateral feed screw, the cutting stylus may have a tendency to cut through into the adjacent previously cut groove.

The pressure should not be so great, however (caused by the follower arm being bent downward too far) that the phosphor bronze spring will be lifted away from the end of the adjusting screw, as the arm is lowered.

It can be seen from the preceding paragraphs covering the follower arm vertical adjustment and the phosphor bronze spring adjustment, that these two adjustments are somewhat interlocking that is - one adjustment slightly affects the other. An adjustment of the phosphor bronze spring screw, so that the phosphor bronze spring assumes the shape and position shown in FIGURE 7, is usually satisfactory, provided the vertical adjustment has been correctly made.

LATERAL FEED SCREW ADJUSTMENT

An adjustment is provided on the worm and gear housing, to take up the end play of the lateral feed screw. To make this adjustment, loosen the large hexagonal lock nut and turn the slotted screw slowly to the right until all end play of the feed screw is eliminated. Then back off the adjustment slightly and tighten the lock nut. A very slight amount of end play in the feed screw should be noticeable after the lock nut has been tightened.

MODELS A70, A81, A82


MODEL A72

Recorder Notes, Part 1

WILCOX-GAY CORP.

THE CUTTING STYLUS SHOULD NEVER BE PERMITTED TO REST ON THE TURN-TABLE Its point is infinitesimally small, and compared to its normal pressure of approximately 1/2 ounces against the record surface (equivalent to several hundred pounds per square inch) it can readily be realized that if this stylus pressure were exerted against a metal surface, its razor sharp point would be crushed or flattened. A magnifying glass is usually required to observe the damaged condition of the stylus point.

A study of FIGURE 1 will serve to stress the importance of careful adjustment of the depth of cut, and the necessity for using a sharp cutting stylus.

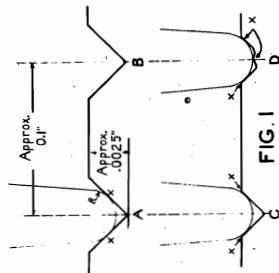

- Line R represents radius of ball-point play-back needle.
- A and B - perfectly cut grooves.
- C - shallow groove due to improper adjustment
- D - shallow imperfect groove due to dulled cutting stylus.

Note width of space between grooves. Note points of contact X between play back needle point and groove surface.


DEPTH OF CUT ADJUSTMENT

The depth of cut is regulated by an adjustment of the flat head screw on the top of the recording arm, FIGURE 2.

Turning the screw to the right (clockwise) increases the depth of cut.

Turning the screw to the left (counterclockwise) decreases the depth of cut.

An examination of the recording arm assembly will show the function of the coil spring attached to the cutting head is to oppose the weight or pressure of the cutting stylus against the record surface, so as to allow cutting a groove of definite depth. For example, it will be seen that turning the screw to the right changes the angle on which the spring acts, so that the groove depth is increased. Turning the screw to the left changes the angle on which the spring acts, so that the groove depth is decreased. It will be seen that the actual spring tension remains very nearly the same and the angle of the axis on which it operates is changed to bring about the possibility of adjusting the depth of cut. (CONTINUED)

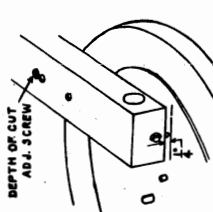

ADJUSTMENT OF CUTTING ARM AND HEAD

When the RECORDIO leaves the factory, all adjustments have been correctly made. To assure this condition, a final check, by observing the over-all performance of the instrument in the making of recordings, is given each RECORDIO before being released for shipment.

It is realized, however, that during shipment, or due to improper handling after installation has been made, adjustments may become altered so that the instrument will not function properly without correction.

These bulletins have been prepared to serve as an aid to the service man in placing the equipment in proper operating condition, when necessary. Also instructive information is included, which may be passed on to other users of RECORDIO, to promote a better understanding of its operation and care.

DEPTH OF CUT

The depth of cut may be observed by holding the record in such a position that a light is reflected from the grooves. If the depth of cut is correct, the grooves will appear to be about as wide as the spaces between them.

The correct depth of cut will produce a thread cut from the record surface that is firm, altho' neither coarse and stiff, nor light and "fluffy".

Provided a new cutting stylus, or one known to be in perfect condition, is being used, the correct depth of cut may be gauged by permitting the cuttings to remain upon the record until completed, then rolling the cuttings in to a hard ball. The size of the ball thus obtained should be approximately 3/8 inch in diameter, for the 6/8 inch record.

EFFECT OF DULL CUTTING STYLUS

With proper care, the cutting stylus will out dozens of records satisfactorily, before being dulled so that replacement is necessary.

Many times it may be apparent from casual observation, that because an incorrect cut is being made, an adjustment is in order to bring about correct depth of cut, -whereas the trouble may be due to the cutting stylus having become dulled, either accidentally, or through natural wear.

It is well to FIRST TRY A NEW CUTTING STYLUS before making any adjustments, to preclude the necessity for a complete readjustment. Adjustments made with a dulled cutting stylus being used, will have very little effect upon the depth of cut.

The point and cutting edges of the stylus are razor sharp, and it is obvious that if the cutting stylus should bump or scrape against the turn-table or other metal object, it would be dulled and rendered useless.

During periods of inoperation, the recording arm should always be returned to its normal horizontal position to the right of the turn-table.

WILCOX-GAY CORP.

MODELS A70, A81, A82
MODEL A72
Recorder Notes, Part 2

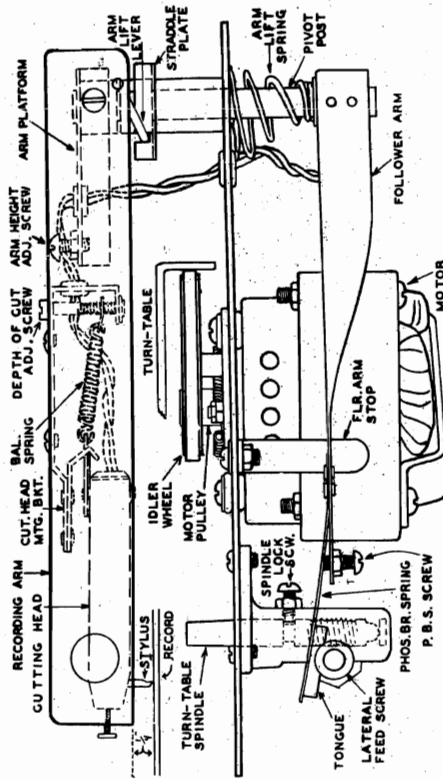


FIG. 7

The connecting wires from the cutting head should not be allowed to double up between the arm and arm platform, but should feed freely through the hole in the platform as the arm is lowered. Otherwise, the wires doubled up may prevent the arm from coming to rest on the head of the height adjusting screw.

There is little likelihood that the arm height adjusting screw will get out of adjustment due to the lock nut becoming loosened. However, there is the possibility that the recording arm may be roughly handled by the operator. If the arm were to be forced backwards after having been raised to its vertical position, or if, while being lowered to its horizontal position to the right of the turn-table, the arm were dropped or forced downward, the plate on which all of the recording mechanism is mounted, may be bent or sprung slightly. This would destroy the 1/4 inch height adjustment, and readjustment of the arm height adjusting screw would be necessary to bring the nose of the recording arm to exactly 1/4 inch above the record surface.

Also, the straddle plate (FIGURES 4 and 7) may be bent down, which would effect the arm height adjustment. In this event, the straddle plate should be removed and straightened. This is most easily accomplished with the recording arm in the lowered position. Grasp the heel of the arm with the left hand and raise the arm horizontally, at the same time removing the arm lift lever from the slots in the straddle plate. The straddle plate may now be removed by sliding it towards the rear.

The importance of the arm height adjustment may be judged by a study of FIGURE 7. Note that the balance spring serves to hold the knife-edge

(CONTINUED)

In some of the early RECORDIO models the adjusting screw was threaded throughout its full length, altho' only the lower portion of the screw over a span of approximately 3/8 inch contributes to the useful range of adjustment. If the adjusting screw is turned in a clockwise direction so as to raise the spring holding lug to the upper threaded portion of the screw, the adjustment will have passed through a "dead-center" position, which will cause a bobbing up-and-down movement of the cutting head.

If it is found that when using a new cutting stylus, the depth of cut is too shallow, and the adjusting screw has been turned to the full clockwise position in the later models, or to the upper limit of the useful range in the older models, this is an indication that the balance spring is too strong. Its tension may be decreased by spreading the coils of the spring with a pair of diagonal cutting pliers.

CAUTION: Care should be used in removing and replacing the cutting head, when occasion arises, so that the balance spring is not stretched to a length that will prevent its returning to normal length and tension.

When the cutting head is in proper adjustment, and the recording arm is raised to a position approximately 25 to 30 degrees from the vertical plane, the cutting head should float freely in its mounting, with equal up and down movement. The balance spring holding lug should be in a position on the adjusting screw approximately 1/4 inch from the shelf which holds the riveted end of the screw. (FIG. 7)

Observe that the leads connecting to the cutting head are shaped to form an "S", FIGURE 5, and that these wires are kept in the clear - not touching the balance spring. Also, the wire leads should not be permitted to droop (arm horizontal) so that they will rub on the turn-table. Also observe that the holding tongues of the finger grips on the nose of the recording arm, are bent back sufficiently so as not to interfere with free movement of the cutting head.

HEIGHT OF RECORDING ARM ADJUSTMENT

The components of the recording arm assembly are positioned so that the cutting head is parallel, and the stylus is perpendicular to the record surface (FIGURE 7), which condition obtains ONLY with the nose of the recording arm adjusted to the correct height of 1/4 inch above the record surface.

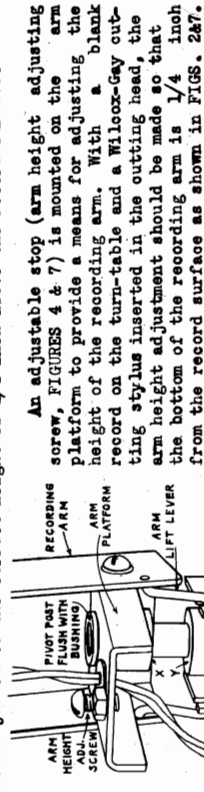


FIG. 4

An adjustable stop (arm height adjusting screw, FIGURES 4 & 7) is mounted on the arm platform to provide a means for adjusting the height of the recording arm. With a blank record on the turn-table and a Wilcox-Gay cutting stylus inserted in the cutting head, the arm height adjustment should be made so that the bottom of the recording arm is 1/4 inch from the record surface as shown in FIGS. 2&7.

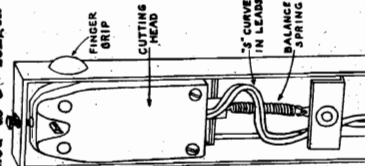


FIG. 3

MODELS A70, A81, A82
Record Notes, Part 3
Alignment, Trimmers

WILCOX-GAY CORP.

MODEL A72
Recorder Notes, Part 3

MODEL A70
Chassis Model 949

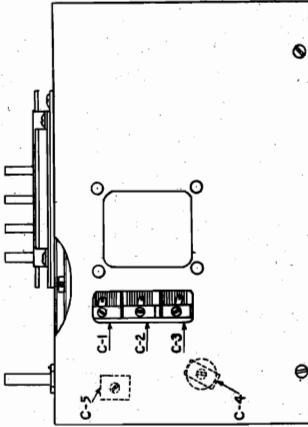


FIG. 6

An OUTPUT METER or other indicating device should be used for accuracy in making ganging adjustments.

If an output meter is not available, the magic eye (6U5) may be used as an output indicator as follows:

- (a) Depress push-button No. 4 "To Record Radio".
- (b) Disconnect cutting-head from chassis.
- (c) Adjust volume control to near maximum.

Connect signal generator to control grid of 6A8 tube. Make connection to side of middle section, (G2) of condenser gang. (FIG. 6)

SIGNAL GENERATOR FREQUENCY	DIAL POSITION	WAVE BAND SWITCH POSITION	TRIMMER NUMBER	FIGURE NUMBER
456 K.C.	1500 K.C.	Broadcast	2nd. I.F.-S*	5
"	"	"	" -P	5
"	"	"	1st. I.F.-S	5
"	"	"	" -P	5

Connect signal generator to ANT. and GND. terminals.

Turn condenser gang to full maximum capacity and check position of dial pointer with reference line on the scale, just to the right of 550 K.C. calibration.

600 K.C.	600 K.C.S.	Broadcast	L.F. Pad. (C-5)	6
1400 K.C.	1400 K.C.	"	Osc. (C-3)	6
1400 K.C.	1400 K.C.	"	Det. (C-2)	6
1400 K.C.	1400 K.C.	"	Pre-Sel. (C-1)	6

Not used. ** 15-16 M.C. Short Wave Pre-Sel. (C-4) 6
*If the trimming condenser on the secondary of the second I.F. transformer is adjusted throughout its full range, two "peaks" will be observed. The correct peak is the one of lowest capacity in the adjustment of the trimmer. The I.F. trimming condensers when properly adjusted will rest at approximately one and one half turns from the fully closed position.

**Connect antenna to receiver, and adjust dial so that no station is received. Advance volume control until a fair volume of noise is received. Adjust trimmer for greatest noise.

MODELS A70, A81 and A82 NOTES CONTINUED

pivot of the cutting head mounting, fully seated in the "v" shape trunion bearing of the cutting head mounting bracket. Also, that the "pull" of the spring is slightly downward, as well as horizontal.

The initial tension and length of the balance spring must be such that when adjusted to the proper tension to produce the correct depth of cut, the spring holding lug will be positioned on the adjusting screw as shown, to create a slight downward "pull" on the cutting head mounting.

As the stylus end of the cutting head is raised and lowered slightly, when cutting records which are not perfectly flat, the cutting stylus varies from its perpendicular plane, and the angle of the cutting edges of the stylus also vary. This tends to produce a varying depth of cut which would place a varying load on the motor, resulting in a variation in the average pitch or tone of the recorded music or speech. This effect is commonly called "wow". However the spring tension, and consequently the stylus pressure, also varies. This variation in stylus pressure opposes the effect of the varying stylus position, resulting in a substantially uniform depth of cut.

It can be seen that if the balance spring were adjusted to a horizontal position with respect to the plane of the cutting head - -

- (a) - the downward "pull" of the spring would be lost, resulting in a pronounced variation in the depth of cut when cutting a record having a slightly warped surface.
- (b) - the cutting stylus would have a tendency to chatter or dig into the record, due to the "dead-center" position of the spring.

It can also be seen that if the arm were adjusted to an incorrect height above the record surface, the cutting stylus would not be perpendicular, and the tendency towards a greater variation in the depth of cut, which would be more pronounced, would not be fully compensated by the counteracting effect of the varying tension of the balance spring.

MODEL No. A-70
DATE DEC. 12, 39

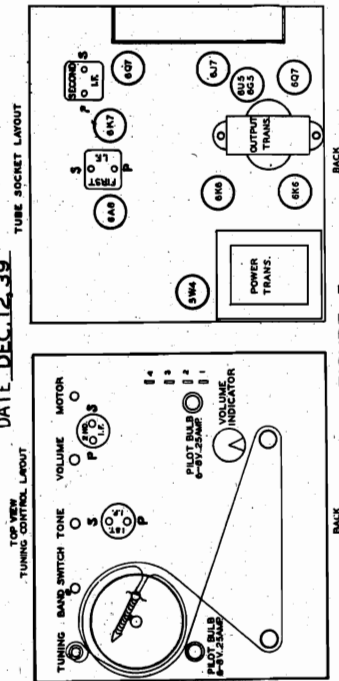


FIGURE 5


WILCOX-GAY CORP.

MODEL A72 Recordio
Chassis 9Q5
Schematic

CHASSIS 9Q5

SCHEMATIC DIAGRAM

MODEL A-72

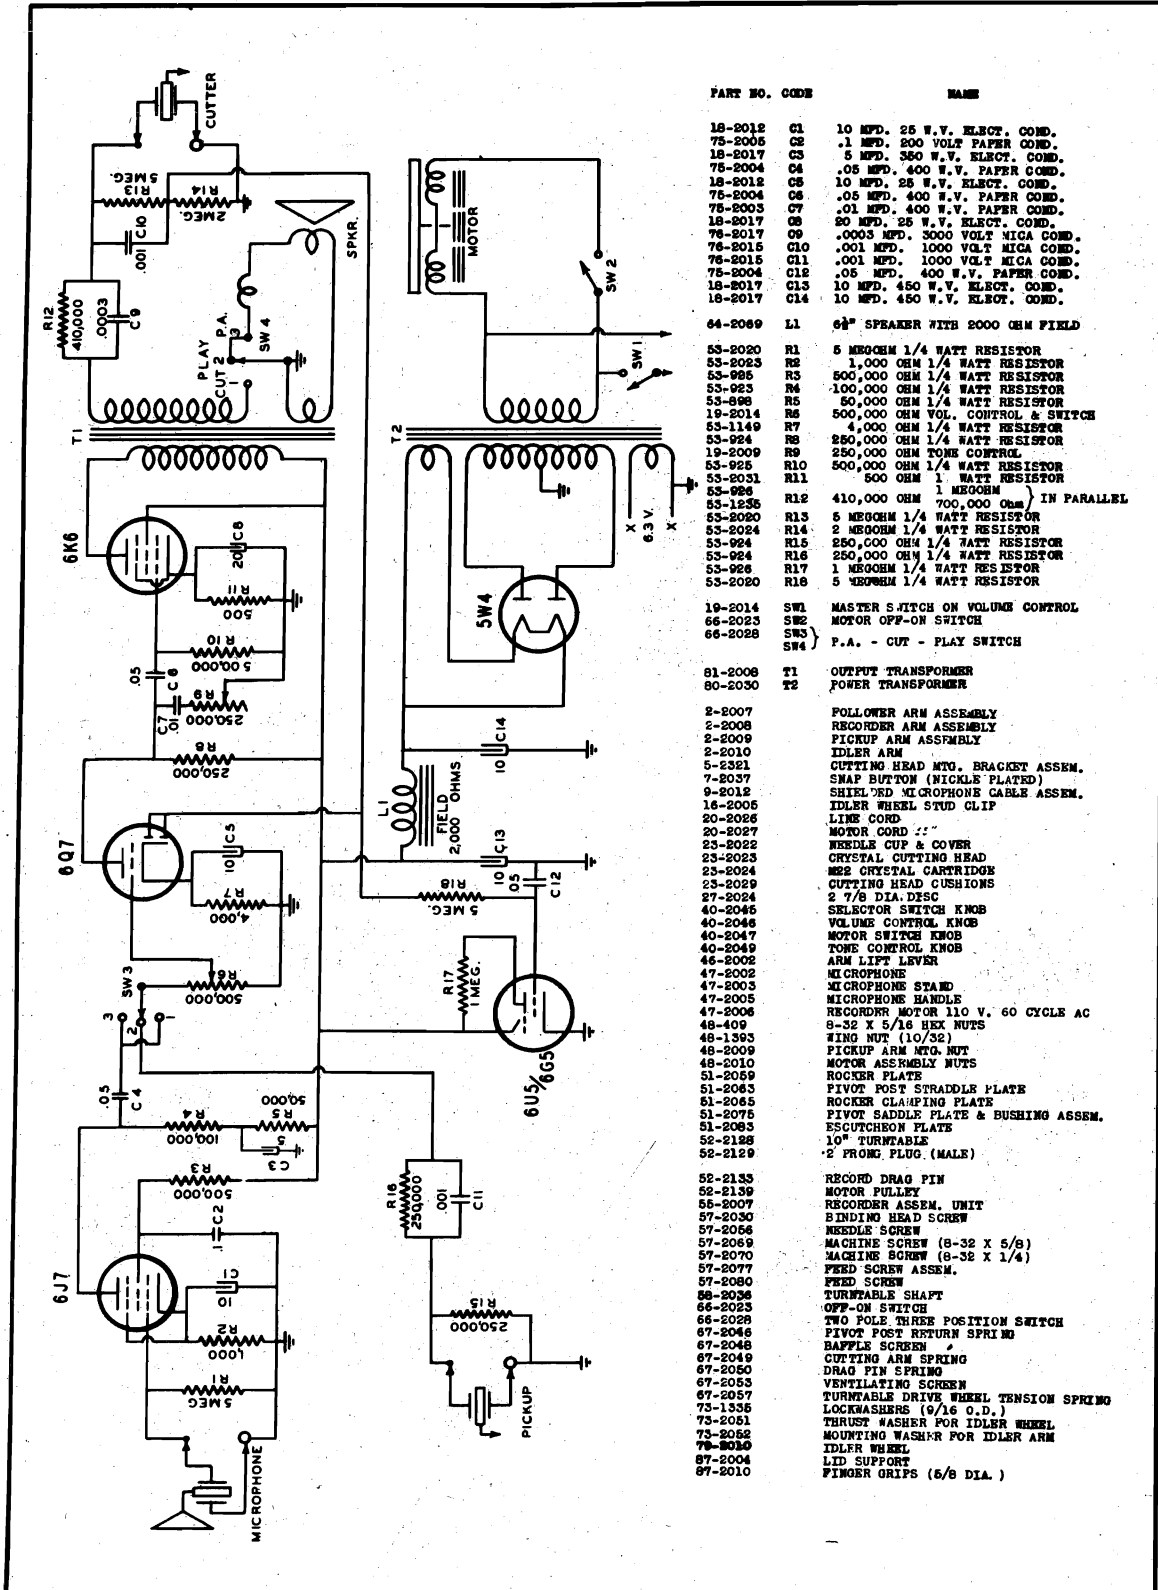


PART NO.	CODE	NAME
18-2012	C1	10 MFD. 25 W.V. ELCT. COND.
75-2005	C2	.1 MFD. 200 VOLT PAPER COND.
18-2017	C3	5 MFD. 350 W.V. ELCT. COND.
75-2004	C4	.05 MFD. 400 W.V. PAPER COND.
18-2012	C5	10 MFD. 25 W.V. ELCT. COND.
75-2004	C6	.05 MFD. 400 W.V. PAPER COND.
75-2003	C7	.01 MFD. 400 W.V. PAPER COND.
18-2017	C8	50 MFD. 25 W.V. ELCT. COND.
75-2017	C9	.0005 MFD. 5000 VOLT MICA COND.
75-2015	C10	.001 MFD. 1000 VOLT MICA COND.
75-2015	C11	.001 MFD. 1000 VOLT MICA COND.
75-2004	C12	.05 MFD. 400 W.V. PAPER COND.
18-2017	C13	10 MFD. 450 W.V. ELCT. COND.
18-2017	C14	10 MFD. 450 W.V. ELCT. COND.
64-2069	L1	64" SPEAKER WITH 2000 OHM FIELD
53-2020	R1	5 MEGOHM 1/4 WATT RESISTOR
53-2023	R2	1.000 OHM 1/4 WATT RESISTOR
53-2025	R3	500,000 OHM 1/4 WATT RESISTOR
53-2023	R4	100,000 OHM 1/4 WATT RESISTOR
53-2023	R5	50,000 OHM 1/4 WATT RESISTOR
19-2014	R6	500,000 OHM VOL. CONTROL & SWITCH
53-2024	R7	4,000 OHM 1/4 WATT RESISTOR
53-2024	R8	250,000 OHM 1/4 WATT RESISTOR
19-2009	R9	250,000 OHM TONE CONTROL
53-2025	R10	500,000 OHM 1/4 WATT RESISTOR
53-2021	R11	500 OHM 1/4 WATT RESISTOR
53-2025	R12	410,000 OHM 700,000 Ohm } IN PARALLEL
53-2020	R13	5 MEGOHM 1/4 WATT RESISTOR
53-2024	R14	2 MEGOHM 1/4 WATT RESISTOR
53-2024	R15	250,000 OHM 1/4 WATT RESISTOR
53-2024	R16	250,000 OHM 1/4 WATT RESISTOR
53-2025	R17	1 MEGOHM 1/4 WATT RESISTOR
53-2020	R18	5 MEGOHM 1/4 WATT RESISTOR
19-2014	SW1	MASTER SWITCH ON VOLUME CONTROL
66-2023	SW2	MOTOR OFF-ON SWITCH
66-2025	SW3	SW3
66-2025	SW4	P.A. - CUT - PLAY SWITCH
81-2008	T1	OUTPUT TRANSFORMER
80-2030	T2	POWER TRANSFORMER
2-2007		FOLLOWER ARM ASSEMBLY
2-2008		RECORDER ARM ASSEMBLY
2-2009		PICKUP ARM ASSEMBLY
2-2010		IDLER ARM
5-2321		CUTTING HEAD MTD. BRACKET ASSEM.
7-2037		SHARP BUTTON (NICKLE PLATED)
9-2012		SHIELDED MICROPHONE CABLE ASSEM.
16-2005		IDLER WHEEL STUD CLIP
20-2025		LINE CORD
20-2027		MOTOR CORD
23-2022		NEEDLE CUP & COVER
23-2023		CRYSTAL CUTTING HEAD
23-2024		NEE CRYSTAL CARTRIDGE
23-2029		CUTTING HEAD CUSHIONS
27-2024		2 7/8 DIA. DISC
40-2046		SELECTOR SWITCH KNOB
40-2046		VOLUME CONTROL KNOB
40-2047		MOTOR SWITCH KNOB
40-2049		TONE CONTROL KNOB
46-2002		ARM LIFT LEVER
47-2002		MICROPHONE
47-2003		MICROPHONE STAND
47-2005		MICROPHONE HANDLE
47-2006		RECORDER MOTOR 110 V. 60 CYCLE AC
48-409		8-32 X 5/16 HEX NUTS
48-1393		RING NUT (10/32)
48-2009		PICKUP ARM MTD. MTD
48-2010		MOTOR ASSEMBLY NUTS
51-2059		ROCKER PLATE
51-2063		PIVOT POST STRADDLE PLATE
51-2065		ROCKER CLAMPING PLATE
51-2075		PIVOT SADDLE PLATE & BUSHING ASSEM.
51-2083		ESCUTCHEON PLATE
52-2128		10" TURNTABLE
52-2129		2 PRONG PLUG (MALE)
52-2133		RECORD DRAG PIN
52-2139		MOTOR PULLEY
55-2007		RECORDER ASSEM. UNIT
57-2030		BINDING HEAD SCREW
57-2056		NEEDLE SCREW
57-2059		MACHINE SCREW (8-32 X 5/8)
57-2070		MACHINE SCREW (8-32 X 1/4)
57-2077		FEED SCREW ASSEM.
57-2080		FEED SCREW
58-2026		TURNTABLE SHAFT
66-2023		OFF-ON SWITCH
66-2025		TWO POLE THREE POSITION SWITCH
67-2046		PIVOT POST RETURN SPRING
67-2048		BAFFLE SCREEN
67-2049		CUTTING ARM SPRING
67-2050		DRAG PIN SPRING
67-2053		VENTILATING SCREEN
67-2057		TURNTABLE DRIVE WHEEL TENSION SPRING
73-1355		LOCKWASHER (9/16 O.D.)
73-2051		THRUST WASHER FOR IDLER WHEEL
73-2052		MOUNTING WASHER FOR IDLER ARM
75-2010		IDLER WHEEL
87-2004		LID SUPPORT
87-2010		FINGER GRIPS (5/8 DIA.)

DATE 1-17-40

MODEL A78
Chassis


WILCOX-GAY CORP.

MODEL No. A-78
DATE 1-22-40

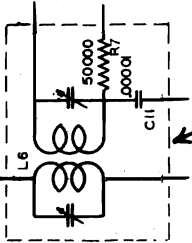

PARTS LAYOUT - CHASSIS 9P7


SPEAKER
SOCKET

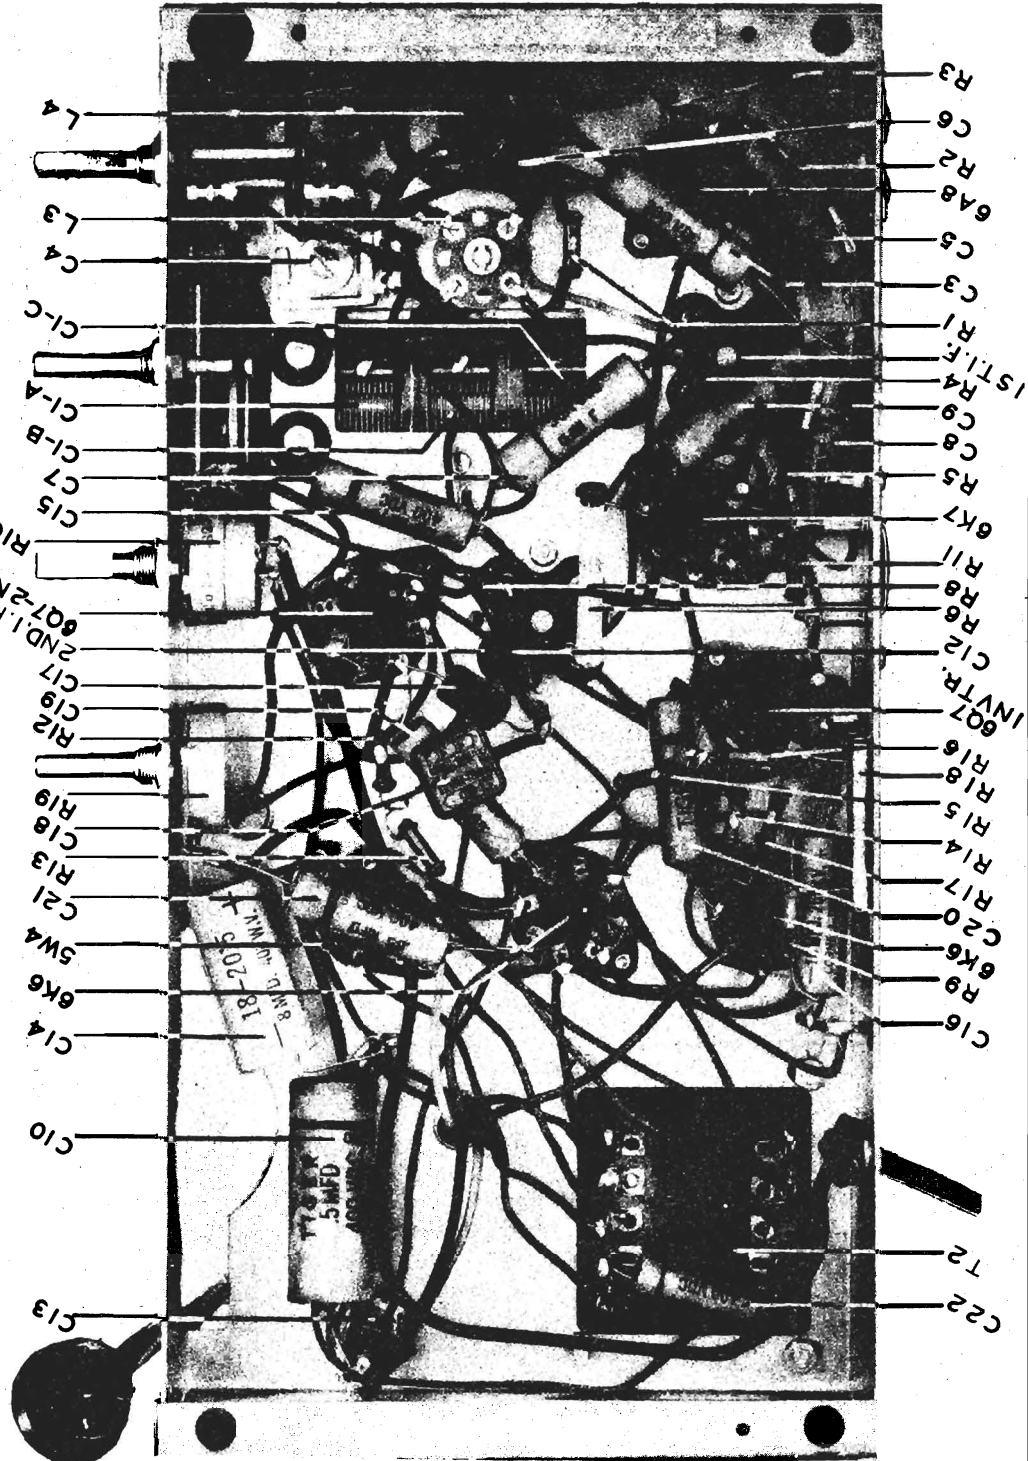

Schematic, Socket Trimmers

WILCOX-GAY CORP.

MODEL A79 Chassis 9N7

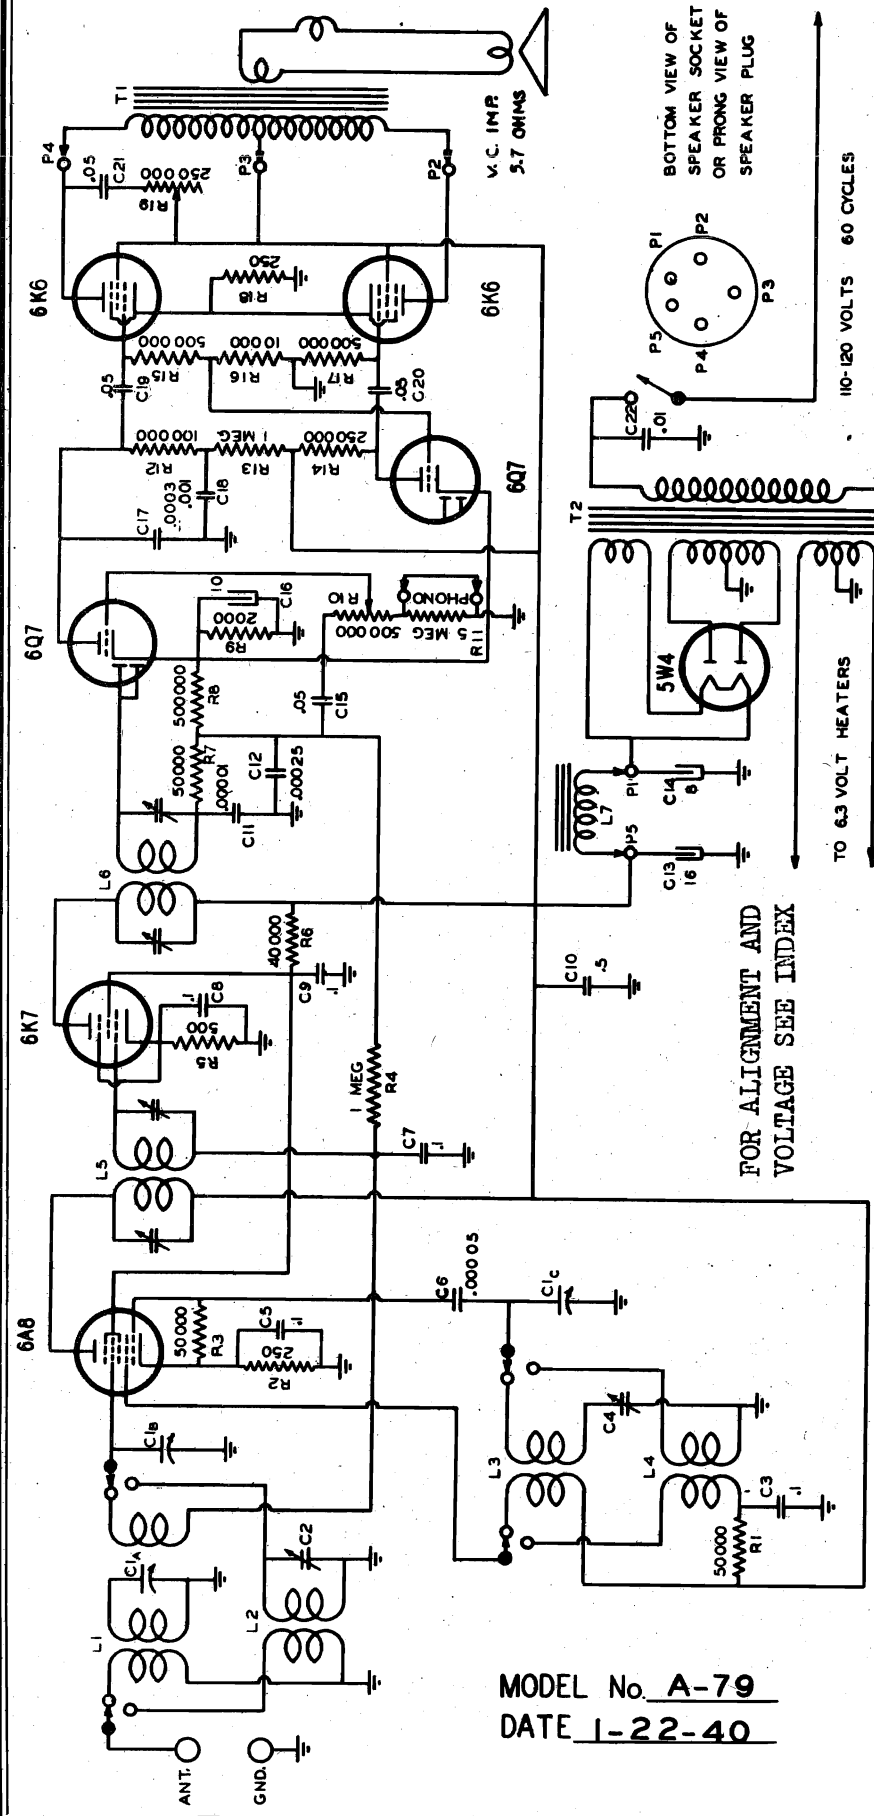

FOR ALIGNMENT AND VOLTAGE SEE INDEX


MODEL No. A-79
DATE 1-22-40

PART NO.	NAME	CODE	MADE
71-2019	3 GANG VARIABLE COND.	C1	MADE
72-2010	SHORT WAVE P.P. TRILLER COND.	C2	MADE
73-2005	RG OSC. SERIES TRILLER COND.	C3	MADE
74-2005	1 MFD. 200 VOLT PAPER COND.	C4	MADE
75-2011	1 MFD. 200 VOLT PAPER COND.	C5	MADE
76-2005	1 MFD. 200 VOLT PAPER COND.	C6	MADE
77-2005	1 MFD. 200 VOLT PAPER COND.	C7	MADE
78-2005	1 MFD. 200 VOLT PAPER COND.	C8	MADE
79-2005	1 MFD. 200 VOLT PAPER COND.	C9	MADE
80-2022	50,000 OHM 1/4 WATT RESISTOR	R1	MADE
81-1062	50,000 OHM 1/4 WATT RESISTOR	R2	MADE
82-1062	50,000 OHM 1/4 WATT RESISTOR	R3	MADE
83-1062	50,000 OHM 1/4 WATT RESISTOR	R4	MADE
84-2021	50,000 OHM 1/4 WATT RESISTOR	R5	MADE
85-1065	50,000 OHM 1/4 WATT RESISTOR	R6	MADE
86-2021	50,000 OHM 1/4 WATT RESISTOR	R7	MADE
87-1065	50,000 OHM 1/4 WATT RESISTOR	R8	MADE
88-2021	50,000 OHM 1/4 WATT RESISTOR	R9	MADE
89-1065	50,000 OHM 1/4 WATT RESISTOR	R10	MADE
90-2021	50,000 OHM 1/4 WATT RESISTOR	R11	MADE
91-1065	50,000 OHM 1/4 WATT RESISTOR	R12	MADE
92-2021	50,000 OHM 1/4 WATT RESISTOR	R13	MADE
93-1065	50,000 OHM 1/4 WATT RESISTOR	R14	MADE
94-2021	50,000 OHM 1/4 WATT RESISTOR	R15	MADE
95-1065	50,000 OHM 1/4 WATT RESISTOR	R16	MADE
96-2021	50,000 OHM 1/4 WATT RESISTOR	R17	MADE
97-1065	50,000 OHM 1/4 WATT RESISTOR	R18	MADE
98-2021	50,000 OHM 1/4 WATT RESISTOR	R19	MADE
99-1065	50,000 OHM 1/4 WATT RESISTOR	R20	MADE
100-2021	50,000 OHM 1/4 WATT RESISTOR	R21	MADE
101-1065	50,000 OHM 1/4 WATT RESISTOR	R22	MADE
102-2021	50,000 OHM 1/4 WATT RESISTOR	R23	MADE
103-1065	50,000 OHM 1/4 WATT RESISTOR	R24	MADE
104-2021	50,000 OHM 1/4 WATT RESISTOR	R25	MADE
105-1065	50,000 OHM 1/4 WATT RESISTOR	R26	MADE
106-2021	50,000 OHM 1/4 WATT RESISTOR	R27	MADE
107-1065	50,000 OHM 1/4 WATT RESISTOR	R28	MADE
108-2021	50,000 OHM 1/4 WATT RESISTOR	R29	MADE
109-1065	50,000 OHM 1/4 WATT RESISTOR	R30	MADE
110-2021	50,000 OHM 1/4 WATT RESISTOR	R31	MADE
111-1065	50,000 OHM 1/4 WATT RESISTOR	R32	MADE
112-2021	50,000 OHM 1/4 WATT RESISTOR	R33	MADE
113-1065	50,000 OHM 1/4 WATT RESISTOR	R34	MADE
114-2021	50,000 OHM 1/4 WATT RESISTOR	R35	MADE
115-1065	50,000 OHM 1/4 WATT RESISTOR	R36	MADE
116-2021	50,000 OHM 1/4 WATT RESISTOR	R37	MADE
117-1065	50,000 OHM 1/4 WATT RESISTOR	R38	MADE
118-2021	50,000 OHM 1/4 WATT RESISTOR	R39	MADE
119-1065	50,000 OHM 1/4 WATT RESISTOR	R40	MADE
120-2021	50,000 OHM 1/4 WATT RESISTOR	R41	MADE
121-1065	50,000 OHM 1/4 WATT RESISTOR	R42	MADE
122-2021	50,000 OHM 1/4 WATT RESISTOR	R43	MADE
123-1065	50,000 OHM 1/4 WATT RESISTOR	R44	MADE
124-2021	50,000 OHM 1/4 WATT RESISTOR	R45	MADE
125-1065	50,000 OHM 1/4 WATT RESISTOR	R46	MADE
126-2021	50,000 OHM 1/4 WATT RESISTOR	R47	MADE
127-1065	50,000 OHM 1/4 WATT RESISTOR	R48	MADE
128-2021	50,000 OHM 1/4 WATT RESISTOR	R49	MADE
129-1065	50,000 OHM 1/4 WATT RESISTOR	R50	MADE
130-2021	50,000 OHM 1/4 WATT RESISTOR	R51	MADE
131-1065	50,000 OHM 1/4 WATT RESISTOR	R52	MADE
132-2021	50,000 OHM 1/4 WATT RESISTOR	R53	MADE
133-1065	50,000 OHM 1/4 WATT RESISTOR	R54	MADE
134-2021	50,000 OHM 1/4 WATT RESISTOR	R55	MADE
135-1065	50,000 OHM 1/4 WATT RESISTOR	R56	MADE
136-2021	50,000 OHM 1/4 WATT RESISTOR	R57	MADE
137-1065	50,000 OHM 1/4 WATT RESISTOR	R58	MADE
138-2021	50,000 OHM 1/4 WATT RESISTOR	R59	MADE
139-1065	50,000 OHM 1/4 WATT RESISTOR	R60	MADE
140-2021	50,000 OHM 1/4 WATT RESISTOR	R61	MADE
141-1065	50,000 OHM 1/4 WATT RESISTOR	R62	MADE
142-2021	50,000 OHM 1/4 WATT RESISTOR	R63	MADE
143-1065	50,000 OHM 1/4 WATT RESISTOR	R64	MADE
144-2021	50,000 OHM 1/4 WATT RESISTOR	R65	MADE
145-1065	50,000 OHM 1/4 WATT RESISTOR	R66	MADE
146-2021	50,000 OHM 1/4 WATT RESISTOR	R67	MADE
147-1065	50,000 OHM 1/4 WATT RESISTOR	R68	MADE
148-2021	50,000 OHM 1/4 WATT RESISTOR	R69	MADE
149-1065	50,000 OHM 1/4 WATT RESISTOR	R70	MADE
150-2021	50,000 OHM 1/4 WATT RESISTOR	R71	MADE
151-1065	50,000 OHM 1/4 WATT RESISTOR	R72	MADE
152-2021	50,000 OHM 1/4 WATT RESISTOR	R73	MADE
153-1065	50,000 OHM 1/4 WATT RESISTOR	R74	MADE
154-2021	50,000 OHM 1/4 WATT RESISTOR	R75	MADE
155-1065	50,000 OHM 1/4 WATT RESISTOR	R76	MADE
156-2021	50,000 OHM 1/4 WATT RESISTOR	R77	MADE
157-1065	50,000 OHM 1/4 WATT RESISTOR	R78	MADE
158-2021	50,000 OHM 1/4 WATT RESISTOR	R79	MADE
159-1065	50,000 OHM 1/4 WATT RESISTOR	R80	MADE
160-2021	50,000 OHM 1/4 WATT RESISTOR	R81	MADE
161-1065	50,000 OHM 1/4 WATT RESISTOR	R82	MADE
162-2021	50,000 OHM 1/4 WATT RESISTOR	R83	MADE
163-1065	50,000 OHM 1/4 WATT RESISTOR	R84	MADE
164-2021	50,000 OHM 1/4 WATT RESISTOR	R85	MADE
165-1065	50,000 OHM 1/4 WATT RESISTOR	R86	MADE
166-2021	50,000 OHM 1/4 WATT RESISTOR	R87	MADE
167-1065	50,000 OHM 1/4 WATT RESISTOR	R88	MADE
168-2021	50,000 OHM 1/4 WATT RESISTOR	R89	MADE
169-1065	50,000 OHM 1/4 WATT RESISTOR	R90	MADE
170-2021	50,000 OHM 1/4 WATT RESISTOR	R91	MADE
171-1065	50,000 OHM 1/4 WATT RESISTOR	R92	MADE
172-2021	50,000 OHM 1/4 WATT RESISTOR	R93	MADE
173-1065	50,000 OHM 1/4 WATT RESISTOR	R94	MADE
174-2021	50,000 OHM 1/4 WATT RESISTOR	R95	MADE
175-1065	50,000 OHM 1/4 WATT RESISTOR	R96	MADE
176-2021	50,000 OHM 1/4 WATT RESISTOR	R97	MADE
177-1065	50,000 OHM 1/4 WATT RESISTOR	R98	MADE
178-2021	50,000 OHM 1/4 WATT RESISTOR	R99	MADE
179-1065	50,000 OHM 1/4 WATT RESISTOR	R100	MADE
180-2021	50,000 OHM 1/4 WATT RESISTOR	R101	MADE
181-1065	50,000 OHM 1/4 WATT RESISTOR	R102	MADE
182-2021	50,000 OHM 1/4 WATT RESISTOR	R103	MADE
183-1065	50,000 OHM 1/4 WATT RESISTOR	R104	MADE
184-2021	50,000 OHM 1/4 WATT RESISTOR	R105	MADE
185-1065	50,000 OHM 1/4 WATT RESISTOR	R106	MADE
186-2021	50,000 OHM 1/4 WATT RESISTOR	R107	MADE
187-1065	50,000 OHM 1/4 WATT RESISTOR	R108	MADE
188-2021	50,000 OHM 1/4 WATT RESISTOR	R109	MADE
189-1065	50,000 OHM 1/4 WATT RESISTOR	R110	MADE
190-2021	50,000 OHM 1/4 WATT RESISTOR	R111	MADE
191-1065	50,000 OHM 1/4 WATT RESISTOR	R112	MADE
192-2021	50,000 OHM 1/4 WATT RESISTOR	R113	MADE
193-1065	50,000 OHM 1/4 WATT RESISTOR	R114	MADE
194-2021	50,000 OHM 1/4 WATT RESISTOR	R115	MADE
195-1065	50,000 OHM 1/4 WATT RESISTOR	R116	MADE
196-2021	50,000 OHM 1/4 WATT RESISTOR	R117	MADE
197-1065	50,000 OHM 1/4 WATT RESISTOR	R118	MADE
198-2021	50,000 OHM 1/4 WATT RESISTOR	R119	MADE
199-1065	50,000 OHM 1/4 WATT RESISTOR	R120	MADE
200-2021	50,000 OHM 1/4 WATT RESISTOR	R121	MADE
201-1065	50,000 OHM 1/4 WATT RESISTOR	R122	MADE
202-2021	50,000 OHM 1/4 WATT RESISTOR	R123	MADE
203-1065	50,000 OHM 1/4 WATT RESISTOR	R124	MADE
204-2021	50,000 OHM 1/4 WATT RESISTOR	R125	MADE
205-1065	50,000 OHM 1/4 WATT RESISTOR	R126	MADE
206-2021	50,000 OHM 1/4 WATT RESISTOR	R127	MADE
207-1065	50,000 OHM 1/4 WATT RESISTOR	R128	MADE
208-2021	50,000 OHM 1/4 WATT RESISTOR	R129	MADE
209-1065	50,000 OHM 1/4 WATT RESISTOR	R130	MADE
210-2021	50,000 OHM 1/4 WATT RESISTOR	R131	MADE
211-1065	50,000 OHM 1/4 WATT RESISTOR	R132	MADE
212-2021	50,000 OHM 1/4 WATT RESISTOR	R133	MADE
213-1065	50,000 OHM 1/4 WATT RESISTOR	R134	MADE
214-2021	50,000 OHM 1/4 WATT RESISTOR	R135	MADE
215-1065	50,000 OHM 1/4 WATT RESISTOR	R136	MADE
216-2021	50,000 OHM 1/4 WATT RESISTOR	R137	MADE
217-1065	50,000 OHM 1/4 WATT RESISTOR	R138	MADE
218-2021	50,000 OHM 1/4 WATT RESISTOR	R139	MADE
219-1065	50,000 OHM 1/4 WATT RESISTOR	R140	MADE
220-2021	50,000 OHM 1/4 WATT RESISTOR	R141	MADE
221-1065	50,000 OHM 1/4 WATT RESISTOR	R142	MADE
222-2021	50,000 OHM 1/4 WATT RESISTOR	R143	MADE
223-1065	50,000 OHM 1/4 WATT RESISTOR	R144	MADE
224-2021	50,000 OHM 1/4 WATT RESISTOR	R145	MADE
225-1065	50,000 OHM 1/4 WATT RESISTOR	R146	MADE
226-2021	50,000 OHM 1/4 WATT RESISTOR	R147	MADE
227-1065	50,000 OHM 1/4 WATT RESISTOR	R148	MADE
228-2021	50,000 OHM 1/4 WATT RESISTOR	R149	MADE
229-1065	50,000 OHM 1/4 WATT RESISTOR	R150	MADE
230-2021	50,000 OHM 1/4 WATT RESISTOR	R151	MADE
231-1065	50,000 OHM 1/4 WATT RESISTOR	R152	MADE
232-2021	50,000 OHM 1/4 WATT RESISTOR	R153	MADE
233-1065	50,000 OHM 1/4 WATT RESISTOR	R154	MADE
234-2021	50,000 OHM 1/4 WATT RESISTOR	R155	MADE
235-1065	50,000 OHM 1/4 WATT RESISTOR	R156	MADE
236-2021	50,000 OHM 1/4 WATT RESISTOR	R157	MADE
237-1065	50,000 OHM 1/4 WATT RESISTOR	R158	MADE
238-2021	50,000 OHM 1/4 WATT RESISTOR	R159	MADE
239-1065	50,000 OHM 1/4 WATT RESISTOR	R160	MADE
240-2021	50,000 OHM 1/4 WATT RESISTOR	R161	MADE
241-1065	50,000 OHM 1/4 WATT RESISTOR	R162	MADE
242-2021	50,000 OHM 1/4 WATT RESISTOR	R163	MADE
243-1065	50,000 OHM 1/4 WATT RESISTOR	R164	MADE
244-2021	50,000 OHM 1/4 WATT RESISTOR	R165	MADE
245-1065	50,000 OHM 1/4 WATT RESISTOR	R166	MADE
246-2021	50,000 OHM 1/4 WATT RESISTOR	R167	MADE
247-1065	50,000 OHM 1/4 WATT RESISTOR	R168	MADE
248-2021	50,000 OHM 1/4 WATT RESISTOR	R169	MADE
249-1065	50,000 OHM 1/4 WATT RESISTOR	R170	MADE
250-2021	50,000 OHM 1/4 WATT RESISTOR	R171	MADE
251-1065	50,000 OHM 1/4 WATT RESISTOR	R172	MADE
252-2021	50,000 OHM 1/4 WATT RESISTOR	R173	MADE
253-1065	50,000 OHM 1/4 WATT RESISTOR	R174	MADE
254-2021	50,000 OHM 1/4 WATT RESISTOR	R175	MADE
255-1065	50,000 OHM 1/4 WATT RESISTOR	R176	MADE
256-2021	50,000 OHM 1/4 WATT RESISTOR	R177	MADE
257-1065	50,000 OHM 1/4 WATT RESISTOR	R178	MADE
258-2021	50,000 OHM 1/4 WATT RESISTOR	R179	MADE
259-1065	50,000 OHM 1/4 WATT RESISTOR	R180	MADE
260-2021	50,000 OHM 1/4 WATT RESISTOR	R181	MADE
261-1065	50,000 OHM 1/4 WATT RESISTOR	R182	MADE
262-2021	50,000 OHM 1/4 WATT RESISTOR	R183	MADE
263-1065	50,000 OHM 1/4 WATT RESISTOR	R184	MADE


MODEL A79
Chassis

WILCOX-GAY CORP.

CHASSIS 9N7


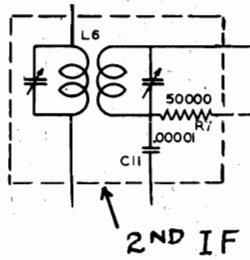


MODEL No. A-79
DATE 1-22-40

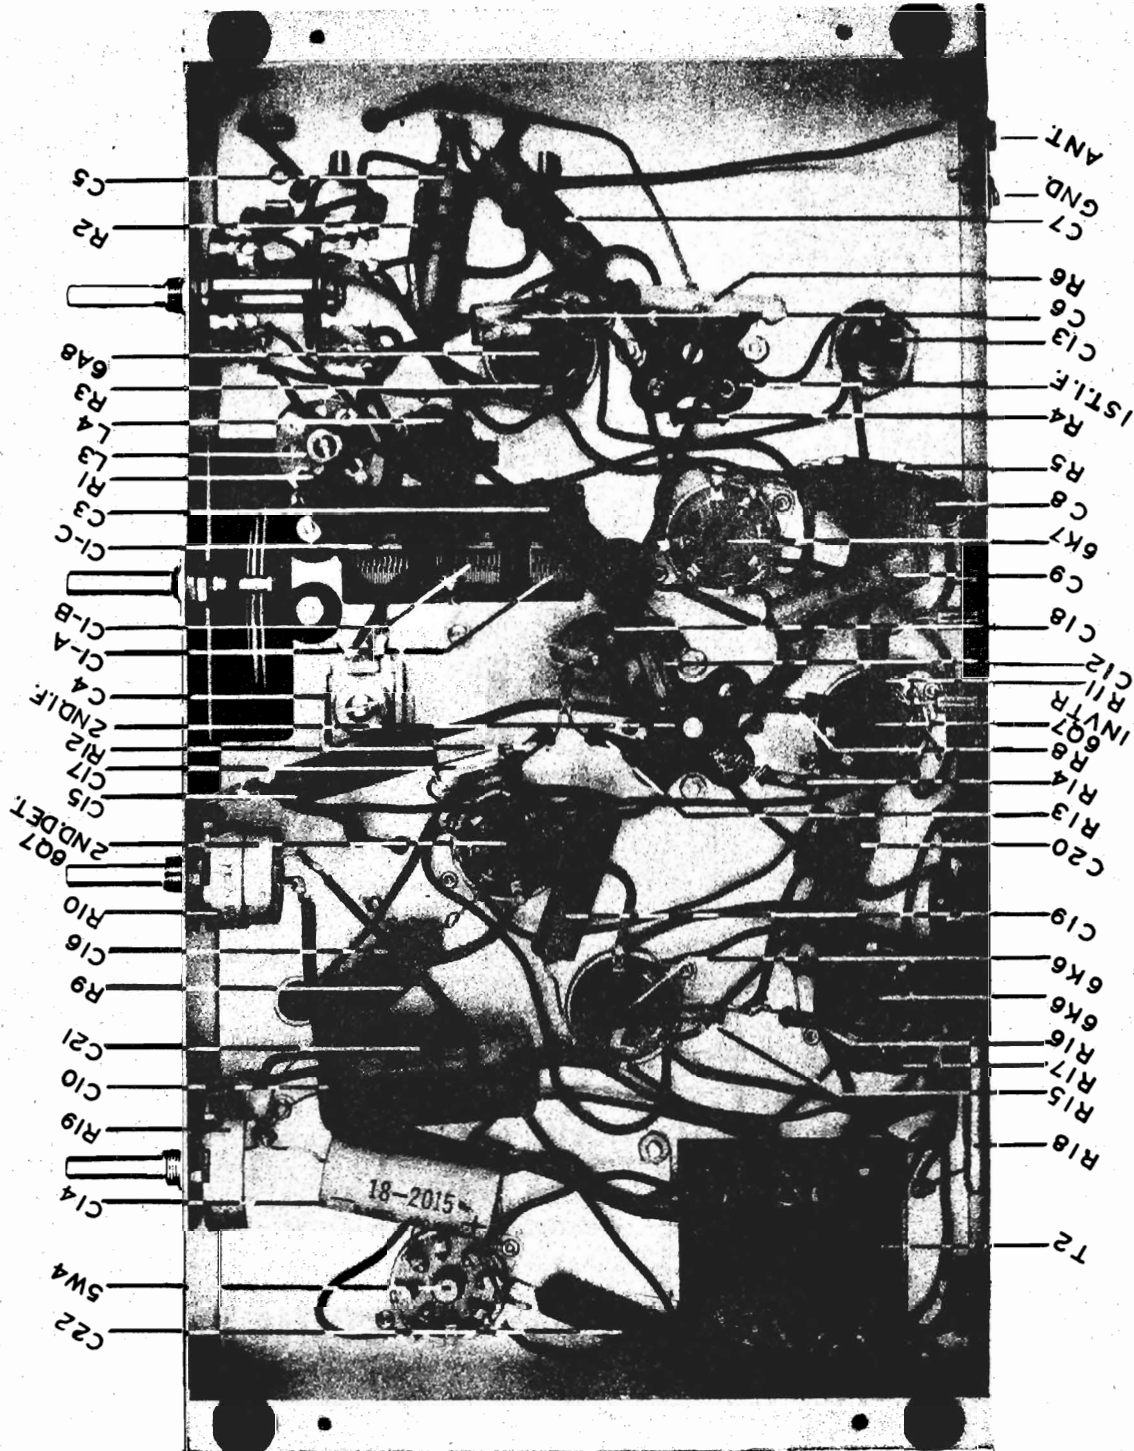

WILCOX-GAY CORP.

MODEL A71
Schematic

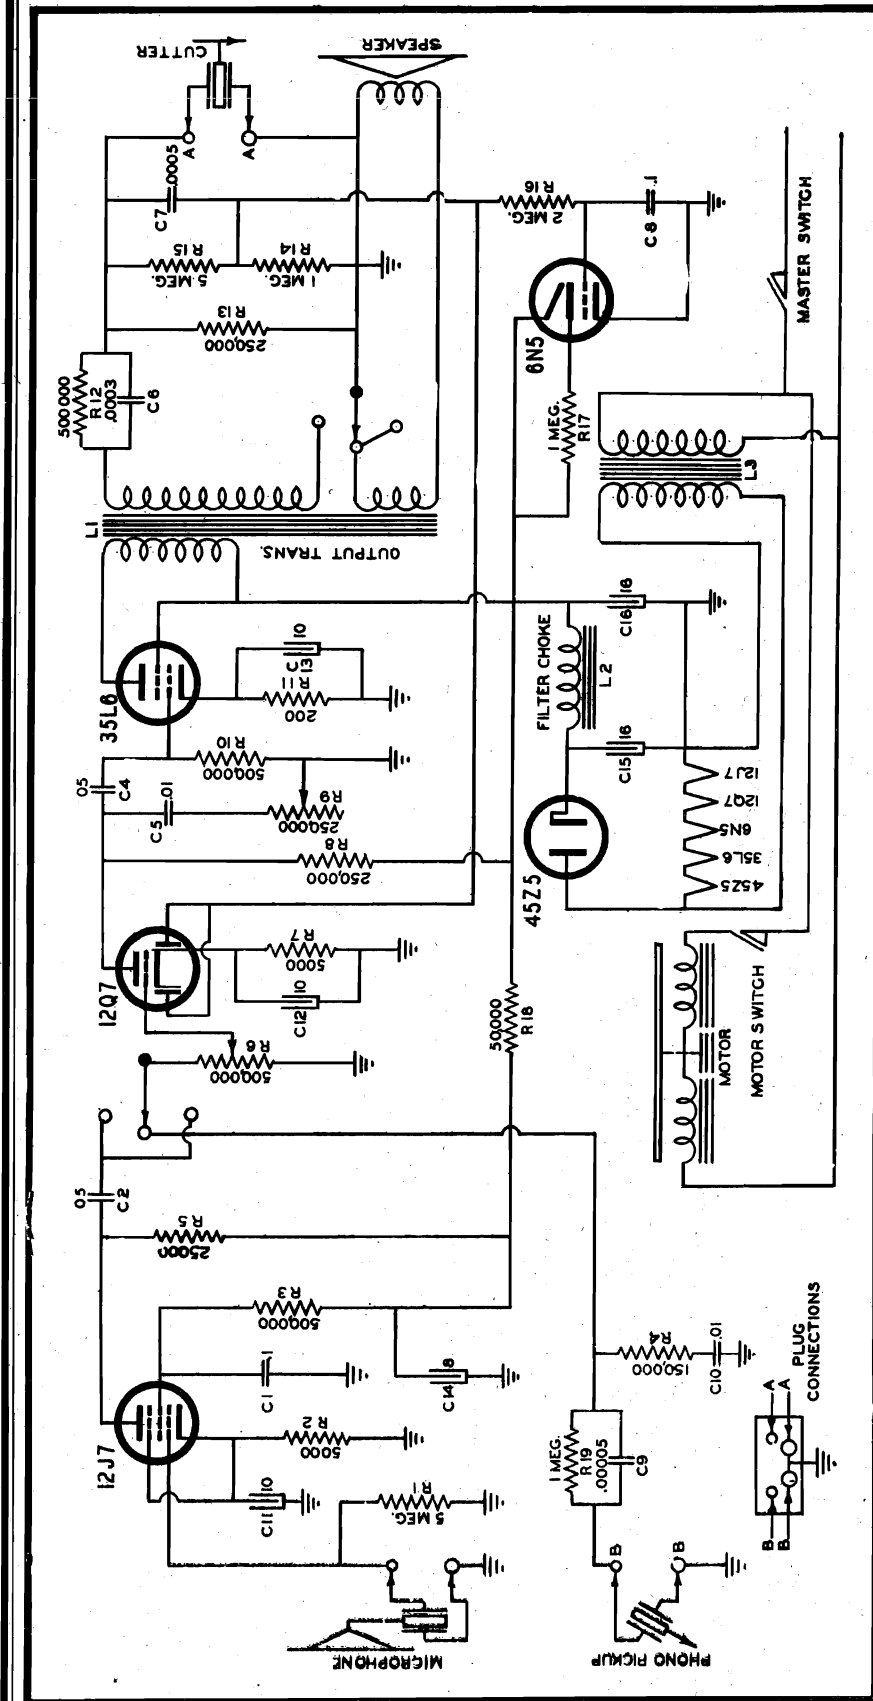

- 1—MASTER SWITCH & VOLUME CONTROL
- 2—MOTOR SWITCH
- 3—TONE CONTROL
- 4—PUBLIC ADDRESS—PHONOGRAPH—RECORDING SWITCH

- 75-2005 1 Mfd. 200 Volt Cond.
- 75-2004 .05 Mfd. 400 Volt Cond.
- 75-2004 .05 Mfd. 400 Volt Cond.
- 75-2009 .01 Mfd. 400 Volt Cond.
- 75-2009 .0005 Mfd. Mica 1000 Volt Cond.
- 75-2005 .0005 Mfd. Mica 1000 Volt Cond.
- 75-2011 .1 Mfd. 200 Volt Cond.
- 75-2011 .00005 Mfd. Mica 1000 Volt Elect. Cond.
- 75-2012 .01 Mfd. 400 Volt Cond.
- 18-2012 10 Mfd. 25 Volt Elect. Cond.
- 18-2012 10 Mfd. 25 Volt Elect. Cond.
- 18-2011 8 Mfd. 150 Volt Elect. Cond.
- 18-2010 20 Mfd. 150 Volt Elect. Cond.
- 18-2010 20 Mfd. 150 Volt Elect. Cond.
- 54-2047 Speaker, 110 Volt
- 64-2025 Switch, 2 pole, 3 Position
- 14-2002 Filter Choke
- 81-2007 Output Transformer
- 80-2058 Isolation Transformer

PART NO.	CODE	NAME
53-2020	R1	5 Meg. 1/4 Watt Carbon Resistor
53-219	R2	5,000 Ohm Resistor
53-225	R3	500,000 Ohm Resistor
53-225	R4	150,000 Ohm Resistor
53-225	R5	50,000 Ohm Resistor
19-2007	R6	500,000 Ohm Volume Control & Switch
53-219	R7	5,000 Ohm Resistor
53-224	R8	250,000 Ohm Resistor
19-2009	R9	250,000 Ohm Tone Control
53-225	R10	500,000 Ohm Resistor
53-2014	R11	200 Ohm Resistor
53-225	R12	500,000 Ohm Resistor
53-224	R13	250,000 Ohm Resistor
53-2020	R14	5 Meg. 1/4 Watt Carbon Resistor
53-2024	R15	2 Megohm Resistor
53-224	R16	1 Megohm Resistor
53-224	R17	50,000 Ohm Resistor
53-224	R18	50,000 Ohm Resistor
53-224	R19	1 Megohm Resistor

MODEL A72

A-F Service Note

MODELS Record Players

Motor Data

WILCOX-GAY CORP.

AUDIO OSCILLATION

MODEL No. A-72

DATE 4-24-40

ALL RECORD PLAYERS LUBRICATION OF ELECTRIC MOTORS
DATE 4-30-40 IN WILCOX-GAY RECORD PLAYERS AND PHONOGRAPHS

In record player and phonograph models in which the turn-table shaft is driven directly through a reduction worm gearing housed within the motor assembly - -

- 1 - The motor should be demounted from the motor board.
- 2 - Remove the three screws surrounding the turn-table shaft.
- 3 - Remove the shaft and worm gear assembly, and clean the assembly by washing in kerosene or other grease solvent.
- 4 - Wash out the worm and gear housing of the motor assembly in a similar manner.
- 5 - Make an application of 600-W motor lubricant to both the worm and gear, and place a small quantity of the same lubricant in the gear housing.

NOTE: An oil hole is provided on some of the motors in these models, so that lubricant may be added, however it is better to follow the above procedure especially in cases where the increased power demand placed upon the motor, because of a "dried out" condition of the lubricant, has become great enough to cause a noticeable reduction in turn-table r.p.m.

Motors used in those models in which the turn-table is rim driven through an idler wheel, may be lubricated as follows:

- 1 - Remove turn-table.
- 2 - Apply several drops of electric motor oil to the side of the motor shaft, allowing the oil to run down into the upper bearing.
- 3 - Oil the idler wheel bearing, using only one or two drops of the oil so that it will not run out onto the rubber rim of the wheel.
- 4 - Oil the turn-table spindle bearing.
- 5 - The lower motor bearing may be lubricated by saturating the felt wick which surrounds the lower end of the motor shaft.

NOTE: Electric motor oil may be procured at any automobile service station.

In some of the earlier model A-72 Portable Recordios, an audio oscillation may be noticed to occur with the volume control turned to near maximum position, when the 3-position switch is in the "CUT" position.

This oscillation manifests itself by a flickering of the magic eye (6U5) and will appear in the playback of records which have been cut under this condition, as a "motor-boating" sound of an intensity nearly equal to that of the recorded voice or music.

To correct this audio oscillation, disconnect the 500,000 ohm 6J7 screen grid resistor (R3) from the hum filter composed of C3 and R5, and connect it directly to B+.

Figure 9 shows the original circuit, and Figure 10 represents the circuit after the change has been made. It will be observed that this change has been incorporated in the schematic diagram appearing in Service Bulletin No. 10.

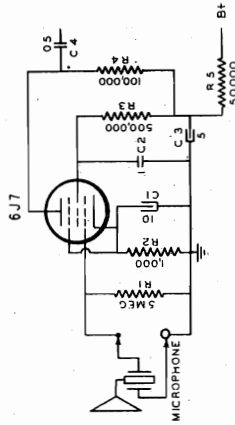


FIG. 9


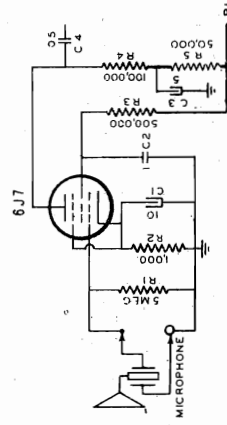


FIG. 10

ZENITH RADIO CORP.

MODELS 4B422, 4B466, 4B468
 Chassis 5417 4B437
 Schematic, Socket, Voltage
 Trimmers

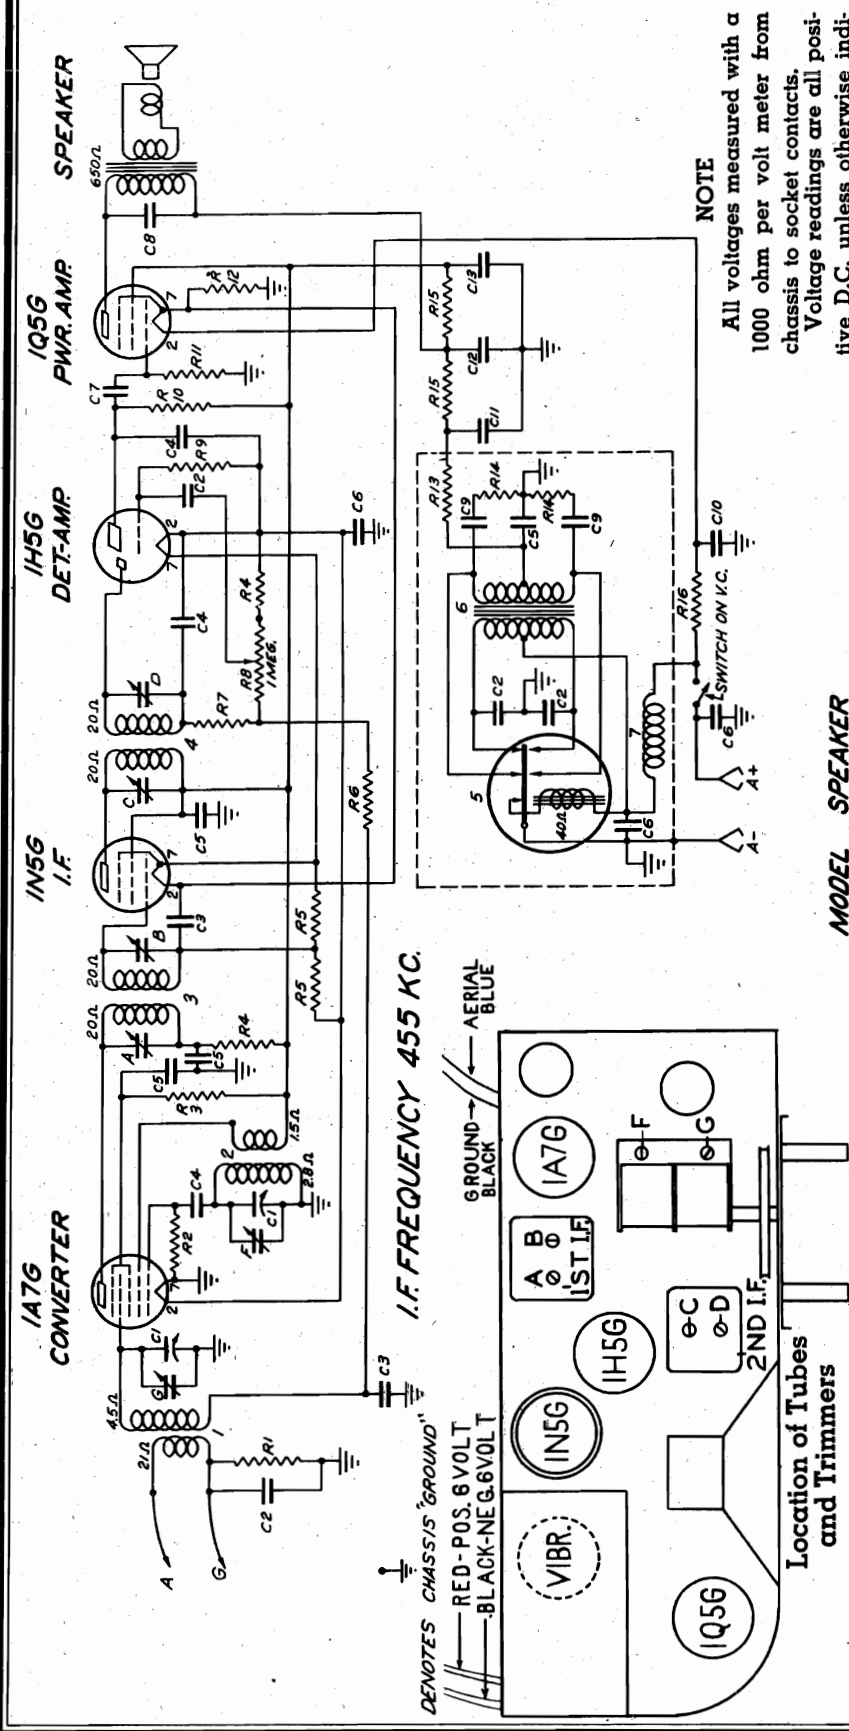


NOTE
 All voltages measured with a 1000 ohm per volt meter from chassis to socket contacts. Voltage readings are all positive D.C. unless otherwise indicated.
 Antenna disconnected volume control full on. Battery voltage 6 volt. Battery consumption — .4 ampere.



MODEL SPEAKER
 4B422 49-345 5"
 4B437 49-328 6½"
 4B466 49-342 10"
 4B468 49-359 8"

FOR ALIGNMENT
 SEE INDEX

DWG. No.	PART No.	DESCRIPTION	DWG. No.	PART No.	DESCRIPTION	DWG. No.	PART No.	DESCRIPTION
C1	22-695	TWO GANG VARIABLE	R2	63-595	100M OHM	1	20-208	ANTENNA COIL ASSEMBLY
C2	22-826	0.1 MFD.	R3	63-594	68M OHM	2	S-6381	OSCILLATOR COIL ASSEM.
C3	22-829	0.5 MFD.	R4	63-589	1000 OHM	3	95-599	1ST. I.F. TRANS.
C4	22-168	0.001 MFD.	R5	63-296	220M OHM	4	95-590	2ND. I.F. TRANS.
C5	22-829	0.001 MFD.	R6	63-699	39 MEGOHM	5	90-17	VIBRATOR
C6	22-199	5 MFD.	R7	63-593	47M OHM	6	95-635	POWER TRANSFORMER
C7	22-243	0.1 MFD.	R8	63-1079	VOLUME CONTROL	7	S-5043	CHOKE ASSEMBLY
C8	22-418	0.4 MFD.	R9	63-604	10 MEGOHM			
C9	22-966	0.4 MFD.	R10	63-271	1 MEGOHM			
C10	22-967	500MFD. ELECTROLYTIC	R11	63-600	2.2 MEGOHM			
C11	22-742	15 MFD.	R12	63-1060	90 OHM WIREWOUND			
C12	22-742	15 MFD.	R13	63-577	100 OHM			
C13	22-742	10 MFD.	R14	63-605	1000 OHM			
R1	63-597	470M OHM	R15	63-1061	7 OHM			

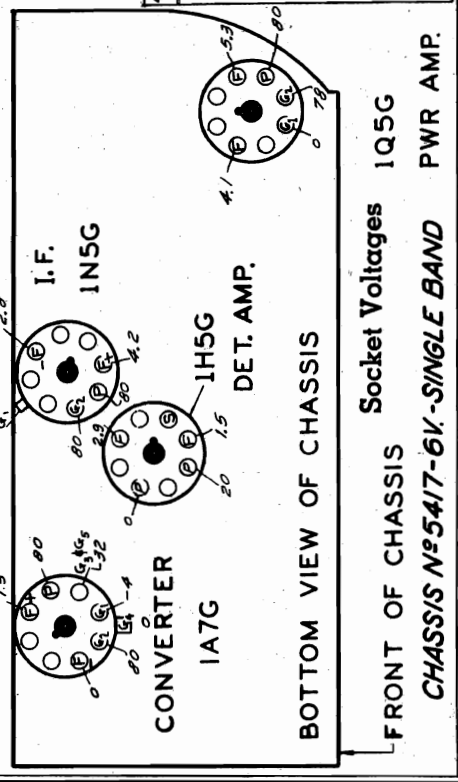



MODELS 4K402D, 4K402L, 4K402M
 Chassis 5419 4K402Y
 MODELS 5G401D, 5G401L, 5G401M
 Chassis 5537 5G401Y
 Schematics, Voltage

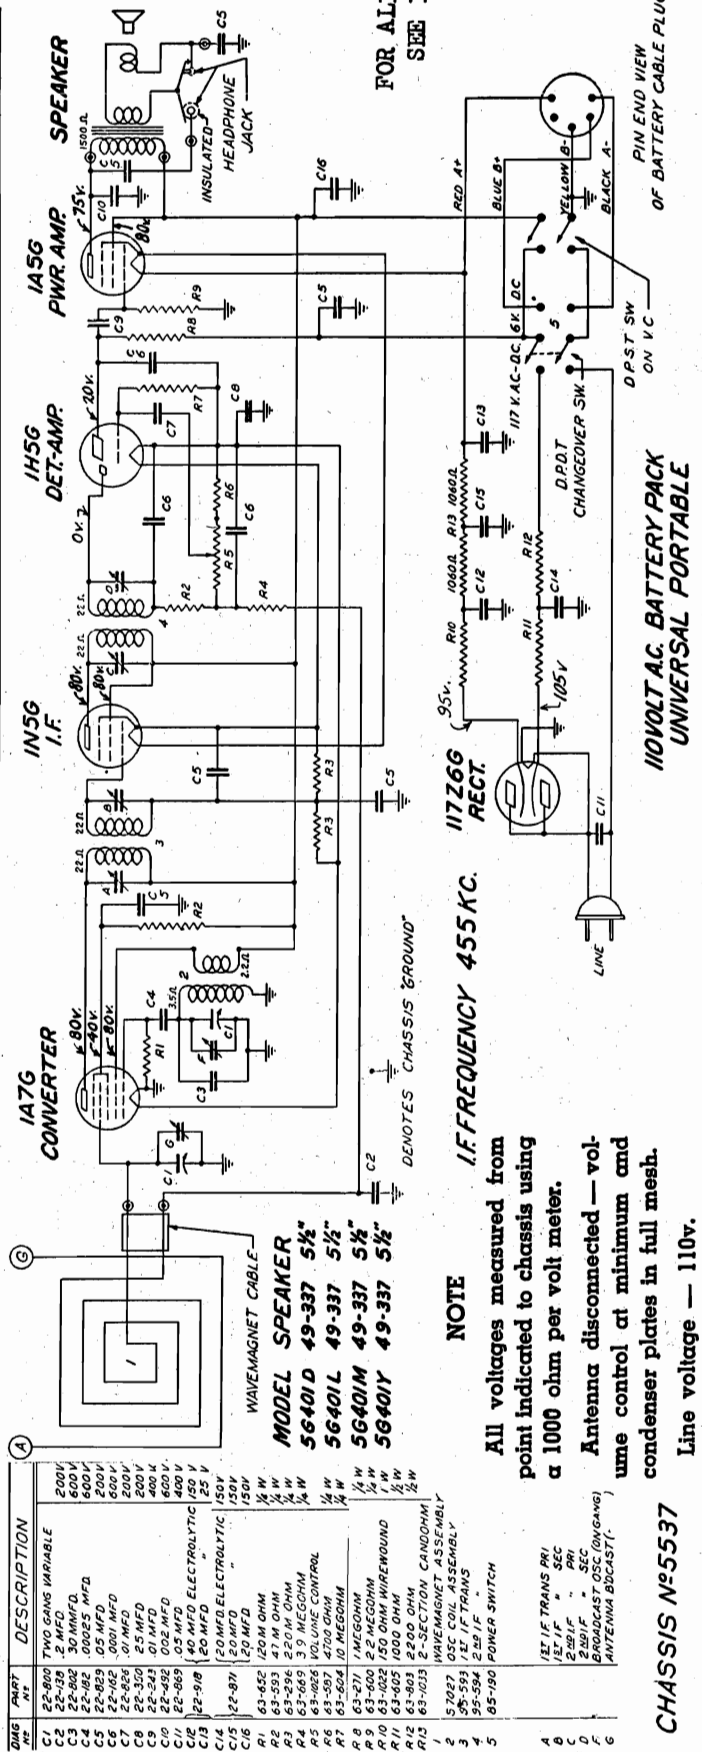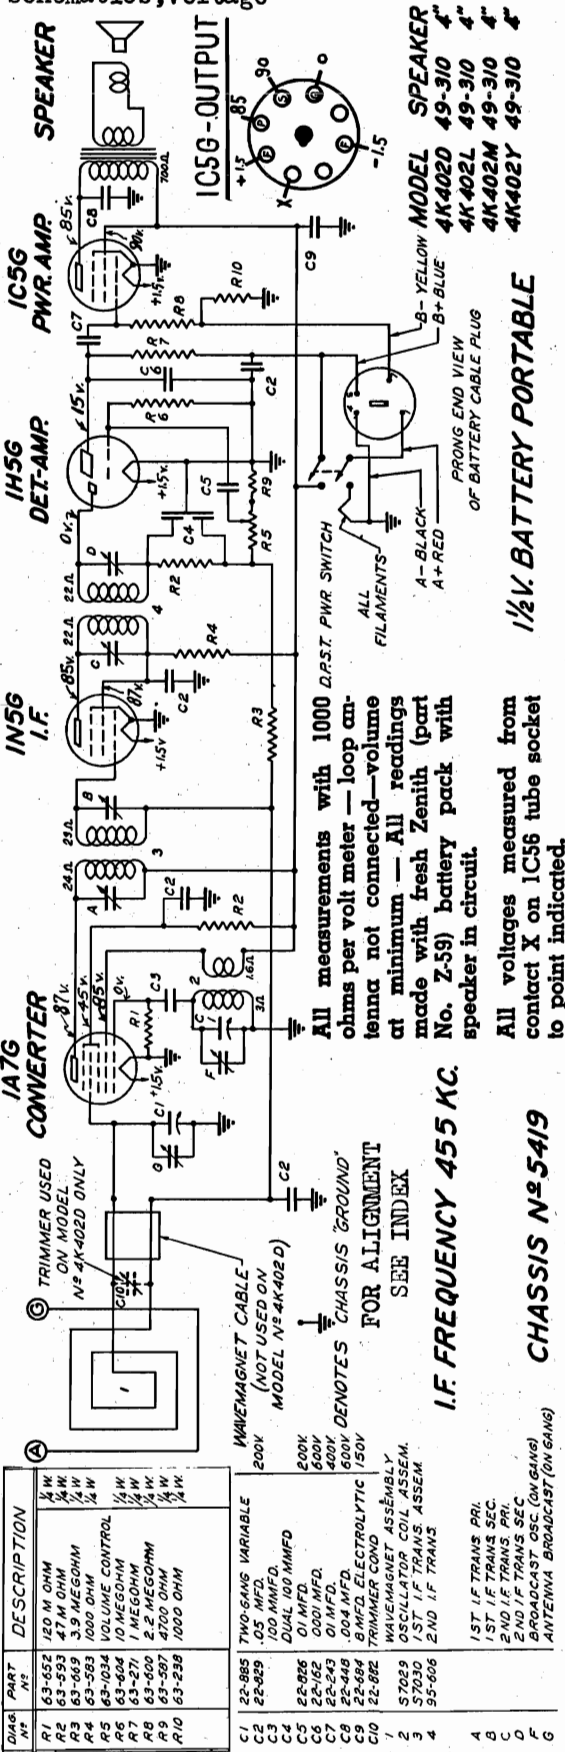

CHASSIS 5417
CHASSIS 5536
Alignment

ZENITH RADIO CORP.

MODELS 4K422, 4K435, 4K465
Chassis 5420 4K466
Schematic, Voltage, Socket
Alignment, Trimmers

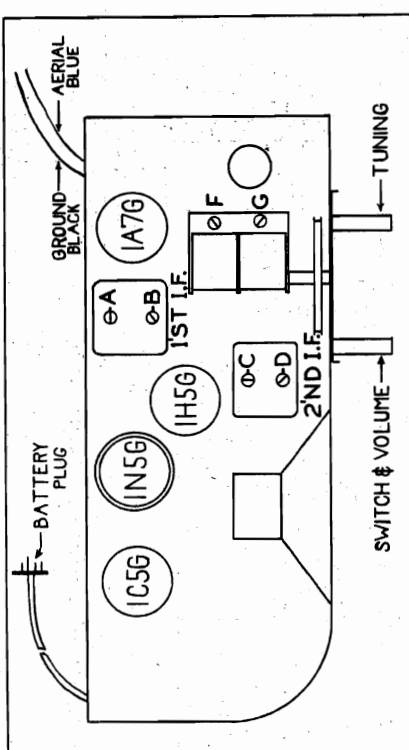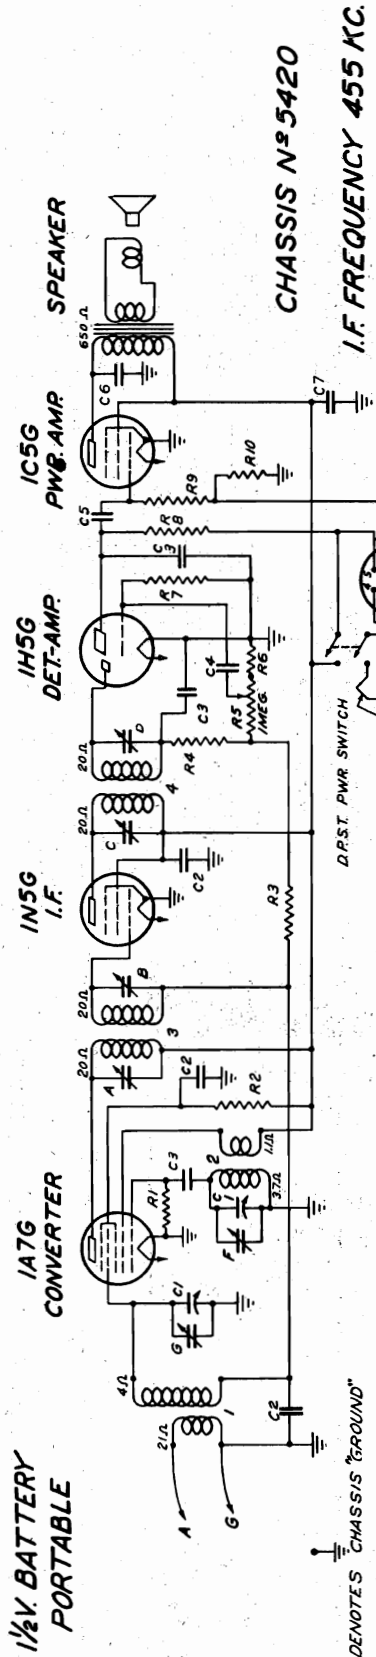


DIAG. PART. NO.	PART. NO.	DESCRIPTION	QTY.	PART. NO.	DESCRIPTION
C1	22-695	TWO GANG VARIABLE	1	95-590	2 BB I.F. TRANS. ASSEM.
C2	22-929	.05 MFD.	1	A	1/2 I.F. TRANS. PRI.
C3	22-162	.001 MFD.	1	B	1/2 I.F. TRANS. SEC.
C4	22-926	.01 MFD.	1	C	2 BB I.F. TRANS. SEC.
C5	22-243	.01 MFD.	1	D	1/2 I.F. TRANS. SEC.
C6	22-448	.004 MFD.	1	E	1/2 I.F. TRANS. SEC.
C7	22-684	8 MFD. ELECTROLYTIC / 50 V.	1	F	ANT. ST. OSC. (ON 6AN6)
R1	63-654	180M OHM	1	G	ANT. BROADCAST (ON 6AN6)
R2	63-594	68M OHM	2		
R3	63-669	39 MEGOHM	3		
R4	63-593	47M OHM	1		
R5	63-1072	VOLUME CONTROL	1		
R6	63-587	4700 OHM	1		
R7	63-604	10 MEGOHM	1		
R8	63-271	1 MEGOHM	1		
R9	63-600	2.2 MEGOHM	1		
R10	63-238	1000 OHM	1		
		ANTENNA COIL			
		OSCILLATOR COIL ASSEM.			
		1/2 I.F. TRANS. ASSEM.			

ALIGNMENT PROCEDURE
For Chassis 5417, 5420 and 5536

Operation	Connect Test Oscillator to	Dummy Antenna	Input Signal Frequency	Band	Set Dial At	Adjust Trimmers	Purpose
1	1A7 Grid	1/2 Mfd.	455 Kc.	Broadcast	600 Kc.	A, B, C, D	I. F. Alignment
2	Antenna	200 Mmf.	1500 Kc.	Broadcast	1500 Kc.	F	Set Oscillator to Scale
3	Antenna	200 Mmf.	1400 Kc.	Broadcast	1400 Kc.	G	Alignment of Scale

MODELS 5G438, 5G467
 Chassis 5536
 Schematic, Voltage, Socket
 Trimmers

ZENITH RADIO CORP.

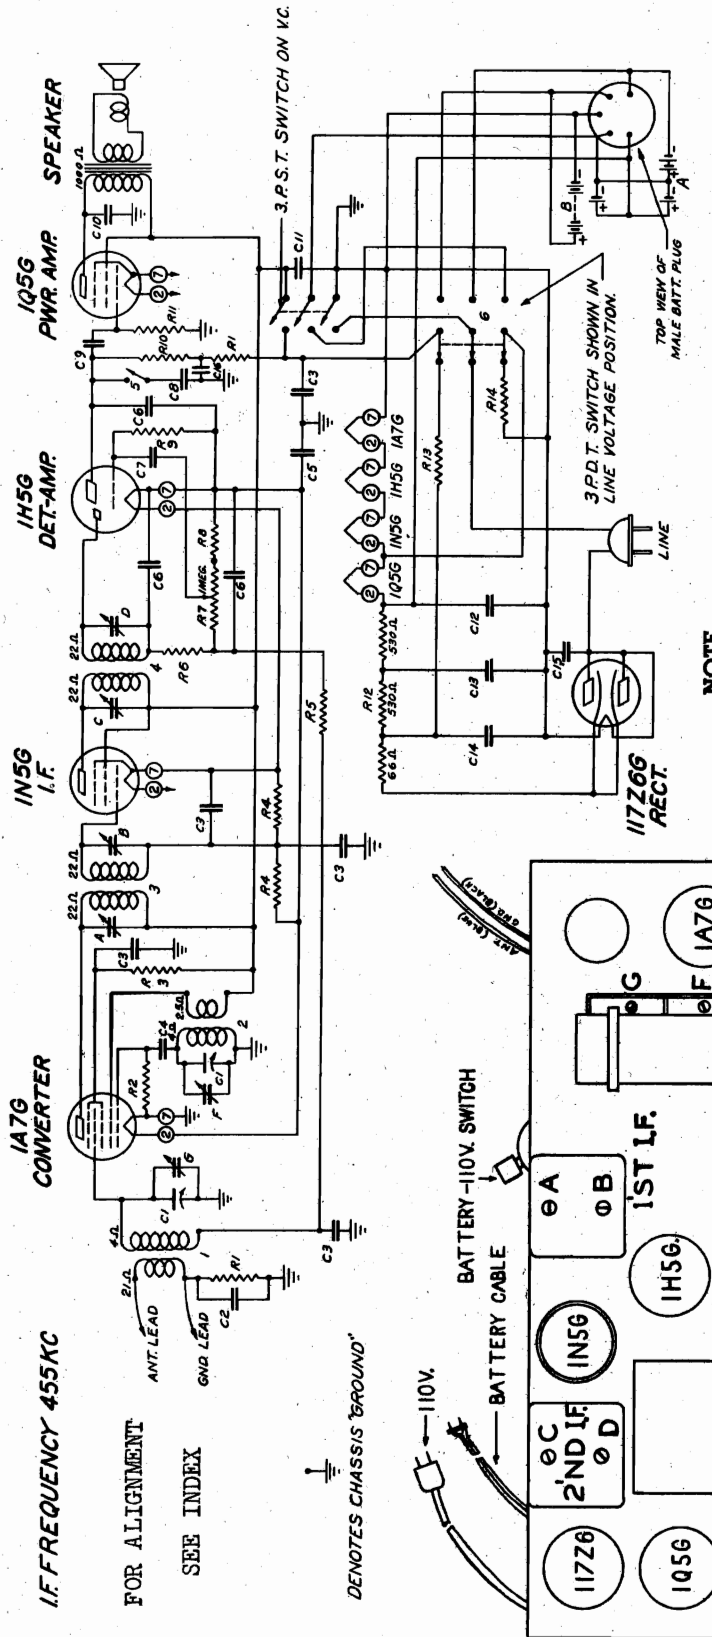

NOTE
 All voltages measured with a 1000 ohm per volt meter from chassis to socket contact indicated.
 All voltages are positive D.C. unless marked otherwise.
 Volume control on full.
 Line voltage 112 v. A.C.


CHASSIS No 5536

5 TUBE SUPERHETERODYNE
 110V.A.C.-BATT. PACK-UNIVERSAL

MODEL SPEAKER
 5G438 49-332 8"
 5G467 49-333 10"

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
1	470 M OHM	20-200	ANTENNA COIL
2	330 K OHM	3-6381	OSC. COIL ASSEMBLY
3	47 M OHM	4	2ND I.F. TRANS.
4	220 M OHM	5	2ND I.F. TRANS.
5	3.9 MEGOHM	6	85-187 TONE CONTROL SWITCH
6	47 M OHM	85-198	POWER SWITCH
7	100 OHM CONTROL		
8	33-550 100 OHM CONTROL		
9	63-604 10 MEGOHM		
10	63-271 1 MEGOHM		
11	63-600 22 MEGOHM		
12	63-1004 3 SECTION CAMDRUM		
13	150V 1000 OHM		
14	63-1002 30 OHM WIREWOUND		
15	400K		
16	200K		


Location of Tubes and Trimmers

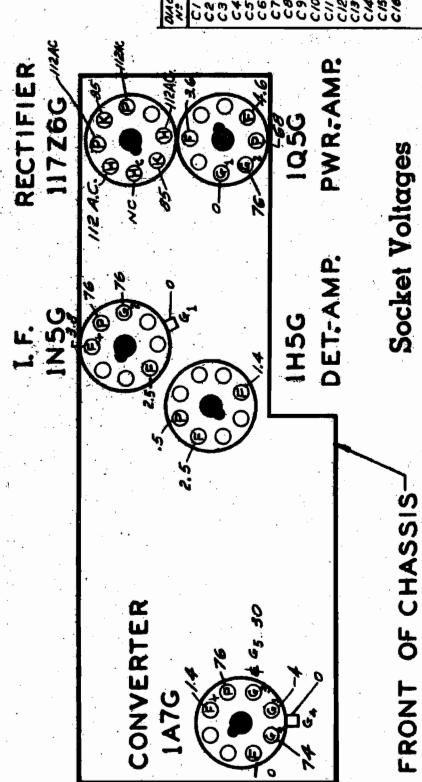

Socket Voltages

ZENITH RADIO CORP.

MODELS 5G484, 5G484-M
 Chassis 5538
 Schematic, Volt age
 MODELS S7000 to S7003
 Wireless Record Player
 Schematic

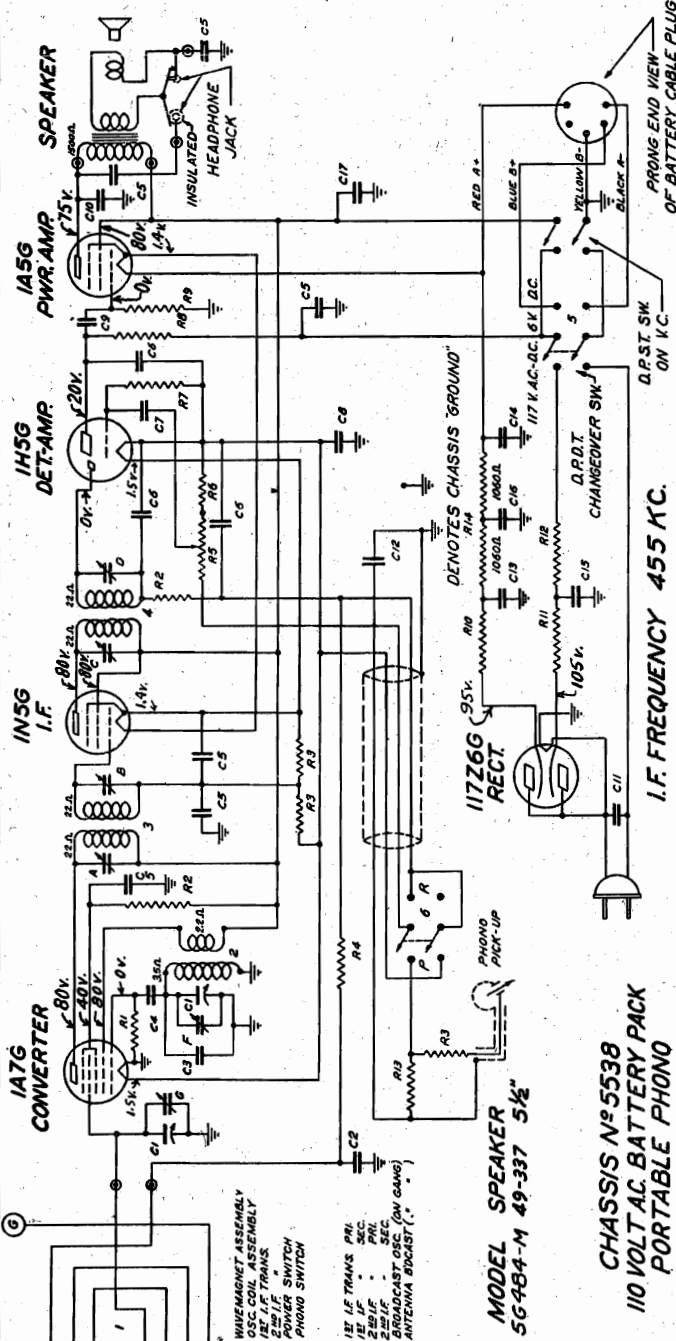


PHONOGRAPH OSCILLATOR

C1	22-690	TUNING CONDENSER	600V.
C2	22-182	.00025 MFD.	400V.
C3	22-243	.01 MFD.	200V.
C4	22-829	.05 MFD.	150V.
C5	22-827	1 MFD.	400V.
C6	22-876	8 MFD. ELECTROLYTIC	
C7	22-670	40 MFD.	
C8	22-670	1 MFD.	

R1	63-591	22 M OHM	1/4 W.
R2	63-658	390 M OHM	1/4 W.
R3	63-260	100 M OHM	1/4 W.
R4	63-583	1000 OHM	1/4 W.
R5	63-964	4700 OHM	1/2 W.
R6	63-803	2200 OHM	1/2 W.
R7	63-575	47 OHM	1/4 W.

1	S6854	OSC. COIL ASSEM
2	100-76	BALLAST TUBE
3	85-170	AC SWITCH

FOR ALIGNMENT
 SEE INDEX

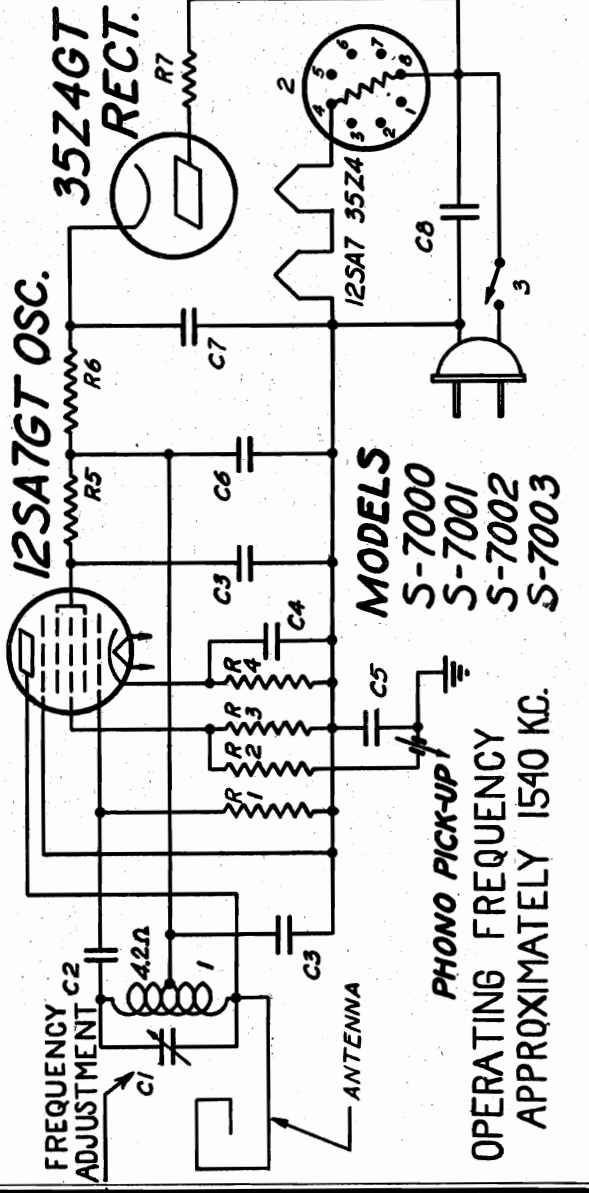

COMPONENT VALUES

C1	22-804	TWO-SAME VARIABLE
C2	22-124	2 MFD.
C3	22-502	50 MFD.
C4	22-502	50 MFD.
C5	22-829	.05 MFD.
C6	22-168	.001 MFD.
C7	22-356	.01 MFD.
C8	22-356	.01 MFD.
C9	22-849	.01 MFD.
C10	22-488	.002 MFD.
C11	22-885	.05 MFD.
C12	22-316	40 MFD. ELECTROLYTIC
C13	22-316	20 MFD. ELECTROLYTIC
C14	22-316	20 MFD. ELECTROLYTIC
C15	22-316	20 MFD. ELECTROLYTIC
C16	22-316	20 MFD. ELECTROLYTIC
C17	22-871	20 MFD. ELECTROLYTIC

R1	63-652	120 M OHM
R2	63-593	47 M OHM
R3	63-596	250 M OHM
R4	63-596	250 M OHM
R5	63-1026	VOLUME CONTROL
R6	63-597	10 M OHM
R7	63-604	10 MEGOHM
R8	63-501	2 MEGOHM
R9	63-501	2 MEGOHM
R10	63-602	650 OHM WIREWOUND
R11	63-605	1000 OHM
R12	63-603	200 OHM
R13	63-603	200 OHM
R14	63-103	2-SECTION CANDOHM

All voltages measured from point indicated to chassis using a 1000 ohm per volt meter.

Antenna disconnected — volume control at minimum and condenser plates in full mesh.

All voltages measured using Zenith No. Z659 battery pack.

12SA7GT OSC.

35Z4GT RECT.

MODEL SPEAKER 5G484-M 49-337 5 1/2"

CHASSIS N° 5538

110 VOLT AC BATTERY PACK

PORTABLE PHONO

MODEL SPEAKER 5G484-M 49-337 5 1/2"

CHASSIS N° 5538

110 VOLT AC BATTERY PACK

PORTABLE PHONO

12SA7 35Z4


MODELS S-7000 S-7001 S-7002 S-7003

PHONO PICK-UP!

OPERATING FREQUENCY APPROXIMATELY 1540 KC.

ZENITH RADIO CORP.


MODELS 6D410, 6D411, 6D425
 Chassis 5659, 5663
 MODELS 6P418, 6P419, 6P428
 6P429, 6P430, 6P447, 6P448
 6P457
 Chassis 5662, 5666
 Schematics

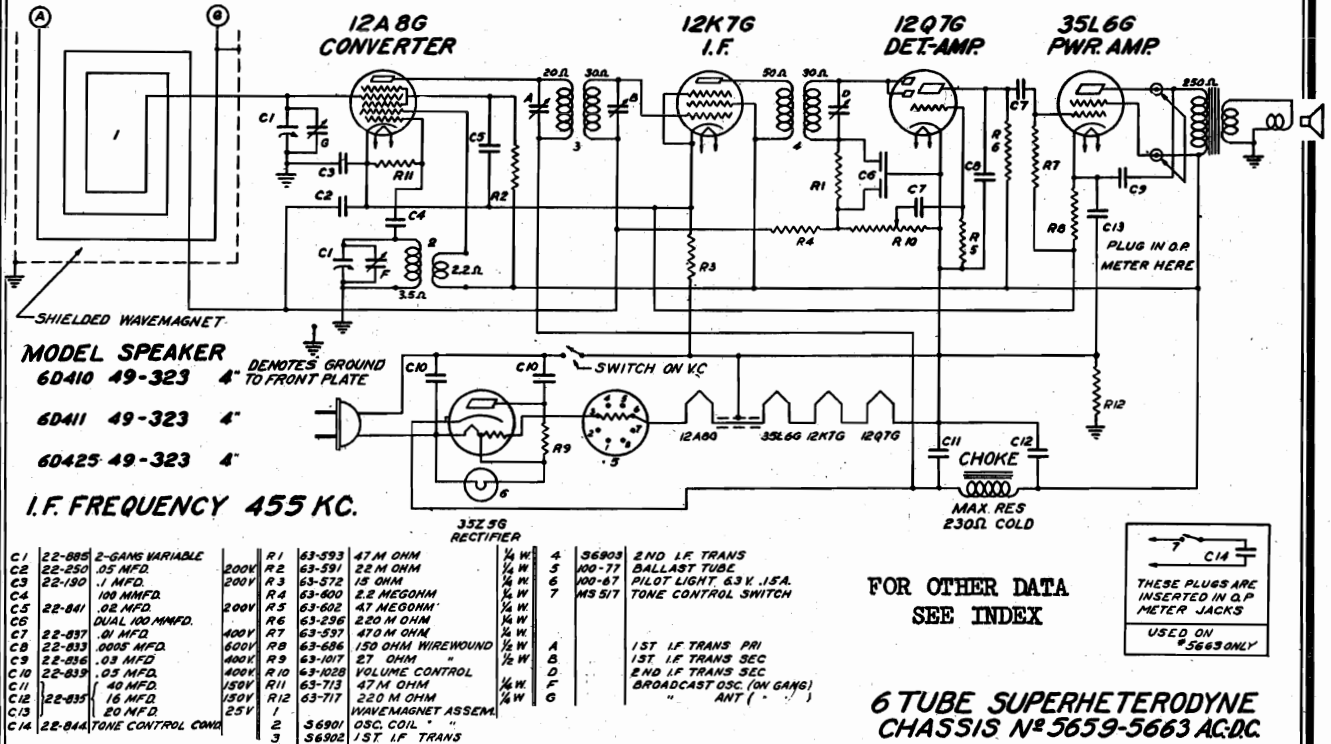

FOR OTHER DATA
 SEE INDEX

THESE PLUGS ARE
 INSERTED IN O.P.
 METER JACKS
 USED ON
 #5663 ONLY

6 TUBE SUPERHETERODYNE
 CHASSIS No 5659-5663 AC DC

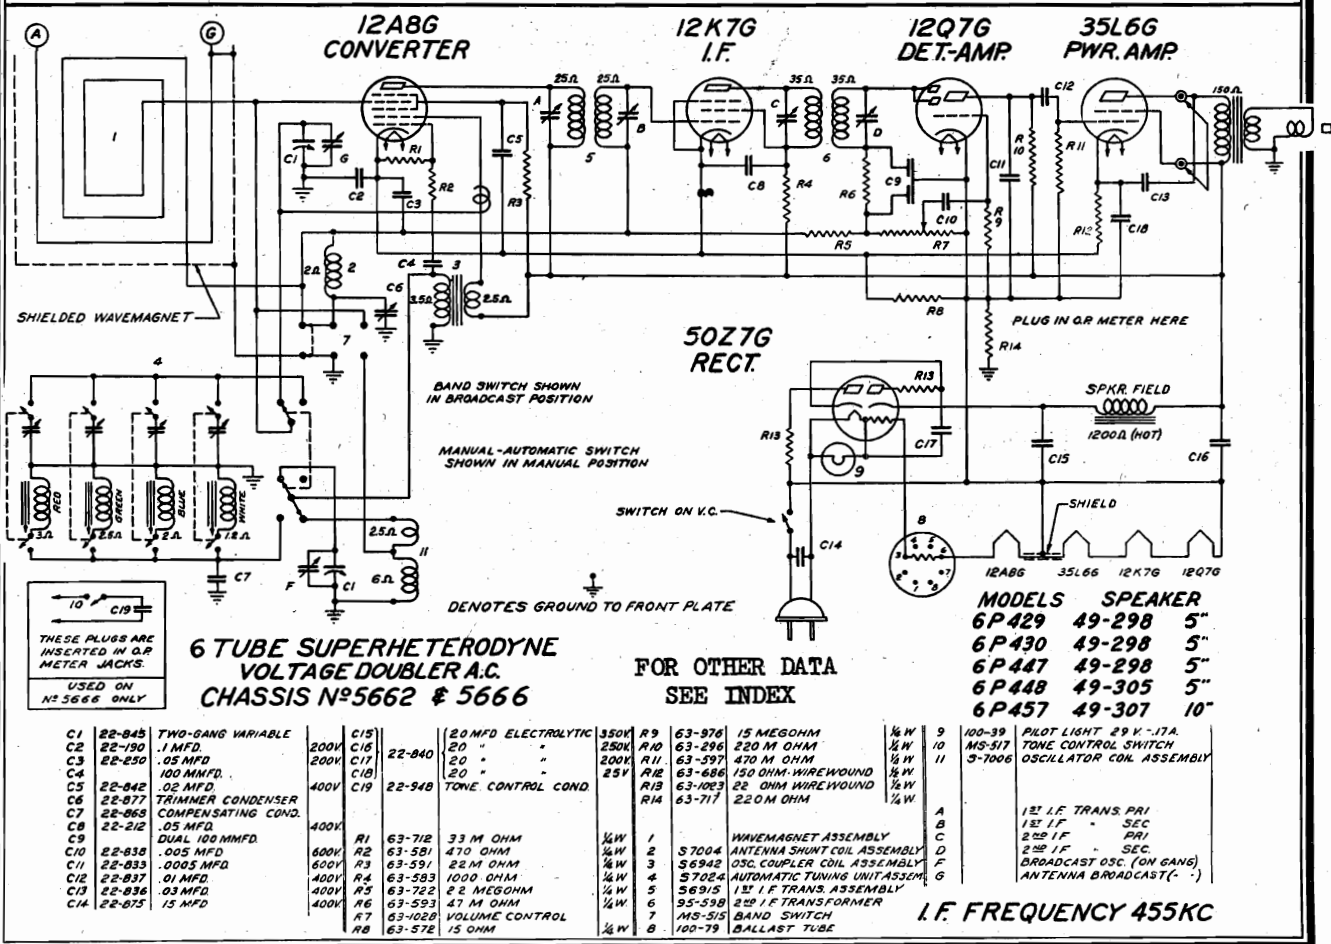


FOR OTHER DATA
 SEE INDEX

THESE PLUGS ARE
 INSERTED IN O.P.
 METER JACKS.
 USED ON
 #5666 ONLY

MODELS SPEAKER
 6P429 49-298 5"
 6P430 49-298 5"
 6P447 49-298 5"
 6P448 49-305 5"
 6P457 49-307 10"

MODELS 6D413, 6D414, 6D426
6D427, 6D446, 6D455
Chassis 5660, 5664
Schematic, Voltage, Socket

ZENITH RADIO CORP.

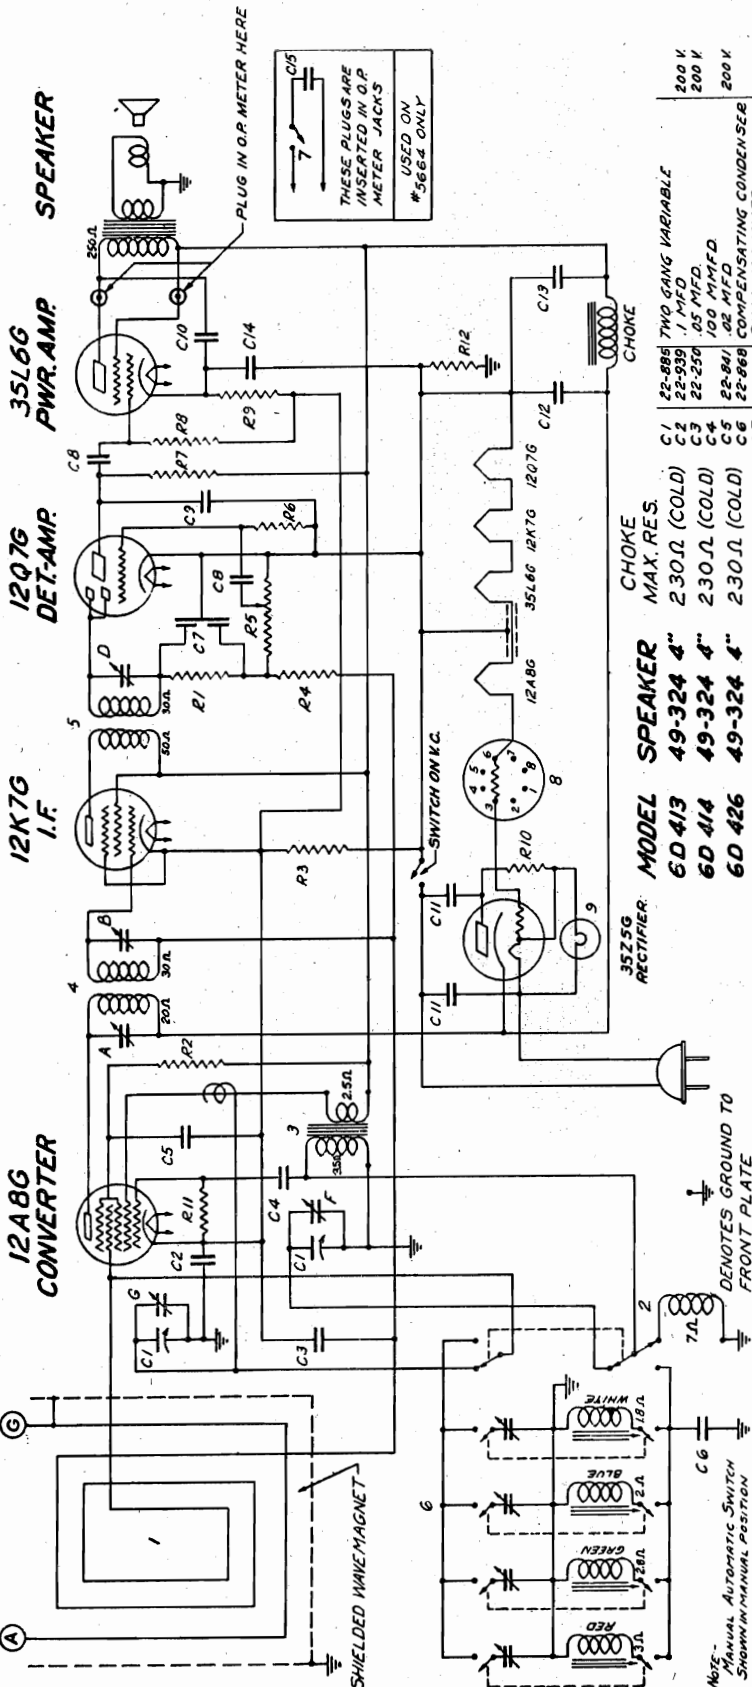

PLUG IN O.P. METER HERE

THESE PLUGS ARE
INSERTED IN O.P.
METER JACKS
USED ON
#5664 ONLY

C1	22-888	TWO GANG VARIABLE	1/4 W
C2	22-959	1 MFD.	1/4 W
C3	22-250	0.5 MFD.	1/4 W
C4	22-841	10 MFD.	1/4 W
C5	22-868	COMPENSATING CONDENSER	1/4 W
C6	22-837	DUAL 100 MFD.	1/4 W
C7	22-837	01 MFD.	1/4 W
C8	22-839	0005 MFD.	1/4 W
C9	22-836	03 MFD.	1/4 W
C10	22-836	03 MFD.	1/4 W
C11	22-839	05 MFD.	1/4 W
C12	22-839	40 MFD. ELECTROLYTIC	1/4 W
C13	22-839	16	1/4 W
C14	22-864	20	1/4 W
C15	22-864	20	1/4 W
R1	63-593	47 M OHM	1/4 W
R2	63-591	22 M OHM	1/4 W
R3	63-572	15	1/4 W
R4	63-604	2.2 MEG OHM	1/4 W
R5	63-608	2.2 MEG OHM	1/4 W
R6	63-608	4.7 MEG OHM	1/4 W
R7	63-597	470 M OHM	1/4 W
R8	63-584	150 OHM WIREWOUND	1/4 W
R9	63-584	150 OHM WIREWOUND	1/4 W
R10	63-1017	27 OHM WIREWOUND	1/4 W
R11	63-713	47 M OHM	1/4 W
R12	63-717	220 M OHM	1/4 W

MODEL	SPEAKER	CHOKE	MAX. RES.
6D413	49-324 4"	230 Ω (COLD)	
6D414	49-324 4"	230 Ω (COLD)	
6D426	49-324 4"	230 Ω (COLD)	
6D427	49-324 4"	230 Ω (COLD)	
6D446	49-336 5"	325 Ω (HOT)	
6D455	49-324 4"	230 Ω (COLD)	

I.F. FREQUENCY 455 KC.

NOTE

Voltagess measured from No. 7 pin on ballast tube to point indicated using a 1000 ohm per volt meter. Vol. control at minimum. Antenna disconnected.


All filament voltages measured across each respective tube, using an A.C. voltmeter.

Line voltage — 110V.

FOR OTHER DATA SEE INDEX

6 TUBE SUPERHETERODYNE CHASSIS #5660 & #5664 AC-DC.


35L6G OUTPUT 35Z5G-RECT. 12A8G-DET. OSC.

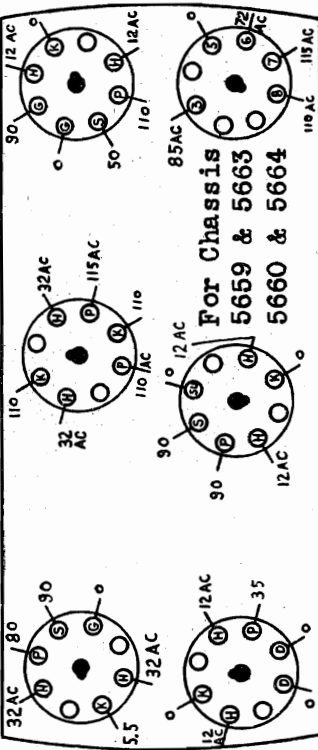

12Q7G-2ND. DET. 12K7G-I.F. 100-7-7-BALLAST FRONT OF CHASSIS

ZENITH RADIO CORP.

MODELS 6J436, 6J463
Chassis 5679
Schematic

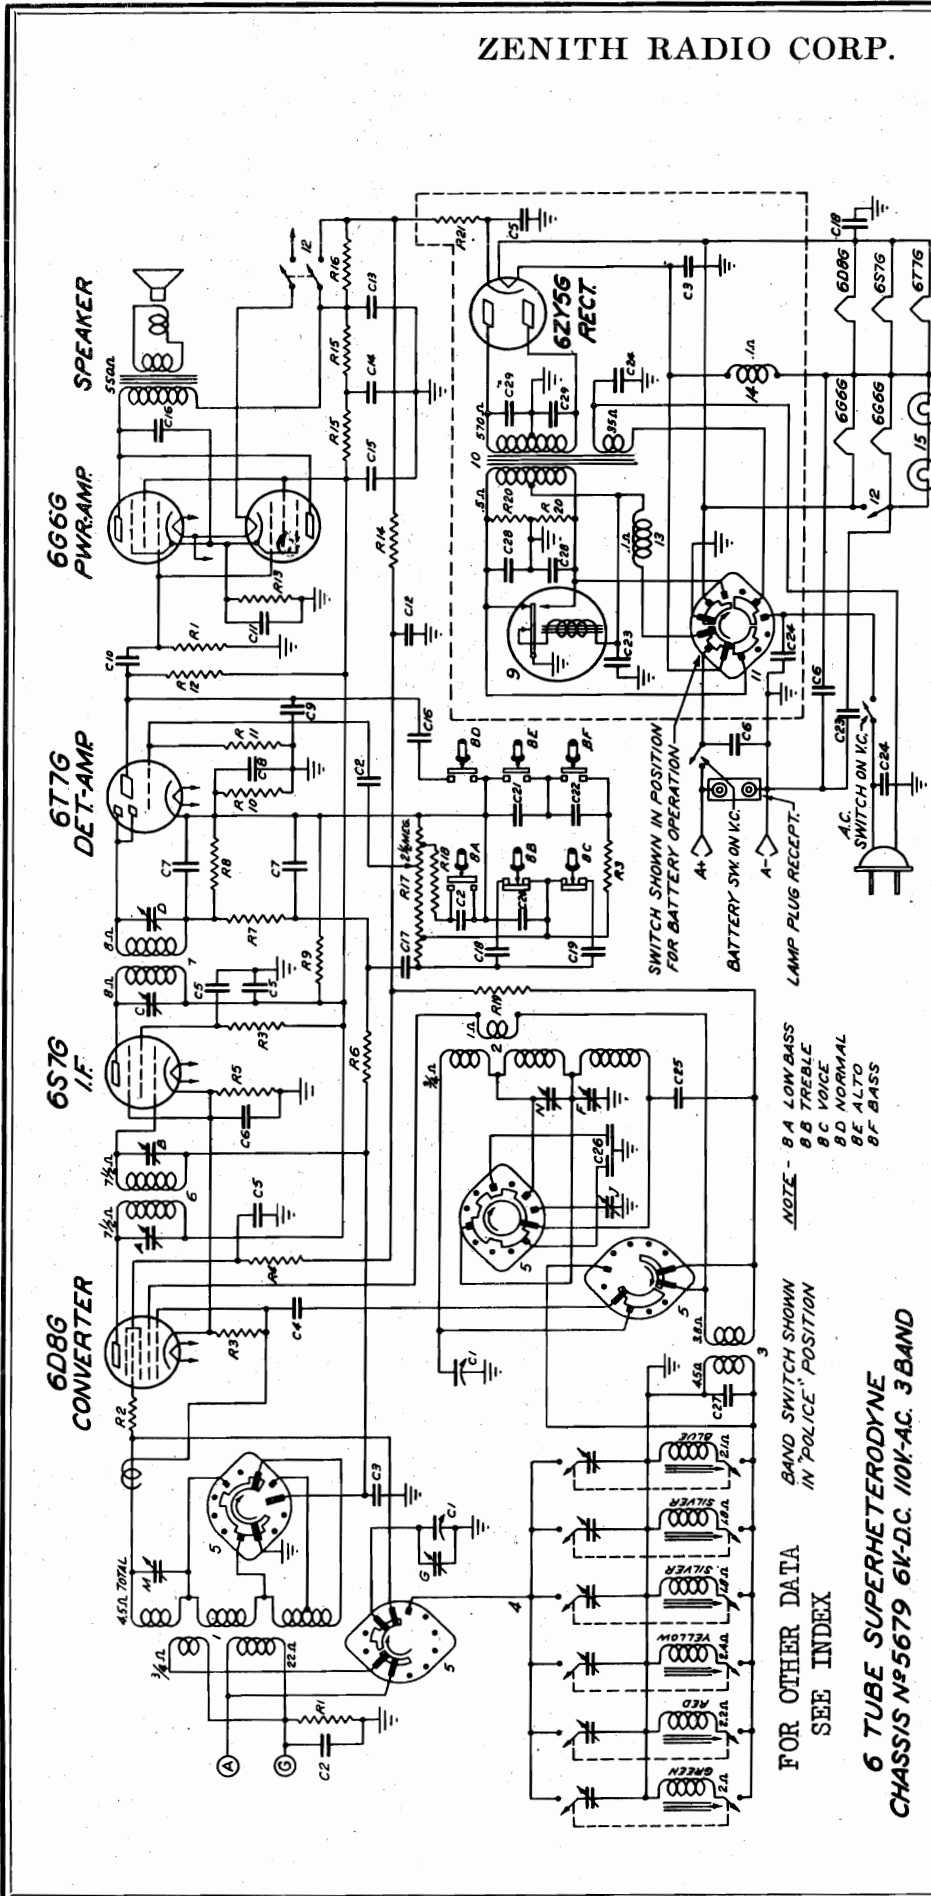

MODEL 6J 436
6J 463

SPEAKER 49-350 8"
49-348 10"

I.F. FREQUENCY 455 KC.


NOTE: DENOTES CHASSIS "GROUND"

DWG. NO.	PART NO.	DESCRIPTION	QTY.	REMARKS
C1	22-964	TWO GANG VARIABLE	200K	
C2	22-926	0.01 MFD.	200K	
C3	22-929	0.01 MFD.	200K	
C4	22-928	0.01 MFD.	400K	
C5	22-350	0.01 MFD.	200K	
C6	22-162	0.001 MFD.	600K	
C7	22-162	0.001 MFD.	200K	
C8	22-827	0.001 MFD.	200K	
C9	22-854	0.001 MFD.	600K	
C10	22-189	0.01 MFD.	25K	
C11	22-974	50MFD. ELECTROLYTIC	500K	
C12	22-974	50MFD. ELECTROLYTIC	500K	
C13	22-171	10MFD.	550K	
C14	22-448	0.04 MFD.	600K	
C15	22-327	0.02 MFD.	200K	
C16	22-182	0.0005 MFD.	600K	
C17	22-470	0.0005 MFD.	600K	
C18	22-716	0.0005 MFD.	600K	
C19	22-332	0.001 MFD.	600K	
C20	22-332	0.001 MFD.	600K	
C21	22-332	0.001 MFD.	600K	
C22	22-332	0.001 MFD.	600K	
C23	22-199	0.5 MFD.	200K	
R1	63-605	1000 OHM	1/4 W.	
R2	63-966	4700 OHM	1/4 W.	
R3	63-990	VOLUME CONTROL	1/4 W.	
R4	63-534	25M OHM	1/4 W.	
R5	63-943	150 OHM	1/4 W.	
R6	63-571	100 OHM	1/4 W.	
R7	5781	ANTENNA COIL ASSEMBLY	1/4 W.	
R8	58007	OSCILLATOR COIL ASSEMBLY	1/4 W.	
R9	53507	OSC. COMPLEX COIL ASSEMBLY	1/4 W.	
R10	85-210	ANTENNA TUNING UNIT ASSEMBLY	1/4 W.	
R11	85-549	1ST I.F. TRANSFORMER	1/4 W.	
R12	95-650	2ND I.F. TRANSFORMER	1/4 W.	
R13	58003	1ST I.F. TRANSFORMER	1/4 W.	
R14	930-11	VIBRATOR	1/4 W.	
R15	95-645	POWER SUPPLY TRANSFORMER	1/4 W.	
R16	85-171	1ST I.F. TRANSFORMER	1/4 W.	
R17	53507	OSC. COMPLEX COIL ASSEMBLY	1/4 W.	

FOR OTHER DATA
SEE INDEX

6 TUBE SUPERHETERODYNE
CHASSIS No 5679 6K-DC. 110V-AC. 3 BAND

MODELS 6P416 to 6P419, 6P428 ZENITH RADIO CORP.
 Chassis 5661, 5665
 Schematic, Voltage, Socket
 CHASSIS 5662, 5666
 Voltage, Socket

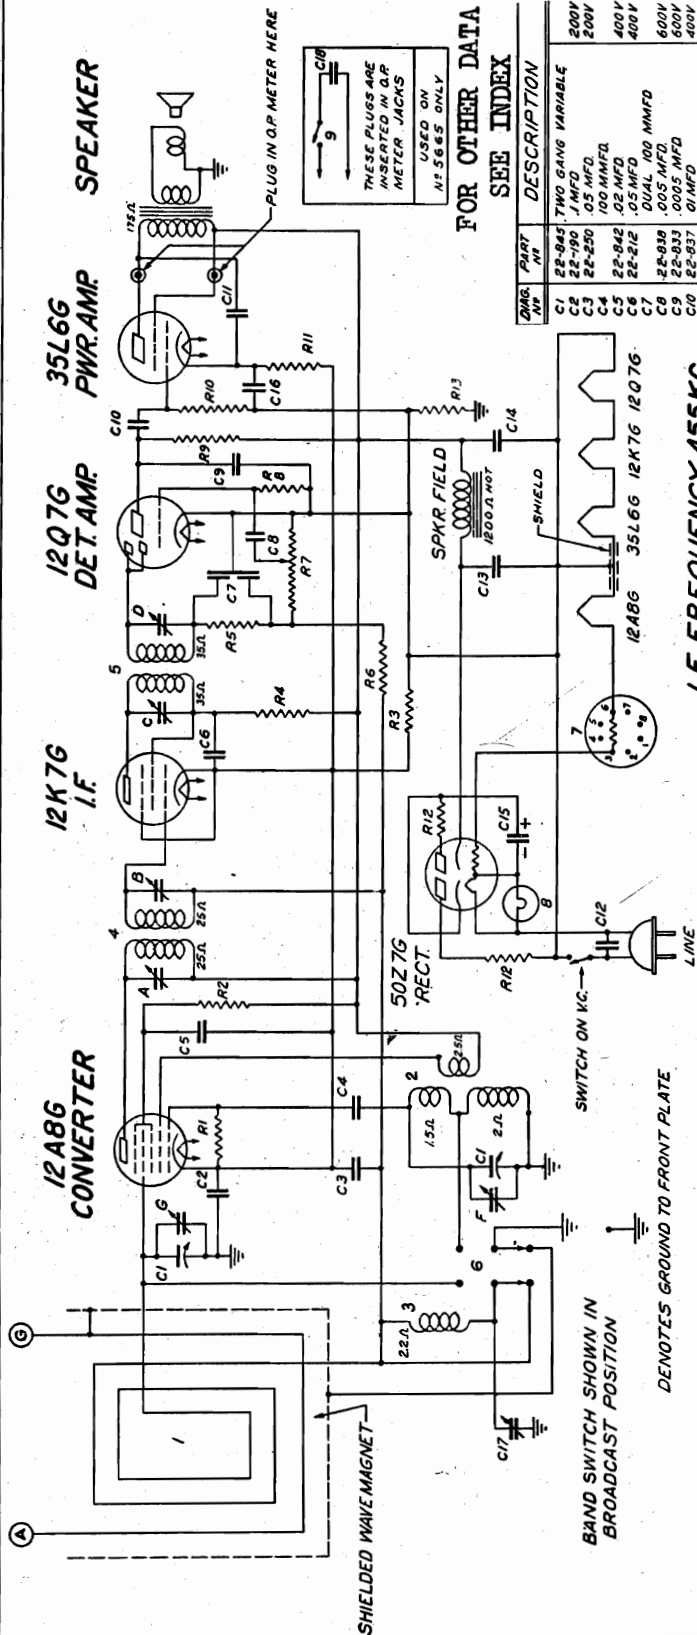

NOTE
 Voltages measured from No. 7 pin on ballast tube to point indicated using a 1000 ohm per volt meter. Vol. control at minimum. Antenna disconnected.

All filament voltages measured across each respective tube, using a 0-50 A.C. volt meter.

A. This lug is C.T. of fil. and is one side of pilot light supply line.
 Lug No. 7 is return for pilot light.


B. This lug (No. 8) has a 50 v. A. C. potential with respect to lug No. 2 and also a 117 v. A.C. potential with respect to line switch.

FOR OTHER DATA SEE INDEX

QMG. NO.	PART NO.	DESCRIPTION	VOLTS	SOCKET
C1	22-945	TWO GANG VARIABLE	200V	200V
C2	22-190	.1MFD	200V	200V
C3	22-250	.05 MFD	400V	400V
C4	100	MFD	400V	400V
C5	22-842	.02 MFD	400V	400V
C6	22-212	.05 MFD	400V	400V
C7	22-939	DUAL 100 MMFD	600V	600V
C8	22-933	.0005 MFD	600V	600V
C9	22-934	.0005 MFD	600V	600V
C10	22-935	.01 MFD	400V	400V
C11	22-936	.01 MFD	400V	400V
C12	22-975	.15 MFD	400V	400V
C13	(20 MFD ELECTROLYTIC)	350K	250V	250V
C14	20 MFD	250K	250V	250V
C15	20 MFD	250K	250V	250V
C16	20 MFD	250K	250V	250V
C17	22-788	TRIMMER CONDENSER	25V	25V
C18	22-967	TONE CONTROL COND.	25V	25V
R1	63-712	33 M OHM	1/2 W	1/2 W
R2	63-592	2.2 M OHM	1/2 W	1/2 W
R3	63-572	15 OHM	1/2 W	1/2 W
R4	63-593	1000 OHM	1/2 W	1/2 W
R5	63-593	47 M OHM	1/2 W	1/2 W
R6	63-722	2.2 MEG OHM	1/2 W	1/2 W
R7	63-028	VOLUME CONTROL	1/2 W	1/2 W
R8	63-976	15 MEG OHM	1/2 W	1/2 W
R9	63-296	220 M OHM	1/2 W	1/2 W
R10	63-597	470 M OHM	1/2 W	1/2 W
R11	63-686	150 OHM WIREWOUND	1/2 W	1/2 W
R12	63-023	22 OHM	1/2 W	1/2 W
R13	63-717	22 OHM	1/2 W	1/2 W
S	5693	OSCILLOMETER ASSEMBLY	1/2 W	1/2 W
T	5694	SHUNT UNIT	1/2 W	1/2 W
U	5695	12 I.F. TRANS.	1/2 W	1/2 W
V	95-598	2ND I.F. TRANS.	1/2 W	1/2 W
W	MS515	BAND SWITCH	1/2 W	1/2 W
X	100-79	BALLAST TUBE	1/2 W	1/2 W
Y	100-39	PILOT LIGHT 25V-17A	1/2 W	1/2 W
Z	MS517	TONE CONTROL SWITCH	1/2 W	1/2 W
A	12 I.F. TRANS. PRI.	1/2 W	1/2 W	1/2 W
B	12 I.F. SEC.	1/2 W	1/2 W	1/2 W
C	2ND I.F. PRI.	1/2 W	1/2 W	1/2 W
D	2ND I.F. SEC.	1/2 W	1/2 W	1/2 W
E	2ND I.F. SEC.	1/2 W	1/2 W	1/2 W
F	BROADCAST OSC. (ON GANG)	1/2 W	1/2 W	1/2 W
G	ANTENNA BROADCAST.	1/2 W	1/2 W	1/2 W

I.F. FREQUENCY 455KC

6 TUBE SUPERHETERODYNE
 VOLTAGE DOUBLER A.C.
 CHASSIS NO. 5661 & 5665

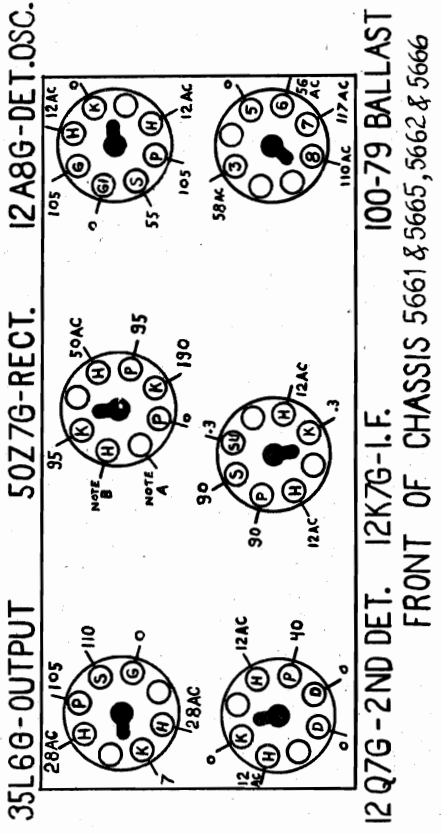


FRONT OF CHASSIS 5661 & 5665, 5662 & 5666

CHASSIS 5672-P
Alignment, Trimmers, Socket


ZENITH RADIO CORP.

MODEL 6R481
Chassis 5675
Schematic, Voltage, Socket
Alignment, Trimmers

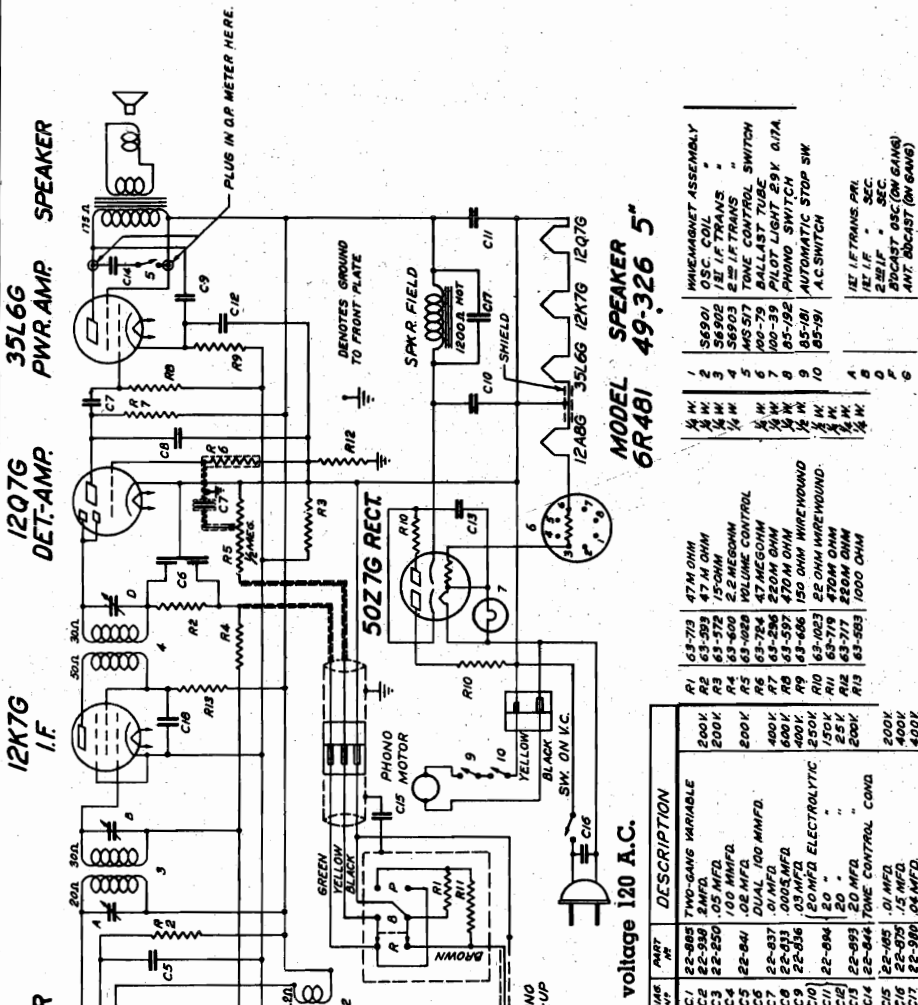

LEGEND
F—Filament
H—Heater
D—Diode
G1—Control Grid
G2—Screen Grid
G3—Suppressor Grid
P—Plate
K—Cathode

NOTE
I.F. FREQUENCY 455Kc
All voltages measured with a. All voltages are positive D.C. 1000 ohm per volt meter from unless marked otherwise. chassis to socket contact indi- Volume control on full. cated.

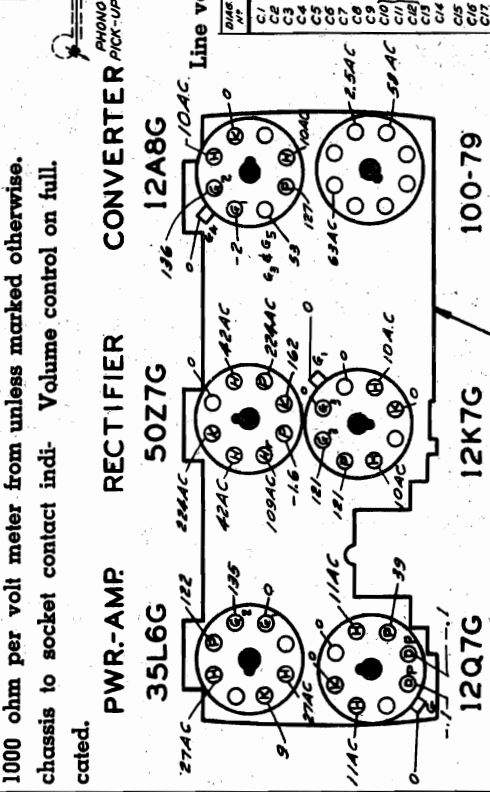


6 TUBE SUPERHETERODYNE VOLTAGE DOUBLER A.C. CHASSIS N°5675

Operation	Connect Test Oscillator to	Dummy Antenna	Input Signal Frequency	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	.5 Mfd.	455 Kc.	Broadcast	600 Kc.	A, B, C	I.F. Alignment
2	Single Turn Loop Loosely Coupled to	—	1500 Kc.	Broadcast	1500 Kc.	F	Set Oscillator to Scale
3	Wave Magnet	—	1500 Kc.	Broadcast	1500 Kc.	G	Alignment of Antenna

ALIGNMENT PROCEDURE


For Chassis 5672-P
5675

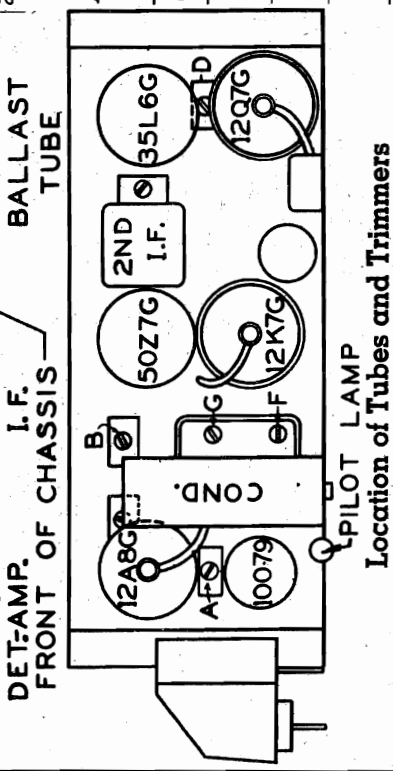


TYPE	VAL	DESCRIPTION
C1	22-985	100 OHM VARIABLE
C2	22-985	100 MFD.
C3	22-250	100 MFD.
C4	22-250	100 MFD.
C5	22-841	100 MFD.
C6	22-937	DUAL 100 MFD.
C7	22-937	100 MFD.
C8	22-937	100 MFD.
C9	22-937	100 MFD.
C10	22-984	20 MFD. ELECTROLYTIC
C11	22-984	20 MFD.
C12	22-984	20 MFD.
C13	22-984	20 MFD.
C14	22-984	20 MFD.
C15	22-985	10 MFD.
C16	22-975	1/2 MFD.
C17	22-980	1/2 MFD.
C18	22-912	100 MFD.
R1	63-793	47M OHM
R2	63-793	47M OHM
R3	63-793	47M OHM
R4	63-793	47M OHM
R5	63-793	47M OHM
R6	63-793	47M OHM
R7	63-793	47M OHM
R8	63-793	47M OHM
R9	63-793	47M OHM
R10	63-793	47M OHM
R11	63-793	47M OHM
R12	63-793	47M OHM
R13	63-793	47M OHM
R14	63-793	47M OHM
R15	63-793	47M OHM
R16	63-793	47M OHM
R17	63-793	47M OHM
R18	63-793	47M OHM
R19	63-793	47M OHM
R20	63-793	47M OHM
R21	63-793	47M OHM
R22	63-793	47M OHM
R23	63-793	47M OHM
R24	63-793	47M OHM
R25	63-793	47M OHM
R26	63-793	47M OHM
R27	63-793	47M OHM
R28	63-793	47M OHM
R29	63-793	47M OHM
R30	63-793	47M OHM
R31	63-793	47M OHM
R32	63-793	47M OHM
R33	63-793	47M OHM
R34	63-793	47M OHM
R35	63-793	47M OHM
R36	63-793	47M OHM
R37	63-793	47M OHM
R38	63-793	47M OHM
R39	63-793	47M OHM
R40	63-793	47M OHM
R41	63-793	47M OHM
R42	63-793	47M OHM
R43	63-793	47M OHM
R44	63-793	47M OHM
R45	63-793	47M OHM
R46	63-793	47M OHM
R47	63-793	47M OHM
R48	63-793	47M OHM
R49	63-793	47M OHM
R50	63-793	47M OHM
R51	63-793	47M OHM
R52	63-793	47M OHM
R53	63-793	47M OHM
R54	63-793	47M OHM
R55	63-793	47M OHM
R56	63-793	47M OHM
R57	63-793	47M OHM
R58	63-793	47M OHM
R59	63-793	47M OHM
R60	63-793	47M OHM
R61	63-793	47M OHM
R62	63-793	47M OHM
R63	63-793	47M OHM
R64	63-793	47M OHM
R65	63-793	47M OHM
R66	63-793	47M OHM
R67	63-793	47M OHM
R68	63-793	47M OHM
R69	63-793	47M OHM
R70	63-793	47M OHM
R71	63-793	47M OHM
R72	63-793	47M OHM
R73	63-793	47M OHM
R74	63-793	47M OHM
R75	63-793	47M OHM
R76	63-793	47M OHM
R77	63-793	47M OHM
R78	63-793	47M OHM
R79	63-793	47M OHM
R80	63-793	47M OHM
R81	63-793	47M OHM
R82	63-793	47M OHM
R83	63-793	47M OHM
R84	63-793	47M OHM
R85	63-793	47M OHM
R86	63-793	47M OHM
R87	63-793	47M OHM
R88	63-793	47M OHM
R89	63-793	47M OHM
R90	63-793	47M OHM
R91	63-793	47M OHM
R92	63-793	47M OHM
R93	63-793	47M OHM
R94	63-793	47M OHM
R95	63-793	47M OHM
R96	63-793	47M OHM
R97	63-793	47M OHM
R98	63-793	47M OHM
R99	63-793	47M OHM
R100	63-793	47M OHM

ZENITH RADIO CORP.

MODEL 6MF490
Ford Roto-Matic, 01A18805
Schematic, Voltage

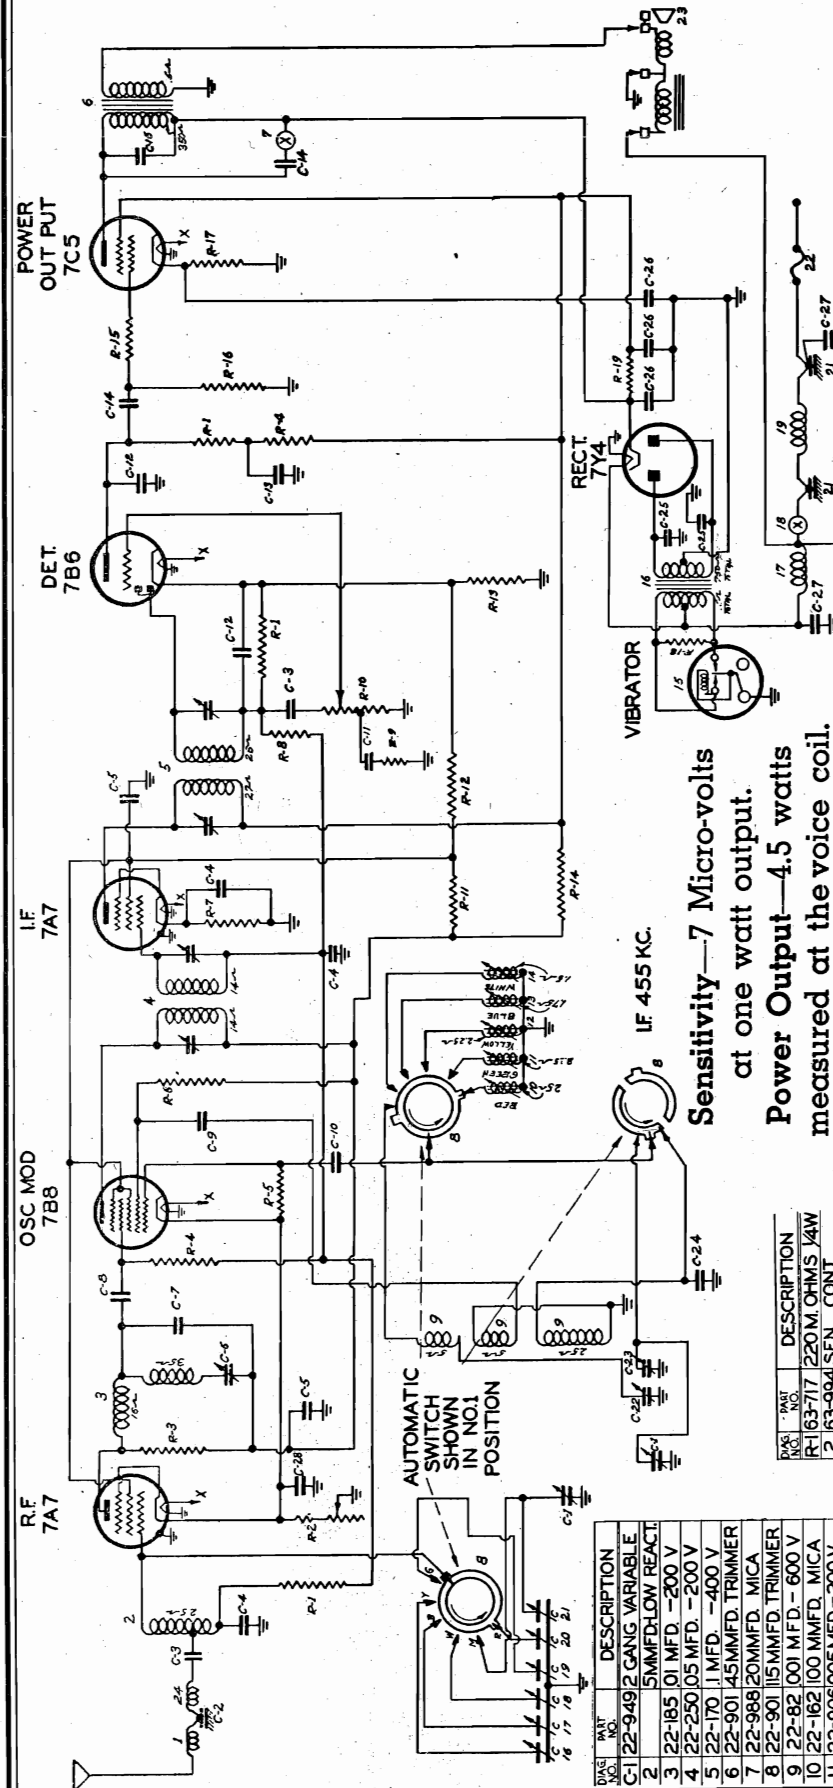

MODEL - 6MF490
FORD ROTO-MATIC
01A-18805
Tuning Range—540-1520 K.C.

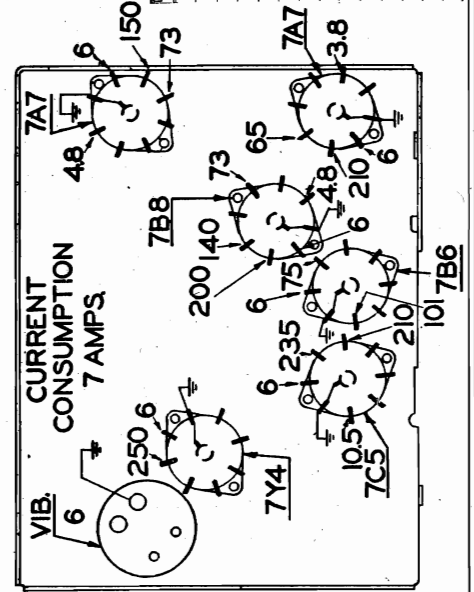

Sensitivity—7 Microvolts
at one watt output.
Power Output—4.5 watts
measured at the voice coil.

PART NO.	DESCRIPTION
R-1	63-717 220M. OHMS 1/4W
2	63-994 SEN. CONT.
3	63-640B200-OHMS 1/4W
4	63-595 100 M. OHMS 1/4W
5	63-695 47 M. OHMS 1/4W
6	63-972 15 M. OHMS 1W
7	63-410 1200-OHMS 1/4W
8	63-271 1 MEG OHM 1/4W
9	63-592 33 M. OHMS 1/4W
10	63-073 3VOL. CONT. & SW.
R-11	63-947 27 M. OHMS 2W
12	63-059 33M. OHMS 1/2W
13	63-632 560-OHMS 1/4W
14	63-584 500-OHMS 1/4W
15	63-695 47-OHMS 1/4W
16	63-719 470M. OHMS 1/4W
26	22-955 10-020MMFD.-400-350 25V
27	22-908 5 MFD. - 120 V
28	22-190 1 MFD. - 200 V

PART NO.	DESCRIPTION
1	S-696B ANT. MOTOR NOISE CHOKE
2	S-7588 ANT. COIL ASSEM.
3	S-7572 R.F. COIL ASSEM.
4	S-7573 1.1 I.F. TRANS.
5	S-7574 2.2 I.F. TRANS.
6	95-640 OUTPUT TRANS.
7	85-208 TONE CONT. SWITCH
8	85-207 AUTOMATIC SWITCH
9	S-7544 MAN. OSC. COIL ASSEM.
10	S-7745
11	S-7746
12	S-7747 AUTO. OSC. COIL ASSEM.
13	S-7748
14	S-7749

PART NO.	DESCRIPTION
15	190-15 VIBRATOR
16	95-641 POWER TRANS.
17	20-213 MAIN HASH CHOKE
18	SWITCH ON VOL. CONT.
19	S-584 MOTOR NOISE CHOKE
20	20-217 HEATER LINE CHOKE
21	LOW REACTOR
22	136-11 FUSE
23	49-341 SPEAKER
24	S-7760 MOTOR NOISE CHOKE

ALL MEASUREMENTS
WITH 1000 OHM PER
VOLT METER FROM
CHASSIS GROUND TO
BATTERY VOLTS-6
ANTENNA
DISCONNECTED
VOL. AT MIN.

MODEL 6MF490
Ford Roto-Matic
Alignment, Trimmers, Socket
Tuning Adjustments

ZENITH RADIO CORP.

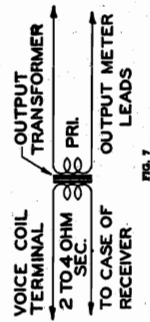


FIG. 7

If the received signal is too strong, the antenna should be collapsed to its shortest position. The two screws which hold the escutcheon to the instrument panel are now removed (see Fig. 8). The escutcheon plate is removed, making the adjustment screws accessible. They are then adjusted in the following order:

For a station close to 580 K.C., the adjustment screw over 1 (see Fig. 5) is first adjusted to the desired station. The adjustment screw below 1 is then adjusted for maximum amount of signal.

Number 1 on the adjustment screw (see Fig. 5) corresponds to Fig. 1 on the Roto-matic tuner. For stations 2, 3, etc., on the Roto-matic tuner, set the adjusting screws

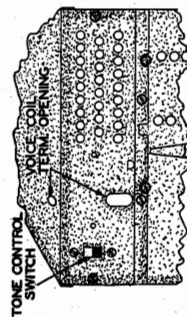


FIG. 6

If you have the type of output meter which is usually connected to the plate of the output tube, it may be adapted for this type of connection by following the instructions shown in Fig. 7.

ROTO-MATIC TUNING ADJUSTMENT:

The receiver should be turned on and allowed to warm up at least 30 minutes before the automatic tuning controls are adjusted.

It is essential that the adjusting screws be set on a weak signal in order to obtain accuracy and the maximum sensitivity. If 2 and 3, the same as for station 1.

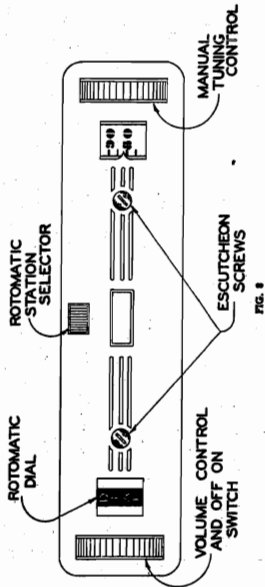


FIG. 8

IMPORTANT:

The above procedure should be repeated after the entire five stations are set. This is necessary to make sure that the adjustment screws are peaked for maximum performance.

If difficulty is experienced in setting up the adjusting screws for a desired station, first turn the bottom adjustment screw down tight and then adjust the top screw to the station and follow with an adjustment of the bottom screw for greatest volume.

R.F.:
 The tuning control is rotated until the condenser plates are completely out of mesh (1520 K.C.). Set the signal generator to 1520 K.C. Adjust the 1520 K.C. trimmer shown in Fig. 4 for maximum response.

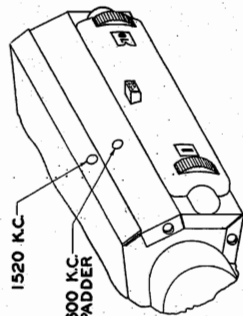


FIG. 4

Set the signal generator to 1400 K.C. Rotate the tuning control until the signal is heard and adjust the 1400 antenna trimmer (see Fig. 5), for maximum response.

Reset the signal generator to 800 K.C. and rotate the tuning control until a signal is heard. The condenser gang is then rocked slightly while adjusting the 800 K.C. podder (see Fig. 4) to maximum reading on the output meter.

The opening below the speaker on the front of the receiver is provided so that the output meter may be connected to the voice coil (see Fig. 6).

WHEN SHIPPED THE SCREWS ARE ADJUSTED TO 580 760 1000 1200 1500 THESE FREQUENCIES STATION SETTINGS

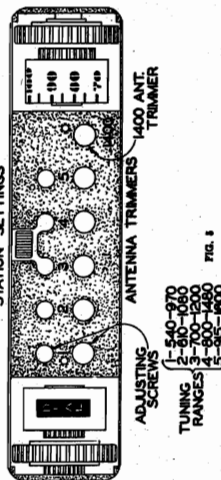


FIG. 1

CAUTION:
 Care should be taken while making all adjustments on the receiver to have the volume control turned full on. The intensity of the signal should be reduced only at the signal generator.

I.F.:

The tuning condenser is fully meshed (540 K.C.). The word "dial" must appear in the Roto-matic window. The signal generator is set at 455 K.C. and fed through the special Zenith antenna dummy to the receiver. The wave trap adjustment screw A, see Fig. 3A-3B, is adjusted for maximum response. The adjusting screws B, C, D and E are then adjusted in order for maximum response on the output meter. (See Fig. 3A-3B.)

The wave trap A is then adjusted for minimum response.

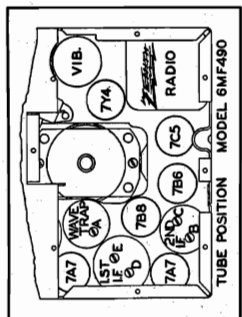


FIG. 3A

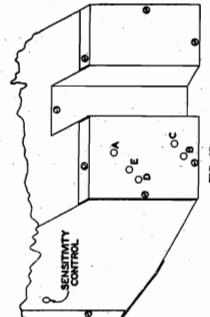


FIG. 3B

NOTE:
 This receiver is equipped with a fixed-variable sensitivity control located on the side of the chassis as shown in Fig. 3B. The control is set at the factory to a position which gives sensitivity of 7 microvolts at one watt output. It is found advisable to hold the receiver at this level as any higher sensitivity may result in motor noise or excessive background noise and unless laboratory equipment is available for measuring sensitivity, it is not advisable to change this setting.

MANUAL DIAL CALIBRATION:

If the frequency of a station does not correspond with the dial reading, it may be corrected by holding the tuning control securely and turning the dial drum with the forefinger until it reads correctly.

ALIGNMENT:

The signal for the entire alignment procedure, both I.F. and R.F., is fed through a special Zenith dummy. Part number S7832. The capacitors in the Zenith dummy antenna as shown in Fig. 2 are identical with the standard Ford antenna. If the Zenith dummy is not available at your Zenith distributor, you can substitute the values shown.

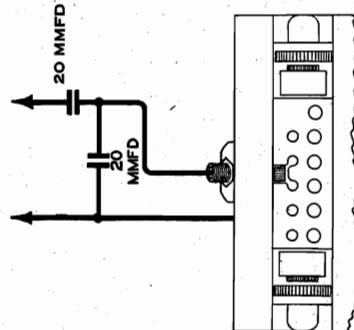


FIG. 2


MODEL 6MN496

Nash Deluxe AC4289

Chassis 5676

Schematic, Voltage, Socket Trimmers

ZENITH RADIO CORP.

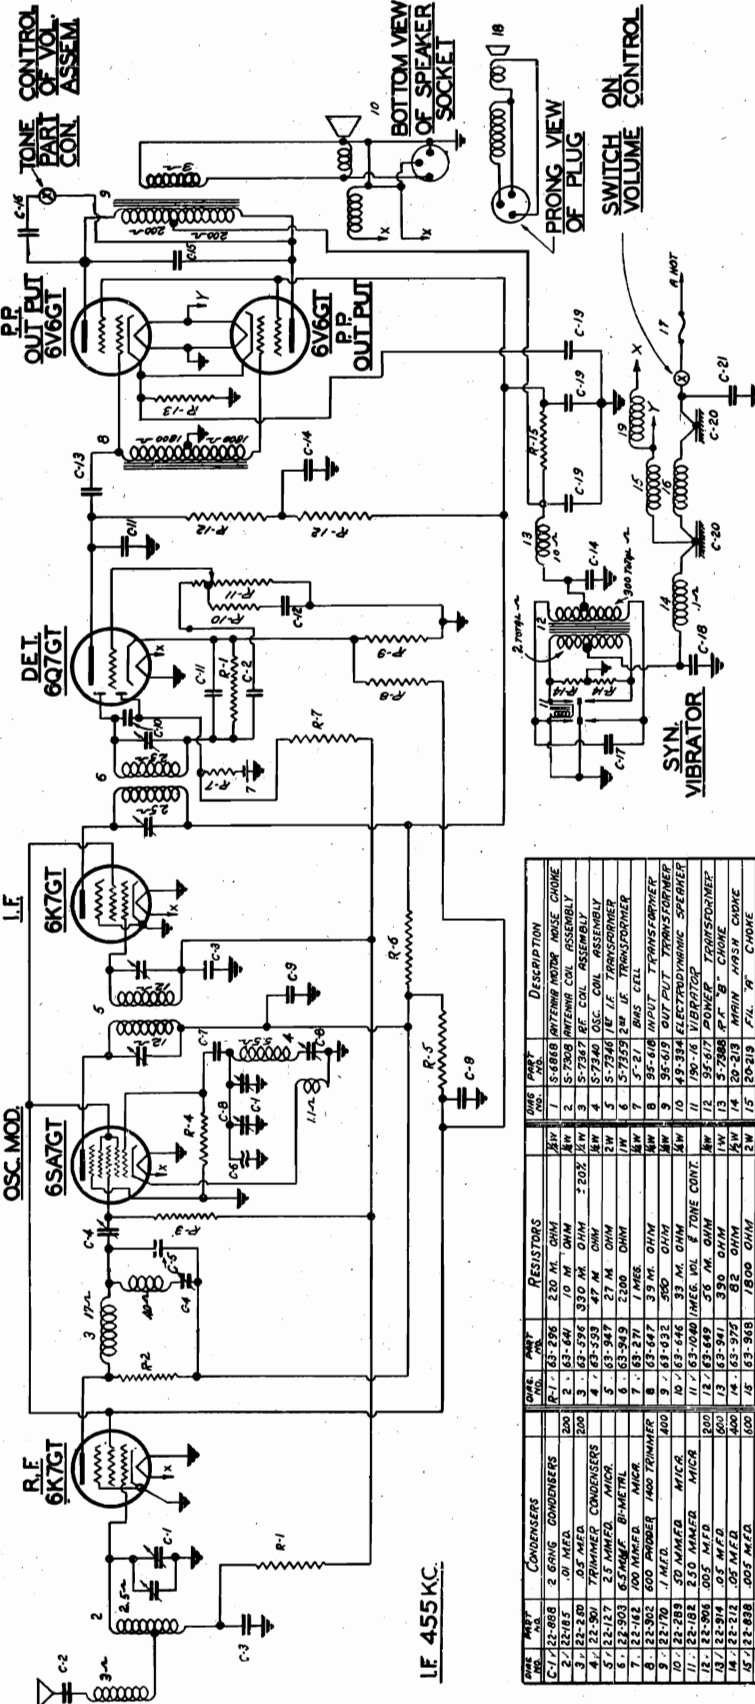

COMPONENT NO.	VALUE	DESCRIPTION
C-1	25 MFD	CONDENSER
C-2	25 MFD	CONDENSER
C-3	25 MFD	CONDENSER
C-4	25 MFD	CONDENSER
C-5	25 MFD	CONDENSER
C-6	25 MFD	CONDENSER
C-7	25 MFD	CONDENSER
C-8	25 MFD	CONDENSER
C-9	25 MFD	CONDENSER
C-10	25 MFD	CONDENSER
C-11	25 MFD	CONDENSER
C-12	25 MFD	CONDENSER
C-13	25 MFD	CONDENSER
C-14	25 MFD	CONDENSER
C-15	25 MFD	CONDENSER
C-16	25 MFD	CONDENSER
C-17	25 MFD	CONDENSER
C-18	25 MFD	CONDENSER
C-19	25 MFD	CONDENSER
C-20	25 MFD	CONDENSER
C-21	25 MFD	CONDENSER
R-1	100K	RESISTOR
R-2	100K	RESISTOR
R-3	100K	RESISTOR
R-4	100K	RESISTOR
R-5	100K	RESISTOR
R-6	100K	RESISTOR
R-7	100K	RESISTOR
R-8	100K	RESISTOR
R-9	100K	RESISTOR
R-10	100K	RESISTOR
R-11	100K	RESISTOR
R-12	100K	RESISTOR
R-13	100K	RESISTOR
R-14	100K	RESISTOR
R-15	100K	RESISTOR
R-16	100K	RESISTOR
R-17	100K	RESISTOR
R-18	100K	RESISTOR
R-19	100K	RESISTOR

Chassis 5676

NASH DELUXE AC.4289
ZENITH MODEL-6MN496



Tuning Range: 540 to 1580 K.C.

Sensitivity: 8 microvolts at 1 watt output

Power Output: 9 watts measured at the voice coil

Current Consumption: 8 amperes at 6 volts.



FOR OTHER DATA
SEE INDEX

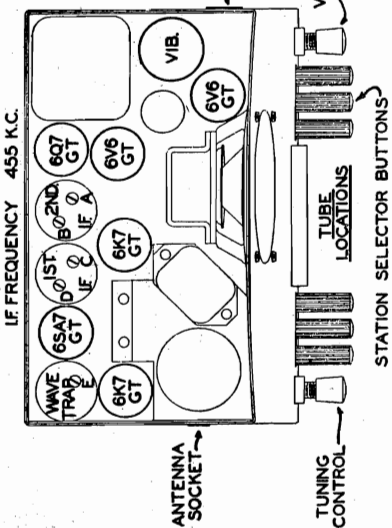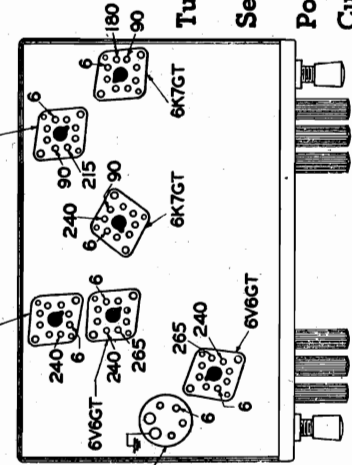

ANTENNA DISCONNECTED VOL
AT MIN BATTERY 6 VOLTS
MEASUREMENTS MADE FROM
CHASSIS TO POINT INDICATED
WITH 1000 OHM PER VOLT METER


ZENITH RADIO CORP.

MODELS 6S439, 6S469
 Chassis 5678
 Schematic, Voltage, Socket
 Trimmers

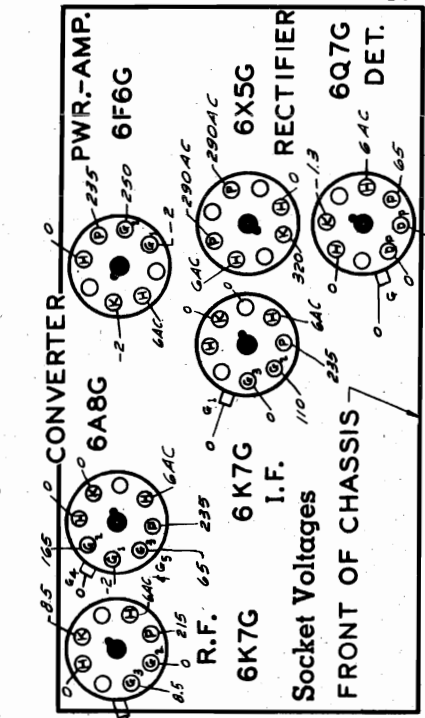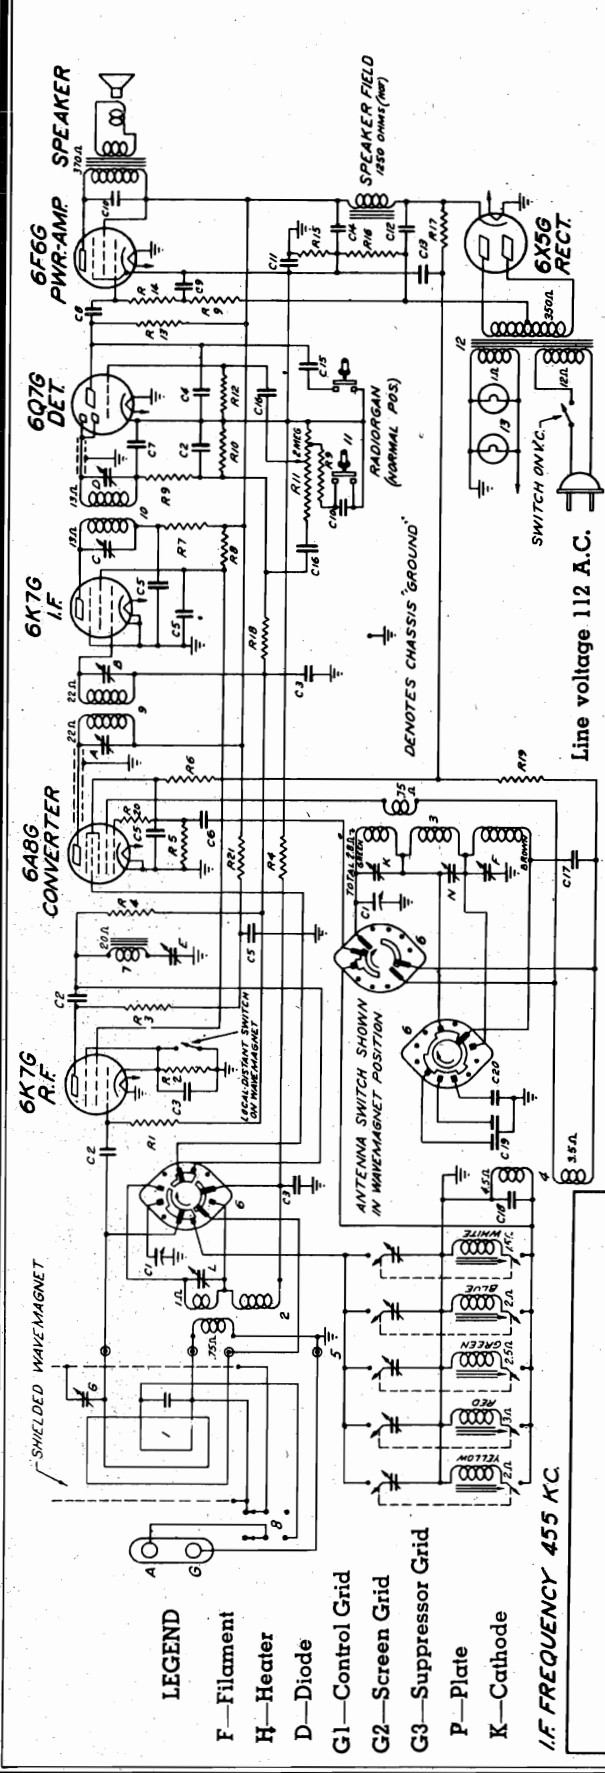

MODEL 6S439 6S469
 SPEAKER 49-364 6"
 49-344 10"

FOR OTHER DATA
 SEE INDEX

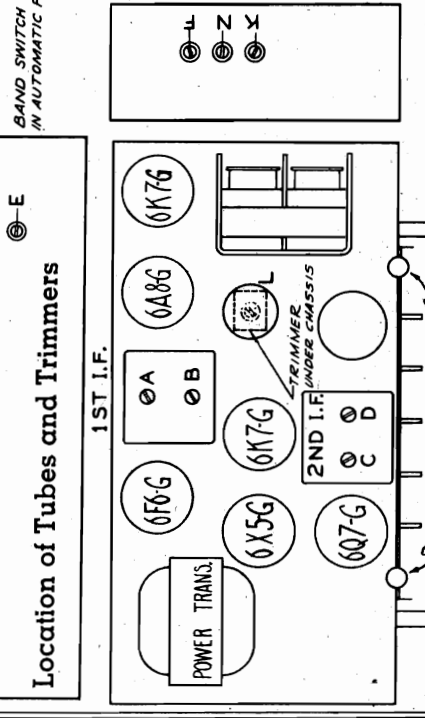

6 TUBE SUPERHETERODYNE
 CHASSIS No 5678 3BAND

NOTE

All voltages measured with a 1000 ohm per volt meter from unless marked otherwise. chassis to socket contact indicated.


Volume control full on.

PAR. NO.	DESCRIPTION	QMS. NO.	PART NO.	DESCRIPTION	QMS. NO.	PART NO.	DESCRIPTION
C1	22-800 2 GANG VARIABLE	6000					
C2	22-800 2 GANG VARIABLE	6000					
C3	22-800 2 GANG VARIABLE	6000					
C4	22-800 2 GANG VARIABLE	6000					
C5	22-800 2 GANG VARIABLE	6000					
C6	22-800 2 GANG VARIABLE	6000					
C7	22-800 2 GANG VARIABLE	6000					
C8	22-800 2 GANG VARIABLE	6000					
C9	22-800 2 GANG VARIABLE	6000					
C10	22-800 2 GANG VARIABLE	6000					
C11	22-800 2 GANG VARIABLE	6000					
C12	22-800 2 GANG VARIABLE	6000					
C13	22-800 2 GANG VARIABLE	6000					
C14	22-800 2 GANG VARIABLE	6000					
C15	22-800 2 GANG VARIABLE	6000					
C16	22-800 2 GANG VARIABLE	6000					
C17	22-800 2 GANG VARIABLE	6000					
C18	22-800 2 GANG VARIABLE	6000					
C19	22-800 2 GANG VARIABLE	6000					
R1	22-800 2 GANG VARIABLE	6000					
R2	22-800 2 GANG VARIABLE	6000					
R3	22-800 2 GANG VARIABLE	6000					
R4	22-800 2 GANG VARIABLE	6000					
R5	22-800 2 GANG VARIABLE	6000					
R6	22-800 2 GANG VARIABLE	6000					
R7	22-800 2 GANG VARIABLE	6000					
R8	22-800 2 GANG VARIABLE	6000					
R9	22-800 2 GANG VARIABLE	6000					
R10	22-800 2 GANG VARIABLE	6000					
R11	22-800 2 GANG VARIABLE	6000					
R12	22-800 2 GANG VARIABLE	6000					
R13	22-800 2 GANG VARIABLE	6000					
R14	22-800 2 GANG VARIABLE	6000					
R15	22-800 2 GANG VARIABLE	6000					
R16	22-800 2 GANG VARIABLE	6000					
R17	22-800 2 GANG VARIABLE	6000					
R18	22-800 2 GANG VARIABLE	6000					
R19	22-800 2 GANG VARIABLE	6000					
R20	22-800 2 GANG VARIABLE	6000					
R21	22-800 2 GANG VARIABLE	6000					
R22	22-800 2 GANG VARIABLE	6000					
R23	22-800 2 GANG VARIABLE	6000					
R24	22-800 2 GANG VARIABLE	6000					
R25	22-800 2 GANG VARIABLE	6000					
R26	22-800 2 GANG VARIABLE	6000					
R27	22-800 2 GANG VARIABLE	6000					
R28	22-800 2 GANG VARIABLE	6000					
R29	22-800 2 GANG VARIABLE	6000					
R30	22-800 2 GANG VARIABLE	6000					
R31	22-800 2 GANG VARIABLE	6000					
R32	22-800 2 GANG VARIABLE	6000					
R33	22-800 2 GANG VARIABLE	6000					
R34	22-800 2 GANG VARIABLE	6000					
R35	22-800 2 GANG VARIABLE	6000					
R36	22-800 2 GANG VARIABLE	6000					
R37	22-800 2 GANG VARIABLE	6000					
R38	22-800 2 GANG VARIABLE	6000					
R39	22-800 2 GANG VARIABLE	6000					
R40	22-800 2 GANG VARIABLE	6000					
R41	22-800 2 GANG VARIABLE	6000					
R42	22-800 2 GANG VARIABLE	6000					
R43	22-800 2 GANG VARIABLE	6000					
R44	22-800 2 GANG VARIABLE	6000					
R45	22-800 2 GANG VARIABLE	6000					
R46	22-800 2 GANG VARIABLE	6000					
R47	22-800 2 GANG VARIABLE	6000					
R48	22-800 2 GANG VARIABLE	6000					
R49	22-800 2 GANG VARIABLE	6000					
R50	22-800 2 GANG VARIABLE	6000					
R51	22-800 2 GANG VARIABLE	6000					
R52	22-800 2 GANG VARIABLE	6000					
R53	22-800 2 GANG VARIABLE	6000					
R54	22-800 2 GANG VARIABLE	6000					
R55	22-800 2 GANG VARIABLE	6000					
R56	22-800 2 GANG VARIABLE	6000					
R57	22-800 2 GANG VARIABLE	6000					
R58	22-800 2 GANG VARIABLE	6000					
R59	22-800 2 GANG VARIABLE	6000					
R60	22-800 2 GANG VARIABLE	6000					
R61	22-800 2 GANG VARIABLE	6000					
R62	22-800 2 GANG VARIABLE	6000					
R63	22-800 2 GANG VARIABLE	6000					
R64	22-800 2 GANG VARIABLE	6000					
R65	22-800 2 GANG VARIABLE	6000					
R66	22-800 2 GANG VARIABLE	6000					
R67	22-800 2 GANG VARIABLE	6000					
R68	22-800 2 GANG VARIABLE	6000					
R69	22-800 2 GANG VARIABLE	6000					
R70	22-800 2 GANG VARIABLE	6000					
R71	22-800 2 GANG VARIABLE	6000					
R72	22-800 2 GANG VARIABLE	6000					
R73	22-800 2 GANG VARIABLE	6000					
R74	22-800 2 GANG VARIABLE	6000					
R75	22-800 2 GANG VARIABLE	6000					
R76	22-800 2 GANG VARIABLE	6000					
R77	22-800 2 GANG VARIABLE	6000					
R78	22-800 2 GANG VARIABLE	6000					
R79	22-800 2 GANG VARIABLE	6000					
R80	22-800 2 GANG VARIABLE	6000					
R81	22-800 2 GANG VARIABLE	6000					
R82	22-800 2 GANG VARIABLE	6000					
R83	22-800 2 GANG VARIABLE	6000					
R84	22-800 2 GANG VARIABLE	6000					
R85	22-800 2 GANG VARIABLE	6000					
R86	22-800 2 GANG VARIABLE	6000					
R87	22-800 2 GANG VARIABLE	6000					
R88	22-800 2 GANG VARIABLE	6000					
R89	22-800 2 GANG VARIABLE	6000					
R90	22-800 2 GANG VARIABLE	6000					
R91	22-800 2 GANG VARIABLE	6000					
R92	22-800 2 GANG VARIABLE	6000					
R93	22-800 2 GANG VARIABLE	6000					
R94	22-800 2 GANG VARIABLE	6000					
R95	22-800 2 GANG VARIABLE	6000					
R96	22-800 2 GANG VARIABLE	6000					
R97	22-800 2 GANG VARIABLE	6000					
R98	22-800 2 GANG VARIABLE	6000					
R99	22-800 2 GANG VARIABLE	6000					
R100	22-800 2 GANG VARIABLE	6000					

MODELS 7S432, 7S433, 7S434
7S449, 7S450, 7S458 to 7S462
Chassis 5719
Schematic, Voltage, Socket

ZENITH RADIO CORP.

CHASSIS 5721
Voltage, Socket

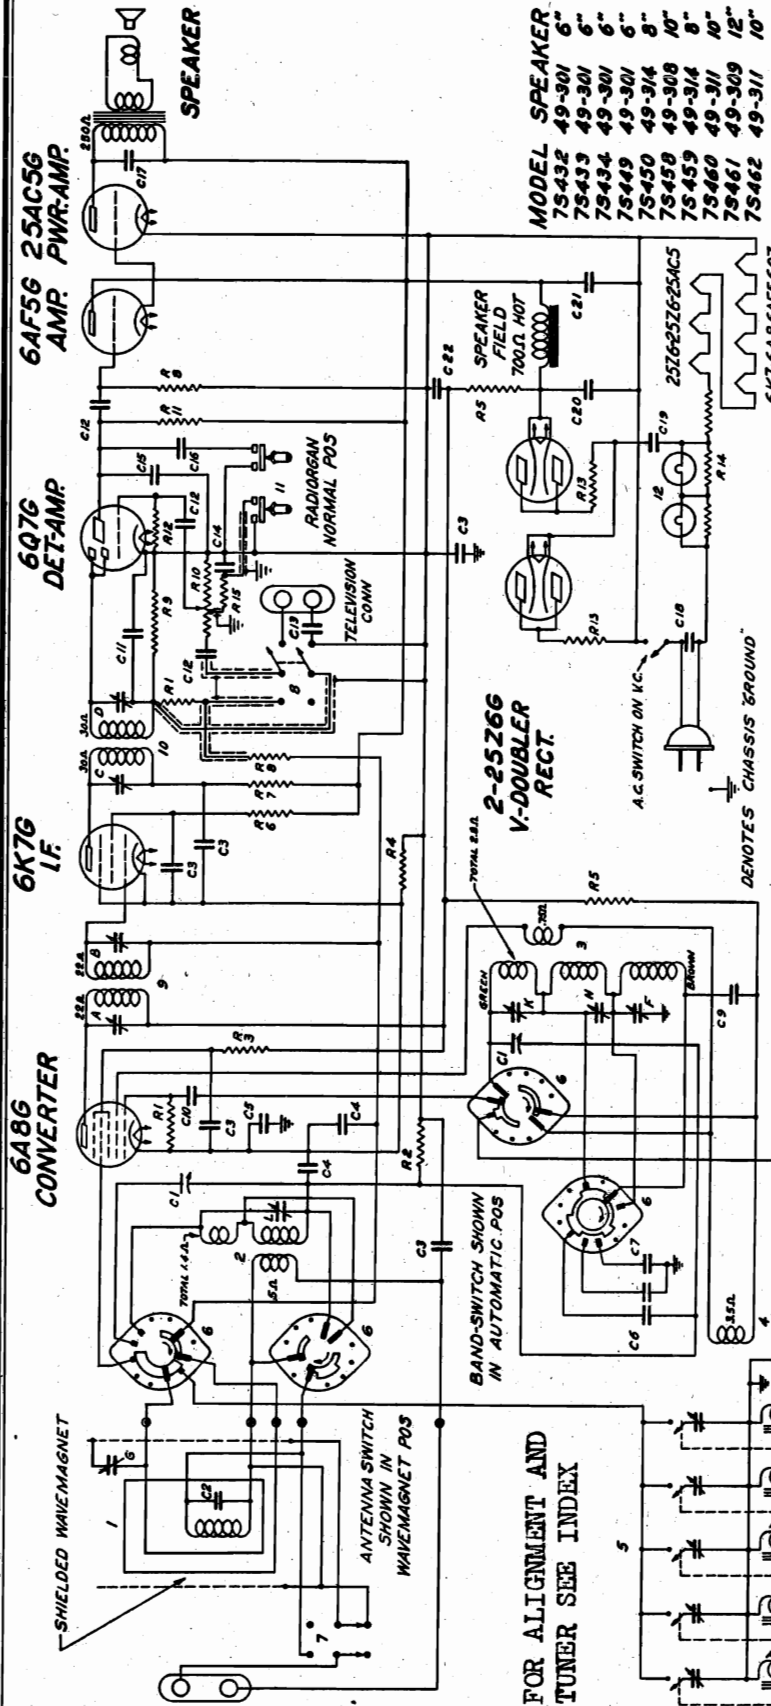

MODEL SPEAKER

7S432	49-301	6"
7S433	49-301	6"
7S434	49-301	6"
7S449	49-301	6"
7S450	49-308	10"
7S459	49-314	8"
7S460	49-311	10"
7S461	49-309	12"
7S462	49-311	10"


I.F. FREQUENCY 455 KC.

Voltages measured from line switch to point indicated using a 1000 ohm per volt meter. Vol. control at minimum. Antenna disconnected.

All filament voltages measured across each respective tube, using an A.C. volt-meter.

VOLTAGE DOUBLER AC.

CHASSIS N°5719

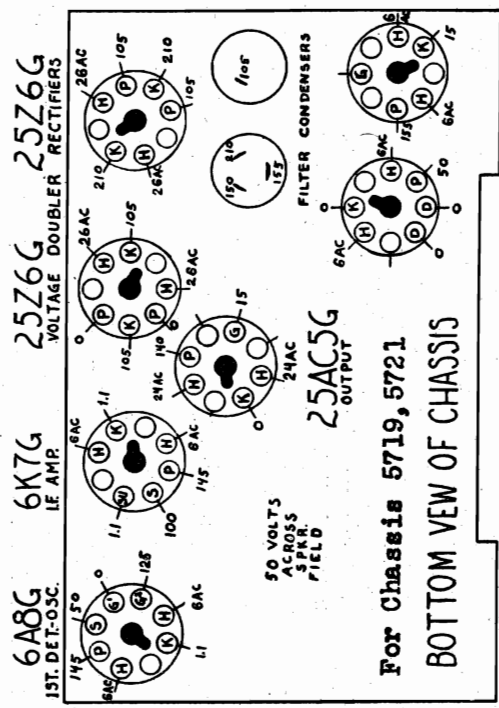

For Chassis 5719, 5721
BOTTOM VIEW OF CHASSIS

FRONT 6Q7G 6AF5G
2ND. DET. AVC 1ST. AUDIO OUTPUT


FOR ALIGNMENT AND TUNER SEE INDEX

C-1	22-849	TWO-GANG VAR	1/4 W
C-2	22-152	1000 PFD	1/4 W
C-3	22-850	100 PFD	1/4 W
C-4	63-1025	3-SECTION CHANDOM	1/4 W
C-5	22-853	15 MFD	1/4 W
C-6	22-863	OSC. PADDER	1/4 W
C-7	22-864	OSC. PADDER	1/4 W
C-8	22-865	COMPENSATING COND.	1/4 W
C-9	22-350	.002 MFD	1/4 W
C-10	22-489	50 MFD	1/4 W
C-11	22-489	50 MFD	1/4 W
C-12	22-156	10 MFD	1/4 W
C-13	22-327	0.05 MFD	1/4 W
C-14	22-327	0.05 MFD	1/4 W
C-15	22-954	0.005 MFD	1/4 W
C-16	22-940	.004 MFD	1/4 W
C-17	22-940	.004 MFD	1/4 W
C-18	22-872	1 MFD	1/4 W
C-19	22-852	10 MFD ELECTROLYTIC	1/4 W
C-20	22-852	10 MFD ELECTROLYTIC	1/4 W
C-21	22-851	10 MFD	1/4 W
C-22	22-851	10 MFD	1/4 W
C-23	22-851	10 MFD	1/4 W
C-24	22-851	10 MFD	1/4 W
C-25	22-851	10 MFD	1/4 W
C-26	22-851	10 MFD	1/4 W
C-27	22-851	10 MFD	1/4 W
C-28	22-851	10 MFD	1/4 W
C-29	22-851	10 MFD	1/4 W
C-30	22-851	10 MFD	1/4 W
C-31	22-851	10 MFD	1/4 W
C-32	22-851	10 MFD	1/4 W
C-33	22-851	10 MFD	1/4 W
C-34	22-851	10 MFD	1/4 W
C-35	22-851	10 MFD	1/4 W
C-36	22-851	10 MFD	1/4 W
C-37	22-851	10 MFD	1/4 W
C-38	22-851	10 MFD	1/4 W
C-39	22-851	10 MFD	1/4 W
C-40	22-851	10 MFD	1/4 W
C-41	22-851	10 MFD	1/4 W
C-42	22-851	10 MFD	1/4 W
C-43	22-851	10 MFD	1/4 W
C-44	22-851	10 MFD	1/4 W
C-45	22-851	10 MFD	1/4 W
C-46	22-851	10 MFD	1/4 W
C-47	22-851	10 MFD	1/4 W
C-48	22-851	10 MFD	1/4 W
C-49	22-851	10 MFD	1/4 W
C-50	22-851	10 MFD	1/4 W
C-51	22-851	10 MFD	1/4 W
C-52	22-851	10 MFD	1/4 W
C-53	22-851	10 MFD	1/4 W
C-54	22-851	10 MFD	1/4 W
C-55	22-851	10 MFD	1/4 W
C-56	22-851	10 MFD	1/4 W
C-57	22-851	10 MFD	1/4 W
C-58	22-851	10 MFD	1/4 W
C-59	22-851	10 MFD	1/4 W
C-60	22-851	10 MFD	1/4 W
C-61	22-851	10 MFD	1/4 W
C-62	22-851	10 MFD	1/4 W
C-63	22-851	10 MFD	1/4 W
C-64	22-851	10 MFD	1/4 W
C-65	22-851	10 MFD	1/4 W
C-66	22-851	10 MFD	1/4 W
C-67	22-851	10 MFD	1/4 W
C-68	22-851	10 MFD	1/4 W
C-69	22-851	10 MFD	1/4 W
C-70	22-851	10 MFD	1/4 W
C-71	22-851	10 MFD	1/4 W
C-72	22-851	10 MFD	1/4 W
C-73	22-851	10 MFD	1/4 W
C-74	22-851	10 MFD	1/4 W
C-75	22-851	10 MFD	1/4 W
C-76	22-851	10 MFD	1/4 W
C-77	22-851	10 MFD	1/4 W
C-78	22-851	10 MFD	1/4 W
C-79	22-851	10 MFD	1/4 W
C-80	22-851	10 MFD	1/4 W
C-81	22-851	10 MFD	1/4 W
C-82	22-851	10 MFD	1/4 W
C-83	22-851	10 MFD	1/4 W
C-84	22-851	10 MFD	1/4 W
C-85	22-851	10 MFD	1/4 W
C-86	22-851	10 MFD	1/4 W
C-87	22-851	10 MFD	1/4 W
C-88	22-851	10 MFD	1/4 W
C-89	22-851	10 MFD	1/4 W
C-90	22-851	10 MFD	1/4 W
C-91	22-851	10 MFD	1/4 W
C-92	22-851	10 MFD	1/4 W
C-93	22-851	10 MFD	1/4 W
C-94	22-851	10 MFD	1/4 W
C-95	22-851	10 MFD	1/4 W
C-96	22-851	10 MFD	1/4 W
C-97	22-851	10 MFD	1/4 W
C-98	22-851	10 MFD	1/4 W
C-99	22-851	10 MFD	1/4 W
C-100	22-851	10 MFD	1/4 W
C-101	22-851	10 MFD	1/4 W
C-102	22-851	10 MFD	1/4 W
C-103	22-851	10 MFD	1/4 W
C-104	22-851	10 MFD	1/4 W
C-105	22-851	10 MFD	1/4 W
C-106	22-851	10 MFD	1/4 W
C-107	22-851	10 MFD	1/4 W
C-108	22-851	10 MFD	1/4 W
C-109	22-851	10 MFD	1/4 W
C-110	22-851	10 MFD	1/4 W
C-111	22-851	10 MFD	1/4 W
C-112	22-851	10 MFD	1/4 W
C-113	22-851	10 MFD	1/4 W
C-114	22-851	10 MFD	1/4 W
C-115	22-851	10 MFD	1/4 W
C-116	22-851	10 MFD	1/4 W
C-117	22-851	10 MFD	1/4 W
C-118	22-851	10 MFD	1/4 W
C-119	22-851	10 MFD	1/4 W
C-120	22-851	10 MFD	1/4 W
C-121	22-851	10 MFD	1/4 W
C-122	22-851	10 MFD	1/4 W
C-123	22-851	10 MFD	1/4 W
C-124	22-851	10 MFD	1/4 W
C-125	22-851	10 MFD	1/4 W
C-126	22-851	10 MFD	1/4 W
C-127	22-851	10 MFD	1/4 W
C-128	22-851	10 MFD	1/4 W
C-129	22-851	10 MFD	1/4 W
C-130	22-851	10 MFD	1/4 W
C-131	22-851	10 MFD	1/4 W
C-132	22-851	10 MFD	1/4 W
C-133	22-851	10 MFD	1/4 W
C-134	22-851	10 MFD	1/4 W
C-135	22-851	10 MFD	1/4 W
C-136	22-851	10 MFD	1/4 W
C-137	22-851	10 MFD	1/4 W
C-138	22-851	10 MFD	1/4 W
C-139	22-851	10 MFD	1/4 W
C-140	22-851	10 MFD	1/4 W
C-141	22-851	10 MFD	1/4 W
C-142	22-851	10 MFD	1/4 W
C-143	22-851	10 MFD	1/4 W
C-144	22-851	10 MFD	1/4 W
C-145	22-851	10 MFD	1/4 W
C-146	22-851	10 MFD	1/4 W
C-147	22-851	10 MFD	1/4 W
C-148	22-851	10 MFD	1/4 W
C-149	22-851	10 MFD	1/4 W
C-150	22-851	10 MFD	1/4 W
C-151	22-851	10 MFD	1/4 W
C-152	22-851	10 MFD	1/4 W
C-153	22-851	10 MFD	1/4 W
C-154	22-851	10 MFD	1/4 W
C-155	22-851	10 MFD	1/4 W
C-156	22-851	10 MFD	1/4 W
C-157	22-851	10 MFD	1/4 W
C-158	22-851	10 MFD	1/4 W
C-159	22-851	10 MFD	1/4 W
C-160	22-851	10 MFD	1/4 W
C-161	22-851	10 MFD	1/4 W
C-162	22-851	10 MFD	1/4 W
C-163	22-851	10 MFD	1/4 W
C-164	22-851	10 MFD	1/4 W
C-165	22-851	10 MFD	1/4 W
C-166	22-851	10 MFD	1/4 W
C-167	22-851	10 MFD	1/4 W
C-168	22-851	10 MFD	1/4 W
C-169	22-851	10 MFD	1/4 W
C-170	22-851	10 MFD	1/4 W
C-171	22-851	10 MFD	1/4 W
C-172	22-851	10 MFD	1/4 W
C-173	22-851	10 MFD	1/4 W
C-174	22-851	10 MFD	1/4 W
C-175	22-851	10 MFD	1/4 W
C-176	22-851	10 MFD	1/4 W
C-177	22-851	10 MFD	1/4 W
C-178	22-851	10 MFD	1/4 W
C-179	22-851	10 MFD	1/4 W
C-180	22-851	10 MFD	1/4 W
C-181	22-851	10 MFD	1/4 W
C-182	22-851	10 MFD	1/4 W
C-183	22-851	10 MFD	1/4 W
C-184	22-851	10 MFD	1/4 W
C-185	22-851	10 MFD	1/4 W
C-186	22-851	10 MFD	1/4 W
C-187	22-851	10 MFD	1/4 W
C-188	22-851	10 MFD	1/4 W
C-189	22-851	10 MFD	1/4 W
C-190	22-851	10 MFD	1/4 W
C-191	22-851	10 MFD	1/4 W
C-192	22-851	10 MFD	1/4 W
C-193	22-851	10 MFD	1/4 W
C-194	22-851	10 MFD	1/4 W
C-195	22-851	10 MFD	1/4 W
C-196	22-851	10 MFD	1/4 W
C-197	22-851	10 MFD	1/4 W
C-198	22-851	10 MFD	1/4 W
C-199	22-851	10 MFD	1/4 W
C-200	22-851	10 MFD	1/4 W

CHASSIS 5678 Alignment
 CHASSIS 5725 Alignment
 Trimmers

ZENITH RADIO CORP.

MODELS 7S432, 7S433, 7S434, 7S449
 7S450, 7S458 to 7S462
 Chassis 5724
 Schematic, Alignment, Socket
 Trimmers

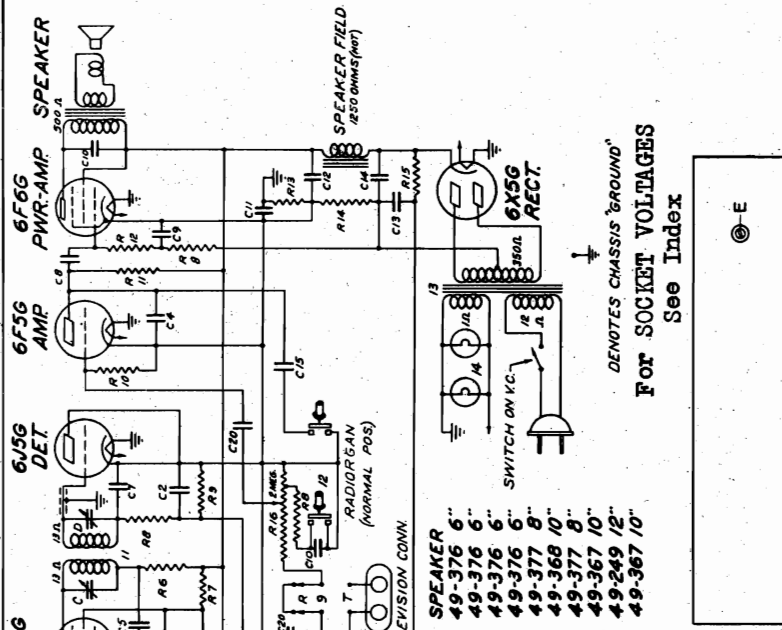

FOR TUNER SEE INDEX

MODEL	SPEAKER
7S432	49-376 6"
7S433	49-376 6"
7S434	49-376 6"
7S449	49-377 8"
7S450	49-368 10"
7S458	49-377 8"
7S459	49-367 10"
7S460	49-249 12"
7S461	49-367 10"

- 1 6838 ANTENNA COIL ASSEMBLY
 2 6837 OSCILLATOR COIL ASSEMBLY
 3 6836 I.F. TRANSFORMER
 4 6835 AUTOMATIC TUNING ASSEMBLY
 5 6834 BAND SELECTOR SWITCH
 6 6833 WAVE TRAP
 7 6832 WAVE BAND CONTROL SWITCH
 8 6831 TELEVISION SWITCH
 9 6830 2ND I.F. TRANSFORMER
 10 6829 1ST I.F. TRANSFORMER
 11 6828 TONE CONTROL SW. ASSEMBLY
 12 6827 POWER TRANS. 60V. 1.5A.
 13 6826 PILOT LIGHT 6.3V. 30W.

SELF TRANS. SEC.
 E.I.F. SEC.
 E.I.F. SEC.
 WAVE TRAP
 BANDCAST OSC. (SEE NOTE)
 SHOWN IN POSITION
 SHORT WAVE DET.
 POLICE BAND OSC. (-)

ANTENNA SWITCH SHOWN
 IN WAVE MAGNET POSITION

BAND SWITCH SHOWN
 IN AUTOMATIC POSITION

TELEVISION CONV.

RADIO GAN (NORMAL POS.)

SWITCH ON K.C.


RECT.

6X5G

6J5G

6F5G

6F6G

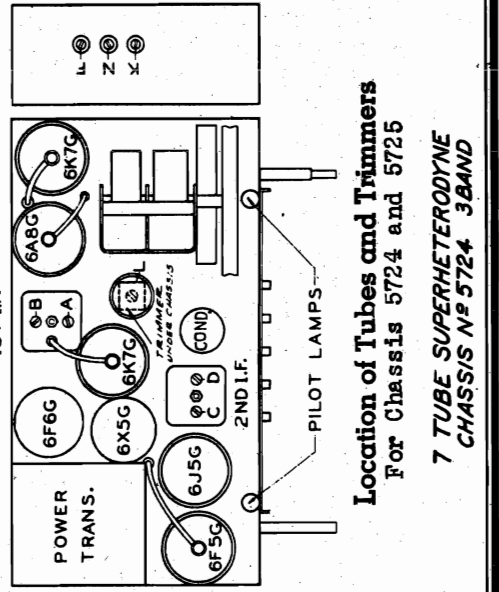


Location of Tubes and Trimmers
 For Chassis 5724 and 5725
 7 TUBE SUPERHETERODYNE
 CHASSIS No 5724 3BAND

ALIGNMENT PROCEDURE
 For Chassis 5678, 5724 and 5725

Operation	Connect Test Oscillator to	Dummy Antenna	Input Signal Frequency	Band	Set Dial At	Adjust Trimmers	Purpose
1	6A8 Grid	1/2 Mfd.	455 Kc.	Broadcast	600 Kc.	A, B, C, D	I. F. Alignment
2	R. F.	1/2 Mfd.	455 Kc.	Broadcast	600 Kc.	J	Adjust Wavetrap for Minimum
3	Antenna Post (On Loop)	400 Ohms	18000 Kc.	S. W.	18000 Kc.	F	Set Oscillator to Scale
4	Antenna Post (On Loop)	400 Ohms	16000 Kc.	S. W.	16000 Kc.	L	Rock Gang and Adjust for Max.
5	Antenna Post (On Loop)	400 Ohms	4500 Kc.	Police	4500 Kc.	G	Rock Gang and Adjust for Max.
6	Generator Loosely Coupled to Loop		1500 Kc.	Broadcast	1500 Kc.	H	Set Oscillator to Scale
7	Thru One or Two Turns		1400 Kc.	Broadcast	1400 Kc.	K	Alignment of Antenna

MODELS 7S487, 7S488, 7S490
 Chassis 5721
 Schematic

ZENITH RADIO CORP.

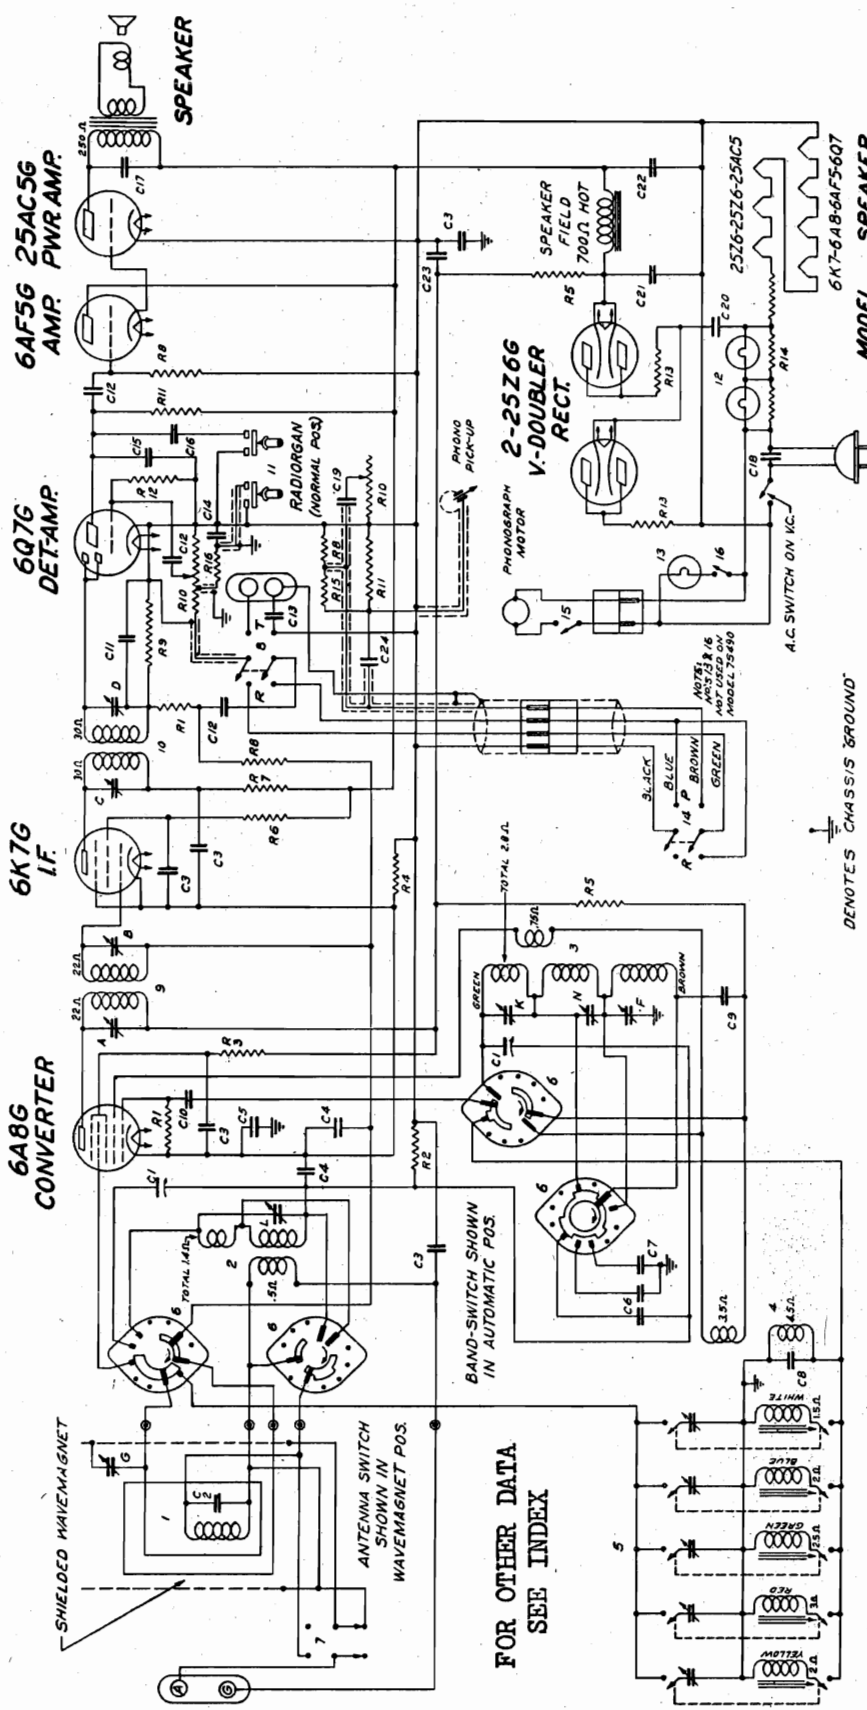


6A8G CONVERTER
 6Q7G DET-AMP
 6AF5G 25AC5G AMP PWR AMP
 7 TUBE SUPERHETERODYNE CHASSIS NO 5721 3 BAND VOLTAGE DOUBLER AC.
 I.F. FREQUENCY 455KC
 25Z6-25Z6-25AC5
 6K7-6A8-6AF5-6Q7
 MODEL 7S487 49-312 10"
 7S488 49-309 12"
 7S490 49-314 8"

FOR OTHER DATA SEE INDEX

DIAG. PART NO.	DESCRIPTION	DIAG. PART NO.	DESCRIPTION	DIAG. PART NO.	DESCRIPTION	DIAG. PART NO.	DESCRIPTION
C1	TWO GANG VARIABLE	R15	350V	1	30 MFD ELECTROLYTIC	1	30 MFD ELECTROLYTIC
C2	500K	R16	10 MFD	2	10 MFD	2	10 MFD
C3	200K	R17	10 MFD	3	10 MFD	3	10 MFD
C4	22-829 .05 MFD	R18	250K	4	150 M MFD	4	150 M MFD
C5	22-334 .15 MFD	R19	600K	5	47M OHM	5	47M OHM
C6	22-863 OSCILLATOR PADDER	R20	600K	6	50 M OHM	6	50 M OHM
C7	22-866 OSCILLATOR PADDER	R21	600K	7	68 OHM WIREWOUND	7	68 OHM WIREWOUND
C8	22-334 .15 MFD	R22	600K	8	10M OHM	8	10M OHM
C9	22-334 .15 MFD	R23	600K	9	22 M OHM	9	22 M OHM
C10	22-289 .02 MFD	R24	600K	10	1000 OHM	10	1000 OHM
C11	22-162 50 M MFD	R25	600K	11	100 OHM	11	100 OHM
C12	22-162 50 M MFD	R26	600K	12	100 OHM	12	100 OHM
C13	22-296 .01 MFD	R27	600K	13	220 M OHM	13	220 M OHM
C14	22-296 .01 MFD	R28	600K	14	220 M OHM	14	220 M OHM
C15	22-418 .005 MFD	R29	600K	15	220 M OHM	15	220 M OHM
C16	22-418 .005 MFD	R30	600K	16	220 M OHM	16	220 M OHM
C17	22-659 .01 MFD	R31	600K	17	220 M OHM	17	220 M OHM
C18	22-670 .1 MFD	R32	600K	18	220 M OHM	18	220 M OHM
C19	22-382 .03 MFD	R33	600K	19	220 M OHM	19	220 M OHM
C20	22-382 .03 MFD	R34	600K	20	220 M OHM	20	220 M OHM
C21	600K	R35	600K	21	220 M OHM	21	220 M OHM
C22	200K	R36	600K	22	220 M OHM	22	220 M OHM
C23	200K	R37	600K	23	220 M OHM	23	220 M OHM
C24	200K	R38	600K	24	220 M OHM	24	220 M OHM
R1	600K	R39	600K	25	220 M OHM	25	220 M OHM
R2	600K	R40	600K	26	220 M OHM	26	220 M OHM
R3	600K	R41	600K	27	220 M OHM	27	220 M OHM
R4	600K	R42	600K	28	220 M OHM	28	220 M OHM
R5	600K	R43	600K	29	220 M OHM	29	220 M OHM
R6	600K	R44	600K	30	220 M OHM	30	220 M OHM
R7	600K	R45	600K	31	220 M OHM	31	220 M OHM
R8	600K	R46	600K	32	220 M OHM	32	220 M OHM
R9	600K	R47	600K	33	220 M OHM	33	220 M OHM
R10	600K	R48	600K	34	220 M OHM	34	220 M OHM
R11	600K	R49	600K	35	220 M OHM	35	220 M OHM
R12	600K	R50	600K	36	220 M OHM	36	220 M OHM
R13	600K	R51	600K	37	220 M OHM	37	220 M OHM
R14	600K	R52	600K	38	220 M OHM	38	220 M OHM
R15	600K	R53	600K	39	220 M OHM	39	220 M OHM
R16	600K	R54	600K	40	220 M OHM	40	220 M OHM
R17	600K	R55	600K	41	220 M OHM	41	220 M OHM
R18	600K	R56	600K	42	220 M OHM	42	220 M OHM
R19	600K	R57	600K	43	220 M OHM	43	220 M OHM
R20	600K	R58	600K	44	220 M OHM	44	220 M OHM
R21	600K	R59	600K	45	220 M OHM	45	220 M OHM
R22	600K	R60	600K	46	220 M OHM	46	220 M OHM
R23	600K	R61	600K	47	220 M OHM	47	220 M OHM
R24	600K	R62	600K	48	220 M OHM	48	220 M OHM
R25	600K	R63	600K	49	220 M OHM	49	220 M OHM
R26	600K	R64	600K	50	220 M OHM	50	220 M OHM
R27	600K	R65	600K	51	220 M OHM	51	220 M OHM
R28	600K	R66	600K	52	220 M OHM	52	220 M OHM
R29	600K	R67	600K	53	220 M OHM	53	220 M OHM
R30	600K	R68	600K	54	220 M OHM	54	220 M OHM
R31	600K	R69	600K	55	220 M OHM	55	220 M OHM
R32	600K	R70	600K	56	220 M OHM	56	220 M OHM
R33	600K	R71	600K	57	220 M OHM	57	220 M OHM
R34	600K	R72	600K	58	220 M OHM	58	220 M OHM
R35	600K	R73	600K	59	220 M OHM	59	220 M OHM
R36	600K	R74	600K	60	220 M OHM	60	220 M OHM
R37	600K	R75	600K	61	220 M OHM	61	220 M OHM
R38	600K	R76	600K	62	220 M OHM	62	220 M OHM
R39	600K	R77	600K	63	220 M OHM	63	220 M OHM
R40	600K	R78	600K	64	220 M OHM	64	220 M OHM
R41	600K	R79	600K	65	220 M OHM	65	220 M OHM
R42	600K	R80	600K	66	220 M OHM	66	220 M OHM
R43	600K	R81	600K	67	220 M OHM	67	220 M OHM
R44	600K	R82	600K	68	220 M OHM	68	220 M OHM
R45	600K	R83	600K	69	220 M OHM	69	220 M OHM
R46	600K	R84	600K	70	220 M OHM	70	220 M OHM
R47	600K	R85	600K	71	220 M OHM	71	220 M OHM
R48	600K	R86	600K	72	220 M OHM	72	220 M OHM
R49	600K	R87	600K	73	220 M OHM	73	220 M OHM
R50	600K	R88	600K	74	220 M OHM	74	220 M OHM
R51	600K	R89	600K	75	220 M OHM	75	220 M OHM
R52	600K	R90	600K	76	220 M OHM	76	220 M OHM
R53	600K	R91	600K	77	220 M OHM	77	220 M OHM
R54	600K	R92	600K	78	220 M OHM	78	220 M OHM
R55	600K	R93	600K	79	220 M OHM	79	220 M OHM
R56	600K	R94	600K	80	220 M OHM	80	220 M OHM
R57	600K	R95	600K	81	220 M OHM	81	220 M OHM
R58	600K	R96	600K	82	220 M OHM	82	220 M OHM
R59	600K	R97	600K	83	220 M OHM	83	220 M OHM
R60	600K	R98	600K	84	220 M OHM	84	220 M OHM
R61	600K	R99	600K	85	220 M OHM	85	220 M OHM
R62	600K	R100	600K	86	220 M OHM	86	220 M OHM
R63	600K	R101	600K	87	220 M OHM	87	220 M OHM
R64	600K	R102	600K	88	220 M OHM	88	220 M OHM
R65	600K	R103	600K	89	220 M OHM	89	220 M OHM
R66	600K	R104	600K	90	220 M OHM	90	220 M OHM
R67	600K	R105	600K	91	220 M OHM	91	220 M OHM
R68	600K	R106	600K	92	220 M OHM	92	220 M OHM
R69	600K	R107	600K	93	220 M OHM	93	220 M OHM
R70	600K	R108	600K	94	220 M OHM	94	220 M OHM
R71	600K	R109	600K	95	220 M OHM	95	220 M OHM
R72	600K	R110	600K	96	220 M OHM	96	220 M OHM
R73	600K	R111	600K	97	220 M OHM	97	220 M OHM
R74	600K	R112	600K	98	220 M OHM	98	220 M OHM
R75	600K	R113	600K	99	220 M OHM	99	220 M OHM
R76	600K	R114	600K	100	220 M OHM	100	220 M OHM
R77	600K	R115	600K	101	220 M OHM	101	220 M OHM
R78	600K	R116	600K	102	220 M OHM	102	220 M OHM
R79	600K	R117	600K	103	220 M OHM	103	220 M OHM
R80	600K	R118	600K	104	220 M OHM	104	220 M OHM
R81	600K	R119	600K	105	220 M OHM	105	220 M OHM
R82	600K	R120	600K	106	220 M OHM	106	220 M OHM
R83	600K	R121	600K	107	220 M OHM	107	220 M OHM
R84	600K	R122	600K	108	220 M OHM	108	220 M OHM
R85	600K	R123	600K	109	220 M OHM	109	220 M OHM
R86	600K	R124	600K	110	220 M OHM	110	220 M OHM
R87	600K	R125	600K	111	220 M OHM	111	220 M OHM
R88	600K	R126	600K	112	220 M OHM	112	220 M OHM
R89	600K	R127	600K	113	220 M OHM	113	220 M OHM
R90	600K	R128	600K	114	220 M OHM	114	220 M OHM
R91	600K	R129	600K	115	220 M OHM	115	220 M OHM
R92	600K	R130	600K	116	220 M OHM	116	220 M OHM
R93	600K	R131	600K	117	220 M OHM	117	220 M OHM
R94	600K	R132	600K	118	220 M OHM	118	220 M OHM
R95	600K	R133	600K	119	220 M OHM	119	220 M OHM
R96	600K	R134	600K	120	220 M OHM	120	220 M OHM
R97	600K	R135	600K	121	220 M OHM	121	220 M OHM
R98	600K	R136	600K	122	220 M OHM	122	220 M OHM
R99	600K	R137	600K	123	220 M OHM	123	220 M OHM
R100	600K	R138	600K	124	220 M OHM	124	220 M OHM
R101	600K	R139	600K	125	220 M OHM	125	220 M OHM
R102	600K	R140	600K	126	220 M OHM	126	220 M OHM
R103	600K	R141	600K	127	220 M OHM	127	220 M OHM
R104	600K	R142	600K	128	220 M OHM	128	220 M OHM
R105	600K	R143	600K	129	220 M OHM	129	220 M OHM
R106	600K	R144	600K	130	220 M OHM	130	220 M OHM
R107	600K	R145	600K	131	220 M OHM	131	220 M OHM
R108	600K	R146	600K	132	220 M OHM	132	220 M OHM
R109	600K	R147	600K	133	220 M OHM	133	220 M OHM
R110	600K	R148	600K	134	220 M OHM	134	220 M OHM
R111	600K	R149	600K	135	220 M OHM	135	220 M OHM
R112	600K	R150	600K	136	220 M OHM	136	220 M OHM
R113	600K	R151	600K	137	220 M OHM	137	220 M OHM
R114	600K	R152	600K	138	220 M OHM	138	220 M OHM
R115	600K	R153	600K	139	220 M OHM	13	

ZENITH RADIO CORP.


MODELS 7S487, 7S488, 7S490
 Chassis 5725
 Schematic, Voltage, Socket
 CHASSIS 5724
 Voltage

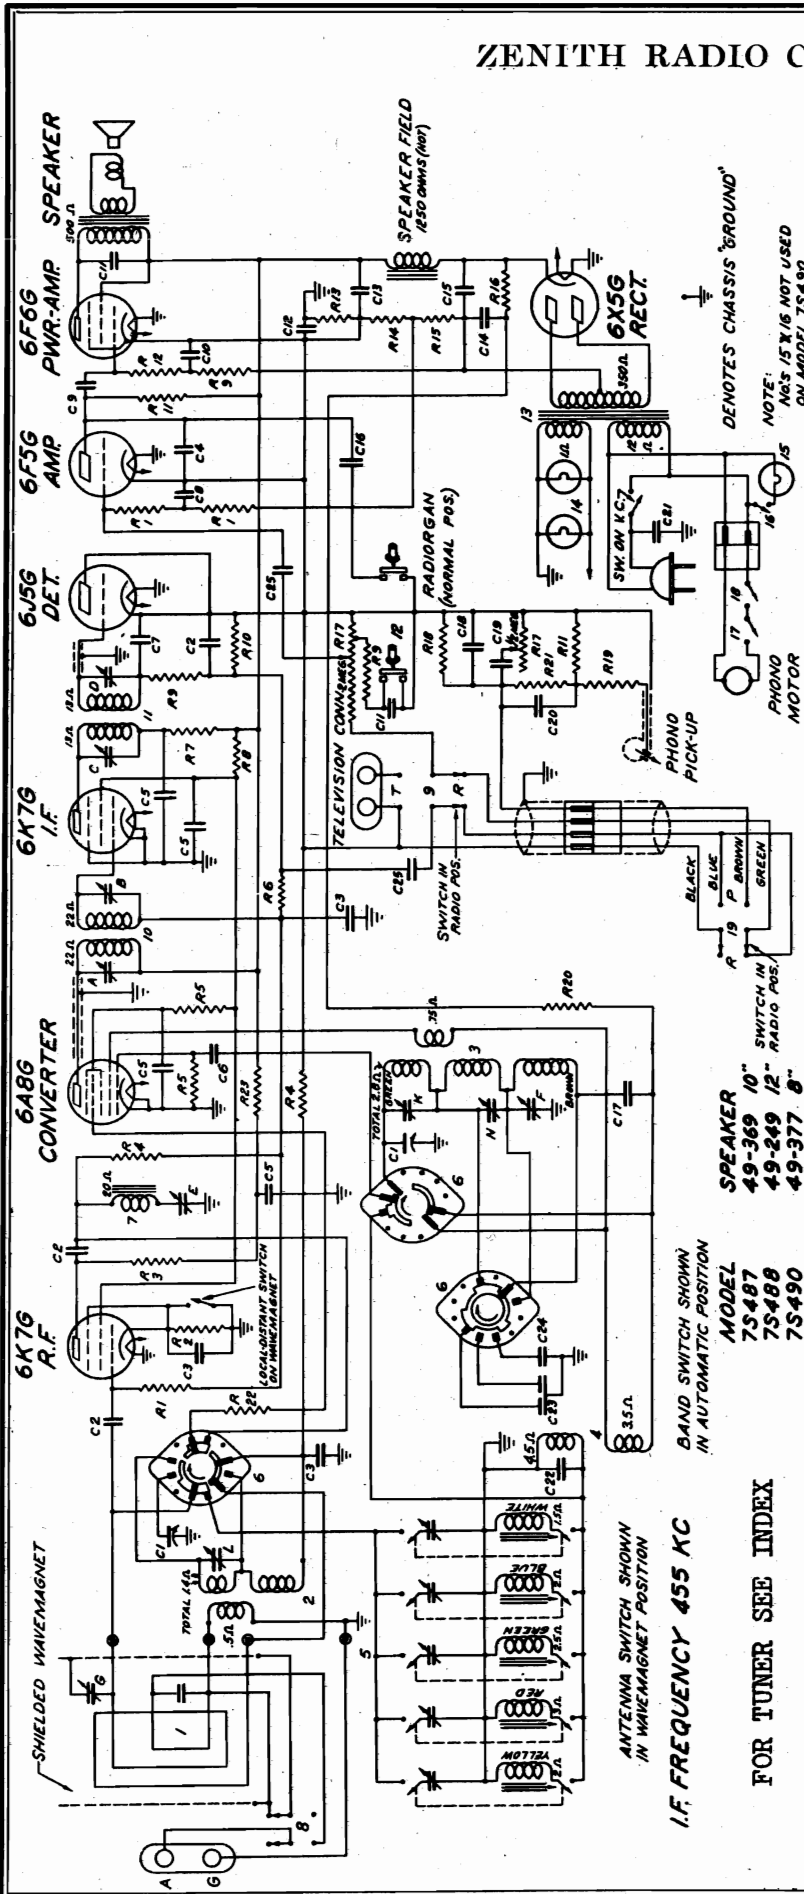

- NOTE: DENOTES CHASSIS 'GROUND'
- NOTE: N.G.S. IS X16 NOT USED ON MODEL 7S490
- | | |
|----|--|
| 1 | WAVELENGTH ASSEMBLY |
| 2 | OSCILLATOR ASSEMBLY |
| 3 | OSC. COUPLER COIL ASSEM. |
| 4 | 58992 OSC. AUTOMATIC TUNING ASSEM. |
| 5 | 57044 AUTOMATIC TUNING ASSEM. |
| 6 | 85-203 BAND SELECTOR SWITCH |
| 7 | 85-201 WAVELENGTH CONTROL SWITCH |
| 8 | 85-202 WAVELENGTH CONTROL SWITCH |
| 9 | 85-171 TELEVISION SWITCH |
| 10 | 85-600 I.F. TRANS. |
| 11 | 58-596 I.F. TRANS. |
| 12 | 58-594 TONE CONTROL SW. ASSEM. |
| 13 | 58-595 TONE CONTROL SW. ASSEM. |
| 14 | 100-34 PILOT LIGHT 250 V. 50 W. |
| 15 | 100-30 PILOT LIGHT 250 V. 50 W. |
| 16 | 85-804 DOOR SWITCH MODEL 7S487 |
| 17 | 85-805 DOOR SWITCH MODEL 7S488 |
| 18 | 85-181 AUTOMATIC STOP SW. |
| 19 | 85-182 MOTOR SWITCH |
| 20 | 85-183 PHONO SWITCH |
| A | I.F. TRANS. P.W. |
| B | I.F. TRANS. SEC. |
| C | I.F. TRANS. SEC. |
| D | WAVE TRAP |
| E | WAVE TRAP |
| F | BROADCAST OSC. (SEE NOTE) |
| G | TELEVISION BROADCAST |
| H | SHORT WAVE DET. |
| I | POLICE BAND OSC. (-) |
| J | NOTE: TRIMMERS P, K, N ARE WIREWOUND ON STRAP PEE-500. |

- 7 TUBE SUPERHETERODYNE CHASSIS NO. 5725 PHONO
- | | |
|------|----------------------------|
| R1 | 83-271 / 1 MEG OHM |
| R2 | 83-386 / 680 OHM |
| R3 | 83-607 / 15M OHM |
| R4 | 83-594 / 33M OHM |
| R5 | 83-598 / 1.5 MEG OHM |
| R6 | 83-589 / 1000 OHM |
| R7 | 83-676 / 27M OHM |
| R8 | 83-678 / 27M OHM |
| R9 | 83-597 / 47M OHM |
| R10 | 83-595 / 47M OHM |
| R11 | 83-597 / 47M OHM |
| R12 | 83-597 / 47M OHM |
| R13 | 83-597 / 47M OHM |
| R14 | 83-598 / 280 OHM WIREWOUND |
| R15 | 83-598 / 280 OHM WIREWOUND |
| R16 | 83-598 / 280 OHM WIREWOUND |
| R17 | 83-598 / 280 OHM WIREWOUND |
| R18 | 83-598 / 280 OHM WIREWOUND |
| R19 | 83-598 / 280 OHM WIREWOUND |
| R20 | 83-598 / 280 OHM WIREWOUND |
| R21 | 83-598 / 280 OHM WIREWOUND |
| R22 | 83-598 / 280 OHM WIREWOUND |
| R23 | 83-598 / 280 OHM WIREWOUND |
| R24 | 83-598 / 280 OHM WIREWOUND |
| R25 | 83-598 / 280 OHM WIREWOUND |
| R26 | 83-598 / 280 OHM WIREWOUND |
| R27 | 83-598 / 280 OHM WIREWOUND |
| R28 | 83-598 / 280 OHM WIREWOUND |
| R29 | 83-598 / 280 OHM WIREWOUND |
| R30 | 83-598 / 280 OHM WIREWOUND |
| R31 | 83-598 / 280 OHM WIREWOUND |
| R32 | 83-598 / 280 OHM WIREWOUND |
| R33 | 83-598 / 280 OHM WIREWOUND |
| R34 | 83-598 / 280 OHM WIREWOUND |
| R35 | 83-598 / 280 OHM WIREWOUND |
| R36 | 83-598 / 280 OHM WIREWOUND |
| R37 | 83-598 / 280 OHM WIREWOUND |
| R38 | 83-598 / 280 OHM WIREWOUND |
| R39 | 83-598 / 280 OHM WIREWOUND |
| R40 | 83-598 / 280 OHM WIREWOUND |
| R41 | 83-598 / 280 OHM WIREWOUND |
| R42 | 83-598 / 280 OHM WIREWOUND |
| R43 | 83-598 / 280 OHM WIREWOUND |
| R44 | 83-598 / 280 OHM WIREWOUND |
| R45 | 83-598 / 280 OHM WIREWOUND |
| R46 | 83-598 / 280 OHM WIREWOUND |
| R47 | 83-598 / 280 OHM WIREWOUND |
| R48 | 83-598 / 280 OHM WIREWOUND |
| R49 | 83-598 / 280 OHM WIREWOUND |
| R50 | 83-598 / 280 OHM WIREWOUND |
| R51 | 83-598 / 280 OHM WIREWOUND |
| R52 | 83-598 / 280 OHM WIREWOUND |
| R53 | 83-598 / 280 OHM WIREWOUND |
| R54 | 83-598 / 280 OHM WIREWOUND |
| R55 | 83-598 / 280 OHM WIREWOUND |
| R56 | 83-598 / 280 OHM WIREWOUND |
| R57 | 83-598 / 280 OHM WIREWOUND |
| R58 | 83-598 / 280 OHM WIREWOUND |
| R59 | 83-598 / 280 OHM WIREWOUND |
| R60 | 83-598 / 280 OHM WIREWOUND |
| R61 | 83-598 / 280 OHM WIREWOUND |
| R62 | 83-598 / 280 OHM WIREWOUND |
| R63 | 83-598 / 280 OHM WIREWOUND |
| R64 | 83-598 / 280 OHM WIREWOUND |
| R65 | 83-598 / 280 OHM WIREWOUND |
| R66 | 83-598 / 280 OHM WIREWOUND |
| R67 | 83-598 / 280 OHM WIREWOUND |
| R68 | 83-598 / 280 OHM WIREWOUND |
| R69 | 83-598 / 280 OHM WIREWOUND |
| R70 | 83-598 / 280 OHM WIREWOUND |
| R71 | 83-598 / 280 OHM WIREWOUND |
| R72 | 83-598 / 280 OHM WIREWOUND |
| R73 | 83-598 / 280 OHM WIREWOUND |
| R74 | 83-598 / 280 OHM WIREWOUND |
| R75 | 83-598 / 280 OHM WIREWOUND |
| R76 | 83-598 / 280 OHM WIREWOUND |
| R77 | 83-598 / 280 OHM WIREWOUND |
| R78 | 83-598 / 280 OHM WIREWOUND |
| R79 | 83-598 / 280 OHM WIREWOUND |
| R80 | 83-598 / 280 OHM WIREWOUND |
| R81 | 83-598 / 280 OHM WIREWOUND |
| R82 | 83-598 / 280 OHM WIREWOUND |
| R83 | 83-598 / 280 OHM WIREWOUND |
| R84 | 83-598 / 280 OHM WIREWOUND |
| R85 | 83-598 / 280 OHM WIREWOUND |
| R86 | 83-598 / 280 OHM WIREWOUND |
| R87 | 83-598 / 280 OHM WIREWOUND |
| R88 | 83-598 / 280 OHM WIREWOUND |
| R89 | 83-598 / 280 OHM WIREWOUND |
| R90 | 83-598 / 280 OHM WIREWOUND |
| R91 | 83-598 / 280 OHM WIREWOUND |
| R92 | 83-598 / 280 OHM WIREWOUND |
| R93 | 83-598 / 280 OHM WIREWOUND |
| R94 | 83-598 / 280 OHM WIREWOUND |
| R95 | 83-598 / 280 OHM WIREWOUND |
| R96 | 83-598 / 280 OHM WIREWOUND |
| R97 | 83-598 / 280 OHM WIREWOUND |
| R98 | 83-598 / 280 OHM WIREWOUND |
| R99 | 83-598 / 280 OHM WIREWOUND |
| R100 | 83-598 / 280 OHM WIREWOUND |

AME. PART NO.	DESCRIPTION	RESISTANCE
C1	22-845 PHO GANG VARIABLE	600K
C2	22-182 0001 MFD.	600K
C3	22-825 05 MFD.	600K
C4	22-226 05 MFD.	600K
C5	22-226 05 MFD.	600K
C6	22-226 05 MFD.	600K
C7	22-226 05 MFD.	600K
C8	22-190 1 MFD.	600K
C9	22-226 05 MFD.	600K
C10	22-226 05 MFD.	600K
C11	22-226 05 MFD.	600K
C12	22-226 05 MFD.	600K
C13	22-226 05 MFD.	600K
C14	22-226 05 MFD.	600K
C15	22-226 05 MFD.	600K
C16	22-226 05 MFD.	600K
C17	22-226 05 MFD.	600K
C18	22-226 05 MFD.	600K
C19	22-226 05 MFD.	600K
C20	22-226 05 MFD.	600K
C21	22-226 05 MFD.	600K
C22	22-226 05 MFD.	600K
C23	22-226 05 MFD.	600K
C24	22-226 05 MFD.	600K
C25	22-226 05 MFD.	600K

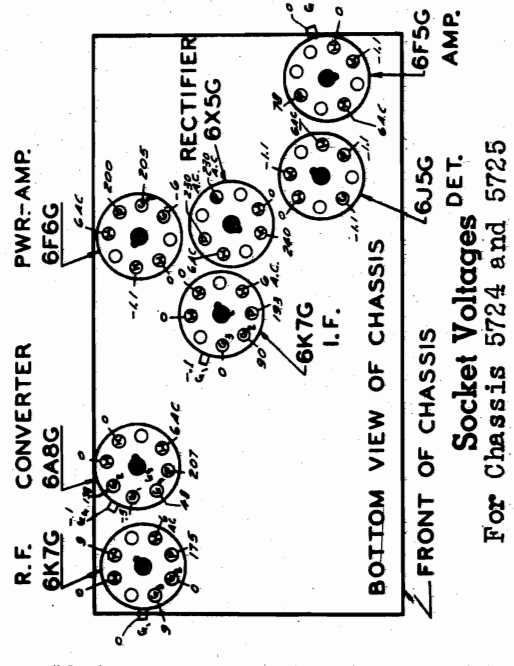

FOR TUNER SEE INDEX

I.F. FREQUENCY 455 KC

ANTENNA SWITCH SHOWN IN WAVELENGTH POSITION

BAND SWITCH SHOWN IN AUTOMATIC POSITION


MODEL 7S487 7S488 7S490

For ALIGNMENT and LOCATION of TUBES and TRIMMERS See Index

Socket Voltages For Chassis 5724 and 5725


MODELS 8S432, 8S433, 8S434, 8S449
 8S450, 8S458 to 8S462
 Chassis 5810
 Schematic, Voltage, Socket
 Trimmers

ZENITH RADIO CORP.

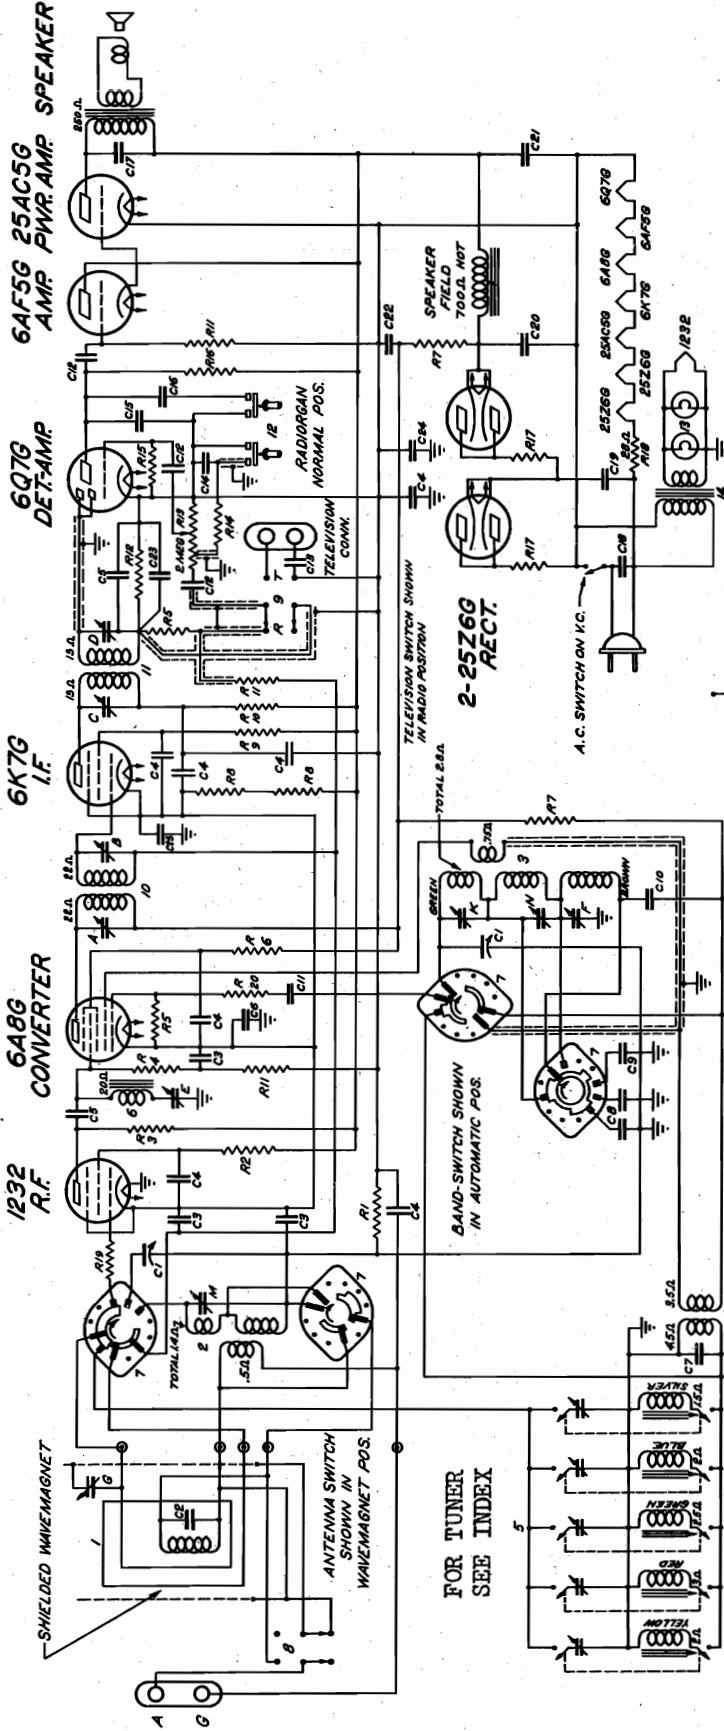

QMB PART NO.	DESCRIPTION	QMB PART NO.	DESCRIPTION
C1	22-849 1000P5 MFD.	6A75	6A75 6.3V 0.1A 6000 OHM
C2	22-849 1000P5 MFD.	6A76	6A76 6.3V 0.1A 6000 OHM
C3	22-849 1000P5 MFD.	6A77	6A77 6.3V 0.1A 6000 OHM
C4	22-849 1000P5 MFD.	6A78	6A78 6.3V 0.1A 6000 OHM
C5	22-849 1000P5 MFD.	6A79	6A79 6.3V 0.1A 6000 OHM
C6	22-849 1000P5 MFD.	6A80	6A80 6.3V 0.1A 6000 OHM
C7	22-849 1000P5 MFD.	6A81	6A81 6.3V 0.1A 6000 OHM
C8	22-849 1000P5 MFD.	6A82	6A82 6.3V 0.1A 6000 OHM
C9	22-849 1000P5 MFD.	6A83	6A83 6.3V 0.1A 6000 OHM
C10	22-849 1000P5 MFD.	6A84	6A84 6.3V 0.1A 6000 OHM
C11	22-849 1000P5 MFD.	6A85	6A85 6.3V 0.1A 6000 OHM
C12	22-849 1000P5 MFD.	6A86	6A86 6.3V 0.1A 6000 OHM
C13	22-849 1000P5 MFD.	6A87	6A87 6.3V 0.1A 6000 OHM
C14	22-849 1000P5 MFD.	6A88	6A88 6.3V 0.1A 6000 OHM
C15	22-849 1000P5 MFD.	6A89	6A89 6.3V 0.1A 6000 OHM
C16	22-849 1000P5 MFD.	6A90	6A90 6.3V 0.1A 6000 OHM
C17	22-849 1000P5 MFD.	6A91	6A91 6.3V 0.1A 6000 OHM
C18	22-849 1000P5 MFD.	6A92	6A92 6.3V 0.1A 6000 OHM
C19	22-849 1000P5 MFD.	6A93	6A93 6.3V 0.1A 6000 OHM
C20	22-849 1000P5 MFD.	6A94	6A94 6.3V 0.1A 6000 OHM
C21	22-849 1000P5 MFD.	6A95	6A95 6.3V 0.1A 6000 OHM
C22	22-849 1000P5 MFD.	6A96	6A96 6.3V 0.1A 6000 OHM
C23	22-849 1000P5 MFD.	6A97	6A97 6.3V 0.1A 6000 OHM
C24	22-849 1000P5 MFD.	6A98	6A98 6.3V 0.1A 6000 OHM
C25	22-849 1000P5 MFD.	6A99	6A99 6.3V 0.1A 6000 OHM
C26	22-849 1000P5 MFD.	6A100	6A100 6.3V 0.1A 6000 OHM
C27	22-849 1000P5 MFD.	6A101	6A101 6.3V 0.1A 6000 OHM
C28	22-849 1000P5 MFD.	6A102	6A102 6.3V 0.1A 6000 OHM
C29	22-849 1000P5 MFD.	6A103	6A103 6.3V 0.1A 6000 OHM
C30	22-849 1000P5 MFD.	6A104	6A104 6.3V 0.1A 6000 OHM
C31	22-849 1000P5 MFD.	6A105	6A105 6.3V 0.1A 6000 OHM
C32	22-849 1000P5 MFD.	6A106	6A106 6.3V 0.1A 6000 OHM
C33	22-849 1000P5 MFD.	6A107	6A107 6.3V 0.1A 6000 OHM
C34	22-849 1000P5 MFD.	6A108	6A108 6.3V 0.1A 6000 OHM
C35	22-849 1000P5 MFD.	6A109	6A109 6.3V 0.1A 6000 OHM
C36	22-849 1000P5 MFD.	6A110	6A110 6.3V 0.1A 6000 OHM
C37	22-849 1000P5 MFD.	6A111	6A111 6.3V 0.1A 6000 OHM
C38	22-849 1000P5 MFD.	6A112	6A112 6.3V 0.1A 6000 OHM
C39	22-849 1000P5 MFD.	6A113	6A113 6.3V 0.1A 6000 OHM
C40	22-849 1000P5 MFD.	6A114	6A114 6.3V 0.1A 6000 OHM
C41	22-849 1000P5 MFD.	6A115	6A115 6.3V 0.1A 6000 OHM
C42	22-849 1000P5 MFD.	6A116	6A116 6.3V 0.1A 6000 OHM
C43	22-849 1000P5 MFD.	6A117	6A117 6.3V 0.1A 6000 OHM
C44	22-849 1000P5 MFD.	6A118	6A118 6.3V 0.1A 6000 OHM
C45	22-849 1000P5 MFD.	6A119	6A119 6.3V 0.1A 6000 OHM
C46	22-849 1000P5 MFD.	6A120	6A120 6.3V 0.1A 6000 OHM
C47	22-849 1000P5 MFD.	6A121	6A121 6.3V 0.1A 6000 OHM
C48	22-849 1000P5 MFD.	6A122	6A122 6.3V 0.1A 6000 OHM
C49	22-849 1000P5 MFD.	6A123	6A123 6.3V 0.1A 6000 OHM
C50	22-849 1000P5 MFD.	6A124	6A124 6.3V 0.1A 6000 OHM
C51	22-849 1000P5 MFD.	6A125	6A125 6.3V 0.1A 6000 OHM
C52	22-849 1000P5 MFD.	6A126	6A126 6.3V 0.1A 6000 OHM
C53	22-849 1000P5 MFD.	6A127	6A127 6.3V 0.1A 6000 OHM
C54	22-849 1000P5 MFD.	6A128	6A128 6.3V 0.1A 6000 OHM
C55	22-849 1000P5 MFD.	6A129	6A129 6.3V 0.1A 6000 OHM
C56	22-849 1000P5 MFD.	6A130	6A130 6.3V 0.1A 6000 OHM
C57	22-849 1000P5 MFD.	6A131	6A131 6.3V 0.1A 6000 OHM
C58	22-849 1000P5 MFD.	6A132	6A132 6.3V 0.1A 6000 OHM
C59	22-849 1000P5 MFD.	6A133	6A133 6.3V 0.1A 6000 OHM
C60	22-849 1000P5 MFD.	6A134	6A134 6.3V 0.1A 6000 OHM
C61	22-849 1000P5 MFD.	6A135	6A135 6.3V 0.1A 6000 OHM
C62	22-849 1000P5 MFD.	6A136	6A136 6.3V 0.1A 6000 OHM
C63	22-849 1000P5 MFD.	6A137	6A137 6.3V 0.1A 6000 OHM
C64	22-849 1000P5 MFD.	6A138	6A138 6.3V 0.1A 6000 OHM
C65	22-849 1000P5 MFD.	6A139	6A139 6.3V 0.1A 6000 OHM
C66	22-849 1000P5 MFD.	6A140	6A140 6.3V 0.1A 6000 OHM
C67	22-849 1000P5 MFD.	6A141	6A141 6.3V 0.1A 6000 OHM
C68	22-849 1000P5 MFD.	6A142	6A142 6.3V 0.1A 6000 OHM
C69	22-849 1000P5 MFD.	6A143	6A143 6.3V 0.1A 6000 OHM
C70	22-849 1000P5 MFD.	6A144	6A144 6.3V 0.1A 6000 OHM
C71	22-849 1000P5 MFD.	6A145	6A145 6.3V 0.1A 6000 OHM
C72	22-849 1000P5 MFD.	6A146	6A146 6.3V 0.1A 6000 OHM
C73	22-849 1000P5 MFD.	6A147	6A147 6.3V 0.1A 6000 OHM
C74	22-849 1000P5 MFD.	6A148	6A148 6.3V 0.1A 6000 OHM
C75	22-849 1000P5 MFD.	6A149	6A149 6.3V 0.1A 6000 OHM
C76	22-849 1000P5 MFD.	6A150	6A150 6.3V 0.1A 6000 OHM
C77	22-849 1000P5 MFD.	6A151	6A151 6.3V 0.1A 6000 OHM
C78	22-849 1000P5 MFD.	6A152	6A152 6.3V 0.1A 6000 OHM
C79	22-849 1000P5 MFD.	6A153	6A153 6.3V 0.1A 6000 OHM
C80	22-849 1000P5 MFD.	6A154	6A154 6.3V 0.1A 6000 OHM
C81	22-849 1000P5 MFD.	6A155	6A155 6.3V 0.1A 6000 OHM
C82	22-849 1000P5 MFD.	6A156	6A156 6.3V 0.1A 6000 OHM
C83	22-849 1000P5 MFD.	6A157	6A157 6.3V 0.1A 6000 OHM
C84	22-849 1000P5 MFD.	6A158	6A158 6.3V 0.1A 6000 OHM
C85	22-849 1000P5 MFD.	6A159	6A159 6.3V 0.1A 6000 OHM
C86	22-849 1000P5 MFD.	6A160	6A160 6.3V 0.1A 6000 OHM
C87	22-849 1000P5 MFD.	6A161	6A161 6.3V 0.1A 6000 OHM
C88	22-849 1000P5 MFD.	6A162	6A162 6.3V 0.1A 6000 OHM
C89	22-849 1000P5 MFD.	6A163	6A163 6.3V 0.1A 6000 OHM
C90	22-849 1000P5 MFD.	6A164	6A164 6.3V 0.1A 6000 OHM
C91	22-849 1000P5 MFD.	6A165	6A165 6.3V 0.1A 6000 OHM
C92	22-849 1000P5 MFD.	6A166	6A166 6.3V 0.1A 6000 OHM
C93	22-849 1000P5 MFD.	6A167	6A167 6.3V 0.1A 6000 OHM
C94	22-849 1000P5 MFD.	6A168	6A168 6.3V 0.1A 6000 OHM
C95	22-849 1000P5 MFD.	6A169	6A169 6.3V 0.1A 6000 OHM
C96	22-849 1000P5 MFD.	6A170	6A170 6.3V 0.1A 6000 OHM
C97	22-849 1000P5 MFD.	6A171	6A171 6.3V 0.1A 6000 OHM
C98	22-849 1000P5 MFD.	6A172	6A172 6.3V 0.1A 6000 OHM
C99	22-849 1000P5 MFD.	6A173	6A173 6.3V 0.1A 6000 OHM
C100	22-849 1000P5 MFD.	6A174	6A174 6.3V 0.1A 6000 OHM
C101	22-849 1000P5 MFD.	6A175	6A175 6.3V 0.1A 6000 OHM
C102	22-849 1000P5 MFD.	6A176	6A176 6.3V 0.1A 6000 OHM
C103	22-849 1000P5 MFD.	6A177	6A177 6.3V 0.1A 6000 OHM
C104	22-849 1000P5 MFD.	6A178	6A178 6.3V 0.1A 6000 OHM
C105	22-849 1000P5 MFD.	6A179	6A179 6.3V 0.1A 6000 OHM
C106	22-849 1000P5 MFD.	6A180	6A180 6.3V 0.1A 6000 OHM
C107	22-849 1000P5 MFD.	6A181	6A181 6.3V 0.1A 6000 OHM
C108	22-849 1000P5 MFD.	6A182	6A182 6.3V 0.1A 6000 OHM
C109	22-849 1000P5 MFD.	6A183	6A183 6.3V 0.1A 6000 OHM
C110	22-849 1000P5 MFD.	6A184	6A184 6.3V 0.1A 6000 OHM
C111	22-849 1000P5 MFD.	6A185	6A185 6.3V 0.1A 6000 OHM
C112	22-849 1000P5 MFD.	6A186	6A186 6.3V 0.1A 6000 OHM
C113	22-849 1000P5 MFD.	6A187	6A187 6.3V 0.1A 6000 OHM
C114	22-849 1000P5 MFD.	6A188	6A188 6.3V 0.1A 6000 OHM
C115	22-849 1000P5 MFD.	6A189	6A189 6.3V 0.1A 6000 OHM
C116	22-849 1000P5 MFD.	6A190	6A190 6.3V 0.1A 6000 OHM
C117	22-849 1000P5 MFD.	6A191	6A191 6.3V 0.1A 6000 OHM
C118	22-849 1000P5 MFD.	6A192	6A192 6.3V 0.1A 6000 OHM
C119	22-849 1000P5 MFD.	6A193	6A193 6.3V 0.1A 6000 OHM
C120	22-849 1000P5 MFD.	6A194	6A194 6.3V 0.1A 6000 OHM
C121	22-849 1000P5 MFD.	6A195	6A195 6.3V 0.1A 6000 OHM
C122	22-849 1000P5 MFD.	6A196	6A196 6.3V 0.1A 6000 OHM
C123	22-849 1000P5 MFD.	6A197	6A197 6.3V 0.1A 6000 OHM
C124	22-849 1000P5 MFD.	6A198	6A198 6.3V 0.1A 6000 OHM
C125	22-849 1000P5 MFD.	6A199	6A199 6.3V 0.1A 6000 OHM
C126	22-849 1000P5 MFD.	6A200	6A200 6.3V 0.1A 6000 OHM
C127	22-849 1000P5 MFD.	6A201	6A201 6.3V 0.1A 6000 OHM
C128	22-849 1000P5 MFD.	6A202	6A202 6.3V 0.1A 6000 OHM
C129	22-849 1000P5 MFD.	6A203	6A203 6.3V 0.1A 6000 OHM
C130	22-849 1000P5 MFD.	6A204	6A204 6.3V 0.1A 6000 OHM
C131	22-849 1000P5 MFD.	6A205	6A205 6.3V 0.1A 6000 OHM
C132	22-849 1000P5 MFD.	6A206	6A206 6.3V 0.1A 6000 OHM
C133	22-849 1000P5 MFD.	6A207	6A207 6.3V 0.1A 6000 OHM
C134	22-849 1000P5 MFD.	6A208	6A208 6.3V 0.1A 6000 OHM
C135	22-849 1000P5 MFD.	6A209	6A209 6.3V 0.1A 6000 OHM
C136	22-849 1000P5 MFD.	6A210	6A210 6.3V 0.1A 6000 OHM
C137	22-849 1000P5 MFD.	6A211	6A211 6.3V 0.1A 6000 OHM
C138	22-849 1000P5 MFD.	6A212	6A212 6.3V 0.1A 6000 OHM
C139	22-849 1000P5 MFD.	6A213	6A213 6.3V 0.1A 6000 OHM
C140	22-849 1000P5 MFD.	6A214	6A214 6.3V 0.1A 6000 OHM
C141	22-849 1000P5 MFD.	6A215	6A215 6.3V 0.1A 6000 OHM
C142	22-849 1000P5 MFD.	6A216	6A216 6.3V 0.1A 6000 OHM
C143	22-849 1000P5 MFD.	6A217	6A217 6.3V 0.1A 6000 OHM
C144	22-849 1000P5 MFD.	6A218	6A218 6.3V 0.1A 6000 OHM
C145	22-849 1000P5 MFD.	6A219	6A219 6.3V 0.1A 6000 OHM
C146	22-849 1000P5 MFD.	6A220	6A220 6.3V 0.1A 6000 OHM
C147	22-849 1000P5 MFD.	6A221	6A221 6.3V 0.1A 6000 OHM
C148	22-849 1000P5 MFD.	6A222	6A222 6.3V 0.1A 6000 OHM
C149	22-849 1000P5 MFD.	6A223	6A223 6.3V 0.1A 6000 OHM
C150	22-849 1000P5 MFD.	6A224	6A224 6.3V 0.1A 6000 OHM
C151	22-849 1000P5 MFD.	6A225	6A225 6.3V 0.1A 6000 OHM
C152	22-849 1000P5 MFD.	6A226	6A226 6.3V 0.1A 6000 OHM
C153	22-849 1000P5 MFD.	6A227	6A227 6.3V 0.1A 6000 OHM
C154	22-849 1000P5 MFD.	6A228	6A228 6.3V 0.1A 6000 OHM
C155	22-849 1000P5 MFD.	6A229	6A229 6.3V 0.1A 6000 OHM
C156	22-849 1000P5 MFD.	6A230	6A230 6.3V 0.1A 600

ZENITH RADIO CORP. MODELS 12S445, 12S453, 12S471, 12S475, 12S494
 Chassis 1207
 Schematic

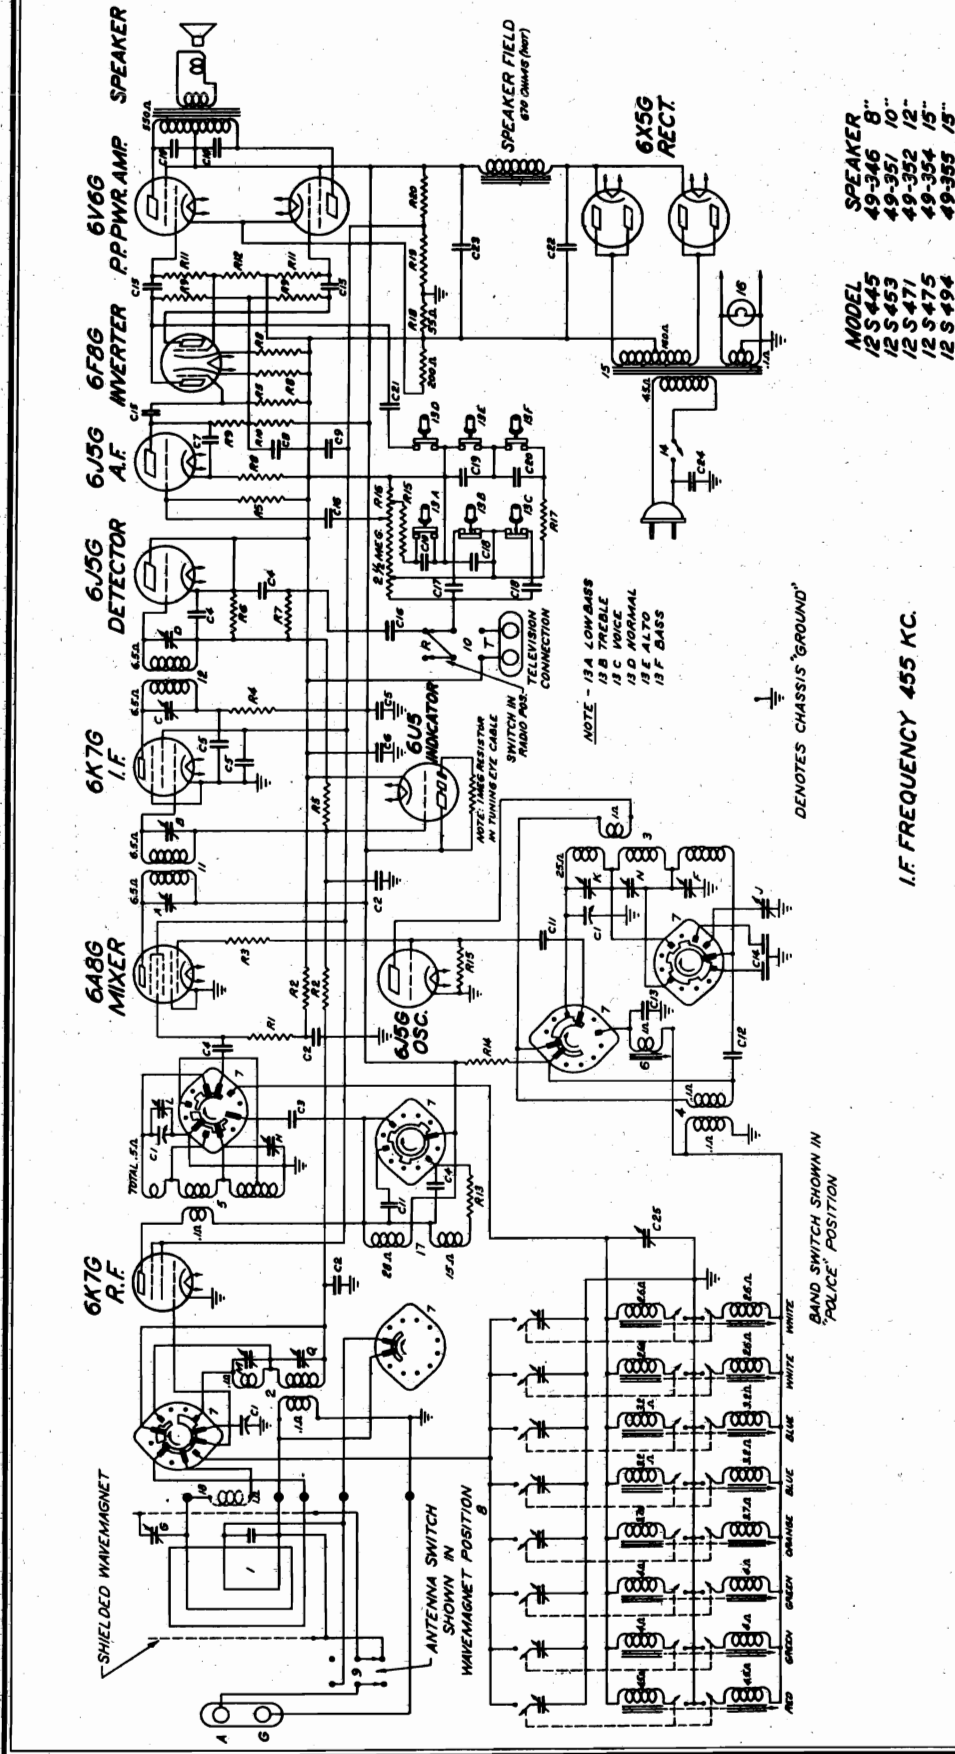

- MODEL SPEAKER
 12S445 49-346 8"
 12S453 49-351 10"
 12S471 49-352 12"
 12S475 49-354 15"
 12S494 49-355 15"



12 TUBE SUPERHETERODYNE
 CHASSIS No 1207 A.C. 3BAND

FOR OTHER DATA
 SEE INDEX

I.F. FREQUENCY 455 KC.


PART NO.	DESCRIPTION	QTY	DESCRIPTION	QTY	DESCRIPTION
C1	25-250 THREE GANG VARIABLE	1	12 I.F. TRANS. PRL	1	12 I.F. TRANS. PRL
C2	25-250 50 MFD.	1	12 I.F. PRL	1	12 I.F. PRL
C3	25-250 50 MFD.	1	12 I.F. SEC.	1	12 I.F. SEC.
C4	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C5	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C6	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C7	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C8	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C9	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C10	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C11	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C12	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C13	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C14	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C15	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C16	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C17	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C18	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C19	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C20	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C21	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C22	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C23	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C24	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
C25	25-250 50 MFD.	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R1	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R2	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R3	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R4	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R5	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R6	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R7	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R8	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R9	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R10	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R11	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R12	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R13	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R14	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R15	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R16	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
R17	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
L1	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
L2	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
L3	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
L4	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
L5	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
L6	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
L7	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
L8	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
L9	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)
L10	100K	1	12 I.F. SEC. (WTE)	1	12 I.F. SEC. (WTE)

CHASSIS 1005 CHASSIS 1103
 CHASSIS 1207 CHASSIS 5808 ZENITH RADIO CORP.
 Voltage, Socket, Trimmers

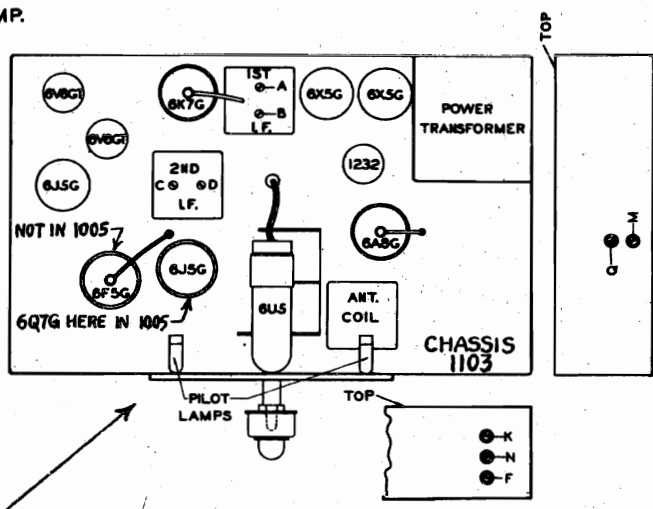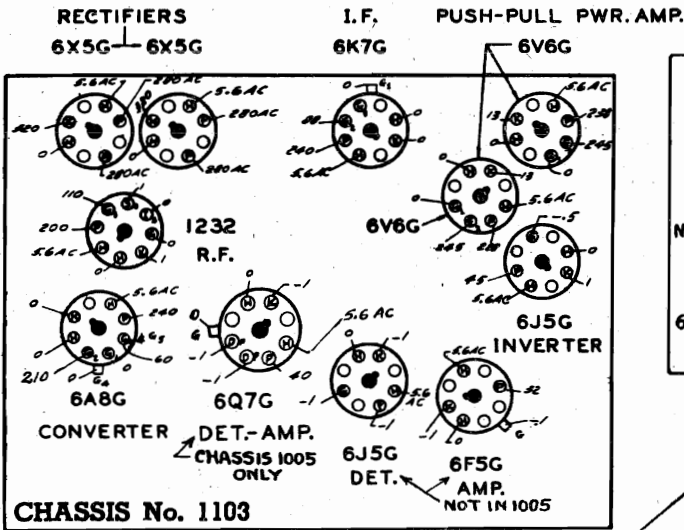


All voltages measured from socket terminal to chassis ground using 1000 ohm per volt meter.

FRONT OF CHASSIS
 Sensitivity switch in distance position.

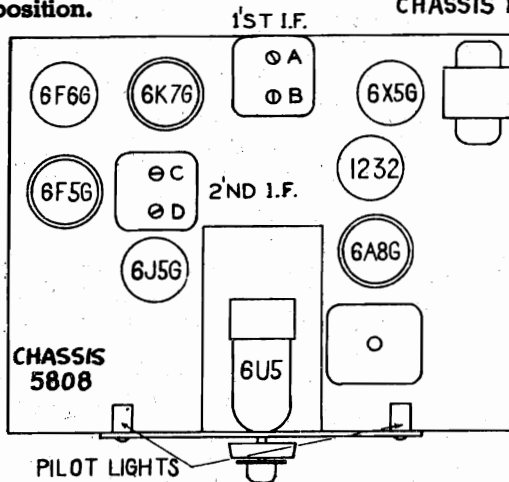

CHASSIS 5808:
 TRIMMERS Q, M, K, N & F AS IN CHASSIS 1103

RECTIFIER 6X5G Volume control full on. Line voltage 112 A.C. PWR.-AMP. 6F6G


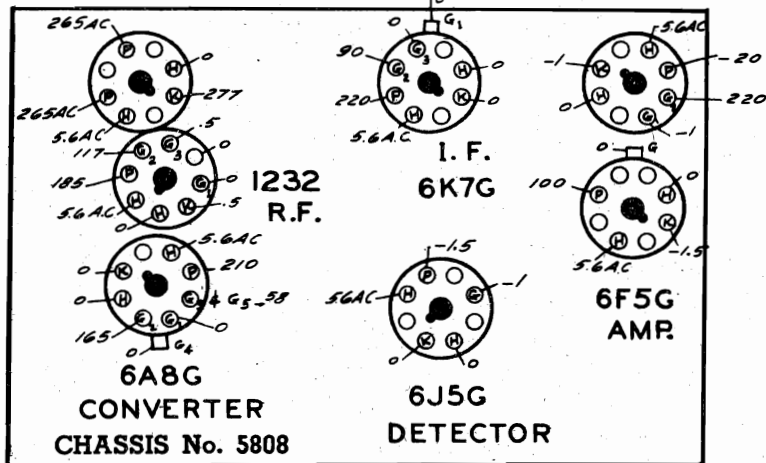


All voltages are positive D.C. unless marked otherwise.

Socket Voltages


PUSH-PULL PWR. AMP. 6V6G-6V6G

FRONT OF CHASSIS
 Location of Tubes and Trimmers

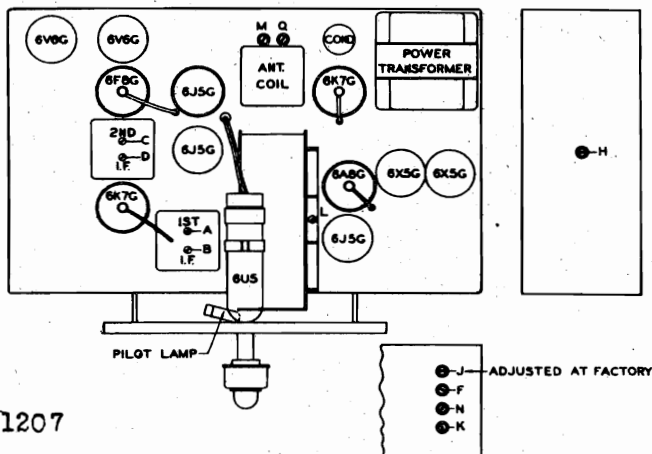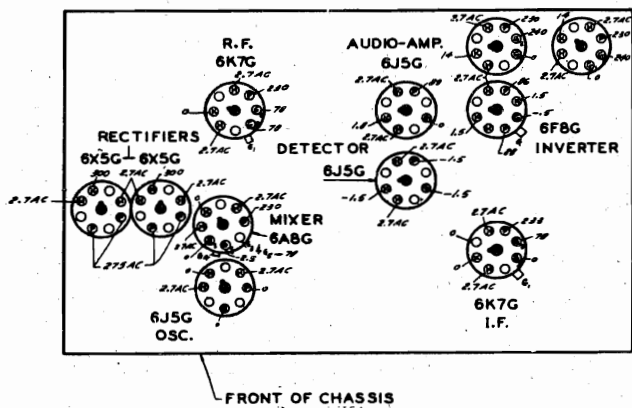

ZENITH RADIO CORP.

MODELS 15S479, 15S495
 Chassis 1503
 Schematic

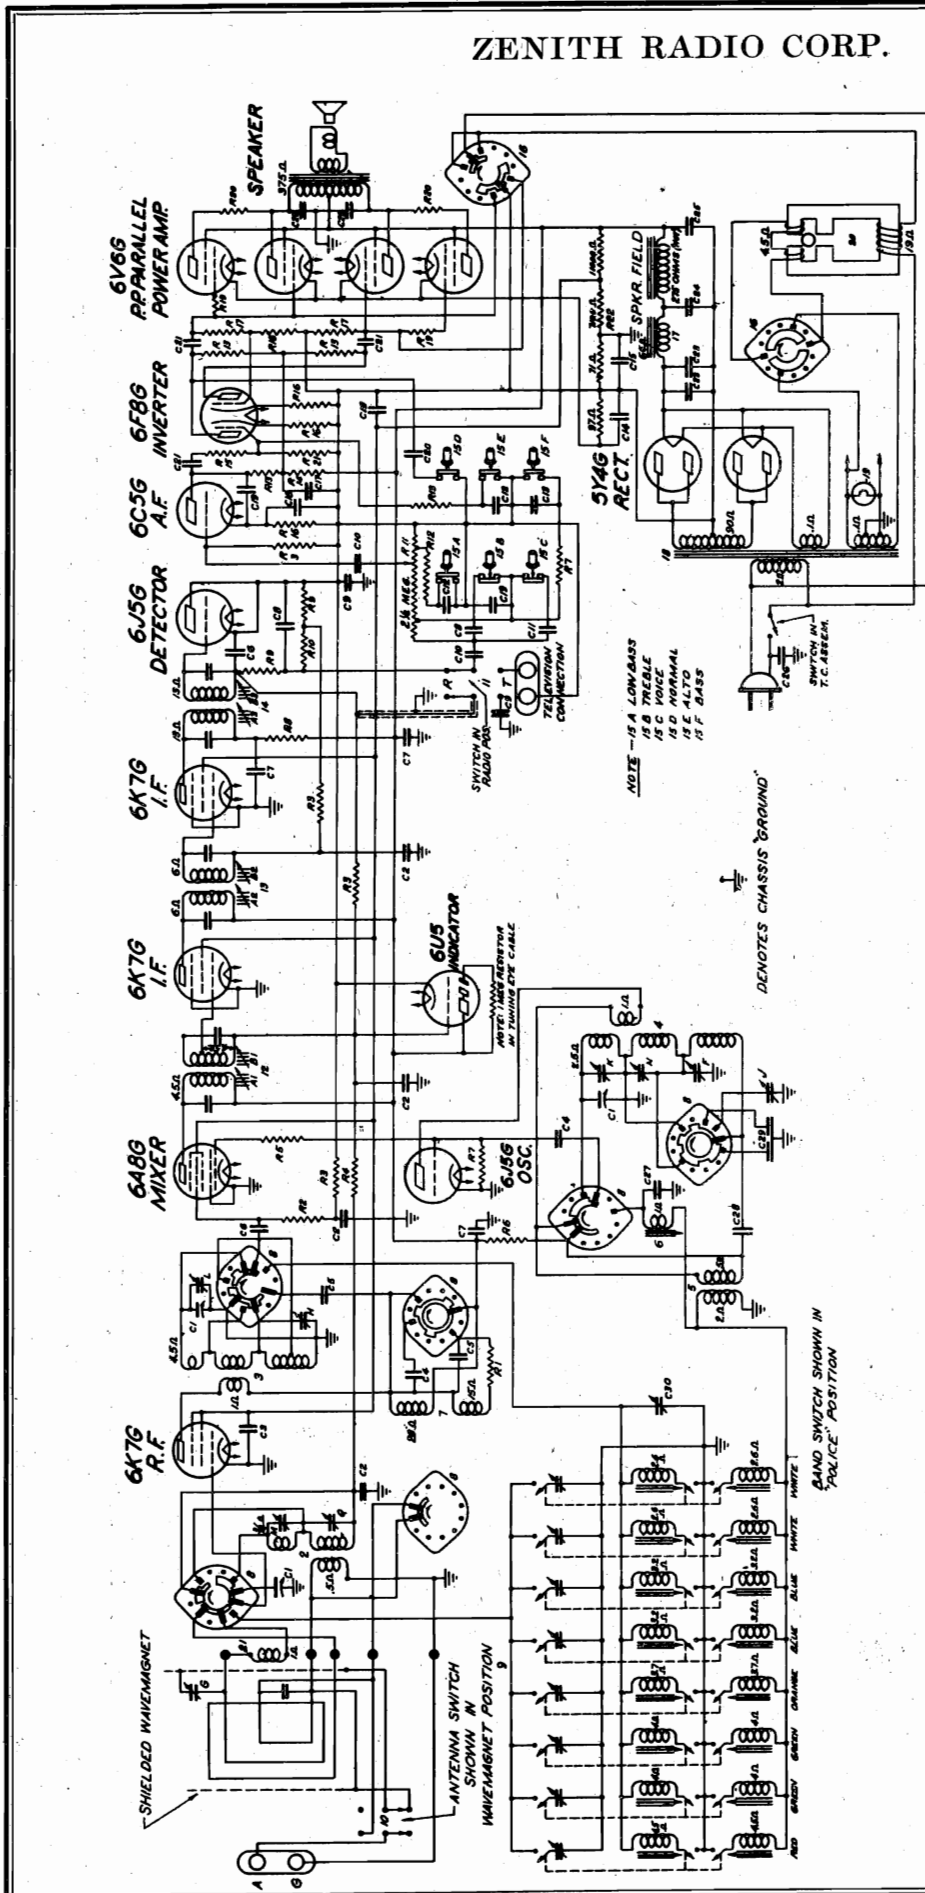

MODEL 15S479
 15S495

I.F. FREQUENCY 455 KC.


15 TUBE SUPERHETERODYNE
 CHASSIS #1503 A.C. 3BAND

FOR OTHER DATA
 SEE INDEX

Q	NO.	DESCRIPTION	Q	NO.	DESCRIPTION	Q	NO.	DESCRIPTION	Q	NO.	DESCRIPTION
C1	22-381	TRIMMER CAPACITOR	R1	63-528	3300 OHM	6	6	ANTENNA COIL ASSEMBLY	1	1	1E1 F. TRANS. PRI.
C2	22-382	TRIMMER CAPACITOR	R2	63-529	470 OHM	7	7	OSCILLATOR COIL ASSEMBLY	2	2	1E2 I. F.
C3	22-383	TRIMMER CAPACITOR	R3	63-530	100 OHM	8	8	DETECTOR COIL ASSEMBLY	3	3	2E1 I. F.
C4	22-384	TRIMMER CAPACITOR	R4	63-531	100 OHM	9	9	2ND I.F. COIL ASSEMBLY	4	4	3E1 I. F.
C5	22-385	TRIMMER CAPACITOR	R5	63-532	100 OHM	10	10	3RD I.F. COIL ASSEMBLY	5	5	3E2 I. F.
C6	22-386	TRIMMER CAPACITOR	R6	63-533	100 OHM	11	11	4TH I.F. COIL ASSEMBLY	6	6	3E3 I. F.
C7	22-387	TRIMMER CAPACITOR	R7	63-534	100 OHM	12	12	5TH I.F. COIL ASSEMBLY	7	7	3E4 I. F.
C8	22-388	TRIMMER CAPACITOR	R8	63-535	100 OHM	13	13	6TH I.F. COIL ASSEMBLY	8	8	3E5 I. F.
C9	22-389	TRIMMER CAPACITOR	R9	63-536	100 OHM	14	14	7TH I.F. COIL ASSEMBLY	9	9	3E6 I. F.
C10	22-390	TRIMMER CAPACITOR	R10	63-537	100 OHM	15	15	8TH I.F. COIL ASSEMBLY	10	10	3E7 I. F.
C11	22-391	TRIMMER CAPACITOR	R11	63-538	100 OHM	16	16	9TH I.F. COIL ASSEMBLY	11	11	3E8 I. F.
C12	22-392	TRIMMER CAPACITOR	R12	63-539	100 OHM	17	17	10TH I.F. COIL ASSEMBLY	12	12	3E9 I. F.
C13	22-393	TRIMMER CAPACITOR	R13	63-540	100 OHM	18	18	11TH I.F. COIL ASSEMBLY	13	13	3E10 I. F.
C14	22-394	TRIMMER CAPACITOR	R14	63-541	100 OHM	19	19	12TH I.F. COIL ASSEMBLY	14	14	3E11 I. F.
C15	22-395	TRIMMER CAPACITOR	R15	63-542	100 OHM	20	20	13TH I.F. COIL ASSEMBLY	15	15	3E12 I. F.
C16	22-396	TRIMMER CAPACITOR	R16	63-543	100 OHM	21	21	14TH I.F. COIL ASSEMBLY	16	16	3E13 I. F.
C17	22-397	TRIMMER CAPACITOR	R17	63-544	100 OHM	22	22	15TH I.F. COIL ASSEMBLY	17	17	3E14 I. F.
C18	22-398	TRIMMER CAPACITOR	R18	63-545	100 OHM	23	23	16TH I.F. COIL ASSEMBLY	18	18	3E15 I. F.
C19	22-399	TRIMMER CAPACITOR	R19	63-546	100 OHM	24	24	17TH I.F. COIL ASSEMBLY	19	19	3E16 I. F.
C20	22-400	TRIMMER CAPACITOR	R20	63-547	100 OHM	25	25	18TH I.F. COIL ASSEMBLY	20	20	3E17 I. F.
C21	22-401	TRIMMER CAPACITOR	R21	63-548	100 OHM	26	26	19TH I.F. COIL ASSEMBLY	21	21	3E18 I. F.
C22	22-402	TRIMMER CAPACITOR	R22	63-549	100 OHM	27	27	20TH I.F. COIL ASSEMBLY	22	22	3E19 I. F.
C23	22-403	TRIMMER CAPACITOR	R23	63-550	100 OHM	28	28	21ST I.F. COIL ASSEMBLY	23	23	3E20 I. F.
C24	22-404	TRIMMER CAPACITOR	R24	63-551	100 OHM	29	29	22ND I.F. COIL ASSEMBLY	24	24	3E21 I. F.
C25	22-405	TRIMMER CAPACITOR	R25	63-552	100 OHM	30	30	23RD I.F. COIL ASSEMBLY	25	25	3E22 I. F.
C26	22-406	TRIMMER CAPACITOR	R26	63-553	100 OHM	31	31	24TH I.F. COIL ASSEMBLY	26	26	3E23 I. F.
C27	22-407	TRIMMER CAPACITOR	R27	63-554	100 OHM	32	32	25TH I.F. COIL ASSEMBLY	27	27	3E24 I. F.
C28	22-408	TRIMMER CAPACITOR	R28	63-555	100 OHM	33	33	26TH I.F. COIL ASSEMBLY	28	28	3E25 I. F.
C29	22-409	TRIMMER CAPACITOR	R29	63-556	100 OHM	34	34	27TH I.F. COIL ASSEMBLY	29	29	3E26 I. F.
C30	22-410	TRIMMER CAPACITOR	R30	63-557	100 OHM	35	35	28TH I.F. COIL ASSEMBLY	30	30	3E27 I. F.
C31	22-411	TRIMMER CAPACITOR	R31	63-558	100 OHM	36	36	29TH I.F. COIL ASSEMBLY	31	31	3E28 I. F.
C32	22-412	TRIMMER CAPACITOR	R32	63-559	100 OHM	37	37	30TH I.F. COIL ASSEMBLY	32	32	3E29 I. F.
C33	22-413	TRIMMER CAPACITOR	R33	63-560	100 OHM	38	38	31ST I.F. COIL ASSEMBLY	33	33	3E30 I. F.
C34	22-414	TRIMMER CAPACITOR	R34	63-561	100 OHM	39	39	32ND I.F. COIL ASSEMBLY	34	34	3E31 I. F.
C35	22-415	TRIMMER CAPACITOR	R35	63-562	100 OHM	40	40	33RD I.F. COIL ASSEMBLY	35	35	3E32 I. F.
C36	22-416	TRIMMER CAPACITOR	R36	63-563	100 OHM	41	41	34TH I.F. COIL ASSEMBLY	36	36	3E33 I. F.
C37	22-417	TRIMMER CAPACITOR	R37	63-564	100 OHM	42	42	35TH I.F. COIL ASSEMBLY	37	37	3E34 I. F.
C38	22-418	TRIMMER CAPACITOR	R38	63-565	100 OHM	43	43	36TH I.F. COIL ASSEMBLY	38	38	3E35 I. F.
C39	22-419	TRIMMER CAPACITOR	R39	63-566	100 OHM	44	44	37TH I.F. COIL ASSEMBLY	39	39	3E36 I. F.
C40	22-420	TRIMMER CAPACITOR	R40	63-567	100 OHM	45	45	38TH I.F. COIL ASSEMBLY	40	40	3E37 I. F.
C41	22-421	TRIMMER CAPACITOR	R41	63-568	100 OHM	46	46	39TH I.F. COIL ASSEMBLY	41	41	3E38 I. F.
C42	22-422	TRIMMER CAPACITOR	R42	63-569	100 OHM	47	47	40TH I.F. COIL ASSEMBLY	42	42	3E39 I. F.
C43	22-423	TRIMMER CAPACITOR	R43	63-570	100 OHM	48	48	41ST I.F. COIL ASSEMBLY	43	43	3E40 I. F.
C44	22-424	TRIMMER CAPACITOR	R44	63-571	100 OHM	49	49	42ND I.F. COIL ASSEMBLY	44	44	3E41 I. F.
C45	22-425	TRIMMER CAPACITOR	R45	63-572	100 OHM	50	50	43RD I.F. COIL ASSEMBLY	45	45	3E42 I. F.
C46	22-426	TRIMMER CAPACITOR	R46	63-573	100 OHM	51	51	44TH I.F. COIL ASSEMBLY	46	46	3E43 I. F.
C47	22-427	TRIMMER CAPACITOR	R47	63-574	100 OHM	52	52	45TH I.F. COIL ASSEMBLY	47	47	3E44 I. F.
C48	22-428	TRIMMER CAPACITOR	R48	63-575	100 OHM	53	53	46TH I.F. COIL ASSEMBLY	48	48	3E45 I. F.
C49	22-429	TRIMMER CAPACITOR	R49	63-576	100 OHM	54	54	47TH I.F. COIL ASSEMBLY	49	49	3E46 I. F.
C50	22-430	TRIMMER CAPACITOR	R50	63-577	100 OHM	55	55	48TH I.F. COIL ASSEMBLY	50	50	3E47 I. F.
C51	22-431	TRIMMER CAPACITOR	R51	63-578	100 OHM	56	56	49TH I.F. COIL ASSEMBLY	51	51	3E48 I. F.
C52	22-432	TRIMMER CAPACITOR	R52	63-579	100 OHM	57	57	50TH I.F. COIL ASSEMBLY	52	52	3E49 I. F.
C53	22-433	TRIMMER CAPACITOR	R53	63-580	100 OHM	58	58	51ST I.F. COIL ASSEMBLY	53	53	3E50 I. F.
C54	22-434	TRIMMER CAPACITOR	R54	63-581	100 OHM	59	59	52ND I.F. COIL ASSEMBLY	54	54	3E51 I. F.
C55	22-435	TRIMMER CAPACITOR	R55	63-582	100 OHM	60	60	53RD I.F. COIL ASSEMBLY	55	55	3E52 I. F.
C56	22-436	TRIMMER CAPACITOR	R56	63-583	100 OHM	61	61	54TH I.F. COIL ASSEMBLY	56	56	3E53 I. F.
C57	22-437	TRIMMER CAPACITOR	R57	63-584	100 OHM	62	62	55TH I.F. COIL ASSEMBLY	57	57	3E54 I. F.
C58	22-438	TRIMMER CAPACITOR	R58	63-585	100 OHM	63	63	56TH I.F. COIL ASSEMBLY	58	58	3E55 I. F.
C59	22-439	TRIMMER CAPACITOR	R59	63-586	100 OHM	64	64	57TH I.F. COIL ASSEMBLY	59	59	3E56 I. F.
C60	22-440	TRIMMER CAPACITOR	R60	63-587	100 OHM	65	65	58TH I.F. COIL ASSEMBLY	60	60	3E57 I. F.
C61	22-441	TRIMMER CAPACITOR	R61	63-588	100 OHM	66	66	59TH I.F. COIL ASSEMBLY	61	61	3E58 I. F.
C62	22-442	TRIMMER CAPACITOR	R62	63-589	100 OHM	67	67	60TH I.F. COIL ASSEMBLY	62	62	3E59 I. F.
C63	22-443	TRIMMER CAPACITOR	R63	63-590	100 OHM	68	68	61ST I.F. COIL ASSEMBLY	63	63	3E60 I. F.
C64	22-444	TRIMMER CAPACITOR	R64	63-591	100 OHM	69	69	62ND I.F. COIL ASSEMBLY	64	64	3E61 I. F.
C65	22-445	TRIMMER CAPACITOR	R65	63-592	100 OHM	70	70	63RD I.F. COIL ASSEMBLY	65	65	3E62 I. F.
C66	22-446	TRIMMER CAPACITOR	R66	63-593	100 OHM	71	71	64TH I.F. COIL ASSEMBLY	66	66	3E63 I. F.
C67	22-447	TRIMMER CAPACITOR	R67	63-594	100 OHM	72	72	65TH I.F. COIL ASSEMBLY	67	67	3E64 I. F.


ZENITH RADIO CORP.

MODELS 10S491, 10S492
 Chassis 1007
 MODEL 12S494, Ch. 1208
 MODEL 15S495, Ch. 1504
 Phono. Circuit Schematics

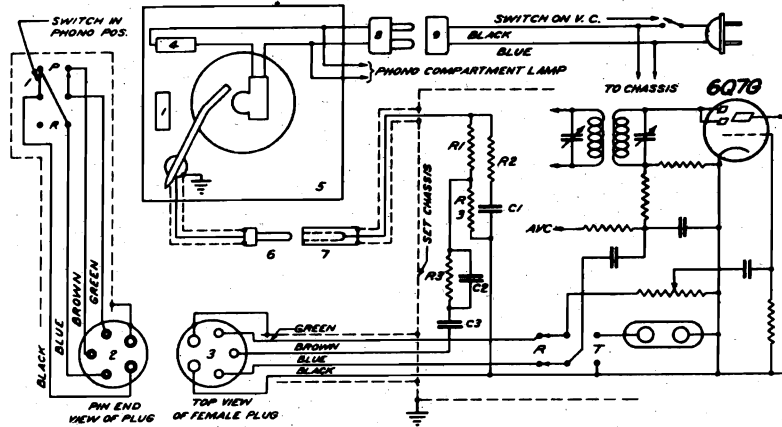


QUA. NO.	PART NO.	DESCRIPTION	
C1	22-319	.005 MFD.	600K
C2	22-354	.0005 MFD.	600K
C3	22-287	.001 MFD.	600K
R1	63-719	470 M OHM	1/4W.
R2	63-649	56 M OHM	1/4W.
R3	63-271	1 MEG OHM	1/4W.
1	S7224	PHONO SW. & WIRE ASSEMBLY	
2	S8070	PLUG & WIRE ASSEMBLY	
3	85-191	A.C. SWITCH	
4	169-36	WEBSTER AUTOMATIC RECORD PLAYER	
5		CINCH "M"-93 PLUG	
6	S8069	RECEPTACLE & WIRE ASSEM.	
7		CINCH "M"-21 PLUG WITH P-7002 CAP. & LINER	
8			
9	S8068	PLUG & WIRE ASSEMBLY	

PHONO CIRCUIT DATA
 MODEL SPEAKER
 10S491 49-356 15"
 10S492 49-352 12"
 CHASSIS NO. 1007

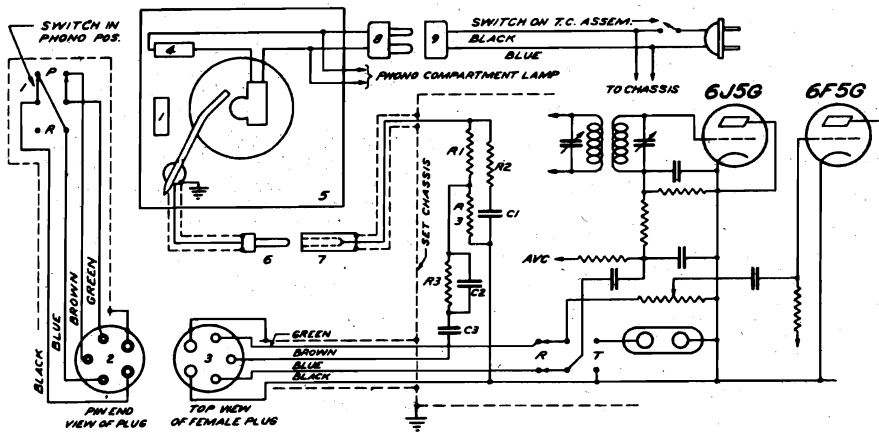

QUA. NO.	PART NO.	DESCRIPTION	
C1	22-319	.005 MFD.	600K
C2	22-354	.0005 MFD.	600K
C3	22-287	.001 MFD.	600K
R1	63-719	470 M OHM	1/4W.
R2	63-649	56 M OHM	1/4W.
R3	63-271	1 MEG OHM	1/4W.
1	S7224	PHONO SW. & WIRE ASSEMBLY	
2	S8094	PLUG & WIRE ASSEMBLY	
3	85-191	A.C. SWITCH	
4	169-36	WEBSTER AUTOMATIC RECORD PLAYER	
5		CINCH "M"-93 PLUG	
6	S8093	RECEPTACLE & WIRE ASSEM.	
7		CINCH "M"-21 PLUG WITH P-7002 CAP. & LINER	
8			
9	S8092	PLUG & WIRE ASSEMBLY	

PHONO CIRCUIT DATA
 MODEL SPEAKER
 12S494 49-355 15"
 CHASSIS NO. 1208

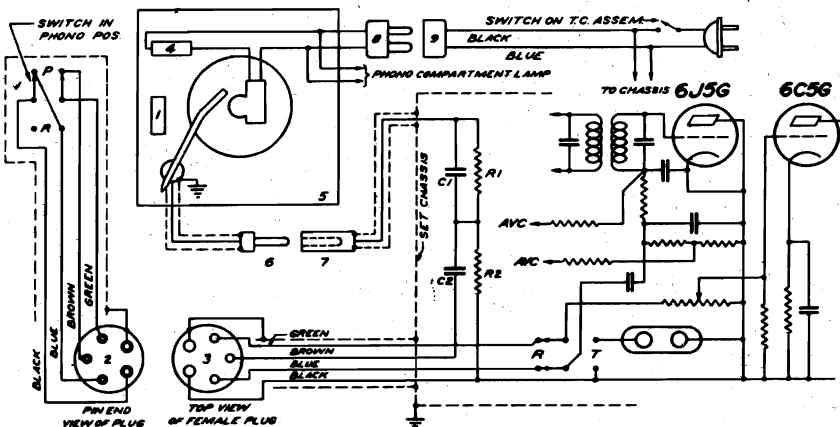

QUA. NO.	PART NO.	DESCRIPTION	
C1	22-182	.0005 MFD.	600K
C2	22-287	.001 MFD.	600K
R1	63-297	470 M OHM	1/4W.
R2	63-649	56 M OHM	1/4W.
1	S7224	PHONO SW. & WIRE ASSEMBLY	
2	S8108	PLUG & WIRE ASSEMBLY	
3	85-191	A.C. SWITCH	
4	169-36	WEBSTER AUTOMATIC RECORD PLAYER	
5		CINCH "M"-93 PLUG	
6	S8107	RECEPTACLE & WIRE ASSEM.	
7		CINCH "M"-21 PLUG WITH P-7002 CAP. & LINER	
8			
9	S8106	PLUG & WIRE ASSEMBLY	

PHONO CIRCUIT DATA
 MODEL SPEAKER
 15S495 49-375 15"
 CHASSIS NO. 1504

MODELS See Below
Alignment, Trimmers, Socket ZENITH RADIO CORP.

Operation	Connect Test Oscillator to	Dummy Antenna	Input Signal Frequency	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	1/2 Mid.	455 Kc.	Broadcast	600 Kc.	A, B, C, D	I. F. Alignment
2	Antenna Post (On Loop)	200 Mmf.	18000 Kc.	S. W.	18000 Kc.	K	Set Oscillator to Scale
3	Antenna Post (On Loop)	200 Mmf.	16000 Kc.	S. W.	16000 Kc.	M	Alignment of Antenna
4	Antenna Post (On Loop)	200 Mmf.	4500 Kc.	Police	4500 Kc.	N	Set Oscillator to Scale
5	Antenna Post (On Loop)	200 Mmf.	4500 Kc.	Police	4500 Kc.	Q	Alignment of Antenna
6	Single Turn Coupled Loosely to Loop		1400 Kc.	Broadcast	1400 Kc.	F	Set Oscillator to Scale
7	Loop Switch in Wave Magnet Position		1400 Kc.	Broadcast	1400 Kc.	G	Alignment of Antenna

Chassis 1005, 1103, 5808

Operation	Connect Test Oscillator to	Dummy Antenna	Input Signal Frequency	Band	Loop Switch	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	1/2 Mid.	455 Kc.	Broadcast		600 Kc.	A, B, C, D	I. F. Alignment
2	Antenna Post (On Loop)	200 Mmf.	18000 Kc.	S. W.	Ant.	18000 Kc.	K	Set Oscillator to Scale
3	Antenna Post (On Loop)	200 Mmf.	16000 Kc.	S. W.	Ant.	16000 Kc.	L-M	Alignment of Det.—Rock Gang & Adjust for Max.
4	Antenna Post (On Loop)	200 Mmf.	4500 Kc.	Police	Ant.	4500 Kc.	N	Rock Gang & Adjust for Max. Output
5	Antenna Post (On Loop)	200 Mmf.	4500 Kc.	Police	Ant.	4500 Kc.	Q	Alignment of Antenna
6	Single Turn Coupled Loosely to Loop		1400 Kc.	Broadcast	Wave Magnet	1400 Kc.	F	Set Oscillator to Scale
7	Single Turn Coupled Loosely to Loop		1400 Kc.	Broadcast	Wave Magnet	1400 Kc.	H	Alignment of R. F.
8	Single Turn Coupled Loosely to Loop		1400 Kc.	Broadcast	Wave Magnet	1400 Kc.	G	Alignment of Loop
9							J	Adjusted at Factory

Chassis 1207, 1603
*1503 TRIMMERS: A1, B1, A2, B2, A3, B3

Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	1/2 mfd.	455	Br'dc't	600	A B C D	I. F. Alignment
2	Rec. Ant. Wire	400 ohms	18000	S. W.	18000	K	Set. Osc. to Scale
3	" " "	400 ohms	16000	S. W.	16000	L	Rock gang & adj. for max. output Alignment of Ant.
4	" " "	400 ohms	6000	Police	6000	N	Rock gang & adj. for max. output
5	" " "	200 mmf.	1400	Br'dc't	1400	F	Rock gang & adj. for max. output
6	" " "	200 mmf.	600	"	600	J	Rock gang & adj. for max. output
7	" " "	200 mmf.	"	"	"	Repeat F & J	Chassis 5539


Operation	Connect Test Oscillator to	Dummy Antenna	Input Signal Frequency	Band	Set Dial At	Adjust Trimmers	Purpose
1	6D8 R. F. Grid	0.5 Mfd.	455 Kc.	I. F.	600 Kc.	A, B, C, D	I. F. Alignment
2	Rec. Ant. Post	200 Mfd.	1500 Kc.	Broadcast	1500 Kc.	F	Set Oscillator to Scale
3	Rec. Ant. Post	200 Mfd.	1500 Kc.	Broadcast	1500 Kc.	G	Alignment of Antenna
4	Rec. Ant. Post	200 Mfd.	600 Kc.	Broadcast	600 Kc.	J	Rock Gang and Adjust for Max. Output
5	Rec. Ant. Post	200 Mfd.		Broadcast		F, G	Repeat 2 and 3
6	Rec. Ant. Post	400 Ohms	18000 Kc.	S. W.	18000 Kc.	K	Set Oscillator to Scale
7	Rec. Ant. Post	400 Ohms	16000 Kc.	S. W.	16000 Kc.	L	Rock Gang and Adjust for Max. Output
8	Rec. Ant. Post	400 Ohms	6000 Kc.	Police	6000 Kc.	N	Rock Gang and Adjust for Max. Output

Chassis 5679


Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	5 mfd.	455	B'dc't	600	A B C D	I. F.
2	Single *x Turn Coil	—	1500	"	1500	F	Set Osc. to Scale
3	" "	—	1500	"	1500	On Wave Magnet	Alignment of Wave Magnet
4	Rec. Ant. Post **	400 ohms	18000	S.W.#2	18000	K	Set Osc. to Scale
5	" "	"	16000	"	16000	L	Rock gang & adj. for max. output
6	" "	"	4.500	S.W.#1	4.500	N	"

* Loosely coupled to Wave Magnet
x Switch in Wave Magnet Position
** Switch in Antenna Position


CHASSIS 5719, 5721, 5810.

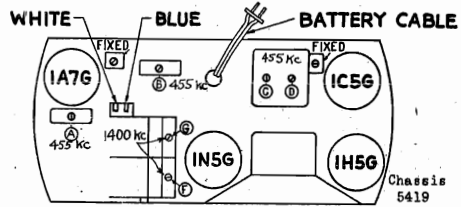


(FRONT)

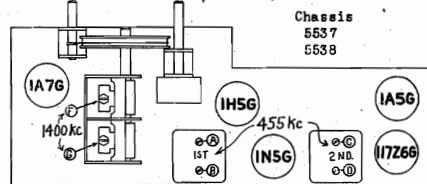

(REAR)

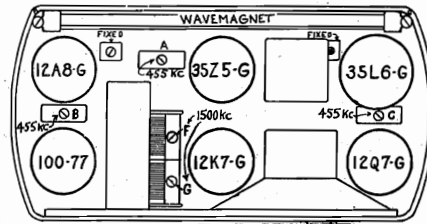

Chassis 5659 & 5663, 5660 & 5664

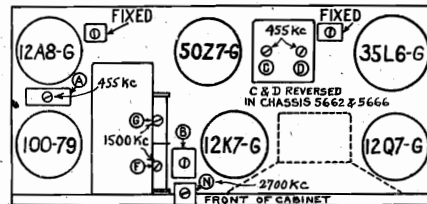

Chassis 5661 & 5665, 5662 & 5666

ALIGNMENT PROCEDURE


Chassis 5419, 5537, 5538
5659 & 5663, 5660 & 5664
5661 & 5665, 5662 & 5666

Set dial at 600 kc; connect 0.5-mf dummy to 1st det. grid and align I.F. at 455 kc.

Connect test oscillator to single-turn loop loosely coupled to Wave Magnet.

Set receiver dial to aligning frequency and adjust trimmers to maximum as follows:

- (1) Osc. trimmer F
- (2) Ant. trimmer G
- (3) S-W trimmer N

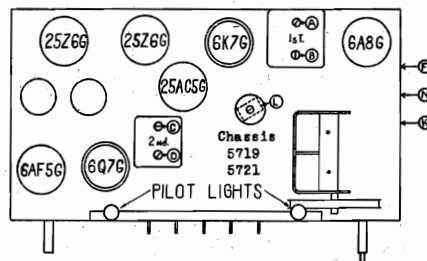

ZENITH RADIO CORP.

CHASSIS 1005, 1103, 1207, 1503
 5539, 5660, 5664, 5662, 5666
 5672P, 5678, 5679, 5719, 5721
 5724, 5725, 5808 Tuner

AUTOMATIC TUNING ADJUSTMENTS

GENERAL:

Each button and its associated tuning adjustment will tune over a portion of the broadcast band, and any station within its tuning range may be selected for automatic tuning on that button.

To adjust the automatic tuning proceed as follows:

PRELIMINARY OPERATIONS:

For Chassis 1005, 1103, 5679, 5808:

Remove the automatic cover plate by pressing the catch pin on the inner side and lifting away from the escutcheon.

Place sensitivity switch in LOCAL position.

Select a station within the range of the No. 1 button. See list of frequency ranges at right.

Turn the band switch to Broadcast and then tune in the selected station on the dial - then turn band switch to Automatic position.

TUNING RANGES of BUTTONS:

No. 1 button—upper left 545 K.C. to 940 K.C.
No. 2 button—upper center	... 600 K.C. to 1050 K.C.
No. 3 button—upper right	... 660 K.C. to 1150 K.C.
No. 4 button—lower left 740 K.C. to 1300 K.C.
No. 5 button—lower center	... 880 K.C. to 1550 K.C.
No. 6 button—lower right	... 880 K.C. to 1550 K.C.

For Chassis 1207, 1503:

Remove the automatic cover plate by pressing on latch pin and lifting away from escutcheon.

Select a station within the range of the No. 1 button. See list of frequency ranges at right.

Turn the band switch to Broadcast and then tune in the selected station on the dial - return band switch to Automatic position.

No. 1 button.....	545 K.C. to 850 K.C.
No. 2 "	620 K.C. to 970 K.C.
No. 3 "	620 K.C. to 970 K.C.
No. 4 button.....	680 K.C. to 1090 K.C.
No. 5 "	790 K.C. to 1290 K.C.
No. 6 "	790 K.C. to 1290 K.C.
No. 7 button.....	980 K.C. to 1550 K.C.
No. 8 "	980 K.C. to 1550 K.C.

For Chassis 5539, 5678, 5719, 5721, 5724, 5725:

Remove the automatic cover plate by gently lifting it under one end.

Select a station within the range of the No. 1 button. See list of frequency ranges at right.

Turn the band switch to Broadcast and then tune in the selected station on the dial.

No. 1 or left hand button	545 K.C. to 930 K.C.
No. 2 or second button	600 K.C. to 1050 K.C.
No. 3 or third button	650 K.C. to 1200 K.C.
No. 4 or fourth button	750 K.C. to 1370 K.C.
No. 5 or right hand button	900 K.C. to 1550 K.C.

For Chassis 5660 & 5664, 5662 & 5666, 5672-P:

Remove the automatic cover plate by gently lifting it under one end.

Select a station within the range of the top or No. 1 button. See list of frequency ranges at right.

Press the lowest or "Dial" button, and then tune in the selected station on the dial.


1 or top button	— 545 K.C. to 1040 K.C.
2 or second button	— 620 K.C. to 1170 K.C.
3 or third button	— 720 K.C. to 1370 K.C.
4 or fourth button	— 850 K.C. to 1550 K.C.
5 or bottom button	— Dial or manual tuning.

ADJUSTMENT PROCEDURE - ALL Chassis:

Press the No. 1 button and tune in the same station on the adjacent automatic adjustments by using the special wrench furnished with the receiver. First, adjust the screw and then the hexagonal nut to the setting which gives the loudest and clearest reception on the desired station (See Fig. 2). Repeat the operation for greatest accuracy.

Select and remove the call letters of the station selected from call letter sheets in this booklet. Moisten the rear surface and place in position on the automatic cover plate opposite the corresponding button.

Follow the above procedure in setting remaining buttons, always selecting a station within the range of the button being set.

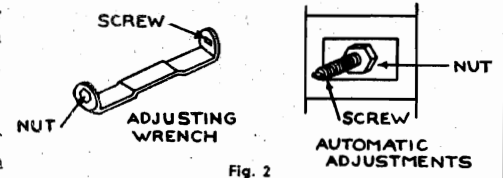

CHASSIS See Below
Tuner Data, Notes

ZENITH RADIO CORP.

ALIGNMENT

ZENITH 6MN495
ZENITH 6MN496

NASH SPECIAL AC 4389
NASH DELUXE AC 4289

We would suggest that the service man procure a 3/16" box wrench (small size) for removing the cap screws from the grille of the car.

The volume control is placed in the maximum position, and the tone control in the brilliant position for all the following adjustments:

A weak signal at 455 K.C. is fed directly into the grid cap of the 6K7GY RF. tube through a .1 mfd condenser. The wave trap trimmer, E (see Fig. 1 and 2) is adjusted for maximum response. The L.F. trimmers are then adjusted in the following order A, B, C and D, for greatest output. The signal level is then increased double or more and the wave trap trimmer, E, see Fig. 1 and 2, is adjusted to minimum response on the output meter.

IMPORTANT — Unless certain dummy antenna capacities are employed with either the signal generator, or in making the adjustments on stations a receiver will not respond properly. The capacities provided in the Zenith dummy antenna part No. S7684 shown in Fig. 3 are identical with the conditions found in the Nash car, and if adjusted accordingly, the instrument will operate properly when reinstalled in the automobile.

R.F. — The tuning condenser is rotated until the plates are completely out of mesh (1800 K.C.) Set the signal generator to 1800 K.C. Remove the generator leads from the R.F. tube, remove the .1 mfd. condenser from the leads, and connect the leads to a Zenith dummy antenna, part No. S-7684 to the antenna socket on the receiver. The high frequency oscillator trimmer F (See Fig. 4) is then pecked for maximum response on the output meter. Reset the signal generator to 1400 K.C., rotate the tuning control until a signal is heard, and adjust the 1400 antenna trimmer G (Fig. 4) for maximum response.

Reset the signal generator to 800 K.C. and rotate the tuning control until a signal is heard. The condenser gang is then rocked slightly when adjusting the 800 K.C. oscillator paddler H (see Fig. 4) to maximum resonance on the output meter.

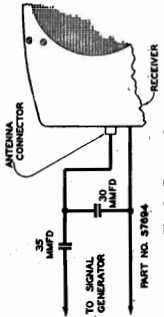


Fig. 3. Dummy Antenna

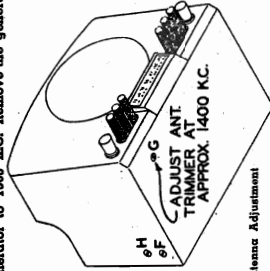


Fig. 4. Antenna Adjustment

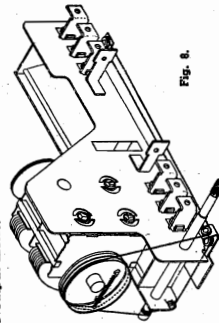


Fig. 6.

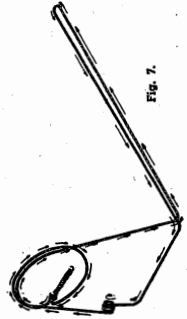


Fig. 7.

Figures 7 and 8 show how the dial cable is strung on both receivers.

AUTOMATIC TUNING — The automatic tuning mechanism, being entirely mechanical and extremely simple in construction, will require no attention except the original adjustments for the desired stations. It consists of push rods which operate a cam and gear assembly which rotates the tuning condenser to any prearranged position. Each automatic button or push rod may be set for any station in the tuning range of the receiver. To set the automatic buttons, first select six desired stations. Unscrew the left hand automatic button one-half turn and press all the way in. While holding the button in this position, manually tune in the selected station of lowest frequency. Then release the button and tighten. This button will then automatically tune this station whenever it is pushed in. The same procedure should be followed on the five remaining buttons and stations. The station which has been tuned automatically will be followed by the dial pointer.

SERVICE NOTES

GENERAL:

- Noisy when keyed — orange resistor on loop loading coil grounding against chassis.
- Broken or loose leads in 6U5 socket.
- Black wire on S.W. antenna coil not grounded properly to aeroplane terminal.
- Noisy waveband — rubber insulation of loop lead touching trimmer lug, antenna terminal, or other end of loop winding. Noise will be most noticeable at higher frequencies.
- Poor connection to loop shield.
- CHASSIS 5808 — 1005 — 1103
- Oscillates at 550 K.C. — improper adjustment of wave trap — too high resistance in plate circuit of 12B3 tube.
- Automatic dead or antenna trimmer won't peak — usually due to open winding on compensating coil.
- Noisy tuning — Ground braid of gang rubbing against flywheel — Burs on drive shaft shorting to volume control shaft.
- Dial pulley rubbing against dial or chassis.
- Tuning indicator inoperative — resistor inside socket shorting to socket prong — loose lead in socket — cathode lug on voltage divider grounded by solder.
- Set bjacks — usually due to broken resistor in A.V.C. circuit of first detector.

CHASSIS 5724 — 5725

- Noisy tuning on automatic.
- Poor contact in speaker socket.
- Washer on latch bar grounding lug.
- Poor contact on band switch.
- Aeroplane lug on automatic grounding to No. 5 push rod.
- Automatic trimmer shorting.
- Signal cuts out above 1400 K.C.
- 5 megohm resistor screwed in too tight.
- Signal cuts out on local — distance switch.
- PHONO MODELS 6A4 tube.
- Insensitivity — check phono switch and plug contacts.
- Weak phono — check shield on lead from crystal for poor ground.
- 1205 — 1503 CHASSIS
- Improper action of volume control is usually caused by 6J5G in audio stage.
- Poor rotor action is often caused by defective 6F8C in audio.
- In many cases a ground lead may be eliminated by connecting the ground terminal on the wave-magnet to the chassis base.
- The operation of the bass radiator button in chassis 5719-5721 can often be improved by connecting a 1 megohm resistor from the high side of the volume control to the tap on same.
- Noisy operation of the automatic tuning may be caused by the leads to the automatic assembly or coil leads laying against the metal frame of the assembly.
- Excessive oscillation in Model 4K401 will be caused by the 1K7 tube which should be replaced.
- Motorboating in Model 4K401 will be due to a poor ground connection on the electrolytic condenser at the rivet which knishes it to the chassis.
- Care should be taken that the leads from the tone control condenser and switch in all six tube bakelite models be kept away from the 6Q7 tube, otherwise the tone will be affected.
- Excessive hum in AC-DC or voltage doubler chassis can be corrected by reversing the power plug in the light socket.
- Cutting out in the portable receivers will usually be due to poor connections at the battery pack plug.
- Slight bending of the prongs will correct this condition.
- Excessive regeneration in 5659 chassis may be corrected in most cases by moving the 12A8G grid lead away from the oscillator section of the gang condenser.


AUTOMATIC RANGES

Button No. 1	tunes from 550 K.C. to 950 K.C.
" 2	" 600 K.C. " 1100 "
" 3	" 650 K.C. " 1200 "
" 4	" 730 K.C. " 1300 "
" 5	" 900 K.C. " 1550 "

The use of a wave-magnet requires two adjustments for each automatic button. These adjustments are made with a special wrench (part No. 68-1) supplied with each receiver. The center or screw adjustment controls the oscillator circuit and the nut tunes the wave-magnet or antenna input — see illustration at right.

The minimum tuning range covered by each pair of adjustments is shown above and will usually exceed the frequencies shown.

The adjustments covering the highest frequency range is in all cases either at the bottom when the buttons are vertical or closest to the band switch when the buttons are arranged horizontally.



MODEL 25B5


Schematic

MODEL 43X5

Schematic, Socket

ZEPHYR RADIO CO.

MODEL 25B5 5 TUBE SKIP-BAND SUPERHETERODYNE RECEIVER
6 VOLT BATTERY OPERATED

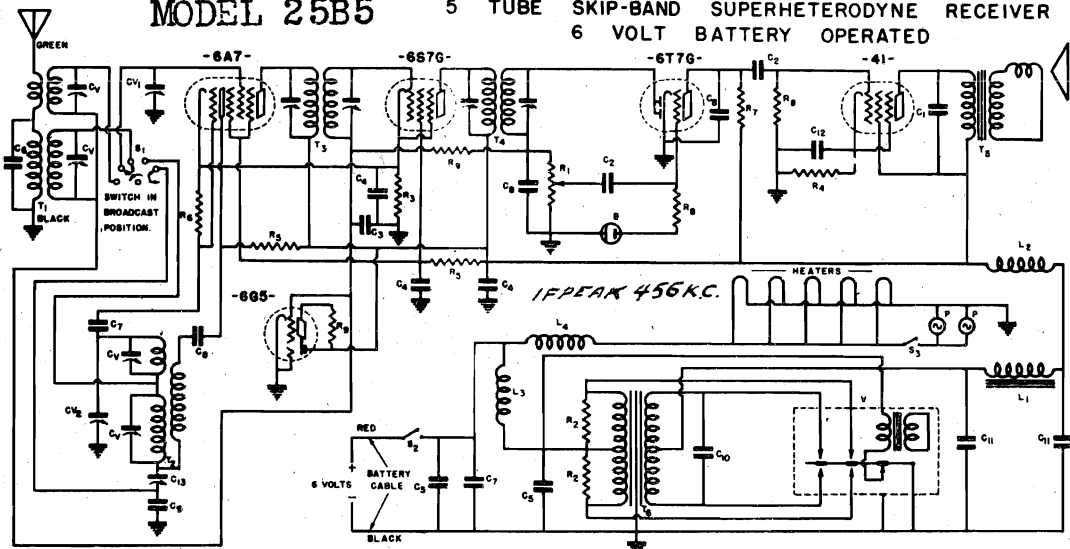


LEGEND	OUR PART NO.	DESCRIPTION
C1	E18	.005 MFD. 600 V. TUBULAR CONDENSER
C2	E11	.01 MFD. 400 V. TUBULAR CONDENSER
C3	E03	.1 MFD. 200 V. TUBULAR CONDENSER
C4	E04	.25 MFD. 200 V. TUBULAR CONDENSER
C5	E17	.5 MFD. 100 V. TUBULAR CONDENSER
C6	A12	50 MMFD. MICA CONDENSER
C7	E00	100 MMFD. MICA CONDENSER
C8	A01	250 MMFD. MICA CONDENSER
C9	A11	.0018 MFD. MICA CONDENSER
C10	E19	.01 MFD. 3000V.V. OIL FILLED BUFFER COND.
C11	E24	8 MFD. 250 WV WET ELECTROLYTIC COND.
C12	E04	10 MFD. 250 WV WET ELECTROLYTIC COND.
C13	E07	5 PLATE PADDING CONDENSER

CV1-2	6E-A	5 GANG VARIABLE CONDENSER
CV	500	5-30 MMFD. TRIMMER CONDENSER
T1	E25	SKIP-BAND ANTENNA COIL
T2	I412	SKIP-BAND OSCILLATOR COIL
T3	I503	INPUT L.F. TRANSFORMER
T4	I507	DIODE L.F. TRANSFORMER
T5	A13	5" P.M. DYNAMIC SPEAKER TRANSFORMER
T6	I018	VIBRATOR TRANSFORMER
S1	I920	BAND SELECTOR SWITCH
S2	---	LIME SWITCH ON VOLUME CONTROL
S3	---	PILOT LIGHT SPRING SWITCH
F	E901	MAZDA #40 PILOT LIGHTS
V	E201	PLUMB IN VIBRATOR
B	3000	BIAS CELL

R1	2000A	500,000 OHM VOLUME CONTROL
R2	I48	100 OHM 1/2 WATT CARBON RESISTOR
R3	I01	150 OHM 1/2 WATT CARBON RESISTOR
R4	I04	600 OHM 1/2 WATT CARBON RESISTOR
R5	I09	10,000 OHM 1/2 WATT CARBON RESISTOR
R6	I13	30,000 OHM 1/2 WATT CARBON RESISTOR
R7	I16	250,000 OHM 1/2 WATT CARBON RESISTOR
R8	I17	500,000 OHM 1/2 WATT CARBON RESISTOR
R9	I19	1 MEGOHM 1/2 WATT CARBON RESISTOR
L1	I100	FILTER CHOKE
L2	I518	R.F. "B" CHOKE
L3	I610	R.F. "A" CHOKE
L4	I620	R.F. "A" CHOKE


2 BAND AC-DC OPERATED RECEIVER

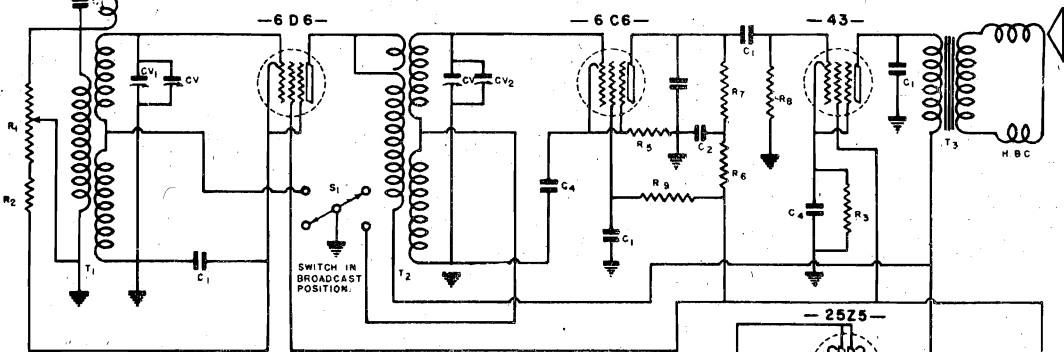

MODEL 43X5


LEGEND	OUR PART NO.	DESCRIPTION
R1	2000A	10,000 OHM VOLUME CONTROL
R2	I48	275 OHM (Minimum on Volume Control)
R3	I04	600 OHM 1/2 WATT CARBON RESISTOR
R4	I08	3000 OHM 1/2 WATT CARBON RESISTOR
R5	I11	25,000 OHM 1/2 WATT CARBON RESISTOR
R6	I42	51,000 OHM 1/2 WATT CARBON RESISTOR
R7	I16	250,000 OHM 1/2 WATT CARBON RESISTOR
R8	I17	500,000 OHM 1/2 WATT CARBON RESISTOR
R9	I20	3 MEGOHM 1/2 WATT CARBON RESISTOR
R10	E204	L-55-C BALLAST TUBE
T1	I204	ANTENNA COIL
T2	I316	INTERSTAGE COIL
T3	I308	OUTPUT TRANSFORMER

F	I308	SPEAKER FIELD (2500 OHMS)
C1	E211	.01 MFD. 400 V. TUBULAR CONDENSER
C2	E216	.018 MFD. 400 V. TUBULAR CONDENSER
C3	E210	.1 MFD. 400 V. TUBULAR CONDENSER
C4	I8	5 MFD. 35 V. ELECTROLYTIC COND.
C5	I8	4 MFD. 200 V. ELECTROLYTIC COND.
C6	I8	8 MFD. 200 V. ELECTROLYTIC COND.
C7	I8	14 MFD. 200 V. ELECTROLYTIC COND.
S1	I919	BAND SWITCH
CV1-2	E15	2 GANG VARIABLE CONDENSER
S2	I308	SWITCH ON VOLUME CONTROL
P	E202	MAZDA #44 PILOT LIGHTS

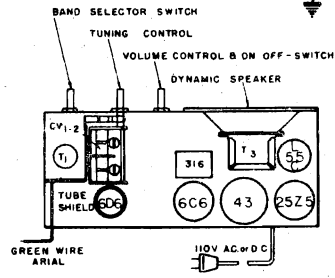


MODELS 35X5, 36X5
 MODEL 40X4
 Schematics, Socket
 MODEL 40Y6
 Schematic, Voltage

ZEPHYR RADIO CO.

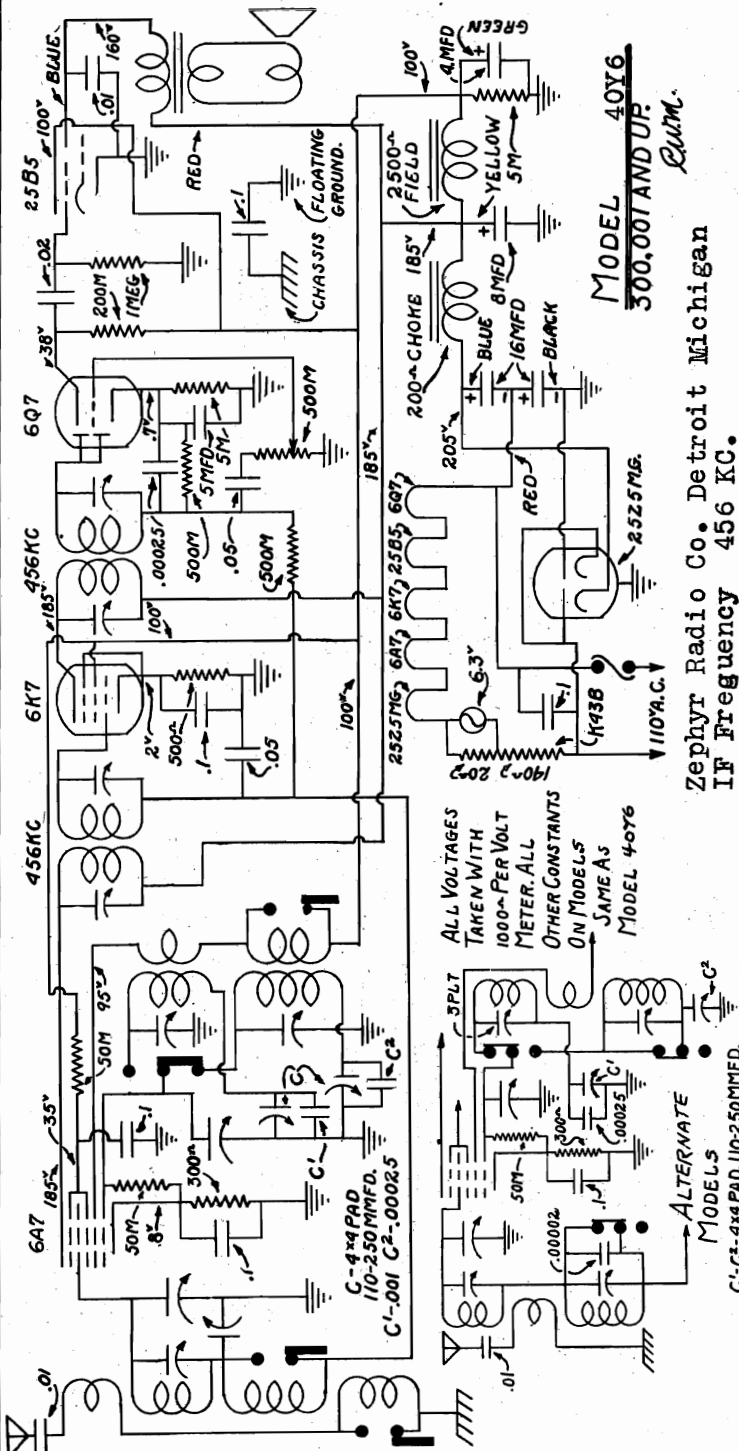

Zephyr Radio Co. Detroit Michigan
 IF Frequency 456 KC.

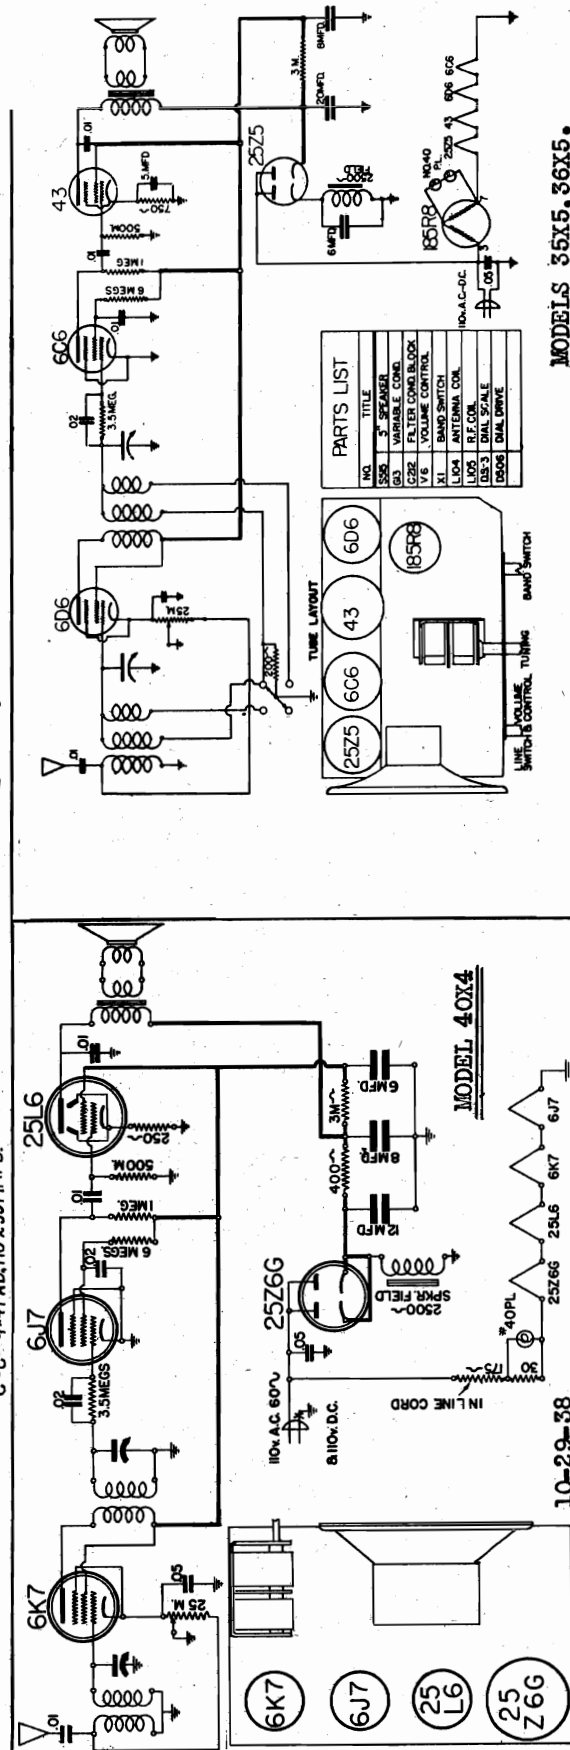



PARTS LIST

NO.	TITLE
100	3" SPEAKER
101	VARIABLE COND.
102	500M. CAP.
103	500M. CAP.
104	500M. CAP.
105	500M. CAP.
106	500M. CAP.
107	500M. CAP.
108	500M. CAP.
109	500M. CAP.
110	500M. CAP.
111	500M. CAP.
112	500M. CAP.
113	500M. CAP.
114	500M. CAP.
115	500M. CAP.
116	500M. CAP.
117	500M. CAP.
118	500M. CAP.
119	500M. CAP.
120	500M. CAP.
121	500M. CAP.
122	500M. CAP.
123	500M. CAP.
124	500M. CAP.
125	500M. CAP.
126	500M. CAP.
127	500M. CAP.
128	500M. CAP.
129	500M. CAP.
130	500M. CAP.
131	500M. CAP.
132	500M. CAP.
133	500M. CAP.
134	500M. CAP.
135	500M. CAP.
136	500M. CAP.
137	500M. CAP.
138	500M. CAP.
139	500M. CAP.
140	500M. CAP.
141	500M. CAP.
142	500M. CAP.
143	500M. CAP.
144	500M. CAP.
145	500M. CAP.
146	500M. CAP.
147	500M. CAP.
148	500M. CAP.
149	500M. CAP.
150	500M. CAP.
151	500M. CAP.
152	500M. CAP.
153	500M. CAP.
154	500M. CAP.
155	500M. CAP.
156	500M. CAP.
157	500M. CAP.
158	500M. CAP.
159	500M. CAP.
160	500M. CAP.
161	500M. CAP.
162	500M. CAP.
163	500M. CAP.
164	500M. CAP.
165	500M. CAP.
166	500M. CAP.
167	500M. CAP.
168	500M. CAP.
169	500M. CAP.
170	500M. CAP.
171	500M. CAP.
172	500M. CAP.
173	500M. CAP.
174	500M. CAP.
175	500M. CAP.
176	500M. CAP.
177	500M. CAP.
178	500M. CAP.
179	500M. CAP.
180	500M. CAP.
181	500M. CAP.
182	500M. CAP.
183	500M. CAP.
184	500M. CAP.
185	500M. CAP.
186	500M. CAP.
187	500M. CAP.
188	500M. CAP.
189	500M. CAP.
190	500M. CAP.
191	500M. CAP.
192	500M. CAP.
193	500M. CAP.
194	500M. CAP.
195	500M. CAP.
196	500M. CAP.
197	500M. CAP.
198	500M. CAP.
199	500M. CAP.
200	500M. CAP.

MODELS 35X5, 36X5.


ZEPHYR RADIO CO.

MODEL 62P
MODEL 62X8
Schematics, Socket

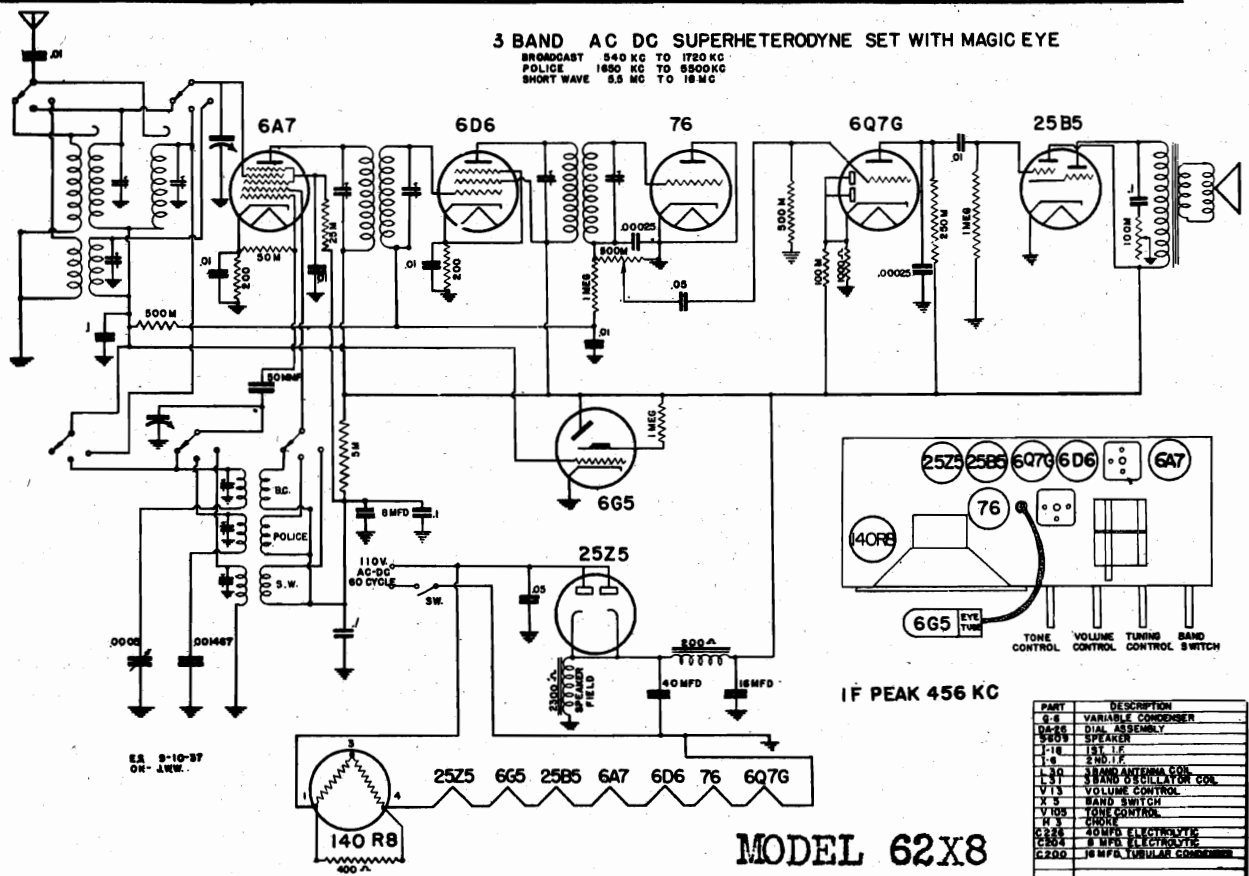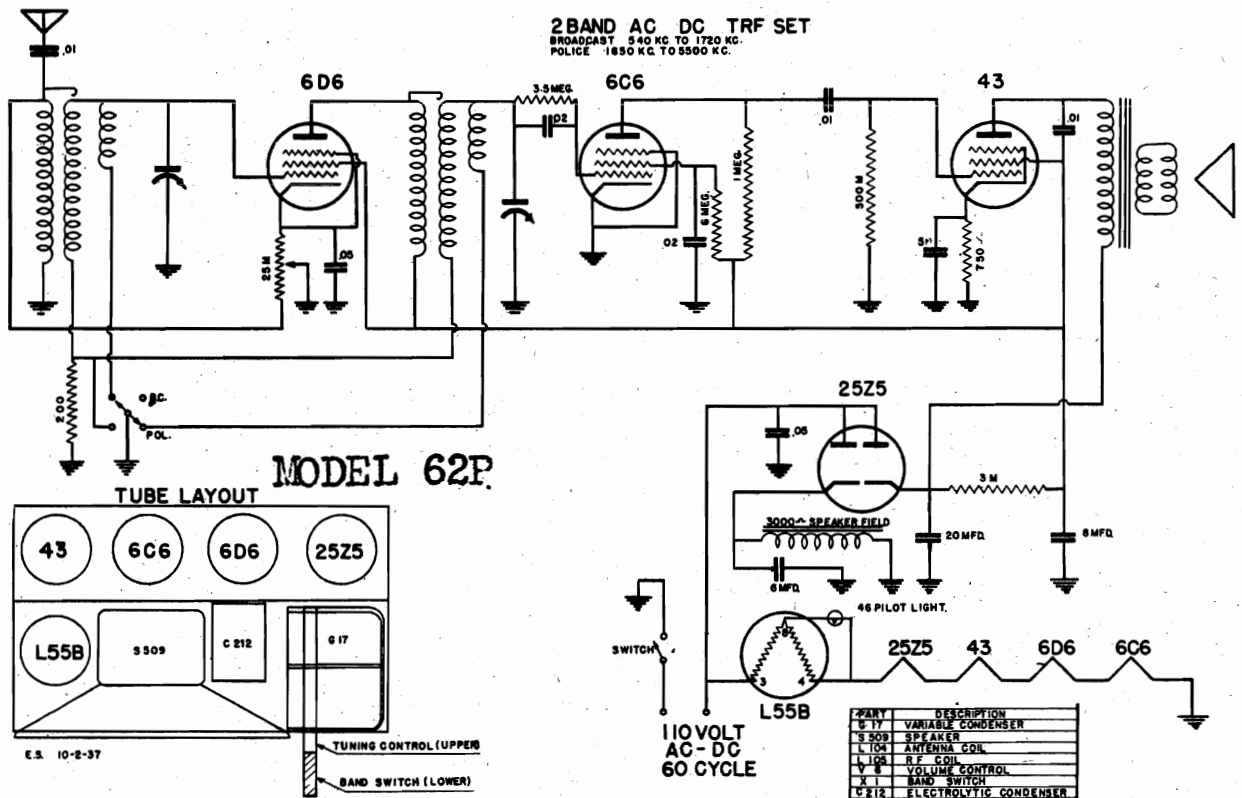

MODEL 153-5L
MODEL 352-5R
Schematics, Voltage
Alignment

ZEPHYR RADIO CO.

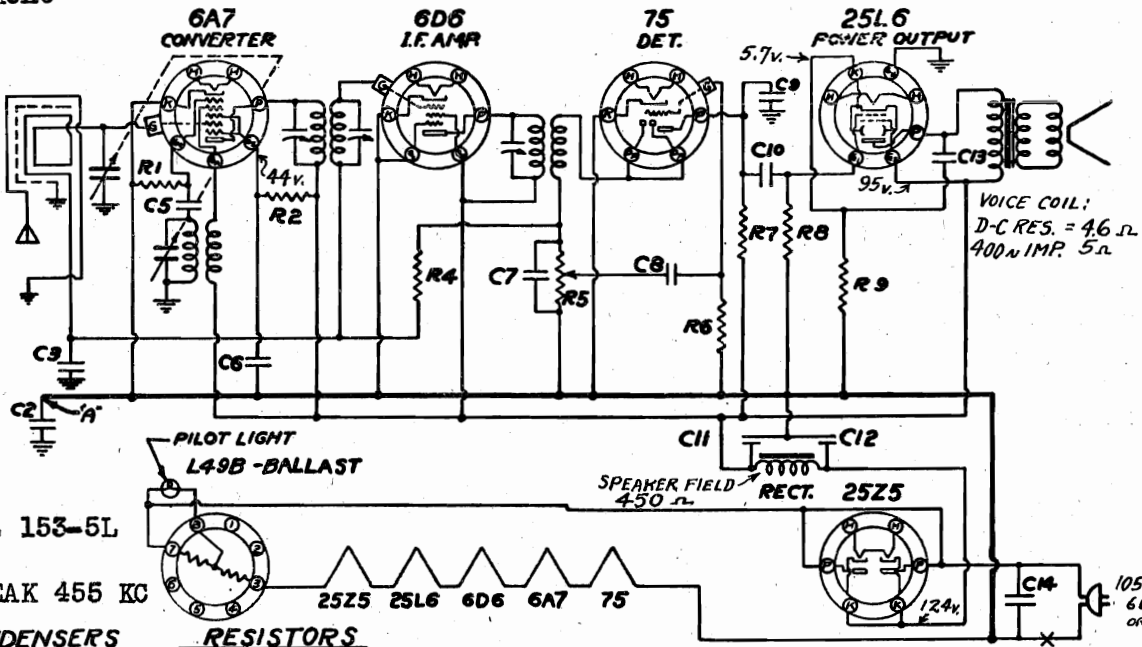

MODEL 153-5L
IF PEAK 455 KC

CONDENSERS	
N ^o	MFD. VOLTS
C2	.25 200
C3	.02 400
C5	.00005 MICA
C6	.05 400
C7	.00025 MICA
C8	.01 400
C9	.00025 MICA
C10	.01 400
C11	20. 150
C12	20. 150
C13	.005 600
C14	.05 400

RESISTORS	
N ^o	OHMS WATTS
R1	50000 1/2
R2	30000 1/2
R4	2000000 1/2
R5	500000 VOL CONT
R6	5000000 1/2
R7	250000 1/2
R8	500000 1/2
R9	150 1/2 ±10%

VOLTAGES: Line 115 v. AC; meter 1000 ohms per volt.


POWER CONSUMPTION: 44 watts.

CONVENTIONAL ALIGNMENT TRIM OSC. - 1730 KC
SEE SPECIAL SECTION TRIM ANT. - 1400 KC
VOLUME VIII

FOR SOCKET LAYOUT
SEE INDEX

NOTE: C2 USED ON MODEL 5LL ONLY.
ON MODEL 5L POINT 'A' IS CONNECTED TO CHASSIS

MODEL 352-5R

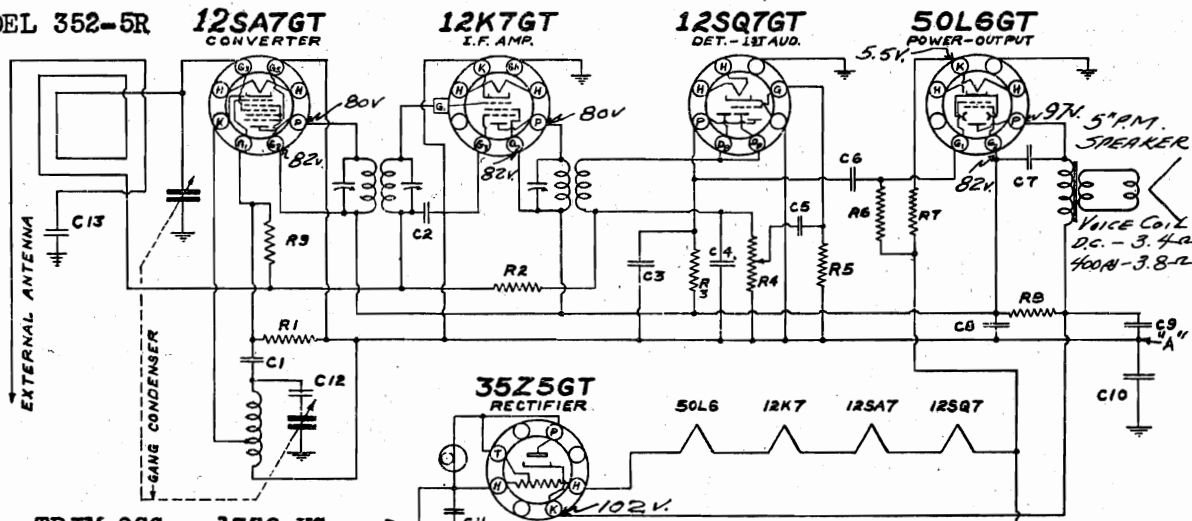

TRIM OSC - 1730 KC
TRIM ANT - 1400 KC

IF PEAK 455 KC

FOR OTHER DATA
SEE INDEX

RESISTORS		CAPACITORS	
N ^o	OHMS WATTS	N ^o	MFD. VOLTS
R1	20,000 1/2	C1	.0001 MICA
R2	2 MEG 1/2	C2	.02 400
R3	250,000 1/2	C3	.0505 MICA
R4	500,000 V.C 1/2	C4	.00025 MICA
R5	5 MEG. 1/2	C5	.01 400
		C6	.002 600
		C7	.01 400
		C8	30.0 150
		C9	30.0 150
		C10	.25 200
		C11	.05 400
		C12	.02 400
		C13	.001 600

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII

C10 and C14 used in model 5RL only On model 5R point "A" is connected to ground.
Voltages: From point indicated to "A"; line 115 v. AC; meter 1000 ohms per volt - 150-volt scale. Power consumption: 30 watts.

MODELS 666-6J-669-6J inc.
 MODELS 696-6M, 697-6M
 Socket, Trimmers

ZEPHYR RADIO CO.


MODEL 381-7H
 MODEL 605-7C
 Tuner, Socket, Trimmers
 MODEL 153-5L

**PROCEDURE FOR SETTING UP
 PUSH BUTTONS**

FOR MODELS 381 - 7H and 605 - 7C

There are six push buttons by means of which six stations may be selected (See Fig. 1). Make a list of six stations tuned in regularly. Push the tuning knob to the right until it clicks, this throws it out of engagement with the dial drum, thus when the push buttons are used the tuning knob does not turn. (A slight turn of the knob will automatically throw it back into engagement with the dial drum for manual tuning.)

Fig. 1—Front View

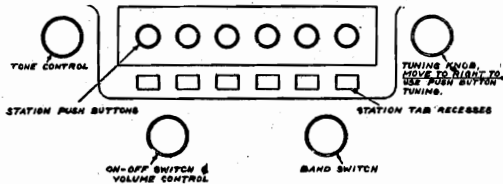






Loosen one of the push buttons by turning the push button knob counter clockwise a turn or less and push it in; while holding the button in, tune in a desired station by means of the station selector wheel. Turn the selector very slowly back and forth until the signal is clearest. Now while holding the push button in, tighten it by turning clockwise. Release the push button and turn the station selector to one end of the dial; push the tuning knob to the right and then check the button by pushing it in and if the station is tuned to the center of the area on the dial covered by the station the adjustment is correct.

Release the push button and loosen another push button and repeat the above procedure, doing this for the remaining buttons.

If it is desired to change a button to a different station simply loosen the push button and re-set.


Punch the correct station call letter tabs from the set of sheets supplied and insert them into the recesses under the push buttons.

The dial is now set up for quick tuning and all that is necessary is to push the tuning knob to the right until it clicks and then push the button above the desired station all the way in and then release.

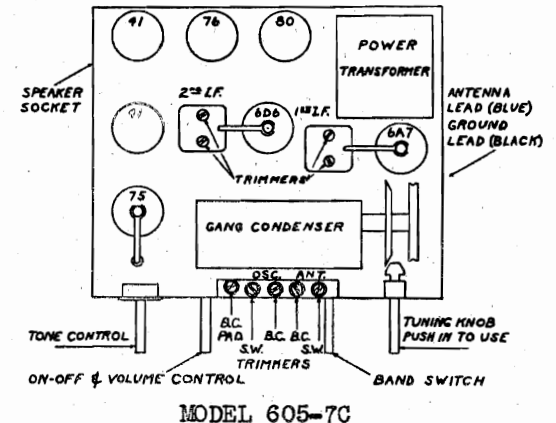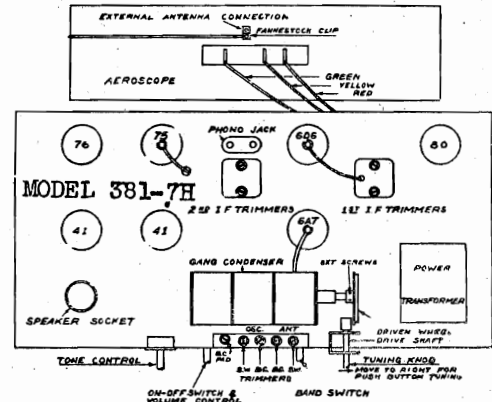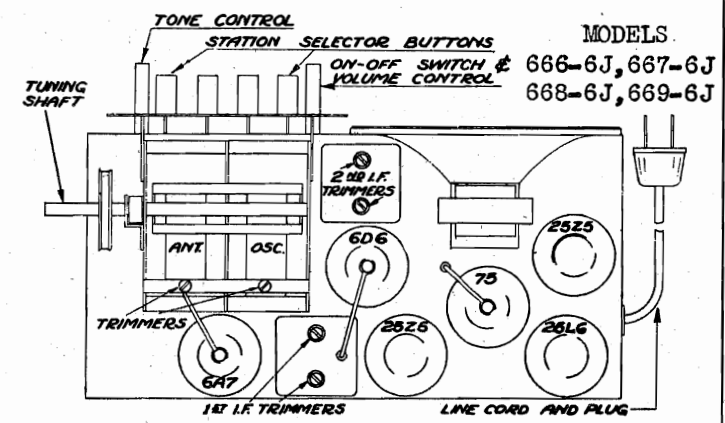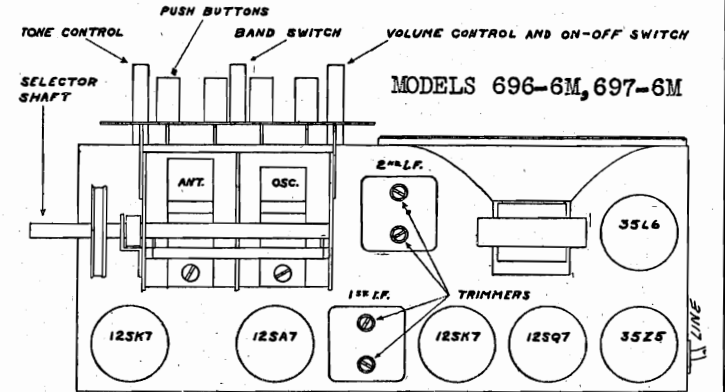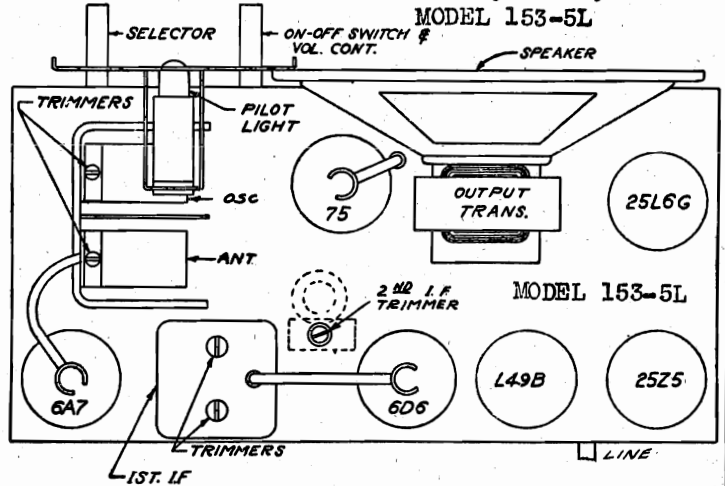

MODEL 381-7H
 MODEL 605-7C
 Schematics, Voltage
 Alignment

ZEPHYR RADIO CO.

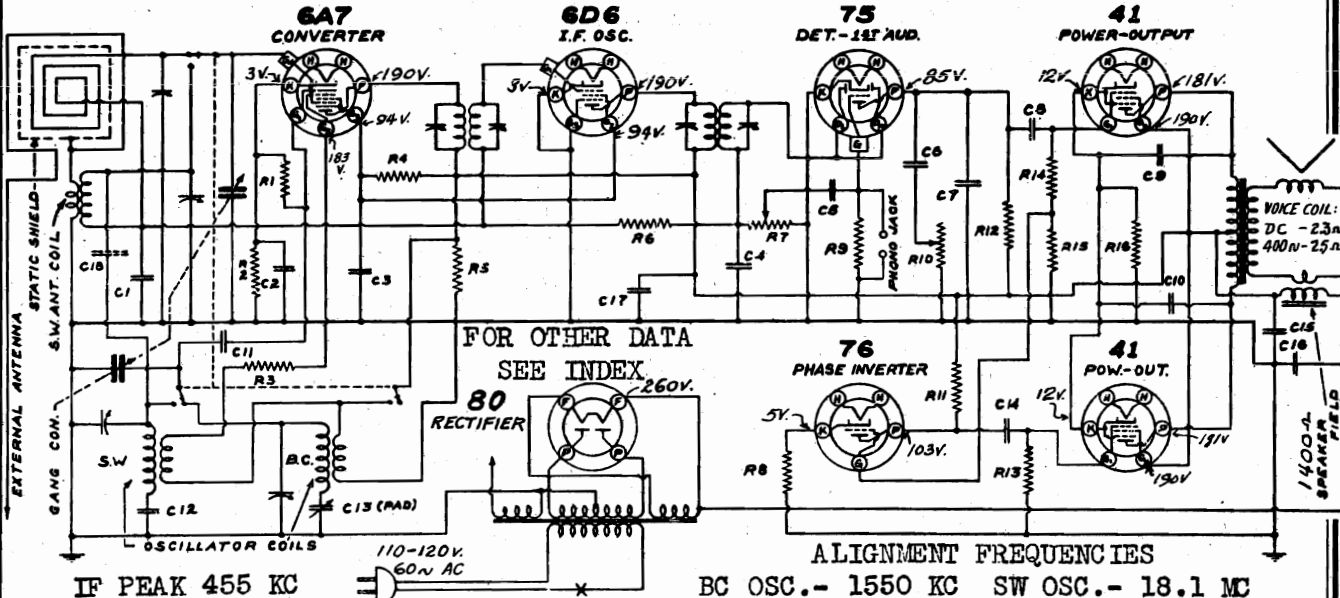

IF PEAK 455 KC
 SWITCHES SHOWN IN BROADCAST POSITION
 BOTTOM VIEW OF SOCKETS SHOWN.

MODEL 381-7H

GANG CONDENSER CAPACITY 443 μ Fds.


No.	MFDS	VOLTS	No.	MFDS	VOLTS
C1	.05	200	C10	.005	600
C2	.25	200	C11	.0001	MICA
C3	.05	400	C12	.004 \pm 5%	MICA
C4	.00025	MICA	C13	300-600	μ Fds.
C5	.01	400	C14	.01	400
C6	.005	600	C15	10.0	350
C7	.00025	MICA	C16	10.0	350
C8	.01	400	C17	.05	400
C9	.005	600	C18	GIMMICK	

No.	OHMS	WATTS	No.	OHMS	WATTS
R1	50,000	1/2	R11	50,000	1/2
R2	300	1/2	R12	250,000	1/2
R3	250	1/2	R13	500,000	1/2
R4	20,000	1/2	R14	400,000	1/2
R5	1,000	1/2	R15	100,000	1/2
R6	2 MEG.	1/2	R16	300	1/2
R7	500,000	VOL. CON.			
R8	3,000	1/2			
R9	5 MEG.	1/2			

ALIGNMENT FREQUENCIES
 BC OSC.- 1550 KC SW OSC.- 18.1 MC
 BC ANT.- 1400 KC SW OSC.- 16.0 MC
 BC PAD - 600 KC

CONVENTIONAL ALIGNMENT SEE
 SPECIAL SECTION VOLUME VIII
 POWER CONSUMPTION: 60 watts.

VOLTAGES: Taken from socket terminals
 to ground; 20,000 ohms-per-volt meter.

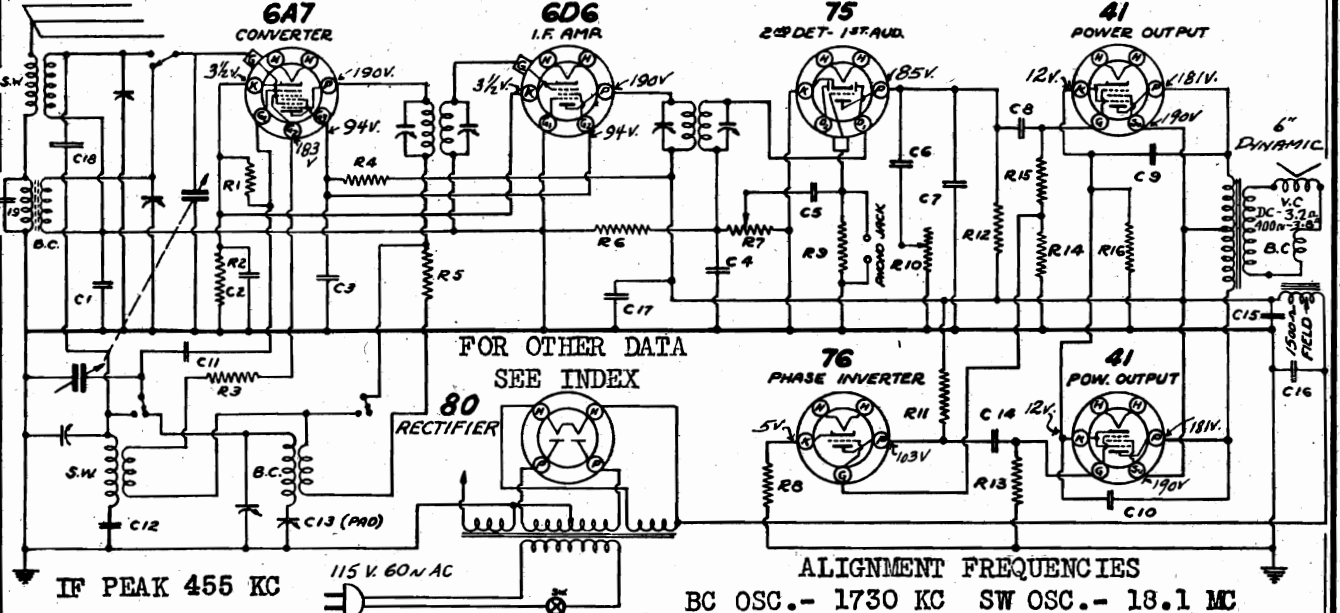

IF PEAK 455 KC
 BAND SWITCHES SHOWN IN BROADCAST POSITION
 BOTTOM VIEW OF TUBE SOCKETS SHOWN.

MODEL 605-7C

GANG CONDENSER CAPACITY 443 μ Fds.

No.	MFDS	VOLTS	No.	MFDS	VOLTS
C1	.05	200	C11	.0001	MICA
C2	.25	200	C12	.004 \pm 5%	MICA
C3	.05	400	C13	300-600	μ Fds.
C4	.00025	MICA	C14	.01	400
C5	.01	400	C15	10.0	350
C6	.005	600	C16	10.0	350
C7	.00025	MICA	C17	.05	400
C8	.01	400	C18	GIMMICK	
C9	.005	600	C19	.0001	MICA

No.	OHMS	WATTS	No.	OHMS	WATTS
R1	50,000	1/2	R11	50,000	1/2
R2	200	1/2	R12	250,000	1/2
R3	250	1/2	R13	500,000	1/2
R4	20,000	1/2	R14	100,000	1/2
R5	1,000	1/2	R15	400,000	1/2
R6	2 MEG.	1/2	R16	300	1/2
R7	800,000	VOL. CON.			
R8	3,000	1/2			
R9	5 MEG.	1/2			
R10	400,000	TONE CON.			

ALIGNMENT FREQUENCIES
 BC OSC.- 1730 KC SW OSC.- 18.1 MC
 BC ANT.- 1400 KC SW ANT.- 16.0 MC
 BC PAD - 600 KC


CONVENTIONAL ALIGNMENT SEE
 SPECIAL SECTION VOLUME VIII
 POWER CONSUMPTION: 60 watts.

VOLTAGES: Taken from socket terminals
 to ground; 20,000 ohms-per-volt meter.

MODEL 352-5R
Tuner, Socket, Trimmers

ZEPHYR RADIO CO.

MODELS 576-5Q, 577-5Q
Schematic, Voltage, Socket
Alignment, Trimmers, Tuner

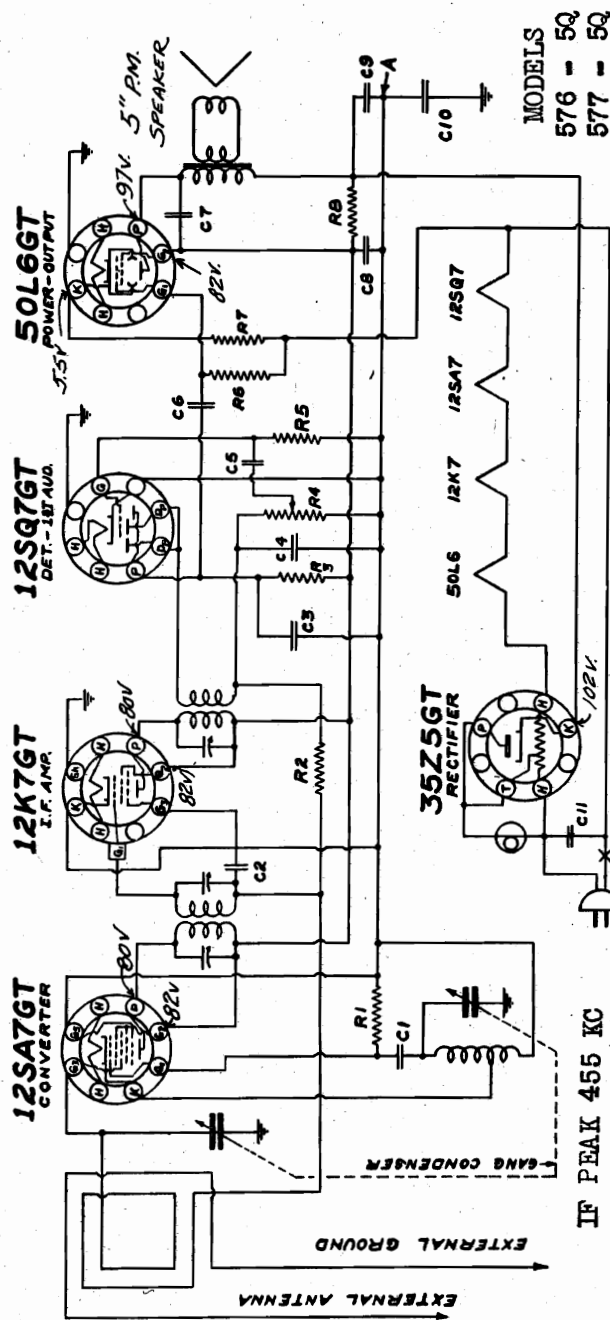

MODELS
576 - 5Q
577 - 5Q

Voice Coil
DC Resistance - 3.4~
At 400 cycles - 3.8~

VOLTAGES:- Taken from socket terminals to point "A"; 115 V. line; AC power consumption 30 watts; volume control at maximum; antenna shorted to ground; using a 100 ohm per volt meter.

MODELS 352-5R; 576-5Q, 577-5Q.

PROCEDURE FOR SETTING UP PUSH BUTTONS

There are four push buttons located on the top by means of which four stations may be selected (See Fig. 1). Make a list of four stations tuned in regularly. Loosen one of the push buttons by turning the push button knob counter clockwise a turn or less and push it in; while holding the button in, tune in a desired station by means of the station selector. Turn the selector very slowly back and forth until the signal is clearest. Now while holding the push button in, tighten it by turning clockwise. Release the push button and turn the station selector to one end of the dial; then check the button by pushing it in and if the station is tuned to the center of the area on the dial covered by the station the adjustment is correct.

Release the push button and loosen another push button and repeat the above procedure, doing this for the remaining buttons. If it is desired to change a button to a different station simply loosen the push button and re-set.

CONVENTIONAL ALIGNMENT
SEE SPECIAL SECTION
VOLUME VIII

ALIGNMENT FREQUENCIES
BC OSC ----- 1730 KC
BC ANT ----- 1400 KC

R.F. S.I.T.O.R.S.		WATTS	
RES.	WATTS	OHMS	WATTS
R1	20,000	R5	500,000
R2	2 MEG.	R7	150,000
R3	250,000	R8	1,000
R4	500,000		
R5	5 MEG.		

CAPACITORS		VOLTS	
MEG.	MEG.	MEG.	MEG.
C1	.0001	C5	50
C2	.02	C6	20
C3	.005	C7	30
C4	.00025	C8	50
C5	.01	C9	25
C6	.002	C10	50

TUBES SHOW BOTTOM VIEW

C10 USED ON MODEL 576 ONLY.
ON MODEL 577, POINT "A"
IS CONNECTED TO CHASSIS.

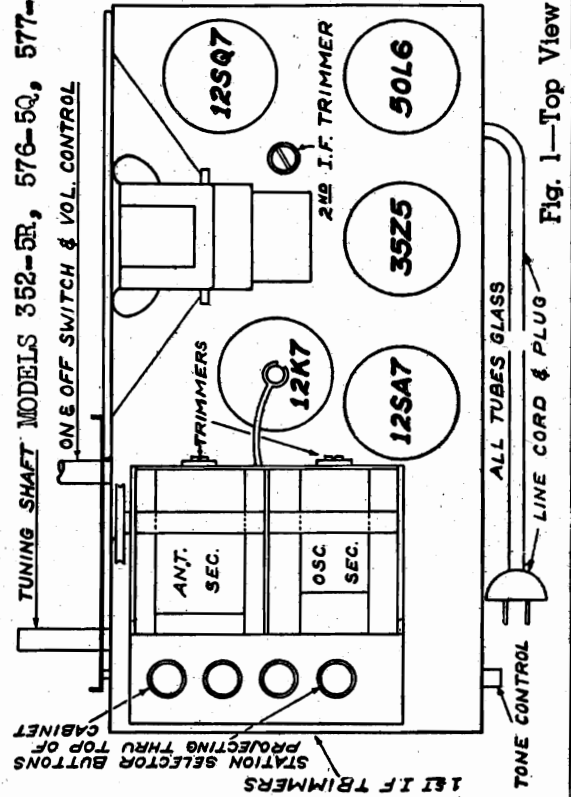



Fig. 1—Top View

MODELS 666-6J to 669-6J

MODELS 696-6M, 697-6M

Schematics, Voltage

ZEPHYR RADIO CO.

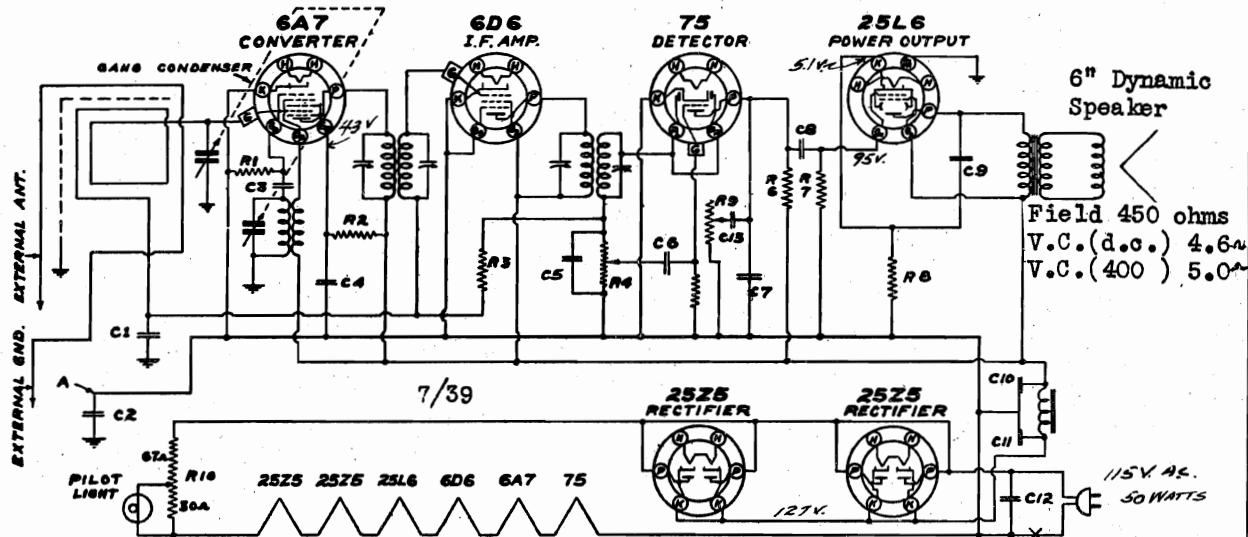

RESISTORS

NO	OHMS	WATTS
R1	50,000	1/2
R2	30,000	1/2
R3	1,000,000	1/2
R4	200,000	VOL. CONT.
R5	3,000,000	1/2
R6	250,000	1/2
R7	500,000	1/2
R8	150 ± 10%	1/2
R9	200,000	TONE CONT.
R10	67 ± 30	1/2

CONDENSERS

NO	MFD.	VOLTS
C1	.02	200
C2	.25	200
C3	.00005	MICA
C4	.05	200
C5	.00025	MICA
C6	.01	400
C7	.00025	MICA
C8	.01	400
C9	.02	400

CONDENSERS

NO	MFD.	VOLTS
C10	20.	150
C11	20.	150
C12	0.05	400
C13	0.005	600


NOTE: - C2 USED ON MODEL 6JL ONLY ON MODEL 6J POINT "A" IS CONNECTED TO CHASSIS.

I.F. 455 K.C.
 ↓ INDICATES CHASSIS GROUND
 VOLTAGES: Taken with 1000 ohms per volt meter to ground; antenna shorted to ground.

MODELS 666-6J, 667-6J, 668-6J, 669-6J.

I.F. ALIGNMENT CONVENTIONAL
 BROADCAST BAND
 TRIM OSC 1630 KC
 TRIM ANT 1400 KC

SEE SPECIAL SECTION (See Index for tube layout)
 VOLUME VIII

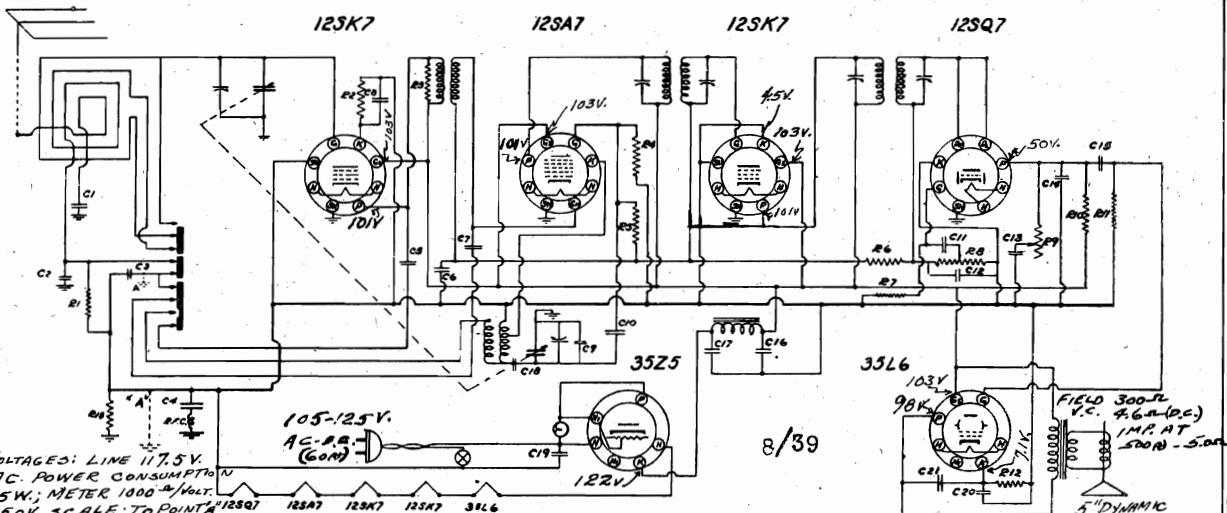

VOLTAGES: LINE 117.5V.
 AC POWER CONSUMPTION 35W.; METER 1000 OHM/VOLT.
 1.50V. SCALE; TO POINT "A" 1250V

RESISTORS

NO	OHMS	WATTS
R1	150K ± 10%	1/2
R2	600 ± 10%	1/2
R3	5K ± 10%	1/2
R4	15Meg.	1/2
R5	25K	1/2
R6	2Meg	1/2
R7	5Meg	1/2
R8	500K ± 10%	1/2
R9	500K ± 10%	1/2
R10	150K	1/2
R11	250K	1/2
R12	200 ± 10%	1/2
R13	150K	1/2

CONDENSERS

NO	MFD.	VOLTS
C1	.001	600
C2	.00127 ± 5%	Mica
C3	.05	400
C4	.25	200
C5	.00006 ± 5%	Mica
C6	.05	200
C7	.00006 ± 5%	Mica
C8	.05	200
C9	.000010	Mica
C10	.00005	Mica
C11	.01	400
C12	.00025	Mica
C13	.005	600
C14	.0005	Mica
C15	.01	400
C16	20.	150
C17	20.	150
C18	.02	400
C19	.05	400
C20	20.	25
C21	.02	400

CONDENSERS

NO	MFD.	VOLTS
C1	.001	600
C2	.00127 ± 5%	Mica
C3	.05	400
C4	.25	200
C5	.00006 ± 5%	Mica
C6	.05	200
C7	.00006 ± 5%	Mica
C8	.05	200
C9	.000010	Mica
C10	.00005	Mica
C11	.01	400
C12	.00025	Mica
C13	.005	600
C14	.0005	Mica
C15	.01	400
C16	20.	150
C17	20.	150
C18	.02	400
C19	.05	400
C20	20.	25
C21	.02	400

CONDENSERS

NO	MFD.	VOLTS
C1	.001	600
C2	.00127 ± 5%	Mica
C3	.05	400
C4	.25	200
C5	.00006 ± 5%	Mica
C6	.05	200
C7	.00006 ± 5%	Mica
C8	.05	200
C9	.000010	Mica
C10	.00005	Mica
C11	.01	400
C12	.00025	Mica
C13	.005	600
C14	.0005	Mica
C15	.01	400
C16	20.	150
C17	20.	150
C18	.02	400
C19	.05	400
C20	20.	25
C21	.02	400

I.F. 455 K.C.

In model 6M only C3, C4, C18, R13 and the R.F. choke (RFC) are not used and points "A" are connected to chassis.


I.F. ALIGNMENT CONVENTIONAL
 BROADCAST BAND
 TRIM OSC 1630 KC
 TRIM ANT 1400 KC

SEE SPECIAL SECTION
 VOLUME VIII

MODELS 696-6M, 697-6M
 (See Index for tube layout)

BARKER BROS.

MODEL Tempo Tone Schematic, Tuner

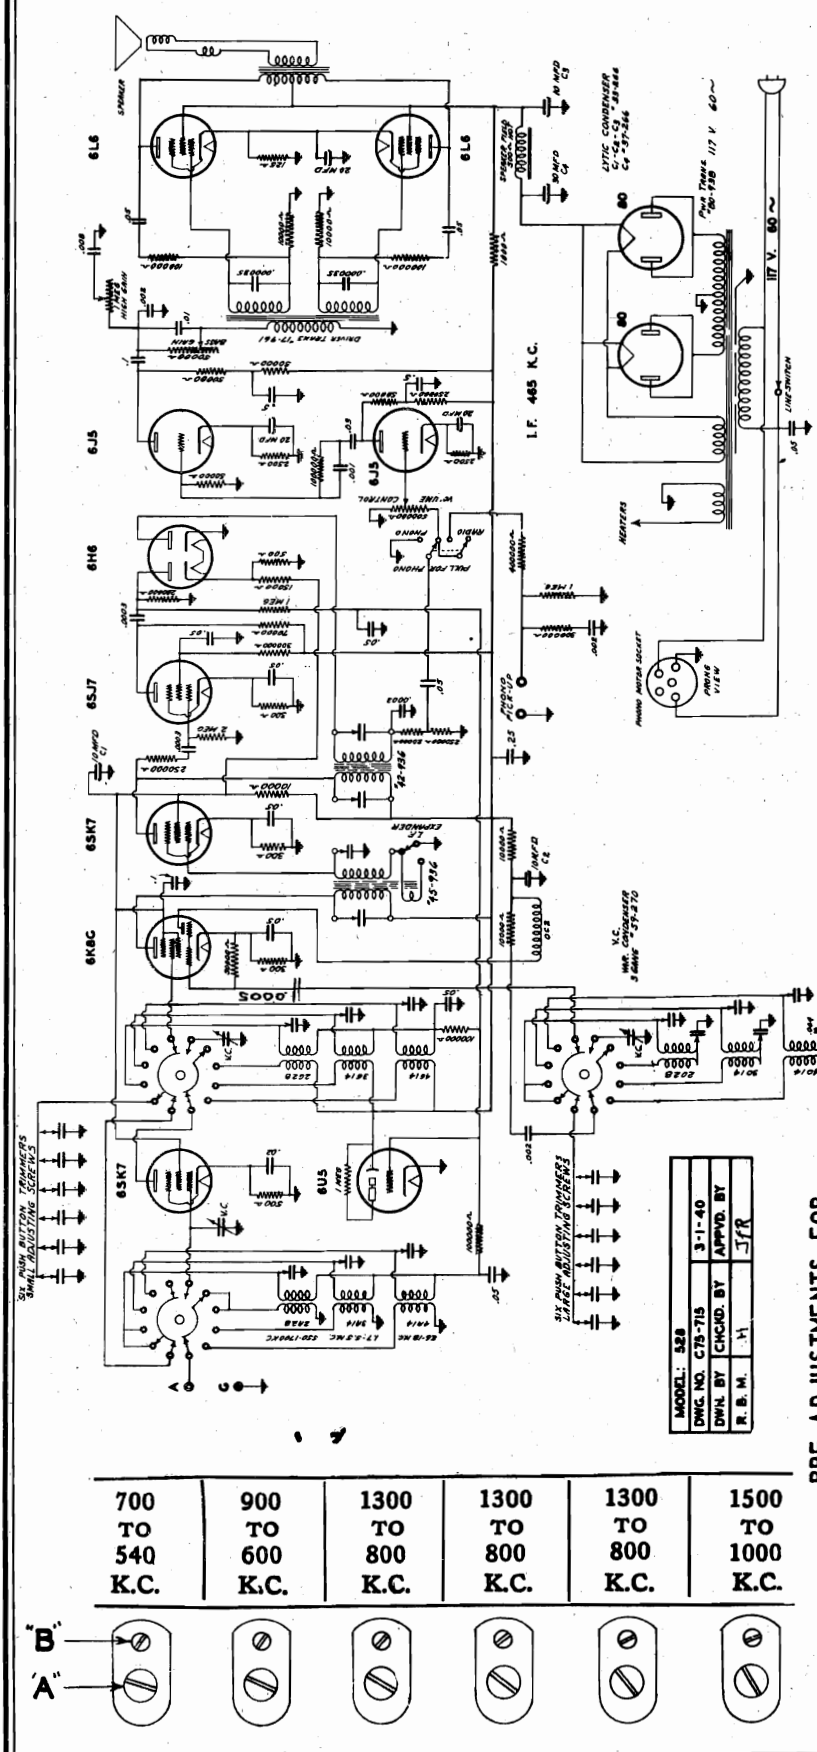

700 TO 540 K.C.	900 TO 600 K.C.	1300 TO 800 K.C.	1300 TO 800 K.C.	1300 TO 800 K.C.	1500 TO 1000 K.C.
-----------------	-----------------	------------------	------------------	------------------	-------------------

MODEL 328	3-11-40
DWG. NO. C75-715	CHKD. BY
R. B. M. 11	APPRD. BY
	JFR

PRE-ADJUSTMENTS FOR PUSH BUTTON OPERATION


- (1) Leave set turned on at least twenty minutes allowing receiver circuits to reach their normal operating condition before starting push button adjustment.
- (2) Remove screws holding escutcheon plate for push buttons.
- (3) Note the ranges shown on label above adjusting screws. For example: 700 to 540 KC means you should adjust this set of screws for any station having a frequency between 700 and 540 KC. This rule applies for the other five ranges. There is, of course, some overlapping of range coverage.
- (4) Select a station by manual tuning in the regular way. Assuming it is within the 700 to 540 KC range, turn Band Switch to "Push Button" position and push in on button covering the range. As will be noted, the adjustments consist of two screws, one with a large head (A) and one with a small head (B).

- (A) With a small screw driver, turn screw "A" back and forth until you locate the station. It is suggested that you switch back to manual tuning if necessary to recognize the particular type program to help you find it when you again turn the adjusting screw.
 - (B) After the "A" Screw has been set to exact resonance by watching the tuning eye deflection, turn the small screw "B" for the maximum deflection of the tuning eye. Now recheck screw "B". When all six buttons have been set, repeat the "trimming" process for accuracy.
- IT WILL BE OF IMPORTANCE TO NOTE THAT IF THE STATION CANNOT AT FIRST BE LOCATED BY MOVING SCREW "A" IN AND OUT, PERHAPS YOU WILL FIND ADJUSTMENT "B" TOO FAR IN OR TOO FAR OUT. In such a case, check its position by turning it in all the way (to the right) then reverse it about a turn or two and try screw "B" again.

MODEL BC
 MODEL 289
 MODELS 9722, 9822
 Schematics, Socket
 Alignment, Trimmers


F. J. FITZGERALD CO.
 HAMILTON RADIO CO.

KENT

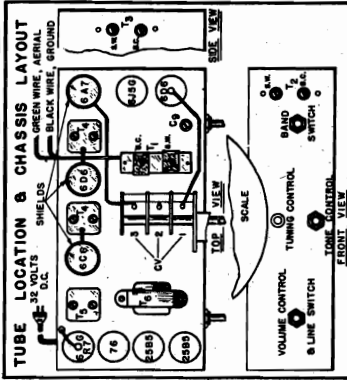


W.F.S.

LEGEND PART NO.	DESCRIPTION	LEGEND PART NO.	DESCRIPTION
T ₁	1226 ANTENNA COIL	C ₁	211 20 MFD. 400 V. TUBULAR CONDENSER
T ₂	13 52 INTERSTARE COIL	C ₂	211 20 MFD. 400 V. TUBULAR CONDENSER
T ₃	1417 OSCILLATOR COIL	C ₃	211 20 MFD. 200 V. TUBULAR CONDENSER
T ₄	1515 1A1 I.F. TRANSFORMER	C ₄	204 25 MFD. 200 V. TUBULAR CONDENSER
T ₅	1507 2A1 I.F. TRANSFORMER	C ₅	400 100 MFD. MICA CONDENSER
S ₁	1924 BAND SELECTOR SWITCH	C ₆	401 250 MFD. MICA CONDENSER
S ₂	2025 ON-OFF SWITCH ON VOLUME CONTROL	C ₇	401 250 MFD. MICA CONDENSER
P	2801 MAZDA 540 PILOT LIGHTS	C ₈	507 5 PLATE. PADDING CONDENSER
B	3000 BIAS BUTTON	C ₉	507 5 PLATE. PADDING CONDENSER
L	1R 8A6 SPEAKER TRANSFORMER	C ₁₀	50 MFD. MICA CONDENSER
L ₁	113 50,000 OHM-WATT CARBON RESISTOR	C ₁₁	50 MFD. MICA CONDENSER
R ₁	115 10,000 OHM-WATT CARBON RESISTOR	C ₁₂	50 MFD. MICA CONDENSER
R ₂	117 1 MEGOHM-WATT CARBON RESISTOR	C ₁₃	50 MFD. MICA CONDENSER
R ₃	119 1 MEGOHM-WATT CARBON RESISTOR	C ₁₄	50 MFD. MICA CONDENSER
R ₄	120 VOLTAGE DIVIDER STRIP (100 OHM 5 WATT)	C ₁₅	50 MFD. MICA CONDENSER
R ₅	121 VOLUME DIVIDER STRIP (100 OHM 5 WATT)	C ₁₆	50 MFD. MICA CONDENSER

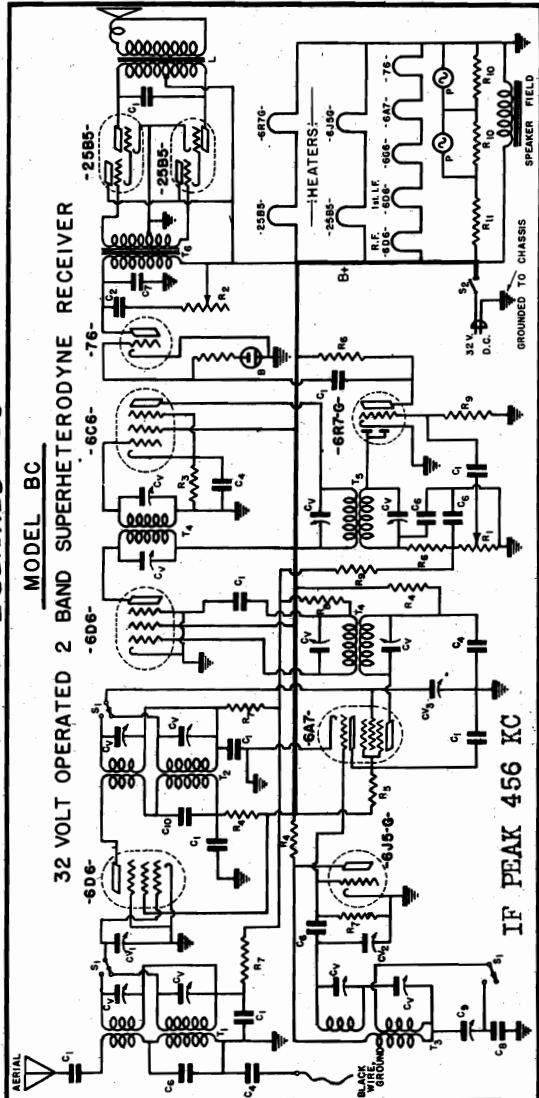

Model 289



HAMILTON RADIO COMPANY

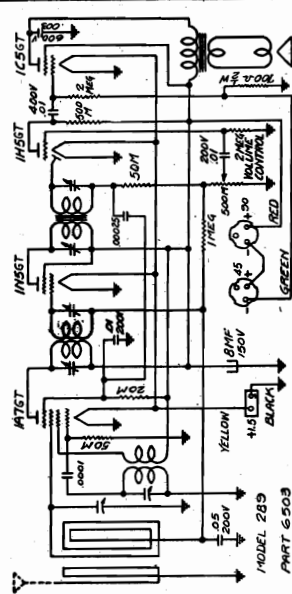

IF PEAK
 455 KC


ALIGNMENT PROCEDURE

I.F. Frequency 455 KC. Set Range 540 1600 KC. Connect the test oscillator, or signal generator, to the set as follows: Connect the "hot" side of the signal generator to the grid of the 1A7GT tube, and the ground side to the terminal on the back of the chassis. An output meter should be connected across the voice coil leads of the speaker to indicate resonance. Align the I.F. trimmers at 455 KC for maximum meter reading. Adjust the trimmer on the back of the variable condenser at or near 1400 KC at full volume on a weak broadcast signal. When aligning the set do not set the receiver on or near a metal work bench or other large metal object, as it will affect the tracking of the receiver.

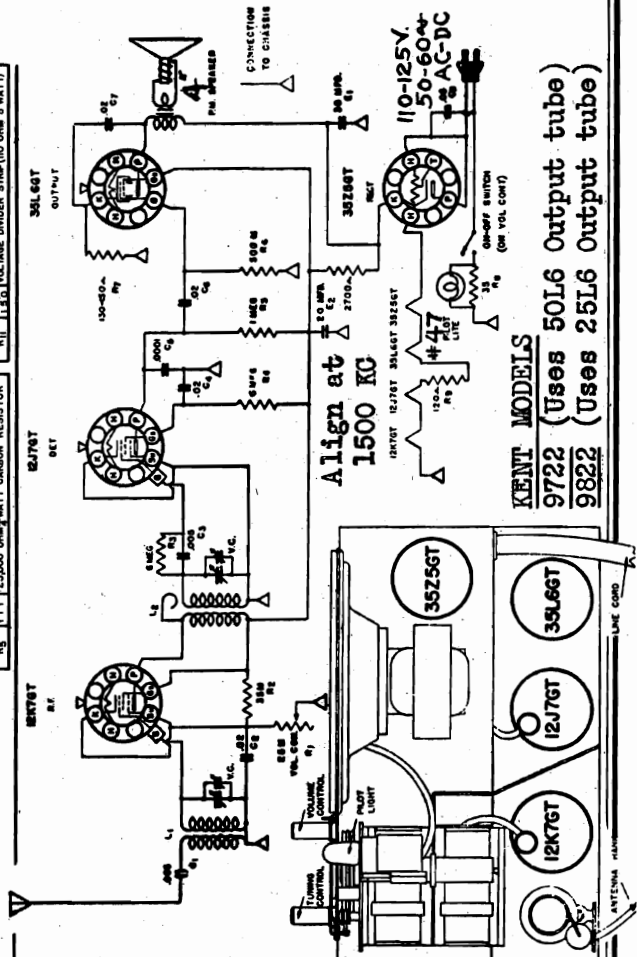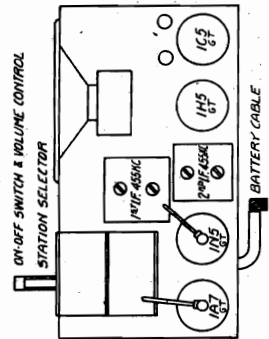


GILFILLAN BROS., INC.

MODEL 5AD
MODEL 54-A Late
Schematics, Socket

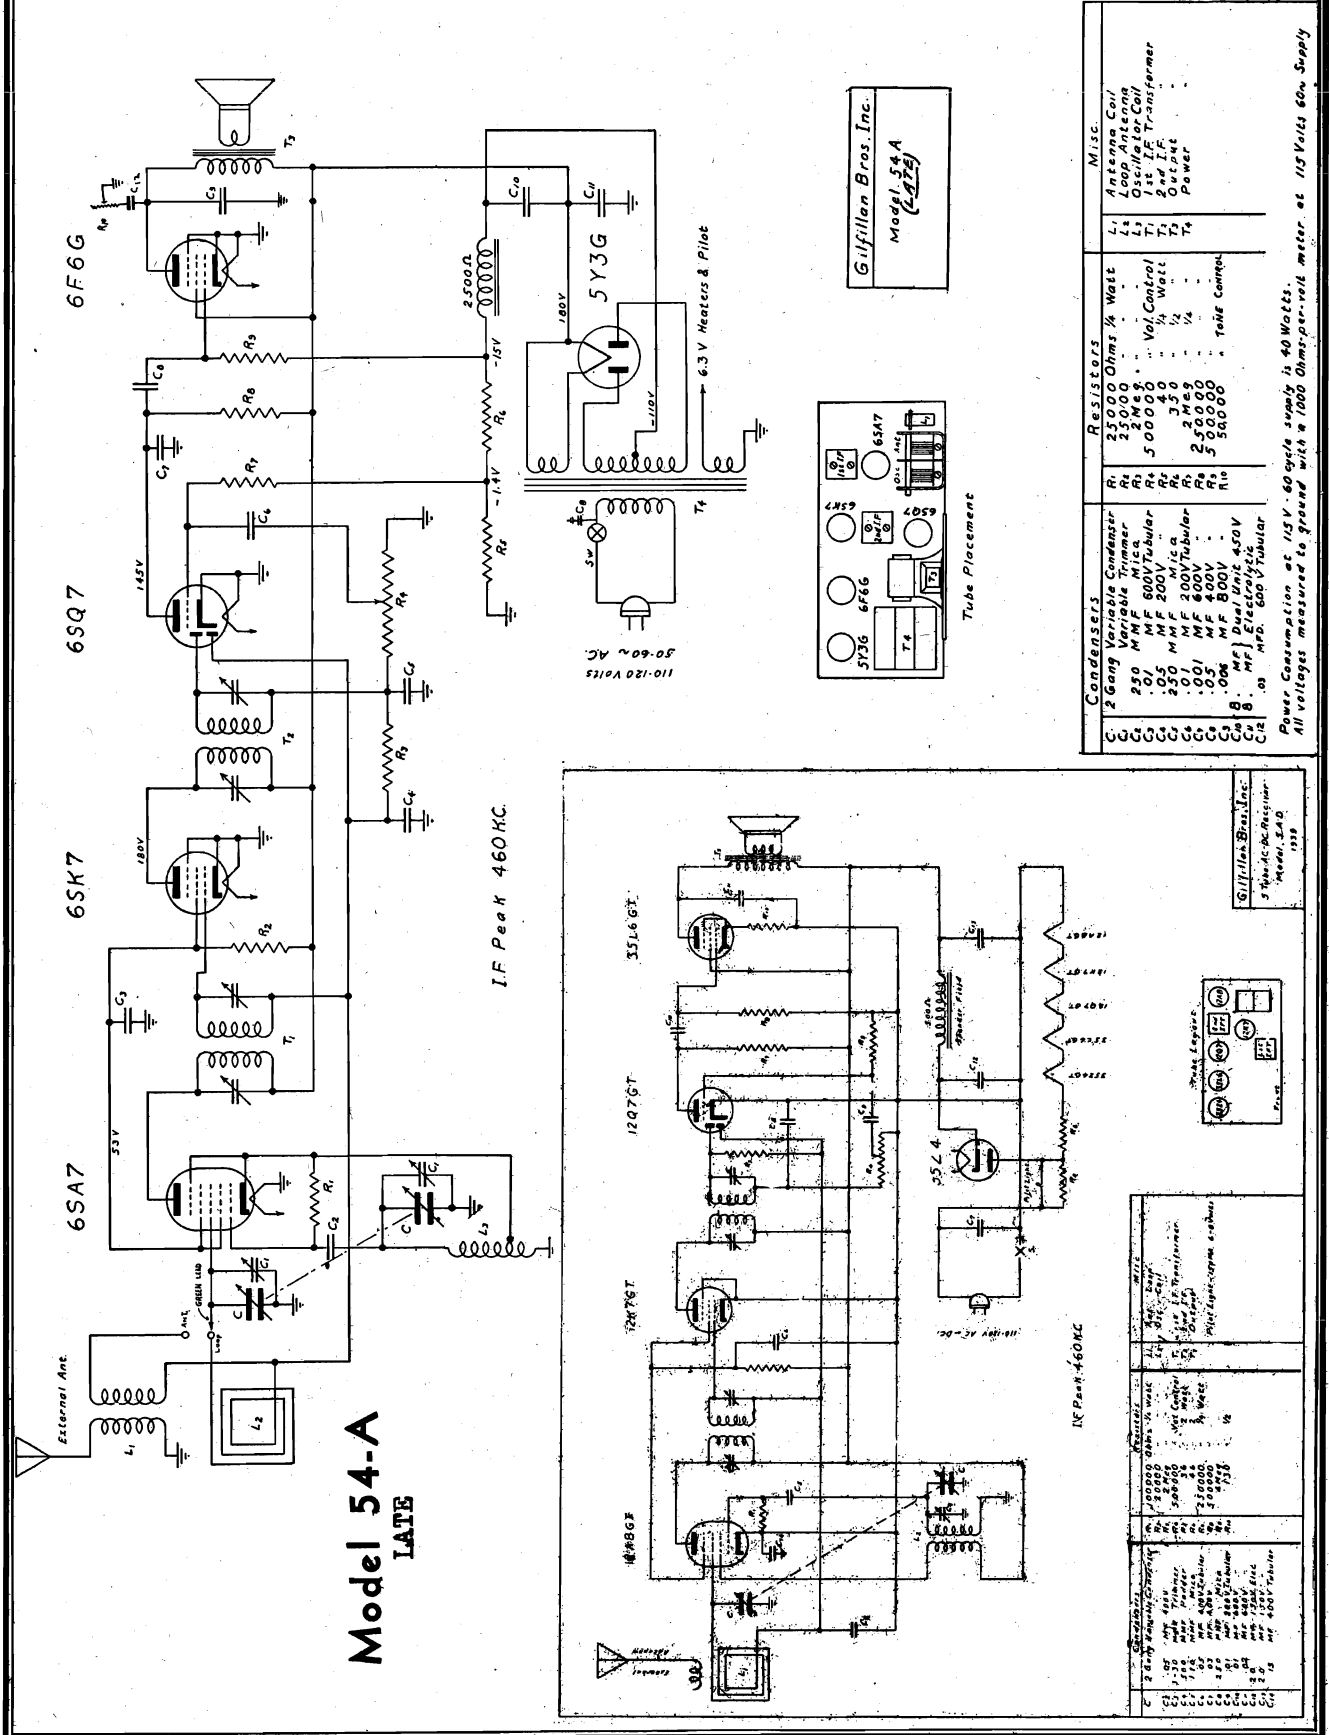

Model 54-A
LATE


Gilfillan Bros. Inc.
Model 54 A
(LATE)

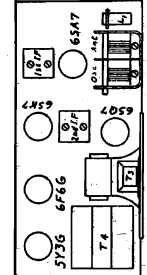

Tube Placement

Component	Value	Notes
Resistors	1/2 Watt	
R1	2500 Ohms	
R2	25000	
R3	2 M	
R4	2 M	
R5	500000	
R6	500000	
R7	500000	
R8	500000	
R9	500000	
R10	500000	
Condensers	2 Gang Variable Condenser	
C1	250	
C2	250	
C3	250	
C4	250	
C5	250	
C6	250	
C7	250	
C8	250	
C9	250	
C10	250	
C11	250	
C12	250	
Misc. Coil	Loop Antenna	
L1	Loop Antenna	
L2	1st IF Transformer	
T1	500000	
T2	500000	
T3	500000	
T4	500000	

Power Consumption at 115V. 60 cycle supply is 40 Watts.
All voltages measured to ground with a 1000 Ohm-per- volt meter. at 115 Volts 60w Supply

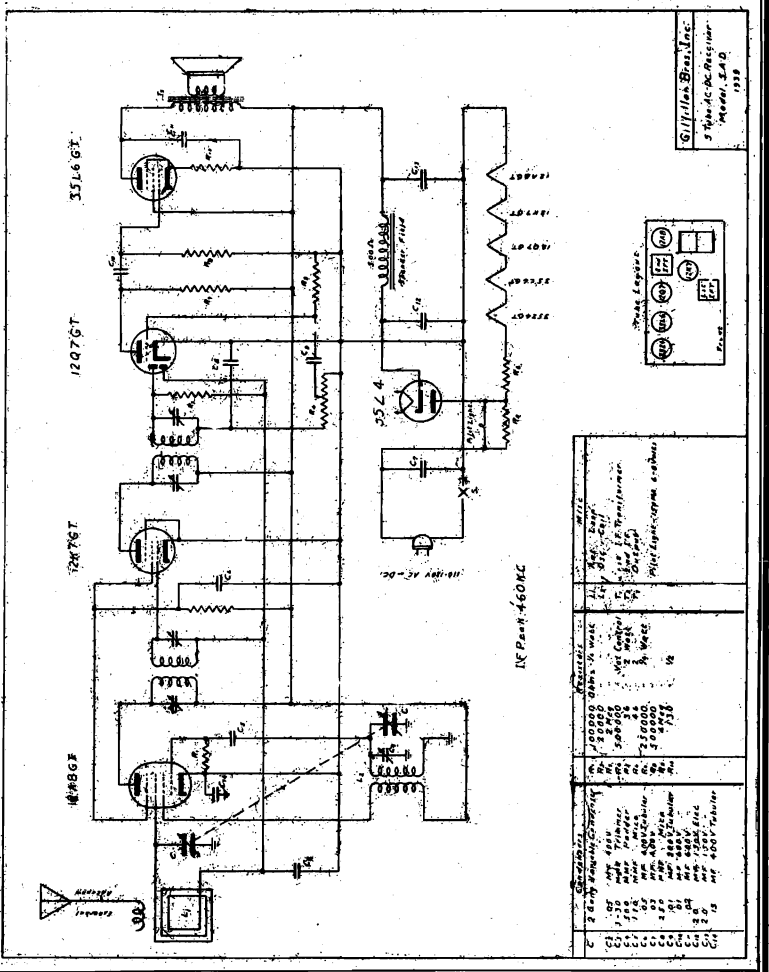


Gilfillan Bros. Inc.
Model 54 A
1939


MODEL L25
MODEL L40
MODEL L41

KADETTE RADIO CORP.


Schematics, Socket Trimmers, Notes, Voltage

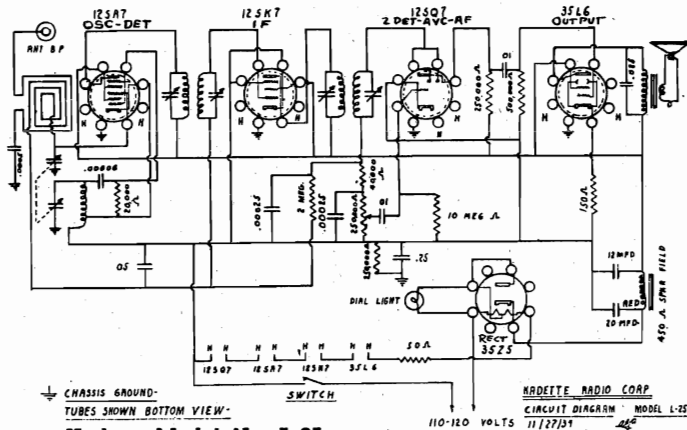

Kadette Model No. L-25

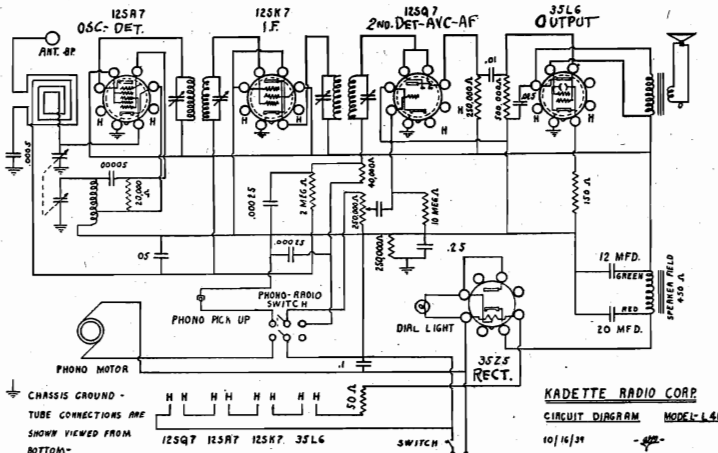

Kadette Model No. L-41

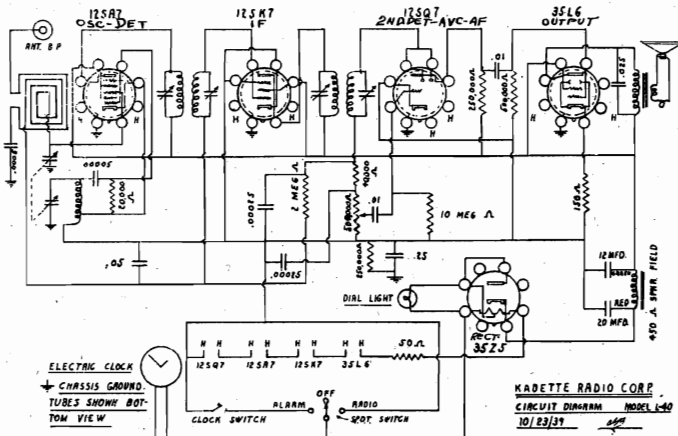


Kadette Model No. L-40

Start clock by turning starting knob (at rear) in direction of arrow. Set clock by turning "Set" knob (at rear) in direction of arrow. Clock remains running regardless of any power switch position, including "OFF", and will continue to run as long as cord is plugged into a power supply outlet. Power current interruptions will stop the clock and it must be re-started.

For continuous operation on radio, throw toggle switch (at rear) to RADIO. Note this switch has three positions, "RADIO", "OFF" and "ALARM"

To pre-set a desired station: (1) Throw toggle switch to "RADIO" (2) Tune in station desired with selector knob. (3) Turn volume well up (volume control knob). (4) Turn "ALARM"

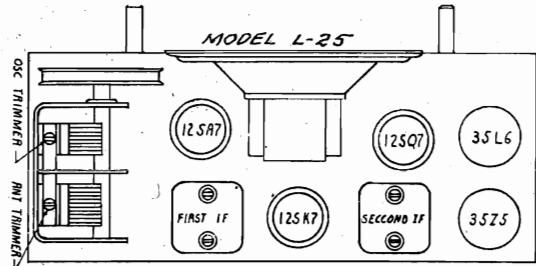


MODEL L-25 Voltage Readings

The following are the approximate readings when using a 1000 ohms per volt voltmeter. Line voltage should be 117 volts.

Voltmeter	300 Volt	300 Volt	30 Volt
	Plate To B—	Screen To B—	Cathode To B—
12SA7	93	93	
12SK7	93	93	
12SQ7	45	93	5.3


MODEL L-41

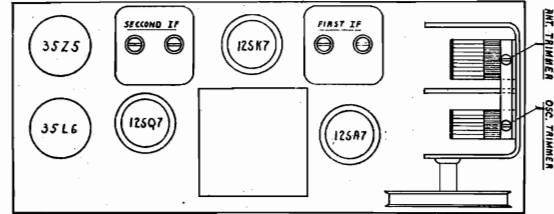

MODEL L-40 Voltage Readings

The following are the approximate readings when using a 1000 ohms per voltmeter. Voltage across speaker field is approximately 30 volts. Line voltage 117 volts.

Voltmeter	300 Volt	300 Volt	30 Volt
	Plate To B—	Screen To B—	Cathode To B—
12SA7	105	105	
12SK7	105	105	
12SQ7	49	105	
35L6	97	105	6

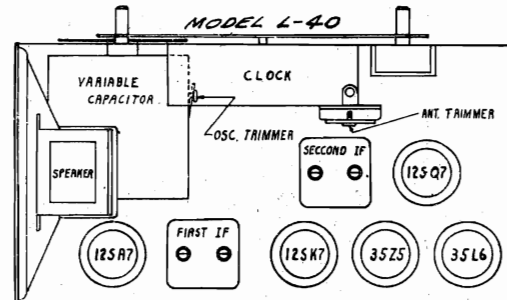


setting knob, at rear, in direction of arrow until the desired time for radio to turn appears at the calibration mark in the alarm set window on the clock dial (top-center of clock face). (5) Throw the toggle switch to "ALARM". (6) Radio will turn "ON" at the time thus set, and will continue to operate for about 1 1/2 hours—then turn off. (7) Do not pre-set more than ten hours prior to the time of desired program.

To pre-set radio to TURN OFF at a predetermined time: (1) With radio playing, place toggle switch at rear, at "ALARM" position. (2) Turn "ALARM" set-knob, at rear, in direction of arrow until the desired time to shut off is indicated by the small Roman numerals in the upper portion of the alarm set window on the clock face.

NOTE: Do not pre-set to turn off for longer than 1 1/2 hours.

WESTERN AUTO SUPPLY OF CALIF. MODEL 279

MODEL 169 Schematics, Voltage Socket, Trimmers Alignment, Tuner

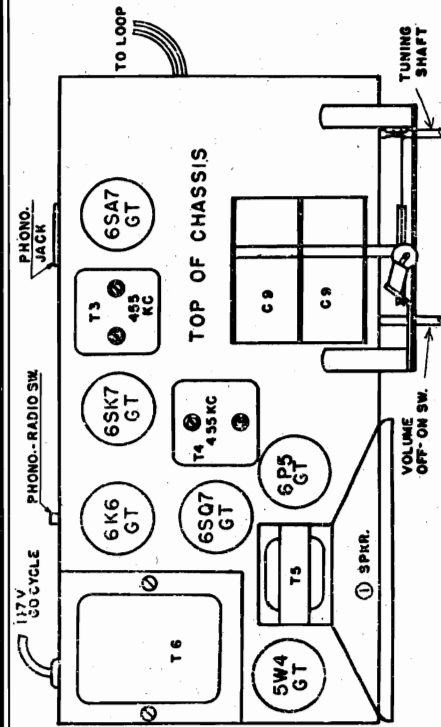

Follow the procedure outlined below, in order to adjust the push-buttons properly: 1. By means of the Station Selector Knob tune in WITH THE RIGHT HAND AS ACCURATELY AS POSSIBLE AS POSSIBLE the station having the lowest frequency...

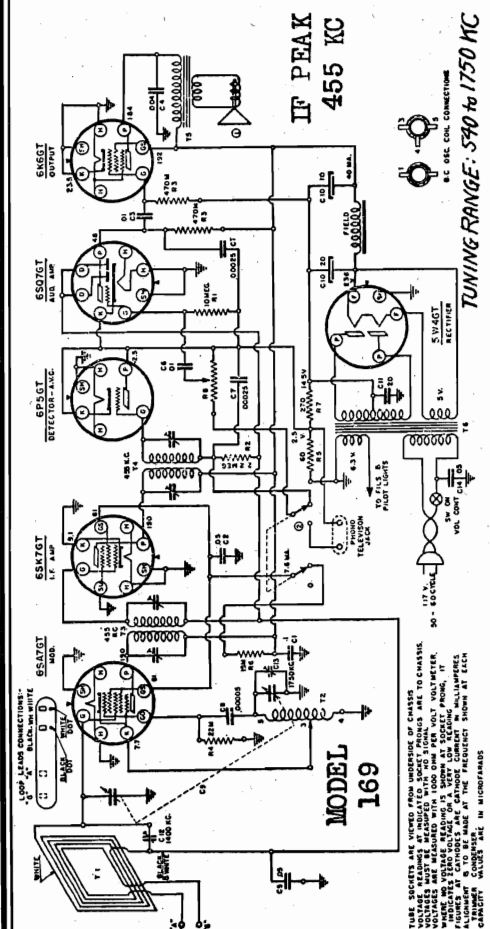
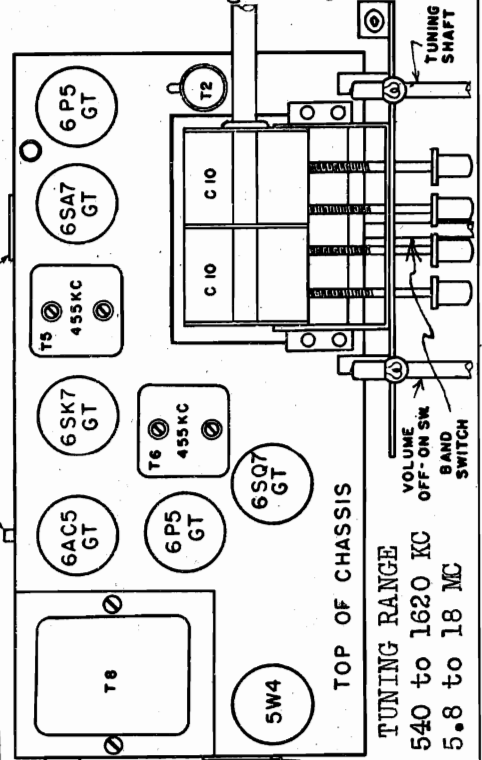


Table with columns: CODE, PART NO, DESCRIPTION, QTY, RESISTOR, and TUNING RANGE: 530 to 1750 KC.

FOR CONVENTIONAL ALIGNMENT SEE SPECIAL SECTION VOLUME VIII

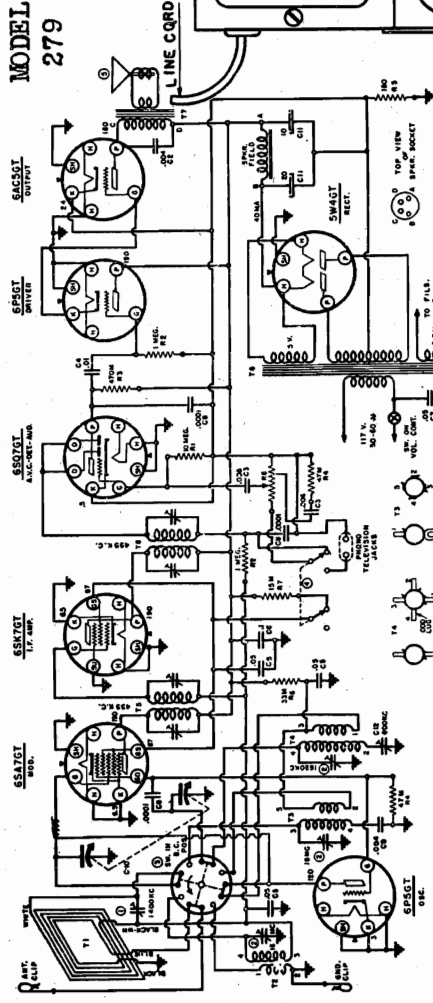


Table with columns: CODE, PART NO, DESCRIPTION, QTY, RESISTOR, and TUNING RANGE: 530 to 1750 KC.

Andrea Television Model I-F-5

Before carrying out any type of service work, remove the 2Y2 or 879 high-voltage rectifier tube from the socket. Be certain that the high-voltage cover plate on bottom of chassis is in place, and remove both sides of high-voltage transformer primary leads from the terminal strip connecting them to power line input before adjustments of any nature are attempted. In this way, no danger from shock from the high-voltage supply is possible.

Bear in mind that the high-voltage supply plays no part in your service work. Therefore, no need exists for this section of the receiver functioning during any work you may undertake. Should repairs be necessary on the high voltage section, all tests may be conducted accurately by resistive or continuity measurements to localize the difficulty without resorting to any voltage measurements.

Remember, first thoroughly investigate the nature of the complaint to determine if the effect is in the receiver before attempting adjustments.

Sound I-F System

See notes on high voltage.

The 6J5 oscillator must be stopped by connecting 70 or 120 ohms from the junction of HC-143 and HC-147 to ground. Do not short the oscillator or remove tube. The schematic will be found on *Andrea* page 10-1, 2, in *Rider's Volume X*.

Connect the high side of signal generator through a .1-mf, 600 V. condenser to prong 4 of 1852 modulator tube. See page 10-4 of *Rider's Volume X* for socket layout. Set signal generator frequency very accurately to 8.25 mc. (8250 kc). Connect rectifier type a-c voltmeter across voice coil of sound speaker. Allow receiver to warm up 15 minutes before making any realignment settings.

After carefully carrying out the above, adjust television sound trimmer condensers D, C and B, located as shown in socket layout, for maximum deflection on the rectifier output meter across the speaker voice coil.

Be certain your generator frequency and trimmer adjustments are accurate or poor sound performance will result.

This completes the television sound i-f alignment.

Video I-F System and 14.25-MC Adjacent Sound-Trap Adjustment

See notes on high voltage.

The video intermediate frequency is 12.75 megacycles (12,750 kc) for the position of the video carrier and extends substantially flat to 10 mc and requires no alignment adjustment, as all tuning is of a fixed type which will not develop misalignment. In order to signal-trace this circuit to locate any defective tubes or component parts, the following procedure may be used:


Remove the picture-tube socket cable from the 1805P4 tube. Connect a .5-mf/600 V. condenser in series with one side of a rectifier type output meter (0-1 or 0-1.5 volts). Connect the side of rectifier meter containing the condenser to pin No. 10 of the picture-tube cable socket; the other connection from meter to ground.

The 6J5 oscillator must be stopped by connecting 70 or 100 ohms from the junction of HC-143 and HC-147 to ground. Do not short the oscillator or remove tube.


Turn contrast control to maximum contrast. Connect the signal generator high lead in series with .1-mf/600 V. condenser to pin No. 4 of modulator tube; ground side of generator to chassis and note the output reading on picture-tube output meter. If no signal results, replace generator connection to pin No. 4 of first video i-f tube. If a signal is obtained, trouble exists between modulator and 1st video i-f tube. Should no signal result, replace generator lead to pin No. 4 of 2nd video i-f tube. Use same reasoning as

above. In this manner the video i-f continuity can be checked.

In the event that no signal is obtained, a check of the video system itself can be made as follows:

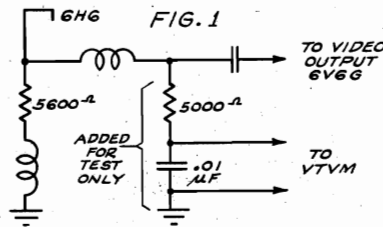

Leave generator connected to pin No. 4 of 2nd video i-f tube and connect the circuit shown in Fig. 1. A reading on the VTVM will prove continuity of video detector system. Be sure in this test signal-generator output is on maximum. Also that the VTVM will read a minimum of .25 volt. If not, this method cannot be used.

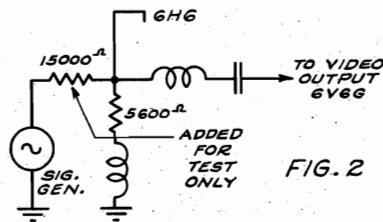

To test the video system from video detector output to output of video output tube, connect a 15,000-ohm resistor in series with lug 8 of the 6H6 tube. Remove this tube from circuit—between one side of 15,000-ohm resistor and ground, connect standard, signal generator (Fig. 2)—set for 300 or 500 kc and increase output attenuator until a signal is obtained on the output meter. Obviously, no signal indicates trouble in the associated parts preceding or following the video output tube or the picture-tube connecting cable. Hence, test continuity of parts in input and output of 6V6G video output tube along with checking output tube and voltages.

When the above test indicates an actual signal up to picture-tube pin No. 10 (grid), and trouble still exists, the difficulty is then in picture tube.

14.25-MC Adjacent Sound Traps

With rectifier meter connected from pin No. 10 of picture-tube cable to ground, connect signal generator from pin No. 4 of the 1852 modulator tube and ground through a .1-mf, 600V. condenser. Set generator accurately to 14.25-mc (14,250 kc).

Use highest output of the signal generator and adjust 14.25-mc trimmers "A" and "E" (see tube layout) for minimum output. This test must be carried out accurately, or picture quality will be materially impaired.

Radio-Frequency Alignment


Since the r-f unit of this receiver is aligned with great precision at the factory, and because the designs of the parts have been found exceedingly staple under all operating conditions, it is most unlikely that realignment will be necessary. However, in case the adjustments are changed for any reason, realignment should be carried out in the following manner:

Note: These instructions apply to television channels 1 and 2. If your set is equipped for receiving other channels, follow the special data supplied by the Andrea factory. Accurate realignment will result only when the bottom plate is fastened to the chassis during adjustment.

1. Because of the design of the r-f unit, band 2 must be aligned first, and band 1 last. Incorrect settings will be obtained if band 1 is aligned first.
 2. Be sure that the sound i-f system has been adjusted accurately to 8.25 mc. Otherwise, the r-f alignment will not be correct.
 3. Set sound sensitivity trimmer so that rotor plate is half maximum capacity (half-open)
 4. A signal generator capable of generating accurately frequencies from 40 to 60 mc. (40,000 to 60,000 kc), 400 cycles modulated, is required for the r-f alignment. Bear in mind that accurate frequency setting is essential and any attempt to use harmonics will invariably produce bad misalignment and poor or no results.
 5. Connect ground side of signal generator in series with 70-ohm carbon resistor to terminal "A" of antenna post. Connect high side of generator directly to other terminal "A" on antenna strip. Do not connect a ground to the receiver. Set generator accurately to 55.75 mc. (55,750 kc).
 6. Turn channel switch to channel 2.
 7. Connect a rectifier-type meter 0-1 volt across the voice coil of the loudspeaker.
 8. Loosen the brass top cup locknut on oscillator condenser 2, tube layout, so that the plunger moves easily but is not loose. A tool with a side pin to hook into hole in the plunger will provide more accurate adjustment.
 9. Adjust the oscillator condenser 2 (tube layout) plunger for maximum output deflection on the meter across speaker voice coil. Tighten the brass top cup locknut part way. When the brass top cup locknut is nearly tight, readjust the plunger. Then tighten the brass top cup locknut firmly and watch output deflection on meter to see that tuning is not changed. If so, readjust.
 10. Connect a rectifier type meter 0-1.0 volt from pin No. 10 on the picture-tube socket to the ground through a .5-mf, 600V. paper condenser.
 11. Adjust the signal generator frequency to 52.5 mc (52,500 kc).
 12. Turn the chassis on its side for ease of alignment. Set antenna trimmer so plunger is all in (max. cap.) and slip a metal spintite wrench through the hole in the under shield cover of chassis so that end of metal spintite fits over the tubular bottom end of antenna condenser 2, thereby detuning the circuit. Be certain that metal spintite does not ground to chassis.
- Note: If this is not carried out, no realignment can be made.
13. Leave metal spintite as above and loosen the brass top cup locknut on grid condenser 2 (socket layout), and adjust this plunger for maximum output as indicated on the meter in the picture cable circuit. Then tighten the brass top cup locknut part way, readjust plunger again, and tighten the brass top cup locknut firmly, noting that peak tuning point is not reduced by tightening. If so, readjust.
 14. Remove the metal spintite from antenna condenser 2, and put it on grid condenser 2.
 15. Loosen the brass top cup locknut on antenna condenser 2, and adjust the plunger for maximum picture output, as indicated by the meter. Then tighten the brass top cup locknut part way, readjust the plunger, and tighten the brass top cup locknut firmly, noting that peak tuning is not reduced by tightening.
 16. To align Band 1, carry out the same steps to 15 using 49.75 mc for the signal generator (step 5), put the band switch on channel 1 (step 6), and adjust oscillator condenser 1 (step 9).
 17. Use 46.5 mc for the signal generator (step 11) and use antenna condenser 1 for step 12, and adjust grid 1 for step 13. For step 14 use grid condenser 1, and antenna 1 for step 15.

Philco 39-25

A few of the early production Model 39-25 Philco receivers had the bass-compensating condenser in the volume-control circuit improperly con-

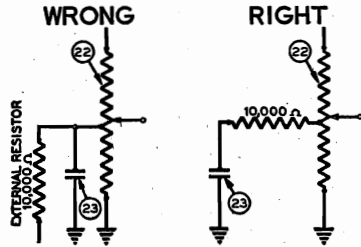

If a Philco 39-25 lacks high notes at low settings of the volume control, check to see how the bass-compensating condenser is connected. These partial schematics tell the story.

ected. The indication of such incorrect connection is a lack of high notes at low settings of the volume control. Above is shown the incorrect and the correct connections. The schematic of this receiver shown on page 10-9 of *Rider's Volume X* shows the correct connections.

Majestic 11056, 11057, 11058

Models 11056 and 11058 are found on pages 9-8 to 9-10 of *Rider's Volume IX*. The data given there also apply to Model 11057. A new electric tuning system has been incorporated in later runs of all these receivers, and is illustrated in Fig. 1. The procedure for indexing the tuning system for desired stations is as follows:

- (1) Set receiver to Standard Broadcast band.
- (2) Place "Manual-Electric" lever in "Manual" position, which is extreme counter-clockwise. Be sure the tone control is in the "Normal" position as shown by the indicator.

- (3) Pull out Indexing Rod located at the center bottom half of the escutcheon. This rod has numbers on it which correspond to the push buttons (counting from left to right).
- (4) Set Indexing Rod so that the number on the rod corresponding to the push button you wish to index is in line with the escutcheon plate.
- (5) Turn tuning knob until the pointer has covered the entire dial. This is essential to engage the tuning disc.
- (6) Tune in the desired station accurately, using the tuning eye.
- (7) Push Indexing Rod all the way in, and that particular station will always be tuned in automatically when that particular button is depressed while the "Manual-Electric" lever is in the "Electric" position.

To index more than one station, go through steps (3) to (6) for each station desired and when finished, push the Indexing Rod back as far as it will go.

Caution: When using electric tuning, do not depress more than one button at a time. Depressing two buttons will cause the motor to run continuously or until the automatic thermal switch operates to prevent the motor from burning out. If this happens it may take fifteen minutes for the motor to become cool enough for the electric tuning to become operative again.

Philco 620


Certain oscillator trimmers are incorrectly numbered on pages 6-26 and 6-27 of *Rider's Volume VI* (early Model 620 Philco). In the parts list on page 6-26, the reference numbers should be changed as follows: Change 13 to 16; change 14 to 17; change 16 to 13; change 17 to 14. The same changes should be made on page 6-27 in Fig. 2 and in the alignment instructions located below this figure. These changes must be made so that the

reference numbers will agree with those shown on the schematic which appears on page 6-25. Do NOT alter the numbers on the schematic.

These errors in numbering also appear in the parts list for the late Model 620 Philco. Therefore the reference numbers on page 7-90 of *Rider's Volume VII* must be changed as follows: Change 13 to 16; change 14 to 17; change 16 to 13; change 17 to 14.

G.E. H-400

The final service bulletin on this receiver was not available at the time *Rider's Volume X* went to press and the preliminary schematic, chassis layout, and alignment notes were run on page 10-45. The final service notes show no changes in any of these data. Herewith will be found the socket layout showing the voltages. Make a

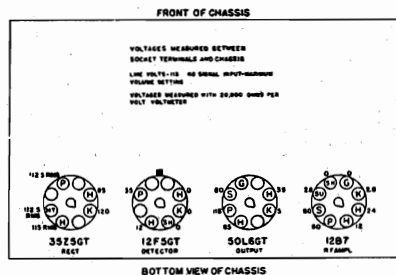


Socket layout and voltages for the General Electric model H-400.

note on the schematic that the power consumption of this receiver is 25 watts and that the impedance at 400 cycles of the voice coil is 3.5 ohms.

Emerson CF-255

Two different type speakers have been used during production of this receiver. In the specifications listed on page 10-23 of *Rider's Volume X*, mention is made of a 4-inch magnetic speaker, but in some chassis a permanent magnet dynamic speaker has been used. In those chassis which employ the latter, the condenser, C-10, in the output circuit, has been changed to 0.024 mf. When the magnetic speaker is used, C-10 is 0.005 mf.

On receivers having serial numbers above 2,637,480, the detector coil, T2, has been changed. The part number is now 6FT-462A.

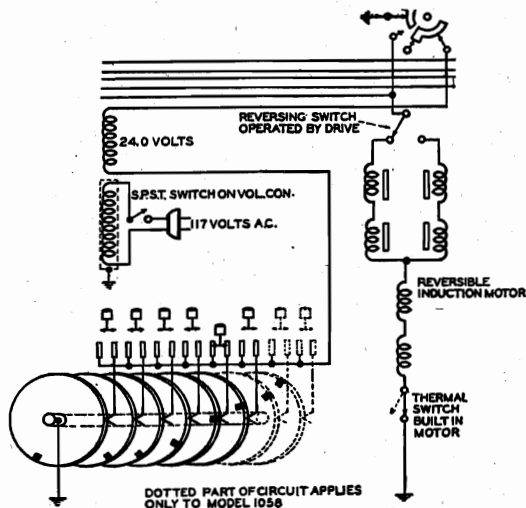

A new electric tuning system has been incorporated in later runs of Majestic models 11056, 11057, and 11058, the schematic being shown at the left. Note that the dotted portion of the drawing applies only to the last named model number.

Remler 49, 171

The Remler Model 171 is identical with Model 49, shown on page 9-3 of *Rider's Volume IX*. The following additional information, not included on page 9-3, is now available.

The antenna-RF coil is located near the back of the chassis and is trimmed by the trimmer on the rear section of variable condenser. The detector coil is located under the chassis and is trimmed by the trimmer on the front section of the variable condenser.

The following table shows the d-c voltages to ground with no signal and the volume control at full volume.

Tube	Plate	Screen	Cathode
6D6	180	180	4.5
6C6	70	180	9.0
41	170	180	0

The d-c voltage of the bias supply for the 41 grid is a 15-volt drop across resistor (9) in the negative side of the power supply.

Airline 62-362 Issue B

Several changes are included in Issue B of the Model 62-362 Airline receiver (above serial number 8J285-200) as compared with the Model 62-362 shown on *Montgomery-Ward* pages 9-45 to 9-47 of *Rider's Volume IX*. Fig. 1 shows that condensers C1, C4, C5, C6, and C9 are mounted in the same unit in Model 62-362, Issue B. Fig. 1 of course corresponds to the layout shown in the upper left-hand corner of page 9-45.

Fig. 2 shows the output end of the schematic for Issue B of Model 62-362. By comparing Fig. 2 with the corresponding portion of the schematic shown on page 9-45, you will notice the new position of the tone control consisting of R14 and C20, and also the two resistors R16 and R17 added across the winding of the phonograph pickup coil.

The accompanying table lists the part numbers and descriptions for Model 62-362 Issue B which are different from those listed on page 9-45.

Schematic Reference	Part Number	Description
R5	BE130144	15,000 ohms, 1 w.
R16	BE130238	400,000 ohms, 1/2 w.
R17	BE13020	100,000 ohms, 1/2 w.
C1	BE12456	3-35 mmf adjustable trimmer
C4	BE12456	2-15 mmf " "
C5	BE12456	2-15 mmf " "
C6	BE12456	2-15 mmf " "
C9	BE12456	450 mmf working capacity, series pad
C20	BE1292	.0005 mf, mica
C22	BE10092	.001 mf, 600 v

Philco 630, 630PF


Certain oscillator trimmers are incorrectly numbered on pages 6-32 and 6-33 of *Rider's Volume VI* (early model 630 Philco). In Fig. 2 and in the alignment instructions, both on page 6-32, the reference numbers should be changed as follows: Change 13 to 16; change 14 to 17; change 16 to 13; change 17 to 14. The same changes should be made in the parts list on page 6-33. These changes must be made so that the reference numbers will agree with those shown on the schematic which appears on page 6-31. Do NOT alter the numbers on the schematic.

These errors in numbering also appear in the parts list for the late Model

630 and the Model 630PF Philco. Therefore the reference numbers on page 7-98 of *Rider's Volume VII* must be changed as follows: Change 13 to 16; change 14 to 17; change 16 to 13; change 17 to 14.

Stromberg 160-L

Variations in new 6J7 tubes have occasionally caused distortion in the automatic tone-control circuit of the Stromberg Model 160-L receiver as first released. These tubes function correctly after "aging" a few hours.

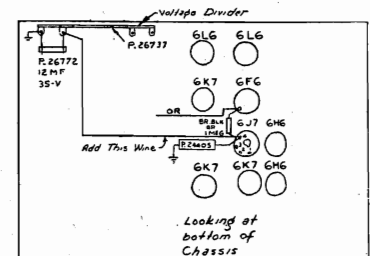

By adding the wire indicated, distortion can be eliminated from the automatic tone control circuit of the Stromberg Model 160-L.

This possibility of distortion can also be eliminated by adding a wire as shown in the accompanying layout. This change stabilizes the screen voltage; it was put in effect at the factory in all 160-P and 180-L receivers, and in all 160-L receivers produced after October 23, 1936.

Philco 37-62

In order to eliminate oscillation, the screen resistor, No. 11, has been changed from 25,000 ohms to 32,000 ohms. See schematic on page 8-19 in *Rider's Volume VIII*.

Fairbanks-Morse 12A

Refer to the schematic shown on page 8-11 of *Rider's Volume VIII*. During production, the 47,000-ohm resistor in the AVC line which was connected to the bottom of the antenna coil secondary, and the condenser (4) were removed. The r-f secondary was then grounded directly, thus removing AVC from the 6L7G mixer tube, and the bottom of the antenna coil secondary was connected directly to the resistor (16). The condenser (33) in the grid circuit of the 6C5G oscillator was changed from 50 mmf to 100 mmf to increase sensitivity on the u-h-f band.


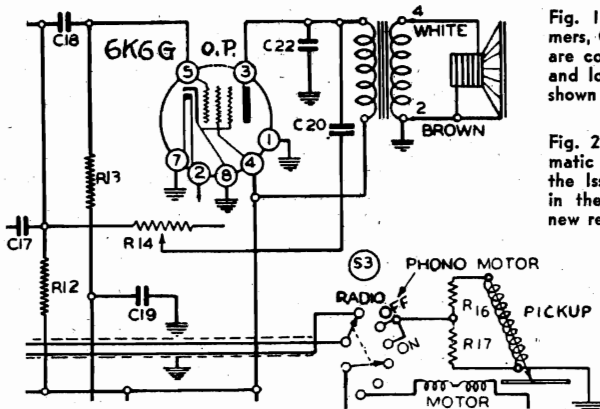


Fig. 1, above. The five trimmers, C1, C4, C5, C6, and C9 are contained in a single unit and located on the chassis as shown in Issue B of the Airline model 62-362.

Fig. 2, left. The partial schematic of the output circuit of the Issue B shows the change in the tone control and two new resistors across the pickup coil.

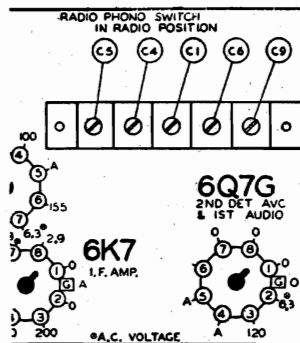

Wells Gardner Tuning Indicators

It may happen in some 1938 and 1939 receivers in which is incorporated either a 6U5 or 6AB5 tuning indicator tube that distortion or overloading will result when strong signals are tuned in. Such troubles may be caused by grid current in the tuning indicator tube. An example of such receivers are those whose schematics appear on page 10-13 and 10-27 of *Rider's Volume X*.

It will be noted that the control grid of the triode section of the 6U5 and 6AB5 tubes is connected to the avc circuit and consequently any grid current that flows will affect the avc voltage. It is suggested by the manufacturer that if such troubles occur, that one or more new tubes be tried and the results checked.

RCA 9TX-31, -32, -33

In cases where repeated failure of the 24-ohm, dial lamp resistor, and the lamp itself have occurred, the following revisions are suggested:

Remove all the connections from terminals Nos. 2 and 4 of the terminal board—see Fig. 1—and from terminals Nos. 2, 5 and 6 of the 35Z4GT tube socket.

Resolder the pilot lamp lead, which was removed from the No. 4 terminal of the terminal board, and the power lead that was removed from No. 6 terminal of the tube socket, to the No. 2 terminal of the rectifier socket. See Fig. 2.

Resolder the pilot lamp lead that was removed from the No. 6 terminal of the socket, to the No. 3 terminal. Add a jumper between the

Nos. 3 and 5 terminals of this same socket.

Resolder the 0.05-mf condenser lead that was removed from the No. 6 terminal to the No. 5 terminal of the same socket. The other side of this condenser remains connected to the No. 1 terminal of the terminal board.

Insert an 86-ohm resistor in the lead between the No. 7 terminal of the rectifier tube socket and the No. 2 terminal of the 35L6GT output tube socket.

Replace the 35Z4GT rectifier tube with a 35Z5GT and the No. 47 pilot lamp with a No. 51.

The schematic of this receiver will be found on page 10-43 of *Rider's Volume X*.

Silvertone 6109, 6110, 6111

A later production run of these models, which is identified by the chassis No. 101.508-1, has had a new model number assigned, 6109. Please add that to your index and on page 10-78 of *Rider's Volume X*.


The condenser, C9, in the cathode circuit of the detector, has been changed in this new chassis from 0.25 mf to 10 mf. This is a 10-volt electrolytic condenser, the part number being 101209144.

If trouble should be experienced from hum in the original chassis, 101.508, it can be corrected by connecting a 10-mf condenser across the 0.25-mf condenser, C9, mentioned above. The positive lead of the condenser should be connected to the cathode of the 6J7 detector tube and the negative lead to the chassis.

Stromberg-Carlson 460-PF

The servicing data for the model 360 which appeared on pages 10-35 to 10-39 inclusive in *Rider's Volume X*, apply to this new model with the following exceptions:

A volume-control motor is installed in these receivers and a remote control unit that is identified as P-31860 may be easily connected if so desired. This unit permits the operation of the receiver from a remote point.

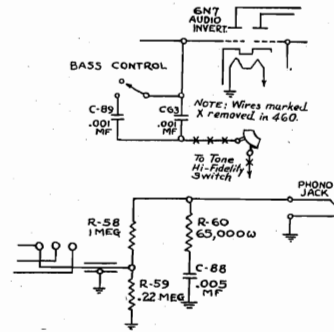

Additional phonograph compensation is incorporated in the Stromberg-Carlson Model 460-PF as shown in the above partial schematics.

An automatic record changer is used in this receiver, which will automatically play up to eight records, 10 or 12 inch, in any order. Additional phonograph compensation has been added, as shown in the accompanying diagrams.

Halsion 40AIX

The same schematic applies to this model as applied to models 104, 106 which was published on *Halsion page 8-4 in Rider's Volume VIII*, with the exception that a 6K8G replaces the 6A7 first detector-oscillator tube.

The socket layout, which appears on the same page as the schematic, can be also applied to this new model if the following exceptions are taken into consideration: The positions of the 80 and 41 tubes are interchanged, i.e., the 80 is now immediately beside the power transformer. The 76 and 6F5 tubes are interchanged, i.e., the 76 is now at the rear of the chassis. The wave-trap trimmer is now reached from the back of the chassis—between the 6D6 tube socket and the first i-f transformer—instead of the right side and the broadcast oscillator series trimmer is now located just to the left of the gang condenser on the top of the chassis, instead of the front.

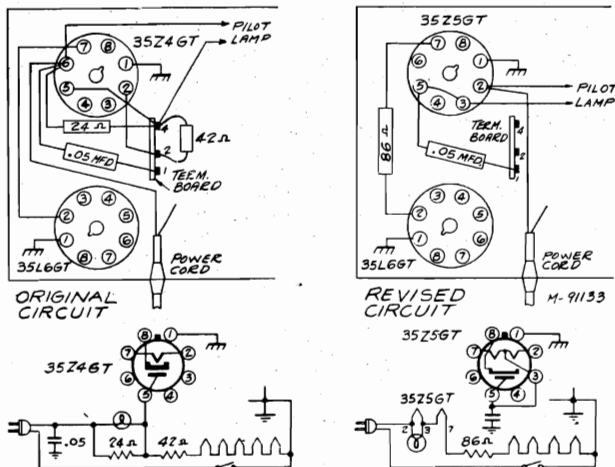


Fig. 1, left, shows the rectifier circuit of the RCA 9TX-31 series before changes were made and Fig. 2, right, the revised rectifier circuit.

G.E. H-500, 501, 510, 511, 520, 521

The preliminary data on these receivers that were published in *Rider's Volume X*, page 10-47, are the same as the final with the exception of the condenser, C-12, in the volume control circuit. This has been changed from 0.002 mf to 0.03 mf for the improvement of performance.


At the time *Volume X* went to press, the voltage data and the chassis wiring diagram were not available. These are reproduced in the accompanying illustrations. The special servicing information that is the subject of the article on page 1 of this issue applies to these receivers and should be used when checking over the circuits.

The following notations apply to the chassis wiring diagram. The parts shown in solid lines are those of Model 520. The same parts apply to Model 521 with the addition of R-11 and C-19, which are shown in dotted lines. For Models 500 and 510, the parts are the same as for Model 520, except that the Beamoscope parts and C-20 are omitted but C-1, shown in dotted lines, is included. Models 501 and 511 have

the same parts as Model 521 with the exception of the Beamoscope and C-20, which are omitted, and the inclusion of C-1.

Capehart 200-F


The alignment procedure for Model 200-F is the same as that for Model 110-G, shown on page 10-4 of *Rider's volume X*, the only exception being

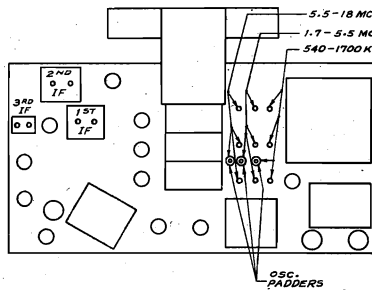


Location of trimmers on Capehart Model 200-F

that Model 200-F uses a 6L7 first detector instead of a 6A8. The accompanying simplified chassis layout shows where the trimmers are located in Model 200-F.

On the right is the socket layout for the G.E. Models H-500, H-501, H-510, H-511, H-520, and H-521 with the voltages indicated at the prongs. Below is the chassis wiring diagram for the same models. See accompanying text for exceptions.

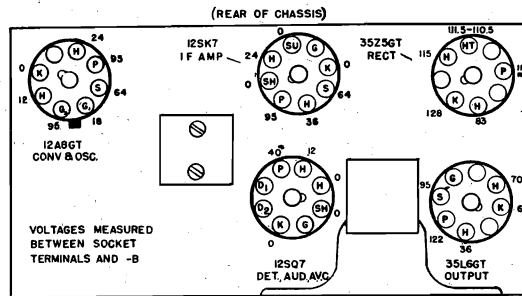

BOTTOM VIEW OF CHASSIS

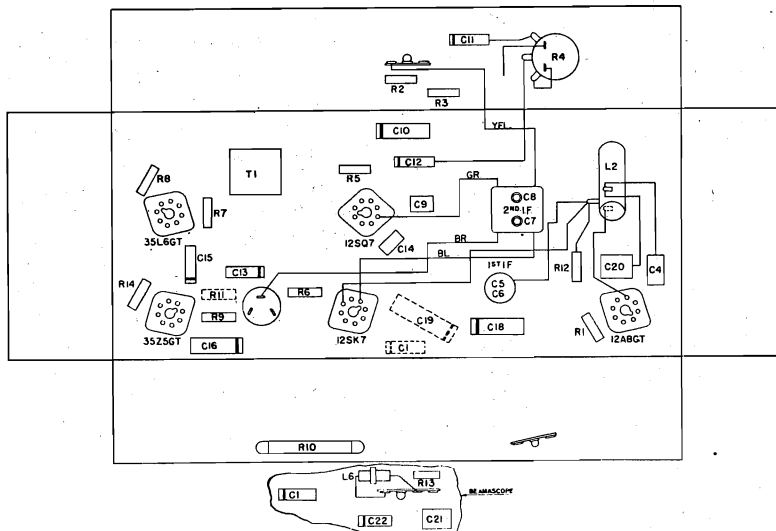

G.E. GM-125

A second method for aligning the frequency-modulated General Electric receiver Model GM-125, the service data for which appear on pages 10-34 to 10-36 inclusive in *Rider's Volume X*, will be found below. This method of alignment does not require the special signal generator mentioned in the first published instructions.

To align the i-f amplifier, connect an electronic voltmeter (or any other d-c voltmeter which has a high input resistance) across R15. Feed a 3-mc signal to the grid of the third i-f tube. Temporarily shunt the secondary winding of T7 with a 10,000 or 15,000-ohm resistor and adjust C48 until the voltmeter reading is a maximum. Then remove the secondary shunting resistor and adjust C49 for maximum reading on the voltmeter. Then connect the shunting resistor across T6 secondary, feed the 3-mc signal to the second i-f grid and peak the trimmers of T6 in the same manner. Repeat this process for each of the i-f transformers in turn until all are aligned.

The frequency demodulator circuit may also be aligned with the voltmeter and signal generator. Feed a 3-mc signal to the input of the i-f amplifier and connect the voltmeter from the cathode connection of R18 to ground. A small voltage reading usually will be indicated if the circuit is slightly out of adjustment. If not, adjust C51 until a reading is secured. Then adjust C50 until the voltage reading is a maximum. After this is done, adjust C51 until the voltmeter reads zero. The discriminator alignment is then complete.

The r-f and oscillator stages are aligned by feeding a 42.8 mc signal to the antenna terminals and, with the receiver tuned to this point on the dial scale, adjusting the oscillator trimmer C4 for maximum reading on the voltmeter, which should be connected across R15. Then peak the antenna and r-f trimmers (C2 and C3) in the same manner.

RCA R-98

If a complaint is received of excessive hum in this model, the schematic of which will be found on page 10-95 of *Rider's Volume X*, the dress of the lead to the pilot light should be checked. This lead should be placed towards the rear of the chassis base, well away from the audio circuits.

Crosley 758

The alignment instructions for this receiver were released too late for publication in *Rider's Volume X* in which the schematic and chassis layouts will be found on page 10-23. It should be noted that two sets of i-f transformers are used; one set is tuned to 455 kc and the i-f peak of the other set is 3000 kc, the latter being designated as "H.F." in the layout.

The output meter is connected to the two plates of the 6N6 output tube with a 0.1-mf or larger (non-electrolytic) condenser in series with one of the leads.

I-F Alignment at 455 kc:

Connect the signal generator through a 0.02-mf condenser to the grid cap of the 6K8, leaving the grid clip in place and the ground lead to the black lead of the receiver. Keep the generator leads as far away as possible from the grid leads of the other screen grid tubes. Tuning condenser plates out of mesh. Volume control to right, "on." Band switch to broadcast. Signal generator set at 455 kc.

Adjust the two rear trimmers on top of the third i-f diode transformer for maximum output. Adjust both trimmers on top of the first B.C. i-f transformer for maximum output.

I-F Alignment at 3000 kc:

Connect signal generator set at 3000 kc to the grid of the 6SK7 tube through a 0.02-mf condenser. Clip on the green lead with spade lug soldered to the band switch. Condenser gang all the way open; band switch to H.F.

Open the front trimmer on the 2nd H.F. i-f transformer. Adjust the front trimmer on the 3rd i-f diode transformer and then the rear trimmer on the 2nd H.F. i-f transformer for maximum output. Align front trimmer on the 2nd H.F. i-f transformer for minimum output. Touch up the front trimmer only on the 3rd i-f (diode).

Transfer the signal generator to the top cap of the 6K8 tube, leaving grid cap in place. Align both trimmers on top of H.F. 1st i-f transformer for maximum output.

B.C. R-F Alignment:

Connect output lead of signal generator set to 1570 kc to blue lead of receiver through a 0.0002-mf condenser; ground lead of generator to black lead. Band switch to B.C. and gang condenser open full.

Adjust B.C. oscillator trimmer (second from end on rear chassis flange) for maximum output. Set generator to 1400 kc and adjust B.C. antenna trimmer (first from end on rear chassis flange) for maximum output.

H.F. R-F Alignment:

Connect signal generator set to 24 megacycles through a 250-ohm resistor to the blue antenna lead. Close gang condenser and open H.F. oscillator shunt trimmer (right trimmer on top of gang) 3/4 turn.

Peak 24-mc signal by adjusting the position of the insulated lead, fastened from oscillator trimmer to gang, with relation to the end of the coil.


Set generator to 47 mc and open gang condenser. Adjust H.F. oscillator shunt trimmer for maximum output.

Set generator to 45 mc and tune in this signal with gang condenser and then adjust antenna shunt trimmer (left on top of gang) for maximum output.

Set generator to 25 mc and tune in with gang. Repeak antenna circuit by adjusting position of wire from antenna trimmer to gang with relation to the end of the antenna coil. If this wire requires much moving, the antenna alignment at 45 mc should be checked.

Zenith 210-5, 211-5, 270-5, 510-5

Chassis 2046, used in Zenith Models 210-5, 211-5, 270-5 and 510-5, contains a few changes as compared with the schematic shown on page 3-1 of *Rider's Volume III* and on page 2729 of the *Rider-Combination Manual*. The only changes in the schematic are found in the oscillator circuit; the accompanying illustration shows these

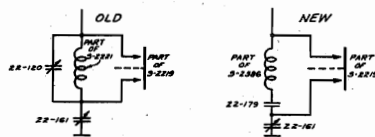

Old and new oscillator circuits in the Zenith chassis 2046.

changes, including both the early and more recent designs. Note that a new part has been added, Part No. 22-179, a series padder; Part No. 22-120 has been removed. In the more recent design, the oscillator coil has been changed from Part No. S-2221 to Part No. S-2586, and the preselector coil

has been changed from Part No. S-2222 to Part No. S-2587. Condenser Part No. 22-137, listed on pages 3-1 and 2729 as having a value of 0.5 mf, should be listed as 0.05 mf; please make this change in your Manual. Also note the additional model, Model 510-5, using Chassis 2046.

The following table of d-c voltages applies to Chassis 2046. All readings are taken from socket connections to ground, using a 1000 ohms-per-volt meter; the volume control is turned to the maximum position and the line voltage corresponding to these readings is 117 volts.

Tube Type	Position	Plate Volt.	Cath. Volt.	Screen Volt.	Supp. Volt.	Plate Current
58	RF	260	3.5	120	3.5	9.0
24A	1st Det.	260	5.5	120	..	0.2
27	Osc.	120	0	4.2
58	IF	260	3.5	120	3.5	8.4
27	2nd Det.	180	10.	0.3
47	Power	240	..	260	..	30.
80	Rect.	120	30.
		120	30.

The trimmers on the condenser gang should be adjusted at 1500 kc, the series oscillator padder at 600 kc.

Montgomery-Ward 62-403

If distortion occurs of a type which seems as if the receiver were being overloaded and which can not be accounted for in any other way, check the capacity of the 5-mmf coupling condenser, C-33, in the i-f circuit. If this can not be done, substitute another of the same capacity. This condenser has a tolerance of 5% and some cases have been encountered in which the capacity has been raised from 12 to 20 mmf due to an internal short circuit. The schematic diagram of this receiver will be found on page 9-59, 9-60 in *Rider's Volume IX*.

Wells-Gardner A-12

If mushy reproduction is encountered on a medium or strong signal after the receiver has been operating about ten minutes, it probably is due to grid current in the 6U7G r-f and i-f tubes. Change the 4-megohm resistor, R-14, to a 2-megohm resistor. If this does not clear up the signals, replace either the 6U7G r-f or i-f tubes or perhaps both of them. The schematic of this receiver will be found on page 9-35 of *Rider's Volume IX*.