

Most - Often - Needed

1941

RADIO
DIAGRAMS
and Servicing Information

Compiled by

By M. N. BEITMAN

B.S. in Mathematics, Illinois Institute of Technology

Instructor, Chicago High Schools

Formerly, Engineer, U. S. Signal Corps

Associate, Institute of Radio Engineers

Holder of Radiotelephone First Class License

Author of Many Radio Books and Articles

SUPREME PUBLICATIONS

CHICAGO

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

INDEX

Admiral		Crosley Corp.		Emerson Radio	
see Continental		CA-12	28	DB-296	38
Air King Prod.		22	19	DB-301	38
4012	7	22-AS	19	DB-315	38
4016	7	CR-26	20	DE-327	38
4112	7	27	20	DL-330	38
4136	7	28	21	DW-330A	38
Airline		Chassis 28	33	DW-330B	38
see Montgomery		29	22	FG-330	44
Allied Radio		30	23	DY-337	43
B-10596	8	J30-BC	23	DY1-337	43
B-10598	8	33, 33-BG	25	DR-343	39
B-10600	8	34, 34-BH	26	DR1-343	39
B-10606	8	C-35-AK	24	DR-348	39
B-17103	8	TK-52	31-32	DR1-348	39
B-17104	8	60	28	DY-349	43
B-17107	8	TA-62	29-30	DY1-349	43
B-17108	8	63	29-30	DR-350	39
B-17113	8	64	31-32	DY-351	43
B-17114	8	CB-82-R	33-34	DY1-351	43
B-17165	9			DR-352	39
B-17180	9	Delco		DW-358	38
B-17187	9	see United Mot.		DS-365	40-41
Arvin		Detrola Radio		DS-372	40-41
see Noblitt-Sp.		295	35	DU-379	42
Belmont Radio		295-1	35	DU-380	42
518	10	297	35	FC-400	44
533	11	304	36	FP-421	45
536	12	305	36	FP-422	45
681	13	310	36		
1100	14	320	37	Fada Radio	
Chevrolet		360	37	148	47
985694	15	392	37	153	48
985695	16	2741	37	194	46
985697	17	2742	37	F.M. data	182
Continental		3041	36	Galvin Mfg. Co.	
G-5	18	3051	36	see Motorola	
M5-PH	18	3101	36	Garod Radio	
XM5-PH	18	3201	37	BP-36A	49
		3202	37		
		3601	37		
		3602	37		

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

3

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

General Electric

J-51	50
J-53	50
J-54	50
J-71	51
J-105	52
JB-410	53
LB-530	55
J-602	54
J-603	54

Hallicrafters

S-27	56-57
------	-------

Howard Radio

14ACB	58
702	58
765	59-60
780	60-61

Lafayette Radio

E-114	62
E-191	63

Majestic Radio

T101-L-A	65
TP221-A	65
TP231-A	65
TR-321-A	64
TR-331-A	64
403	64

Magnovox

CR-154	66
CR-156	67

Midwest Radio

51	68
181	69

Montgomery-Ward

04BR-511A	70
04BR-512A	70
04BR-513A	71
04BR-514A	71
04BR-729A	72
04BR-730A	72
04BR-1105A	73

Montgomery-Ward

04WG-464	74
04WG-569B	75
04WG-610	76
04WG-611	76
04WG-731A	78
04WG-803	77
14WG-672	79

Motorola

40 new	81
50W	81
56X1	81
58-F1	82
58-FRC	82
65-BP1,2,3,4	82
251	85
301	80
401	83-84

Noblitt-Sparks

RE-76	87
RE-78	88
RE-82	86
RE-84	89
RE-86	89
520	89
522	87
622	88
720	89
822	86

Packard Bell

65-A	90
67-R	90
67-RPA	90

Philco Radio

PT-2	92
PT-6	92
PT-12	92
PT-30	91
PT-42	91
PT-44	91
PT-49	91
41-90	97
41-95	97
41-100	97

Philco Radio

41-105	97
41-110	93
41-220	94
41-221	95
41-225	94
41-226	95
41-230	96
41-231	98
41-235	96
41-250	99
41-255	99
41-256	100
41-258	101
41-260	102
41-265	102
41-280	103-104
41-285	103
41-287	103
41-290	103
41-295	105
41-300	105
41-316	106-107
41-601	108
41-602	108
41-603	109
41-604	109
41-605	109
41-607	109
41-608	110
41-609	110
41-610	111
41-611	111
41-620	112
41-623	113
41-624	113
41-625	113
41-705	114
41-842	116
41-843	116
41-844	116
41-851	115

Pilot Radio

B-1	117
T-1	117
T-186	117

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

RCA Mfg. Co.

IX	118
IX2	118
BP-10	119
10X	120
12X	121
12X2	121
14X	122
15-BP	123
15X	124
16K	125-126
16T3	125-126
16X-1	124
16X-2	124
16X-3	124
16X-4	127
16X-11	128
16X-13	128
17K	129
19K	131
45X-3	130
45X-4	130
45X-16	130
45X-17	130
45X-18	132
V-100	133
V-101	133
V-102	134
110-K	135-136
111-K	137

Radio Wire Tel.
see Lafayette

Sears, Roebuck

R-101	139
R-111	139
3351	138
3361	140
3451	138
3461	140
3551	138
3561	140
3621	140
R-5561	141
5601A	142
5732	141

Sears, Roebuck

6449	142
101.614	139
101.615	139
101.617	141
101.628	142
109.356	140
109.371	141
132.802	138

Sentinel Radio

248	143
-----	-----

Silvertone

see Sears,

Sonora Radio

3 way port.	144
4 tube TRF	144

Sparton

511	145
651	147
601-S	146
761	148
1091	149

Stewart-Warner

11-5V	150
11-5W	151
11-6T	153
11-6T-S	153
11-8D	154
11-8D-Z	154
15-5Y	152

Stromberg-Carlson

515	155
520	156
530	157
535	157

Talk-A-Phone

MS-10	158
LP-65	158
LP-70	158

Truetone

see Western Auto

United Motors

R-1171	160
R-1172	160
R-1173	160
R-1176	159
R-1181	159
R-1186	161-162
R-1188	161

Wells-Gardner

6B18	163
------	-----

Western Auto

D-1175	164
D-1190	165
D-1191	166

Westinghouse

WR-12X7	169
WR-173-L	167
WR-175	167
WR-184	168
WR-186	169
WR-388	170
WR-682	168
WR-682A	168

Wilcox-Gay Corp.

A-89	171
A-91	171-172
A-92	171
A-93	171
A-94	171
A-101	171
A-102	171

Zenith Radio

4B-01	184
4K-600	184
5A-03	173
5A-10	174
5B-01	185
5D-610	185
5D-625	185
5G-504	173
5G-510	174
5G-534	174
6A-05R	189

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

5

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Zenith Radio

6A-05R	189
6A-16	175
6A-19	176
6A-20	177
6A-24	187
6A-25	188
6A-26	186
6D-512	175
6D-516	187
6D-520	186
6D-538	186
6D-539	175
6G-501	176

Zenith Radio

6G-533	188
6G-560	188
6S-532	189
6S-596	177
6S-597	177
7A-11	190
7S-598	190
8A-04	178
8S-593	178
8S-594	178
10A-2R	192
10A-3	179
10A-3R	191-192

Zenith Radio

10H-551	179
10H-571	179
10H-571R	191
10H-573	191-192
12A-1	180
12S-550Z	180
12S-568E	180
12S-568Z	180
12S-569E	180
12S-569Z	180
12S-595Z	180
S8500Z	181
S9000	181

SUPREME PUBLICATIONS

9 South Kedzie Avenue

Chicago, Illinois

Most-Often-Needed RADIO DIAGRAMS and Servicing Information

1942 You need this newest Supreme manual of servicing data on all popular 1942 sets. **VOLUME 5** Repair radios quickly and properly—follow factory instructions given in these manuals. 208 fact-packed pages. Large size, 8½x11 inches. Manual style binding **\$200**

1940 Let this important manual give you over 80% of 1940 circuits you will ever need, **VOLUME 3** acquaint you with new developments, train you to service quickly and efficiently millions of sets. Data on F.M., portables, recording, etc. 417 models of 43 manufacturers. 208 pages, 8½x11 inches. Net Price **\$200**

1939 Another condensed manual of most-popular diagrams you need. Circuit data, hints, and information are time-savers and money-makers for you. Let these diagram manuals guide you to easier service work. 192 pages, 8½x11 inches. Diagrams of 39 manufacturers. **\$200**

1926-1938 The most popular manual of the series. Will pay for itself with time saved the first day of use. **VOLUME 1** 427 diagrams of most-serviced radios, with parts list and alignment information. 244 pages, 8½x11 inches. **\$250**

PRACTICAL RADIO for War Training
This new, 1943 manual will clarify the important radio facts, explain the principles which may have puzzled you, and point the way to faster radio repairing. You will find hundreds of practical hints for mounting parts, testing components, trouble-shooting, using instruments. Needed useful theory in each chapter is followed with practical applications. This is the book that will help you repair radios faster, or obtain a good radio War-job, or get ahead in the Armed Forces. Use this book as your ready reference for finding the right answer to every radio problem. Written by M. N. Beitman. 336 large pages, 6x9 inches. Printed on thick, enamel paper. Almost 300 illustrations and diagrams to help you. Seal leatherette cover. Attractive manual-binding. Sold with a **\$295** money-back guarantee. Price only.....



Simplified Radio Servicing by COMPARISON Method

Repair radios in minutes instead of hours. Revolutionary different COMPARISON technique permits you to do expert work on all radio sets. Most repairs can be made without test equipment or with only a voltohmmeter. Many simple, point-to-point, cross-reference, circuit suggestions locate the faults instantly. Plan copyrighted. Covers every radio set—new and old models. This new servicing technique presented in handy manual form, size 8x11 inches, 112 pages. Over 1,000 practical service hints. 16 large, trouble-shooting blueprints. Charts for circuit analysis. 114 tests using a 5c resistor. Developed by M. N. Beitman. Net Price **\$150**

How to MODERNIZE RADIOS for Profit



Cash in by improving audio circuits, modernizing cabinets, adding features usually found on late model sets. Practical job-sheets with schematics and photographs make the work easy. You are told how to obtain modernization work, what to charge, and how to complete the job quickly and efficiently. Large size, 8½x11 inch manual is **\$100** priced at only.....




6

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

AIR-KING PRODUCTS CO., Inc.

1523-29 63rd STREET

BROOKLYN, N. Y., U. S. A.

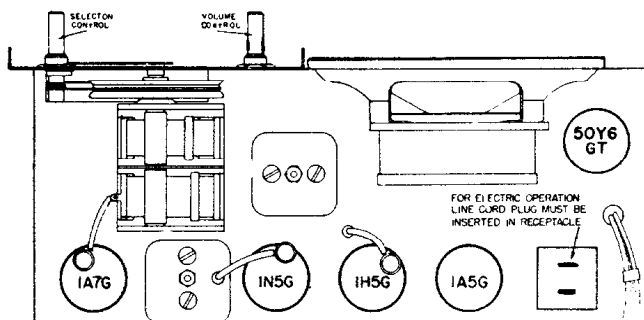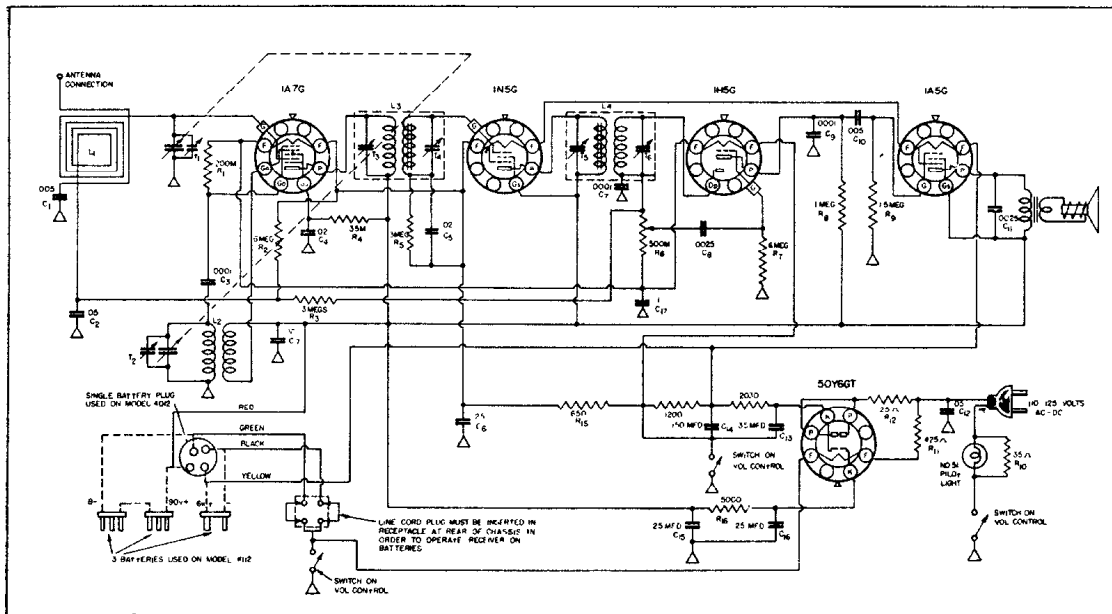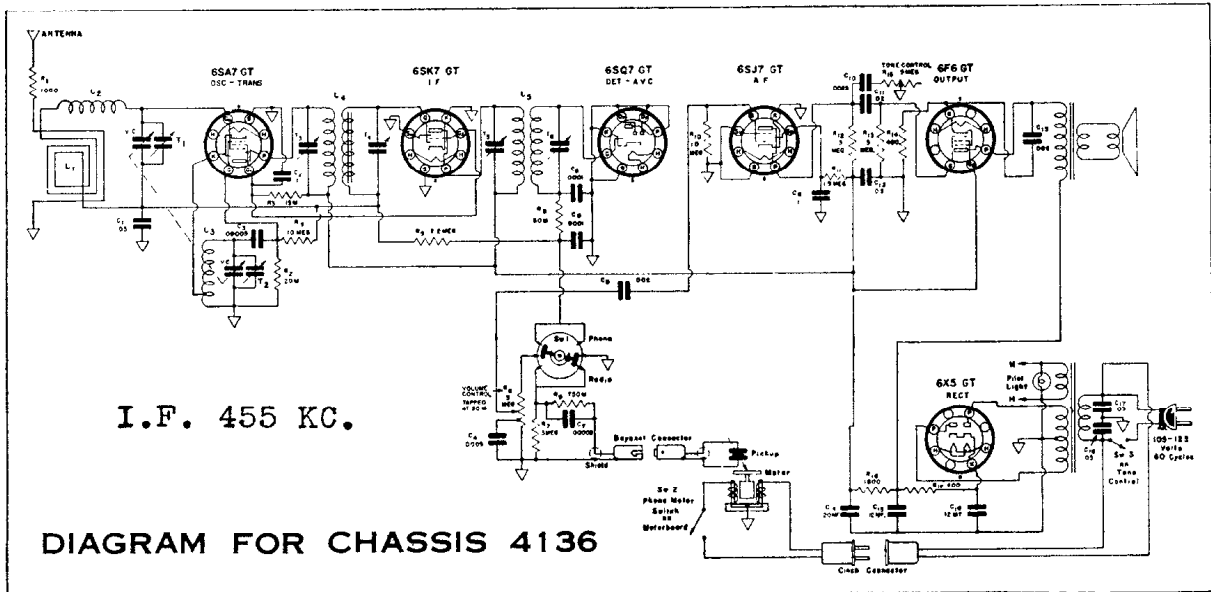

Air-King Products Co.
Models 4012, 4016, 4112

I.F. 455 KC.

7


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Knight 12 Tube Radio and Automatic Phonograph
B17165, B17180, B17187.

ALLIED RADIO CORPORATION
CHICAGO

I.F. 455 KC.

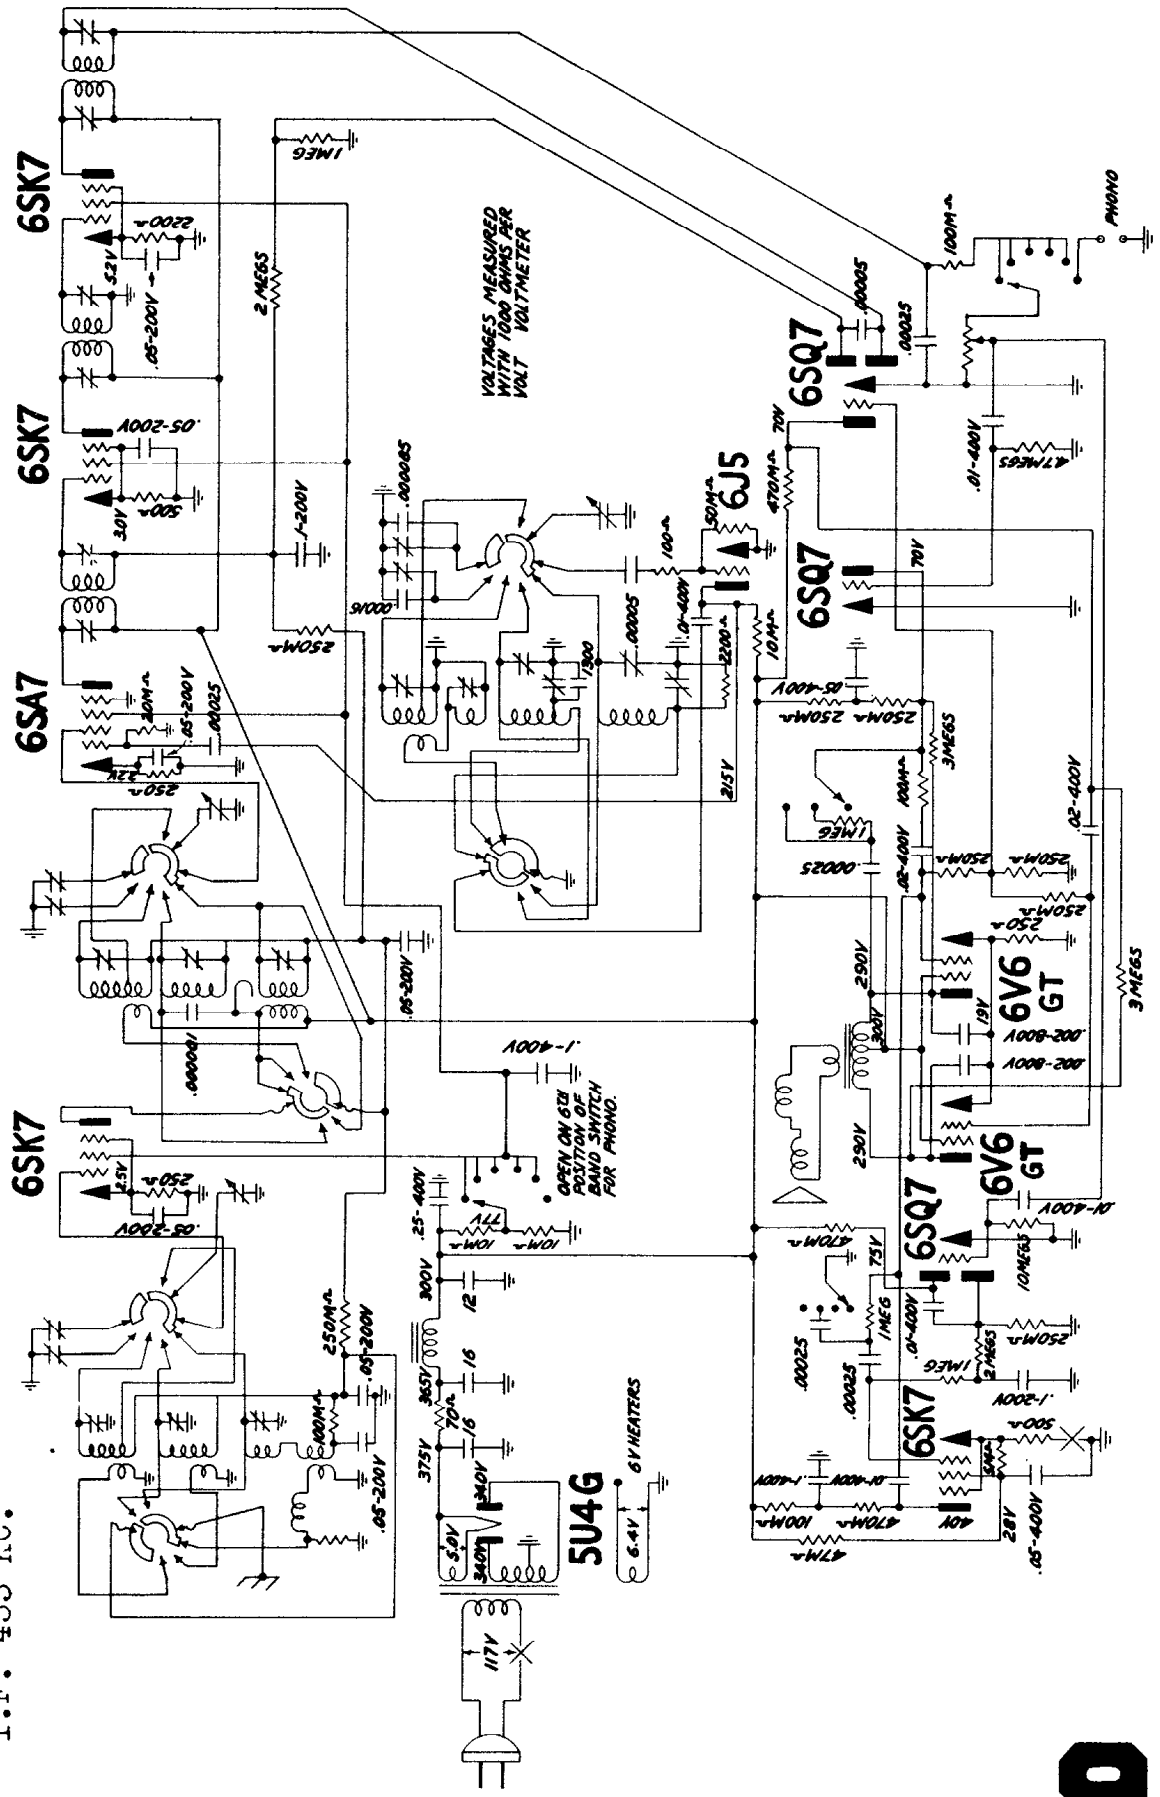

VOLTAGES MEASURED WITH 1000 OHMS PER VOLT VOLTMETER


5U4G
 6.4V 6V HEATERS

OPEN ON 6V SWITCH OF BAND SWITCH FOR PHONO.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS



MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

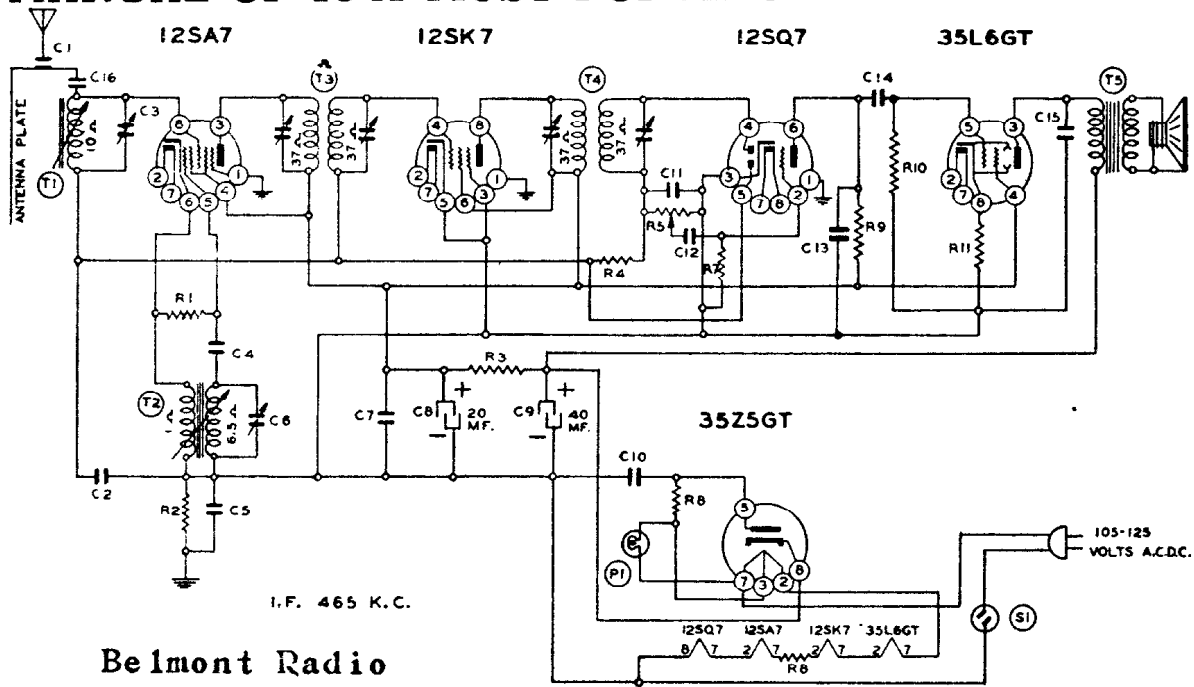

Belmont Radio

Circuit Diagram Ref.

Part No. Description

RESISTORS

R1	130176	20M ohm— $\frac{1}{2}$ w.
R2	130100	150M ohm— $\frac{1}{2}$ w.
R3	130279	1M ohm—1 watt
R4	1304	3 megohm— $\frac{1}{2}$ w.
R5	101196	500M ohm volume control
R6	130293	30 ohm—1 watt
R7	130257	5 megohm— $\frac{1}{2}$ w.
R8	130288	50 ohm—1.5 watt
R9	1302	75M ohm— $\frac{1}{2}$ w.
R10	13011	250M ohm— $\frac{1}{2}$ w.
R11	130166	150 ohm— $\frac{1}{2}$ w.

CONDENSERS

C1	131262	.00001 washer condenser (on Antenna plate)
C2	10022	.05 x 200 v.
C3	124100	Antenna Trimmer
C4	12930	.00005 Mica
C5	10091	.15 x 400 v.
C6	124100	Oscillator Trimmer
C7	10022	.05 x 200 v.
C8	11992	20 mfd. x 150 v. lytic
C9	11992	40 mfd. x 150 v. lytic
C10	10013	.05 x 400 v.
C11	12912	.00025 mica
C12	10025	.002 x 600 v.
C13	1292	.0005 mica
C14	10011	.01 x 400 v.
C15	10011	.01 x 400 v.

C3 and C6 in one unit
C8 and C9 in one unit


PARTS

T1	111136B	Antenna Coil Complete
T2	110126B	Oscillator Coil
T3	108157C	Input I. F. Coil—465 kc.
T4	108157C	Output I. F. Coil—465 kc.
T5	114170	4" P. M. Speaker and Transformer
S1	101196	Off-on switch on volume control
P1	107249	6-8 v. pilot light T-47


BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMETER BETWEEN SOCKET TERMINALS AND B—

- [A] - CANNOT BE READ WITH VOLTMETER
- [B] - 12 V. A.C. BETWEEN PINS 2 & 7.
- [C] - 32 V. A.C. BETWEEN PINS 2 & 7.
- [D] - 117 V. A.C. BETWEEN PINS 2 & 8.
- [E] - 9 VOLTS OSCILLATOR GRID VOLTAGE SHOULD BE MEASURED WITH AN R.F. CHOKE PLACED IN SERIES WITH THE VOLTMETER LEAD DIRECTLY AT PIN 5.

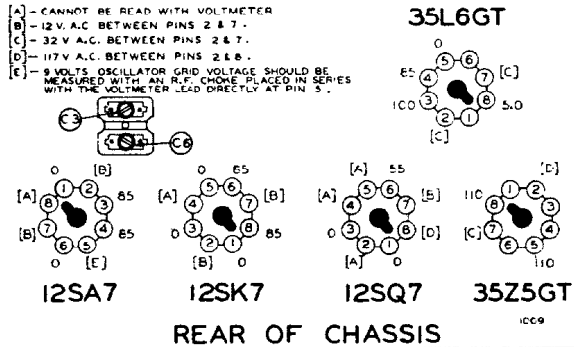

REAR OF CHASSIS

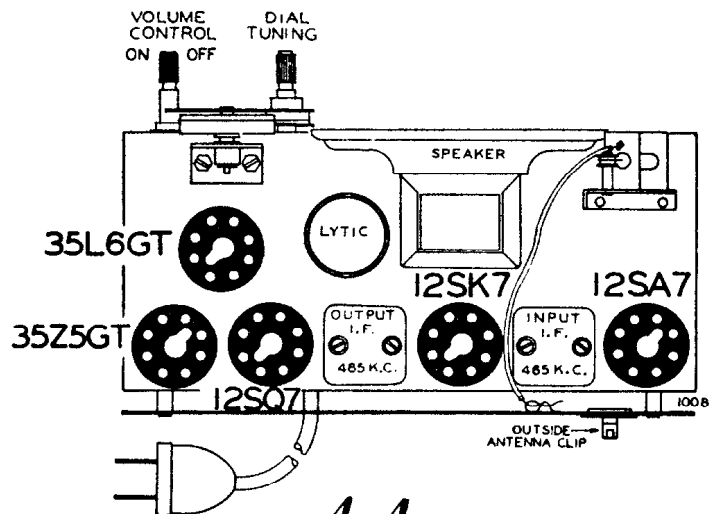


Model 518


10

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

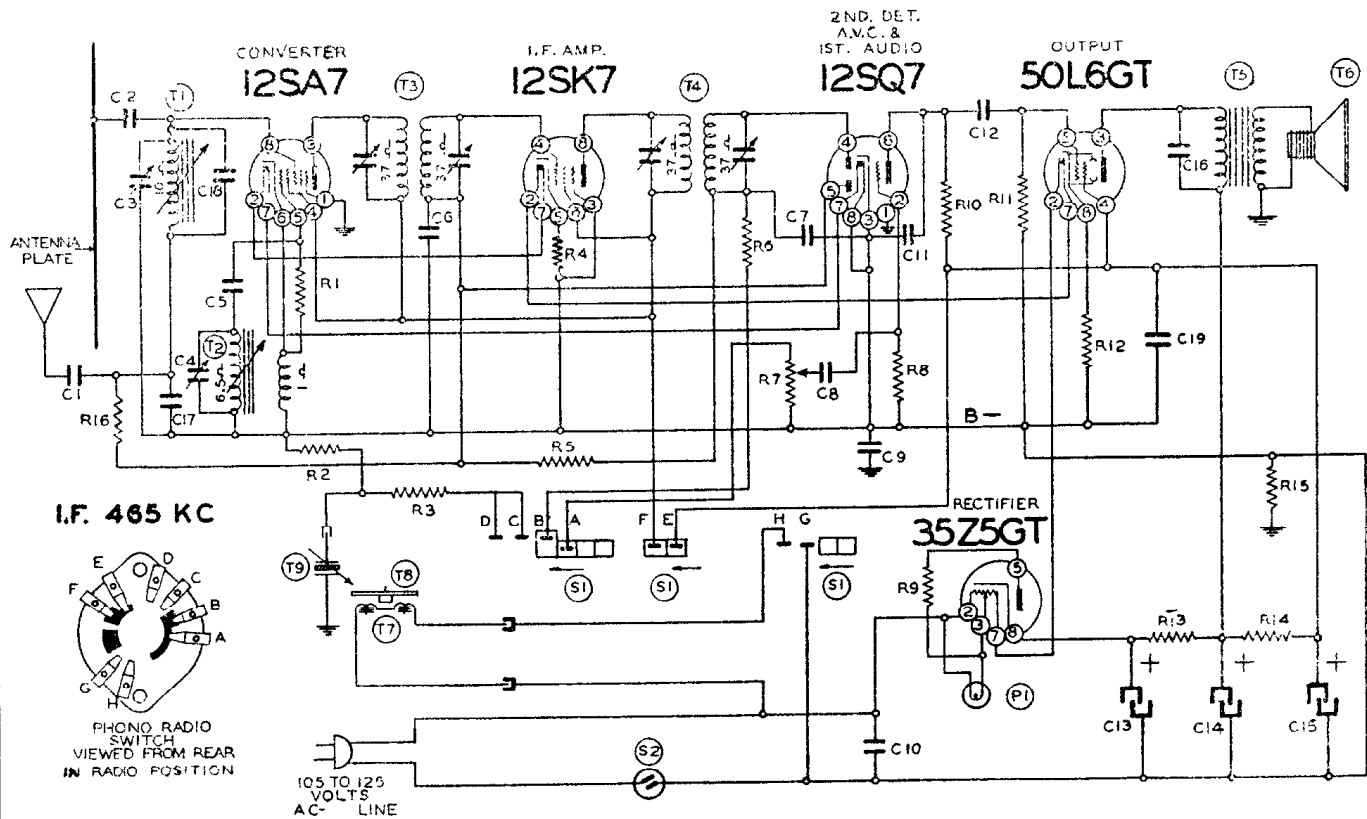

I.F. 465 KC


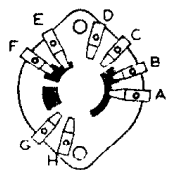


PHONO RADIO SWITCH VIEWED FROM REAR IN RADIO POSITION


Circuit Diagram Ref. No.	Part No.	Description
RESISTORS		
R1	130176	20M ohm— $\frac{1}{2}$ w.
R2	130118	600M ohm— $\frac{1}{2}$ w.
R3	130118	600M ohm— $\frac{1}{2}$ w.
R4	13056	100 ohm— $\frac{1}{2}$ w.
R5	130170	3 megohm— $\frac{1}{2}$ w.
R6	13012	50M ohm— $\frac{1}{2}$ w.
R7	101217	$\frac{1}{2}$ megohm—volume control
R8	130257	5 megohm— $\frac{1}{2}$ w.
R9	130215	25 ohm— $\frac{1}{2}$ w.
R10	1309	200M ohm— $\frac{1}{2}$ w.
R11	13037	750M ohm— $\frac{1}{2}$ w.
R12	130166	150 ohm— $\frac{1}{2}$ w.
R13	13097	200 ohm— $\frac{1}{2}$ w.
R14	130287	1200 ohm—1 watt
R15	1309	200M ohm— $\frac{1}{2}$ w.
R16	1309	200M— $\frac{1}{2}$ w.
CONDENSERS		
C1	1295	.0001 Mica Condenser
C2	129114	.0003 mfd. mica
C3	124136	Antenna Trimmer
C4	124136	Oscillator Trimmer
C5	1295	.0001 mica
C6	1009	.05 x 200 v.
C7	1295	.0001 mica

C8	10025	.002 x 600 v.
C9	100119	.1 x 400 v.
C10	1001	.1 x 400 v.
C11	12912	.00025 mica
C12	10019	.006 x 600 v.
C13	11994	40 mid. lytic—150 w. v.
C14	11994	20 mid. lytic—150 w. v.
C15	11994	20 mid. lytic—150 w. v.
C16	10011	.01 x 400 v.
C17	129162	.0008 Mica Condenser
C18	129163	.000025 Ceramic Condenser
C19	10013	.05 x 400 v. Cond.
C3 and C4 in same unit C13, C14 and C15 are in same unit		
PARTS		
T1	112866	Antenna Coil—Permeability tuning assembly complete
T2	112866	Oscillator Coil
T3	108140F	Input I. F. Coil—465 kc.
T4	108145D	Output I. F. Coil—465 kc.
T5	105108	Output Transformer
T6	14198	5" P.M. Speaker
T7	104206	Phono Motor
T8	12228	Turntable
T9	114194	Phono pick up arm
S1	125113	Phono Switch
S2		Switch on volume control
P1	107249	Pilot light T47
T1 and T2 in same unit		

Belmont Radio MODEL 533—SERIES C

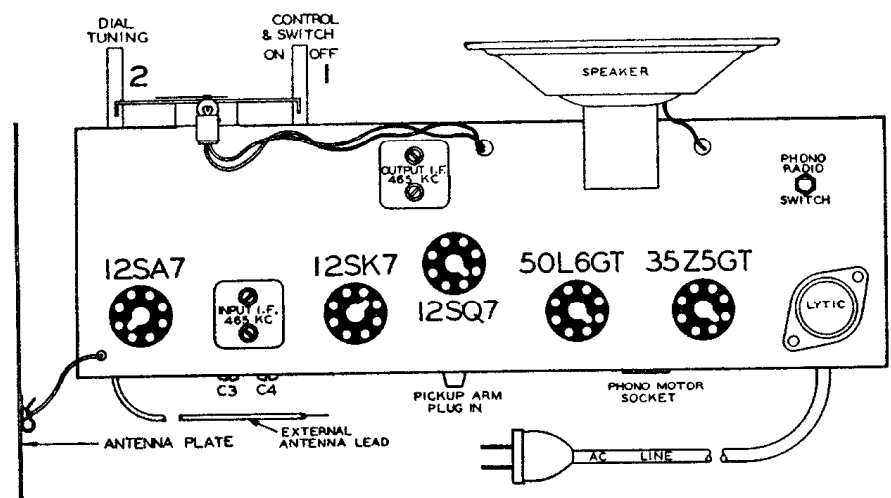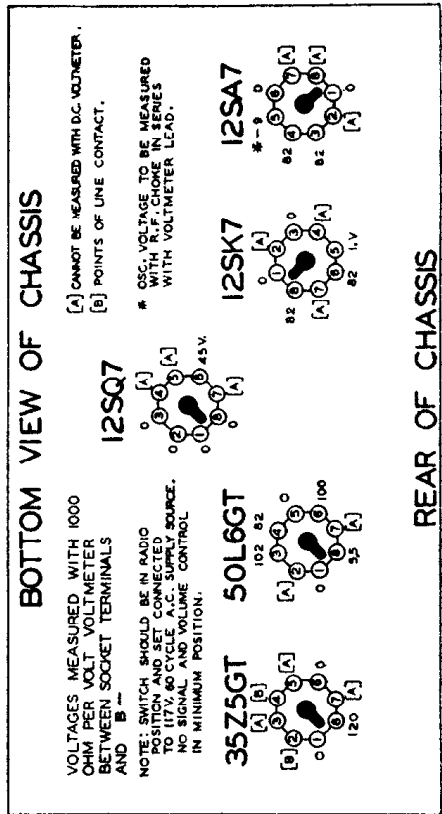

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

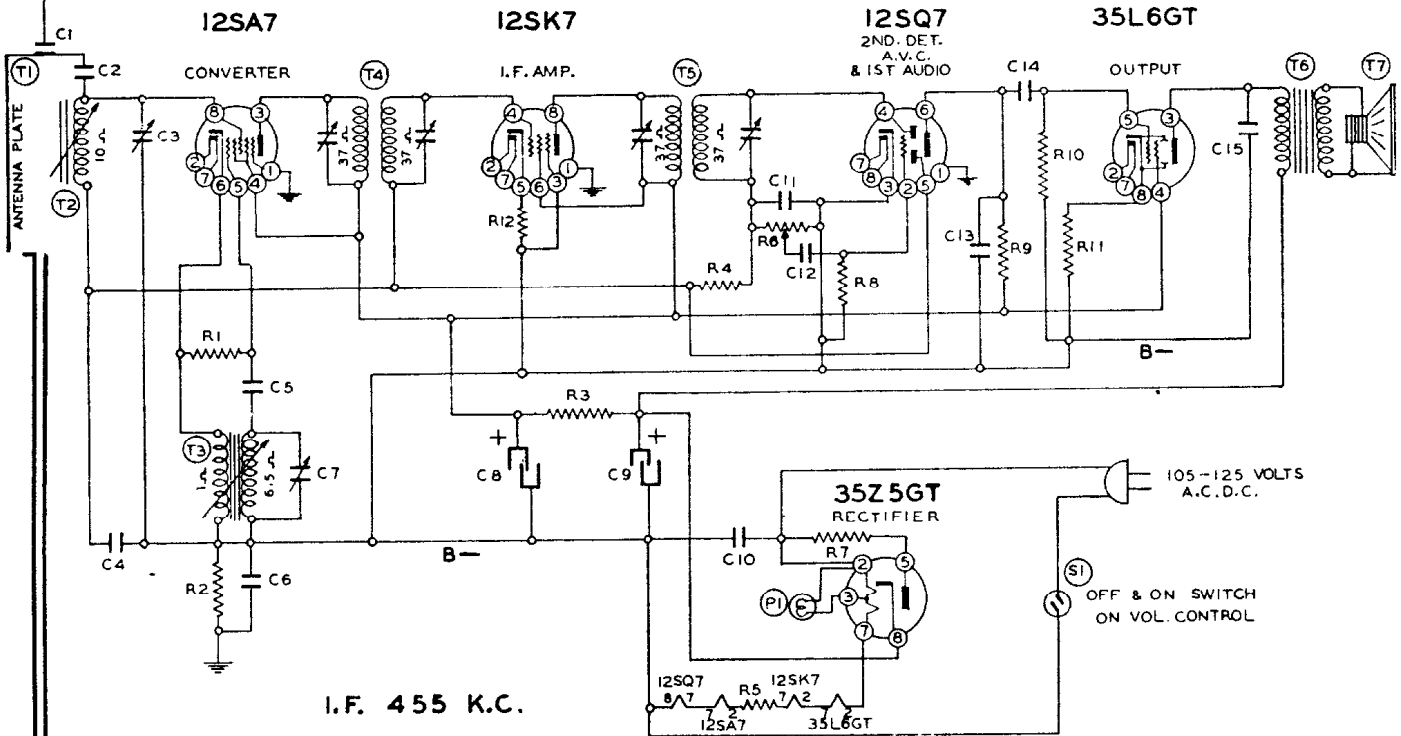

Schematic Part Ref. No. No.

Description

RESISTORS

R1	130176	20M ohm— $\frac{1}{2}$ w.
R2	130100	150M ohm— $\frac{1}{2}$ w.
R3	130279	1M ohm—1 w.
R4	1304	3 megohm— $\frac{1}{2}$ w.
R5	130288	50 ohm—1.5 w.
R6	101238	500M ohm volume control and switch
R7	130240	30 ohm— $\frac{1}{2}$ w.
R8	130257	5 megohm— $\frac{1}{2}$ w.
R9	100100	150M ohm— $\frac{1}{2}$ w.
R10	13011	250M ohm— $\frac{1}{2}$ w.
R11	130166	150 ohm— $\frac{1}{2}$ w.
R12	130233	60 ohm— $\frac{1}{2}$ w.

CONDENSERS

C1	131262	.00001 washer condenser (Antenna clip on back plate)
C2	129114	.0003 mica
C3	124151	Trimmer on antenna coil
C4	1009	.05 x 200 v.
C5	12939	.00005 mica
C6	10091	.15 x 400 v.
C7	124151	Trimmer on oscillator coil
C8	11992	20 mfd. lytic x 150 w. v.
C9	11992	40 mfd. lytic x 150 w. v.
C10	10013	.05 x 400 v.
C11	12912	.00025 mica
C12	10025	.002 x 600 v.
C13	1292	.0005 mica
C14	10011	.01 x 400 v.
C15	10011	.01 x 400 v.

C3 and C7 are in same unit
C8 and C9 are in same unit

PARTS

T1	128586B	Back plate (walnut)
	128586	Back plate (ivory)
T2	112877	Antenna coil—Permeability tuning assembly complete
T3	112877	Oscillator coil—Permeability tuning assembly complete
T4	108157L	Input I. F. coil—455 Kc.
T5	108157N	Output I. F. coil—455 Kc.
T6	10595C	Output transformer
T7	114225	5" P. M. speaker
S1		Switch on volume control
P1	107249	Pilot light T47


Model 536 Radio

BOTTOM VIEW OF CHASSIS


VOLTAGES MEASURED WITH A HIGH RESISTANCE VOLTMETER BETWEEN SOCKET TERMINALS AND B—

[A] CANNOT BE MEASURED WITH VOLTMETER.

* OSCILLATOR VOLTAGE TO BE MEASURED WITH R.F. CHOKE IN SERIES WITH VOLTMETER LEAD.

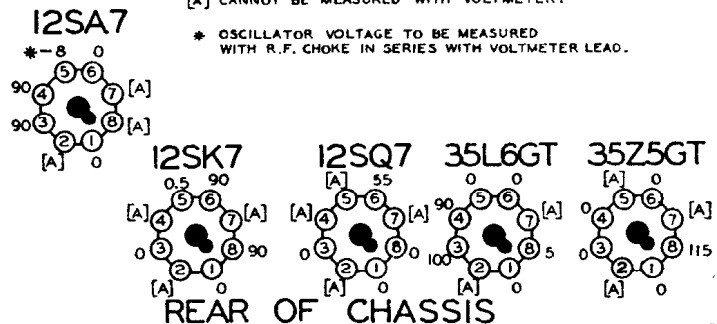

VIEW LOOKING AT BOTTOM OF CHASSIS

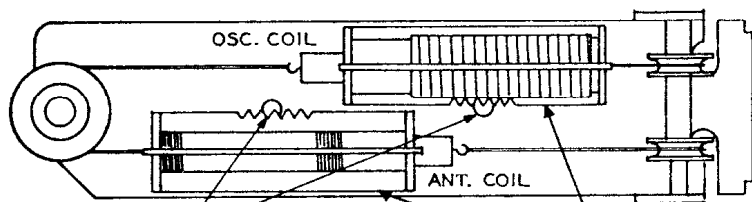

NOTE "A" THE ANTENNA COIL ASSEMBLY IS MADE SO THAT IT IS MOVABLE LEFT OR RIGHT. WHEN MAKING THE ADJUSTMENT AS GIVEN IN THE ALIGNMENT PROCEDURE MOVE THE COIL ASSEMBLY VERY SLOWLY. IT CAN BE MOVED BY HAND OR BY PIVOTING ONE EDGE OF THE BLADE OF A SCREWDRIVER IN THE HOLE AND ENGAGING THE BLADE IN THE GEAR TEETH OF THE COIL FORM.

TO ADJUST COIL ASSEMBLY MOVE LEFT OR RIGHT




Belmont Radio

12

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Belmont Radio Model 1100

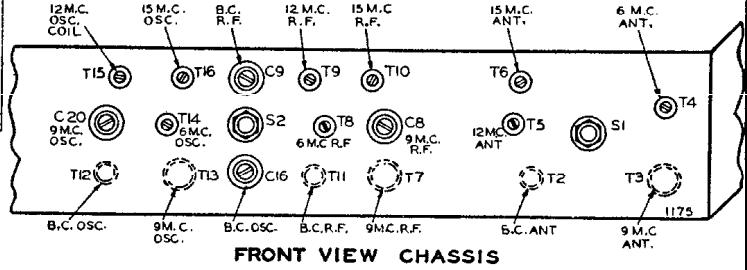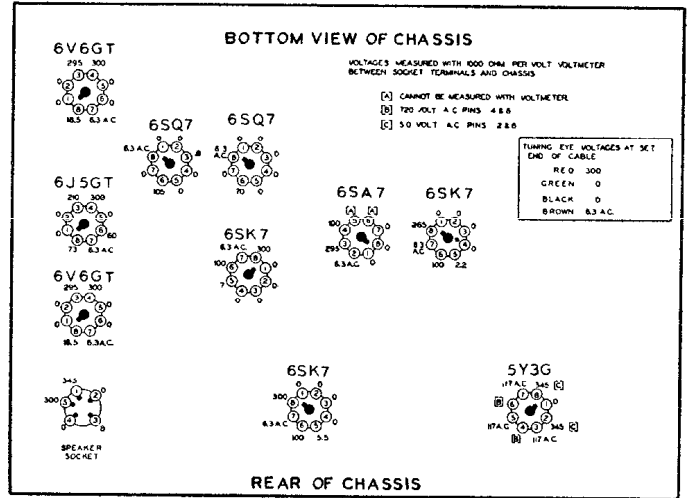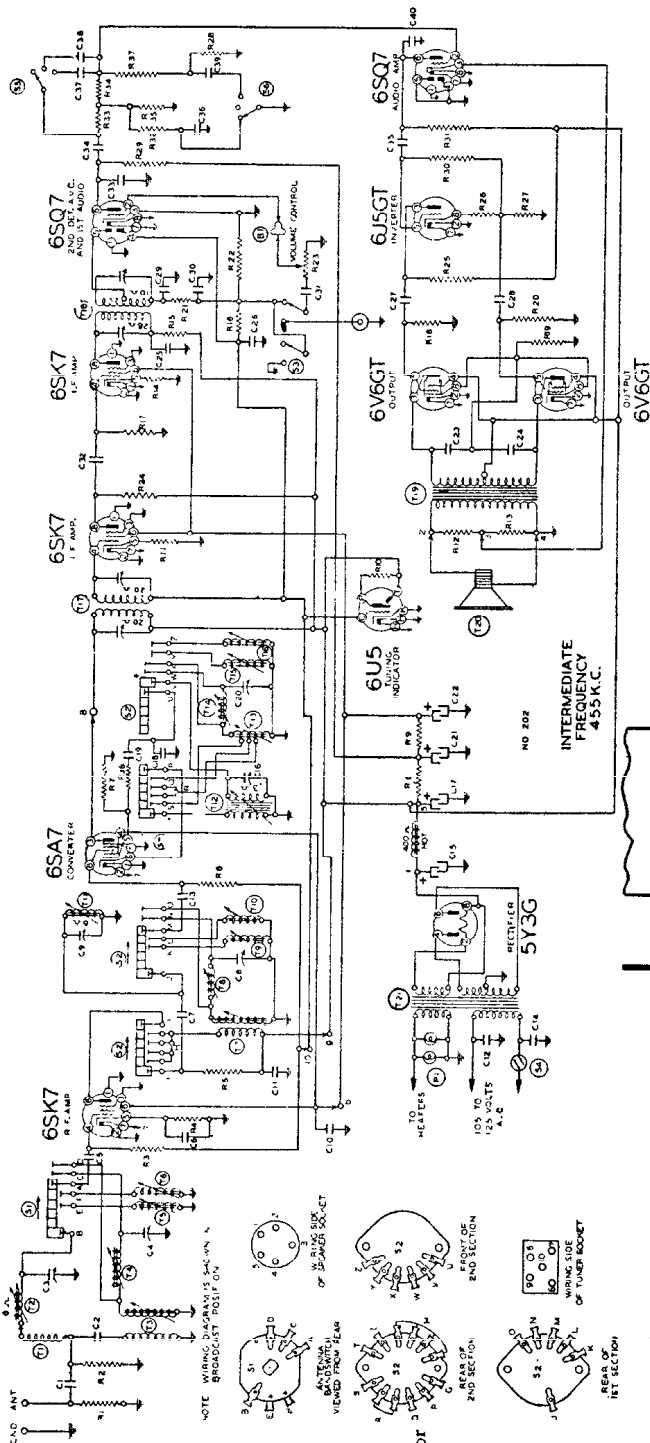

TRIMMER VIEW

PARTS

- 111207 Loop Antenna Assembly
- T1 B.C. Antenna Coil
- T2 9 mc. Antenna Coil
- T3 6 mc. Antenna Coil
- T4 12 mc. Antenna Coil
- T5 15 mc. Antenna Coil
- T6 9 mc. R.F. Coil
- T7 10958 6 mc. R.F. Coil
- T8 10960 12 mc. R.F. Coil
- T9 10961 15 mc. R.F. Coil
- T10 10962 B.C. R.F. Coil
- T11 110161 B.C. Oscillator Coil
- T12 110137 9 mc. Oscillator Coil
- T13 110156 6 mc. Oscillator Coil
- T14 110158 12 mc. Oscillator Coil
- T15 110159 15 mc. Oscillator Coil
- T16 110159 15 mc. Oscillator Coil

14

IF 455 KC.


RESISTORS

- R1 130232 25M ohm-1/4 w.
- R2 130232 25M ohm-1/4 w.
- R3 13019 1 megohm-1/4 w.
- R4 130239 250 ohm-1/4 w.
- R5 130218 5M ohm-1/4 w.
- R6 13019 5M ohm-1/4 w.
- R7 130232 1 megohm-1/4 w.
- R8 130318 6M ohm-1/4 w.
- R9 130319 10M-2 watt
- R10 130200 700 ohm-1/4 w.
- R11 13082 10M ohm-1/4 w.
- R12 130235 1500 ohm-1/4 w.
- R13 130235 1500 ohm-1/4 w.
- R14 130235 1500 ohm-1/4 w.
- R15 130192 2M ohm-1/4 w.
- R16 13019 1 megohm-1/4 w.
- R17 13020 100M ohm-1/4 w.
- R18 1303 500M ohm-1/4 w.
- R19 130317 250 ohm-1/4 w.
- R20 1303 500M ohm-1/4 w.
- R21 13029 100M ohm-1/4 w.
- R22 130238 400M ohm-1/4 w.
- R23 101234 500M ohm volume control and line switch (S4)
- R24 13073 15M ohm-1/4 w.
- R25 13094 50M ohm-1/4 w.
- R26 130218 5M ohm-1/4 w.
- R27 1304 50M ohm-1/4 w.
- R28 1303 500M ohm-1/4 w.
- R29 13072 500M ohm-1/4 w.
- R30 1305 500M ohm-1/4 w.
- R31 130172 250M ohm-1/4 w.
- R32 1307 40M ohm-1/4 w.
- R33 13080 150M ohm-1/4 w.
- R34 130309 350M ohm-1/4 w.
- R35 130172 250M ohm-1/4 w.
- R36 130174 50 ohm-1/4 w.
- R37 13080 150M ohm-1/4 w.


CONDENSERS

- C1 1292 .0005 mica
- C2 10037 .002 x 600 v.
- C3 124143 B.C. Antenna Trimmer
- C4 12443 9 mc. Antenna Trimmer
- C5 1292 .0005 mica
- C6 10020 .1 x 200 v. Tubular
- C7 129168 .00001 mica
- C8 124138 9 mc. R.F. Trimmer
- C9 124139 B.C. R.F. Trimmer
- C10 10074 .1 x 400 v.
- C11 10074 .1 x 400 v.
- C12 10061 .02 x 600 v.
- C13 1292 .0005 mica
- C14 10061 .02 x 600 v.
- C15 119112 30.0 mfd. lyric
- C16 124144 B.C. Oscillator Trimmer
- C17 119112 30.0 mfd. lyric x 450 w.v.
- C18 129167 .0002 silver mica
- C19 12938 .00003 mica
- C20 124145 9 mc. Oscillator Trimmer
- C21 119112 10.0 mfd. lyric
- C22 119169 16 mfd. x 350 w.v.

Chevrolet Auto Radio, Model 985694

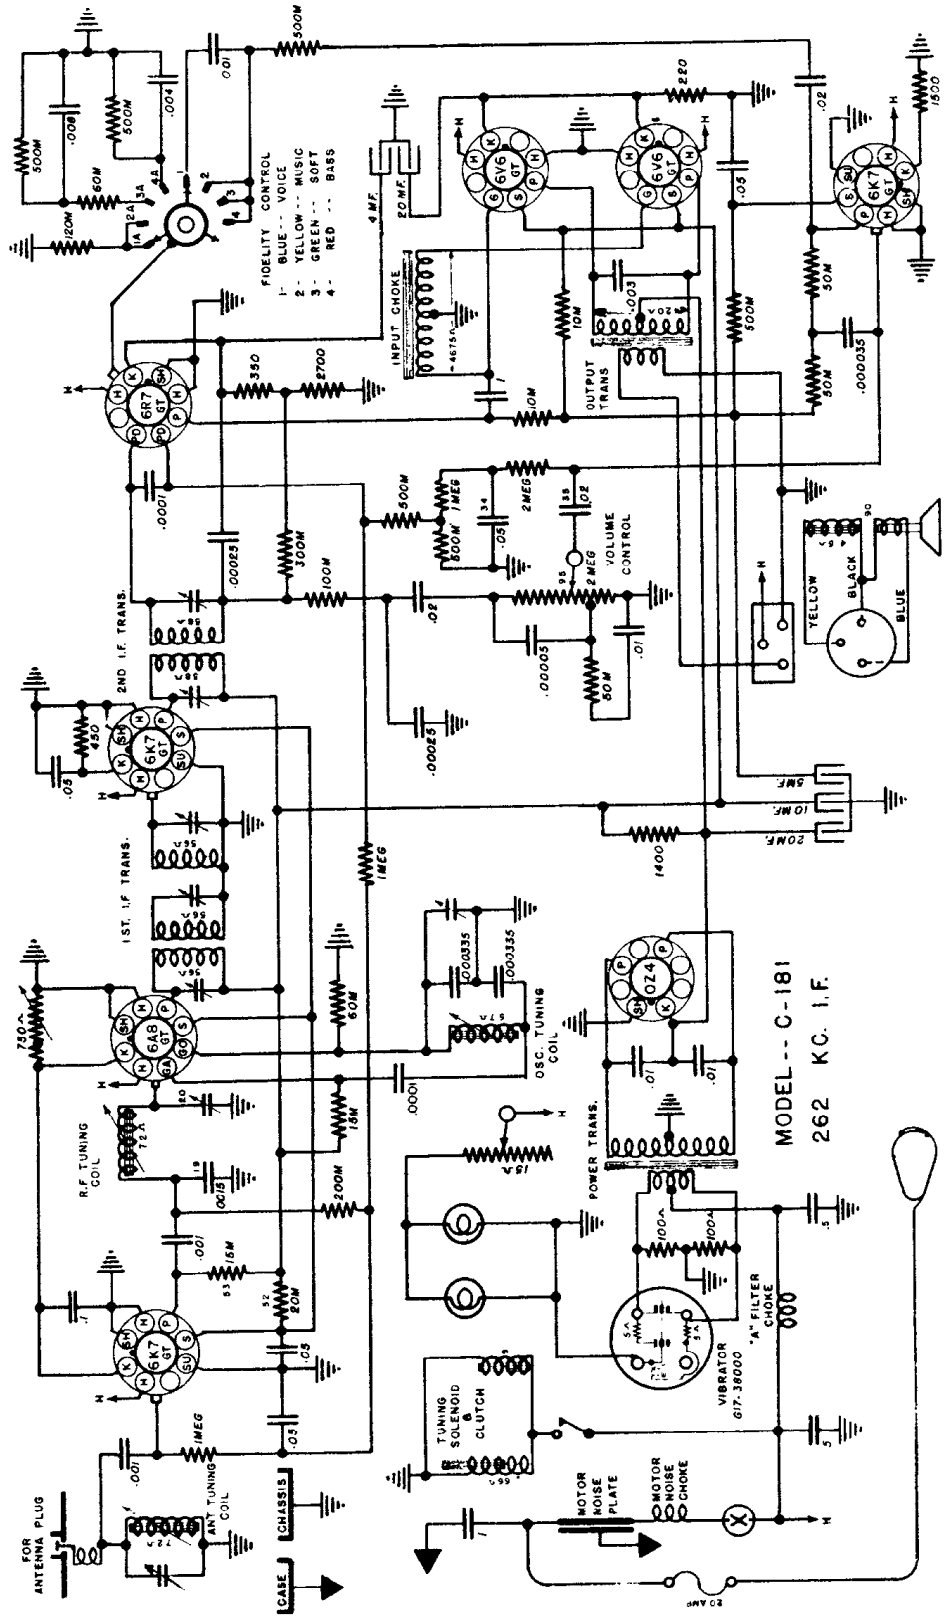


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

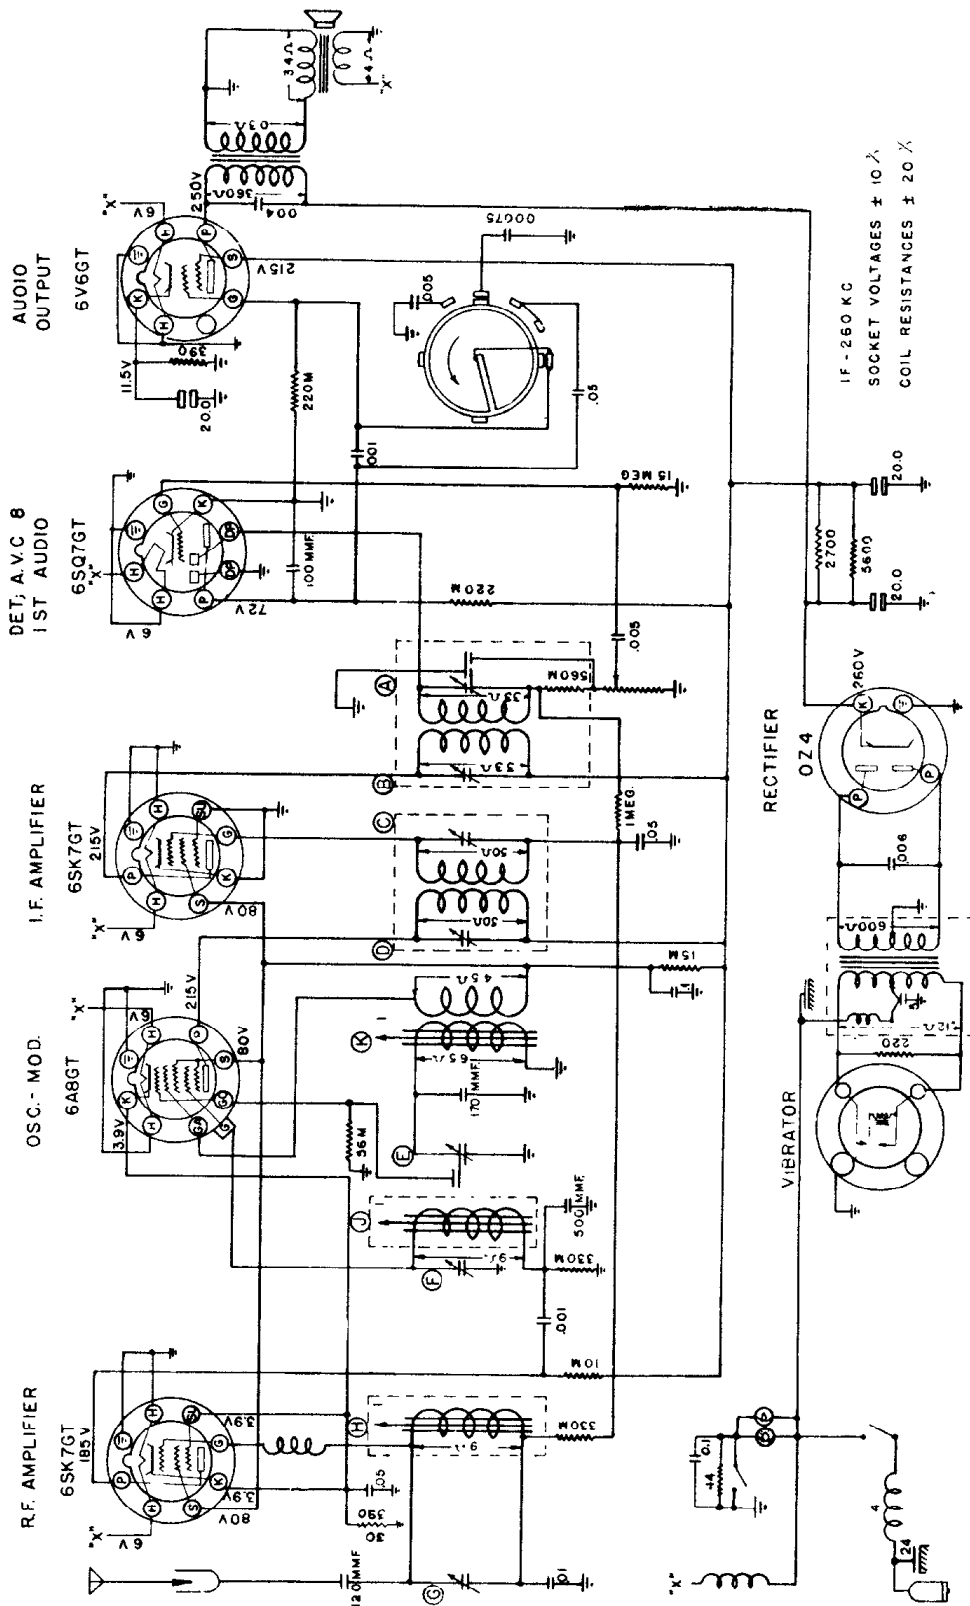

ANTENNA CIRCUIT: The antenna circuit is directly coupled to the antenna. The antenna coil is tuned by means of an iron core and the circuit is adjusted for slight variations in antenna capacity by means of an antenna trimmer located on the bottom of the receiver case.

Chevrolet Auto Radio, Model 985695


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

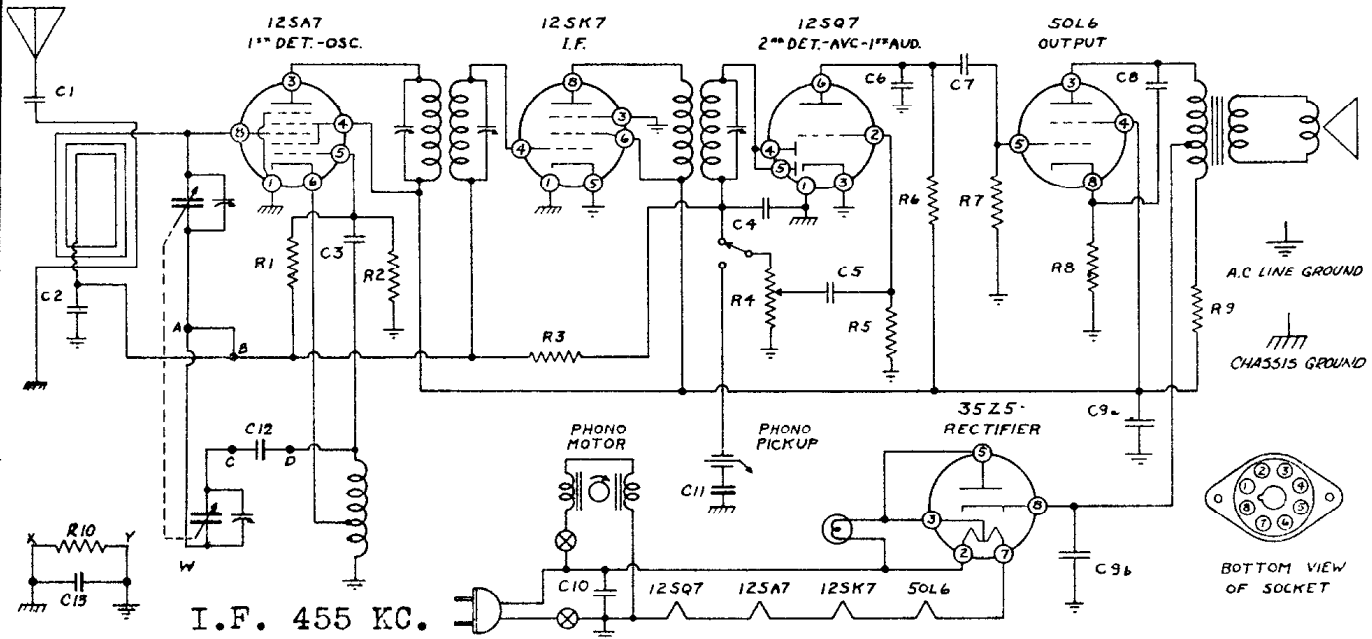

In model M5-PH only, connect points w, x, and y together. R10 and C13 are not used. Also C12 is not used, and point C connects to D. Disconnect points A and B.

RESISTORS				CONDENSERS							
No.	Ohms	Watts	No.	Ohms	Watts	No.	Capacity (Mfd.)	Volts	No.	Capacity (Mfd.)	Volts
R1	10,000,000	1/4	R6	250,000	1/4	C1	.001	600	C8	.02	400
R2	25,000	1/4	R7	500,000	1/4	C2	.05	200	C9a	50.	Elect. 150
R3	2,000,000	1/4	R8	150-10%	1/4	C3	.00005	Mica	C9b	30.	Elect. 150
R4	500,000	V.C.	R9	1,000	1/2	C4	.00025	Mica	C10	.05	400
R5	5,000,000	1/4	R10	150,000	1/2	C5	.005	600	C11	.2	400
						C6	.0005	Mica	C12	.02	400
						C7	.01	400	C13	.16	200

Models M5-PH, XM5-PH, Continental Radio & Television Corp.

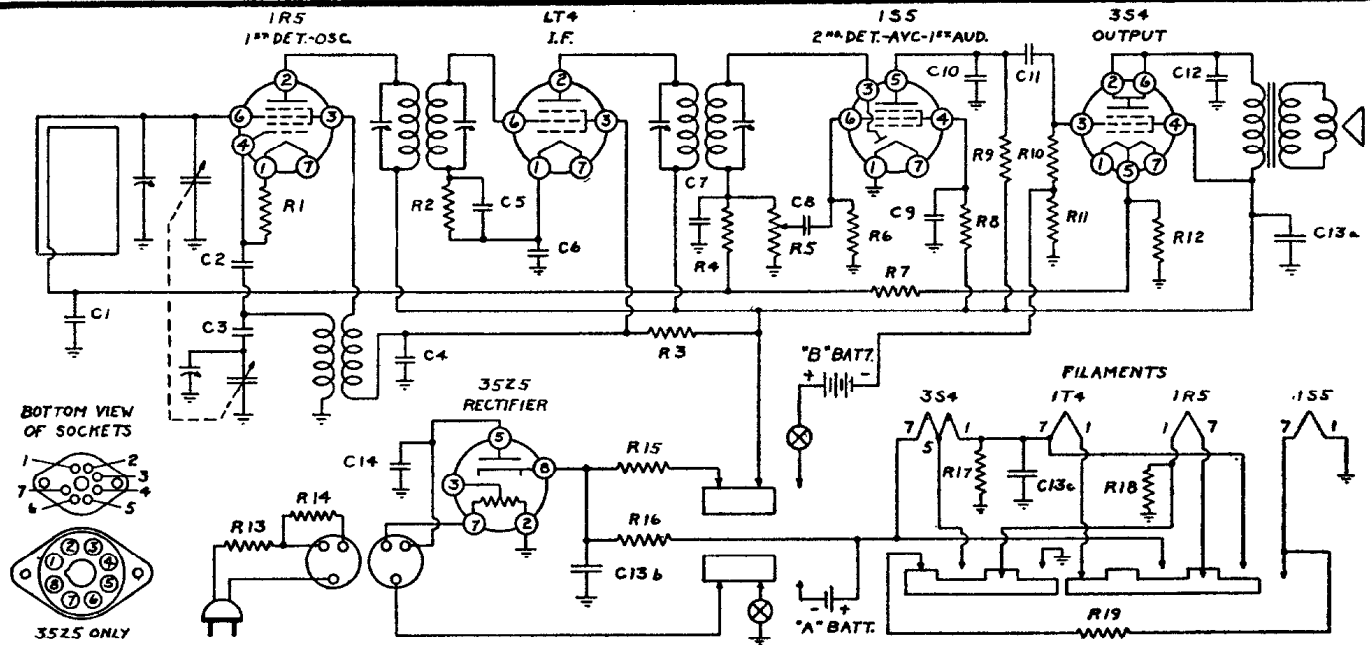

CONDENSERS				RESISTORS							
No.	Capacity (Mfd.)	Volts	No.	Capacity (Mfd.)	Volts	No.	Ohms	Watts	No.	Ohms	Watts
C1	.05	200	C9	.05	200	R1	100,000	1/4	R11	750-10%	1/4
C2	.0001	Mica	C10	.00005	Mica	R2	5,000,000	1/4	R12	3,000-10%	1/4
C3	.000485-2%	Mica	C11	.005	200	R3	5,000	1/4	R13	80	part of 350 line cord
C4	.01	120	C12	.01	200	R4	2,000,000-10%	1/4	R14	350	part of 350 line cord
C5	.01	120	C13a	20.	150	R5	1,000,000	V.C.	R15	2,000-10%	1/2
C6	.01	120	C13b	30.	150	R6	10,000,000	1/4	R16	1,750-10%	4
C7	.1	120	C13c	100.	12	R7	3,000,000-10%	1/4	R17	1,700-10%	1/4
C8	.00025	Mica	C14	.05	400	R8	4,000,000	1/4	R18	1,000-10%	1/4
						R9	1,000,000	1/4	R19	55-10%	1/2
						R10	2,000,000	1/4			(wire wound)

18


G5

I.F. 455 KC.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

CROSLY MODEL 29 CHASSIS


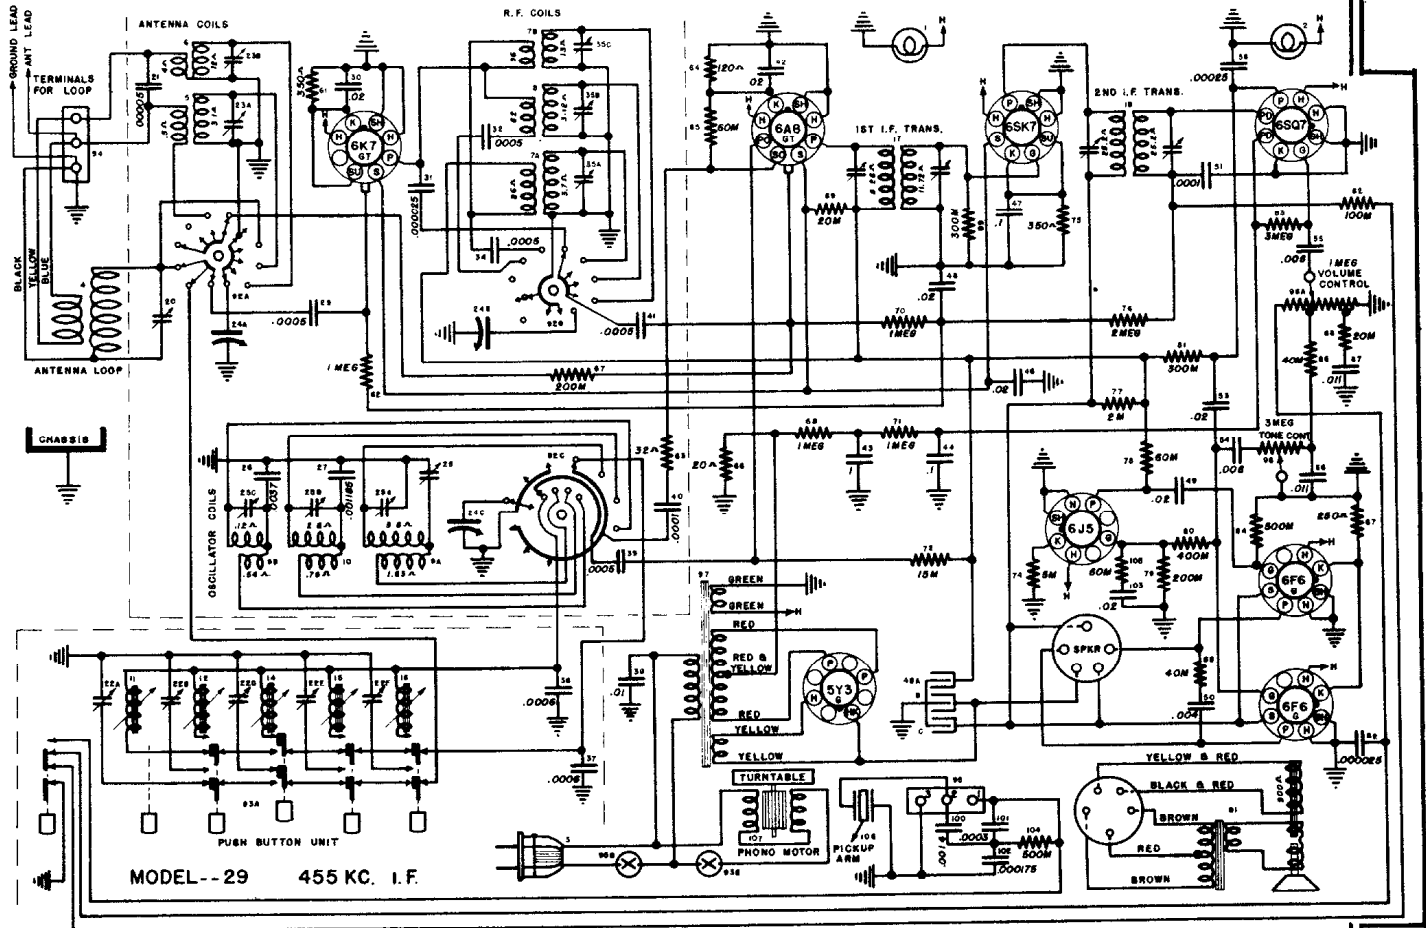


ALIGNMENT PROCEDURE CHART

Signal Generator							
Alignment Sequence	Dummy Antenna	Frequency Setting	Input Connection to Receiver	Band Switch	Tuning Cond. Setting	Trimmer Adjusted	Remarks
1.	.02 MF.	455 Kc.	Grid of 6A8GT	B. C.	Fully open	2nd I-F (2) 1st I-F (2)	Adjust for Maximum. Adjust for Maximum.
2.	.0002 MF.	1650 Kc.	Ant. Lead (Blue)	B. C.	Fully open	B. C. "OSC" Trimmer	Adjust for peak; gang does not have to tune thru signal.
3.	.0002 MF.	600 Kc.	Ant. Lead (Blue)	B. C.	Approx. 60 on dial	B. C. "OSC" Series Trimmer	Adjust for maximum output while rocking gang thru signal.
4.	Repeat Step No. 2 to check possible shift due to series adjustment						
5.	.0002 MF.	1400 Kc.	Ant. Lead (Blue)	B. C.	Approx. 140 on dial	B. C. "ANT" Trimmer B. C. R-F Trimmer	Adjust for maximum output to not touch B. C. Osc. Trimmer. Adjust for maximum output.
6.	400 ohm (carbon)	5.3 Mc.	Ant. Lead (Blue)	Police	Fully open	Pol "OSC"	Adjust for peak gang; does not have to tune thru signal.
7.	400 ohm (carbon)	5.0 Mc.	Ant. Lead (Blue)	Police	Approx. 5.0	Pol "ANT" and R-F Trimmers	Adjust for maximum output while rocking gang thru signal.
8.	400 ohm (carbon)	18.3 Mc.	Ant. Lead (Blue)	S. W.	Fully open	S. W. "OSC"	Adjust for peak. Gang does not have to tune thru signal.
9.	400 ohm (carbon)	18.0 Mc.	Ant. Lead (Blue)	S. W.	Approx. 18	S. W. "ANT" and R-F Trimmers	Adjust for maximum output while rocking gang thru signal.


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

CROSLY MODEL J30BC

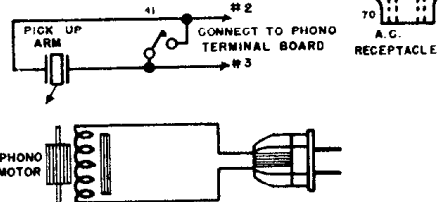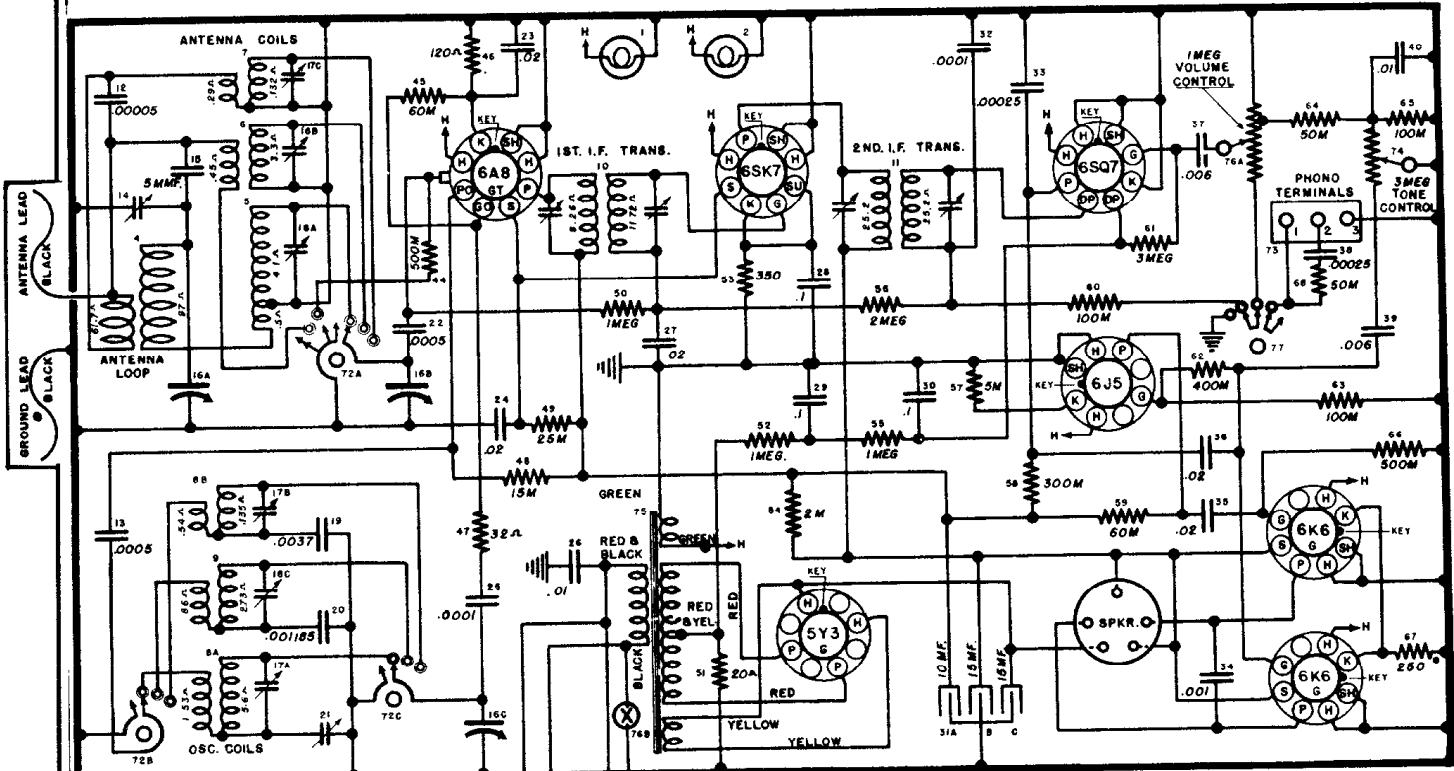

MODEL -- 30
455 K.C. I.F.


FOR TELEVISION SOUND OR FM SOUND
USE TERMINALS NO 1 & 3 OF PHONO
TERMINAL BOARD, WITH PHONO-RADIO
SWITCH IN PHONO POSITION

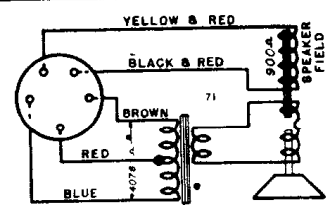

Alignment Sequence	Dummy Antenna	Frequency Setting	Input Connection to Receiver	Band Switch	Tuning Cond. Setting	Trimmer Adjusted	Remarks
1.	.02 MF.	455 Kc.	Grid of 6A8GT	B. C.	Fully open	2nd I-F (2) 1st I-F (2)	Adjust for Maximum. Adjust for Maximum.
2.	.0002 MF.	1650 Kc.	Ant. Lead (Blue)	B. C.	Fully open	B. C. "OSC" Trimmer	Adjust for peak; gang does not have to tune thru signal.
3.	.0002 MF.	600 Kc.	Ant. Lead (Blue)	B. C.	Approx. 60 on dial	B. C. "OSC" Series Trimmer	Adjust for maximum output while rocking gang thru signal.
4.	Repeat Step No. 2 to check possible shift due to series adjustment						
5.	.0002 MF.	1400 Kc.	Ant. Lead (Blue)	B. C.	Approx. 140 on dial	B. C. "ANT" Trimmer B. C. "PRE" Trimmer	Adjust for maximum output; do not touch B. C. Osc. Trimmer. Adjust for maximum output.
6.	400 ohm (carbon)	5.3 Mc.	Ant. Lead (Blue)	Police	Fully open	Pol "OSC"	Adjust for peak; gang does not have to tune thru signal.
7.	400 ohm (carbon)	5.0 Mc.	Ant. Lead (Blue)	Police	Approx. 5.0	Pol "ANT"	Adjust for maximum output while rocking gang thru signal.
8.	400 ohm (carbon)	18.3 Mc.	Ant. Lead (Blue)	S. W.	Fully open	S. W. "OSC"	Adjust for peak. Gang does not have to tune thru signal.
9.	400 ohm (carbon)	18.0 Mc.	Ant. Lead (Blue)	S. W.	Approx. 18	S. W. "ANT"	Adjust for maximum output while rocking gang thru signal.

THE CROSLY CORPORATION • CINCINNATI, OHIO, U. S. A.
COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

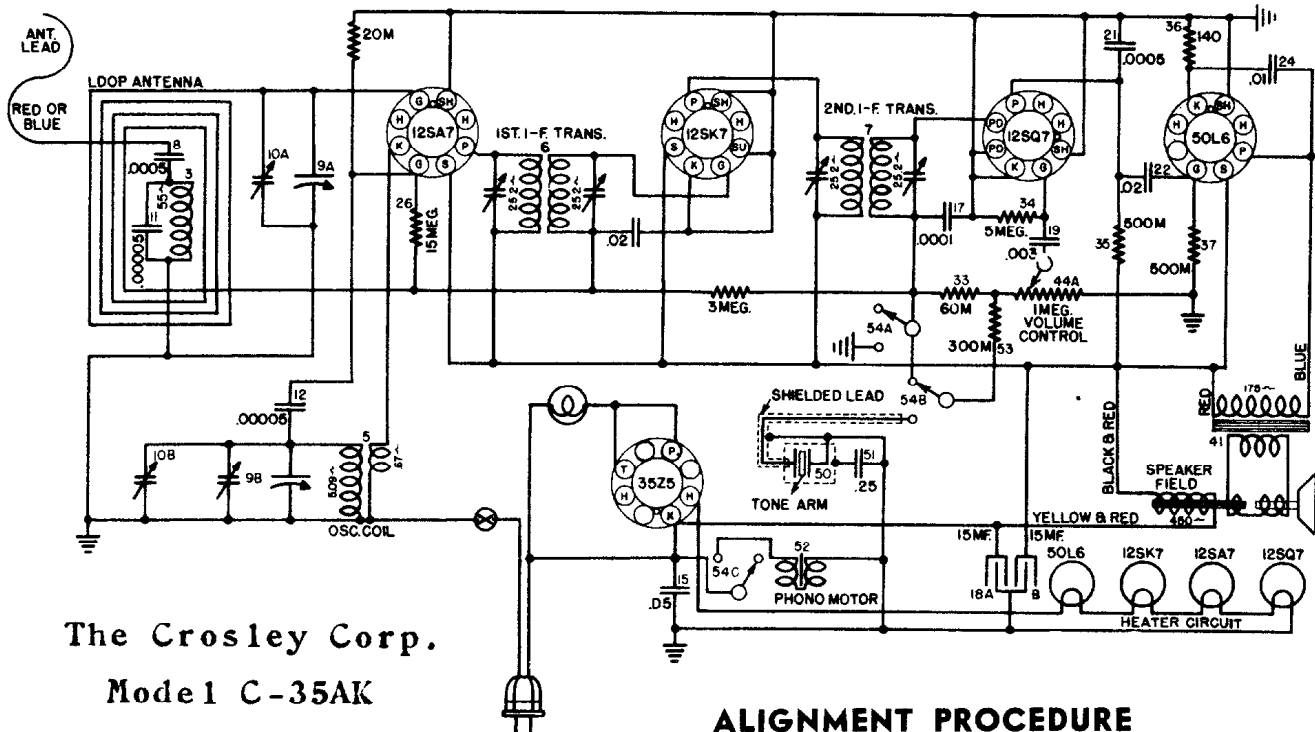

The Crosley Corp.

Model C-35AK

ALIGNMENT PROCEDURE

The chassis of this receiver is connected to one side of the power supply and for this reason all test equipment should be thoroughly insulated in order that the power supply will not become short circuited while aligning the receiver.

CONNECTING OUTPUT METER

Connect one terminal of the output meter to the plate and the other terminal to the screen of the 50L6GT output tube. Be certain that the meter is protected from D.C. by connecting a condenser (.1 mfd. or larger—not electrolytic) in series with one of the leads.

TUNING I-F AMPLIFIER TO 455 KILOCYCLES

- Connect the output of the signal generator through a 100 mmf. condenser to the antenna connection (Blue or Red lead extending from rear of loop) on the receiver. Do not use a ground return from the signal generator unless it is found to be absolutely necessary. If it is found to be necessary, a small condenser (approximately .001 mfd.) should be connected in series with the ground terminal of the signal generator and the receiver chassis.
- Set the station selector so that the plates of the condenser gang are completely out of mesh and turn the volume control to the right (ON).
- Set the signal generator to 455 kilocycles.
- Adjust the 2nd I-F trimmer condensers located on top 2nd I-F Assm. item 7, for maximum reading on the output meter.
- Adjust the 1st I-F trimmer condensers, located on top of 1st I-F assy., item 6, for maximum output.
- Repeat operations (d) and (e) for more accurate adjustments.

ALWAYS USE THE LOWEST SIGNAL GENERATOR OUTPUT THAT WILL GIVE A REASONABLE READING ON THE OUTPUT METER.

ALIGNING THE R-F AMPLIFIER

- Set the signal generator to 1650 kilocycles.
- With the condenser gang turned to the minimum capacity position, adjust the trimmer condenser B. C. "OSC" so that the 1650 kilocycle signal is heard. It is not necessary that the receiver tunes through this signal.
- Set the signal generator to 1400 kilocycles.
- Tune-in the 1400 kilocycle signal in the region of 140 on the dial for maximum output.
- Adjust the trimmer condensers B. C. "ANT" for maximum output.

NOTE: Do not readjust the "OSC" trimmer.


- Repeat operations (d) and (e) for more accurate adjustments.

24

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

INSTRUCTIONS FOR MODEL 33BG

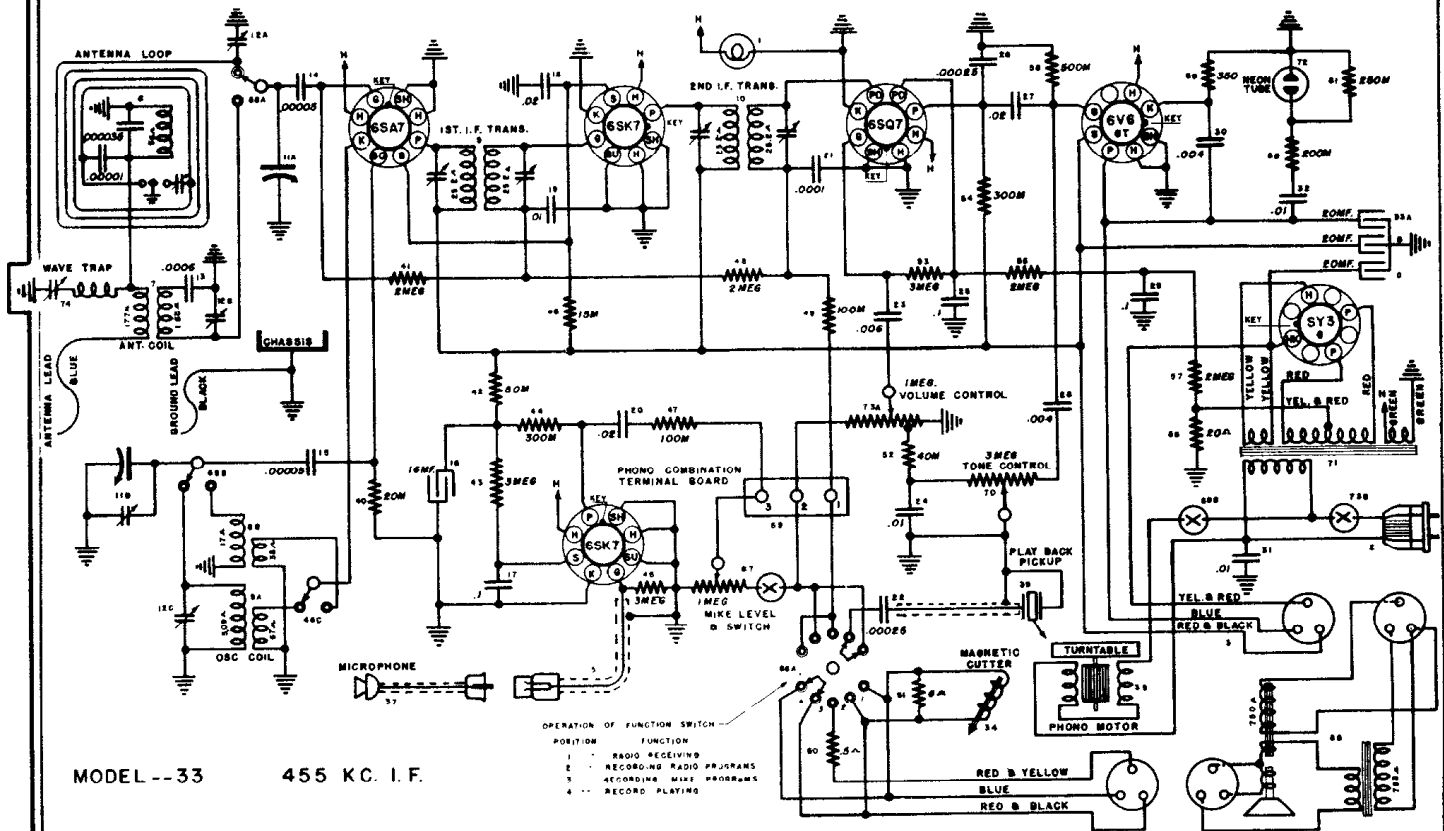

MODEL -- 33 455 KC. I.F.

Alignment Sequence	Dummy Antenna	Frequency Setting	Input to Receiver	Band Switch	Tuning Cond. Setting	Trimmers Adjusted	Remarks
1.	.02MF.	455 Kc.	Ant. Lead (Blue)	B. C.	Fully Open	2nd I-F (2) 1st I-F (2)	Adjust for Maximum output. Adjust for Maximum output.
2.	400 ohm (carbon)	15.3 Mc.	Ant. Lead (Blue)	S. W.	Fully Open	S. W. "OSC" (on gang)	Adjust for Peak. See foot note.
3.	400 ohm (carbon)	15.0 Mc.	Ant. Lead (Blue)	S. W.	Approx. 15 on dial	S. W. "ANT" center trimmer on right end	Adjust for Maximum while rocking gang back and forth.
4.	.0002 MF.	1650 Kc.	Ant. Lead (Blue)	B. C.	Fully Open	B. C. "OSC" front trimmer on right end	Adjust for peak. Make sure the switch on loop is in B. C. position.
5.	.0002 MF.	1400 Kc.	Ant. Lead (Blue)	B. C.	Approx. 140 on dial	B. C. "ANT" rear trimmer on right end	Adjust for Maximum output.
6.	.0002 MF.	2.5 Mc.	Ant. Lead (Blue)	B. C. and switch on loopto Pol	Approx. 2.5 on dial lower right corner	Pol. Ant on loop	Adjust for Maximum output.

VOLTAGE CHART

ALL VOLTAGES MEASURED FROM SOCKET PIN TO CHASSIS @ 117.5 VOLT LINE

TUBE SECTION	SOCKET PIN NUMBER							
	1	2	3	4	5	6	7	8
6SA7—Osc.-Mod.	0	0	225	74	0	0	6.3	0
6SK7—I. F. Amp.	0	0	0	0	0	74	6.3	225
6SQ7—Det. A.V.C.—1st A.F.	0	0	0	0	0	100	6.3	0
6V6GT—Output	0	0	209	225	0	0	6.3	10.5
6SK7—Mike Amp.	0	0	0	0	0	+	6.3	+
5Y3G—Rectifier	0	5.0	0	316 A.C.	0	316 A.C.	0	283

All voltages measured with 1000 OHM/Volt Voltmeter except heaters. Voltages may vary 10% of values given.

DROP ACROSS SPEAKER FIELD..... 58 Volts
 MAXIMUM POWER OUTPUT @ 130 V. LINE..... 6.5 Watts
 MAXIMUM POWER CONSUMPTION @ 130 V. LINE..... *60 Watts

*Phono Motor 40 Watts additional.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

25

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

INSTRUCTIONS FOR MODEL 34BH

RADIO RECEIVER ALIGNMENT PROCEDURE

Preliminary

Output Meter Connections.....Plate to Plate of 6K6's
 Generator Ground Connection.....To chassis or Ground Lead
 Dummy Antenna to be in series with generator output.....See Chart Below
 Position of Volume Control.....Fully On
 Position of Tone Control.....Treble or Speech
 Position of Function Switch.....Radio
 Position of Mike Level Control.....All the Way to Left (Off)

Alignment Sequence	Dummy Antenna	Frequency Setting	Input Connection to Receiver	Band Switch	Tuning Cond. Setting	Trimmer Adjusted	Remarks
1.	.02 MF.	455 Kc.	Grid of 6A8GT	B. C.	Fully open	2nd I-F (2) 1st I-F (2)	Adjust for Maximum. Adjust for Maximum.
2.	.0002 MF.	1650 Kc.	Ant. Lead (Blue)	B. C.	Fully open	B. C. "OSC" Trimmer	Adjust for peak; gang does not have to tune thru signal.
3.	.0002 MF.	600 Kc.	Ant. Lead (Blue)	B. C.	Approx. 60 on dial	B. C. "OSC" Series Trimmer	Adjust for maximum output while rocking gang thru signal.
4.	Repeat Step No. 2 to check possible shift due to series adjustment						
5.	.0002 MF.	1400 Kc.	Ant. Lead (Blue)	B. C.	Approx. 140 on dial	B. C. "ANT" Trimmer B. C. "R-F" Trimmer	Adjust for maximum output. Do not touch B. C. Osc. Trimmer. Adjust for maximum output while rocking gang thru signal.
6.	400 ohm (carbon)	5.3 Mc.	Ant. Lead (Blue)	Police	Fully open	Pol "OSC"	Adjust for peak; gang does not have to tune thru signal.
7.	400 ohm (carbon)	5.0 Mc.	Ant. Lead (Blue)	Police	Approx. 5.0	Pol "ANT" and "R-F" Trimmers	Adjust for maximum output while rocking gang thru signal.
8.	400 ohm (carbon)	18.3 Mc.	Ant. Lead (Blue)	S. W.	Fully open	S. W. "OSC"	Adjust for peak. Gang does not have to tune thru signal.
9.	400 ohm (carbon)	18.0 Mc.	Ant. Lead (Blue)	S. W.	Approx. 18	S. W. "ANT" and "R-F" Trimmers	Adjust for maximum output while rocking gang thru signal.

When aligning the shortwave bands "OSC" trimmers care must be exercised to see that the circuits are aligned on the correct frequency and not on the image which is approximately 910 kilocycles less as indicated on the dial. To check, increase generator output, tune-in the generator frequency and then tune-in the image frequency which should be weaker than the fundamental and come in approximately 910 kilocycles lower on the dial than the fundamental. If image cannot be tuned-in, the "OSC" trimmer is adjusted to the wrong peak. (Correct peak is the second peak on trimmer from the closed position).

Repeat the original alignment procedure for more accurate adjustments. Always keep signal generator output as low as possible to prevent action of the A.V.C. circuit.

SOCKET VOLTAGES MEASURED @ 117.5 VOLTS LINE (BETWEEN SOCKET PIN AND CHASSIS) WITH 1000 OHM PER VOLT, 500 VOLT RANGE VOLTMETER (D. C.)

TUBE	FUNCTION	SOCKET PIN NUMBER							
		1	2	3	4	5	6	7	8
6K7GT	R-F Amp.	195	78.6	2.0	*6.3	2.0
6A8GT	Osc.-Mod.	195	78.6	136	*6.3	1.0
6SK7	I-F Amp.	5.5 B.C. 2.6 S.W.	78.6	*6.3	234
6SQ7	Det. A.V.C. 1st A-F	110	*6.3
6J5GT	Phase Invert.	118	195	110	*6.3	4.5
6K6GT	Output	220	228	*6.3	15.0
6K6GT	Output	220	228	*6.3	15.0
6SK7	Mike Amp.	*6.3	POS.
5Y3G	Rectifier	305 D.C.	*325	*325	305 D.C.
6E5	Indicator	225	*6.3

*Measured with A.C. volt meter

VOLTAGE DROP ACROSS SPEAKER FIELD= 77 VOLTS

MAXIMUM POWER OUTPUT @ 130 V. Line=7.5 Watts


POWER CONSUMPTION @ 117.5 V. Line=Radio 80 Watts, Phono Motor 35 Watts—TOTAL=115 WATTS

Voltages may vary 10% of values given.

26

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

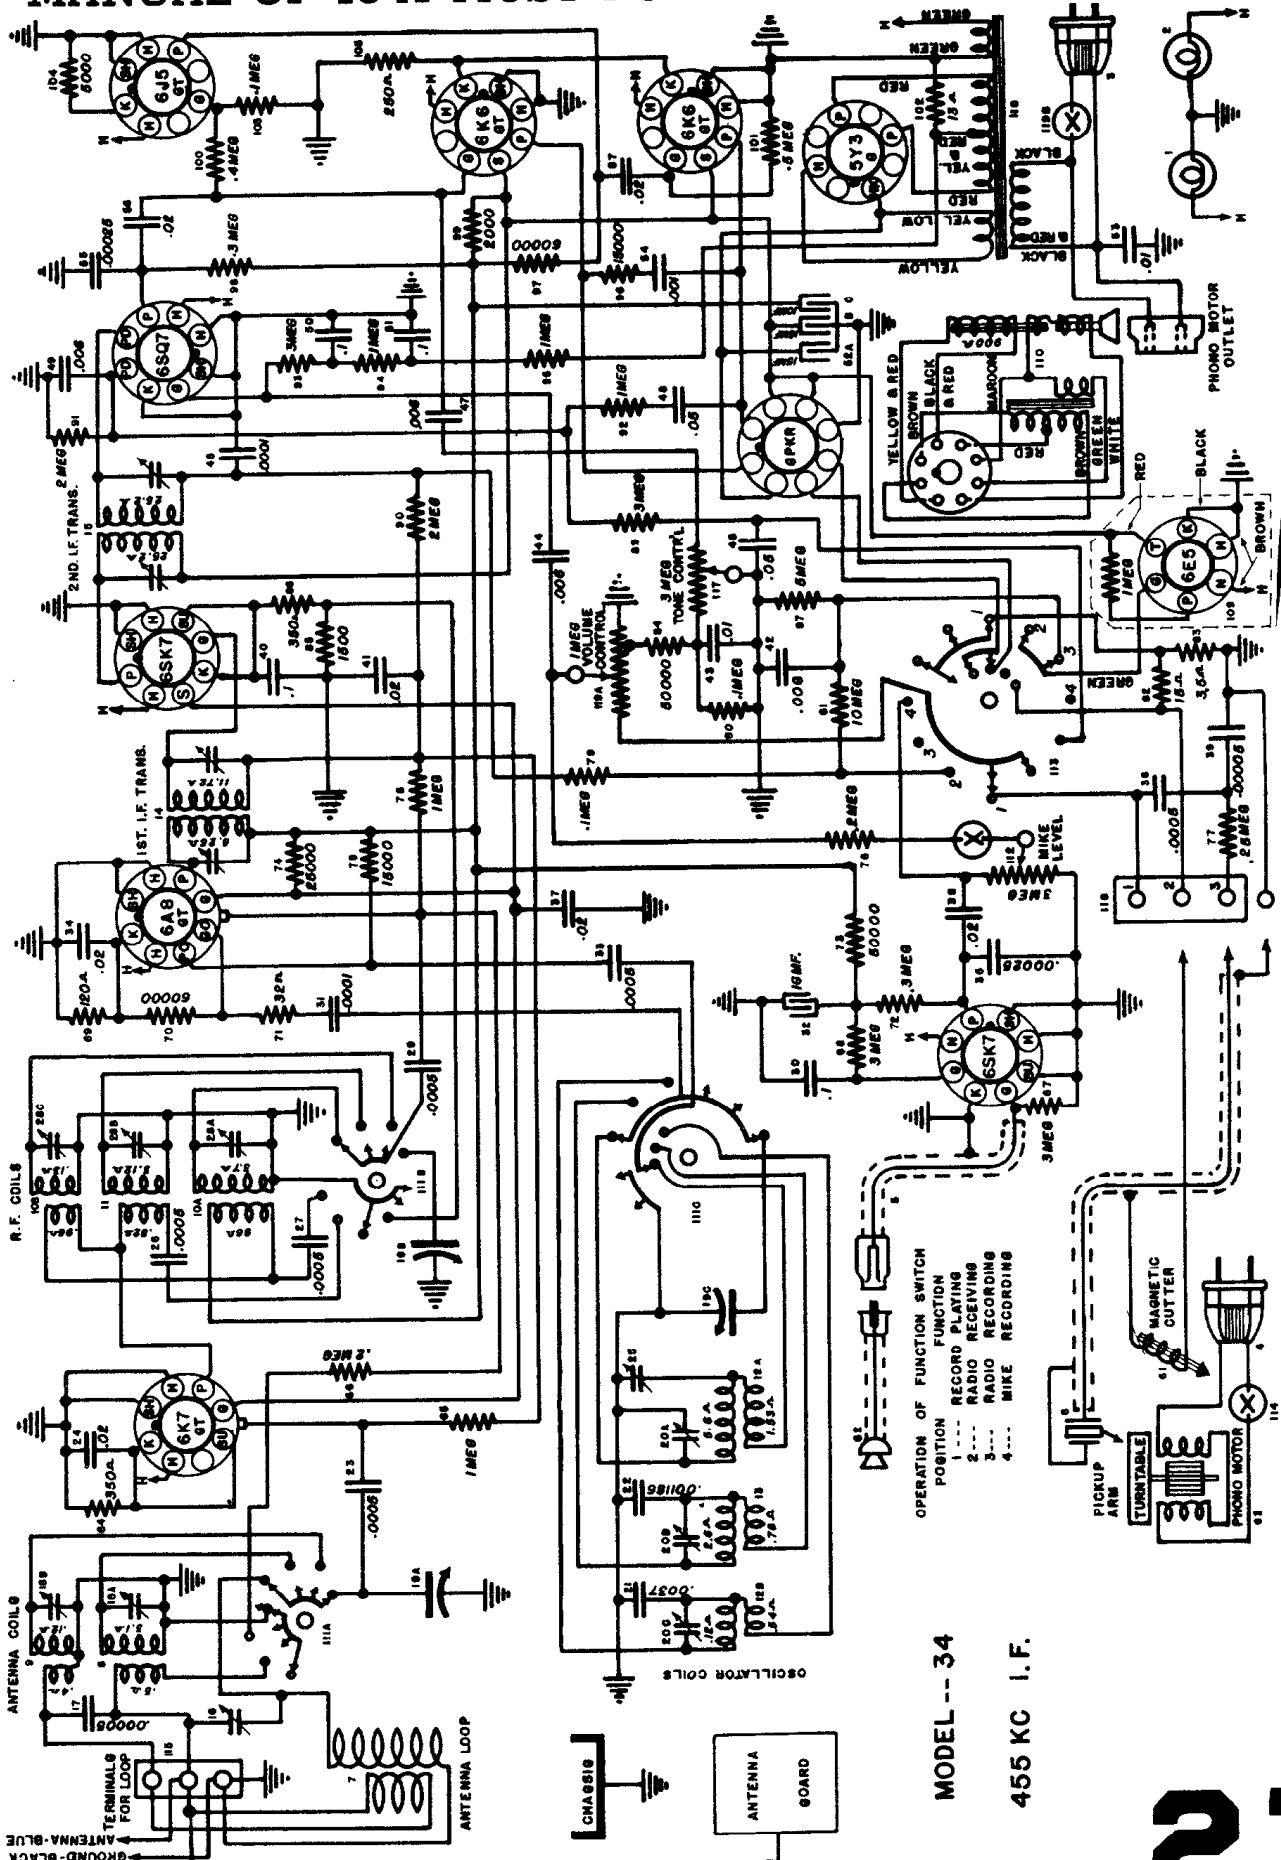


Model 34

The Crosley Corporation


OPERATION OF FUNCTION SWITCH
 POSITION
 1 --- RECORD PLAYING
 2 --- RADIO RECEIVING
 3 --- RADIO RECORDING
 4 --- MIKE RECORDING

MODEL -- 34
 455 KC I.F.

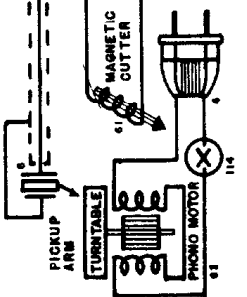

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS


WIRING DIAGRAM, MODEL CA12, CHASSIS MODEL 60

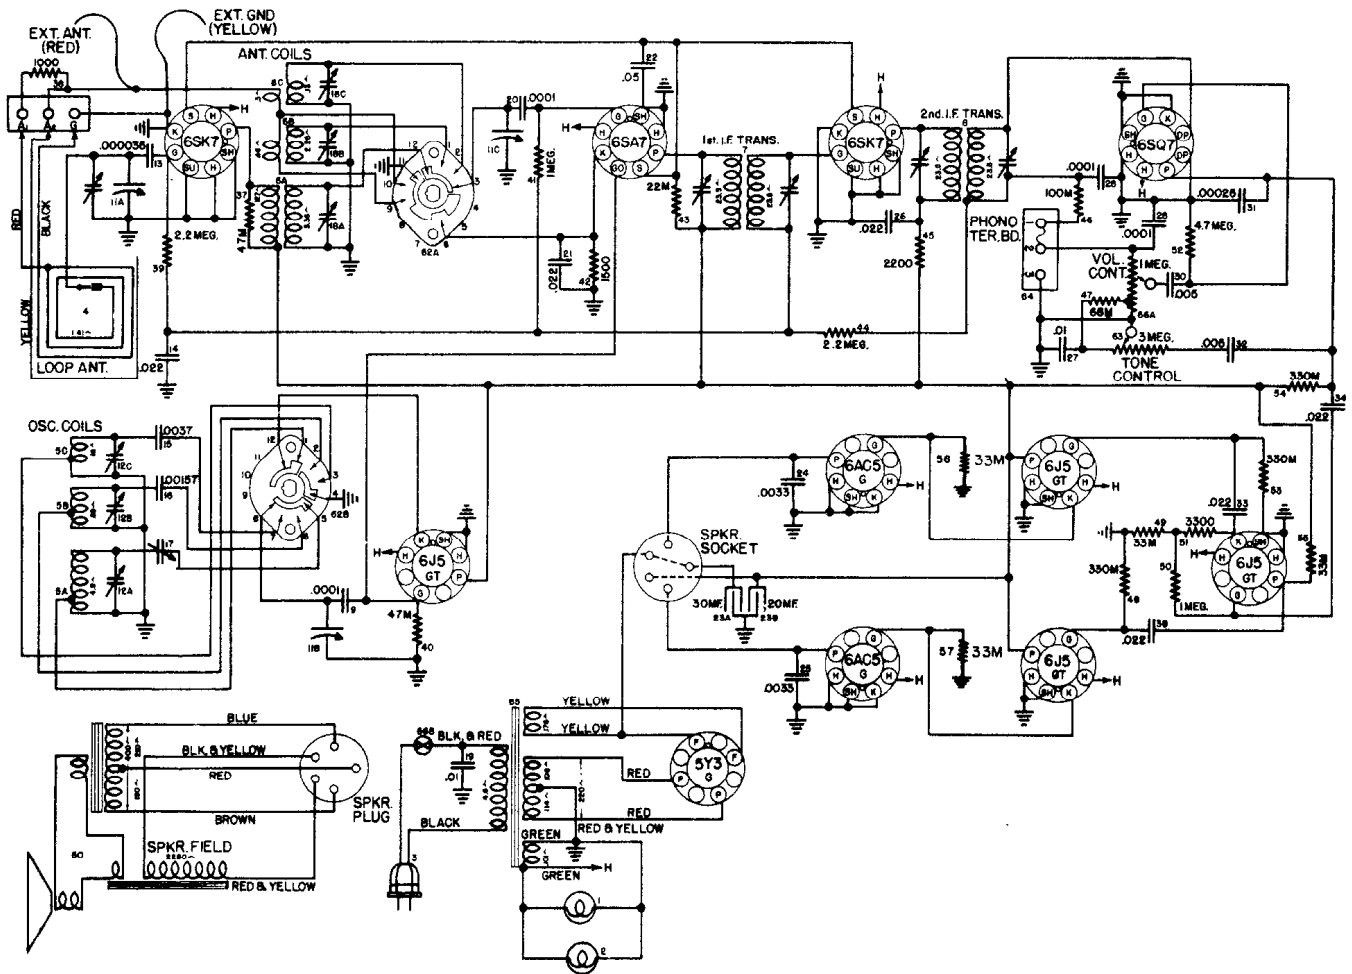

ALIGNMENT PROCEDURE CHART

Alignment Sequence	Dummy Antenna	Frequency Setting	Input Connection to Receiver	Band Switch	Tuning Cond. Setting	Trimmer Adjusted	Remarks
1.	.02 MF.	455 Kc.	Stator lug Rear section of Gang Cond.	B. C.	Fully open	2nd I-F (2) 1st I-F (2)	Adjust for Maximum. Adjust for Maximum.
2.	.0002 MF.	1600 Kc.	Ant. Lead (Red)	B. C.	Fully open	B. C. "OSC" Trimmer	Adjust for peak; gang does not have to tune thru signal. Loop must be connected.
3.	.0002 MF.	600 Kc.	Ant. Lead (Red)	B. C.	Approx. 60 on dial	B. C. "OSC" Series Trimmer	Adjust for maximum output while rocking gang thru signal.
4.	Repeat Step No. 2 to check possible shift due to series adjustment						
5.	.0002 MF.	1400 Kc.	Ant. Lead (Red)	B. C.	Approx. 140 on dial	B. C. "ANT" Trimmer B. C. "R-F" Trimmer	Adjust for maximum output do not touch B. C. Osc. Trimmer. Adjust for maximum output.
6.	400 ohm (carbon)	5.3 Mc.	Ant. Lead (Red)	Police	Fully open	Pol "OSC"	Adjust for peak; gang does not have to tune thru signal.
7.	400 ohm (carbon)	5.0 Mc.	Ant. Lead (Red)	Police	Approx. 5.0	Pol "ANT" Trimmer	Adjust for maximum output while rocking gang thru signal.
8.	400 ohm (carbon)	18.3 Mc.	Ant. Lead (Red)	S. W.	Fully open	S. W. "OSC"	Adjust for peak. Gang does not have to tune thru signal.
9.	400 ohm (carbon)	18.0 Mc.	Ant. Lead (Red)	S. W.	Approx. 18	S. W. "ANT" Trimmer	Adjust for maximum output while rocking gang thru signal.
10.	Repeat the above alignment procedure for more accurate adjustments. Always keep signal generator output as low as possible to prevent action of the A.V.C. circuit.						



MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

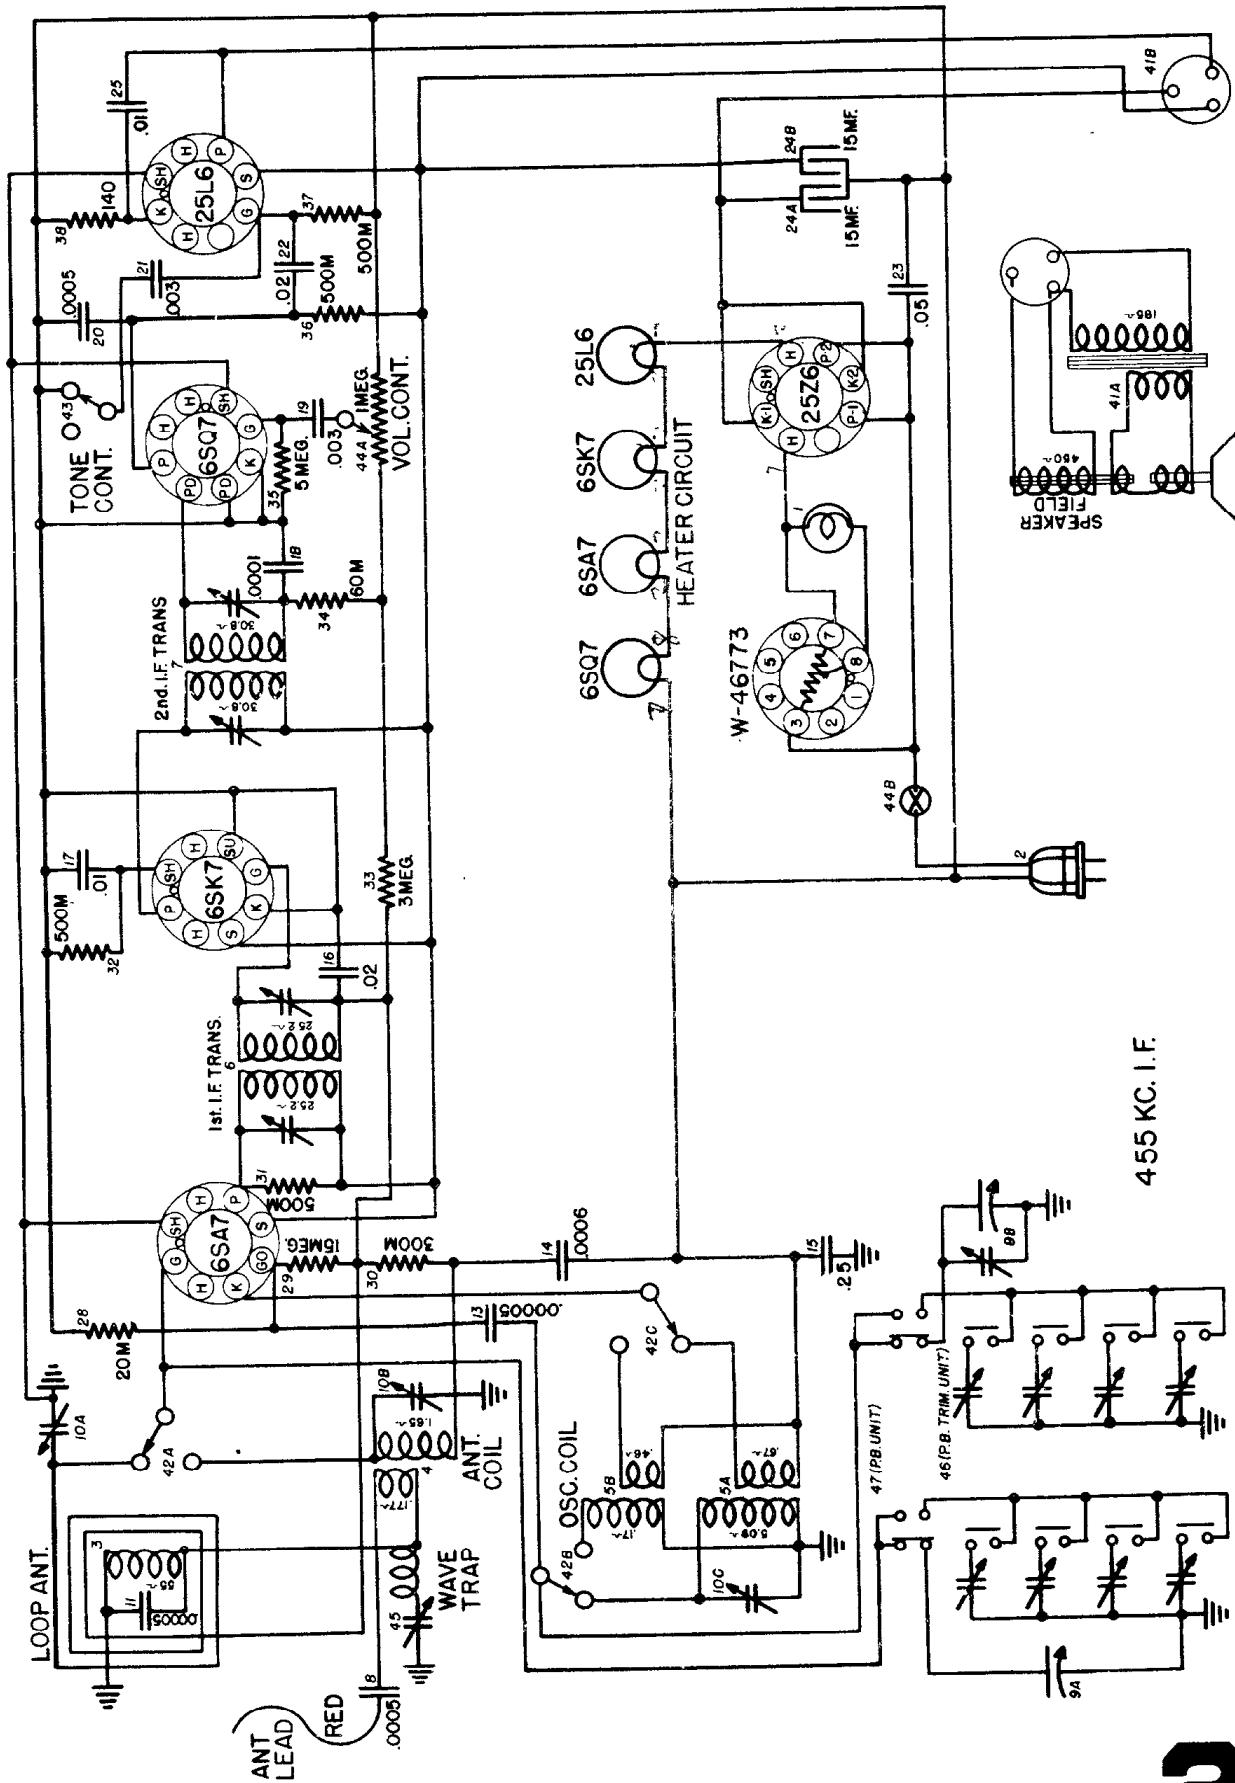

MODELS TA-62 — TA-62W — Chassis Model 63


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

INSTALLATION, OPERATING AND SERVICE INSTRUCTIONS FOR CROSLEY MODEL TA-62 — TA-62W — Chassis Model 63

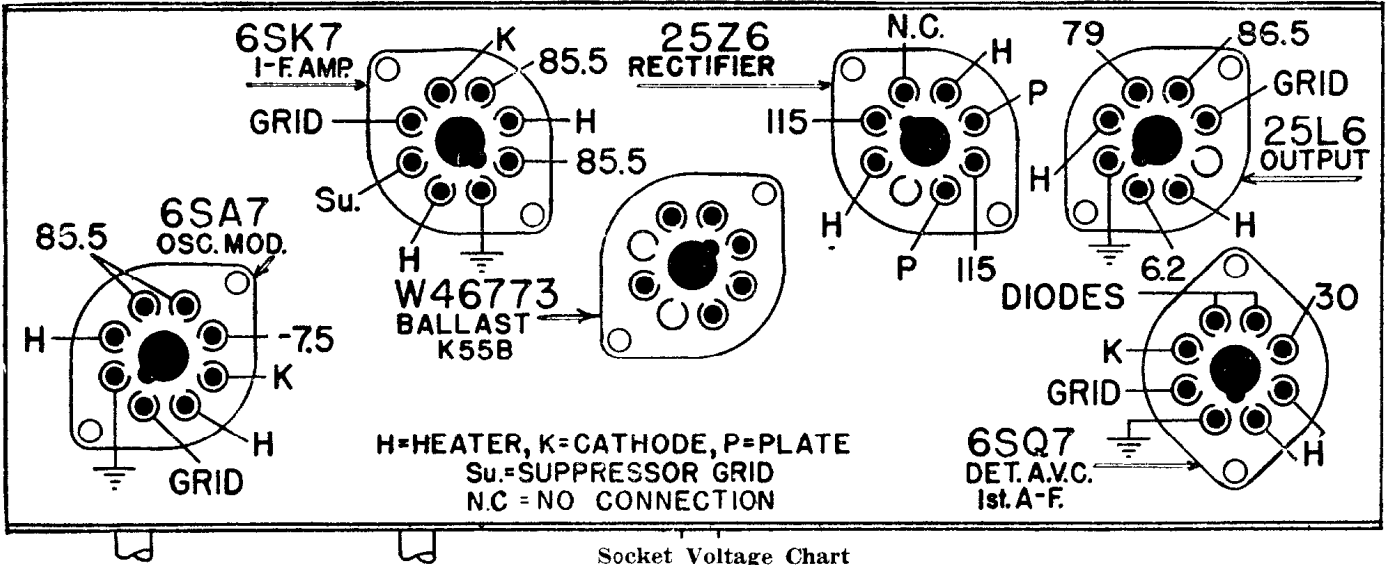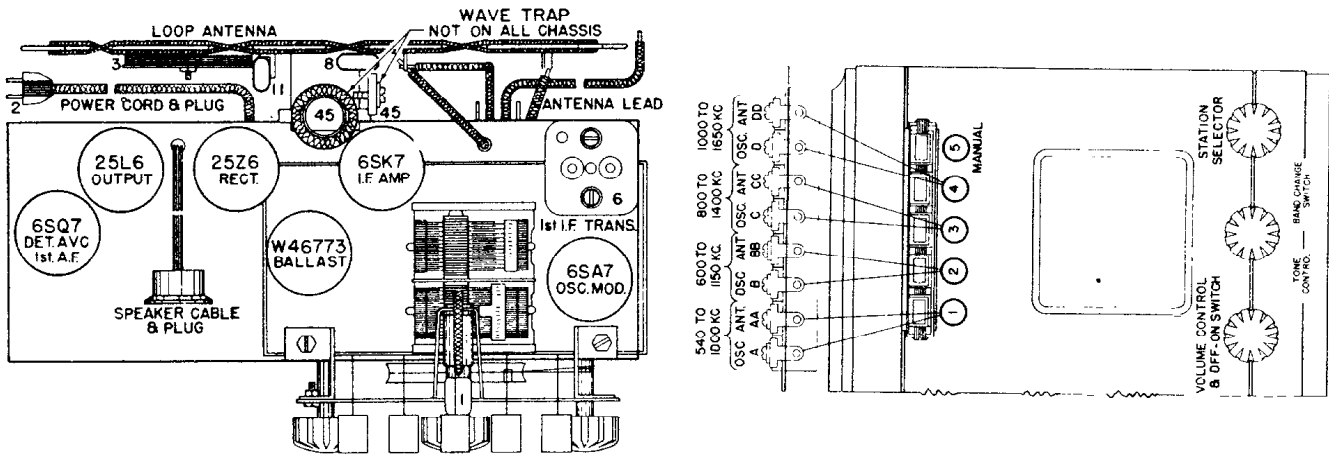

Sequence	Dummy Antenna	Frequency Setting	Input Connection for Radio	Band Switch	Tuning Cond. Setting	Trimmer Adjusted	Remarks
1	.05 Mf.	456 Kc.	Antenna	S. B.	Fully open	2nd I-F (2) 1st I-F (2)	Adjust for maximum output. Adjust for maximum output.
2	400 ohm carbon	15.4 Mc.	Antenna	S. W.	Fully open	S. W. "OSC" (rear section of tuning condenser)	Adjust for maximum output.
3	400 ohm carbon	15.0 Mc.	Antenna	S. W.	Approx. 15 on dial	S. W. "Ant." (center trimmer right end of chassis)	Adjust for maximum output while rocking gang thru signal.
4	.0002 Mf.	1600 Kc.	Antenna	S. B.	Fully open	B. C. "OSC" (front trimmer right end of chassis)	Adjust for maximum output. Gang does not have to tune thru signal.
5	.002 Mf.	1400 Kc.	Antenna	S. B.	Approx. 1400 on dial	B. C. "ANT" (rear trimmer right end of chassis)	Adjust for maximum output.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

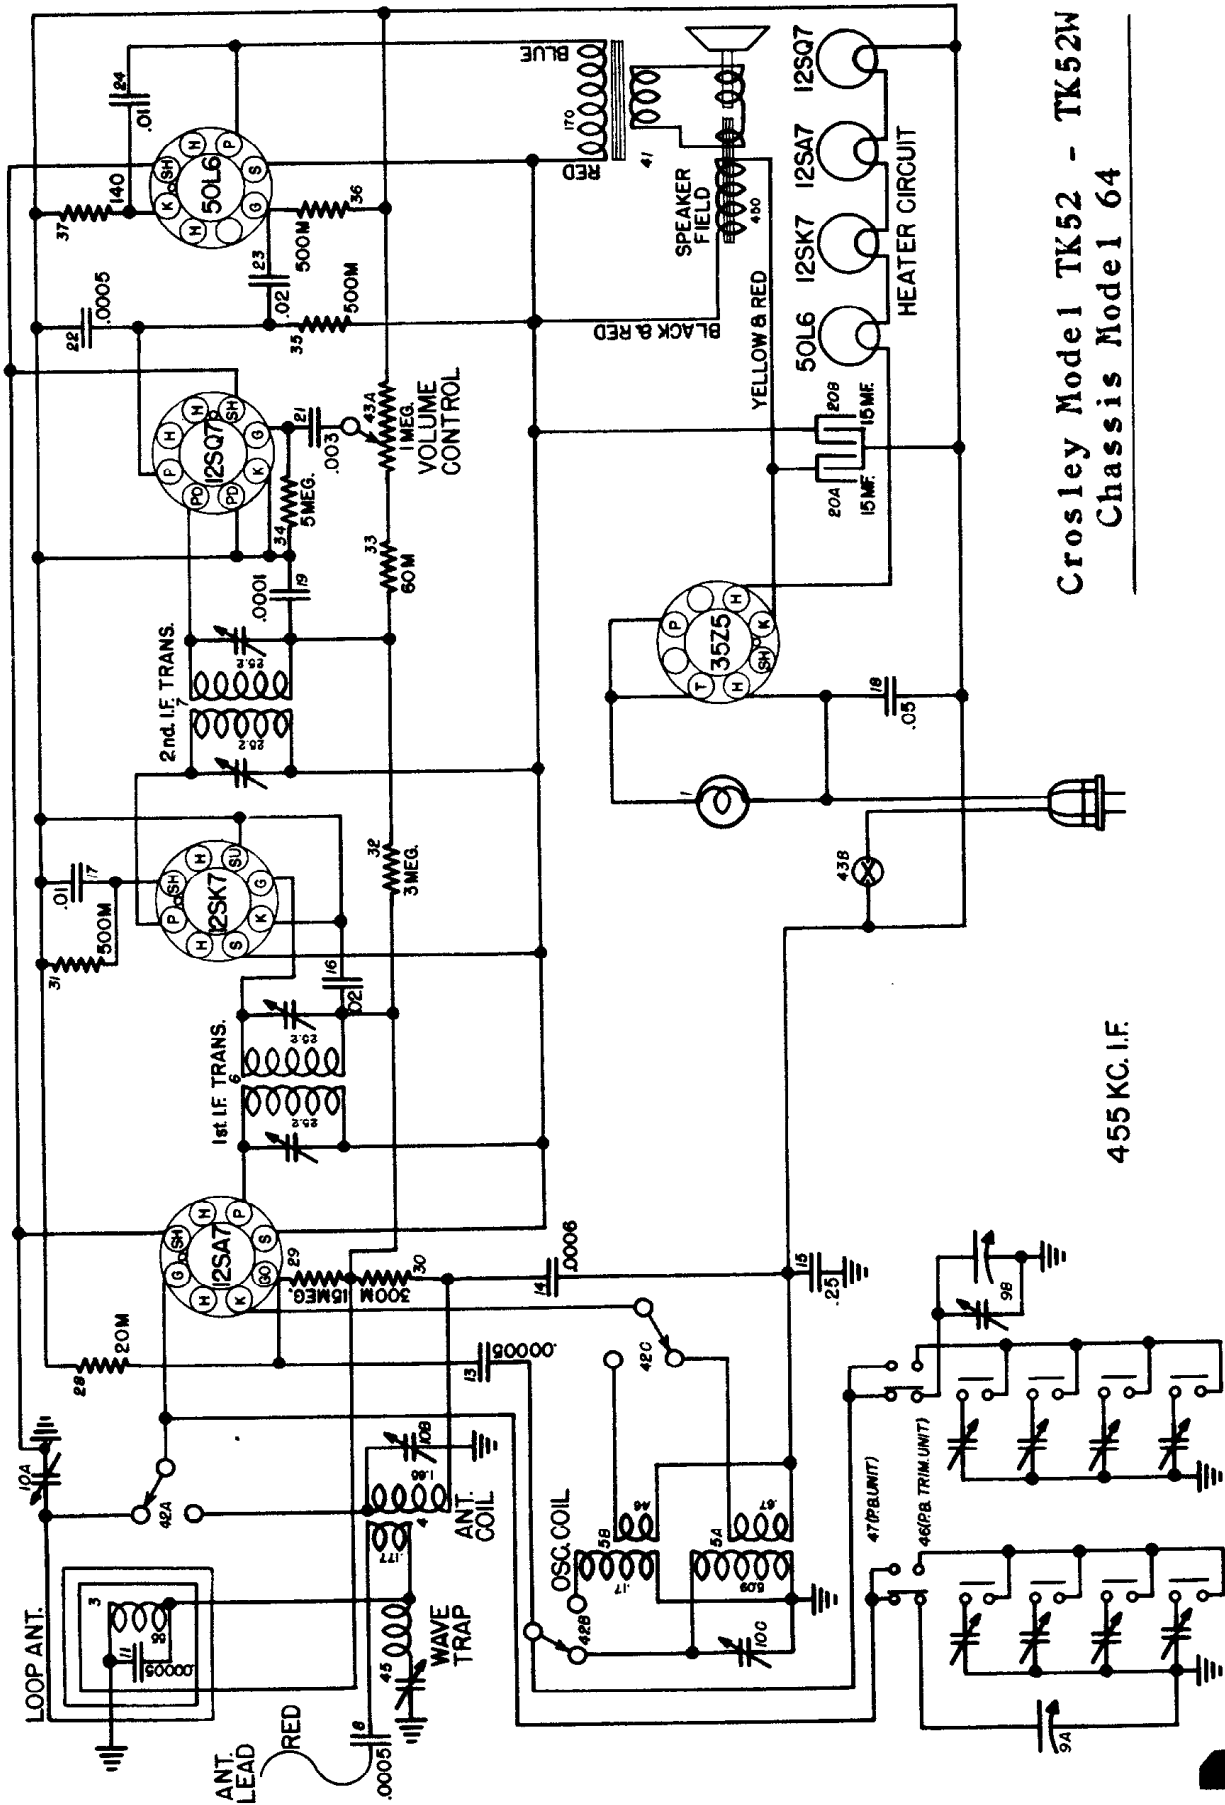

Crosley Model 1 TK52 - TK52W
Chassis Model 1 64

455 KC I.F.

THE CROSLY CORPORATION
CINCINNATI, OHIO, U.S.A.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

CROSELY MODEL TK52 — TK52W — Chassis Model 64

Sequence	Dummy Antenna	Frequency Setting	Input Connection To Radio	Band Switch	Tuning Cond. Setting	Trimmer Cond. Adjusted	Remarks
1.	.05 Mf.	456 Kc.	Antenna	S. B.	Fully on	2nd I-F (2) 1st I-F (2)	Adjust for maximum output. Adjust for maximum output.
2.	400 Ohm carbon	15.4 Mc.	Antenna	S. W.	Fully open	S. W. "OSC" (Rear section tuning cond.)	Adjust for maximum output.
3.	400 Ohm carbon	15.0 Mc.	Antenna	S. W.	Approx. 15 on dial	S. W. "ANT" (Center trimmer right end of chassis)	Adjust for maximum output while rocking gang thru signal.
4.	.0002 Mf.	1600 Kc.	Antenna	S. B.	Fully on	B. C. "OSC" (Front trimmer right end of Chassis)	Adjust for maximum output. Gang does not have to tune thru signal.
5.	.0002 Mf.	1400 Kc.	Antenna	S. B.	Approx. 140 on dial	B. C. "ANT" (Rear trimmer right end of chassis)	Adjust for maximum output.

1. Turn the set on and leave operate for about ten or twenty minutes before attempting to set the push buttons.

2. Due to the wide range to which each button will tune it is essential that the stations selected are well within each buttons tuning range.


3. Push in the "Manual" button (extreme right) and using the station selector knob, tune in the station to which the No. 1 button is to be set.

4. Push in the No. 1 button and using a long, thin screw driver adjust the "OSC"/A padder screw, turning slowly (extreme right looking at rear of cabinet) until the station you tuned in (MANUALLY) is heard again. The padder condensers are accessible through the long horizontal opening in the upper left side of cabinet back. Be sure to adjust for maximum volume in speaker.


5. Adjust the No. 1 push button "ANT"/AA padder condenser for maximum volume in speaker.

6. Push in "Manual" push button and re-check station to make sure button is correctly set. There should be no change in volume when switched from push button to manual.


7. The set up for No. 1 button is then complete. Set up remaining buttons, using same procedure; adjust the "OSC" padder first, then the "ANT" padder, etc.

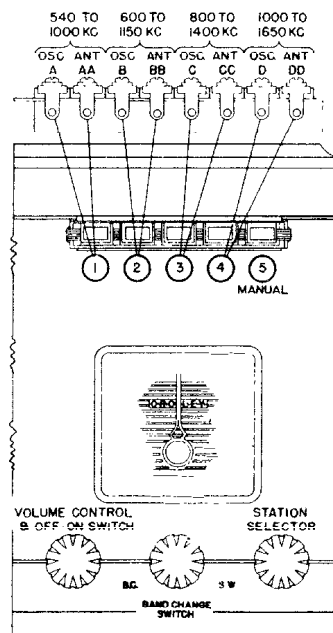

Tubes Used	Functions
12SA7	Oscillator—Modulator
12SK7	Intermediate Frequency Amplifier
12SQ7	Detector, A.V.C. 1st Audio Amplifier
50L6	Beam Power Output
35Z5	Rectifier
Standard Broadcast Band—1600-550 Kilo-cycles or 187.5-545 meters.	
Short Wave Band—5.8-15.0 Megacycles or 62.5-20 meters.	

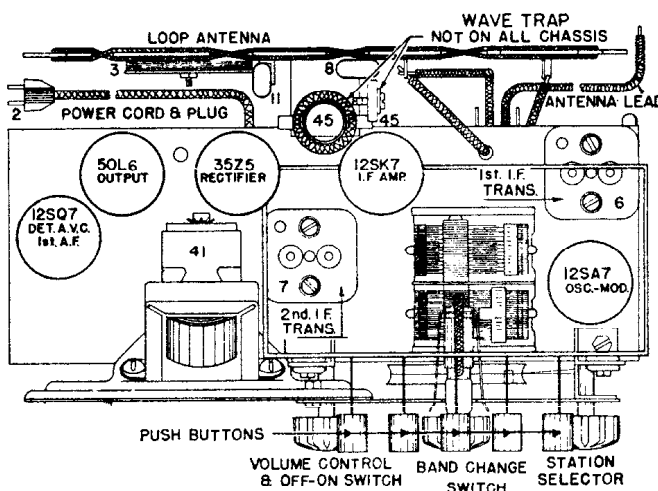

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

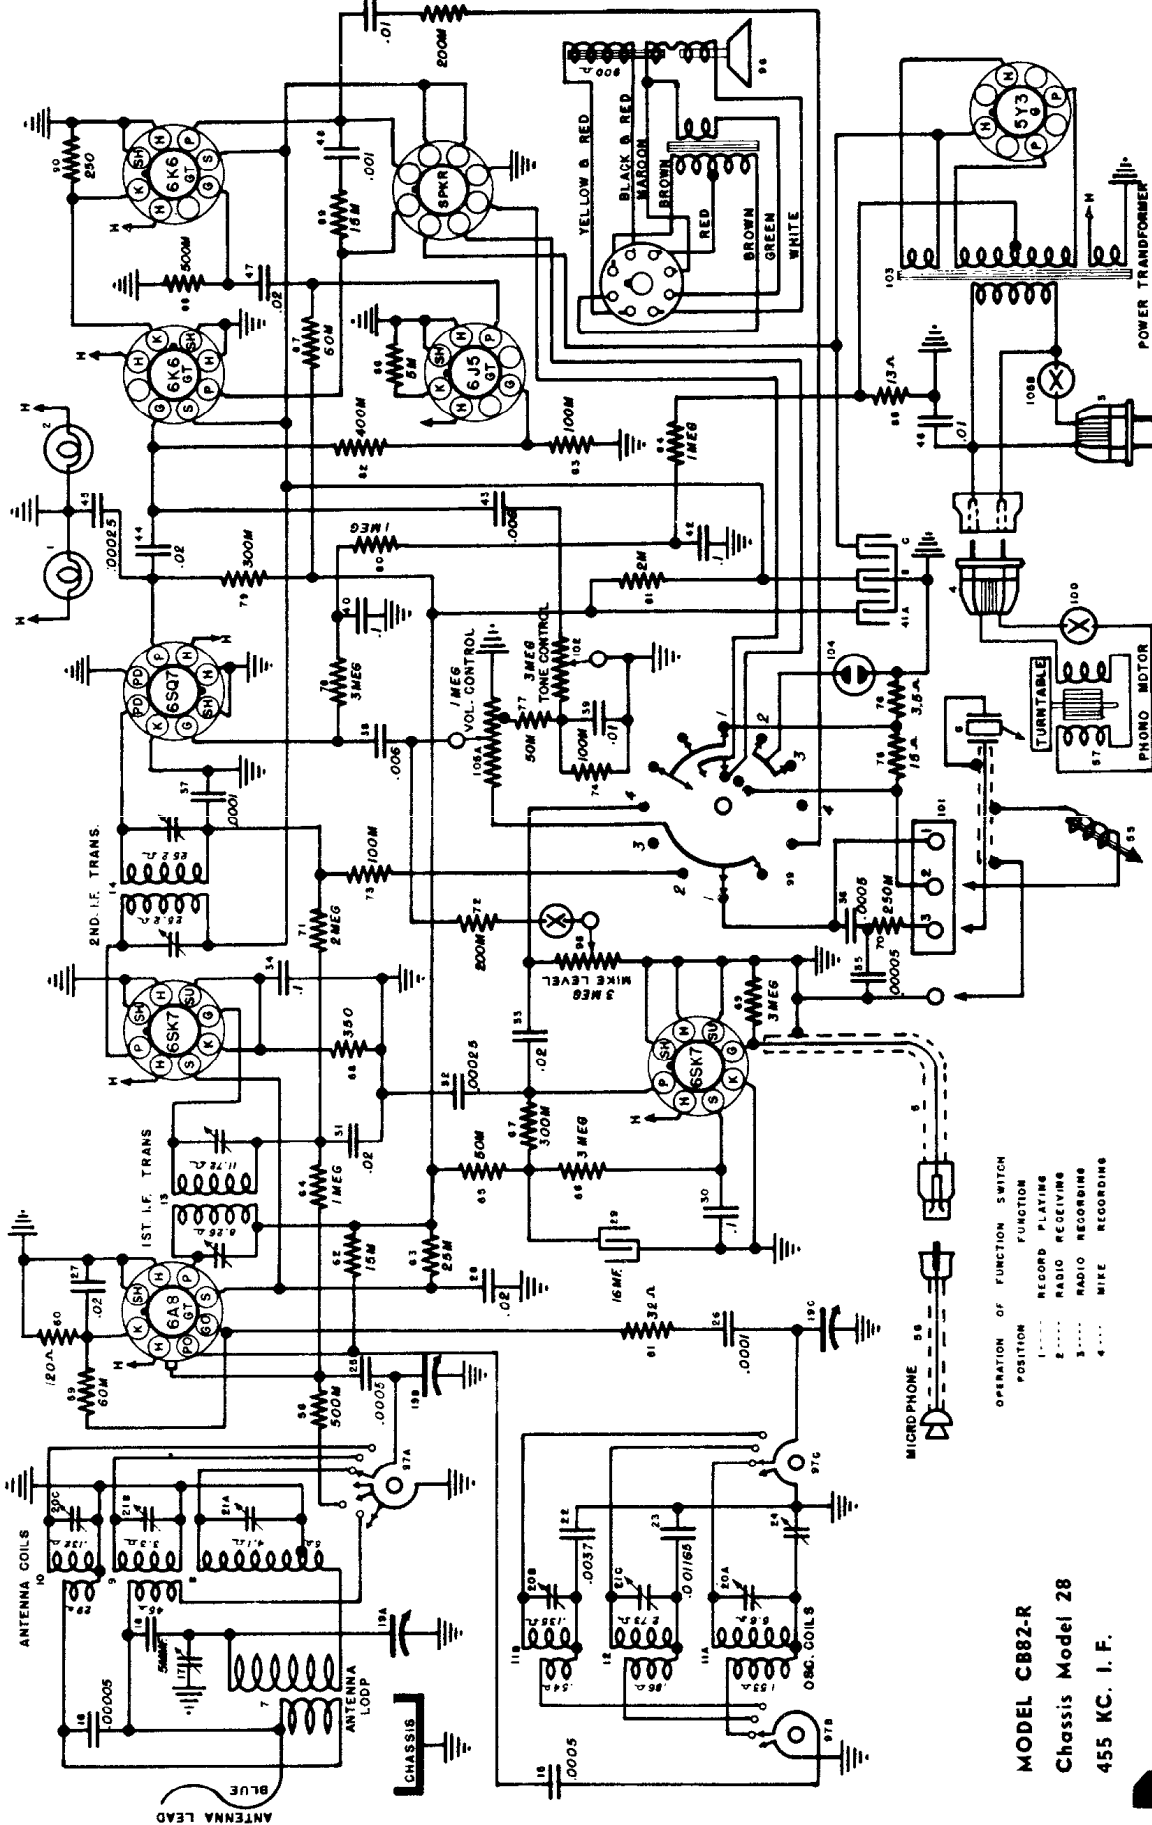

Model CB82-R
Chassis 28

The Crosley Corporation
Cincinnati, Ohio

OPERATION OF FUNCTION SWITCH
POSITION FUNCTION
1..... RECORD PLAYING
2..... RADIO RECEIVING
3..... RADIO RECORDING
4..... MIKE RECORDING

MODEL CB82-R
Chassis Model 28
455 KC. I. F.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

CHASSIS MODEL 28

INSTRUCTIONS FOR MODEL CB82-R

RADIO RECEIVER ALIGNMENT PROCEDURE

PRELIMINARY

Output Meter Connections.....Plate to Plate of 6K6G's
 Generator Ground Connection.....To chassis or Ground Lead
 Dummy Antenna to be in series with generator output.....See Chart Below
 Position of Volume Control.....Fully On
 Position of Tone Control.....Treble or Speech
 Position of Function Switch.....Radio
 Position of Mike Level Control.....All the Way to Left (Off)

Align- ment Sequence	Dummy Antenna	Frequency Setting	Input Connection to Receiver	Band Switch	Tuning Cond. Setting	Trimmer Adjusted	Remarks
1.	.02 MF.	455 Kc.	Grid of 6A8GT	B. C.	Fully open	2nd I-F (2) 1st I-F (2)	Adjust for Maximum. Adjust for Maximum.
2.	.0002 MF.	1650 Kc.	Ant. Lead (Blue)	B. C.	Fully open	B. C. "OSC" Trimmer	Adjust for peak; gang does not have to tune thru signal.
3.	.0002 MF.	600 Kc.	Ant. Lead (Blue)	B. C.	Approx. 60 on dial	B. C. "OSC" Series Trimmer	Adjust for maximum output while rocking gang thru signal.
4.	Repeat Step No. 2 to check possible shift due to series adjustment						
5.	.0002 MF.	1400 Kc.	Ant. Lead (Blue)	B. C.	Approx. 140 on dial	B. C. "ANT" Trimmer B. C. "PRE" Trimmer	Adjust for maximum output to not touch B. C. Osc. Trimmer. Adjust for maximum output.
6.	400 ohm (carbon)	5.3 Mc.	Ant. Lead (Blue)	Police	Fully open	Pol "OSC"	Adjust for peak gang; does not have to tune thru signal.
7.	400 ohm (carbon)	5.0 Mc.	Ant. Lead (Blue)	Police	Approx. 5.0	Pol "ANT"	Adjust for maximum output while rocking gang thru signal.
8.	400 ohm (carbon)	18.3 Mc.	Ant. Lead (Blue)	S. W.	Fully open	S. W. "OSC"	Adjust for peak. Gang does not have to tune thru signal.
9.	400 ohm (carbon)	18.0 Mc.	Ant. Lead (Blue)	S. W.	Approx. 18	S. W. "ANT"	Adjust for maximum output while rocking gang thru signal.

When aligning the shortwave bands "OSC" trimmers care must be exercised to see that the circuits are aligned on the correct frequency and not on the image which is approximately 910 kilocycles less as indicated on the dial. To check, increase generator output, tune-in the generator frequency and then tune-in the image frequency which should be weaker than the fundamental and come in approximately 910 kilocycles lower on the dial than the fundamental. If image cannot be tuned-in, the "OSC" trimmer is adjusted to the wrong peak. (Correct peak is the second peak on trimmer from the closed position).

Repeat the original alignment procedure for more accurate adjustments. Always keep signal generator output as low as possible to prevent action of the A.V.C. circuit.

SOCKET VOLTAGES MEASURED @ 117.5 VOLTS LINE (BETWEEN SOCKET PIN AND CHASSIS) WITH 1000 OHM PER VOLT, 500 VOLT RANGE VOLTMETER (D. C.) PIN NUMBER

TUBE FUNCTION	1	2	3	4	5	6	7	8
6SK7—Pre-Amp.	0	0	0	J. B.	*6.3	52
6A8GT—Osc.-Mod.	0	0	198	76.5	0	132	*6.3	1
6SK7—I. F. Amp.	0	0	2.4	0	2.3	76.5	*6.3	226
6SQ7—Det. A. V.C.-A. F.	0	0	0	0	0	98	*6.3	0
6J5GT—Phase Invert.	0	0	118.5	0	0	J. B.	*6.3	6.0
6K6G—Output	0	0	226	236	0	J. B.	*6.3	15.5
6K6G—Output	0	0	226	236	0	J. B.	*6.3	15.5
5Y3G—Rectifier	NC	310	J. B.	*300	J. B.	*300	J. B.	310

*Measure with A. C. Voltmeter.

MAX. POWER OUTPUT @ 117.5 V. LINE..... 5.0 Watts
 POWER CONSUMPTION @ 117.5 V. LINE..... 66 Watts (Radio Only)
 TOTAL POWER CONSUMPTION @ 117.5 V. LINE.....110 Watts (Including Phono Motor)
 DROP ACROSS SPEAKER FIELD..... 74 Volts

Voltagcs may vary 10% of values given.



J. B.—JUNCTION BLOCK

N. C.—NO CONNECTION

34

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

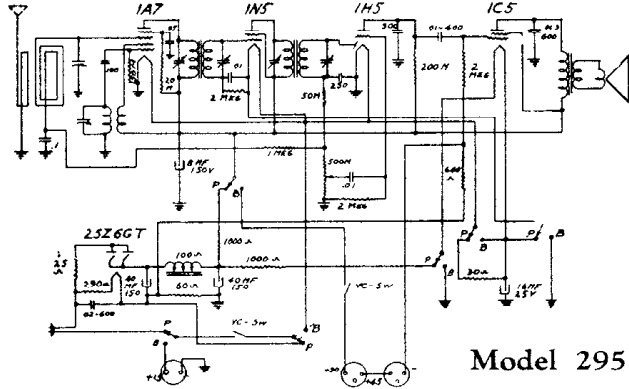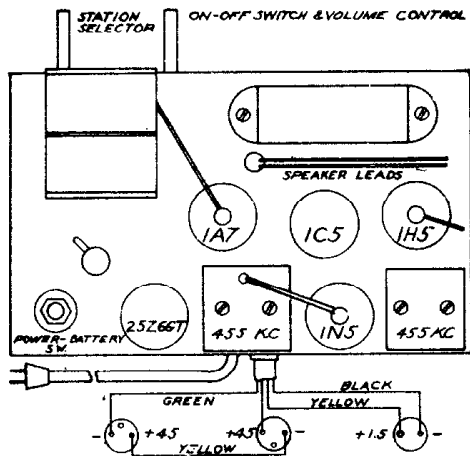


Model 295

Detrola Corporation
Detroit, Michigan


ALIGNMENT PROCEDURE

I.F. Frequency 455 KC. Set Range 540-1580 KC.
 Connect the test oscillator, or signal generator, to the set as follows: Connect the "hot" side of the signal generator to the grid of the 1A7 tube, and the ground side to the terminal on the back of the chassis. An output meter should be connected across the voice coil leads of the speaker to indicate resonance. Align the I.F. trimmers at 455 KC for maximum meter reading.

Adjust the trimmer on the back of the variable condenser at or near 1400 KC at full volume on a weak broadcast signal. When aligning the set do not set the receiver on or near a metal work bench or other large metal object, as it will affect the tracking of the receiver.

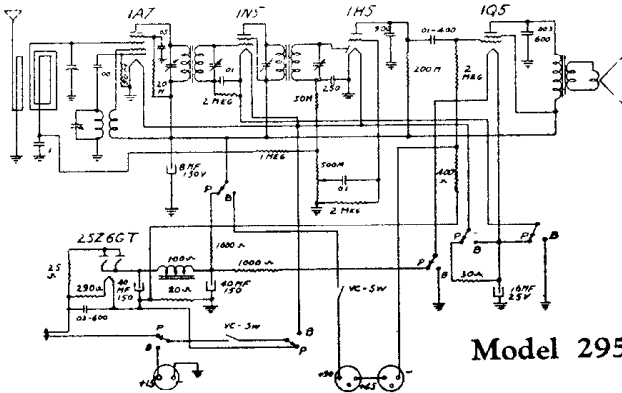



Model 295-1

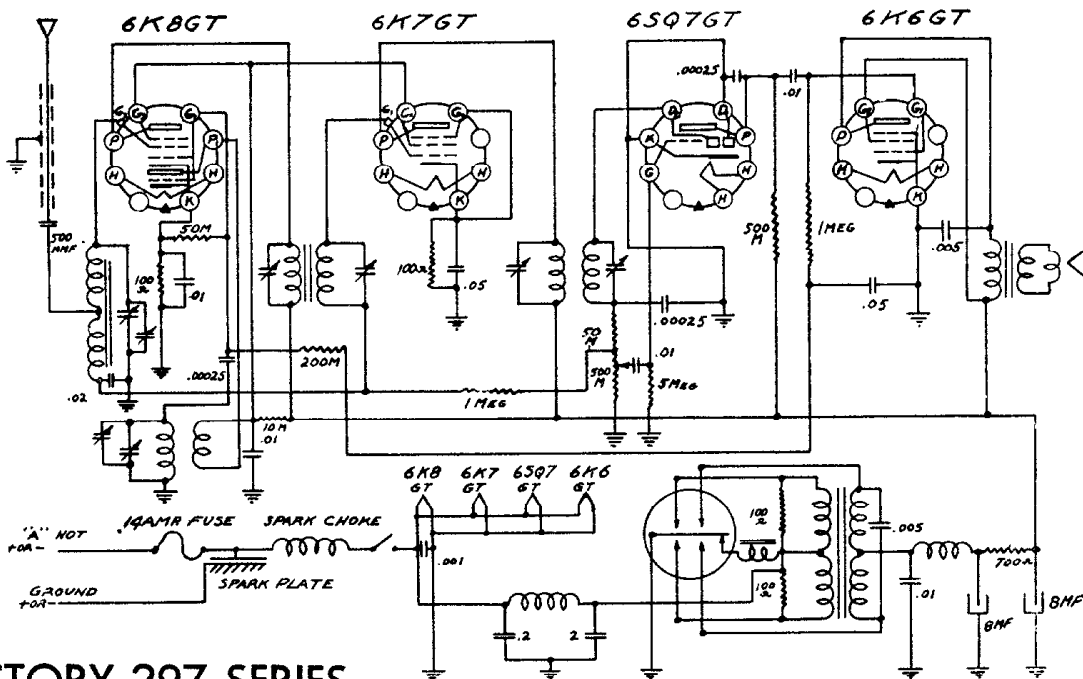

FACTORY 297 SERIES



I.F. 455 KC.

ANTENNA ADJUSTOR
 TUNE IN A WEAK STATION
 ON OR NEAR 1400 KC. TURN
 VOLUME ON FULL AND ADJUST
 THIS SCREW FOR MAXIMUM
 VOLUME.

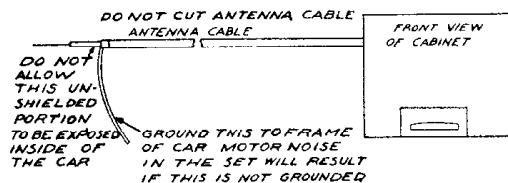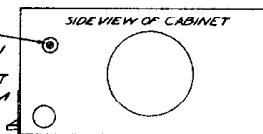


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

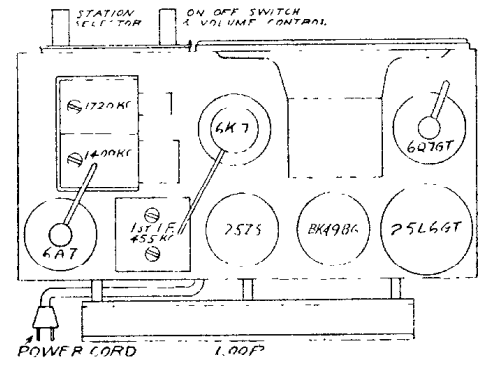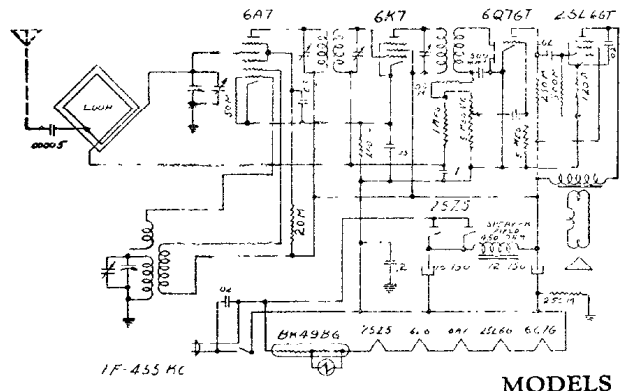


MODELS 304 and 3041

Detroit Corporation
Detroit, Michigan

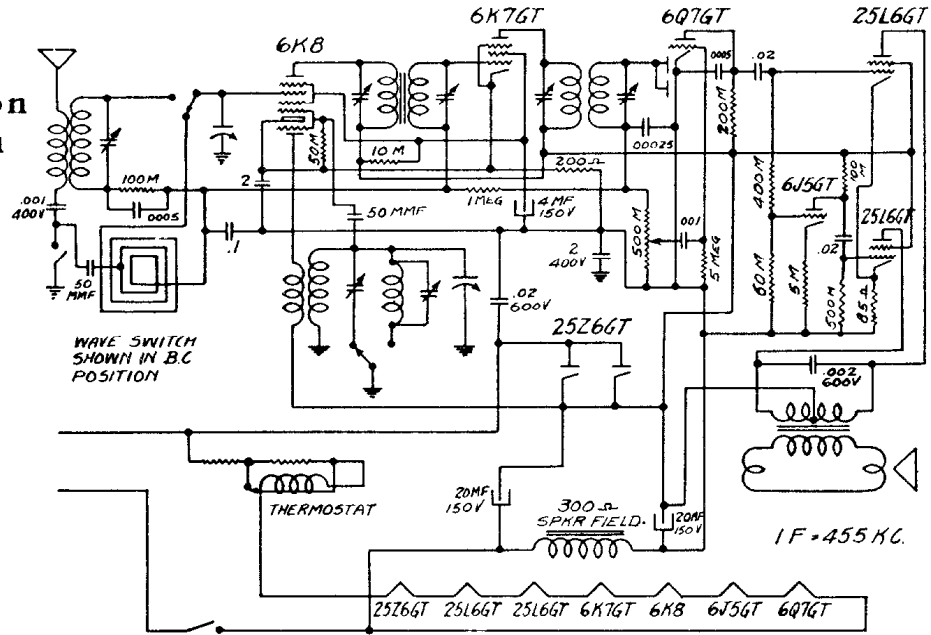

FACTORY 305 SERIES
FACTORY 3051 SERIES

FACTORY 310 SERIES
FACTORY 3101 SERIES

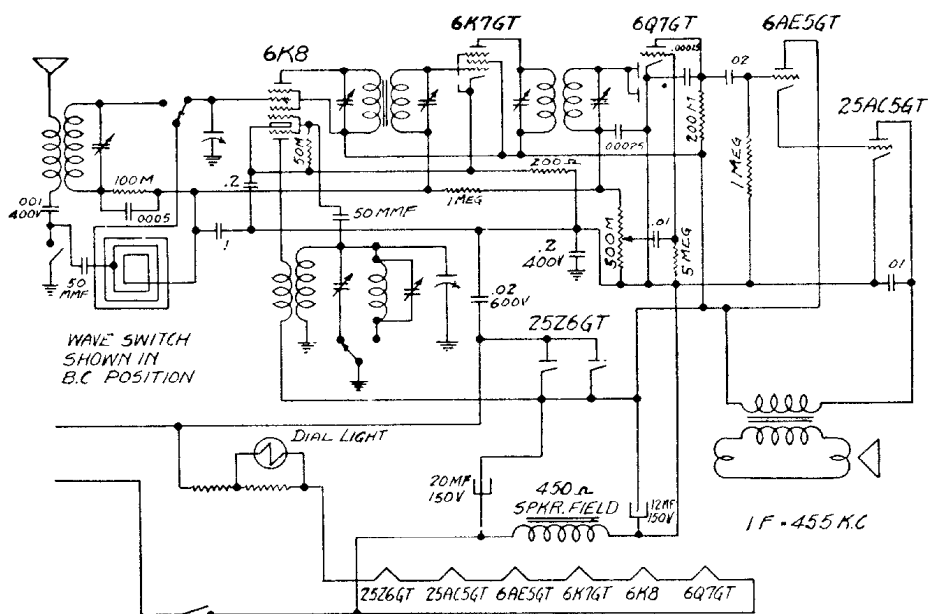

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS MODELS

DL-330

CHASSIS MODEL: DL


**DB-296, DB-301, DB-315
and DB-327**

CHASSIS MODEL: DB

**DW-330A, DW-330B and
DW-358**

CHASSIS MODEL: DW

*Item	Part No.	DESCRIPTION
L1	7BW-179	Loop antenna assembly.....
T4	7BT-486A	Oscillator coil (DB1 and DL1).....
T4	7BT-486	Oscillator coil (DB, DL and DW).....
T2	7BT-545	Double-tuned 455 kc first i-f transformer (DB, DB1, DW).....
T2	7BT-488	Double-tuned 455 kc first i-f transformer (DL, DL1).....
T3	7BT-550B	Double-tuned 455 kc second i-f transformer (see production change No. 1).....
R1	LR-60	20,000 ohm ¼ watt carbon resistor.....
R3	3FR-293	140 ohm ½ watt wire-wound resistor.....
R4	NNR-220	3 megohm ¼ watt carbon resistor.....
R5	7LR-378	Volume control .5 megohm with line switch (DL, DL1).....
R5	7BR-363	Volume control .5 megohm with line switch (DB, DL1).....
R5	7WR-389	Volume control .5 megohm with line switch (DW).....
R6, R2	4XR-327	15 megohm ¼ watt carbon resistor.....
R7, R8	KR-56	500,000 ohm ¼ watt carbon resistor.....
R9	LR-61	200,000 ohm ¼ watt carbon resistor (DB1 and DL1).....
C1, C2	7BC-445	Two-gang variable condenser (DB, DB1 and DW).....
	7BC-445A	Two-gang variable condenser (DL and DL1).....
C5, C11		Trimmers, part of variable condenser.
C6, C7, C8, C9		Trimmers, part of i-f transformers.
C10, C23	BC-12	0.05 mf, 200 volt tubular condenser (C23 used in DB1 and DL1).....
C14	LC-64	0.05 mf, 400 volt tubular condenser.....
C12, C15, C4	4XC-394A	0.00022 mf mica condenser.....
C16, C3	3HC-274	0.002 mf, 600 volt tubular condenser.....
C17, C19	6JC-425	0.024 mf, 400 volt tubular condenser.....
C20, C21	6JC-426C	Dual 20 mf, 150 volt dry electrolytic condenser.....
C22	3CC-302	0.15 mf, 200 volt tubular condenser (DB1 and DL1).....

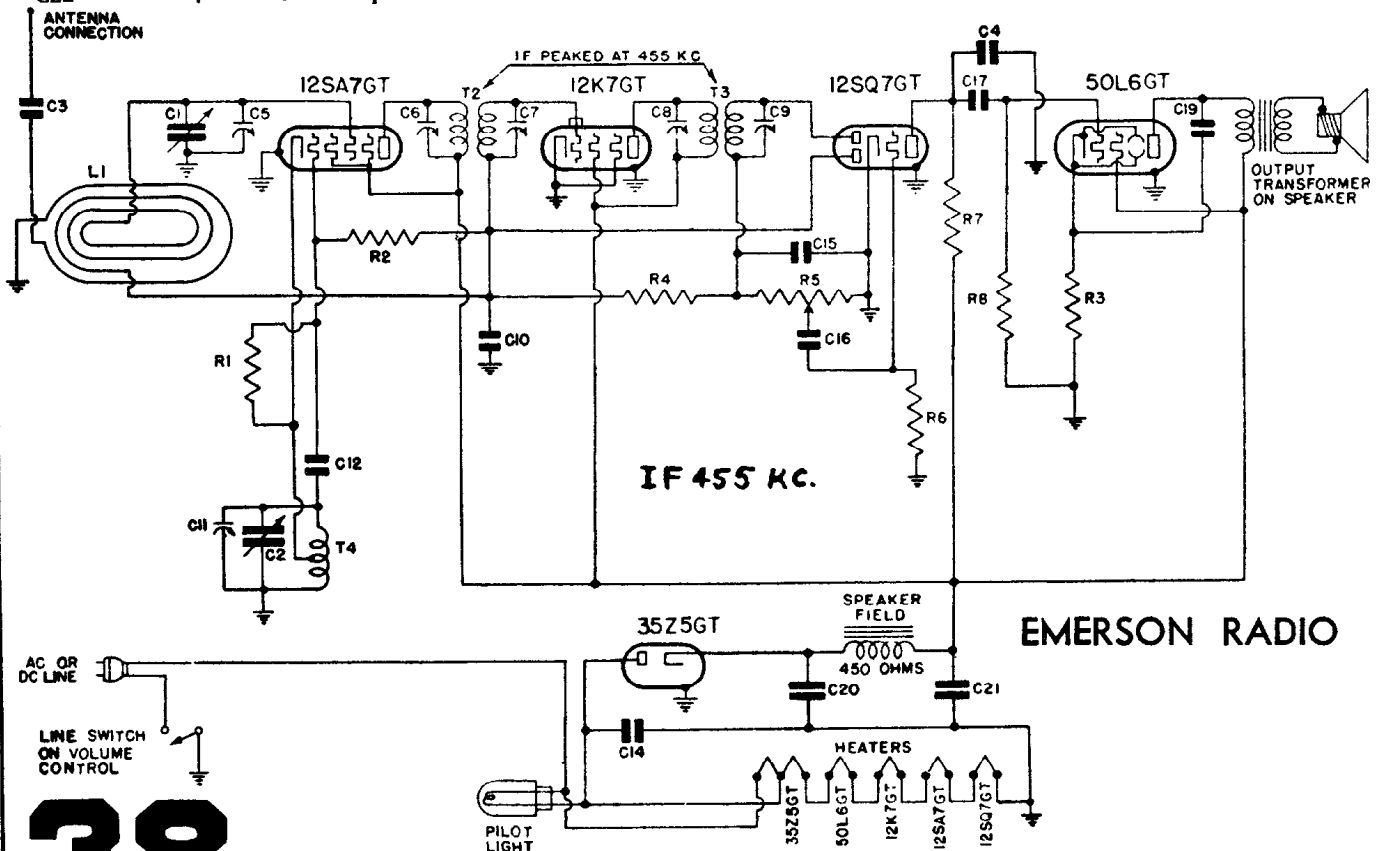

38


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

MODELS: DR-343, DR-348, DR-350 and DR-352 | **MODELS: DR1-343, DR1-348 and DR1-352**

CHASSIS MODEL: DR

Item	Part No.	DESCRIPTION	
L1	7RT-531A	Antenna choke and 455 kc wave-trap	.85
T1	7RW-232	Loop antenna assembly	1.60
T2	7QT-548A	Double-tuned 455 kc first i-f transformer	1.00
T3	7QT-544	Double-tuned 455 kc second i-f transformer	.95
T4	7RT-529A	Two-band oscillator coil	.65
T5	7RT-530	Short-wave antenna coil	.45
R1, R10	4XR-327	15 megohm 1/4 watt carbon resistor	.16
R2, R13	1R-61U	200,000 ohm 1/4 watt carbon resistor	.16
R7, R8	KR-56	500,000 ohm 1/4 watt carbon resistor	.16
R5	NNR-220U	3 megohm 1/4 watt carbon resistor	.16
R6	7BR-365C	Volume control .5 megohm with line switch	.85
R9	3FR-293	140 ohm, 1/2 watt wire-wound resistor	.16
R11	LR-60	20,000 ohm 1/4 watt carbon resistor	.16
R12	KR-53	50,000 ohm 1/4 watt carbon resistor	.16
C1, C2	7RC-464	Two-gang variable condenser	2.40
C3	HC-34	0.006 mf, 600 volt tubular condenser	.20
C4		0.001 mf, part of L1, wave-trap assembly	.20
C5, C18	FC-29	0.02 mf, 200 volt tubular condenser (see production change no. 1)	.20
C6	22C-253	0.0025 mf mica condenser	.20
C7, C8	7RC-465	Dual trimmer assembly	.30
C9, C10, C11, C12		Trimmers, part of i-f transformers	
C13, C14	7RC-466	Dual trimmer assembly	.30
C15	2NC-231D	Single adjustable padding condenser	.30
C16	5LC-410A	0.00011 mf mica condenser	.20
C17	7RC-479	0.0016 mf mica condenser	.20
C20, C29	BC-12	0.05 mf, 200 volt tubular condenser	.20
C21, C23	5AC-384	0.0002 mf, 600 volt tubular or mica condenser	.20
C22	3HC-274	0.002 mf, 600 volt tubular condenser	.20
C24	LC-65	0.02 mf, 400 volt tubular condenser	.20
C25	EC-23	0.03 mf, 400 volt tubular condenser	.20
C26	TTC-177	0.01 mf, 600 volt tubular condenser	.20
C27, C28	6QC-437A	Multiple dry electrolytic condenser, 150 volt. C27—20 mf, C28—40 mf.	.95
C30	KC-58	0.01 mf, 400 volt tubular condenser	.20
C31	LC-64	0.05 mf, 400 volt tubular condenser	.20
C32	2CC-208	0.2 mf, 200 volt tubular condenser	.20

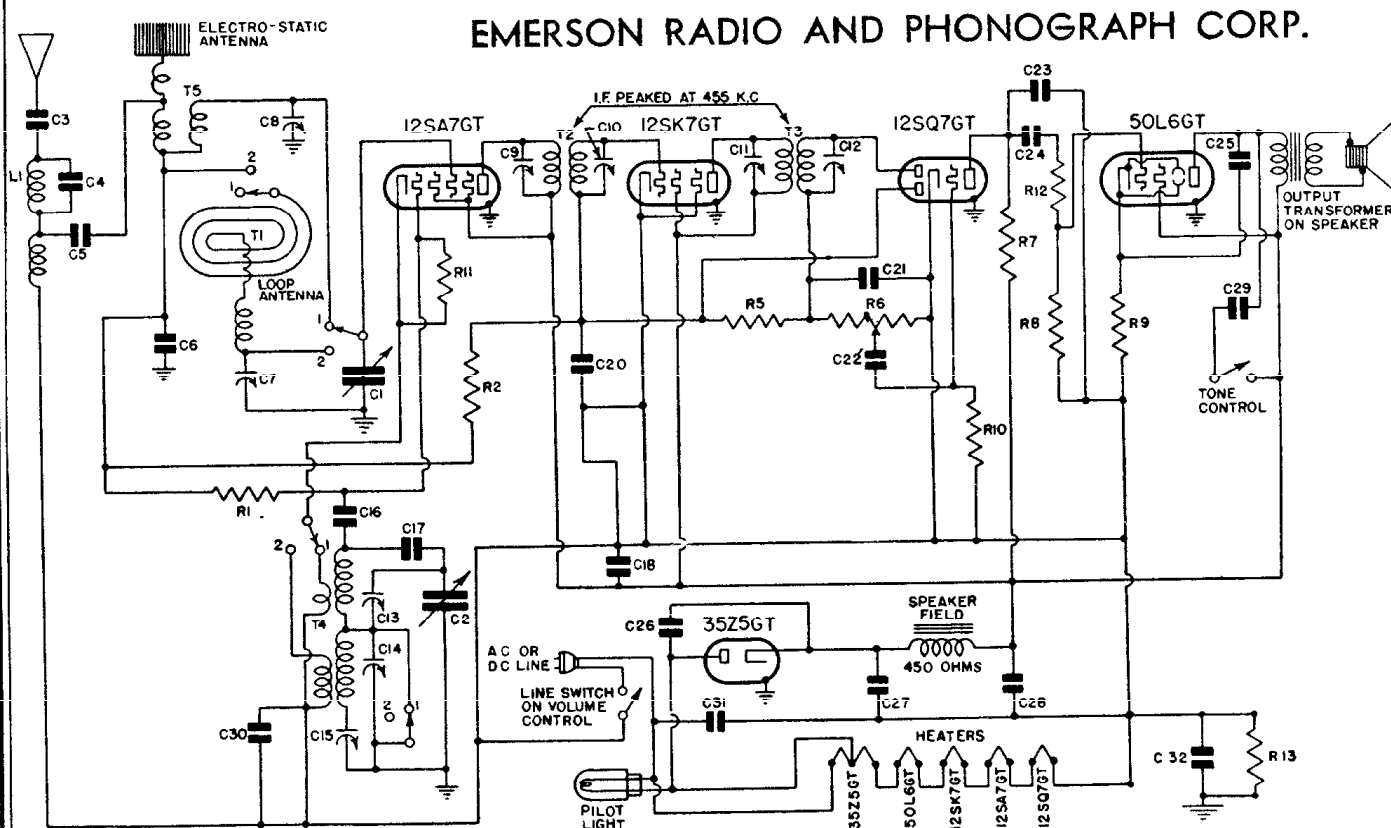

WAVE BAND SWITCH SHOWN IN SHORT WAVE POSITION.
POSITION NO. 1 SHORT WAVE
NO. 2 BROADCAST

ON MODEL DR OMIT PARTS R13 AND C32 AND GROUND B- TO CHASSIS.


39

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

EMERSON RADIO AND PHONOGRAPH CORP.

Models
DS-365
DS-372

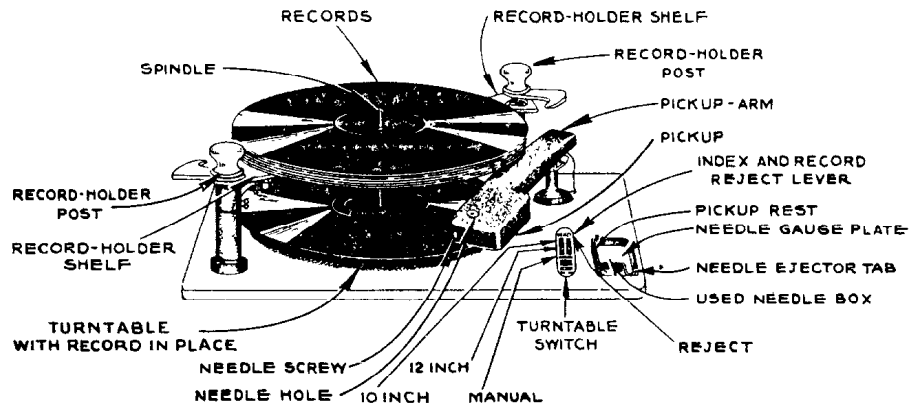

Top View of Automatic Record Changer

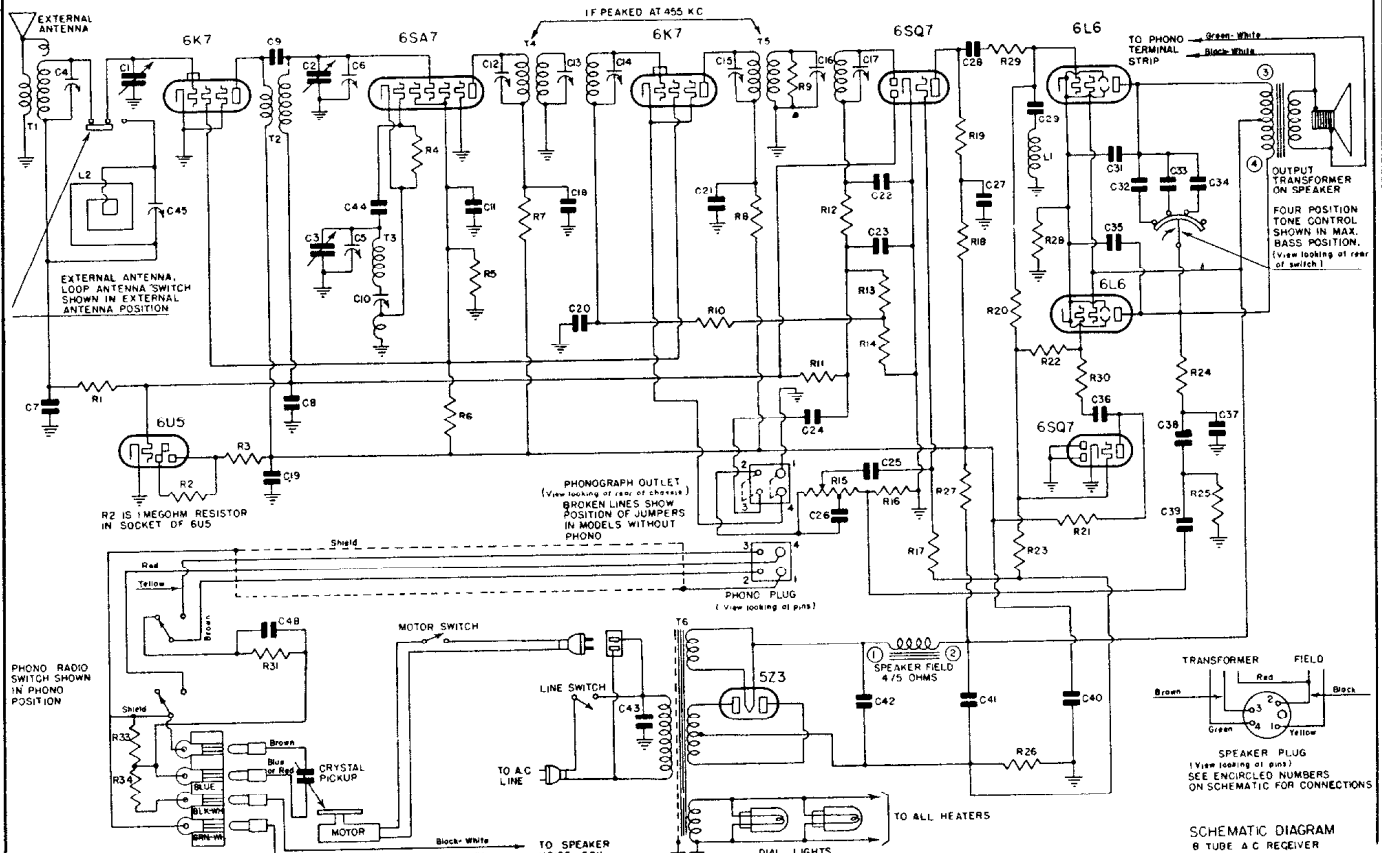

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed below are from point indicated to ground (chassis) with the volume control turned on full and no signal. Line voltage for these readings was 117 volts, 60 cycles, a.c. All readings except B plus at rectifier, heaters, and cathode voltages were taken on 300 volt scale.

Tube	Plate	Screen	Cathode	Heaters
6K7GT	245	70	0	6.3
6SA7GT	245	70	0	6.3
6K7GT	235	70	0	6.3
6SQ7GT (det.)	125	—	0	6.3
6SQ7GT (P.L.)	150	—	0	6.3
6L6 (2)	275	285	18.5	6.3

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS


Emerson Radio and Phonograph Corp.

Models DS-365, DS-372

REPLACEMENT PARTS


*Item	Part No.	DESCRIPTION	PRICE
L1	7ST-538	10 K.C. filter choke.....	\$1.40
L2	7SW-238	Loop antenna (365 cabinet).....	1.05
L2	7SW-298	Loop antenna (372 cabinet).....	1.75
T1	7ST-533	Antenna coil.....	.40
T2	7ST-534	Interstage coil.....	.50
T3	7ST-535	Oscillator coil.....	.25
T4	7ST-536	Triple-tuned 455 kc first i-f transformer.....	1.45
T5	7ST-537	Triple-tuned 455 kc second i-f transformer.....	1.60
T6	7ST-549	Power transformer.....	8.90
R1, R12, R29, R30	KR-53	50,000 ohm $\frac{1}{4}$ watt carbon resistor.....	.16
R2	KR-57	1 megohm $\frac{1}{4}$ watt resistor in 6U5 tube socket.....	.16
R3	GR-31	20,000 ohm 1 watt carbon resistor.....	.16
R4	LR-60	20,000 ohm $\frac{1}{4}$ watt carbon resistor.....	.16
R5	3BR-247	40,000 ohm $\frac{1}{2}$ watt carbon resistor.....	.16
R6	7SR-411	15,000 ohm 2 watt carbon resistor.....	.25
R7, R8	PR-79	1000 ohm $\frac{1}{4}$ watt carbon resistor.....	.16
R9		190,000 ohm resistor, part of T6.	
R10, R11	NNR-220	3 megohm $\frac{1}{4}$ watt carbon resistor.....	.16
R13	LR-61	200,000 ohm $\frac{1}{4}$ watt carbon resistor.....	.16
R14, R18	KR-54	100,000 ohm $\frac{1}{4}$ watt carbon resistor.....	.16
R19, R21			
R15	7SR-379	Volume control, 1.2 megohm, double tapped.....	.70
R16	3ER-262	75 ohm $\frac{1}{2}$ watt wire-wound resistor.....	.16
R17	HR-42	2 megohm $\frac{1}{4}$ watt carbon resistor.....	.16
R20, R22, R23	KR-55	250,000 ohm $\frac{1}{4}$ watt carbon resistor.....	.16
R24	3BR-246	10,000 ohm 2 watt carbon resistor.....	.25
R25	7SR-404	3,500 ohm $\frac{1}{2}$ watt carbon resistor.....	.16
R26	7SR-402	11 ohm $\frac{1}{2}$ watt wire-wound resistor.....	.16
R27	3XR-283	1500 ohm 2 watt carbon resistor.....	.25
R28	7SR-403	180 ohm 3 watt carbon resistor.....	.30
C1, C2, C3	7SC-496	Three-gang variable condenser.....	5.05
C4		Trimmer, part of T1.	
C5, C6		Trimmers, part of variable condenser.	
C7, C8, C20	BC-12	0.05 mf, 200 volt tubular condenser.....	.20
C9	7SC-498A	0.000008 mf, mica condenser.....	.20
C10	2NC-231A	Single adjustable padding condenser; range 300 to 600 mmf.....	.30
C11	EEC-132	0.1 mf, 400 volt tubular condenser.....	.20
C12, C13			
C14, C15			
C16, C17			
C18, C21	LC-64	0.05 mf, 400 volt tubular condenser.....	.20
C36			
C19, C27	EEC-132	0.1 mf, 400 volt tubular condenser.....	.20
C28			
C22, C26	5LC-410A	0.00011 mf, mica condenser.....	.20
C48			
C23	4XC-393A	0.00006 mf, mica condenser.....	.20
C24, C25	KC-58	0.01 mf, 400 volt tubular condenser.....	.20
C29		0.0014 mf, mica condenser; part of L1.	
C31, C35	3VC-324	0.003 mf, 600 volt tubular condenser.....	.20
C32	3XC-374	0.1 mf, 600 volt tubular condenser.....	.20
C33	7EC-473	0.05 mf, 600 volt tubular condenser.....	.20
C34	QQC-173	0.015 mf, 600 volt tubular condenser (see production change number 1).....	.20
C37	7SC-497	0.08 mf, 600 volt tubular condenser.....	.20
C38	4DC-349	0.04 mf, 400 volt tubular condenser.....	.20
C39	EC-19	0.5 mf, 200 volt tubular condenser.....	.35
C40, C41	7AC-444A	16 mf, 400 volt dry electrolytic condenser.....	.85
C42	3XC-329 or } 7SC-501	30 mf, 450 volt wet electrolytic condenser.....	1.35
		30 mf, 450 volt fabricated plate electrolytic condenser.....	1.00
C43, C44	3LC-297A	0.01 mf, 400 volt tubular condenser.....	.20
C45		Trimmer, part of L2.	

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

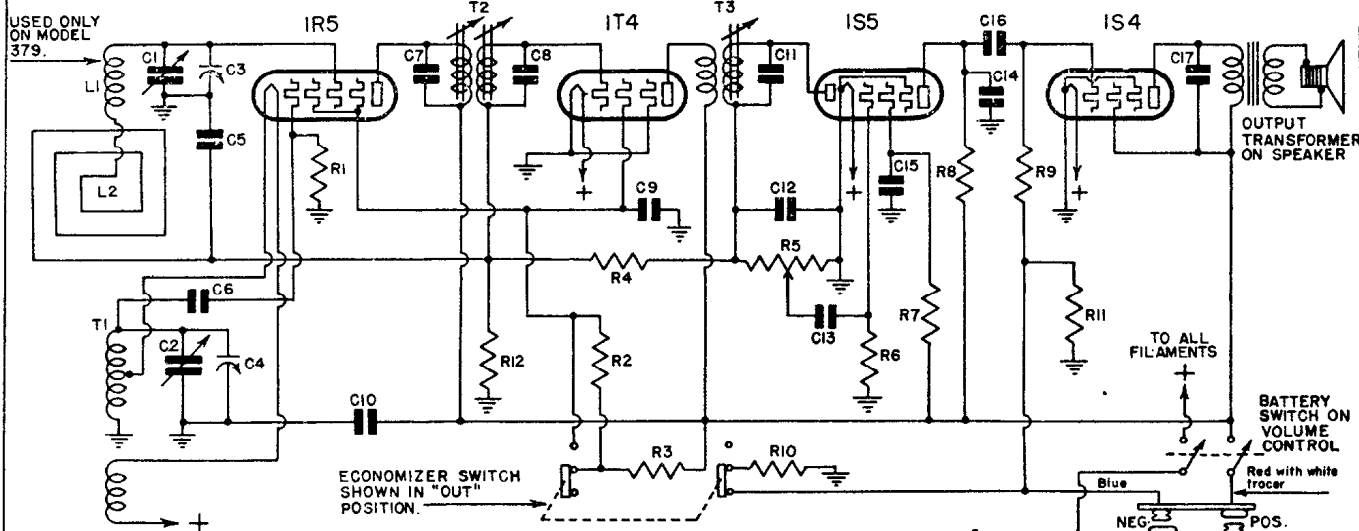

- L1 7UT-542
- L2 7UW-236
- L2 7UW-296
- T1 7UT-539
- T2 7UT-540
- T3 7UT-541
- R1 KR-54
- R2 LR-64
- R3 LR-65
- R4, R12 3RR-274
- R5 7UR-380
- R6 3RR-274
- R7, R9 NNR-220
- R8 KR-57
- R10 7UR-394
- R11 7UR-392
- C1, C2 7UC-469
- †C3, C4
- C5, C9, C15 FC-29
- C6, C12, C14 5LC-410A
- †C7, C8, C11
- C10 7UC-476
- C13 3HC-274
- C16, C17 NNC-199

- Iron core loading coil (379)
- Shoulder strap loop assembly
- Loop antenna (380)
- Oscillator coil
- Iron core double-tuned 455 kc first i-f transformer
- Iron core single-tuned 455 kc second i-f transformer
- 100,000 ohm 1/4 watt carbon resistor
- 5,000 ohm 1/4 watt carbon resistor
- 10,000 ohm 1/4 watt carbon resistor
- 5 megohm 1/4 watt carbon resistor
- Volume control 1.5 megohm with double pole battery switch
- 10 megohm 1/4 watt carbon resistor
- 3 megohm 1/4 watt carbon resistor
- 1 megohm 1/4 watt carbon resistor
- 2200 ohm 1/4 watt carbon resistor
- 1800 ohm 1/4 watt carbon resistor
- Two-gang variable condenser
- Trimmers, part of variable condenser.
- 0.02 mf, 200 volt tubular condenser
- 0.00011 mf mica condenser
- Fixed trimming condensers, contained inside i-f cans.
- 10 mf, 100 volt dry electrolytic condenser
- 0.002 mf, 600 volt tubular condenser
- 0.001 mf, 600 volt tubular condenser

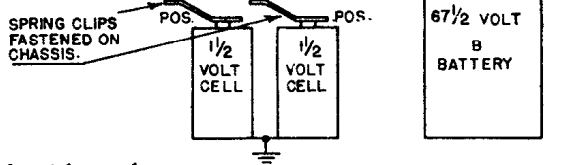


**Emerson
Radio
Models
DU-379
DU-380**

Readings should be taken with a 1000 ohms-per-volt meter. Voltages listed are from point indicated to chassis with volume control turned on full and no signal. The battery voltages for these readings were: "A" 1.5 volts, "B" 67.5 volts. All readings except filaments were taken on the 250 volt scale, with battery saver "out."

Tube	Plate	Screen	Osc. Plate	Fil.
1R5	57	60	57	1.5
1T4	57	60	—	1.5
1S5	*5	*3	—	1.5
1S4	55	60	—	1.5

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

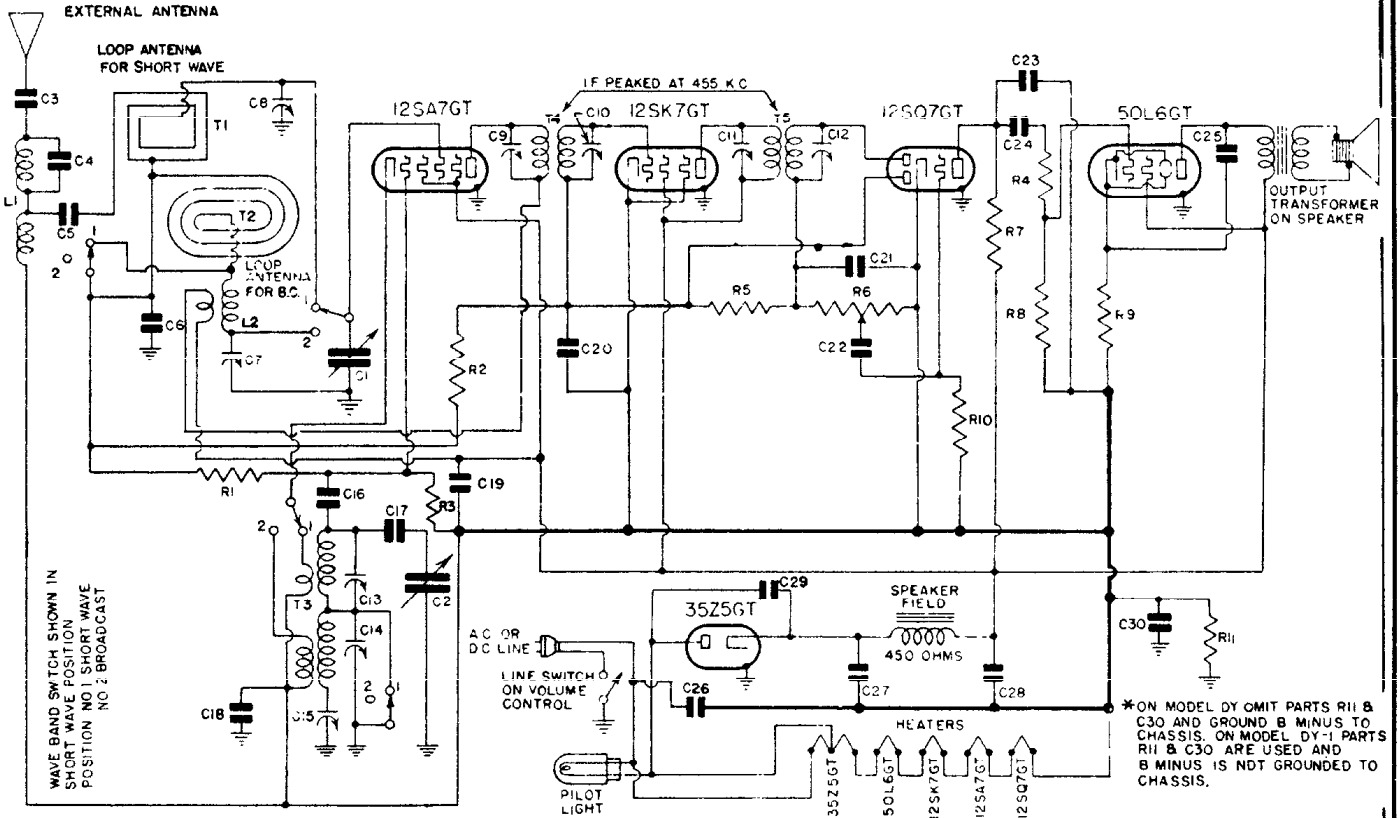

L1	7RT-531
L1	7RT-531A
L2	7YT-552A
T1, T2	7YW-249A
T3	7YT-551A
T4	7QT-548C
T5	7QT-544
R1, R10	4XR-327
R2, R11	LR-61U
R3	LR-60
R4	KR-53
R5	HR-42
R6	7BR-363C
R7, R8	KR-56
R9	3FR-293
C1, C2	7RC-464
C3	HC-34
C4	
C5, C19	FC-29
C6	2ZC-253
C7, C8	
†C9, C10, C11, C12	
C13, C14	7RC-466
C15	2NC-231D
C16	4XC-394A
C17	7YC-483
C18	KC-58
C20	AC-6
C21, C23	5AC-384
C22	3HC-274
C24	LC-65
C25	EC-23
C26	LC-64
C27, C28	6JC-426H
C29	TTC-177
C30	2CC-208

Antenna choke and 455 kc wave-trap (DY1).....	
Antenna choke and 455 kc wave-trap (DY).....	
Broadcast loop antenna loading coil.....	
Two-band loop antenna assembly.....	
Two-band oscillator coil.....	
Double-tuned 455 kc first i-f transformer.....	
Double-tuned 455 kc second i-f transformer.....	
15 megohm 1/4 watt carbon resistor.....	
200,000 ohm 1/4 watt carbon resistor.....	
20,000 ohm 1/4 watt carbon resistor.....	
50,000 ohm 1/4 watt carbon resistor.....	
2 megohm 1/4 watt carbon resistor.....	
Volume control .5 megohm with line switch.....	
500,000 ohm 1/4 watt carbon resistor.....	
140 ohm, 1/2 watt wire-wound resistor.....	
Two-gang variable condenser.....	
0.006 mf, 600 volt tubular condenser.....	
0.001 mf, part of L1, wave-trap assembly.....	
0.02 mf, 200 volt tubular condenser.....	
0.0025 mf mica condenser.....	
Trimmers, part of loop antenna assembly.....	
Trimmers, part of i-f transformers.....	
Dual trimmer assembly.....	
Single adjustable padding condenser.....	
0.00022 mf mica condenser.....	
0.00114 mf mica condenser (coded 0.0011 mf).....	
0.01 mf, 400 volt tubular condenser.....	
0.1 mf, 200 volt tubular condenser.....	
0.0002 mf, 600 volt tubular or mica condenser.....	
0.002 mf, 600 volt tubular condenser.....	
0.02 mf, 400 volt tubular condenser.....	
0.03 mf, 400 volt tubular condenser.....	
0.05 mf, 400 volt tubular condenser.....	
Dual 20 mf, 150 volt dry electrolytic condenser.....	
0.01 mf, 600 volt tubular condenser.....	
0.2 mf, 200 volt tubular condenser.....	

Voltage at 35Z5 cathode—120 volts.
 Voltage across speaker field—32 volts.
 Voltage across pilot light—4.5 volts.


DY-337
DY1-337
DY-349
DY1-349
DY-351
DY1-351

Tube	Plate	Screen	Cathode	Fil.
12SA7GT	88	88	0	12
12SK7GT	88	88	0	12
12SQ7GT	30	—	0	12
50L6GT	82	88	5.6	50

Emerson
43

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

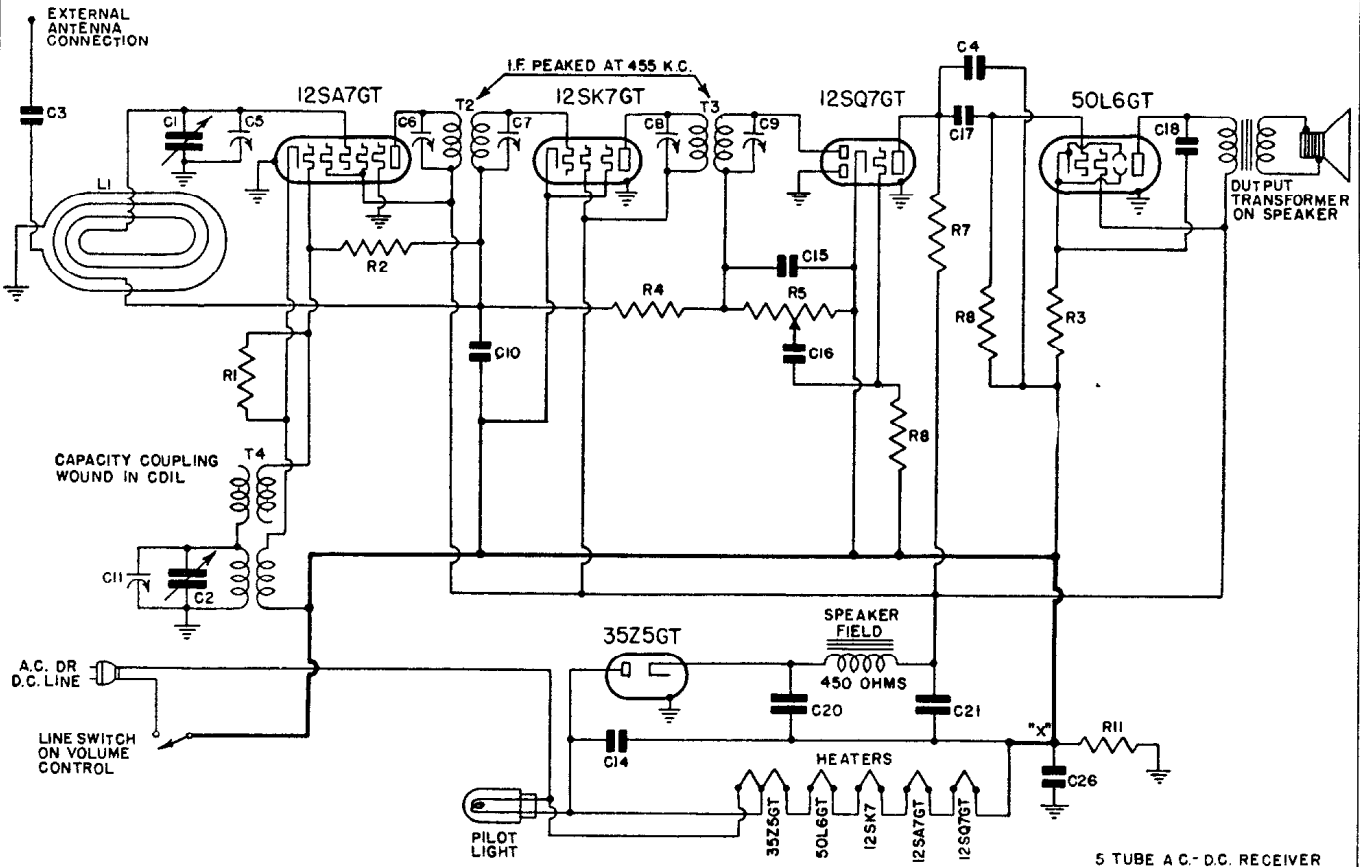

NOTE: R11 and C26 are used on Underwriters' approved chassis only; on other chassis point X is grounded to the chassis.

L1	7BW-179
L1	8CW-334
T4	7QT-547A
T2	8CT-566
T3	7BT-550E
R1	LR-60U
R3	3FR-293
R4	NNR-220
R5	7BR-363D
R5	7LR-378
R6, R2	4XR-327
R7, R8	KR-56U
R11	LR-61
C1, C2	7BC-445D
C1, C2	7BC-445A
C3, C16	3HC-274
C4, C15	5AC-384
C5, C11	
C6, C7, C8, C9	
C10, C27	BC-12
C14	LC-64
C17, C18	LC-65
C20, C21	6JC-426E
C20, C21	6JC-426M
C24	AC-6
C26	2CC-208

Loop antenna assembly (FC)
Loop antenna assembly (FG)
Oscillator coil
Double-tuned 455 kc first i-f transformer
Double-tuned 455 kc second i-f transformer
20,000 ohm 1/4 watt carbon resistor
140 ohm 1/2 watt wire-wound resistor
3 megohm 1/4 watt carbon resistor
Volume control .5 megohm with line switch (FC)
Volume control .5 megohm with line switch (FG)
15 megohm 1/4 watt carbon resistor
500,000 ohm 1/4 watt carbon resistor
200,000 ohm 1/4 watt carbon resistor
Two-gang variable condenser (FC)
Two-gang variable condenser (FG)
0.002 mf, 600 volt tubular condenser
0.002 mf, 600 volt tubular condenser
Trimmers, part of variable condenser
Trimmers, part of variable condenser
0.05 mf, 200 volt tubular condenser
0.05 mf, 400 volt tubular
0.02 mf, 400 volt tubular condenser
Dual 20 mf, 150 volt dry electrolytic condenser (FC)
Dual 20 mf, 150 volt dry electrolytic condenser (FG)
0.1 mf, 200 volt tubular condenser
0.2 mf, 200 volt tubular condenser

Emerson

Radio

MODEL: FC-400


CHASSIS MODEL: FC

MODEL: FG-330

CHASSIS MODEL: FG

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

EMERSON RADIO AND PHONOGRAPH CORPORATION

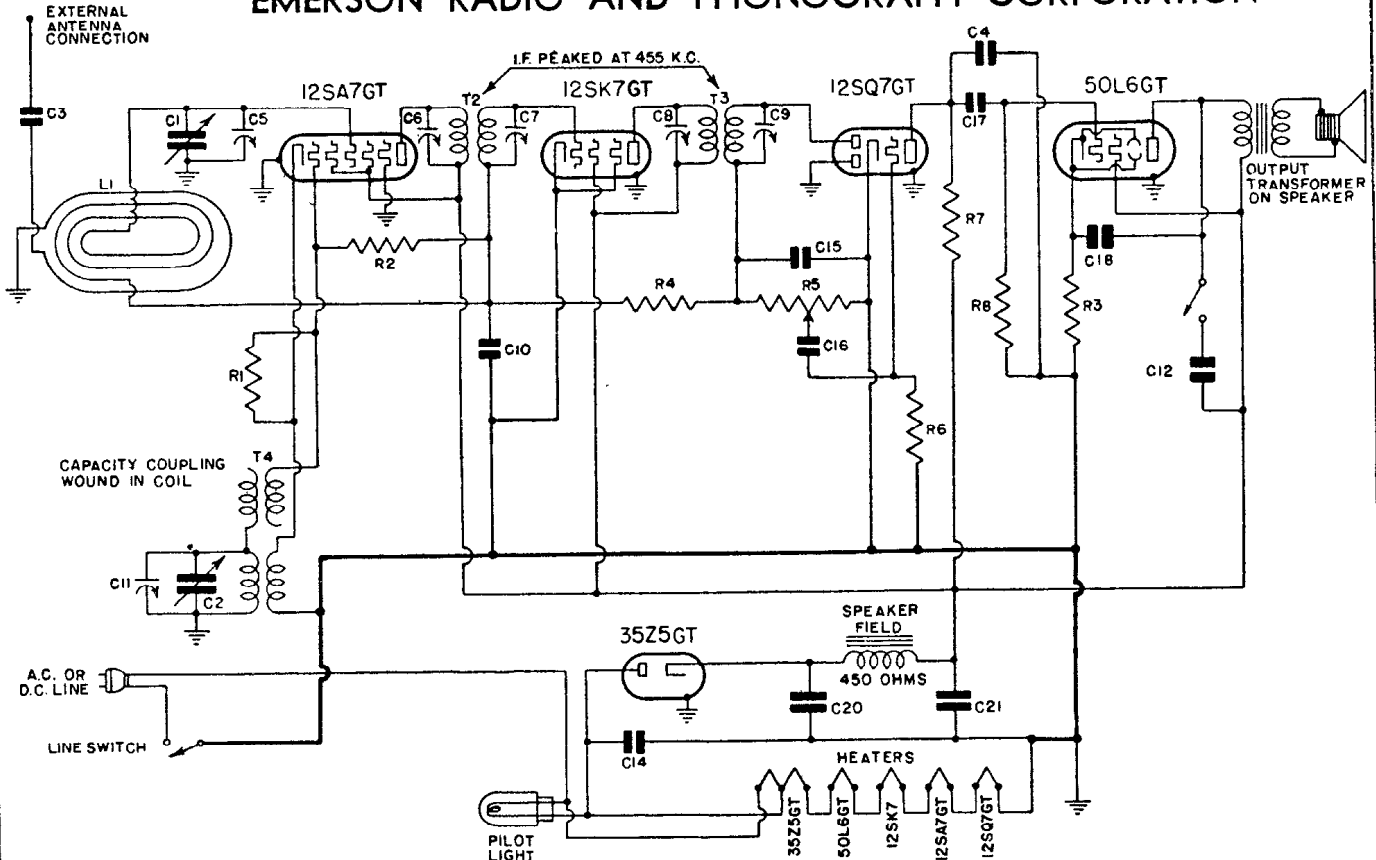

R1	LR-60	20,000 ohm $\frac{1}{4}$ watt carbon resistor
R2, R6	4XR-327	15 megohm $\frac{1}{4}$ watt carbon resistor
R3	3FR-293	140 ohm $\frac{1}{2}$ watt wire-wound resistor
R4	NNR-220	3 megohm $\frac{1}{4}$ watt carbon resistor
R5	9PR-447	Volume control .5 megohm
R7, R8	KR-56	500,000 ohm $\frac{1}{4}$ watt carbon resistor
C1, C2	9PC-533	Two-gang variable condenser
C3, C16	3HC-274	0.002 mf, 600 volt tubular condenser.
C4	5AC-384	0.0002 mf, 600 volt tubular condenser
C5, C11		Trimmers, part of variable condenser.
C6, C7, C8, C9		Trimmers, part of i-f transformers.
C10	AC-6	0.1 mf, 200 volt tubular condenser
C12	9PC-544	0.04 mf, 200 volt tubular condenser

Emerson Radio

Models FP-421
FP-422

VOLTAGE ANALYSIS


Voltage at 35Z5 cathode—120 volts.
Voltage across speaker field—32 volts.
Voltage across pilot light—4.5 volts.

Tube	Plate	Screen	Cathode	Fil.
12SA7GT	88	88	0	12
12SK7GT	88	88	0	12
12SQ7GT	30	—	0	12
50L6GT	82	88	5.6	50

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

45

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

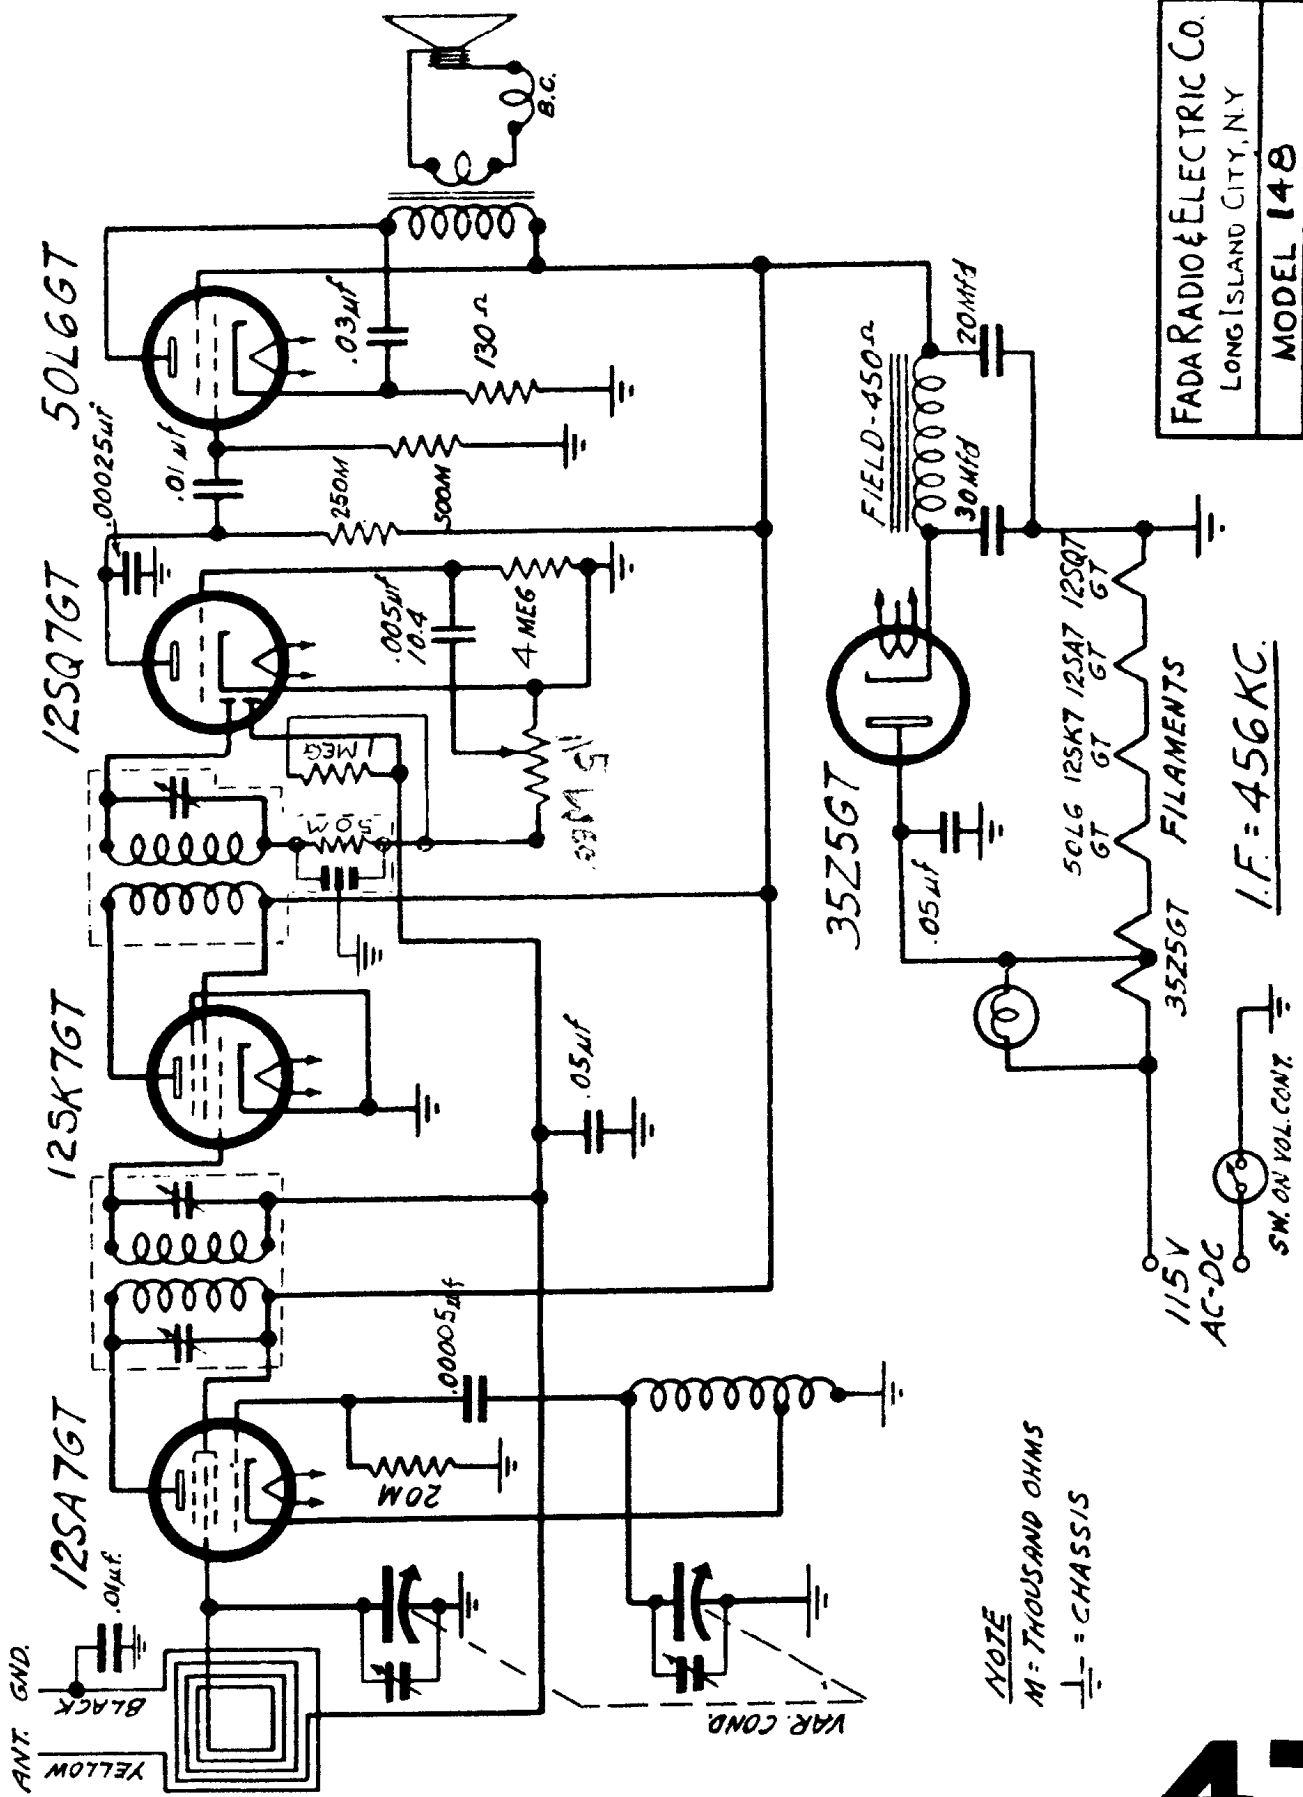


FADA RADIO & ELECTRIC CO.
LONG ISLAND CITY, N.Y.
MODEL 148

NOTE
M = THOUSAND OHMS
⊥ = CHASSIS

I.F. = 456 KC.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

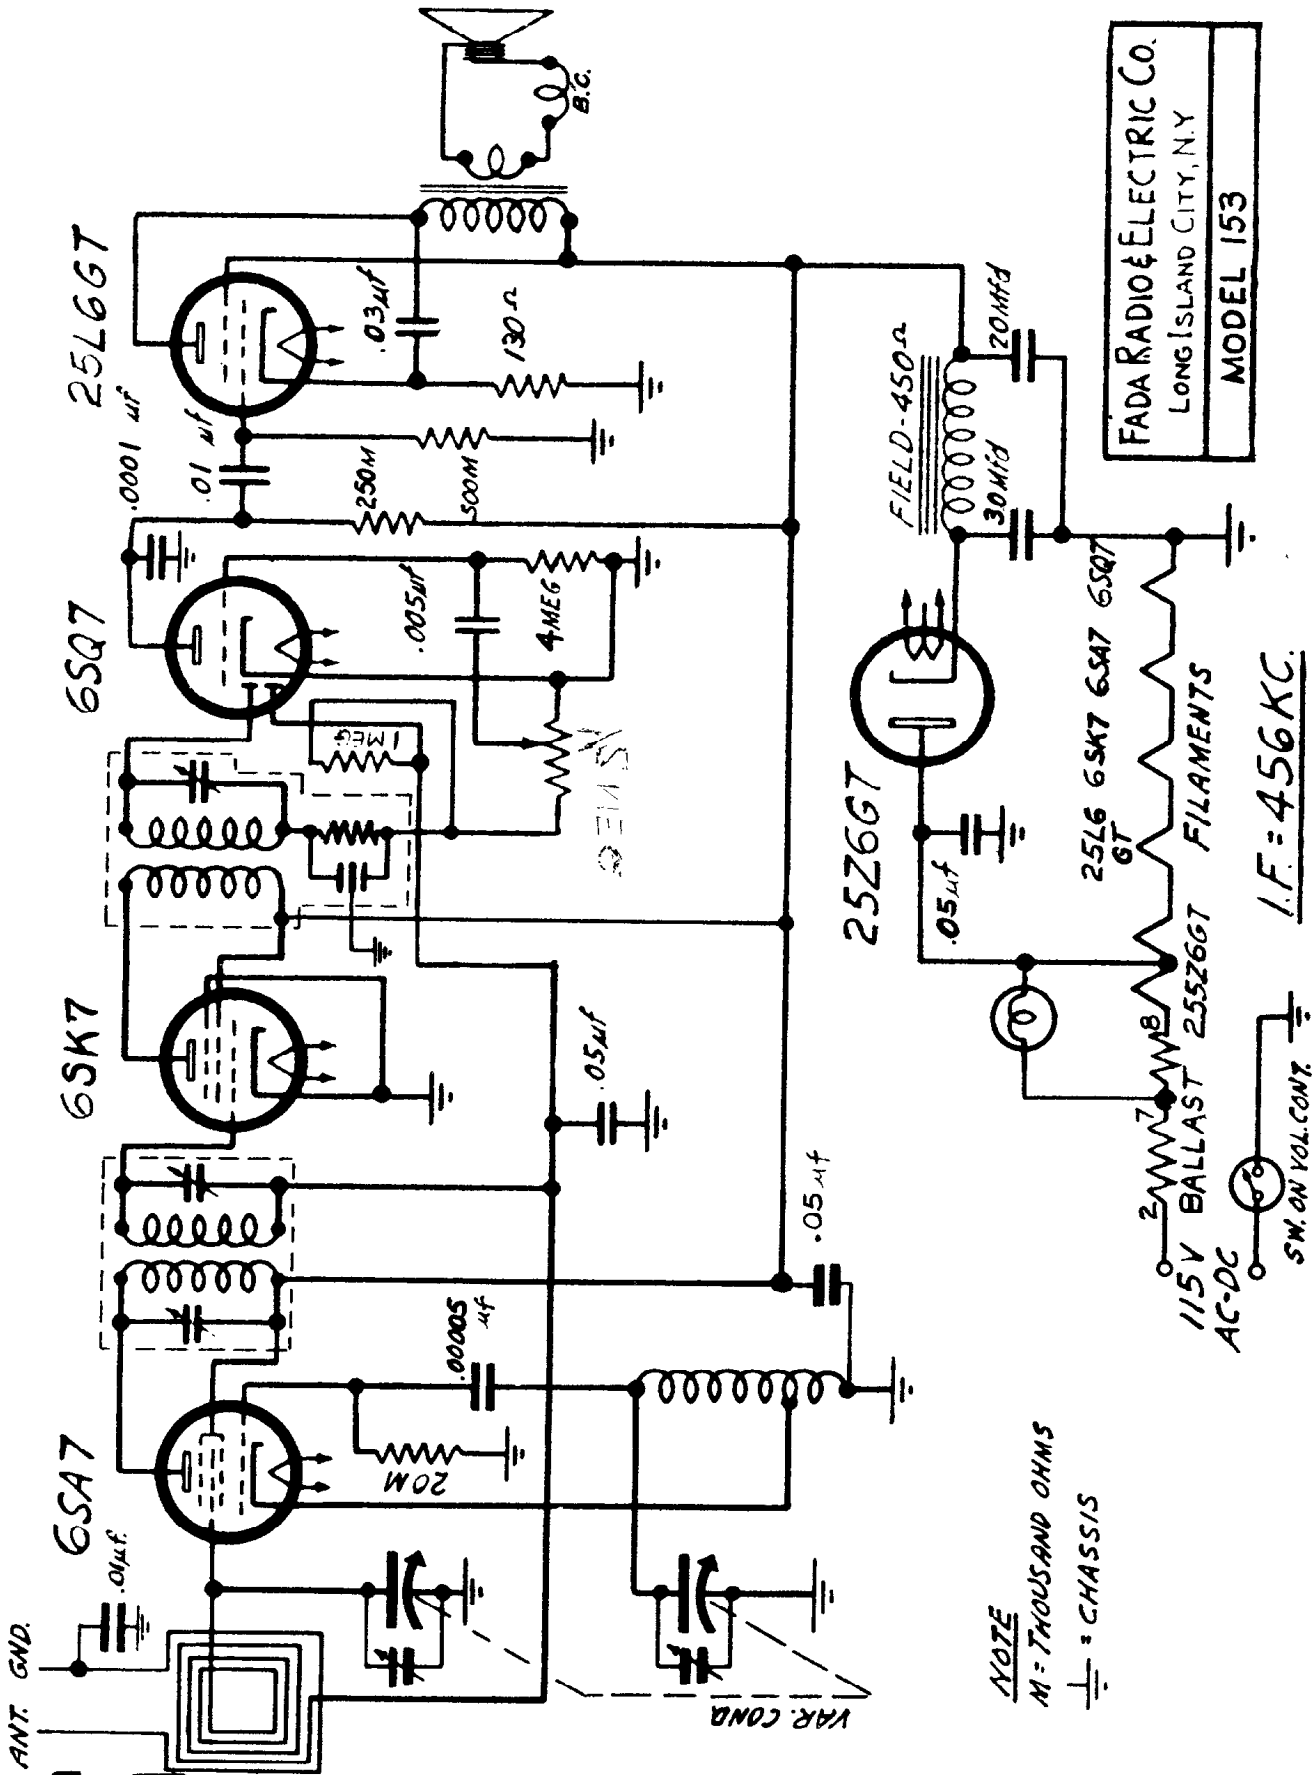

FADA RADIO & ELECTRIC CO.
LONG ISLAND CITY, N.Y.
MODEL 153


48

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

NOTE
M = THOUSAND OHMS
⊥ = CHASSIS

115V BALLAST 25Z6GT
AC-DC
SW. ON VOL. CONT.
I.F. = 456 KC.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

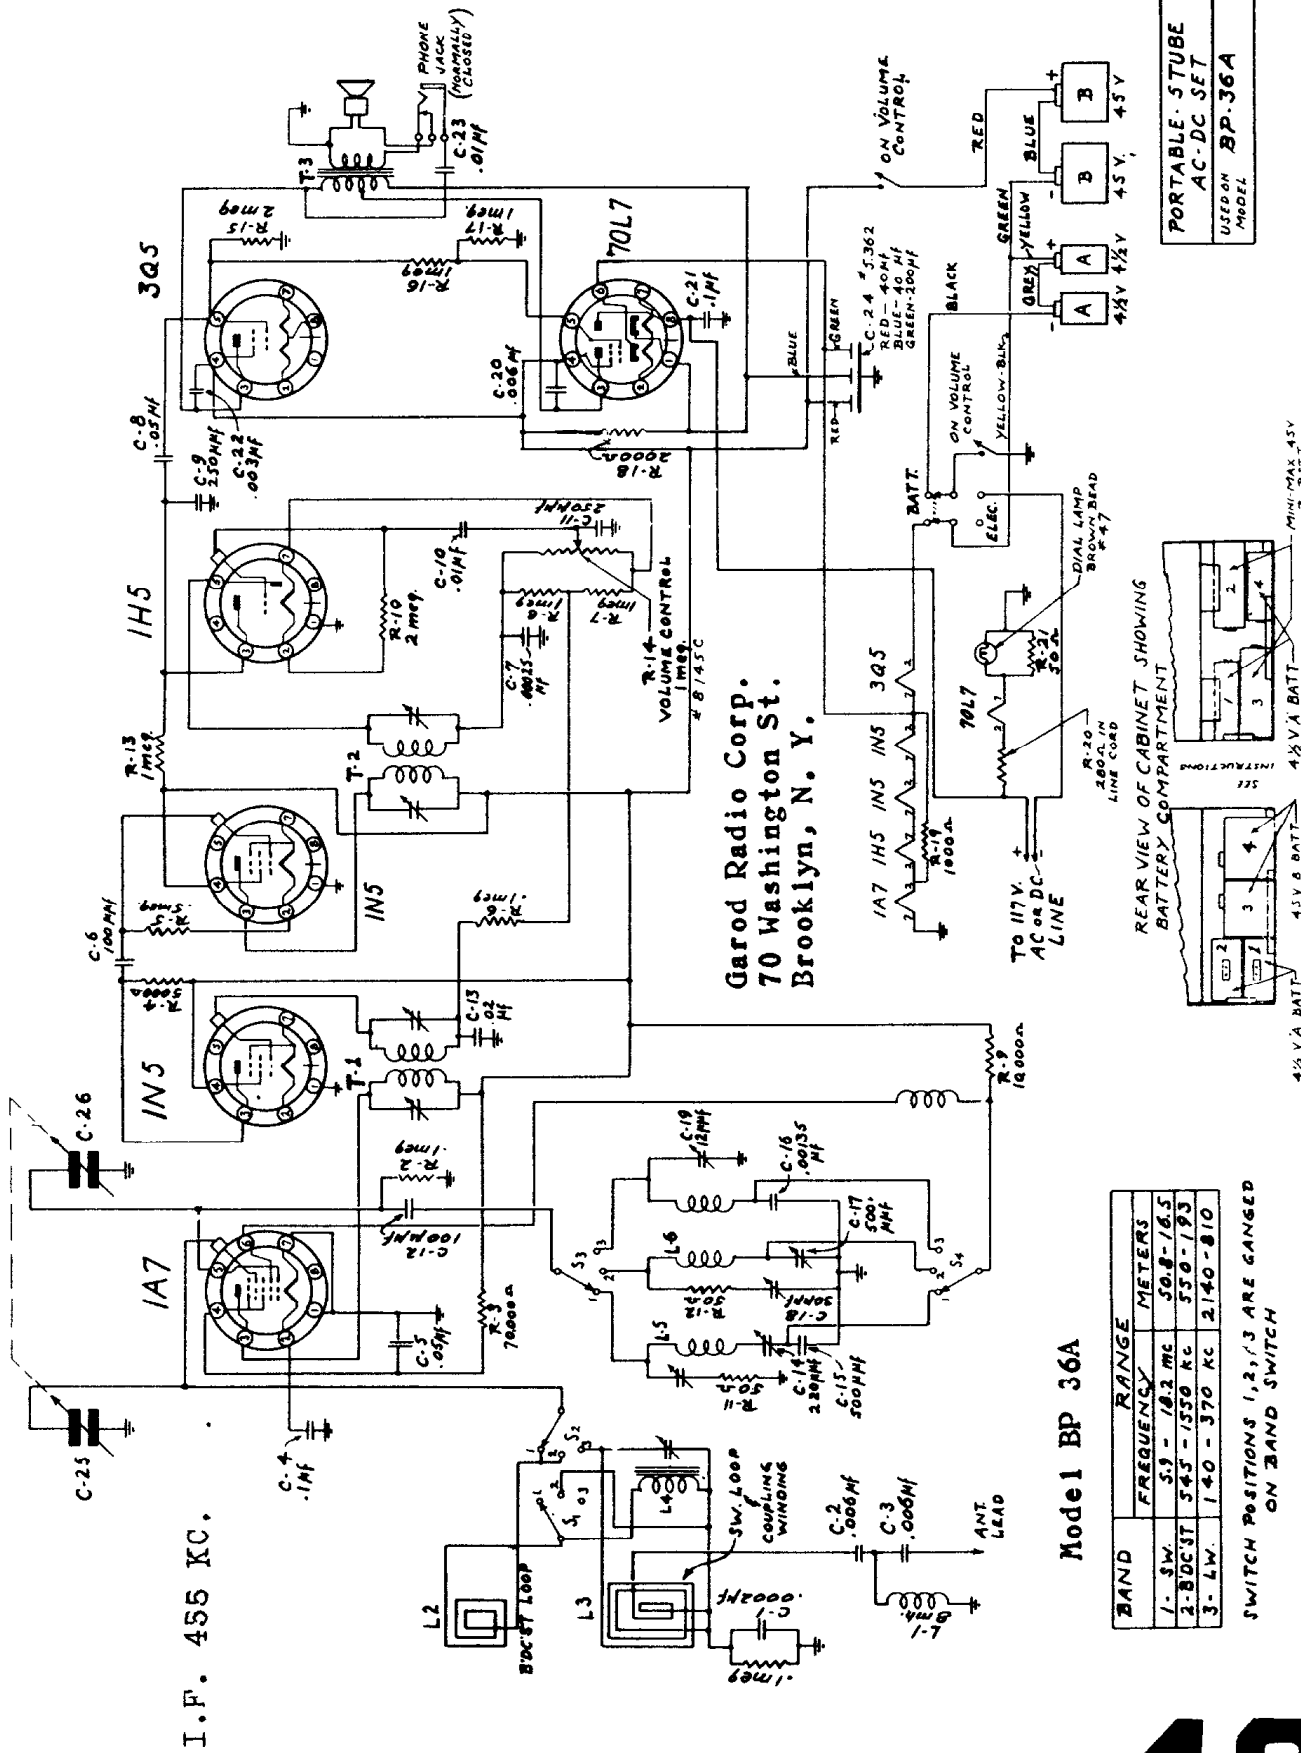

Garod Radio Corp.
70 Washington St.
Brooklyn, N. Y.


Model 1 BP 36A

BAND	FREQUENCY	RANGE	METERS
1- 3W.	5.9 - 18.2 MC		50.8-16.5
2- 8DCST	545 - 1550 KC		55.0-19.3
3- 4W.	140 - 370 KC		2.140-8.10

SWITCH POSITIONS 1, 2, 3 ARE GANGED ON BAND SWITCH

PORTABLE-STUBE
AC-DC SET
USED ON
MODEL
BP-36A


REAR VIEW OF CABINET SHOWING
BATTERY COMPARTMENT

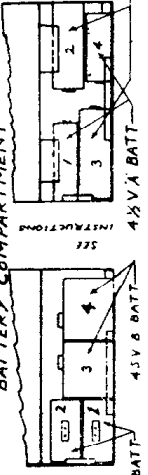

I.F. 455 KC.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Models J-51, J-53, J-54, and J-54W

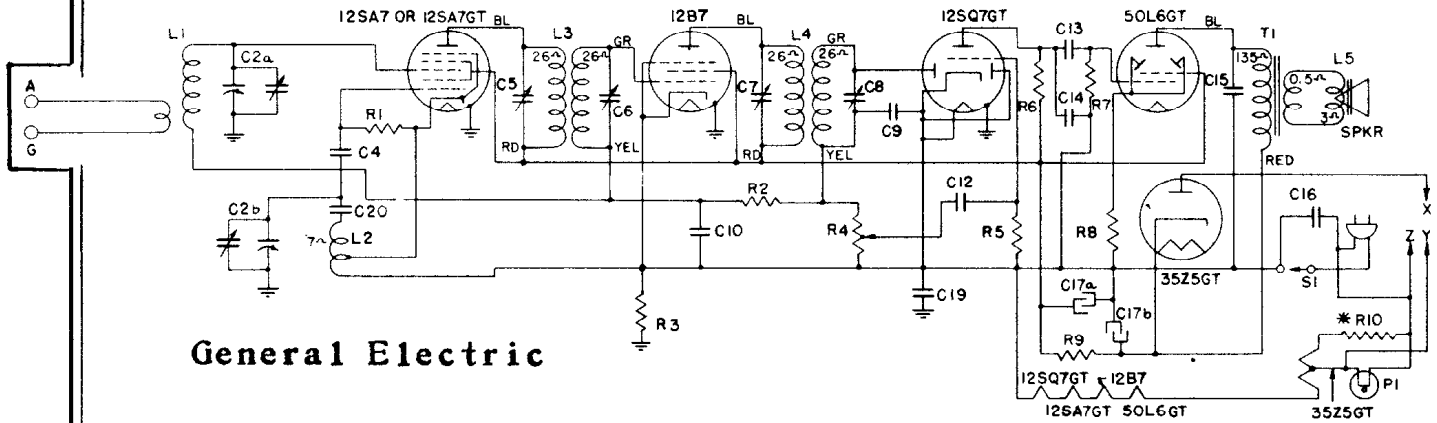

General Electric

*"A" rated receivers have "X" connected to "Y" and R-10 is shorted. "C" rated receivers have "X" connected to "Z."

PARTS DESCRIPTION LIST

Symbol	Description	Symbol	Description	Symbol	Description
C2a	Antenna section of tuning condenser	C17b	40 mfd. 150 V. dry electrolytic	R4	0.5 megohms volume control
C2b	Oscillator section of tuning condenser	C19	0.2 mfd. paper capacitor	R5	4.7 megohms carbon resistor
C4	47 mmf. mica capacitor	C20	.01 mfd. paper capacitor	R6	470,000 ohms carbon resistor
C9	470 mfd. paper capacitor	L1	Beam-a-Scope	R7	470,000 ohms carbon resistor
C10	.05 mmf. mica capacitor	L2	Oscillator Coil	R8	150 ohms carbon resistor
C12	.005 mfd. paper capacitor	L3	1st. I.F. transformer	R9	1200 ohms 1 W. carbon resistor
C13	.005 mfd. paper capacitor	L4	2nd I.F. transformer	R10	13 ohms carbon resistor
C14	330 mmf. mica capacitor	P1	Dial lamp, Mazda No. 47	S1	Power switch
C15	.01 mfd. paper capacitor	R1	33,000 ohms carbon resistor	T1	Output transformer
C16	.05 mfd. paper capacitor	R2	2.2 megohms carbon resistor		
C17a	30 mfd. 150 V. dry electrolytic	R3	470,000 ohms carbon resistor		

GENERAL INFORMATION

Models J-51, J-53, J-54 and J-54W are compact, five-tube superheterodyne receivers which can be operated from either an AC or DC source of power. Model J-51 and J-53 cabinets are in matched walnut veneers. Model J-54 and J-54W cabinets are plastic in oak and gray-white respectively. All models incorporate the following design features: Built-in Beam-a-Scope, 5-inch dynapower speaker, increased dial length, automatic volume control, and beam power output.

The glass tubes used in the converter and detector stages are interchangeable with metal tubes if the receiver is realigned following the change.

Precaution

If the signal generator is AC operated use an isolating transformer between the power supply and the radio receiver power input. The use of an isolating capacitor is not recommended as AC current through the capacitor will introduce hum modulation and/or create the possibility of a burned-out signal generator attenuator.


Special Service Information

The following information will be very useful in servicing receivers if a vacuum tube voltmeter or similar voltage measuring instrument is available.

- Stage Gains

Antenna Post to Converter Grid	4.0 at 1000 KC	Gain*
R.F. on Converter Grid to I.F. on I.F.		
Amplifier Grid	40 at 1000 KC	
I.F. on Converter Grid to I.F. on I.F.		
Amplifier Grid	50 at 455 KC	
I.F. Amplifier Grid to Detector Plate	50 at 455 KC	
- 0.15-volt, 400-cycle signal across the volume control will give 1/2-watt speaker output.* (Volume control turned to maximum.)
- Average DC voltage developed across oscillator grid resistor (R-1)..... 15 volts

* Variations of ± 20% permissible. All readings obtained with enough signal input to give 1/2-watt speaker output.

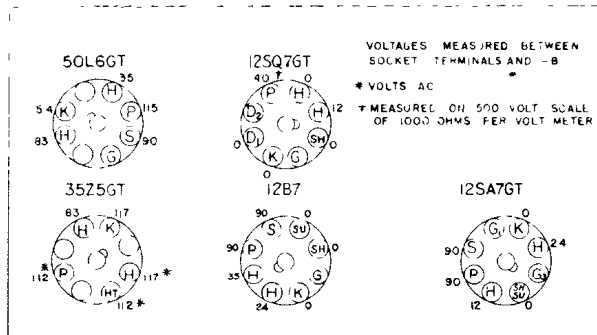


BOTTOM VIEW OF CHASSIS
AC LINE VOLTS-117 MAX VOLUME GANG CLOSED NO SIGNAL

ALIGNMENT PROCEDURE

Alignment Frequencies

I.F. 455 KC

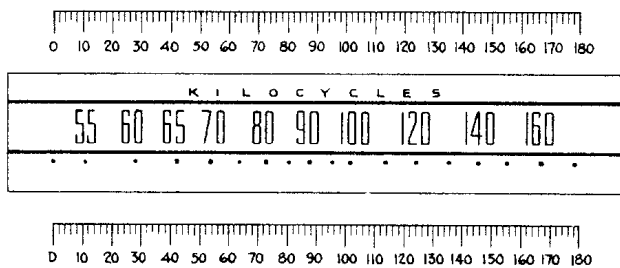

Frequency-degree Reference Chart

50

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Symbol	Description	Symbol	Description	Symbol	Description
C1A	Antenna section of tuning condenser	C33B	15 mfd. 400 V. dry electrolytic	R17	1000 ohms carbon resistor
C1B	Oscillator section of tuning condenser	C33C	30 mfd. 400 V. dry electrolytic	R18	180 ohms 2 W. carbon resistor
C2	"SW2" band antenna trimmer	C34	.002 mfd. 1000 V. paper capacitor	R19	1000 ohms carbon resistor
C3	Touch tuning trimmer strip	C35	.01 mfd. paper capacitor	R20	1800 ohms carbon resistor
C4	.01 mfd. paper capacitor	L1	"BC" and "SW1" band Beam-a-Scope	R21	47,000 ohms carbon resistor
C5	.01 mfd. paper capacitor	L2	"SW1" band antenna coil	R22	6800 ohms carbon resistor
C6	100 mmf. mica capacitor	L3	"SW2" band Beam-a-Scope	R23	27 ohms carbon resistor
C11	.03 mfd. paper capacitor	L4	R.F. interstage coil	R24	47,000 ohms carbon resistor
C12	.03 mfd. paper capacitor	L5	"SW1" band oscillator coil	R25	2 megohms volume control (1/2 megohm tap)
C13	.02 mfd. paper capacitor	L6	"SW2" band oscillator coil	R26	56,000 ohms carbon resistor
C14	.02 mfd. paper capacitor	L7	"BC" band oscillator coil	R27	5.6 megohms carbon resistor
C15	100 mmf. 1000 V. mica capacitor	L8	Touch tuning coil strip	R28	220,000 ohms carbon resistor
C16	.002 mfd. 1000 V. paper capacitor	P1	Dial lamp, Mazda No. 44	R29	33,000 ohms carbon resistor
C17	220 mmf. mica capacitor	P2	Dial lamp, Mazda No. 44	R30	10,000 ohms 3 W. carbon resistor
C18	.01 mfd. paper capacitor	R1	1000 ohms carbon resistor	R31	1600 ohms 4 W. carbon resistor
C19	"SW2" band oscillator trimmer	R2	47 ohms carbon resistor	R32	470,000 ohms carbon resistor
C20	.008 mfd. paper capacitor	R3	10,000 ohms 1 W. carbon resistor	R33	1000 ohms carbon resistor
C21	47 mmf. mica capacitor	R4	3300 ohms carbon resistor	R34	1000 ohms carbon resistor
C22	"SW1" band oscillator trimmer	R5	47,000 ohms carbon resistor	S1	Band switch
C23	2400 mmf. ±5% mica capacitor	R6	22,000 ohms carbon resistor	S2	Tone control switch
C24	"BC" band oscillator trimmer	R7	2.2 megohms carbon resistor	S3	Touch tuning switch
C25	"BC" band oscillator trimmer	R8	150 ohms carbon resistor	S4	Phono key
C26	750 mmf. silvered mica capacitor	R9	470,000 ohms carbon resistor	S5	Power key
C27	.005 mfd. paper capacitor	R10	3300 ohms carbon resistor	T1	1st I.F. transformer
C28	.05 mfd. paper capacitor	R11	100,000 ohms carbon resistor	T2	2nd I.F. transformer
C29	.004 mfd. paper capacitor	R12	220,000 ohms carbon resistor	T3	Output transformer
C30	.004 mfd. paper capacitor	R13	220,000 ohms carbon resistor	T4	50-60-cycle power transformer
C31	150 mmf. mica capacitor	R14	150,000 ohms carbon resistor	T5	25-cycle power transformer
C32	.01 mfd. paper capacitor	R15	270,000 ohms carbon resistor		
C33A	10 mfd. 350 V. dry electrolytic	R16	4700 ohms carbon resistor		

Tuning Frequency Range

Broadcast Band	540-1700 KC
Short-wave Band No. 1	2400-7000 KC
Short-wave Band No. 2	7000-22,000 KC


Intermediate Frequency.....455 KC

GENERAL ELECTRIC


MODEL J-105

52

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

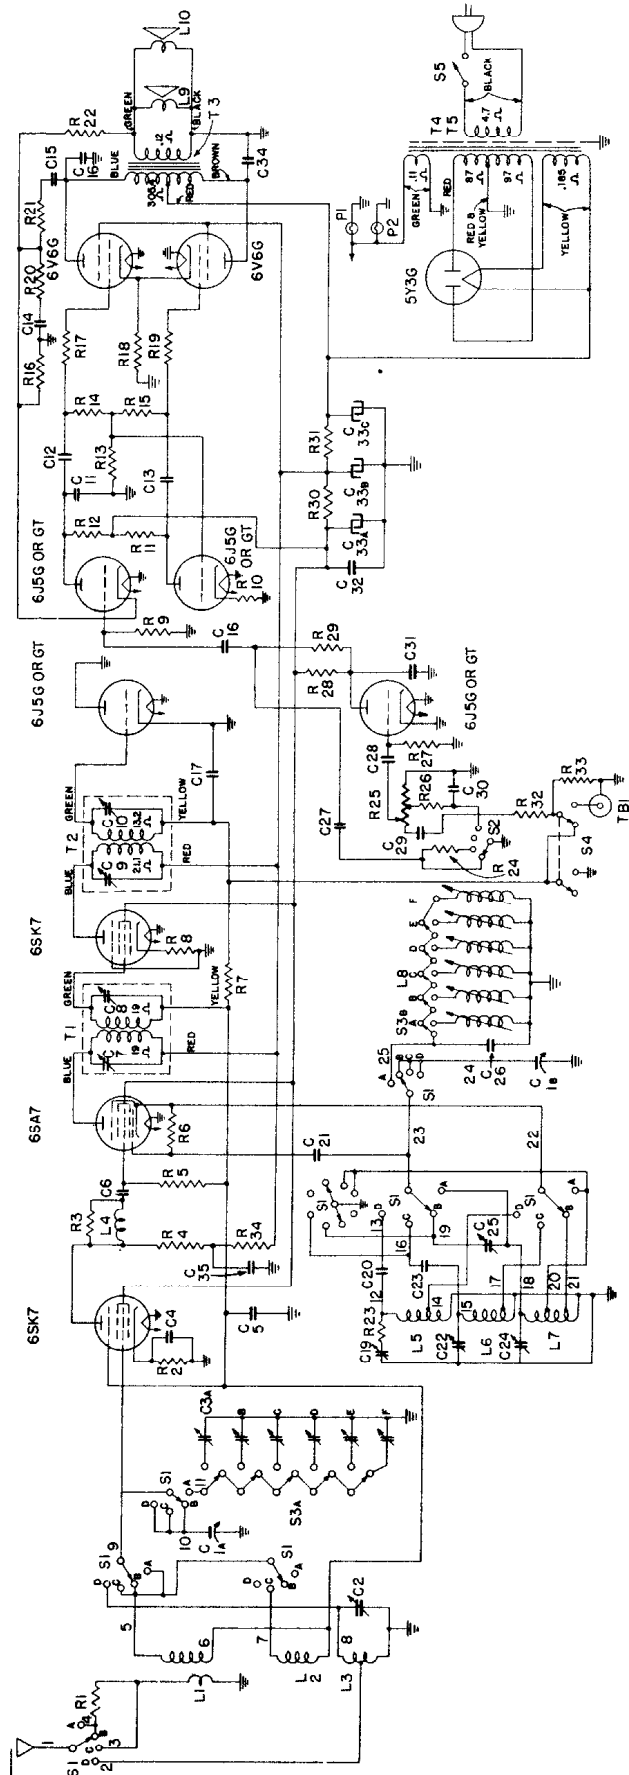

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

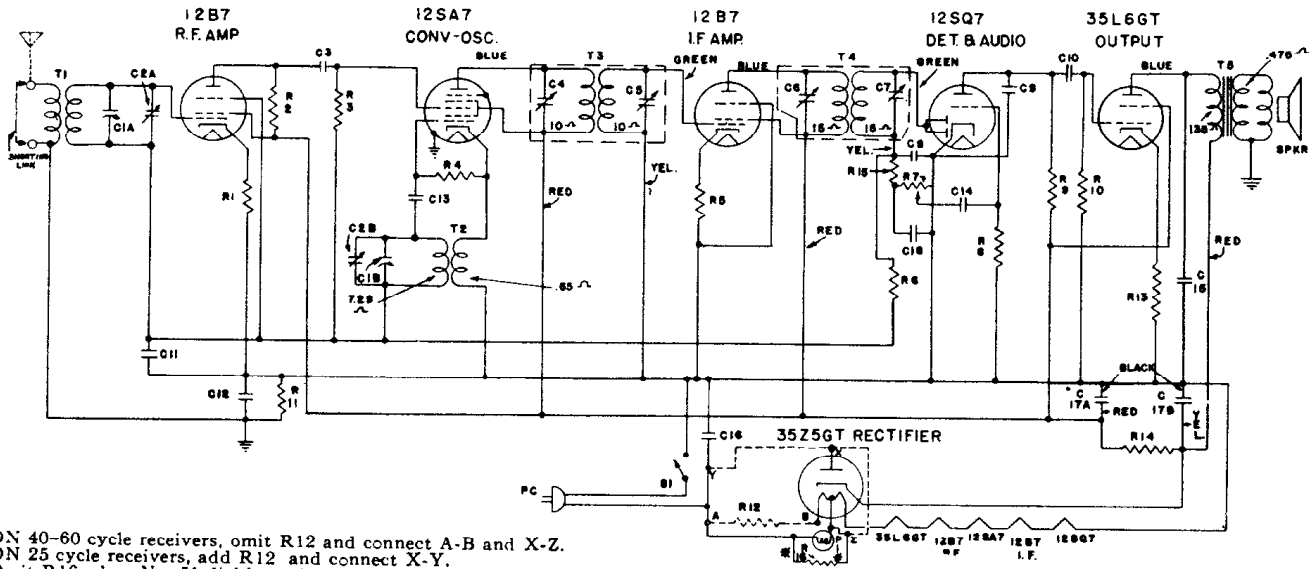

ON 40-60 cycle receivers, omit R12 and connect A-B and X-Z.
 ON 25 cycle receivers, add R12 and connect X-Y.
 Omit R16 when No. 51 dial lamp is used.

General Electric Models J-602, J-603

Tuning Frequency Range 540-1720 KC

Intermediate Frequency 455 KC

Electrical Power Output (117 line volts)
 Undistorted 1.0 watts
 Maximum 1.5 watts

Loudspeaker—PM Dynamic
 Outside Cone Diameter 5 inches
 Voice Coil Impedance (400 cycles) 3.5 ohms

- Tubes**
- RF Amplifier GE-12B7
 - Converter—Oscillator GE-12SA7
 - IF Amplifier GE-12B7
 - Detector, Audio, and AVC GE-12SQ7
 - Power Output GE-35L6GT
 - Rectifier GE-35Z5GT
 - Dial Lamp (see paragraph below) MAZDA #47 or #51

GENERAL INFORMATION

Models J602 and J603 are six-tube AC-DC superheterodyne receivers with Underwriters' Approval listing. The Model J602 is housed in a mahogany plastic cabinet, while the Model J603 has an ivory plastic cabinet.


Both the MAZDA No. 47 and No. 51 dial lamps were used during production. When lamp No. 51 is used, the resistor R16 should be omitted.

Either the metal or glass type 12B7 tube may be used in the RF or IF stage. However when the glass tube is used in the IF stage, a tube shield must be used to prevent oscillation at the low frequency end of the broadcast band.

ALIGNMENT PROCEDURE

Alignment Frequencies

RF 1500 KC
 IF 455 KC

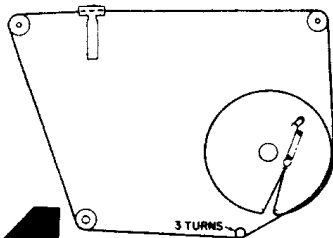

Dial Stringing Diagram

IF Alignment

Connect an output meter across the voice coil. Turn the volume control to maximum. Set test oscillator to 155 KC and keep the oscillator output as low as a readable meter reading will permit.

Apply signal to the 12SA7 converter grid through a .05 mfd. capacitor and align progressively the trimmers in the 2nd and 1st IF transformers.

RF Alignment


When making the following alignment the loop antenna must be bolted to the chassis by the screw and spacer mounting. The RF signal should be capacity coupled to the receiver loop by placing a two-foot piece of wire for an antenna on the test oscillator output post (high side). Keeping this antenna two feet or more from the receiver loop will generally insure freedom from too much coupling. Metal objects such as meters, tools, etc., should not be placed in close proximity to the loop when making this alignment.

With the gang condenser plates completely closed, the pointer should line up with the first mark on the left of the scale. Set the signal generator to 1500 KC. Align (C-1b) to the signal while the pointer is on the 1500 KC mark. Peak (C-1a) for maximum output.

Stock No.	Symbol	Description
RC-7049	C-1a, 1b, 2a, 2b	CONDENSER—Tuning condenser.....
*RC-235	C-3	CAPACITOR—100 Mmf., mica.....
*RC-242	C-8	CAPACITOR—150 Mmf., mica.....
*RC-274	C-9	CAPACITOR—330 Mmf., mica.....
*RC-039	C-10	CAPACITOR—.01 Mfd., 600 V. paper.....
*RC-072	C-11	CAPACITOR—.05 Mfd., 200 V. paper.....
*RC-104	C-12	CAPACITOR—.01 Mfd., 600 V. paper.....
*RC-216	C-13	CAPACITOR—47 Mmf., mica.....
*RC-023	C-14	CAPACITOR—.005 Mfd., 600 V. paper.....
*RC-039	C-15	CAPACITOR—.01 Mfd., 600 V. paper.....
*RC-092	C-16	CAPACITOR—.05 Mfd., 600 V. paper.....
RC-5183	C-17a, 17b	CAPACITOR—50 Mfd., 60 Mfd., electrolytic.....
*RC-235	C-18	CAPACITOR—100 Mmf., mica.....
*RQ-1227	R-1	RESISTOR—47 ohm, 1/2 W. carbon.....
*RQ-1275	R-2	RESISTOR—4700 ohm, 1/2 W. carbon.....
*RQ-1299	R-3	RESISTOR—47,000 ohm, 1/2 W. carbon.....
*RQ-1295	R-4	RESISTOR—33,000 ohm, 1/2 W. carbon.....
*RQ-1235	R-5	RESISTOR—100 ohm, 1/2 W. carbon.....
*RQ-1339	R-6	RESISTOR—2.2 megohm, 1/2 W. carbon.....
RV-120	R-7, S-1	VOLUME CONTROL—.05 megohm, combined with power switch.....
*RQ-1349	R-8	RESISTOR—5.6 megohm, 1/2 W. carbon.....
*RQ-1323	R-9, 10, 11	RESISTOR—470,000 ohm, 1/2 W. carbon.....
*RQ-1213	R-12	RESISTOR—12 ohm, 1/2 W. carbon.....
*RQ-1239	R-13	RESISTOR—150 ohm, 1/2 W. carbon.....
RQ-651	R-14	RESISTOR—1000 ohm, 2 W. carbon.....
*RQ-1299	R-15	RESISTOR—47,000 ohm, 1/2 W. carbon.....
*RQ-1255	R-16	RESISTOR—680 ohm, 1/2 W. carbon.....


*Used in previous receivers.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

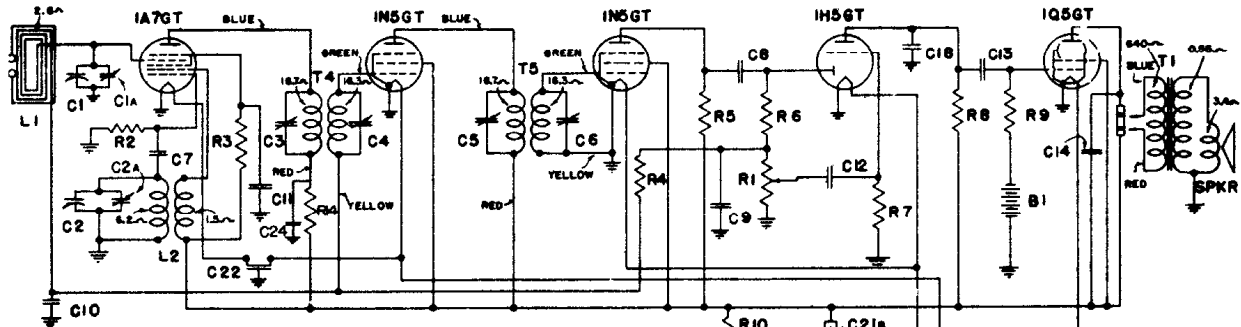

POWER SELECTOR SWITCH OPERATION	
POSITION	CONTACTS CONNECTED
"OFF"	ALL CONTACTS OPEN
"BATTERY"	#1 to #2; #4 to #5; #7 to #8
"AC"	#1 to #2 to #3; #4 to #5; #8 to #9
"CHARGE"	#2 to #3; #8 to #9

* #7 terminal is not connected to circuit

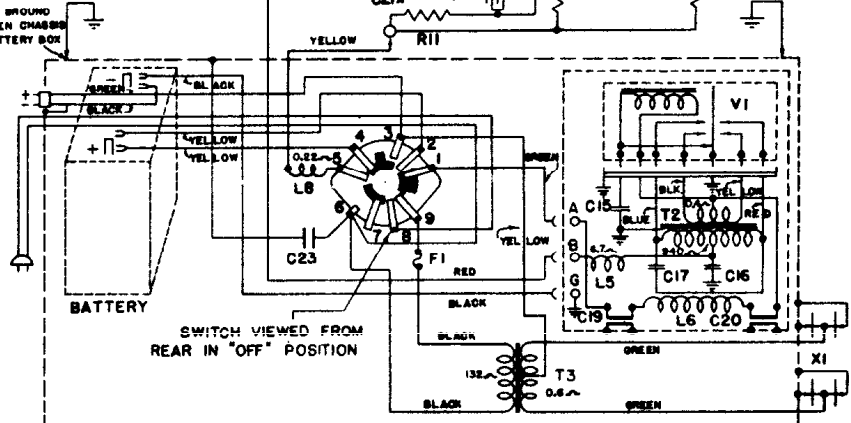


I.F. 455 KC.

Stock No.	Symbol	Description	List Price	Stock No.	Symbol	Description	List Price
RC-7054	C-1, 2	CONDENSER—Tuning condenser and trimmers	\$1.35	*RO-1331	R-8	RESISTOR—1.0 megohm, 1/4 W. carbon	\$0.70—5
*RC-216	C-7	CAPACITOR—47 mmf. mica	.25	*RO-1339	R-9	RESISTOR—2.2 megohm, 1/4 W. carbon	.70—3
*RC-235	C-8, 9	CAPACITOR—100 mmf. mica	.25	*RO-1249	R-10	RESISTOR—1,000 ohm, 1/4 W. carbon	.70—3
*RC-072	C-10	CAPACITOR—.05 Mfd., 200 V. paper	.25	RL-1208	R-11, 12, 13	RESISTOR—3.2 ohm, 1/4 W. carbon	.70—3
*RC-096	C-11	CAPACITOR—.01 Mfd., 200 V. paper	.30	RC-2056	B-1	CELL—5.0 V. bias cell assembly	.55
*RC-023	C-12, 13	CAPACITOR—.005 Mfd., 600 V. paper	.25	RL-568	L-1	BEAM-A-SCOPE—Loop antenna assembly (inside cover)	.90
*RC-039	C-14	CAPACITOR—.01 Mfd., 600 V. paper	.25	RL-2055	L-2	COIL—Oscillator coil	.30
*RC-096	C-15	CAPACITOR—.01 Mfd., 200 V. paper	.30	RL-367	L-5	CHOKe—B choke	.20
*RC-072	C-16	CAPACITOR—.05 Mfd., 200 V. paper	.25	RL-366	L-6	CHOKe—Vibrator choke	.35
*RC-027	C-17	CAPACITOR—.006 Mfd., 100 V. paper	.30	RL-567	L-7	BEAM-A-SCOPE—External loop antenna	.45
*RC-235	C-18	CAPACITOR—100 mmf. mica	.25	RL-365	L-8	CHOKe—Filament supply choke	.20
*RC-158A	C-19, 20	CAPACITOR—.05 Mfd., 120 V.	.45	RS-3115	SW1	SWITCH—Power selector switch	.70
	C-21A, 21B	CAPACITOR—15 Mfd., 150 V. dry electrolytic	.75	RT-4010	T-1	TRANSFORMER—Output transformer	.90
RC-5189	C-21C	CAPACITOR—1200 Mfd., 2 V. dry electrolytic	.75	RP-0525	T-2	VIBRATOR—Vibrator power transformer	1.80
*RC-155A	C-22	CAPACITOR—.05 Mfd., 120 V. paper	.45	RT-0524	T-3	TRANSFORMER—50-60 cycle rectifier step-down transformer	1.20
*RC-092	C-23	CAPACITOR—.05 Mfd., 600 V. paper	.30	RT-0527	T-3	TRANSFORMER—25 cycle rectifier step-down transformer	.90
RV-125	R-1	VOLUME CONTROL—.5 megohm volume control	.95	RT-393	T-4	TRANSFORMER—1st I.F. transformer	.90
*RQ-1315	R-2	RESISTOR—220,000 ohm, 1/4 W. carbon	.70—5	RT-392	T-5	TRANSFORMER—2nd I.F. transformer	.90
*RQ-1299	R-3	RESISTOR—47,000 ohm, 1/4 W. carbon	.70—3	RV-204	V-1	VIBRATOR—Power supply synchronous vibrator	3.60
*RQ-1339	R-4	RESISTOR—2.2 megohm, 1/4 W. carbon	.70—3	RR-802	X-1	RECTIFIER—Copper oxide rectifier	.70
*RQ-1293	R-5	RESISTOR—27,000 ohm, 1/4 W. carbon	.70—3	RS-1066	Spkr	SPEAKER—1" M speaker	4.60
*RQ-1299	R-6	RESISTOR—47,000 ohm, 1/4 W. carbon	.70—3				
*RQ-1347	R-7	RESISTOR—4.7 megohm, 1/4 W. carbon	.70—5				

All power necessary for the operation of the receiver is supplied by the 2-volt built-in rechargeable battery. The tube filaments are heated directly by the two volts from the battery while the necessary high voltage for the screen and plates of the tubes is furnished by a synchronous vibrator used in conjunction with a step-up power transformer and its associated filter circuit. The synchronous vibrator operates on the two volts from the battery.

Provision has been made to charge the battery directly from the house current without removing the battery from the receiver circuit. Two charging positions are provided on the four-position power selector switch. The "Charge" position of this switch allows the battery to be charged at the rate of approximately 1.35 amperes from the house current during the period that the receiver is not being operated. The "AC" position of the switch allows the receiver to be operated at the same time that the battery is being charged. Under this condition, however, it takes a considerably longer period for a partially discharged battery to be fully restored due to the fact that current is taken from the battery to operate the receiver.

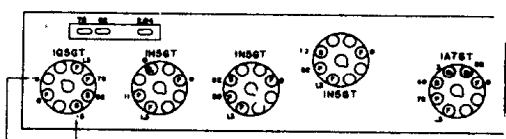


GENERAL ELECTRIC

MODEL LB-530

55

SCHEMATIC DIAGRAM - ULTRA HIGH FREQUENCY FM-AM RECEIVER - MODEL S-27

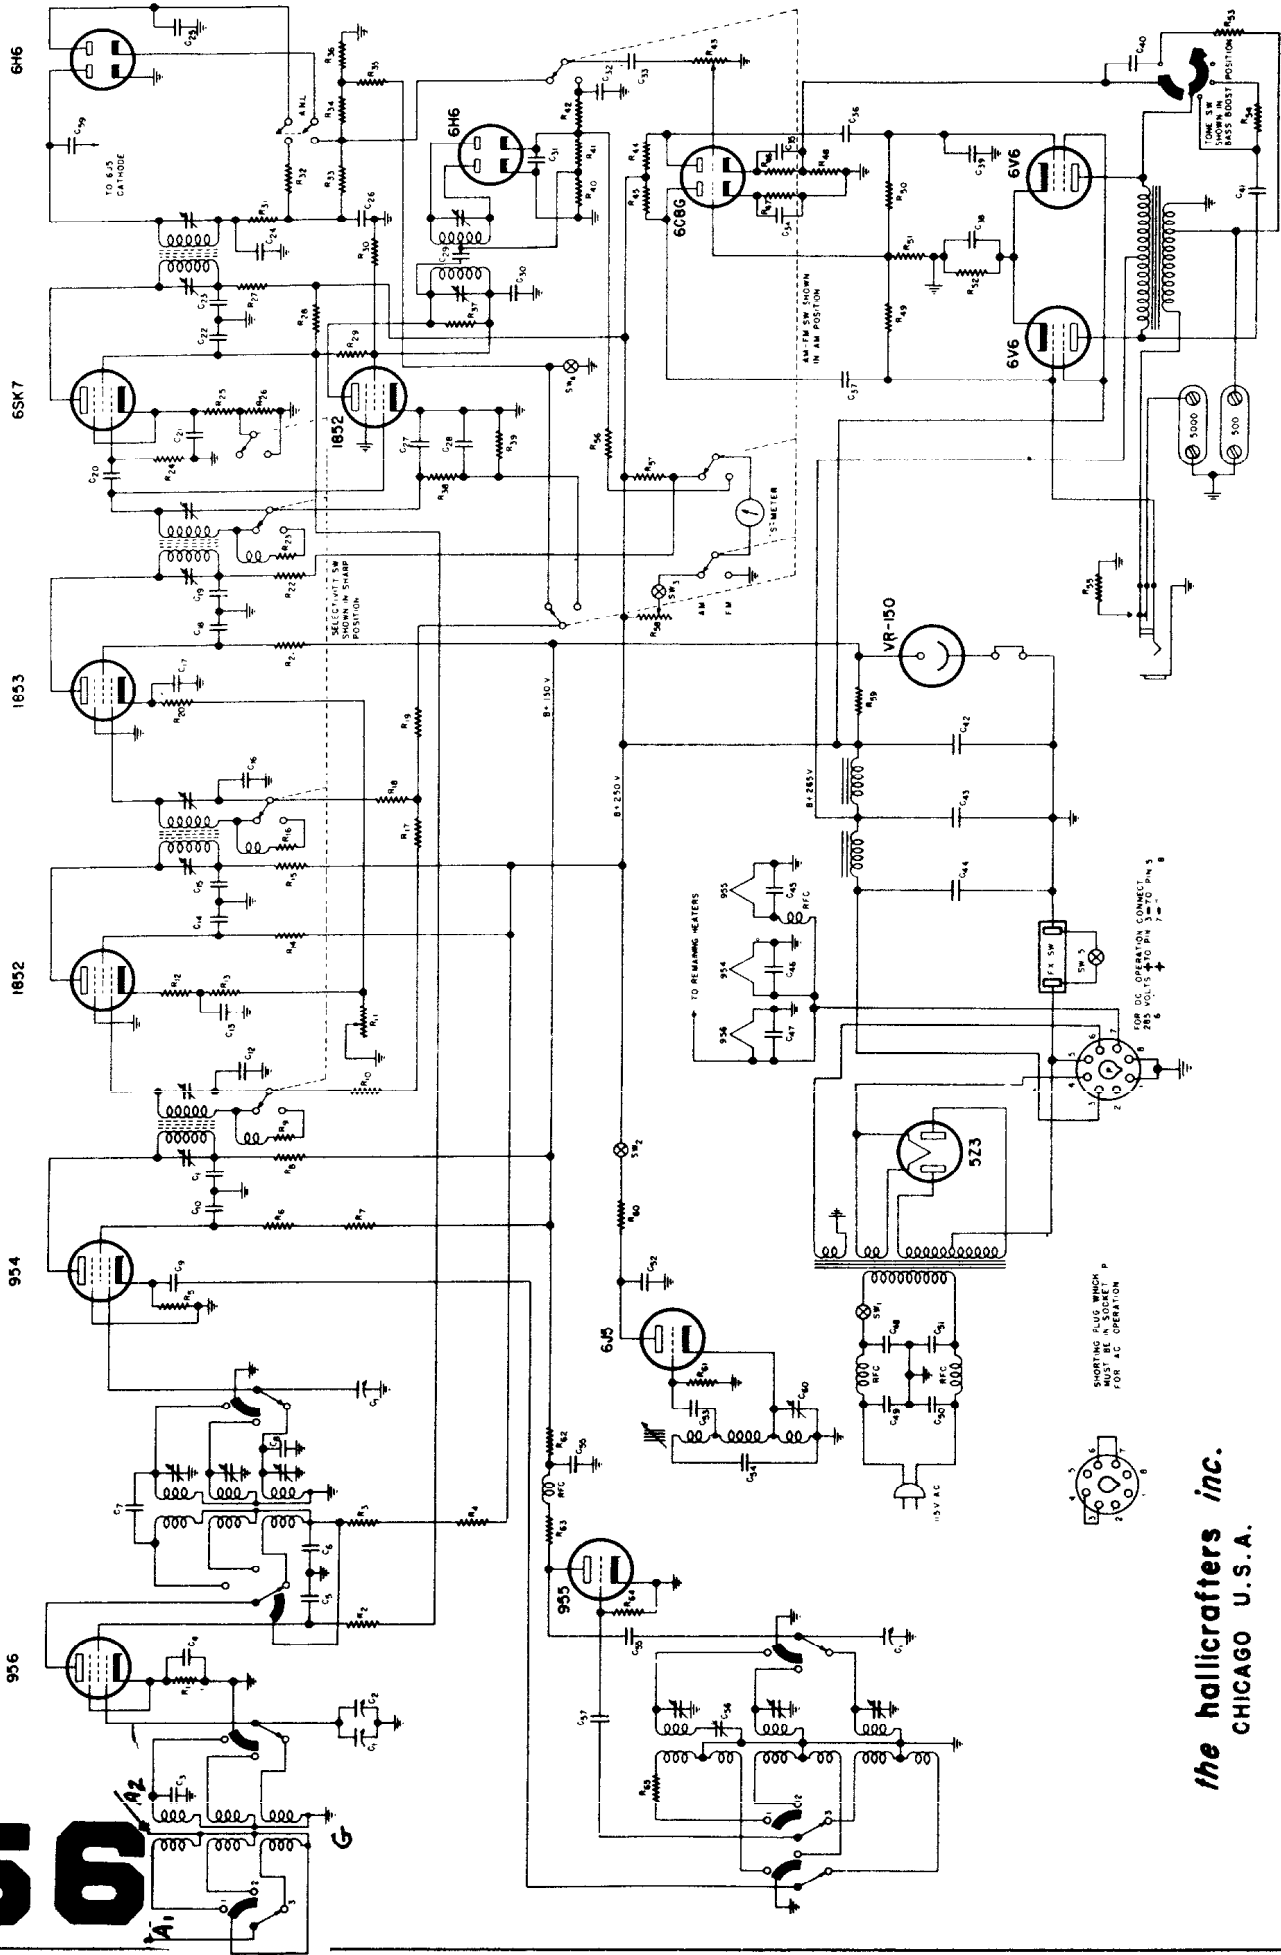

56

SHORTING PLUG WHICH MUST BE A SOCKET P FOR AC OPERATION

the hallicrafters inc.
CHICAGO U.S.A.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

The Hallicrafters

S-27

RESISTORS

NO.	OHMS	WATTAGE	NO.	OHMS	WATTAGE
1	250	1/3	34	250,000	1/3
2	1,000	1/3	35	500,000	1/3
3	1,000	1/3	36	250,000	1/3
4	10,000	1-1/2	37	15,000	1/3
5	2,000	1/3	38	50,000	1/3
6	1,000	1/3	39	250,000	1/3
7	100,000	1/3	40	100,000	1/3
8	1,000	1/3	41	100,000	1/3
9	8	1/3	42	200,000	1/3
10	100,000	1/3	43	500,000	Audio Gain Control
11	10,000	R.F. Gain Control	44	250,000	1/3
12	35	1/3	45	250,000	1/3
13	120	1/3	46	5,000	1/3
14	40,000	1/3	47	5,000	1/3
15	300	1/3	48	120	1/3
16	8	1/3	49	250,000	1/3
17	100,000	1/3	50	250,000	1/3
18	100,000	1/3	51	100,000	1/3
19	100,000	1/3	52	250	1-1/2
20	200	1/3	53	10,000	1/3
21	1,000	1/3	54	4,000	1-1/2
22	300	1/3	55	5,000	1-1/2
23	8	1/3	56	600,000	1/3
24	500,000	1/3	57	17	1/3 Wire Wound
25	300	1/3	58	1,500	S. Meter Zero Adj. Wire Wound
26	5,000	1/3	59	3,200	10
27	1,000	1/3	60	25,000	1-1/2
28	7,500	10 Wire Wound	61	50,000	1/3
29	2,000	1/3	62	300	1/3
30	20,000	1-1/2	63	5,000	1/3
31	50,000	1/3	64	20,000	1/3
32	1,000,000	1/3	65	35	1/3
33	100,000	1/3			

CONDENSERS


NO.	CAPACITY	VOLTAGE	TYPE	NO.	CAPACITY	VOLTAGE	TYPE
1	60 mmf	Per Section	Air	31	50 mmf		Mica
2	15 mmf	Ant. Trimmer	Air	32	500 mmf		Mica
3	5 mmf		3 Ceramicon	33	.05 mfd	400	Paper
4	.002 mfd		Mica	34	30 mfd	25	Electrolytic
5	300 mmf		Mica	35	30 mfd	25	Electrolytic
6	.002 mfd		Mica	36	.05 mfd	400	Paper
7	10. mmf		Ceramicon	37	.05 mfd	400	Paper
8	10. mmf		Ceramicon	38	20 mfd		Electrolytic
9	300 mmf		Mica	39	.002 mfd		Mica
10	300 mmf		Mica	40	.05 mfd	400	Paper
11	.01 mfd	600	Paper	41	.05 mfd	400	Paper
12	.001 mfd		Mica	42	10. mfd	350	Electrolytic
13	.02 mfd	400	Paper	43	30 mfd	350	Electrolytic
14	.02 mfd	400	Paper	44	10 mfd	400	Electrolytic
15	.01 mfd	600	Paper	45	300 mmf		Mica
16	.001 mfd		Mica	46	300 mmf		Mica
17	.02 mfd	400	Paper	47	300 mmf		Mica
18	.02 mfd	400	Paper	48	.01 mfd	600	Paper
19	.01 mfd	600	Paper	49	.01 mfd	600	Paper
20	50 mmf		Mica	50	.01 mfd	600	Paper
21	.02 mfd	400	Paper	51	.01 mfd	600	Paper
22	.02 mfd	400	Paper	52	.002 mfd		Mica
23	.01 mfd	600	Paper	53	100 mmf		Mica
24	50 mmf		Mica	54	200 mmf		Ceramicon
25	.05 mfd	400	Paper	55	300 mmf		Mica
26	50 mmf		Mica	56	50 mmf		Ceramicon
27	100 mmf		Mica	57	.001 mfd		Mica
28	500 mmf		Mica	58	450 mmf		Pad
29	25 mmf		Mica	59	2 mmf		Twisted Pair
30	.002 mfd		Mica	60	25 mmf		B.O. Pitch Control Air

I.F. 5.25 MC.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

57


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

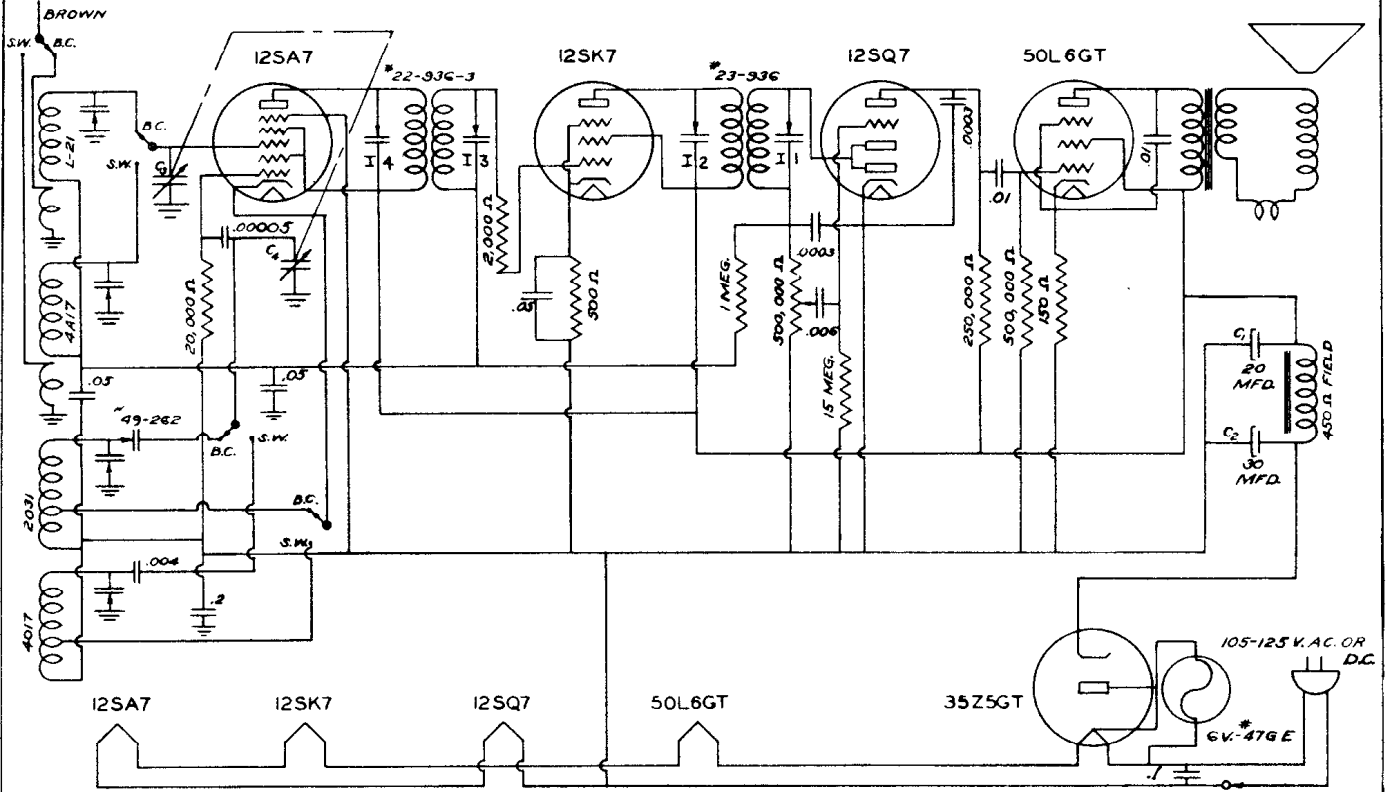

C₁, C₂ 20, 30 MFD.-150, 150 V.-NO. 47-266.
 C₃, C₄ -VARIABLE CONDENSER-NO. 63-270.
 VOLUME CONTROL AND SWITCH-NO. 69-281

HOWARD RADIO CO.
 MODEL 702

I. F.-465 K. C.

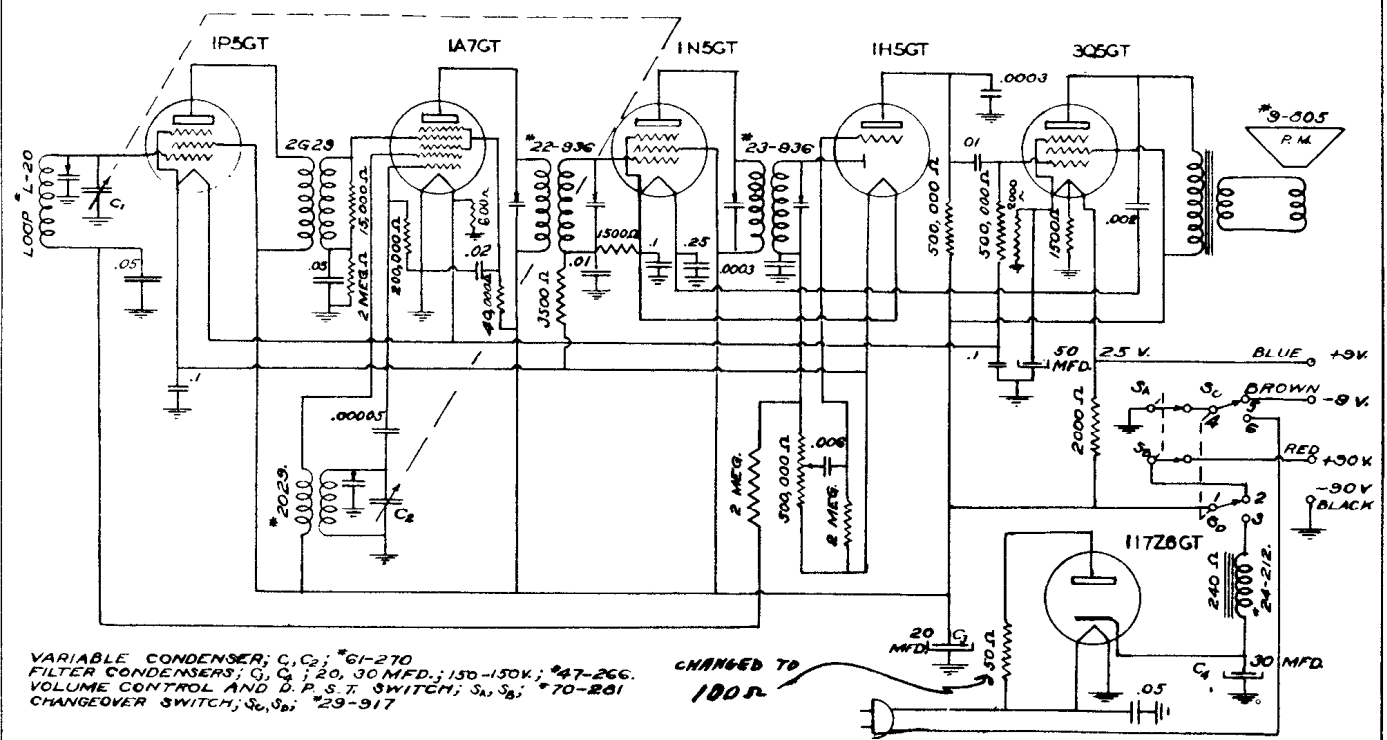

VARIABLE CONDENSER; C₁, C₂; *61-270.
 FILTER CONDENSERS; C₃, C₄; 20, 30 MFD.; 150-150V.; *47-266.
 VOLUME CONTROL AND D. P. S. T. SWITCH; S₁, S₂; *70-281
 CHANGEOVER SWITCH; S₃, S₄; *29-917

CHANGED TO
 100Ω

HOWARD RADIO CO.
 MODEL 14ACB


I. F. 465 K. C.

SWITCH SHOWN IN POSITION FOR BATTERY OPERATION. FOR A.C. OR D.C. OPERATION, SWITCH CONNECTS TERMINAL 4 TO 6 AND 1 TO 3.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

AS SWITCH IS SET TO HIGHER FREQUENCY BANDS THE SECONDARY COILS OF THE LOW FREQUENCY BANDS ARE SHORTED OUT

I. F. 465 K C.

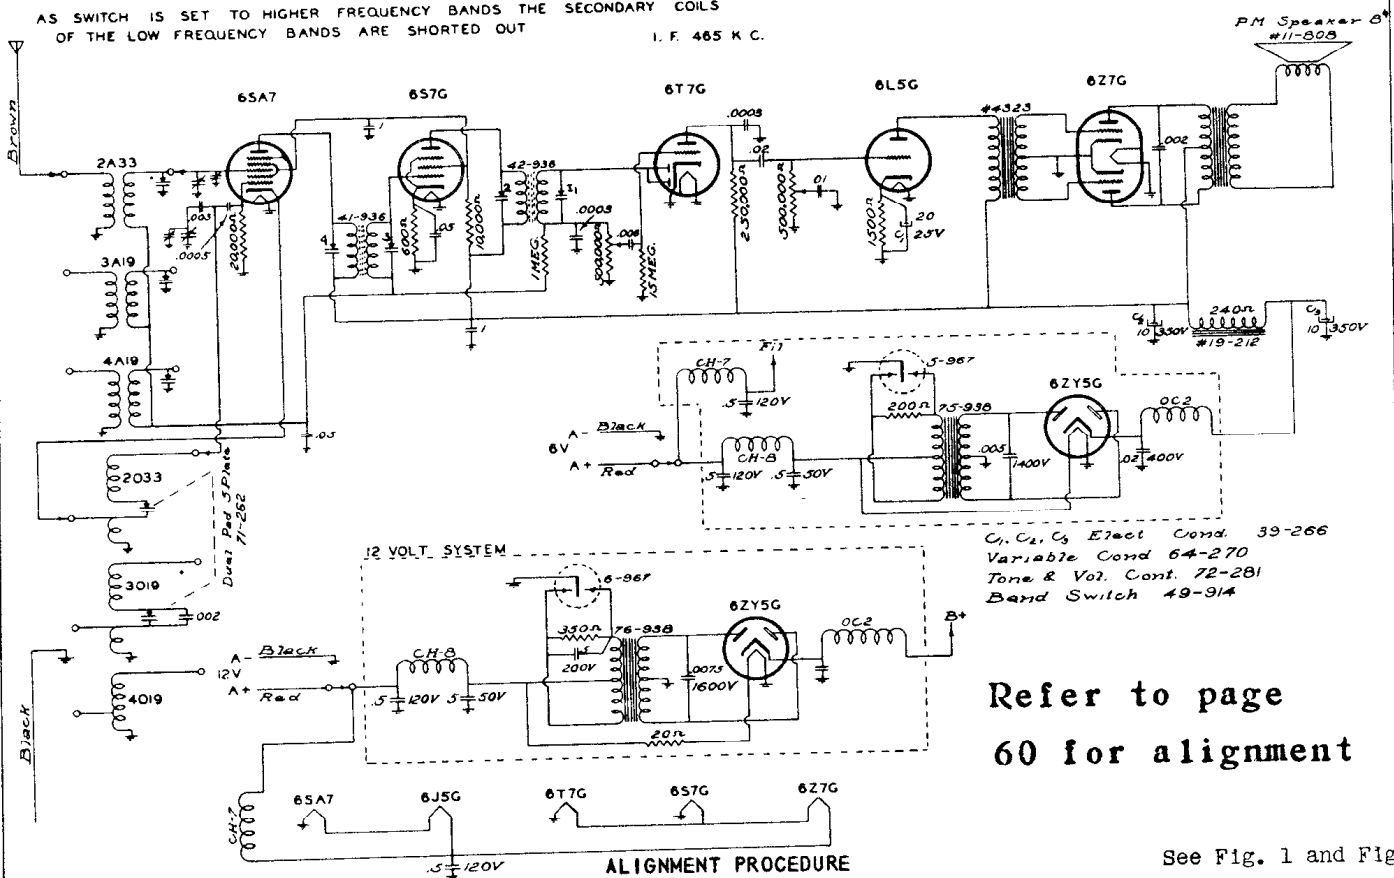

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
Broadcast	Max. Cap.	465 KC	Converter Grid	A, D	I ₁ , I ₂ , I ₃ , I ₄	IF
7-22 MC	21	21 MC	Ant. (Brown)	B	O ₅ , A ₆	Osc., Ant.
2.2-7 MC	6	6 MC	" "		O ₇ , A ₈	Osc., Ant.
2.2-7 MC	2.2	2.2 MC	" "		P ₉	Osc. Pad.
Broadcast	1400	1400 KC	" "		O ₁₀ , A ₁₁	Osc., Ant.
Broadcast	600	600 KC	" "	C	P ₁₂	Osc. Pad.

A--Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.

B--When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.

C--When adjusting this pad, move the tuning hand back and forth and adjust padder until the peak of greatest intensity is obtained.

D--See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.


SOCKET VOLTAGES MODEL 765, 6 Volt

TUBE	FUNCTION	CATH-ODE	SCR. GRID	PLATE
6SA7	Mixer	3	70	145
6S7G	IF	3	70	145
6T7G	Det.	x	x	50
6L5G	Audio	6 V. Bias	x	145
6Z7G	PP Output	x	x	140


Howard Radio

MODEL 765		
DWG. NO. C83-715	9-5-40	
DWN. BY. L. A. G.	CHKD. BY. <i>[Signature]</i>	APPVD. BY. JFR

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

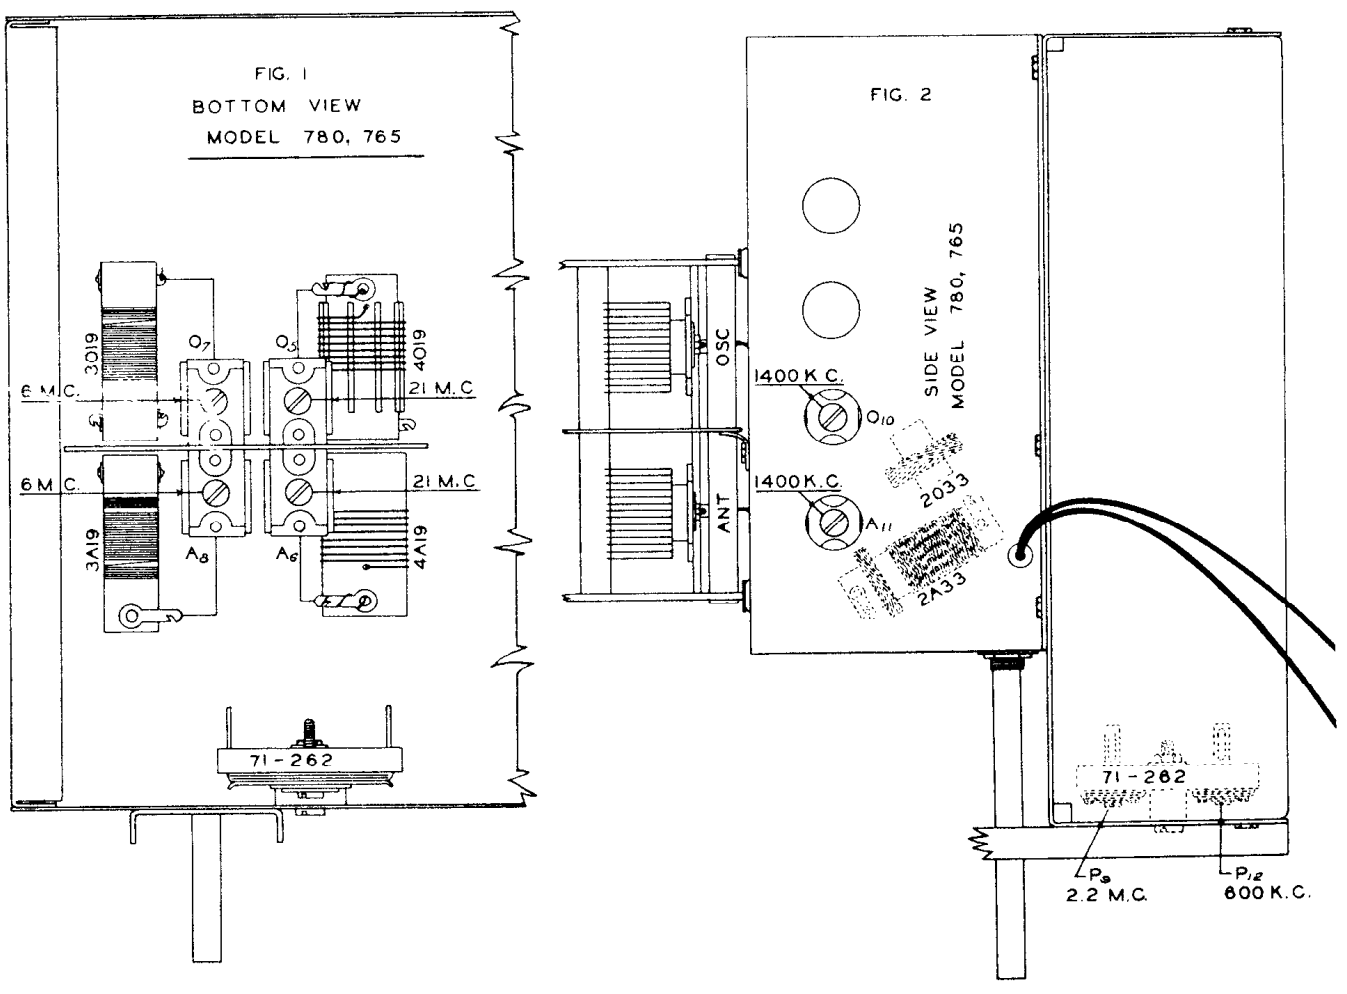

The below layout shows the order of the drive cord for the tuning and Band Spread mechanisms should any servicing or replacement be necessary.

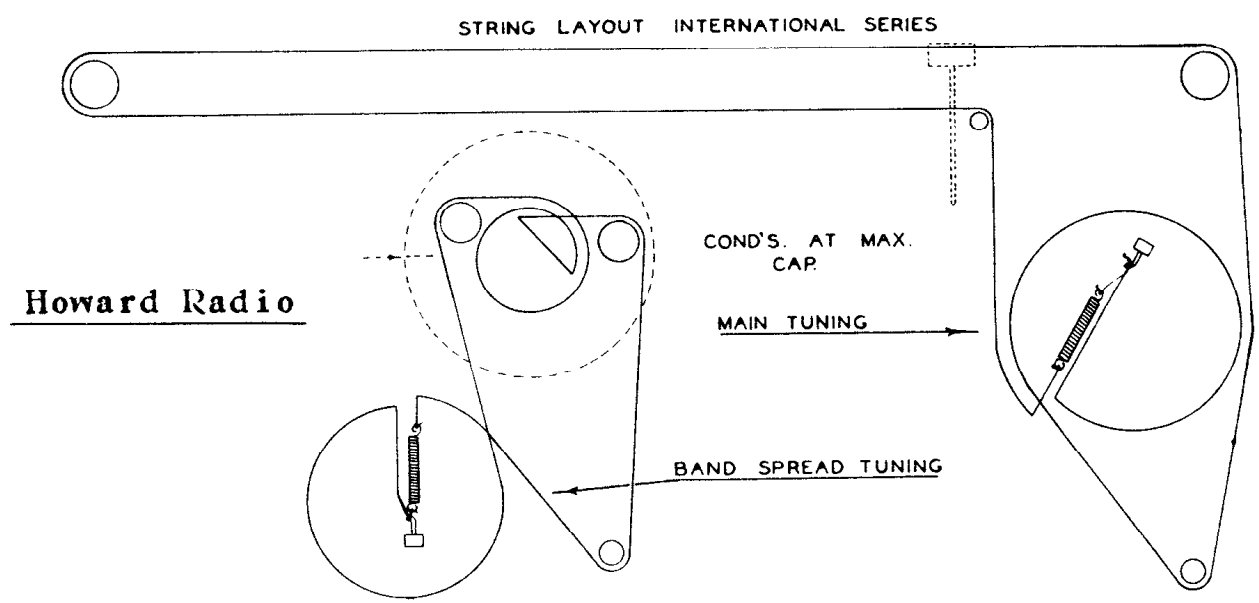

60


Trimmer Location for Models 765 and 780

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

AS SWITCH IS SET TO HIGHER FREQUENCY BANDS THE SECONDARY COILS OF THE LOW FREQUENCY BANDS ARE SHORTED OUT

IF 465 KC

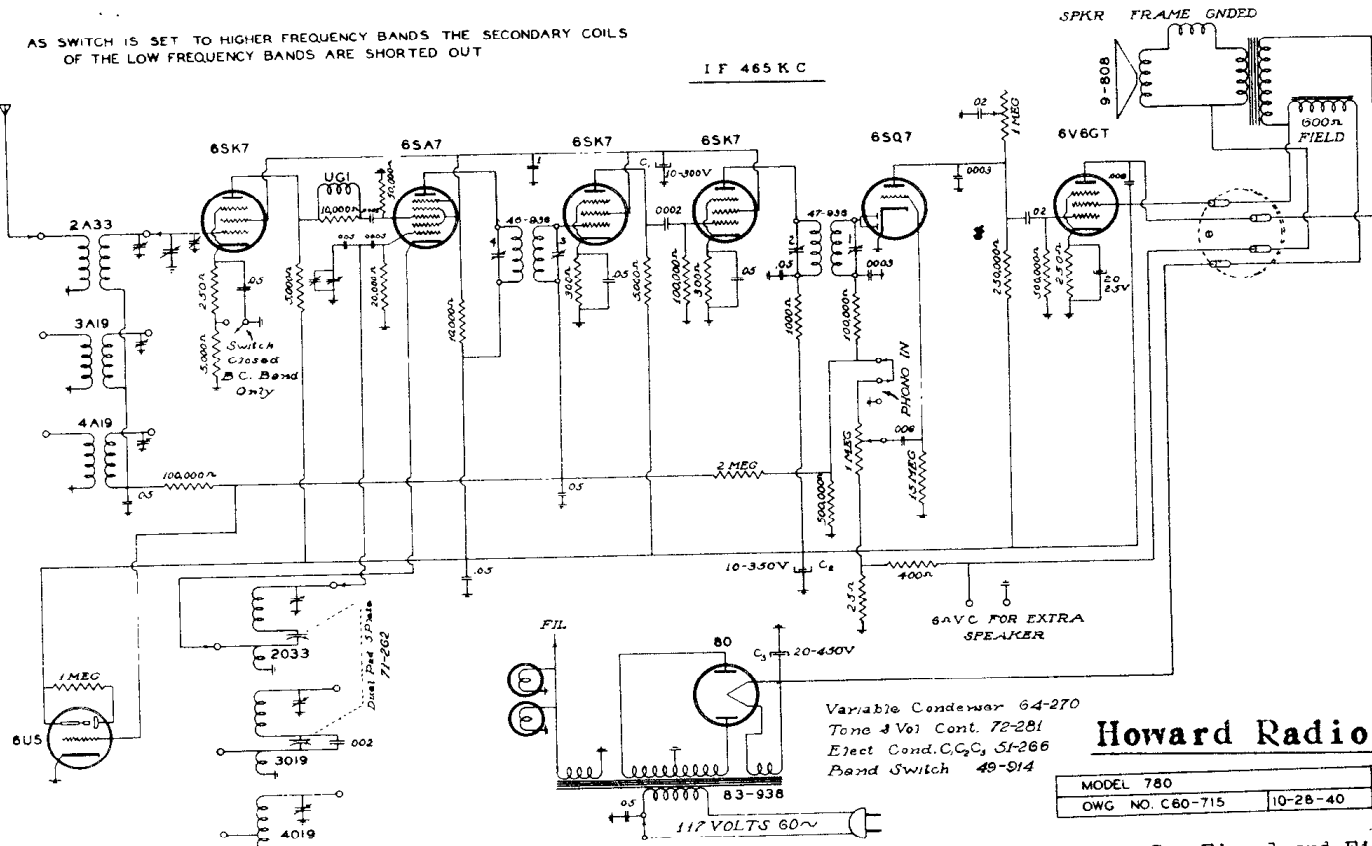

Howard Radio

MODEL 780
OWG NO. C60-715
10-28-40

ALIGNMENT PROCEDURE

See Fig. 1 and Fig. 2.

Wave-Band Switch Position	Position of Dial Pointer	Generator Frequency	Generator Connection	See Note	Trimmers Adjusted (In order shown)	Trimmer Function
Broadcast	Max. Cap.	465 KC	Converter Grid	A, D	I ₁ , I ₂ , I ₃ , I ₄	IF
7-22 MC	21	21 MC	Ant. (Brown)	B	O ₅ , A ₆	Osc., Ant.
2.2-7 MC	6	6 MC	" "		O ₇ , A ₈	Osc., Ant.
2.2-7 MC	2.2	2.2 MC	" "		P ₉	Osc. Pad.
Broadcast	1400	1400 KC	" "		O ₁₀ , A ₁₁	Osc., Ant.
Broadcast	600	600 KC	" "	C	P ₁₂	Osc. Pad.


A--Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.
B--When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 21 MC, then a weaker image will be heard at 21,000 KC less 930 KC, or about 20,070 KC on the dial.
C--When adjusting this pad, move the tuning hand back and forth and adjust padder until the peak of greatest intensity is obtained.
D--See that the tuning hand is set exactly on the last line above 540 when the condenser is at maximum capacity.

TUBE	FUNCTION	CATH-ODE	SCR. GRID	PLATE	OSC. PLATE	TUBE	FUNCTION	CATH-ODE	SCR. GRID	PLATE	OSC. PLATE
6SK7	R.F. BC SW	8.5 2.5	110 98	260 210		6SQ7	Diode-AVC			50	
6SA7	Mixer		110	265	110	6V6GT	Output	12.5	265	250	
6SK7	I.F. Amp.	2	110	230		80	Rect.				
6SK7	I.F. Amp.	4	110	250		6U5	Tuning Eye	265			

Voltage taken from ground with line voltage at - 120 V.
 High voltage reading off rectifier - 325 V.
 Drop across speaker field - 58 V.
 Voltage taken with 1,000 Ohm per volt meter.
 Band Switch in BC position except R.F. Stage measurements.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

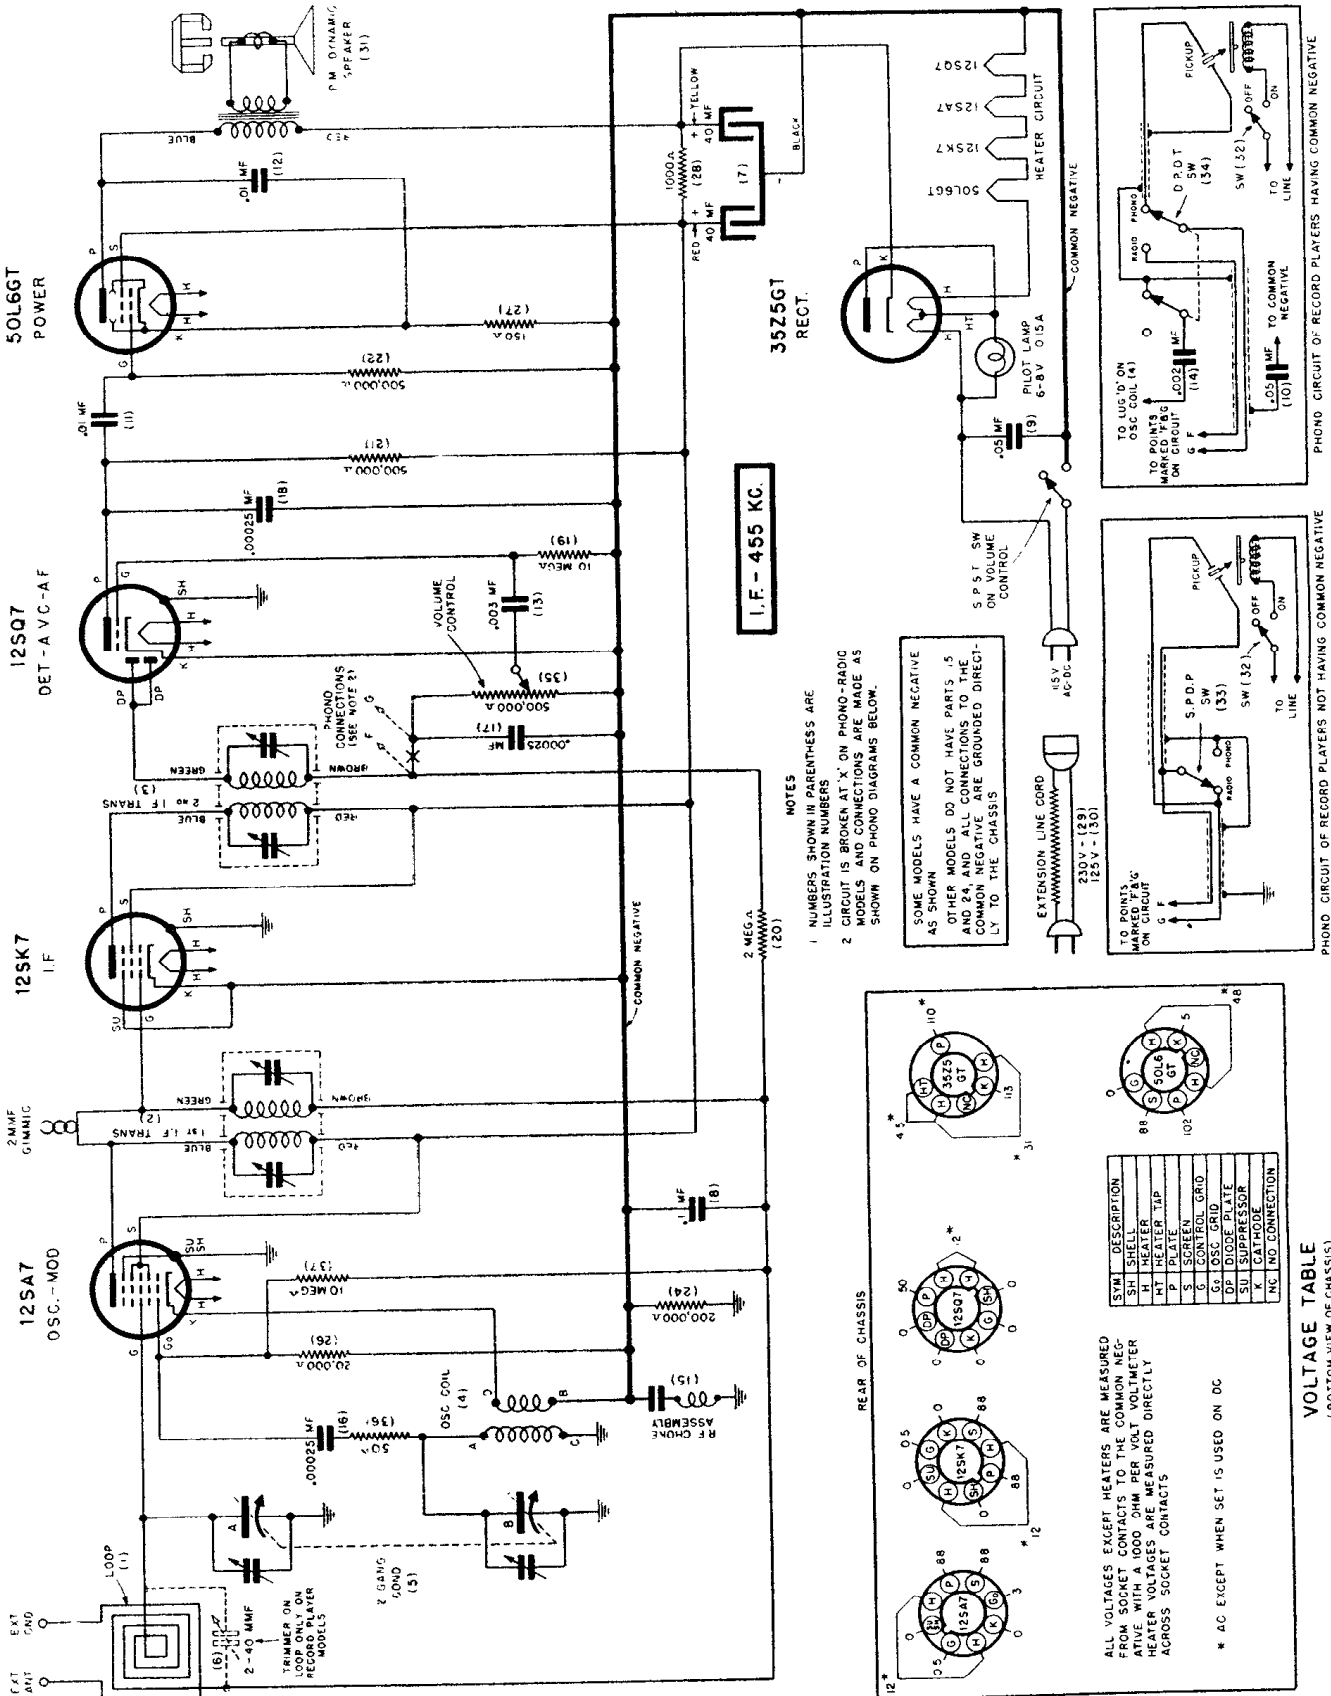


NOTES

- NUMBERS SHOWN IN PARENTHESES ARE ILLUSTRATION NUMBERS
- CIRCUIT IS BROKEN AT X ON PHONO-RADIO MODELS AND CONNECTIONS ARE MADE AS SHOWN ON PHONO DIAGRAMS BELOW.


SOME MODELS HAVE A COMMON NEGATIVE AS SHOWN
 OTHER MODELS DO NOT HAVE PARTS AS SHOWN AND ALL CONNECTIONS TO THE COMMON NEGATIVE ARE GROUNDED DIRECTLY TO THE CHASSIS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

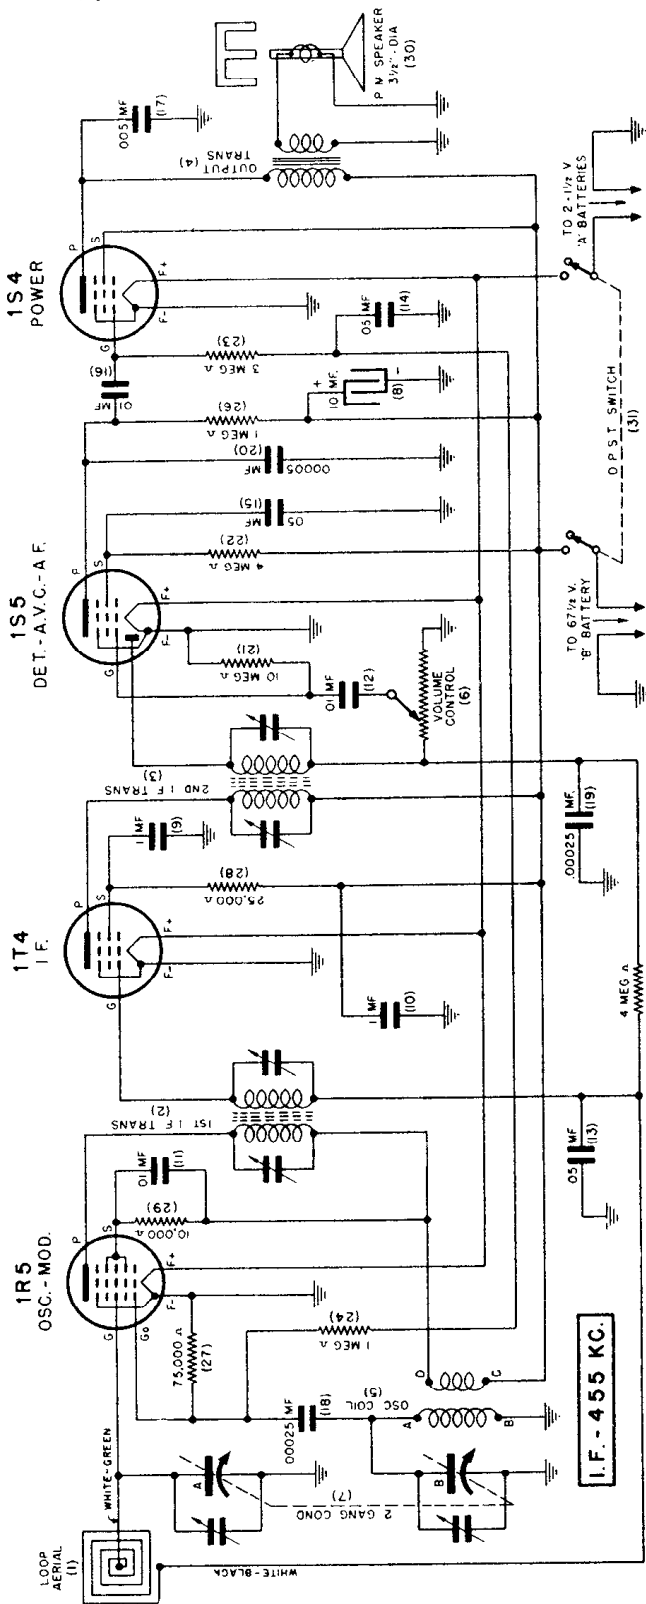


NOTE: NUMBERS SHOWN IN PARENTHESES ARE ILLUSTRATION NUMBERS


VOLTAGE TABLE

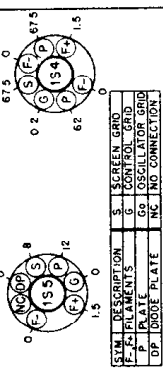

TOP VIEW OF CHASSIS

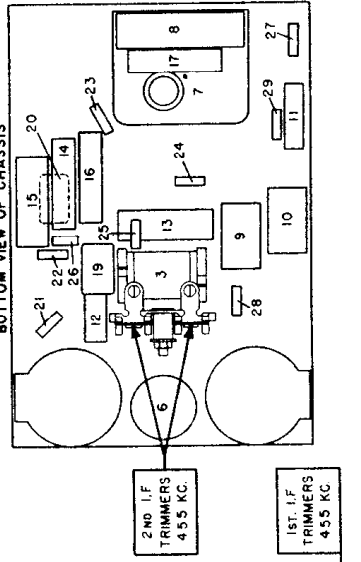

BOTTOM VIEW OF CHASSIS

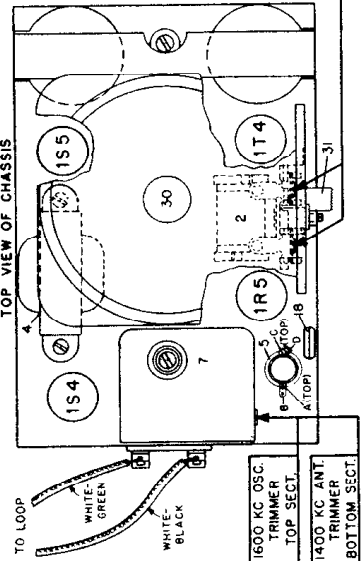

TEST OSCILLATOR	
Set receiver dial to:	Refer to parts layout diagram for location of trimmers mentioned below:
Adjust test oscillator frequency to:	Attach output of test oscillator to:
Any point where no interfering signal is received	Use dummy antenna in series with output of test oscillator consisting of:
Exactly 1600 K.C.	0.2 Mid. condenser
Exactly 1400 K.C.	Use Small Loop to couple test oscillator to receiver loop.
Approx. 1400 K.C.	Use Small Loop to couple test oscillator to receiver loop.
Exactly 1600 K.C.	None
Approx. 1400 K.C.	None
	Adjust 1600 K. C. oscillator trimmer for maximum output.
	Adjust each of the second I.F. transformer trimmers for maximum output, then adjust each of the first I.F. transformer trimmers for maximum output.
	Adjust 1600 K. C. oscillator trimmer for maximum output.
	While rocking gang condenser adjust 1400 K. C. loop trimmer for maximum output.

BATTERY EQUIPMENT

The receiver is designed to use:

Two—1½ volt "A" batteries, such as Eveready No. 950 or equivalent flashlight size cylindrical battery.

One—67½ volt "B" battery, such as Eveready No. 467 or equivalent.

IMPORTANT: THE BATTERIES USED MUST BE OF THE CORRECT VOLTAGE AND SIZE.

Lafayette Radio


Model E-191.

63

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

SCHEMATIC DIAGRAM MODEL TR321-A TR331-A

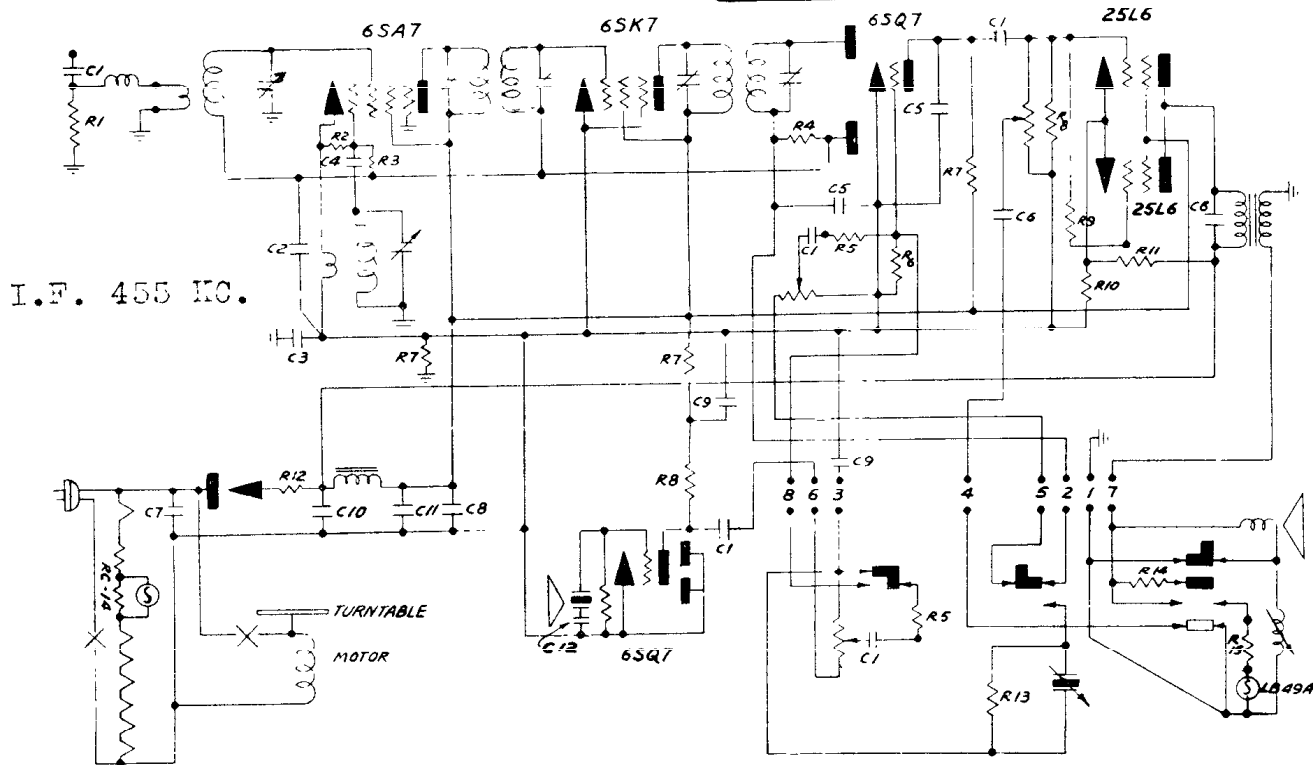

Schematic Location	Part No.	Description
R1	R-15570	2K ohm 1/4 Watt Resistor 20%
R2	R-15510	20K ohm 1/4 Watt Resistor 20%
R3	R-79	15 Megohm 1/4 Watt Resistor 20%
R4	R-15500	2 Megohm 1/4 Watt Resistor 20%
R5	R-15504	150K ohm 1/4 Watt Resistor 20%
R6	R-149	4.7 Megohm 1/4 Watt Resistor 20%
R7	R-153	270K ohm 1/4 Watt Resistor 20%
R8	R-154	470K ohm 1/4 Watt Resistor 20%

Schematic Location	Part No.	Description
R9	R-15601	100 ohm 1/4 Watt Resistor 20%
R10	R-155	68 ohm 1/4 Watt Resistor 20%
R11	R-147	4K ohm 3 Watt Resistor 20%
R12	R-85	35 ohm 1 Watt Resistor 20%
R13	R-100	300K ohm 1/4 Watt Resistor 20%
R14	R-152	4 ohm 1 Watt Resistor 20%
R15	R-151	7.5 ohm 1 Watt Resistor 20%
RC-14	RC-14	Candohm

C1	C-15754	.01 mfd. 400 Volt Condenser
C2	C-15752	.05 mid. 200 Volt Condenser
C3	C-15770	.2 mfd. 200 Volt Condenser
C4	CM-29	50 mmfd. Mica Condenser
C5	CM-30	250 mmfd. Mica Condenser
C6	C-25	.006 mfd. 400 Volt Condenser
C7	C-15756	.05 mfd. 400 Volt Condenser
C8	C-15751	.25 mfd. 200 Volt Condenser
C9, C12	C-15761	.10 mfd. 200 Volt Condenser
C10	CE-66-2	100 mfd. Electrolytic
C11	CE-66-2	40 mfd. Electrolytic


Model TR321-A operates on 105-125 volts 60 cycles AC only.
 Model TR331-A operates on 105-125 volts 50 cycles AC only.

Majestic Radio & Television Corporation

2600 West 50th Street


Chicago, Illinois, U. S. A.

TUBE LAYOUT MODEL 403

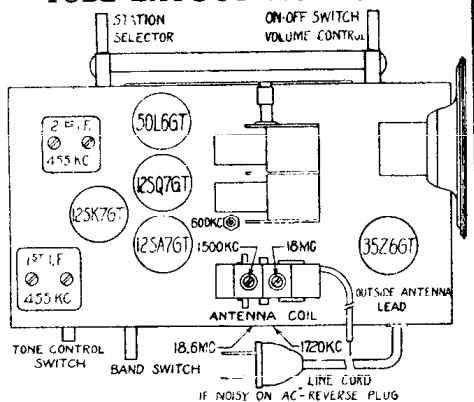

I.F. 455 KC.

SCHEMATIC DIAGRAM MODEL 403

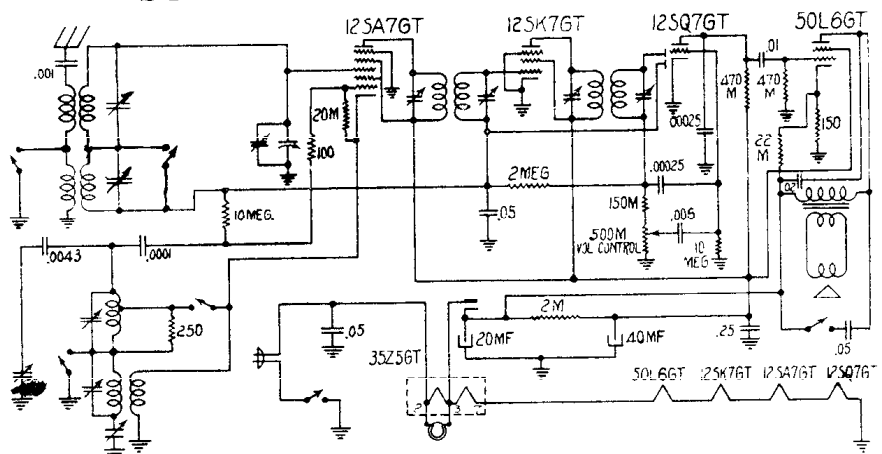


64


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

SCHEMATIC DIAGRAM MODEL TP221-A TP231-A

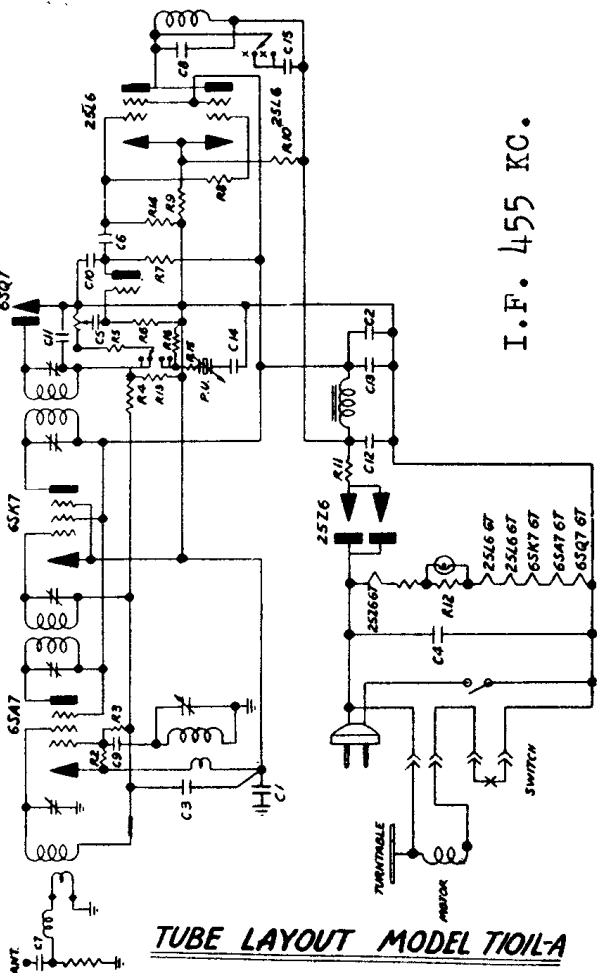

TUBE LAYOUT MODEL T101-A

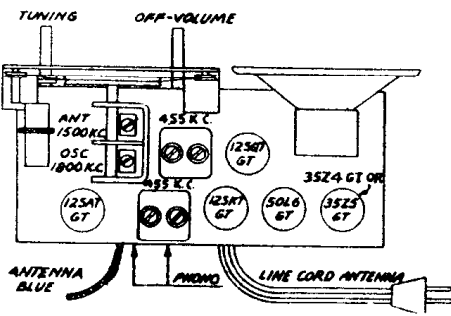

Schematic Location	Part No.	Description
R1	R-15510	20K ohm 1/4 Watt Resistor 20%
R2,R5	R-63	10 Megohm 1/4 Watt Resistor 20%
R3	R-15500	2 Megohm 1/4 Watt Resistor 20%
R4	R-15504	150K ohm 1/4 Watt Resistor 20%
R6,R7	R-15520	500K ohm 1/4 Watt Resistor 20%
R8	R-59	110 ohm 1/4 Watt Resistor 10%
R9	R-138	1000 ohm 1/4 Watt Resistor 20%
R10	R-150	15 ohm 1/4 Watt Resistor 20%
R11	R-85	35 ohm 1/4 Watt Resistor 20%
R12	R-145	9K ohm 1/4 Watt Resistor 10%
R13	R-15512	250K ohm 1/4 Watt Resistor 20%
C1	C-15754	.01 mid. 400 Volt Condenser
C2	CM-29	50 mmfd. Mica Condenser
C3	C-15752	.05 mid. 200 Volt Condenser
C4	C-15770	.2 mid. 200 Volt Condenser
C5	C-15736	.05 mid. 400 Volt Condenser
C6	CM-30	250 mmfd. Mica Condenser
C7	CM-37	500 mmfd. Mica Condenser
C8	C-15774	.002 mid. 400 Volt Condenser
C9	C-47	.004 mid. 400 Volt Condenser
C10	C-25	.006 mid. 400 Volt Condenser
C11,C12	Y-CE-66-1	40 mid. & 75 mid. Electr. Cond.



Majestic

I.F. 455 KC.


Schematic Location	Part No.	Description
R1	R-15570	2000 ohm 1/4 Watt Resistor
R2	R-15510	20K ohm 1/4 Watt Resistor
R3	R-79	15 Megohm 1/4 Watt Resistor
R4,R13	R-15500	2 Megohm 1/4 Watt Resistor
R5	R-15515	100K ohm 1/4 Watt Resistor
R7,R14	R-15512	250K ohm 1/4 Watt Resistor
R6	R-149	4.7 Megohm 1/4 Watt Resistor
R8	R-113	100 ohm 1/4 Watt Resistor
R9	R-144	70 ohm 1/4 Watt Resistor
R10	R-147	4K ohm 1/4 Watt Resistor
R11	R-85	35 ohm 1/4 Watt Resistor
R12	PC-14	Condohm
R15	R-146	300K ohm 1/4 Watt Resistor
R16	R-54	50K ohm 1/4 Watt Resistor

Schematic Location	Part No.	Description
C1	C-15770	.20 mid. 200 Volt Condenser
C2	C-15751	.25 mid. 200 Volt Condenser
C3	C-15752	.05 mid. 200 Volt Condenser
C4	C-15766	.05 mid. 400 Volt Condenser
C5	C-15754	.01 mid. 400 Volt Condenser
C6,C7	C-25	.006 mid. 400 Volt Condenser
C8	CM-29	50 mmfd. Mica Condenser
C9	CM-30	250 mmfd. Mica Condenser
C10,C11	CE-66	75 mid. 150 Volt Electrolytic
C12	CE-66	40 mid. 150 Volt Electrolytic
C13	CE-66	40 mid. 150 Volt Electrolytic

SCHEMATIC DIAGRAM MODEL T101-A

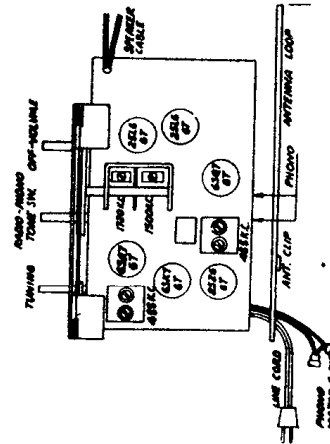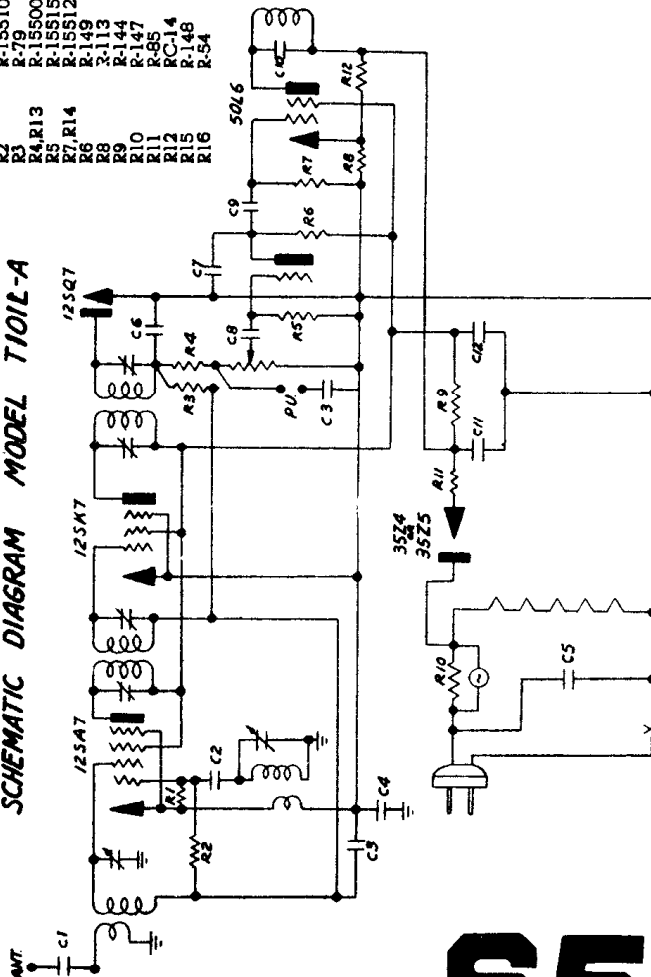

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

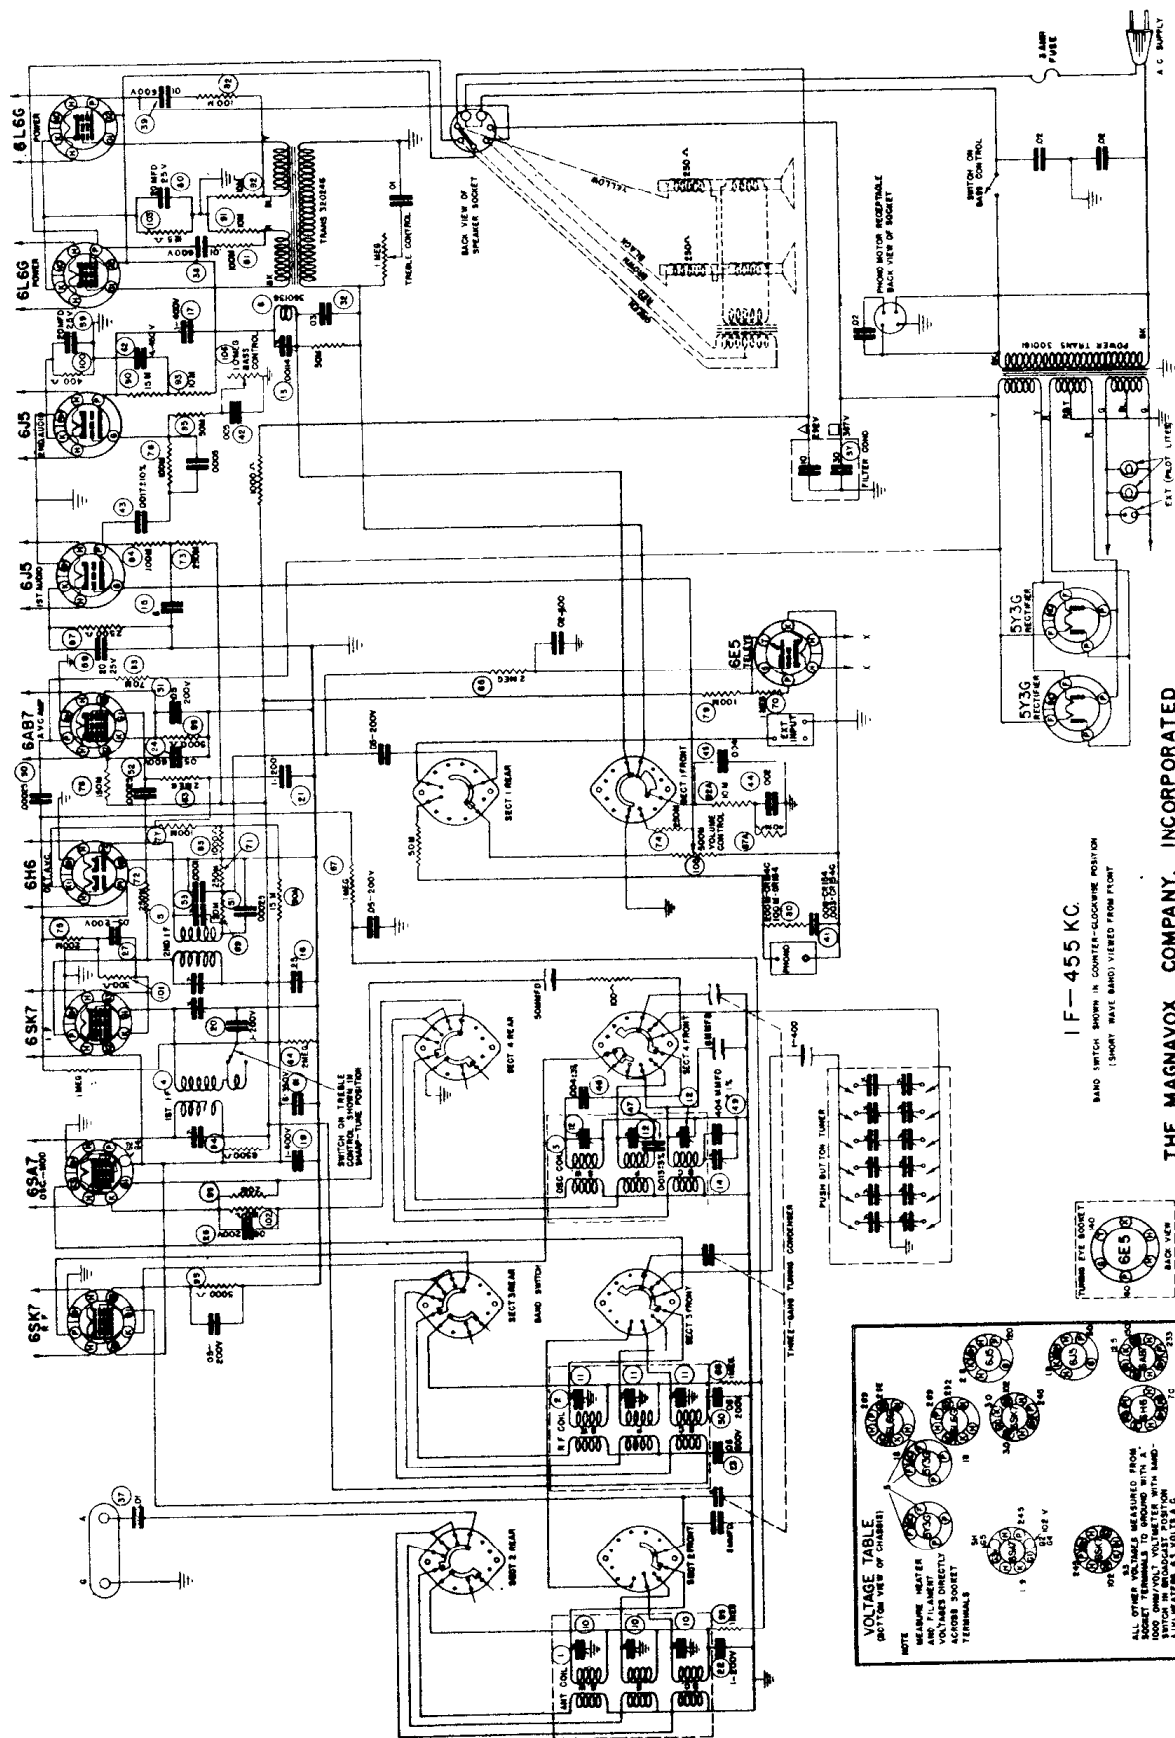

CR 154.154C- 595200

THE MAGNAVOX COMPANY, INCORPORATED
FORT WAYNE, INDIANA


I F - 455 KC.
BAND SWITCH SHOWN IN CENTER-CLOCKWISE POSITION
(SHORT WAVE BAND VIEWED FROM FRONT)

VOLTAGE TABLE
(BOTTOM VIEW OF CHARTS)

NOTE: MEASURE VOLTAGE BETWEEN WATER VOLTAGE TERMINALS TO GROUND WITH VOLTAGE METER IN MIDDLE POSITION. A 100 OHM RESISTOR IS USED IN SERIES WITH THE METER IN ALL OTHER POSITIONS.

MEASURE VOLTAGES ON ANY SCALE. ALL VOLTAGES IN VOLTS A.C. UNLESS OTHERWISE NOTED.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

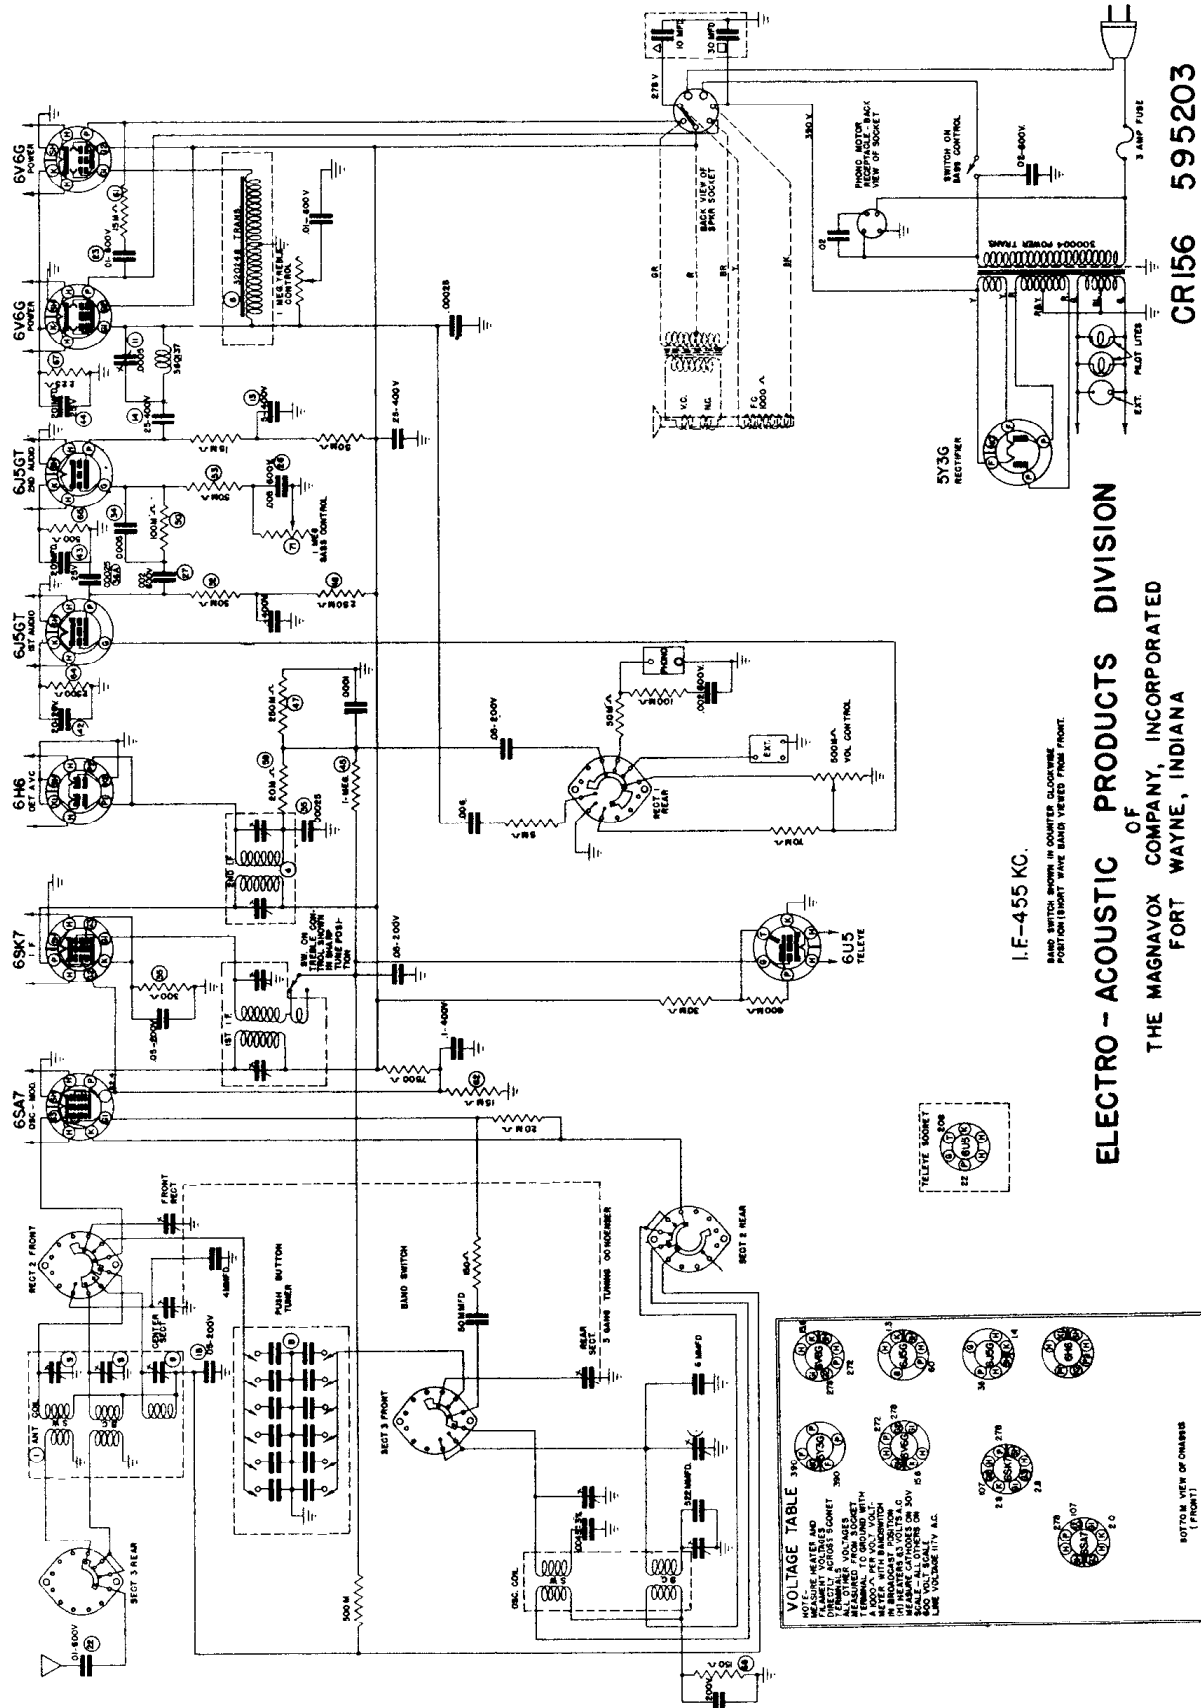

CR156 595203

ELECTRO-ACOUSTIC PRODUCTS DIVISION
 OF
 THE MAGNAVOX COMPANY, INCORPORATED
 FORT WAYNE, INDIANA

I.F.-455 KC.

BAND SWITCH SHOWN IN CENTER POSITION.
 POSITION (FRONT) WIRE DIAG. (REAR) FRONT.


VOLTAGE TABLE

MEASURE VOLTAGE AND
 DIRECTLY ACROSS SOCKET
 ALL OTHER VOLTAGES
 TERMINAL TO GROUND WITH
 METER WITH BANDSWITCH
 IN BROUHAUS POSITION
 MEASURE CAPACITORS ON
 500 VOLT SCALE
 500 VOLT RESISTIVITY M.C.

278	277	276	275	274	273
272	271	270	269	268	267
266	265	264	263	262	261
260	259	258	257	256	255
254	253	252	251	250	249
248	247	246	245	244	243
242	241	240	239	238	237
236	235	234	233	232	231
230	229	228	227	226	225
224	223	222	221	220	219
218	217	216	215	214	213
212	211	210	209	208	207
206	205	204	203	202	201
200	199	198	197	196	195
194	193	192	191	190	189
188	187	186	185	184	183
182	181	180	179	178	177
176	175	174	173	172	171
170	169	168	167	166	165
164	163	162	161	160	159
158	157	156	155	154	153
152	151	150	149	148	147
146	145	144	143	142	141
140	139	138	137	136	135
134	133	132	131	130	129
128	127	126	125	124	123
122	121	120	119	118	117
116	115	114	113	112	111
110	109	108	107	106	105
104	103	102	101	100	99
98	97	96	95	94	93
92	91	90	89	88	87
86	85	84	83	82	81
80	79	78	77	76	75
74	73	72	71	70	69
68	67	66	65	64	63
62	61	60	59	58	57
56	55	54	53	52	51
50	49	48	47	46	45
44	43	42	41	40	39
38	37	36	35	34	33
32	31	30	29	28	27
26	25	24	23	22	21
20	19	18	17	16	15
14	13	12	11	10	9
8	7	6	5	4	3
2	1	0			

PHOTO R. VIEW OF CHASSIS
 (FRONT)

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

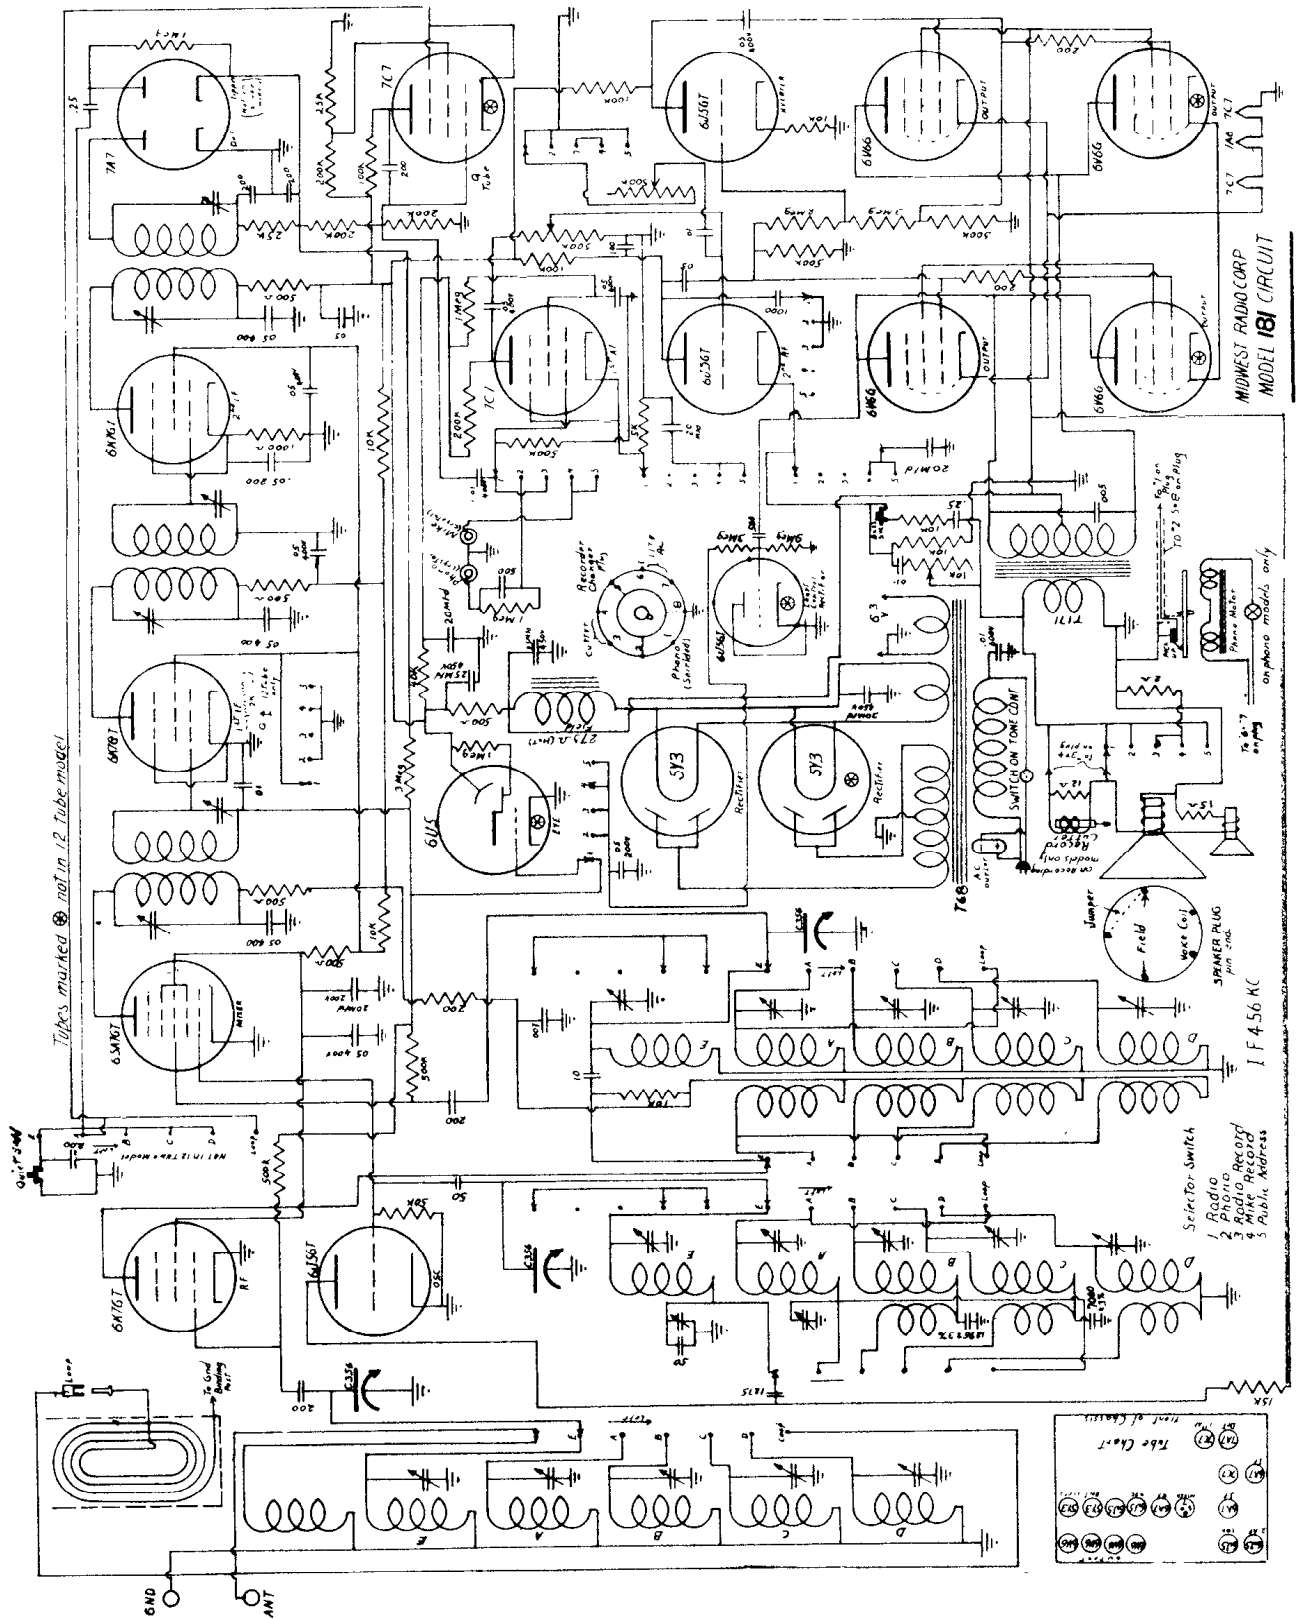

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS


Model No. 04BR-513A and 04BR-514A

MONTGOMERY WARD


CHICAGO, U. S. A.

BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED WITH 1000 OHM PER VOLT VOLTMETER BETWEEN SOCKET TERMINALS A, B, C WITH A L.I.F. VOLTAGE OF 117 V. VOLUME CONTROL AT MINIMUM.
 [A] CANNOT BE MEASURED WITH VOLTMETER.
 [B] 12 VOLTS A.C. MEASURED ACROSS PINS 2 & 7
 [C] 12 VOLTS A.C. MEASURED ACROSS PINS 7 & 8
 [D] 34 VOLTS A.C. MEASURED ACROSS PINS 2 & 7

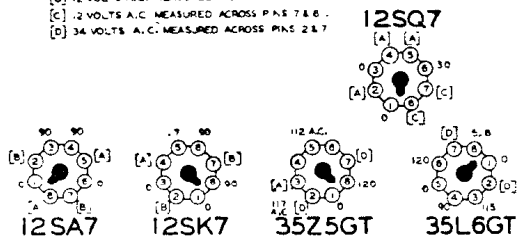

REAR OF CHASSIS

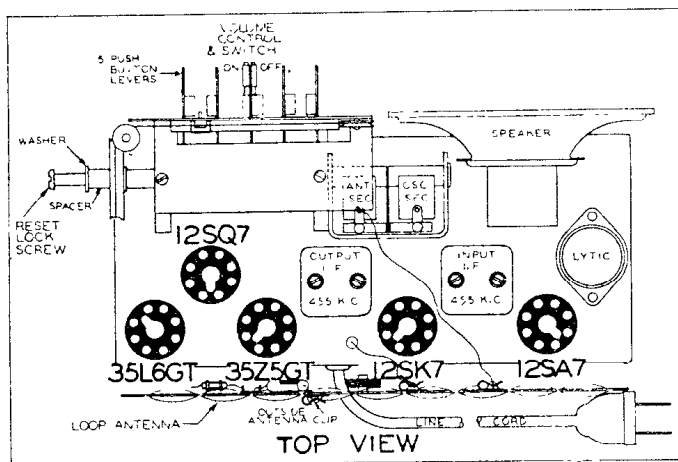

Schematic Diagram Part Ref. No. No.

Description


RESISTORS

R1	BE130314	2200 ohm— $\frac{1}{2}$ w.
R2	BE13094	50M ohm— $\frac{1}{2}$ w.
R3	BE1309	200M ohm— $\frac{1}{2}$ w.
R4	BE130315	75 ohm— $\frac{1}{2}$ w.
R5	BE130203	40 ohm— $\frac{1}{2}$ w.
R6	BE1304	3 megohm— $\frac{1}{2}$ w.
R7	BE1301	25M ohm— $\frac{1}{2}$ w.
R8	BE130215	25 ohm— $\frac{1}{2}$ w.
R9	BE101198	1 megohm volume control
R10	BE130257	5 megohm— $\frac{1}{2}$ w.
R11	BE1303	500M ohm— $\frac{1}{2}$ w.
R12	BE1303	500M ohm— $\frac{1}{2}$ w.
R13	BE130166	150 ohm— $\frac{1}{2}$ w.
R14	BE130287	1200 ohm—1 w.

CONDENSERS

C	BE102132	2 gang variable condenser
C1	BE10011	.01 x 400 v.
C2	BE10091	.15 x 400 v.
C3		Oscillator trimmer on gang
C4		Antenna trimmer on gang
C5	BE12921	.0002 mfd. mica
C6	BE1009	.05 x 200 v.
C7	BE1001	.1 x 400 v.
C8	BE1009	.05 x 200 v.
C9	BE1295	.0001 mfd. mica
C10	BE10025	.002 x 600 v.
C11	BE12912	.00025 mfd. mica
C12	BE100106	.004 x 600 v.
C13	BE11992	20 mfd. lytic x 150 w. v.
C14	BE11992	40 mfd. lytic x 150 w. v.
C15	BE10026	.02 x 400 v.



C13 and C14 are in same unit

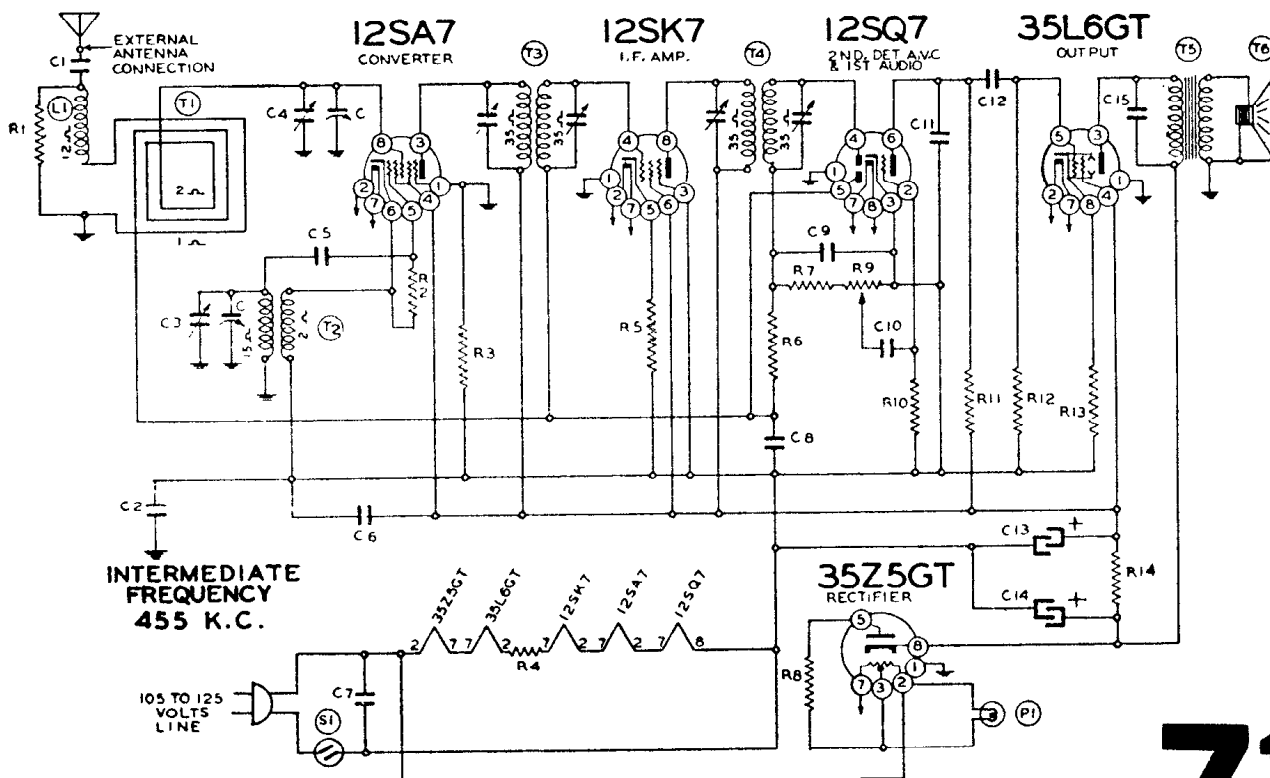


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

71


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

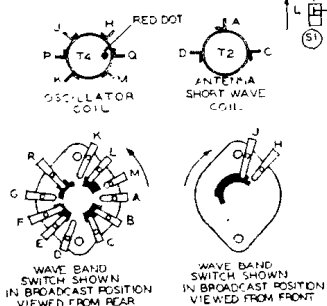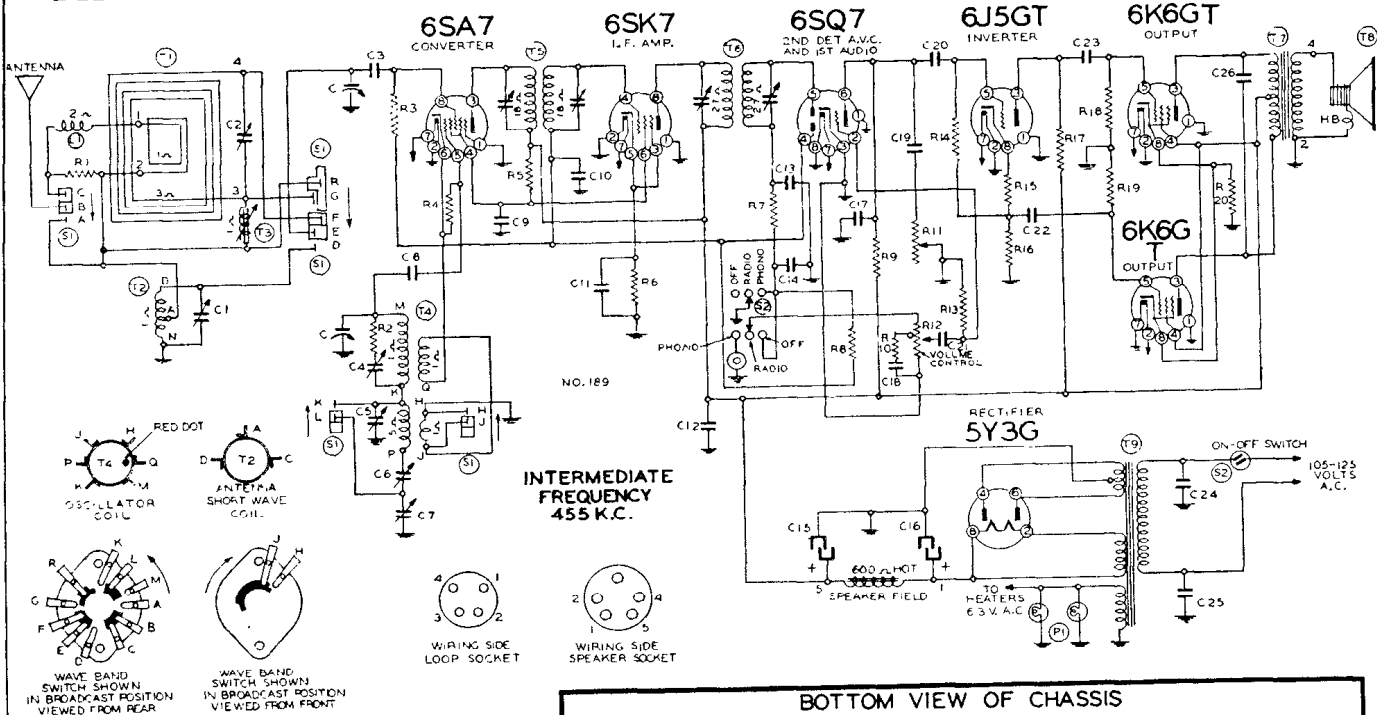


INTERMEDIATE
FREQUENCY
455 K.C.

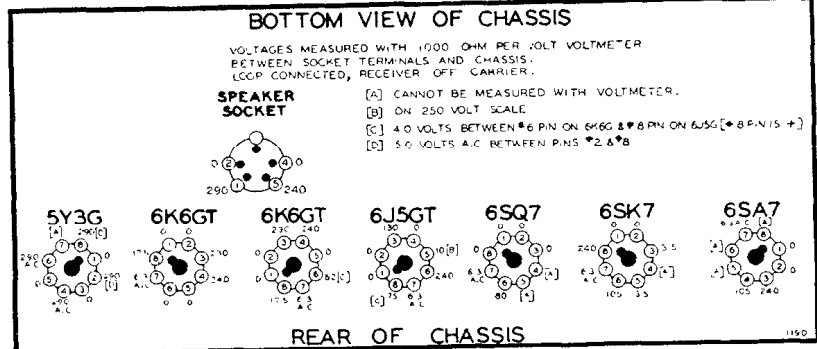

- RESISTORS**
- R1 BE13064 3500 ohm— $\frac{1}{4}$ w.
 - R2 BE130276 10 ohm— $\frac{1}{2}$ w.
 - R3 BE1304 3 megohm— $\frac{1}{4}$ w.
 - R4 BE130236 30M ohm— $\frac{1}{4}$ w.
 - R5 BE130307 15M ohm—1 w.
 - R6 BE13083 300 ohm— $\frac{1}{4}$ w.
 - R7 BE13012 50M ohm— $\frac{1}{4}$ w.
 - R8 BE13038 2 megohm— $\frac{1}{4}$ w.
 - R9 BE13011 250M ohm— $\frac{1}{4}$ w.
 - R10 BE130149 15M ohm— $\frac{1}{4}$ w.
 - R11 BE101223 Tone Control—1 megohm
 - R12 BE101224 Volume control— $\frac{1}{2}$ megohm
 - R13 BE130257 5 megohm— $\frac{1}{4}$ w.
 - R14 BE1303 500M ohm— $\frac{1}{4}$ w.
 - R15 BE130218 5M ohm— $\frac{1}{4}$ w.
 - R16 BE130103 100M ohm— $\frac{1}{4}$ w.
 - R17 BE130103 100M ohm— $\frac{1}{4}$ w.
 - R18 BE1303 500M ohm— $\frac{1}{4}$ w.
 - R19 BE1303 500M ohm— $\frac{1}{4}$ w.
 - R20 BE130320 320 ohm—1 w.
- CONDENSERS**
- C1 BE124116 2 gang variable condenser
 - C2 BE124141 Short wave antenna trimmer
 - C3 BE1292 .0005 mica
 - C4 BE124142 Dual Adj. Trimmer—S.W. Osc. Trimmer
 - C5 BE124142 Dual Adj. Trim.—B.C. Osc. Trimmer
 - C6 BE124140 Dual Adj. Cond.—B.C. Pad
 - C7 BE124140 Dual Adj. Cond.—S.W. Pad
 - C8 BE12960 .00015 mica
 - C9 BE10013 .05 x 400 v.
 - C10 BE1009 .05 x 200 v.
 - C11 BE1009 .05 x 200 v.
 - C12 BE1001 .1 x 400 v.
 - C13 BE129161 Dual—.0001 Mica
 - C14 BE129161 Dual—.0001 Mica
 - C15 BE119108 16 mfd. x 450 w.v. lytic cond.
 - C16 BE119108 16 mfd. x 450 w.v. lytic cond.
 - C17 BE1295 .0001 mica
 - C18 BE100120 .035 x 200 v.
 - C19 BE10019 .006 x 600 v.
 - C20 BE10026 .02 x 400 v.
 - C21 BE10019 .006 x 600 v.
 - C22 BE10013 .05 x 400 v.
 - C23 BE10013 .05 x 400 v.
 - C24 BE10061 .02 x 600 v.
 - C25 BE10061 .02 x 600 v.
 - C26 BF10019 .006 x 600 v.
- C4 and C5, C6 and C7, and C13 and C14 are in same unit.

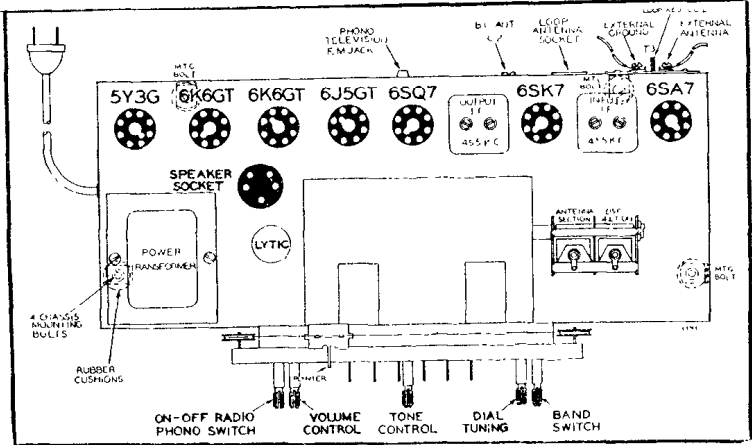

MODEL 04BR-729A
MODEL 04BR-730A




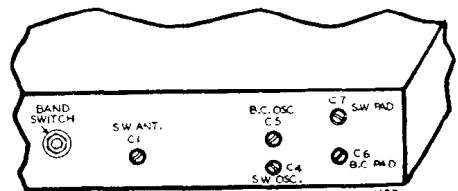


72

MONTGOMERY WARD


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

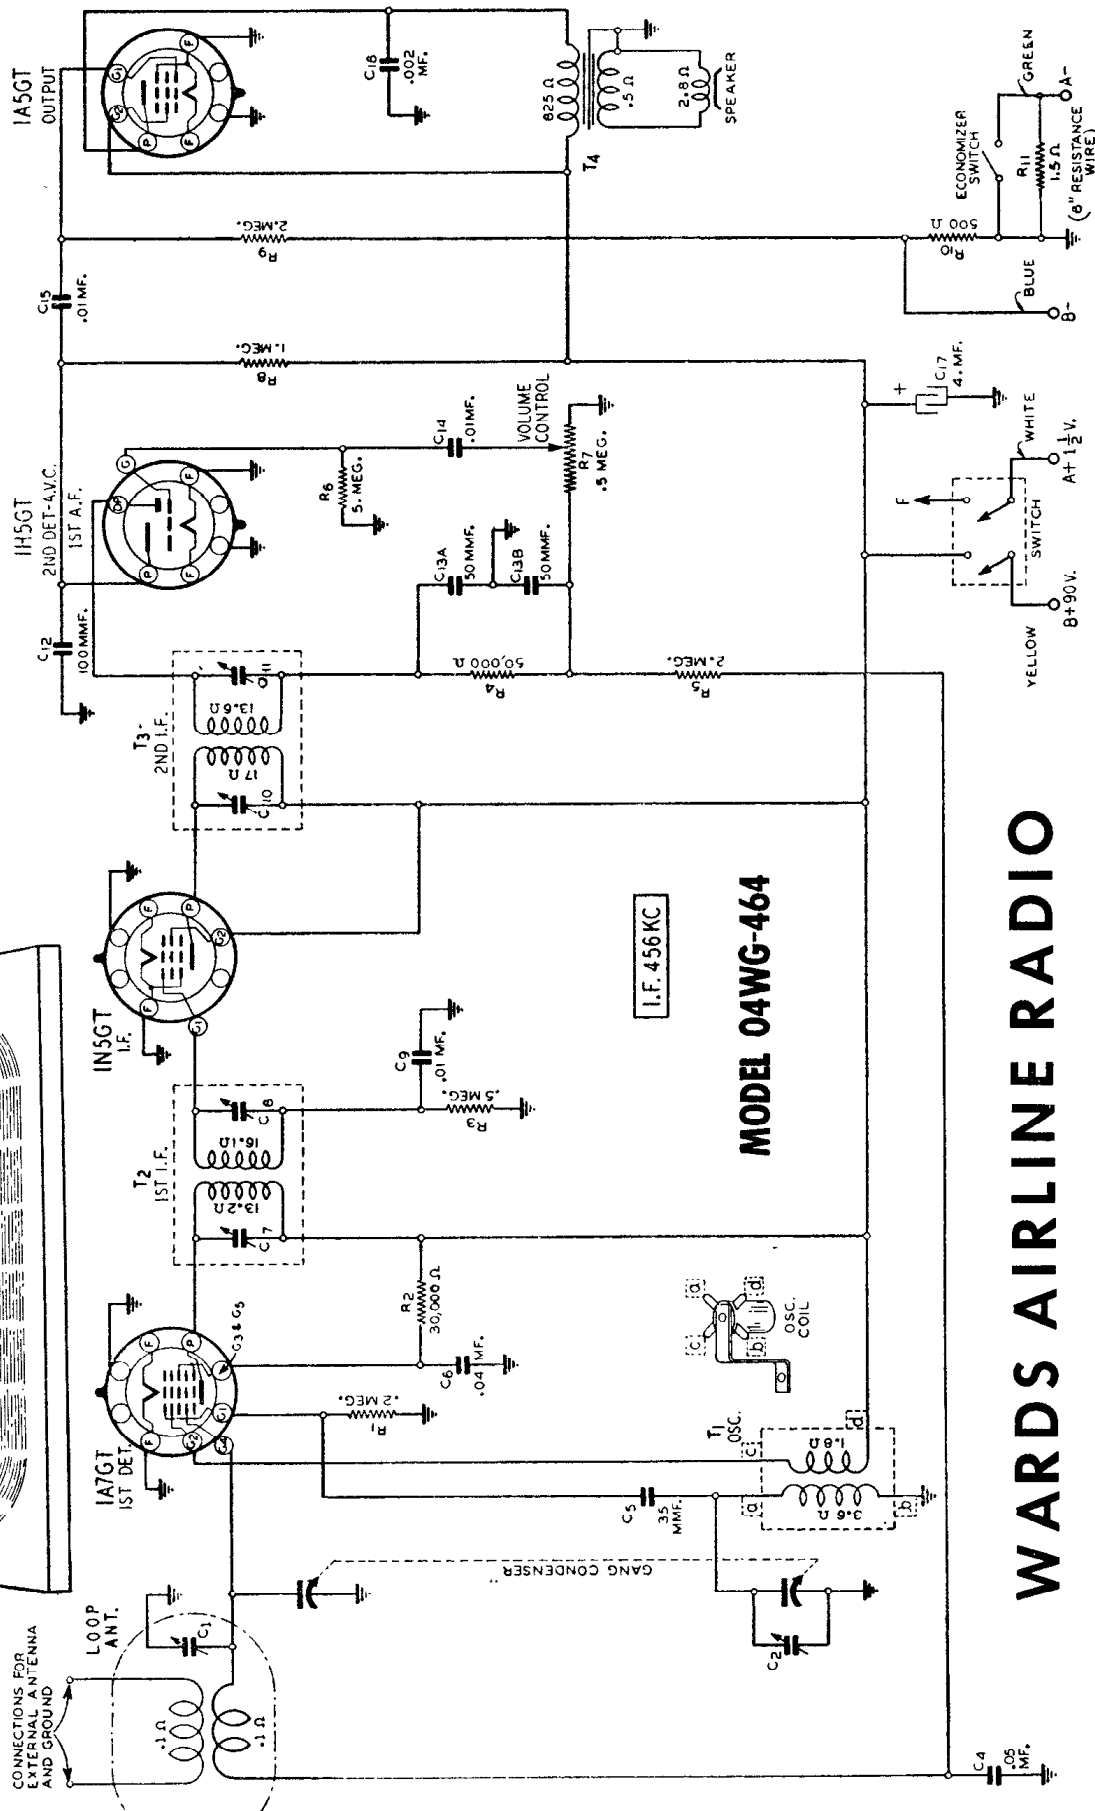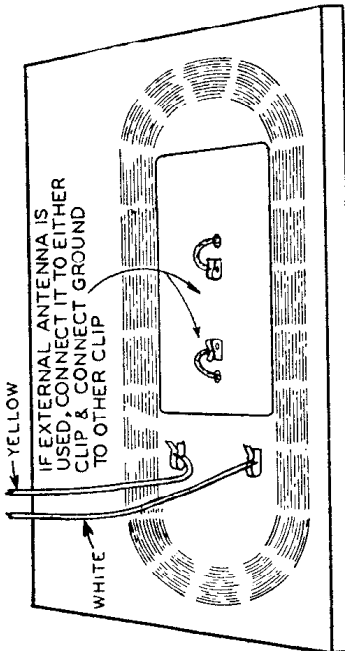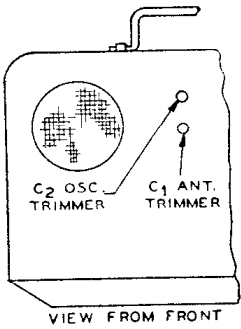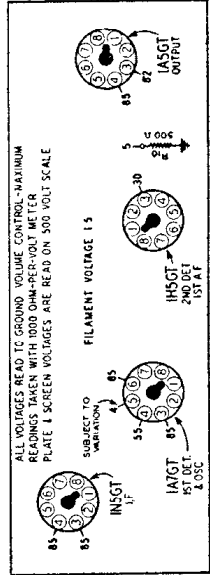

WARDS AIRLINE RADIO


FRONT OF CHASSIS

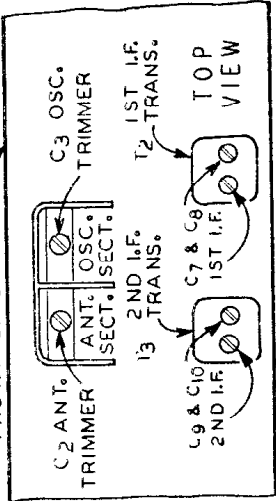


VOLUME CONTROL—MAXIMUM READINGS TAKEN WITH 1000 OHM-PER-VOLT METER. PLATE & SCREEN VOLTAGE ARE READ ON 500 VOLT SCALE.

VOLTAGES AT SOCKETS FOR 117 V. A.C. LINE. ALL VOLTAGES EXCEPT HEATERS & DIAL LAMP ARE BETWEEN SOCKET TERMINALS & "X" POINT.

FOR HEATER & DIAL LAMP VOLTAGES SEE SCHEMATIC BELOW.

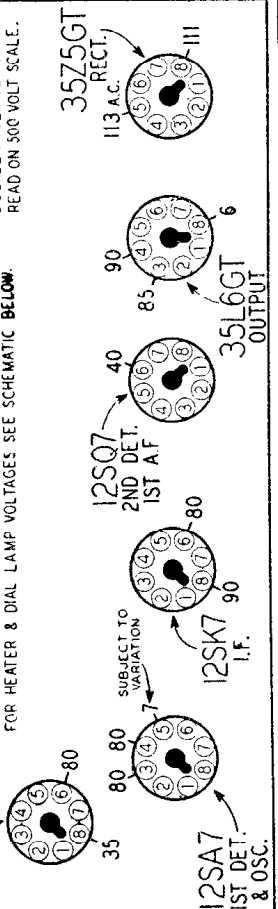

76

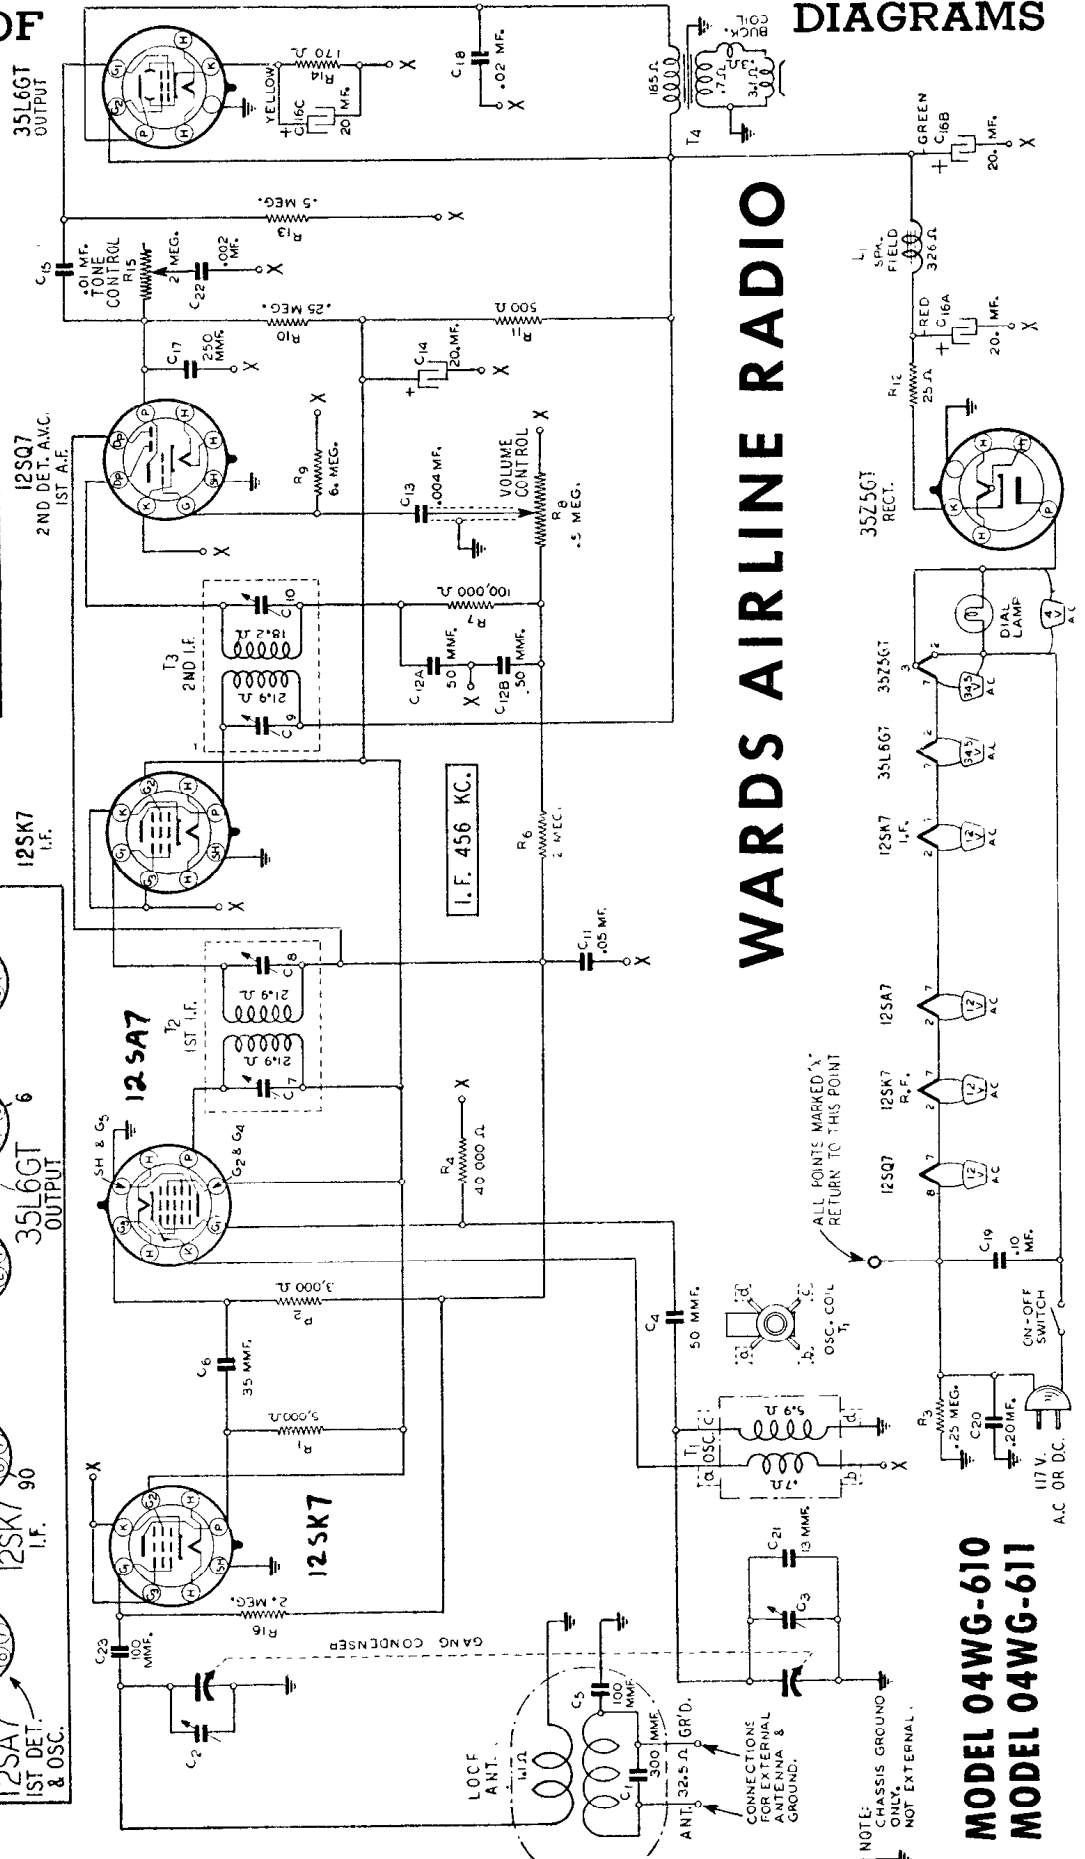


WARDS AIRLINE RADIO

NOTE: CHASSIS GROUND ONLY. NOT EXTERNAL.

ALL POINTS MARKED "X" RETURN TO THIS POINT

MODEL 04WG-610
MODEL 04WG-611

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

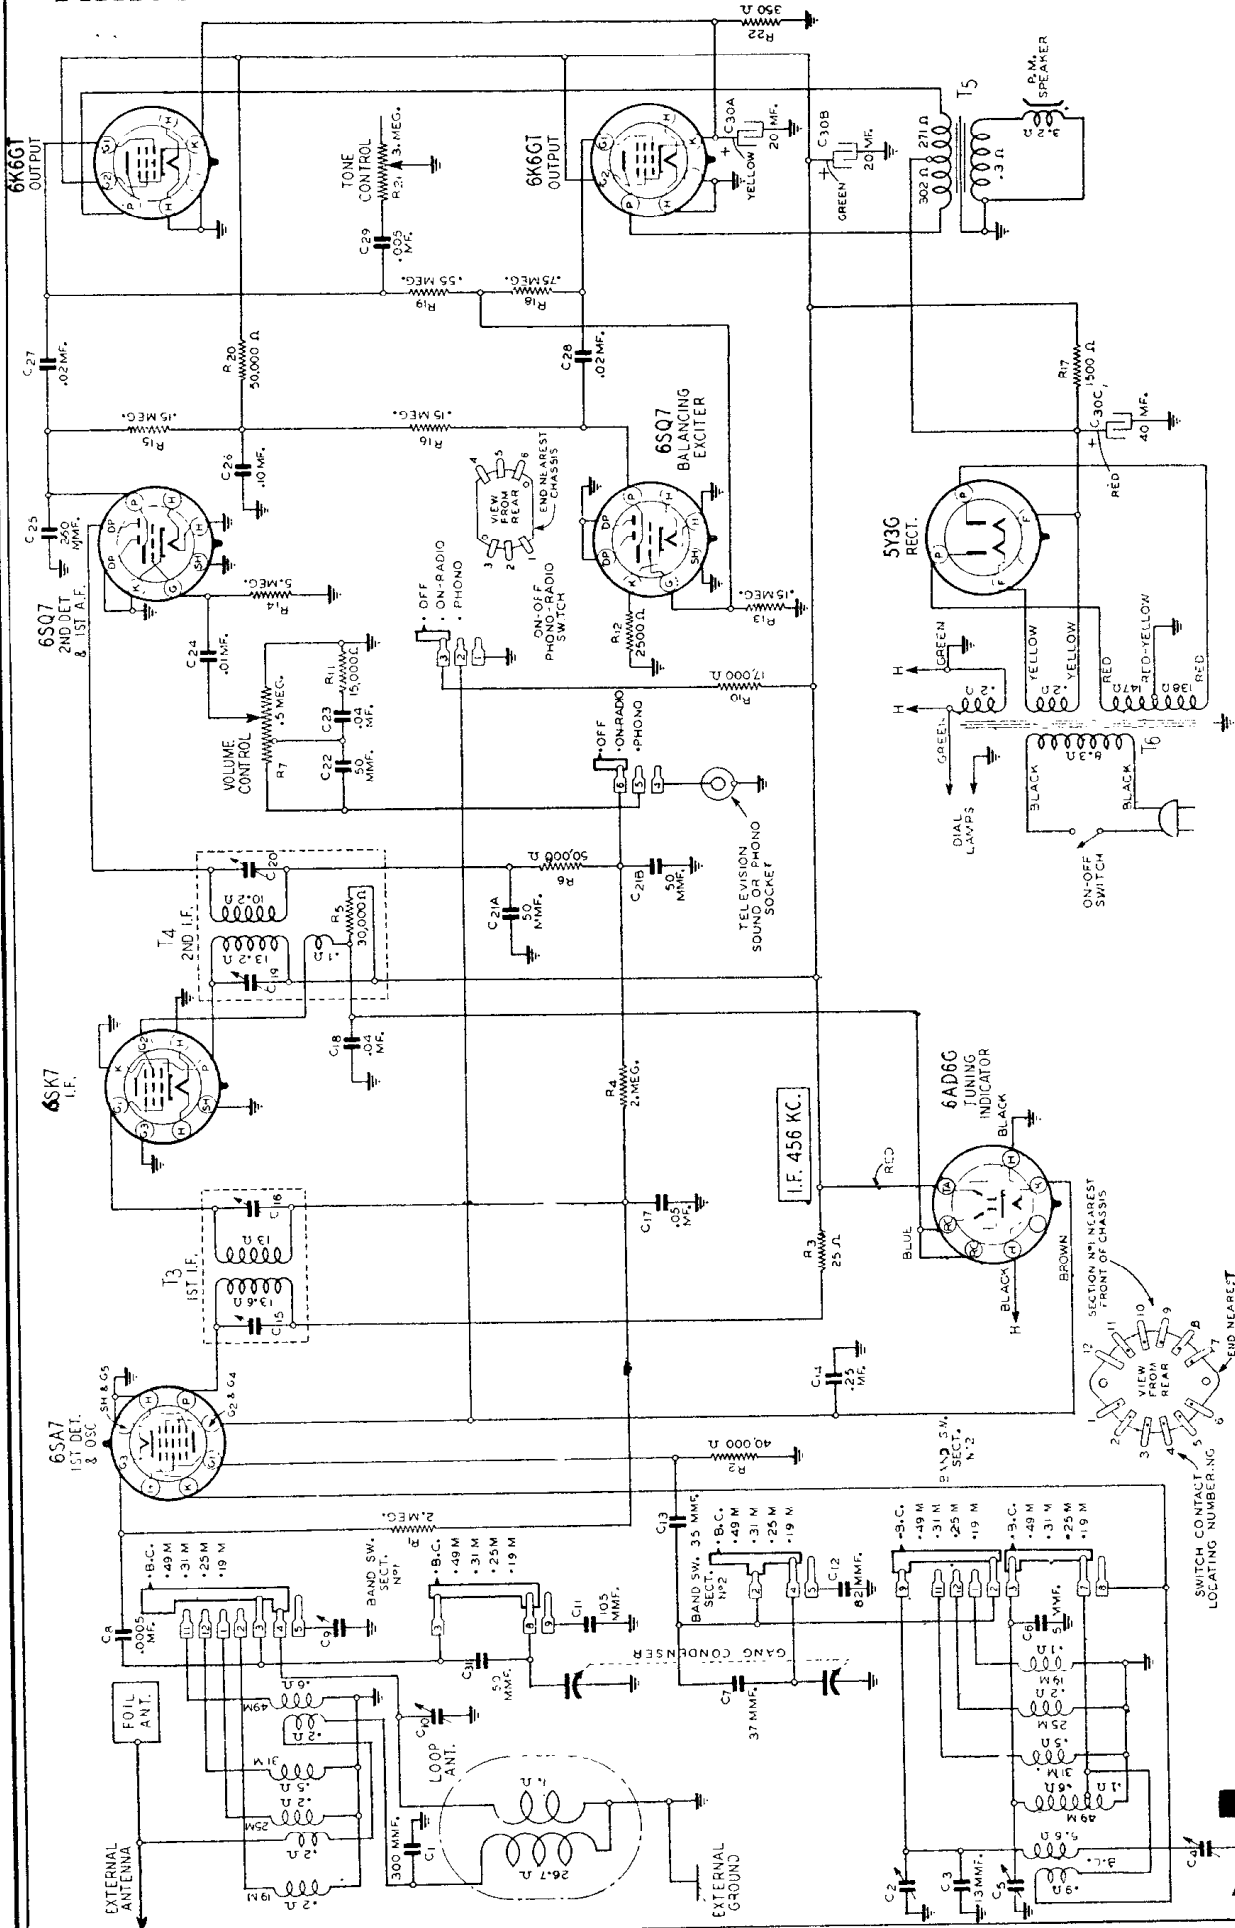

MODEL 04WG-803

WARDS AIRLINE RADIO

BROADCAST AND SPREAD-BAND SHORT WAVE RADIO




MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS


WARDS

MODEL 04WG-731A


ANT. T₁
OSC. T₂
OSC. T₃

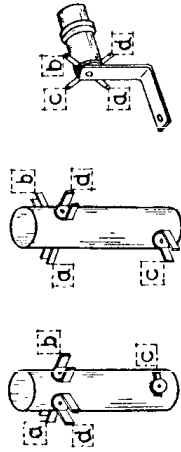

COIL TERMINALS

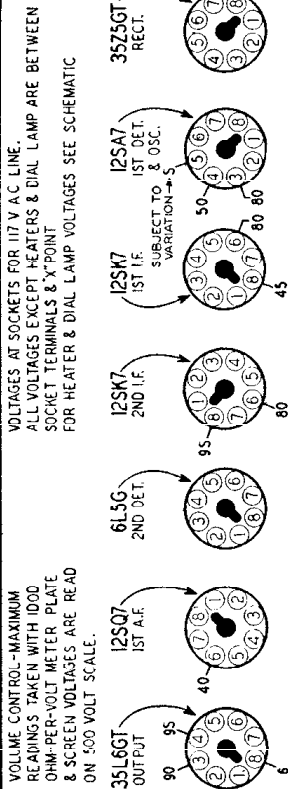


78

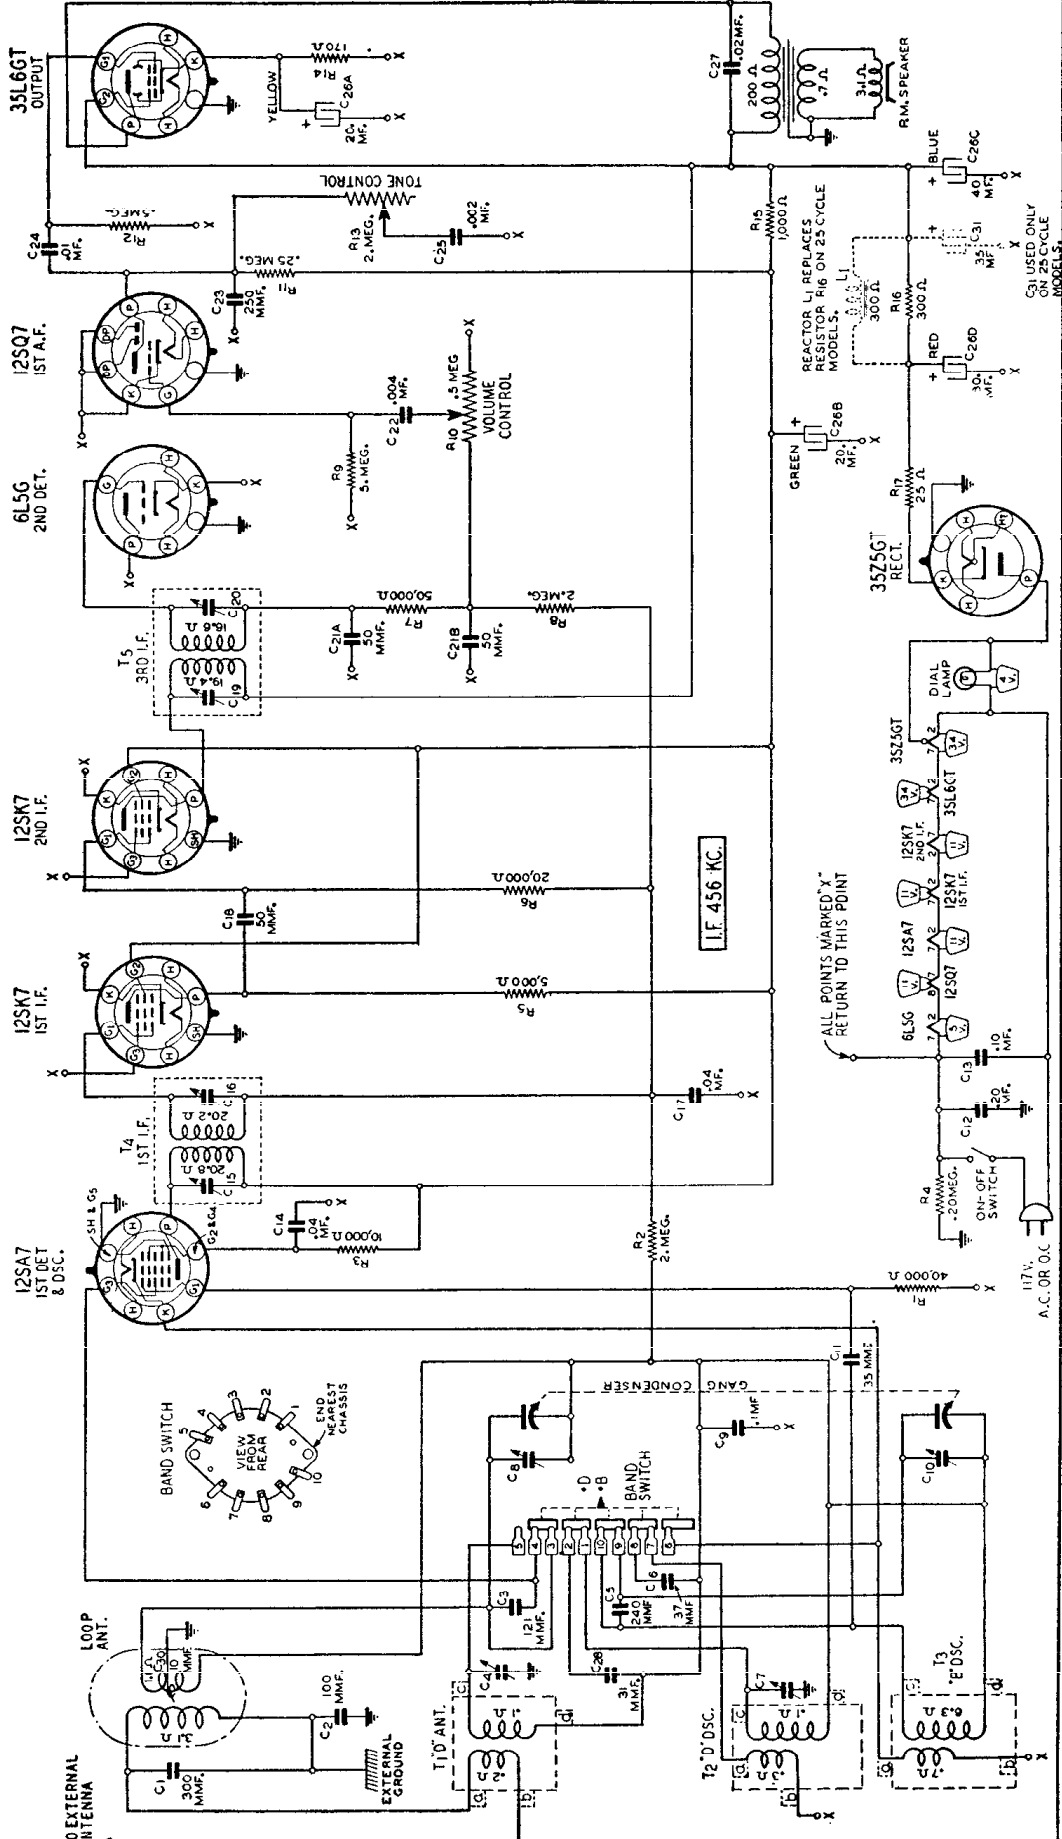


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MODEL 14WG-672

MONTGOMERY WARD

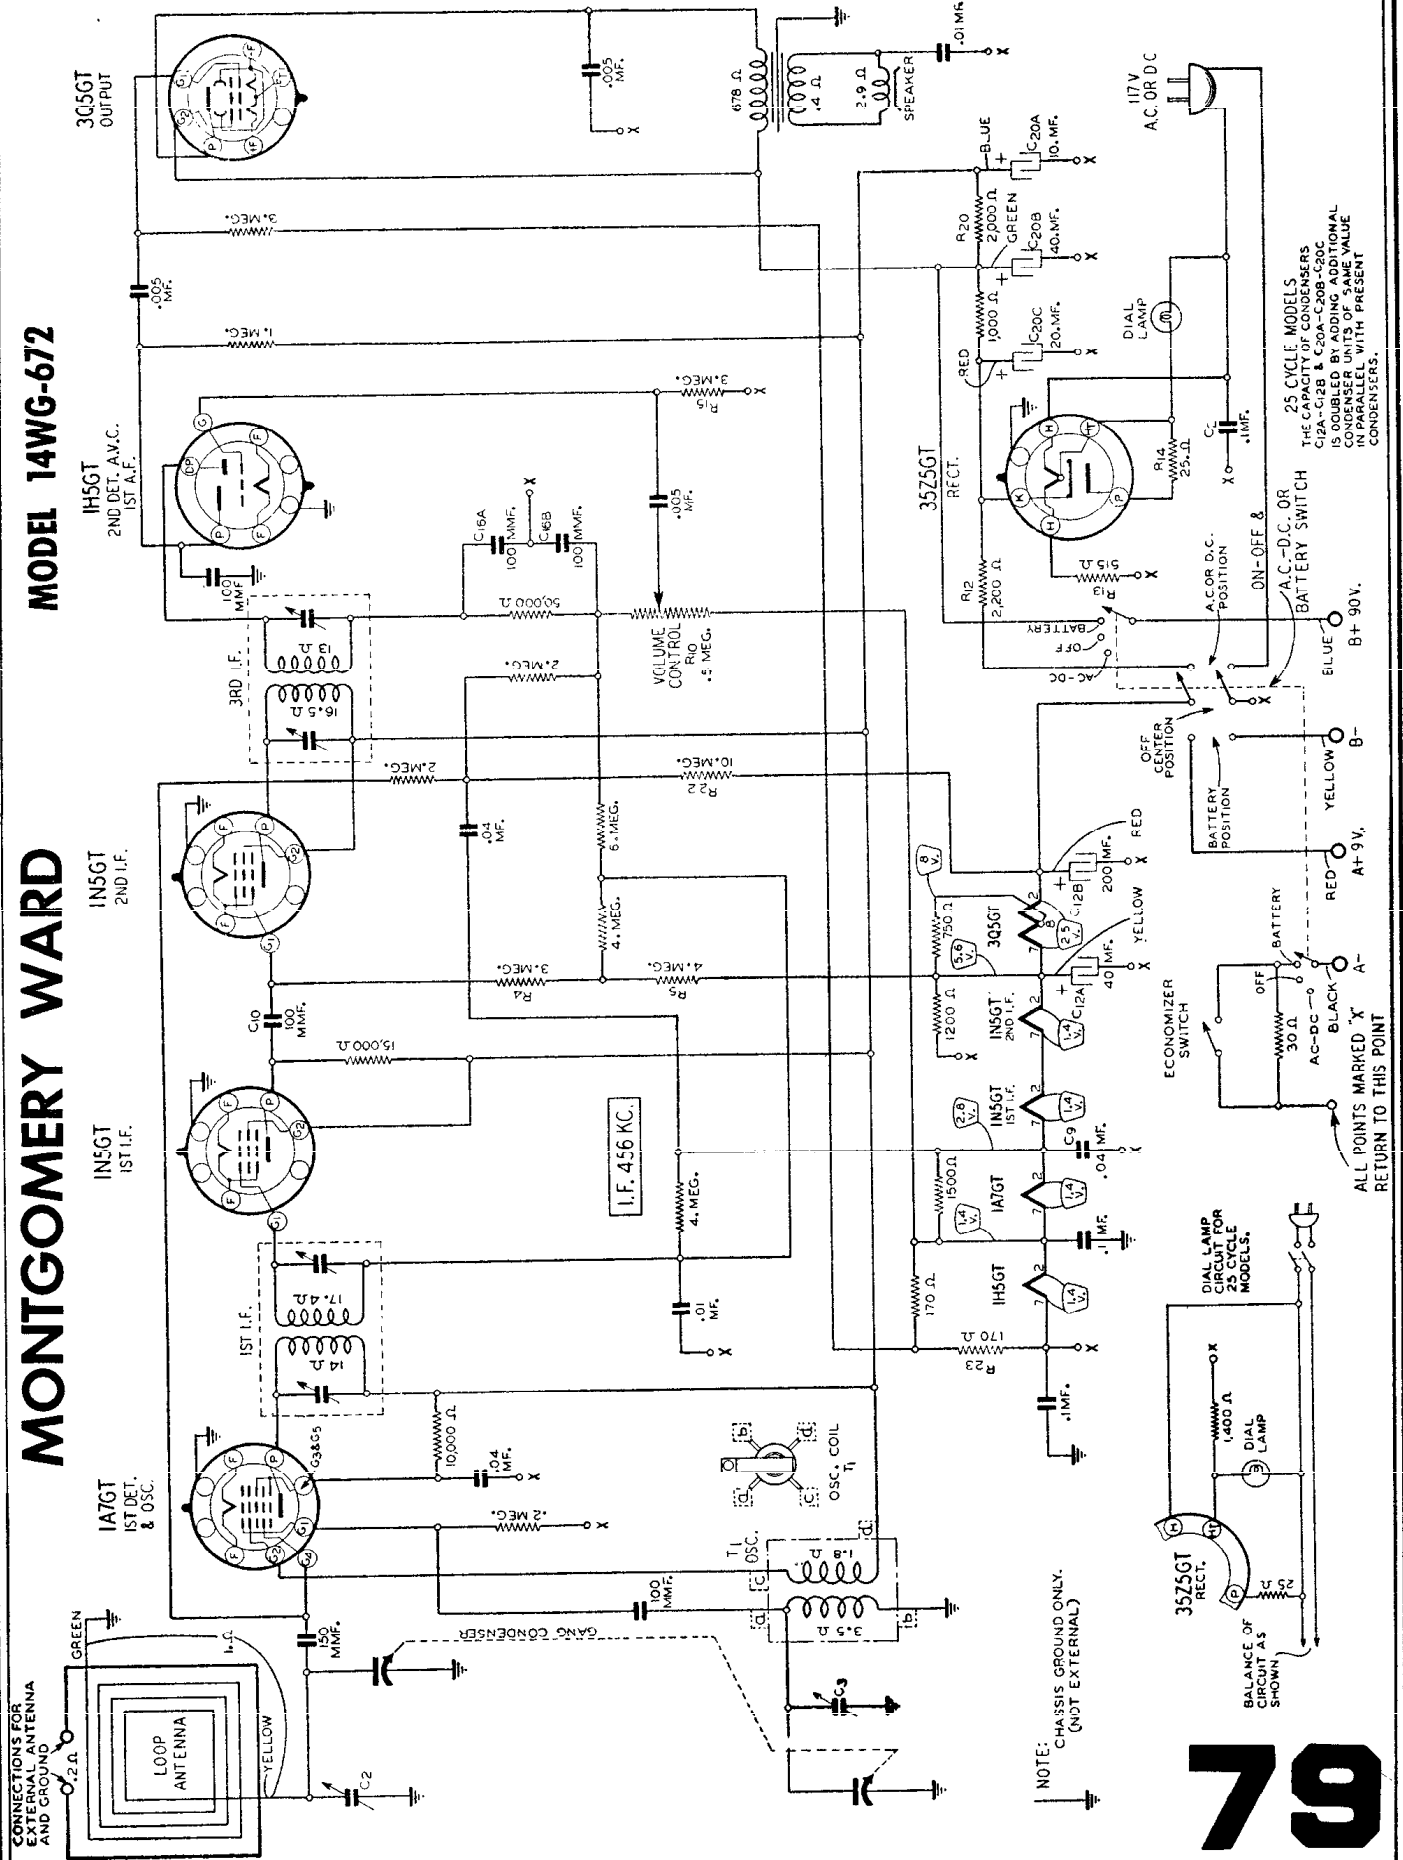


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

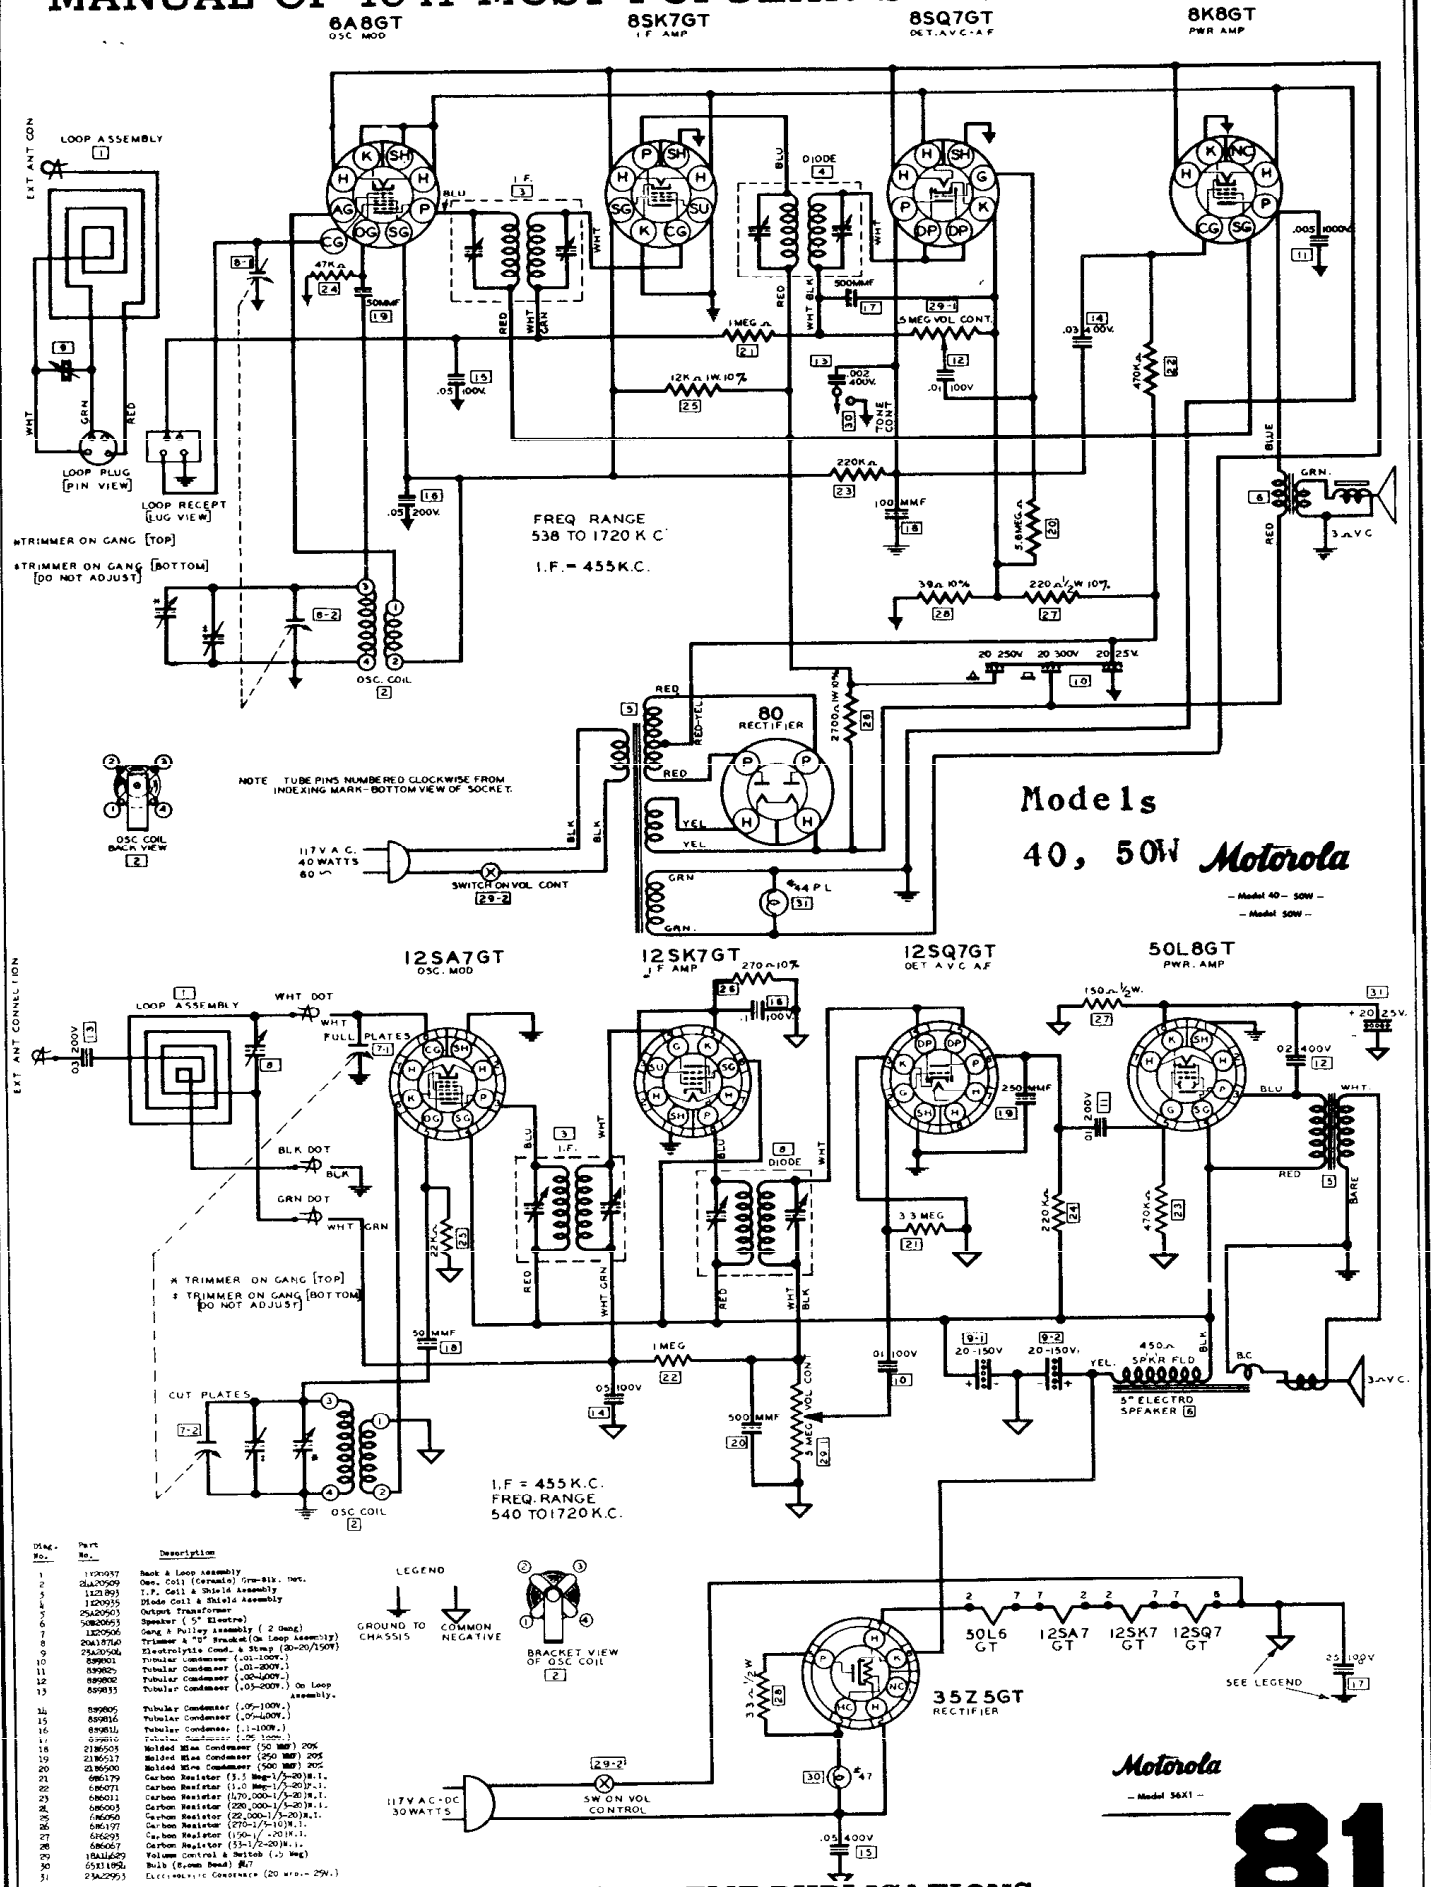

COMPILERS BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

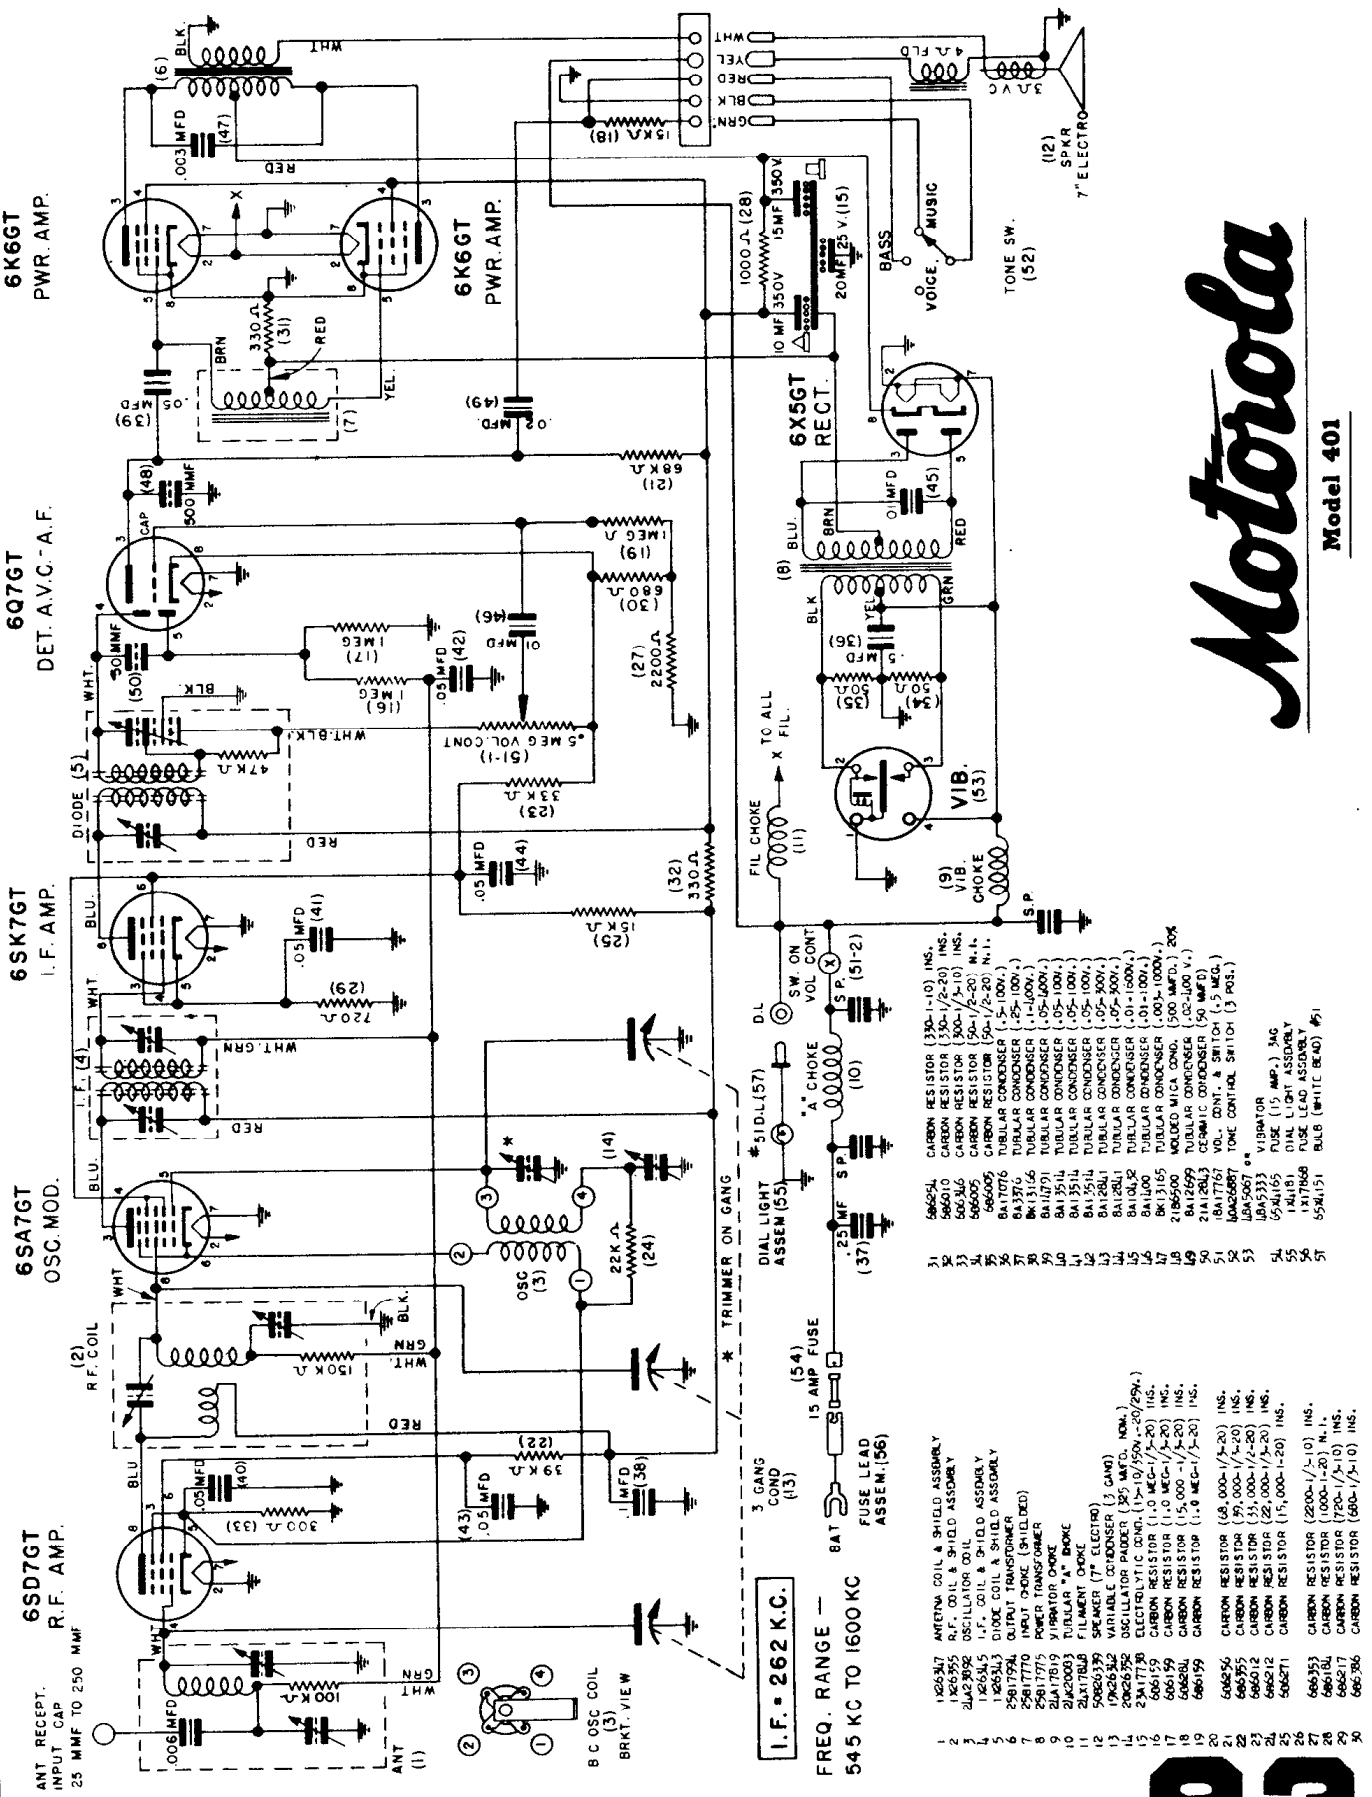

Motorola

Model 401

- 1. F. = 262 K.C.**
- FREQ. RANGE — 545 KC TO 1600 KC
- | | | |
|----|----------|---|
| 1 | 125347 | ANTENNA COIL & SHIELD ASSEMBLY |
| 2 | 125355 | DET. COIL AND SHIELD ASSEMBLY |
| 3 | 212645 | 500 VOLT FILAMENT COIL |
| 4 | 125845 | I.F. COIL & SHIELD ASSEMBLY |
| 5 | 125843 | DIODE COIL & SHIELD ASSEMBLY |
| 6 | 2581792A | OUTPUT TRANSFORMER |
| 7 | 25817770 | INPUT CHOKES (SHIELDED) |
| 8 | 25817819 | POWER TRANSFORMER |
| 9 | 2126203 | TUBULAR "A" CHOKES |
| 10 | 21217619 | FILAMENT CHOKES (CTOR) |
| 11 | 5065379 | WRENCH (FOR CHOKES) |
| 12 | 2062382 | OSCILLATOR PAIDER (.25 MFD, NOM.) |
| 13 | 2126738 | OSCILLATOR COIL (1.5-10/350V, .20/29A.) |
| 14 | 23417738 | ELECTROLYTIC COND. (1.0 MEG.-1/2-20) INS. |
| 15 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 16 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 17 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 18 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 19 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 20 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 21 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 22 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 23 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 24 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 25 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 26 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 27 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 28 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 29 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 30 | 5065159 | CARBON RESISTOR (1.0 MEG.-1/2-20) INS. |
| 31 | 506524 | CARBON RESISTOR (330-1-10) INS. |
| 32 | 506510 | CARBON RESISTOR (330-1/2-20) INS. |
| 33 | 506536 | CARBON RESISTOR (300-1/2-10) INS. |
| 34 | 506505 | CARBON RESISTOR (50-1/2-20) M.A. |
| 35 | 506505 | CARBON RESISTOR (50-1/2-20) M.A. |
| 36 | 506505 | CARBON RESISTOR (50-1/2-20) M.A. |
| 37 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 38 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 39 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 40 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 41 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 42 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 43 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 44 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 45 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 46 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 47 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 48 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 49 | 8A17776 | TUBULAR CONDENSER (1.5-100V.) |
| 50 | 21A12699 | VARIABLE MIC. COND. (500 MFD., 20V) |
| 51 | 21A12699 | VARIABLE MIC. COND. (500 MFD., 20V) |
| 52 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 53 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 54 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 55 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 56 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 57 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 58 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 59 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 60 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 61 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 62 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 63 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 64 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 65 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 66 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 67 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 68 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 69 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |
| 70 | 8A17767 | CERAMIC CONDENSER (.02-100V.) |

83

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

SENSITIVITY AND STAGE GAIN MEASUREMENTS

Average Microvolt Input *	Generator Set At	Generator Feeder Connected To	Dummy Antenna Capacity	Leak Resistance	Output Meter Reading **
2,800	262 K.C.	I.F. Grid	.1 Mfg.	.5 Meg.	1.74
420	262 K.C.	Mod. Grid	.1 Mfg.	.5 Meg.	1.74
510	600 K.C.	Mod. Grid	.1 Mfd.	.5 Meg.	1.74
8	600 K.C.	R.F. Grid	.1 Mfd.	.5 Meg.	1.74
2	600 K.C.	Ant. Lead	***	None	1.74

Volume Control Set At Maximum
 * 1 Watt = 1.74 Volts

Tone Control Set At Voice
 ** Output meter connected across voice coil.
 *** Use Special Dummy Part No. 1X26767 or
 Booster Coil Part No. 24A26751 in series
 with a 35 Mmf. Condenser.



ALIGNMENT CHART

Operations In Order	Gang Condenser Set At	Dummy Antenna	Generator Connected To	Adjust Trimmers No.	Generator Set At
1	Minimum	.1 Mfd.	Osc.-Mod. Grid	1-2-3-4	262 K.C.
2	1600 K.C.	.1 Mfd.	Osc.-Mod. Grid	5	1600 K.C.
3	600 K.C.	.1 Mfd.	Osc.-Mod. Grid	6	600 K.C.
4	1400 K.C.	*	To Special Dummy	7	1400 K.C.
5	1400 K.C.	*	To Special Dummy	8	1400 K.C.
6	600 K.C.	*	To Special Dummy	9	600 K.C.

* Use Special Dummy Part No. 1X26767 or Booster Coil Part No. 24A26751 in series with a 35 Mmf. Condenser.

TUBE	PLATE TO GND	SCREEN TO GND	CATH. TO GND
6SD7GT R.F. AMP	190 V.	125 V.	3 V.
6SA7GT OSC. MOD.	190 V.	60 V.	3 V.
6SK7GT I.F. AMP	195 V.	60 V.	2.75 V.
6Q7GT DET. AVC-AF	130 V	—	6.5 V.
6K6GT PWR. AMP	220 V	195 V.	0
6K6GT PWRAMP	220 V.	195 V.	0
6X5GT RECT.	A.C.	—	225 V.

ALL VOLTAGES MEASURED WITH 1000 OHM PER VOLT VDLTMETER

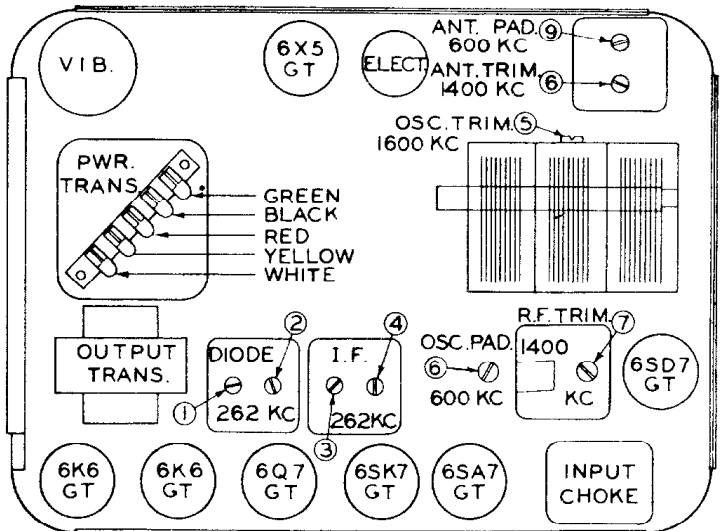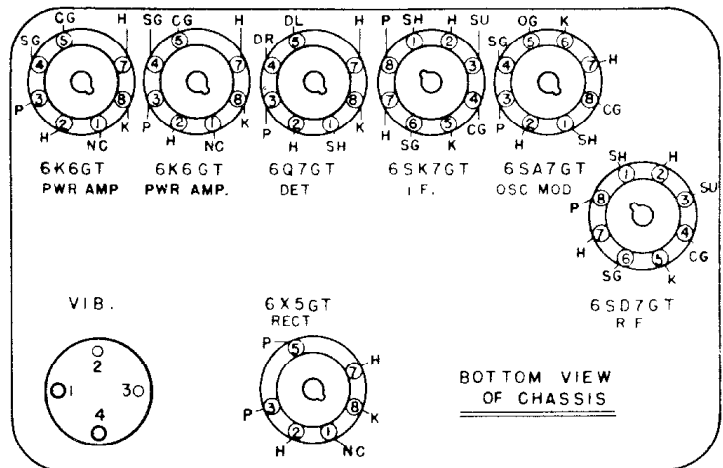

Galvin Mfg. Corp.
 4545 Augusta Blvd.
 Chicago, Illinois

MOTOROLA


Model 401

84

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

Motorola

Model 251

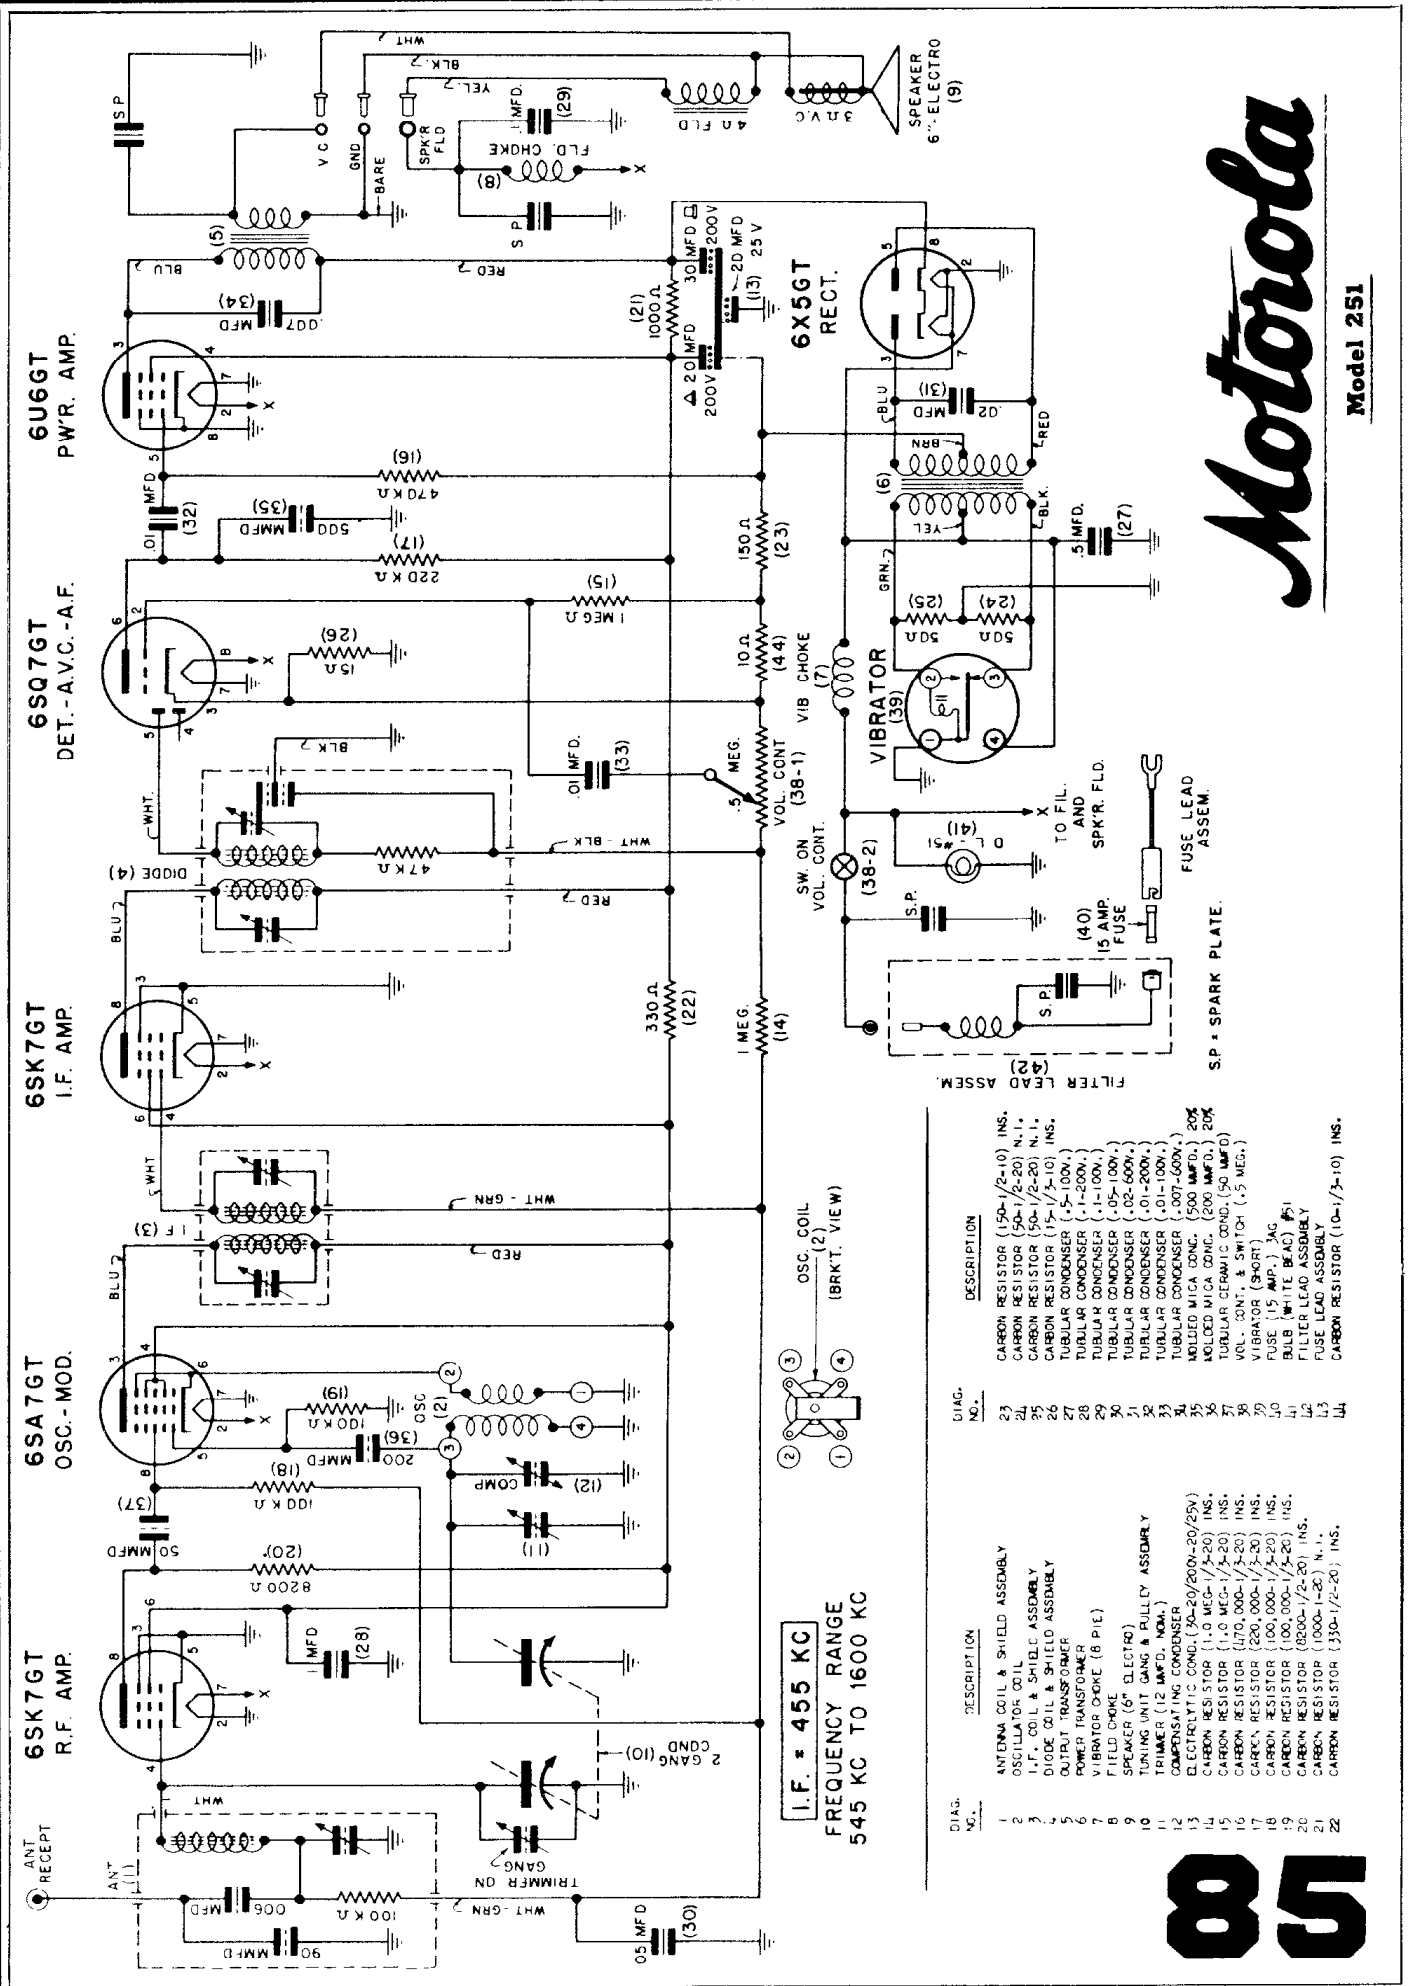


I.F. = 455 KC
 FREQUENCY RANGE
 545 KC TO 1600 KC

DIAG. NO.	DESCRIPTION
23	CARBON RESISTOR (150-1/2-10) INS.
24	CARBON RESISTOR (50-1/2-20) N.I.
25	CARBON RESISTOR (150-1/2-20) N.I.
26	TUBULAR CONDENSER (.5-100V.)
27	TUBULAR CONDENSER (.5-100V.)
28	TUBULAR CONDENSER (.5-100V.)
29	TUBULAR CONDENSER (.5-100V.)
30	TUBULAR CONDENSER (.05-100V.)
31	TUBULAR CONDENSER (.02-600V.)
32	TUBULAR CONDENSER (.01-200V.)
33	TUBULAR CONDENSER (.01-100V.)
34	TUBULAR CONDENSER (.007-600V.)
35	MOLDED MICA COND. (500 MF D., 20K)
36	MOLDED MICA COND. (200 MF D., 20K)
37	VOL. CONT. & SWITCH (.5 MEG.)
38	VIBRATOR (SHORT)
39	FUSE (15 AMP.) 3AG
40	BULB (WHITE BEAD) #1
41	FILTER LEAD ASSEMBLY
42	FUSE LEAD ASSEMBLY
43	CARBON RESISTOR (10-1/3-10) INS.

DIAG. NO.	DESCRIPTION
1	ANTENNA COIL & SHIELD ASSEMBLY
2	OSCILLATOR COIL
3	I.F. COIL & SHIELD ASSEMBLY
4	DIODE COIL & SHIELD ASSEMBLY
5	OUTPUT TRANSFORMER
6	POWER TRANSFORMER
7	VIBRATOR CHOKE (8 PIE)
8	FIELD CHOKES
9	SPEAKER (6" ELECTRO)
10	TUNING UNIT GANG & PULLY ASSEMBLY
11	TRIMMER (.12 MF D. NOM.)
12	COMPENSATING CONDENSER
13	ELECTROLYTIC COND. (.30-20/200V-20/25V)
14	CARBON RESISTOR (1.0 MEG-1/5-20) INS.
15	CARBON RESISTOR (1.0 MEG-1/5-20) INS.
16	CARBON RESISTOR (.170, 000-1/5-20) INS.
17	CARBON RESISTOR (220, 000-1/5-20) INS.
18	CARBON RESISTOR (100, 000-1/5-20) INS.
19	CARBON RESISTOR (100, 000-1/5-20) INS.
20	CARBON RESISTOR (8200-1/2-20) N.I.
21	CARBON RESISTOR (1000-1/2-20) N.I.
22	CARBON RESISTOR (.330-1/2-20) INS.

85

ARVIN HOME RADIO CHASSIS RE-82

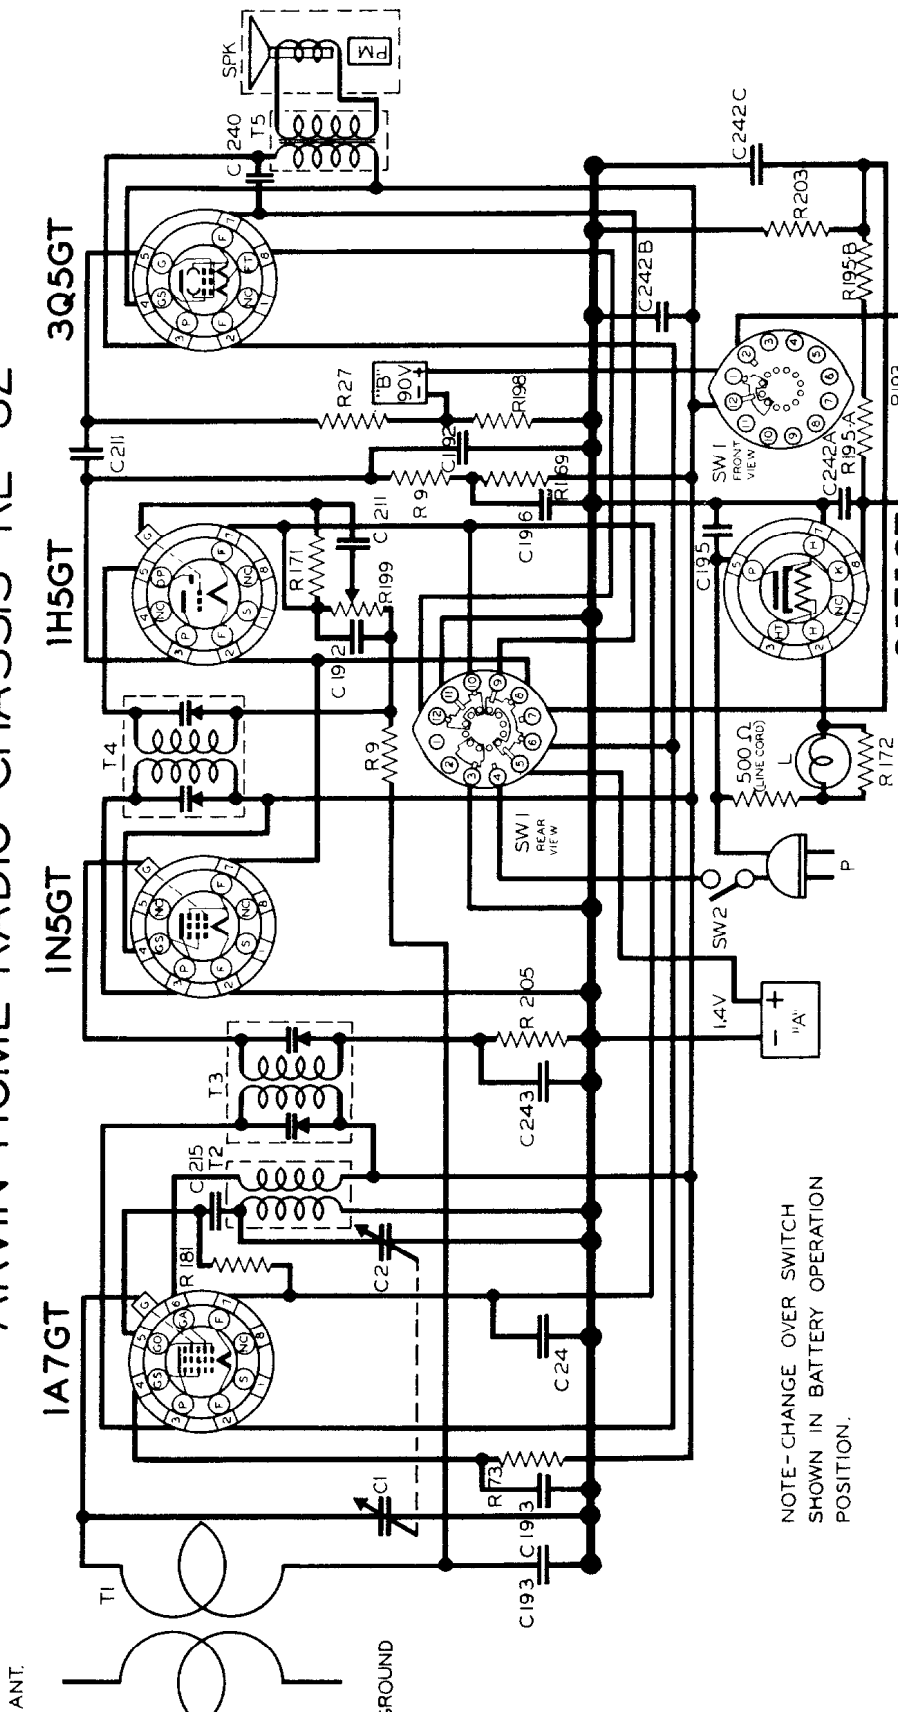

NOTE - CHANGE OVER SWITCH SHOWN IN BATTERY OPERATION POSITION.

RESISTORS		CONDENSERS		TRANSFORMERS		MISCELLANEOUS UNITS	
R	OHMS	C	CAPACITY	T	TYPE	SYMBOL	DESCRIPTION
9	2M	1	TWO-GANG	1	ANTENNA LO.P	A	1.5 VOLT "A" BATTERY
27	1M	2	VARIABLE	2	OSCILLATOR COIL	B	TWO 45 VOLT "B" BATTERIES
73	30K	192	.00025	3	FIRST I.F.	L	GLASS LIGHT BULB MAZDA 47
189	50K	193	.05	4	SECOND I.F. COIL	P	LINE CORD & P.O. ASS'Y VOL. I
71	15M	195	.05	5	OUTPUT TRANS	SPK	SPEAKER ASS'Y VOL. I - S. PERMANENT MAGNET
172	100	198	.1			SW1	AC DC - BATTERY SWITCH
181	100K	211	.01			SW2	VOLUME CONTROL & LINE SWITCH
95A	460	215	.0001				
195B	1500	216	.0001				
196	400	24	.5				
199	1M	240	.003				
203	450	242A	40				
193	2K	242B	20				
205	3M	243	.002				
		17-14351					
		17-14343					
		17-14350					
		17-14354					
		17-14337					
		17-14356					
		17-14357					

IF PEAK 455 K.C.
BALANCE 1400 K.C. - CHECK AT 600 K.C.
NOBLIT-SPARKS INDUSTRIES, INC.,
COLUMBUS, INDIANA.


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

NOBLITT-SPARKS INDUSTRIES, INC.
Columbus, Indiana



ARVIN HOME RADIC CHASSIS RE-76

12SA7 12SK7 12SQ7 50L6GT

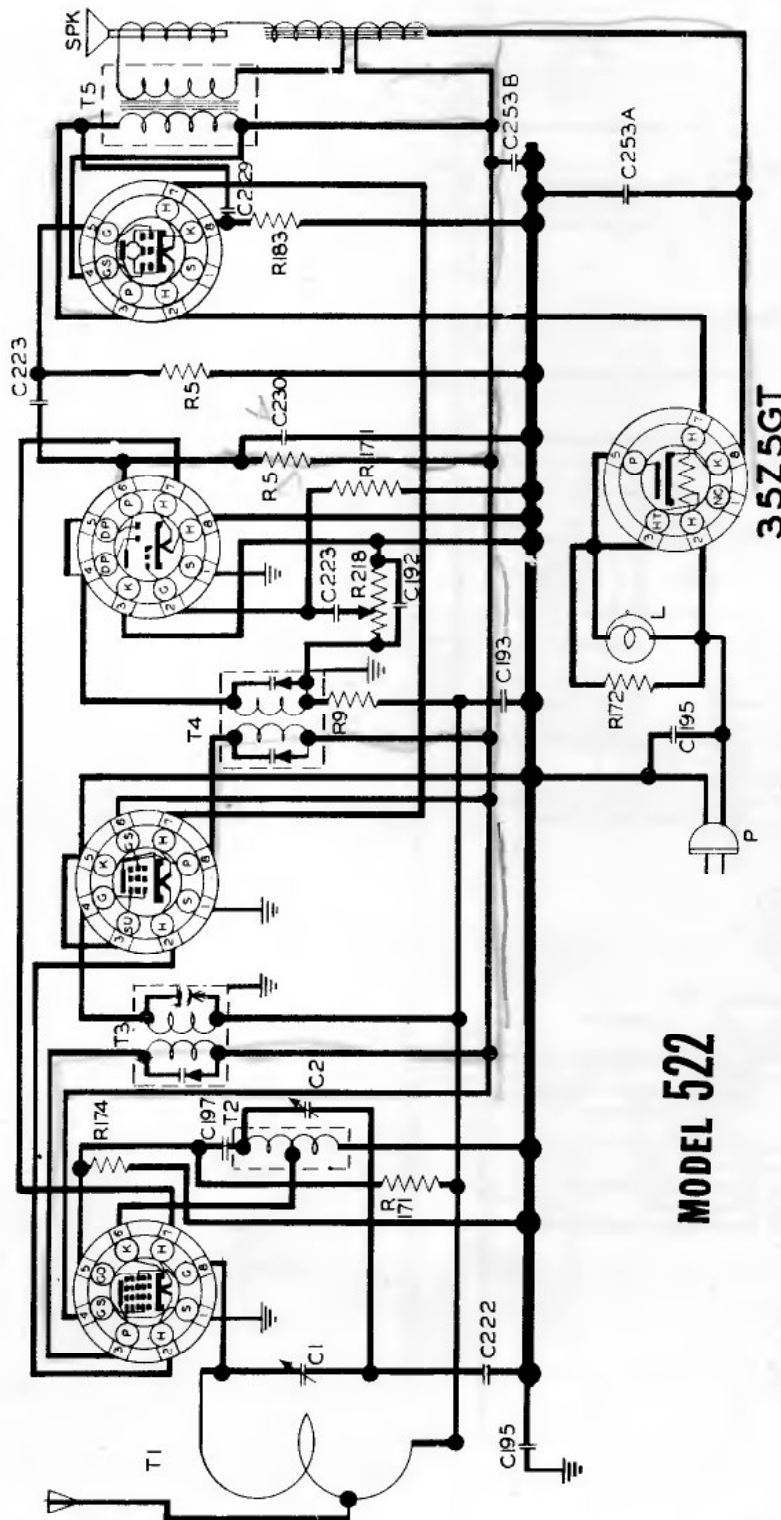


MODEL 522

RESISTORS		CONDENSERS		TRANSFORMERS		MISCELLANEOUS UNITS	
R	OHM W. PART NO.	C	CAPACITIVITY VOLT	T	TYPE	SYMBOL	DESCRIPTION
28	1M 1/4W 1.6857	1	TWO GANG	1	ANTENNA LOOP	L	DIAL LIGHT BULB MAZDA 47
5	500K 1/4W 1.2070	2	VARIABLE	2	OSCILLATOR COIL	P	LINE CORD & PLUG ASSY
183	150 1/4W 1.4316	253A	20MFD 150	3	FIRST IF COIL	SPK	SPEAKER ASSY
174	20K 1/4W 1.4289	253B	10 MFD 150	4	SECOND IF COIL		
172	100 1/4W 1.4289	192	.00025	5	OUTPUT TRANSF		
171	15M 1/4W 1.4288	195	.05				
9	1M 1/4W 1.2080	222	.2				
		229	.02				
		223	.002				
		193	.05				
		197	.0001				
		230	.0005				

IF PEAK 455 K.C.
BALANCE 1400 K.C. - CHECK AT 600 K.C.
NOBLITT-SPARKS INDUSTRIES, INC.
COLUMBUS, INDIANA

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

NOBLITT-SPARKS INDUSTRIES, INC.
Columbus, Indiana

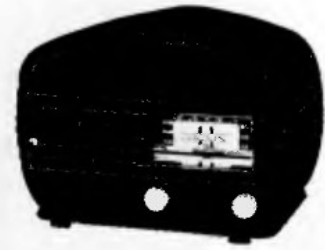


ARVIN HOME RADIO - CHASSIS RE-78

12SA7

12SK7

12SQ7

50L6GT

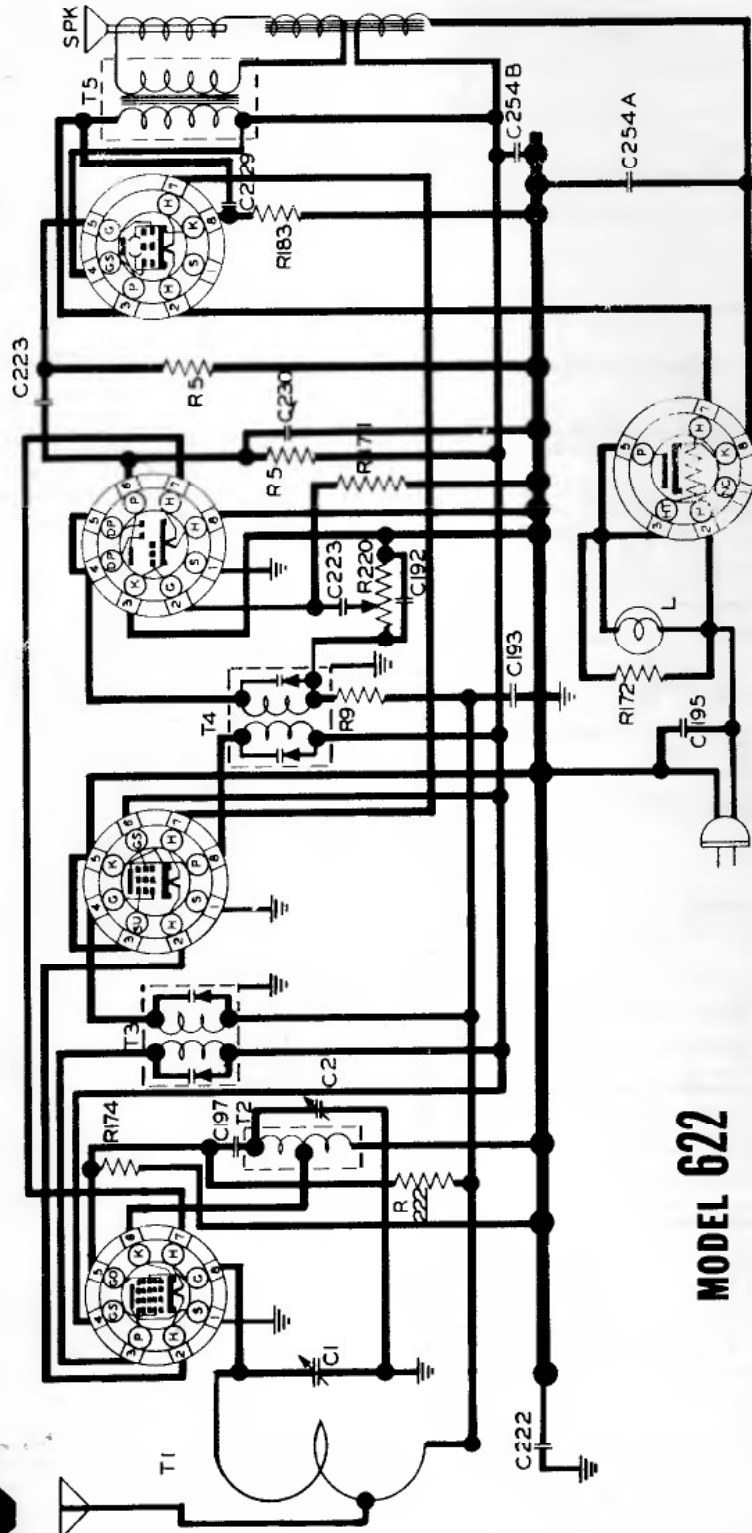

MODEL 622


35Z5GT

RESISTORS		CONDENSERS		TRANSFORMERS		MISCELLANEOUS UNITS	
R	OHM W PART NO	C	CAPACITY VOLT	T	TYPE PART NO	SYMBOL	DESCRIPTION PART NO
22	1 M 1/4 17-16876	1	TWO GANG	1	ANTENNA LOOP 00-16862	L	DIAL LIGHT BULB MAZDOP #47 17-16376
51	500K 1/4 17-2070	2	VARIABLE	2	OSCILLATOR COIL 00-16891	P	LINE CORD & PLUG ASSY 17-16874
83	150 1/4 17-16316	254A	20 MFD 150	3	FIRST I.F. COIL 00-16885	SPK	SPEAKER ASSY 17-16867
174	20 K 1/4 17-14291	254B	10 MFD 150	4	SECOND I.F. COIL 00-16886		
222	10 M 1/4 17-14377	192	00025 600	5	OUTPUT TRANSF 00-16883		
9	1 M 1/4 17-2080	222	2 400 17-16317				
		229	.02 400 17-14327				
		223	.002 400 17-14316				
		193	.05 200 17-14274				
		197	.0001 600 17-14276				
		230	.0005 400 17-14328				

IF PEAK 4.55 KC.
BALANCE 1400 KC. - CHECK AT 600 KC.
NOBLITT-SPARKS INDUSTRIES, INC.
COLUMBUS, INDIANA

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

ARVIN CAR RADIO CHASSIS RE-84

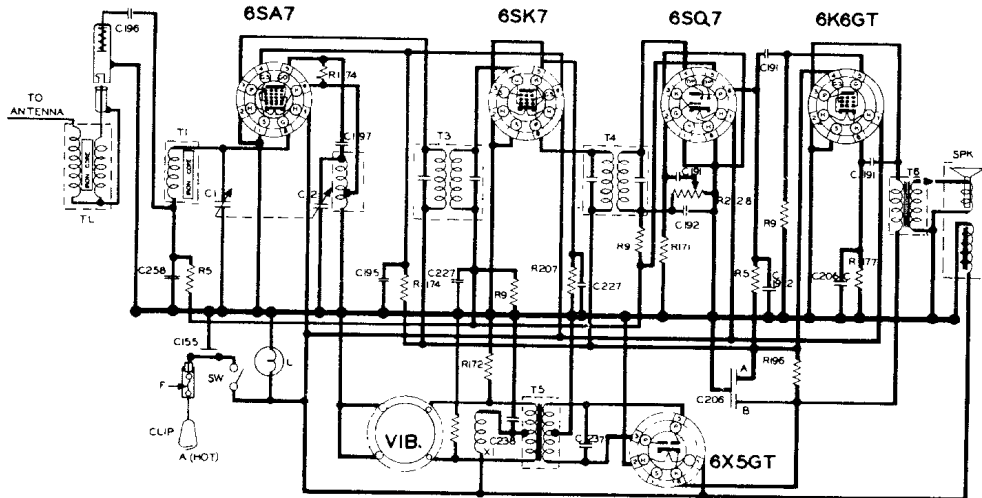


RESISTORS		CONDENSERS		CHOKES & TRANSFORMERS		MISCELLANEOUS UNITS	
W	RES. NO.	C	COND. NO.	T	TRANS. NO.	S	UNIT NO.
1/2	500K	1	100	1	1	F	17-2228
1/2	1M	2	100	2	2	L	17-1904
1/2	500K	3	100	3	3	S	17-4190
1/2	100K	4	100	4	4	SPK	17-1831
1/2	15M	5	100	5	5	SW	17-1831
1/2	100K	6	100	6	6	SW	17-1831
1/2	100K	7	100	7	7	SW	17-1831
1/2	100K	8	100	8	8	SW	17-1831
1/2	100K	9	100	9	9	SW	17-1831
1/2	100K	10	100	10	10	SW	17-1831

MODEL 520

I.F. PEAK 455 K.C.
 FREQUENCY RANGE 1575 TO 540 K.C.
 NOBLITT-SPARKS INDUSTRIES, INC.
 COLUMBUS, INDIANA

ARVIN CAR RADIO — CHASSIS RE-86

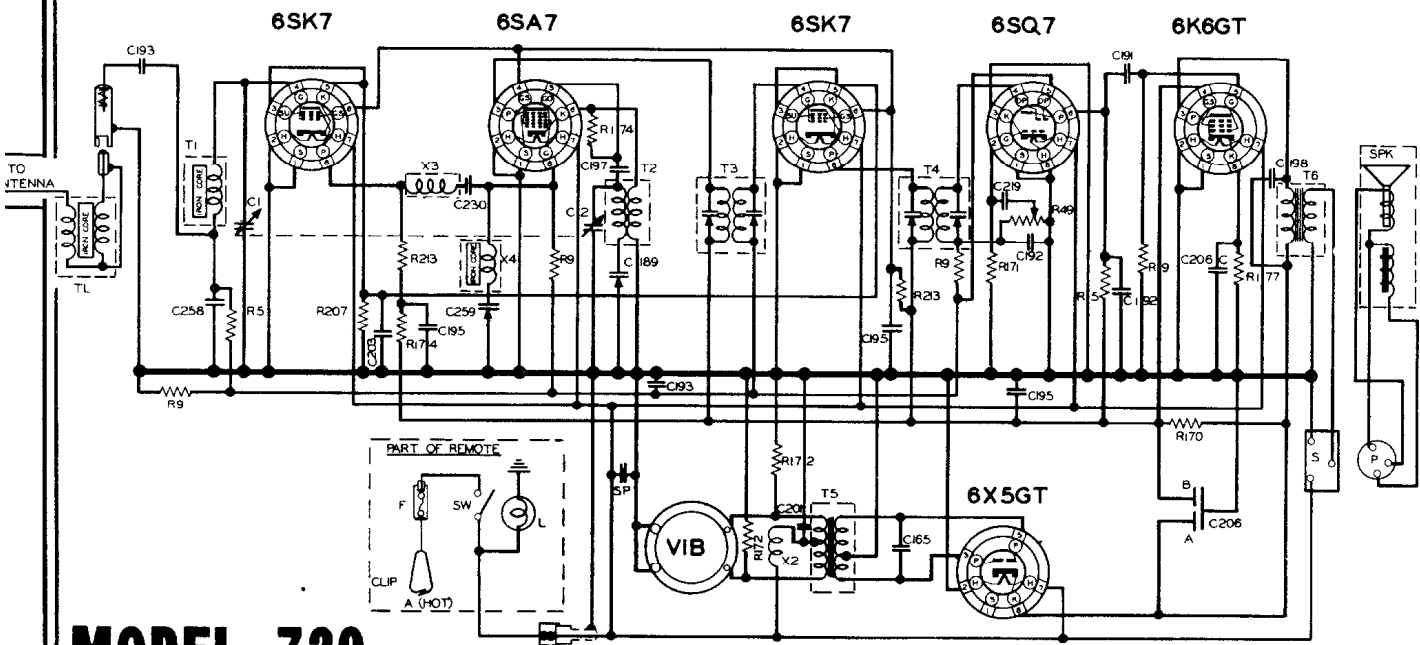



MODEL 720

RESISTORS		CONDENSERS		CHOKES & TRANSFORMERS		MISCELLANEOUS UNITS	
W	RES. NO.	C	COND. NO.	T	TRANS. NO.	S	UNIT NO.
1/2	500K	1	100	1	1	F	17-2228
1/2	1M	2	100	2	2	L	17-1904
1/2	500K	3	100	3	3	S	17-4190
1/2	100K	4	100	4	4	SPK	17-1831
1/2	15M	5	100	5	5	SW	17-1831
1/2	100K	6	100	6	6	SW	17-1831
1/2	100K	7	100	7	7	SW	17-1831
1/2	100K	8	100	8	8	SW	17-1831
1/2	100K	9	100	9	9	SW	17-1831
1/2	100K	10	100	10	10	SW	17-1831

I.F. PEAK 455 K.C.
 FREQUENCY RANGE 1575 TO 540 K.C.
 NOBLITT-SPARKS INDUSTRIES, INC.
 COLUMBUS, INDIANA


89

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

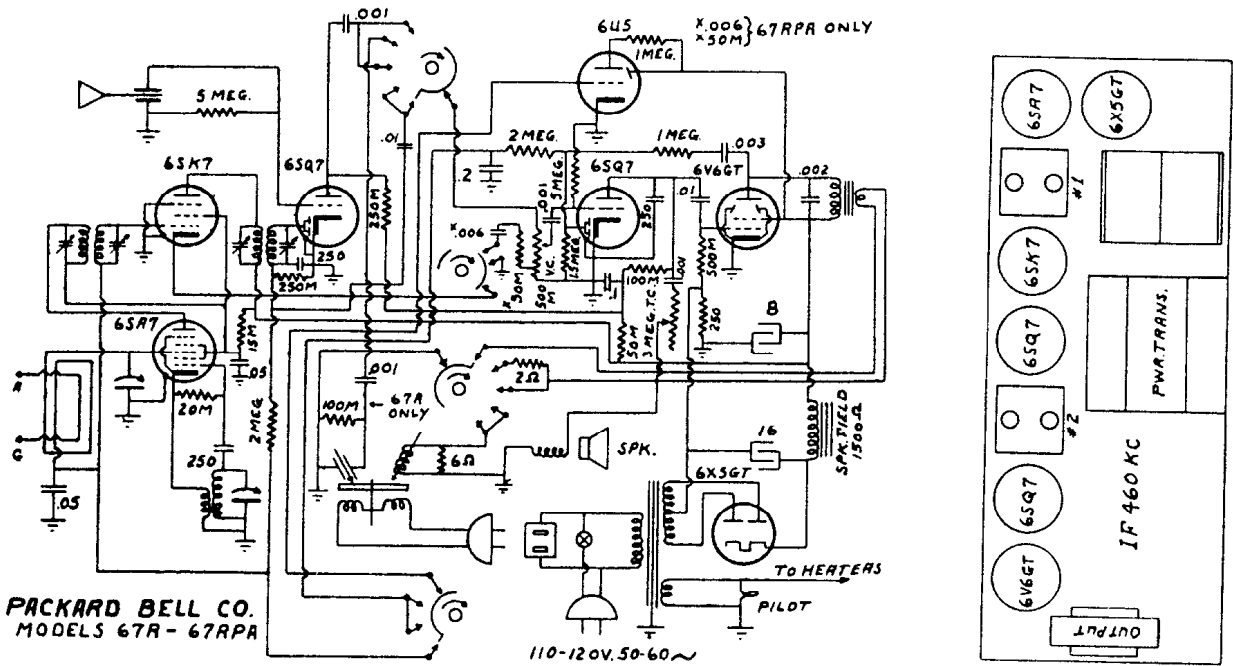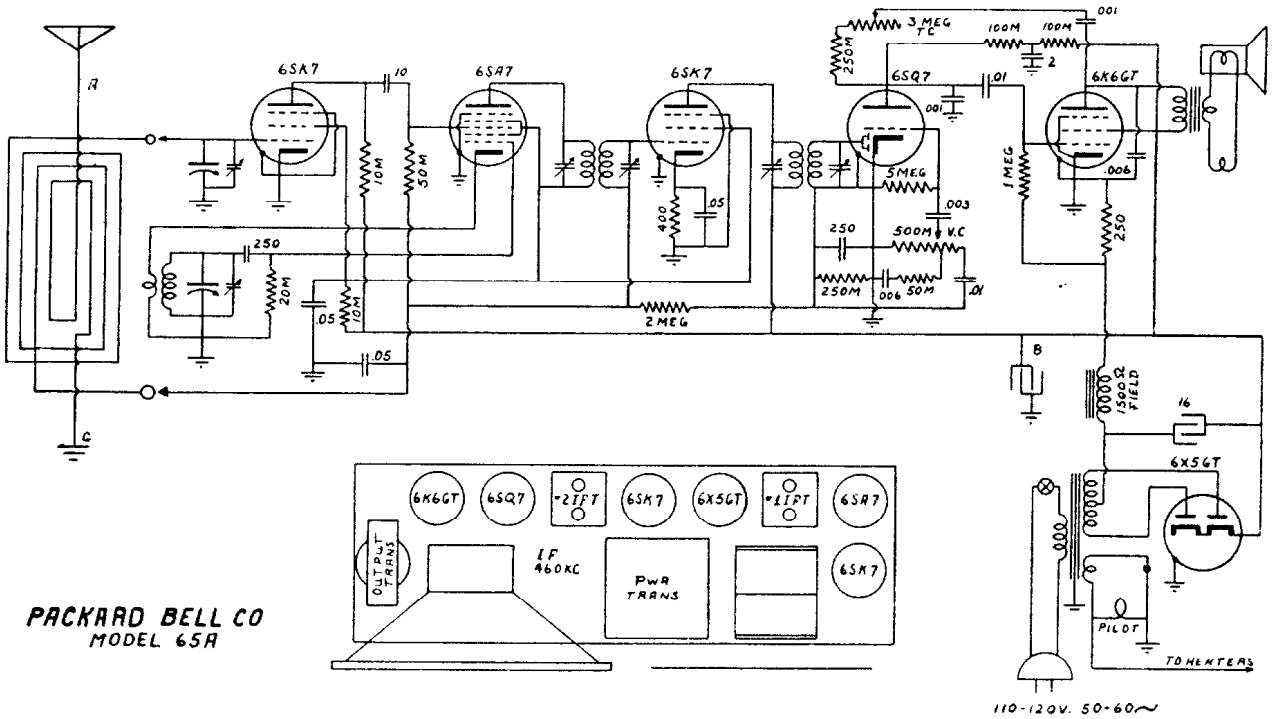

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

NOTE - GROUND TO CHASSIS FOR LOOP OPERATION.

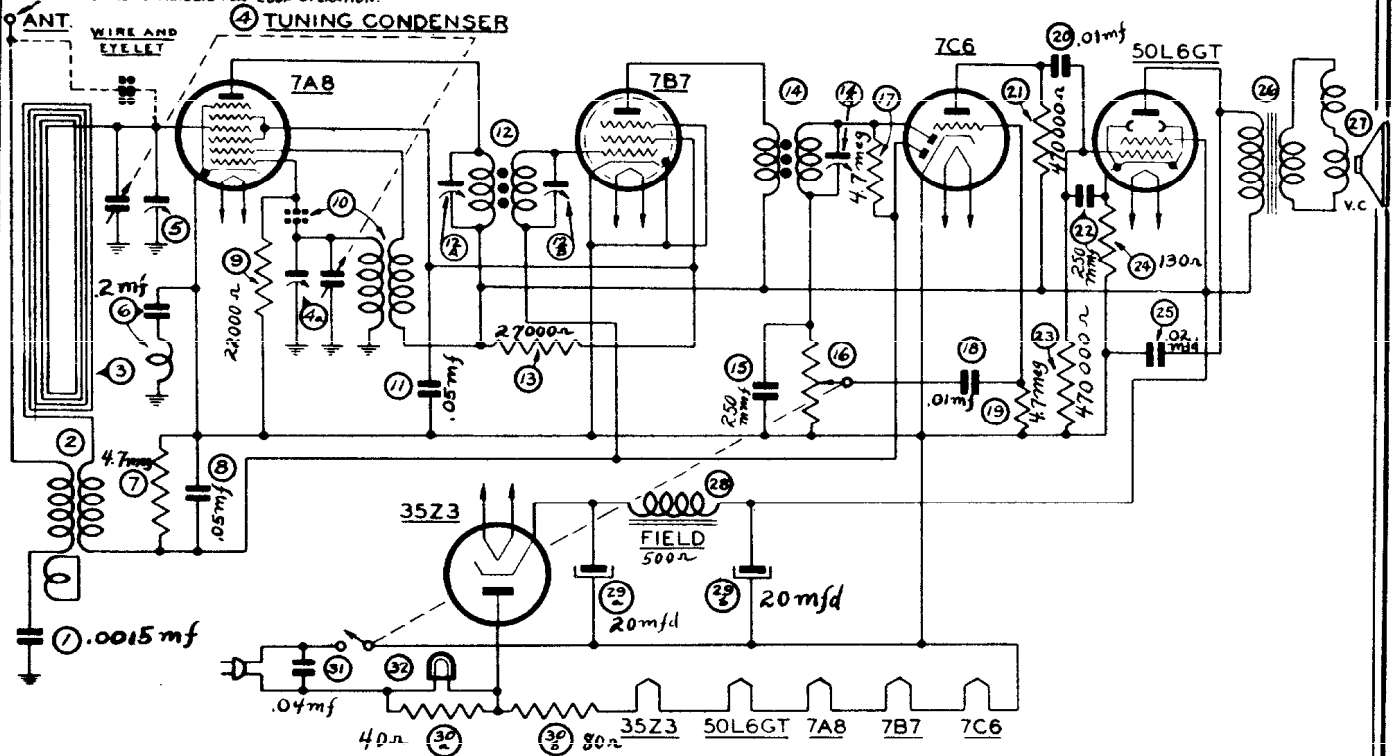

SCHMATIC DIAGRAM — PT-42, PT-44

Models PT-30, PT-42, PT-44, PT-49

Models PT-30, PT-42, PT-44, and PT-49 are five (5) tube A. C. or D. C. operated Super-heterodyne compact radios employing a built-in loop aerial. These Models are similar with the exception of the cabinets, chassis and speaker size.



In addition each Model includes a tuning band from 540 to 1600 K. C., Automatic Volume Control; beam power pentode audio output stage and Philco Loktal tubes.

INTERMEDIATE FREQUENCY: 455 K. C.

POWER SUPPLY: 115 Volts, A. C. or D. C.

PHILCO TUBES: 7A8, converter; 7B7, I. F. Amplifier; 7C6, 2nd detector, A. V. C., 1st audio; 50L6GT, beam power audio output and a 35Z3, rectifier.

AERIAL AND GROUND: Under ordinary operating conditions an outside aerial or ground is not required. In some locations, however, such as steel reinforced buildings and other shielded areas, an outside aerial should be used for maximum performance. For this purpose an outside aerial connection is located on the rear lower left corner of the chassis. Simply remove the lug from under the screw and attach the aerial lead to the lug.

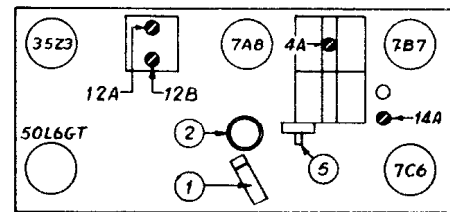
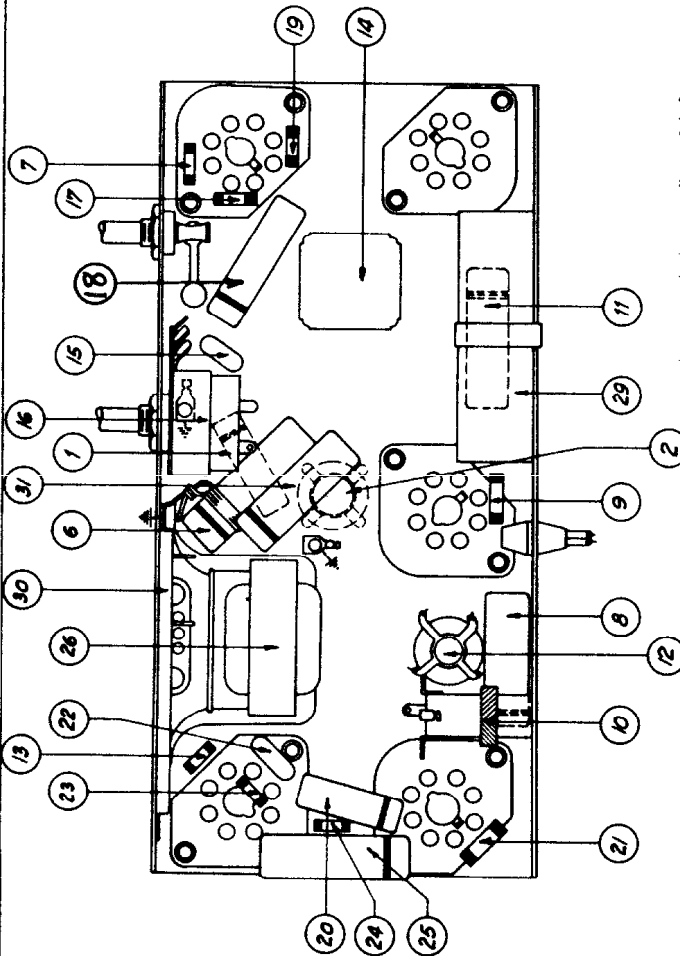


PHILCO

91

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

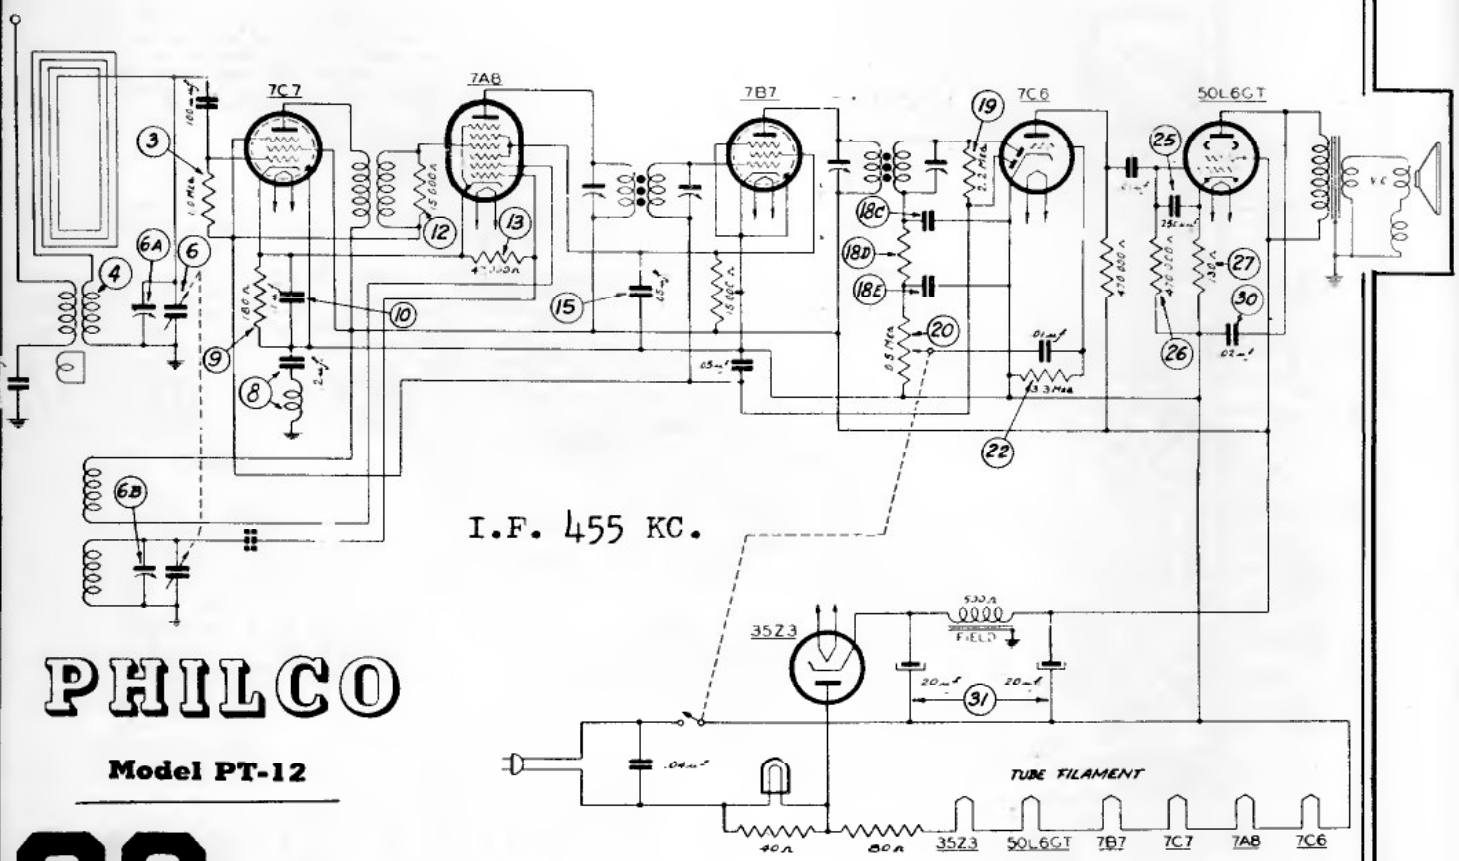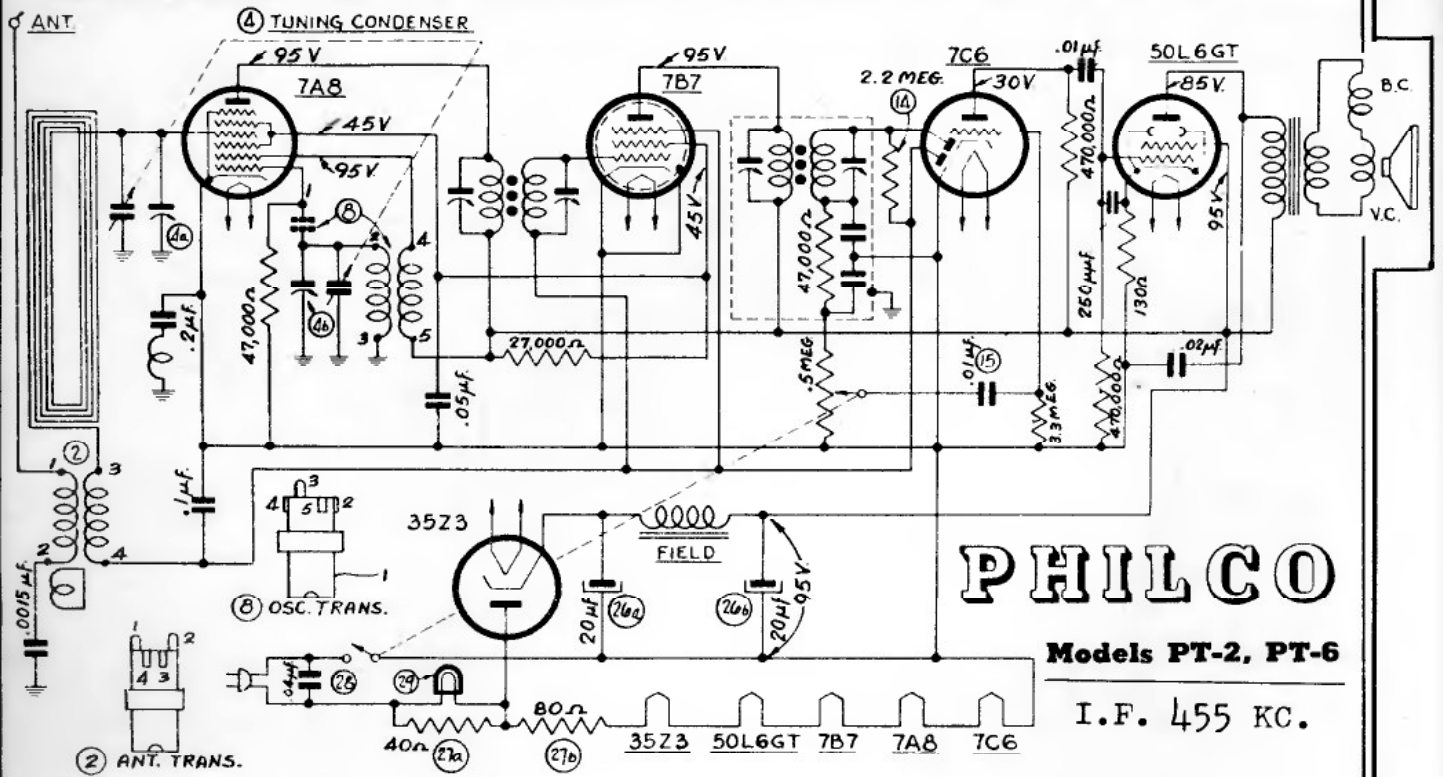

92


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

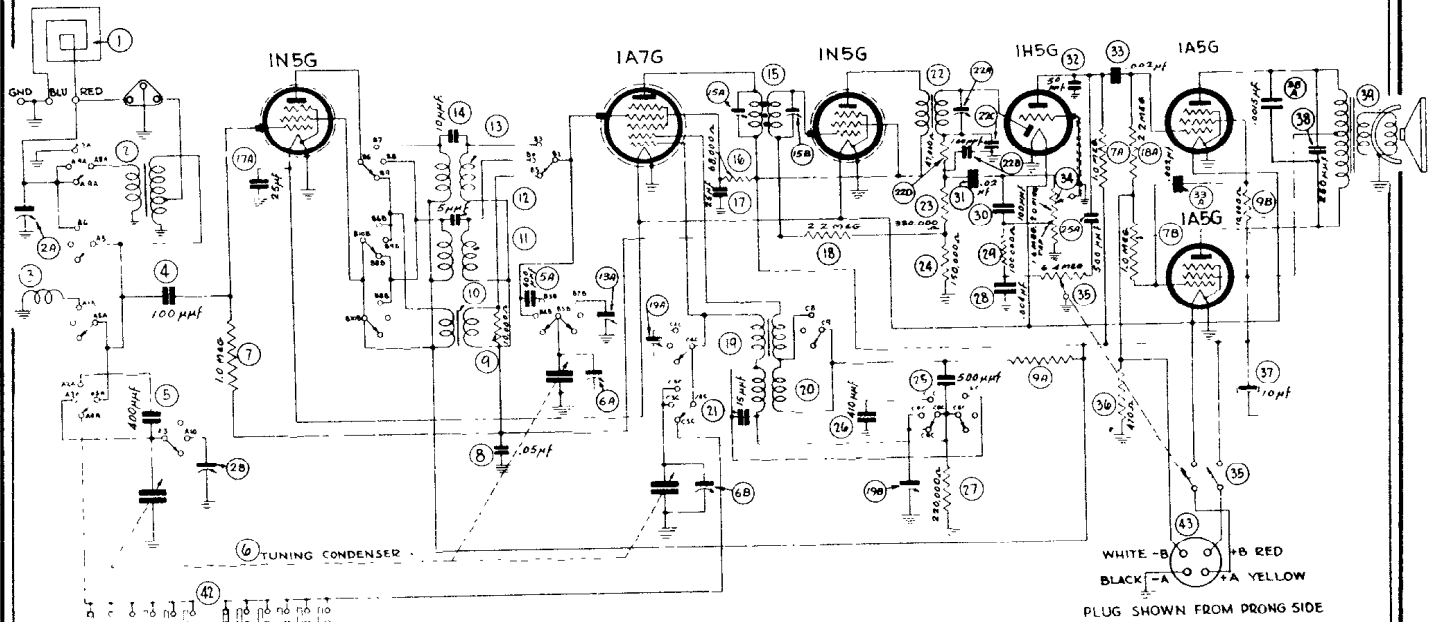


WAVE SWITCH SHOWN IN EXTREME COUNTER CLOCKWISE, PUSH BUTTON POSITION

I.F. = 455 KC.

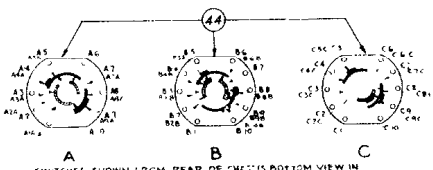


SWITCHES SHOWN FROM REAR OF CHASSIS BOTTOM VIEW IN FIGURE NO. (PUSH BUTTON) LETTERS INDICATE POSITION OF SWITCH WAFERS FROM REAR OF CHASSIS BOTTOM VIEW. SHADED RING IS AT FRONT OF SWITCH WAFER. SOLID RING IS AT REAR OF SWITCH WAFER.

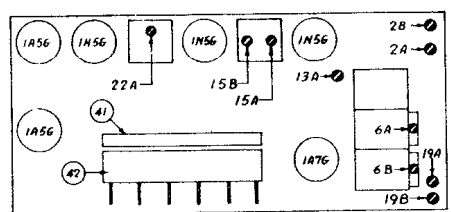

Operations in Order	SIGNAL GENERATOR			RECEIVER		
	Output Connections	Dummy Aerial	Dial Setting	Dial Setting	Control Settings	Adjust Compensators
1	1A7G (Grid)	.1 mmfd.	455 K. C.	540 K. C.	Vol. Max. Range Switch Brdcast.	15A, 15B, 22A
2	Aerial Connection Receiver	225 mmfd.	1500 K. C.	1500 K. C.	Vol. Max. Range Switch Brdcast.	Osc., R. F., aerial, 6B, 6A, 2B
3	Aerial Connection Receiver	225 mmfd.	580 K. C.	580 K. C.	Vol. Max. Range Switch Brdcast.	9B
4	Aerial Connection Receiver	Recheck Operation No. 2				
5	Aerial Connection Receiver	400 Ohms	12 M. C.	12 M. C.	Range Switch S. W.	Osc., R. F., Ant. 19A, 13A, 2A

Model 41-110

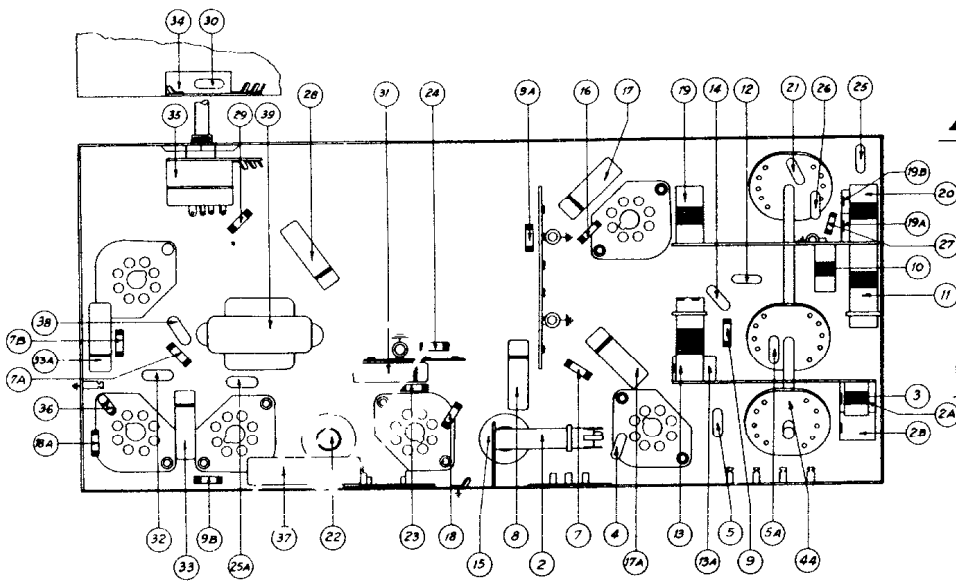


PART LOCATIONS, UNDERSIDE OF CHASSIS

PHILCO

93

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

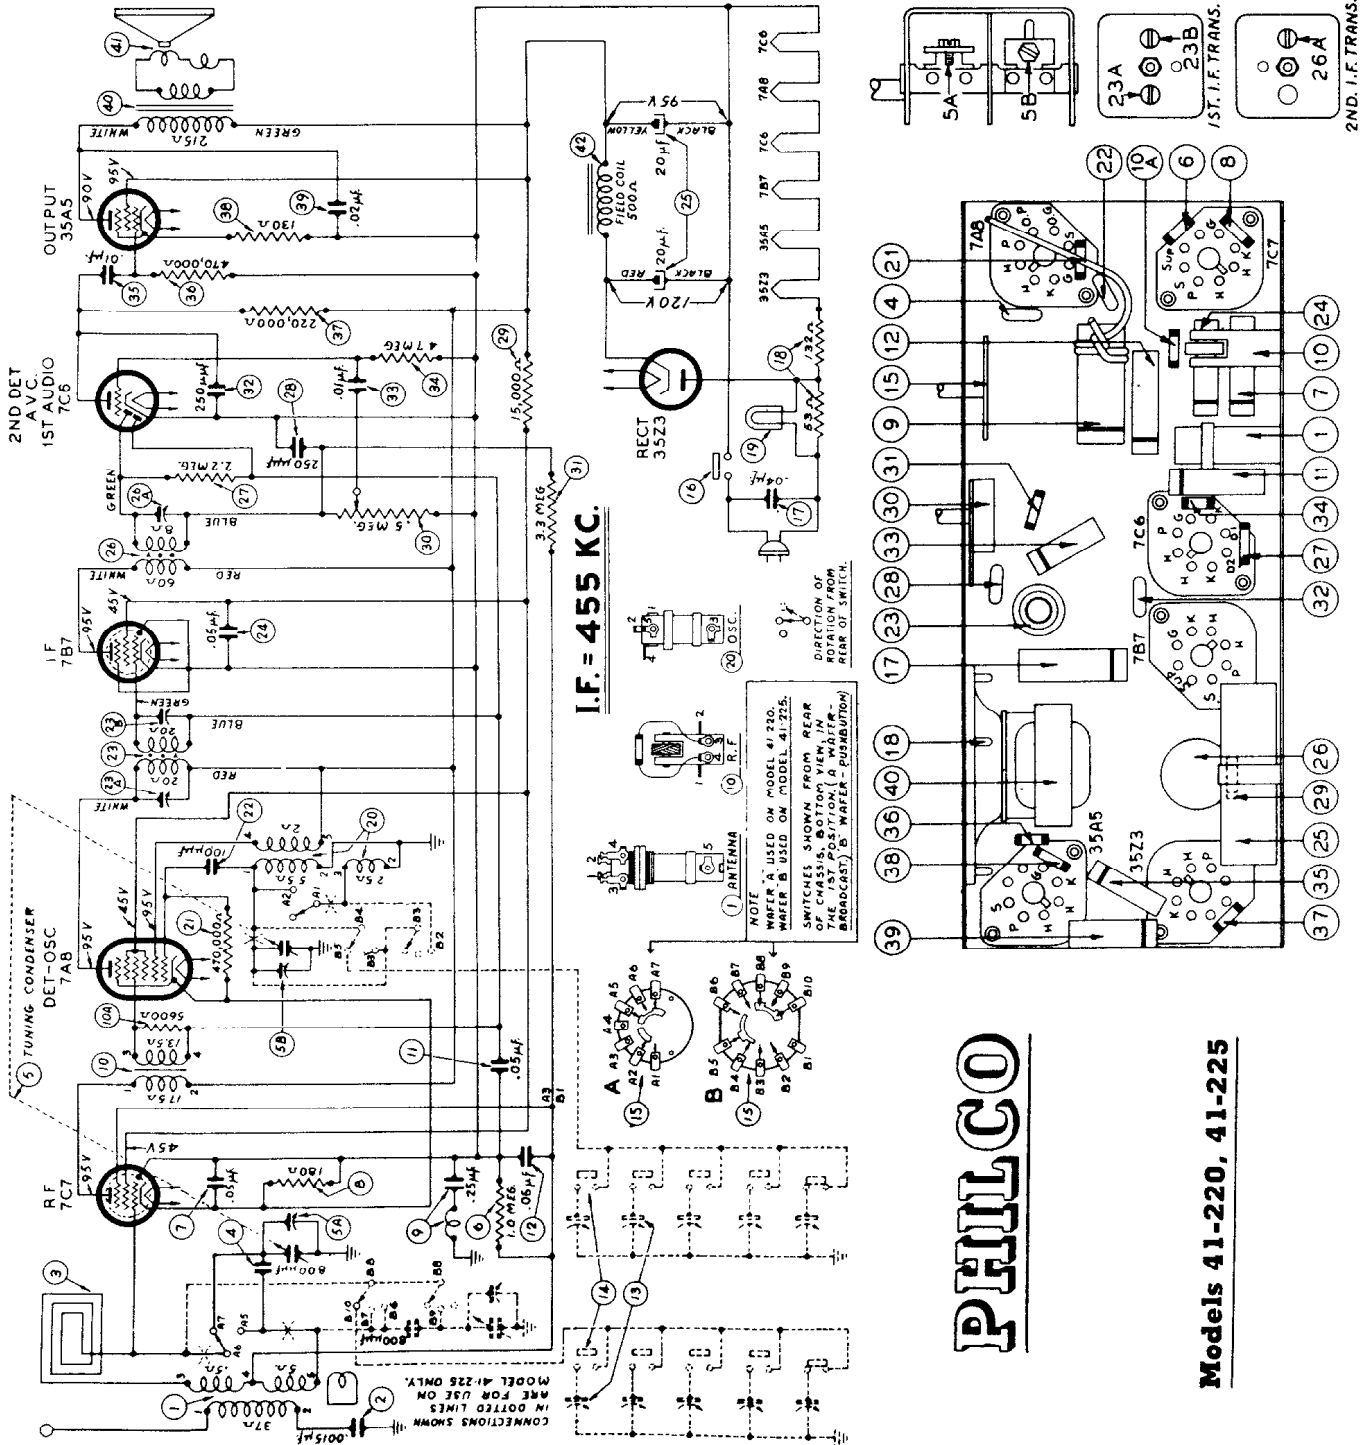


PHILCO

Models 41-220, 41-225

Operations in Order	SIGNAL GENERATOR		RECEIVER		
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Setting	Adjust Compensators in Order
1	Ant. Section of Tuning Cond.	455 K. C.	540 K. C. Tuning Cond. Closed	Vol. Max. Range Switch "Brdst"	26A, 23B, 23A
2	Loop—See above Instructions	1600 K. C.	1600 K. C.	Vol. Max. Range Switch "Brdst"	5B Tuning Condenser
3	Loop—See above Instructions	1500 K. C.	1500 K. C.	Vol. Max. Range Switch "Brdst"	5A Tuning Condenser

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

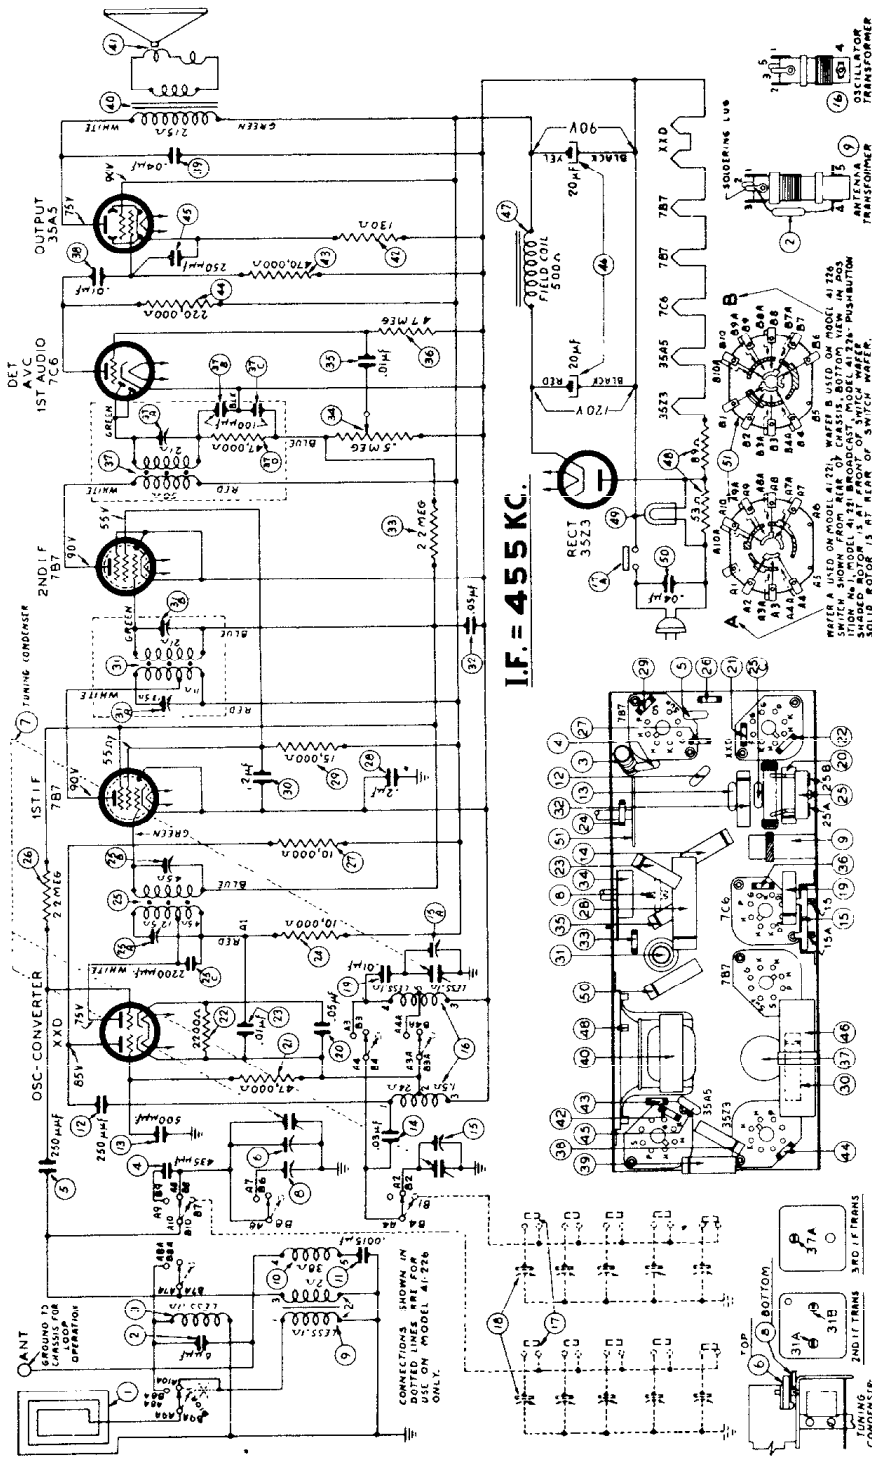

Philco Radio, Models 41-221, 41-226

CONNECTING ALIGNING INSTRUMENTS

Audio Output Meter: If this type of aligning meter is used, connect it to the voice coil terminals of the speaker or from the plate of the 35A5 tube to the chassis. Adjust the meter for the 0 to 10 volt scale.

Vacuum Tube Voltmeter: To use the vacuum tube voltmeter as an aligning indicator, make the following connections: Attach the negative (—) terminal of the voltmeter to any point in the circuit where the A. V. C. voltage can be obtained. Connect the positive (+) terminal of the vacuum tube voltmeter to the chassis.

Signal Generator: When adjusting the I. F. padders, the high side of the signal generator is connected through a .1 mfd. condenser to the antenna section of the tuning condenser. Connect the ground or low side of the generator to the chassis.

When aligning the R. F. padders a loop is made from a few turns of wire and connected to the signal generator output terminals; the signal generator is then placed close to the loop of the radio.

The receiver can be adjusted in the cabinet or removed from the cabinet.

When adjusting the radio outside the cabinet the loop aerial should be placed in approximately the same position around or near the chassis as when assembled.

After connecting the aligning instruments adjust the compensators as shown in the tabulation below. Locations of the compensators are shown in the schematic diagram.

If the indicating meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.


Operations in Order	SIGNAL GENERATOR		RECEIVER		
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Setting	Adjust Compensators in Order
1	Ant. Section of tuning	455 K. C.	540 K. C. Tuning Cond. Closed	Vol. Max. Range Switch Brdcast.	37A, 31A, 31B, 25A, 25B
2	Loop see above instructions	1600 K. C.	1600 K. C.	Vol. Max. Range Switch Brdcast.	15
3	Loop see above instructions	1500 K. C.	1500 K. C.	Vol. Max. Range Switch Brdcast.	6
4	Loop see above instructions	12 M. C.	12 M. C.	Range Switch "S. W."	15A, 8

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

95

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

I.F. = 455 KC.

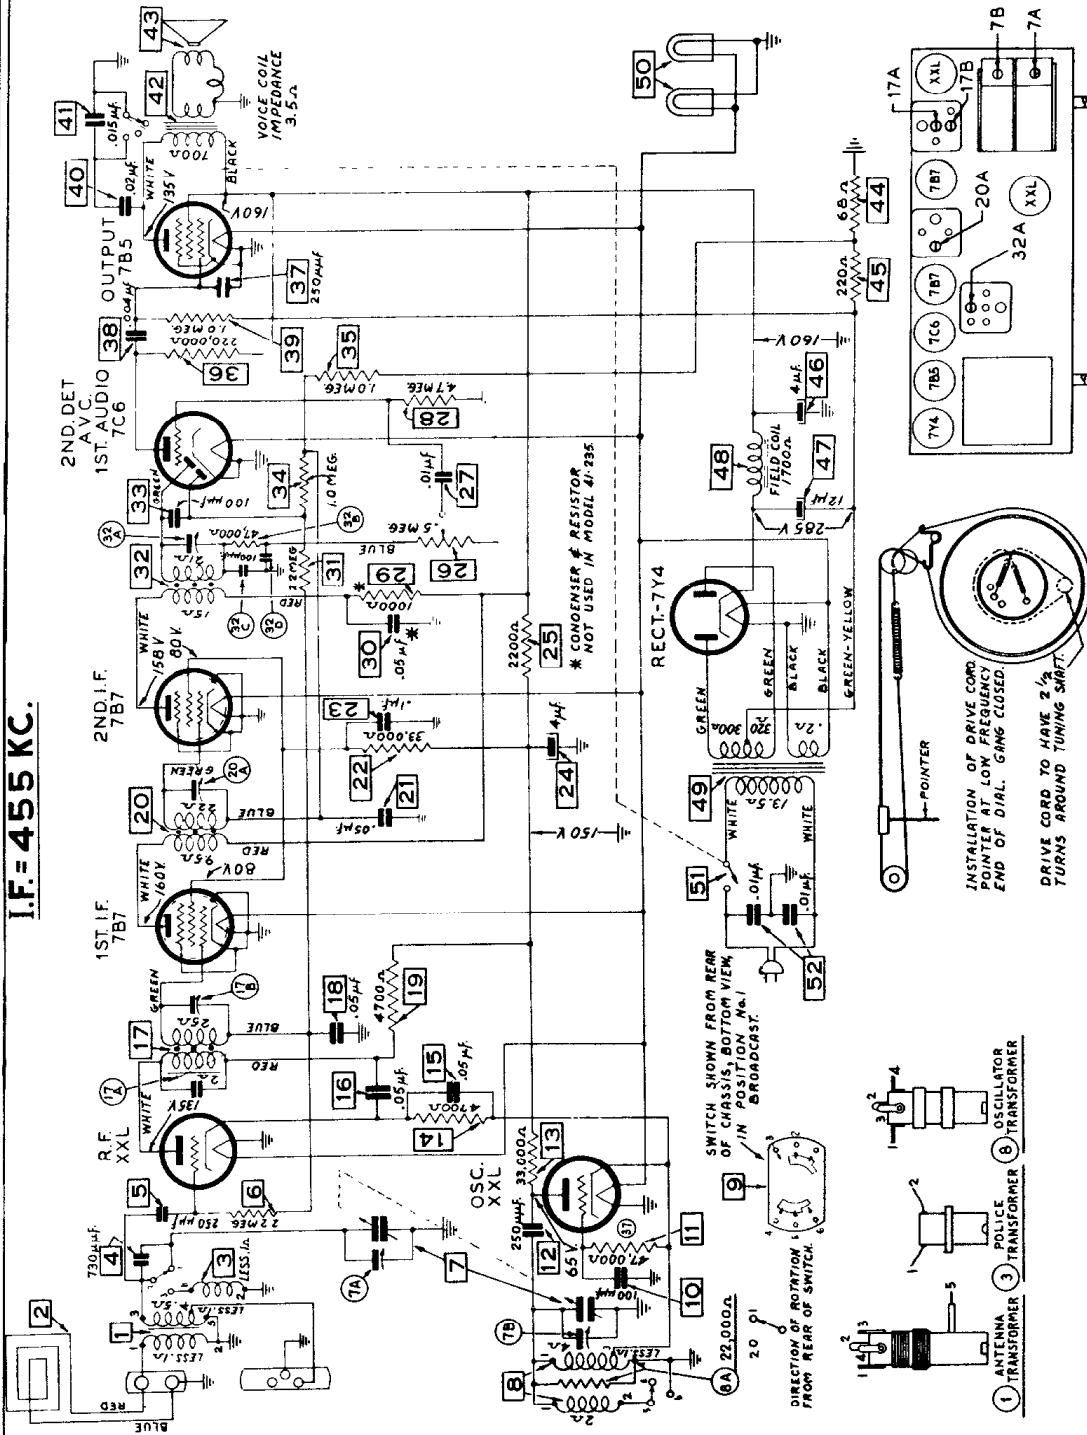

PHILCO Philadelphia, Pa.


Models 41-230; 41-235, Code 121

Operations in Order	SIGNAL GENERATOR		RECEIVER		
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Setting	Adjust Compensators in Order
1	Ant. Section of Tuning Cond.	455 K. C.	540 K. C. Tuning Cond. Closed	Vol. Max. Range Switch "Brdcat"	32A, 20A 17B, 17A
2	Loop—See above Instructions	1600 K. C.	1600 K. C.	Vol. Max. Range Switch "Brdcat"	7B
3	Loop—See above Instructions	1500 K. C.	1500 K. C.	Vol. Max. Range Switch "Brdcat"	7A

96


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

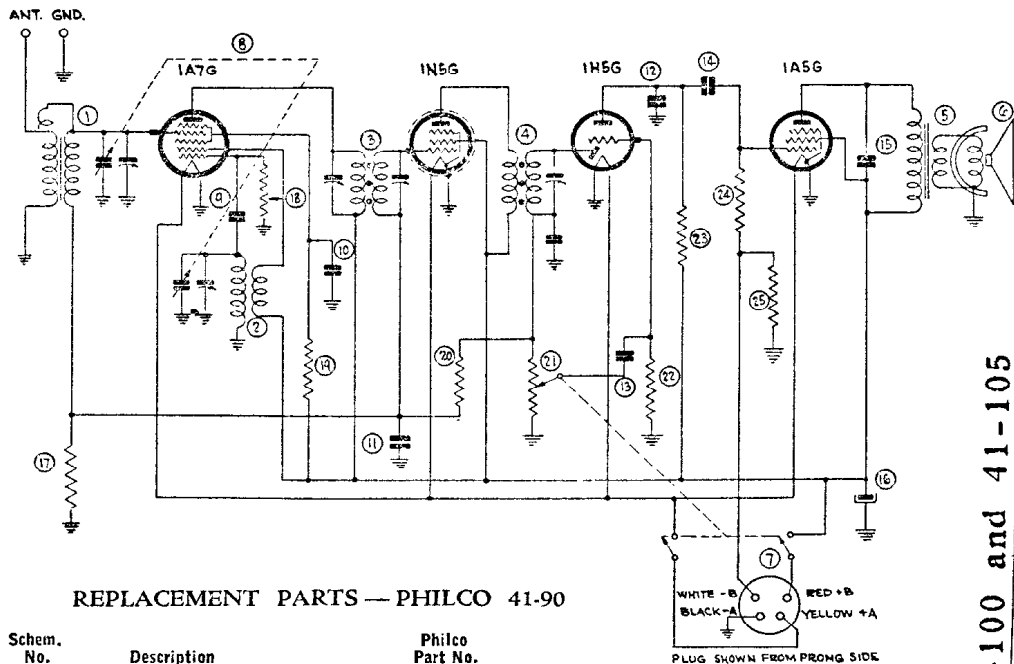

REPLACEMENT PARTS — PHILCO 41-90


Schem. No.	Description	Philco Part No.
1	Antenna Transformer	32-3490
2	Oscillator Transformer	32-3491
3	First I.F. Transformer	32-3492
4	Second I.F. Transformer	32-3199
5	Output Transformer	32-8100
6	Speaker	36-1507
7	Battery Cable	41-3505
8	Tuning Condenser	31-2485
9	Moulded Mica Condenser (100 mmf.)	60-110157
10	Tubular Condenser (.05 mf. 200 V)	30-4519
11	Tubular Condenser (.05 mf. 200 V)	30-4519
12	Moulded Mica Condenser (100 mmf.)	60-110157
13	Tubular Condenser (.004 mf. 400 V)	30-4578
14	Tubular Condenser (.01 mf. 400 V)	30-4572
15	Moulded Mica Condenser (500 mmf.)	60-150157
16	Electrolytic Condenser (10 mf. 150 V)	30-2396
17	Resistor (4.7 meg. 1/4 watt)	33-547154
18	Resistor (220,000 ohms 1/4 watt)	33-422154
19	Resistor (68,000 ohms 1/4 watt)	33-368154
20	Resistor (10 meg. 1/4 watt)	33-610154
21	Volume Control and "On-Off" Switch	33-5407
22	Resistor (4.7 meg. 1/4 watt)	33-547154
23	Resistor (1.0 meg. 1/4 watt)	33-510154
24	Resistor (2.2 meg. 1/4 watt)	33-522154
25	Resistor (1000 ohms 1/2 watt)	33-210336

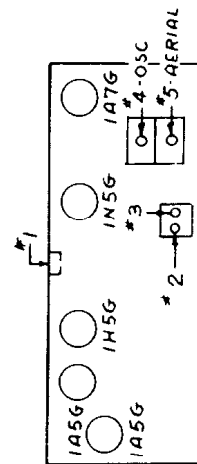

FRONT
MODELS 41-95, 41-100.

Philco Models 41-100 and 41-105 are similar to the illustrated circuits.

Models 41-90, 41-95, 41-100

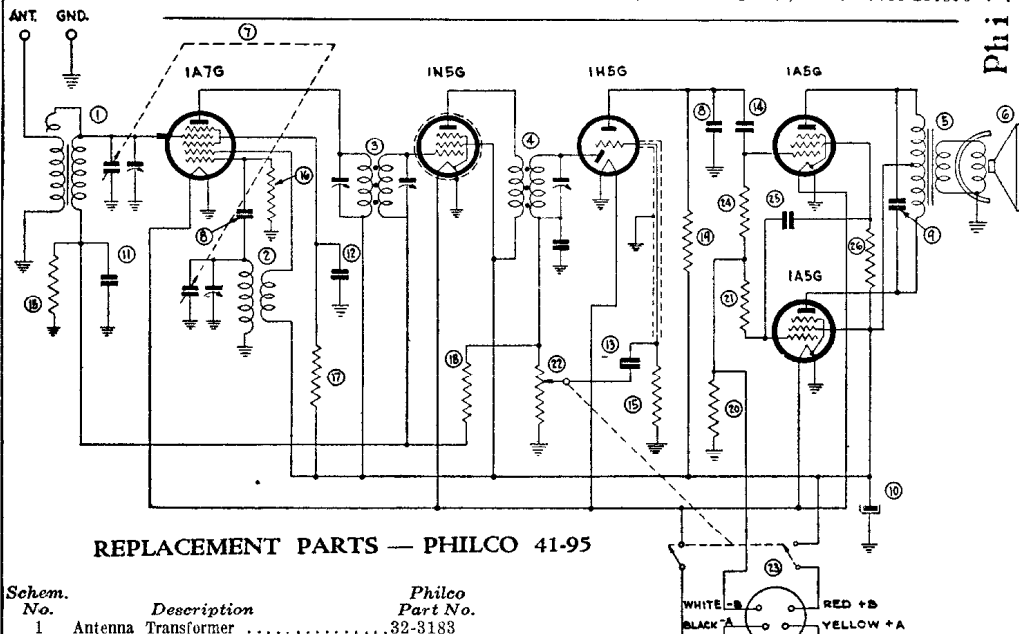


REPLACEMENT PARTS — PHILCO 41-95

Schem. No.	Description	Philco Part No.
1	Antenna Transformer	32-3183
2	Oscillator Transformer	32-3184
3	1st I. F. Transformer	32-3198
4	2nd I. F. Transformer	32-3199
5	Output Transformer	32-8107
6A	8" Speaker for Console	36-1477
7	Tuning Condenser	31-2457
8	Moulded Mica Condenser (100 mmf.)	60-110157
9	Moulded Mica Condenser (250 mmf.)	60-125157
10	Electrolytic Condenser (10 mf., 150 v)	30-2396
11	Tubular Condenser (.05 mf., 200 v)	30-4519
12	Tubular Condenser (.05 mf., 200 v)	30-4444
13	Tubular Condenser (.004 mf., 400 v)	30-4578
14	Tubular Condenser (.01 mf., 400 v)	30-4572
15	Resistor (4.7 Meg., 1/4 watt)	33-547154
16	Resistor (220,000 ohms, 1/4 watt)	33-422154
17	Resistor (68,000 ohms, 1/4 watt)	33-368154
18	Resistor (10 Meg., 1/4 watt)	33-610154
19	Resistor (1 Meg., 1/4 watt)	33-510154
20	Resistor (680 ohms, 1/2 watt)	33-168326
21	Resistor (2.2 Meg., 1/4 watt)	33-522154
24	Resistor (2.2 Meg., 1/4 watt)	33-522154
25	Tubular Condenser (.01 mf., 400 v)	30-4572
26	Resistor (10,000 ohms, 1/2 watt)	33-310154

Opera- tions in Order	SIGNAL GENERATOR		RECEIVER	
	Output Connections	Dummy Antenna Note A	Dial Setting	Controls
1	1A7G (Grid)	.1 mfd.	540 K. C.	Vol. Max.
2	Aerial Connection	225 mmfd.	1500 K. C.	Vol. Max.
			Adjust Compensators	1, 2, 3
				4 Osc., 5 aerial

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

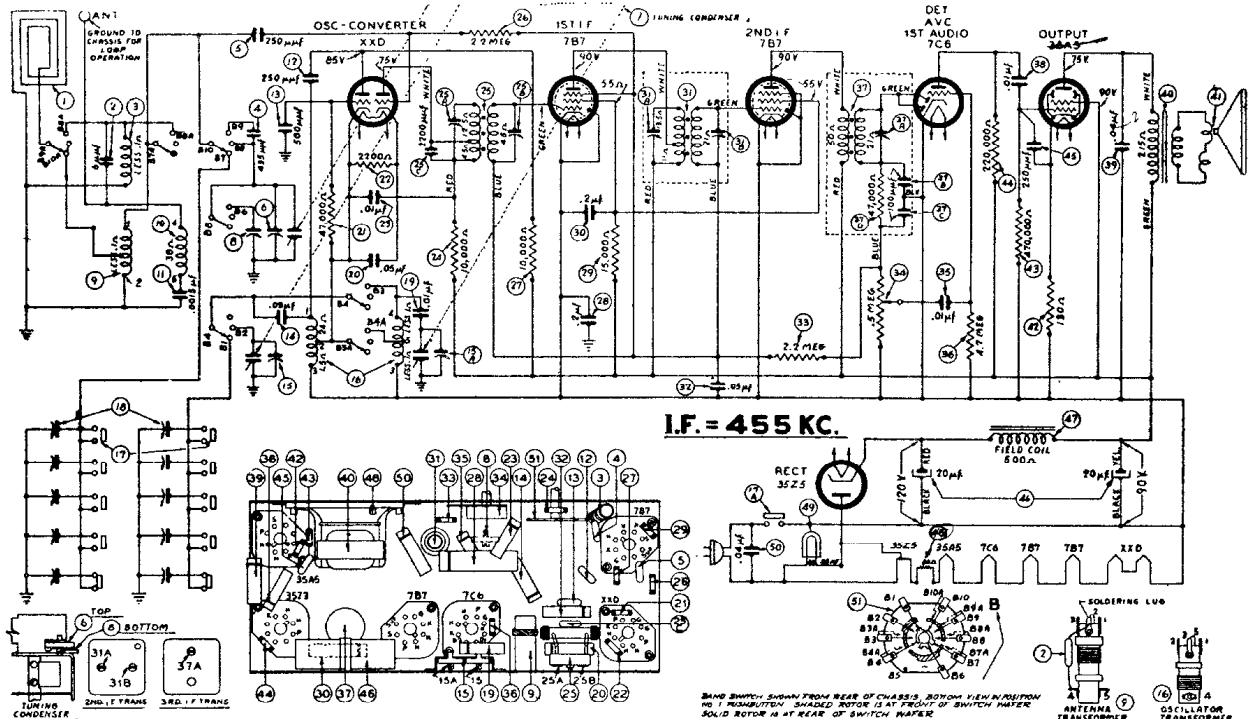



PHILCO

Models 41-231, Code 121

SCHEMATIC DIAGRAM — MODEL 41-246, CODE 121

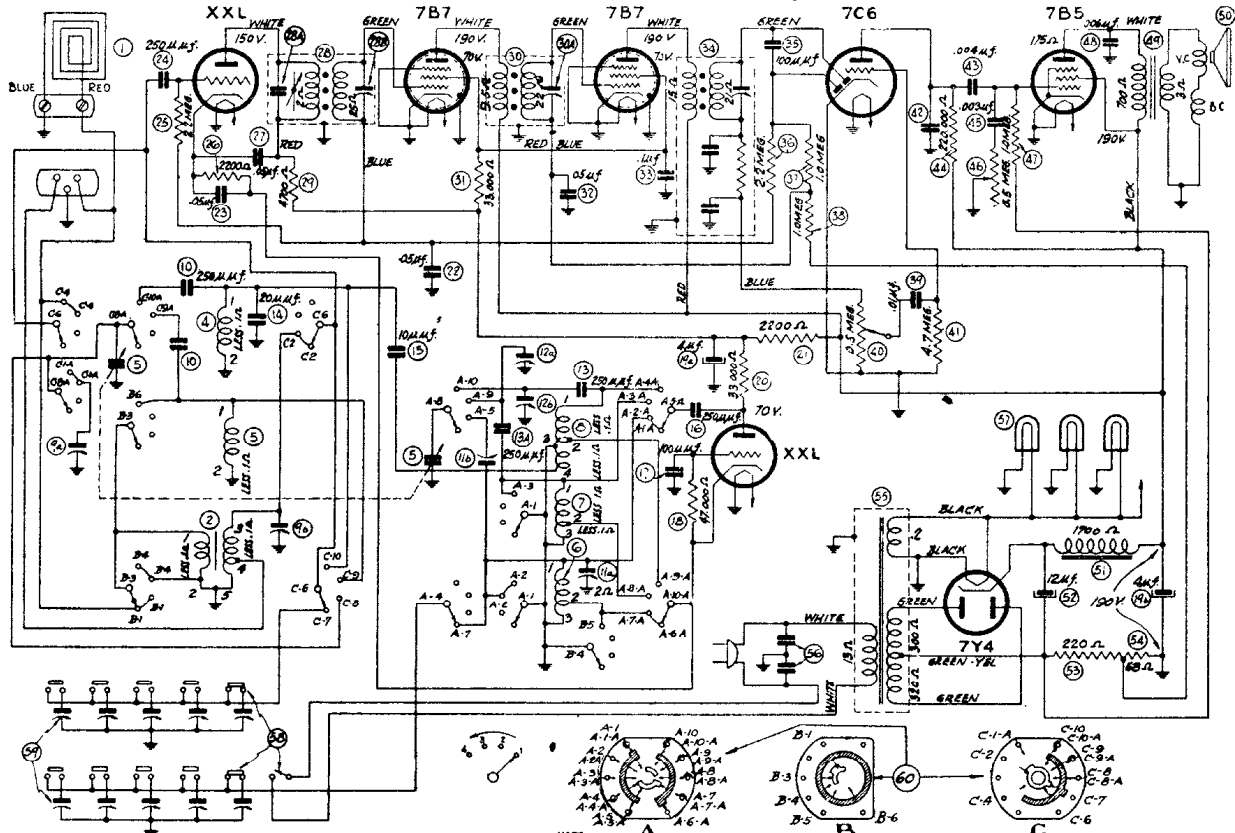


98

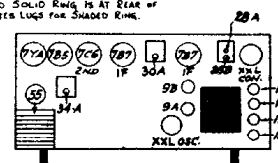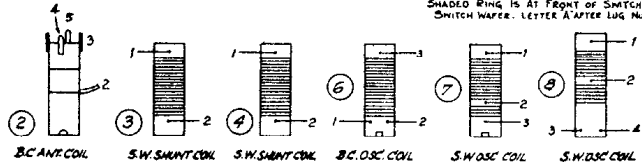


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS


Models 41-250, 41-255; Code 121

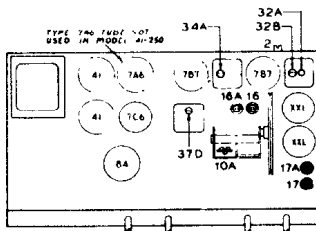


PHILCO

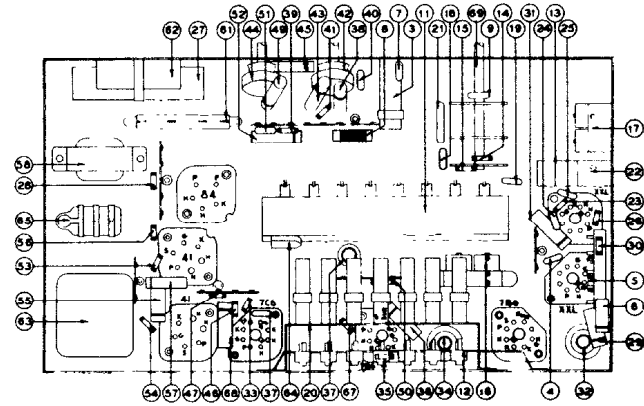


LOCATIONS OF PARTS AND TUBES
UNDERSIDE OF CHASSIS — MODEL 41-250

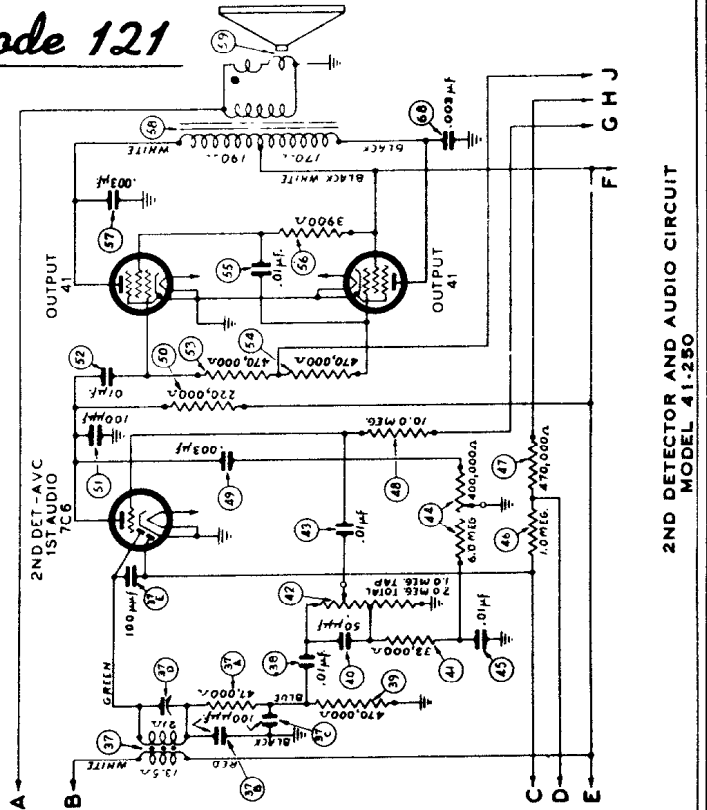


2ND DETECTOR AND AUDIO CIRCUIT
MODEL 41-250

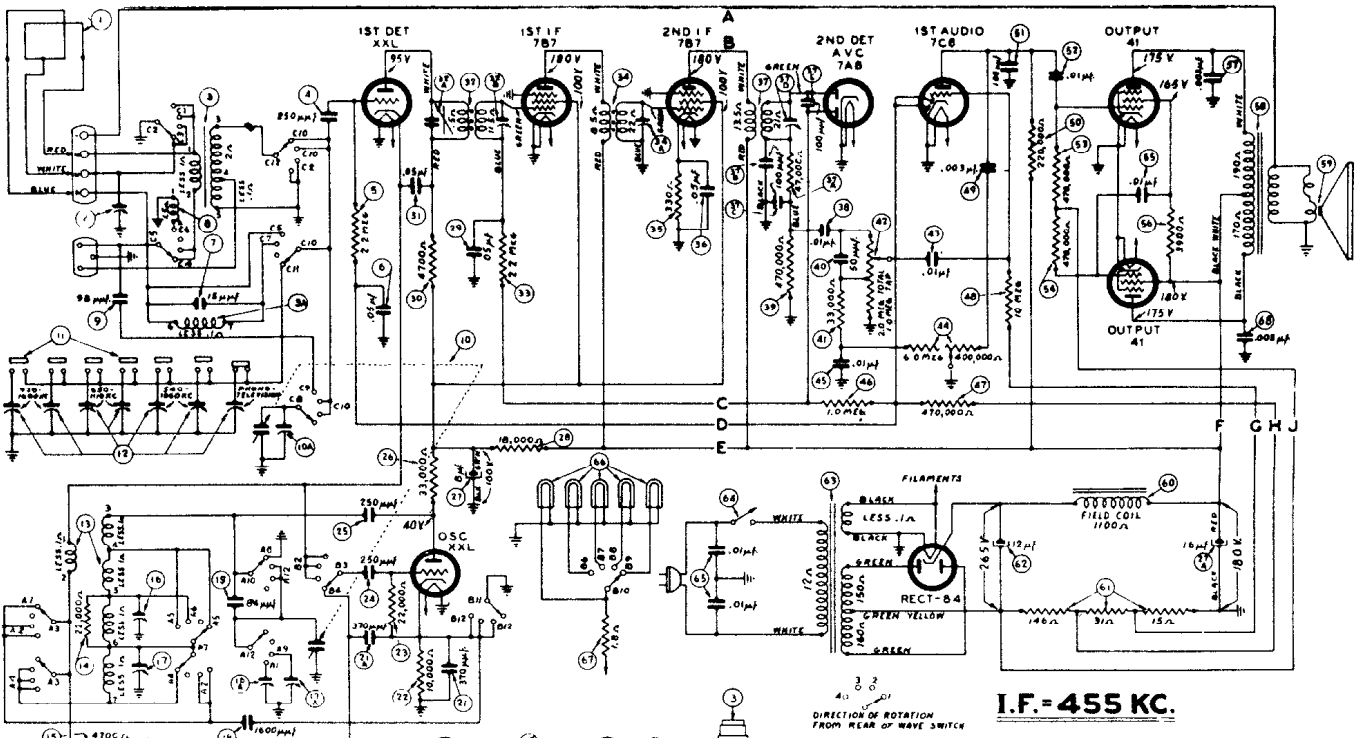

I.F. = 455 KC.

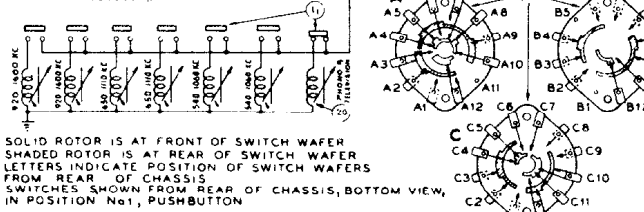


SOLID ROTOR IS AT FRONT OF SWITCH WAFER
SHADED ROTOR IS AT REAR OF SWITCH WAFER
LETTERS INDICATE POSITION OF SWITCH WAFERS
FROM REAR OF CHASSIS
SWITCHES SHOWN FROM REAR OF CHASSIS, BOTTOM VIEW,
IN POSITION No. 1, PUSHBUTTON

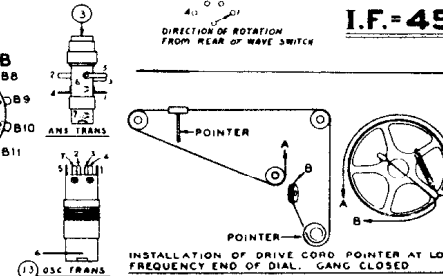

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

99

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

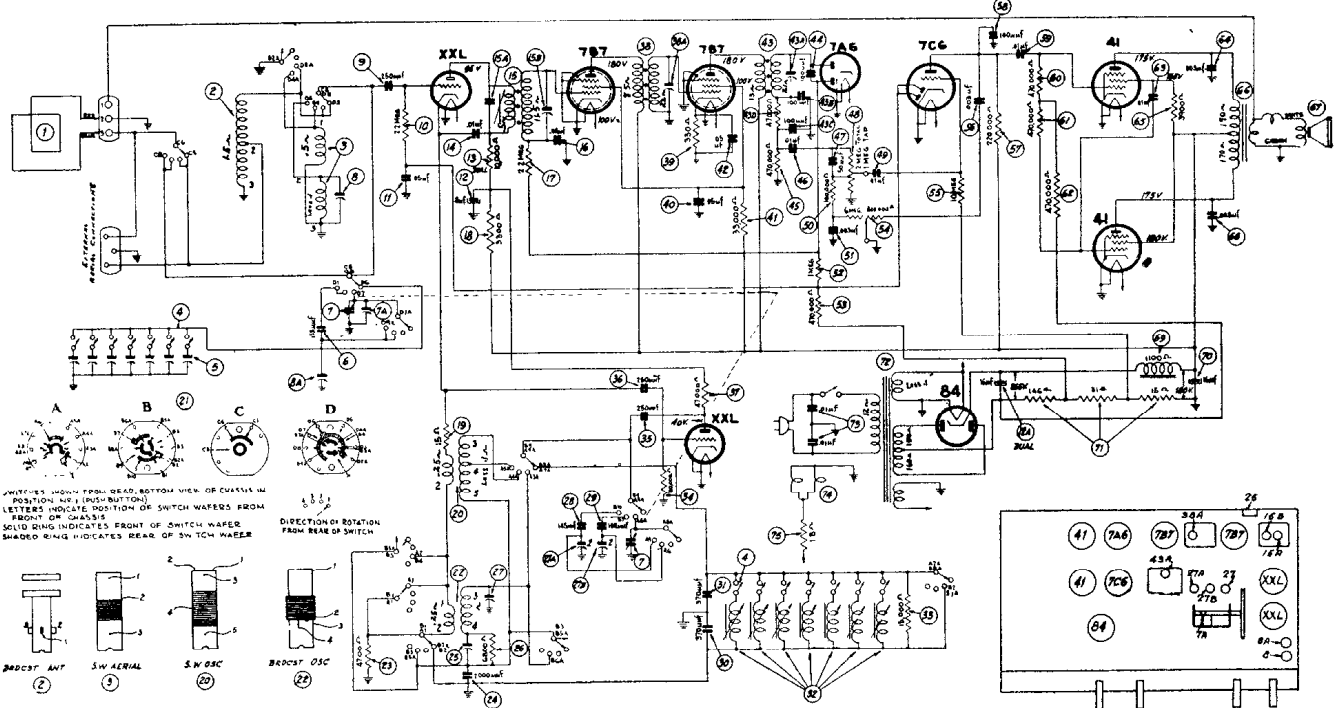


Operations in Order	SIGNAL GENERATOR		RECEIVER		
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Settings	Adjust Compensators in Order
1	High side to No. 3 terminal loop panel	455 K. C.	580 K. C.	Vol. Max. Range Switch "S. W." Positions	15A, 15B, 38A, 43A
2	Use loop on generator	1500 K. C.	1500 K. C.	Vol. Max. Range Switch Broadcast	27, 7A
3	Use loop on generator	580 K. C.	580 K. C.	Vol. Max. Range Switch Broadcast	25
4	Use loop on generator			Perform operation No. 2 again	
5	Use loop on generator	12 M. C.	12 M. C.	Range Switch "SW-1"	27B, 8A
6	Use loop on generator	18 M. C.	18 M. C.	Range Switch "SW-2"	27A, 8

ELECTRIC PUSH-BUTTON TUNING: The automatic tuning mechanism of each model is identical and consists of eight (8) electric tuning push-buttons, seven (7) of the push-buttons are used for selecting broadcast stations, and one as the power control (On-Off switch).

When aligning the R. F. padders a loop is made from a few turns of wire and connected to the signal generator output terminals; the loop is then placed two or three feet from the loop in the cabinet. Do not remove the receiving loop from the cabinet. It is necessary when adjusting the padders, that the receiver be left in the cabinet.

After connecting the aligning indicator, adjust the compensators in the order shown in the tabulation below. Locations of the compensators are shown on the schematic diagram. If the output meter pointer goes off scale when adjusting the compensators, reduce the strength of the signal from the generator.

NOTE A—DIAL CALIBRATION: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum capacity), set the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable in this position is shown in the schematic.

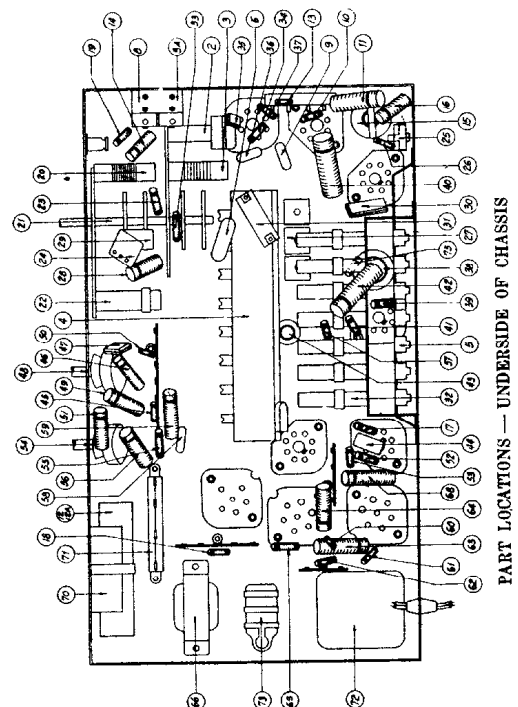

Model 41-256, Code 121


100

PHILCO

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS


Operations in Order	SIGNAL GENERATOR		RECEIVER		
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Settings	Adjust Compensators in order
1	Ant. Section of Tuning Cond.	455 K. C.	540 K. C. Tuning Cond. Closed	Vol Max. Range Switch Brdcast.	16A, 16B, 22A, 22B, 25A
2	Loop see above instructions	1600 K. C.	1600 K. C.	Vol Max. Range Switch Brdcast.	6B Tuning Condenser
3	Loop see above instructions	1500 K. C.	1500 K. C.	Vol Max. Range Switch Brdcast.	6A Tuning Condenser

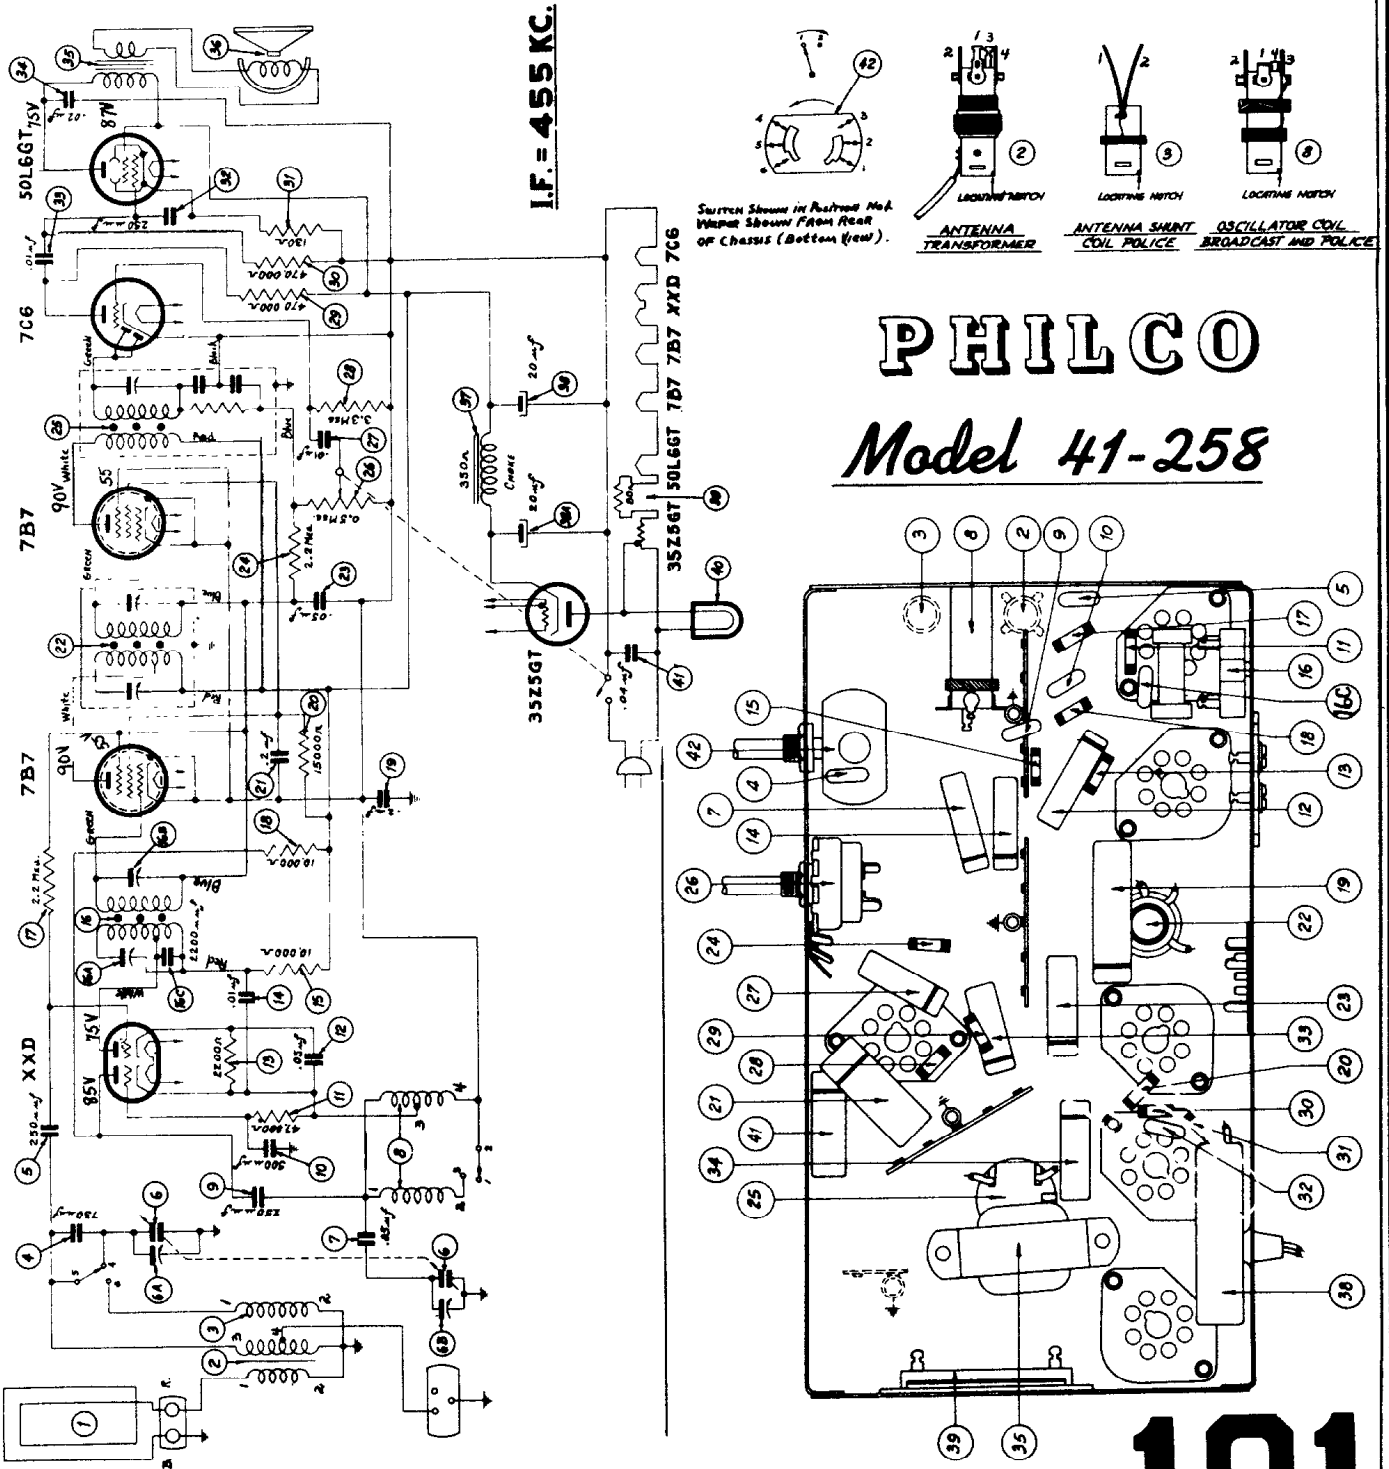

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

101

PHILCO Models 41-260; 41-265

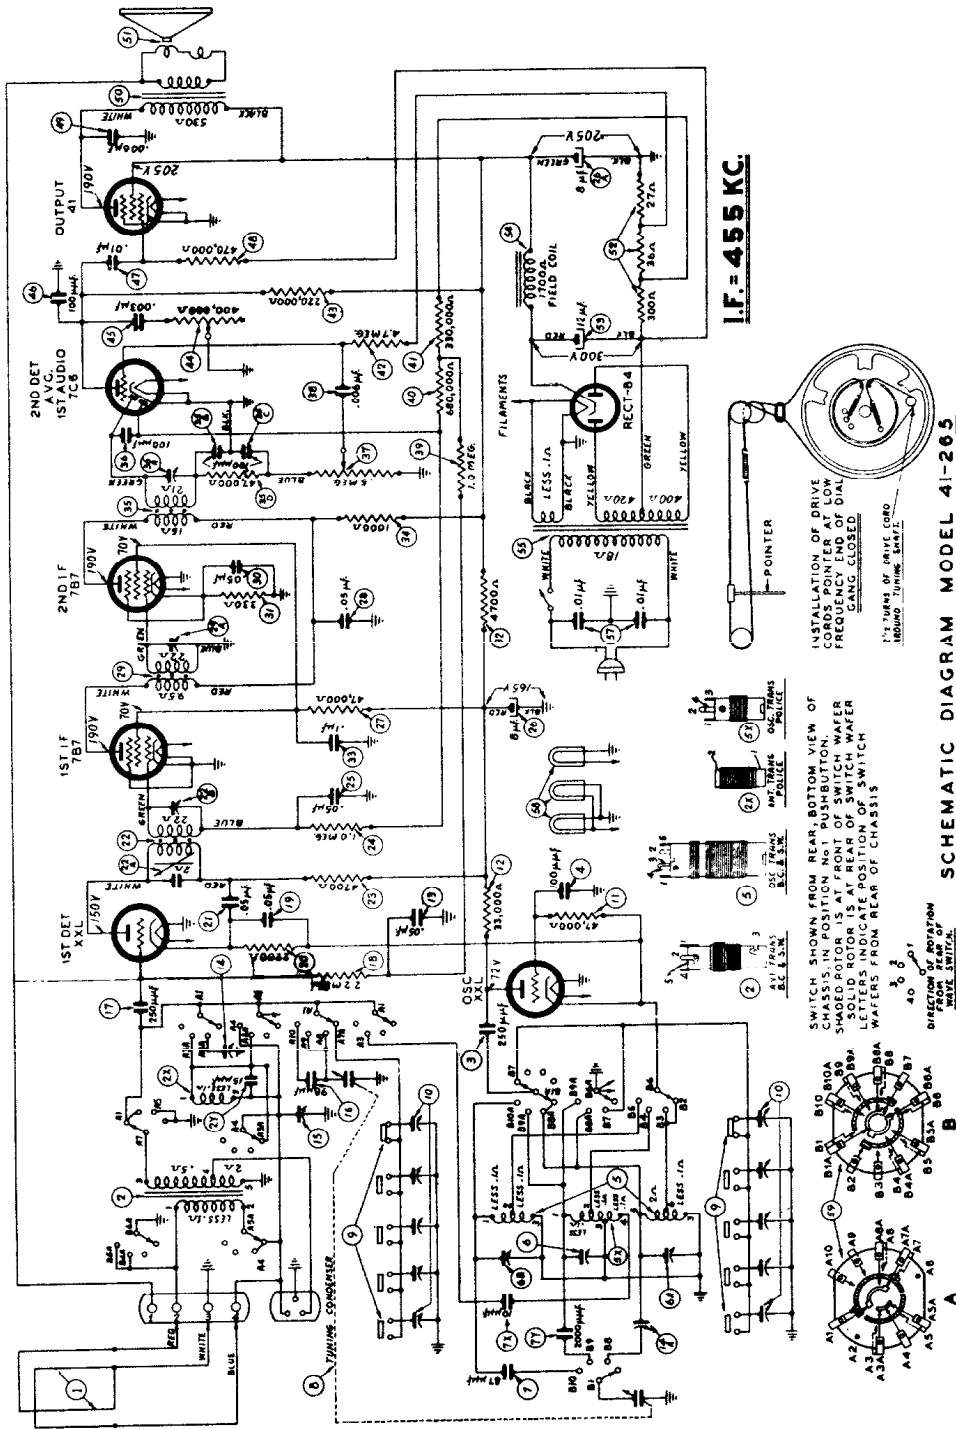

SCHEMATIC DIAGRAM MODEL 41-265

	Ant. Section of Tuning Cond.	455 K. C.	Tuning Cond. Closed	Vol. Max. Range Switch "Brdcst"	35A, 29A, 22A, 22B
1	Loop to Radio Loop See Sig. Gen. Above	1720 K. C.	1720 K. C.	Vol. Max. Range Switch "Brdcst"	6A
2	Loop to Radio Loop See Sig. Gen. Above	1500 K. C.	1500 K. C.	Vol. Max. Range Switch "Brdcst"	14
3	Loop to Radio Loop See Sig. Gen. Above	580 K. C.	580 K. C.	Vol. Max. Range Switch "Brdcst"	14A
4	Loop to Radio Loop See Sig. Gen. Above	6 M. C.	6 M. C.	Range Switch Police	6
5	Loop to Radio Loop See Sig. Gen. Above	12 M. C.	12 M. C.	Range Switch S. W.	6B, 15

Models 41-260 and 41-265 are seven (7) tube alternating current (A. C.) operated superheterodyne radios incorporating electric push button in addition to manual tuning — and the new Philco built-in American and overseas loop aerial system. These models are also designed to receive the sound of a television program tuned in by special type Philco Television Radios.

In general, these models are similar with the exception of the tuning ranges and cabinet design. Model 41-260 has two (2) tuning ranges covering 540 to 1720 K. C. and 9.0 to 12.0 M. C. Model 41-265 consists of three (3) tuning ranges covering 540 to 1720 K. C., 2.0 to 7.0 M. C. and 9.0 to 12 M. C.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Operations in Order	SIGNAL GENERATOR		RECEIVER		SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dial Setting	Control Settings	Adjust Compensators in order	
1	High side to No. 4 terminal loop panel.	455 K. C.	Vol. Max. Range Switch "S. W." Positions	32A, 32B 34A, 37D	Roll Tuning Condensers Note B
2	Use loop on generator	1500 K. C.	Vol. Max. Range Switch Broadcast	16, 10	
3	Use loop on generator	580 K. C.	Vol. Max. Range Switch Broadcast	17	
4	Use loop on generator	Perform operation No. 2 again			
5	Use loop on generator	6 M. C.	Range Switch "Police"	16A	
6	Use loop on generator	12 M. C.	Range Switch "S. W."	17A, 2	

NOTE A — DIAL CALIBRATION: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum capacity), set the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable in this position is shown in the schematic.


NOTE B — When adjusting the low frequency compensator of Range One (Broadcast) or the aerial padders of the high frequency tuning range; the receiver Tuning Condenser must be adjusted (rolled) as follows: First tune the compensator for maximum output, then vary the tuning condenser of the receiver for maximum output. Now turn the compensator slightly to the right or left and again vary the first receiver tuning condenser for maximum output. This procedure of first

setting the compensator and then varying the tuning condenser is continued until maximum output reading is obtained.


NOTE C — To accurately adjust the high frequency oscillator compensator to the fundamental instead of the image signal, turn the oscillator compensator (17A) to the maximum capacity position (clockwise). From this position slowly turn the compensator counter-clockwise until a first peak is obtained on the output meter. Adjust the compensator for maximum output at this first peak.

If the above procedure is correctly performed, the image signal will be found (much weaker) by turning the receiver dial 910 K. C. above the frequency being used on any high frequency range.


The aerial padder (2) must be adjusted to maximum by rolling the tuning condenser. If two signal peaks occur when turning the padder, adjust to maximum output on the second signal peak from the tight position (screw all the way down) of the padder.

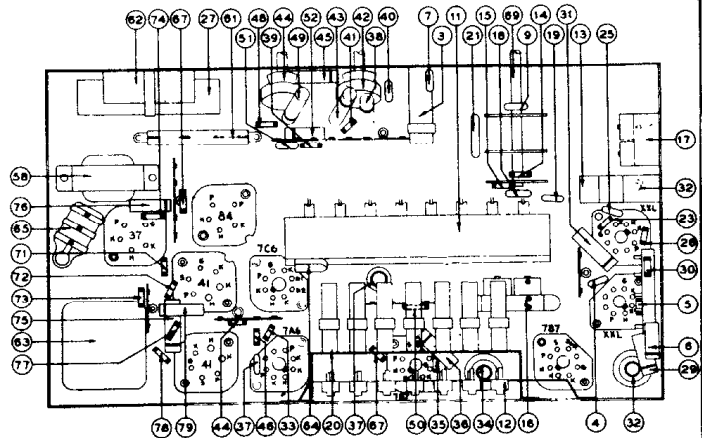

PART LOCATIONS UNDERSIDE — MODEL 41-290

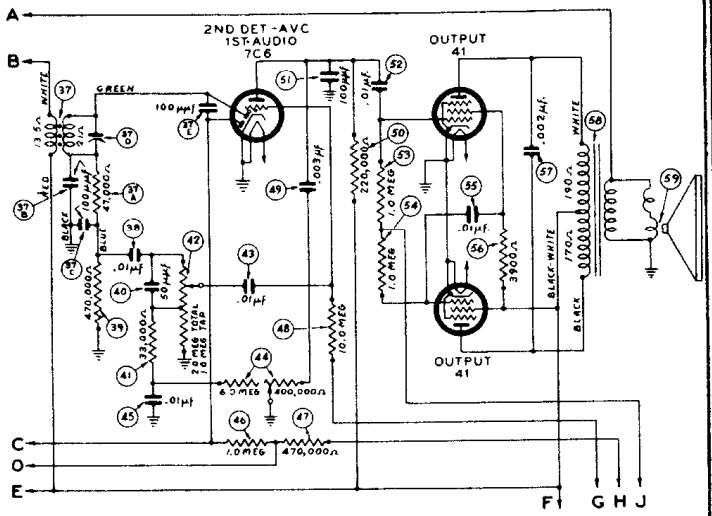

SECOND DETECTOR CIRCUIT — MODEL 41-280

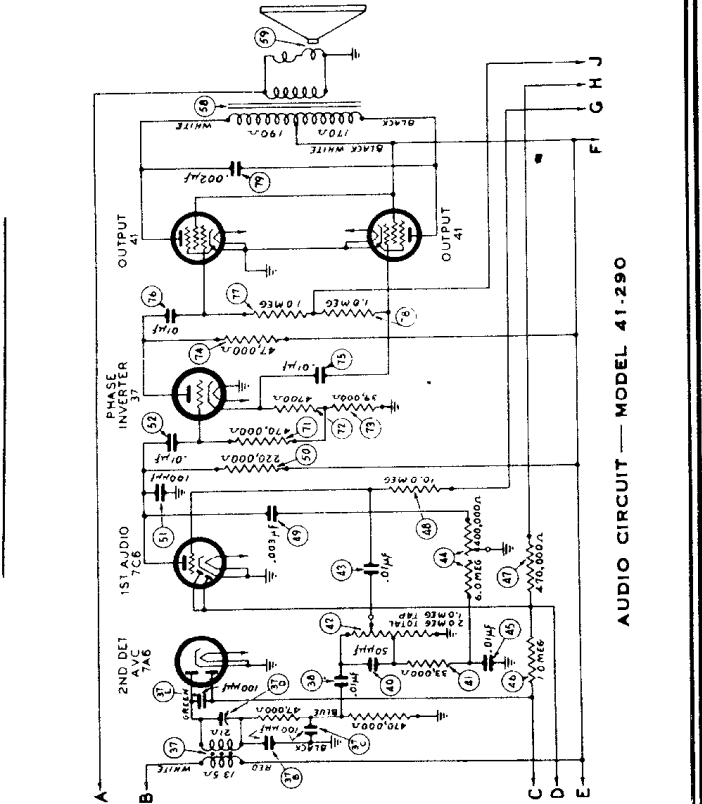


AUDIO CIRCUIT — MODEL 41-290

Models 41-280, 41-285,
41-287, 41-290; Code 121

PHILCO
104

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

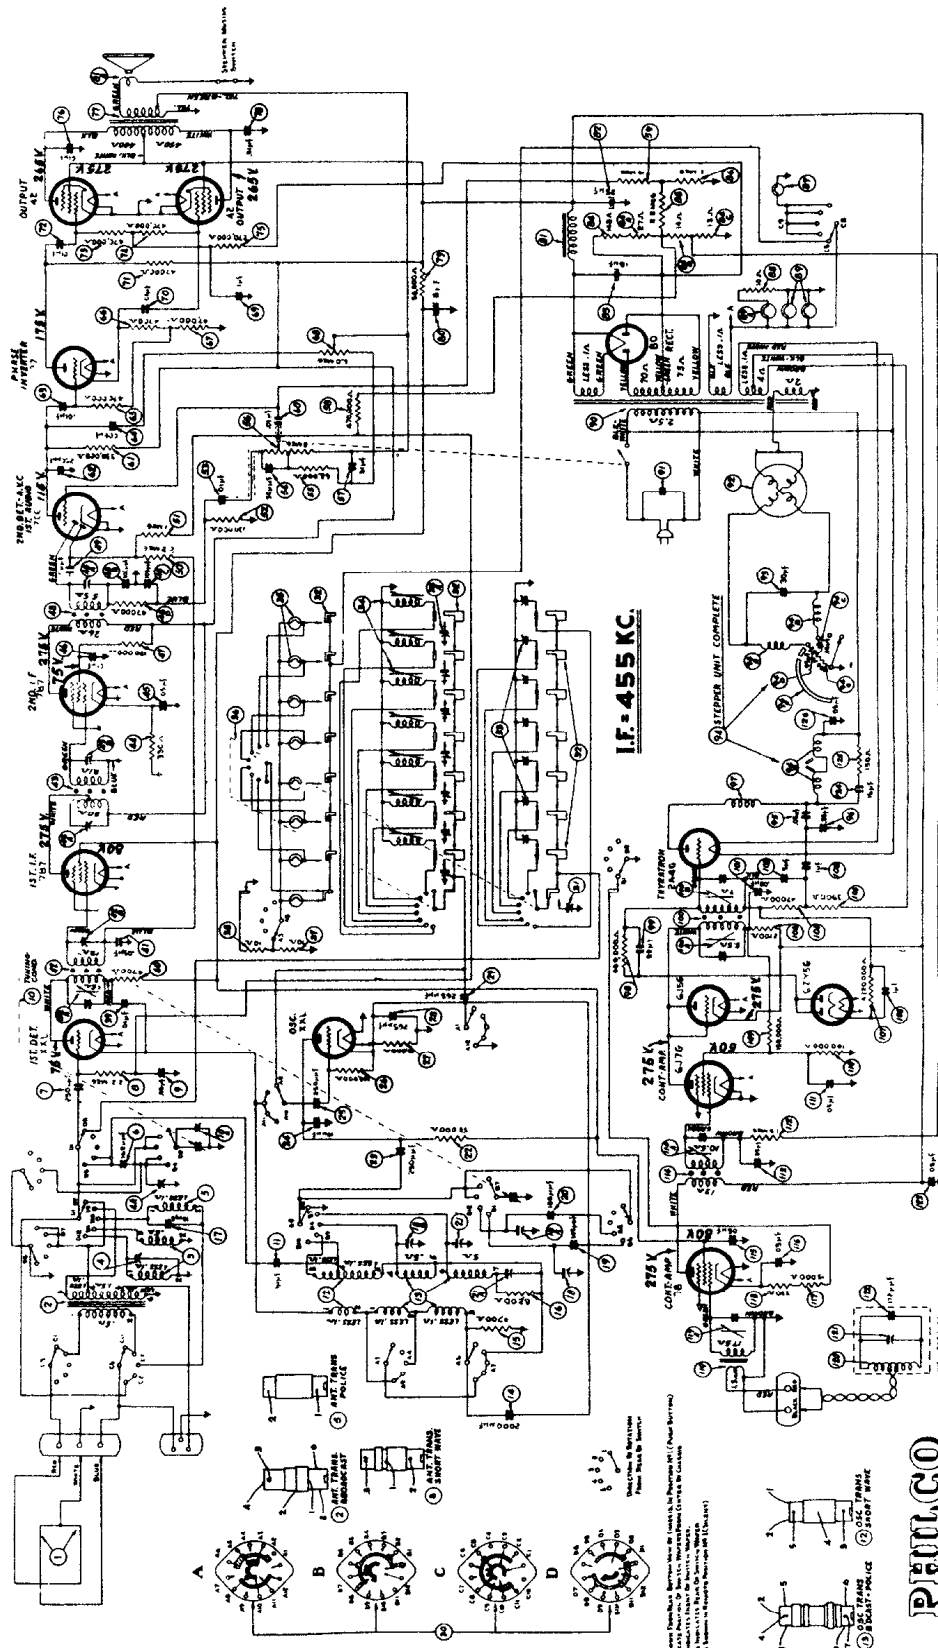

SCHEMATIC DIAGRAM — MODEL 41-316. CODE 121
 THE VOLTAGES INDICATED AT THE TUBE ELEMENTS ABOVE WERE MEASURED WITH A 1000 OHMS PER VOLT VOLTMETER.
 PHILCO MODEL 027. LINE VOLTAGE 116 VOLTS. A. C. BAND SWITCH (BROADCAST). NO STATION BEING RECEIVED.

PHILCO

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Operations in Order	SIGNAL GENERATOR		RECEIVER			SPECIAL INSTRUCTIONS
	Output Connections to Receiver	Dial Setting	Dial Setting	Control Settings	Adjust Compensators in Order	
1	High side to No. 3 terminal loop Panel.	455 K. C.	580 K. C.	Vol. Max. Range Switch "S. W." Position	48D, 43A, 43B, 42A, 42B	
2	Use Loop on Generator	1500 K. C.	1500 K. C.	Vol. Max. Range Switch Broadcast	21, 10A	Note A
3	Use Loop on Generator	580 K. C.	580 K. C.	Vol. Max. Range Switch Broadcast	21A	Roll Tuning Con Note B
4	Use Loop on Generator	Repeat operation No. 2 again				
5	Use Loop on Generator	6 M. C.	6 M. C.	Range Switch "Police"	18B	Note C
6	Use Loop on Generator	12 M. C.	12 M. C.	Range Switch "S. W." 1	18A, 4A	Note D
7	Use Loop on Generator	18 M. C.	18 M. C.	Range Switch "S. W." 2	18, 4	Note E


Note A — DIAL CALIBRATION: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum capacity), set the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable in this position is shown in Fig. 6.

NOTE B — When adjusting the compensator, the receiver Tuning Condenser must be adjusted (rolled) as follows: First tune the compensator for maximum output, then vary the tuning condenser of the receiver for maximum output. Now turn the compensator slightly to the right or left and again vary the receiver tuning condenser for maximum output. This procedure of first setting the compensator and then varying the tuning condenser is continued until maximum output reading is obtained.


NOTE C — Adjust compensator (18B) to the **SECOND** signal peak from the tight (closed) position.

NOTE D — Adjust compensator (18A) to the **FIRST** signal peak from the tight (closed) position. If the compensator is correctly adjusted the image signal will be weakly heard by leaving the receiver dial at 12 M. C. and turn the signal generator to 11.090 M. C.


NOTE E — Adjust compensator (18) to the **SECOND** signal peak from the tight (closed) position. If the compensator is correctly adjusted the image signal will be weakly heard by leaving the receiver at 18 M. C. and turning the signal generator to 18.910 M. C. When adjusting compensator (4) roll the tuning condenser. See Note "B" on how to roll the condenser.

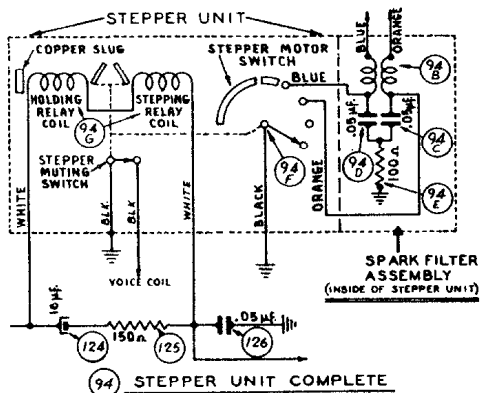

INTERNAL WIRING OF STEPPER UNIT
NUMBERS CORRESPOND TO SCHEMATIC

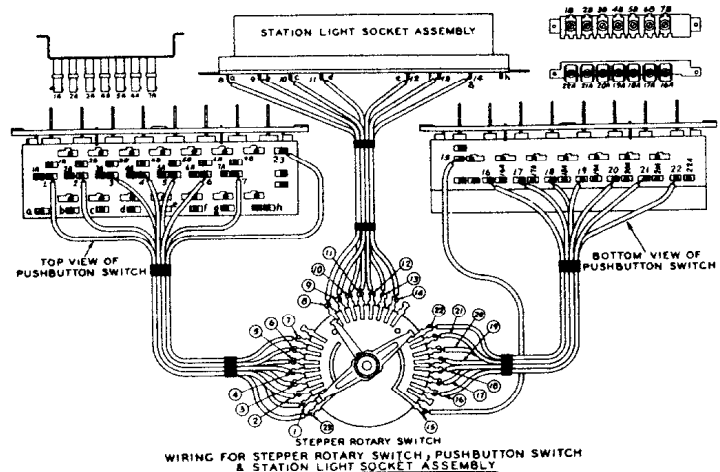


CABLE WIRING FROM STEPPER ROTARY SWITCH TO
PUSH-BUTTON SWITCH AND STATION LIGHTS

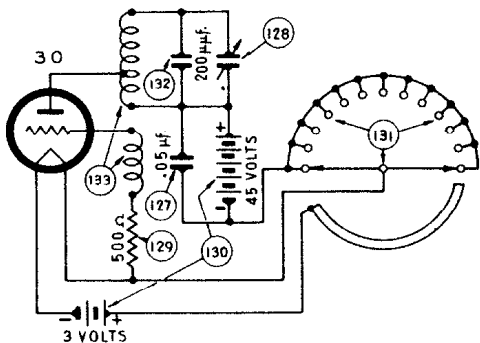

SCHEMATIC DIAGRAM OF
WIRELESS REMOTE CONTROL UNIT

WIRELESS REMOTE CONTROL
UNIT WIRING

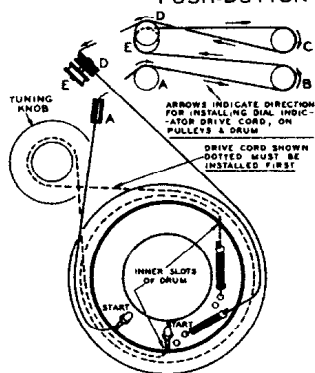



PHILCO

Model 41-316


107

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

NOTE: GROUND TO CHASSIS FOR LOOP OPERATION

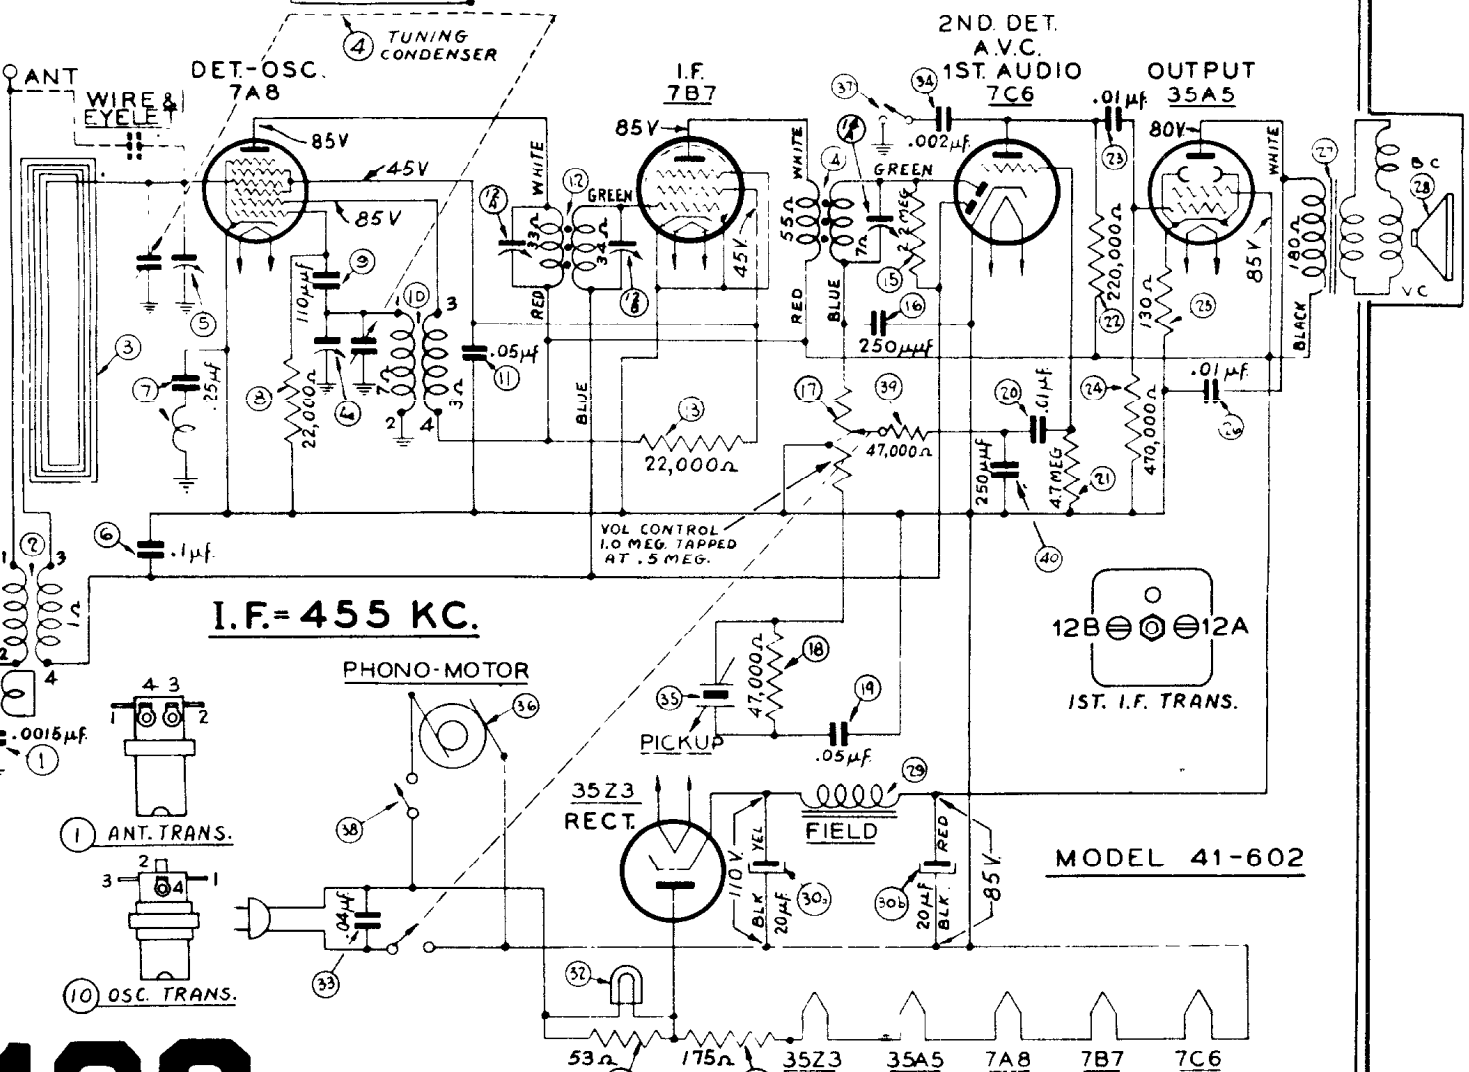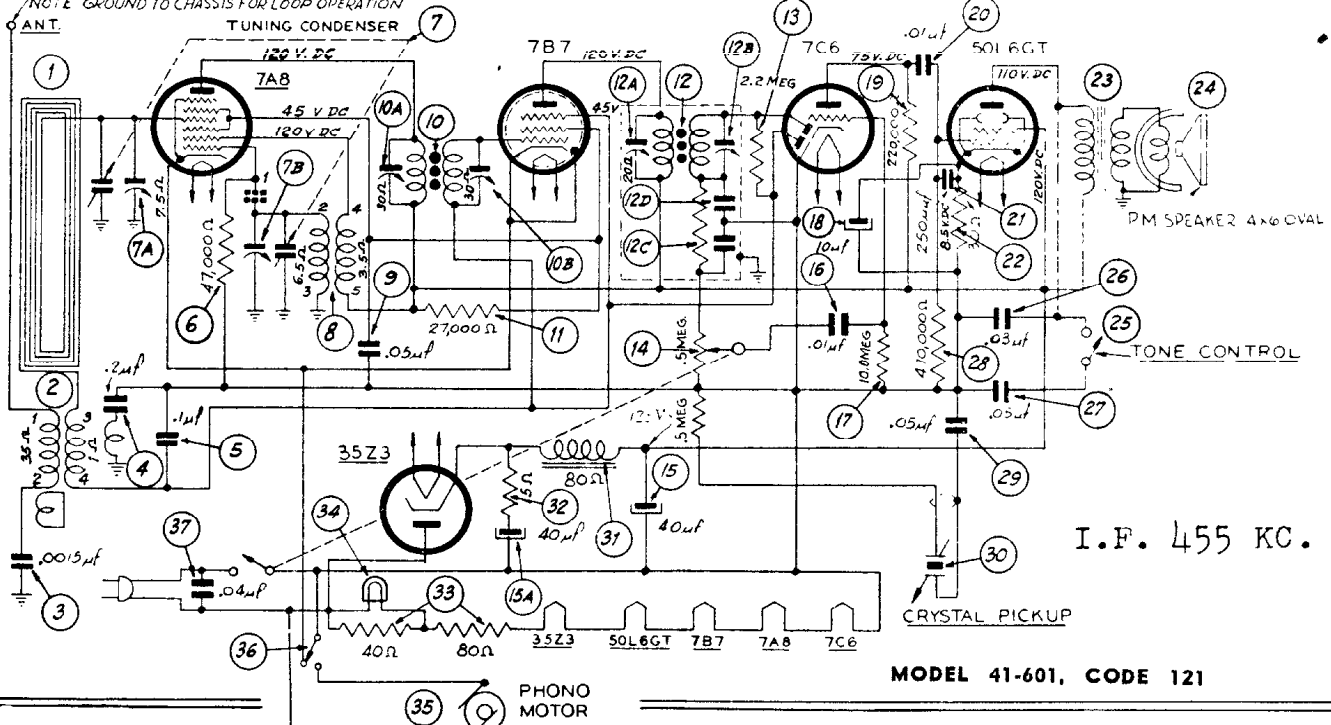

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

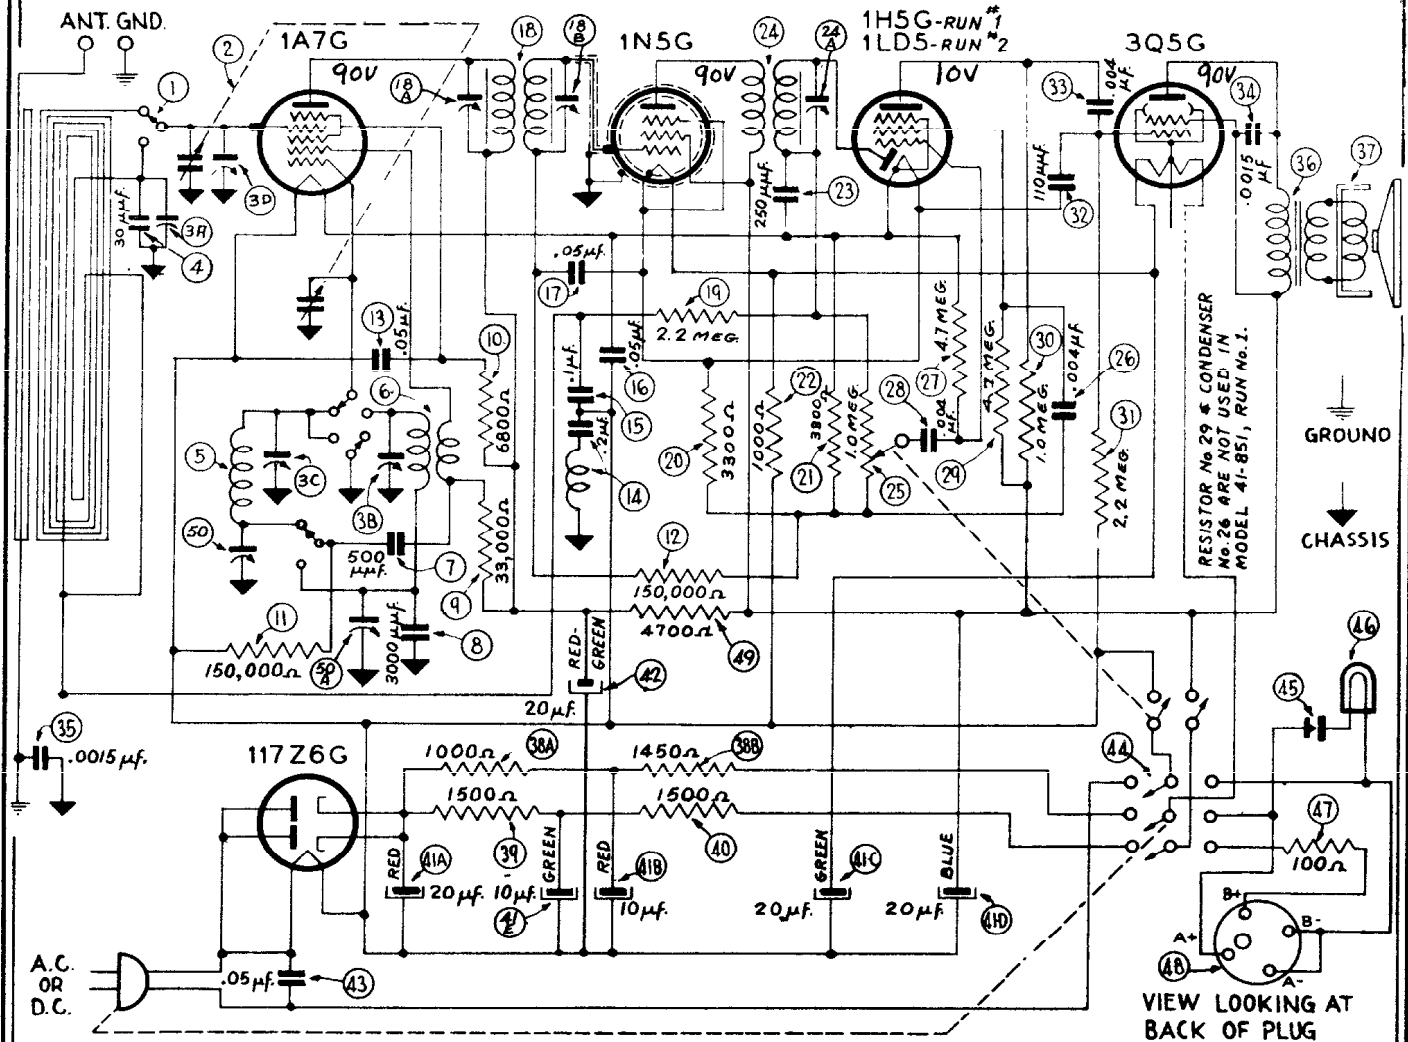

SCHMATIC DIAGRAM MODEL 41-851, RUNS 1 AND 2

1	Stator Plate Lug Loop Tuning Condenser	455 K. C.	540 K. C.	Vol. Max.	18A, 18B, 24A
2	Loop on Generator	1500 K. C.	1500 K. C.	Range Switch "Brdcst" Vol. Max.	3C, 3D
3	Loop on Generator	580 K. C.	580 K. C.	Range Switch "Brdcst" Vol. Max.	50
4	Recheck operation No. "2"				
5	Loop on Generator	6 M. C.	6 M. C.	Range Switch "S. W."	50A
6	Loop on Generator	15 M. C.	15 M. C.	Range Switch "S. W."	3B, 3A

Model 41-851, Code 121, Runs 1 and 2

Model 41-851, Code 121, Runs 1 and 2 is a five (5) tube portable A. C.-D. C. or battery operated superheterodyne radio with two tuning ranges, 540 to 1600 K. C. and 6 to 15 M. C. In addition this model includes: a Built-in Loop Aerial; Beam Power Pentode Audio Output Stage; Highly Sensitive Permanent Magnet Speaker; PHILCO Super-efficient Loktal Tubes and an ON-OFF Indicator.

Production Runs 1 and 2 of this model are identical with the exception of the 2nd Detector, 1st Audio tube. The early production (Run 1) radios used a 1H5G tube and the later production radios (Run 2) contained a 1LD5 tube.


PHILCO TUBES USED: 1A7G, Oscillator Converter; 1N5G, I. F. Amplifier; *1H5G, (Run No. 1) 2nd Detector, 1st Audio A. V. C.; 3Q5G, Audio Output; 117Z6G, Rectifier; *1LD5, (Run No. 2).

INTERMEDIATE FREQUENCY: 455 K. C.

POWER SUPPLY: 115 volts, A. C.-D. C. and a Philco Combination "A. B." battery type P-841.

For portable battery operation wrap the power line cord around its holder clamp on the back of the cabinet back and insert the plug end into the slots provided on the chassis.

To operate on 115 volts A. C.-D. C. remove the power line cord plug from the slots on the chassis and insert into a power receptacle.

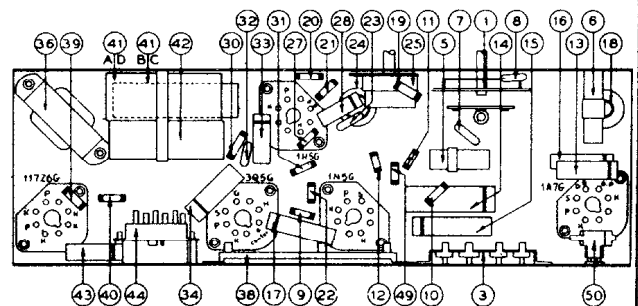


PART LOCATIONS — UNOERSIOE OF CHASSIS MODEL 41-851, RUN 1



MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

RCA MANUFACTURING COMPANY, INC.
CAMDEN, N. J., U. S. A.

1X and 1X2

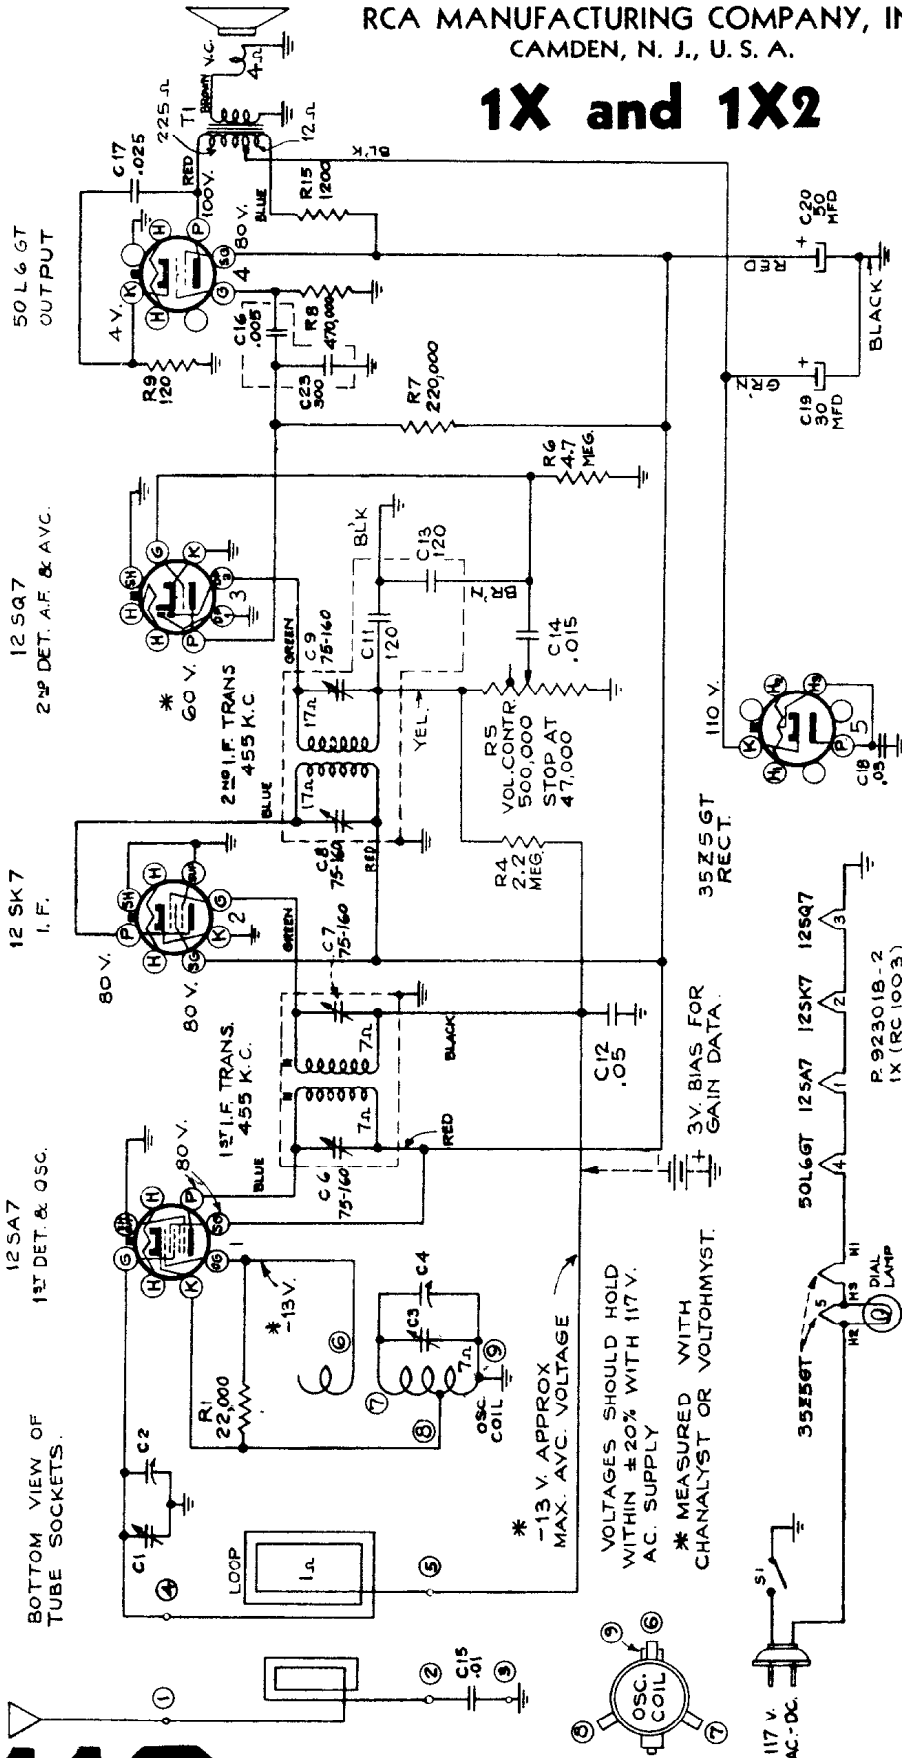

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	I-F grid in series with .01 mfd.	455 kc	Quiet point 1,600 kc end of dial	C8, C9 2nd I-F Transformer
2	1st Det. grid in series with .01 mfd.	1,720 kc	Gang at minimum	C6, C7 1st I-F Transformer
3	Ant. terminal in series with 100 mmfd.	Radiated signal 1300 kc	Signal Frequency	C3 (osc.)
4				C1 (ant.)
5	Repeat steps 3 and 4.			

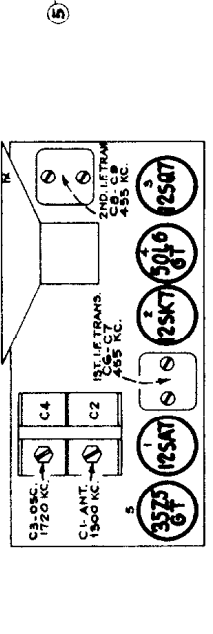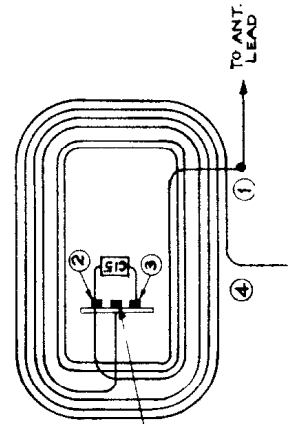

Output Meter Alignment.—Connect the meter across the voice coil and turn the receiver volume control to maximum.

Electronic Voltmeter.—The electronic voltmeter in the Chanalyst or VoltOhmyst provides an unexcelled output indicator. It should be connected to the AVC bus.


Test-Oscillator.—For I-F alignment, connect the low side of the test-oscillator to the receiver chassis through a .01 mfd. capacitor, and keep the output as low as possible.

VOLTAGES SHOULD HOLD WITHIN $\pm 20\%$ WITH 117 V. AC. SUPPLY

* MEASURED WITH CHANALYST OR VOLTOHMYST.

BOTTOM VIEW OF TUBE SOCKETS.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

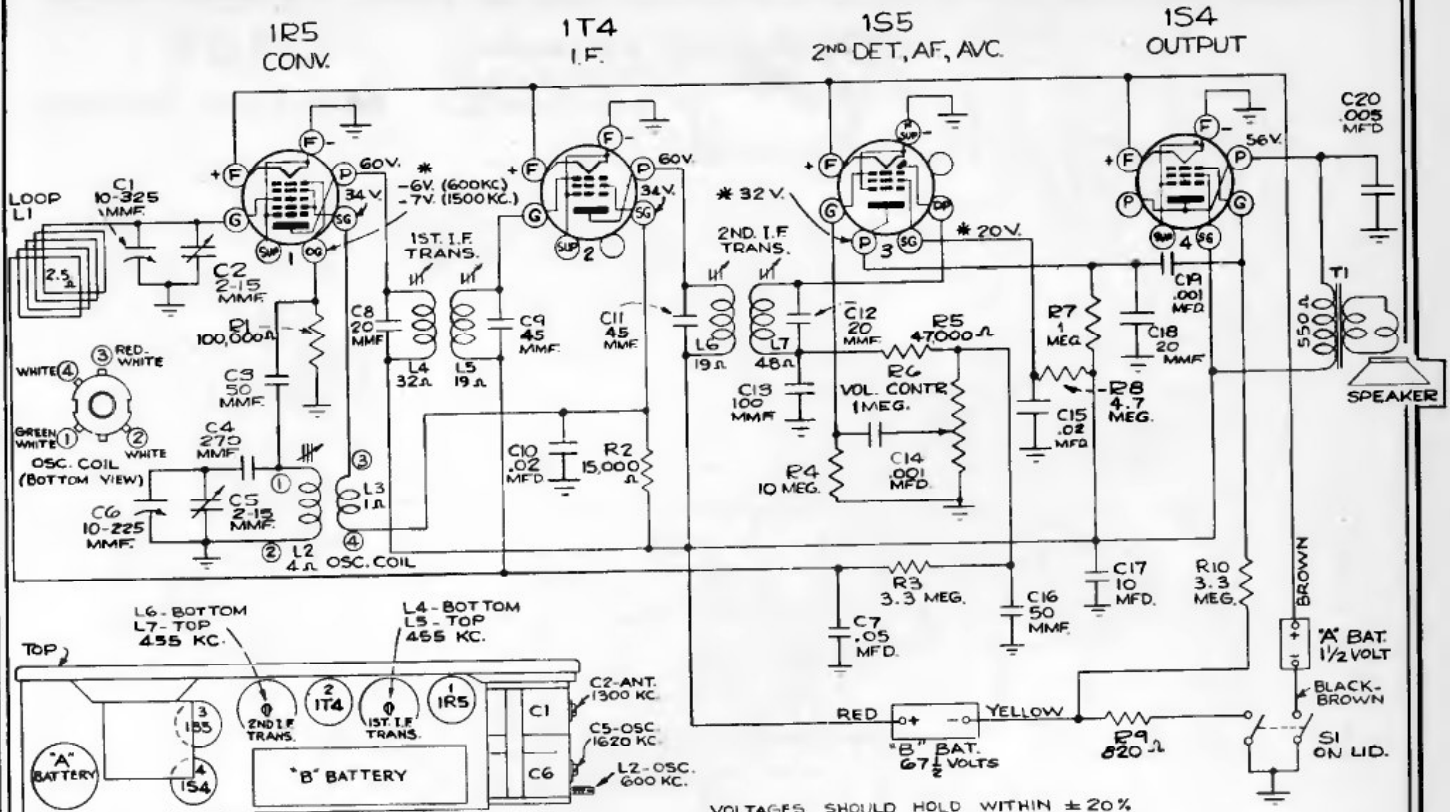

RCA Victor



MODEL BP-10 PERSONAL RADIO

Alignment Procedure

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, keep the output as low as possible to avoid a-v-c action.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (ant.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	L7, L6, L5, L4 (2nd and 1st I-F transformers)
2	Radiated signal 1,620 kc	1,620 kc	Full clockwise (out of mesh)	C5 (oscillator)
3	Radiated signal 1,300 kc	1,300 kc	1,300 kc	C2 (antenna)
4	Radiated signal 600 kc	600 kc	600 kc	L2 (osc.)
5	Repeat steps 2, 3 and 4.			

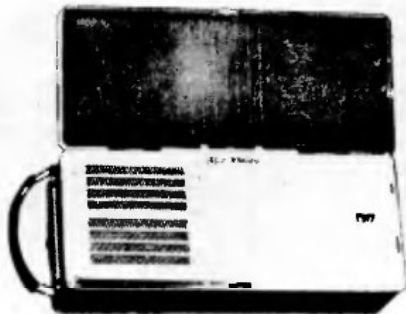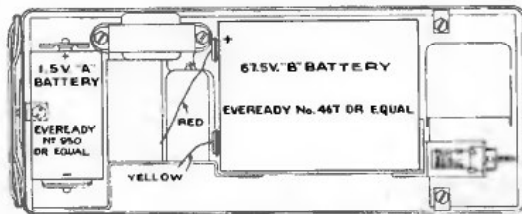

POWER SUPPLY


Type Battery	Current Consumption	Approximate Life (Intermittent Duty)
"A"—1.5 volt Eveready No. 950	0.25 amperes	3-5 hours
"B"—67.5 volts Eveready No. 467	8.5 milliamperes	25-40 hours

POWER OUTPUT

Undistorted.....	0.05 watts
Maximum.....	0.12 watts

RCA Victor


10X
Chassis No. RC-1001

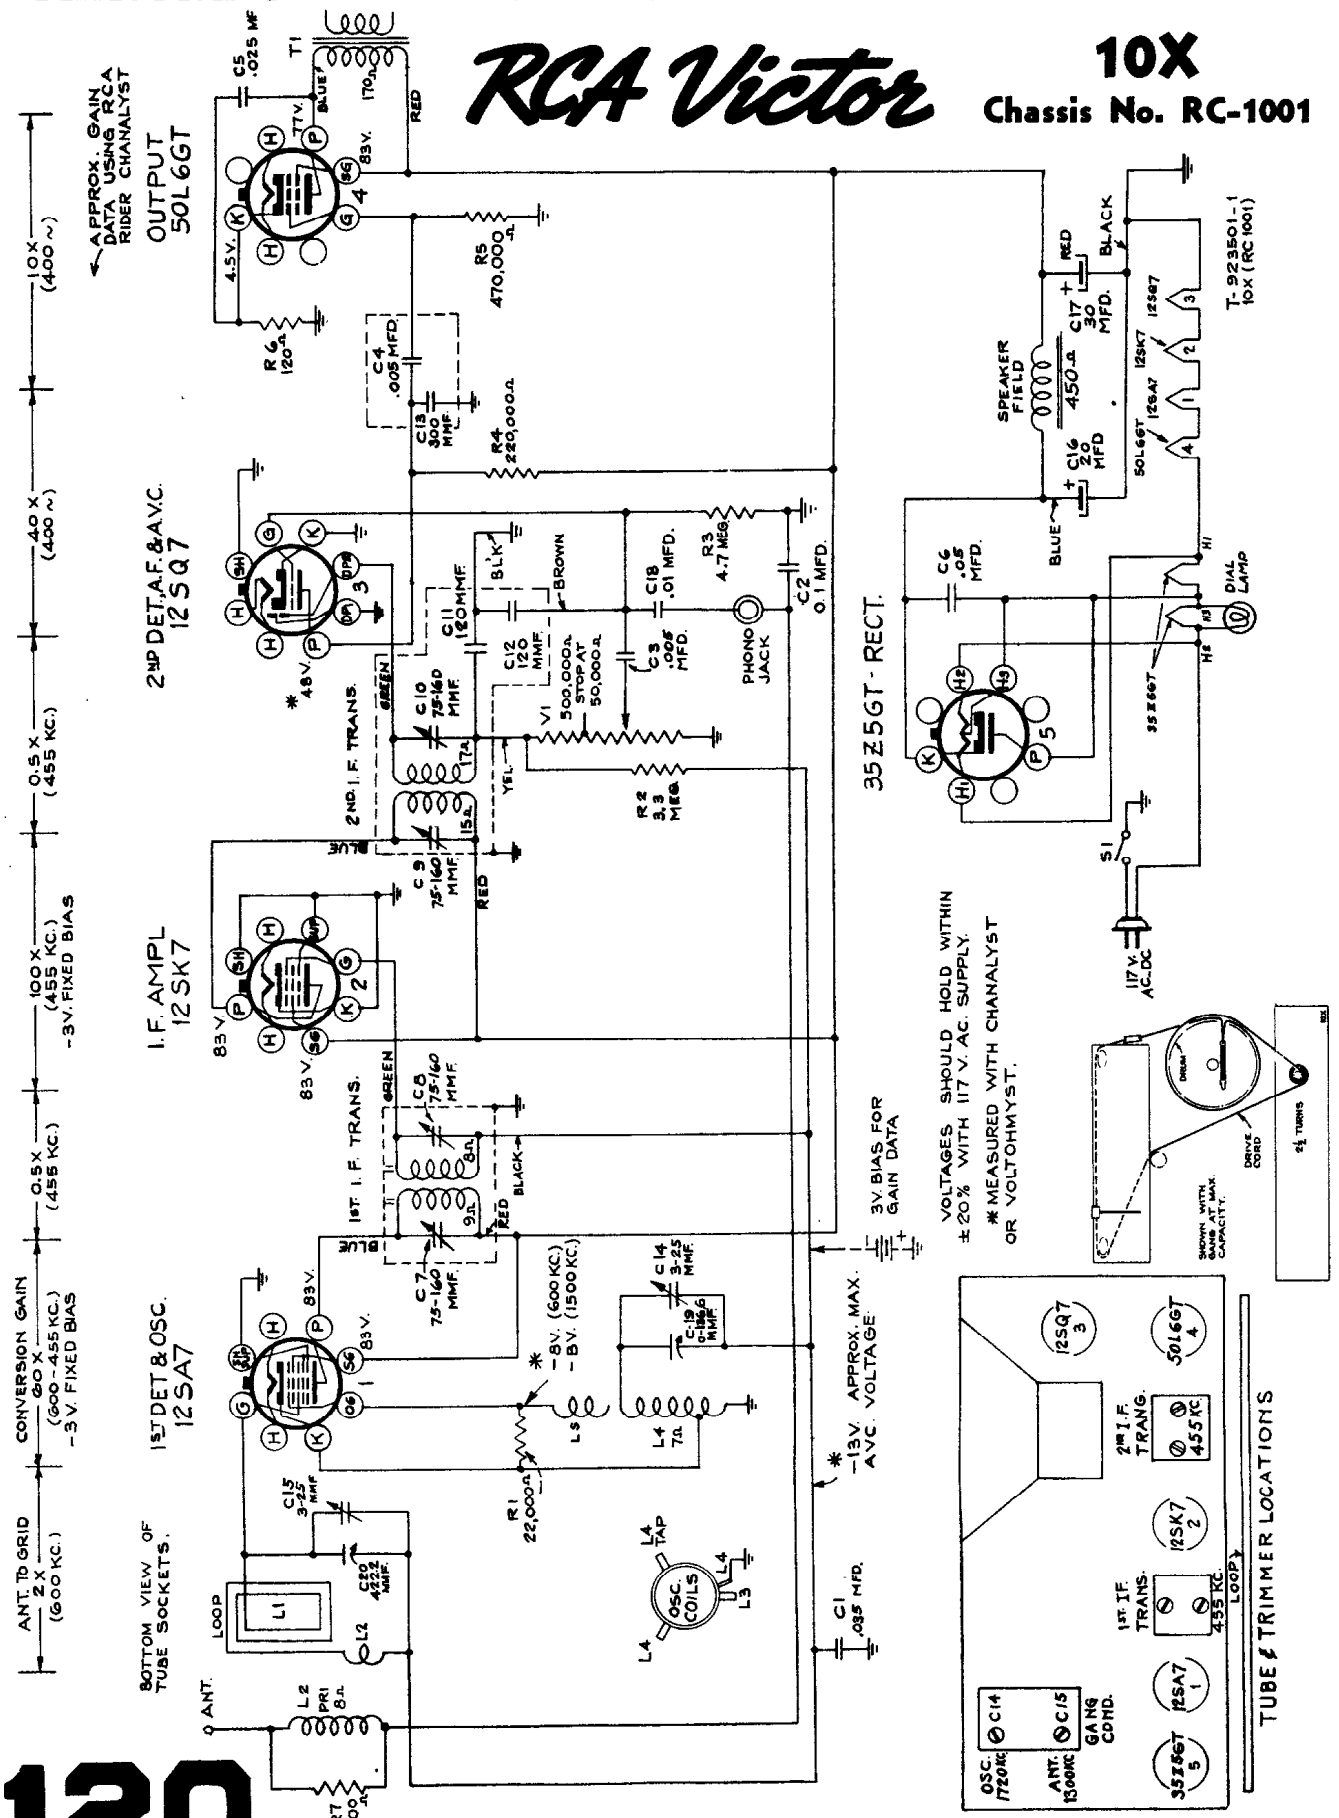

120

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

MODEL 14X Chassis No. RC-1001-D

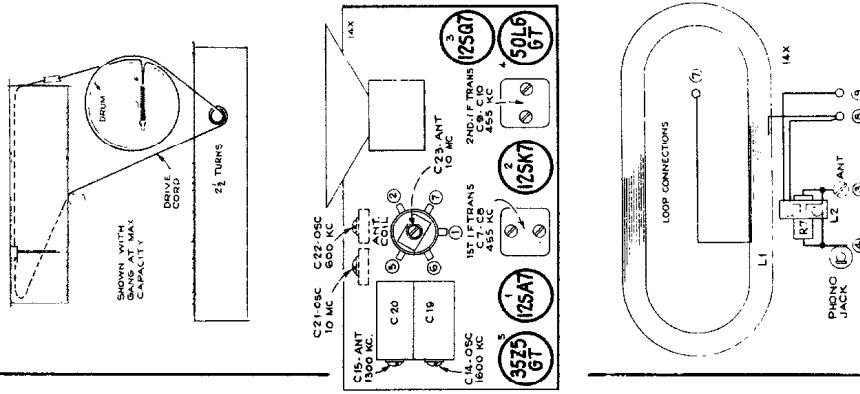

APPROX. GAIN DATA USING RCA RIDER CHANALYST

10 X (400 ~) 50 L66T OUTPUT


0.6 X (455 KC) 12 5Q7 2ND DET. A.F. & AVC.

100 X (455 KC) 12 5K7 I.F. AMPL.

1 X (455 KC) 12 5A7 1ST DET. & OSC.

50 X (600 - 455 KC) 12 5A7 1ST DET. & OSC.

4 X (600 KC.) BOTTOM VIEW OF TUBE SOCKETS

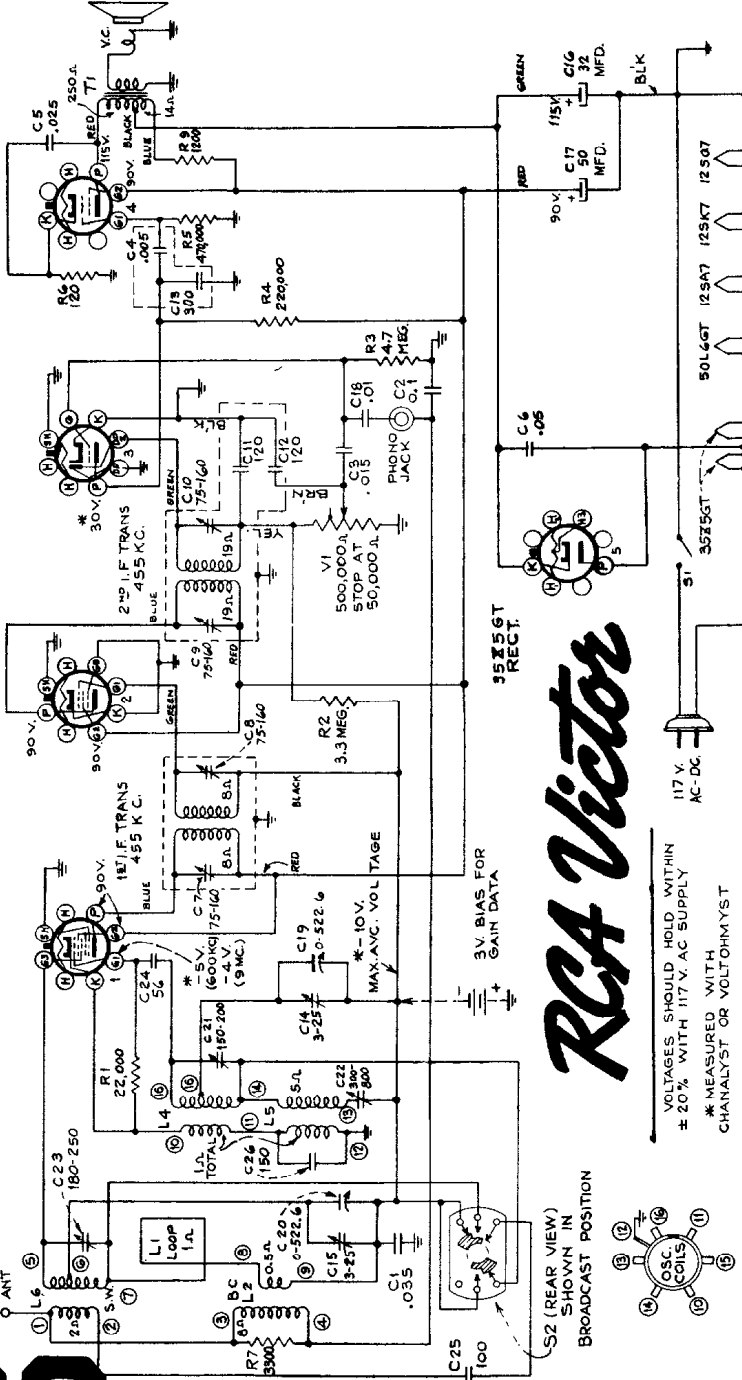

Alignment Procedure

Output Meter Alignment.—If this method is used connect the meter across the voice coil and turn the receiver volume control to maximum. **Electronic Voltmeter.**—The electronic voltmeter in the Chanalyst or VoltOhmyst provides an unexcelled output indicator. It should be connected to the AVC bus. **Test Oscillator.**—Connect the low side of the test oscillator to the receiver chassis through a .01 mfd. capacitor. When the electronic voltmeter is used as an alignment indicator the output of the test oscillator should be adjusted to produce several volts of AVC. With the output meter alignment method the test oscillator output should be kept as low as possible. **Calibration Scale.**—The glass tuning dial may be easily removed from the cabinet and temporarily attached to the dial backing plate for quick reference during alignment. * It is recommended that this step be repeated using a received station of known frequency. ** Use minimum capacity if two peaks can be obtained.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	12SK7 grid in series with 0.1 mfd.	455 kc	Quiet Point at 1,600 kc end of dial	C10, C9 2nd I-F Transformer
2	12SA7 grid in series with 0.1 mfd.	10 mc*	10 mc	C8, C7 1st I-F Transformer
3	Antenna term. in series with 47 mmf.	1,600 kc	1,600 kc	C21 (osc.)** C23 (ant.)
4	Antenna term. in series with 200 mmfd.	1,300 kc	Resonance on Signal	C14 (osc.)
5	Radiation Loop	600 kc	600 kc	C15 (ant.)
6	Radiation Loop	600 kc	600 kc	C22 Osc. Rock in

RCA Victor

122

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

RCA

MODEL 15BP

Alignment Procedure

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-oscillator.—For all alignment operations, keep the output as low as possible to avoid a-v-c action.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	1N5GT I-F grid cap, in series with .01 mfd.	455 kc	Quiet point at 1,800 kc end of dial	L8, L7 (2nd. transformer)
2	1A7GT 1st-Det. grid cap, in series with .01 mfd.			L4, L3 (1st I-F transformer)
3	radiated signal 1,720 kc	signal frequency		C22 (Osc. Trimmer)
4	radiated signal 1,400 kc			C20 (Ant. Trimmer)
5	radiated signal near 600 kc			L6 (Rock in)
6	Repeat steps 3, 4 and 5 until aligned.			

Frequency Range..... 540-1,720 kc
Intermediate Frequency..... 455 kc

RCA TUBE COMPLEMENT

- (1) RCA-1A7-GT..... 1st. Det.—Osc.
- (2) RCA-1N5-GT..... I-F Amplifier
- (3) RCA-1H5-GT..... 2nd. Det., A-F, and A.V.C.
- (4) RCA-3Q5-GT..... Output
- (5) RCA-35Z5-GT..... Rectifier

LINE CURRENT SUPPLY




110 to 125 volts, AC 50 or 60 cycles, or DC

BATTERIES REQUIRED

- "A" one 1.5 volt dry plug-in type "A," (Eveready No. 743 or equivalent)
- "B" two 45 volt dry plug-in type "B," (Eveready No. 482 or equivalent)

CURRENT CONSUMPTION

- "A" 0.25 amperes
- "B" 11.5 milliamperes } Battery Operation

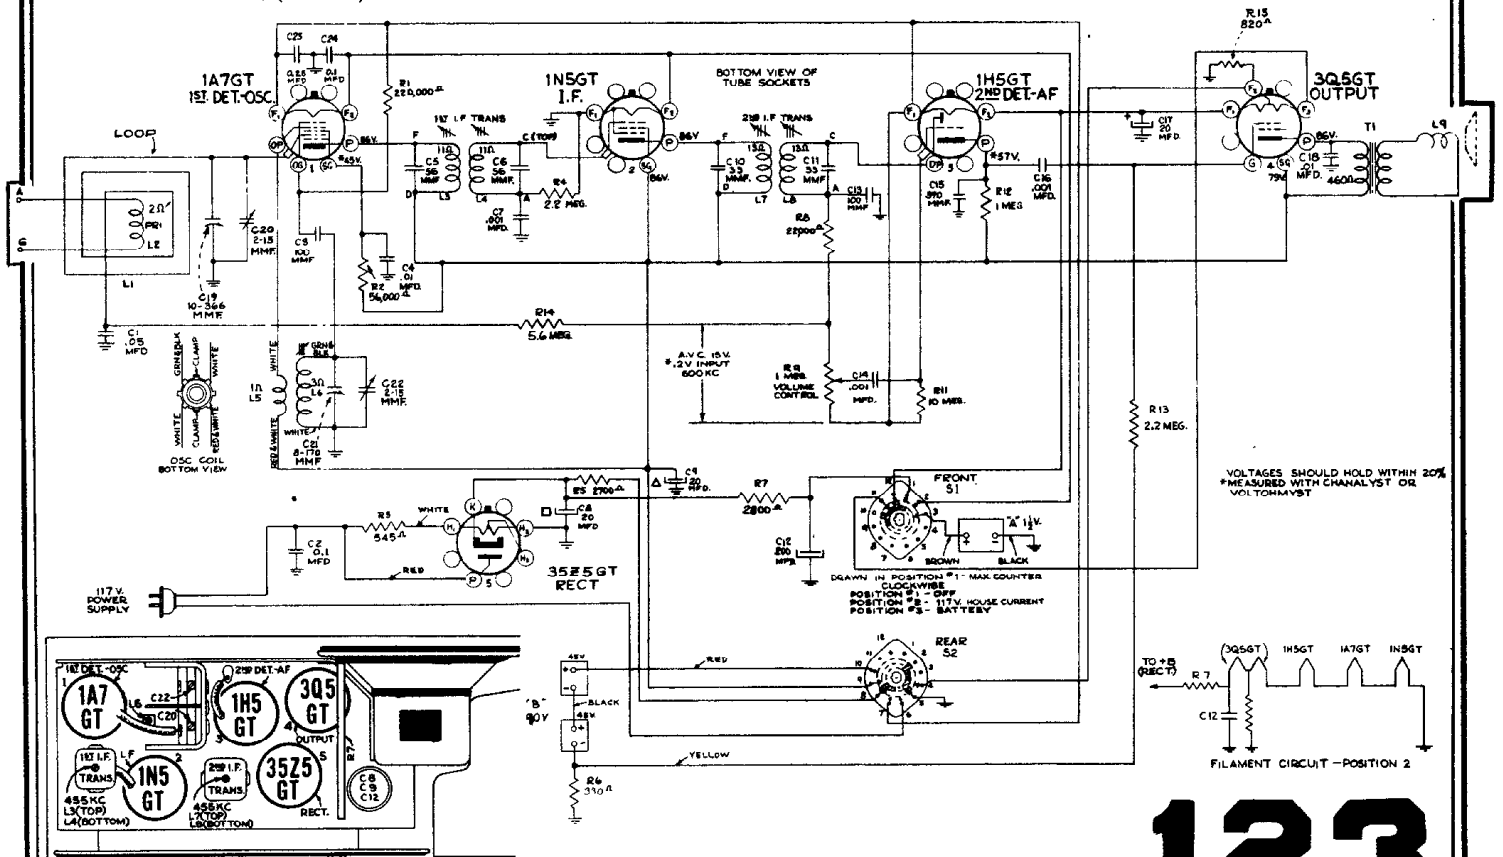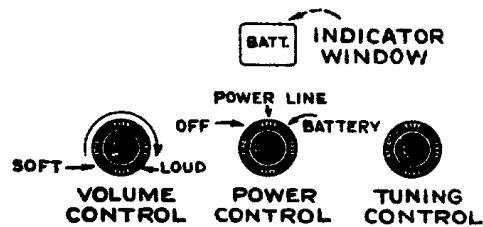

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS



123

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

MODELS 15X, 16X-1, 16X-2 and 16X-3

Chassis Nos. RC-462, RC-462A and RC-462B

Six-Tube, Single-Band, AC-DC, Superheterodyne Receivers

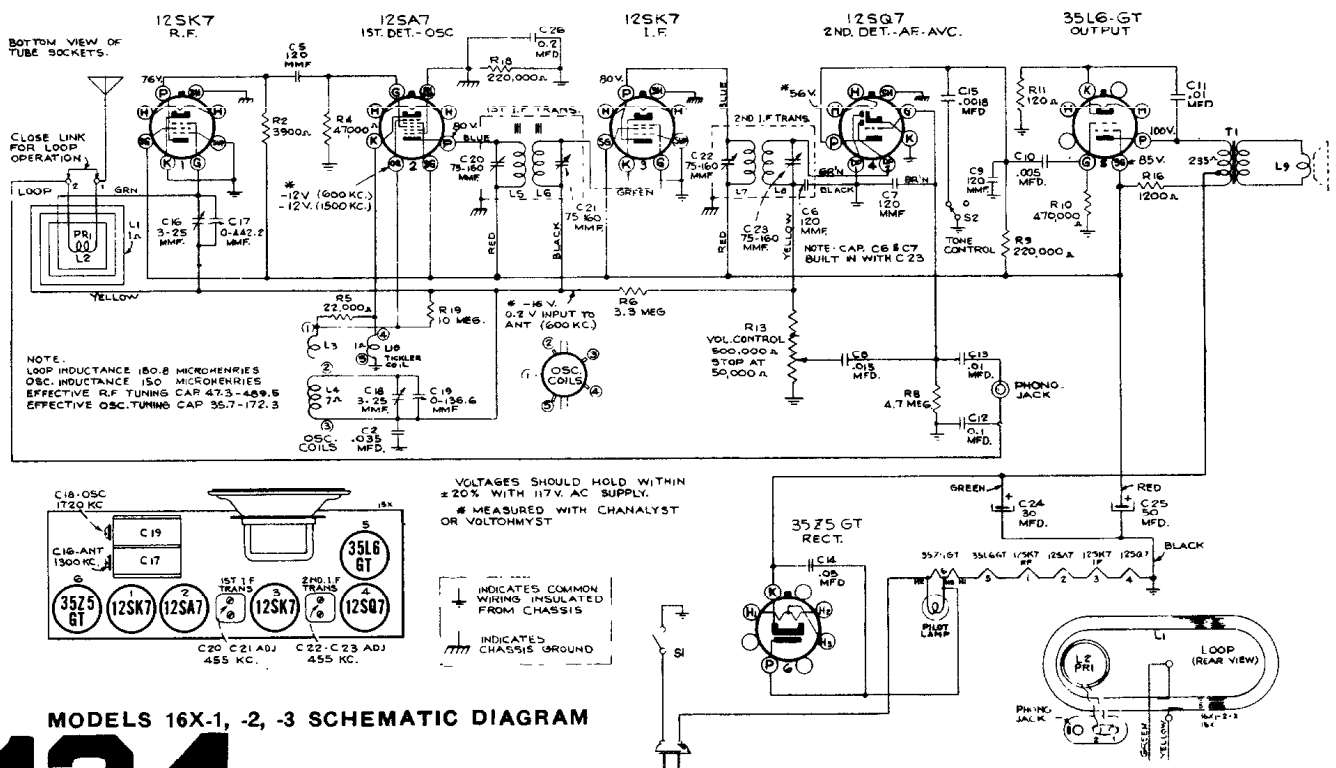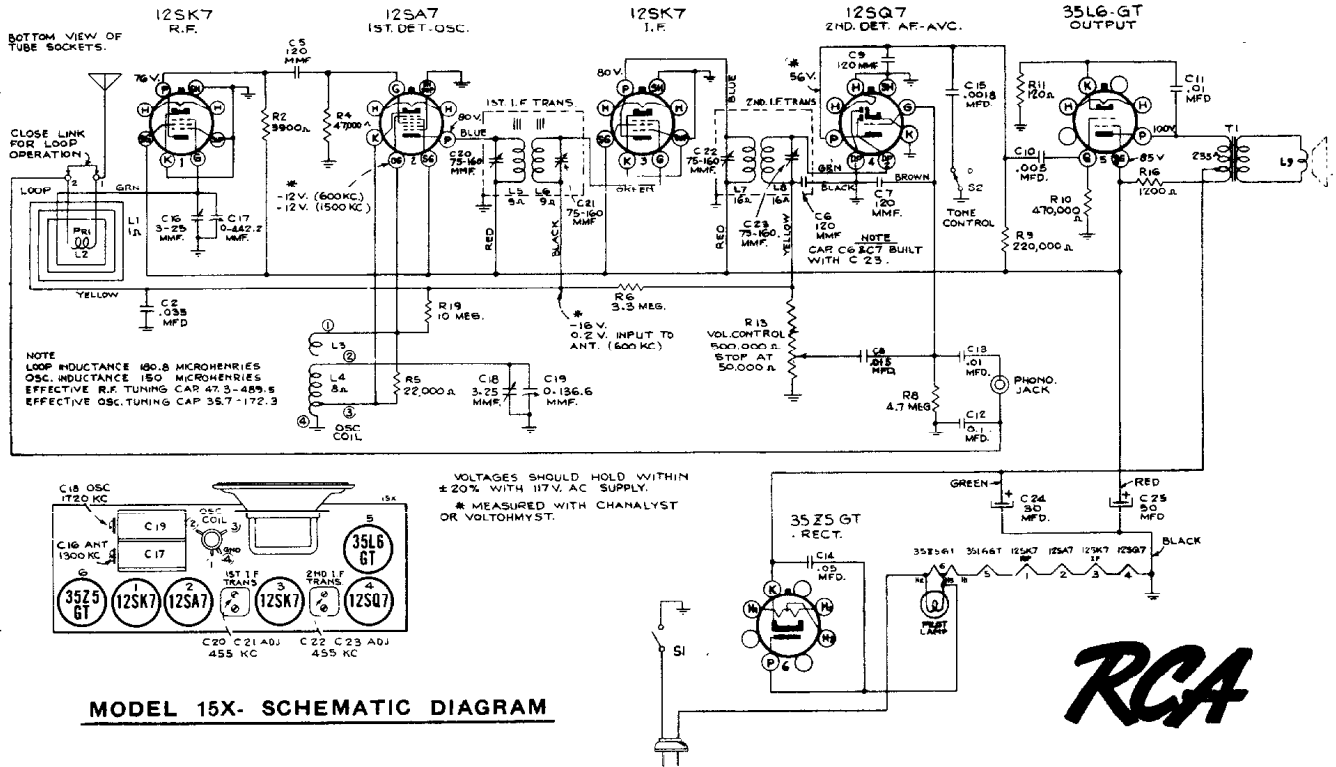

124

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Alignment Procedure

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic diagrams.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Electronic Voltmeter.—The electronic voltmeter in the Chanalyst or Volt Ohmyst provides an unexcelled output indicator. It should be connected to the AVC bus, and the test-oscillator output adjusted to produce several volts of AVC.

Calibration Scale.—The glass tuning dial may be easily removed from the cabinet and temporarily attached to the chassis for quick reference during alignment. In the event that only the chassis is returned for service, and the cabinet with its tuning dial is left in the customer's home, the calibration scale printed in this service note can be used in conjunction with an ordinary 12-inch ruler as an accurate and convenient substitute for the regular dial.

Each method is described below.

Using Tuning Dial.—

1. Slide out the flat spring clamp at each end of the dial, and remove the glass dial from the cabinet.

2. With gang in full mesh, move the dial pointer to the reference mark at the left-hand end of the dial backing plate.

3. Place the glass dial under the pointer so that the extreme left scale graduations coincide with the pointer. Use scotch tape to hold the glass dial in this position.

4. After completion of alignment, replace the glass dial in cabinet, taking care that the fibre light shields are in correct position at ends of dial.

Using Calibration Scale.—

1. With gang in full mesh, move the dial pointer to the reference mark at the left-hand end of the dial backing plate.

2. Place a flat 12-inch ruler on the dial backing plate so the left-end of ruler is at the reference mark at left-end of backing plate. Temporarily fasten the ruler with scotch tape to the backing plate.


3. Refer to calibration scale printed in this service note. This is a reduced reproduction of the dial with an inch-scale drawn at top and bottom. To find the correct pointer position in inches for any desired frequency, draw a vertical line through this frequency on the calibration scale. For example, 1,500 kc is approximately 4 inches from the reference mark.

Dial-Pointer Adjustment.—After the chassis is replaced in cabinet, move the dial pointer (if necessary) so that it is at the left-hand graduation on the dial with the gang in full mesh.

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for maximum peak output—
1	I-F grid, in series with .01 mfd.	455 kc	"A" band, Quiet Point at 1,500 kc end of dial	L7 and L8 (2nd I.F. Trans.)
2	1st det. grid, in series with .01 mfd.			L5 and L6 (1st I.F. Trans.)
3	Antenna terminal, in series with 300 ohms (link open)	15.2 mc	15.2 mc "C" band	C11 (osc.)* C2 (ant.)
4	Antenna terminal, in series with 200 mmfd. (link open)	1,500 kc	1,500 kc "A" band	C29 (osc.) C3 (ant.)
5		600 kc	600 kc "A" band	L3 (in 16T2) L4 (in 16K and 16T2) Rock in
6	Repeat steps 4 and 5.			

In case of instability during R-F alignment, connect a 27,000 ohm 1/4 watt resistor across "D" and "F" of 2nd I-F transformer.

* Use minimum capacity peak if two peaks can be obtained. Check to determine that the correct peak has been used, by tuning receiver to 14.29 mc, where a weaker signal should be received.

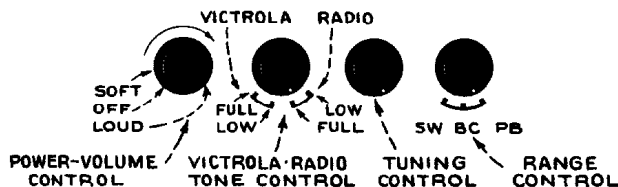


RCA Manufacturing Co.
Camden, N. J.

Models 16K and 16T3

126

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

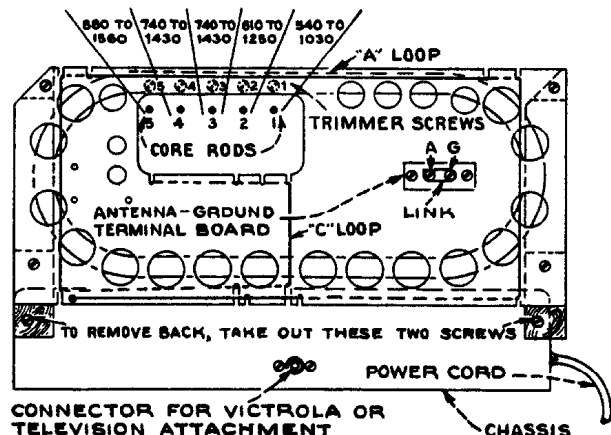

RCA Victor

16X-4
Chassis No. RC-462-C


35L6-GT
OUTPUT

12SQ7
2ND DET.-AF-AVC

12SK7
I-F



12SA7
1ST DET. OSC

12SK7
RF


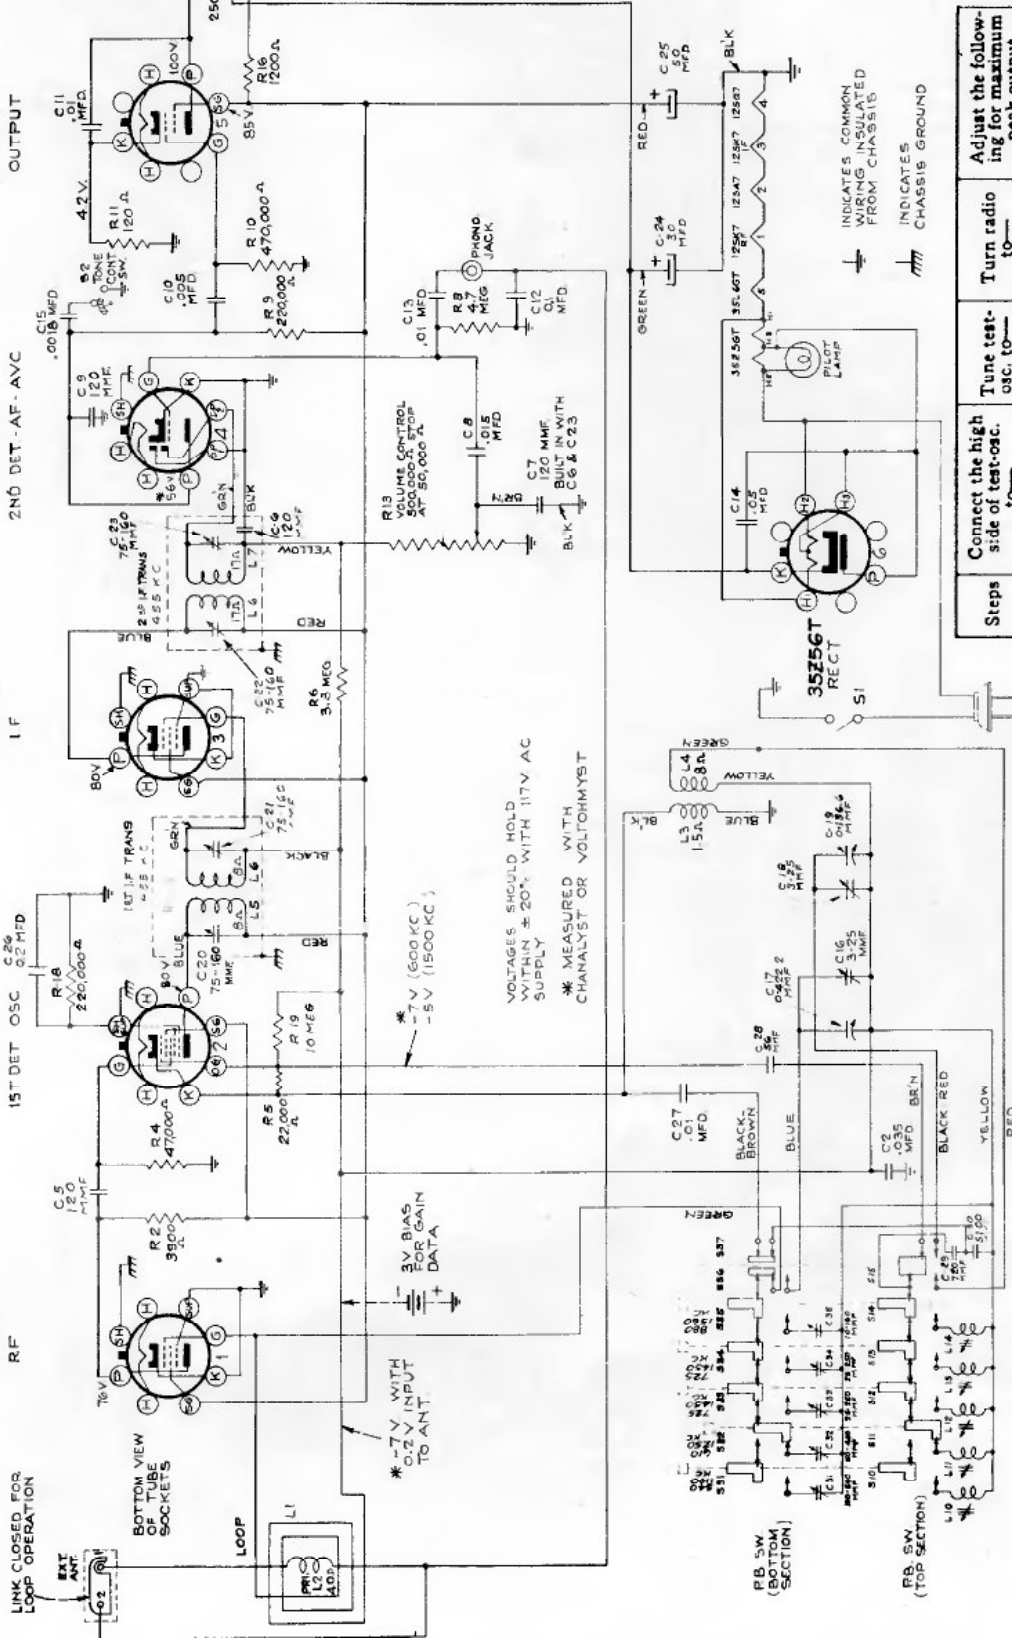


VOLTAGES SHOULD HOLD WITH SUPPLY $\approx 20\%$ WITH 117V AC
* MEASURED WITH CHANNELYST OR VOLTOHMYST

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio to—	Adjust the following for maximum peak output
1	12SK7 I-F grid, in series with 0.1 mfd.	455 kc	Quiet Point at 1,700 kc end of dial	C23, C22 2nd I-F transformer
2	12SA7 1st det. grid, in series with 0.1 mfd.	1,720 kc	1,720 kc	C21, C20 1st I-F transformer
3	12SK7 R-F grid, in series with 0.1 mfd.	Radiated signal 1,500 kc	Resonance on signal	C18 (osc.)
4	Repeat steps 3 and 4			C16 (ant.)

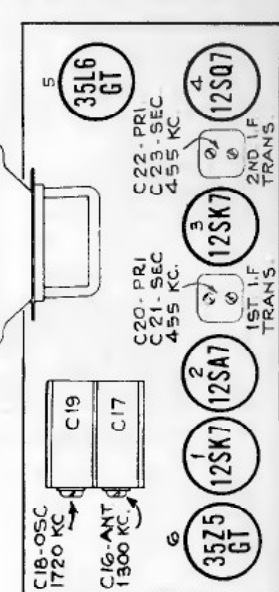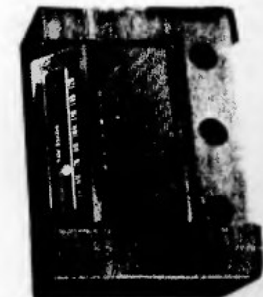


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

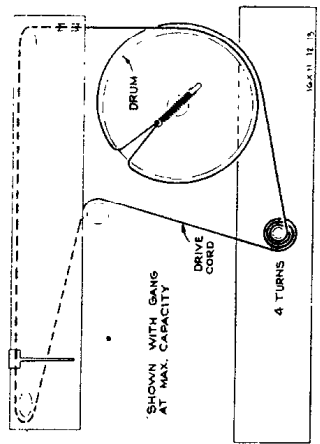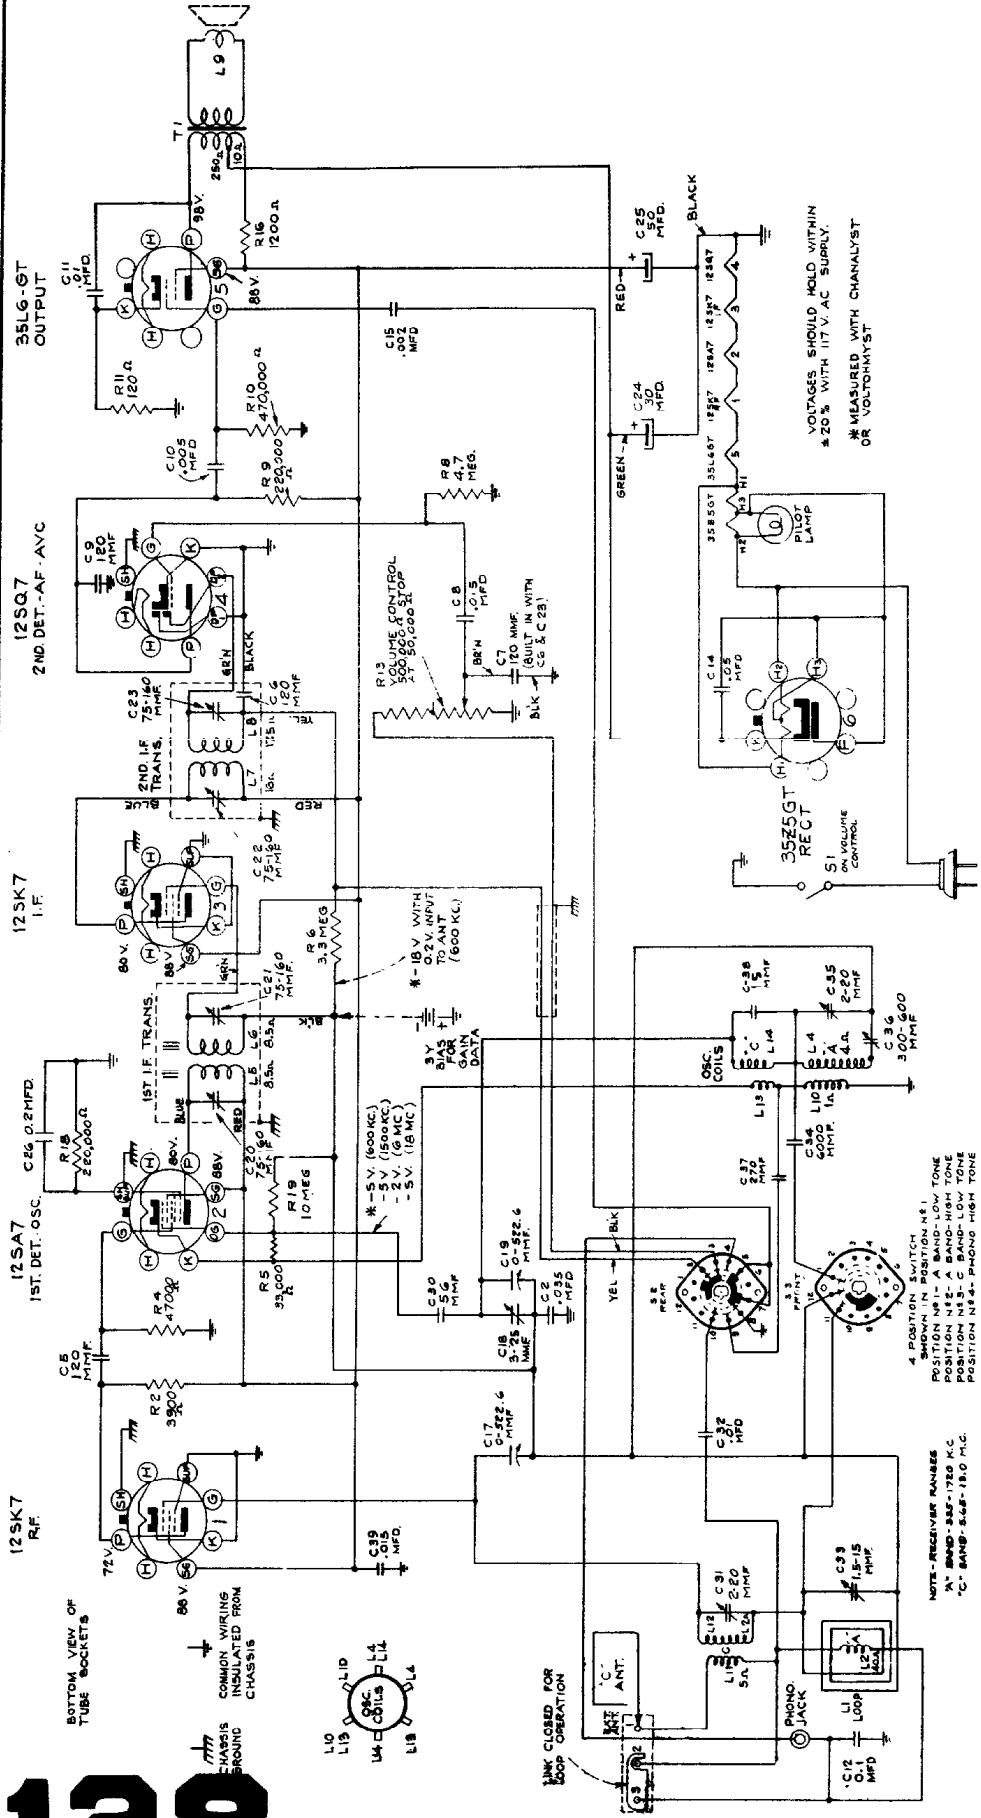

RCA Victor

16X-11 and 16X-13
Chassis Nos. RC-1000 and RC-1000A

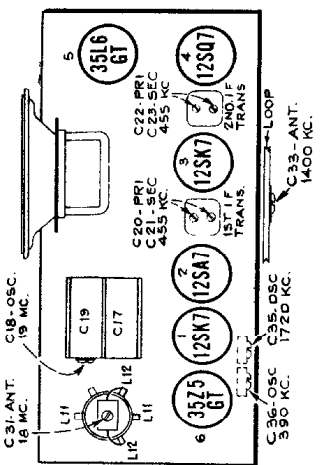


NOTE: RECEIVER RANGES
 A* - BAND-1720 KC.
 B* - BAND-1720 KC.
 C* - BAND-5.6F-18.0 MC.

VOLTAGES SHOULD HOLD WITHIN
 ±25% WITH 117 V. AC SUPPLY.
 * MEASURED WITH CHANNELYST
 OR VOLTOHMYST.


128

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

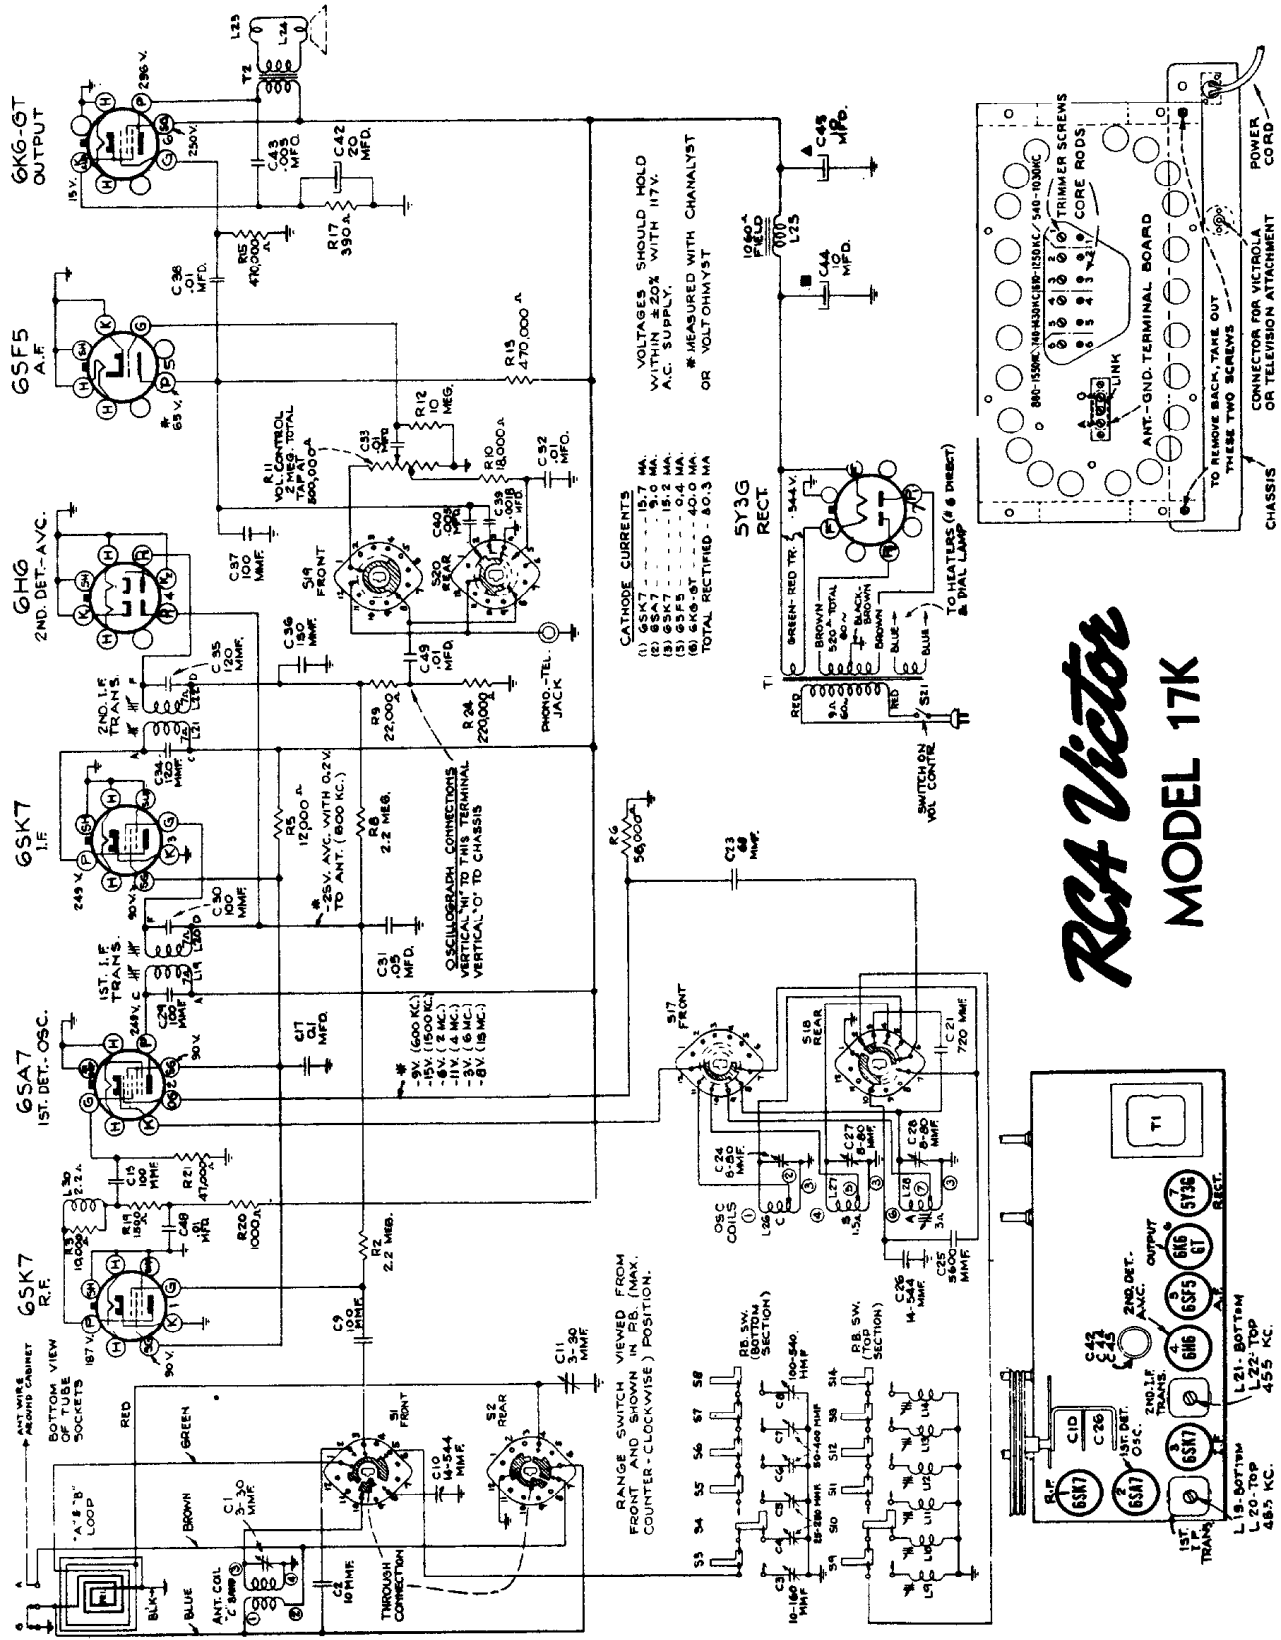


RCA Victor
MODEL 17K

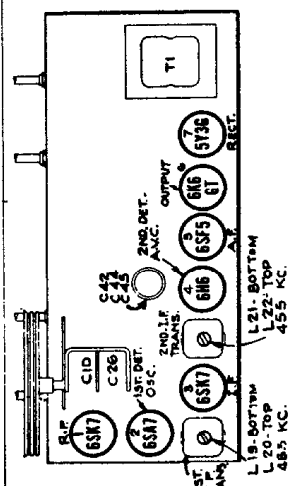


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS


Models 45X-16, 45X-17

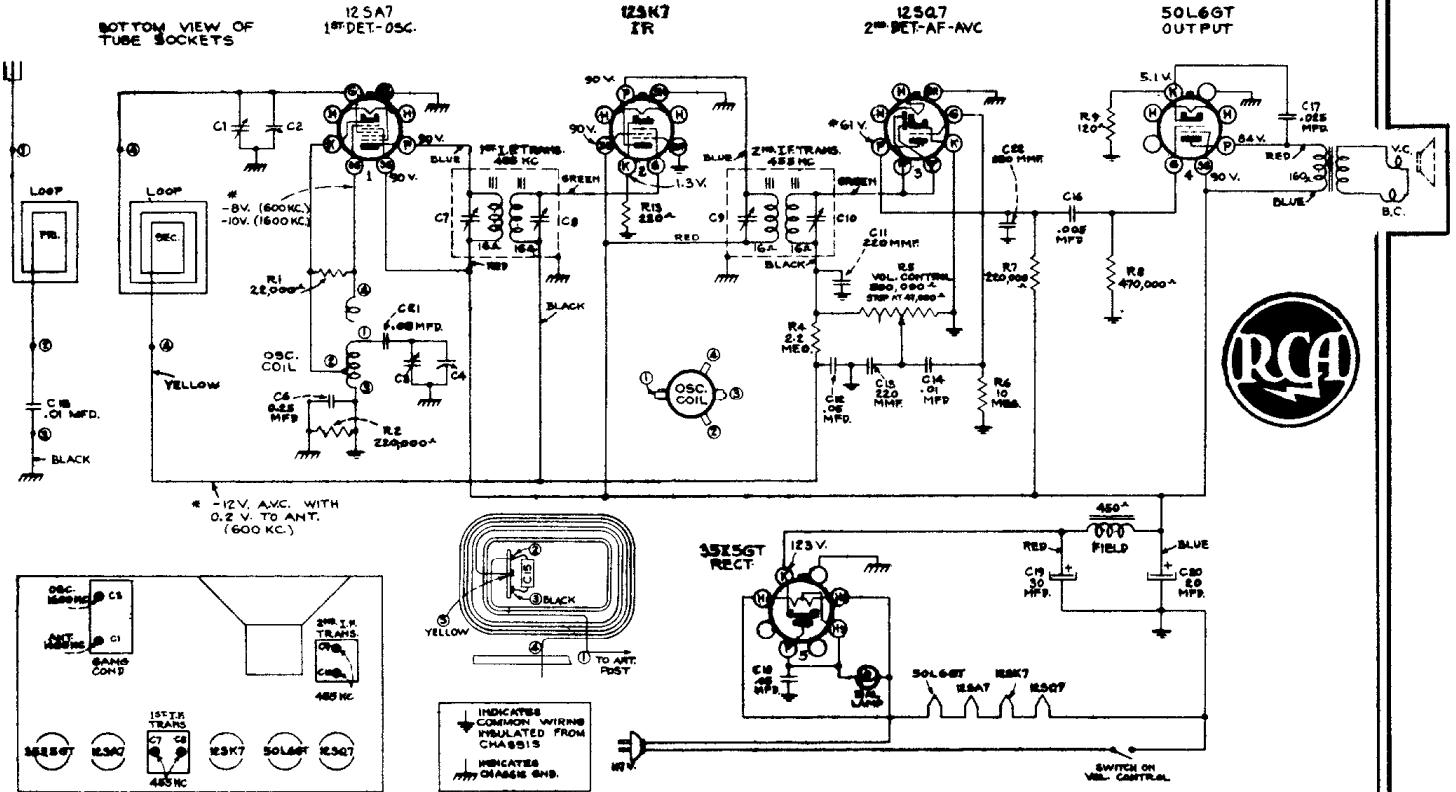

Models 45X3, 45X4 (Chassis No. RC-457E)

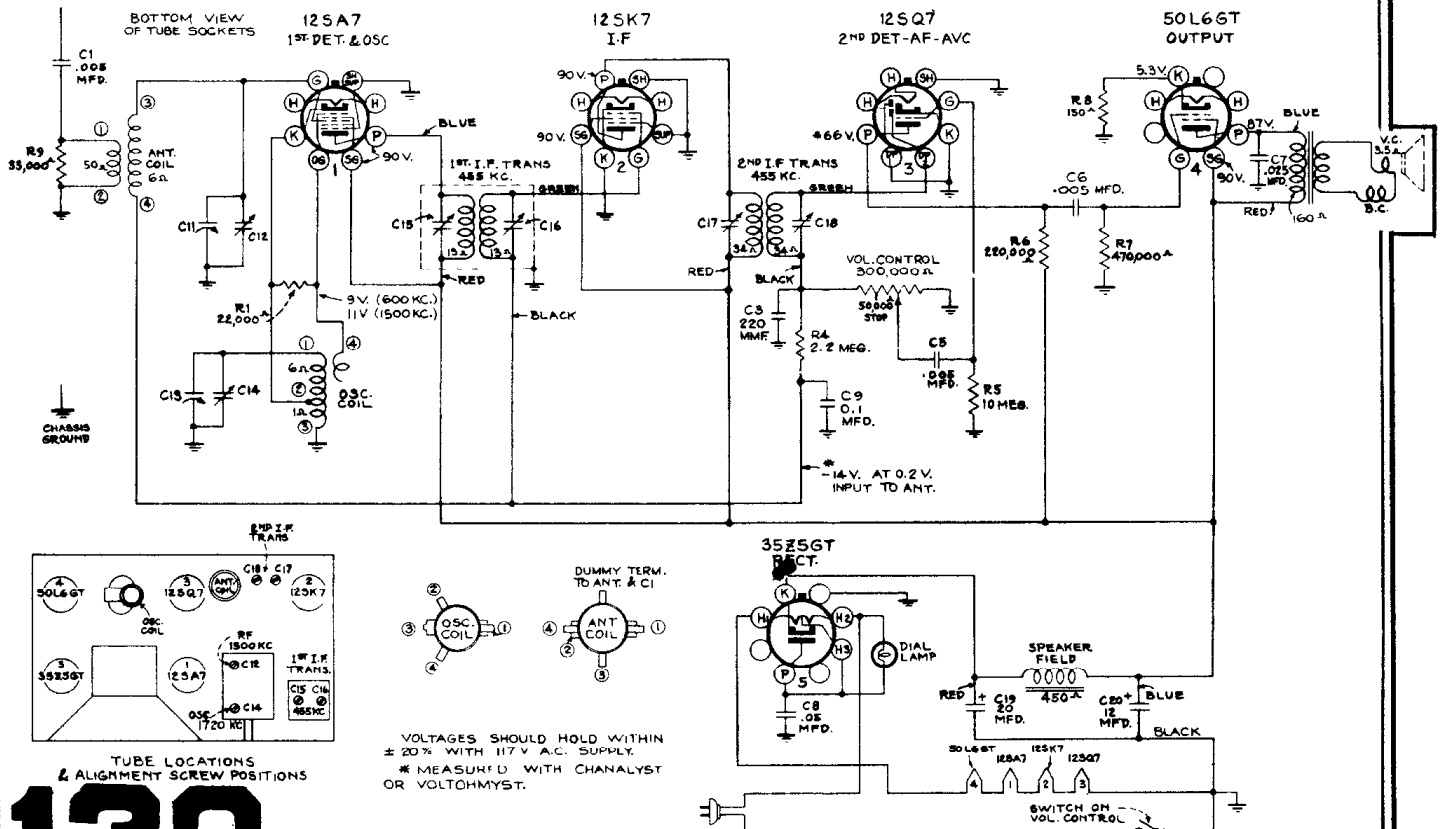

MANUAL OF POPULAR SERVICE DIAGRAMS

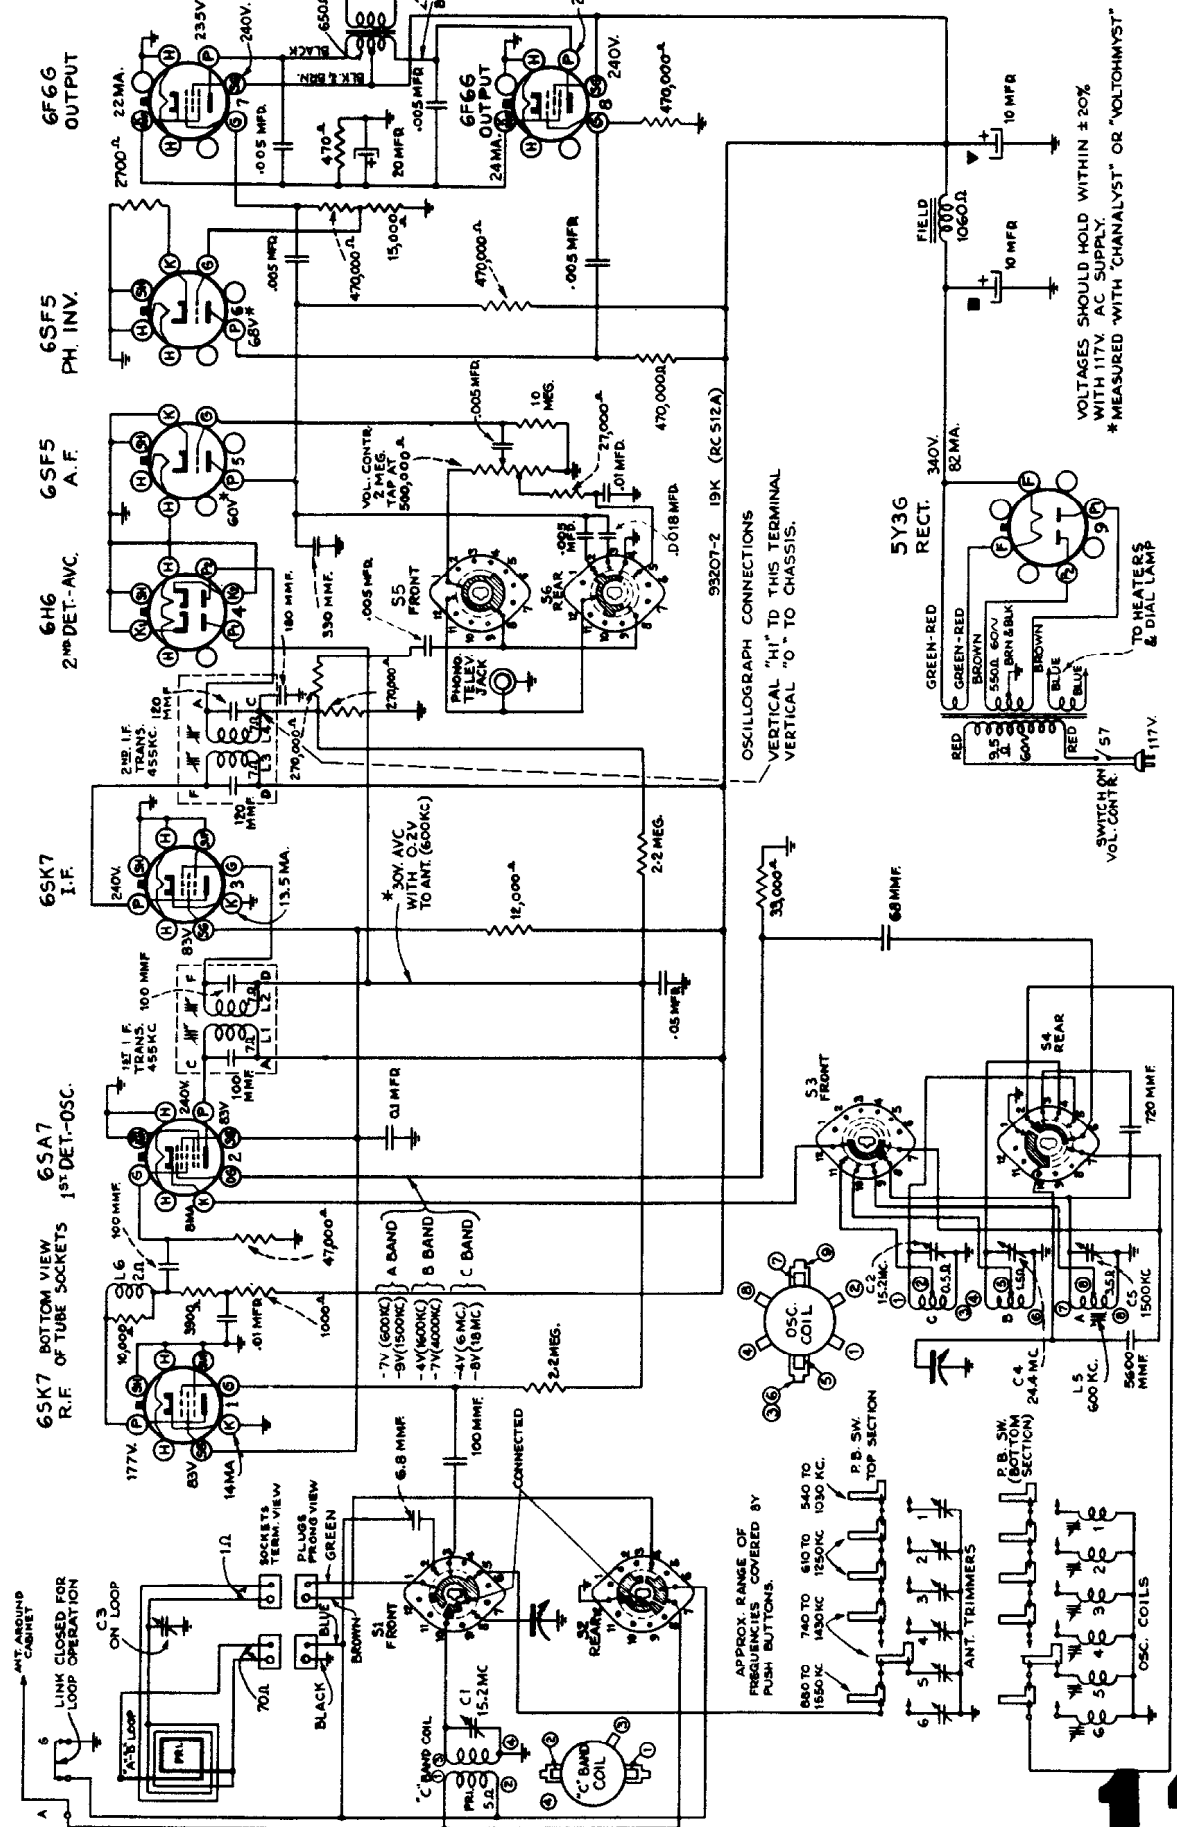

MODEL 19K (Chassis No. RC-512A)

Nine-Tube, Three-Band, A-C, Loop, Superheterodyne


RCA Victor

131



COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

45X18
Chassis No. RC-541-C

RCA Victor

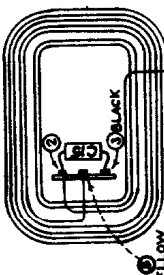


132

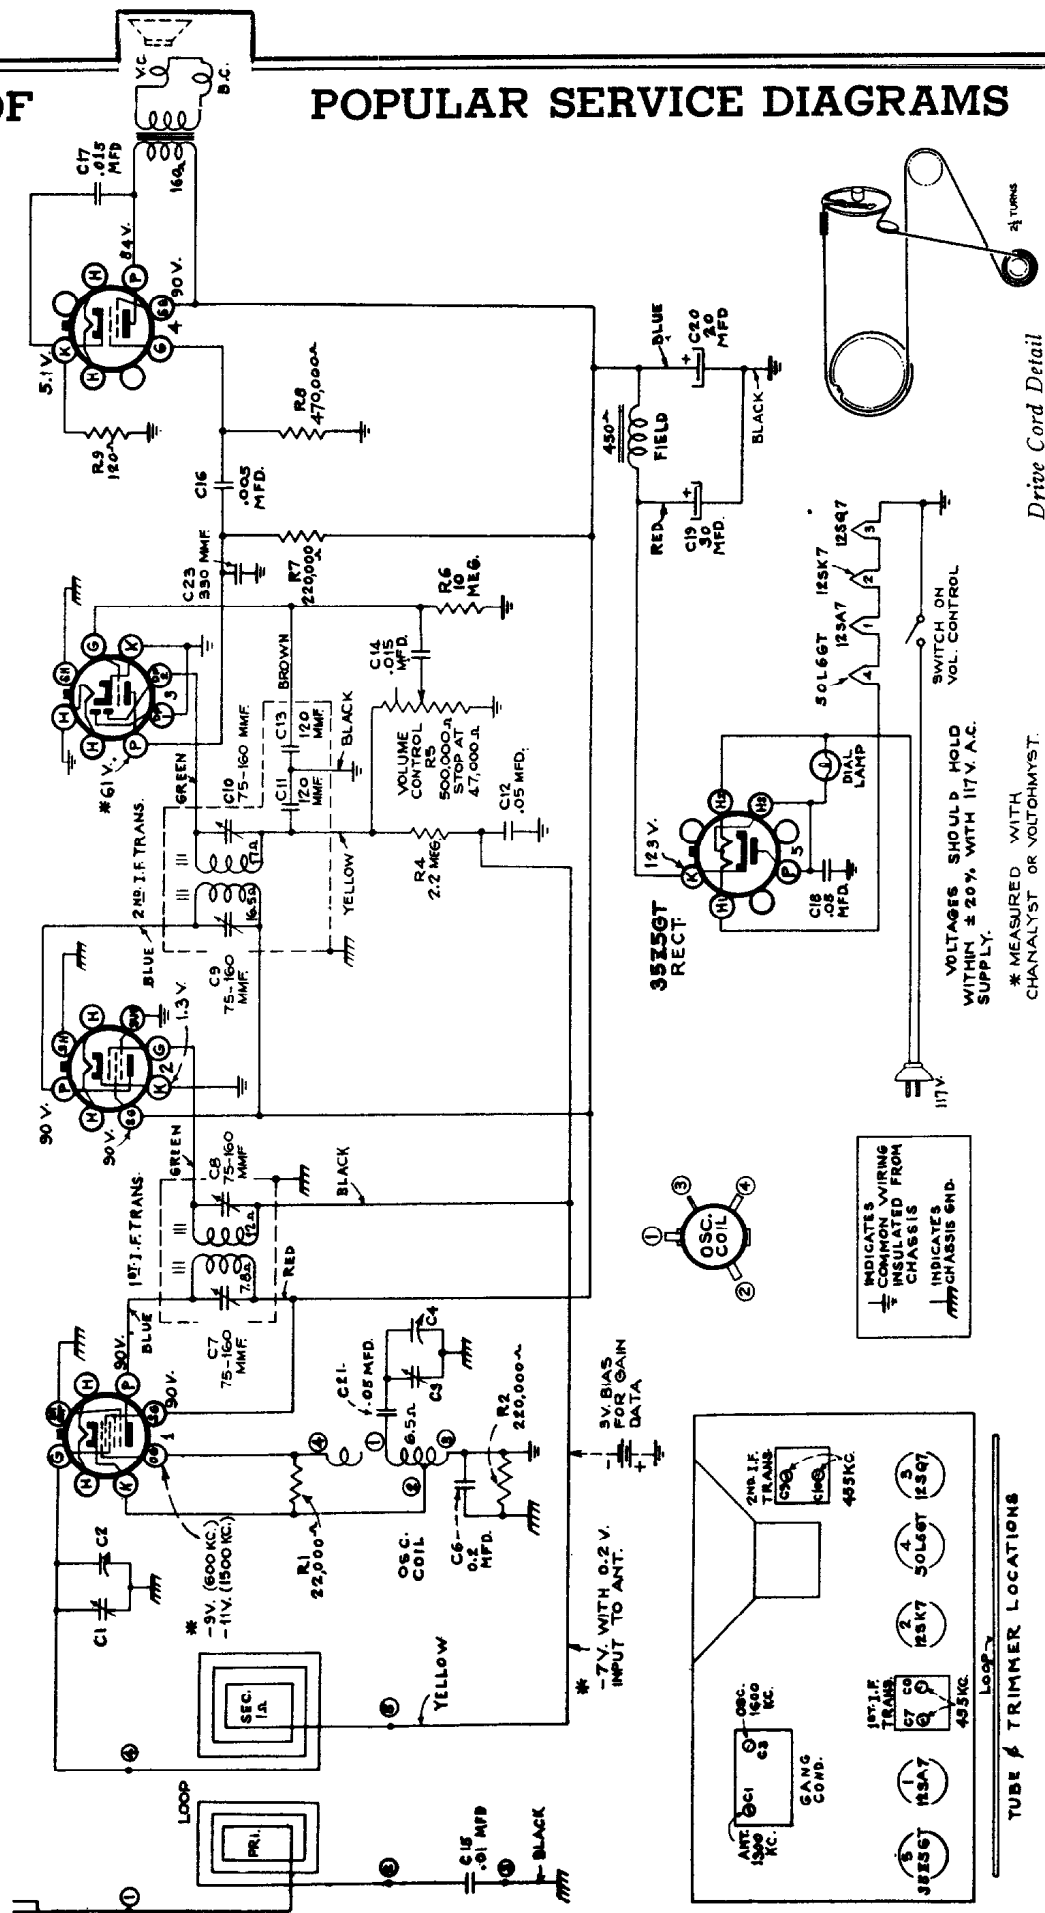


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


Drive Cord Detail

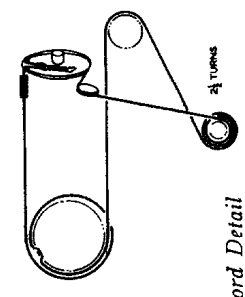


TUBE & TRIMMER LOCATIONS

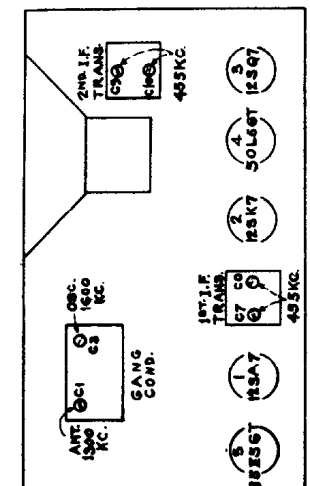

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

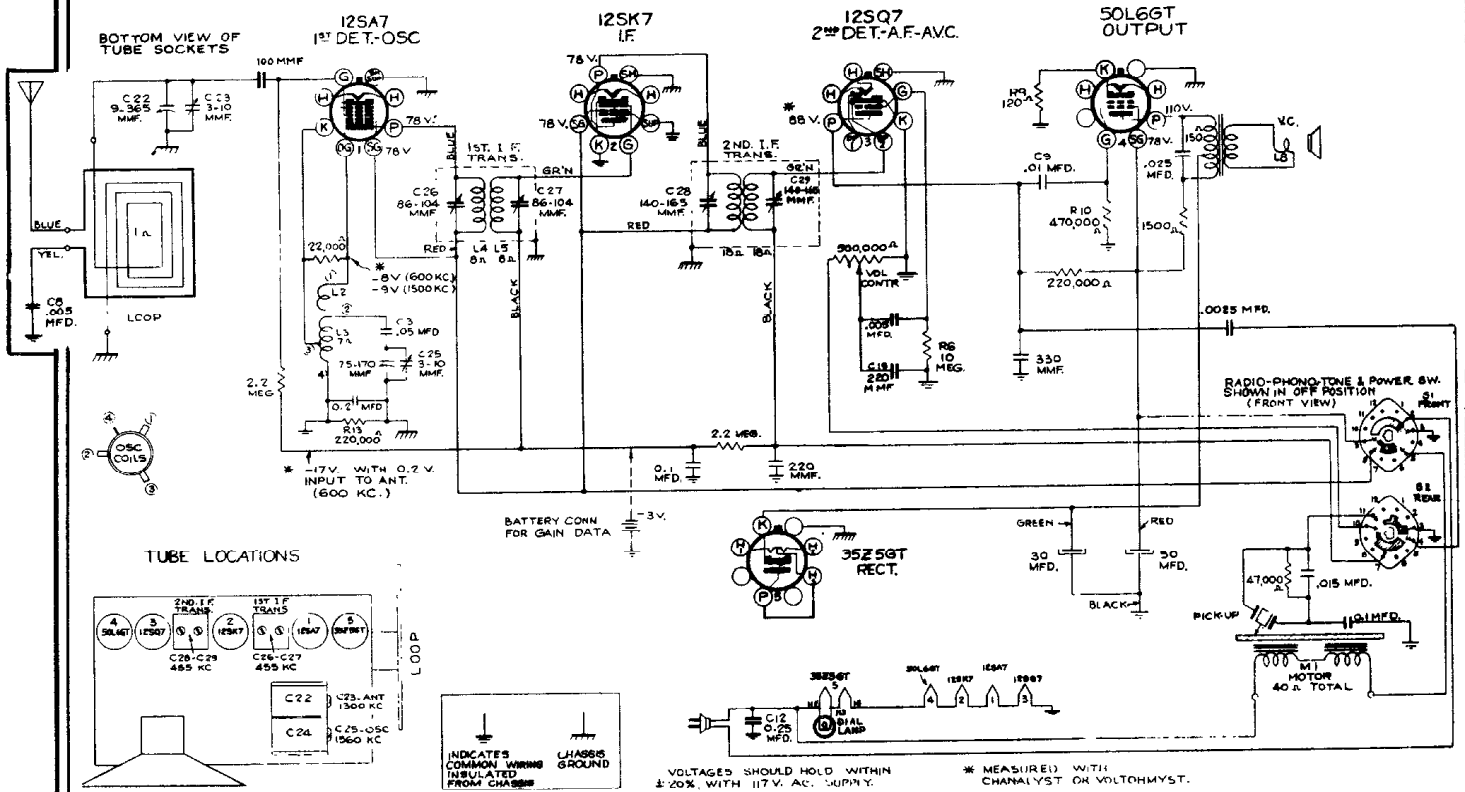


RCA VICTROLA MODEL V-100

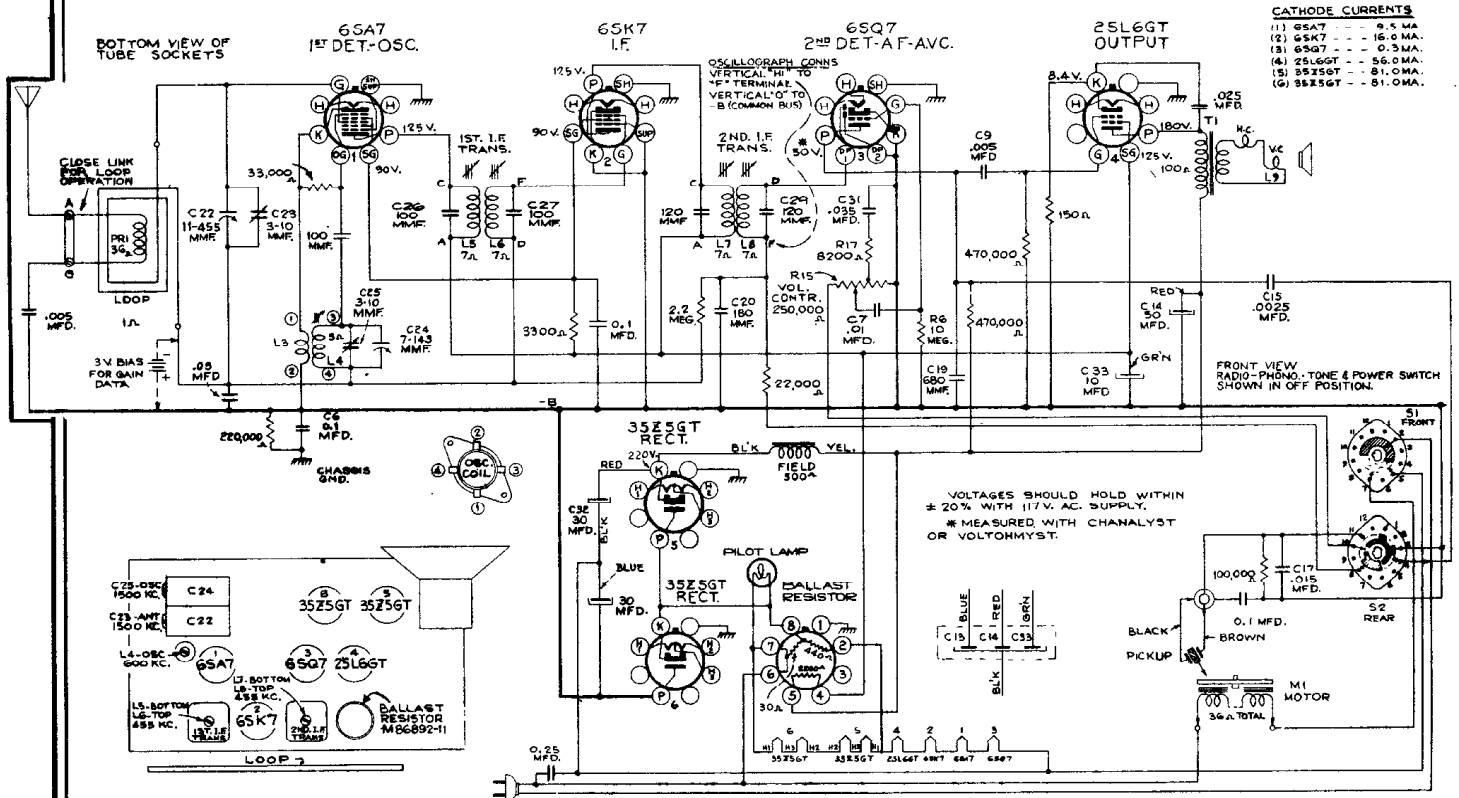

RCA VICTROLA MODEL V-101

Chassis No. RC-540

133

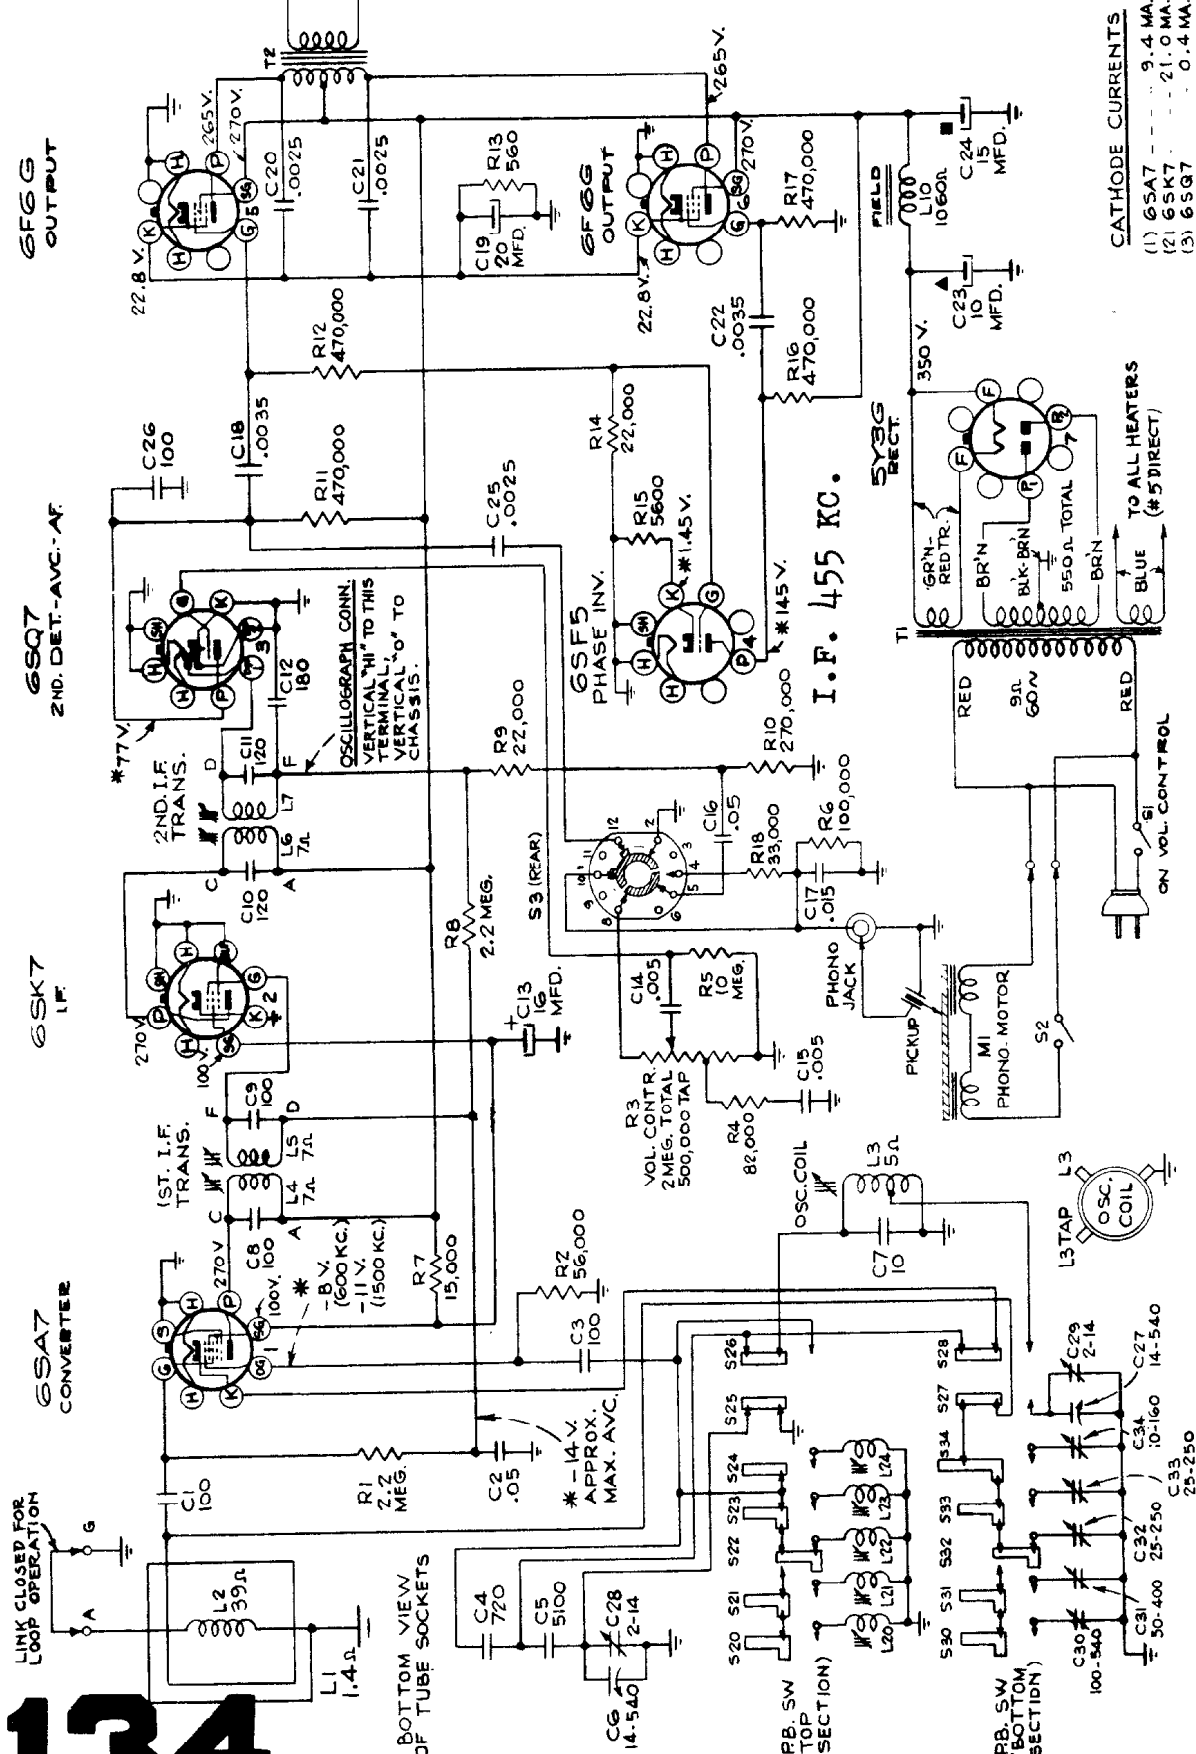

CATHODE CURRENTS

(1) 6SA7	9.4 MA.
(2) 6SK7	21.0 MA.
(3) 6SQ7	0.4 MA.
(4) 6SF5	0.3 MA.
(5) 6FG6	21.0 MA.
(6) 6FG6	21.0 MA.
(7) TOTAL RECT.	72.0 MA.

VOLTAGES SHOULD HOLD WITHIN ± 20% WITH 117 V. AC SUPPLY.
 * MEASURED WITH CHANNELYST OR VOLTOHMYST.

VICTROLA MODEL V-102
 Chassis No. RC-524



MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Push Button Adjustment

The station push buttons connect to separate magnetite-core oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 91031. Allow at least five minutes warm-up period before making adjustments.


In the event that the receiver is to be used with an external antenna use one or two feet of wire (as an antenna) to ensure sharp peaking during the final adjustment procedure. For loop operation, the link should be strapped across terminals on back of set. In either case the procedure is as follows:

1. Make a list of the desired stations, arranged in order from low to high frequencies.
2. Turn the range selector to "A" band, and manually tune in the first station on the list.
3. Turn range selector to "PB" position, push in station button No. 1 (extreme left). Then adjust the No. 1 oscillator core (L-14) to receive the station.

4. After oscillator core is set correctly, adjust C-8 for maximum output.
Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.
5. Adjust for each of the remaining stations in the same manner.
6. Make a final careful adjustment of the oscillator cores and antenna trimmers.

Owing to the relatively high r-f gain, it may be found that a given station can be tuned in at several different settings of the magnetite-core oscillator push-button coils. In such cases, it is advisable to unscrew the loop push-button trimmers to minimum capacity before adjusting the magnetite cores.

On the 880 to 1,550 kc push-button, the higher frequency stations may be received with L-9 either in or out (oscillator frequency either 455 kc below or 455 kc above the station frequency). The adjustment with this core in its out position (oscillator frequency 455 kc above the station frequency) is the correct one.

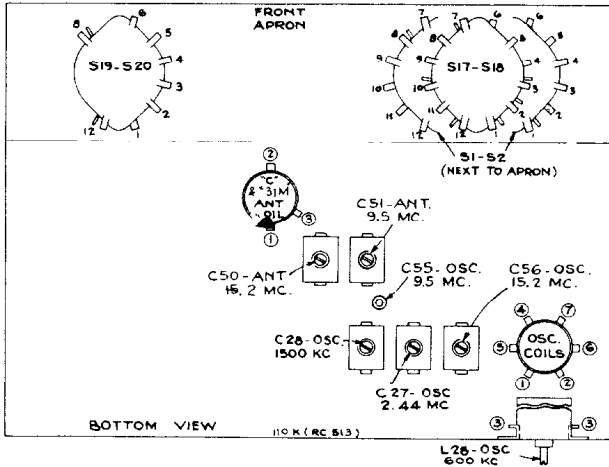

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic diagram.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Electronic Voltmeter.—The electronic voltmeter in the Chanalyst or Volt Ohmyst provides an unexcelled output indicator. It should be connected to the AVC bus, and the test-oscillator output adjusted to produce several volts of AVC.

Calibration for Alignment.—The dial calibration for alignment purposes can be set up in two ways:

1. The dial may be removed from the cabinet by sliding out the two spring pieces which clamp it in its mounting position. The condenser plates should then be turned into full mesh, the pointer adjusted to the scratch at the left end of the dial backing plate, and the dial placed on the frame so that its extreme left calibration mark coincides with the pointer. The dial may be held in place with scotch tape. In this manner the actual receiver dial is used for alignment. When alignment is finished, the scale should be replaced including the fibre light shields which are folded under the ends of the glass scale.
2. A calibration scale is attached to the tuning drum. The correct setting of the gang, in degrees, for each alignment frequency is given in the alignment table. Check the position of the drum, making sure that the 0 degree scale mark is horizontal with the gang in full mesh.


Pointer for Calibration Scale.—If method (2) is used, improvise a pointer for the calibration scale by fastening a piece of wire to the chassis, and bend the wire so that it points to the 0 degree mark on the calibration scale when the plates are fully meshed.

Spread-Band Alignment.—Make final adjustment of C56 and C50 during actual reception of a station of known frequency near 9.5 megacycles.

880 TO 1550 KC	740 TO 1430 KC	610 TO 1250 KC	540 TO 1030 KC	TRIMMER SCREWS	CORE RODS
6	5	4	3	2	1
0	0	0	0	0	0
6	5	4	3	2	1

Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for maximum peak output—
1	I-F grid in series with .01 mfd.	455 kc	"C" Band Quiet Point at 18 mc end of dial	L21 and L22 (2nd I.F. Trans.)
2	1st-det. grid in series with .01 mfd.			L19 and L20 (1st I.F. Trans.)
3	Antenna terminal (A), in series with 47 mmfd. (link closed)	15.2 mc	15.2 mc (149°) "C" band	C56 (osc.)* C50 (ant.)** Rock in
4		9.5 mc	9.5 mc (65.5°) "31M" band	C55 (osc.)* C51 (ant.)** Rock in
5	Stator of antenna section of gang, in series with 300 ohms	2.44 mc	2.44 mc (97°) "B" band	C27 (osc.)
6		600 kc	600 kc (30.5°) "A" band	L28 (osc.)
7		1,500 kc	1,500 kc (158°) "A" band	C28 (osc.)
8	Repeat steps 6 and 7.			
9	Fasten chassis in cabinet, see that link is closed on antenna terminal board, indicator at left end of dial scales with gang at maximum capacity.			
10	Radiation loop consisting of two turns of wire 18 inches in diameter located 4 to 6 feet from receiver	1,500 kc	1,500 kc "A" band	C61 (ant.) (mounted on loop)
11		600 kc	600 kc "A" band	L28 (osc.) Rock in
12	Repeat steps 10 and 11			

* Use minimum capacity peak if two peaks can be obtained.
** Use maximum capacity peak if two peaks can be obtained.
NOTE: Oscillator tracks 455 kc above signal on all bands.

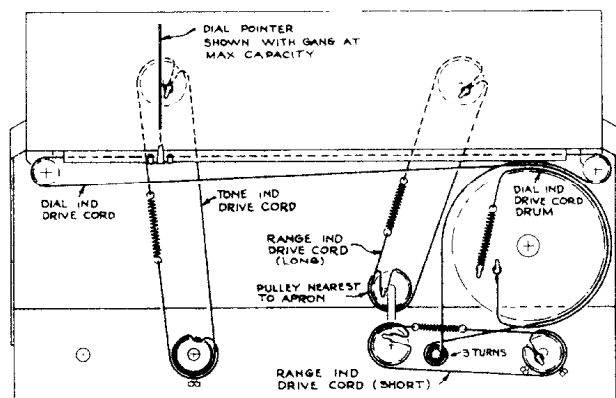

136

MODEL 110-K

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

Sears, Roebuck & Co.

Models 3351, 3451,

3551, 132.802

POSITION OF FREQUENCY GENERATOR VARIABLE

Closed
1400 kc
600 kc

GENERATOR CONNECTION (High)

12A8GT Grid
Ant. clip
Ant. clip

GENERATOR CONNECTION (Low)

Var. Cond. Frame
Chassis Base
Chassis Base

TRIMMERS ADJUSTED (In order shown)

T2, T1
C2, C1
Check Point

TRIMMER FUNCTION

IP Translator

MOST POPULAR SERVICE DIAGRAMS


12A8GT

12K7GT

12SQ7GT

35L6GT

35Z4GT 30w

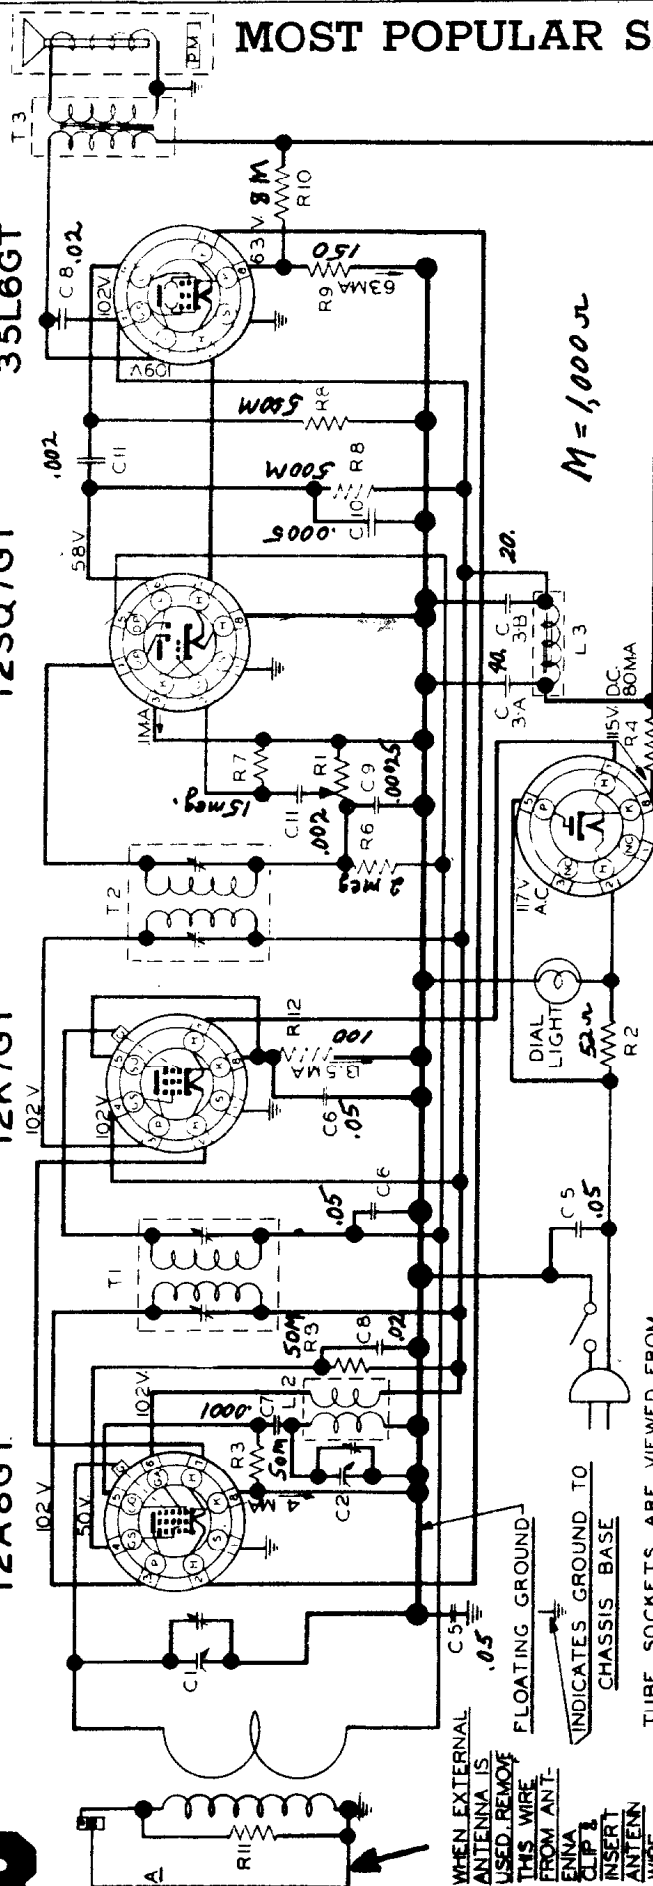



$M = 1,000 \mu$

WHEN EXTERNAL ANTENNA IS USED REMOVE THIS WIRE FROM ANT. ENNA CLIP & INSERT ANTENNA WIRE.


INDICATES FLOATING GROUND TO CHASSIS BASE

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS

VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO FLOATING GROUND AND ARE TAKEN WITH NO SIGNAL. A.C. LINE VOLTAGE AT 117 VOLTS.

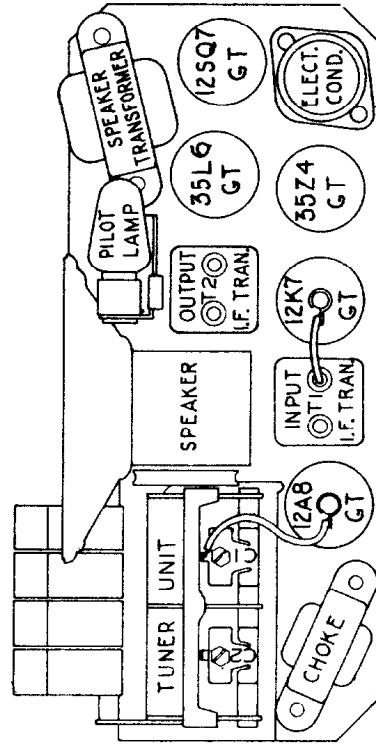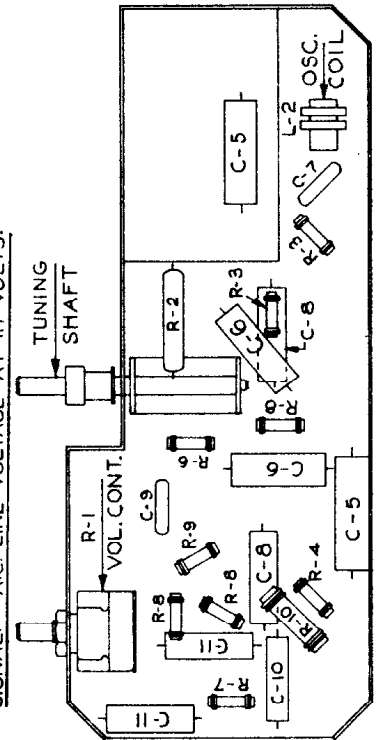



MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

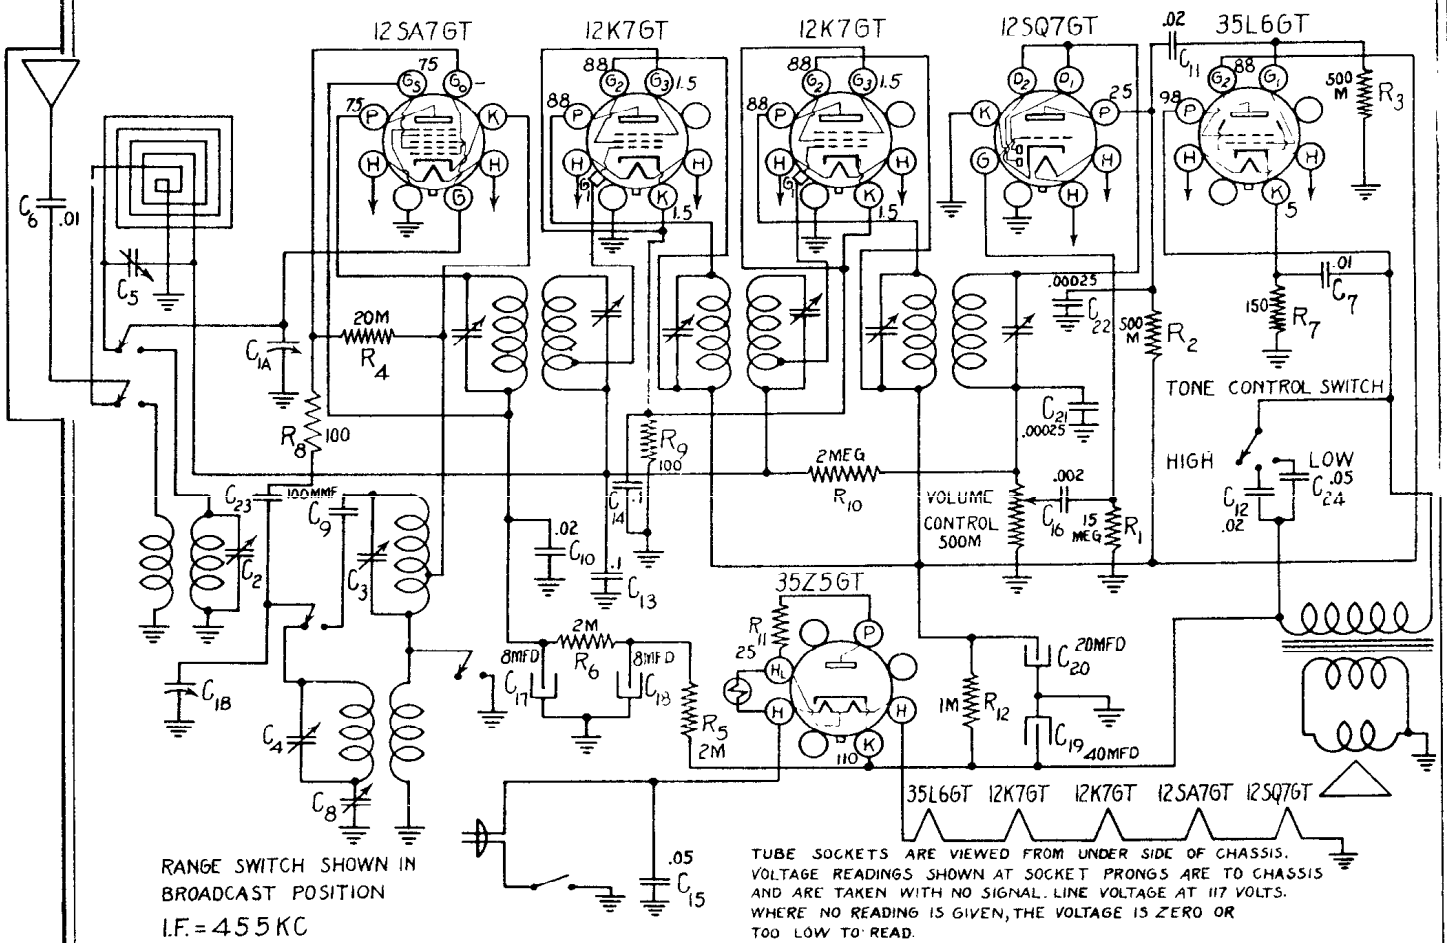

Sears, Roebuck & Co. Chicago.

Models 3361, 3461, 3561, 3621.

Factory No. 109.356

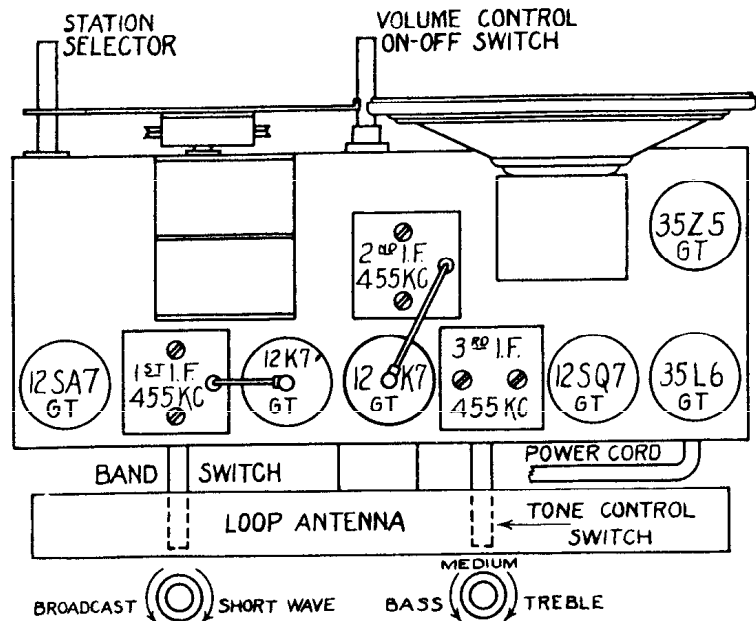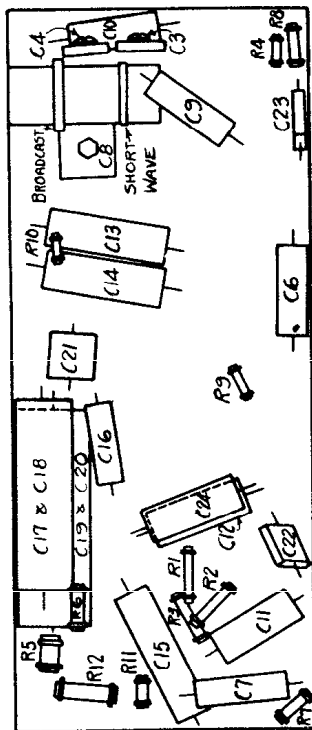


140

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS


WIRING DIAGRAM FOR GILVERTONE CHASSIS 10L617

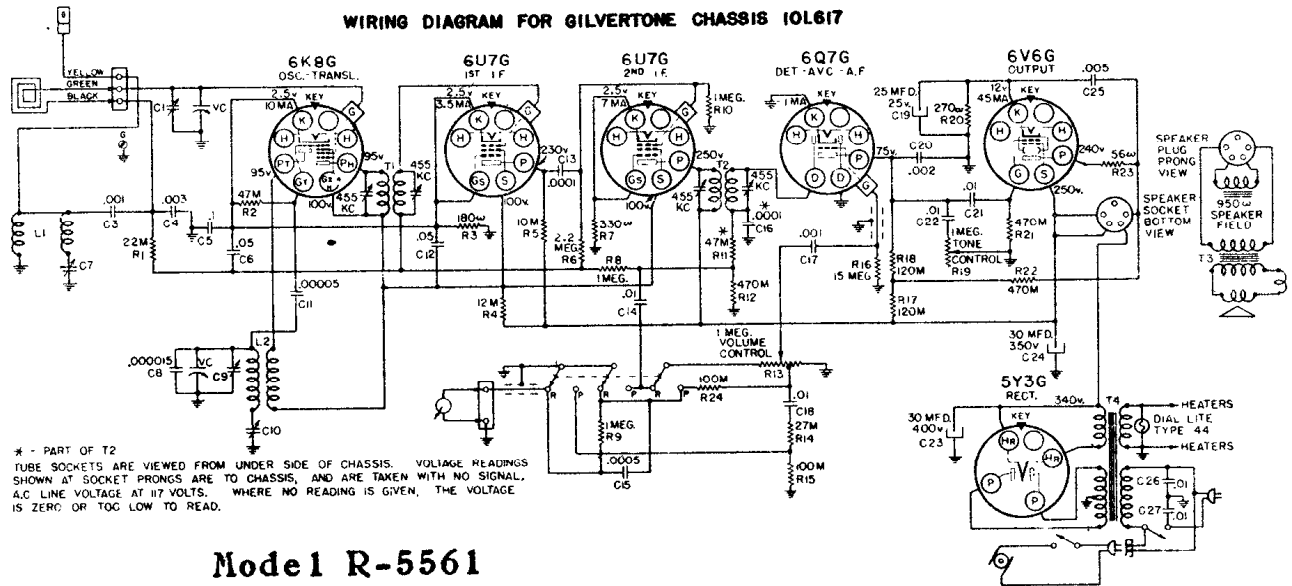

Model R-5561

Sears, Roebuck & Co. Models 5732 and 5732-B Factory Nos. 109.371 and 109.371-1

These receivers are alike except that the early model C13 is .001 mfd. and C9 is .002 mfd. Also the connection from C13 was connected to the volume control side of C9.

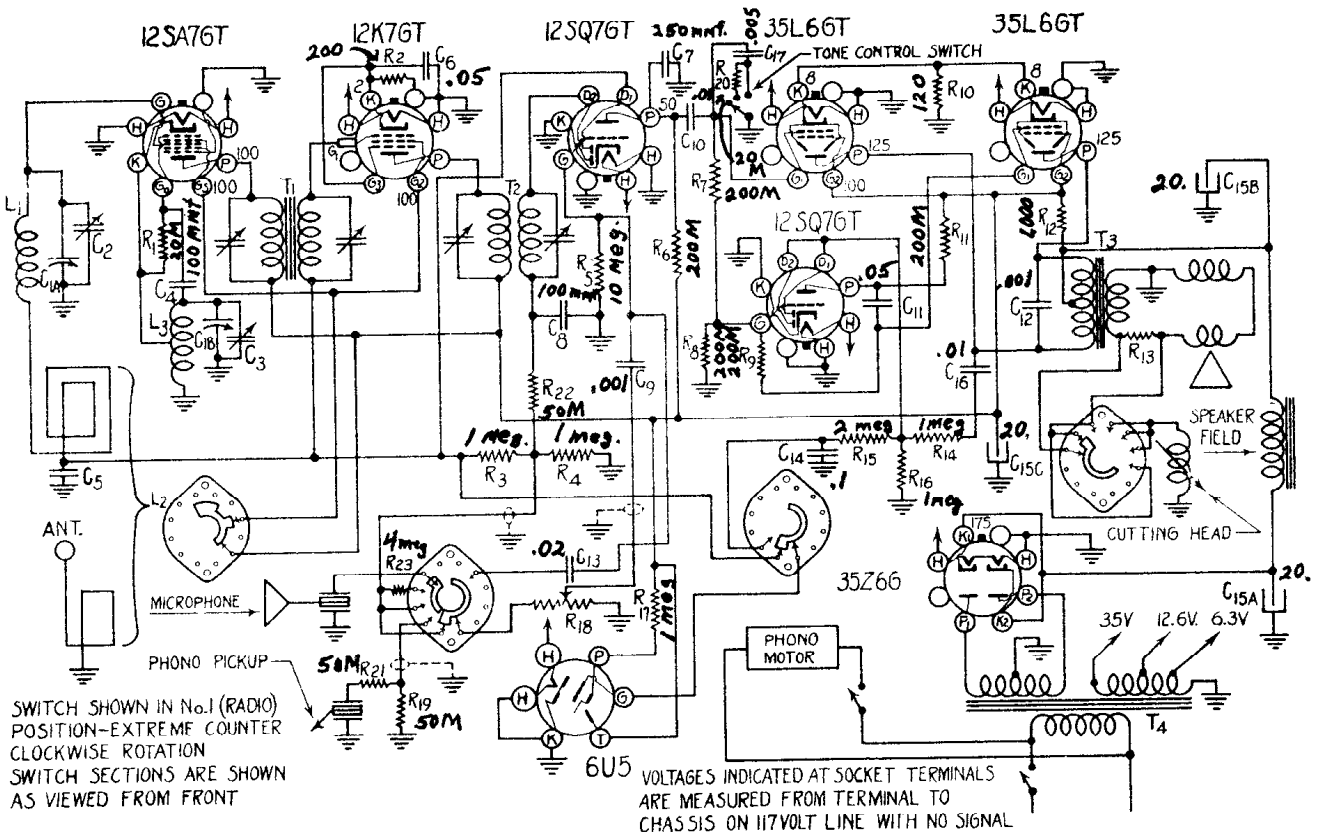

M = 1,000 Ω

Sears, Roebuck & Co. Models 5601A and 6449

Factory Number 101.628

Intermediate Frequency: 455 KC.


FREQUENCY RANGES:

Band "A"	538-1650 kc
Band "B"	1.45-2.56 mc
Band "C"	5.82-18.3 mc
Band "D"	9.35-9.86 mc
Band "E"	10.89-12.02 mc

ALIGNMENT FREQUENCIES:


Antenna-Transl.	1500 kc
Oscillator	2.4 mc
Trimmer	15 mc
Padder	600 kc
Fixed	2.4 mc
Fixed	15 mc
Fixed	9.55 mc
Fixed	11.71 mc

WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.628, -1A

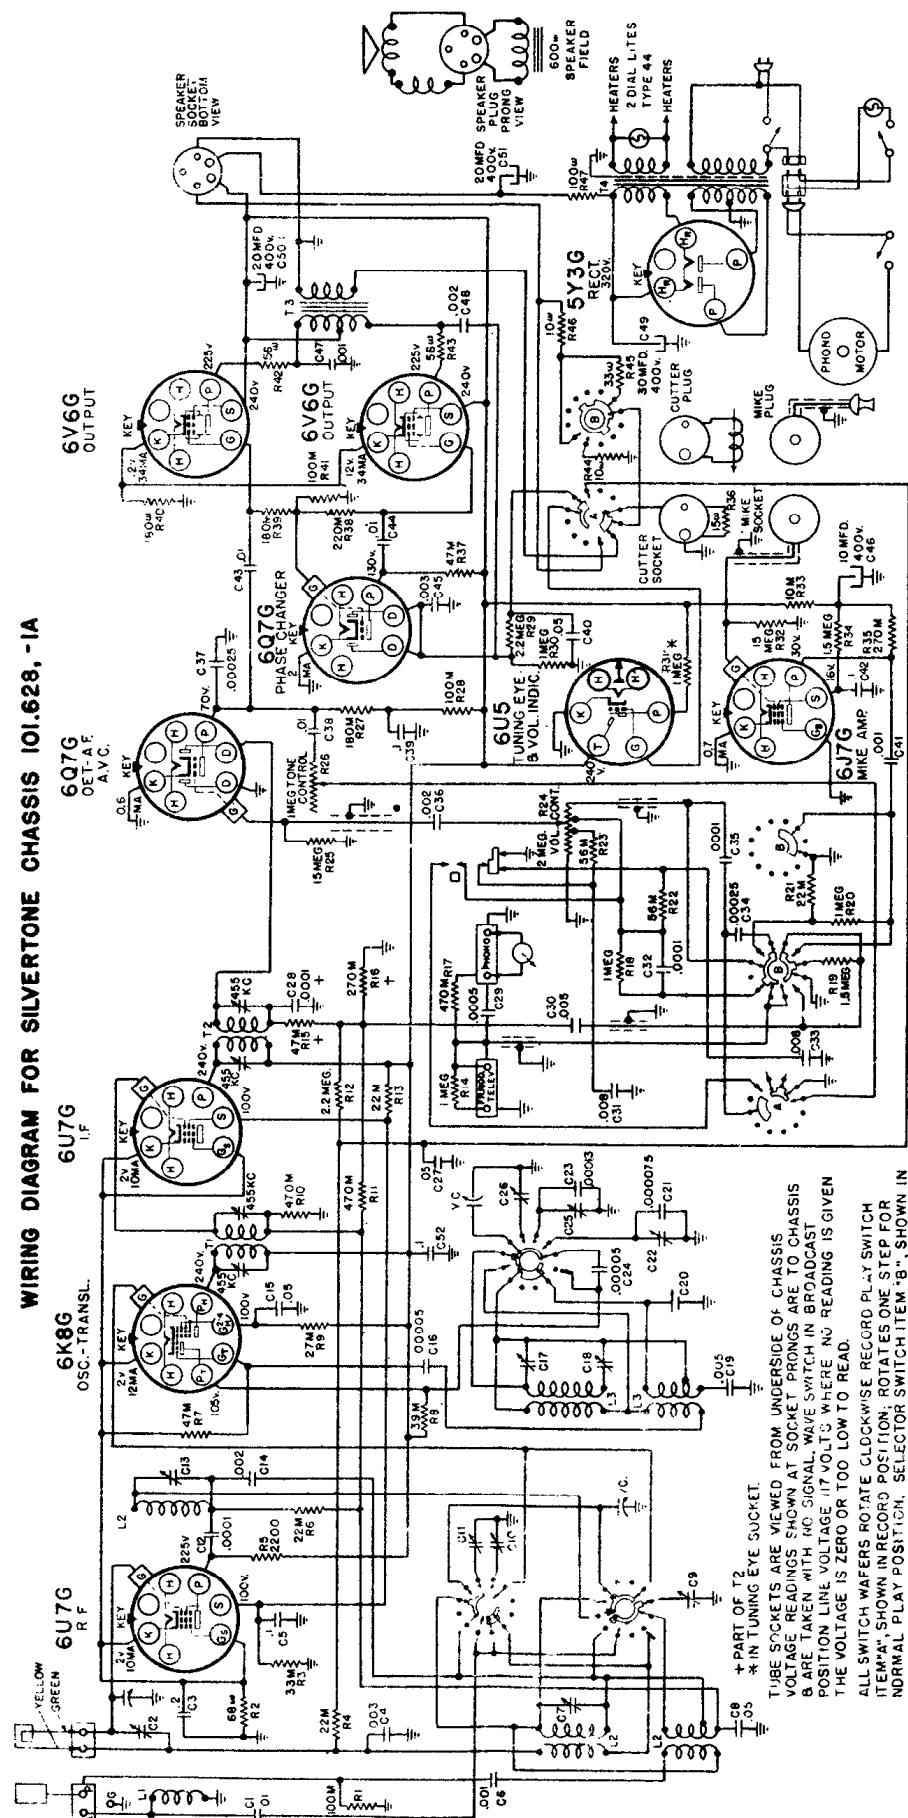

* PART OF T2
* IN TUNING EYE SOCKET.
TUBE SOCKETS ARE VIEWED FROM UNDERSIDE OF CHASSIS
VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS
B. ARE TAKEN WITH IFC SIGNAL, WAVE SWITCH IN BROADCAST
POSITION LINE VOLTAGE (17 VOLTS, WHERE NO READING IS GIVEN
THE VOLTAGE IS ZERO OR TOO LOW TO READ.
ALL SWITCH WAFERS ROTATE CLOCKWISE RECORD PLAY SWITCH
ITEM "A", SHOWN IN RECORD POSITION; ROTATES ONE STEP FOR
NORMAL PLAY POSITION, SELECTOR SWITCH ITEM "B", SHOWN IN
PHONO POSITION; ROTATES ONE STEP FOR RADIO POSITION, TWO
STEPS FOR MICROPHONE POSITION; ON, THREE STEPS FOR RADIO &
MICROPHONE POSITION.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

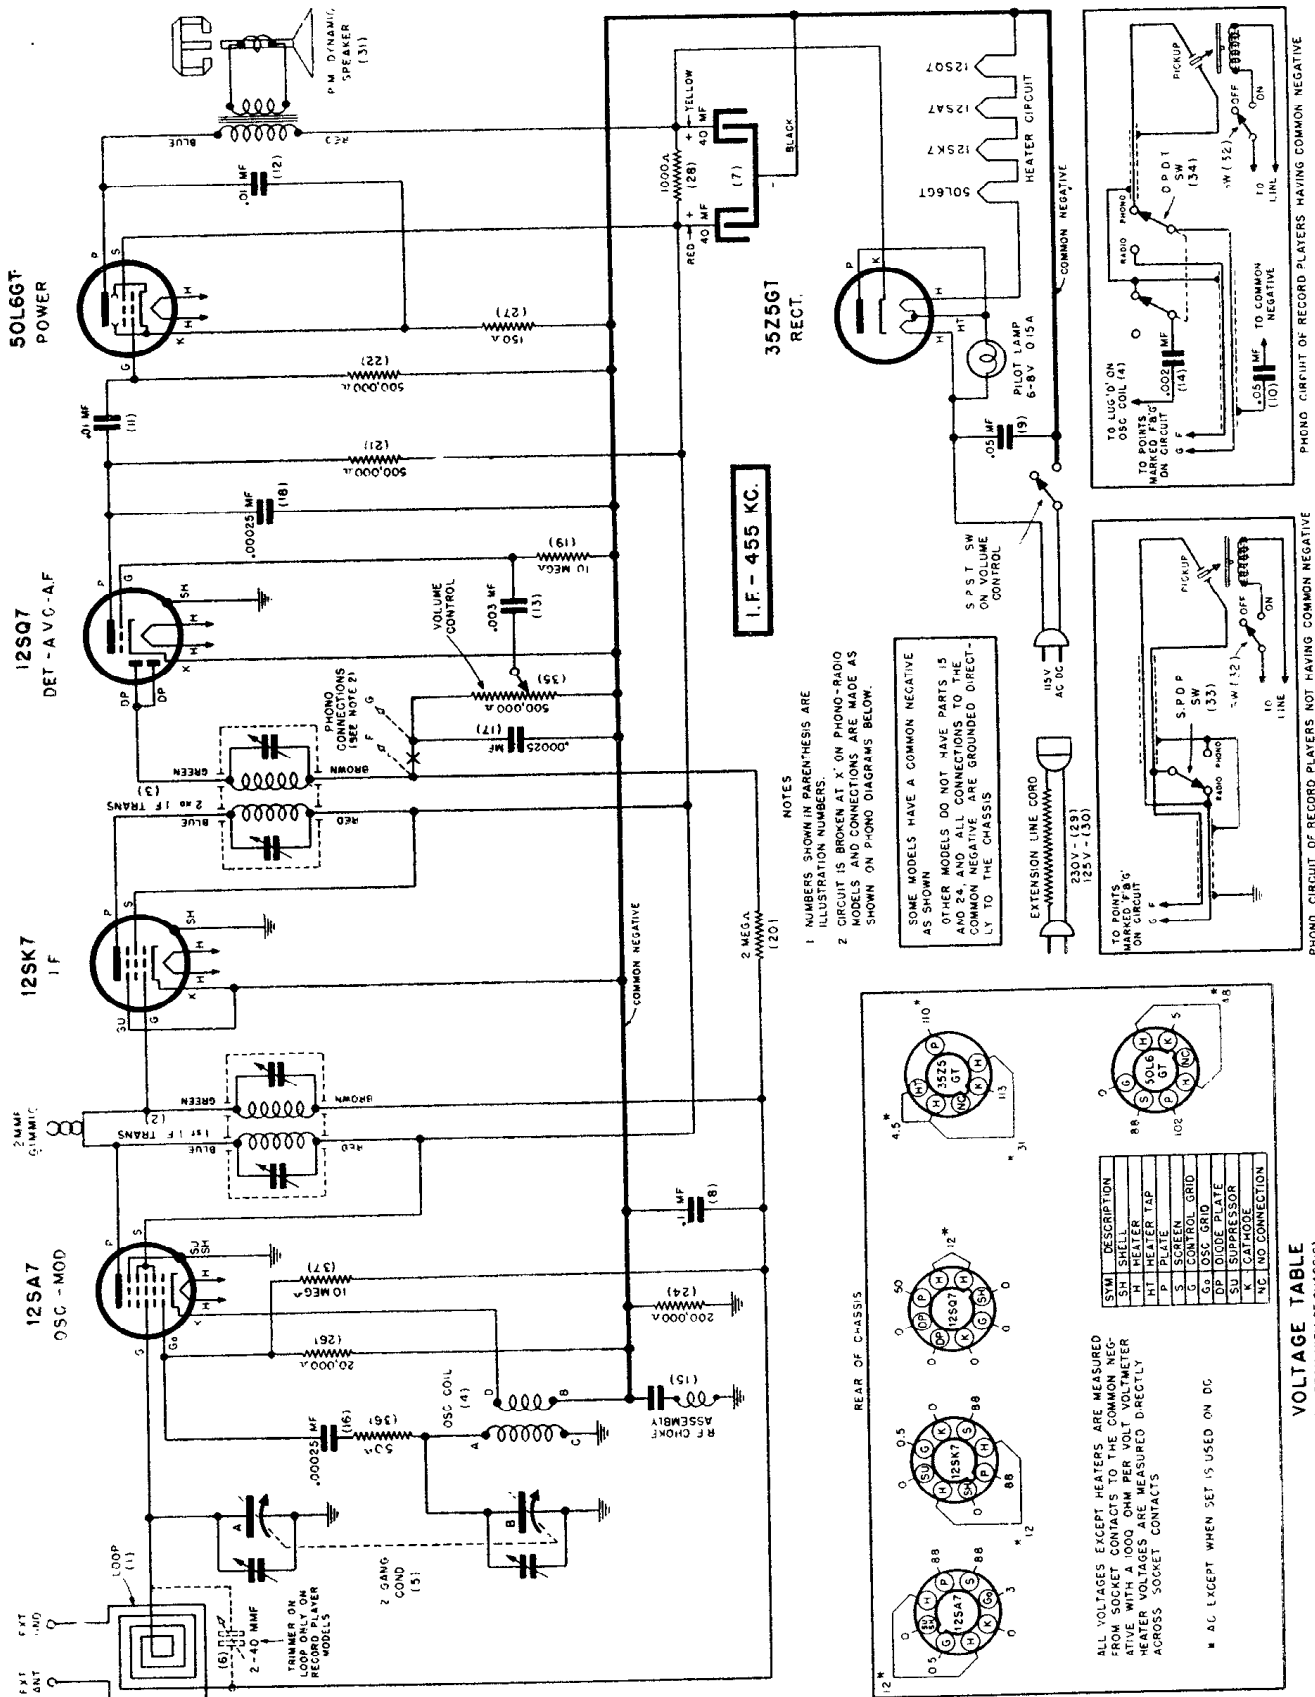



NOTES

- NUMBERS SHOWN IN PARENTHESIS ARE ILLUSTRATION NUMBERS.
- CIRCUIT IS BROKEN AT 'X' ON PHONO-RADIO MODELS AND CONNECTIONS ARE MADE AS SHOWN ON PHONO DIAGRAMS BELOW.


SOME MODELS HAVE A COMMON NEGATIVE AS SHOWN. OTHER MODELS DO NOT HAVE PARTS 15 AND 28, AND CONNECTIONS TO THE COMMON NEGATIVE ARE GROUNDED DIRECTLY TO THE CHASSIS.

Sentinel Radio Corporation
 Model 248
 COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

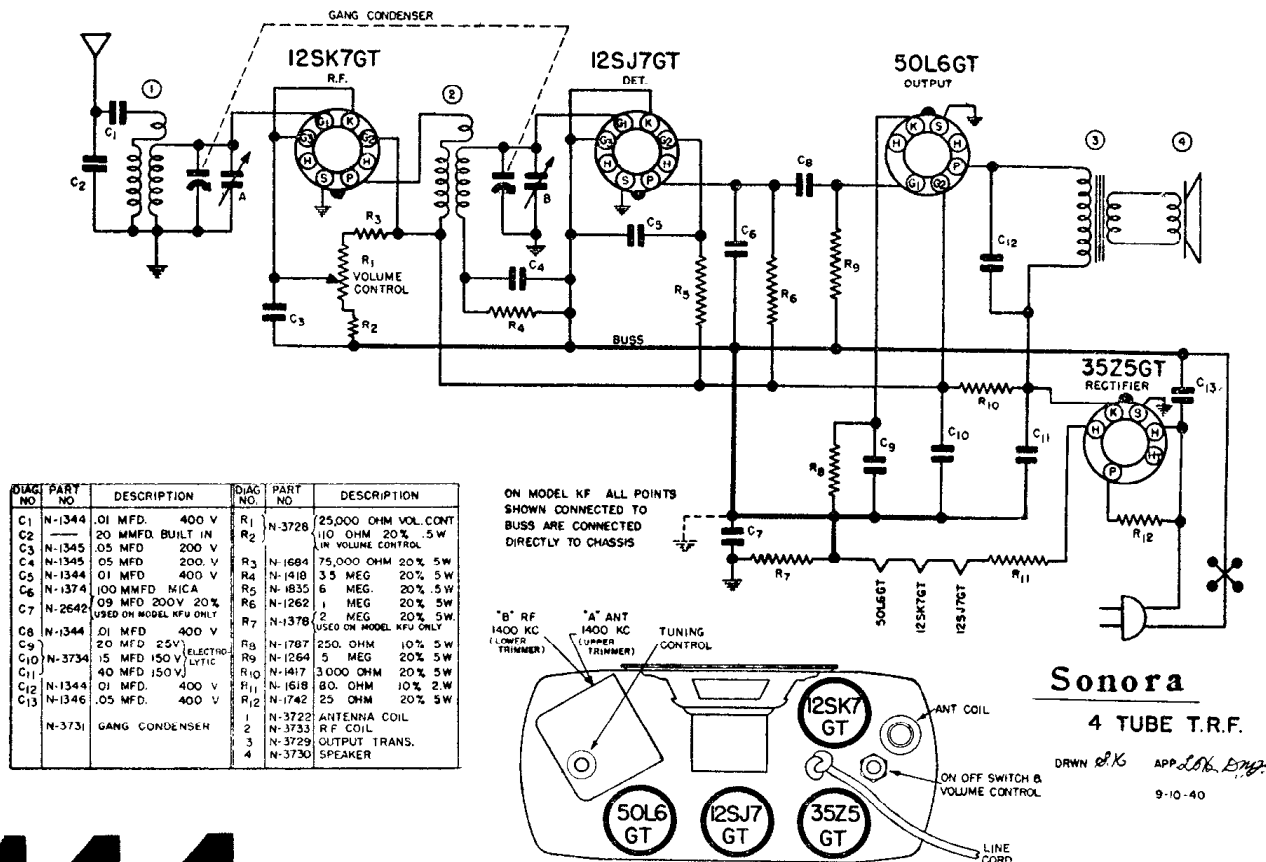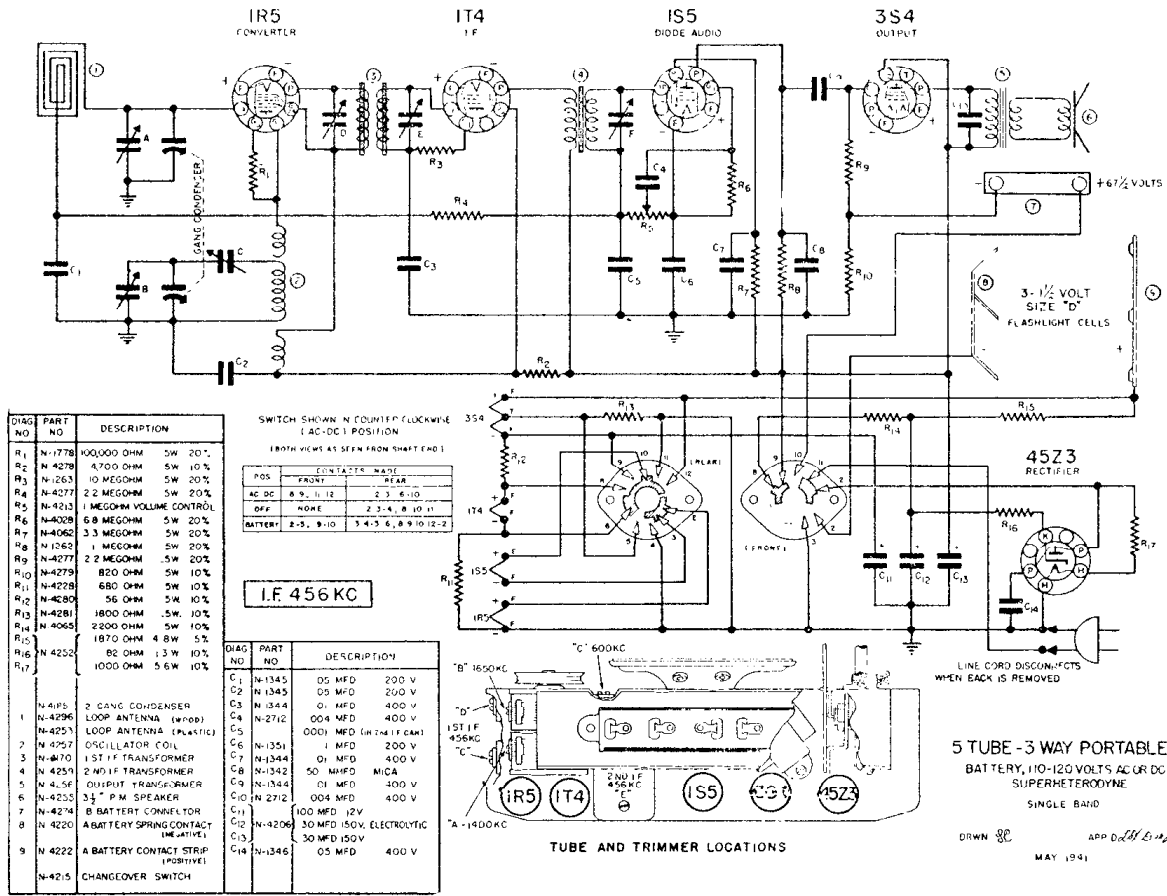

SCHEMATIC DIAGRAM
SPARTON SUPERHETERODYNE MODEL 511U & 511 (SEE NOTE)
INTERMEDIATE FREQUENCY 456 K.C.
 BOTTOM VIEWS OF ALL SOCKET CONNECTIONS

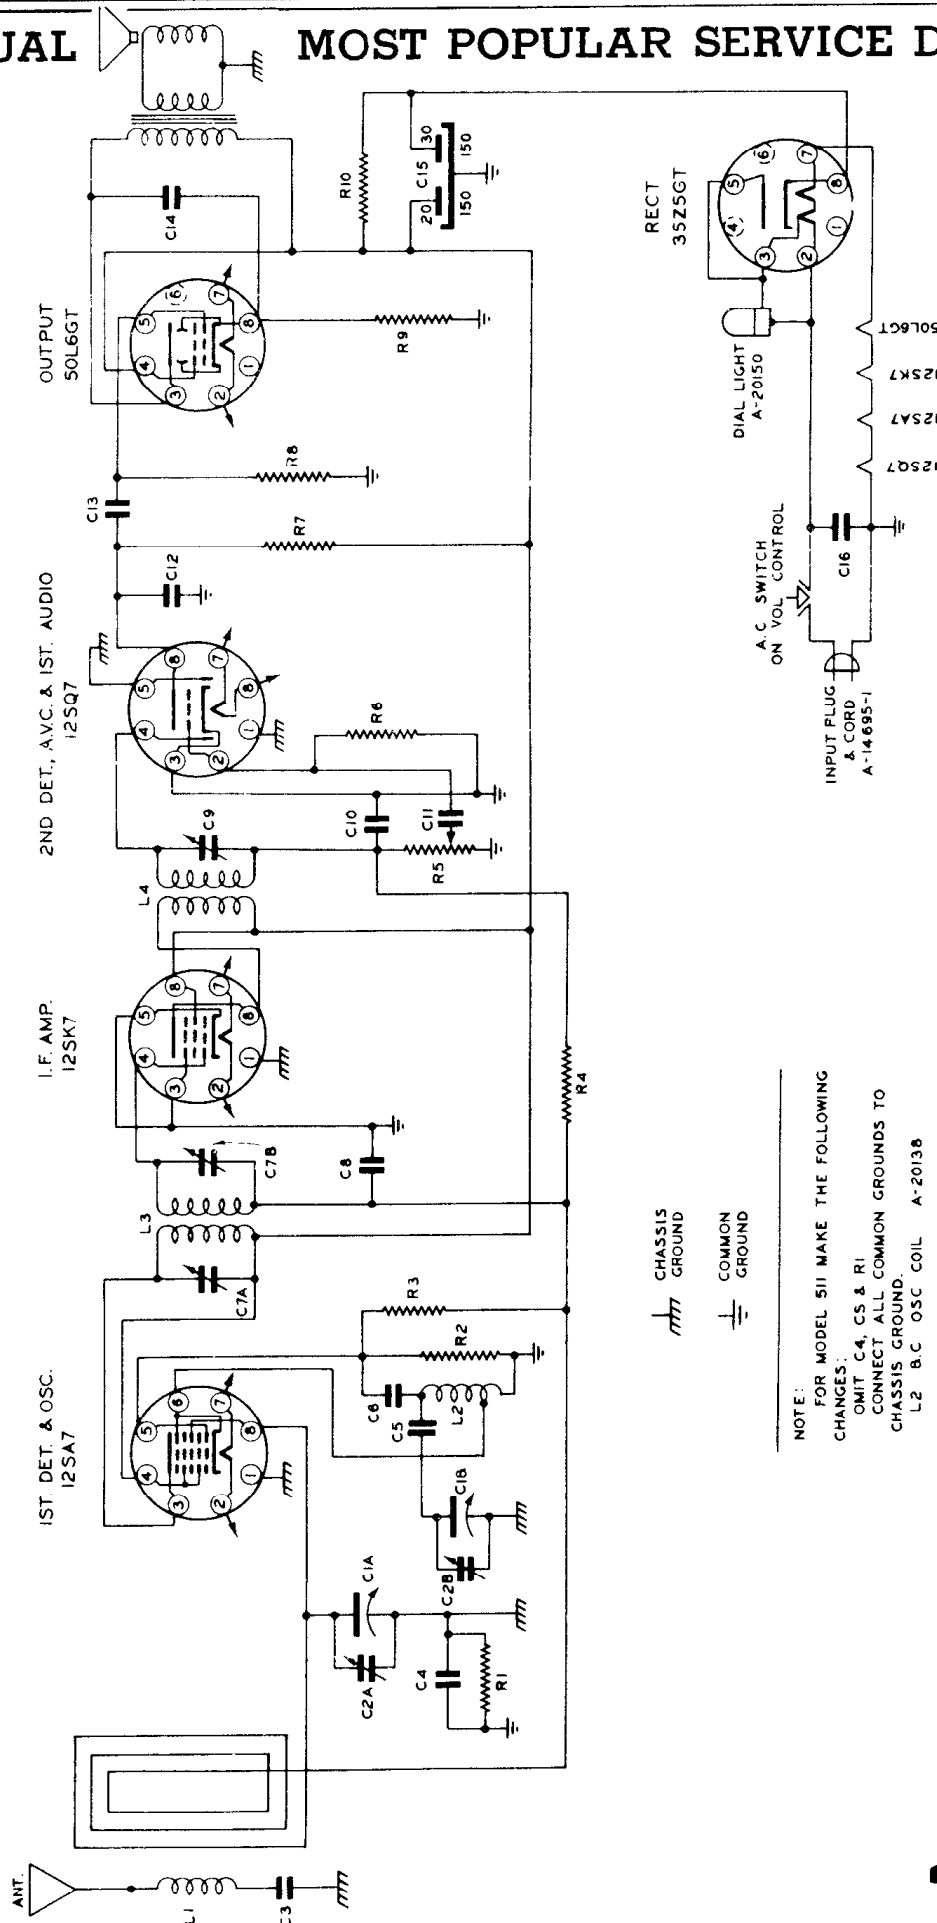


NOTE:
 FOR MODEL 511 MAKE THE FOLLOWING
 CHANGES:
 OMIT C4, C5 & R1
 CONNECT ALL COMMON GROUNDS TO
 CHASSIS GROUND.
 L2 B.C. OSC. COIL A-20138

C1A & B	VARIABLE CONDENSER	A-20158	C9	NO. 2 I.F. TRIMMER	R1	150,000 Ω	C-2796-26C	L1	LOOP ANTENNA	A-20159
C2A & B	TRIMMERS ON VARIABLE	C 3206-58C	C10	250 MMF. MICA	R2	20,000 Ω	C-2796-190C	L2	B.C. OSC. COIL	A-20138-U
C3	.001 MFD. 600V.	C 3202-96C	C11	.01 MFD. 400V.	R3	15 MEGOHM	A-20136	L3	NO. 1 I.F. COIL	A-20139
C4	.2 MFD. 200V.	C 3202-78C	C12	500 MMF. MICA	R4	2 MEGOHM	C-2796-238C	L4	NO. 2 I.F. COIL	A-20140
C5	.02 MFD. 200V.	C 720-316	C13	.002 MFD. 600V	R5	500,000 Ω V.C. & SW.	A-20137			
C6	50 MMF. MICA	C 3204-78C	C14	.01 MFD. 400V.	R6	5 MEGOHM	C-2796-248C			
C7A & B	NO. 1 I.F. TRIMMERS	C 720-315	C15	20-30 MFD. ELECT.	R7	250,000 Ω	C-2796-216C			
C8	.05 MFD. 200V.	C 3204-84C	C16	.05 MFD. 400V.	R8	500,000 Ω	C-2796-94C			
					R9	150 Ω	C-2796-52C			
					R10	1000 Ω	C-2797-13B			


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

SCHEMATIC DIAGRAM SPARTON SUPERHETERODYNE MODELS 651, 651-D, 651-SX, 651-SXD, 651-SXP, 651-SXP INTERMEDIATE FREQUENCY 456 K.C. BOTTOM VIEWS OF ALL SOCKET CONNECTIONS

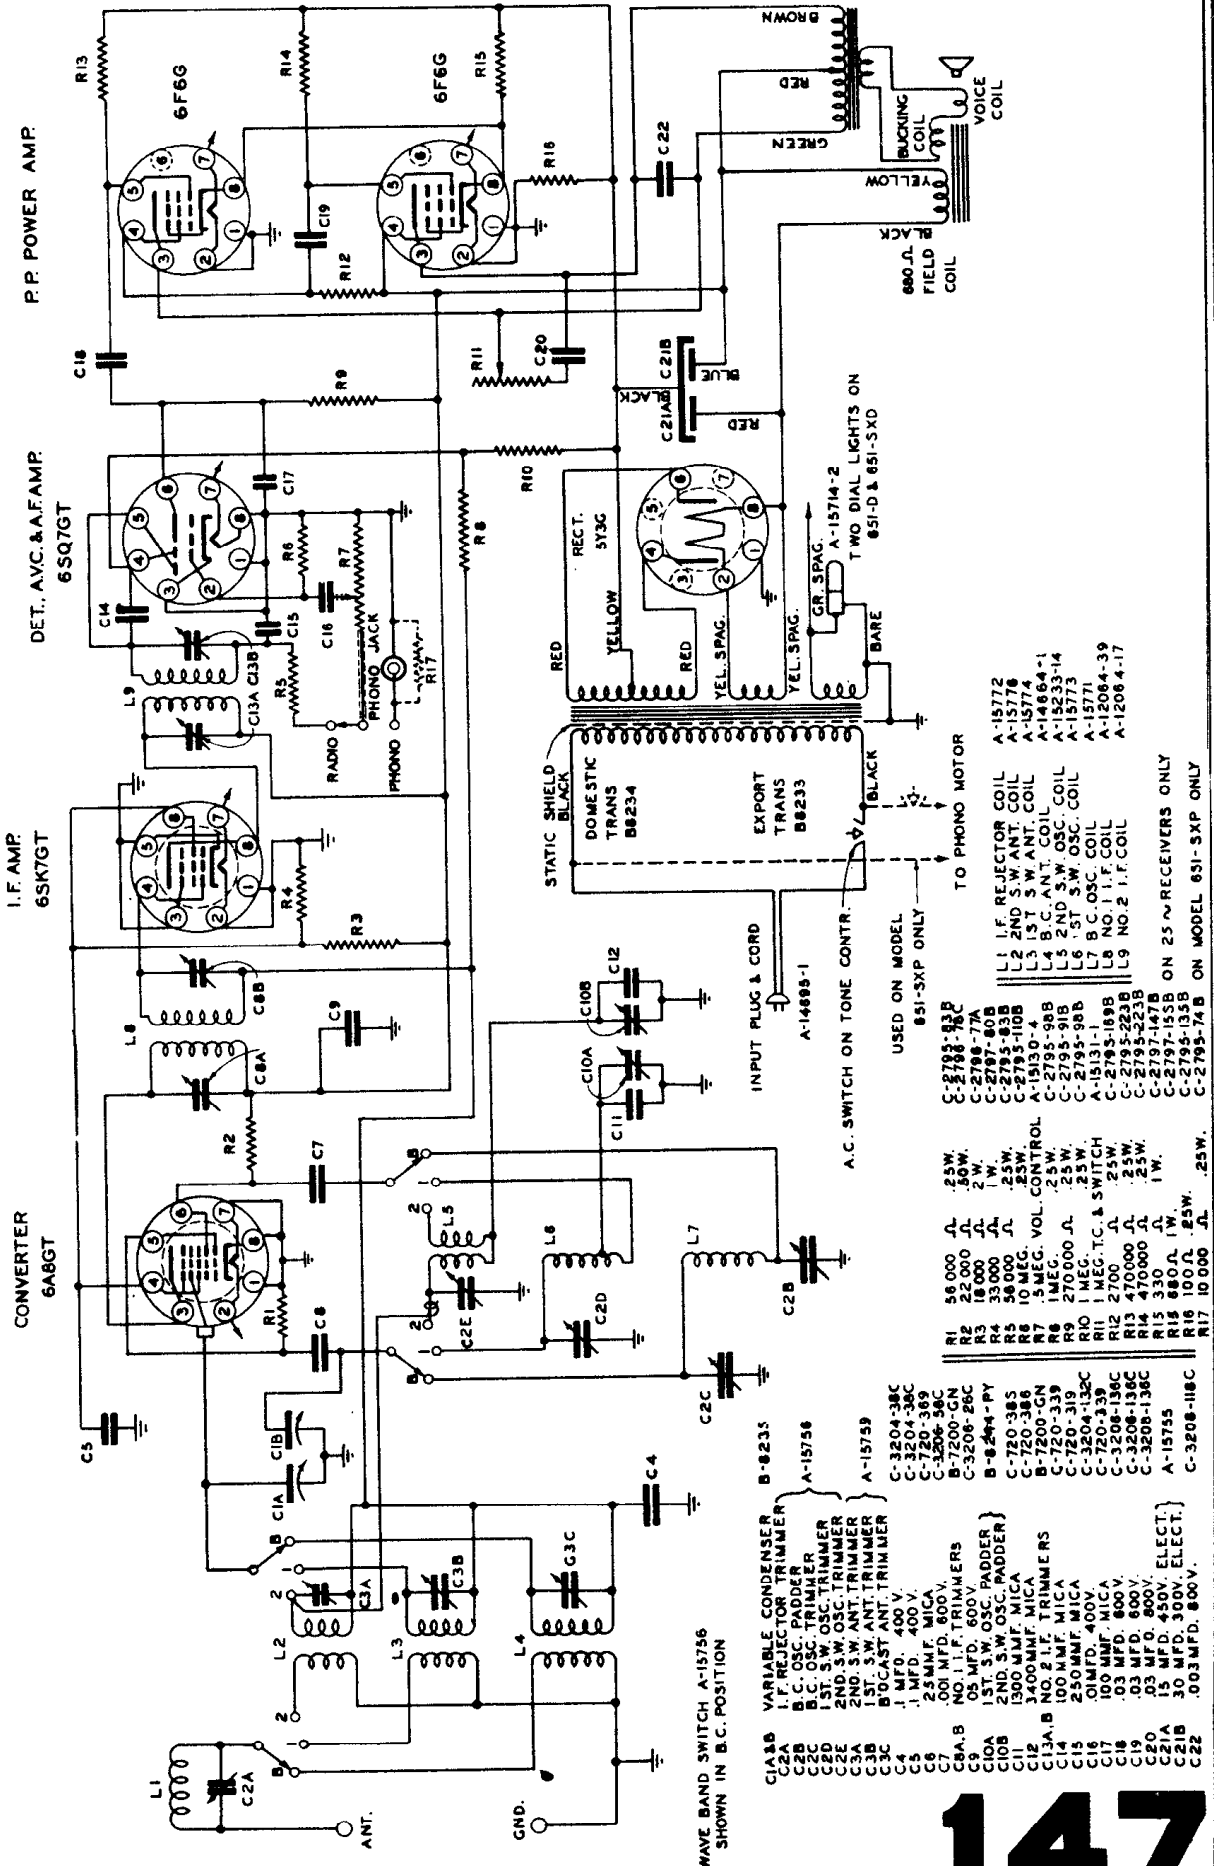


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

SCHEMATIC DIAGRAM SPARTON SUPERHETERODYNE MODEL 761 INTERMEDIATE FREQUENCY 456 K.C. BOTTOM VIEWS OF ALL SOCKET CONNECTIONS

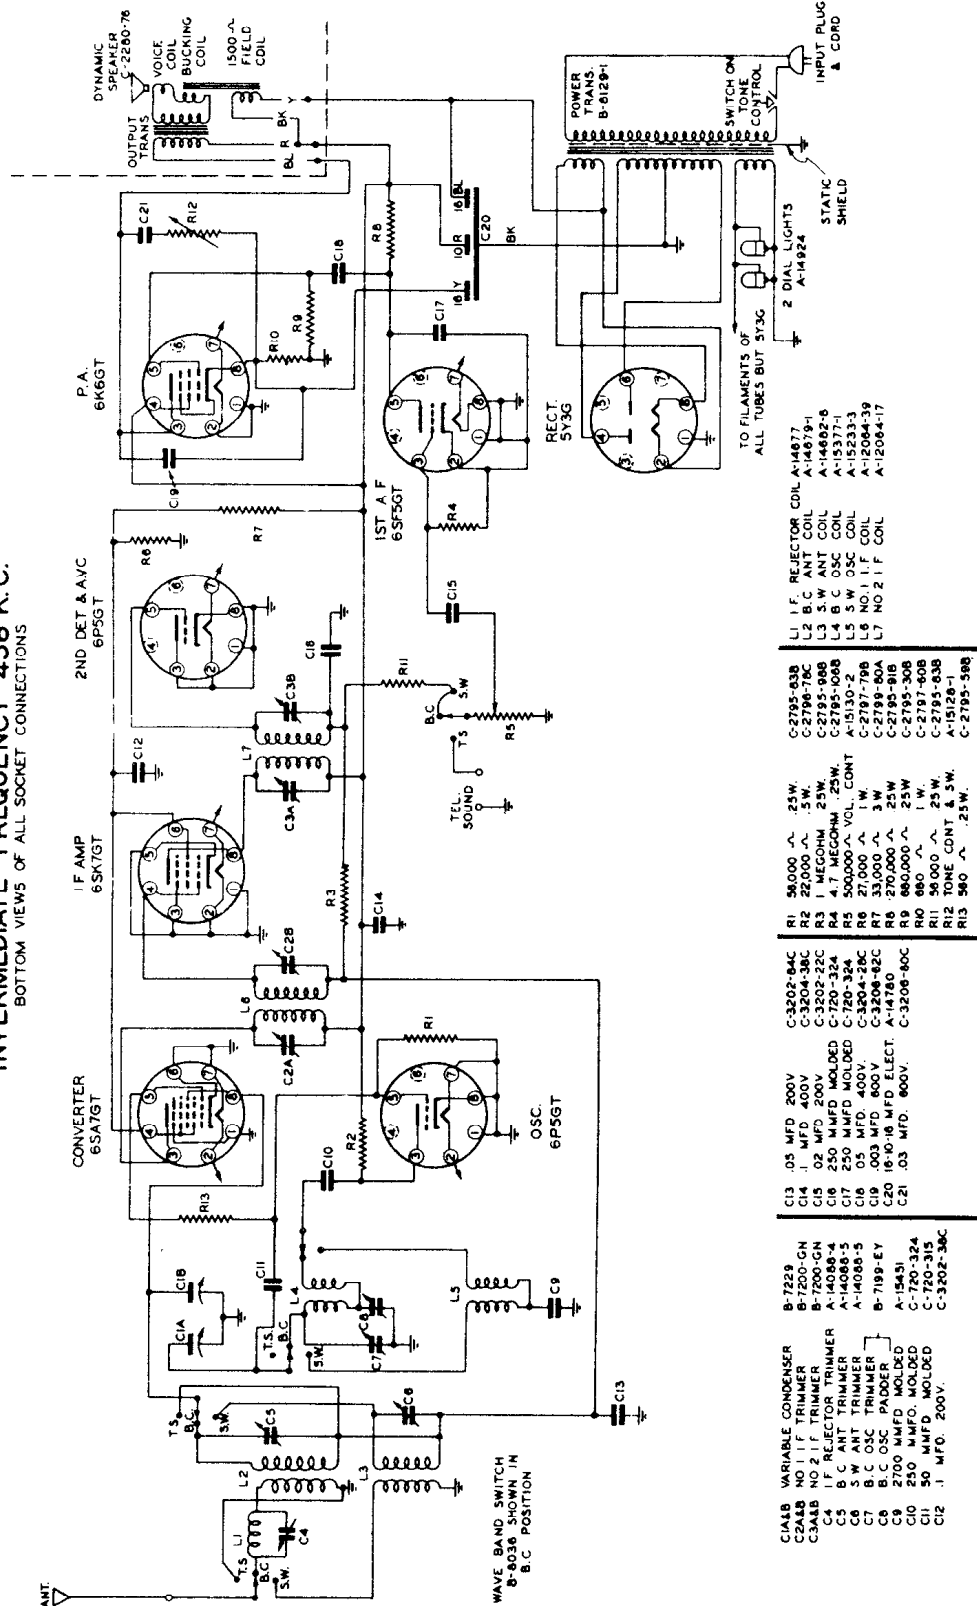

STEWART-WARNER 11-5V CHASSIS (MODEL 11-5V9)

150

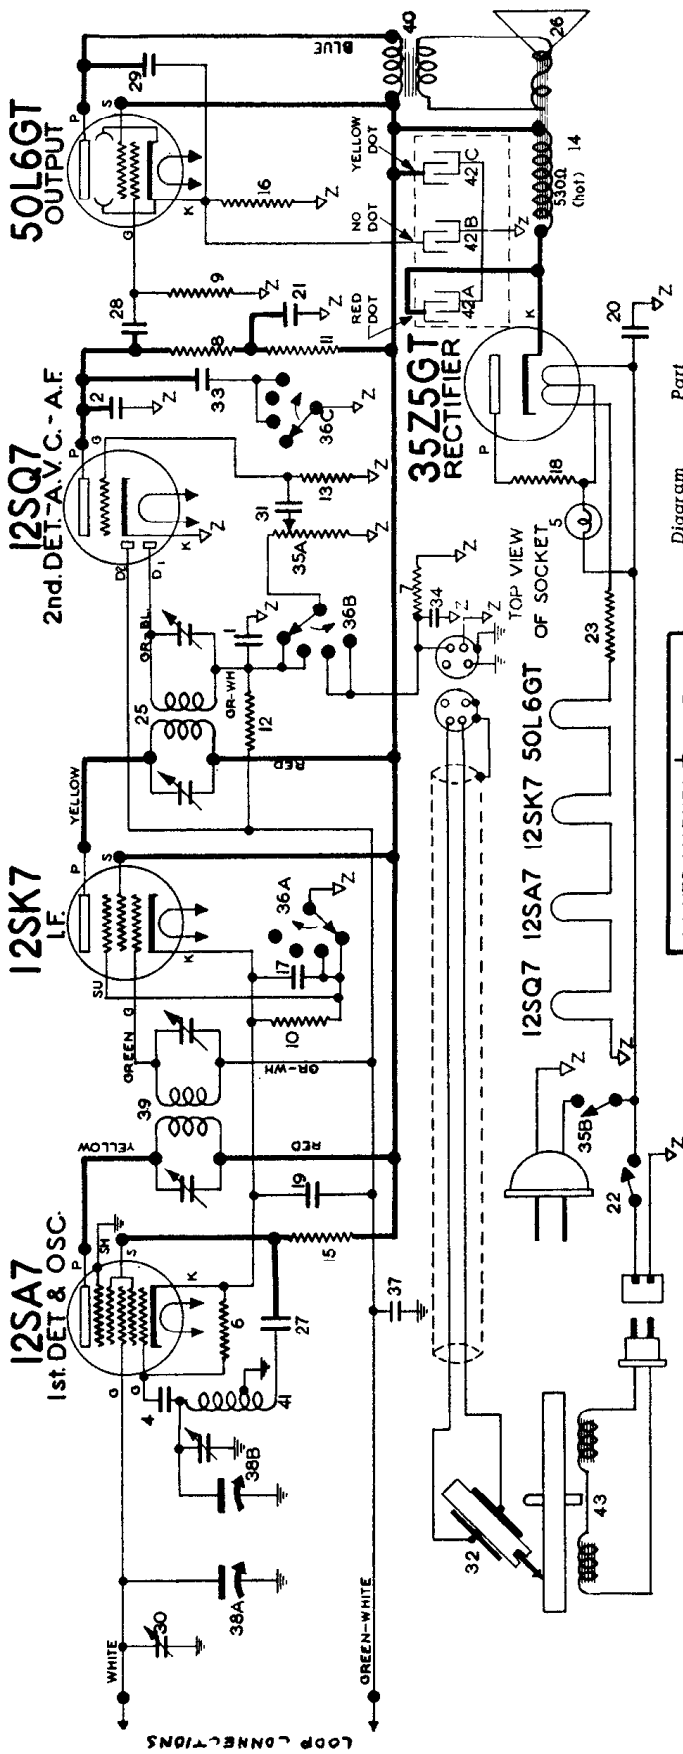


POINTS MARKED WITH A Z ARE CONNECTED TOGETHER TO FORM THE B-CIRCUIT. THE .07MFD. CONDENSER DIAG. NO. 24 CONNECTS FROM THIS CIRCUIT TO CHASSIS.

Diagram Number	Part Number	Description
14	R-115102	Speaker -dynamic (5")
15	118803	Resistor - 680 ohms 1/4 watt.
16	116092	Resistor -140 ohms 1 watt W.W.
17	116706	Condenser .2 mfd. 600 volt
18	116752	Resistor - 33 ohms 1 watt wire wound
19 to 21	116819	Condenser .05 mfd. 600 volt.
22	116864	Switch-"on-off" for phono motor.
23	117395	Resistor - 20 ohms 1 watt
24	118487	Condenser -.07 mfd. 600 volts.
25	118903	Transformer- 2nd I.F.
26	118999	Cone & Voice Coil for R-115102 speaker
27 to 29	119193	Condenser -.01 mfd. 600 volt.
30	119345	Condenser -trimmer
31	119817	Condenser -.004 mfd. 600 volt.
32	119864	Crystal cartridge with leads and needle screw
33-34	119875	Condenser .002 mfd. 600 volt.
35A-35B	119912	Volume control 1 meg. (with switch)
36A-36B-36C	119921	Switch tone & phonograph (See table for switch positions)
37	119193	Condenser .01 mfd. 600 volt.
38A-38B	119928	Condenser variable tuning
39	119935	Transformer-1st I.F.
40	R-119944	Transformer-output for R-115102 Speaker
41	119854	Coil oscillator
42A-42B-42C	160012	Condenser-electrolytic, A - 40 mfd.-200 volt, B - 20 mfd.- 25 volt; C--20 mfd. 200 volt

ELECTRICAL PARTS

Number	Part Number	Description
1-2	83539	Condenser mica 260 mmfd.
3	83783	Condenser mica 110 mmfd.
4	85061	Condenser mica 51 mmfd.
5	85296	Lamp-dial 6 to 8 volt (Mazda 51).
6	110552	Resistor - carbon 47,000 ohms 1/4 w
7	110553	Resistor - carbon 220,000 ohms 1/4 w
8	110559	Resistor - carbon 470,000 ohms 1/4 w
9	110559	Resistor - carbon 100,000 ohms 1/4 w
10	110560	Resistor - carbon 100,000 ohms 1/4 w
11	110564	Resistor - carbon 2.2 meg. 1/4 watt.
12	110570	Resistor - carbon 10 meg. 1/4 watt.
13	112975	Resistor - carbon 10 meg. 1/4 watt.

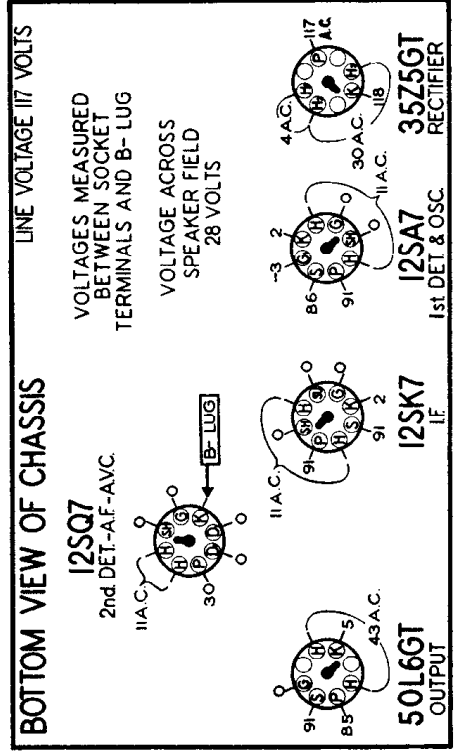

BOTTOM VIEW OF CHASSIS

LINE VOLTAGE 117 VOLTS

VOLTAGES MEASURED BETWEEN SOCKET TERMINALS AND B-LUG


VOLTAGE ACROSS SPEAKER FIELD 28 VOLTS

REAR OF CHASSIS

Use a Voltmeter of 1000 ohms per volt.

STEWART-WARNER 11-5W CHASSIS

(RECEIVER MODELS 11-SW1 TO 11-SW9)

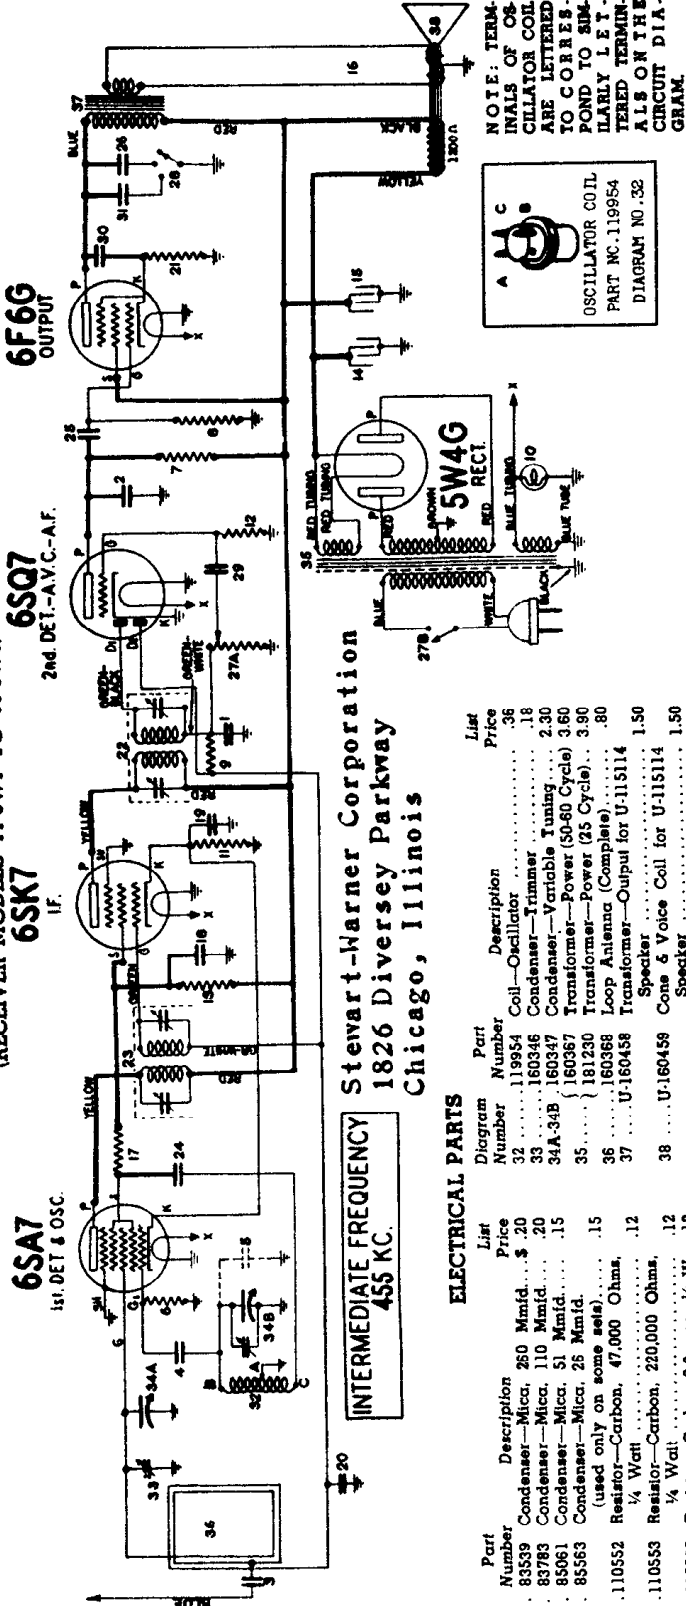

Stewart-Warner Corporation
1826 Diversey Parkway
Chicago, Illinois

INTERMEDIATE FREQUENCY
455 KC.

ELECTRICAL PARTS


Diagram Number	Part Number	Description	List Price
1-2	83539	Condenser—Mica, 250 Mmfd.	.20
3	83783	Condenser—Mica, 110 Mmfd.	.20
4	85061	Condenser—Mica, 51 Mmfd.	.15
5	85563	Condenser—Mica, 25 Mmfd.	.15
6	110552	Resistor—Carbon, 47,000 Ohms, 1/4 Watt	.12
7-8	110553	Resistor—Carbon, 220,000 Ohms, 1/4 Watt	.12
9	110580	Resistor—Carbon, 3.3 meg, 1/4 W.	.12
10	110629	Dial Light—6.3 Volt (Mazda No. 44)	.15
11	112874	Resistor—Carbon—220 Ohms, 1/4 Watt	.15
12	112975	Resistor—Carbon—10 Meg, 1/4 W.	.15
13	112997	Resistor—Carbon—22,000 Ohms, 1/4 Watt	.15
14-15	114258	Condenser—Electrolytic—8 mid., 450 Volt	.98
16	U-115114	Speaker—Dynamic (S)	4.50
17	116068	Resistor—680 Ohms, 1/4 Watt	.12
18-19	116625	Condenser—1 Mid., 600 Volt	.25
20	116819	Condenser—.05 Mid., 600 Volt	.20
21	116978	Resistor—420 Ohm — 1/2 Watt	.15
22	119024	Transformer—2nd I.F.	1.15
23	119042	Transformer—1st I.F.	1.10
24-25-26	118193	Condenser—.01 Mid., 600 Volt	.15
27A-27B	119629	Vol. Control—(1 meg.) & Switch	1.30
28	119630	Tone Switch	.65
29-30	119817	Condenser—.004 Mid., 600 Volt	.15
31	119880	Condenser—.04 Mid., 600 Volt	.20

MISCELLANEOUS PARTS


Part Number	Description	List Price
160452	Cabinet Back	.17
114955	Champ—Dial Cord	.01
112745	Clip—Coil Mounting	.01
113019	Clip—Dial Scale Retaining	.18
116948	Cord—Dial Drive	.30
160349	Dial Scale	.24
119591	Dial Window	.10
160356	Knob—Push On	.10
160384	Pilot Lamp Socket	.14
160355	Pointer	.50
81145	Retaining Ring for Drive Shaft	.01
88624	Screw—Self Tapping 8x1/4	.12
116690	Sockets—Octal Base	.12
117078	Sockets—Octal with Special Gndg. Lug	.02
111090	Spacer—Steel	.02
114968	Spring—Dial Cord Tension	.07
119615	Tuning Shaft	.15
111456	Washer—For Tuning Shaft	.50

PRICES SUBJECT TO CHANGE WITHOUT NOTICE

NOTE: TERMINALS OF OSCILLATOR COIL ARE LETTERED TO CORRESPOND TO SIMILARLY LETTERED TERMINALS ON THE CIRCUIT DIAGRAM.

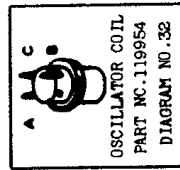


SOCKET VOLTAGES

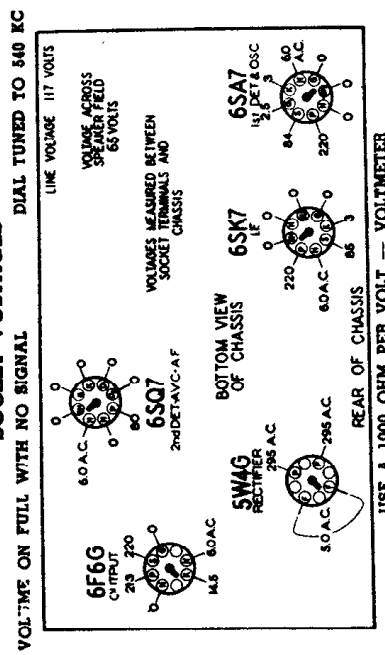

STEWART-WARNER 15-5Y CHASSIS (RECEIVER MODELS 15-5Y1 TO 15-5Y9)

SWITCHES 32 & 33 ARE SHOWN
IN A.C.-D.C. POSITION.

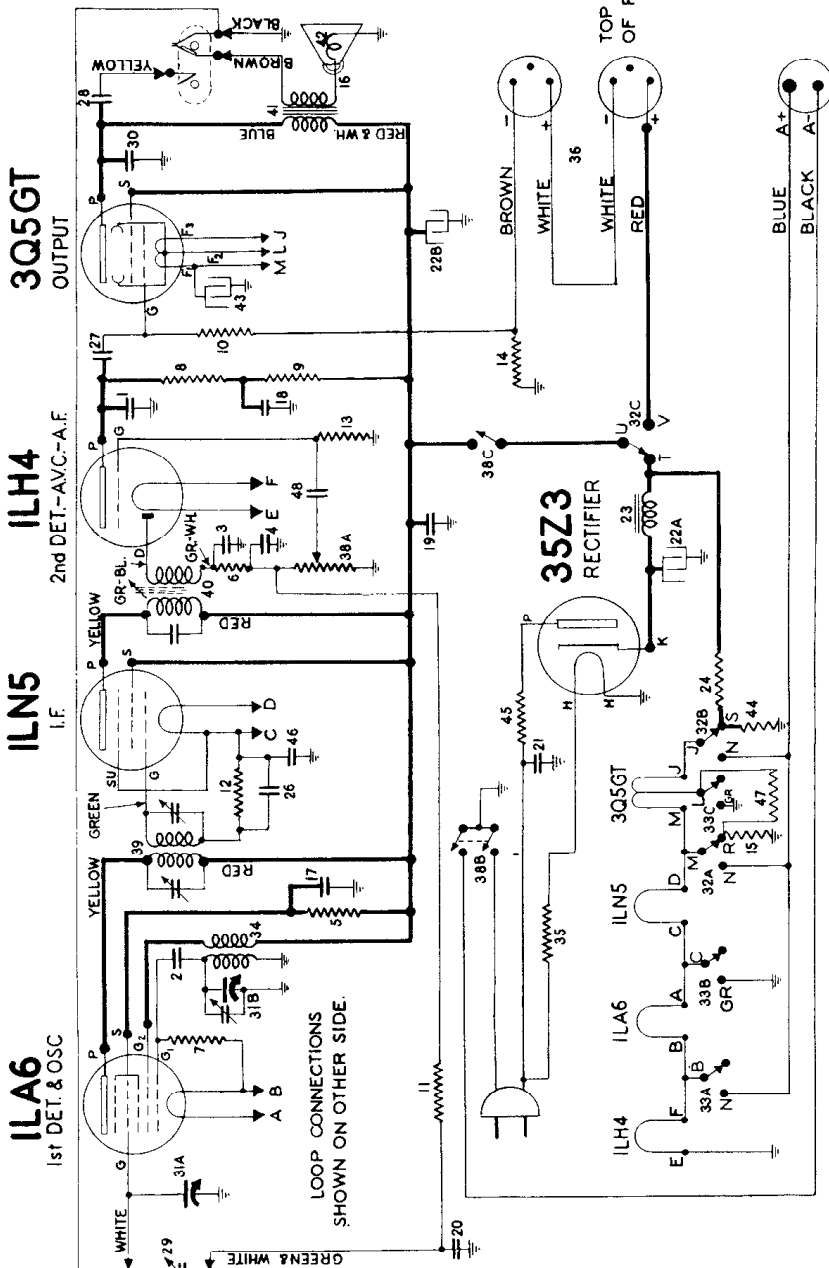


1LA6
1st DET. & OSC.
I.F.


1LN5
I.F.

1LH4
2nd DET.-AVC-A.F.

3Q5GT
OUTPUT

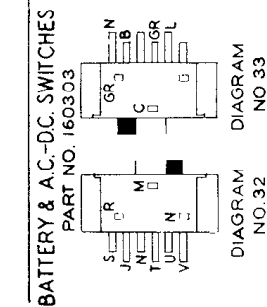

LOOP CONNECTIONS
SHOWN ON OTHER SIDE.

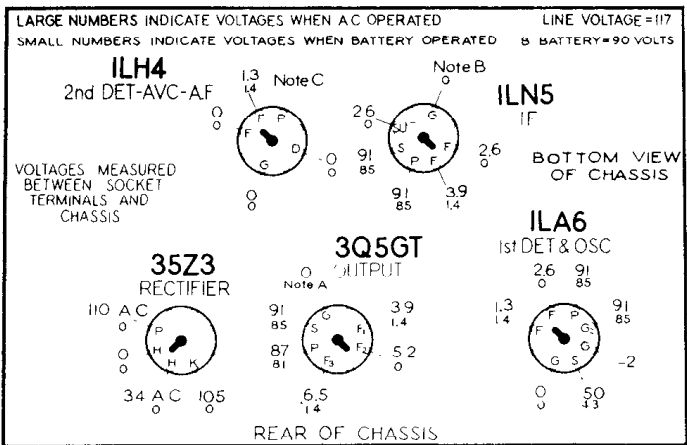


1	81158	Condenser—mica, 100 mmfd.	\$.25
2-3-4	85061	Condenser—mica, 51 mmfd.	.15
5-6	110552	Resistor—carbon 47,000 ohms 1/4 watt	.12
7	110553	Resistor—carbon 220,000 ohms 1/4 watt	.12
8	110554	Resistor—carbon 1 megohm 1/4 watt	.12
9	110559	Resistor—carbon 470,000 ohms 1/4 watt	.12
10	110570	Resistor—carbon 2.2 meg. 1/4 watt	.15
11-12-13	110580	Resistor—carbon 3.3 meg. 1/4 watt	.12
14-15	112977	Resistor—insulated 470 ohm 1/4 watt	.15
16	U-115120	Speaker—P.M. (S')	5.50
17-18-19	116625	Condenser—1 mfd. 600 volt.	.25
20-21	116819	Condenser—.05 mfd. 600 volt.	.20
22A-22B	117559	Condenser—electrolytic 30-30 mfd. 150 volt.	1.20
23	117888	Filter choke	.85
24	118842	Resistor—1680 ohms 5 watts W. W.	.15
25 to 28	119193	Condenser—.01 mfd. 600 volt.	.15
29	119845	Condenser—trimmer (on loop)	.16
30	119875	Condenser—.002 mfd. 600 volt.	\$.15
31A-31B	160298	Condenser—variable tuning with drum	2.80
32-33	160303	Battery & A.C. switches	.68
34	160475	Coil—oscillator	.44
35	160492	Power cord (resistor type)	.95
36	160493	Battery cable	.54
37	160570	Loop antenna—complete	1.50
38A to 38C	161227	Volume control—(1 meg.) & switch	1.30
39	161248	Transformer—1st I.F.	1.20
40	161248	Transformer—2nd I.F. (iron core)	1.35
41	U-161255	Transformer—output for U-115120 spkr.	1.50
42	U-161256	Cone & Voice coil for U-115120 speaker	1.40
43	161273	Condenser—electrolytic 50 mfd. 25 volt	.50
44	116092	Resistor—insulated 1500 ohms 1/4 watt	.15
45	116275	Resistor—50 ohms, 1/2 watt W. W.	.15
46	118290	Condenser—.5 mfd. 150 volt.	.50
47	118827	Resistor—carbon, 270 ohms, 1/4 watt	.10
48	119817	Condenser—.004 mfd., 600 volt.	.15

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

STEWART-WARNER 11-6T and 11-6T-S CHASSIS

(Receiver Models 11-6T1 to 11-6T9 and 11-6T1-S to 11-6T9-S)

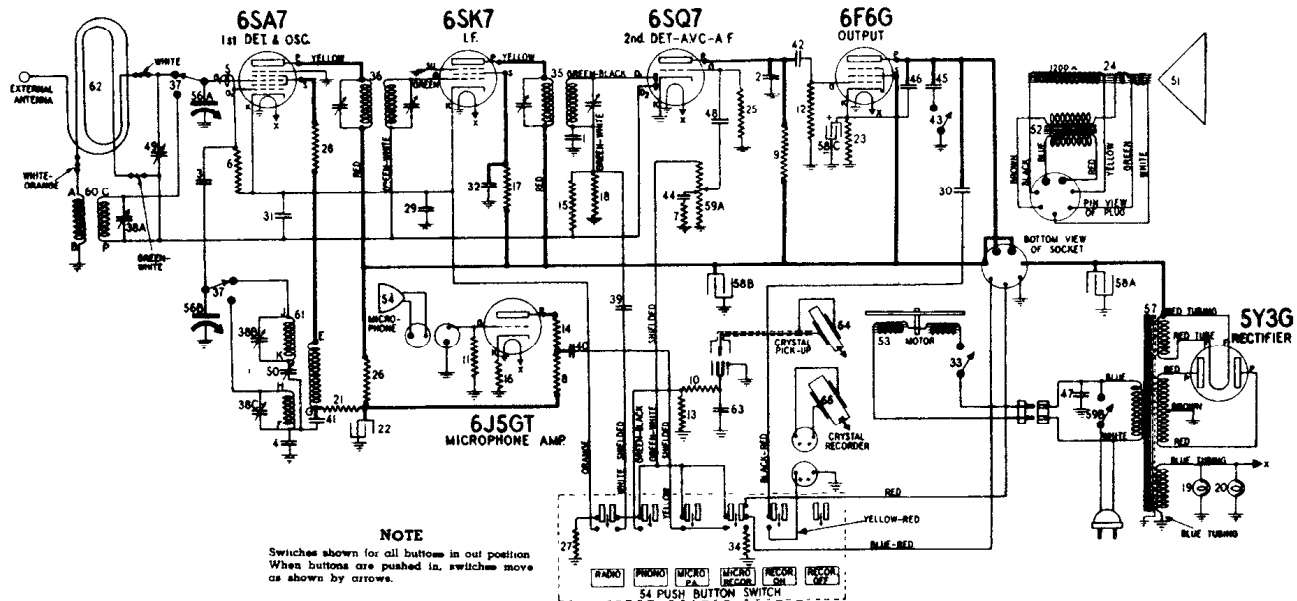

ELECTRICAL PARTS


Diagram Number	Part Number	Description	List Price
1-2	83539	Condenser—mica 260 mmfd.	\$0.20
3	88173	Condenser—mica 50 mmfd.	.20
4	88587	Condenser—mica 0042 mfd.	.35
5	110510	Condenser—wire 3 mmfd.	.12
6-7-8	110552	Resistor—carbon 47,000 ohms 1/4 watt.	.12
9-10	110553	Resistor—carbon 220,000 ohms 1/4 watt.	.12
11	110554	Resistor—carbon 1 megohm 1/4 watt.	.12
12	110559	Resistor—carbon 470,000 ohms 1/4 watt.	.12
13	110564	Resistor—carbon 100,000 ohms 1/4 watt.	.12
14	110565	Resistor—carbon 22,000 ohms 1/4 watt.	.12
15	110570	Resistor—carbon 2.2 meg. 1/4 watt.	.15
16	110572	Resistor—carbon 2,200 ohms 1/4 watt.	.12
17	110578	Resistor—carbon 68,000 ohms 1/4 watt.	.12
18	110584	Resistor—carbon 330,000 ohms 1/4 watt.	.12
19-20	110829	Dial light—6.3 volt.	.15
21	112952	Resistor—carbon 3,300 ohms 1/4 watt.	.10
22	114009	Condenser—electrolytic 4 mfd. 350 volt.	.72
23	114335	Resistor—wire wound 430 ohms 2 watts.	2.0
24	U-15107	Speaker—dynamic 6"	6.10
25	116050	Resistor—insulated 10 meg. 1/4 watt.	.12
26	116055	Resistor—carbon 22,000 ohms 1/4 watt.	.12
27-28	116062	Resistor—150 ohms 1/4 watt.	.12
29-30	116625	Condenser—1 mfd. 600 volt.	.25
31-32	116819	Condenser—.05 mfd. 600 volt.	.20
33	116964	Switch—on-off for phono motor with escutcheon.	.32
34	118819	Resistor—5 ohms 1 watt wire wound.	.14
35	119024	Transformer—2nd I.F.	.115
36	119042	Transformer—1st I.F.	1.10
37	119005	Range switch.	.50

Diagram Number	Part Number	Description	List Price
38A to 38C	119174	Condenser—trimmer—3 section.	.45
38-40-41-42	119193	Condenser—.01 mfd. 600 volt.	.15
43	119214	Switch—tone control.	.48
44-45	119414	Condenser—.02 mfd. 600 volt.	.15
46	119416	Condenser—.008 mfd. 600 volt.	.15
47	119757	Condenser—(metal clad) 01 mfd. 600 volt.	.20
48	119817	Condenser—.004 mfd. 600 volt.	.15
49	119845	Condenser—trimmer (on loop).	.16
50	119934	Condenser—padder.	.36
51	U-160028	Cone & voice coil for U-115107 speaker.	1.60
52	U-160029	Transformer—output for U-115107 speaker.	1.55
53	160036	Motor (see turntable).	8.00
54	160038	Microphone.	12.50
55	160111	Push button switch.	2.30
56A 56B	160170	Condenser—variable tuning.	2.40
57	160172	Transformer—power (50-60 cycles).	4.20
58A to 58C	160174	Condenser—electrolytic Section A—20 mfd. 400 volt. Section B—15 mfd. 400 volt. Section C—10 mfd. 25 volt.	1.30
59A 59B	160175	Volume control—1 meg. (with switch).	1.40
60	160190	Coil—antenna (S.W.).	.44
61	160195	Coil—oscillator.	.75
62	160279	Loop antenna & cabinet back (complete) (Model 11-6T9).	1.40
63	160430	Condenser—.001 mfd. 600 volt.	.15
64	161288	Crystal Pickup Cartridge.	5.00
65	161288	Crystal Recorder Cartridge.	9.50



DIAL AND MISCELLANEOUS PARTS

Part Number	Description	List Price
117117	Cable—motor	\$0.38
114855	Clamp—for dial cord	.01
113019	Chip—dial scale retaining	.01
117057	Cord—drive (supplied in 3 ft. lengths)	.15
160200	Dial scale	.26
119208	Escutcheon—dial	.80
119167	Knob	.10
119166	Knob—push button	.08
117769	Name Plate (S.W.) (Model 11-6T8)	.07
113019	Name Plate (OH-Val.) (Model 11-6T8)	.05
117780	Name Plate (Tuning) (Model 11-6T8)	.05
161206	Name Plate (Tone) (Model 11-6T8)	.08
161207	Name Plate (F B) (Model 11-6T8)	.06
160033	Needle cup	.98
160127	Photograph needles	Envelope of 10 .10
116883	Pointer	.16
81145	Retaining ring for drive shaft.	Per C .50
119218	Screw—escutcheon mounting	.02
119218	Shalt—tuning	.10
111008	Socket—dial lamp	.12
160037	Socket—2 prong	.10
160171	Socket—4 prong	.12
160158	Socket—7 prong for speaker.	.14
119791	Socket—8 prong	.12
114876	Socket—octal	.15
160039	Socket for pick up	.15
113177	Spring—dial cord tension	.98
161245	Tab & windows for recorder push buttons	.10
114158	Washer—spring washer	Per C .50

PRICES SUBJECT TO CHANGE WITHOUT NOTICE.

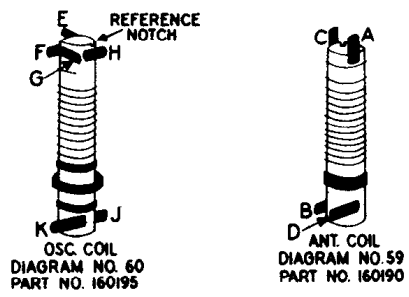


The terminals of the coils illustrated above are lettered to correspond to similarly lettered terminals on the circuit diagram.

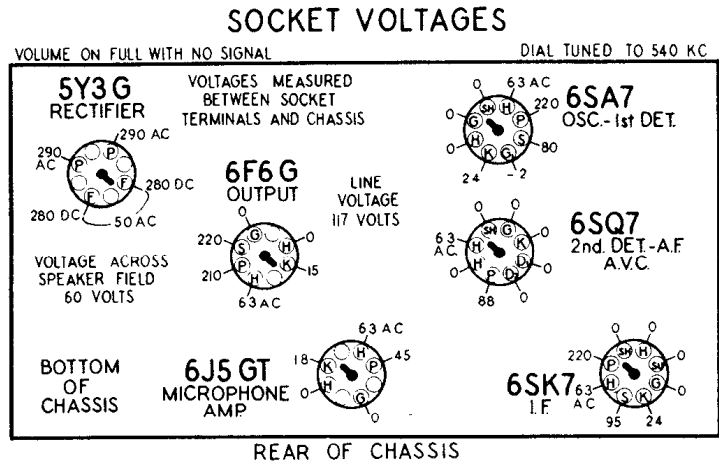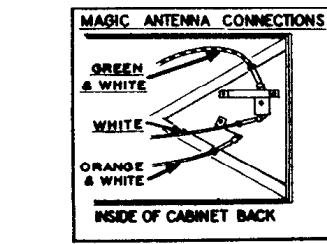

Use a high resistance voltmeter of 1000 oms per volt.

STEWART-WARNER 11-8D and 11-8D-Z CHASSIS
RECEIVER MODELS 11-8D1 TO 11-8D9 & 11-8D1-Z TO 11-8D9-Z

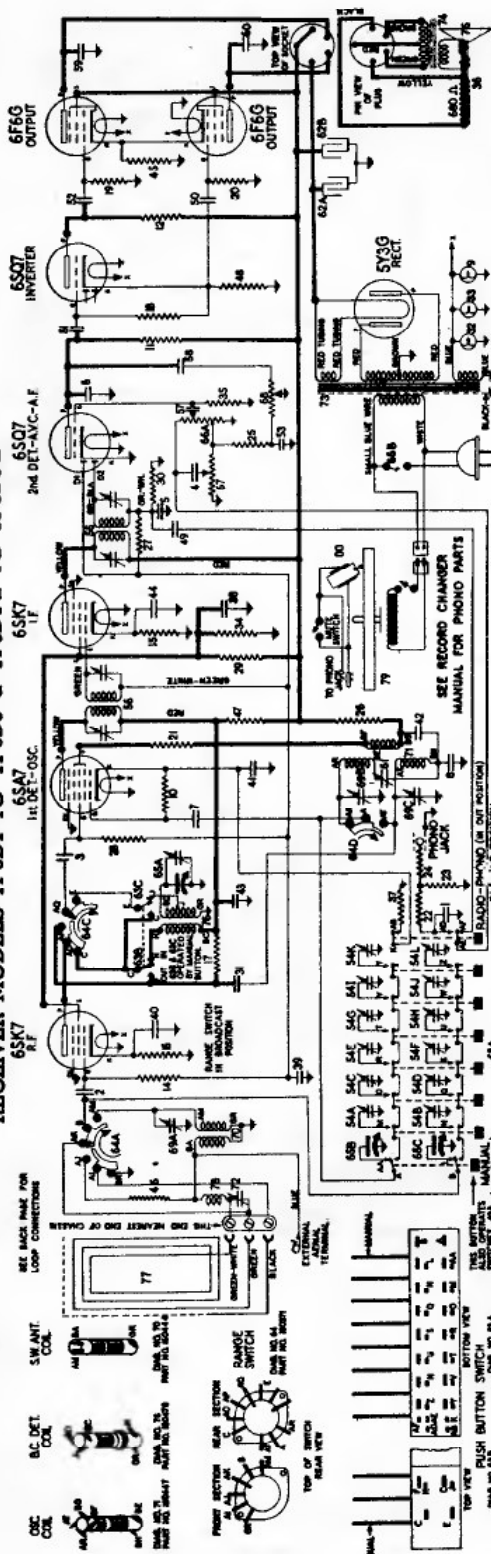


SERVICE DATA FOR THE RECORD CHANGER
IS IN SEPARATE BOOKLET FORM J-2220.

PUSH BUTTON TRIMMER RANGES

TRIMMER	11-8D-Z RANGE
54K & 54L	540 KC. to 1000 KC.
54I & 54J	540 KC. to 1000 KC.
54G & 54H	540 KC. to 1000 KC.
54E & 54F	750 KC. to 1375 KC.
54C & 54D	750 KC. to 1375 KC.
54K & 54B	800 KC. to 1500 KC.
54L & 54J	800 KC. to 1500 KC.

SOCKET VOLTAGES

RANGE SWITCH IN BROADCAST POSITION
DIAL TUNED TO 540 KC.

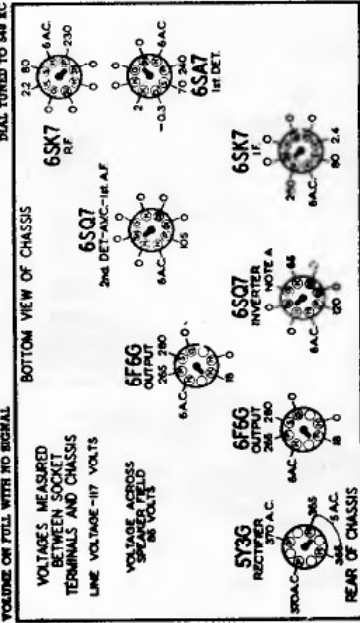

REAR OF CHASSIS

NOTE: A HIGH RESISTANCE VOLTMETER OF 1000 OHMS PER VOLT SHOULD BE USED IN MEASURING THE VOLTAGES SHOWN IN THIS DIAGRAM. THE VOLTAGE BETWEEN CHASSIS AND GRID OF THE 6SQ7 PHASE INVERTER IS 65 VOLTS. THIS VOLTAGE MUST BE MEASURED WITH A METER OF 1000 OHMS PER VOLT BECAUSE OF THE HIGH RESISTANCE OF THE 6SQ7 PHASE INVERTER.

ELECTRICAL PARTS


Diagram Number	Part Number	Description	List Price
1	81155	Condenser—500 mfd. mica	1.15
2 to 4	83339	Condenser—mica, 250 mfd.	.50
5	83793	Condenser—mica, 110 mfd.	.30
6	85883	Condenser—mica, 25 mfd.	.15
7	85883	Condenser—mica, 25 mfd.	.15
8	85897	Lamp—Fluorescent light, 6 to 1 volt (Mercury 51)	.15
9	85296	Resistor—carbon 27,000 ohms 1/4 watt	.15
10	110552	Resistor—carbon 270,000 ohms 1/4 watt	.15
11	110552	Resistor—carbon 270,000 ohms 1/4 watt	.15
12	110554	Resistor—carbon 1 megohm 1/4 watt	.15
13	110554	Resistor—carbon 250 ohms 1/4 watt	.12
14	110554	Resistor—carbon 250 ohms 1/4 watt	.12
15	110557	Resistor—carbon 670,000 ohms 1/4 watt	.12
16	110558	Resistor—carbon 670,000 ohms 1/4 watt	.12
17	110558	Resistor—carbon 100,000 ohms 1/4 watt	.12
18	110560	Resistor—carbon 100,000 ohms 1/4 watt	.12
19	110560	Resistor—carbon 100,000 ohms 1/4 watt	.12
20	110564	Resistor—carbon 33,000 ohms 1/4 watt	.12
21	110564	Resistor—carbon 33,000 ohms 1/4 watt	.12
22	110564	Resistor—carbon 33,000 ohms 1/4 watt	.12
23	110567	Resistor—carbon 15,000 ohms 1/4 watt	.12
24	110570	Resistor—carbon 2.2 meg. 1/4 watt	.12
25	110570	Resistor—carbon 2.2 meg. 1/4 watt	.12
26	110570	Resistor—carbon 2.2 meg. 1/4 watt	.12
27	110570	Resistor—carbon 2.2 meg. 1/4 watt	.12
28	110570	Resistor—carbon 88,000 ohms 1/4 watt	.12
29	110581	Resistor—carbon 18,000 ohms 2 watt	.30
30	110584	Resistor—carbon 330,000 ohms 1/4 watt	.12
31	161315	Condenser—5 mfd. (waxed wire)	.18
32-33	112638	Lamp—dial (fluores) 6.4 volt	.12
34	112654	Resistor—carbon 10,000 ohms 1 watt	.15
35	112675	Resistor—carbon 100 ohms 1/4 watt	.12
36	M-115110	Speaker—12 inch	12.00
37	116077	Resistor—carbon 150 ohms 1/4 watt	.12
38	116077	Resistor—carbon 150 ohms 1/4 watt	.12
39	116077	Resistor—carbon 150 ohms 1/4 watt	.12
40	116077	Resistor—carbon 150 ohms 1/4 watt	.12
41	116077	Resistor—carbon 150 ohms 1/4 watt	.12
42	116077	Resistor—carbon 150 ohms 1/4 watt	.12
43	116077	Resistor—carbon 150 ohms 1/4 watt	.12
44	116077	Resistor—carbon 150 ohms 1/4 watt	.12
45	117570	Resistor—wire wound 350 ohms 2 watt	.24
46	118004	Resistor—carbon 400 ohms 1/4 watt	.10
47	118024	Resistor—carbon 1500 ohms 1/4 watt	.12
48	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
49	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
50	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
51	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
52	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
53	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
54	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
55	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
56	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
57	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
58	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
59	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
60	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
61	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
62	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
63	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
64	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
65	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
66	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
67	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
68	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
69	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
70	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
71	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
72	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
73	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
74	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
75	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
76	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
77	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
78	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
79	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
80	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
81	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
82	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
83	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
84	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
85	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
86	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
87	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
88	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
89	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
90	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
91	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
92	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
93	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
94	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
95	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
96	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
97	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
98	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
99	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15
100	118023	Resistor—carbon 180,000 ohms 1/4 watt	.15

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

STROMBERG-CARLSON NO. 515 RADIO RECEIVERS



STROMBERG-CARLSON TELEPHONE MANUFACTURING COMPANY
ROCHESTER, NEW YORK

Input Power Rating 140 Watts
Intermediate Frequency { 455 Kilocycles (Amplitude Modulation)
4.3 Megacycles (Frequency Modulation)

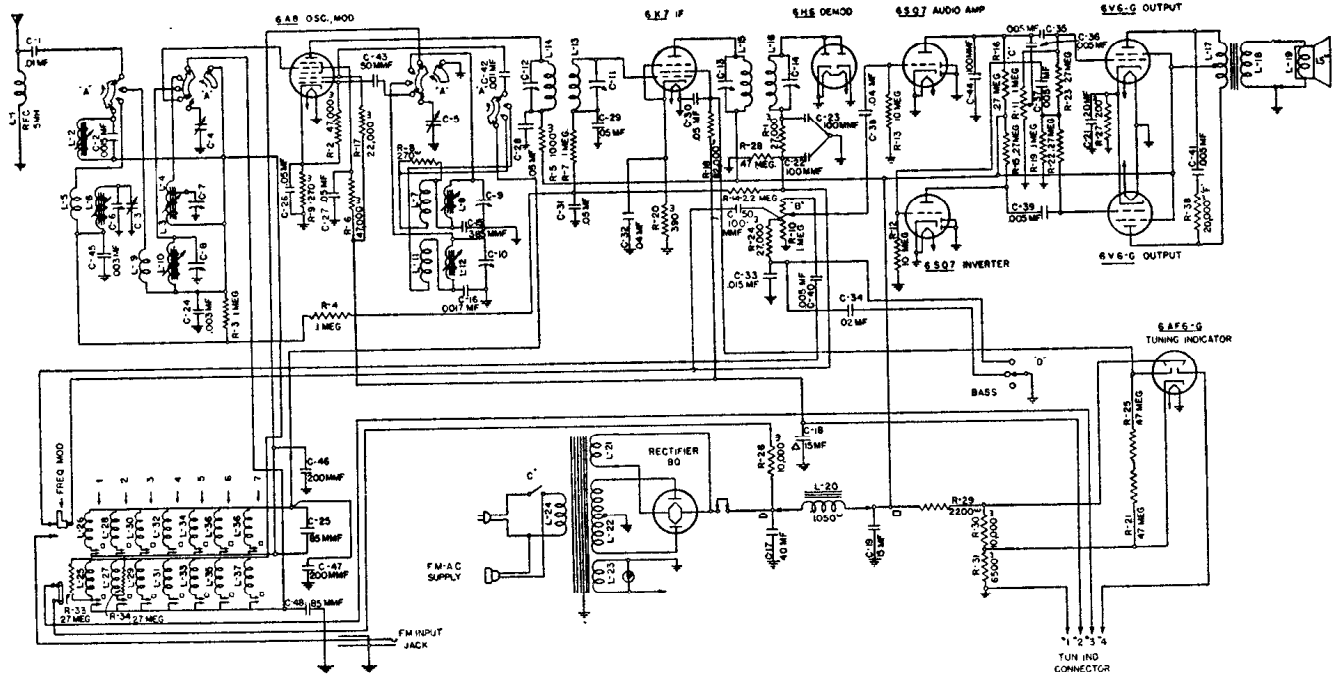

- A - RANGES
- B - VOLUME
- C - OFF-ON-TONE
- D - BASS
- LF - 455 K.C.


Wiring and Schematic Diagram
Amplitude Modulation

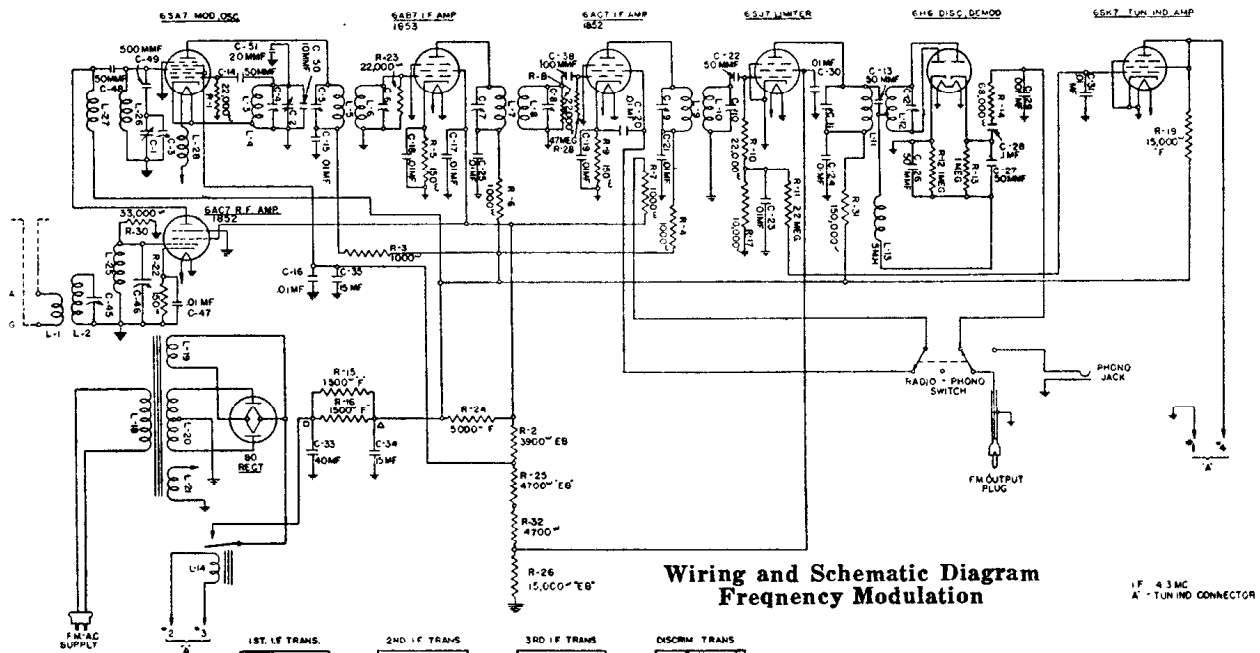

Wiring and Schematic Diagram
Frequency Modulation

IF 4.3 MC
A' - TUN IND CONNECTOR

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

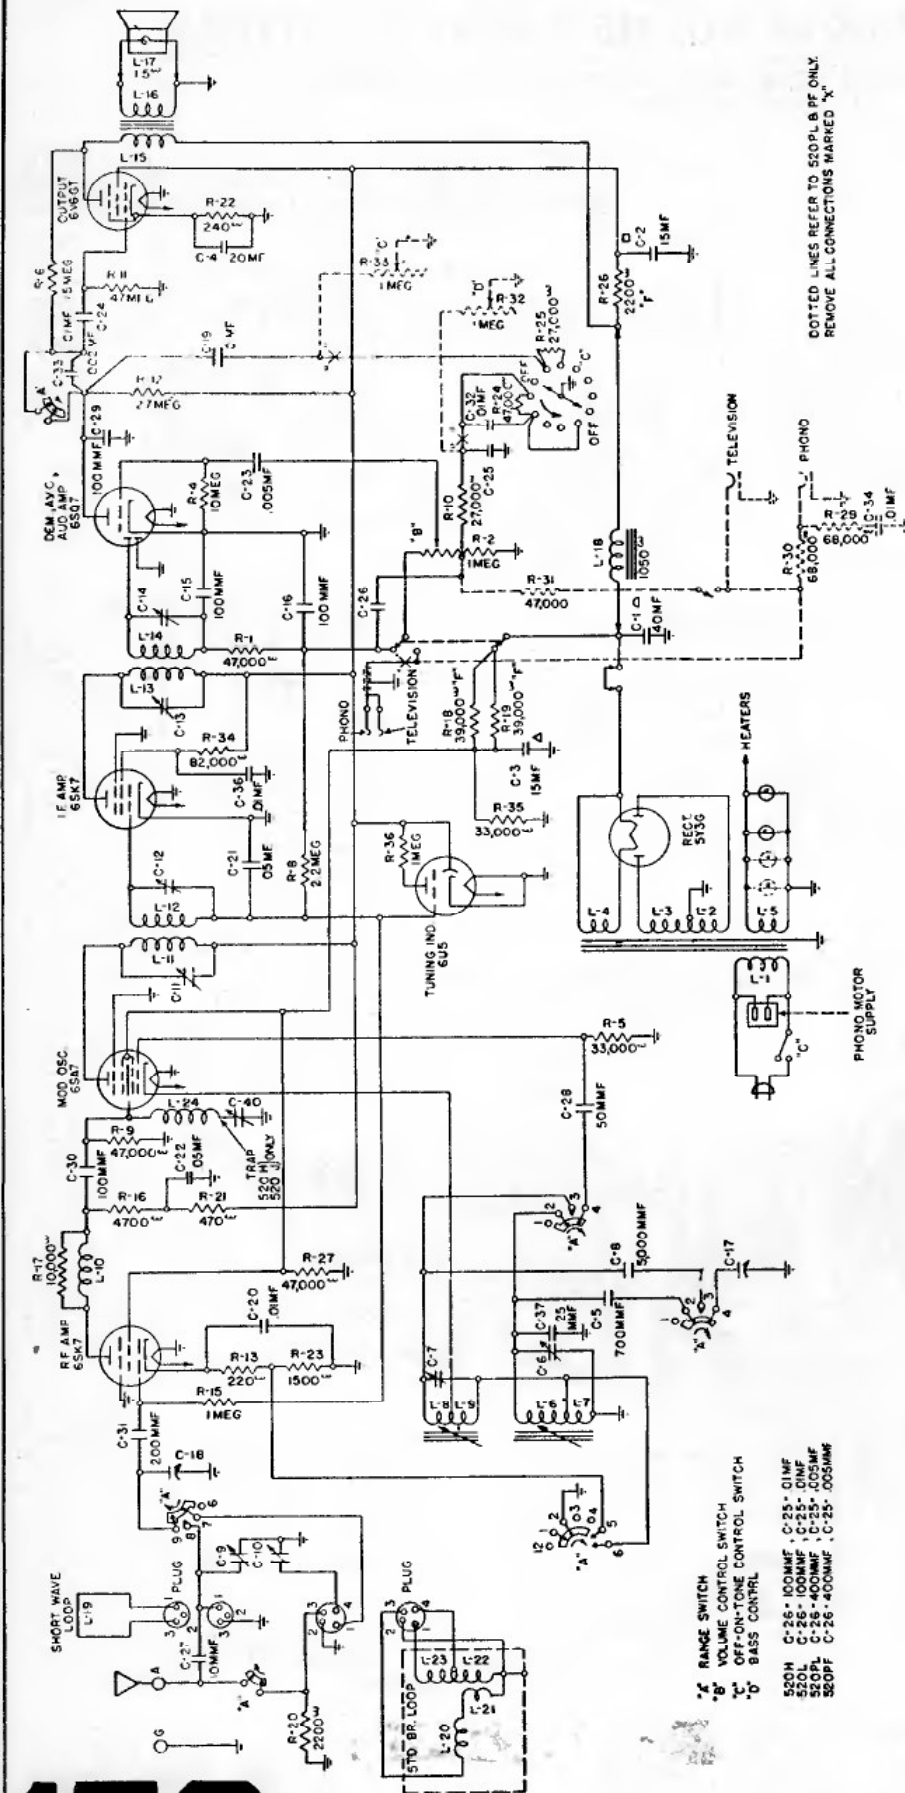

156

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

Stromberg-Carlson
Model 520



I.F. 455 KC.

TERMINALS OF SOCKETS


Tube	Circuit	1	2	3	4	5	6	7	8
6SK7	R. F. Amplifier	0	0	0	0	+3*	+115	6.3	+200
6SA7	Modulator and Oscillator	0	0	+250	+115	0	0	6.3	0
6SK7	I. F. Amplifier	0	0	0	0	+2	+100	6.3	+250
6SQ7	Demodulator, A. V. C., Audio Output	0	0	0	0	0	+95	6.3	0
6V6GT	Output	0	0	+300	+250	0	0	6.3	+12*
6U5	Tuning Indicator	6.3	+90	0	+250	0	0	—	—
5Y3G	Rectifier	0	+400	0	385	0	385	0	+400
Speaker Socket		—	+310	0	0	+400	0	+400	—

DOTTED LINES REFER TO 520PL & RF ONLY.
REMOVE ALL CONNECTIONS MARKED 'X'.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

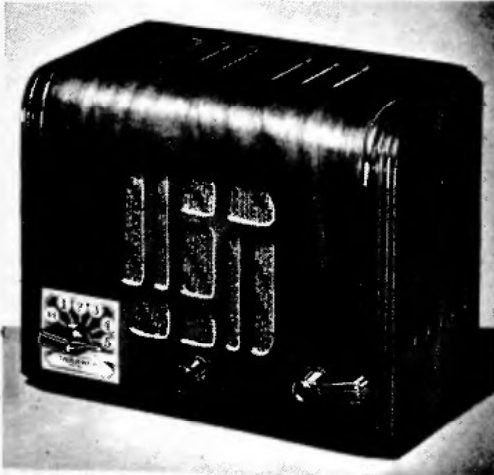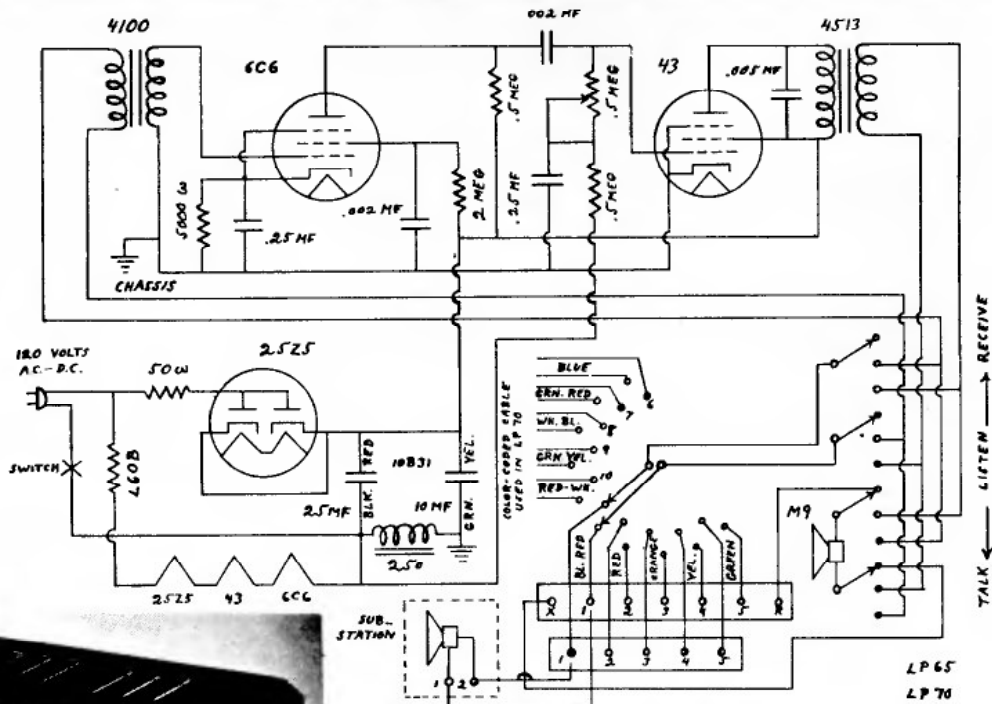


Talk-A-Phone Mfg. Co.

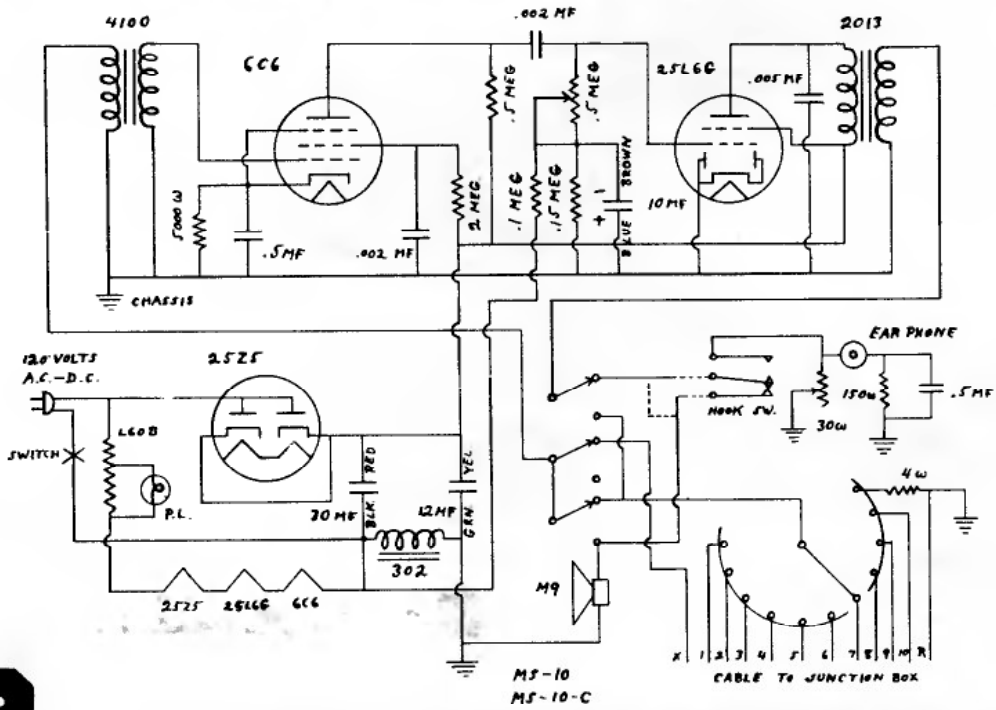

158

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS



MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

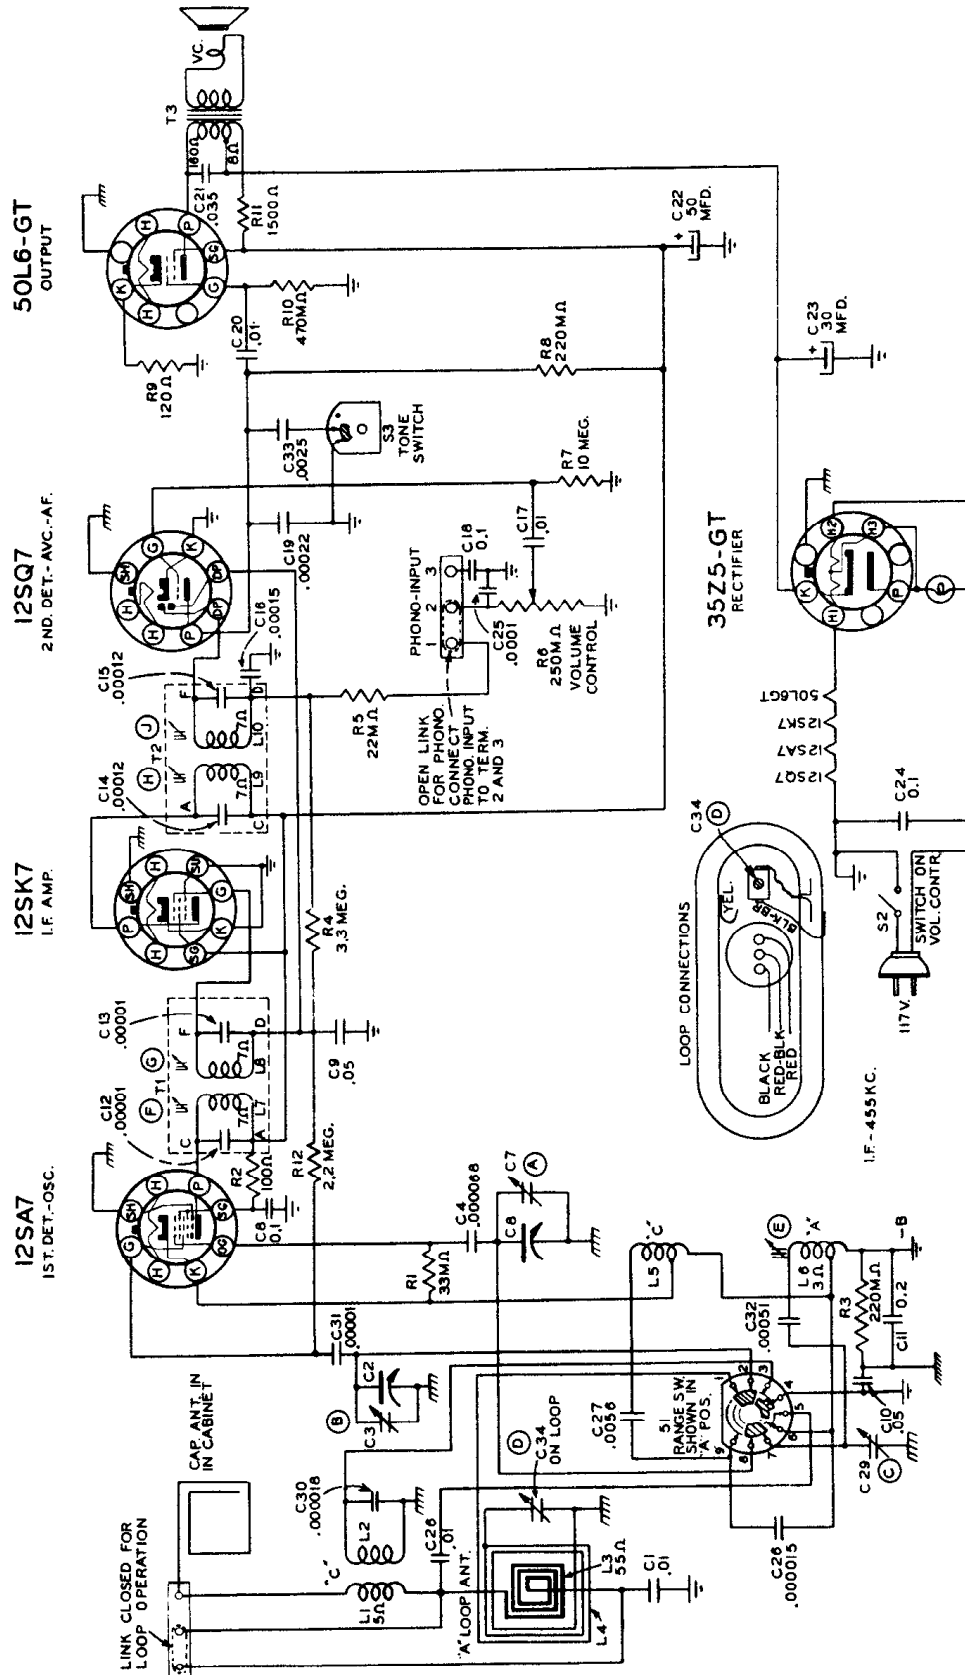

DELCO MODELS R-1176 AND R-1181 CIRCUIT DIAGRAM


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

DELCO MODELS R-1171, R-1172, R-1173

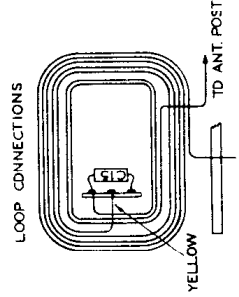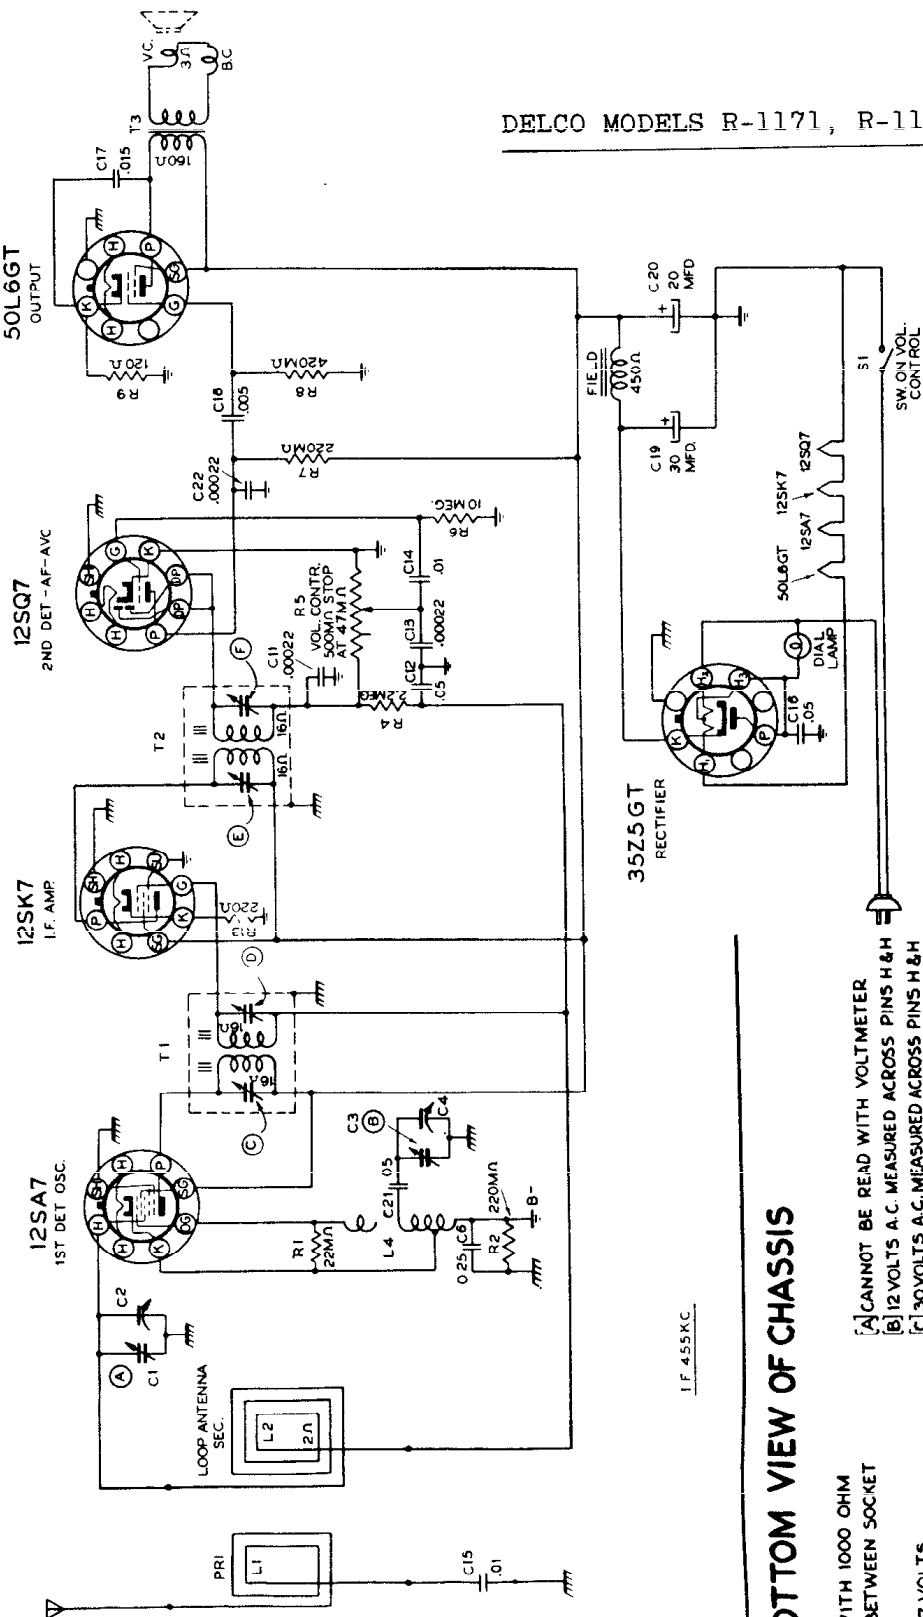


BOTTOM VIEW OF CHASSIS

- [A] CANNOT BE READ WITH VOLTMETER
- [B] 12 VOLTS A.C. MEASURED ACROSS PINS H & H
- [C] 30 VOLTS A.C. MEASURED ACROSS PINS H & H
- [D] 117 VOLTS A.C. MEASURED ACROSS PINS D & D
- [E] 45 VOLTS A.C. MEASURED ACROSS PINS H & H

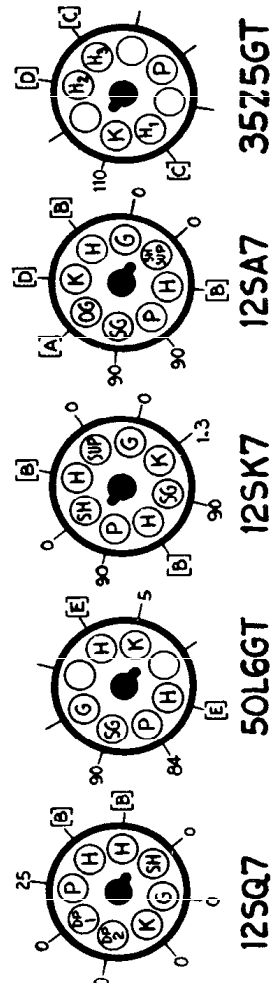

REAR OF CHASSIS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

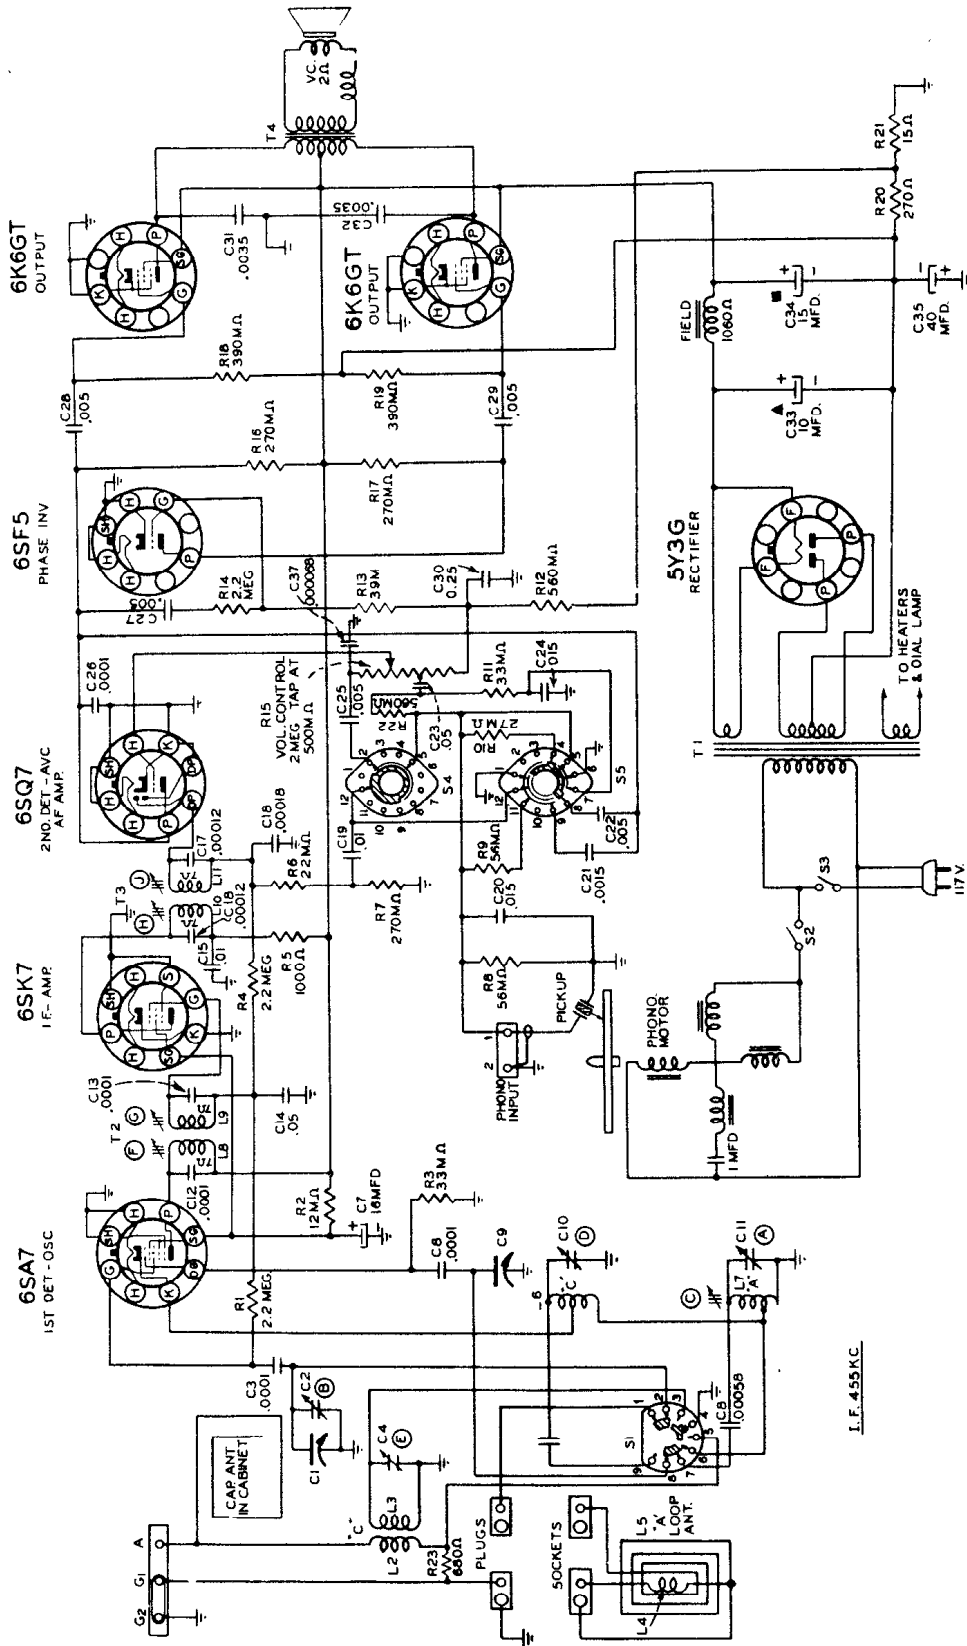

DELCO MODELS R-1186 AND R-1188 CIRCUIT DIAGRAM.

UNITED MOTORS SERVICE
 INCORPORATED
 GENERAL OFFICES—DETROIT


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

SERVICE INSTRUCTIONS--DELCO MODEL R-1186 AND
R-1188 COMBINATION RADIO AND PHONOGRAPH


ADJUSTMENTS FOR PUSH-BUTTON TUNING: The push buttons should be adjusted after the receiver has been operating for a brief warm-up period. Each button may be set up to any standard broadcast station. The preferable arrangement is to adjust for stations in the order of frequency, from low to high. Proceed as follows:

1. Press down on the first push button and hold it down. The screw in back of the push button is now accessible and should be loosened one or two turns with a screwdriver.
2. While still holding down the push button, tune in the first station with the tuning knob, by Dial Tuning. When the station is heard at its best, tighten up the screw in back of the push button. Now let go of the push button, turn the tuning knob in order to detune and again press down the button and let go. To check repeat action.
3. Proceed to set up the other five push buttons in a similar manner.

BOTTOM VIEW OF CHASSIS

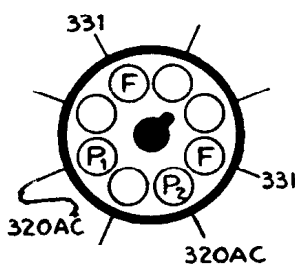

5Y3G

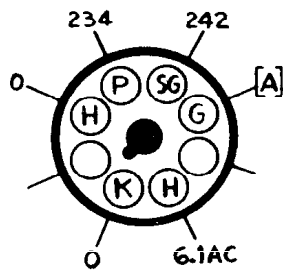


6K6GT


VOLTAGE MEASURED WITH 1000 OHM PER VOLT VOLTMETER BETWEEN SOCKET TERMINALS AND CHASSIS

A.C. LINE VOLTAGE 117 VOLTS
POWER CONSUMPTION 110 WATTS


[A] CANNOT BE MEASURED WITH VOLTMETER

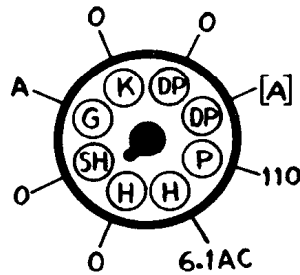


6SQ7

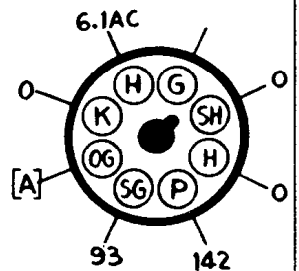


6SA7

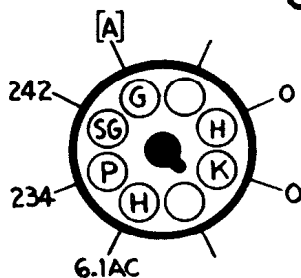

6K6GT

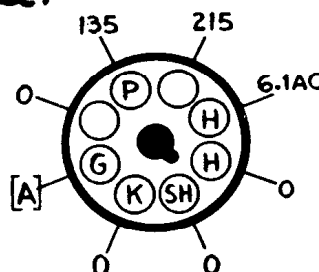

6SF5

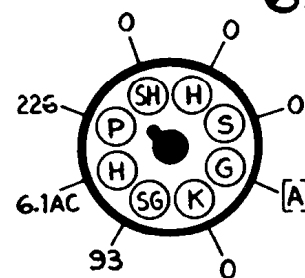

6SK7

REAR OF CHASSIS


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Truetone

MODEL D-1175

Generator	Connection at Radio	Dummy Antenna	Range Switch	Dial	Trimmers to Tune	Sensitivity
I. F. 456 K. C.	Center Stator of Variable	.1 MFD.	A	H. F. End	I. F. Transformers	65—70 MV.
B. C. 1725 K. C.	Antenna	200 MMF.	A	H. F. Limit of Travel	B. C. Oscillator	
1400 K. C.	Antenna	200 MMF.	A	1400	B. C. Antenna and Loop	5-10 MV.
600 K. C.	Antenna	200 MMF.	A	Rock Rotor	Padder	10-15 MV.
P. B. 6.0 M. C.	Antenna	400 Ohm	B	6.0 M. C.	P. B. Osc. P. B. Ant.	25 MV.
2.2 M. C.	Antenna	400 Ohm	B	2.2 M. C.	Check	40 MV.
31M. 9.6 M. C.	Antenna	400 Ohm	C	9.6 M. C.	31M. Ant. 31M. Osc.	25 MV.
25M. 11.6 M. C.	Antenna	400 Ohm	D	11.6 M. C.	25M. Ant. 25M. Osc.	30 MV.
19M. 15.2 M. C.	Antenna	400 Ohm	E	15.2 M. C.	19M. Ant. 19M. Osc.	40 MV.

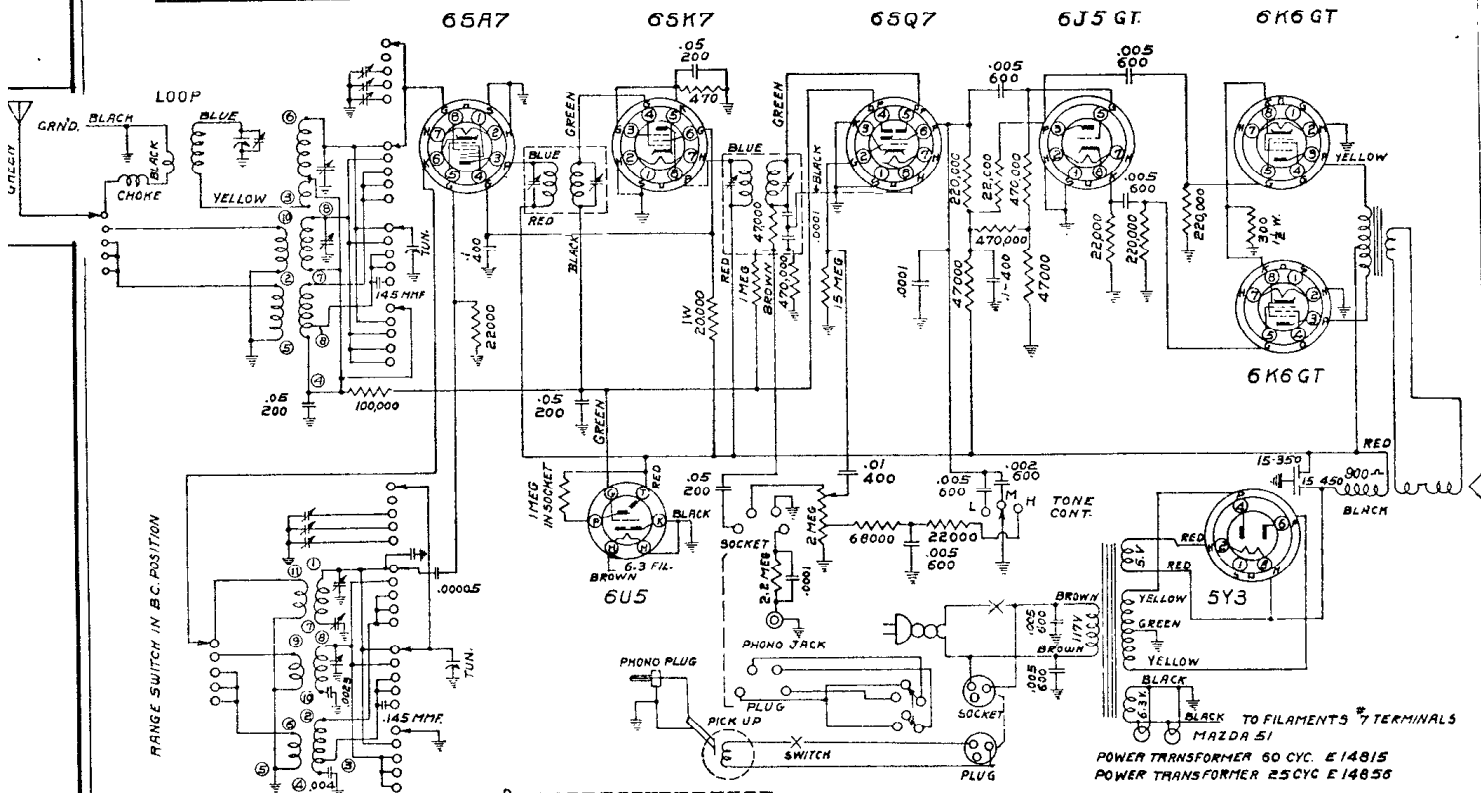



RANGE SWITCH IN BC POSITION

POWER TRANSFORMER 60 CYC. E14815
POWER TRANSFORMER 250 CYC. E14858

I.F. 456 K.C.

Western
Auto

164

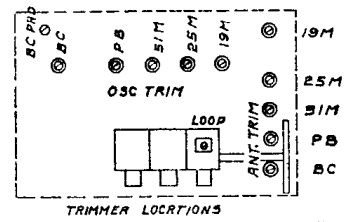

TRIMMER LOCATIONS
COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

6SK7 R.F. Power Consumption - 8.2 Amperes at 6.6 Volts
 Tuning Frequency Range - 38 KC Broad at 1000 Times Signal
 Intermediate Frequency - 540 to 1600 KC
 Speaker - 6" Electro-Dynamic

6SA7 1ST DET.-OSC. 8.0 Watts Undistorted
 Sensitivity - 1 Microvolt at .5 Watt Output
 Power Output (6.6 Volts) - 10.0 Watts Maximum

6SQ7 2ND DET.-A.V.C. & 1ST A.F. 8.0 Watts Undistorted
 Sensitivity - 1 Microvolt at .5 Watt Output
 Power Output (6.6 Volts) - 10.0 Watts Maximum

6K6CT DRIVER 8.0 Watts Undistorted
 Sensitivity - 1 Microvolt at .5 Watt Output
 Power Output (6.6 Volts) - 10.0 Watts Maximum

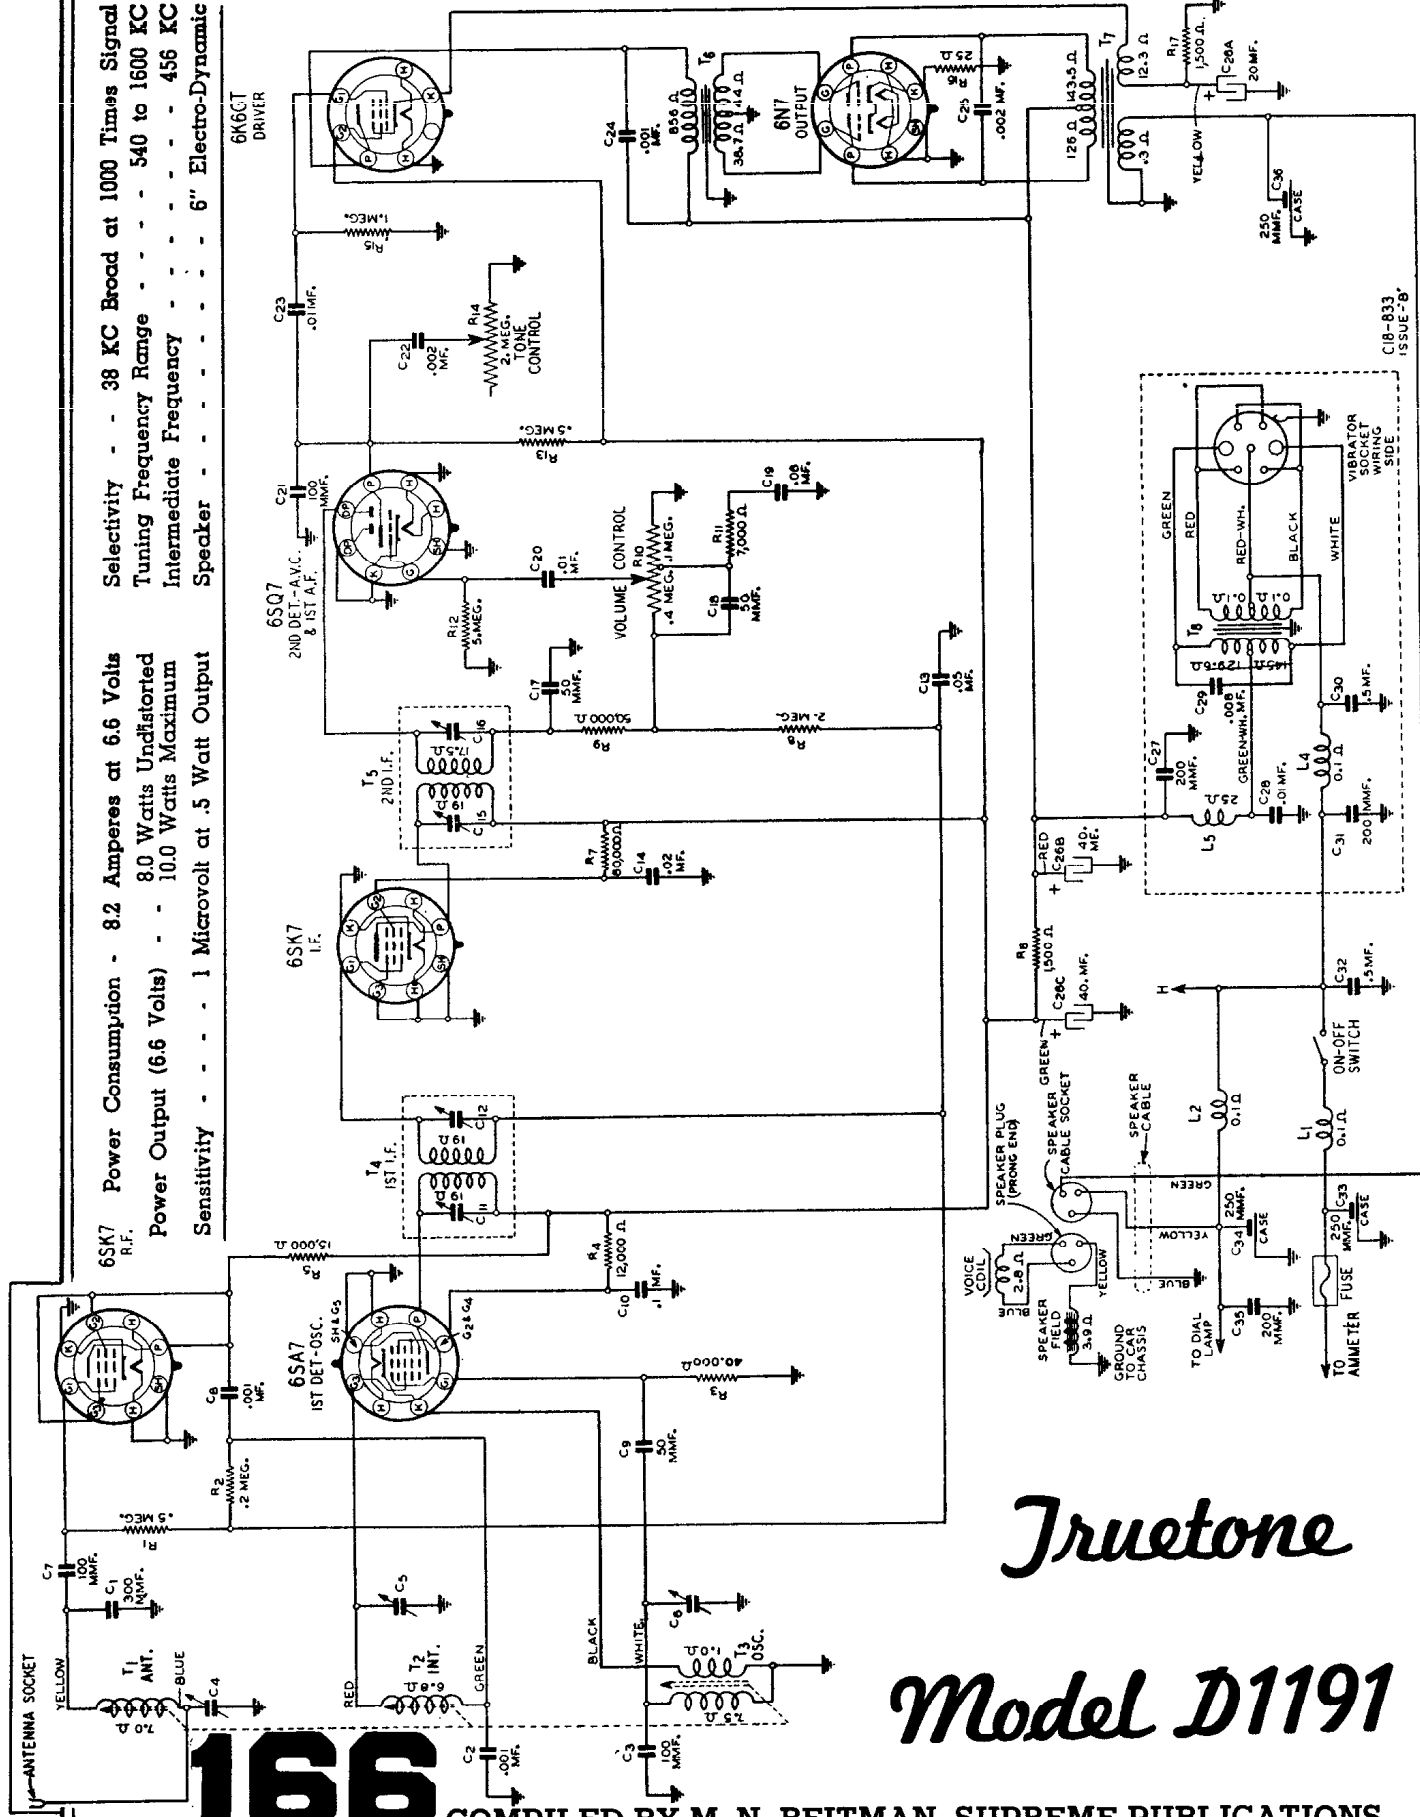

C18-833
ISSUE-B'


Truetone

Model D1191


166

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

Westinghouse Radio

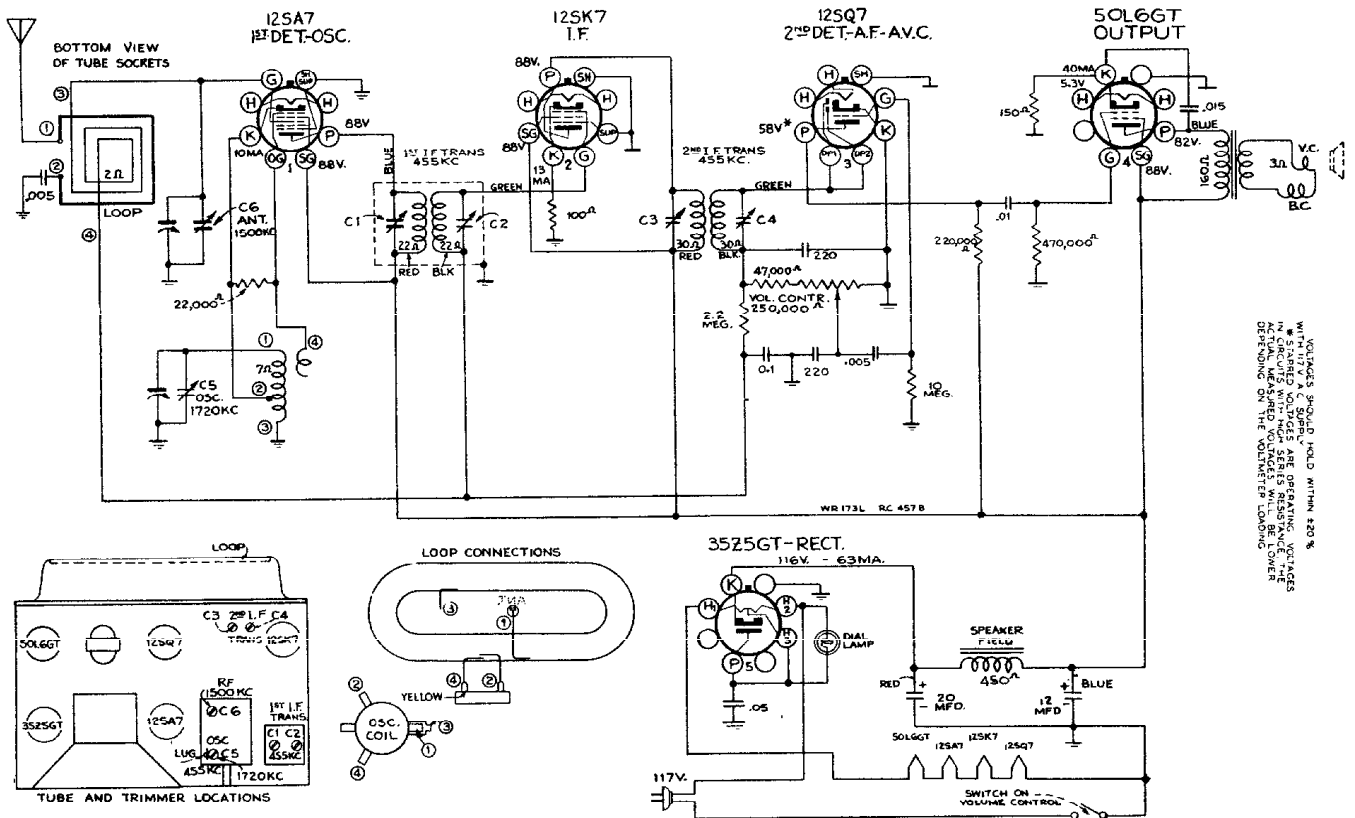


Schematic Circuit Diagram Model WR-173L

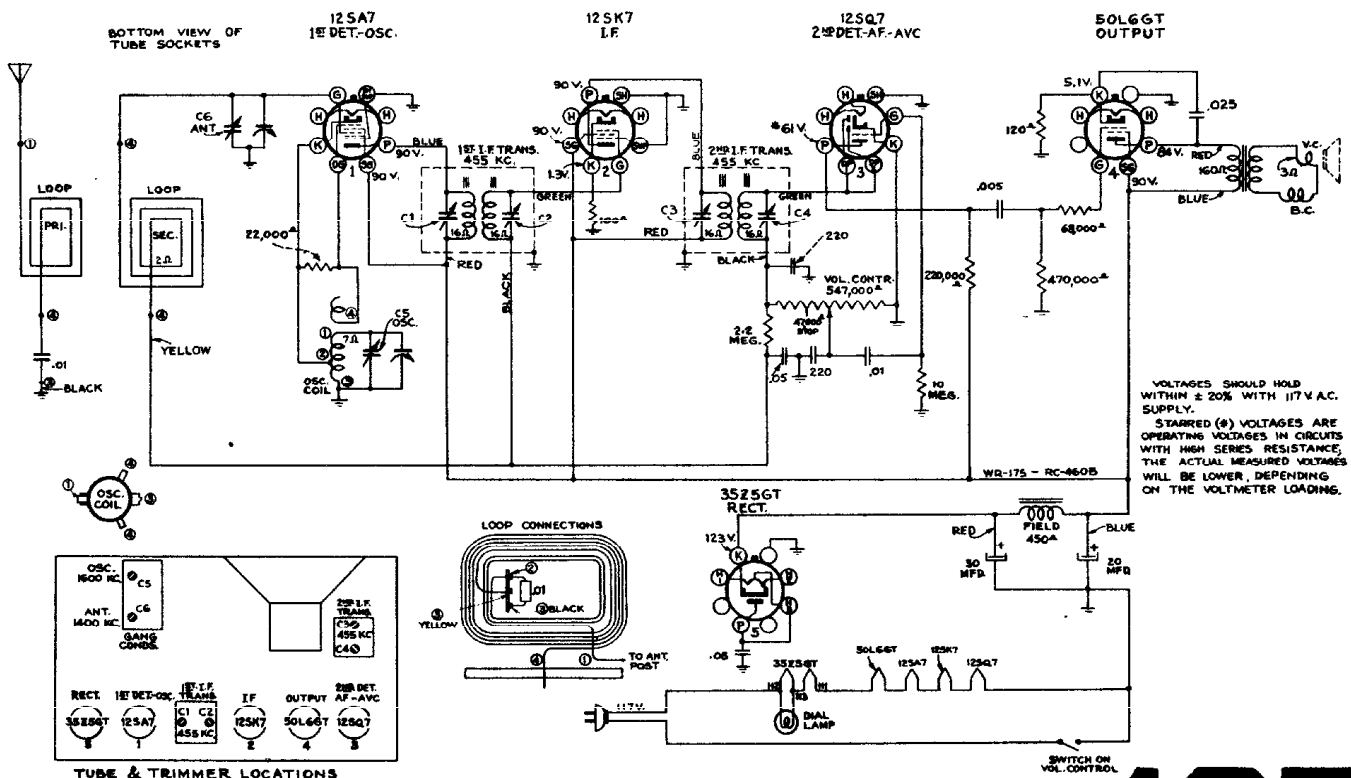


Schematic Circuit Diagram Model WR-175

Westinghouse Radio


Model WR-184

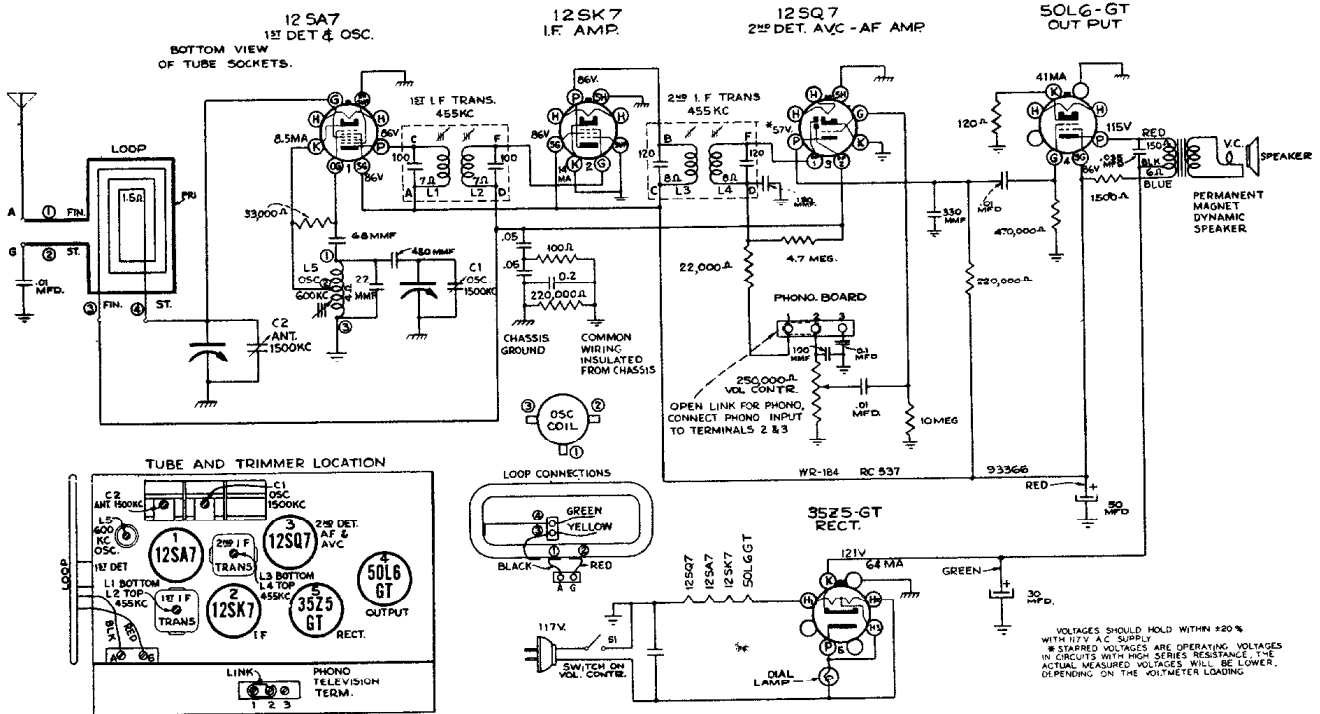


Models WR-682 & WR-682A

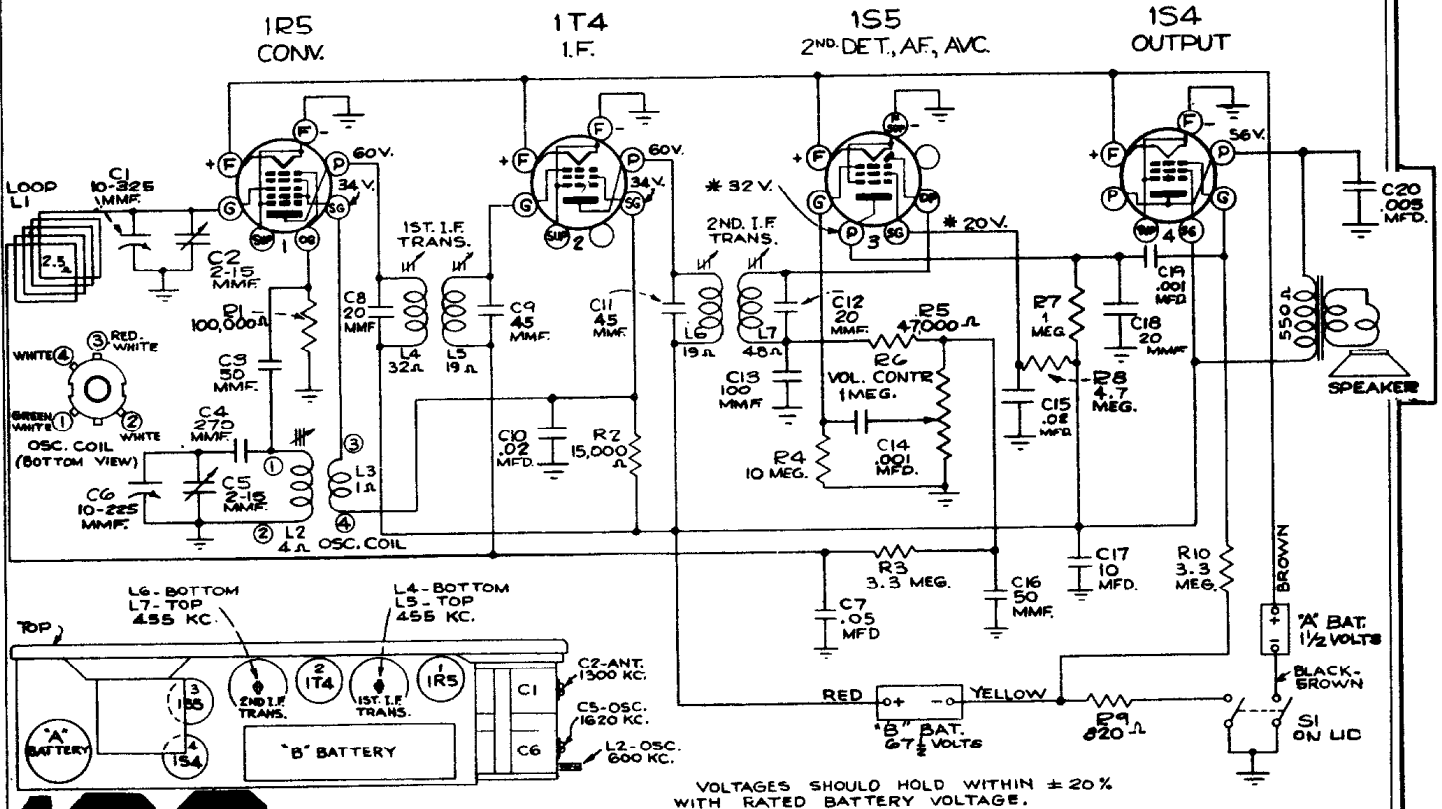


Westinghouse Radio Model WR-388

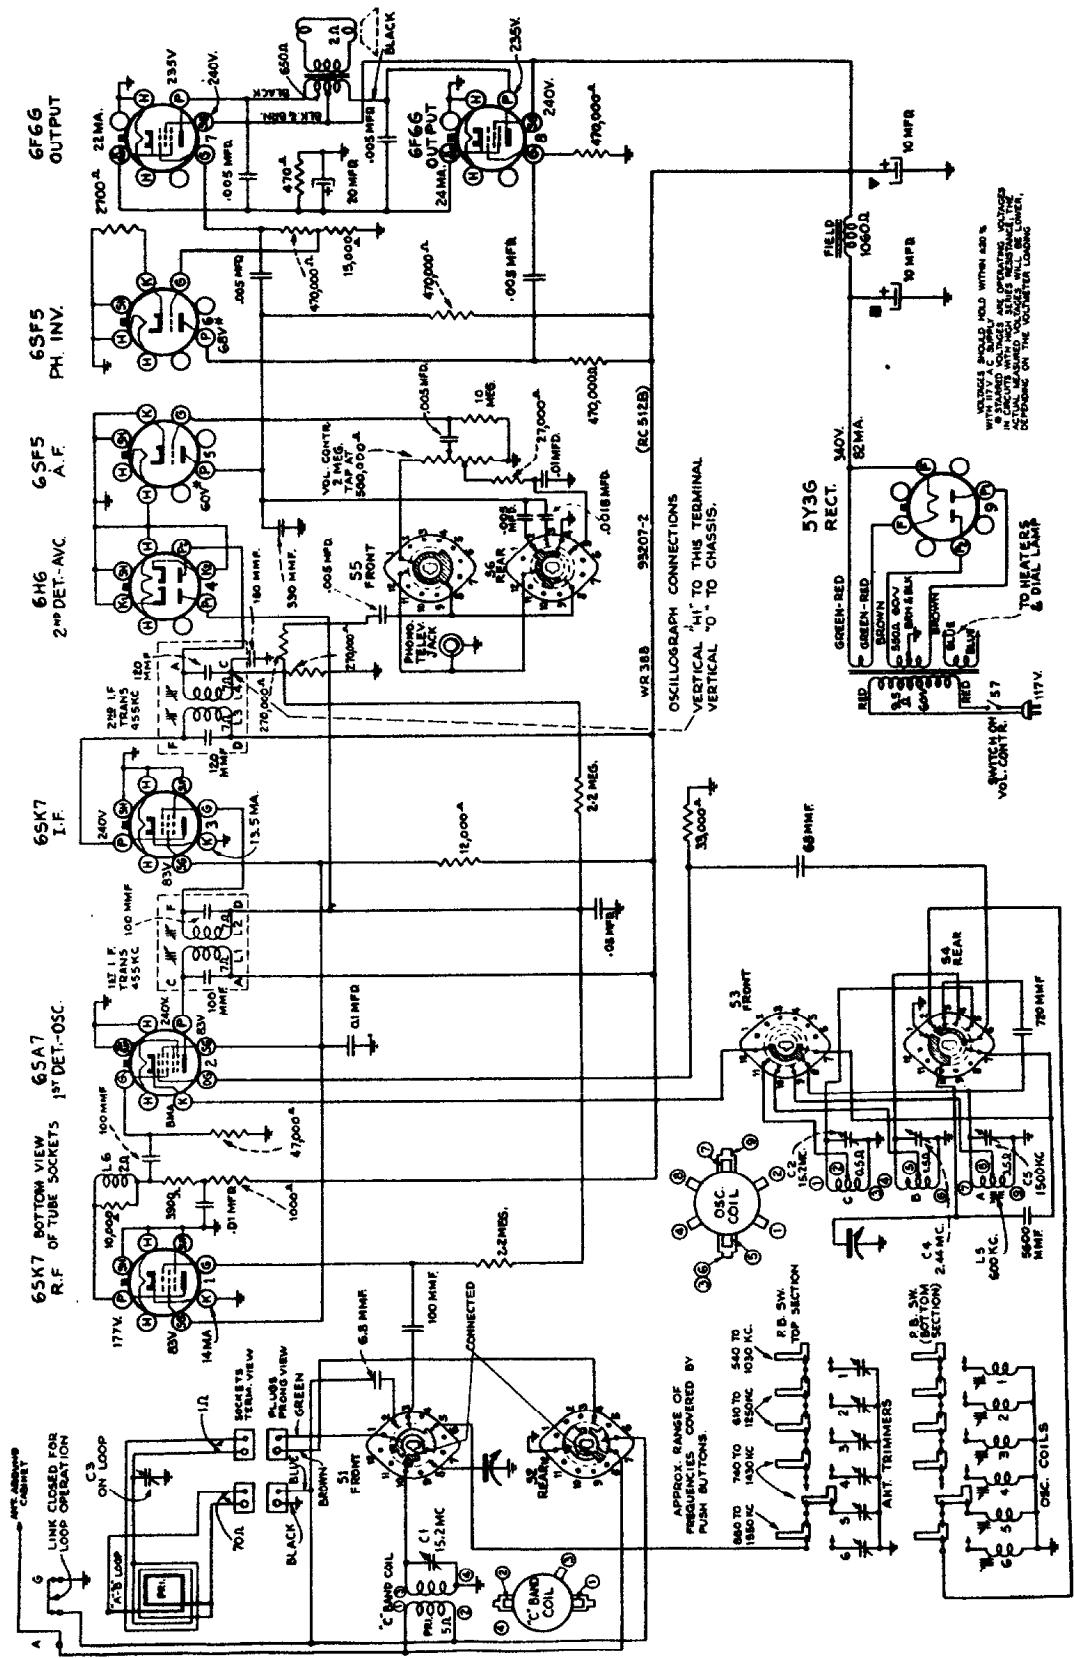

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

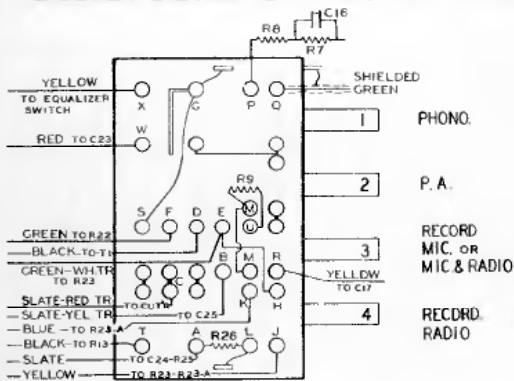


MODELS	CIRCUIT	PHONO-PLAYER
A-89	ILLUSTRATED	MANUAL
A-91	"	"
A-92	"	"
A-93	"	AUTOMATIC
A-94	"	"
A-101	SEE WIRING & NOTE A-101	USED WITH A-102
A-102	SEE NOTE A-102	DUAL TURNTABLE ONLY

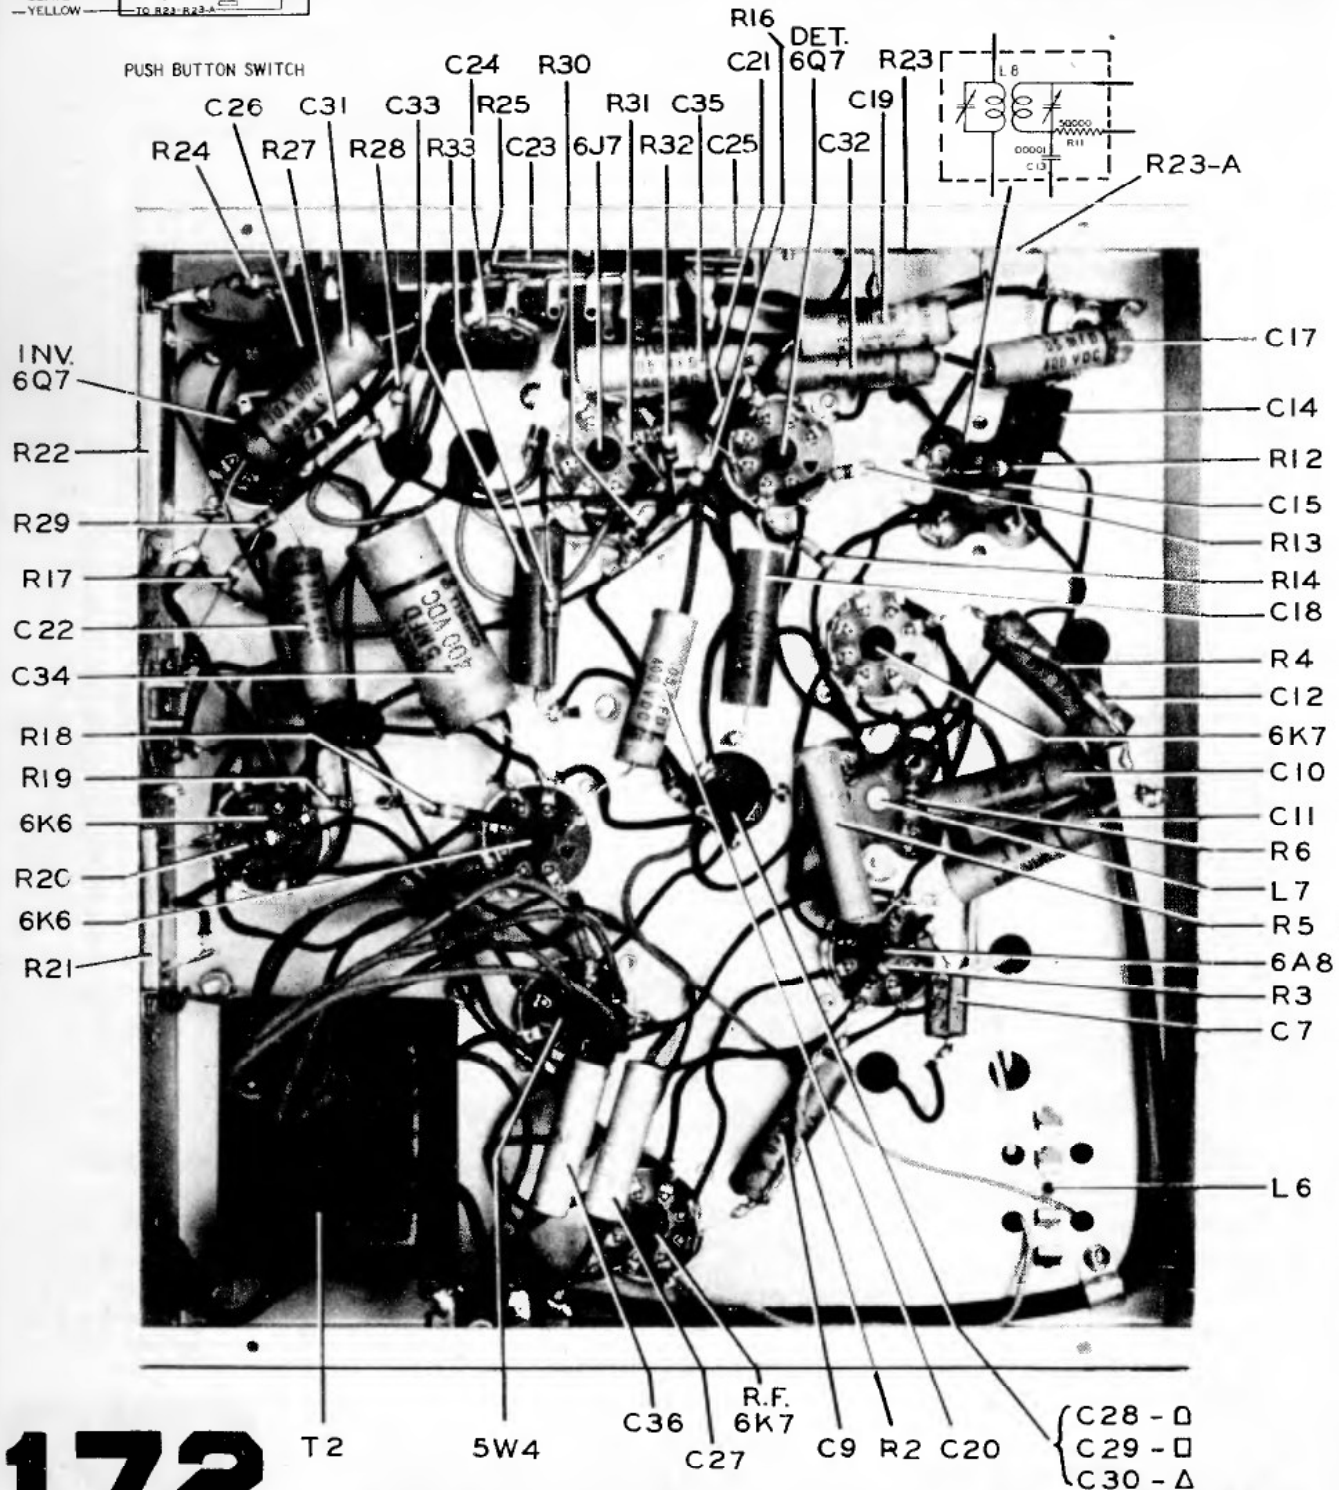

172

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

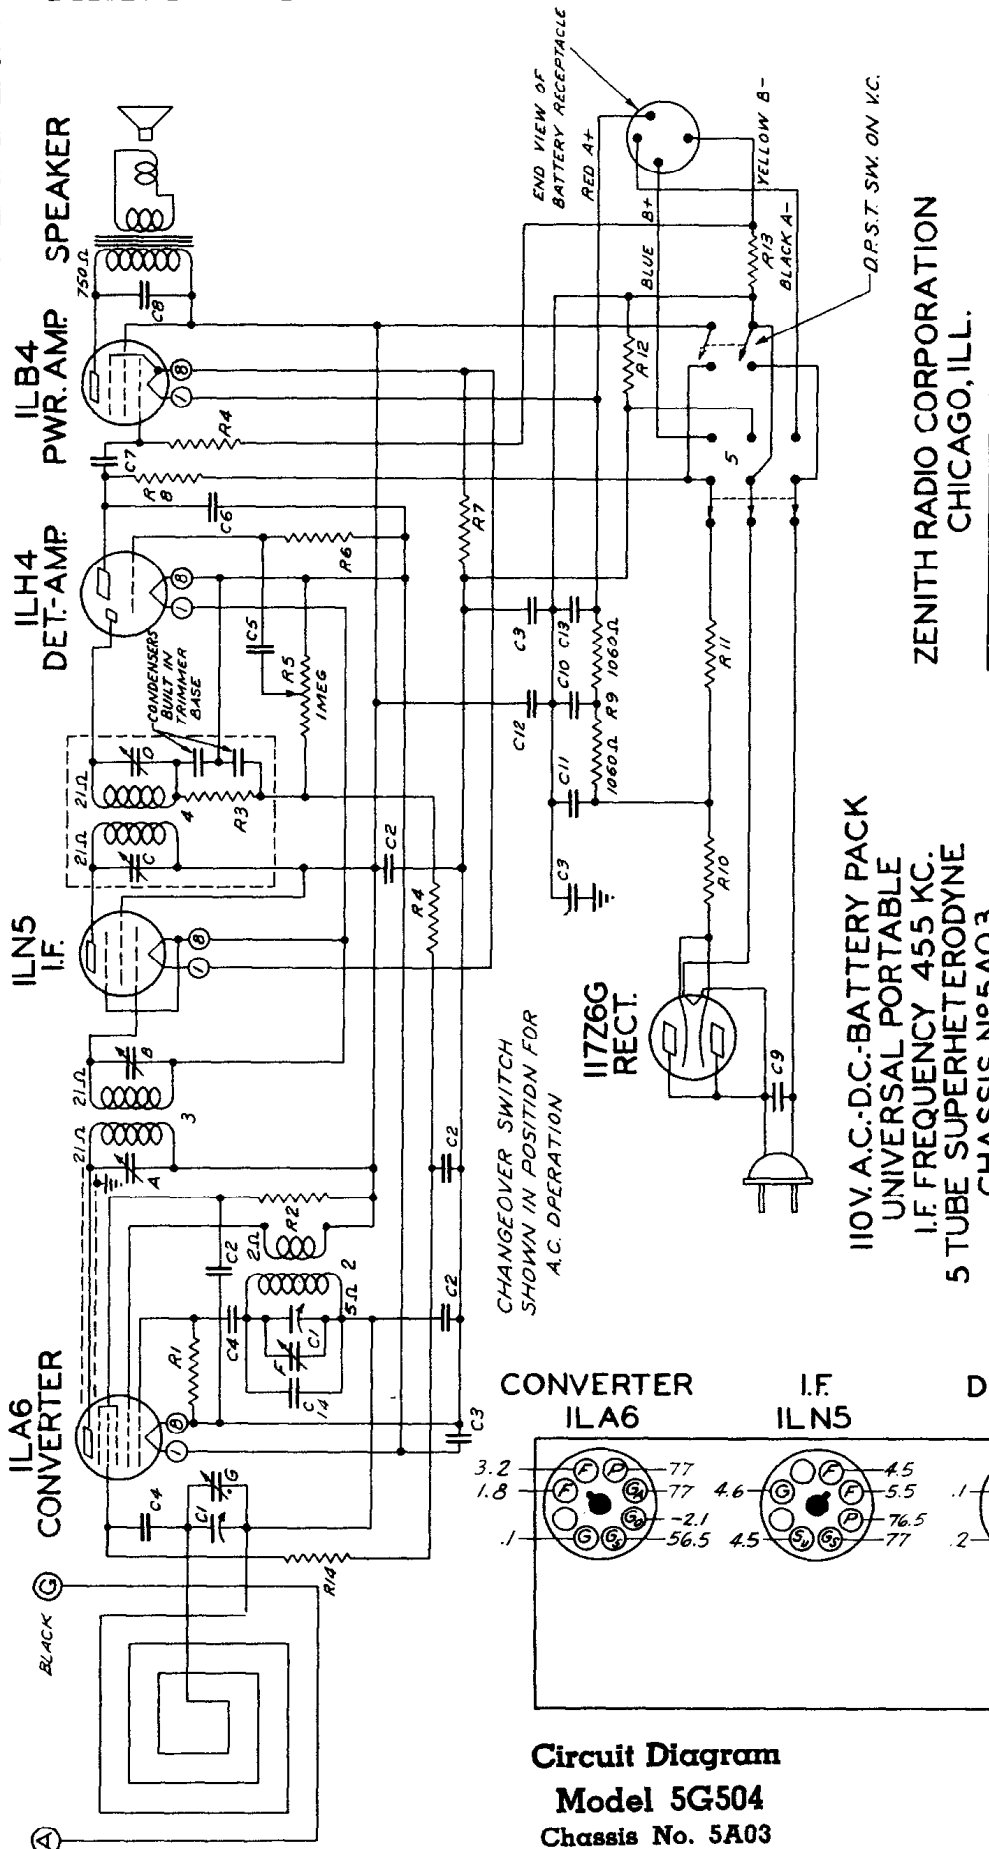


ZENITH RADIO CORPORATION
CHICAGO, ILL.


110V. A.C.-D.C. BATTERY PACK
UNIVERSAL PORTABLE
I.F. FREQUENCY 455 KC.
5 TUBE SUPERHETERODYNE
CHASSIS No 5A03

DIAG. No.	PART No.	DESCRIPTION	DIAG. No.	PART No.	DESCRIPTION	DIAG. No.	PART No.	DESCRIPTION
C1	22-1062	TRD GANG VARIABLE	R1	63-773	180 M OHM	1	58742	WAVEMAGNET ASSEMBLY
C2	22-829	.05 MFD.	R2	63-646	33M OHM	2	58730	OSC. COIL ASSEMBLY
C3	22-827	.1 MFD.	R3	63-773	47 M OHM	3	95-120	1ST. I.F. TRANSFORMER
C4	22-162	.0001 MFD.	R4	63-600	2.2 MEG OHM	4	95-121	2ND. I.F. TRANSFORMER
C5	22-492	.002 MFD.	R5	63-126	VOLUME CONTROL	5	85-242	CHANGEOVER SWITCH
C6	22-470	.00015 MFD.	R6	63-976	15 MEG OHM			
C7	22-243	.01 MFD.	R7	63-1097	870 OHM WIREWOUND			
C8	22-326	.003 MFD.	R8	63-271	1 MEG OHM			
C9	22-869	.05 MFD.	R9	63-1137	2-SECTION CANODHM			
C10	22-1062	TRD GANG VARIABLE	R10	63-1096	180 OHM WIREWOUND	4		1ST. I.F. TRANS. PRI
C11	22-1062	TRD GANG VARIABLE	R11	63-439	2700 OHM WIREWOUND	6		1ST. I.F. SEC.
C12	22-1027	120 MFD.	R12	63-1099	35 OHM WIREWOUND	8		2ND. I.F. PRI.
C13	22-1027	120 MFD.	R13	63-142	180 OHM	C		2ND. I.F. SEC.
C14	22-285	10 MFD.	R14	63-296	220 M OHM	F		BROADCAST OSC. (ON GANG)
						G		BROADCAST ANT. (ON GANG)


CONVERTER
ILA6

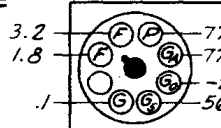


I.F.
ILN5

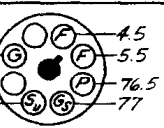


DET. AMP.
ILH4

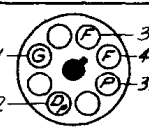

PWR. AMP.
ILB4

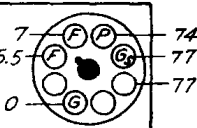


Circuit Diagram
Model 5G504
Chassis No. 5A03



RECT.
117Z6G
173

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

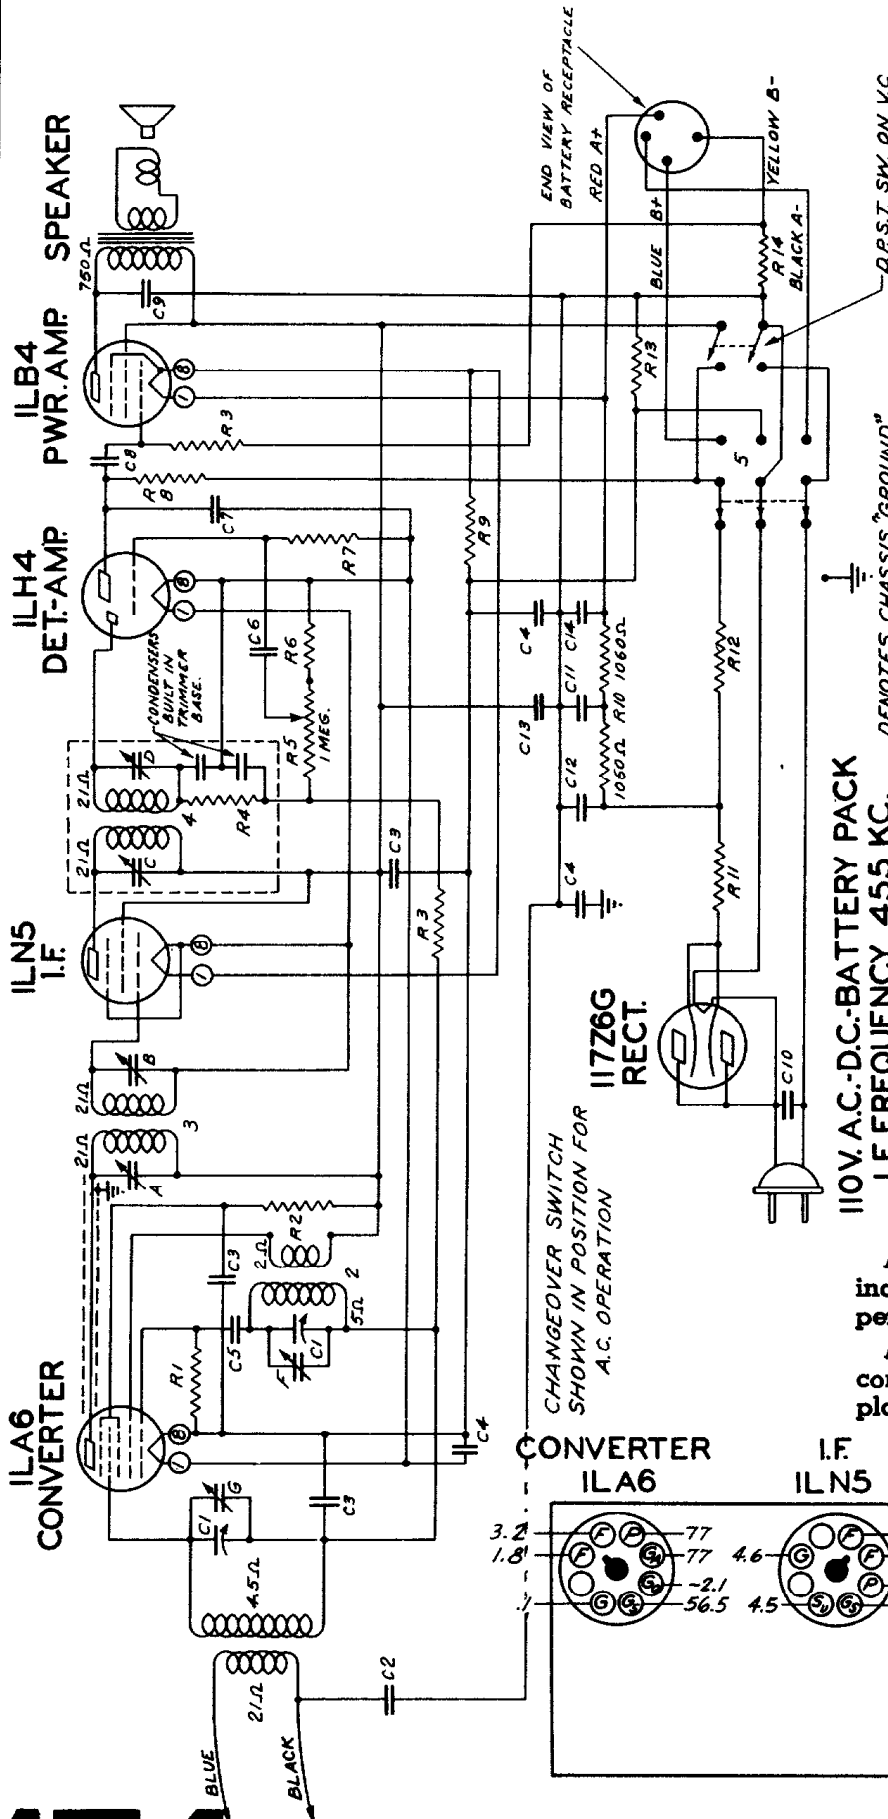


Circuit Diagram
Models 5G510-5G534
Chassis No. 5A10

110V. A.C.-D.C. BATTERY PACK
I.F. FREQUENCY 455 KC.
5 TUBE SUPERHETERODYNE
CHASSIS No 5A10
ZENITH RADIO CORPORATION
CHICAGO, ILL.


DIAG. No.	PART No.	DESCRIPTION	DIAG. No.	PART No.	DESCRIPTION	DIAG. No.	PART No.	DESCRIPTION
1	20-227	ANTENNA COIL	1	63-654	180 M OHM	1	63-654	180 M OHM
2	5B914	D.S.C. COIL ASSEMBLY	2	63-646	33 M OHM	2	63-646	33 M OHM
3	95-720	1ST I.F. TRANSFORMER	3	63-600	2.2 MEGOHM	3	63-600	2.2 MEGOHM
4	95-721	2ND I.F. TRANSFORMER	4	63-713	47 M OHM	4	63-713	47 M OHM
5	85-254	CHANGEOVER SWITCH	5	63-1144	VOLUME CONTROL	5	63-1144	VOLUME CONTROL
A		1ST I.F. TRANS. PRI.	6	63-587	4700 OHM	6	63-587	4700 OHM
B		1ST I.F. " SEC.	7	63-1093	15 MEGOHM	7	63-1093	15 MEGOHM
C		2ND I.F. " PRI.	8	63-1097	1 MEGOHM	8	63-1097	1 MEGOHM
D		2ND I.F. " SEC.	9	63-1097	870 OHM WIREWOUND	9	63-1097	870 OHM WIREWOUND
E		BROADCAST OSC. (ON GANG)	10	63-1096	140 OHM WIREWOUND	10	63-1096	140 OHM WIREWOUND
F		BROADCAST ANT. (ON GANG)	11	63-439	2700 OHM	11	63-439	2700 OHM
G			12	63-1099	33 OHM WIREWOUND	12	63-1099	33 OHM WIREWOUND
			13	63-627	180 OHM	13	63-627	180 OHM
			14	63-627	180 OHM	14	63-627	180 OHM

All voltages measured from point indicated to Neg. B. using 20000 ohm per volt meter.

Antenna disconnected — volume control at minimum and condenser plates in full mesh.

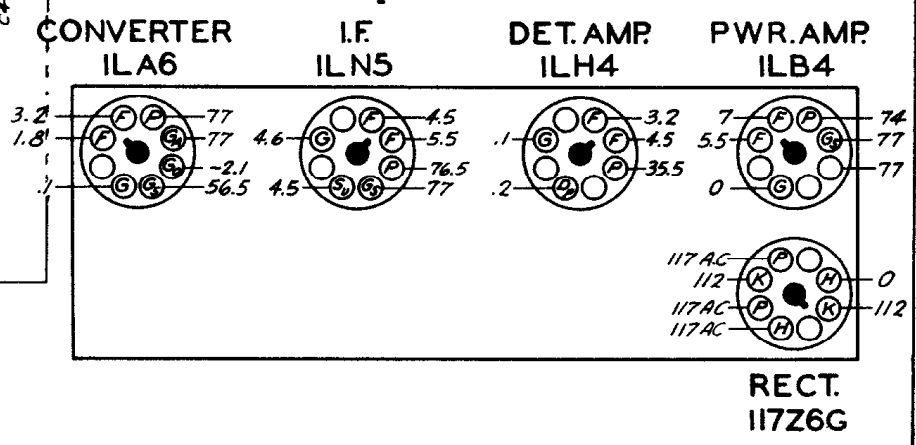

1941 MOST POPULAR SERVICE DIAGRAMS

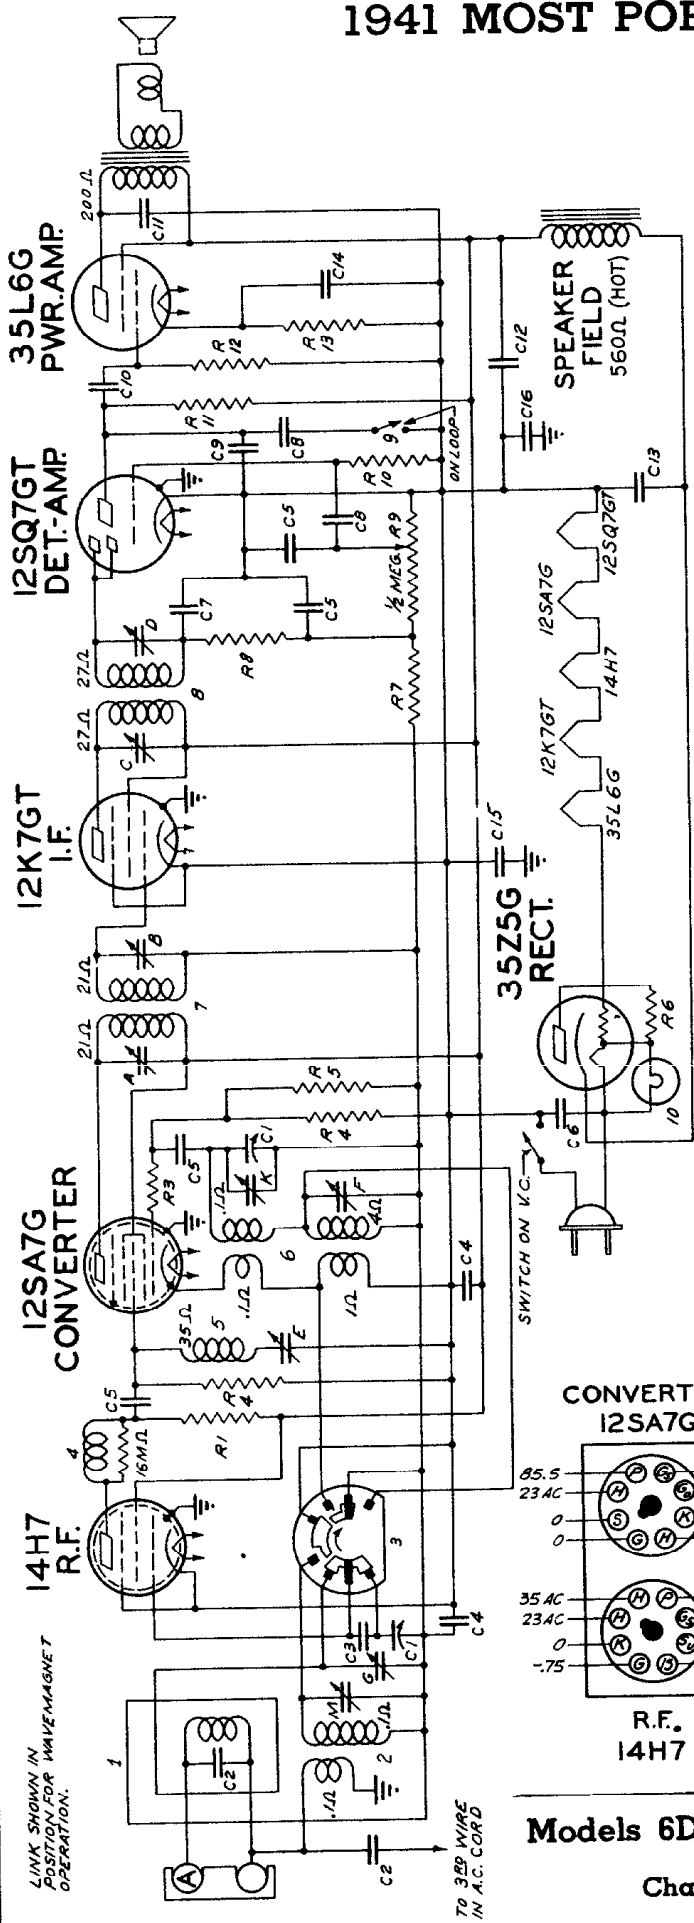


I.F. FREQUENCY 455 KC.
 6 TUBE SUPERHETERODYNE
 CHASSIS NO. 6A16 C-DC. 2 BAND
 ZENITH RADIO CORPORATION
 CHICAGO, ILL.

⊥ DENOTES CHASSIS "GROUND"

8-22-40 C16 ADDED # 22-1157 HAS 22-467
 8-16-40 C15 ADDED
 8-14-40 C5 AT KG. ADDED

DWG. No.	PART No.	DESCRIPTION
6	5 8881	OSCILLATOR COIL ASSEM.
7	95-760	1ET I.F. TRANSFORMER
8	95-801	FILTER EXTERNAL
9	95-759	2ND I.F. TRANS. FILTER IN CAN
10	85-257	100-67 TONE CONTROL SWITCH
	100-67	PILOT LIGHT 6.3 V. .15A.
A		1ET I.F. TRANS. PRI.
B		2ND I.F. TRANS. SEC.
C		2ND I.F. TRANS. PRI.
D		100-67 TONE CONTROL SWITCH
E		WAVE TRAP (SEE NOTE)
F		BROADCAST OSC. (SEE NOTE)
G		BROADCAST ANT. (SEE NOTE)
K		SHORT WAVE ANT. (SEE NOTE)
M		NOTE: TRIMMERS E, F, G ARE MOUNTED ON STRIP # 22-1072

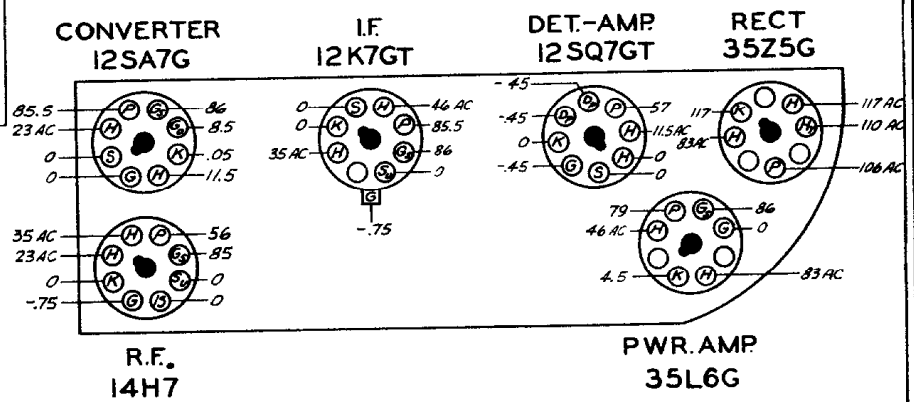

Models 6D512-6D512W-6D539


Chassis No. 6A16

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

175

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS


**110V. A.C.-D.C.-BATTERY PACK
UNIVERSAL PORTABLE
I.F. FREQUENCY 455 KC.
6 TUBE SUPERHETERODYNE
CHASSIS No. 6A19
ZENITH RADIO CORPORATION
CHICAGO, ILL.**

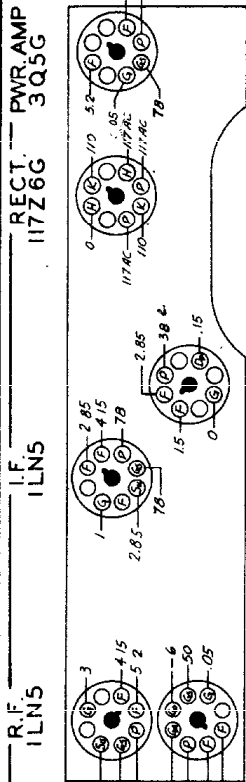

QAG No.	PART No.	DESCRIPTION	PART No.	DESCRIPTION	PART No.	DESCRIPTION
C1	22-1024	7100 GANG VARIABLE	R2	63-595	100 M OHM	OSCILLATOR ASSEMBLY
C2	22-1229	.05 MFD.	R3	63-773	180 M OHM	WAVE TRAP ASSEMBLY
C3	22-152	.001 MFD.	R4	63-532	33 M OHM	1/2 I.F. TRANSFORMER
C4	22-857	1 MFD.	R5	63-1097	870 OHM WIREWOUND	22 I.F. TRANSFORMER
C5	22-958	20 M MFD.	R6	63-600	2.2 MEG OHM	CHANGEOVER SWITCH
C6	22-859	.05 MFD.	R7	63-715	47 M OHM	WAVE-MAGNET SWITCH
C7	22-482	500 MFD.	R8	63-7127	VOLUME CONTROL	
C8	22-1026	20 MFD. ELECTROLYTIC	R9	63-587	4700 OHM	
C9	22-1026	100 MFD. ELECTROLYTIC	R10	63-7059	40 OHM WIREWOUND	
C10	22-1159	40 MFD. ELECTROLYTIC	R11	63-7152	2-SECTION CANDIDUM	
C11	22-159	40 MFD. ELECTROLYTIC	R12	63-1098	1800 OHM	
C12	22-196	.01 MFD.	R13	63-723	2.2 MEG OHM	
C13	22-448	.004 MFD.	R14	63-323	50 M OHM	
C14	22-448	.004 MFD.	R15	63-323	50 M OHM	
C15	22-470	.00015 MFD.	R16	63-271	1 MEG OHM	
R1	63-590	15 M OHM				1/2 I.F. TRANS. PRI
						1/2 I.F. TRANS. SEC.
						22 I.F. TRANS. PRI.
						22 I.F. TRANS. SEC.
						WAVE TRAP
						BROADCAST OSC. (ON GANG)
						BROADCAST ANT. (ON GANG)

ILA6 CONVERTER
ILH4 DET. AMP.
ILN5 I.F.
3Q5G PWR. AMP

All voltages measured with a 20000 ohm per volt meter from Neg. B to socket contact indicated.
 All voltages are positive D.C. unless marked otherwise.
 Volume control on full.
 Line voltage 117 v. A.C.

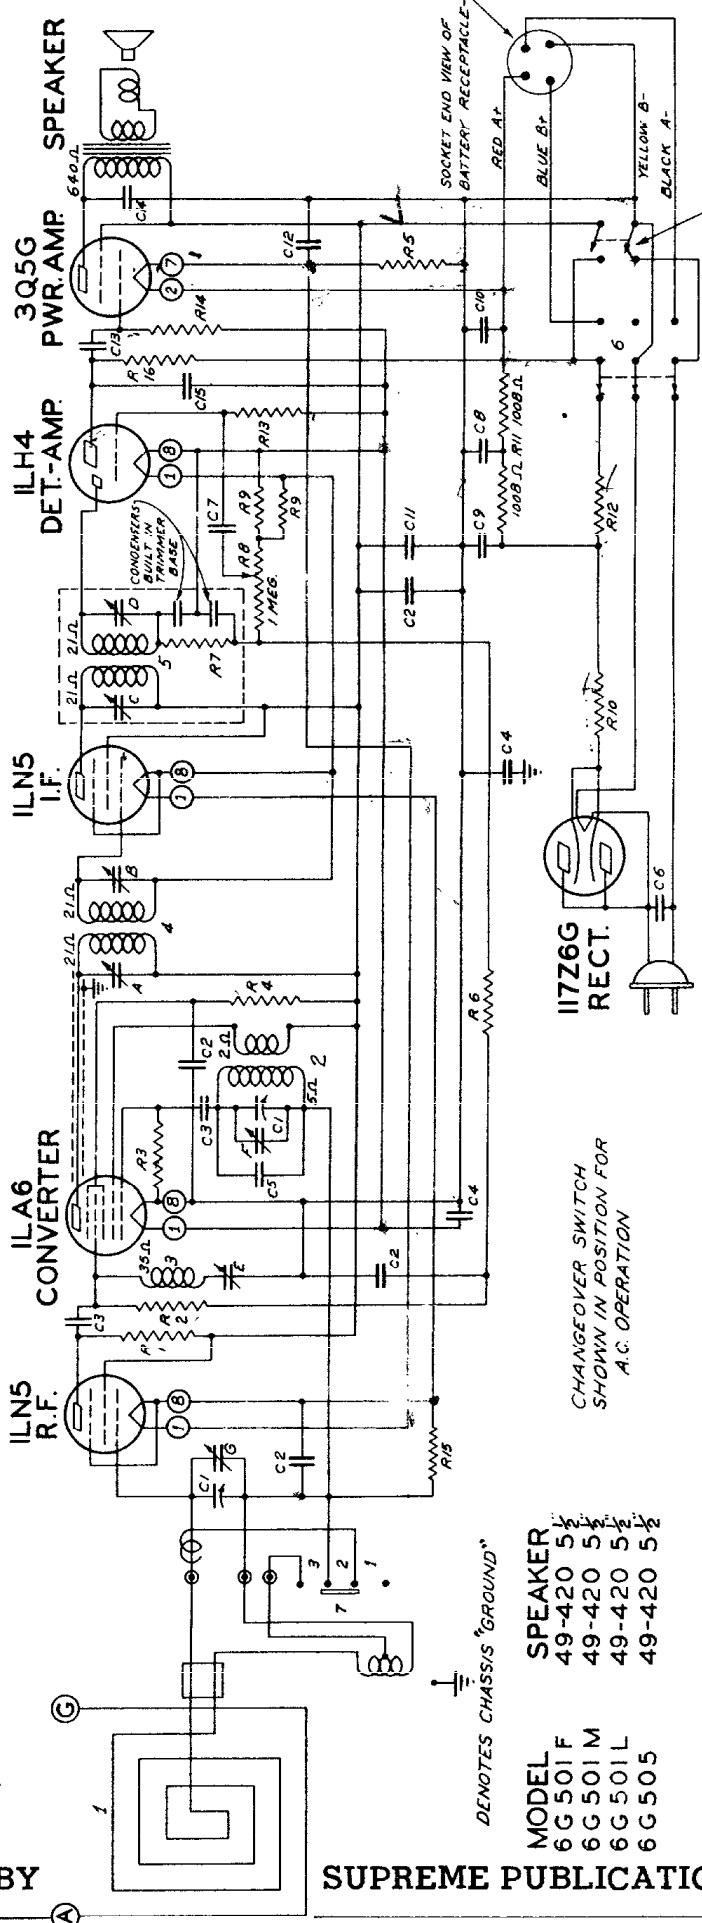

Chassis No. 6A19

Models 6G501F-6G501L-6G501M

- MODEL
 6G501F
 6G501M
 6G501L
 6G505
- SPEAKER
 49-420 5 1/2"
 49-420 5 1/2"
 49-420 5 1/2"
 49-420 5 1/2"

8-13-40 FULLY REVISED
 8-15-40 MODEL WAS CHANGED
 8-20-40 22-1159 WAS 22-1069
 8-23-40 22-1159 INCLUDES 22-1081 #22-1156
 9-11-40 22-1069 WAS 22-643

176


COMPILED BY

SUPREME PUBLICATIONS


Models 12S550Z-12S568E-12S569Z-12S569E-12S569Z-12S595Z

Chassis No. 12A1

QWS PART NO.	DESCRIPTION	QWS PART NO.	DESCRIPTION	QWS PART NO.	DESCRIPTION
C 1	122-951 THREE GANG VARIABLE	R 1	63-627 180 OHM	1	1E I.F. TRANS. SEC
C 2	22-889 .05 MFD.	R 2	63-597 4700 OHM	2	2E I.F. TRANS. PRI
C 3	22-887 .1 MFD.	R 3	63-597 4700 OHM	3	3E I.F. TRANS. SEC
C 4	22-889 .05 MFD.	R 4	63-597 4700 OHM	4	4E I.F. TRANS. PRI
C 5	22-889 .05 MFD.	R 5	63-597 4700 OHM	5	5E I.F. TRANS. SEC
C 6	22-716 .0005 MFD.	R 6	63-597 4700 OHM	6	6E I.F. TRANS. PRI
C 7	22-828 .05 MFD.	R 7	63-597 4700 OHM	7	7E I.F. TRANS. SEC
C 8	22-127 .05 MFD.	R 8	63-597 4700 OHM	8	8E I.F. TRANS. PRI
C 9	22-127 .05 MFD.	R 9	63-597 4700 OHM	9	9E I.F. TRANS. SEC
C 10	22-359 .002 MFD.	R 10	63-597 4700 OHM	10	10E I.F. TRANS. PRI
C 11	22-1053 .0005 MFD.	R 11	63-597 4700 OHM	11	11E I.F. TRANS. SEC
C 12	22-289 .002 MFD.	R 12	63-597 4700 OHM	12	12E I.F. TRANS. PRI
C 13	22-1053 .0005 MFD.	R 13	63-597 4700 OHM	13	13E I.F. TRANS. SEC
C 14	22-954 .00035 MFD.	R 14	63-597 4700 OHM	14	14E I.F. TRANS. PRI
C 15	22-470 .0005 MFD.	R 15	63-597 4700 OHM	15	15E I.F. TRANS. SEC
C 16	22-449 .004 MFD.	R 16	63-597 4700 OHM	16	16E I.F. TRANS. PRI
C 17	22-828 .05 MFD.	R 17	63-597 4700 OHM	17	17E I.F. TRANS. SEC
C 18	22-828 .05 MFD.	R 18	63-597 4700 OHM	18	18E I.F. TRANS. PRI
C 19	22-828 .05 MFD.	R 19	63-597 4700 OHM	19	19E I.F. TRANS. SEC
C 20	22-131 .01 MFD.	R 20	63-597 4700 OHM	20	20E I.F. TRANS. PRI
C 21	22-1014 .002 MFD.	R 21	63-597 4700 OHM	21	21E I.F. TRANS. SEC
C 22	22-108 .0005 MFD.	R 22	63-597 4700 OHM	22	22E I.F. TRANS. PRI
C 23	22-932 .02 MFD.	R 23	63-597 4700 OHM	23	23E I.F. TRANS. SEC
C 24	22-932 .02 MFD.	R 24	63-597 4700 OHM	24	24E I.F. TRANS. PRI

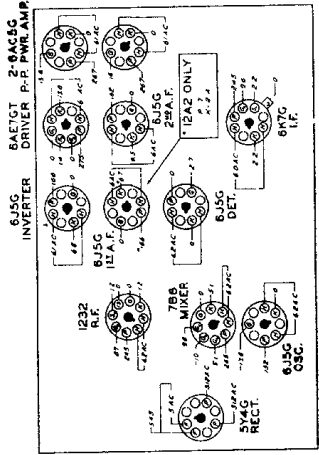

SOCKET VOLTAGES

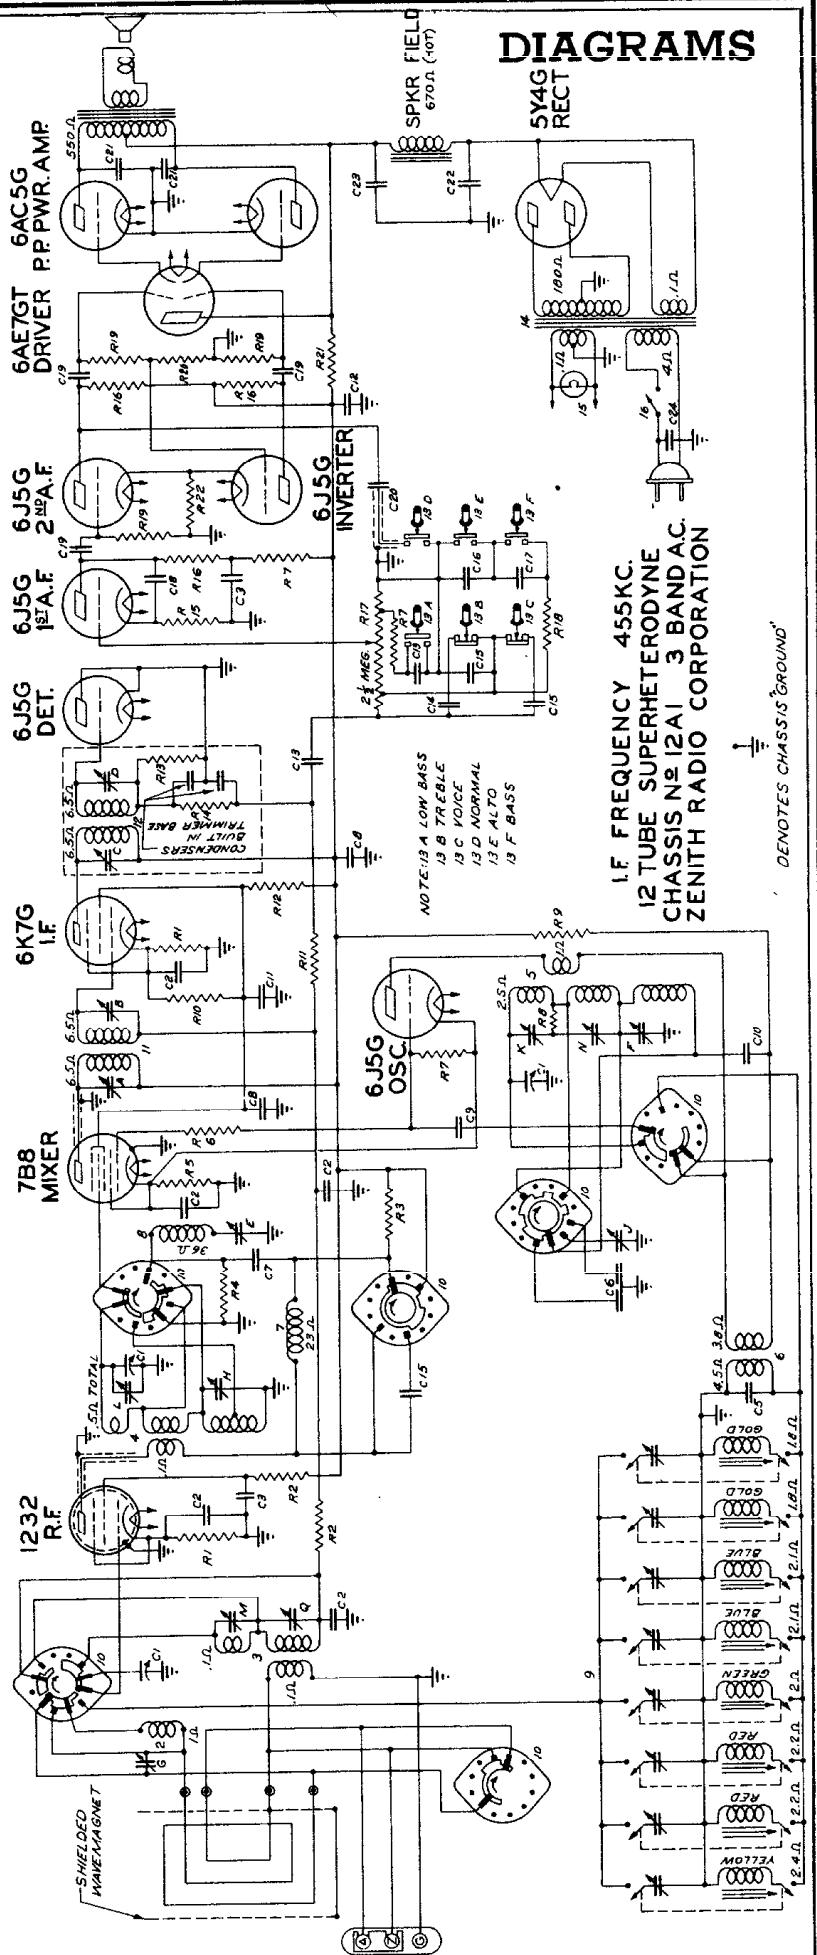


I.F. FREQUENCY 455KC.
12 TUBE SUPERHETERODYNE
CHASSIS No. 12A1 3 BAND A.C.
ZENITH RADIO CORPORATION

⊥ DENOTES CHASSIS GROUND

ZENITH RADIO CORPORATION

CHICAGO • ILLINOIS

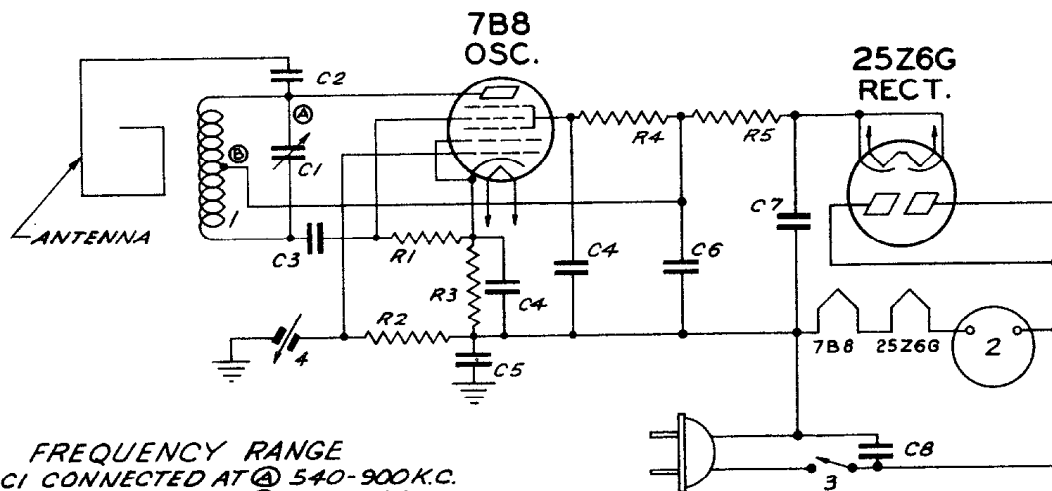


FREQUENCY RANGE
 C1 CONNECTED AT (A) 540-900K.C.
 C1 CONNECTED AT (B) 900-1500K.C.

MODELS
 S8500Z

DIAG. No.	PART No.	DESCRIPTION	DIAG. No.	PART No.	DESCRIPTION
C1	22-690	TUNING CONDENSER	R2	63-464	1 MEGOHM 1/4 W.
C2	22-127	25 MMFD. 600V.	R3	63-581	470 OHM 1/4 W.
C3	22-182	.00025 MFD. 600V.	R4	63-964	4700 OHM 1/2 W.
C4	22-829	.05 MFD. 200V.	R5	63-707	4700 OHM 1/4 W.
C5	22-827	.1 MFD. 200V.			
C6	22-1061	8 MFD. ELECTROLYTIC 150V.	1	58611	OSC. COIL ASSEM.
C7	22-1061	16 MFD. " 150V.	2	141-85	MOTOR (60~)
C8	22-869	.05 MFD. 400V.	3	85-191	A.C. SWITCH
R1	63-593	47 M OHM 1/4 W.	4	142-30	PICKUP


PHONOGRAPH OSCILLATOR
 ZENITH RADIO CORPORATION
 CHICAGO ILL.

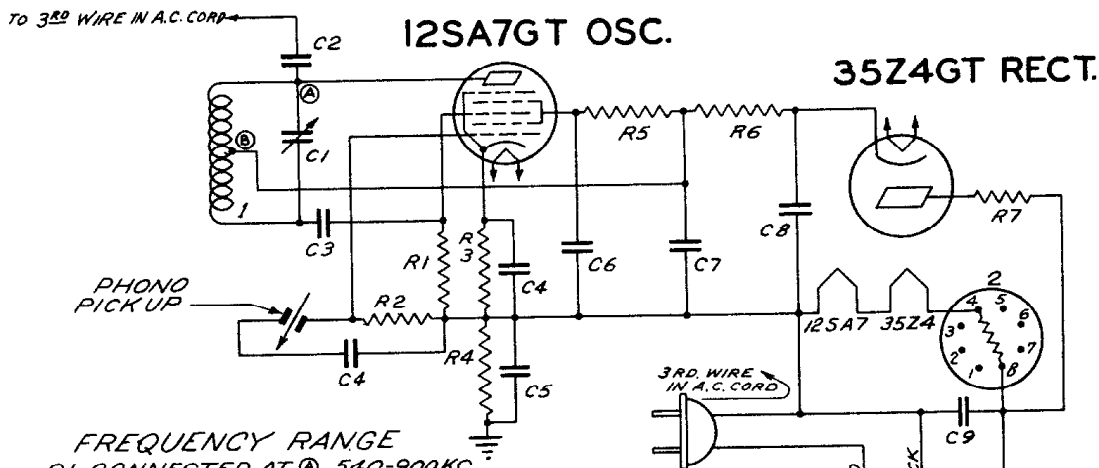

FREQUENCY RANGE
 C1 CONNECTED AT (A) 540-900KC.
 C1 CONNECTED AT (B) 900-1500KC.

MODEL
 S9000

DIAG. No.	PART No.	DESCRIPTION	DIAG. No.	PART No.	DESCRIPTION
C1	22-690	TUNING CONDENSER	R3	63-701	470 OHM 1/4 W.
C2	22-127	25 MMFD. 600V.	R4	63-296	220M OHM 1/4 W.
C3	22-182	.00025 MFD. 600V.	R5	63-964	4700 OHM 1/2 W.
C4	22-829	.05 MFD. 200V.	R6	63-803	2200 OHM 1/2 W.
C5	22-827	.1 MFD. 200V.	R7	63-575	47 OHM 1/4 W.
C6	22-243	.01 MFD. 400V.			
C7	22-876	8 MFD. ELECTROLYTIC 150V.	1	58611	OSC. COIL ASSEM.
C8	22-876	40 MFD. " 150V.	2	100-76	BALLAST TUBE
C9	22-828	.05 MFD. 400V.	3	52-208	3PRONG RECEPTACLE
R1	63-591	22 M OHM 1/4 W.			
R2	63-271	1 MEGOHM 1/4 W.			

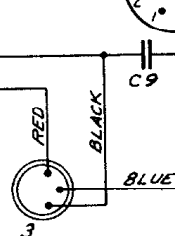

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

FREQUENCY MODULATION

Broadcasting by the Frequency Modulation method has already proved to be the most satisfactory means of "Local" radio transmission with reduced noise and high fidelity. It is not generally understood that these two features of FM are due in a great measure to the wide frequency band which this method of modulation employs. The FM receiver must be accurately aligned because much of the FM system's noise reducing ability is lost if the FM IF and discriminator circuits are misaligned.

The alignment of FM receivers differs from the familiar AM receiver alignment procedure where a modulated signal from the generator is used and the output is measured with an A.C. voltmeter across the voice coil.

The signal generator for FM alignment must be capable of supplying an unmodulated signal of at least .5 volt at the IF frequencies (4 to 9 Mc.) and a moderate unmodulated signal at the FM RF frequencies (41.5 to 50.5 Mc.) A 50-0-50 microammeter, such as Triplett #321 or #521, makes an excellent output meter when used with our #S9614 four prong plug and cable assembly and a S.P.D.T. switch. (see fig. 1)

The output meter is connected across HALF the diode load resistor for gain alignment and is connected across the FULL diode load resistor for frequency settings. A polarized socket is provided (near the 7A6 tube) which accommodates the output meter plug to facilitate switching the meter across either FULL or HALF the diode load resistor.

IMPORTANT—The FM IF and discriminator alignment must be followed in a stage-by-stage sequence, beginning at the discriminator and working forward to the converter stage. This differs from the conventional AM IF alignment procedure where the signal is applied to the converter grid and all the IFs are aligned simultaneously.

The signal from the generator must be kept just below the point where the limiter action of the receiver begins. To explain further we should consider the purpose of the limiter. It does what its name implies; it limits the amount of signal applied to the discriminator circuit. When the input signal is strong the limiter cuts off, allowing only a portion of the signal to pass, while at low signal levels the limiter acts as an IF amplifier. Therefore, it is easy to understand why the signal input to the receiver and IFs must be held below the limiter operating range during alignment. The most practical way of determining the proper amount of input signal is to watch the output meter (connected across HALF the diode load) while the signal from the generator is increased. The meter will indicate the increase in signal until limiting action begins, from which point on no appreciable increase can be noted on the meter even though the generator signal has been increased considerably. The desired signal input level (from the generator) is just below the limiting point which may be determined by increasing the generator output while watching the output meter, then reducing the generator output slightly when the limiting point is reached.

IF AND DISCRIMINATOR ALIGNMENT

Holes have been placed at the top of all the FM IF transformer shields so that a signal generator may be connected across the transformer secondaries to facilitate alignment. (see fig. 2) A very high input signal will be necessary to get an output indication for the discriminator alignment. Should the generator be unable to supply sufficient signal, the Discriminator input stage may be aligned first in order that its gain may be utilized to raise the input signal to the discriminator.

1. Connect the output meter across the FULL discriminator load. (fig. 1)
2. Feed an unmodulated signal, at the IF frequency, through the dummy antenna (fig. 2) to the 3rd IF transformer secondary. (The IF frequency is stamped on the IF transformer shields.) Adjust the slug B4 for resonance. Rotating the slug B4 through the resonance point will cause the output meter to swing through zero from positive to negative or vice versa. A zero reading on the meter indicates the desired resonance point.
3. Switch the output meter to HALF discriminator load (fig. 1). Adjust trimmer A4 for maximum output keeping the signal input below the point of limiting action.
4. (Meter at HALF load) Connect the generator to the 2nd IF transformer secondary and adjust the 3rd IF trimmers A3 and B3 for maximum output.
5. (Meter at HALF load) Connect the generator across the 1st IF transformer secondary and adjust the 2nd IF transformer trimmers A2 B2 for maximum output.
6. (Meter at HALF load) Connect the generator to the converter grid. A small socket is provided near the converter tube which will accommodate the side pin of the #S9615 Dummy Antenna assembly (Fig. 2) to facilitate this generator connection. Adjust the 1st IF transformer trimmers A1 B1 for maximum output.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS


FM OSCILLATOR AND RF ALIGNMENT

- 7a. (Meter at FULL load) Connect the generator, through a 100 ohm dummy antenna, to the FM antenna terminals. Set the generator at 50 Mc. and tune in the signal on the receiver. As the pointer passes the 50 Mc. calibration the output meter will swing from negative through zero to a positive reading or vice versa. The resonance point is again at the zero setting. Should the pointer be off calibration more than plus or minus .5 Mc., which is tolerable, the oscillator may be set by adjusting the two flexible green leads between the manual tuning oscillator coil and the band switch. If the pointer is below 50 Mc. it can be raised by bringing the two green leads together and in the same manner the pointer can be lowered by separating the leads.
- 7b. (Meter still at FULL load) Set the generator at 46 Mc. and check the dial calibration (zero on meter). 46 Mc. should be on scale unless the cam on the condenser shaft has been loosened. If the cam has to be adjusted to scale the oscillator at 46 Mc., the 50 Mc. oscillator adjustment must be repeated. The converter stage is aligned after the receiver has been adjusted to scale within the .5 Mc. limits.
- 8a. (Meter at FULL load) With generator connected to the FM antenna terminals through 100 ohm dummy, set the generator at 49 Mc. and tune in signal on receiver to get a zero output meter reading. Switch the meter to HALF load and adjust the generator to give an output just below the limiter action point. Adjust slug P1 for maximum output.
- 8b. (Meter at FULL load) Set generator at 46 Mc. and tune in on receiver. Switch meter to HALF load and adjust "Z" for maximum output.
- 8c. (Meter at FULL load) Set generator at 42.5 Mc. and tune in on receiver. Switch meter to HALF load and adjust P2 for maximum output.

There are no RF adjustments for the FM push buttons when the push buttons are used on automatic. Button #1 is checked at 50 Mc., buttons #2 and #3 checked at 49 Mc., buttons #5 and #6 checked at 42.5 Mc., and button #4 is the manual switch.

In conclusion we again wish to emphasize the importance of keeping the signal from the generator below the point where limiter action begins, that the output meter is connected across the FULL diode load resistor for frequency and calibration operations, and that the output meter is connected across HALF the diode load resistor for gain checks.

This information on alignment of Frequency Modulation circuits is presented with the permission of Zenith Radio Corp. of Chicago.

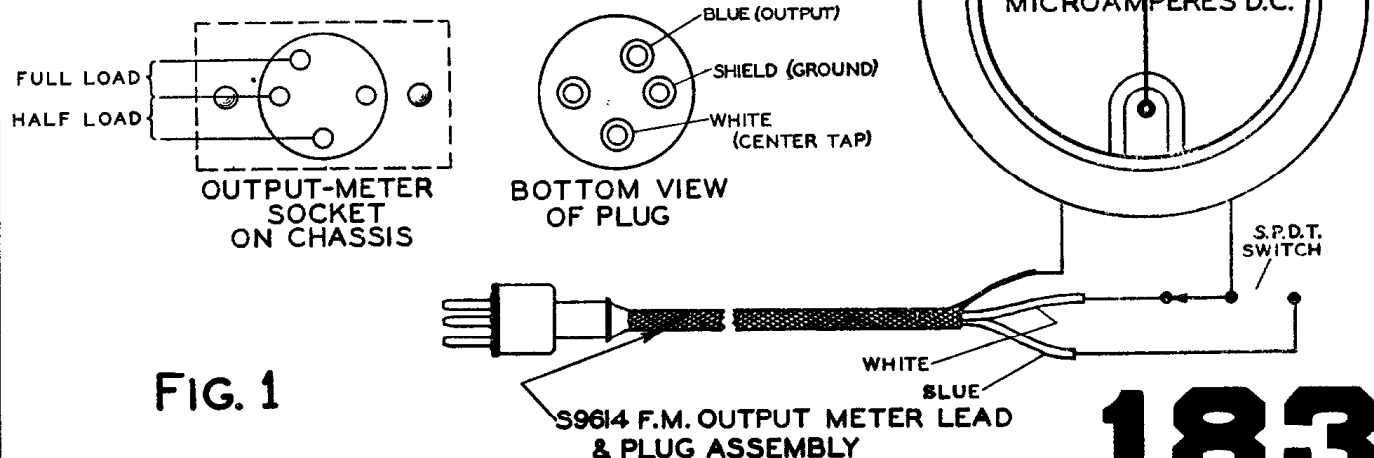


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

183

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

ALIGNMENT PROCEDURE

Operation	Connect Test Oscillator to	Dummy Antenna	Input Signal Frequency	Band	Set Dial At	Trimmers	Purpose
1	Converter Grid	.1 mfd.	455 Kc.	—	1600 Kc.	A, B, C, D	Align I. F.
2	1 Turn Loop Made from Generator Leads. Diameter Approx. 10"	—	1600 Kc.	—	1600 Kc.	F	Set Oscillator to Scale
3		—	600 Kc.	—	600 Kc.	J	Rock Gang and Adjust for Max.
4		—	1400 Kc.	—	1400 Kc.	G	Align Antenna

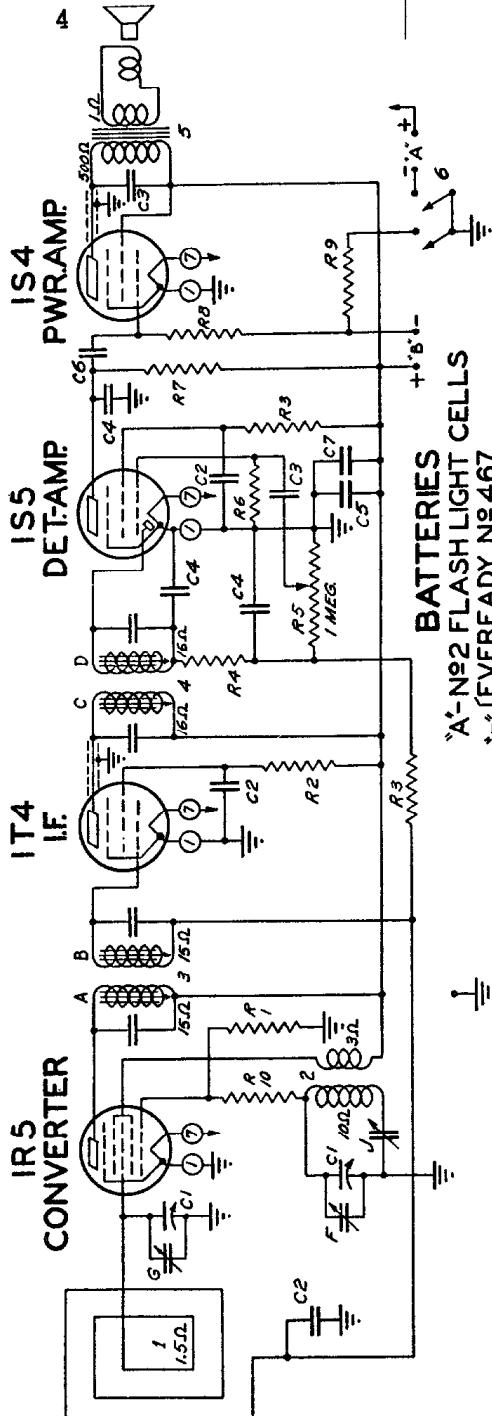


BATTERIES
 A - No 2 FLASH LIGHT CELLS
 B - EVEREADY No 467
 (BURGESS No XX46)


DENOTES CHASSIS "GROUND"

Circuit Diagram
Model 4K600
 Chassis No. 4B01


DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
1	63-715	100M OHM	4	95-781	2# I.F. TRANS.
2	63-765	33M OHM	5	95-779	SPKR. TRANS.
			6	85-267	PWR. SWITCH
			A		1ST I.F. PRI.
			B		1ST I.F. SEC.
			C		2ND I.F. SEC.
			D		BDCAST OSCILLATOR
			F		BDCAST ANTENNA
			G		BDCAST PADDER
			J	22-1166	

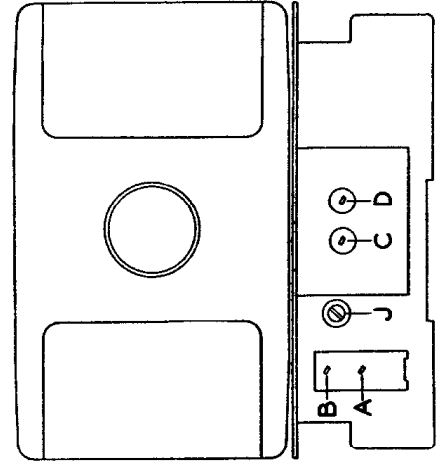

TRIMMER LOCATIONS

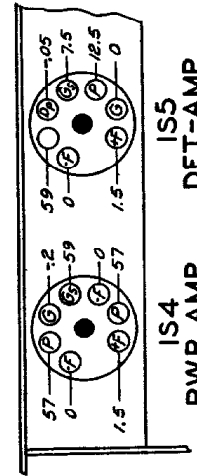


IS4 PWR. AMP

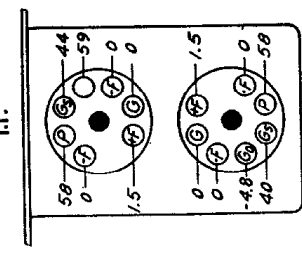

IR5 CONVERTER

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

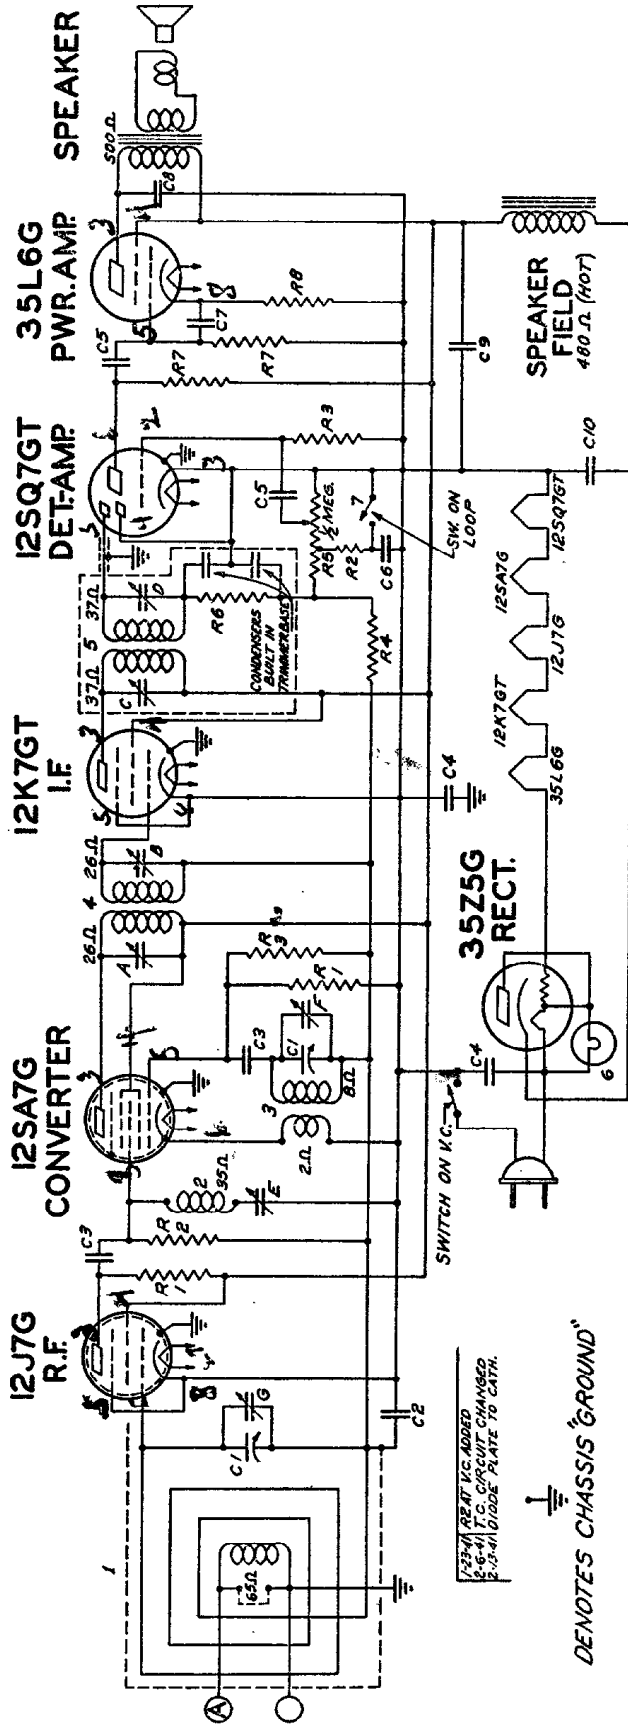

12J7G R.F. AT VC ADDED
5-6-41 I.C. CIRCUIT CHANGED
2-3-41 GRID PLATE TO CATH.

⊥ DENOTES CHASSIS GROUND


Operation	Connect Test Oscillator to	Dummy Antenna	Input Signal Frequency	Band	Set Dial At	Trimmers	Purpose
1	Converter Grid	.5 mfd.	455 Kc.	BC	600 Kc.	A, B, C, D	Align I. F.
2	R. F. Grid	.5 mfd.	455 Kc.	BC	600 Kc.	E	Adj. Wave Trap for Minimum
3	1 Turn Loop Made from Generator	—	1600 Kc.	BC	1600 Kc.	F	Set Oscillator to Scale
4	Leads.	—	1400 Kc.	BC	1400 Kc.	G	Align Antenna

I.F. FREQUENCY 455 KC.

Circuit Diagram


Models 6D520, 6D520W, 6D538

Chassis No. 6A26

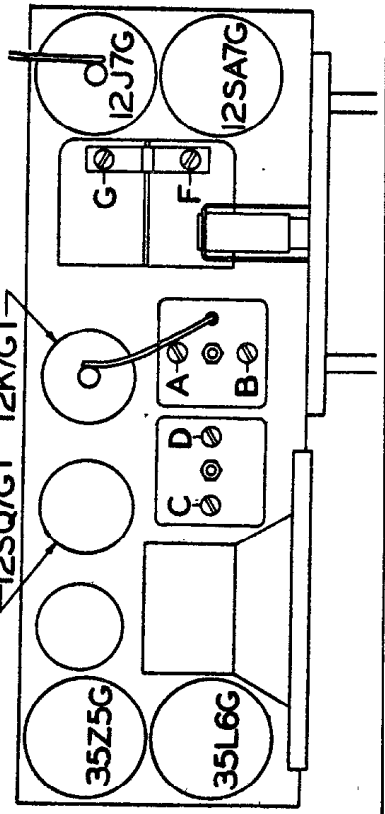

DIAG. No.	PART No.	DESCRIPTION	DIAG. No.	PART No.	DESCRIPTION
C1	22-100K	TWO-GANG VARIABLE	R2	63-591	22 M OHM
C2	22-525	.05 MFD.	R3	63-1059	15 MEG OHM
C3	22-162	.0001 MFD.	R4	63-600	2.2 MEG OHM
C4	22-1017	.05 MFD.	R5	63-169	2.2 MEG OHM
C5	22-249	.01 MFD.	R6	63-713	47 M OHM
C6	22-886	.01 MFD.	R7	63-597	470 M OHM
C7	22-854	.0005 MFD.	R8	63-686	150 OHM WIREWOUND
C8	22-1102	.01 MFD.			
C9	22-104	(20 MFD. ELECTROLYTIC)			
C10		(50K)			
R1	63-589	10M OHM	1	S8356	WAVEMAGNET ASSEMBLY
			2	S8326	WAVE TRAP COIL ASSEMBLY
			3	S8336	OSC. COIL ASSEMBLY
			4		1ST I.F. TRANS.
			5		2ND I.F. TRANS.
			6		PILOT LIGHT 6.3 V. .15A.
			7		PHONE CONTROL SWITCH
			A		1ST I.F. TRANS. PRI.
			B		2ND I.F. TRANS. PRI.
			C		2ND I.F. TRANS. SEC.
			D		WAVE TRAP
			E		BROADCAST OSC. (ON GANG)
			F		BROADCAST ANT. (ON GANG)

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

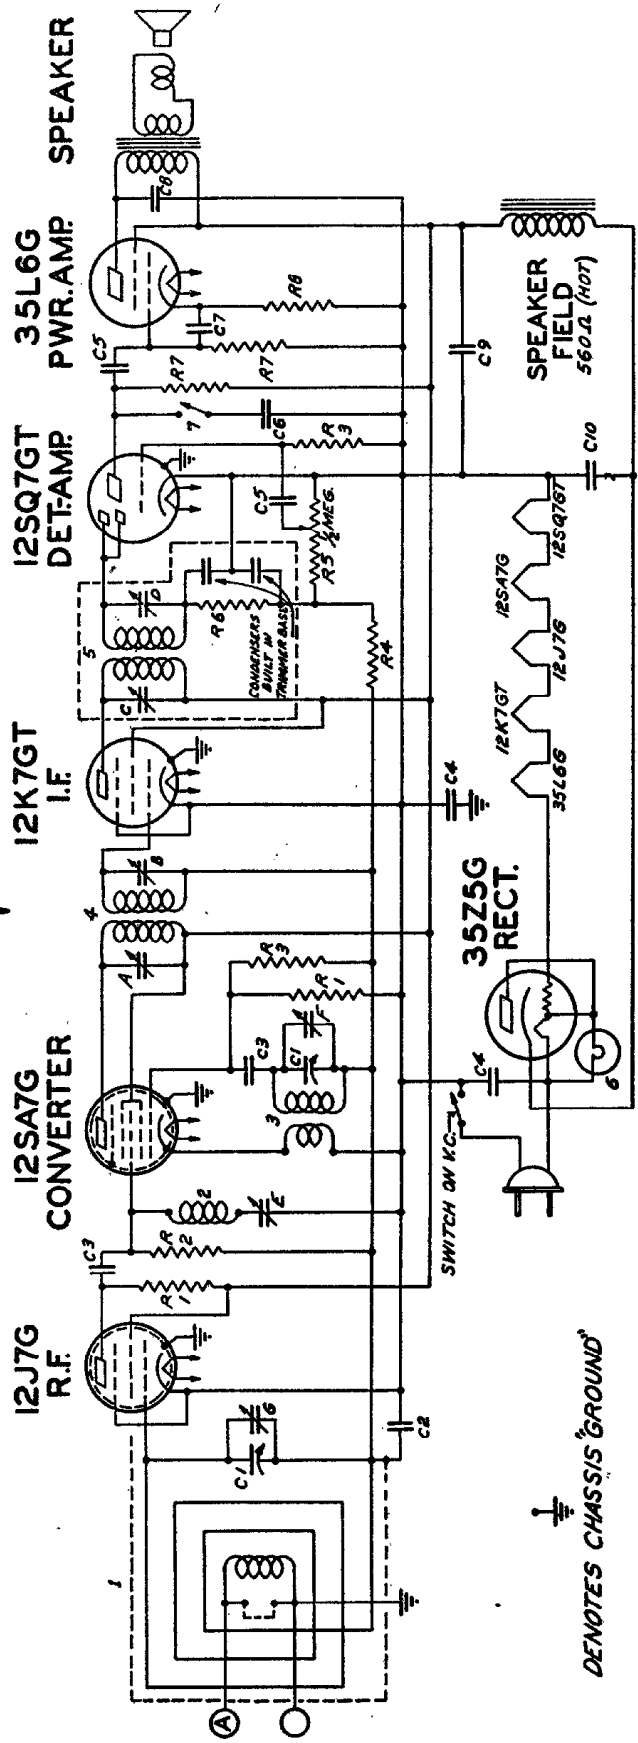

⊥ DENOTES CHASSIS GROUND

All voltages measured with a 20,000 ohm per volt meter from chassis to socket contact indicated.

All voltages are positive D.C. unless marked otherwise.

Volume control full on.


Line voltage 117 A.C.

Power consumption 25.5 watts.

Power output 1. watt.

Tuning Ranges 540 Kc. to 1600 Kc.


PART NO.	DESCRIPTION	PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
C1	22-184 TWO-GANG VARIABLE	R2	63-591 22 M OHM	4	95-760 127 I.F. TRANS.
C2	22-229 .05 MFD.	R3	63-976 15 MEGOHM	5	95-790 227 I.F. TRANS.
C3	22-162 .0001 MFD.	R4	63-600 2.2 MEGOHM	6	100-67 PILOT LIGHT 6.3V. .15A.
C4	22-107 .05 MFD.	R5	63-130 VOLUME CONTROL	7	85-270 TONE CONTROL SWITCH
C5	22-243 .01 MFD.	R6	63-713 47 M OHM	A	127 I.F. TRANS. PRI.
C6	22-492 .002 MFD.	R7	63-597 470 M OHM	B	127 I.F. TRANS. SEC.
C7	22-854 .005 MFD.	R8	63-686 100 OHM WIRE WOUND	C	229 I.F. TRANS. PRI.
C8	22-1044 .03 MFD.	R9	63-597 470 M OHM	D	229 I.F. TRANS. SEC.
C9	22-1014 20 MFD. ELECTROLYTIC	1	59465 WAVEMAGNET ASSEMBLY	E	WAVE TRAP OSC.(N.GANG)
C10	22-1014 20 MFD. ELECTROLYTIC	2	58926 WAVE TRAP COIL ASSEMBLY	F	BROADCAST ANT.(ON GANG)
R1	63-589 10M OHM	3	59437 125C. COIL ASSEMBLY	G	

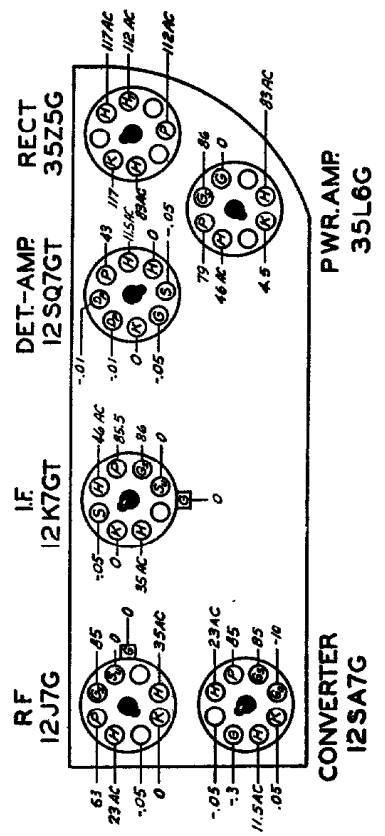

Circuit Diagram
Model 6D516
Chassis No. 6A24

I.F. FREQUENCY 455 KC.
6 TUBE SUPERHETERODYNE.
CHASSIS N96A24 AC.-DC.
ZENITH RADIO CORPORATION
CHICAGO, ILL.


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

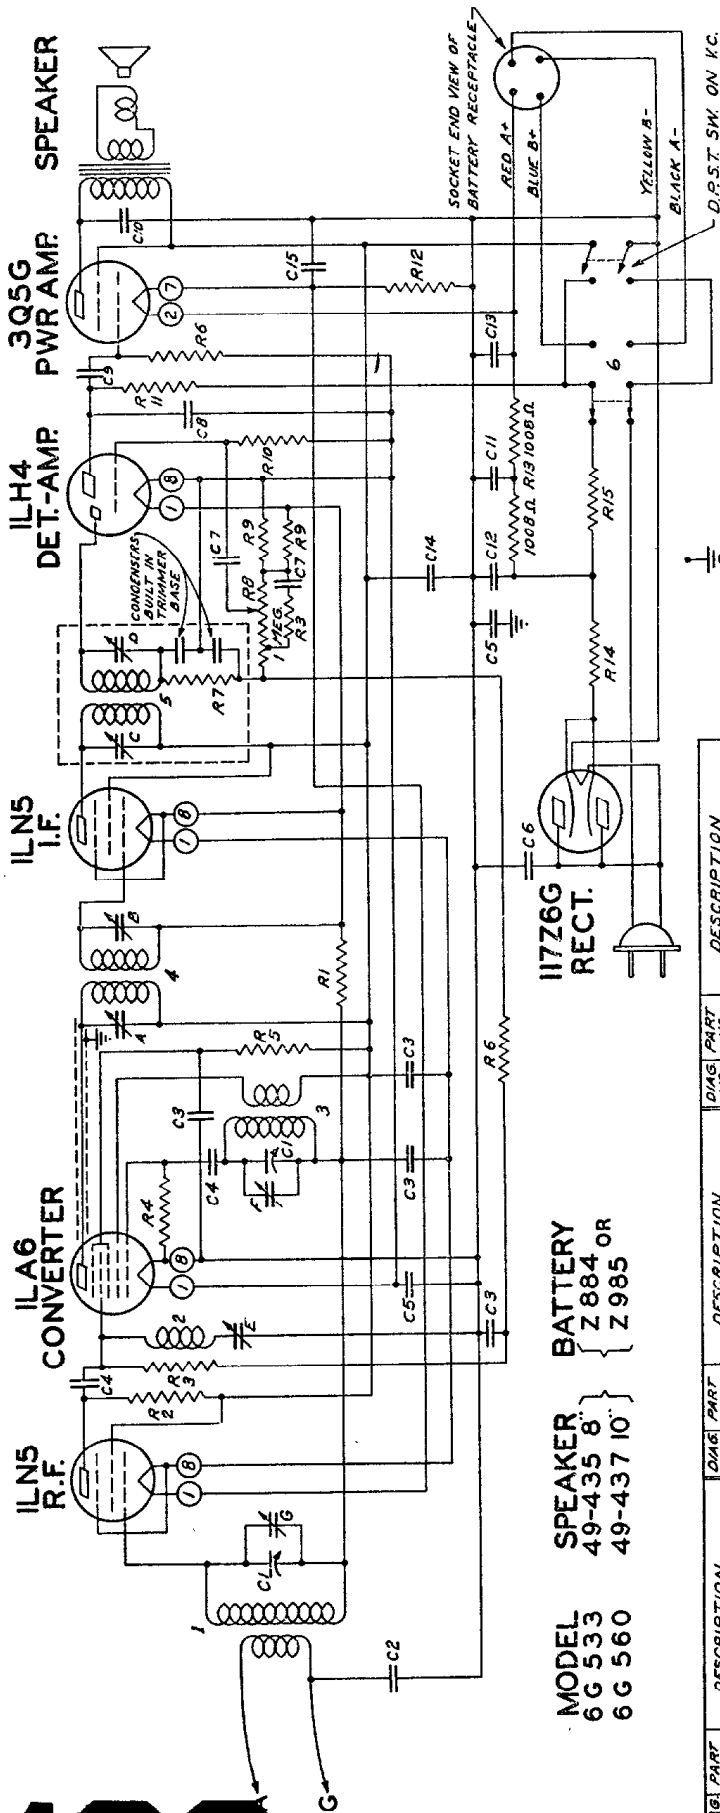

MODEL 6G 533
6 G 560

SPEAKER 49-435 8"
BATTERY Z884 OR Z985

DIAG. NO.	PART NO.	DESCRIPTION	QTY.	PART NO.	DESCRIPTION	QTY.	PART NO.	DESCRIPTION
C1	22-1181	TWO GANG VARIABLE	1	63-325	150M OHM	1	20-227	ANTENNA COIL
C2	22-1183	.01 MFD.	1	63-590	15M OHM	1	59326	WAVE TRAP COIL ASSEMBLY
C3	22-829	.05 MFD.	1	63-595	100M OHM	1	53446	OSCILLATOR COIL ASSEMBLY
C4	22-162	100 MMFD.	1	63-654	100M OHM	1	95-792	1ST I.F. TRANSFORMER
C5	22-827	.1 MFD.	1	63-592	33M OHM	1	95-793	2ND I.F. TRANSFORMER
C6	22-1017	.05 MFD.	1	63-600	22 MEGOHM	1	85-171	CHANGEOVER SWITCH
C7	22-492	.002 MFD.	1	63-713	47M OHM	1		
C8	22-470	.00015 MFD.	1	63-1178	VOLUME CONTROL	1		
C9	22-196	.01 MFD.	1	63-555	2200 OHM	1		
C10	22-448	.004 MFD.	1	63-976	15 MEGOHM	1		
C11	22-1026	20 MFD. ELECTROLYTIC	1	63-271	1 MEGOHM	1		
C12	20 MFD. ELECTROLYTIC	1	63-1097	870 OHM WIREWOUND	1			
C13	20 MFD. ELECTROLYTIC	1	63-1192	2-SECTION CANGOHM	1			
C14	22-1159	40 MFD. ELECTROLYTIC	1	63-1096	140 OHM WIREWOUND	1		
C15		40 MFD. ELECTROLYTIC	1	63-1156	1800 OHM	1		

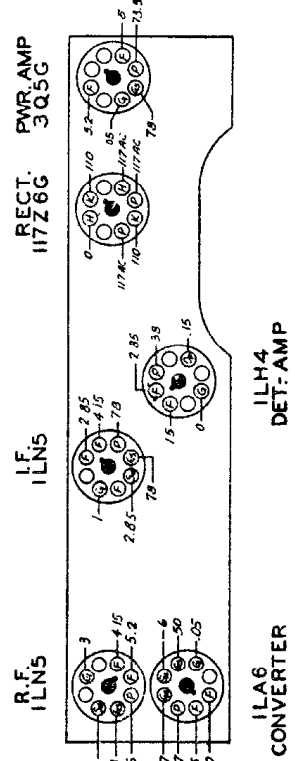


I.F. FREQUENCY 455 KC.
6 TUBE SUPERHETERODYNE
CHASSIS NO 6A25
110 VOLT AC.-D.C.-BATTERY PACK
ZENITH RADIO CORPORATION
CHICAGO, ILL.

Model 6G533 - 6G560
Chassis No. 6A25

All voltages measured with a 20,000 ohm per volt meter from chassis to socket contact indicated.
All voltages are positive D.C. unless marked otherwise.
Volume control full on.
Line voltage 117 A.C.
Power consumption 20 watts.
Power output .360 watts.
Tuning Ranges 540 Kc. to 1620 Kc.

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

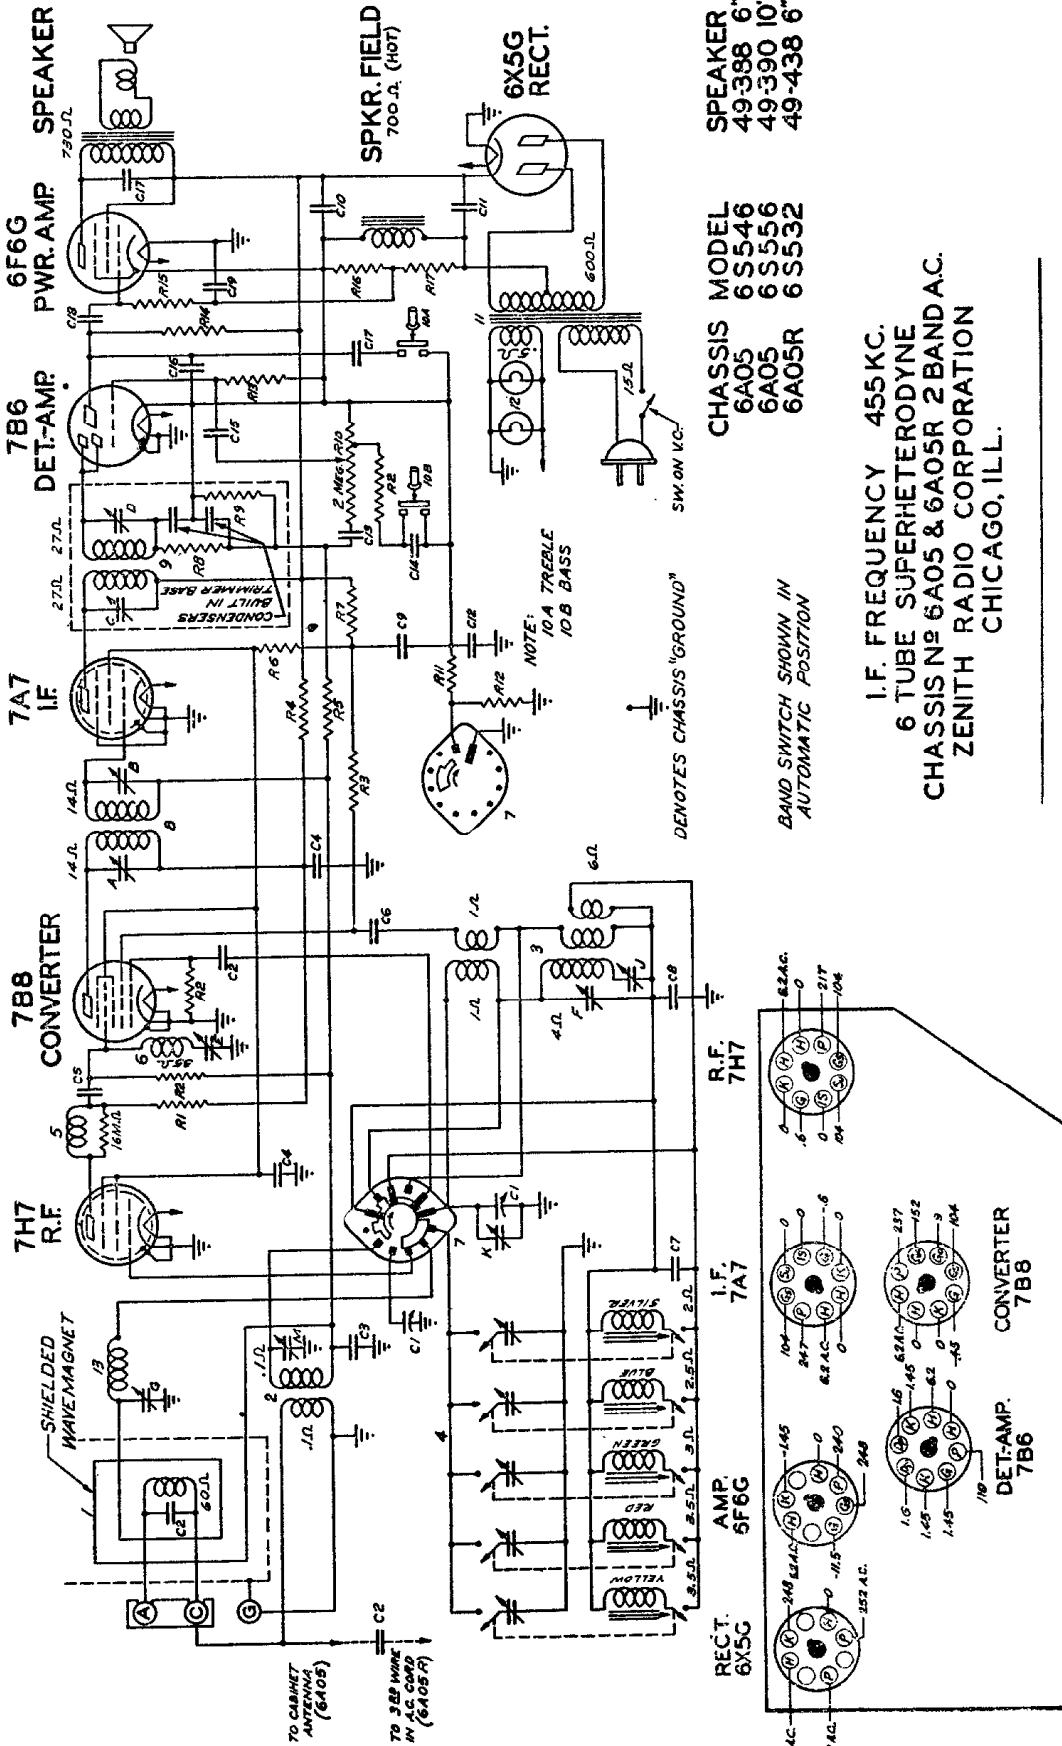

RECT. 6X5G
AMP. 5F6G
I.F. 7A7
R.F. 7H7
CONVERTER 7B8
DET.-AMP. 7B6
PWR. AMP. 6F6G
SPEAKER 49-388 6"
49-390 10"
49-438 6"

I.F. FREQUENCY 455 KC.
6 TUBE SUPERHETERODYNE
CHASSIS NO 6A05 & 6A05R 2 BAND A.C.
ZENITH RADIO CORPORATION
CHICAGO, ILL.

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C 1	22-1044	TWO GANG VARIABLE	R 15	63-597	470M OHM	13	584-74	LOOP LOADING COIL
C 2	22-299	50 MFD.	R 16	63-654	180 M OHM	A		1ST I.F. TRANS. PRI. SEC.
C 3	22-825	95 MFD.	R 17	63-656	270 M OHM	B		2ND I.F. PRI. SEC.
C 4	22-762	05 MFD.				C		2ND I.F. SEC.
C 5	22-182	0001 MFD.	1	S8507	WAVE MAGNET ASSEMBLY	D		22-1015 WAVE TRAP
C 6	22-966	COMPENSATING COND.	2	S8508	OSCILLATOR COIL ASSEMBLY	E		22-1042 BROADCAST OSCILLATOR
C 7	22-1022	005 MFD.	3	S8509	AUTOMATIC TUNING UNIT	F		22-1023 BROADCAST ANTENNA
C 8	22-1084	5 MFD. ELECTROLYTIC	4	S9359	R.F. CHOKE & RES. ASSEMBLY	G		22-1023 SHORT WAVE ANTENNA
C 9	22-1036	1 MFD.	5	S6326	WAVE TRAP ASSEMBLY	H		22-1044 SHORT WAVE ANTENNA
C 10	22-1036	1 MFD.	6	S6326	WAVE TRAP ASSEMBLY	I		
C 11	22-825	95 MFD.	7	S6326	WAVE TRAP ASSEMBLY	J		
C 12	22-182	0001 MFD.	8	S6326	WAVE TRAP ASSEMBLY	K		
C 13	22-225	002 MFD.	9	S6326	WAVE TRAP ASSEMBLY	L		
C 14	22-225	002 MFD.	10	S6326	WAVE TRAP ASSEMBLY	M		
C 15	22-492	0005 MFD.						
C 16	22-492	0005 MFD.						
C 17	22-448	0004 MFD.						
C 18	22-930	02 MFD.						
R 1	63-637	4700 OHM						
R 2	63-593	47M OHM						
R 3	63-750	10M OHM						
R 4	63-593	1000 OHM						
R 5	63-599	1.5 MEGOHM						
R 6	63-102	15M OHM						
R 7	63-101	800 OHM						
R 8	63-719	47M OHM						
R 9	63-102	15M OHM						
R 10	63-123	VOLUME CONTROL						
R 11	63-059	42 OHM WIRE WOUND						
R 12	63-624	68 OHM						
R 13	63-106	35 MEGOHM						
R 14	63-236	ELECT. OHM						

Circuit Diagram
Model 6S532
Chassis No. 6A05R


MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Circuit Diagram Model 7S598 Chassis No. 7A11

I.F. FREQUENCY 455 KC.
7 TUBE SUPERHETERODYNE
CHASSIS NO. 7A11-3 BAND A.C. - PHONO
ZENITH RADIO CORPORATION
CHICAGO, ILL.

Q'AG No.	PART No.	DESCRIPTION	Q'AS No.	PART No.	DESCRIPTION	Q'AS No.	PART No.	DESCRIPTION	Q'AG No.	PART No.	DESCRIPTION
C1	22-930	TUNO BANDS VARIABLE	R1	63-594	33 OHM	R2	63-174	450 OHM WIREWOUND	A	1	1.5 I.F. TRANS. PRI.
C2	22-929	.05 MFD. COMPENSATING COND.	R2	63-260	100M OHM				B	2	1.5 I.F. TRANS. SEC.
C3	22-968	DUAL PADDER	R3	63-587	4700 OHM				C	3	1.5 I.F. TRANS. SEC.
C4	22-1037	.01 MFD.	R4	63-593	47M OHM				D	4	1.5 I.F. TRANS. SEC.
C5	22-928	.00025 MFD.	R5	63-621	39 OHM				E	5	BROADCAST OSC. (NOTE 1)
C6	22-182	.00025 MFD.	R6	63-589	10M OHM				F	6	BROADCAST ANT. (NOTE 2)
C7	22-269	.50 MMFD.	R7	63-296	220M OHM				G	7	AUTOMATIC TUNING ASSEM.
C8	22-925	.1 MFD.	R8	63-599	1.5 MEGOHM				H	8	BAND SELECTOR SWITCH
C9	22-327	.02 MFD.	R9	63-605	1000 OHM				I	9	R.F. CHOKE & RES. ASSEM.
C10	22-954	.00035 MFD.	R10	63-705	50M OHM				J	10	WAVE TRAP COIL ASSEM.
C11	22-954	.00035 MFD.	R11	63-705	50M OHM				K	11	1.5 I.F. TRANSFORMER
C12	22-229	.0001 MFD.	R12	63-719	470M OHM				L	12	1.5 I.F. TRANSFORMER
C13	22-448	.0004 MFD.	R13	63-102	470M OHM				M	13	1.5 I.F. TRANSFORMER
C14	22-492	.0002 MFD.	R14	63-594	68M OHM						
C15	22-454	.0005 MFD.	R15	63-976	15 MEGOHM						
C16	22-196	.01 MFD.	R16	63-571	330M OHM						
C17	22-827	.1 MFD.	R17	63-652	120M OHM						
C18	22-187	.20 MFD. ELECTROLYTIC	R18	63-975	82 OHM						
C19	22-187	.20 MFD. ELECTROLYTIC	R19	63-726	82 OHM						
C20	22-187	.20 MFD. ELECTROLYTIC	R20	63-726	82 OHM						
C21	22-104	.0005 MFD.	R21	63-523	470M OHM						

2-7-41 C20 WAS 20MFD - CEE OMITTED

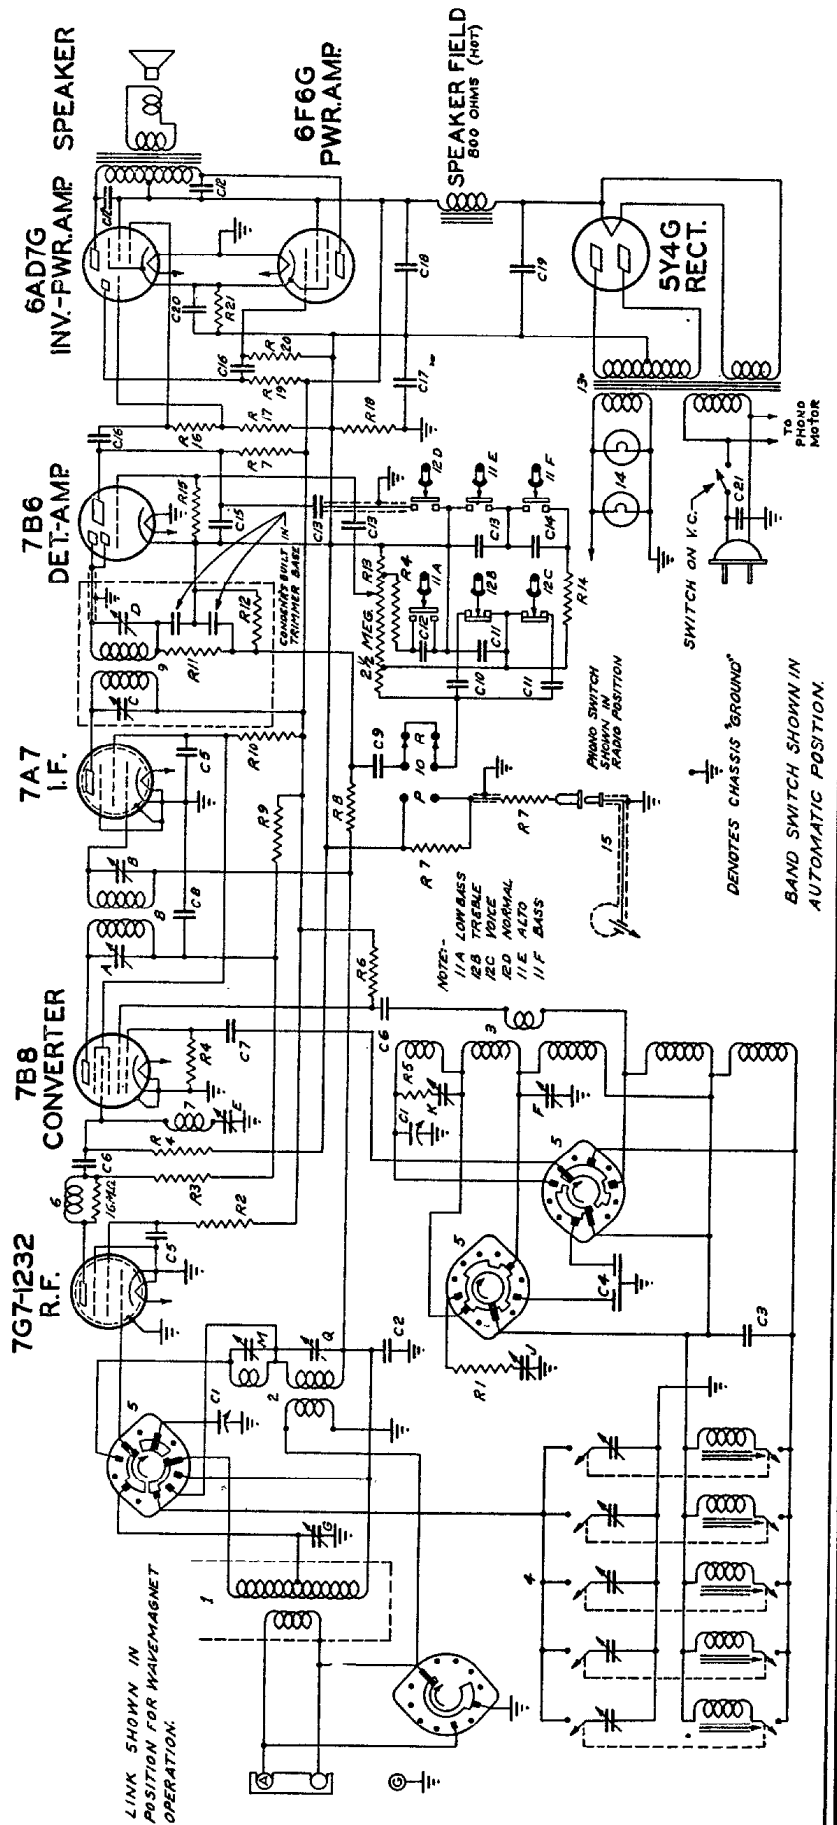

MANUAL OF 1941 MOST POPULAR SERVICE DIAGRAMS

Models 10H571R, 10H573

Chassis No. 10A3R

All voltages measured with a 20,000 ohm per volt meter from chassis to socket contact indicated.

All voltages are positive D.C. unless marked otherwise.

Volume control full on.

Line voltage 117 A.C.

Power consumption 90 watts.

Power output 6.5 watts.


Tuning Ranges

540 Kc. to 1600 Kc.

1.5 Mc. to 5.2 Mc.

5.7 Mc. to 18.5 Mc.

41.5 Mc. to 50.5 Mc.

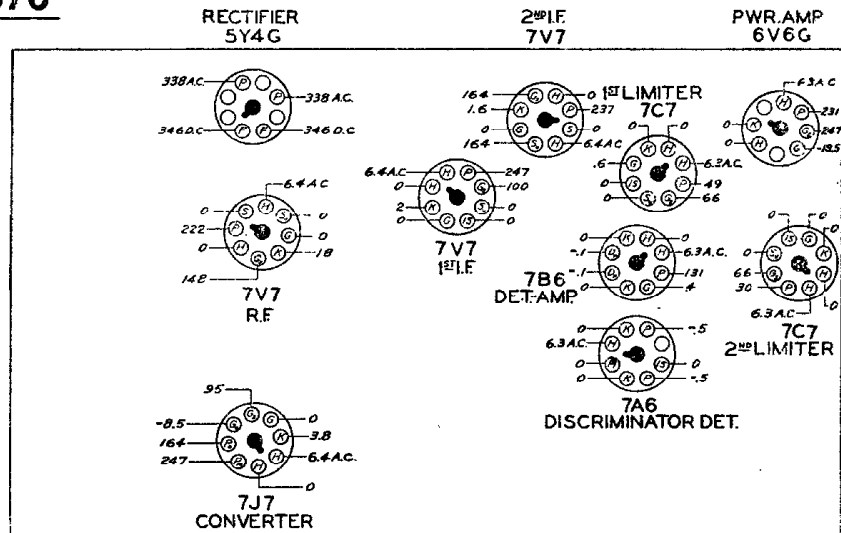


ALIGNMENT PROCEDURE

Opr.	Connect Test Oscillator to	Dummy Antenna	Input Signal Frequency	Band	Set Dial At	Trimmers	Purpose
1	Converter Grid	.5 mfd.	455 Kc.	BC	600 Kc.	A, B, C, D,	Align I. F.
2	R. F. Grid	"	455 Kc.	BC	600 Kc.	E	Adj. Wave Trap for Minimum
3	Antenna Z and G	400 ohms	18 Mc.	SW	18 Mc.	K	Set Oscillator to Scale
4	"	"	18 Mc.	SW	16 Mc.	M	Align Antenna
5	"	"	5.0 Mc.	Med.	5.0 Mc.	N	Set Oscillator to Scale
6	"	"	4.5 Mc.	Med.	4.5 Mc.	Q	Align Antenna
7	1 Turn Loop Made with Generator Leads to 10" dia.	—	1400 Kc.	BC	1400 Kc.	F	Set Oscillator to Scale
8	See Note!	—	1400 Kc.	BC	1400 Kc.	G	Align Antenna
9	See Note!	—	600 Kc.	BC	600 Kc.	J	Rock Gang to Track BC Padder

F. M. ALIGNMENT — See Pages 126-127
 X = FM output meter across full discriminator load.
 Y = FM output meter across half discriminator load.

10	7V7 2nd I.F. Grid	.5 mfd.	8.6 Mc.	Manual FM	8.6 Mc.	A 4	Align for Maximum deflection—Y
11	"	"	8.6 Mc.	"	8.6 Mc.	B 4	Align for Zero deflection—X
12	"	"	8.6 Mc.	"	8.6 Mc.	A 3 - B 3	Align for Maximum deflection—Y
13	7V7 1st I.F. Grid	"	8.6 Mc.	"	8.6 Mc.	A 2 - B 2	" — Y
14	Converter Grid	"	8.6 Mc.	"	8.6 Mc.	A 1 - B 1	" — Y
15	FM Ant. Terminals	100 ohms	46. Mc.	"	46. Mc.	Adj. Cam on Gang Shaft to Scale Osc.	Align for Zero deflection—X
16	"	"	42.5 Mc.	"	42.5 Mc.	P1	Align for Maximum deflection—Y
17	"	"	49. Mc.	"	49. Mc.	P 2	" — Y
18	"	"	46. Mc.	"	46. Mc.	Z	" — Y

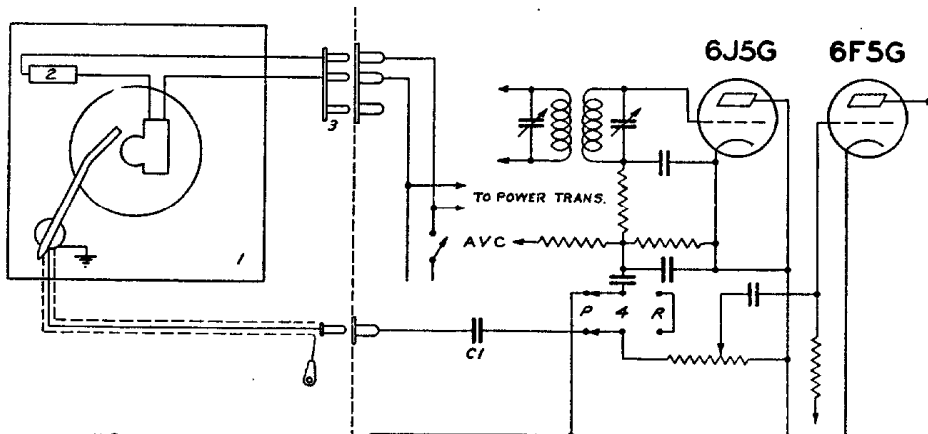

DIAG. NO.	PART NO.	DESCRIPTION
C 1	22-1189	.00075 MFD. 630 V.
1	169-63 169-64	WEBSTER AUTOMATIC RECORD PLAYER
2	85-191	A.C. SWITCH
3	58-85	A.C. PLUG
4	85-228	PHONO-RADIO SW.

PHONO CIRCUIT DATA
 MODEL SPEAKER
 10S599 49-442-14"
 CHASSIS No 10A2R

Same as 10A2R with audio compensation revised to match new pickup.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS