

*Most - Often - Needed*

1942

RADIO  
DIAGRAMS  
*and Servicing Information*

PREPARED UNDER THE DIRECTION OF

M. N. BEITMAN

B.S. in Mathematics, Illinois Institute of Technology  
Radio Instructor, Chicago High Schools  
Formerly, Engineer, U. S. Signal Corps  
Associate, Institute of Radio Engineers  
Holder of Radiotelephone First Class License  
Author of Many Radio Books and Articles

SUPREME PUBLICATIONS

CHICAGO

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## INDEX

|                      |       |                      |       |                      |    |
|----------------------|-------|----------------------|-------|----------------------|----|
| <b>Allied Radio</b>  |       | <b>Crosley Corp.</b> |       | <b>Emerson Radio</b> |    |
| D-100                | 8     | 52-TQ                | 33    | EC-242               | 39 |
| D-101                | 8     | 53-TF                | 26    | EC-296               | 39 |
| D-109                | 8     | 55                   | 21    | EC-301               | 39 |
| D-170                | 9     | 62-PA                | 22    | EC-314               | 39 |
| B-17109              | 8     | 62-PB                | 22    | EC-315               | 39 |
| B-17188              | 7     | 62-TA                | 19    | EC-327               | 39 |
|                      |       | 62-TC                | 19    | EC-336               | 39 |
| <b>Ansley Radio</b>  |       | 62-TD                | 19    | EC-347               | 39 |
| 51                   | 10    | 67                   | 20    | EC-353               | 39 |
|                      |       | 68                   | 22    | EC-366               | 39 |
| <b>Arvin</b>         |       | 70                   | 23-24 | EC-376               | 39 |
| see Noblitt-Sp.      |       | 72                   | 25    | FH-413               | 40 |
|                      |       | 72-CA                | 31-32 | FL-415               | 41 |
|                      |       | 74                   | 27    | FL-416               | 41 |
| <b>Belmont Radio</b> |       | 75                   | 28-29 | FL-417               | 41 |
| 4B16                 | 11    | 77                   | 30    | FL-418               | 41 |
| 11A25                | 12    | 80                   | 31-32 | FL-419               | 41 |
| 579                  | 13    | 82-CP                | 28-29 | FU-424               | 42 |
|                      |       | 82-CQ                | 28-29 | BC-425               | 39 |
| <b>Chevrolet</b>     |       | 83                   | 33    | FU-427               | 42 |
| 985792               | 14    |                      |       | FU-428               | 42 |
| 985793               | 15-16 | <b>Detrola Radio</b> |       | FY-434               | 44 |
| 985794               | 17    | N-100                | 35    | GH-437               | 45 |
|                      |       | N-200                | 35    | GA-439               | 46 |
| <b>Continental</b>   |       | 389                  | 36    | FH-440               | 40 |
| B6                   | 18    | 390                  | 37    | GA-441               | 46 |
| XB6                  | 18    | 417                  | 34    | GH-447               | 45 |
|                      |       | 419                  | 34    | GC-448               | 43 |
| <b>Crosley Corp.</b> |       | 427                  | 34    |                      |    |
| 02CA                 | 21    | 428                  | 34    | <b>Espey Radio</b>   |    |
| 02CB                 | 21    | 441                  | 36    | 2162                 | 47 |
| 02CP                 | 23-24 | 3782                 | 36    |                      |    |
| 02CQ                 | 23-24 | Changer              | 35    | <b>Fada Radio</b>    |    |
| 37                   | 19    |                      |       | C-34                 | 48 |
| 52-PA                | 20    | <b>DeWald Radio</b>  |       | P-41                 | 49 |
| 52-TD                | 30    | 564                  | 38    | WP-101               | 50 |
| 52-TE                | 30    | 666                  | 38    | WP-102               | 50 |
| 52-TF                | 30    |                      |       | AP-104               | 50 |
| 52-TG                | 27    |                      |       | AP-105               | 50 |
| 52-TG-U              | 27    |                      |       | 256                  | 51 |
| 52-TP                | 25    |                      |       |                      |    |

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## Farnsworth

|       |    |
|-------|----|
| CC-90 | 52 |
| CK-91 | 52 |
| CK-92 | 52 |
| CK-93 | 52 |

## Galvin Mfg. see Motorola

## Gamble-Skogmo

|        |    |
|--------|----|
| 579    | 12 |
| 1682-A | 53 |

## General Electric

|          |       |
|----------|-------|
| LF-115   | 57    |
| LF-116   | 57    |
| LB-412   | 54    |
| L-500    | 55    |
| L-510    | 55    |
| L-550    | 55    |
| L-560    | 55    |
| L-660    | 56    |
| LFC-1128 | 57-58 |
| LFC-1228 | 57-58 |

## Howard Radio

|      |    |
|------|----|
| 718X | 59 |
| 802  | 60 |
| 808  | 61 |
| 868  | 62 |

## Majestic Radio

|          |    |
|----------|----|
| 4B22     | 63 |
| 5C36     | 64 |
| 5T10     | 63 |
| 5T10W    | 63 |
| 6C35     | 64 |
| 6P1, 6P2 | 63 |
| 6T23     | 63 |
| 7C40     | 65 |
| 7K60     | 65 |
| 7T20     | 63 |
| 4501X    | 63 |

## Midwest Radio

|      |    |
|------|----|
| 82   | 66 |
| 112  | 67 |
| 162R | 68 |

## Montgomery-Ward

|           |    |
|-----------|----|
| 14BR-521A | 70 |
| 14BR-522A | 70 |
| 14BR-684A | 72 |
| 14BR-734A | 73 |
| 14BR-735A | 73 |
| 14BR-912A | 75 |
| 14WG-518B | 69 |
| 14WG-519B | 69 |
| 14WG-624A | 71 |
| 14WG-625A | 71 |
| 14WG-628A | 71 |
| 14WG-808M | 74 |
| 14WG-808W | 74 |

## Motorola

|       |    |
|-------|----|
| 51X11 | 76 |
| 51X12 | 76 |
| 51X15 | 76 |
| 51X16 | 76 |
| 81F21 | 78 |
| 501   | 77 |
| 551   | 79 |
| 701   | 81 |

## Noblitt-Sparks

|       |    |
|-------|----|
| RE-91 | 80 |
| RE-92 | 80 |
| RE-98 | 82 |
| RE-99 | 82 |

## Oldsmobile

|        |    |
|--------|----|
| 982215 | 83 |
| 982282 | 83 |

## Packard Bell

|    |    |
|----|----|
| 51 | 84 |
| 67 | 84 |

## Philco Radio

|          |         |
|----------|---------|
| PT-2     | 85      |
| PT-4     | 85      |
| PT-7     | 85      |
| PT-10    | 88      |
| PT-87    | 85      |
| PT-88    | 85      |
| 42-PT-2  | 85      |
| 42-PT-4  | 85      |
| 42-PT-7  | 85      |
| 42-PT-10 | 88      |
| 42-PT-87 | 85      |
| 42-PT-88 | 85      |
| PT-91    | 86      |
| PT-92    | 86      |
| PT-93    | 86      |
| PT-94    | 86      |
| PT-95    | 86      |
| 42-121   | 87      |
| 42-122   | 87      |
| 42-123   | 87      |
| 42-321   | 88      |
| 42-322   | 89      |
| 42-350   | 93      |
| 42-358   | 91      |
| 42-706   | 90      |
| 42-716   | 92      |
| 42-717   | 90      |
| 42-718   | 92      |
| 42-724   | 94      |
| 42-730   | 95      |
| 42-761   | 96      |
| 42-788   | 98      |
| 42-842   | 97      |
| 42-843   | 97      |
| 42-844   | 97      |
| 42-853   | 97      |
| 42-854   | 97      |
| 42-1001  | 99      |
| 42-1002  | 100     |
| 42-1004  | 101     |
| 42-1012  | 102     |
| 42-1013  | 102     |
| 42-1016  | 103-104 |

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

|  |  |   |
|--|--|---|
| <p><b>Pilot Radio</b></p> <p>TP-32           105</p> <p>173               105</p> <p><b>RCA Mfg. Co.</b></p> <p>P-5               106</p> <p>6X2               107</p> <p>25BP             109</p> <p>25X               108</p> <p>26BP             110</p> <p>26X-1            111</p> <p>26X-3            111</p> <p>28T               112</p> <p>28X               113</p> <p>29K               114</p> <p>29K-2            114</p> <p>34X               115</p> <p>B-50              116</p> <p>55X               118</p> <p>R-56              118</p> <p>V-105            120</p> <p>V-215            121-122</p> <p>V-219            121-122</p> <p>V-221            121-122</p> <p>V-225            121-122</p> <p>500               119</p> <p>501               119</p> <p>515               117</p> <p>516               123</p> <p>517               123</p> <p>526               124</p> <p>527               124</p> <p>R-560-P          126</p> <p>R-566-P          125</p> <p><b>Sears, Roebuck</b></p> <p>7020             127</p> <p>7022             127</p> <p>7057             128</p> <p>7070             131</p> <p>7083             130</p> <p>7094             129</p> <p>101.667          129</p> <p>101.682          131</p> <p>101.686          130</p> <p>132.814          127</p> <p>141.418          128</p> | <p><b>Silvertone</b></p> <p>see Sears</p> <p><b>Sonora Radio</b></p> <p>LKS               133</p> <p>LMS               132</p> <p>LP                 133</p> <p><b>Sparton</b></p> <p>10-21            136</p> <p>531-X            134</p> <p>532-X            134</p> <p>652-X            135</p> <p>5321             137</p> <p>5521             137</p> <p><b>Spiegel, Inc.</b></p> <p>TA-616           138</p> <p>T-618            138</p> <p>822               139</p> <p>922               139</p> <p>EP-2450          138</p> <p>DP-7002-3-4     138</p> <p>DP-7014          139</p> <p>DP-7450          138</p> <p><b>Stewart-Warner</b></p> <p>205A             140</p> <p>205B             140</p> <p>205F             141</p> <p>205FA            141</p> <p>205G             142</p> <p>206B             143</p> <p>206C             143</p> <p>206D             144</p> <p>206E             144</p> <p>206G             145</p> <p>207D             146</p> <p>208B             147-148</p> <p>208C             147-148</p> | <p><b>Stromberg-Carlson</b></p> <p>600               149</p> <p>900               149</p> <p>920               150</p> <p>925               151-152</p> <p>955               153</p> <p>1000              149</p> <p>1020              150</p> <p>1025              151-152</p> <p>1055              153</p> <p><b>Truetone</b></p> <p>see Western</p> <p><b>United Motors</b></p> <p>R-1401            154</p> <p>R-1402            154</p> <p><b>Walgreen Drug</b></p> <p>T-501             155</p> <p>562               155</p> <p><b>Wells-Gardner</b></p> <p>6A65              156</p> <p>8A51              157</p> <p><b>Western Auto</b></p> <p>6A50-2            159</p> <p>6C18-2            158</p> <p>D-1145            159</p> <p>D-1176            159</p> <p>D-1294            160</p> <p>D-4240            158</p> <p>D-4255            160</p> <p><b>Westinghouse</b></p> <p>WR-12K1          163</p> <p>WR-12X1          163</p> <p>WR-12X2          163</p> <p>WR-12X3          162</p> <p>WR-12X5          162</p> <p>WR-12X6          162</p> <p>WR-12X16         161</p> <p>WR-42X3          164</p> <p>WR-42X7          164</p> |
|--|--|---|

## MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

|                         |     |                     |     |              |            |
|-------------------------|-----|---------------------|-----|--------------|------------|
| <b>Westinghouse</b>     |     | <b>Zenith Radio</b> |     | <b>6G660</b> | <b>183</b> |
| WR-62K1                 | 165 | 5B07                | 176 | 6R631        | 178        |
| WR-62K2                 | 165 | 5B13                | 177 | 6R683        | 181        |
| <b>Wilcox-Gay Corp.</b> |     | 5D611               | 172 | 6R684        | 181        |
| A-104                   | 166 | 5D627               | 172 | 6R687R       | 181        |
| A-105                   | 166 | 5G603               | 176 | 6R688        | 181        |
| A-107                   | 167 | 5G617               | 175 | 6S632        | 182        |
| <b>Wurlitzer</b>        |     | 5G636               | 175 | 6S646        | 182        |
| 501                     | 168 | 5K637               | 174 | 6S656        | 182        |
| 502                     | 168 | 5R680               | 173 | 7B02         | 184        |
| <b>Zenith Radio</b>     |     | 5R686               | 177 | 7B04         | 190-191    |
| 4B02                    | 169 | 6B02                | 178 | 7G605        | 190-191    |
| 4B03                    | 169 | 6B04                | 179 | 7S681        | 184        |
| 4B04                    | 170 | 6B05                | 180 | 7S682        | 184        |
| 4B05                    | 171 | 6B06                | 181 | 7S685        | 184        |
| 4B639                   | 170 | 6B08                | 182 | 8B01         | 185        |
| 4K616                   | 169 | 6B09                | 183 | 8S647        | 185        |
| 4K635                   | 169 | 6B14                | 189 | 8S661        | 185        |
| 4K640                   | 171 | 6D612               | 179 | 10B1         | 186        |
| 4K658                   | 169 | 6D615               | 180 | 10B2         | 186        |
| 5B02                    | 172 | 6D620               | 189 | 10S669       | 186        |
| 5B03                    | 173 | 6D622               | 179 | 10S690       | 186        |
| 5B04                    | 174 | 6D623               | 180 | 12A6         | 187        |
| 5B05                    | 175 | 6D628               | 179 | 12H678       | 187        |
| 5B06                    | 175 | 6D630               | 180 | 12H679       | 187        |
|                         |     | 6D644               | 189 | 14B1         | 192        |
|                         |     | 6D2620              | 189 | S-9001       | 188        |
|                         |     | 6G638               | 183 | S-9002       | 188        |

# SUPREME PUBLICATIONS

9 South Kedzie Avenue

CHICAGO, ILLINOIS

### Simplified Radio Servicing by COMPARISON Method



Repair radios in minutes instead of hours. Revolutionary different COMPARISON technique permits you to do expert work on all radio sets. Most repairs can be made without test equipment or with only a volt-ohmmeter. Many simple, point-to-point, cross-reference, circuit suggestions locate the faults instantly. Plan copyrighted. Covers every radio set—new and old models. This new servicing technique presented in handy manual form, size 8½x11 inches, 72 pages. Over 1,000 practical service hints. 26 large, trouble-shooting blueprints. Charts for circuit analysis. 114 tests using a 5c resistor. Developed by M. N. Beitman. New 1945 edition. Net Price **\$1.50**

# 6

### RADIO SERVICING COURSE-BOOK


Let this 22-lesson course help you fix and adjust any radio set. Easy-to-understand explanations; hundreds of simplified diagrams, pictures, practical hints. Quickly learn how to make needed tests, locate faults, complete the repair. Includes many lessons for beginners.

Learn new speed-tricks of radio fault finding, case histories of common troubles, servicing short cuts, extra profit ideas. Many large lessons on the use of regular test equipment, explanation of signal tracing, television to the minute, recording dope. With this information you will save enough time on a single radio job to pay the special \$2.50 price for the complete course of 22 money-making lessons. Many active servicemen used this reduced price radio training for brush-up and study of new service methods. Reprinted in 1945 with information on signal-tracing, television, visual alignment, P.A., photocells, etc. All about AVC, how to use an oscilloscope, what is feedback, resonance action, and every other fact you must know to be more expert in your work. Large size: 8½x11 inches, 224 pages and index. Price only **\$2.50**





# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

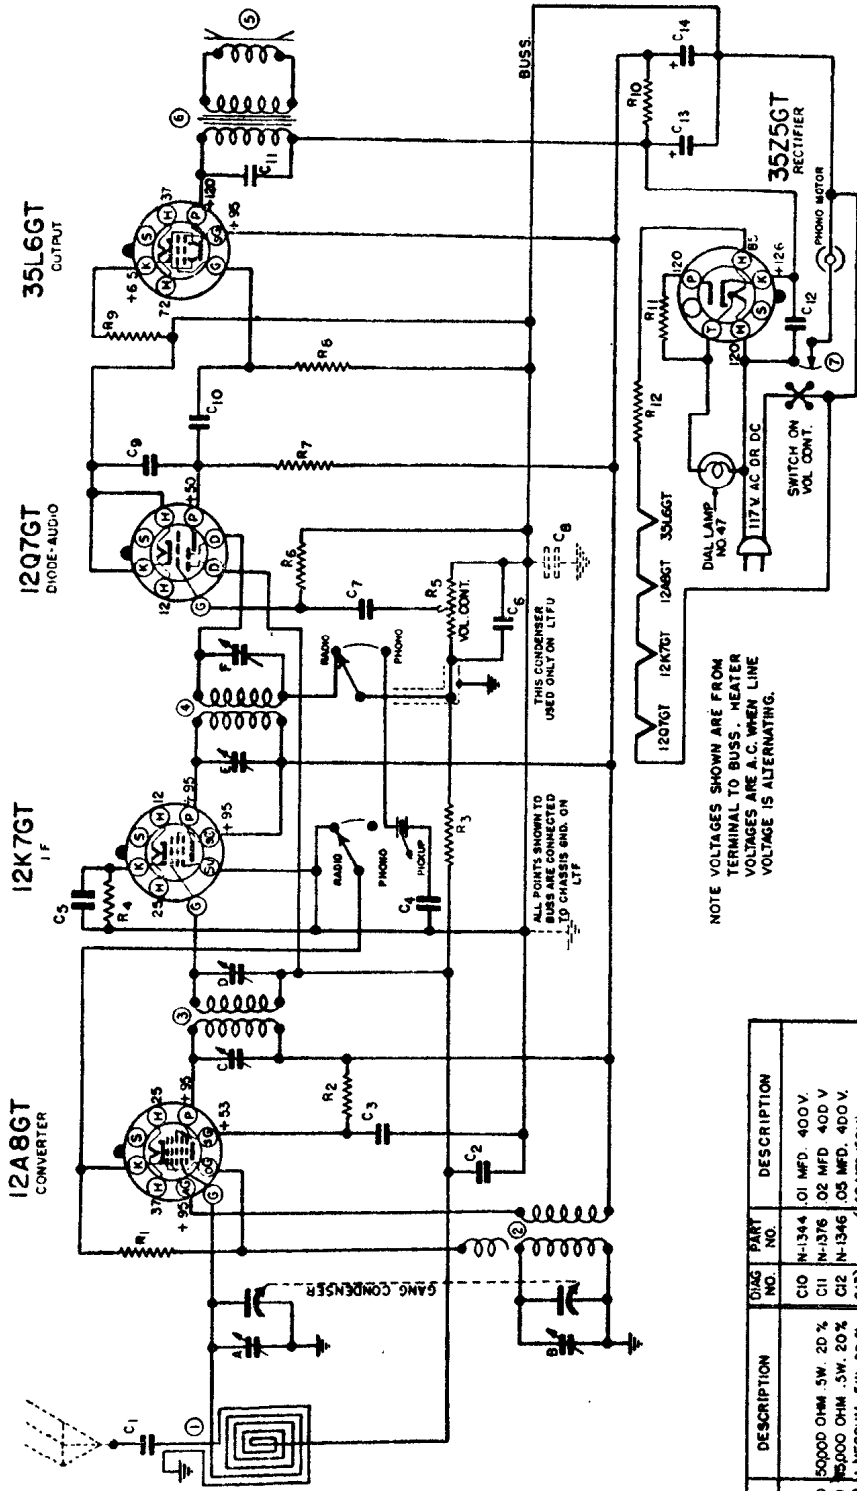


I.F. 456 KC.

**D-170**  
 5 TUBE AC-DC  
 SUPERHETERODYNE  
 SINGLE BAND  
 PHONO COMBINATION

**Allied Radio Corp.**  
 (Sonora Radio make)

NOTE VOLTAGES SHOWN ARE FROM  
 TERMINAL TO BUSS. HEATER  
 VOLTAGES ARE A.C. WHEN LINE  
 VOLTAGE IS ALTERNATING.

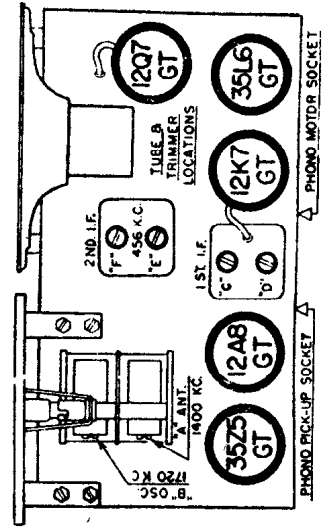

Allied Radio Corp.  
 Chicago, Ill.


| DIAG. NO. | PART NO. | DESCRIPTION          | QTS.   | PART NO.              | DESCRIPTION            |
|-----------|----------|----------------------|--------|-----------------------|------------------------|
| R1        | N-1260   | 5000 OHM .5W. 20%    | C10    | N-1344                | 01 MFD. 400V.          |
| R2        | N-1259   | 15000 OHM .5W. 20%   | C11    | N-1376                | .02 MFD. 400 V.        |
| R3        | N-1262   | 1 MEGOHM .5W. 20%    | C12    | N-1346                | .05 MFD. 400 V.        |
| R4        | N-2487   | 200 OHM .5W. 20%     | C13    | N-3114                | 40 MFD. 150V. ELECTRO. |
| R5        | N-3045   | 0.5 MEGOHM VOL. CON. | C14    | N-3114                | 2.5 MFD. 150 V.        |
| R6        | N-1263   | 10 MEGOHM .5W. 20%   | 1      | N-3041                | LOOP ANTENNA COIL      |
| R7        | N-1377   | 200,000 OHM .5W. 20% | 2      | N-1432                | OSCILLATOR COIL        |
| R8        | N-1264   | 500,000 OHM .5W. 20% | 3      | N-3043                | 1ST. I.F. TRANSFORMER  |
| R9        | N-1616   | 250 OHM .5W. 10%     | 4      | N-3044                | 2ND. I.F. TRANSFORMER  |
| R10       | N-1257   | 2,000 OHM .5W. 20%   | 5      | N-2624                | 5" P.M. SPEAKER        |
| R11       | N-1742   | 25 OHM .5W. 20%      | 6      | N-3556                | OUTPUT TRANSFORMER     |
| R12       | N-1618   | 80 OHM 2W. 10%       | 7      | N-4135                | PHONO MOTOR SWITCH     |
| C1        | N-1344   | 01 MFD. 400V.        | N-3046 | 2 GANG CONDENSER      |                        |
| C2        | N-1345   | .05 MFD. 200V.       | N-3550 | RADIO-PHONO SWITCH    |                        |
| C3        | N-1345   | .05 MFD. 200V.       | N-4186 | CRYSTAL PICK-UP       |                        |
| C4        | N-2642   | .09 MFD. 200V.       | N-3143 | PHONO MOTOR & TUNABLE |                        |
| C5        | N-1351   | .1 MFD. 200V.        |        |                       |                        |
| C6        | N-1374   | 0001 MFD. MICA       |        |                       |                        |
| C7        | N-1344   | 01 MFD. 400V.        |        |                       |                        |
| C8        | N-3080   | .22 MFD. 200V.       |        |                       |                        |
| C9        | N-1447   | 0005 MFD. 400V.      |        |                       |                        |







# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

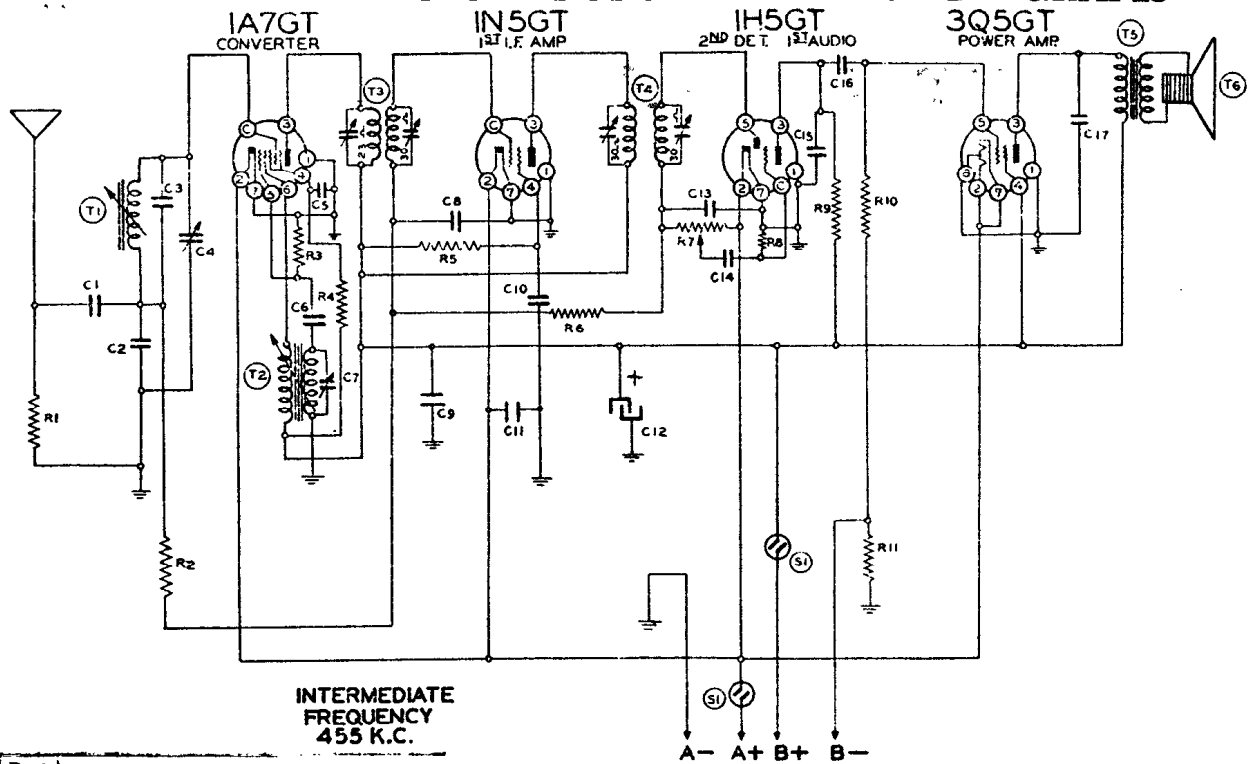

| Code No. | Part No. | Description |
|----------|----------|-------------|
|----------|----------|-------------|

## RESISTORS

|     |        |  |
|-----|--------|--|
| R1  | 13017  | 10M ohm— $\frac{1}{2}$ w.                            |
| R2  | 1304   | 3 megohm— $\frac{1}{2}$ w.                           |
| R3  | 1309   | 200M ohm— $\frac{1}{2}$ w.                           |
| R4  | 130194 | 35M ohm— $\frac{1}{2}$ w.                            |
| R5  | 13094  | 50M ohm— $\frac{1}{2}$ w.                            |
| R6  | 1304   | 3 megohm— $\frac{1}{2}$ w.                           |
| R7  | 101250 | 1 megohm—Volume control and switch— $\frac{1}{2}$ w. |
| R8  | 130257 | 5 megohm— $\frac{1}{2}$ w.                           |
| R9  | 13019  | 1 megohm— $\frac{1}{2}$ w.                           |
| R10 | 130146 | 2 megohm— $\frac{1}{2}$ w.                           |
| R11 | 13079  | 400 ohm— $\frac{1}{2}$ w.                            |

## CONDENSERS

|     |         |                         |
|-----|---------|-------------------------|
| C1  | 12936   | .0003 mica              |
| C2  | 100112  | .001 x 200 v.           |
| C3  | 129177  | .000045—Ceramic         |
| C4  | 124165  | Antenna trimmer         |
| C5  | 1009    | .05 x 200 v.—Condenser  |
| C6  | 12912   | .00025 mica             |
| C7  | 124165  | Oscillator trimmer      |
| C8  | 1009    | .05 x 200 v. Condenser  |
| C9  | 1006    | .25 x 200 v. Condenser  |
| C10 | 10020   | .1 x 200 v.             |
| C11 | 10017   | .5 x 120 v.             |
| C12 | 119117B | 10 mid. x 150 v. Lytic  |
| C13 | 1295    | .0001 mica              |
| C14 | 10012   | .003 x 600 v. Condenser |
| C15 | 1295    | .0001 mica              |
| C16 | 10026   | .02 x 400 v. Condenser  |
| C17 | 1007    | .005 x 600 v.           |



C4 and C7 are in same unit.

## PARTS

|    |         |                                      |
|----|---------|--------------------------------------|
| T1 | 1364    | Antenna Coil                         |
| T2 | 1364    | Oscillator Coil                      |
|    |         | Permeability tuning assem. Complete. |
| T3 | 108202  | Input I. F. Coil 455 Kc.             |
| T4 | 108153B | Output I. F. Coil 455 Kc.            |
| T5 | 10591B  | Output transformer                   |
| T6 | 114238  | 5" P.M. speaker                      |
| S1 |         | Switch-on Volume Control             |

Belmont Radio Corp.

# Model 4B16 Radio

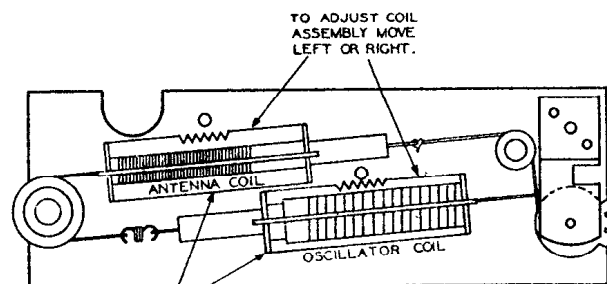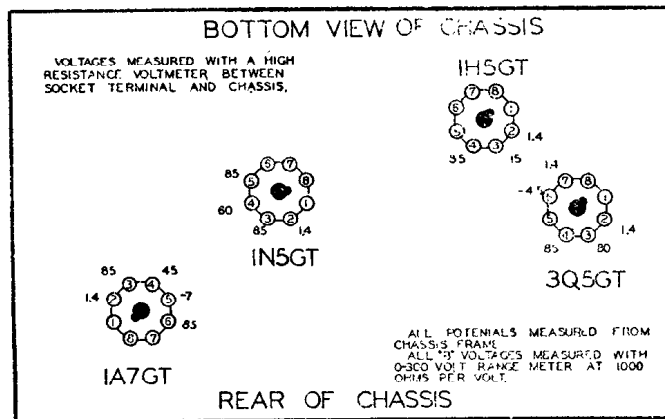


NOTE: THE ANTENNA COIL ASSEMBLY IS MADE SO THAT IT IS MOVABLE LEFT OR RIGHT. WHEN MAKING THE ADJUSTMENT AS GIVEN IN THE ALIGNMENT PROCEDURE MOVE COIL ASSEMBLY VERY SLOWLY

**COIL ASSEMBLY VIEW**

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

11

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

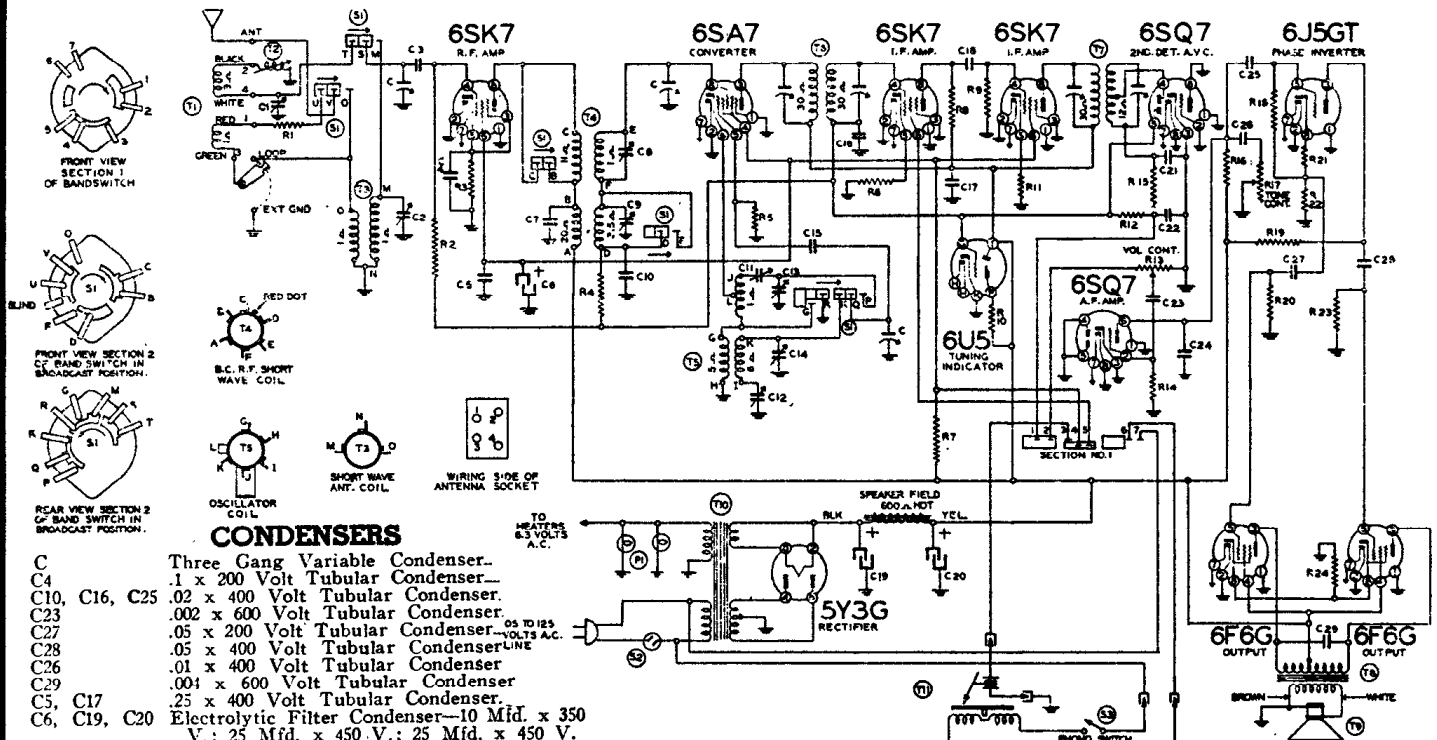

## CONDENSERS

- C Three Gang Variable Condenser.
- C4 .1 x 200 Volt Tubular Condenser.
- C10, C16, C25 .02 x 400 Volt Tubular Condenser.
- C23 .002 x 600 Volt Tubular Condenser.
- C27 .05 x 200 Volt Tubular Condenser.
- C28 .05 x 400 Volt Tubular Condenser.
- C26 .01 x 400 Volt Tubular Condenser.
- C29 .004 x 600 Volt Tubular Condenser.
- C5, C17 .25 x 400 Volt Tubular Condenser.
- C6, C19, C20 Electrolytic Filter Condenser—10 Mfd. x 350 V.; 25 Mfd. x 450 V.; 25 Mfd. x 450 V.
- C2 S.W. Antenna Trimmer
- C8, C9 S.W. and B.C. R.F. Trimmer—Dual.
- C13, C14 S.W. and B.C. Osc. Trimmer—Dual.
- C1 B.C. Antenna Trimmer
- C12 .000325 Compression Cond.—B.C. Pad
- C3, C18 .0005 Mica Type Condenser—20%
- C7 .0004 Mica Type Condenser—20%
- C15 .00005 Mica Type Condenser—20%
- C21, C22 .0001 Mica Type Condenser—20%
- C11 .0021 Compression Mica Condenser
- C24 .00025 Mica Type Condenser—20%



## RESISTORS

- R13, S2 Volume Control and Switch (500M Ohms) Less Shaft
- R17 Tone Control (1 Megohm) Less Shaft
- R2, R18 Shaft Only for Volume and Tone Controls
- R2, R18 1 Megohm—1/2 Watt Resistor—20%
- R4 300M Ohm—1/2 Watt Resistor—20%
- R5 40M Ohm—1/2 Watt Resistor—20%
- R6, R11 500 Ohm—1/2 Watt Resistor—20%
- R8 12M Ohm—1/2 Watt Resistor—20%
- R9, R19, R22 100M Ohm—1/2 Watt Resistor—20%
- R7 12M Ohm—2 Watt Resistor—10%
- R15 50M Ohm—1/2 Watt Resistor—20%
- R12 3 Megohm—1/2 Watt Resistor—25%
- R14 5 Megohm—1/2 Watt Resistor—30%
- R21 2500 Ohm—1/2 Watt Resistor—20%
- R20, R23 500M Ohm—1/2 Watt Resistor—20%
- R16 250M Ohm—1/2 Watt Resistor—20%
- R24 300 Ohm—1 Watt Resistor—20%
- R3 300 Ohm—1/2 Watt Resistor—20%
- R1 400 Ohm—1/2 Watt Resistor—20%
- R10 1 Megohm—In Eye Socket

# Model 11A25

## Alignment Procedure

- Volume control—Maximum all adjustments.
- Connect dummy antenna value in series with generator output lead.

| BAND            | SIGNAL GENERATOR Frequency Setting | Dummy Antenna | Connect on to Radio         | Position of Band Switch | Variable Condenser Setting           | Trimmers Adjusted to Maximum (in Order Shown) |
|-----------------|------------------------------------|---------------|-----------------------------|-------------------------|--------------------------------------|---|
| I. F.           | 455 Kc                             | .1 MFD.       | Grid of 6SK7 I. F.          | Broadcast               | Rotor full open (Plates out of mesh) | Two trimmers on top Output I. F.              |
|                 | 455 Kc                             | .1 MFD.       | Grid of 6SA7 Mixer          | Broadcast               | Rotor full open (Plates out of mesh) | Two trimmers on top Input I. F.               |
| SHORT WAVE BAND | 17 Mc.                             | 400 Ohms      | External Antenna and Ground | Short Wave              | Set Dial at 17 Mc.                   | C13, S.W. Osc.                                |
|                 | 17 Mc.                             | 400 Ohms      | External Antenna and Ground | Short Wave              | Set Dial at 17 Mc.                   | C8, S.W. R.F., C2 S.W. Antenna                |
|                 | 6 Mc.                              | 400 Ohms      | External Antenna and Ground | Short Wave              | Set Dial at 6 Mc.                    | C11 S.W. Osc Series Pad See Note "A"          |
| BROAD-CAST BAND | 1580 Kc.                           | 200 mmf.      | Grid of 6SK7 R. F. Tube     | Broadcast               | Rotor full open (Plates out of mesh) | C14 B.C. Osc.                                 |
|                 | 540 Kc.                            | 200 mmf.      | Grid of 6SK7 R. F. Tube     | Broadcast               | Set Dial at 540 Kc. (Plates in Mesh) | C12 B.C. Osc. Series Pad                      |
|                 | 1400 Kc.                           | 200 mmf.      | Grid of 6SK7 R. F. Tube     | Broadcast               | Set Dial at 1400 Kc.                 | C9 B.C. R.F.                                  |
| LOOP ALIGN-MENT | 1400 Kc.                           | 200 mmf.      | External Antenna and Ground | Broadcast               | Set Dial at 1400 Kc.                 | C1 B.C. Ant.                                  |
|                 | 600 Kc.                            | 200 mmf.      | External Antenna and Ground | Broadcast               | Set Dial at 600 Kc.                  | T2 Iron Core Tracking Coil                    |


NOTE "A"—Turn the dial back and forth slightly (rock) and adjust trimmer until the peak of greatest intensity is obtained.

After each band is completed, repeat the procedure as a final check.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

Belmont MODEL 579

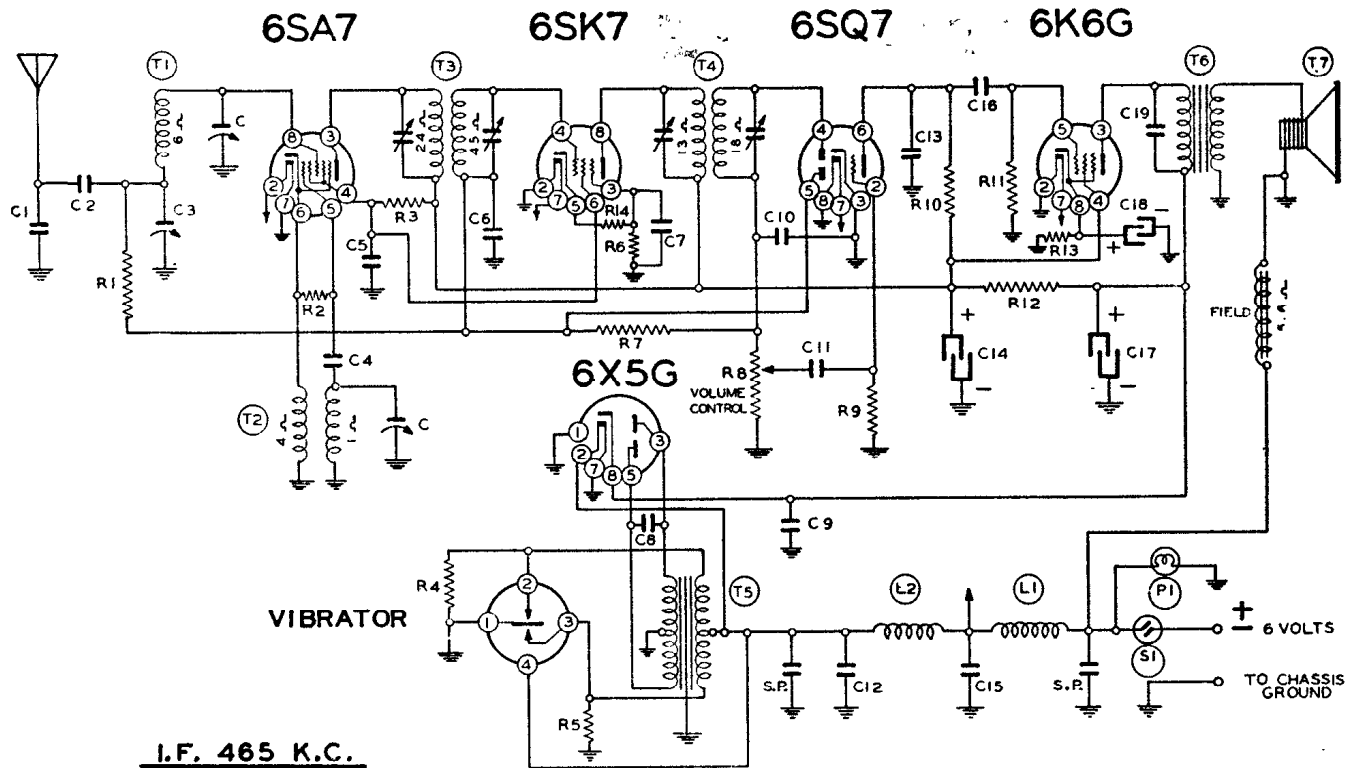

I.F. 465 K.C.

Circuit Diagram Ref. Part No. No.

### RESISTORS

|     |        |                            |
|-----|--------|----------------------------|
| R1  | 13011  | 250M ohm— $\frac{1}{2}$ w. |
| R2  | 130236 | 30M ohm— $\frac{1}{2}$ w.  |
| R3  | 130307 | 15M ohm—1 watt             |
| R4  | 13060  | 100 ohm— $\frac{1}{2}$ w.  |
| R5  | 13060  | 100 ohm— $\frac{1}{2}$ w.  |
| R6  | 13070  | 500 ohm— $\frac{1}{2}$ w.  |
| R7  | 1304   | 3 megohm— $\frac{1}{2}$ w. |
| R8  | 101110 | 1 megohm volume control    |
| R9  | 130257 | 5 megohm— $\frac{1}{2}$ w. |
| R10 | 13011  | 250M ohm— $\frac{1}{2}$ w. |
| R11 | 1303   | 500M ohm— $\frac{1}{2}$ w. |
| R12 | 130199 | 1500 ohm—1 watt            |
| R13 | 130308 | 750 ohm—1 watt             |
| R14 | 130174 | 50 ohm— $\frac{1}{2}$ w.   |

### CONDENSERS

|    |        |                           |
|----|--------|---------------------------|
| C  | 10269  | 2 gang variable condenser |
| C1 | 1293   | .00002 mica               |
| C2 | 10055  | .01 x 400 volts           |
| C3 | 12434  | Adj. Antenna Trimmer      |
| C4 | 12921  | .0002 mica                |
| C5 | 100115 | .05 x 400 v.              |
| C6 | 1009   | .05 x 200 v.              |
| C7 | 10020  | .1 x 200 v.               |
| C8 | 10034  | .005 x 1200 v.            |

Circuit Diagram Ref. Part No. No.

### DESCRIPTION


|     |        |                           |
|-----|--------|---------------------------|
| C9  | 12912  | .00025 mica               |
| C10 | 1295   | .0001 mica                |
| C11 | 10025  | .002 x 600 v.             |
| C12 | 10031  | .5 x 120 v.               |
| C13 | 1292   | .0005 mica                |
| C14 | 119105 | 15 ufd. lytic x 350 w. v. |
| C15 | 10031  | .5 x 120 v.               |
| C16 | 10078  | .01 x 200 v.              |
| C17 | 119105 | 15 ufd. lytic x 350 w. v. |
| C18 | 119105 | 20 ufd. lytic x 25 w. v.  |
| C19 | 10087  | .01 x 600 v.              |

C14, C17 and C18 in same unit


### PARTS

|      |          |                              |
|------|----------|------------------------------|
| T1   | 11195B   | Antenna Coil                 |
| T2   | 110146   | Oscillator Coil              |
| T3   | 108139   | Input I. F. Coil—465 kc.     |
| T4   | 108121B  | Output I. F. Coil—465 kc.    |
| T5   | 104131   | Power Transformer            |
| T6   | 10567    | Output Transformer           |
| T7   | 114114-R | 5" Dynamic Speaker (5.6 ohm) |
| L1   | 10568    | "A" Choke                    |
| L2   | 10566    | "A" Choke                    |
| S1   |          | Switch on volume control     |
| P1   | 10797    | Pilot light (T51) 6-8 volts  |
| S.P. | 11749    | (2) Spark Plates             |

### BOTTOM VIEW OF CHASSIS

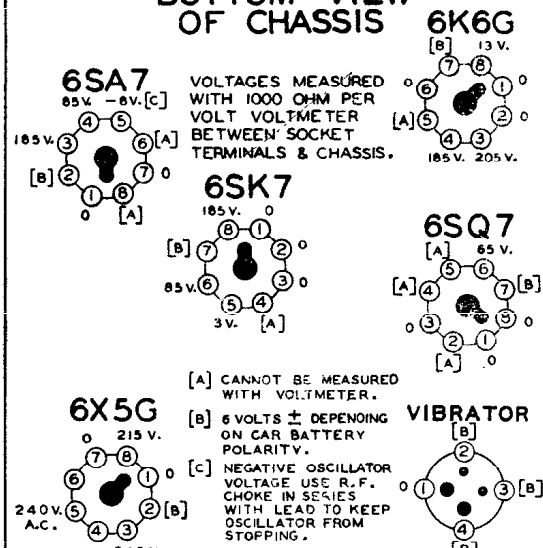

### REAR OF CHASSIS

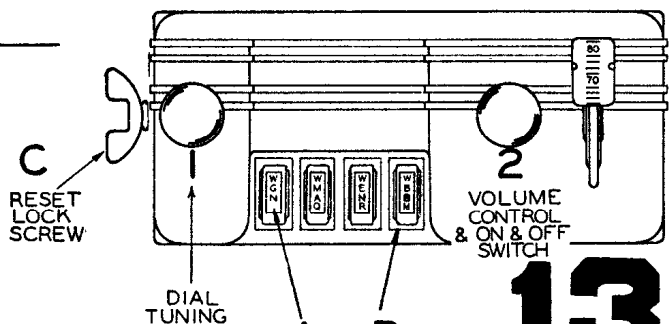


The ignition system of every automobile generates high frequency electrical disturbances which interfere to some extent with the operation of the radio receiver. This disturbance arises from the ignition coil, the distributor and associated wiring. It must either be suppressed at its origin or must be prevented from feeding into the input of the radio receiver through the common storage battery. By proper shielding and by-passing these disturbances are prevented from entering the receiver.


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# 13

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

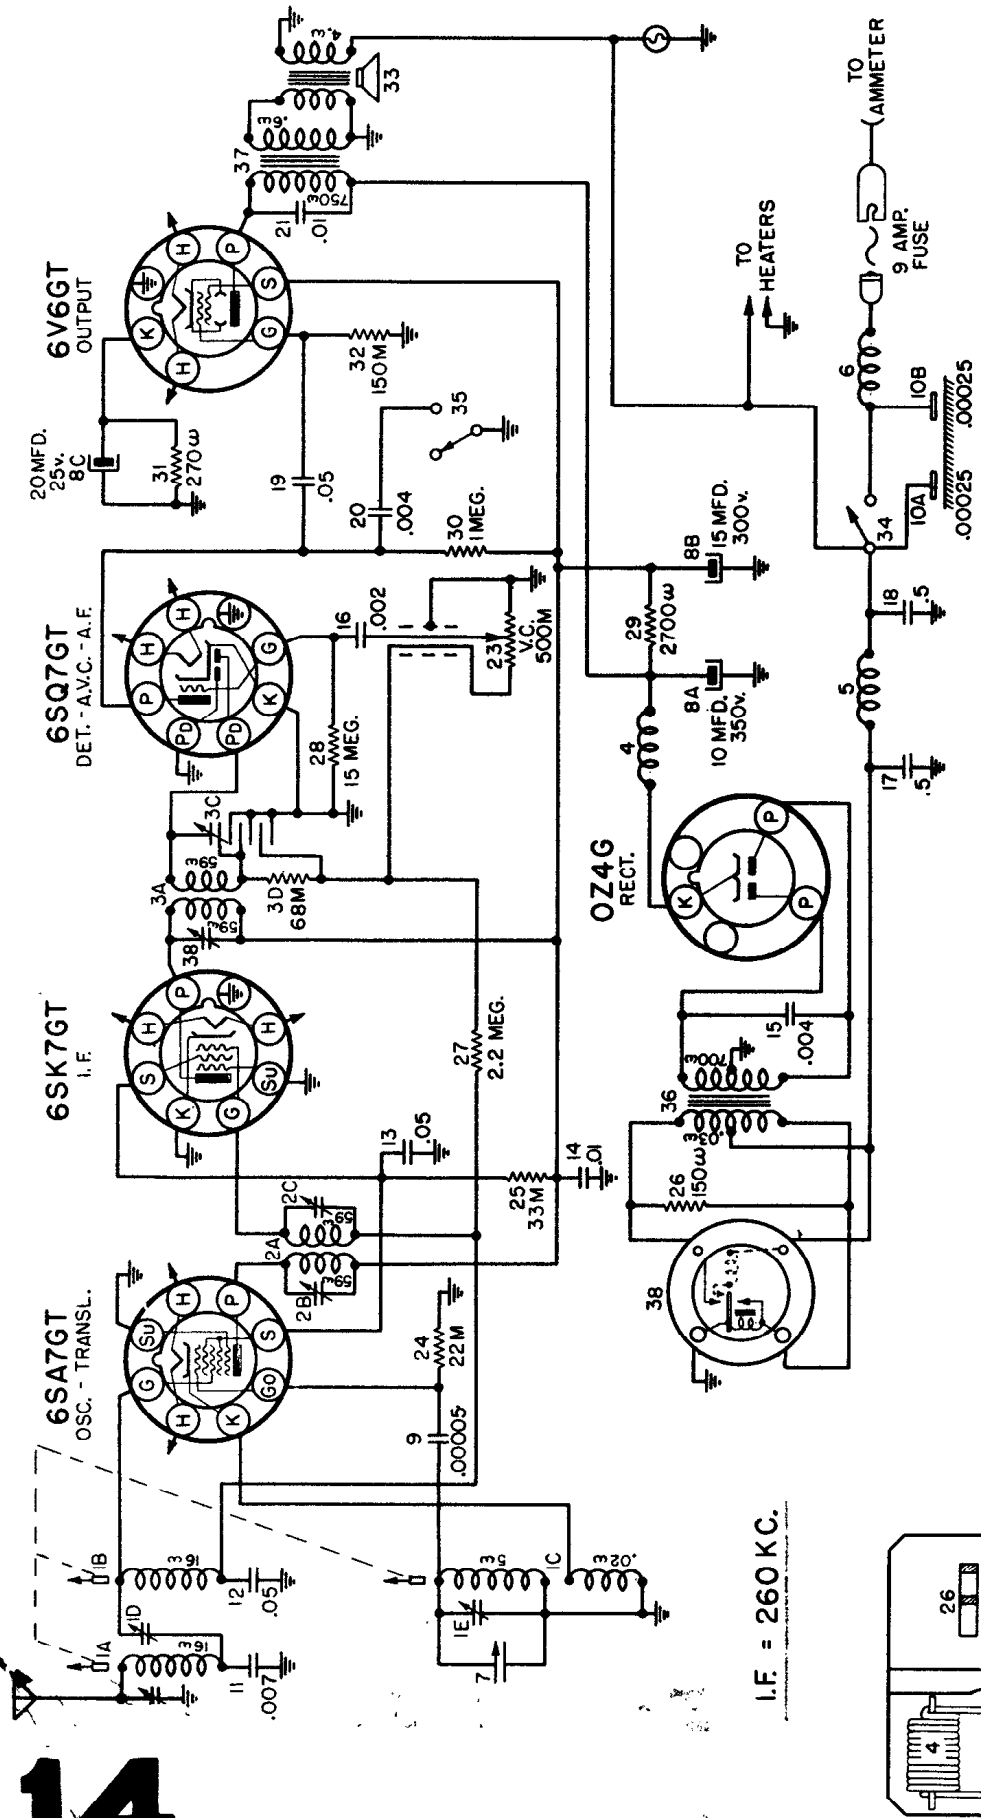

The circuit used in this receiver is the superheterodyne type, employing the permeability method of tuning. An adjustable condenser is provided for matching the antenna circuit to the antenna. This adjustment is made near the high frequency end of the band (1400 kilocycles).

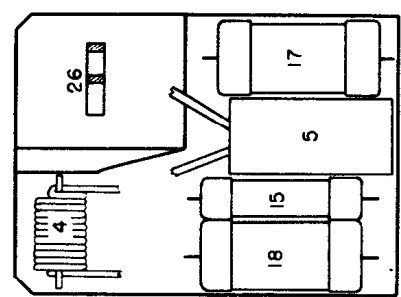






CIRCUIT DIAGRAM—RADIO 985792



POWER PACK PARTS LAYOUT




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

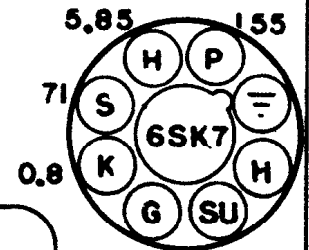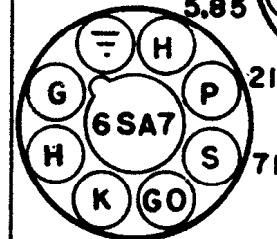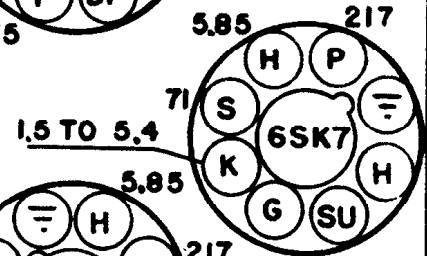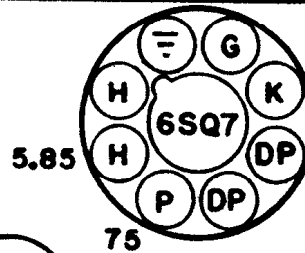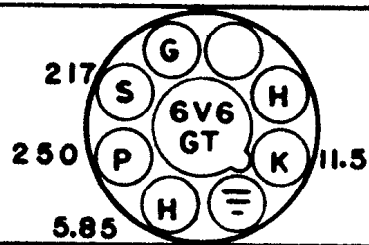

VOLTAGES TAKEN FROM SOCKET  
TERMINALS TO GROUND WITH A  
DC VOLTMETER HAVING 1000  
OHMS PER VOLT RESISTANCE.  
6.0V DC AT SPARK PLATE 6A.  
TOTAL CURRENT DRAIN WITH  
SPEAKER & DIAL LIGHT 7.3 AMPS.  
"B" DRAIN - 58 MA.  
TOLERANCE ON VOLTAGES  $\pm 10\%$



VOLTAGE CHART—RADIO 985793

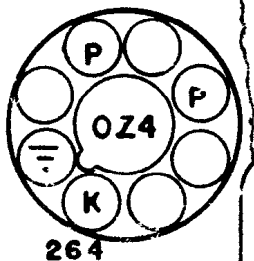

## I.F. Alignment at 262 Kilocycles

- Connect a 0.1 mfd. condenser between the plate prong of the 6V6GT output tube and one terminal of the output meter, to protect the meter from DC voltages. Connect the other terminal of the output meter to ground.
- Connect the ground lead of the signal generator to the chassis frame.
- Connect the signal lead of the signal generator to the grid (G) prong of the 6SA7 tube socket through a 0.1 mfd. condenser.
- Turn the set volume control on full and rotate the tone control knob to the center (Music) position. Adjust the signal generator to 262 kilocycles, and tune the receiver to a frequency where no squeals or beat notes may be heard and so that when the tuning control is moved through narrow limits no appreciable change in output is noticeable.
- Adjust the I.F. trimmers A, B, C, and D for maximum output.







# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

FOR CROSELEY MODEL 62-TA, 62-TC, 62-TD — CHASSIS No. 37

## ALIGNMENT PROCEDURE

Preliminary  
 Output Meter Connections ..... To Voice Coil Terminals of Speaker or to Plate of 35L6GT and Cathode of 35Z5GT  
 Generator Ground Connections ..... In Series with .001 MFD. Condenser  
 Dummy Antenna ..... 400 Ohm Carbon Resistor in Series with Generator Output  
 Position of Volume Control ..... Fully On

## ALIGNMENT CHART

| Step | Signal Generator Frequency Setting | Input   | Band Switch | Tuning Cond. Setting | Trimmer Adjusted                                    | Remarks  | Location                          |
|------|------------------------------------|---------|-------------|----------------------|---|--|-----------------------------------|
| 1    | 456 Kc.                            | Antenna | S. B.       | Fully open           | 2nd I-F (2)   | Adjust for maximum output.   | Tops of I. F. Trans.              |
| 1-A  | 456                                | Antenna | S. B.       | Fully open           | 1st I-F (2)<br>Wave trap                            | Adjust for minimum output.   | Center Section of 3 Sec. Trimmer. |
| 2    | 15.3 Mc.                           | Antenna | S. W.       | Fully open           | S. W. "OSC"   | Adjust for maximum output.   | Top of Tuning Condenser           |
| 3    | 15.0 Mc.                           | Antenna | S. W.       | Approx. 15 on dial   | S. W. "Ant."  | Adjust for maximum output while rocking gang thru signal.          | L. H. Section of 3 Sec. Trimmer.  |
| 4    | 1650 Kc.                           | Antenna | S. B.       | Fully open           | B. C. "OSC"<br>(front trimmer right end of chassis) | Adjust for maximum output. Gang does not have to tune thru signal. | R. H. Section of 3 Sec. Trimmer.  |
| 5    | 1400 Kc.                           | Antenna | S. B.       | Approx. 1400 on dial | B. C. "ANT"   | Adjust for maximum output.   | On Cabinet Back.                  |

When aligning the short wave band "OSC" trimmer care must be exercised to see that the circuits are aligned on the correct frequency and not on the image which is approximately 910 kilocycles less as indicated on the dial. To check, increase generator output, tune-in the generator frequency and then tune-in the image frequency which should be weaker than the fundamental and come in approximately 910 kilocycles lower on the dial than the fundamental. If image cannot be tuned in, the "OSC" trimmer is adjusted to the wrong peak. (Correct peak is the second peak on trimmer from the closed position). Repeat original alignment procedure for more accurate adjustments. Always keep signal generator output low as possible to prevent action of A.S.C. circuit.



Socket Voltage is measured @ 117.5 V line

## TUBE VOLTAGE CHART

(BETWEEN SOCKET PINS AND B-) WITH 1000 OHM PER VOLT—500 V. RANGE D. C. VOLTMETER

| TUBE  | FUNCTION   | PIN NUMBER |       |       |       |       |       |       |      |
|-------|------------|------------|-------|-------|-------|-------|-------|-------|------|
|       |            | 1          | 2     | 3     | 4     | 5     | 6     | 7     | 8    |
| 12SK7 | R. F. Amp. | .....      | ..... | 0     | Neg.  | 0     | 76.   | ..... | 40   |
| 12SA7 | Osc. Mod.  | .....      | ..... | 76    | 76    | Neg.  | 0     | ..... | Neg. |
| 12SK7 | I. F. Amp. | .....      | ..... | 0     | Neg.  | 0     | 76    | ..... | 76   |
| 12SQ7 | Det., Etc. | .....      | 0     | 0     | 0     | Neg.  | 16*   | ..... | 0    |
| 35L6  | B. P. O.   | .....      | ..... | 92    | 76    | 0     | ..... | ..... | 4    |
| 35Z5  | Rect.      | .....      | ..... | ..... | ..... | 113AC | ..... | ..... | 100  |

All voltages may vary 10% of values indicated. Neg. indicates Neg. reading on Voltmeter Scale but of too small a value to record accurately.  
 \* Measured on 100 V. Scale. Power consumption at 117.5 V. line, 30 watts. Drop across Speaker Field—100 V. Current thru Speaker Field—52 M.A.

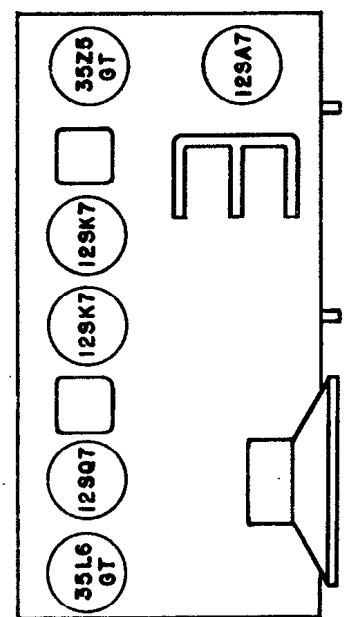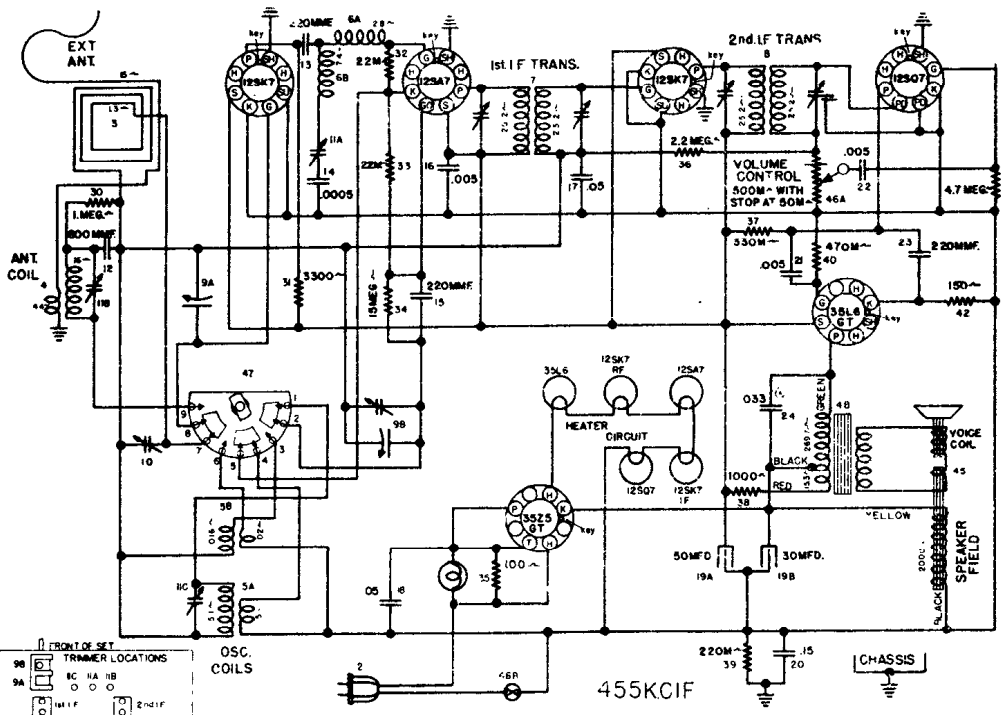

# 19

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

For Model 52-PA — Chassis No. 67

The chassis as employed in this model portable receiver is a five tube (including rectifier), single band super-heterodyne, designed to operate from an "A and B" Battery Pack, or 110 volts A.C. (50-60 cycle) or 110 volt D.C. electric circuits.

**TUNING RANGE** — 550-1600 Kilocycles — 546-187.5 Meters

**TUBES USED** — one 1A7GT, one—1N5GT, one—IH5GT, one—1T5GT and one—117Z6GT

**BATTERIES REQUIRED** — one No. CR67 Crosley "A and B" Battery Pack (6 Volt "A"—75 Volt "B") or equivalent.

Measured from "B" minus using 1000 Ω/V

Voltmeter, 100 V. Range, no signal input

| Tube    |                         | @ 117.5-Volt Line |             |             |              | Battery Pack  |            |             |              |
|---------|-------------------------|-------------------|-------------|-------------|--------------|---------------|------------|-------------|--------------|
| Type    | Function                | Filament Volt     | Plate Volt  | Screen Volt | Cathode Volt | Filament Volt | Plate Volt | Screen Volt | Cathode Volt |
| 1A7GT   | Osc. Modulator          | 1.3               | 80          | 34          | .....        | 1.7           | 75         | 30          | .....        |
| 1N5GT   | I. F. Amplifier         | 3.8               | 80          | 80          | .....        | 4.4           | 75         | 75          | .....        |
| 1H5GT   | Det.-A. S. C. 1st A. F. | 2.6               | 7           | .....       | .....        | 3.0           | 6          | .....       | .....        |
| 1T5GT   | Out Put                 | 5.1               | 72          | 80          | .....        | 6.0           | 68         | 75          | .....        |
| 117Z6GT | Rectifier               | 117.5 A. C.       | 117.5 A. C. | .....       | 100          | .....         | .....      | .....       | .....        |

## ALIGNMENT PROCEDURE


Volume Control on full Output meter connected to Plate and Screen of 1T5GT

| SIGNAL GENERATOR  |                     | DUMMY ANTENNA | TUNING COND. SETTING | TRIMMERS TO ADJUST (See Fig. 1) | REMARKS   |
|-------------------|---------------------|---------------|----------------------|---------------------------------|---|
| FREQUENCY SETTING | CONNECTION TO RADIO |               |                      |                                 |   |
| 455 Kc            | Ant. Lead           | .0001 MF      | Fully open           | 2nd 1-F(1) front chassis flange | Adjust for maximum signal.  |
| 455 Kc            | Ant. Lead           | .0001 MF      | Fully open           | 1st 1-F (2)                     | Adjust for maximum signal. Located top of 1st 1-F ass'y.              |
| 1650              | Ant. Lead           | .0001 MF      | Fully open           | "OSC" Shunt on gang             | Adjust for maximum output. Gang does not have to tune through signal. |
| 1400              | Ant. Lead           | .0001 MF      | 140 on dial          | "ANT" shunt on gang             | Adjust for maximum output.  |
| 600               | Ant. Lead           | .0001 MF      | 60 on dial           | Iron core in "OSC" coil         | Adjust for maximum signal while rocking gang.                         |


Repeat above procedures for more accurate adjustments  
Maximum power output @ 75 V. "B" — approx. 200 M. W. undistorted

A Battery drain @ 6 volts, .05 Amp.; "B" Battery drain @ 75 V., 9 M. A.  
Power consumption @ 117.5 volts line — 20 Watts


The Crosley Corp.

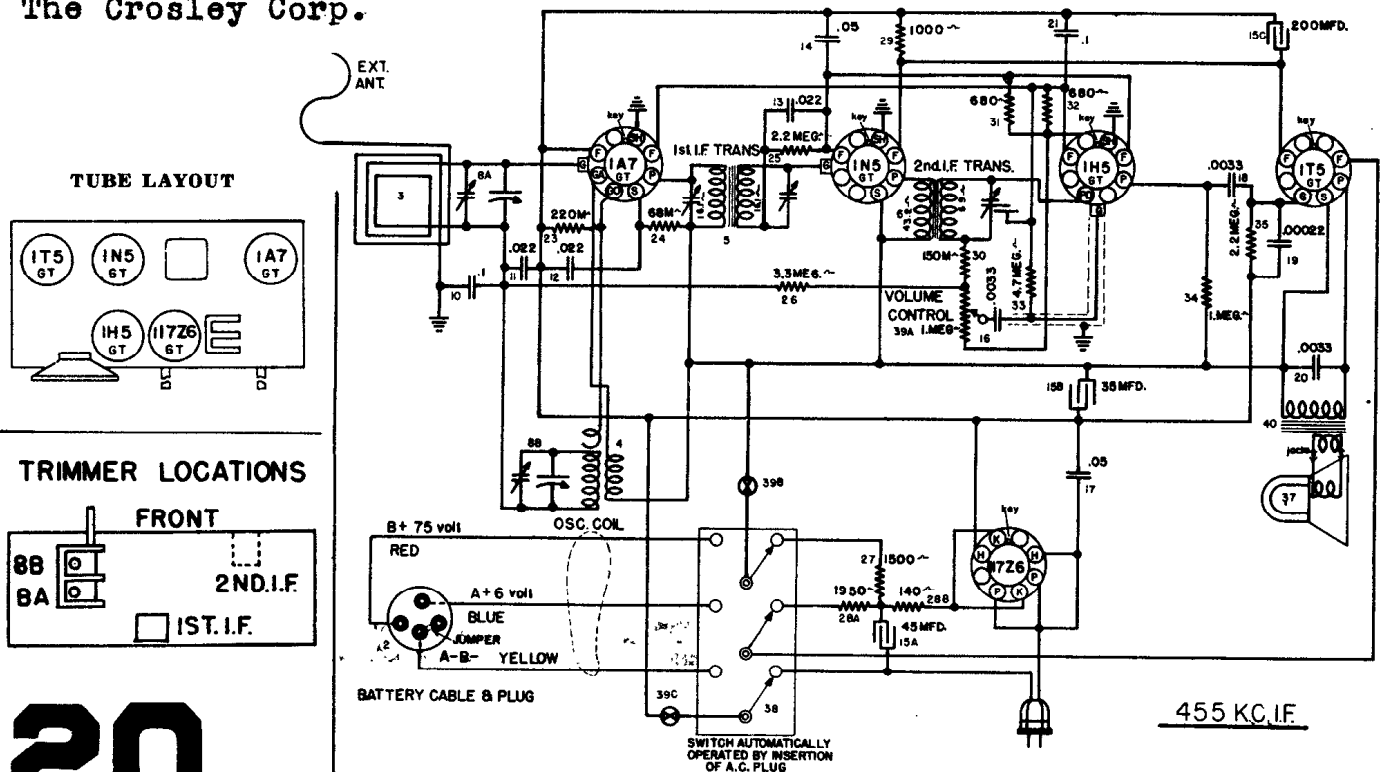

### TUBE LAYOUT

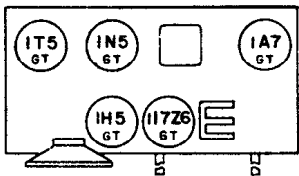

### TRIMMER LOCATIONS

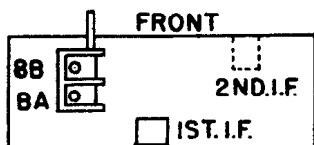




20

COMPILED BY M. N. BETTMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## MODELS 02CA AND 02CB — CHASSIS MODEL No. 55

| Alignment Sequence | Dummy Antenna   | Frequency Setting | Input Connection to Receiver          | Band Switch | Tuning Cond. Setting | Trimmer Adjusted                           | Remarks   |
|--------------------|---|-------------------|---------------------------------------|-------------|----------------------|--|---|
| 1.                 | .02 MF.   | 455 Kc.           | Stator lug Rear section of Gang Cond. | B. C.       | Fully open           | 2nd I-F (2)<br>1st I-F (2)                 | Adjust for Maximum. Adjust for Maximum.   |
| 2.                 | .0002 MF.   | 1630 Kc.          | Ant. Terminal                         | B. C.       | Fully open           | B. C. "OSC" Trimmer                        | Adjust for peak; gang does not have to tune thru signal. Loop must be connected.      |
| 3.                 | .0002 MF.   | 600 Kc.           | Ant. Terminal                         | B. C.       | Approx. 60 on dial   | B. C. "OSC" Series Trimmer                 | Adjust for maximum output while rocking gang thru signal.                             |
| 4.                 | Repeat Step No. 2 to check possible shift due to series adjustment.   |                   |                                       |             |                      |  |   |
| 5.                 | .0002 MF.   | 1400 Kc.          | Ant. Terminal                         | B. C.       | Approx. 140 on dial  | B. C. "ANT" Trimmer<br>B. C. "R-F" Trimmer | Adjust for maximum output do not touch B. C. Osc. Trimmer. Adjust for maximum output. |
| 6.                 | 400 ohm (carbon)  | 5.3 Mc.           | Ant. Terminal                         | Police      | Fully open           | Pol "OSC"                                  | Adjust for peak; gang does not have to tune thru signal.                              |
| 7.                 | 400 ohm (carbon)  | 5.0 Mc.           | Ant. Terminal                         | Police      | Approx. 5.0          | Pol "ANT" Trimmer                          | Adjust for maximum output.  |
| 8.                 | 400 ohm (carbon)  | 18.3 Mc.          | Ant. Terminal                         | S. W.       | Fully open           | S. W. "OSC"                                | Adjust for peak. Gang does not have to tune thru signal.                              |
| 9.                 | 400 ohm (carbon)  | 18.0 Mc.          | Ant. Terminal                         | S. W.       | Approx. 18           | S. W. "ANT" Trimmer                        | Adjust for maximum output while rocking gang thru signal.                             |
| 10.                | Repeat the above alignment procedure for more accurate adjustments. Always keep signal generator output as low as possible to prevent action of the A. V. C. circuit. |                   |                                       |             |                      |  |   |

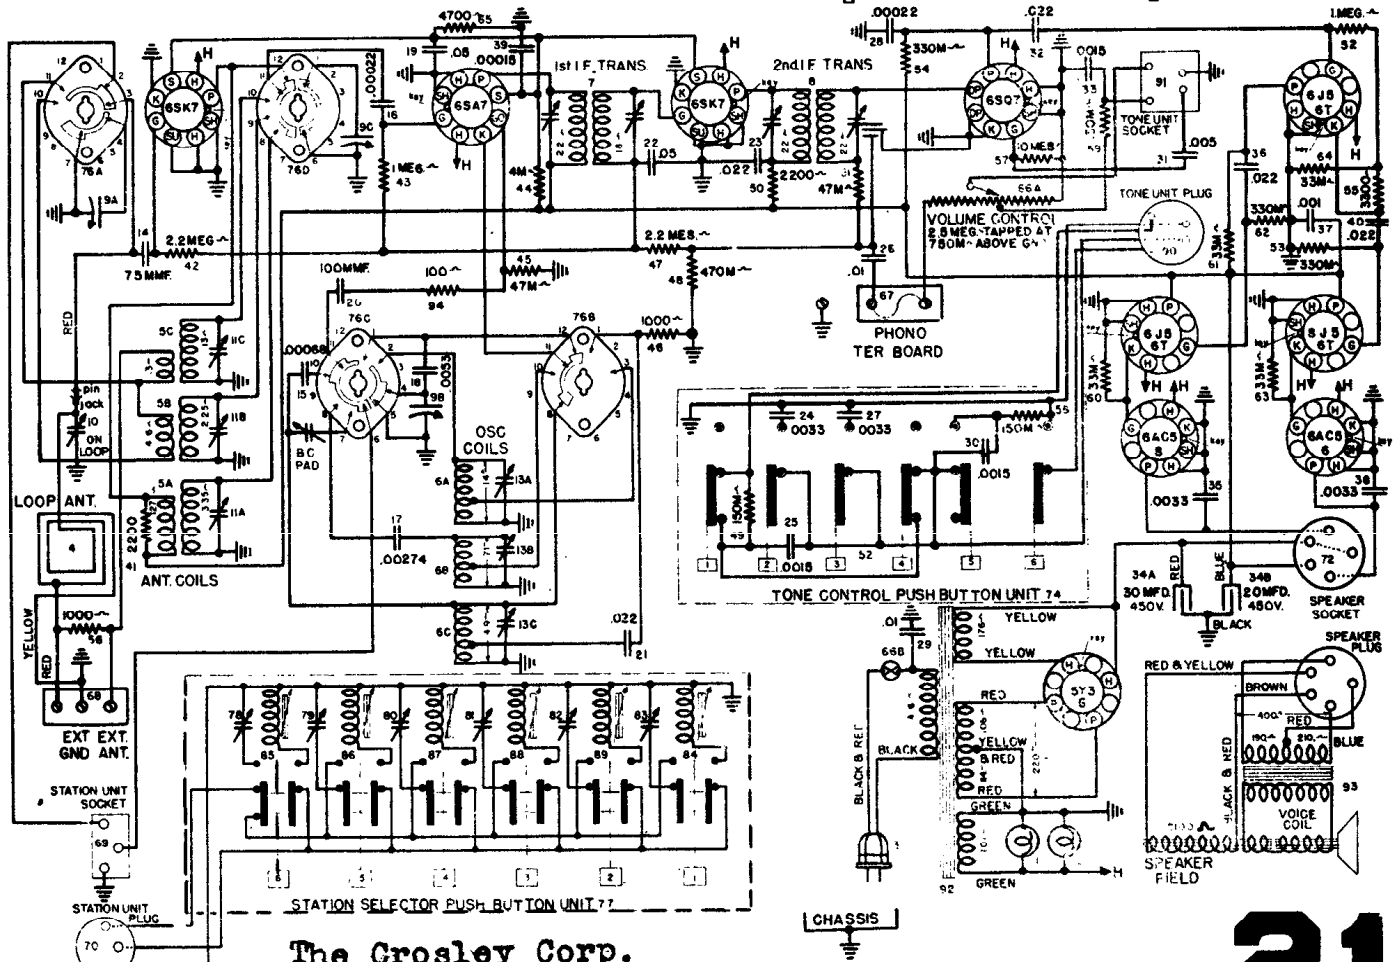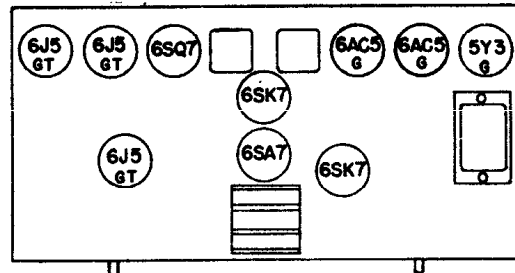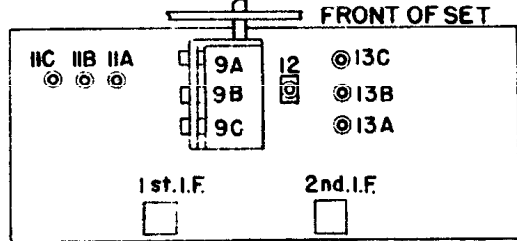

The Crosley Corp.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

For Models 62-PA and 62-PB — Chassis No. 68

## Portable Radios for Standard Broadcast Reception

Measured from "B" minus using 1000 Ω/V

Voltmeter, 100 V. Range, no signal input

| Tube    |                         | @ 117.5-Volt Line |             |             |              | Battery Pack  |            |             |              |
|---------|-------------------------|-------------------|-------------|-------------|--------------|---------------|------------|-------------|--------------|
| Type    | Function                | Filament Volt     | Plate Volt  | Screen Volt | Cathode Volt | Filament Volt | Plate Volt | Screen Volt | Cathode Volt |
| 1N5GT   | R. F. Amplifier         | 3.8               | .....       | .....       | .....        | 4.6           | 75         | 75          | .....        |
| 1A7GT   | Osc. Modifier           | 2.6               | 80          | 31          | .....        | 3.1           | 75         | 28          | .....        |
| 1N5GT   | I. F. Amplifier         | 5.0               | 80          | 80          | .....        | 6.1           | 75         | 75          | .....        |
| 1H5GT   | Det.-A. V. C. 1st A. F. | 1.3               | 7           | .....       | .....        | 1.6           | 4.5        | .....       | .....        |
| 1T5GT   | Out Put                 | 6.2               | 72          | 80          | 100          | 7.7           | 68         | 75          | .....        |
| 117Z6GT | Rectifier               | 117.5 A. C.       | 117.5 A. C. | .....       | .....        | .....         | .....      | .....       | .....        |

### ALIGNMENT PROCEDURE

Volume Control on full Output meter connected to Plate and Screen of 1T5GT

#### SIGNAL GENERATOR



| FREQUENCY SETTING | CONNECTION TO RADIO | DUMMY ANTENNA | TUNING COND. SETTING | TRIMMERS TO ADJUST (See Fig. 1)  | REMARKS   |
|-------------------|---------------------|---------------|----------------------|----------------------------------|---|
| 455 Kc            | Ant. Lead           | .0001 MF      | Fully open           | 2nd 1-F (1) front chassis flange | Adjust for maximum signal.  |
| 455 Kc            | Ant. Lead           | .0001 MF      | Fully open           | 1st 1-F (2)                      | Adjust for maximum signal. Located top of 1st 1-F ass'y.              |
| 1650              | Ant. Lead           | .0001 MF      | Fully open           | "OSC" Shunt on gang              | Adjust for maximum output. Gang does not have to tune through signal. |
| 1400              | Ant. Lead           | .0001 MF      | 140 on dial          | "ANT" shunt on gang              | Adjust for maximum output.  |
| 1400              | Ant. Lead           | .0001 MF      | 140 on dial          | "RF" shunt on gang               | Adjust for maximum output.  |
| 600               | Ant. Lead           | .0001 MF      | 60 on dial           | Iron core in "OSC" coil          | Adjust for maximum output while rocking gang.                         |

Repeat above for more accurate adjustments  
Maximum power output @ 75 V. "B" — approx. 200 M. W.

A Battery drain @ 6 volts, .05 Amp.; "B" Battery drain @ 75 V., 9 M. A.; @ Power consumption @ 117.5 volts line — 25 Watts

| Item No. | Part No.     | Description             |
|----------|--------------|-------------------------|
| 1        | —49775       | Power Cable and Plug    |
| 2        | —132205-1    | Battery Cable and Plug  |
| 3        | GB-132196-1  | Loop Antenna Assem.     |
| 4        | G623-32002   | Osc. Coil               |
| 5        | G116-32001   | R.F. Trans.             |
| 6        | G268-32004   | 1st I.F. Trans.         |
| 7        | Wd. Scr. (5) | 2nd I.F. Trans.         |
| 8A       | —132168-1    | Var. Cond. R.F. Section |
| 8B       |              | Var. Cond. Osc. Section |
| 8C       |              | Var. Cond. Ant. Sect.   |
| 9        | G65-39001    | Cond. .05 Mf. 200 V.    |
| 10       | None         |                         |
| 11       | G67-39001    | Cond. .1 Mf. 200 V.     |
| 12       | G83-39001    | Cond. .022 Mf. 200 V.   |
| 13       | G89-39001    | Cond. .22 Mf. 200 V.    |
| 14       | G83-39001    | Cond. .022 Mf. 200 V.   |
| 15A      | —132144-1    | Cond. 35 Mfd. Electro   |
| 15B      |              | Cond. 45 Mfd. Electro   |
| 15C      |              | Cond. 200 Mfd. Electro  |
| 16       | G10-39001    | Cond. .0033 Mf. 600 V.  |
| 17       | G67-39001    | Cond. .1 Mf. 200 V.     |
| 18       | G85-39001    | Cond. .05 Mf. 200 V.    |
| 19       | G10-39001    | Cond. .0033 Mf. 600 V.  |
| 20       | G9-39004     | Cond. .00022 Mf.        |
| 21       | G10-39001    | Cond. .0033 Mf. 600 V.  |

|    |           |                          |
|----|-----------|--------------------------|
| 25 | G18-39002 | Res. 68 M Ohm 1/4 W.     |
| 26 | G27-39002 | Res. 2.2 Meg. Ohm 1/4 W. |
| 27 | G21-89002 | Res. 220 M Ohm 1/4 W.    |
| 28 | G28-39002 | Res. 3.3 Meg. Ohm 1/4 W. |
| 29 | G8-39002  | Res. 1500 Ohm 1/4 W.     |
| 30 | —132502-1 | Res. 1900 Ohm Candohm    |
| 31 | G26-39002 | Res. 3.3 Meg. Ohm 1/4 W. |
| 32 | G8-39002  | Res. 1500 Ohm 1/4 W.     |
| 33 | G6-39002  | Res. 680 Ohm 1/4 W.      |
| 34 | G20-39002 | Res. 150 M Ohm 1/4 W.    |
| 35 | G29-39002 | Res. 4.7 Meg. Ohm 1/4 W. |
| 36 | G6-39002  | Res. 680 Ohm 1/4 W.      |
| 37 | G27-39002 | Res. 2.2 Meg. Ohm 1/4 W. |
| 38 | G25-39002 | Res. 1 Meg. Ohm 1/4 W.   |

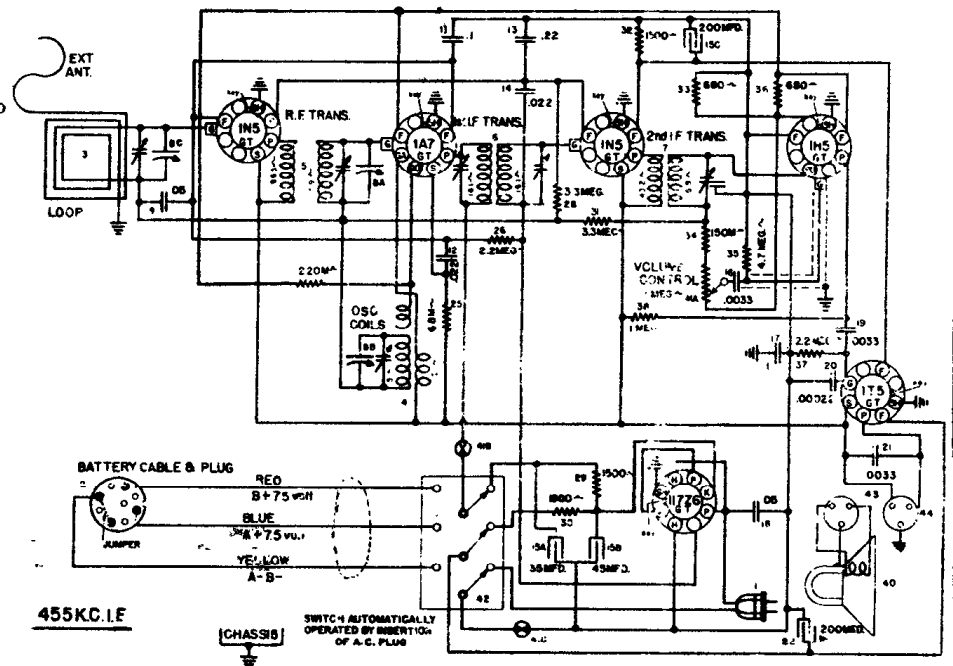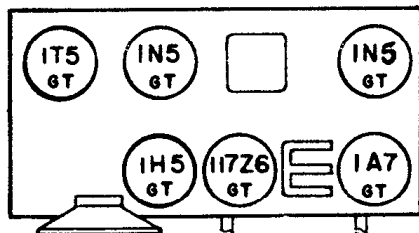

# 22

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS




## CROSLEY MODELS 02CP, 02CQ — CHASSIS MODEL No. 70

SOCKET VOLTAGES MEASURED AT 117.5 V. LINE (BETWEEN SOCKET PIN AND CHASSIS), WITH 1000 OHM PER VOLT, 500 V. RANGE VOLTMETER (D. C.)

| TUBE                              | FUNCTION | PIN NUMBER |      |       |           |       |                        |           |      |
|-----------------------------------|----------|------------|------|-------|-----------|-------|------------------------|-----------|------|
|                                   |          | 1          | 2    | 3     | 4         | 5     | 6                      | 7         | 8    |
| 6SK7—R. F. Amplifier.....         |          | Gnd.       | Gnd. | Gnd.  | 0         | Gnd.  | 74                     | 6.3 A. C. | 180  |
| 6SA7—Converter.....               |          | Gnd.       | Gnd. | 180   | 74        | 0     | {0-S. W.<br>4.0 B. C.} | 6.3 A. C. | 0    |
| 6SK7—J. F. Amplifier.....         |          | Gnd.       | Gnd. | Gnd.  | 0         | Gnd.  | 74                     | 6.3 A. C. | 180  |
| 6SQ7—Det. A. S. C. 1st A. F.....  |          | Gnd.       | 0    | Gnd.  | 0         | 0     | 75                     | 6.3 A. C. | Gnd. |
| 6J5GT—Phase Inverter.....         |          | Gnd.       | Gnd. | 145   | J. B.     | 0     | J. B.                  | 6.3 A. C. | 40   |
| 6J5GT(2)—P. P. A. F. Drivers..... |          | Gnd.       | Gnd. | 180   | 0         | 0     | J. B.                  | 6.3 A. C. | 6.5  |
| 6AC5GT(2)—P. P. Output.....       |          | Gnd.       | Gnd. | 304   | J. B.     | 6.5   | J. B.                  | 6.3 A. C. | Gnd. |
| 5Y3G—Rectifier.....               |          | N. C.      | 310  | J. B. | 308 A. C. | J. B. | 308 A. C.              | J. B.     | 310  |

MAX. POWER OUTPUT.....12.0 WATTS  
 POWER CONSUMPTION.....90 WATTS  
 DROP ACROSS SPEAKER FIELD.....120 VOLTS

J. B.—Junction Block  
 N. C.—No Connection

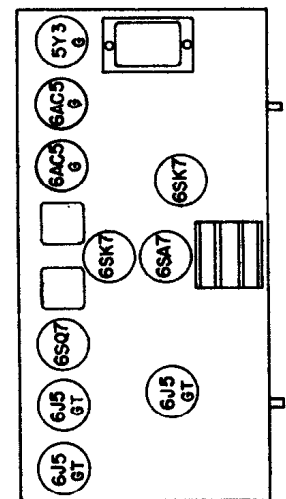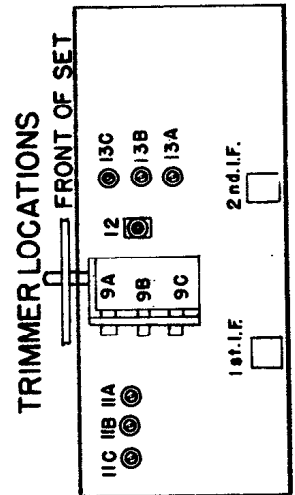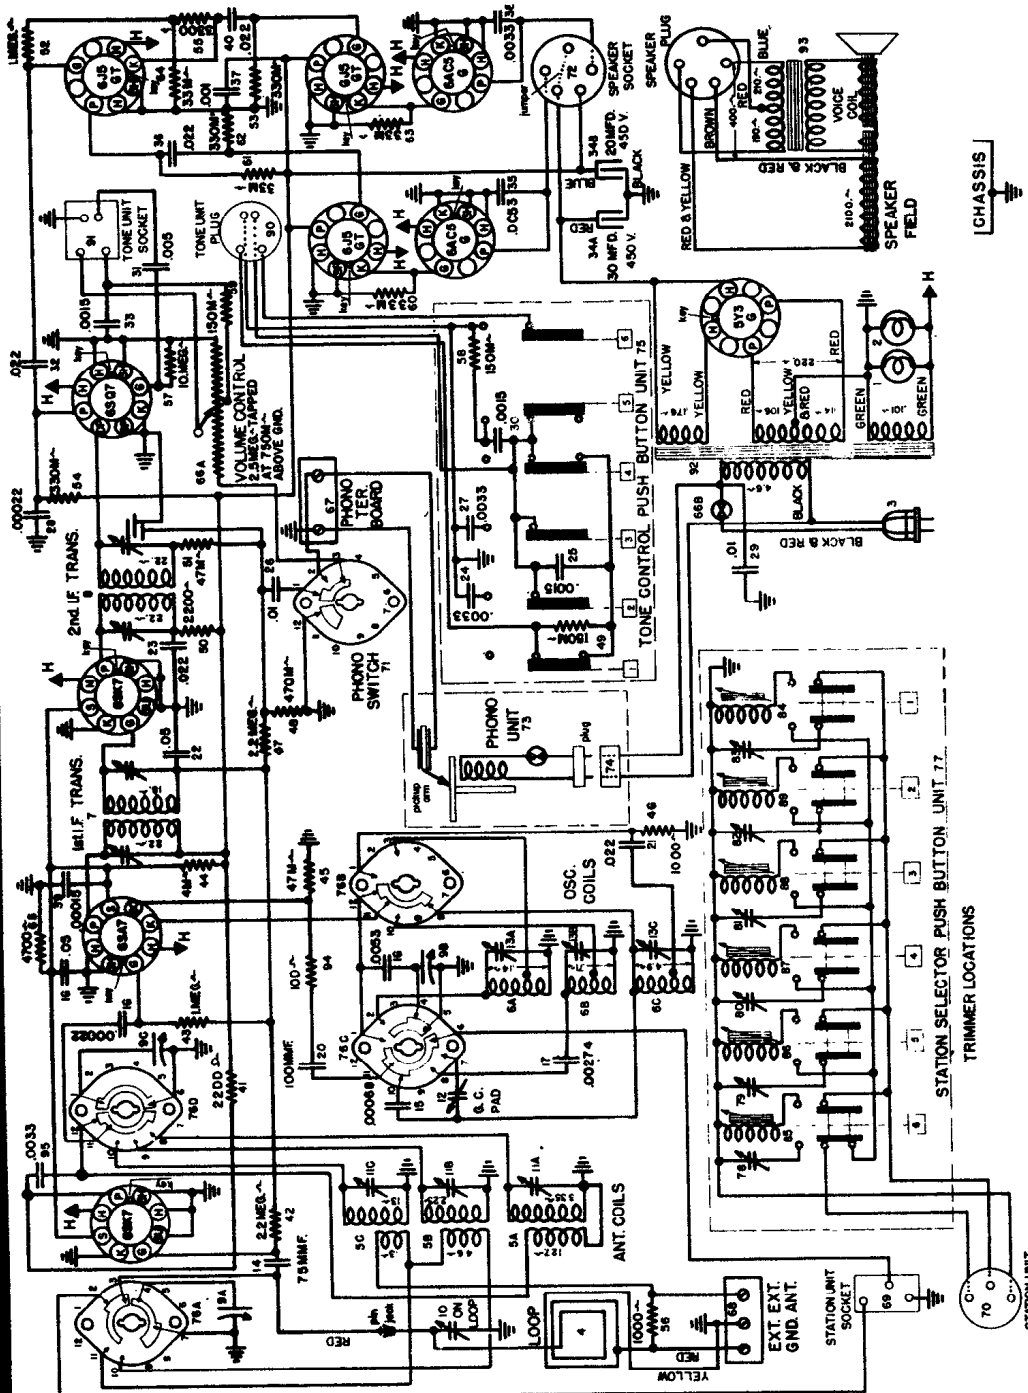

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## CROSLEY MODELS 02CP, 02CQ — CHASSIS MODEL No. 70

### THE AUTOMATIC RECORD CHANGER

This record changer will automatically play a series of twelve 10" or ten 12" records of the standard 78 R. P. M. type. The records must be all one size when loading, and may consist of less records than listed above. Records with or without a starting groove will operate the changer satisfactorily and the inside stopping groove may be a spiral or an eccentric. This means that any type of record, regardless of make, will operate the automatic mechanism. Records of any size up to 12" may be played manually.

The records are supported for automatic operation in two points, in the center by the center post, and on the edge by the record holder post.


| Alignment Sequence | Dummy Antenna   | Frequency Setting | Input Connection to Receiver          | Band Switch | Tuning Cond. Setting | Trimmer Adjusted                                 | Remarks  |
|--------------------|---|-------------------|---------------------------------------|-------------|----------------------|--|--|
| 1.                 | .02 MF.   | 455 Kc.           | Stator lug Rear section of Gang Cond. | B. C.       | Fully open           | 2nd I-F (2)<br>1st I-F (2)                       | Adjust for Maximum.<br>Adjust for Maximum.   |
| 2.                 | .0002 MF.   | 1630 Kc.          | Ant. Terminal                         | B. C.       | Fully open           | B. C. "OSC"<br>Trimmer                           | Adjust for peak; gang does not have to tune thru signal. Loop must be connected.         |
| 3.                 | .0002 MF.   | 600 Kc.           | Ant. Terminal                         | B. C.       | Approx. 60 on dial   | B. C. "OSC"<br>Series Trimmer                    | Adjust for maximum output while rocking gang thru signal.                                |
| 4.                 | Repeat Step No. 2 to check possible shift due to series adjustment.   |                   |                                       |             |                      |  |  |
| 5.                 | .0002 MF.   | 1400 Kc.          | Ant. Terminal                         | B. C.       | Approx. 140 on dial  | B. C. "ANT"<br>Trimmer<br>B. C. "R-F"<br>Trimmer | Adjust for maximum output do not touch B. C. Osc. Trimmer.<br>Adjust for maximum output. |
| 6.                 | 400 ohm (carbon)  | 5.3 Mc.           | Ant. Terminal                         | P. Ice      | Fully open           | Pol "OSC"  | Adjust for peak; gang does not have to tune thru signal.                                 |
| 7.                 | 400 ohm (carbon)  | 5.0 Mc.           | Ant. Terminal                         | Police      | Approx. 5.0          | Pol "ANT"<br>Trimmer                             | Adjust for maximum output.   |
| 8.                 | 400 ohm (carbon)  | 18.3 Mc.          | Ant. Terminal                         | S. W.       | Fully open           | S. W. "OSC"                                      | Adjust for peak. Gang does not have to tune thru signal.                                 |
| 9.                 | 400 ohm (carbon)  | 18.0 Mc.          | Ant. Terminal                         | S. W.       | Approx. 18           | S. W. "ANT"<br>Trimmer                           | Adjust for maximum output while rocking gang thru signal.                                |
| 10.                | Repeat the above alignment procedure for more accurate adjustments. Always keep signal generator output as low as possible to prevent action of the A. V. C. circuit. |                   |                                       |             |                      |  |  |

When aligning the shortwave bands "OSC" trimmers care must be exercised to see that the circuits are aligned on the correct frequency and not on the image which is approximately 910 kilocycles less as indicated on the Receiver dial. To check, increase generator output, tune-in the generator frequency and then tune-in the image frequency which should be weaker than the fundamental and come in approximately 910 kilocycles lower on the Receiver dial than the fundamental. If image cannot be tuned-in, the "OSC" trimmer is adjusted to the wrong peak. (Correct peak is the second peak on trimmer from the closed position).

### SETTING THE PUSH BUTTONS

The six station selector push buttons are set up by means of two adjusting screws per button. These adjusting screws are made accessible by removing the station selector push button escutcheon. Pry off carefully being careful not to scratch the main escutcheon.

Select the call letter tabs of your six favorite broadcast stations from the station call letter sheets supplied. Place the call letter tabs in the window above that push button which is to be adjusted for that station

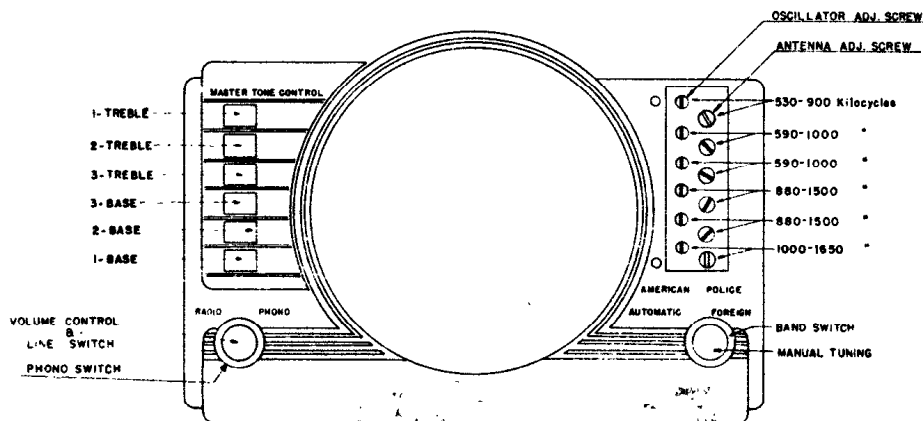

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## CROSLLEY RADIO MODEL 52-TP — CHASSIS No. 72

**REPLACING TUBES**—To gain access to the tubes, remove cabinet back, remove two screws holding loop antenna to rear of chassis and lay antenna down. Do not disconnect antenna from chassis.  
If at any time it is necessary to replace one or more tubes, Figure 1 will show the correct position and function of each type of tube.


If your receiver fails to operate make sure all tubes are pressed down in their respective sockets and that power cord plug is tight in the house receptacle. Should a visual inspection fail to indicate the trouble, call a competent radio service man—preferably your nearest Crosley dealer.

Specially designed parts of the highest quality are used throughout in the construction of all Crosley products. In order that the original fine quality and excellent performance of this receiver may be maintained, it is recommended that only GENUINE CROSLLEY PARTS be used should service be required.

### ALIGNMENT PROCEDURE


#### Preliminary

- Output Meter Connections . . . . . Plate and screen of 50L6
- Generator Ground Connections . . . . . Ground Lead and Chassis
- Dummy Antenna to be in series with generator output
- Position of Volume Control . . . . . Fully on

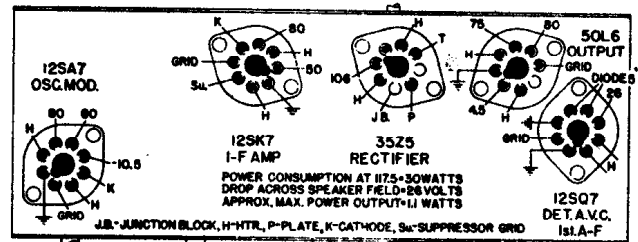



| Alignment Sequence | Dummy Antenna           | Frequency Setting | Input Connection to Receiver | Band Switch | Tune Cond. Setting | Trimmer Adjusted         | Remarks  |
|--------------------|-------------------------|-------------------|------------------------------|-------------|--------------------|--------------------------|--|
| 1.                 | .0001 MF.               | 455 KC.           | Antenna Lead                 | BC          | Fully Open         | 1st I-F(2)<br>2nd I-F(2) | Adjust for maximum signal.<br>Adjust for maximum signal.             |
| 2.                 | 400 ohm Carbon Resistor | 15.3 MC.          | Antenna Lead (red)           | S.W.        | Fully Open         | S.W. "Osc."              | Adjust for maximum output.   |
| 3.                 | 400 ohm Carbon          | 15.0 MC.          | Antenna Lead (red)           | S.W.        | 15 on Dial         | S.W. "Ant."              | Adjust for maximum signal while rocking gang through it.             |
| 4.                 | .0001 MF.               | 1650 KC.          | Antenna Lead (red)           | BC          | Fully Open         | B.C. "Osc."              | Adjust for maximum output. Gang does not have to tune through signal |
| 5.                 | .0001 MF.               | 1400 KC.          | Antenna Lead (red)           | BC          | 140 Dial           | B.C. "Ant."              | Adjust for maximum output.   |

When aligning the shortwave band "OSC" trimmer, care must be exercised to see that the circuit is aligned on the correct frequency and not on the image which is approximately 910 kilocycles less as indicated on the dial. To check, increase generator output, tune in the generator frequency and then tune in the image frequency which should be weaker than the fundamental and come in approximately 910 kilocycles lower on the dial than the fundamental. If image cannot be tuned in, the "OSC" trimmer is adjusted to the wrong peak. (Correct peak is the second peak on trimmer from the closed position.) Repeat original alignment procedure for more accurate adjustments. Keep signal generator output low as possible to prevent action of A.S.C. circuit.

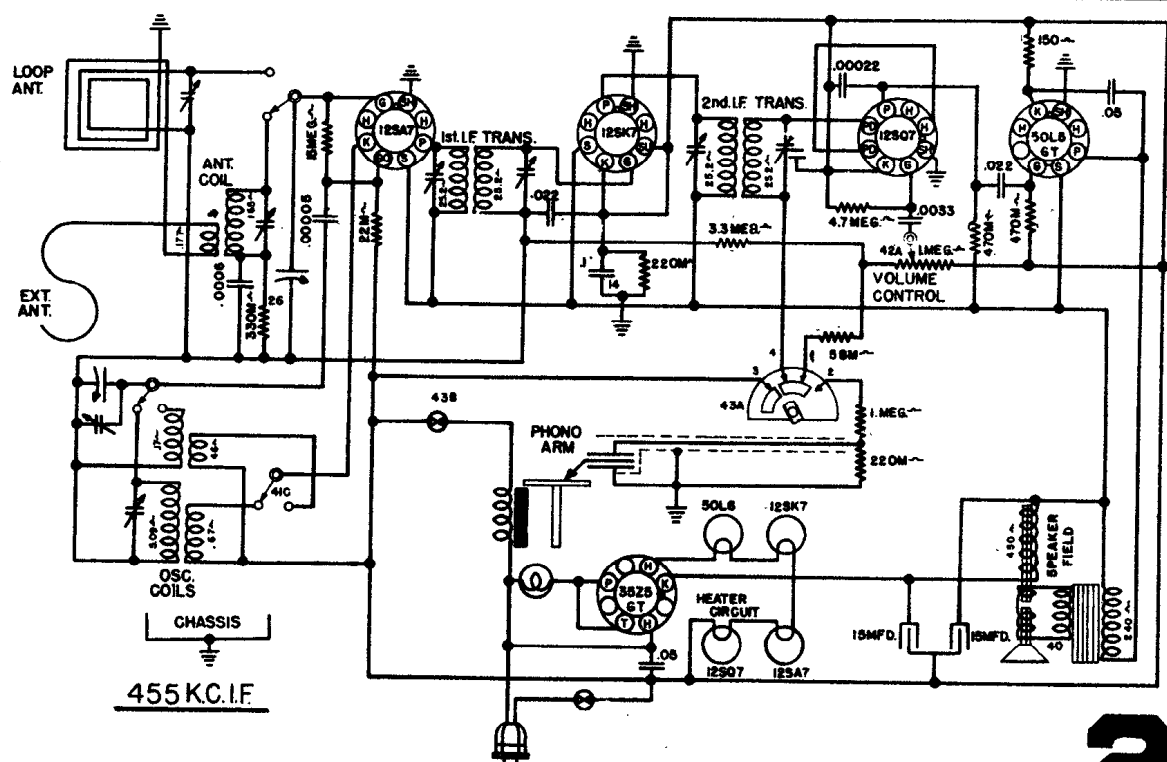



# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

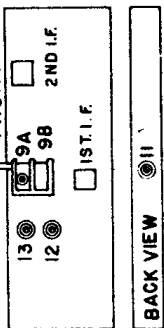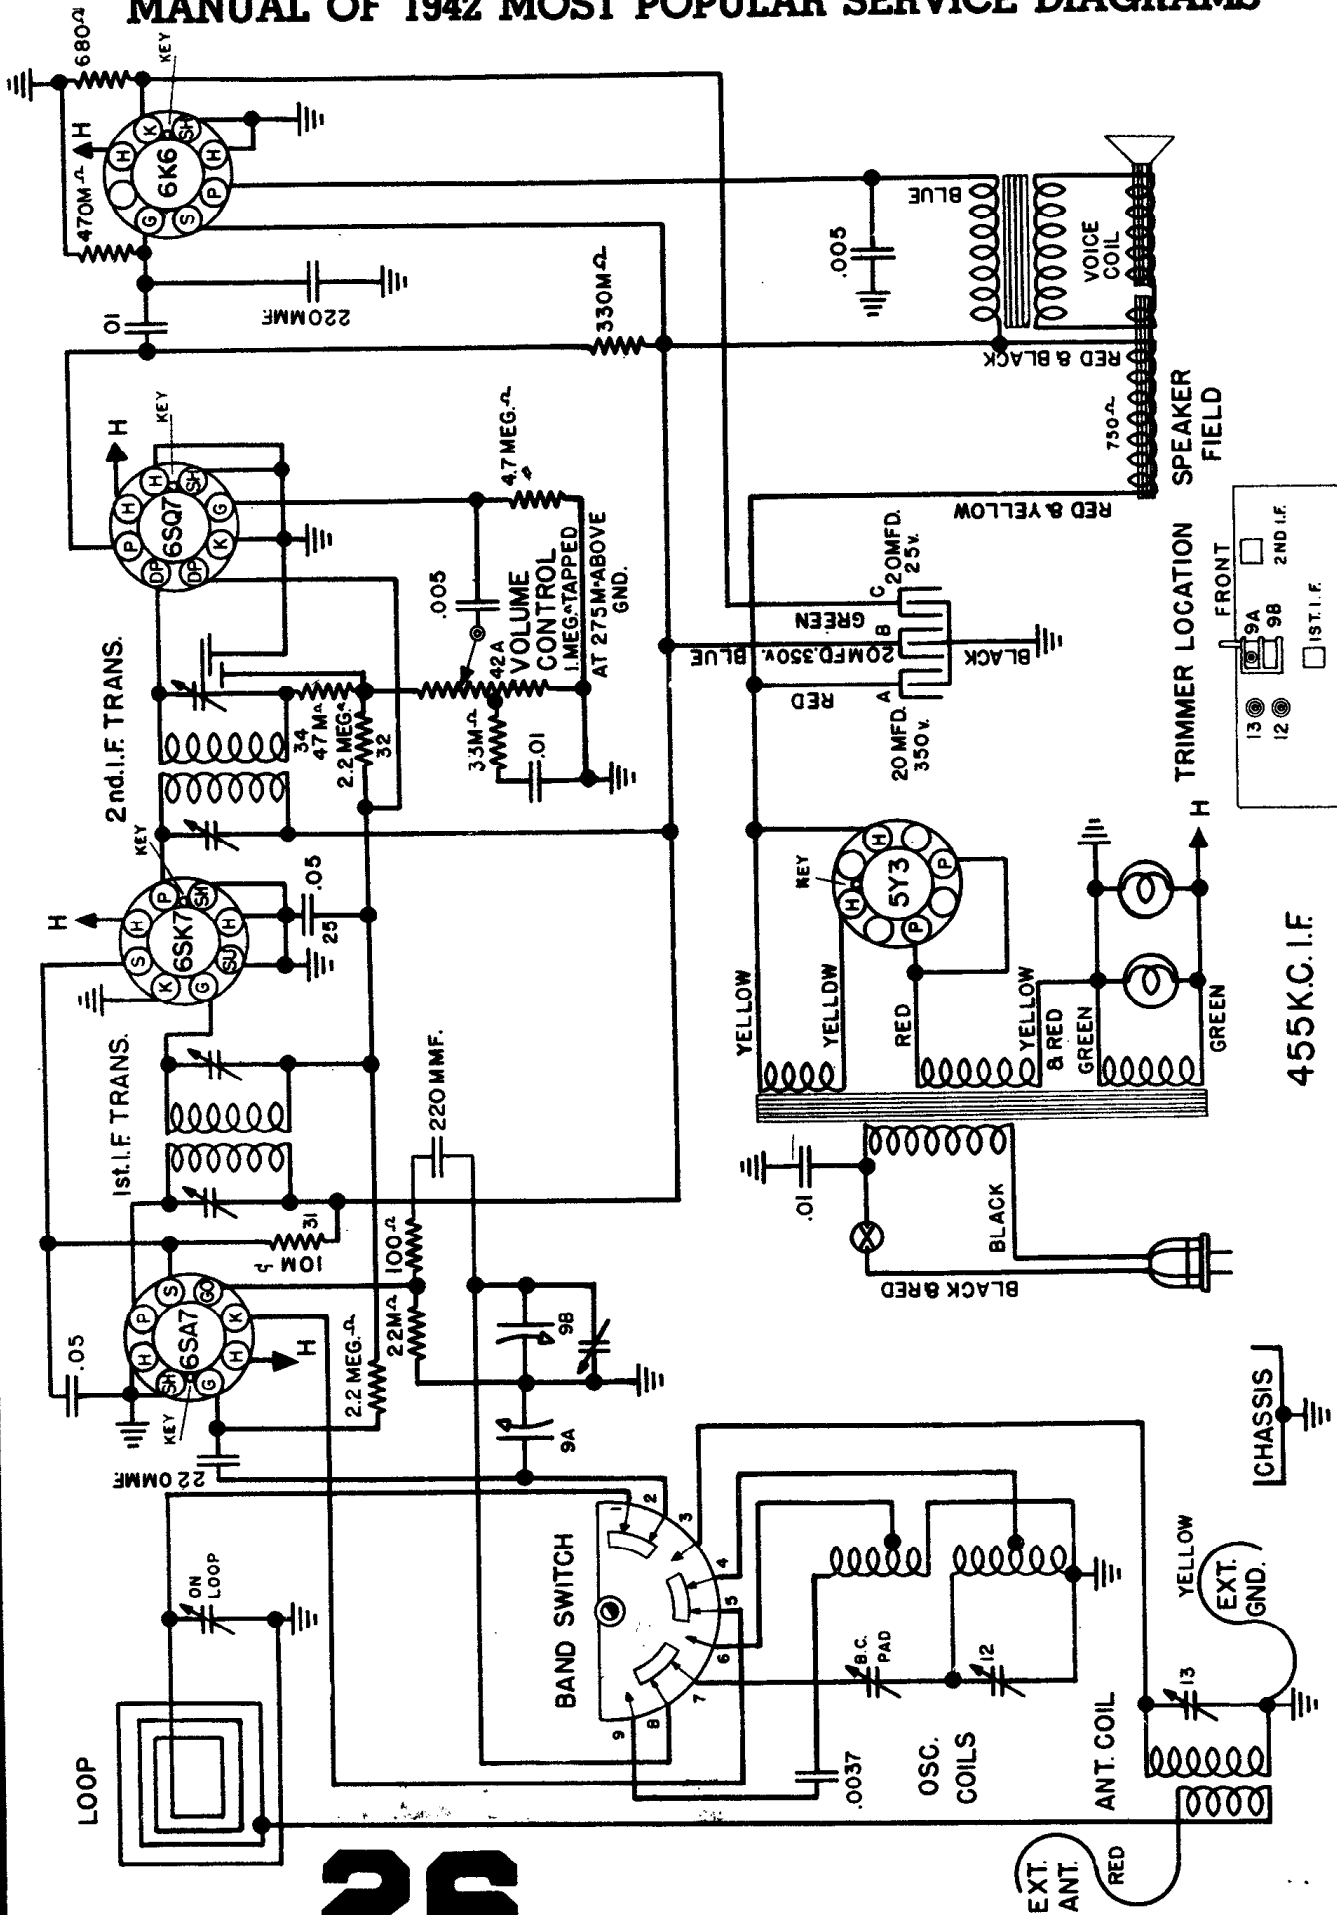


455K.C. I.F.

WIRING DIAGRAM — MODEL 53TF

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## CROSLY RADIO MODELS 52TG, 52TG-U,—CHASSIS No. 74-74U


| Item No. | Part No.   | Description                      | Item No. | Part No.  | Description              |
|----------|------------|----------------------------------|----------|-----------|--------------------------|
| 1        | —48858     | Bulb Dial Light 6.3V.            | 16       | NONE      |                          |
|          | L-132109   | Dial Light Socket Assm.          | 17       | NONE      |                          |
|          | —132099-2  | Dial Face.                       | 18       | NONE      |                          |
|          | —132097-5  | Dial Pointer.                    | 19       | —50671    | Res. 15 Megohm 1/4 W.    |
|          | —132117-2  | Celluloid Dial Lens.             | 20       | G15—39002 | Res. 22,000 Ohms 1/4 W.  |
|          | L-132131   | Drive Cord Assm.                 | 21       | G28—39002 | Res. 3.3 Megohm 1/4 W.   |
|          | —132119-4  | Drive Shaft.                     | 22       | G21—39002 | Res. 220,000 Ohms 1/4 W. |
|          | —51071     | Retaining Ring—Dr. Shaft.        | 23       | G18—39002 | Res. 68,000 Ohm 1/4 W.   |
| 2        | —132300-1  | Power Cord & Plug.               | 24       | G29—39002 | Res. 4.7 Megohm 1/4 W.   |
|          | —45738     | Lock Plate Power Cord.           | 25       | G23—39002 | Res. 470,000 Ohm 1/4 W.  |
| 3        | LB-132110  | Loop Assm. Antenna.              | 26       | G33—39002 | Res. 150 Ohm 1/2 W.      |
|          | —132102    | Spacer—Loop Mtg. (2)             | 27       | G23—39002 | Res. 470,000 Ohm 1/4 W.  |
|          | —23843     | Screw—Loop Mtg. (2)              |          | —132138   | Bracket—Speaker Mtg.     |
| 4        | G261—32002 | Coil B. C. Osc.                  | 28A      | —49774    | Vol. Control 1 Meg.      |
| 5        | G266—32004 | 1st I. F. Trans.                 | 28B      |           | Power Switch.            |
| 6        | G267—32004 | 2nd I. F. Trans.                 |          |           |                          |
| 7A       | —49736-1   | 2 Gang Var. Cond. { Antenna Sec. |          |           |                          |
| 7B       |            | { Oscillator Sec.                |          |           |                          |
| 8        | G63—39001  | Cond. .022 Mfd., 200V.           |          |           |                          |
| 9        | G65—39001  | Cond. .05 Mfd., 200V.            |          |           |                          |
| 10       | G67—39001  | Cond. .1 Mfd., 200V.             |          |           |                          |
| 11       | G9—39004   | Cond. 200 Mmf., Mica.            |          |           |                          |
| 12A      | —49664-B   | Cond. 15 Mfd., 140V., Elect.     |          |           |                          |
| 12B      |            | Cond. 15 Mfd., 120V., Elect.     |          |           |                          |
| 13       | G10—39001  | Cond. .0033 Mfd., 160V.          |          |           |                          |
| 14       | G63—39001  | Cond. .022 Mfd., 200V.           |          |           |                          |
| 15       | G65—39001  | Cond. .05 Mfd., 200V.            |          |           |                          |

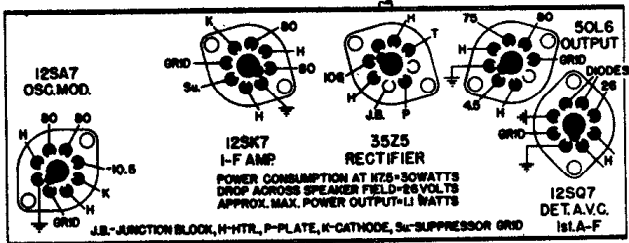

### ALIGNMENT PROCEDURE

| Alignment Sequence | Dummy Antenna | Frequency Setting | Input Connection to Receiver | Band Switch | Tuning Cond. Setting | Trimmer Adjusted         | Remarks  |
|--------------------|---------------|-------------------|------------------------------|-------------|----------------------|--------------------------|--|
| 1.                 | .0001 MF.     | 455 KC.           | Antenna Lead                 | BC          | Fully Open           | 1st I-F(2)<br>2nd I-F(2) | Adjust for maximum signal.<br>Adjust for maximum signal.             |
| 2.                 | .0001 MF.     | 1650 KC.          | Antenna Lead                 | BC          | Fully Open           | B.C. "Osc."              | Adjust for maximum output. Gang does not have to tune through signal |
| 3.                 | .0001 MF.     | 1400 KC.          | Antenna Lead                 | BC          | 140 Dial             | B.C. "Ant."              | Adjust for maximum output.   |

Repeat the original alignment procedure for more accurate adjustments. Always keep signal generator output as low as possible to prevent action of the A.S.C. circuit.

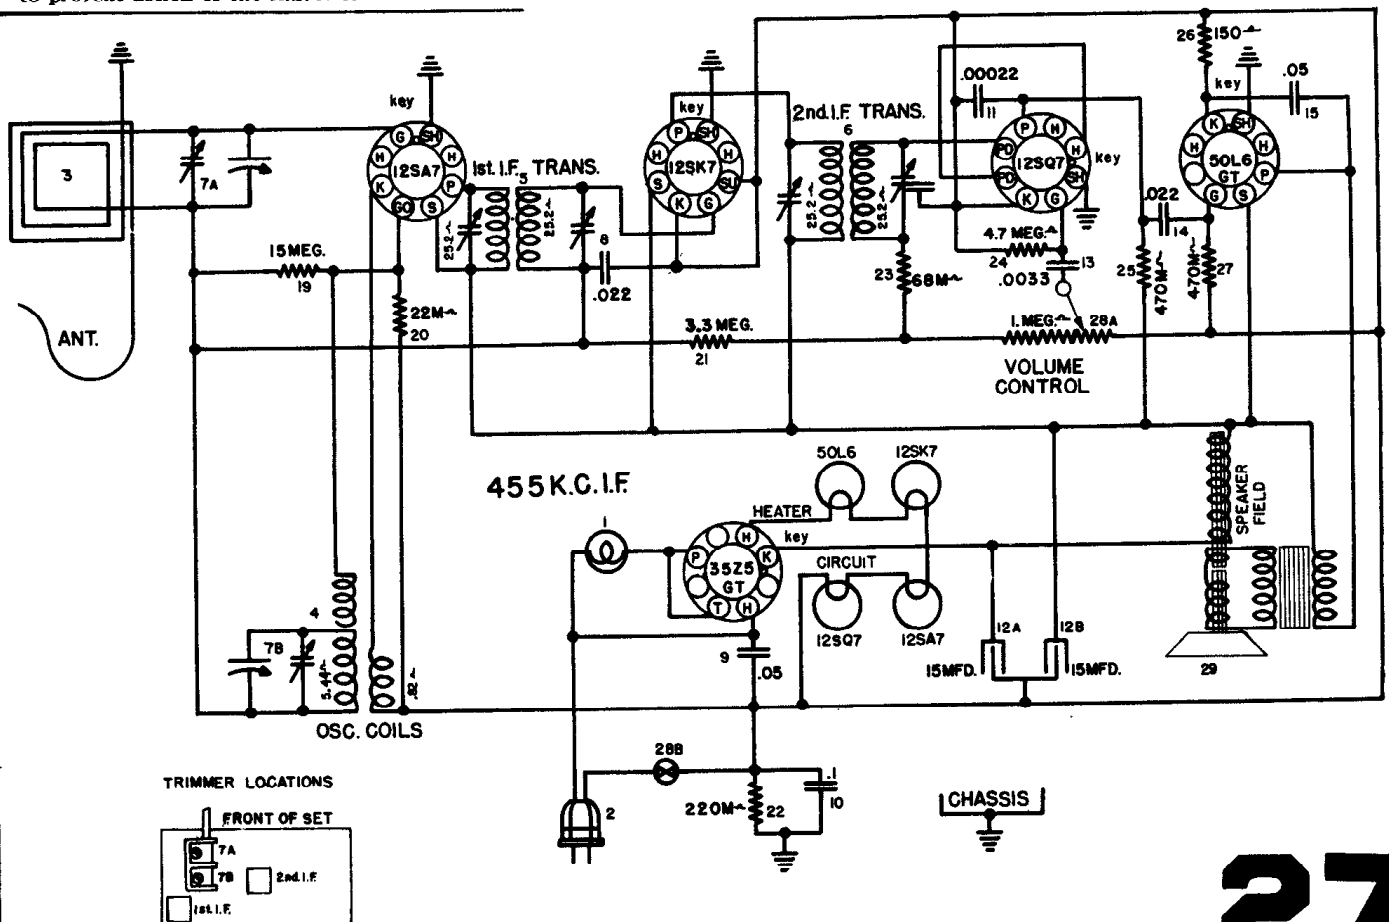

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## FOR CROSLEY MODELS 82CP, 82CQ—CHASSIS MODEL NO. 75

**STARTING THE CHANGER**—Turn the control knob clockwise to the "ON" position; after the turntable has attained speed, turn the control knob all the way counter clockwise to the "REJ." position for a few seconds and release. The bottom record will fall on the turntable and the unit will automatically play the entire stack of records. If the changing cycle should fail to start, repeat the above operation.

**REJECTING A RECORD**—To reject a record, it is only necessary to turn the control knob counter clockwise to the "REJ." position for a few seconds and release. A record can be rejected anytime the needle is in contact with the record.

**UNLOADING THE CHANGER**—Turn the control knob to the "OFF" position and remove the center spindle by pulling straight up. The played records may now be easily removed after which the center post should be replaced. The center spindle must be turned when being replaced so that it drops into correct position.

### TO PLAY RECORDS MANUALLY

**MANUAL OPERATION**—Manual operation is used for all home recordings and for single records if desired. **CAUTION:** For playing records of less than 10" diameter always set the record holding shelf in same position as is used for playing 12" records. Otherwise "Floating Jewel Tone System" may be damaged. 1. Remove the center spindle by pulling straight up. 2. Place record on turntable with desired selection upward. 3. Turn the control knob to the "ON" position. 4. Place pickup on record so the needle enters the outside groove of the record. 5. Adjust volume control to desired level.

**50 CYCLE OPERATION**—(Phonograph)—If operation is desired on 50 cycle current, a small spring, see parts list, must be added to the motor shaft.

**SERVICE**—If your receiver fails to operate satisfactorily, check the tubes to see that all are pushed well down into their respective sockets and that all grid clips are securely in place on the top caps of the tubes. Check the antenna (loop terminals), and power supply connections for good contact. If this visual inspection does not reveal the source of the trouble, disconnect the receiver from the power supply and call a competent service man, preferably your Crosley Dealer.

### ALIGNMENT PROCEDURE

Preliminary  
 Output Meter Connections..... Plate to Plate of 6K6GT's  
 Generator Ground Connection..... To Chassis or Ground Lead  
 Dummy Antenna to be in series with generator output..... See Chart Below  
 Position of Volume Control..... Fully On  
 Position of Tone Control..... Treble or Speech

| Align-<br>ment<br>Sequence | Dummy<br>Antenna  | Frequency<br>Setting | Input Connection<br>to Receiver       | Band<br>Switch | Tuning Cond.<br>Setting | Trimmer<br>Adjusted                              | Remarks   |
|----------------------------|---|----------------------|---------------------------------------|----------------|-------------------------|--|---|
| 1.                         | .02 MF.   | 455 Kc.              | Stator lug Rear section of Gang Cond. | B. C.          | Fully open              | 2nd I-F (2)<br>1st I-F (2)                       | Adjust for Maximum.<br>Adjust for Maximum.  |
| 2.                         | .0002 MF.   | 1650 Kc.             | Ant. Terminal                         | B. C.          | Fully open              | B. C. "OSC"<br>Trimmer                           | Adjust for peak; gang does not have to tune thru signal. Loop must be connected.      |
| 3.                         | .0002 MF.   | 600 Kc.              | Ant. Terminal                         | B. C.          | Approx. 60<br>on dial   | B. C. "OSC"<br>Series<br>Trimmer                 | Adjust for maximum output while rocking gang thru signal.                             |
| 4.                         | Repeat Step No. 2 to check possible shift due to series adjustment.   |                      |                                       |                |                         |  |   |
| 5.                         | .0002 MF.   | 1400 Kc.             | Ant. Terminal                         | B. C.          | Approx. 140<br>on dial  | B. C. "ANT"<br>Trimmer<br>B. C. "R-F"<br>Trimmer | Adjust for maximum output do not touch B. C. Osc. Trimmer. Adjust for maximum output. |
| 6.                         | 400 ohm<br>(carbon)   | 18.3 Mc.             | Ant. Terminal                         | S. W.          | Fully open              | S. W. "OSC"                                      | Adjust for peak. Gang does not have to tune thru signal.                              |
| 7.                         | 400 ohm<br>(carbon)   | 18.0 Mc.             | Ant. Terminal                         | S. W.          | Approx. 18              | S. W. "ANT"<br>Trimmer                           | Adjust for maximum output while rocking gang thru signal.                             |
| 8.                         | Repeat the above alignment procedure for more accurate adjustments. Always keep signal generator output as low as possible to prevent action of the A. V. C. circuit. |                      |                                       |                |                         |  |   |

**IMPORTANT ALIGNMENT NOTES**—When aligning the shortwave bands "OSC" trimmers care must be exercised to see that the circuits are aligned on the correct frequency and not on the image which is approximately 910 kilocycles less as indicated on the Receiver dial. To check, increase generator output, tune-in the generator frequency and then tune-in the image frequency which should be weaker than the fundamental and come in approximately 910 kilocycles lower on the Receiver dial than the fundamental. If image cannot be tuned-in, the "OSC" trimmer is adjusted to the wrong peak. (Correct peak is the second peak on trimmer from the closed position).

### TUBE VOLTAGE CHART

SOCKET VOLTAGES MEASURED AT 117.5 V. LINE (BETWEEN SOCKET PIN AND CHASSIS) WITH 1000 OHM PER VOLT, 500 V. RANGE VOLTMETER (D. C.)

| TUBE                             | FUNCTION | PIN NUMBER |     |       |       |                    |           |           |     |
|----------------------------------|----------|------------|-----|-------|-------|--------------------|-----------|-----------|-----|
|                                  |          | 1          | 2   | 3     | 4     | 5                  | 6         | 7         | 8   |
| 6SK7GT—R. F. Amplifier.....      |          | 0          | 0   | 0     | 0     | 0                  | 82        | 6.3 A. C. | 210 |
| 6SA7GT—OSC.—Mod.....             |          | 0          | 0   | 210   | 82BC  | 0                  | 0         | 6.3 A. C. | 0   |
| 6SK7GT—I. F. Amplifier.....      |          | 0          | 0   | 0     | 0     | -6.5BC -<br>-OSW - | 82        | 6.3 A. C. | 210 |
| 6SQ7—Det. A. S. C. 1st A. F..... |          | 0          | 0   | 1.4   | 0     | 0                  | 78        | 6.3 A. C. | 0   |
| 6J5GT—Phase Inverter.....        |          | 0          | 0   | 125   | N. C. | 0                  | 0         | 6.3 A. C. | 5.2 |
| 6K6GT(2)—Output.....             |          | 0          | 0   | 200   | 210   | 0                  | 0         | 6.3 A. C. | 13  |
| 5Y3G—Rectifier.....              |          | N. C.      | 300 | N. C. | 338   | J. B.              | 338 A. C. | J. B.     | 300 |

MAX. POWER OUTPUT..... 6.5 WATTS

POWER CONSUMPTION..... 85 WATTS

DROP ACROSS SPEAKER FIELD..... 90 VOLTS

N. C.—No Connection

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS






# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## INSTALLATION, OPERATING AND SERVICE INSTRUCTIONS for Crosley Model 72CA — Chassis Model No. 80

Model 72CA is a seven tube, two band, superhetrodyne receiver. It is designed to operate on Alternating Current (A.C.) electric circuits as specified on the Model and License label.

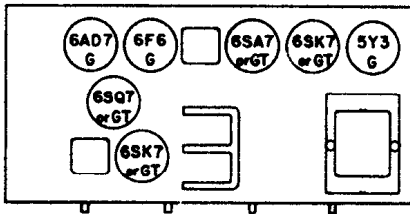

### SETTING THE PUSH BUTTONS

Note: When placing call tabs in the window be sure to arrange them according to their frequency (kilocycles) that is: the station whose frequency is well within the range covered by the No. 1 button, should be placed above that button and so on with the rest of the buttons to be set.

Remove station selector push button escutcheon. Turn the receiver on and let it operate for a sufficient length of time to permit the tubes to reach their normal operating conditions.

It is essential that the frequency (kilocycles) of the station selected be within the range of the push button to be set for that station. See Fig. 1.

1. Turn the band change switch to the "American" position. Using the station selector knob, carefully tune in the station to which the No. 1 push button is to be set. Note program.
2. Turn the band change switch to the "Automatic" position and using a small screw driver, carefully turn in a clockwise direction the Oscillator adjusting screw until the station previously tuned in manually is heard again. Adjust for maximum output in the speaker.
3. Adjust the Antenna adjusting screw for maximum volume in the speaker.
4. Turn band change switch from "Automatic" to "American" and back again to check if adjustment has been correctly made. There should be no change in tone quality when switched from one to the other.
5. Repeat above procedure for the remaining push buttons.

To tune the receiver with the push buttons, set the band change switch on "Automatic" and depress completely the button corresponding to the station you wish to hear.

### TUBE VOLTAGE CHART

SOCKET VOLTAGES MEASURED AT 117.5 V. LINE (BETWEEN SOCKET PIN AND CHASSIS) WITH 1000 OHM PER VOLT, 500 V. RANGE VOLTMETER (D. C.)

| TUBE                         | FUNCTION | PIN NUMBER |     |       |         |       |           |           |     |
|------------------------------|----------|------------|-----|-------|---------|-------|-----------|-----------|-----|
|                              |          | 1          | 2   | 3     | 4       | 5     | 6         | 7         | 8   |
| 6SK7—R. F. Amplifier         |          | 0          | 0   | 0     | 0       | 0     | 80        | 6.3 A. C. | 235 |
| 6SA7—OSC. — Mod.             |          | 0          | 0   | 260   | 80      | 0     | 0         | 6.3 A. C. | 0   |
| 6SK7—I. F. Amplifier         |          | 0          | 0   | 0     | 0       | 0     | 80        | 6.3 A. C. | 260 |
| 6SQ7—Det. A. S. C. 1st A. F. |          | 0          | 0   | 0     | 0       | 0     | 85        | 6.3 A. C. | 0   |
| 6AD7—Phase Inverter          |          | 0          | 0   | 255   | 260     | 0     | 180       | 6.3 A. C. | 23  |
| 6F6—Output                   |          | 0          | 0   | 255   | 260     | 0     | 235       | 6.3 A. C. | 23  |
| 5Y3G—Rectifier               |          | N. C.      | 330 | J. B. | 300A.C. | J. B. | 300 A. C. | J. B.     | 330 |

MAX. POWER OUTPUT..... 6.5 WATTS  
POWER CONSUMPTION..... 85 WATTS  
DROP ACROSS SPEAKER FIELD..... 70 VOLTS  
J. B.—Junction Block. N. C.—No Connection

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# 31

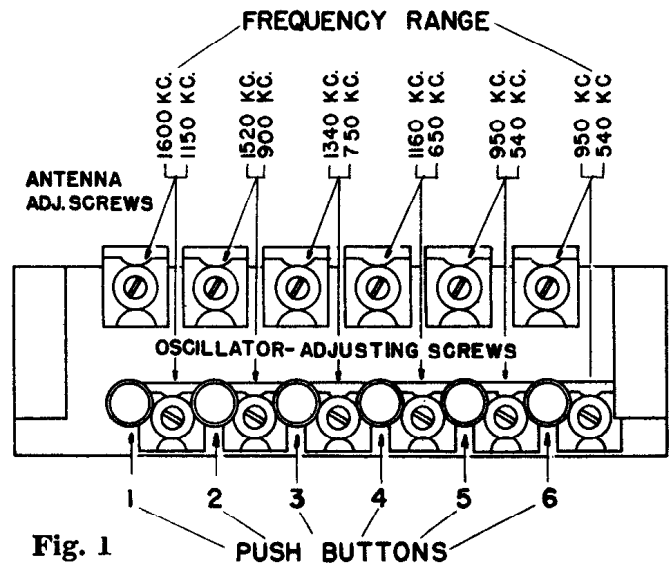


Fig. 1

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS


## Crosley Model 72CA — Chassis Model No. 80

### ALIGNMENT PROCEDURE

Output Meter Connections.....Plate of 6AD7 to Plate of 6F6  
 Generator Ground Connection.....To Chassis or Ground Lead  
 Dummy Antenna to be in series with generator output.....See Chart Below  
 Position of Volume Control.....Fully On  
 Position of Tone Control.....Treble or Speech

| Alignment Sequence | Dummy Antenna   | Frequency Setting | Input Connection to Receiver          | Band Switch | Tune/nd Cond. Setting | Trimmer Adjusted           | Remarks  |
|--------------------|---|-------------------|---------------------------------------|-------------|-----------------------|----------------------------|--|
| 1.                 | .02 MF.   | 455 Kc.           | Stator lug Rear section of Gang Cond. | B. C.       | Fully open            | 2nd I-F (2)<br>1st I-F (2) | Adjust for Maximum.<br>Adjust for Maximum.   |
| 2.                 | .02 MF.   | 455 Kc.           | Stator lug Rear section of Gang Cond. | B. C.       | Fully Open            | Adj. Wave Trap Trimmer.    | Adjust for Minimum.  |
| 3.                 | .0002 MF.   | 1650 Kc.          | Ant. Terminal                         | B. C.       | Fully open            | B. C. "OSC" Trimmer        | Adjust for peak; gang does not have to tune thru signal. Loop must be connected.           |
| 4.                 | .0002 MF.   | 600 Kc.           | Ant. Terminal                         | B. C.       | Approx. 60 on dial    | B. C. "OSC" Series Trimmer | Adjust for maximum output while rocking gang thru signal.                                  |
| 5.                 | Repeat Step No. 3 to check possible shift due to series adjustment.   |                   |                                       |             |                       |                            |  |
| 6.                 | .0002 MF.   | 1400 Kc.          | Ant. Terminal                         | B. C.       | Approx. 140 on dial   | B.C. LOOP "ANT" Trimmer    | Adjust for maximum output do not touch B. C. Osc. Trimmer.                                 |
| 7.                 | 400 ohm (carbon)  | 18.3 Mc.          | Ant. Terminal                         | S. W.       | Fully open            | S. W. "OSC"                | Adjust for peak. Gang does not have to tune thru signal.                                   |
| 8.                 | 400 ohm (carbon)  | 18.0 Mc.          | Ant. Terminal                         | S. W.       | Approx. 18            | S. W. "ANT" Trimmer        | Adjust for maximum output while rocking gang thru signal. do not touch B. C. Osc. Trimmer. |
| 9.                 | Repeat the above alignment procedure for more accurate adjustments. Always keep signal generator output as low as possible to prevent action of the A. S. C. circuit. |                   |                                       |             |                       |                            |  |

**IMPORTANT ALIGNMENT NOTES**—When aligning the shortwave band "OSC" trimmer care must be exercised to see that the circuit is aligned on the correct frequency and not on the image which is approximately 910 kilocycles less as indicated on the Receiver dial. To check, increase generator output, tune-in the generator frequency and then tune-in the image frequency which should be weaker than the fundamental and come in approximately 910 kilocycles lower on the Receiver dial than the fundamental. If image cannot be tuned-in, the "OSC" trimmer is adjusted to the wrong peak. (Correct peak is the second peak on trimmer from the closed position.)

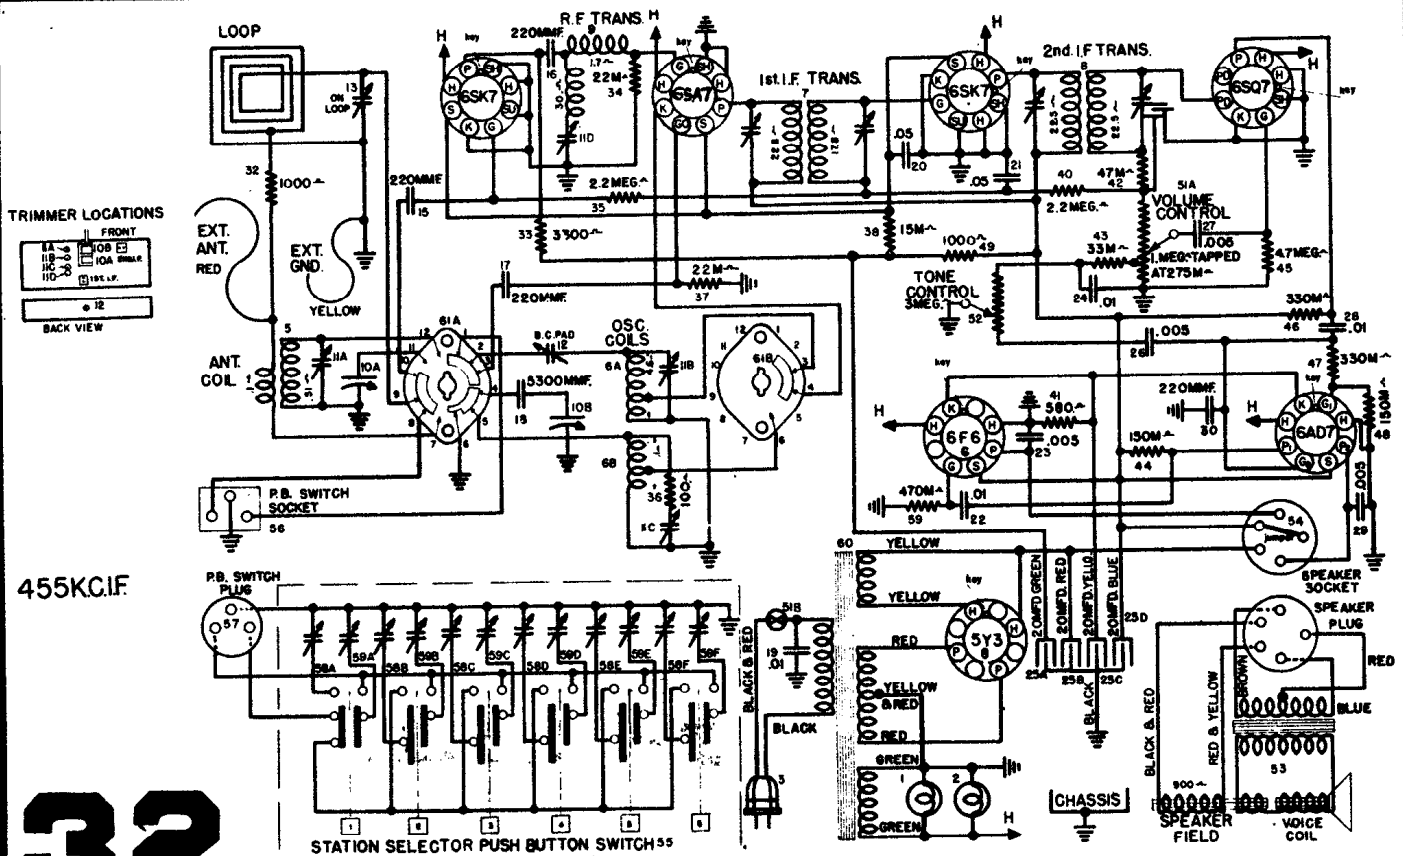

# 32

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## INSTALLATION, OPERATION AND SERVICE INSTRUCTIONS FOR CROSLY RADIO MODEL 52-TQ — CHASSIS No. 83

**THE RADIO-PHONO SWITCH** (center knob) when turned to the right is for radio broadcast reception and when turned to the left cuts off the radio signals and switches in changer. The Volume Control and Line Switch of the receiver must be turned on before the motor will operate. This volume control also controls the output level of the phonograph.

**THE AUTOMATIC RECORD CHANGER**—The record changer built in this combination will automatically play a series of twelve 10" or ten 12" records of the standard 78 R. P. M. type. The records must be all one size when loading, and may consist of less records than listed above.

### ALIGNMENT PROCEDURE CHART

| Alignment Sequence | Dummy Antenna | Frequency Setting | Input Connection to Receiver | Phono. Radio Switch | Tuning Cond. Setting | Trimmer Adjusted         | Remarks   |
|--------------------|---------------|-------------------|------------------------------|---------------------|----------------------|--------------------------|---|
| 1.                 | .0001 MF.     | 455 KC.           | Antenna Lead                 | Radio               | Fully Open           | 1st I-F(2)<br>2nd I-F(2) | Adjust for maximum signal. Adjust for maximum signal.                 |
| 2.                 | .0001 MF.     | 1650 KC.          | Antenna Lead (red)           | Radio               | Fully Open           | B.C. "Osc."              | Adjust for maximum output. Gang does not have to tune through signal. |
| 3.                 | .0001 MF.     | 1400 KC.          | Antenna Lead (red)           | Radio               | 140 Dial             | B.C. "Ant."              | Adjust for maximum output.  |

Repeat the original alignment procedure for more accurate adjustments. Always keep signal generator output as low as possible to prevent action of the A. S. C. circuit.


Socket Voltage is measured @ 117.5 V line

### TUBE VOLTAGE CHART

(BETWEEN SOCKET PINS AND B-) WITH 1000 OHM PER VOLT—500 V. RANGE D. C. VOLTMETER

| TUBE  | FUNCTION   | PIN NUMBER |      |      |      |       |       |      |      |
|-------|------------|------------|------|------|------|-------|-------|------|------|
|       |            | 1          | 2    | 3    | 4    | 5     | 6     | 7    | 8    |
| 12SA7 | Osc. Mod.  | ....       | .... | 123  | 78   | Neg.  | 0     | .... | Neg. |
| 12SK7 | I. F. Amp. | ....       | .... | 0    | Neg. | 0     | 78    | .... | 123  |
| 12SQ7 | Det., Etc. | ....       | 0    | 0    | 0    | Neg.  | 18.5* | .... | 0    |
| 50L6  | B. P. O.   | ....       | .... | 112  | 123  | 0     | ....  | .... | 8.5  |
| 35Z5  | Rect.      | ....       | .... | .... | .... | 208AC | ....  | .... | 188  |

All voltages may vary 10% of values indicated. Neg. indicates Neg. reading on Voltmeter Scale but of too small a value to record accurately.  
\*Measured on 100 V. Scale. Power consumption at 117.5 V. line, 60 watts. Phono Motor 20 watts additional. Drop across Speaker Field—65 V. Current thru Speaker Field—90 M. A.

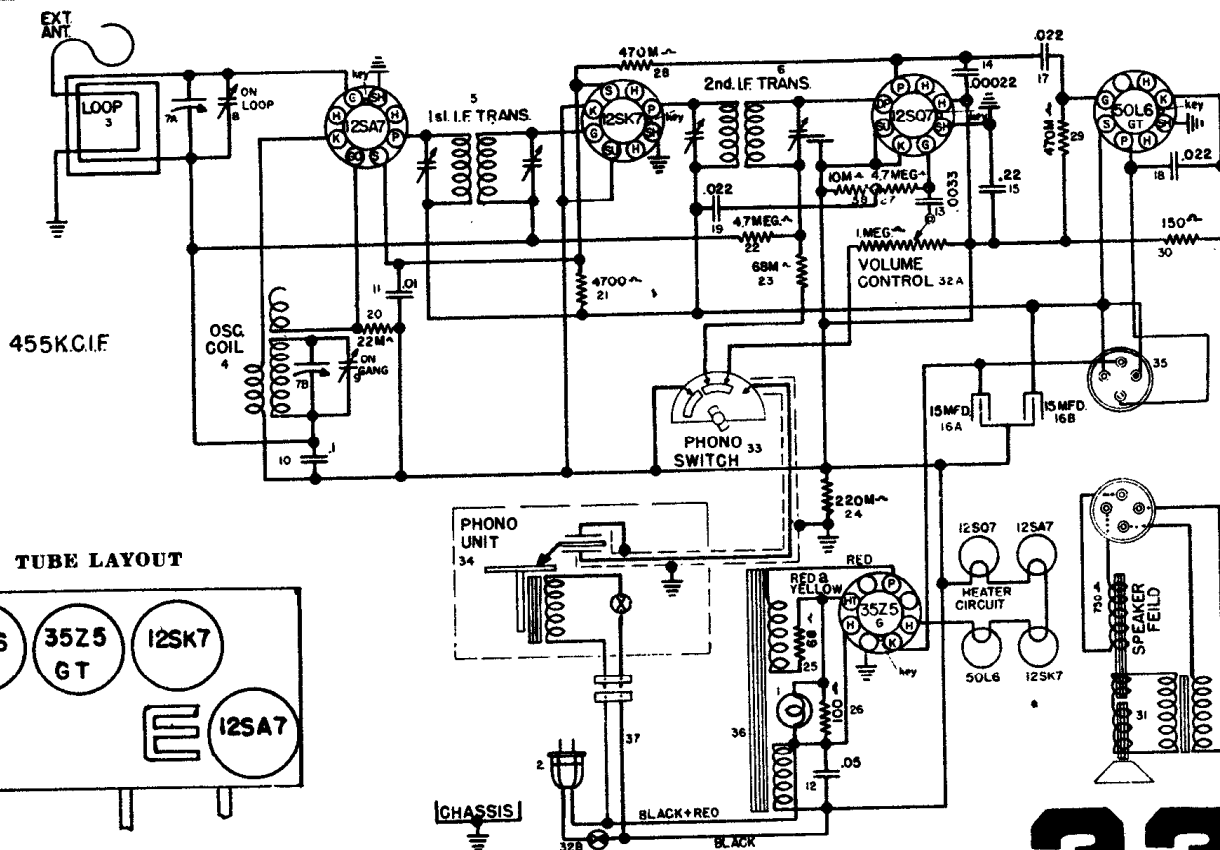





DETROLA

# Automatic Record Changer


Model N-100 and N-200

Turn **automatic record support** for the size of record to be played—10-inch or 12-inch—and flip the **record alignment plate** away from the turntable.

**Tonearm** should be moved to engage notch marked "A" (automatic) on base of **tonearm** (See Fig. 3).

Place a series of up to twelve ten-inch records or a series of up to ten twelve-inch records on **center spindle** and **automatic record support**. Flip **record alignment plate** on to records.

Move **control lever** to "ON" position, hold for about ½ second to start automatic operation, then release.

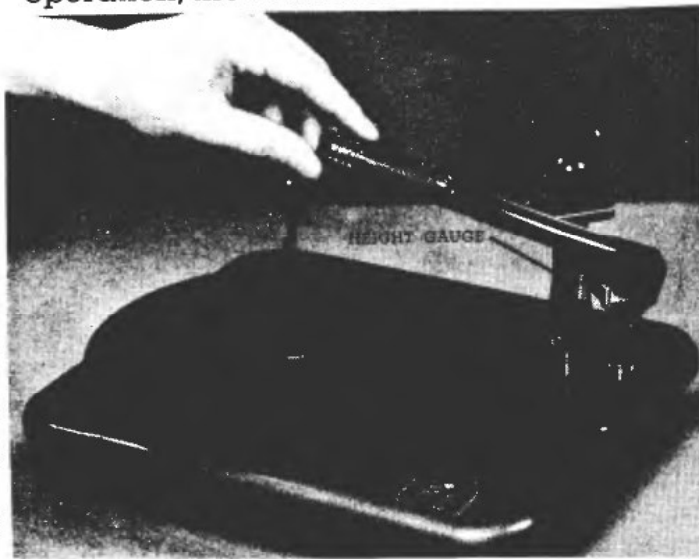

## THE AUTOMATIC REJECT OPERATION

If, while playing a record, you desire to skip the remainder of the recording and pass immediately to the next record of the series, move the **control lever** to "REJ" (reject) position, then release.

## THE MANUAL REJECT OPERATION

If you desire to skip a number of records:

1. Lift the **tonearm** off the record and place in its normal or rest position, clear of the records.
2. Turn the **manual reject knob** clockwise, then release, dropping one record. Repeat until desired record is obtained, then carefully replace needle on edge of record.

## TO REMOVE RECORDS

Always drop all the records from the **automatic record support** (see "manual-reject operation") before removing the records from the **spindle**.

1. Flip **record alignment plate** away from records.
2. Remove **tonearm** to its normal or rest position.
3. Lift records vertically.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

To play a home recording disc, up to 10 inches in diameter, move **control lever** to "OFF" position, then:

1. Turn **automatic record support** for a 12-inch record.
2. **Tonearm** should be moved to engage notch marked "H" (home recording) on base of **tonearm** (See Fig. 2).
3. Move **control lever** to "ON" position and allow **tonearm** to go through its record changing cycle. If the home recording disc is 10" in diameter, the **tonearm** will fall correctly on the record; but for smaller records, the **tonearm** must be placed on the record by hand.
4. At the conclusion of the home recording selection, either return the **tonearm** to the rest position by hand or move the **control lever** to "REJ" position, then release.


## SEMI-AUTOMATIC OPERATION

Old records that have neither a standard eccentric nor spiral finishing groove do not operate the automatic trip mechanism. They may be played either in a series or singly by moving the **control lever** to the "REJ" position at the conclusion of each selection.


35

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## DETROLA MODEL 441


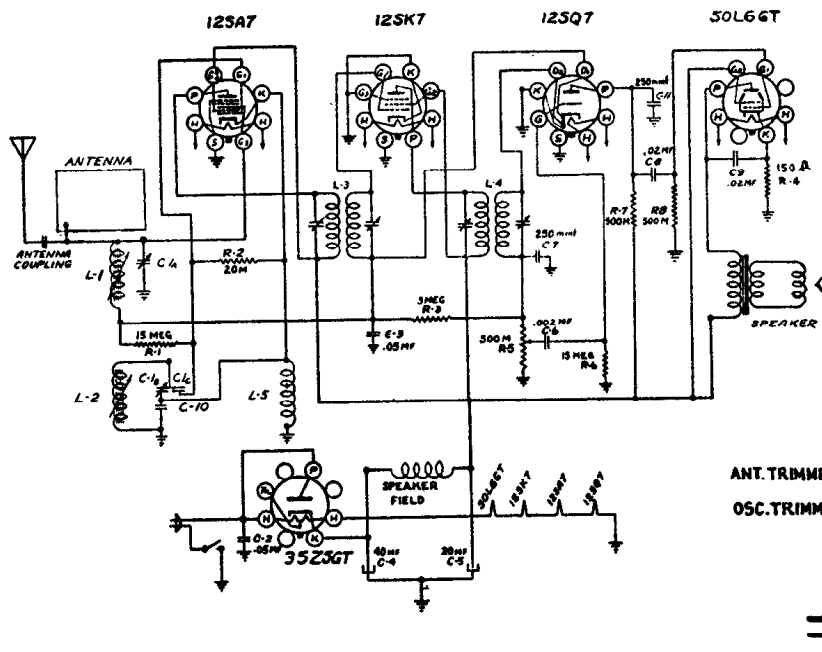


- A signal generator which will provide an accurately calibrated signal at the frequencies listed.
- An output meter.
- A non-metallic screw driver.
- Dummy antennae—.1 mfd., 200 mmf.


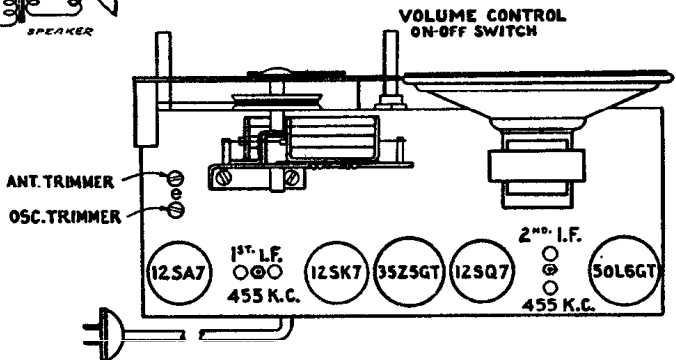


| GENERATOR    | CONNECTION AT RADIO | DUMMY ANTENNA | DIAL      | TRIMMER TO TUNE    | REMARKS           |
|--------------|---------------------|---------------|-----------|--------------------|-------------------|
| I.F. 455 kc. | 12SA7 Grid          | .1 mfd.       | H. F. end | I.F. Transformers  | Tune to Max.      |
| 1720 kc      | Ext. Ant. Wire      | 200 mmf.      | H. F. end | Oscillator Trimmer | Set Limit of band |
| 1400 kc      | Ext. Ant. Wire      | 200 mmf.      | 1400      | Antenna Trimmer    | Tune to Max.      |

### MODEL 3782 AC-DC AND BATTERY PERSONAL RADIO

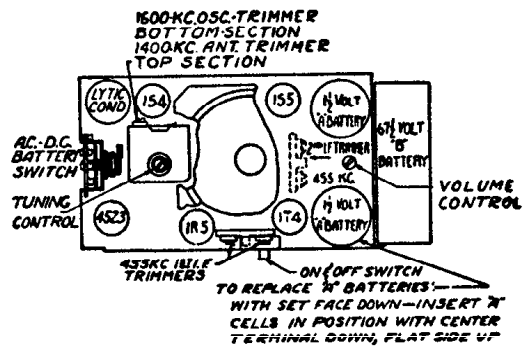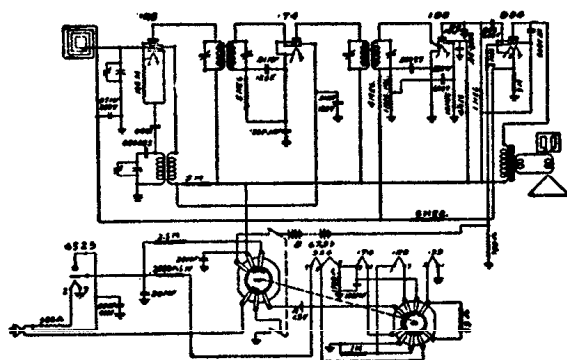

### MODELS 389 SERIES

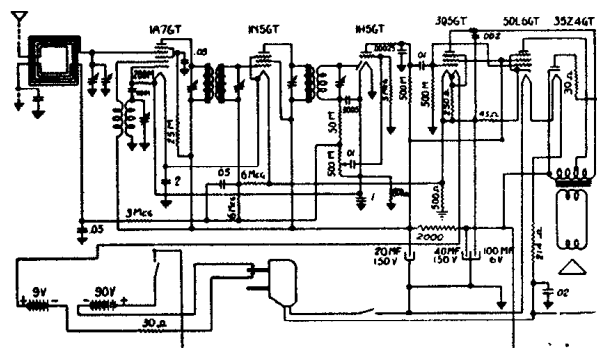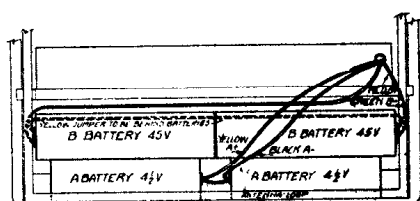


# 36

Detrola Radio  
I.F. 455 KC.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

DETROLA CORPORATION


MODEL 390

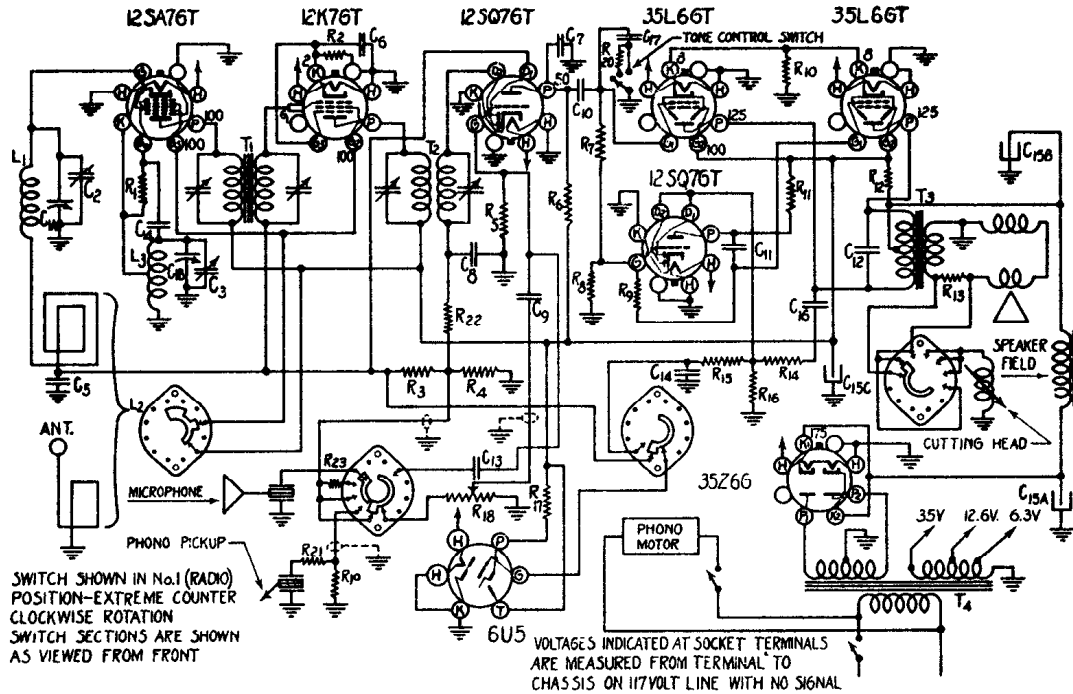

| Schematic Location | Part Number | Description  |
|--------------------|-------------|--|
|                    |             | <b>CHASSIS PARTS</b>                               |
|                    | 4417        | Button, Snap (Dial Mounting)                       |
|                    | 8931        | Cable, Tuning Tube                                 |
|                    | 2163        | Cable, drive                                       |
|                    | 3227        | Cap, Grld  |
| R18                | 8910        | Control, Volume and Switch                         |
|                    | 1732        | Cord, Line   |
|                    | 6424        | Clamp, Linecord                                    |
|                    | 4314        | Clamp, Tapped—For Tuning Tube                      |
|                    | 4315        | Clamp, Plain—For Tuning Tube                       |
| L3                 | 8422        | Coil, Oscillator                                   |
| L1                 | 8423        | Coil, Tracking                                     |
| C1a,b              | 8911        | Condenser, Variable (with Pulley)                  |
| C2,3               | 8504        | Condenser, Dual Trimmer                            |
| C15a,b,c           | 8425        | Condenser, Electrolytic (20-250)—(20-150)—(20-150) |
| C4                 |             | Condenser, 100 Mmf. Mica                           |
| C5,14              |             | Condenser, 1 Mfd. 200 v.                           |
| C6                 |             | Condenser, .05 Mfd. 200 v.                         |
| C7                 |             | Condenser, 250 Mmf. Mica                           |
| C8                 |             | Condenser, 100 Mmf. Mica                           |
| C9                 |             | Condenser, .002 Mfd. 600 v.                        |
| C10,16             |             | Condenser, .01 Mfd. 400 v.                         |
| C11                |             | Condenser, .05 Mfd. 400 v.                         |
| C12,13             |             | Condenser, .001 Mfd. 600 v.                        |
| C17                |             | Condenser, .005 Mfd. 600 v.                        |
|                    | 7209        | Grommet, Tuner Assembly Mtg.                       |
|                    | 9121        | Dial Chart   |
|                    | 8941        | Microphone Socket Assembly                         |
|                    | 6244        | Pulley, Idler                                      |
|                    | 5026        | Painter  |
|                    | 6158        | Pilot Lite   |
|                    | 1207        | Retainer, "C" Washer (Holds Tuning Shaft)          |
| R1                 |             | Resistor, 20M, 1/3 Watt                            |
| R2                 |             | Resistor, 200 Ohm, 1/3 Watt                        |



| Schematic Location | Part Number | Description                             |
|--------------------|-------------|---|
| R3,4,14,16         |             | Resistor, 1 Meg. 1/3 Watt               |
| R5                 |             | Resistor, 10 Meg. 1/3 Watt              |
| R6,7,8,9,11        |             | Resistor, 200M. 1/3 Watt                |
| R10                |             | Resistor, 120 Ohm, 1/2 Watt             |
| R12                |             | Resistor, 1000 Ohm, 1 Watt              |
| R13                |             | Resistor, 35 Ohm, 1/2 Watt              |
| R15                |             | Resistor, 2 Meg. 1/3 Watt               |
| R17                |             | Resistor, 1 Meg (in Tuning Tube Socket) |
| R19,20,21,22       |             | Resistor, 50M, 1/3 Watt                 |
| R23                |             | Resistor, 4 Meg. 1/3 Watt               |

RECORDING ARM ADJUSTMENTS

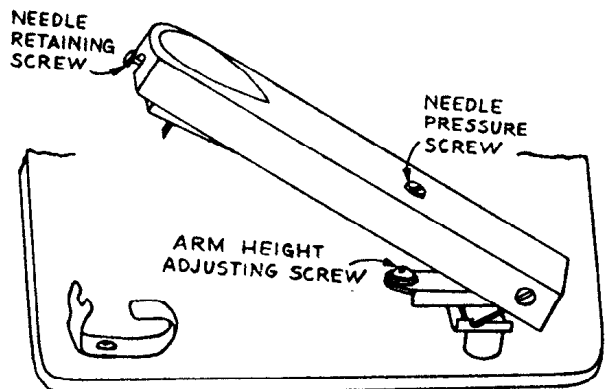

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

De Wald Radio Mfg. Corp. New York

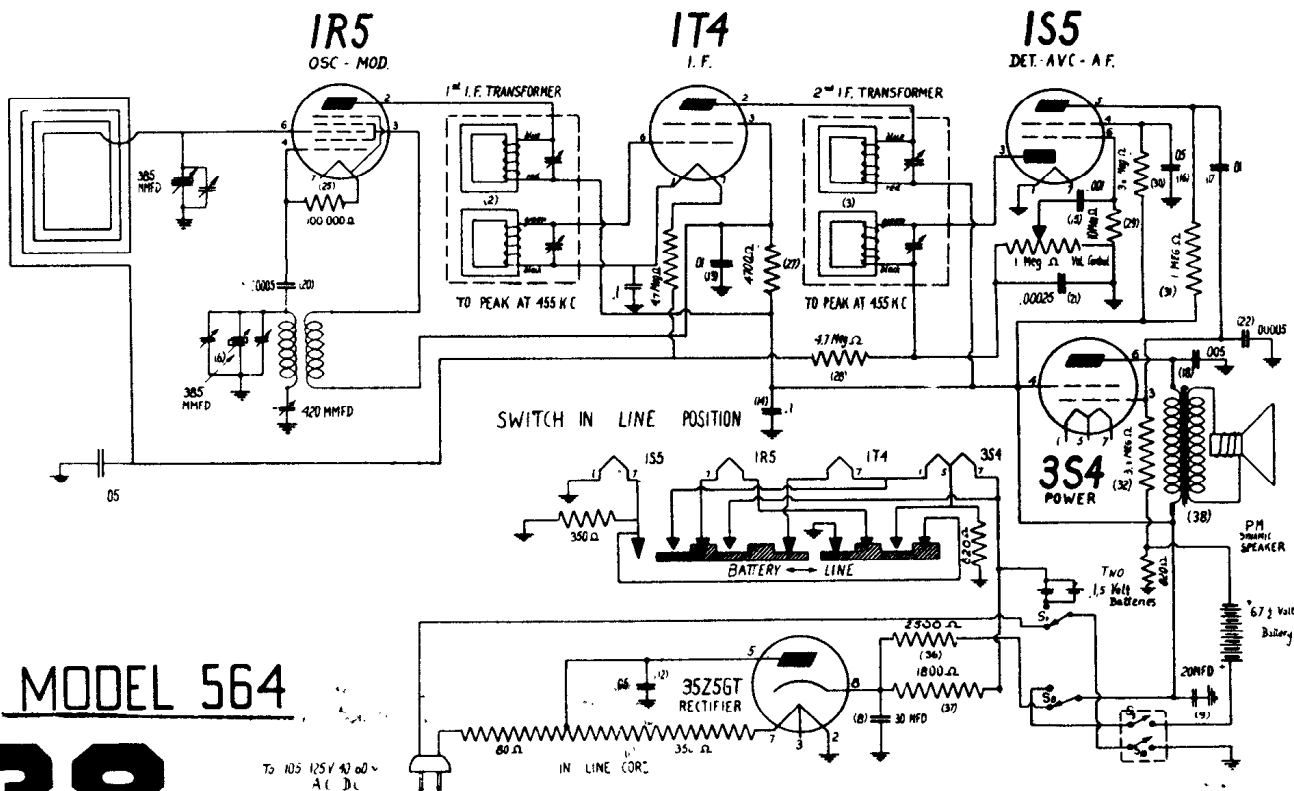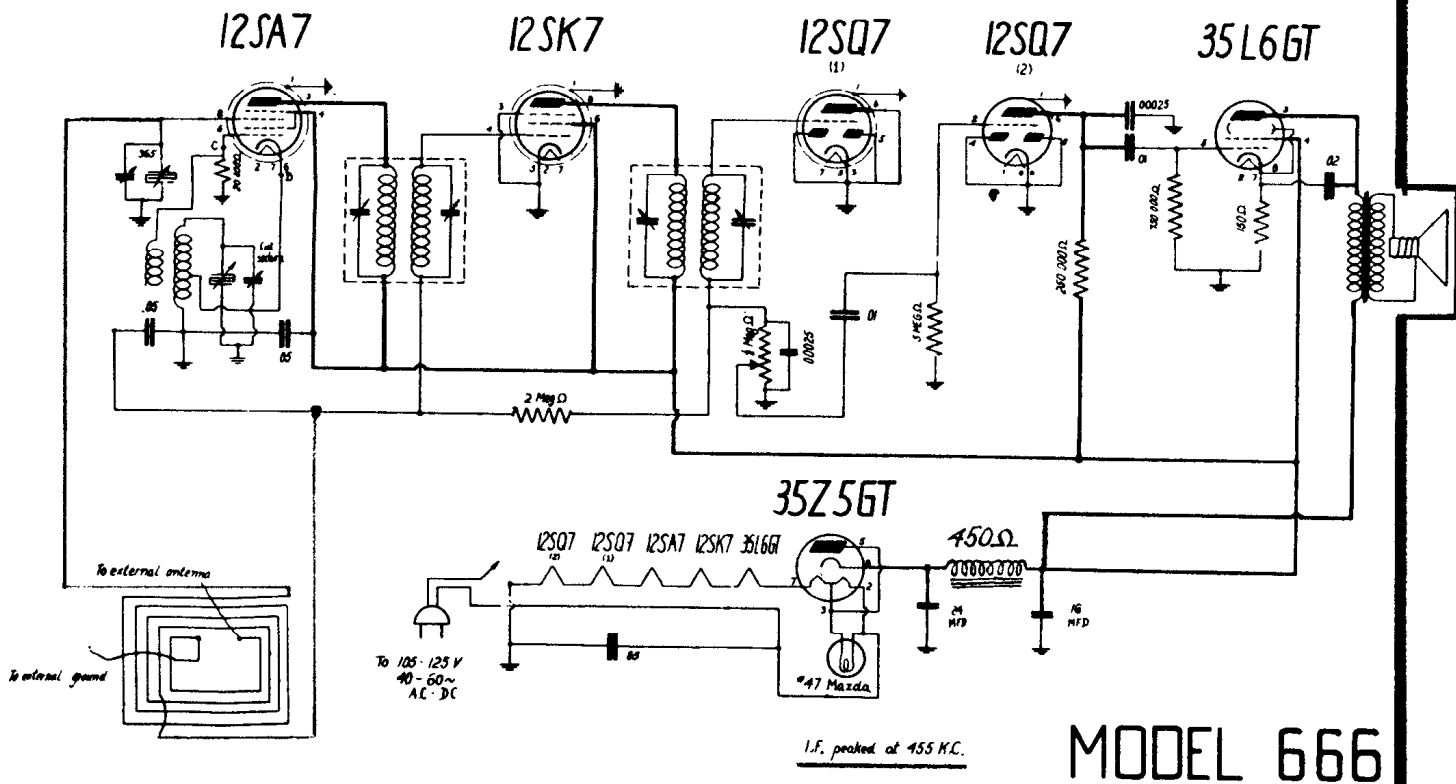

# 38

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## Emerson Radio

**MODELS: EC-296, EC-301, EC-314, EC-315, EC-327, EC-336, EC-347, EC-353, EC-366, EC-242, EC-376 and EC-425**

|                |                                       |
|----------------|---------------------------------------|
| R1             | 20,000 ohm ¼ watt carbon resistor     |
| R2, R6         | 15 megohm ¼ watt carbon resistor      |
| R3             | 140 ohm ½ watt wire-wound resistor    |
| R4             | 3 megohm ¼ watt carbon resistor       |
| R5             | Volume control .5 megohm              |
| R7, R8         | 500,000 ohm ¼ watt carbon resistor    |
| R11            | 200,000 ohm ¼ watt carbon resistor    |
| C1, C2         | Two-gang variable condenser           |
| C3, C16        | 0.002 mf, 600 volt tubular condenser  |
| C4, C15        | 0.0002 mf, 600 volt tubular condenser |
| C5, C11        | Trimmers, part of variable condenser  |
| C6, C7, C8, C9 | Trimmers, part of i-f transformers    |
| C10            | 0.05 mf, 200 volt tubular condenser   |
| C14            | 0.05 mf, 400 volt tubular condenser   |
| C17, C18       | 0.02 mf, 400 volt tubular condenser   |
| C26            | 0.2 mf, 200 volt tubular condenser.   |

### I-f Alignment

Swing the variable condenser to the minimum capacity position. Feed 455 kc to the grid of the 12SA7 tube through a .01 mf condenser and adjust the four i-f trimmers for maximum response.

Note: The grid of the 12SA7 tube is connected to the stator lug of the rear variable condenser section. Connection may be made with a test clip.


### VOLTAGE ANALYSIS

| Tube  | Plate | Screen | Cathode |
|-------|-------|--------|---------|
| 12SA7 | 88    | 88     | 0       |
| 12SK7 | 88    | 88     | 0       |
| 12SQ7 | 30    | —      | 0       |
| 50L6  | 82    | 88     | 5.6     |

Voltage at 35Z5 cathode—120 volts.  
Voltage across speaker field—32 volts.  
Voltage across pilot light—4.5 volts.

### R-f Alignment

Set the dial pointer at 140. Set the signal generator at 1400 kc and feed its output into a loop of wire about 12 inches in diameter. Hold this radiating loop about 12 inches from and parallel to the receiver loop antenna. Advance the output of the signal generator until deflection is obtained on the output meter. Adjust first the oscillator trimmer (on front section of variable condenser) then the antenna trimmer (on rear section of variable condenser) for maximum response.

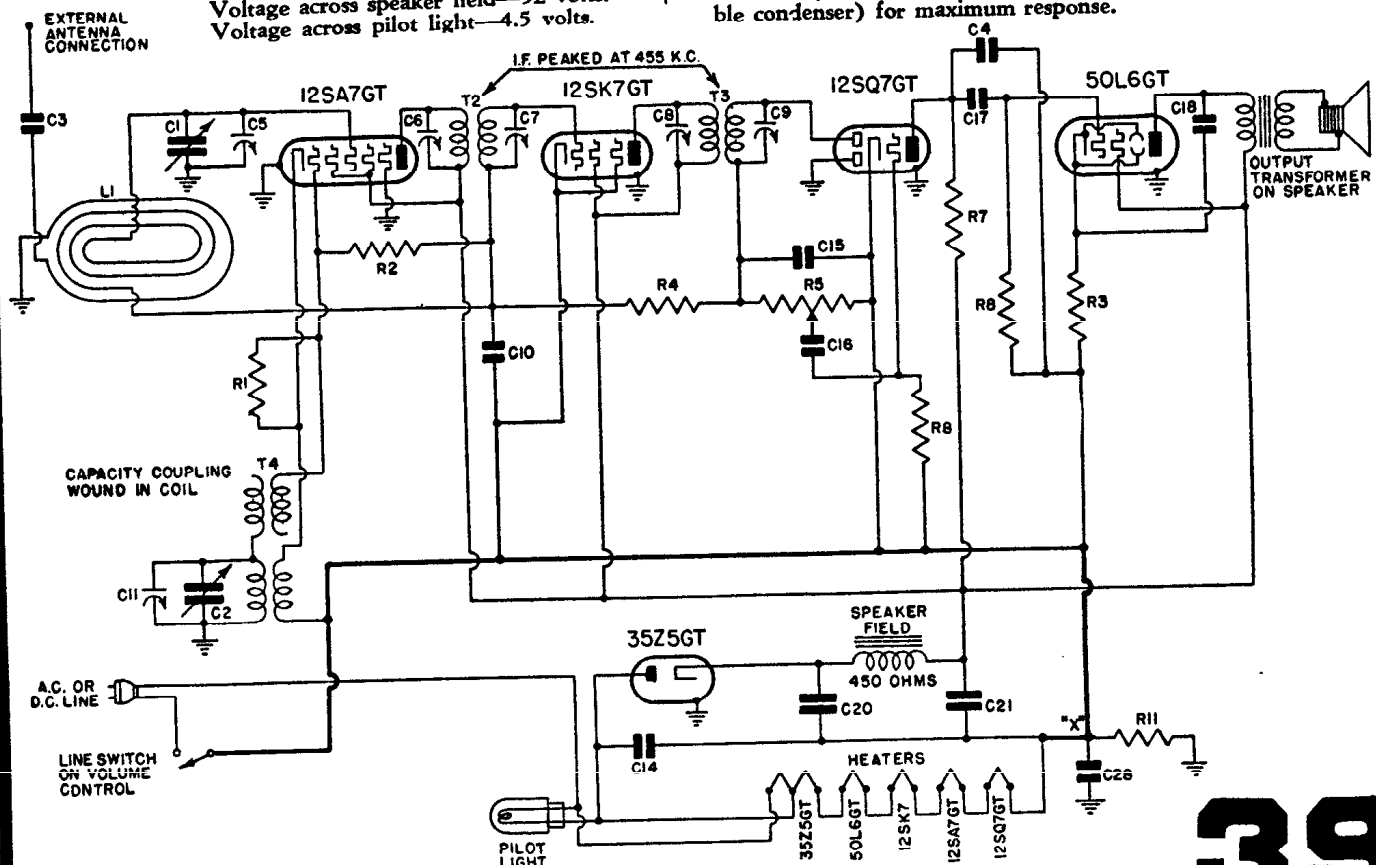


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# 39

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## MODELS: FH-413 and FH-440

C10 IS COMPOSED OF TWO PARTS, A FIXED CONDENSER AND TRIMMER

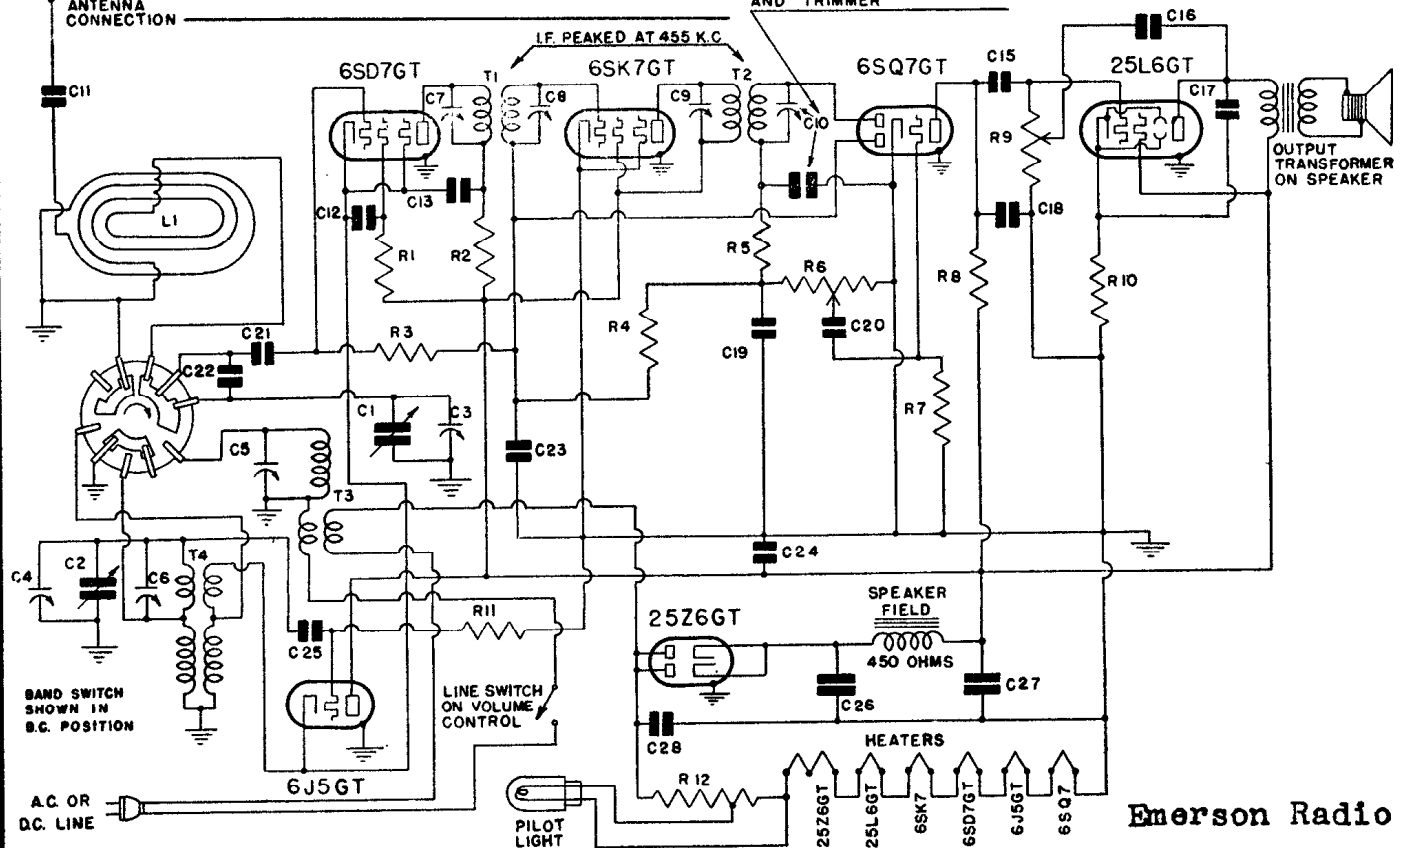

Emerson Radio

| Tube              | Plate | Screen | Cath |
|-------------------|-------|--------|------|
| 6SG7, 6SD7 or 7H7 | 92    | 63     | 0    |
| 6J5               | 102   | —      | 0    |
| 6SK7 or 7A7       | 102   | 102    | 0    |
| 6SQ7 or 7B6       | 30    | —      | —    |
| 25L6              | 92    | 102    | 6.5  |

### Alignment

Swing the variable condenser to the minimum capacity position. Feed 455 kc to the grid of the 6SD7 tube through a .01 mf condenser and adjust the four i-f trimmers for maximum response.

Note: The grid of the 6SD7 tube is the No. 4 pin.


Rotate the wave-band switch counter-clockwise to the short-wave position. Set the dial pointer at 12 megacycles and using a 400 ohm carbon resistor as a dummy antenna feed 12 megacycles from the generator to the external antenna lead emerging from the rear of the chassis. Adjust first the short-wave oscillator trimmer and then the short-wave antenna trimmer for maximum response.

Rotate the wave-band switch clockwise to the broadcast position. Set the dial pointer at 160 and feed 1600 kc from the signal generator into a loop of wire about 12 inches in diameter. Hold this radiating loop about 12 inches from the loop antenna and advance the signal generator until a deflection is obtained on the output meter. Adjust first the oscillator trimmer (rear section of the variable condenser) and then the antenna trimmer (front section of the variable condenser) for maximum response.

|               |                                       |
|---------------|---------------------------------------|
| R1, R11       | 50,000 ohm ¼ watt carbon resistor.    |
| R2            | 5,000 ohm ¼ watt carbon resistor      |
| R3, R4        | 3 megohm ¼ watt carbon resistor.      |
| R5            | 50,000 ohm ¼ watt carbon resistor     |
| R6            | Volume control: .5 megohm             |
| R7            | 10 megohm ¼ watt carbon resistor.     |
| R8            | 500,000 ohm ¼ watt carbon resistor    |
| R9            | Tone control: 400,000 ohm             |
| R10           | 140 ohm ½ watt wire-wound resistor    |
| R12           | Ballast resistor, 155 ohm             |
| †C6           | Trimmer, part of T4.                  |
| †C7, C8, C9   | Trimmers, part of i-f transformers.   |
| †C10          | Trimmer and 0.0001 mf, mica condenser |
| C11, C20      | 0.002 mf, 600 volt tubular condenser  |
| C12           | 0.02 mf, 200 volt tubular condenser   |
| C13           | 0.05 mf, 200 volt tubular condenser.  |
| C15, C17      | 0.02 mf, 400 volt tubular condenser   |
| C16, C18, C21 | 0.00022 mf, mica condenser            |
| C28           | 0.05 mf, 400 volt tubular condenser   |
| C19, C25      | 0.00011 mf, mica condenser            |
| C22           | 0.00046 mf, mica condenser            |
| C23           | 0.1 mf, 200 volt tubular condenser    |
| C24           | 0.01 mf, 400 volt tubular condenser   |
| C26, C27      | Dual 20 mf, 150 volt dry electrolytic |

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

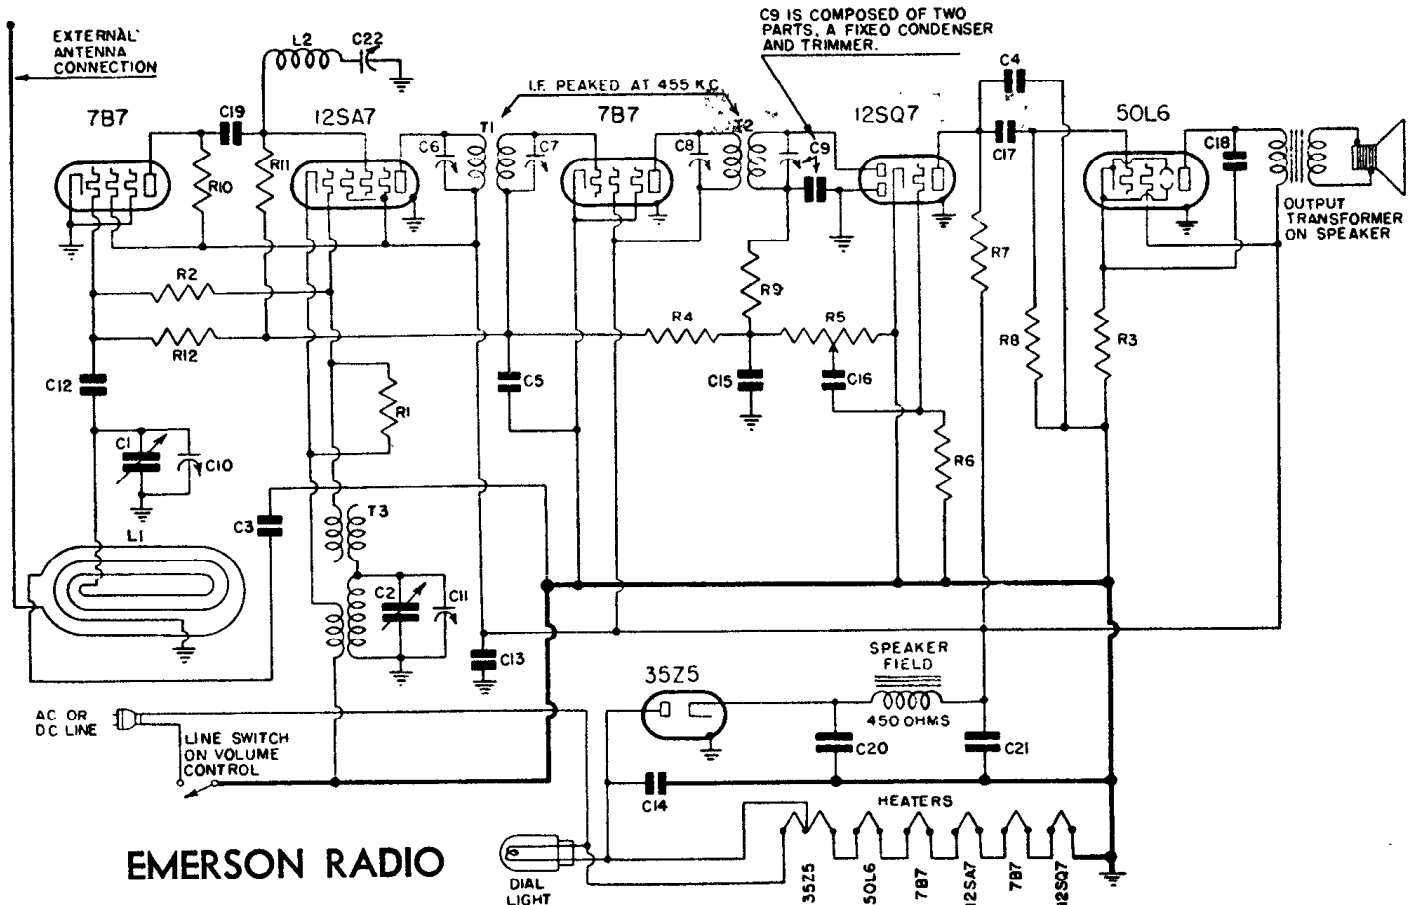

EMERSON RADIO

## FL-414, FL-415, FL-416, FL-417, FL-418 and FL-419

- |            |  |
|------------|--|
| R1         | 20,000 ohm ¼ watt carbon resistor.....   |
| R2         | 10 megohm ¼ watt carbon resistor.....    |
| R3         | 140 ohm ½ watt wire-wound resistor...    |
| R4         | 3 megohm ¼ watt carbon resistor.....     |
| R5         | Volume control .5 megohm                 |
| R6         | 15 megohm ¼ watt carbon resistor.        |
| R7, R8     | 500,000 ohm ¼ watt carbon resistor       |
| R9         | 50,000 ohm ¼ watt carbon resistor        |
| R10        | 10,000 ohm ¼ watt carbon resistor.....   |
| R11        | 25,000 ohm ¼ watt carbon resistor.....   |
| R12        | 1 megohm ¼ watt carbon resistor.....     |
| C1, C2     | Two-gang variable condenser.....         |
| C3, C16    | 0.002 mf, 600 volt tubular condenser...  |
| C4         | 0.0002 mf, 600 volt tubular condenser.   |
| C5, C13    | 0.05 mf, 200 volt tubular condenser..... |
| C6, C7, C8 | Trimmers, part of i-f transformers.      |
| C9         | Trimmer and fixed condenser              |
| C10, C11   | Trimmers, part of variable condenser.    |
| C12        | 0.00022 mica condenser.....              |
| C14        | 0.05 mf, 400 volt tubular condenser..... |
| C15, C19   | 0.00011 mica condenser.....              |
| C17        | 0.02 mf, 400 volt tubular condenser..... |
| C18        | 0.03 mf, 400 volt tubular condenser..... |
| C20, C21   | Dual 20 mf, 150 volt dry electrolytic    |

## Location of Coils and Trimmer Adjustments

The first i-f transformer is mounted on top of the chassis deck to the left of the variable condenser. The trimmers are accessible through holes in the top of the can.

The second i-f transformer is mounted on top of the chassis between the 7B7 tube and the speaker. The trimmers are accessible through holes in the top of the can.

The 455 kc wave-trap is located below the chassis deck.

The trimmers for the antenna and oscillator coils are located on the variable condenser. The trimmer on the front section is for the oscillator coil.

The oscillator coil is located underneath the chassis. The loop antenna acts as the antenna coil.

## VOLTAGE ANALYSIS

| Tube      | Plate | Screen | Cathode |
|-----------|-------|--------|---------|
| 7B7 (r-f) | 18    | 88     | 0       |
| 12SA7     | 88    | 88     | 0       |
| 7B7       | 88    | 85     | 0       |
| 12SQ7     | 30    | —      | 0       |
| 50L6GT    | 82    | 88     | 5.6     |

Voltage at 35Z5GT cathode—120 volts.


Voltage across speaker field—32 volts.

Voltage across pilot light—4.5 volts.



# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## EMERSON RADIO MODELS: FU-424, FU-427 and FU-428

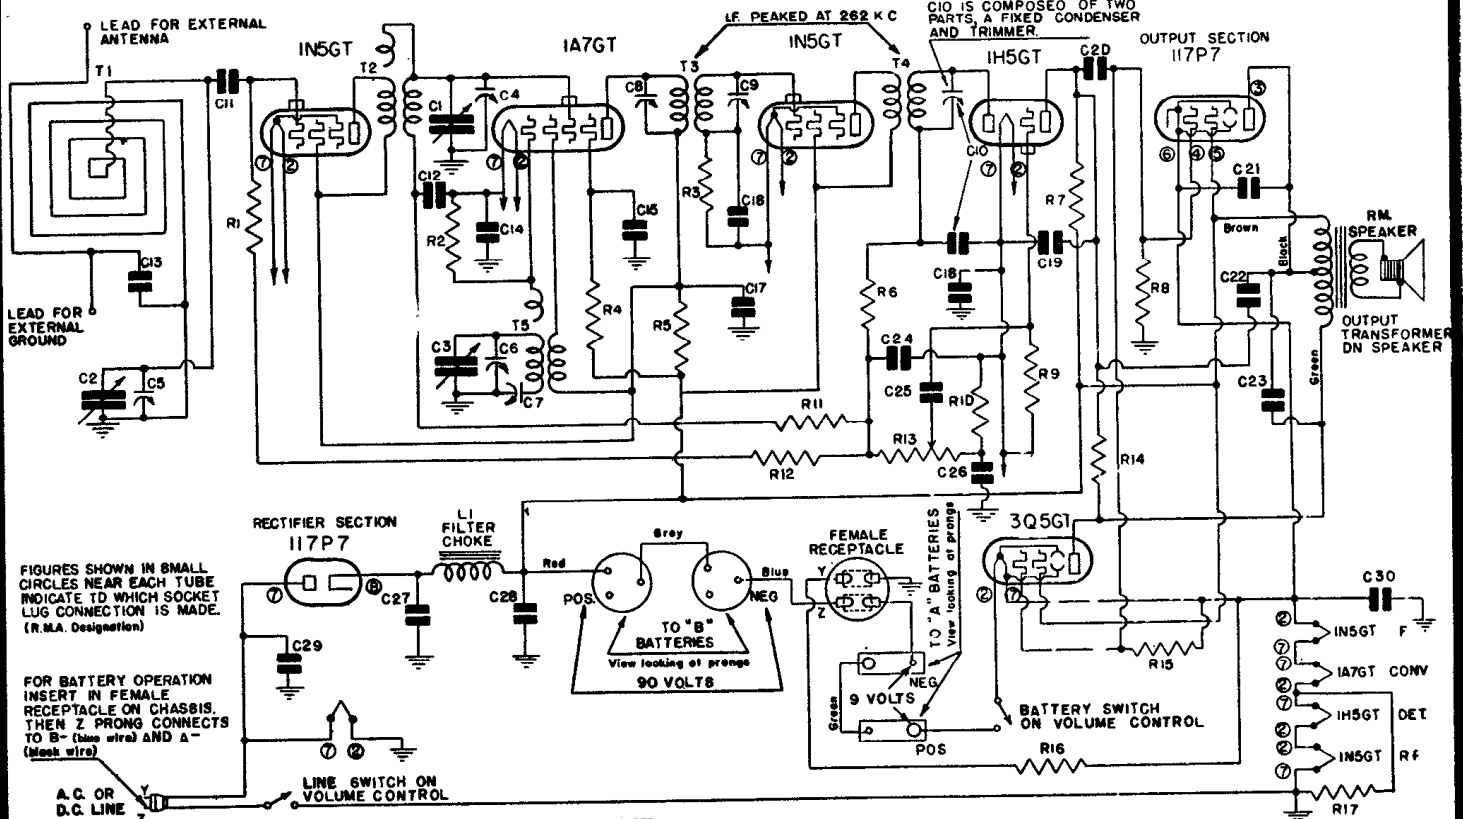

FIGURES SHOWN IN SMALL CIRCLES NEAR EACH TUBE INDICATE TO WHICH SOCKET LUG CONNECTION IS MADE. (R.M.A. Designation)

FOR BATTERY OPERATION INSERT IN FEMALE RECEPTACLE ON CHASSIS. THEN Z PRONG CONNECTS TO B- (blue wire) AND A- (black wire)

A.C. OR D.C. LINE LINE SWITCH ON VOLUME CONTROL

|                    |   |
|--------------------|---|
| R1                 | 2 megohm 1/4 watt carbon resistor         |
| R2                 | 200,000 ohm 1/4 watt carbon resistor      |
| R3                 | 5 megohm 1/4 watt carbon resistor.....    |
| R4                 | 30,000 ohm 1/4 watt carbon resistor       |
| R5                 | 1,000 ohm 1/4 watt carbon resistor....    |
| R6                 | 47,000 ohm 1/4 watt carbon resistor       |
| R7, R8             | 500,000 ohm 1/4 watt carbon resistor      |
| R9                 | 10 megohm 1/4 watt carbon resistor        |
| R10                | 4,000 ohm 1/4 watt carbon resistor        |
| R11, R12, R14, R15 | 3 megohm 1/4 watt carbon resistor         |
| R13                | Volume control .5 megohm                  |
| R16                | 1,200 ohm 1/4 watt carbon resistor        |
| R17                | 860 ohm 1/2 watt wire-wound resistor      |
| C1, C2, C3         | Three-gang variable condenser.....        |
| C4, C5, C6         | Part of variable condenser.               |
| C7                 | Padder condenser .....                    |
| C8, C9, C10        | Trimmers, part of i-f transformers.       |
| C11, C12, C16, C17 | 0.05 mf, 200 volt tubular condenser       |
| C13, C23, C25      | 0.002 mf, 600 volt condenser.....         |
| C14, C18, C26      | 0.25 mf, 100 volt tubular condenser       |
| C15                | 0.02 mf, 200 volt tubular condenser       |
| C16, C17           | 0.05 mf, 200 volt tubular condenser       |
| C19                | 0.0004 mf, 600 volt tubular condenser     |
| C20                | 0.02 mf, 400 volt tubular condenser       |
| C21                | 0.01 mf, 400 volt tubular condenser       |
| C22                | 0.00006 mf, mica condenser.....           |
| C24                | 0.00011 mf, mica condenser.....           |
| C26                | 0.25 mf, 100 volt tubular condenser       |
| C27, C28           | Dual 20 mf, 150 volt dry electrolytic     |
| C29                | 0.05 mf, 400 volt tubular condenser.....  |
| C30                | 40 mf, 25 volt dry electrolytic condenser |

### Location of Coils and Trimmer Adjustments

The oscillator coil is located beneath the chassis. The trimmer for the oscillator is on the middle section of the variable condenser.

The interstage coil is the shielded coil located beneath the chassis. Its trimmer is on the front section of the variable condenser.

The trimmer for the loop antenna is on the last section of the variable condenser (the section nearest the loop).

The i-f transformers are mounted on top of the chassis. The first i-f transformer is mounted next to the loop. The second i-f transformer is mounted next to the dial.

The series padder is located between the variable condenser and the shielded 1N5 tube.

Note: This receiver has an i-f of 262 kc.

Swing variable condenser to minimum capacity position.

Feed 262 kc to the grid of the 1A7 tube through a 0.01 mf condenser. Adjust the three i-f trimmers for maximum response.

Set the dial pointer at 140. Feed 1400 kc from the signal generator into a loop of wire about one foot in diameter. Hold this radiating loop approximately one foot away from and parallel to the receiver loop and advance the output of the signal generator until a suitable deflection is obtained on the output meter. Adjust first the oscillator trimmer (middle section) then the interstage and loop trimmers for maximum response. Move dial pointer to 60 and feed 600 kc into the radiating loop and adjust the series padding condenser (while rocking the variable condenser back and forth) for maximum response. Realign at 1400 kc.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## Emerson Radio

**MODEL: GC-448**

**CHASSIS MODEL: GC**

|            |  |
|------------|--|
| R1, R10    | 3 megohm ¼ watt carbon resistor.....       |
| R2         | 100,000 ohm ¼ watt carbon resistor.....    |
| R3         | 15,000 ohm ¼ watt carbon resistor.....     |
| R4, R6     | 15 megohm ¼ watt carbon resistor.....      |
| R5         | 75 ohm ½ watt carbon resistor.....         |
| R7, R9     | 1 megohm ¼ watt carbon resistor.....       |
| R8         | 5 megohm ¼ watt carbon resistor.....       |
| R11        | 2500 ohm 1 watt carbon resistor.....       |
| R12        | 10 megohm ¼ watt carbon resistor.....      |
| R13        | Volume control 3. megohm.....              |
| R14        | 500 ohm 1 watt carbon resistor.....        |
| R15        | 980 ohm ½ watt wire-wound, moulded         |
| R16        | 1500 ohm 5 watt wire-wound, ceramic        |
| R17        | 950 ohm 5 watt wire-wound, ceramic         |
| C5, C17    | 0.02 mf, 100 volt tubular condenser.....   |
| C6, C7, C9 | 0.25 mf, 100 volt tubular condenser.....   |
| C8         | 0.00005 mf, ceramic condenser.....         |
| C10, C11   | Trimmer, part of i-f transformer.          |
| C12        | 0.01 mf, 100 volt tubular condenser.....   |
| C13        | Fixed condenser, part of i-f transformer.  |
| C14, C19   | 0.0001 mf, ceramic condenser.....          |
| C15        | 0.001 mf, 100 volt tubular condenser.....  |
| C16, C21   | 0.002 mf, 150 volt tubular condenser.....  |
| C18        | 40. mf, 40 volt dry electrolytic condenser |
| C20        | 0.001 mf, 100 volt flat wound condenser    |


### I-f Alignment

Rotate variable condenser to minimum capacity position.

Feed 455 kc to the grid of the 1R5 tube through a 0.01 mf condenser. Adjust the three i-f trimmer screws for maximum response. (Clip the i-f input to the stator lug of the larger variable condenser section.)

### R-f Alignment

Set the dial pointer at 160. Set the signal generator at 1600 kc and feed its output into a loop of wire about one foot in diameter. Hold this radiating loop about one foot away from and parallel to the receiver loop antenna. Advance the output of the generator until deflection is obtained on the output meter. Adjust first the oscillator trimmer (smaller section of variable condenser) then the antenna trimmer (larger section of variable condenser) for maximum response. Set the dial pointer at 60. Feed 600 kc and rock the variable condenser while adjusting the oscillator core adjustment for maximum response. Return to 1600 and check alignment. If re-adjustment is necessary return to 600 and repeat entire procedure.

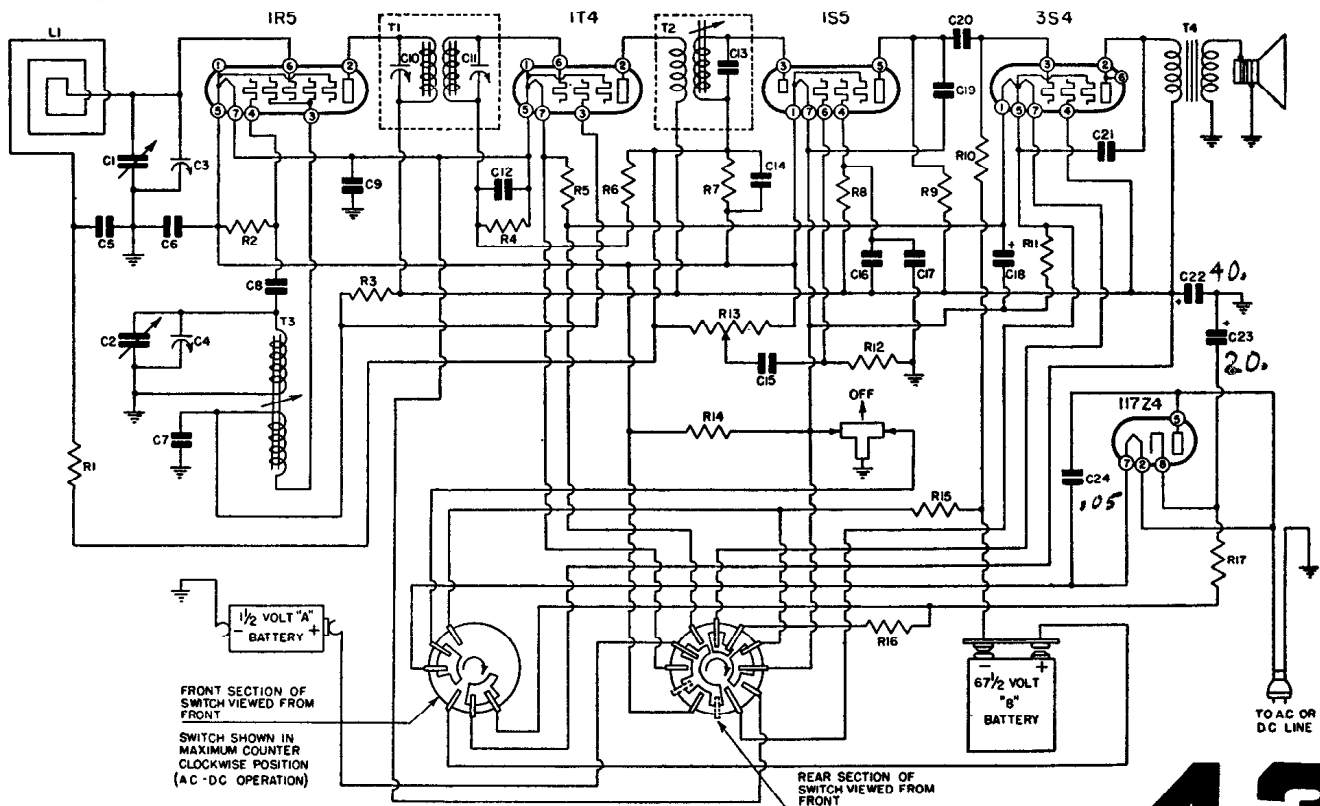

MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS


# Emerson Radio

**MODEL: FY-434**

CHASSIS MODEL: FY

**MODEL: FY2-434 A.C.-D.C.**


CHASSIS MODEL: FY2

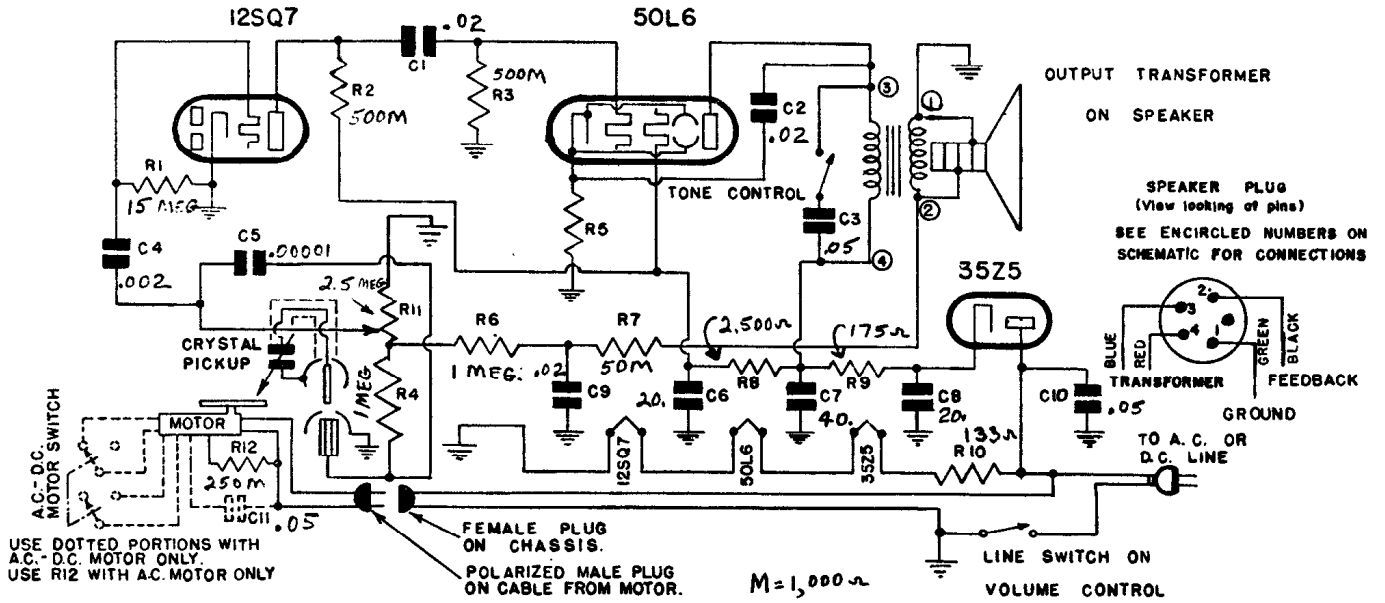

**MODEL: FZ-452**

CHASSIS MODEL: FZ

Emerson Radio

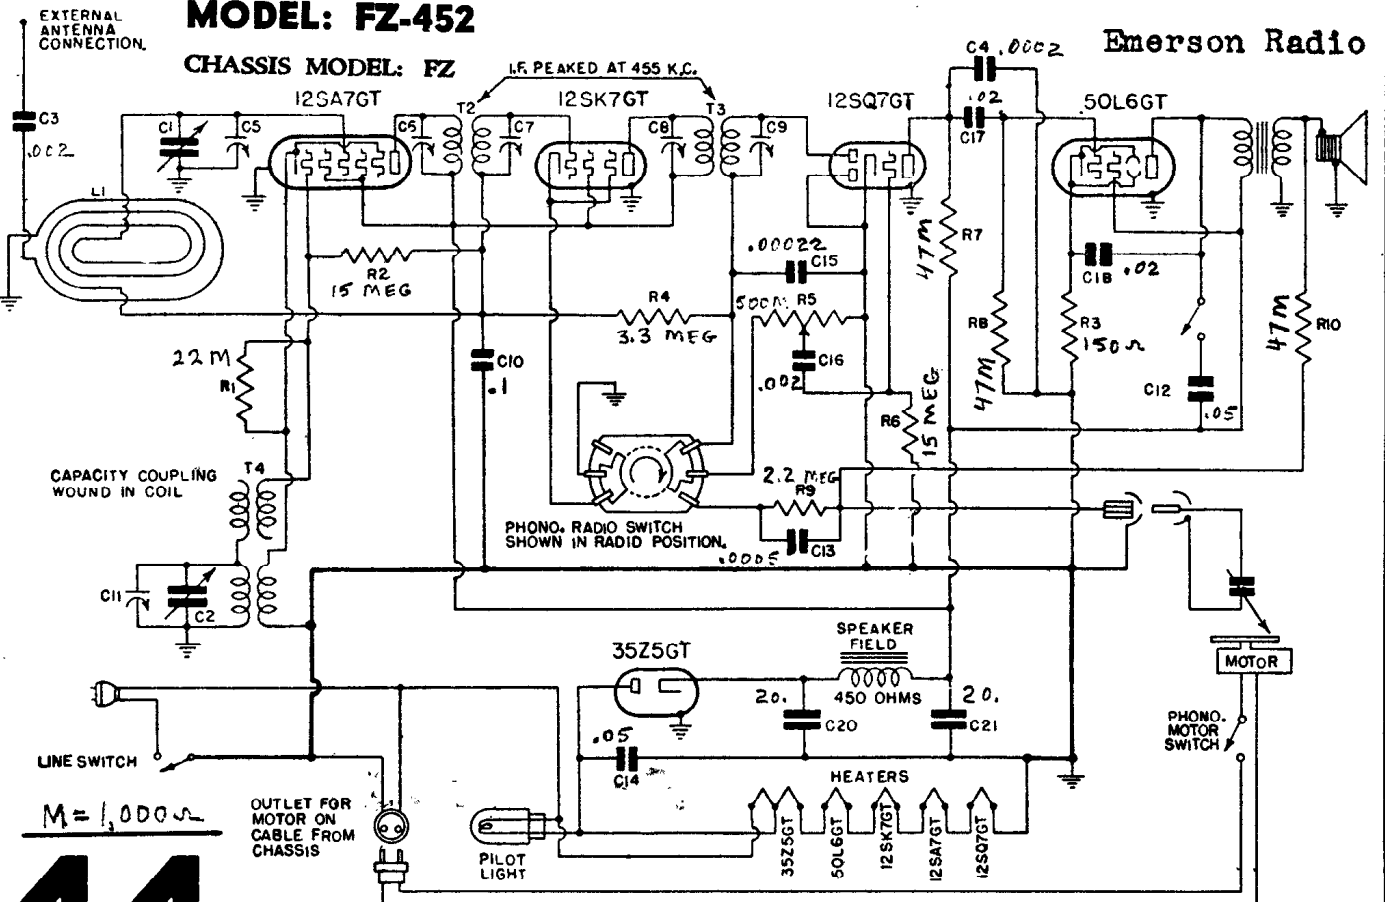

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## Emerson Radio

### I-f and Wave-trap Alignment

Swing the variable condenser to the minimum capacity position. Feed 455 kc to the grid of the 12SA7 tube through a .01 mf condenser and adjust the four i-f trimmers for maximum response.

Feed 455 kc to the external antenna lead and adjust the wave-trap for minimum response.


Note: The grid of the 12SA7 tube is the No. 8 pin.

- R1, R7, R18, R19 } 1 megohm ¼ watt carbon resistor.....
- R2 } 20,000 ohm ¼ watt carbon resistor.....
- R3 } 140 ohm ½ watt wire-wound resistor.....
- R4 } 3 megohm ¼ watt carbon resistor.....
- R5 } Volume control 2.5 meg.....
- R6 } 10 megohm ¼ watt carbon resistor.....
- R8, R16, R17, R20 } 500,000 ohm ¼ watt carbon resistor..
- R9, R10, R24 } 50,000 ohm ¼ watt carbon resistor....
- R11 } 175 ohm 1 watt carbon resistor.....
- R12 } 750 ohm 1 watt wire-wound resistor.....
- R13 } 10,000 ohm ¼ watt carbon resistor....
- R14 } 25,000 ohm ¼ watt carbon resistor....
- R15, R23 } 100,000 ohm ¼ watt carbon resistor.....
- R21, R22 } 100,000 ohm ¼ watt carbon resistor.....
- R25 } 30,000 ohm ¼ watt carbon resistor....
- R26, R27, R28 } Ballast resistor: R26—233 ohm, 6 watt; R27—190 ohm, 5 watt; R28—250 ohm, 3 watt
- C1, C2 } Two-gang variable condenser.....
- C3, C16 } 0.002 mf, 600 volt tubular condenser..
- C4 } 0.0004 mf, 600 volt tubular condenser..
- C5 } Trimmer, part of loop assembly.
- C6, C7, C8, C9 } Trimmers, part of variable condenser.
- C11 } Trimmer, part of variable condenser.
- C10 } 0.1 mf, 200 volt tubular condenser.....
- C12 } 0.0006 mf, 600 volt tubular condenser.....
- C13 } 0.0015 mf, 600 volt tubular condenser.....
- C14 } 0.05 mf, 400 volt tubular condenser.....
- C15 } 0.0002 mf, 600 volt tubular condenser.....
- C17 } 0.02 mf, 400 volt tubular condenser....
- C18 } 0.00011 mf, mica condenser.....
- C19 } 0.005 mf, 400 volt tubular condenser.....
- C20, C21, C22 } Multiple dry electrolytic condenser: 150 volt; C20—20 mf; C21—80 mf; C22—40 mf
- C23 } 0.00025 mf, mica condenser.....
- C24, C27, C30 } 0.05 mf, 200 volt tubular condenser..
- C31, C32 } 0.000026 mf, mica condenser.....
- C25 } 0.001 mf, 600 volt tubular condenser.....
- C26 } 0.00022 mf, mica condenser.....
- C28 } 0.0003 mf, mica condenser.....
- C29 } 0.0003 mf, mica condenser.....

### VOLTAGE ANALYSIS

| Tube   | Plate | Screen | Cathode |
|--------|-------|--------|---------|
| 12SA7  | 88    | 88     | 0       |
| 12SK7  | 48    | 46     | 0       |
| 12SF7  | 89    | 89     | 0       |
| 12SJ7  | 8     | 14     | —       |
| 50L6GT | 108   | 89     | 5.1     |

**MODEL: GH-437, GH-447**  
**CHASSIS MODEL: GH**  
**MODEL: GH2-447**  
**CHASSIS MODEL: GH2**

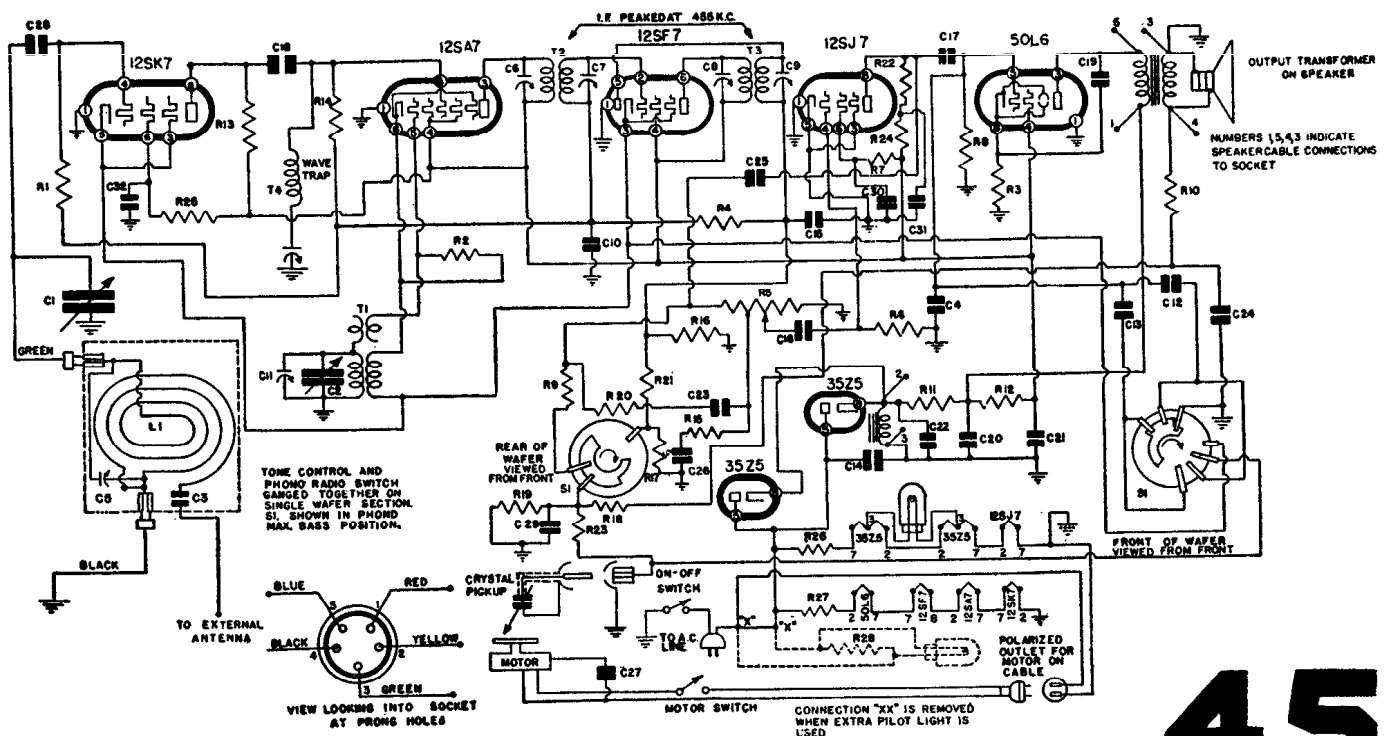

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# 45

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## Emerson Radio

**MODELS: GA-439 and GA-441**

CHASSIS MODEL: GA

**MODELS: GA1-439 and GA1-441**


CHASSIS MODEL: GA1

### R-f Alignment

Set the dial pointer at 140. Feed 1400 kc from the signal generator into a loop of wire about one foot in diameter. Hold this radiating loop about 12 inches away from and parallel to the receiver loop antenna. Advance the input to the loop until a satisfactory deflection is obtained on the output meter. Adjust first the oscillator trimmer then the antenna trimmer for maximum response. If the loop antenna has been replaced it may be necessary to retrack the loop inductance. With the dial set at 60 feed 600 kc to the antenna lead. A portion of the outside may be swung to either side of the center to give maximum response. Repeat the trimmer alignment at 140.

- R1 20,000 ohm ¼ watt carbon resistor.....
- R2, R6 15 megohm ¼ watt carbon resistor.....
- R3 140 ohm ½ watt wire-wound resistor
- R4 2 megohm ¼ watt carbon resistor.....
- R5 Volume control .5 meg. (Model 431)
- R5 Volume control .5 meg. (Model 439)
- R7, R8 500,000 ohm ¼ watt carbon resistor
- R9 50,000 ohm ¼ watt carbon resistor
- R10 10,000 ohm ¼ watt carbon resistor
- R11 25,000 ohm ¼ watt carbon resistor
- R12, R13 R12—130 ohm, 12.5 watt; R13—25 ohm
- R14 220,000 ohm ¼ watt carbon resistor....
- C1, C2 Two-gang variable condenser.....
- C3, C16 0.002 mf, 600 volt tubular condenser.
- C4 0.0002 mf, 600 volt tubular condenser
- C5 0.05 mf, 200 volt tubular condenser
- C12, C19 0.00022 mica condenser.....
- C13 0.05 mf, 200 volt tubular condenser.
- C14 0.05 mf, 400 volt tubular condenser.
- C15 0.04 mf, 200 volt tubular condenser.
- C17, C18 0.02 mf, 400 volt tubular condenser.
- C19 0.00022 mica condenser.....
- C20, C21 Dual 20 mf, 150 volt, dry electrolytic
- C22 Trimmer, part of L2.
- C23 0.2 mf, 200 volt tubular condenser


| Tube        | Plate | Screen | Cathode |
|-------------|-------|--------|---------|
| 6SG7 or 7H7 | 87    | 39     | 0       |
| 6SA7        | 87    | 87     | 0       |
| 6SK7 or 7A7 | 87    | 87     | 0       |
| 6SQ7 or 7B6 | 32    | —      | 0       |
| 25L6        | 79    | 87     | 6.0     |

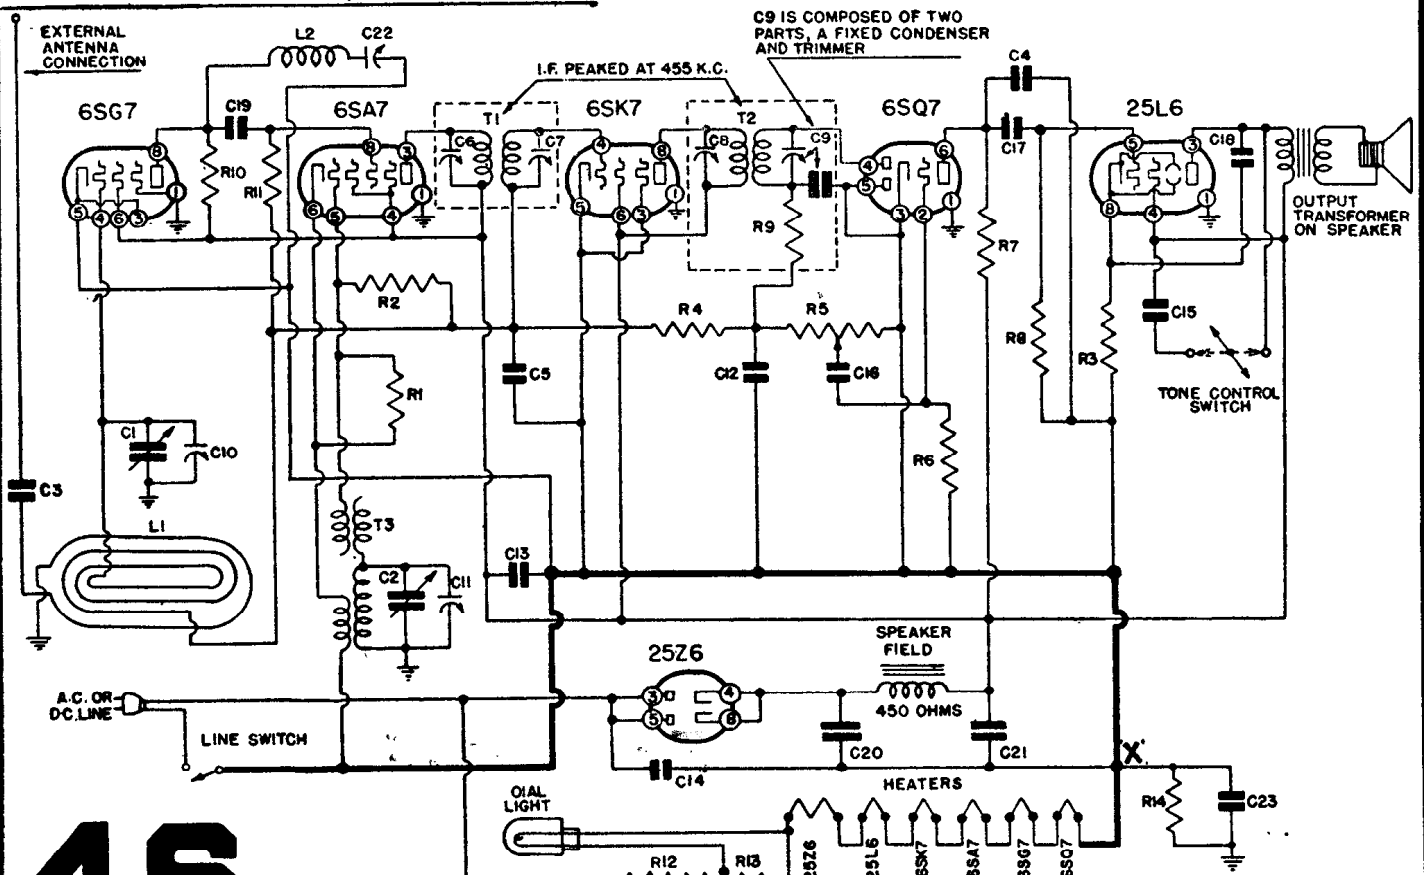

# 46

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

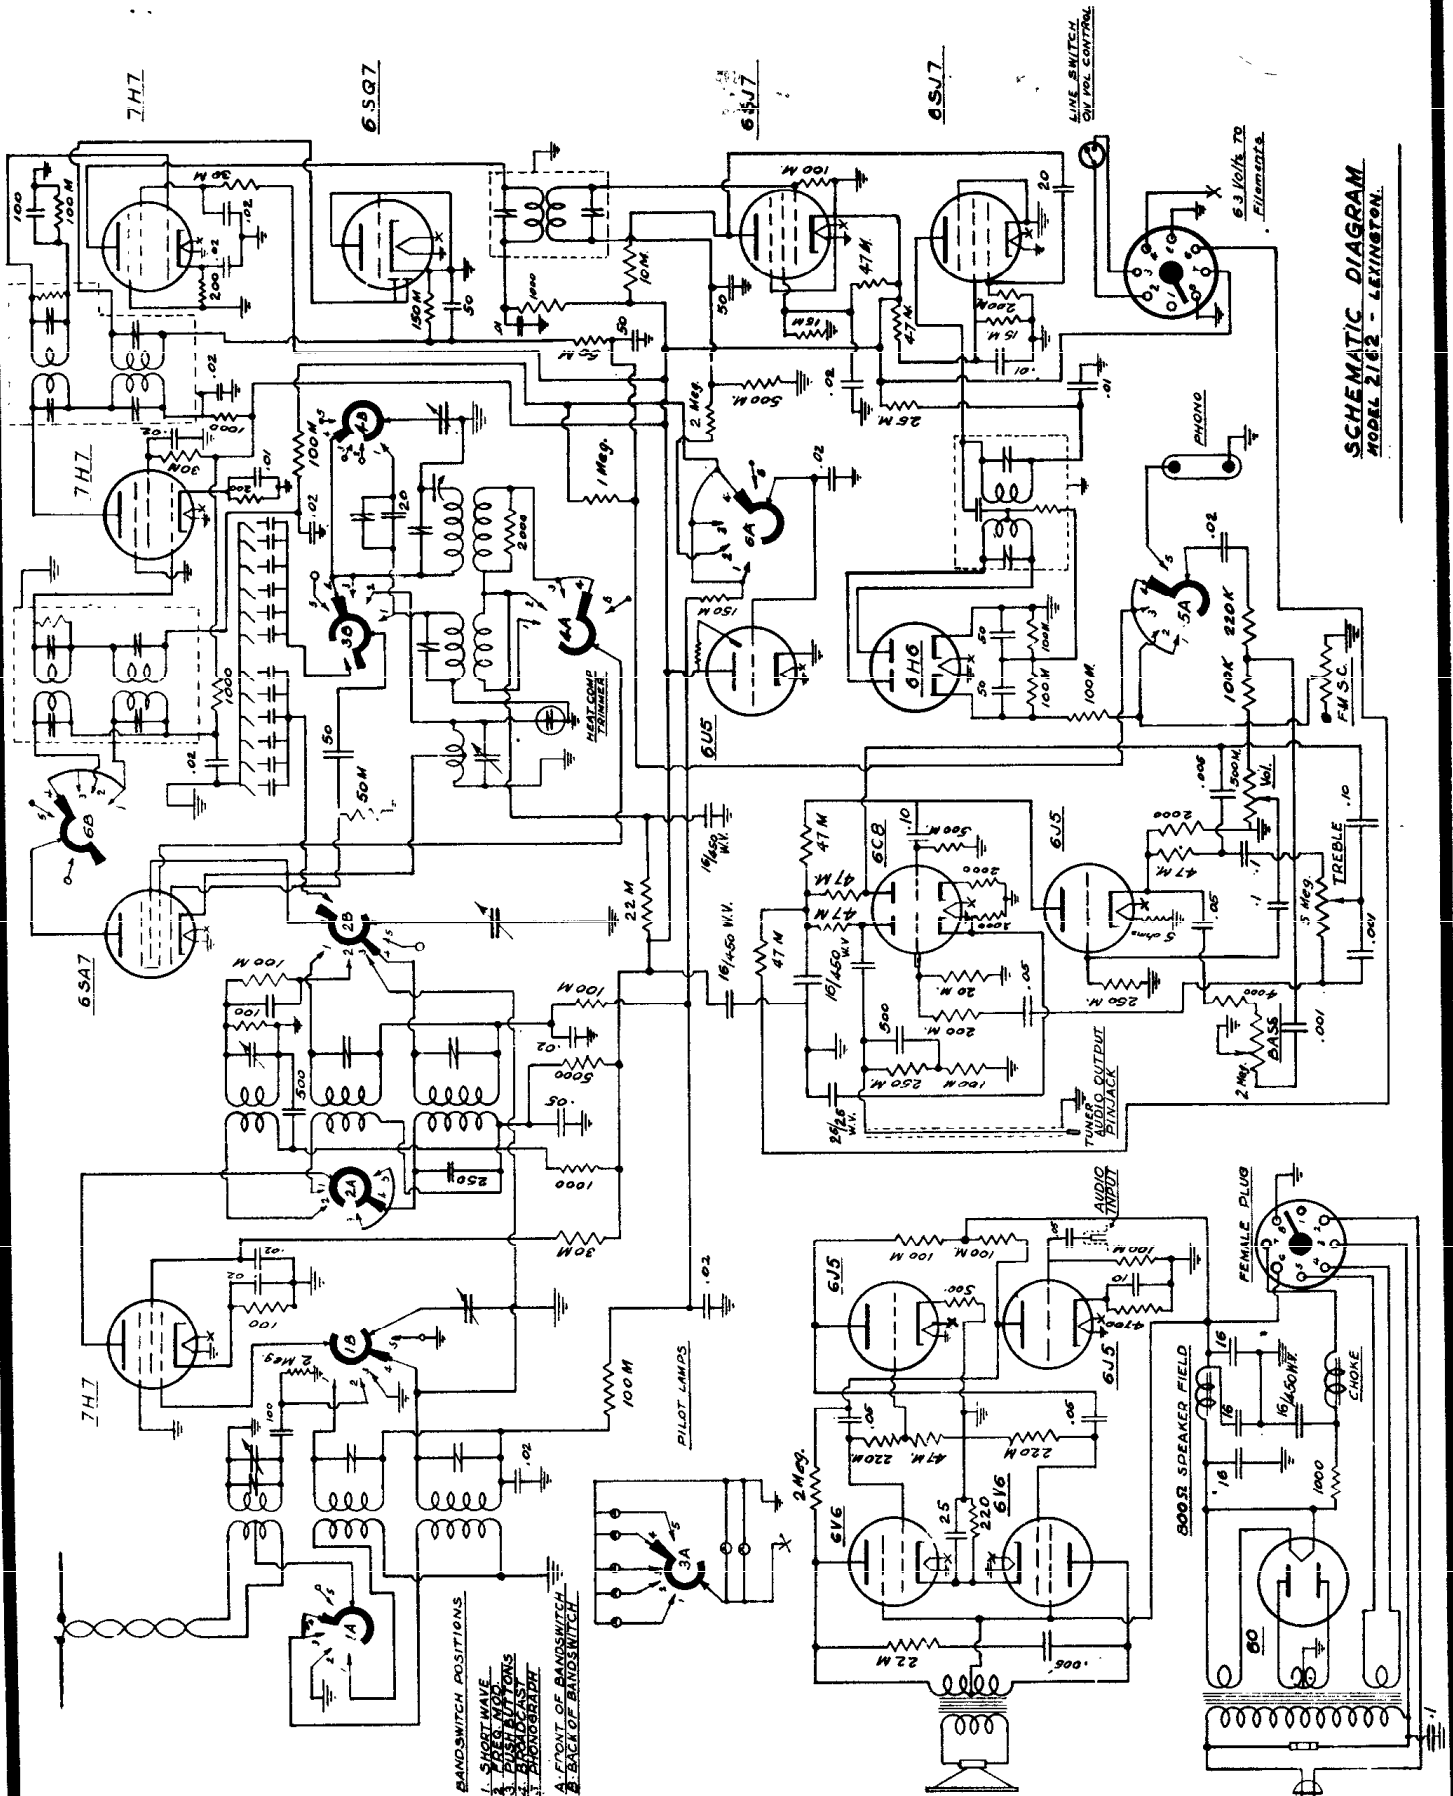

Espey Mfg. Co., Inc.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

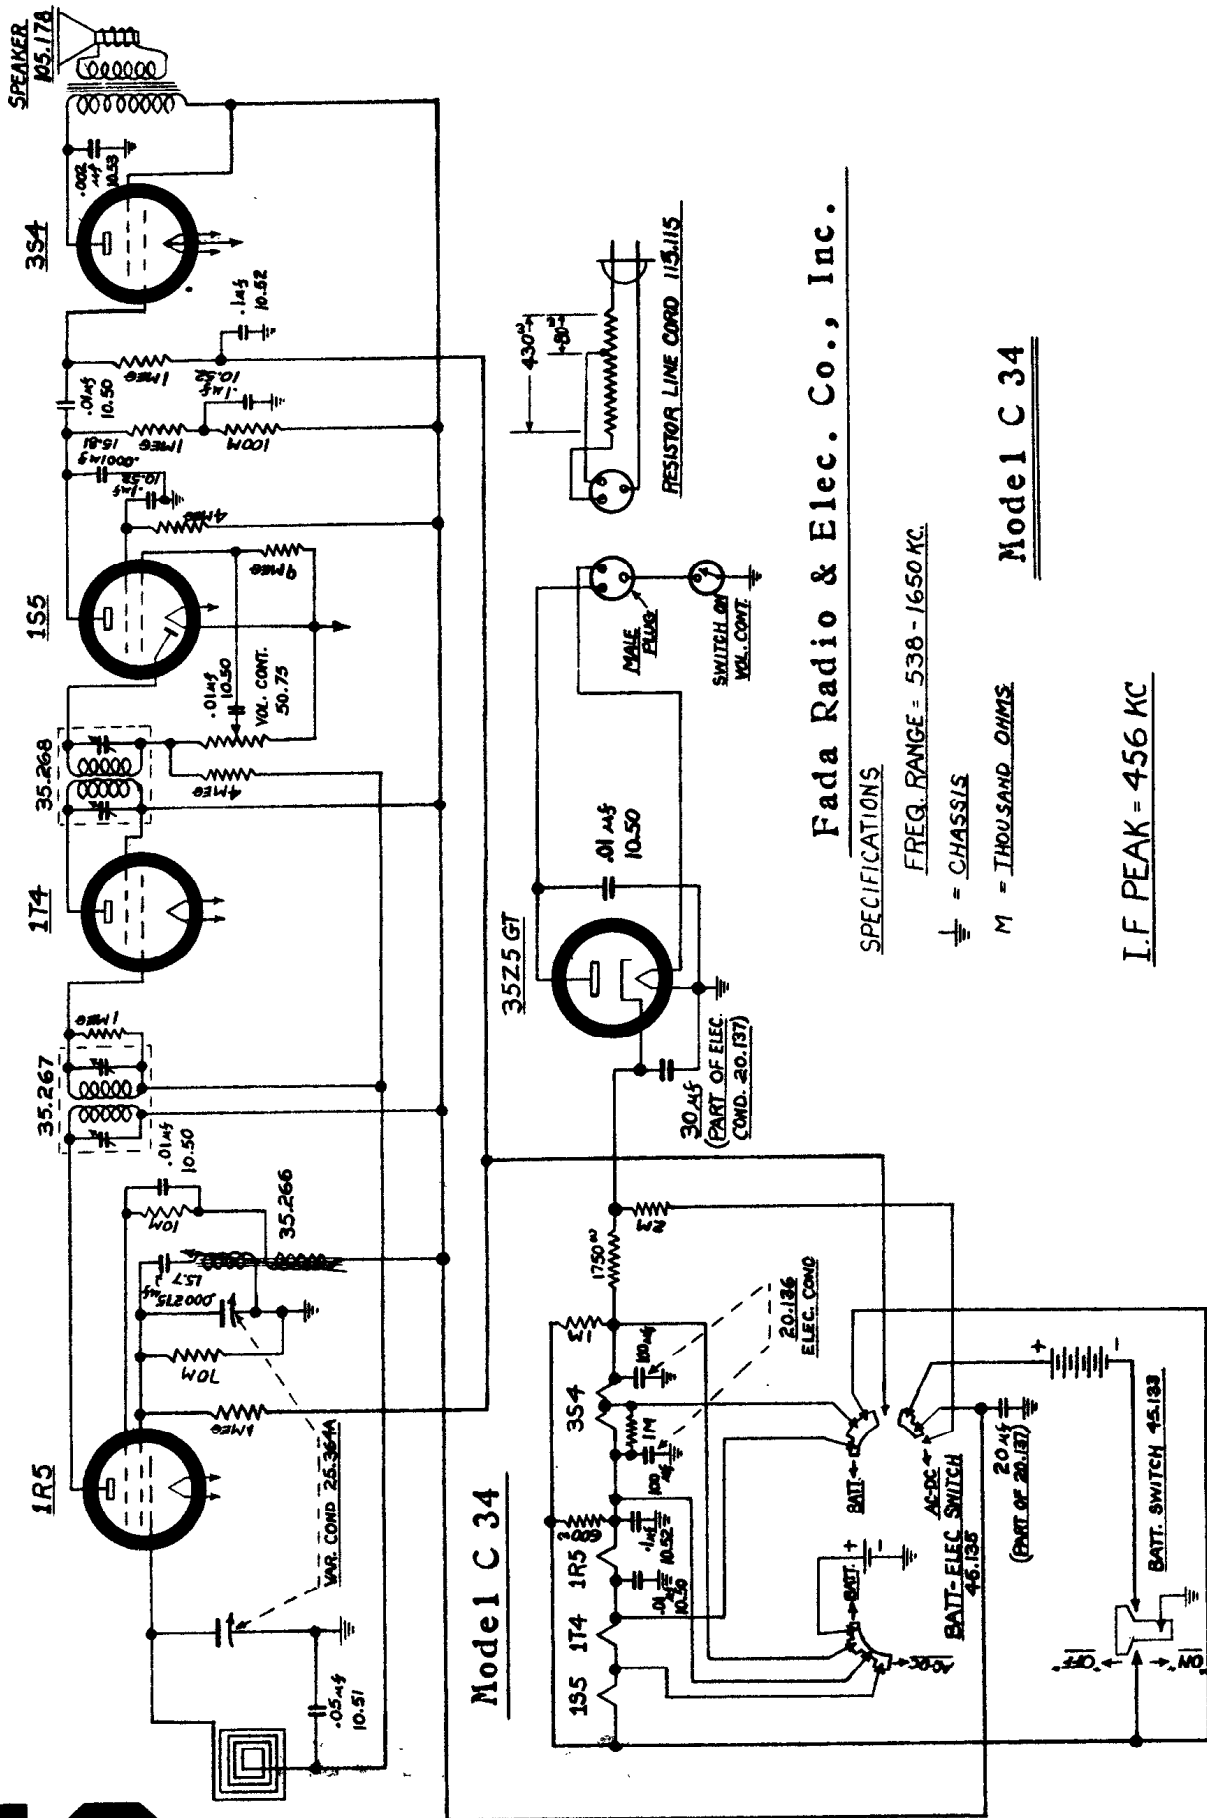

Fada Radio & Elec. Co., Inc.

**SPECIFICATIONS**

FREQ. RANGE = 538 - 1650 KC.

♣ = CHASSIS


M = THOUSAND OHMS

**Model C 34**




I.F. PEAK = 456 KC

**Model C 34**

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

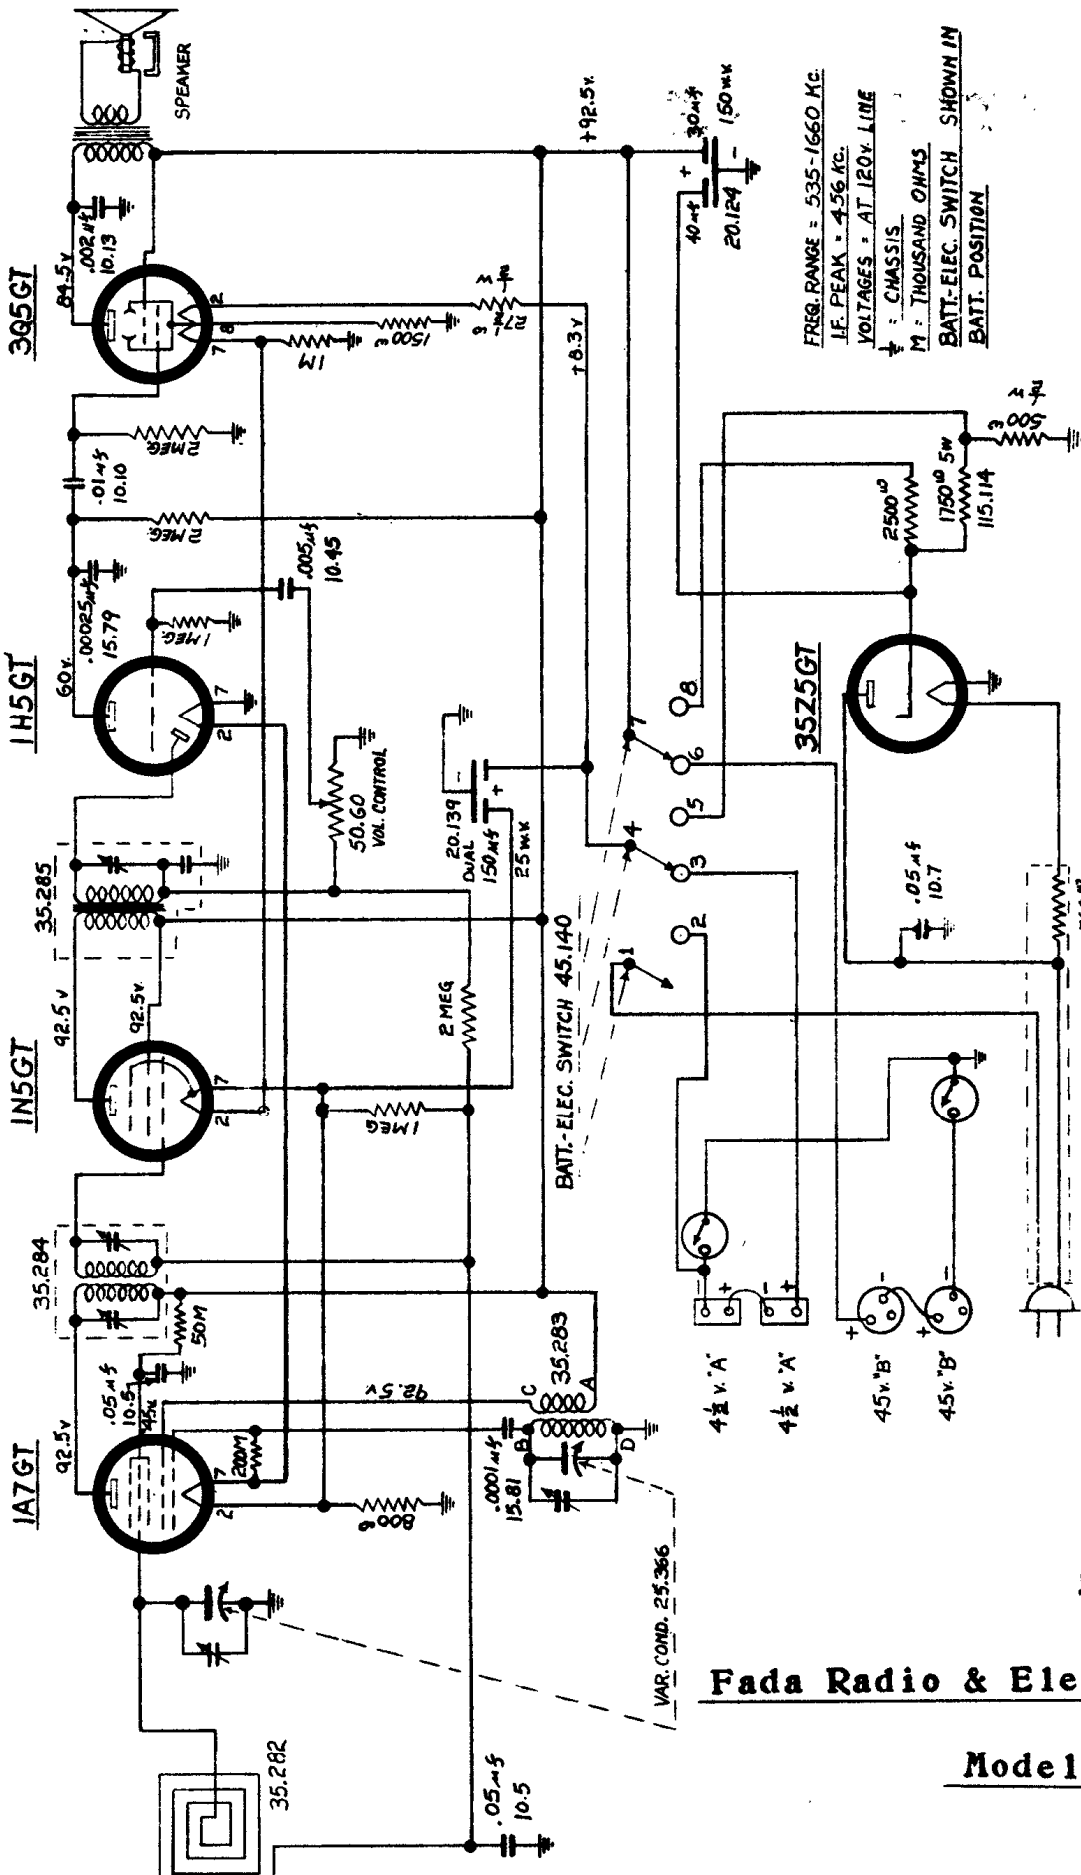

FRIG. RANGE = 535-1660 Kc.  
 I.F. PEAK = 456 Kc.  
 VOLTAGES - AT 120V. LINE  
 ⚡ = CHASSIS  
 M = THOUSAND OHMS  
 BATT.-ELEC. SWITCH SHOWN IN  
 BATT. POSITION.

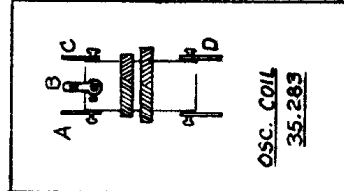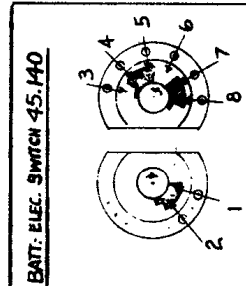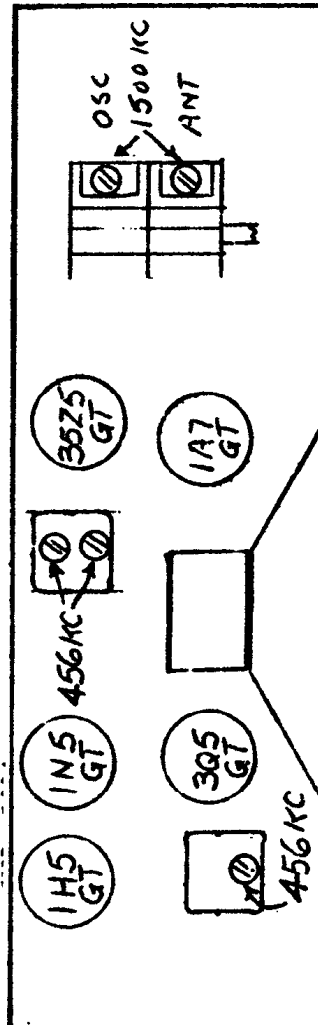

Fada Radio & Elec. Co., Inc.

Model P 41


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS







# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

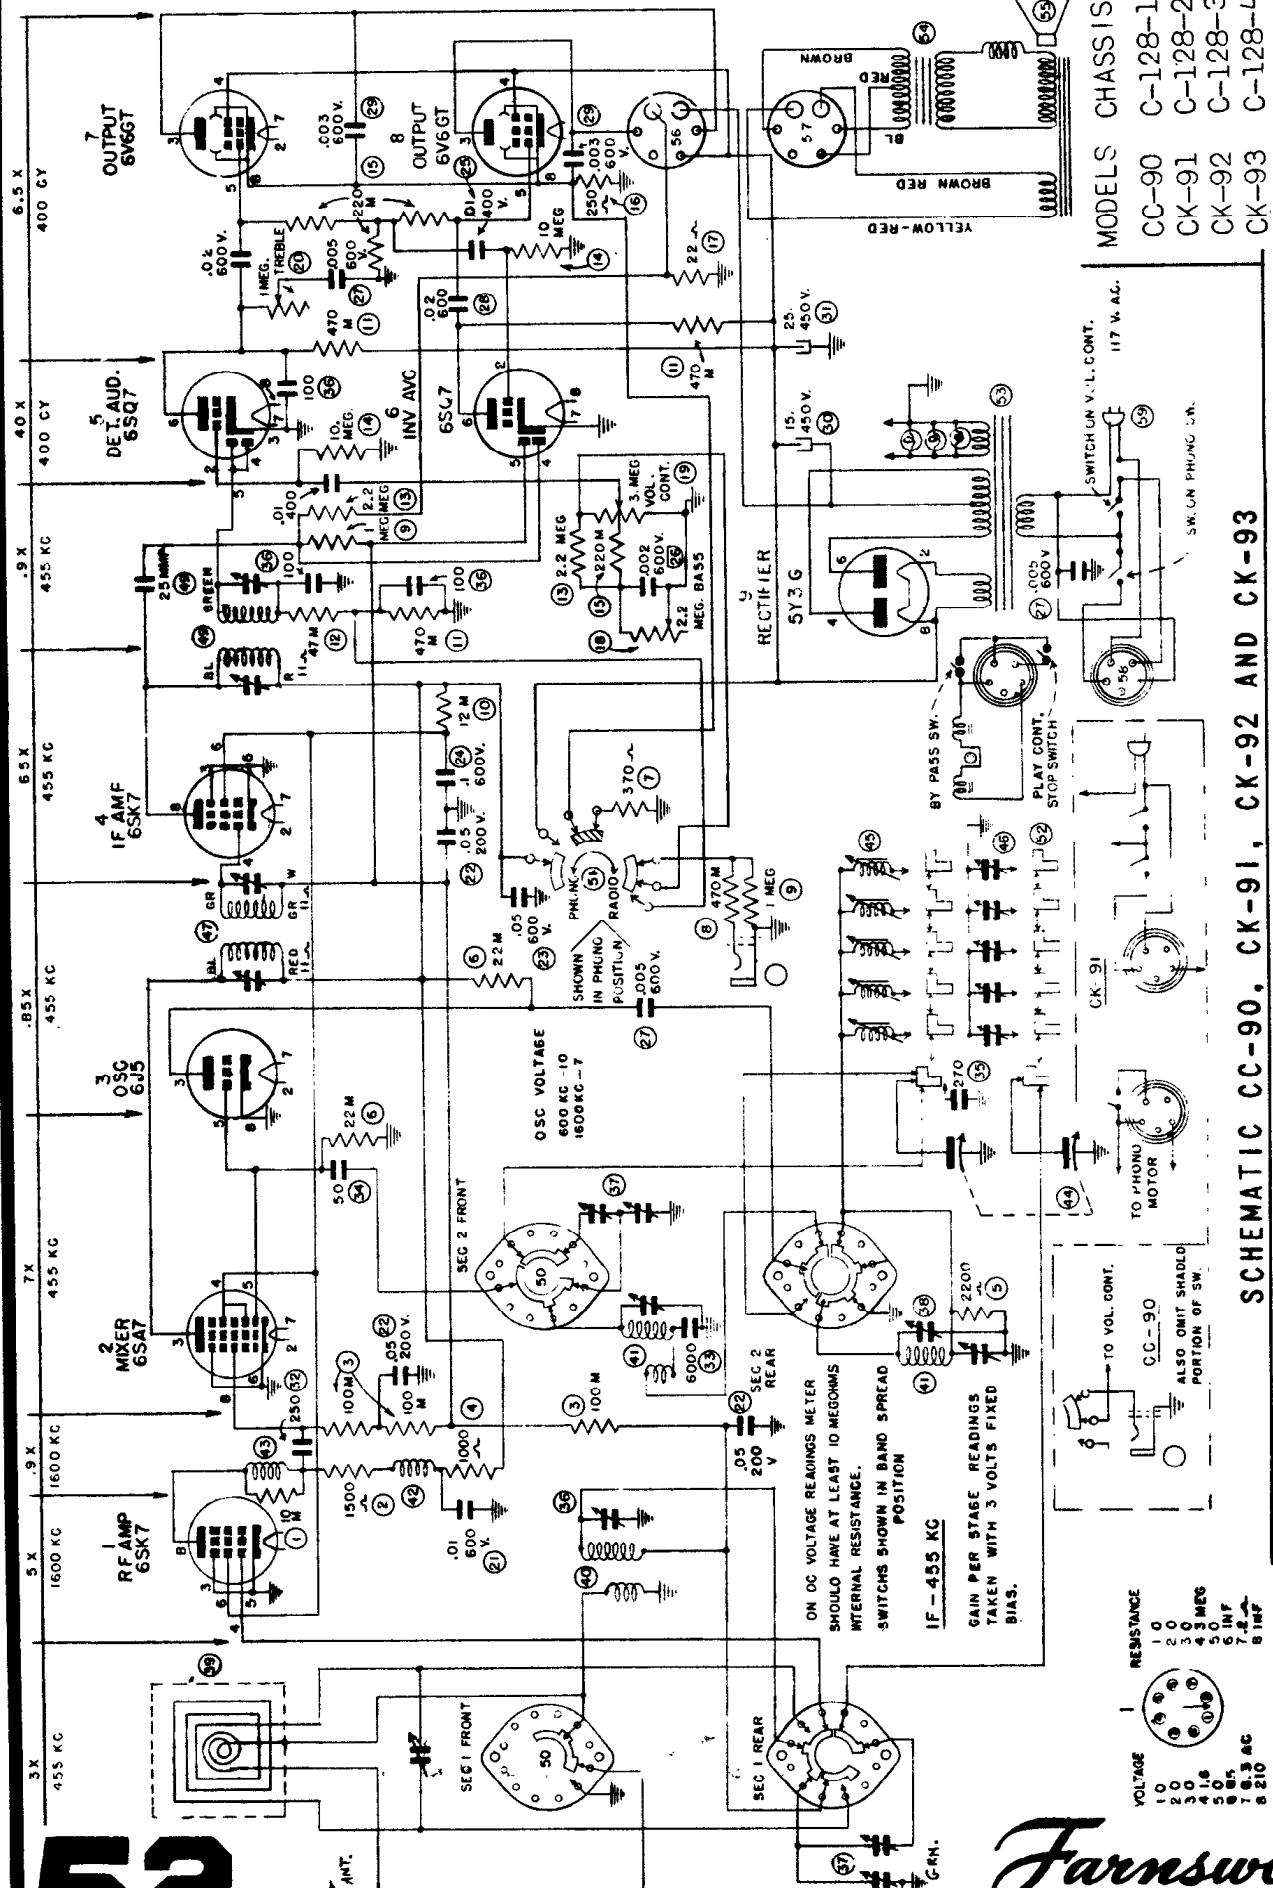

MODELS CHASSIS

|       |         |
|-------|---------|
| CC-90 | C-128-1 |
| CK-91 | C-128-2 |
| CK-92 | C-128-3 |
| CK-93 | C-128-4 |

| RESISTANCE | VOLTAGE        | RESISTANCE | VOLTAGE        | RESISTANCE | VOLTAGE        | RESISTANCE | VOLTAGE        | RESISTANCE | VOLTAGE        |
|------------|----------------|------------|----------------|------------|----------------|------------|----------------|------------|----------------|
| 1 0        | 1.0            | 1 0        | 1.0            | 1 0        | 1.0            | 1 0        | 1.0            | 1 0        | 1.0            |
| 2 0        | 2.0            | 2 0        | 2.0            | 2 0        | 2.0            | 2 0        | 2.0            | 2 0        | 2.0            |
| 3 0        | 3.0            | 3 0        | 3.0            | 3 0        | 3.0            | 3 0        | 3.0            | 3 0        | 3.0            |
| 4 0        | 4.0            | 4 0        | 4.0            | 4 0        | 4.0            | 4 0        | 4.0            | 4 0        | 4.0            |
| 5 0        | 5.0            | 5 0        | 5.0            | 5 0        | 5.0            | 5 0        | 5.0            | 5 0        | 5.0            |
| 6 0        | 6.0            | 6 0        | 6.0            | 6 0        | 6.0            | 6 0        | 6.0            | 6 0        | 6.0            |
| 7 0        | 7.0            | 7 0        | 7.0            | 7 0        | 7.0            | 7 0        | 7.0            | 7 0        | 7.0            |
| 8 0        | 8.0            | 8 0        | 8.0            | 8 0        | 8.0            | 8 0        | 8.0            | 8 0        | 8.0            |
| 1 0        | 10.0           | 1 0        | 10.0           | 1 0        | 10.0           | 1 0        | 10.0           | 1 0        | 10.0           |
| 2 0        | 20.0           | 2 0        | 20.0           | 2 0        | 20.0           | 2 0        | 20.0           | 2 0        | 20.0           |
| 3 0        | 30.0           | 3 0        | 30.0           | 3 0        | 30.0           | 3 0        | 30.0           | 3 0        | 30.0           |
| 4 0        | 40.0           | 4 0        | 40.0           | 4 0        | 40.0           | 4 0        | 40.0           | 4 0        | 40.0           |
| 5 0        | 50.0           | 5 0        | 50.0           | 5 0        | 50.0           | 5 0        | 50.0           | 5 0        | 50.0           |
| 6 0        | 60.0           | 6 0        | 60.0           | 6 0        | 60.0           | 6 0        | 60.0           | 6 0        | 60.0           |
| 7 0        | 70.0           | 7 0        | 70.0           | 7 0        | 70.0           | 7 0        | 70.0           | 7 0        | 70.0           |
| 8 0        | 80.0           | 8 0        | 80.0           | 8 0        | 80.0           | 8 0        | 80.0           | 8 0        | 80.0           |
| 1 0        | 100.0          | 1 0        | 100.0          | 1 0        | 100.0          | 1 0        | 100.0          | 1 0        | 100.0          |
| 2 0        | 200.0          | 2 0        | 200.0          | 2 0        | 200.0          | 2 0        | 200.0          | 2 0        | 200.0          |
| 3 0        | 300.0          | 3 0        | 300.0          | 3 0        | 300.0          | 3 0        | 300.0          | 3 0        | 300.0          |
| 4 0        | 400.0          | 4 0        | 400.0          | 4 0        | 400.0          | 4 0        | 400.0          | 4 0        | 400.0          |
| 5 0        | 500.0          | 5 0        | 500.0          | 5 0        | 500.0          | 5 0        | 500.0          | 5 0        | 500.0          |
| 6 0        | 600.0          | 6 0        | 600.0          | 6 0        | 600.0          | 6 0        | 600.0          | 6 0        | 600.0          |
| 7 0        | 700.0          | 7 0        | 700.0          | 7 0        | 700.0          | 7 0        | 700.0          | 7 0        | 700.0          |
| 8 0        | 800.0          | 8 0        | 800.0          | 8 0        | 800.0          | 8 0        | 800.0          | 8 0        | 800.0          |
| 1 0        | 1000.0         | 1 0        | 1000.0         | 1 0        | 1000.0         | 1 0        | 1000.0         | 1 0        | 1000.0         |
| 2 0        | 2000.0         | 2 0        | 2000.0         | 2 0        | 2000.0         | 2 0        | 2000.0         | 2 0        | 2000.0         |
| 3 0        | 3000.0         | 3 0        | 3000.0         | 3 0        | 3000.0         | 3 0        | 3000.0         | 3 0        | 3000.0         |
| 4 0        | 4000.0         | 4 0        | 4000.0         | 4 0        | 4000.0         | 4 0        | 4000.0         | 4 0        | 4000.0         |
| 5 0        | 5000.0         | 5 0        | 5000.0         | 5 0        | 5000.0         | 5 0        | 5000.0         | 5 0        | 5000.0         |
| 6 0        | 6000.0         | 6 0        | 6000.0         | 6 0        | 6000.0         | 6 0        | 6000.0         | 6 0        | 6000.0         |
| 7 0        | 7000.0         | 7 0        | 7000.0         | 7 0        | 7000.0         | 7 0        | 7000.0         | 7 0        | 7000.0         |
| 8 0        | 8000.0         | 8 0        | 8000.0         | 8 0        | 8000.0         | 8 0        | 8000.0         | 8 0        | 8000.0         |
| 1 0        | 10000.0        | 1 0        | 10000.0        | 1 0        | 10000.0        | 1 0        | 10000.0        | 1 0        | 10000.0        |
| 2 0        | 20000.0        | 2 0        | 20000.0        | 2 0        | 20000.0        | 2 0        | 20000.0        | 2 0        | 20000.0        |
| 3 0        | 30000.0        | 3 0        | 30000.0        | 3 0        | 30000.0        | 3 0        | 30000.0        | 3 0        | 30000.0        |
| 4 0        | 40000.0        | 4 0        | 40000.0        | 4 0        | 40000.0        | 4 0        | 40000.0        | 4 0        | 40000.0        |
| 5 0        | 50000.0        | 5 0        | 50000.0        | 5 0        | 50000.0        | 5 0        | 50000.0        | 5 0        | 50000.0        |
| 6 0        | 60000.0        | 6 0        | 60000.0        | 6 0        | 60000.0        | 6 0        | 60000.0        | 6 0        | 60000.0        |
| 7 0        | 70000.0        | 7 0        | 70000.0        | 7 0        | 70000.0        | 7 0        | 70000.0        | 7 0        | 70000.0        |
| 8 0        | 80000.0        | 8 0        | 80000.0        | 8 0        | 80000.0        | 8 0        | 80000.0        | 8 0        | 80000.0        |
| 1 0        | 100000.0       | 1 0        | 100000.0       | 1 0        | 100000.0       | 1 0        | 100000.0       | 1 0        | 100000.0       |
| 2 0        | 200000.0       | 2 0        | 200000.0       | 2 0        | 200000.0       | 2 0        | 200000.0       | 2 0        | 200000.0       |
| 3 0        | 300000.0       | 3 0        | 300000.0       | 3 0        | 300000.0       | 3 0        | 300000.0       | 3 0        | 300000.0       |
| 4 0        | 400000.0       | 4 0        | 400000.0       | 4 0        | 400000.0       | 4 0        | 400000.0       | 4 0        | 400000.0       |
| 5 0        | 500000.0       | 5 0        | 500000.0       | 5 0        | 500000.0       | 5 0        | 500000.0       | 5 0        | 500000.0       |
| 6 0        | 600000.0       | 6 0        | 600000.0       | 6 0        | 600000.0       | 6 0        | 600000.0       | 6 0        | 600000.0       |
| 7 0        | 700000.0       | 7 0        | 700000.0       | 7 0        | 700000.0       | 7 0        | 700000.0       | 7 0        | 700000.0       |
| 8 0        | 800000.0       | 8 0        | 800000.0       | 8 0        | 800000.0       | 8 0        | 800000.0       | 8 0        | 800000.0       |
| 1 0        | 1000000.0      | 1 0        | 1000000.0      | 1 0        | 1000000.0      | 1 0        | 1000000.0      | 1 0        | 1000000.0      |
| 2 0        | 2000000.0      | 2 0        | 2000000.0      | 2 0        | 2000000.0      | 2 0        | 2000000.0      | 2 0        | 2000000.0      |
| 3 0        | 3000000.0      | 3 0        | 3000000.0      | 3 0        | 3000000.0      | 3 0        | 3000000.0      | 3 0        | 3000000.0      |
| 4 0        | 4000000.0      | 4 0        | 4000000.0      | 4 0        | 4000000.0      | 4 0        | 4000000.0      | 4 0        | 4000000.0      |
| 5 0        | 5000000.0      | 5 0        | 5000000.0      | 5 0        | 5000000.0      | 5 0        | 5000000.0      | 5 0        | 5000000.0      |
| 6 0        | 6000000.0      | 6 0        | 6000000.0      | 6 0        | 6000000.0      | 6 0        | 6000000.0      | 6 0        | 6000000.0      |
| 7 0        | 7000000.0      | 7 0        | 7000000.0      | 7 0        | 7000000.0      | 7 0        | 7000000.0      | 7 0        | 7000000.0      |
| 8 0        | 8000000.0      | 8 0        | 8000000.0      | 8 0        | 8000000.0      | 8 0        | 8000000.0      | 8 0        | 8000000.0      |
| 1 0        | 10000000.0     | 1 0        | 10000000.0     | 1 0        | 10000000.0     | 1 0        | 10000000.0     | 1 0        | 10000000.0     |
| 2 0        | 20000000.0     | 2 0        | 20000000.0     | 2 0        | 20000000.0     | 2 0        | 20000000.0     | 2 0        | 20000000.0     |
| 3 0        | 30000000.0     | 3 0        | 30000000.0     | 3 0        | 30000000.0     | 3 0        | 30000000.0     | 3 0        | 30000000.0     |
| 4 0        | 40000000.0     | 4 0        | 40000000.0     | 4 0        | 40000000.0     | 4 0        | 40000000.0     | 4 0        | 40000000.0     |
| 5 0        | 50000000.0     | 5 0        | 50000000.0     | 5 0        | 50000000.0     | 5 0        | 50000000.0     | 5 0        | 50000000.0     |
| 6 0        | 60000000.0     | 6 0        | 60000000.0     | 6 0        | 60000000.0     | 6 0        | 60000000.0     | 6 0        | 60000000.0     |
| 7 0        | 70000000.0     | 7 0        | 70000000.0     | 7 0        | 70000000.0     | 7 0        | 70000000.0     | 7 0        | 70000000.0     |
| 8 0        | 80000000.0     | 8 0        | 80000000.0     | 8 0        | 80000000.0     | 8 0        | 80000000.0     | 8 0        | 80000000.0     |
| 1 0        | 100000000.0    | 1 0        | 100000000.0    | 1 0        | 100000000.0    | 1 0        | 100000000.0    | 1 0        | 100000000.0    |
| 2 0        | 200000000.0    | 2 0        | 200000000.0    | 2 0        | 200000000.0    | 2 0        | 200000000.0    | 2 0        | 200000000.0    |
| 3 0        | 300000000.0    | 3 0        | 300000000.0    | 3 0        | 300000000.0    | 3 0        | 300000000.0    | 3 0        | 300000000.0    |
| 4 0        | 400000000.0    | 4 0        | 400000000.0    | 4 0        | 400000000.0    | 4 0        | 400000000.0    | 4 0        | 400000000.0    |
| 5 0        | 500000000.0    | 5 0        | 500000000.0    | 5 0        | 500000000.0    | 5 0        | 500000000.0    | 5 0        | 500000000.0    |
| 6 0        | 600000000.0    | 6 0        | 600000000.0    | 6 0        | 600000000.0    | 6 0        | 600000000.0    | 6 0        | 600000000.0    |
| 7 0        | 700000000.0    | 7 0        | 700000000.0    | 7 0        | 700000000.0    | 7 0        | 700000000.0    | 7 0        | 700000000.0    |
| 8 0        | 800000000.0    | 8 0        | 800000000.0    | 8 0        | 800000000.0    | 8 0        | 800000000.0    | 8 0        | 800000000.0    |
| 1 0        | 1000000000.0   | 1 0        | 1000000000.0   | 1 0        | 1000000000.0   | 1 0        | 1000000000.0   | 1 0        | 1000000000.0   |
| 2 0        | 2000000000.0   | 2 0        | 2000000000.0   | 2 0        | 2000000000.0   | 2 0        | 2000000000.0   | 2 0        | 2000000000.0   |
| 3 0        | 3000000000.0   | 3 0        | 3000000000.0   | 3 0        | 3000000000.0   | 3 0        | 3000000000.0   | 3 0        | 3000000000.0   |
| 4 0        | 4000000000.0   | 4 0        | 4000000000.0   | 4 0        | 4000000000.0   | 4 0        | 4000000000.0   | 4 0        | 4000000000.0   |
| 5 0        | 5000000000.0   | 5 0        | 5000000000.0   | 5 0        | 5000000000.0   | 5 0        | 5000000000.0   | 5 0        | 5000000000.0   |
| 6 0        | 6000000000.0   | 6 0        | 6000000000.0   | 6 0        | 6000000000.0   | 6 0        | 6000000000.0   | 6 0        | 6000000000.0   |
| 7 0        | 7000000000.0   | 7 0        | 7000000000.0   | 7 0        | 7000000000.0   | 7 0        | 7000000000.0   | 7 0        | 7000000000.0   |
| 8 0        | 8000000000.0   | 8 0        | 8000000000.0   | 8 0        | 8000000000.0   | 8 0        | 8000000000.0   | 8 0        | 8000000000.0   |
| 1 0        | 10000000000.0  | 1 0        | 10000000000.0  | 1 0        | 10000000000.0  | 1 0        | 10000000000.0  | 1 0        | 10000000000.0  |
| 2 0        | 20000000000.0  | 2 0        | 20000000000.0  | 2 0        | 20000000000.0  | 2 0        | 20000000000.0  | 2 0        | 20000000000.0  |
| 3 0        | 30000000000.0  | 3 0        | 30000000000.0  | 3 0        | 30000000000.0  | 3 0        | 30000000000.0  | 3 0        | 30000000000.0  |
| 4 0        | 40000000000.0  | 4 0        | 40000000000.0  | 4 0        | 40000000000.0  | 4 0        | 40000000000.0  | 4 0        | 40000000000.0  |
| 5 0        | 50000000000.0  | 5 0        | 50000000000.0  | 5 0        | 50000000000.0  | 5 0        | 50000000000.0  | 5 0        | 50000000000.0  |
| 6 0        | 60000000000.0  | 6 0        | 60000000000.0  | 6 0        | 60000000000.0  | 6 0        | 60000000000.0  | 6 0        | 60000000000.0  |
| 7 0        | 70000000000.0  | 7 0        | 70000000000.0  | 7 0        | 70000000000.0  | 7 0        | 70000000000.0  | 7 0        | 70000000000.0  |
| 8 0        | 80000000000.0  | 8 0        | 80000000000.0  | 8 0        | 80000000000.0  | 8 0        | 80000000000.0  | 8 0        | 80000000000.0  |
| 1 0        | 100000000000.0 | 1 0        | 100000000000.0 | 1 0        | 100000000000.0 | 1 0        | 100000000000.0 | 1 0        | 100000000000.0 |
| 2 0        | 200000000000.0 | 2 0        | 200000000000.0 | 2 0        | 200000000000.0 | 2 0        | 200000000000.0 | 2 0        | 200000000000.0 |
| 3 0        | 300000000000.0 | 3 0        | 300000000000.0 | 3 0        | 300000000000.0 | 3 0        | 300000000000.0 | 3 0        | 300000000000.0 |
| 4 0        | 400000000000.0 | 4 0        | 400000000000.0 | 4 0        | 400000000000.0 | 4 0        | 400000000000.0 | 4 0        | 400000000000.0 |
| 5 0        | 500000000000.0 | 5 0        | 500000000000.0 | 5 0        | 500000000000.0 | 5 0        | 50             |            |                |


MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

GAMBLE-SKOGMO INC.

MINNEAPOLIS, MINNESOTA

Model 1682A

| Generator Frequency | Connection at Radio         | Dummy Antenna | Range Switch Setting | Dial Setting          | Trimmers to Tune                | Approx. Sensitivity .05 Watt O. P |
|---------------------|-----------------------------|---------------|----------------------|-----------------------|---------------------------------|-----------------------------------|
| I. F. 456 k.c.      | Center Stator of Var. Cond. | .1 Mfd.       | B. C.                | H. F. End             | I. F. Trans. Tune to Max.       | 65 to 75 Mv.                      |
| B. C. 1650 k.c.     | Ant.                        | 200 Mmf.      | B. C.                | H. F. Limit of Travel | B., C. Osc.                     | —                                 |
| 1400 k.c.           | "                           | "             | "                    | 1400— See Note "A"    | B. C. RF. " " Loop Tune to Max. | 20 Mv.                            |
| 600 k.c.            | "                           | "             | "                    | 600— Rock Rotor       | Padder                          | 15 Mv.                            |
| 11.6 m.c.           | Ant.                        | 400 Ohms      | S. W.                | 11.6 m.c.             | S. W. Osc                       | 40 to 50 Mv.                      |
| 9.6 m.c.            | Ant.                        | 400 Ohms      | S. W.                | Check Dial at 9.6 Mc. |                                 |                                   |

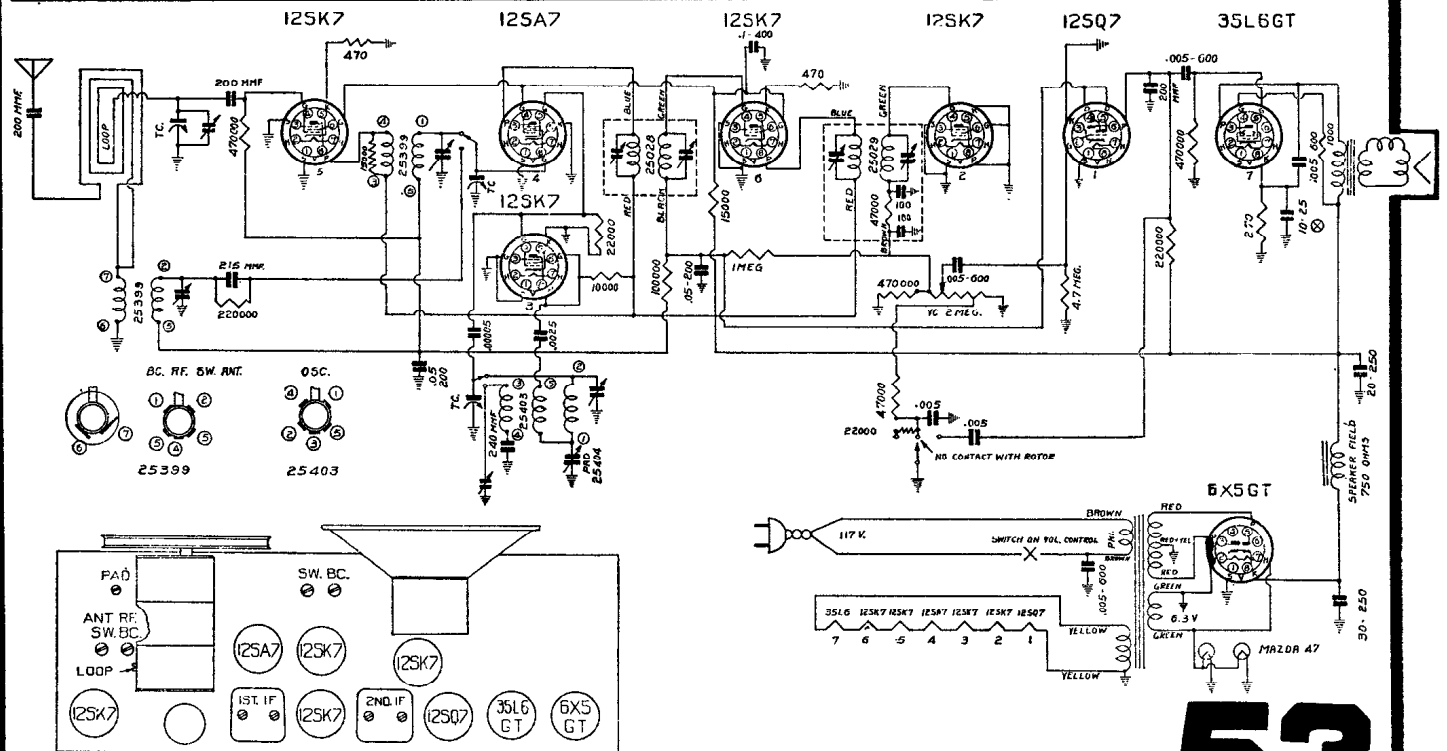

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS





# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## ALIGNMENT PROCEDURE

# GENERAL ELECTRIC Alignment Frequencies

### MODELS L500, L510, L550, L560

I.F. .... 455 KC  
 R.F. .... 1500 KC  
 The location of all trimmers is shown in Fig. 1.

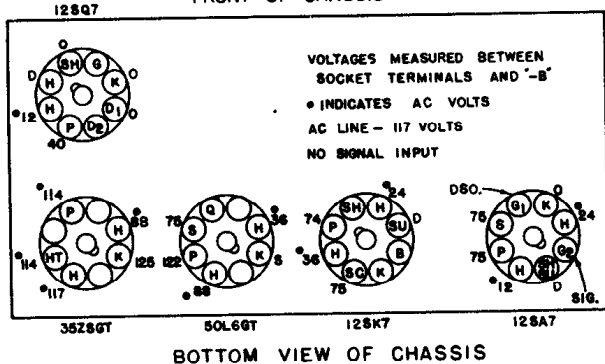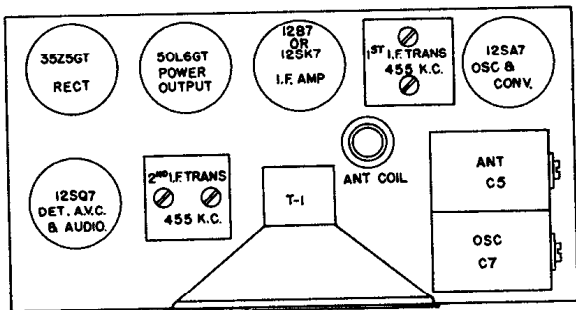

|         |   |
|---------|---|
| C1      | CAPACITOR—.05 mfd., 200 V. paper.....   |
| C2      | CAPACITOR—.20 mfd., 400 V. paper.....   |
| C3      | CAPACITOR—470 mmf., mica.....           |
| C6a, 6b | CONDENSER—Tuning condenser.....         |
| C8      | CAPACITOR—.05 mfd., 200 V. paper.....   |
| C14     | CAPACITOR—330 mmf., mica.....           |
| C15     | CAPACITOR—.005 mfd., 600 V. paper.....  |
| C16     | CAPACITOR—330 mmf., mica.....           |
| C17     | CAPACITOR—.01 mfd., 600 V. paper.....   |
| C18     | CAPACITOR—.02 mfd., 600 V. paper.....   |
| C19a    | CAPACITOR—20 mfd., 150 V. electrolytic  |
| C19b    | CAPACITOR—30 mfd., 150 V. electrolytic  |
| C21     | CAPACITOR—.05 mfd., 600 V. paper.....   |
| C22     | CAPACITOR—100 mmf., mica.....           |
| R1      | RESISTOR—330,000 ohms, 1/4 W. carbon... |
| R2      | RESISTOR—22,000 ohms, 1/4 W. carbon...  |
| R3      | RESISTOR—2.2 megohms, 1/4 W. carbon...  |
| R4      | VOL. CONTROL—.5 megohm control.....     |
| R5      | RESISTOR—4.7 megohms, 1/4 W. carbon...  |
| R6      | RESISTOR—270,000 ohms, 1/4 W. carbon... |
| R7      | RESISTOR—470,000 ohms, 1/4 W. carbon... |
| R8      | RESISTOR—150 ohms, 1/4 W. carbon.....   |
| R9      | RESISTOR—2,700 ohms, 1 W. carbon.....   |
| R11     | RESISTOR—13 ohms, 1/4 W. carbon. (12B7) |

### I.F. Alignment

Connect an output meter across the voice coil. Turn the volume control to maximum. Set test oscillator to 455 KC and keep the oscillator output as low as a readable meter reading will permit.

Apply signal to the converter grid through a .05 mfd. capacitor and align progressively the trimmers in the 2nd and 1st I.F. transformer cans.

### R.F. Alignment

Close the gang condenser by rotating the tuning control. Slide the pointer along the cord until it lines up with the first dial marking on the left. Now rotate the tuning control until the pointer is over the 1500 KC dial mark. Apply a 1500 KC signal to the receiver antenna post through a standard I.R.E. dummy antenna. Align the oscillator trimmer (C-7) to bring in the signal and peak the signal by adjusting the antenna trimmer (C-5). (See Fig. 1 for trimmer locations.)

### Precaution


If the signal generator is AC operated, use an isolating transformer between the power supply and the radio receiver power input. The use of an isolating capacitor is not recommended as AC current through the capacitor will introduce hum modulation and/or create the possibility of a burned-out signal generator attenuator.

### Special Service Information

The following information will be very useful in servicing receivers if a vacuum tube voltmeter or similar voltage measuring instrument is available.

- Stage Gains\*  
 Antenna Post to Converter Grid.... 4.0 at 1000 KC  
 I.F. on Converter Grid to I.F. on I.F.  
 Amplifier Grid..... 50 at 455 KC  
 I.F. Amplifier Grid to Diode Plate... 45 at 455 KC
- 0.20-volt, 400-cycle signal across the volume control will give 1/2-watt speaker output.\* (Volume control turned to maximum.)
- Average DC voltage developed across oscillator grid leak..... 6 volts

\* Variations of ±20% permissible. All readings obtained with enough signal input to give 1/4-watt speaker output.

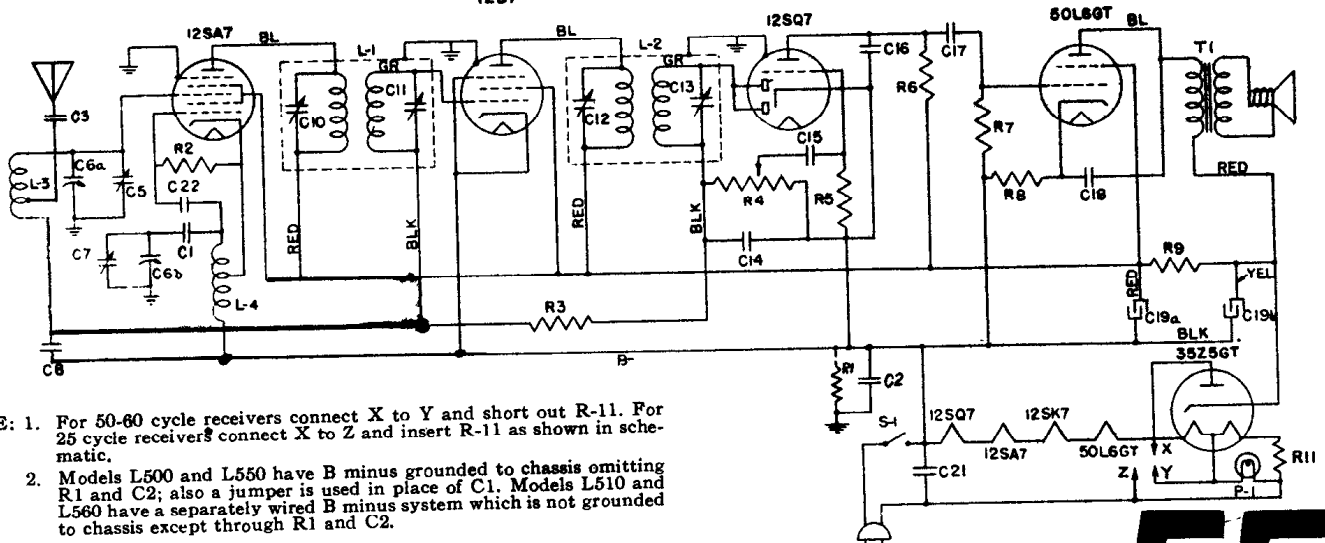

NOTE: 1. For 50-60 cycle receivers connect X to Y and short out R-11. For 25 cycle receivers connect X to Z and insert R-11 as shown in schematic.  
 2. Models L500 and L550 have B minus grounded to chassis omitting R1 and C2; also a jumper is used in place of C1. Models L510 and L560 have a separately wired B minus system which is not grounded to chassis except through R1 and C2.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## GENERAL ELECTRIC

### Six-tube Superheterodyne with Electric Tuning Keys

## MODEL L-660

#### Alignment Frequencies

RF ..... 1500 KC  
 IF ..... 455 KC

The chassis must be removed from the cabinet as described above to make the following alignments. The locations of all trimmers is shown in Fig. 1.

#### IF Alignment

Connect an output meter across the voice coil. Turn the volume control to maximum. Set test oscillator to 455 KC and keep the oscillator output as low as a readable meter reading will permit.

Apply signal to the 12SA7 converter grid through a .05 mfd. capacitor and align progressively the trimmers in the 2nd and 1st IF transformers.

#### RF Alignment

When making the following alignment the loop antenna must be bolted to the chassis by the two mounting screws. Since the glass dial scale is fastened to the cabinet, it cannot be used for reference during the alignment of the chassis outside the cabinet. Use must be made therefore of the four calibration marks at the bottom flange of the dial scale reflector plate (immediately below end of dial scale pointer). These marks referring from left to right are as follows: Reference point, 580 KC, 1000 KC, and 1500 KC.

The RF signal should be capacity coupled to the receiver loop by placing a two foot piece of wire for an antenna on the test oscillator output post (high side). Keeping this antenna two feet or more from the receiver loop will generally insure freedom from too much coupling.

With the gang condenser plates completely closed, the end of the pointer should line up with the first mark to the left of the dial reflector plate. If it doesn't the pointer can be moved on the dial cord until it does. Set the signal generator to 1500 KC. Set pointer to the 1500 KC mark (extreme right flange mark) and align (C2B) to the signal. Peak (C2A) for maximum output.

| Part No. | Symbol     | Description   |
|----------|------------|---|
| RC-7088  | C1A, 1B    | CONDENSER—Tuning Condenser (with trimmers 2A, 2B mounted) |
| RC-255   | C2         | CAPACITOR—100 Mfd., mica                                  |
| RC-274   | C3         | CAPACITOR—200 Mfd., mica                                  |
| RC-242   | C4         | CAPACITOR—100 Mfd., mica                                  |
| RC-252   | C5         | CAPACITOR—200 Mfd., mica                                  |
| RC-272   | C6         | CAPACITOR—40 Mfd., 200 V. paper                           |
| RC-150   | C7         | CAPACITOR—0.2 Mfd., 400 V. paper                          |
| RC-216   | C8         | CAPACITOR—47 Mfd., mica                                   |
| RC-238   | C9         | CAPACITOR—0.1 Mfd., 800 V. paper                          |
| RC-218   | C10        | CAPACITOR—25 Mfd., 400 V. paper                           |
| RC-262   | C11        | CAPACITOR—40 Mfd., 150 V. dry                             |
| RC-5187  | C12        | electrolytic  |
|          | C13        | CAPACITOR—30 Mfd., 150 V. dry                             |
| RT-881   | C14, C15   | TRIMMER STRIP—Station key adjustments (P.F. section)      |
| RT-882   | C16, C17   | TRIMMER STRIP—Station key adjustments (O.C. section)      |
| RC-818   | C18        | CAPACITOR—500 Mfd., 600 V. paper                          |
| RC-1219  | R1         | RESISTOR—25 ohm, 1/4 W. carbon                            |
| RC-1220  | R2         | RESISTOR—200 ohm, 1/4 W. carbon                           |
| RC-1221  | R3         | RESISTOR—1,000 ohm, 1/4 W. carbon                         |
| RC-1222  | R4         | RESISTOR—3,000 ohm, 1/4 W. carbon                         |
| RC-1223  | R5         | RESISTOR—150 ohm, 1/4 W. carbon                           |
| RC-1224  | R6         | RESISTOR—2.2 megohm, 1/4 W. carbon                        |
| RV-125   | RT, S1     | VOLUME CONTROL—0.5 megohm control and power switch        |
| RC-1248  | R7         | RESISTOR—50 megohm, 1/4 W. carbon                         |
| RC-1225  | R8, 10, 11 | RESISTOR—100 ohm, 1/4 W. carbon                           |
| RC-1226  | R9         | RESISTOR—100 ohm, 1/4 W. carbon                           |
| RC-451   | R10        | RESISTOR—1,000 ohm, 1/2 W. carbon                         |
| RC-511   | R11        | RESISTOR—100 ohm, 1/4 W. carbon                           |
| RC-3100  | S2         | SWITCH—Tone control switch                                |
| RC-3114  | S3         | SWITCH—Automatic tuning switch (see schematic)            |
| RL-865   | L1         | BEAM-A-SCOPE—Loop antenna and cabinet back assembly       |
| RL-2043  | T2         | COIL—Oscillator coil and clip                             |



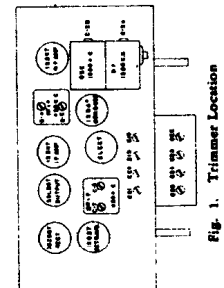



Fig. 1. Trimmer Location

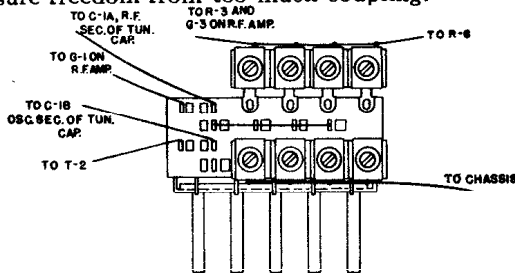

Selector Switch Wiring

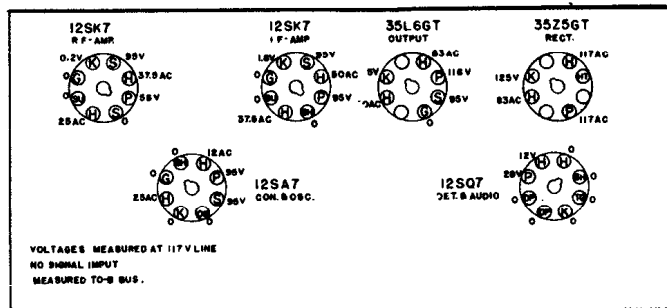

FRONT OF CHASSIS  
 BOTTOM VIEW OF CHASSIS

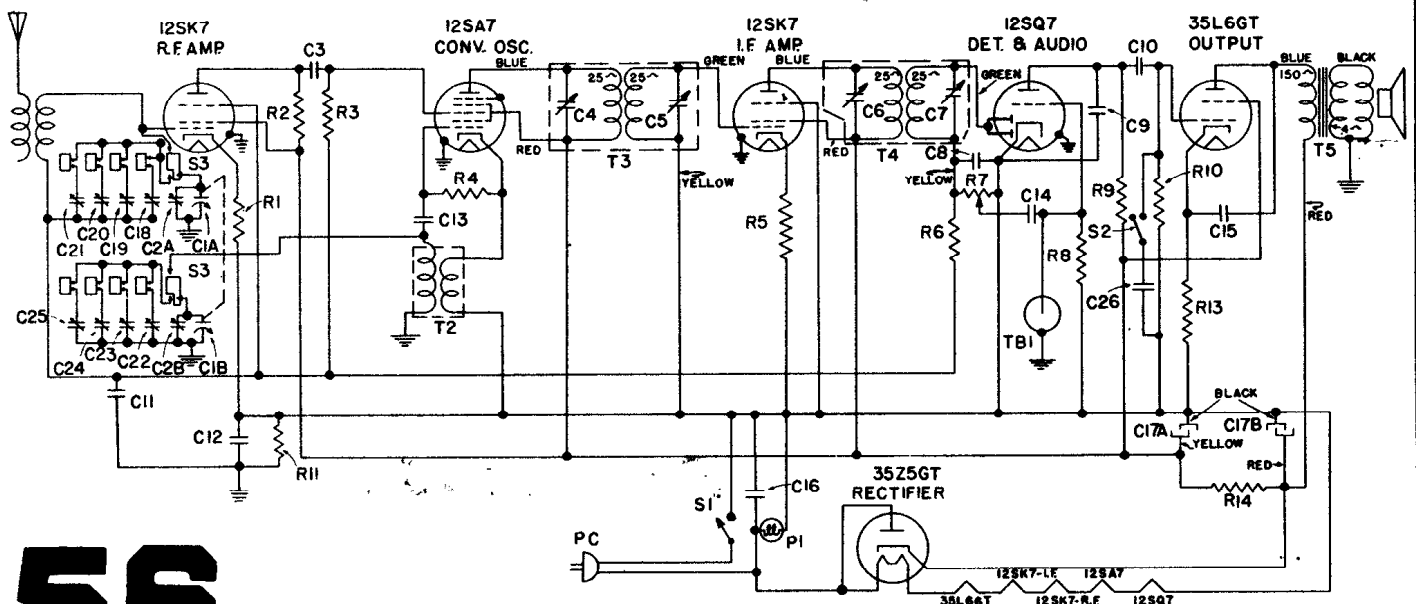



56

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## PARTS LIST

| Symbol                        | Description                       |
|-------------------------------|-----------------------------------|
| C-1                           | ..FM antenna trimmer              |
| C-2                           | ..FM RF trimmer                   |
| C-3                           | ..FM Tuning condenser—RP          |
| C-4                           | ..FM oscillator trimmer           |
| C-5                           | ..FM tuning condenser—oscillator  |
| C-6                           | 47 mmf. mica capacitor            |
| C-7                           | 10 mmf. compensating capacitor    |
| C-8                           | ..BC band mmf., RF trimmer        |
| C-9                           | 3000 mmf. mica capacitor          |
| C-10                          | ..SW band RF trimmer              |
| C-11                          | ..AM tuning condenser—RP          |
| C-12                          | 220 mmf. mica capacitor           |
| C-13                          | 02 mfd. paper capacitor           |
| C-14                          | 05 mfd. paper capacitor           |
| C-15                          | 47 mmf. mica capacitor            |
| C-16                          | ..B Band trimmer                  |
| C-17                          | ..AM tuning condenser—converter   |
| C-18                          | ..D Band trimmer                  |
| C-19                          | 3000 mmf. mica capacitor          |
| C-20                          | 05 mfd. paper capacitor           |
| C-21                          | ..AM tuning condenser—oscillator  |
| C-22                          | ..D band trimmer                  |
| C-23                          | ..B band trimmer                  |
| C-24                          | 500 mmf. padder                   |
| C-25                          | 65 mmf. compensating capacitor    |
| C-26                          | 65 mfd. paper capacitor           |
| C-27                          | 005 mfd. paper capacitor          |
| C-28                          | ..FM tuning condenser—converter   |
| C-29                          | ..FM converter trimmer            |
| C-30                          | ..FM band trimmer                 |
| C-31, -32                     | 05 mfd. paper capacitor           |
| C-33, -34                     | 02 mfd. paper capacitor           |
| C-35                          | 05 mfd. paper capacitor           |
| C-36                          | 004 mfd. paper capacitor          |
| C-37, -38                     | 01 mfd. paper capacitor           |
| C-39                          | 005 mfd. paper capacitor          |
| C-40                          | 100 mmf. mica capacitor           |
| C-41, -42, -43, -44, -45      | 33 mmf. mica capacitor            |
| C-46                          | 47 mmf. mica capacitor            |
| C-47                          | 22 mmf. mica capacitor            |
| C-48                          | 02 mfd. paper capacitor           |
| C-49                          | 47 mmf. mica capacitor            |
| C-50                          | 8 mmf. compensating capacitor     |
| C-51                          | 220 mmf. mica capacitor           |
| C-52                          | 01 mfd. paper capacitor           |
| C-53                          | 220 mmf. mica capacitor           |
| C-54                          | 100 mmf. mica capacitor           |
| C-55                          | 01 mfd. paper capacitor           |
| C-56                          | 65 mfd. paper capacitor           |
| C-57, -58, -59                | 006 mfd. paper capacitor          |
| C-60                          | 002 mfd. paper capacitor          |
| C-61, -62, -63, -64, -65      | 38 mfd. dry electrolytic          |
| C-66                          | 13 mfd. dry electrolytic          |
| C-67, -68, -69, -70, -71, -72 | 16 mfd. dry electrolytic          |
| C-73a                         | 20 mfd. dry electrolytic          |
| C-73b                         | 20 mfd. dry electrolytic          |
| C-73c                         | 20 mfd. dry electrolytic          |
| C-73d                         | 20 mfd. dry electrolytic          |
| C-74                          | 05 mfd. paper capacitor           |
| C-75                          | ..FM RF padder                    |
| C-76                          | ..FM Oscillator padder            |
| C-77                          | ..FM Converter padder             |
| C-78                          | 270 mmf. mica capacitor           |
| C-79                          | 65 mmf. compensating capac        |
| R-1                           | 1.5 megohm, carbon resistor       |
| R-2                           | 3,900 ohm, carbon resistor        |
| R-3                           | 100,000 ohm, carbon resistor      |
| R-4                           | 33,000 ohm, carbon resistor       |
| R-5, -6                       | 2,300 ohm, carbon resistor        |
| R-7                           | 33,000 ohm, carbon resistor       |
| R-8                           | 330 ohm, carbon resistor          |
| R-9                           | 1,200 ohm, carbon resistor        |
| R-10                          | 10,000 ohm, carbon resistor       |
| R-11                          | 2,200 ohm, carbon resistor        |
| R-12                          | 22,000 ohm, carbon resistor       |
| R-13                          | 1.5 megohm, carbon resistor       |
| R-14                          | 330 ohm, carbon resistor          |
| R-15                          | 15,000 ohm, carbon resistor       |
| R-16                          | 2,200 ohm, carbon resistor        |
| R-17                          | 2.2 megohm, carbon resistor       |
| R-18                          | 100,000 ohm, carbon resistor      |
| R-19                          | 220,000 ohm, carbon resistor      |
| R-20                          | 4,300 ohm, carbon resistor        |
| R-21                          | 180,000 ohm, carbon resistor      |
| R-22                          | 47,000 ohm, carbon resistor       |
| R-23, -24                     | 9.8 megohm, carbon resistor       |
| R-25                          | 2 megohm, volume control          |
| R-26                          | 68,000 ohm, carbon resistor       |
| R-27                          | 22 ohm, carbon resistor           |
| R-28                          | 2.2 megohm, carbon resistor       |
| R-29                          | 1.0 megohm, carbon resistor       |
| R-30                          | 10,000 ohm, carbon resistor       |
| R-31                          | 68,000 ohm, carbon resistor       |
| R-32                          | 220,000 ohm, carbon resistor      |
| R-33                          | 2,500 ohm, wire wound resistor    |
| R-34                          | 1,000 ohm, carbon resistor        |
| R-35                          | 68,000 ohm, carbon resistor       |
| R-36                          | 100,000 ohm, carbon resistor      |
| R-37, -38                     | 3,300 ohm, carbon resistor        |
| R-39                          | 470,000 ohm, carbon resistor      |
| R-40                          | 33,000 ohm, carbon resistor       |
| R-41, -42                     | 220,000 ohm, carbon resistor      |
| R-43                          | 0.5 megohm, variable-tone control |
| R-44                          | 2,500 ohm, carbon resistor        |
| R-45                          | 1,000 ohm, carbon resistor        |
| R-46                          | 220,000 ohm, carbon resistor      |
| R-47                          | 2,500 ohm, carbon resistor        |
| R-48                          | 100,000 ohm, carbon resistor      |
| R-49                          | 47,000 ohm, carbon resistor       |
| R-50                          | 220,000 ohm, carbon resistor      |
| R-51                          | 1,000 ohm, carbon resistor        |
| R-52                          | 220,000 ohm, carbon resistor      |
| R-53                          | 100,000 ohm, carbon resistor      |
| R-54                          | 47,000 ohm, carbon resistor       |
| R-55                          | 220,000 ohm, carbon resistor      |
| R-56                          | 1,000 ohm, carbon resistor        |
| R-57                          | 220,000 ohm, carbon resistor      |
| R-58                          | 520,000 ohm, carbon resistor      |

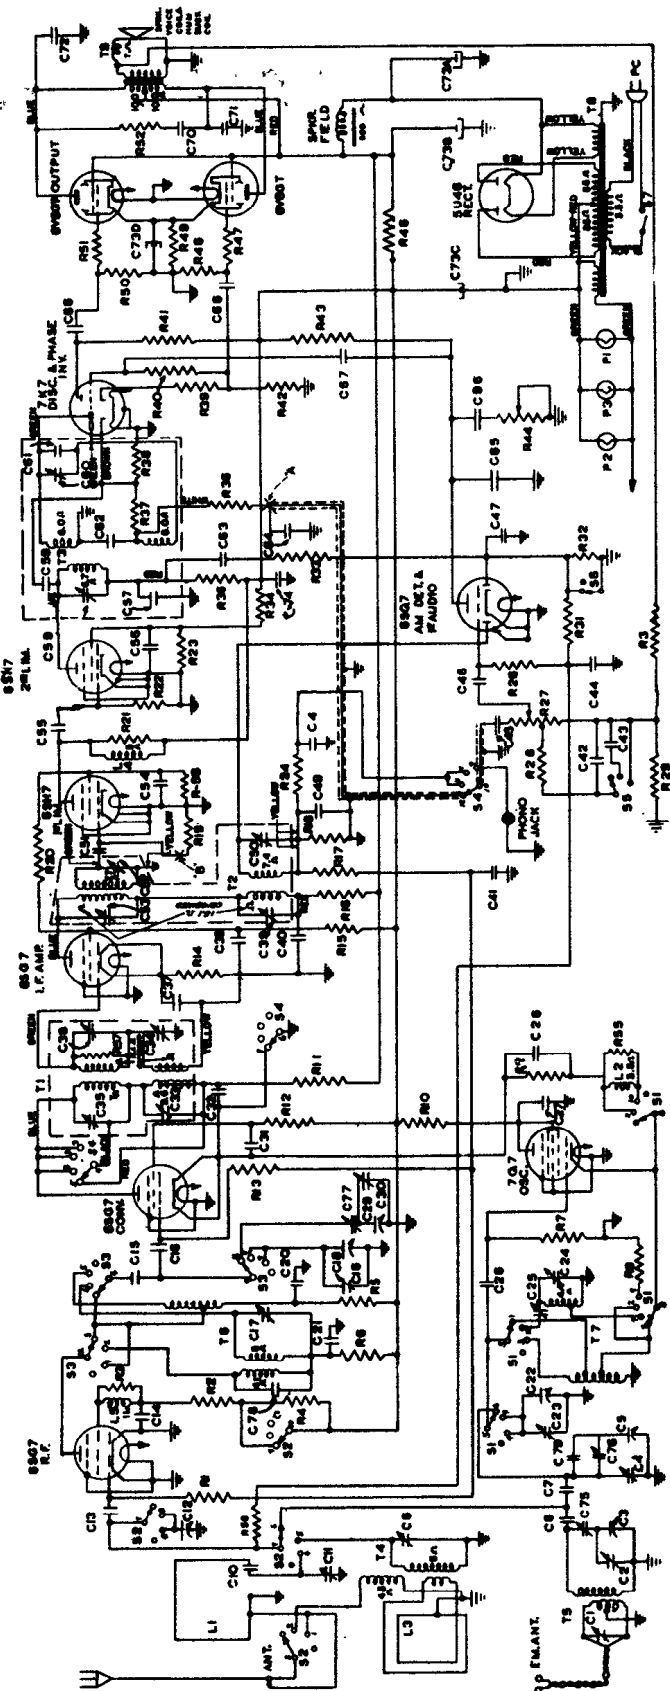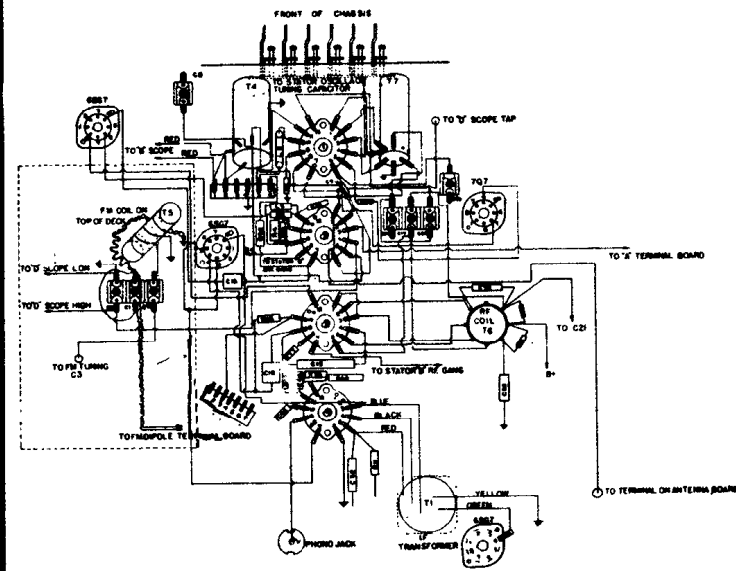

**GENERAL ELECTRIC**

**A-FM COMBINATION RECEIVERS**

**Models LF-115 & LF-116**

**AND**

**A-FM PHONOGRAPH COMBINATION RECEIVERS**

**Models LFC-1118, LFC-1128 & LFC-1228**

**COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS**



# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## IF ALIGNMENT WITH OSCILLOSCOPE—"FM" CHANNEL

| Step | Input Signal Connected to                  | Input Frequency        | Band and Pointer Setting | Trimmer Adjustment | Comments   |
|------|--|------------------------|--------------------------|--------------------|--|
| 1    | 6SG7 converter grid in series with 22 mmf. | 4.3 MC & ±200 KC Sweep | "FM" Band<br>42 MC       | C52<br>C53         | Connect high side of oscilloscope in series with 470,000 ohm resistor to R19 at point "B." Connect low side to chassis ground. Peak trimmers for resultant curve shown   |
| 2    | 6SG7 converter grid in series with 22 mmf. | 4.3 KC & ±200 KC Sweep | "FM" Band<br>42 MC       | C35<br>C36         |  |
| 3    | Repeat Step 1                              |                        |                          |                    |  |
| 4    | Repeat Step 2                              |                        |                          |                    |  |
| 5    | 6SG7 converter grid in series with 22 mmf. | 4.3 MC & ±200 KC Sweep | "FM" Band<br>42 MC       | C60<br>C58         | Connect high side of oscilloscope in series with 470,000 ohm resistor to R36, point "A." Connect low side to chassis ground. Peak trimmers for resultant curve shown in Fig. 4. C60 is aligned when curve crosses midway in vertical plane. Proper alignment of C58 gives straightest sides to curve near crossover point. |



Table II IF ALIGNMENT WITH METER—"FM" CHANNEL

| Step | Input Signal Connected to                  | Input Frequency           | Band and Pointer Setting | Trimmer Adjustment       | Comments  |
|------|--|---------------------------|--------------------------|--------------------------|---|
| 1    | 6SG7 converter grid in series with 22 mmf. | Unmodulated 4.3 MC signal | "FM" Band<br>42 MC       | C52<br>C53<br>C35<br>C36 | Connect the 10-volt scale of a 20,000 ohm per volt voltmeter in series with a 470,000 ohm resistor between point "B" and ground. Peak all trimmers for maximum output using just enough input signal to give a satisfactory output reading.   |
| 2    | Repeat Step 1                              |                           |                          |                          |   |
| 3    | 6SG7 converter grid in series with 22 mmf. | Unmodulated 4.3 MC signal | "FM" Band<br>42 MC       | C60<br>C58               | Connect the 10-volt scale of a 20,000 ohm per volt voltmeter in series with a 470,000-ohm resistor between points "A" and ground. <i>With C60 purposely detuned</i> , peak C58 for maximum meter reading. Align C60 for the 0 voltage point where the meter reading changes from a positive to negative value. Use as low a signal input as necessary to give a satisfactory meter reading. |

Table III RF ALIGNMENT—"FM" CHANNEL

| Step | Input Signal Connected to   | Input Frequency          | Band and Pointer Setting | Trimmer Adjustment | Comments   |  |
|------|-----------------------------|--------------------------|--------------------------|--------------------|--|--|
| 1    | Direct to "FM" Antenna Post | Unmodulated 49 MC signal | "FM" Band<br>49 MC       | C4<br>(Osc.)       | Connect the 10-volt range of a 20,000 ohm per volt voltmeter in series with a 470,000-ohm resistor to point "B." The other side of the voltmeter lead connects to chassis ground. Peak trimmers for maximum meter reading using just enough signal input to give satisfactory meter reading. |  |
| 2    | Direct to "FM" Antenna Post | Unmodulated 49 MC Signal | "FM" Band<br>49 MC       | C2<br>C30          |  |  |
| 3    | Direct to "FM" Antenna Post | Unmodulated 43 MC Signal | "FM" Band<br>43 MC       | C76<br>(Osc.)      |  |  |
| 4    | Direct to "FM" Antenna Post | Unmodulated 43 MC Signal | "FM" Band<br>43 MC       | C75<br>C77         |  |  |
| 5    | Direct to "FM" Antenna Post | Unmodulated 46 MC Signal | "FM" Band<br>46 MC       | C1                 |  |  |
| 6    | Repeat Step 1               |                          |                          |                    |  |  |
| 7    | Repeat Step 2               |                          |                          |                    |  |  |

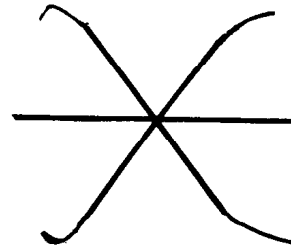


Fig. 4

Table IV IF, "BC," and "SW" ALIGNMENT—"AM" CHANNEL

| Step | Input Signal Connected to                   | Input Frequency   | Band and Pointer Setting | Trimmer Adjustment       | Comments  |
|------|---|-------------------|--------------------------|--------------------------|---|
| 1    | 6SG7 converter grid in series with .05 mfd. | 455 KC Modulated  | "BC" Band<br>550 KC      | C50<br>C39<br>C34<br>C33 | Connect 5.0-volt AC voltmeter across the voice coil of the speaker. Peak all trimmers for maximum output. All RF alignments must be made with the chassis in the cabinet. |
| 2    | Capacity Coupled                            | 17.8 MC Modulated | "SW" Band<br>17.8 MC     | C23*                     |   |
| 3    | Capacity Coupled                            | 17.8 MC Modulated | "SW" Band<br>17.8 MC     | C19**<br>C11             | *When aligning the SW oscillator trimmer, use maximum capacity peak. The image frequency should appear at 18,710 KC.<br>**Rock gang condenser when making alignment.      |
| 4    | Capacity Coupled                            | 1500 KC Modulated | "BC" Band<br>1500 KC     | C24                      |   |
| 5    | Capacity Coupled                            | 1500 KC Modulated | "BC" Band<br>1500 KC     | C17<br>C8                |   |
| 6    | Capacity Coupled                            | 580 KC Modulated  | "BC" Band<br>580 KC      | C25**                    |   |
| 7    | Repeat Steps 4 and 5                        |                   |                          |                          |   |

### A-FM COMBINATION RECEIVERS

Models LF-115 & LF-116


### A-FM PHONOGRAPH COMBINATION RECEIVERS

Models LFC-1118, LFC-1128 & LFC-1228

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

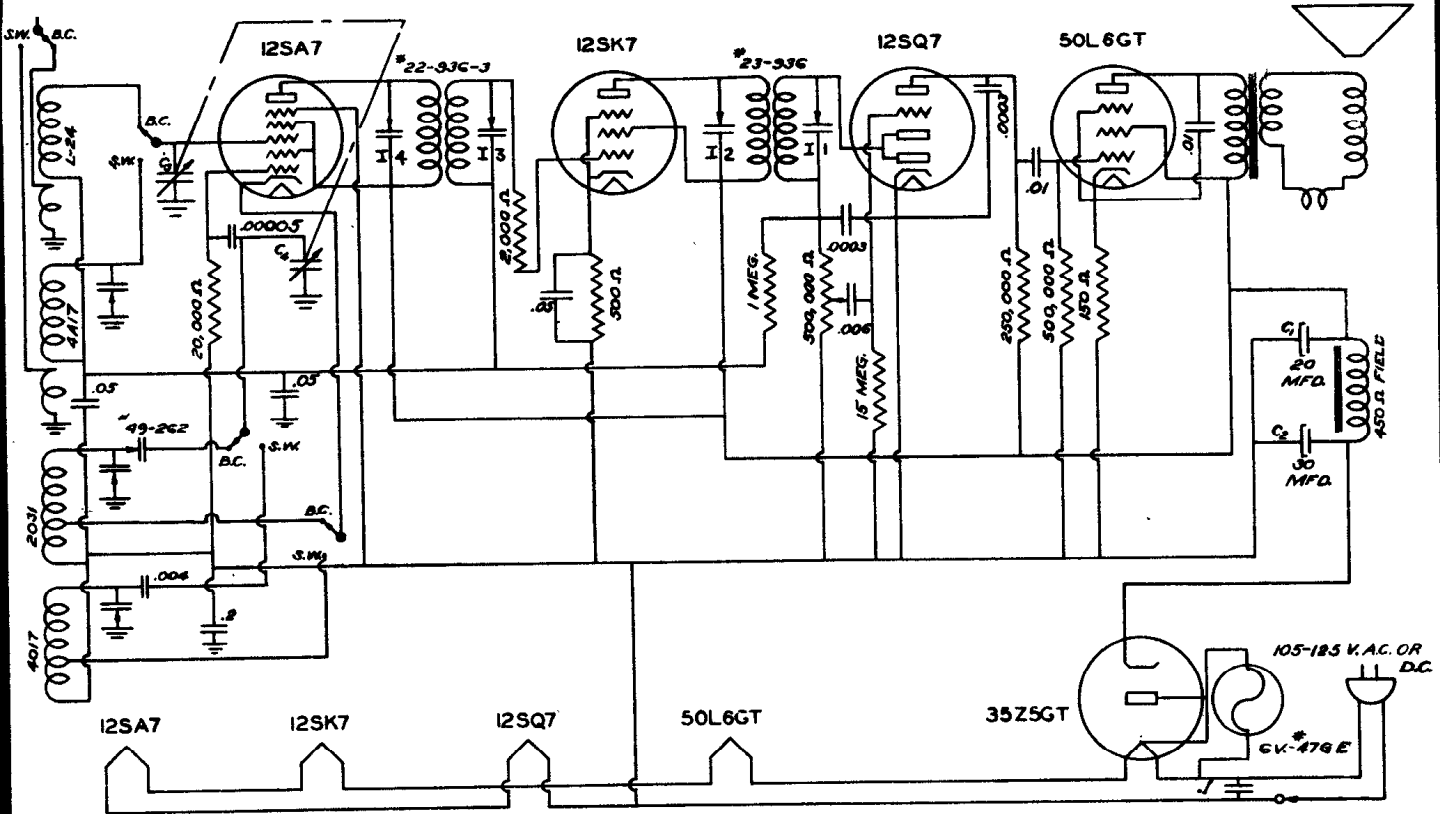

## ALIGNMENT PROCEDURE

| Wave-Band Switch Position | Position of Dial Pointer | Signal Generator Frequency | Signal Generator Connection | See Note | Trimmers Adjusted (In order shown)                                | Trimmer Function | Check for Image at |
|---------------------------|--------------------------|----------------------------|-----------------------------|----------|---|------------------|--------------------|
| KC                        | 540                      | 465                        | Grid of 12SA7               | A        | I <sub>1</sub> , I <sub>2</sub> , I <sub>3</sub> , I <sub>4</sub> | IF               |                    |
| MC                        | 14 MC                    | 14 MC                      | Ant. (Brown)                | B        | O <sub>5</sub> , A <sub>6</sub>                                   | Osc. Ant.        | 13 MC              |
| KC                        | 1400 KC                  | 1400 KC                    | Ant. (Brown)                |          | O <sub>7</sub>  | Osc.             |                    |

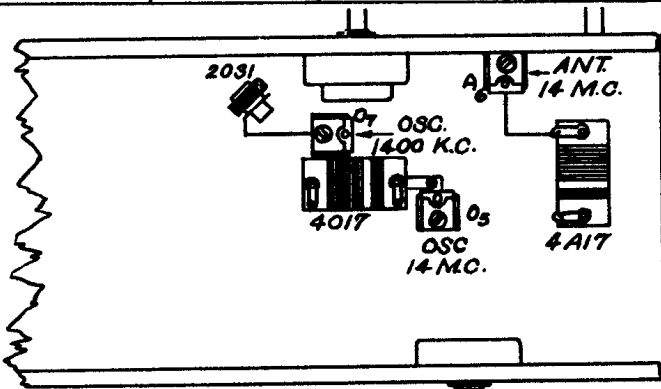

### SOCKET VOLTAGE READINGS

Voltage taken from B- with line voltage at 117 V. A.C.  
 High voltage reading off rectifier = 115V.  
 Drop across speaker field = 29V.  
 Use at least a 1000 Ohm per volt meter.  
 High voltage reading off rectifier = 121V.

**Howard Radio Co.**  
**Model 802**

# 60

A- Each step of the alignment should be repeated in the original order for greater accuracy. Keep output from Signal Generator low. The I.F. trimmers are reached through the two holes on the top of each I.F. can.  
 B- When aligning the short wave bands, do not adjust to the IMAGE frequency. For example, if the adjustment is correctly made at 14 MC, then a weaker image will be heard at 13,070 KC, in other words 930 KC less on the dial.


The tubes are connected in series in the order as shown by the schematic diagram.

The dual section filter condenser has a common negative, but note that it does not return to ground as the can is insulated from the chassis.

| TUBE   | FUNCTION  | CATH. | SG.    | PLATE |
|--------|-----------|-------|--------|-------|
| 12SA7  | Mixer     |       | * 92 4 | 92 3  |
| 12SK7  | I.F. Amp  | 2.1 5 | 92 6   | 92 8  |
| 12SQ7  | Det.      |       |        | 42 6  |
| 50L6GT | Output    | 6 8   | 92 4   | 82 3  |
| 35Z5GT | Rectifier | 121 8 |        |       |

\* Socket Terminal Number.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

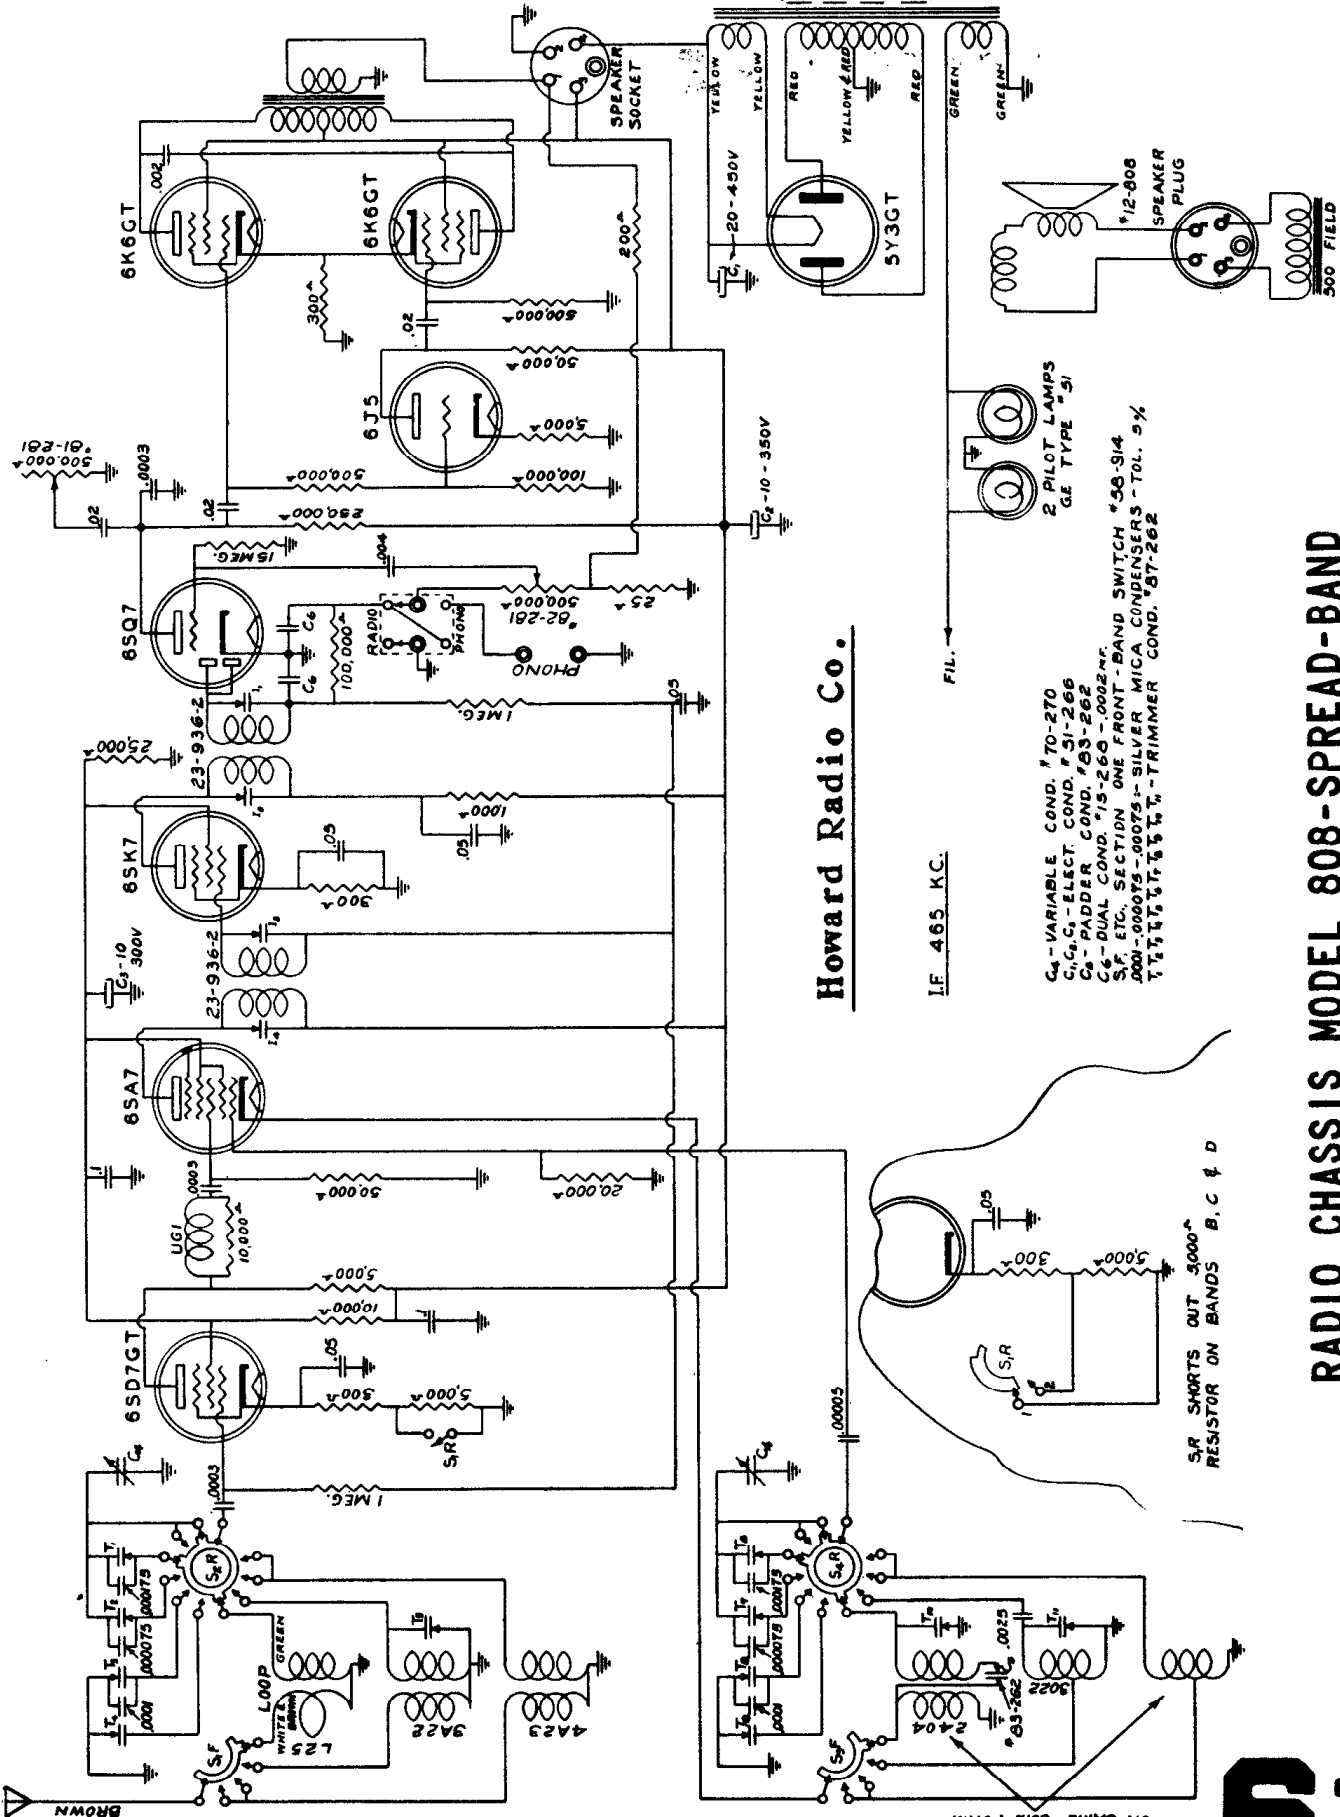

Howard Radio Co.

IF 465 KC.

- C<sub>1</sub> - VARIABLE COND. # 70-270
- C<sub>2</sub>, C<sub>3</sub> - ELECT COND. # 51-266
- C<sub>4</sub> - PADDER COND. # 63-262
- C<sub>5</sub> - DUAL COND. # 5-269 - 0002 MC
- C<sub>6</sub> - DUAL COND. # 5-269 - 0002 MC
- S.F. ETC. SECTION ONE FRONT-BAND SWITCH # 58-914
- 1000-.00075-.00075 - SILVER MICA CAPACITORS - TOL. 5%
- T<sub>1</sub>, T<sub>2</sub>, T<sub>3</sub>, T<sub>4</sub> - TRIMMER COND. 87-262

S.R. SHORTS OUT 5000Ω  
RESISTOR ON BANDS B, C & D

ON SAME COIL FORM


Howard Radio Co.

MODEL 668

10 Tube, 3 Band,  
Electrical Band Spread, R.F.  
Stage, Inverse Feed Back,  
Push-Pull Output

I.F. 465 K.C.



AS SWITCH IS SET TO HIGHER FREQUENCY BANDS THE SECONDARY COILS  
OF THE LOWER FREQUENCY BANDS ARE SHORTED OUT

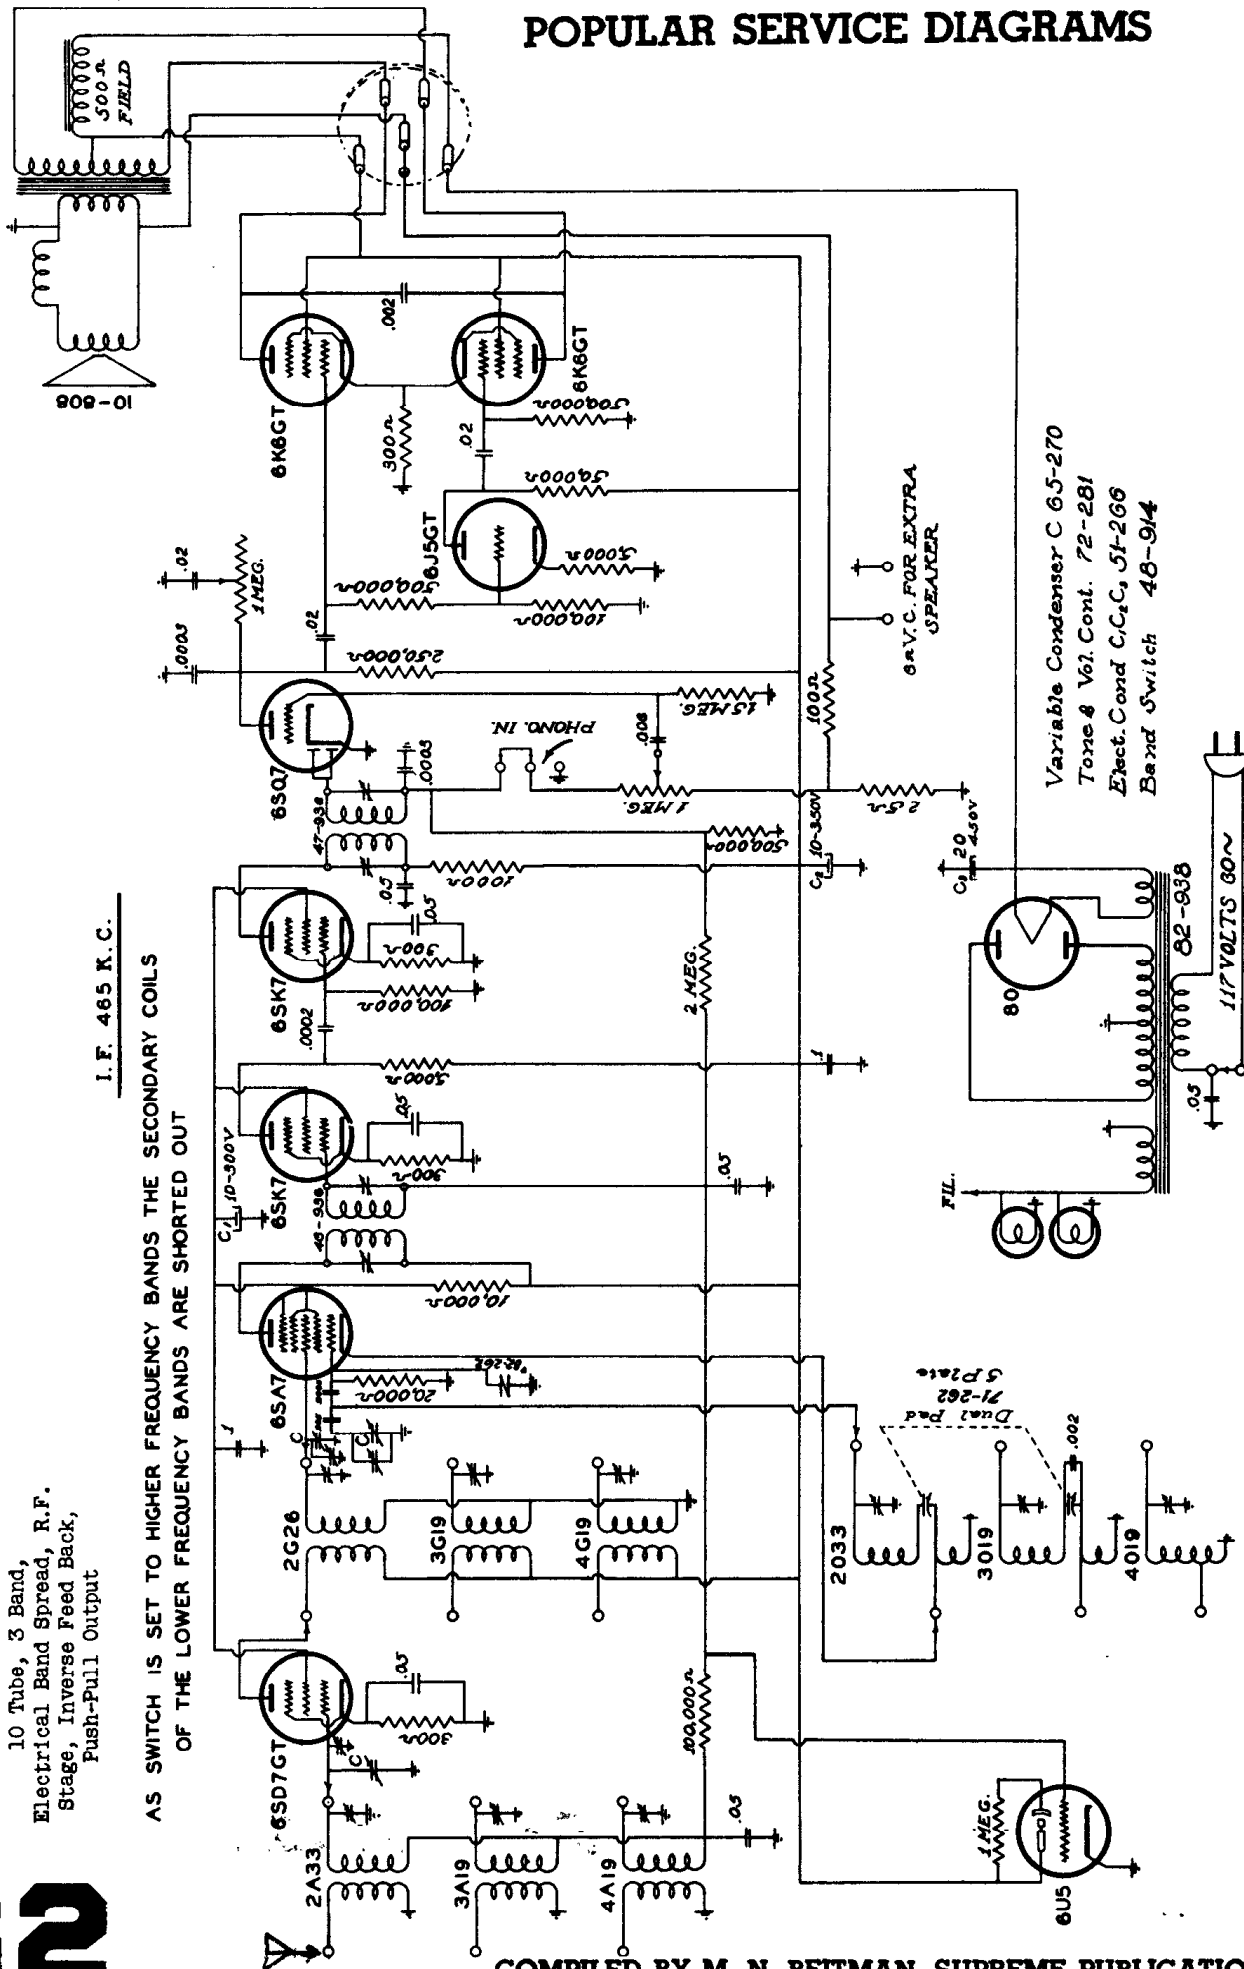

Variable Condenser C 65-270  
Tone & Vol. Cont. 72-281  
Elect. Cond C<sub>1</sub>C<sub>2</sub>C<sub>3</sub> 51-266  
Band Switch 48-914


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## MODEL 4B22

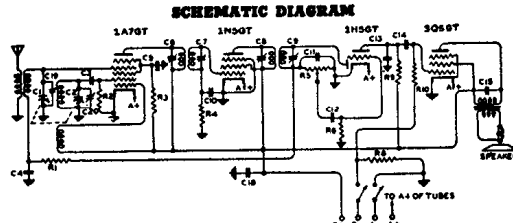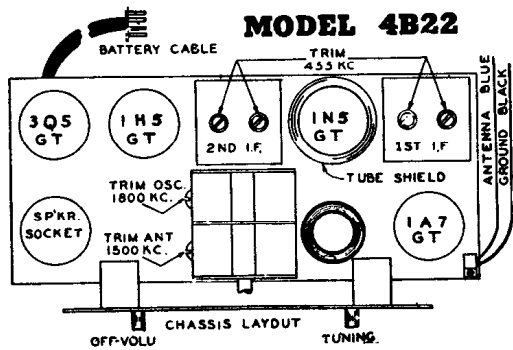

| Schematic Location | Description              | Schematic Location | Description            |
|--------------------|--------------------------|--------------------|------------------------|
| C1, C2             | .05 mid. 200V            | R10                | 500K ohm 1/4W Resistor |
| C10, C12           | .01 mid. 200V            | R11                | 1 Megohm 1/4W Resistor |
| C13                | .005 mid. 400V           | R12                | 400 ohm 1/4W Resistor  |
| C14                | .002 mid. 800V           | R13                | 200K ohm 1/4W Resistor |
| C15                | .002 mid. 800V           | R14                | 3 Megohm 1/4W Resistor |
| C16, C17, C18      | 100 mfd. Mic. 85V        | R15                | 30K ohm 1/4W Resistor  |
| C19                | 8 mid. 150V Electrolytic | R16                | 2 Megohm 1/4W Resistor |

## SCHEMATIC DIAGRAM MODEL 5T10 & 5T10W

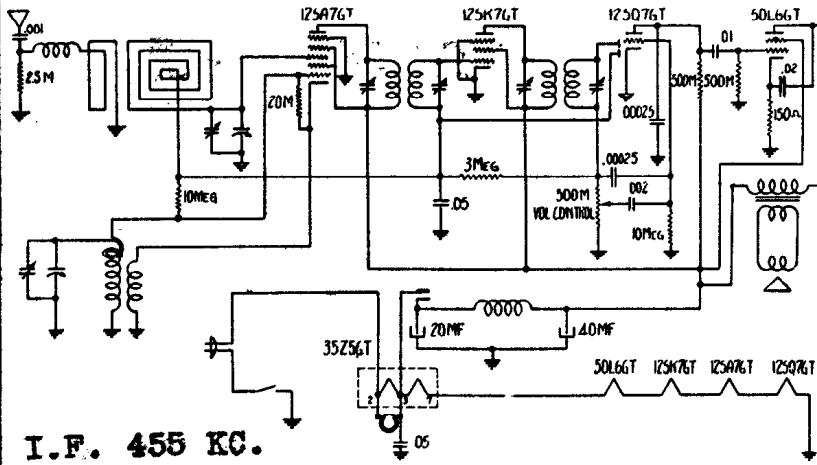


I.F. 455 KC.


## MODEL 6T23

Factory No. 4501X

### TUBE LAYOUT


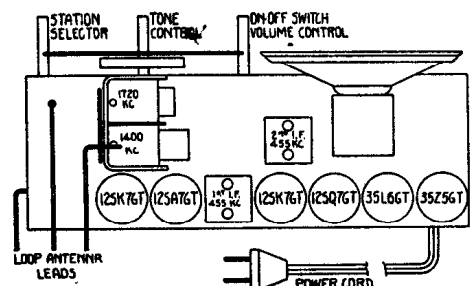


### SCHEMATIC DIAGRAM

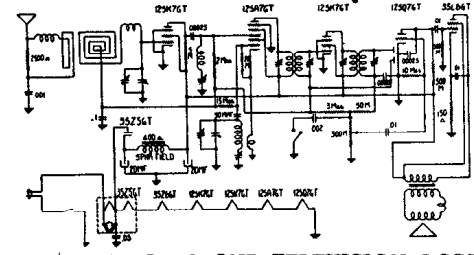


MAJESTIC RADIO AND TELEVISION CORP.  
2600 WEST 50TH STREET CHICAGO, ILLINOIS


## Model 6P1-6P2

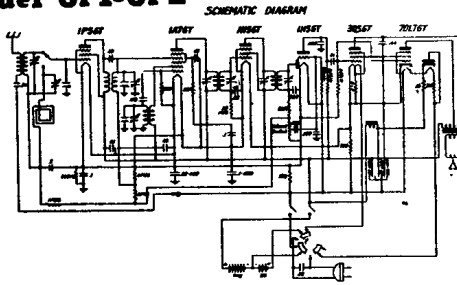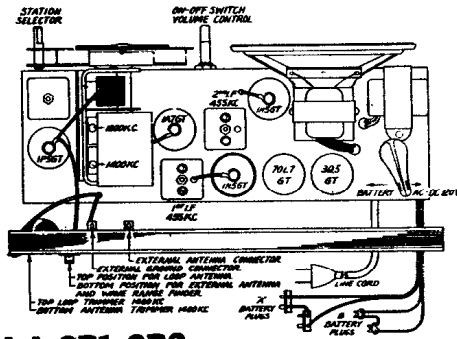

## MODEL 7T20

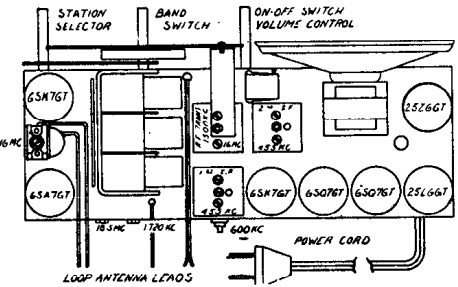


### SCHEMATIC DIAGRAM

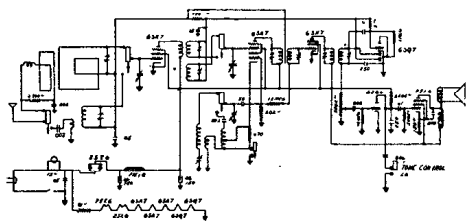

MAJESTIC RADIO AND TELEVISION CORP.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

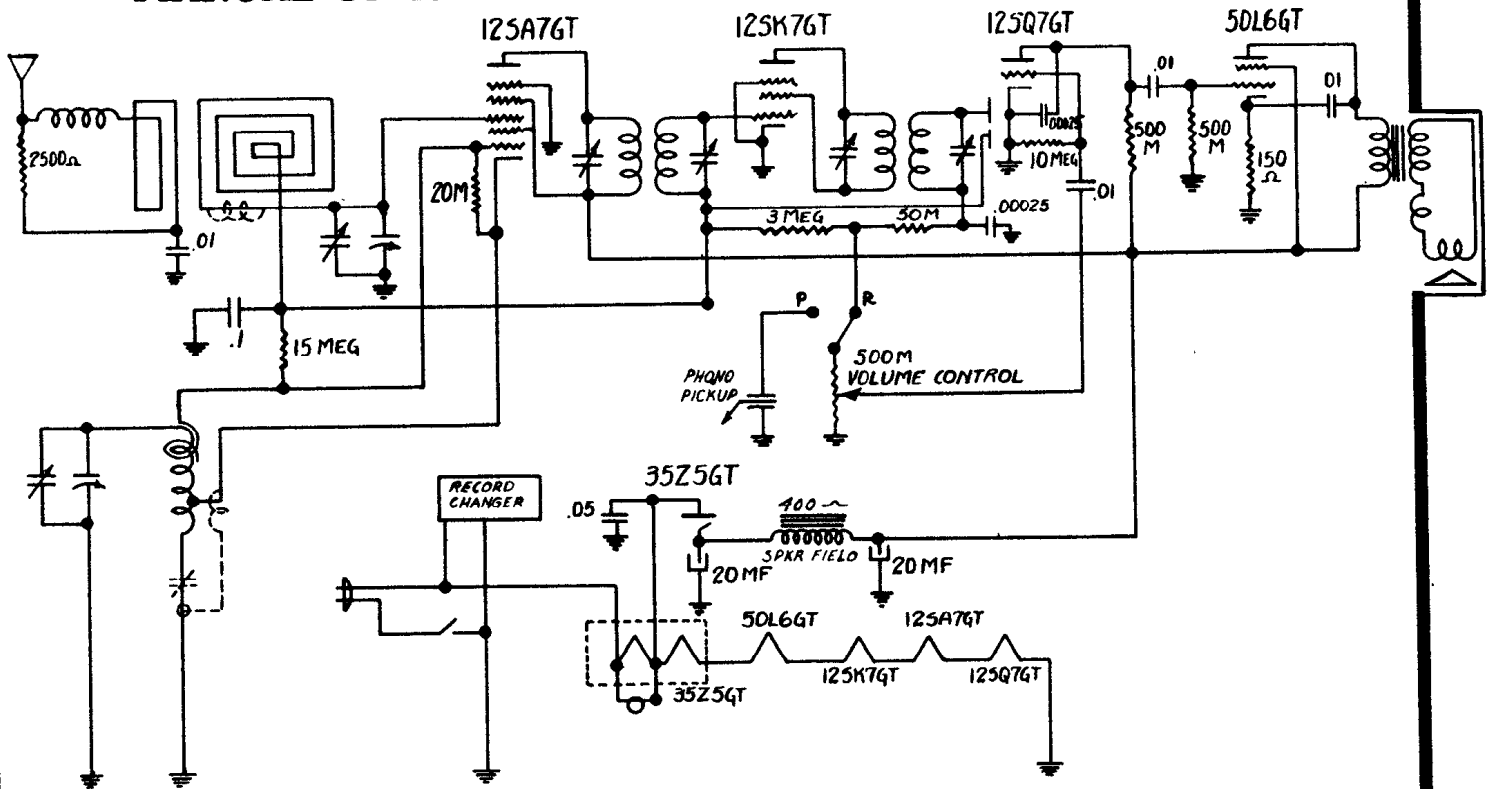

## Majestic Radio & Television Corporation


### THE RECORD-CHANGER NEEDLE:

The needle supplied with this unit has a special durable point. No attempt should be made to use ordinary steel or fibre needles. They wear rapidly and will give poor reproduction. Only needles with a point durable enough to play 10 records or more without damaging them should be used.

# MODEL 5C36

### LOADING THE RECORDS FOR AUTOMATIC OPERATION:

This mechanism automatically plays in sequence up to twelve 10" records or ten 12" records at one set-up. ALL RECORDS MUST BE THE SAME SIZE FOR EACH SET-UP.

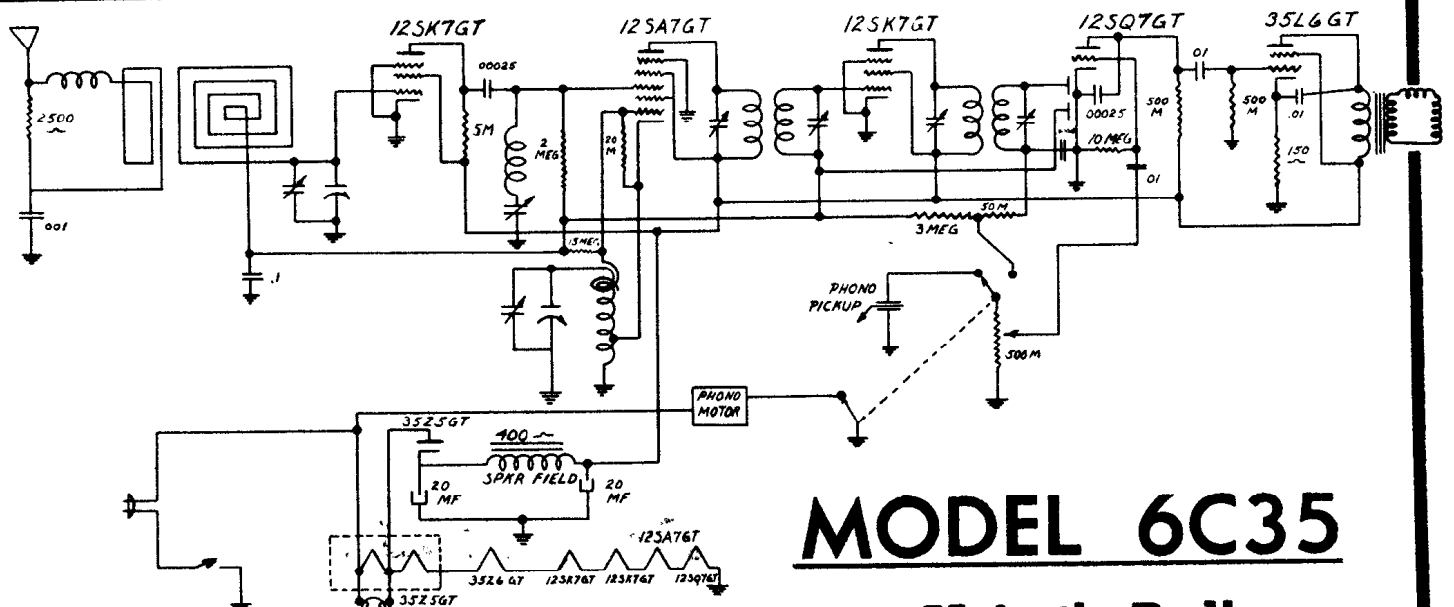

# MODEL 6C35



Majestic Radio

# 64


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## Majestic Radio & Television Corporation

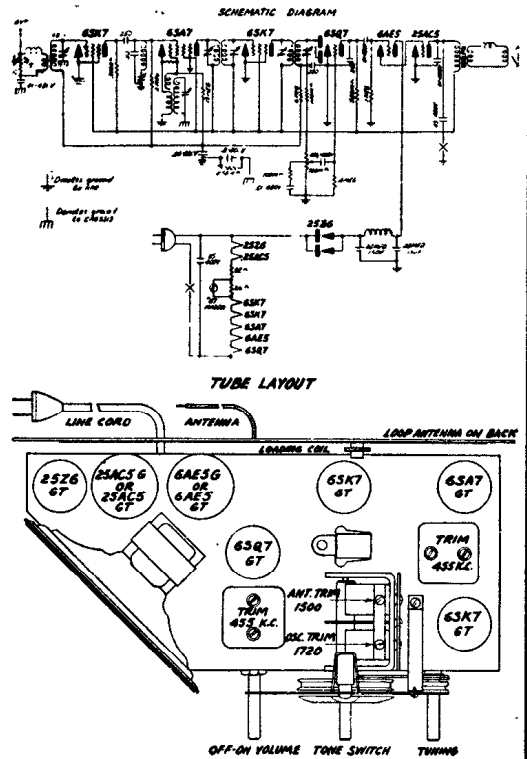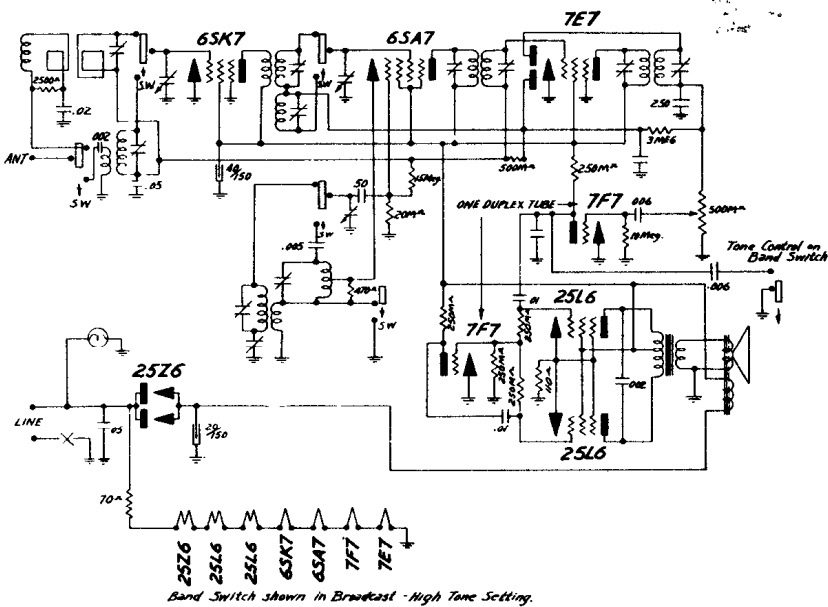

# MODEL 7K60

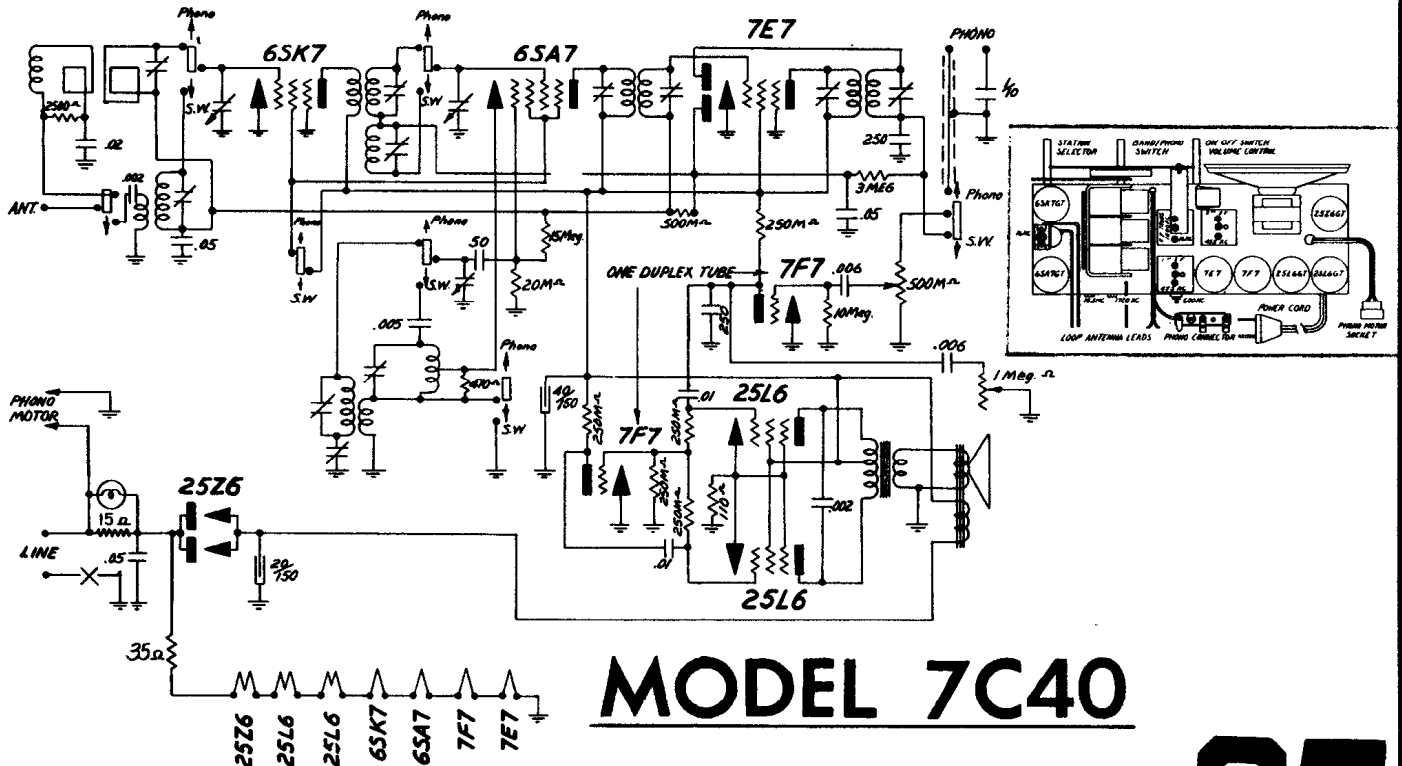

# MODEL 7C40

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# 65









# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS


MIDWEST MODEL 162R RECEIVER

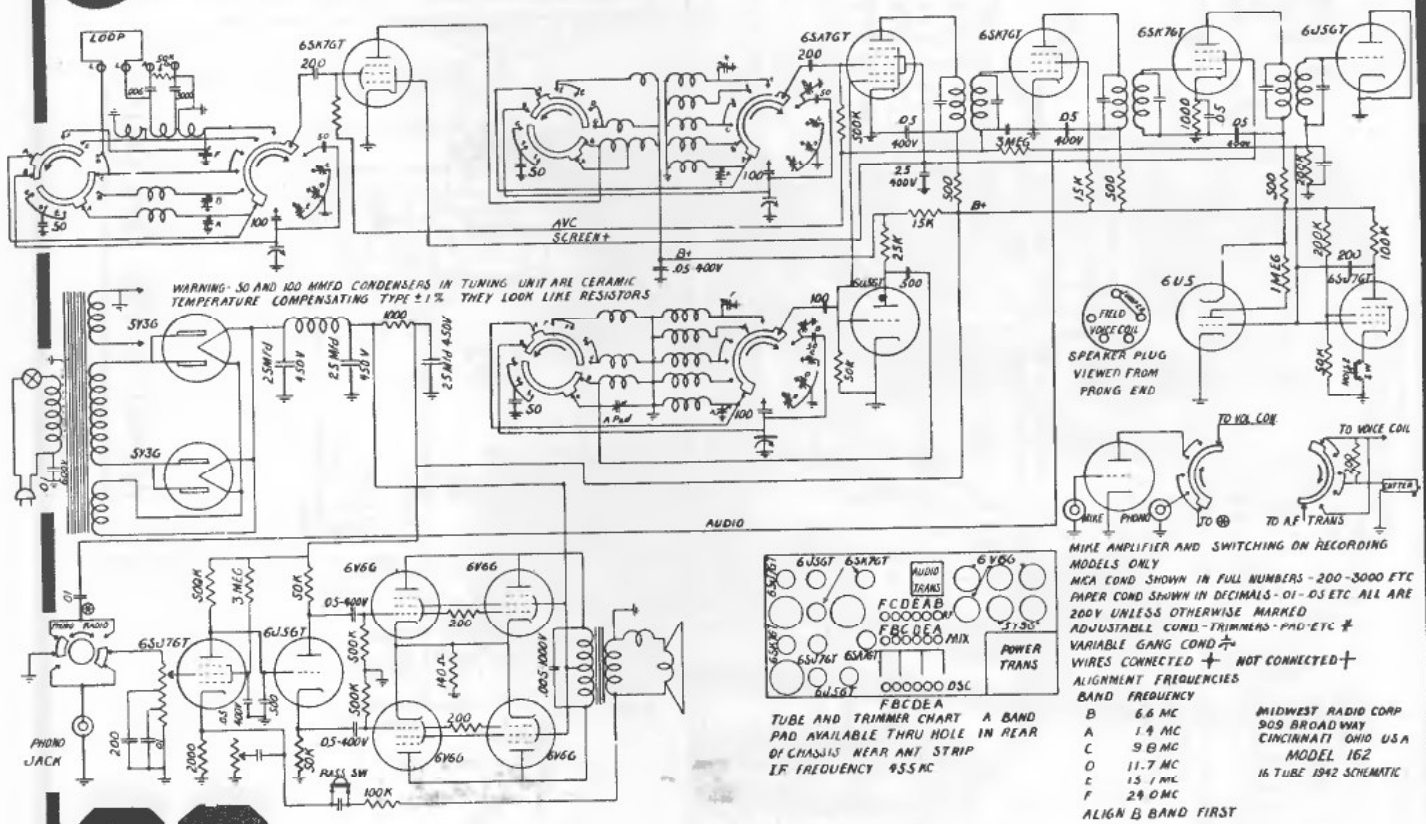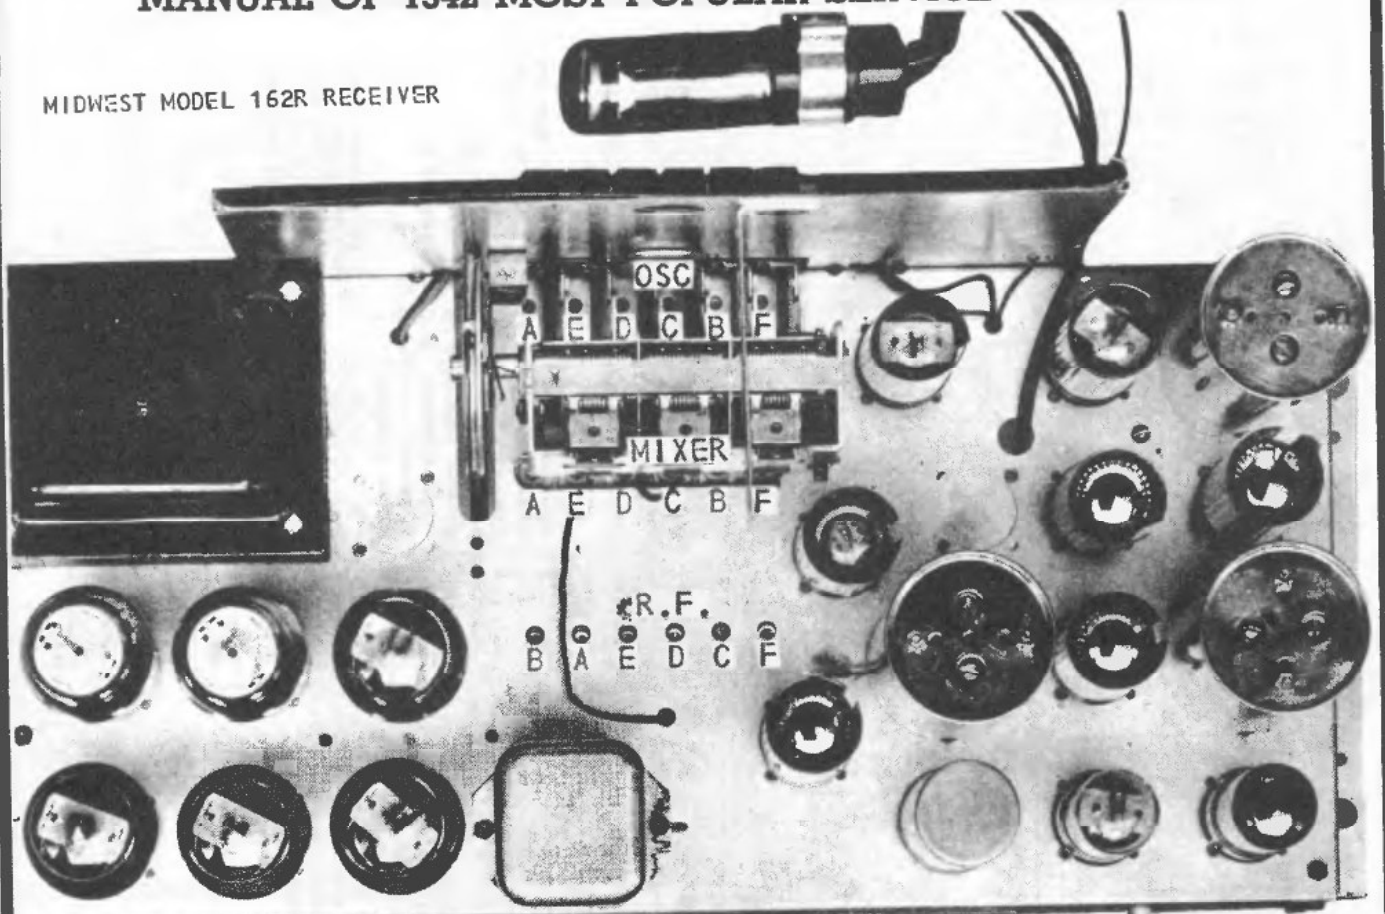

# 68

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

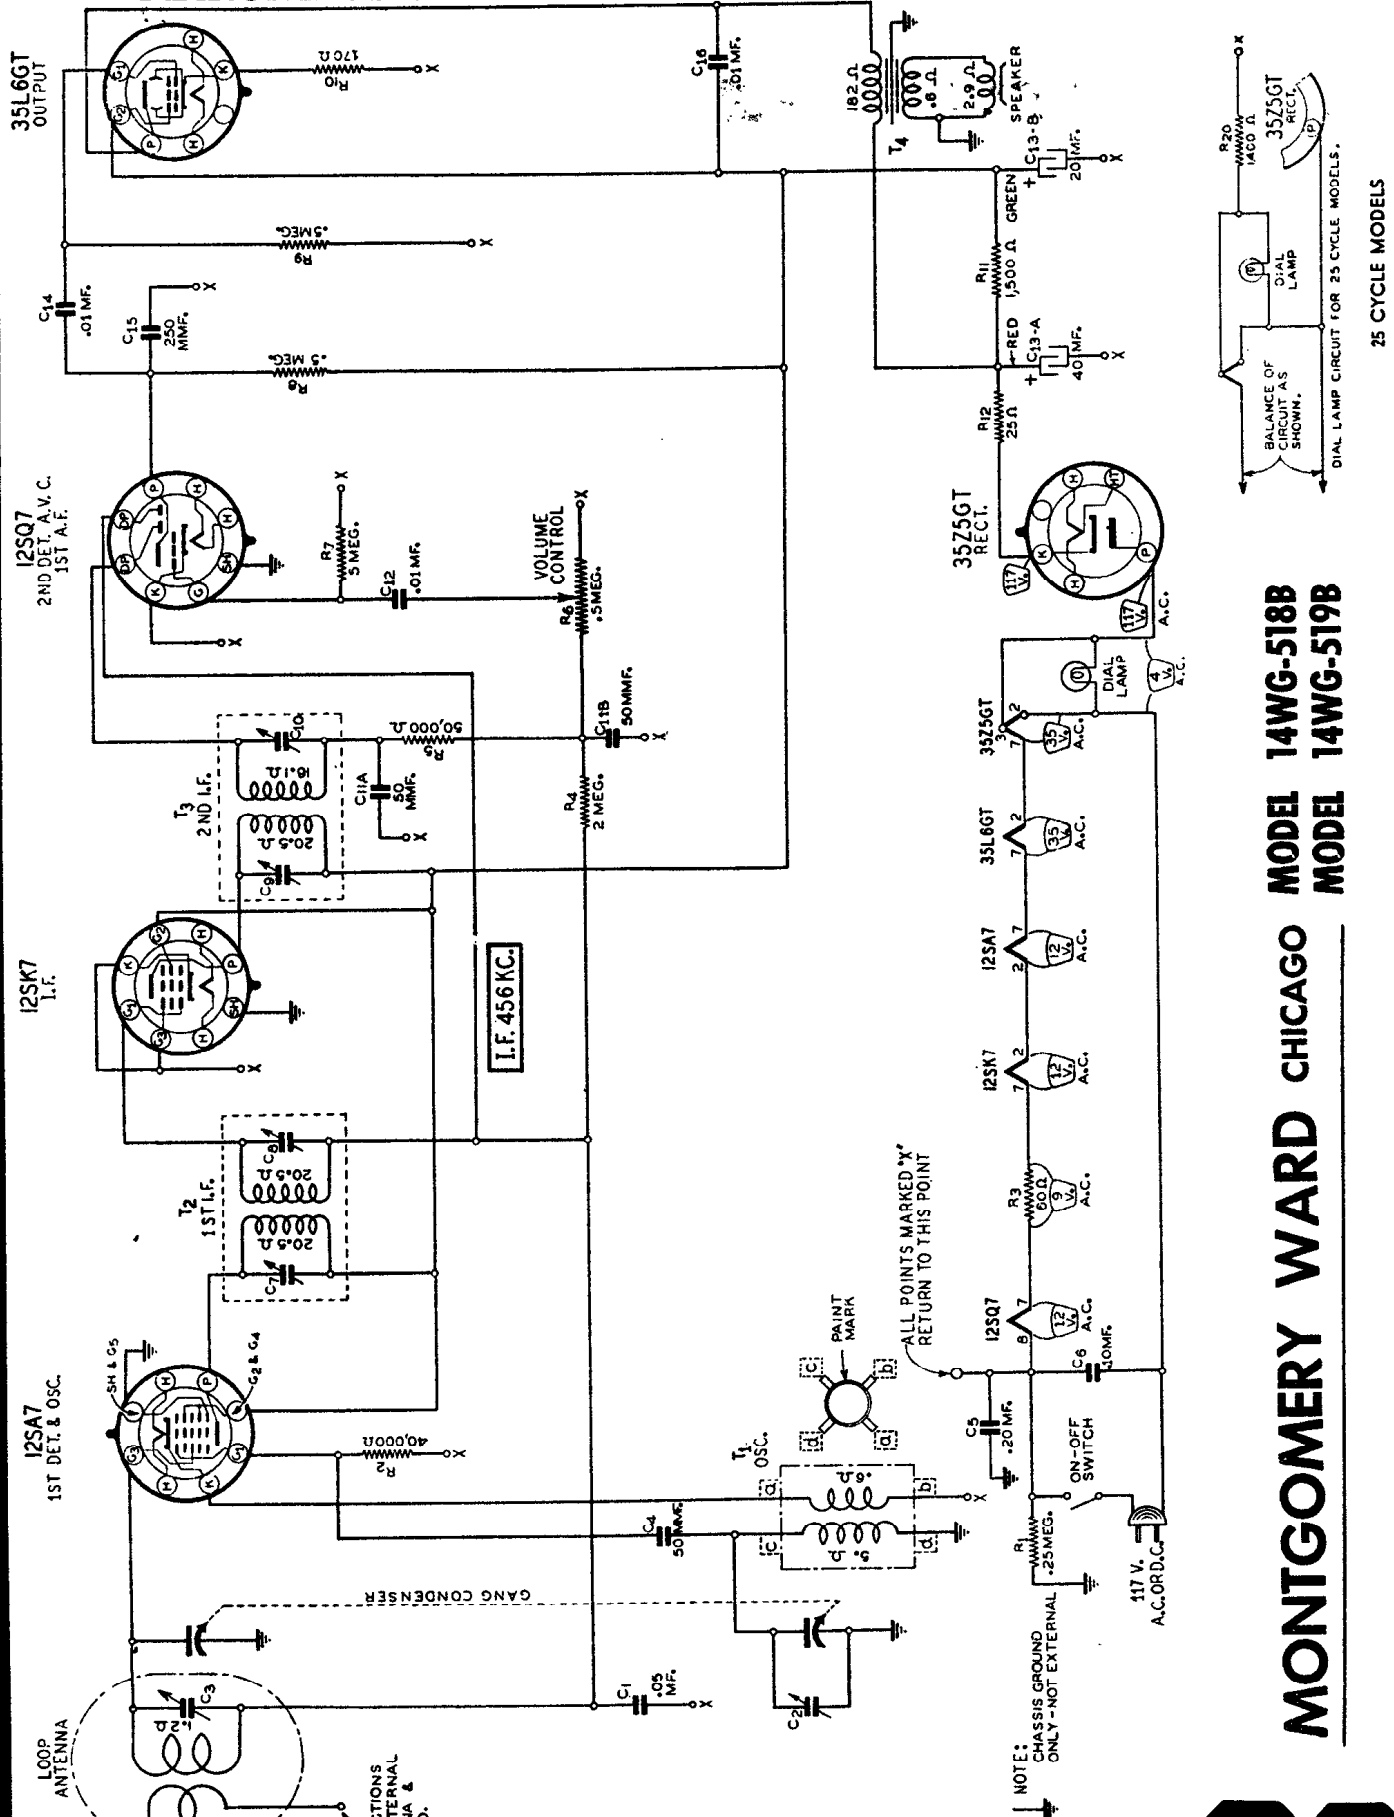

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


**MONTGOMERY WARD CHICAGO**  
**MODEL 14WG-518B**  
**MODEL 14WG-519B**

**69**

25 CYCLE MODELS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## WARDS AIRLINE RADIO

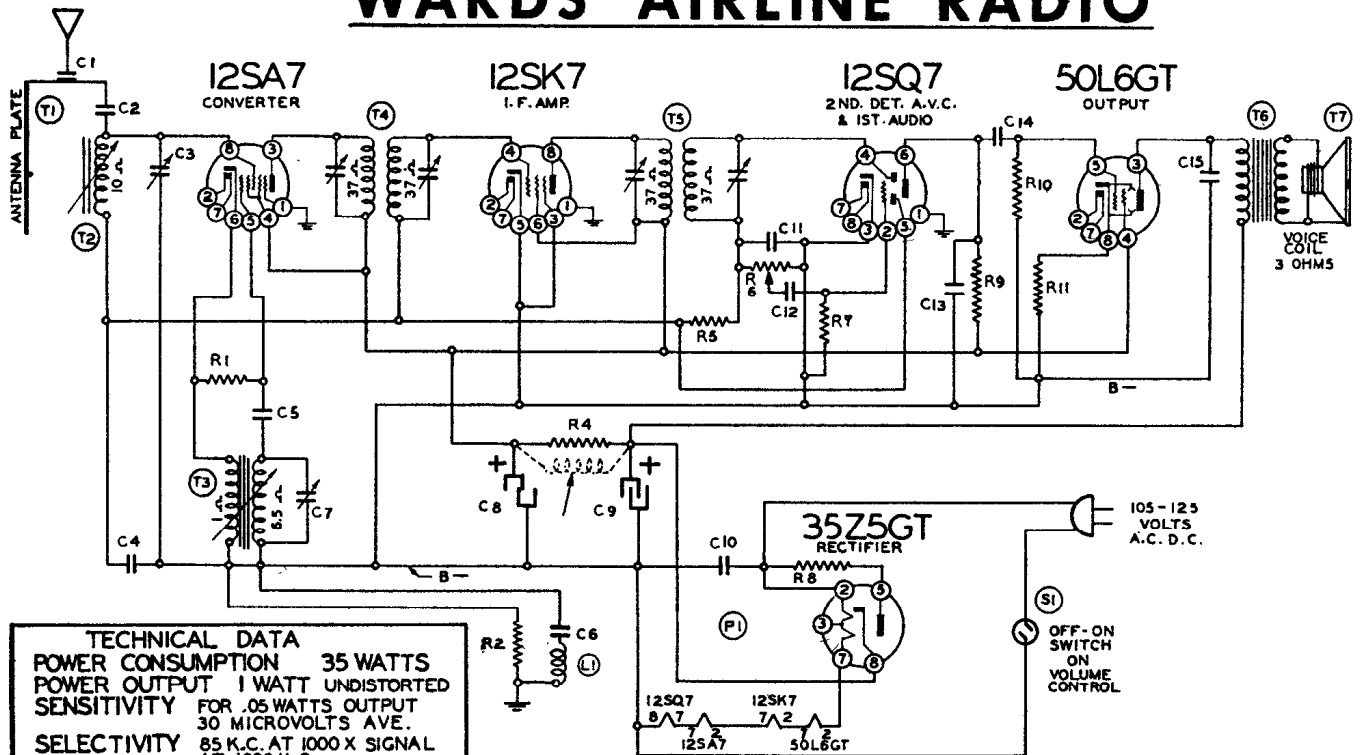

**TECHNICAL DATA**  
 POWER CONSUMPTION 35 WATTS  
 POWER OUTPUT 1 WATT UNDISTORTED  
 SENSITIVITY FOR .05 WATTS OUTPUT  
 30 MICROVOLTS AVE.  
 SELECTIVITY 85 K.C. AT 1000 X SIGNAL  
 AT 1000 K.C.  
 TUNING RANGE 535 TO 1720 K.C.  
 INTERMEDIATE FREQUENCY 455 K.C.

### RESISTORS

- R1 BE130176 20M ohm— $\frac{1}{2}$  w.
- R2 BE130100 150M ohm— $\frac{1}{2}$  w.
- R4 BE130279 1M ohm—1 w.
- R5 BE1304 3 megohm— $\frac{1}{2}$  w.
- R6 BE101255 500M ohm—Volume control and switch
- R7 BE130257 5 megohm— $\frac{1}{2}$  w.
- R8 BE130240 30 ohm— $\frac{1}{2}$  w.
- R9 BE130100 150M ohm— $\frac{1}{2}$  w.
- R10 BE13011 250M ohm— $\frac{1}{2}$  w.
- R11 BE130166 150 ohm— $\frac{1}{2}$  w.

- CONDENSERS**
- C1 BE131262 .0001 washer condenser (antenna clip on back plate)
  - C2 BE129114 .0003 mica
  - C3 BE124137 Trimmer on antenna coil
  - C4 BE1009 .05 x 200 v.
  - C5 BE12939 .00005 mica
  - C6 BE10091 .15 x 400 v.
  - C7 BE124137 Trimmer on oscillator coil
  - C8 BE11992 20 Mfd. lytic x 150 w.v.
  - C9 BE11992 40 mfd. lytic x 150 w. v.
  - C10 BE10013 .05 x 400 v.
  - C11 BE12912 .00025 mica
  - C12 BE10025 .002 x 600 v.
  - C13 BE1292 .0005 mica
  - C14 BE10011 .01 x 400 v.


C15 BE10026 .02 x 400 v.

C3 and C7 are in same unit  
 C8 and C9 are in same unit

### PARTS

- T1 BE115597-18 Antenna plate (Walnut) or BE115597-9 Antenna plate (Ivory)
- T2 BE111181 Antenna permeability coil
- T3 BE110153 Oscillator permeability coil
- T4 BE108157-H Input I.F. coil—455 kc.
- T5 BE108157-I Output I.F. coil—455 kc.
- T6 BE105128 Output transformer
- T7 BE114199 4" PM speaker
- or
- T7 BE114259 4" Electrodynamic speaker
- S1 Switch on Volume control
- L1 BE105138 R.F. choke

NOTE "A" THE ANTENNA COIL ASSEMBLY IS MADE SO THAT IT IS MOVABLE LEFT OR RIGHT WHEN MAKING THE ADJUSTMENT AS GIVEN IN THE ALIGNMENT PROCEDURE MOVE THE COIL ASSEMBLY VERY SLOWLY. IT CAN BE MOVED BY HAND OR BY PIVOTING ONE EDGE OF THE BLADE OF A SCREWDRIVER IN THE HOLE AND ENGAGING THE BLADE IN THE GEAR TEETH OF THE COIL FORM.

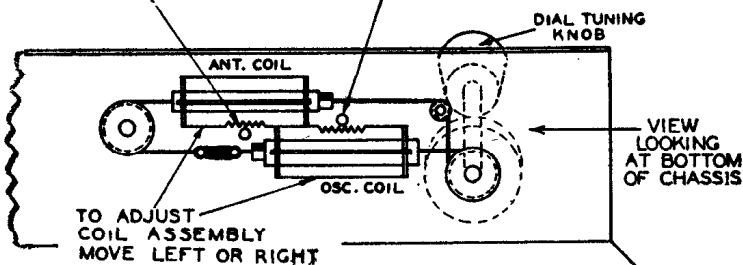

### COIL ASSEMBLY VIEW


**MODEL 14BR-521A**  
**MODEL 14BR-522A**

### BOTTOM VIEW OF CHASSIS

VOLTAGES MEASURED WITH A HIGH RESISTANCE VOLTMETER BETWEEN SOCKET TERMINALS & B—

[A] CANNOT BE MEASURED WITH VOLTMETER.




\* OSCILLATOR VOLTAGE TO BE MEASURED WITH R.F. CHOKER IN SERIES WITH VOLTMETER LEAD.

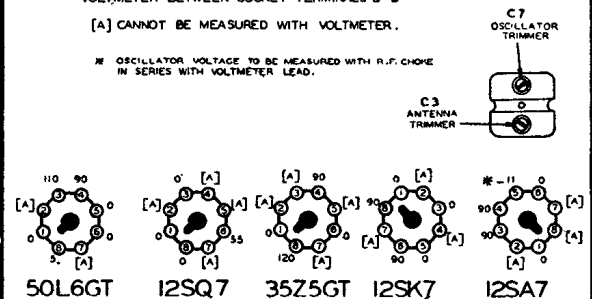

### REAR OF CHASSIS VOLTAGE CHART





# 70

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

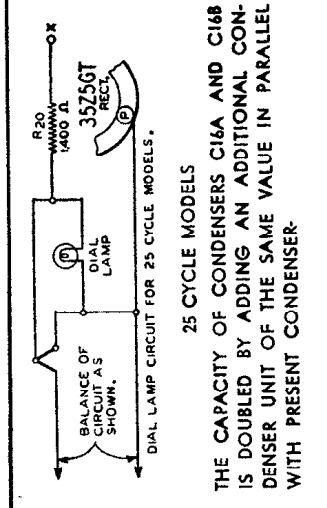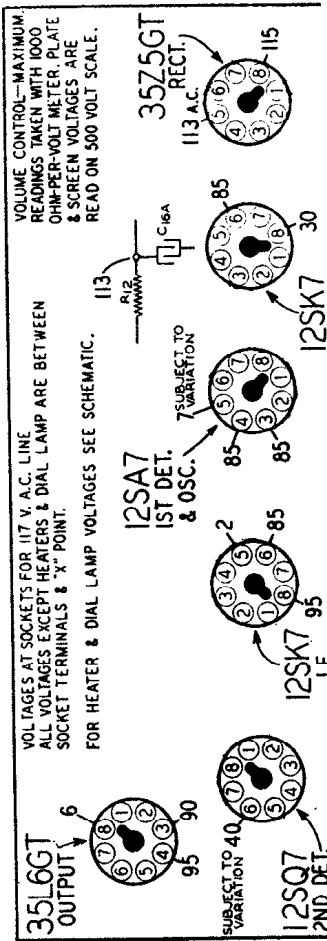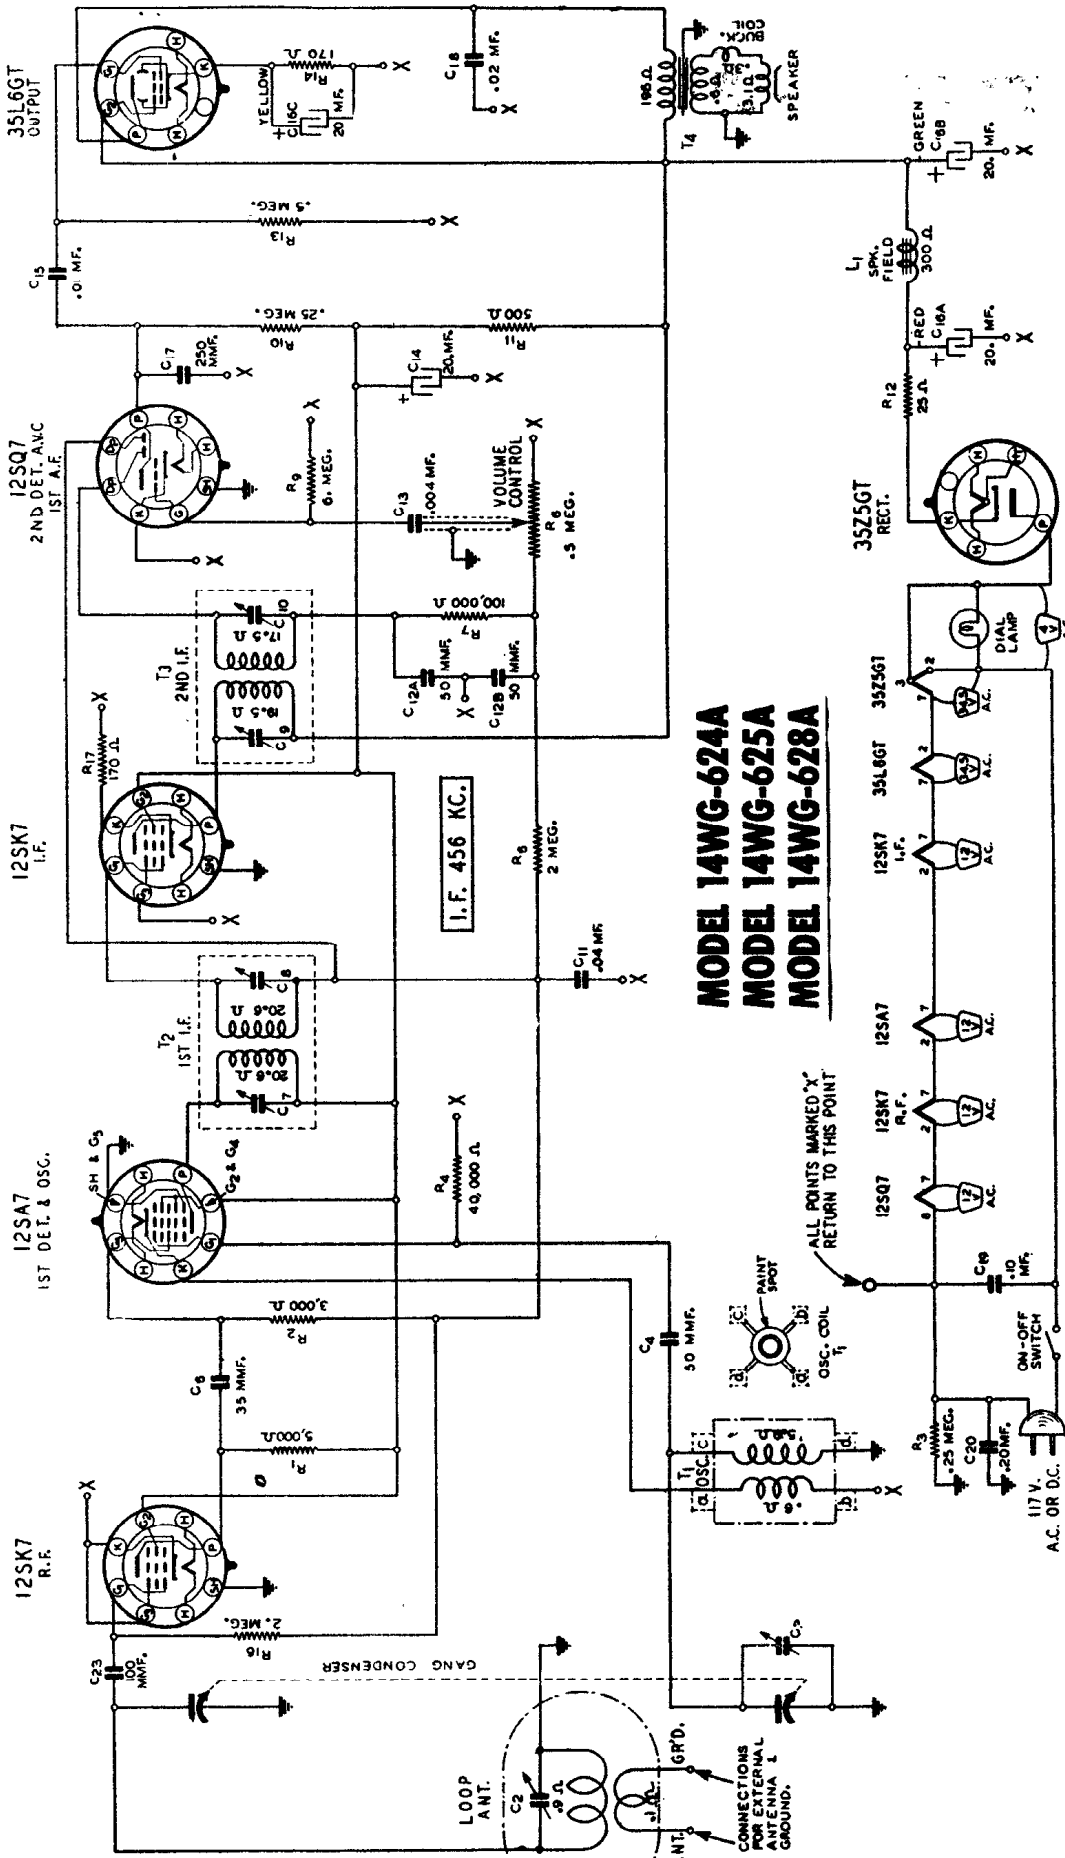

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

| BAND           | SIGNAL GENERATOR  |               | Connection to Radio     | Dial Setting                         | Trimmers Adjusted (in Order Shown)             |
|----------------|-------------------|---------------|-------------------------|--------------------------------------|--|
|                | Frequency Setting | Dummy Antenna |                         |                                      |  |
| 455 Kc. I. F.  | 455 Kc.           | .1 MFD.       | Connect to Grid of 1A7  | Rotor full open (Plates out of mesh) | Input and Output Trimmers on Top of I. F. cans |
| BROADCAST BAND | 1600 Kc.          | .1 MFD.       | Connect to Grid of 1A7  | Rotor full open (Plates out of mesh) | Osc. Trimmer on gang (See chassis view)        |
|                | 1400 Kc.          | 200 MMF.      | Connect to Antenna Clip | Set dial at 1400 Kc.                 | Ant. Trimmer on gang (See chassis view)        |

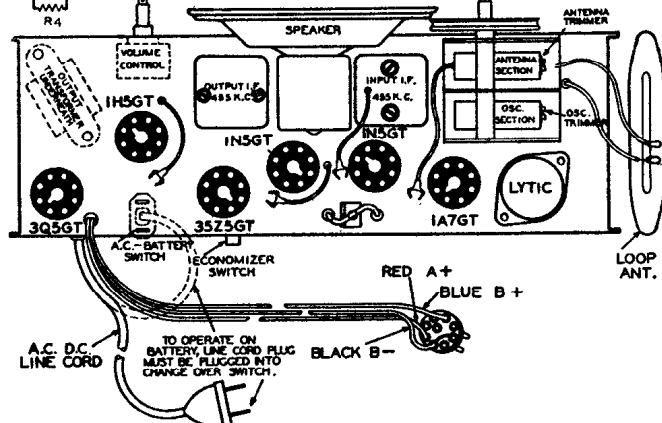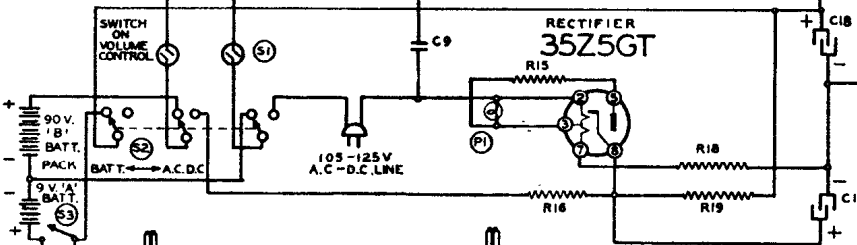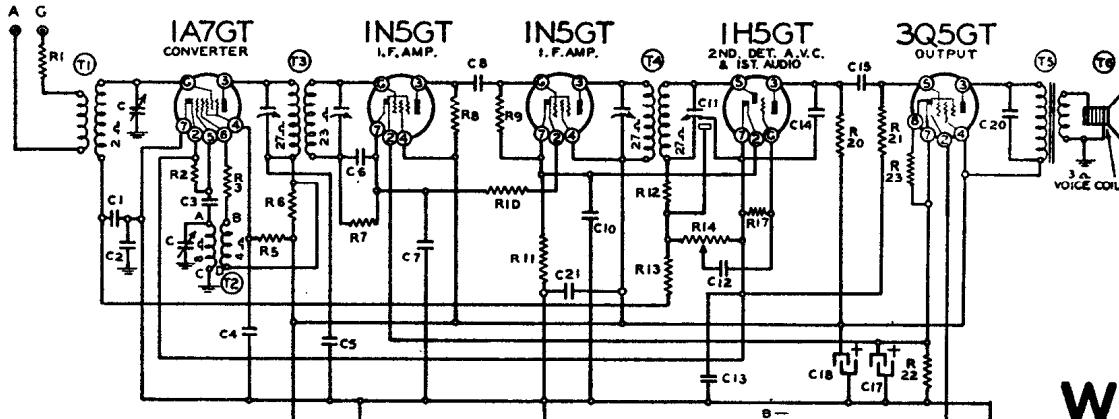

## WARDS


### MODEL 14BR-684A

#### CONDENSERS

- C20 .004 x 600 V. Tubular Condenser.....
- C2 .2 x 400 V. Tubular Condenser.....
- C4, C6 .01 x 120 V. Tubular Condenser.....
- C1 .05 x 120 V. Tubular Condenser.....
- C5 .1 x 200 V. Tubular Condenser.....
- C12 .006 x 120 V. Tubular Condenser.....
- C7, C10, C13 .25 x 200 V. Tubular Condenser.....
- C15, C14 .01 x 200 V.; .0001 x 200 V. Dual Tubular Condenser.....
- C21 .1 x 200 V. Tubular Condenser.....
- C16, C17, C18, C19 Electrolytic Filter Condenser 20 Mfd. x 50 V.; 40 Mfd. x 150 V.; 40 Mfd. x 150 V.; 200 Mfd. x 10 V. 50-60 Cycles.....
- C8 .0005 Mica Type Condenser—20%.....
- C3 .0001 Mica Type Condenser—20%.....
- C9 .02 x 400 Volt Tubular Condenser.....

#### RESISTORS

- R20 1 Megohm—1/2 Watt Resistor—20%.....
- R13, R21 3 Megohm—1/2 Watt Resistor—20%.....
- R7, R9, R17 5 Megohm—1/2 Watt Resistor—25%.....
- R4, R15 20 Ohm—1/2 Watt Resistor—10%.....
- R16 2500 Ohm—1/2 Watt Resistor—10%.....
- R11 2M Ohm—1/2 Watt Resistor—10%.....
- R10 15 Ohm—1/2 Watt Resistor—10%.....
- R8 5M Ohm—1/2 Watt Resistor—20%.....
- R3, R6 3M Ohm—1/2 Watt Resistor—20%.....
- R22 700 Ohm—1/2 Watt Resistor—10%.....
- R2 200M Ohm—1/2 Watt Resistor—20%.....
- R5 65M Ohm—1/2 Watt Resistor—10%.....
- R1 1M Ohm—1/2 Watt Resistor—20%.....
- R12 47M Ohm—1/2 Watt Resistor—20%.....
- R18 545 Ohm—14 Watt W.W. Resistor—5%.....
- R19 1975 Ohm—6 Watt W.W. Resistor—5%.....
- R23 350 Ohm—1/2 Watt Resistor—10%.....

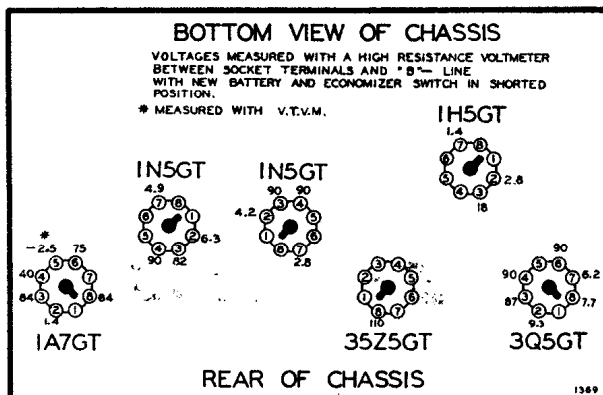


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

• Connect B—of radio chassis to ground post of signal generator through .1 Mfd. condenser.

| BAND            | SIGNAL GENERATOR Frequency Setting | Dummy Antenna | Connection to Radio     | Position of Band Switch | Variable Condenser Setting           | Trimmers Adjusted to Maximum                  |
|-----------------|------------------------------------|---------------|-------------------------|-------------------------|--------------------------------------|---|
| I. F.           | 455 Kc.                            | .1 MFD.       | Grid of 12SK7 I. F.     | Broadcast               | Rotor full open (Plates out of mesh) | Two trimmers on top of Output I. F.           |
|                 | 455 Kc.                            | .1 MFD.       | Grid of 12SJ7 Mixer     | Broadcast               | Rotor full open (Plates out of mesh) | Two trimmers on top of Input I. F.            |
| SHORT WAVE BAND | 12 Mc.                             | 400 Ohms      | External Antenna and B— | Short Wave              | Set Dial at 12 Mc.                   | S.W. Osc. trimmer C10<br>S.W. Ant. trimmer C3 |
| BROADCAST BAND  | 1600 Kc.                           | .1 mmf.       | Grid of 12SJ7           | Broadcast               | Rotor full open (Plates out of mesh) | B.C. Osc. trimmer C12 on Gang                 |
|                 | 1400 Kc.                           | 200 mmf.      | External Antenna and B— | Broadcast               | Set Dial at 1400 K. C.               | B.C. Ant. trimmer C6                          |


NOTE: The Oscillator Frequency is lower than the signal frequency and should be aligned accordingly.

The loop antenna should be connected to the radio when making all adjustments.

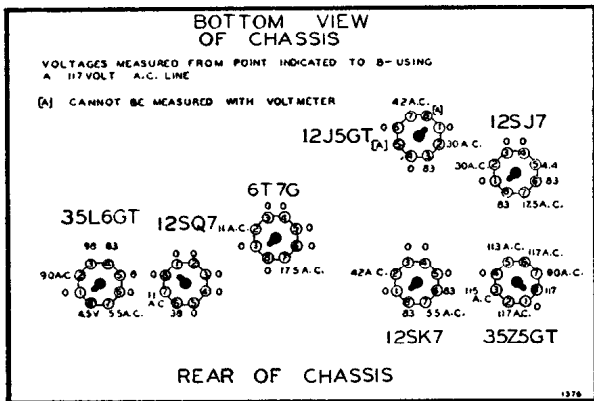

- C11 .05 x 200 Volt Tubular Condenser
- C16, C21 .006 x 600 Volt Tubular Condenser
- C13 .1 x 200 Volt Tubular Condenser
- C25, C20 .02 x 400 Volt Tubular Condenser
- C1 .003 x 600 Volt Tubular Condenser
- C7, C14 .1 x 400 Volt Tubular Condenser
- C8 .01 x 120 Volt Tubular Condenser
- C5 .05 x 120 Volt Tubular Condenser
- C17 .03 x 400 Volt Tubular Condenser
- Electrolytic Filter Cond. added for 25 cycle only. 40 mfd. x 150 Volts across C22 and 20 Mfd. x 150 Volts across C23
- C22, C23, C24 Electrolytic Filter Condenser—40 mfd.—20 mfd.—20 mfd. x 150 Volts.
- C3, C10 S. W. Antenna and Oscillator Trimmer Condenser
- C9, C18 .0001 Mica Type Condenser—20%
- C15 .0002 Mica Type Condenser—20%
- C2 .00015 Mica Type Condenser—10%
- C4 .000445 Mica Type Condenser—3%
- C19 .00025 Mica Type Condenser
- R10 200M ohm—1/4 Watt Resistor—20%
- R2, R7 50M ohm—1/4 Watt Resistor—20%
- R4 2 Megohm—1/4 Watt Resistor—20%
- R12 200 Ohm—1/4 Watt Resistor—20%
- R9 20 Ohm—1/4 Watt Resistor—20%
- R13 150 Ohm—1/4 Watt Resistor—10%
- R1 5M Ohm—1/4 Watt Resistor—10%
- R8 5 Megohm—1/4 Watt Resistor—25%
- R14 1200 Ohm—1 Watt Resistor—10%
- R3, R5 3, 2 Megohm—1/4 Watt Resistor—20%

## MODEL 14BR-734A BROWN MODEL 14BR-735A IVORY

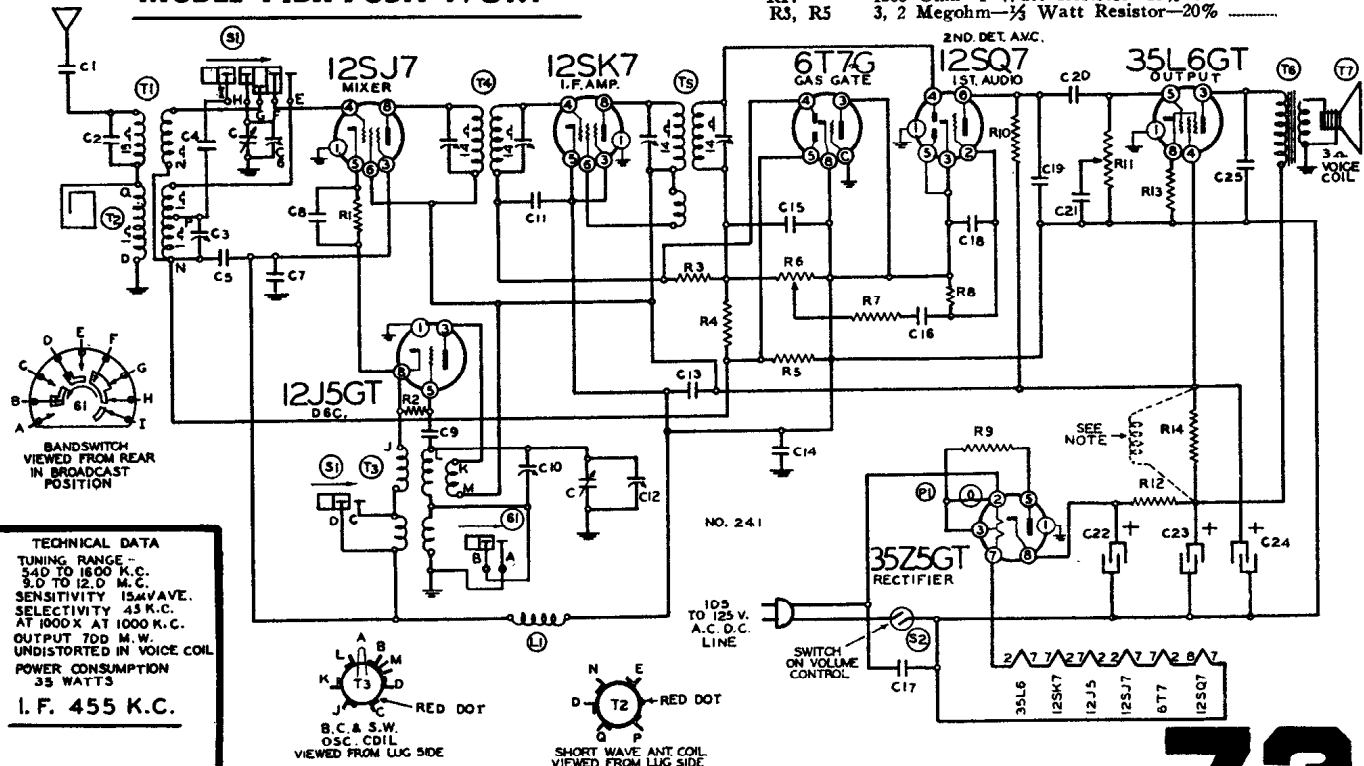




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

**MODEL 14WG-808W  
14WG-808M**

**MONTGOMERY WARD CHICAGO**

**74**

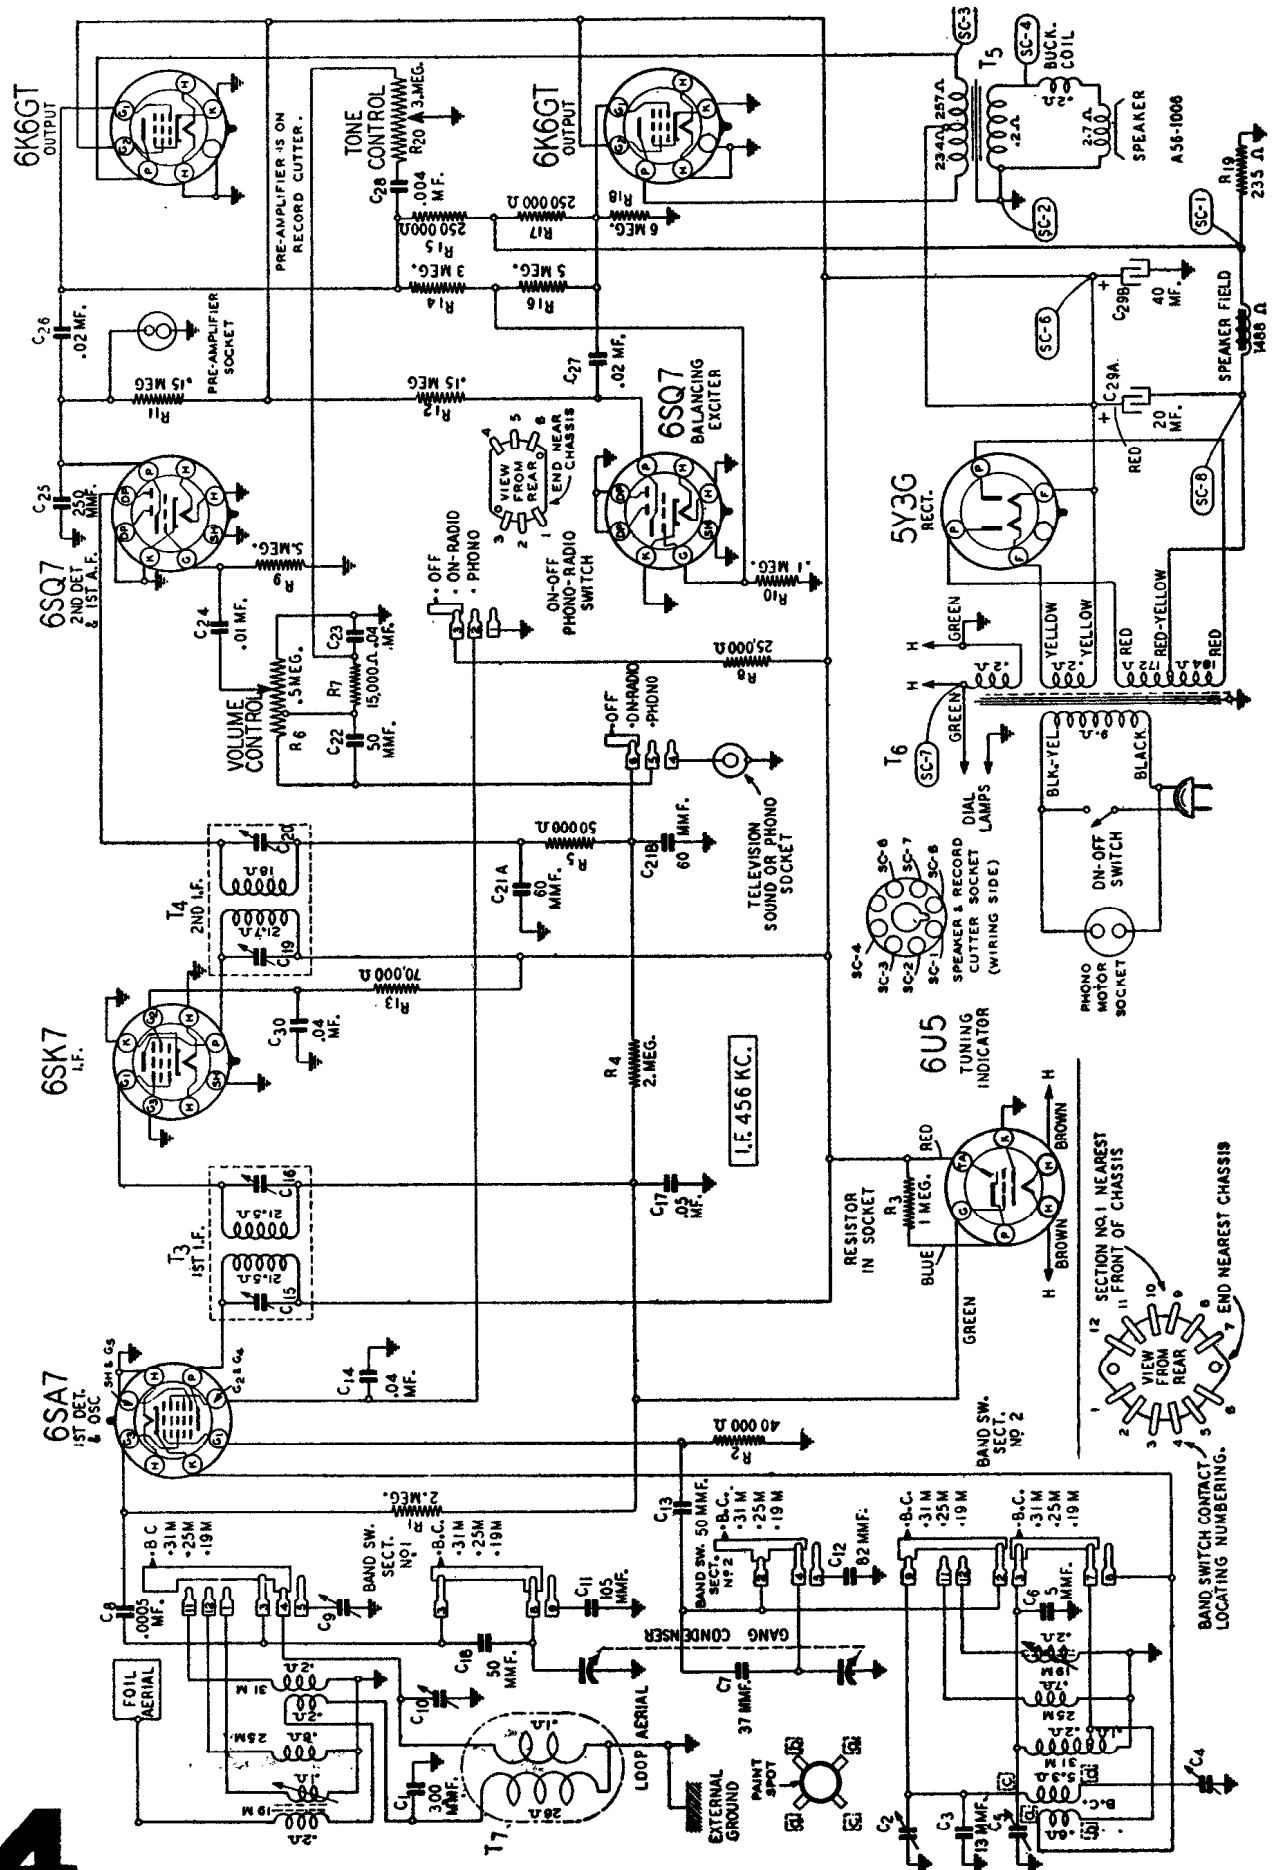

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## MONTGOMERY WARD

### MODEL 14BR-912A

- R1 25M ohm— $\frac{1}{2}$  w.
- R2 25M ohm— $\frac{1}{2}$  w.
- R3 1 megohm— $\frac{1}{2}$  w.
- R4 250 ohm— $\frac{1}{2}$  w.
- R5 5M ohm— $\frac{1}{2}$  w.
- R6 1 megohm in tuning
- R7 12,500 ohm—3 w.
- R8 1 megohm— $\frac{1}{2}$  w.
- R9 25M ohm— $\frac{1}{2}$  w.
- R10 300 ohm—1 w.
- R11 500M ohm— $\frac{1}{2}$  w.
- R12 500M ohm— $\frac{1}{2}$  w.
- R13 100M ohm— $\frac{1}{2}$  w.
- R14 5M ohm— $\frac{1}{2}$  w.
- R15 100M ohm— $\frac{1}{2}$  w.
- R16 1 megohm— $\frac{1}{2}$  w.
- R17 500 ohm— $\frac{1}{2}$  w.
- R18 500M ohm— $\frac{1}{2}$  w.
- R19 500M ohm— $\frac{1}{2}$  w.
- R20 250M ohm— $\frac{1}{2}$  w.
- R21 2.8 megohm—volume control
- R22 1.5 megohm— $\frac{1}{2}$  w.
- R23 50M ohm— $\frac{1}{2}$  w.
- R24 3 megohm— $\frac{1}{2}$  w.
- R25 5 megohm— $\frac{1}{2}$  w.
- R26 50 ohm— $\frac{1}{2}$  w.
- R27 40M ohm— $\frac{1}{2}$  w.
- R28 150M ohm— $\frac{1}{2}$  w.
- R29 80M ohm— $\frac{1}{2}$  w.
- C1 .0005 mica
- C2 .002 x 600 v.
- C3 B.C. antenna trimmer
- C4 9 mc. antenna trimmer
- C5 .0005 mica


- C6 .1 x 200 v. tubular condenser
- C7 .00001 mica
- C8 9 mc. R.F. trimmer
- C9 B.C. R.F. trimmer
- C10 .1 x 400 v.
- C11 .1 x 400 v.
- C12 10.0 mfd. x 350 w. v. lytic
- C13 .0005 mica
- C14 15.0 mfd. x 450 w. v. lytic
- C15 15.0 mfd. x 450 w. v. lytic
- C16 B.C. oscillator trimmer
- C17 BE10071 .004 x 600 v.
- C18 BE129167 .0002 silver mica
- C19 BE129165 .00005 mica
- C20 BE124145 9 mc. oscillator trimmer
- C21 BE10013 .05 x 400 v.
- C22 BE1009 .05 x 200 v.
- C23 BE10026 .02 x 400 v.
- C24 BE10020 .1 x 200 v.
- C25 BE12951 .000125 mica
- C26 BE1002 .003 x 300 v.
- C27 BE10026 .02 x 400 v.
- C28 BE12921 .0002 mica
- C29 BE10019 .006 x 600 v.
- C30 BE100139 .0015 x 200 v.
- C31 BE129165 .00005 mica
- C32 BE129165 .00005 mica
- C33 BE10061 .02 x 600 v. Bakelite
- C34 BE10061 .02 x 600 v. Bakelite

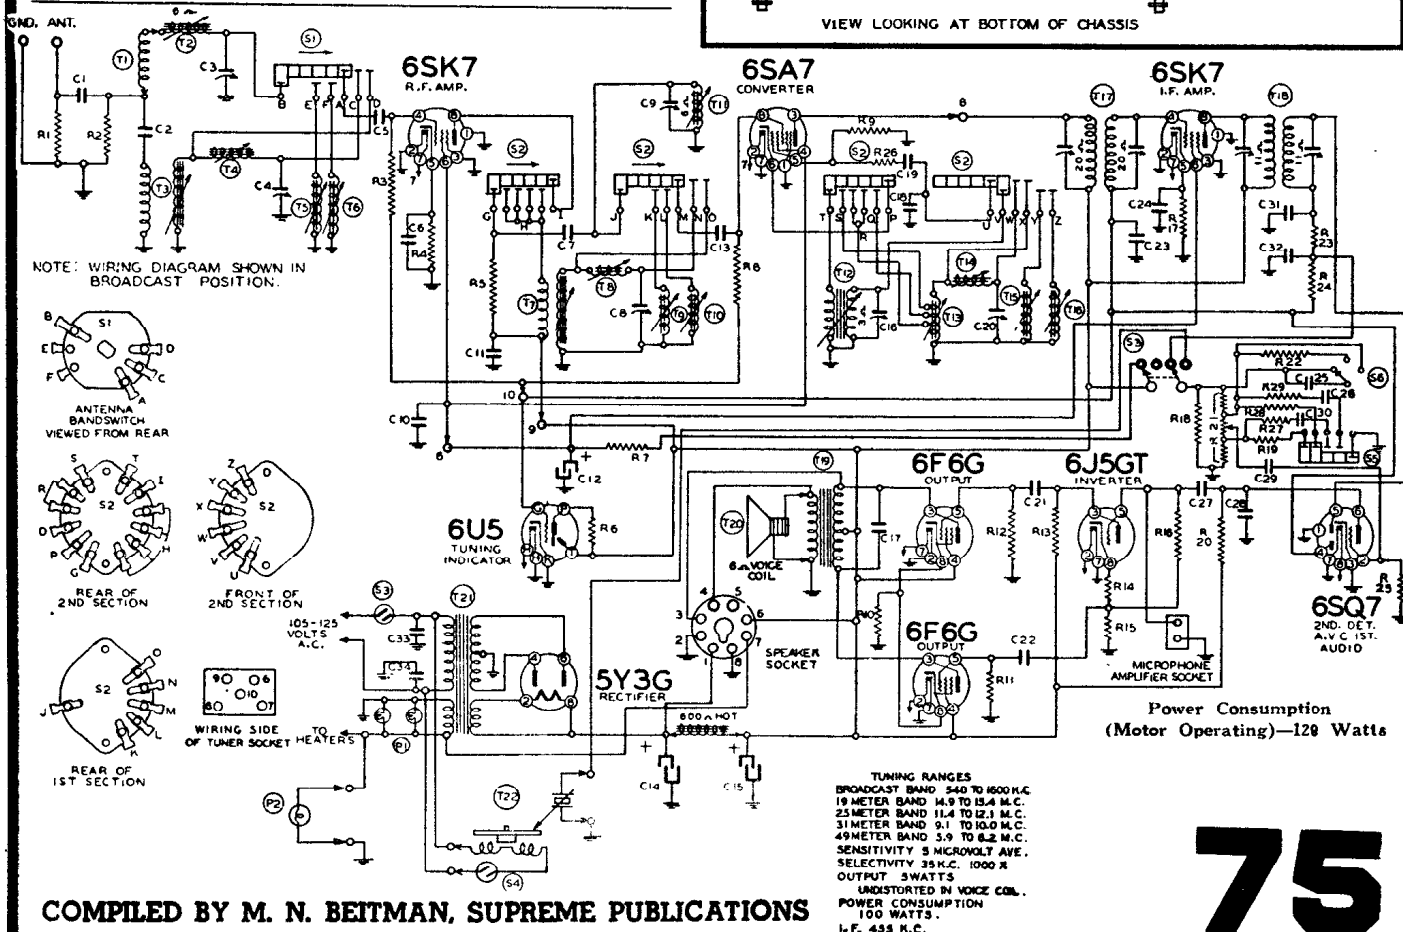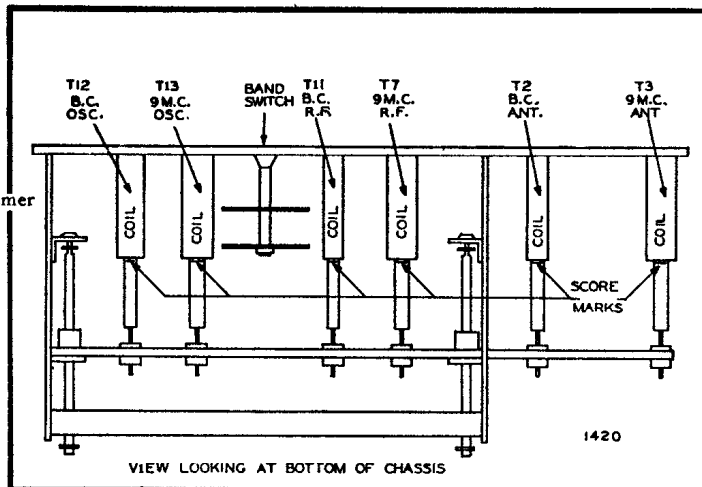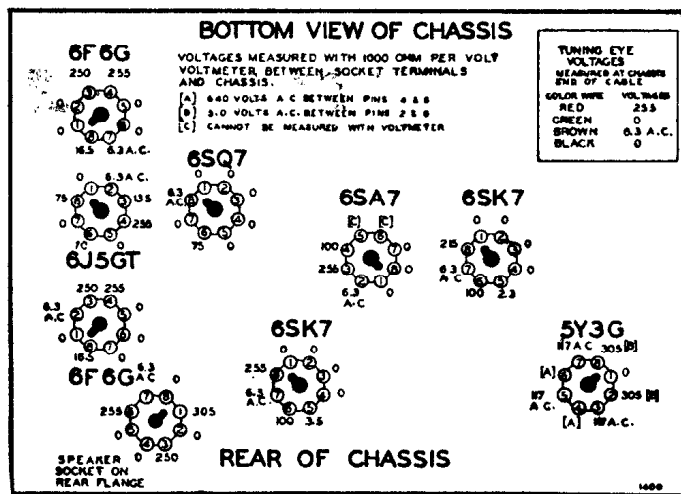

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# 75

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

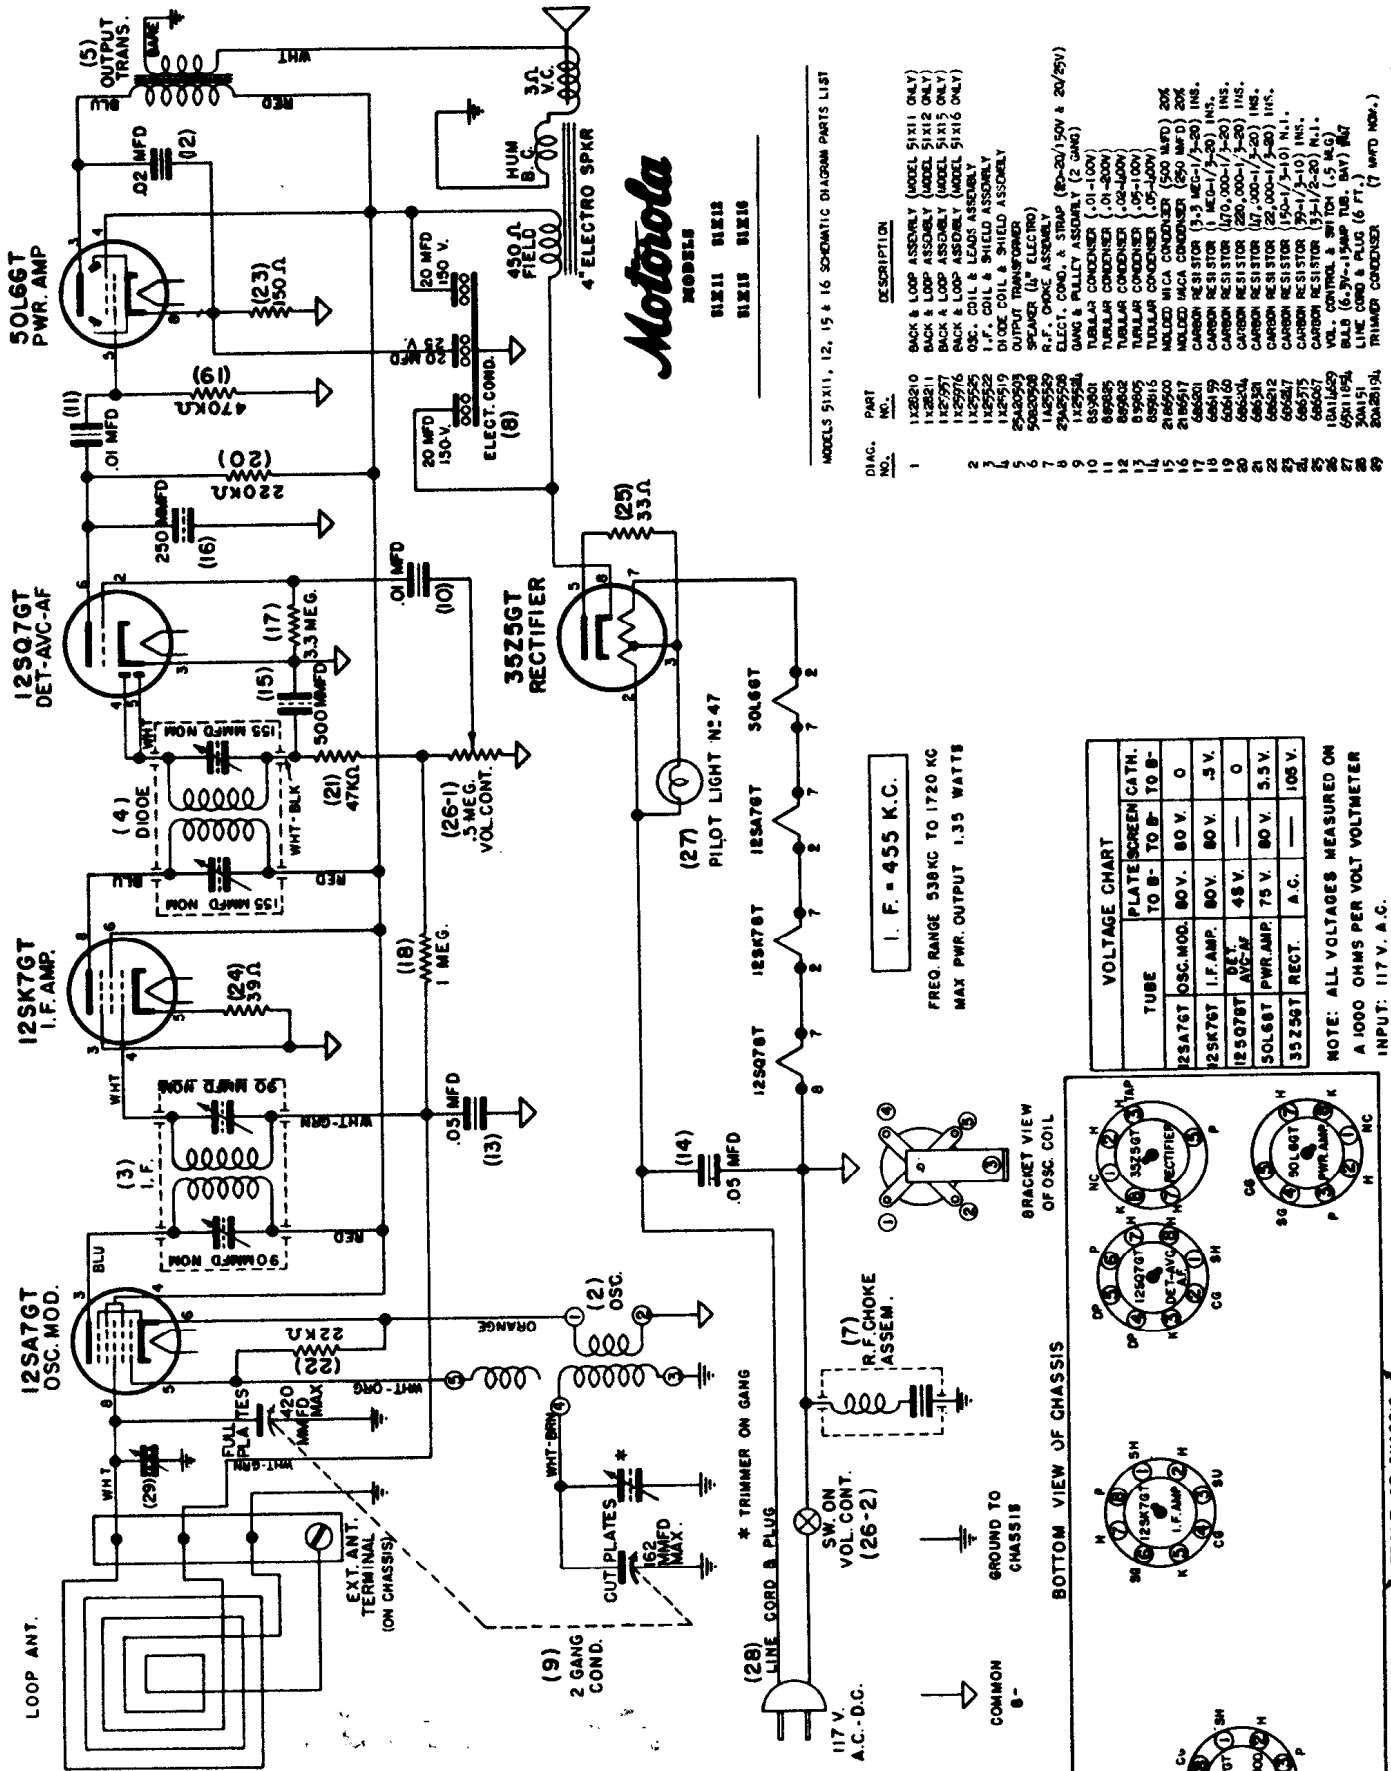

**Motorola**  
MODELS  
51X11 51X12  
51X15 51X16

MODELS 51X11, 12, 15 & 16 SCHEMATIC DIAGRAM PARTS LIST


| DIAG. NO. | PART NO. | DESCRIPTION                                |
|-----------|----------|--|
| 1         | 1X2B210  | BACK & LOOP ASSEMBLY (MODEL 51X11 ONLY)    |
|           | 1X2B211  | BACK & LOOP ASSEMBLY (MODEL 51X12 ONLY)    |
|           | 1X2B217  | BACK & LOOP ASSEMBLY (MODEL 51X15 ONLY)    |
|           | 1X2B216  | BACK & LOOP ASSEMBLY (MODEL 51X16 ONLY)    |
| 2         | 1X2B252  | OSC. COIL & LEADS ASSEMBLY                 |
| 7         | 1X2B252  | I.F. COIL & FIELD ASSEMBLY                 |
| 4         | 1X2B252  | OSC. COIL & LEADS ASSEMBLY                 |
| 2         | 20A2520  | OUTER TUBULAR ASSEMBLY                     |
| 3         | 20A2520  | SPEAKER (1" ELECTRO)                       |
| 7         | 1A25220  | R.F. CHOKE ASSEMBLY                        |
| 8         | 20A2520  | ELECT. COND. & STRAP (80-20/150V & 20/50V) |
| 9         | 1X2B252  | TUBULAR CONDENSER (2 GANG)                 |
| 10        | 85J301   | TUBULAR CONDENSER (.01-100V)               |
| 11        | 85B55    | TUBULAR CONDENSER (.01-100V)               |
| 12        | 85B55    | TUBULAR CONDENSER (.02-100V)               |
| 13        | 85B55    | TUBULAR CONDENSER (.05-100V)               |
| 14        | 85B55    | TUBULAR CONDENSER (.05-100V)               |
| 15        | 21B5517  | MOLDED MICR. CONDENSER (500 MFD) 20K       |
| 16        | 21B5517  | MOLDED MICR. CONDENSER (500 MFD) 20K       |
| 17        | 66B501   | CARBON RESISTOR (1/2 WATT) 100K            |
| 18        | 66B501   | CARBON RESISTOR (1/2 WATT) 100K            |
| 19        | 66B501   | CARBON RESISTOR (1/2 WATT) 100K            |
| 20        | 66B501   | CARBON RESISTOR (1/2 WATT) 100K            |
| 21        | 66B501   | CARBON RESISTOR (1/2 WATT) 100K            |
| 22        | 66B501   | CARBON RESISTOR (1/2 WATT) 100K            |
| 23        | 66B501   | CARBON RESISTOR (1/2 WATT) 100K            |
| 24        | 66B501   | CARBON RESISTOR (1/2 WATT) 100K            |
| 25        | 66B501   | CARBON RESISTOR (1/2 WATT) 100K            |
| 26        | 66B501   | CARBON RESISTOR (1/2 WATT) 100K            |
| 27        | 10A11659 | VOL. CONTROL & SWITCH (.5 MEG)             |
| 28        | 69X11659 | LINE CORD & PLUG (6 FT.)                   |
| 29        | 30A25194 | TRIMMER CONDENSER (7 MFD NON-P.)           |
| 30        | 30A25194 | TRIMMER CONDENSER (7 MFD NON-P.)           |

I. F. = 455 K.C.  
FREQ. RANGE 530KG TO 1720 KG  
MAX PWR. OUTPUT 1.35 WATTS


VOLTAGE CHART

| TUBE    | PLATE | SCREEN | CATH. |
|---------|-------|--------|-------|
| 12SA7GT | 80V.  | 80V.   | 0     |
| 12SK7GT | 80V.  | 80V.   | 0     |
| 12SQ7GT | 80V.  | 80V.   | 0     |
| 50L6GT  | 75V.  | 80V.   | 5.5V. |
| 35Z5GT  | RECT. | A.C.   | 105V. |

NOTE: ALL VOLTAGES MEASURED ON A 1000 OHMS PER VOLT VOLTMETER INPUT: 117 V. A.C.

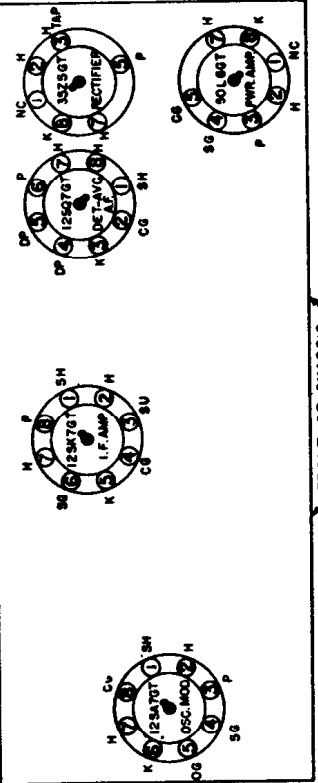

# POPULAR SERVICE DIAGRAMS

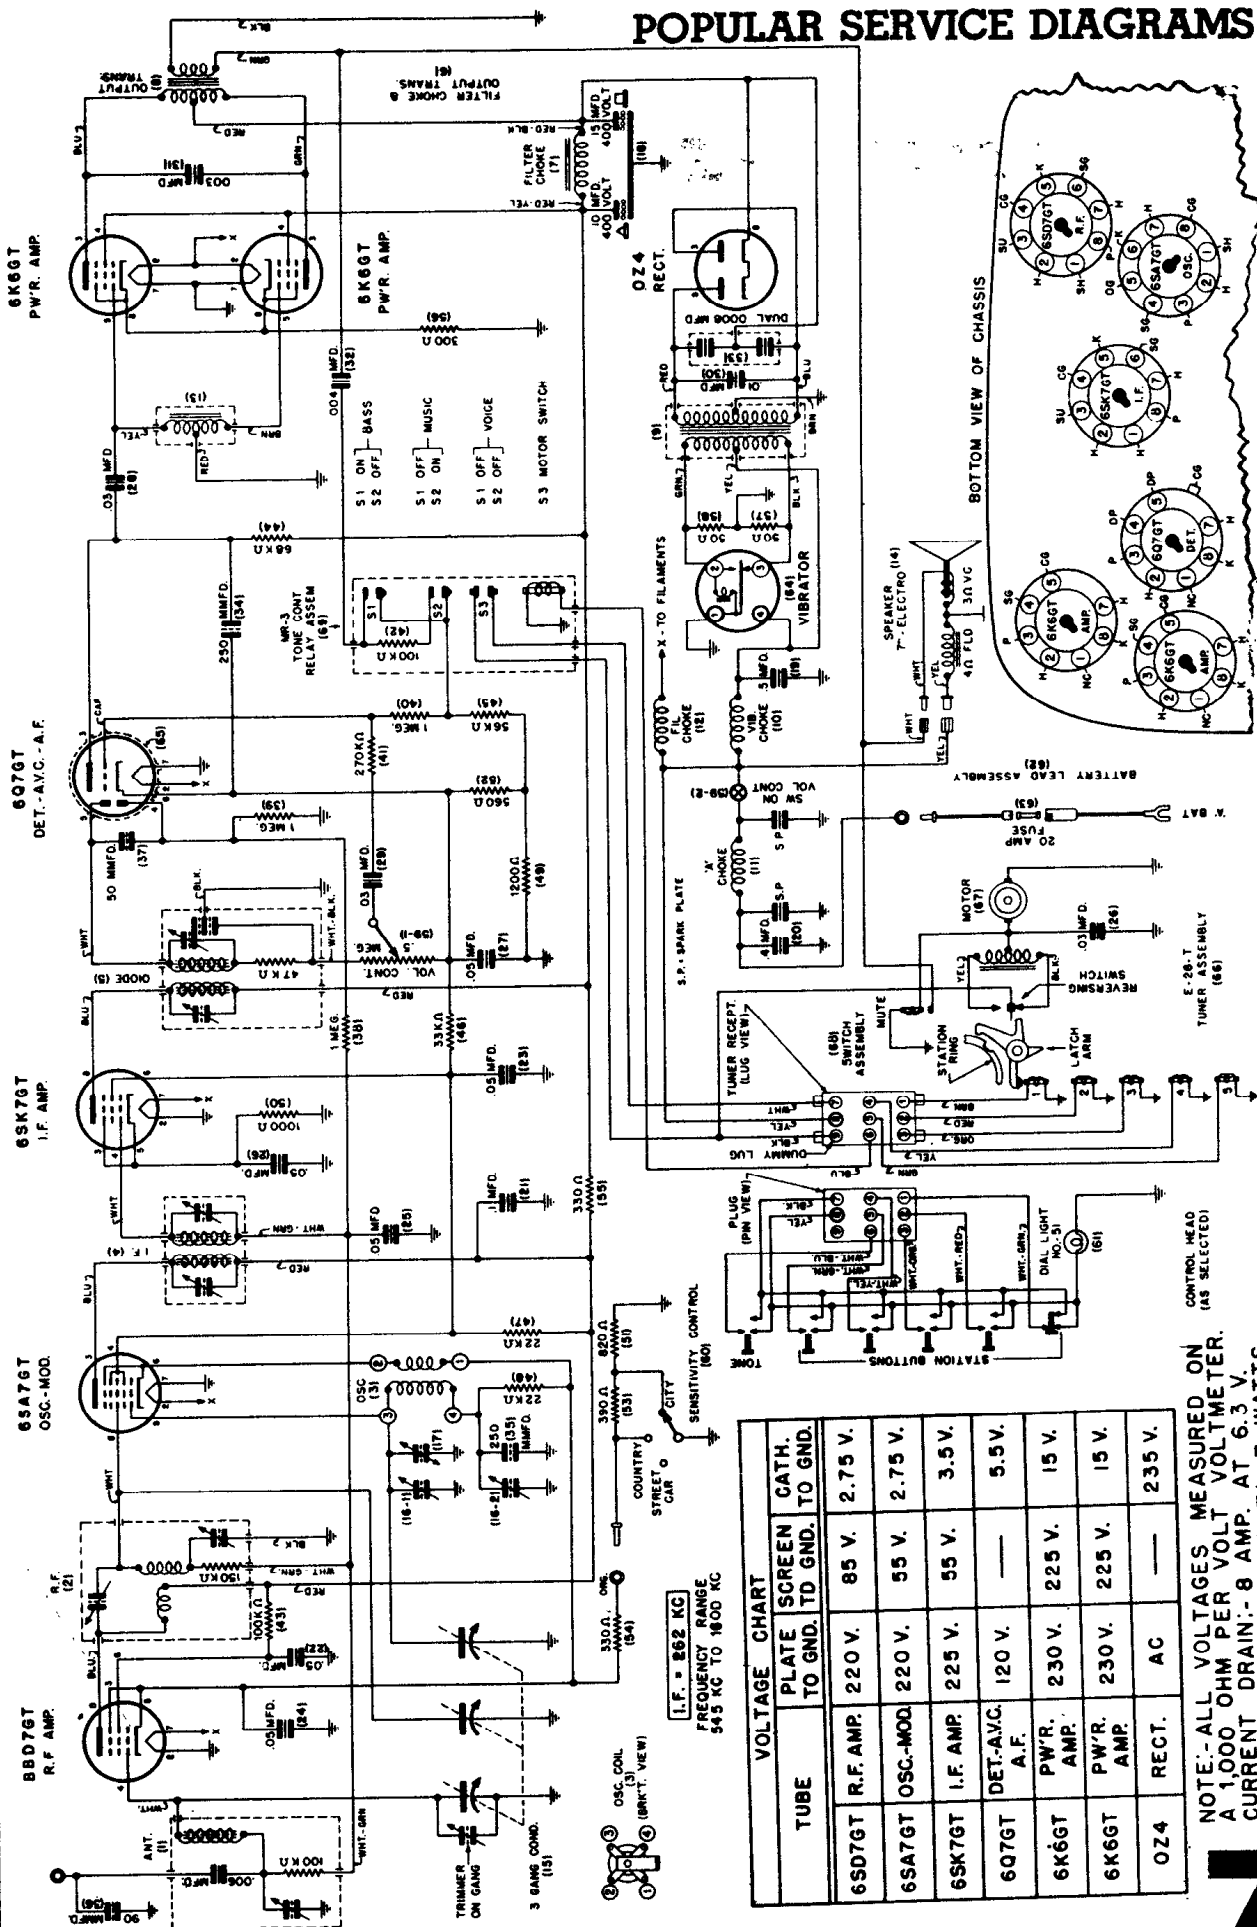

| TUBE   | PLATE TO GND. | SCREEN TO GND. | CATH. TO GND. |
|--------|---------------|----------------|---------------|
| 6D7GT  | 220 V.        | 85 V.          | 2.75 V.       |
| 6SA7GT | 220 V.        | 55 V.          | 2.75 V.       |
| 6SK7GT | 225 V.        | 55 V.          | 3.5 V.        |
| 6Q7GT  | 120 V.        | —              | 5.5 V.        |
| 6K6GT  | 230 V.        | 225 V.         | 15 V.         |
| 6K6GT  | 230 V.        | 225 V.         | 15 V.         |
| OZ4    | AC            | —              | 235 V.        |

NOTE: ALL VOLTAGES MEASURED ON A 1,000 OHM PER VOLT VOLTMETER. CURRENT DRAIN: 8 AMP. AT 6.3 V. MAXIMUM POWER OUTPUT: 7 WATTS.


# Motorola

Model 501





# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

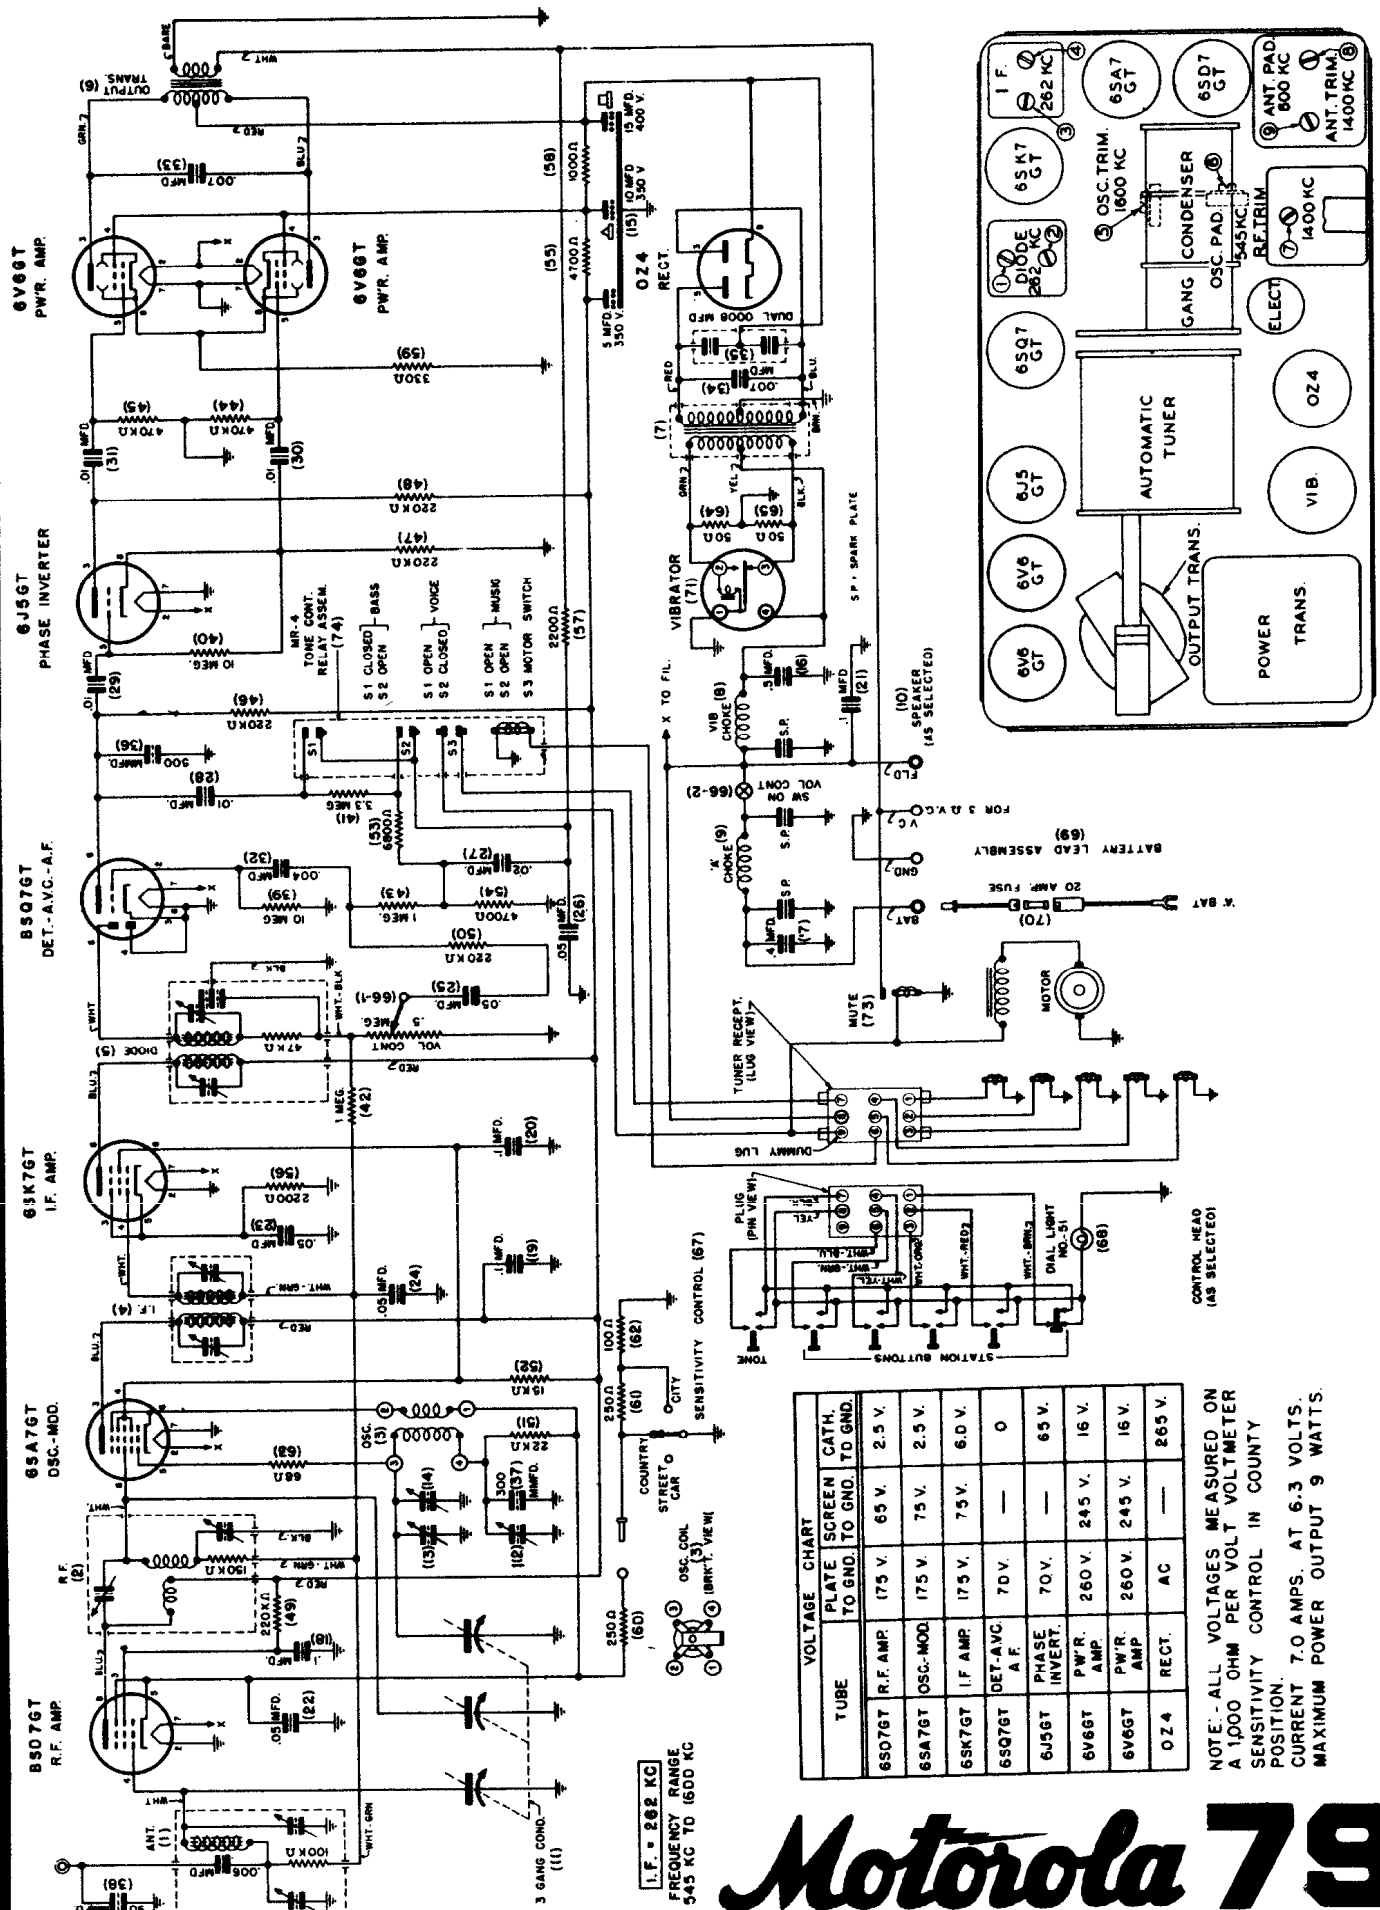

Model 551

# Motorola 79

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

12SA7

12SQ7

50L6GT


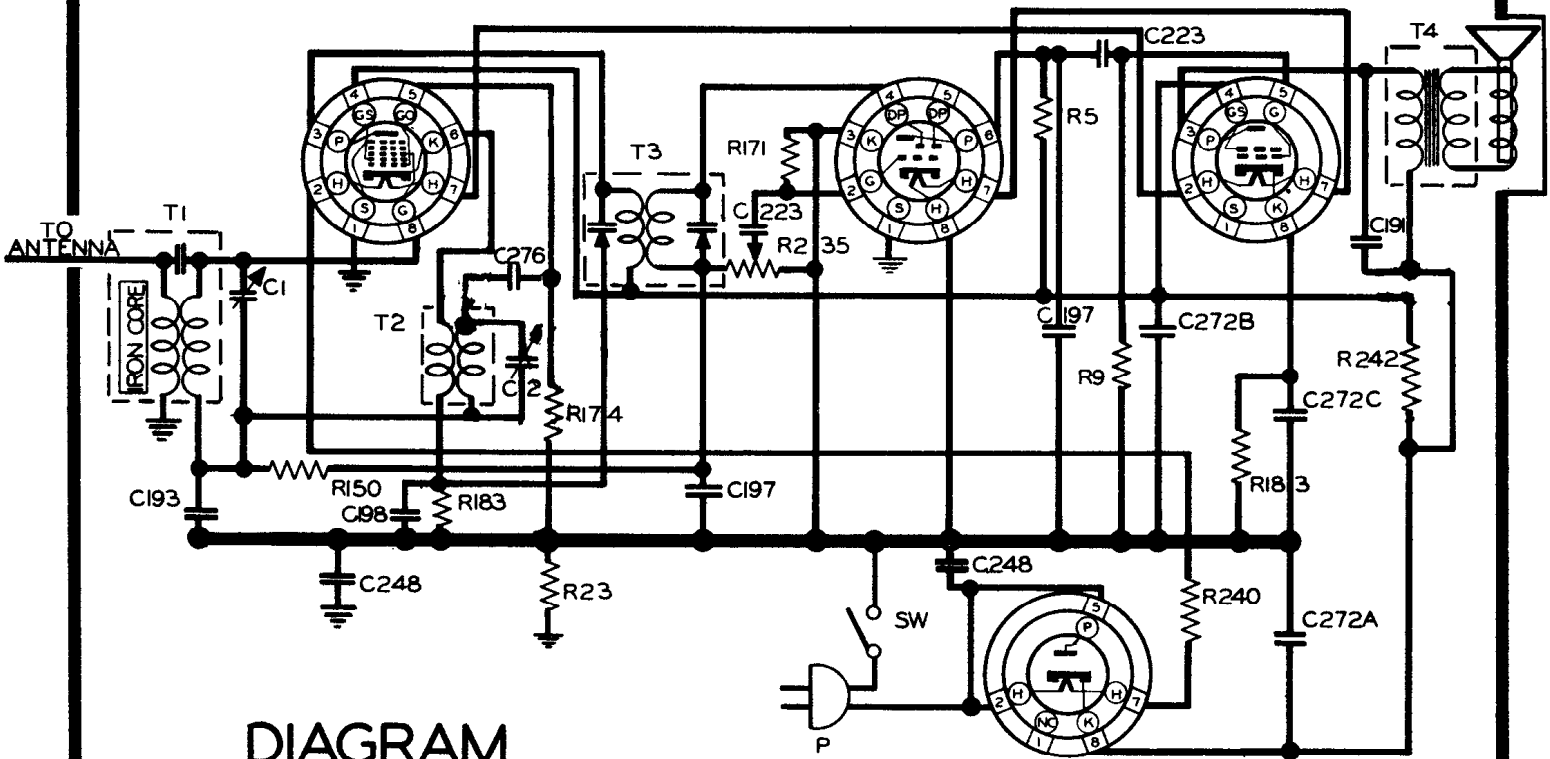


DIAGRAM  
CHASSIS RE-91

35Z4GT OR  
35Z5GT

| RESISTORS |       |      |          | CONDENSERS |          |      | MISCELLANEOUS UNITS |        |                    |          |
|-----------|-------|------|----------|------------|----------|------|---------------------|--------|--------------------|----------|
| R         | OHM   | W    | PART NO. | C          | CAPACITY | VOLT | PART NO.            | SYMBOL | DESCRIPTION        | PART NO. |
| 174       | 20 K. | 1/4  | 17-14291 | 193        | .05      | 200  | 17-14274            | T1     | ANTENNA COIL       | 00-17130 |
| 9         | 1 M.  | 1/4  | 17-2080  | 248        | .05      | 400  | 17-14366            | T2     | OSCILLATOR COIL    | 00-17223 |
| 171       | 15 M. | 1/4  | 17-14288 | 198        | .005     | 400  | 17-14279            | T3     | I.F. COIL          | 00-17210 |
| 5         | 500K. | 1/4  | 17-2070  | 223        | .002     | 400  | 17-14318            | T4     | OUTPUT TRANSFORMER | 00-17131 |
| 183       | 150   | 1/4  | 17-14318 | 191        | .01      | 400  | 17-14272            | SPK.   | SPEAKER            | 17-17209 |
| 235       | 2 M.  | V.C. | 17-17117 | 1          | TWO GANG |      | 17-17115            |        |                    |          |
| 23        | 250K  | 1/4  | 17-3011  | 2          | VARIABLE |      |                     |        |                    |          |
| 240       | 47    | 1    | 17-14397 | 272A       | 40 MFD.  | 150  |                     |        |                    |          |
| 150       | 5 M.  | 1/4  | 17-14242 | 272B       | 20 MFD.  | 150  | 17-14398            |        |                    |          |
| 242       | 2000  | 1    | 17-14399 | 272C       | 20 MFD.  | 25   |                     |        |                    |          |
|           |       |      |          | 197        | .0001    | 800  | 17-14278            |        |                    |          |
|           |       |      |          | 276        | .00005   | 800  | 17-14404            |        |                    |          |

FREQUENCY RANGE  
1750 TO 540 KC.  
NOBLITT-SPARKS INDUSTRIES, INC.  
COLUMBUS, INDIANA

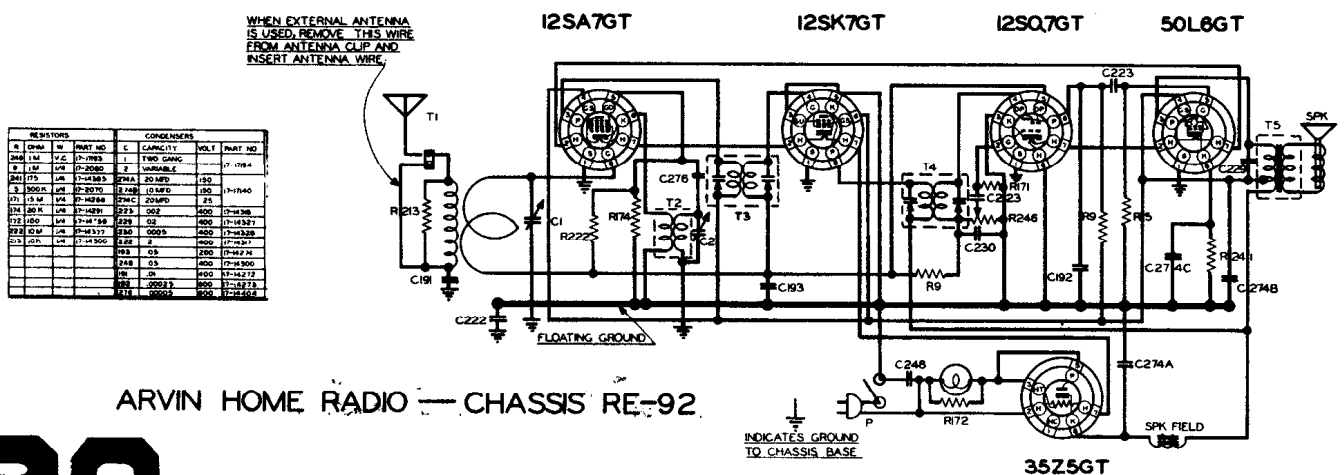


ARVIN HOME RADIO — CHASSIS RE-92

35Z5GT

80

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

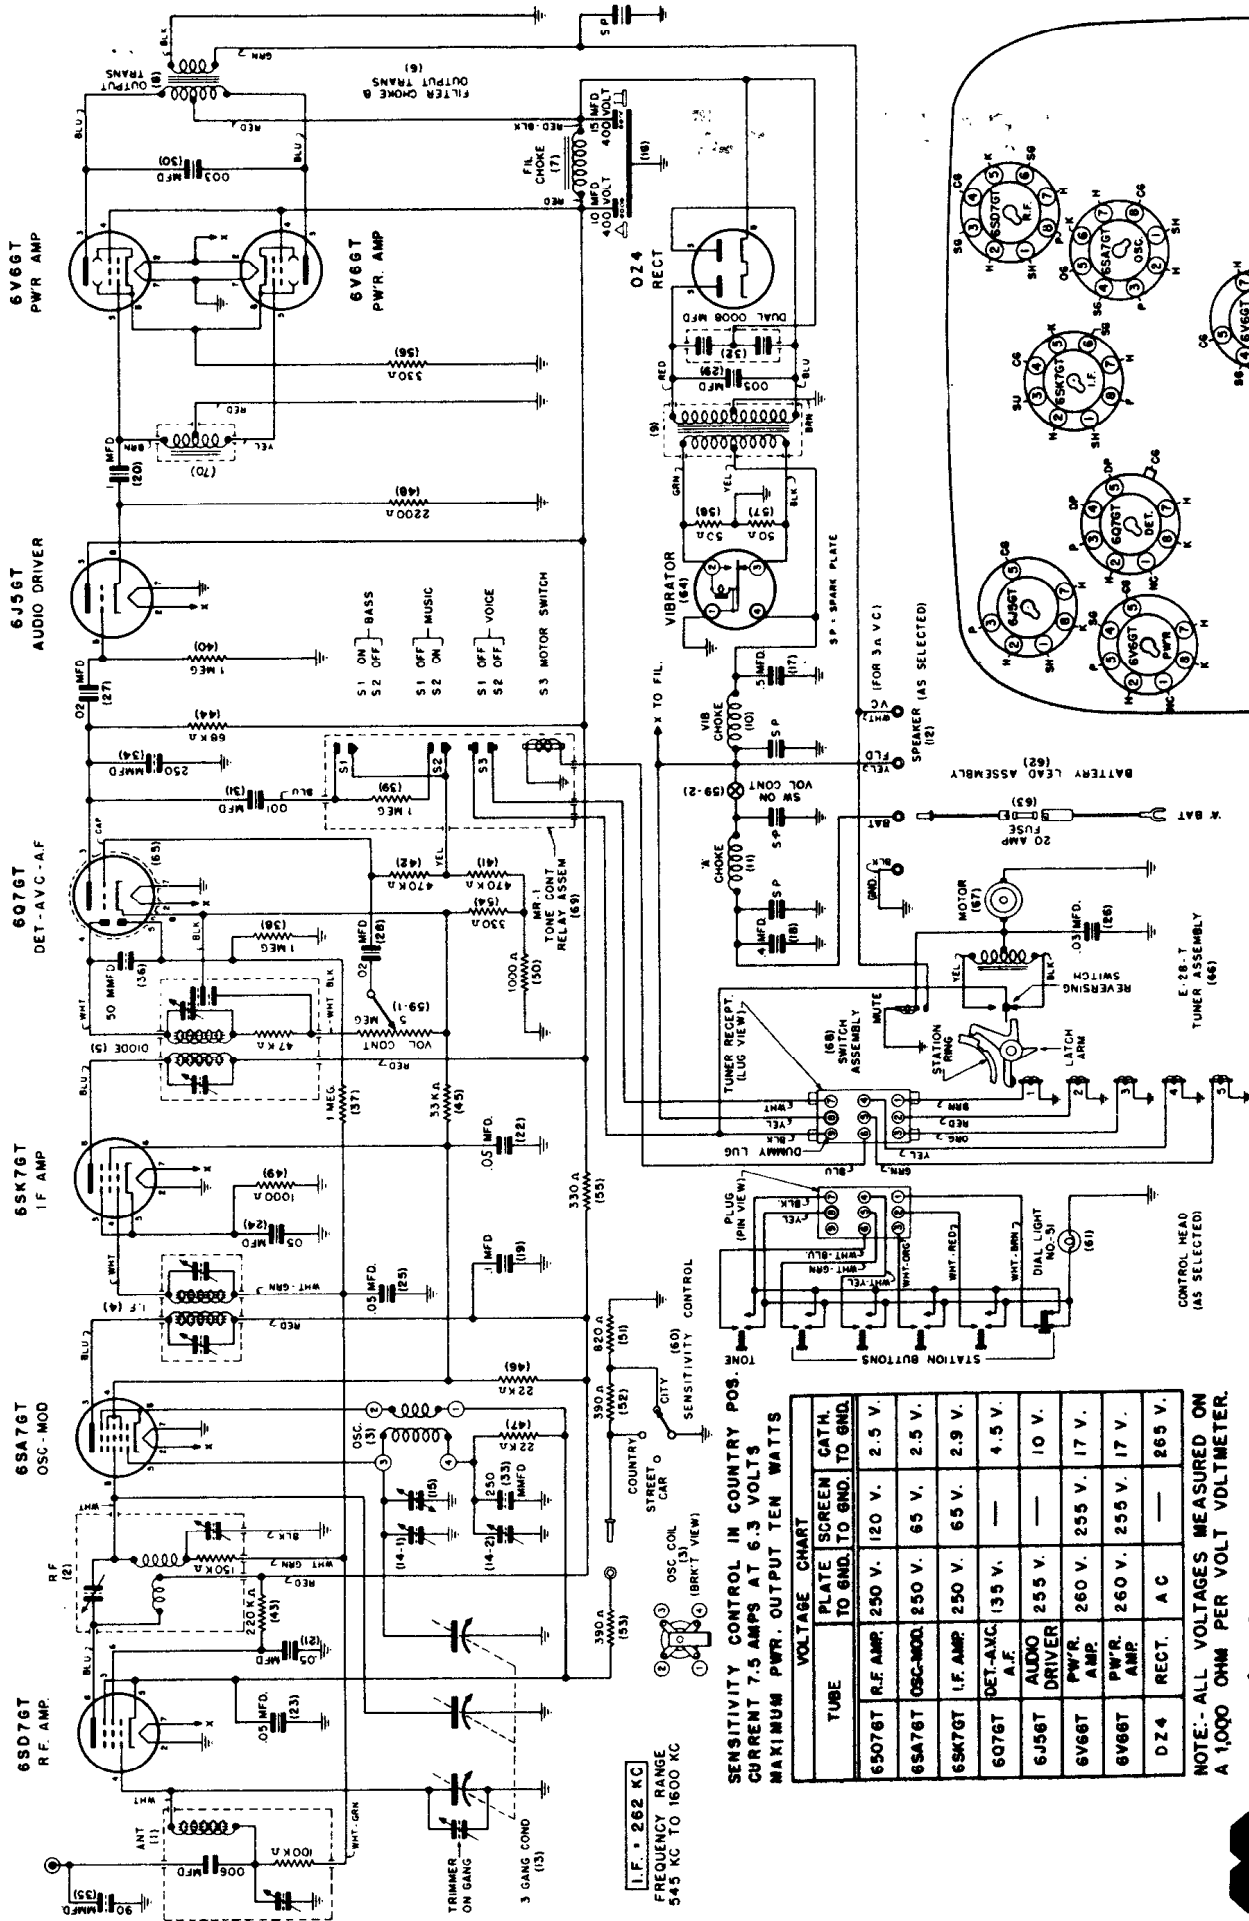


L.F. ± 2.62 KC  
 FREQUENCY RANGE  
 545 KC TO 1600 KC

SENSITIVITY CONTROL IN COUNTRY POS.  
 CURRENT 7.5 AMPS AT 6.3 VOLTS  
 MAXIMUM PWR. OUTPUT TEN WATTS

| TUBE   | PLATE          | SCREEN  | CATH.         |
|--------|----------------|---------|---------------|
|        | TO BND.        | TO BND. | TO BND.       |
| 65076T | R.F. AMP       | 250 V.  | 120 V. 2.5 V. |
| 6SA76T | OSC-MOD.       | 250 V.  | 65 V. 2.5 V.  |
| 6SK76T | I.F. AMP       | 250 V.  | 65 V. 2.9 V.  |
| 6076T  | DET.-AVG. A.F. | 135 V.  | — 4.5 V.      |
| 6J56T  | AUDIO DRIVER   | 255 V.  | — 10 V.       |
| 6V66T  | PWR. AMP       | 260 V.  | 255 V. 17 V.  |
| 6V66T  | PWR. AMP       | 260 V.  | 255 V. 17 V.  |
| DZ4    | RECT.          | A C     | — 265 V.      |

NOTE:— ALL VOLTAGES MEASURED ON A 1,000 OHM PER VOLT VOLTMETER.

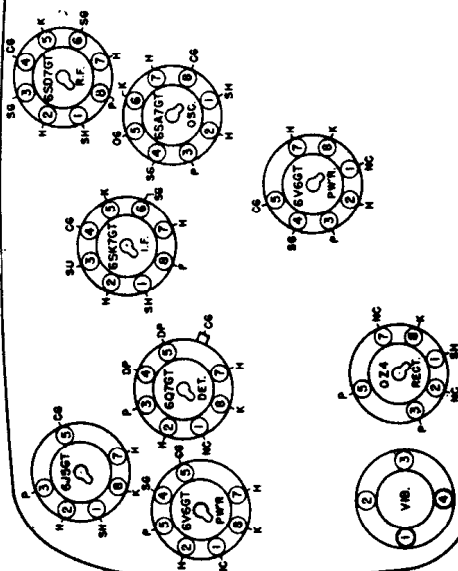


# Motorola

Model 701



# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS


## ARVIN HOME RADIO CHASSIS RE-99

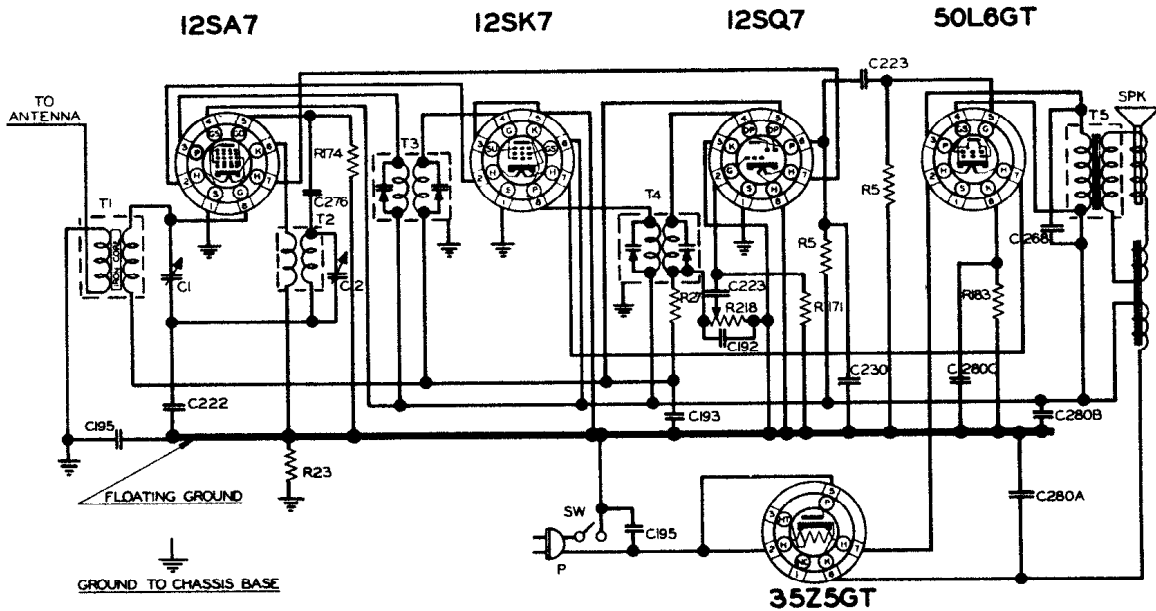

| RESISTORS |      | CONDENSERS |          | TRANSFORMERS |          | MISCELLANEOUS UNITS |          |   |                  |        |                           |          |
|-----------|------|------------|----------|--------------|----------|---------------------|----------|---|------------------|--------|---------------------------|----------|
| R         | OHM  | W          | PART NO. | C            | CAPACITY | VOLT                | PART NO. | T | TYPE             | SYMBOL | DESCRIPTION               | PART NO. |
| 216       | 1M   | V          | 7-18857  | 1            | TWO GANG |                     | 7-17279  | 1 | ANTENNA COIL     | SW     | LINE SWITCH               | 7-18857  |
| 5         | 500K | 1/4        | 7-2070   | 2            | VARIABLE |                     |          | 2 | OSCILLATOR COIL  | #      | LINE CORD & PLUG ASSEMBLY | 7-25844  |
| 483       | 150  | 1/4        | 7-14318  | 280A         | 40 MFD   | 150                 |          | 3 | FIRST I.F. COIL  | SPK    | SPEAKER ASSEMBLY          | 7-18843  |
| 374       | 20K  | 1/4        | 7-4228   | 280B         | 20 MFD   | 150                 | 7-14415  | 4 | SECOND I.F. COIL |        |                           |          |
| 131       | 15M  | 1/4        | 7-14286  | 880C         | 20 MFD   | 2.5                 |          | 5 | OUTPUT TRANSF.   |        |                           |          |
| 23        | 250K | 1/4        | 7-301    | 185          | .05      | 400                 | 7-14278  |   |                  |        |                           |          |
| 27        | 2M   | 1/4        | 7-4788   | 222          | .2       | 400                 | 7-14317  |   |                  |        |                           |          |
|           |      |            |          | 192          | .00025   | 400                 | 7-14273  |   |                  |        |                           |          |
|           |      |            |          | 223          | .002     | 400                 | 7-14308  |   |                  |        |                           |          |
|           |      |            |          | 473          | .05      | 250                 | 7-14324  |   |                  |        |                           |          |
|           |      |            |          | 24A          | .03      | 400                 | 7-14382  |   |                  |        |                           |          |
|           |      |            |          | 230          | .0005    | 400                 | 7-14328  |   |                  |        |                           |          |
|           |      |            |          | 238          | .00005   | 500                 | 7-14404  |   |                  |        |                           |          |

I.F. PEAK 455 K.C.  
 BALANCE 1400 K.C. - CHECK AT 600 K.C.  
 NOBLITT-SPARKS INDUSTRIES, INC.  
 COLUMBUS, INDIANA

## ARVIN HOME RADIO - CHASSIS RE-98

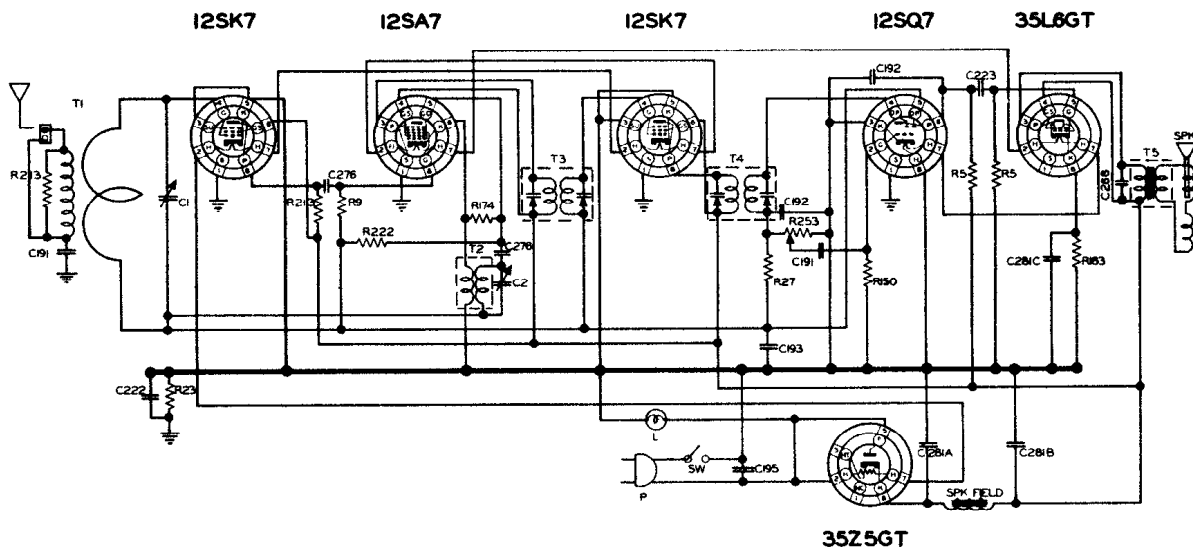



| RESISTORS |       | CONDENSERS |          | COILS & TRANSFORMERS |          | MISCELLANEOUS UNITS |          |   |                   |        |                       |          |
|-----------|-------|------------|----------|----------------------|----------|---------------------|----------|---|-------------------|--------|-----------------------|----------|
| R         | OHM   | W          | PART NO. | C                    | CAPACITY | VOLT                | PART NO. | T | TYPE              | SYMBOL | DESCRIPTION           | PART NO. |
| 8         | 1MEG  | 1/4        | 7-2040   | 222                  | .2       | 400                 | 7-14317  | 1 | ANTENNA LOOP ASSY | SPK    | SPEAKER 3 INCH E.M.   | 7-17251  |
| 222       | 10MEG | 1/4        | 7-14377  | 82                   | .0025    | 400                 | 7-14273  | 2 | OSCILLATOR COIL   | #      | LINE CORD & PLUG ASSY | 7-25844  |
| 52        | 10K   | 1/4        | 7-1428   | 91                   | .01      | 400                 | 7-14273  | 3 | FIRST I.F. COIL   | SW     | VOLUME CONTROL & SW   | 7-17251  |
| 27        | 1MEG  | 1/4        | 7-4788   | 483                  | .05      | 250                 | 7-14318  | 4 | SECOND I.F. COIL  |        |                       |          |
| 22        | 10MEG | 1/4        | 7-14242  | 251                  | .001     | 400                 | 7-14308  | 5 | OUTPUT TRANSF.    |        |                       |          |
| 13        | 100K  | 1/4        | 7-2070   | 880                  | .05      | 400                 | 7-14278  |   |                   |        |                       |          |
| 483       | 150   | 1/4        | 7-14318  | 185                  | .05      | 400                 | 7-14278  |   |                   |        |                       |          |
| 23        | 250K  | 1/4        | 7-301    | 278                  | .00005   | 500                 | 7-14404  |   |                   |        |                       |          |
| 27        | 2M    | 1/4        | 7-4788   | 222                  | .2       | 400                 | 7-14317  |   |                   |        |                       |          |
| 233       | 1MEG  | V.C.       | 7-17258  | 2                    | VARIABLE |                     |          |   |                   |        |                       |          |
|           |       |            |          | 280A                 | 40 MFD   | 150                 |          |   |                   |        |                       |          |
|           |       |            |          | 280B                 | 20 MFD   | 150                 |          |   |                   |        |                       |          |
|           |       |            |          | 880C                 | 20 MFD   | 2.5                 |          |   |                   |        |                       |          |

I.F. PEAK 455 K.C.  
 BALANCE 1400 K.C. - CHECK AT 600 K.C.  
 NOBLITT-SPARKS INDUSTRIES, INC.  
 COLUMBUS, INDIANA






# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

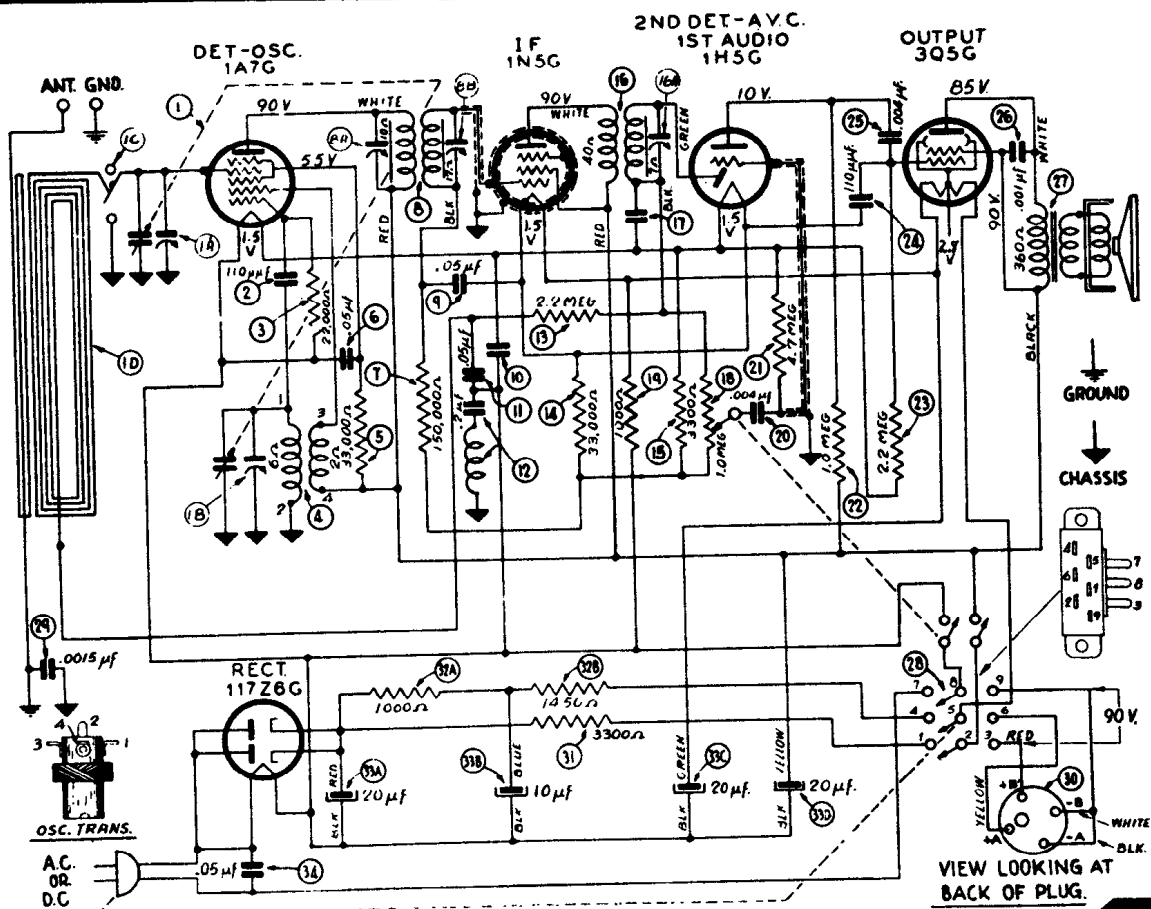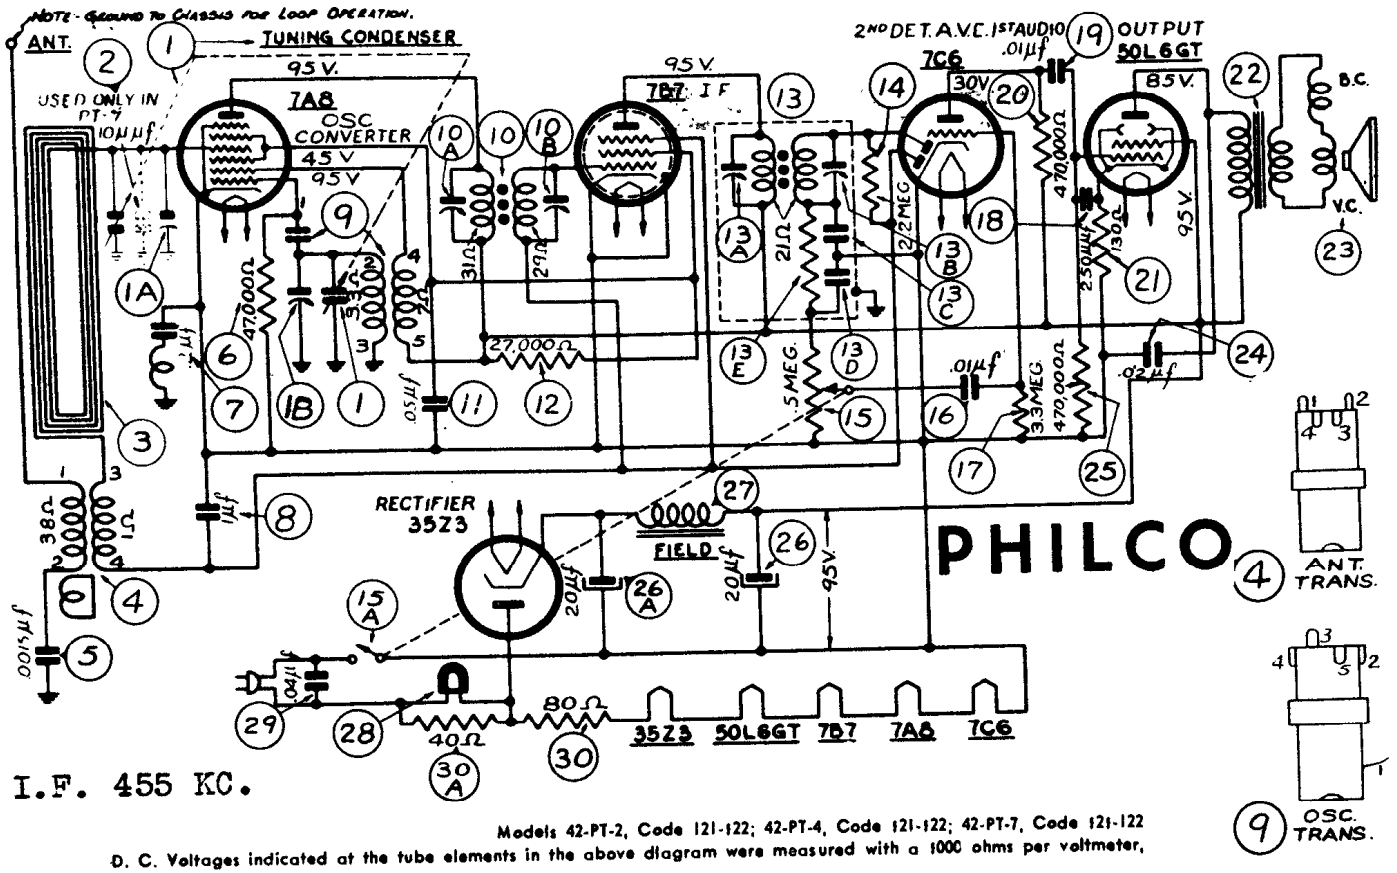

SCHEMATIC DIAGRAM—MODEL 42-PT-87, 42-PT-88  
 SOCKET VOLTAGES INDICATED ON THE DIAGRAM WERE MEASURED WITH A 1000 OHM PER VOLTMETER,  
 COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# PHILCO Models PT-91, PT-92, PT-93, PT-94, PT-95

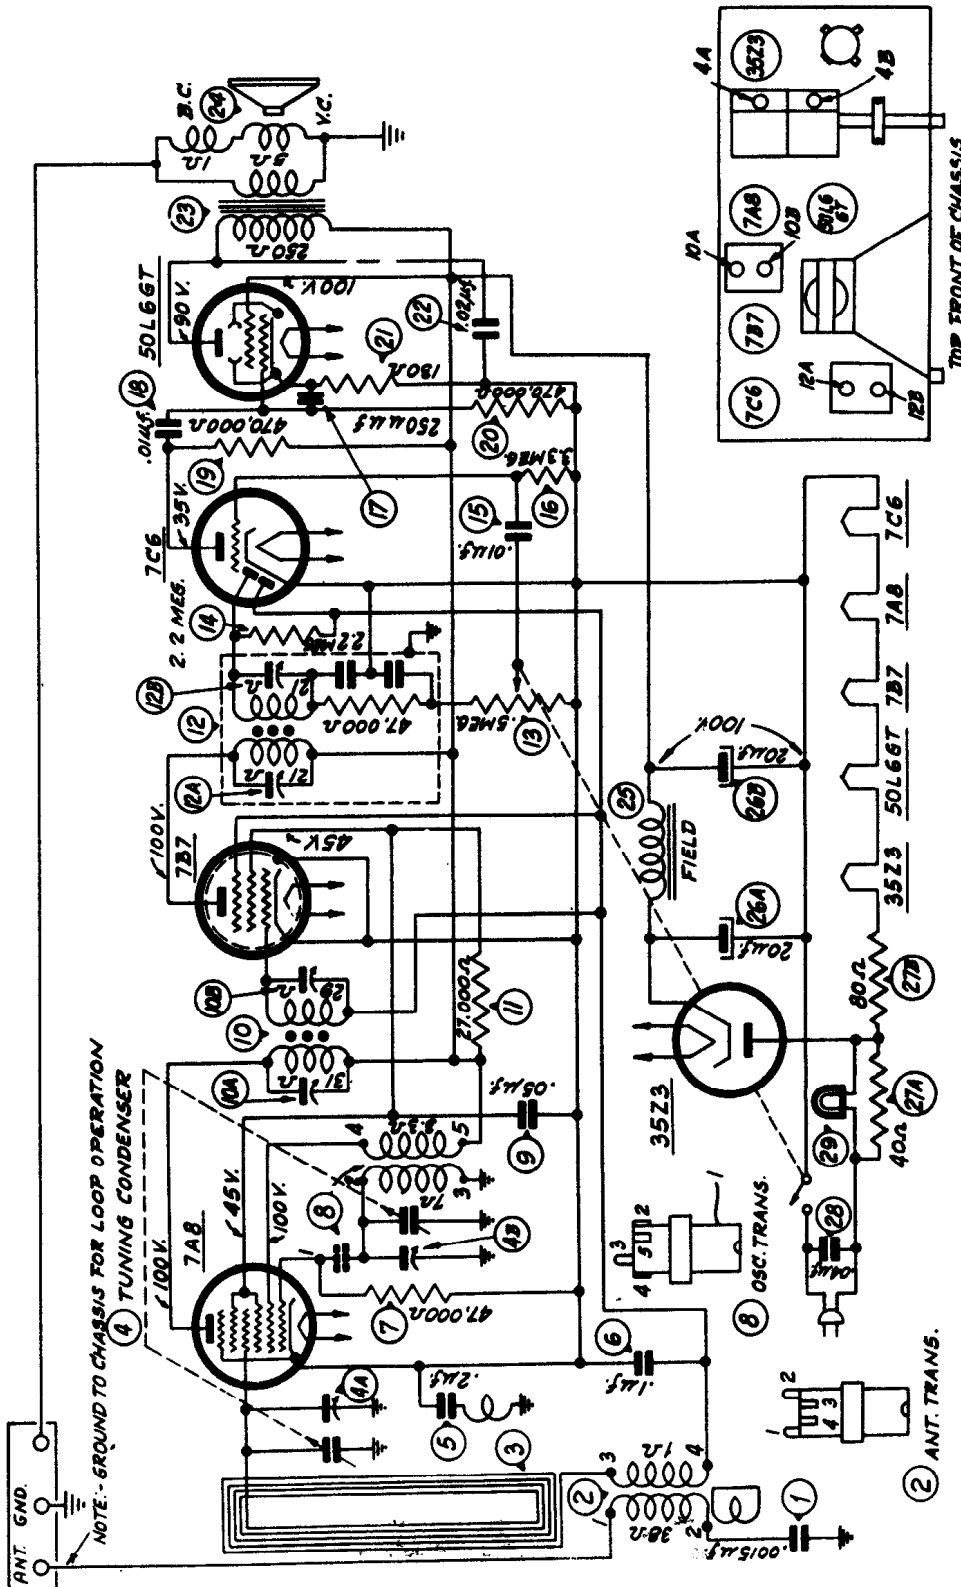

SCHEMATIC DIAGRAM — MODELS PT-91, PT-92, PT-93, PT-94, PT-95  
 The tube socket voltages indicated on the diagram were measured with a 1,000 ohms per voltmeter — PHILCO Model 027, line voltage 117 volts A.C.




| Operations in Order | SIGNAL GENERATOR               |              | RECEIVER                     |                              |
|---------------------|--------------------------------|--------------|------------------------------|------------------------------|
|                     | Output Connections to Receiver | Dial Setting | Dial Setting                 | Control Setting              |
| 1.                  | Ant. Section of tuning         | 485 K.C.     | 540 K.C. Tuning Cond. Closed | Vol. Max. 12A, 12B, 10A, 10B |
| 2.                  | Loop see above instructions    | 1500 K.C.    | 1500 K.C.                    | Vol. Max. 4B                 |
| 3.                  | Loop see above instructions    | 1500 K.C.    | 1500 K.C.                    | Vol. Max. 4A                 |



# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## MODELS 42-321, 42-PT-10, CODE 121


NOTE  
GROUND TO CHASSIS FOR LOOP OPERATION

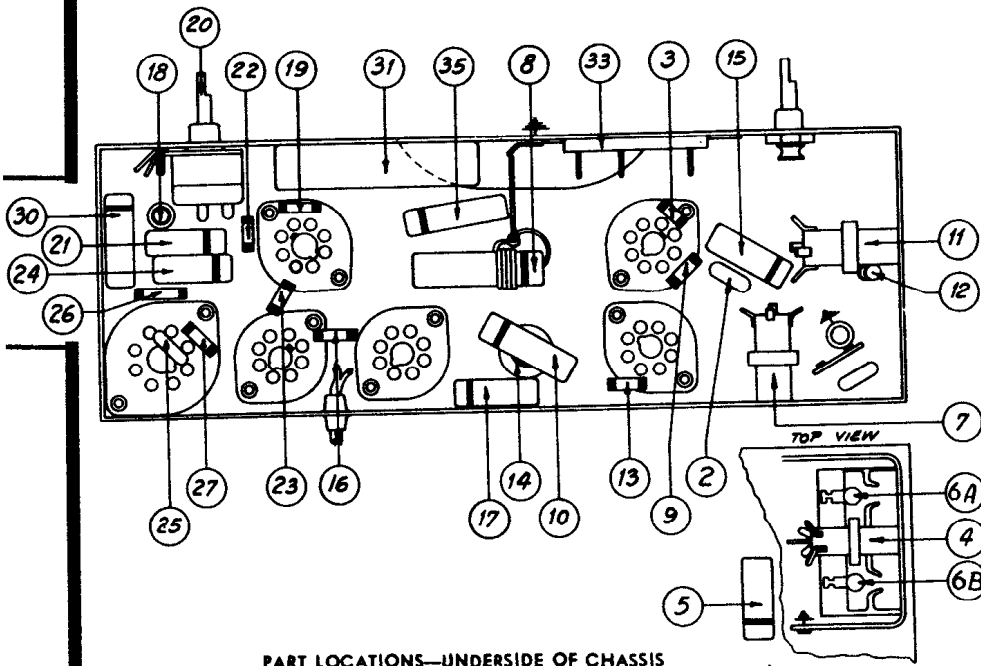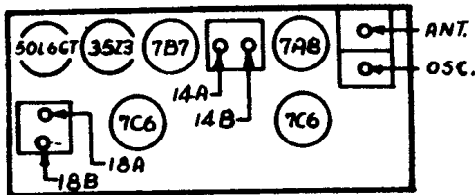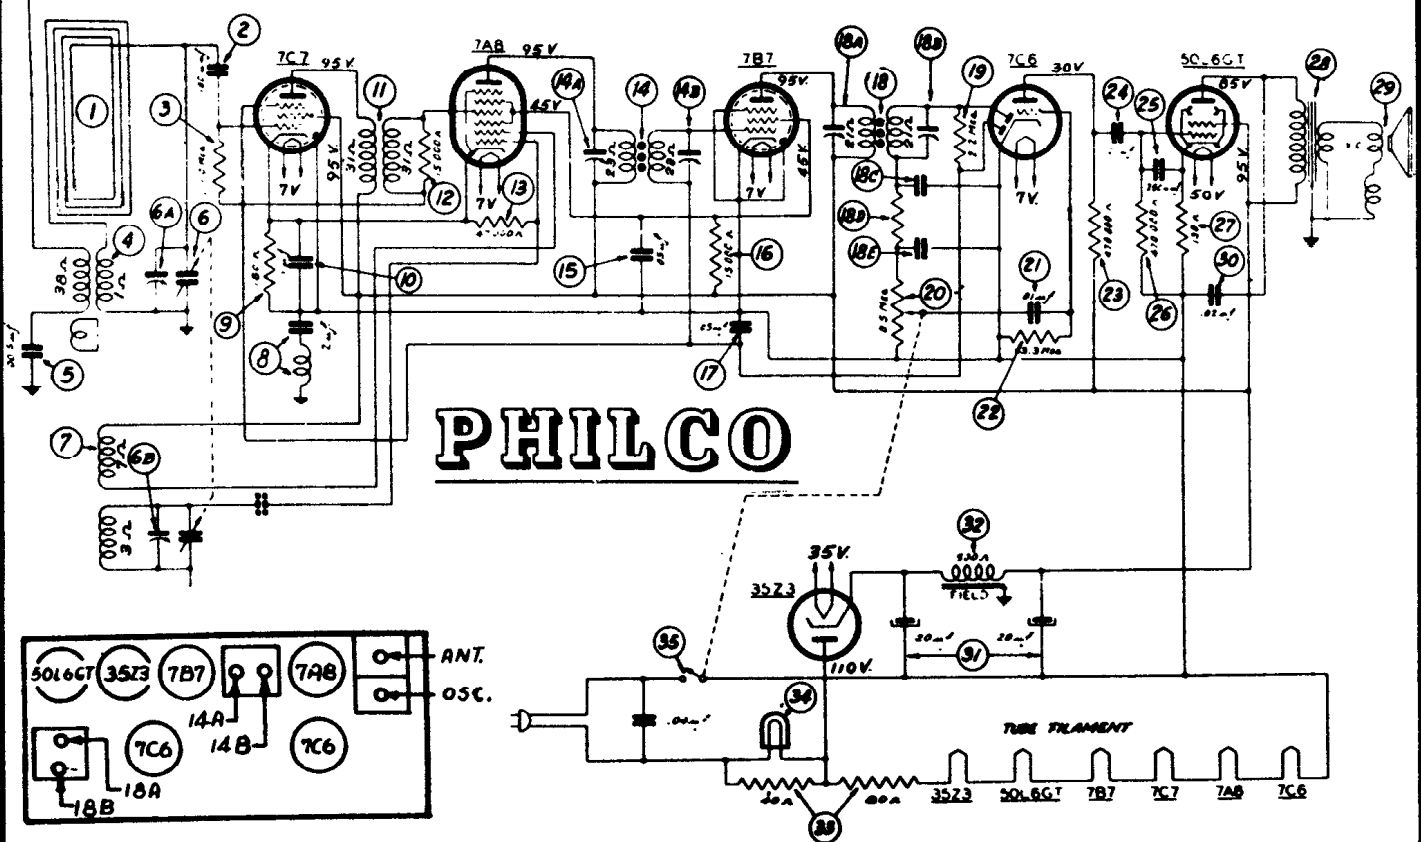

PART LOCATIONS—UNDERSIDE OF CHASSIS

| SCHE. No.           | DESCRIPTION                            | PART No.  |
|---------------------|--|-----------|
| 1                   | Loop Aerial (42-321T1)                 | 76-1196   |
|                     | Loop Aerial (PT-10) Part of Cabinet.   |           |
| 2                   | Mica Condenser (100 mmfd.)             | 60-110157 |
| 3                   | Resistor (1.0 megohms)                 | 33-510154 |
| 4                   | Aerial Transformer                     | 32-3394   |
| 5                   | Condenser (.0015 mfd., 400 volts)      | 30-4621   |
| 6                   | Tuning Condenser                       | 31-2527   |
|                     | Pointer                                | 56-2076   |
|                     | Spring (Drive Cord)                    | 28-8954   |
|                     | Shaft Assembly (42-321)                | 31-2591   |
|                     | Shaft Assembly (PT-10)                 | 31-2531   |
|                     | Drive Cord                             | 31-2529   |
| 7                   | Oscillator Transformer                 | 32-3613   |
| 8                   | Condenser and Choke Assembly           | 76-1198   |
| 9                   | Resistor (180 ohms)                    | 33-118336 |
| 10                  | Condenser (.11 mfd., 200 volts)        | 30-4586   |
| 11                  | R. F. Transformer                      | 32-3595   |
| 12                  | Resistor (15,000 ohms)                 | 33-15339  |
| 13                  | Resistor (47,000 ohms)                 | 33-347339 |
| 14                  | 1st I. F. Transformer                  | 32-3614   |
| 15                  | Condenser (.05 mfd., 200 volts)        | 30-4519   |
| 16                  | Resistor (15,000 ohms)                 | 33-15339  |
| 17                  | Condenser (.05 mfd., 200 volts)        | 30-4519   |
| 18                  | 2nd I. F. Transformer                  | 32-3604   |
| 19                  | Resistor (2.2 megohms)                 | 33-522339 |
| 20                  | Volume Control                         | 33-5469   |
| 21                  | Condenser (.01 mfd., 400 volts)        | 30-4572   |
| 22                  | Resistor (3.3 megohms)                 | 33-533339 |
| 23                  | Resistor (470,000 ohms)                | 33-447339 |
| 24                  | Condenser (.01 mfd., 400 volts)        | 30-4572   |
| 25                  | Mica Condenser (250 mmfd.)             | 60-125157 |
| 26                  | Resistor (470,000 ohms)                | 33-447339 |
| 27                  | Resistor (130 ohms)                    | 33-113336 |
| 28                  | Output Trans. (for Speaker 36-1533-9)  | 32-8164   |
| 29                  | Cone Assembly (for Speaker 36-1533-9)  | 34-4190   |
| 30                  | Condenser (.02 mfd., 400 volts)        | 30-4516   |
| 31                  | Electrolytic Condenser (20-20 mfd.)    | 30-2382   |
| 32                  | Field Coil (Replace Speaker 36-1533-9) |           |
| 33                  | Resistor (Wirewound, 40-80 ohms)       | 33-3408   |
| 34                  | Pilot Lamp                             | 34-2068   |
| 35                  | Condenser (.04 mfd., 400 volts)        | 30-4119   |
| MISCELLANEOUS PARTS |  |           |
|                     | Cabinet (42-321T)                      | 10568A    |
|                     | Cabinet (42-321T1)                     | 10568B    |
|                     | Cabinet (PT-10)                        | 76-1195   |
|                     | Cardboard Back (PT-10)                 | 27-9817   |

# PHILCO MODEL 42-322, CODE 121

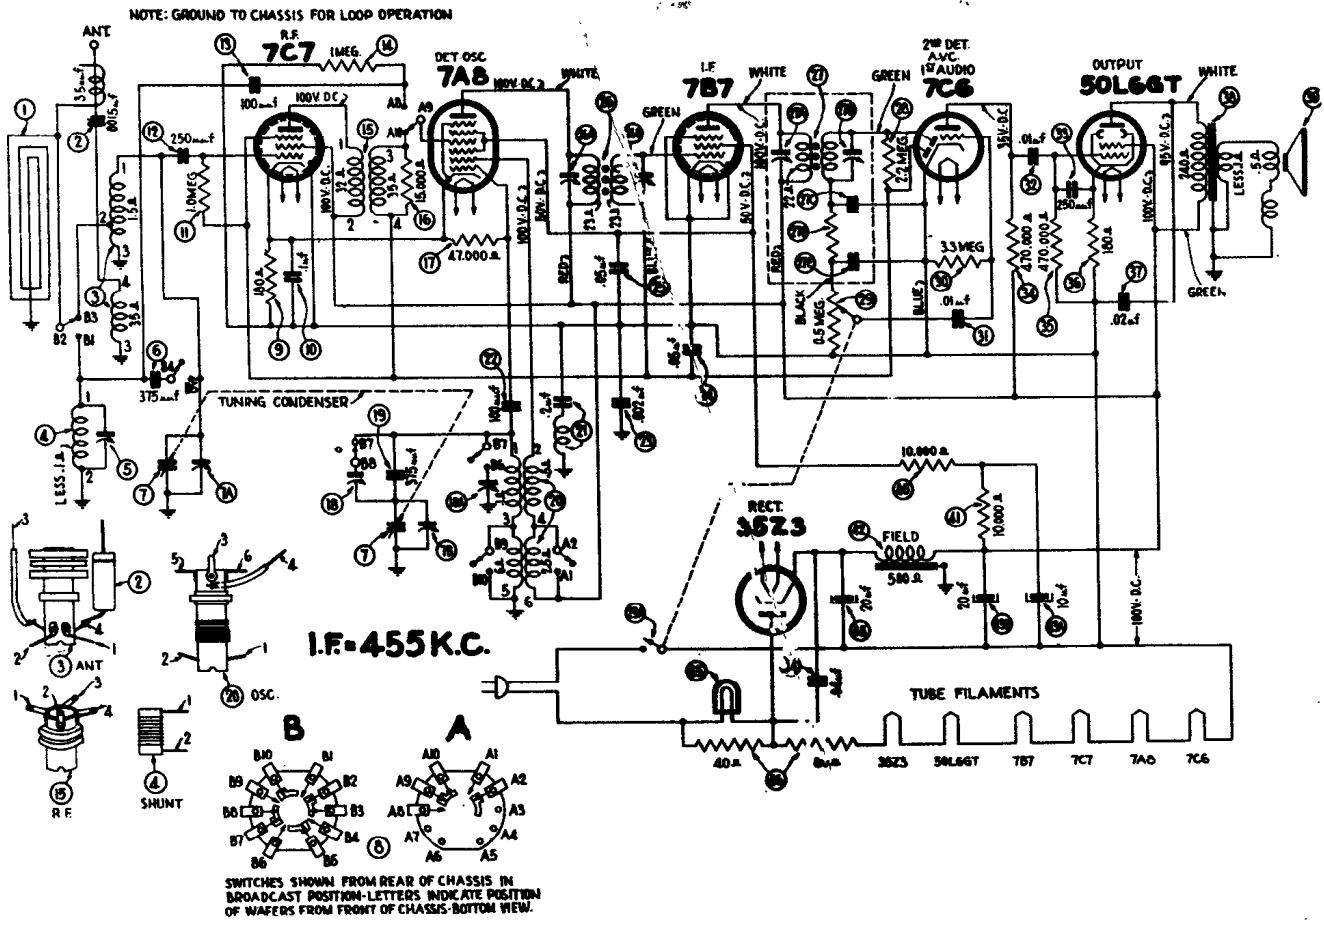


| Operations In Order | SIGNAL GENERATOR                  |                    | RECEIVER                     |                                 |                              | SPECIAL INSTRUCTIONS                 |
|---------------------|-----------------------------------|--------------------|------------------------------|---------------------------------|------------------------------|--------------------------------------|
|                     | Output Connections to Receiver    | Dial Setting       | Dial Setting                 | Control Setting                 | Adjust Compensators in Order |                                      |
| 1                   | Lug on the Ant. Section of Tuning | 455 K.C.           | 540 K.C. Tuning Cond. Closed | Vol. Max. Range Switch Brdcast. | 27A, 27B 26A, 26B            |                                      |
| 2                   | Loop See Above Instructions       | 1500 K.C.          | 1500 K.C.                    | Vol. Max. Band Switch Brdcast.  | 7B, 7A                       | Note A                               |
| 3                   | Loop See Above Instructions       | 580 K.C.           | 580 K.C.                     | Vol. Max. Band Switch Brdcast.  | (10)                         | Roll Tuning Condenser                |
| 4                   | Loop See Above Instructions       | Repeat Operation 2 |                              |                                 |                              |                                      |
| 5                   | Loop See Above Instructions       | 15 M.C.            | 15 M.C.                      | Band Switch S.W.                | (18A, 5) Note B              | Roll Tuning Condenser When Padding 5 |

NOTE A—DIAL POINTER CALIBRATION: In order to adjust the receiver correctly, the pointer must be adjusted to track properly with the tuning condenser. To do this, turn the tuning condenser to the maximum capacity (plates fully meshed). With the condenser in this position, set the tuning pointer on the first small line stamped in the scale plate on the left side.

NOTE B—To accurately adjust the high frequency oscillator compensator to the fundamental instead of the image signal, turn the oscillator compensator (18A) to the maximum capacity position (clockwise). From this position slowly turn the compensator counter-clockwise until a second peak is obtained on the output meter. Adjust the compensator for maximum output at this second peak.


If the above procedure is correctly performed, the image signal will be found (much weaker) by turning the signal generator dial 910 K.C. above the frequency being used on any high frequency range.

The aerial paddler (5) must be adjusted to maximum by rolling the tuning condenser. If two signal peaks occur when turning the paddler, adjust to maximum output on the first signal peak from the tight position (screw all the way down) of the paddler.

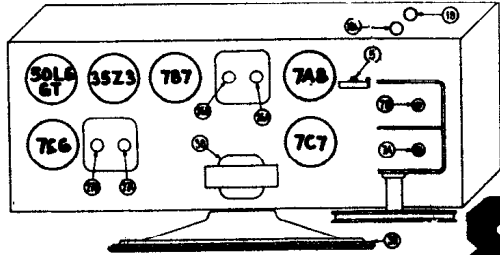




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

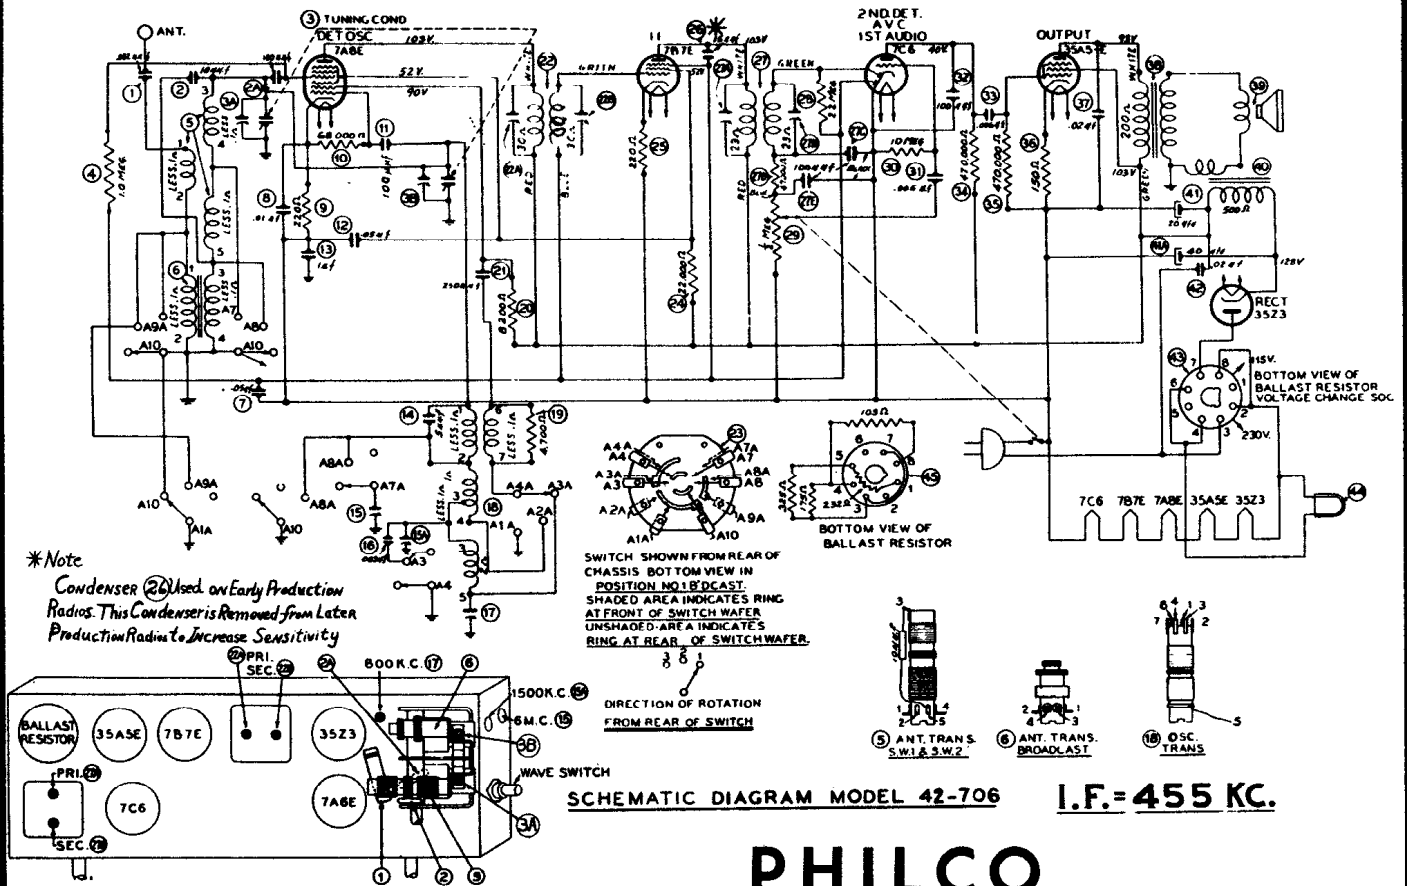

# PHILCO


## Philco Radio

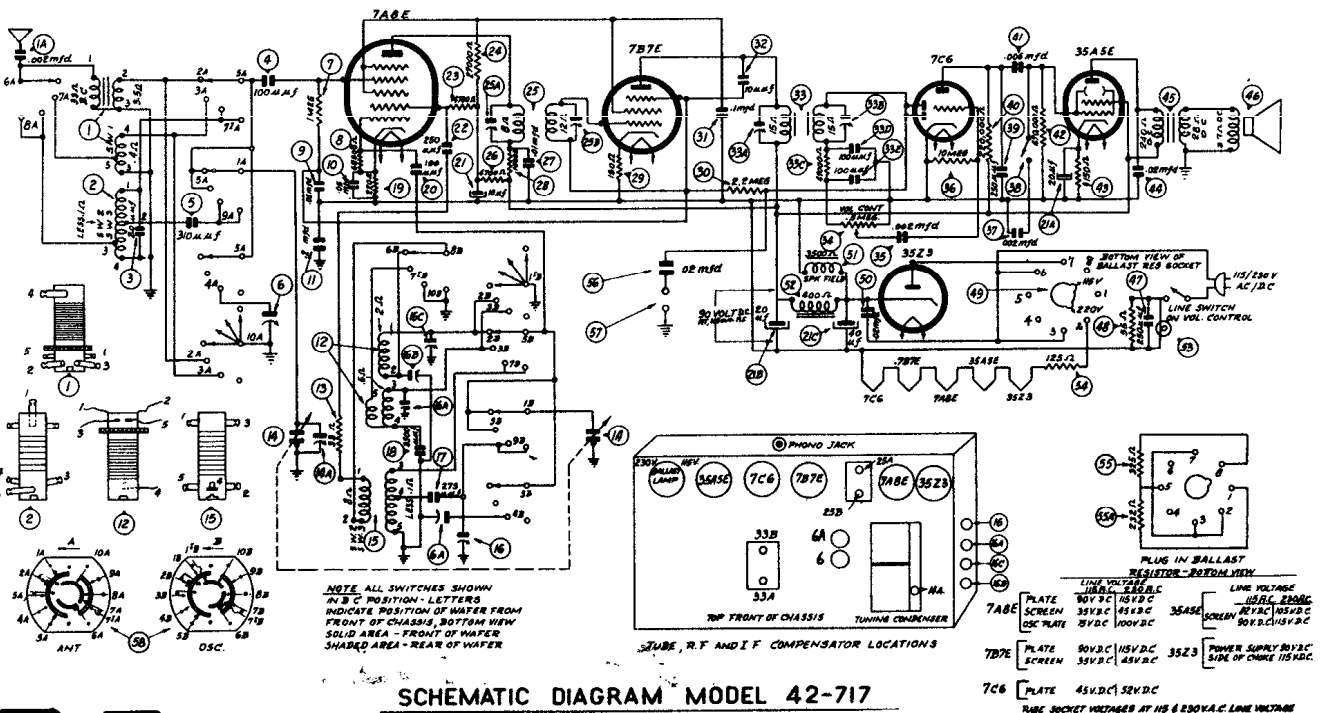

# 90

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

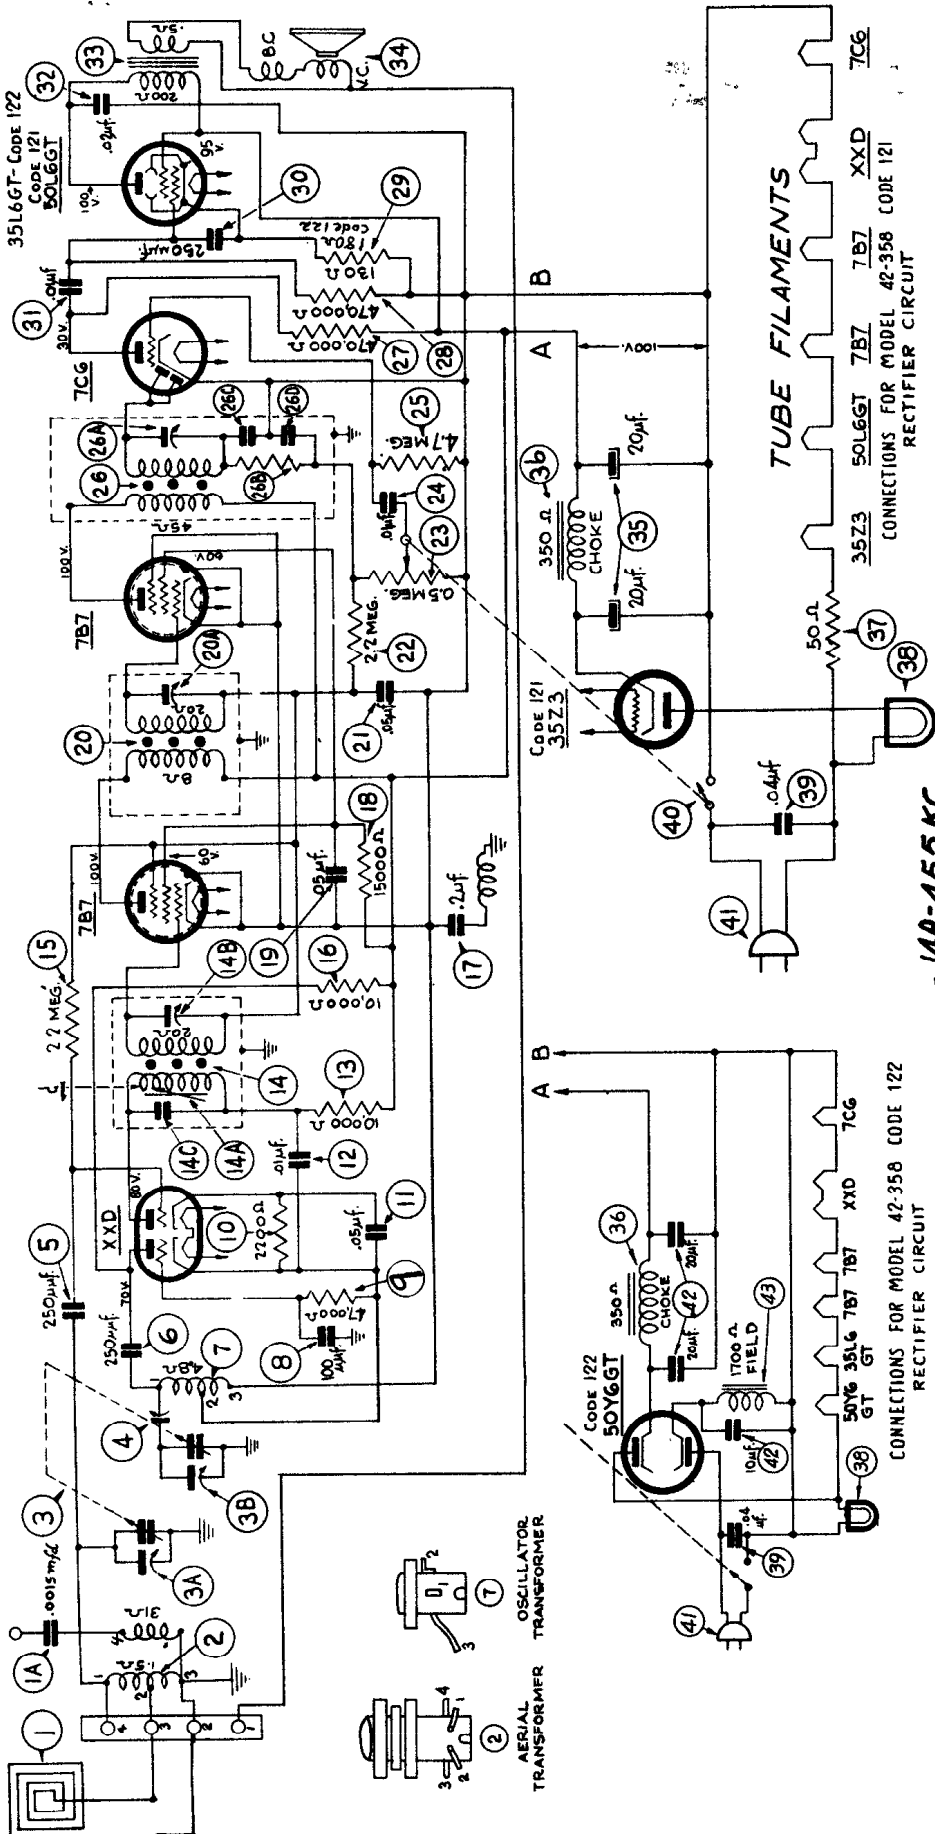

DIAGRAM—Model 42,358, Codes 121-122

# PHILCO



Intermediate Frequency: 455 KC.  
 Tuning Bands: 540 to 1620 KC.  
 Power Supply: 115 volts, A. C.-D. C.  
 Power Consumption: 35 watts (Code 121); 50 watts (Code 122)  
 Audio Output: 1 watt.

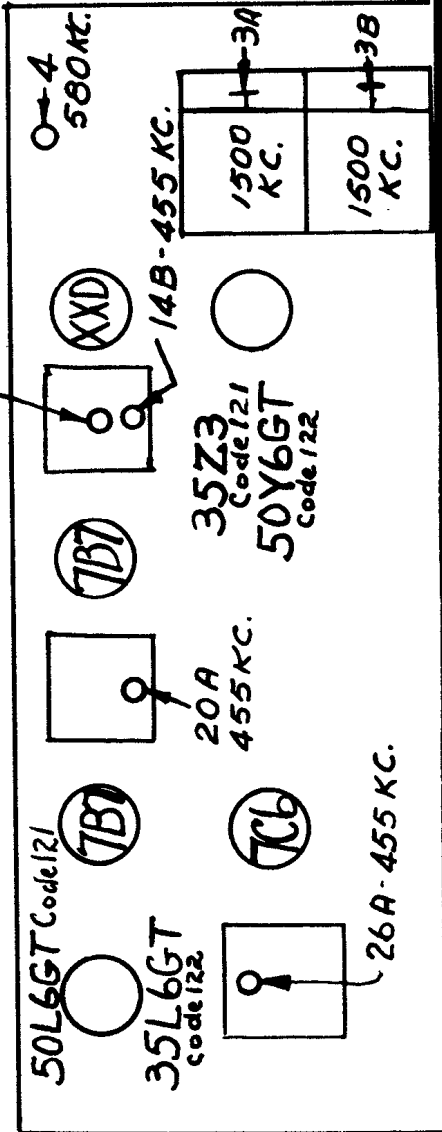

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

# PHILCO

# Models 42-716

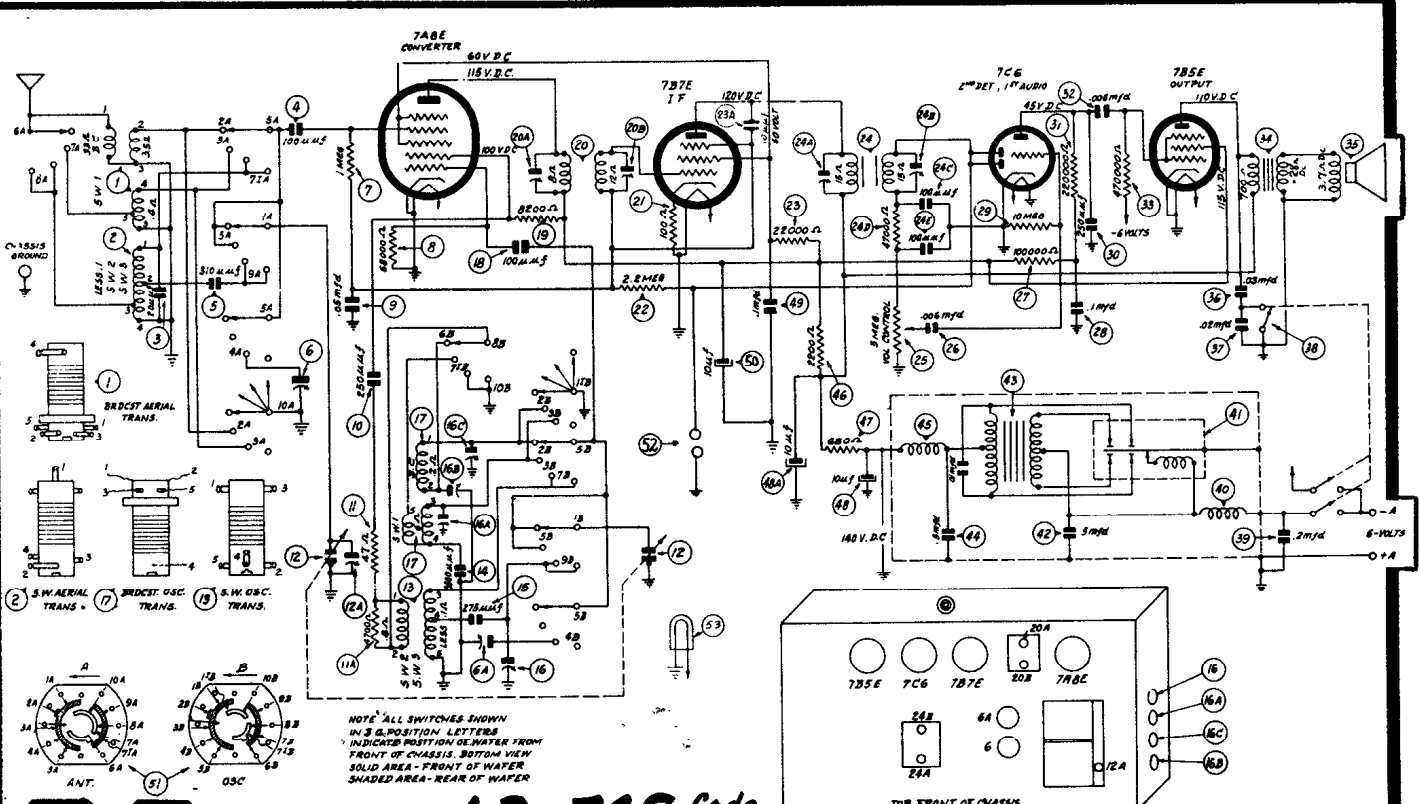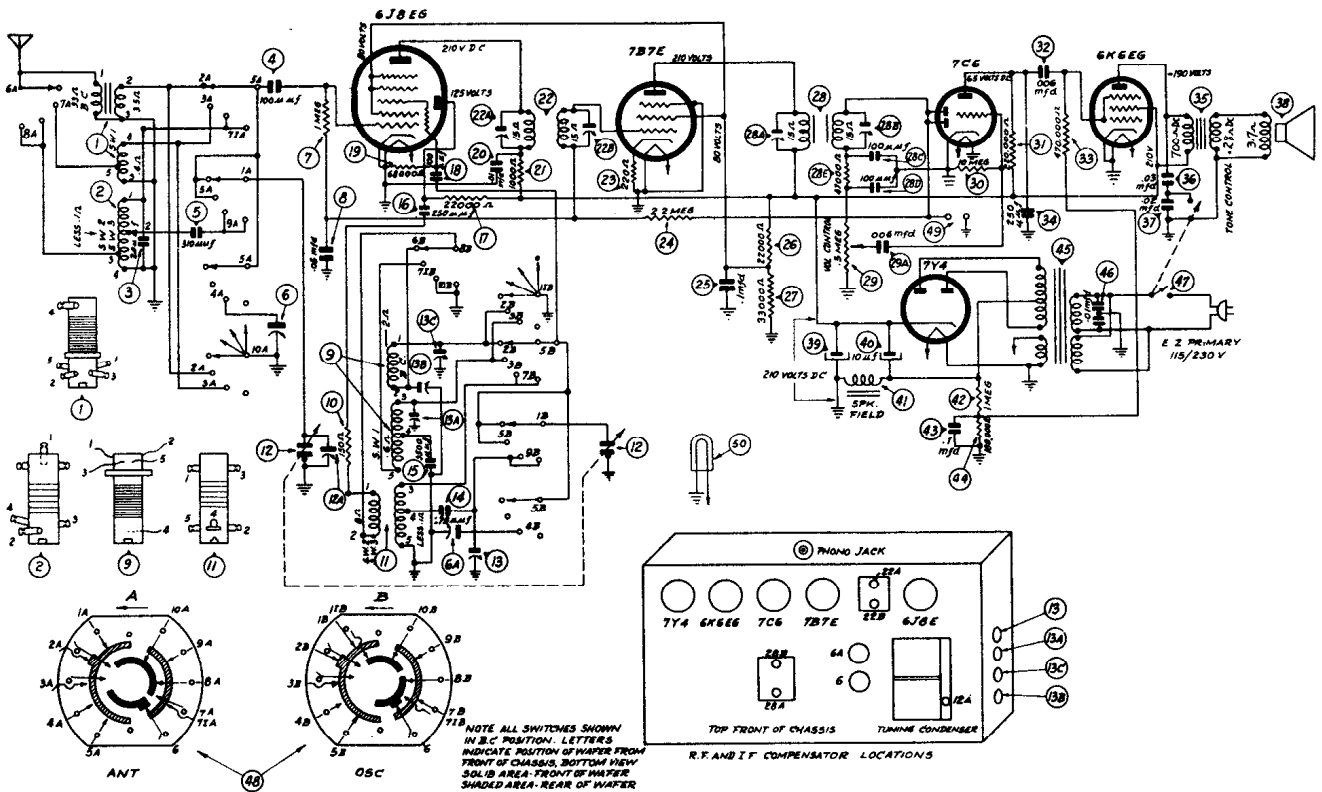


# 92

# 42-718 Code 121

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


**FREQUENCY MODULATION Model 42-350, Code 121**

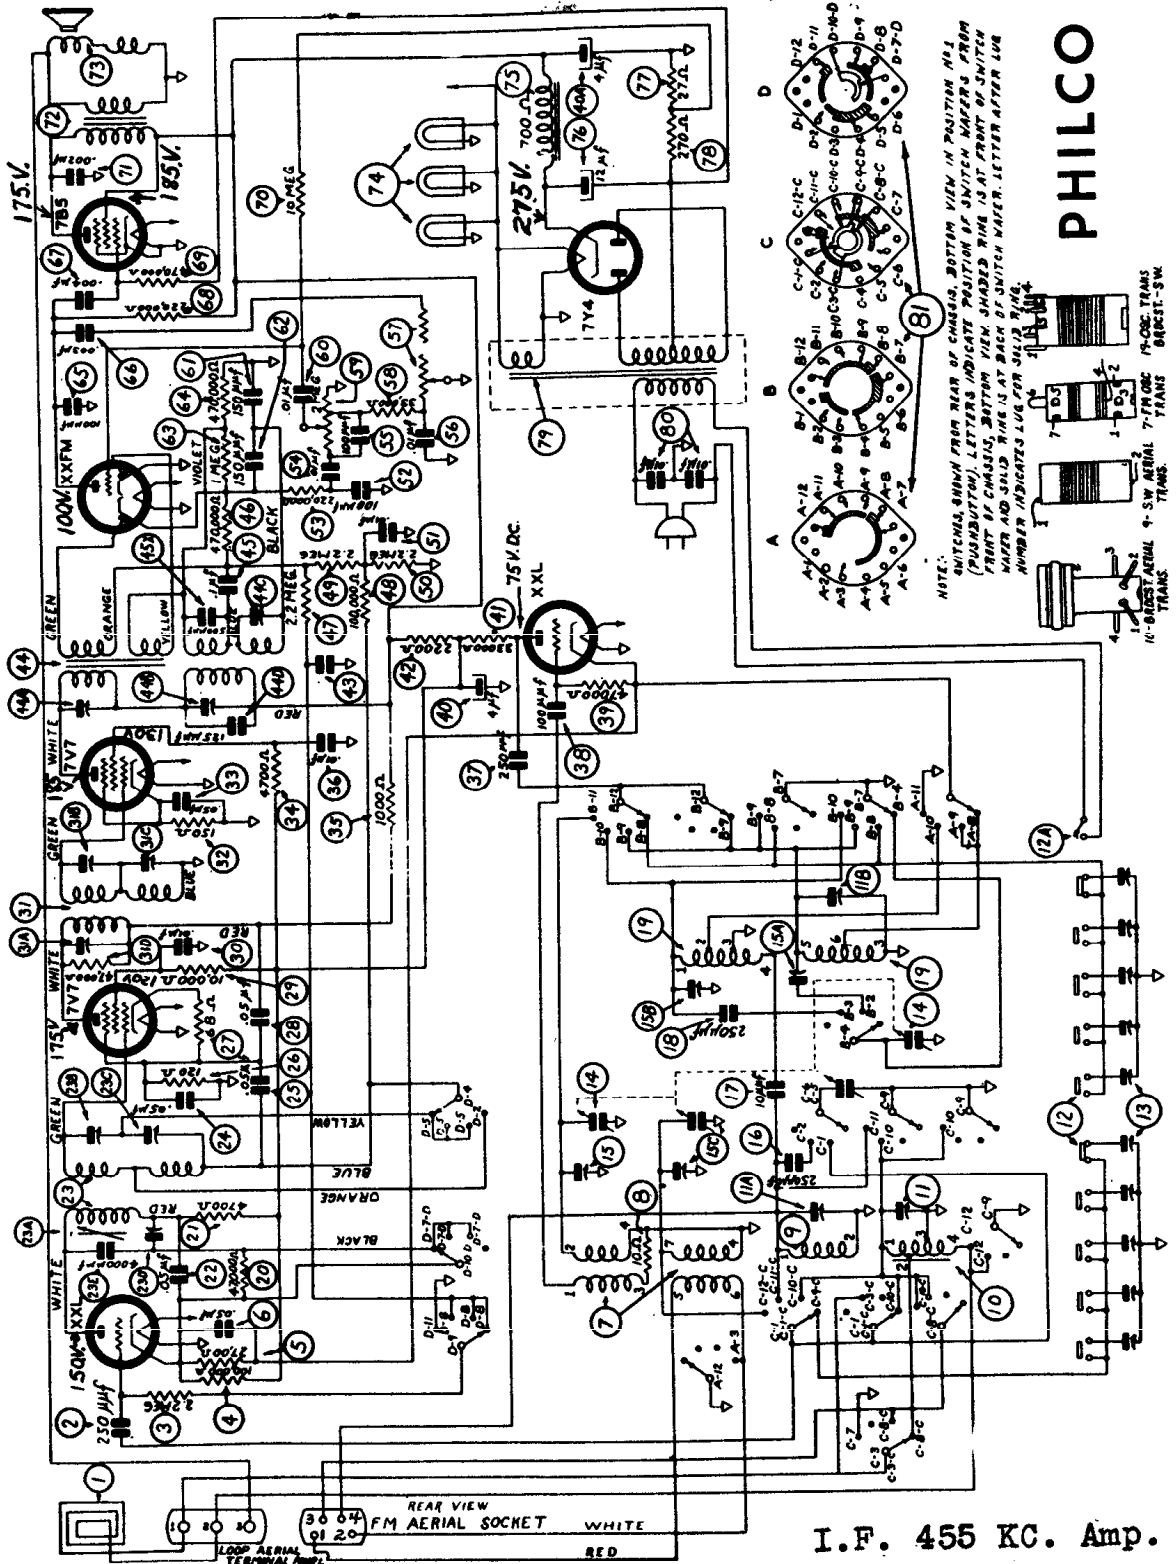

I.F. 455 KC. Amp.  
I.F. 4.3 M.C. F.M.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## PHILCO Model 42-724, Code 121

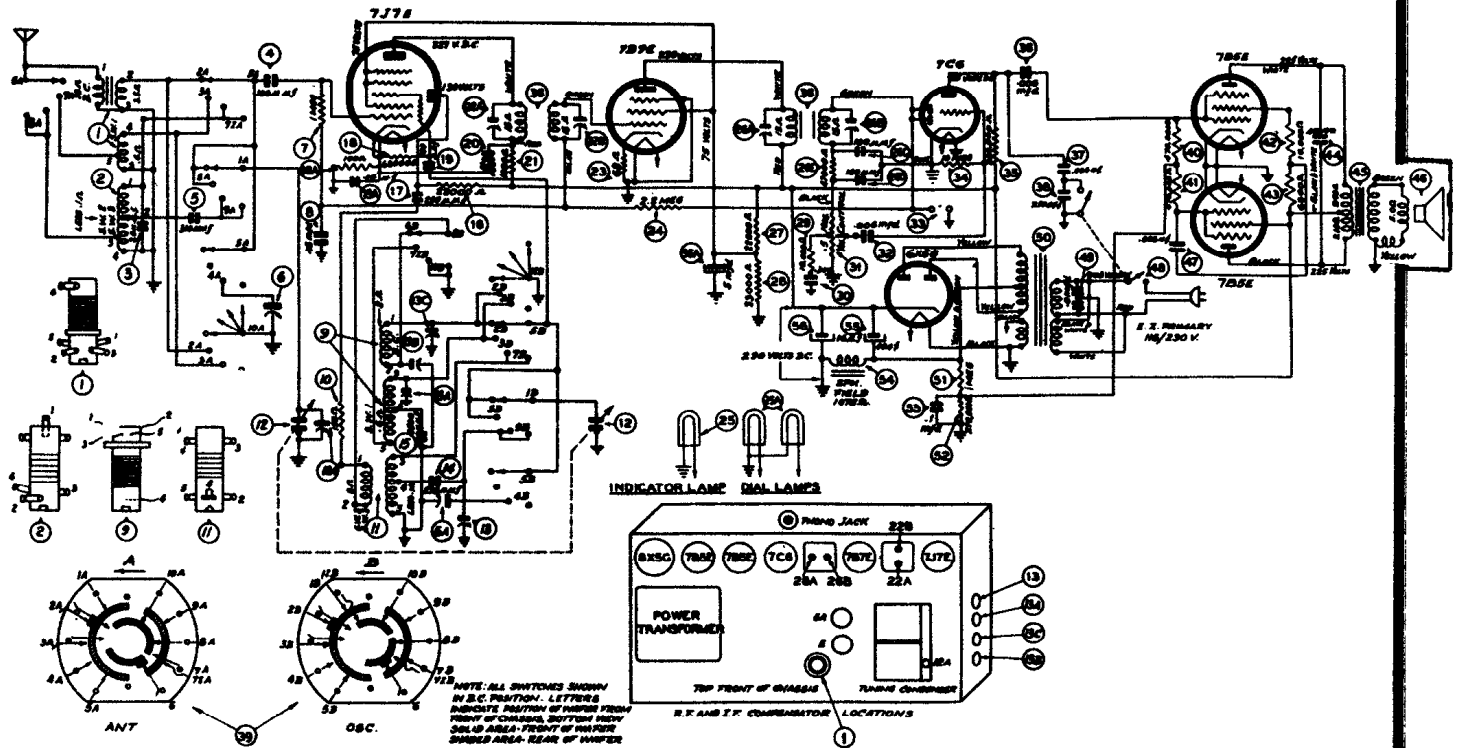


| Operations In Order | SIGNAL GENERATOR            |                     |              | RECEIVER     |                             |                     | SPECIAL               |
|---------------------|-----------------------------|---------------------|--------------|--------------|-----------------------------|---------------------|-----------------------|
|                     | Output Connections to Radio | Dummy Aerial Note A | Dial Setting | Dial Setting | Control Settings            | Adjust Compensators |                       |
| 1                   | Lug of aerial tuning cond.  | .1 mfd.             | 455 K.C.     | 580 K.C.     | Band Switch "Brdcst" Volmax | 26A, 26B, 22A, 22B  |                       |
| 2                   | Aerial                      | 400 ohms            | 21 M.C.      | 21 M.C.      | Band Switch S. W. 3         | 13, 12A             | Note B<br>Note C      |
| 3                   | Aerial                      | 400 ohms            | 12 M.C.      | 12 M.C.      | Band Switch S. W. 2         | 6A, 6               | Note C                |
| 4                   | Aerial                      | 400 ohms            | 6 M.C.       | 6 M.C.       | Band Switch S. W. 1         | 13A,                |                       |
| 5                   | Aerial                      | 200 mmfd.           | 1500 K.C.    | 1500 K.C.    | Band Switch "Brdcst"        | 13C                 |                       |
| 6                   | Aerial                      | 200 mmfd.           | 580 K.C.     | 580 K.C.     | Band Switch "Brdcst"        | 13B                 | Roll tuning condenser |
| 7                   | Aerial                      | 200 mmf.            | 1500 K.C.    | 1500 K.C.    | Band Switch "Brdcst"        | 13C                 |                       |

**NOTE A**—The "Dummy Aerial" consists of a condenser or resistor connected in series with the signal generator output lead (highside). Use the capacity or resistance as specified in each step of the above procedure.

**NOTE B**—Dial Calibration: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum capacity) set

the dial pointer on the first mark on the left edge (low frequency end) of the broadcast scale.

**NOTE C**—When adjusting the osc. compensators, be sure to tune in the fundamental signal (21 M.C.) (12 M.C.) instead of the image signal. If the compensator is correctly adjusted the image signal will be found by turning the signal generator dial 910 K.C. above the fundamental signal which will be 21.910 M.C. or 12.910 M.C.

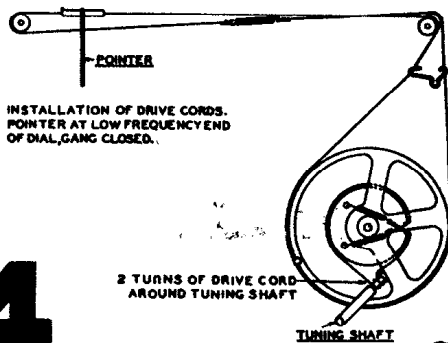

**SIGNAL GENERATOR:** Such as Philco Model 070, A.C. operated or Model 177 battery operated. These signal generators cover all frequencies required in aligning these models.

**INDICATING DEVICE:** To obtain maximum signal strength and accurate adjustments of the padders, a vacuum tube voltmeter similar to Philco Models 027 and 028 are recommended. These instruments also contain an audio output meter which may be used as an aligning indicator. The method of connecting either of these instruments is listed below.

**ALIGNING TOOLS:** Fibre handle screw driver, Philco Part No. 45-2610. Service Alanina Scale. Part No. 45-2909.

**NOTE:** The dial scale in these models is mounted on the cabinet. For convenience, when aligning the chassis outside of the cabinet, a special service aligning scale, Part No. 45-2909, is available. This service dial scale is attached to the dial background plate. If the radio is aligned in the cabinet, the cabinet dial scale is used.


# 94

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

# PHILCO

## MODEL 42-730, CODE 121

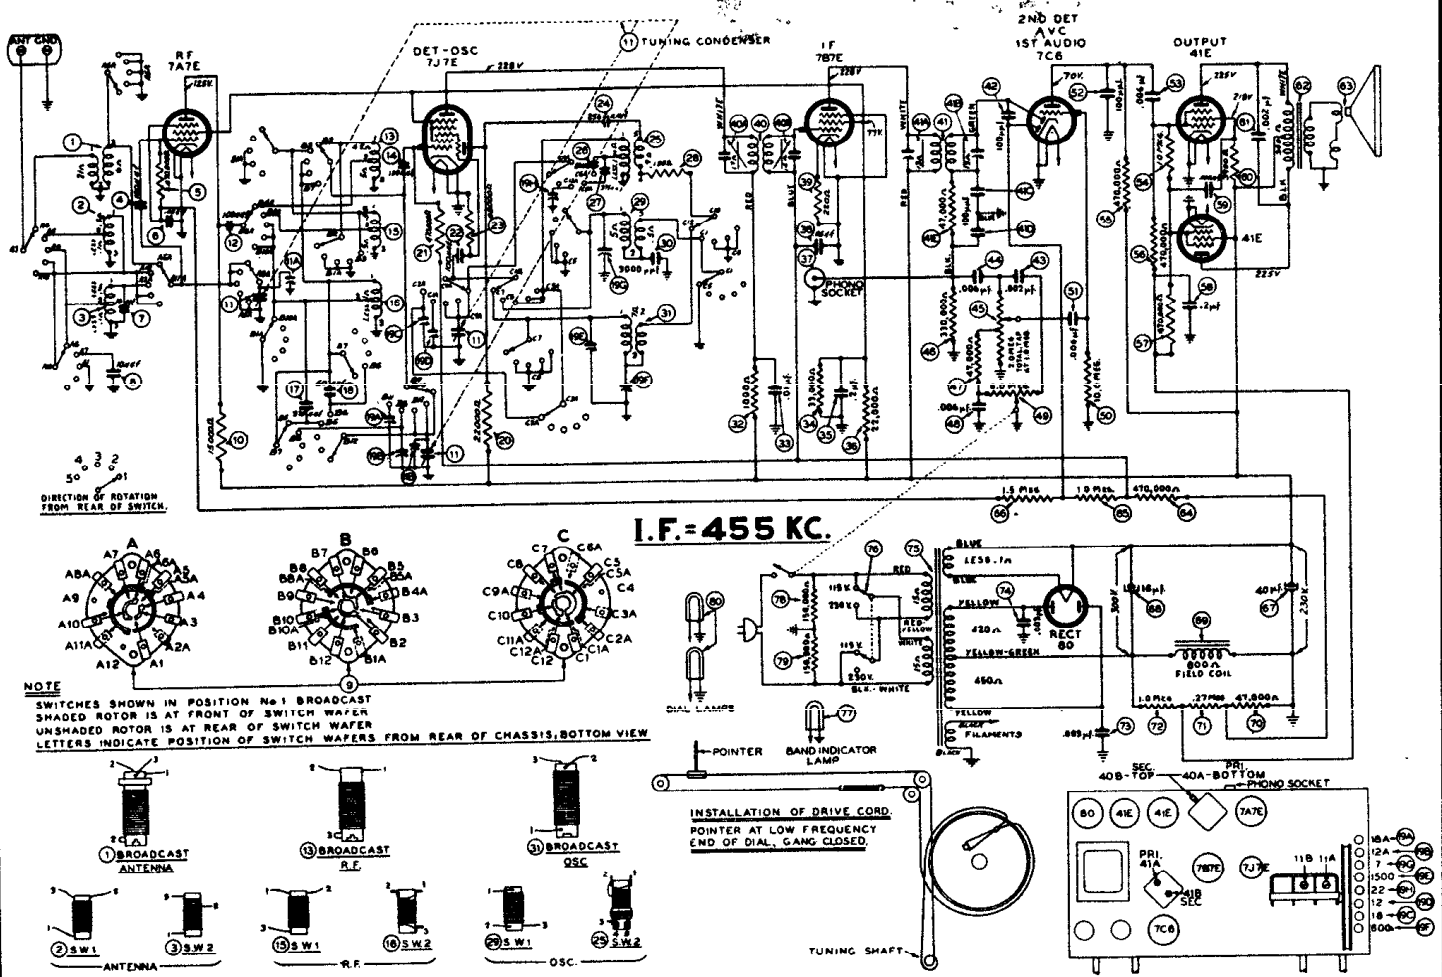

**I.F. = 455 KC.**

**NOTE**  
SWITCHES SHOWN IN POSITION No 1 BROADCAST  
SHADED ROTOR IS AT FRONT OF SWITCH WAFER  
UNSHADED ROTOR IS AT REAR OF SWITCH WAFER  
LETTERS INDICATE POSITION OF SWITCH WAFERS FROM REAR OF CHASSIS, BOTTOM VIEW

**INSTALLATION OF DRIVE CORD**  
POINTER AT LOW FREQUENCY  
END OF DIAL, GANG CLOSED.

| SIGNAL GENERATOR            |                     |              | RECEIVER     |                             |                     | SPECIAL INSTRUCTIONS        |
|-----------------------------|---------------------|--------------|--------------|-----------------------------|---------------------|-----------------------------|
| Output Connections to Radio | Dummy Aerial Note A | Dial Setting | Dial Setting | Control Settings            | Adjust Compensators |                             |
| Lug of aerial tuning cond.  | .1 mfd.             | 455 KC.      | 580 KC.      | Band Switch "Brdcat" Voimax | 41A, 41B, 40A, 40B  |                             |
| Aerial                      | 400 ohms            | 22 MC.       | 22 MC.       | Band Switch SW 2            | 19H, 11R, 11A       | Note B<br>Note C            |
| Aerial                      | 400 ohms            | 7 MC.        | 7 MC.        | Band Switch SW 1            | 19G                 | Roll tuning cond.<br>Note C |
| Aerial                      | 200 mmfd.           | 1500 KC.     | 1500 KC.     | Band Switch "Brdcat"        | 19E                 | Roll tuning cond.           |
| Aerial                      | 200 mmfd.           | 600 KC.      | 600 KC.      | Band Switch "Brdcat"        | 19F                 | Roll tuning cond.           |
| Aerial                      | 200 mmf.            | 1500 KC.     | 1500 KC.     | Band Switch "Brdcat"        | 19E                 | Roll tuning cond.           |
| Aerial                      | 400 ohms            | 18 MC.       | 18 MC.       | Band Switch 16 & 19 M.      | 19C, 19A            | Note C                      |
| Aerial                      | 400 ohms            | 12 MC.       | 12 MC.       | Band Switch 25 to 31 M.     | 19D, 19B            | Note C                      |

**NOTE A**—The "Dummy Aerial" consists of a condenser or resistor connected in series with the signal generator output lead (highside). Use the capacity or resistance as specified in each step of the above procedure.

**NOTE B**—Dial Calibration: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum capacity) set the dial pointer on the first mark on the left edge (low frequency end) of the broadcast scale.


**NOTE C**—When adjusting the oscillator compensators, be sure to tune in the fundamental signal instead of the image signal. If the compensator is correctly adjusted the image signal will be found by turning the signal generator dial 910 KC. above the fundamental signal.

- Tuning Band Frequencies:**
- Broadcast ..... 540 to 1720 kc.
  - SW 1 ..... 2.3 to 7.5 mc.
  - SW 2 ..... 7.0 to 22 mc.
  - Spread Band 1 ..... 9.4 to 12 mc.
  - Spread Band 2 ..... 15.1 to 18 mc.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS



**MODEL**  
**42-761** Code 121

**PHILCO**

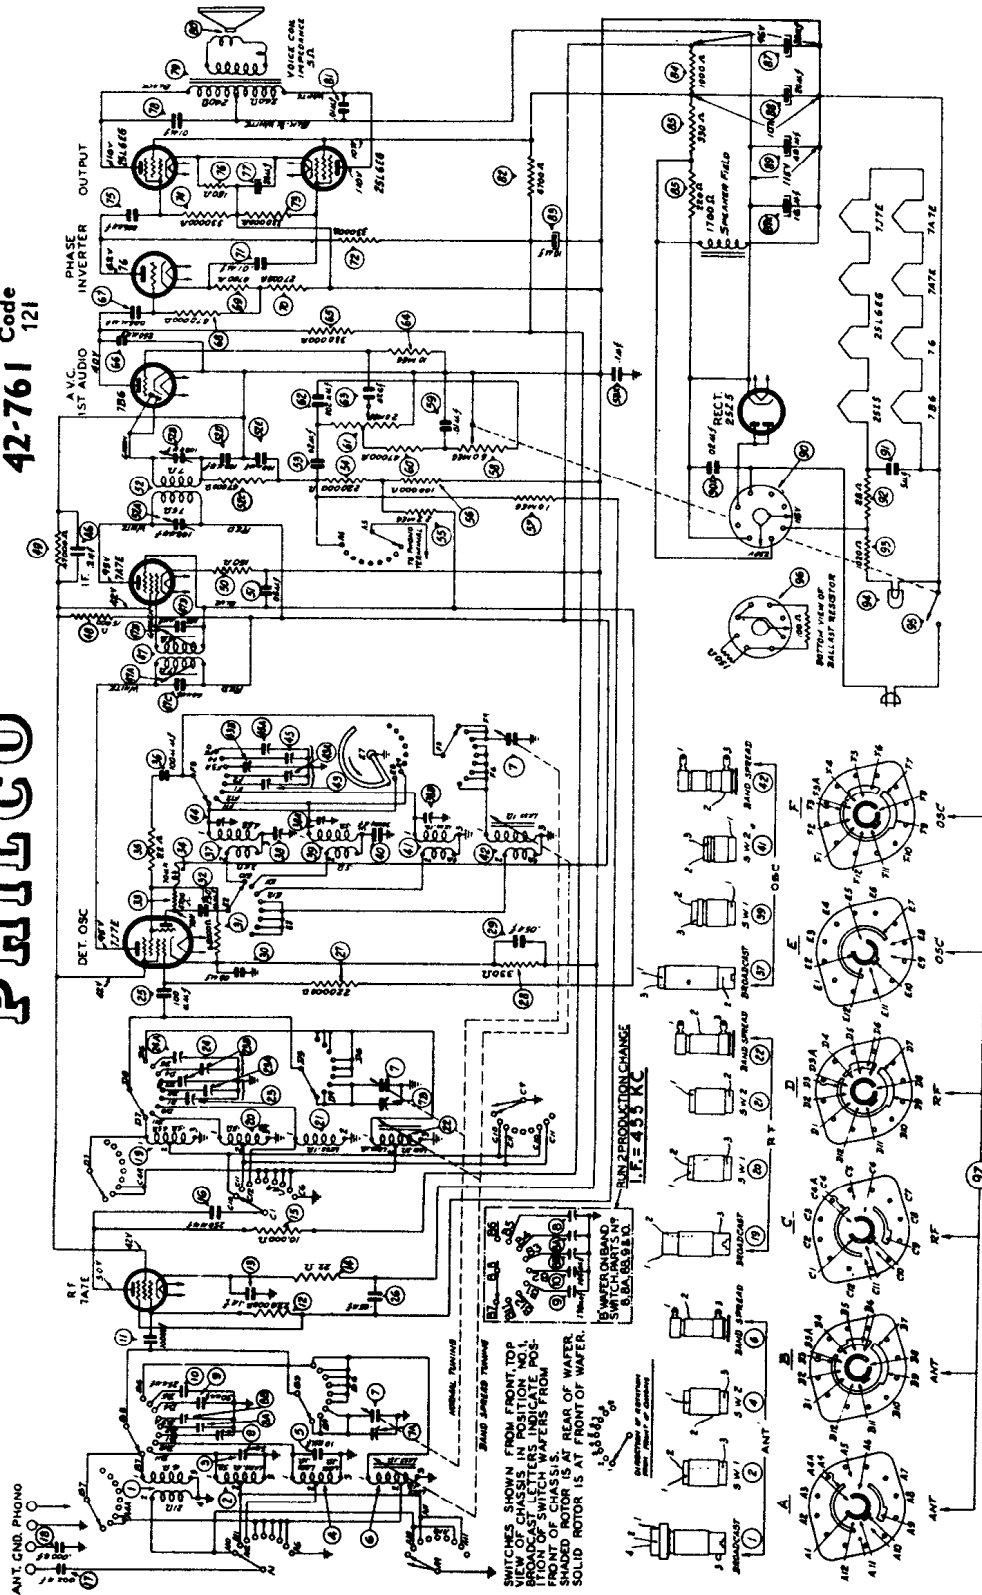


SHARED SECTION IN REAR OF WAFER  
The voltages indicated at the tube elements above were measured with a 1000 ohms per volt voltmeter. Philco Model 057, line voltage 117 volts, A. C. band switch (broadcast). No station being received.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

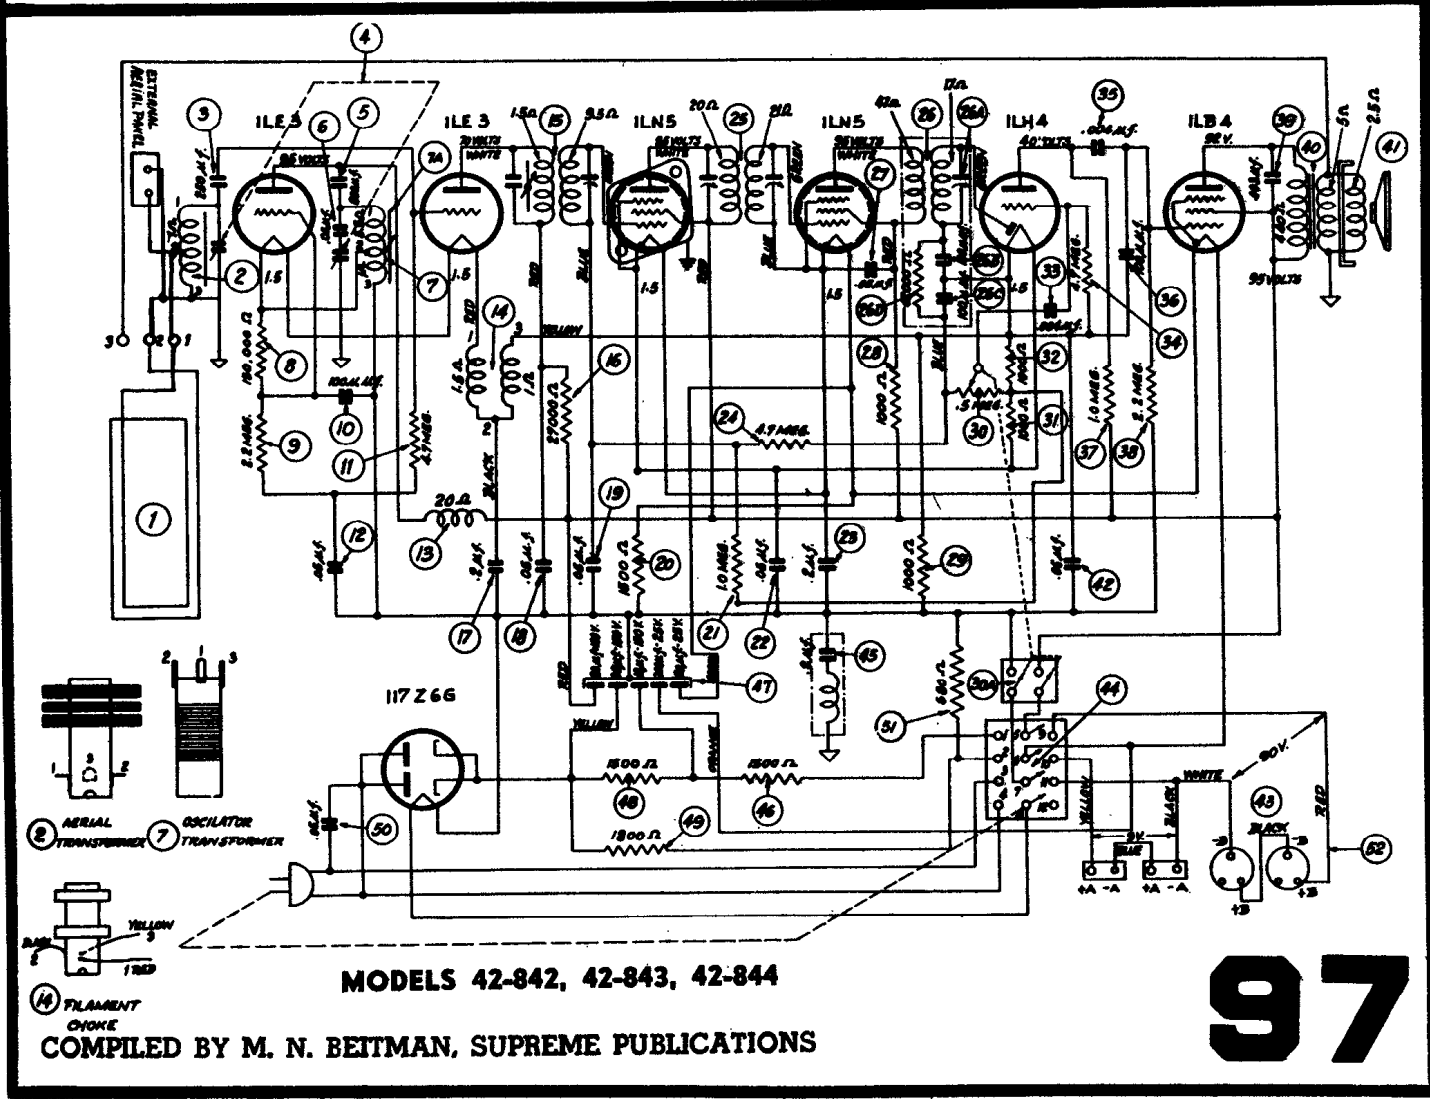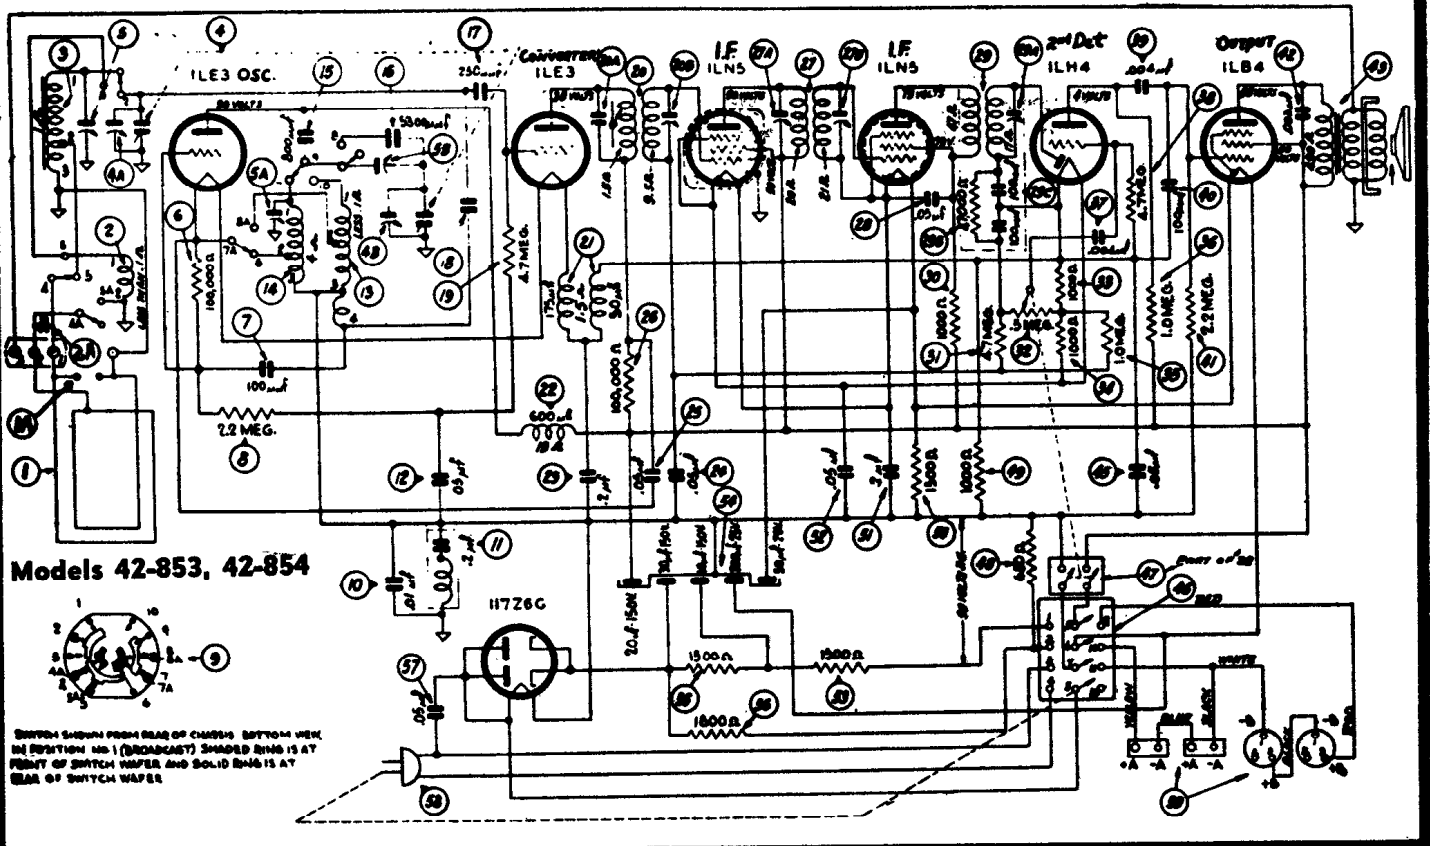




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

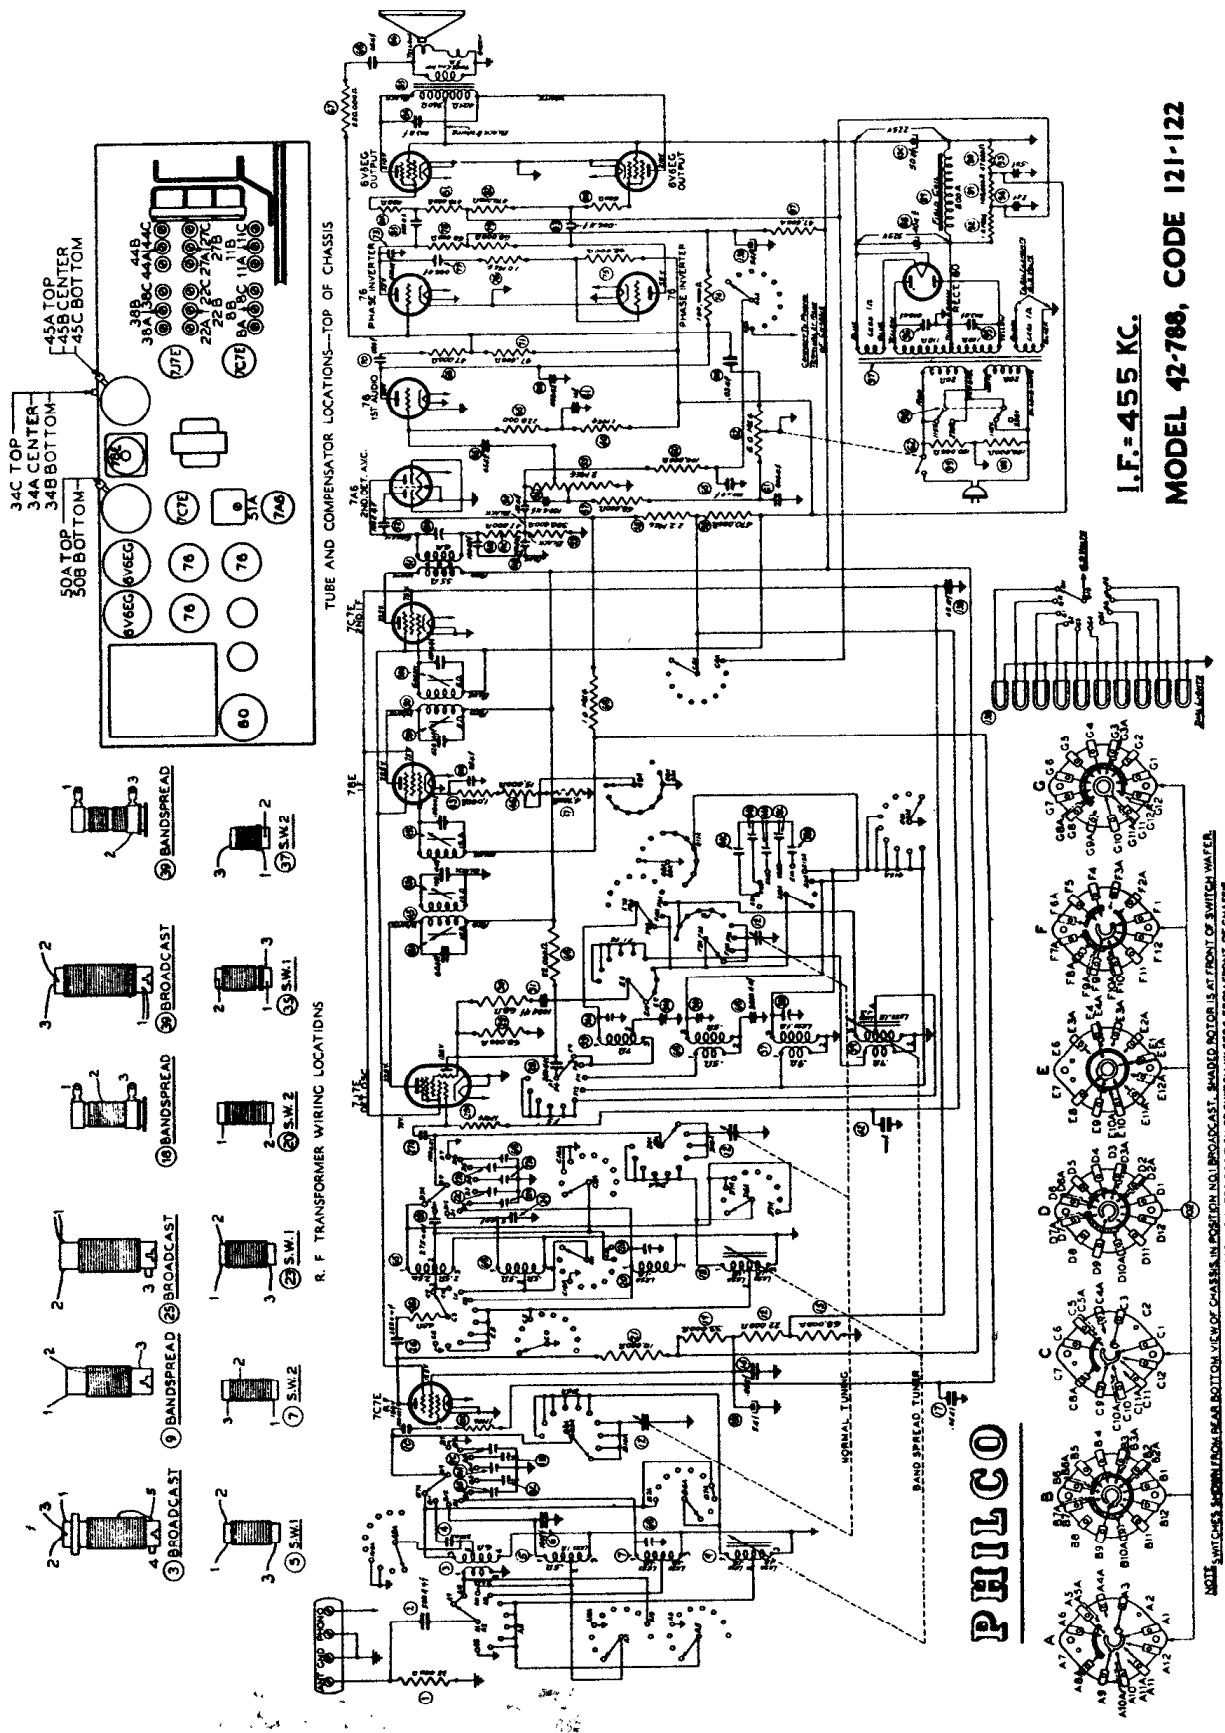


**I.F.: 455 KC.**  
**MODEL 42-788, CODE 121-122**

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

EXTERNAL AERIAL / NOTE: GROUND TO CHASSIS FOR LOOP OPERATION  
OUTPUT TEST TERMINAL

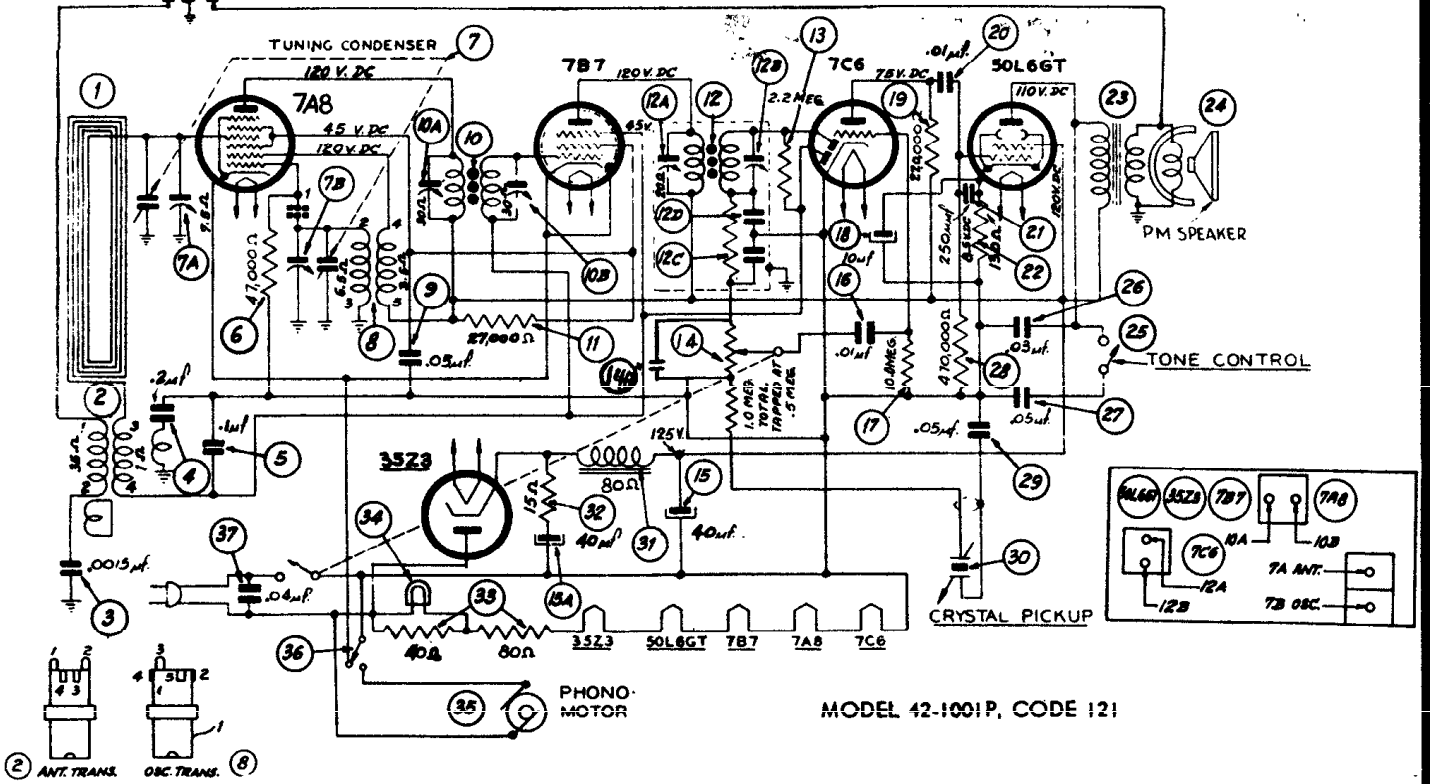

NOTE: GROUND TO CHASSIS FOR LOOP OPERATION

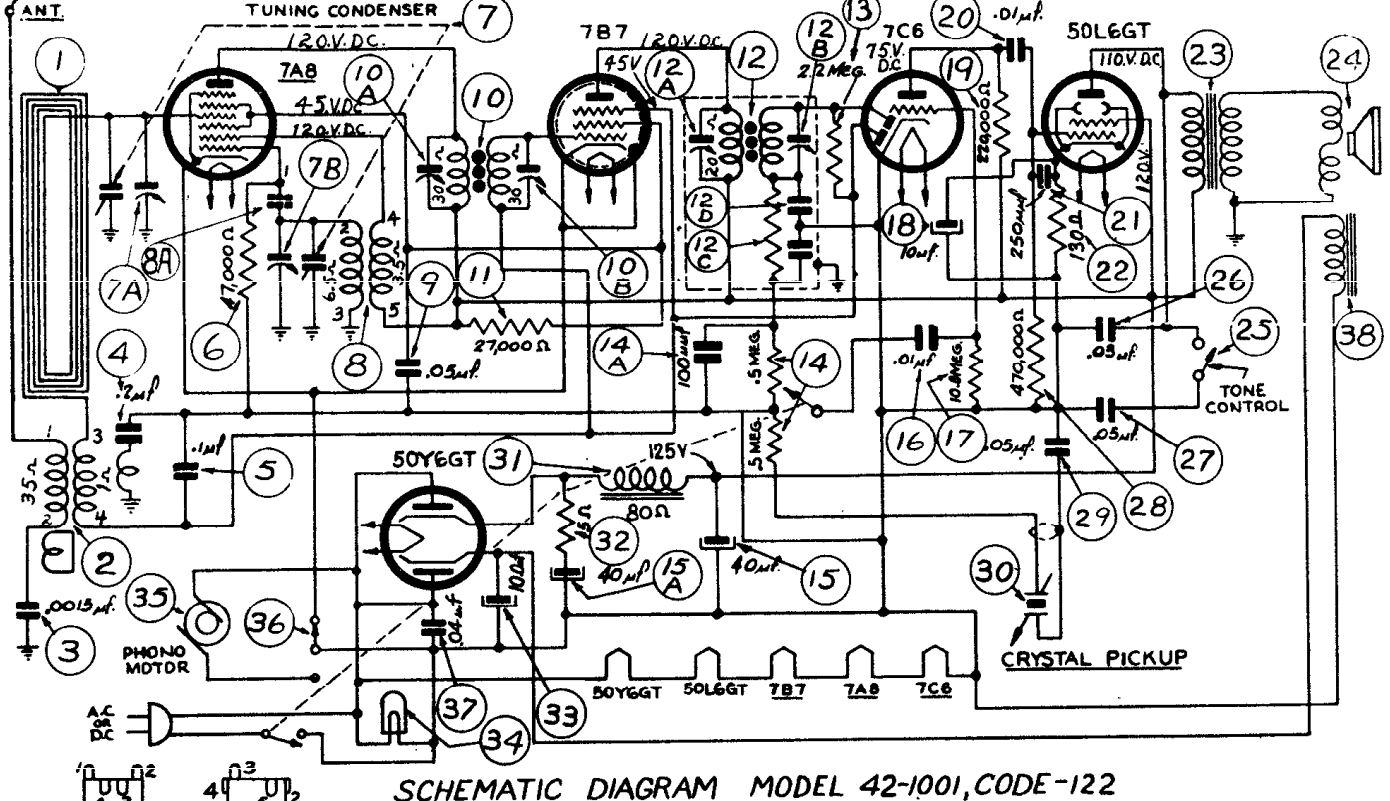


(2) ANT. TRANS. (8) OSC. TRANS.

COMPILED BY M. N. BETTMAN, SUPREME PUBLICATIONS

# PHILCO


# 99

# Radio-Phonograph Model 42-1002, Codes 121-122; PHILCO

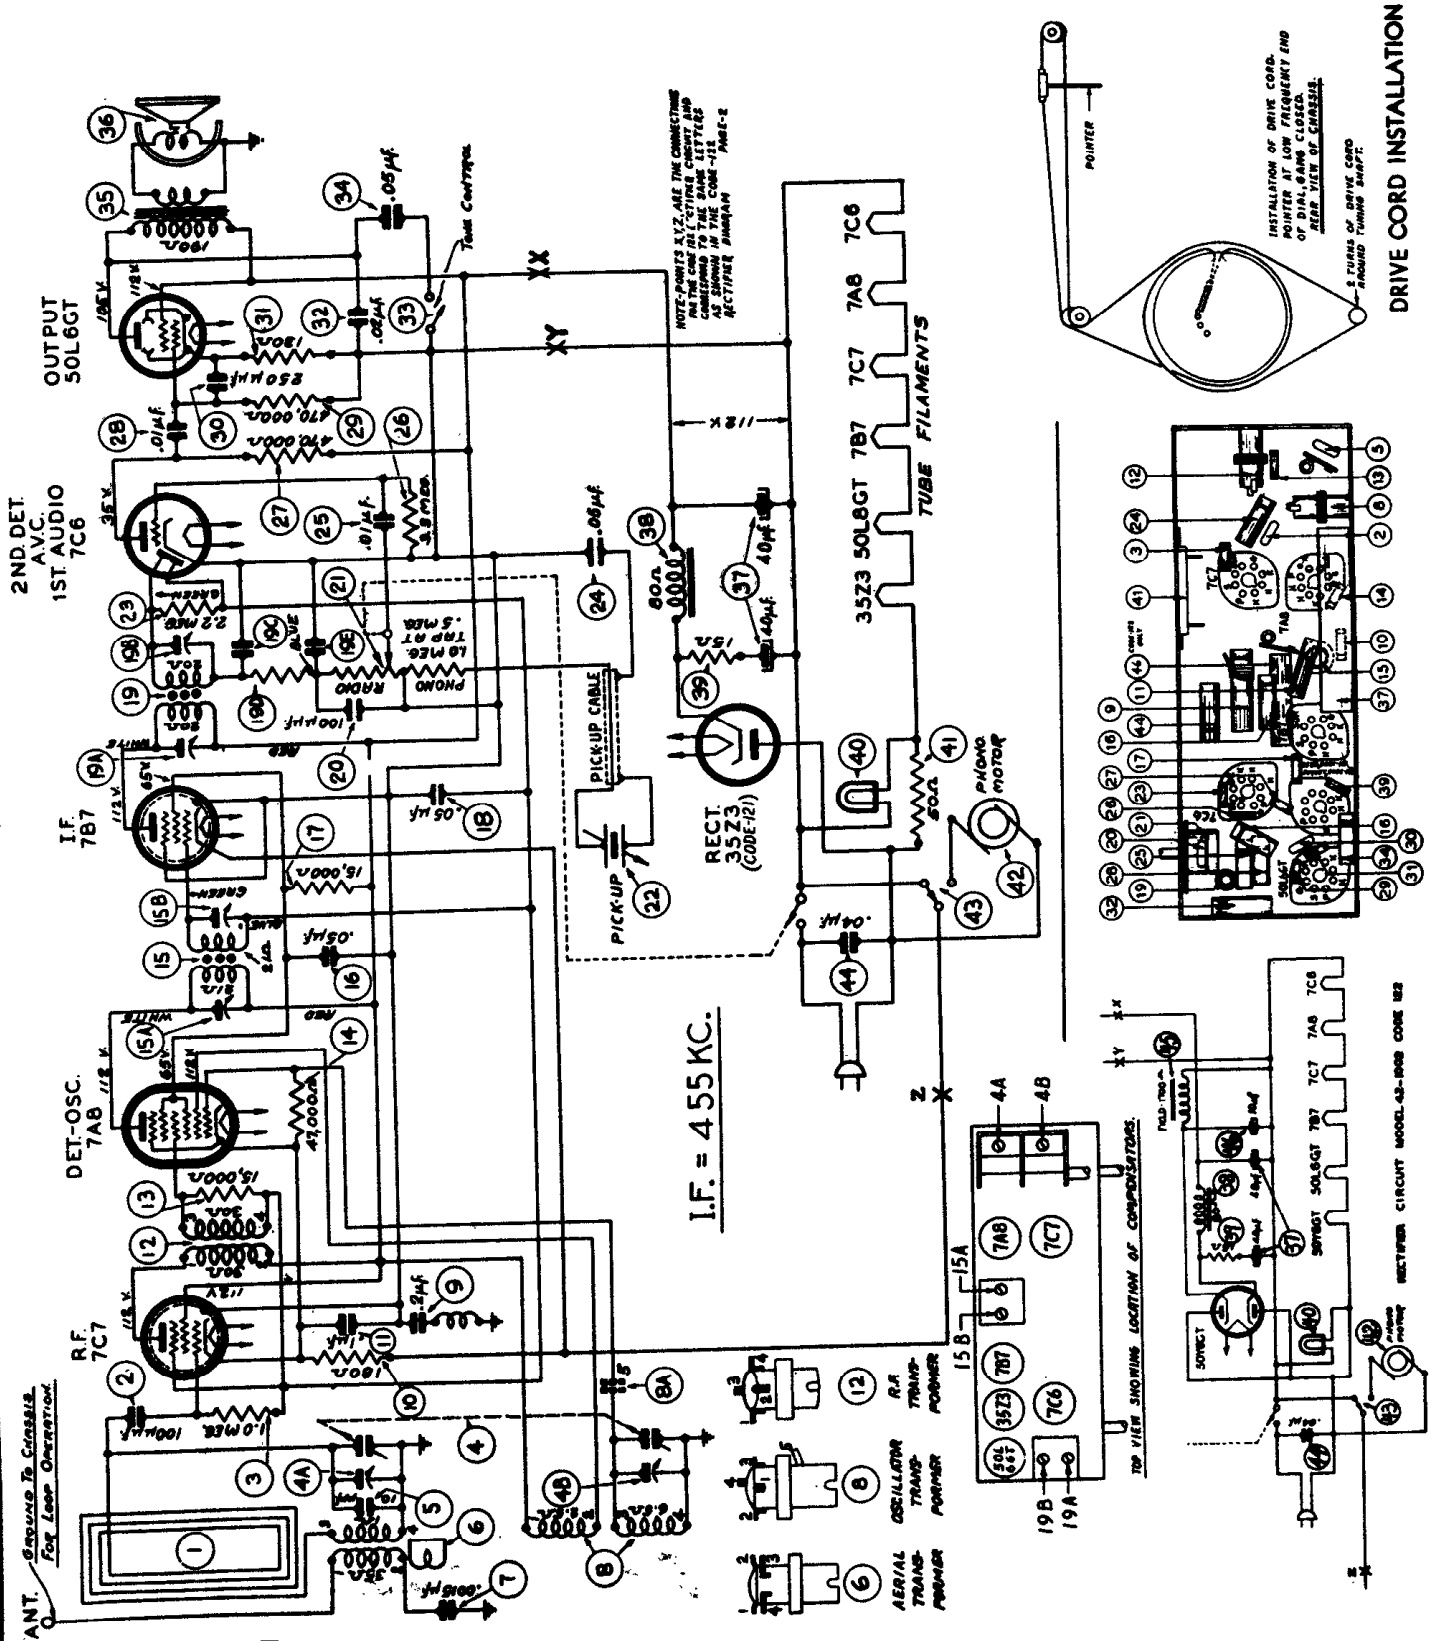



**PHILCO**


# Radio-Phonograph Model 42-1004, Code 121

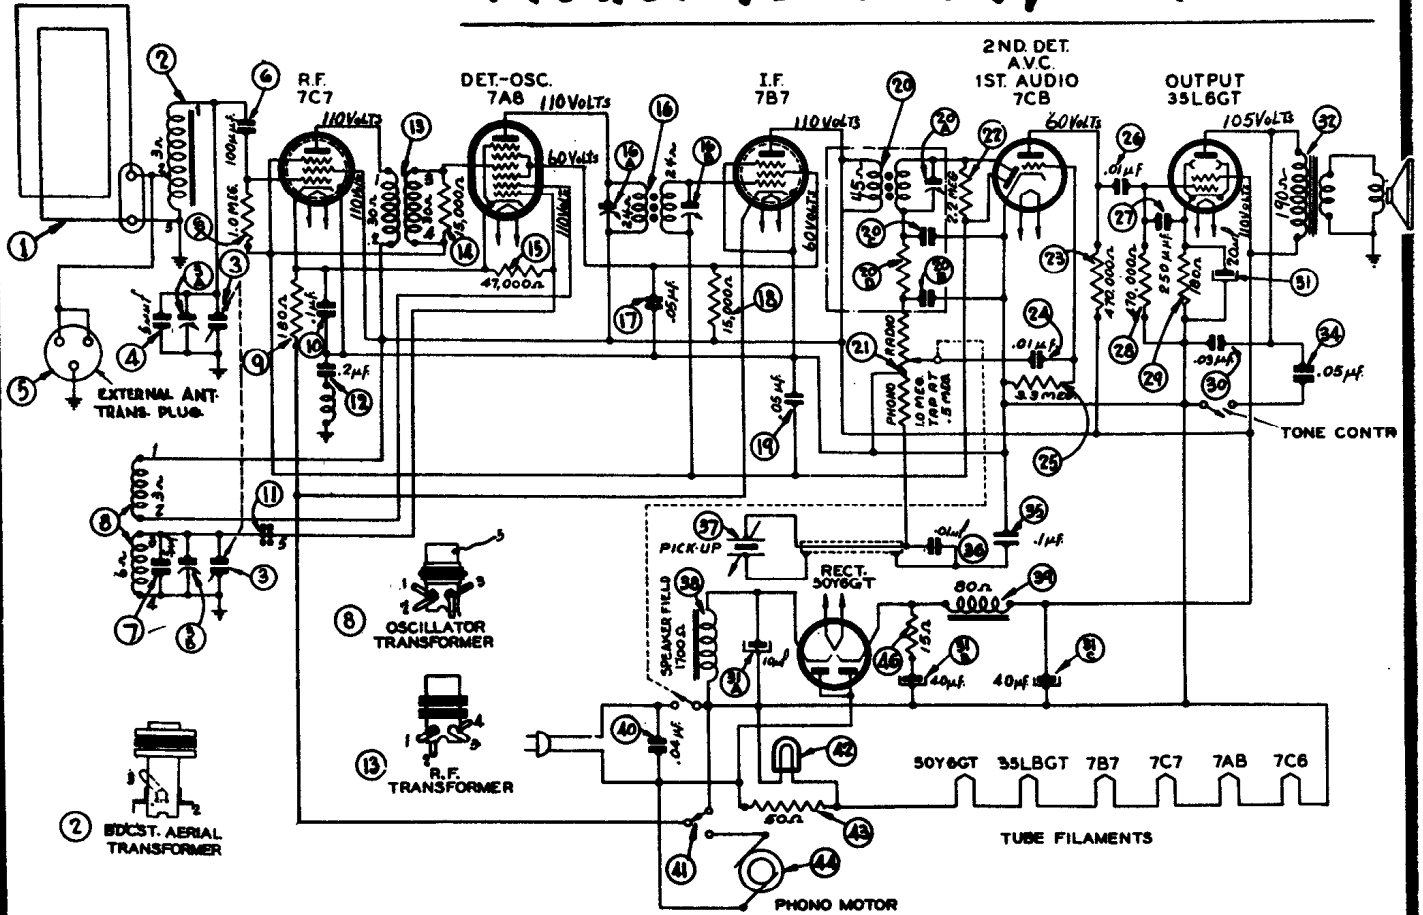

| Operations in Order | SIGNAL GENERATOR               |              | RECEIVER                     |                 |                              | SPECIAL INSTRUCTIONS |
|---------------------|--------------------------------|--------------|------------------------------|-----------------|------------------------------|----------------------|
|                     | Output Connections to Receiver | Dial Setting | Dial Setting                 | Control Setting | Adjust Compensators in Order |                      |
| 1                   | Ant. Section of tuning         | 455 K.C.     | 540 K.C. Tuning Cond. Closed | Vol. Max.       | 20A, 16B, 16A                |                      |
| 2                   | Loop see above instructions    | 1600 K.C.    | 1600 K.C.                    | Vol. Max.       | 3B, 3A                       | Note A               |

**NOTE A:—DIAL CALIBRATION:** In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To do this, proceed as follows: Turn the tuning condenser to the maximum capacity position (plates fully meshed). With the condenser in this position, set the tuning pointer on the small dot below 540 K.C.

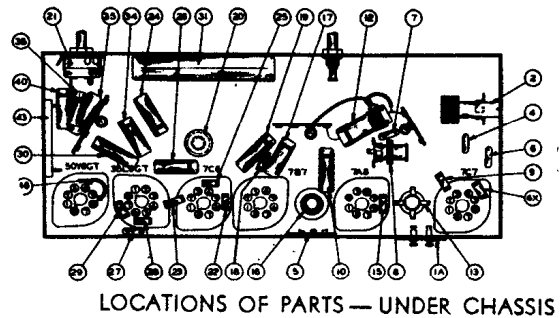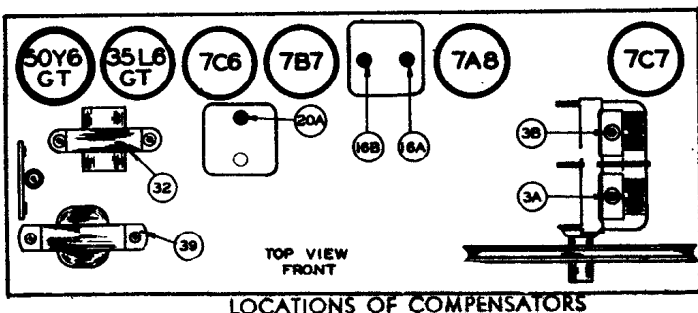

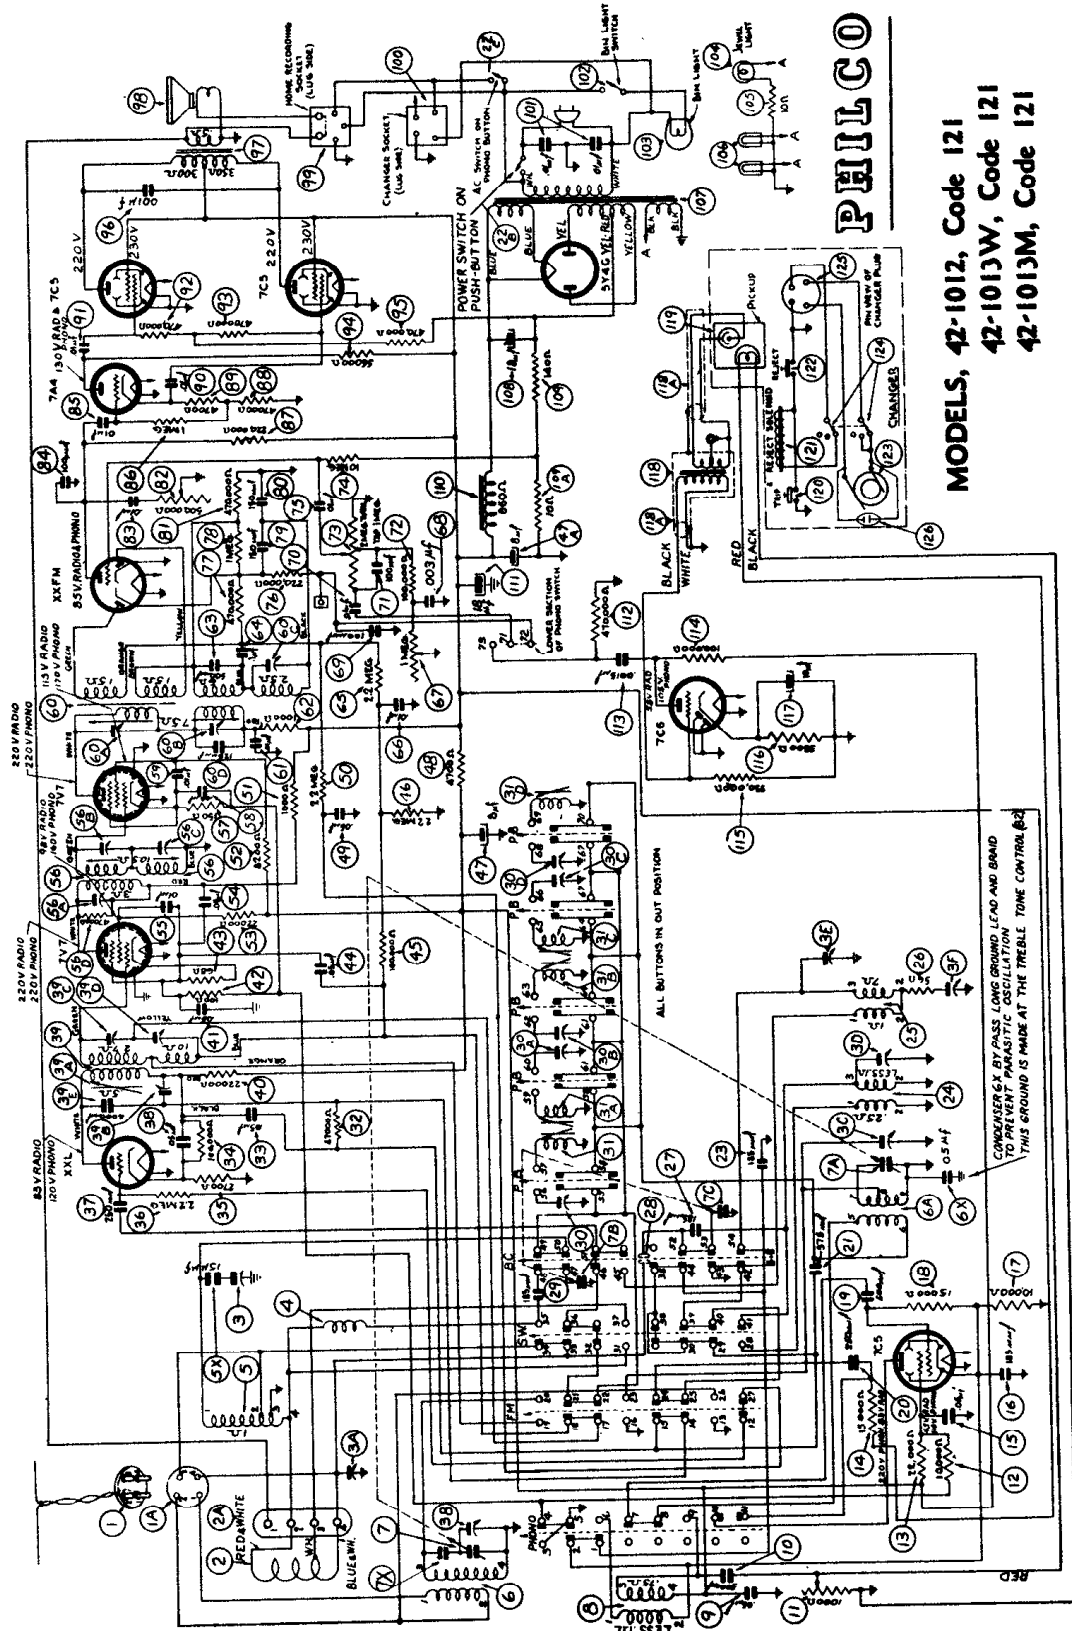


**PHILCO**

**MODELS, 42-1012, Code 121  
42-1013W, Code 121  
42-1013M, Code 121**

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## PHILCO





### Model 42-1016, Code 121

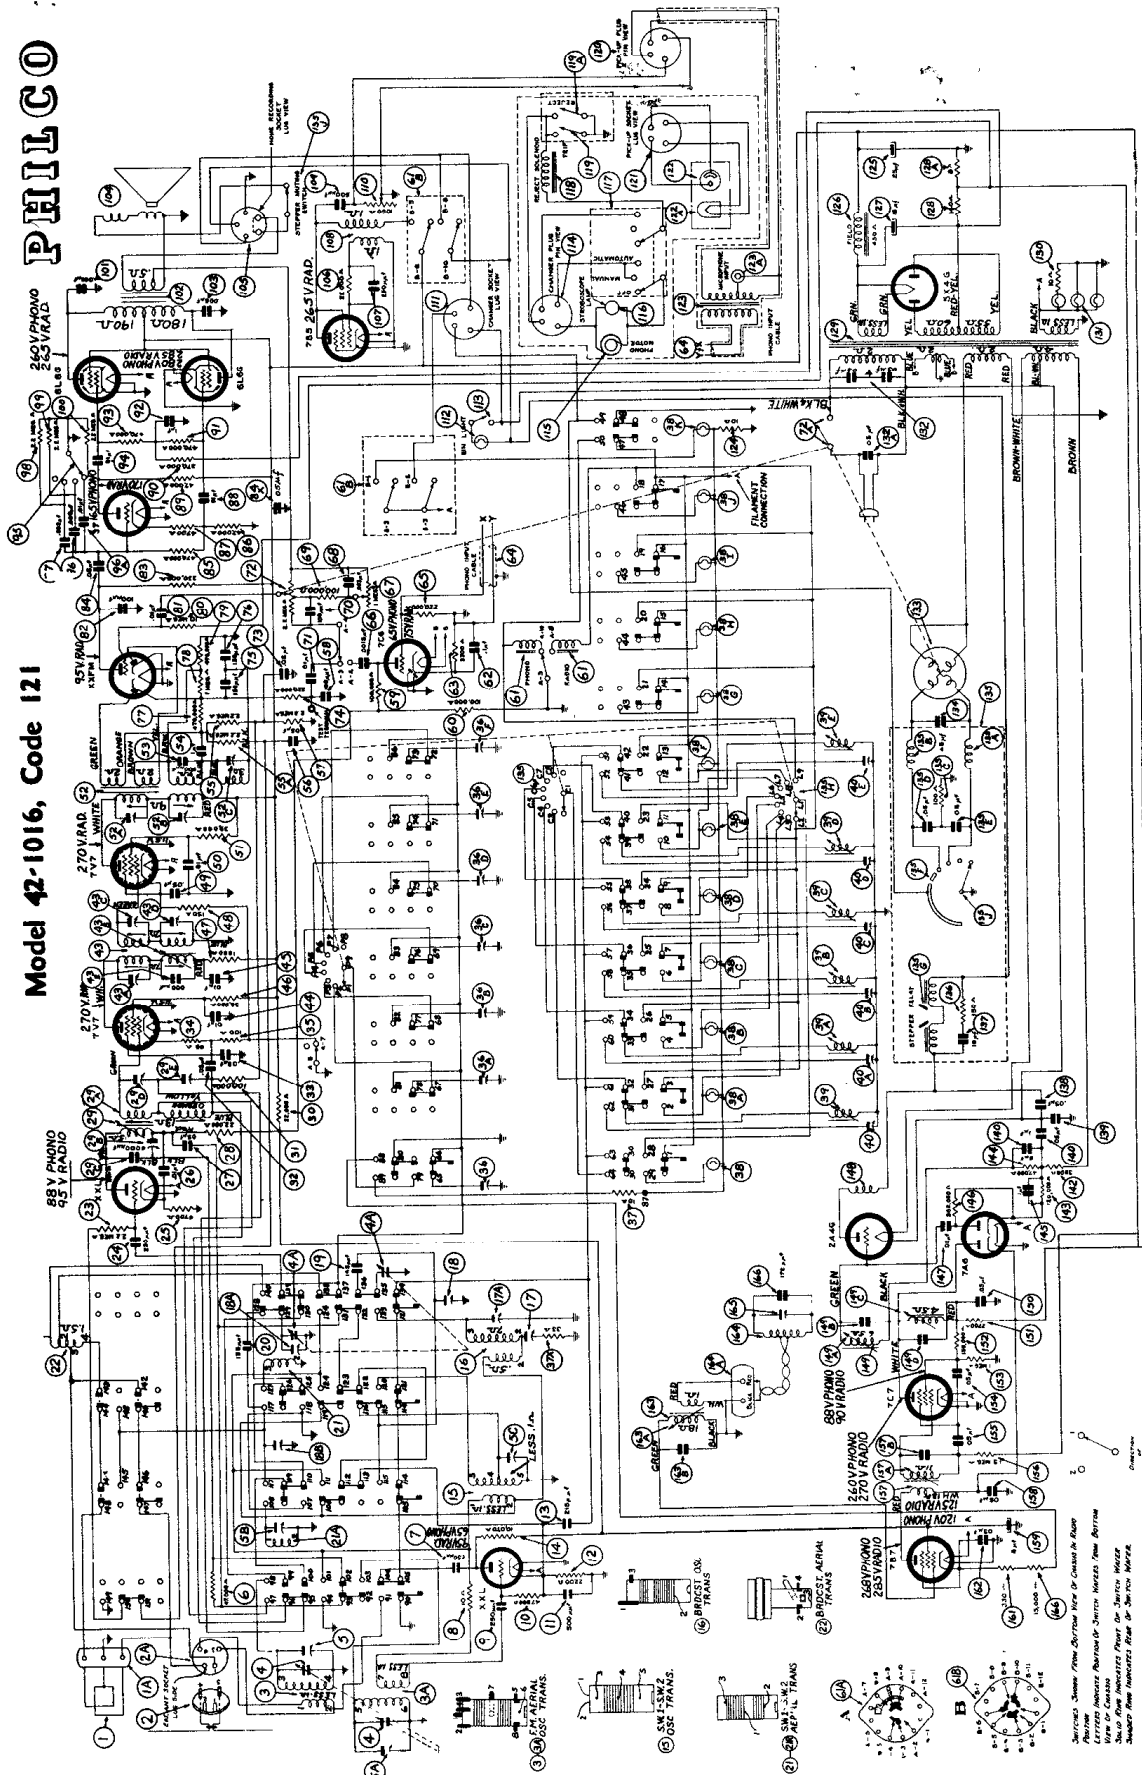








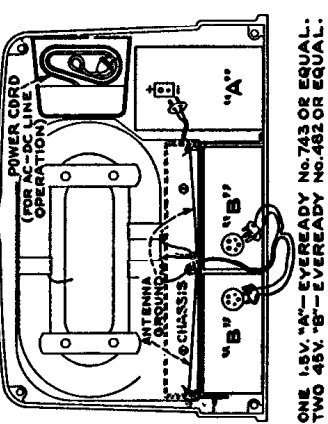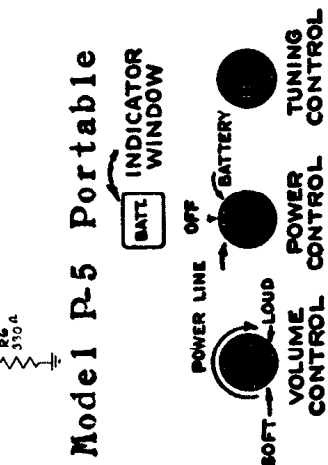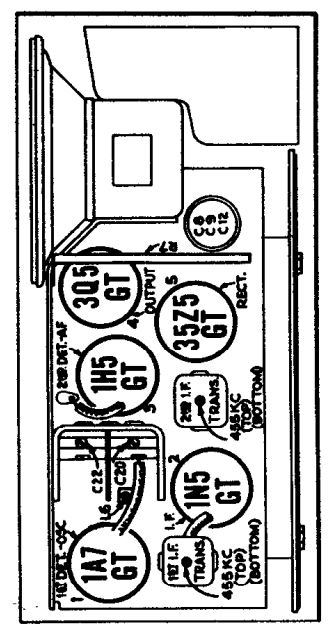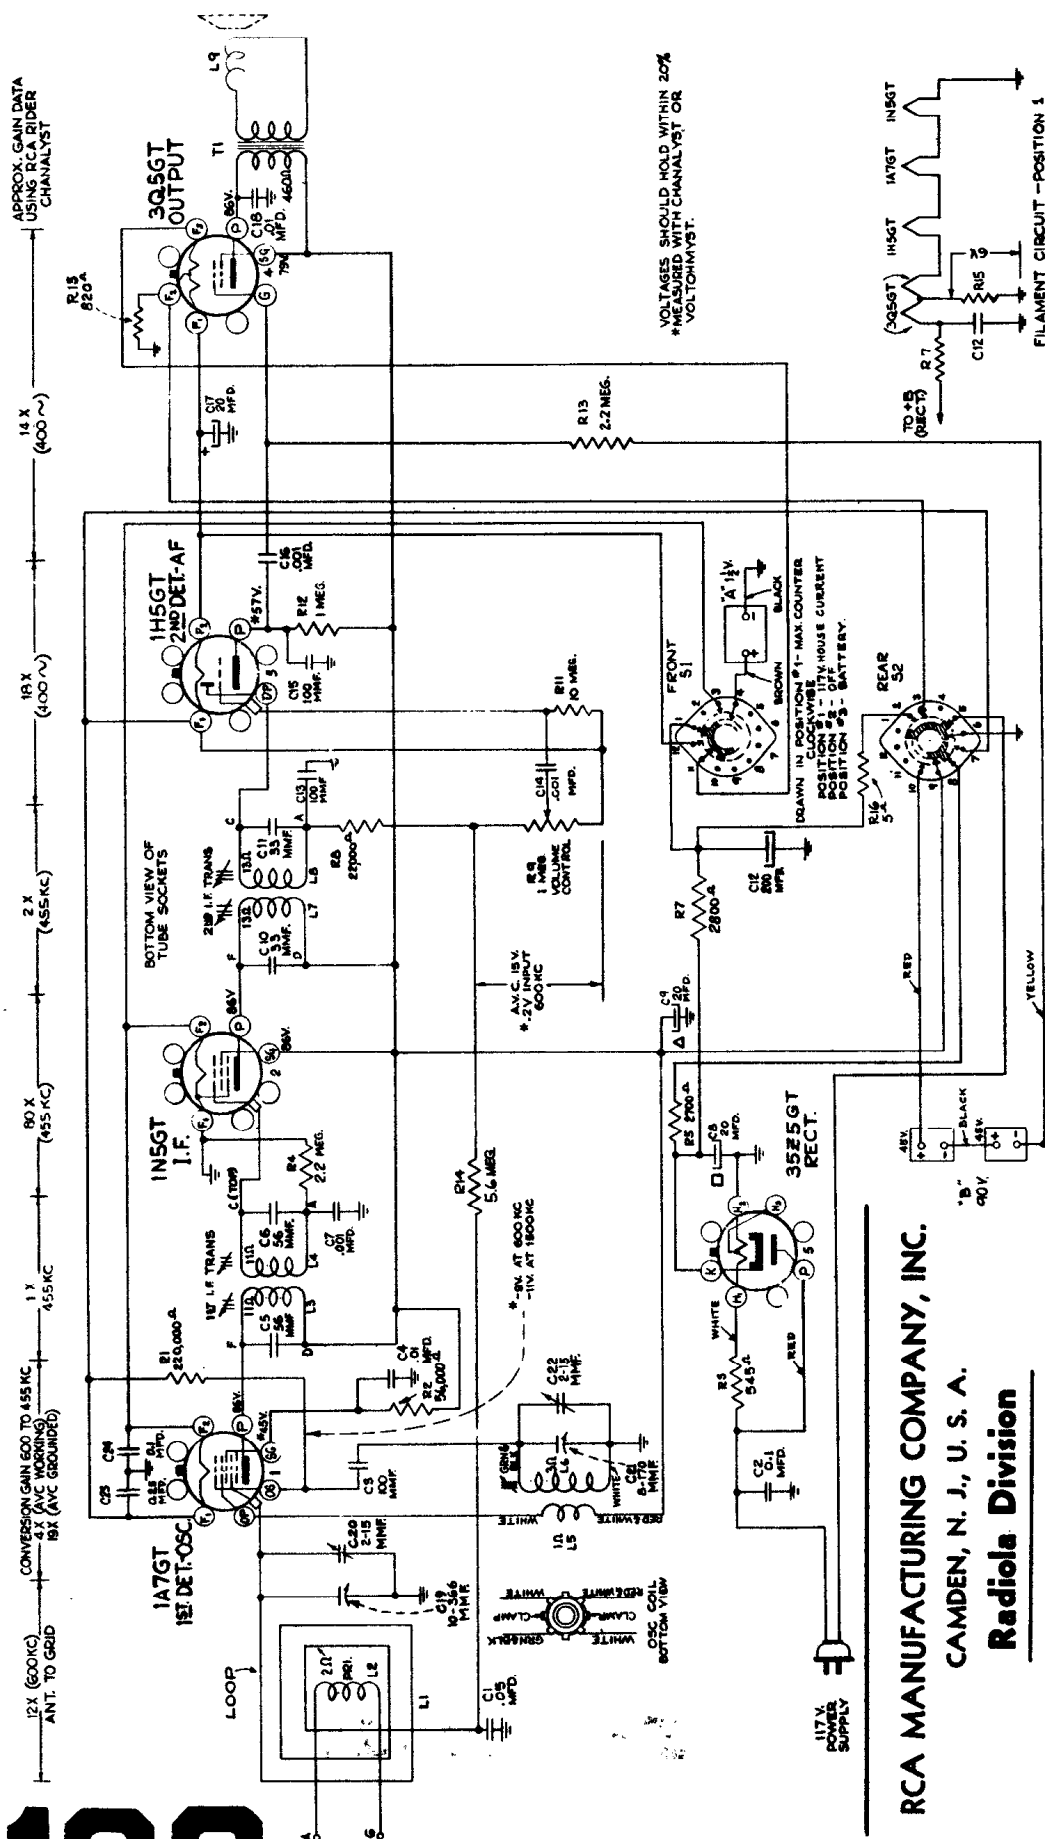

RCA MANUFACTURING COMPANY, INC.  
CAMDEN, N. J., U. S. A.  
**Radiola Division**

# RCA Victor

## Model 6 X 2

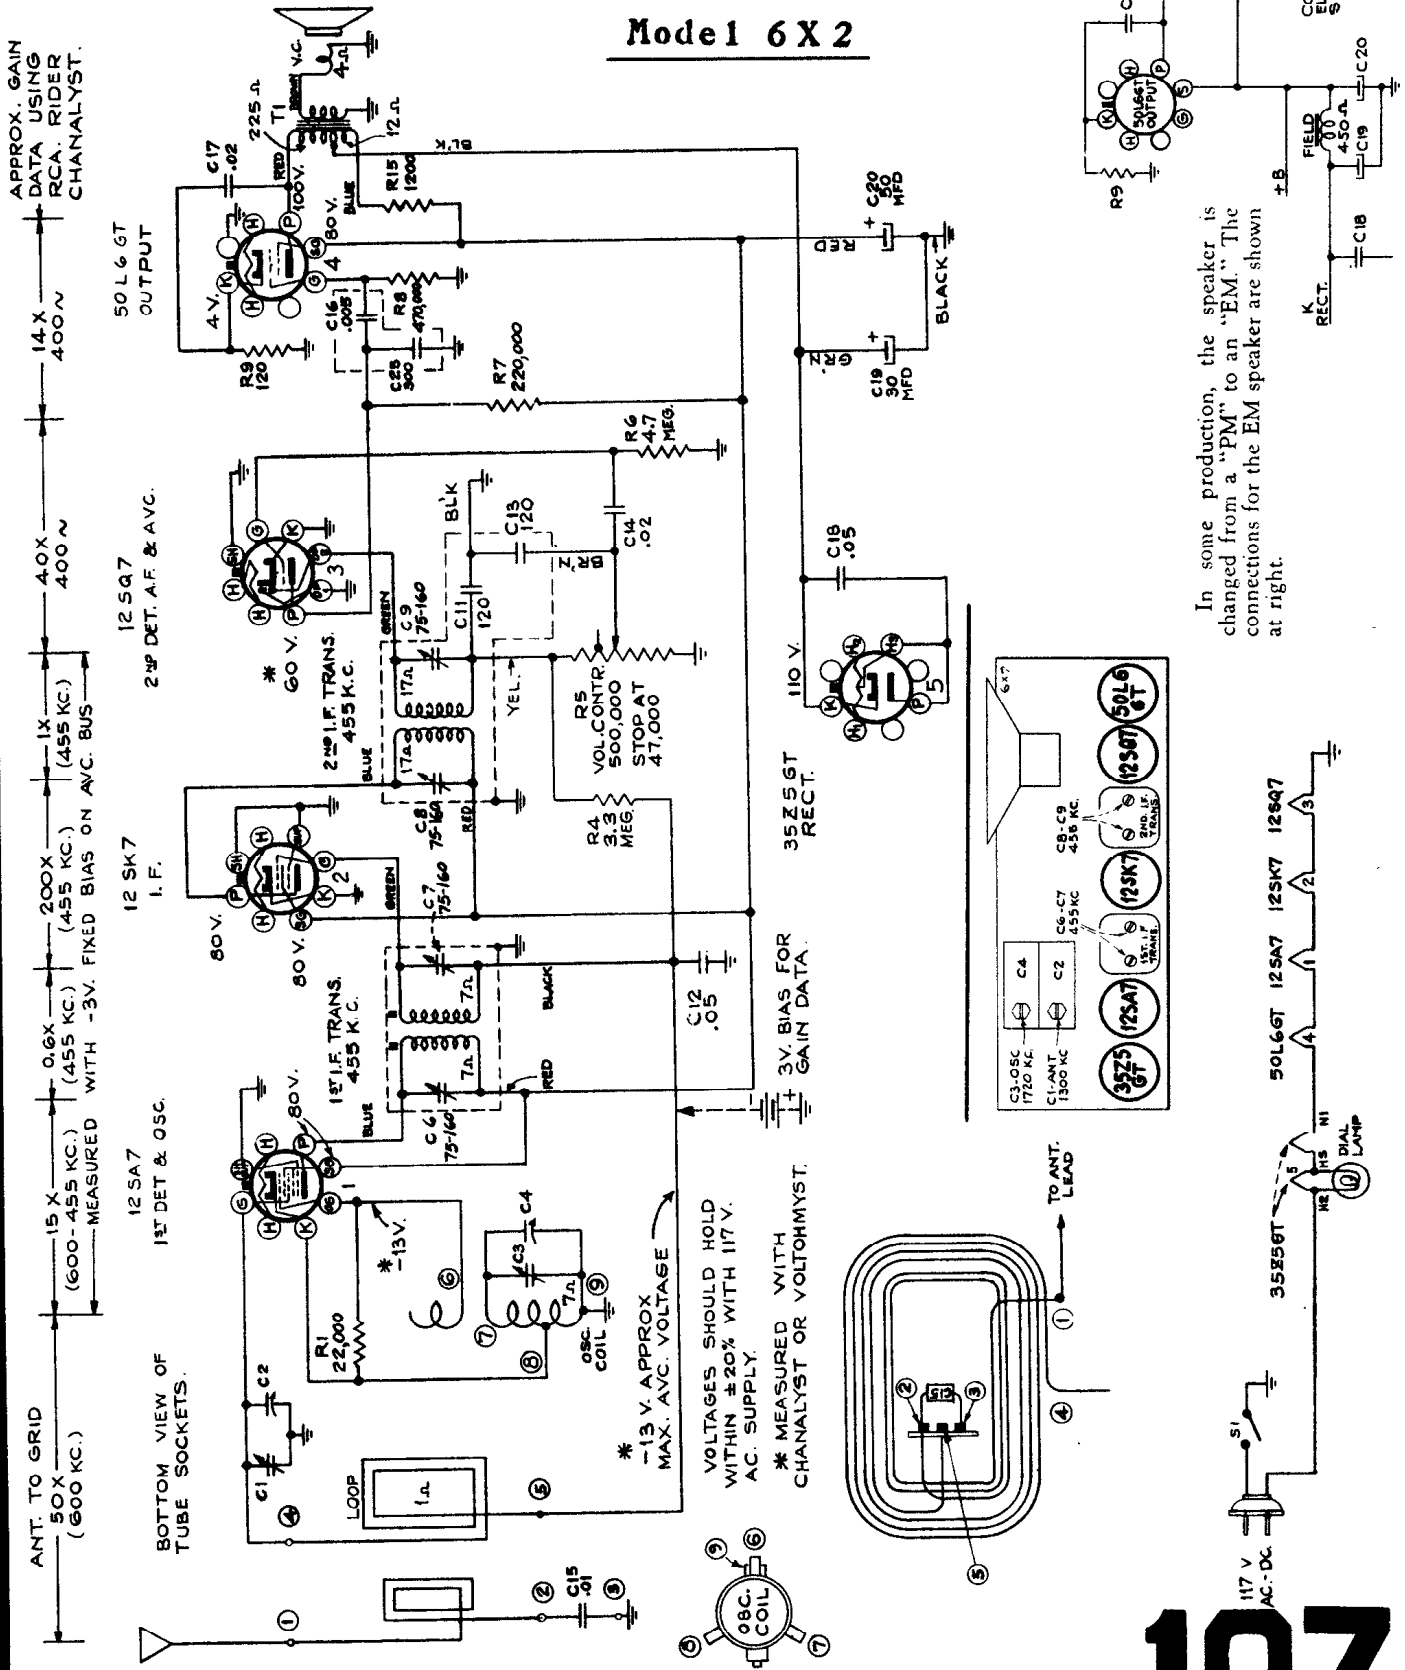

In some production, the speaker is changed from a "PM" to an "EM." The connections for the EM speaker are shown at right.

APPROX. GAIN DATA USING RCA RIDER CHANNELYST.

VOLTAGES SHOULD HOLD WITHIN ±20% WITH 117V. AC. SUPPLY.

\* MEASURED WITH CHANALYST OR VOLTOHMYST.

|        |          |     |            |       |          |
|--------|----------|-----|------------|-------|----------|
| C3-OSC | 1720 KC. | C4  |            | C8-C9 | 435 KC.  |
| C1-ANT | 1500 KC. | C2  |            | C6-C7 | 455 KC.  |
| C5     | 12SA7    | C10 | 12SQ7      | C11   | 75-160   |
| C12    | 50L6GT   | C13 | 60V TRANS. | C14   | 4-7 MEG. |
| C15    | 12947    | C16 | 470,000    | C17   | .02      |
| C18    | 35Z5GT   | C19 | 300        | C20   | 4-50 μ   |

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## RCA Victor

### 25X

APPROX. GAIN  
DATA USING  
RCA RIDER  
CHANALYST

ANT TO GRID  
50X  
600 KC

15X  
(600-455 KC,  
MEASURED WITH -3V. FIXED BIAS ON AVC. BUS

0.6X  
(455 KC.)

200X  
(455 KC.)

1X  
(455 KC.)

40X  
400 N

14X  
400 N


50 L6 GT  
OUTPUT

12 SA7  
1ST DET & OSC  
TUBE SOCKETS.


12 SK7  
I.F.

12 SQ7  
2ND DET. A.F. & AVC

50 L6 GT  
50 L6 GT

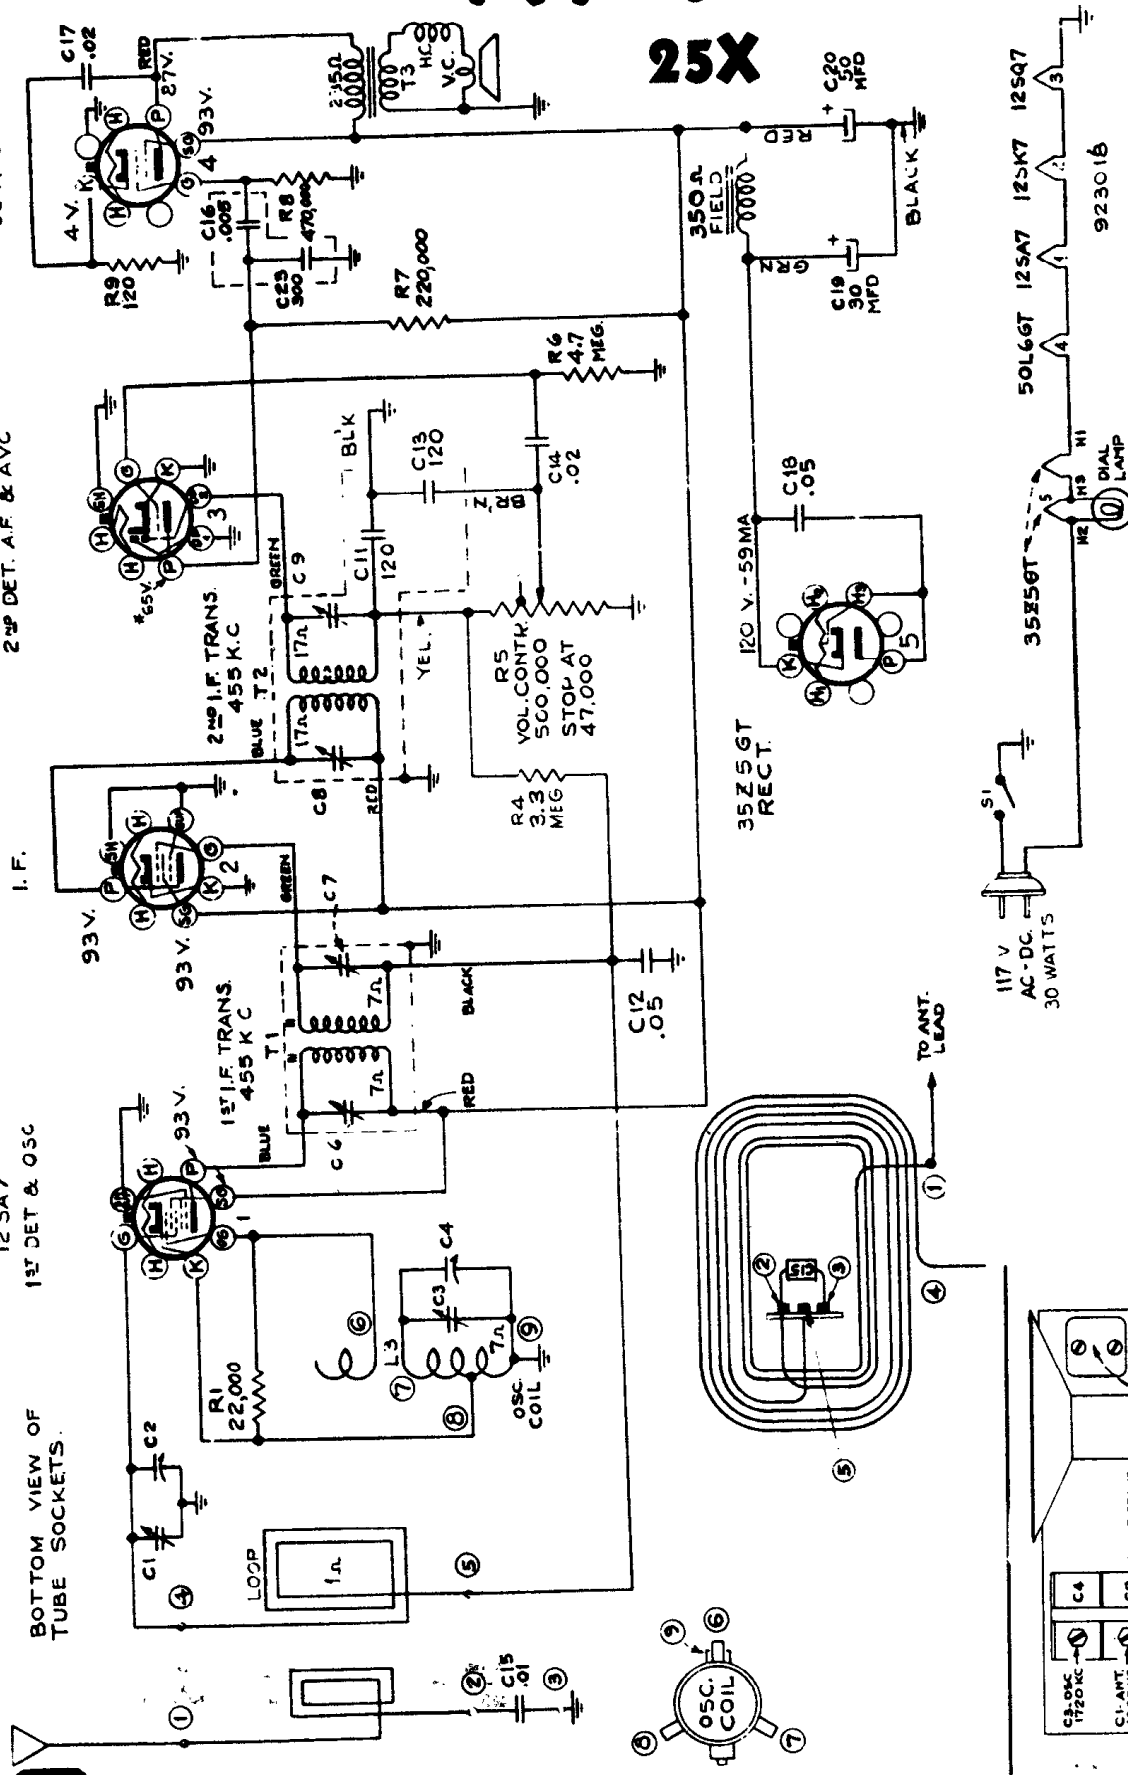

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS


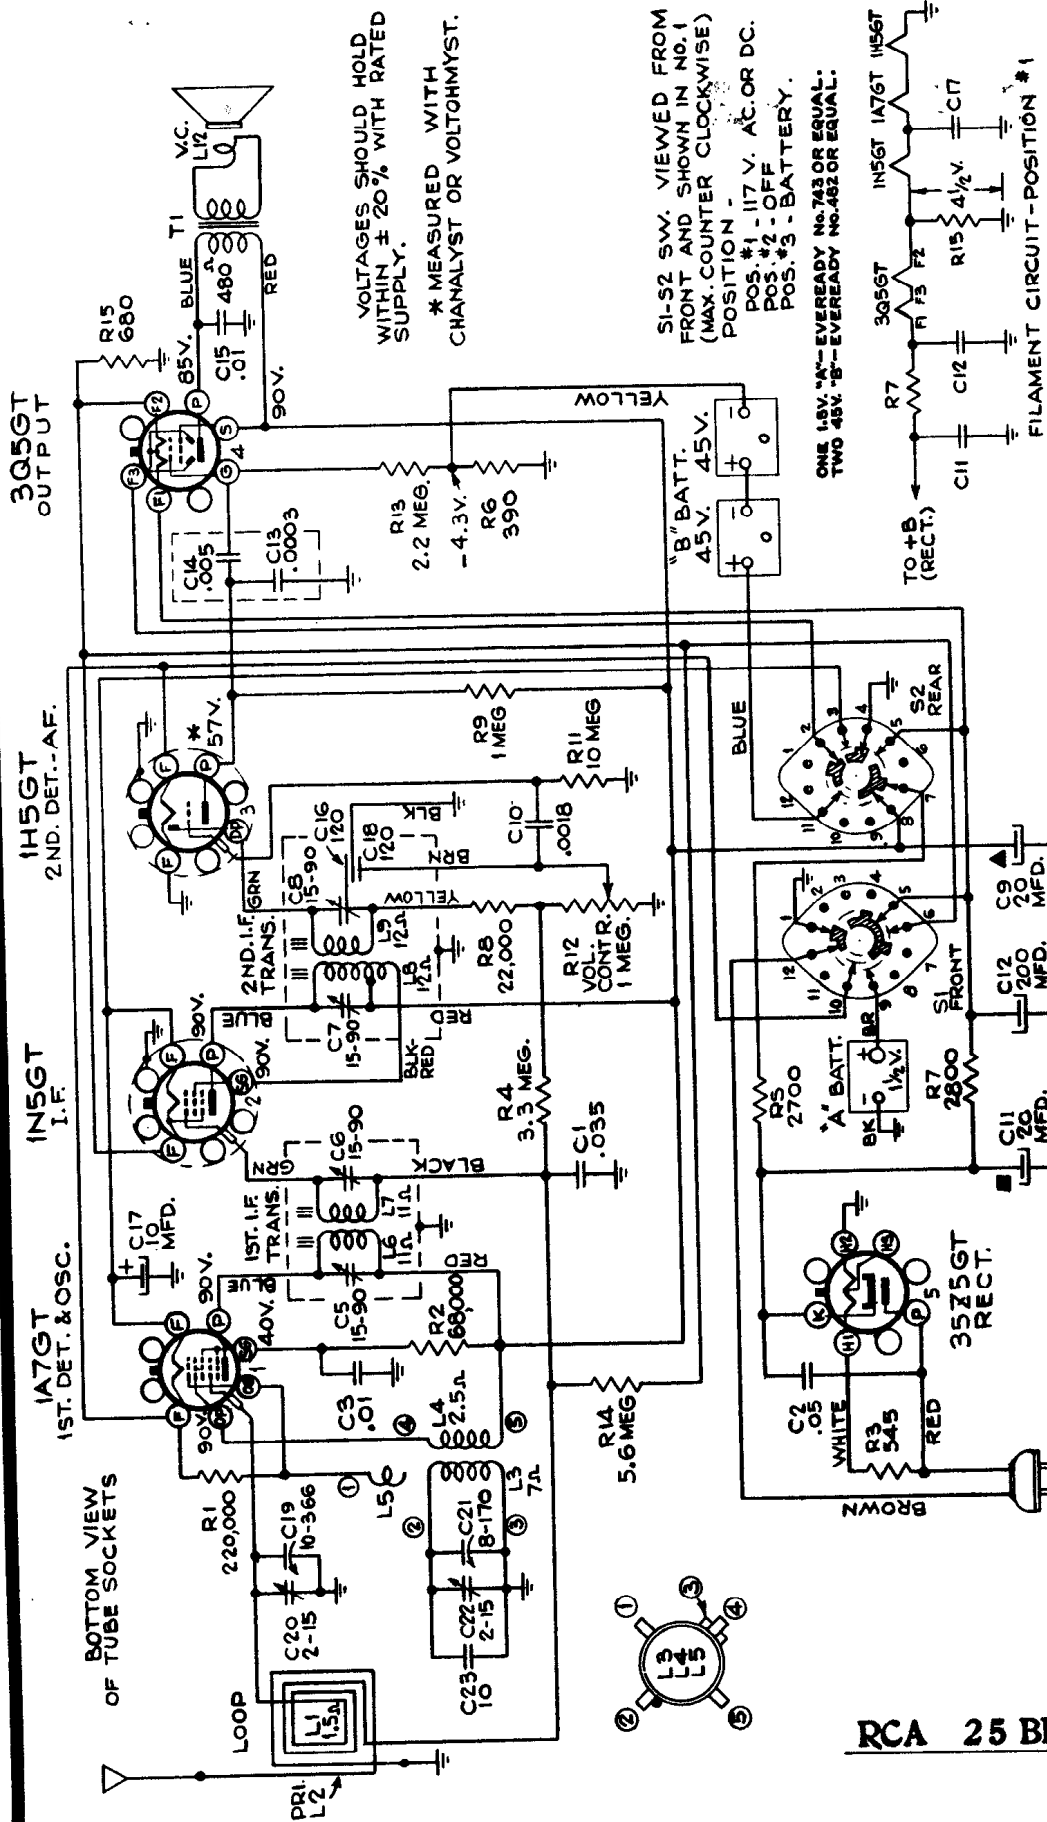


VOLTAGES SHOULD HOLD WITHIN  $\pm 20\%$  WITH RATED SUPPLY.  
 \* MEASURED WITH CHANALYST OR VOLTOHMYST.

SI-S2 SW. VIEWED FROM FRONT AND SHOWN IN NO. 1 (MAX. COUNTER CLOCKWISE) POSITION -  
 POS. #1 117 V. AC. OR DC.  
 POS. #2 - OFF  
 POS. #3 - BATTERY.

ONE 1.8V. "A"-EVEREADY NO. 743 OR EQUAL:  
 TWO 45V. "B"-EVEREADY NO. 482 OR EQUAL.


| Steps | Connect the high side of test-oscillator to— | Tune test-osc. to—       | Turn radio dial to—                 | Adjust the following for max. peak output— |
|-------|--|--------------------------|-------------------------------------|--|
| 1     | I-F grid cap. in series with .01 mfd.        | 455 kc                   | Quiet point at 1,600 kc end of dial | C8, C7 (2nd I-F trans.)                    |
| 2     | 1st-Det. grid cap. in series with .01 mfd.   | radiated signal 1,730 kc | Gang at min. capacity               | C5, C6 (1st I-F trans.)                    |
| 3     | radiated signal 1,600 kc                     | radiated signal 1,600 kc | Osc. Trimmer                        | C22  |
| 4     |  |                          | Ant. Trimmer                        | C20  |

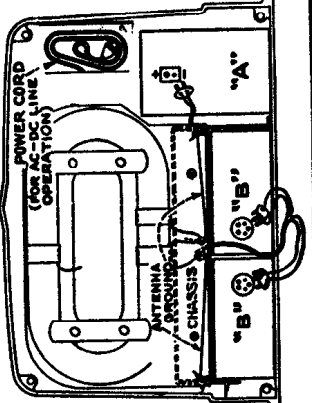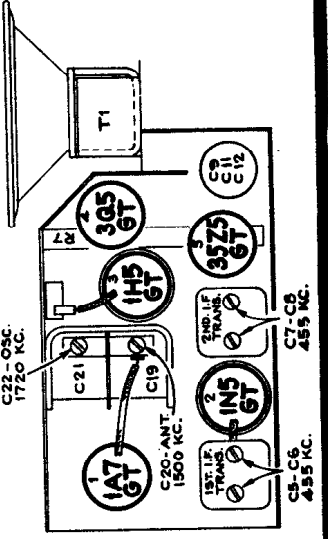

RCA 25 BP Portable

# 109


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

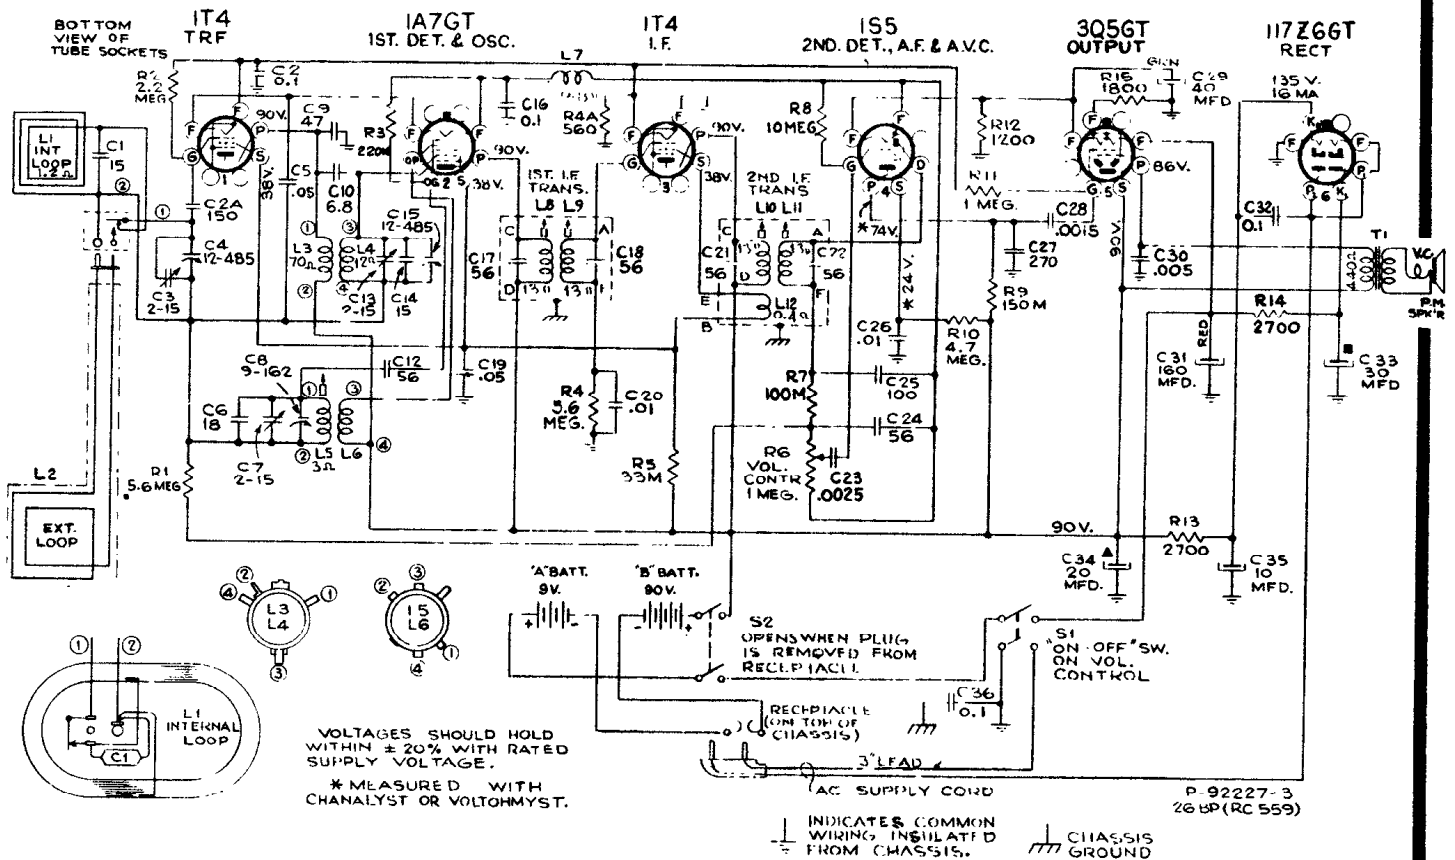

## Alignment

With gang in full mesh, the pointer should be 1/16-inch to the left of the 550 kc dial mark.

| Steps | Connect the high side of test-oscillator to— | Tune test-osc. to— | Turn radio dial to—                 | Adjust the following for max. peak output— |
|-------|--|--------------------|-------------------------------------|--|
| 1     | I-F grid, in series with .01 mfd.            | 455 kc             | Quiet point at 1,600 kc end of dial | L10, L11 (2nd I-F trans.)                  |
| 2     | 1st-Det. grid cap, in series with .01 mfd.   |                    |                                     | L8, L9 (1st I-F trans.)                    |
| 3     | radiated signal at 1,600 kc                  | 1,600 kc           | 1,600 kc                            | C7 (osc.)<br>C3 (ant.)<br>C13 (det.)       |
| 4     | radiated signal 600 kc                       | 600 kc             | 600 kc                              | L5 (Rock in)                               |
| 5     | Repeat steps 3 and 4                         |                    |                                     |  |

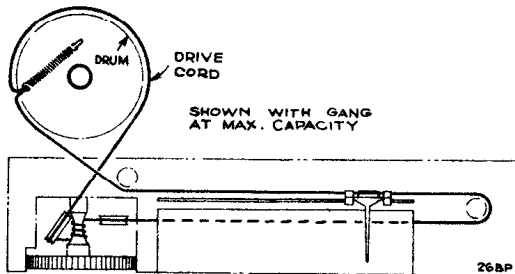

RCA 26BP Portable

# 110

## AC-DC Operation.—

This receiver will operate on 105 to 125 volts, AC 50 or 60 cycles, or DC.


A power cord is housed in the bottom right hand corner looking inside the cabinet as shown in the illustration. Open the cabinet like a suit case, first pushing to one side the little pins under the handle ends to raise the clips. Then pull the power cord plug out of its socket in the top right hand corner as shown, and take out and unroll the power cord. A slot in the bottom allows the closing of the cabinet with the power cord passing through. Close the cabinet with the cord extending and insert the plug into a convenient electrical outlet.

When returning to battery operation, be sure to replace the power plug in its socket inside the case with the cord rolled up.

**NOTE.—If reception is not obtained on DC, reverse plug in outlet receptacle. This may also reduce hum on AC operation.**

## Using External Loop.—

A loop antenna is housed inside the cabinet. Under normal conditions this will give satisfactory reception. If however the receiver is used in a location remote from broadcasting stations where signals are weak, or where interference is excessive, or in a shielded compartment such as an automobile, airplane or railroad train, an RCA Magic Wave Magnifier Antenna with suction cup fastener may be purchased from your dealer. This antenna has a strap connector cord ending in a two-prong plug for attachment to the loop antenna frame. Open the case, plug the antenna cord into the socket (it will only go in one way), bring the strap out at the slot in the case and attach the Antenna by means of the suction cup to any convenient vertical surface. The RCA Magic Wave Magnifier may be attached inside the back case, when not in use, by means of three snap fasteners.

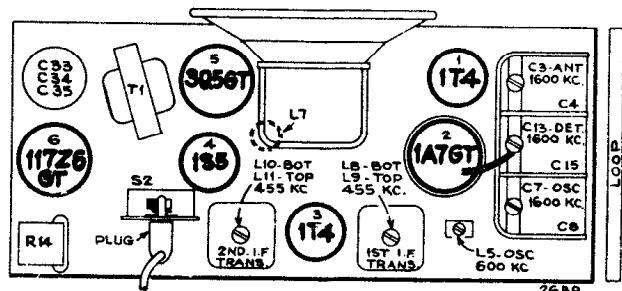

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## RCA Models 26X-1, 26X-3

**Test Oscillator.**—For all alignment operations, keep the output as low as possible to avoid a.v.c. action.

**Output Meter Alignment.**—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Calibration Scale.**—The glass tuning dial may be easily removed from the cabinet and temporarily attached to the dial backing plate for quick reference during alignment.

**Power Supply Polarity.**—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.




### Precautionary Lead Dress

1. Dress output tube plate lead to speaker and output bypass condenser away from terminal board and yellow lead in cable.
2. Dress brown and yellow leads from 2nd I.F. transformer away from output plate and bypass condenser.
3. Dress .02 capacitor C12 away from output capacitor C16.
4. Dress all leads or parts as far as possible away from oscillator coil.
5. Dress lead from C13 to band switch down along front apron of chassis.
6. Dress lead from trimmer condenser on loop to S.W. Ant. coil around outside of rectifier tube. Other leads between rectifier and R.F. tube.

| Steps | Connect high side of the test oscillator to—      | Tune test osc. to—    | Turn radio dial to—                 | Adjust the following for maximum peak output |
|-------|---|-----------------------|-------------------------------------|--|
| 1     | I.F. grid in series with 0.1 mfd.                 |                       |                                     | C30, C31<br>2nd I-F trans.                   |
| 2     | 1st det. grid in series with 0.1 mfd.             | 455 kc                | Quiet Point at 1,700 kc end of dial | C-28, C-29<br>1st I-F trans.                 |
| 3     | R.F. grid in series with 0.1 mfd.                 |                       |                                     | C-27**<br>Wave trap                          |
| 4     | Ant. terminal in series with 47 mmf. (link open)  | 15 mc                 |                                     | 15 mc<br>"C" Band                            |
| 5     |   | 9.5 mc                | 9.5 mc<br>"C" Band                  | L-10 (osc.)<br>L-5 (ant.)                    |
| 6     | Repeat steps 4 and 5.                             |                       |                                     |  |
| 7     | Ant. terminal in series with 220 mmf. (link open) | 1,300 kc              | 1,300 kc<br>"A" Band                | C-25 (osc.)<br>C-23 (ant.)                   |
| 8     |   | 600 kc                | 600 kc<br>"A" Band                  | C-26 (osc.)                                  |
| 9     |   | Repeat steps 7 and 8. |                                     |  |


\*Use minimum capacity peak if two peaks can be obtained.  
\*\*Adjust C-27 for minimum signal with 455 kc applied to R.F. grid.

Note.—Oscillator tracks 455 kc above signal on all bands.

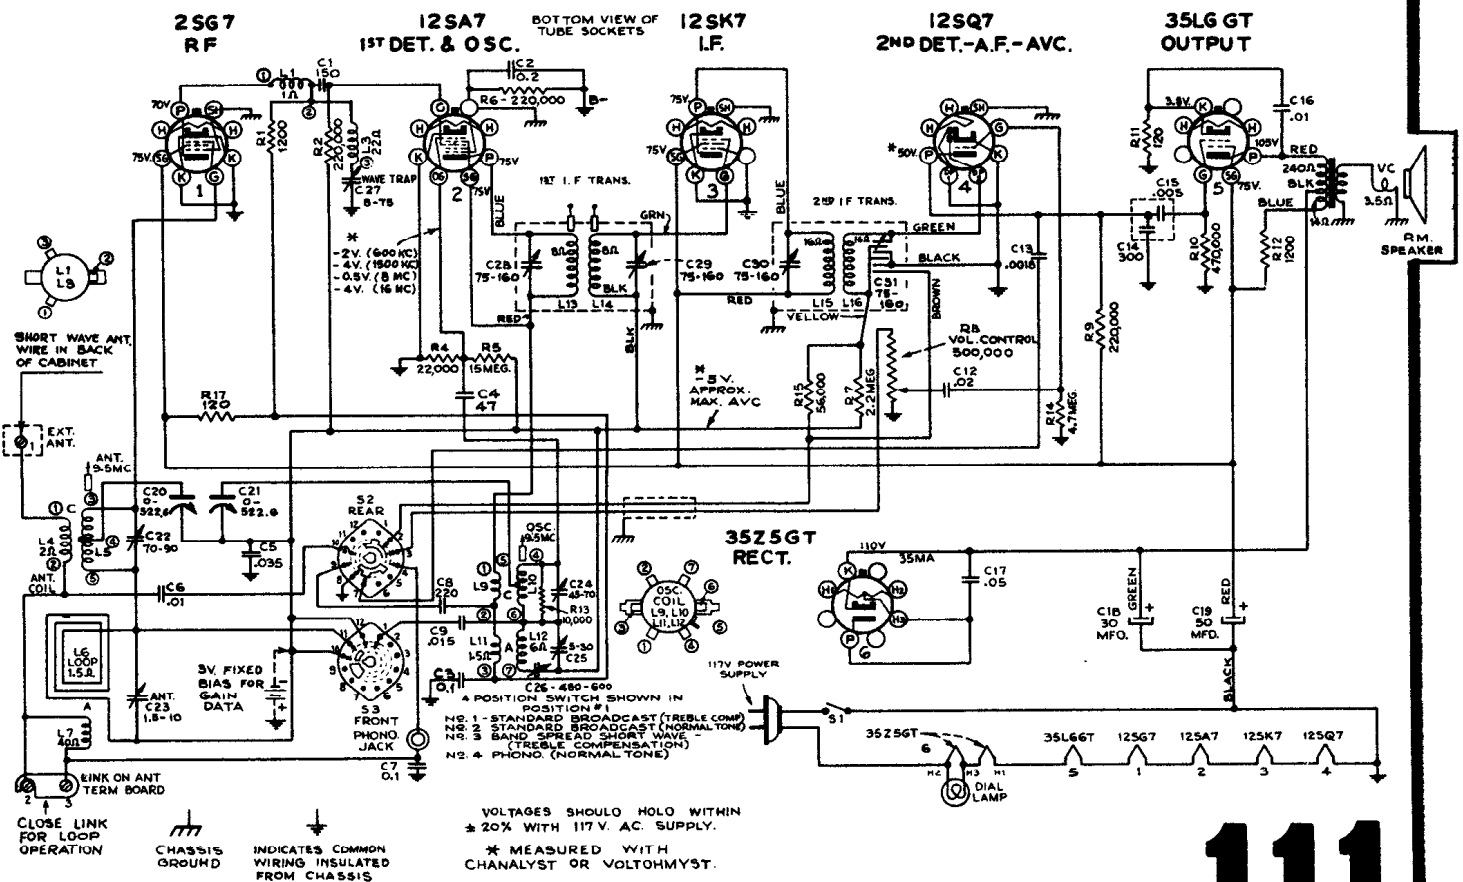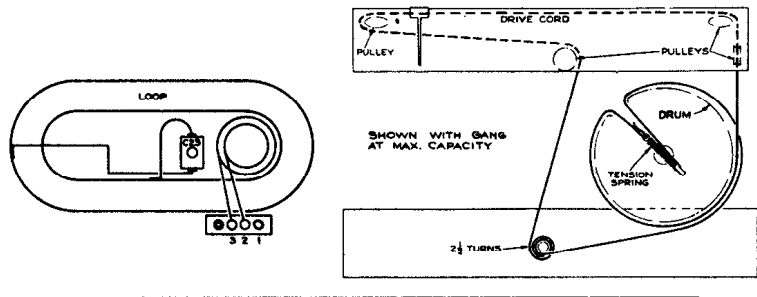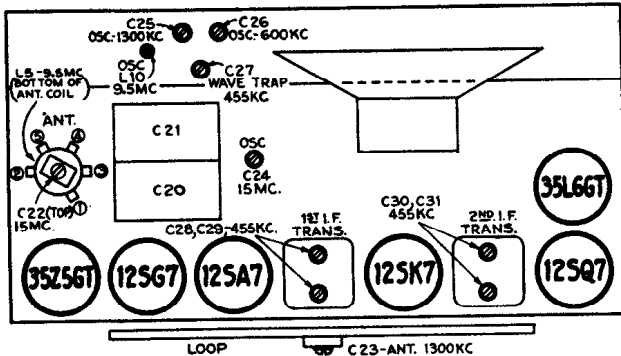




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

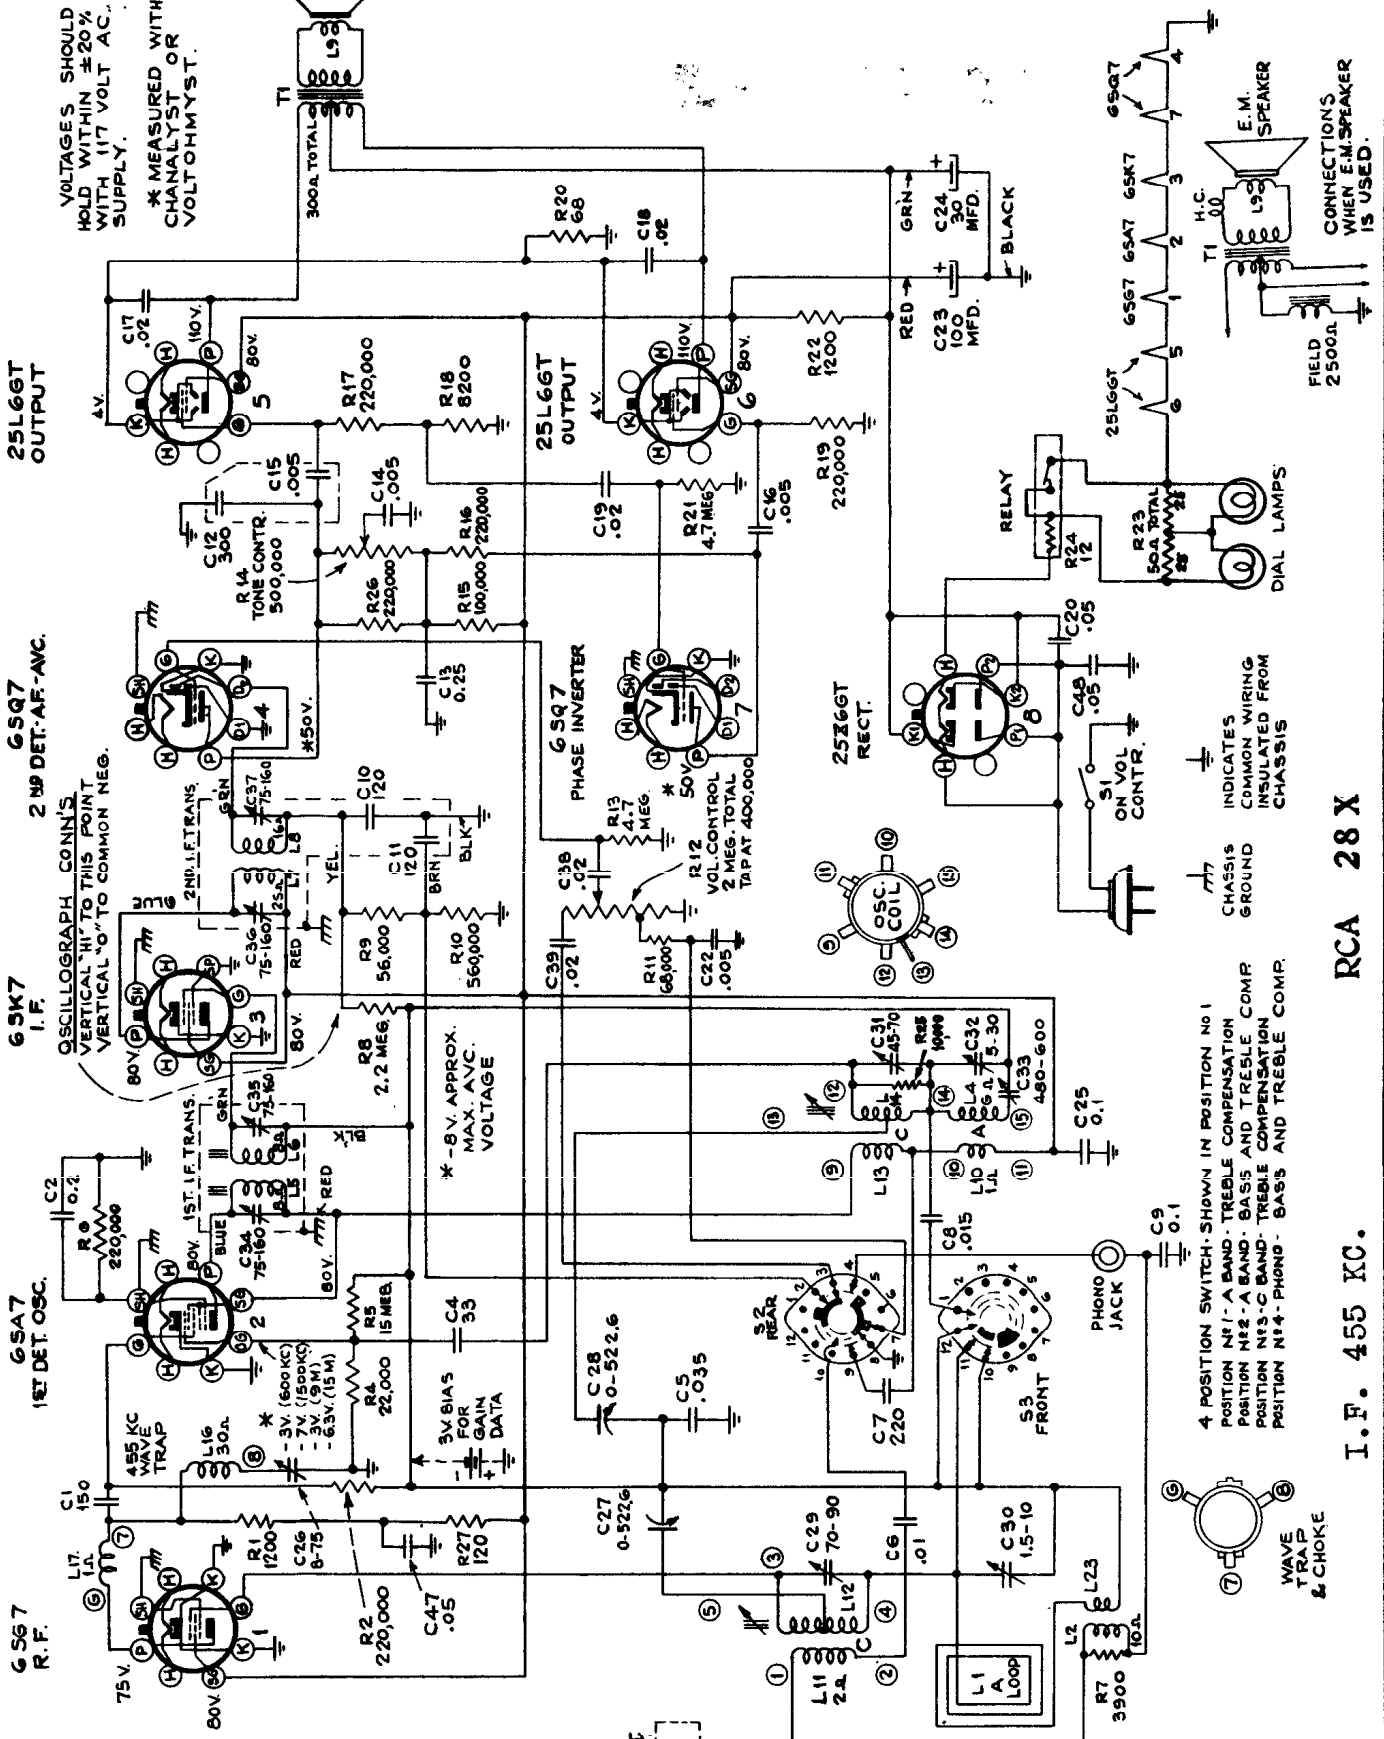




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

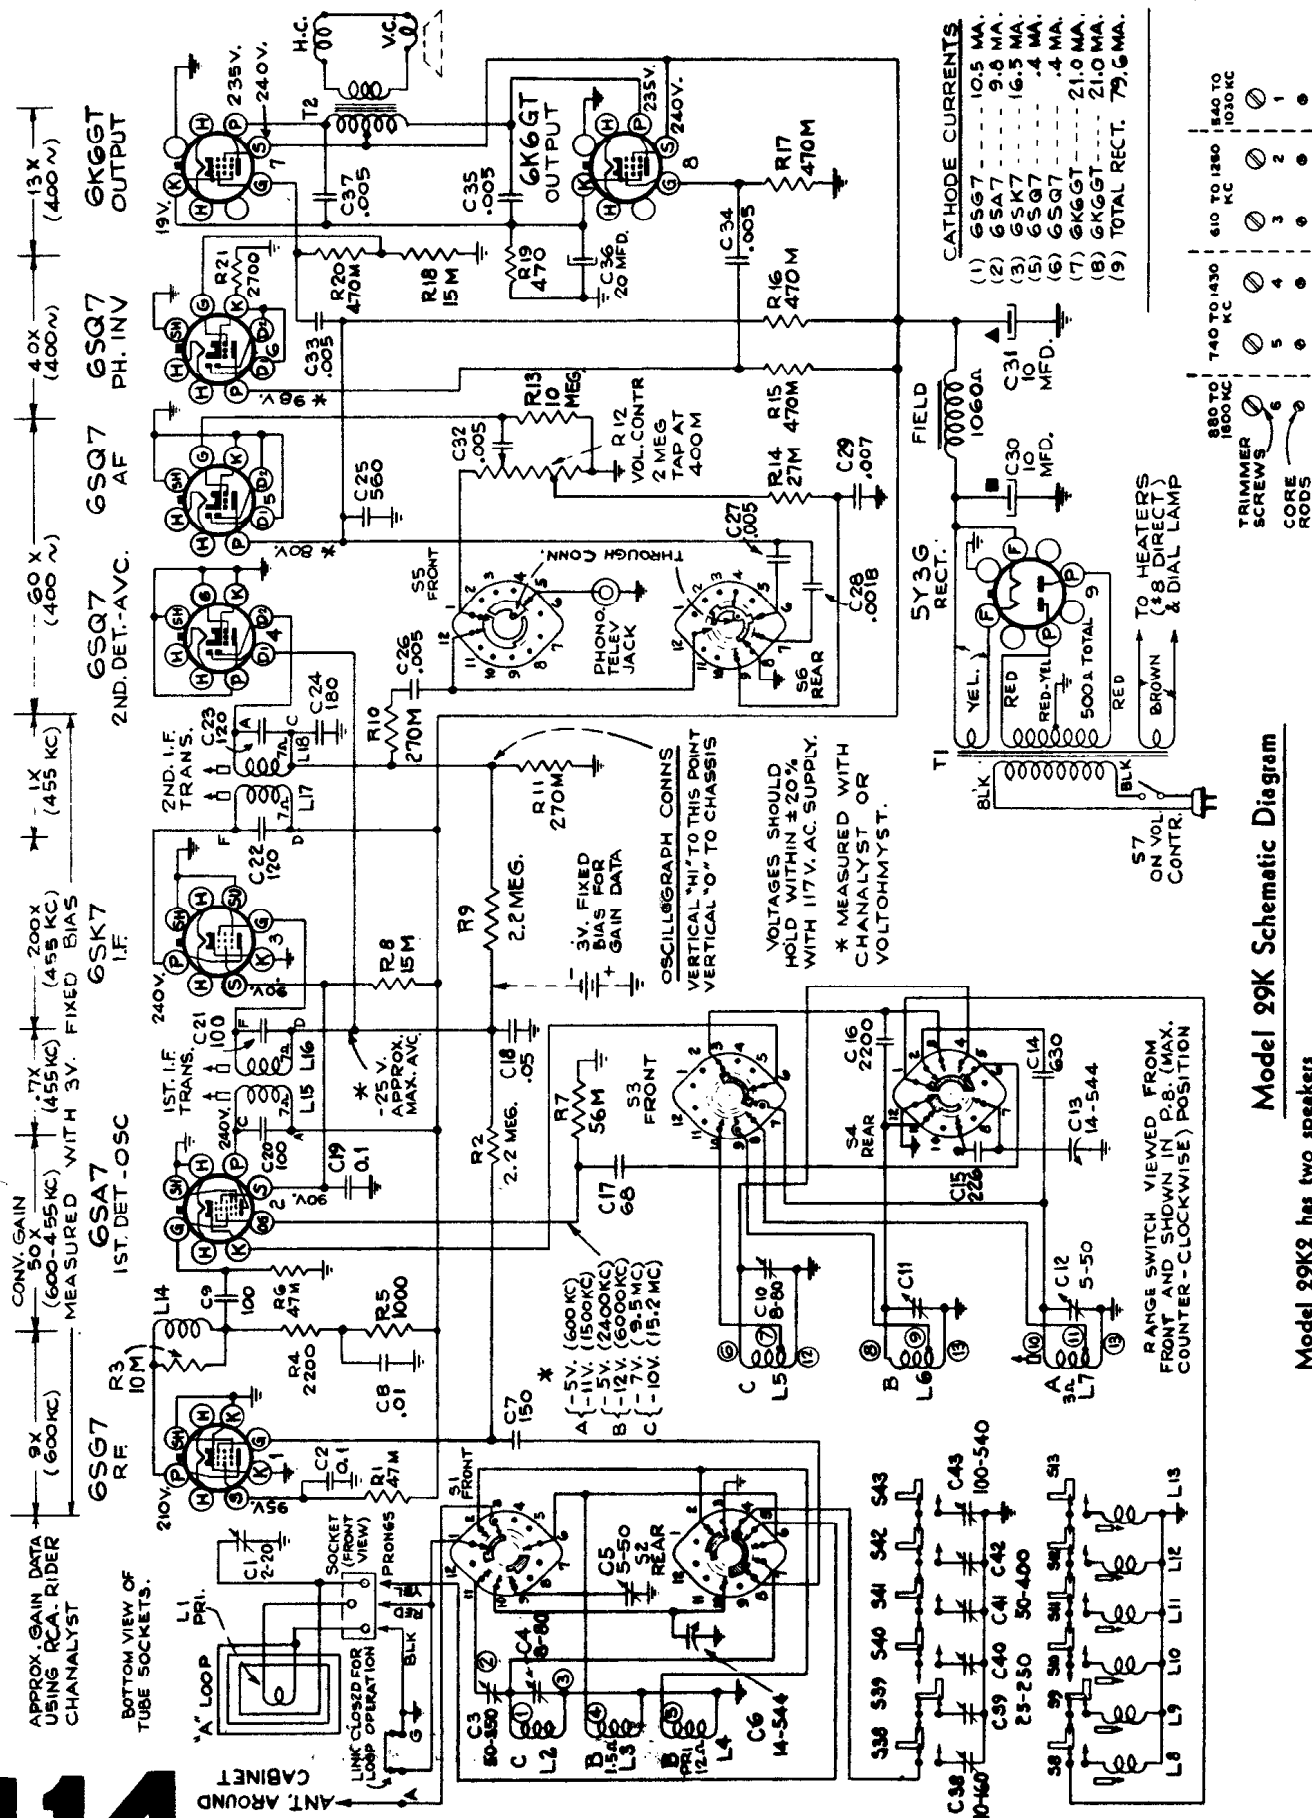

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

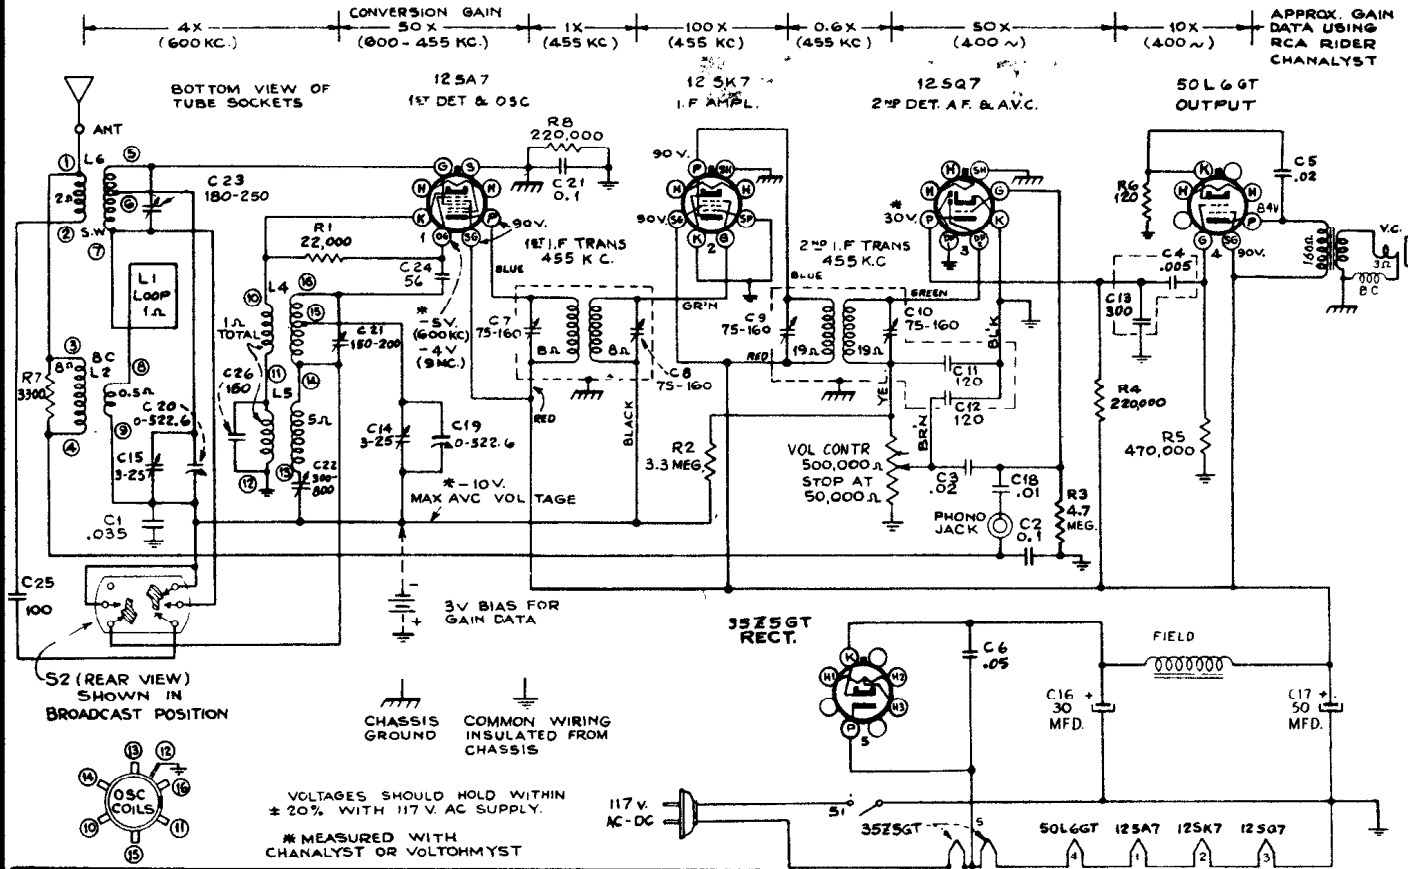

## Alignment Procedure

**Output Meter Alignment.**—If this method is used connect the meter across the voice coil and turn the receiver volume control to maximum.

**Electronic Voltmeter.**—The electronic voltmeter in the Chanalyst or VoltOhmyst provides an unexcelled output indicator. It should be connected to the AVC bus.

**Test Oscillator.**—Connect the low side of the test oscillator to the receiver chassis through a .01 mfd. capacitor. When the electronic voltmeter is used as an alignment indicator the output of the test oscillator should be adjusted to produce several volts of AVC. With the output meter alignment method the test oscillator output should be kept as low as possible.



**Power-Supply Polarity.**—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

| Steps | Connect the high side of test-oscillator to— | Tune test-osc. to— | Turn radio dial to—                 | Adjust the following for max. peak output— |
|-------|--|--------------------|-------------------------------------|--|
| 1     | 12SK7 grid in series with 0.1 mfd.           | 455 kc             | Quiet Point at 1,600 kc end of dial | C10, C9<br>2nd I-F<br>Transformer          |
| 2     | 12SA7 grid in series with 0.1 mfd.           |                    |                                     | C8, C7<br>1st I-F<br>Transformer           |
| 3     | Antenna term. in series with 47 mmf.         | 10 mc*             | 10 mc                               | C21 (osc.)**<br>C23 (ant.)                 |
| 4     | Antenna term. in series with 200 mmfd.       | 1,600 kc           | 1,600 kc                            | C14 (osc.)                                 |
| 5     | Radiation Loop                               | 1,300 kc           | Resonance on Signal                 | C15 (ant.)                                 |
| 6     | Radiation Loop                               | 600 kc             | 600 kc                              | C22 Osc.<br>Rock in                        |

\* It is recommended that this step be repeated using a received station of known frequency.


\*\* Use minimum capacity if two peaks can be obtained.

## RCA 34 X

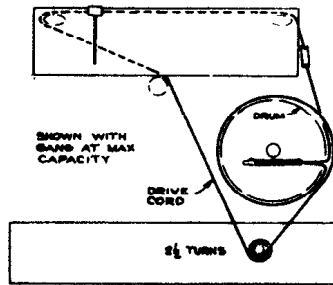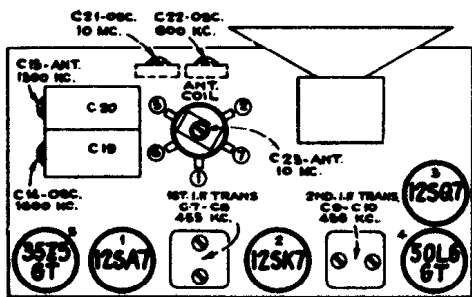

# 115


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

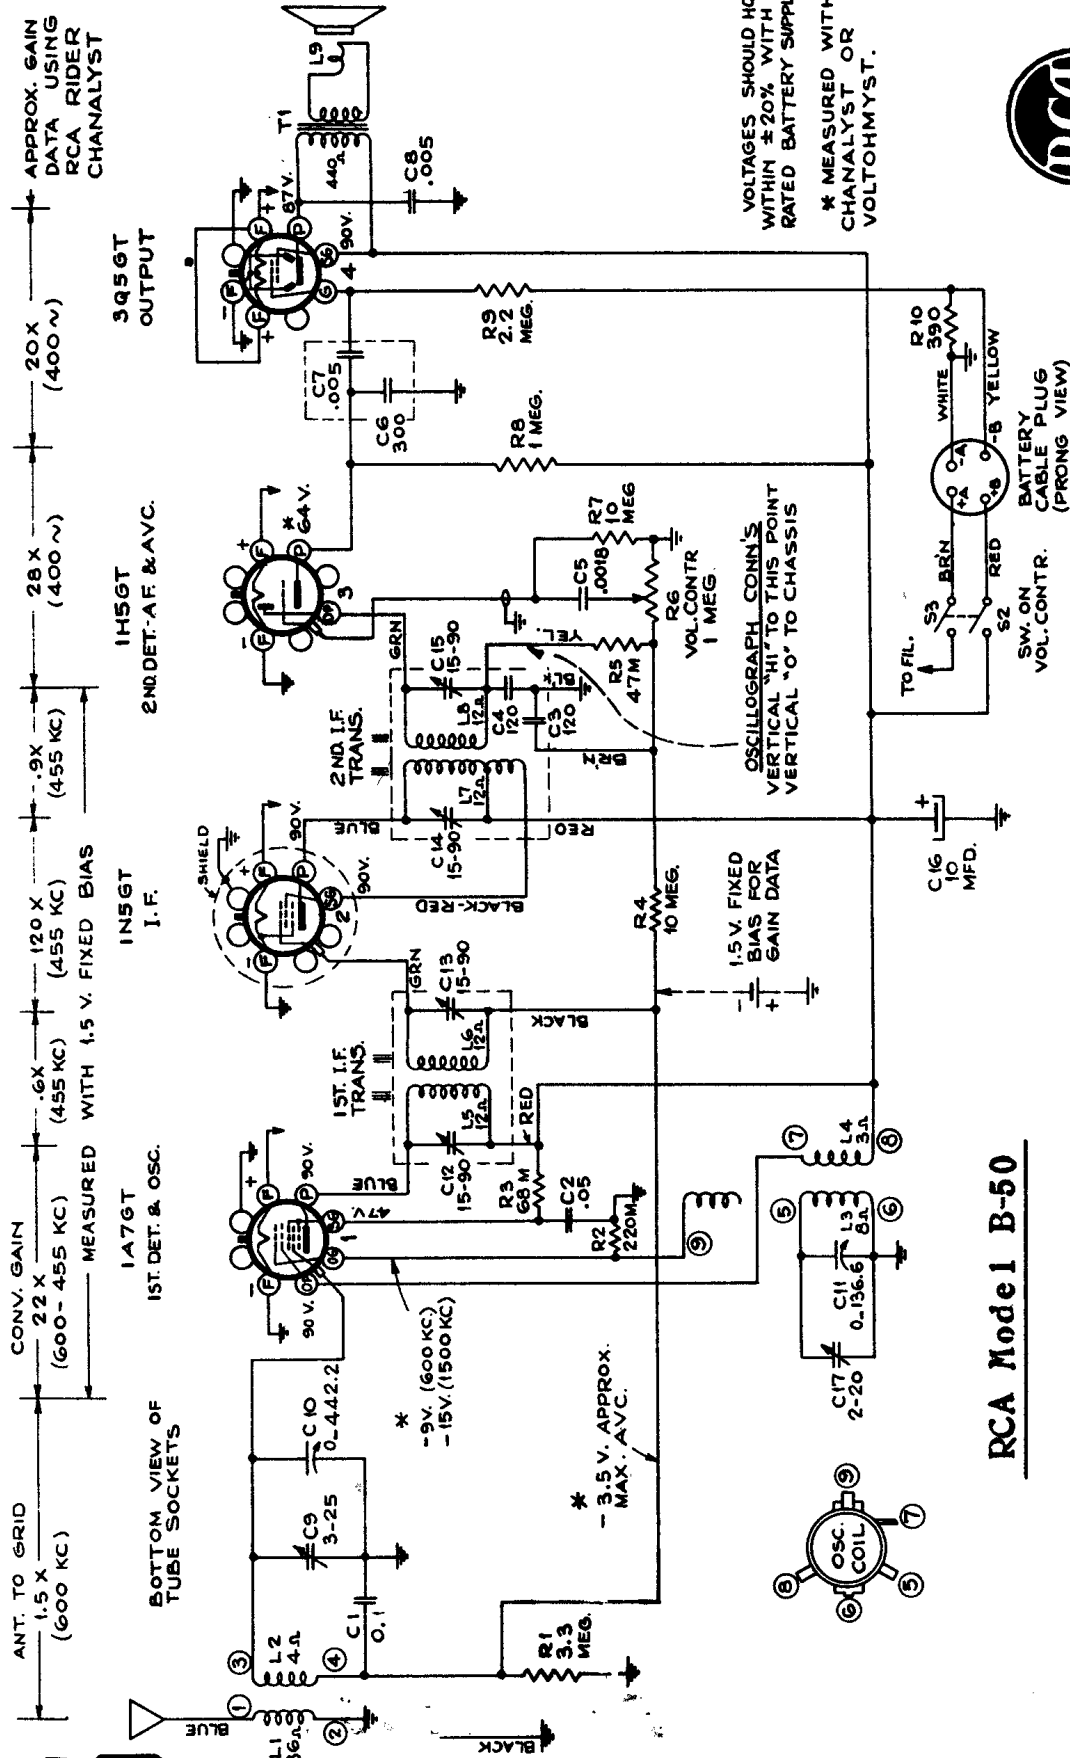

VOLTAGES SHOULD HOLD  
WITHIN ±20% WITH  
RATED BATTERY SUPPLY.  
\* MEASURED WITH  
CH ANALYST OR  
VOLTOHMYST.

- Precautionary Lead Dress—**
1. The lead from the 8Q5 plate to output transformer should be dressed under clip and away from audio input leads.
  2. Keep AVC lead connecting C1 away from the 1A7GT plate.
  3. Keep blue plate leads coming from IF transformers short and close to the chassis.
  4. All filament wires should be dressed close to chassis.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

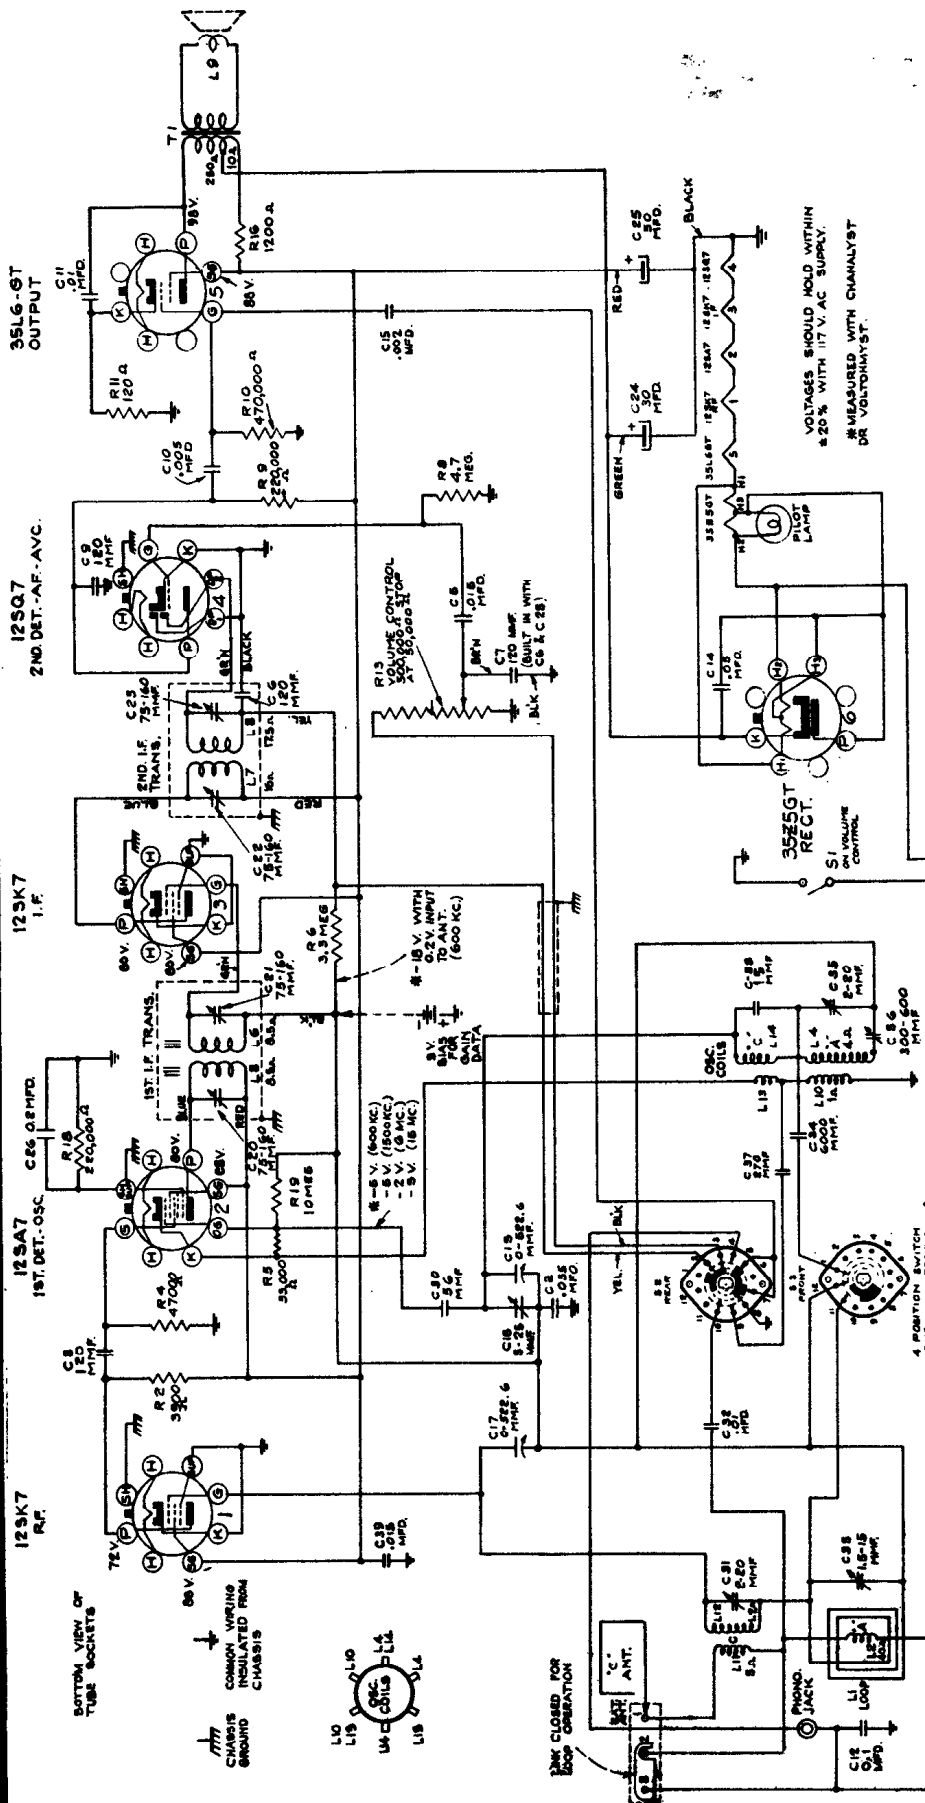


## Alignment Procedure

Calibration Scale.—The glass tuning dial may be easily removed from the cabinet and temporarily attached to the dial backing plate for quick reference during alignment.

| Steps | Connect the high side of test-osc. to— | Tune test osc. to— | Turn radio dial to—           | Adjust the following for max. peak output— |
|-------|--|--------------------|-------------------------------|--|
| 1     | I-F grid in series with 0.1 mfd.       | 455 kc             | "A" Band Quiet Point 1,900 kc | C29, C28 2nd I-F Trans.                    |
| 2     | 1st Det. grid in series with 0.1 mfd.  | 19 mc              | "C" Band 19 mc                | C31, C30 1st I-F Trans.                    |
| 3     | Ant. terminal in series with 47 mmfd.  | 19 mc              | "C" Band 19 mc                | C18 (osc.)                                 |

## RCA 515


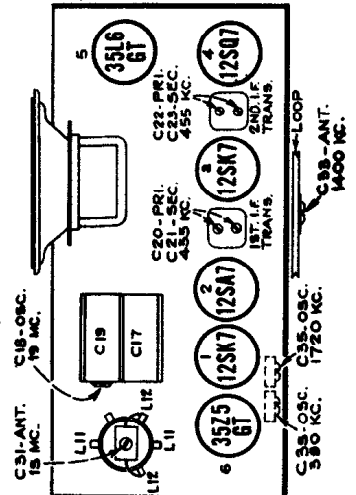


| Steps | Connect the high side of test-osc. to— | Tune test osc. to | Turn radio dial to—          | Adjust the following for max. peak output— |
|-------|--|-------------------|------------------------------|--|
| 4     | Radiated Signal, 18 mc                 | 18 mc             | "C" Band Resonance on Signal | C31 (ant.)                                 |
| 5     | Radiated Signal, 6.1 mc                | 6.1 mc            | "A" Band 1,720 kc            | L12*                                       |
| 6     | Ant. terminal in series with 200 mmfd. | 1,720 kc          | "A" Band 1,720 kc            | C35 (osc.)                                 |
| 7     | Radiated signal 1,400 kc (Link closed) | 1,400 kc          | Resonance on Signal          | C33 (ant.)                                 |
| 8     | Ant. terminal in series with 200 mmfd. | 590 kc            | "A" Band 590 kc              | C36 (osc.)                                 |
| 9     | Repeat steps 6, 7 and 8                |                   |                              |  |

\* Adjust by dressing proximity of AVC lead to coil.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## RCA Victor

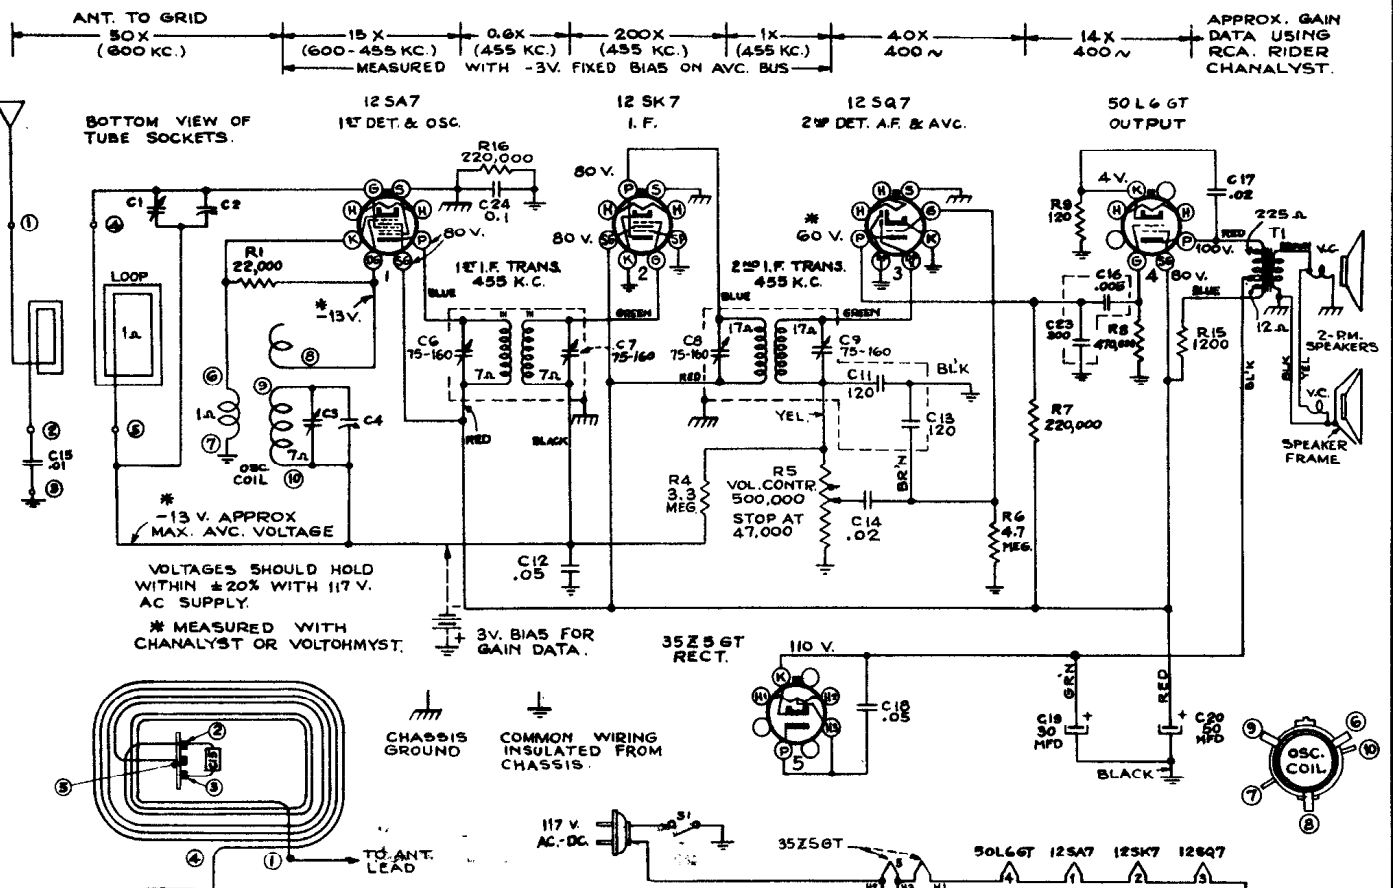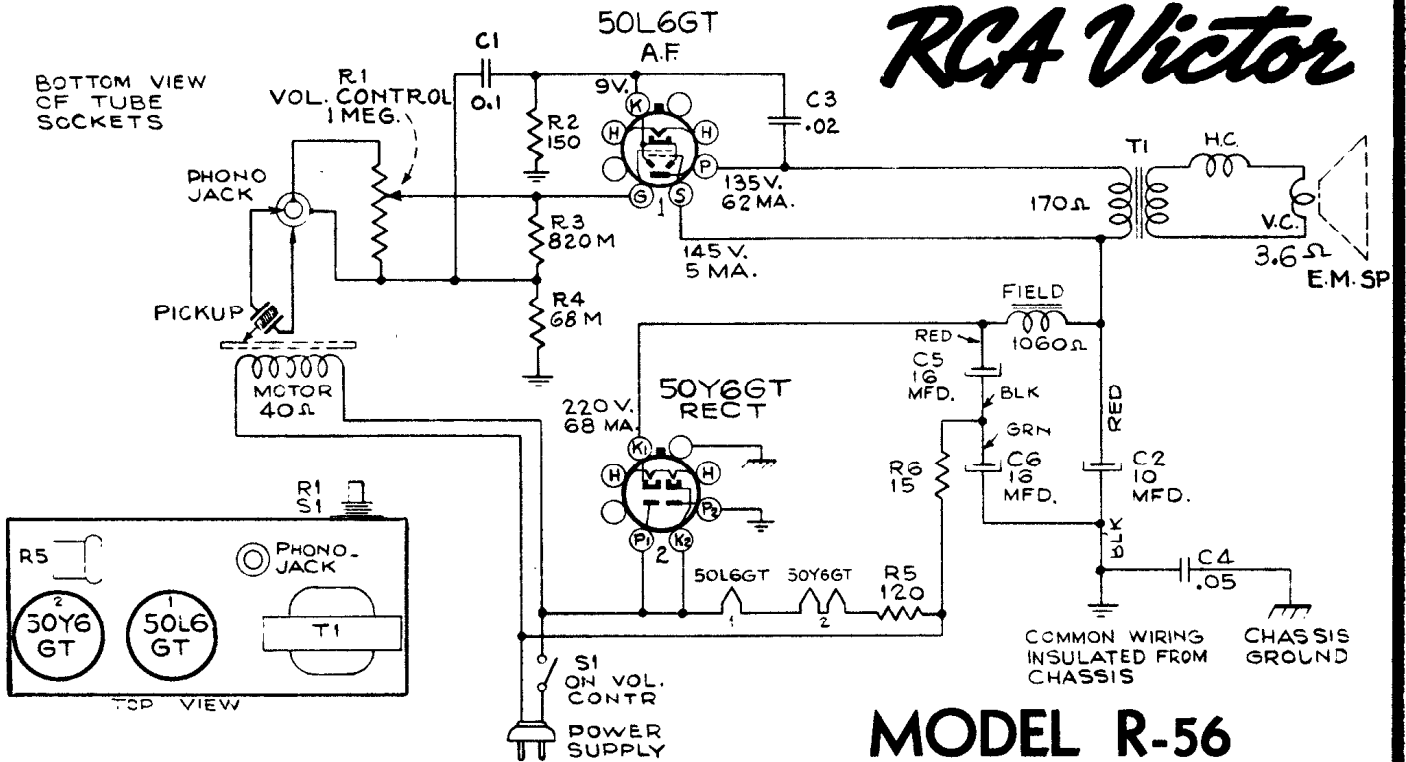


# 118

RCA Model 55 X  
COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## RCA Models 500, 501

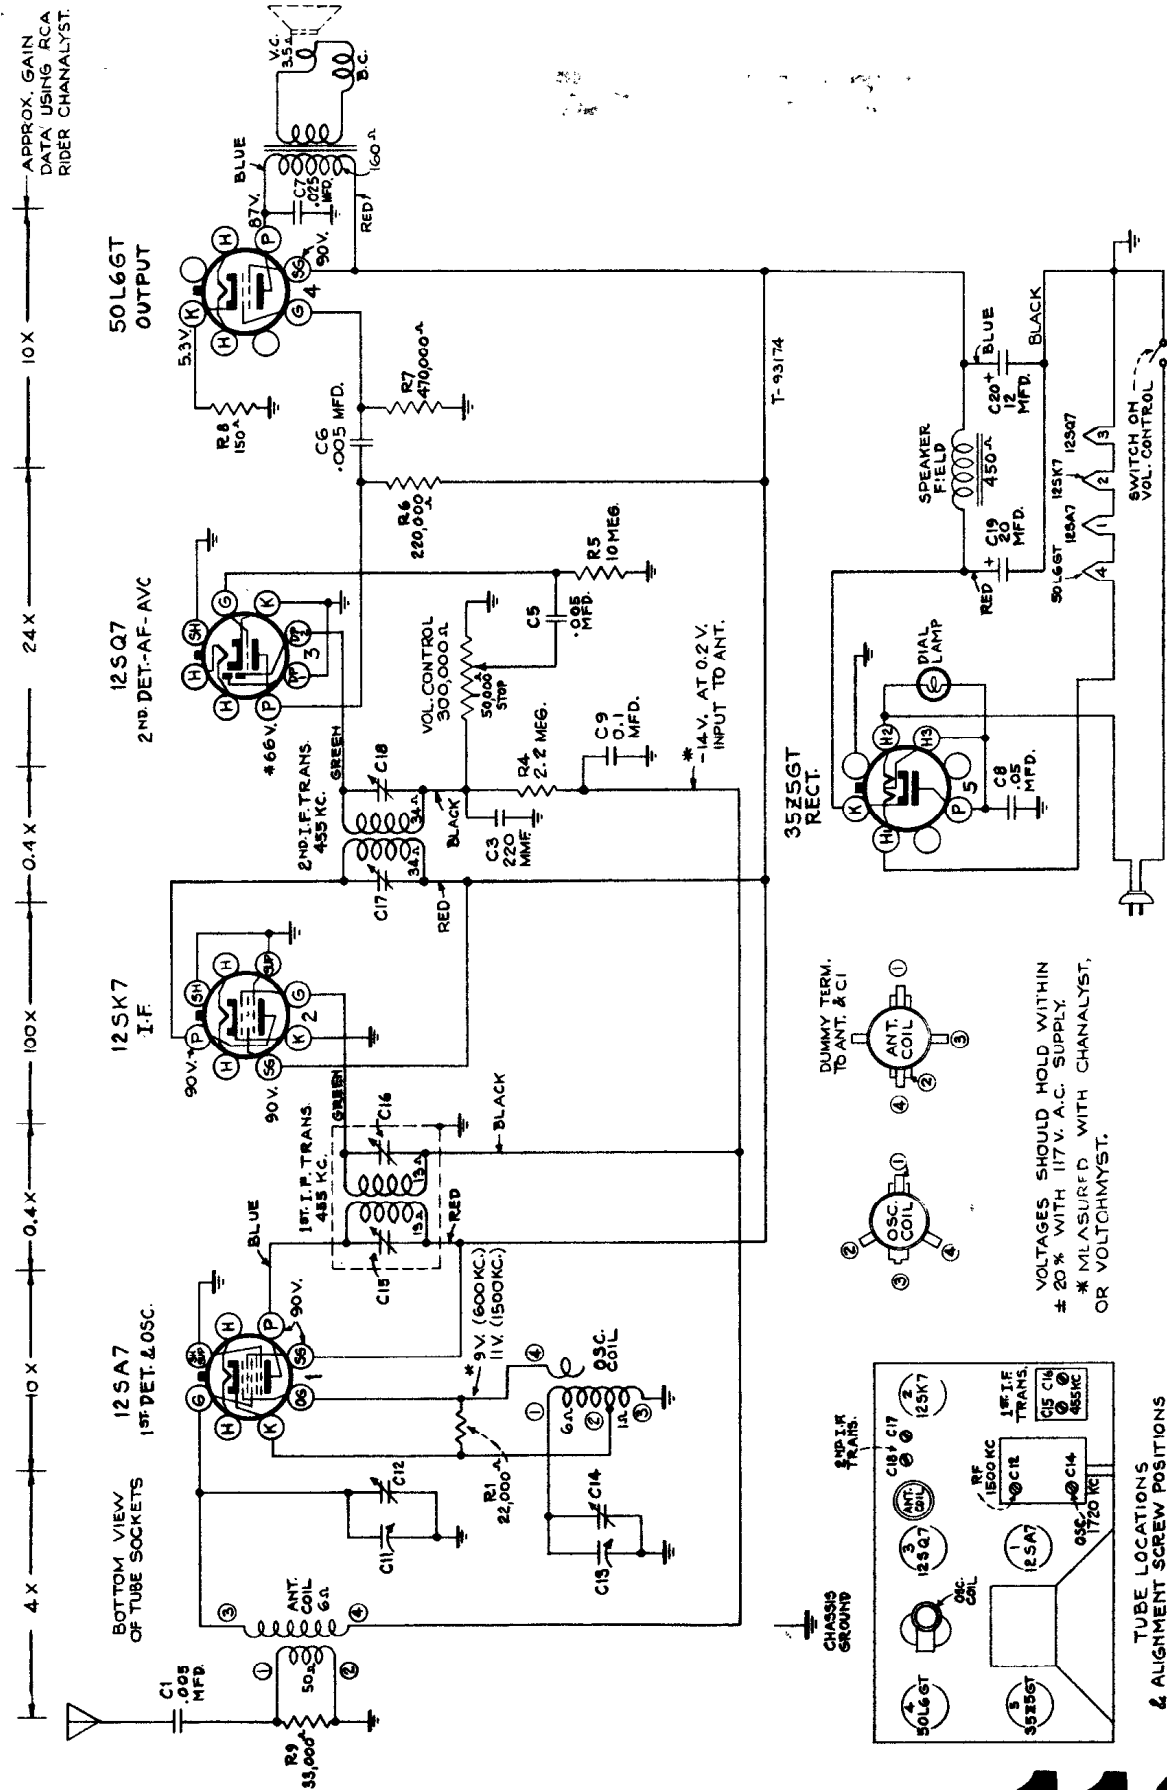

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## Alignment Procedure

**Output Meter Alignment.**—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.



| Steps | Connect the high side of test-oscillator to— | Tune test-osc. to— | Turn radio dial to—              | Adjust the following for max. peak output |
|-------|--|--------------------|----------------------------------|---|
| 1     | I-F grid, in series with .01 mfd.            | 455 kc             | Quiet point 1,600 kc end of dial | L8 and L9<br>2nd I-F transformer          |
| 2     | 1st Det. grid in series with .01 mfd.        |                    |                                  | L6 and L7<br>1st I-F transformer          |
| 3     | Ant. terminal in series with 200 mmfd.       | 1,650 kc           | Gang at minimum                  | C25 (osc.)<br>C31 (osc.)                  |
| 4     | Radiated signal 1300 kc                      |                    | Signal Frequency                 | C23 (ant.)                                |
| 5     | Repeat steps 3 and 4.                        |                    |                                  |   |

## RCA Model V-105

**Phonograph Motor Service Data:**—

The phonograph motor is of the self starting synchronous type and operates the turntable through friction drive between the motor drive spindle and the rubber tired idler on the rim of the turntable.

The motor should be lubricated once or twice a year by placing a few drops of S. A. E. 20 (or equivalent) on the turntable spindle and saturating the oil retaining felt pads on the motor shaft with S. A. E. 10 oil. Caution—The motor drive spindle and the rubber tire on the idler must be kept clean and entirely free from oil and grease at all times.

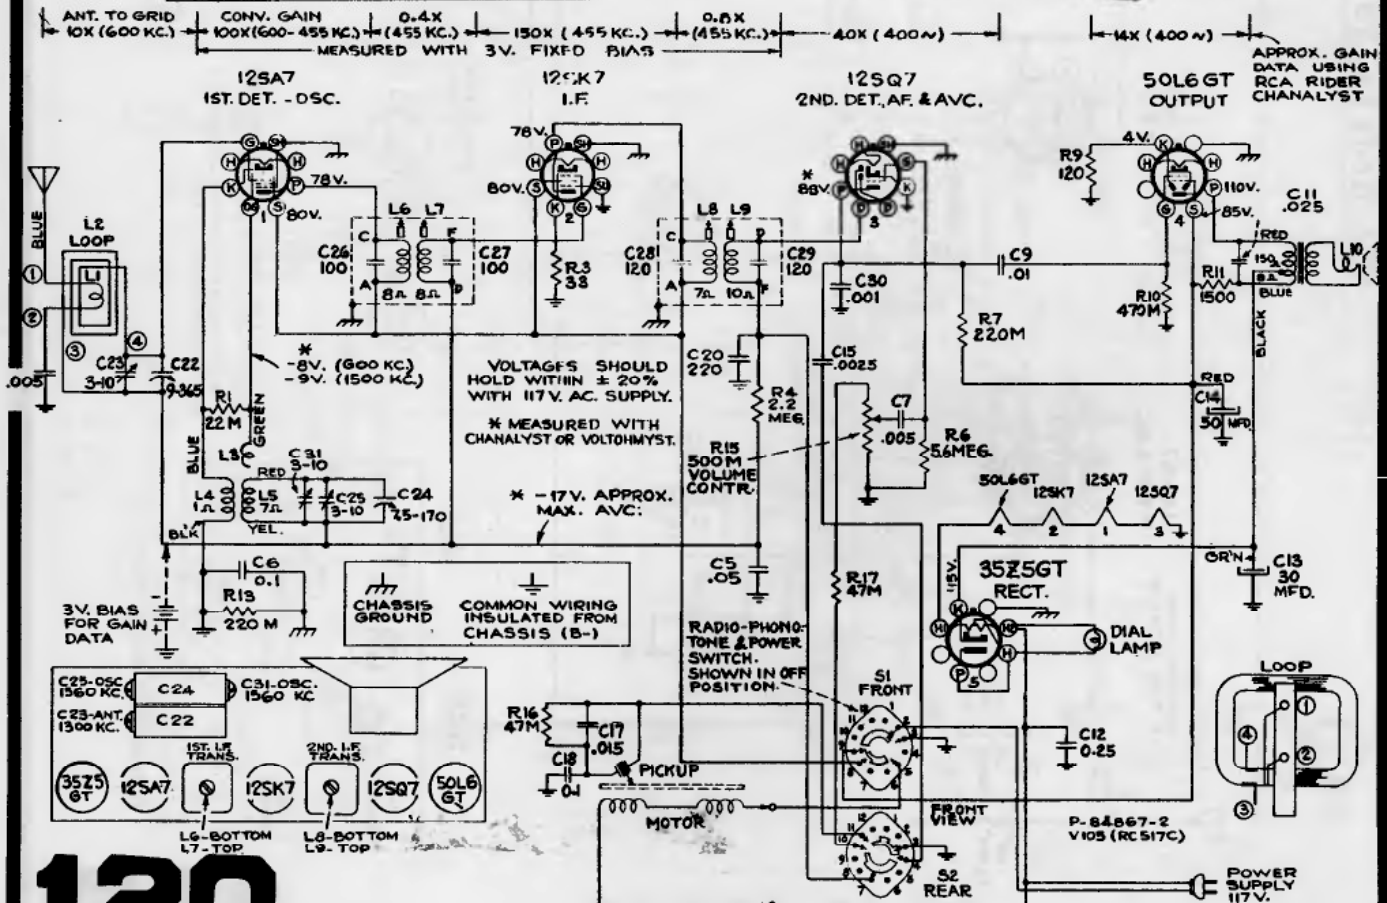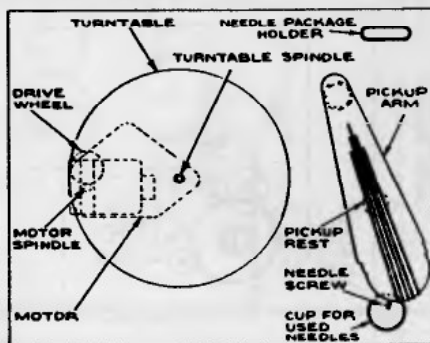


# 120

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## RCA Models V-215, V-219, V-221, V-225


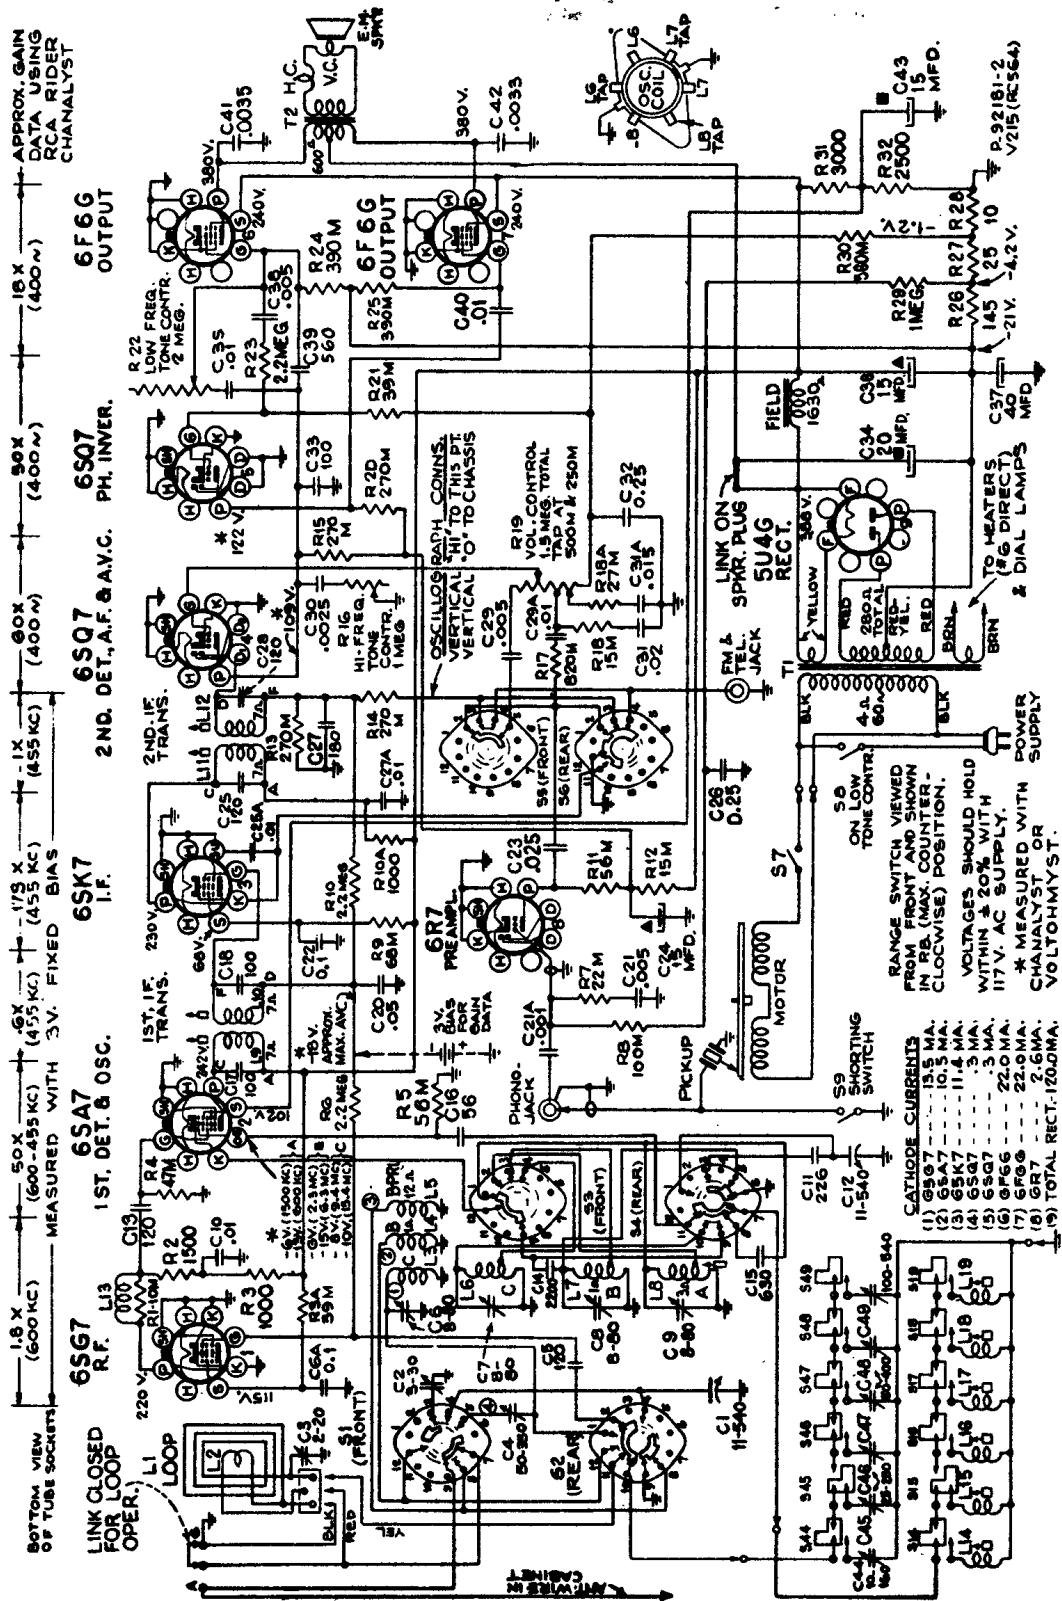


In Model V-219, the loop and phono motor connections are different, as shown in separate diagram on a following page. In Model V-225, R-8 is 220,000 ohms, R-17 is 1.8 Meg., and C-21 is .0035 mfd.



# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

RCA Models V-215,  
V-219, V-221, V-225

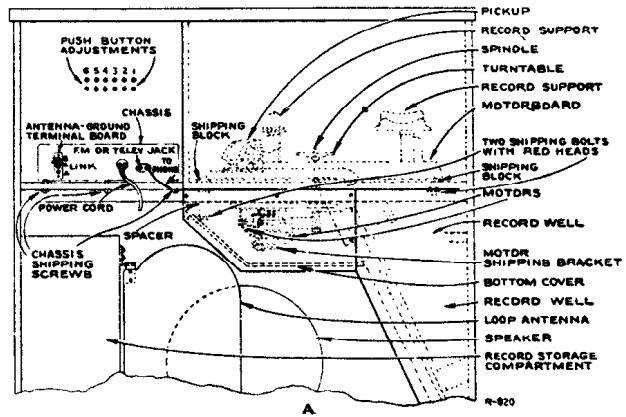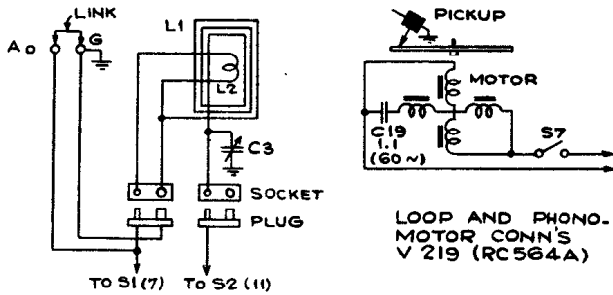

Model V-225

**Cathode-Ray Alignment** is the preferable method. Connections for the oscillograph are shown in the schematic diagram.

**Output Meter Alignment.**—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

**Electronic Voltmeter.**—The electronic voltmeter in the Chanalyst or VoltOhmyst provides an unexcelled output indicator. It should be connected to the AVC bus, and the test-oscillator output adjusted to produce several volts of AVC.

**Calibration Scale.**—The glass tuning dial may be easily removed from the cabinet and temporarily attached to the chassis for quick reference during alignment. In the event that only the chassis is returned for service, and the cabinet with its tuning dial is left in the customer's home, the full size calibration scale printed in this service note can be used as an accurate and convenient substitute for the regular dial.

**Using Tuning Dial.**—

1. Remove the dial glass from the cabinet.
2. With gang at full mesh move the pointer to a point (1/16) inch to the left of the reference mark at the left hand end of the dial backing plate.
3. Place the glass dial under the pointer so that the extreme left scale graduations coincide with the pointer. Use scotch tape to hold the glass dial in place.

**Using Dial Scale Printed In This Service Note.**—


Follow the procedure above, substituting the dial scale printed in this service note for the glass dial in the cabinet.

| Steps | Connect high side of test osc. to—  | Tune test osc. to— | Turn radio dial to—  | Adjust the following for maximum peak output— |
|-------|---|--------------------|----------------------|---|
| 1     | I-F grid in series with .01 mfd.  | 455 kc             | "A" Band<br>540 kc   | L12, L11<br>(2nd I-F Trans.)                  |
| 2     | 1st Det. grid in series with .01 mfd.   |                    |                      | L10, L9<br>(1st I-F Trans.)                   |
| 3     | Yellow loop lead in series with 200 mmf. (link closed)  | 1,500 kc           | "A" Band<br>1,500 kc | C9 (osc.)                                     |
| 4     |   | 600 kc             | "A" Band<br>600 kc   | L8 (osc.)                                     |
| 5     | Repeat steps 3 and 4  |                    |                      |   |
| 6     | Ant. terminal in series with 47 mmf. (link closed)  | 6.1 mc             | "B" Band<br>6.1 mc   | C8 (osc.)*<br>C2 (ant.)                       |
| 7     |   | 15.2 mc            | "C" Band<br>15.2 mc  | C7 (osc.)*<br>C6 (ant.)                       |
| 8     |   | 9.5 mc             | "C" Band<br>9.5 mc   | C4 (ant.)                                     |
| 9     | Repeat steps 7 and 8  |                    |                      |   |
| 10    | Install and connect chassis in cabinet, with link closed. Tune in a radiated oscillator signal at 1,500 kc and peak the "A" band ant. trimmer C3 (on loop). Rock in L8 for peak output at 600 kc. |                    |                      |   |

\* Use minimum capacity peak if two peaks can be obtained. Oscillator tracks 455 kc above signal on all bands.

### Critical Lead Dress

1. Push button, R.F. and oscillator leads should be separated as much as possible to reduce degeneration on push button reception.
2. R.F. choke in plate circuit of 6SG7 should be dressed towards the back apron.
3. Dress green push button lead under clamp and away from "C" band series capacitor.
4. Dress heater leads away from grids and diodes.
5. Dress phono. cables up and away from all wiring.
6. Dress all excess leads from transformer towards back towards transformer.
7. Keep output plate leads short and dressed close to chassis.
8. Dress green lead from 6SA7 screen to electrolytic down close to chassis.
9. Dress "C" band coil lead from oscillator coil to range switch down towards green lead.
10. Keep yellow loop lead clear of all wiring.
11. Dress ground bus of large electrolytic away from mounting lug.
12. Remove all excess slack from pilot light assembly and dress it close to chassis base away from volume control.
13. Dress oscillator grid capacitor (56 mmfd.) up and away from the screen and plate of 6SA7 socket.
14. A-C leads to "off-on" switch should be kept away from tone control cable to reduce hum.
15. Peaking coil should be dressed away from R-F grid resistor to reduce degeneration in R-F stage.
16. Dress oscillator push button lead in weld clamp on front apron away from 220 mmf. series condenser.
17. Keep all leads away from Phono-FM jack to prevent audio oscillation and hum. Dress underneath the shield provided.

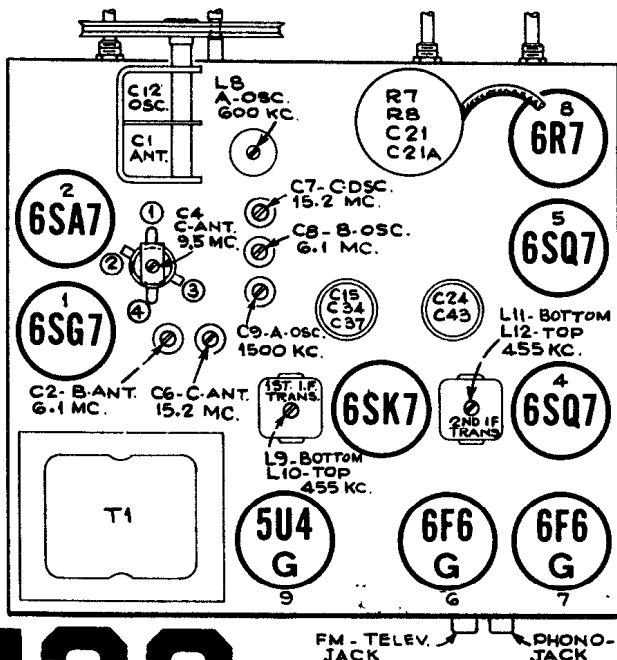

122

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS



# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## RCA Models 526, 527

**Output Meter Alignment.**—If this method is used connect the meter across the voice coil and turn the receiver volume control to maximum.

**Electronic Voltmeter.**—The electronic voltmeter in the Chanalyst or VoltOhmyst provides an unexcelled output indicator. It should be connected to the AVC bus.

**Test Oscillator.**—Connect the low side of the test oscillator to the receiver chassis through a .01 mfd. capacitor. When the electronic voltmeter is used as an alignment indicator the output of the test oscillator should be adjusted to produce several volts of AVC. With the output meter alignment method the test oscillator output should be kept as low as possible.






**Calibration Scale.**—The glass tuning dial may be easily removed from the cabinet and temporarily attached to the dial backing plate for quick reference during alignment.

**Power-Supply Polarity.**—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

| Steps | Connect the high side of test-oscillator to— | Tune test-osc. to— | Turn radio dial to—                 | Adjust the following for max. peak output— |
|-------|--|--------------------|-------------------------------------|--|
| 1     | 12SK7 grid in series with 0.1 mfd.           | 455 kc             | Quiet Point at 1,600 kc end of dial | C10, C9<br>2nd I-F Transformer             |
| 2     | 12SA7 grid in series with 0.1 mfd.           |                    |                                     | C8, C7<br>1st I-F Transformer              |
| 3     | Antenna term. in series with 47 mmf.         | 10 mc*             | 10 mc                               | C21 (osc.)**<br>C23 (ant.)                 |
| 4     | Antenna term. in series with 200 mmfd.       | 1,600 kc           | 1,600 kc                            | C14 (osc.)                                 |
| 5     | Radiation Loop                               | 1,300 kc           | Resonance on Signal                 | C15 (ant.)                                 |
| 6     | Radiation Loop                               | 600 kc             | 600 kc                              | C22 Osc.<br>Rock in                        |

\* It is recommended that this step be repeated using a received station of known frequency.

\*\* Use minimum capacity if two peaks can be obtained.

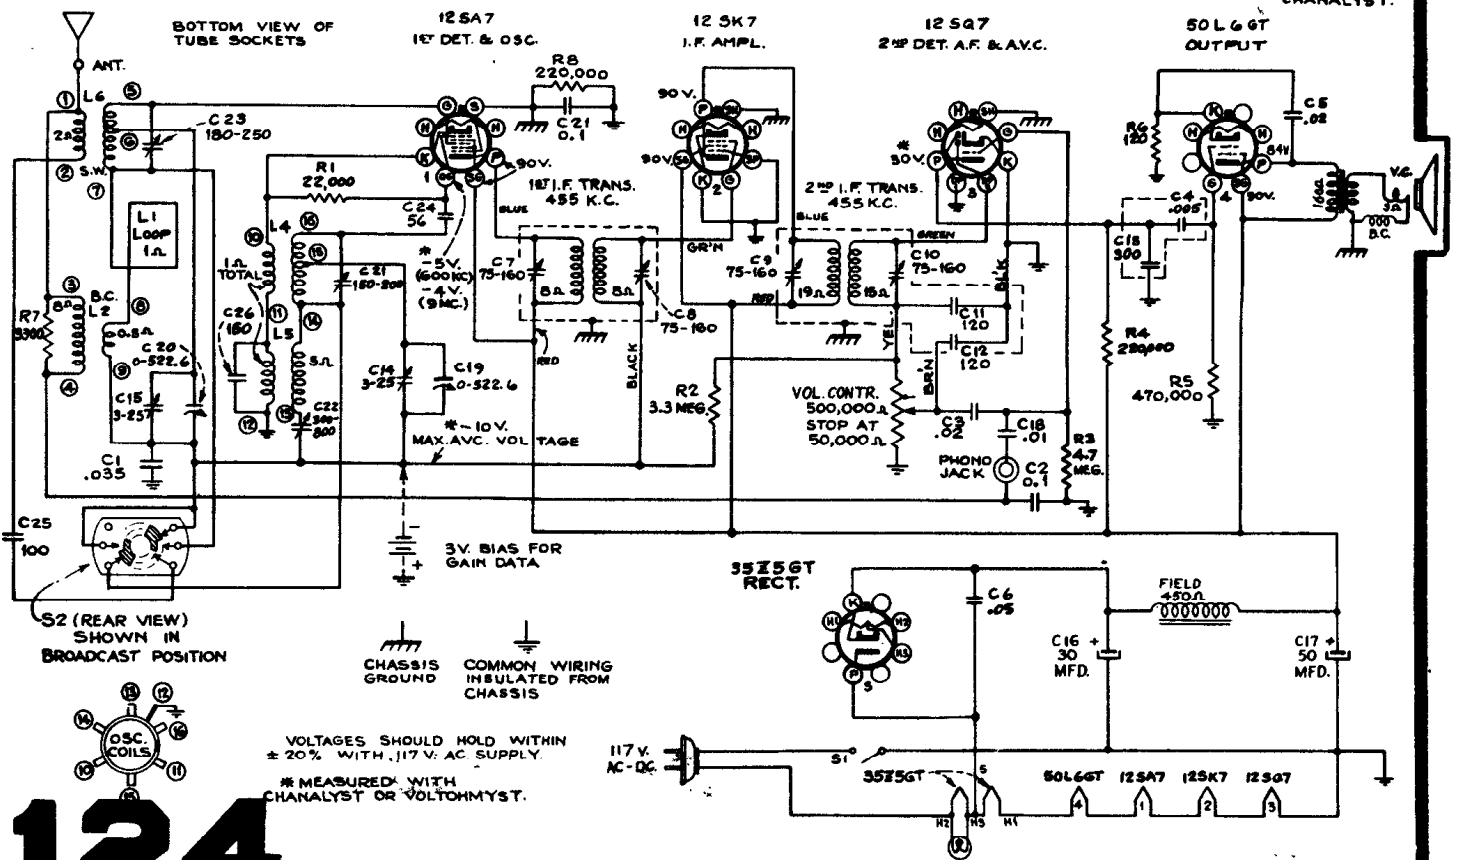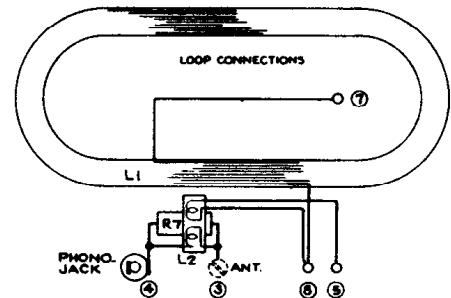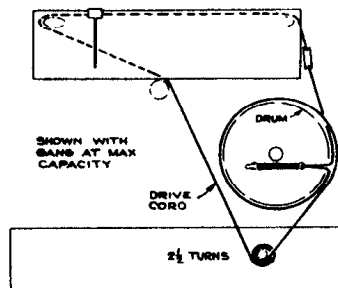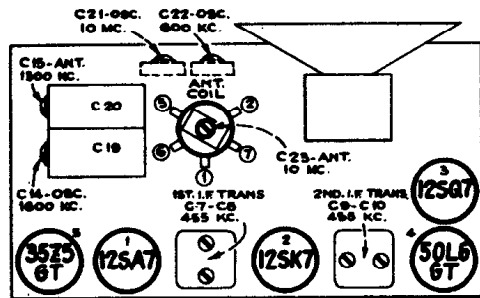


# 124

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

PICKUP    TURNTABLE    RECORD SUPPORTS    MOTORBOARD




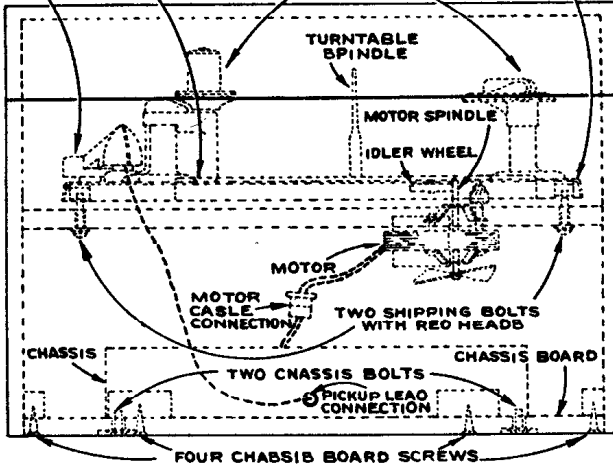


Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the schematic diagram.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the common negative, and keep the output as low as possible to avoid a-v-c action.

| Steps | Connect the high side of test-oscillator to— | Tune test-osc. to— | Turn radio dial to—              | Adjust the following for max. peak output |
|-------|--|--------------------|----------------------------------|---|
| 1     | I-F grid, in series with .01 mfd.            | 455 kc             | Quiet point 1,600 kc end of dial | L8 and L9<br>2nd I-F transformer          |
| 2     | 1st Det. grid in series with .01 mfd.        |                    |                                  | L6 and L7<br>1st I-F transformer          |
| 3     | Ant. terminal in series with 200 mfd.        | 1,600 kc           | Gang at minimum                  | C5 (osc.)<br>C6 (osc.)                    |
| 4     | Radiated signal 1,300 kc                     |                    | Signal Frequency                 | C3 (ant.)                                 |
| 5     | Repeat steps 3 and 4.                        |                    |                                  |   |

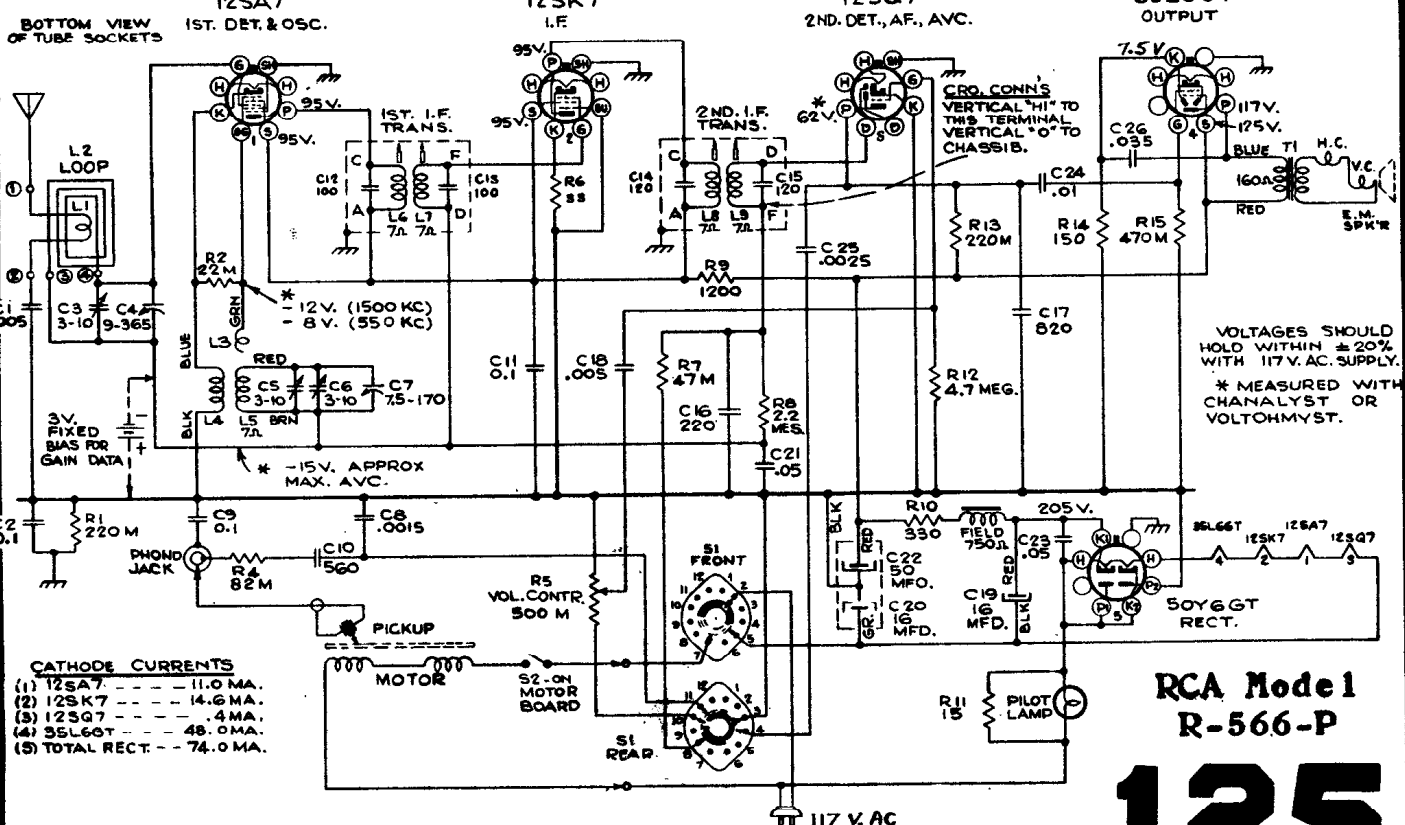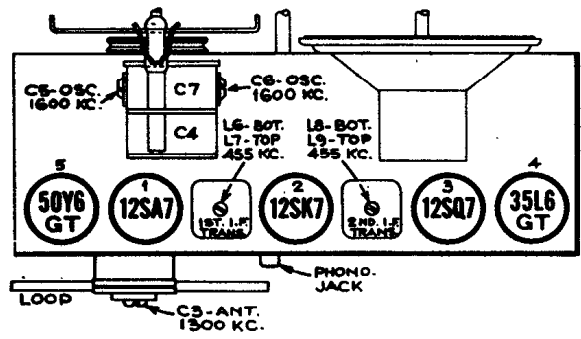
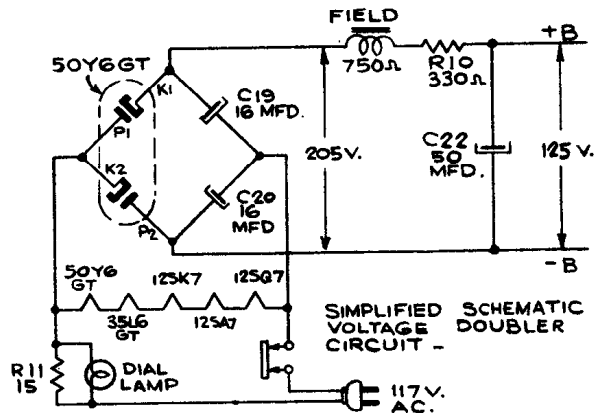


RCA Model 1  
R-566-P

# 125

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## RCA Model R-560-P

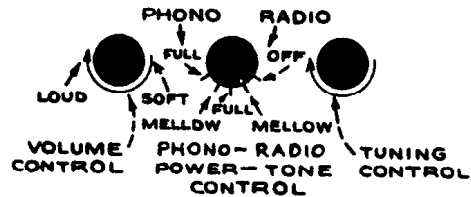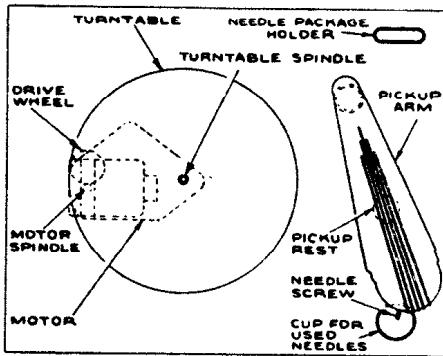

**Output Meter Alignment.**—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.


### Phonograph Motor Service Data:—

The phonograph motor is of the self starting synchronous type and operates the turntable through friction drive between the motor drive spindle and the rubber tired idler on the rim of the turntable.

The motor should be lubricated once or twice a year by placing a few drops of S. A. E. 20 (or equivalent) on the turntable spindle and saturating the oil retaining felt pads on the motor shaft with S. A. E. 10 oil. **Caution**—The motor drive spindle and the rubber tire on the idler must be kept clean and entirely free from oil and grease at all times.

**Power Supply.**—Although this model employs an a-c dc chassis, it is not suitable for use on d.c., as this would damage the motor.


| Steps | Connect the high side of test-oscillator to— | Tune test-osc. to— | Turn radio dial to—              | Adjust the following for max. peak output |
|-------|--|--------------------|----------------------------------|---|
| 1     | I-F grid, in series with .01 mfd.            | 455 kc             | Quiet point 1,800 kc end of dial | L8 and L9<br>2nd I-F transformer          |
| 2     | 1st Det. grid in series with .01 mfd.        |                    |                                  | L6 and L7<br>1st I-F transformer          |
| 3     | Ant. terminal in series with 200 mmfd.       | 1,650 kc           | Gang at minimum                  | C25 (osc.)<br>C31 (osc.)                  |
| 4     | Radiated signal 1300 kc                      |                    | Signal Frequency                 | C23 (ant.)                                |
| 5     | Repeat steps 3 and 4.                        |                    |                                  |   |

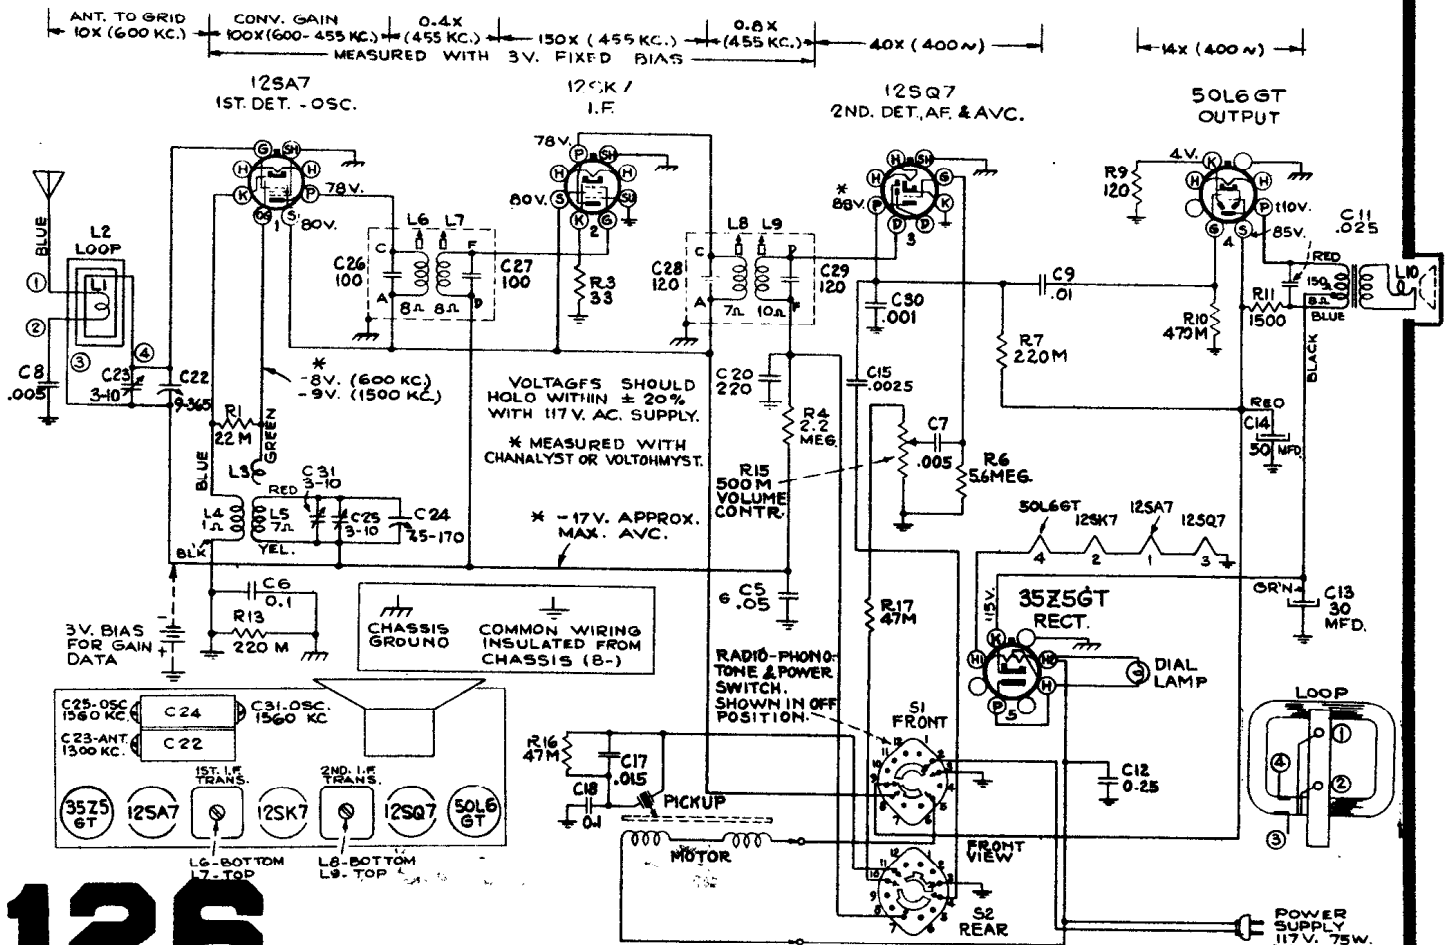

# 126

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

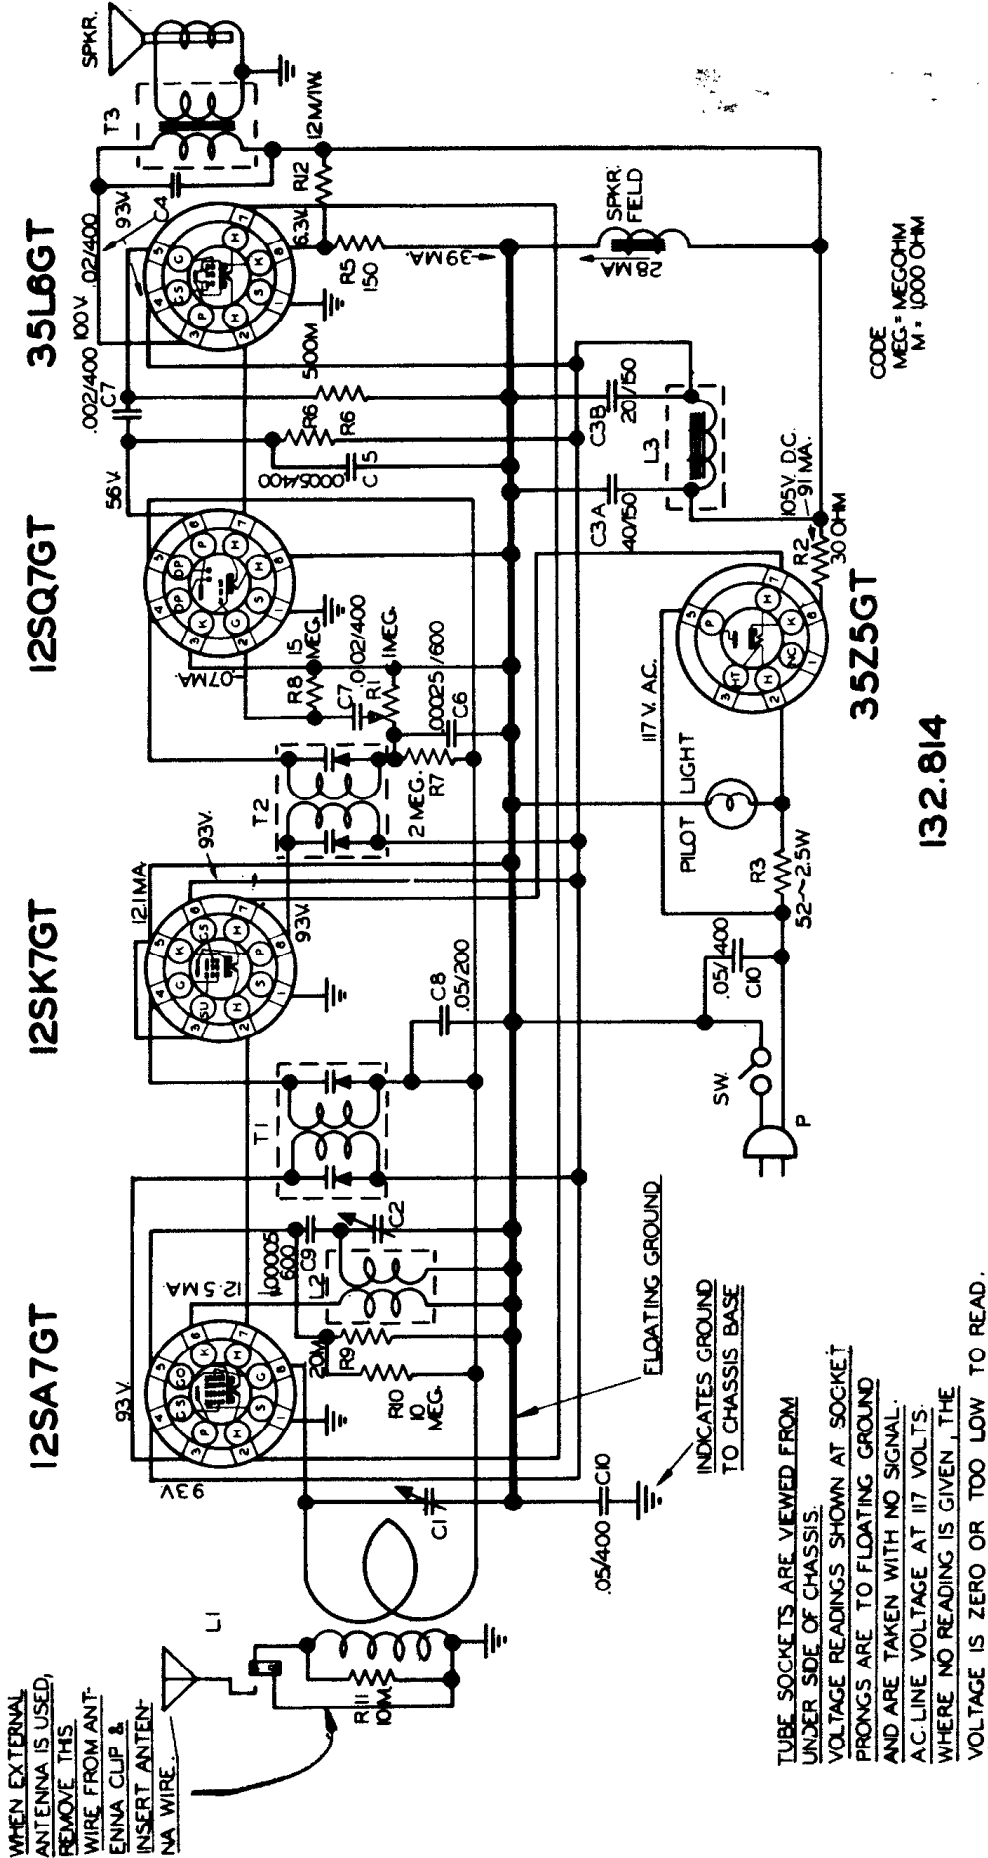

WHEN EXTERNAL ANTENNA IS USED, REMOVE THIS ENNA CLIP & WIRE FROM ANTENNA WIRE. INSERT ANTENNA WIRE.

INDICATES FLOATING GROUND TO CHASSIS BASE

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO FLOATING GROUND AND ARE TAKEN WITH NO SIGNAL. A.C. LINE VOLTAGE AT 117 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

CODE  
MEG. = MEGOHM  
M. = 1000 OHM

Models 7020 and 7022  
Factory No. 132.814

SEARS, ROEBUCK AND CO.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

Sears, Roebuck and Co. Model 7057. Factory No. 141.418

Output meter connection . . . . . Across loudspeaker voice coil  
 Output meter reading to indicate 500 milliwatts . . . . . 1.25 volts  
 Generator ground lead connection . . . . . Receiver chassis  
 Dummy antenna value to be in series with generator output . . . . . See chart below  
 Connection of generator output lead . . . . . See chart below  
 Generator modulation . . . . . 30%, 400 cycles  
 Position of Volume Control . . . . . Fully clockwise  
 Position of Tone Control . . . . . HI  
 Position of Dial Pointer with variable fully closed . . . . . On first mark to left of 540 kc calibration mark.

| POSITION OF VARIABLE | GENERATOR FREQUENCY | DUMMY ANTENNA | GENERATOR CONNECTION | TRIMMERS ADJUSTED (IN ORDER SHOWN) | TRIMMER FUNCTION | ANT. COUPLED APPROXIMATE MICROVOLTS |
|----------------------|---------------------|---------------|----------------------|------------------------------------|------------------|-------------------------------------|
| Open                 | 455 kc              | .1 mfd.       | 7H7 Grid             | T2, T1                             | IF               | --                                  |
| Fully open           | 1720 kc             | .00005 mfd.   | Ant. Lead            | C2B*                               | Oscillator       | --                                  |
| 1400 kc              | 1400 kc             | .00005 mfd.   | Ant. Lead            | C2A*                               | Antenna          | 80**                                |


### IMPORTANT ALIGNMENT NOTES

\* C2 A and B are best adjusted when the receiver is in the cabinet, through holes provided in the back cover.

\*\* 120 microvolts per meter using standard Hazeltine alignment loop 24 inches from receiver loop.

For operation of the chassis outside the cabinet with the phonograph plug disconnected, connect a jumper wire across the two top terminals of the phono socket, and between the two terminals marked "X" on the Recorder socket shown below.

The alignment procedure should be repeated stage by stage, in the original order, for greatest accuracy. Always keep the output from the test oscillator at its lowest possible value to make the AVG action of the receiver ineffective.

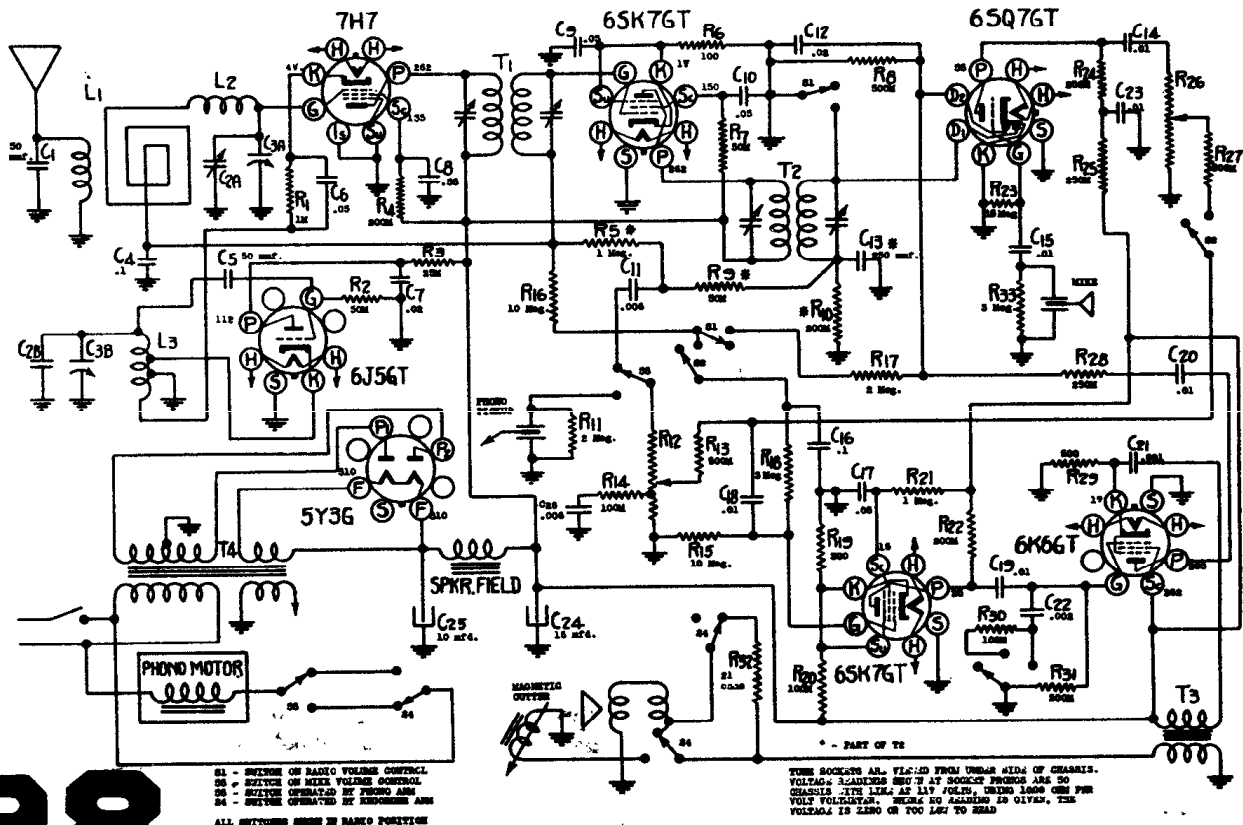




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## SEARS, ROEBUCK AND CO.

Model 7094. Factory No. 101.667

Output meter connections . . . . . Across loud speaker voice coil  
 Connection of signal generator ground lead . . . . . Receiver Chassis  
 Connection of signal generator output lead . . . . . See chart below  
 Dummy antenna valve to be in series with generator output. . . . . See chart below  
 Position of Volume Control . . . . . Fully on  
 Position of Tone Control . . . . . Brilliant

| POSITION OF TUNER | GENERATOR FREQUENCY | DUMMY ANTENNA | GENERATOR CONNECTION | TRIMMER ADJUSTMENTS (IN ORDER SHOWN) | TRIMMER FUNCTION |
|-------------------|---------------------|---------------|----------------------|--------------------------------------|------------------|
| Low Freq. Limit   | 455 kc              | .1 mfd.       | Transl. Grid         | T2, T1                               | IF               |
| Low Freq. Limit   | 455 kc              | .1 mfd.       | Transl. Grid         | C12*                                 | IF Wave Trap     |
| Hi Freq. Limit    | 1610 kc             | .00005 mfd.   | Ant. Conn.           | C16                                  | Oscillator       |
| Hi Freq. Limit    | 2520 kc             | .00005 mfd.   | Ant. Conn.           | C13*                                 | Image Rejector   |
| Hi Freq. Limit    | 1610 kc             | .00005 mfd.   | Ant. Conn.           | C16                                  | Oscillator       |
| Hi Freq. Limit    | 1610 kc             | .00005 mfd.   | Ant. Conn.           | C1                                   | Antenna          |
| Hi Freq. Limit    | 1610 kc             | .00005 mfd.   | Ant. Conn.           | C4                                   | R.F.             |
| 600 kc (rock)     | 600 kc              | .00005 mfd.   | Ant. Conn.           | L5                                   | Padder           |

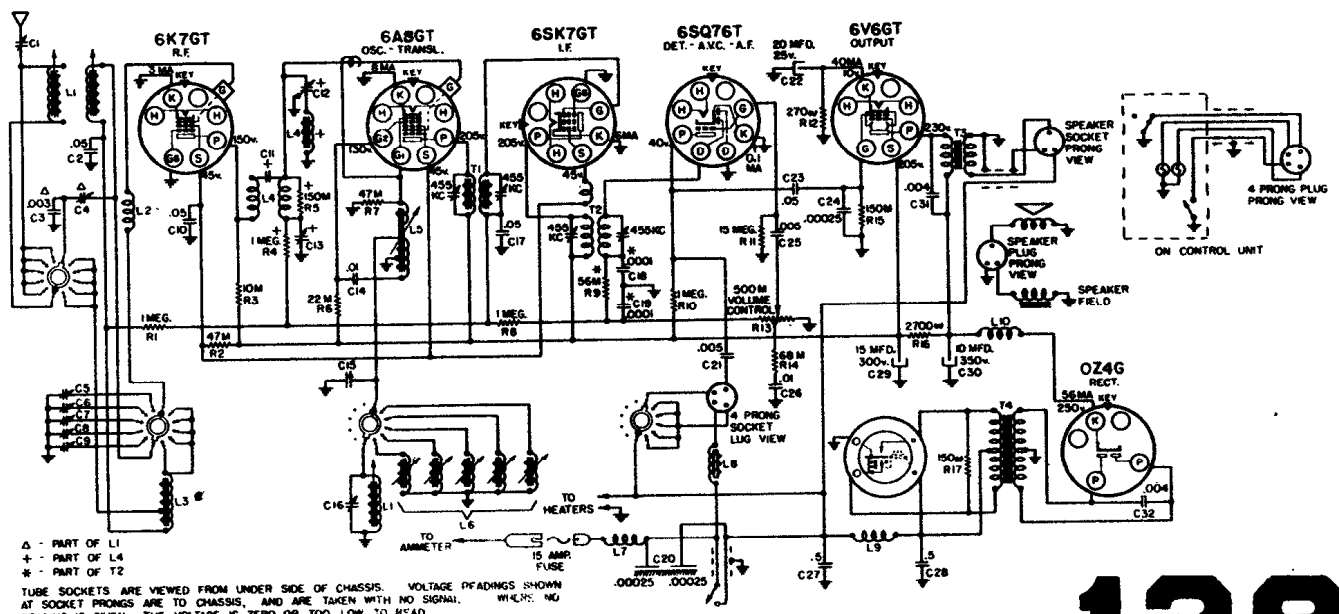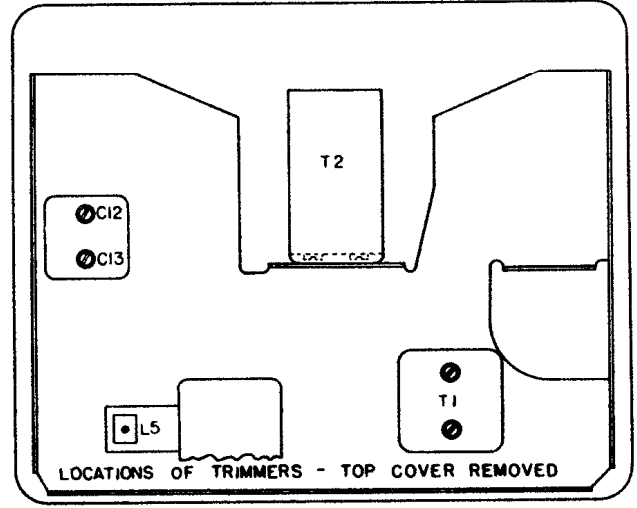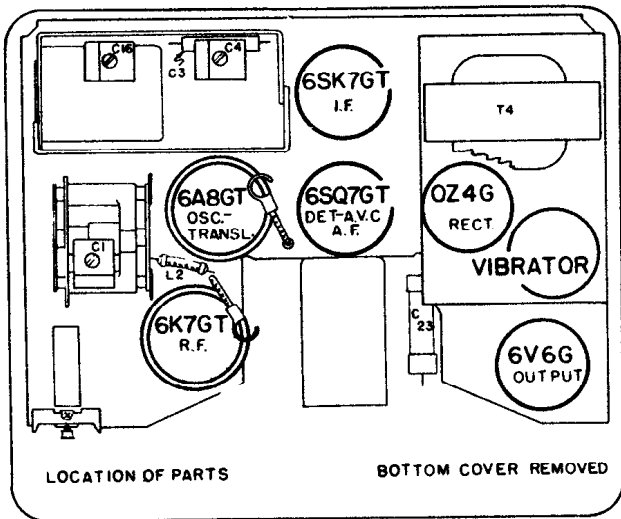


△ - PART OF L1  
 + - PART OF L4  
 \* - PART OF T2  
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. WHEN NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.  
 "A" BATTERY - 6 VOLTS CURRENT DRAIN - 72 AMPERES




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

Sears, Roebuck and Co. Model 7083. Factory No. 101.686

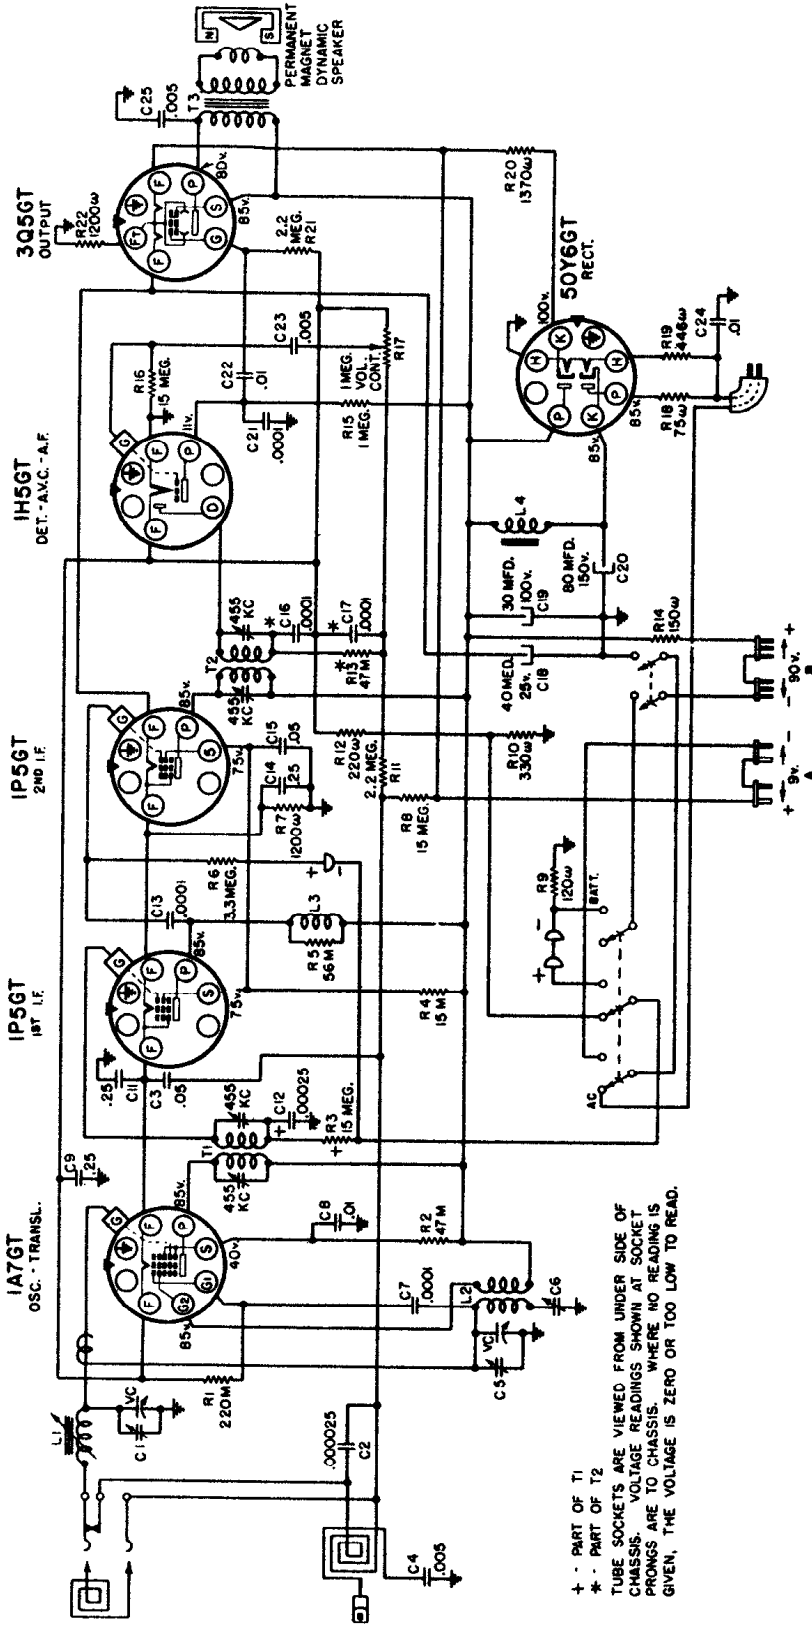

| POSITION OF VARIABLE | GENERATOR FREQUENCY | DUMMY ANTENNA | GENERATOR CONNECTION  | TRIMMER ADJUSTMENT (IN ORDER SHOWN) | TRIMMER FUNCTION |
|----------------------|---------------------|---------------|-----------------------|-------------------------------------|------------------|
| Closed               | 455 kc              | .1 mfd.       | 1A7GT Translator Grid | T2, T1                              | IF               |
| Open                 | 1620 kc             | -             | Radiating Loop        | C5                                  | Oscillator       |
| 1400 kc.             | 1400 kc             | -             | Radiating Loop        | C1                                  | Translator       |
| 600 kc (rock)        | 600 kc              | -             | Radiating Loop        | C6, L1                              | Padde.           |


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

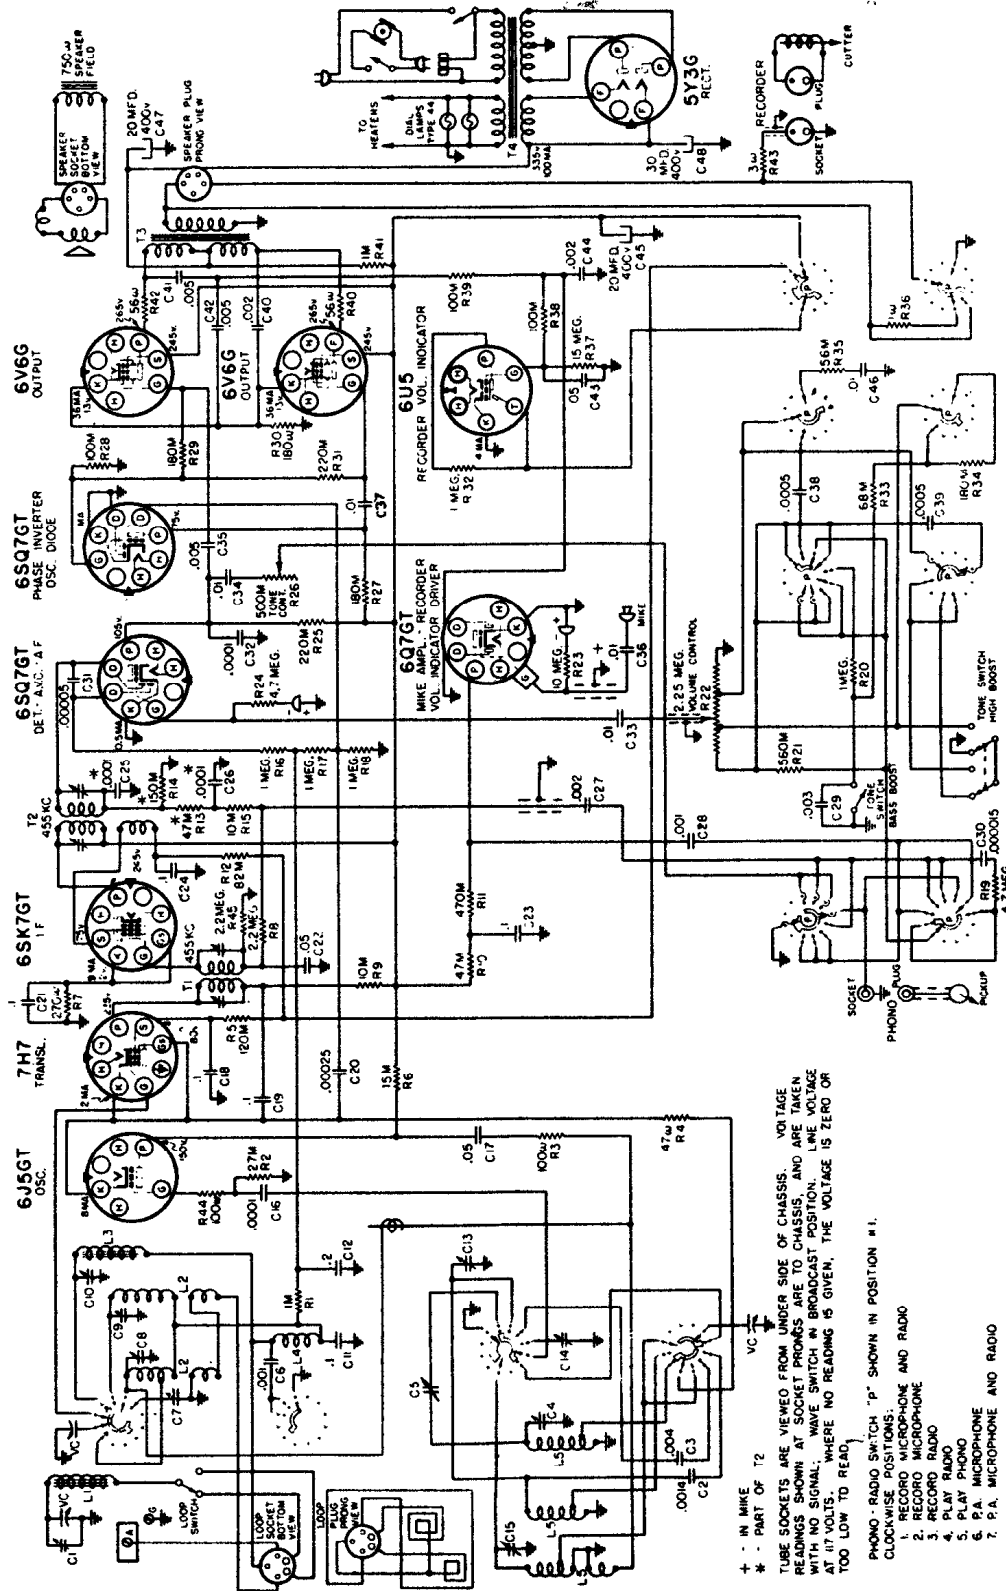

\* - IN MIKE  
 + - PART OF T2  
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE CHASSIS AND ARE TAKEN WITH NO SIGNAL, UNLESS OTHERWISE NOTED. PROGRAM CAST POSITION, LINE VOLTAGE WITH NO SIGNAL, WHERE NO READINGS IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.  
 PHONO - RADIO SWITCH "P" SHOWN IN POSITION #1.  
 CLOCKWISE POSITIONS:  
 1. RECORD MICROPHONE AND RADIO  
 2. RECORD MICROPHONE  
 3. RECORD RADIO  
 4. PLAY RADIO  
 5. PLAY PHONO  
 6. P.A. MICROPHONE  
 7. P.A. MICROPHONE AND RADIO


Sears, Roebuck and Co. Model 7070. Factory No. 101.682

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

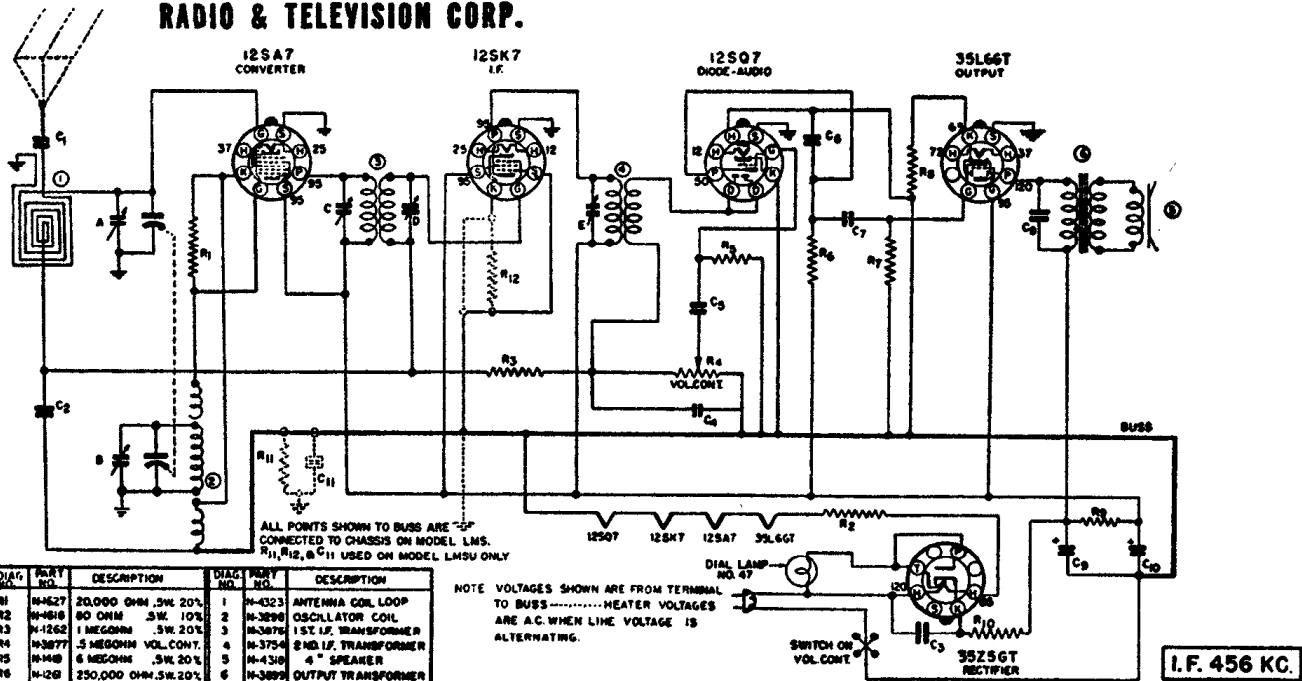

| DIAG. NO. | PART NO. | DESCRIPTION          | DIAG. NO. | PART NO. | DESCRIPTION          |
|-----------|----------|----------------------|-----------|----------|----------------------|
| R1        | N-427    | 20,000 OHM .5W 20%   | 1         | N-4323   | ANTENNA COIL LOOP    |
| R2        | N-416    | 50 OHM .5W 10%       | 2         | N-3898   | OSCILLATOR COIL      |
| R3        | N-155    | 1 MEG OHM .5W 20%    | 3         | N-3876   | 1ST I.F. TRANSFORMER |
| R4        | N-377    | 5 MEG OHM VOL. CONT. | 4         | N-3754   | 2ND I.F. TRANSFORMER |
| R5        | N-48     | 4 MEG OHM .5W 20%    | 5         | N-430    | 4" SPEAKER           |
| R6        | N-126    | 350,000 OHM .5W 20%  | 6         | N-3899   | OUTPUT TRANSFORMER   |
| R7        | N-1264   | 500,000 OHM .5W 20%  |           |          |                      |
| R8        | N-3754   | 200 OHM .5W 10%      |           |          |                      |
| R9        | N-3341   | 1000 OHM .5W 20%     |           |          |                      |
| R10       | N-192    | 25 OHM .5W 20%       |           |          |                      |
| R11       | N-1779   | 150,000 OHM .5W 20%  |           |          |                      |
| R12       | N-1482   | 250 OHM .5W 20%      |           |          |                      |
|           |          |                      |           | N-4310   | 2 GANG CONDENSER     |
| C1        | N-1344   | .01 MFD. 400V.       |           |          |                      |
| C2        | N-1345   | .05 MFD. 200V.       |           |          |                      |
| C3        | N-1346   | .05 MFD. 400V.       |           |          |                      |
| C4        | N-1374   | 100 MMFD.            |           |          |                      |
| C5        | N-2712   | .004 MFD.            |           |          |                      |
| C6        | N-1447   | .0005 MFD. 400V.     |           |          |                      |
| C7        | N-1344   | .01 MFD. 400V.       |           |          |                      |
| C8        | N-1378   | .02 MFD. 400V.       |           |          |                      |
| C9        | N-3302   | 35 MFD. 150V. ELECT. |           |          |                      |
| C10       |          | 30 MFD. 50V.         |           |          |                      |
| C11       | N-3085   | .22 MFD. 200V.       |           |          |                      |

NOTE VOLTAGES SHOWN ARE FROM TERMINAL TO BUSS.....HEATER VOLTAGES ARE A.C. WHEN LINE VOLTAGE IS ALTERNATING.

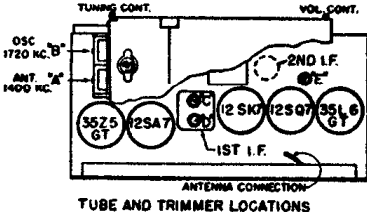

MODEL LMS-LMSU  
6 TUBE AC-DC

Voltages shown on the circuit diagram are from socket terminals to ground buss. In measuring voltages use a voltmeter having a resistance of at least 1000 ohms per volt. Allowances should be made for variations in line voltage.

## ALIGNMENT PROCEDURE

**GENERAL DATA.** The alignment of this receiver requires the use of a test oscillator that will cover the frequencies of 456, 600, 1400 and 1720 KC and an output meter to be connected across the primary and secondary of the output transformer. If possible, all alignments should be made with the volume control on maximum and the test oscillator output as low as possible to prevent the AVC from operating and giving false readings.


**CORRECT ALIGNMENT PROCEDURE.** The intermediate frequency (I.F.) stages should be aligned properly as the first step. After the I.F. transformers have been properly adjusted and peaked, the broadcast band should be adjusted.

**I. F. ALIGNMENT.** Remove the chassis and loop antenna from the cabinet and set them up on the bench so that they occupy exactly the same respective positions on the bench as they did in the cabinet. Care should be taken to have no iron or other metal near

the loop. Do not make this set-up on a metal bench. With the gang condenser set at minimum, adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (12SA7) through a .05 or .1 mfd. condenser. The ground on the test oscillator should be connected to the ground buss, indicated on the circuit diagram. Align all three I.F. trimmers to peak or maximum reading on the output meter.

**BROADCAST BAND ALIGNMENT.** Connect the test oscillator to the antenna of the set through a 100 mmfd. (.0001) condenser. With the gang condenser set at minimum capacity, set the test oscillator at 1720 KC, and adjust the oscillator (or 1720 KC trimmer) on gang condenser. Next—set the test oscillator at 1400 KC, and tune in the signal on the gang condenser. Adjust the antenna trimmer (or 1400 KC trimmer) for maximum signal. Next set the test oscillator at 600 KC, and tune in signal on condenser to check alignment of coils.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

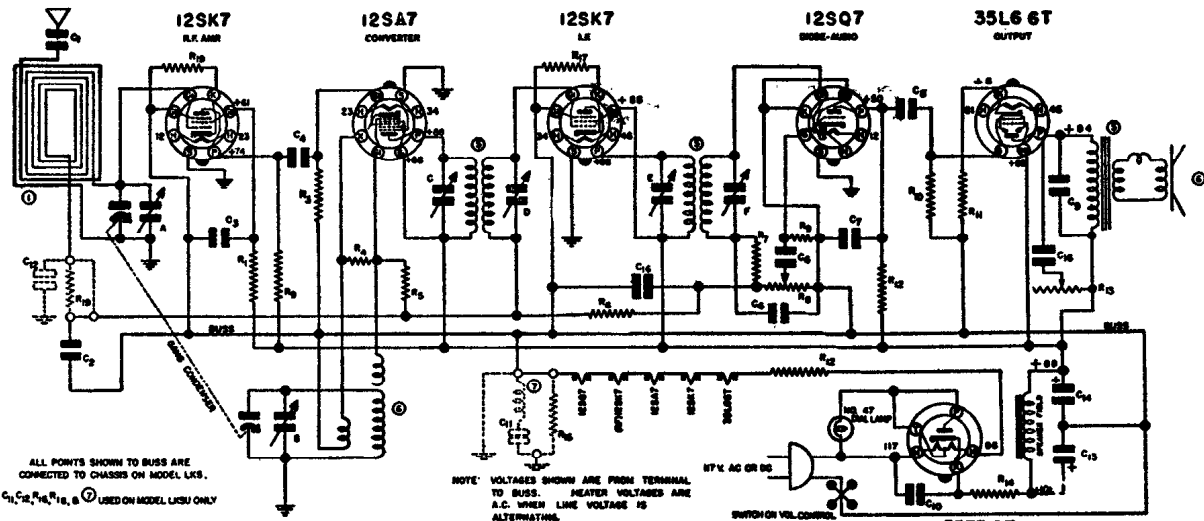

ALL POINTS SHOWN TO BUSS ARE CONNECTED TO CHASSIS ON MODEL LKS.  
C<sub>1</sub>, C<sub>2</sub>, R<sub>1</sub>, R<sub>2</sub>, R<sub>3</sub>, R<sub>4</sub> USED ON MODEL LKS ONLY



NOTE: VOLTAGES SHOWN ARE FROM TERMINAL TO BUSS. HEATER VOLTAGES ARE A.C. WHEN LINE VOLTAGE IS ALTERNATING.

| DIAG. NO. | PART NO. | DESCRIPTION               | DIAG. NO. | PART NO. | DESCRIPTION             |
|-----------|----------|---------------------------|-----------|----------|-------------------------|
| C1        | N-1344   | .01 MFD. 400 V. 20%       | R11       | N-4087   | 180 OHM 5 W. 10%        |
| C2        | N-1345   | .05 MFD. 200 V. 80%       | R12       | N-4088   | 220,000 OHM 5 W. 20%    |
| C3        | N-1343   | .25 MFD. 200 V. 80%       | R13       | N-4083   | 25,000 OHM TONE CONTROL |
| C4        | N-1233   | 150 MFD. MICA 20%         | R14       | N-4086   | 33 OHM 1.0 W. 20%       |
| C5        | N-1374   | 100 MFD. MICA 20%         | R15       | N-4088   | 33 OHM 1.0 W. 20%       |
| C6        | N-2053   | .003 MFD. 800 V. 20%      | R16       | N-4238   | 220,000 OHM 5 W. 20%    |
| C7        | N-4447   | .0005 MFD. 400 V. 80%     | R17       | N-1481   | 75 OHM 5 W. 20%         |
| C8        | N-1344   | .01 MFD. 400 V. 20%       | R18       | N-1252   | 1 MEGOHM 5 W. 20%       |
| C9        | N-1376   | .02 MFD. 400 V. 20%       | R19       | N-1481   | 75 OHM 5 W. 20%         |
| C10       | N-1346   | .05 MFD. 400 V. 20%       |           |          |                         |
| C11       | N-3096   | .22 MFD. 250 V. 10%       |           |          |                         |
| C12       | N-1345   | .05 MFD. 200 V. 80%       |           |          |                         |
| C13       | N-4015   | .15 MFD. 150 V. 20%       |           |          |                         |
| C14       | N-4015   | .30 MFD. 150 V. 20%       | 1         | N-4022   | ANTENNA LOOP COIL       |
| C15       | N-1346   | .05 MFD. 400 V. 20%       | 2         | N-3298   | OSCILLATOR COIL         |
| C16       | N-1374   | 100 MFD. MICA 20%         | 3         | N-4028   | 1ST. I.F. TRANSFORMER   |
| R1        | N-1299   | 15,000 OHM .5 W. 20%      | 4         | N-4076   | 2ND. I.F. TRANSFORMER   |
| R2        | N-4086   | 22,000 OHM .5 W. 10%      | 5         | N-4082   | OUTPUT TRANSFORMER      |
| R3        | N-4083   | 47,800 OHM .5 W. 20%      | 6         | N-4082   | 6" DYNAMIC SPEAKER      |
| R4        | N-4029   | 22,000 OHM .5 W. 20%      | 7         |          | CHOKER (WOUND ON C15)   |
| R5        | N-1283   | 10 MEGOHM .5 W. 20%       |           |          |                         |
| R6        | N-4082   | 3.3 MEGOHM .5 W. 20%      |           |          |                         |
| R7        | N-4083   | 47,000 OHM .5 W. 20%      |           |          |                         |
| R8        | N-4071   | 0.5 MEGOHM VOLUME CONTROL |           |          |                         |
| R9        | N-4081   | 4.7 MEGOHM .5 W. 20%      |           |          |                         |
| R10       | N-4087   | 470,000 OHM .5 W. 20%     |           |          |                         |

I.F.—456 K.C.

MODEL LKS  
6 TUBE A.C.-D.C.  
SUPERHETERODYNE

Sonora Radio

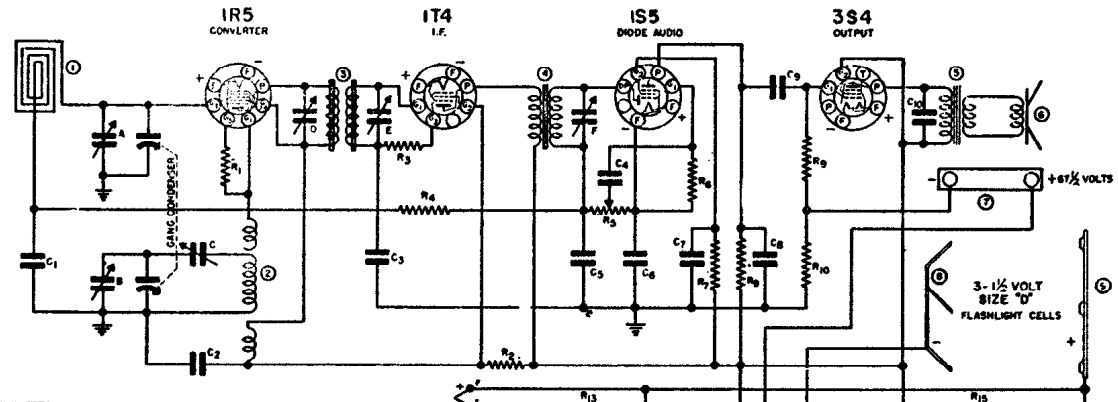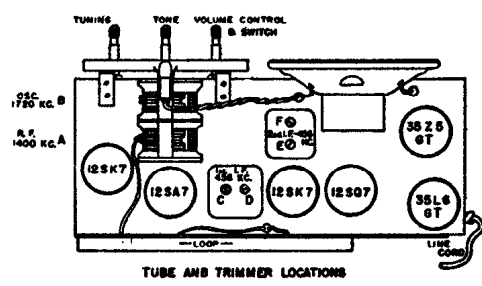


| DIAG. NO. | PART NO. | DESCRIPTION             | DIAG. NO. | PART NO. | DESCRIPTION                |
|-----------|----------|-------------------------|-----------|----------|----------------------------|
| R1        | N-1778   | 100,000 OHM .5 W. 20%   | C1        | N-1345   | .05 MFD. 200 V. 80%        |
| R2        | N-4276   | 47,000 OHM .5 W. 10%    | C2        | N-1345   | .05 MFD. 200 V. 80%        |
| R3        | N-1263   | 10 MEGOHM .5 W. 20%     | C3        | N-1344   | .01 MFD. 400 V. 20%        |
| R4        | N-4277   | 2.2 MEGOHM .5 W. 20%    | C4        | N-2712   | .004 MFD. 400 V.           |
| R5        | N-4210   | 1 MEGOHM VOLUME CONTROL | C5        | N-1351   | .1 MFD. 200 V.             |
| R6        | N-4028   | 5.0 MEGOHM .5 W. 20%    | C6        | N-1344   | .01 MFD. MICA              |
| R7        | N-4082   | 3.3 MEGOHM .5 W. 20%    | C7        | N-1344   | .01 MFD. 400 V.            |
| R8        | N-1282   | 1 MEGOHM .5 W. 20%      | C8        | N-1342   | 30 MFD. MICA               |
| R9        | N-4277   | 2.2 MEGOHM .5 W. 20%    | C9        | N-1344   | .01 MFD. 400 V.            |
| R10       | N-4279   | 820 OHM .5 W. 10%       | C10       | N-1344   | .01 MFD. 400 V.            |
| R11       | N-4228   | 680 OHM .5 W. 10%       | C11       | N-4255   | 1.7 M. SPEAKER             |
| R12       | N-4832   | 36 OHM .5 W. 10%        | C12       | N-4221   | 100 MFD. 12V.              |
| R13       | N-4281   | 1800 OHM .5 W. 10%      | C13       | N-4220   | 30 MFD. 150V. ELECTROLYTIC |
| R14       | N-4085   | 2200 OHM .5 W. 10%      | C14       | N-1346   | .05 MFD. 400 V.            |
| R15       |          | 1870 OHM 4.8 W. 3%      |           |          |                            |
| R16       | N-4255   | 82 OHM 1.3 W. 10%       |           |          |                            |
| R17       |          | 1000 OHM 9.6 W. 10%     |           |          |                            |

SWITCH SHOWN IN COUNTER-CLOCKWISE (A.C.-D.C.) POSITION.

| POS.    | CONTACTS   | WIRING               |
|---------|------------|----------------------|
| AC-DC   | 2-3, 11-12 | 2-3, 8-10            |
| OFF     | NONE       | 2-3, 8-10-11         |
| BATTERY | 2-3, 8-10  | 2-3, 8-9, 8-10-11-12 |


I.F. 456 KC

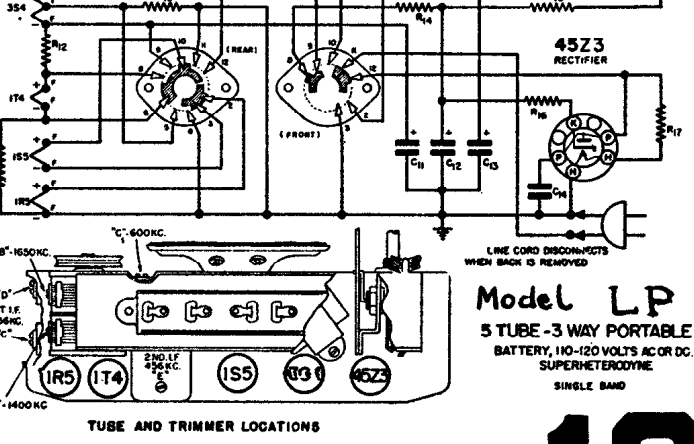

Model LP  
5 TUBE - 3 WAY PORTABLE  
BATTERY, 110-120 VOLTS AC OR DC.  
SUPERHETERODYNE  
SINGLE BAND

## SPARTON SUPERHETERODYNE MODEL 531-X & 532-X INTERMEDIATE FREQUENCY 456 K.C.

BOTTOM VIEW OF ALL SOCKET CONNECTIONS

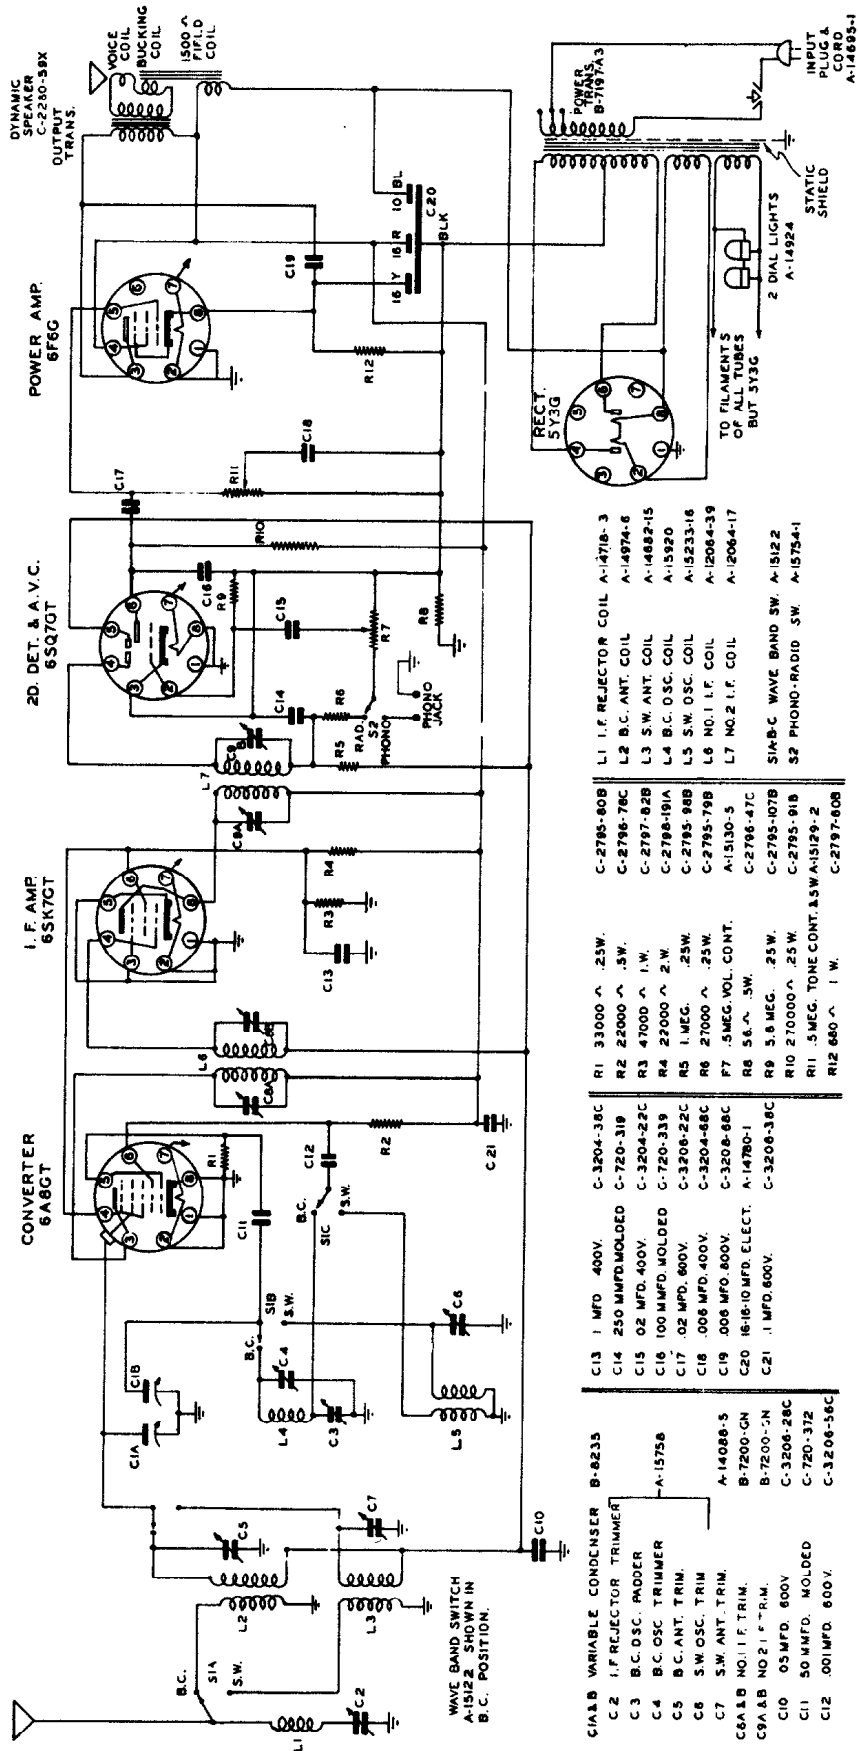


B.C. OSC. CIRCUIT FREQUENCY IS ABOVE  
S.W. ANT. REQ. IS ABOVE  
S.W. OSC. CIRCUIT FREQ. IS BELOW  
ANTENNA FREQ.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## SPARTON SUPERHETERODYNE MODELS 652-X & 652-XD INTERMEDIATE FREQUENCY 456 K.C.


BOTTOM VIEWS OF ALL SOCKET CONNECTIONS

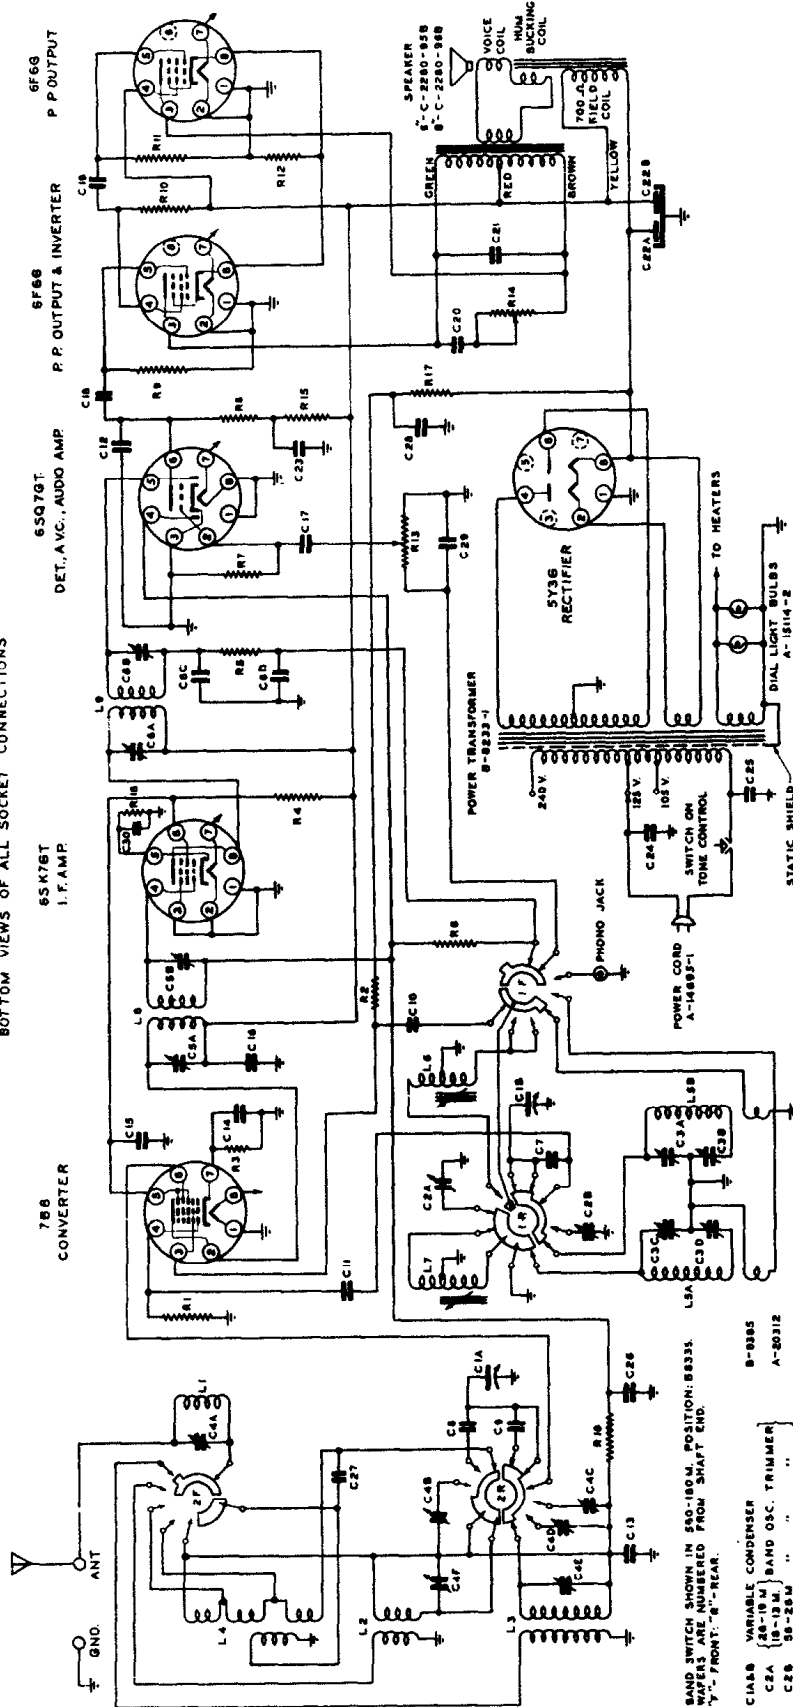

- COMPONENTS LIST:**
- C1A8 VARIABLE CONDENSER
  - C2A 48-19 M BAND OSC. TRIMMER
  - C3A 18-13 M BAND OSC. TRIMMER
  - C3B 880-180 M BAND OSC. TRIMMER
  - C3C 2200-750 M BAND OSC. TRIMMER
  - C3D I.F. REFLECTOR BAND OSC. TRIMMER
  - C4C 28-28 M BAND ANT. TRIMMER
  - C4D 28-28 M BAND ANT. TRIMMER
  - C4E 28-28 M BAND ANT. TRIMMER
  - C4F 2200-750 M BAND OSC. TRIMMER
  - C5A 6 NO. 1 I.F. TRIMMER
  - C5B 6 NO. 2 I.F. TRIMMER
  - C5C 100-100 IMPERIAL FILTER
  - C6 75 MUF MICA
  - C7 2000 MUF MICA 55-28M ANT. PADDER
  - C8 500 MUF MICA
  - C9 250 MUF MICA
  - C10 500 MUF MICA
  - C11 250 MUF MICA
  - C12 250 MUF MICA
  - C13 65 MFD. 600 V. TUBULAR COND.
  - C14 25 MFD. 200 V. TUBULAR COND.
  - C15 .01 MFD. 600 V. ELECTROLYTIC
  - C16 .01 MFD. 600 V. TUBULAR COND.
  - C17 .02 MFD. 600 V. TUBULAR COND.
  - C18 .03 MFD. 600 V. TUBULAR COND.
  - C19 .05 MFD. 600 V. TUBULAR COND.
  - C20 .05 MFD. 600 V. TUBULAR COND.
  - C21 .002 MFD. 600 V. TUBULAR COND.
  - C22 15 MFD. 450 V. ELECTROLYTIC
  - C23 30 MFD. 450 V. TUBULAR COND.
  - C24 .008 MFD. 600 V. TUBULAR COND.
  - C25 .008 MFD. 600 V. TUBULAR COND.
  - C26 .05 MFD. 600 V. TUBULAR COND.
  - C27 .05 MFD. 600 V. TUBULAR COND.
  - C28 100 MUF MICA ELECTROLYTIC
  - C29 100 MFD. 400 V. TUBULAR COND.
  - C30 300 J.L. TUBULAR COND.
  - C31 300 J.L. TUBULAR COND.
  - C32 300 J.L. TUBULAR COND.
  - C33 300 J.L. TUBULAR COND.
  - C34 300 J.L. TUBULAR COND.
  - C35 300 J.L. TUBULAR COND.
  - C36 300 J.L. TUBULAR COND.
  - C37 300 J.L. TUBULAR COND.
  - C38 300 J.L. TUBULAR COND.
  - C39 300 J.L. TUBULAR COND.
  - C40 300 J.L. TUBULAR COND.
  - C41 300 J.L. TUBULAR COND.
  - C42 300 J.L. TUBULAR COND.
  - C43 300 J.L. TUBULAR COND.
  - C44 300 J.L. TUBULAR COND.
  - C45 300 J.L. TUBULAR COND.
  - C46 300 J.L. TUBULAR COND.
  - C47 300 J.L. TUBULAR COND.
  - C48 300 J.L. TUBULAR COND.
  - C49 300 J.L. TUBULAR COND.
  - C50 300 J.L. TUBULAR COND.
  - C51 300 J.L. TUBULAR COND.
  - C52 300 J.L. TUBULAR COND.
  - C53 300 J.L. TUBULAR COND.
  - C54 300 J.L. TUBULAR COND.
  - C55 300 J.L. TUBULAR COND.
  - C56 300 J.L. TUBULAR COND.
  - C57 300 J.L. TUBULAR COND.
  - C58 300 J.L. TUBULAR COND.
  - C59 300 J.L. TUBULAR COND.
  - C60 300 J.L. TUBULAR COND.
  - C61 300 J.L. TUBULAR COND.
  - C62 300 J.L. TUBULAR COND.
  - C63 300 J.L. TUBULAR COND.
  - C64 300 J.L. TUBULAR COND.
  - C65 300 J.L. TUBULAR COND.
  - C66 300 J.L. TUBULAR COND.
  - C67 300 J.L. TUBULAR COND.
  - C68 300 J.L. TUBULAR COND.
  - C69 300 J.L. TUBULAR COND.
  - C70 300 J.L. TUBULAR COND.
  - C71 300 J.L. TUBULAR COND.
  - C72 300 J.L. TUBULAR COND.
  - C73 300 J.L. TUBULAR COND.
  - C74 300 J.L. TUBULAR COND.
  - C75 300 J.L. TUBULAR COND.
  - C76 300 J.L. TUBULAR COND.
  - C77 300 J.L. TUBULAR COND.
  - C78 300 J.L. TUBULAR COND.
  - C79 300 J.L. TUBULAR COND.
  - C80 300 J.L. TUBULAR COND.
  - C81 300 J.L. TUBULAR COND.
  - C82 300 J.L. TUBULAR COND.
  - C83 300 J.L. TUBULAR COND.
  - C84 300 J.L. TUBULAR COND.
  - C85 300 J.L. TUBULAR COND.
  - C86 300 J.L. TUBULAR COND.
  - C87 300 J.L. TUBULAR COND.
  - C88 300 J.L. TUBULAR COND.
  - C89 300 J.L. TUBULAR COND.
  - C90 300 J.L. TUBULAR COND.
  - C91 300 J.L. TUBULAR COND.
  - C92 300 J.L. TUBULAR COND.
  - C93 300 J.L. TUBULAR COND.
  - C94 300 J.L. TUBULAR COND.
  - C95 300 J.L. TUBULAR COND.
  - C96 300 J.L. TUBULAR COND.
  - C97 300 J.L. TUBULAR COND.
  - C98 300 J.L. TUBULAR COND.
  - C99 300 J.L. TUBULAR COND.
  - C100 300 J.L. TUBULAR COND.
- RESISTORS:**
- R1 250 K. 1/4 W.
  - R2 250 K. 1/4 W.
  - R3 300 K. 1/4 W.
  - R4 33 K. 1/4 W.
  - R5 56 K. 1/4 W.
  - R6 56 K. 1/4 W.
  - R7 15 MEG. 1/4 W.
  - R8 220 K. 1/4 W.
  - R9 470 K. 1/4 W.
  - R10 270 J.L. 1/4 W.
  - R11 330 J.L. 1/4 W.
  - R12 500 K. 1/4 W.
  - R13 500 K. 1/4 W.
  - R14 500 K. 1/4 W.
  - R15 150 K. 1/4 W.
  - R16 150 K. 1/4 W.
  - R17 12 K. 1/4 W.
  - R18 300 J.L. 1/4 W.
  - R19 250 K. 1/4 W.
  - R20 250 K. 1/4 W.
  - R21 250 K. 1/4 W.
  - R22 250 K. 1/4 W.
  - R23 250 K. 1/4 W.
  - R24 250 K. 1/4 W.
  - R25 250 K. 1/4 W.
  - R26 250 K. 1/4 W.
- COILS:**
- L1 I.F. REFLECTOR
  - L2 2200-750 M BAND ANT. COIL
  - L3 280-180 M BAND ANT. COIL
  - L4 28-28 M BAND ANT. COIL
  - L5 28-28 M BAND ANT. COIL
  - L6 28-28 M BAND ANT. COIL
  - L7 2200-750 M BAND OSC. COIL
  - L8 150-180 M BAND OSC. COIL
  - L9 55-28 M BAND OSC. COIL
  - L10 18-13 M BAND OSC. COIL
  - L11 NO. 1 I.F. COIL
  - L12 NO. 2 I.F. COIL
- CONDENSERS:**
- C1 I.F. REFLECTOR
  - C2 2200-750 M BAND ANT. COIL
  - C3 280-180 M BAND ANT. COIL
  - C4 28-28 M BAND ANT. COIL
  - C5 28-28 M BAND ANT. COIL
  - C6 28-28 M BAND ANT. COIL
  - C7 2200-750 M BAND OSC. COIL
  - C8 150-180 M BAND OSC. COIL
  - C9 55-28 M BAND OSC. COIL
  - C10 18-13 M BAND OSC. COIL
  - C11 NO. 1 I.F. COIL
  - C12 NO. 2 I.F. COIL
- TRIMMERS:**
- A-20312
  - A-20313
  - A-20314
  - A-20315
  - A-20316
  - A-20317
  - A-20318
  - A-20319
  - A-20320
  - A-20321
  - A-20322
  - A-20323
  - A-20324
  - A-20325
  - A-20326
  - A-20327
  - A-20328
  - A-20329
  - A-20330
  - A-20331
  - A-20332
  - A-20333
  - A-20334
  - A-20335
  - A-20336
  - A-20337
  - A-20338
  - A-20339
  - A-20340
  - A-20341
  - A-20342
  - A-20343
  - A-20344
  - A-20345
  - A-20346
  - A-20347
  - A-20348
  - A-20349
  - A-20350
  - A-20351
  - A-20352
  - A-20353
  - A-20354
  - A-20355
  - A-20356
  - A-20357
  - A-20358
  - A-20359
  - A-20360
  - A-20361
  - A-20362
  - A-20363
  - A-20364
  - A-20365
  - A-20366
  - A-20367
  - A-20368
  - A-20369
  - A-20370
  - A-20371
  - A-20372
  - A-20373
  - A-20374
  - A-20375
  - A-20376
  - A-20377
  - A-20378
  - A-20379
  - A-20380
  - A-20381
  - A-20382
  - A-20383
  - A-20384
  - A-20385
  - A-20386
  - A-20387
  - A-20388
  - A-20389
  - A-20390
  - A-20391
  - A-20392
  - A-20393
  - A-20394
  - A-20395
  - A-20396
  - A-20397
  - A-20398
  - A-20399
  - A-20400
- Other Components:**
- 5Y3B RECTIFIER
  - 500K TONE CONTROL
  - POWER TRANSFORMER B-2823-1
  - PHONO JACK
  - SWITCH ON TONE CONTROL
  - DIAL LIGHT BULBS
  - STATIC SHIELD
  - TO HEATERS
- Notes:**
- SAND SWITCH SHOWN IN 580-180 M. POSITION: 80335
  - WASERS ARE NUMBERED FROM SHAFT END.
  - "F" - FRONT; "R" - REAR.
  - ON 2500-750 M. A. 580-180 M. BANDS, OBC. PRG. IS ABOVE SIGNAL FREQ.
  - ON 580 M. A. 580-180 M. BANDS, OBC. PRG. IS BELOW SIGNAL FREQ.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## SPARTAN SUPERHETERODYNE MODEL 10-21 INTERMEDIATE FREQUENCY 456 K.C. BOTTOM VIEWS OF ALL SOCKET CONNECTIONS

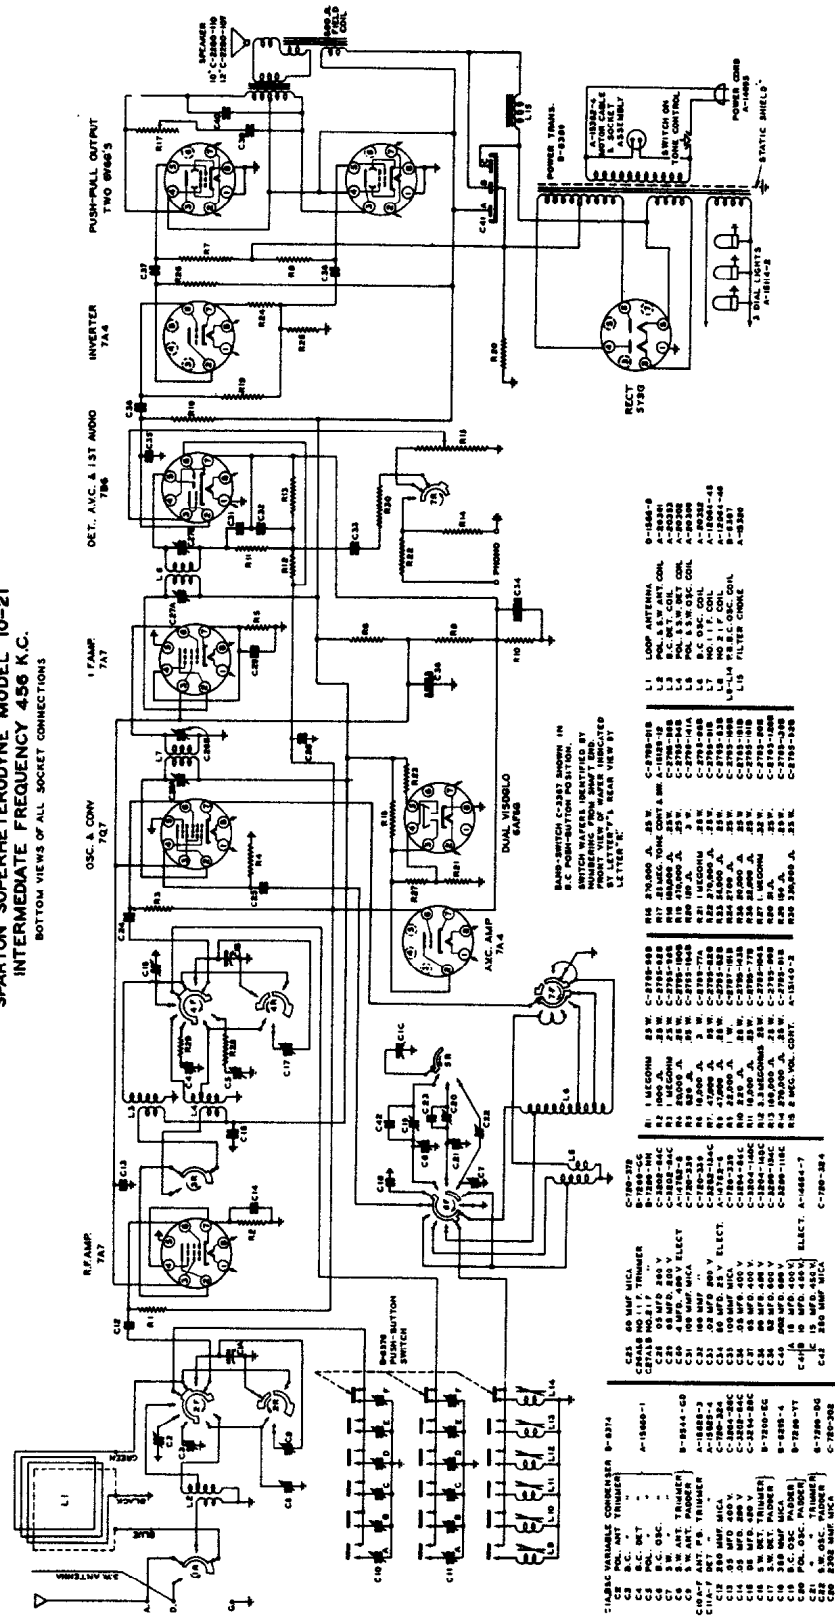


| TUBE | FUNCTION                  | Voltage of Socket Prongs to Gnd. See Prong Nos. on Schematic Dia. |       |       |       |       |       |       |       |       |
|------|---------------------------|---|-------|-------|-------|-------|-------|-------|-------|-------|
|      |                           | No. 1   | No. 2 | No. 3 | No. 4 | No. 5 | No. 6 | No. 7 | No. 8 | No. 9 |
| 7A7  | R-F Amplifier             | 0   | 260   | 75    | J-8   | 0     | 0     | 3.8   | 6.2*  | -     |
| 7C7  | OSC - Converter           | 0   | 260   | 75    | -2.3  | 0     | 0     | 0     | 6.2*  | -     |
| 7A7  | I.F. Amplifier            | 0   | 260   | 75    | 3     | 0     | 0     | 3     | 6.2*  | -     |
| 7B6  | 2nd Det - AVC - 1st Audio | 0   | 140   | 0     | 1.1   | 0     | .5    | .6    | 6.2*  | -     |
| 7A4  | Inverter                  | 0   | 223   | 50    | 0     | 0     | 17    | 60    | 6.2*  | -     |
| 7A4  | Viso-Clo Amplifier        | 0   | 40    | 160   | 0     | 275   | 0     | 1.2   | 6.2*  | -     |
| 6Y6G | Power Amplifier           | 0   | 0     | 260   | 265   | -17   | -17.5 | 6.3*  | 0     | -     |
| 6V6G | Power Amplifier           | 0   | 0     | 260   | 265   | -17   | 265   | 6.3*  | 0     | -     |
| 6Y3G | Rectifier                 | 0   | 390   | 0     | 355*  | 0     | 355*  | 0     | 390   | -     |
| 6AF6 | Viso-Clo                  | 0   | 0     | 40    | 17    | 260   | 0     | 6.2*  | 0     | -     |

Notes: Voltage readings are for schematic diagram on back of sheet. Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 20,000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages in table are + DC voltages. \*AC volts.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## SPARTON SUPERHETERODYNE MODELS 5321 & 5521

BOTTOM VIEW OF ALL SOCKET CONNECTIONS.

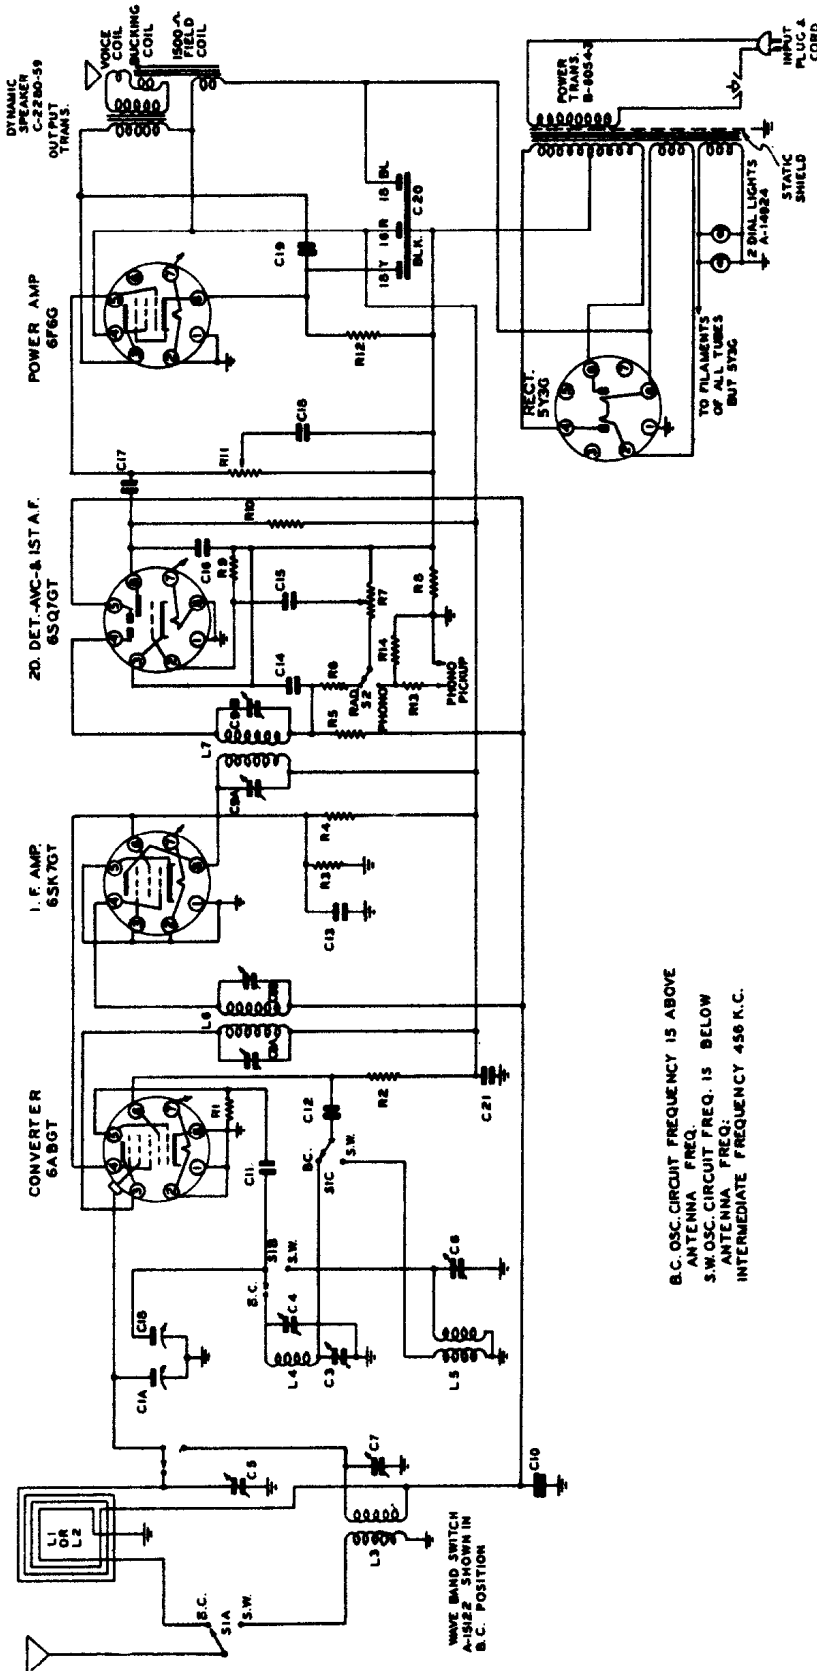


B.C. OSC. CIRCUIT FREQUENCY IS ABOVE  
ANTENNA FREQ.  
S.W. OSC. CIRCUIT FREQ. IS BELOW  
ANTENNA FREQ.  
INTERMEDIATE FREQUENCY 450 K.C.

- |        |                             |                   |
|--------|-----------------------------|-------------------|
| C1A B  | VARIABLE CONDENSER          | B-8235            |
| C-3    | B.C. OSC. PADDER            | A-1575B-1         |
| C-4    | B.C. OSC. TRIMMER           | A-1405B-5         |
| C-5    | B.C. ANT. TRIMMER           | B-7200-GN         |
| C-6    | S.W. OSC. TRIMMER           | B-7200-NN         |
| C-7    | S.W. ANT. TRIMMER           | C-3208-25C        |
| CBAB B | NO. 1 I.F. TRIMMER          | C-720-37E         |
| CBAB B | NO. 2 I.F. TRIMMER          | C-3208-55C        |
| C10    | .05 MFD. 600V.              |                   |
| C11    | 50 MFD. MOLDED              |                   |
| C12    | .001 MFD. 600V.             |                   |
| C13    | .1 MFD. 400V.               | C-3204-35C        |
| C14    | 250 MFD. MOLDED             | C-720-39          |
| C15    | .02 MFD. 400V.              | C-3204-22C        |
| C16    | 100 MFD. MOLDED             | C-720-339         |
| C17    | .02 MFD. 900V.              | C-3208-22C        |
| C18    | .006 MFD. 400V.             | C-3204-66C        |
| C19    | .006 MFD. 800V.             | C-3204-66C        |
| C20    | .18-18-10 MFD. ELECT.       | A-14780-1         |
| C21    | .1 MFD. 600V.               | C-3208-38C        |
| R1     | 33000 $\Omega$ .25W.        | C-2795-60B        |
| R2     | 22000 $\Omega$ .5W.         | C-2796-78C        |
| R3     | 47000 $\Omega$ 1W.          | C-2797-82B        |
| R4     | 25000 $\Omega$ 2W.          | L4 B.C. OSC. COIL |
| R5     | 3.3 MEG. .25W.              | A-15233-1B        |
| R6     | 27000 $\Omega$ .25W.        | C-2795-04B        |
| R7     | .5 MEG. $\Omega$ VOL. CONT. | C-2795-79B        |
| R8     | 56 $\Omega$ .5W.            | A-15130-5         |
| R9     | 5.6 MEG. .25W.              | C-2795-47C        |
| R10    | 270,000 $\Omega$ .25W.      | C-2795-107B       |
| R11    | 5 MEG. TONE CONT.           | C-2795-91B        |
| R12    | 680 $\Omega$ 1W.            | C-2797-50B        |
| R13    | 270,000 $\Omega$ .25W.      | C-2795-91B        |
| R14    | 270,000 $\Omega$ .25W.      | 5521 [C-2795-91B  |
|        |                             | ONLY [C-2795-91B  |
| L1     | B.C. ANT. COIL              | 5521- C-3290-8    |
| L2     | B.C. ANT. COIL              | C-3290-9          |
| L3     | S.W. ANT. COIL              | A-14862-15        |
| L4     | B.C. OSC. COIL              | A-15920-1         |
| L5     | S.W. OSC. COIL              | A-12333-1B        |
| L6     | NO. 1 I.F. COIL             | A-12064-39        |
| L7     | NO. 2 I.F. COIL             | A-12064-49        |
| S1A    | B-C WAVE BAND SW.           | A-15122           |
| S2     | PHONO-RADIO SW.             | A-15754-1         |




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

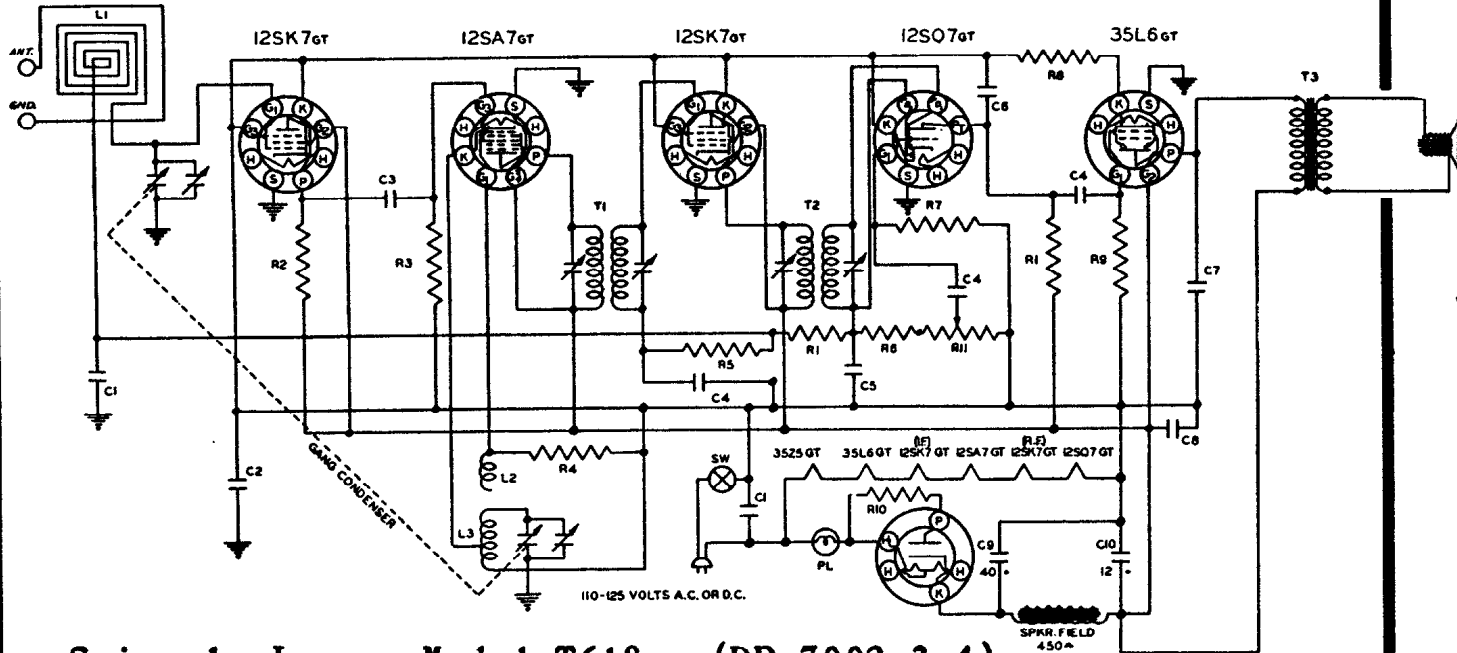


Spiegel, Inc. Model T618. (DP-7002-3-4)

| PART NO. | SCHEMATIC LOCATION | DESCRIPTION                  |
|----------|--------------------|------------------------------|
| 3-6      | R1                 | 1 MEG. 1/2 WATT 20% RESISTOR |
| 3-36     | R2                 | 1500 "                       |
| 3-17     | R3                 | 100000 "                     |
| 3-26     | R4                 | 30000 "                      |
| 3-141    | R5                 | 6 MEG. "                     |
| 3-4      | R6                 | 50000 "                      |
| 3-2      | R7                 | 2 MEG. "                     |
| 3-34     | R8                 | 100 "                        |
| 3-1      | R9                 | 500000 "                     |
| 3-33     | R10                | 50 "                         |
| 5-301    | R11                | 1 MEGOHM VOLUME CONTROL      |
|          | SW                 | SWITCH                       |
| 6-14     | C1                 | .05 MFD. 400 VOLTS CONDENSER |
| 6-30     | C2                 | .25 " 200 "                  |
| 6-8      | C3                 | .0001 " MICA                 |
| 6-3      | C4                 | .01 " 400 VOLTS              |
| 6-10     | C5                 | .00025 " MICA                |
| 6-305    | C6                 | .0005 " 600 VOLTS            |
| 6-308    | C7                 | .005 " "                     |
| 6-28     | C8                 | .1 " 400 "                   |
| 7-301    | C9                 | 40 " 150 " } ELECTROLYTIC    |
|          | C10                | 12 " 150 " }                 |

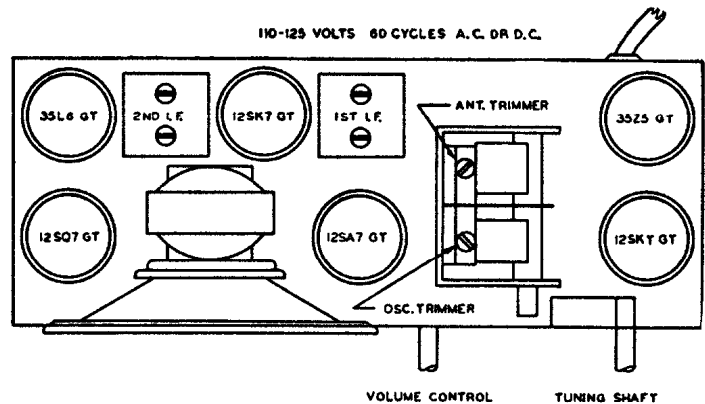


Spiegel, Inc. Model TA616. (DP-7450 and EP-2450)

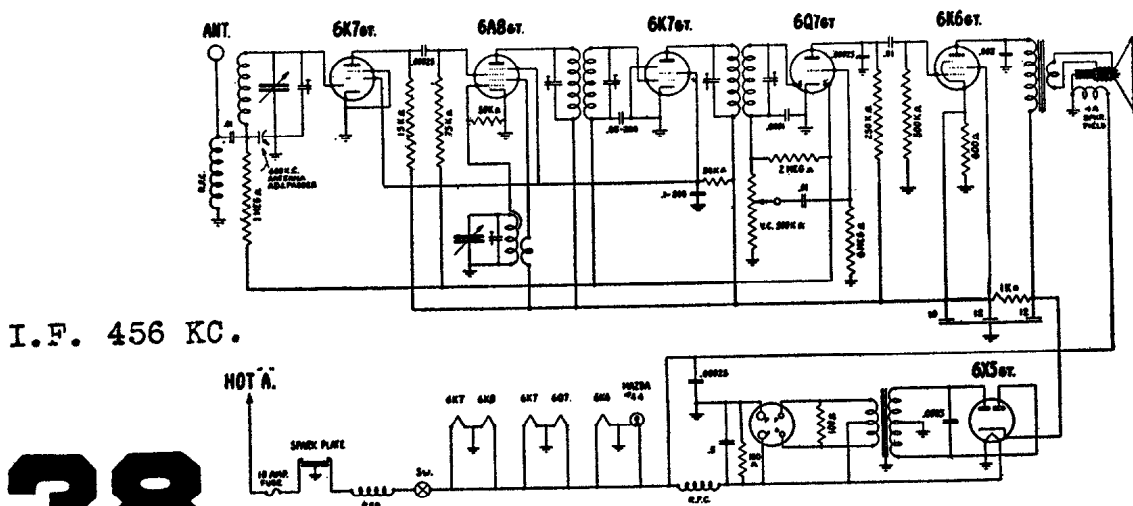

I.F. 456 KC.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

**AIR CASTLE SUPERHETERODYNE MODELS 822 & 922**  
**INTERMEDIATE FREQUENCY 456 K.C.**  
 BOTTOM VIEWS OF ALL SOCKET CONNECTIONS

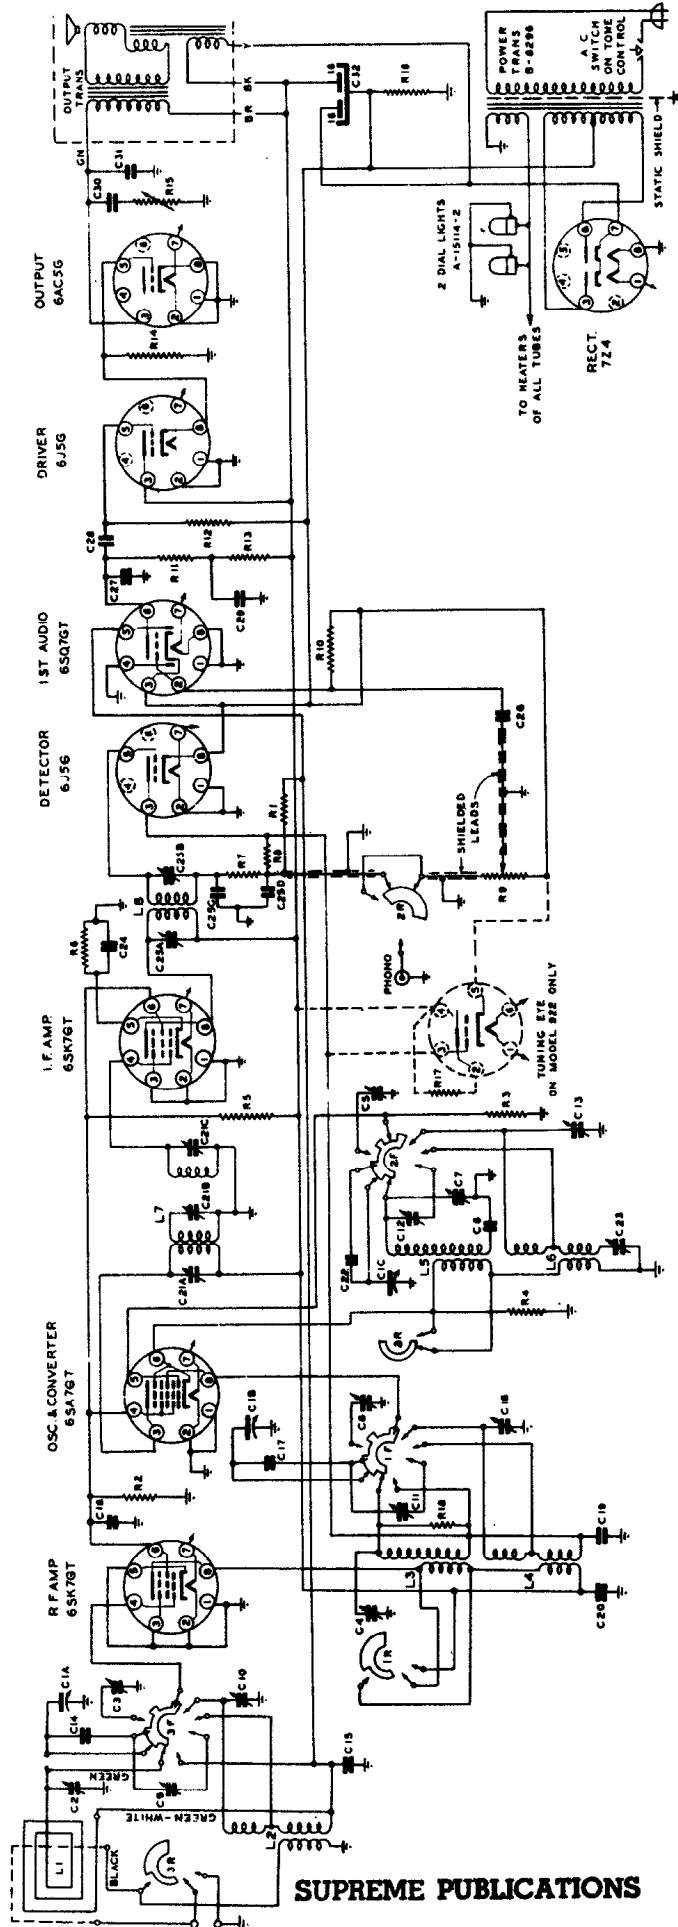

**Spiegel, Inc. Models 822 and 922. (DP-7014)**


BAND-SWITCH B-8237 SHOWN IN B.C. POSITION.  
 WAFERS NUMBERED FROM SHAFT END.  
 "F"-FRONT, "R"-REAR.

**SUPREME PUBLICATIONS**

|     |                      |     |                                       |           |                                |
|-----|----------------------|-----|---------------------------------------|-----------|--------------------------------|
| C1  | 2.5 MEG.             | C17 | 57-78.74-10.0 MC. DET. PAD., 195 MMF. | B-8388    | 3-GANG VARIABLE CONDENSER      |
| R2  | 27,000 Ω             | C18 | 99-134.12-16.8 MC. DET. TRIMMER       | A-14088-7 | B.C. ANT. TRIMMER              |
| R3  | 15,000 Ω             | C19 | 1 MFD. 400 V.                         |           | 57-78.74-10.0 MC. ANT. TRIMMER |
| R4  | 470 Ω                | C20 | 1 MFD. 400 V.                         | A-20043   | 57-78.74-10.0 MC. OSC.         |
| R5  | 9,100 Ω              | C21 | NO. 11 F. TRIMMER                     |           | 57-78.74-10.0 MC. DET.         |
| R6  | 9,100 Ω              | C22 | NO. 11 F. TRIMMER                     |           | B.C. OSC. TRIMMER              |
| R7  | 50,000 Ω             | C23 | 57-78.74-10.0 MC. OSC. PAD., 195 MMF. |           | " " PADDER                     |
| R8  | 2.2 MEG.             | C24 | 57-78.74-10.0 MC. OSC. PAD., 195 MMF. |           | 99-134.12-16.8 MC. ANT. PADDER |
| R9  | VOL. CONTROL .5 MEG. | C25 | 3 W. OSC. CIRCUIT PADDER              |           | 99-134.12-16.8 MC. DET. PADDER |
| R10 | 4.7 MEG.             | C26 | 1 MFD. 300 V.                         | A-80343-1 | 99-134.12-16.8 MC. OSC.        |
| R11 | 270,000 Ω            | C27 | 1 MFD. 400 V.                         |           | 99-134.12-16.8 MC. DET.        |
| R12 | 50,000 Ω             | C28 | 250 MFD. 400 V.                       |           | 99-134.12-16.8 MC. OSC.        |
| R13 | 50,000 Ω             | C29 | 1 MFD. 400 V.                         |           | 99-134.12-16.8 MC. DET.        |
| R14 | 50,000 Ω             | C30 | 1 MFD. 400 V.                         |           | 99-134.12-16.8 MC. OSC.        |
| R15 | 25 MEG.              | C31 | 1 MFD. 400 V.                         |           | 99-134.12-16.8 MC. DET.        |
| R16 | 47 Ω                 | C32 | 1 MFD. 400 V.                         |           | 99-134.12-16.8 MC. OSC.        |
| R17 | 220,000 Ω            |     |                                       |           |                                |
| R18 | 22,000 Ω             |     |                                       |           |                                |


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## STEWART-WARNER 205A & 205B CHASSIS

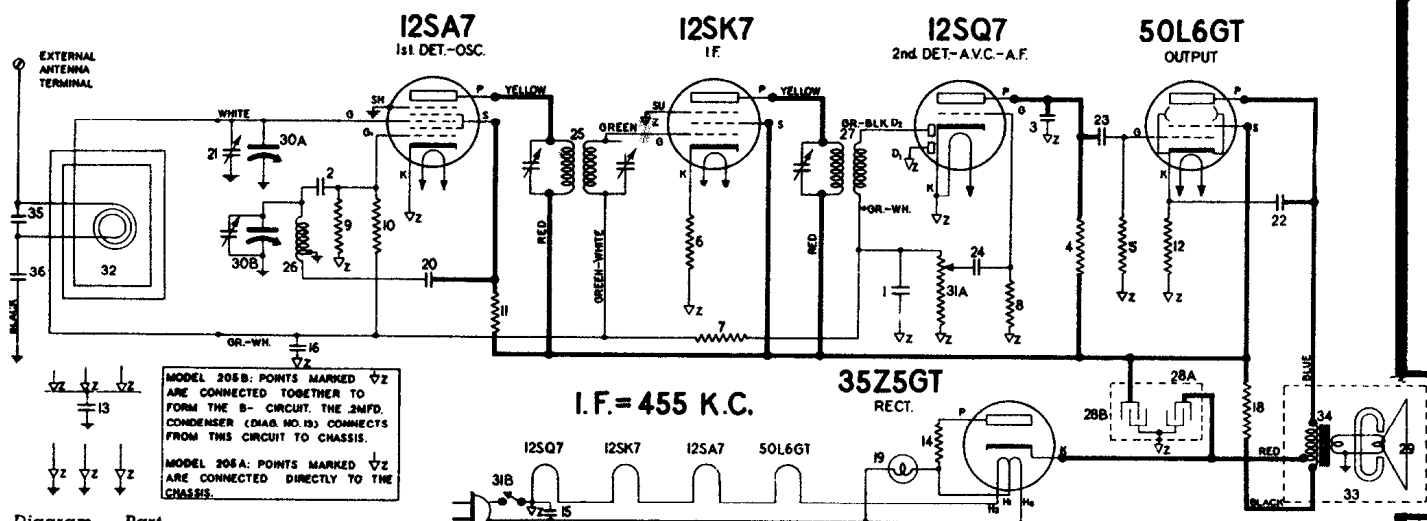

| Diagram Number | Part Number | Description                             |
|----------------|-------------|---|
| 1              | 83539       | Condenser—mica, 260 mmfd.               |
| 2              | 83783       | Condenser—mica, 110 mmfd.               |
| 3              | 85394       | Condenser—mica, 510 mmfd.               |
| 4              | 110553      | Resistor—carbon, 220,000 ohms 1/4 watt. |
| 5              | 110559      | Resistor—carbon, 470,000 ohms 1/4 watt. |
| 6              | 110560      | Resistor—carbon, 100 ohms 1/4 watt.     |
| 7              | 110570      | Resistor—carbon, 2.2 meg. 1/4 watt.     |
| 8              | 110580      | Resistor—carbon, 3.3 meg. 1/4 watt.     |
| 9              | 112958      | Resistor—carbon, 18,000 ohms 1/4 watt.  |
| 10             | 112975      | Resistor—carbon, 10 meg. 1/4 watt.      |
| 11             | 116068      | Resistor—carbon, 680 ohms 1/4 watt.     |
| 12             | 116092      | Resistor—140 ohms 1 watt W.W.           |
| 13             | 116706      | Condenser—.2 mfd. 600 volt (205B only). |
| 14             | 116752      | Resistor—33 ohms 1 watt W.W.            |
| 15-16          | 116819      | Condenser—.05 mfd. 600 volt.            |
| 18             | 118824      | Resistor—carbon, 1500 ohms 1/2 watt.    |
| 19             | 118921      | Lamp—Dial (Mazda No. 47).               |
| 20             | 119193      | Condenser—.01 mfd. 600 volt.            |
| 21             | 119345      | Condenser—Trimmer                       |
| 22             | 119414      | Condenser—.02 mfd. 600 volt.            |
| 23             | 119417      | Condenser—.006 mfd. 600 volt.           |
| 24             | 119817      | Condenser—.004 mfd. 600 volt.           |
| 25             | 500131      | Transformer—1st I.F.                    |

### SOCKET VOLTAGES

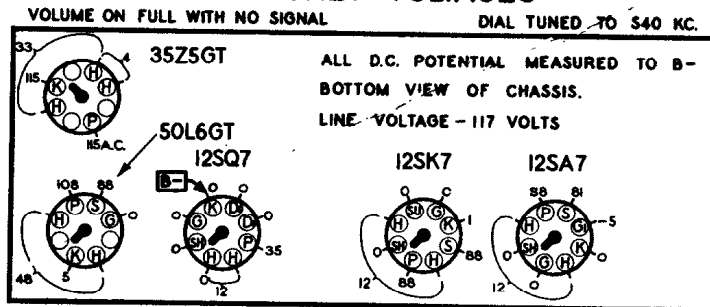

Use a voltmeter of 1000 ohms per volt.

### ALIGNMENT PROCEDURE


1. Connect output meter across the voice coil; or from 50L6GT plate to B— as shown on voltage chart.
2. Connect the ground lead of the signal generator to the chassis through a .25 mfd. condenser.
3. Set the volume control to the maximum volume position.
4. Set dial pointer to lowest frequency point on dial scale with gang in full mesh.
5. Connect the antenna lead of the signal generator to the lug on the top of the rear section of the gang, using a 200 mmfd. mica condenser in series.
6. Set the signal generator to 455 KC. Set receiver dial to a point where it does not affect signal. Adjust the trimmer screws on the top of each I.F. Transformer for maximum output.
7. Connect the output of the signal generator in series with a 200 mmfd. mica condenser to the antenna terminal on the cabinet back. Set the receiver dial to 1500 KC.
8. Set the signal generator to 1500 KC and adjust the trimmer on the front section of the gang condenser for maximum output of the oscillator signal.
9. Place the loop antenna in its correct position at the rear of the cabinet and adjust the trimmer screw on the back of the chassis for maximum output at 1500 KC.

| Diagram Number | Part Number | Description  |
|----------------|-------------|--|
| 26             | 500232      | Coil—Oscillator  |
| 27             | 500236      | Transformer—2nd I.F.   |
| 28A-28B        | 500256      | Condenser—Electrolytic<br>A—40 mfd.—150 volt<br>B—20 mfd.—150 volt |
| 29             | C-500329    | Cone and voice coil for C-500594 speaker.                          |
| 30A-30B        | 500443      | Condenser—variable tuning, with drum.                              |
| 31A-31B        | 500480      | Volume Control—1 meg. (with switch)                                |
| 32             | 500566      | Loop Antenna & Cabinet Back (205AA & 205BA).                       |
|                | 500567      | Loop Antenna & Cabinet Back (205AB & 205BB).                       |
|                | 500576      | Loop Antenna & Cabinet Back (205AC & 205BC).                       |
| 33             | C-500594    | Speaker—P.M. (4")  |
| 34             | C-500615    | Transformer—output for C-500594 speaker.                           |
| 35             | 83783       | Condenser—mica, 110 mmfd.  |
| 36             | 119193      | Condenser—.01 mfd. 600 volt (205A only)                            |

### MISCELLANEOUS PARTS


| Part Number | Description                               |
|-------------|---|
| 116467      | Base for mounting electrolytic condenser. |
| 114955      | Clamp for dial cord.                      |
| 112745      | Clip—coil mounting                        |
| 117057      | Cord—drive supplied in 3' lengths.        |
| 500562      | Dial Scale                                |
| 500422      | Knob (for 205AA & 205AC) (205BA & 205BC). |
| 500428      | Knob (for 205AB & 205BB).                 |
| 500527      | Pointer                                   |
| 81145       | Retaining ring for tuning shaft.          |
| 116690      | Socket—octal base                         |
| 160392      | Socket—octal (rectifier)                  |
| 500499      | Socket—pilot lamp (with leads).           |
| 161384      | Spring—dial cord tension                  |
| 500497      | Stud—dial scale retaining                 |
| 111456      | Washer—spring washer for tuning shaft.    |

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

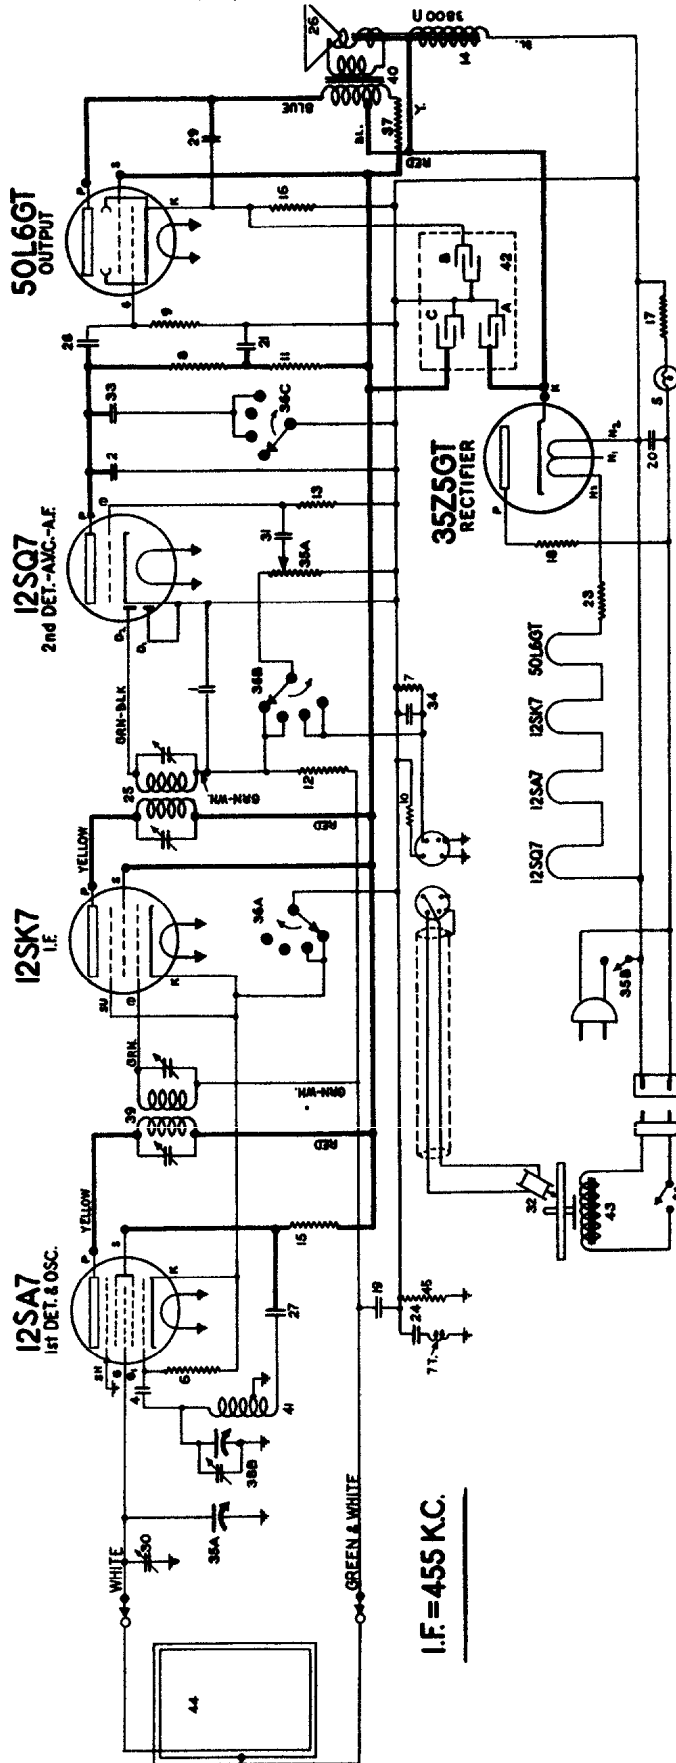

## SOCKET VOLTAGES

Volume on full with no signal. Dial tuned to 540 KC.

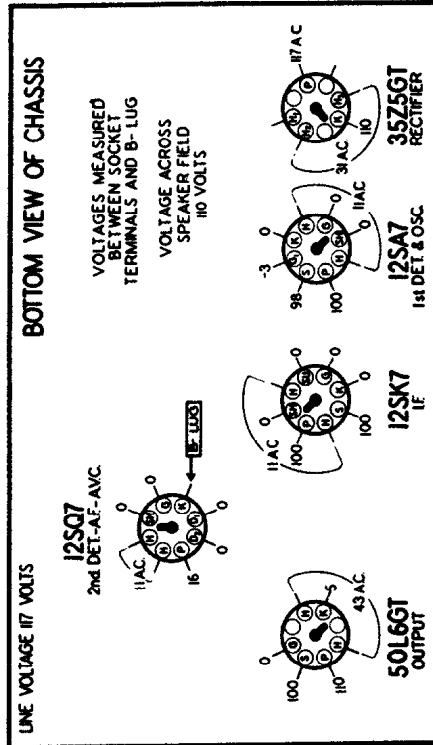


## Diagram Number

| Diagram Number | Description   |
|----------------|---|
| 1-2            | Condenser—mica 260 mmfd.  |
| 3              | Condenser—mica 110 mmfd.  |
| 4              | Condenser—mica 51 mmfd.   |
| 5              | Lamp-dial (Mazda No. C7)  |
| 6              | Resistor—carbon 47,000 ohms 1/4 watt  |
| 7              | Resistor—carbon 150,000 ohms 1/4 watt   |
| 8-9            | Resistor—carbon 470,000 ohms 1/4 watt   |
| 10             | Resistor—carbon 680,000 ohms 1/4 watt   |
| 11             | Resistor—carbon 100,000 ohms 1/4 watt   |
| 12             | Resistor—carbon 2.2 meg. 1/4 watt   |
| 13             | Resistor—carbon 10 meg. 1/4 watt  |
| 14             | Speaker—dynamic (5")  |
| 15             | Resistor—680 ohms 1/4 watt  |
| 16             | Resistor—140 ohms 1 watt W.W.   |
| 17             | Resistor—220 ohms 1 watt W. W.  |
| 18             | Resistor—33 ohms 1 watt wire wound  |
| 19 to 21       | Condenser—.05 mfd. 600 volt   |
| 22             | Switch—"on-off" for phone motor   |
| 23             | Resistor—20 ohms 1 watt   |
| 24             | Condenser—.1 mfd. 600 volts   |
| 25             | Transformer—2nd I.F.  |
| 26             | Cone & Voice Coil for R-501204 speaker  |
| 27 to 29       | Condenser—.01 mfd. 600 volt   |
| 30             | Condenser—trimmer   |
| 31             | Condenser—.002 mfd. 600 volt  |
| 32             | Crystal cartridge   |
| 33-34          | Condenser—.002 mfd. 600 volt  |
| 35A-35B        | Volume control—1 meg. (with switch)   |
| 36A-36B-36C    | Switch—tone & phonograph (See table for switch positions)                         |
| 37             | Resistor—2000 ohms 1 watt   |
| 36A-36B        | Condenser—variable tuning   |
| 39             | Transformer—1st I.F.  |
| 40             | Transformer—output for R-501204 speaker   |
| 41             | Coil—oscillator   |
| 42A-42B-42C    | Condenser—electrolytic, A—40 mfd.—200 volt; B—20 mfd.—25 volt; C—20 mfd.—200 volt |
| 43             | Phonograph motor—60 cycle (less turntable)  |
| 44             | Loop antenna & back (complete)  |
| 45             | Resistor—carbon 220,000 ohms 1/4 watt   |

# (RECEIVER MODEL 205FA)

REAR OF CHASSIS  
**STEWART-WARNER 205F CHASSIS** Use a Voltmeter of 1000 ohms per volt.

# 141

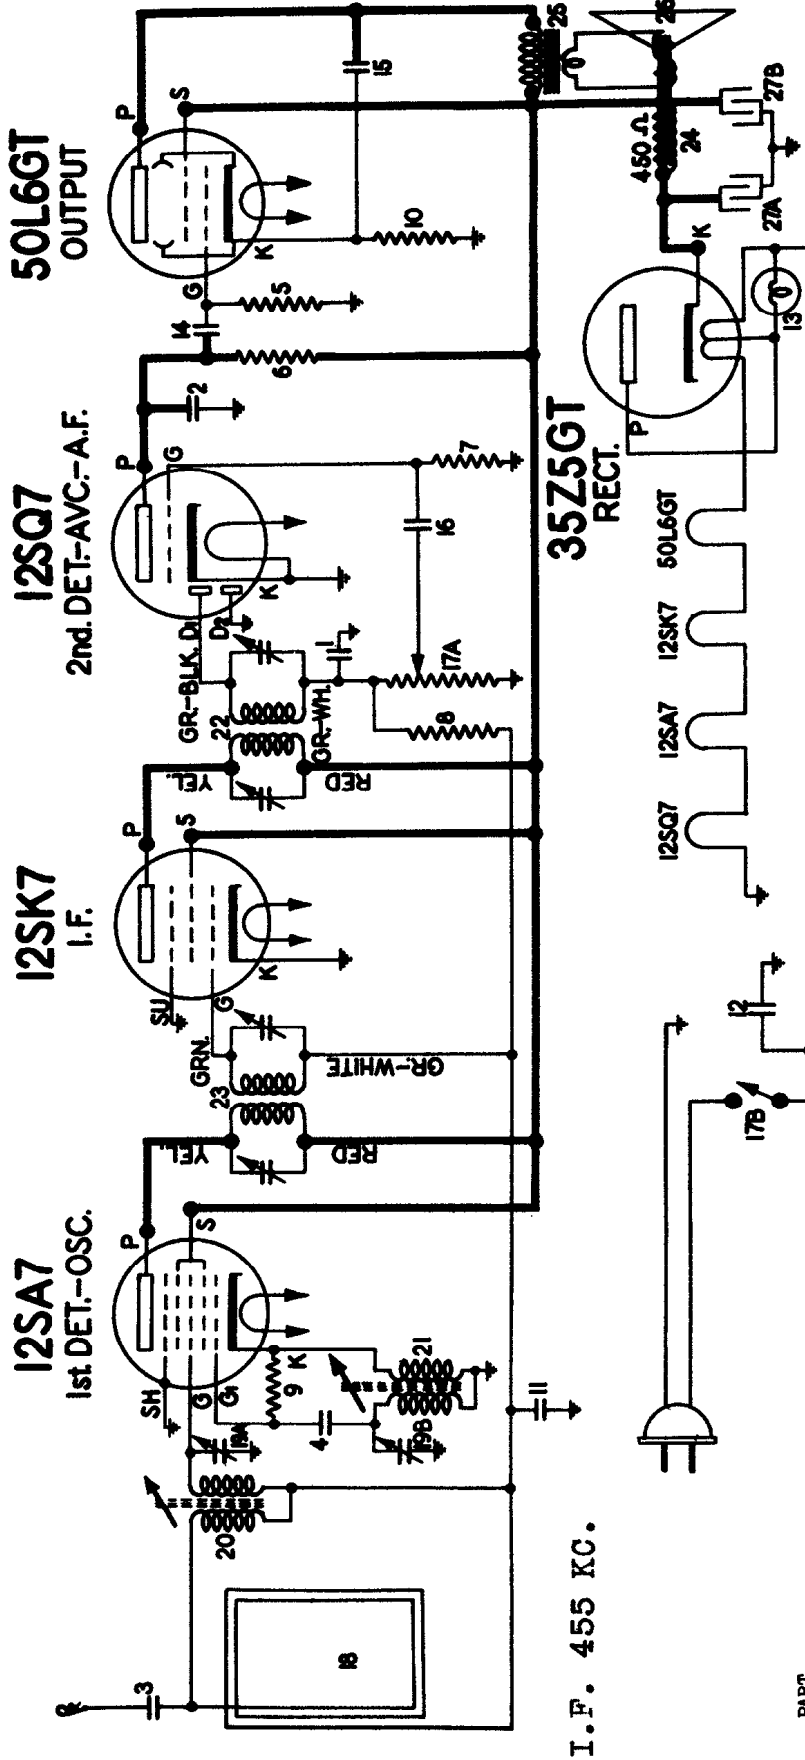


I. F. 455 KC.

| DIAGRAM NUMBER | PART NUMBER | DESCRIPTION  |
|----------------|-------------|--|
| 1-2            | 85539       | Condenser - mica 260 mmfd.   |
| 3              | 85061       | Condenser - mica 51 mmfd.  |
| 4              | 88686       | Condenser - mica 200 mmfd.   |
| 5              | 112971      | Resistor - insulated, 470,000 ohm 1/2 watt                           |
| 6              | 112987      | Resistor - insulated, 220,000 ohm 1/2 watt                           |
| 7              | 116050      | Resistor - insulated, 10 meg. 1/2 watt                               |
| 8              | 116056      | Resistor - 2.2 meg. 1/2 watt   |
| 9              | 116059      | Resistor - insulated, 22,000 ohm 1/2 watt                            |
| 10             | 116092      | Resistor - 140 ohm 1 watt-wire wound                                 |
| 11-12          | 116819      | Condenser - .05 mfd., 600 volt                                       |
| 13             | 118921      | Lamp-Dial (Mazda #47)  |
| 14-15          | 119193      | Condenser - .01 mfd., 600 volt                                       |
| 16             | 119875      | Condenser - .002 mfd., 600 volt                                      |
| 17A-17B        | 500223      | Volume Control - 1 meg. (with switch)                                |
| 18             | 501368      | Loop Antenna   |
| 19A-19B        | 501223      | Condenser - trimmer (2 sections) (A-35 mmfd.) (B-238 mmfd.)          |
| 20             | 501157      | Coil - antenna (with slug)   |
| 21             | 501158      | Coil - oscillator (with slug)  |
| 22             | 501168      | Transformer - 2nd I.F.   |
| 23             | 501233      | Transformer - 1st I.F.   |
| 24             | R-500916    | Speaker - dynamic (4")   |
| 25             | R-501163    | Transformer - output for R-500916 Spkr.                              |
| 26             | R-501164    | Cone & Voice Coil for R-500916 Spkr.                                 |
| 27A-27B        | 501213      | Electrolytic Capacitor (A-40 mfd. - 150 volt) (B-20 mfd. - 150 volt) |

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# STEWART-WARNER 205G CHASSIS MODELS 205GA TO 205GZ

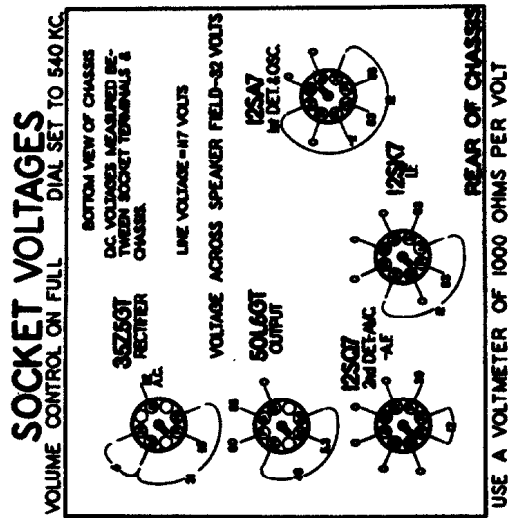


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## STEWART-WARNER 206B & 206C CHASSIS

Receiver Models 206BA to 206BZ & 206CA to 206 CZ


Seven turns of No. 22 wire are wound around condenser No. 13 and connected in series to ground.

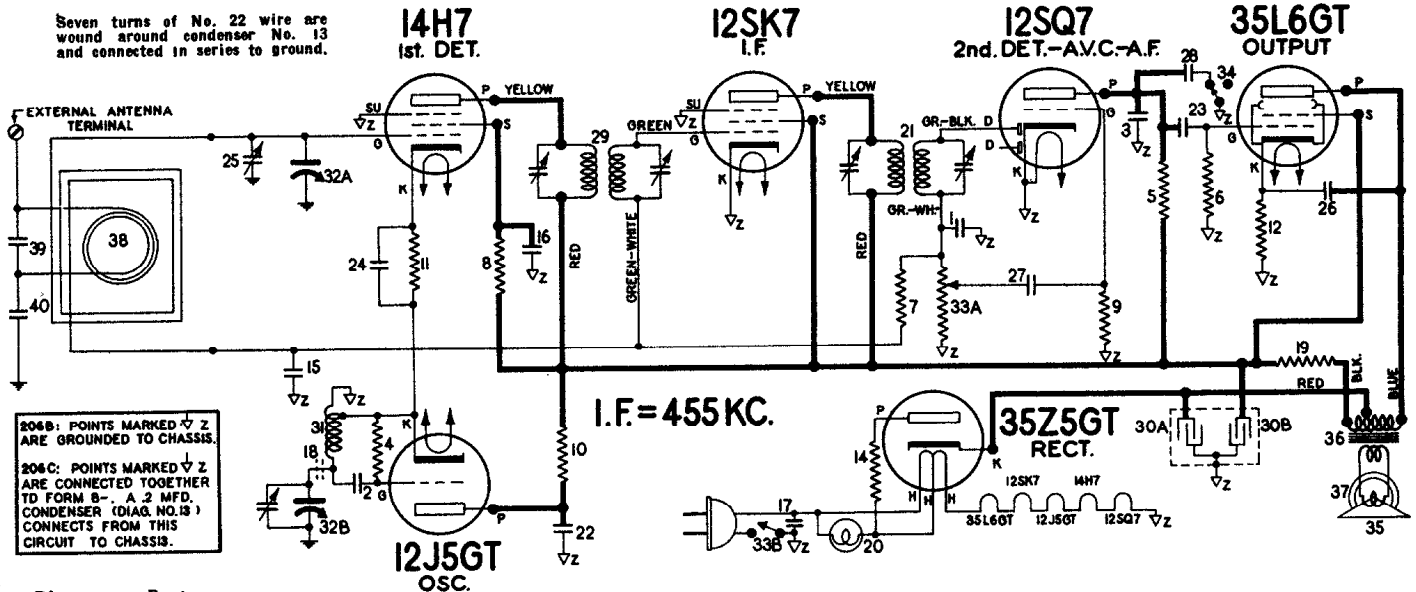

**206B:** POINTS MARKED Z ARE GROUNDED TO CHASSIS.  
**206C:** POINTS MARKED Z ARE CONNECTED TOGETHER TO FORM B-. A 2 MFD. CONDENSER (DIAG. NO. 13) CONNECTS FROM THIS CIRCUIT TO CHASSIS.

I.F. = 455 KC.

| Diagram Number | Part Number | Description   |
|----------------|-------------|---|
| 1              | 83539       | Condenser—mica, 260 mmfd.   |
| 2              | 83783       | Condenser—mica, 110 mmfd.   |
| 3              | 85394       | Condenser—mica, 510 mmfd.   |
| 4              | 110552      | Resistor—carbon 47,000 ohms 1/4 watt.                                   |
| 5              | 110553      | Resistor—carbon 220,000 ohms 1/4 watt.                                  |
| 6              | 110559      | Resistor—carbon 470,000 ohms 1/4 watt.                                  |
| 7              | 110570      | Resistor—carbon 2.2 meg. 1/4 watt.                                      |
| 8              | 110578      | Resistor—carbon 68,000 ohms 1/4 watt.                                   |
| 9              | 110580      | Resistor—carbon 3.3 meg. 1/4 watt.                                      |
| 10             | 116068      | Resistor—carbon 680 ohms 1/4 watt.                                      |
| 11             | 116079      | Resistor—carbon 1200 ohms, 1/4 watt.                                    |
| 12             | 116092      | Resistor—140 ohms, 1 watt W.W.  |
| 13             | 116706      | Condenser—.2 mfd. 600 volt (206C)                                       |
| 14             | 116752      | Resistor—33 ohms 1 watt W.W.  |
| 15-17          | 116819      | Condenser—.05 mfd. 600 volt.  |
| 16             | 119193      | Condenser—.01 mfd. 600 volt.  |
| 18             | 116819      | Condenser—.05 mfd. 600 volt (206C only).                                |
| 19             | 118824      | Resistor—carbon 1,500 ohms 1/2 watt.                                    |
| 20             | 118921      | Lamp—dial (Mazda No. 47).   |
| 21             | 119024      | Transformer—2nd I.F.  |
| 22-23-24       | 119193      | Condenser—.01 mfd. 600 volt.  |
| 25             | 119345      | Condenser—trimmer (loop)  |
| 26             | 119414      | Condenser—.02 mfd. 600 volt.  |
| 27             | 119817      | Condenser—.004 mfd. 600 volt.   |
| 28             | 119875      | Condenser—.002 mfd. 600 volt.   |
| 29             | 500131      | Transformer—1st I.F.  |
| 30A-30B        | 500256      | Condenser—Electrolytic { A-40 mfd. 150 volt }<br>{ B-20 mfd. 150 volt } |
| 31             | 500408      | Coil—oscillator   |
| 32A-32B        | 500443      | Condenser—variable tuning with drum                                     |
| 33A-33B        | 500480      | Volume Control—1 meg. (with switch)                                     |

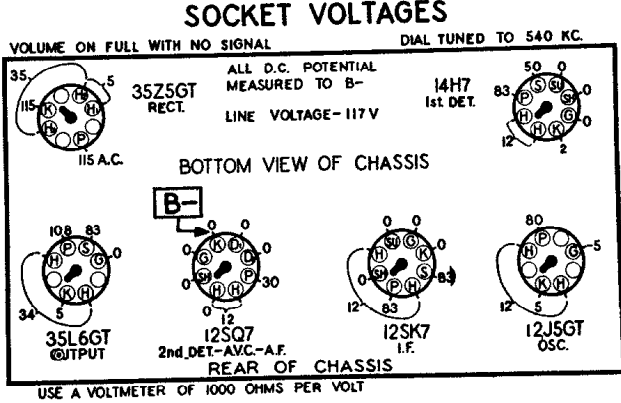

USE A VOLTMETER OF 1000 OHMS PER VOLT

| Diagram Number | Part Number | Description                                 |
|----------------|-------------|---|
| 34             | 500509      | Switch—tone (206B only)                     |
|                | 500546      | Switch—tone (206C only)                     |
| 35             | R-500587    | Cone & Voice Coil for R-500618 speaker      |
| 36             | R-500617    | Transformer—output for R-500618 speaker     |
| 37             | R-500618    | Speaker—P.M. dynamic (5")                   |
| 38             | 500580      | Loop Antenna & Cabinet Back (206BA & 206CA) |
|                | 500581      | Loop Antenna & Cabinet Back (206BB & 206CB) |
|                | 500678      | Loop Antenna & Cabinet Back (206BC & 206CC) |
| 39             | 83783       | Condenser—mica, 110 mmfd.                   |
| 40             | 119193      | Condenser—.01 mfd. 600 volt (206B only)     |

### ALIGNMENT PROCEDURE

1. Connect the output meter across the voice coil or from the plate of the 35L6GT output tube to B— through a .25 mfd. condenser.
2. Connect the ground lead from signal generator to B— through a .25 mfd. condenser for all alignment steps.
3. Set volume control in maximum position.
4. Set dial pointer to last marking on dial with gang in full mesh.
5. Connect hot lead from signal generator to stator on rear section of gang using 200 mmfd. in series as dummy.
6. Set generator to 455 KC. and adjust trimmer screws on top of I.F. transformer cans for maximum output.
7. Connect hot lead to antenna terminal on loop through a 200 mmfd. condenser as a dummy. Set dial to 1500 KC. and adjust trimmer on front section of gang for maximum output on a 1500 KC. generator signal.
8. Place chassis in cabinet and using connections in "7," place loop in position and adjust loop trimmer at rear of chassis for maximum output while tuning dial to maximum signal.

### MISCELLANEOUS PARTS


| Part Number | Description                                     |
|-------------|---|
| 116467      | Base for mounting Electrolytic Condenser (206C) |
| 160026      | Base for mounting Electrolytic Condenser (206B) |
| 114955      | Clamp—for dial cord.                            |
| 112745      | Clip—coil mounting                              |
| 117057      | Cord—Drive, supplied in 3' lengths              |
| 500563      | Dial Scale                                      |
| 500422      | Knob—(walnut)                                   |
| 500428      | Knob—(ivory)                                    |
| 500527      | Pointer   |
| 81145       | Retaining ring for tuning shaft                 |
| 116690      | Socket—octal base                               |
| 160392      | Socket—octal (rectifier)                        |
| 160294      | Socket—8 prong for 14H7                         |
| 500499      | Socket—pilot lamp (with leads)                  |
| 161384      | Spring—dial cord tension                        |
| 500497      | Stud—dial scale retaining                       |
| 500289      | Tuning Shaft                                    |

I.F. 455 KC.


# STEWART-WARNER 206D & 206E CHASSIS

RECEIVER MODELS 206DA to 206DZ and 206EA to 206EZ

THIS MANUAL APPLIES ONLY TO RECEIVERS WITH P.M. SPEAKERS

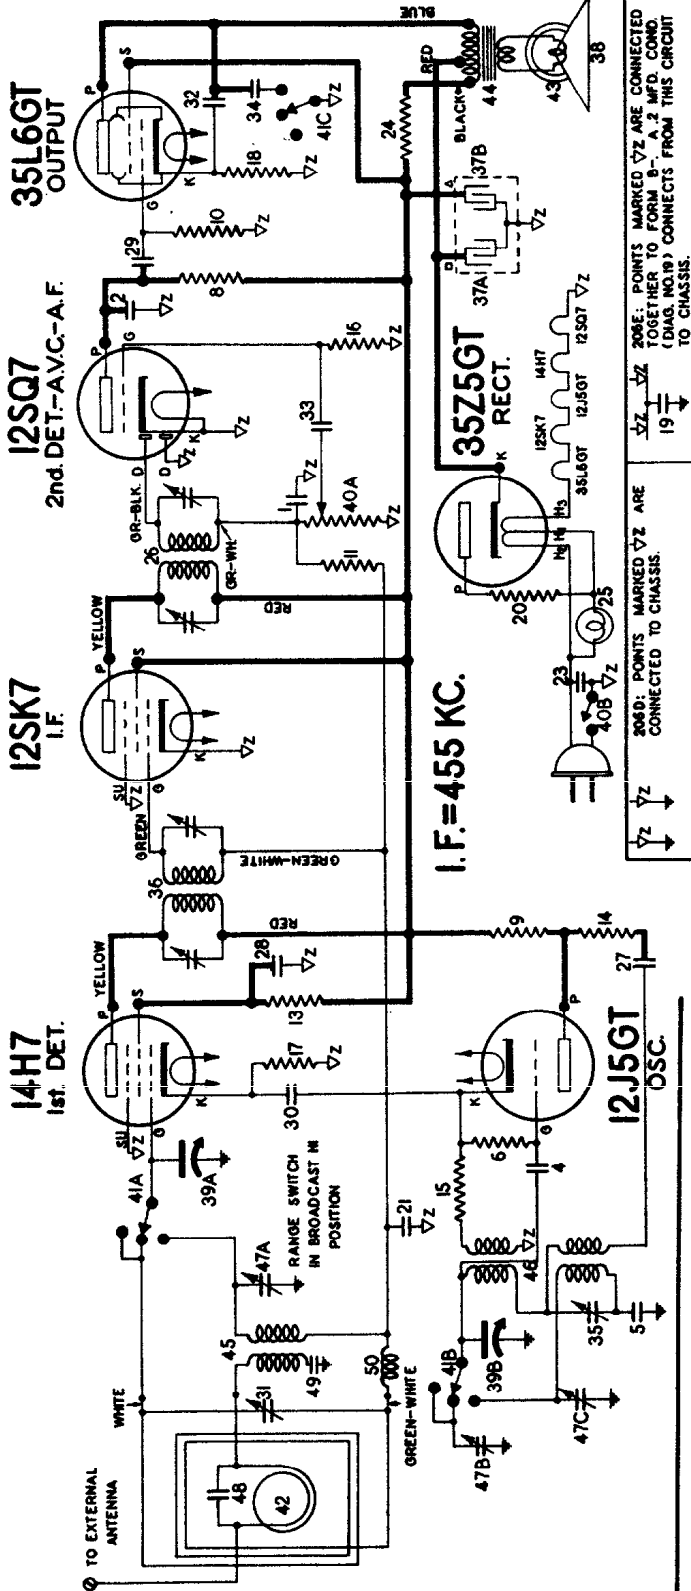

## SOCKET VOLTAGES

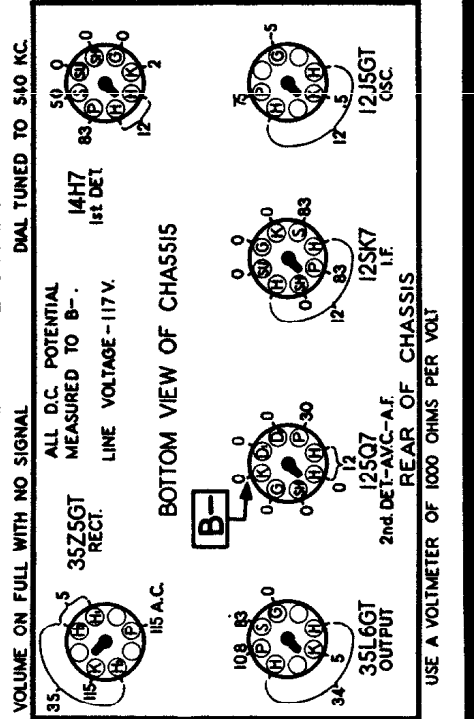

| Diagram No. | Part No. | Description                             |
|-------------|----------|---|
| 1-2         | 83539    | Condenser, Mica 260 Mmfd.               |
| 4           | 83783    | Condenser, Mica 110 Mmfd.               |
| 5           | 88587    | Condenser, Mica .0042 Mid.              |
| 6           | 110552   | Resistor, Carbon-47,000 Ohms 1/4 Watt.  |
| 8           | 110553   | Resistor, Carbon-220,000 Ohms 1/4 Watt. |
| 9           | 110557   | Resistor, Carbon-4,700 Ohms 1/4 Watt.   |
| 10          | 110559   | Resistor, Carbon-470,000 Ohms 1/4 Watt. |
| 11          | 110570   | Resistor, Carbon-2.2 Meg. 1/4 Watt.     |
| 13          | 110578   | Resistor, Carbon-68,000 Ohms 1/4 Watt.  |
| 14-15       | 110590   | Resistor, Carbon-180 Ohms 1/4 Watt.     |
| 16          | 110590   | Resistor, Carbon-3.3 Meg. 1/4 Watt.     |
| 17          | 116079   | Resistor, Insulated 1200 Ohms 1/4 Watt. |
| 18          | 116092   | Resistor, 140 Ohms 1 Watt-W.W.          |
| 19          | 116752   | Condenser, 2 Mid. 600 Volt (206E only). |
| 20          | 116752   | Resistor, 33 Ohms 1 Watt-W.W.           |
| 21 to 23    | 116819   | Condenser, .05 Mfd. 600 Volt.           |
| 24          | 118824   | Resistor, Carbon-1,500 Ohms 1/2 Watt.   |
| 25          | 118921   | Lamp, Dial (Mazda No. 47)               |
| 26          | 119024   | Transformer, 2nd I.F.                   |
| 27 to 30    | 119193   | Condenser, .01 Mfd. 600 Volt.           |
| 31          | 119345   | Condenser, Trimmer (Loop)               |
| 32          | 119414   | Condenser, .02 Mfd. 600 Volt.           |
| 33          | 119817   | Condenser, .004 Mfd. 600 Volt.          |

| SWITCH POSITION           | BAND      | TO   |
|---------------------------|-----------|------|
| EXTREME COUNTER-CLOCKWISE | BROADCAST | LOW  |
| MIDDLE POSITION           | BROADCAST | HIGH |
| Shown on Circuit Diagram  |           |      |
| EXTREME CLOCKWISE         | FOREIGN   | HIGH |


34 ..... Condenser, .04 Mfd. 600 Volt.  
 35 ..... Condenser, Padder.  
 36 ..... Transformer, 1st I.F.  
 37A-37B ..... { Condenser, A-40 Mfd. 150 Volt  
 { Electrolytic B-20 Mfd. 150 Volt }

POINTS MARKED VZ ARE CONNECTED TO CHASSIS.  
 POINTS MARKED VZ ARE CONNECTED TOGETHER TO FORM B-.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## STEWART-WARNER 206G CHASSIS

### RECEIVER MODELS 206GA TO 206GZ

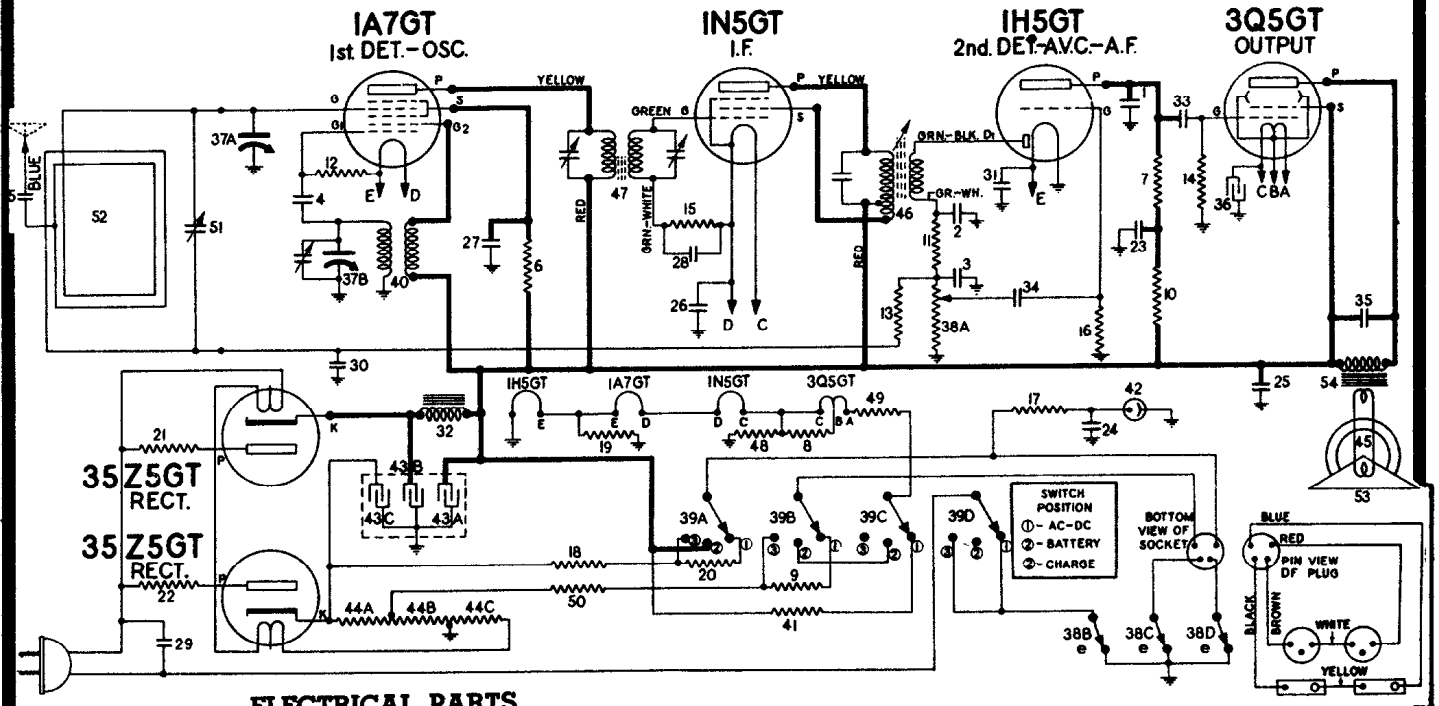

#### ELECTRICAL PARTS


| Diagram Number | Part Number | Description  |
|----------------|-------------|--|
| 1              | 83783       | Condenser, Mica. 110 Mmfd.   |
| 2-3-4          | 85081       | Condenser, Mica. 51 Mmfd.  |
| 5              | 85563       | Condenser, Mica. 26 Mmfd.  |
| 6              | 110552      | Resistor, Carbon—47,000 Ohms 1/4 Watt.   |
| 7              | 110554      | Resistor, Carbon—1 Megohm 1/4 Watt.  |
| 8-9            | 110556      | Resistor, Carbon—330 Ohm 1/4 Watt.   |
| 10             | 110559      | Resistor, Carbon—470,000 Ohms 1/4 Watt.  |
| 11             | 110564      | Resistor, Carbon—100,000 Ohms 1/4 Watt.  |
| 12-13-14       | 110570      | Resistor, Carbon—2.2 Meg. 1/4 Watt.  |
| 15-16-17       | 110580      | Resistor, Carbon—3.3 Meg. 1/4 Watt.  |
| 18             | 110588      | Resistor, Carbon—6800 Ohms 1/4 Watt.   |
| 19             | 112974      | Resistor, Carbon—220 Ohm 1/4 Watt.   |
| 20             | 112995      | Resistor, Carbon—15,000 Ohm 1/4 Watt.  |
| 21-22          | 116013      | Resistor, 50 Ohm 1 Watt.   |
| 23 to 26       | 116625      | Condenser, .1 Mfd. 600 Volts.  |
| 27 to 31       | 116819      | Condenser, .05 Mfd. 600 Volts.   |
| 32             | 117888      | Filter Choke   |
| 33             | 119193      | Condenser, .01 Mfd. 600 Volts.   |
| 34             | 119917      | Condenser, .004 Mfd. 600 Volts.  |
| 35             | 119875      | Condenser, .002 Mfd. 600 Volts.  |
| 36             | 161273      | Condenser, Electrolytic 50 Mfd. 25 Volt.   |
| 37A-37B        | 500443      | Condenser, Variable Tuning—with drum.  |
| 38A to 38D     | 500481      | Volume Control, 1 Meg. (with switch).  |
| 39A to 39D     | 500507      | Switch, AC—DC & Battery.   |
| 40             | 500689      | Coil, Oscillator.  |
| 41             | 500712      | Resistor, 1830 Ohms 5 Watt, Wire Wound.  |
| 42             | 500713      | Neon Glow Lamp.  |
| 43A to 43C     | 500714      | Condenser, Electrolytic—<br>A—20 Mfd. 200 Volt }<br>B—20 Mfd. 200 Volt }<br>C—20 Mfd. 150 Volt } |
| 44A to 44C     | 500715      | Resistor, Load—<br>A—1460 Ohms 10 Watt }<br>B—155 Ohms 1 Watt }<br>C—310 Ohms 10 Watt }          |

This receiver is equipped with a neon lamp on the dial scale which indicates the condition of the batteries. The neon lamp is included in an oscillating (R-C) circuit which has been designed to oscillate at approximately 3 pulses per second when the batteries are in a fully charged condition. As the battery voltage decreases with use the number of pulses per second decreases.

When the battery voltage is low (approximately 72 volts) the light flickers more slowly (approximately 1 a second). The set should not be operated from battery power after this point is reached. The batteries should be charged for at least twice the time they were used—as soon as possible after they have been run down.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

#### SOCKET VOLTAGES

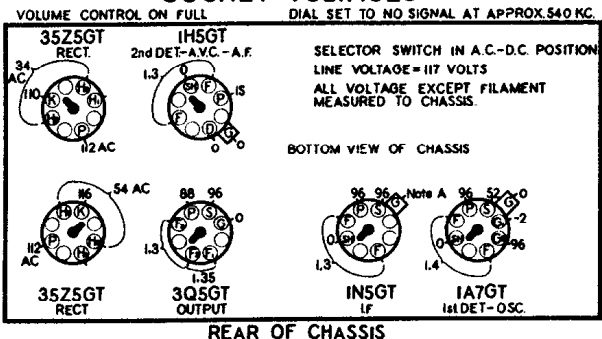

#### REAR OF CHASSIS

**NOTE A:** Voltage on the grid of the IN5GT intermediate amplifier tube cannot be measured with a standard voltmeter because of the high resistance of resistor No. 15.



Use A Voltmeter of 1000 Ohms Per Volt.

#### CHARGING BATTERIES

A separate charging system consisting of a 35Z5GT rectifier and a suitable resistor voltage dividing network and filter is incorporated in this receiver. The circuit is arranged to provide a very light charging current when the receiver is operated from either AC or DC. This is just enough to maintain the batteries but will not charge up used batteries. A separate charging position is provided for rapid recharging of the batteries. The resistance voltage divider is designed to give a charging rate of approximately one third the discharge rate, this having been found to give best results. It is recommended that the batteries be left on charge at least twice the time they were used. As the batteries age it is necessary to charge for a longer period.



## STEWART-WARNER 207D CHASSIS (RECEIVER MODEL 207DK)

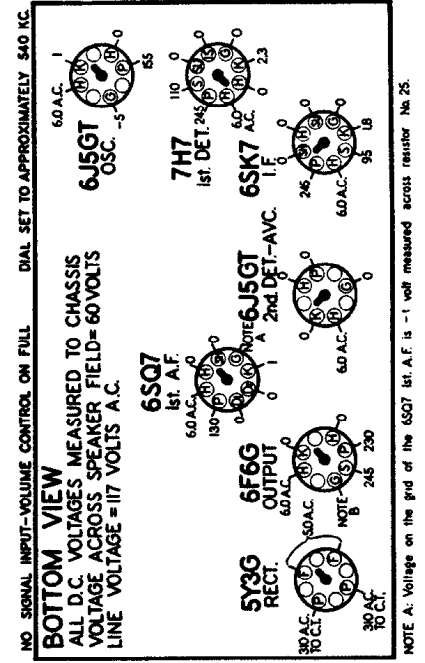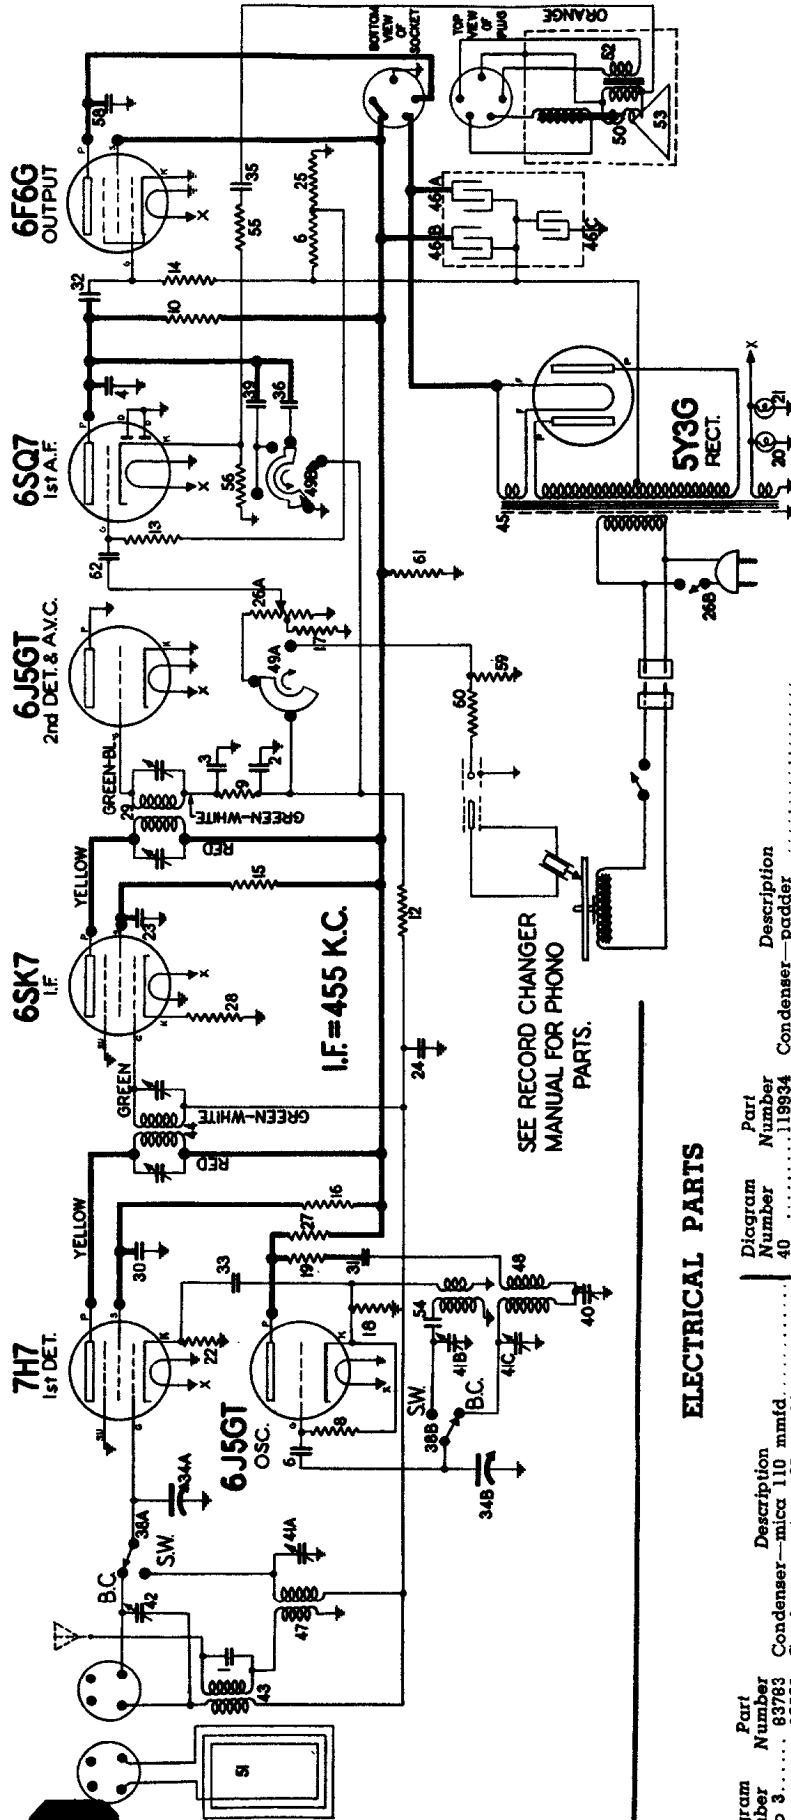

**BOTTOM VIEW**  
ALL D.C. VOLTAGES MEASURED TO CHASSIS  
VOLTAGE ACROSS SPEAKER FIELD=60 VOLTS  
LINE VOLTAGE=117 VOLTS A.C.


NOTE A: Voltage on the grid of the 6SQ7 1st A.F. is -1 volt measured across resistor No. 25.  
NOTE B: Voltage on the grid of the 6F6G Output Tube is -3 volts measured across Resistor No. 25 and 6.

### ELECTRICAL PARTS

| Diagram Number | Part Number | Description   |
|----------------|-------------|---|
| 40             | 119934      | Condenser—paper, 3 section.                                 |
| 41A to 41C     | 160415      | Condenser—trimmer (Loop)                                    |
| 42             | 160449      | Coil—B.C. antenna loading                                   |
| 43             | 500255      | Transformer—1st I.F.  |
| 44             | 500801      | Transformer—power, 60 cycle                                 |
| 45             | 501044      | Condenser—Electrolytic                                      |
| 46A to 46C     | 501060      | A—20 Mfd. 400 V.<br>B—20 Mfd. 25 V.<br>C—short wave antenna |
| 47             | 501159      | Coil—oscillator (B.C. & S.W.)                               |
| 48             | 501160      | Switch—tone   |
| 49A-49B        | 501180      | Speaker—Dynamic (12")                                       |
| 50             | M-501225    | Loop Antenna Complete                                       |
| 51             | 501226      | Transformer—output for M-501225 Spkr.                       |
| 52             | M-501280    | Cone & Voice Coil for M-501225 Spkr.                        |
| 53             | M-501281    | Transformer—output for M-501225 Spkr.                       |
| 54             | 88587       | Condenser—mica .0042 mfd.                                   |
| 55             | 118816      | Resistor—6800 ohms 1/4 watt.                                |
| 56             | 118078      | Resistor—560 ohms 1/4 watt.                                 |
| 57             | 118078      | Resistor—560 ohms 1/4 watt.                                 |
| 58             | 118078      | Resistor—560 ohms 1/4 watt.                                 |
| 59             | 118078      | Resistor—560 ohms 1/4 watt.                                 |
| 60             | 118078      | Resistor—560 ohms 1/4 watt.                                 |
| 61             | 118078      | Resistor—560 ohms 1/4 watt.                                 |
| 62             | 501366      | Crystal Cartridge   |


(RECEIVER MODELS  
208BK AND 208CK)

STEWART-WARNER 208B & 208C CHASSIS

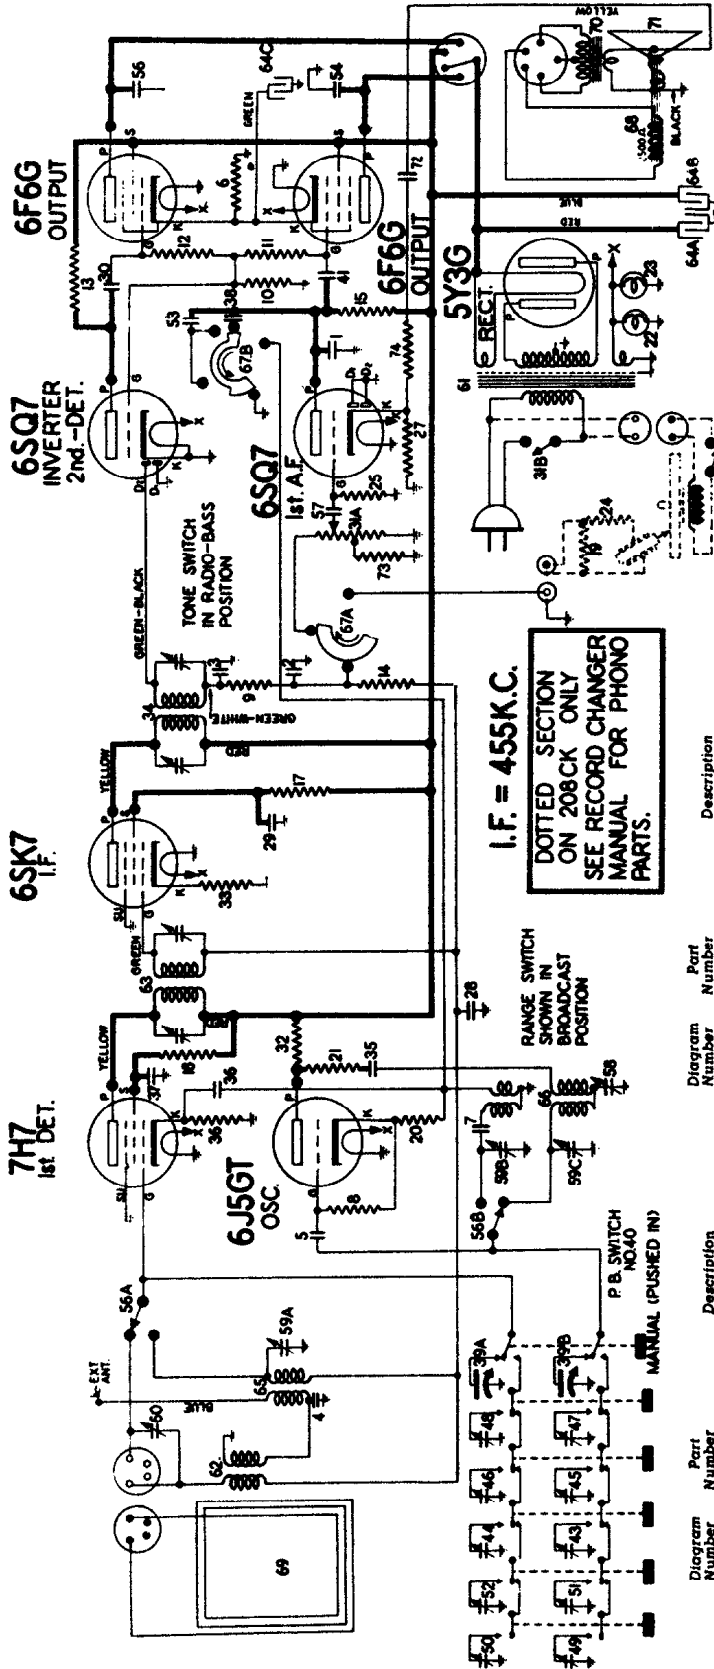

I.F. = 455K.C.  
 DOTTED SECTION  
 ON 208CK ONLY  
 SEE RECORD CHANGER  
 MANUAL FOR PHONO  
 PARTS.

SOCKET VOLTAGES

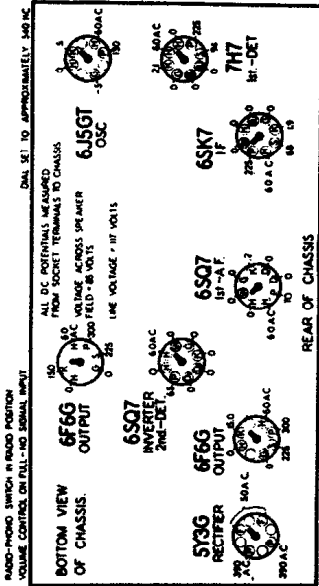

| Diagram Number | Part Number | Description  |
|----------------|-------------|--|
| 47-48          | 119664      | Condenser push button trimmer (High Freq.)   |
| 49 to 52       | 119753      | Condenser push button trimmer (Low Freq.)  |
| 53 to 55       | 119817      | Condenser .004 mid. 600 volt.  |
| 56A-56B        | 119829      | Switch band  |
| 59             | 119894      | Condenser .002 mid. 600 volt.  |
| 59A to 59C     | 119914      | Condenser trimmer, 3 section   |
| 60             | 160445      | Condenser trimmer for loop   |
| 61             | 500116      | Transformer power (60 cycles)  |
| 62             | 500235      | Coil, B. C. antenna loading  |
| 63             | 500801      | Transformer 1st I.F.   |
| 64A to 64C     | 501060      | Condenser electrolytic<br>A 20 mid. 400 volt<br>B 15 mid. 25 volt<br>C 20 mid. 25 volt |
| 65             | 501159      | Coil- short wave antenna   |
| 66             | 501160      | Coil-oscillator (B.C. & S.W.)  |
| 67A-67B        | M-501245    | Switch dynamic 12"   |
| 68             | M-501245    | Loop Antenna   |
| 69             | M-501245    | Transformer output for M-501245 Spr.   |
| 70             | M-501304    | Cone & Voice Coil for M-501245 Spr.  |
| 71             | 119825      | Condenser .1 mid.  |
| 72             | 119825      | Resistor carbon 22,000 ohms 1/4 watt.  |
| 73             | 119825      | Resistor carbon 10,000 ohms 1/4 watt.  |
| 74             | 119825      | Resistor carbon 10,000 ohms 1/4 watt.  |
| 1 to 4         | 63783       | Condenser mica 110 mmid.   |
| 5              | 85061       | Condenser mica 51 mmid.  |
| 6              | 8462        | Resistor wire wound 270 ohms 1 watt.   |
| 7              | 69587       | Condenser mica .0045 mid.  |
| 8-9            | 110552      | Resistor carbon 47,000 ohms 1/4 watt.  |
| 10 to 13       | 110553      | Resistor carbon 270,000 ohms 1/4 watt.   |
| 14             | 110554      | Resistor carbon 47,000 ohms 1/4 watt.  |
| 15             | 110555      | Resistor carbon 100,000 ohms 1/4 watt.   |
| 17-19          | 110556      | Resistor carbon 22,000 ohms 1/4 watt.  |
| 19             | 110551      | Resistor carbon 180 ohms 1/4 watt.   |
| 20-21          | 110590      | Resistor carbon 680,000 ohms 1/4 watt.   |
| 22-23          | 110629      | Dial Light Bulb, 6.3 volt (Mazda No. 44)   |
| 24             | 112692      | Resistor carbon 150,000 ohms 1/4 watt.   |
| 25             | 112675      | Resistor carbon 10 meg. 1/4 watt.  |
| 26-27          | 116078      | Resistor 560 ohms 1/4 watt.  |
| 28 to 30       | 116625      | Condenser .1 mid. 600 volt.  |
| 31A-31B        | 116919      | Condenser .05 mid. 600 volt.   |
| 32             | 118889      | Volume Control 1 meg. (with switch)  |
| 33             | 118905      | Resistor carbon 10,000 ohms 1 watt.  |
| 34             | 119027      | Resistor carbon 27,000 ohms 1/4 watt.  |
| 35 to 38       | 119183      | Condenser .01 mid. 600 volt.   |
| 39A-39B        | 119291      | Condenser variable tuning  |
| 40             | 119346      | Switch- push button  |
| 41             | 116414      | Condenser .02 mid. 600 volt.   |
| 43 to 46       | 119693      | Condenser push button trimmer (Med. Freq.)   |

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## SERVICE DATA for 208B & 208C CHASSIS

### ALIGNMENT EQUIPMENT & PROCEDURE

1. Connect the output meter across the voice coil or from the plate of one 6F6G output tube to chassis through a .1 mfd. condenser.
2. Connect the ground lead of the signal generator to the receiver chassis.
3. Check the pointer to see that it is correctly set to the low freq. end of the dial scale with gang in full mesh.
4. Push in the "manual" button and keep it pushed in.
5. Turn the volume control to the maximum volume position, and the tone control to the "Radio-Speech" position.
6. FOLLOW THE ORDER OF ALIGNMENT INDICATED BELOW.


| Dummy Ant. in Series with Sig. Gen. | Connection of Sig. Generator Output to Receiver | Signal Generator Frequency | Band Switch Position | Receiver Dial Setting                         | Trimmer Number | Trimmer Description          | Type of Adjustment  |
|-------------------------------------|---|----------------------------|----------------------|---|----------------|------------------------------|---|
| .1 MFD Condenser                    | Lug on Rear Section of Gang Cond.               | 455 KC                     | Broadcast            | Any Point Where It Does Not Affect the Signal | 1-2            | 2nd I.F.                     | Adjust for Maximum Output. Then repeat Adjustment.  |
|                                     |   |                            |                      |   | 3-4            | 1st I.F.                     |   |
| 400 OHM Carbon Resistor             | Blue Lead from Chassis                          | 16 MC                      | Foreign              | 16 MC   | 5              | Foreign Oscillator           | Adjust for Maximum Output. Check to see if Proper Peak was Obtained by Tuning in Image at Approx. 15.1 MC. If Image does not appear, Realign at 16 MC, with Trimmer Screw farther out. Recheck Image. |
| 400 OHM Carbon Resistor             | Blue Lead from Chassis                          | 16 MC                      | Foreign              | Tune to 16 MC Generator Signal                | 6              | Foreign Antenna              | Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained.  |
| No Connection                       | Place Lead from Signal Gen. Near Loop           | 1500 KC                    | Broadcast            | 1500 KC                                       | 7              | Broadcast Oscillator (Shunt) | Adjust for Maximum Output.  |

**NOW PLACE THE CHASSIS AND LOOP ANTENNA INTO POSITION IN THE CABINET.**


|               |                                       |         |           |                                  |   |                               |  |
|---------------|---------------------------------------|---------|-----------|----------------------------------|---|-------------------------------|--|
| No Connection | Place Lead from Signal Gen. Near Loop | 1500 KC | Broadcast | Tune to 1500 KC Generator Signal | 8 | Broadcast Antenna             | Adjust for Maximum Output.   |
| No Connection | Place Lead from Signal Gen. Near Loop | 600 KC  | Broadcast | Tune to 600 KC Generator Signal  | 9 | Broadcast Oscillator (Series) | Adjust for Maximum Output. Try to Increase Output by Detuning Trimmer and Retuning Receiver Dial until Maximum Output is Obtained. |

### MISCELLANEOUS PARTS


| Part Number | Description                                     |
|-------------|---|
| 501182      | Cable—motor (with receptacle).....              |
| 117493      | Cable—pickup.....                               |
| 114355      | Clamp—for dial cord.....                        |
| 112745      | Clip—coil mounting.....                         |
| 117057      | Cord—drive (specify 6 ft. lengths).....         |
| 501199      | Dial Scale.....                                 |
| 113402      | Drum—dial cord drive.....                       |
| 160182      | Escutcheon—dial with glass.....                 |
| 160634      | Escutcheon—push button (complete).....          |
| 88348       | Eyelet—for pointer cord.....                    |
| 160219      | Knob.....                                       |
| 12349       | Nut—8-32 for mounting.....                      |
| 116952      | Pin for push buttons.....                       |
| 119451      | Pointer.....                                    |
| 160185      | Push button.....                                |
| 81145       | Retaining ring for tuning shaft.....            |
| 113463      | Rubber Bushing—chassis mounting.....            |
| 118606      | Shaft—tuning.....                               |
| 112874      | Screw—No. 10 x 1½ chassis mounting.....         |
| 114314      | Screw—special head for mounting escutcheon..... |
| 85827       | Set Screw—8-32 Sq. Hd. for drive drum.....      |
| 119791      | Socket—octal.....                               |
| 114378      | Socket—octal, with special ground.....          |
| 114876      | Socket—octal (rectifier).....                   |
| 160294      | Socket for 7H7 8 prong.....                     |
| 500051      | Socket for loop antenna.....                    |

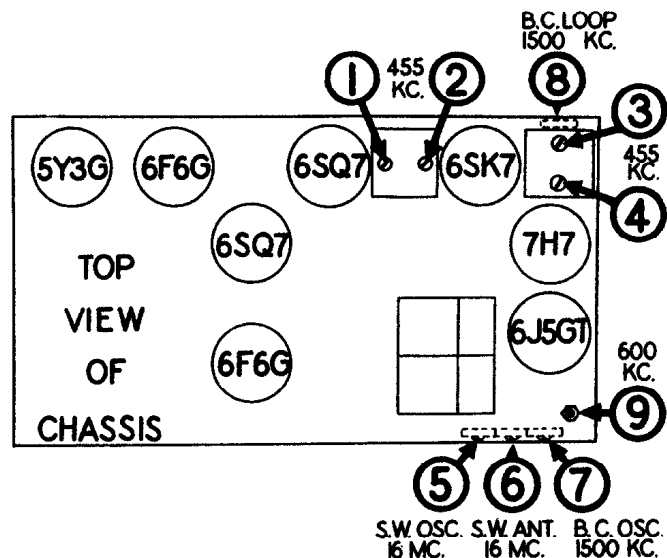


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

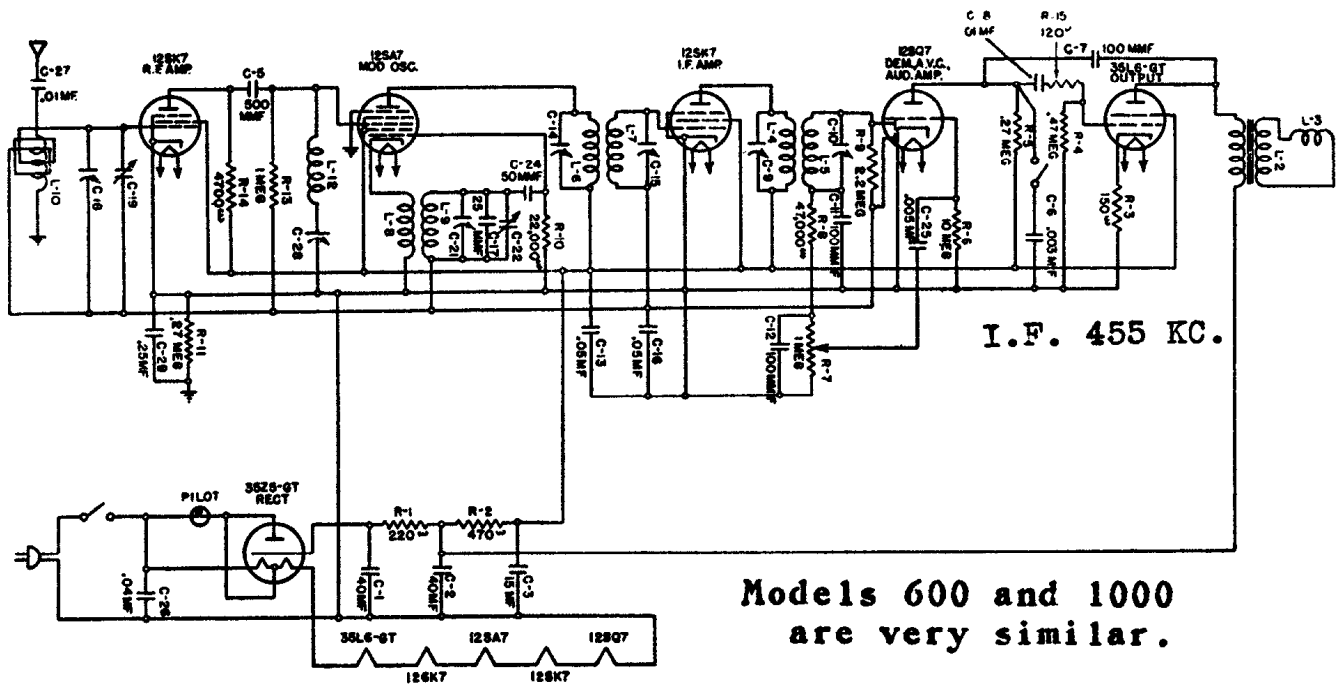

## STROMBERG-CARLSON NO. 900 AC-DC RADIO RECEIVERS

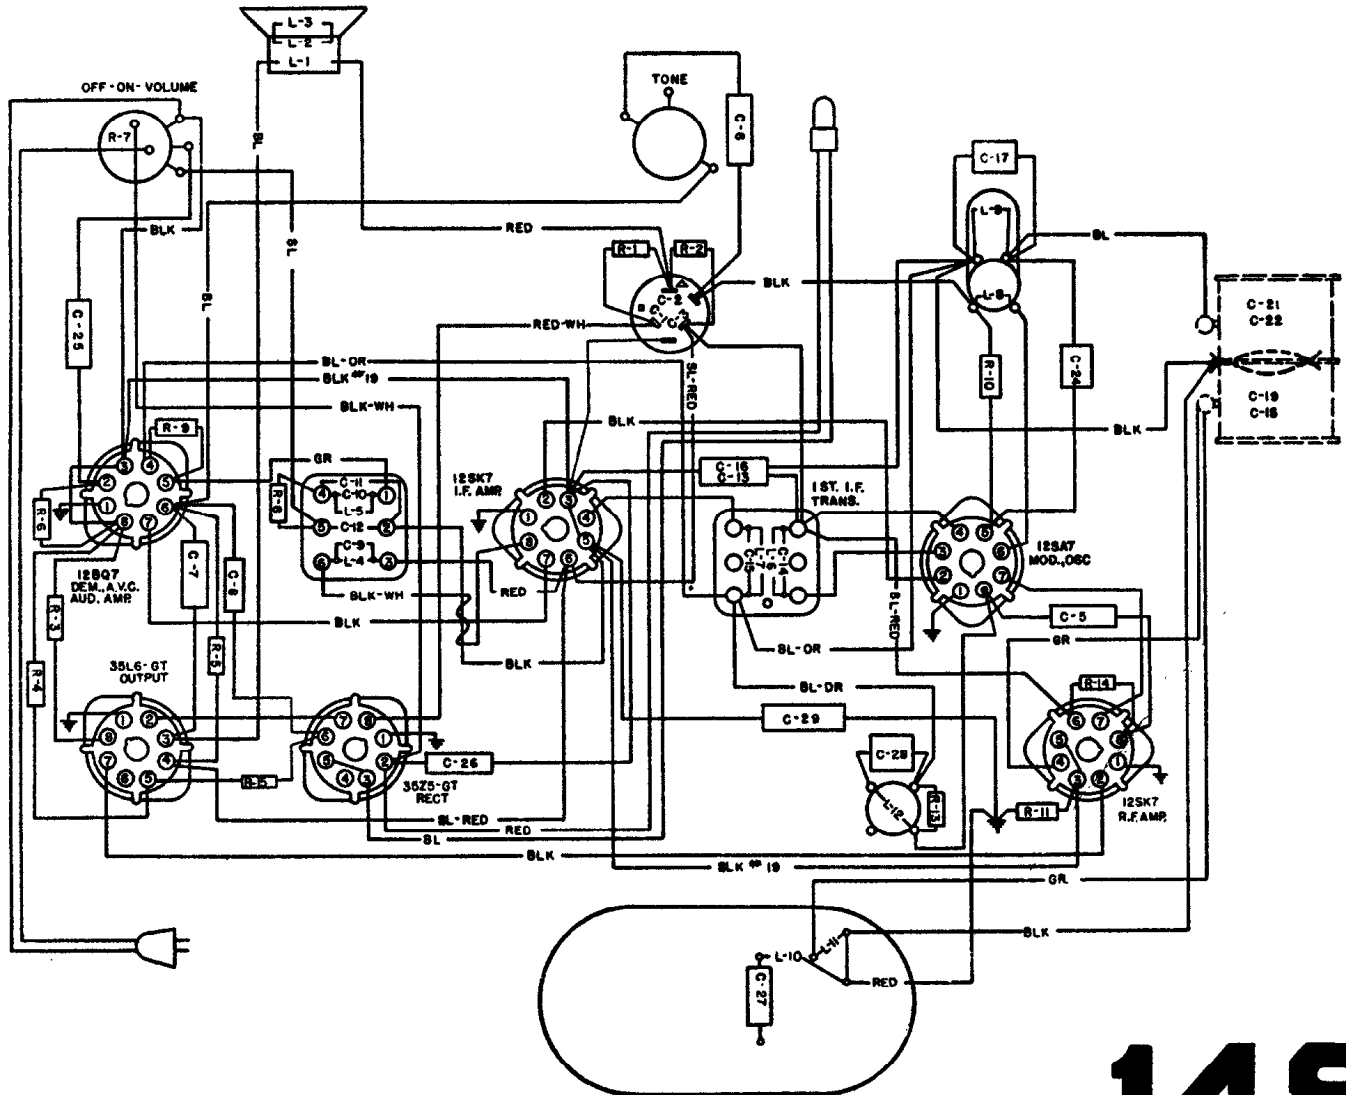

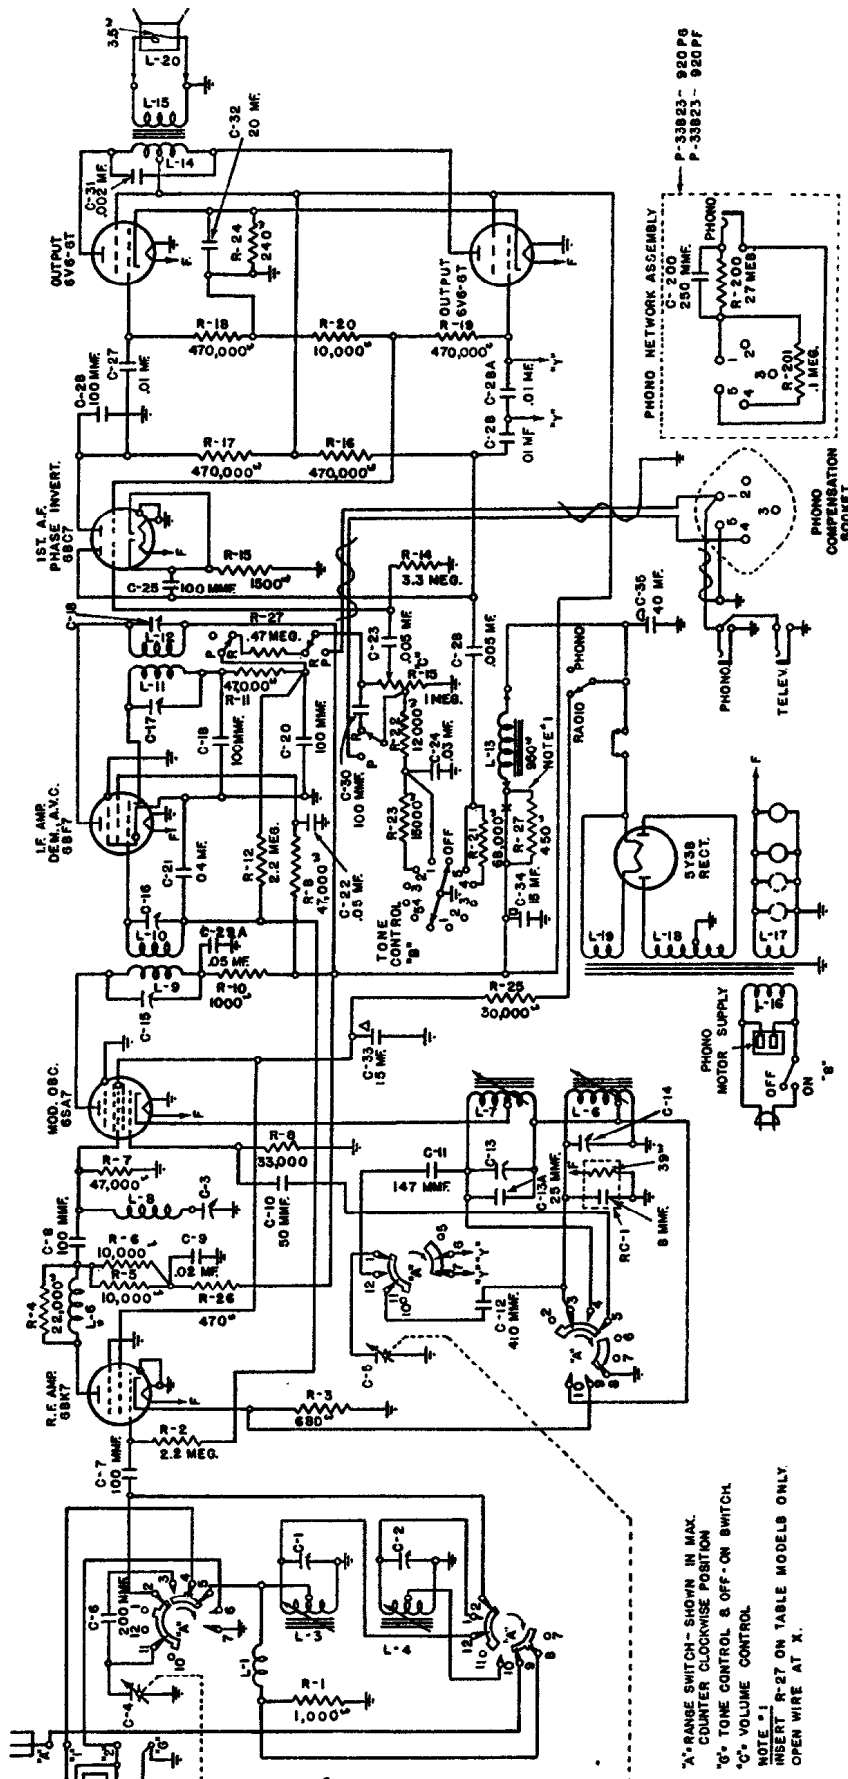

**STROMBERG-CARLSON NO. 920 RADIO RECEIVERS**

Also Model 1020

| Tube  | Circuit                           | TERMINALS OF SOCKETS |      |      |      |     |     |      |      |
|-------|-----------------------------------|----------------------|------|------|------|-----|-----|------|------|
|       |                                   | 1                    | 2    | 3    | 4    | 5   | 6   | 7    | 8    |
| 6SK7  | R. F. Amp.                        | 0                    | 6.5  | 0    | 0    | 0   | +85 | 0    | +178 |
| 6SA7  | Osc. and Mod.                     | 0                    | 0    | +240 | +85  | 0   | 0   | 6.5  | 0    |
| 6SF7  | I. F. Amp.<br>Demod. and A. V. C. | 0                    | 0    | 0    | 0    | +95 | 0   | +240 | 6.5  |
| 6SC7  | Audio Amp. and Inverter           | 0                    | +65  | 0    | 0    | +65 | 4*  | 0    | 6.5  |
| 6V6GT | Output                            | 0                    | 0    | +235 | +240 | 0   | 0   | 6.5  | 13*  |
| 6V6GT | Output                            | 0                    | 6.5  | +235 | +240 | 0   | 0   | 0    | 13*  |
| 5Y3G  | Rectifier                         | 0                    | +380 | —    | 380  | —   | 380 | —    | +380 |

Input Power Frequency  
 50-60 Cycles  
 25-60 Cycles  
 50-60 Cycles  
 25-60 Cycles  
 60 Cycle  
 25 Cycle  
 60 Cycle  
 25 Cycle

I. F. 455 KC.


\*Read on lowest possible scale of voltmeter

X\* RANGE SWITCH - SHOWN IN MAX. COUNTER CLOCKWISE POSITION  
 \*G\* TONE CONTROL & OFF-ON SWITCH  
 \*C\* VOLUME CONTROL  
 NOTE #1  
 INSERT R-27 ON TABLE MODELS ONLY  
 OPEN WIRE AT X.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS


## STROMBERG-CARLSON NO. 925 RADIO RECEIVERS STROMBERG-CARLSON TELEPHONE MANUFACTURING COMPANY ROCHESTER, NEW YORK

Also Model 1025

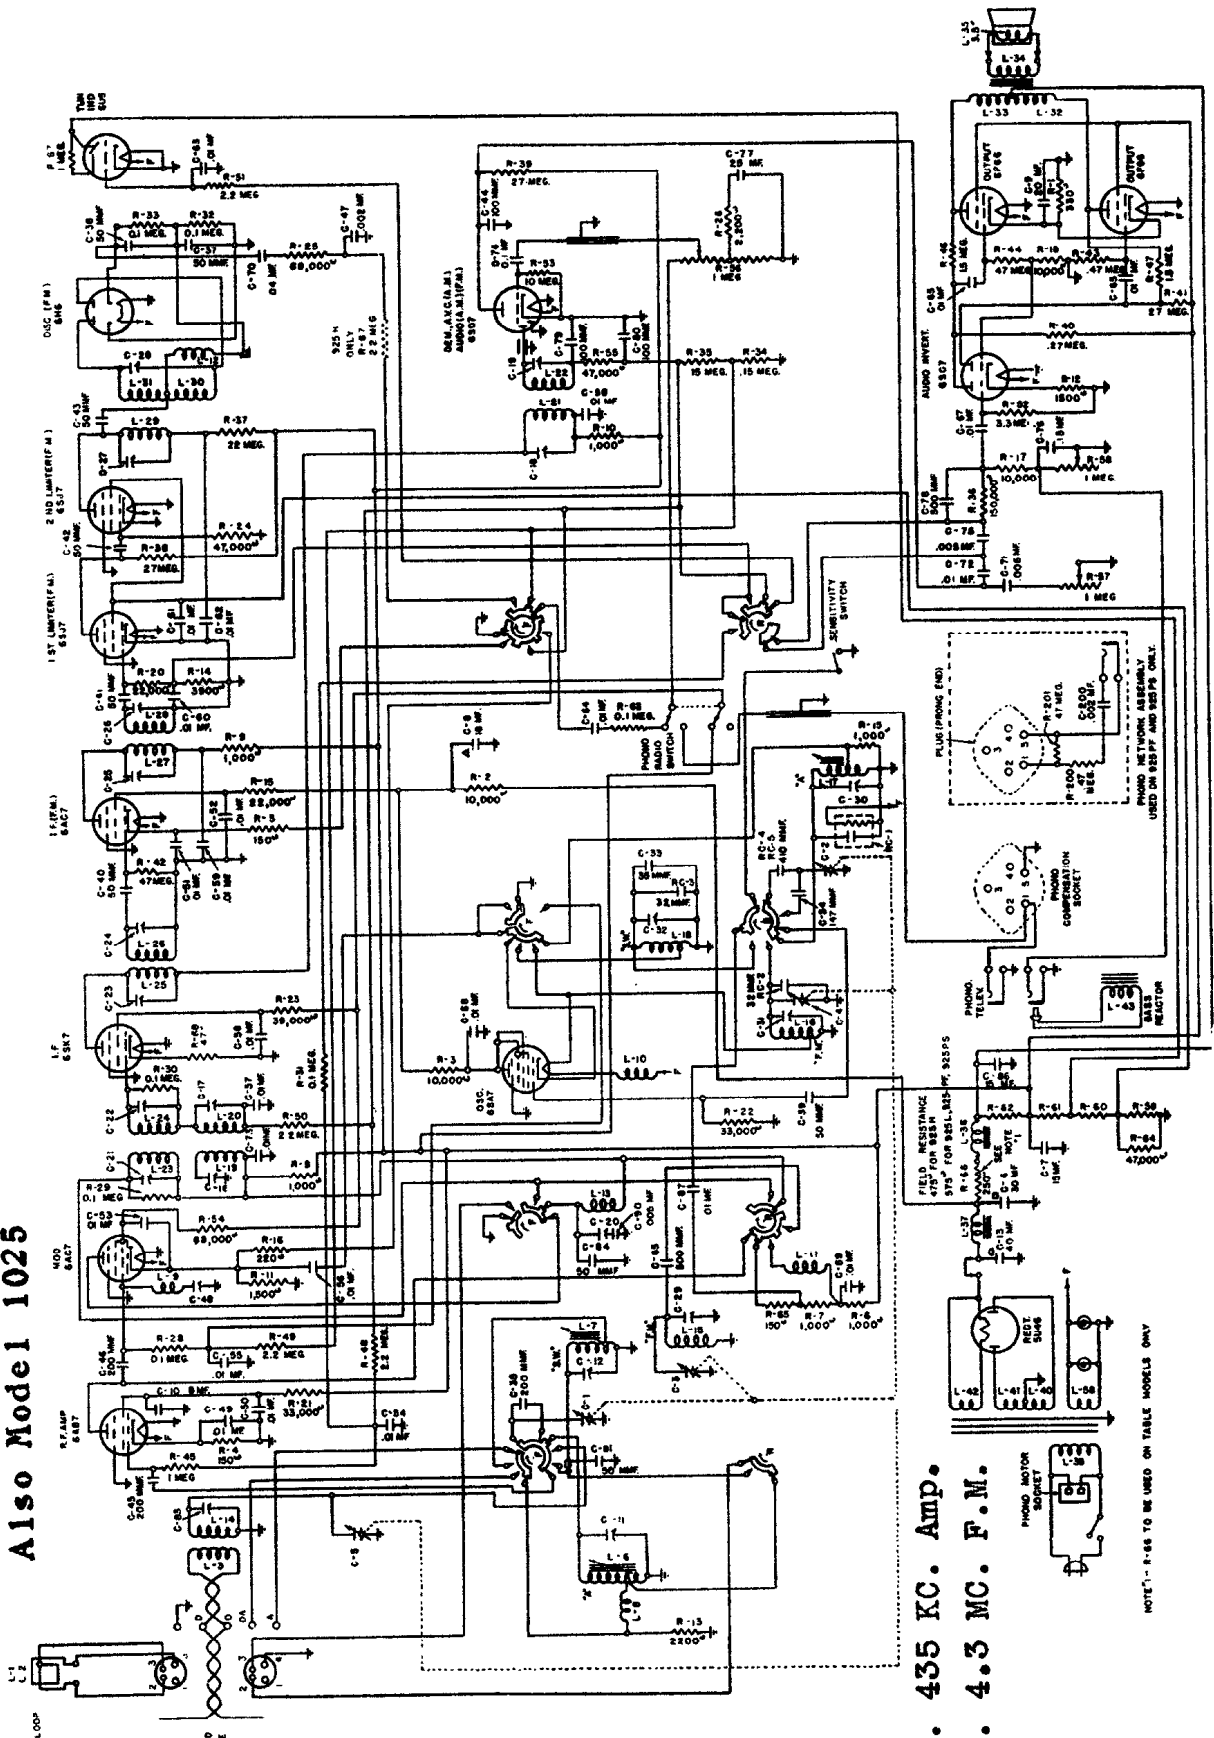

I. F. 435 KC. Amp.

I. F. 4.3 MC. F. M.



NOTE: R-45 TO BE USED ON TABLE MODELS ONLY

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## Stromberg-Carlson Models 925 and 1025

### CONTINUITY TEST

NOTE: These receivers use either a 6AC7 or 7V7 tube in the modulator stage. (See wiring diagram)

Remove all tubes and disconnect all plugs from the chassis before checking continuity.

Use a good meter capable of measuring accurately up to several megohms.

The resistances given are often approximate, owing

to electrolytic capacitors in the circuit. When this is the case, be sure to reverse the test leads and read the highest resistance.

Read from indicated terminals to chassis base unless otherwise specified.

#### TERMINALS OF SOCKETS

| Tube              | Circuit                                      | 1 | 2              | 3              | 4               | 5               | 6               | 7 | 8              |
|-------------------|--|---|----------------|----------------|-----------------|-----------------|-----------------|---|----------------|
| 6AB7              | R. F. Amplifier                              | S | S              | S              | A               | 150 $\Omega$    | 50000 $\Omega$  | S | 21000 $\Omega$ |
| 6AC7<br>or<br>7V7 | Modulator                                    | S | S              | S              | B               | C               | 80000 $\Omega$  | S | 18000 $\Omega$ |
|                   |  | S | 18000 $\Omega$ | 80000 $\Omega$ | S               | S               | S               | C | S              |
| 6SA7              | Oscillator                                   | S | S              | 35000 $\Omega$ | 35000 $\Omega$  | 30000 $\Omega$  | S               | S | 35000 $\Omega$ |
| 6SK7              | I. F. Amplifier                              | S | S              | S              | 2M              | S               | 70000 $\Omega$  | S | 18000 $\Omega$ |
| 6AC7              | 2nd I. F. Amplifier (F. M.)                  | S | S              | S              | 450000 $\Omega$ | D               | 45000 $\Omega$  | S | 18000 $\Omega$ |
| 6SJ7              | 1st Limiter (F. M.)                          | S | S              | S              | 22000 $\Omega$  | S               | 3500 $\Omega$   | S | 28000          |
| 6SJ7              | 2nd Limiter (F. M.)                          | S | S              | S              | 40000 $\Omega$  | S               | 4000 $\Omega$   | S | 24000          |
| 6H6               | Discriminator (F. M.)                        | S | S              | 10000          | S               | 100000 $\Omega$ | 100000 $\Omega$ | S | 18000          |
| 6SQ7              | Demod., A. V. C. (A. M.),<br>Audio Amplifier | S | 10M            | S              | E               | S               | 25000           | S | S              |
| 6SC7              | Audio Amp. and Inverter                      | S | 220000         | 9000 $\Omega$  | 3M              | 200000 $\Omega$ | 1200 $\Omega$   | S | S              |
| 6F6G              | Output                                       | S | S              | 17000 $\Omega$ | 17000 $\Omega$  | 400000 $\Omega$ | O               | S | 290 $\Omega$   |
| 6F6G              | Output                                       | S | S              | 17000 $\Omega$ | 170000 $\Omega$ | 400000 $\Omega$ | O               | S | 290 $\Omega$   |
| 5U4G              | Rectifier                                    | O | 20000 $\Omega$ | O              | 50 $\Omega$     | O               | 60 $\Omega$     | O | 20000 $\Omega$ |
| 6U5               | Tuning Indicator                             | S | 1M             | 2M             | 14000 $\Omega$  | S               | S               | — | —              |

Symbols shown on chart are as follows:  $\Omega$ —ohms; M—megohms; S—short; O—open.

### NORMAL VOLTAGE READINGS

#### TERMINALS OF SOCKETS

| Tube              | Circuit                                      | 1   | 2     | 3    | 4    | 5     | 6     | 7   | 8    |
|-------------------|--|-----|-------|------|------|-------|-------|-----|------|
| 6AB7              | R. F. Amplifier                              | 0   | 0     | 0    | 0    | +2.4  | +182  | 6.3 | +275 |
| 6AC7<br>or<br>7V7 | Modulator                                    | 0   | 0     | 0    | 0    | +6    | +218  | 6.3 | +300 |
|                   |  | 0   | +300  | +218 | 0    | 0     | 0     | +6  | 6.3  |
| 6SA7              | Oscillator                                   | 0   | 0     | +120 | +120 | -5    | 0     | 6.3 | +120 |
| 6SK7              | I. F. Amplifier                              | 0   | 0     | 0    | 0    | 0     | +110  | 6.3 | +290 |
| 6AC7              | 2nd I. F. Amplifier (F. M.)                  | 0   | 0     | 0    | 0    | +8    | +265  | 6.3 | +300 |
| 6SJ7              | 1st Limiter (F. M.)                          | 0   | 0     | 0    | 0    | 0     | +54   | 6.3 | +2   |
| 6SJ7              | 2nd Limiter (F. M.)                          | 0   | 0     | 0    | 0    | 0     | +54   | 6.3 | +3   |
| 6H6               | Discriminator (F. M.)                        | 0   | 0     | 0    | 0    | 0     | 0     | 6.3 | 0    |
| 6SQ7              | Demod., A. V. C. (A. M.),<br>Audio Amplifier | 0   | 0     | 0    | 0    | 0     | +100* | 0   | 6.3  |
| 6SC7              | Audio Amp. and Inverter                      | 0   | +140* | 0    | 0    | +130* | +2    | 6.3 | 0    |
| 6F6G              | Output                                       | 0   | 0     | +340 | +300 | 0     | 0     | 6.3 | +22  |
| 6F6G              | Output                                       | 0   | 0     | +340 | +300 | 0     | 0     | 6.3 | +22  |
| 5U4G              | Rectifier                                    | 0   | +450  | 0    | 415  | 0     | 415   | 0   | +450 |
| 6U5               | Tuning Indicator                             | 6.3 | +80   | 0    | +250 | 0     | 0     | —   | —    |

\*Read on 1000 volt scale of voltmeter.

Between terminals 2 and 8 of rectifier socket—5 volts A. C.


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## STROMBERG-CARLSON NO. 955 RADIO

1- ALTERNATIVE WIRING WITH OTHER TYPES OF TUBES INVOLVES THE FOLLOWING DIFFERENCES:  
 1) R.F. & 1ST. I.F. AMPLIFIER TUBES WERE 6AB7'S WITH SUPPRESSORS CONNECTED TO GROUND. R-11 WAS 270K, R-36 WAS 68,000, R-10 WAS 220K & R-18 WAS 1,000.  
 2) THE MODULATOR TUBE WAS A 6A7.

### Model 1055

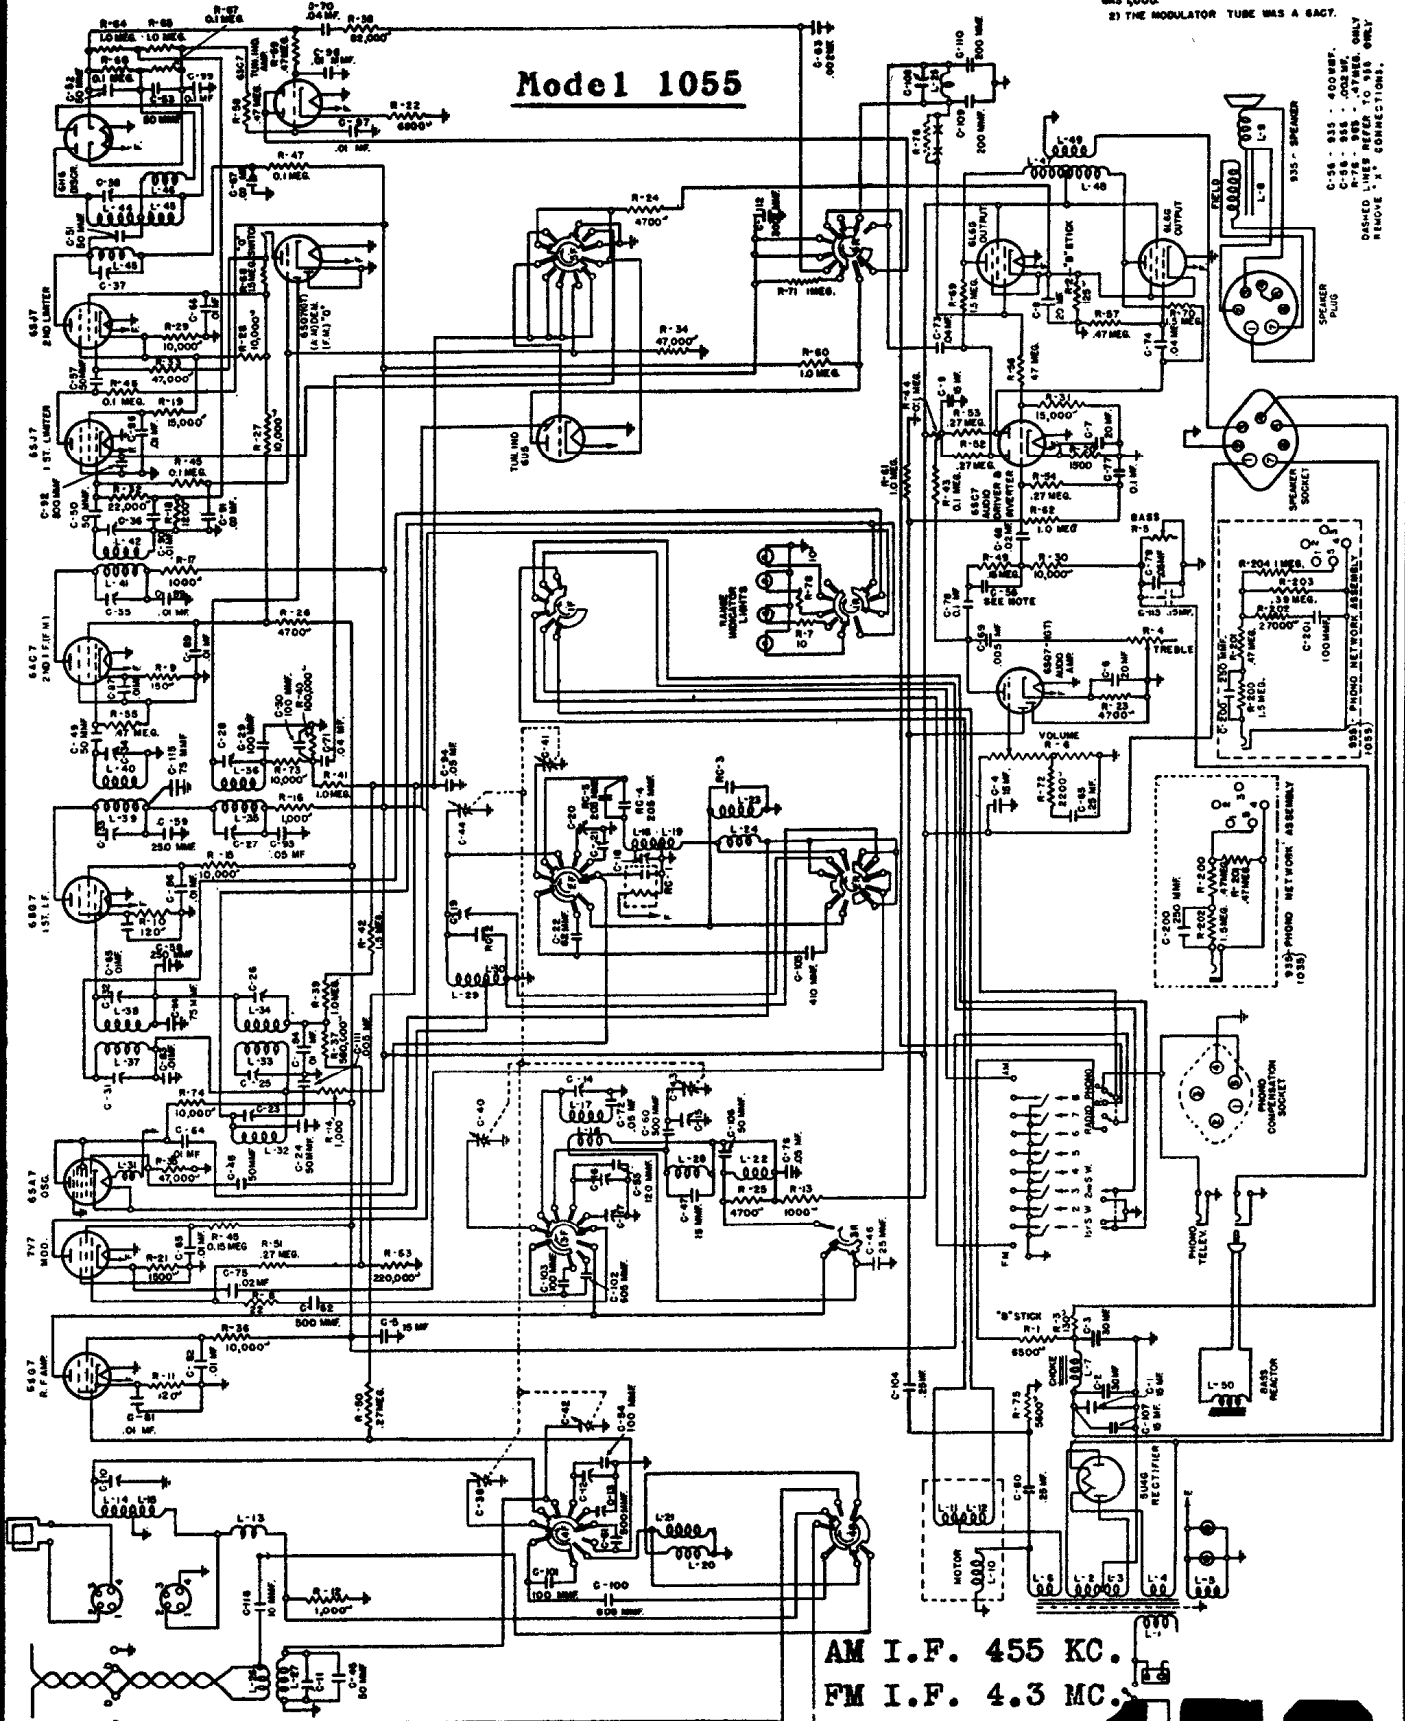

C-14 - 51K - 450 MF.  
 C-15 - 51K - 450 MF.  
 C-16 - 51K - 450 MF.  
 C-17 - 51K - 450 MF.  
 C-18 - 51K - 450 MF.  
 C-19 - 51K - 450 MF.  
 C-20 - 51K - 450 MF.  
 C-21 - 51K - 450 MF.  
 C-22 - 51K - 450 MF.  
 C-23 - 51K - 450 MF.  
 C-24 - 51K - 450 MF.  
 C-25 - 51K - 450 MF.  
 C-26 - 51K - 450 MF.  
 C-27 - 51K - 450 MF.  
 C-28 - 51K - 450 MF.  
 C-29 - 51K - 450 MF.  
 C-30 - 51K - 450 MF.  
 C-31 - 51K - 450 MF.  
 C-32 - 51K - 450 MF.  
 C-33 - 51K - 450 MF.  
 C-34 - 51K - 450 MF.  
 C-35 - 51K - 450 MF.  
 C-36 - 51K - 450 MF.  
 C-37 - 51K - 450 MF.  
 C-38 - 51K - 450 MF.  
 C-39 - 51K - 450 MF.  
 C-40 - 51K - 450 MF.  
 C-41 - 51K - 450 MF.  
 C-42 - 51K - 450 MF.  
 C-43 - 51K - 450 MF.  
 C-44 - 51K - 450 MF.  
 C-45 - 51K - 450 MF.  
 C-46 - 51K - 450 MF.  
 C-47 - 51K - 450 MF.  
 C-48 - 51K - 450 MF.  
 C-49 - 51K - 450 MF.  
 C-50 - 51K - 450 MF.  
 C-51 - 51K - 450 MF.  
 C-52 - 51K - 450 MF.  
 C-53 - 51K - 450 MF.  
 C-54 - 51K - 450 MF.  
 C-55 - 51K - 450 MF.  
 C-56 - 51K - 450 MF.  
 C-57 - 51K - 450 MF.  
 C-58 - 51K - 450 MF.  
 C-59 - 51K - 450 MF.  
 C-60 - 51K - 450 MF.  
 C-61 - 51K - 450 MF.  
 C-62 - 51K - 450 MF.  
 C-63 - 51K - 450 MF.  
 C-64 - 51K - 450 MF.  
 C-65 - 51K - 450 MF.  
 C-66 - 51K - 450 MF.  
 C-67 - 51K - 450 MF.  
 C-68 - 51K - 450 MF.  
 C-69 - 51K - 450 MF.  
 C-70 - 51K - 450 MF.  
 C-71 - 51K - 450 MF.  
 C-72 - 51K - 450 MF.  
 C-73 - 51K - 450 MF.  
 C-74 - 51K - 450 MF.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


AM I.F. 455 KC.  
 FM I.F. 4.3 MC.

# 153






# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

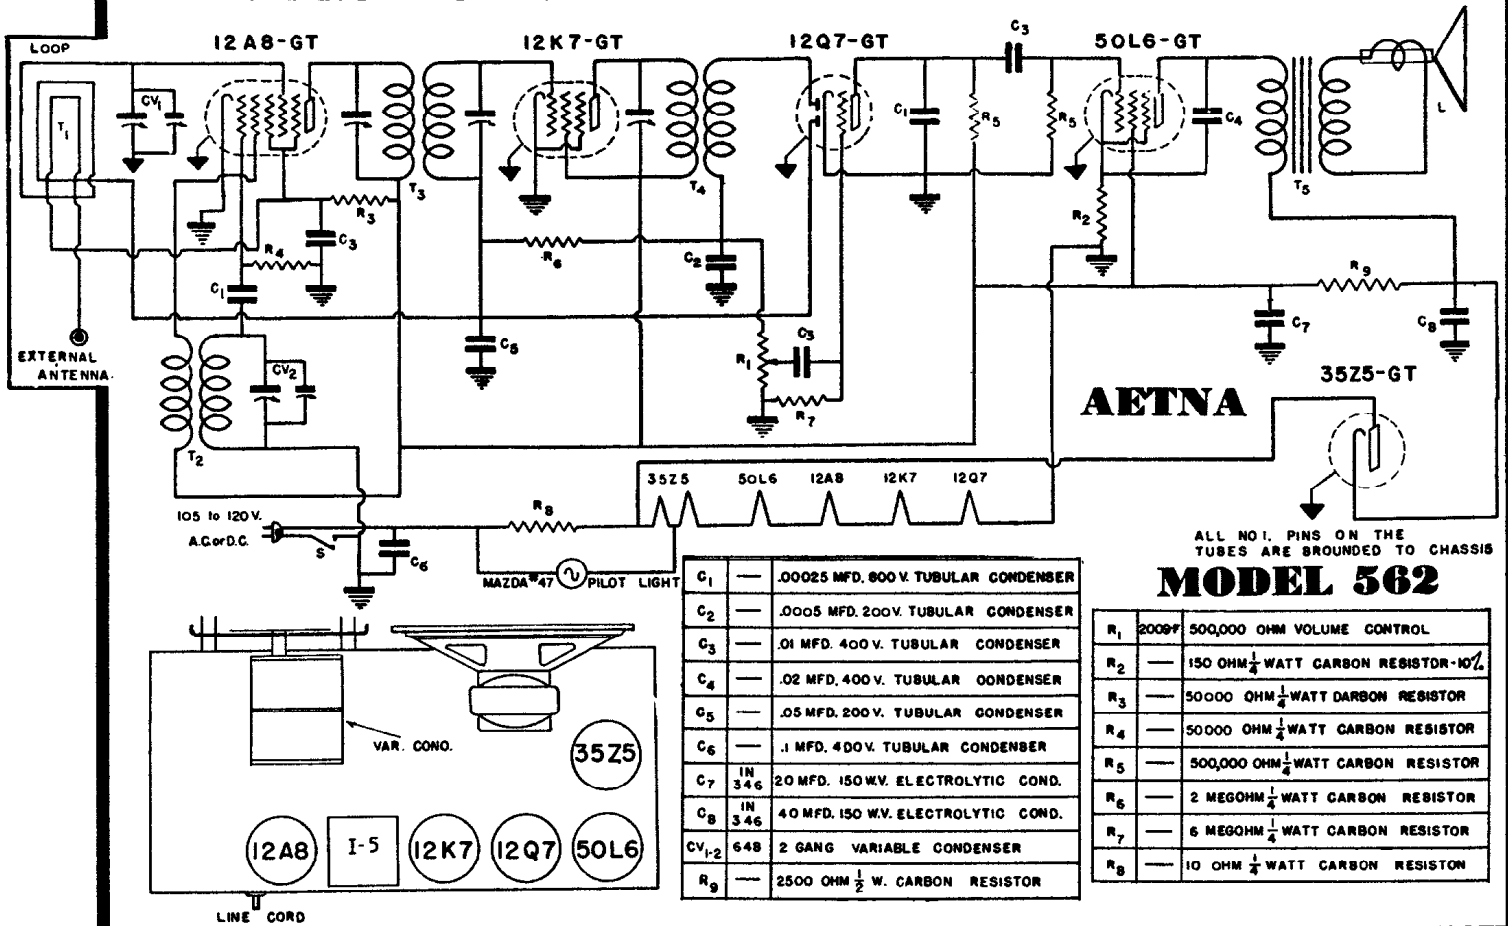

## SCHEMATIC DIAGRAM MODEL T-501

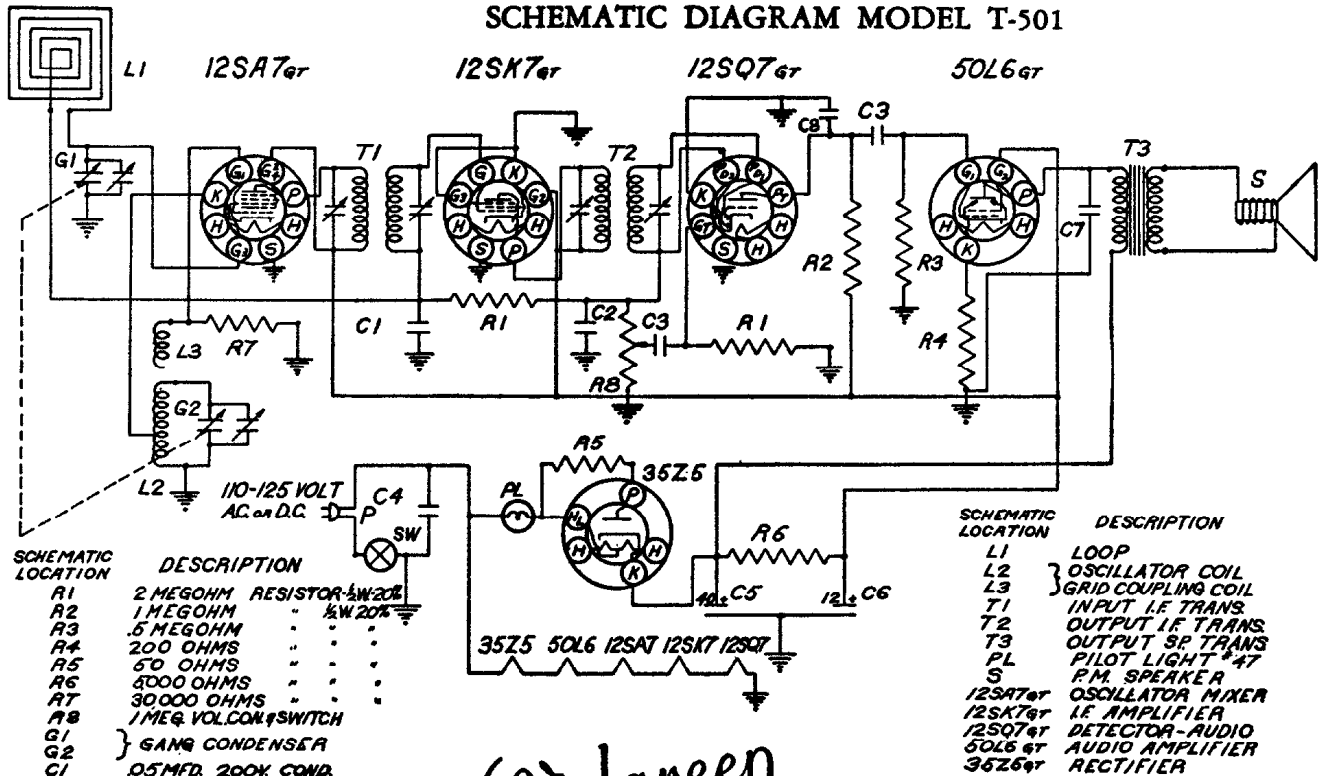


Walgreen

DRUG STORES


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

155

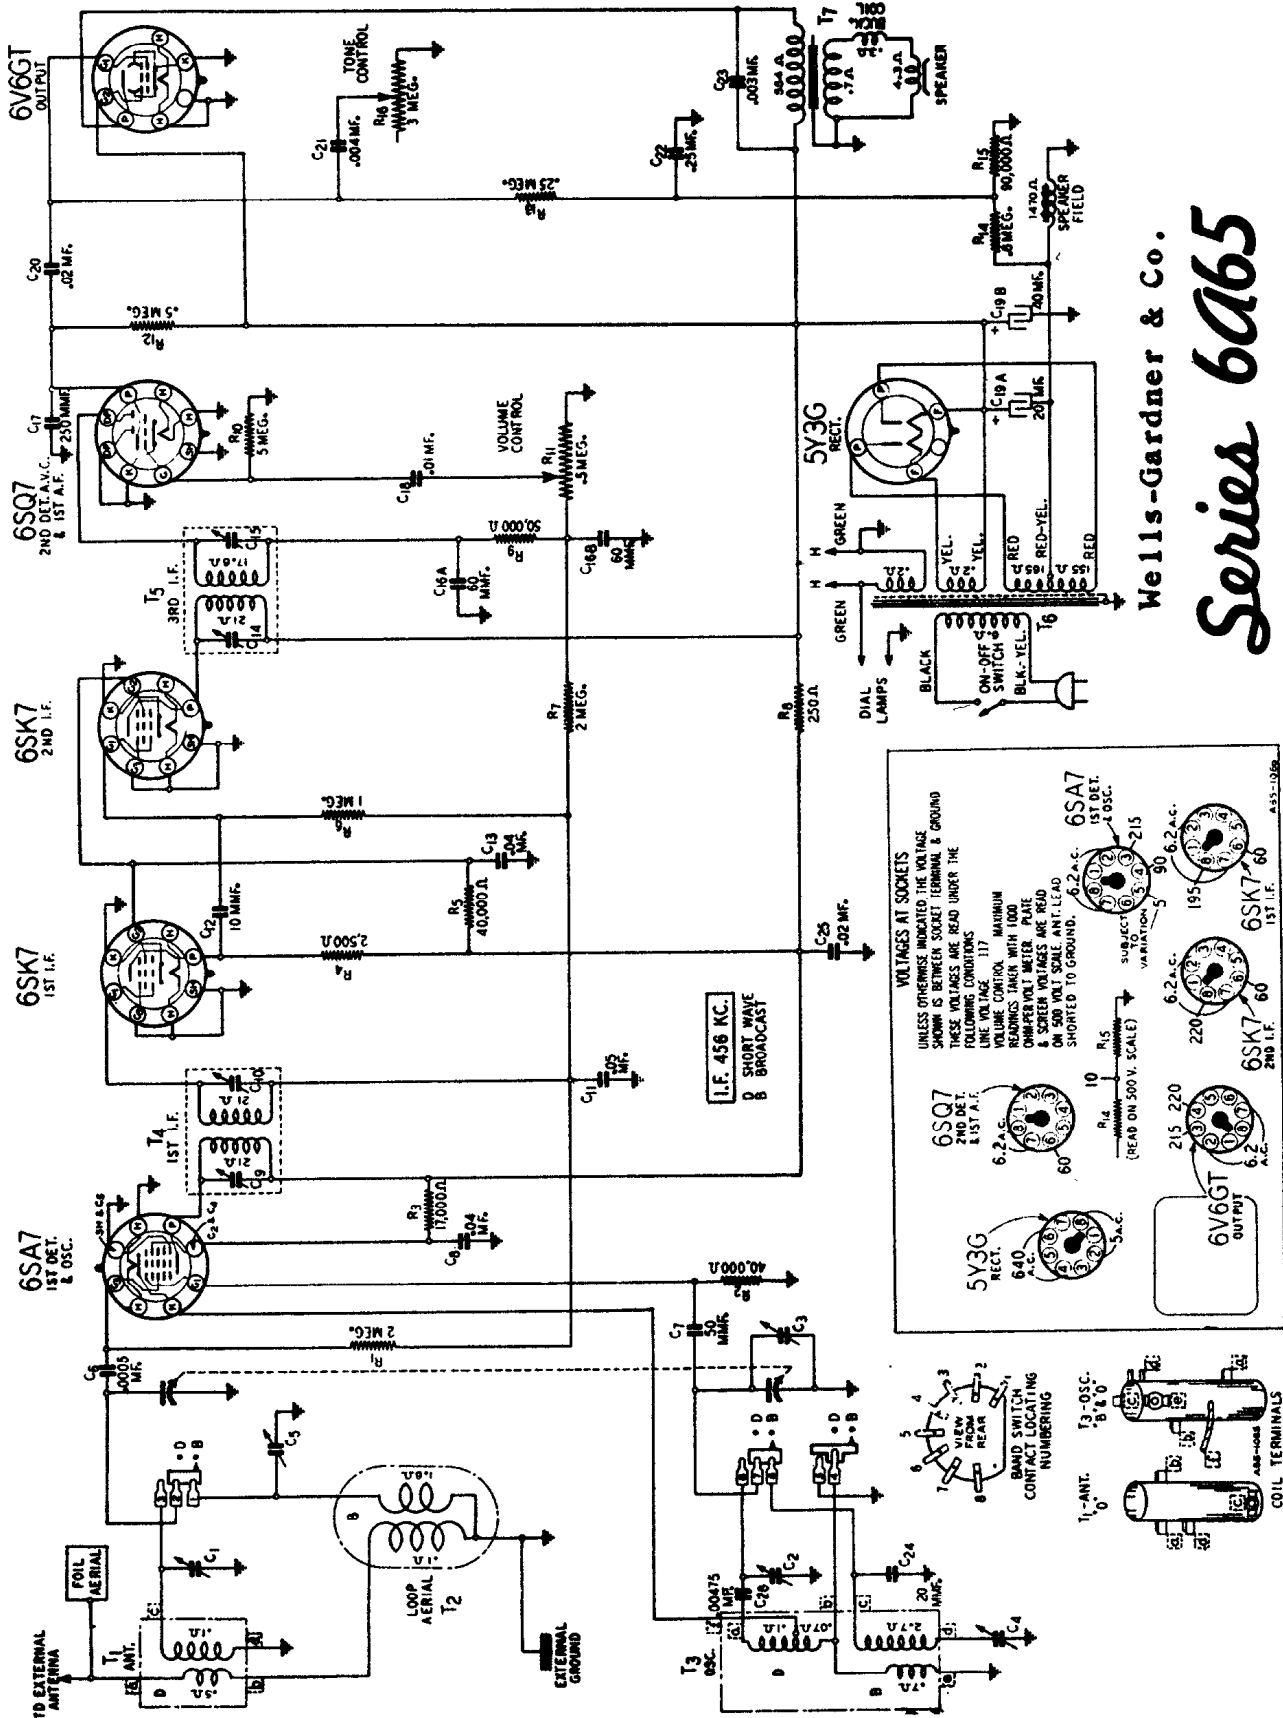

Wells-Gardner & Co.  
 Series 6065

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

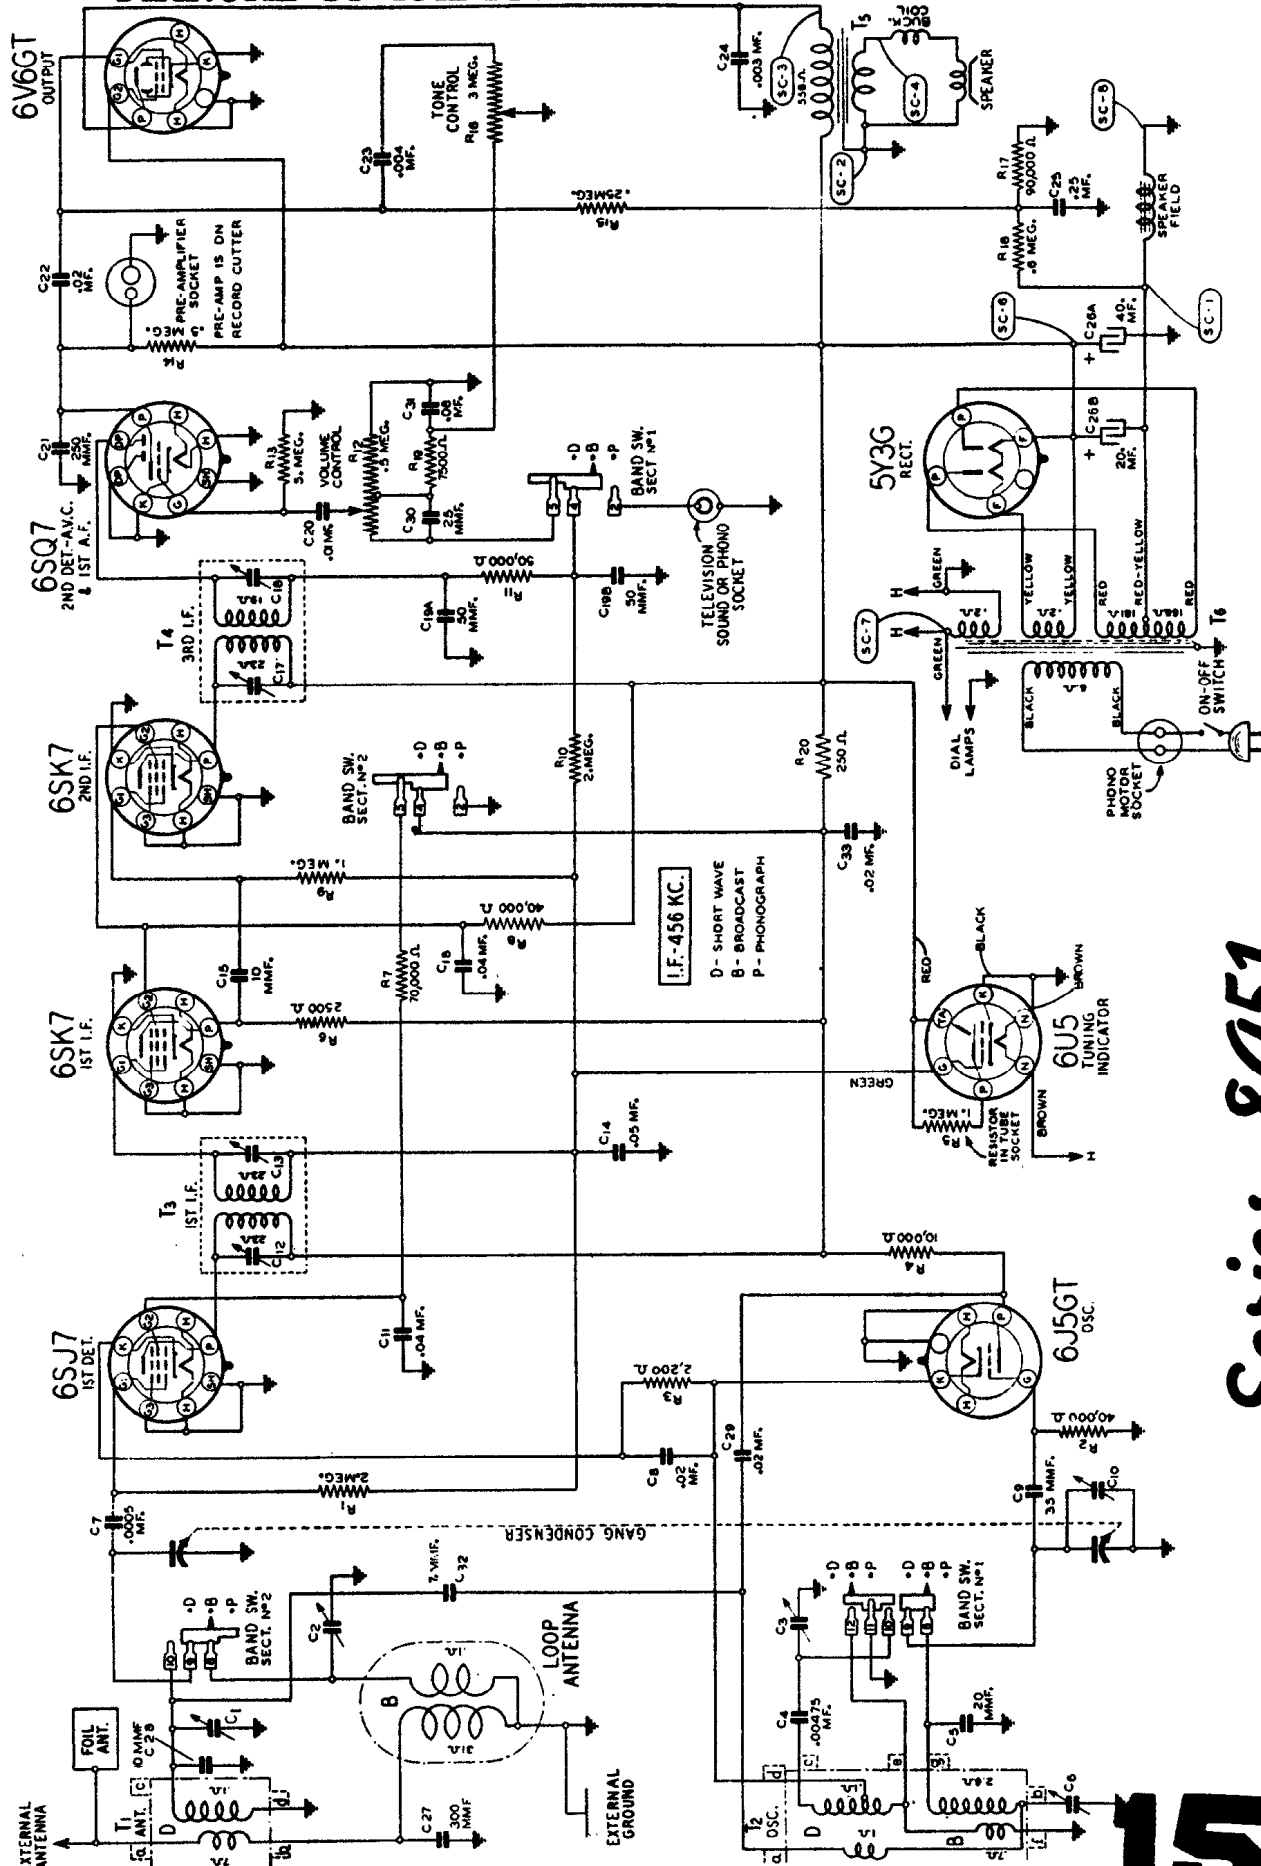

Wells-Gardner & Co.

Series 8051


157

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

*Jruetone Model D4240*

Factory Model 6C18-2

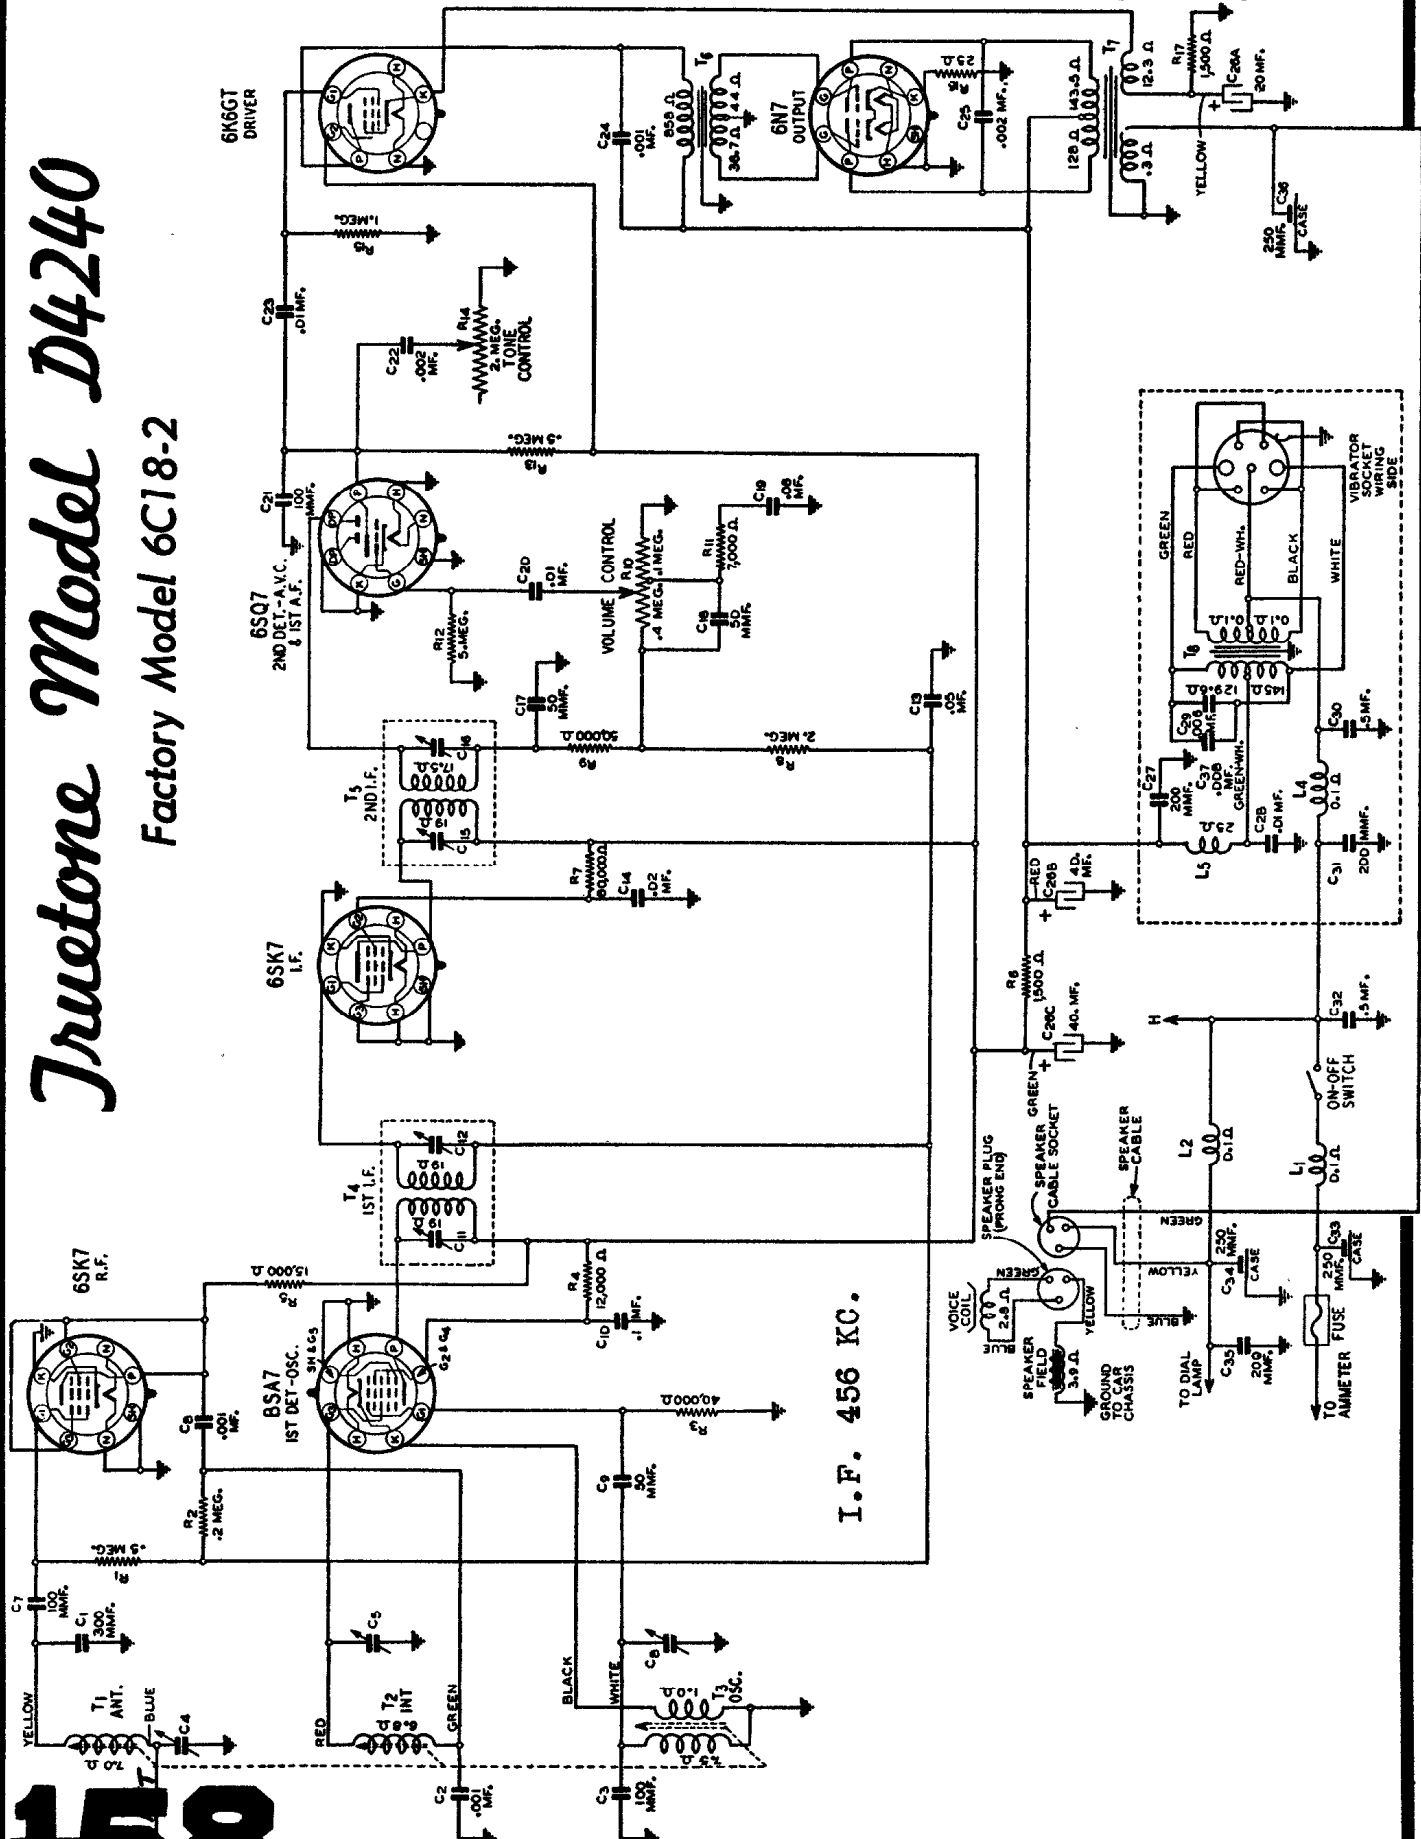

I. F. 456 KC.

**158**


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

# Jruetone Model D1145

(Former D1176)

Factory Model 6A50-2

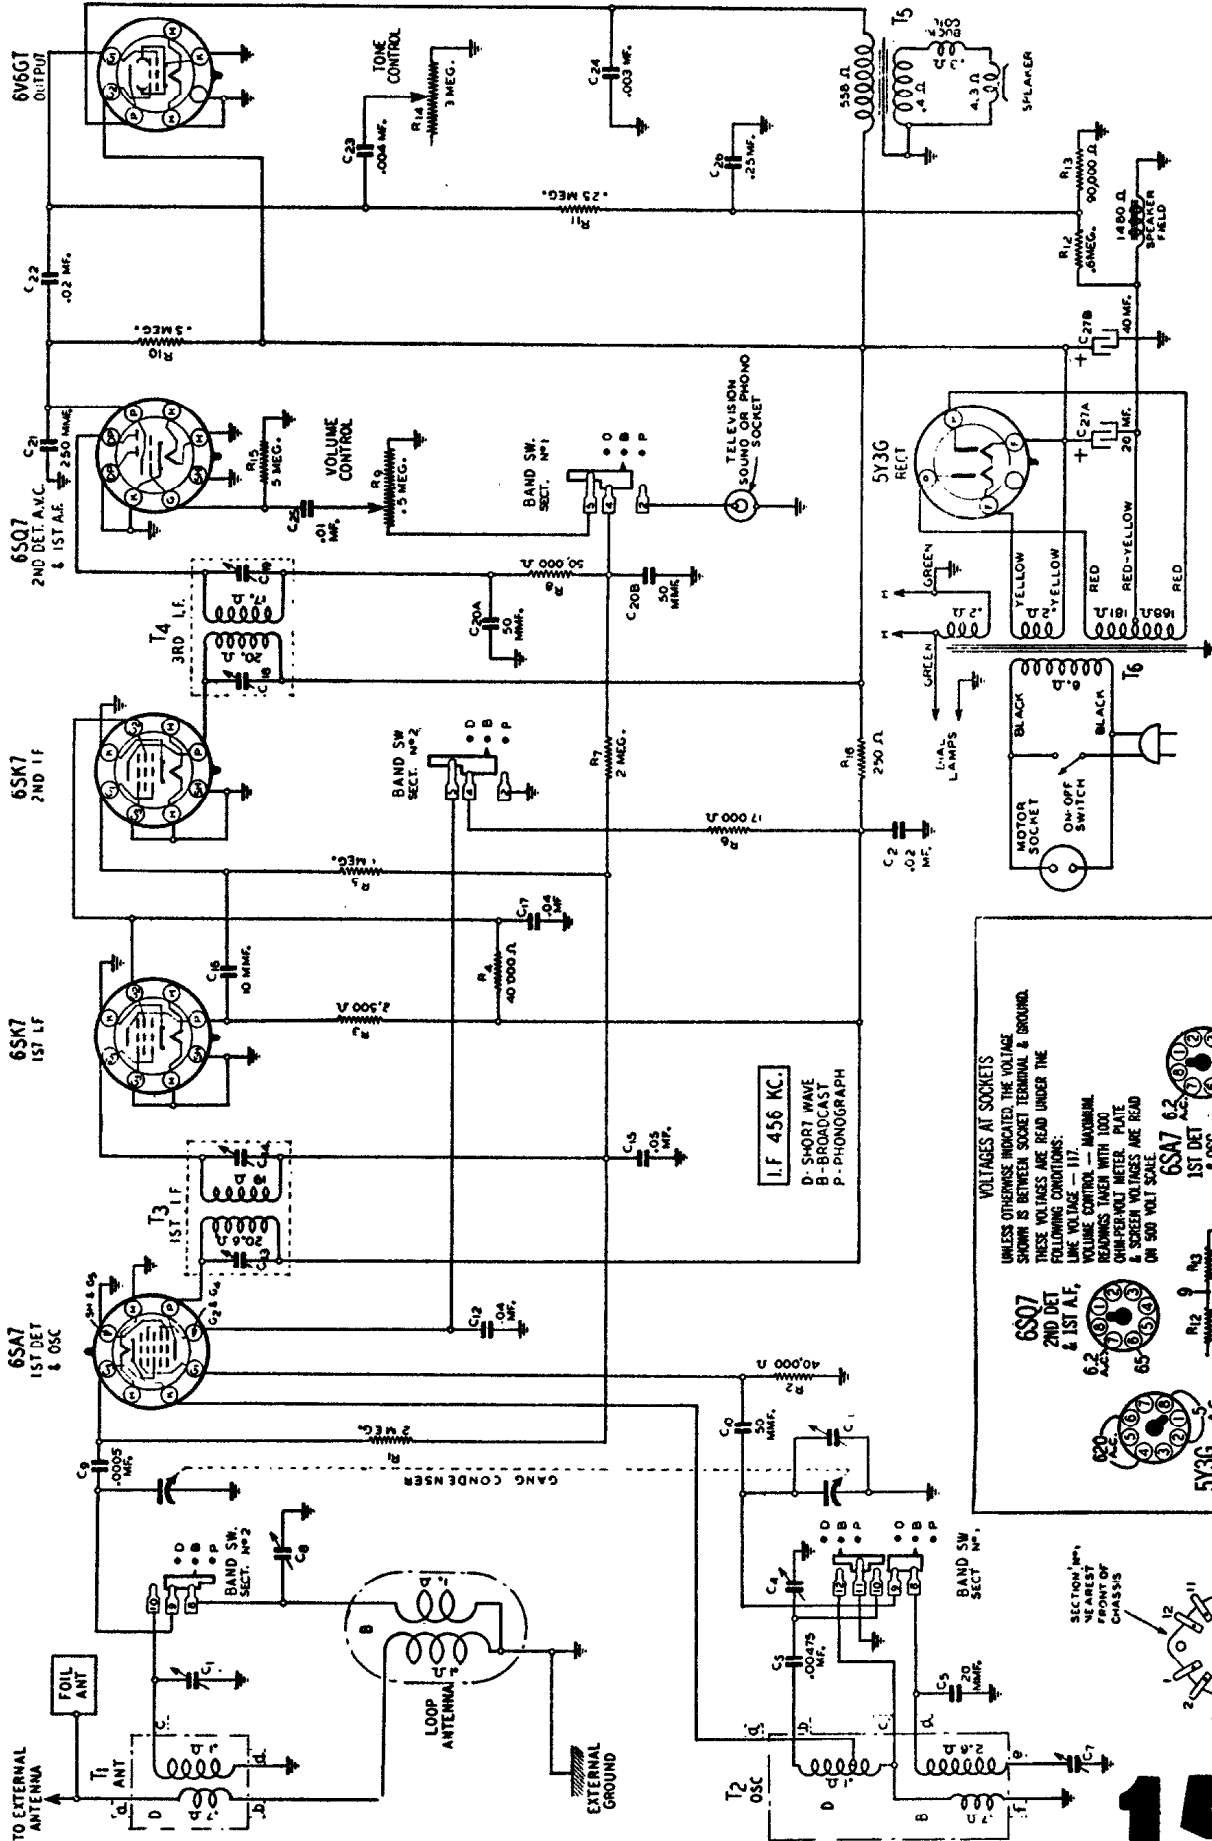

**VOLTAGES AT SOCKETS**


UNLESS OTHERWISE INDICATED, THE VOLTAGE SHOWN IS BETWEEN SOCKET TERMINAL & GROUND. THESE VOLTAGES ARE READ UNDER THE FOLLOWING CONDITIONS:

- LINE VOLTAGE - 117
- VOLUME CONTROL - MAXIMUM
- READINGS TAKEN WITH 1000 OHM REAR-PLATE METER PLATE & SCREEN VOLTAGES ARE READ ON 500 VOLT SCALE

|  |                                    |                                    |                                    |                                    |                                    |
|--|------------------------------------|------------------------------------|------------------------------------|------------------------------------|------------------------------------|
| 6SQ7<br>2ND DET. A.V.C. & 1ST A.F.<br>6.2 A.C. | 6SK7<br>2ND I.F.<br>218            | 6SK7<br>1ST I.F.<br>70             | 6SK7<br>1ST I.F.<br>70             | 6SK7<br>2ND I.F.<br>70             | 6SK7<br>1ST I.F.<br>70             |
| 6SA7<br>1ST DET. & OSC<br>6.2 A.C.             | 6SA7<br>1ST DET. & OSC<br>6.2 A.C. | 6SA7<br>1ST DET. & OSC<br>6.2 A.C. | 6SA7<br>1ST DET. & OSC<br>6.2 A.C. | 6SA7<br>1ST DET. & OSC<br>6.2 A.C. | 6SA7<br>1ST DET. & OSC<br>6.2 A.C. |
| 6V6GT<br>OUTPUT<br>6.2 A.C.                    | 5Y3G<br>RECT.<br>6.2 A.C.          | 5Y3G<br>RECT.<br>6.2 A.C.          | 5Y3G<br>RECT.<br>6.2 A.C.          | 5Y3G<br>RECT.<br>6.2 A.C.          | 5Y3G<br>RECT.<br>6.2 A.C.          |

# 159

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

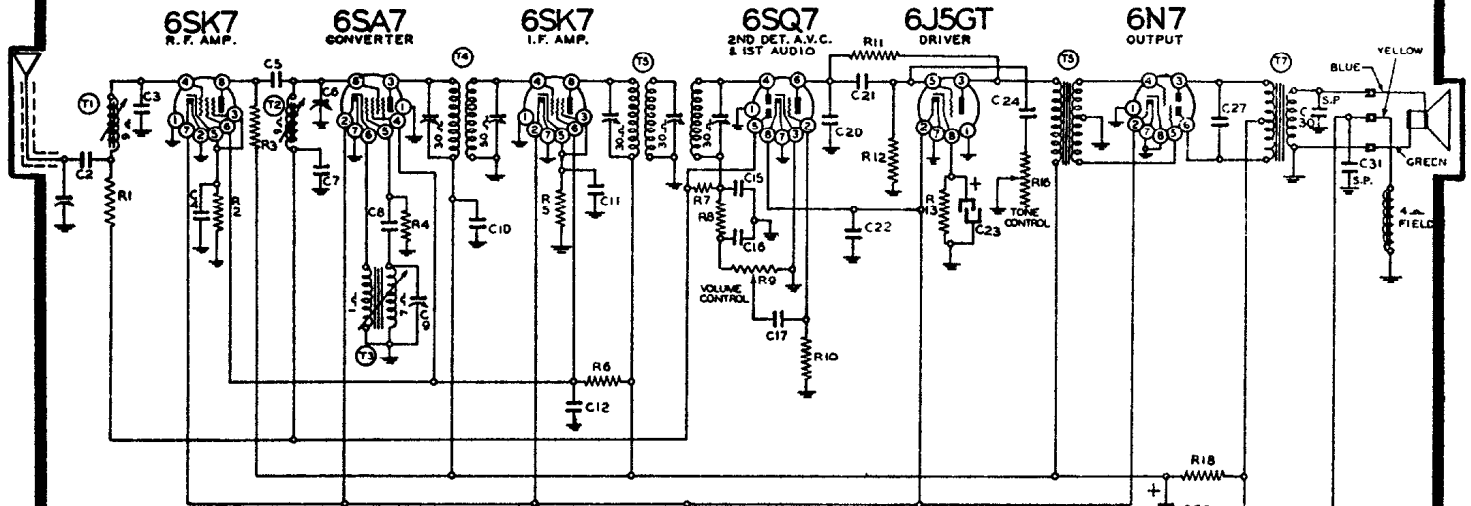


## RESISTORS

|     |        |                            |
|-----|--------|----------------------------|
| R1  | 130330 | 220M ohm— $\frac{1}{2}$ w. |
| R2  | 130332 | 250 ohm— $\frac{1}{2}$ w.  |
| R3  | 130331 | 15M ohm— $\frac{1}{2}$ w.  |
| R4  | 130329 | 47M ohm— $\frac{1}{2}$ w.  |
| R5  | 13016  | 900 ohm— $\frac{1}{2}$ w.  |
| R6  | 130196 | 30M ohm—1 w.               |
| R7  | 13019  | 1 megohm— $\frac{1}{2}$ w. |
| R8  | 130329 | 47M ohm— $\frac{1}{2}$ w.  |
| R9  | 101242 | 500M ohm volume control    |
| R10 | 130257 | 5 megohm— $\frac{1}{2}$ w. |
| R11 | 130102 | 500M ohm— $\frac{1}{2}$ w. |
| R12 | 130102 | 500M ohm— $\frac{1}{2}$ w. |
| R13 | 13092  | 1M ohm— $\frac{1}{2}$ w.   |
| R14 | 130168 | 100 ohm— $\frac{1}{2}$ w.  |
| R15 | 130168 | 100 ohm— $\frac{1}{2}$ w.  |
| R16 | 101245 | 1 megohm tone control      |
| R17 | 13092  | 1M ohm— $\frac{1}{2}$ w.   |
| R18 | 130199 | 1500 ohm—1 w.              |
| R19 | 130328 | 75 ohm— $\frac{1}{2}$ w.   |


## CONDENSERS

|     |         |                         |
|-----|---------|-------------------------|
| C1  | 124157  | Antenna trimmer         |
| C2  | 100127  | .01 x 120 v.            |
| C3  | 129172  | .0001 ceramicon         |
| C4  | 100128  | .05 x 120 v.            |
| C5  | 129145  | .00001 ceramicon        |
| C6  | 124159  | R.F. trimmer            |
| C7  | 100129  | .02 x 120 v.            |
| C8  | 129172  | .0001 ceramicon         |
| C9  | 124158  | Oscillator trimmer      |
| C10 | 1001    | .1 x 400 v.             |
| C11 | 100128  | .05 x 120 v.            |
| C12 | 10053   | .25 x 400 v.            |
| C13 | 10031   | .5 x 120 v.             |
| C14 | 115687  | Spark plate             |
| C15 | 129165B | .00005 mica             |
| C16 | 129165B | .00005 mica             |
| C17 | 100127  | .01 x 120 v.            |
| C18 | 10031   | .5 x 120 v.             |
| C19 | 10031   | .5 x 120 v.             |
| C20 | 12912   | .00025 mica             |
| C21 | 10026   | .02 x 400 v.            |
| C22 | 1292    | .0005 mica              |
| C23 | 119118  | 20.0 mfd. x 25 v. lytic |
| C24 | 10011   | .01 x 400 v.            |
| C25 | 10098   | .005 x 1600 v.          |
| C26 | 119118  | 20 mfd. x 400 v. lytic  |
| C27 | 100126  | .006 x 800 v.           |
| C28 | 1001    | .1 x 400 v.             |
| C29 | 119118  | 20 mfd. x 400 v. lytic  |
| C30 | 115710  | Spark plate             |
| C31 | 115710  | Spark plate             |
| C32 | 12912   | .00025 mica             |

C15 and C16 are in same unit  
C20 and C21 are in same unit  
C23, C26 and C29 are in same unit

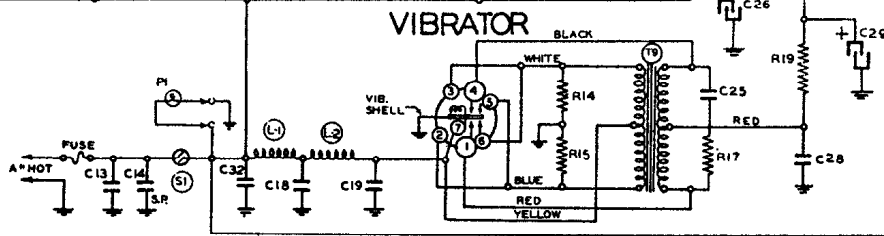

6J5GT INTERMEDIATE FREQUENCY 455 K.C.

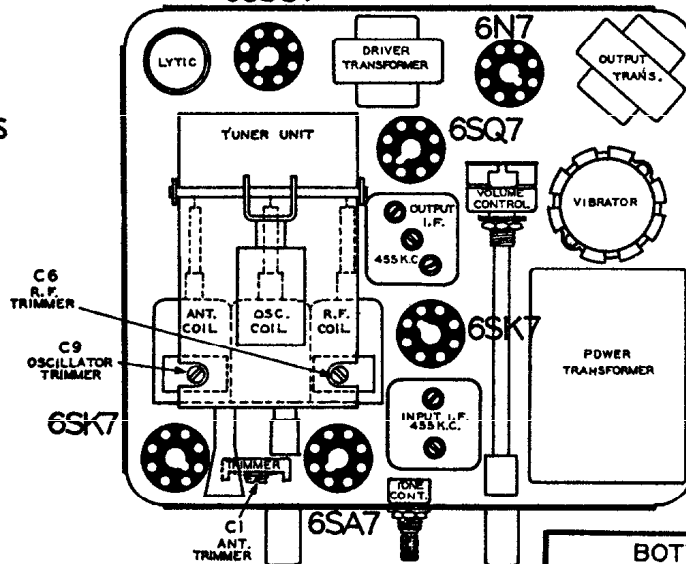


NOTE:  
CHECK VIBRATOR  
POLARITY THRU  
OPENING ON THIS  
SIDE OF CASE.

Western Auto  
Truetone




MODEL D4255  
(Former No. D1294)

160

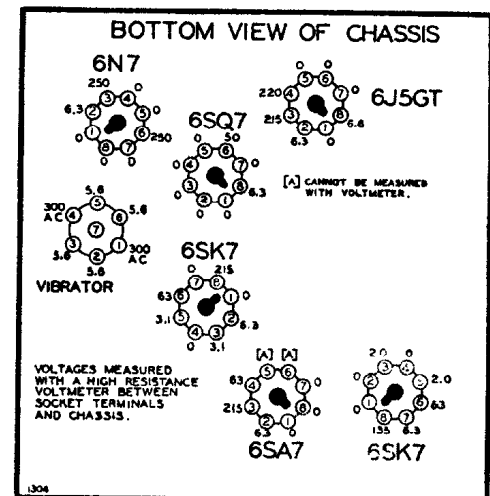

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

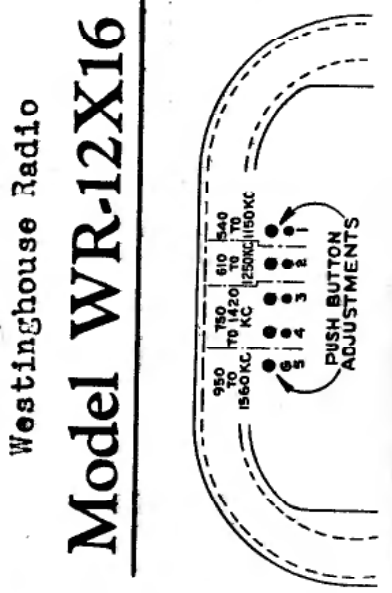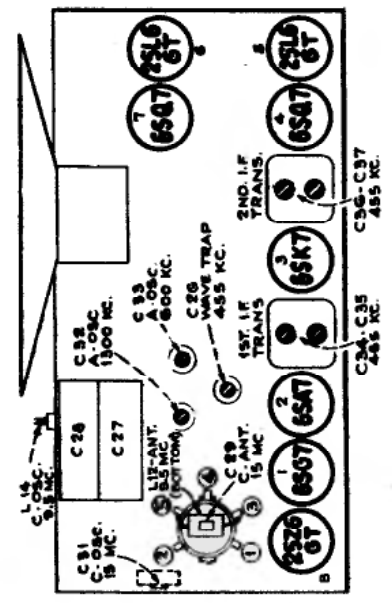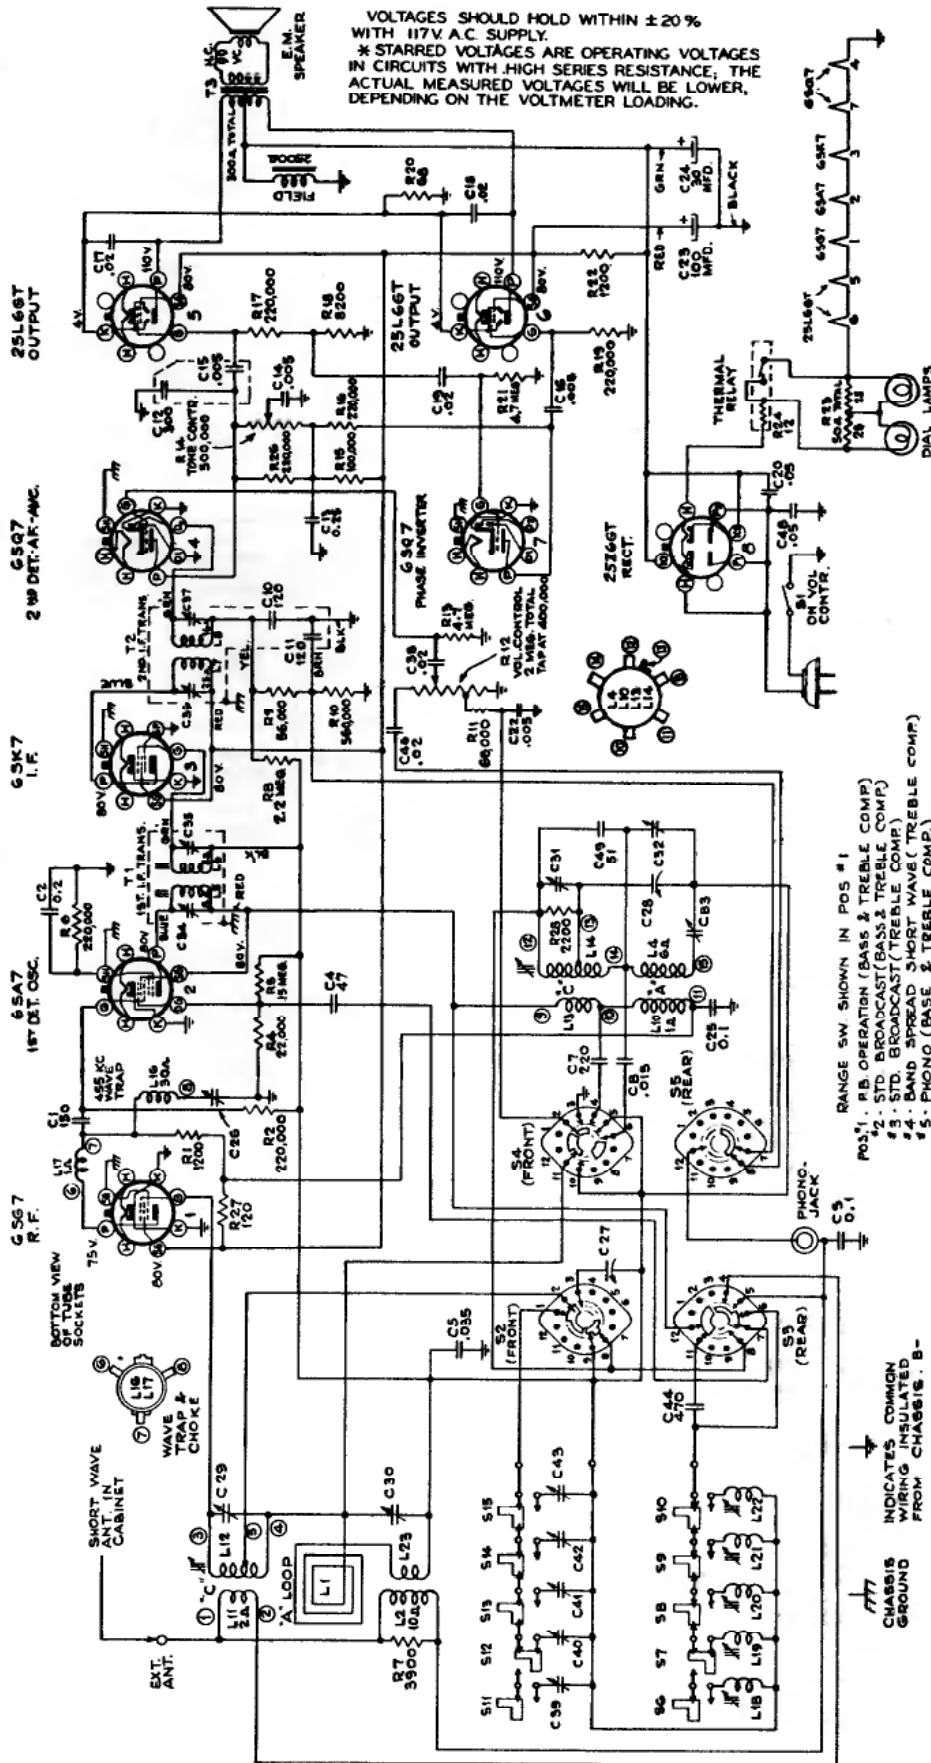

Westinghouse Radio  
**Model WR-12X16**

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS



# Westinghouse Radio

## Models WR-12X3, 12X5 & 12X6




Five-Tube, Single-Band, AC-DC, Superheterodyne Receiver

### Alignment Procedure

**Output Meter Alignment.**—If this method is used connect the meter across the voice coil and turn the receiver volume control to maximum.


**Test Oscillator.**—Connect the low side of the test oscillator to the receiver chassis through a .01 mfd. capacitor. With the output meter alignment method the test oscillator output should be kept as low as possible.

**Calibration Scale.**—The glass tuning dial may be easily removed from the cabinet and temporarily attached to the dial backing plate for quick reference during alignment.

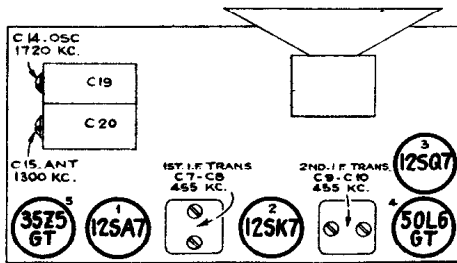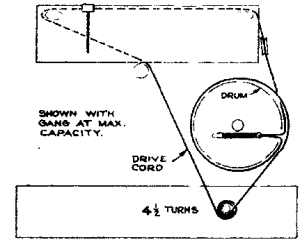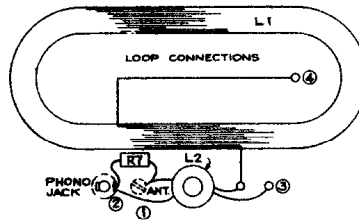

Tube and Trimmer Locations


| Steps | Connect the high side of test-oscillator to— | Tune test-osc. to— | Turn radio dial to—              | Adjust the following for max. peak output— |
|-------|--|--------------------|----------------------------------|--|
| 1     | I-F grid, in series with .01 mfd.            | 455 kc             | Quiet point 1,600 kc end of dial | C10, C9<br>2nd I-F Transformer             |
| 2     | 1st Det. grid in series with .01 mfd.        |                    |                                  | C8, C7<br>1st I-F Transformer              |
| 3     | Ant. terminal in series with 100 mmfd.       | 1,720 kc           | Gang at minimum                  | C14 (osc.)                                 |
| 4     | Radiated signal 1,300 kc                     |                    | Signal frequency                 | C15 (ant.)                                 |
| 5     | Repeat steps 3 and 4.                        |                    |                                  |  |

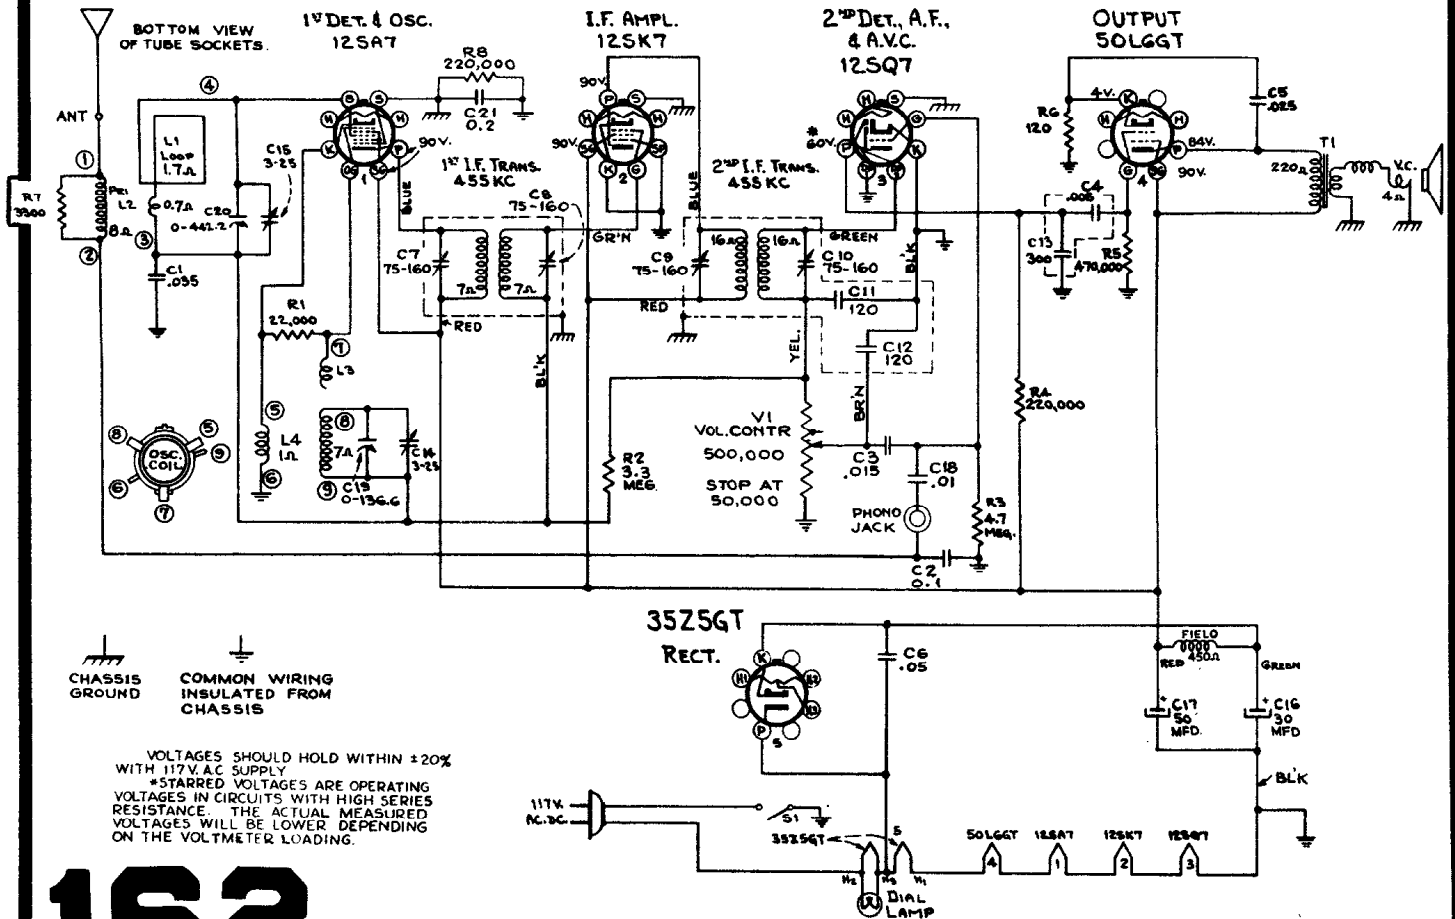


CHASSIS GROUND  
COMMON WIRING INSULATED FROM CHASSIS

VOLTAGES SHOULD HOLD WITHIN ±20% WITH 117V. AC SUPPLY  
\*STARRED VOLTAGES ARE OPERATING VOLTAGES IN CIRCUITS WITH HIGH SERIES RESISTANCE. THE ACTUAL MEASURED VOLTAGES WILL BE LOWER DEPENDING ON THE VOLTMETER LOADING.

# Westinghouse Radio

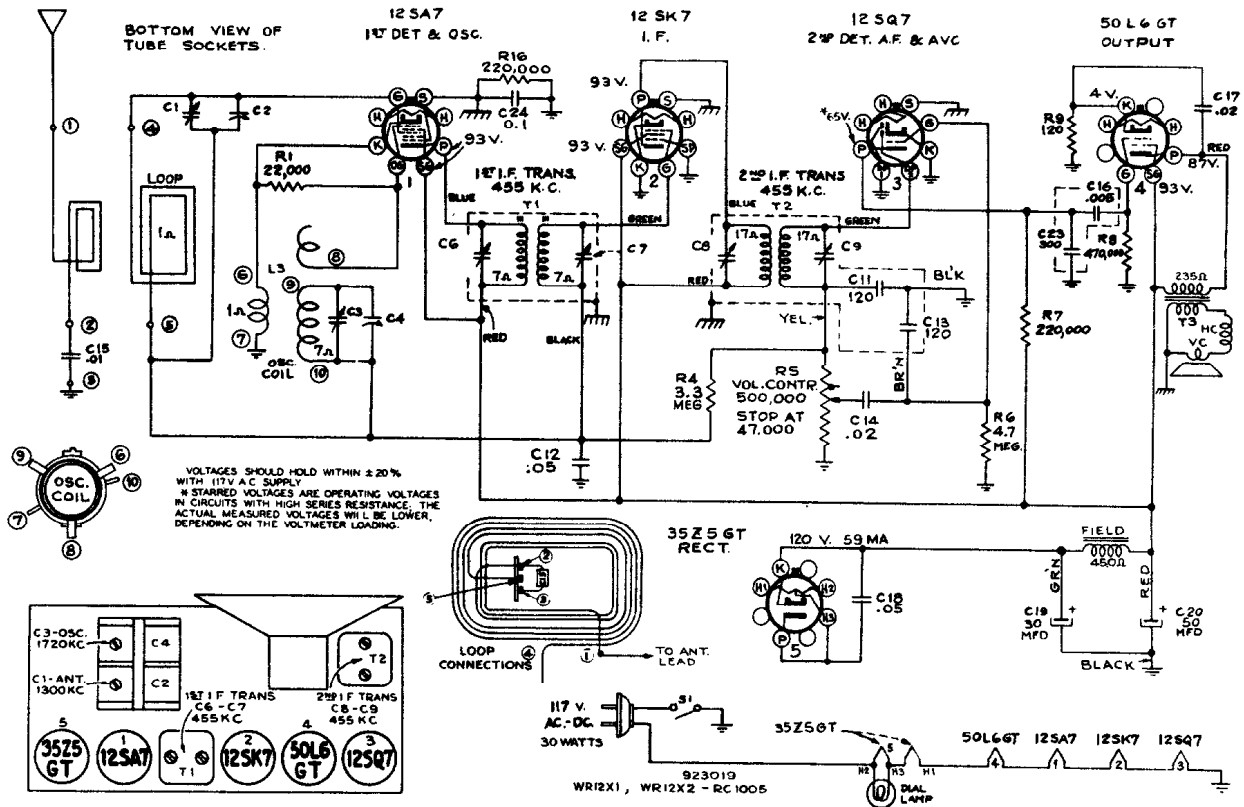

Schematic Circuit Diagram Model WR-12X1 & WR-12X2

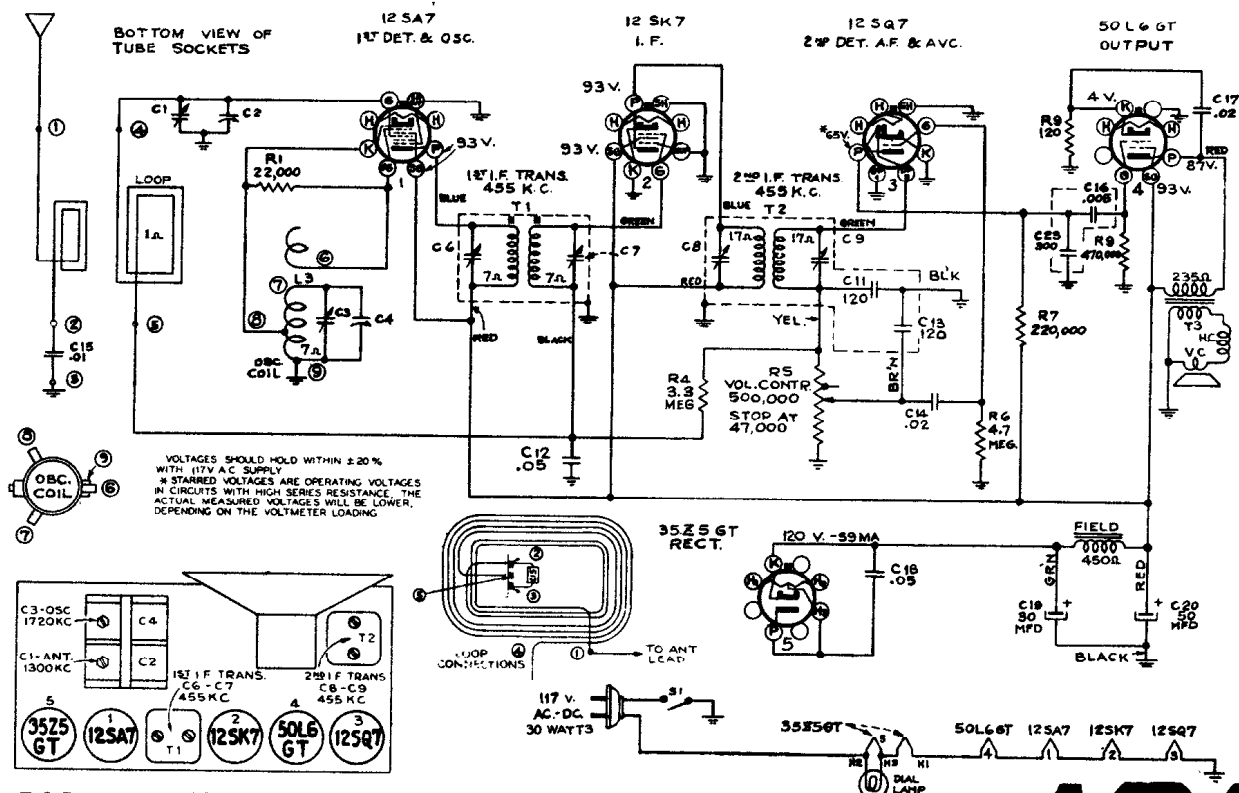


**WR-12K1**

Schematic Circuit Diagram Model WR-12K1

# Westinghouse Models WR-42X3 & WR-42X7

## MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

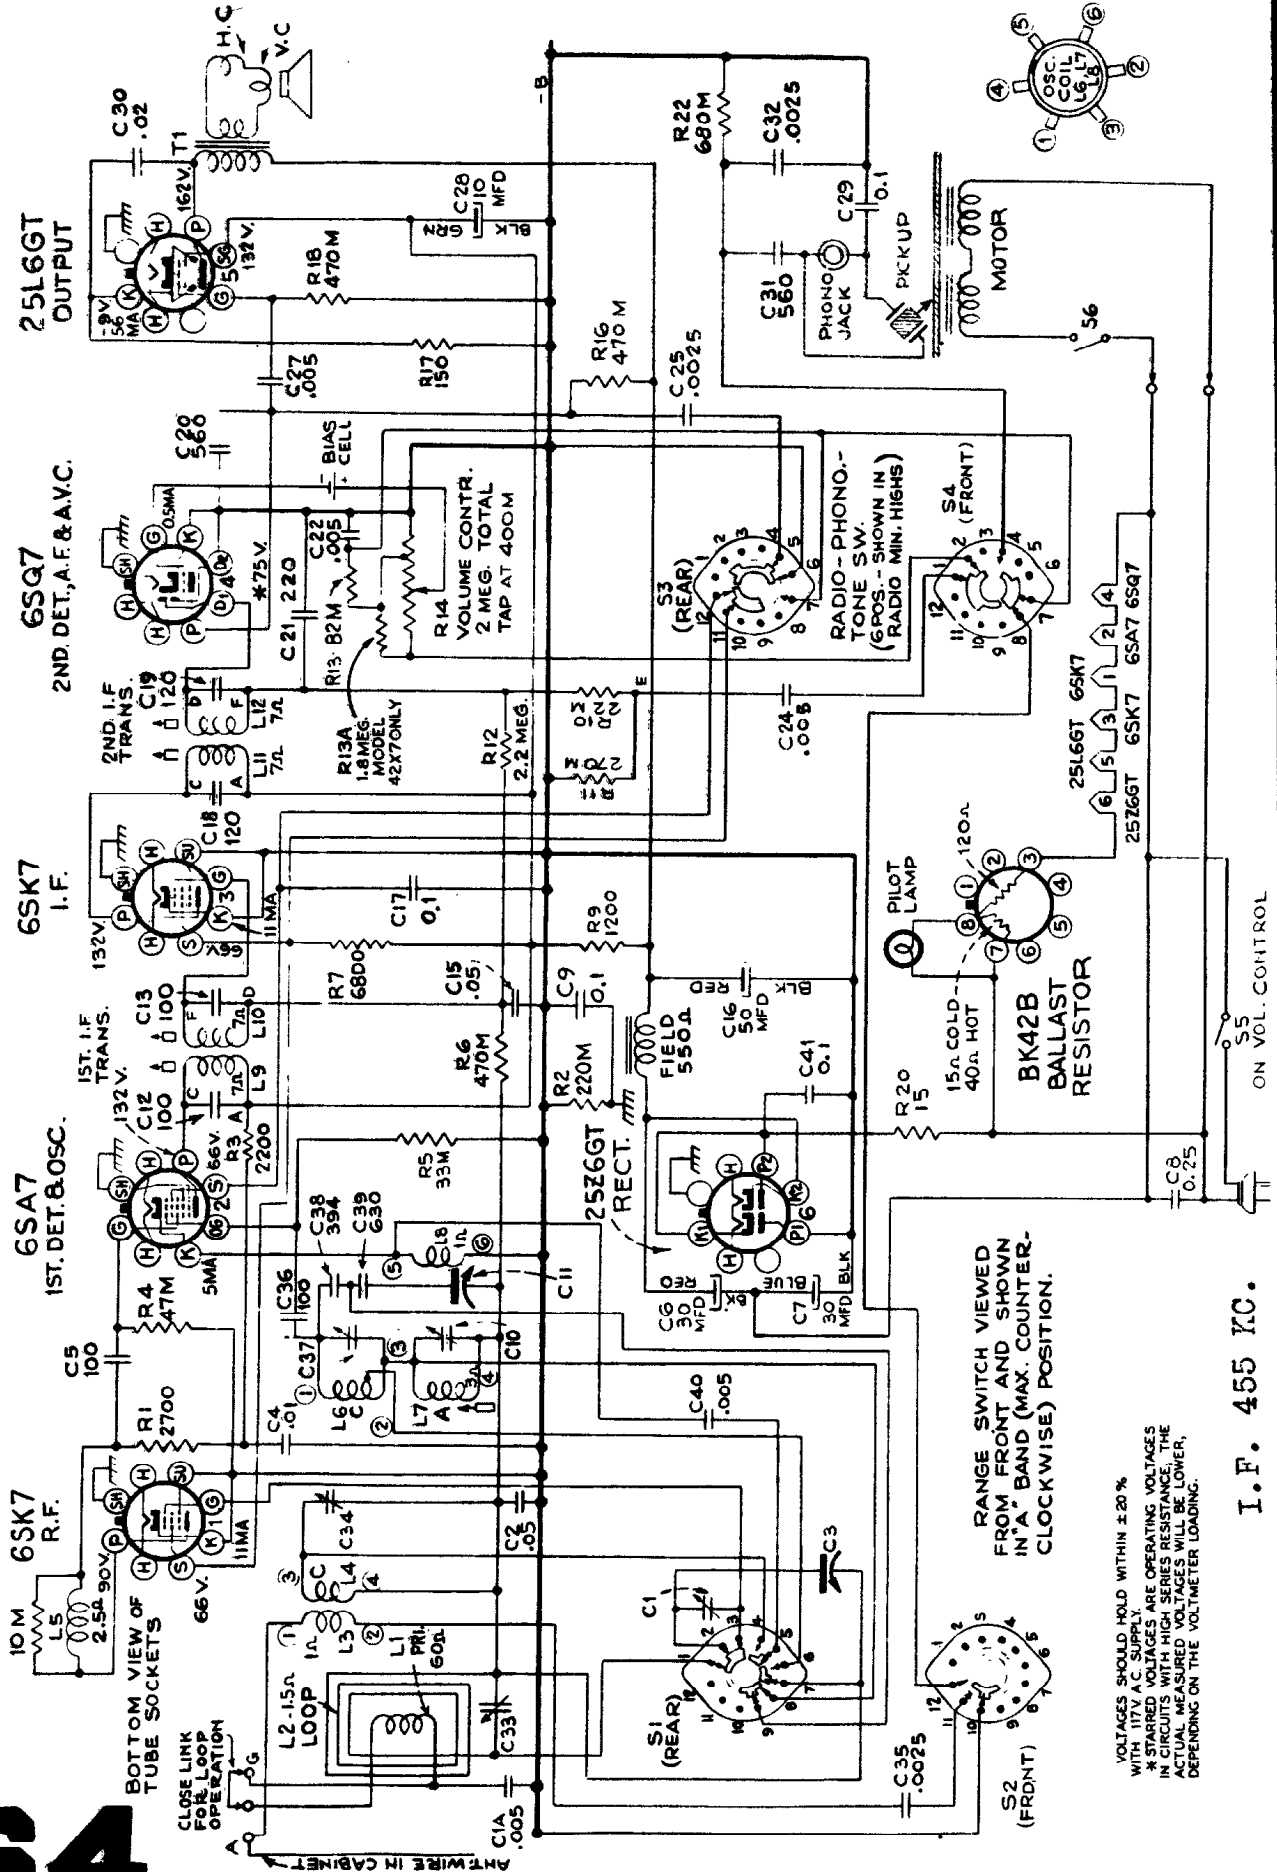

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

I. F. 455 KC.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## Models WR-62K1 & WR-62K2

### Alignment Procedure


**Output Meter Alignment.**—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—For all alignment operations, keep the output as low as possible to avoid a-v-c action.

**Precautionary Lead Dress.**—



1. Keep green grid leads above chassis away from each other.
2. All filament wires should be dressed close to chassis.
3. Keep blue leads from I-F transformers close to chassis.

### BATTERY INSTALLATION

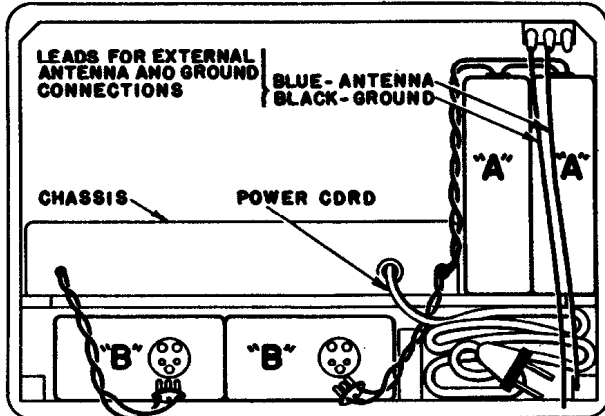


- "A"—TWO 4.5-VOLT EVEREADY NO. 748, BURGESS NO. G-3, RAY-O-VAC NO. P-83-A, OR EQUIVALENT.  
 "B"—TWO 45-VOLT EVEREADY NO. 482, BURGESS NO. M-30, RAY-O-VAC NO. P-7B30, OR EQUIVALENT.

| Steps | Connect the high side of test-osc. to—                        | Tune test osc. to— | Turn radio dial to—                 | Adjust the following for max. peak output |
|-------|---|--------------------|-------------------------------------|---|
| 1     | 1N5GT I-F grid cap, in series with .01 mfd.                   | 455 kc             | Quiet point at 1,600 kc end of dial | C16, C17 (2nd I-F transformer)            |
| 2     | 1A7GT 1st Det. grid cap, in series with .01 mfd.              |                    |                                     | C14, C15 (1st I-F transformer)            |
| 3     | Antenna terminal in series with 200 mmfd.                     |                    |                                     | C4 Wave trap for minimum output           |
| 4     | Antenna terminal in series with 200 mmfd.                     | 600 kc             | 600 kc                              | L9 (osc.) (Rock in)                       |
| 5     |   | 1,600 kc           | 1,600 kc                            | C10 (osc.)                                |
| 6     |   | 1,800 kc           | 1,800 kc                            | C1 (ant.)                                 |
| 7     | Repeat steps 4, 5 and 6 until aligned                         |                    |                                     |   |
| 8     | With chassis in cabinet and batteries connected repeat step 6 |                    |                                     |   |

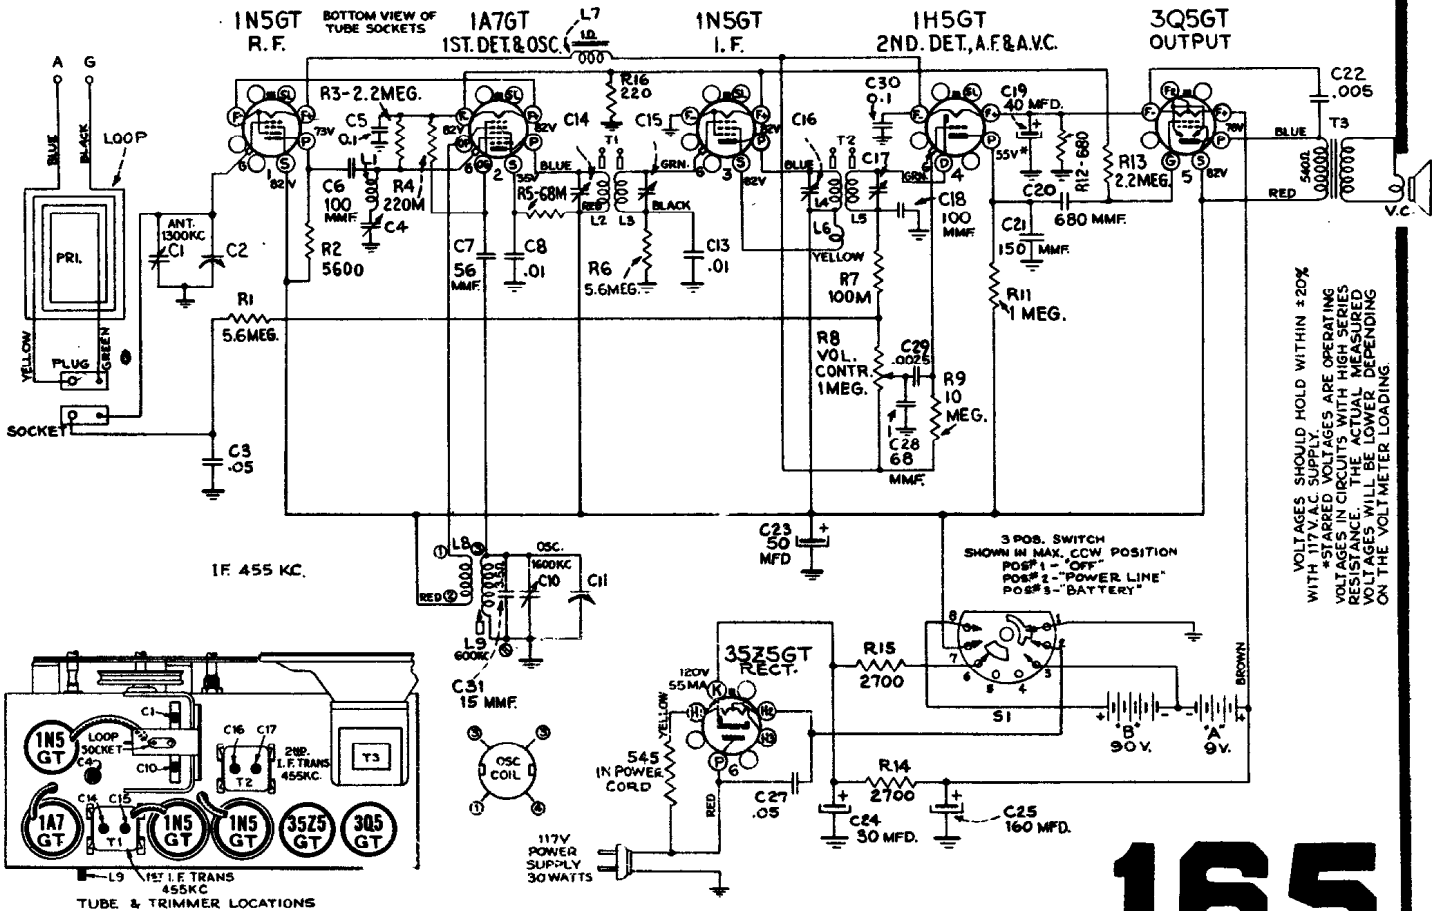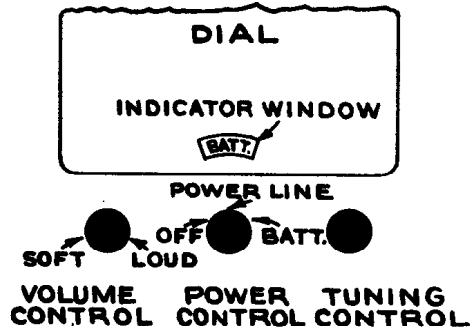

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

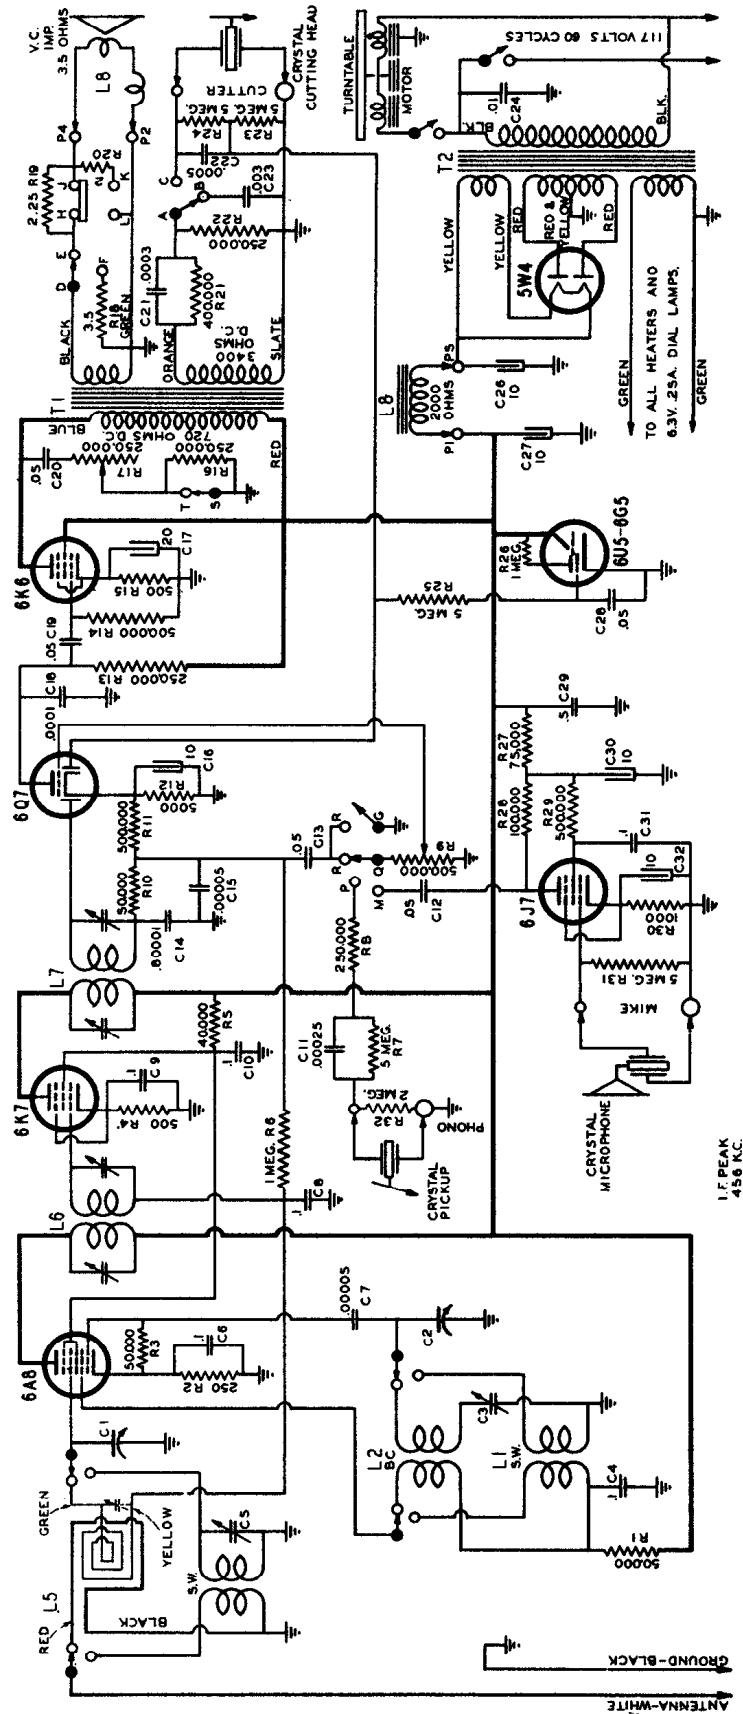

**WILCOX-GAY CORPORATION**  
Charlotte, Michigan


**Models**  
A-104 A-107

Line Voltage-----118  
P5 or C26 to GND.-----350  
P1 or C27 to GND.-----240  
P5 to P1 (sp'kr field)---110  
C30 to GND.-----150

| <u>Tube</u> | <u>Position</u>   | <u>Plate</u> | <u>Screen</u> | <u>Cathode</u> |
|-------------|-------------------|--------------|---------------|----------------|
| 6A8         | 1st. Det.<br>Osc. | 230          | 75            | 2,2            |
| 6K7         | I.F.              | 230          | 75            | 3,0            |
| 6Q7         | 2nd. Det.         | 90*          |               | 1,5            |
| 6J7         | Mike Amp.         | 45 to 65*    | 30*           | .8             |
| 6K6         | Output            | 215          | 235           | 13,5           |

**NOTE:** This is a typical voltage analysis made by use of standard 1000 ohm per volt voltmeter, using the 300 volt scale for plate and screen voltage readings.

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

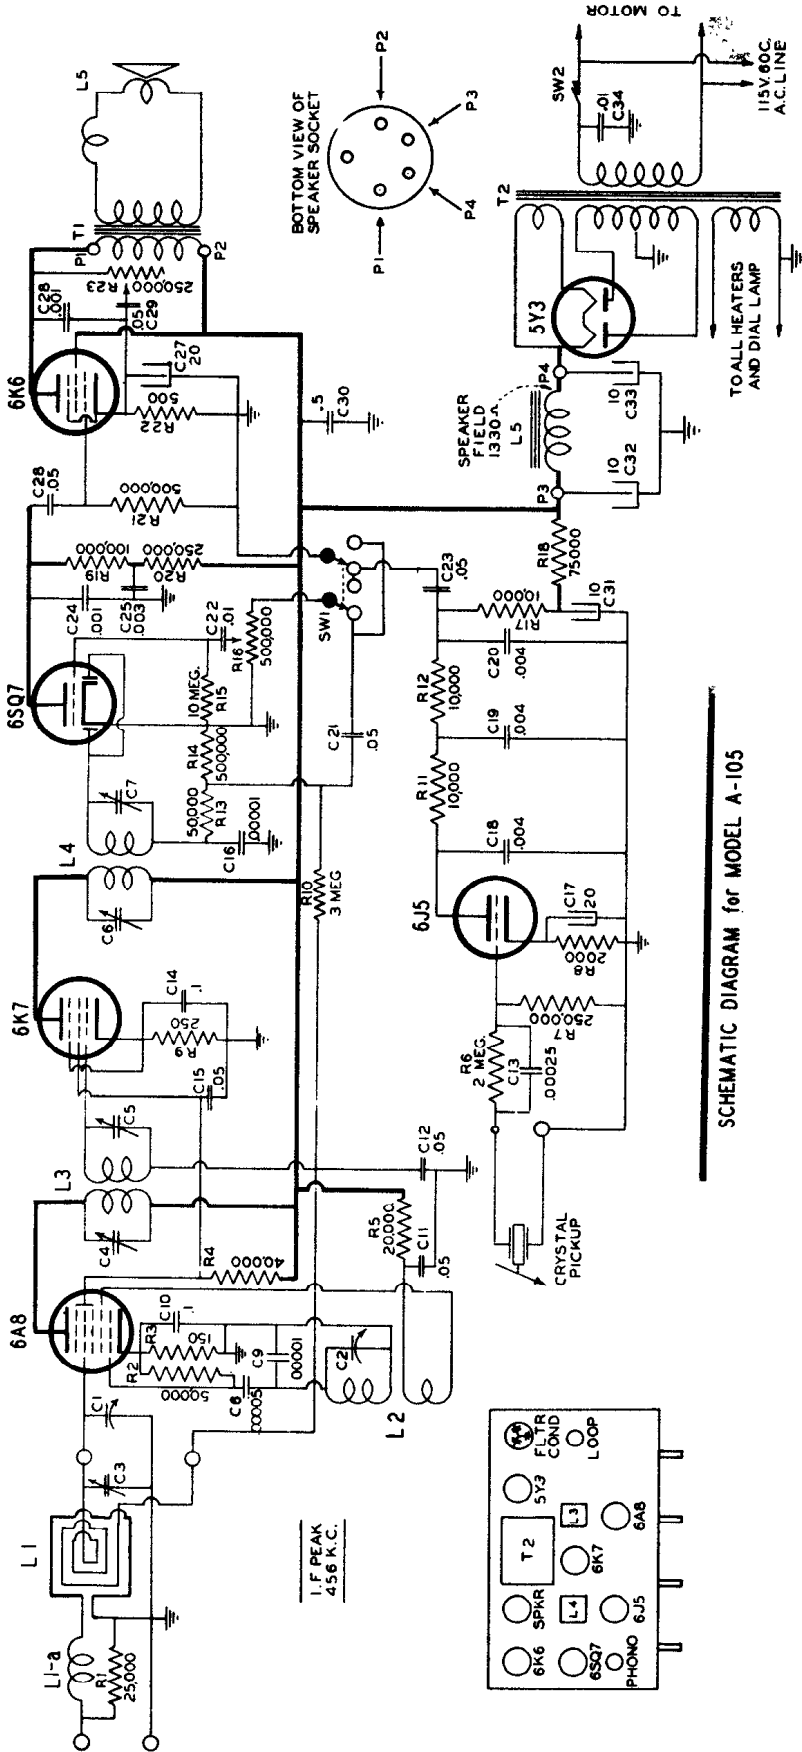

- (1) Connect signal generator to control grid of 6A8 tube.
- (2) Peak all trimmers for maximum reading on meter.

| SIGNAL GENERATOR FREQUENCY                           | DIAL POSITION | TRIMMER                |
|--|---------------|------------------------|
| 456 K.C.   | 1700 K.C.     | I.F. - C4*             |
| " "  | " "           | I.F. - C5*             |
| " "  | " "           | I.F. - C6*             |
| " "  | " "           | I.F. - C7*             |
| Connect signal generator to ANT. and GND. terminals. |               |                        |
| 1400 K.C.  | 1400 K.C.     | C2-Osc.                |
| " "  | " "           | Trimmer on Loop - R.F. |

**WILCOX-GAY CORPORATION**  
Charlotte, Michigan


Model A-105

## THE RUDOLPH WURLITZER COMPANY NORTH TONAWANDA, N. Y.

### MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

VOLTAGES & CURRENTS OF MODELS 501 & 502 AMPLIFIERS ALL MEASUREMENTS MADE WITH LINE AT 117 VOLTS 25 OR 60 CYCLE  
 ALL VOLTAGES MEASURED WITH 1000 OHMS PER VOLT VOLTMETER (CALL VOLTAGES OVER 50 USE 500 VOLT SCALE)  
 AVERAGE PLATE & SCREEN VOLTAGE AVERAGE PLATE CURRENT AVERAGE VOLTAGE ACROSS CONDENSERS  
 MEASURED TO CHASSIS 6L6G 68 MA. DC. C 15 320 VOLTS DC.  
 6L6G PLATE 310 VOLTS DC. C 4 20 " "  
 6L6G SCREEN 315 " " C 13 315 " "  
 6SC7 PLATE 170 " " C 2 290 " "  
 6J5 PLATE 70 " " C 11 275 " "  
 SPEAKER FIELD RESISTANCE 5200 OHMS-VOICE COIL 8 OHMS  
 320 VOLTS D.C. BETWEEN TERMINALS 1 & 7 OF SPEAKER SOCKET

| ITEM PART | VALUE | REMARKS    | ITEM PART | VALUE | REMARKS  | ITEM | VALUE    | REMARKS           |
|-----------|-------|------------|-----------|-------|----------|------|----------|-------------------|
| R 1       | 40284 | 30000 OHMS | R 18      | 37446 | 1/2 WATT | C 16 | 200 W.V. | CONDENSERS        |
| R 2       | 40281 | 5000 "     | R 17      | 21200 | 1/2 WATT | C 1  | .03 MFD  | CONDENSERS        |
| R 3       | 40282 | 15000 "    | R 18      | 40259 | 1/2 WATT | C 2  | .006 "   | RELAY             |
| R 4       | 22529 | 2000 "     | R 19      | 40255 | 1/2 WATT | C 3  | .0035 "  | 130 OHMS S.P.D.T. |
| R 5       | 20852 | 15000 "    | R 20      | 37445 | 1/2 WATT | C 4  | .0035 "  | CHOKES            |
| R 6       | 35324 | 50000 "    | R 21      | 40252 | 1/2 WATT | C 5  | .03 "    | 950 MH            |
| R 7       | 36324 | 3300 "     | R 22      | 37446 | 1/2 WATT | C 6  | .006 "   | 475 MH            |
| R 8       | 22528 | 22000 "    | R 23      | 35923 | 1/2 WATT | C 7  | .00075 " | TRANSFORMERS      |
| R 9       | 37370 | 82000 "    | R 24      | 40223 | 1/2 WATT | C 8  | .00075 " | 50-50 CYCLE       |
| R 10      | 37446 | 20000 "    | R 25      | 40150 | 1/2 WATT | C 9  | .00075 " | 25 CYCLE          |
| R 11      | 37446 | 30000 "    | R 26      | 40150 | 1/2 WATT | C 10 | .00075 " | 400 "             |
| R 12      | 26183 | 100000 "   | R 27      | 40150 | 1/2 WATT | C 11 | .00075 " | 350 "             |
| R 13      | 40281 | 30000 "    | R 28      | 40150 | 1/2 WATT | C 12 | .00075 " | 350 "             |
| R 14      | 40607 | 100000 "   | R 29      | 40150 | 1/2 WATT | C 13 | .00075 " | 400 "             |
| R 15      | 40227 | 250000 "   | R 30      | 40150 | 1/2 WATT | C 14 | .00075 " | 25 "              |
| R 31      | 40227 | 250000 "   | R 31      | 40150 | 1/2 WATT | C 15 | .00075 " | 400 "             |

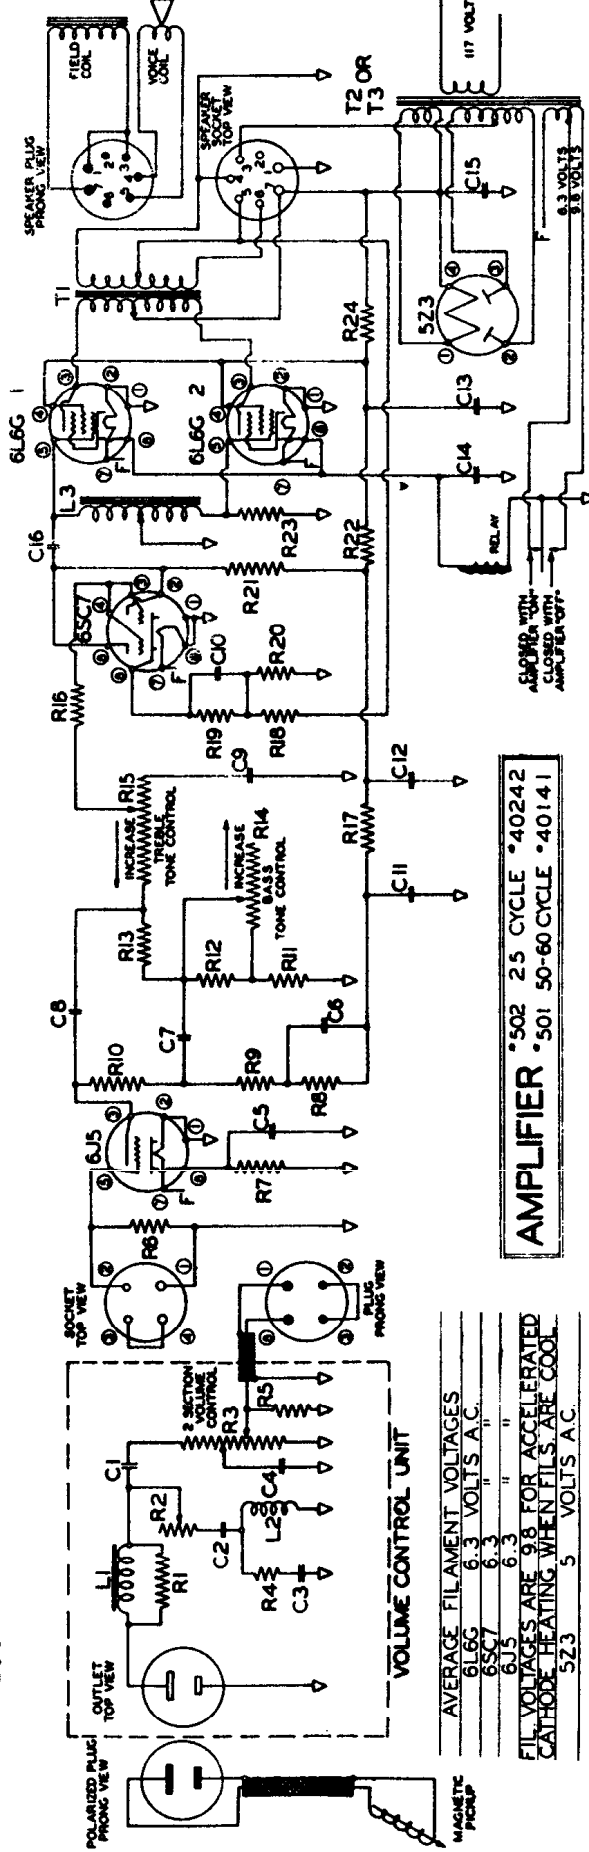


# ZENITH RADIO CORPORATION

CHICAGO • ILLINOIS

## Models 4K616-4K635-4K658

Chassis No. 4B02-4B03

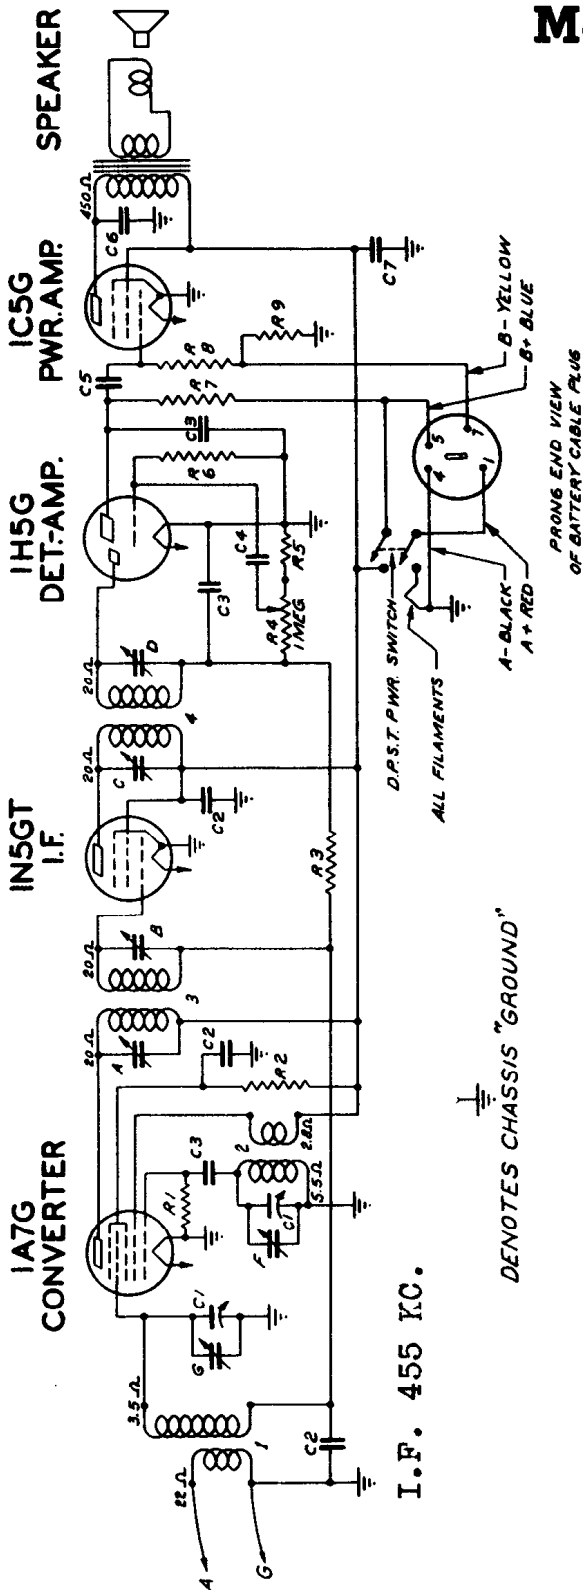


| DIAG. NO. | PART NO. | DESCRIPTION                | DIAG. NO. | PART NO. | DESCRIPTION          | DIAG. NO. | PART NO. | DESCRIPTION              |
|-----------|----------|----------------------------|-----------|----------|----------------------|-----------|----------|--------------------------|
| C1        | 22-209   | TWO GANG VARIABLE - 4B03   | R4        | 63-1235  | VOLUME CONTROL-4B03  | A         | 1        | 1E1 I.F. TRANS. PRI.     |
| C2        | 22-213   | TWO GANG VARIABLE - 4B02   | R5        | 63-1240  | VOLUME CONTROL-4B02  | B         | 2        | 1E1 I.F. TRANS. SEC.     |
| C3        | 22-929   | .05 MFD.                   | R6        | 63-587   | 4700 OHM             | C         | 3        | 2E1 I.F. TRANS. PRI.     |
| C4        | 22-162   | .0001 MFD.                 | R7        | 63-976   | 15 MEGOHM            | D         | 4        | 2E1 I.F. TRANS. SEC.     |
| C5        | 22-626   | .01 MFD.                   | R8        | 63-271   | 1 MEGOHM             | F         | 6        | BROADCAST ANT. (ON GANG) |
| C6        | 22-243   | .01 MFD.                   | R9        | 63-500   | 2.2 MEGOHM           |           |          |                          |
| C7        | 22-448   | .004 MFD.                  |           | 63-634   | 520 OHM              |           |          |                          |
|           | 22-664   | 8 MFD. ELECTROLYTIC 150 V. |           |          |                      |           |          |                          |
| R1        | 63-654   | 180 M OHM                  |           | 20-237   | ANTENNA COIL         |           |          |                          |
| R2        | 63-334   | 68 M OHM                   |           | 59584    | OSC. COIL ASSEMBLY   |           |          |                          |
| R3        | 63-665   | 3.5 MEGOHM                 |           | 95-B/4   | 1E1 I.F. TRANSFORMER |           |          |                          |
|           |          |                            |           | 95-B/5   | 2E1 I.F. TRANSFORMER |           |          |                          |

**CHASSIS MODEL SPEAKER**  
 4B02 4K616 49-449 5"  
 4B03 4K635 49-450 6"  
 4B03 4K658 49-461 8"

BATTERY PACK No Z-28

All voltages measured with a 1000 ohm per volt meter from chassis to socket contact indicated.  
 All voltages are positive D.C. unless marked otherwise.  
 Volume control on full.  
 Battery Z28  
 Power consumption—1.3 watts.  
 Power output—.28 watts.


Tuning Range—540 Kc.—1740 Kc.

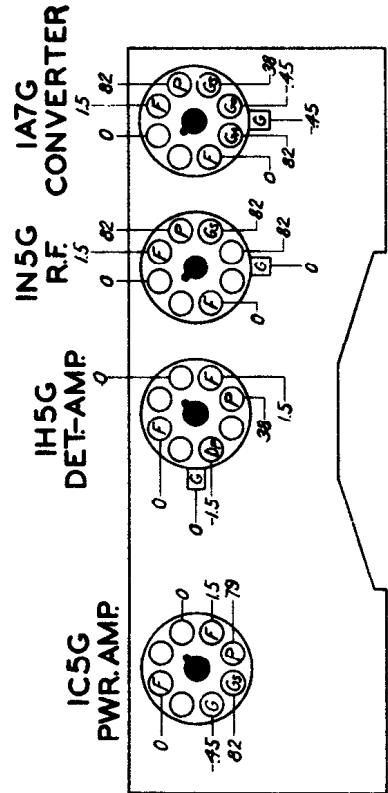




Zenith Radio

I.F. FREQUENCY 455 KC

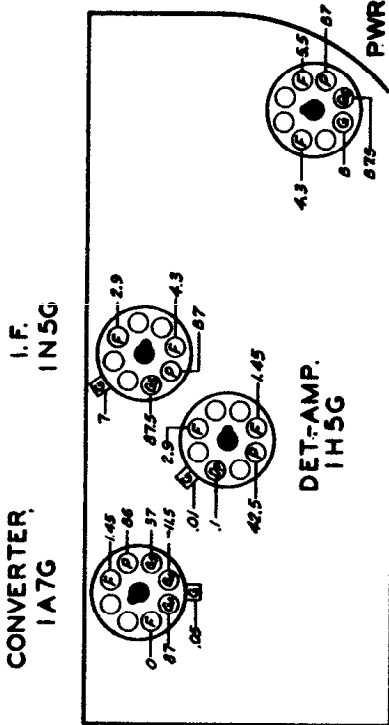



All voltages measured with a 1000 ohm per volt meter from chassis to socket contacts.  
 Voltage readings are all positive D.C. unless otherwise indicated.  
 Antenna disconnected volume control full on.  
 Battery voltage 6 volt.  
 Battery consumption—.5 ampere.  
 Power Output—.37 watts.

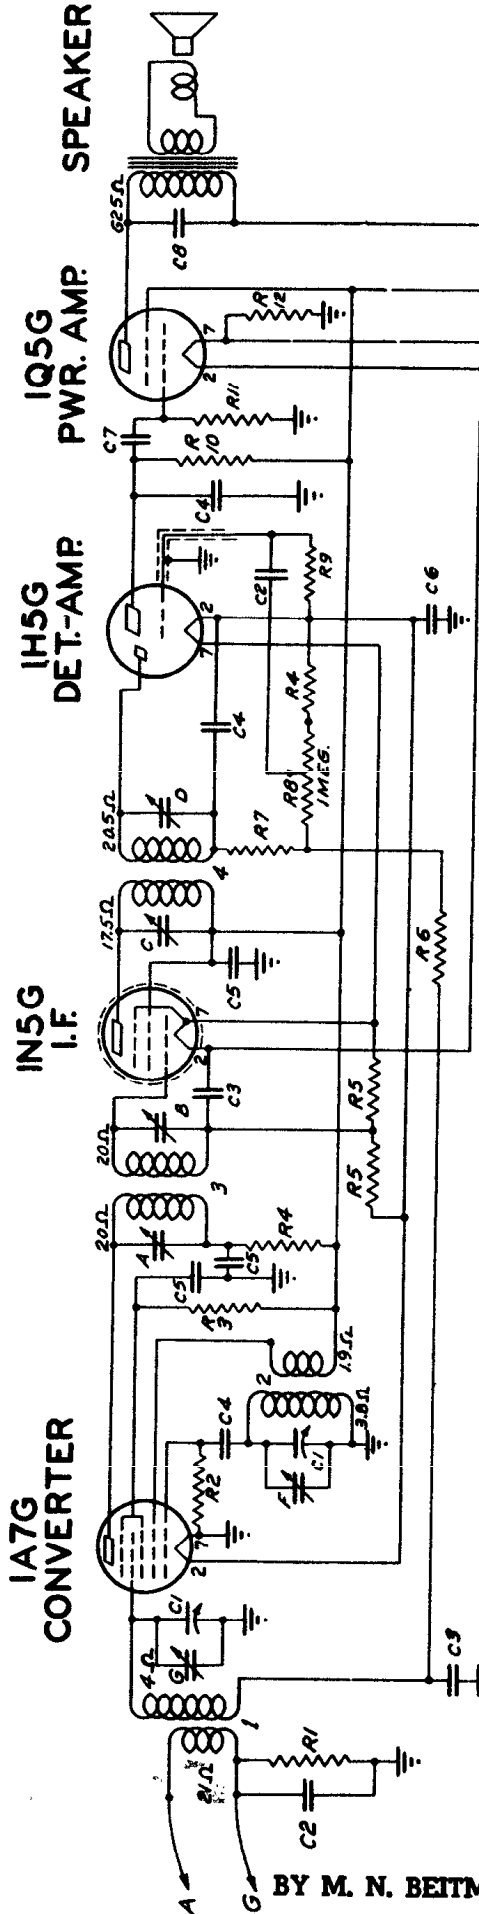

| DIAG. PART NO. | DESCRIPTION                 | DIAG. PART NO. | DESCRIPTION              |
|----------------|-----------------------------|----------------|--------------------------|
| C1             | 22-695 TWO GANG VARIABLE    | R2             | 63-595 108M OHM          |
| C2             | 22-825 .01 MFD.             | R3             | 63-594 68M OHM           |
| C3             | 22-829 .05 MFD.             | R4             | 63-583 1000 OHM          |
| C4             | 22-162 .0001 MFD.           | R5             | 63-296 200M OHM          |
| C5             | 22-828 .05 MFD.             | R6             | 63-569 3.9 MEGOHM        |
| C6             | 22-199 .5 MFD.              | R7             | 63-593 47M OHM           |
| C7             | 22-243 .01 MFD.             | R8             | 63-1079 VOLUME CONTROL   |
| C8             | 22-445 .004 MFD.            | R9             | 63-976 15 MEGOHM         |
| C9             | 22-566 .04 MFD.             | R10            | 63-271 1 MEGOHM          |
| C10            | 22-961 500MFD. ELECTROLYTIC | R11            | 63-600 2.2 MEGOHM        |
| C11            | 22-742 .01 MFD.             | R12            | 63-1060 90 OHM WIREWOUND |
| C12            | 22-742 .01 MFD.             | R13            | 63-577 100 OHM           |
| C13            | (N.M.F.)                    | R14            | 63-605 1000 OHM          |
| R1             | 63-597 470M OHM             | R15            | 63-1061 7 OHM            |

**Model 4B639**  
 Chassis No. 4B04

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

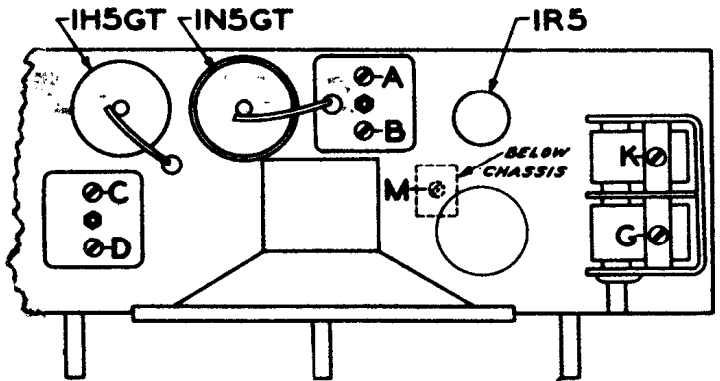
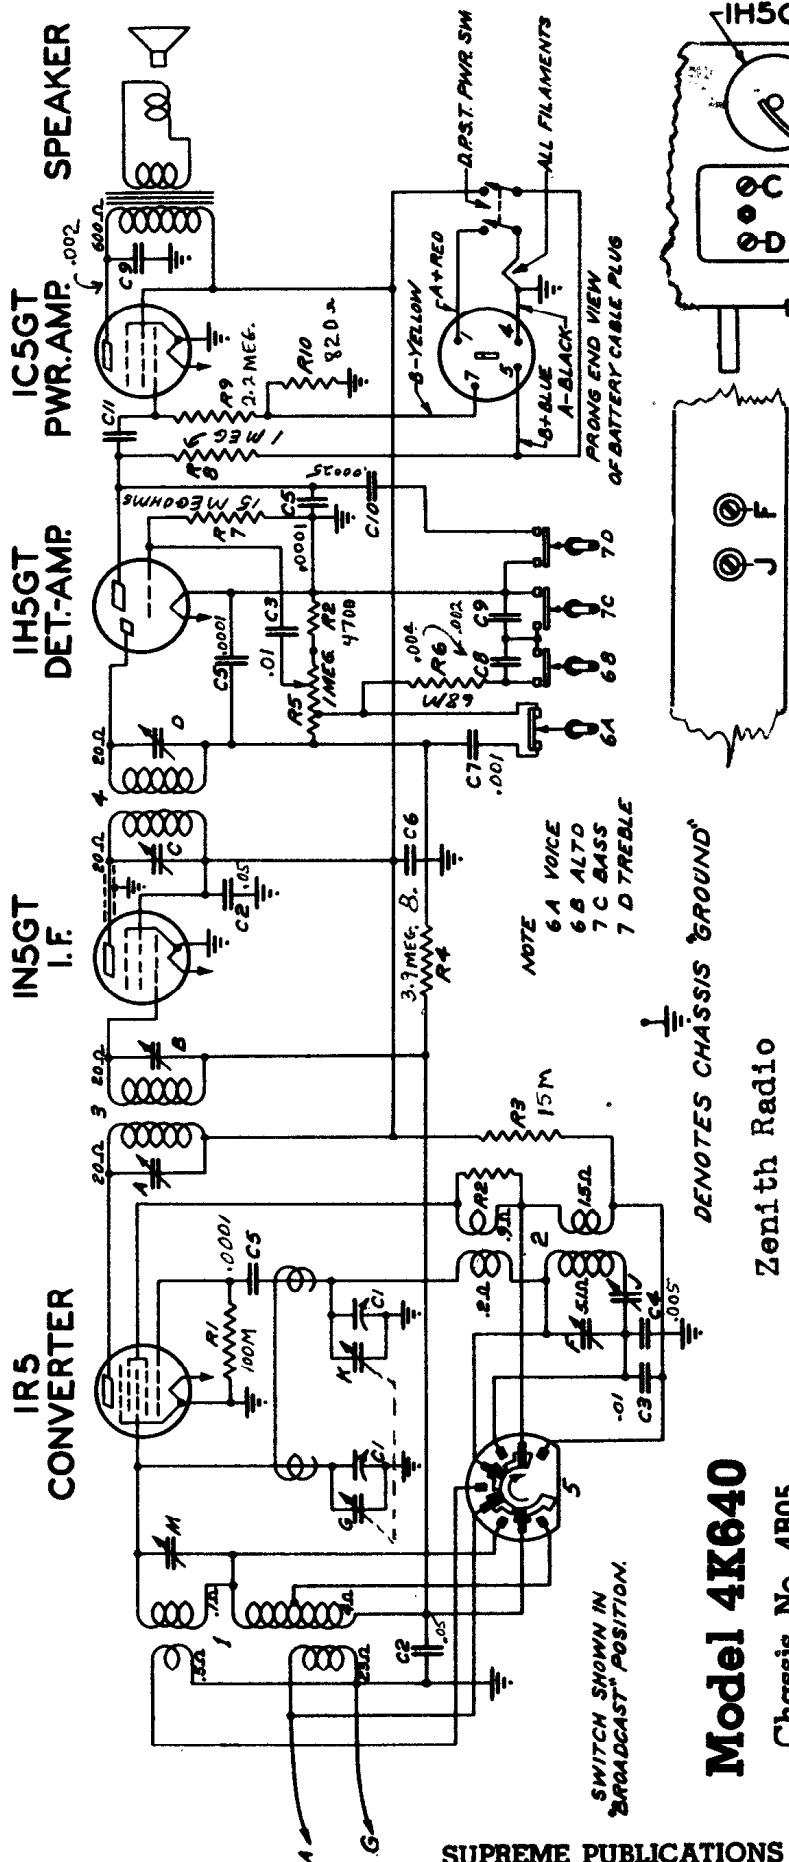


## ALIGNMENT PROCEDURE

| Operation | Conn. Test Osc. to | Dummy Ant. | Input Sig. Freq. | Band       | Set Dial At | Trimmers | Purpose                  |
|-----------|--------------------|------------|------------------|------------|-------------|----------|--------------------------|
| 1         | Converter Grid     | .5 Mfd.    | 455 Kc.          | Broadcast  | 600 Kc.     | A B C D  | Align I. F.              |
| 2         | Ant.—Gnd.          | 400 Ohms   | 18 Mc.           | Short Wave | 18 Mc.      | K        | Set Osc. to Scale        |
| 3         | Ant.—Gnd.          | 200 Mmi.   | 1600 Kc.         | Broadcast  | 1600 Kc.    | F        | Set Osc. to Scale        |
| 4         | Ant.—Gnd.          | 200 Mmi.   | 1400 Kc.         | Broadcast  | 1400 Kc.    | G        | Align Ant.               |
| 5         | Ant.—Gnd.          | 200 Mmi.   | 600 Kc.          | Broadcast  | 600 Kc.     | J        | Rock Gang & Adj. to Max. |
| 6         | Ant.—Gnd.          | 400 Ohms   | 18 Mc.           | Short Wave | 18 Mc.      | M        | Rock Gang                |

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

I.F. FREQUENCY 455 KC.  
 4 TUBE SUPERHETERODYNE  
 CHASSIS № 4B05-1½V.-2 BAND  
 ZENITH RADIO CORPORATION

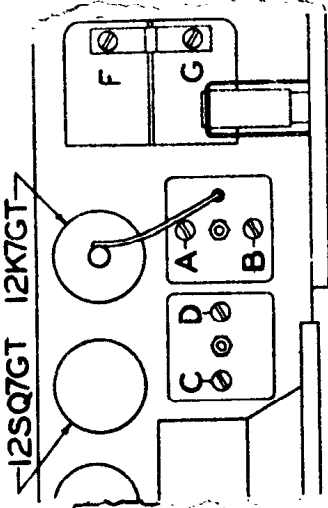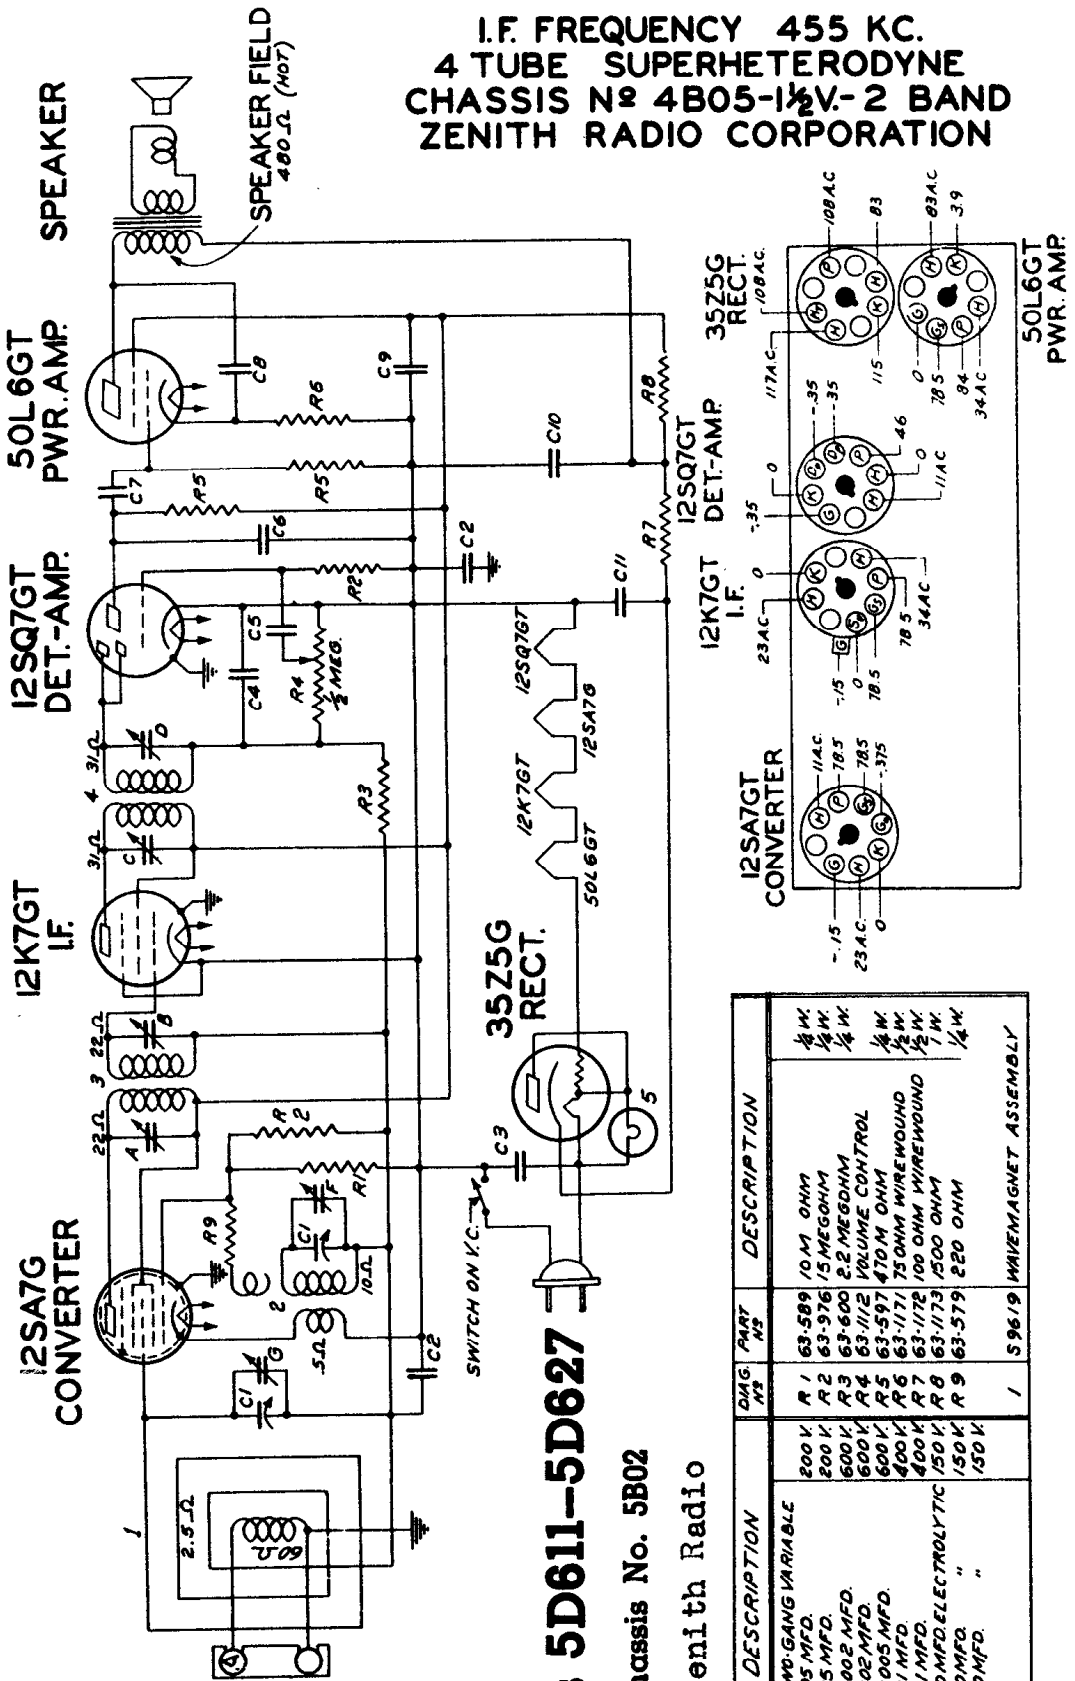

## Models 5D611-5D627 Chassis No. 5B02 Zenith Radio


| QAG No. | PART No. | DESCRIPTION          | QAG No. | PART No. | DESCRIPTION         |
|---------|----------|----------------------|---------|----------|---------------------|
| C1      | 22-1206  | TWO-GANG VARIABLE    | R1      | 63-589   | 10 M OHM            |
| C2      | 22-829   | .05 MFD.             | R2      | 63-976   | 15 MEGOHM           |
| C3      | 22-1017  | .05 MFD.             | R3      | 63-600   | 2.2 MEGOHM          |
| C4      | 22-953   | .0002 MFD.           | R4      | 63-112   | VOLUME CONTROL      |
| C5      | 22-492   | .002 MFD.            | R5      | 63-597   | 470 M OHM           |
| C6      | 22-854   | .0005 MFD.           | R6      | 63-171   | 75 OHM WIREWOUND    |
| C7      | 22-243   | .01 MFD.             | R7      | 63-172   | 100 OHM WIREWOUND   |
| C8      | 22-1182  | .01 MFD.             | R8      | 63-173   | 1500 OHM            |
| C9      | 22-1182  | .01 MFD.             | R9      | 63-579   | 220 OHM             |
| C10     | 22-1186  | 20 MFD. ELECTROLYTIC |         |          |                     |
| C11     | 22-1186  | 30 MFD. "            |         |          |                     |
|         |          |                      | 1       | S 9619   | WAVEMAGNET ASSEMBLY |

| Operation | Connect Test Oscillator to          | Dummy Antenna | Input Signal Frequency | Band | Set Dial At | Trimmers   | Purpose                 |
|-----------|-------------------------------------|---------------|------------------------|------|-------------|------------|-------------------------|
| 1         | Converter Grid                      | .1 mfd.       | 455 Kc.                | —    | 600 Kc.     | A, B, C, D | Align I. F.             |
| 2         | Single Turn Loop coupled loosely to | —             | 1500 Kc.               | —    | 1500 Kc.    | F          | Set Oscillator to Scale |
| 3         | Wave Magnet                         | —             | 1500 Kc.               | —    | 1500 Kc.    | G          | Adjust for Maximum      |

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS


## Model 5R680

Chassis No. 5B03

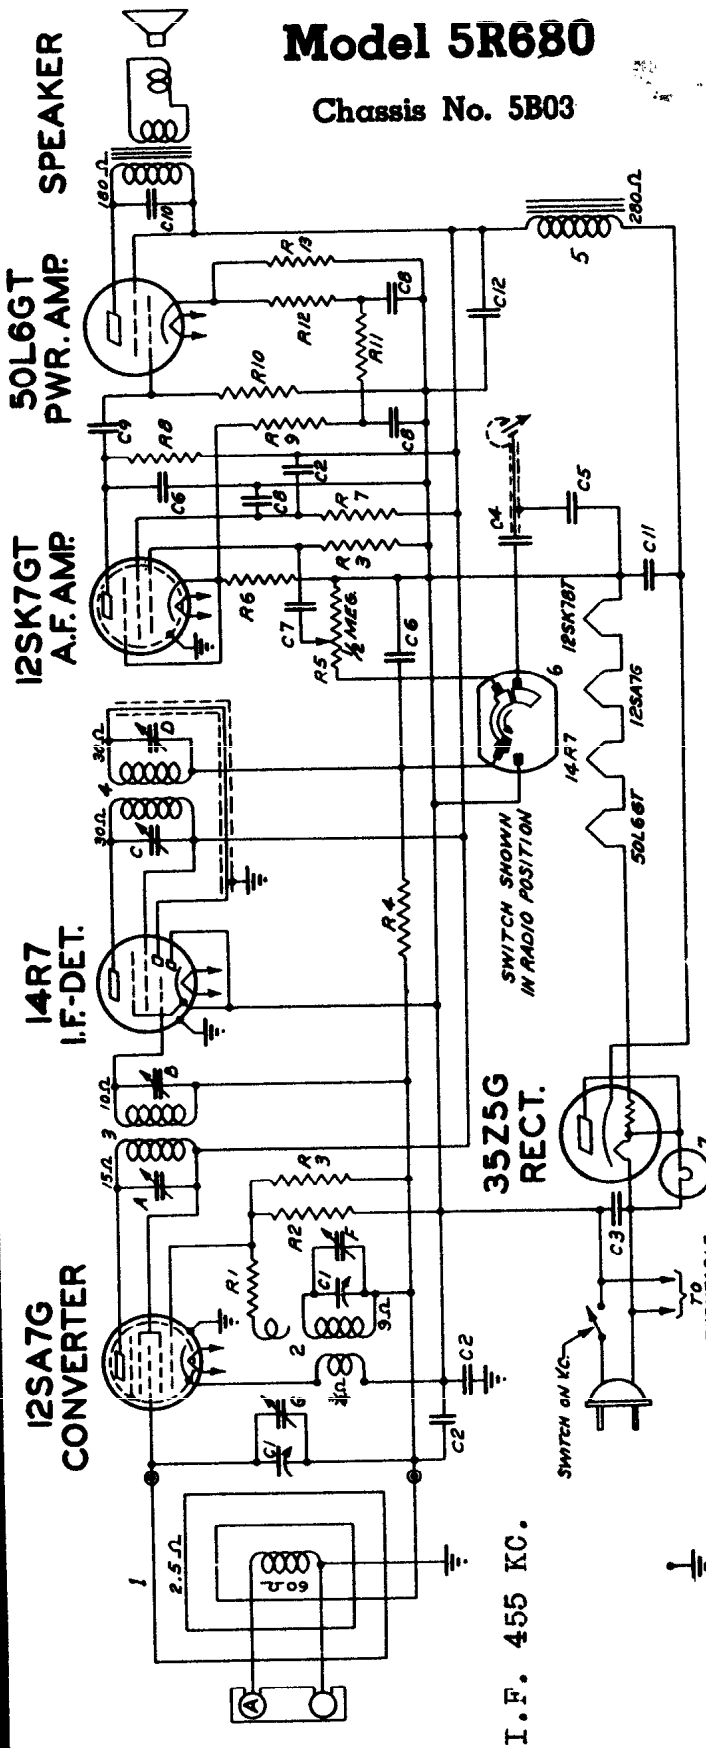

Zenith Radio

| PART NO. | DESCRIPTION                  | QTY | PART NO. | DESCRIPTION              | QTY |
|----------|------------------------------|-----|----------|--------------------------|-----|
| C1       | 22-1206 TWO-GANG VARIABLE    | 1   | 63-976   | 15 MEGOHM                | 1   |
| C2       | 22-829 .05 MFD.              | 1   | 63-600   | 2.2 MEGOHM               | 1   |
| C3       | 22-1017 .05 MFD.             | 1   | 63-1112  | VOLUME CONTROL           | 1   |
| C4       | 22-987 .001 MFD.             | 1   | 63-634   | 820 OHM                  | 1   |
| C5       | 22-987 .02 MFD.              | 1   | 63-778   | 470M OHM                 | 1   |
| C6       | 22-933 .002 MFD.             | 1   | 63-445   | 100M OHM                 | 1   |
| C7       | 22-492 .002 MFD.             | 1   | 63-439   | 2700 OHM                 | 1   |
| C8       | 22-227 .1 MFD.               | 1   | 63-597   | 470M OHM                 | 1   |
| C9       | 22-168 .02 MFD.              | 1   | 63-637   | 8700 OHM                 | 1   |
| C10      | 22-1182 .01 MFD.             | 1   | 63-639   | 6800 OHM                 | 1   |
| C11      | 22-1026 20 MFD. ELECTROLYTIC | 1   | 63-1015  | 40 OHM WIREWOUND         | 1   |
| C12      | 22-1026 40 MFD.              | 1   |          |                          |     |
| R1       | 63-579 220 OHM               | 1   | 95199    | HAVERMAGNET              | 1   |
| R2       | 63-589 10M OHM               | 1   | 95450    | OSCILLATOR COIL ASSEMBLY | 1   |


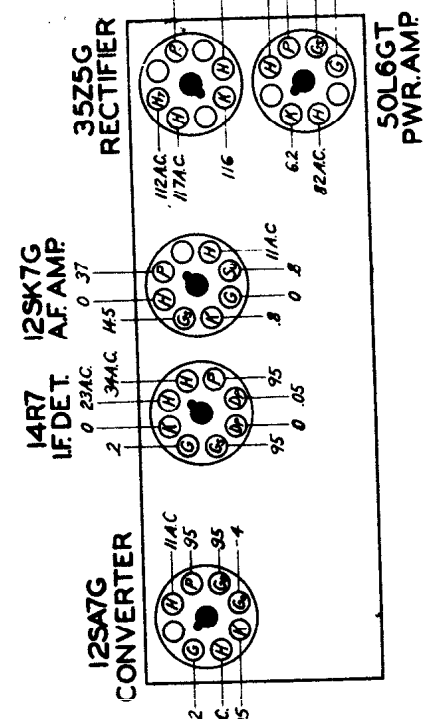


SOCKET VOLTAGES—BOTTOM VIEW

## Model 5R680

Chassis No. 5B03

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

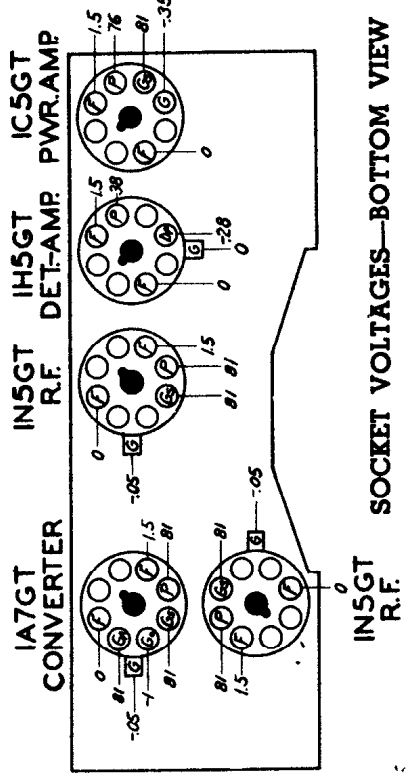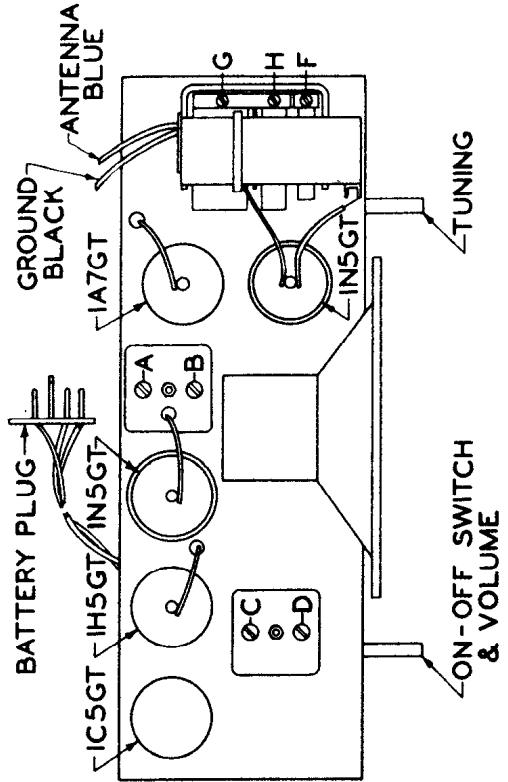


SOCKET VOLTAGES—BOTTOM VIEW

## Model 5K637 Chassis No. 5B04

| DIAG. NO. | DESCRIPTION         | DIAG. NO. | DESCRIPTION    |
|-----------|---------------------|-----------|----------------|
| C1        | THREE GANG VARIABLE | R5        | 3.9 MEGOHM     |
| C2        | .05 MFD.            | R6        | VOLUME CONTROL |
| C3        | .0001 MFD.          | R7        | 4700 OHM       |
| C4        | 8 MFD. ELECTROLYTIC | R8        | 1/8 MEGOHM     |
| C5        | .01 MFD.            | R9        | 1 MEGOHM       |
| C6        | .001 MFD.           | R10       | 2.2 MEGOHM     |
| C7        | .004 MFD.           | R11       | 820 OHM        |
| C8        | .002 MFD.           |           |                |
| C9        | .0025 MFD.          |           |                |
| C10       | .01 MFD.            |           |                |
| R1        | 5800 OHM            |           |                |
| R2        | 180M OHM            |           |                |
| R3        | 470 OHM             |           |                |
| R4        | 68M OHM             |           |                |

| Operation | Connect Test Oscillator to | Dummy Antenna | Input Signal Frequency | Band      | Set Dial At | Adjust Trimers | Purpose                 |
|-----------|----------------------------|---------------|------------------------|-----------|-------------|----------------|-------------------------|
| 1         | Converter Grid             | 1/2 Mid.      | 455 Kc.                | Broadcast | 600 Kc.     | A, B, C, D     | I. F. Alignment         |
| 2         | Ant.—Gnd.                  | 200 Mmfl.     | 1500 Kc.               | Broadcast | 1500 Kc.    | F              | Set Oscillator to Scale |
| 3         | "                          | 200 Mmfl.     | 1400 Kc.               | Broadcast | 1400 Kc.    | H, G           | Align R.F. & Ant.       |

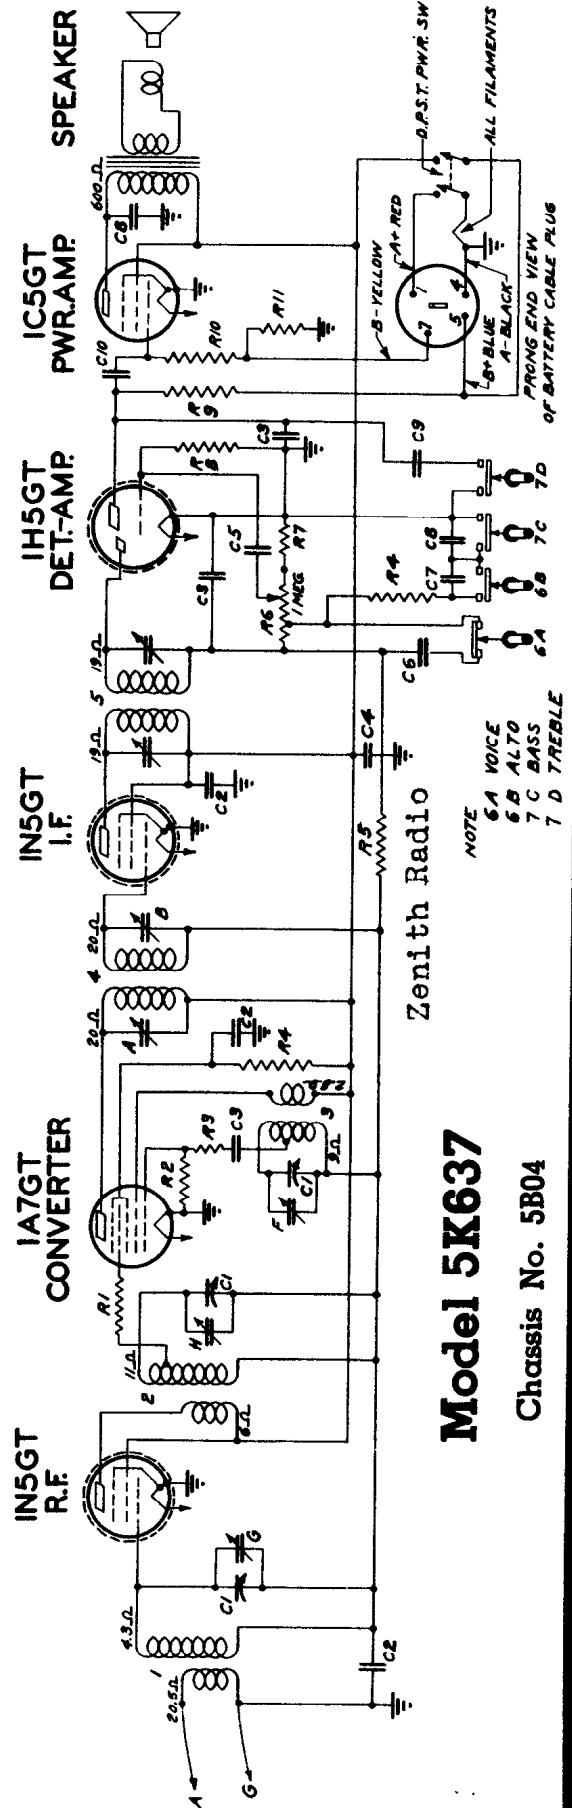

Zenith Radio


## Model 5K637 Chassis No. 5B04

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS


## Models 5G617-5G636

Chassis No. 5B05-5B06

Zenith Radio

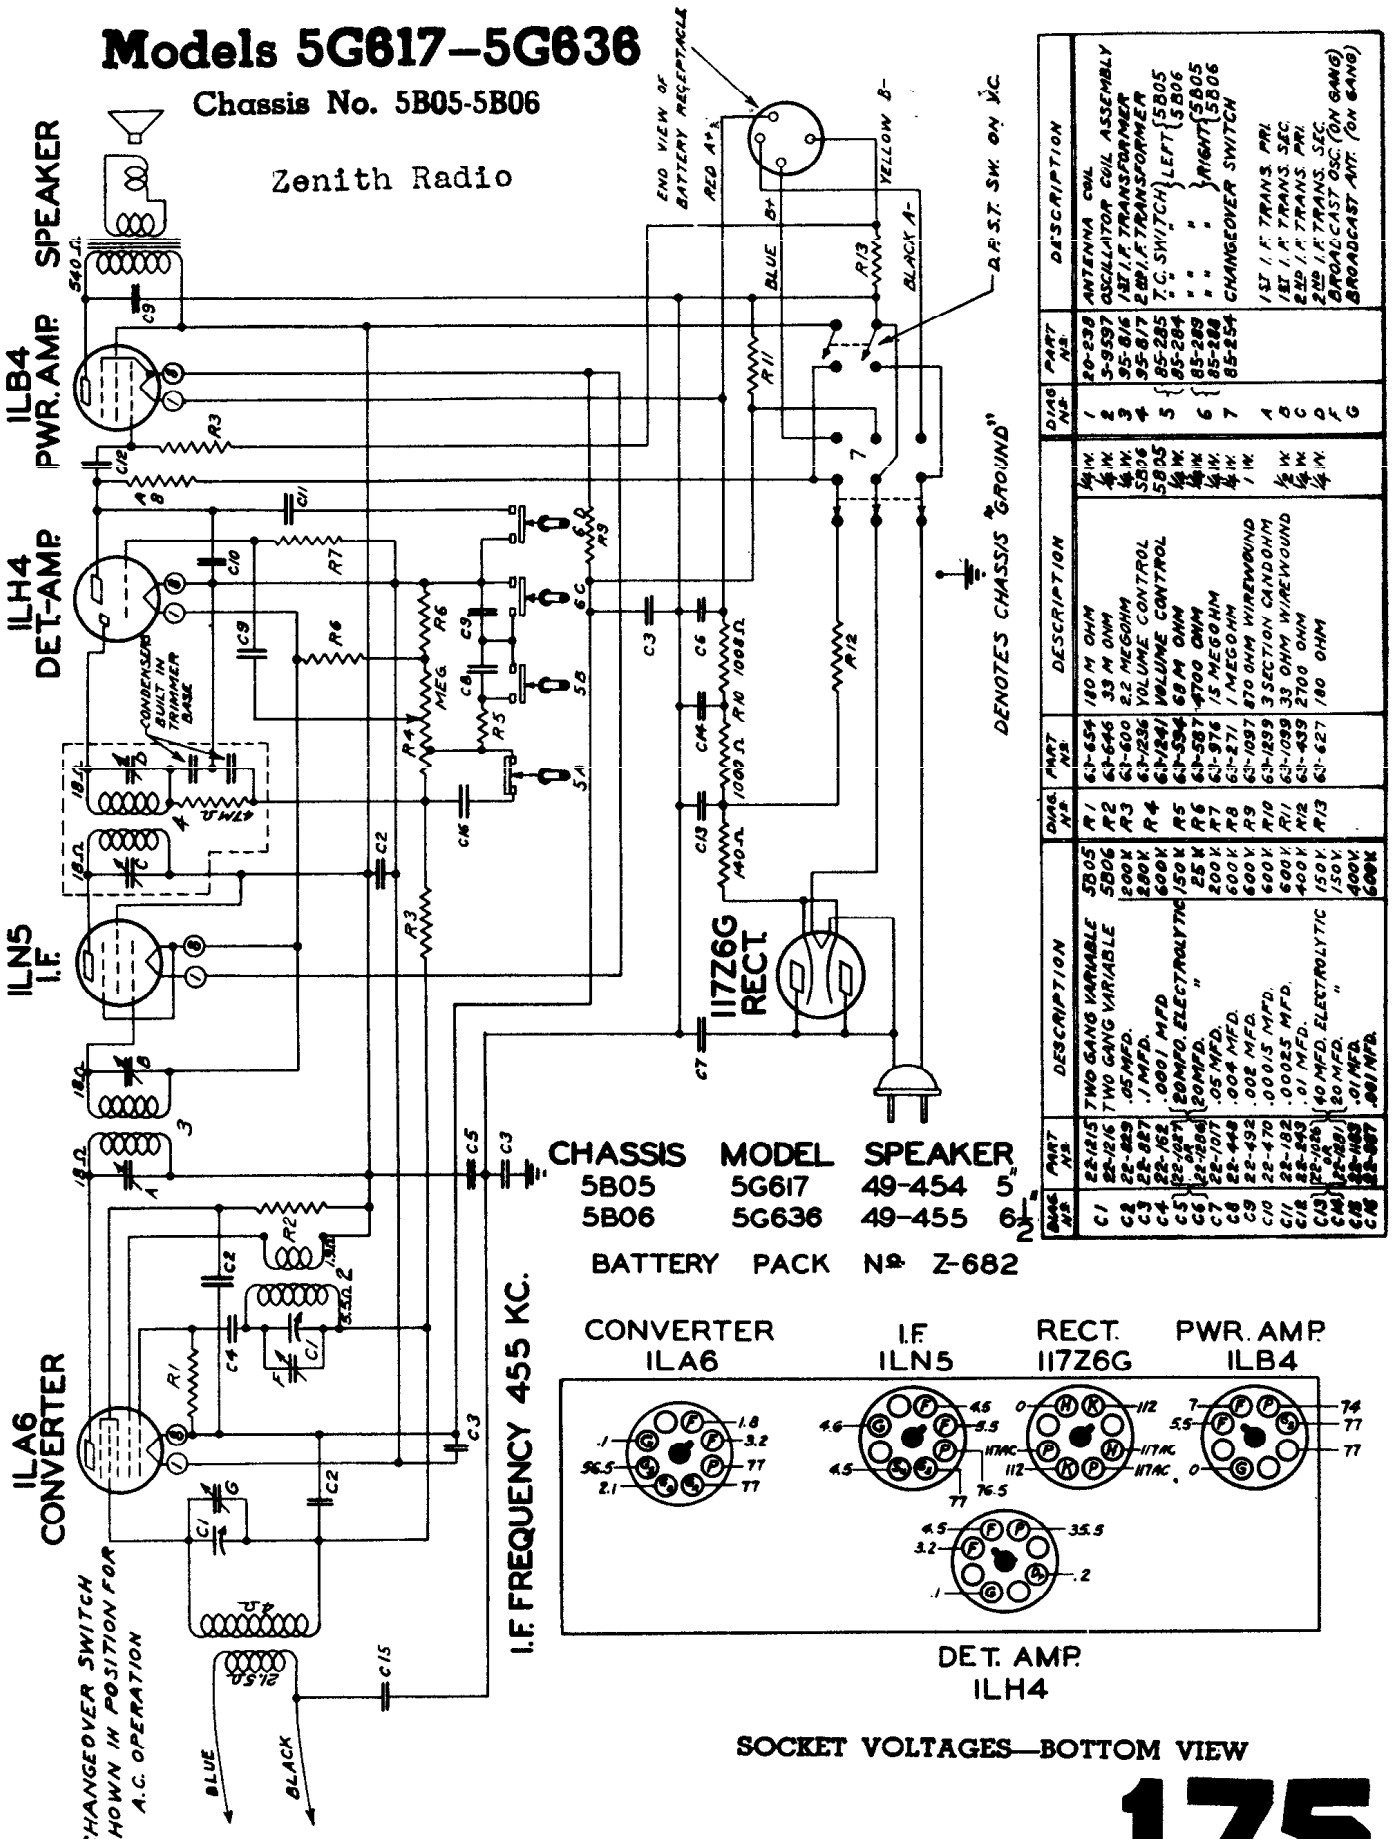

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

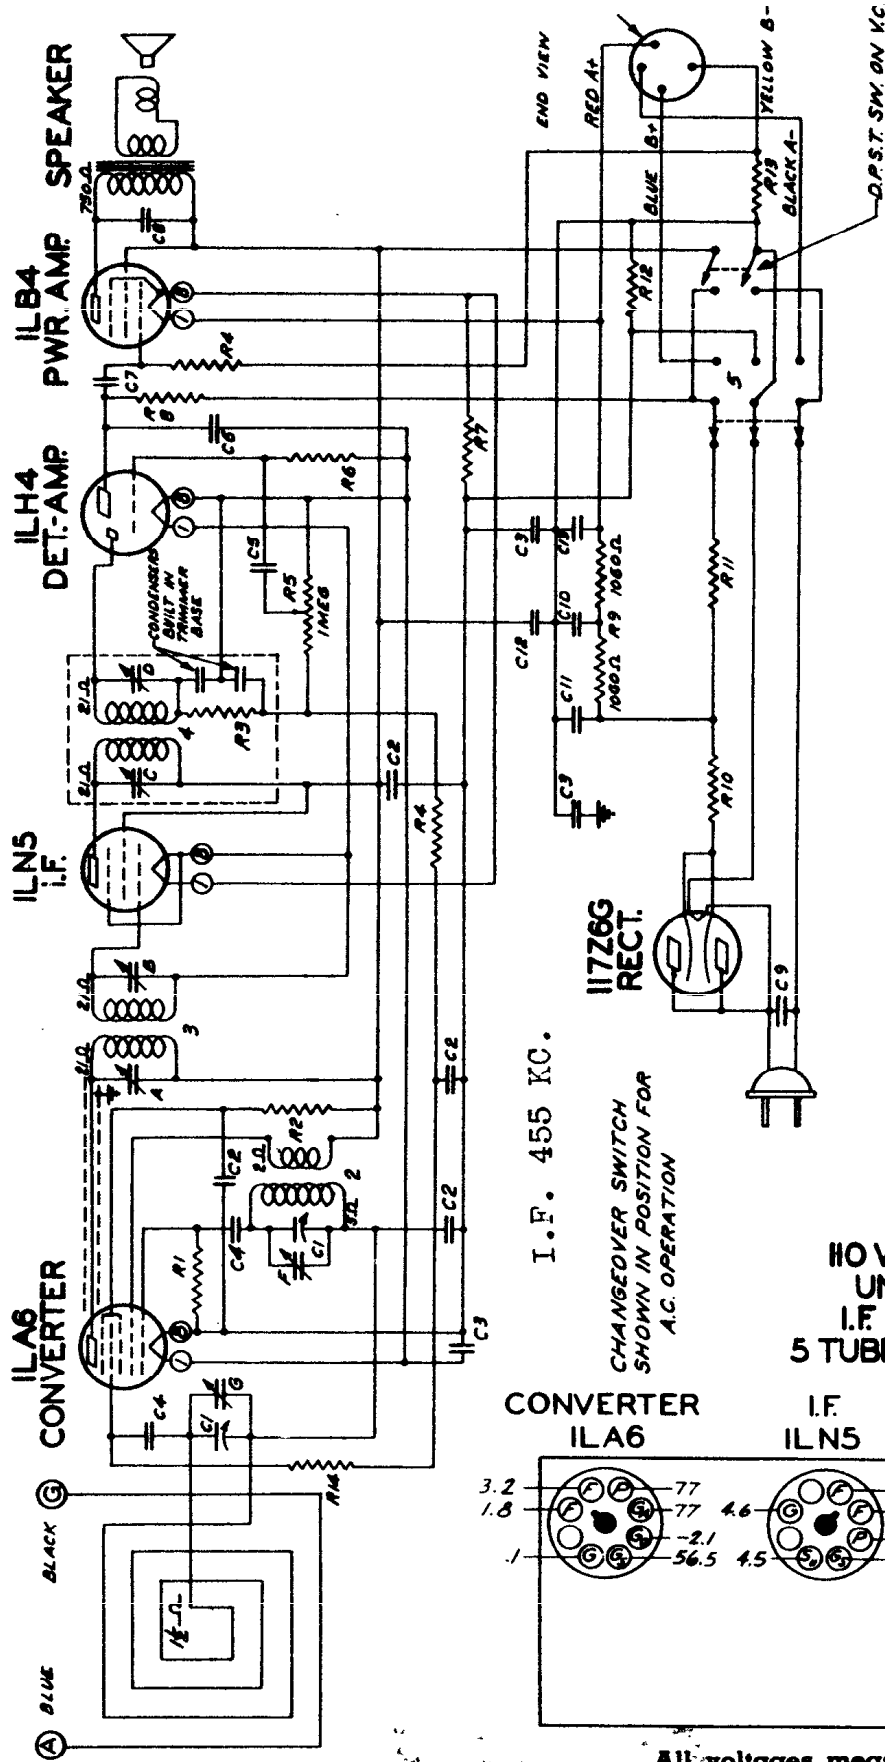

Zenith Radio


## Model 5G603

Chassis No. 5B07

I.F. 455 KC.

CHANGEOVER SWITCH FOR SHOWN IN POSITION FOR A.C. OPERATION

110 VOLT A.C.-BATTERY PACK  
UNIVERSAL PORTABLE  
I.F. FREQUENCY 455 KC.  
5 TUBE SUPERHETERODYNE

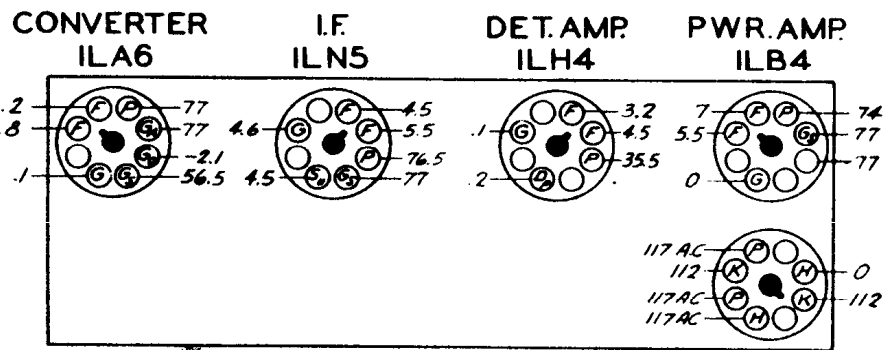


All voltages measured from point indicated to Neg. B. using 20000 ohm per volt meter.

RECT. 117Z6G

| DIAG. NO. | PART NO. | DESCRIPTION          | DIAG. NO. | PART NO. | DESCRIPTION              |
|-----------|----------|----------------------|-----------|----------|--------------------------|
| C1        | 22-462   | TWO GANG VARIABLE    | R1        | 63-773   | 180 M OHM                |
| C2        | 22-629   | .05 MFD.             | R2        | 63-646   | 93M OHM                  |
| C3        | 22-227   | .1 MFD.              | R3        | 63-713   | 47 M OHM                 |
| C4        | 22-182   | .0001 MFD.           | R4        | 63-600   | 2.2 MEG OHM              |
| C5        | 22-492   | .002 MFD.            | R5        | 63-1126  | VOLUME CONTROL           |
| C6        | 22-470   | .00015 MFD.          | R6        | 63-976   | 15 MEG OHM               |
| C7        | 22-243   | .01 MFD.             | R7        | 63-1097  | 1870 OHM WIREWOUND       |
| C8        | 22-326   | .005 MFD.            | R8        | 63-271   | 1 MEG OHM                |
| C9        | 22-069   | .05 MFD.             | R9        | 63-1137  | 2-SECTION CANDOHM        |
| C10       | 22-226   | .005 MFD.            | R10       | 63-1096  | 140 OHM WIREWOUND        |
| C11       | 22-226   | .005 MFD.            | R11       | 63-439   | 2700 OHM                 |
| C12       | 22-107   | .005 MFD.            | R12       | 63-1099  | 33 OHM WIREWOUND         |
| C13       | 22-107   | .005 MFD.            | R13       | 63-742   | 180 OHM                  |
|           |          |                      | R14       | 63-296   | 220 M OHM                |
| 1         | 38742    | WAVE MAGNET ASSEMBLY | 4         | 185-242  | CHANGEOVER SWITCH        |
| 2         | 58780    | OSC. COIL ASSEMBLY   | 5         |          |                          |
| 3         | 95-720   | 1ST I.F. TRANSFORMER | 6         |          |                          |
| 4         | 95-721   | 2ND I.F. TRANSFORMER | 7         |          |                          |
| 5         | 185-242  | CHANGEOVER SWITCH    | 8         |          |                          |
| A         |          |                      | C         |          |                          |
| B         |          |                      | D         |          |                          |
| C         |          |                      | E         |          |                          |
| D         |          |                      | F         |          |                          |
| E         |          |                      | G         |          |                          |
|           |          |                      |           |          | 1ST I.F. TRANS. PRI.     |
|           |          |                      |           |          | 1ST I.F. TRANS. SEC.     |
|           |          |                      |           |          | 2ND I.F. TRANS. PRI.     |
|           |          |                      |           |          | 2ND I.F. TRANS. SEC.     |
|           |          |                      |           |          | BROADCAST OSC. (ON GANG) |
|           |          |                      |           |          | BROADCAST ANT. (ON GANG) |


# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

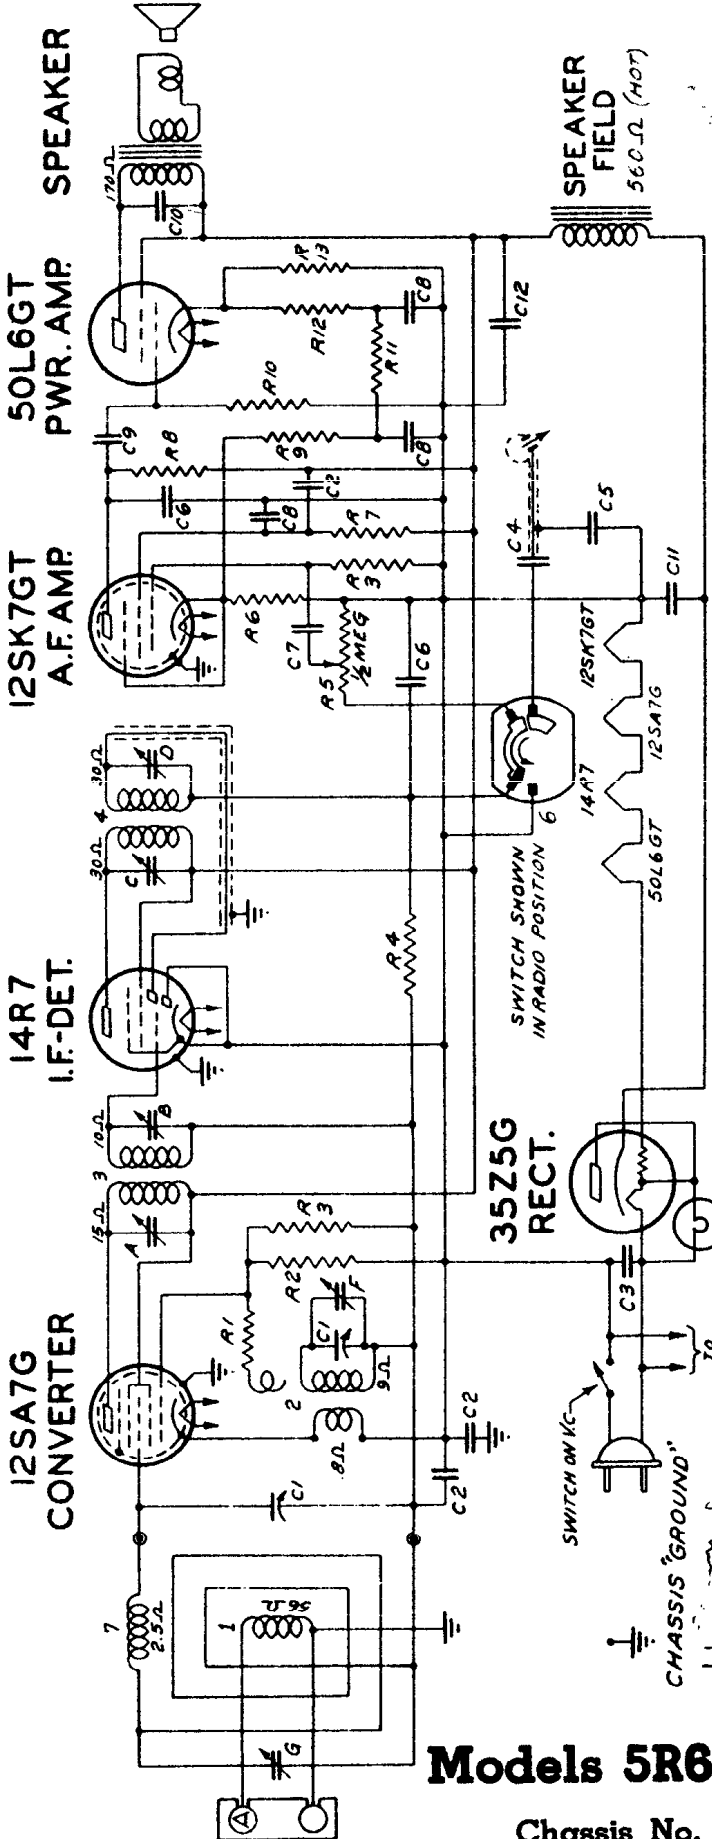

| DIAG. No. | PART No. | DESCRIPTION              |
|-----------|----------|--------------------------|
| 3         | 95-811   | 1ET I.F. TRANSFORMER     |
| 4         | 95-812   | 2ND I.F. TRANSFORMER     |
| 5         | 100-67   | DIAL LIGHT 6.3V .15A.    |
| 6         | 85-282   | PHONO-RADIO SWITCH       |
| 7         | S10072   | LOOP LOADING COIL        |
| A         |          | 1ET I.F. TRANS PRI       |
| B         |          | 1ET I.F. TRANS SEC       |
| C         |          | 2ND I.F. TRANS PRI       |
| D         |          | 2ND I.F. TRANS SEC       |
| F         | 22-1226  | BROADCAST OSC. (ON GANG) |
| G         |          | BROADCAST ANTENNA        |

| DIAG. No. | PART No. | DESCRIPTION              |
|-----------|----------|--------------------------|
| R3        | 63-976   | .5 MEG OHM               |
| R4        | 63-600   | 2.2 MEG OHM              |
| R5        | 63-1112  | VOLUME CONTROL           |
| R6        | 63-634   | 820 OHM                  |
| R7        | 63-778   | 470 OHM                  |
| R8        | 63-445   | 100 OHM                  |
| R9        | 63-439   | 270 OHM                  |
| R10       | 63-597   | 470 OHM                  |
| R11       | 63-637   | 470 OHM                  |
| R12       | 63-639   | 680 OHM                  |
| R13       | 63-705   | 140 OHM WIREWOUND        |
| 1         | S9879    | WAVE MAGNET              |
| 2         | S9470    | OSCILLATOR COIL ASSEMBLY |

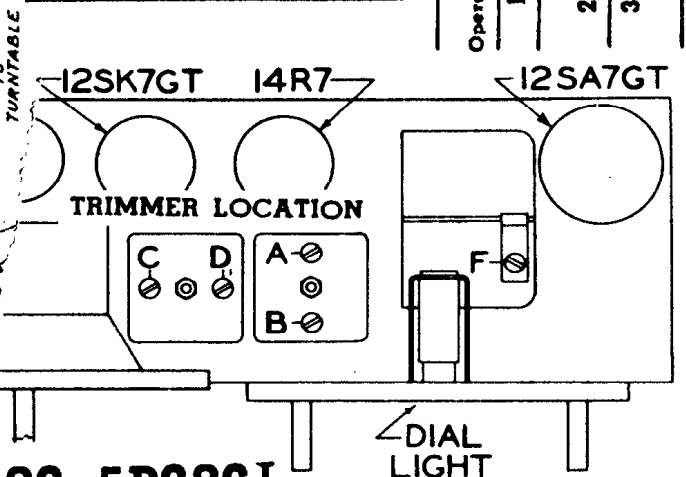

| Operation | Connect Oscillator to                        | Dummy Antenna | Input Signal Frequency | Band | Set Dial At | Trimmers                          | Purpose      |
|-----------|--|---------------|------------------------|------|-------------|-----------------------------------|--------------|
| 1         | Converter Grid                               | .5 mfd.       | 455 Kc.                | BC   | 1600 Kc.    | A, B, C, D                        | Align I.F.   |
| 2         | One Turn Loop Coupled Loosely to Wave Magnet | —             | 1600 Kc.               | "    | 1600 Kc.    | F                                 | Set to Scale |
| 3         | "  | —             | 1400 Kc.               | "    | 1400 Kc.    | G. Located at Back of Wave Magnet | Align Ant.   |

**Models 5R686-5R686J**

Chassis No. 5B13 Phono.


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# 177






# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

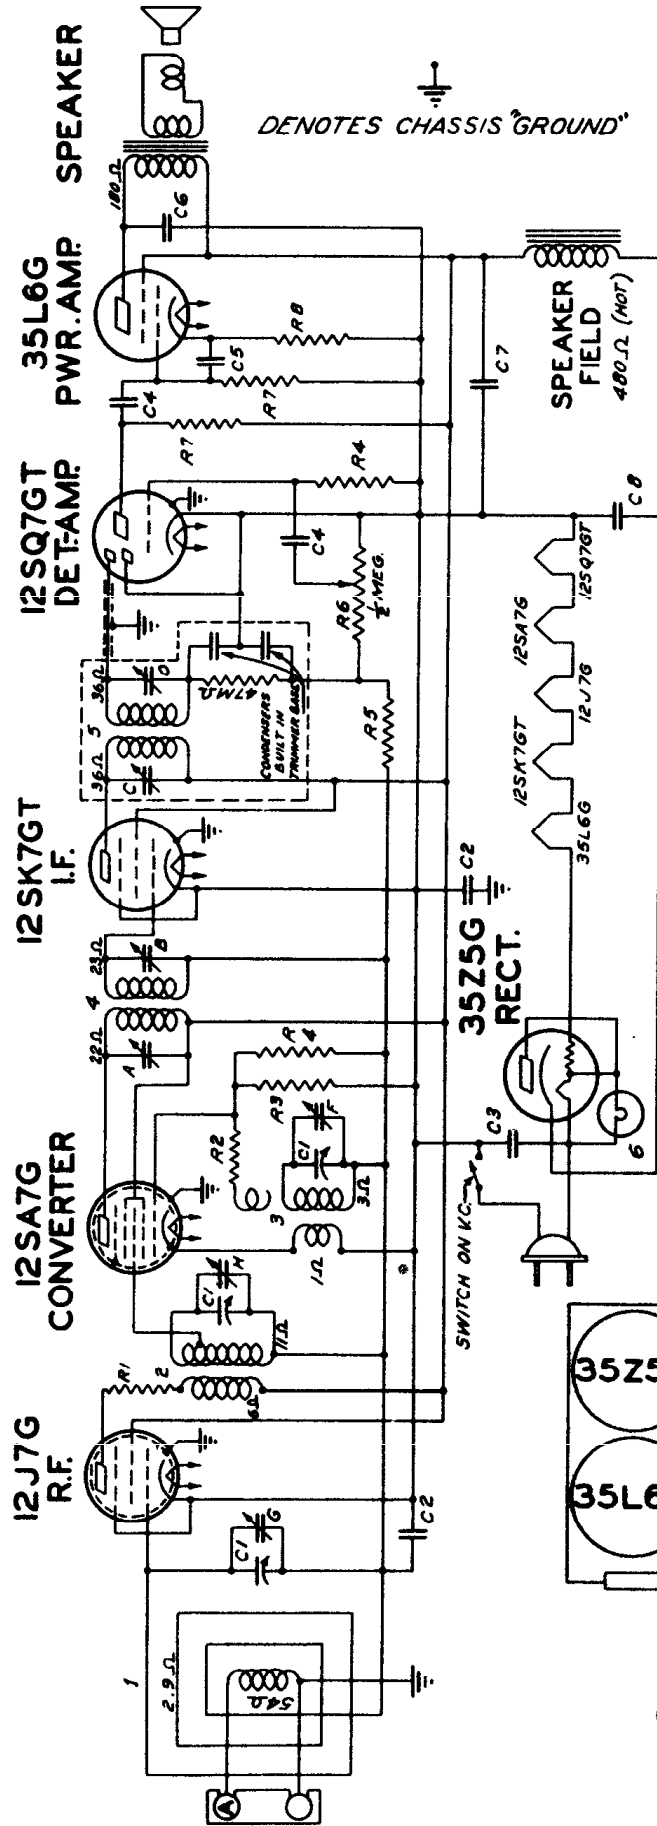

| DIAL NO. | PART NO. | DESCRIPTION              | DIAL NO. | PART NO. | DESCRIPTION              |
|----------|----------|--------------------------|----------|----------|--------------------------|
| C1       | 22-1201  | THREE-GANG VARIABLE      | R3       | 63-589   | 10M OHM                  |
| C2       | 22-859   | .05 MFD.                 | R4       | 63-976   | 15 MEG OHM               |
| C3       | 22-1017  | .05 MFD.                 | R5       | 63-600   | 2.2 MEG OHM              |
| C4       | 22-243   | .01 MFD.                 | R6       | 69-112   | VOLUME CONTROL           |
| C5       | 22-854   | .0005 MFD.               | R7       | 63-597   | 470 OHM                  |
| C6       | 22-1049  | .03 MFD.                 | R8       | 63-686   | 150 OHM WIREWOUND        |
| C7       | 22-1014  | CONDENSATOR ELECTROLYTIC |          |          |                          |
| C8       |          | CONDENSATOR ELECTROLYTIC |          |          |                          |
| R1       | 63-590   | 15M OHM                  | 1        | 3-9576   | WAVELENGTH ASSEMBLY      |
| R2       | 63-579   | 220 OHM                  | 2        | 3-9570   | DETECTOR COIL ASSEMBLY   |
|          |          |                          | 3        | 3-9571   | OSCILLATOR COIL ASSEMBLY |
|          |          |                          | 4        | 95-808   | 1ST I.F. TRANS.          |
|          |          |                          | 5        | 98-809   | 2ND I.F. TRANS.          |
|          |          |                          | 6        | 100-67   | PILOT LIGHT 6.3 V. .15A. |
|          |          |                          | A        |          | 1ST I.F. TRANS. PRI.     |
|          |          |                          | B        |          | 1ST I.F. TRANS. SEC.     |
|          |          |                          | C        |          | 2ND I.F. TRANS. PRI.     |
|          |          |                          | O        |          | 2ND I.F. TRANS. SEC.     |
|          |          |                          | F        |          | BROADCAST INT. (ON GANG) |
|          |          |                          | B        |          | BROADCAST INT. (ON GANG) |
|          |          |                          | H        |          | BROADCAST DET. (ON GANG) |

## Models 6D612-6D612W-6D622-6D628


Zenith Radio Chassis No. 6B04

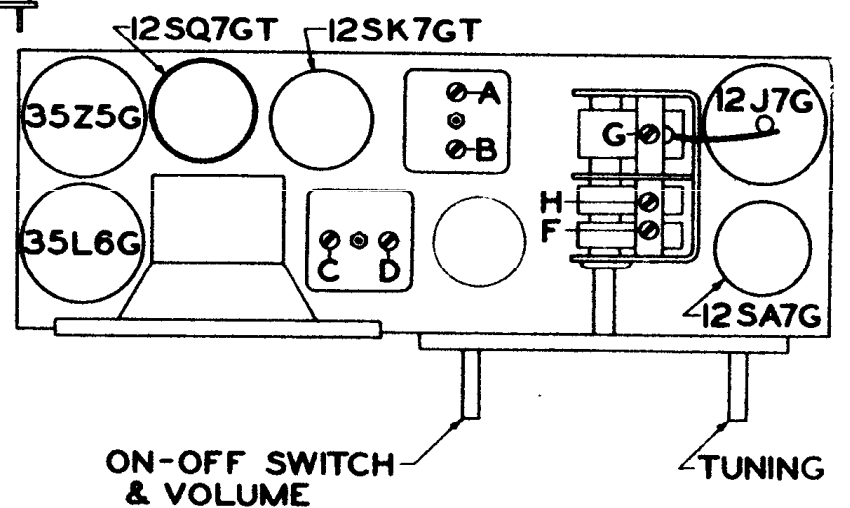

| Operation | Connect Oscillator to                           | Dummy Antenna | Input Signal Frequency | Band | Set Dial At | Trimmers   |
|-----------|---|---------------|------------------------|------|-------------|------------|
| 1         | Converter Grid                                  | .5 mfd.       | 455 Kc.                | BC   | 1600 Kc.    | A, B, C, D |
| 2         | Single Turn Loop Coupled Loosely to Wave Magnet | .5 mfd.       | 1600 Kc.               | "    | 1600 Kc.    | F          |
| 3         |   | .5 mfd.       | 1400 Kc.               | "    | 1400 Kc.    | H, G       |




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

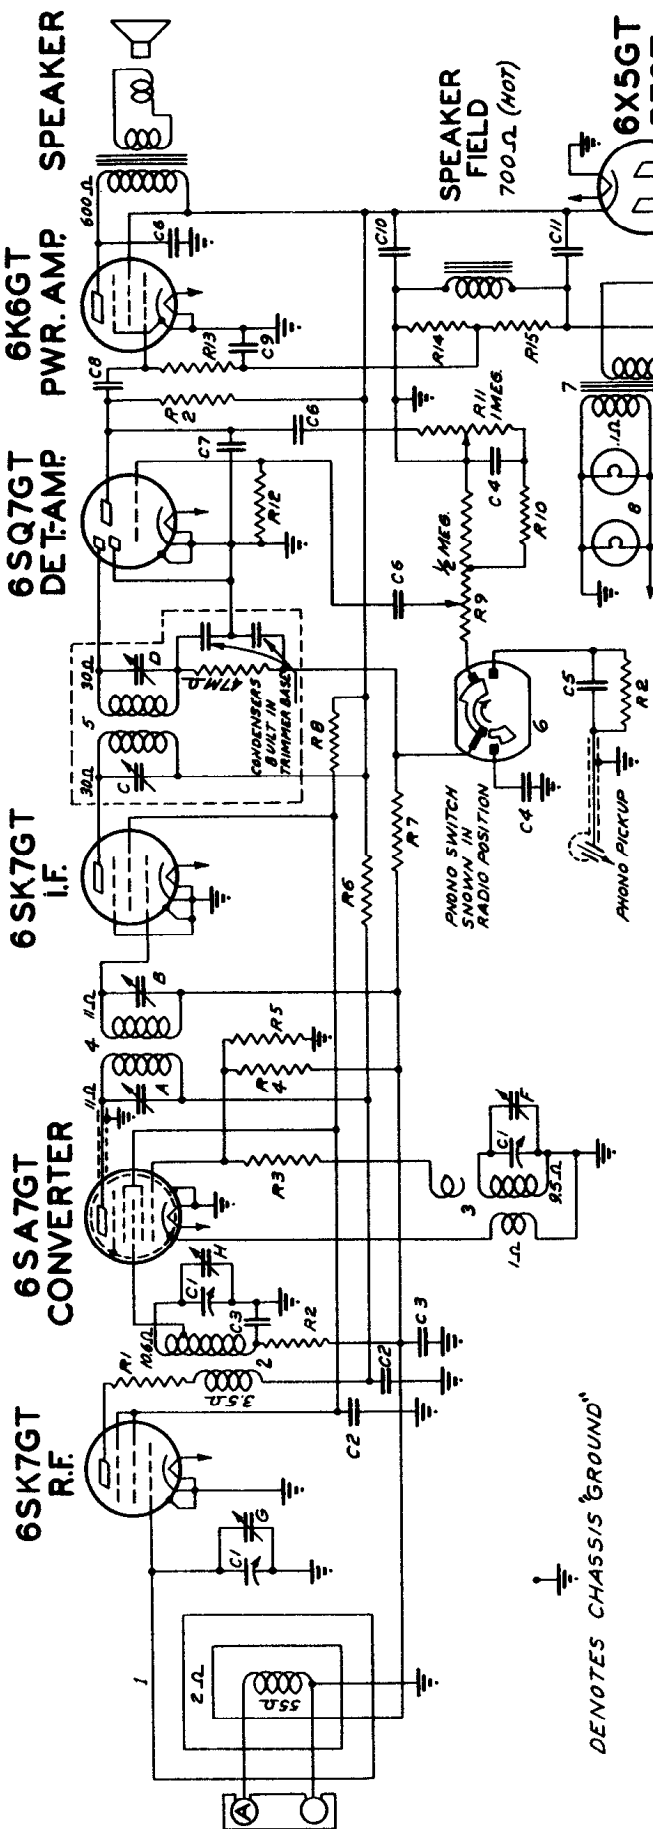

| Operation | Connect Oscillator to            | Dummy Antenna | Input Signal Frequency | Band | Set Dial At | Trimmers   |
|-----------|----------------------------------|---------------|------------------------|------|-------------|------------|
| 1         | Converter Grid                   | .5 mfd.       | 455 Kc.                | BC   | 600 Kc.     | A, B, C, D |
| 2         | Single Turn Loop Coupled Loosely | .5 mfd.       | 1600 Kc.               | "    | 1600 Kc.    | F          |
| 3         | Wave Magnet                      | .5 mfd.       | 1400 Kc.               | "    | 1400 Kc.    | H, G       |


## Models 6R683-6R684-6R687R\* -6R688

Chassis No. 6B06 Phono.

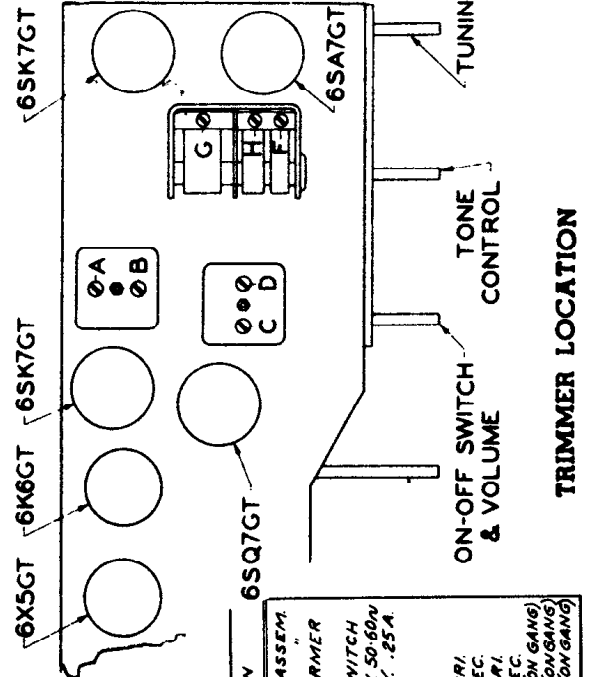

| DIAG. PART No. | DESCRIPTION                  | DIAG. PART No. | DESCRIPTION            | DIAG. PART No. | DESCRIPTION                     |
|----------------|------------------------------|----------------|------------------------|----------------|---------------------------------|
| C1             | 22-1241 THREE GANG VARIABLE  | R3             | 63-579 220 OHM         | 2              | 59834 DETECTOR COIL ASSEM.      |
| C2             | 22-828 .05 MFD.              | R4             | 63-673 82 MEGOHM       | 3              | 59835 OSCILLATOR " "            |
| C3             | 22-829 .05 MFD.              | R5             | 63-584 10M OHM         | 4              | 95-841 1ST I.F. TRANSFORMER     |
| C4             | 22-327 .02 MFD.              | R6             | 63-605 1000 OHM        | 5              | 95-842 2ND I.F. " "             |
| C5             | 22-387 .001 MFD.             | R7             | 63-600 2.2 MEGOHM      | 6              | 95-297 PHONO-RADIO SWITCH       |
| C6             | 22-449 .004 MFD.             | R8             | 63-1058 22 M OHM       | 7              | 95-840 PWR TRANS. 117V. 50-60V. |
| C7             | 22-854 .005 MFD.             | R9             | 63-1246 VOLUME CONTROL | 8              | 100-36 DIAL LIGHT 6.3 V. .25A.  |
| C8             | 22-830 .02 MFD.              | R10            | 63-591 22 M OHM        |                |                                 |
| C9             | 22-138 .2 MFD.               | R11            | 63-1247 TONE CONTROL   |                |                                 |
| C10            | 22-719 1/8 MFD. ELECTROLYTIC | R12            | 63-376 15 MEGOHM       | A              | 1ST I.F. TRANS. PRI.            |
| C11            | 22-1036 1/4 MFD. " "         | R13            | 63-597 470 M OHM       | B              | 1ST I.F. " SEC.                 |
| C12            | 22-1071 .005 MFD.            | R14            | 63-655 220 M OHM       | C              | 2ND I.F. " PRI.                 |
|                |                              | R15            | 63-656 270 M OHM       | D              | 2ND I.F. " SEC.                 |
| R1             | 63-1071 10 M OHM             |                |                        | F              | BROADCAST OSC. (ON GANG)        |
| R2             | 63-296 220 M OHM             |                |                        | G              | BROADCAST ANT. (ON GANG)        |
|                |                              |                |                        | H              | BROADCAST DET. (ON GANG)        |

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

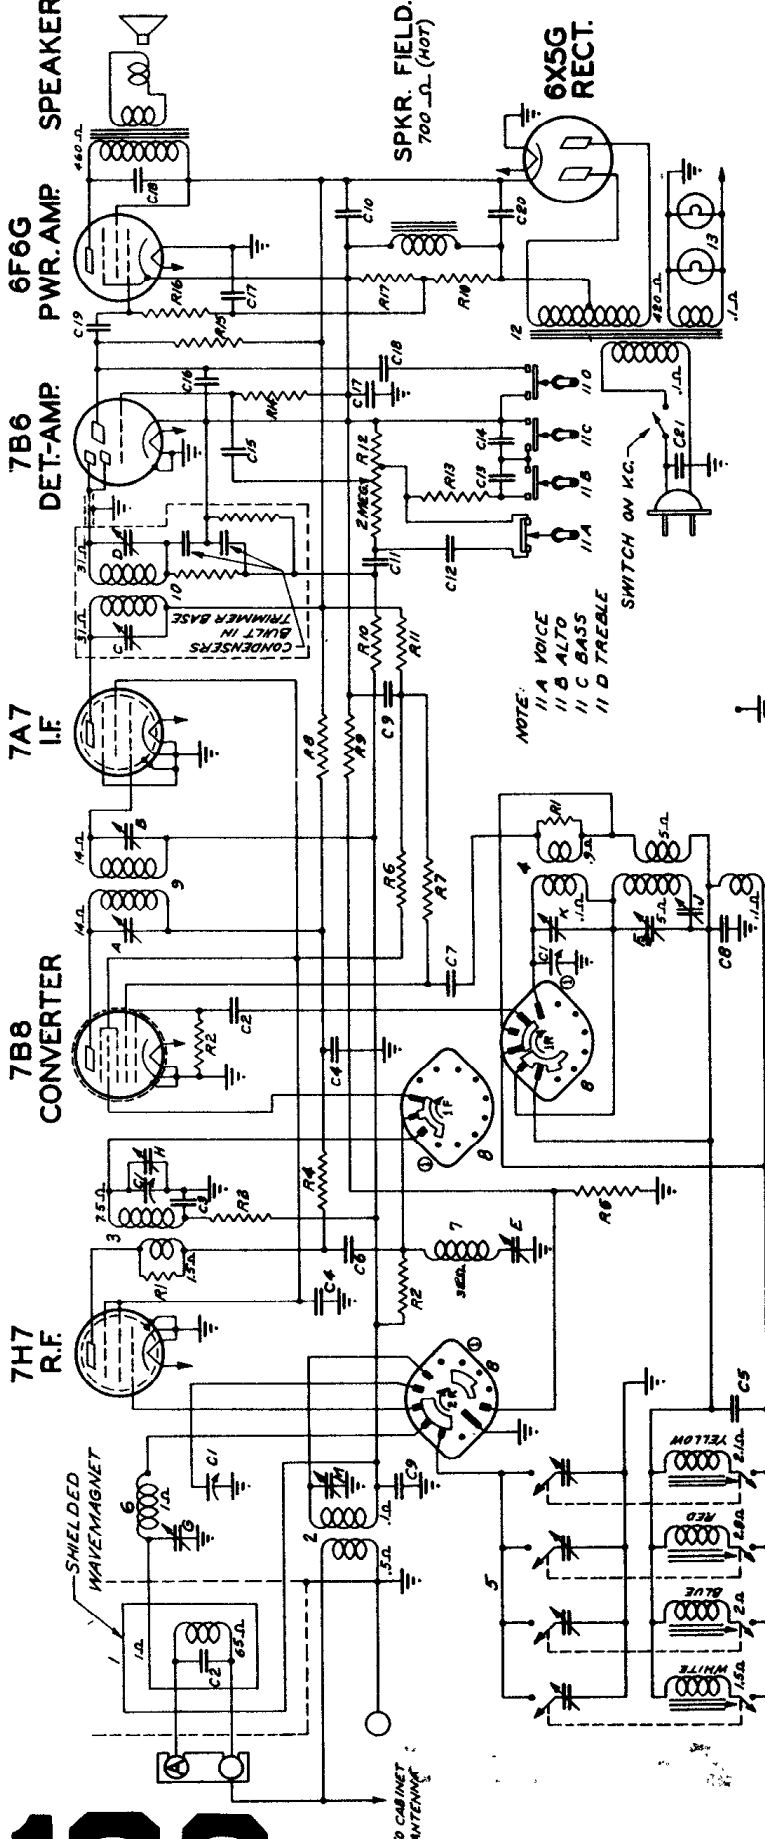


⊥ DENOTES CHASSIS "GROUND"

BAND SWITCH SHOWN IN AUTOMATIC POSITION

I.F. FREQUENCY 455KC.

| QWAS<br>NO. | PART<br>NO. | DESCRIPTION        | QWAS<br>NO. | PART<br>NO. | DESCRIPTION              |
|-------------|-------------|--------------------|-------------|-------------|--------------------------|
| C1          | 22-200      | TUNE GANG VARIABLE | R 16        | 63-577      | 470M OHM                 |
| C2          | 22-800      | 50M MFD            | R 17        | 63-608      | 390M OHM                 |
| C3          | 22-800      | 10M MFD            | R 18        | 63-860      | 360M OHM                 |
| C4          | 22-800      | 10M MFD            | 1           | S9887       | WAVEMAGNET ASSEMBLY      |
| C5          | 22-162      | COMPENSATING COND. | 2           | S9885       | ANTENNA COIL ASSEMBLY    |
| C6          | 22-162      | COMPENSATING COND. | 3           | S9886       | OSCILLATOR               |
| C7          | 22-162      | COMPENSATING COND. | 4           | S9745       | AUTOMATIC TUNING         |
| C8          | 22-162      | COMPENSATING COND. | 5           | S9589       | LOOP LOADING COIL        |
| C9          | 22-162      | COMPENSATING COND. | 6           | S9826       | WAVE-TRAP COIL ASSEMBLY  |
| C10         | 22-162      | COMPENSATING COND. | 7           | 85-278      | BAND SELECTOR SWITCH     |
| C11         | 22-162      | COMPENSATING COND. | 8           | 95-708      | 1ST I.F. TRANSFORMER     |
| C12         | 22-162      | COMPENSATING COND. | 9           | 95-709      | 2ND I.F.                 |
| C13         | 22-162      | COMPENSATING COND. | 10          | S9743       | TONE CONTROL SW. ASSEM.  |
| C14         | 22-162      | COMPENSATING COND. | 11          | 95-710      | PWR. TRANS. 115V. 50-60V |
| C15         | 22-162      | COMPENSATING COND. | 12          | 100-36      | DIAL LIGHT 6.3V. 25A.    |
| C16         | 22-162      | COMPENSATING COND. | 13          |             |                          |
| C17         | 22-162      | COMPENSATING COND. |             |             |                          |
| C18         | 22-162      | COMPENSATING COND. |             |             |                          |
| C19         | 22-162      | COMPENSATING COND. |             |             |                          |

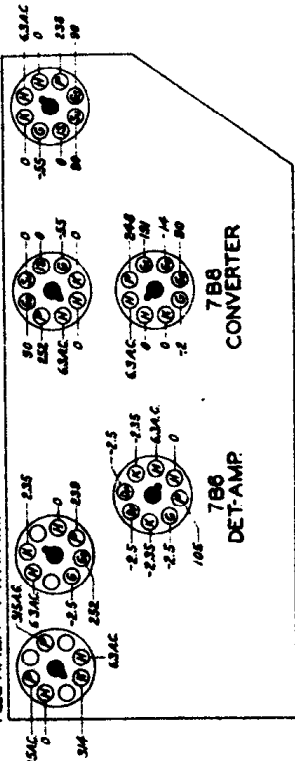

SOCKET VOLTAGES—BOTTOM VIEW

All voltages measured with a 20,000 ohm per volt meter from chassis to socket contact indicated.

All voltages are positive D.C. unless marked otherwise.



Volume control full on.

## Models 6S632-6S646-6S656

Chassis No. 6B08

Zenith Radio

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

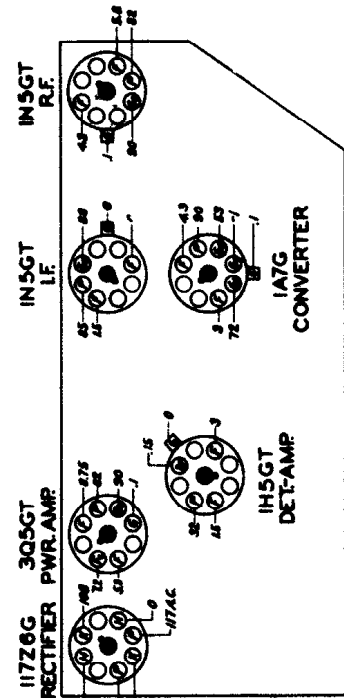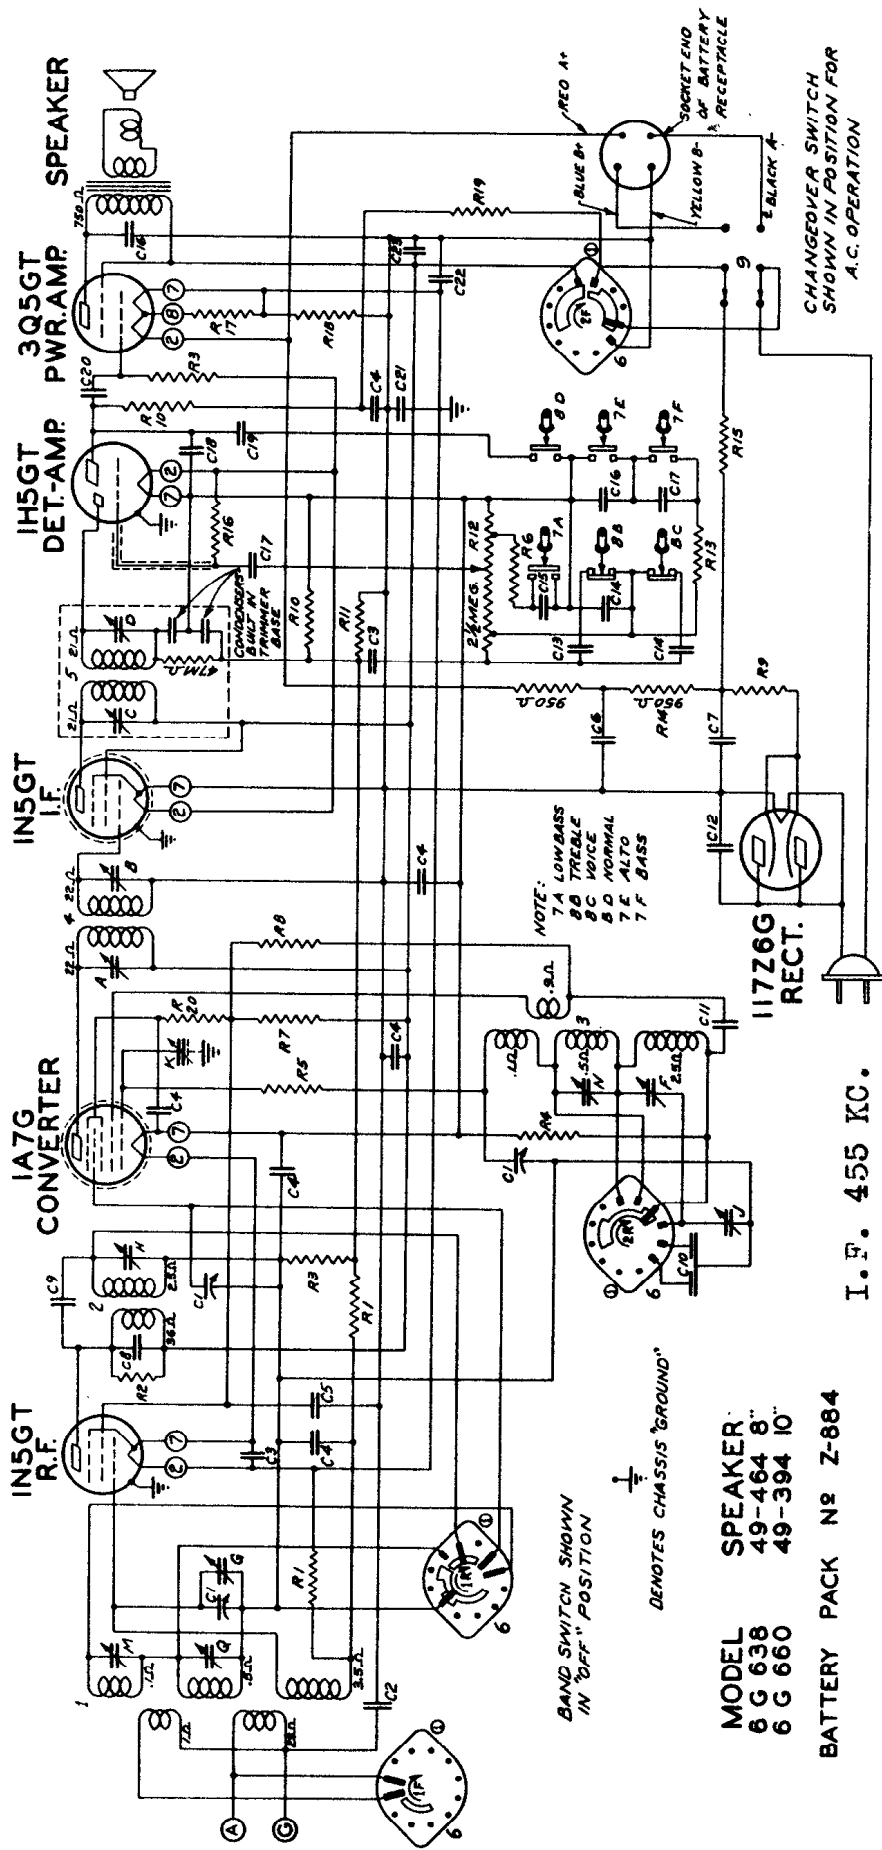


**SOCKET VOLTAGES—BOTTOM VIEW**

All voltages measured with a 20,000 ohm per volt meter from chassis to socket contact indicated.

## Models 6G638-6G660

Zenith Radio Chassis No. 6B09

| PART NO. | DESCRIPTION           | PART NO. | DESCRIPTION            | PART NO. | DESCRIPTION                |
|----------|-----------------------|----------|------------------------|----------|----------------------------|
| 26-1817  | TUNE-GANG VARIABLE    | 63-584   | 68M OHM                | 59688    | ANTENNA COIL ASSEMBLY      |
| 26-1818  | .05 MFD.              | R12      | TWO-SECTION CHANGEOVER | 59689    | OSCILLATOR COIL            |
| 26-1819  | .05 MFD.              | R13      | 1000 OHM               | 95-871   | 500V T.F. TRANSFORMER      |
| 26-1820  | .05 MFD.              | R14      | 500 OHM                | 95-872   | 250V T.F.                  |
| 26-1821  | 100 MFD. ELECTROLYTIC | R15      | 500 OHM WIREWOUND      | 85-292   | BAND SELECTOR SWITCH       |
| 26-1822  | 100 MFD. ELECTROLYTIC | R16      | 500 OHM WIREWOUND      | 59987    | 59987 TONE CONTROL (LEFT)  |
| 26-1823  | 100 MFD. ELECTROLYTIC | R17      | 500 OHM WIREWOUND      | 59988    | 59988 TONE CONTROL (RIGHT) |
| 26-1824  | 100 MFD. ELECTROLYTIC | R18      | 500 OHM WIREWOUND      | 85-171   | CHANGEOVER SWITCH          |
| 26-1825  | 100 MFD. ELECTROLYTIC | R19      | 500 OHM WIREWOUND      |          |                            |
| 26-1826  | 100 MFD. ELECTROLYTIC | RED      | 500 OHM WIREWOUND      |          |                            |
| 26-1827  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1828  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1829  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1830  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1831  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1832  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1833  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1834  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1835  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1836  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1837  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1838  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1839  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1840  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1841  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1842  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1843  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1844  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1845  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1846  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1847  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1848  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1849  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1850  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1851  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1852  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1853  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1854  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1855  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1856  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1857  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1858  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1859  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1860  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1861  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1862  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1863  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1864  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1865  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1866  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1867  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1868  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1869  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1870  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1871  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1872  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1873  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1874  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1875  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1876  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1877  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1878  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1879  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1880  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1881  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1882  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1883  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1884  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1885  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1886  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1887  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1888  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1889  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1890  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1891  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1892  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1893  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1894  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1895  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1896  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1897  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1898  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1899  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |
| 26-1900  | 100 MFD. ELECTROLYTIC |          |                        |          |                            |

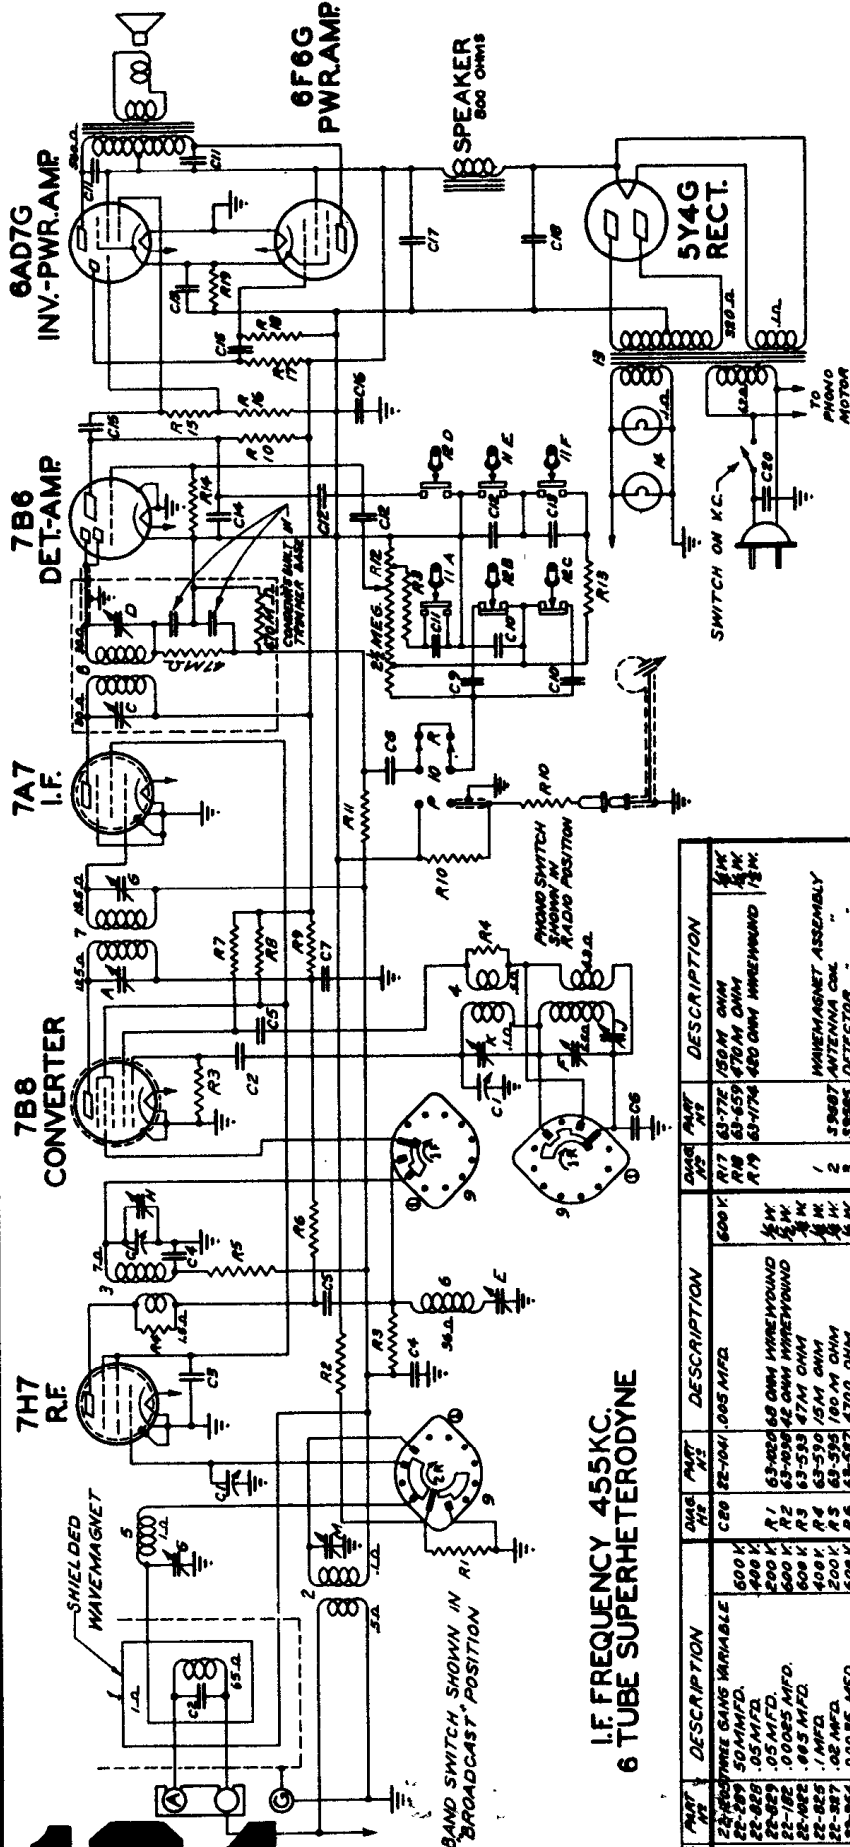

I.F. FREQUENCY 455KC.  
6 TUBE SUPERHETERODYNE

| DIAG. NO. | PART NO. | DESCRIPTION          | DIAG. NO. | PART NO. | DESCRIPTION                |
|-----------|----------|----------------------|-----------|----------|----------------------------|
| C1        | 22-100   | 22-100 GANG VARIABLE | R17       | 63-77E   | 150M OHM                   |
| C2        | 22-200   | 50M MFD.             | R18       | 63-65D   | 470M OHM                   |
| C3        | 22-820   | .05 MFD.             | R19       | 63-117K  | 450 OHM WIREWOUND          |
| C4        | 22-820   | .05 MFD.             | 1         | 3987     | WAVEMAGNET ASSEMBLY        |
| C5        | 22-182   | .0005 MFD.           | 2         | 3988     | ANTENNA COIL               |
| C6        | 22-182   | .0005 MFD.           | 3         | 3989     | DETECTOR                   |
| C7        | 22-825   | .1 MFD.              | 4         | 3989     | OSCILLATOR                 |
| C8        | 22-387   | .02 MFD.             | 5         | 3989     | LOOP LOADING COIL          |
| C9        | 22-354   | .0025 MFD.           | 6         | 3989     | WAVE TRAP COIL ASSEMBLY    |
| C10       | 22-470   | .0005 MFD.           | 7         | 3989     | 1/2 I.F. TRANSFORMER       |
| C11       | 22-229   | .005 MFD.            | 8         | 3989     | BAND SELECTOR SWITCH       |
| C12       | 22-445   | .004 MFD.            | 9         | 3989     | PHONO-RADIO SWITCH         |
| C13       | 22-492   | .002 MFD.            | 10        | 3989     | T.C. SWITCH ASSEM. (LEFT)  |
| C14       | 22-854   | .0005 MFD.           | 11        | 3989     | T.C. SWITCH ASSEM. (RIGHT) |
| C15       | 22-196   | .1 MFD.              | 12        | 3989     | PWR. TRANS. 117V. 50-60    |
| C16       | 22-827   | .1 MFD.              | 13        | 3989     |                            |
| C17       | 22-1187  | 50 MFD. ELECTROLYTIC |           |          |                            |
| C18       | 22-1187  | 50 MFD.              |           |          |                            |
| C19       | 22-1187  | 50 MFD.              |           |          |                            |
| R1        | 63-400   | 68 OHM WIREWOUND     |           |          |                            |
| R2        | 63-400   | 42 OHM WIREWOUND     |           |          |                            |
| R3        | 63-533   | 47M OHM              |           |          |                            |
| R4        | 63-530   | 15M OHM              |           |          |                            |
| R5        | 63-535   | 100M OHM             |           |          |                            |
| R6        | 63-507   | 4700 OHM             |           |          |                            |
| R7        | 63-507   | 22M OHM              |           |          |                            |
| R8        | 63-5184  | 47M OHM              |           |          |                            |
| R9        | 63-505   | 1000 OHM             |           |          |                            |
| R10       | 63-571   | 2200M OHM            |           |          |                            |
| R11       | 63-519   | 1.5 MEG OHM          |           |          |                            |
| R12       | 63-519   | 1.5 MEG OHM          |           |          |                            |
| R13       | 63-574   | 68M OHM              |           |          |                            |
| R14       | 63-976   | 15 ARS OHM           |           |          |                            |
| R15       | 63-657   | 330M OHM             |           |          |                            |
| R16       | 63-652   | 120M OHM             |           |          |                            |
| R17       | 63-77E   | 150M OHM             |           |          |                            |
| R18       | 63-65D   | 470M OHM             |           |          |                            |
| R19       | 63-117K  | 450 OHM WIREWOUND    |           |          |                            |

Models 7S681-7S682-7S685

Chassis No. 7B02 Phono.

All voltages measured with a 20,000 ohm per volt meter from chassis to socket contact indicated.

All voltages are positive D.C. unless marked otherwise.

Volume control full on.

Line voltage 117 A.C.

Power consumption 80+30 watts.


Power output 8.4 watts.


Tuning Range 540 Kc. to 1620 Kc.

5400 Kc.—18300 Kc.


Stage Gains Bc. and I.F. Ant. to R.F. grid 7.1X at 1000 Kc. R.F. grid to conv. grid 5.6X at 1000 Kc. Conv. grid to I.F. grid 73X at 455 Kc. Overall audio 1600X at 1 watt 400 cycles.

Zenith Radio

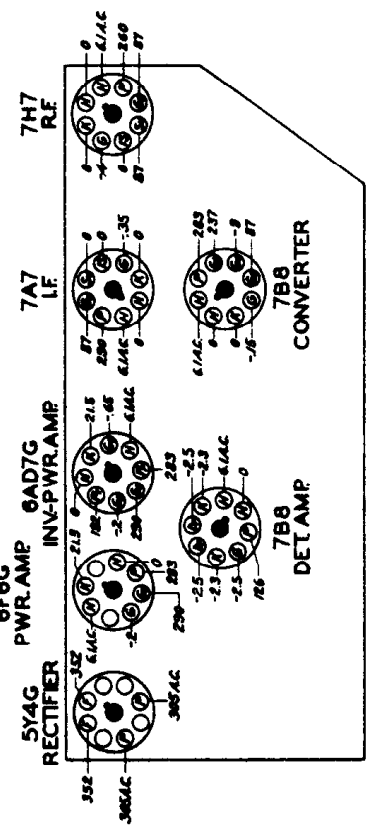

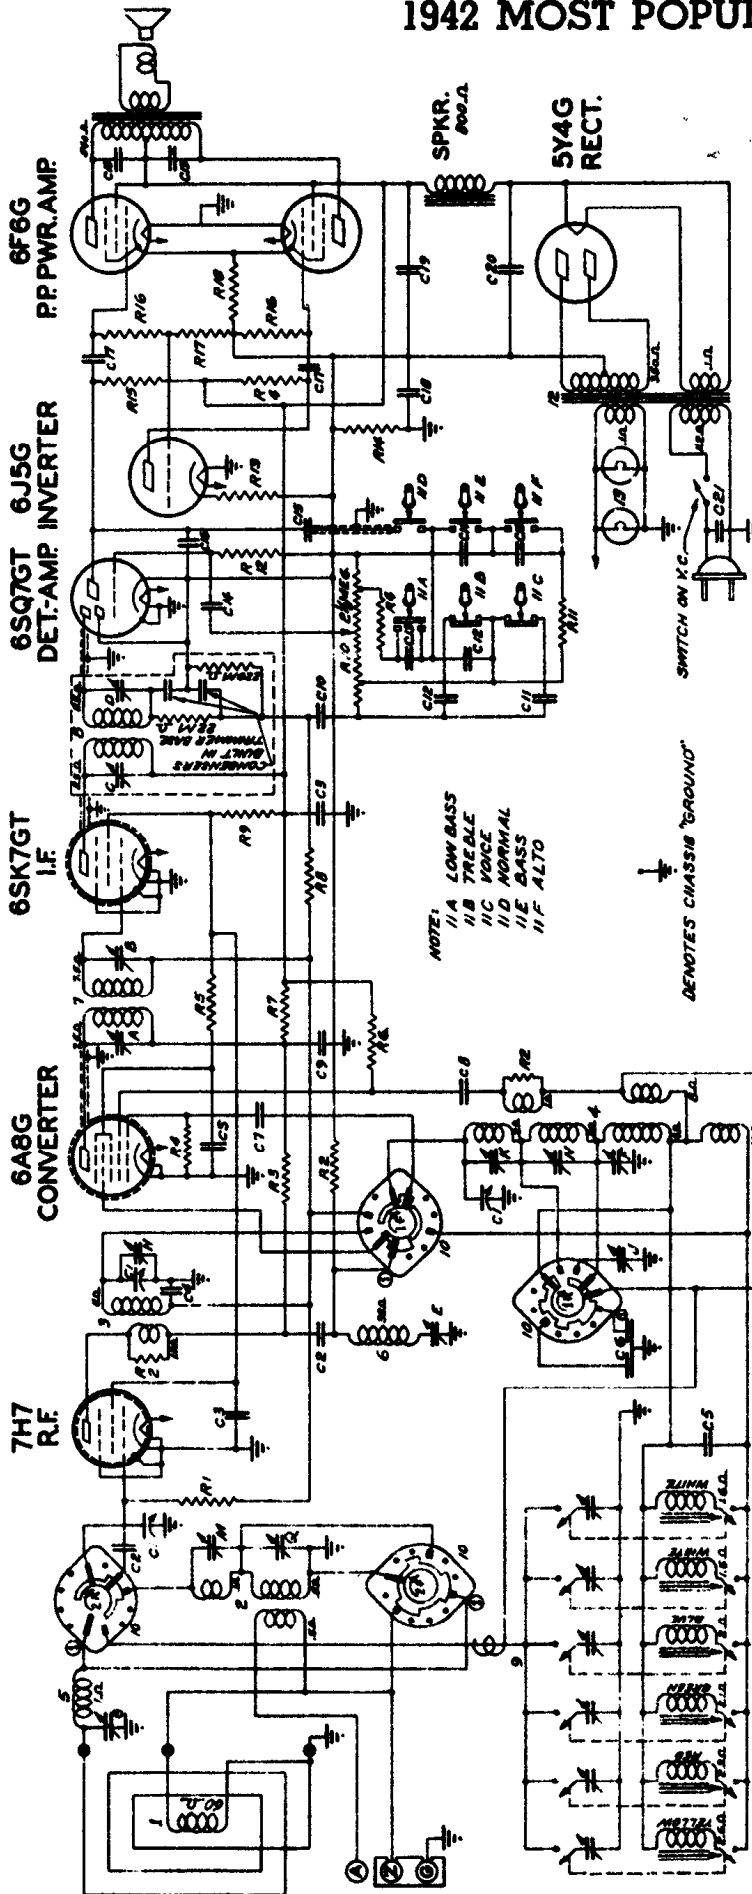

Zenith Radio  
I.F. FREQUENCY 455 KC.  
8 TUBE SUPERHETERODYNE

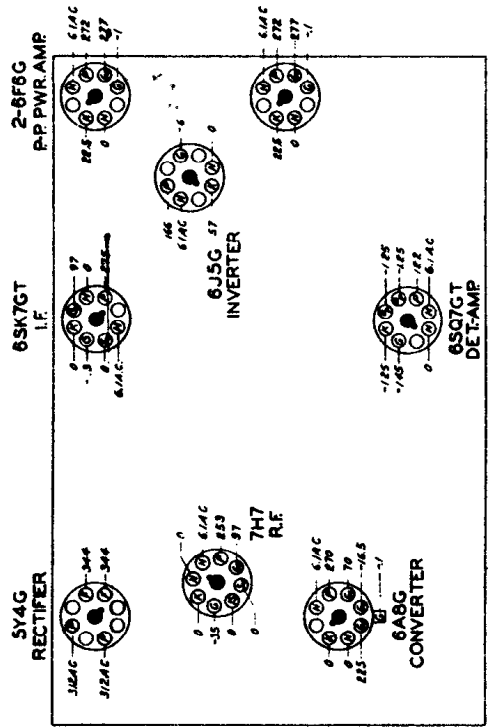

SOCKET VOLTAGES—BOTTOM VIEW

| COMPONENT | PART NO. | DESCRIPTION        | RESISTANCE | INDUCTANCE | DESCRIPTION | PART NO. | DESCRIPTION |                   |
|-----------|----------|--------------------|------------|------------|-------------|----------|-------------|-------------------|
| C1        | 22-218   | 7MFD 60V           | 600K       |            |             | R1       | 63-600      | 2.2 MEG OHM       |
| C2        | RE-716   | 1000 MFD           | 400K       |            |             | R2       | 63-570      | 15M OHM           |
| C3        | RE-829   | 100 MFD            | 200K       |            |             | R3       | 63-571      | 4700 OHM          |
| C4        | RE-827   | 10 MFD             | 100K       |            |             | R4       | 63-573      | 47M OHM           |
| C5        | RE-860   | COMPENSATING COND. | 600K       |            |             | R5       | 63-609      | 18M OHM           |
| C6        | RE-950   | DUAL PADDER        | 600K       |            |             | R6       | 63-609      | 18M OHM           |
| C7        | RE-82    | 1000 MFD           | 600K       |            |             | R7       | 63-571      | 47M OHM           |
| C8        | RE-82    | 1000 MFD           | 600K       |            |             | R8       | 63-571      | 47M OHM           |
| C9        | RE-82    | 1000 MFD           | 600K       |            |             | R9       | 63-571      | 47M OHM           |
| C10       | RE-82    | 1000 MFD           | 600K       |            |             | R10      | 63-571      | 47M OHM           |
| C11       | RE-82    | 1000 MFD           | 600K       |            |             | R11      | 63-714      | 68M OHM           |
| C12       | RE-82    | 1000 MFD           | 600K       |            |             | R12      | 63-576      | 15 MEG OHM        |
| C13       | RE-82    | 1000 MFD           | 600K       |            |             | R13      | 63-575      | 2200 OHM          |
| C14       | RE-82    | 1000 MFD           | 600K       |            |             | R14      | 63-100      | 52 OHM WIRE WOUND |
| C15       | RE-82    | 1000 MFD           | 600K       |            |             | R15      | 63-276      | 820M OHM          |
| C16       | RE-82    | 1000 MFD           | 600K       |            |             | R16      | 63-651      | 530M OHM          |
| C17       | RE-717   | 1000 MFD           | 600K       |            |             |          |             |                   |
| C18       | RE-118   | 1000 MFD           | 600K       |            |             |          |             |                   |
| C19       | RE-118   | 1000 MFD           | 600K       |            |             |          |             |                   |
| C20       | RE-118   | 1000 MFD           | 600K       |            |             |          |             |                   |
| L1        | RE-716   | 300 OHM            |            | 100 μH     |             |          |             |                   |
| L2        | RE-716   | 300 OHM            |            | 100 μH     |             |          |             |                   |
| L3        | RE-716   | 300 OHM            |            | 100 μH     |             |          |             |                   |
| L4        | RE-716   | 300 OHM            |            | 100 μH     |             |          |             |                   |
| L5        | RE-716   | 300 OHM            |            | 100 μH     |             |          |             |                   |
| L6        | RE-716   | 300 OHM            |            | 100 μH     |             |          |             |                   |
| L7        | RE-716   | 300 OHM            |            | 100 μH     |             |          |             |                   |
| L8        | RE-716   | 300 OHM            |            | 100 μH     |             |          |             |                   |
| L9        | RE-716   | 300 OHM            |            | 100 μH     |             |          |             |                   |
| L10       | RE-716   | 300 OHM            |            | 100 μH     |             |          |             |                   |

Models 8S647-8S661

Chassis No. 8B01




# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS


## Models 10S669-10S690

Zenith Radio

Chassis No. 10B1-10B2

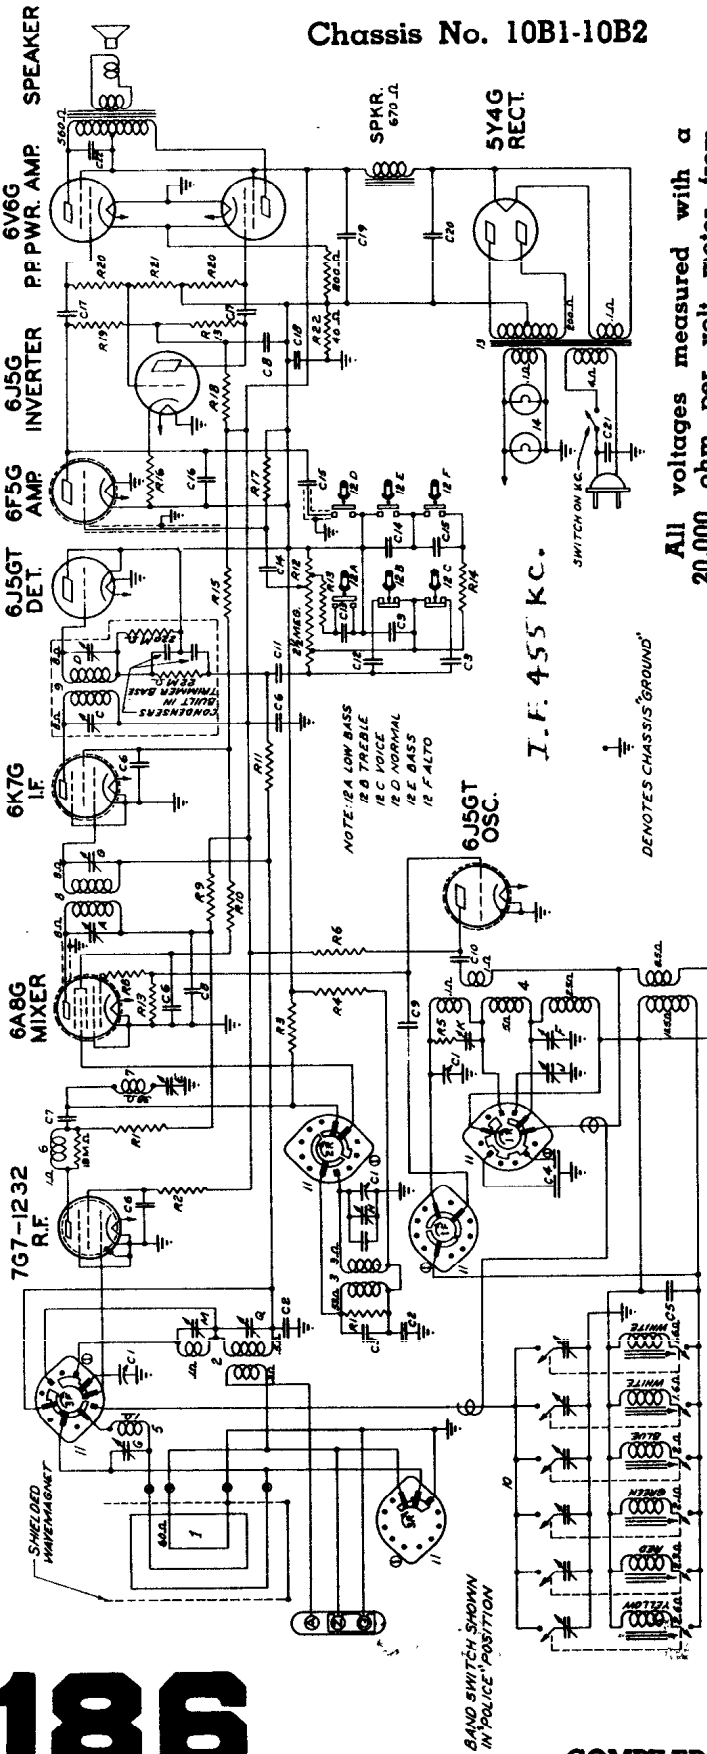


All voltages measured with a 20,000 ohm per volt meter from chassis to socket contact indicated. All voltages are positive D.C. unless marked otherwise. Volume control full on.

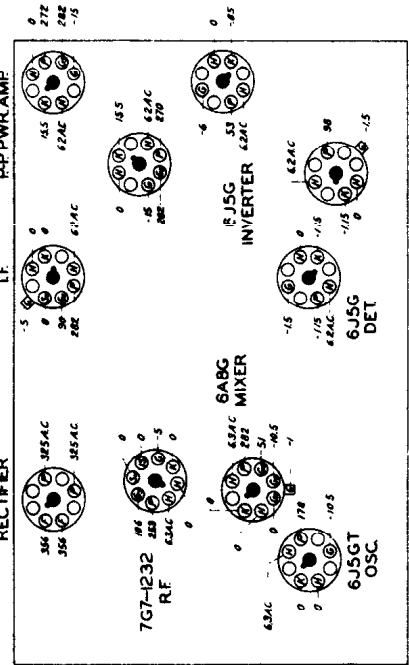


SOCKET VOLTAGES—BOTTOM VIEW

| QMT. NO. | PART NO. | DESCRIPTION               |
|----------|----------|---------------------------|
| 1        | 63-648   | 47M OHM                   |
| 2        | 53757    | ANTENNA COIL              |
| 3        | 53456    | DETECTION COIL            |
| 4        | 53529    | LOOP LOADING COIL         |
| 5        | 53622    | COIL & RES. ASSEMBLY      |
| 6        | 53622    | MINI-TRAP                 |
| 7        | 53622    | 2M I.F. TRANSFORMER       |
| 8        | 53956    | AUTOMATIC TUNING ASSEMBLY |
| 9        | 53956    | BAND SELECTOR SWITCH      |
| 10       | 53956    | TONE CONTROL              |
| 11       | 53956    | DIAL LIGHT                |
| 12       | 53956    | 4.5 K. RTA.               |
| 13       | 53956    | 4.5 K. RTA.               |
| 14       | 53956    | 4.5 K. RTA.               |
| 15       | 53956    | 4.5 K. RTA.               |
| 16       | 53956    | 4.5 K. RTA.               |
| 17       | 53956    | 4.5 K. RTA.               |
| 18       | 53956    | 4.5 K. RTA.               |
| 19       | 53956    | 4.5 K. RTA.               |
| 20       | 53956    | 4.5 K. RTA.               |
| 21       | 53956    | 4.5 K. RTA.               |
| 22       | 53956    | 4.5 K. RTA.               |
| 23       | 53956    | 4.5 K. RTA.               |
| 24       | 53956    | 4.5 K. RTA.               |
| 25       | 53956    | 4.5 K. RTA.               |
| 26       | 53956    | 4.5 K. RTA.               |
| 27       | 53956    | 4.5 K. RTA.               |
| 28       | 53956    | 4.5 K. RTA.               |
| 29       | 53956    | 4.5 K. RTA.               |
| 30       | 53956    | 4.5 K. RTA.               |
| 31       | 53956    | 4.5 K. RTA.               |
| 32       | 53956    | 4.5 K. RTA.               |
| 33       | 53956    | 4.5 K. RTA.               |
| 34       | 53956    | 4.5 K. RTA.               |
| 35       | 53956    | 4.5 K. RTA.               |
| 36       | 53956    | 4.5 K. RTA.               |
| 37       | 53956    | 4.5 K. RTA.               |
| 38       | 53956    | 4.5 K. RTA.               |
| 39       | 53956    | 4.5 K. RTA.               |
| 40       | 53956    | 4.5 K. RTA.               |
| 41       | 53956    | 4.5 K. RTA.               |
| 42       | 53956    | 4.5 K. RTA.               |
| 43       | 53956    | 4.5 K. RTA.               |
| 44       | 53956    | 4.5 K. RTA.               |
| 45       | 53956    | 4.5 K. RTA.               |
| 46       | 53956    | 4.5 K. RTA.               |
| 47       | 53956    | 4.5 K. RTA.               |
| 48       | 53956    | 4.5 K. RTA.               |
| 49       | 53956    | 4.5 K. RTA.               |
| 50       | 53956    | 4.5 K. RTA.               |
| 51       | 53956    | 4.5 K. RTA.               |
| 52       | 53956    | 4.5 K. RTA.               |
| 53       | 53956    | 4.5 K. RTA.               |
| 54       | 53956    | 4.5 K. RTA.               |
| 55       | 53956    | 4.5 K. RTA.               |
| 56       | 53956    | 4.5 K. RTA.               |
| 57       | 53956    | 4.5 K. RTA.               |
| 58       | 53956    | 4.5 K. RTA.               |
| 59       | 53956    | 4.5 K. RTA.               |
| 60       | 53956    | 4.5 K. RTA.               |
| 61       | 53956    | 4.5 K. RTA.               |
| 62       | 53956    | 4.5 K. RTA.               |
| 63       | 53956    | 4.5 K. RTA.               |
| 64       | 53956    | 4.5 K. RTA.               |
| 65       | 53956    | 4.5 K. RTA.               |
| 66       | 53956    | 4.5 K. RTA.               |
| 67       | 53956    | 4.5 K. RTA.               |
| 68       | 53956    | 4.5 K. RTA.               |
| 69       | 53956    | 4.5 K. RTA.               |
| 70       | 53956    | 4.5 K. RTA.               |
| 71       | 53956    | 4.5 K. RTA.               |
| 72       | 53956    | 4.5 K. RTA.               |
| 73       | 53956    | 4.5 K. RTA.               |
| 74       | 53956    | 4.5 K. RTA.               |
| 75       | 53956    | 4.5 K. RTA.               |
| 76       | 53956    | 4.5 K. RTA.               |
| 77       | 53956    | 4.5 K. RTA.               |
| 78       | 53956    | 4.5 K. RTA.               |
| 79       | 53956    | 4.5 K. RTA.               |
| 80       | 53956    | 4.5 K. RTA.               |
| 81       | 53956    | 4.5 K. RTA.               |
| 82       | 53956    | 4.5 K. RTA.               |
| 83       | 53956    | 4.5 K. RTA.               |
| 84       | 53956    | 4.5 K. RTA.               |
| 85       | 53956    | 4.5 K. RTA.               |
| 86       | 53956    | 4.5 K. RTA.               |
| 87       | 53956    | 4.5 K. RTA.               |
| 88       | 53956    | 4.5 K. RTA.               |
| 89       | 53956    | 4.5 K. RTA.               |
| 90       | 53956    | 4.5 K. RTA.               |
| 91       | 53956    | 4.5 K. RTA.               |
| 92       | 53956    | 4.5 K. RTA.               |
| 93       | 53956    | 4.5 K. RTA.               |
| 94       | 53956    | 4.5 K. RTA.               |
| 95       | 53956    | 4.5 K. RTA.               |
| 96       | 53956    | 4.5 K. RTA.               |
| 97       | 53956    | 4.5 K. RTA.               |
| 98       | 53956    | 4.5 K. RTA.               |
| 99       | 53956    | 4.5 K. RTA.               |
| 100      | 53956    | 4.5 K. RTA.               |

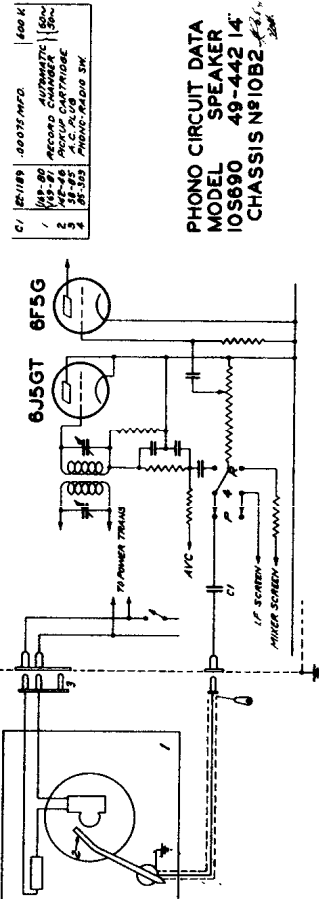


# MOST POPULAR SERVICE DIAGRAMS

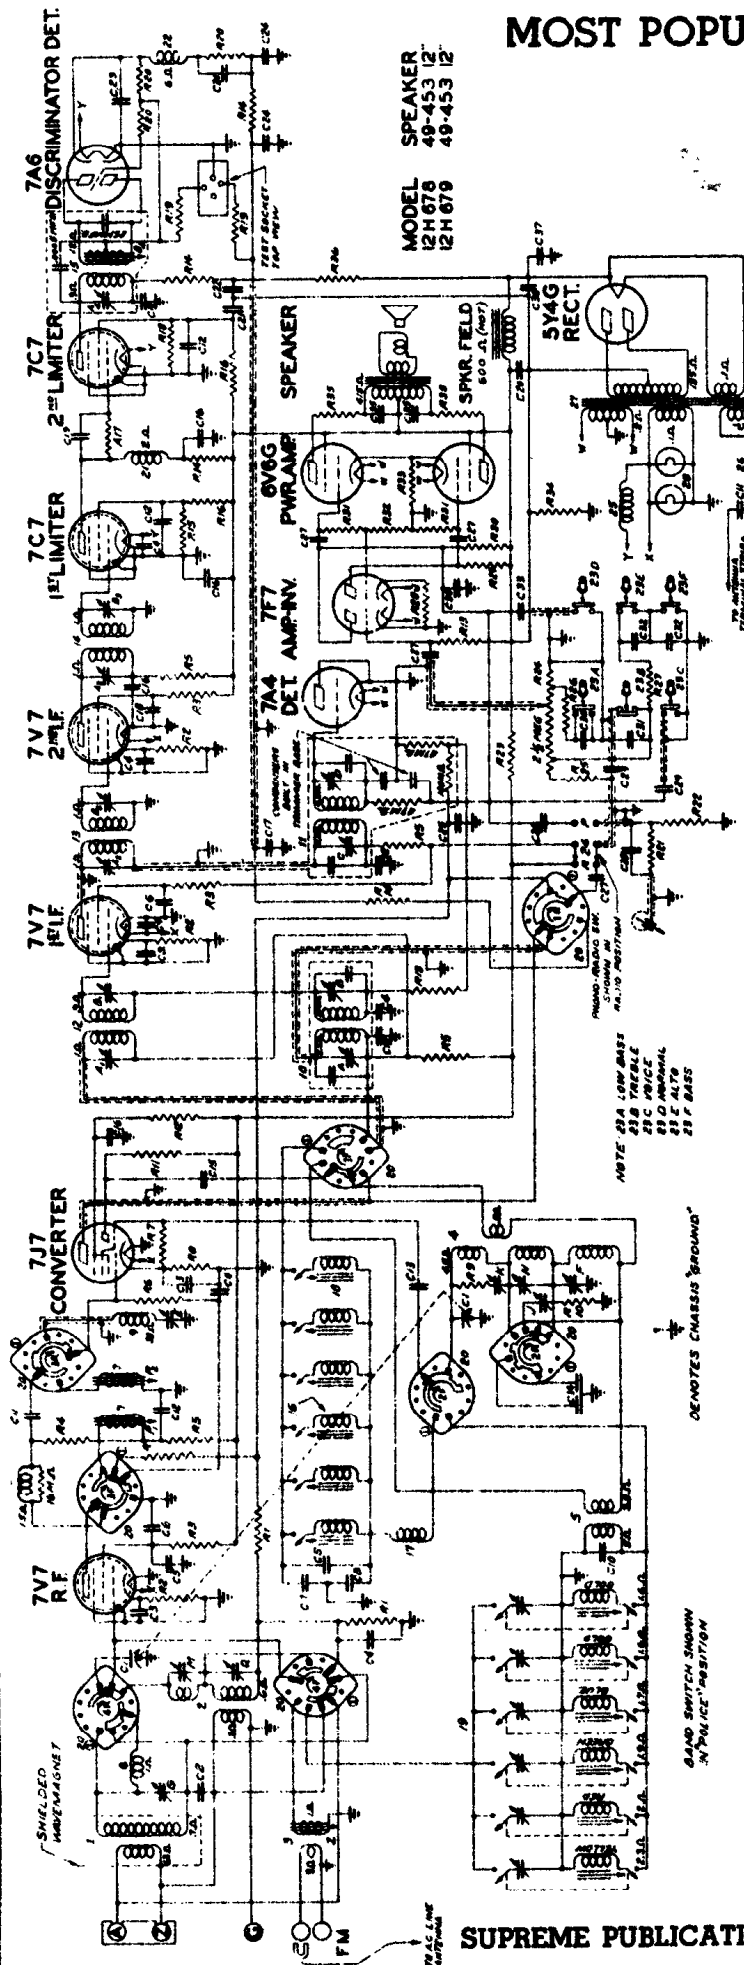

MODEL 12H678  
12H679  
SPEAKER 49-453 12  
49-453 12

| PART NO. | DESCRIPTION | QTY | DESCRIPTION | QTY | DESCRIPTION | QTY | DESCRIPTION |
|----------|-------------|-----|-------------|-----|-------------|-----|-------------|
| C1       | 500K        | 1   | 500K        | 1   | 500K        | 1   | 500K        |
| C2       | 100K        | 1   | 100K        | 1   | 100K        | 1   | 100K        |
| C3       | 50K         | 1   | 50K         | 1   | 50K         | 1   | 50K         |
| C4       | 25K         | 1   | 25K         | 1   | 25K         | 1   | 25K         |
| C5       | 10K         | 1   | 10K         | 1   | 10K         | 1   | 10K         |
| C6       | 5K          | 1   | 5K          | 1   | 5K          | 1   | 5K          |
| C7       | 2.5K        | 1   | 2.5K        | 1   | 2.5K        | 1   | 2.5K        |
| C8       | 1.5K        | 1   | 1.5K        | 1   | 1.5K        | 1   | 1.5K        |
| C9       | 1K          | 1   | 1K          | 1   | 1K          | 1   | 1K          |
| C10      | 500         | 1   | 500         | 1   | 500         | 1   | 500         |
| C11      | 250         | 1   | 250         | 1   | 250         | 1   | 250         |
| C12      | 150         | 1   | 150         | 1   | 150         | 1   | 150         |
| C13      | 100         | 1   | 100         | 1   | 100         | 1   | 100         |
| C14      | 50          | 1   | 50          | 1   | 50          | 1   | 50          |
| C15      | 25          | 1   | 25          | 1   | 25          | 1   | 25          |
| C16      | 15          | 1   | 15          | 1   | 15          | 1   | 15          |
| C17      | 10          | 1   | 10          | 1   | 10          | 1   | 10          |
| C18      | 5           | 1   | 5           | 1   | 5           | 1   | 5           |
| C19      | 2.5         | 1   | 2.5         | 1   | 2.5         | 1   | 2.5         |
| C20      | 1.5         | 1   | 1.5         | 1   | 1.5         | 1   | 1.5         |
| C21      | 1K          | 1   | 1K          | 1   | 1K          | 1   | 1K          |
| C22      | 500         | 1   | 500         | 1   | 500         | 1   | 500         |
| C23      | 250         | 1   | 250         | 1   | 250         | 1   | 250         |
| C24      | 150         | 1   | 150         | 1   | 150         | 1   | 150         |
| C25      | 100         | 1   | 100         | 1   | 100         | 1   | 100         |
| C26      | 50          | 1   | 50          | 1   | 50          | 1   | 50          |
| C27      | 25          | 1   | 25          | 1   | 25          | 1   | 25          |
| C28      | 15          | 1   | 15          | 1   | 15          | 1   | 15          |
| C29      | 10          | 1   | 10          | 1   | 10          | 1   | 10          |
| C30      | 5           | 1   | 5           | 1   | 5           | 1   | 5           |
| C31      | 2.5         | 1   | 2.5         | 1   | 2.5         | 1   | 2.5         |
| C32      | 1.5         | 1   | 1.5         | 1   | 1.5         | 1   | 1.5         |
| C33      | 1K          | 1   | 1K          | 1   | 1K          | 1   | 1K          |
| C34      | 500         | 1   | 500         | 1   | 500         | 1   | 500         |
| C35      | 250         | 1   | 250         | 1   | 250         | 1   | 250         |
| C36      | 150         | 1   | 150         | 1   | 150         | 1   | 150         |
| C37      | 100         | 1   | 100         | 1   | 100         | 1   | 100         |
| C38      | 50          | 1   | 50          | 1   | 50          | 1   | 50          |
| C39      | 25          | 1   | 25          | 1   | 25          | 1   | 25          |
| C40      | 15          | 1   | 15          | 1   | 15          | 1   | 15          |
| C41      | 10          | 1   | 10          | 1   | 10          | 1   | 10          |
| C42      | 5           | 1   | 5           | 1   | 5           | 1   | 5           |
| C43      | 2.5         | 1   | 2.5         | 1   | 2.5         | 1   | 2.5         |
| C44      | 1.5         | 1   | 1.5         | 1   | 1.5         | 1   | 1.5         |
| C45      | 1K          | 1   | 1K          | 1   | 1K          | 1   | 1K          |
| C46      | 500         | 1   | 500         | 1   | 500         | 1   | 500         |
| C47      | 250         | 1   | 250         | 1   | 250         | 1   | 250         |
| C48      | 150         | 1   | 150         | 1   | 150         | 1   | 150         |
| C49      | 100         | 1   | 100         | 1   | 100         | 1   | 100         |
| C50      | 50          | 1   | 50          | 1   | 50          | 1   | 50          |
| C51      | 25          | 1   | 25          | 1   | 25          | 1   | 25          |
| C52      | 15          | 1   | 15          | 1   | 15          | 1   | 15          |
| C53      | 10          | 1   | 10          | 1   | 10          | 1   | 10          |
| C54      | 5           | 1   | 5           | 1   | 5           | 1   | 5           |
| C55      | 2.5         | 1   | 2.5         | 1   | 2.5         | 1   | 2.5         |
| C56      | 1.5         | 1   | 1.5         | 1   | 1.5         | 1   | 1.5         |
| C57      | 1K          | 1   | 1K          | 1   | 1K          | 1   | 1K          |
| C58      | 500         | 1   | 500         | 1   | 500         | 1   | 500         |
| C59      | 250         | 1   | 250         | 1   | 250         | 1   | 250         |
| C60      | 150         | 1   | 150         | 1   | 150         | 1   | 150         |
| C61      | 100         | 1   | 100         | 1   | 100         | 1   | 100         |
| C62      | 50          | 1   | 50          | 1   | 50          | 1   | 50          |
| C63      | 25          | 1   | 25          | 1   | 25          | 1   | 25          |
| C64      | 15          | 1   | 15          | 1   | 15          | 1   | 15          |
| C65      | 10          | 1   | 10          | 1   | 10          | 1   | 10          |
| C66      | 5           | 1   | 5           | 1   | 5           | 1   | 5           |
| C67      | 2.5         | 1   | 2.5         | 1   | 2.5         | 1   | 2.5         |
| C68      | 1.5         | 1   | 1.5         | 1   | 1.5         | 1   | 1.5         |
| C69      | 1K          | 1   | 1K          | 1   | 1K          | 1   | 1K          |
| C70      | 500         | 1   | 500         | 1   | 500         | 1   | 500         |
| C71      | 250         | 1   | 250         | 1   | 250         | 1   | 250         |
| C72      | 150         | 1   | 150         | 1   | 150         | 1   | 150         |
| C73      | 100         | 1   | 100         | 1   | 100         | 1   | 100         |
| C74      | 50          | 1   | 50          | 1   | 50          | 1   | 50          |
| C75      | 25          | 1   | 25          | 1   | 25          | 1   | 25          |
| C76      | 15          | 1   | 15          | 1   | 15          | 1   | 15          |
| C77      | 10          | 1   | 10          | 1   | 10          | 1   | 10          |
| C78      | 5           | 1   | 5           | 1   | 5           | 1   | 5           |
| C79      | 2.5         | 1   | 2.5         | 1   | 2.5         | 1   | 2.5         |
| C80      | 1.5         | 1   | 1.5         | 1   | 1.5         | 1   | 1.5         |
| C81      | 1K          | 1   | 1K          | 1   | 1K          | 1   | 1K          |
| C82      | 500         | 1   | 500         | 1   | 500         | 1   | 500         |
| C83      | 250         | 1   | 250         | 1   | 250         | 1   | 250         |
| C84      | 150         | 1   | 150         | 1   | 150         | 1   | 150         |
| C85      | 100         | 1   | 100         | 1   | 100         | 1   | 100         |
| C86      | 50          | 1   | 50          | 1   | 50          | 1   | 50          |
| C87      | 25          | 1   | 25          | 1   | 25          | 1   | 25          |
| C88      | 15          | 1   | 15          | 1   | 15          | 1   | 15          |
| C89      | 10          | 1   | 10          | 1   | 10          | 1   | 10          |
| C90      | 5           | 1   | 5           | 1   | 5           | 1   | 5           |
| C91      | 2.5         | 1   | 2.5         | 1   | 2.5         | 1   | 2.5         |
| C92      | 1.5         | 1   | 1.5         | 1   | 1.5         | 1   | 1.5         |
| C93      | 1K          | 1   | 1K          | 1   | 1K          | 1   | 1K          |
| C94      | 500         | 1   | 500         | 1   | 500         | 1   | 500         |
| C95      | 250         | 1   | 250         | 1   | 250         | 1   | 250         |
| C96      | 150         | 1   | 150         | 1   | 150         | 1   | 150         |
| C97      | 100         | 1   | 100         | 1   | 100         | 1   | 100         |
| C98      | 50          | 1   | 50          | 1   | 50          | 1   | 50          |
| C99      | 25          | 1   | 25          | 1   | 25          | 1   | 25          |
| C100     | 15          | 1   | 15          | 1   | 15          | 1   | 15          |

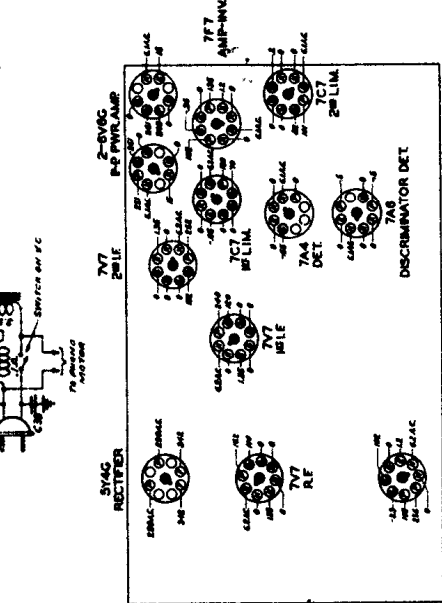

SOCKET VOLTAGES—BOTTOM VIEW

All voltages measured with a 20,000 ohm per volt meter from chassis to socket contact indicated.

AMP. MOD. IF. FREQUENCY 455 KC.  
FREQ. MOD. IF. FREQUENCY 8.3 MC.  
12 TUBE SUPERHETERODYNE  
CHASSIS NO. 12A6 - A.C. - 4 BAND  
ZENITH RADIO CORPORATION

Zenith Radio  
**Models 12H678-12H679**  
Chassis No. 12A6

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

## ALIGNMENT PROCEDURE

| Operation | Connect Oscillator to                                | Dummy Antenna | Input Signal Frequency | Band      | Set Dial At | Trimmers                        | Purpose   |
|-----------|--|---------------|------------------------|-----------|-------------|---------------------------------|---|
| 1         | Con. Grid  | 0.5 mfd.      | 455 Kc.                | BC        | 600 Kc.     | A, B, C, D                      | Align I.F.  |
| 2         | R.F. Grid  | 0.5 mfd.      | 455 Kc.                | BC        | 600 Kc.     | E                               | Adjust for minimum 455 Kc. signal                   |
| 3         | Ant. Z and G   | 400 ohm       | 18 Mc.                 | BW        | 18 Mc.      | K                               | Scale SW Osc. at 18 meg.                            |
| 4         | "  | "             | 18 Mc.                 | BW        | 16 Mc.      | M                               | Align SW antenna                                    |
| 5         | "  | "             | 5 Mc.                  | Med.      | 5.0 Mc.     | N                               | Scale med. band osc. at 5. meg.                     |
| 6         | "  | "             | 4.5 Mc.                | Med.      | 4.5 Mc.     | Q                               | Align med. band antenna                             |
| 7         | One turn loop made with generator lead or Radex loop | ---           | 1600 Kc.               | BC        | 1600 Kc.    | F                               | Set BC Osc. to scale at 1600 Kc.                    |
| 8         |  | ---           | 1400 Kc.               | BC        | 1400 Kc.    | G                               | Align broadcast loop                                |
| 9         |  | ---           | 600 Kc.                | BC        | 600 Kc.     | J                               | Rock gang to track BC padder                        |
| 10        | 7V7 2nd I.F. Grid                                    | 0.5 mfd.      | 8.3 Mc.                | Man. F.M. | 42.5 Mc.    | A <sub>4</sub>                  | Align for max. deflection across 1/2 discrim. load  |
| 11        | "  | "             | "                      | "         | "           | B <sub>4</sub>                  | Align for zero deflection across full discrim. load |
| 12        | "  | "             | "                      | "         | "           | A <sub>3</sub> - B <sub>3</sub> | Align for max. deflection across 1/2 discrim. load  |
| 13        | 7V7 1st I.F. Grid                                    | "             | "                      | "         | "           | A <sub>2</sub> - B <sub>2</sub> | "   |
| 14        | Converter Grid                                       | "             | "                      | "         | "           | A <sub>1</sub> - B <sub>1</sub> | "   |
| 15        | F.M. Ant. Terminal                                   | 100 ohm       | 46 Mc.                 | "         | 46 Mc.      | Adj. cam on gang to scale osc.  | Align for zero deflection across full discrim. load |
| 16        | "  | "             | 42.5 Mc.               | "         | 42.5 Mc.    | P <sub>1</sub>                  | Align for max. deflection across 1/2 discrim. load  |
| 17        | "  | "             | 49 Mc.                 | "         | 49 Mc.      | P <sub>2</sub>                  | "   |
| 18        | "  | "             | 46 Mc.                 | "         | 46 Mc.      | Z                               | "   |

## Models 12H678-12H679



Chassis No. 12A6

Stage Gains  
Bc. and I.F.


Ant. to R.F. grid 6.5× at 1000 Kc.  
R.F. grid to conv. grid 28.1× at 1000 Kc.

Conv. grid to I.F. grid 265× at 455 Kc.

Overall audio 807× at 1 watt, 400 cycles.

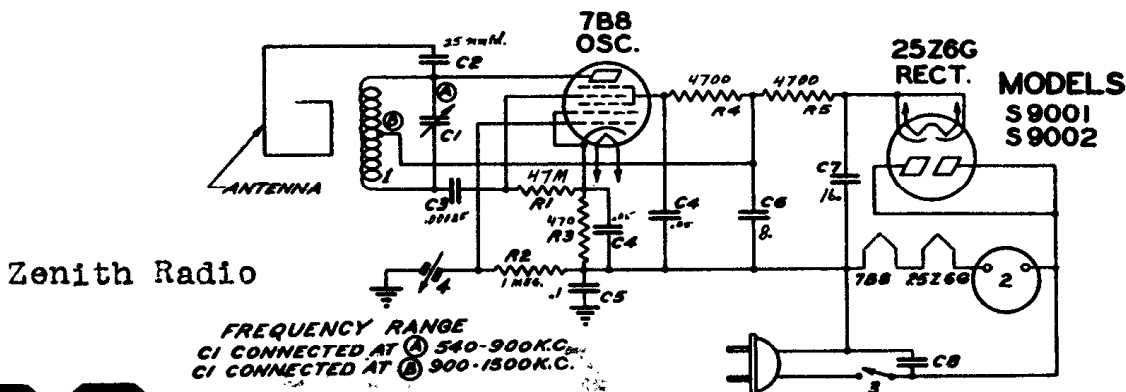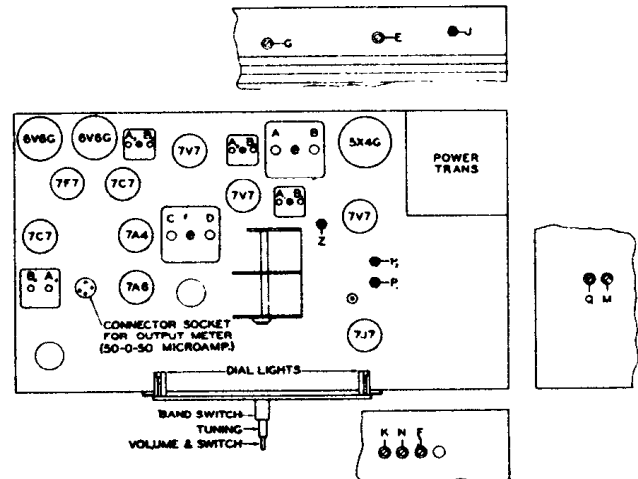

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

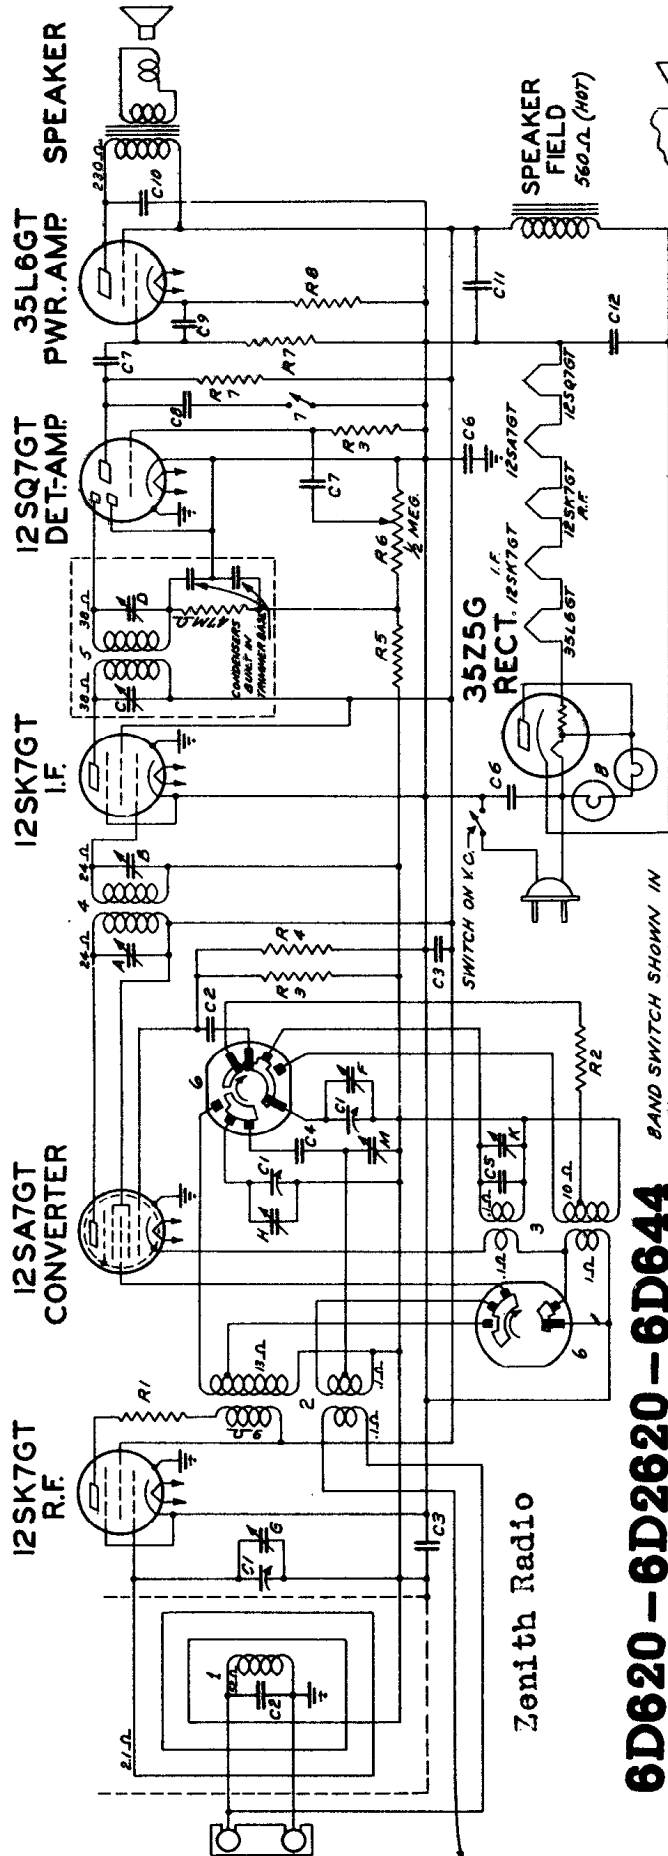


Zenith Radio

## 6D620 - 6D2620 - 6D644


Chassis No. 6B14

BAND SWITCH SHOWN IN SHORTWAVE POSITION.

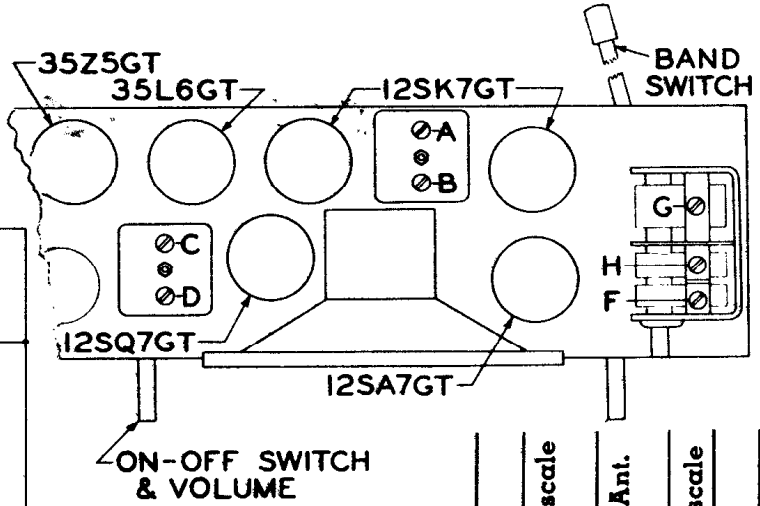

| DWG. NO. | PART NO. | DESCRIPTION          | DWG. NO. | PART NO. | DESCRIPTION       | DWG. NO. | PART NO. | DESCRIPTION                                       |
|----------|----------|----------------------|----------|----------|-------------------|----------|----------|---|
| C1       | 22-1268  | THREE GANS VARIABLE  | R2       | 63-579   | 220 OHM           | 7        | 85-257   | 100-90 TONE CONTROL SWITCH                        |
| C2       | 22-289   | 50 MFD.              | R3       | 63-976   | 15 MEGOHM         | B        |          | DIAL LAMP 32 V. 17A.                              |
| C3       | 22-829   | .05 MFD.             | R4       | 63-599   | 10 M OHM          | A        |          | 1ST I.F. TRANS. PRI.                              |
| C4       | 22-300   | .0005 MFD.           | R5       | 63-600   | 2.2 MEGOHM        | B        |          | 2ND I.F. " PRI.                                   |
| C5       | 22-1279  | 40 MFD. COMP.        | R6       | 63-1238  | VOLUME CONTROL    | C        |          | 2ND I.F. " SEC.                                   |
| C6       | 22-1071  | .05 MFD.             | R7       | 63-577   | 470 M OHM         | D        |          | BROADCAST OSC. (ON GANG)                          |
| C7       | 22-243   | .01 MFD.             | R8       | 63-1237  | 150 OHM WIREWOUND | F        |          | BROADCAST ANT. (ON GANG)                          |
| C8       | 22-492   | .002 MFD.            |          |          |                   | G        |          | SHORTWAVE ANT. (ON GANG)                          |
| C9       | 22-716   | .0005 MFD.           |          |          |                   | H        |          | SHORTWAVE OSC. (SEE WIRE)                         |
| C10      | 22-1049  | 50 MFD. ELECTROLYTIC |          |          |                   | K        |          | SHORTWAVE ANT. (SEE WIRE)                         |
| C11      | 22-1280  | 50 MFD.              |          |          |                   | M        |          | NOTE: TRIMMERS K & M ARE MOUNTED ON STRIP 25-1273 |
| R1       | 63-1208  | 8200 OHM             |          |          |                   |          |          |   |

| Operation | Connect Oscillator to                          | Dummy Antenna | Signal Frequency | Band | Set Dial at | Trimmers   | Purpose                 |
|-----------|--|---------------|------------------|------|-------------|------------|-------------------------|
| 1         | Conv. Grid                                     | .5 mfd.       | 455 Kc.          | B.C. | 600 Kc.     | A, B, C, D | Align I.F.              |
| 2         | Single Turn Loop Loosely Coupled to Wavemagnet | —             | 1400 Kc.         | B.C. | 1400 Kc.    | F          | Set oscillator to scale |
| 3         | Coupled to Wavemagnet                          | —             | 1400 Kc.         | B.C. | 1400 Kc.    | H & G      | Align R.F. and Ant.     |
| 4         | Ant.-Gnd.                                      | 400 ohms      | 12 Mc.           | S.W. | 12 Mc.      | K          | Set os-illator to scale |
| 5         | Ant.-Gnd.                                      | 400 ohms      | 12 Mc.           | S.W. | 12 Mc.      | M          | Align Ant.              |

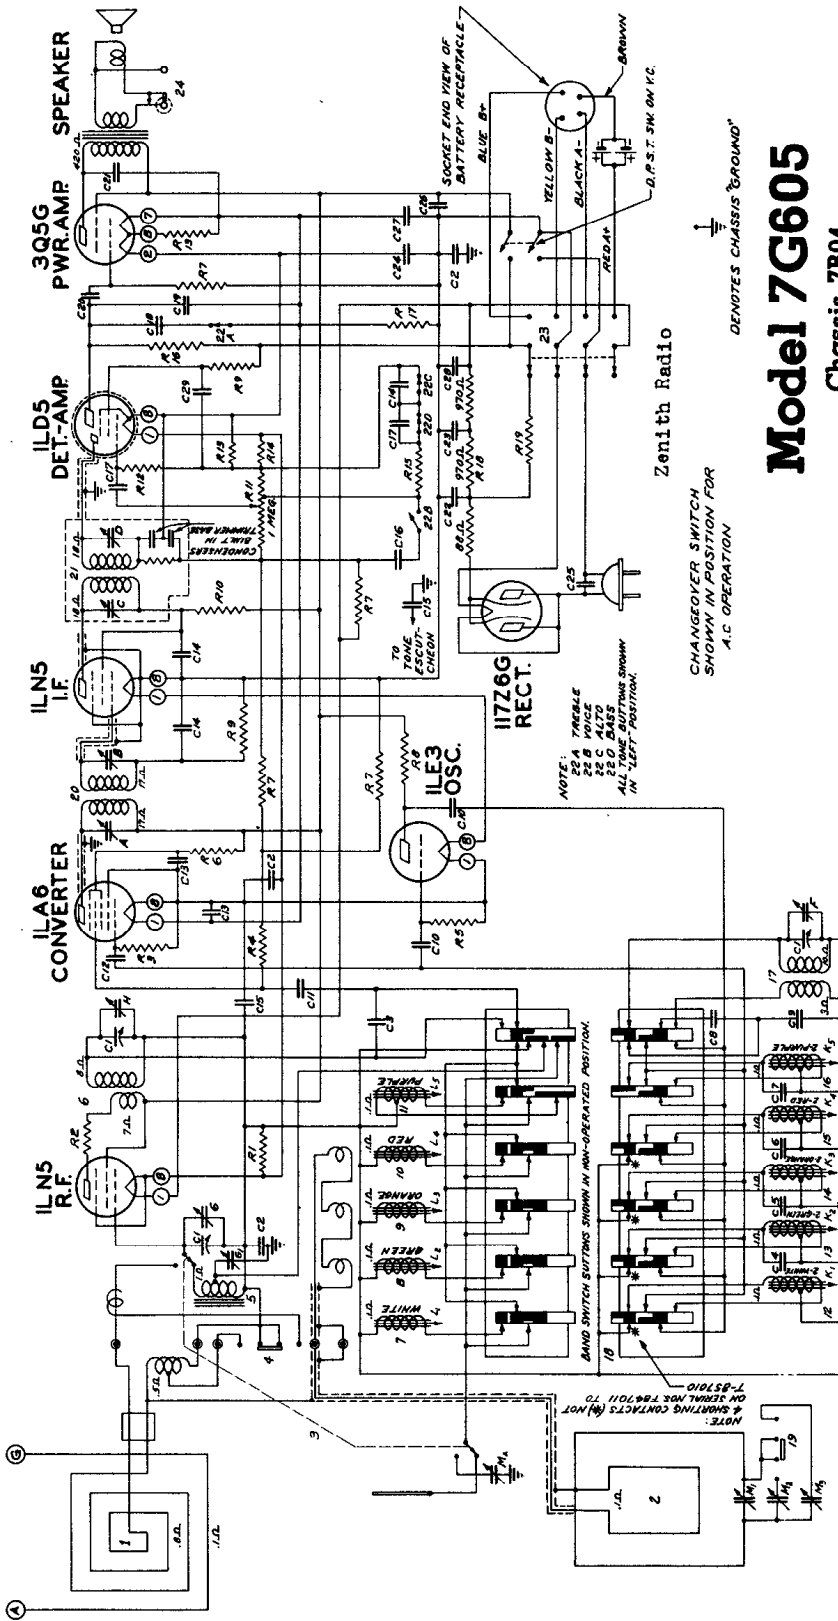

Zenith Radio  
Model 7G605  
Chassis 7B04


NOTE: 22 A TREBLE  
22 B VOICE  
22 C BASS  
22 D ALL  
IN "LEFT" POSITION.  
ALL TONE POSITION SWIMMY  
IN "LEFT" POSITION.

CHANGE-OVER SWITCH  
SHOWN IN POSITION FOR  
A.C. OPERATION

DENOTES CHASSIS "GROUND"

| DIAG. NO. | PART NO.   | DESCRIPTION          | DIAG. NO. | PART NO. | DESCRIPTION                 | DIAG. NO. | PART NO. | DESCRIPTION    | DIAG. NO. | PART NO.                                   | DESCRIPTION |
|-----------|------------|----------------------|-----------|----------|-----------------------------|-----------|----------|----------------|-----------|--|-------------|
| C1        | 22-1308    | THREE GANG VARIABLE  | 1         | S10680   | BROADCAST WAVE MAGNET       | 24        | 44-17    | HEADPHONE JACK | 1         | 1E1 I.F. TRANS. PRI.                       |             |
| C2        | 22-827     | 1 MFD.               | 2         | S10682   | SHORTWAVE WAVE MAGNET       | 1         |          |                | 2         | 1E1 I.F. TRANS. SEC.                       |             |
| C3        | 22-130     | 15 MMFD.             | 3         | 85-314   | ANTENNA POLE SWITCH         | 3         |          |                | 3         | 2E2 I.F. TRANS. PRI.                       |             |
| C4        | 22-1312    | 100 MMFD. COMP.      | 4         | 85-225   | WAVE MAGNET SWITCH          | 4         |          |                | 4         | 2E2 I.F. TRANS. SEC.                       |             |
| C5        | 22-1332    | 200 MMFD. COMP.      | 5         | S10670   | ANTENNA COIL ASSEM.         | 5         |          |                | 5         | BROADCAST OSC. (ON GANG)                   |             |
| C6        | 22-705     | 150 MMFD. COMP.      | 6         | S10298   | DETECTOR COIL ASSEM.        | 6         |          |                | 6         | BROADCAST ANT. (ON GANG)                   |             |
| C7        | 22-702     | 250 MMFD. COMP.      | 7         | S10284   | 6MC. ANTENNA COIL ASSEM.    | 7         |          |                | 7         | BROADCAST DET. (ON GANG)                   |             |
| C8        | 22-1311    | 75 MMFD. COMP.       | 8         | S10289   | 9 MC.                       | 8         |          |                | 8         | SHORTWAVE OSC. 6 MC.                       |             |
| C9        | 22-1310    | 50 MMFD. COMP.       | 9         | S10288   | 12 MC.                      | 9         |          |                | 9         | SHORTWAVE OSC. 9 MC.                       |             |
| C10       | 22-162     | .0001 MFD.           | 10        | S10296   | 15 MC.                      | 10        |          |                | 10        | SHORTWAVE OSC. 12 MC.                      |             |
| C11       | 22-327     | .02 MFD.             | 11        | S10297   | 18 MC.                      | 11        |          |                | 11        | SHORTWAVE OSC. 15 MC.                      |             |
| C12       | 22-289     | 50 MMFD.             | 12        | S10281   | 6MC. OSCILLATOR COIL ASSEM. | 12        |          |                | 12        | SHORTWAVE OSC. 18 MC.                      |             |
| C13       | 22-829     | .05 MFD.             | 13        | S10290   | 9 MC.                       | 13        |          |                | 13        | SHORTWAVE DET. 6 MC.                       |             |
| C14       | 22-826     | .01 MFD.             | 14        | S10285   | 12 MC.                      | 14        |          |                | 14        | SHORTWAVE DET. 9 MC.                       |             |
| C15       | 22-1207    | .07 MFD.             | 15        | S10293   | 15 MC.                      | 15        |          |                | 15        | SHORTWAVE DET. 12 MC.                      |             |
| C16       | 22-887     | .001 MFD.            | 16        | S10294   | 18 MC.                      | 16        |          |                | 16        | SHORTWAVE DET. 15 MC.                      |             |
| C17       | 22-492     | .002 MFD.            | 17        | S10295   | 9C.                         | 17        |          |                | 17        | SHORTWAVE DET. 18 MC.                      |             |
| C18       | 22-953     | .002 MFD.            | 18        | 85-312   | AUTOMATIC BAND SWITCH       | 18        |          |                | 18        | WAVELENGTH COMPENSATOR (SEE NOTE)          |             |
| C19       | 22-470     | .00015 MFD.          | 19        | 85-312   | SHORTWAVE LOCK SWITCH       | 19        |          |                | 19        | WAVELENGTH COMPENSATOR (SEE NOTE)          |             |
| C20       | 22-196     | .01 MFD.             | 20        | 95-863   | 2E2 I.F. TRANSFORMER        | 20        |          |                | 20        | SHORTWAVE ANT. 15M.                        |             |
| C21       | 22-148     | .004 MFD.            | 21        | 95-063   | 2E2 I.F. TRANSFORMER        | 21        |          |                | 21        | SHORTWAVE ANT. 25M.                        |             |
| C22       | 22-1307    | 40MMFD. ELECTROLYTIC | 22        | 85-313   | 100V. TONE CONTROL SWITCH   | 22        |          |                | 22        | SHORTWAVE ANT. 31M.                        |             |
| C23       | OR 22-1530 | 20MFD.               | 23        | 85-311   | POWER CHANGE-OVER SWITCH    | 23        |          |                | 23        | TRIMMERS 7B04 ARE MOUNTED ON STRIP 7B-2830 |             |
| C24       | 22-869     | .40 MFD.             |           |          |                             |           |          |                |           |  |             |
| C25       | 22-869     | .05 MFD.             |           |          |                             |           |          |                |           |  |             |

# MANUAL OF 1942 MOST POPULAR SERVICE DIAGRAMS

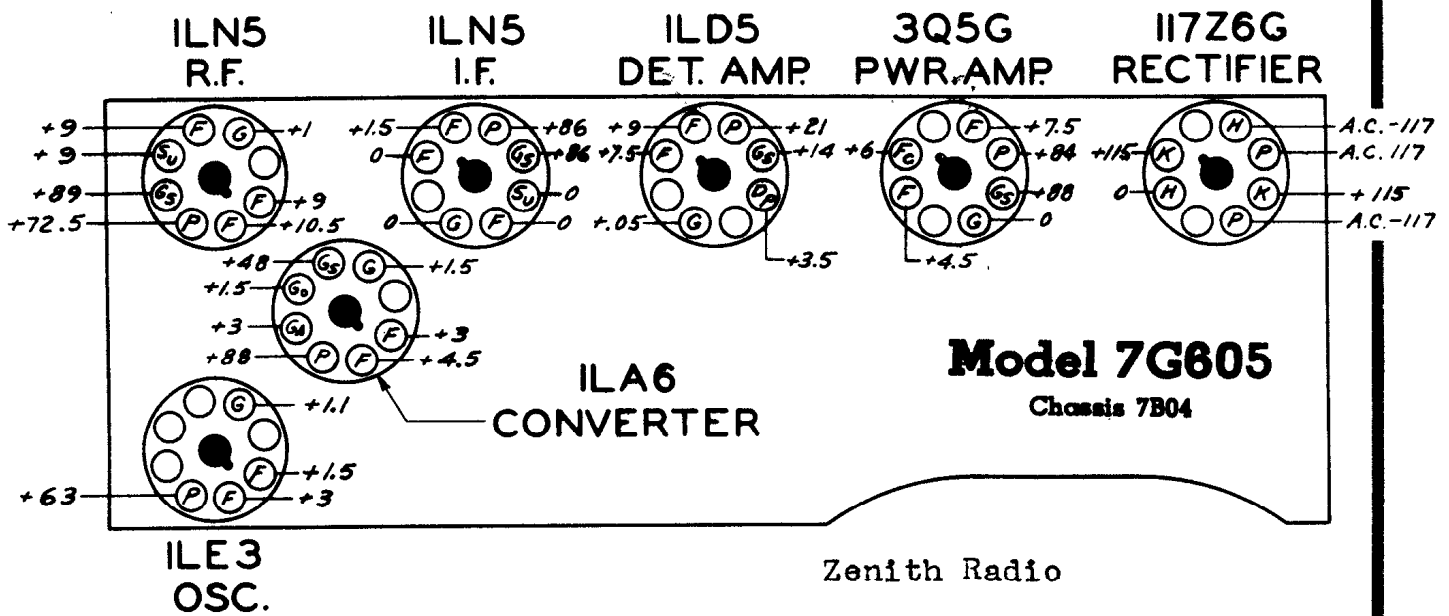

All voltages measured with a 20,000 ohm per volt meter from B minus to socket contact indicated.  
All voltages are positive D.C. unless marked otherwise.

Volume control full on.  
Line voltage 117 A.C. or D.C. 25 to 60 cycle or Battery Pack Z-985 and two flashlight cells.

Power consumption 85 watts.  
Power output .35 watts.


Tuning ranges:  
540 to 1620 Kc.  
6.0 to 6.5 Mc.  
9.4 to 9.8 Mc.  
11.7 to 11.9 Mc.  
15.1 to 15.3 Mc.  
17.6 to 18.0 Mc.

Stage Gains  
Bc. and I.F.

Ant. to R.F. grid 5X at 1000 Kc.  
R.F. grid to conv. grid 9X at 1000 Kc.

Conv. grid to I.F. grid 86X at 455 Kc.

Overall audio 900X at .85 watt.  
400 cycles.

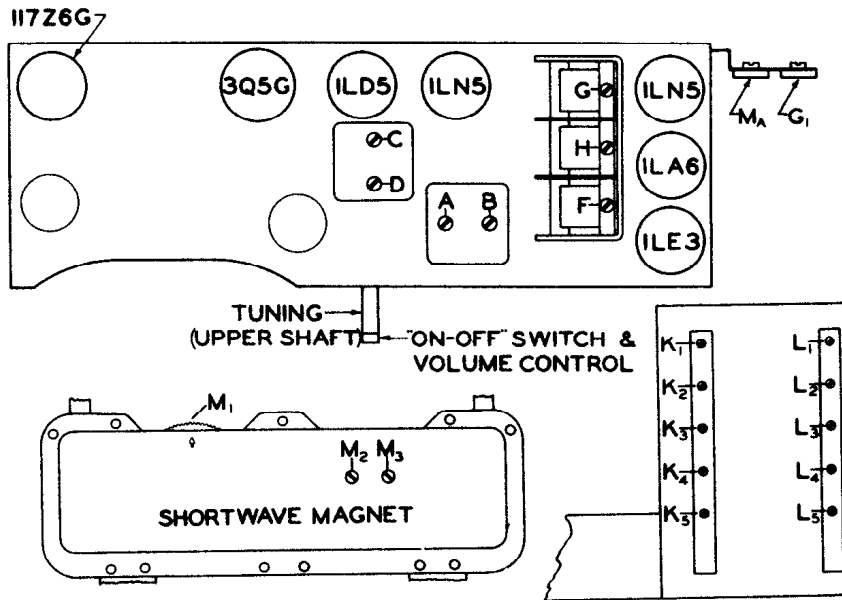

| Operation | Connect Oscillator to   | Dummy Antenna | Input Signal Frequency | Band                            | Set Dial At | Trimmers                        | Purpose  |
|-----------|---|---------------|------------------------|---------------------------------|-------------|---------------------------------|--|
| 1         | Conv. grid  | .1 mid.       | 455 Kc.                | BC                              | 600 Kc.     | A, B, C, D                      | Align I.F.   |
| 2         | One Turn Loop Coupled Loosely to Broadcast Wavemagnet               |               | 1600 Kc.               | BC                              | 1600 Kc.    | F                               | Set oscillator to scale                            |
| 3         |   |               | 1400 Kc.               | BC                              | 1400 Kc.    | H                               |  |
| 4         | 3 Feet of Wire Approximately 1 Foot from Extended Waverod           |               | 1400 Kc.               | BC                              | 1400 Kc.    | G                               | Alignment of B.C. Wavemagnet                       |
| 5         |   |               | 1400 Kc.               | BC                              | 1400 Kc.    | G,                              | B.C. waverod alignment                             |
| 6         |   |               | 6.3 Mc.                | 49 Met.                         | 6.2 Mc.     | K <sub>1</sub> , L <sub>1</sub> | Alignment of S.W. Oscillators and Antenna Trimmers |
| 7         | 9.6 Mc.   | 31 Met.       | 9.6 Mc.                | K <sub>2</sub> , L <sub>2</sub> |             |                                 |  |
| 8         | 11.8 Mc.  | 25 Met.       | 11.8 Mc.               | K <sub>3</sub> , L <sub>3</sub> |             |                                 |  |
| 9         | 15.2 Mc.  | 19 Met.       | 15.2 Mc.               | K <sub>4</sub> , L <sub>4</sub> |             |                                 |  |
| 10        | 17.8 Mc.  | 16 Met.       | 17.8 Mc.               | K <sub>5</sub> , L <sub>5</sub> |             |                                 |  |
| 11        | One Turn Loop Coupled Loosely to Shortwave Magnet Waverod Collapsed |               | 15.3 Mc.               | 19 Met.                         | 15.2 Mc.    | M <sub>1</sub> , M <sub>2</sub> |  |
| 12        |   |               | 11.8 Mc.               | 35 Met.                         | 11.8 Mc.    | M <sub>2</sub>                  |  |
| 13        |   |               | 9.6 Mc.                | 31 Met.                         | 9.6 Mc.     | M <sub>3</sub>                  |  |

